



ROHDE & SCHWARZ

Test and Measurement
Division

Operating Manual

Software Options:

GSM400/850/900/1800/1900-MS
for CMU-B21 B(Board) :hardware card

R&S CMU-K20/-K21/-K22/-K23/-K24 K(Kit) software kit
1115.5900.02/6007.02/6107.02/6207.02/6307.02

Including the following extensions:

GPRS/EGPRS Software Extension
for all GSM Software Packages

R&S CMU-K42/-K43
1115.4691.02/1115.6907.02

AMR GSM for CMU 200
R&S CMU-K45
1150.3100.02

Dear Customer,

throughout this manual, CMU-K20 to CMU-K24 and CMU-K42/-43/-K45 is generally used as an abbreviation for software options R&S CMU-K20 to R&S CMU-K24 and R&S CMU-K42/-K43/-K45. The Universal Radio Communication Tester R&S CMU 200 is abbreviated as CMU200.

Tabbed Divider Overview

Safety Instructions

Certificate of Quality

List of R&S Representatives

Contents of Manuals for Universal Radio Communication Tester CMU

Tabbed Divider

1	Chapter 1: Installation
2	Chapter 2: Getting Started
3	Chapter 3: Manual Operation
4	Chapter 4: Functions and their Application
5	Chapter 5: Remote Control – Basics
6	Chapter 6: Remote Control – Commands
7	Chapter 7: Remote Control – Program Examples
10	Index

List of Figures

Fig. 4-1	Measurement menu Analyzer/Generator (example: P/t Norm. GMSK)	4.3
Fig. 4-2	Measurement menu Power – P/t Norm. GMSK	4.9
Fig. 4-3	Trigger slot offset and slot count (for Trig. Slot Offset = 3)	4.18
Fig. 4-4	Display of results (Power – P/t Norm. GMSK)	4.20
Fig. 4-5	Display of results (Power – P/t Norm. 8PSK)	4.22
Fig. 4-6	Display of results (Power – P/t Multislot)	4.23
Fig. 4-7	Display of results (Power – P/Frame)	4.25
Fig. 4-8	Display of results (Power – P/Slot menu)	4.26
Fig. 4-9	Display of results (Power – P/Slot Table)	4.27
Fig. 4-10	Power Configuration – Control	4.28
Fig. 4-11	GSM power/time template for normal and access bursts with GMSK modulation	4.33
Fig. 4-12	GSM power/time template for normal bursts with 8PSK modulation	4.34
Fig. 4-13	GSM power/time template for multislot configurations	4.34
Fig. 4-14	Power Configuration – Limit Lines	4.35
Fig. 4-15	Measurement menu Modulation – Ext. Phase Err. GMSK	4.39
Fig. 4-16	Display of results (Modulation – Ext. Phase Err. GMSK)	4.41
Fig. 4-17	Modulation errors in the I/Q vector diagram	4.44
Fig. 4-18	Modulation errors in the I/Q constellation diagram	4.44
Fig. 4-19	Measurement menu Modulation – Overview 8PSK	4.45
Fig. 4-20	Display of results (Modulation – Overview)	4.47
Fig. 4-21	Display of results (Modulation – EVM / Phase Error / Magn. Error)	4.48
Fig. 4-22	Modulation Configuration – Control	4.51
Fig. 4-23	Modulation Configuration – Limits	4.52
Fig. 4-24	Spectrum due to modulation and switching transients in time domain representation	4.55
Fig. 4-25	Measurement menu Spectrum due to Modulation	4.56
Fig. 4-26	Display of results (spectrum due to modulation)	4.58
Fig. 4-27	Display of results (spectrum due to switching)	4.60
Fig. 4-28	Spectrum Configuration – Control	4.62
Fig. 4-29	Spectral mask as specified for GSM mobile stations	4.65
Fig. 4-30	Spectrum Configuration – Limit Lines	4.66
Fig. 4-31	Spectrum Configuration – Limits	4.68
Fig. 4-32	Spectrum Configuration – Meas X	4.69
Fig. 4-33	Connection Control – Analyzer (softkey)	4.72
Fig. 4-34	Bit structure of a GSM normal burst	4.74
Fig. 4-35	Connection Control – Analyzer (table)	4.76
Fig. 4-36	Connection Control – Generator (softkey)	4.79
Fig. 4-37	Connection Control – Generator (table)	4.83
Fig. 4-38	Connection Control – AF/RF connectors	4.84
Fig. 4-39	Connection Control – Synchronization	4.86
Fig. 4-40	Connection Control – Trigger	4.89
Fig. 4-41	Connection Control – I/Q-IF	4.91
Fig. 4-42	Signalling states of the CMU (circuit switched mode)	4.94
Fig. 4-42	Connection Control – Connection (Signal Off)	4.95
Fig. 4-43	Connection Control – Connection (Signal On)	4.97
Fig. 4-44	Overview of settings and measurements	4.99
Fig. 4-45	Measurement menu Power – P/t Normal GMSK	4.102
Fig. 4-46	Display of measurement results (P/t Normal GMSK menu)	4.109

Fig. 4-47	Display of results (Power – P/t Norm. 8PSK)	4.111
Fig. 4-48	Display of results (Power – P/t Multislot)	4.112
Fig. 4-49	Display of measurement results (P/PCL menu)	4.112
Fig. 4-50	Display of measurement results (P/t Access Burst menu)	4.113
Fig. 4-51	Power Configuration – Limits	4.117
Fig. 4-52	Measurement menu Modulation	4.118
Fig. 4-53	Display of results (modulation menu)	4.119
Fig. 4-54	Measurement menu Spectrum (application Modulation)	4.120
Fig. 4-55	Signal paths for BER measurements	4.124
Fig. 4-56	52-multiframe for PDCH	4.126
Fig. 4-57	Comparison between BLER and DBLER: CS4 (left diagram) and CS1	4.127
Fig. 4-58	Single-limit confidence BER	4.131
Fig. 4-59	Dual-limit confidence BER	4.132
Fig. 4-60	Receiver Quality (BER)	4.133
Fig. 4-61	Display of test settings and measurement results (BER)	4.136
Fig. 4-62	Display of test settings and measurement results (BLER)	4.139
Fig. 4-63	Receiver Quality – Control	4.145
Fig. 4-64	Receiver Quality Configuration – Limits	4.150
Fig. 4-65	Connection Control – Connection (Synchronized)	4.153
Fig. 4-66	Connection Control – Connection (Alerting)	4.154
Fig. 4-67	Connection Control – Connection (Call Established)	4.155
Fig. 4-68	Connection Control – Handover (destination selection)	4.159
Fig. 4-69	Connection Control – Handover (Call Pending)	4.160
Fig. 4-70	Connection Control – MS Signal (panel, single slot)	4.162
Fig. 4-71	Connection Control – MS Signal (panel, multislot)	4.164
Fig. 4-72	Connection Control – MS Signal (table)	4.167
Fig. 4-73	Connection Control – BS Signal (panel, single slot)	4.169
Fig. 4-74	Connection Control – BS Signal (panel, multislot)	4.172
Fig. 4-75	Connection Control – BS Signal (table)	4.174
Fig. 4-76	Connection Control – Network parameters (panel)	4.177
Fig. 4-77	Connection Control – Network parameters (table)	4.180
Fig. 4-78	Connection Control – AF/RF connectors	4.187
Fig. 4-79	Connection Control – Trigger	4.188
Fig. 4-80	Connection Control – Input level	4.191
Fig. 4-81	Meas. slot and slot count (for Meas. Slot = 3)	4.192
Fig. 4-82	Connection Control – Misc.	4.193
Fig. 4-83	GPRS signalling states	4.197
Fig. 4-84	Connection Control – Connection (Signal Off)	4.199
Fig. 4-85	Connection Control – Connection (Idle)	4.203
Fig. 4-86	Connection Control – Connection (Attached)	4.204
Fig. 4-87	Connection Control – Connection (TBF Established)	4.205
Fig. 4-88	Connection Control – MS Signal (table)	4.206
Fig. 4-89	Connection Control – BS Signal (table)	4.207
Fig. 4-90	Connection Control – Network	4.209
Fig. 4-91	Connection Control – Network parameters (AMR)	4.214
Fig. 6-1	Signalling states of the CMU and transitions including handover	6.191
Fig. 6-2	GPRS signalling states of the CMU and transitions	6.229

List of Tables

Table 3-1	Measurement groups in <i>Signalling</i> and <i>Non Signalling</i> mode	3.4
Table 4-1	GSM tolerances for spectrum due to modulation	4.64
Table 4-2	GSM tolerances for spectrum due to modulation (absolute)	4.65
Table 4-3	GSM tolerances for spectrum due to switching plus modulation effects:	4.67
Table 4-4	GSM channels in uplink direction	4.73
Table 4-5	GSM channels in downlink direction	4.80
Table 4-6	I/Q-IF scenarios and path settings	4.92
Table 4-7	GSM Power classes	4.116
Table 4-8	GSM Power control levels (PCL)	4.116
Table 4-9	BLER and DBLER measurement settings	4.125
Table 4-10	Frame structure for Main Service: Circuit Switched	4.127
Table 4-11	Frame structure for Main Service: Packet Data, Service Selection: Red. Sig.– EGPRS sym	4.128
Table 4-12	Frame structure for Main Service: Packet Data, Service Selection: Red. Sig.– EGPRS asym	4.128
Table 4-13	Frame structure for Main Service: Packet Data, any other Service Selection	4.128
Table 4-8	Definition of RX Level	4.141
Table 4-9	Definition of RX Quality	4.142
Table 4-10	Definition of Sign. Var	4.143
Table 4-11	Definition of Mean BEP	4.143
Table 4-12	Definition of CV BEP	4.144
Table 4-13:	MS multislot classes	4.156
Table 4-14:	MS multislot classes	4.201
Table 4-15	AMR Rate Set according to the conformance test specification	4.213
Table 5-1	Measurement objects in <i>Signalling</i> and <i>Non Signalling</i> mode	5.3
Table 5-2	Repetition mode in remote control	5.5
Table 5-3	Limits and limit check	5.6
Table 5-4	Meaning of the bits used in the <code>STATUS:OPERation:CMU:SUM1 2:CMU<nr></code> sub-registers assigned to <i>GSMxxx-MS Non Signalling</i>	5.7
Table 5-5	Meaning of the bits used in the <code>STATUS:OPERation:CMU:SUM1 2:CMU<nr></code> sub-registers assigned to <i>GSMxxx-MS Signalling</i>	5.7
Table 6-1	Remote control commands: <i>Non Signalling</i>	6.244
Table 6-2	Remote control commands: <i>Signalling</i> mode	6.263
Table 6-3	Remote control commands: <i>Non Signalling</i> mode	6.291
Table 6-4	Remote control commands: <i>Signalling</i> mode	6.304

Contents of Manuals for Universal Radio Communication Tester CMU

The user documentation for the R&S CMU 200/300 is divided in an operating manual for the basic instrument (including options CMU-B41, CMU-B17) and separate manuals for individual software and hardware options. The complete documentation is available on CD-ROM, stock no. PD 0757.7746.2x. The latest revisions of all manuals are also posted on the CMU Customer Web on GLORIS.

Operating Manual CMU-K20/-K21/-K22/-K23/-K24

(Software Options: GSM400/900/1800/1900/850-MS for CMU-B21 按键界面上的Setting up中可以看出Option安装的Software Kit有哪些!

The present operating manual describes the application of CMU for GSM mobile tests including the GPRS/EGPRS and AMR software extensions. It gives comprehensive information about the installation of the required software options and about manual and remote control of the instrument. Typical measurement tasks are explained in detail using the functions offered by the graphical user interface and a selection of program examples.

The manual is organized as follows:

- | | |
|-------------------|--|
| Chapter 1 | Describes the steps necessary for installing the software and putting the instrument into operation. |
| Chapter 2 | Gives an introduction to the application of the CMU for GSM mobile station tests and presents typical measurement examples. |
| Chapter 3 | Gives an overview of the user interface and describes the concepts of measurement control and instrument configuration. |
| Chapter 4 | Represents the reference chapter providing detailed information on all functions of the user interface and their application. |
| Chapter 5 | Describes the basics of remote control of the instrument for GSM base station tests. |
| Chapter 6 | Lists all remote control commands for GSM mobile station tests. At the end of the chapter the commands are grouped together according to their function (measurement groups or configurations) and sorted in alphabetical order. |
| Chapter 7 | Contains program examples. |
| Chapter 10 | Contains an index for the operating manual. |

Operating Manual CMU200/CMU300

In the operating manual for CMU basic unit you will find everything that is needed to make yourself familiar with your Universal Radio Communication Tester CMU. This includes information about the technical specifications of the CMU, the controls and connectors on the front and rear panel, necessary steps for putting the instrument into operation, the basic operating concept, manual and remote control. Typical measurement tasks are explained in detail using the functions of the user interface and program examples. In addition, the operating manual lists the most important warnings and error messages which may be output by the instrument.

General concepts of CMU control are described in the operating manual CMU and not repeated in the manuals for the individual software options.

Service Manual Instrument

The service manual instrument informs on how to check compliance with rated specifications, on instrument function, repair, troubleshooting and fault elimination. It contains all information required for the maintenance of CMU by exchanging modules.

Service Manual Modules

The service manual modules is not delivered with the instrument but may be obtained from your R&S service department using the order number 1100.4903.91.

Service manual modules contains information about the individual modules of CMU. This comprises the test and adjustment of the modules, fault detection within the modules and the interface description.

Further Operating Manuals for Network Tests

The operating manuals listed in the following table describe the test of mobile phones supporting different standards by means of the CMU and the appropriate software and hardware options. The network test operating manuals are organized like the present GSM-MS operating manual.

Manual	Order Number	For Options		
		Type	Description	Stock No.
Operating Manual CMU-K27/-K28	1115.6688.12	CMU-K27	TDMA800-MS for CMU-B21	1115.6607.02
		CMU-K28	TDMA1900-MS for CMU-B21	1115.6707.02
Operating Manual CMU-K29	1115.6888.12	CMU-K29	AMPS-MS for CMU-B21	1115.6807.02
Operating Manual CMU-K30/-K31/- K32/-K33/-K34	1115.4185.12	CMU-K30	GSM400-BS for CMU-B21	1115.4004.02
		CMU-K31	GSM900-BS for CMU-B21	1115.4104.02
		CMU-K32	GSM1800-BS for CMU-B21	1115.4204.02
		CMU-K33	GSM1900-BS for CMU-B21	1115.4304.02
		CMU-K34	GSM850-BS for CMU-B21	1115.4404.02
		CMU-K39 CMU-K41	MOC/MTC EDGE for CMU-K30/31/32/33	1115.4791.02 1115.4604.02
Operating Manual CMU-K53	1115.5081.12	CMU-K53	Bluetooth for CMU	1115.5000.02
Operating Manual CMU-K65/-K66	1115.4962.12	CMU-K65	WCDMA UE TX Test (3GPP/FDD)	1115.4962.12
		CMU-K66	WCDMA (3GPP/FDD, DL) Generator	1115.5100.02
Operating Manual CMU-K75/-K76	1150.3398.12	CMU-K75	WCDMA Node B TX Tests	1150.3200.02
		CMU-K76	WCDMA Generator (3GPP/FDD, Release 99, Uplink)	1150.3300.02
Operating Manual CMU-K81/-K82	1115.5581.12	CMU-K81	CDMA800-MS (IS95) for CMU-B81	1115.5500.02
		CMU-K82	CDMA1900-MS (IS95) for CMU-B81	1115.5600.02
Operating Manual CMU-K83/-K84/ -K85/-K87	1150.0382.12	CMU-K83	CDMA2000-MS (450 MHz band)	1150.3500.02
		CMU-K84	CDMA2000-MS (cellular band)	1150.3600.02
		CMU-K85	CDMA2000-MS (PCS band)	1150.3700.02
		CMU-K86	CDMA2000-MS (IMT-2000 band)	1150.3800.02
Operating Manual CMU-K88	1150.3900.02	CMU-K88	1xEV-DO for CMU-B88	1150.3998.12

The GSM base station tests described in operating manual CMU-K30/-K31/-K32/-K33/-K34 and the WCDMA Node B tests described in operating manual CMU-K75/-K76 require a CMU300 (Universal Radio Communication Tester for BTS). Bluetooth tests can be performed with model CMU200, var. 02 or 53. All other radio communication equipment is tested with model CMU200, var.02.

What's new in this Revision...

This operating manual describes version V3.50 of the GSM-MS firmware package. Compared to previous versions, this new firmware provides numerous extensions and improvements. The new features described in this manual are listed below.

New Features	Description	Refer to...
Non Signalling: Aux TX	The additional RF generator (option R&S CMU-B95) is available in Non Signalling mode.	Chapter 4, GSM Module Tests (Non Signalling) → Generator Settings
Spectrum	Improved <i>Spectrum</i> measurement in Non Signalling and Signalling mode: Time domain measurement at off-carrier frequencies, auto-detection of modulation scheme.	Chapter 4, GSM Module Tests (Non Signalling) → Spectrum Measurements
BER/BLER	Extended <i>Receiver Quality</i> measurement: New results (long term throughput, false USF detection), configurable downlink resources, receiver reports for GPRS and EGPRS.	Chapter 4, GSM Mobile Tests (Signalling) → Receiver Quality Measurements
Auto Slot Config.	Automatic activation of DL and UL slots in multislot packet data mode according to the multislot class of the MS and the needs of the measurement.	Chapter 4, GSM Mobile Tests (Signalling) → Connection Control
WCDMA to GSM handover	Inter-cell handover from WCDMA to GSM supported.	See operating manual for WCDMA UE test option (R&S CMU-K65/.../69), Chapter 4 → Handover
WCDMA to GSM handover	GSM prepare session with GSM-specific RF signal and network settings. New parameters: Alerting, Cell Synchronization. The WCDMA neighbor cell description is sent to the mobile in order to prepare the handover.	Chapter 4, GSM Mobile Tests (Signalling) → Handover → Network Parameters
EGPRS extensions	New <i>Service Selections</i> : Test mode A and B for EGPRS channels, symmetric and asymmetric EGPRS loopback mode	Chapter 4, GSM Mobile Tests (Signalling) → GPRS Signalling and EGPRS
PDP Context Activation	An ACTIVATE PDP CONTEXT REQUEST message from the mobile can be either accepted or rejected	Chapter 4, GSM Mobile Tests (Signalling) → GPRS Signalling and EGPRS
Power Multislot	Simultaneous measurement and display of GMSK and 8PSK modulated burst in <i>P/t Multislot</i> .	Chapter 2, Application example on <i>Multislot Measurements with mixed modulation schemes</i>

Frequently Used Abbreviations

AB	Access Burst
Abs.	Absolute
ACK	Acknowledged mode
AGC	Automatic Gain Control
AMR	Adaptive Multi-Rate (codec)
AOC	Advice of Charge
Atten.	Attenuation
Aux TX	Additional RF generator (signal)
BA	BCCH Allocation
Bandw.	Bandwidth
BCC	Base Transceiver Station Color Code
BCCH	Broadcast Control Channel
BCCH	Broadcast Control Channel
BER	Bit Error Rate
BLER	Block Error Ratio
BS	Base (Transceiver) Station
BS	Base (Transceiver) Station
BS-AG-BLKS-RES	Basic Services Access Grant Blocks Reserved
BS-PA-MFRMS	Basic Service Paging Blocks Available per Multiframes
BTS	Base Transceiver Station
Chan.	Channel
CRC	Cyclic Redundancy Check
DBLER	Data Block Error Rate
Disp.	Display (Mode)
Err.	Error
EVM	Error Vector Magnitude
Ext.	Extended (phase error measurement)
Ext.	External
FAC	Final Assembly Code
FACCH	Fast Associated Control Channel
FER	Frame Erasure Rate
Freq.	Frequency
GPRS	General Packet Radio Service
GSM	Global System for Mobile Communication, Groupe Spécial Mobile
IF	Intermediate Frequency
IMEI	International Mobile Equipment Identity
IMSI	International Mobile Subscriber Identity
Lev.	Level
Magn.	Magnitude
Max.	Maximum (e.g. Level)
Max./Min.	Maximum/Minimum
MCC	Mobile Country Code
MNC	Mobile Network Code
MOC	Mobile Originated Call
MS	Mobile Station
MSIN	Mobile Subscriber Identity Number
MTC	Mobile Terminated Call
NB	Normal Burst
Ovw.	Overview
PCL	Power Control Level
PDTCH	Packet switched Data Traffic Channel
PDU	Protocol Data Unit
PRBS	Pseudo Random Bit Sequence
PSR	Pseudo Random
PTP	Point to Point (GPRS services)
RACH	Random Access Channel
RBER	Residual Bit Error Rate
Rcv.	Receiver
Ref.	Reference (marker)
Rel.	Relative
RF	Radio Frequency
RMS	Root Mean Square (averaging)
SDCCH	Stand-alone Dedicated Channel
Seq.	Sequence
SMS	Short Message Service
SNR	Serial Number
SVN	Software Version Number
TAC	Type Approval Code
TBF	Temporary Block Flow

<i>TDMA</i>	<i>Time Division Multiple Access</i>
<i>TLLI</i>	<i>Temporary Link Level Identity</i>
<i>Trg.</i>	<i>Trigger</i>
<i>TSC</i>	<i>Training Sequence (Code)</i>
<i>USF</i>	<i>Update State Flag</i>
<i>Vect.</i>	<i>Vector</i>

Contents

1 Installation and First Steps.....	1.1
Software Installation or Update.....	1.1
Creating a new Software Configuration	1.4
Enabling Software Options.....	1.6

1 Installation and First Steps

This chapter describes how to install, update or enable software options *GSM400/850/900/1800/1900-MS* for the Universal Radio Communication Tester CMU200.

Before proceeding to perform any of the steps described in this manual, please make sure that the instrument is properly connected and put into operation according to the instructions given in chapter 1 of the CMU200 manual. The hardware and software options available are shown in the *Startup* menu. The status of the software options required for GSM mobile tests is indicated in the lines *CMU-K20 GSM400-MS*, *CMU-K21 GSM900-MS*, *CMU-K22 GSM1800-MS*, *CMU-K23 GSM1900-MS*, *CMU-K24 GSM850-MS*, and *CMU-K42 GPRS for GSM MS*:

- If a version number is indicated, the CMU is ready to perform GSM mobile tests. In this case you may skip this chapter, except if you wish to update the current software version or activate another version.
- If *disabled* is indicated, the software option must be enabled using a key code; see section [Creating a new Software Configuration](#) on page 1.4.
- If *not installed* is indicated, the software must be installed via the PCMCIA interface or the floppy disk drive, see below.

Software Installation or Update

The CMU is always delivered with the latest software version available. New CMU software versions are available for download on the R&S Lotus Notes Service board. To be loaded via the PCMCIA interface, the software must be copied to one or several flash disks/memory cards or PCMCIA hard disks. An appropriate memory card CMU-Z1, order no. 1100.7490.02, can be obtained from Rohde & Schwarz.

Note: *If your CMU is equipped with a floppy disk drive (option CMU-U61), a set of installation floppy disks must be generated instead of a flash disk. All other steps do not depend on the storage medium.*

The five software options *GSM400/850/900/1800/1900-MS* and the supplementary option *GPRS for GSM MS (CMU-K42)* are part of a single software package termed *GSM MS*, so they must be installed or updated together. They can be enabled and operated separately, see section [Enabling Software Options](#) on page 1.6. To install the GSM MS software proceed as follows:

- Switch off the CMU.
- Insert the flash disk into one of the two slots of the PCMCIA interface.
- Switch on the CMU.

The installation is started automatically while the CMU performs its start-up procedure. To this end the *VersionManager* is called up (for a detailed description of the *VersionManager* refer to chapter 1 of the CMU operating manual or to the on-line help accessible via *Info*):

```

VersionManager Ver 2.20
the active CMU base software is the version: 2020
-----
<-- Activate other software                Write log files to disk -->
<-- Delete software                       Delete non volatile ram -->
<-- Install software from PC-card slot 0   Scan disk -->
<-- List software                         List all versions to disk -->
<-- Firmware update after board change    Copy non volatile ram to disk -->
<-- Edit service tables                   Defragment disk -->
<-- Exit                                  Info -->

```

Softkey no. 5 on the left softkey bar, *Install software...*, is used to install new software from an external storage medium. The CMU automatically recognizes the storage medium and indicates the corresponding slot number: Slot 0 or 1 denotes the left or right slot of the PCMCIA interface. If a floppy disk is used the menu option reads *Install software version <version> from floppy*.

- Press left softkey no. 5 (*Install software...*) to start the installation.

If your storage medium contains several installation versions, the software version selection dialog is opened:


```

VersionManager Ver 2.20
Which version shall be install from PC-card slot 0 ?
-----
<-- Install  2X10.N03
             2X10.N03  BASE
             2X10.N03  GSM MS
-----
<-- Back to previous screen                Info -->

```

- Use the rotary knob or the cursor keys to scroll the list and select the GSM MS version you intend to install.
- Press *Install* to start the installation.


The installation is started. To be operable on your instrument, a network option must be combined with a compatible version of the CMU base software. Any base software version installed on the CMU hard disk can be combined with one or several network options to form an independent software configuration. If none of the configurations is compatible to the new GSM MS option, the *VersionManager* displays an error message and takes you back to the software selection dialog; see section [Creating a new Software Configuration](#) on page 1.4. Otherwise, the following upgrade selection dialog is opened:

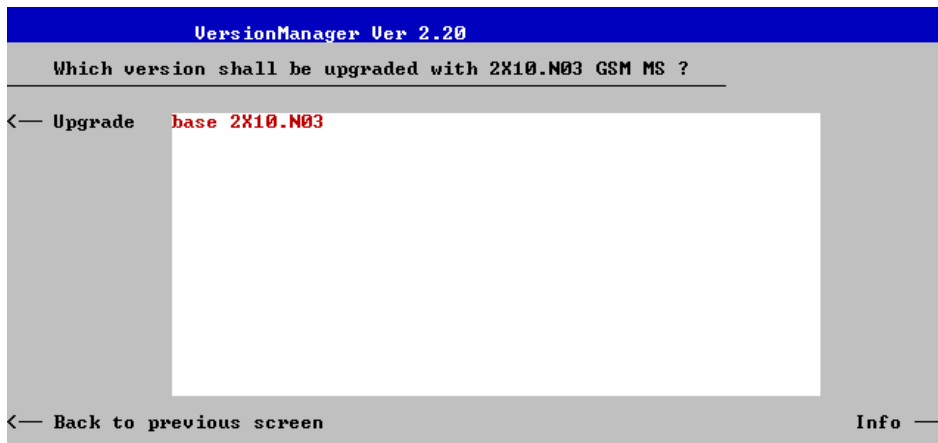

The upgrade selection dialog displays a list of base software versions that can be combined with the new GSM MS software.


- Select the appropriate base version and press *Upgrade*.

The new GSM MS option is added to the configuration or updates the previous GSM MS version of the configuration. To indicate that the storage medium must be changed the CMU issues the *Change volume* message:

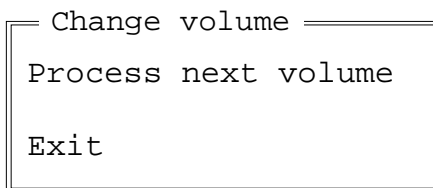

- Replace the current disk with the disk requested.
- Use the cursor up/down keys to select "Process next volume" (default setting).
- Press *ENTER* to confirm that the new disk has been inserted and to continue the installation.

After processing the last disk the CMU displays the following screen:

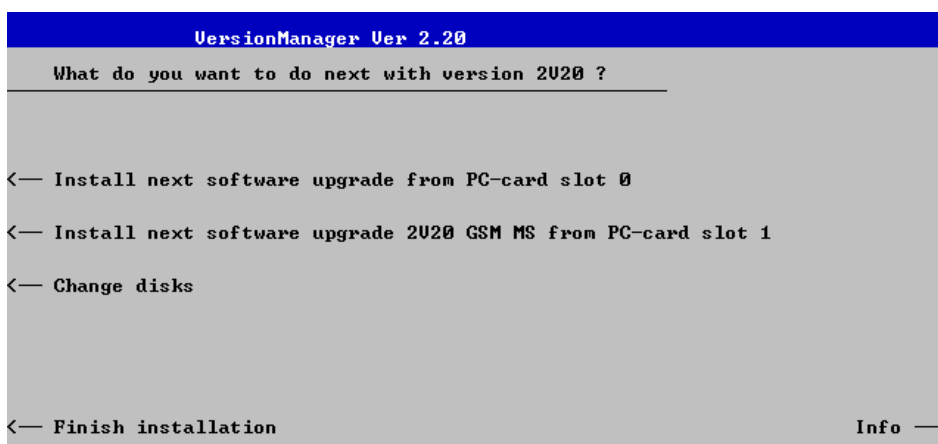


- If you wish to install or upgrade other software versions, press left softkey no 4 or 5 (*Install next software...*) or insert new storage medium into the PCMCIA slot or floppy disk drive and press *Change disks*.
- To finish the installation, remove all disks from the drive and press *Finish installation*.

The *VersionManager* is closed and the CMU is rebooted. The new firmware options are now operational and listed in the *Menu Select* menu together with their version number. Besides, the last software configuration installed is automatically taken as the active one in the next measurement session.


Creating a new Software Configuration

The CMU handles base software versions and network options on a separate basis. Different versions of the base software can be combined with different options to create new firmware configurations. For example, it is possible to update the base software without affecting the associated network options or vice versa. Moreover, the same base software version can be installed several times and combined with different network options (and vice versa), so it may enter into several firmware configurations.

If no compatible base software version can be found on the hard disk, then the CMU will refuse to install a new GSM MS software option selected in the software selection dialog (see previous section). Instead, it displays the following error message:

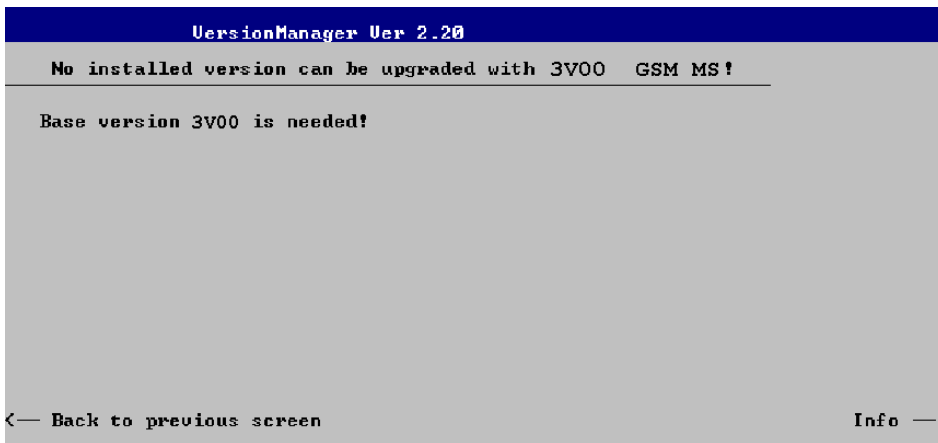


- Press *Back to installation* to return to the software version selection dialog.

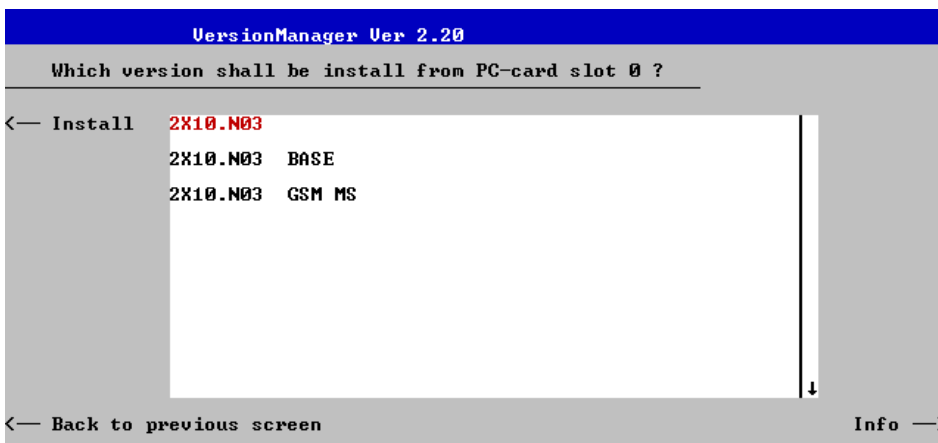

- Select a base software version that is compatible to your GSM MS software option and press *Install*.

Note: As a rule, firmware versions for the base system and for network options are compatible if they differ only in the last digit. GSM firmware versions 3.10 to 3.19 (if available) can be run together with base system version 3.10 to 3.19 (if available).


With a new base software version, it is possible to either update an existing configuration or create a new one. A dialog selecting between the two alternatives is opened:

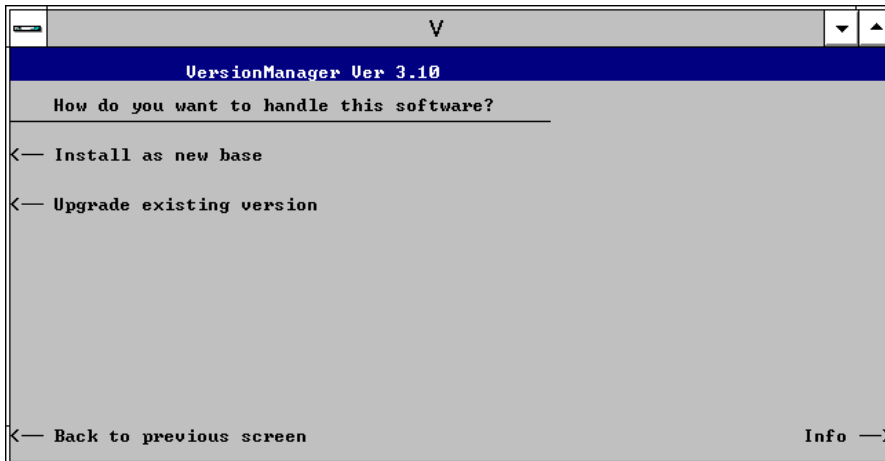

Note: This dialog is skipped if the new base software version is not compatible with any of the existing configurations. An incompatible new base software must be installed as a new base software.

- If you wish to add a new configuration to your hard disk, press *Install as new base*.
- To upgrade an existing configuration with the selected base software version in order to make it compatible to the new GSM MS software option, press *Upgrade existing version*. The existing version to be upgraded must be selected in an additional dialog.

The installation is performed as described in section [Software Installation or Update](#). After adding the new base software as a new configuration or updating the existing configuration, the CMU displays the following screen:

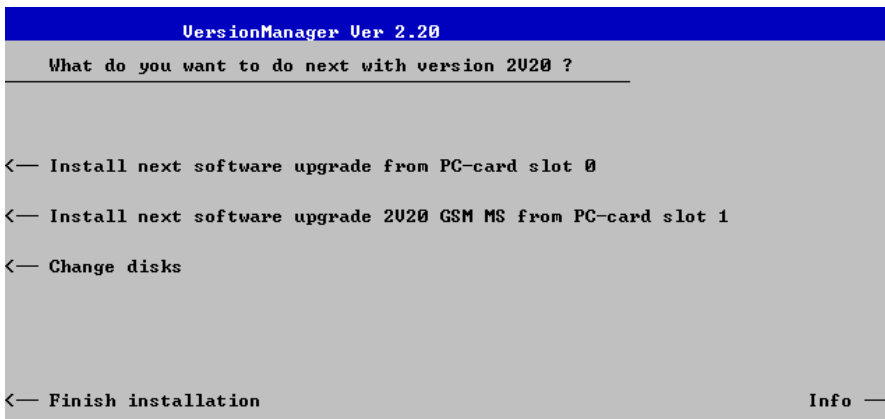

- Press left softkey no 4 or 5 (*Install next software...*) and proceed as described in section [Software Installation or Update](#) to install the new GSM MS version and assign it to the new configuration.

Enabling Software Options

A new CMU software option purchased is ready to operate after it is enabled by means of a key code supplied with the option. This key code is to be entered into the *Option Enable* popup window which in turn can be opened via from the *Setup – Options* menu. For details refer to Chapter 4 of the CMU200/300 operating manual.

Note: *The five software options GSM400/850/900/1800/1900-MS and the supplementary options GPRS and EGPRS for GSM MS (CMU-K42/-K43) are part of a single software package termed GSM MS, so they must be installed or updated together. However, they must be enabled and operated separately. Software installation and enabling of software options are completely independent from each other.*

Contents

2 Getting Started	2.1
Preparing a GSM Mobile Phone Test.....	2.2
Non Signalling Mode.....	2.6
Signalling Mode.....	2.14
Call Setup and Signalling Parameters.....	2.14
Receiver Reports and Power Measurements	2.20
Receiver Quality Measurements	2.22
Multislot Measurements with Mixed Modulation Schemes.....	2.24

2 Getting Started

The following chapter presents a sample GSM mobile test with the universal radio communication tester CMU. It is intended to provide a quick overview of the function groups *GSM400/850/900/1800/1900-MS Non Signalling* and *GSM400/850/900/1800/1900-MS Signalling* and their functionality and to lead through some basic tests that are commonly performed on GSM mobile phones.

Before starting any measurement with the CMU, please note the instructions given in chapter 1 of the operating manual for the CMU basic unit for putting the instrument into operation. In chapters 2 to 4 of that manual you will also find information on customizing the instrument and the display according to your personal preferences. For installation instructions for the *GSM400/850/900/1800/1900* software (CMU-K21/-K22/-K23) refer to chapter 1 of the present manual.

The tests reported below include


- Connection of the phone and selection of the GSM function group,
- Power and modulation measurements in *Non Signalling* mode,
- Selection and measurement of signalling parameters,
- BER tests.

The steps to perform are explained on the left side of each double-page together with the results obtained on the CMU screen. On the right side, additional information is given. We also point out alternative settings and related measurements which could not be reported in detail.

The principles of manual operation are discussed in chapter 3. For a systematic explanation of all menus, functions and parameters including GSM background information refer to the reference part in chapter 4.

Preparing a GSM Mobile Phone Test

This chapter describes how to use the CMU for GSM mobile phone tests. As a prerequisite for starting the session, the instrument must be correctly set up and connected to the AC power supply as described in chapter 1 of the operating manual for the CMU basic unit. Furthermore, the GSM software must be properly installed following the instructions given in chapter 1 of the present manual.

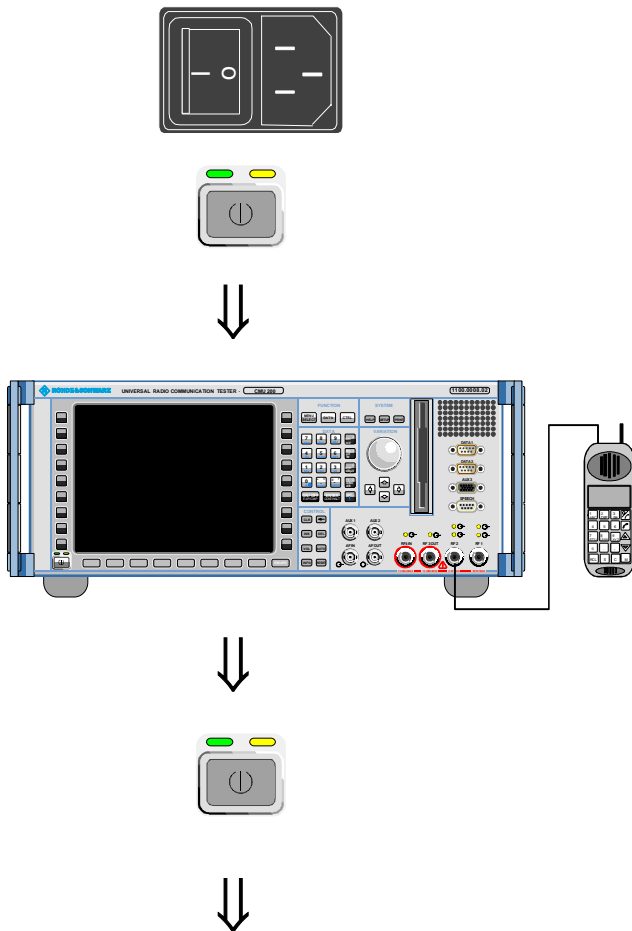

Step 1

- Switch on the CMU using the mains switch at the rear. ①
- Check the operating mode of the instrument at the *ON/STANDBY* key on the front panel. ②

Step 2

- Connect the bi-directional RF connector RF 2 of the CMU to the antenna connector of the mobile phone. ③
- Supply the mobile phone with the correct operating voltage (battery or power supply). ④

Step 3

- Switch on the CMU by means of the *ON/STANDBY* key on the front panel.

Universal Radio Communication Tester CMU

Process	Info
BaseDiscoverOptionsEnd	Model: CMU 200-1100.0008.02
LoadFGroupDllsBegin	Serial #: 838.115/026
TestLEDsEnd	SW: 3x10.c15 18.9.02-1

Options

Hardware Options:		
CMU-B11/B12 OCXO		B11
CMU-B17 I/Q-IF Interface		not installed
CMU-B21 Universal Signalling Unit		available
CMU-B21v14 Universal Signalling Unit		not installed
CMU-B21/2 Universal Signalling Unit		not installed
CMU-B21/2v14 Universal Signalling Unit		not installed
CMU-B41 Audio Measurement Unit		available
CMU-B52 Speech Coder f. CMU-B21		available
CMU-B52v14 Speech Coder f. CMU-B21v14		not installed
CMU-B52/2 Speech Coder f. CMU-B21/2		not installed
CMU-B52/2v14 Speech Coder f. CMU-B21/2v14		not installed

Load factory default settings
 Wait after startup

Default Wait

The startup menu is displayed while the CMU performs a power-up test. ⑤

After a few seconds the CMU displays the last menu used in the previous session.

- Press the *RESET* key to open the *Reset* popup menu.
- Select *Reset* and press the *ENTER* key.
- In the popup window opened, select *Yes* to confirm the instrument reset.

The CMU indicates that it performs a general reset of all device settings and is then ready to carry out the following steps. The *Reset* popup menu is closed automatically.

Additional Information...

... on Step 1**① Mains switch on the rear panel**

When the mains switch at the rear is set to the OFF position, the complete instrument is disconnected from the power supply. When it is set to the ON position, the instrument is in standby mode or in operation, depending on the position of the *ON/STANDBY* key on the front panel.

② ON/STANDBY key on the front panel

The *ON/STANDBY* key at the front of the instrument determines whether the instrument is in standby mode or in operation.

Standby mode:

Only the reference frequency oscillator is supplied with operating voltage, and the orange LED (STANDBY) is illuminated.

Operation:

The green LED (ON) is illuminated and all modules of the instrument are supplied with operating voltage.

... on Step 2**③ RF connection of the mobile phone**

A high-quality cable should be used for this connection, ideally with an attenuation of less than 0.5 dB. For portable phones, the car installation set supplied by telephone manufacturers can be used.

④ Power supply for the mobile phone


In case the mobile phone is operated from an external power supply, make sure that it is capable of supplying the maximum peak current required. As GSM mobile phones generate pulse-like RF signals, they often feature a pulse-shaped current consumption. Problems may arise if power supplies are used which cannot provide such currents with a constant voltage.

... on Step 3**⑤ Startup menu**

The startup menu displays the following information:


- The startup procedure (*Process*)
- Instrument model, serial number and version of the CMU base software (*Info*)
- Installed hardware and software options and equipment (*Options*). Available software options are listed with their version numbers.
- Progress of the startup procedure (*Startup* bar graph).


Alternative Settings and Measurements

 chapter 1 of CMU manual

The CMU provides two bi-directional RF connectors RF1 and RF2 differing by their permissible input and output levels. RF1 is the recommended standard connector for GSM mobile phones, RF2 for handheld phones (see data sheet).


The unidirectional connectors RF4 IN and RF3 OUT are intended for connection of modules requiring high input levels or modules with low RF output levels. RF4 IN and RF3 OUT can also be used to connect GSM mobiles off the air via antennas.

Input and output connectors can be selected in the *RF*  tab of the *Connect. Control* menu.

 chapter 4 of CMU manual

That chapter also contains information on customizing the CMU.

MENU
SELECT

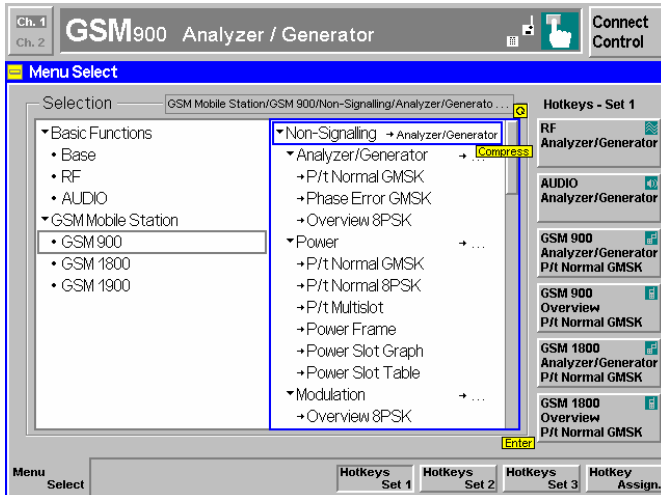

Step 4

- Press the *Menu Select* key to open the *Menu Select* menu. ①

The *Menu Select* menu indicates the function groups available. If a function group is selected the corresponding modes and measurement menus are indicated.

- Select the GSM900-MS function group.
- Select the *Non-Signalling* mode
- Select the *Analyzer/Generator* menu.
- Press the *Enter* key to activate the measurement selected and open the *Analyzer/Generator* menu.

Additional Information...**... on Step 4****① Menu Select menu**

The *Menu Select* menu shows all function groups installed on your CMU. All function groups GSMxxx-MS are subdivided in the two measurement modes *Non Signalling* and *Signalling*, each containing a number of measurement menus.

Alternative Settings and Measurements

☞ chapter 3


☞ chapter 4

Frequently used measurement menus can be stored together with their function group and mode and assigned to one of the eight hotkeys. When needed for the next time, they can be called up by a single keystroke. See also chapter 4 of the CMU manual.

Non Signalling Mode

In the *Non Signalling* mode, a GSM-specific RF signal can be generated and a RF signal with GSM characteristics can be analyzed. Compared to the *Signalling* mode test times may be reduced considerably. Moreover, the measurements are not restricted to the specified channel and MS output power ranges of the network. The most common application is module test and test of mobiles in a special *test mode*.

In our example we use the GSM signal generated by the CMU itself to demonstrate the main features of the *Non Signalling* mode. This is analogous to the *RF* measurement example in the CMU operating manual.

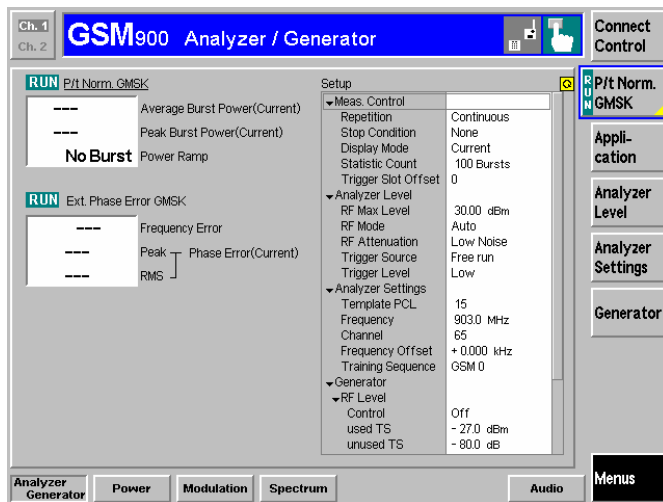


Step 1

The *Analyzer/Generator* menu contains softkeys and hotkeys to configure the RF generator signal of the CMU and to define the RF analyzer settings. ②

Moreover, the current measurement results for power, frequency and phase errors of the received signal are displayed. ③

At present, all parameters are set to default values. They can be directly changed by means of the softkeys and hotkeys. User-defined parameters will be saved to the non-volatile RAM for later sessions when the CMU is switched off.

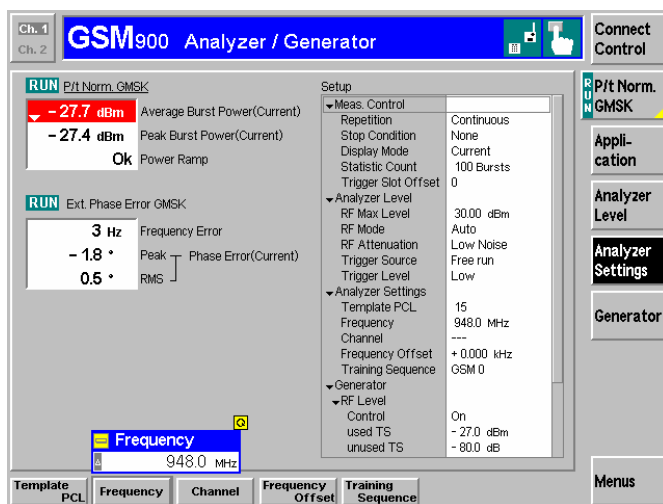


➤ Proceed as outlined in section *RF Non Signalling Measurements*, chapter 2 of CMU200 operating manual to connect RF1 to RF2 via a coax cable. Open the *Connection Control* menu and perform the appropriate RF input and output settings.

➤ Adapt the *Analyzer Settings – Frequency* setting to the expected input signal frequency (default generator frequency).

➤ Press *Generator – RF Level* and the ON/OFF key to switch on the generator.

The analyzer adapts itself to the RF input level (autoranging). ④

The measurement results are indicated in the *P/t Norm. GMSK* and *Ext. Phase Error GMSK* output fields.

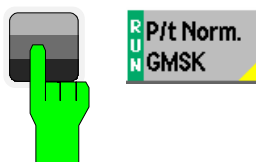

➤ Select (press) the *Power/t Norm. GMSK* softkey.

Additional Information...

... on Step 1

② Analyzer/Generator menu

The *Analyzer/Generator* menu contains three with associated hotkeys used to

- Define the RF input signal path and the trigger settings (*Analyzer Level*)
- Set the CMU RF analyzer (*Analyzer Settings*) and determine the RF input signal that can be measured
- Control the RF generator (*Generator*) and define the parameters of the RF output signal generated.

The assignment between carrier frequency and channel number is according to GSM specifications. As the CMU simulates a base station, the generator signal corresponds to the downlink (signal direction from the base station towards the mobile station), the signal analyzed corresponds to the uplink (signal direction from the mobile station towards the base station). The channel/frequency assignment changes accordingly.

The RF frequency can be set in multiples of 200 kHz. With an additional *Frequency Offset*, an RF signal with an arbitrary frequency that is in the range supported by the tester can be generated and analyzed. In general, the RF generator level is set to be different for the used timeslot and unused timeslots. The level of the unused timeslots is defined relative to the level in the used timeslot.

③ Measurement and Generator State

The state of the *Power/t Norm. GMSK* measurement is indicated in the corresponding softkey (measurement control softkey) and above the output fields for the results. The state of the RF generator is indicated in the *Generator – RF Level* softkey.

For ongoing measurements, the results in the output fields are constantly updated. All measured quantities refer to the current burst. The default tolerance template for the power ramp is defined according to GSM specifications. For various reasons, an output field may fail to show a valid measurement result (indication "---"):

- The analyzer settings do not match the properties of the input signal.
- The input signal is missing.
- The measurement is switched off (*OFF* is indicated in the softkey controlling the measurement).

④ Max. Level

The autoranging mechanism adjusts the RF input path to the applied signal. Alternatively, the expected signal level (for GMSK-modulated GSM signals, the average RF input level plus an appropriate margin of a few dB) can be set via *Analyzer Level – RF Max. Level*.

Alternative Settings and Measurements

☞ chapter 4, p. 4.2 ff.

The *Analyzer/Generator* settings are also provided in the *Analyzer* and *Generator* tabs of the *Connection Control* menu. See also notes on [Softkeys and hotkeys](#) on p. 2.11.

Selecting a definite training sequence (TSC) or bit modulation or transmission mode in the *Generator Modulation* panel implies that signals with these characteristics are generated.

Selecting a definite TSC in the *Analyzer Settings* panel implies that only signals with this TSC are analyzed.





The current options for the measurement status are *ON* (default) and *OFF*. A third state, *HLT*, occurs after a single-shot measurement is terminated (see below).

Once selected, the *Power* or *Modulation* measurement can be switched off and on again by means of the toggle key *ON/OFF*.

Generators may also be switched on (state *ON*) and off (state *OFF*) by means of the *ON/OFF* key.

☞ Chapter 4, p. 4.72 ff.

The permissible range *Max. Level* depends on the RF connector and the external attenuation used.

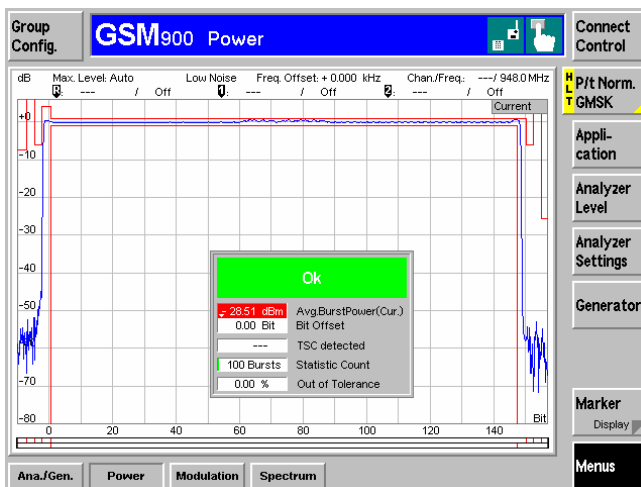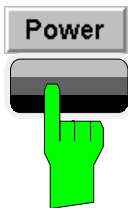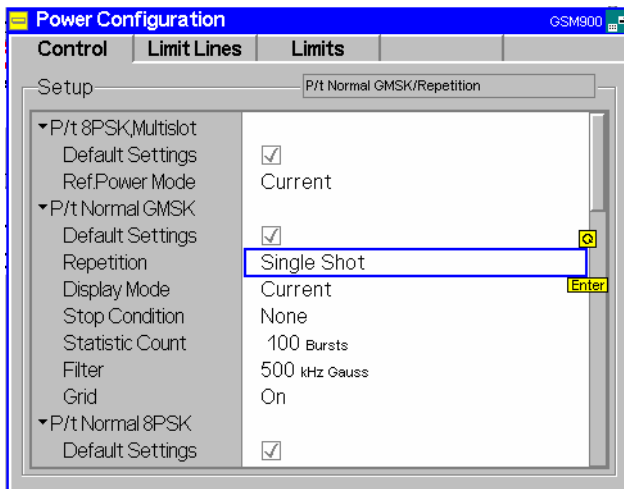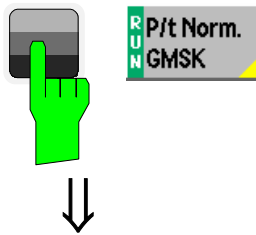

Step 2

- Press the selected *Power/t Norm. GMSK* softkey again to call up the *Power Configuration* menu.

In the *Control* tab, the *Power Configuration* menu defines the scope of the *Power* measurement. The settings offered in this menu are discussed in section *General Settings* in chapter 3. We pick just one example, limiting the number of bursts measured. ①

- Press the *ON/OFF* key or the rotary knob to expand the table.
- Select *Single Shot* in the *Repetition* line. ②
- Press the *ESCAPE* key or the *Power* softkey again to close the *Power Configuration* menu and return to the main menu.

The *Power* measurement is stopped after one statistic count. The status indication next to the *Power* softkey is set to *HLT*. ③

Step 3

- Press the *Power* hotkey to switch over to the graphical menu *Power*.

The *Power* menu shows the power of the current burst as a function of time. ④

Together with the burst power, a tolerance template as specified in the GSM standard (here: for GMSK-modulated normal bursts) is displayed. Settings (at present, the default settings) and scalar results are displayed in two parameter lines above the diagram and in a message box positioned in the center of the diagram.

Various tools allowing to take a closer look at the measurement results are provided in the graphical measurement menu.

Additional Information...

... on Step 2

① Power Configuration menu

The *Power Configuration* menu contains three tabs defining

- Measurement control and statistical settings (*Control*),
- The tolerance template for the burst (*Limit Lines*),
- PCL-dependent limits for the average burst power (*Limits*)

② Repetition mode and Stop Condition

If no stop condition is imposed (*Stop Condition = None*), the *Repetition* mode determines whether the measurement is

- Continued until explicitly stopped by the operator (*Continuous*),
- Stopped after one statistic count (*Single Shot*).

By default, a statistic count comprises 100 bursts. With *Stop Condition = On Limit Failure*, the measurement is stopped after the first burst which is out of tolerance.

③ Measurement in the HLT state

The average and peak power of the last burst measured is indicated in the output fields *Average* and *Peak*.

In contrast, the modulation measurement is still running. The results for the frequency and phase errors are periodically updated.

... on Step 3

④ Power menu

The diagram in the *Power* menu, application *Power/t Norm. GMSK* shows a normal burst with a length of 148 bits (plus a guard period of 8.25 bits). The time scale of the diagram ranges from -10 bits to $156\frac{3}{4}$ bits covering the useful part, the rising and falling edges of the burst. The ordinate ranges from -80 dB to $+10$ dB, the 0-dB reference level is equal to the carrier power.

Note that settings made previously (*Power Configuration* menu) are preserved in the whole measurement group. Accordingly, the status of the measurement is still *HLT*. The diagram is fixed showing the last burst measured.

Alternative Settings and Measurements

☞ chapter 3.

Settings made in the *Power Configuration* menu apply to power measurements only.

Settings made in the *Connect. Control* menus apply to the entire function group and mode *GSM900-MS Non Signalling*.

☞ chapter 3.

The *Statistic Count* is defined in the *Control* tab of the *Power Configuration* menu.

The stop condition *On Limit Failure* should be selected if the limit check represents the main purpose of the measurement.





The limits can be modified in the *Limit Lines* tab of the *Power Configuration* menu.

☞ CMU manual

See the sections on measurement control in chapter 3 and 5.

☞ chapter 4, p. 4.9 ff.

The GSM power template is defined relative to the carrier power. For low signal powers, a looser absolute limit is to be applied at the beginning and the end of the power ramp (areas 1, 2, 7, and 8). This yields the distorted template that we observe in the present example.

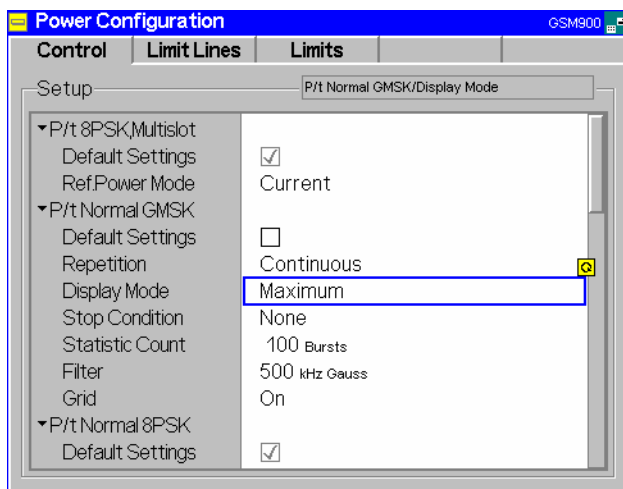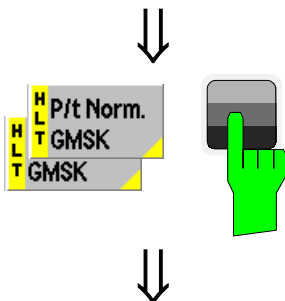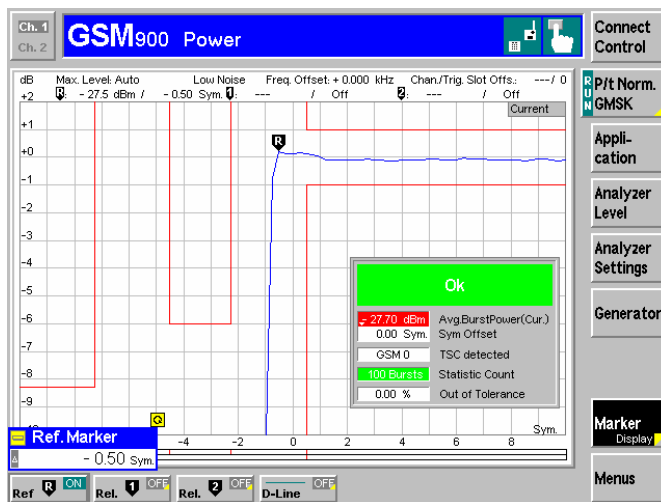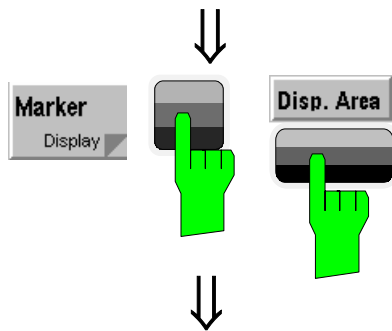

Step 4

- Press the *Marker/Display* softkey twice to change the hotkeys displayed below the diagram. ①
- Press the *Display Area* hotkey to open a window offering a list of different zoom areas.

If you select *Left Upper Corner* the CMU zooms in on the left upper corner of the burst.

- Press the *Display/Marker* softkey twice and the *Ref R* hotkey. Enter an abscissa value (in bits) to position a reference marker onto the trace. ②

The coordinates (time and burst power) of the reference marker are displayed in the second parameter line.

For the next step we'll take advantage of the fact that the configuration menu is accessible from the graphical menu as well.

Step 5

- Press the *Power/t Norm. GMSK* softkey twice to reopen the *Power Configuration* menu.

- Press *ENTER* or the rotary knob to expand the table.
- Select *Continuous* from the *Repetition* field to restart the measurement and confirm with *ENTER* or by pressing the rotary knob.
- From the *Display Mode* field, select *Maximum*. ③
- Press *ESCAPE* or the *P/t Norm. GMSK* softkey again to close the configuration menu.

Instead of the current burst power, the diagram shows the maximum burst power measured at each time. As no stop condition is set, the measurement will be running until it is explicitly terminated.

Additional Information...

... on Step 4




① **Softkeys and hotkeys**

To enlarge the diagram area of the graphical measurement menus the left softkey column is suppressed. The functionality of each softkey on the right side is extended by hotkeys assigned to the softkeys. These hotkeys are displayed across the hotkey bar below the diagram when the softkey is selected.

Some of the softkey/hotkey combinations offer settings that can be also accessed via configuration menus. For example, the *Analyzer Level* settings are equivalent to the settings in the *Input Level* and *Trigger* section in the *Analyzer* tab of the *Connection Control* menu. Identical settings overwrite each other; the last value entered is valid for the whole function group and test mode.

② **Markers**

Markers are a graphical tool used to locate points on a trace and read out their coordinates. A reference marker and two delta markers may be defined in the *Power* menu.

The reference marker  measures the absolute level of the trace, the delta markers  and  measure the absolute level or (if set to relative) the distance between their position and the reference marker.

... on Step 5


③ **Display mode**

If the measurement extends over several bursts the CMU calculates four different traces one of which can be selected in the *Display Mode* field. The purpose of the four traces is to give an overview of the range and arithmetic mean of the levels detected at any point on the time axis. The following traces can be displayed:

<i>Current</i>	Current burst level
<i>Maximum</i>	Maximum of all burst levels measured
<i>Minimum</i>	Minimum of all burst levels measured
<i>Average</i>	Weighted average of all burst levels measured, see averaging prescription in chapter 3.

The *Statistic Count* input field defines how many evaluation periods form a statistics cycle. For *GSMxxx-MS Non Signalling* measurements an evaluation period is equal to the propagation time of a normal burst (this definition holds even if a continuous carrier signal is transmitted). In our example the statistics cycle comprises 100 bursts (default value).

Alternative Settings and Measurements

 chapter 4, p. 4.9 ff.

The *Analyzer Level* softkey configures the input level and external attenuation as well as the trigger settings.

The *Analyzer Settings* softkey determines which kind of RF signal can be analyzed.

The *Generator Settings* softkey determines the RF signal generated.

The *Marker/Display* softkey sets markers and D-lines and determines the display area.

 chapter 4, p. 4.9 ff.

In addition to markers, a D-line can be used to measure a particular level in the diagram.

 chapter 3.


To refine the statistical evaluation, a suitable combination of the statistic count, repetition mode, stop condition and display mode can be selected.

 chapter 4, p. 4.28 ff.

In addition to the *Power/t Norm. GMSK* measurement, several test applications assessing the behavior of the average burst power over several timeslots (*P/Slot Graph*, *P/Slot Table*) or frames (*P/Frame*) can be selected (softkey *Application*).





ESCAPE

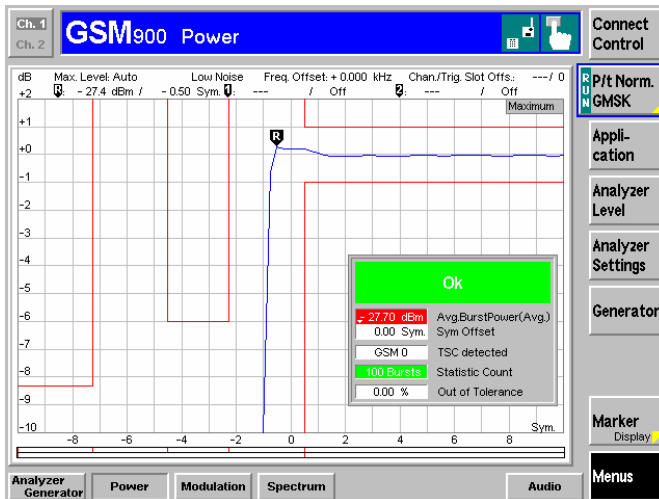

Step 6

- Press the ESCAPE key to close the *Power Configuration* menu and return to the main menu.

The trace is now continuously measured and updated in the display. With the display mode *Maximum*, which is indicated in the upper right corner of the diagram, trace values will be replaced only if a current measured value at a particular test point exceeds all values measured before at the same test point.

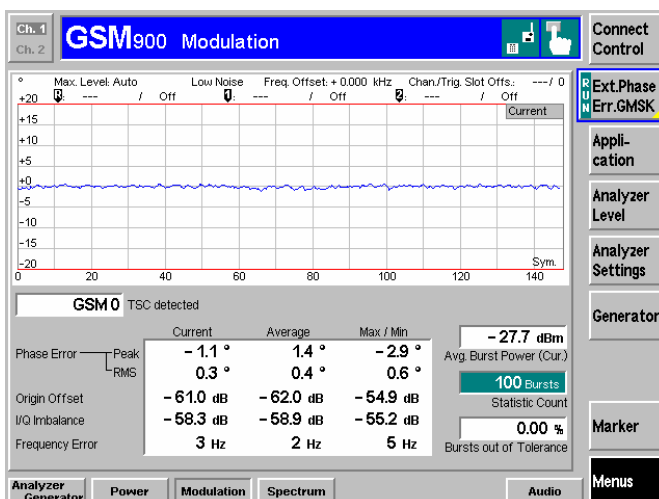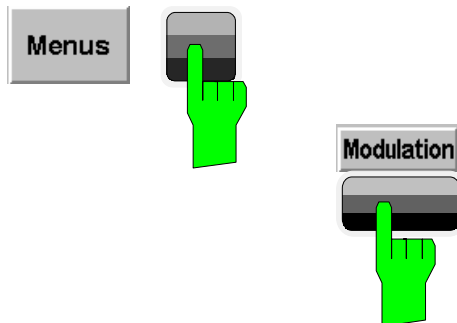

Step 7

- Press the *Menu* softkey to display the measurement groups available in the hotkey bar.
- Press the *Modulation* hotkey to open the *Modulation* menu.

The *Modulation* menu displays the results of the phase and frequency error measurement. ①

The trace represents the phase error of the current burst as a function of time. ②

Below, a table displays the extreme value of the phase error and the RMS phase error, the origin offset, the I/Q imbalance, and the frequency error. ③

The detected training sequence (TSC), average power of the current burst and the statistic count are shown in addition.

Additional Information...

... on Step 7

① Phase and frequency errors

GSM equipment can use different modulation schemes; the basic scheme is GMSK modulation, which is a constant-envelope, binary, differential phase-shift keying scheme. It is important that the modulation scheme is adhered to as strictly as possible. GSM specifies a peak phase error of max. 20°, a RMS-weighted phase error of max. 5° and a frequency error of max. 0.05 ppm of the transmit frequency.

The limits may be modified in the *Limits* tab of the *Modulation Configuration* Menu which is opened by pressing the selected *Ext. Phase Err. GMSK* softkey once again. The *Modulation Configuration* menu is analogous to the *Power Configuration* menu explained on the previous pages. According to the requirements of the measurements the two configuration menus differ in two points:

- Phase errors are relevant within the useful part of the burst. Therefore, a fixed upper and lower limit for the phase error is specified. It is not necessary to discriminate between different areas of the burst (see item ② below).
- The absolute value of the phase error is a measure of the quality of modulation, whereas the sign is of secondary interest. This is why the display modes *Minimum* and *Maximum* can not be selected separately, the CMU displays the extreme values instead (display mode *Minimum/Maximum*).

② Measurement curve

The diagram in the *Modulation* menu shows the useful part of a normal burst with a length of 148 bits, The time scale of the diagram, ranging from 0 bits to 146¾ bits, is thus shorter than in the *Power/t Norm. GMSK* diagram. The ordinate is symmetric around 0, ranging from -20 dB to +20 dB.

③ Statistical quantities

The table below the phase error diagram gives an overview of the phase error averaged over the current burst (*Phase Error RMS*), the extreme value of the current phase error (*Phase Error Peak*), the current Origin Offset and I/Q Imbalance, the current frequency error, and the statistical distribution of these three quantities. The values in the three columns are calculated as follows:

- The *Current* column contains the frequency error, RMS-averaged phase error and peak (*Max./Min.*) phase error for the current burst.
- The *Average* column contains the three quantities averaged over the last statistics cycle.
- The *Maximum* column contains the extreme values of the three quantities within all bursts measured.

Alternative Settings and Measurements

☞ chapter 4, p. 4.38 ff.

The measurement principle for phase and frequency errors is explained at the beginning of section *Measurement Menu (Modulation – GMSK)*.

For configuration settings see section *Measurement Configurations (Modulation Configuration)*.

As a second modulation scheme, the CMU supports 8PSK-modulated traffic channels (in the so-called EDGE channels).

☞ chapter 4, p. 4.41 ff.

☞ chapter 3.

In this chapter a comprehensive description of measurement control and on the definition of statistical quantities is given.

☞ chapter 4, p. 4.41 ff.


As a last measurement group in *Non Signalling* mode, the *Spectrum* measurement assesses the off-channel power due to the modulation and due to switching.

Signalling Mode

In the *Signalling* mode the CMU first transmits a control channel signal to which the mobile is able to synchronize. A call can then be established from either the CMU or the mobile. The measurement must be synchronized to the signal transmitted by the mobile; an external trigger signal can not be used.

Call Setup and Signalling Parameters

The signalling processes and configurations are controlled via the *Connection Control* popup menu. A control channel signal is switched on and the second of several *Connection* tabs contained in the *Connection Control* popup menu is automatically displayed when the *Connection* test mode is selected (see *Menu Select* menu on page 2.4; for the following examples, *GSM1800-MS Signalling Meas.* with the *Overview* menu was selected, and another *RESET* was performed).

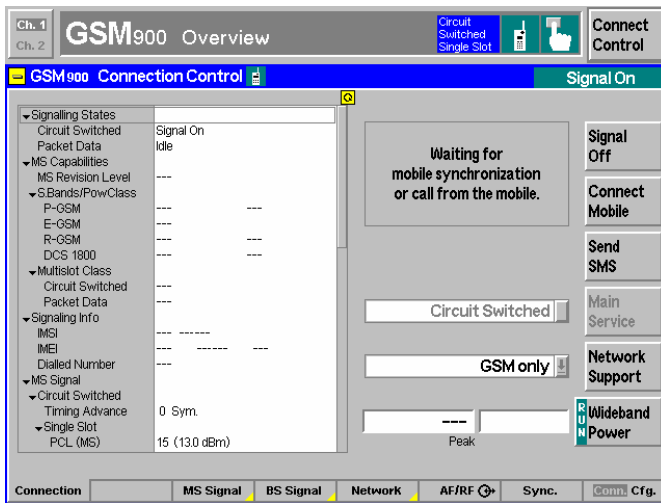


Step 1

The *Connection (Signal On)* tab indicates the current signalling states, the characteristics of the mobile phone and those of the signals generated by the CMU ① and the MS under test.

In addition the network identity and the characteristics of the input and output connectors are shown. ②

The softkeys on the right side of the menu lead to other signalling states. The *Main Service* and *Network Support* softkeys are for switchover to GPRS signalling tests. ③

The *Wideband Power* softkey shows the current status of the wideband peak power measurement and its ratio to the maximum input power (*Max. Level*) set in the *MS Signal* tab menu. At present, the wideband power measurement is switched on, however, no signal is received because no call connection with the mobile phone has been established.

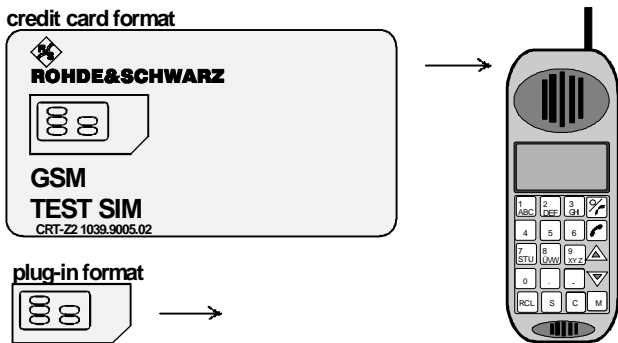

Step 2

- Insert a test SIM card of the appropriate size into the phone and switch on.④
- If requested, enter the PIN number followed by #.
(PIN No. of Rohde & Schwarz test SIM card: 0000). ⑤
- Make sure that your mobile is connected to RF 2 (default input/output).

Additional Information...

... on Step 1① **BS Signal**

The CMU is able to generate two different RF carrier signals (traffic channel and BCCH control channel) which can be configured separately. This allows a complete simulation of what happens in a real GSM network.

② **Network Identity, RF** 

The network is identified by the three code numbers MCC (mobile country code), MNC (mobile network code) and NCC (national color code). These codes are transmitted to the mobile station on the control channel. The CMU uses the default settings shown in the diagram on the left side.

Input/output connectors suitable for the type of measurements and signal levels must be chosen – see section [RF connection](#) on page 2.3. An external input/output attenuation value can be specified in order to compensate for known attenuations of the input/output signal like those caused by cables.

② **GPRS signalling**

With option CMU-K42 the CMU is also able to set up a TBF connection to a GPRS mobile phone and perform transmitter and receiver tests in a GPRS test mode.


... on Step 2④ **SIM card, test SIM**

Two types of SIM card are specified for use in the GSM system, one the size of a credit card and the considerably smaller plug-in SIM of about 15 x 20 mm. One SIM card must be inserted in the mobile phone in order to set up a call. However, it is also possible to make an emergency call without any card by entering 112.


⑤ **Pin number**

Use care when entering the PIN number as only three false tries are allowed before the card is automatically blocked. It can be unblocked by entering the PUK number which is either known or can be obtained from the company that issued the card. See also the appropriate section in the operating manual of your mobile phone.


Alternative Settings and Measurements


 chapter 4, p. 4.168 ff.

The control and traffic channels are configured in the *BS Signal* tab of the *Connection Control* menu. To access this card press the associated hotkey.


 chapter 4, p. 4.176 ff.

The network identity and other parameters characterizing the network are configured in the *Network* tab of the *Connection Control* menu. To access this card press the associated hotkey (see below).

Input/output connectors and external attenuations are configured in the *RF*/ tab.


 chapter 4, p. 4.195 ff.

Most mobile phones require a so-called test SIM card in order to test the sensitivity (bit error rate and related quantities) in a test mode. A test SIM card is available from Rohde & Schwarz with the designation CRT-Z2 (id. no. 1039.9005.02). It features credit card size and can be easily converted to "plug-in" format.

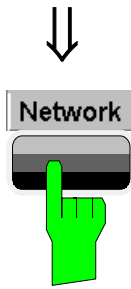

Step 3


- Press the *Network* hotkey.
- The *Network* tab is displayed.

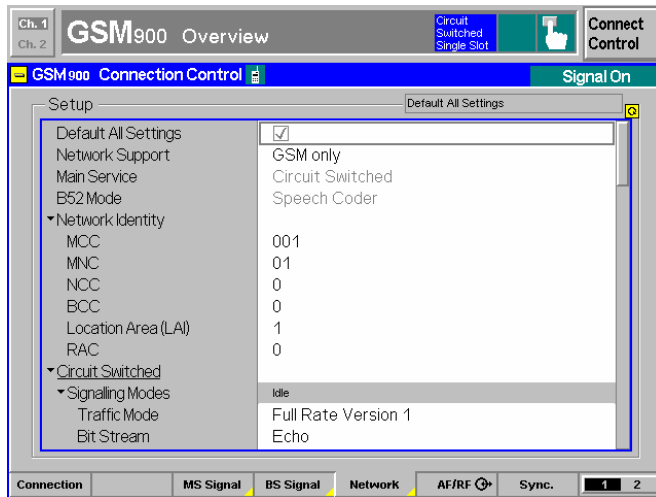

The *Network* tab defines a variety of parameters concerning the network and the operating mode of the mobile station.


The purpose of these settings is to simulate the operating conditions of a mobile station in the GSM network as realistically as possible. Many of the settings have a direct impact on the speed of the *Signalling* measurements. ③

- Press the *Connection* hotkey to return to the *Connection (Signal On)* tab.

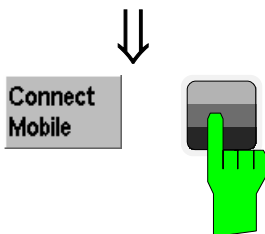

Step 4

- Press the *Connect Mobile* softkey.

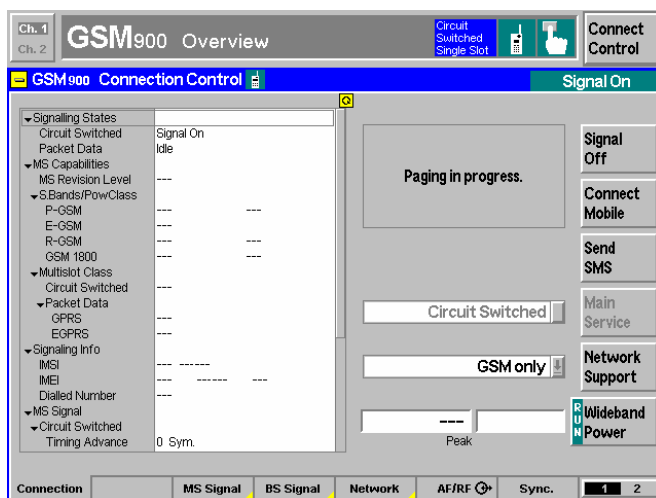

The header message *Paging in progress* is displayed. When the mobile has synchronized to the BS signal and starts ringing, the *Connection (Alerting)* tab is displayed. ①

The *Connection (Alerting)* tab indicates the most important parameters characterizing the mobile phone (*MS Capabilities*). ②

Additional Information...

... on Step 3

③ Network parameters

The purpose of network parameter settings in the mobile test can be rather different from the original purpose (in the real GSM network). We illustrate this with two examples:

The *BA list (base station allocation list)* informs the mobile about the channels available in a given area. The mobile uses the BA list to determine to which RF channel it will receive the next handover request. The CMU uses the *BA list* to test a mobile when the synthesizer is jumping continuously from channel to channel and the software has to organize this, to evaluate and report the results.

In the *DTX (discontinuous transmission)* mode the mobile transmits traffic channel frames only when there is voice or data to be transmitted. This mode is used mainly in order to save mobile battery power. In the test mode, a DC current measurement during DTX will provide information about a possible leaking component of the mobile. No continuous *Power* measurements can be done while DTX is enabled.

... on Step 4

① Location update

The information transmitted by the CMU on the control channel requests the mobile phone to perform a location update procedure after switching-on. This is similar to a registration procedure in analog and other digital networks and serves to inform the base station that a certain mobile has been switched on now and is available for calls.

② MS Capabilities

The *MS Capabilities* list shows the basic properties of the connected mobile station which are transmitted to the CMU.

- The *international mobile subscriber identity (IMSI)* consists of the 3-digit mobile country code, the 2-digit mobile network code and the 10-digit mobile subscriber id. no.
- The *international mobile station equipment identity (IMEI)* consists of the 6-digit type approval code, the 2-digit final assembly code, the 6-digit serial no. and the 1 or 2-digit software version no.

The following hardware-related parameters determine the maximum output power of the mobile station:

- Power class (1 to 5)
- MS revision level (phase I or II)

Alternative Settings and Measurements

☞ chapter 4, p. 4.176 ff.


☞ chapter 4, p. 4.176 ff.

The *Location Update* parameter in the *Network* tab determines in which cases a location update is performed.

☞ chapter 4, p. 4.155 ff.


A comprehensive list of mobile station properties is displayed in the *Call Established* signalling state.

Power classes and GSM revision levels are listed with their maximum output power in section *Limits for the Average Burst Power* in chapter 4.

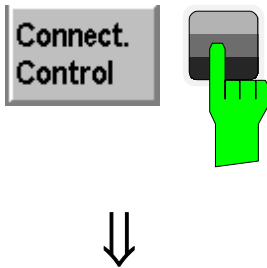

Step 5

- Accept the call at your phone.
- Press *Connect. Control* to reopen the *Connection Control* menu.

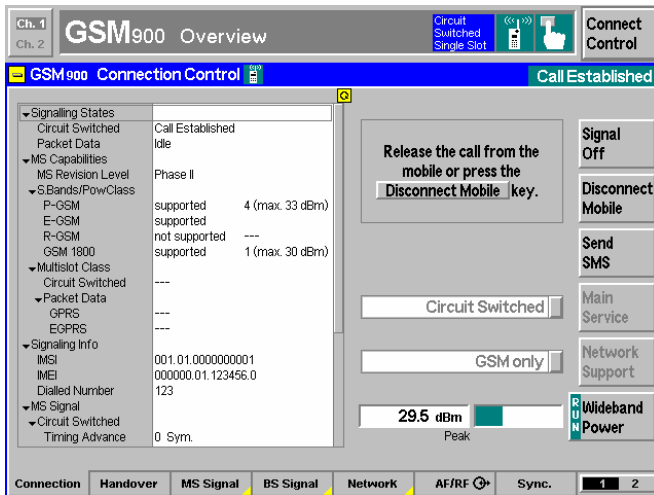

The *Connection (Call Established)* presents a comprehensive list of the signalling parameters for the current connection (see *MS Capabilities* on page 2.17).

The power control level of the mobile station ① and the parameters of the traffic channel signals transmitted by the CMU ② can still be configured in the *MS Signal* and *BS Signal* tabs of the *Connection Control*, respectively.

- Press the *Escape* key to close the *Connection Control* menu and return to the *Overview* menu.

Additional Information...

... on Step 5

① Power control level (PCL)

Dynamic power control is used in GSM networks to reduce the output power of the mobile station as far as possible. In practice the base station sets the mobile power on a dimensionless scale of *power control levels (PCL)* ranging from 0 to 31. In GSM900, PCL 0 corresponds to the largest nominal output power (39 dBm), power control levels between 16 and 31 can be set for phase II mobiles only.

In contrast to the PCL the *power class* characterizes the nominal maximum output power of the mobile. Depending on the power class of the mobile the range of possible PCL settings may be restricted.

② Traffic channel


The channel number of the BS traffic channel signal is defined according to GSM specifications as explained for the *Non Signalling* mode (downlink, see [Analyzer/Generator menu](#) on page 2.7).

The traffic channel can be fixed or changed periodically (frequency hopping). Frequency hopping is defined by means of one of the four hopping sequences A, B, C, D.

With the CMU basic unit timeslots 2 to 6 may be selected for the traffic channel because the timeslots 0, 1, and 7 are occupied by the BCCH and for reconfiguring.


Out-of-tolerance power measurements

If a power measurement is out of tolerance, please ensure that the attenuation of any cables and/or antenna couplers used is being taken into account by the CMU. As some GSM power levels must be within ± 2 dB of the nominal value given in the specifications, even a small attenuation can result in an out-of-tolerance measurement.


External attenuation values for each input/output may be entered in the *RF*  tab of the *Connect Control* menu

The cables, RF connections and antenna couplers must also be in good condition for satisfactory measurements. Dirty or broken RF connections can cause problems at the high frequencies used by GSM networks.

Alternative Settings and Measurements

 chapter 4, p. 4.116 ff.




PCL levels and power classes are listed in section *Limits for the Average Burst Power* in chapter 4.

 chapter 4, p. 4.168 ff.

Besides the four GSM standard hopping sequences A to D arbitrary sequences consisting of up to 64 channel numbers may be defined and used.

Receiver Reports and Power Measurements

Besides the signalling parameters discussed above the receiver reports of the mobile station are transmitted to the CMU. Power and modulation measurements can be performed as in the *Non Signalling* mode.

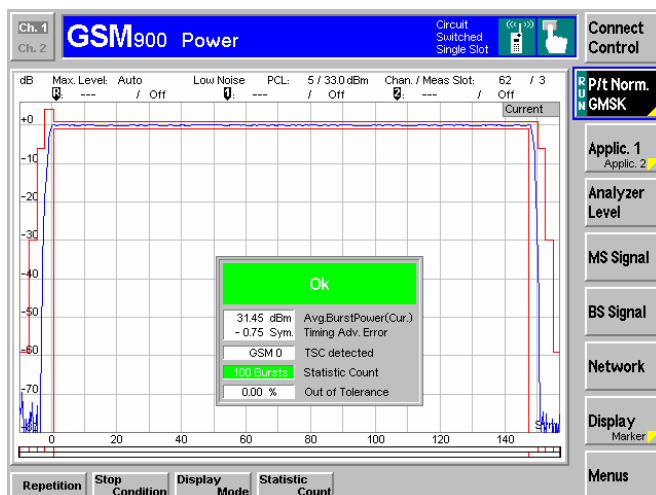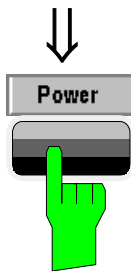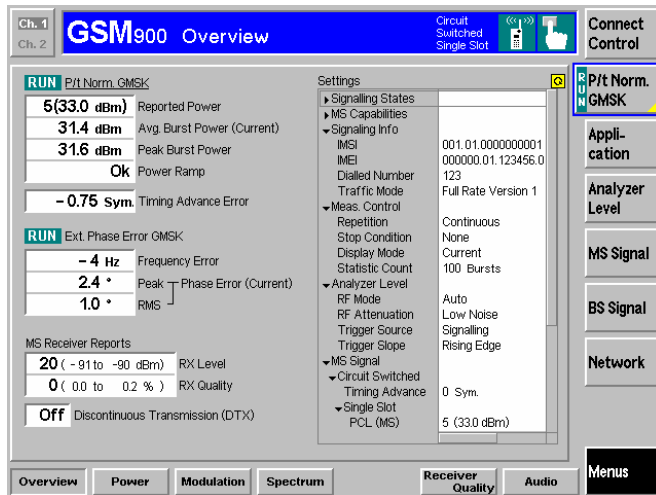

Step 1

The *Overview* menu indicates the most important settings in the function group *GSM900-MS Signalling* and the main results of the *Power* and *Modulation* measurements (output fields *Ext. Phase Err. GMSK*). Moreover the receiver reports of the mobile station are displayed. ①

Power and *Modulation* measurements can be performed in close analogy to the measurement of GSM signals in the *Non Signalling* mode. The differences between the two modes are related to the settings which can be made at the mobile station.

Step 2

➤ Press the *Power* hotkey to switch over to the graphical menu *Power*.

The *Power* menu shows the power of the current burst as a function of time. Like in the *Non Signalling* mode the menu contains an *Application (Applic. 1 or 2)* softkey.

- Press the *Applic. 1* softkey to change the hotkeys displayed below the diagram. ②
- Press the *P/PCL* hotkey to measure the average burst power as a function of the mobile's power control level.
- Press the *MS Signal* softkey to check the PCL (*PCL* hotkey) and traffic channel number (*Channel* hotkey) set. ③

Step 3

➤ Press the *Menus* softkey and the *Receiver Quality* hotkey to switch over to the *Receiver Quality* menu.

Additional Information...

... on Step 1

① MS Receiver Reports

GSM mobile phones continuously measure the signal strength and quality of several nearby base stations. The measured values for the active base station (serving cell BTS) are regularly sent to the CMU in the so-called measurement reports.

The received signal input level (RX Level) is expressed in terms of dimensionless power levels ranging from 0 to 63. These levels depend linearly on the absolute signal levels measured in dBm. A high power level implies a high received signal input level.

The received signal quality (RX Quality) is expressed in terms of dimensionless quality levels (actually "error levels") ranging from 0 to 7. The quality levels depend linearly on the logarithm of the bit error rate. A high quality level implies a high bit error rate and thus a poor received signal quality.

... on Step 2

② P/PCL Measurement

The *P/PCL* measurement forms the second application in the measurement group *Power*. In this application, the average burst power of the mobile can be measured over the whole range of power control levels and for up to three different channels at once. The PCLs and channels to be measured can be selected; the total measurement time is below 3 s.

③ PCL/Channel and Trigger

The PCL set for the mobile station and the traffic channel number can be checked and modified, if required, in the *Power* menu. This is in contrast to the *Non Signalling* mode where no settings concerning the device under test can be made.

Finally the two modes differ in the trigger modes available: In the *Non Signalling* mode an external trigger signal may be used whereas in the *Signalling* mode the measurements must be triggered by the input signal (*Free Run*, *RF Power*, *IF Power* mode) or by the CMU's signalling unit (*Signalling trigger*).

Alternative Settings and Measurements

☞ chapter 4, p. 4.141 ff.

The exact definition of RX Level and RX Quality is given in section *Panel MS Rcv. Reports – Received Results of the Mobile Phone*.

The dependence of RX Level and RX Quality on the CMU's output level can be quickly checked by varying the *TCH Level* in the used timeslot.

Different TCH levels can be set in the used timeslot and in the unused timeslots. This is useful for some tests specified by GSM.

☞ chapter 4, p. 4.101 ff.

The different „applications“ *Power/t Norm. GMSK*, *P/PCL* etc. split up the measurement group *Power* in several related sub-groups.


For a general discussion of measurement control and applications see chapters 3 and 5.

☞ chapter 4, p. 4.101 ff.

The frame trigger signal (*Signalling trigger* mode) is also fed to pin 2 of the AUX 3 connector where it can be tapped off to synchronize external devices to the CMU's TDMA timing.

Receiver Quality Measurements


Receiver Quality measurements evaluate parameters which characterize the quality of transmission on the complete signal path between CMU and mobile station. To this purpose the bits sent to the mobile station are looped back and retransmitted. The CMU compares the bits received with those sent and can thus calculate the percentage of faulty bits. Most but not all mobiles require a test SIM card to enter the loop-back mode (see *SIM card, test SIM* on page 2.15).

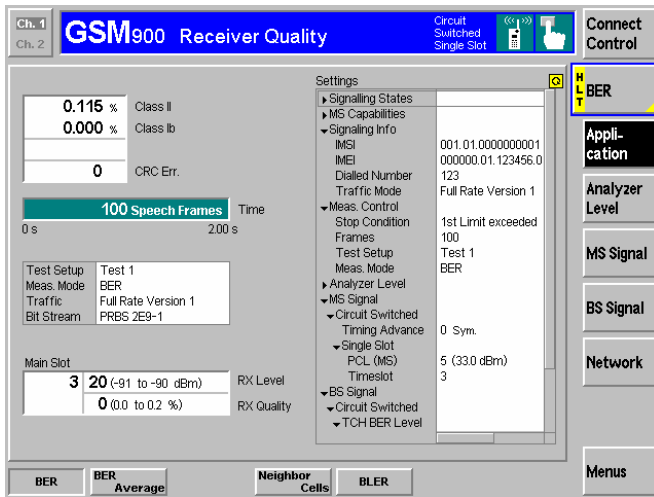

Step 1

The *Receiver Quality* menu controls the receiver quality tests and displays the measurement results together with the *RX Level* and *RX Quality* of the serving cell. This facilitates a comparison between the results reported by the mobile (*RX Quality*) and the sensitivity test results.


- Press the *Application* softkey to display all applications of the *Receiver Quality* measurement group. Select *BER*. ①
- Press the *BER – Meas. Mode* hotkey and select *Burst by Burst*. ②

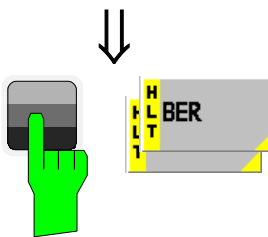

Step 2

- Press the selected *BER* softkey again.

The *Receiver Quality Configuration* menu is opened.

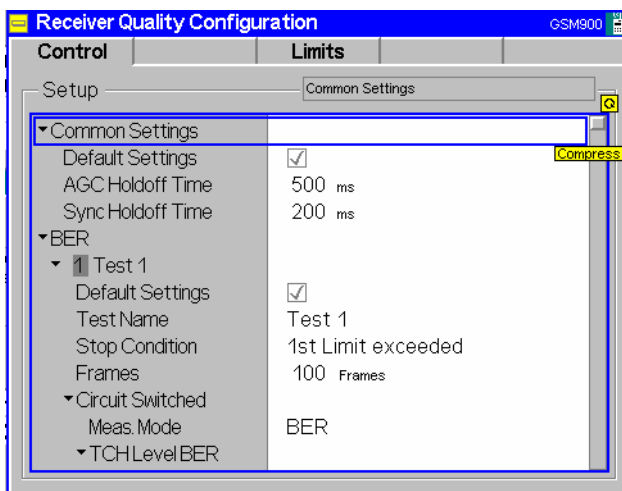

The *Control* tab contains the parameters configuring the *Receiver Quality* measurement. Most parameters are equal or analogous to the ones used in *Power* or *Modulation* measurements. Major differences occur in the measurement modes available (*Control* tab, ②) and in the definition of the statistics count. ③

Additional Information...

... on Step 1

① Applications

Within the *Receiver Quality* measurement group, the repetition modes *BER* (single shot bit error rate tests) and *BER Average* (continuous bit error rate tests) are treated as different applications. For single shot measurements, up to ten different test setups with independent parameters can be configured (see *Control* tab in the *Receiver Quality Configuration* menu).

② Measurement Mode

A number of different quantities characterizing the quality of transmission are defined:

- Bit error rate (for class II and class Ib bits)
- Residual bit error rate (for class II and class Ib bits)
- Frame erasure rate

The type of quantities measured depends on the measurement mode (*BER*, *RBER/FER*, or *Burst by Burst*). In the *Burst by Burst* mode which is specified for GSM phase II and phase II+ mobiles, only bits without error protection are transmitted. This enhances the speed of the bit error rate test (fast BER test).

... on Step 2

③ Statistics

In the framework of sensitivity tests the basic evaluation period is equal to the frames used by the speech coder and consisting of 260 bits. Bursts and TDMA frames are irrelevant.



A statistics cycle thus consists of a definite number of frames.

Failed Receiver Quality Test

If a BER test fails check the following:

1. Ensure that the attenuation of any antenna coupler and/or cables used is being taken into account by the CMU. During the test the mobile receiver is being tested with very low RF signal levels, and even a small attenuation can cause the CMU to show a fail indication.
2. An external signal from a real network may interfere with the signal sent from the CMU to the mobile, in particular during BER tests where the output level of the CMU is reduced to as low as -104 dBm. The BER test should ideally be performed in a shielded room, however, if this is not possible, the channel(s) used for the test should be changed. If different results are obtained on neighboring channels, the problem is likely to be due to external interferences.

Alternative Settings and Measurements

☞ chapter 4, p. 4.133 ff.

For a general discussion of measurement control and applications see chapters 3 and 5.

☞ chapter 4, p. 4.133 ff.

The bit classes and measured quantities are explained at the beginning of section *Measurement Menu Receiver Quality*.

☞ chapter 3 and 4.

Multislot Measurements with Mixed Modulation Schemes

In an EGPRS test mode connection, a packet switched data channel is allocated between the CMU and the MS under test. The MS uses the enabled timeslots for the transmission of 8PSK modulated bursts. In addition, it is periodically stimulated to transmit a single GMSK-modulated burst.


In a *P/t Multislot* measurement, it is possible to specify the modulation scheme for each measured time-slot of an uplink multislot configuration. Only a burst sequence with matching modulation pattern will be measured. This feature can be used to pick out the occasional GMSK burst events in the uplink signal and obtain the burst power of 8PSK- and GMSK modulated bursts in a single measurement.

Measurement task Measure the power of the GMSK-modulated bursts that the MS transmits while it operates in EGPRS mode. Display the power together with the power of the adjacent (8PSK-modulated) bursts and perform a limit check for all bursts.

- Connection** To set up the appropriate EGPRS connection...
1. Connect the mobile to the CMU and switch on.
 2. In the *Menu Select* menu, select the appropriate GSM band and the measurement menu *Signalling – Power – P/t Multislot*.
 3. In the *Connection* tab of the *Connection Control* menu opened, select *Network Support: GSM + EGPPRS, Main Service: Packet Data*.
 4. Select one of the test modes A or B for transmitter or loopback tests (*Service Selection: Test Mode A or Test Mode B*). If you select test mode B, then open the *Network* tab of the *Connection Control* menu and set *Test mode with ACK* in the *Packet Data* section to *On*.
 5. Set up the EGPRS connection to the mobile until the CMU enters the *TBF Established* state and the *Connection Control* menu is closed automatically.

Measurement configuration After closing the *Connection Control* menu, the measurement menu for the *P/t Multislot* application is shown with default settings. To adjust the UL and DL signal and display settings...

6. Press *MS Signal – Slot Config.* and enable 2 or more consecutive uplink time-slots.
7. Press the *P/t Multislot* measurement control softkey and adjust the *Slot Count* and *Meas. Slot* to your UL signal configuration.
8. Press *Display – Modulation View* and select *GMSK* modulation for one of the measured and displayed timeslots.

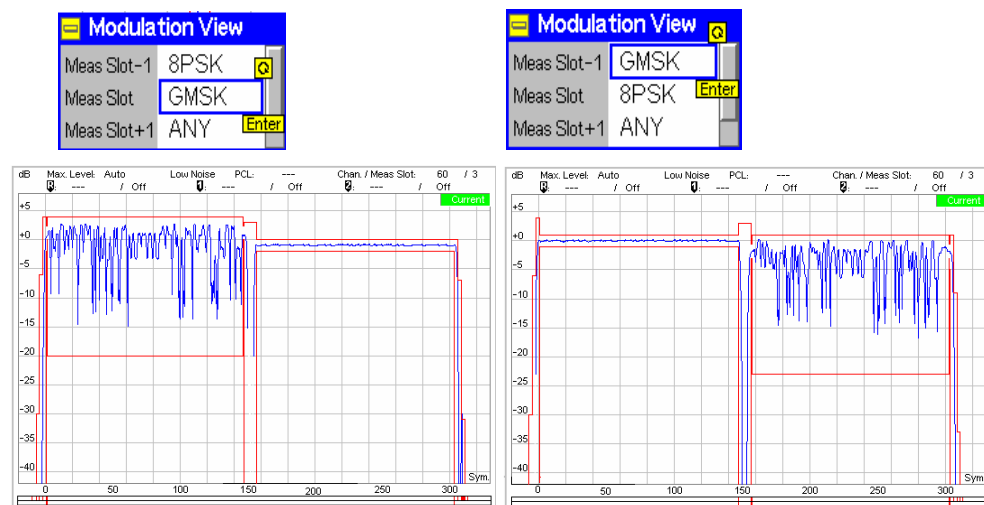

The GMSK and 8PSK bursts are displayed together with the appropriate limit line template. In the examples above both burst types pass the limit check.

Contents

3 Manual Control	3.1
Menu Structure	3.1
Test Modes.....	3.1
Configurations	3.2
Measurement Groups	3.3
General Settings	3.5
Menu Overview	3.9
GSM-MS Non Signalling – General Configurations	3.9
GSM-MS Non Signalling – Power and Modulation.....	3.10
GSM-MS Non Signalling – Spectrum	3.11
GSM-MS Signalling – General Configurations I	3.12
GSM-MS Signalling – General Configurations II	3.13
GSM-MS Signalling – Power and Modulation	3.14
GSM-MS Signalling – Spectrum and Receiver Quality	3.15

3 Manual Control

This chapter gives a brief survey of the operating concept and the structure of the user interface for GSM mobile phone tests. The CMU was designed for maximum operating convenience and flexibility. All instrument functions are grouped together in menus, each of them provides a number of related configuration settings or displays a group of measured quantities. All menus show a similar structure so that many settings, once defined, can be used in several measurements. Switchover between the different menu groups and test modes (*Signalling – Non Signalling*) is possible at any time.

In the following, the different measurement modes and measured quantities are discussed. Settings and measurement parameters frequently encountered are explained from a general point of view.

The formal aspects of measurement control are discussed in more detail in chapter 5 (*Remote Control – Basics*). For a presentation of the CMU's control elements, menu types and dialog elements within the menus refer to chapter 3 of the operating manual for the CMU basic unit.

Menu Structure

The menus used to control GSM measurements can be arranged in different ways. From the functional point of view, they form the following groups:

- The function groups *GSM400-MS*, *GSM850-MS*, *GSM900-MS*, *GSM1800-MS* and *GSM1900-MS*
- The two test modes *Signalling* and *Non Signalling*
- General configurations (*Connection Control*), configurations specific to a measured quantity (*Power Configuration*, *Modulation Configuration*, *Spectrum Configuration*, *Receiver Quality Configuration*), and menus displaying the results of the measurement (*Analyzer/Generator*, *Overview*, *Power (P/Time, P/Slot, P/Frame etc.)*, *Modulation (Extended Phase Error, Overview, EVM, Phase Error, Magnitude Error)*, *Spectrum (due to Modulation and due to Switching)*, *Receiver Quality*)

In a more formal sense, the CMU uses main menus, popup menus, graphical measurement menus and dialog windows of various size. This aspect is discussed in chapter 3 of the operating manual for the CMU basic unit.

Test Modes

GSM measurements are performed in one of the two modes *Signalling* or *Non Signalling*. The *Non Signalling* mode is typically used for module tests or test of mobiles in a special "test mode". The *Signalling* mode serves to measure the mobile phone performance under realistic operating conditions where the CMU mimics a GSM base transceiver station.

Definition

The term signalling denotes all actions necessary to establish, control and terminate a communication between the base station and the mobile phone. The signalling messages conveyed allow the mobile station and the network to discuss the management of issues either related to the user or concerning technical aspects of the communication.

Non Signalling Mode

In *Non Signalling* mode, the CMU generates an RF signal conforming to GSM specifications and analyzes the signal with GSM characteristics (i.e. with definite level in the designated channel and in the adjacent channels, definite phase and frequency, and bit content) retransmitted by the device under test. No signalling parameters are transferred so that test times can be reduced considerably. The test signal may be inside or outside the designated GSM channel range.

Normal burst signals are generated and analyzed. Various transmitter quality measurements (burst power versus time in one or several timeslots, average burst power in subsequent timeslots or frames, phase and frequency errors, error vector magnitude, I/Q imbalance and origin offset in the constellation diagram, adjacent channel power due to switching and due to modulation) can be performed. GMSK and 8PSK-modulated signals are supported. The measurement may be triggered by an additional external signal.

Signalling Mode

In *Signalling* mode, the CMU starts to transmit a signal using a control channel. In subsequent steps, the mobile synchronizes to the control channel, decodes the information transmitted, and performs a location update so that a call can be delivered from either the mobile or the CMU.

The CMU is able to configure a broad range of network parameters and to determine the parameters characterizing the mobile. Measurements of the burst power versus time in one or several consecutive timeslots, of the average burst power in consecutive timeslots or frames, the modulation parameters (phase and frequency errors, I/Q imbalance and origin offset in the constellation diagram), the adjacent channel power due to switching and due to modulation, and of the bit error rate can be performed for normal bursts and access bursts. GMSK and 8PSK-modulated signals are supported.

If option CMU-K42 is installed in addition, the CMU can also establish a TBF connection to a mobile station operating in packet-data (GPRS) mode. Single-slot and multislot measurements can be done in the GPRS test mode.

Symbols for Signalling Mode and State

The *signalling mode* and *state* is indicated to the left of the operating mode in each main menu and graphical measurement menu (see chapter 3 of CMU operating manual). The following symbols occur in function group *GSM400/850/900/1800/1900-MS*:



Non signalling mode; module tests



Signalling mode, Signal Off



Signalling mode, Signal On or GPRS Idle (symbol blinks)



Signalling mode, Synchronized or GPRS Attached



Signalling mode, Alerting or GPRS Connecting TBF (symbol blinks)



Signalling mode, Call Established or GPRS TBC Established

Configurations

The CMU offers a wide range of settings for the RF signal generator and analyzer, the signalling procedures, and the individual measurements. Configurations can be set either for the whole function group (*Connection Control*) or for a particular measurement.

Connection Control	<p>The <i>Connect. Control</i> softkey is located on the right side of the title bar of each main and graphical measurement menu. It opens a popup menu with several tabs controlling</p> <ul style="list-style-type: none"> • The signal generators and analyzers of the instrument (<i>Analyzer</i> and <i>Generator</i> in Non Signalling, <i>MS Signal</i> and <i>BS Signal</i> in Signalling mode) • The CMU receiver settings and input path configuration (included in <i>Analyzer</i>, <i>MS Signal</i>) • The RF connectors to be used and the external attenuation (<i>RF Input/Output</i>) • The reference signal and the system clock (<i>Sync.</i>) • The trigger settings (<i>Trigger</i>) • In <i>Signalling</i> mode, all actions changing the CMU's signalling state (<i>Connection</i>) • In <i>Signalling</i> mode, a handover (<i>Handover</i>) to another network • In <i>Signalling</i> mode, parameters of the network and the mobile station under test (<i>Network</i>) <p>All settings made in the <i>Connect. Control</i> menu apply to the whole function group. Many of them can be accessed and overwritten, however, by means of the softkeys and hotkeys offered in the graphical measurement menus.</p>
Configurations of measurements	<p>A popup menu offering specific settings is assigned to each measurement group (<i>Power</i>, <i>Modulation</i>, <i>Spectrum</i>, and <i>Receiver Quality</i>). The following parameters can be defined:</p> <ul style="list-style-type: none"> • The repetition mode, the stop condition, the statistic count and the display mode for the measurement (<i>Control</i>) • Tolerances for the measured quantities (<i>Limits</i>, <i>Limit Lines</i>) <p>These settings are explained in more detail below (see section General Settings on page 3.5).</p>
Configuration via hotkeys	<p>The softkeys and associated hotkeys in the graphical measurement menus provide the most important configurations for the current measurement; see chapter 4 and chapter 3 of the CMU200 operating manual. Settings may via hotkeys supersede the corresponding <i>Connection Control</i> settings.</p>

Measurement Groups

Measurement results are indicated in two different ways:

- Discrete values and parameters are displayed in output fields, lists and tables. In remote control, these results are referred to as scalars.
- Measurement curves (traces) are displayed in a Cartesian coordinate system, the time forming the x-axis scale. Relatively small sets of test points are generally viewed in a bar graph. In remote control, results of this type are referred to as arrays.

While the measurement is running in repetition mode *continuous* (see page 3.6), the indicated results are constantly updated. As shown in the table below, some of the measurement groups are different for the two test modes.

Table 3-1 Measurement groups in *Signalling* and *Non Signalling* mode

Non Signalling (GMSK and 8PSK-modulated signals supported)	Signalling (GMSK and 8PSK-modulated signals supported)
<p>Analyzer/Generator</p> <p>Shows the settings for the signals generated and analyzed by the instrument and presents an overview of the basic scalar power and modulation results.</p>	<p>Overview</p> <p>Shows the settings for attempting a connection to the mobile and presents an overview of the basic scalar power and modulation results. The receiver parameters and various signalling parameters reported by the mobile station are indicated in addition.</p>
<p>Power</p> <p>Application <i>P/t Norm. GMSK/8PSK</i>: Diagram showing the power of a GMSK or 8PSK-modulated burst signal as a function of time. The peak power, statistical results and the results of the limit check are indicated in addition. Single points of the trace may be evaluated using graphical tools (markers, D-Line).</p> <p>Application <i>P/t Multislot</i>: Diagram showing the trace of the measured burst power as a function of time in up to 4 consecutive timeslots. The peak power, statistical results and the results of the limit check are indicated in addition. Single points of the trace may be evaluated using graphical tools (markers, D-Line).</p> <p>Application <i>P/Frame</i>: Table showing the average burst power in a particular timeslot and in 128 consecutive TDMA frames.</p> <p>Application <i>P/Slot Graph</i>: Bar graph showing the average burst power in 8 consecutive timeslots.</p> <p>Application <i>P/Slot Table</i>: Table showing the average burst power in up to 512 consecutive timeslots.</p>	<p>Power</p> <p>Application <i>P/t Norm. GMSK/8PSK</i>: Diagram showing the power of a GMSK or 8PSK-modulated burst signal as a function of time. The peak power, statistical results and the results of the limit check are indicated in addition. Single points of the trace may be evaluated using graphical tools (markers, D-Line).</p> <p>Application <i>P/t Multislot</i>: Diagram showing the trace of the measured burst power as a function of time in up to 4 consecutive timeslots. The peak power, statistical results and the results of the limit check are indicated in addition. Single points of the trace may be evaluated using graphical tools (markers, D-Line).</p> <p>Application <i>P/t Access GMSK</i>: Diagram showing the power of a single GMSK-modulated access burst as a function of time including limit check.</p> <p>Application <i>P/Frame</i>: Table showing the average burst power in a particular timeslot and in 128 consecutive TDMA frames.</p> <p>Application <i>P/Slot Graph</i>: Bar graph showing the average burst power in 8 consecutive timeslots.</p> <p>Application <i>P/Slot Table</i>: Table showing the average burst power in up to 512 consecutive timeslots.</p> <p>Application <i>P/PCL</i>: Table showing the average burst power as a function of the PCL of the mobile phone.</p>
<p>Modulation</p> <p>Application <i>Ext. Phase Err. GMSK</i>: Diagram showing the phase error within the burst as a function of time. The frequency error, average and RMS phase error, I/Q imbalance and origin offset in the constellation diagram, statistical results and the results of the limit check are indicated in addition.</p> <p>Application <i>Overview 8PSK</i>: Table showing a statistical evaluation of 8PSK modulation parameters.</p> <p>Application <i>EVM 8PSK</i>: Diagram showing the error vector magnitude (EVM) within the burst as a function of time plus a statistical evaluation of 8PSK modulation parameters.</p>	<p>Modulation</p> <p>Application <i>Ext. Phase Err. GMSK</i>: Diagram showing the phase error within the burst as a function of time. The frequency error, average and RMS phase error, I/Q imbalance and origin offset in the constellation diagram, statistical results and the results of the limit check are indicated in addition.</p> <p>Application <i>Overview 8PSK</i>: Table showing a statistical evaluation of 8PSK modulation parameters.</p> <p>Application <i>EVM 8PSK</i>: Diagram showing the error vector magnitude (EVM) within the burst as a function of time plus a statistical evaluation of 8PSK modulation parameters.</p>

Non Signalling (GMSK and 8PSK-modulated signals supported)	Signalling (GMSK and 8PSK-modulated signals supported)
<p>Application <i>Magn. Error 8PSK</i>: Diagram showing the magnitude error within the burst as a function of time plus a statistical evaluation of 8PSK modulation parameters.</p> <p>Application <i>Phase Error 8PSK</i>: Diagram showing the phase error within the burst as a function of time plus a statistical evaluation of 8PSK modulation parameters.</p>	<p>Application <i>Magn. Error 8PSK</i>: Diagram showing the magnitude error within the burst as a function of time plus a statistical evaluation of 8PSK modulation parameters.</p> <p>Application <i>Phase Error 8PSK</i>: Diagram showing the phase error within the burst as a function of time plus a statistical evaluation of 8PSK modulation parameters.</p>
<p>Spectrum</p> <p>Diagram showing the amount of energy that spills outside the designated channel and the power vs. time at off-carrier frequencies. The off-channel spectrum is caused by the modulation (spectrum due to modulation) and to the bursty nature of the RF signal (spectrum due to switching). Statistical results and the results of the limit check are indicated in addition. A special mode for spectrum due to switching measurement on multislot configurations is available.</p>	<p>Spectrum</p> <p>Diagram showing the amount of energy that spills outside the designated channel and the power vs. time at off-carrier frequencies. The off-channel spectrum is caused by the modulation (spectrum due to modulation) and to the bursty nature of the RF signal (spectrum due to switching). Statistical results and the results of the limit check are indicated in addition. A special mode for spectrum due to switching measurement on multislot configurations is available.</p>
<p>–</p>	<p>Receiver Quality</p> <p>Table showing the results of the bit error rate test including the limit check and the receiver parameters reported by the mobile station. Bit error rates for different bit classes, the residual bit error rate and frame erasure rate, the raw bit error rate, the data block error rate and the USF BLER/False USF Detection can be assessed in various measurement modes. The Block Error Rate (BLER) can be measured on (E)GPRS channels.</p>

A graphical overview of the menus is given at the end of this chapter.

General Settings

A number of settings can be made in several of the configuration menus assigned to the measurement groups *Power*, *Modulation*, *Spectrum*, and *Receiver Quality*. In combination, these settings define the scope of the measurement, i.e. the number of bursts measured and the results displayed. The following brief overview is intended to avoid confusion of terms.

Application *Applications* are different measurements belonging to the same measurement group. They effectively split up a measurement group into various related sub-groups which can be configured separately.

They are selected via the *Application* softkey in the measurement menus.

Statistic Count / Statistics Cycle The statistic count is equal to the integer number of evaluation periods which form one statistics cycle. An evaluation period corresponds to the duration of a burst (measurement groups *Power*, *Modulation*, and *Spectrum*) or a speech frame (measurement group *Receiver Quality*). Depending on the *repetition mode* (see below), a measurement may extend over one or several statistics cycles.

The *statistic count* is set in the *Control* tab of the configuration popup-menus assigned to each measurement group.

- Repetition Mode** The *repetition mode* defines how many statistics cycles are measured if the measurement is not stopped by a limit failure (see stop condition *On Limit Failure* below). Two modes are available for all measurements:
- Single Shot* The measurement is stopped after one statistics cycle
- Continuous* The measurement is continued until explicitly terminated by the user; the results are periodically updated
- A third repetition mode is available in remote control:
- Counting* Repeated single shot measurement with a fixed number of statistics cycles
- The *repetition mode* is set in the *Control* tab of the configuration popup-menus assigned to the three measurement groups *Power*, *Modulation*, and *Spectrum*. In the *Receiver Quality* menu, the repetition mode can be set via the *Application* softkey.
- Note:** *In contrast to other measurement settings, these repetition modes in manual and remote control are independent and do not overwrite each other. In most measurements, the default repetition mode in manual control is Continuous (observe results over an extended period of time), the default mode in remote control is Single Shot (perform one measurement and retrieve results).*
- Stop Condition** For *Power*, *Modulation*, and *Spectrum* measurements, two stop conditions can be selected:
- None* The measurement is performed according to its repetition mode, regardless of the measurement results,
- On Limit Failure* The measurement is stopped as soon as one of the limits is exceeded, regardless of the repetition mode set. If no limit failure occurs, it is performed according to its repetition mode.
- For *Receiver Quality* measurements, the stop condition *None* (see above) and two further conditions can be selected:
- 1st Limit exceed.* The measurement is stopped as soon as one of the limits is exceeded
- All Limits exceed.* The measurement is stopped as soon as all limits defined are exceeded. Again, if no limit failure occurs, it is performed according to its repetition mode.
- The *Stop Condition* is set in the *Control* tab of the configuration popup-menus assigned to each measurement group.
- Display Mode** In graphical measurement diagrams, the *Display Mode* defines which of the measured and calculated traces is displayed if the measurement extends over several bursts. In general, traces are evaluated at a set of fixed, equidistant test points (samples). After n bursts, n measurement results per test point have been taken. After a single shot measurement extending over c bursts, c measurement results per test point have been taken.
- Current* The current burst, i.e. the last result for all test points, is displayed.
- Minimum* At each test point, the minimum value of all bursts measured is displayed.
- Maximum* At each test point, the maximum value of all bursts measured is displayed.
- Max./Min.* At each test point, the extreme value of all bursts measured is displayed, i.e. the maximum or minimum, whichever has a larger absolute value.

Average At each test point, a suitably defined average over all bursts measured is displayed; see paragraph on *Calculation of average quantities* below.

Note the difference in the calculation of *Average* on one hand, *Minimum*, *Maximum* and *Max./Min.* on the other hand, if the measurement extends over more than one statistic count (repetition mode *Continuous*, measurement time longer than one statistic count).

After evaluation of the different traces, the burst power is logarithmized and plotted in a semi-logarithmic diagram.

The *Display Mode* is set in the *Control* tab of the configuration popup-menus assigned to the measurement groups *Power*, *Modulation*, and *Spectrum*.

The *Average* traces in the *Power*, *Modulation*, and *Spectrum* menus are obtained as follows:

Calculation of average quantities

Let *c* be the number of bursts forming one statistics cycle (one *Statistic Count*) and assume that *n* bursts have been measured since the start of the measurement. In calculating the *Average* trace, the following two situations are distinguished:

n* ≤ *c Single shot measurement or continuous measurement during the first statistics cycle: At each test point, *Average* trace no. *n* is calculated from *Average* trace no. *n* – 1 and *Current* trace no. *n* according to the following recurrence:

$$Avg(n) = \frac{n-1}{n} Avg(n-1) + \frac{1}{n} Curr(n) \quad (n = 1, \dots, c)$$

The *Average* trace represents the arithmetic mean value over all *n* bursts measured.

n* > *c Continuous measurement after the first statistics cycle: At each test point, *Average* trace no. *n* is calculated from *Average* trace no. *n* – 1 and *Current* trace no. *n* according to:

$$Avg(n) = \frac{c-1}{c} Avg(n-1) + \frac{1}{c} Curr(n) \quad (n > c)$$

Scalar quantities are averaged in analogy to *Average* traces. The formulas hold for *n* = 1 where the average trace becomes equal to the current trace (statistics off).

Calculation of statistical quantities

In *Power* and *Modulation* measurements the statistical functions *Average*, *Minimum*, *Maximum* and *Minimum/Maximum* are applied to a set of test points depending on two independent parameters:

- The time, i.e. the abscissa values *t_i*, *i* ranging from 1 to the total number of test points comprising the trace.
- The burst number ranging from 1 to the number *n* of the current burst.



The result of the statistical operations depends on the parameter range considered and – in the case of statistics functions evaluated over several parameters – on the order of evaluations. This is why the definition of statistical quantities deserves some attention and is explained in the relevant sections in chapter 4. Some particular examples are:

1. In the *Power* menu, the quantity *Average Burst Power* denotes the average power of the current burst. i.e. the arithmetical mean value of all test points *t_i* located in the useful part of the burst (lower area 1 in the power template in chapter 4).
2. In the *Modulation* menu quantities such as the *Frequency Error*, *Phase Error RMS*, *Phase Error Peak* etc. are first calculated for the current burst and entered in the *Current* column of the output table. The results in the *Mini-*

mum/Maximum column correspond to the extreme value of the *Current* results calculated over all bursts measured. The results in the *Average* column correspond to the average of the *Current* results calculated according to the prescription in paragraph *Calculation of average quantities* above.


Menu Overview

GSM-MS Non Signalling – General Configurations

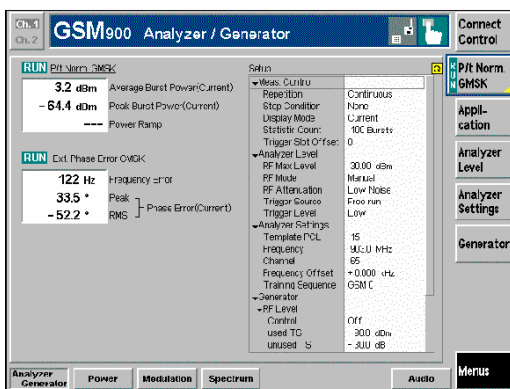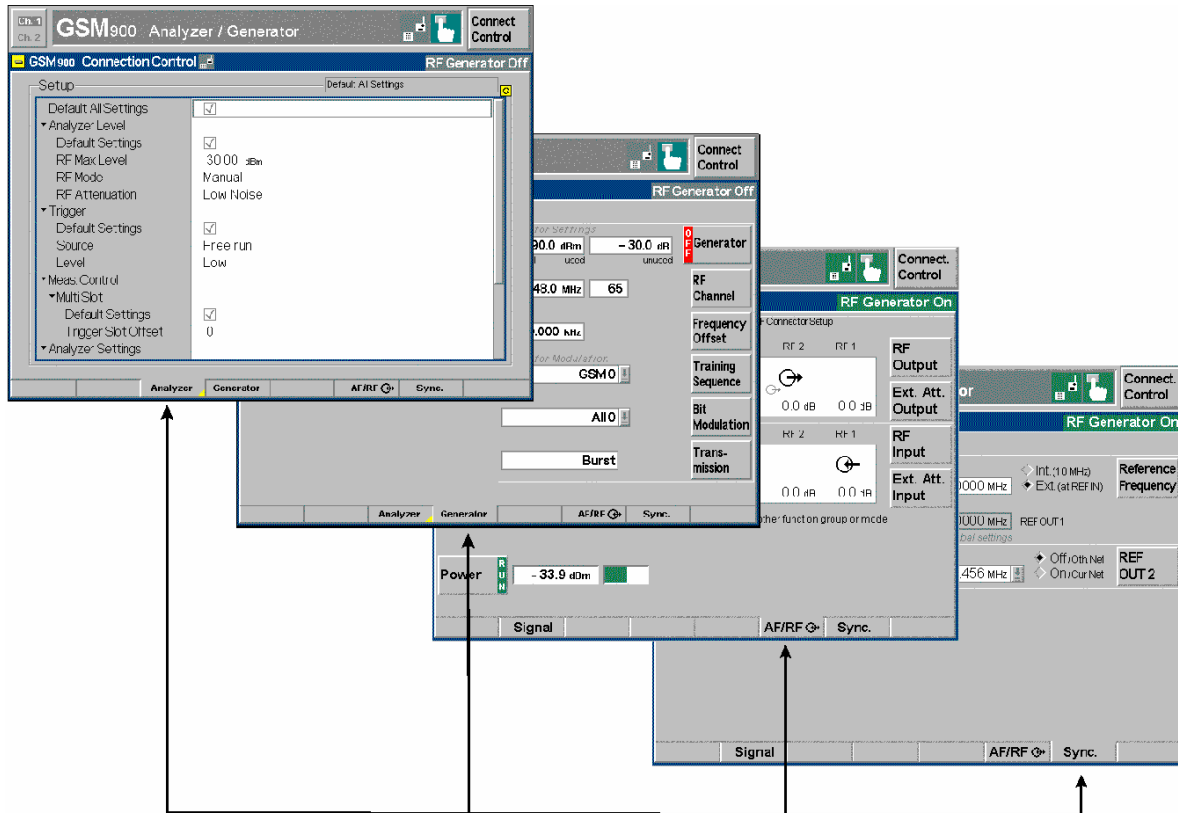

Measurement groups, see next pages

GSM-MS Non Signalling – Power and Modulation

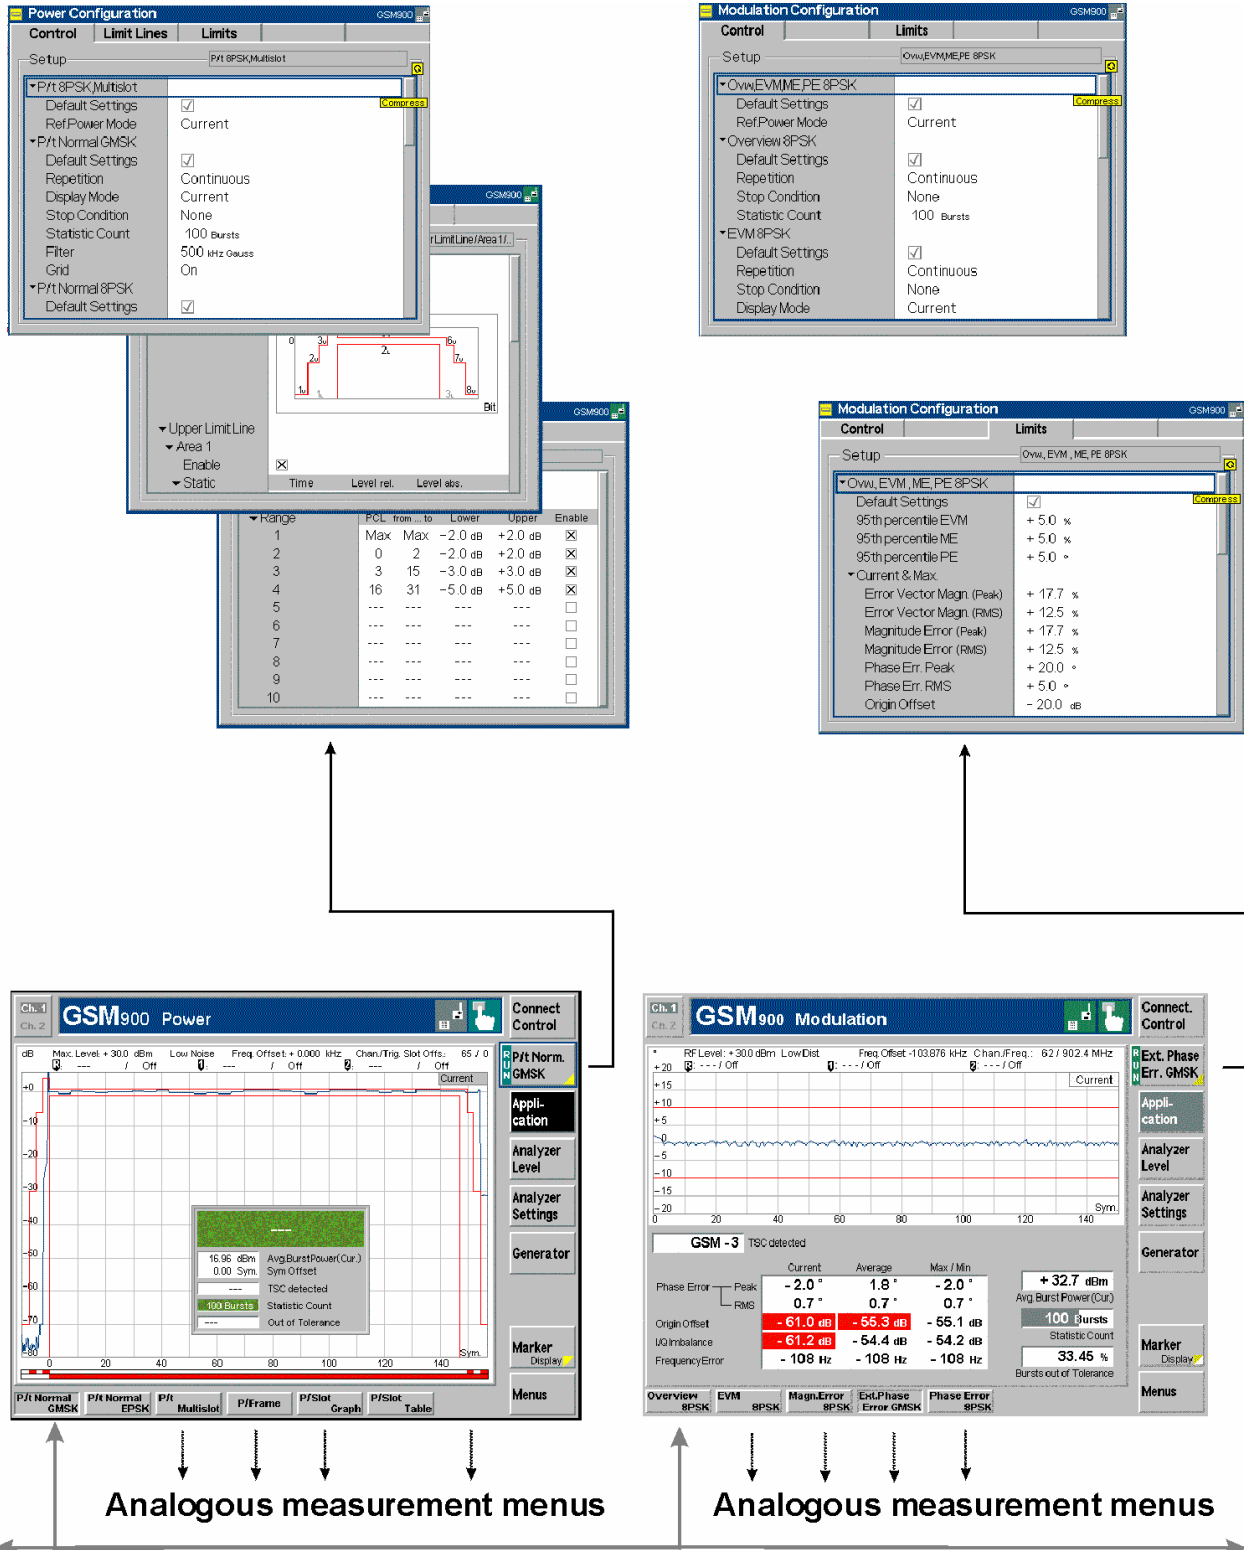

GSM-MS Non Signalling – Spectrum

Spectrum Configuration - Modulation GMSK/Repetition


- Modulation GMSK
 - Default Settings
 - Repetition: Continuous
 - Stop Condition: None
 - Statistic Count: 200 bursts
 - Grid: On
- Switching GMSK
 - Default Settings
 - Repetition: Continuous
 - Stop Condition: None
 - Statistic Count: 10 bursts
 - Grid: On
- Modulation 8PSK

Spectrum Configuration - Limit Values



Offset	Min.P.	Limit	Max.P.	Level abs.	Enable
±0.10 MHz	+0.5 dBm	+0.5 dBm	-36.0 dBm	-36.0 dBm	<input checked="" type="checkbox"/>
±0.20 MHz	-30.0 dBm	-30.0 dBm	-36.0 dBm	-36.0 dBm	<input checked="" type="checkbox"/>
±0.25 MHz	-33.0 dBm	-33.0 dBm	-36.0 dBm	-36.0 dBm	<input checked="" type="checkbox"/>
±0.40 MHz	-60.0 dBm	-60.0 dBm	-36.0 dBm	-36.0 dBm	<input checked="" type="checkbox"/>
±0.60 MHz	-60.0 dBm	-60.0 dBm	-51.0 dBm	-51.0 dBm	<input checked="" type="checkbox"/>
±0.80 MHz	-60.0 dBm	-60.0 dBm	-60.0 dBm	-60.0 dBm	<input checked="" type="checkbox"/>
±1.00 MHz	-60.0 dBm	-60.0 dBm	-60.0 dBm	-60.0 dBm	<input checked="" type="checkbox"/>
±1.20 MHz	-60.0 dBm	-60.0 dBm	-60.0 dBm	-60.0 dBm	<input checked="" type="checkbox"/>
±1.40 MHz	-60.0 dBm	-60.0 dBm	-60.0 dBm	-60.0 dBm	<input checked="" type="checkbox"/>

Spectrum Configuration - Measure Points

Point	Offset	Enable
1	±0.10 MHz	<input checked="" type="checkbox"/>
2	±0.20 MHz	<input checked="" type="checkbox"/>
3	±0.25 MHz	<input checked="" type="checkbox"/>
4	±0.40 MHz	<input checked="" type="checkbox"/>
5	±0.60 MHz	<input checked="" type="checkbox"/>
6	±0.80 MHz	<input checked="" type="checkbox"/>
7	±1.00 MHz	<input checked="" type="checkbox"/>
8	±1.20 MHz	<input checked="" type="checkbox"/>
9	±1.40 MHz	<input checked="" type="checkbox"/>
10	±1.60 MHz	<input checked="" type="checkbox"/>




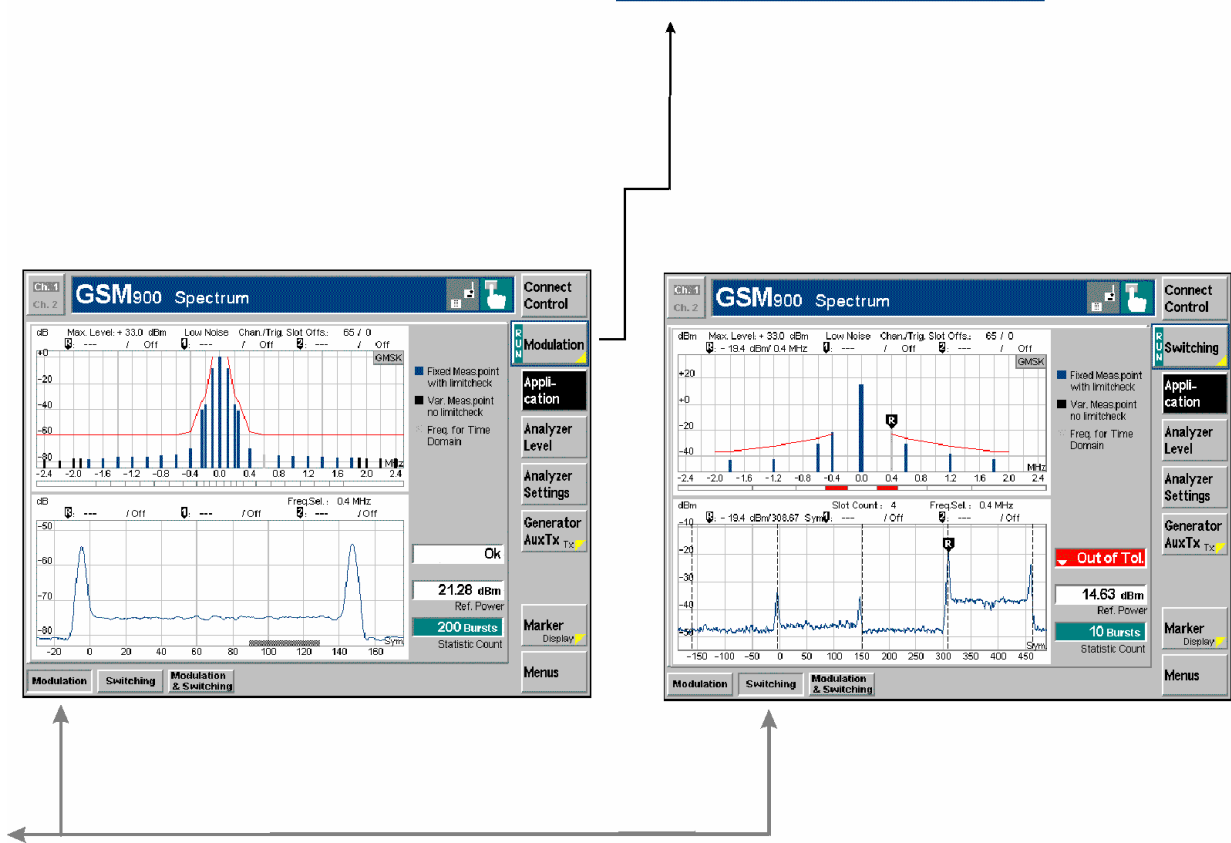


GSM-MS Signalling – General Configurations I

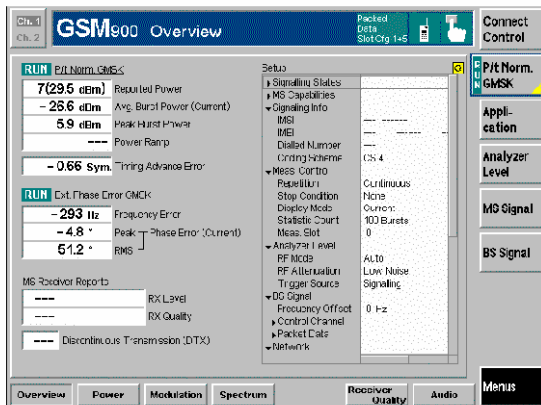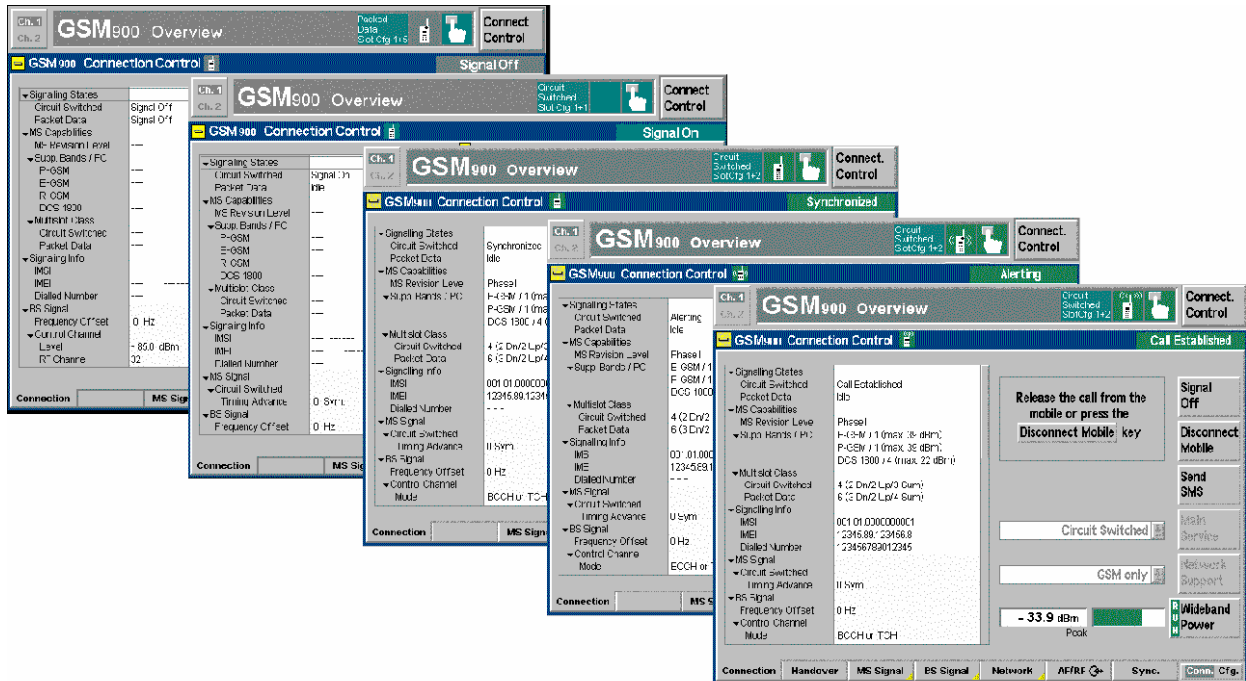


More Connect. Control menus, see next pages

GSM-MS Signalling – General Configurations II

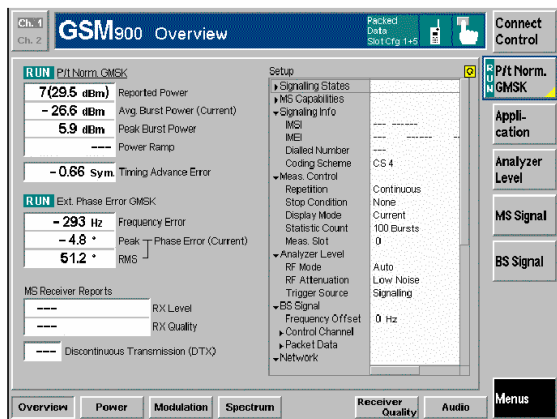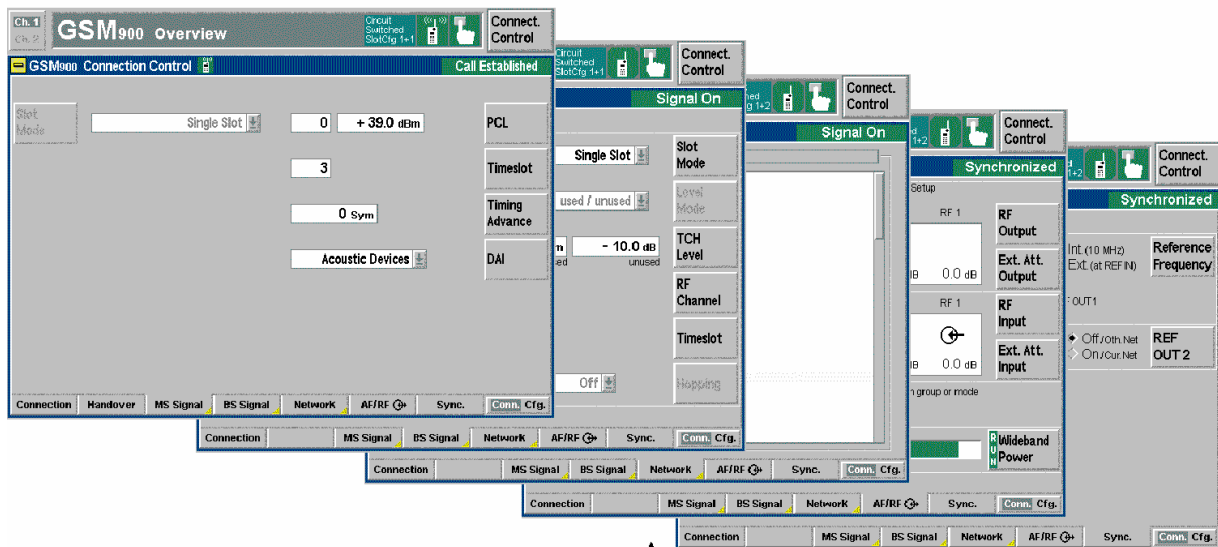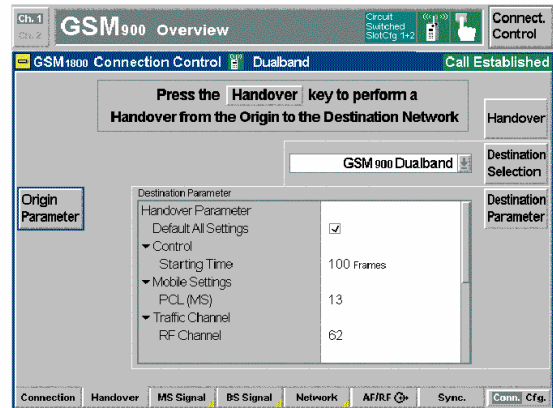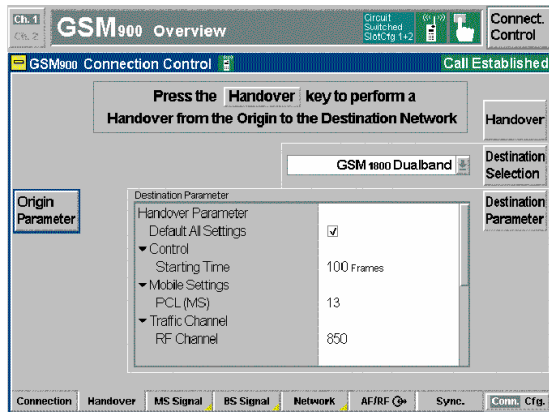


Measurement menus, see next pages

GSM-MS Signalling – Power and Modulation

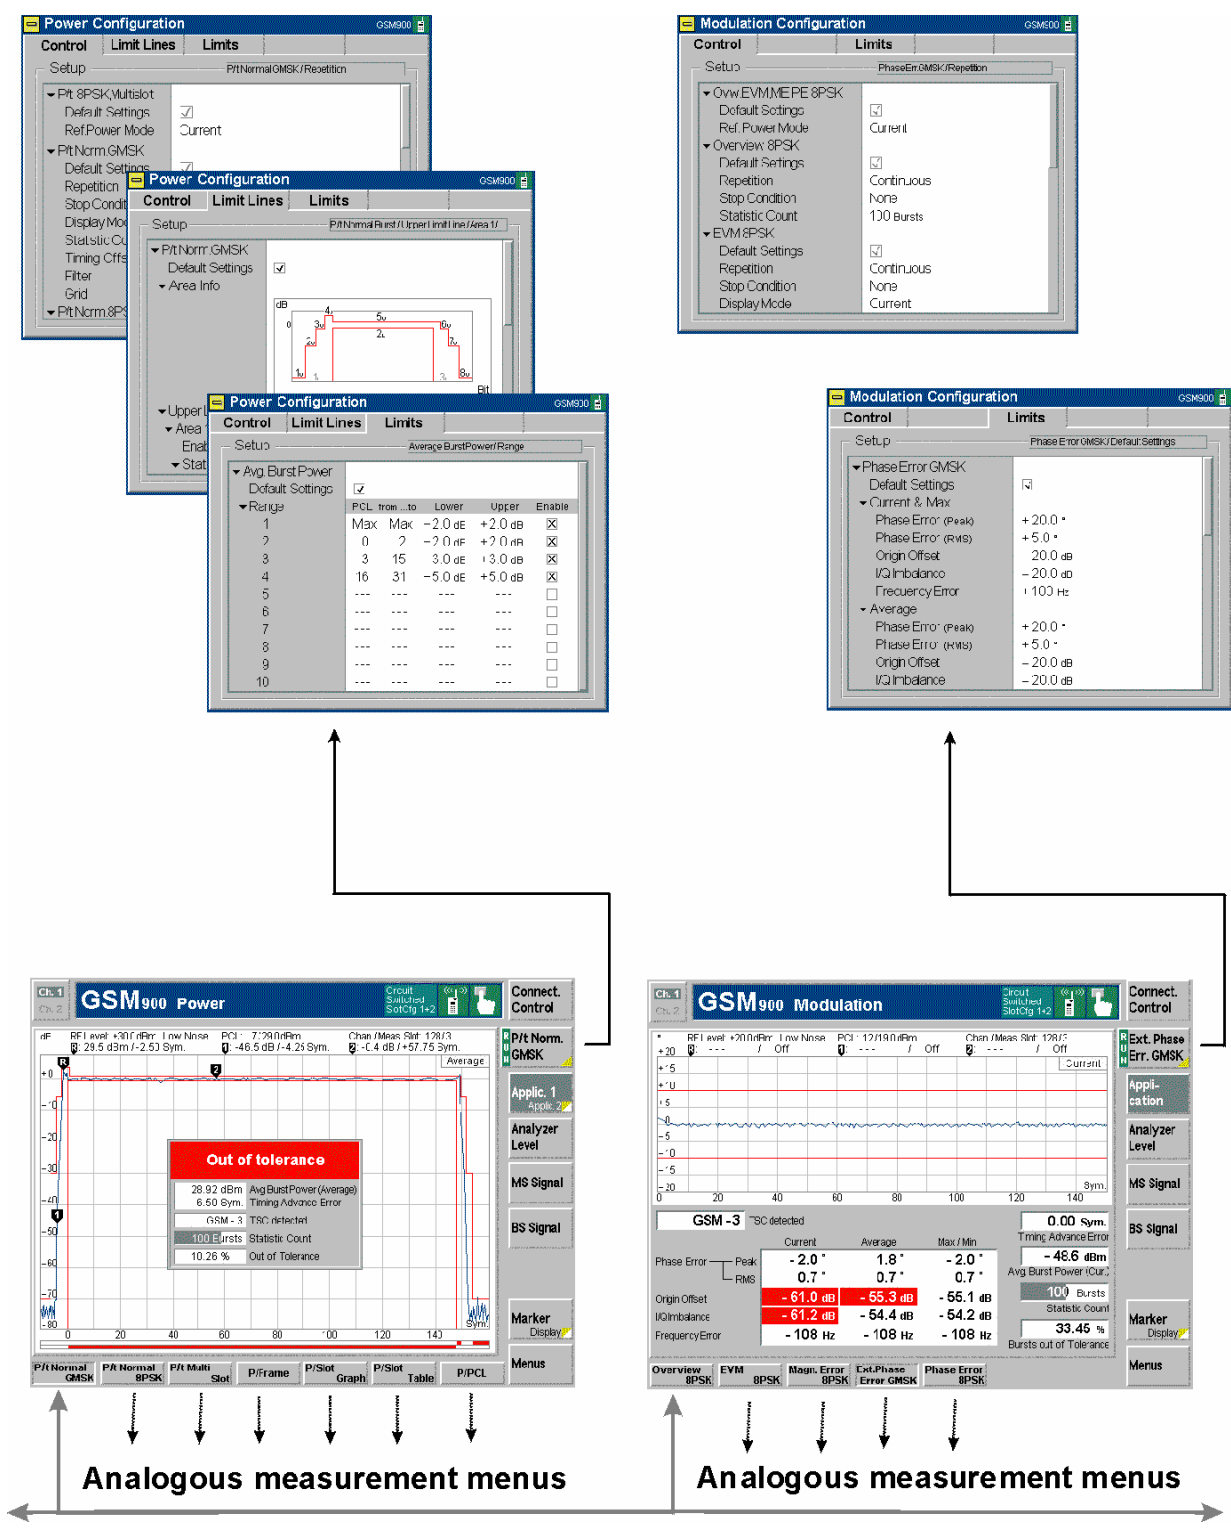

GSM-MS Signalling – Spectrum and Receiver Quality

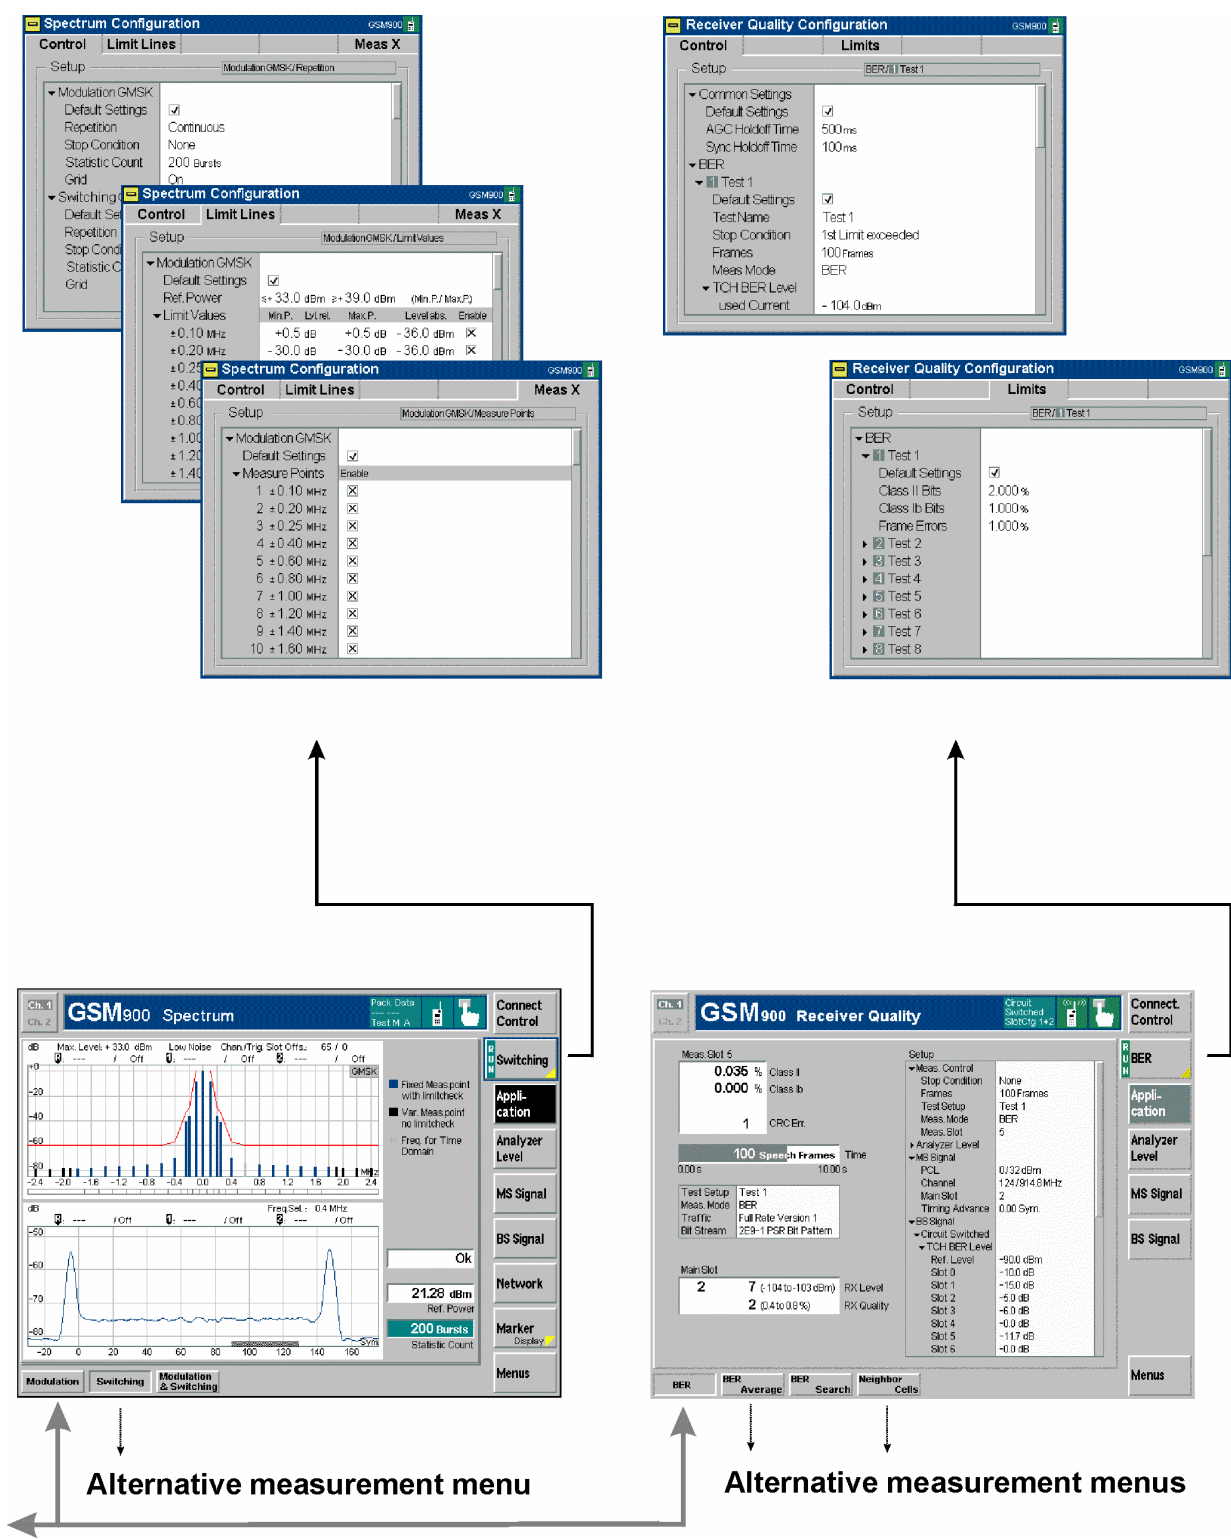

Contents

4 Functions and their Application..... 4.1

GSM Module Tests (Non Signalling)4.2

Analyzer/Generator Menu4.2

 Test Settings4.3

 Measurement Control.....4.4

 Selecting the Application4.5

 Application-Specific Settings4.5

 Measurement Results4.6

Power Measurements4.8

 Measurement Menu (Power)4.9

 Test Settings4.9

 a) Measurement Control.....4.10

 b) Selecting the Measurement Application4.10

 c) P/t Normal GMSK.....4.11

 d) P/t Normal 8PSK4.17

 e) P/t Multislot.....4.17

 f) P/Frame, P/Slot Graph, P/Slot Table4.20

 Measurement Results4.20

 a) P/t Normal GMSK.....4.20

 b) P/t Normal 8PSK4.22

 c) P/t Multislot.....4.23

 d) P/Frame4.24

 e) P/Slot Graph.....4.26

 f) P/Slot Table.....4.27

 Measurement Configurations (Power Configuration).....4.28

 Measurement Control (Power Configuration – Control)4.28

 Limit lines (Power Configuration – Limit Lines)4.32

 Limit Values for Average Burst Power (Power Configuration – Limits)4.37

Modulation Measurements4.38

 Measurement Menu (Modulation – GMSK)4.38

 Test Settings4.39

 Measurement Results4.41

 Measurement Menu (Modulation – 8PSK)4.43

 Test Settings4.45

 Measurement Results4.46

 a) Scalar Results (Overview).....4.47

 b) Test Diagrams (EVM, Phase Error, Magn. Error)4.48

 Measurement Configurations (Modulation Configuration)4.50

 Measurement Control (Modulation Configuration – Control).....4.50

 Tolerance Values (Modulation Configuration – Limits)4.52

Spectrum Measurements4.55

 Measurement Menu (Spectrum)4.56

 Test Settings4.56

 Measurement Results4.58

 a) Spectrum due to Modulation4.58

 b) Spectrum due to Switching4.60

 c) Application Modulation & Switching4.61

 Measurement Configurations (Spectrum).....4.62

 Measurement Control (Spectrum Configuration – Control).....4.62

Tolerance Values (Spectrum Configuration – Limit Lines).....	4.64
a) Spectrum due to Modulation.....	4.64
b) Spectrum due to Switching.....	4.67
Selection of Measurement Points (Spectrum Configuration – Meas X).....	4.69
Audio Measurements	4.71
Connection Control.....	4.72
RF Analyzer Settings (Connection Control – Analyzer)	4.72
Softkey-Oriented Version	4.72
Table-Oriented Version	4.76
Generator Settings (Connection Control – Generator)	4.78
Softkey-Oriented Version	4.78
Table-Oriented Version	4.83
AF/RF Connectors (Connection Control – AF/RF).....	4.83
Reference Frequency (Connection Control – Sync.)	4.86
Trigger (Connection Control – Trigger).....	4.88
I/Q-IF Interface (Connection Control – I/Q-IF)	4.91
GSM Mobile Tests (Signalling).....	4.93
Setting up a Connection	4.93
Signalling Control without Signal (State Signal Off)	4.94
Connection Control with Signal (State Signal On)	4.97
Overview Menu	4.99
Test Settings	4.100
Measurement Results	4.100
Power Measurements	4.101
Measurement Menu (Power)	4.101
Test Settings	4.102
a) P/t Normal GMSK, P/t Normal 8PSK, P/t Access Burst.....	4.104
b) P/t Multislot.....	4.106
c) P/Frame, P/Slot Graph, P/Slot Table	4.107
d) P/PCL.....	4.107
Measurement Results	4.108
a) P/t Normal GMSK.....	4.108
b) P/t Normal 8PSK.....	4.111
c) P/t Multislot.....	4.111
d) P/Frame, P/Slot Graph, P/Slot Table	4.112
e) P/PCL.....	4.112
f) P/t Access Burst.....	4.113
Measurement Configurations (Power Configuration).....	4.115
Measurement Control (Power Configuration – Control)	4.115
Limit Lines (Power Configuration – Limit Lines).....	4.115
Limit Values for Average Burst Power (Power Configuration – Limits)	4.116
Modulation Measurements.....	4.118
Test Settings	4.118
Measurement Results	4.119
Measurement Configurations (Modulation Configuration)	4.119
Spectrum Measurements.....	4.120
Test Settings	4.120
Measurement Results	4.121
Measurement Configurations (Spectrum Configuration)	4.121
Receiver Quality Measurements	4.122
BER Tests of PDTCHs: BLER and DBLER	4.124

Frame Structure for Speech and Data Channels	4.127
Statistical BER Tests	4.129
Measurement Menu (Receiver Quality)	4.133
Test Settings	4.133
Measurement Results	4.136
a) BER and BER Average	4.136
b) BLER	4.139
MS Rcv. Reports – Received Results of the Mobile Phone	4.141
Measurement Configurations (Receiver Quality Configuration).....	4.145
Measurement Control (Receiver Quality Configuration – Control).....	4.145
Upper Limits for Bit Error Rate (Receiver Quality Configuration – Limits)	4.150
Connection Control.....	4.152
Connection Control in the Synchronized State.....	4.152
Connection Control in the Alerting State	4.153
Connection Control with Call Established	4.155
Handover to another Network (Connection Control – Handover)	4.158
RF Signals of the MS (Connection Control – MS Signal).....	4.161
Softkey-oriented Version: MS Single Slot Mode	4.161
Softkey-oriented Version: MS Multislot Mode	4.164
Table-oriented Version.....	4.167
RF Signals of the CMU (Connection Control – BS Signal)	4.168
Softkey-oriented Version: Single Slot Mode.....	4.169
Softkey-oriented Version: Multislot Mode.....	4.172
Table-oriented Version.....	4.174
Network Parameters (Connection Control – Network).....	4.176
Softkey-oriented Version	4.176
Table-oriented Version.....	4.180
AF/RF Connectors (Connection Control – AF/RF).....	4.186
Reference Frequency (Connection Control – Sync.)	4.188
Trigger (Connection Control – Trigger)	4.188
I/Q-IF Interface (Connection Control – I/Q-IF)	4.191
Input Path (Connection Control – Analyzer).....	4.191
Display Control (Connection Control – Misc.)	4.193
Options and Extensions	4.195
GPRS Signalling and EGPRS	4.195
Setup of a Connection.....	4.196
Connection Control – Signal Off	4.198
Connection Control – Idle.....	4.202
Connection Control – Attached	4.203
Connection Control – TBF Established.....	4.204
RF Signals of the MS (Connection Control – MS Signal).....	4.205
RF Signals of the CMU (Connection Control – BS Signal)	4.207
Network Parameters (Connection Control – Network).....	4.208
Adaptive Multi-Rate (AMR) Speech Codec.....	4.213

4 Functions and their Application

This chapter explains in detail all functions for the measurement of mobile stations supporting the GSM standard.

The chapter is divided in two sections corresponding to the two function groups for module tests (*GSM400/850/900/1800/1900-MS Non Signalling*) and for mobile tests including signalling (*GSM400/850/900/1800/1900-MS Signalling*). Within the two sections, the discussion is structured according to the provided measurements and configurations (see graphical overview at the end of chapter 3). In contrast to chapter 6, *Remote Control – Commands*, general measurement configurations are relegated to the end of each section.

The description of each softkey, select or input field is followed by the corresponding remote-control commands. Similarly, the description of the commands in chapter 6 also contains the corresponding menus of the user interface.

Each menu and each panel is briefly described first and then illustrated together with its call button. The menu functions are explained according to the following scheme:

Softkey	Short function definition
Designation of select/input field	<p>Definition of function.</p> <p>Further description of the function: purpose, interaction with other settings, notes...</p> <p><i>Parameter 1</i> Description of parameter 1</p> <p><i>Parameter 2</i> Description of parameter 2</p> <p>...</p> <p>Further description of the parameters: purpose, interaction with other settings, notes...</p> <p>Remote control</p> <p>Remote-control command (long form) Parameter1 Parameter2</p> <p>...</p>

For all numerical values, including their ranges and default settings, please refer to the description of the remote-control commands in chapter 6.

The description of the operating concept is to be found in chapter 3 of the operating manual for the CMU basic instrument; besides, a description of measurement control and the essential settings is given in chapter 3 in the present GSM manual. A comprehensive index listing important keywords and the proper names of all menus, dialog elements and softkeys is appended to the end of this manual.

GSM Module Tests (Non Signalling)

The structure of this section is based on the configuration and measurement groups in function group *GSM400/850/900/1800/1900-MS Non Signalling*, i.e. the menus of the graphical user interface. The menus are described in the following order:

1. Overview of fundamental test settings and measurement results (*Analyzer/Generator* menu)
2. Measurement menus *Power*, *Modulation*, and *Spectrum*: Purpose of the measurements and relation to the test specifications and conformance requirements, description of measurement results, specific measurement configurations
3. General device configurations (*Connection Control*)

The most important menus within function group *GSM400/850/900/1800/1900-MS Non Signalling* are shown in an overview at the end of chapter 3 in the present GSM manual.

Analyzer/Generator Menu

The *Analyzer/Generator* menu displays the essential results of the *P/t Norm. GMSK*, the *Ext. Phase Err. GMSK*, and the *Overview 8PSK* applications and provides access to the most important measurement settings. In particular, it configures the signals of the RF generator and defines the properties of the CMU's RF analyzer.


- The measurement control softkey *P/t Norm. GMSK* changes to *Ext. Phase Err. GMSK* or *Overview 8PSK*, depending on the application selected. This softkey controls the measurement, indicates its status (*RUN* | *HLT* | *OFF*) and opens the configuration menu *Power Configuration* or *Modulation Configuration*. The hotkeys associated to the measurement control softkey define the scope of the *Power* or *Modulation* measurement.
- The other softkeys on the right side are combined with various hotkeys (e.g. the hotkeys *Template PCL*, *Frequency*, *Channel*, *Frequency Offset*, and *Training Sequence* belong to the softkey *Analyzer Settings*). The softkey/hotkey combinations provide test settings and switch over between different measurements.

Types of settings The purpose of the *Analyzer/Generator* menu is to provide quick access to the most common *Power* and *Modulation* measurements and to present the basic measurement results at a glance. The three measurement applications *P/t Norm. GMSK*, *Ext. Phase Err. GMSK*, or *Overview 8PSK* can be selected with the *Application* softkey. The remaining softkeys/hotkey combinations provide two different types of settings:

- General settings are valid for all applications of function group *GSM400/850/900/1800/1900-MS Non Signalling*. Changing general settings in any application will have an impact on all measurements and applications of the function group. All general settings are also provided in the [Connection Control](#) menu (see p. 4.72 ff.). Examples of general settings are the RF input level and trigger settings (softkey *Analyzer Level*) and the configuration of the RF generator (softkey *Generator*).
- Specific settings are relevant for one application only, or they can be set independently for several applications. Changing specific settings in an application will not affect the other measurements and applications of the function group. No specific settings are provided in the [Connection Control](#) menu (see p. 4.72 ff.). Examples of specific settings are the *Repetition* mode (to be set independently for all applications) and *Template PCL* (relevant for the *P/t Norm. GMSK* application only).

Frequency

The *Frequency* hotkey opens the input window *Frequency*.



Input windows indicate the current parameter value (in this case: the current RF input frequency) or a list of the possible settings. Parameters are changed by

- Overwriting/incrementing numerical values (for numerical parameters)
- Selecting from the list of parameters (for select parameters)

Measurement Control

Each *Analyzer/Generator* application is controlled by means of the measurement control softkey below the *Connect. Control* softkey and the associated hotkeys.

P/t Norm.
GMSK

The *P/t Norm. GMSK* softkey (which changes to *Ext. Phase Err. GMSK* or *Overview 8PSK*, depending on the application selected) controls the measurement application and indicates its status (*RUN* | *HLT* | *OFF*). This status can be changed after softkey selection (pressing once) by means of the *ON/OFF* key or the *CONT/HALT* key. The status can be set independently for all three applications.

The applications *P/t Norm. GMSK* and *Ext. Phase Err. GMSK* can be run in parallel, so the results for both applications are displayed simultaneously. Switchover between these two applications does not change the course of the measurement.

The *GMSK* applications and the *Overview 8PSK* suspend each other. The selected measurement status of each application is stored and will be put into effect as soon as the application is activated. In particular, an application in the status *RUN* is restarted each time it is activated.

Remote control

```
INITiate:POWer[:NORMal][:GMSK] etc.
FETCh:POWer[:NORMal][:GMSK]:STATus?
INITiate:MODulation:XPERror[:GMSK] etc.
FETCh:MODulation:XPERror[:GMSK]:STATus?
INITiate:MODulation:OVERview:EPSK etc.
FETCh:MODulation:OVERview:EPSK:STATus?
```

Measurement configuration

The configuration menus for all *Power* and *Modulation* measurements are directly accessible from the *Analyzer/Generator* menu:

- Pressing the *P/t Norm. GMSK* softkey twice opens the popup menu *Power Configuration* (see page 4.28 ff.).
- Pressing the *Ext. Phase Err. GMSK* or the *Overview 8PSK* softkey twice opens the popup menu *Modulation Configuration* (see page 4.50 ff.).

Selecting the Application

Appli- cation

The *Application* softkey selects the measurement application. The measurement control softkey (second softkey below *Connect. Control*) indicates the current application. Some of the hotkeys associated to the different softkeys, the *Setup* table, and the results in the *Analyzer/Generator* menu also vary as a function of the application. The corresponding measurement results are explained in section [Measurement Results](#) on page 4.6 ff.

P/t Normal GMSK

The *P/t Normal GMSK* hotkey selects the power versus time measurement for normal burst signals. See section [Power Measurements](#) on p. 4.8.

Remote control

The *P/t Normal GMSK* application is selected by the keywords [:NORMal] [:GMSK] in the 3rd and 4th level of the POWer commands, e.g. CONFIGure:POWer [:NORMal][:GMSK]...

Ext. Phase Err. GMSK

The *Ext. Phase Error GMSK* hotkey selects the measurement of the modulation accuracy of GMSK modulated signals. See section [Measurement Menu \(Modulation – GMSK\)](#) on p. 4.38.

Remote control

The *Phase Error GMSK* application is selected by the keywords XPERror[:GMSK] in the 3rd and 4th level of the MODulation commands, e.g. CONFIGure:MODulation:XPERror[:GMSK]...

Overview 8PSK

The *Overview 8PSK* hotkey selects the measurement of the power and modulation accuracy of 8PSK modulated signals. See section [Measurement Menu \(Modulation – 8PSK\)](#) on page 4.42.

Remote control

The *Overview 8PSK* application is selected by the keywords OVERview:EPSK in the 3rd and 4th level of the MODulation commands, e.g. CONFIGure:MODulation:OVERview:EPSK...

Application-Specific Settings

As outlined in section [Analyzer/Generator Menu](#) on p. 4.2, some of the hotkey/softkey combinations in the *Analyzer/Generator* menu vary as a function of the application. However, all *Analyzer/Generator* settings are always identical to the corresponding settings in the *Power* and *Modulation* menus. Changes made in the *Analyzer/Generator* menu overwrite the *Power* and *Modulation* settings and vice versa.

Description of settings


- The settings to be made in the *P/t Normal GMSK* application are described in section [P/t Normal GMSK](#) on p. 4.11 ff.
- The settings to be made in the *Ext. Phase Error GMSK* application are described in section [Test Settings](#) on p. 4.39 ff.
- The settings to be made in the *Overview 8PSK* application are described in section [Test Settings](#) on p. 4.45 ff.

Setup table

The *Setup* table in the right half of the *Analyzer/Generator* menu gives an overview of the measurement settings belonging to the current application. It changes when a different application is selected. The roll-key scrolls and expands the *Setup* table.

Measurement Results

The results displayed in the *Analyzer/Generator* menu depend on the selected application:

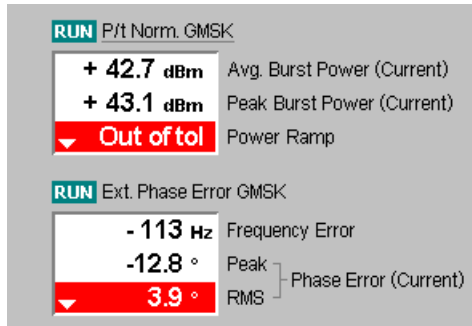

The results for the *P/t Norm. GMSK* and *Ext. Phase Error GMSK* applications are displayed simultaneously because both applications can be run in parallel. The results appear in two output fields, each containing three entries. A header line indicates the name of the application and its measurement status. The current application is underscored.

All results refer to the current burst. No comparison is made between different bursts, so the result does not depend on the statistical settings (e.g. single shot or continuous measurement).

P/t Norm. GMSK The *P/t Norm. GMSK* output field indicates the average and peak burst power as well as the result of the limit check:

Avg. Burst Power (Current) Average power of the current burst in dBm.

Peak Burst Power (Current) Peak power of the current burst in dBm.

Power Ramp Matching of the tolerances by the current burst. The messages that may appear in the list field are self-explanatory.

The *P/t Norm. GMSK* results are also indicated in the info box in the graphical measurement menu *Power* (see section [P/t Normal GMSK](#) on p. 4.20 ff.).

Remote control

```
READ[:SCALar]:POWer[:NORMal][:GMSK]?
FETCh[:SCALar]:POWer[:NORMal][:GMSK]?
SAMPle[:SCALar]:POWer[:NORMal][:GMSK]?
```

Ext. Phase Error GMSK The *Ext. Phase Error GMSK* output field indicates the average (RMS) and peak phase error and the frequency error:

Frequency Error Frequency error of the current burst in Hz.


Peak Phase Error (Current) Extreme value of the phase error (minimum or maximum, whichever has the larger absolute value) of the current burst in degrees. The result can be positive or negative.

RMS Phase Error (Current) RMS phase error of the current burst in degrees.

The *Ext. Phase Err. GMSK* results are also indicated in the graphical measurement menu *Modulation* (see section [Measurement Results](#) on p. 4.41 ff.). For a detailed explanation of the quantities characterizing the GMSK modulation accuracy see section [Measurement Menu \(Modulation – GMSK\)](#) on p. 4.38 f.

Remote control

```
READ[:SCALar]:MODulation:XPERror[:GMSK]?
FETCh[:SCALar]:MODulation:XPERror[:GMSK]?
SAMPle[:SCALar]:MODulation:XPERror[:GMSK]?
```

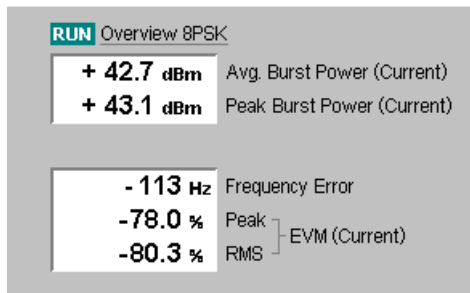

The results for the *Overview 8PSK* application appear in two output fields with two and three rows, respectively. A header line indicates the name of the application and its measurement status.

All results refer to the current burst. No comparison is made between different bursts, so the result does not depend on the statistical settings (e.g. single shot or continuous measurement).

- Overview 8PSK** The *Overview 8PSK* output fields indicate the average and peak burst power, the average (RMS) and peak Error Vector Magnitude (EVM) and the frequency error:
- Avg. Burst Power (Current)* Average power of the current burst in dBm.
 - Peak Burst Power (Current)* Peak power of the current burst in dBm.
 - Frequency Error* Frequency error of the current burst in Hz.
 - Peak EVM (Current)* Extreme value of the Error Vector Magnitude (minimum or maximum, whichever has the larger absolute value) of the current burst in degrees. The result can be positive or negative.
 - RMS EVM (Current)* RMS-averaged EVM of the current burst in degrees. Quadratic averaging complies with the GSM standard.

The *Overview 8PSK* results are also indicated in the measurement menu *Modulation* (see section [Scalar Results \(Overview\)](#) on p. 4.47). For a detailed explanation of the quantities characterizing the 8PSK modulation accuracy see section [Measurement Menu \(Modulation – 8PSK\)](#) on p. 4.43 f.

```
Remote control
READ[:SCALar]:MODulation:OVERview:EPSK?
FETCh[:SCALar]:MODulation:OVERview:EPSK?
SAMPle[:SCALar]:MODulation:OVERview:EPSK?
```

Power Measurements

The menu group *Power* is designed to measure the RF output power of the MS transmitter. The power can be analyzed as a function of time in a single timeslot or in up to 4 consecutive timeslots. Furthermore, the CMU evaluates the average power and its evolution over several consecutive slots or frames. The different measurements are treated as different applications; the results are displayed in separate *Power* measurement menus. The popup menu *Power Configuration* is used to configure the measurements.

The different types of Power measurements are treated as applications which can be selected with the *Application* softkey.

P/t Normal	<p>The <i>P/t Normal ...</i> (burst power versus time) application measures the output power of the DUT over one burst period. The measurement curve obtained can be further processed to determine an average, minimum, or maximum result and calculate the average over the whole burst. <i>P/t</i> measurements are provided for normal bursts at GMSK or 8MSK modulation.</p> <p>In addition to the burst power measurement, a limit check with tolerances depending on the RF output power of the DUT and the modulation scheme is performed; see section Limit lines (Power Configuration – Limit Lines) on p. 4.32 ff.</p>
P/t Multislot	<p>The <i>P/t Multislot</i> application measures the output power of the DUT over up to 653 symbol periods, corresponding to 4 timeslots plus an appropriate display margin. This measurement is particularly suited to GSM multislot solutions like GPRS or circuit-switched HSCSD where several timeslots can be allocated to a single connection.</p> <p>The multislot measurement curve can be further processed to determine an average, minimum, or maximum result and calculate the average power over each burst measured. <i>P/t Multislot</i> measurements are provided both in <i>Non Signalling</i> and in <i>Signalling</i> test mode and for normal bursts at GMSK and 8PSK modulation. In addition to the burst power measurement, a limit check with tolerances depending on the RF output power of the DUT and the modulation scheme is performed; see section Limit lines (Power Configuration – Limit Lines) on p. 4.32 ff.</p>
P/Slot	<p>The <i>P/Slot</i> applications measure the average burst power in a series of consecutive timeslots. The average is taken over a section of the useful part of the burst; it is not correlated to the training sequence. The result is displayed either in a bar graph (all eight timeslots of a single TDMA frame, <i>P/Slot Graph</i> application) or in a table (up to 512 timeslots, corresponding to a total test time of approx. 0.3 s, <i>P/Slot Table</i> application).</p>
P/Frame	<p>The <i>P/Frame</i> measurement represents a fast and convenient method of monitoring the behavior of the average burst power in a particular timeslot over a whole range of consecutive TDMA frames. The measurement extends over a range of up to 256 frames, corresponding to test times of less than 1.2 s. The average is obtained like in the case of <i>P/Slot</i> measurements.</p> <p>The <i>P/Slot</i> and the <i>P/Frame</i> measurement complement the <i>P/t</i> measurement where a large number of bursts can be measured but the output of the average burst power is restricted to current, average, minimum or maximum values within a statistics cycle (see <i>Display Mode</i> setting below). <i>P/Slot</i> and <i>P/Frame</i> returns all values; the applications are suitable whenever the behavior or the stability of the average burst power in particular timeslots are to be monitored over an extended time range in R&D.</p>
RF Level	<p>In all applications, the CMU measures at arbitrary RF input levels provided that they are within the allowed range of the RF input connectors.</p>
Signalling mode	<p>Note: <i>In Signalling mode, where the CMU is able to test a broad range of signalling issues, two further measurement applications are available (see section Power Measurements on page 4.101 ff):</i></p> <p><i>The average burst power can be measured as a function of the PCL of the mobile phone (application P/PCL).</i></p> <p><i>Access bursts from the mobile station can be measured (see also section Limit lines (Power Configuration – Limit Lines) on page 4.32 ff.</i></p>

Measurement Menu (Power)

The graphical measurement menu *Power* shows the results of the burst analysis (power measurement).

- The measurement control softkey *P/t Norm. GMSK*, which changes to *P/t Norm. 8PSK*, *P/Frame* etc., depending on the power measurement application and on the modulation scheme selected) controls the power measurement, indicates its status (*RUN* | *HLT* | *OFF*) and opens the configuration menu *Power Configuration*. The hotkeys associated to the measurement control softkey define the scope of the *Power* measurement.
- The other softkeys to the right of the test diagram are combined with various hotkeys (e.g. the hotkeys *Template PCL*, *Frequency*, *Channel*, *Frequency Offset*, and *Training Sequence* belong to the softkey *Analyzer Settings*). The softkey/hotkey combinations provide test settings and switch over between different measurements.

The measurement menu *Power* is opened from the main menu *Menu Select* (with the associated key at the front of the instrument) or using the *Menus* softkey and the *Power* hotkey.

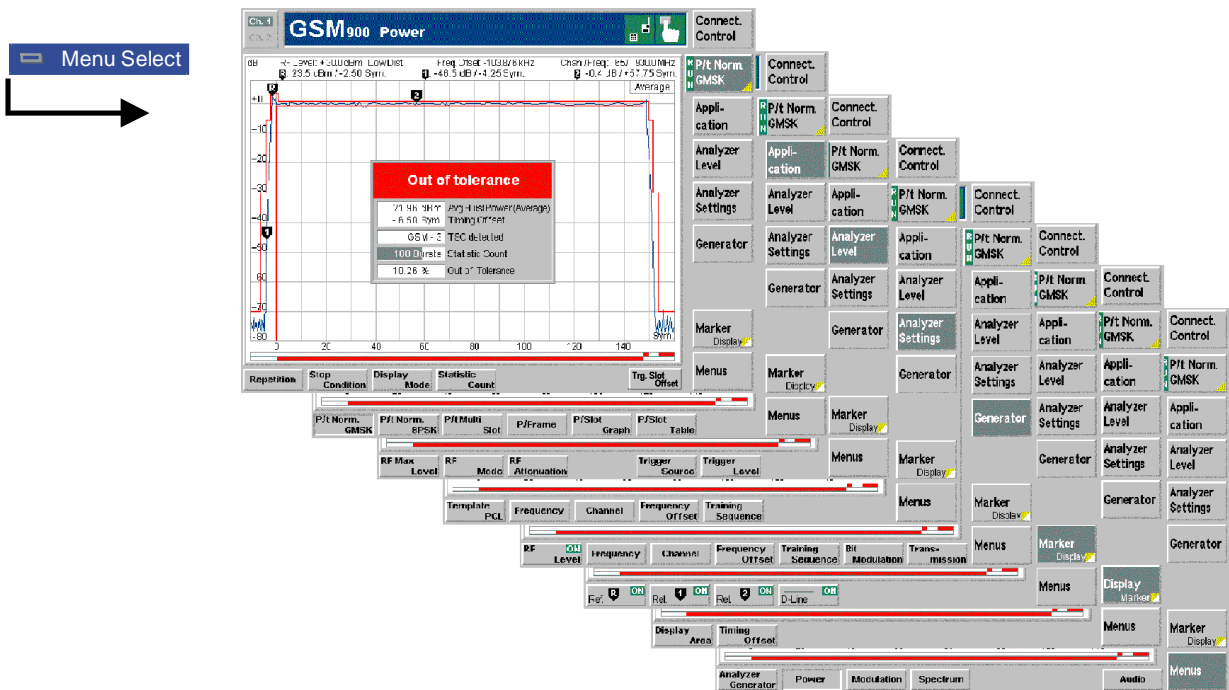


Fig. 4-2 Measurement menu Power – P/t Norm. GMSK

Test Settings

The basic settings for the *Power* measurement are directly accessible from the measurement menu via softkey/hotkey combinations. The entry of values is described in section *Test Settings* on page 4.3.

Many of the basic settings are also accessible from the *Power Configuration* popup menu. They are explained in more detail in section *Measurement Configurations (Power Configuration)* on page 4.28 ff.

a) Measurement Control

Each *Power* application is controlled by means of the measurement control softkey below the *Connect*. *Control* softkey and the associated hotkeys.

**P/t Norm.
GMSK**

The *P/t Norm. GMSK* measurement control softkey (which changes to *P/t Norm. 8PSK* etc., depending on the application selected) controls the power measurement application and indicates its status (*RUN* | *HLT* | *OFF*). This status can be changed after softkey selection (pressing once) by means of the *ON/OFF* key or the *CONT/HALT* key. The status can be set independently for all *Power* applications.

The active *Power* application generally suspends the other applications. On switchover between different applications, the selected measurement status of each application is stored and will be put into effect as soon as the application is activated. In particular, an application in the status *RUN* is restarted each time it is activated.

Remote control

```
INITiate:<Application>
ABORt:<Application>
STOP:<Application>
CONTinue:<Application>
FETCh:<Application>:STATus?
<Application> = POWer:NORMAl[:GMSK] etc.
```

**Measurement
configuration**

Pressing the *P/t Norm. GMSK* softkey twice opens the popup menu *Power Configuration* (see page 4.28). Besides, the measurement control softkey provides hotkeys to define the scope of the measurement. All these settings are described in more detail in section *Measurement Control (Power Configuration – Control)* on page 4.28 ff.

b) Selecting the Measurement Application

**Appli-
cation**

The Application softkey selects the power measurement application.

The applications *P/t Normal <Mod_Type>* depend on the modulation scheme of the analyzed signal. In the *P/t Multislot* application, the modulation in each measured slot can be defined separately. The *P/Frame*, *P/Slot Graph*, and *P/Slot Table* menus and settings do not depend on the modulation scheme.

The *Power* measurement menu and the measurement control softkey change with the application selected; the results are explained in section *Measurement Results* on page 4.20 ff.

**P/t Normal
GMSK**

The *P/t Normal GMSK* hotkey selects the power versus time measurement for GMSK modulated normal burst signals (see explanation of GSM burst structure at the beginning of section *Limit lines (Power Configuration – Limit Lines)* on page 4.32).

Remote control:

```
The P/t Normal GMSK application is selected by the keywords [:NORMAl] [:GMSK]
in the 3rd and 4th level of the POWer commands, e.g. CONFigure:POWer
[:NORMAl][:GMSK]...
```

**P/t Normal
8PSK**

The *P/t Normal 8PSK* hotkey selects the power versus time measurement for 8PSK modulated normal burst signals (see explanation of GSM burst structure at the beginning of section *Limit lines (Power Configuration – Limit Lines)* on page 4.32).

Remote control:

The *P/t Normal 8PSK* application is selected by the keywords [:NORMAl] :EPsK in the 3rd and 4th level of the POWer commands, e.g. CONFigure:POWer [:NORMAl] :EPsK...

**P/t
Multislot**

The *P/t Multislot* hotkey selects the power versus time measurement for multislot configurations (see explanation of GSM burst structure at the beginning of section [Limit lines \(Power Configuration – Limit Lines\)](#) on page 4.32).

Remote control:

The *P/t Multislot* application is selected by the 3rd level keyword :MSLot in the POWer commands, e.g. CONFigure:POWer:MSLot...

P/Frame

The *P/Frame* hotkey selects the power versus frame measurement. In this application, the average burst power in a particular timeslot is measured over a range of consecutive TDMA frames and displayed in tabular form.

Remote control:

The *P/Frame* application is selected by the keyword :FRAMe in the 3rd level of the POWer commands, e.g. CONFigure:POWer:FRAMe...

**P/Slot
Graph**

The *P/Slot Graph* hotkey selects the power versus slot measurement with graphical display. In this application, the average burst power in all eight timeslots of a TDMA frame is measured and displayed in a bar graph.

Remote control:

The *P/Slot Graph* application is selected by the keyword :SLOT in the 3rd level of the POWer commands, e.g. CONFigure:POWer:SLOT...

**P/Slot
Table**

The *P/Slot Table* hotkey selects the power versus slot measurement with tabular display. In this application, the average burst power in all eight timeslots of several consecutive TDMA frames is measured and displayed in a table.

Remote control:

The *P/Slot Table* application is selected by the keyword :XSLot in the 3rd level of the POWer commands, e.g. CONFigure:POWer:XSLot...

Some of the following test settings depend on the selected application.

c) P/t Normal GMSK

All softkeys and hotkeys in the *P/t Normal GMSK* application are shown in [Fig. 4-2](#) on page 4.9.

**P/t Norm.
GMSK**

The *P/t Norm. GMSK* measurement control softkey controls the *P/t Norm. GMSK* measurement; see detailed explanation in section [Measurement Control](#) on p. 4.10. Besides, the measurement control softkey provides hotkeys to define the scope of the measurement. All these settings are described in more detail in section [Measurement Control \(Power Configuration – Control\)](#) on page 4.28 ff.

Repetition

The hotkey *Repetition* determines the repetition mode of the measurement (*Single Shot* or *Continuous* measurement).

Remote control

CONFigure:POWer[:NORMAl][:GMSK] :CONTrol:REPetition
<Repetition>, <StopCond>, <Stepmode>

Stop Condition

The *Stop Condition* hotkey sets a stop condition for the measurement (*None* or *On Limit Failure*).

Remote control

```
CONFigure:POWer[:NORMal][:GMSK]:CONTRol:REPetition
    <Repetition> , <StopCond> , <Stepmode>
```

Display Mode

The hotkey *Display Mode* determines the display mode of the measurement curve.

Remote control

```
no display mode set, the four measurement curves are accessible via
FETCh:ARRAy:POWer[:NORMal][:GMSK][:CURRent]?
FETCh:ARRAy:POWer[:NORMal][:GMSK]:MINimum?
FETCh:ARRAy:POWer[:NORMal][:GMSK]:MAXimum?
FETCh:ARRAy:POWer[:NORMal][:GMSK]:AVERAge? etc.
```

Statistic Count

The *Statistic Count* hotkey defines the number of bursts per statistic cycle.

Remote control

```
CONFigure:POWer[:NORMal][:GMSK]:CONTRol
    <Mode> , 1 ... 1000 | NONE
```

Trig. Slot Offset

The *Trig. Slot Offset* hotkey defines a delay time (integer number of GSM timeslots) between the trigger time and the measured timeslot (see [Fig. 4-3](#) on p. 4.18). In the default setting (*Trig. Slot Offset = 0*) the measured timeslot is determined by the trigger time. By varying the *Trig. Slot Offset*, an unknown GSM signal can be analyzed timeslot by timeslot at constant trigger settings.

Remote control

```
CONFigure:RFANalyzer:MCONTRol:TSoFFset 0 to 7
```

Analyzer Level

The *Analyzer Level* softkey controls the level in the RF input signal path and provides the trigger settings for the measurements.

The input level and trigger settings are also provided in the *Analyzer* tab of the *Connection Control* menu. For a detailed description see section [Table-Oriented Version](#) on p. 4.76 ff.

RF Max. Level

The *RF Max. Level* hotkey sets the maximum expected input level in dBm.

Remote control

```
[SENSE:]LEVel:MAXimum <Level>
```

RF Mode

The *RF Mode* hotkey determines how the input level is defined.

Manual Manual input via *RF Max. Level* hotkey
Auto Automatic setting according to the average burst power of the applied signal.

Remote control

```
[SENSE:]LEVel:MODE    MANual | AUTomatic
```

**RF
Attenuation**

The *RF Attenuation* hotkey selects a strategy for tuning the RF analyzer.

- Normal* Input signal is kept unchanged
- Low Noise* Enhanced mixer level. This setting ensures the full dynamic range of the CMU and is therefore recommended for *Power* and *Spectrum* measurements.
- Low Distortion* Decreased mixer level. This setting ensures a high transmission reserve and is therefore recommended for *Modulation* measurements.

Remote control
[SENSE:]LEVel:ATTenuation NORMAL | LNOise | LDISTortion

**Trigger
Source**

The *Trigger Source* hotkey determines the trigger condition.

- Free Run* Trigger by TDMA timing of the incoming burst
- RF Power* Trigger on power (rising edge) of incoming burst, wideband trigger at the Front End
- IF Power* Narrow-band trigger
- Extern* External trigger signal fed in via connector AUX3 (pin 8)

Note: *The Free Run trigger generally slows down the measurements. It must not be used in the P/t Multislot, P/Frame, P/Slot Graph, and P/Slot Table applications.*

Remote control
TRIGger[:SEquence]:SOURce
FRUN | RFPOWER | IFPOWER | EXTERN

**Trigger
Level**

The *Trigger Level* hotkey determines the trigger level. This softkey is enabled for trigger source *RF Power* or *IF Power* only.

Remote control
TRIGger[:SEquence]:THReshold LOW | MEdium | HIGH

**Analyzer
Settings**

The *Analyzer Settings* softkey determines the template PCL, frequency and training sequence of the RF signal analyzed.

**Template
PCL**

The *Template PCL* hotkey sets a power control level to correct the limit lines.

The template PCL merely serves to define a dynamic correction to the limit lines and the limits of the average burst power in analogy to the correction in the *Signalling* mode. It is not related to the transmit power of the mobile station under test.


Template PCLs between 0 and 31 may be selected; see tables in section *Limit Values for Average Burst Power* on page 4.116 ff.

Remote control
CONFigure:RFANalyzer:TPCL <PCL>

The following analyzer settings are described in more detail in section [RF Analyzer Settings \(Connection Control – Analyzer\)](#) on p. 4.72.

Frequency	<p>The <i>Frequency</i> hotkey defines the frequency of the analyzed signal in MHz.</p> <p>Remote control [SENSe:]RFANalyzer:CHANnel <Number></p>
Channel	<p>The <i>Channel</i> hotkey defines the GSM channel number of the analyzed signal.</p> <p>Remote control [SENSe:]RFANalyzer:CHANnel <Number></p>
Frequency Offset	<p>The <i>Frequency Offset</i> hotkey defines a frequency offset relative to the signal frequency or GSM channel frequency defined with the <i>Frequency</i> or <i>Channel</i> hotkeys.</p> <p>Remote control [SENSe:]RFANalyzer:FREQuency:OFFSet <Offset></p>
Training Sequence	<p>The <i>Training Sequence</i> hotkey defines a training sequence for the analyzed signal.</p> <p>Remote control [SENSe:]RFANalyzer:TSEquence <TSC></p>
Generator Settings	<p>The <i>Generator Settings</i> softkey configures the RF signal generated.</p> <p>The following generator settings are described in more detail in section Generator Settings (Connection Control – Generator) on p. 4.78.</p>
RF Level	<p>The <i>RF Level</i> hotkey defines the generator level in the used timeslot in dBm.</p> <p>Remote control SOURce:RFGenerator:LEVel:UTIMeslot <Level></p>
Frequency	<p>The <i>Frequency</i> hotkey defines the frequency of the RF generator signal in MHz.</p> <p>Remote control SOURce:RFGenerator:FREQuency[:CHANnel] <Frequency></p>
Channel	<p>The <i>Channel</i> hotkey defines the GSM channel number of the generator signal.</p> <p>Remote control SOURce:RFGenerator:FREQuency[:CHANnel] <ChannelCH></p>
Frequency Offset	<p>The <i>Frequency Offset</i> hotkey defines a frequency offset relative to the signal frequency or GSM channel frequency defined with the <i>Frequency</i> or <i>Channel</i> hotkeys.</p> <p>Remote control SOURce:RFGenerator:FM:DEVIation <Offset></p>
Training Sequence	<p>The <i>Training Sequence</i> hotkey selects a training sequence for the generator signal.</p>

Remote control
 CONFigure:RFGenerator:MODulation:TSEquence:SElection <TSC>



The *Bit Modulation* hotkey selects a bit sequence to be modulated onto the generator signal.

Remote control
 CONFigure:RFGenerator:MODulation:BIT:SElection <Sequence>



The *Transmission* hotkey determines the shape of the generator signal (burst signal or continuous wave with constant level). An 8PSK-modulated signal is always bursted.

Remote control
 CONFigure:RFGenerator:MODulation:TRANsmission <Mode>



The *Marker/Display* softkey positions up to 3 markers and a D-line in the test diagram and displays their values.

If pressed once again, the selected *Marker/Display* softkey changes to the *Display/Marker* softkey, see below.


Markers are graphical tools for marking points on the measurement curve and for numerical output of measured values. The measurement menu Power provides a reference marker and two further markers which permit to measure differences (delta marker 1 and 2).

The coordinates of the three markers are indicated in the format Ordinate value (level)/abscissa value (time) in a parameter line above the test diagram. The position of the reference marker is expressed in absolute units (level in dBm and time in symbol periods), the delta marker by absolute or relative values (relative level in dB or time differences from the reference marker).

D-line The D-line (display line) is a horizontal line that can be positioned on the test diagram at will to mark and read out level values.



The hotkey *Ref. R* switches the reference marker on or off (use the *ON/OFF* key).


The reference marker is represented by the symbol  in the test diagram. The marker position (abscissa) is defined in the input field *Ref. Marker R*. The marker can be positioned to arbitrary time values. It is switched off in the default setting (*Off*). The marker level is given by the measurement curve at the marker position.

The position of all markers can be varied using the rollkey.

Remote control
 No command, screen configuration only.



The *Rel. 1* hotkey switches the delta marker 1 on or off (use the *ON/OFF* key).


The delta marker 1 is represented by the symbol  in the test diagram. The marker position (abscissa) is defined in the input field *Rel. Marker 1*. The marker can be positioned to arbitrary time values. If its position is outside the diagram area it will be invisible and its coordinates will be "<abscissa_value> / - - -". The marker is switched off in the default setting (*Off*). The marker level is given by the measurement curve at the marker position.

The toggle switch *Rel 1 Config* pops up when the hotkey is pressed for the second time. It defines whether the position of delta marker 1 is measured and indicated in absolute units (dBm) or relative to the reference marker.

Remote control
No command, screen configuration only.



The *Rel. 2* hotkey switches the delta marker 2 on or off (use the *ON/OFF* key). Functions and remote control are analogous to delta marker 1.



The *D-Line* hotkey switches the D-line in the test diagram on or off. The D-line is a horizontal, colored auxiliary line in the test diagram and is used for marking a level value and for measuring level differences. The level (ordinate) is determined in the input field *D-Line* and indicated on the D-line. The permissible value range is the diagram area, the default setting is Off.

The switch *D-Line Config.* is opened by pressing *D-Line* twice and determines whether the D-line level is expressed in absolute units (in dBm, setting absolute) or relative to the Max. Level (in dB, setting relative).

Remote control
No command, screen configuration only.



The *Display/Marker* softkey zooms or shifts the graphical display. It is selected by pressing the *Marker/Display* softkey twice. If pressed once again, the selected *Display/Marker* softkey changes back to the *Marker/Display* softkey, see above.



The *Display Area* hotkey selects the displayed screen area. It is possible to select either the complete burst (see [Fig. 4-11](#)), or zoom in to a particular area:

<i>Full Range</i>	Display of complete burst in the time range –10 symbols to 157 symbols and levels between –80 dBc and 10 dBc
<i>Useful Part</i>	Full time range, measurement curve magnified around the reference level
<i>Left Upper Corner</i>	Measurement curve magnified around the left upper corner
<i>Rising Edge</i>	Full level range, time axis from –10 symbols to 10 symbols
<i>Right Upper Corner</i>	Measurement curve magnified around the right upper corner
<i>Falling Edge</i>	Full level range, time axis from 139 symbols to 157 symbols

The screen setting and the measurement do not affect each other.

Remote control
No command, screen configuration only.



The *Timing Offset* hotkey shifts the burst by the entered number of symbols.

The burst is shifted relative to the time axis and the tolerance template for the burst analysis, see section [Limit lines \(Power Configuration – Limit Lines\)](#) on page 4.32. Therefore, the value of *Timing Bit Offset* affects the result of the tolerance check.

Remote control
`CONFigure:POWer[:NORMal][:GMSK]:TOFFset <Offset>`
`CONFigure:POWer[:NORMal]:EPSK:TOFFset <Offset>`

Menus

The *Menus* softkey displays the hotkey bar for changing to the other measurement groups. The main measurement menu within each group is directly opened by pressing the associated hotkey.

d) P/t Normal 8PSK

The *P/t Normal 8PSK* test settings differ from the *P/t Normal GMSK* settings (see p. 4.11 ff.) in two softkeys.

**P/t Norm.
8PSK**

The *P/t Norm. 8PSK* measurement control softkey controls the *P/t Norm. 8PSK* measurement; see detailed explanation in section [Measurement Control](#) on p. 4.10. Besides, the measurement control softkey provides hotkeys to define the scope of the measurement. All these settings are described in more detail in section [Measurement Control \(Power Configuration – Control\)](#) on page 4.28 ff. The *Repetition*, *Stop Condition*, *Display Mode*, and *Statistic Count* softkeys behave as described in section *P/t Normal GMSK* on page 4.11 ff. In the *P/t Norm. 8PSK* application, there is one additional hotkey:

**Ref Power
Mode**

The *Ref. Power Mode* hotkey defines whether the reference power (0-dB line) in the measurement diagram is derived from the average power of the current measurement curve (*Current*), the average power of the average curve (*Average*), or the average power of the current curve with an additional correction for the deviation due to the data modulated onto the RF signal (*Data Compens.*). See section [Measurement Control \(Power Configuration – Control\)](#) on page 4.28.

Remote control

```
CONFigure:POWer[:NORMal]:EPSK:CONTRol:RPMoDe
  CURRent | AVERAge | DCOMpens
```

8PSK and GMSK symbol periods are of equal length, see explanation of GSM burst structure at the beginning of section [Limit lines \(Power Configuration – Limit Lines\)](#) on page 4.32.

e) P/t Multislot

The *P/t Multislot* test settings differ from the *P/t Normal GMSK* settings (see p. 4.11 ff.) in several respects. Most of the differences are related to the configuration of the measurement and display range.

Note: *No Free Run trigger must be used in the P/t Multislot, P/Frame, P/Slot Graph, and P/Slot Table applications.*

Multislot

The *Multislot* measurement control softkey controls the *P/t Multislot* measurement; see detailed explanation in section [Measurement Control](#) on p. 4.10. Besides, the measurement control softkey provides hotkeys to define the scope of the measurement. Most of these settings are described in more detail in section [Measurement Control \(Power Configuration – Control\)](#) on page 4.28 ff. The *Repetition*, *Stop Condition*, *Display Mode*, and *Statistic Count* softkeys behave as described in section *P/t Normal GMSK* on page 4.11 ff. In the *P/t Multislot* application, there are two additional hotkeys:

Slot Count

The hotkey *Slot Count* defines an integer number of timeslots to be measured. The actual measured time range is larger than the integer number of slots because it comprises an additional display margin; for details see remote control command description. The relation between the measured time range and the trigger time is given by the *Trig. Slot Offset*; see Fig. 4-3 on p. 4.18.

The display range is adapted to the *Slot Count* settings by default but can be modified by means of the *Display Marker – Time Scale* and *Display Marker – Default Scale* hotkeys. Changing the *Slot Count* overrides the *Time Scale* settings and restores the default display range.

Remote control
 CONFigure:POWer:MSLot:SCount

Trig. Slot Offset

The hotkey *Trig. Slot Offset* defines a delay time (integer number of GSM timeslots) between the trigger time and the timeslot that is measured in all *Multislot* configurations. In the graphical display, this measured timeslot is marked by *Trg. Slot Offs. 0*.

- If *Slot Count* is equal to 1, then the measurement extends over the measured timeslot plus an appropriate display margin.
- If *Slot Count* is equal to 2, then the timeslot preceding the measured timeslot (*Trg. Slot Offs. -1*) and the measured slot (*Trg. Slot Offs. 0*) are measured.
- If *Slot Count* is equal to 3 (4), then *Trg. Slot Offs. -1*, *Trg. Slot Offs. 0* and the next timeslot (the two next timeslots, *Trg. Slot Offs. +1* and *Trg. Slot Offs. +2*) are measured.

The beginning of the measured timeslot defines the origin (symbol no. 0) of the time axis. The measured timeslot is also the reference for the *Timing* measurement; it must be active to obtain valid measurement results.

The relation between the *Trig. Slot Offset*, the *Slot Count* and the measured time range for a signal with three active timeslots is shown in Fig. 4-3 below.

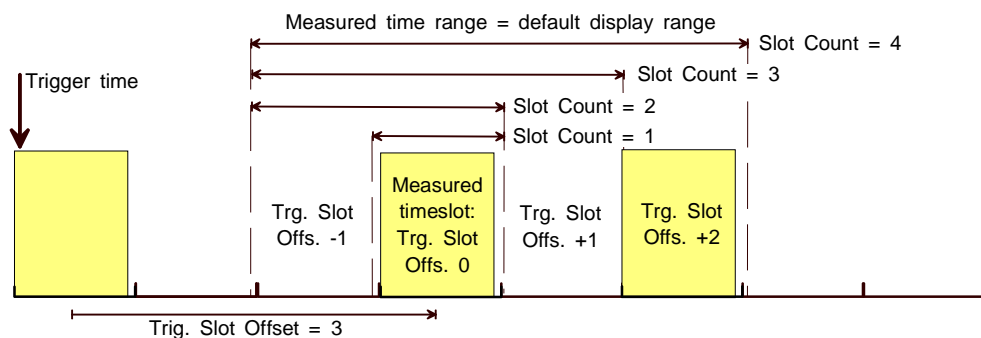


Fig. 4-3 Trigger slot offset and slot count (for Trig. Slot Offset = 3)

The display range is adapted to the *Slot Count* and *Trig. Slot Offset* settings by default but can be modified by means of the *Display Marker – Time Scale* and *Display Marker – Default Scale* hotkeys.

Remote control
 CONFigure:RFANalyzer:MCONtrol:TSoFFset 0 to 7

Display Marker

The *Display/Marker* softkey, which is activated by pressing the selected *Marker/Display* softkey again, configures the graphical display.

Info Box	<p>The hotkey <i>Info Box</i> switches the info boxes for all displayed timeslots on or off. For a description of the info boxes see section P/t Multislot on p. 4.23 ff.</p> <p>Remote control No command, display configuration only</p>
Timing Offset	<p>The <i>Timing Offset</i> hotkey shifts the burst by the entered number of symbol periods, e.g. to compensate for a known, constant timing error of the MS. See section Measurement Control (Power Configuration – Control) on p. 4.28 ff.</p> <p>Remote control CONFigure:POWer:MSLot:TOffset</p>
Modulation View	<p>The hotkey <i>Modulation View</i> defines the expected modulation scheme in all four timeslots that can be measured and adjusts the power/time template. To obtain a valid measurement result, the actual modulation in all measured slots (see Fig. 4-3 on p. 4.18) must be compatible with the <i>Modulation View</i> settings. See section Measurement Control (Power Configuration – Control) on p. 4.28 ff.</p> <p>Remote control CONFigure:POWer:MSLot:MView</p>
Level Scale	<p>The <i>Level Scale</i> hotkey defines a maximum RF level in dBm (<i>Max</i>) and a level range in dB (<i>Span</i>) that will be displayed in the graphical diagram and thus determines the scale of the y axis.</p> <p>Remote control No command, display configuration only</p>
Time Scale	<p>The <i>Time Scale</i> hotkey defines the start time (<i>Start</i>) and the total time interval (<i>Span</i>) that will be displayed in the graphical diagram and thus determines the scale of the x axis.</p> <p>Both values are expressed in symbol periods. 1 symbol corresponds to approx. 3.69 μs so that 1 timeslot comprises 156 $\frac{1}{4}$ symbols. <i>Start</i> is expressed relative to symbol 0 of the measured timeslot (see Fig. 4-3 on p. 4.18). <i>Time Scale</i> only configures the diagram; it does not affect the number of timeslots actually measured but is modified as this number is changed (see <i>Slot Count</i> hotkey on p. 4.63).</p> <p>Remote control No command, display configuration only</p>
Default Scale	<p>The <i>Default Scale</i> hotkey sets a default <i>Level Scale</i> and a default <i>Time Scale</i>, the latter corresponding to the number of timeslots measured (see <i>Slot Count</i> hotkey on p. 4.63) plus an appropriate display margin.</p> <p>Remote control No command, display configuration only</p>

f) P/Frame, P/Slot Graph, P/Slot Table

The P/Frame, P/Slot Graph, and P/Slot Table test settings differ from the P/t Normal GMSK settings (see p. 4.11 ff.) in several respects:

- The measurement statistics is simplified; only the repetition mode can be set.
- Everything related to the measurement curve (Display Mode, Markers, Display settings) is omitted.
- In the P/Slot Table and P/Frame applications, the number of slots to be measured (Slot Count, Frame Count) can be set.

The remaining settings are identical with those of the P/t Normal GMSK application; see page 4.11 ff.

Note: No Free Run trigger must be used in the P/t Multislot, P/Frame, P/Slot Graph, and P/Slot Table applications.

Measurement Results

The measurement results depend on the application selected.

a) P/t Normal GMSK

The values shown in the measurement menu Power, application P/t Normal GMSK, can be divided into three groups:

- Settings
- Scalar measurement results (single values)
- Arrays (the measurement curve plotted as a function of time)

These values are indicated in two parameter lines, the test diagram and an info box:

Parameter line 1, 2

Test diagram

Info box

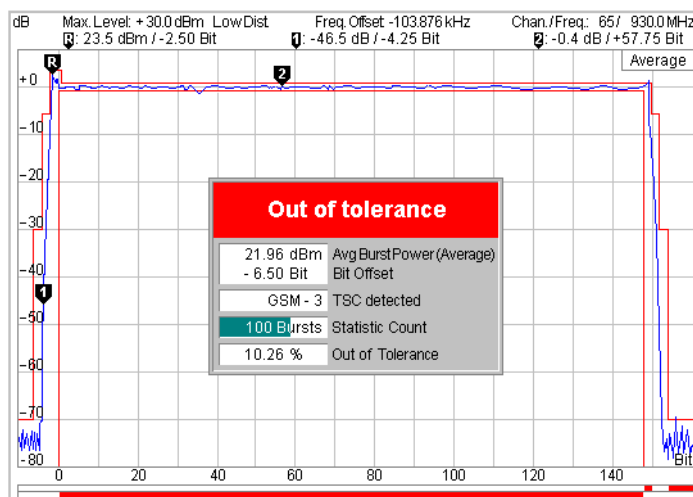


Fig. 4-4 Display of results (Power – P/t Norm. GMSK)

Settings/
scalar measurement results

Settings and scalar measurement results are indicated in the two parameter lines above the test diagram and in the info box, a popup window in the middle of the graphical screen Power.

1st parameter line




The first parameter line contains the following settings:

Max. Level Maximum expected input level as set in the Analyzer tab of


- the *Connection Control* menu (see section [Table-Oriented Version](#) on p. 4.76 ff.)
- Attenuation** Setting for the attenuation of the input level (*Normal, Low Noise, Low Distortion*) as set in the *Analyzer* tab of the *Connection Control* menu (see section [Table-Oriented Version](#) on p. 4.76 ff.)
- Freq. Offset** Frequency offset compared to the nominal channel frequency
- Chan./Trig. Slot Offs.** RF channel and trigger slot offset (see *Trig. Slot Offset* hotkey on p. 4.18)

2nd parameter line

The second parameter line contains the following marker values:

-  Level and time of reference marker
-  Level and time of delta marker 1 (setting *absolute*) or difference from reference marker (setting *relative*)
-  Level and time of delta marker 2 (setting *absolute*) or difference from reference marker (setting *relative*)

Info box

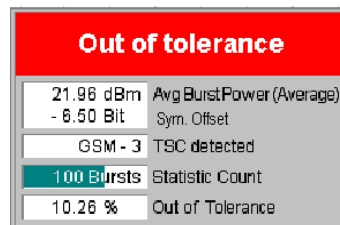

The info box contains the following settings:

- Sym. Offset** *Time Delay* set by means of the *Display/Marker* softkey: Number of symbols that the burst is shifted with respect to the time axis and the tolerance template. In *Signalling* mode, the measured timing advance error is displayed instead.
- Statistic Count** Number of bursts per statistics cycle, as set in the *Control* tab of the *Power Configuration* menu.

In addition, the following scalar results are indicated:

- Avg Burst Power** Average burst power, depending on the display mode set (see upper right corner of the diagram).
- TSC detected** Training sequence of the measured RF burst (*GSM – 0 to 7 | Dummy | ---*).
- Out of Tolerance** Relative number of bursts that are out of the tolerances defined by the limit lines.
- Burst Matching** Error message if the displayed curve is out of tolerance.

Remote control

Settings are retrieved using the query corresponding to the setting command (setting command with appended question mark).

For scalar measurement results:

```

READ[ :SCALar ]:POWer[ :NORMal ][ :GMSK ]?
CALCulate[ :SCALar ]:POWer[ :NORMal ][ :GMSK ]
:LIMit:MATChing?
FETCh[ :SCALar ]:POWer[ :NORMal ][ :GMSK ]?
SAMPle[ :SCALar ]:POWer[ :NORMal ][ :GMSK ]?
    
```

Measurement curves (arrays)

The measurement result is displayed as a continuous measurement curve in the test diagram together with the limit lines, markers and the D-line, if defined. The curve is derived from 668 equidistant measurement points with a ¼ symbol spacing covering a time range between -10 symbols and 156 ¾ symbols.

The measurement curve in the *Power* measurement menu shows the measured burst power (in dB) as a function of time (in symbol periods). The displayed result depends on various test settings. The display mode for the measurement curve (*Minimum, Maximum, Average, Current*) is indicated in the upper right corner of the diagram.

The scale of both axes can be adjusted via the *Display Area* hotkey (see section *P/t Normal GMSK* on p. 4.20).

Remote control

```
READ:ARRay:POWer[:NORMal][:GMSK]...?
FETCh:ARRay:POWer[:NORMal][:GMSK]...?
SAMPle:ARRay:POWer[:NORMal][:GMSK]...?
```

Limit Check

The result of the limit check is visualized in two colored bars below the diagram. In each area of the burst, the upper (lower) bar turns red if the result exceeds (falls below) the power/time template defined in the *Limit Lines* tab of the *Power Configuration* menu.

Remote control

```
CALCulate[:SCALar]:POWer[:NORMal][:GMSK]:LIMit:MATCHing...?
```

b) P/t Normal 8PSK

As shown in *Fig. 4-5* below, the *P/t Normal 8PSK* measurement results are similar to the *P/t Normal GMSK* results. The x-axis scale of both diagrams is equal because 8PSK and GMSK symbol periods are of equal length. The following differences occur:

- The default limit lines differ from the GMSK limit lines.

See explanation of GSM burst structure and power/time templates in section *Limit lines (Power Configuration – Limit Lines)* on page 4.32 ff.

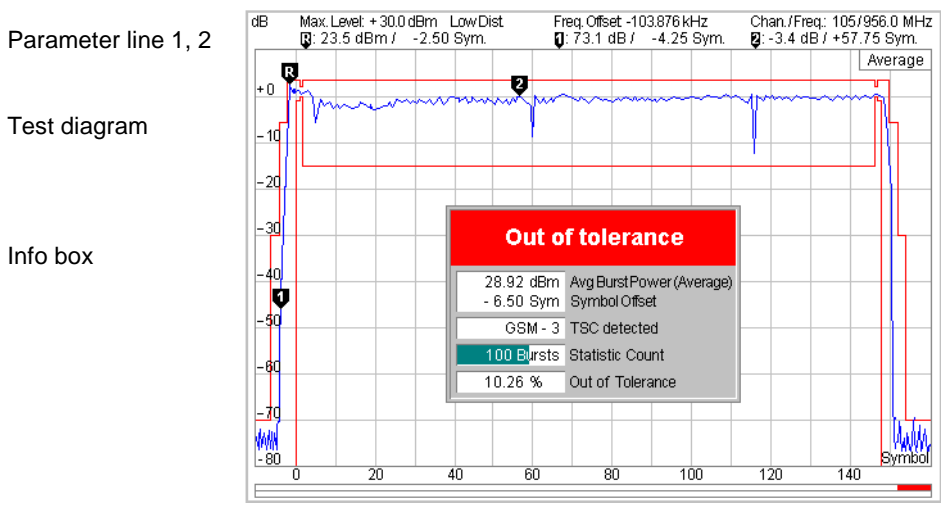


Fig. 4-5 Display of results (Power – P/t Norm. 8PSK)

c) P/t Multislot

As shown in Fig. 4-6 below, the P/t Multislot measurement results are similar to the P/t Normal GMSK results. The following differences occur:

- The first parameter line shows the selected Trig. Slot Offset, see p. 4.18.
- The info boxes, the diagram and the limit lines differ from the single-slot configuration, see below.

Parameter line 1, 2

Test diagram

Info boxes

Limit Check


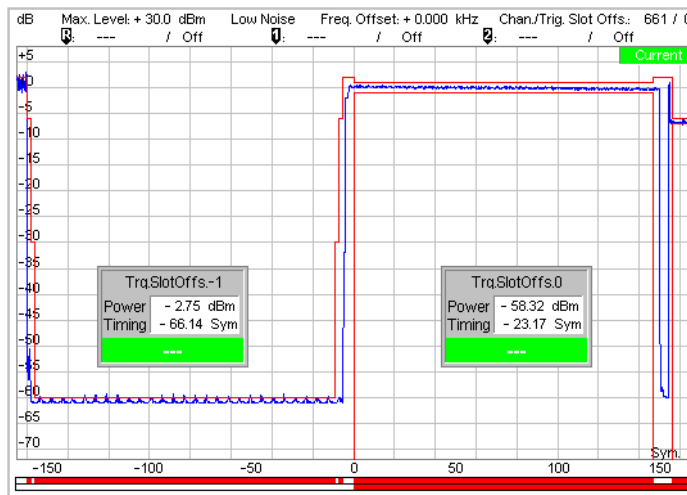


Fig. 4-6 Display of results (Power – P/t Multislot)

Info boxes

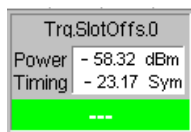

The info boxes show the following properties of the individual timeslots:

Power Average burst power in dBm. The *Power* result depends on the display mode as indicated in the upper right corner of the diagram.

Timing Timing error of the burst in symbol periods (actual timing minus the slot offset times the nominal slot duration). The actual timing of the burst is given by the training sequence and measured relative to the measured timeslot (*Trigger Slot Offset 0*; see Fig. 4-3 on page 4.18).

Below the two measurement results, an error message is displayed if the burst is out of tolerance. An info box is provided for each timeslot displayed (1 to 4; see *Slot Count* hotkey on p. 4.63). The boxes can be suppressed altogether by means of the *Display/Marker – Info Box* hotkey.

Remote control

Settings are retrieved using the query corresponding to the setting command (setting command with appended question mark).

For scalar measurement results:

```

READ[ :SCALar ]:POWer:MSLot?
CALCulate[ :SCALar ]:POWer:MSLot
:LIMit:MATChing?
FETCh[ :SCALar ]:POWer:MSLot?
SAMPle[ :SCALar ]:POWer:MSLot?
    
```

Measurement curves (arrays) The measurement result is displayed together with the limit lines, markers and the D-line (if defined) as a continuous measurement curve in the test diagram. The curve is derived from equidistant measurement points with a $\frac{1}{4}$ symbol spacing the number of which depends on the number of timeslots measured (see *Slot Count* hotkey on p. 4.63, for details see remote control command description).

The measurement curve in the *Power* measurement menu shows the measured burst power (in dB) as a function of time (in symbol periods). The displayed result depends on various test settings. The display mode for the measurement curve (*Minimum, Maximum, Average, Current*) is indicated in the upper right corner of the diagram.

The scale of both axes can be adjusted via the hotkeys associated to the *Display/Marker* softkey (see section *P/t Multislot* on p. 4.17 f.).

Remote control

READ:ARRAY:POWER:MSLOT...? etc.

Limit Check The result of the limit check is visualized in two colored bars below the diagram. In each area of the burst, the upper (lower) bar turns red if the result exceeds (falls below) the power/time template defined in the *Limit Lines* tab of the *Power Configuration* menu.

Remote control

CALCulate[:SCALAR]:POWER:MSLOT:LIMIT:MATCHing?

CALCulate:ARRAY:POWER:MSLOT:LIMIT:MATCHing[:CURRENT]?

CALCulate:ARRAY:POWER:MSLOT:AREA:LIMIT:MATCHing[:CURRENT]?

Tolerance template The multislot template is calculated after each single shot measurement from the single slot templates of all measured bursts (depending on the modulation scheme), the measured timing of all bursts and the multislot guard level. The measured average burst powers and timing references may vary in time, causing the multislot template to be shifted after each measurement cycle. In contrast to the single slot template, the position of the multislot template is not pinned down by the *Limit Lines* settings.

Due to the variation of the template, a multislot limit check for statistical (Min., Max, Avg.) results doesn't make sense: Template and limit check are omitted. The exact position of the template and the measurement curve at any time and the results of the current limit check can be queried with the command group quoted below.

Remote control

[SENSe:]ARRAY:Power:MSLOT:AREA:LIMIT...?

d) P/Frame

The results displayed in the measurement menu *Power*, application *P/Frame*, can be divided into two groups:

- Settings
- Measurement results, i.e. the average burst power in up to 256 consecutive TDMA frames.

The measurement results are indicated in a parameter line, the test diagram and a table:

Parameter line

Max.Level: +30.0 dBm LowDist Freq. Offset: -103.876 kHz Chan./Freq: 65/ 930.0 MHz

Frame table

Frame	0... 7	8... 15	16... 23	24... 31	32... 39	40... 47	48... 55	56... 63	64... 71	72... 79	80... 87	88... 95	96... 103	104... 111	112... 119	120... 127
	-49.0	-48.7	-47.3	+26.8	-46.3	+27.1	+26.7	-47.1								
	-46.6	-43.4	-48.1	+27.2	-46.8	+27.3	+27.3	-46.4								
	-49.0	-48.7	-47.3	+26.8	-46.3	+27.1	+26.7	-47.1								
	-46.6	-43.4	-48.1	+27.2	-46.8	+27.3	+27.3	-46.4								
	-49.0	-48.7	-47.3	+26.8	-46.3	+27.1	+26.7	-47.1								
	-46.6	-43.4	-48.1	+27.2	-46.8	+27.3	+27.3	-46.4								
	-49.0	-48.7	-47.3	+26.8	-46.3	+27.1	+26.7	-47.1								
	-46.6	-43.4	-48.1	+27.2	-46.8	+27.3	+27.3	-46.4								
	-49.0	-48.7	-47.3	+26.8	-46.3	+27.1	+26.7	-47.1								
	-46.6	-43.4	-48.1	+27.2	-46.8	+27.3	+27.3	-46.4								
	-49.0	-48.7	-47.3	+26.8	-46.3	+27.1	+26.7	-47.1								
	-46.6	-43.4	-48.1	+27.2	-46.8	+27.3	+27.3	-46.4								
	-49.0	-48.7	-47.3	+26.8	-46.3	+27.1	+26.7	-47.1								
	-46.6	-43.4	-48.1	+27.2	-46.8	+27.3	+27.3	-46.4								

all results in dBm

Fig. 4-7 Display of results (Power – P/Frame)

Settings The essential settings are indicated in a parameter line above the test diagram. The line is identical to the first parameter line of the test diagram in the *P/t Normal GMSK* application.

Results The *P/Frame* application measures the average burst power in a particular timeslot and over up to 256 consecutive TDMA frames. The average is taken over a section of the useful part of the burst; it is not correlated to the training sequence. The time slot number within the TDMA frame depends on the trigger time for the first measurement. The number of frames measured is selected in the configuration menu; see [Frame Count](#) parameter on p. 4.32.

A particular timeslot can be selected with an appropriate trigger condition. E.g., if the power in the timeslot to be measured is clearly higher than the power in the remaining seven timeslots, a power trigger (trigger settings *RF Power* or *IF Power*) can be used. Otherwise, use an appropriate external trigger signal.

The results are shown in a tabular overview. To be consistent with the numbering of the timeslots within a TDMA frame, the measured slots are numbered starting from 0. For more than 128 measured slots, the table can be scrolled using the cursor keys. No limit check is performed.

Note: *In Continuous measurements (Repetition = Continuous), the results in the table are updated row by row. After the end of each measurement cycle the update re-starts in the first table row. To clearly distinguish the current from the previous cycle, 4 strokes are inserted after the most recent measurement result.*

```
Remote control
READ:ARRay:POWer:FRAMe[:CURRent]?
READ[:SCALar]:POWer:FRAMe:FPOWer<nr>[:CURRent]?
FETCh:ARRay:POWer:FRAMe[:CURRent]?
SAMPle:ARRay:POWer:FRAMe[:CURRent]?
```

e) P/Slot Graph

The results displayed in the measurement menu *Power*, application *P/Slot Graph*, can be divided into two groups:

- Settings
- Measurement results, i.e. the average burst power in all eight slots of a TDMA frame

The measurement results are indicated in a parameter line, the test diagram and a table:

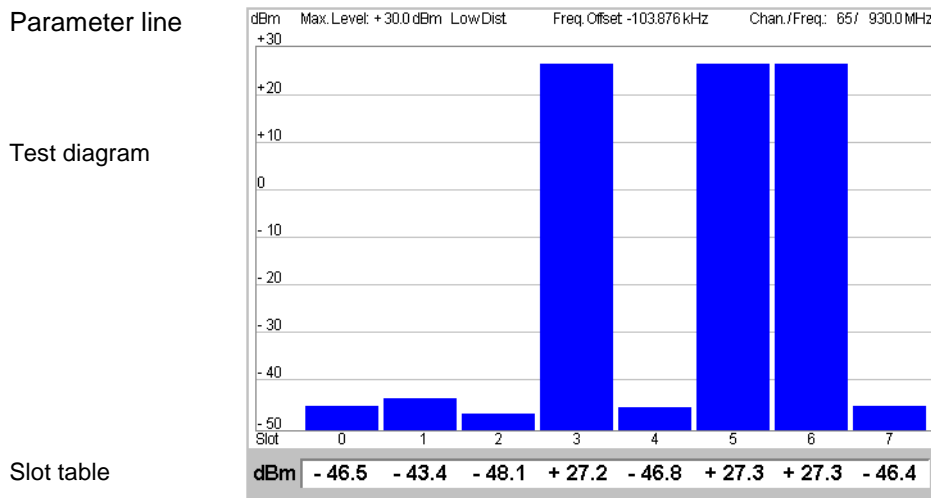


Fig. 4-8 Display of results (Power – P/Slot menu)

Settings The essential settings are indicated in a parameter line above the test diagram. The line is identical to the first parameter line of the test diagram in the *P/t Normal GMSK* application.

Results The *P/Slot* application measures the average burst power in eight consecutive time slots. The average is taken over a section of the useful part of the burst; it is not correlated to the training sequence. The time slots are numbered 0 to 7; however, this does not mean that they all belong to the same TDMA frame (slot 0 to 7).

A particular timeslot can be selected as timeslot 0 with an appropriate trigger condition. E.g., if the power in one timeslot is clearly higher than the power in the remaining seven timeslots, a power trigger (trigger settings *RF Power* or *IF Power*) can be used. Otherwise, use an appropriate external trigger signal.

The eight values are shown in a bar graph and in a tabular overview below. No limit check is performed.

Remote control

```
READ:ARRay:POWer:SLOT[:CURRent]?
FETCh:ARRay:POWer:SLOT[:CURRent]?
SAMPle:ARRay:POWer:SLOT[:CURRent]?
```


f) P/Slot Table

The results displayed in the measurement menu *Power*, application *P/Slot Table*, can be divided into two groups:

- Settings
- Measurement results, i.e. the average burst power in up to 512 consecutive TDMA timeslots.

The measurement results are indicated in a parameter line, the test diagram and a table:

Parameter line

Max.Level: +30.0 dBm LowDist		Freq.Offset: -103.876 kHz		Chan./Freq.: 65/ 930.0 MHz	
Slot					
0... 7	-49.0	-48.7	-47.3	+26.8	-46.3 +27.1 +26.7 -47.1
8... 15	-46.6	-43.4	-48.1	+27.2	-46.8 +27.3 +27.3 -46.4
16... 23	-49.0	-48.7	-47.3	+26.8	-46.3 +27.1 +26.7 -47.1
24... 31	-46.6	-43.4	-48.1	+27.2	-46.8 +27.3 +27.3 -46.4
32... 39	-49.0	-48.7	-47.3	+26.8	-46.3 +27.1 +26.7 -47.1
40... 47	-46.6	-43.4	-48.1	+27.2	-46.8 +27.3 +27.3 -46.4
48... 55	-49.0	-48.7	-47.3	+26.8	-46.3 +27.1 +26.7 -47.1
56... 63	-46.6	-43.4	-48.1	+27.2	-46.8 +27.3 +27.3 -46.4
64... 71	-49.0	-48.7	-47.3	+26.8	-46.3 +27.1 +26.7 -47.1
72... 79	-46.6	-43.4	-48.1	+27.2	-46.8 +27.3 +27.3 -46.4
80... 87	-49.0	-48.7	-47.3	+26.8	-46.3 +27.1 +26.7 -47.1
88... 95	-46.6	-43.4	-48.1	+27.2	-46.8 +27.3 +27.3 -46.4
96... 103	-49.0	-48.7	-47.3	+26.8	-46.3 +27.1 +26.7 -47.1
104... 111	-46.6	-43.4	-48.1	+27.2	-46.8 +27.3 +27.3 -46.4
112... 119	-49.0	-48.7	-47.3	+26.8	-46.3 +27.1 +26.7 -47.1
120... 127	-46.6	-43.4	-48.1	+27.2	-46.8 +27.3 +27.3 -46.4

all results in dBm

Slot table

Fig. 4-9 Display of results (Power – P/Slot Table)

Settings

The essential settings are indicated in a parameter line above the test diagram. The line is identical to the first parameter line of the test diagram in the *P/t Normal GMSK* application.

Results

The *P/Slot Table* application measures the average burst power in up to 512 consecutive TDMA timeslots, corresponding to 64 TDMA frames. The average is taken over a section of the useful part of the burst; it is not correlated to the training sequence. The number of slots (*Slot Count*) to be measured is set in the *Control* tab of the *Power Configuration* menu; see p. 4.28 ff.

The table displays up to 128 results at the same time. To be consistent with the numbering of the timeslots within a TDMA frame, the measured slots are numbered starting from 0 (see also remarks on TDMA timing in section *P/Frame, P/Slot Graph, P/Slot Table* on p. 4.112). For more than 128 measured slots, the table can be scrolled using the cursor keys. No limit check is performed.

Note: *In Continuous measurements (Repetition = Continuous), the results in the table are updated row by row. After the end of each measurement cycle the update re-starts in the first table row. To clearly distinguish the current from the previous cycle, 4 strokes are inserted after the most recent measurement result.*

Remote control

```
READ:ARRay:POWer:XSLOT[:CURRent]?
FETCh:ARRay:POWer:XSLOT[:CURRent]?
SAMPlE:ARRay:POWer:XSLOT[:CURRent]?
```

Measurement Configurations (Power Configuration)

The popup menu *Power Configuration* contains three tabs to determine the parameters controlling the power measurement including the error tolerances.

The popup menu *Power Configuration* is activated by pressing the measurement control softkey at the top right in the graphical measurement menu *Power* twice. It is possible to change between the tabs by pressing the associated hotkeys.

Measurement Control (Power Configuration – Control)

The *Control* tab controls the power measurement by determining

- The *Repetition* mode
- The *Stop Condition* for the measurement (for burst power vs. time measurements only)
- The type of measurement curve displayed (*Display Mode*, for burst power vs. time measurements only)
- The number of bursts/evaluation periods forming a statistics cycle (*Statistic Count*, for burst power vs. time measurements only)
- The measurement *Filter* for *P/t Normal GMSK*, *P/t Normal 8PSK* and *P/t Multislot* measurements
- The averaging rule to obtain the reference power (*Ref. Power Mode*, for *8PSK* measurements only)
- The *Timing Offset*, the expected modulation (*Modulation View*), the number of slots measured (*Slot Count*) and the *Info Box* in the *P/t Multislot* application
- The number of timeslots measured (*Slot Count*) in the *P/Slot Table* application
- The number of frames measured (*Frame Count*) in the *P/Frame* application

Besides, it configures the graphical diagrams by adding or removing the *Grid*.

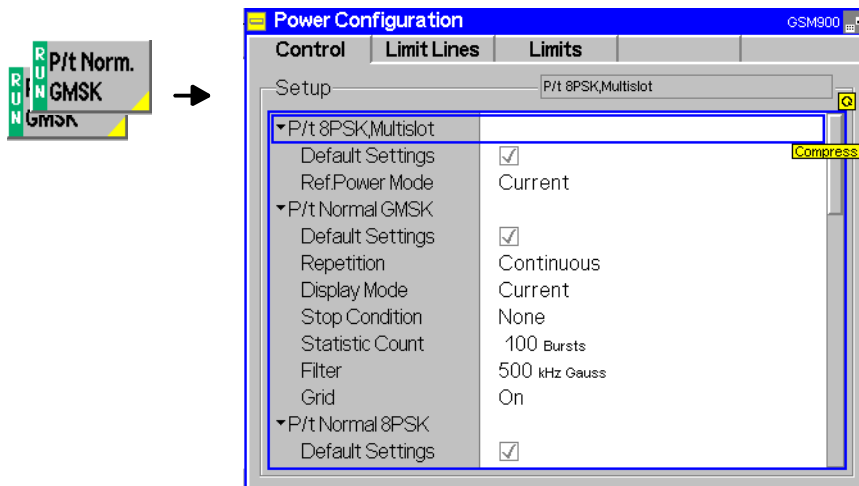


Fig. 4-10 Power Configuration – Control

The settings can be defined independently for the different applications of the *Power* measurement group. The following settings are available in several applications:

Default Settings The *Default All Settings* switch assigns default values to all settings in the *Control* tab (the default values are quoted in the command description in chapter 6 of this manual). In addition, default switches for the individual modulation schemes are provided.

Remote control
 CONFigure:POWer[:NORMAl][:GMSK]:CONTRol:DEFault ON | OFF
 etc.

Repetition The *Repetition* parameter defines how often the measurement is repeated:

Single Shot Single-shot measurement: the measurement is stopped after a statistics cycle (or after a stop condition is met, see below). A stopped measurement is indicated by the status display *HLT* in the *Power* softkey.

Unless otherwise stated, a statistics cycle corresponds to the number of bursts/evaluation periods set under *Statistic Count*.

Continuous Continuous measurement: The CMU continues the measurement until it is terminated explicitly (or until the stop condition for the measurement is met, see below). The measurement results are valid after one statistics cycle; however, the measurement is continued, and the output is continuously updated. An ongoing measurement is indicated by the status display *RUN* in the softkey *Power*.

Single shot should be selected if only a single measurement result is required under fixed conditions. The continuous measurement is suitable for monitoring the evolution of a measured quantity in time, for example for adjustments.

Note: *In remote mode, the counting measurement (counting mode) is available as a further measurement mode with a defined number of measurement cycles to be performed, see chapter 6 of this manual.*

Remote control
 CONFigure:POWer[:NORMAl][:GMSK]:CONTRol:REPetition
 CONTInuous | SINGleshot | 1 ... 10000,<StopCondition>,
 <Stepmode> etc.

Stop Condition The *Stop Condition* field defines a stop condition for the measurement:

NONE Continue measurement irrespective of the results of the limit check

On Limit Failure Stop measurement as soon as the limit check fails (one of the tolerances is exceeded)

Remote control
 CONFigure:POWer[:NORMAl][:GMSK]:CONTRol:REPetition
 <Repetition>,<SONerror | NONE, <Stepmode> etc.

Display Mode The *Display Mode* field defines which of the four measured and calculated measurement curves is displayed. The measurement curves differ in the way the burst power $p(t)$ at a fixed point in time t is calculated if the measurement extends over several bursts:

Current Measured value for current burst
Minimum Minimum over all measured bursts
Maximum Maximum over all measured bursts
Average Average value over a number of bursts

The number of bursts for calculation of the statistical values *Minimum*, *Maximum* and *Average* – and thus the result – depends on the repetition mode set. In detail, this implies:

Single shot Display of minimum, maximum and average value from the performed statistics cycle.

Continuous Display of minimum and maximum from all bursts already measured. The **average value**, however, is calculated according to the rule in Chapter 3, section *General Settings*.

Remote control
no display mode set explicitly, the four measurement curves are accessible via

```
FETCh:ARRAy:POWeR[:NORMAl][:GMSK][:CURRent]?
FETCh:ARRAy:POWeR[:NORMAl][:GMSK]:MINimum?
FETCh:ARRAy:POWeR[:NORMAl][:GMSK]:MAXimum?
FETCh:ARRAy:POWeR[:NORMAl][:GMSK]:AVERAge? etc.
```

Statistic Count The input field *Statistic Count* defines the length of the statistics cycles in bursts. The settings *1* and *OFF* (press *ON/OFF* key) are equivalent. A statistics cycle determines the duration of single-shot measurements.

Remote control
CONFIgure:POWeR[:NORMAl][:GMSK]:CONTRol
<MODE>,1 ... 1000 | NONE

Filter The input fields *Filter* determine which type of measurement filter is used for the P/t measurements:

- 500 kHz Gauss* Gauss filter with a 3-dB bandwidth of 500 kHz, recommended for GMSK modulation
- 600 kHz Band* Bandpass filter with a bandwidth of 600 kHz and steep edges, recommended for 8PSK modulation

Both filters are in accordance with the conformance specification GSM 11.10.

```
Remote control
CONFIgure:POWeR[:NORMAl][:GMSK]:FILTeR G500 | B600
CONFIgure:POWeR[:NORMAl]:EPsK:FILTeR G500 | B600
CONFIgure:POWeR:MSLot:FILTeR G500 | B600
```

Grid The *Grid* button switches the grid on or off in the graphical test diagram. By default, the grid is switched on.

Remote control
CONFIgure:POWeR[:NORMAl][:GMSK]:CONTRol:GRID ON | OFF

The following settings are application-specific:

P/t Normal 8PSK, P/t 8PSK, Multislot – Ref. Power Mode The *Ref. Power Mode* determines how the reference power, i.e. the 0-dB line in the measurement diagram, is calculated. The setting is valid for **both** single-slot and multislot measurements on 8PSK modulated signals.

Current The reference power depends on the *Display Mode* set. It is equal to the average power of the *Current* measurement curve (display mode *Current*) or to the average power of the *Average* measurement curve (display mode *Average, Maximum, or Minimum*).

Average The reference power is equal to the average power of the average measurement curve.

Data Compens. The reference power depends on the *Display Mode* set. It is equal to the data-compensated average power of the *Current* measurement curve (display mode *Current*) or to the data-compensated average power of the *Average* measurement curve (display mode *Average, Maximum, or Minimum*).

Average power denotes the RF carrier power averaged over the useful part of the measured burst (application *P/t Normal 8PSK*) or of the measured timeslot (application *P/t Multislot* with 8PSK modulation, see *Slot Count* softkey on p. 4.63).

Owing to the characteristics of 8PSK modulation, the amplitude of the RF signal varies with the transmitted data. As a consequence, only the long term average of the power when taken over the useful part of the burst for random data represents a correct measure for the output power of the mobile phone. This long time average (rather than the average power of the current burst) is also the correct reference power (0-dB line) for the *P/t Norm. 8PSK* measurement.

The *Average* setting ensures that a correct reference power is used, however, averaging results in a longer measurement time. In the *Data Compensated* mode, a known data sequence is used to correct the measured average power of the current burst and estimate the correct reference power. Delays due to averaging are avoided.

Remote control

```
CONFigure:POWer[:NORMal]:EPSK:CONTRol:RPMoDe
  CURRent | AVERAge | DCOMpens
```

P/t Multislot – Timing Offset

The *Timing Offset* shifts the burst by the entered number of symbol periods, e.g. to compensate for a known, constant timing error of the MS. The burst is shifted relative to the time axis and the tolerance template for the multislot burst analysis. Therefore, the value of *Timing Offset* affects the result of the tolerance check.

Remote control

```
CONFigure:POWer:MSLot:TOffSet
```

P/t Multislot – Modulation View

The *Modulation View* section defines the expected modulation scheme in all four timeslots that can be measured and adjusts the power/time template. To obtain a valid measurement result, the actual modulation in all measured slots must be compatible with the *Modulation View* settings. Otherwise, the CMU displays a warning: "*Signal does not match configuration!*"

The following settings are provided for all slots:

<i>GMSK</i>	GMSK modulation expected; the GMSK power/time template is used
<i>8PSK</i>	8PSK modulation expected; the 8PSK power/time template is used
<i>ANY</i>	Arbitrary modulation scheme; the CMU determines the modulation of the measured burst and uses the appropriate template. Valid results are obtained with both GMSK and 8PSK modulation.
<i>OFF</i>	No signal expected: timeslot must be inactive to obtain a valid result

The *Modulation View* settings are ignored for all slots that are not measured.

Note: *In an EGPRS test mode connection (Signalling mode), it is possible to measure and display GMSK and 8PSK modulated bursts simultaneously. A measurement example is reported in Chapter 2.*

Remote control

```
CONFigure:POWer:MSLot:MVIEw
```

P/t Multislot – Slot Count

The *Slot Count* defines an integer number of timeslots to be measured in the *P/t Multislot* application. The actual time range measured is larger than the integer number of slots because it comprises an additional display margin; for details see remote control command description.

Remote control

```
CONFigure:POWer:MSLot:SCoUnT
```

P/t Multislot – Info Box	<p>The <i>Info Box</i> parameter switches the info boxes for all displayed timeslots on or off.</p> <p>Remote control No command, display configuration only</p>
P/Slot Table – Slot Count	<p>The input field <i>Slot Count</i> defines the total number of slots measured in the <i>P/Slot Table</i> application.</p> <p>Remote control CONFigure:POWer:XSLot:SCOut</p>
P/Frame – Frame Count	<p>The input field <i>Frame Count</i> defines the total number of consecutive TDMA frames measured in the <i>P/Frame Table</i> application. One timeslot is measured in each frame. One TDMA frame has a duration of approx. 4.6 ms. A smaller number of frames reduces the measurement time.</p> <p>Remote control CONFigure:POWer:FRAMe:FCOut</p>

Limit lines (Power Configuration – Limit Lines)

The *Limit Lines* tab defines the limit lines for the burst power vs. time measurements (applications *P/t Norm. GMSK*, *P/t Norm. 8PSK*, and *P/t Multislot*).

Burst structure in the GSM mobile radio network: GMSK modulation

In the GSM mobile radio network, all radio channels are divided into frames with 8 timeslots, each with a duration of 15/26 ms \approx 577 μ s. In this time mask, bursts with various types of bit patterns are transferred:

<i>Normal burst</i>	Used for data transmission on the traffic channel and on the control channels except RACH.
<i>Access burst</i>	Used by the mobile (MS) for initial random access to the network and for handover.
<i>Other burst types</i>	Dummy burst, frequency correction burst, synchronization burst, are only used by the BTS.

The basic GSM modulation scheme is GMSK modulation. With this modulation scheme, the transmission rate is 270.833 ksymbols/s (where each symbol codes one data bit), resulting in a bit duration/symbol duration of 3.69 μ s/symbol. The structure of the GSM bursts is shown in [Fig. 4-34](#). Compared to a normal burst, the access burst has a longer guard period (68.25 symbols instead of 8.25 symbols) whereas the length of the useful part of the burst (useful duration) is shortened by 60 symbols. The extended guard period is needed since timing advance is not known at initial random access and handover.

The tolerance template for normal (NB) and access bursts (AB) can be divided into different areas. These areas are used as a basis for the definition of the limit lines and are shown in the following diagram ([Fig. 4-11](#)).

Note that in upper areas 2 and 7, the limit lines depend on the PCL of the mobile phone. In the CMU, this can be taken into account by defining a PCL-dependent, dynamic correction to the static limit lines, which is explained in the *Limit Lines* section of the *Signalling* mode (see p. [4.115](#)).

Note: *In Non Signalling mode, only normal bursts can be measured. The access bursts transmitted by the mobile phone to initiate a location update can be analyzed in Signalling mode; see section Power Measurements on page 4.101 ff. The reference level (0 dB line) is equal to the received transmitter carrier power, i.e. the average value of the transmitter*

carrier power over the useful part of the burstduration of the burst as received by the CMU. The burst is fitted into the tolerance template such that the transition between bit 13/14 of the training sequence corresponds to the center of the useful part of the burst. This timing reference can be modified via the Time softkey, see section [Test Settings](#) on page 4.9.

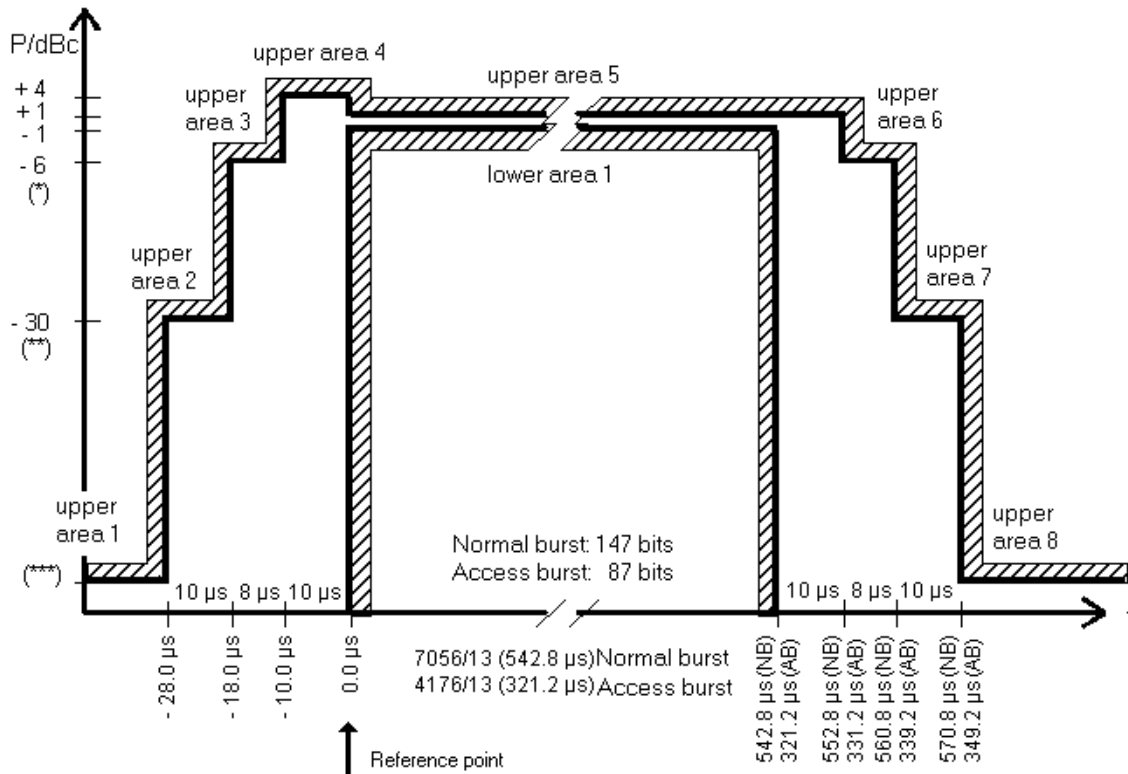


Fig. 4-11 GSM power/time template for normal and access bursts with GMSK modulation

The two edges of the tolerance templates are defined as a function of the power control level of the mobile phone. The following specifications apply to both modulation schemes ([Fig. 4-11](#) and [Fig. 4-12](#)):

	GSM400/850/900-MS	GSM1800/1900-MS
(*)	-4.0 dBc for power control level (PCL) 16; -2.0 dBc for PCL 17; -1.0 dBc for PCL 18 and 19.	-4.0 dBc for PCL 11 -2.0 dBc for PCL 12 -1.0 dBc for PCL 13, 14, and 15.
(**)	-30.0 dBc or -17.0 dBm (higher value)	-30.0 dBc or -20.0 dBm (higher value)
(***)	-59.0 dBc or -36.0 dBm (higher value)	-48 dBc or -48 dBm (higher value)

The limit lines for GMSK and 8PSK modulation are set in separate table sections but in an analogous way:

8PSK modulation

8PSK modulation was introduced to GSM with release 1999 (GSM 05.05 version 7.1.0). 8PSK channels (the so-called EDGE channels) are used for data transmission; only normal bursts are transmitted. The modulating symbol rate is the same as in GMSK modulation (270.833 ksym/s), which corresponds to a bit rate of 3 x 270.833 kbit/s. The CMU uses the same time scale for both modulation schemes; a symbol duration in GMSK modulation is equal to a symbol duration in 8PSK modulation.

The power template for 8PSK burst differs from the GMSK power template; see [Fig. 4-12](#) below. In analogy to GMSK modulation, the limit lines at the edges of the burst depend on the PCL of the mobile phone.

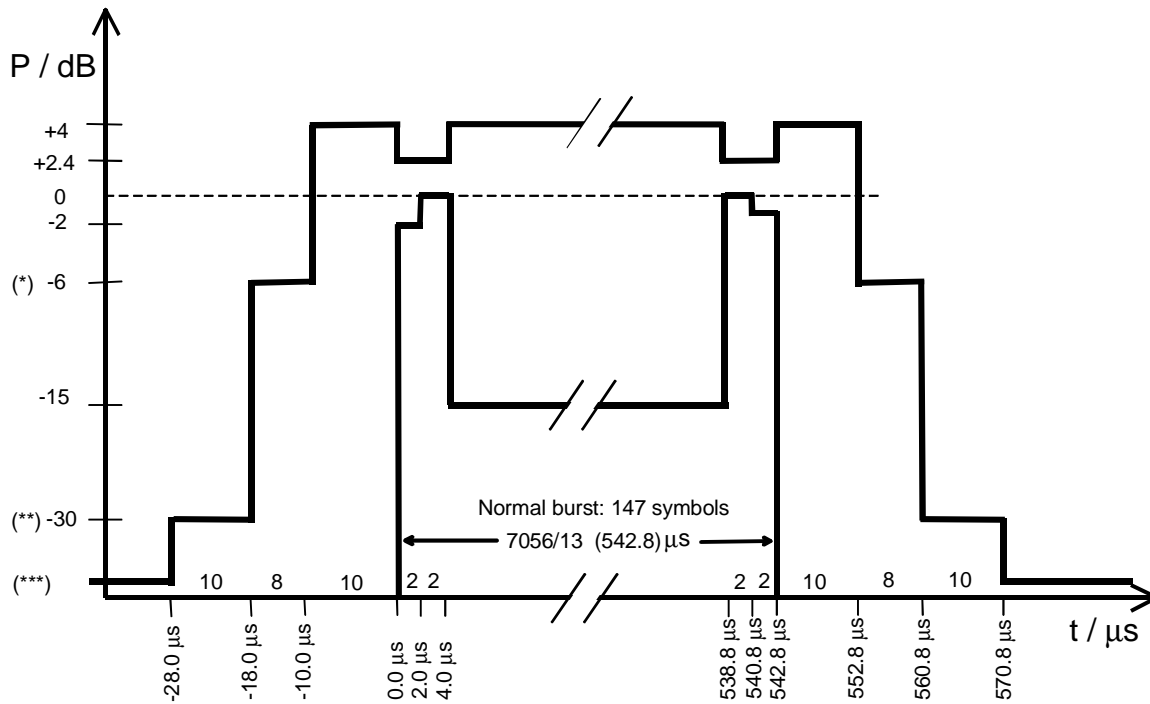


Fig. 4-12 GSM power/time template for normal bursts with 8PSK modulation (according to GSM05.05 version 8.5.0; see explanation after previous figure)

The limit lines for multislot configurations are based on the single-slot limit lines:

Multislot configurations

According to GSM 11.10, the power/time template for multislot configurations coincides with the template for a single GSM burst except in the guard period between every two consecutive active timeslots, where the output power shall not exceed the level allowed for the useful part of the first timeslot or the level allowed for the useful part of the second timeslot plus a multislot guard level of 3 dB, whichever is the highest. The template for two consecutive 8PSK modulated timeslots with the same output power is shown in Fig. 4-13 below.

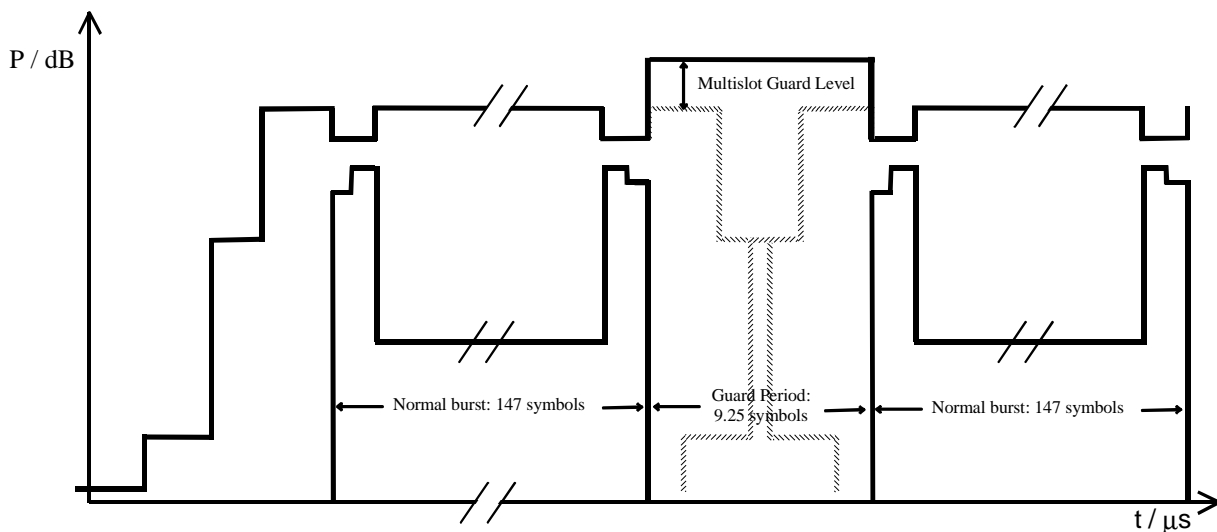


Fig. 4-13 GSM power/time template for multislot configurations

Note: The CMU treats the areas where the **lower** limit lines are switched on as the useful part of the burst; the remaining areas form the guard period. The tester calculates the multislot tolerance template from the single-slot limit lines and the Multislot Guard level (see below) and normalizes it to the average RF carrier power in the useful part of the Meas. Timeslot. This implies that the tolerance template is changed if the useful part of the burst is extended by enabling an additional lower limit area.

In remote control the exact current position of the multislot template can be queried with the [SENSe:]ARRay:POWer:MSLot:AREA:LIMit...? commands.

The *Limit Lines* tab provides:

- A preview of the default limit lines showing the different areas (*Area Info*)
- Definition of the limit lines for the normal burst area by area (*Upper Limit Line*, *Lower Limit Line*)

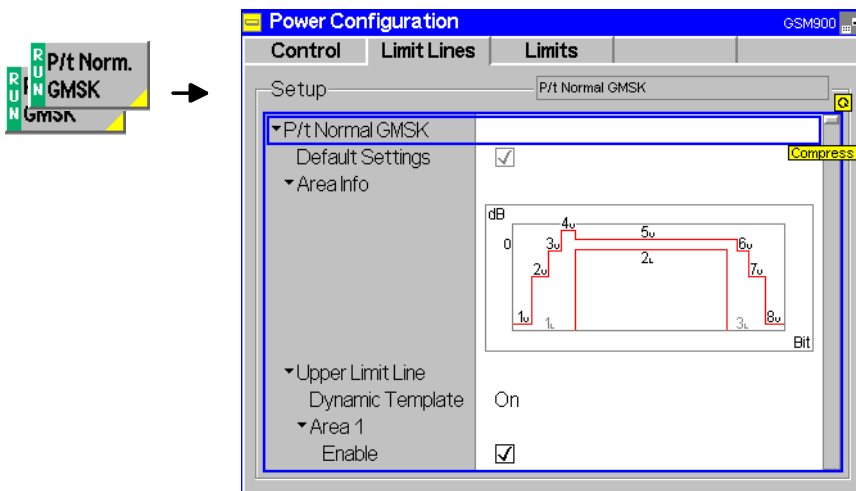


Fig. 4-14 Power Configuration – Limit Lines

Default Settings The *Default All Settings* switch assigns default values to all settings in the *Limits* tab (the default values are quoted in the command description in chapter 6 of this manual). In addition, default switches for the individual modulation schemes are provided.

Remote control

CONFigure:POWer[:NORMal][:GMSK]:LIMit:LINE:DEFault ON | OFF

Area Info The *Area Info* diagram represents a simplified preview of the defined tolerance template.

Remote control

–

Upper Limit Line The table *Upper Limit Line* defines the upper limit lines for normal bursts. The normal burst can be divided into up to 16 areas (*Area 1 to Area 16*); within an area, the limit line represents a line section with arbitrary (even infinite) slope. In all areas, the static limit lines can be corrected (shifted) by adding an (optional) dynamic (i.e. template PCL-dependent) correction. The CMU's power template is thus far more flexible than the GSM template shown above.

Dynamic Template Enable (*On*) or disable (*Off*) the dynamic limit line correction for the entire upper limit line. With disabled dynamic limit line correction the upper limit line is equal to the upper *Static* limit line.

Remote control

CONFigure:POWer[:NORMal][:GMSK]:LIMit:LINE:UPPer:ALL:DYNamic:ENABle
CONFigure:POWer[:NORMal]:EPSK:LIMit:LINE:UPPer:ALL:DYNamic:ENABle

Static limit lines	The <i>Static</i> limit lines are defined as follows:
<i>Area 1 to 16</i>	Area number
<i>Enable</i>	Enabled (switch on) or disabled (and invisible) limit line. A disabled limit line implies that the limit check for the area is switched off as well.
<i>Time</i>	Start and (below) stop time of the area in symbols
<i>Level rel.</i>	Start and (below) stop level of the area in units relative to the carrier. The reference level (0-dB line) is the carrier power averaged over the useful part of the burst.
<i>Level abs.</i>	Start and (below) stop level of the section in absolute units (dBm).

The input of relative and absolute limit values is optional; both can be switched off for valid areas (setting *Off*). If both absolute and relative limit values are specified in an area, the tolerance template and the results of the limit check refer to the **looser** criterion.

The permissible ranges for the upper and lower limit lines, i.e. of the quantities *Time*, *Level rel.*, and *Level abs.* vary according to the area numbers, see command description in chapter 6.

Remote control

```

CONFigure:POWer[:NORMal][:GMSK]:LIMit:LINE:UPPer<nr>
[:STATic]:ENABle ON | OFF
CONFigure:POWer[:NORMal][:GMSK]:LIMit:LINE:UPPer<nr>[:STATic]
<StartTime>,<EndTime>,<StartRelLevel>,<EndRelLevel>,<StartAbsLevel>,<EndAbsLevel>,<Visibility>
    
```

Dynamic limit line correction	The <i>Dynamic</i> limit line section, serves to correct the limit lines depending on the <i>Template PCL</i> . It is defined as follows:
<i>Range 1 to 10</i>	Continuous range of power control levels defined by start PCL and stop PCL
<i>PCL from</i>	Lowest template power control level in the range
<i>PCL to</i>	Highest template power control level in the range
<i>Correction</i>	Correction value in dB to be applied to the whole range
<i>Enable</i>	Enabled (switch on) or disabled dynamic correction

The dynamic limit line correction can be switched off entirely; see *Dynamic Limit Line Correction* parameter above.

Remote control

```

CONFigure:POWer[:NORMal][:GMSK]:LIMit:LINE:UPPer<nr>:DYNamic:
ENABle ON | OFF
CONFigure:POWer[:NORMal][:GMSK]:LIMit:LINE:UPPer:ALL:DYNamic:
ENABle ON | OFF
CONFigure:POWer[:NORMal][:GMSK]:LIMit:LINE:UPPer<AreaNr>
:DYNamic<RangeNr>
<fromPCL>,<toPCL>,<Correction>,<Enable> etc.
    
```

Lower Limit Line The table *Lower Limit Line* defines the lower limit lines for normal bursts. All settings are analogous to the upper limit lines.

Remote control

```
CONFigure:POWer[:NORMal][:GMSK]:LIMit:LINE:LOWer<nr>
[:STATIC]:ENABle ON | OFF
CONFigure:POWer[:NORMal][:GMSK]:LIMit:LINE:LOWer<nr>[:STATIC]
<StartTime>,<EndTime>,<StartRelLevel>,<EndRelLevel>,
<StartAbsLevel>,<EndAbsLevel>,<Visibility>
```

P/t Multislot – Multislot Guard The *Multislot Guard* parameter defines the level in dB by which the upper limit line in the guard period between two consecutive bursts is raised (see [Fig. 4-13](#) on p. 4.34): The upper limit line in the guard period equals the upper limit line in the useful part of the first timeslot or the upper limit line in the useful part of the second timeslot plus *Multislot Guard*, whichever is the highest. No lower limit line is defined during the guard period.

Remote control

```
CONFigure:POWer:MSLot:LIMit:LINE:GLEVel <Level>
```

Limit Values for Average Burst Power (Power Configuration – Limits)

The tab *Limits* defines tolerance limits for the average burst power depending on the *Template PCL* defined via the *Analyzer Settings – Template PCL* hotkey. The limits apply to all applications of the *Power* menu providing a limit check (not to *P/Frame*, *P/Slot Graph* and *P/Slot Table*).

The limits are defined in analogy to the *Signalling* mode where they depend on the actual PCL of the mobile phone; see section *Limit Values for Average Burst Power* on page 4.116 ff.

Modulation Measurements

The menu group *Modulation* comprises the functions for measurement of the modulation parameters of the RF signal transmitted by the mobile phone. The measurement results are displayed in the graphical measurement menu *Modulation*, the popup menu *Modulation Configuration* is used for configuration of the measurements.

The characteristics of the modulation measurement, the measured quantities and the measurement menus depend largely on the modulation scheme (*GMSK* or *8PSK* modulation). For the sake of clarity, the two modulation schemes are explained separately throughout the remainder of this section.

Measurement Menu (Modulation – GMSK)

If the *GMSK* modulation scheme is selected (see *Application* softkey in section *Test Settings* on page 4.39 ff.), the graphical measurement menu *Modulation* displays the results of the extended phase and frequency error analysis.

- The measurement control softkey *Ext. Phase Err. GMSK* controls the measurement, indicates its status (*RUN* | *HLT* | *OFF*) and opens the configuration menu *Modulation Configuration* (press twice). The hotkeys associated to the measurement control softkey define the scope of the *Modulation* measurement.
- The other softkeys to the right of the test diagram are combined with various hotkeys. The softkey/hotkey combinations provide test settings and switch over between different measurements. The entry of values is described in section *Test Settings* on page 4.3.

The measurement menu *Modulation* can be accessed from any other measurement menu of function group *GSMxxx-MS Non Signalling* using the *Modulation* hotkey. It can be opened also from the *Menu Select* main menu (with the associated key at the front of the instrument).

Frequency and phase errors are determined as follows:

The actual phase of the signal received from the mobile station is recorded during the entire burst and stored. The transferred data is demodulated and the training sequence searched for. The middle of the training sequence is used for time synchronization (transition between bit 13/14).

The complete data content of the burst is then mathematically modulated using an ideal modulator. The resulting ideal phase is compared with the measured phase. From the difference between the two quantities (the phase difference trajectory), a regression line is calculated using the Mean Square Error method. The *phase error* is the difference between the phase difference trajectory and the regression line; it is calculated and plotted over the whole useful part of the burst (147 symbols). The average *frequency error* in the burst is equal to the derivative of the regression line with respect to time.

The **Origin Offset** and the **I/Q Imbalance** characterize the accuracy of the I/Q modulation. They are defined and measured in analogy to the 8PSK modulation scheme; see (see *Fig. 4-18* on page 4.44 and *Equation 4-1*).

For the **tolerance check** the phase error trajectory is fitted into the tolerance template and checked for tolerance violations. According to GSM specifications, a maximum peak phase error of $\pm 20^\circ$, a maximum RMS phase error of $\pm 5^\circ$, and a frequency error of 0.05 ppm referred to the carrier frequency is allowed.

The CMU evaluates the phase error with a resolution of 4 measured values per modulating symbol. This corresponds to a sampling rate of approx. 1 MHz.

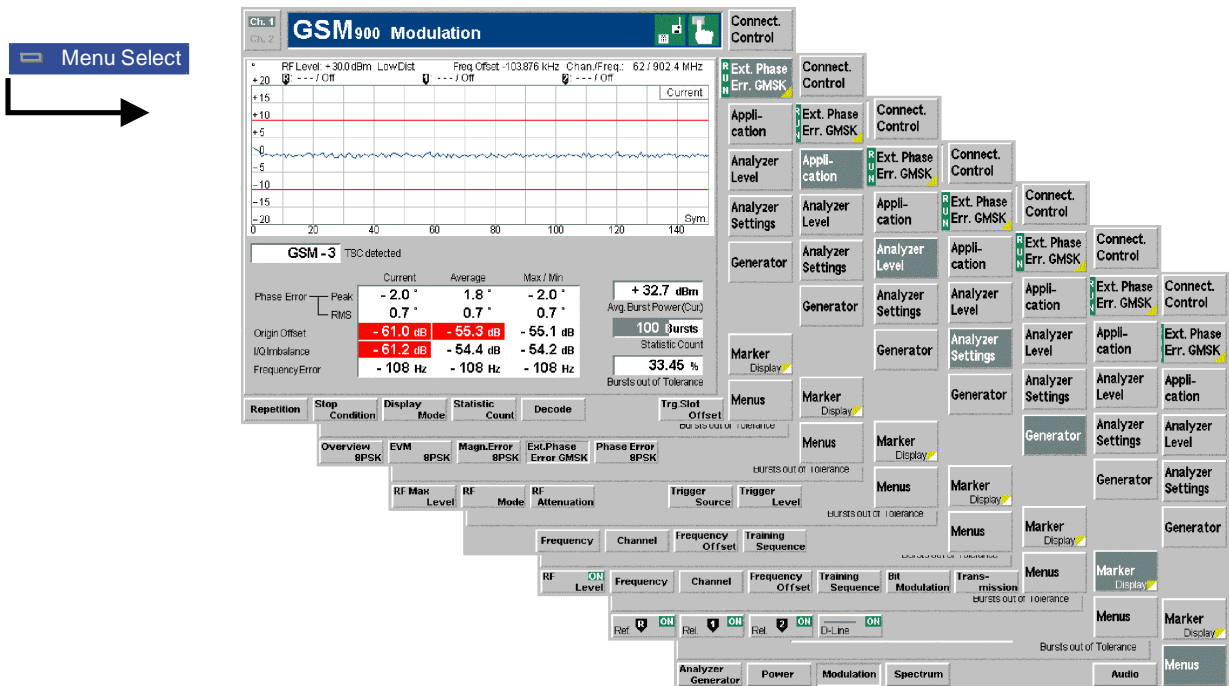


Fig. 4-15 Measurement menu Modulation – Ext. Phase Err. GMSK

Test Settings

The *Analyzer Level*, *Analyzer Settings*, *Generator*, and *Menus* test settings are identical with those in the *Power* menu (see section [Test Settings](#) on page 4.9). The following softkeys and hotkeys differ from the *Power* measurement:

Ext. Phase Err. GMSK

The *Ext. Phase Err. GMSK* softkey controls the GMSK modulation measurement and indicates its status (*RUN* | *HLT* | *OFF*).

This status can be changed after softkey selection (pressing once) by means of the *ON/OFF* key or the *CONT/HALT* key. It can be set independently for all *Modulation* applications.

The active application generally suspends the other applications. On switchover between different applications, the selected measurement status of each application is stored and will be put into effect as soon as the application is activated. In particular, an application in the status *RUN* is restarted each time it is activated.

Note: The abbreviation "Ext." in Ext. Phase Err. GMSK denotes an "Extended" modulation measurement including the quantities I/Q Origin Offset and I/Q Imbalance. In remote control, the phase and frequency error can be determined separately to speed up the measurement; see test object `MODulation[:PERRor]`.

Remote control

```
INITiate:MODulation:XPERRor[:GMSK]
ABORT:MODulation:XPERRor[:GMSK]
STOP:MODulation:XPERRor[:GMSK]
CONTIne:MODulation:XPERRor[:GMSK]
```

Measurement configuration

Pressing the *Ext. Phase Err. GMSK* softkey twice opens the popup menu *Modulation Configuration* (see page 4.50 ff.). Besides, the hotkeys *Repetition*, *Stop Condition*, and *Statistic Count* defining the scope of the measurement and the *Trig. Slot Offset* hotkey are associated to the *Ext. Phase Err. GMSK* softkey. The function of these hotkeys is explained in the *Power* menu section (see section *P/t Normal GMSK* on page 4.11 f.); they are identical with the parameters set in the *Control* tab of the *Modulation Configuration* menu (see page 4.50 ff.).

The *Ext. Phase Err. GMSK* hotkey bar contains two additional hotkeys:

Disp. Mode

The *Disp. Mode* hotkey selects one of the following display modes:

- Current* Measured value for current burst
 - Minimum/Maximum* Extreme value of a number of bursts
 - Average* Average value of a number of bursts
- See section [Measurement Control \(Modulation Configuration – Control\)](#) on page 4.50 ff.

Remote control

No display mode set explicitly, the three measurement curves are accessible via
`FETCh:ARRay:MODulation:XPERror[:GMSK][:BURSt][:CURRent]?`
`FETCh:ARRay:MODulation:XPERror[:GMSK][:BURSt]:MMAX?`
`FETCh:ARRay:MODulation:XPERror[:GMSK][:BURSt]:AVERAge?` etc.

Decode

The *Decode* hotkey defines whether or not guard or tail bits are decoded.

See section [Measurement Control \(Modulation Configuration – Control\)](#) on page 4.50 ff.

Remote control

`CONFigure:MODulation:XPERror[:GMSK]:TIME:DECode`
`STANdard | GTBits`

Application

The *Application* softkey selects the modulation scheme. Only one application of the *Modulation* menu is related to GMSK modulated signals. The 8PSK applications are described in section [Test Settings](#) on p. 4.45 f.

Phase Err. GMSK

The *Phase Error GMSK* hotkey selects the extended phase error measurement on GMSK modulated signals.

Remote control

The *Phase Error GMSK* application is selected by the keywords `XPERror[:GMSK]` in the 3rd and 4th level of the `MODulation` commands, e.g.
`CONFigure:MODulation:XPERror[:GMSK]...`

Measurement Results

The values shown in the measurement menu *Modulation* can be divided into three groups:

- Setting values
- Scalar measurement results (single values)
- Arrays (the measurement curve plotted as a function of time)

The values are indicated in a parameter line, the test diagram and a tabular overview below:

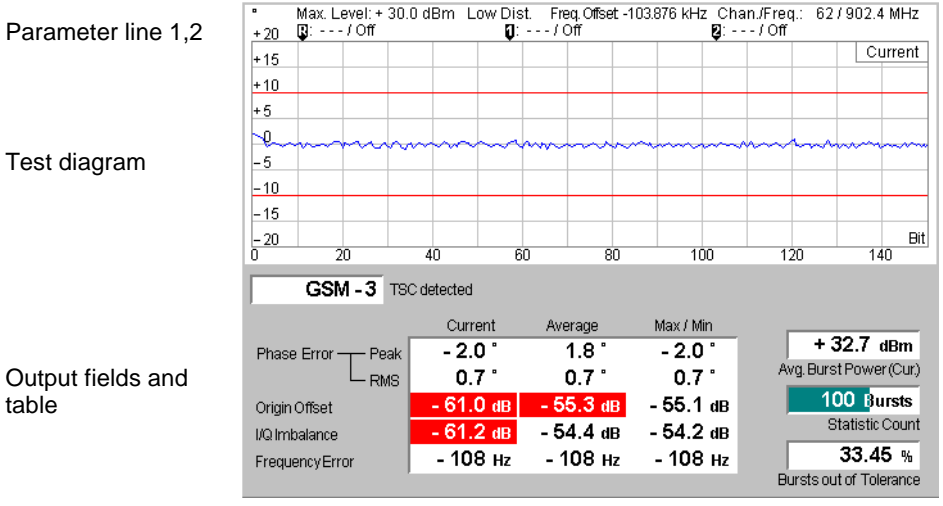


Fig. 4-16 Display of results (Modulation – Ext. Phase Err. GMSK)

**Settings/
Scalar results**

Scalar measurement results and settings are indicated in the two parameter lines above the test diagram and in the output table below.

1st parameter line The first parameter line contains the following settings:

- Max. Level** Maximum input level set as in the *Analyzer* tab of the *Connection Control* menu (see section [Table-Oriented Version](#) on p. 4.76 ff.)
- Attenuation** Setting for the external attenuation of the input level (*Normal, Low Noise, Low Distortion*)
- Freq. Offset** Frequency offset compared to the nominal channel frequency
- Chan./Trig. Slot Offs.** RF channel and trigger slot offset (see *Trig. Slot Offset* hotkey on p. 4.18)

2nd parameter line The second parameter line contains the following marker values:

- R** Level and time of reference marker
- 1** Level and time of delta marker 1 (setting *absolute*) or difference from reference marker (setting *relative*)
- 2** Level and time of delta marker 2 (setting *absolute*) or difference from reference marker (setting *relative*)

Remote control

The settings are retrieved using the query corresponding to the setting command (setting command with appended question mark).

Output fields and table	<p>The output fields display the following scalar values:</p> <p><i>TSC detected</i> Detected training sequence of the current burst received from the mobile station (<i>GSM 0 to 7</i> or <i>Dummy</i> or "---"), see <i>Analyzer</i> tab, section <i>Table-Oriented Version</i> on p. 4.76 ff.</p> <p><i>Avg. Burst Power</i> Average power of current burst (irrespective of the display mode selected and of the current measurement curve),</p> <p><i>Statistic Count</i> Number of bursts per statistics cycle. The colored bar indicates the relative measurement progress in the statistics cycle.</p> <p><i>Bursts out of Tolerance</i> Percentage of bursts that violate the tolerance limits.</p>
-------------------------	---

The following scalar values are calculated for the current burst first. From the current results the average referenced to a statistics cycle (*Average*; see averaging rules in Chapter 3) and the extreme value over all bursts measured so far (*Max/Min*) is calculated:

<i>Phase Error Peak</i>	Maximum phase error
<i>Phase Error RMS</i>	Effective phase error (RMS-averaged over the burst)
<i>Origin Offset</i>	Origin offset in the I/Q constellation diagram; calculated in analogy to 8PSK modulation (see <i>Fig. 4-18</i> on page 4.44 and <i>Equation 4-1</i>)
<i>I/Q Imbalance</i>	Amplitude difference between the I and Q components of the measured signal see (see <i>Fig. 4-18</i> on page 4.44 and <i>Equation 4-2</i>)
<i>Frequency Error</i>	Frequency error

Remote control

```
READ[:SCALar]:MODulation:XPError[:GMSK]?
FETCh[:SCALar]:MODulation:XPError[:GMSK]?
SAMPlE[:SCALar]:MODulation:XPError[:GMSK]?
```

```
CALCulate:MODulation:XPError[:GMSK]:LIMit:MATChing?
```

Measurement curves (arrays)

The continuous measurement curve in the test diagram shows the phase error in the burst (in degrees) as a function of time (in symbols). The display mode (*Current*, *Max./Min.*, *Average*) for the measurement curve is indicated in the upper right corner of the diagram.

The scale of both axes is fixed. The measurement curve comprises the whole useful part of the normal burst (symbol 0 to 146 ¾). The curve is derived from 588 equidistant measurement points with a ¼ symbol spacing. The y-axis ranges from -20° to +20°.

Due to the definition of the phase error (see shaded section on page 4.38), the phase error oscillates around the center of the diagram: The 0° line is equal to the regression line of the phase error trajectory calculated using the Mean Square Error method.

The two colored, horizontal lines in the test diagram mark the selected tolerance range of the phase error.

Remote control

```
READ:ARRay:MODulation:XPError[:GMSK][:BURSt]...?
FETCh:ARRay:MODulation:XPError[:GMSK][:BURSt]...?
SAMPlE:ARRay:MODulation:XPError[:GMSK][:BURSt]...?
```


Measurement Menu (Modulation – 8PSK)

If the 8PSK modulation scheme is selected (see *Application* softkey in section [Test Settings](#) on page 4.39 ff.), the graphical measurement menu *Modulation* displays quantities characterizing the 8PSK modulation accuracy.

- The measurement control softkey *Overview 8PSK* (which changes to *EVM 8PSK*, *Magn. Error 8PSK*, or *Phase Error 8PSK* if the corresponding application is selected) indicates the measurement status (*RUN* | *HLT* | *OFF*) and opens the configuration menu *Modulation Configuration* (press twice). The hotkeys associated to the measurement control softkey define the scope of the *Power* measurement.
- The other softkeys to the right of the test diagram are combined with various hotkeys. The softkey/hotkey combinations provide test settings and switch over between different measurements. The entry of values is described in section [Measurement Menu \(Power\)](#) on page 4.9.

The measurement menu *Modulation* can be accessed from any other measurement menu of function group *GSMxxx-MS Non Signalling* using the *Modulation* hotkey. It can be opened also from the *Menu Select* main menu (with the associated key at the front of the instrument).

Quantities characterizing the 8PSK modulation accuracy are determined as follows:

The actual modulation vector of the received signal from the mobile station is measured over the complete burst and stored. From a comparison of this measured modulation vector with the (computed) ideal signal vector, three non-redundant quantities are calculated (see [Fig. 4-17](#)):


<i>Phase error</i>	Difference in phase between the measured and the ideal signal vector.
<i>Magnitude error</i>	Difference between the magnitudes of the measured and the ideal signal vector.
<i>Error vector magnitude</i>	Magnitude of the vector connecting the measured and the ideal signal vector. In contrast to the previous quantities, the error vector magnitude cannot be negative.

These three quantities are calculated as a function of time and displayed over the whole useful part of the burst (symbol 6 to symbol 162), each of them in a separate graphical measurement menu. In addition, the peak and RMS values of all three quantities are calculated (over the whole display range or over the first ten symbols only) and displayed.

Finally, the *Modulation* measurement provides the following scalar quantities:

<i>95th percentile</i>	Limit value below which 95% of the values of a measurement curve are located. The 95 th percentile of a measured quantity has the same unit as the quantity itself. In the 8PSK modulation measurement, the CMU determines 95 th percentiles of the Error Vector Magnitude, the Magnitude Error, and the Phase Error.
<i>Origin offset</i>	Origin offset in the I/Q constellation diagram reflecting a DC offset in the baseband signal (see Fig. 4-18 on page 4.44 and Equation 4-1). The origin offset corresponds to an RF carrier feedthrough.
<i>I/Q imbalance</i>	Amplitude difference between the in-phase (I) to the quadrature (Q) components of the measured signal, normalized and logarithmized (see Fig. 4-18 on page 4.44 and Equation 4-2). The I/Q imbalance corresponds to an unwanted signal in the opposite sideband.
<i>Frequency error</i>	Difference of the measured frequency from the expected frequency.

For the **tolerance check** all three phase error curves can be fitted into a tolerance template and checked.

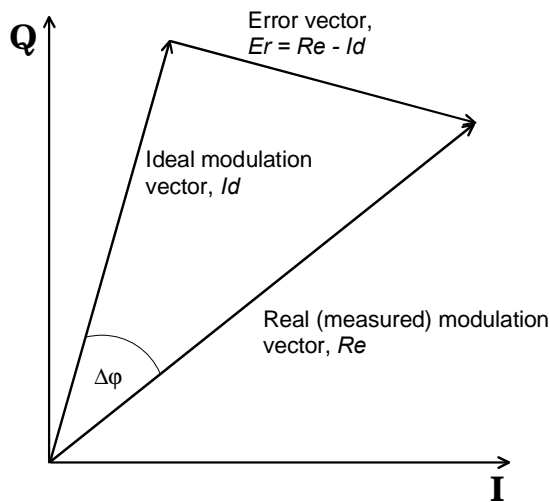

The I/Q vector diagram shows the following quantities measured in the *Modulation* menu:

- $|Er| = |Re - Id|$ Error vector magnitude (EVM)
- $\Delta\phi$ Phase error
- $|Re| - |Id|$ Magnitude error

The measurement diagrams show the relative magnitude error and the relative EVM, i.e. the quantities defined above divided by the magnitude of the ideal modulation vector $|Id|$.

Note: *The test functionality of the CMU is beyond the requirements of the standard where nothing regarding the phase error and magnitude error is specified.*

Fig. 4-17 Modulation errors in the I/Q vector diagram

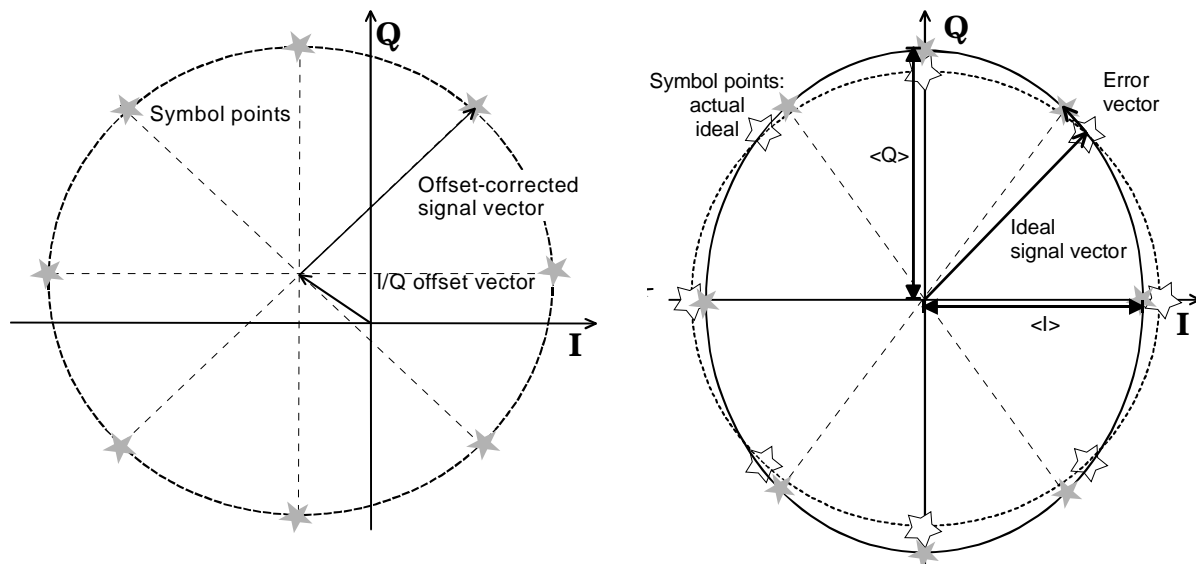


Fig. 4-18 Modulation errors in the I/Q constellation diagram

Fig. 4-18 is an idealized representation of the modulation errors where the effect of a pure origin offset (left diagram) and of a pure I/Q imbalance (right diagram) are completely disentangled. The I/Q offset in dB is the logarithmic ratio of the I/Q offset vector (i.e. the estimated DC-offset of the measured signal) to the average offset-corrected signal vector:

$$\text{Origin Offset} = 20\log \frac{|I/Q \text{ offset vector}|}{|\text{Offset-corrected signal vector}|} \quad (\text{Equation 4-1})$$

In **Equation 4-1**, $|\text{Offset-corrected signal vector}|$ denotes the magnitude of the offset-corrected signal vector averaged over all constellation points. The average is evaluated according to the rule given in the annex of standard GSM 05.05.

The I/Q imbalance in dB is equal to the difference between the estimated I and Q amplitudes of the measured signals, which are normalized and logarithmized as follows:

$$\text{I/Q Imbalance} = 20\log \frac{|\langle I \rangle - \langle Q \rangle|}{|\langle I \rangle + \langle Q \rangle|} \quad (\text{Equation 4-2})$$

The I/Q imbalance is measured for GMSK-modulated signals only.

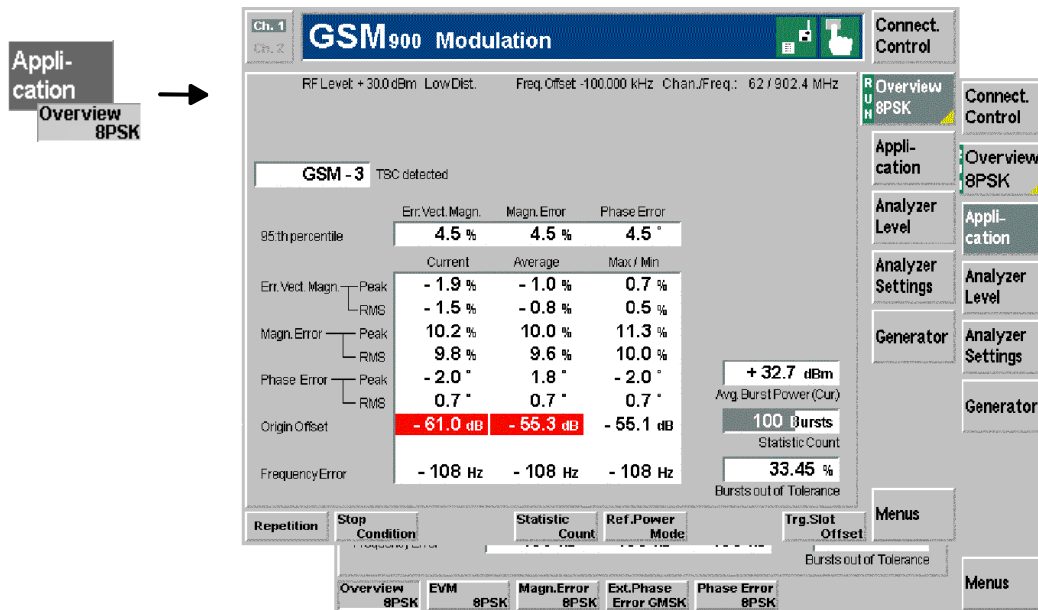


Fig. 4-19 Measurement menu Modulation – Overview 8PSK

Test Settings

The *Analyzer Level*, *Analyzer Settings*, *Generator*, and *Menus* test settings are identical with those in the *Power* menu (see section *Test settings* on page 4.9). The *Overview 8PSK* measurement control softkey (which changes to *EVM 8PSK*, *Magn. Error 8PSK*, or *Phase Error 8PSK* if the corresponding application is selected) is analogous to the *Ext. Phase Err. GMSK* softkey described in section *Test Settings* on page 4.39. With 8PSK modulation, the *Application* softkey provides the following applications:

Application

The *Application* softkey selects the measurement application and the modulation scheme. Several applications of the *Modulation* menu are related to 8PSK modulated signals. The GMSK application is described in section *Test Settings* on p. 4.39 f.

Overview 8PSK

The *Overview 8PSK* hotkey selects all scalar modulation results to be displayed. For an explanation of the measured quantities see section *Measurement Menu (Modulation – 8PSK)* on page 4.42.

Remote control

No explicit switchover command. All *Overview 8PSK* measurements are identified by the 3rd/4th level keywords ...OVERview:EPSK...

EVM 8PSK

The *EVM 8PSK* hotkey selects the magnitude of the error vector to be displayed. The error vector connects the measured signal from the mobile station and the ideal signal vector at the symbol points, see explanation in section *Measurement Menu (Modulation – 8PSK)* on page 4.42. The diagram shows the relative magnitude (in percent), i.e. the ratio of the magnitude of the error vector to the magnitude of the ideal signal vector.

Remote control

No explicit switchover command. All *EVM 8PSK* measurements are identified by the 3rd/4th level keywords ...EVMagnitude:EPSK...

**Phase Err.
8PSK**

The *Phase Error 8PSK* hotkey selects the phase error of the modulation vector to be displayed.

The phase error is the difference in phase between the measured signal from the mobile station and an ideal signal waveform at the symbol points, see explanation in section [Measurement Menu \(Modulation – 8PSK\)](#) on page 4.42.

Remote control

No explicit switchover command. All *Phase Error 8PSK* measurements are identified by the 3rd/4th level keywords . . . PERRor:EPSK. . .

**Magn. Err.
8PSK**

The *Magnitude Error 8PSK* hotkey selects the magnitude error of the modulation vector to be displayed.

The magnitude error is the difference in magnitude between the measured signal from the mobile station and an ideal signal waveform at the symbol points, see explanation in section [Measurement Menu \(Modulation – 8PSK\)](#). The diagram shows the relative magnitude error (in percent), i.e. the ratio of the absolute magnitude error to the magnitude of the ideal signal vector.

Remote control

No explicit switchover command. All *Magn. Error 8PSK* measurements are identified by the 3rd/4th level keywords . . . MERRor:EPSK. . .

Measurement Results

The values shown in the *Modulation* measurement menus can be divided into three groups:

- Setting values
- Scalar measurement results (single values)
- Arrays (traces plotted as a function of time)

The measurement menu for the *Overview* application shows all scalar results but no trace. The measurement menus for the remaining three applications are analogous to each other and show the phase error, the (relative) magnitude error or the (relative) error vector magnitude as a function of time and the corresponding peak and effective values. The range and unit of the y-axis is adjusted to the measured quantity.

a) Scalar Results (Overview)

The measurement menu for the application *Overview 8PSK* shows all scalar results. Most of the values are indicated in tabular form:

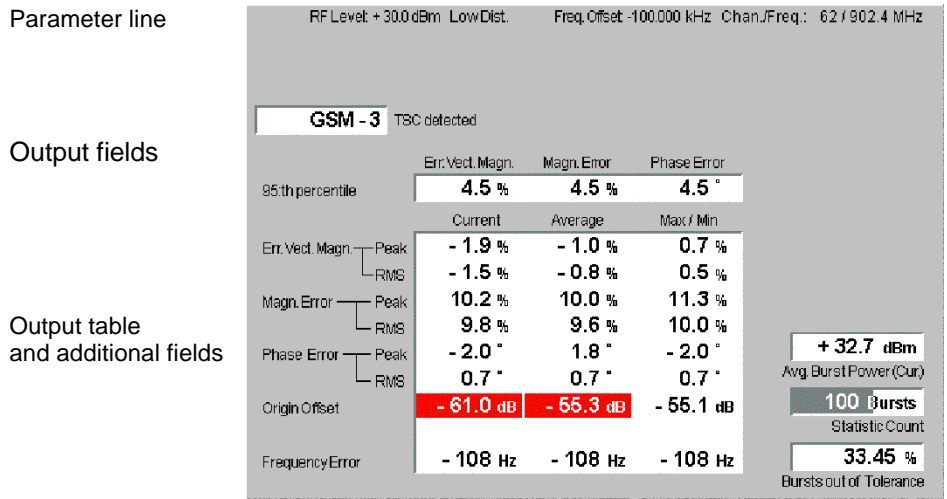


Fig. 4-20 Display of results (Modulation – Overview)

Parameter line The parameter line contains the following settings:
Max. Level Maximum expected input level set as in the *Analyzer* tab of the *Connection Control* menu (see section *Table-Oriented Version* on p. 4.76 ff.),
Attenuation Setting for the external attenuation of the input level (*Normal*, *Low Noise*, *Low Distortion*),
Freq. Offset Frequency offset compared to the nominal channel frequency,
Chan./Trig. Slot Offs. RF channel and trigger slot offset (see *Trig. Slot Offset* hotkey on p. 4.18)

Remote control The settings are retrieved using the query corresponding to the setting command (setting command with appended question mark).

Output fields In the output fields in the center of the menu, the following results are displayed:
TSC detected Detected training sequence of the current burst received from the mobile station (*GSM 0 to 7* or *Dummy* or "---"), see *Analyzer* tab, section *Table-Oriented Version* on p. 4.76 ff.
95th percentile Limit values below which 95% of the measured *Error Vector Magnitudes*, *Magnitude Errors*, and *Phase Errors* in the current burst are located. Owing to this definition, the 95th percentile of a measured quantity has the same unit as the quantity itself.

Output table The scalar values in the output table are explained at the beginning of this section on page 4.43. They are first calculated for the current burst. From the current results the average referenced to a statistics cycle (*Average*, see averaging rule in Chapter 3, section *General Settings*) and the extreme value over all bursts measured during the ongoing measurement (*Max/Min*) is calculated. Peak and RMS¹ values are taken over the whole useful part of the burst.
Error Vect. Magn. Peak and effective (RMS averaged) value of the relative error

¹ To keep the results comparable, RMS averaging was chosen for both positive quantities and quantities with alternating sign. The RMS-averaged EVM is calculated according to the rule of GSM 05.05.

	vector magnitude
<i>Magn. Error</i>	Peak and RMS (relative) magnitude error
<i>Phase Error</i>	Peak and RMS phase error
<i>Origin Offset</i>	Origin offset in the I/Q constellation diagram
<i>Frequency Error</i>	Difference between measured and expected signal frequency

Additional fields Three output fields to the right of output table indicate the following results and settings:

<i>MS Power</i>	Average power of current burst (irrespective of the display mode selected and of the trace in the other 8PSK applications).
<i>Statistic Count</i>	Length of bursts per statistics cycle. The colored bar indicates the relative measurement progress in the statistics cycle.
<i>Bursts out of Tolerance</i>	Percentage of bursts that violate the tolerance limits.

Limit Check A red output field and an arrow pointing upwards or downwards indicates that the measurement result exceeds the upper or lower limit set in the *Limits* tab of the *Modulation* configuration menu, see p. 4.52.

Remote control The settings are retrieved using the query corresponding to the setting command (setting command with appended question mark).

```
READ[:SCALar]:MODulation:OVERview:EPSK? etc.
CALCulate[:SCALar]:MODulation:OVERview:EPSK:
LIMit:MATChing?
```

b) Test Diagrams (EVM, Phase Error, Magn. Error)

The graphical measurement menus for the three applications *EVM 8PSK*, *Magn. Error 8PSK*, and *Phase Error 8PSK* are analogous. The results are indicated in two parameter lines, the test diagram, and a tabular overview below:

Parameter lines

Test diagram

Output fields

and table

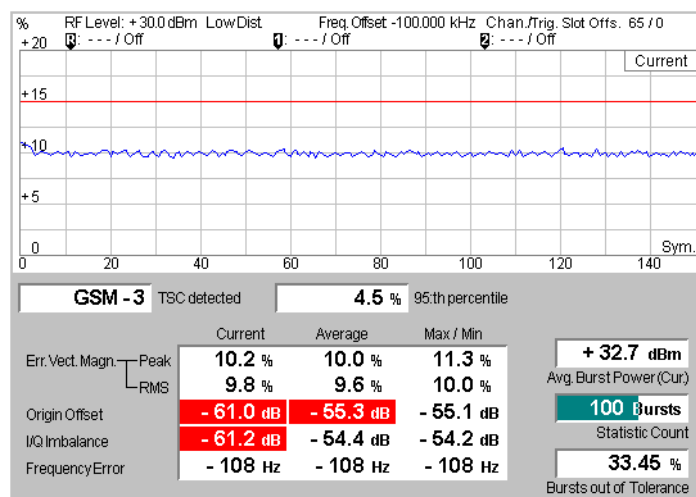


Fig. 4-21 Display of results (Modulation – EVM / Phase Error / Magn. Error)

Settings/ Scalar results Scalar measurement results and settings are indicated in the two parameter lines above the test diagram and in the output table below.

Parameter line	<p>The first parameter line contains the following settings:</p> <p><i>Max. Level</i> Maximum input level set as in the <i>Analyzer</i> tab of the <i>Connection Control</i> menu (see section Table-Oriented Version on p. 4.76 ff.)</p> <p><i>Attenuation</i> Setting for the external attenuation of the input level (<i>Normal, Low Noise, Low Distortion</i>)</p> <p><i>Freq. Offset</i> Frequency offset compared to the nominal channel frequency</p> <p><i>Chan./Trig. Slot Offs.</i> RF channel and trigger slot offset (see <i>Trig. Slot Offset</i> hotkey on p. 4.18)</p>
Remote control	<p>The settings are retrieved using the query corresponding to the setting command (setting command with appended question mark).</p>
Output fields	<p>Below the diagram, the following results are displayed:</p> <p><i>TSC detected</i> Detected training sequence of the current burst received from the mobile station (<i>GSM 0 to 7</i> or <i>Dummy</i> or "---"), see <i>Analyzer</i> tab, section Table-Oriented Version on p. 4.76 ff.</p> <p><i>95th percentile</i> Limit values below which 95% of the measured <i>Error Vector Magnitudes, Magnitude Errors, and Phase Errors</i> in the current burst are located. Owing to this definition, the 95th percentile of a measured quantity has the same unit as the quantity itself.</p>
Output table	<p>The output table contains the following scalar values:</p> <p><i>Avg. Burst Power</i> Average power of current burst (irrespective of the display mode selected and of the current trace),</p> <p><i>Statistic Count</i> Number of sweeps per statistics cycle. The colored bar indicates the relative measurement progress in the statistics cycle,</p> <p><i>Bursts out of Tolerance</i> Percentage of bursts that violate the tolerance limits.</p> <p>The following scalar values are calculated for the current burst first. From the current results the average referenced to a statistics cycle (<i>Average</i>, see averaging rule in Chapter 3, section <i>General Settings</i>) and the extreme value over all bursts measured so far (<i>Max/Min</i>) is calculated:</p> <p><i>Err. Vect. Magn. (Peak)</i> Maximum EVM (application <i>EVM 8PSK</i> only)</p> <p><i>Err. Vect. Magn. (RMS)</i> Effective EVM (RMS-averaged over the burst)</p> <p><i>Magn. Error (Peak)</i> Maximum magnitude error (application <i>Magn. Err. 8PSK</i> only)</p> <p><i>Magn. Error (RMS)</i> Effective magnitude error (RMS-averaged over the burst)</p> <p><i>Phase Error (Peak)</i> Maximum phase error (application <i>Phase Err. 8PSK</i> only)</p> <p><i>Phase Error (RMS)</i> Effective phase error (RMS-averaged over the burst)</p> <p><i>Origin Offset</i> Origin offset in the I/Q constellation diagram</p> <p><i>Frequency Error</i> Difference between measured and expected signal frequency</p> <p>Peak and RMS values are specific to the current application (<i>Phase Error, Magnitude Error</i> or <i>Error Vector Magnitude</i>). For an explanation of all quantities measured refer to the beginning of this section on page 4.43.</p>
Limit Check	<p>A red output field and an arrow pointing upwards or downwards indicates that the measurement result exceeds the upper or lower limit set in the <i>Limits</i> tab of the <i>TX Tests</i> configuration menu, see p. 4.52.</p>

```

Remote control
READ[:SCALar]:MODulation:EVMagnitude:EPSK          etc.
CALCulate[:SCALar]:MODulation:EVMagnitude:EPSK
:LIMit:MATChing?

```

Traces (arrays) The continuous trace in the test diagram shows the measured quantity as a function of time (in symbols). The display mode (*Current, Max./Min., Average*) for the trace is indicated in the upper right corner of the diagram.

The measurement curve comprises the whole useful part of the normal burst (symbol 0 to $146\frac{3}{4}$). The curve is derived from 588 equidistant measurement points with a $\frac{1}{4}$ symbol spacing. The y-axis range is fixed for any of the three measured quantities (applications):

```

0 % to +20 %      for the error vector magnitude
-20 % to +20 %    for the magnitude error
-20 deg to +20 deg for the phase error

```

The red, horizontal lines in the test diagram mark the tolerance range of the measured quantities as set in the *Limits* tab of the *Modulation Configuration* menu (see p. 4.52 ff).

```

Remote control
READ:ARRay:MODulation:EVMagnitude:EPSK:CURRent?  etc.

```

Measurement Configurations (Modulation Configuration)

The popup menu *Modulation Configuration* contains two tabs to determine the parameters of the phase and frequency error measurement including the error tolerances.

The popup menu *Modulation Configuration* is activated by pressing the measurement control softkey (labeled *Ext. Phase Err. GMSK, Overview 8PPSK, ...* depending on the modulation scheme and application selected) in the top right of the graphical measurement menu *Modulation* twice. By pressing the associated hotkeys, it is possible to change between the tabs.

Measurement Control (Modulation Configuration – Control)

The *Control* tab controls the *Modulation* measurement by defining

- The *Repetition* mode
- The *Stop Condition* for the measurement
- The measurement curve displayed (*Display Mode*, not for application *Overview 8PSK*)
- The number of bursts/evaluation periods forming a statistics cycle (*Statistic Count*),
- The decoding rule for guard and tail bits (*Decode*, for GMSK modulation only)
- The averaging rule to obtain the reference power (*Ref. Power Mode*, for 8PSK measurements only)

Besides, it influences the graphical measurement menus by adding or removing the *Grid*.

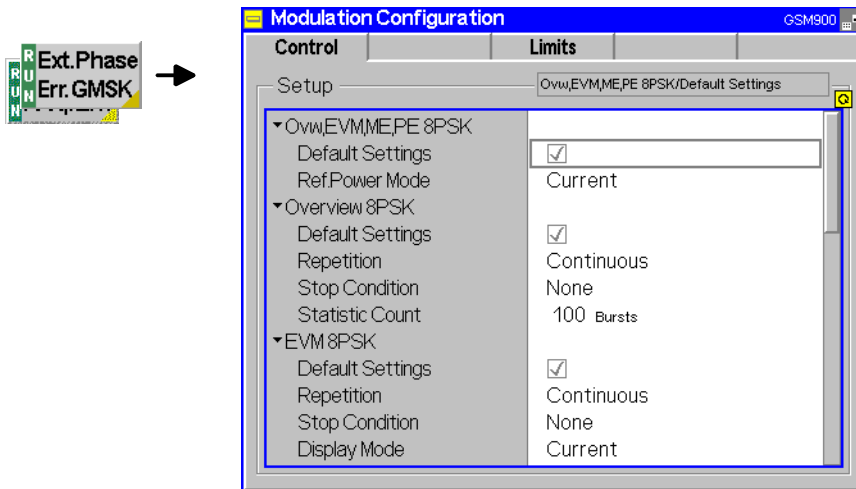


Fig. 4-22 Modulation Configuration – Control

The settings can be defined separately for the different applications of the *Modulation* measurement group. Most functions are analogous to those of the menu *Control* in the menu group *Power* (see page 4.28). In the remote-control commands, the keyword `POWer` is to be replaced by `MODulation`. The following parameters are specific to the *Modulation* measurement:

Default Settings The *Default Settings* switches assign default values to all settings in the *Control* tab belonging to an individual application (the default values are quoted in the command description in chapter 6 of this manual).

Remote control

```
CONFigure:MODulation:XPError[:GMSK]:CONTrol:DEFault ON | OFF
etc.
```

Display Mode

The *Display Mode* field defines which of the measured and calculated measurement curves is displayed. The measurement curves differ in the way the measured quantity at a fixed point in time *t* is calculated if the measurement extends over several bursts

- Current* Measured value for the current burst
- Max./Min.* Extreme value over a number of bursts
- Average* Average value over a number of bursts

The number of bursts for the calculation of the statistic values *Minimum/Maximum* and *Average* – and thus the result – depends on the repetition mode set (see section *Measurement Control (Power Configuration – Control)* on page 4.28). In detail, this implies:

- Single shot** Display of minimum, maximum and average value from the performed statistics cycle
- Continuous** Display of minimum and maximum from all bursts already measured. The **average value**, however, is calculated according to the averaging rule in Chapter 3, section *General Settings*.

In a power measurement absolute values are determined, whereas the measured phase error can have both positive or negative sign. To assess the phase error only the magnitude (and not the sign) is of importance so that extreme values are output in the menu *Modulation* instead of maxima and minima.

Remote control

no display mode set, the four measurement curves are accessible via
`FEtCh:ARRAy:MODulation:XPError[:GMSK][:BURSt]`

```
[ :CURRent ]?
FETCh:ARRAy:MODUlation:XPERror[ :GMSK ][ :BURSt ]:MMAX?
FETCh:ARRAy:MODUlation:XPERror[ :GMSK ][ :BURSt ]
:AVErAge? etc.
```

Decode

The *Decode* hotkey defines whether or not guard or tail bits are decoded (for GMSK modulation only).

Guard and tail bits are located at the beginning and the end of a normal burst (see Fig. 4-34), which is why they also affect the phase error at the beginning and the end of the useful information and therefore the frequency error. The CMU offers two settings:

- Standard** Guard and tail bits are assumed to be in line with GSM. If the mobile station does actually not send these bits correctly, large phase errors will be measured at the beginning and end of the useful information.
- Guard & Tailbits** Guard and tail bits are also decoded. This avoids excessive phase errors in the case of bursts that do not comply with the standard.

Remote control

```
CONFigure:MODUlation:XPERror[ :GMSK ]:TIME:DECode
STANdard | GTBits
```

Tolerance Values (Modulation Configuration – Limits)

The *Limits* tab defines upper and lower error limits for the measured values of the *Modulation* measurement.

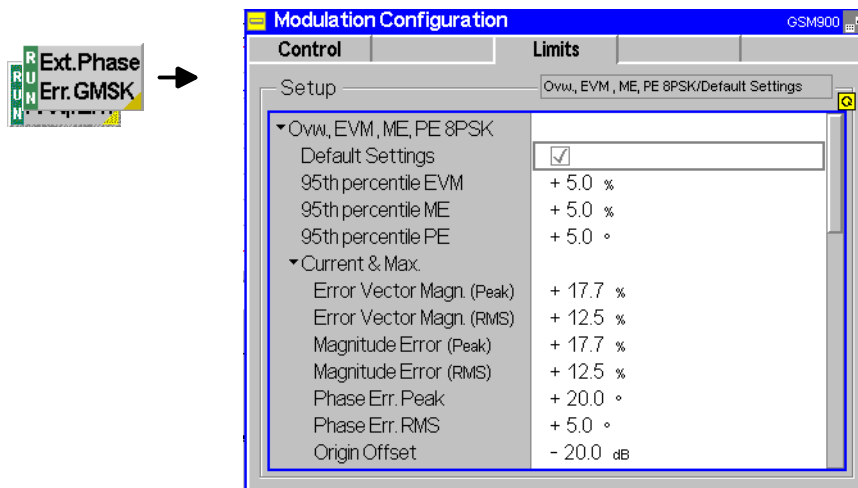


Fig. 4-23 Modulation Configuration – Limits

Default Settings

The *Default Settings* switches assign default values to all parameters of a particular application. The default values are quoted in the command description in chapter 6 of this manual.

Remote control

```
CONFigure:MODUlation:XPERror[ :GMSK ]:CONTrol:DEFault ON | OFF
etc.
```

Ovw., EVM, ME, PE 8PSK

The *Ovw., EVM, ME, PE 8PSK* table section defines all limits for 8PSK-modulated signals. The limits are set independently for the display modes *Current* and *Max./Min.* on one hand, *Average* on the other hand; see section [Measurement Control \(Modulation Configuration – Control\)](#) on page 4.50 ff.

- 95th percentile PE* Upper limit for the phase error below which 95% of all measured phase error values are located
- 95th percentile ME* Upper limit for the magnitude error below which 95% of all measured relative magnitude error values are located
- 95th percentile EVM* Upper limit for the relative error vector magnitude below which 95% of all measured EVM values are located
- Error Vector Magn.* Upper limits for the (peak and RMS-averaged²) relative error vector magnitude (EVM). Both entries are positive.
- Magnitude Error* Upper limits for the absolute value of the (peak and RMS) relative magnitude error. Both entries are positive; the limits for the peak magnitude error define a tolerance mask symmetric to the origin.
- Phase Error* Upper limits for the absolute value of the (peak and RMS) phase error. Both entries are positive; the limits for the peak phase error define a tolerance mask symmetric to the origin.
- Origin Offset* Upper limit for the origin offset in the I/Q constellation diagram.
- Frequency Error* Upper limit for the difference between the measured and the expected frequency of the signal.

For an explanation of all measured quantities refer to the beginning of this section on page 4.43.

Remote control

```
CONFigure:MODulation:OEMP:EPSK:LIMit[:CURRent] ...
CONFigure:MODulation:OEMP:EPSK:LIMit:AVERAge ...
```

Ext. Phase Error GMSK

The table section *Ext. Phase Error GMSK* defines upper limits for the different GMSK modulation parameters. The limits depend on the display mode of the measurement curve:

- Current & Max.* Common limits for the *Current* measurement curve and for the *Minimum/Maximum* curve (including the *Current* and the *Max./Min* scalar results)
- Average* Limits for the *Average* measurement curve (including the *Average* scalar results)

For setting of the display mode see section [Measurement Control \(Modulation Configuration – Control\)](#) on page 4.50.

The meaning of the error limits is the same for the *Current* or *Minimum/Maximum (Current & Max.)* and the *Average* results:

- Phase Error Peak* Maximum phase error
- Phase Error RMS* RMS phase error (RMS-averaged over the burst)
- Origin Offset* Upper limit for the origin offset in the I/Q constellation diagram.
- I/Q Imbalance* Upper limit for the amplitude difference between the in-phase and quadrature components of the signal.
- Frequency Error* Average frequency error in the burst

The *Phase Error Peak* and the *Frequency Error* are quantities with alternating sign; the corresponding limits are symmetric to the origin (i.e. the absolute value of both quantities must fall below the specified positive limit). In contrast to the *Power*

² To keep the results comparable, RMS averaging was chosen for both positive quantities and quantities with alternating sign. The RMS-averaged EVM is calculated according to the rule of GSM 05.05.

measurement where individual limit lines can be switched off, the *Modulation* limit check is always active.

Remote control

```
CONFigure:MODulation:XPError[:GMSK]:LIMit[:CURRENT]  
    <PhaseErrorPeak>,<PhaseErrorRMS>,<FrequencyError>
```

Spectrum Measurements

The menu group *Spectrum* measures the off-carrier power originating from the modulation process (*spectrum due to modulation*) and from the bursty nature of the RF signal, i.e. the power ramping up and down (*spectrum due to switching*). The two spectra can be measured separately (applications *Modulation* and *Switching*) or together (application *Modulation & Switching*). Moreover, it is possible to analyze the power vs. time of the signal at off-carrier frequencies. The popup menu *Spectrum Configuration* provides measurement settings.

The *Spectrum* measurement serves to measure the amount of energy that spills outside the designated radio channel when the mobile station transmits at variable output power. The measurement is made in the time domain (zero frequency span mode), at a series of frequency points distributed around the nominal frequency of the designated channel (see section *Tolerance Values (Spectrum Configuration – Limit Lines)* on page 4.64 ff.).

In GSM 05.05 and GSM 11.10, the two *Spectrum* measurements are specified in detail:

- For the *spectrum due to modulation*, the power must be averaged over a portion of the useful part of the burst, excluding the training sequence, and then averaged again over a given minimum number of bursts.
- For the *spectrum due to switching*, the peak power over a minimum number of bursts must be determined.

Additional requirements concerning the measurement bandwidths are specified.

The *Spectrum* measurements for GMSK and 8PSK modulation are analogous, however, the tolerance values specified in the GSM standard depend on the modulation scheme. The CMU can automatically determine the modulation scheme of the received bursts and adjust the tolerance template.

A typical example of a burst measured at 400 kHz offset from the carrier (1st alternate channel) with a 30 kHz measurement filter is given below (Fig. 4-24). In the left example, the burst power at any time is averaged over several consecutive bursts, the right example represents a peak hold measurement.

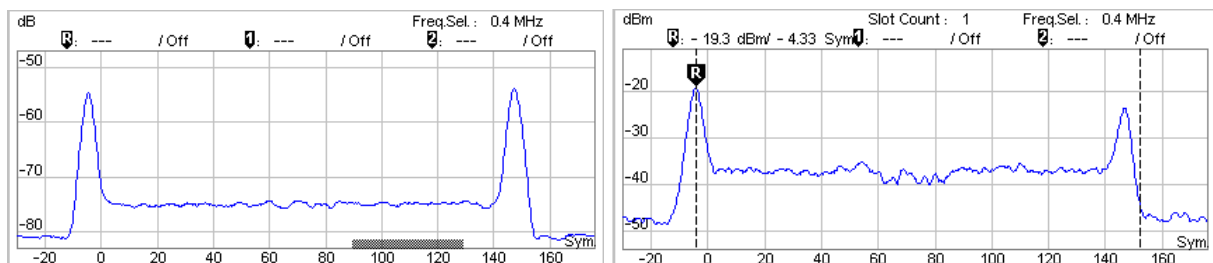


Fig. 4-24 Spectrum due to modulation and switching transients in time domain representation

Multislot Mode If the DUT operates in multislot mode, the spectrum due to *Switching* depends on the MS transmitter output power in all timeslots. The CMU provides a special multislot mode where the switching transients can be correctly measured for any multislot configuration and for any levels in the individual UL timeslots; see *Slot Count* softkey on p. 4.63.

The *Spectrum due to Modulation* measurement is performed on a slot by slot basis; the result is not influenced by multislot scenarios.

Trigger Settings In *Free Run* trigger mode (see section *Trigger (Connection Control – Trigger)* on p. 4.88 ff.), the CMU does not detect the burst edges of the measured RF signal. This mode is unsuitable for *Switching* measurements but can be used for *Modulation* measurements on continuous signals.

Measurement Menu (Spectrum)

The graphical measurement menu *Spectrum* displays the results of the adjacent channel power measurement.

- The measurement control softkey *Modulation* (which changes to *Switching* or *Modulation/Switching* when the corresponding application or modulation scheme is selected) controls the measurement, indicates its status (*RUN* | *HLT* | *OFF*) and opens the configuration menu *Spectrum Configuration* (press twice). The hotkeys associated to the measurement control softkey define the scope of the *Spectrum* measurement.
- The remaining softkeys to the right of the test diagram are combined with various hotkeys. When a softkey is selected and an associated hotkey pressed, a popup window appears which indicates a setting or enables an entry. The entry of values is described in section *Test Settings* on page 4.3.

The measurement menu *Modulation* can be accessed from any other measurement menu of function group *GSMxxx-MS Non Signalling* using the *Spectrum* hotkey. It can be opened also from the *Menu Select* main menu (with the associated key at the front of the instrument).

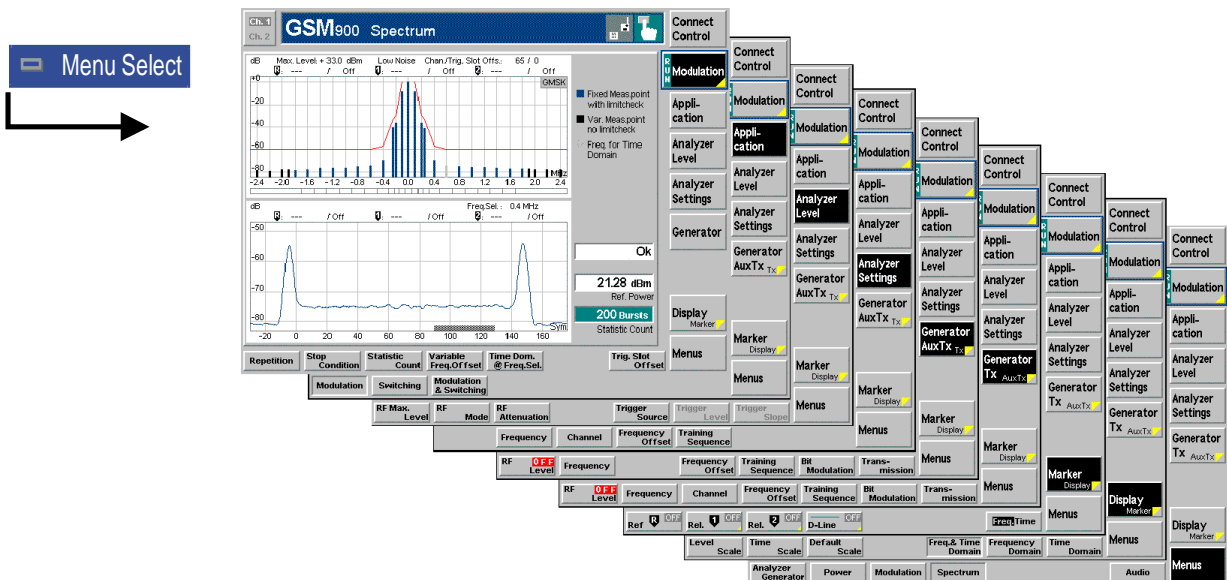


Fig. 4-25 Measurement menu Spectrum due to Modulation

Test Settings

The *Analyzer Level*, *Analyzer Settings*, *Generator*, and *Menus* test settings are identical with those in the *Power* menu (see section *Test settings* on page 4.9). The following softkeys and hotkeys differ from the *Power* measurement:

Modulation

The *Modulation* softkey controls the measurement and indicates its status (*RUN* | *HLT* | *OFF*). This status can be changed after softkey selection (pressing once) by means of the *ON/OFF* key or the *CONT/HALT* key. It can be set independently for all *Spectrum* applications.

The active application generally suspends the other applications. On switchover between different applications, the selected measurement status of each application is stored and will be put into effect as soon as the application is activated. In particular, an application in the status *RUN* is restarted each time it is activated.

```
Remote control
INITiate:SPECTrum:MODulation
ABORT:SPECTrum:MODulation
```

STOP:SPECTrum:MODulation
 CONTInue:SPECTrum:MODulation
 FETCh:SPECTrum:MODulation:STATus?

Measurement configuration

Pressing the *Modulation* softkey twice opens the popup menu *Spectrum Configuration* (see page 4.50 ff.). Besides, the hotkeys *Repetition*, *Stop Condition*, and *Statistic Count* defining the scope of the measurement and the *Trig. Slot Offset* hotkey are associated to the *Modulation* softkey. The function of these hotkeys is explained in the *Power* menu section (see section *Test settings* on page 4.9); they are identical with the parameters set in the *Control* tab of the *Spectrum Configuration* menu (see page 4.50 ff.).

The remaining parameters are specific to the *Spectrum* measurement and described in section *Measurement Control (Spectrum Configuration – Control)* on p. 4.62 ff.

**Appli-
cation**

The *Application* softkey changes the type of spectrum to be measured. The two alternative spectra can be displayed in separate measurement menus or together in a common menu. When an application is selected, the corresponding measurement menu is called up and the labeling of the measurement control softkey is adapted. The configuration settings for both applications, however, are listed in a common popup menu (see p. 4.62 ff.).

Modulation

The *Modulation* hotkey selects the spectrum due to modulation measurement for GMSK or 8PSK modulated signals; see p. 4.58 ff. The application also provides an additional power vs. time diagram at a selectable frequency offset from the carrier.

Remote control

No explicit switchover command. All spectrum due to modulation measurements are identified by the 2nd to 4th level keywords . . .SPECTrum:MODulation

Switching

The *Switching* hotkey selects the spectrum due to switching for GMSK or 8PSK modulated signals; see p. 4.60 ff. The application also provides an additional power vs. time diagram at a selectable frequency offset from the carrier.

Remote control

No explicit switchover command. All spectrum due to modulation measurements are identified by the 2nd to 4th level keywords . . .SPECTrum:SWITching

**Modulation
Switching**

The *Modulation/Switching* hotkey selects the simultaneous measurement of the spectrum due to modulation and the spectrum due to switching for GMSK or 8PSK modulated signals.

Remote control

No explicit switchover command. All combined spectrum measurements are identified by the 2nd to 4th level keywords . . .SPECTrum:MSWitching

**Display
Marker**

The *Display/Marker* softkey is available in the *Modulation* and *Switching* applications. It provides hotkeys to change the diagram scales (for the time domain diagram) and display or hide the power vs. frequency bar graph and/or power vs. time diagram.

Remote control

No remote control commands, display configuration only.

Marker Display

The *Marker/Display* softkey is available in all applications. It provides hotkeys to position markers in the different diagrams. In the *Switching* application, a marker placed on a bar in the frequency domain diagram will also appear on the corresponding peak value of the curve in the time domain diagram; see Fig. 4-27 on p. 4.60.

Remote control
No remote control commands, display configuration only.

Measurement Results

The *Spectrum* measurement menu and the results depend on the type of spectrum (application) selected. The scaling of the x-axis is equal for the *Modulation* and *Switching* spectra. However, the spectrum due to modulation is expressed in relative units (dBc), the spectrum due to switching in absolute units (dBm).

a) Spectrum due to Modulation

In the *Spectrum due to Modulation* measurement, the average burst power at a series of fixed and variable frequency points around the selected RF frequency is displayed. The results and the test settings are indicated in two parameter lines, the test diagram (frequency domain bar graph), and some additional output fields.

The power vs. time at a particular offset frequency from the carrier can be displayed in an additional time domain diagram.

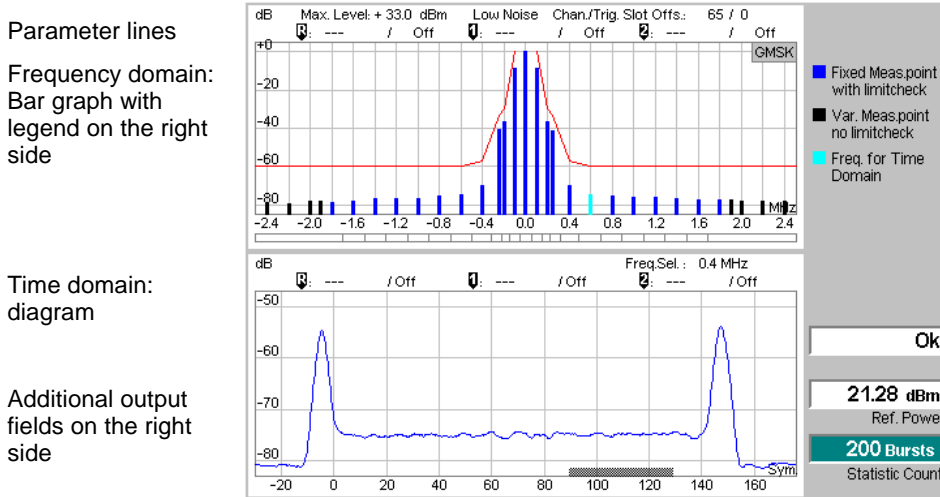





Fig. 4-26 Display of results (spectrum due to modulation)

Parameter lines	The first parameter line contains the following settings:
<i>Max. Level</i>	Maximum input level set as in the <i>Analyzer</i> tab of the <i>Connection Control</i> menu (see section Table-Oriented Version on p. 4.76 ff.)
<i>Attenuation</i>	Setting for the external attenuation of the input level (<i>Normal, Low Noise, Low Distortion</i>)
<i>Freq. Offset</i>	Frequency offset compared to the nominal channel frequency
<i>Chan./Trig. Slot Offs.</i>	RF channel and trigger slot offset (see <i>Trig. Slot Offset</i> hotkey on p. 4.18)

2 nd parameter line	The second parameter line contains the following marker values:
	 Absolute level (in dBm) and frequency offset from the carrier of reference marker
	 Level (in dBm) and frequency offset of delta marker 1 (setting <i>absolute</i>). With setting <i>relative</i> , the level difference from the carrier is indicated (same as the diagram units)
	 Level and time of delta marker 2, see delta marker 1

Output fields	The info box indicates the following settings and scalar results:
	<i>Burst Matching</i> Error message if the displayed burst is out of tolerance.
	<i>Ref. Power</i> Absolute value of the measured carrier output power of the MS. According to GSM specifications, the <i>Ref. Power</i> is measured with a filter bandwidth of 30 kHz so that it differs from the average burst power determined in the <i>Power vs. Time</i> menu.
	<i>Statistic Count</i> Number of bursts per statistics cycle.

Remote control
 The settings are retrieved using the query corresponding to the setting command (setting command with appended question mark). The reference power and burst matching are retrieved with a single command:

```

READ[:SCALar]:SPECTrum:MODulation?
FETCh[:SCALar]:SPECTrum:MODulation?
SAMPle[:SCALar]:SPECTrum:MODulation?
Response: <RefPow>, <Matching>
  
```

Diagrams The measurement application provides a power vs. frequency bar graph and a power vs. time diagram. Which of the diagrams are displayed depends on the display settings; see [Display/Marker](#) softkey on p. 4.57.

Frequency Domain: Bar graph The bar graph shows the current carrier output power of the BTS and the measured spectrum due to modulation at up to 11 fixed but non-equidistant frequencies that are symmetrically distributed around the carrier frequency. The measurement at every single frequency point can be switched on and off in the *Meas X* tab (see p. 4.69). Moreover it is possible to define additional variable test frequencies.

The diagram is scaled such that the x-axis indicating the frequency offset from the carrier ranges from -2.5 MHz to +2.5 MHz (with R&S CMU-U65 Var04; with older versions the measurement range is restricted to -1.8 MHz to +1.8 MHz). The carrier output power (*Ref. Power*) defines the 0 dB reference level. The spectral tolerance mask defined in the *Limit Lines* tab (see p. 4.64 ff) is indicated in addition. The measurement result at particular frequencies can be retrieved by means of markers.

- Color legend The frequency domain diagram can show three types of bars:
- The dark blue bars correspond to the fixed spectrum due to modulation test frequencies defined in the conformance test specification. The result at the fixed frequencies is limit-checked.
 - Black bars correspond to the additional variable test frequencies. The result is not limit-checked.
 - The light blue bar in the diagram center indicates the frequency where the time-domain diagram is measured, i.e. the frequency set under *Modulation – Time Dom. @ Freq. Sel.*

```

Remote control
READ:ARRay:SPECTrum:MODulation[:FDOMain]?
FETCh:ARRay:SPECTrum:MODulation[:FDOMain]?
  
```

Limit Check `SAMPlE:ARRAy:SPEctrum:MODulation[:FDOmain]?`
 The upper limit lines defined in the *Limit Lines* tab of the configuration menu (see p. 4.64 ff) yield the red polygonal curve in the diagram. The limit line template used (GMSK or 8PSK) is indicated in the upper right corner of the diagram. If the limit check fails at a particular test point the corresponding section of the bar across the bottom of the diagram turns red.

Remote control
`CALCulate:ARRAy:SPEctrum:MODulation:AREA:LIMit:MATChing?`

Time Domain Diagram The time domain diagram shows the current MS output power at the frequency set under *Modulation – Time Dom. @ Freq. Sel.*, measured with a 30 kHz filter and averaged over consecutive bursts. The diagram is scaled such that the x-axis covers one burst length plus an appropriate margin; the carrier output power (*Ref. Power*) defines the 0 dB reference level. The diagram scale can be changed using the *Display/Marker* softkey.

The gray bars across the bottom of the diagram represent the *Averaging Areas* (A, B or both) selected in the *Control* tab of the configuration menu (see p. 4.63).

Remote control
`READ:ARRAy:SPEctrum:MODulation:TDOMain?`
`FETCh:ARRAy:SPEctrum:MODulation:TDOMain?`
`SAMPlE:ARRAy:SPEctrum:MODulation:TDOMain?`

b) Spectrum due to Switching

In the *Spectrum due to Switching* measurement, the maximum level measured at a series of fixed and variable frequency points around the selected RF frequency is displayed. The results and the test settings are indicated in two parameter lines, the test diagram (power vs. frequency bar graph), and some additional output fields.

The power vs. time at a particular offset frequency from the carrier can be displayed in an additional power vs. time diagram.

Parameter lines
 Frequency domain:
 Bar graph with
 legend on the right
 side
 Time domain:
 diagram
 Additional output
 fields on the right
 side

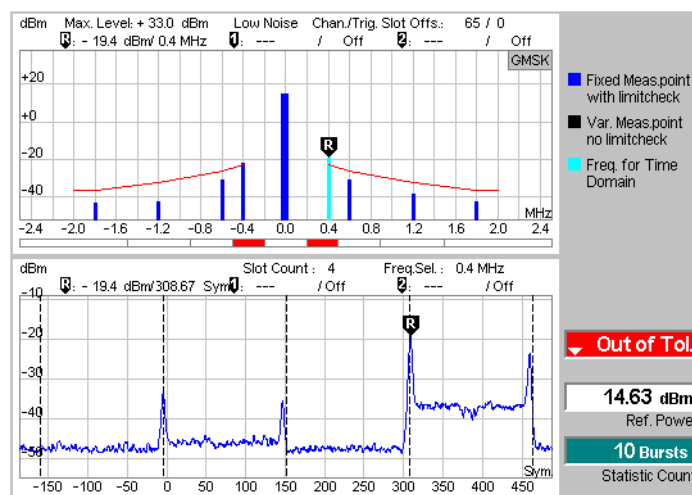


Fig. 4-27 Display of results (spectrum due to switching)

The two parameter lines, the output fields, the color legend and the time domain diagram are identical with the *due to Modulation* menu, see above. Note that, according to GSM specifications, the *Ref.*

Power is measured with a wide-band filter so that it slightly differs from the average burst power determined in the *Power* menu.

Frequency Domain: The bar graph shows the carrier output power of the mobile station in the *Measured Timeslot* and the measured spectrum due to switching at up to 4 non-equidistant frequencies that are symmetrically distributed around the carrier frequency. The switching transients are obtained in peak hold mode but can be updated after each measurement cycle (see *Cont. Stat. Mode* parameter in section [Measurement Control \(Spectrum Configuration – Control\)](#) on p. 4.62 ff.). The diagram is scaled such that the x-axis indicating the frequency offset from the carrier ranges from –2.5 MHz to +2.5 MHz (with R&S CMU-U65 Var04; with older versions the measurement range is restricted to –1.8 MHz to +1.8 MHz). The y-axis is in absolute power units (dBm).

Bar graph

The spectral tolerance mask defined in the *Limit Lines* tab (see p. 4.64 ff.) is indicated in addition. The measurement result at particular frequencies can be retrieved by means of markers. The measurement at every single frequency point can be switched on and off in the *Meas X* tab (see p. 4.69).

Remote control

```
READ:ARRAY:SPECTrum:SWITching[:FDomain]?
FETCh:ARRAY:SPECTrum:SWITching[:FDomain]?
SAMPle:ARRAY:SPECTrum:SWITching[:FDomain]?
```

Limit Check

The upper limit lines defined in the *Limit Lines* tab of the configuration menu (see p. 4.64 ff.) yield the red polygonal curve in the diagram. The limit line template used (GMSK or 8PSK) is indicated in the upper right corner of the diagram. If the limit check fails at a particular test point the corresponding section of the bar across the bottom of the diagram turns red.

Remote control

```
CALCulate:ARRAY:SPECTrum:SWITching:AREA:LIMit:MATChing?
```

Time Domain Diagram

The time domain diagram shows the current MS output power at the frequency set under *Modulation – Time Dom. @ Freq. Sel.*, measured with a 30 kHz filter, a 100 kHz video filter and in peak hold mode.

The diagram is scaled such that the x-axis covers the number of burst lengths selected in the configuration menu (*Spectrum Configuration – Control – Switching – Slot Count*) plus an appropriate margin. The carrier output power (*Ref. Power*) defines the 0 dB reference level. The diagram scale can be changed using the [Display/Marker](#) softkey.

Remote control

```
READ:ARRAY:SPECTrum:SWITching:TDOMain?
FETCh:ARRAY:SPECTrum:SWITching:TDOMain?
SAMPle:ARRAY:SPECTrum:SWITching:TDOMain?
```

c) Application Modulation & Switching

In the *Modulation & Switching* application, both spectra are measured in a single measurement shot. The measurement menu contains two diagrams corresponding to the frequency domain bar graphs in the *Modulation* and *Switching* applications. *Modulation & Switching* can be used if both spectra but no power vs. time results are needed.

In remote control, *Modulation & Switching* is identified by the 2nd to 4th level keywords ...SPECTrum:MSWitching... The combined MSWitching measurement takes longer than a single

MODulation or SWITching measurement, however, all results can be retrieved with a single command.

Measurement Configurations (Spectrum)

The popup menu *Spectrum Configuration* contains three tabs to define the parameters of the spectrum measurement including the error tolerances.

The popup menu *Spectrum Configuration* is called up by pressing the measurement control softkey in the top right of the graphical measurement menu *Spectrum* twice (this softkey reads *due to Modulation* or *due to Switching*, depending on the selected application). By pressing the associated hotkeys, it is possible to change between the tabs.

Measurement Control (Spectrum Configuration – Control)

The *Control* tab controls the spectrum measurement by defining

- The *Repetition* mode
- The *Stop Condition* for the measurement
- The measurement curve displayed (*Display Mode*)
- The number of bursts/evaluation periods forming a statistics cycle (*Statistic Count*)
- The frequency at which the time domain measurement results are acquired (*Time D. @ Freq.*)
- The area(s) within the burst where the power is measured and averaged (*Averaging Areas*, for *Modulation* only)
- The number of slots measured and displayed in the time domain diagram (*Slot Count*, for *Switching* only)

Besides, it influences the appearance of the measurement diagram by adding or removing the *Grid*.

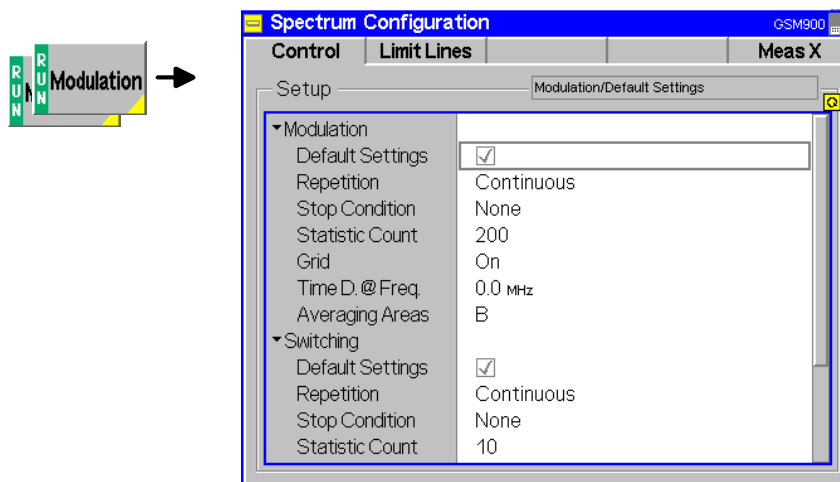


Fig. 4-28 Spectrum Configuration – Control

The statistical settings can be defined separately for the three applications *Modulation*, *Switching* and *Modulation & Switching*. They are analogous to those of the *Control* tab in the menu group *Power* (see page 4.28). In the remote-control commands, the keyword `POWER` is to be replaced by `SPECTrum:MODulation` or `SPECTrum:SWITching`.

The following parameters are specific to the *Spectrum* measurement:

Time D. @ Freq. *Time D. @ Freq.* selects the measurement frequency for the time domain (power vs. time) diagrams in the *Modulation* and *Switching* applications. The frequency is defined relative to the carrier frequency (*Analyzer Settings – Frequency*). All fixed and variable frequencies defined and enabled in the *Meas X* tab are available as time domain frequencies.

Remote control
 CONFigure:SPECTrum:MODulation:TDFSelect
 CONFigure:SPECTrum:SWITching:TDFSelect

Averaging Areas *Averaging Areas* selects one or two 40-bit sections of the burst which are measured and averaged in order to calculate the *Modulation* results. In accordance with the test specification the areas A and B do not overlap with the training sequence. Area A is located before, area B after the training sequence. The selected area(s) are indicated with a gray bar in the time domain diagram.

This setting has no impact on the *Switching* measurement.

Remote control
 CONFigure:SPECTrum:MODulation:AVGareas

Cont. Stat. Mode *Cont. Stat. Mode* defines the analyzer settings for the *Spectrum due to Switching* measurement:

F. Dom. & T. Dom.

Peak Hold The results in the frequency and time domain diagram reflect the maximum signal power since the start of the measurement. The old results are only cleared when a new measurement is started.

F. Dom.: Stat. Count / T. Dom.:

Current The results in the frequency domain diagram are equal to the peak value over the last n bursts where n is the selected *Statistic Count* (moving window). If a *Statistic Count* larger than 100 is selected, then the peak value is taken over the last 100 bursts. The time domain measurement always represents the current burst.

Both settings are equivalent for single shot measurements.

Remote control
 CONFigure:SPECTrum:SWITching:CSMode PHOL | SCO

Slot Count *Slot Count* defines the number of timeslots which are considered for the *Spectrum due to Switching* measurement:

1 The CMU measures the peak power in a fixed timeslot. The measured timeslot (MTS) is given by the trigger time plus the *Trig. Slot Offset*; see [Fig. 4-3](#) on p. 4.18. A measurement cycle with *Statistic Count = n* extends over n (not necessarily consecutive) TDMA frames, where only the fixed timeslot, including the burst edges, is measured.

1 < n ≤ 8 The CMU measures the peak power in the MTS (see definition above), the MTS – 1, and the n–2 timeslots MTS + 1, MTS + 2, ..., MTS + n – 2. The carrier output power (central bar in the *Spectrum due to Switching* diagram) is measured in the MTS; whereas the off-carrier powers represent the maximum power over all measured timeslots; see [Fig. 4-27](#) on p. 4.60. A measurement cycle with *Statistic Count = n* extends over n TDMA frames.

The single slot measurement (*Slot Count: 1*) is faster and is correct if the DUT operates in single slot mode. By increasing the slot count it is possible to obtain the correct *Spectrum due to Switching* for any multislot configuration and for any levels in the individual UL timeslots. The measured off-carrier power does not depend on the *Measured Timeslot*, however, the *Measured Timeslot* has an influence on the measured carrier output power and thus on the limit lines (see [Table 4-3](#) on p. 4.67). The *Measured Timeslot* can be changed in order to select the highest MS output power as a reference for the tolerance template, in close analogy to single slot mode.

Remote control

CONFigure:SPECTrum:SWITching:NOSlots 1 to 8

Tolerance Values (Spectrum Configuration – Limit Lines)

The tab *Limit Lines* defines upper limits for the output spectrum around the RF carrier frequency. All relative limit values are referred to the actual carrier output power of the base station.

a) Spectrum due to Modulation

The limit lines for the *spectrum due to modulation* as specified in GSM 05.05 and GSM 11.10 depend on the GSM band, the frequency, and (for frequencies that differ from the carrier frequency by more than 400 kHz) on the output power of the mobile station. The following values apply up to a frequency offset of 1.8 MHz:

Table 4-1 GSM tolerances for spectrum due to modulation

Frequency offset / [MHz]	GSM400/850/900 Relative power at MS output power		GSM1800/1900 Relative power at MS output power	
	≤ 33 dBm (in dBc)	≥ 39 dBm (in dBc)	≤ 24 dBm (in dBc)	≥ 36 dBm (in dBc)
0.1	+0.5	+0.5	+0.5	+0.5
0.2	-30	-30	-30	-30
0.25	-33	-33	-33	-33
0.4	-60 (GMSK mod.) -54 (8PSK mod.)	-60	-60 (GMSK mod.) -54/-60 (8PSK mod.) ³	-60
≥0.6, ≤1.8	-60	-66	-60	-60

³ For equipment supporting 8PSK, the limit of -54 dBc applies to MS output powers up to +30 dBm, -60 dBm to MS output powers above +30 dBm.

In the frequency range above 400 kHz from the carrier and for output powers between 33 dBm and 39 dBm (GSM400/850/900), the limit depends linearly on the output power. The resulting spectral mask for GMSK modulation is shown below (Fig. 4-29).

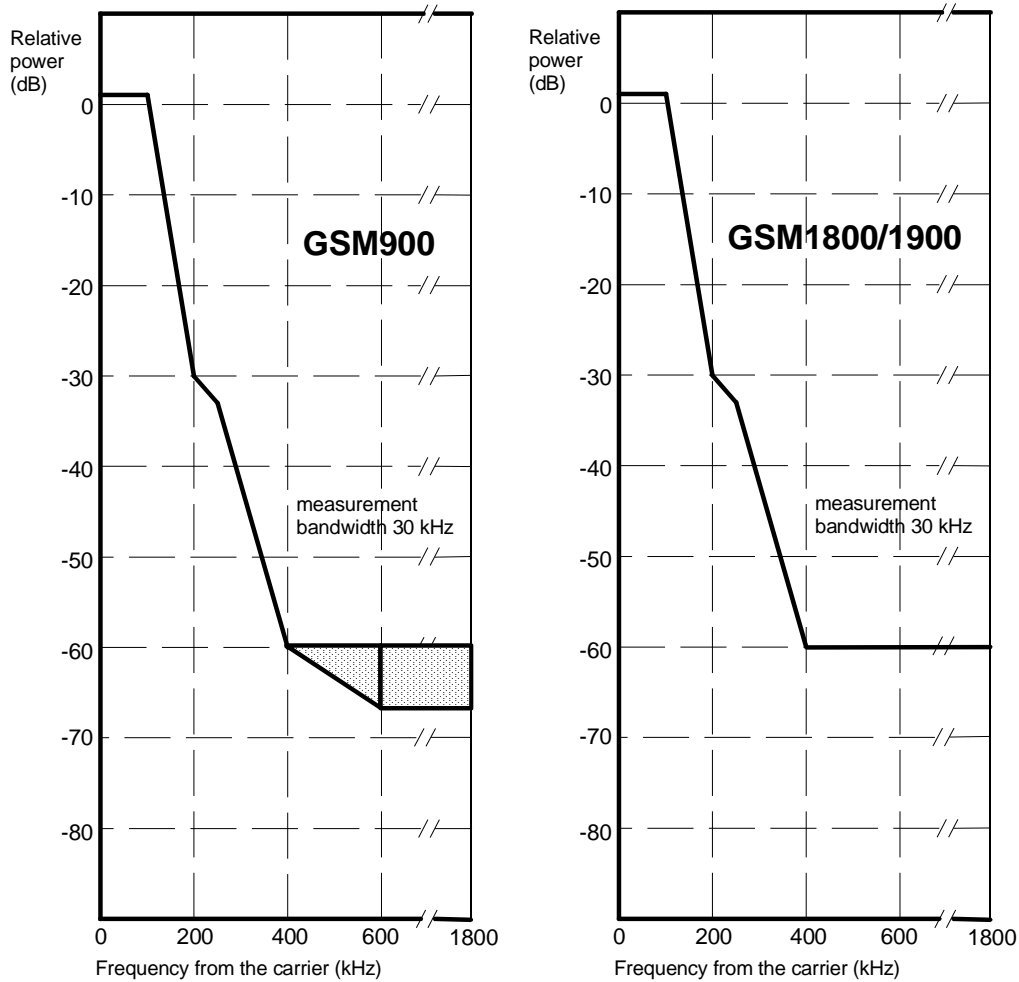


Fig. 4-29 Spectral mask as specified for GSM mobile stations

As an alternative to the relative limit values quoted in Table 4-1, GSM specifies the following absolute limits, again depending on the frequency offset from the carrier and the GSM band. If the relative limits are tighter than the absolute limits, the latter shall be applied.

Table 4-2 GSM tolerances for spectrum due to modulation (absolute)

Frequency offset / [MHz]	Absolute power, GSM400/850/900	Absolute power, GSM1800/1900
< 0.6	-36 dBm	-36 dBm
≥0.6, <1.8	-51 dBm	-56 dBm
≥1.8	-46 dBm	-51 dBm

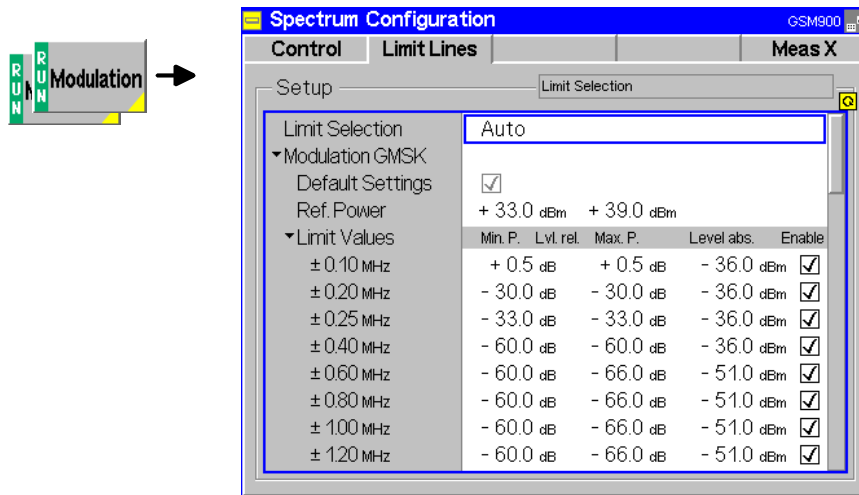


Fig. 4-30 Spectrum Configuration – Limit Lines

- Limit Selection** Selects the limit line template to be applied.
- Auto* The CMU uses the GMSK template. After detecting the first 8PSK modulated burst it uses the 8PSK template until the end of the measurement. Occasional GMSK modulated bursts within the 8PSK burst sequence will not disturb the limit lines.
 - GMSK* The GMSK template is used irrespective of the actual modulation scheme of the received signal.
 - 8PSK* The GMSK template is used irrespective of the actual modulation scheme of the received signal.

Remote control
`CONFigure:SPECTrum:LIMit:LINE:SElect GMSK | EPSK | AUTO`

- Default Settings** The *Default All Settings* switch assigns default values to all settings in the *Limits* tab (the default values are quoted in the command description in chapter 6 of this manual). In addition, default switches for the individual spectrum types are provided.

Remote control
`CONFigure:SPECTrum:MODulation[:GMSK]:LIMit:LINE:DEFault ON|OFF etc.`

- Ref. Power** The *Ref. Power* line defines the MS carrier output power domain where the limit lines are to be determined by linear interpolation (see [Table 4-1](#)). Below *Min. P.*, the lower limit line applies, above *Max. P.*, the upper limit line applies. The *Ref. Power* domain can be modified.

Remote control
`CONFigure:SPECTrum:MODulation[:GMSK]:LIMit:LINE:REFPower[:UPPer] <Min_Power>, <Max_Power>`

- Limit Values** The *Limit Values* table section defines upper limits for the power at eleven fixed, GSM-specific frequency offsets:

Lvl. rel. Upper limit for the RF power referred to the MS output power measured in 30 kHz on the carrier. The two values are valid for output powers below the *Ref. Power* domain (*Min. P.*) and for output powers above the *Ref. Power* domain (*Max. P.*). Inside the

Ref. Power domain, Lvl. rel. is determined by linear interpolation.

Level abs. Alternative absolute power limits (see [Table 4-2](#)), applied if the relative limits *Lvl. rel.* are tighter.

Enable Switches the limit check at the frequency on and off.

Remote control
 CONFigure:SPECTrum:MODulation[:GMSK]:LIMit:LINE
 :UPPer<nr> <RelLow>, <RelUpp>, <Abs>, <Enable>
 CONFigure:SPECTrum:MODulation[:GMSK]:LIMit:LINE:MODE[:UPPer]
 ON|OFF etc.

b) Spectrum due to Switching

The limit lines for the *spectrum due to switching* as specified in GSM 05.05 and GSM 11.10 cover offset frequencies between 0.4 and 1.8 MHz. They are equal for all three GSM bands but depend on the output power of the mobile station. The measurement of the spectrum due to switching is complicated by the fact that at high power levels, the modulation spectrum is being measured using a peak hold measurement. The tolerances in the following table allow for the additional effects due to the modulation spectrum:

Table 4-3 GSM tolerances for spectrum due to switching plus modulation effects:

GSM400/ GSM850/ GSM900	Maximum MS level measured (peak hold) / [dBm] at frequency offset				GSM1800	Maximum MS level measured (peak hold) / [dBm] at frequency offset			
	MS power / [dBm]	0.4 MHz	0.6 MHz	1.2 MHz		1.8 MHz	MS power / [dBm]	0.4 MHz	0.6 MHz
≥39	-13	-21	-21	-24	≥36	-16	-21	-21	-24
+37	-15	-21	-21	-24	+34	-18	-21	-21	-24
+35	-17	-21	-21	-24	+32	-20	-22	-22	-25
+33	-19	-21	-21	-24	+30	-22	-24	-24	-27
+31	-21	-23	-23	-26	+28	-23	-25	-26	-29
+29	-23	-25	-25	-28	+26	-23	-26	-28	-31
+27	-23	-26	-27	-30	+24	-23	-26	-30	-33
+25	-23	-26	-29	-32	+22	-23	-26	-31	-35
+23	-23	-26	-31	-34	≤20	-23	-26	-32	-36
≤21	-23	-26	-32	-36	-	-	-	-	-

MS power / [dBm]	Maximum MS level measured (peak hold) / [dBm] at frequency offset			
	0.4 MHz	0.6 MHz	1.2 MHz	1.8 MHz
≥33	-19	-22	-22	-25
+32	-20	-22	-22	-25
+30	-22	-24	-24	-27
+28	-23	-25	-26	-29
+26	-23	-26	-28	-31
+24	-23	-26	-30	-33
+22	-23	-26	-31	-35
≤20	-23	-26	-32	-36

The GSM limit specifications are equal for GMSK and 8PSK modulation, however, the limits can be chosen independently on the CMU.

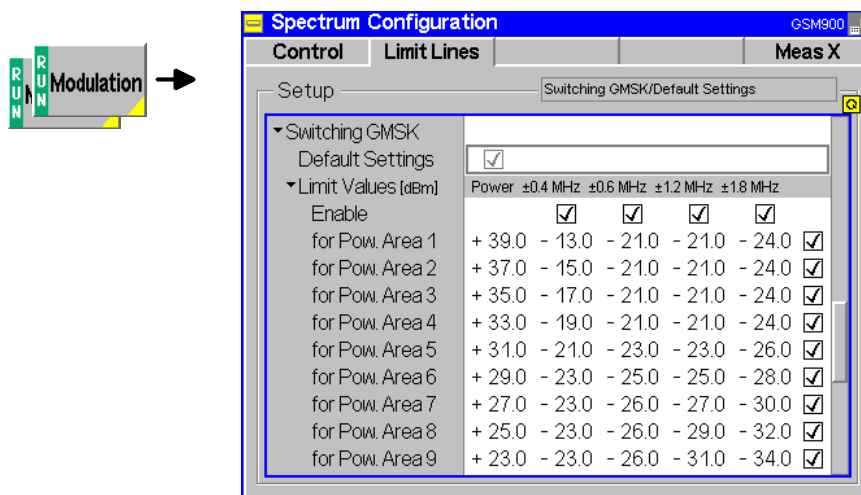


Fig. 4-31 Spectrum Configuration – Limits

Default Settings The *Default All Settings* switch assigns default values to all settings in the *Limits* tab (the default values are quoted in the command description in chapter 6 of this manual). In addition, default switches for the individual spectrum types are provided.

Remote control

```
CONFigure:SPECTrum:SWITching[:GMSK]:LIMIT:LINE:DEFAULT ON|OFF
```

Limit Values The *Limit Values* table section defines upper limits for the absolute output power of the mobile station, measured at zero frequency span and with a filter bandwidth of 30 kHz.

Enable Switches the limit check at the frequency or power level on and off

Power Lvl. User-defined MS output power level (not necessarily identical with the GSM power control levels). The CMU offers considerable flexibility with regard to the limit line definition: They are specified at four fixed, GSM-specific frequency offsets and up to 10 arbitrary MS power levels (see

Table 4-3). For measured MS powers between the power levels, the limits are determined by linear interpolation.

Remote control

```

CONFigure:SPECTrum:SWITching[:GMSK]:LIMit:LINE
:UPPer<nr>
<PowLvl>,<Value1>,<Value2>,<Value3>,<Value4>,<Enable>
CONFigure:SPECTrum:SWITching[:GMSK]:LIMit:LINE:MODE[:UPPer]
ON|OFF
    
```

Selection of Measurement Points (Spectrum Configuration – Meas X)

The tab *Meas X* defines at which frequencies a *Spectrum* measurement is performed.

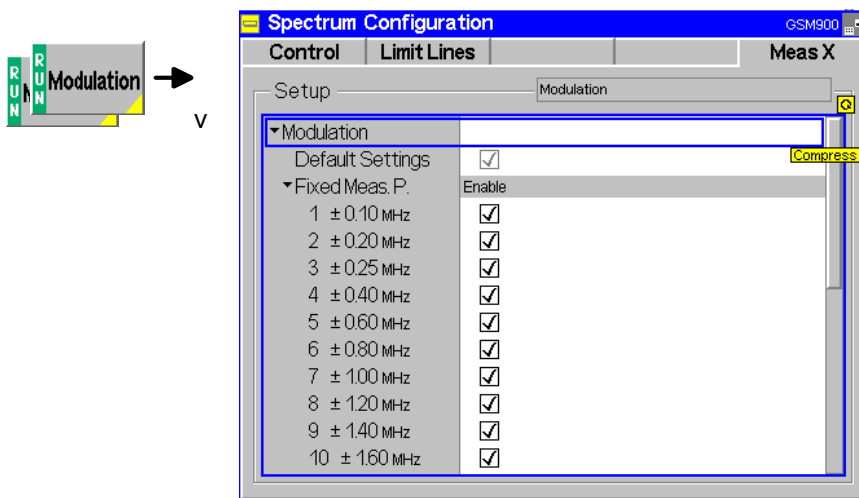


Fig. 4-32 Spectrum Configuration – Meas X

Default Settings The *Default All Settings* switch assigns default values to all settings in the *Meas X* tab (the default values are quoted in the command description in chapter 6 of this manual). In addition, default switches for the individual spectrum types are provided.

Remote control

```

CONFigure:SPECTrum:MODulation:CONTRol:DEFault ON|OFF
CONFigure:SPECTrum:SWITching:CONTRol:DEFault ON|OFF
    
```

Fixed Meas. Points

Fixed Meas. Points enables (*Enable* box checked) or disables the spectrum measurement at individual frequency points. All frequencies listed in Table 4-1 (spectrum due to modulation) and Table 4-3 (spectrum due to switching) can be selected. In the diagrams, blue bars denote the results at fixed measurement points.

A reduction of the measurement points enhances the measurement speed. To be selected as the frequency for the time domain measurement, a measurement point must be enabled.

Remote control

```

CONFigure:SPECTrum:MODulation
:CONTRol:MPOINT<nr>:ENABle ON|OFF etc.
    
```

**Variable Meas.
Points**

Variable Meas. Points enables the spectrum measurement at additional frequencies. By default the additional points are switched *Off*. Setting a frequency enables the measurement at the variable measurement point. No limit check is performed. In the diagrams, black bars denote the results at variable measurement points.


A reduction of the measurement points enhances the measurement speed. To be selected as the frequency for the time domain measurement, a measurement point must be enabled.

Remote control

```
CONFigure:SPECTrum:MODulation:CONTrol:VMPoint<nr>  
CONFigure:SPECTrum:SWITching:CONTrol:VMPoint<nr>
```

Audio Measurements

The menu group *Audio* comprises the functions for generating and measuring single or multitone audio signals. The menu group is available with option CMU-B41, *Audio Generator and Analyzer*. All *Audio* menus and remote-control commands are described in the CMU 200/300 operating manual.

The *Audio* option supports two independent test circuits. In *Non Signalling* mode the input and output connectors for both circuits are fixed; they are indicated in the *AF/RF*  tab of the *Connection Control* menu; see section [AF/RF Connectors \(Connection Control – AF/RF\)](#) on p. 4.83 ff. This test mode corresponds to the standalone Audio tests described in the CMU 200/300 operating manual.

In *Signalling* mode, it is possible to send and receive audio data modulated onto the RF carrier and thus test the audio circuit of a connected mobile phone (see section [AF/RF Connectors \(Connection Control – AF/RF\)](#) on p. 4.186 ff.).

Connection Control

The popup menu *Connection Control* contains several tabs to configure the inputs and outputs of the CMU and the respective signals in the function group *GSM400/850/900/1800/1900-MS Non Signalling* and the trigger settings.

The menu group is activated via the softkey *Connect. Control* to the right of the header of each measurement menu. The individual tabs (*Analyzer, Generator, AF/RF* \leftrightarrow , *Sync., Trigger, I/Q-IF*) can be accessed via the hotkey bar at the lower edge of the screen.

RF Analyzer Settings (Connection Control – Analyzer)

The *Analyzer* tab determines the maximum input level (*Max. Level*) of the RF analyzer, defines the frequency (*RF Channel, Frequency Offset*) and the *Training Sequence* of the analyzed RF input signal and configures the RF input path. Besides it controls the wideband peak power measurement (*Power*) and indicates the result.

The CMU provides a softkey-oriented version of the *Analyzer* tab and a table-oriented version with extended functionality. The *Analyzer* hotkey toggles between the two versions if it is pressed repeatedly.

Softkey-Oriented Version

The softkey-oriented version of the *Analyzer* tab determines

- The maximum input level (*Max. Level*)
- The frequency (*RF Channel, Frequency Offset*) and the *Training Sequence* of the analyzed RF input signal.

Besides it controls the wideband peak power measurement (*Power*) and indicates the result. All setting values of this menu are also displayed in the main menu *Analyzer/Generator* (see page 4.2).

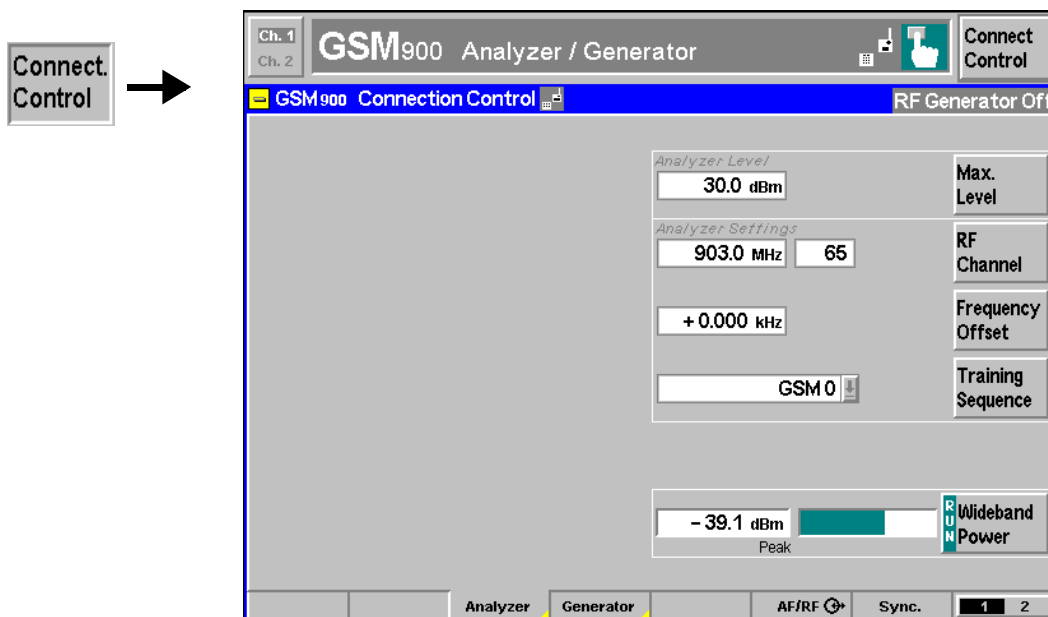


Fig. 4-33 Connection Control – Analyzer (softkey)

**Max.
Level**

The *Max. Level* softkey sets the maximum expected input level (overload level). This level corresponds to the maximum peak envelope power (PEP) of the GSM signal that the CMU is able to measure. For GSM signals, the PEP is very close to the average burst power (low crest factor), however, it is appropriate to allow for a display margin of a few dB. Input levels exceeding the *Max. Level* overdrive the input path and cause invalid results (“--”).

In the table-oriented version of the *Analyzer* tab, either manual or automatic setting of the input level can be selected. The behavior of the *Max. Level* softkey depends on the way the input level is set:

- In manual mode, the input level is indicated in the input field to the left of the softkey. This field can be activated and the level can be changed by pressing the *Max. Level* softkey. Note the remarks on external output attenuation on p. 4.79.
- If autoranging is selected, *Auto* is indicated in the input field to the right of the softkey. *Max. Level* is not active. To change the input level and mode, the table-oriented *Analyzer* tab must be opened by pressing the *Analyzer* hotkey again.

Remote control
[SENSe:]LEVel:MAXimum <Level>

**RF
Channel**

The *RF Channel* softkey defines the channel number and frequency of the measured signal. The assignment between channel numbers and frequencies is defined in the GSM specification for both directions of transmission (uplink and downlink). Therefore, it is sufficient to enter only one value (frequency **or** channel number), the other one is automatically adjusted.

The following tables contain the channel assignment in the uplink direction (i.e. from mobile to base station/CMU). Compared to the downlink, all channel frequencies are shifted by a constant frequency offset depending only on the GSM band (duplex spacing, see [Table 4-5](#) on p. 4.80). Channel numbers which are not listed in the tables are not assigned.

Table 4-4 GSM channels in uplink direction

Frequency / [MHz]	Channel	GSM400 Band
0.2 ↓ 450.4	--- ↓ ---	—
450.6 ↓ 457.4	259 ↓ 293	GSM 450 band
457.6 ↓ 478.8	--- ↓ ---	
479.0 ↓ 485.8	306 ↓ 340	GSM 480 band
486.0 ↓ 2700	--- ↓ ---	—

Frequency / [MHz]	Channel	GSM900 Band
0.2 ↓ 876	--- ↓ ---	—
876.2 ↓ 880	955 ↓ 974	R-GSM band (European railway netw.)
880.2 ↓ 889.8 890.0	975 ↓ 1023 0	E-GSM band (extended GSM)
890.2 ↓ 914.8	1 ↓ 124	P-GSM-Band (primary GSM)
915 ↓ 2700	↓ ---	—

Frequency / [MHz]	Channel	GSM1800 Band
0.2 ↓ 1710	--- ↓ ---	—
1710.2 ↓ 1784.8	512 ↓ 885	GSM 1800 band
1785 ↓ 2700	--- ↓↓ ---	—

Frequency / [MHz]	Channel	GSM1900 Band
0.2 ↓ 1850	--- ↓ ---	—
1850.2 ↓ 1909.8	512 ↓ 810	GSM 1900 band
1910 ↓ 2700	--- ↓ ---	—

Frequency / [MHz]	Channel	GSM850 Band
0.2 ↓ 824.0	--- ↓ ---	—
824.2 ↓ 848.8	128 ↓ 251	GSM 850 band
849.0 ↓ 2700	--- ↓ ---	—

According to the channel width of the three GSM bands, the RF frequency can be set in multiples of 200 kHz. It can be modified by an additional *frequency offset* entered in the input field below.

Remote control

[SENSe:]RFANalyzer:CHANnel <Number>

Frequency Offset

The Frequency Offset softkey defines an offset for the frequency set under RF Channel. This enables fine tuning of the frequency measured by the CMU, e.g. in order to simulate a Doppler shift (caused by a relative movement between mobile and base station) or detuning of the mobile.

Remote control

[SENSe:]RFANalyzer:FREQUENCY:OFFSet <Number>

Training Sequence

The Training Sequence softkey defines a training sequence for the measured signal.

The training sequence is located in the middle of the symmetrical normal burst and is used for synchronization and to assess the transmission conditions in the RF channel.

TB	Useful Information	F	Training sequence	F	Useful Information	TB	GP
----	--------------------	---	-------------------	---	--------------------	----	----

TB Tail bits (end or start bit) Bits 0 to 2, 145 to 147
 Useful information Bits 3 to 59, 88 to 144
 F Flag Bit, Stealing Flag Bits 60, 87
 Training sequence Bits 61 to 86
 GP Guard Period, transmission-free time of 8.25 bit periods

Fig. 4-34 Bit structure of a GSM normal burst

Compared to a normal burst, the access burst (see section [Limit lines \(Power Configuration – Limit Lines\)](#) on page 4.32) has a longer guard period (68.25 symbols instead of 8.25 symbols) whereas the useful duration is shortened by 60 symbols.

Here the training sequence is used to distinguish different burst types: If a definite training sequence is specified, the CMU only analyzes bursts with this training sequence. The following settings are provided:

- GSM 0 to 7 GSM standard training sequences
- Dummy GSM-specific dummy burst
- Off Measurement of all bursts regardless of their training sequence

GSM training sequences

The 8 standard training sequences GSM 0 to GSM 7 are specified in the GSM standard.

- TSC training sequence code for numbering the sequences
- Bit pattern 26-bit training sequence

They read as follows:

TSC	Bit pattern (Bits No. 61 to 86)
0	0 0 1 0 0 1 0 1 1 1 0 0 0 0 1 0 0 1 0 0 1 0 1 1 1
1	0 0 1 0 1 1 0 1 1 1 0 1 1 1 1 0 0 0 1 0 1 1 0 1 1
2	0 1 0 0 0 0 1 1 1 0 1 1 1 0 1 0 0 1 0 0 0 0 1 1 1 0
3	0 1 0 0 0 1 1 1 1 0 1 1 0 1 0 0 0 1 0 0 0 1 1 1 1 0
4	0 0 0 1 1 0 1 0 1 1 1 0 0 1 0 0 0 0 0 1 1 0 1 0 1 1
5	0 1 0 0 1 1 1 0 1 0 1 1 0 0 0 0 0 1 0 0 1 1 1 0 1 0
6	1 0 1 0 0 1 1 1 1 1 0 1 1 0 0 0 1 0 1 0 0 1 1 1 1 1
7	1 1 1 0 1 1 1 1 0 0 0 1 0 0 1 0 1 1 1 0 1 1 1 1 0 0

Note: In Signalling Mode, no training sequence but signalling parameters such as the color code of the base station can be specified for analyzed signals. This also serves to search for bursts with a particular characteristic.

Remote control
[SENSe:]RFANalyzer:TSEquence <Number>

Wideband Power

The *Wideband Power* softkey controls the wideband power measurement and indicates its status (*RUN* | *HLT* | *OFF*). The status can be changed after softkey selection (pressing once) by means of the *ON/OFF* key or the *CONT/HALT* key. The measurement result is in units of dBm. The analog bar to the right of the softkey shows the measured power relative to the *Max. Level*: The display range is between *Max. Level - 10 dB* and *Max. Level + 10 dB*.

The wideband power measurement is performed at the RF Frontend of the CMU and yields the peak power of the input signal inside a wide frequency range. For GMSK modulated GSM signals, the result of the wideband power measurement is usually slightly higher than the result of the *Power* measurement which is obtained with different filter characteristics. The main purpose of the wideband power measurement is to indicate whether an input signal is available and whether it is advisable to change the *Max Level* settings.

Note: An additional quick and precise power measurement is available in remote control (keyword *NPOWER*).

Remote control
INITiate:WPOWER
FETCh:WPOWER:STATus?
READ[:SCALar]:WPOWER?
FETCh[:SCALar]:WPOWER?
SAMPLe[:SCALar]:WPOWER?

Table-Oriented Version

The table-oriented version of the *Analyzer* tab defines:

- The maximum expected input level (*RF Max. Level*) and the way it is defined (*RF Mode*)
- An external input attenuation or gain (*RF Attenuation*)
- The delay time (integer number of GSM timeslots) between the trigger time and the measured timeslot (*Trigger Slot Offset*)
- All *Analyzer Settings* described in section *Softkey-Oriented Version* on p. 4.72 ff.

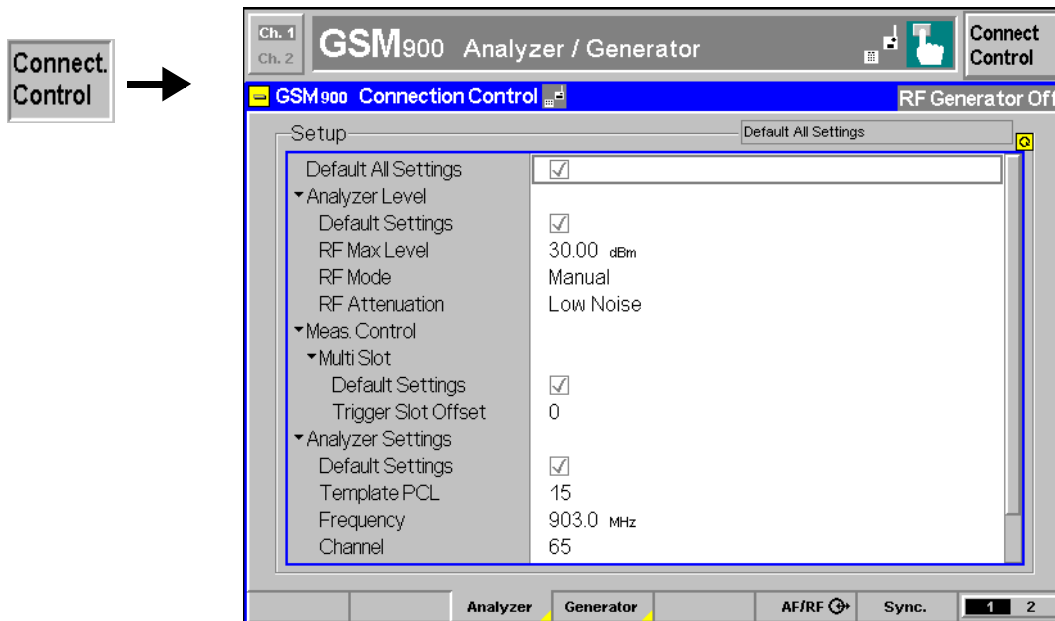


Fig. 4-35 Connection Control – Analyzer (table)

The following settings are not provided in the table-oriented version of the *Analyzer* tab:

Default Settings The *Default All Settings* switch assigns default values to all settings in the *Analyzer* tab (the default values are quoted in the command description in chapter 6 of this manual).

Remote control
`RFAnalyzer:Default`

Analyzer Level – RF Mode The *Analyzer Level* table section sets the maximum input level that can be measured. The maximum input level is displayed next to the softkey *Max. Level* in the main menu *Analyzer/Generator* (see page 4.2) and in the parameter lines above the graphical measurement menus. Two alternative *RF Modes* for defining this value are provided:

Manual Manual input of maximum input level in the *RF Max. Level* field
Auto Automatic setting of maximum input level (*autoranging*) according to the peak power (PEP) of applied signal

Remote control
`[SENSe:]LEVel:MODE <Mode>`

Analyzer Level – RF Max. Level – The maximum expected input level can be entered in the *RF Max. Level* input field. Input levels exceeding the *RF Max. Level* overdrive the input path and cause invalid results (“--”).

External input attenuation – The range of *RF Max. Level* values depends on the RF input used. If an external input attenuation is reported to the instrument to compensate for a known path loss (see section *AF/RF Connectors (Connection Control – AF/RF)* on page 4.83), all levels measured are referenced to the output of the DUT and therefore shifted with respect to the actual level at the input connectors of the CMU. The level ranges for the input connectors are shifted as well.

Error messages – If the value determined for *RF Max. Level* is too high or too low, a window with the error message “<Max_Level> is out of range. <permissible max. value> is limit.” and three fields will appear:

- Accept* The permissible max. value is accepted as *RF Max. Level*,
- Re-edit* *RF Max. Level* is entered once again,
- Cancel* The last valid input value is maintained.

When switching over to another input, the current value of *RF Max. Level* is automatically adapted, if required:

- Towards lower values to the maximum value of the new input,
- Towards upper values to the minimum value of the new input.

Note: A maximum input level can be entered even if automatic level setting (autoranging) is selected. The entered level is used as a start value for the autoranging routine and is also important to ensure safe switchover to manual setting.

Remote control
[SENSe:]LEVel:MAXimum <Level>

Analyzer Level – RF Attenuation – The *RF Attenuation* parameter defines how the RF analyzer of the CMU is tuned to meet the requirements of the current measurement type. In general, a compromise between the acceptable noise level in the displayed result and the contribution of internally generated distortion must be reached.

- Normal* Mixer level in normal range,
- Low noise* Mixer level enhanced by +10 dB (full dynamic range of CMU, therefore recommended for *Power* and *Spectrum* measurements),
- Low distortion* Mixer level reduced by –10 dB (high intermodulation spacing, therefore recommended for *Modulation* measurements).

The *Attenuation* setting permits the CMU to be adapted to the requirements of the measurement. The advantages and disadvantages of the settings *Low noise* and *Low distortion* are listed in the following table.

	Advantages	Disadvantages
<i>Low noise</i>	Low noise high dynamic range	No RF overdrive reserve Risk of intermodulation
<i>Low distortion</i>	High intermodulation spacing	Lower dynamic range

Remote control
[SENSe:]LEVel:ATTenuation NORMAL | LNOise | LDISTortion

Meas. Control – Multi Slot – Trigger Slot Offset *Trig. Slot Offset* defines a delay time (integer number of GSM timeslots) between the trigger time and the timeslot that is measured in all *Multislot* configurations; see [Fig. 4-3](#) on p. 4.18.

Remote control
 CONFigure:RFANalyzer:MCONTRol:TSOFFset 0 to 7

Analyzer Settings – Template PCL *Template PCL* sets a power control level to correct the limit lines. See [Template PCL](#) softkey on p. 4.13.

Remote control
 CONFigure:RFANalyzer:TPCL <PCL>

Generator Settings (Connection Control – Generator)

The *Generator* tab controls and configures the RF generators. The CMU provides two independent RF signals *TX* and *Aux TX* (with option CMU-B95, *Additional RF Generator*). There is a softkey-oriented version of the *Generator* tab and a table-oriented version with extended functionality. The *Generator* hotkey toggles between the two versions if it is pressed repeatedly.

Softkey-Oriented Version

The softkey-oriented version of the *Generator* tab provides the following RF generator settings:

- Generator control and level in the used and unused timeslots (measurement control softkeys *generator* and *Generator Aux TX*)
- The generator frequency (*RF Channel*, *Frequency Offset*)
- A *Training Sequence* and a *Bit Modulation* sequence to be modulated onto the generated RF signal
- The *Transmission* mode (continuous or burst signal)

Aux TX signal:

If option CMU-B95, *Additional RF Generator*, is fitted, the CMU provides a second RF signal *Aux TX* that can be applied to one of the RF connectors RF1 or RF2. It is possible to superimpose both RF signals at the same output connector or use different connectors (see section [AF/RF Connectors \(Connection Control – AF/RF\)](#) on p. 4.83 ff.). Moreover, it is possible to assign independent external attenuation factors to both signals.

AuxTx is generated with the *Training Sequence* and *Bit Modulation* settings of the primary TX signal (in remote control: ...RFGenerator:MODulation...) but with no ramping (the *Transmission* mode is always *Continuous*, the carrier signal level is constant over all timeslots). Option CMU-B95 is primarily used to maintain a stable BCCH in *Signalling* mode while the main TX generator provides a TCH in all 8 timeslots, see *Aux TX* description in the *BS Signal* tab section.

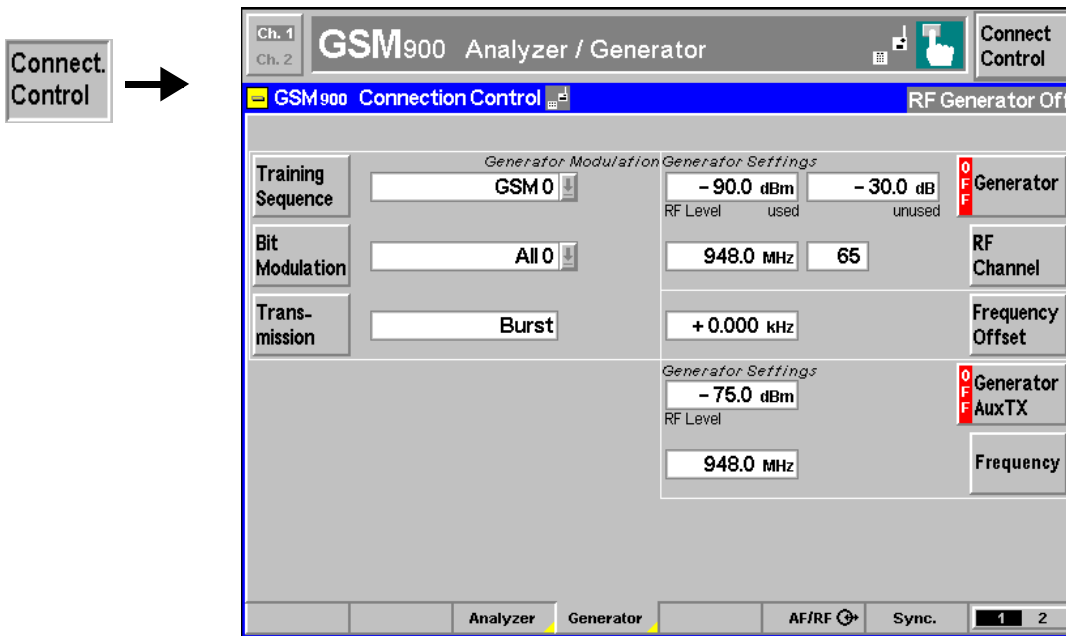


Fig. 4-36 Connection Control – Generator (softkey)

Generator

The *Generator* softkey defines the TX generator level and indicates the operating status of the RF generator (ON or OFF). Pressing the *Generator* softkey and the ON/OFF key switches the generator on or off.

For the generator level, a distinction is made between the used timeslot (selected and used for later measurements) and the remaining, unused timeslots. This feature is useful for many tests specified for GSM mobile phones. E.g. the adjacent time slot level is set to a higher value than the used time slot level in order to test whether the mobile receiver can quickly adapt to fast level changes.

```
Remote control
INITiate:RFGenerator
ABORt:RFGenerator
FETCh:RFGenerator:STATUs?
```

Used The level is indicated as absolute value (in dBm).

```
Remote control
SOURce:RFGenerator:LEVel:UTIMeslot <Level>
```

Unused The level is defined relative to the level in the used timeslot (in dB). The absolute level in the unused timeslots, i.e. the sum of numerical values set under used and unused must lie within the permissible range for the RF outputs. This condition further restricts the permissible level for the unused timeslots.

External output attenuation If an external output attenuation or gain is known and reported to the instrument (see softkey *Ext. Att. Output*) the RF generator level is adjusted to maintain the commanded power after the attenuation or gain. As a consequence, all levels indicated are referred to the input of the DUT and no longer correspond to the actual level at the output connectors of the CMU (see section [AF/RF Connectors \(Connection Control – AF/RF\)](#) on page 4.83). The default value for the generator power is also shifted provided that the generator can output the required power, compensating for the external attenuation or gain. Otherwise it is adapted to the level closest to the shifted default value.

Error messages If the level defined for RF Level is too high or too low, a window will appear with the error message "<RF_Level> is out of range. <Permissible max. value> is limit." and three fields:

- Accept Permissible max. value is accepted as generator level
- Re-edit The generator level is entered once again
- Cancel The last valid input is maintained

When switching over to a different output, the current value of the generator level is automatically adapted, if required:

- Towards lower values to the maximum permissible value of the new output
- Towards higher values to the minimum value of the new output

Remote control

SOURCE:RFGenerator:LEVEL:UNTimeslot <Level>

RF Channel

The *RF Channel* softkey defines the channel number or the frequency of the generated RF signal.

The assignment of channel numbers and frequencies is unambiguously defined in the GSM specification for both directions of transmission. Therefore, it is sufficient to enter only one value (frequency or channel number), the other one is automatically determined by the CMU.

The following tables contain the channel assignment in the downlink direction (i.e. from base station/CMU to mobile). Compared to the uplink, all channel frequencies are shifted by a constant frequency offset depending only on the GSM band (duplex spacing, see [Table 4-4](#) on p. 4.73). Channel numbers which are not listed in the tables are not assigned.

Table 4-5 GSM channels in downlink direction

Frequency / [MHz]	Channel	GSM400 Band
0.2 ↓ 460.4	--- ↓ ---	—
460.6 ↓ 467.4	259 ↓ 293	GSM 450 band
467.6 ↓ 488.8	--- ↓ ---	
489.0 ↓ 495.8	306 ↓ 340	GSM 480 band
496.0 ↓ 2700	--- ↓ ---	—

Frequency / [MHz]	Channel	GSM900 Band
0.2 ↓ 921	--- ↓ ---	—
921.2 ↓ 925	955 ↓ 974	R-GSM band (European railway netw.)
925.2 ↓ 934.8 935.0	975 ↓ 1023 0	E-GSM band (extended GSM)
935.2 ↓ 959.8	1 ↓ 124	P-GSM-Band (primary GSM)
960 ↓ 2700	--- ↓ ---	—

Frequency / [MHz]	Channel	GSM1800 Band
0.2 ↓ 1805	--- ↓ ---	—
1805.2 ↓ 1879.8	512 ↓ 885	GSM 1800 band
1880 ↓ 2700	--- ↓ ---	—

Frequency / [MHz]	Channel	GSM1900 Band
0.2 ↓ 1930	--- ↓ ---	—
1930.2 ↓ 1989.8	512 ↓ 810	GSM 1900 band
1990 ↓ 2700	--- ↓ ---	—

Frequency / [MHz]	Channel	GSM850 Band
0.2 ↓ 869.0	--- ↓ ---	—
869.2 ↓ 893.8	128 ↓ 251	GSM 850 band
893.0 ↓ 2700	--- ↓ ---	—

According to the channel width of the three GSM bands, the RF frequency can be set in multiples of 200 kHz. It can be modified by an additional *frequency offset* entered in the input field below.

Remote control

SOURCE:RFGenerator:FREQUENCY[:CHANNEL] <Number>

Frequency Offset

The *Frequency Offset* softkey defines a frequency offset modify the frequency set under RF Channel. This enables fine tuning of the RF frequency generated by the CMU, e.g. in order to simulate a Doppler shift (caused by a relative movement between mobile and CMU) or detuning of the mobile. The *Frequency Offset* applies to both the *TX* and the *Aux TX* signal.

Remote control

SOURCE:RFGenerator:FM:DEVIATION <FrequencyOffset>

Generator Aux TX

The *Generator Aux TX* softkey controls the *Aux TX* generator, defines the generator level and indicates the operating status of the *Aux TX* generator (*ON* or *OFF*). Pressing the *Aux TX Generator* softkey and the *ON/OFF* key switches the generator on or off.

The *Aux TX* level is continuous and equal in all timeslots; see background information on the *Aux TX* signal above.

Remote control

INITIATE:RFGenerator:AUXTx
 ABORT:RFGenerator:AUXTx
 FETCH:RFGenerator:AUXTx:STATUS?
 SOURCE:RFGenerator:AUXTx:LEVEL

Frequency

Frequency defines the frequency of the generated RF signal.

Note: *The frequency of the Aux Tx signal is restricted to three separate ranges; see remote control description.*

Remote control

SOURCE:RFGenerator:AUXTx:FREQUENCY

Training Sequence

The *Training Sequence* softkey defines the training sequence that is superimposed on the RF carrier signal. The following settings are provided:

GSM 0 to 7 GSM standard training sequences

Dummy GSM-specific dummy burst

The 8 GSM standard training sequences are listed above (see page 4.75).

Remote control

CONFIGURE:RFGenerator:MODulation:TSEQUence:SELECTION
GSM0 | ... | GSM7 | DUMMY

Bit Modulation

The *Bit Modulation* softkey defines a bit sequence that is modulated onto the RF carrier signal. The following types of modulation sequence can be selected:

Off No signal superimposed, "empty" carrier

All 0 Modulation sequence consisting of zeros

PRBS Pseudo random bit sequence

Dummy Bursts Fixed bit sequences (Dummy Bursts) with selectable training sequence, see next softkey

8PSK All 0 Modulation sequence consisting of zeros, 8PSK modulation

8PSK PRBS Pseudo-random bit sequence, 8PSK modulation

Remote control

CONFIGURE:RFGenerator:MODulation:BIT:SELECTION
OFF | PRBS | DUMMYburst | ALL0 | EALL0 | EPRBS

Transmission

The softkey *Transmission* determines the shape of the generated RF signal. The RF generator generates either a burst or a continuous signal, i.e. a carrier with a constant level. An 8PSK-modulated signal is always bursted.

Remote control

CONFIGURE:RFGenerator:MODulation:TRANmission
BURSt | CONTinuous

Table-Oriented Version

The table-oriented version of the *Generator* tab provides all settings described in section [Softkey-Oriented Version](#) on p. 4.78 ff.

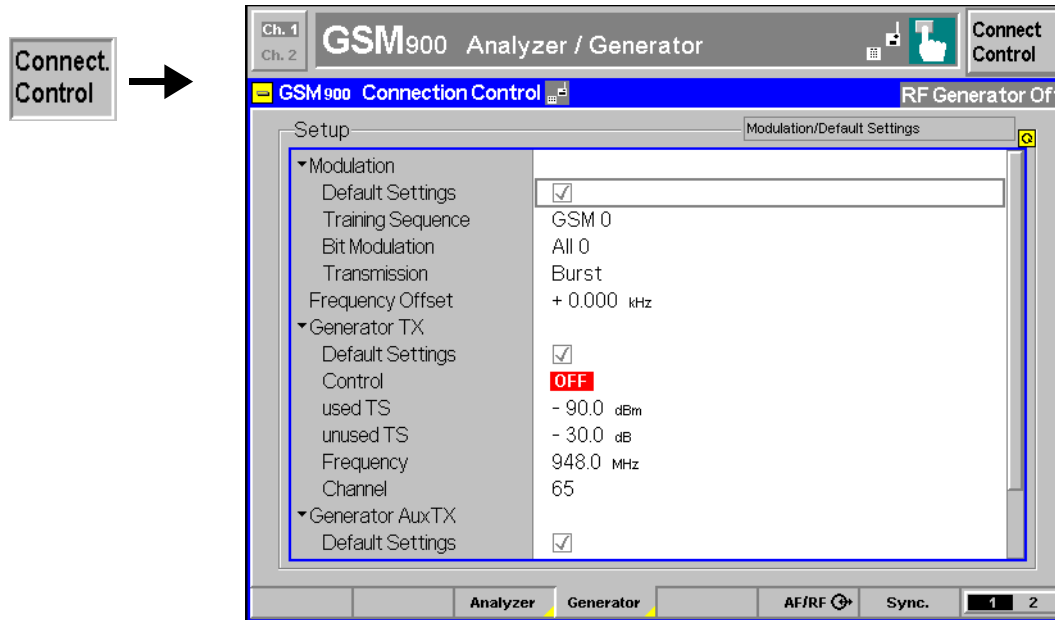


Fig. 4-37 Connection Control – Generator (table)

The following settings are not provided in the table-oriented version of the *Generator* tab:

Default Settings The *Default Settings* switches assign default values to all *Modulation*, *Generator TX*, and *Generator AuxTX* parameters (the default values are quoted in the command description in chapter 6 of this manual).

Remote control

–

AF/RF Connectors (Connection Control – AF/RF)

The *AF/RF* tab (function group *GSM400/850/900/1800/1900-MS, Non Signalling* mode) configures the connectors for RF input and output signals including the two RF output signals *Tx* and *Aux Tx* (with option CMU-B95, *Additional RF Generator*; see section [Generator Settings \(Connection Control – Generator\)](#) on p. 4.78 ff.). This includes selection of

- The RF signal type (*Tx / Aux Tx*)
- The RF input and output of the CMU (*RF Output, RF Input*)
- An external attenuation at the connectors (*Ext. Att. Output, Ext. Att. Input*)

The tab also controls the wideband peak power measurement (*Wideband Power*) and indicates the result. The name and function of the AF connectors is indicated in addition.

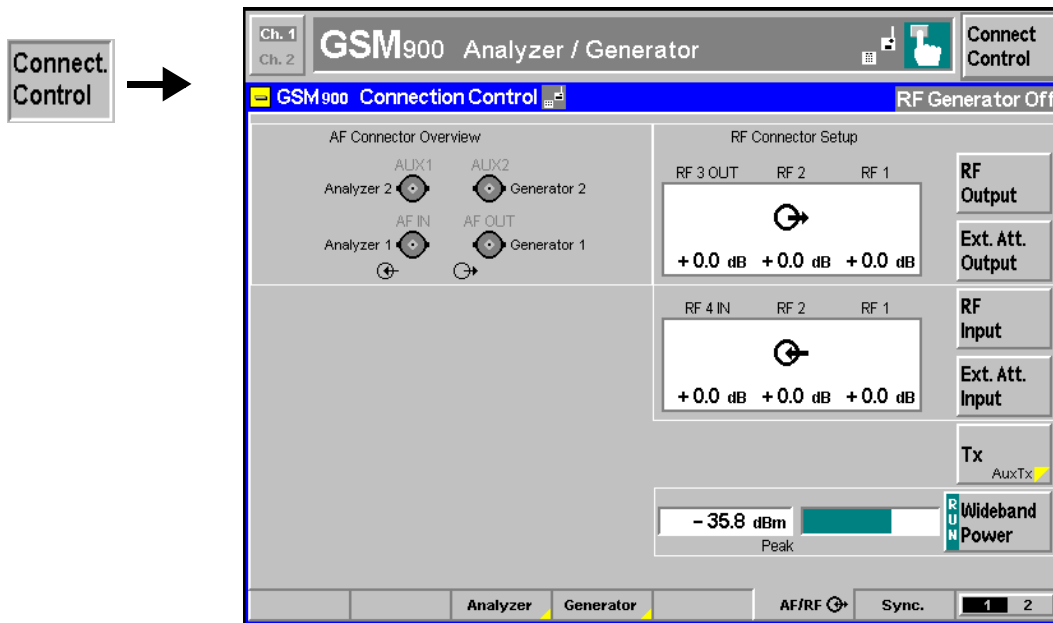


Fig. 4-38 Connection Control – AF/RF connectors

The *Wideband Power* measurement is explained in section [Softkey-Oriented Version](#) on p. 4.72 ff.

AF Connector Overview

The *AF Connector Overview* shows the destination of the input signals fed in via AF IN and AUX 1 and the signal sources for the two audio output connectors AF OUT and AUX 2. In contrast to the *Signalling* test mode (see section *AF/RF Connectors* on p. 4.186 ff.), the routing of input and output signals is fixed: The connectors AF IN and AF OUT are used as input and output for the primary audio circuit (Analyzer 1, Generator 1). AUX 1 and AUX 2 are used as input and output for the secondary audio circuit (Analyzer 2, Generator 2).

Audio measurements on the CMU can be performed with option CMU-B41, *Audio Generator and Analyzer*. For more information refer to section [Audio Measurements](#) on p. 4.71 ff. and to the CMU 200/300 operating manual.

RF Output

The *RF Output* softkey defines which of the three connectors RF 1, RF 2 and RF 3 OUT is to be used as RF output connector for the TX signal. A symbol indicates the selected RF output.

If the additional RF signal *Aux TX* is selected (see below), the softkey is labeled *RF Aux TX Output* and selects the output connector for *Aux TX*. *Aux TX* must be output at RF1 or RF2.

Note: *It is possible to combine any pair of input and output connectors. The bidirectional connectors RF 1 and RF 2 can be selected as RF inputs and outputs at the same time.*

The LEDs on the front panel are only „on“ (lit) if the output level is switched on.


Remote control

```
OUTPut[:STATe] RF1 | RF2 | RF3
OUTPut:AUXTx[:STATe] RF1 | RF2
```

Ext. Att. Output

The softkey *Ext. Att. Output* defines an external attenuation (or gain, if the value is negative) at the selected RF output. Input of an external attenuation is suitable if, for example, if attenuation (such as a cable) is included in the test setup path, which is to be corrected by an increased signal level.

If an external attenuation is reported to the instrument, the output signal level is referred to the input of the DUT, the generator level is therefore shifted with respect to the actual level at the output connector of the CMU. The default value for the generator power and the level ranges for the RF outputs are also shifted provided that the generator can output the required power, compensating for the external attenuation or gain. Otherwise it is adapted to the level closest to the shifted default value.

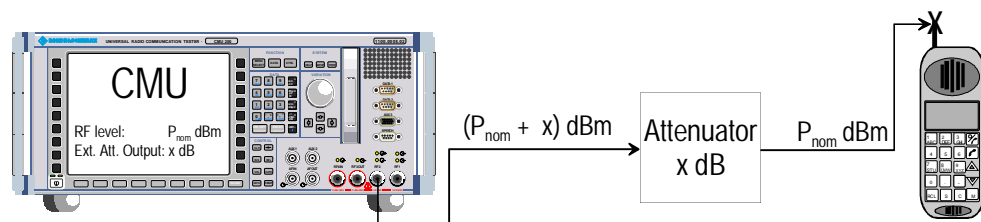

Remote control

```
[SENSe:]CORRection:LOSS:OUTPut<nr>[:MAGNitude]
SOURce:CORRection:LOSS:OUTPut<nr>[:MAGNitude]
[SENSe:]CORRection:LOSS:OUTPut<nr>:AUXTx[:MAGNitude]
SOURce:CORRection:LOSS:OUTPut<nr>:AUXTx[:MAGNitude]
```

RF Input

The *RF Input* softkey determines which of the three connectors RF 1, RF 2 and RF 4 IN is to be used as RF input connector. If a connector is selected as RF input, a symbol \ominus will appear in the respective field. It is possible to combine any pair of input and output connectors.


Remote control

```
INPut[:STATe] RF1 | RF2 | RF4
```

Ext. Att. Input

The softkey *Ext. Att. Input* enters the value of the external attenuation (or gain) at the selected RF input. Input of an external attenuation is required if, for example, external attenuator pads are used for protection of the sensitive RF inputs of the CMU or if a path attenuation is included in the test setup.

If an external input attenuation is reported to the instrument all levels measured are referenced to the output of the DUT and therefore shifted with respect to the actual level at the input connectors of the CMU. The level ranges for the input connectors are shifted as well.

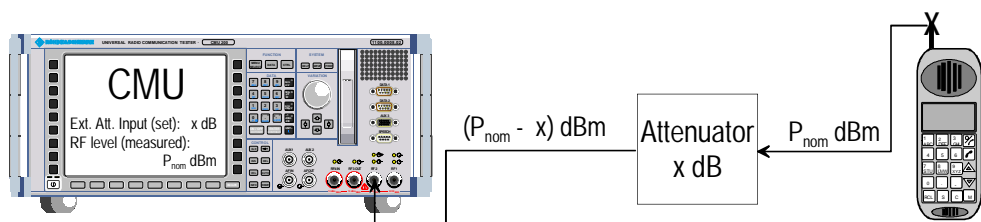

Note: The LEDs on the front panel are only "on" (lit) if the measurement is active.

Remote control

```
[SENSe:]CORRection:LOSS:INPut<nr>[:MAGNitude]
SOURce:CORRection:LOSS:INPut<nr>[:MAGNitude]
```

Tx
Aux TX

Tx / Aux Tx toggles between the primary RF signal Tx and the additional signal Aux TX, to be routed to one of the RF output connectors of the instrument.

The two RF signals are independent from each other. It is possible to route the signals to different RF output connectors or superimpose them at the same connector. If Aux TX is selected, RF TX Output changes to RF Aux TX Output, and the input softkeys are hidden.

Remote control

The keywords [:TX] and :AUXTX in the OUTPUT :... [:STATE] commands distinguish between the Tx and the Aux Tx signal.

Reference Frequency (Connection Control – Sync.)

The Sync. tab defines the reference signals for synchronization. This includes

- The internal or external Reference Frequency
- The output mode for the network-specific system clock (REF OUT 2)

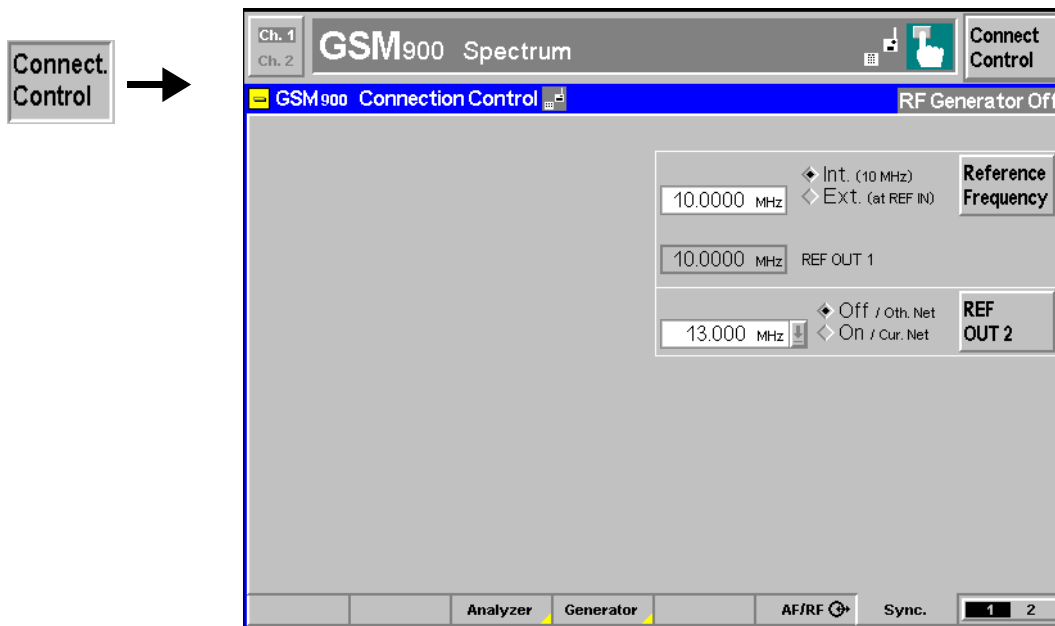


Fig. 4-39 Connection Control – Synchronization

Reference Frequency

The Reference Frequency softkey determines the source and the frequency of the reference signal.

The associated field allows to select between two alternatives:

Int. (10 MHz) Internal synchronization by means of a 10 MHz reference frequency (TCXO or OCXO, CMU-B11/-B12).

Ext. (at REF IN) Synchronization to external reference signal to be fed in via input REF IN. The external reference signal can be used for synchronization of the CMU to another instrument. Its frequency must be entered in the input field next to the External button.

The frequency of the external reference signal must be entered in the input field next to the left of the Ext. (at REF IN) radio button.

The reference signal used is also routed to output *REF OUT 1* so that it can be fed to other instruments as well.

Note:

1. The header cyclically displays a warning if no synchronization could be achieved e.g. because of missing or faulty input signal with external synchronization selected. At the same time, bit no. 6 (RFNL, Reference Frequency Not Locked) is set in the *STATUS:OPERation:CMU:SUM1:CMU1* sub-register associated to the CMU base system and the query `[SENSe:]SYNChronize:FREQuency:REFerence:LOCKed?` returns the value *ON*.
2. In the case of external synchronization with squarewave signals (TTL) ensure correct signal matching to avoid reflections. Otherwise, resulting overshoots may cause trigger problems at the CMU input. A possible remedy is to use a lowpass filter or an attenuator pad directly at the CMU input. Correct synchronization may be checked by comparing the signal *REF OUT 1* or *REF OUT 2* with the input signal.
3. This configuration is valid in all CMU function groups.

Caution: The reference frequency is set to *Int.* (10 MHz) whenever the base system is reset. After switching back to *Ext.* (at *REF IN*) it is necessary to allow for a setting time (~1 s) before the CMU can synchronize to the external reference frequency. The delay is avoided by a partial reset of all function groups with the exception of the base system.

Remote control

The commands for the reference frequency are part of the CMU base system (see CMU200/300 operating manual):

```
CONFigure:SYNChronize:FREQuency:REFerence:MODE
    INTernal | EXTernal
CONFigure:SYNChronize:FREQuency:REFerence <Frequency>
[SENSe:]SYNChronize:FREQuency:REFerence:LOCKed?
```

REF
OUT 2

The softkey *REF OUT 2* configures a network-specific system clock REF OUT 2 to be fed to the output REF OUT 2 at the rear of the instrument.

The associated field permits to select between two alternatives:

OFF (other network) The clock frequency of the current function group is not fed to the output *REF OUT 2*.

With this setting the system clock of another active function group (e.g. the network GSM1800 while the current network is GSM900) is still applied to *REF OUT 2* provided that the output *REF OUT 2* is switched on in the other function group. However, if *REF OUT 2* is explicitly switched over from *On* to *Off* the clock signal is definitely removed.

On (current network) The network-specific system clock of the current function group is fed to output REF OUT 2. The system clock of any other function group applied to REF OUT 2 before is replaced.

Besides the basic clock frequency of 39 MHz one of the following clock frequencies may be selected:

39.000 MHz,	19.500 MHz,	13.000 MHz,	9.750 MHz,	7.800 MHz,	6.500 MHz,	5.571 MHz,
4.875 MHz,	4.333 MHz,	3.900 MHz,	3.545 MHz,	3.250 MHz,	3.000 MHz,	2.786 MHz,
2.600 MHz,	2.438 MHz,	2.294 MHz,	2.166 MHz,	2.053 MHz,	1.950 MHz,	1.857 MHz,
1.773 MHz,	1.696 MHz,	1.625 MHz,	1.560 MHz,	1.500 MHz,	1.444 MHz,	1.393 MHz,
1.349 MHz,	1.300 MHz,	1.258 MHz,	1.219 MHz,			

(The values are calculated according to the formula $F_{out} = 39.000 \text{ MHz} / n$ where $n = 1, \dots, 32$.)

The clock frequency can be used to synchronize other instruments.

Remote control

```
SOURce:DM:CLOCK:STATE ON | OFF
SOURce:DM:CLOCK:FREQuency <Frequency>
```

Trigger (Connection Control – Trigger)

The *Trigger* tab is part of the second group of tabs in the *Connection Control* menu. It is accessible after pressing the 1 / 2 toggle hotkey once. Pressing 1 / 2 again switches back to the first group of tabs described above.

The *Trigger* tab defines the trigger condition for the measurement and the input for the external trigger signal.

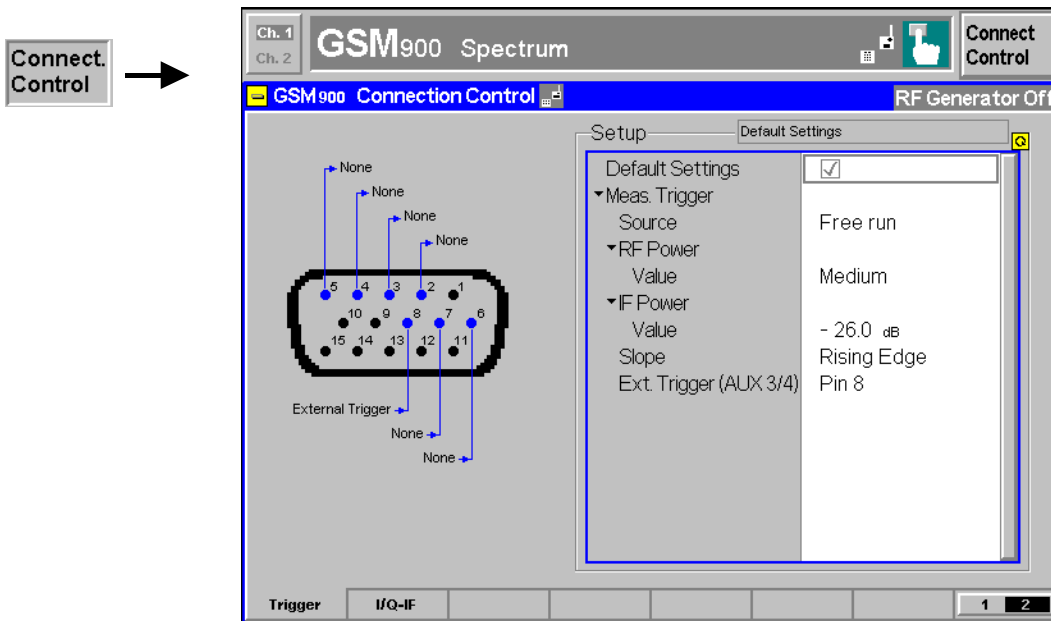


Fig. 4-40 Connection Control – Trigger

Default Settings The *Default Settings* checkbox assigns the default setting to all functions in the *Trigger* tab (the default values are quoted in the command description in chapter 6 of this manual).

Remote control TRIGGER[:SEQUENCE]:DEFAULT ON | OFF

Meas. Trigger – Source

Source selects the source for the trigger event:

Free Run

Trigger by the GSM input signal: The CMU detects the burst; the exact timing is given by the training sequence. This setting may slow down the measurements. *P/t Multislot*, *P/Slot*, and *P/Frame* measurements can not be performed in *Free Run* trigger mode.

Note:

In Spectrum measurements, Free Run trigger mode means that the measurement is not correlated with the burst timing. The Switching spectrum must be measured with another trigger source, e.g. IF Power trigger.

RF Power

The measurement is triggered by the level of the incoming burst (rising or falling edge; see *Slope* setting below), the trigger level is specified via the *Level* parameters. Wideband power trigger on the RF Front End.

IF Power

The measurement is triggered by the level of the IF signal (rising or falling edge; see *Slope* setting below), the trigger level is specified via the *Level* parameters. Narrow-band IF power trigger.

Extern

External trigger signal fed in via connector AUX 3 or AUX 4; see *Ext. Trigger ...* setting below.

For the *Free Run*, *RF Power* and *IF Power* settings the input signal must be a burst signal. The external trigger can be selected for all *Non Signalling* measurements. In contrast, *Signalling* measurements must be triggered by the signal from the signalling unit or from the mobile phone.

RF Power trigger signals have a small dynamic range which may not be sufficient for triggering. It is recommended to trigger by the *IF Power* instead.

Note:

If no measurement result can be obtained the trigger mode may not fit to the trigger signal applied. Check the trigger mode and signal.

	<p>Remote control <code>TRIGger[:SEquence]:SOURce FRUN EXTErn RFPower IFPower</code></p>
RF Power / IF Power	<p>The <i>Value</i> parameters define the trigger thresholds if the measurement is triggered by the <i>RF Power</i> or <i>IF Power</i> (see <i>Source</i> function above) respectively. Both thresholds are defined relative to the maximum input level set in the <i>Analyzer</i> tab (see <i>Max. Level</i> softkey on p. 4.73). The <i>Level</i> settings have no influence on <i>Free Run</i> or <i>External</i> trigger measurements.</p> <p>Note: <i>The trigger levels are always relative to the current maximum input level. If RF Max. Level is set manually (RF Mode = Manual), the current input level is constant and equal to the setting value. In autoranging mode (RF Mode = Auto), the current maximum input level is dynamically adapted to the measured RF input level; the trigger levels change accordingly.</i></p> <p>The RF Power trigger threshold is the RF input signal level (<i>Wideband Power</i>, see p. 4.75) beyond which the trigger condition is satisfied and a measurement is initiated.</p> <p><i>Low</i> Low trigger threshold, equal to approx. the <i>RF Max. Level</i> –26 dB</p> <p><i>Medium</i> Medium trigger threshold, equal to approx. the <i>RF Max. Level</i> –16 dB</p> <p><i>High</i> High trigger threshold, equal to approx. the <i>RF Max. Level</i> –6 dB</p> <p>The IF Power trigger threshold is the IF trigger signal level beyond which the trigger condition is satisfied and a measurement is initiated. The <i>IF Power</i> input value defines the trigger threshold relative to the maximum input level:</p> <p style="text-align: center;"><i>IF power trigger threshold = <RF Max. Level> + <IF Power></i></p> <p>Remote control <code>TRIGger[:SEquence]:THReshold:RFPower LOW MEDium HIGH</code> <code>TRIGger[:SEquence]:THReshold:IFPower <Power></code></p>
...Value	
Slope	<p><i>Slope</i> qualifies whether the trigger event occurs on the <i>Rising Edge</i> or on the <i>Falling Edge</i> of the trigger signal. The setting has no influence on <i>Free Run</i> measurements.</p> <p>Remote control <code>TRIGger[:SEquence]:SLOPe POSitive NEGative</code></p>
Ext. Trigger (AUX 3/4)	<p><i>Ext. Trigger (AUX 3/4)</i> qualifies whether the external trigger signal is fed in at <i>Pin 6</i>, <i>Pin 7</i>, or <i>Pin 8</i> of the AUX 3 connector. The setting only has effect if the trigger source is an <i>External</i> signal.</p> <p>The CMU can be ordered with the auxiliary connector AUX 4 on the rear panel configured as an external trigger input. In this case the <i>Ext. Trigger...</i> pin selection refers to AUX 4; the front panel connector AUX 3 is disconnected.</p> <p>Remote control <code>TRIGger[:SEquence]:SOURce:EXTernal PIN6 PIN7 PIN8</code></p>

I/Q-IF Interface (Connection Control – I/Q-IF)

The *I/Q-IF* tab is part of the second group of tabs in the *Connection Control* menu. It is accessible after pressing the 1 / 2 toggle hotkey once. Pressing 1 / 2 again switches back to the first group of tabs described above.

The *I/Q-IF* tab configures the signal paths for I/Q and IF signals. With option CMU-B17, *I/Q and IF Interfaces*, I/Q and IF signals can be used in the framework of *RF* measurements and in many network tests. For a detailed description of rear panel connectors for I/Q and IF input/output signals, test scenarios and application examples refer to the CMU200/300 operating manual.

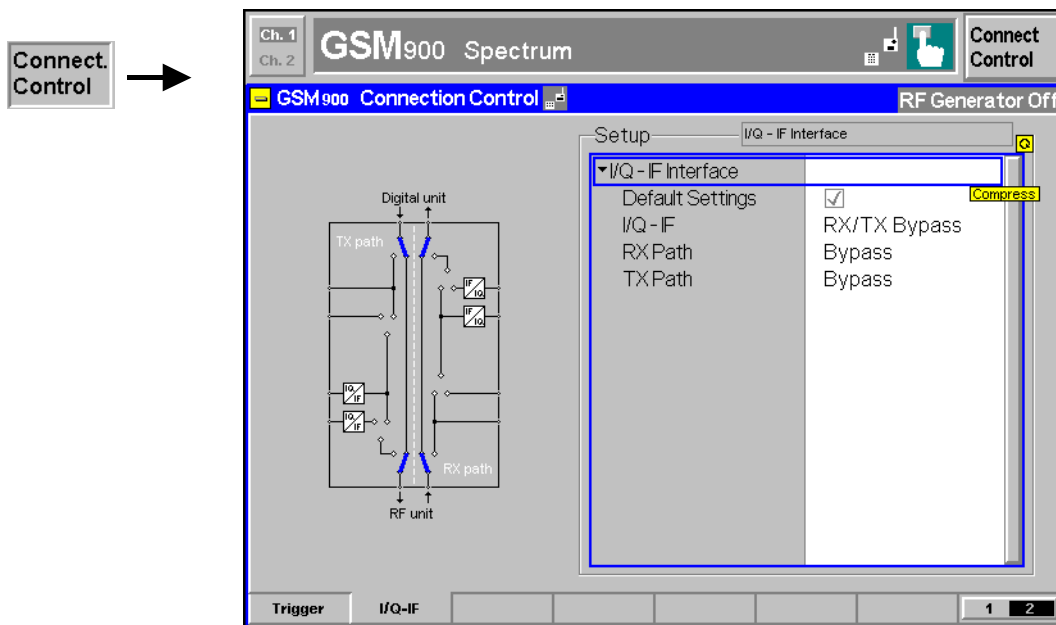


Fig. 4-41 Connection Control – I/Q-IF

Default Settings The *Default Settings* checkbox assigns the default setting to all functions in the *I/Q-IF* tab.

Remote control IQIF:DEFault ON | OFF

I/Q-IF Selects the I/Q-IF test scenario, overwriting the current *RX Path* and *TX Path* settings. Six different predefined test scenarios with fixed RX and TX path are provided; see [Table 4-6 below](#).

Additional scenarios may be defined by selecting any other combination of RX and TX paths. When this is done *I/Q-IF* is set to *User-defined*. The circuit diagram to the left of the *Setup* table shows the current RX and TX signal paths.

Remote control CONFigure:IQIF:RXTXcombined
BYP | BYIQ | XOIO | IOIO | IOXO | FPAT | UDEF

RX Path Selects the RX signal path, leaving the *TX Path* unchanged but adapting the I/Q-IF test scenario to the new RX/TX path combination: If the combination corresponds to a predefined scenario, then *I/Q-IF* is set to the predefined scenario; otherwise it is set to *User-defined*.

The circuit diagram to the left of the *Setup* table shows the current RX and TX signal paths.

Remote control CONFigure:IQIF:RXPath
BYP | BYIQ | XOIO | IOIO | IOXO | FPAT | UDEF

RX Path Selects the TX signal path, leaving the *RX Path* unchanged but adapting the I/Q-IF test scenario to the new RX/TX path combination: If the combination corresponds to a predefined scenario, then *I/Q-IF* is set to the predefined scenario; otherwise it is set to *User-defined*.

The circuit diagram to the left of the *Setup* table shows the current RX and TX signal paths.

Remote control `CONFigure:IQIF:TXPath`
`BYP | BYIQ | XOIO | IOIO | IOXO | FPAT | UDEF`

Table 4-6 I/Q-IF scenarios and path settings

I/Q-IF	RX Path	TX Path	Remark/Application (see also CMU manual)
RX/TX Bypass	Bypass	Bypass	No I/Q or IF inputs/outputs connected Direct signal analysis and transmission with full measurement accuracy
Byp. w. I/Q-OF OUT	Bypass w. I/Q-IF OUT	Bypass w. I/Q-IF OUT	No I/Q or IF inputs connected Analysis of received and transmitted signal via I/Q or IF
I/Q IN/OUT	I/Q IN/OUT	I/Q IN/OUT	Insertion of signal to be analyzed and transmitted on I/Q level
IF IN_I/Q IN/OUT	IF IN_I/Q IN/OUT	IF IN_I/Q IN/OUT	Additional processing of received and transmitted signal on IF level (filters etc.) and analysis via I/Q
IF IN/OUT	IF IN/OUT	IF IN/OUT	Insertion of signal to be analyzed and transmitted on IF level
Fading	Bypass	I/Q IN/OUT	Direct analysis of received signal Modification (fading) of transmitted signal by means of an external fading simulator (SMIQ, ABFS)
User-defined	Any combination of RX Path and TX Path not listed above		Any combination of RX and TX test cases listed above

GSM Mobile Tests (Signalling)

The structure of this section is based on the configuration and measurement groups defined in function group *GSM400/850/900/1800/1900-MS Signalling*. The menus are described in the following order:

1. Call setup to the mobile station (*Connection Control – Connection*)
2. Overview of measurements and global settings (*Overview*)
3. Measurement menus (*Power, Modulation, Spectrum, Receiver Quality*): Purpose of the measurements and relation to the test specifications and conformance requirements, description of measurement results, specific measurement configurations
4. General device configurations (*Connection Control*)

The most important menus within function group *GSM400/850/900/1800/1900-MS Signalling* are shown in an overview at the end of chapter 3 in the present GSM manual.

A lot of menus and controls are identical in the two test modes *Signalling* and *Non Signalling*. In this chapter, these menus are only presented with a summary explanation; the detailed description can be found in the section *GSM400/850/900/1800/1900-MS Non Signalling*.

Setting up a Connection (Popup Menu Connection Control – Connection)

The menu group *Connection Control* controls the signalling procedures (call setup and release, services, signalling parameters) and configures the inputs and outputs with the external attenuation values and the reference frequency.

The term signalling denotes all procedures that are necessary for call setup and release and for control of a connection in the mobile radio network. In the case of GSM mobile tests, a distinction is made between five different signalling states:

<i>Signal Off</i>	CMU transmits no signal
<i>Signal On</i>	CMU transmits a GSM control channel signal to which a mobile station can synchronize
<i>Synchronized</i>	Synchronization with the mobile station and location update performed
<i>Alerting</i>	Mobile is being called by the CMU (after location update or without location update)
<i>Call Established</i>	Call to mobile station established

A number of control commands which can be initiated both by the CMU (*Connect Mobile, Mobile Terminating Call*) and by the mobile station (*Call from MS, Mobile Originated Call*) switch between these states (the dashed lines in [Fig. 4-42](#) denote processes initiated by the mobile station).

A lot of applications within the function group *GSM400/850/900/1800/1900-MS Signalling* are only possible or useful in a particular signalling state (for example, handover between various networks requires a connection between CMU and mobile station, i.e. it is only possible in the *Call Established* state). Accordingly, the possible functions of menus vary depending on the present signalling state. For reference see the *Sig. State* field in the command tables in Chapter 6.

The purpose of the *Signalling* test mode is to perform transmitter and receiver tests with an existing call (or data transfer) connection between the CMU and the mobile. Therefore the menus for setting up a connection (*Connection Control – Connection*) appear immediately after the function group and mode *GSM400/850/900/1800/1900-MS Signalling* is activated. Besides, all the tabs in the *Connection Control* menu can be called up by pressing the *Connect. Control* softkey at the top right in every measurement menu. They are linked with each other via the hotkey bar at the lower edge of the screen. Pressing the *Escape* key closes the active *Connection Control* menu and re-activates the underlying measurement menu.

- The *Network* code
- Selected AF and RF connectors and external attenuation (*AF/RF* ↻)
- Status and result of wideband peak power measurement (*Wideband Power*)

Besides, it contains softkeys which lead to other operating modes or signalling states:

- Select another operating mode of the MS, e.g. (E)GPRS mode (*Network Support* and *Main Service*)
- Activate the control channel signal to which the mobile station can synchronize (*Signal On*)

The popup menu *Connection (Signal Off)* is opened when the function group *GSM-MS Signalling* is selected, or if the control channel signal is switched off (*Signal Off* softkey) while the system is in another signalling state. It is replaced by the *Connection (Signal On)* menu after the control channel signal on the CMU is switched on (Softkey *Signal On*, see Fig. 4-42).

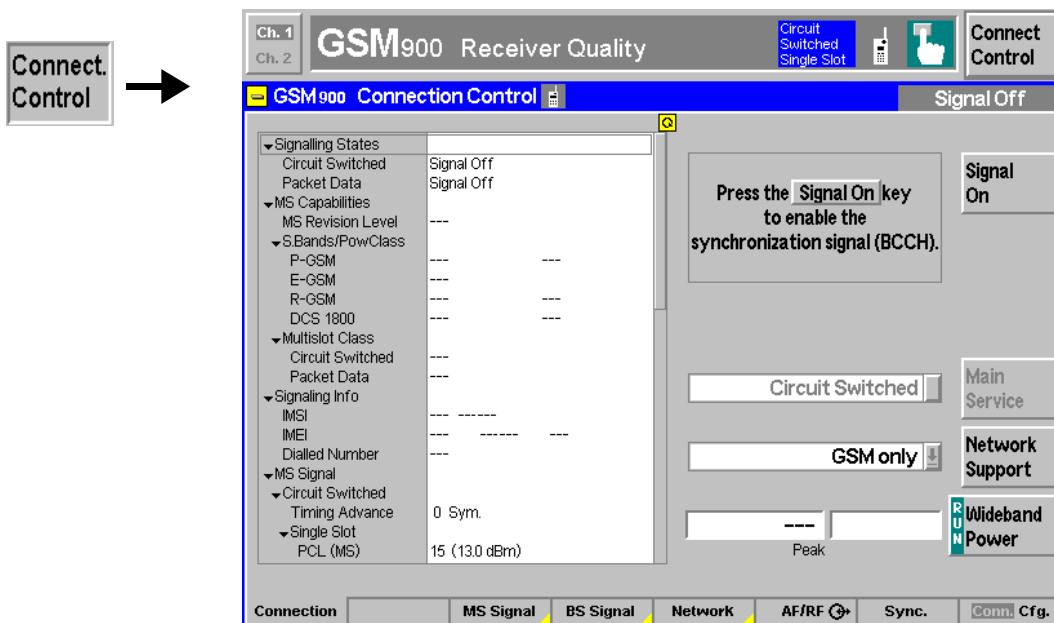


Fig. 4-43 Connection Control – Connection (Signal Off)

The parameter overview in the left half of the menu is also indicated in the other *Connection* tabs and is described in section *Connection Control with Call Established* on p. 4.155 ff. Some parameters are not always available, depending on the current and previous signalling states and settings. In this case the table shows invalid or unavailable settings ("---").

Header Message A Header Message (here: *Press the Signal On key to enable the synchronization signal (BCCH)*) displayed on top of each *Connection* tab informs on the current instrument state or indicates how to proceed to get to other signalling states.

Signal On

The *Signal On* softkey switches on a control channel signal to which the mobile station can synchronize. By switching on the signal, the CMU changes to the signalling state *Signal On*. A user prompt below the header indicates the function of this softkey.

Remote control

```
PROCEDURE:SIGNalling[:CSwitched]:ACTION SON
```

Main Service

The *Main Service* softkey selects *Circuit Switched* or *Packet Data* (GPRS or EGPRS) operation of the MS under test. This softkey is disabled (grayed) if the *Network Support* is set to GSM. See also section [GPRS Signalling](#) on p. 4.195 ff.

Remote control

[:SENSE:]NETWork:MSERVICE? (query only)

The keywords [:CSwitched] and :PDATa in many signalling commands distinguish *Circuit Switched* or *Packet Data* main service.

Network Support

The *Network Support* softkey determines whether the CMU acts as a BTS that supports GSM only or GSM and (E)GPRS.

GSM Circuit switched GSM operation without GPRS support

GSM + (E)GPRS Circuit switched GSM operation with (E)GPRS support: The CMU reports to the MS that the CMU/current cell supports (E)GPRS. The MS can react to this message and attempt a GPRS attach provided that it also supports (E)GPRS.

The *Network Support* parameter is available only before the MS is synchronized (i.e. in the GSM signalling states *Signal Off* or *Signal On*). The *GSM + (E)GPRS* setting is a pre-condition for all (E)GPRS-related signalling procedures and measurements such as the *Main Service* selection.

If the *Packet Data* main service is selected, the *Network Support* must be either *GSM + GPRS* or *GSM + EGPRS*.

Remote control

CONFigure:NETWork:NSUPport GSM | GGPR | GEGP

Wideband Power

The *Wideband Power* softkey controls the wideband power measurement and indicates its status (*RUN* | *HLT* | *OFF*). The status can be changed after softkey selection (pressing once) by means of the *ON/OFF* key or the *CONT/HALT* key. The measurement result is in units of dBm. The analog bar to the right of the softkey shows the measured power relative to the expected level from the MS, i.e. the nominal output power corresponding to its power class and PCL. The display range is between *Nominal Power – 10 dB* and *Nominal Power + 10 dB*.

The wideband power measurement is performed at the Front End of the CMU and yields the peak power of the input signal inside a wide frequency range. For GMSK modulated GSM signals, the result of the wideband power measurement is usually slightly higher than the result of the *Power* measurement which is obtained with different filter characteristics. The main purpose of the wideband power measurement is to indicate whether an input signal is available and whether it is in the expected range.

Note: *An additional quick and precise power measurement is available in remote control (keyword NPOWER).*

Remote control

INITiate:WPOWER

FETCh:WPOWER:STATus?

READ[:SCALar]:WPOWER?

FETCh[:SCALar]:WPOWER?

SAMPle[:SCALar]:WPOWER?

Connection Control with Signal (State Signal On)

In addition to the parameter overview described in section *Connection Control with Call Established* on p. 4.155 ff, the *Network Support* and *Main Service* softkeys, and the wideband power measurement described in section *Signalling Control without Signal (State Signal Off)* on p. 4.94 ff., the *Connection (Signal On)* tab contains the following softkeys which lead to other services or signalling states:

- Switch off the control channel signal for synchronization (*Signal Off* → state *Signal Off*)
- Set up a call to the mobile station (*Connect Mobile* → state *Alerting*)
- Short message service (*Send SMS* → return to state *Signal On*)

The popup menu *Connection (Signal On)* is opened after the control channel signal of the CMU is switched on (Softkey *Signal On* in the popup menu *Connection (Signal On)*). It is replaced by the *Connection (Synchronized)* menu after the mobile station initiates a location update by itself. It is replaced by the *Connection (Call Established)* menu if the mobile station sets up a call to the CMU. It is replaced by the *Connection (Alerting)* menu if a mobile is called via the *Connect Mobile* softkey (see Fig. 4-42).

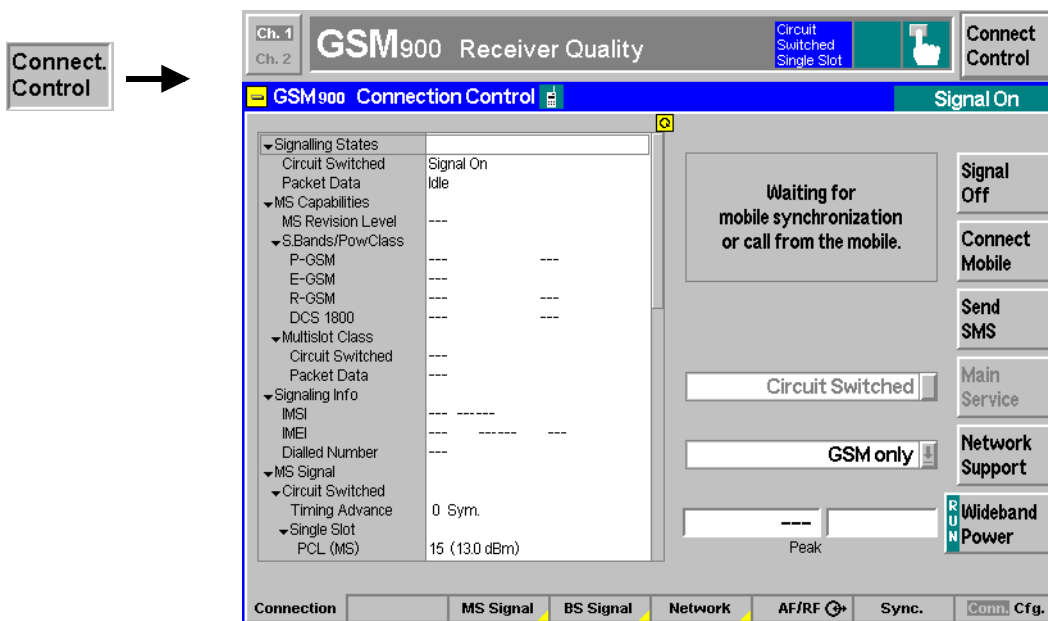


Fig. 4-44 Connection Control – Connection (Signal On)

The parameter overview in the left half of the menu is also indicated in the other *Connection* tabs and is described in section *Connection Control with Call Established* on p. 4.155 ff. Some parameters are not always available, depending on the current and previous signalling states and settings. In this case the table shows invalid or unavailable settings ("---").

Header Message A Header Message (here: *Waiting for mobile synchronization or call from the mobile*) displayed on top of each *Connection* tab informs on the current instrument state or indicates how to proceed to get to other signalling states.

Signal Off

The *Signal Off* softkey switches off the CMU's control channel signal to which the mobile station can synchronize. The CMU changes to the signalling state *Signal Off*.

```
Remote control
PROCEDURE:SIGNalling[:CSwitched]:ACTION SOFF
```

Connect Mobile

The *Connect Mobile* softkey sets up a call to the mobile station. The header message indicates that the mobile station is to synchronize to the CMU signal first. After successful synchronization, the two successive messages *Paging in progress ... Location update in progress ...* are displayed below the header; the CMU changes to the signalling state *Alerting*. As soon as the call is accepted at the mobile the CMU changes to the signalling state *Call Established*.

Remote control

```
PROCEDURE:SIGNalling[:CSwitched]:ACTION MTC
```

Send SMS

The *Send SMS* softkey activates the short message service. It opens the *Short Message Service* popup menu:



A text with a maximum of 160 alphanumeric characters can be entered in the input field. Two front panel keys control the short message service menu:

- CLR* Clear the whole short message from the input field
- ENTER* Send the short message in the input field to the mobile.

Remote control

```
PROCEDURE:SIGNalling[:CSwitched]:ACTION SMS
CONFIGURE:SIGNalling[:CSwitched]:SMS <Text>
SENSE:SIGNalling[:CSwitched]:SMS?
```


Overview Menu

The Overview menu displays the essential results of the *P/t Norm. GMSK*, the *Ext. Phase Err. GMSK*, and the *Overview 8PSK* applications and provides access to the most important measurement settings. In particular, it configures the GSM downlink signal that the CMU transmits in order to set up and control a connection (*BS Signal*) and defines the properties of the uplink signal expected from the device under test (*MS Signal*). The Overview menu is analogous to the *Analyzer/Generator* menu described on p. 4.2 ff.

- The measurement control softkey (measurement control softkey) *P/t Norm. GMSK* changes to *Ext. Phase Err. GMSK* or *Overview 8PSK*, depending on the application selected. This softkey controls the measurement, indicates its status (*RUN | HLT | OFF*) and opens the configuration menu *Power Configuration* or *Modulation Configuration*. The hotkeys associated to the measurement control softkey define the scope of the *Power* or *Modulation* measurement.
- The other softkeys on the right side are combined with various hotkeys (see Fig. 4-45 below). The softkey/hotkey combinations provide test settings and switch over between different measurements.

The Overview menu is opened by selecting the function group in the *Menu Select* menu (with associated key at the front of the instrument) and after closing the configuration menu *Connection Control - Connection* (using the *Escape* key or automatically after establishing a connection). The hotkeys associated to the *Menus* softkey switch over between the Overview menu and the remaining measurement menus of function group *GSM400/850/900/1800/1900-MS Signalling*.

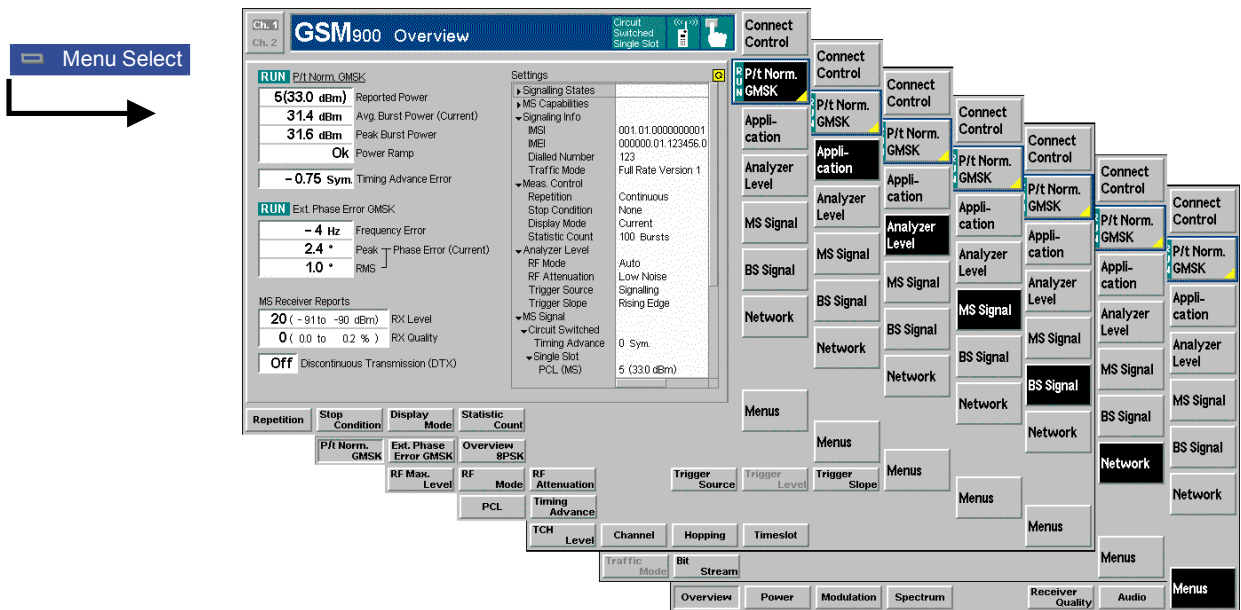


Fig. 4-45 Overview of settings and measurements

Test Settings

The settings for the *Overview* menu are accessible via softkey/hotkey combinations. The function of the measurement control softkeys *P/t Norm. GMSK*, *Ext. Phase Err. GMSK*, and *Overview 8PSK* is analogous to the measurement control softkeys in the *Analyzer/Generator* menu; see section *Measurement Control* on p. 4.4. The same holds for the selection of the application; see section *Selecting the Application* on p. 4.5.

The *Overview* menu provides a number of general or application-specific settings. All of these settings are always identical to the corresponding settings in the *Power* and *Modulation* menus. Changes made in the *Overview* menu overwrite the *Power* and *Modulation* settings and vice versa.

- Description of settings**
- The settings to be made in the *P/t Normal GMSK* application are described in section *Test Settings* on p. 4.102 ff.
 - The settings associated to the measurement control softkey and the *Analyzer Level* settings to be made in the *Ext. Phase Error GMSK* and in the *Overview 8PSK* application are identical with the corresponding settings in the *Analyzer/Generator* menu. The *MS Signal*, *BS Signal* and *Network* settings are described in section *Test Settings* on p. 4.102 ff.

Settings table The *Settings* table in the right half of the *Overview* menu gives an overview of the measurement settings belonging to the current application. It changes when a different application is selected. The rollkey scrolls and expands the *Setup* table.

Measurement Results

The measurement results and their relation to the three measurement applications are analogous to the results in the *Analyzer/Generator* menu; see section *Measurement Results* on p. 4.6 f. The results in the *Overview* menu represent only a small fraction of the power and modulation results and of the MS reports that the CMU is able to acquire. A comprehensive set of test results is displayed in the *Power*, *Modulation*, and *Receiver Quality* measurement menus. More information about the measurement results is to be found in the documentation on these measurement menus:

<i>Power</i>	Burst power	<i>Power</i> menu, p. 4.101 ff.
<i>Ext. Phase Err. GMSK</i>	Modulation (phase and frequency error)	<i>Modulation</i> menu, p. 4.118 ff.
<i>MS Rcv. Reports</i>	Measurement reports from mobile station	<i>Sensitivity</i> menu, p. 4.133 ff.

Power Measurements

The menu group *Power* is designed to measure the RF output power of the MS transmitter. The power of a normal burst in a single timeslot or in up to 4 consecutive timeslots, the power of an access burst, the averaged power and its evolution over several slots or frames can be analyzed. In addition, the average power can be measured as a function of the power control level (PCL) of the mobile. The different measurements are treated as different applications; the results are displayed in separate *Power* measurement menus. The popup menu *Power Configuration* is used to configure the measurements.

Most applications and settings of the *Power* menu do not depend on the signalling state and correspond to those of the menu *Power* in the test mode *GSM400/850/900/1800/1900-MS Non Signalling*. For a detailed description of these applications refer to p. 4.9 ff. The following two applications are related to signalling issues and therefore not available in *Non Signalling* mode:

- Application *P/PCL*
- Application *P/t Access GMSK*

P/PCL

In *Signalling* mode, the average burst *Power* can be measured as a function of the PCL of the connected mobile phone. This parameter is not available under the conditions of a module test. Therefore, application *P/PCL* is not included in the *Non Signalling* measurements.

The *P/PCL* measurement represents a fast method of measuring the average burst power transmitted on all PCLs supported by a mobile. The measurement relies on the fact that a GSM mobile, when changing from one PCL to another, steps through the whole range of intermediate PCLs, dwelling on each level for a period corresponding to 13 TDMA frames ($577 \mu\text{s} \times 8 \times 13 \approx 60 \text{ ms}$). The CMU measures the average burst power in the whole PCL range, starting with the highest output power level (i.e. the smallest PCL, see [Table 4-8](#) on page 4.116).

The *P/PCL* measurement is combined with frequency hopping on seven uplink GSM channels. In addition, a limit check with PCL-dependent tolerances is performed. The results are output in tabular form.

P/t Access GMSK

The *P/t Access GMSK* application measures the power of an access burst over one burst period. The measurement curve obtained can be further processed to determine an average, minimum, or maximum result and calculate the average over the whole burst. Access bursts are used by the mobile station for initial random access to the network and for handover, so they can be measured in *Signalling* mode only. As there is no mode where the mobile transmits access bursts in consecutive TDMA frames, only single shot measurements can be made. Besides, the *P/t Access GMSK* application is analogous to *P/t Normal GMSK*.

The properties and use of access bursts in GSM networks are described in section *Limit lines (Power Configuration – Limit Lines)* on page 4.32 ff.

Note: Power measurements on normal bursts are performed at the MS output power set via PCL (see [PCL](#) softkey on p. 4.162) or the corresponding parameters for multislot or packet data mode. In contrast, the access burst is transmitted before a call is set up. The *P/t Access Burst measurement* is performed at the maximum power for the cell P_{MAX} (see [P_{MAX}](#) parameter on p. 4.168).

Measurement Menu (Power)

The graphical measurement menu *Power* displays the results of the power measurement.

- The measurement control softkey *P/t Normal GMSK* (which changes to *P/Frame*, *P/PCL* etc., depending on the power measurement application selected) controls the *Power* measurement, indicates its status (*RUN* | *HLT* | *OFF*), and opens the configuration menu *Power Configuration*. The hotkeys associated to the measurement control softkey define the scope of the *Power* measurement.

**P/t Normal
GMSK**

The *P/t Normal GMSK* hotkey selects the power versus time measurement for GMSK modulated normal burst signals (see explanation of GSM burst structure at the beginning of section *Limit lines (Power Configuration – Limit Lines)* on page 4.32).

Remote control

The *P/t Normal GMSK* application is selected by the keywords [:NORMal] [:GMSK] in the 3rd and 4th level of the POWER commands, e.g. CONFigure:POWer [:NORMal] [:GMSK] . . .

**P/t Normal
8PSK**

The *P/t Normal 8PSK* hotkey selects the power versus time measurement for 8PSK modulated normal burst signals (see explanation of GSM burst structure at the beginning of section *Limit lines (Power Configuration – Limit Lines)* on page 4.32).

Remote control:

The *P/t Normal 8PSK* application is selected by the keywords [:NORMal] :EPSK in the 3rd and 4th level of the POWER commands, e.g. CONFigure:POWer [:NORMal] :EPSK . . .

**P/t
Multislot**

The *P/t Multislot* hotkey selects the power versus time measurement for multislot configurations (see explanation of GSM burst structure at the beginning of section *Limit lines (Power Configuration – Limit Lines)* on page 4.32).

Remote control:

The *P/t Multislot* application is selected by the 3rd level keyword :MSLot in the POWER commands, e.g. CONFigure:POWer:MSLot . . .

P/Frame

The *P/Frame* hotkey selects the power versus frame measurement. In this application, the average burst power in a particular timeslot is measured over a range of consecutive TDMA frames and displayed in tabular form.

Remote control

The *P/Frame* application is selected by the keyword :FRAME in the 3rd level of the POWER commands, e.g. CONFigure:POWer:FRAME . . .

**P/Slot
Graph**

The *P/Slot Graph* hotkey selects the power versus slot measurement with graphical display. In this application, the average burst power in all eight timeslots of a TDMA frame is measured and displayed in a bar graph.

Remote control

The *P/Slot Graph* application is selected by the keyword :SLOT in the 3rd level of the POWER commands, e.g. CONFigure:POWer:SLOT . . .

**P/Slot
Table**

The *P/Slot Table* hotkey selects the power versus slot measurement with tabular display. In this application, the average burst power in all eight timeslots of several consecutive TDMA frames is measured and displayed in a table.

Remote control

The *P/Slot Table* application is selected by the keyword :XSLot in the 3rd level of the POWER commands, e.g. CONFigure:POWer:XSLot . . .

P/PCL

The *P/PCL* hotkey selects the power versus PCL measurement. In this application, the average burst power in three GSM channels is measured as a function of the PCL of the mobile phone and displayed in tabular form.

Remote control

The *P/PCL* application is selected by the keyword :PCL in the 3rd level of the POWER commands, e.g. CONFigure:POWer:PCL . . .

P/t Access Burst

The *P/t Access Burst* hotkey selects the power versus time measurement of the access burst.

Note: *There is no mode where the mobile transmits access bursts in consecutive TDMA frames. As a consequence, in the P/t Access GMSK application, only one access burst can be measured when the mobile attempts a location update (activate the application before performing a location update). See also explanations at the beginning of section [Power Measurements](#) on page 4.101.*

Remote control

The *P/t Access Burst* application is selected by the keywords :ABURst[:GMSK] in the 3rd and 4th level of the POWer commands, e.g. CONFigure:POWer :ABURst[:GMSK]...

The following test settings depend on the application selected.

a) P/t Normal GMSK, P/t Normal 8PSK, P/t Access Burst

Analyzer Level

The *Analyzer Level* softkey controls the level in the RF input signal path and provides the trigger settings for the Power measurement.

Difference from Non Signalling mode (see p. 4.9 ff):

- In *GSM400/850/900/1800/1900-MS Signalling*, the measurement is triggered by the signal from the signalling unit or the mobile phone. Use of an external trigger signal is not possible.
- In *GSM400/850/900/1800/1900-MS Signalling*, the maximum input level (*RF Max. Level*) can be set automatically according to the PCL of the mobile phone (*RF Mode* hotkey, setting *PCL*, see also *MS Signal* tab, section [Table-oriented Version](#) on p. 4.167 f.).

MS Signal

The *MS Signal* softkey controls the traffic channel transmitter output signal of the mobile phone. The MS output signal parameters are indicated in the [Overview Menu](#) (see p. 4.99). For a detailed explanation see section [RF Signals of the MS \(Connection Control – MS Signal\)](#) on p. 4.161 ff.

PCL

The *PCL* hotkey sets the mobile transmitter output power. This power is defined in terms of power control levels without dimension (see section [Limit Values for Average Burst Power \(Power Configuration – Limits\)](#) on page 4.116.

PCL is available only if the mobile station is set to single slot mode (see [Slot Mode](#) softkey on p. 4.162). If the MS is in multislot mode, the *Slot Config.* softkey is displayed instead; see below.

Remote control

CONFigure:MSsignal[:CSwitched][:TCH][:SSlot]:MS:PCL

Slot Config.

The *Slot Config.* hotkey opens the *Slot Configuration Editor* window to determine the levels in all uplink and downlink timeslots. The *Slot Configuration Editor* is described in section [Softkey-oriented Version: MS Multislot Mode](#) on p. 4.164 ff.

Slot Config. is available only if the mobile station is set to multislot mode (see [Slot Mode](#) softkey on p. 4.162). If the MS is in single slot mode, the *PCL* softkey is displayed instead; see above.

	<p>Remote control CONFigure:MSSignal[:CSwitched][:TCH]:MSLot:SCONFig CONFigure:MSSignal:PDATA[:TCH]:MSLot:SCONFig</p>
<div style="border: 1px solid black; padding: 2px; width: fit-content;">Timing Advance</div>	<p>The <i>Timing Advance</i> hotkey sets a (zero or positive) delay time correcting the MS timing. See also section RF Signals of the MS (Connection Control – MS Signal) on p. 4.161 ff.</p>
<div style="border: 1px solid black; padding: 2px; width: fit-content;">BS Signal</div>	<p>Remote control CONFigure:MSSignal[:CSwitched][:TCH]:TADVance</p> <p>The <i>BS Signal</i> softkey controls the traffic channel signal transmitted by the CMU. See also section RF Signals of the CMU (Connection Control – BS Signal) on p. 4.168 ff.</p>
<div style="border: 1px solid black; padding: 2px; width: fit-content;">TCH Level</div>	<p>The <i>TCH Level</i> hotkey sets the level in the used timeslot of the CMU traffic channel signal.</p> <p><i>TCH Level</i> is available only if the mobile station is set to single slot mode (see Slot Mode softkey on p. 4.162). If the MS is in multislots mode, the <i>Slot Config.</i> softkey is displayed instead; see below.</p>
<div style="border: 1px solid black; padding: 2px; width: fit-content;">Hopping</div>	<p>Remote control CONFigure:BSSignal[:CSwitched][:TCH]:LEVel:UTIMeslot</p> <p>The <i>Hopping</i> hotkey selects the frequency hopping sequence for the CMU traffic channel signal.</p> <p><i>TCH Level</i> is available only in the <i>Call Established</i> signalling state and if the mobile station is set to single slot mode (see Slot Mode softkey on p. 4.162). The hopping sequences can be edited in the <i>BS Signal</i> tab of the <i>Connection Control</i> menu.</p>
<div style="border: 1px solid black; padding: 2px; width: fit-content;">Channel</div>	<p>Remote control PROCedure:SIGNalling[:CSwitched][:TCH][:SSLot]:FHOPping:SEquence</p> <p>The <i>Channel</i> hotkey sets the traffic channel number used for the circuit switched or packet data connection. For an overview of GSM channel structure see tables in section <i>Control of Input and Output Signals</i> on page 4.72.</p>
<div style="border: 1px solid black; padding: 2px; width: fit-content;">Timeslot</div>	<p>Remote control CONFigure:BSSignal[:CSwitched][:TCH]:CHANnel <number> PROCedure:SIGNalling[:CSwitched][:TCH]:CHANnel <number> CONFigure:BSSignal:PDATA[:TCH]:MSLot:CHANnel</p> <p>The <i>Timeslot</i> hotkey sets the traffic channel timeslot used for the circuit switched single slot connection.</p> <p><i>Timeslot</i> is available only if the mobile station is set to single slot mode (see Slot Mode softkey on p. 4.162). If the MS is in multislots mode, the <i>Slot Config.</i> softkey is displayed instead; see below.</p>
	<p>Remote control CONFigure:BSSignal[:CSwitched][:TCH][:SSLot]:TIMeslot PROCedure:SIGNalling[:CSwitched][:TCH][:SSLot]:TIMeslot</p>

**Slot
Config.**

The *Slot Config.* hotkey opens the *Slot Configuration Editor* window to determine the levels in all uplink and downlink timeslots. The *Slot Configuration Editor* is described in section [Softkey-oriented Version: MS Multislot Mode](#) on p. 4.164 ff.

Slot Config. is available only if the mobile station is set to multislot mode (see [Slot Mode](#) softkey on p. 4.162). If the MS is in single slot mode, the *TCH Level* and *Timeslot* softkeys are displayed instead; see above.

Remote control

```
CONFigure:BSSignal[:CSwitched][:TCH]:MSLot:SCONFig:UUNused
CONFigure:BSSignal[:CSwitched][:TCH]:MSLot:SCONFig:INDividual
PROCEDURE:SIGNalling[:CSwitched][:TCH]:MSLot:SCONFig
CONFigure:BSSignal:PDATa[:TCH]:MSLot:SCONFig
PROCEDURE:SIGNalling:PDATa[:TCH]:MSLot:SCONFig
```

Network

The *Network* softkey defines network parameters that the CMU reports to the mobile station. See also section [Network Parameters \(Connection Control – Network\)](#) on page 4.176.

**Traffic
Mode**

The *Traffic Mode* hotkey selects the speech and data coding scheme for the MS traffic channel.

Remote control

```
CONFigure:NETWork[:CSwitched]:SMODE:TRAFFic
```

Bit Stream

The *Bit Stream* hotkey selects the data to be transmitted on the traffic channel.

Remote control

```
CONFigure:NETWork[:CSwitched]:SMODE:BITStream?
PROCEDURE:NETWork[:CSwitched]:SMODE:BITStream?
CONFigure:NETWork:PDATa:BITStream?
PROCEDURE:NETWork:PDATa:BITStream
```

b) P/t Multislot

The settings accessible via the *Application*, *Analyzer Level*, *MS Signal*, and *BS Signal* softkey are identical with those of application *P/t Normal GMSK*, see above. The *Marker/Display* softkey is identical with the *Marker/Display* softkey in *Non Signalling* mode.

The settings associated to the measurement control softkey are analogous to the *Non Signalling* settings. The important difference is due to the fact that in *Signalling* mode, CMU and MS under test are synchronized so that the true TDMA timing of the MS signal is known. Instead of a *Trig. Slot Offset*, the actual timeslot number (*Meas. Slot*) can be used in *Signalling* mode.

**P/t
Multislot**

The *P/t Multislot* measurement control softkey controls the *P/t Multislot* measurement. Two of the hotkeys associated to the *Multislot* softkey are different from the *Non Signalling* mode:

Slot
Count

The hotkey *Slot Count* defines an integer number of timeslots to be measured. The actual measured time range is larger than the integer number of slots because it comprises an additional display margin; for details see remote control command description. The *Meas. Slot* hotkey defines the position of the measurement range within the TDMA frame; see [Fig. 4-82](#) on p. 4.192.

The display range is adapted to the *Slot Count* settings by default but can be modified by means of the *Display Marker – Time Scale* and *Display Marker – Default Scale* hotkeys. Changing the *Slot Count* overrides the *Time Scale* settings and restores the default display range.

Remote control

CONFigure:POWer:MSLot:SCount

Meas
Slot

The hotkey *Meas. Slot* determines the timeslot that is measured in all Multislot configurations. In the graphical display, this measured timeslot is marked by *Meas. Slot*.

Meas. Slot is a general parameter that is valid for all measurement groups and also provided in the *Analyzer* tab of the *Connection Control* menu. For more information see p. 4.192.

Remote control

CONFigure:MCONTRol:MSLot:MESLot

c) P/Frame, P/Slot Graph, P/Slot Table

The settings accessible via the measurement control softkey, the *Application*, *Analyzer Level*, *MS Signal*, and *BS Signal* softkey are identical with those of application *P/t Normal GMSK*, see above. The *Marker/Display* softkey is not needed.

d) P/PCL

The settings of the *Application*, *Analyzer Level*, and *BS Signal* softkey are identical with those of application *P/t Normal GMSK*, see above. In application *P/PCL*, the *P/PCL – Channel Count* and the *MS Signal* softkey are used for channel selection.

P/PCL

The *P/PCL* softkey controls the power measurement and indicates its status (RUN | HLT | OFF).

Channel
Count

The *Channel Count* hotkey determines whether the *P/PCL* measurement is performed on 3 or 7 different GSM channels. If only 3 channels are selected, the *P/PCL* measurement is faster; the last four columns in the output table of the *Power* menu are suppressed.

Remote control

CONFigure:POWer:PCL:CCount C3 | C7

MS
Signal

The *MS Signal* softkey defines seven channels for the *P/PCL* measurement.

1st Chan

The *1st Chan* hotkey defines the first GSM channel to be measured. For a list of GSM channels refer to the tables in section *Control of Input and Output Signals* (p. 4.72 ff; the analyzed channels are uplink channels).

Remote control

CONFigure:POWer:PCL:CHANnel <Channel1>, . . . , <Channeln>

BS Signal

The *BS Signal* softkey controls the traffic channel signal transmitted by the CMU. See also section *RF Signals of the CMU (Connection Control – BS Signal)* on p. 4.168 ff.

Main Timeslot

The *Main Timeslot* hotkey determines the timeslot that the MS and the BS/CMU use for signalling. The main timeslot can not be switched off in both the downlink and uplink.

This hotkey is available only if the mobile station is set to multislot mode (see *Slot Mode* softkey on p. 4.162).

Remote control

PROCedure:SIGNalling[:CSwitched][:TCH]:MSLot:MTIMeslot

CONFigure:BSSignal[:CSwitched][:TCH]:MSLot:MTIMeslot

The remaining hotkeys select the second up to the 7th channel, respectively.

Measurement Results

The measurement results depend on the application selected.

a) P/t Normal GMSK

The results displayed in the measurement menu *Power*, application *P/t Normal GMSK*, can be divided into three groups:

- Settings
- Scalar measurement results (single values)
- Arrays (the measurement curve plotted as a function of time)

The measurement results are indicated in two parameter lines, the test diagram and an info box:

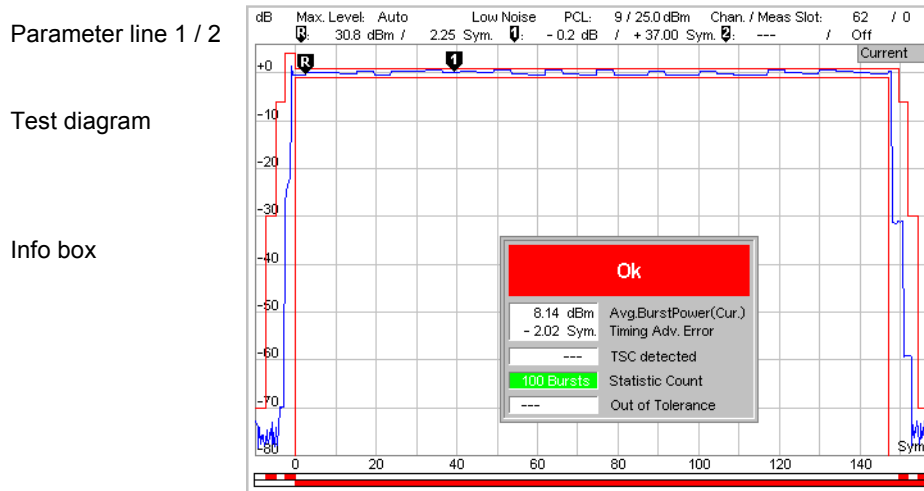


Fig. 4-47 Display of measurement results (P/t Normal GMSK menu)

**Settings/
scalar results**

Scalar measurement results and settings are indicated in the two parameter lines above the test diagram and in the info box, a popup window in the middle of the graphical screen *Power*.

**1st parameter
line**

The first parameter line contains the following settings:


- Max. Level* Maximum input level as set in *Input Level – Max. Level* (p. 4.191)
- Attenuation* Setting for the attenuation of the input level (*Normal, Low Noise, Low Distortion*)
- PCL* Power control level and corresponding output power of mobile
- Chan./Meas. Slot* RF channel and measured slot; see *Meas. Slot* softkey on p. 4.192

**2nd parameter
line**

The second parameter line contains the following marker values:

- R** Level and time of reference marker
- 1** Level and time of delta marker 1 (setting *absolute*) and/or difference from reference marker (setting *relative*)
- 2** Level and time of delta marker 2 (setting *absolute*) and/or difference from reference marker (setting *relative*)

Info box

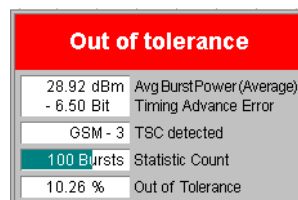

The info box contains the following settings:

Statistic Count Number of bursts per measurement cycle.

In addition, it indicates the results for the scalar measured values:

Avg. Burst Power Average burst power, depending on the display mode set (see upper right corner of the diagram).

Timing Adv. Error due to timing advance in symbols. This measured value replaces the setting value *Symbol Offset* (or *Timing Offset*) in *Non Signalling* mode. See also section *Measurement Results* on page 4.119.

TSC detected Training sequence of the measured RF signal.
Out of Limit Relative number of measured bursts that are out of the tolerances defined by the limit lines.
Burst Matching Error message if the displayed curve is out of tolerance.

Remote control

Settings are read out using the query corresponding to the setting command (setting command with appended question mark).

For scalar measurement results:

READ[:SCALar]:POWer[:NORMal][:GMSK]?
 CALCulate:POWer[:NORMal][:GMSK]:LIMit:MATChing?
 FETCh[:SCALar]:POWer[:NORMal][:GMSK]?
 SAMPlE[:SCALar]:POWer[:NORMal][:GMSK]?

Measurement curves (arrays)

The measurement result is displayed as a continuous measurement curve in the test diagram together with the limit lines, markers, and the D-line, if defined. The curve is derived from 668 equidistant measurement points with a ¼ symbol spacing covering a time range between -10 symbols and 156 ¾ symbols.

The measurement curve in the *Power* measurement menu shows the measured burst power (in dB) as a function of time (in symbol periods). The displayed result depends on the test settings. The display mode for the measurement curve (*Minimum, Maximum, Average, Current*) is indicated in the upper right corner of the diagram.

The scale of both axes can be changed via the *Display Area* hotkey.

Remote control

READ:ARRay:POWer[:NORMal][:GMSK]...?
 READ:ARRay:POWer[:NORMal][:GMSK]:LIMit:MATChing:...?
 FETCh:ARRay:POWer[:NORMal][:GMSK]...?
 SAMPlE:ARRay:POWer[:NORMal][:GMSK]...?

Limit Check

The result of the limit check is visualized in two colored bars below the diagram. In each area of the burst, the upper (lower) bar turns red if the result exceeds (falls below) the power/time template defined in the *Limit Lines* tab of the *Power Configuration* menu.

Note: Limit check for multislot configurations

In the P/t Normal... applications it is possible to analyze the MS signal in a single timeslot, irrespective of the DUT's multislot configuration. The CMU uses the tolerance template according to the measurement application.

The single slot template (see section Limit Lines on page 4.32 ff.) can cause ambiguities if the MS also transmits on one of the timeslots adjacent to the measured slot. The multislot template doesn't specify the burst edges in the guard period between two active timeslots, so the single slot limit check may erroneously indicate an excess signal level. To avoid any misleading results the upper limit check in the P/t Normal... applications is disabled for MS multislot configurations with adjacent active timeslots (Signalling mode only). The info box shows invalid results "---".

Remote control

CALCulate[:SCALar]:POWer[:NORMal][:GMSK]:LIMit:MATChing...?

b) P/t Normal 8PSK

As shown in Fig. 4-48 below, the *P/t Normal 8PSK* measurement results are similar to the *P/t Normal GMSK* results. The x-axis scale of both diagrams is equal because 8PSK and GMSK symbol periods are of equal length. The following differences occur:

- The default limit lines differ from the GMSK limit lines.

See explanation of GSM burst structure and power/time templates in section *Limit lines (Power Configuration – Limit Lines)* on page 4.32 ff.

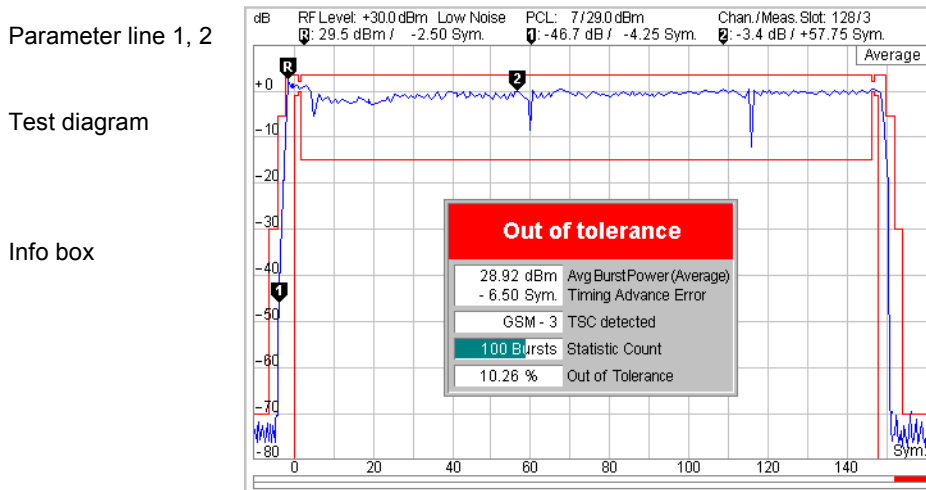


Fig. 4-48 Display of results (Power – P/t Norm. 8PSK)

c) P/t Multislot

As shown in Fig. 4-49 below, the *P/t Multislot* measurement results are analogous to the corresponding *Non Signalling* mode results; see section Measurement Results on page 4.20 ff. The following differences occur:

- The first parameter line indicates the PCL of the mobile phone under test instead of the *Frequency Offset* of the RF input signal.
- The actual TDMA timeslot (*Meas. Slot*) replaces the *Trig. Slot Offset*; see section *P/t Multislot* on p. 4.106.

Note: *In an EGPRS test mode connection, it is possible to measure and display GMSK and 8PSK modulated bursts simultaneously. A measurement example is reported in Chapter 2.*

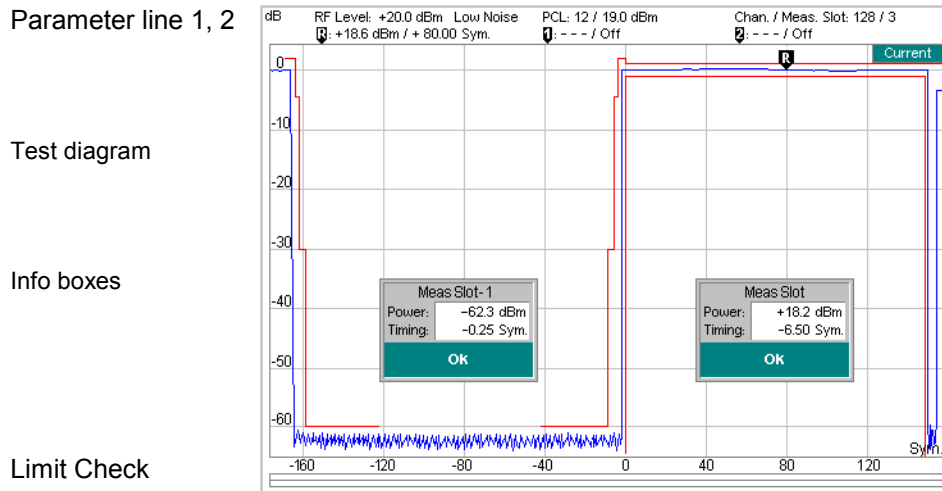


Fig. 4-49 Display of results (Power – P/t Multislot)

d) P/Frame, P/Slot Graph, P/Slot Table

The results displayed in the measurement menu *Power*, applications *P/Frame*, *P/Slot Graph*, and *P/Slot Table* are analogous to the corresponding *Non Signalling* mode results; see section Measurement Results on page 4.20 ff. In *Signalling* mode, the PCL of the mobile phone under test is indicated in the parameter line instead of the *Frequency Offset* of the RF input signal.

In *Signalling* mode, the burst timing and the numbering of the timeslots within a TDMA frame is known. Therefore, the *P/Slot Graph* menu always shows a full TDMA frame (slot 0 to 7); the first timeslot doesn't have to be determined with a trigger condition. In the *P/Slot Table* application, the first timeslot displayed corresponds to the beginning (slot 0) of a TDMA frame. In the *P/Slot Frame* application, the used timeslot in all consecutive TDMA frames is displayed.

e) P/PCL

The measurement menu *Power*, application *P/PCL*, contains a table of all measured average burst powers.

PCL/Channel	1st	1	2nd	32	3rd	64	4th	96	5th	124	6th	955	7th	1023
5 (33.0 dBm)		33.2	33.2	33.0	33.0	33.1	33.2	33.1	33.2	33.1				
6 (31.0 dBm)		31.5	31.5	31.4	31.4	31.6	31.5	31.6	31.5	31.6				
7 (29.0 dBm)		29.7	29.7	29.7	29.7	29.6	29.7	29.6	29.7	29.6				
8 (27.0 dBm)		28.0	28.0	27.3	27.3	27.2	28.0	27.2						
9 (25.0 dBm)		25.9	25.9	25.8	25.8	25.7	25.9	25.7						
10 (23.0 dBm)		23.8	23.8	23.7	23.7	23.6	23.8	23.6						
11 (21.0 dBm)		21.5	21.5	21.6	21.6	21.4	21.5	21.4						
12 (19.0 dBm)		19.7	19.7	19.5	19.5	17.5	19.7	17.5						
13 (17.0 dBm)		17.5	17.5	17.3	17.3	17.3	17.5	17.3						
14 (15.0 dBm)		15.2	15.2	15.3	15.3	15.3	15.2	15.3						
15 (13.0 dBm)		13.5	13.5	13.7	13.7	13.7	13.5	13.7						
16 (11.0 dBm)		11.5	11.5	11.7	11.7	11.7	11.5	11.7						
17 (9.0 dBm)		9.2	9.2	9.0	9.0	9.1	9.2	9.1						

all results in dBm

Fig. 4-50 Display of measurement results (P/PCL menu)

PCL/Channel The *PCL/Channel* table contains the average burst power for all PCLs supported by the mobile, starting with the maximum output power (lowest PCL) and in the three or seven channels selected via the *Channel* softkey. If the tolerance value defined in the *Limits* card of the *Power Configuration* menu (see section [Limit Lines \(Power Configuration – Limit Lines\)](#) on p. 4.116 ff) is violated, the result is shown on a red background.

If more than 16 different PCLs are supported, the table contains a scrollbar.

Remote control

```
READ[ :SCALar ]:POWer:PCL?
CALCulate:POWer:PCL:LIMit:MATCHing?
FETCh[ :SCALar ]:POWer:PCL?
SAMPle[ :SCALar ]:POWer:PCL?
```

f) P/t Access Burst

The results displayed in the measurement menu *Power*, application *P/t Access Burst*, can be divided into three groups:

- Settings
- Scalar measurement results (single values)
- Arrays (the measurement curve plotted as a function of time)

The measurement results are indicated in two parameter lines, the test diagram and an info box:

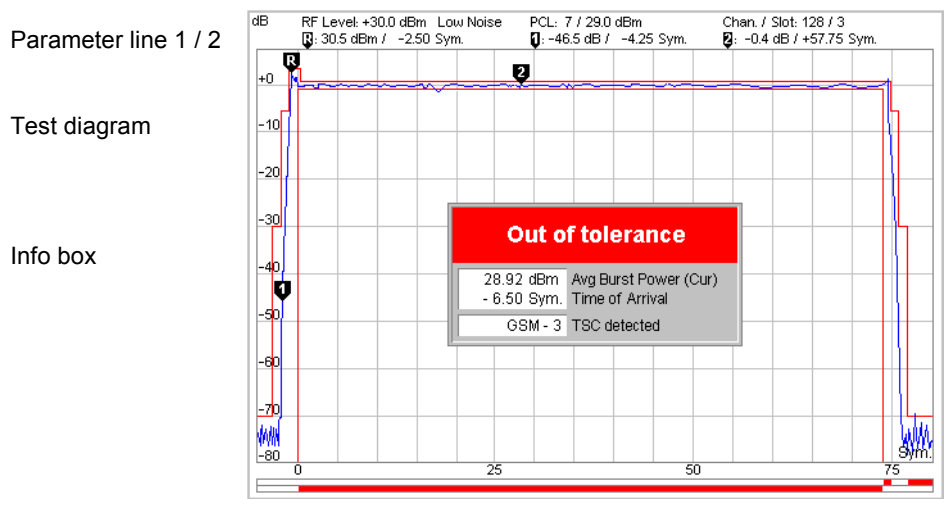


Fig. 4-51 Display of measurement results (P/t Access Burst menu)

Settings/ scalar results Scalar measurement results and settings are indicated in the two parameter lines above the test diagram and in the info box, a popup window in the middle of the graphical screen *Power*.


1st parameter line The first parameter line contains the following settings:
RF Level Maximum input level as set in *Input Level – Max. Level* (p. 4.191)
Attenuation Setting for the attenuation of the input level (*Normal, Low Noise, Low Distortion*)
PCL Power control level and corresponding output power of mobile
Chan./Slot RF channel and measured timeslot number; see *Meas. Slot* softkey on p. 4.192

2nd parameter line

The second parameter line contains the following marker values:

- R** Level and time of reference marker
- 1** Level and time of delta marker 1 (setting *absolute*) and/or difference from reference marker (setting *relative*)
- 2** Level and time of delta marker 2 (setting *absolute*) and/or difference from reference marker (setting *relative*)

Info box

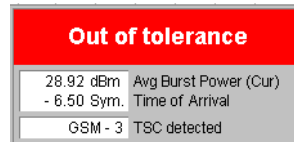

The info box indicates the results for the scalar measured values:

Avg. Burst Power Average burst power, depending on the display mode set (see upper right corner of the diagram).

Time of Arrival Time offset (in symbol periods) between the expected and the measured timing of the current burst from the mobile. Like in a real GSM network, the timing advance of the mobile is assumed to be unknown and the expected timing is in line with the timing of the BS signal. See also definition of the *Timing Advance Error* in section [Measurement Results](#) on page 4.119.

TSC detected Training sequence of the measured RF signal.

Remote control

Settings are read out using the query corresponding to the setting command (setting command with appended question mark).

For scalar measurement results:

```
READ[:SCALar]:POWer:ABURst[:GMSK]?
CALCulate:POWer:ABURst[:GMSK]:LIMit:MATChing?
FETCh[:SCALar]:POWer:ABURst[:GMSK]?
SAMPle[:SCALar]:POWer:ABURst[:GMSK]?
```

Measurement curves (arrays)

The measurement result is displayed as a continuous measurement curve in the test diagram together with the limit lines, markers, and the D-line, if defined. The curve is derived from 428 equidistant measurement points with a 1/4 spacing covering a time range between -10 symbols and 96 3/4 symbols.

The measurement curve in the *Power* measurement menu shows the measured burst power (in dB) as a function of time (in symbol periods). The displayed result depends on the test settings. The display mode for the measurement curve (*Minimum, Maximum, Average, Current*) is indicated in the upper right corner of the diagram.

The scale of both axes can be changed via the *Display Area* hotkey.

Remote control

```
READ:ARRay:POWer:ABURst[:GMSK]...?
READ:ARRay:POWer:ABURst[:GMSK]:LIMit:MATChing:...?
FETCh:ARRay:POWer:ABURst[:GMSK]...?
SAMPle:ARRay:POWer:ABURst[:GMSK]...?
```


Measurement Configurations (Power Configuration)

The popup menu *Power Configuration* contains three tabs to determine the parameters controlling the power measurement including the tolerance limits.

The popup menu *Power Configuration* is activated by pressing the measurement control softkey at the top right in the graphical measurement menu *Power* twice. It is possible to change between the tabs by pressing the associated hotkeys.

Measurement Control (Power Configuration – Control)

The *Control* tab controls the power measurement by determining

- The *Repetition* mode
- The *Stop Condition* for the measurement (for burst power vs. time measurements only)
- The type of measurement curve displayed (*Display Mode*, for burst power vs. time measurements only)
- The number of bursts/evaluation periods forming a statistics cycle (for burst power vs. time measurements only)
- The measurement *Filter* for *P/t Normal GMSK*, *P/t Normal 8PSK* and *P/t Multislot* measurements
- The averaging prescription to obtain the reference power (*Ref. Power Mode*, for 8PSK measurements only)
- The *Timing Offset*, the expected modulation (*Modulation View*) and the number of slots measured (*Slot Count*) in the *P/t Multislot* application
- The number of timeslots measured (*Slot Count*) in the *P/Slot Table* application
- The number of RF channels measured and their GSM channel numbers (*Channel Count*, *Meas. Channels*, for *P/PCL* measurements only)

Besides, it influences the graphical diagrams by adding or removing the *Info Box* or the *Grid*.

All settings can be defined separately for the individual applications *P/t Normal GMSK*, *P/t Normal 8PSK*, *P/t Multislot*, *P/Frame*, *P/Slot Graph*, *P/Slot Table*, and *P/PCL*. They are described in the section *GSM400/850/900/1800/1900-MS Non Signalling* on page 4.28 ff. The setting of the *P/PCL* channels is analogous to the setting via the *Channel* softkey; see section *P/PCL* on page 4.107.

Note: *There is no mode where the mobile transmits access bursts in consecutive TDMA frames. As a consequence, in the P/t Access GMSK application, only one access burst can be measured (single shot mode) when the mobile attempts a location update (activate the application before performing a location update). See also explanations at the beginning of section Power Measurements on page 4.101.*

Limit Lines (Power Configuration – Limit Lines)

The *Limit Lines* tab defines the limit lines for the burst analysis (applications *P/t Normal GMSK* and *P/t Access Burst*). Limit lines are a graphical tool for defining and monitoring tolerance values. The tab provides:

- An overview of the default limit lines and areas (*Area Info*)
- Definition of the limit lines for the normal bursts section by section (*Upper Limit Line/Lower Limit Line*)

The functions of this menu are described in the section *GSM400/850/900/1800/1900-MS Non Signalling* on page 4.32 ff. In contrast to the *Non Signalling* mode, the *dynamic limit line correction* depends on the actual PCL of the mobile phone. No auxiliary parameter like the fictitious *Template PCL* is defined.

The limit lines for access bursts are defined in analogy to the limit lines for normal bursts. In the remote control commands, the keyword [:NORMal] is to be replaced by :ABURst.

Limit Values for Average Burst Power (Power Configuration – Limits)

The *Limits* tab defines tolerance limits for the average burst power depending on the power control level of the mobile phone (*PCL*). The limits apply to all applications of the *Power* menu providing a limit check (not to *P/Frame*, *P/Slot Graph* and *P/Slot Table*).

GSM mobile phones are divided into different power classes according to their maximum output power:

Table 4-7 GSM Power classes

Power class	Nominal maximum output power in dBm		
	GSM400 GSM850 GSM900	GSM1800	GSM1900
1	–	30	30
2	39	24	24
3	37	36	33
4	33		
5	29		

Besides, a dimensionless scale of power control levels (*PCL*) is determined for dynamic control of the mobile power:

Table 4-8 GSM Power control levels (PCL)

Power control level, PCL	Nominal output power in dBm		
	GSM400/ GSM850/ GSM900	GSM1800	GSM1900
0	39	30	30
1	39	28	28
2	39	26	26
3	37	24	24
4	35	22	22
5	33	20	20
6	31	18	18
7	29	16	16
8	27	14	14
9	25	12	12
10	23	10	10
11	21	8	8
12	19	6	6
13	17	4	4
14	15	2	2
15	13	0	0
16	11	0	0
17	9	0	0
18	7	0	0
19 - 28	5	0	0
29	5	36	36
30	5	34	33
31	5	32	32
	PCL 16 to 31 for phase 2 only	PCL 11 to 15, 29 to 31 for phase 2 only	PCL 11 to 15, 29 to 31 for phase 2 only

Besides, tolerance values are specified for all output powers under various conditions. Power control permits to force the mobile power below the maximum value corresponding to its power class.

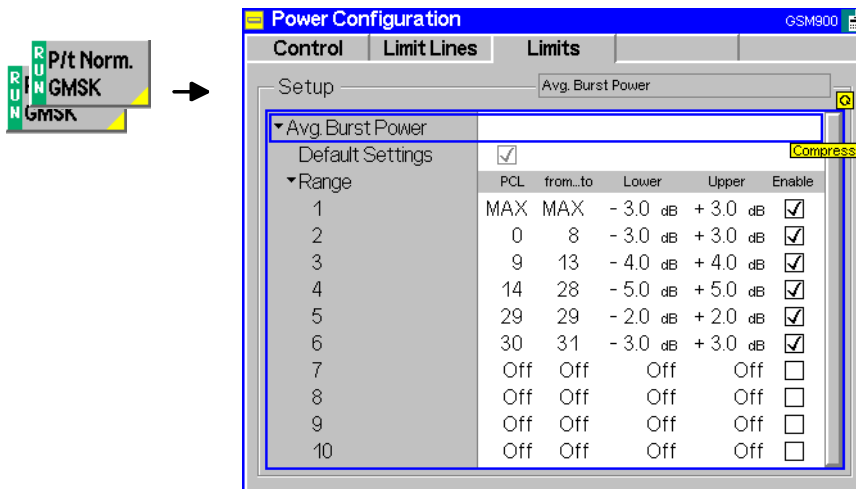


Fig. 4-52 Power Configuration – Limits

Default Settings The *Default Settings* switch overwrites all settings of the *Limits* tab with default values.

Average Burst Power The table *Average Burst Power* defines a tolerance band for the average burst power. Matching of the tolerances is checked for each burst measured.

The limit values are defined relative to the nominal output power corresponding to the mobile's power control level (see [Table 4-8](#)). An upper and lower limit can be defined for up to 10 arbitrary, continuous ranges of PCLs. In contrast to the modulation measurement, these power limits may also be asymmetrical (i.e. not of the same magnitude). The table contains the following columns:

- Range* Current range number
- PCL:from* Initial PCL in the range 0 to 31, MAX
- ... to* Final PCL in the range (greater or equal to the initial PCL)
- Lower* Lower level limit relative to nominal output power
- Upper* Upper level limit relative to nominal output power
- Enable* Enable (box checked) or disable the limit check in the current range

If the initial PCL coincides with the final PCL, the range consists of one power control level only. Unused ranges are marked by the entries *Off*. The entry *MAX* refers to the maximum PCL of the mobile phone according to its power class.

Remote control

```

CONFigure:Power[:NORMAl][:GMSK]:LIMit:ABPower<nr>[:ENABle] ON
| OFF
CONFigure:Power[:NORMAl][:GMSK]:LIMit:ABPower<nr>
<StartPCL>,<StopPCL>,<LowerLimit>,<UpperLimit>
    
```

Modulation Measurements

The menu group *Modulation* contains the functions for measurement of the modulation parameters of the RF signal transmitted by the mobile phone. The popup menu *Modulation Configuration* is used for configuration of the measurements; the measurement results are displayed in the graphical measurement menu *Modulation*.

Apart from few exceptions, the menu group *Modulation* does not differ from its corresponding menu group in the measurement mode *GSM400/850/900/1800/1900-MS Non Signalling* (see p. 4.38 ff.):

1. The hotkey *Meas. Slot* determines the timeslot that is measured in all *Multislot* configurations. In the graphical display, this measured timeslot is marked by *Meas. Slot*. *Meas. Slot* is a general parameter that is valid for all measurement groups and also provided in the *Analyzer* tab of the *Connection Control* menu. For more information see p. 4.192.
2. In addition to the maximum input level, the attenuation and the RF channel, the first parameter line also contains the power control level (PCL) of the mobile. The PCL can be set via the *PCL/Channel* softkey and can be used to define the input level (*Input Level* softkey).
3. The trigger sources *Signalling*, *Free Run*, *RF Power*, and *IF Power* are available. This means that the measurement is triggered by the signal from the CMU's signalling unit or the mobile phone; triggering by an additional external signal (parameter *External*) is not possible.

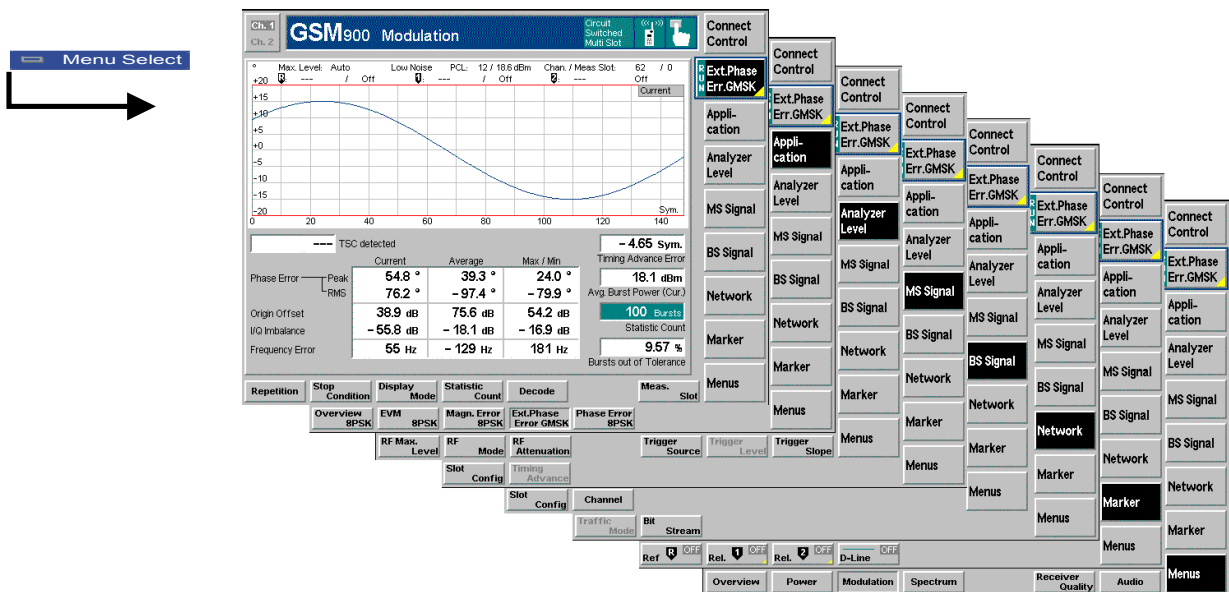


Fig. 4-53 Measurement menu Modulation

Test Settings

The selections and test settings provided by the *Ext. Phase Err. GMSK*, *Analyzer Level*, and *Marker/Display* softkeys are identical with those in the *Non Signalling* mode (see section *Test Settings* on page 4.39 ff). The *MS Signal*, *BS Signal* and *Network* softkeys and the *Meas. Slot* hotkey are equal to the softkeys of the same name in the *Power* menu (see page 4.102 ff).

Measurement Results

The values shown in the measurement menu *Modulation* can be divided into three groups:

- Setting values
- Scalar measurement results (single values)
- Arrays (the measurement curve plotted as a function of time)

The values are indicated in two parameter lines, the test diagram and a tabular overview below:

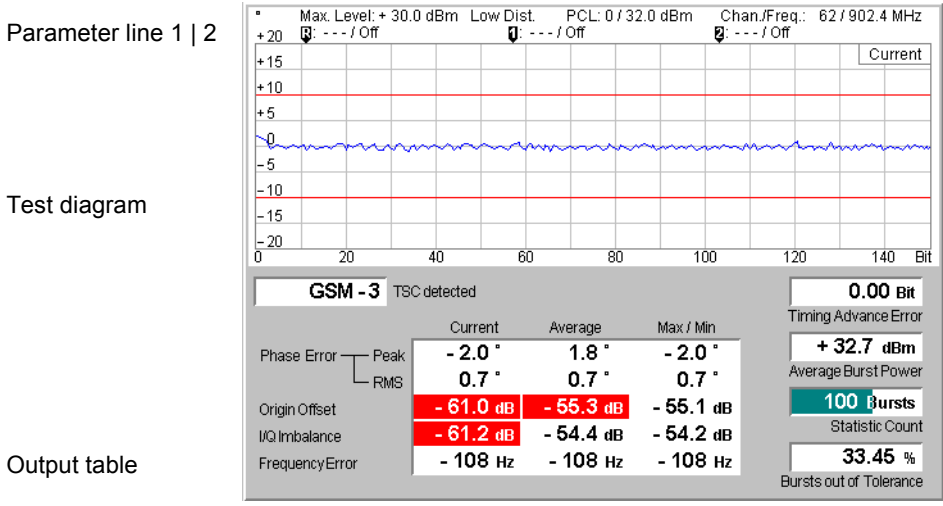


Fig. 4-54 Display of results (modulation menu)

In contrast to the *Non Signalling* mode (see p. 4.41 ff.) the first parameter line contains also the PCL of the mobile station, and the *Timing Advance Error* is indicated. Besides the representation and interpretation of the results are identical.

Timing Advance Error The *Timing Advance Error* output field, which is displayed in the right-hand output field of the *Modulation* measurement menu, indicates the time offset (in symbol periods) between the expected and the measured timing of the current burst. The expected timing results from the timing of the BS signal and the (known) timing advance of the mobile station.

The *Timing Advance Error* can be determined with trigger mode *Signalling* only; see *MS Signal* tab, section *Table-oriented Version* on p. 4.167 f.

Measurement Configurations (Modulation Configuration)

The popup menu *Modulation Configuration* contains two tabs which define the parameters of the phase and frequency error measurement including the error tolerances.

The popup menu *Modulation Configuration* is activated by pressing the softkey *Phase/Err. GMSK* in the top right of the graphical measurement menu *Modulation* twice. By pressing the associated hotkeys, it is possible to change between the tabs.

The functions of the *Modulation Configuration* menus are described in section *GSM400/850/900/1800/1900-MS Non Signalling*, see p. 4.50 ff.

Spectrum Measurements

The menu group *Spectrum* contains the functions for measurement of the off-carrier power, which is due to the modulation and the bursty nature of the RF signal. The popup menu *Spectrum Configuration* is used for configuration of the measurements; the measurement results are displayed in the graphical measurement menus *Spectrum*.

Apart from few exceptions, the menu group *Spectrum* does not differ from its corresponding menu group in the measurement mode *GSM400/850/900/1800/1900-MS Non Signalling* (see p. 4.38 ff.):

1. The hotkey *Meas. Slot* determines the timeslot that is measured in all *Multislot* configurations. This timeslot is also used to measure the carrier output power and derive the tolerance template if a spectrum due to *Switching* measurement is performed in multislot mode. The *Meas. Slot* is equal to the *Main Timeslot* by default but can be changed, e.g. in order to select the highest MS output power as a reference for the tolerance template.

In the graphical display, this measured timeslot is marked by *Meas. Slot*. *Meas. Slot* is a general parameter that is valid for all measurement groups and also provided in the *Analyzer* tab of the *Connection Control* menu. For more information see p. 4.192.

2. In addition to the maximum input level, the attenuation, and the RF channel, the first parameter line also indicates the timeslot number of the base station signal. The PCL can be set via the *PCL/Channel* softkey and can be used to define the input level (*Input Level* softkey).
3. The trigger sources *Signalling*, *RF Power*, and *IF Power* are available. This means that the measurement is triggered by the signal from the CMU's signalling unit or the mobile phone; triggering by an additional external signal (parameter *External*) is not possible. In *Free Run* trigger mode (see section *Trigger (Connection Control – Trigger)* on p. 4.188 ff.), the CMU does not detect the burst edges of the measured RF signal. This mode is unsuitable for *Switching* measurements but can be used for *Modulation* measurements on continuous signals.

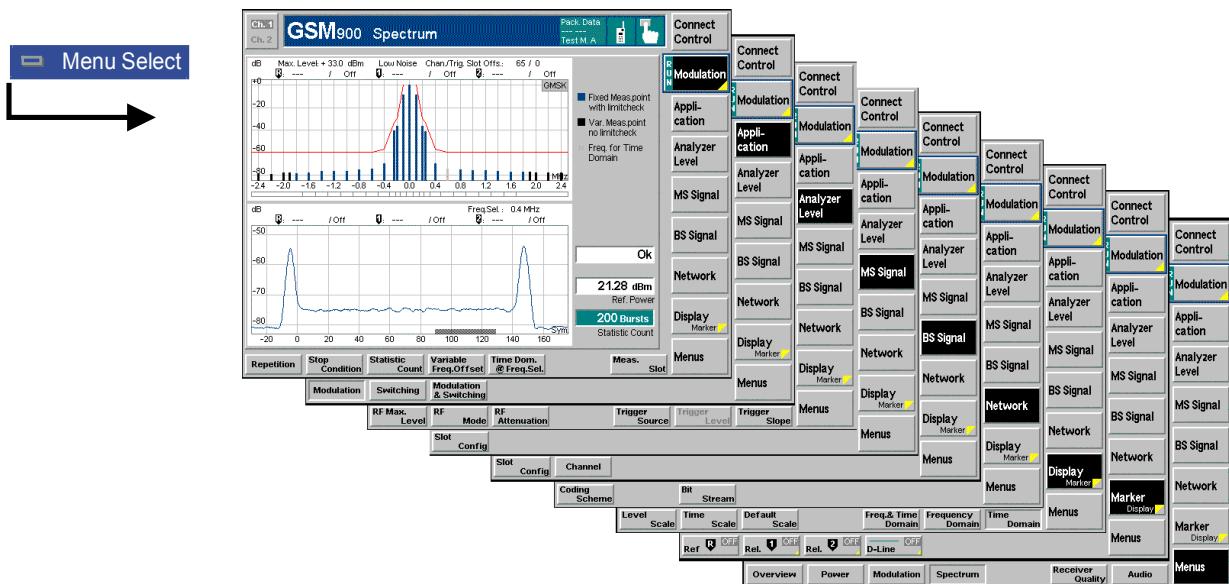


Fig. 4-55 Measurement menu Spectrum (application Modulation)

Test Settings

The selections and test settings provided by the *Modulation*, *Analyzer Level*, and *Marker/Display* softkeys are identical with those in the *Non Signalling* mode (see section *Test Settings* on page 4.39 ff.). The *MS Signal*, *BS Signal* and *Network* softkeys and the *Meas. Slot* hotkey are equal to the softkeys of the same name in the *Power* menu (see page 4.102 ff.).

Measurement Results

The *Spectrum* measurement menu and the results depend on the type of spectrum (application *Modulation*, *Switching*, or *Modulation & Switching*) selected.

In contrast to the *Non Signalling* mode (see p. 4.41 ff.) the first parameter line also contains the PCL of the mobile. Besides, the interpretation of the results is identical.

Measurement Configurations (Spectrum Configuration)

The popup menu *Spectrum Configuration* contains three tabs which define the parameters of the spectrum measurement including the error tolerances.

The popup menu *Spectrum Configuration* is activated by pressing the measurement control softkey in the top right of the graphical measurement menu *Spectrum* twice (this softkey reads *Modulation*, *Switching* or *Modulation & Switching*, depending on the selected application). By pressing the associated hotkeys, it is possible to change between the tabs.

The functions of the *Spectrum Configuration* menu are described in section *GSM400/850/900/1800/1900-MS Non Signalling*, see p. 4.50 ff.

Receiver Quality Measurements

The menu group *Receiver Quality* tests the transmission performance on the complete signal path from the CMU to the device under test (mobile station) and back. To this end the mobile is set to test loop operation where it returns the received data back to the tester. The measurement is especially suitable to assess the sensitivity of the mobile station receiver at low RF power levels.

The popup menu *Receiver Quality Configuration* is used for configuration of the measurements; the measurement results are directly indicated in the *Receiver Quality* menu.

The measurements in the menu group *Receiver Quality* assume that a call has been set up (signalling state *Call Established*). This is why they are not available in the mode *GSM400/850/900/1800/1900-MS Non Signalling*.

Principle of the measurement

The *Receiver Quality* measurement is based on the comparison of the output signal sent by the CMU with the signal received (and possibly decoded) by the device under test.

To this end, the mobile station must either detect bit errors by itself and return the result or return the received signal to the CMU in loopback mode. Error detection by the mobile phone is used in the measurement of the Block Error Ratio (BLER); the loopback mode is used for all other receiver quality tests.

Due to the higher signal level, the transmission errors produced on the way back (from the mobile station to the CMU) can usually be neglected. However, frames destroyed on the way back are detected in a cyclic redundancy check (CRC) and counted. They are not taken into account in the calculation of transmission errors.

In most cases, a test SIM card is required for receiver quality measurements. The quality of the mobile station transmitter can be tested separately in the *Modulation* measurement.

Bit classes

In the GSM system, the speech coder combines the speech information into data blocks with a length of 260 bits (full rate version 1, for a detailed overview see tables in section [Frame Structure for Speech and Data Channels](#) on p. 4.127 ff.), the so-called frames. Within one speech frame, the bits are divided into bit classes:

- The 78 *class II bits* have no error protection which is why they quickly produce transmission errors.
- The 132 *class Ib bits* are partly protected against errors during channel coding (by added guard bits).

The 50 most important *class Ia bits* are well protected. The mobile phone recognizes erroneous *class Ia bits* and clears the complete frame if no correction is possible

Definition of measured quantities

The Bit Error Rate (*BER*) is the ratio of erroneous bits to the total number of transferred bits in percent (also referred to as samples in the operating mode *BER*). The CMU outputs the bit error rate according to bit classes:

$$\text{BER} = \text{Erroneous bits} / \text{total number of bits} * 100\%$$

$$\text{BER II} = \text{Erroneous class II bits} / \text{total number of class II bits} * 100\%$$

$$\text{BER Ib} = \text{Erroneous class Ib bits} / \text{total number of class Ib bits} * 100\%$$

The Frame Erasure Rate (*FER*) is the ratio of frames recognized to be erroneous and erased by the mobile to the total number of transferred frames in percent:

$$\text{FER} = \text{Erroneous frames} / \text{total number of frames} * 100\%$$

The Residual Bit Error Rate (*RBER*) characterizes the quality of transmission of the valid frames (not erased, therefore residual). It corresponds to the ratio of the erroneous bits to the total number of transferred bits in percent, the numerator and denominator referring only to the **valid frame** (*residual frames, RF*):

$$\text{RBER II} = \text{Erroneous class II bits (RF)} / \text{total number of class II bits (RF)} * 100\%$$

$$\text{RBER Ib} = \text{Erroneous class Ib bits (RF)} / \text{total number of class Ib bits (RF)} * 100\%$$

The Block Error Ratio (BLER) is the ratio of blocks that the MS receives in error to the total number of received blocks, where a block is defined as received in error if the error detection functions in the receiver indicate an error as a result of the Block Check Sequence (BCS, see GSM 11.10):

$$\text{BLER} = \text{Blocks received in error} / \text{total number of blocks} * 100\%$$

The Data Block Error Rate (DBLER) is the ratio of data blocks that contain bit errors in their data field to the total number of transferred blocks in percent:

$$\text{DBLER} = \text{Blocks with erroneous data fields} / \text{total number of blocks} * 100\%$$

The USF Block Error Rate (USF BLER) is the percentage of Uplink State Flags (USFs) in the (E)GPRS packet data blocks which are assigned to the MS but received in error so that the MS fails to start transmission:

$$\text{USF BLER} = \text{Assigned USFs received in error} / \text{total number of blocks} * 100\%$$

The False USF Detection is the percentage of Uplink State Flags (USFs) in the (E)GPRS packet data blocks which are not assigned to the MS but received in error so that the MS nevertheless starts transmission:

$$\begin{aligned} \text{False USF Detection} \\ = \text{Unassigned USFs received in error} / \text{total number of blocks} * 100\% \end{aligned}$$

Statistical Testing

Bit error rate tests are based on the assumption of statistical independence of the single bit error events: The probability of a bit error is equal for each received bit. The exact bit error rate is given by the limit of the ratio <bit errors>/<no. of received bits>, where the number of received bits tends to infinity. As test times are limited, any real bit error rate test necessarily provides an approximation to the exact bit error rate.

The CMU is not only capable of measuring (approximate) bit error rates for a fixed number of received bits but can also use the preliminary results to predict a confidence interval for the exact bit error rate. Confidence BER tests can reduce test times considerably. For more information and application examples see section [Statistical BER Tests](#) on p. 4.129 ff.

BLER and BER/DBLER mode

The BLER and the BER/DBLER measurements assess the receiver quality for packet data traffic channels (PDTCHs) both in circuit switched or packet data mode. For a detailed explanation of these measurements see section [BER Tests of PDTCHs](#) on p. 4.124 f.

Note: *For circuit switched channels, the reduced signalling scheme ([Signalling Channel](#) = NONE, see p. 4.183) and one of the packet data coding schemes CS1 to CS4 or MCS1 to MCS9 must be used (see [Traffic Mode](#) softkey 4.177).*

Packet switched data channels (GPRS and EGPRS channels) can be analyzed with option CMU-K42 and CMU-K43.

Burst by Burst mode (fast BER)

In the *Burst by Burst* mode, the CMU transmits only bits without error protection (class II bits); no guard bits are used. The internal test loop of the MS is closed before any channel decoding/encoding (see 3GPP TS 44.014 and [Fig. 4-56 below](#)), so the bit error rate is evaluated on a burst by burst basis. This increases the number of bits measured per unit of time and thus considerably enhances the measurement speed.

Note: *The Burst by Burst bit error rate test is specified for GSM phase II and phase II+ mobiles. Not all mobiles support this test mode. If a mobile does not support the Burst by Burst bit error rate test, the measurement fails (like for very low signal levels) and an error message is generated:*

Too many errors. Measurement halted !

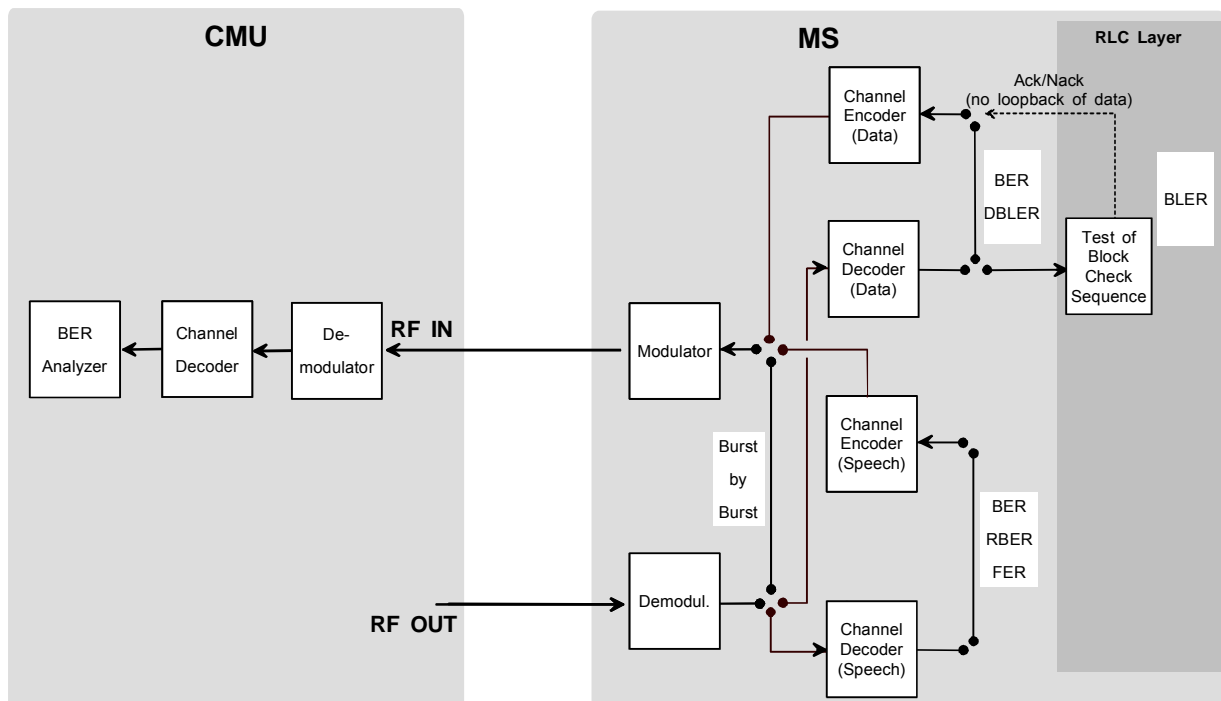


Fig. 4-56 Signal paths for BER measurements

Measured Timeslot

In contrast to TX tests, no distinction is made between the *Main Timeslot* that is used for signalling and the *Meas. Timeslot*. Receiver Quality measurements are performed on the *Main Timeslot* selected via the *MS Signal – Slot Config.* hotkey. In the BLER measurement, the MS evaluates the Block Error Ratio on all receive timeslots. The result is calculated from the signalling messages returned in the UL *Main Timeslot*.

BER Tests of PDTCHs: BLER and DBLER

According to the conformance specification GSM 11.10 GPRS receiver tests consist of assessing the ratio of blocks received in error to the total number of received blocks (Block Error Ratio, BLER). The CMU provides the standard BLER for GPRS channels. As an alternative, the Data Block Error Rate (DBLER) can be measured for a wide range of packet switched data traffic channels (PDTCHs) and test setups. BLER and DBLER tests are performed on the traffic channel with a connection between the CMU and the mobile station, i.e. the CMU must be in the *Call Established* or in the *TBF Established* state.

BLER measurement

To evaluate the standard BLER the CMU transmits RLC blocks in different timeslots. The DUT receives the blocks and checks the Block Check Sequence (BCS). If the BCS indicates an error, sends a Packet Not Acknowledge in the Packet Downlink Ack/Nack message (see [Fig. 4-56 above](#)).

The CMU is capable of simultaneously transmitting RLC blocks in up to 4 DL timeslots (see [Slot Configuration Editor](#) on p. 4.165) and evaluating the BLER in up to 4 receive slots of the DUT. A Universal Signalling Unit R&S CMU-B21 V14 is required to generate EGPRS channels in 4 DL timeslots (with R&S CMU-B21, only 2 DL timeslots are available).

Optimizing the BLER measurement

The number of timeslots that can be evaluated simultaneously is limited by the multislot capabilities of the DUT but also depends on some CMU settings. To obtain maximum flexibility in the BLER measurement, check the following settings:

- To ensure that the CMU can send RLC blocks in several (up to 4) timeslots set the *B52 Mode* (see p. 4.181) to *Multislot Support*.
- To ensure that all 8 timeslots are available as traffic channels as soon as the TBF connection is established, select the *BCCH or TCH* mode (see *Mode* softkey on p. 4.170).
- Use the *Slot Configuration Editor* (see *Fig. 4-89* on p. 4.206) to enable the individual BS timeslots and define the signal levels.

DBLER measurement

The bit error rate test for PDTCHs can be modified in such a way that the MS loops back the received data packets on a block by block basis and the CMU measures the BER and the Data Block Error Rate (DBLER). The *Coding Scheme* of the PDTCHs (CS1 to CS4; modulation and coding schemes MCS1 to MCS9) can be selected in the *Network* tabs of the *Connection Control* menu.

The test setup is the same as for Receiver Quality tests on circuit switched speech or data channels: An overview of the different test settings for the DBLER measurement on circuit switched and packet switched channels is given in the table below.

Table 4-9 BLER and DBLER measurement settings

Main Service	Traffic Mode / Coding Scheme	CMU Signalling State	Signalling Channel / Service Selection	Receiver Quality Meas. Mode / Application	Results available
Circuit Switched (GSM)	CS1 to CS4 MCS1 to MCS9	Call Established	NONE (analogous to Reduced Signalling, setup via ext. test interface)	BER/DBLER (CMU setting)	BER USF BLER False USF Det. DBLER CRC Error
Packet Data (Option CMU-K42, GPRS)	CS1 to CS4	TBF Established	Reduced Signalling Mode A (setup via external test interface)	BER/DBLER (automatic selection by CMU)	USF BLER CRC Error
Packet Data (Option CMU-K42, GPRS)	CS1 to CS4	TBF Established	Reduced Signalling Mode B (setup via external test interface)	BER/DBLER (automatic selection by CMU)	BER USF BLER False USF Det. DBLER CRC Error
Packet Data (Option CMU-K42, GPRS)	CS1 to CS4	TBF Established	Test Mode B (full signalling via RF connection)	BER/DBLER (automatic selection by CMU)	BER USF BLER False USF Det. DBLER CRC Error
Packet Data (Option CMU-K43, EGPRS)	MCS1 to MCS9	TBF Established	Reduced Signalling EGPRS symm./asymm. (setup via external test interface)	BER/DBLER (automatic selection by CMU)	BER
Packet Data (Option CMU-K43, EGPRS)	MCS1 to MCS9	TBF Established	Test Mode B (full signalling via RF connection)	BER/DBLER (automatic selection by CMU)	BER USF BLER False USF Det. DBLER CRC Error

Main Service	Traffic Mode / Coding Scheme	CMU Signalling State	Signalling Channel / Service Selection	Receiver Quality Meas. Mode / Application	Results available
Packet Data (Option CMU-K42, GPRS)	CS1 to CS4	TBF Established	BLER	BLER	BLER
Packet Data (Option CMU-K43, EGPRS)	MCS1 to MCS9	TBF Established	BLER	BLER	BLER ¹

Principle of the measurement

Like any other *Receiver Quality* measurement, the PDTCH BER test is based on the comparison of the output signal generated by the CMU with the signal received and decoded by the device under test (mobile station). To this end, the mobile station is set to return the received signal to the CMU in loopback mode. In the case of packet data channels, the MS loops back the packet data after demodulation and channel decoding (see BER/DBLER loop in [Fig. 4-56](#) on p. 4.124 ff.).

Frame structure

The CMU provides a GPRS or EGPRS signal with a 52-multiframe structure as shown in [Fig. 4-57 below](#). Each 52-multiframe contains 12 blocks of 4 consecutive frames (B0 to B12), 2 idle frames (X) and 2 frames used for the Packet Timing Advance Control Channel (X). All blocks in the signal are coded and modulated with the same coding and puncturing scheme.

The mobile station returns the data bits of the received blocks using the coding and puncturing scheme signalled via RF connection (GPRS Test Mode B) or set via an external test interface (reduced signalling). This means that the loopback is done on a block by block basis. The modulation and coding schemes MCS7, MCS8 and MCS9 carry 2 RLC/MAC frames which are coded separately.

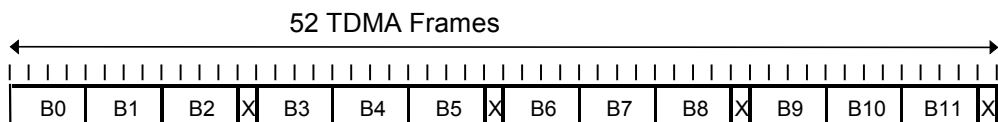


Fig. 4-57 52-multiframe for PDCH

Block structure

Each GPRS/EGPRS radio block is divided into the header information including the Uplink State Flag (USF) and the data bits. The CMU uses downlink header with fixed (circuit switched) or configurable (packet-data) USF and ignores the uplink header received from the MS. This means that only the data bits of a radio block contribute to the BER and DBLER calculation. However, in packet-data mode, where the USF can be explicitly set, the CMU is also capable of evaluating the relative number of blocks with a USF correctly or incorrectly received by the MS under test. These ratios are referred to as USF BLER and False USF Detection.

On the other hand, the MS returns the received data even if the block check sequence indicates that the block was not decoded correctly. In this case the MS calculates a new block check sequence for the received data. The same timeslot is used for downlink and uplink, however, the uplink signal is delayed by 3 timeslot periods.

Difference between DBLER and BLER

This Data Block Error Rate is not exactly the BLER that is defined in the GSM recommendations, because the possibility of an error in the header is not taken into account. But if the probability for an error in the data field, which depends on the used coding scheme, is much higher than the probability for an error in the header, then the calculated Data Block Error Rate is a good approximation to the BLER.

¹ Depending on the hardware configuration, up to 2 or 4 DL timeslots can be measured simultaneously; see *BLER measurement* above.

The difference between the BLER defined in GSM 11.10 and the DBLER measured by the CMU varies from one coding scheme to another. For coding scheme CS4, where no additional effects due to channel coding occur, the difference is determined by the difference of the data field size compared to the complete RLC block size. For other coding schemes, there are additional effects originating from the different channel coding of the header and data fields and from differences in the bit error rate of header and data bits after the channel decoder. A comparison of the two coding schemes CS4 and CS1 is shown in [Fig. 4- below](#).

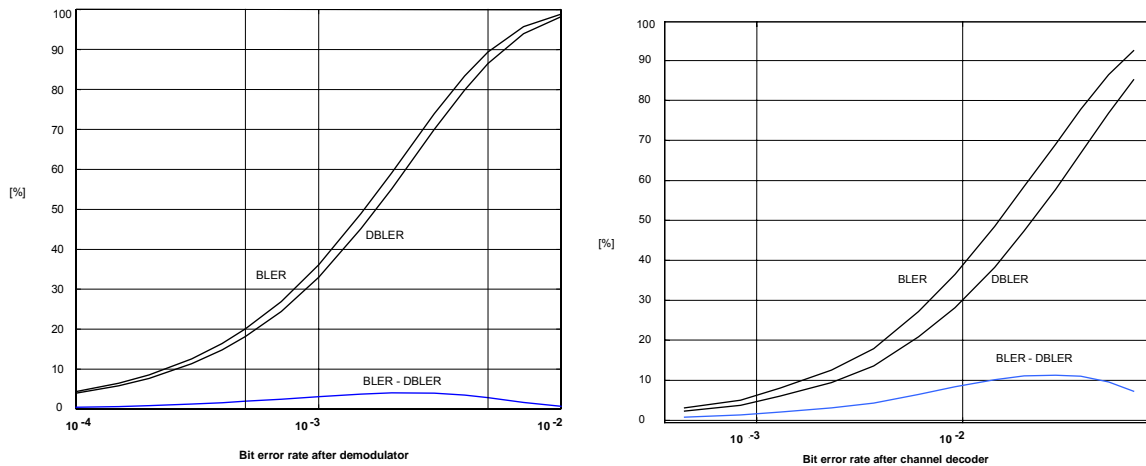


Fig. 4-58 Comparison between BLER and DBLER: CS4 (left diagram) and CS1

Frame Structure for Speech and Data Channels

The data stream used for bit error rate measurements is divided into units containing an equal number of bits, the so-called frames (see parameters *Frames*, *Average* and *RLC Block Count* in section [Measurement Control \(Receiver Quality Configuration – Control\)](#) on p. 4.145 ff.). The bit content of the frames depends on the service (see [Main Service](#) softkey on p. 4.96 and [Service Selection](#) softkey on p. 4.199), the frame type (burst, speech, data, RLC data blocks) and the channel coding (see [Traffic Mode](#) softkey on p. 4.177). The following tables are to shed light on the different frame structures and on the statistics of *Receiver Quality* tests.

Table 4-10 Frame structure for Main Service: Circuit Switched

Frame type	Channel coder	Bits per frame
Bursts (Burst by Burst mode)	All GMSK Full Rate channel coders (incl. AMR)	114
	All GMSK Half Rate channel coders (incl. AMR)	57 ²⁾
	All 8PSK Full Rate channel coders (MCS5 to MCS9 Test Mode)	346
Speech Frames	Full Rate Version 1	260 (50 class Ia + 132 class Ib + 78 class II)
	Full Rate Version 2	244 (50 class Ia + 124 class Ib + 70 class II)
	Half Rate Version 1	112 (22 class Ia + 73 class Ib + 17 class II)
Data Blocks	Full Rate Data 4800	120
	Full Rate Data 9600	240
	Full Rate Data 14400	290

²⁾ 114 bits per burst. As every second burst is cancelled the average bit content is 57 bit/burst.

Frame type	Channel coder	Bits per frame
	Half Rate Data 2400	72 ³⁾
	Half Rate Data 4800	120 ⁴⁾
	CS1 Test Mode	160
	CS2 Test Mode	240
	CS3 Test Mode	288
	CS4 Test Mode	400
	MCS1 Test Mode	176
	MCS2 Test Mode	224
	MCS3 Test Mode	296
	MCS4 Test Mode	352
	MCS5 Test Mode	448
	MCS6 Test Mode	592
	MCS7 Test Mode	448
	MCS8 Test Mode	544
	MCS9 Test Mode	592

Table 4-11 Frame structure for Main Service: Packet Data, Service Selection: Red. Sig.– EGPRS sym.

Frame type	Channel coder	Bits per frame (class II bits only)
RLC Data Blocks	MCS1 to MCS4	372
	MCS5 to MCS6	1248
	MCS7 to MCS9	1224

Table 4-12 Frame structure for Main Service: Packet Data, Service Selection: Red. Sig.– EGPRS asym.

Frame type	Channel coder	Bits per frame (class II bits only)
RLC Data Blocks	MCS5 to MCS6	1232
	MCS7 to MCS9	1208

Table 4-13 Frame structure for Main Service: Packet Data, any other Service Selection

Frame type	Channel coder	Bits per frame
RLC Data Blocks	CS1	160
	CS2	240
	CS3	288
	CS4	400
	MCS1	176
	MCS2	224
	MCS3	296

³ 144 bits per burst. As every second burst is cancelled the average bit content is 72 bit/burst

⁴ 240 bits per burst. As every second burst is cancelled the average bit content is 120 bit/burst

Frame type	Channel coder	Bits per frame
	MCS4	352
	MCS5	448
	MCS6	592
	MCS7	448
	MCS8	544
	MCS9	592

Statistical BER Tests

In a normal bit error rate test, a fixed number of bits is transmitted, leading to a fixed test time for each BER result. The idea behind statistical testing is to apply probability theory and predict a range for the BER at an early stage of the measurement. The prediction can be used to stop the measurement if the probability of the DUT to pass or fail the receiver quality test is large enough (early pass or early fail decision). Statistical testing can reduce test times considerably, especially if the exact BER of a receiver is very low or very high.

The general rules for statistical testing are described in the Terminal Conformance Specification 3GPP TS 34.121. The CMU parameters (*Confidence Settings*) are described on p. 4.146. The purpose of the present section is to explain the principle of the test and outline some typical applications.

Performing a confidence BER test

A confidence BER test generally involves the following steps:

1. Activate the test: In the *Receiver Quality* menu, select *Application – BER* and use the *Stop Condition* hotkey associated to the *BER* measurement control softkey to select the stop condition *Confidence Level*.
2. Set the test parameters: Press *BER* for a second time to open the *Receiver Quality Configuration* menu. In the *Control* tab, scroll to the *BER – Common Settings – Confidence Settings* section to select the parameters appropriate for your test (see remainder of this section). Close the configuration menu.
3. View results: Select the measurement control softkey *BER* again and press the *CONT/HALT* key to initiate a single-shot measurement. The result is indicated in an output field together with the *Specified Class II limit*.

Probability distribution

Confidence BER tests are based on the statistical independence of the bit error events: The probability of a bit error is equal for each received bit. The exact bit error rate is given by the limit of the ratio n_e/n_s , where n_e denotes the number of bit errors and n_s the number of received bits, and where the number of received bits tends to infinity. Any real bit error rate test necessarily provides an approximation to the exact bit error rate.


Given the statistical independence of the bit error events, the probability p for any number of bit errors n_e at a given exact BER and a given number of received bits n_s can be described by a binomial distribution or an appropriate approximation, such as the Chi Square distribution. Estimates of the exact BER are based on this distribution.

Confidence Levels

The distributions $p(n_e, n_s, \text{BER})$ provide a confidence interval $[\text{BER}_{\text{low}}, \text{BER}_{\text{high}}]$ for the exact BER at any n_e and n_s . The confidence interval has the following meaning:

- The probability for the exact BER to be larger than BER_{low} is larger than the lower confidence level.
- The probability for the exact BER to be smaller than BER_{high} is smaller than the upper confidence level.

In the figure below the lower confidence level is the sum of all probabilities $p(n_e, n_s, \text{BER}_{\text{low}})$ up to the measured number of bit errors. The upper confidence level is the sum of all probabilities $p(n_e, n_s, \text{BER}_{\text{high}})$ above the measured number of bit errors.

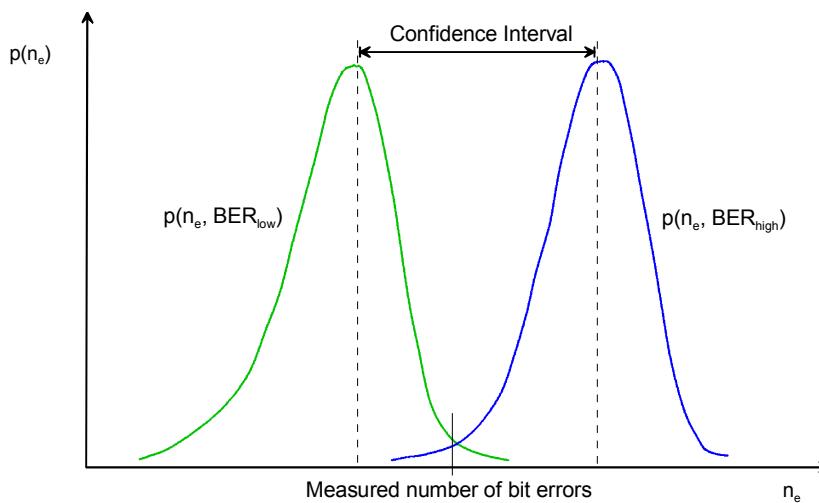

Example:

Assume that 20 bit errors were measured after 1000 received bits ($n_e = 20, n_s = 1000$, preliminary $\text{BER} = n_e/n_s = 2\%$). The probability of the exact BER to be smaller than 1.1% is 1% (lower confidence level: 99%). The probability of the exact BER to be larger than 3.3% is 1% (upper confidence level: 99%).

If the specified upper BER limit is 1%, then the measurement can be stopped and the receiver can be failed with a risk of less than 1% that the exact BER is below the specified limit.

Confidence Fail, Confidence Pass, Bad DUT Factor

In analogy to the calculation in the example above it is possible to calculate confidence intervals $[a(\text{BER}_{\text{limit}}), b(\text{BER}_{\text{limit}})]$ for the measured preliminary BER around the specified limit:

- At a given confidence level, any measured preliminary BER below $a(\text{BER}_{\text{limit}})$ means that the exact BER of the receiver is below $\text{BER}_{\text{limit}}$ so that the receiver should pass the test (early pass decision, test stopped).
- At a given confidence level, any measured preliminary BER above $b(\text{BER}_{\text{limit}})$ means that the exact BER of the receiver is above $\text{BER}_{\text{limit}}$ so that the receiver should fail the BER test (early fail decision, test stopped). $b(\text{BER}_{\text{limit}})$ is termed the early fail limit; the confidence level for $b(\text{BER}_{\text{limit}})$ can be set as *Confidence fail value*.
- If a preliminary BER inside the confidence interval $[a(\text{BER}_{\text{limit}}), b(\text{BER}_{\text{limit}})]$ is measured, no decision is possible so that the measurement must be continued.

The calculation can be performed for arbitrary $\text{BER}_{\text{limit}}$ values and confidence levels. Increasing $\text{BER}_{\text{limit}}$ by multiplication with a factor $M > 1$ also shifts the confidence interval and increases the number of early pass decisions, causing a further reduction of test times. In practice, a factor $M = 1.5$ has been proved to provide a reasonable compromise between test time and accuracy requirements.

- At a given confidence level, any measured preliminary BER below the lower interval border $a(M \cdot \text{BER}_{\text{limit}})$ means that the exact BER of the receiver is below $M \cdot \text{BER}_{\text{limit}}$ so that the receiver should pass the test (early pass decision, test stopped). $a(M \cdot \text{BER}_{\text{limit}})$ is termed the early pass limit; the confidence level for $a(M \cdot \text{BER}_{\text{limit}})$ can be set as *Confidence pass* value. The factor M itself is fixed to the value 1.5 and termed the *Bad DUT Factor*.

**Evolution in time,
Target Test Time**

The probability distribution gets relatively narrower as the measurement goes on and the numbers n_e and n_s increase. For infinitely long measurement times, the early fail limit tends towards the specified limit, the early pass limit tends towards the specified limit times M. This translates into the behavior of the early pass and early fail limits shown in the figure below:

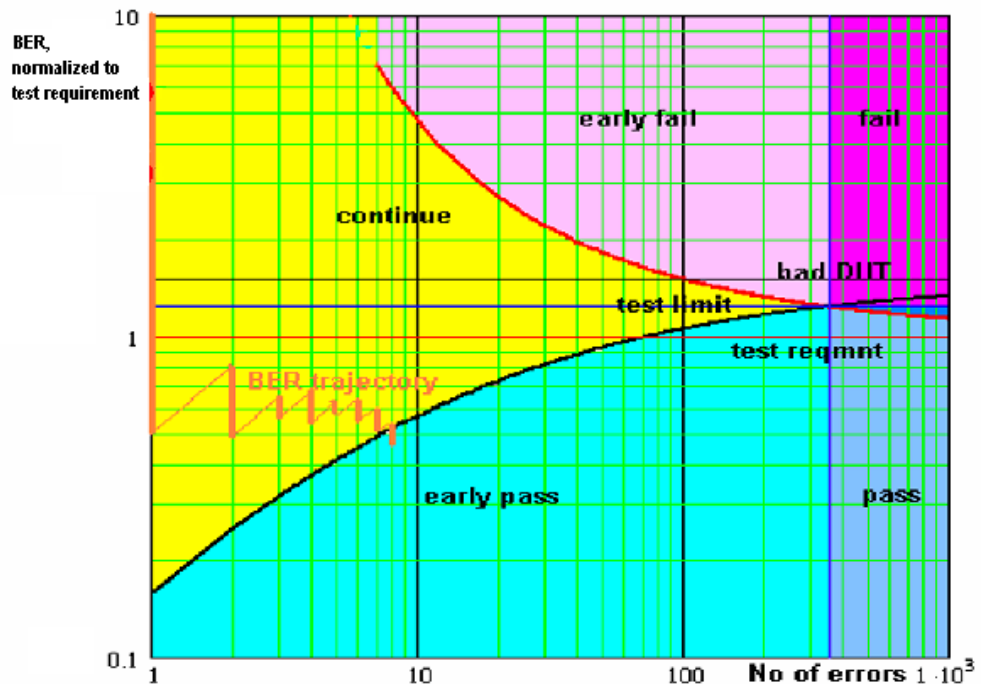


Fig. 4-59 Single-limit confidence BER

For $M > 1$ the early pass and early fail limits cross at a definite number of errors. If no *Min. Test Time* is set as an additional condition (see below), the crossing corresponds to the maximum possible test time (target test time). After the target test time, the test has either failed or passed the DUT.

The figure also shows an example evolution of the normalized BER in time: At the beginning of the test, an artificial error is introduced to ensure that the BER trajectory starts above the early pass limit. The preliminary BER is recalculated each time that a new error occurs. At $n_e = 8$, the trajectory crosses the early pass limit and the test is stopped.

Asymmetric confidence levels

The default settings for the *Confidence Fail* and *Confidence Pass* levels are equal. The settings are inappropriate for test sequences involving a large number of independent BER tests where erroneous early fail decisions due to statistical variations are not acceptable.

The solution is to exclude most erroneous early fail decisions by increasing the *Confidence Fail* level to its maximum value (99.98 %), shifting the early fail limit line in upward direction. As only erroneous decisions are affected, this will only marginally increase the test time. The same is generally not true for an increase of the *Confidence Pass* limit, because the early pass limit is responsible for stopping

the majority of the tests.

Min. Test Time Some test conditions introduce fluctuations that disturb the statistical independence of the bit error events and must be averaged out. This is achieved by means of a minimum test time during which no early fail or early pass decisions are taken. The standard stipulates minimum test times for multipath fading, birth/death propagation, and moving propagation conditions.

Dual-Limit Test The single-limit BER test described above can be extended to restrict the BER to a band between two limits. For practical reasons, the lower band limit is calculated as $\langle \text{BER Limit} \rangle (1 - n \%)$, the upper band limit is calculated as $\langle \text{BER Limit} \rangle (1 + n \%)$. Factors of 10 %, 20 % and 30 % are provided; see *Result Window* parameter.

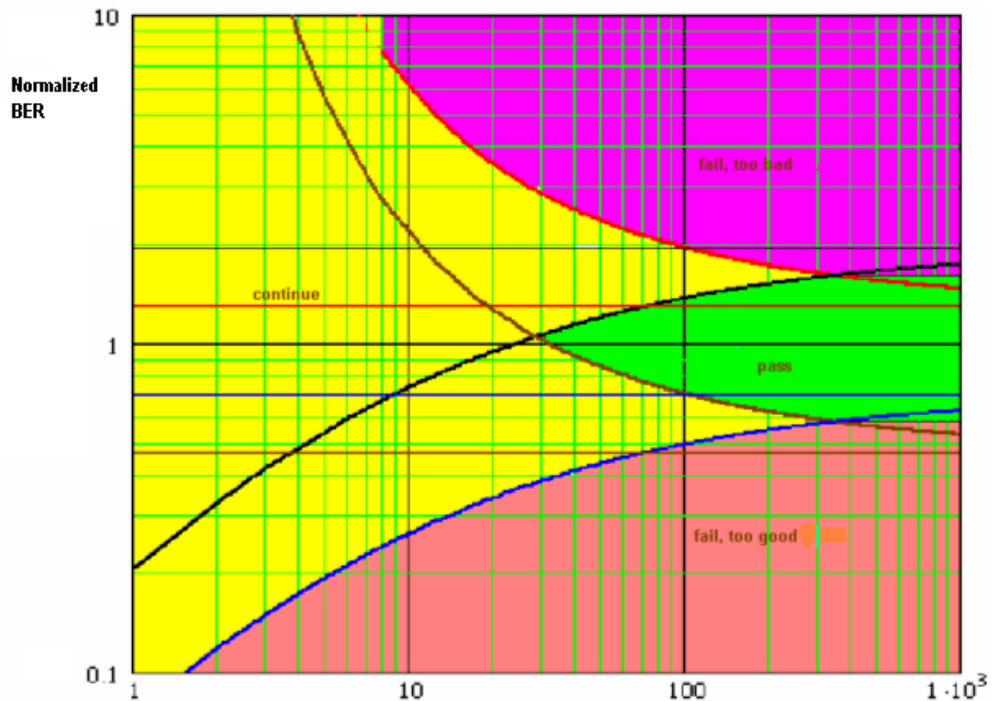


Fig. 4-60 Dual-limit confidence BER

In a dual-limit test, the DUT is failed if it is either too good or too bad. For more information refer to the test specification.

Measurement Menu (Receiver Quality)

The *Receiver Quality* menu shows the results and the most important parameters of the *Receiver Quality* measurement.

- The measurement control softkey *BER* (which changes to *BER Average*, *Neighbor Cell* or *BLER* if one of these applications is selected) controls the *Receiver Quality* measurement, indicates its status (*RUN*, *HLT*, *OFF*) and opens the configuration menu *Receiver Quality Configuration*. The hotkeys associated to the measurement control softkey define the scope of the measurement.
- The softkeys *Application*, *Analyzer Level*, *MS Signal*, *BS Signal*, *Network* and *Menus* on the right softkey bar are combined with various hotkeys. When a softkey is selected and an associated hotkey pressed, a popup window appears which indicates a setting or enables an entry.
- In the tables in the center of the menu, the test settings of the current *Receiver Quality* measurement and the results are displayed.

The measurement menu *Receiver Quality* is opened from the *Menu Select* menu (with the associated key at the front of the instrument) or from the menu group *GSM400/850/900/1800/1900-MS Signalling* using the hotkey *Receiver Quality*.

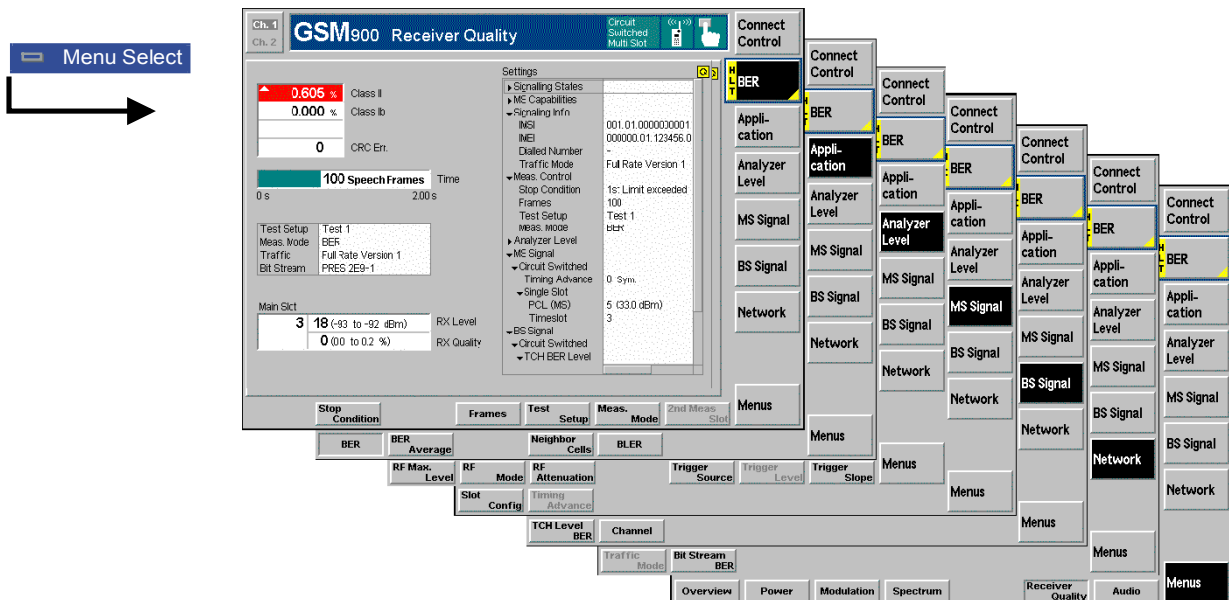


Fig. 4-61 Receiver Quality (BER)

Test Settings

The *Analyzer Level* and *Menus* test settings and most of the *MS Signal* and *BS Signal* settings are identical with those in the *Power* menu (see section *Test Settings* on page 4.102). The following softkey/hotkey combinations differ from the *Power* measurement:

BER

The *BER* softkey controls the receiver quality measurement in the BER application and indicates its status (*RUN* | *HLT* | *OFF*).

This status can be changed after softkey selection (pressing once) by means of the *ON/OFF* key or the *CONT/HALT* key. The status of the measurement is unaffected upon switchover to other menus controlling a *Receiver Quality* measurement, however, a running measurement is restarted.

Remote control
 INITiate:RXQuality:BER
 ABORt:RXQuality:BER
 STOP:RXQuality:BER
 CONTinue:RXQuality:BER

Measurement configuration

Pressing the measurement control softkey twice opens the popup menu *Receiver Quality Configuration* (see section *Measurement Configurations (Receiver Quality Configuration)* on page 4.145 ff.). Besides, a number of hotkeys defining the scope of the measurement are associated to the measurement control softkey. All settings are explained in detail in section *Measurement Control (Receiver Quality Configuration – Control)* on page 4.145 ff.

Application

The *Application* softkey selects the measurement application. The three alternative applications *BER*, *BER Average*, and *Neighbor Cells* are displayed in separate measurement menus. When an application is selected, the corresponding measurement menu is called up. The configuration settings for both applications, however, are listed in a common popup-menu (see section *Measurement Control (Receiver Quality Configuration – Control)* on page 4.145 ff.).

BER and *BER Average* (=Continuous) are treated as repetition modes in other measurement groups. The difference in the *Receiver Quality* measurement is that the basic evaluation period is a speech frame instead of a single burst.

BER

The *BER* hotkey activates the single shot *Receiver Quality* measurement. The measurement is stopped after one statistics cycle, i.e. after the number of evaluation periods (frames) set in the configuration menu *Control* (see section *Measurement Control (Receiver Quality Configuration – Control)* on page 4.145) or if a stop condition is met. A measurement that has been stopped is indicated by the status display *HLT* in the associated softkey.

BER should always be used if only a single measurement result is required under fixed conditions.

Remote control
 No explicit switchover command. All single shot measurements are identified by the 2nd/3rd level keywords ...RXQuality:BER...

BER Average

The *BER Average* hotkey activates the continuous *Receiver Quality* measurement. The measurement runs until it is stopped explicitly, or until the stop condition is met. A continuous average over the selected number of evaluation periods (frames) is calculated. An ongoing measurement is indicated by the status display *RUN* in the associated softkey.

Remote control
 No explicit switchover command. All continuous measurements are identified by the 2nd/3rd level keywords ...RXQuality:BAverage...

Neighbor Cells

The *Neighbor Cells* hotkey displays the neighbor cells reported by the mobile. The output contains up to 6 neighbor cells together with the received signal level of signals from these cells (RxLevel, see *Table 4-8* on page 4.141).

Remote control
 [SENSe:]RREPortS:NCELL?

BLER

The *BLER* hotkey activates the Block Error Ratio (BLER) measurement on packet data channels. The CMU transmits RLC blocks and can measure the BLER in all receive timeslots of the MS.

Remote control
 No explicit switchover command. All single shot measurements are identified by the 2nd/3rd level keywords ...RXQuality:BLER...

**BS
Signal**

The *BS Signal* softkey determines the level and the data transmitted on the CMU's traffic channel. The following settings are specific to the *Receiver Quality* measurement:

**TCH Level
BER**

The *TCH Level BER* hotkey sets the level of the CMU's traffic channel signal (for applications *BER* and *BER Average*). The settings remain valid while *BER* or *BER Average* is active, see section [Measurement Control \(Receiver Quality Configuration – Control\)](#) on page 4.145. They hold for both single slot and multislot mode of the MS under test.

The level in the used timeslot (*used TS*) and the unused timeslots (*unused TS*) can be defined separately. The unused TS level is expressed in units relative to the level in the used timeslot. Note that the receiver quality specifications defined in GSM 05.05 must be met when the two timeslots adjacent to the used timeslot are detecting GSM signals at 20 dB above the used timeslot level. This is why the default value for the unused TS level is higher than the default used TS level.

Remote control
 CONFigure:RXQuality:BER<nr>|BAverage:CONTRol[:CSwitched]
 [:TCH]:LEVel:UTIMeslot
 CONFigure:RXQuality:BER<nr>|BAverage:CONTRol[:CSwitched]
 [:TCH]:LEVel:UNTimeslot

**TCH Level
BLER**

The *TCH Level BLER* hotkey sets the level of the CMU's traffic channel signal (for application *BLER*) in all timeslots. The levels are defined relative to a reference level. The settings remain valid for the duration of the *BLER* measurement only, see section [Measurement Control \(Receiver Quality Configuration – Control\)](#) on page 4.145. They hold for both single slot and multislot mode of the MS under test.

Remote control
 CONFigure:RXQuality:BLER:CONTRol:PDATA[:TCH]:MSLot:RLEVel
 CONFigure:RXQuality:BLER:CONTRol:PDATA[:TCH]:MSLot:LEVel:INDi
 vidual

Network

The *Network* softkey defines network parameters that the CMU reports to the mobile station; see also section [Network Parameters \(Connection Control – Network\)](#) on page 4.176. The following settings are specific to the *Receiver Quality* measurement and not provided in the *Connection Control* menu:

**Bit Stream
BER**

The *Bit Stream BER* hotkey selects the data to be transmitted on the traffic channel. All pseudo random bit sequences (PRBS) provided in the *Network* tab are available (see section [Network Parameters \(Connection Control – Network\)](#) on p. 4.176 ff.); however, the *Bit Stream BER* is only valid while a *Receiver Quality* measurement is active.

Remote control
 CONFigure:RXQuality[:CSwitched]:BITStream
 CONFigure:RXQuality:PDATA:BITStream

Measurement Results

The measurement results depend on the application selected.

a) BER and BER Average

The test settings of the current *Receiver Quality* measurement and the results are displayed in the tables in the center of the menu.

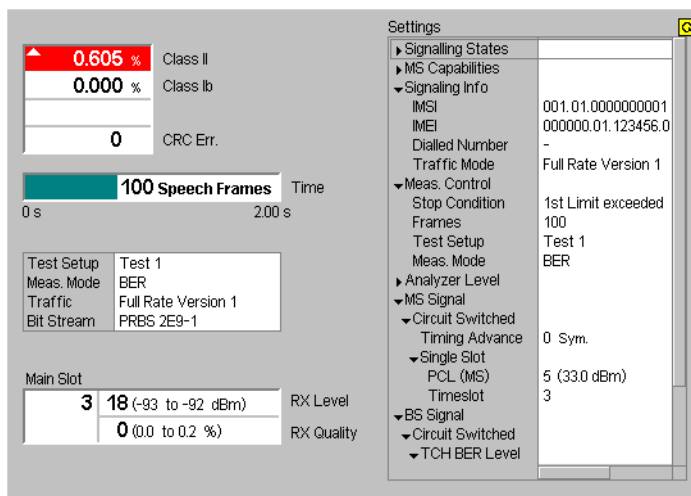


Fig. 4-62 Display of test settings and measurement results (BER)

The measurement results in the left upper table depend on the selected measurement mode (see definitions at the beginning of section [Receiver Quality Measurements](#) on page 4.122).

RBBER/FER When the residual bit error rate (*Meas. Mode = RBBER/FER*) is measured the following is displayed:

- Class II* Residual bit error rate for class II bits (unprotected bits)
- Class Ib* Residual bit error rate for class Ib bits (partly protected bits)
- FER* Frame erasure rate: relative number of invalid and therefore erased frames
- CRC Error* Result of *cyclic redundancy check*. Number of frames erased on the signal path from the device under test to the CMU

Note: *In some specific measurements, not all results may be available. E.g. the AMR full rate speech codec does not provide any Class II bits; the output field shows invalid results “--”.*

BER When the bit error rate (*Meas. Mode = BER*) is measured the following is displayed:

- Class II* Bit error rate for class II bits (unprotected bits)
- Class Ib* Bit error rate for class Ib bits (partly protected bits)
- CRC Error* Result of *cyclic redundancy check*: number of frames erased on the signal path from the device under test to the CMU

Burst by Burst In a *Burst by Burst* measurement (Fast BER, *Measurement Mode = Burst by Burst*), the following is displayed:

<i>BER</i>	Bit error rate for all bits (unprotected bits, no other bits are transmitted)
<i>CRC Error</i>	Result of <i>cyclic redundancy check</i> : number of frames erased on the signal path from the device under test to the CMU

BER/DBLER In a *Data Block Error Rate* measurement (*Measurement Mode = BER/DBLER*), the following is displayed:

<i>BER</i>	Bit error rate for class II bits (unprotected bits, no other bits are transmitted)
<i>DBLER</i>	Data block error rate: relative number of erroneous blocks; see section BER Tests of PDTCHs on p. 4.124 ff
<i>USF BLER</i>	Percentage of assigned USFs received in error, for packet switched data channels ((E)GPRS, with option CMU-K42/-K43) only. In circuit switched mode, the output field shows invalid results.
<i>False USF Det.</i>	Percentage of unassigned USFs received in error, for packet switched data channels ((E)GPRS, with option CMU-K42/-K43) only. In circuit switched mode, the output field shows invalid results. Moreover, the <i>USF Duty Cycle</i> (see section Network Parameters (Connection Control – Network) on p. 4.208 ff.) must be less than 100% in order to obtain a valid result.
<i>CRC Error</i>	Result of <i>cyclic redundancy check</i> : number of frames erased on the signal path from the device under test to the CMU

Some results are not available in all measurement configurations; see [Table 4-9](#) on p. 4.125.

Limit Check A red output field indicates that the measurement result exceeds the upper limit set in the *Limits* tab of the *Receiver Quality* configuration menu; see p. 4.150 ff.

A bar below the table indicates the relative measurement progress:

- In a *single shot* measurement, the ratio between the current measurement time and the total measurement time.
- In a *continuous* measurement, the ratio between the frames (or bursts or RLC data blocks, depending on the *Meas. Mode*) measured and the total number of frames (bursts/RLC data blocks) to be measured.

Remote Control

```
READ[ :SCALar ]:RXQuality:BER|BAverage?
FETCh[ :SCALar ]:RXQuality:BER|BAverage?
SAMPlE[ :SCALar ]:RXQuality:BER|BAverage?
CALCulate:RXQuality:BER|BAverage:LIMit:MATChing?
```

Confidence BER results	<p>If a confidence BER test is performed (i.e. if the stop condition <i>Confidence Level</i> is set), an additional output field displays one of the following measurement results:</p> <p><i>Running</i> <u>Measurement still running</u>, no early fail or early pass decision made.</p> <p><i>Early Fail</i> Measurement stopped because an early fail limit was exceeded. The DUT is probably out of tolerance.</p> <p><i>Early Pass</i> Measurement stopped because an early pass limit was exceeded. The DUT is probably within tolerance.</p> <p><i>Fail</i> Measurement terminated with a <i>Min. Test Time</i> larger than the target test time so that no early pass or early fail decision could be made; bit errors exceed upper limit (see Fig. 4-59 on p. 4.131).</p> <p><i>Pass</i> Single-limit test: Measurement terminated with a <i>Min. Test Time</i> larger than the target test time so that no early pass or early fail decision could be made, bit errors below the lower limit. Dual-limit test: Measurement terminated with no upper or lower limit exceeded (see Fig. 4-60 on p. 4.132).</p> <p><i>Too High</i> Upper limit exceeded in a dual-limit test (Fig. 4-60 on p. 4.132).</p> <p><i>Too Low</i> Upper limit exceeded in a dual-limit test.</p> <p>The <i>Confidence Settings</i> are described on p. 4.146. <u>For background information and application examples refer to section Statistical BER Tests on p. 4.129 ff.</u></p> <p>Remote Control CONFigure:RXQuality:BER<nr>:CONTrol:REPetition CLEVel READ[:SCALar]:RXQuality:BER? etc.</p>
Test Setup	<p>The table below the measurement results indicates the current test setup together with the <i>Meas. Mode</i>, the <i>Traffic mode</i> and the <i>Bit Steam</i>. The settings are also indicated in the <i>Settings</i> table in the left half of the measurement menu.</p>
Settings	<p>The <i>Settings</i> table gives an overview of the configuration of the current measurement. This includes the settings made via the softkeys and hotkeys of the <i>Receiver Quality</i> menu, and the tolerances set in the <i>Limits</i> tab of the <i>Receiver Quality Configuration</i> menu, see section Upper Limits for Bit Error Rate (Receiver Quality Configuration – Limits) on page 4.150.</p> <p>The parameters depend on the current application and the measurement mode.</p> <p>Remote control See sections Test Settings on page 4.133 and Upper Limits for Bit Error Rate (Receiver Quality Configuration – Limits) on p. 4.150.</p>
Main Slot – Receiver Reports	<p>The <i>Main Slot</i> table in the lower left section of the menu displays the receiver reports provided by the mobile phone. The parameters are different in circuit switched and packet data mode; see section MS Rcv. Reports – Received Results of the Mobile Phone on p. 4.141 ff.</p>

b) BLER

The results of the current *Receiver Quality* measurement are displayed in the tables in the center of the menu.

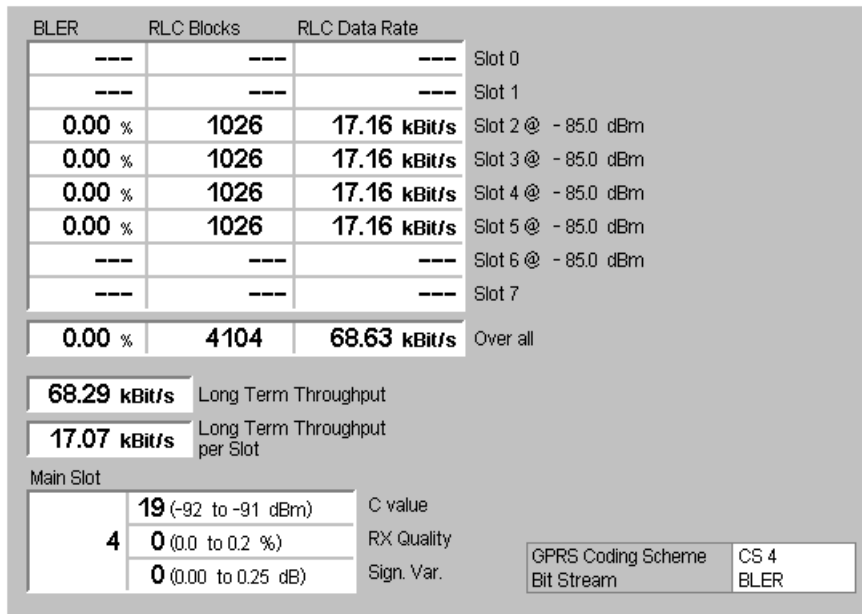


Fig. 4-63 Display of test settings and measurement results (BLER)

The measurement results are defined at the beginning of section [Receiver Quality Measurements](#) on page [4.122](#).

BLER / RLC Blocks

The upper table shows the measured Block Error Ratio (BLER) in all timeslots (*Slot 0* to *Slot 7*). The number of transferred *RLC Blocks* in each slot, the *RLC Data Rate* (see below) and the BS signal level used during the BLER measurement (*TCH BER Level*, dBm-values to the right of the table) is indicated in addition.

The *TCH BER Level* is not displayed for timeslots that are disabled in the slot editor; see [Slot Configuration Editor](#) on p. [4.165](#). Moreover, valid results are available only in timeslots where the MS receives data from the CMU.

Note: *The number of timeslots that can be evaluated simultaneously is limited by the multislot capabilities of the DUT. The CMU can send RLC blocks in up to 4 timeslots provided that the B52 Mode (see p. 4.181) is set to Multislot Support. With the setting BCCH or TCH (see Mode softkey on p. 4.170) all timeslots are available as traffic channels.*

RLC Data Rate

The RLC data transmission rate is displayed in units of kBit/s.

The *RLC Data Rate* corresponds to the net data transmission rate: Only the blocks that are correctly received are counted so that the data rate decreases as the BLER increases. Besides, the data rate depends on the number of bit per block and thus on the coding scheme; see [Table 4-13](#) on p. [4.128](#).

Over all results	<p>The <i>Over all</i> table row shows the following statistical results:</p> <ul style="list-style-type: none"> • The BLER averaged over all slots, i.e. <u>the sum of the individual BLER in all enabled slots, weighted with the number of RLC Blocks in each slot and divided by the total number of RLC blocks.</u> • The total number of RLC blocks transferred, i.e. the sum of all RLC blocks in timeslots 0 to 7. • The sum of the RLC data rates in all enabled slots.
Long Term Throughput	<p>Below the <i>Over all</i> results, two output fields show the average overall RLC data rate since the beginning of the measurement and the average overall data rate divided by the number of active slots.</p> <p>An EGPRS MS operating in Incremental Redundancy RLC mode (see section Network Parameters (Connection Control – Network) on p. 4.208 ff.) must achieve a long term throughput of 20 kbps per timeslot.</p>
Measurement Statistics	<p>All results are updated every 2 seconds. BLER/RLC blocks and <i>Long Term Throughput</i> on one hand and RLC data rate on the other hand are calculated with a different statistics:</p> <ul style="list-style-type: none"> • The sum for the <i>RLC Blocks</i> and the <i>BLER</i> runs over all blocks received since the beginning of the measurement. The same applies to the <i>Long Term Throughput</i>. • The <i>RLC Data Rate</i> is averaged over the last 4 update periods. Therefore it is available only after the first four update periods have elapsed, i.e. after 8 seconds. If a single shot BLER measurement is performed and the <i>RLC Block Count</i> is set smaller than 400 times the number of active DL slots, then the minimum number of update periods is never reached and no <i>RLC Data Rate</i> results are displayed.
Time	<p>A bar below the table indicates the total number of RLC data blocks transferred in a single shot measurement and the relative measurement progress. The bar is omitted for continuous measurements. An RLC block is transmitted every 20 ms in each used DL timeslot so that the total measurement time amounts to:</p> $\text{Meas. Time} = 20 \text{ ms} \times \langle \text{RLC Block Count} \rangle / \langle \text{Number of used DL slots} \rangle$ <p>Remote Control READ[:SCALar]:RXQuality:BLER? FETCh[:SCALar]:RXQuality:BLER? SAMPlE[:SCALar]:RXQuality:BLER?</p>
Test Setup	<p>The table below the measurement results indicates the current GPRS coding scheme and the <u><i>Bit Steam</i></u>. The settings are also indicated in the <i>Setup</i> table on the left side of the measurement menu.</p> <p>In packet data mode and with an active EGPRS modulation and coding scheme MCS1 to MCS9, the incremental redundancy setting is displayed; see Incremental Redundancy on p. 4.210. An additional line contains the puncturing scheme:</p> <ul style="list-style-type: none"> • <u>If incremental redundancy is switched on</u>, the <i>Initial puncturing scheme</i> for first transmission of the data blocks is indicated. • If incremental redundancy is switched off, the <i>Fixed puncturing scheme</i> is indicated.

Main Slot – Receiver Reports The *Main Slot* table in the lower left section of the menu displays the receiver reports provided by the mobile phone. The parameters are different in circuit switched and packet data mode; see section *MS Rcv. Reports – Received Results of the Mobile Phone* on p. 4.141 ff.

MS Rcv. Reports – Received Results of the Mobile Phone

GSM mobile phones continuously measure the signal strength and quality of several nearby base stations. The measured values for the active base station (serving cell BTS) are regularly sent to the active base station/CMU in the so-called “measurement reports”. They are automatically provided and do not represent real measured quantities. The time interval between transmission of two consecutive measurement reports is referred to as the *reporting period*.

The quantities characterizing the signal strength and quality of the serving cell (i.e. the CMU's traffic channel signal) are displayed together with the *Main Timeslot* number in a table in the lower left part of the *Receiver Quality* menu. The parameters depend on the *Main Service* and on the selected *Coding Scheme*:

- In circuit switched mode, the *RX Level* and *RX Quality* are displayed.
- In GPRS packet data mode (coding schemes CS1 to CS4), the *C value*, *RX Quality* and *Sign. Var.* are displayed.
- In EGPRS packet data mode (coding schemes MCS1 to MCS4 for GMSK modulation, MCS5 to MCS9 for 8PSK modulation), the *Mean Bit Error Probability (Mean BEP)* and the Coefficient of Variation of the BEP (*CV BEP*) are displayed.

RX Level *RX Level* denotes the received signal input level determined by the mobile for the signals of the CMU.

Required CMU settings: *Main Service = Circuit Switched*

The level is expressed in terms of dimensionless power levels depending linearly on the absolute measured power. A high power level implies a high received signal input power:

Table 4-8 Definition of RX Level

Value of RX Level	Corresponding signal strength
63	> -48 dBm
62	-49 dBm to -48 dBm
62	-50 dBm to -49 dBm
...	...
2	-109 dBm to -108 dBm
1	-110 dBm to -109 dBm
0	< -110 dBm

Remote control
[SENSe:]RREPorts:RXLevel?

RX Quality

RX Quality denotes the received signal quality determined by the mobile for the signals of the CMU.

Required CMU settings: *Main Service = Circuit Switched*

The received signal quality is expressed in terms of dimensionless quality levels (actually "error levels") depending linearly on the logarithm of the bit error rate. A high quality level implies a high bit error rate and thus a **poor** received signal quality:

Table 4-9 Definition of RX Quality

Value of RX Quality	Bit error rate
0	0% to 0.2%
1	0.2% to 0.4%
2	0.4% to 0.8%
3	0.8% to 1.6%
4	1.6% to 3.2%
5	3.2% to 6.4%
6	6.4% to 12.8%
7	12.8% to 100%

Remote control

[SENSe:]RREPorts:RXQuality?

C Value

The *C Value* is the normalized received signal level at the MS, averaged over the radio blocks as defined in standard 3GPP TS 45.008. ~~The level is expressed in terms of dimensionless numbers ranging from 0 to 63. The assignment between C Values and absolute received signal levels is equal to the definition of RX Levels, see Table 4-8 above.~~

Required CMU settings: *Main Service = Packet Data,
Coding Scheme = CS1 to CS4*

The C value is used for GPRS uplink power control; see background information in section *RF Signals of the MS (Connection Control – MS Signal)* on p. 4.205 ff.

Remote control

[SENSe:]RREPorts:CValue?

Sign. Var.

Sign. Var. denotes the variance of the received signal level within the radio blocks, averaged over all blocks within the MS reporting period. The variance is a measure of the difference between the received signal levels of the different bursts within the block; it vanishes if all burst levels are equal.

Required CMU settings: *Main Service = Packet Data,
Coding Scheme = CS1 to CS4*

Sign. Var. is equal to the SIGN_VAR parameter defined in standard 3GPP TS 45.008, see Table 4-10 below.

Remote control

[SENSe:]RREPorts:SVariance?

Table 4-10 Definition of Sign. Var.

Value of Sign. Var.	Value range
63	>15.75 dB ²
62	>15.50 dB ² to 15.75 dB ²
62	>15.25 dB ² to 15.50 dB ²
...	...
2	>0.50 dB ² to 0.75 dB ²
1	>0.25 dB ² to 0.50 dB ²
0	0 dB ² to 0.25 dB ²

Mean BEP

Mean BEP denotes the average Bit Error Probability (BEP) of the radio blocks, averaged over all blocks within the MS reporting period. Two independent MEAN_BEP values are reported for GMSK and 8PSK-modulated signals, respectively.

Required CMU settings: *Main Service = Packet Data,
Coding Scheme = MCS1 to MCS4 (GMSK),
MCS5 to MCS9 (8PSK)*

Mean BEP is equal to the MEAN_BEP parameters defined in standard 3GPP TS 45.008; see Table 4-11 below .

Remote control
[SENSe]:RREPorts:GMBep?
[SENSe]:RREPorts:EMBep?

Table 4-11 Definition of Mean BEP

Value of Mean BEP	Value range of log ₁₀ (actual BEP), GMSK modulation	Value range of log ₁₀ (actual BEP), 8PSK modulation
0	> -0.60	> -0.60
1	-0.70 to -0.60	-0.64 to -0.60
2	-0.80 to -0.70	-0.68 to -0.64
...
29	-3.50 to -3.40	-3.44 to -3.28
30	-3.60 to -3.50	-3.60 to -3.44
31	< -3.60	< -3.60

CV BEP

CV BEP denotes the Coefficient of Variation of the Bit Error Probability (BEP) of the radio blocks, averaged over all blocks within the MS reporting period. The Coefficient of Variation is the standard deviation of the measured BEP of the different bursts within the block; it vanishes if all bursts have equal BEP. Two independent CV BEP values are provided for GMSK and 8PSK-modulated signals, respectively.

Required CMU settings: *Main Service = Packet Data,
Coding Scheme = MCS1 to MCS4 (GMSK),
MCS5 to MCS9 (8PSK)*

CV BEP is equal to the CV_BEP parameters defined in standard 3GPP TS 45.008, see Table 4-12 below.

Remote control
[SENSe]:RREPorts:GCBep?
[SENSe]:RREPorts:ECBep?

Table 4-12 Definition of CV BEP

Value of CV BEP	Value range of $\text{std}(\text{BEP}) / \text{Mean BEP}$
0	>1.75
1	>1.50 to 1.75
2	>1.25 to 1.50
3	>1.00 to 1.25
4	>0.75 to 1.00
5	>0.50 to 0.75
6	>0.25 to 0.50
7	0 to 0.25

The receiver reports of up to six neighbor cells of the serving cell can be displayed using the *Neighbor Cell* hotkey, see page [4.133](#).

Measurement Configurations (Receiver Quality Configuration)

The popup menu *Receiver Quality Configuration* contains two tabs to define the parameters for the bit error rate measurement.

The popup menu *Receiver Quality Configuration* is opened by pressing the measurement control softkey *BER/ BER Average/Neighbor Cell/BLER* at the top right in the *Receiver Quality* menu twice. It is possible to change between the tabs by pressing the associated hotkeys.

Measurement Control (Receiver Quality Configuration – Control)

The *Control* tab controls the *Receiver Quality* measurement by determining

- Settling times for the mobile after which the measurement is started (*AGC/Sync. Holdoff Time*)
- The *Repetition* mode
- The *Stop Condition* for the measurement
- The measured quantity (*Meas. Mode*)
- The levels in the traffic channel (*TCH Level BER*) set during the *Receiver Quality* measurement

With the exception of the holdoff times, all settings can be defined separately for the applications *BER* (with up to ten different test setups), *BER Average* and *BLER*.

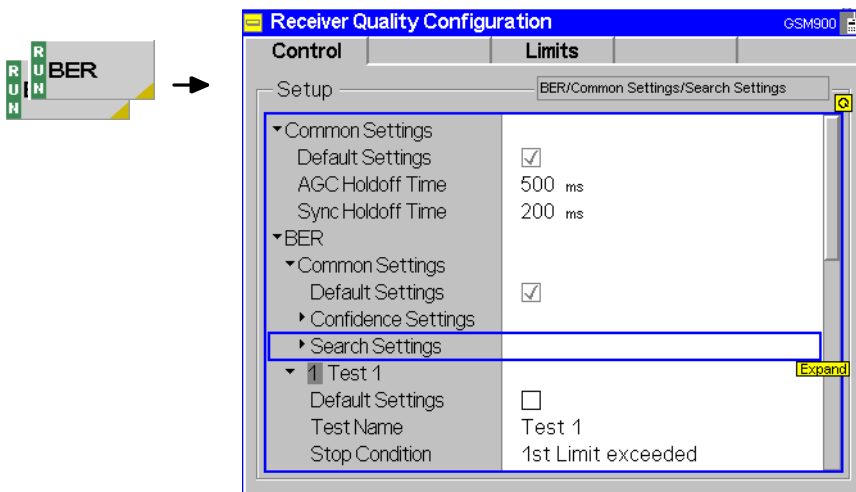


Fig. 4-64 Receiver Quality – Control

Default The first *Default* switch overwrites all settings in the *Control* tab with default values. Besides, there are default switches acting on every individual BER test setup, on the continuous mode and on the *BLER* application.

Remote control

```
CONFigure:RXQuality:CONTRol:DEFault ON | OFF
CONFigure:RXQuality:BER<nr>:CONTRol:DEFault ON | OFF
CONFigure:RXQuality:BAVERage:CONTRol:DEFault ON | OFF
CONFigure:RXQuality:BLER:CONTRol:DEFault ON | OFF
```

Common Settings The *Common Settings* section specifies holdoff times that are necessary for the adjustment of the mobile station to the BER measurement and the loopback of the bit stream.

AGC Holdoff Time Time during which the mobile can adjust itself to the new RF level at the beginning of the Receiver Quality measurement

(automatic gain control). The *AGC Holdoff Time* is also applied if the RF level changes during the *Receiver Quality* measurement.

Sync Holdoff Time Delay time after which the signalling unit of the CMU starts synchronizing to the bit stream. This holdoff time is not applied in the case of RF level changes during the *Receiver Quality* measurement.

Both holdoff times depend on the performance of the mobile station. A reduction of the holdoff times towards their mobile-dependent lower limits can accelerate the measurement.

Remote control

CONFigure:RXQuality:CONTrol:HTIME <AGCTime>,<SynchTime>

Confidence Settings

The *Confidence Settings* section sets the parameters for statistical BER tests. For background information and application examples refer to section [Statistical BER Tests](#) on p. 4.129 ff. The settings are available for the *BER* application and valid in the measurement modes *RBER/FER*, *BER* and *Burst by Burst*.

Note: *In the measurement modes RBER/FER and BER, the Class II BER provides the pass/fail criteria. In the measurement modes Burt by Burst and BER/DBLER, the BER calculated from all bits is used. No statistical results are provided for AMR full rate tests and for measurement in GPRS test mode A.*

Statistical testing is activated by setting *Stop Condition = Confidence Level*; see below. The results (*Early Fail, Early Pass etc.*) are displayed in the measurement menu. The following confidence settings are provided:

Confidence Fail Confidence level for early fail decisions: After the *Min. Test Time*, the confidence test is stopped with an "Early Fail" message as soon as the probability of the DUT to have a BER above the specified upper limit (see section [Upper Limits for Bit Error Rate \(Receiver Quality Configuration – Limits\)](#) on p. 4.150 ff.) is larger than the confidence fail value.

Confidence Pass Confidence level for early pass decisions: After the *Min. Test Time*, the confidence test is stopped with an "Early Pass" message as soon as the probability of the DUT to have a BER below the specified upper limit **times the Bad DUT factor** of 1.5 is larger than the confidence pass value.

Note: *The confidence levels are the complement of the probabilities of wrong decision F used in the test specification:
<Confidence Level> = 1 – F.*

Bad DUT Fixed bad DUT factor of 1.5; see section [Statistical BER Tests](#) on p. 4.129 ff.

Result Window BER range factor for statistical dual-limit BER tests. A factor of n % means that the BER must be within the range [<BER Limit> (1 – n %), <BER Limit> (1 + n %)]. The *OFF* setting corresponds to a single-limit BER test.

Min. Test Time Minimum test time before a check of the early pass and early fail limits can stop the measurement. Minimum test times are necessary in particular if the test conditions introduce some fluctuations that disturb the statistical independence of the single bit error events and must be averaged out (e.g. multipath fading, birth/death propagation, moving propagation).

Remote control

```
CONFigure:RXQuality:BER:CONTrol:CONFidence:FAIL
CONFigure:RXQuality:BER:CONTrol:CONFidence:PASS
CONFigure:RXQuality:BER:CONTrol:CONFidence:RWINDow
CONFigure:RXQuality:BER:CONTrol:CONFidence:MTTIme
```

BER Test Setups The *BER* table section defines up to 10 user-specific configuration files for single shot *Receiver Quality* measurements (application *BER*). The test setups are numbered from 1 to 10 and can be called up via the *Test Setup* hotkey associated to the *BER* softkey. They differ from each other in the default settings for the signal power of the CMU and the criteria for analysis.

Remote control

The application number is denoted by a numeric suffix in the RXQuality commands (...RXQuality:BER<nr>:...).

Test Name The *Test Name* option assigns a name to each of the 10 test setups. In the *Test Setup* hotkey, the individual test setups are referenced with their *Test Names*.

Remote control

A numeric suffix in the RXQuality commands (...RXQuality:BER<nr>:...) denotes the application number.

Stop Condition The *Stop Condition* parameter defines a stop condition for the measurement:

<i>NONE</i>	Continue measurement even in case of error
<i>1st Limit exceeded</i>	Stop measurement on first error (tolerance exceeded)
<i>All Limits exceeded</i>	Stop measurement if all tolerances are exceeded
<i>Confidence Level</i>	Stop measurement as soon as the BER confidence level exceeds the values set in the <i>Confidence Settings</i> section described on p. 4.146.

Remote control

```
CONFigure:RXQuality:BER<nr>:CONTrol:REPetition
  ALIMits | FLIMit | CLEVel | NONE,<StepMode>
CONFigure:RXQuality:BAVerage:CONTrol:REPetition
  ALIMits | FLIMit | NONE, <StepMode>
```

Frames The parameter *Frames* defines the statistic count (= the number of speech or data frames to be sent in a *BER* measurement). A low value permits to limit the scope and accelerate the measurement.

The meaning of a frame and its bit content depends on the service, the frame type and the channel coding; see section *Frame Structure for Speech and Data Channels* on p. 4.127 ff.

Remote control

```
CONFigure:RXQuality:BER<nr>:CONTrol <Mode>,<FramesToSend>
```

Meas. Mode The *Meas. Mode* parameter hotkey selects the quantities to be measured. For a list of measurement modes and corresponding measurement results see also section [Measurement Results](#) on page 4.136 ff.

BER - ~~Bit error rate~~ (separately for class II and class Ib bits)
RBER / FER Residual bit error rate (separately for class II and class Ib bits) and frame erasure rate
Burst by Burst Accelerated measurement, only class II bits are transmitted
BER / DBLER Bit error rate and data block error rate; see section [BER Tests of PDTCHs](#) on p. 4.124 ff. For packet switched data channels (GPRS or EGPRS, with option CMU-K42 or CMU-K43), the USF BLER is available in addition.

All measured quantities are defined at the beginning of section [Receiver Quality Measurements](#) on page 4.122 ff.

Remote control
 CONFigure:RXQuality:BER<nr>:CONTrol:<Main_Service>
 RFER | BER | BBB | BDBL,<FramesToSend>
 CONFigure:RXQuality:BAverage:CONTrol:<Main_Service>
 RFER | BER | BBB | BDBL,<FramesToSend>
 Where <Main_Service> = [CSwitched] | PDATA

Average The parameter *Average* defines the number of frames to be averaged in a *BER Average* measurement. The meaning of a frame and its bit content depends on the service, the frame type and the channel coding; see section [Frame Structure for Speech and Data Channels](#) on p. 4.127 ff.

Remote control
 CONFigure:RXQuality:BAverage:CONTrol
 <Mode> , <FramesToAverage>

The following statistical settings are relevant for *BLER* measurements only:

Repetition Selects the repetition mode for the *BLER* measurement (single shot or continuous BLER measurement).

Remote control
 CONFigure:RXQuality:BLER:CONTrol:REPetition SING | CONT

RLC Block Count *RLC Block Count* sets the number of RLC blocks to be sent and evaluated per single-shot BLER measurement. The hotkey is available in the *BLER* application and if the *Repetition* mode is set to *Single Shot*.

An RLC block is transmitted every 20 ms in each used DL timeslot so that the total measurement time amounts to:

$$\text{Meas. Time} = 20 \text{ ms} \times \text{<RLC Block Count>} / \text{<Number of used DL slots>}$$

The bit content of a frame and its depends on the service, the frame type and the channel coding; see section [Frame Structure for Speech and Data Channels](#) on p. 4.127 ff.

Remote control
 CONFigure:RXQuality:BLER:CONTrol:RLBCount

DL Resources in Use

DL Resources in Use selects the percentage of DL RLC blocks assigned to the MS under test and used for the BLER calculation. 100% corresponds to an assigned block rate of 1 block per 20 ms in each timeslot. The assigned block rate can be reduced by a factor of $n/12$ where $n = 1$ to 11; the remaining $(12 - n)/12$ blocks are dummy blocks.

The settings can be used to test a possible dependence of the BLER on the block rate. A lower percentage of DL resources in use reduces the stress on the MS receiver but increases the measurement time for the BLER measurement.

Remote control

```
CONFigure:RXQuality:BLER:CONTRol:DLDCycle RB1 | ... | RB12
```

The following level settings for the BS traffic channel are valid during the *Receiver Quality* measurement only; they don't supersede the downlink levels defined in the *Slot Configuration Editor* described in section *Softkey-oriented Version: MS Multislot Mode* on p. 4.164 ff.

In circuit switched mode, two alternative ways of defining the TCH levels are provided: Depending on the *Level Mode* setting in the *Slot Configuration Editor*, either the *TCH Level BER* or the *Individual Levels BER* is used. For packet data channels only the *Individual* level mode is provided.

TCH Level BER The *TCH Level BER* section defines the traffic channel level in the *Used/Unused* level mode (see *Level Mode* softkey in section *Softkey-oriented Version: MS Multislot Mode* on p. 4.164 ff.).

used Timeslot Absolute level in all active (used) timeslots

unused Timeslot Level in the unused timeslots of the traffic channel relative to the level in the used timeslots.

The level in the used timeslot(s) is specified in dBm. The allowed level range depends on the selected RF output of the CMU and the external attenuation set.

The level in the unused timeslots is specified relative to the level in the used timeslot(s) in dB. The actual level in the unused timeslots must also lie within the permissible range for the RF outputs. This condition may place an additional restriction on the permissible level range for the unused timeslots.

Remote control

```
CONFigure:RXQuality:BER<nr>:CONTRol[:CSwitched][:TCH]
:LEVel:UTIMeslot
```

```
CONFigure:RXQuality:BER<nr>:CONTRol[:CSwitched][:TCH]
:LEVel:UNTimeslot
```

Individual Levels BER

The *Individual Levels BER* section defines the traffic channel level in the *Individual* level mode (see *Level Mode* softkey in section *Softkey-oriented Version: MS Multislot Mode* on p. 4.164 ff.). This section is provided for circuit-switched as well as for packet data channels.

Reference Level Absolute reference level for the individual downlink (BS) signal levels.

Slot 0 to 7 Level in the individual timeslots in dB, relative to the reference level.

The allowed level range depends on the selected RF output of the CMU and the external attenuation set.

Remote control

```
Configure:RXQuality:<Applic>:CONTRol:<Main_Service>[:TCH]
:MSLot:RLEVel
```

```
CONFigure:RXQuality:<Applic>:CONTRol:<Main_Service>[:TCH]
```

```

:MSLot:LEVel:INDividual etc.
CONFigure:RXQuality:BER<nr>:CONTRol:<Main_Service>[:TCH]
:MSLot:LEVel[:SLOT]:ZERO etc.
Where <Main_Service> = [CSwitched] | PDATA
    
```

Upper Limits for Bit Error Rate (Receiver Quality Configuration – Limits)

The *Limits* tab defines the upper limits for the individual measured quantities in the Receiver Quality menu. All settings can be defined separately for the two applications *BER* (with up to ten different test setups) and *BER Average*. Which of the configured quantities are actually measured depends on the measurement mode set (*BER*, *RBBER/FER*, or *Burst by Burst*, see section *Measurement Results* on page 4.136).

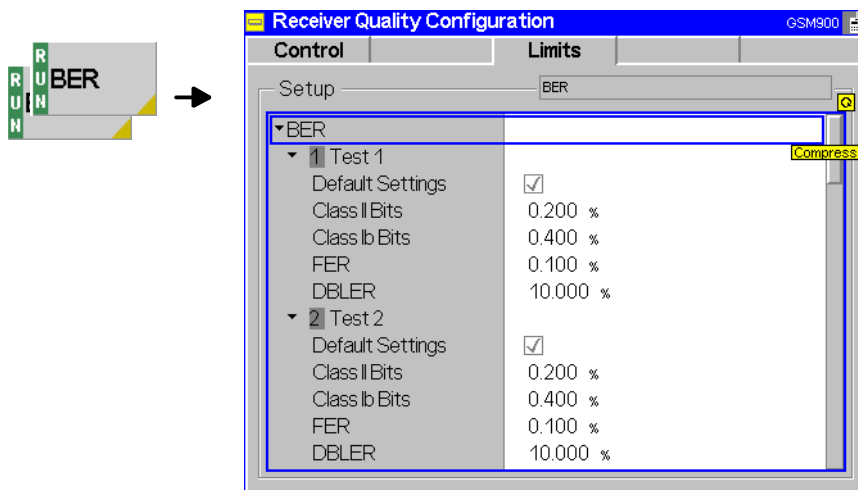


Fig. 4-65 Receiver Quality Configuration – Limits

Default Settings The *Default* switches overwrite the settings belonging to an individual BER test setup or to the BER Average mode.

```

Remote control
CONFigure:RXQuality:BER<nr>:LIMit:DEFault ON | OFF
CONFigure:RXQuality:BAVerage:LIMit:DEFault ON | OFF
    
```

Class II Bits Upper limit of the bit error rate (or residual bit error rate or burst by burst bit error rate, depending on the mode) for class II bits (unprotected bits) in the value range 0% to 100%.

```

Remote control
CONFigure:RXQuality:BER<nr> | BAVerage:LIMit:CLII <ClassIIBER>
    
```

Class Ib Bits Upper limit of the bit error rate (or residual bit error rate, depending on the mode) for class Ib bits (partly protected bits) in the value range 0% to 100%.

```

Remote control
CONFigure:RXQuality:BER<nr> | BAVerage:LIMit:CLIB <ClassIbBer>
    
```

FER Upper limit for frame error rate (frame erasure rate), relative number of invalid and therefore erased frames in the value range 0% to 100% (only measured in measurement mode *RB*ER/*F*ER).

The default settings for the three upper limits reflect the importance of the three measured quantities for evaluation of the transmission and received-signal quality (in the case of unprotected bits, a higher error rate is expected and accepted than in the case of protected bits, etc.).

Remote control

```
CONFigure:RXQuality:BER<nr>|BAverage:LIMit:FERRors  
<Frame_Errors>
```

DBLER Upper limit of the ~~Data Block Error Rate~~ in the value range 0% to 100% (only measured in measurement mode *BER/DBLER*).

Remote control

```
CONFigure:RXQuality:BER:LIMit:DBLer
```

USFBLER Upper limit of the USF Block Error Rate in the value range 0% to 100%. Only measured in measurement mode *BER/DBLER* and on packet switched data channels (GPRS, option CMU-K42).

Remote control

```
CONFigure:RXQuality:BER:LIMit:USFBler
```

Connection Control

The menu group *Connection Control* controls the signalling procedures (call setup and release, services, signalling parameters) and determines the inputs and outputs with the external attenuation values and the reference frequency.

The purpose of the *Signalling* test mode is to perform transmitter and receiver tests with an existing call (or data transfer) connection between the CMU and the mobile. Therefore the menus for setting up a connection (*Connection Control – Connection*) appear immediately after the function group and mode *GSM400/850/900/1800/1900-MS Signalling* is activated. Besides, all the tabs in the *Connection Control* menu can be called up by pressing the *Connect. Control* softkey at the top right in every measurement menu. They are linked with each other via the hotkey bar at the lower edge of the screen. Pressing the *Escape* key closes the active *Connection Control* menu and re-activates the underlying measurement menu.

The tabs *Connection Control – Connection* displayed during synchronization are described at the beginning of section *GSM Measurements with Signalling* on p. 4.93 ff. The remaining *Connection Control – Connection* tabs are described below.

Connection Control in the Synchronized State

In addition to the parameter overview described in section *Connection Control with Call Established* on p. 4.155 ff., the *Network Support* and *Main Service* softkeys, and the wideband power measurement described in section *Signalling Control without Signal (State Signal Off)* on p. 4.94 ff., the *Connection (Synchronized)* tab contains the following softkeys which lead to other signalling states:

- Deactivation of the control channel signal for synchronization (*Signal Off*)
- Establishing a call to the mobile station (*Connect Mobile -> state Alerting*)
- Short message service (*Send SMS -> return to state Synchronized*).

The popup menu *Connection (Synchronized)* is opened when a successful call (in which case a location update is considered as being already performed) is released (*Disconnect Mobile* softkey in the *Alerting* or in the *Call Established* state, MS call release, loss of radio link) or when a location update is initiated by the mobile phone. It is replaced by the *Connection (Alerting)* menu if the CMU initiates a call to the mobile phone (Softkey *Connect Mobile*), or by the *Connection (Call Established)* menu if the mobile phone initiates a call to the CMU, see [Fig. 4-42](#) on page 4.94.

Note: *If the synchronization is lost during operation (because of a low signal level etc.) the warning Synchronization Lost ! will appear.*



At the same time, bit 2 is set in the STATUS:OPERation register. To continue, confirm that you received the message by pressing the Accept button.

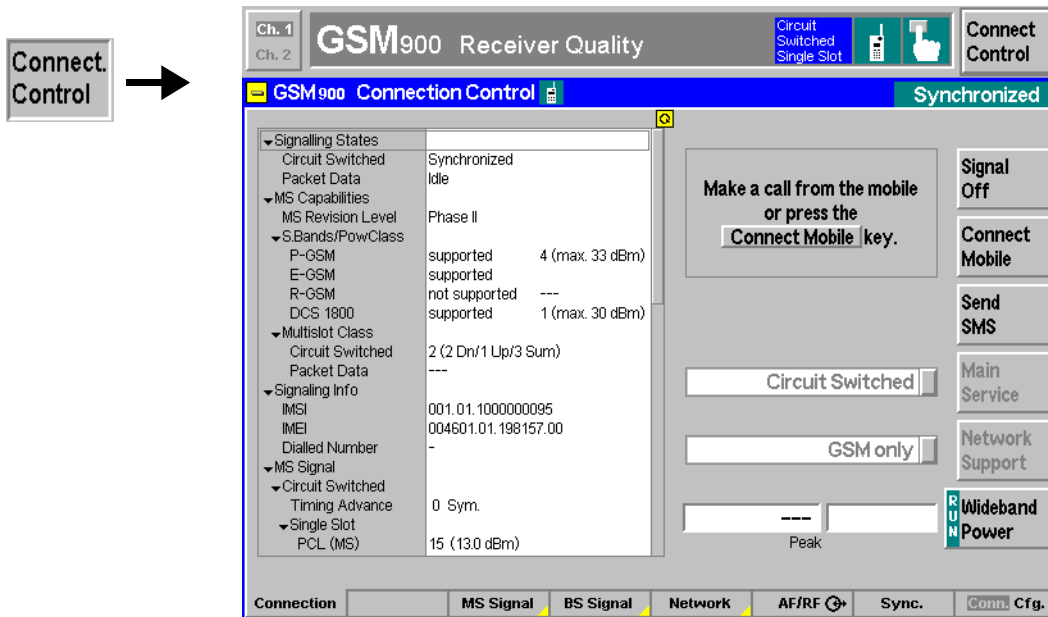


Fig. 4-66 Connection Control – Connection (Synchronized)

The function of the *Power* softkey is described in the section *Signalling Control without Signal (State Signal Off)* on page 4.94, the softkeys *Signal Off* and *Send SMS* in the section *Connection Control with Signal (State Signal On)* on page 4.97.

The parameter overview in the left half of the menu is also indicated in the other *Connection* tabs and is described in section *Connection Control with Call Established* on p. 4.155 ff. Some parameters are not always available, depending on the current and previous signalling states and settings. In this case the table shows invalid or unavailable settings ("---").

Header Message A Header Message (here: *Make a call from the mobile or press the "Connect Mobile" key*) displayed on top of each *Connection* tab informs on the current instrument state or indicates how to proceed to get to other signalling states.

Connect Mobile The softkey *Connect Mobile* establishes a call to the mobile station. A user prompt below the header indicates the function of this softkey. After it is pressed the two successive header messages *Paging in progress ... Call to mobile in progress* are displayed. As soon as the mobile responds (rings), the CMU changes to the signalling state *Alerting*. As soon as the call is accepted at the mobile, the CMU changes to the signalling state *Call Established*.

Remote control
 PROCedure:SIGNalling[:CSwitched]:ACTion MTC

Connection Control in the Alerting State

In addition to the parameter overview described in section *Connection Control with Call Established* on p. 4.155 ff., the *Network Support* and *Main Service* softkeys, and the wideband power measurement described in section *Signalling Control without Signal (State Signal Off)* on p. 4.94 ff., the *Connection (Alerting)* tab contains the following softkeys which lead to other signalling states:

- Deactivation of the control channel signal for synchronization and call release (*Signal Off*)
- *Disconnect Mobile* while keeping the control channel signal switched on (-> state *Synchronized*)

The popup menu *Connection (Alerting)* is opened while the mobile phone is ringing during a call setup (*Connect Mobile* softkey in the *Signal On* or in the *Synchronized* state). It is replaced by the *Connection (Call Established)* menu when the mobile phone accepts the call (is picked up), or by the *Connection (Synchronized)* menu if the call is released (*Disconnect Mobile* softkey, MS call release, alert timeout, loss of radio link), see [Fig. 4-42](#).

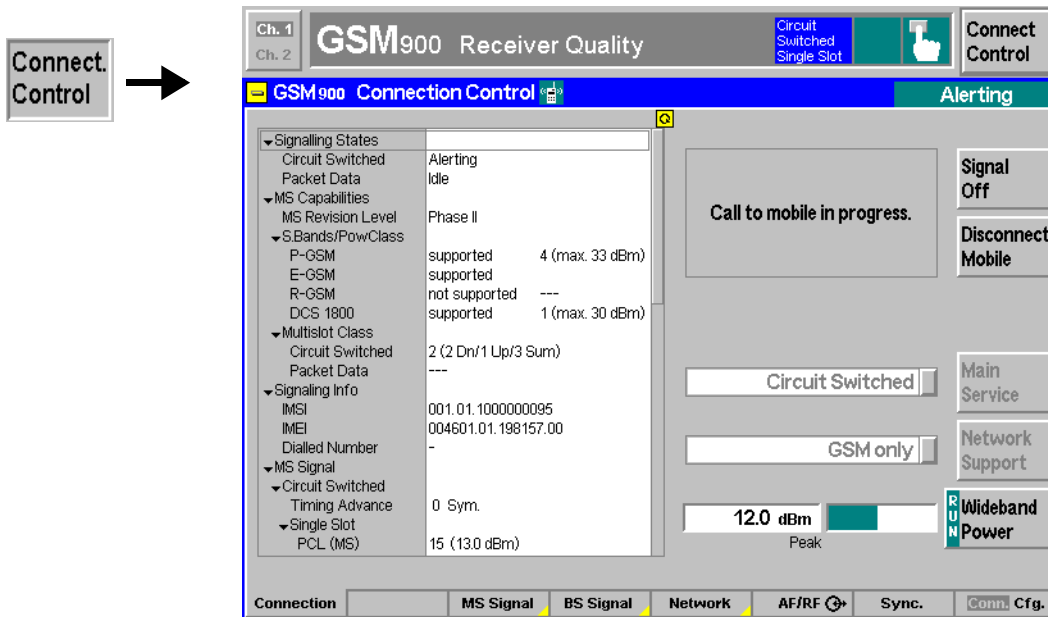


Fig. 4-67 Connection Control – Connection (Alerting)

The function of the *Wideband Power* softkey is described in the section [Signalling Control without Signal \(State Signal Off\)](#) on page 4.94, the softkey *Signal Off* softkey in section [Connection Control with Signal \(State Signal On\)](#) on page 4.97.

The parameter overview in the left half of the menu is also indicated in the other *Connection* tabs and is described in section [Connection Control with Call Established](#) on p. 4.155 ff. Some parameters are not always available, depending on the current and previous signalling states and settings. In this case the table shows invalid or unavailable settings ("---").

Header Message A Header Message displayed on top of each *Connection* tab informs on the current instrument state or indicates how to proceed to get to other signalling states.

Disconnect Mobile

The *Disconnect Mobile* softkey releases the call to the mobile station. The CMU changes to the signalling state *Synchronized*.

Remote control

```
PROCedure:SIGNalling[CSwitched]:ACTion CRELease
```


Connection Control with Call Established (State Call Established)

In addition to the parameter overview described in section [Connection Control with Call Established](#) on p. 4.155 ff., the *Network Support* and *Main Service* softkeys, and the wideband power measurement described in section [Signalling Control without Signal \(State Signal Off\)](#) on p. 4.94 ff., the *Connection (Call Established)* tab contains the following softkeys which lead to other signalling states:

- Deactivation of the signal for synchronization and call release to the mobile station (*Signal Off*)
- Call release to mobile station (*Disconnect Mobile* -> state *Synchronized*)
- Short message service (*Send SMS* -> return to state *Call Established*)

The popup menu *Connection (Call Established)* can be opened after a call from the CMU (*Call to MS* softkey in the *Signal On* or in the *Synchronized* state) is accepted at the mobile or after a successful call from the mobile. It is replaced by the *Connection (Synchronized)* menu if the call is released (*Disconnect Mobile* softkey, MS call release, alert timeout, loss of radio link), or by the *Connection (Signal On)* menu if the mobile is switched off, see [Fig. 4-42](#).

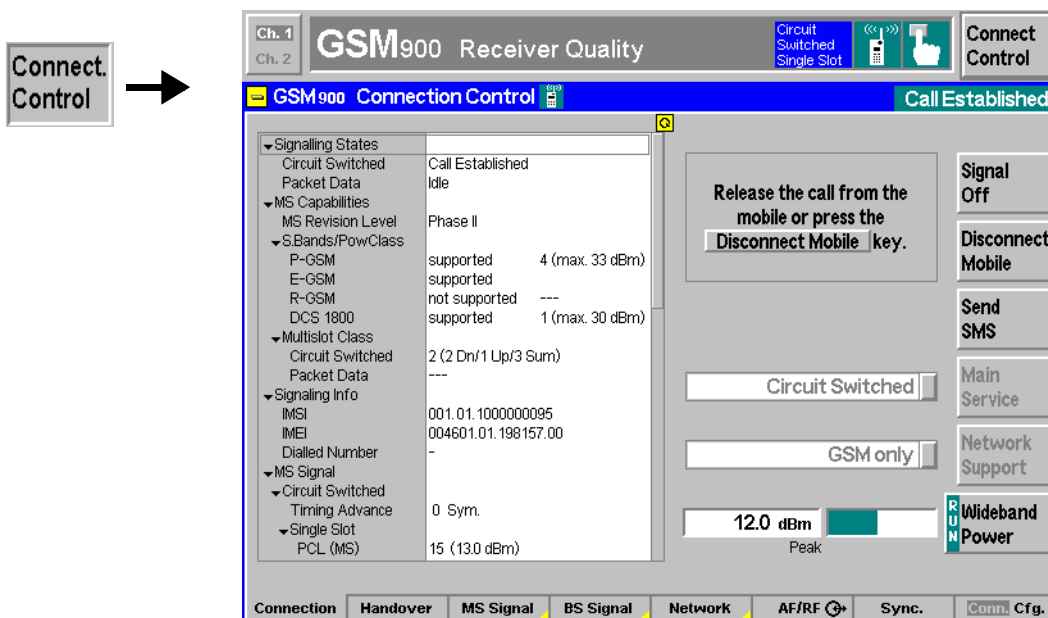


Fig. 4-68 Connection Control – Connection (Call Established)

The function of the softkeys *Signal Off* and *Wideband Power* is described in section [Signalling Control without Signal \(State Signal Off\)](#) on page 4.94, the *Send SMS* softkey in section [Connection Control with Signal \(State Signal On\)](#) on page 4.97, the *Disconnect Mobile* softkey in section [Connection Control in the Alerting State](#) on page 4.153.

The parameter overview in the left half of the menu is also indicated in the other *Connection* tabs. Some parameters are not always available, depending on the current and previous signalling states and settings. In this case the table shows invalid or unavailable settings ("---").

Header Message A Header Message displayed on top of each *Connection* tab informs on the current instrument state or indicates how to proceed to get to other signalling states.

Signalling States The *Signalling States* section indicates the current signalling states of the CMU in GSM (*Circuit Switched*, see [Fig. 4-42](#) on p. 4.94) and GPRS (*Packet Data*) mode. GSM and GPRS states are independent from each other. The GPRS signalling scheme is described in section [GPRS Signalling](#) on p. 4.195 ff.

The signalling states of the CMU are changed by means of the right softkeys in the *Connection* tabs of the *Connection Control* menu; see below.

Remote control

```
[SENSe]:SIGNalling[:CSwitched]:STATE?
[SENSe]:SIGNalling:PDATa:STATE?
```

MS Capabilities The *MS Capabilities* section indicates the characteristics of the mobile station under test. Valid parameter values are available as soon as the CMU has reached the GSM *Synchronized* or in the GPRS *Attached* signalling states. The *Dialed Number* is shown after a *Call from MS*.

MS Revision Lev. GSM phase (Phase 1, Phase 2 or Phase 2+) of the mobile station

Supp. Bands/PC Supported GSM band(s), power class and nominal maximum output power in dBm of the mobile station. For GSM900 mobile stations, the R-GSM, E-GSM, and P-GSM subbands are also indicated, e.g. *E-GSM / 1 (max. 39 dBm)*. For mobiles supporting several GSM bands or subbands, several lines are indicated.

Multislot Class Multislot class of mobile station in GSM (*Circuit Switched*) and (E)GPRS (*Packet Data*) mode and in the format *<Multislot Class>* (*<max. no. of downlink slots> Dn/<max. no. of uplink slots> Up/<Sum> Sum*), e.g. *4 (2 Dn/2 Up/3 Sum)*. A mobile station may indicate different multislot classes for circuit mode services and for GPRS (see GSM 04.08). The MS multislot classes are defined in 3GPP TS 05.02 and listed in [Table 4-13 below](#).

Remote control

```
[SENSe]:MSSinfo:POWer:CLASs?
[SENSe]:MSSinfo:REVisIon?
[SENSe]:MSSinfo:MSCLass:PDATa[:GPRS]?
[SENSe]:MSSinfo:MSCLass:PDATa:EGPRS?
```

Table 4-13: MS multislot classes

Multislot class	Maximum number of slots		
	Downlink (MS RX)	Uplink (MS TX)	Sum
1	1	1	2
2	2	1	3
3	2	2	3
4	3	1	4
5	2	2	4
6	3	2	4
7	3	3	4
8	4	1	5
9	3	2	5
10	4	2	5
11	4	3	5
12	4	4	5
13	3	3	not applicable
14	4	4	not applicable
15	5	5	not applicable
16	6	6	not applicable
17	7	7	not applicable
18	8	8	not applicable
19	6	2	not applicable
20	6	3	not applicable
21	6	4	not applicable

Multislot class	Maximum number of slots		
	Downlink (MS RX)	Uplink (MS TX)	Sum
22	6	4	not applicable
23	6	6	not applicable
24	8	2	not applicable
25	8	3	not applicable
26	8	4	not applicable
27	8	4	not applicable
28	8	6	not applicable
29	8	8	not applicable

RX describes the maximum number of receive timeslots that the MS can use per TDMA frame. TX describes the maximum number of transmit timeslots that the MS can use per TDMA frame. The MS must be able to support all integer values of receive timeslots from 0 to RX and all integer values of transmit timeslots from 0 to TX (depending on the services supported by the MS).

Sum is the total number of uplink and downlink TS that can actually be used by the MS per TDMA frame. The MS must be able to support all combinations of integer values of RX and TX timeslots where $1 \leq RX + TX \leq Sum$ (depending on the services supported by the MS). Sum is not applicable to all classes.

MS Capabilities – Signalling Info

The *Signalling Info* section indicates the code numbers identifying the mobile station under test and the dialed number.

- IMSI* International mobile subscriber identity in the format MCC.MNC.MSIN
- MCC* 3-digit mobile country code
- MNC* 2-digit mobile network code (3-digit for GSM850 and GSM1900)
- MSIN* 10-digit mobile subscriber id. no. (9-digit for GSM850 and GSM1900)
- IMEI* international mobile station equipment identity in the format TAC.FAC.SNR.SVN
- TAC* 6-digit type approval code
- FAC* 2-digit final assembly code
- SNR* 6-digit serial no.
- SVN* 1|2-digit software version number
- Dialed Number* Number dialed at the mobile station (*Call from MS*)

Remote control




- [SENSe:]MSSinfo:IMSI:MCC?
- [SENSe:]MSSinfo:IMSI:MNC?
- [SENSe:]MSSinfo:IMSI:MSIN?
- [SENSe:]MSSinfo:IMEI:TAC?
- [SENSe:]MSSinfo:IMEI:FAC?
- [SENSe:]MSSinfo:IMEI:SNR?
- [SENSe:]MSSinfo:IMEI:SVN?
- [SENSe]:MSSinfo:DNUMBER

MS Signal

The *MS Signal* section indicates important parameters describing the signals that the MS is to transmit. These parameters are set in the *MS Signal* tab and explained in greater detail there (see section *RF Signals of the MS (Connection Control – MS Signal)* on page 4.161 ff.).

Remote control

- CONFigure:MSSignal...

BS Signal	<p>The <i>BS Signal</i> section indicates important parameters describing the signals that the CMU transmits in the state <i>Signal On</i>. These parameters can be set in the <i>BS Signal</i> tab and are explained there in more detail (see section RF Signals of the CMU (Connection Control – BS Signal) on page 4.168 f.).</p> <p>Remote control <code>CONFigure:BSSignal...</code></p>
Network	<p>The <i>Network</i> section indicates the most important network parameters currently used by the CMU. These parameters can be set in the <i>Network</i> tab and are explained there in more detail (see section Network Parameters (Connection Control – Network) on page 4.176).</p> <p>Remote control <code>CONFigure:NETWork...</code></p>
AF/RF 	<p>The table <i>AF/RF</i>  indicates the RF connectors and external attenuation settings. These parameters are set in the tab <i>AF/RF</i>  and are explained in greater detail there (see section RF Connectors (Connection Control – RF Input/Output.) on page 4.83 ff.).</p> <p>Remote control <code>[SENSe:]CORRection:LOSS...?</code></p>

Handover to another Network (Connection Control – Handover)

The *Handover* tab initiates a handover of the call connection to a different network. It is therefore available in the signaling states *Call Established* (circuit switched main service, see section [Signalling Control without Signal \(State Signal Off\)](#) on p. 4.94 ff.) or *TBF Established* (packet data main service, (E)GPRS mode). Handover includes:

- Selection of the target network (*Destination Selection*) and the handover parameters (*Destination Parameter*)
- Start of the handover procedure (*Handover*)
- Cancel handover preparations and remain in the original network (*Cancel Prepar.*)

Note: *In addition to the GSM dual-band handover described in this section, the CMU supports handover from a WCDMA to a GSM connection. For more information refer to the operating manual for WCDMA UE tests (CMU-K65/.../K69), stock no. 1115.4962.12.*

The following GSM functions are only relevant for WCDMA to GSM handovers and therefore described in the WCDMA manual:

*Cell Synchronization: Finely Synchronized oder Non-synchronized
Alerting: None or With GSM Setup Message*

The remote control commands belong to the GSM function groups and are described in Chapter 6 of the present GSM manual; refer to:

`CONFigure:HANDover:ALERTing; CONFigure:HANDover:CSYNc`

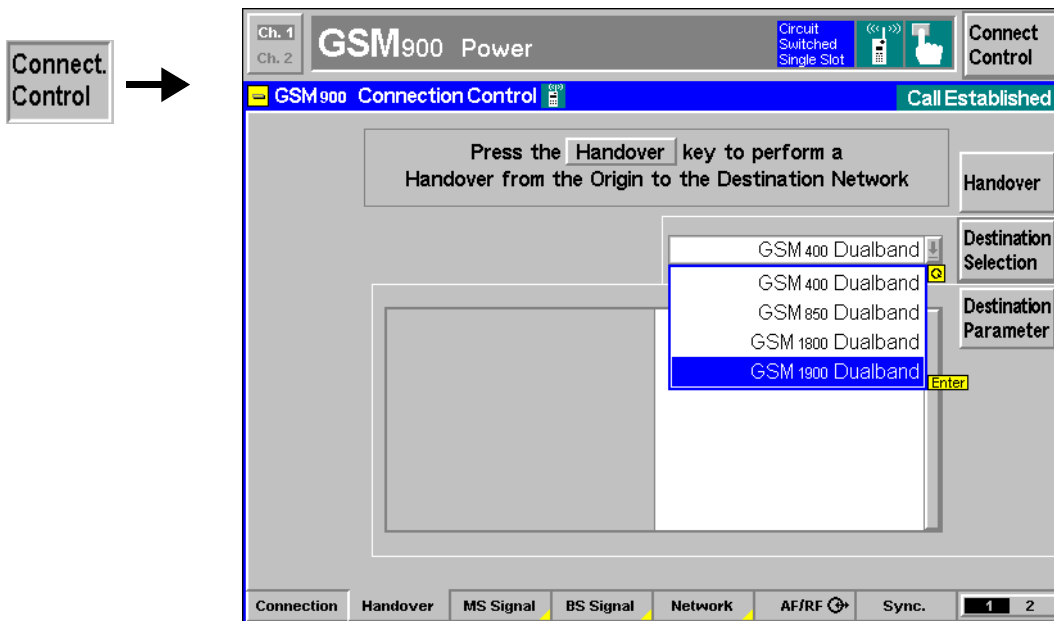


Fig. 4-69 Connection Control – Handover (destination selection)

Destination Selection

The softkey *Destination Selection* selects the target network for handover.

Dual-band handover between all enabled GSM bands is supported. Once the selection is confirmed via *Enter*, the CMU changes to the *Call Pending* signalling state. In this state, the entire *Connection Control* menu is mapped onto the target function group, so it is possible to edit the *Destination Parameters* (see below), the *BS Signal*, and the *Network* parameters of the target network.

Remote control

```
STATus:HANDOver:TARGET:LIST?
CONFigure:HANDOver:TARGET <Target>
```

Note:

Call Pending is an intermediate signalling state that only occurs in the context of a handover process. For a complete overview of signalling states see Fig. 6.1 in chapter 6 of this manual.

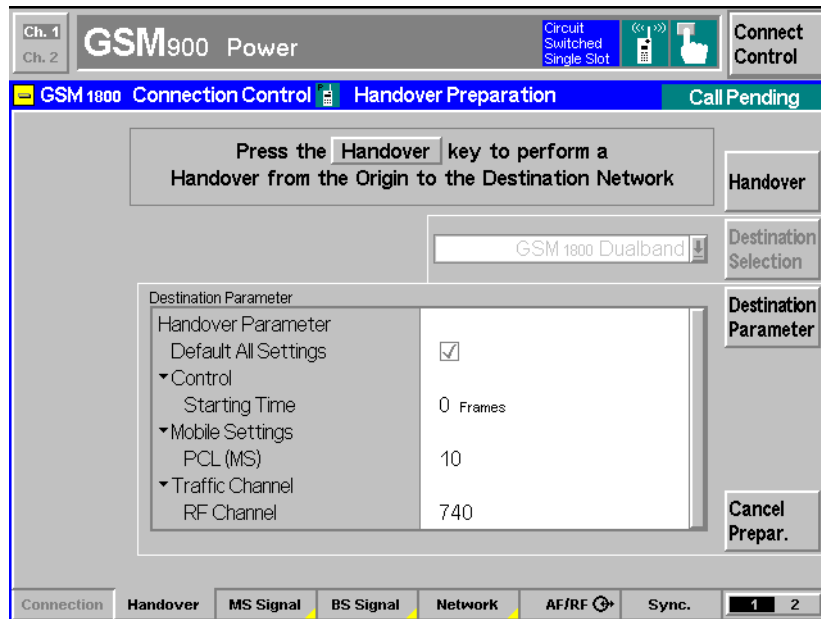


Fig. 4-70 Connection Control – Handover (Call Pending)

Destination Parameter

The *Destination Parameter* softkey sets important target network parameters that come into effect as soon as the call is handed over.

Default All Sett. Sets all *Destination Parameters* to default values.

RF Channel Traffic channel number used for the connection in the target network.

Note: *The channel numbers in GSM1800 and GSM1900 are ambiguous. To ensure that the RF Channel is correctly interpreted check the setting of the Band Indicator (see p. 4.184). For a handover between GSM1800 and GSM1900 the Band Indicator should be changed before the handover is initiated.*

The following additional parameters can be set if circuit switched main service is active (see section *Signalling Control without Signal (State Signal Off)* on p. 4.94 ff.):

Starting Time Time interval (in frames) after which the mobile station performs a new registration with the base station after a channel, timeslot, and fast power change.

PCL (MS) Power control level used by the mobile station to call and perform a location update in the target network.

The following additional parameters can be set if packet data main service is active (see section *Signalling Control without Signal (State Signal Off)* on p. 4.94 ff.):

Coding Scheme GPRS coding schemes for traffic data channels, CS1 to CS4; modulation and coding schemes MCS1 to MCS9 for EGPRS

See also section *Network Parameters (Connection Control – Network)* on page 4.176 ff.

Remote control

```

CONFigure:NETWork[:CSwitched]:SMODE:STIME DEF
CONFigure:MSSignal[:CSwitched][:TCH][:SSLot]MS:PCL DEF
CONFigure:BSSignal[:CSwitched][:TCH]:CHANnel DEF
CONFigure:NETWork[:CSwitched]:SMODE:STIME <Frames>
CONFigure:MSSignal[:CSwitched][:TCH][:SSLot]MS:PCL <PCL>
CONFigure:BSSignal[:CSwitched][:TCH]:CHANnel <TCH>
    
```

Handover

The *Handover* softkey initiates a handover to the target network.

Note: After a handover the *BS Signal* tab no longer shows the current control channel settings (in particular, the BCCH Mode, BCCH Level and BCCH Channel) but displays "from other network", indicating that the values of the origin network have been left unchanged. Display of the current values is restored by returning to the target network or setting up the connection again.

Remote control

PROCEDURE:SIGNalling[:CSwitched]:ACTION HANDover

**Cancel
Prepar.**

The *Cancel Prepar.* softkey cancels the *Handover* procedure and resets the CMU to the *Call Established* signalling state.

The destination parameters defined in the *Call Pending* state are maintained. To cancel the *Handover* procedure and return to the measurement mode, press the *ESCAPE* key or the *Connection Control* softkey.

Remote control

–

RF Signals of the MS (Connection Control – MS Signal)

The *MS Signal* tab configures the operating mode and the RF traffic channel signal of the MS under test. Some functions of the menu depend on the *Main Service* (*Circuit Switched* or *Packet Data (GPRS)* operating mode) and the *Slot Mode* (*Single Slot* or *Multislot* operation) of the mobile as well as on the signalling state of the CMU (*Call Established* or other states). As a consequence, settings may be disabled or even hidden in some operating modes of the CMU/MS test system. Exact information is provided in the command description in chapter 6 of this manual.

The present chapter describes the parameters related to circuit switched operation of the mobile phone. Tests in *Packet Data (GPRS)* mode require option CMU-K42. They are described in section [RF Signals of the MS \(Connection Control – MS Signal\)](#) on p. 4.205 ff.

The CMU provides a softkey-oriented version of the *MS Signal* tab and a table-oriented version with extended functionality. The *MS Signal* hotkey toggles between the two versions if it is pressed repeatedly.

Softkey-oriented Version: MS Single Slot Mode

The *Slot Mode* of the mobile can be set by means of the *Slot Mode* softkey before a call is established. While *Single Slot* mode is selected, the softkey-oriented version of the *MS Signal* tab determines

- The transmitter output power (*PCL*), and *Timing Advance* of the MS
- The routing of the speech data (*DAI*) and the *Loop* for *Receiver Quality* tests.

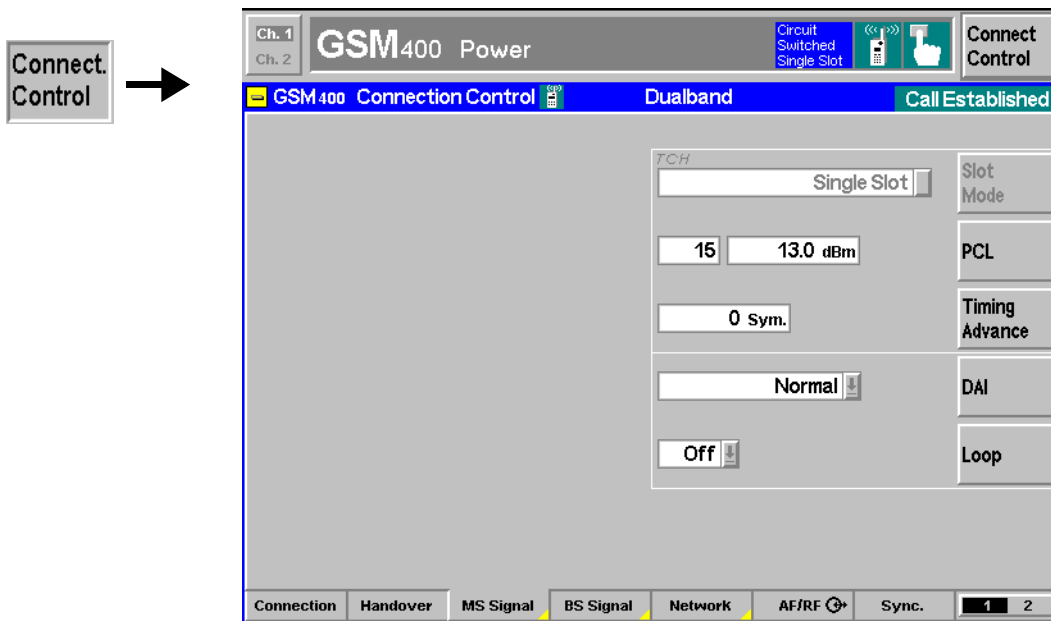


Fig. 4-71 Connection Control – MS Signal (panel, single slot)

Slot Mode

The *Slot Mode* softkey set the mobile station under test to either *Single Slot* or *Multislot* operation. As soon as a call is established the slot mode can no longer be changed and the softkey is disabled (grayed). The *Multislot* setting changes the other softkeys in the *MS Signal* tab (see section [Softkey-oriented Version: MS Multislot](#) on p. 4.164). It will come into effect only if the MS under test is capable of multislot operation (i.e. if it supports HSCSD or GPRS).

Remote control

```
CONFigure:SIGNalling[:CSwitched][:TCH]:SMODE SSL | MSL
```

PCL

The *PCL* softkey sets (signalling states < *Call Established*) or changes (signalling states *Call Established*) the MS output power during the connection. The softkey is identical to the *PCL (MS)* parameter in the table-oriented version of the *MS Signal* tab.

The MS transmitter output power can be selected in PCL (Power Control Level) units or as a corresponding absolute power value (in dBm with a 2 dBm spacing); see section [Limit Values for Average Burst Power \(Power Configuration – Limits\)](#) on page 4.116.

Note: Power measurements on normal bursts are performed at the MS output power set via PCL or the corresponding parameters for multislot or packet data mode. In contrast, the access burst is transmitted before a call is set up. The P/t Access Burst measurement is performed at the maximum power for the cell P_{MAX} (see [P_{MAX}](#) parameter on p. 4.168).

Caution: If very small MS powers are specified, the mobile station, depending on its power class or GSM phase (phase 1 or 2, may actually transmit at a higher power so that the CMU may be overdriven.

Example (GSM900): The minimum level of phase 2 mobile phones is 5 dBm (PCL 19), the minimum level of phase 1 is 13 dBm (PCL 15). If PCL 19 is set but a phase 1 mobile station is used, this mobile will transmit at 13 dBm (PCL 15).

Remote control

```
CONFigure:MSSignal[:CSwitched][:TCH][:SSLot]:MS:PCL
PROCedure:SIGNalling[:CSwitched][:TCH][:SSLot]:MS:PCL
```

Timing Advance

The *Timing Advance* softkey sets a (positive) delay time (in symbol periods) correcting the timing of the mobile. In the network, timing advance is to compensate for the propagation time of the signal from the BTS to the mobile and back.

Remote control

```
PROCedure:SIGNalling[:CSwitched][:TCH]:TADVance
CONFigure:MSSignal[:CSwitched][:TCH]:TADVance
```

DAI
Acoustic Dev.

The *DAI Acoustic Dev.* determines the routing of the speech data (Digital Audio Interface (DAI) of the mobile or internal, i.e. normal mode) and which device is being tested (speech transcoder/DTX functions or A/D & D/A):

The DAI can be set to one of the following modes:

<i>Normal</i>	Normal operation of the mobile; default setting during a call setup
<i>Decoder</i>	Test of speech decoder / DTX functions (downlink)
<i>Encoder</i>	Test of speech encoder / DTX functions (uplink)
<i>Acoustic Devices</i>	Test of acoustic devices and A/D & D/A

When entering the *Call Established* state, the DAI setting is always *Normal*. The other options must be set explicitly after each call setup.

Remote control

```
PROCedure:SIGNalling[:CSwitched]:DAI <Interface>
```

Loop

The *Loop* softkey sets the test loop at the MS. *Receiver Quality* measurements use their own test loops so the loop defined here is valid as long as no *Receiver Quality* measurement is active. All test loops are defined in standard 3GPP TS 04.14.

The following loops are available in single slot mode:

<i>Off</i>	No test loop activated
<i>A</i>	TCH loop including signalling of erased frames (full signalling)
<i>B</i>	Speech TCH loop without signalling of erased frames (residual bit error rate)
<i>C</i>	TCH burst-by-burst loop

To activate a loop, the *Loop Command* function in the *Network* tab must be set to *Disable* or *Sensitivity*; see p. 4.183.

Remote control

```
PROCedure:SIGNalling[:CSwitched][:SSLot]:LOOP
CONFigure:MSSignal[:CSwitched][:SSLot]:LOOP
```

Softkey-oriented Version: MS Multislot Mode

The *Slot Mode* of the mobile can be set by means of the *Slot Mode* softkey (see p. 4.162) before a call is established. While *Multislot* mode is selected, the softkey-oriented version of the *MS Signal* tab determines

- The transmitter output power in the main timeslot (*Main Slot PCL*), the *Main Timeslot* number
- The *Timing Advance* of the MS; see section *Softkey-oriented Version: MS Single Slot Mode* on p. 4.161 f.
- The levels in all uplink and downlink timeslots (*Slot Config.*)
- The *Loop* for *Receiver Quality* tests.


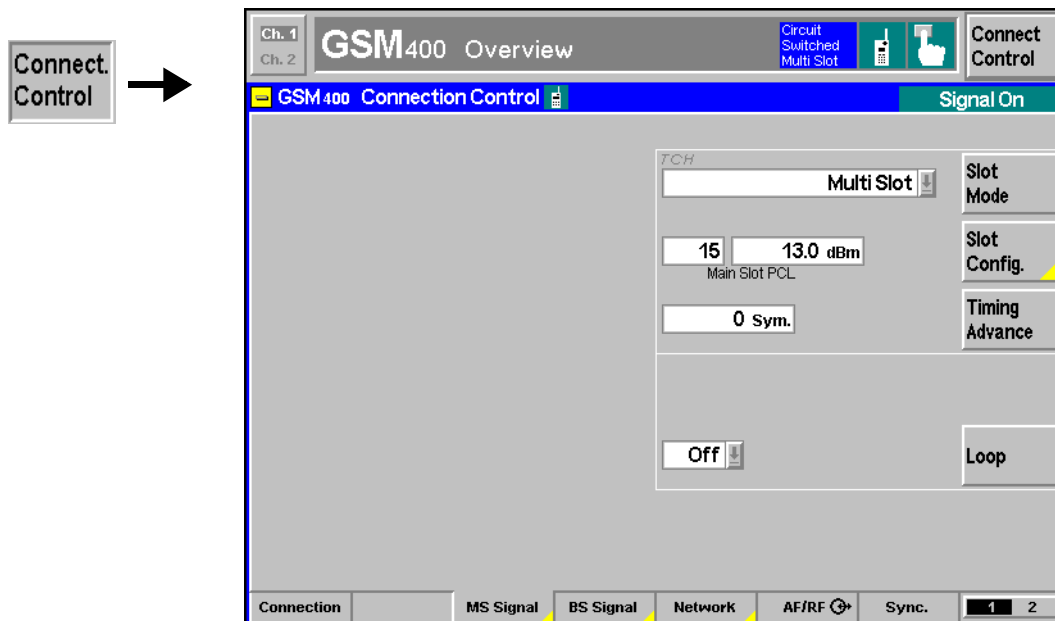


Fig. 4-72 Connection Control – MS Signal (panel, multislot)

Slot Config.

The *Slot Config.* softkey sets the output power of the mobile station transmitter and the main timeslot number (see below). The output power can be selected in PCL (Power Control Level) units or as a corresponding absolute power value (in dBm with a 2 dBm spacing); see section *Limit Values for Average Burst Power (Power Configuration – Limits)* on page 4.116.

Pressing the *Slot Config.* softkey twice opens the *Slot Configuration Editor*:

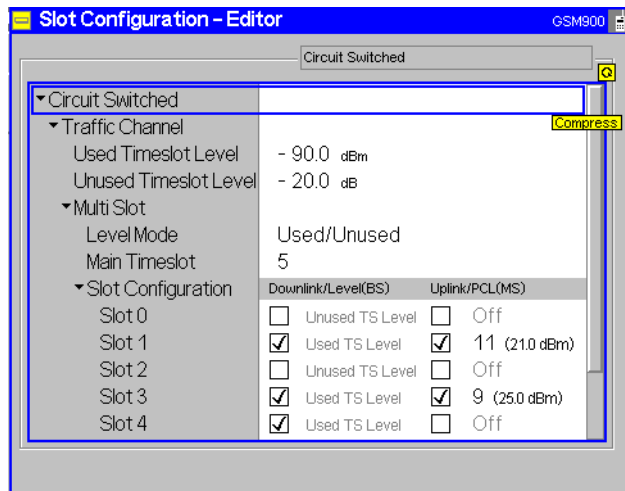

The *Slot Configuration Editor* determines the levels in all uplink and downlink timeslots.

Note: *All settings in the Slot Configuration Editor except the Level Mode can be changed irrespective of the signalling state of the CMU. With an established connection (i.e. in the Call Established or TBF Established state), all settings made only take effect when the editor is closed.*

Circuit Switched – Traffic Channel

The *Circuit Switched – Traffic Channel* section provides general uplink and downlink level settings. They are available only if the *Level Mode* is set to *Used/Unused* (see below).

Used Timeslot Level Absolute level (in dBm) in all active (used) timeslots of the downlink traffic channel signal (BS signal parameter)

Unused Timeslot Level Level in all inactive (unused) timeslots of the downlink traffic channel signal (BS signal parameter) relative to the *Used Timeslot Level* (in dB)

The value range for both levels depends on the RF output selected and of the external attenuation set, see section *Control of Input and Output Signals (Non Signalling)* on page 4.72.

Remote control

```
CONFigure:BSSignal[:CSwitched][:TCH]:LEVel:UTIMeslot
PROCedure:BSSignal[:CSwitched][:TCH]:LEVel:UTIMeslot
CONFigure:BSSignal[:CSwitched][:TCH]:LEVel:UNTimeslot
PROCedure:BSSignal[:CSwitched][:TCH]:LEVel:UNTimeslot
```

Multi Slot The *Multi Slot* section determines the main timeslot and the way the levels are defined.

Level Mode *Individual* levels in all downlink channels or distinction between *Used/Unused* timeslots. If *Used/Unused* is selected the *Used Timeslot Level* and the *Unused Timeslot Level* can be defined in the *Traffic Channel* section. *Individual* levels are defined relative to the *Reference Level* defined below.

Reference Level Reference value for the individual downlink (BS) signal levels. The reference level is available only if the *Level Mode* is set to *Individual* (see above).

Main Timeslot Timeslot used for signalling. The main timeslot can not be switched off in both the downlink and uplink; see *Slot Configuration* below.

Remote control

```
CONFigure:BSSignal[:CSwitched][:TCH]:MSLot:LMODe
CONFigure:BSSignal[:CSwitched][:TCH]:MSLot:RLEVe1
PROCedure:BSSignal[:CSwitched][:TCH]:MSLot:RLEVe1
CONFigure:BSSignal[:CSwitched][:TCH]:MSLot:MTIMeslot
PROCedure:SIGNalling[:CSwitched][:TCH]:MSLot:SCONfig
```

Slot Configuration Table of all used and unused timeslots (GSM timeslots 0 to 7) in the downlink and the uplink. The *Main Timeslot* is always active (enabled) in both the downlink and uplink direction. The boxes enable (if checked) or disable the other timeslots.

Important Note: *The CMU can transmit signals in enabled as well as in disabled downlink timeslots. Enabling a downlink timeslot means that the MS is instructed to listen to a signal in this timeslot.*

Downlink Level (BS) RF levels in all downlink timeslots (RF signal transmitted by the BS/CMU). If the *Level Mode* is set to *Used/Unused*, the *Used Timeslot Level* and the *Unused Timeslot Level* from the *Traffic Channel* section are entered and the downlink levels in the *Slot Configuration* table can not be edited. If the *Level Mode* is set to *Individual*, all downlink levels are defined relative to the *Reference Level*.

If the *BCCH and TCH* mode is active (see *Mode* softkey on p. 4.170), slot 0 of the downlink signal is reserved for the *BCCH* and slots 1 and 7 are not available for the traffic channel. *BCCH* is indicated instead of the level and the enable switches for slots 0, 1 and 7 are grayed.

Uplink PCL (MS) Transmitter output power of the MS in all active (enabled) uplink timeslots. The MS transmitter output power is selected in PCL (Power Control Level) units; the corresponding absolute power value is also indicated; see section *Limit Values for Average Burst Power (Power Configuration – Limits)* on page 4.116. If a timeslot is disabled, the corresponding output power is automatically switched *Off*.

Note: *The number of downlink and uplink channels must be compatible with the multislot class of the MS under test; see Table 4-13 on p. 4.156.*

Remote control

```
CONFigure:BSSignal[:CSwitched][:TCH]:MSLot:SCONfig:UUNused
CONFigure:BSSignal[:CSwitched][:TCH]:MSLot:SCONfig:INDividual
CONFigure:MSSignal[:CSwitched][:TCH]:MSLot:SCONfig
PROCedure:SIGNalling[:CSwitched][:TCH]:MSLot:SCONfig
```

Loop

The *Loop* softkey sets the test loop at the MS. *Receiver Quality* measurements use their own test loops so the loop defined here is valid as long as no *Receiver Quality* measurement is active. All test loops are defined in standard 3GPP TS 04.14.

The following loops are available in multislot mode:

- Off No test loop set
- G Multi-slot TCH burst-by-burst loop
- H Multi-slot TCH loop including signalling of erased frames

To activate a loop, the *Loop Command* function in the *Network* tab must be set to *Disable* or *Sensitivity*; see p. 4.183.

Remote control

```
PROCEDURE:SIGNalling[:CSwitched]:MSLot:LOOP
CONFIGURE:MSSignal[:CSwitched]:MSLot:LOOP
```

Table-oriented Version

The table-oriented version of the *MS Signal* tab contains all MS signal settings of the softkey-oriented version (see sections *Softkey-oriented Version: MS Single Slot Mode* on p. 4.161 and *Softkey-oriented Version: MS Multislot Mode* on p. 4.164 ff.). Besides it defines:

- The maximum MS transmitter output power allowed in the cell (*P_{MAX}*)
- The Discontinuous Transmission (*DTX*) mode of the mobile station

The active *Main Service* (*Circuit Switched* or *Packet Data*) is underlined in the *BS Signal* tab. In the following, general parameters and parameters for circuit switched mode are described. For a description of packet data parameters refer to section *RF Signals of the MS (Connection Control – MS Signal)* on p. 4.205 ff.

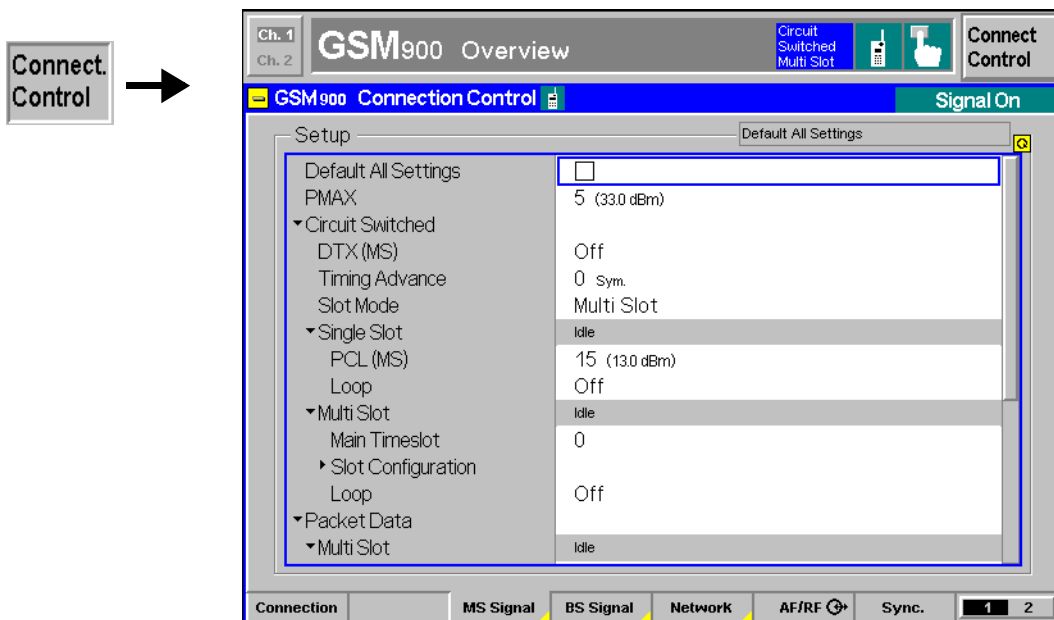


Fig. 4-73 Connection Control – MS Signal (table)

The following settings are not provided in the softkey-oriented versions of the *MS Signal* tab (see sections *Softkey-oriented Version: MS Single Slot Mode* on p. 4.161 and *Softkey-oriented Version: MS Multislot Mode* on p. 4.164 ff.).

Default Settings The *Default All Settings* switch assigns default values to all settings in the *MS Signal* tab (the default values are quoted in the command description in chapter 6 of this manual).

Remote control
-

PMAX The *PMAX* parameter sets the maximum MS transmitter output power allowed in the cell. The value corresponds to the output power at which the mobile station performs a location update to synchronize to the CMU. It is valid both for circuit switched and for packet data mode.

The maximum MS transmitter output power can be selected in PCL (Power Control Level) units or as a corresponding absolute power value (in dBm with a 2 dBm spacing); see section [Limit Values for Average Burst Power \(Power Configuration – Limits\)](#) on page 4.116.

Note: *PMAX* defines the MS output power for access burst measurements (application P/t Access Burst). The other Power measurements are performed at the MS output power set via PCL (MS) (see [PCL](#) softkey on p. 4.162) or the corresponding parameters for multislot or packet data mode.

Remote control
CONFigure:MSSignal:CCH:PMAX

Circuit Switched – DTX (MS) The *DTX (MS)* parameter decides whether or not the mobile station may use the operating mode *Discontinuous Transmission*.

In the operating mode DTX (*discontinuous transmission mode*) the *voice activity detection* of the mobile station analyzes the language elements and the intervals and decides whether a transmission is required. As a result of this, only useful information is transferred; if nothing is spoken, the mobile station will not transmit anything. The DTX method permits to reduce radio interference, the power as well as the current consumption of the mobile stations.

Note: *Since the mobile station only transmits from time to time in DTX mode, the RF measurement can only sporadically be performed by the CMU. Therefore, the DTX mode is switched Off in the default setting.*

Remote control
CONFigure:MSSignal[:CSwitched]:DTX ON | OFF
[SENSe:]RREPortS:DTX?

RF Signals of the CMU (Connection Control – BS Signal)

The *BS Signal* tab configures the operating mode and the RF control and traffic channel signals that the CMU transmits to communicate with the MS under test. Some functions of the menu depend on the *Main Service (Circuit Switched or Packet Data (GPRS) operating mode)* and the *Slot Mode (Single Slot or Multislot operation)* of the mobile as well as on the signalling state of the CMU (*Call Established* or other states). As a consequence, settings may be disabled or even hidden in some operating modes of the CMU/MS test system. Exact information is provided in the command description in chapter 6 of this manual.

The present chapter describes the parameters related to circuit switched operation of the mobile phone. Tests in *Packet Data (GPRS) mode* require option CMU-K42. They are described in section [RF Signals of the CMU \(Connection Control – BS Signal\)](#) on p. 4.205 ff.

The CMU provides a softkey-oriented version of the *BS Signal* tab and a table-oriented version with extended functionality. The *BS Signal* hotkey toggles between the two versions if it is pressed repeatedly.

Softkey-oriented Version: Single Slot Mode

The *Slot Mode* of the mobile can be set by means of the *Slot Mode* softkey before a call is established. While *Single Slot* mode is selected, the *Level Mode* softkey is inactive. The softkey-oriented version of the *BS Signal* tab determines

- A *Frequency Offset* by which the RF frequency of the BS traffic and control channel (BCCH) signal is modified
- The transmission *Mode*, *BCCH Level* and GSM channel number (*RF Channel*) of the CMU's Broadcast Control Channel (BCCH)
- The level (*TCH Level*), GSM channel number (*RF Channel*), *Hopping* sequence and *Timeslot* of the CMU's traffic channel (TCH)

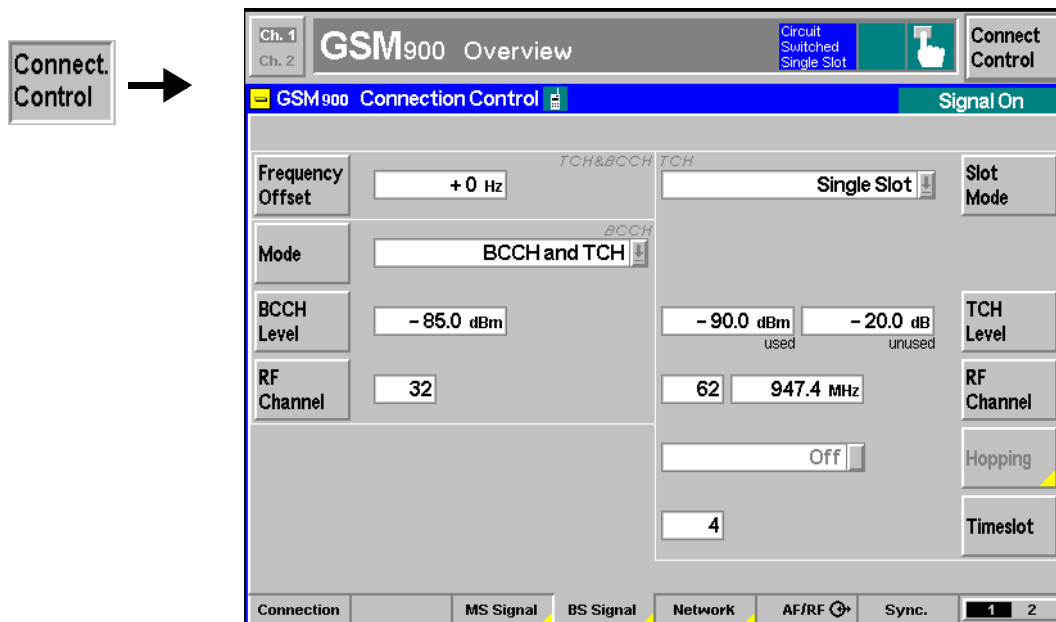


Fig. 4-74 Connection Control – BS Signal (panel, single slot)

The left half of the BS Signal tab contains the following BCCH settings:

Frequency Offset

The *Frequency Offset* softkey determines the frequency offset of the CMU signals from the value defined under *RF Channel*. This enables fine tuning of the signal generated by the CMU, for example for simulating a Doppler shift (due to a relative movement between mobile and CMU) or de-tuning of the base station or the MS receiver. The value range of the frequency offset is – 100 kHz to +100 kHz (covering the entire GSM channel width) such that the CMU is able to transmit on any frequency within the selected GMS band.

For special applications it is possible to multiply the frequency offset with a random sign; see [Enabling the Random Frequency Offset](#) on p. 4.174.

Remote control

CONFigure:BSsignal:FM:DEviation <Frequency>

Mode

The *Mode* softkey defines the BS Signal configuration after a connection has been set up:

BCCH or TCH Switch off BCCH after the connection has been established. This means that in the *Call Established* and *TBF Established* states, all timeslots are available for the TCH. This is particularly useful for BER tests on packet data channels; see section [BER Tests of PDTCHs: BLER and DBLER](#) on p. 4.124 ff.

BCCH and TCH Maintain BCCH after the connection has been established. The BCCH occupies timeslot 0 but also blocks the two adjacent timeslots (no. 7 and 1) for TCHs: Only timeslots 2 to 6 are available for BS signal traffic channels.

Note: *If option CMU-B95, Additional RF Channel, is fitted, the Aux TX signal can be used for the BCCH (see 4.175). With this signal configuration all timeslots are available for the TCH, even though the BCCH can be maintained to ensure a stable connection. The Mode softkey is hidden.*

Remote control

CONFigure:BSSignal:CCH:MODE BATC | BOTC

The following BCCH settings are provided by the Main TX generator or the Aux TX generator (with Option CMU-B95), depending on the settings in the table-oriented *BS Signal* tab (see Aux TX section on p. 4.175).

BCCH Level

The *BCCH Level* softkey sets the absolute level (in dBm) of the BCCH control channel used for synchronization of the mobile. The value range for *Level* depends on the RF output selected and of the external attenuation set.

Remote control

CONFigure:BSSignal:CCH:LEVel:ABSolute <Level>

RF Channel

The *RF Channel* softkey selects the GSM channel number of the BCCH control channel. For an overview of GSM channels see section *Control of Input and Output Signals* on page 4.72. In GSM900 the CMU can use all three sub-bands (P-GSM, E-GSM, R-GSM), so care must be taken that the MS supports the selected *RF Channel*.

Remote control

CONFigure:BSSignal:CCH:CHANnel <CCHChannel>

Note: *After a handover the BS Signal tab no longer shows the current Mode, BCCH Level and RF Channel but displays "from other network", indicating that the values of the origin network have been left unchanged. Display of the current values is restored by returning to the target network or setting up the connection again.*

The right half of the BS Signal tab contains the following TCH settings:

Slot Mode

The *Slot Mode* softkey set the mobile station under test to either *Single Slot* or *Multislot* operation. As soon as a call is established the slot mode can no longer be changed and the softkey is disabled (grayed). The *Multislot* setting changes some of the other softkeys in the *BS Signal* tab (see section [Softkey-oriented Version: MS Multislot](#) on p. 4.164). It will come into effect only if the BS under test is capable of multislot operation (i.e. if it supports HSCSD or GPRS).

Remote control

No separate switchover command. The slot modes are selected implicitly by the keywords [:SSLot] or :MSLot in the command header.

TCH Level

The *TCH Level* softkey sets the absolute level (in dBm) in the used timeslot and the relative level in all unused timeslots of the BS signal. The unused timeslot level is defined relative to the level in the used timeslot (in dB).

The value range for both levels depends on the RF output selected and of the external attenuation set, see section *Control of Input and Output Signals (Non Signalling)* on page 4.72.

Remote control

```
CONFigure:BSSignal[:CSwitched][:TCH]:LEVel:UTIMeslot
PROCedure:BSSignal[:CSwitched][:TCH]:LEVel:UTIMeslot
CONFigure:BSSignal[:CSwitched][:TCH]:LEVel:UNTimeslot
PROCedure:BSSignal[:CSwitched][:TCH]:LEVel:UNTimeslot
```

RF Channel

The *RF Channel* softkey selects the GSM channel number of the traffic channel allocated to the connection. For an overview of GSM channels see section *Control of Input and Output Signals* on page 4.72 ff. In GSM900 the CMU can use all three sub-bands (P-GSM, E-GSM, R-GSM), so care must be taken that the MS supports the selected *RF Channel*.

Remote control

```
CONFigure:BSSignal[:CSwitched][:TCH]:CHANnel <Channel>
```


Hopping

The *Hopping* softkey selects a frequency hopping sequence.

Off Switch off frequency hopping

A, B, C, D Selection of the hopping sequence referred to as A (or B or C or D)

Pressing the *Hopping* softkey twice opens the *Hopping Information* dialog:

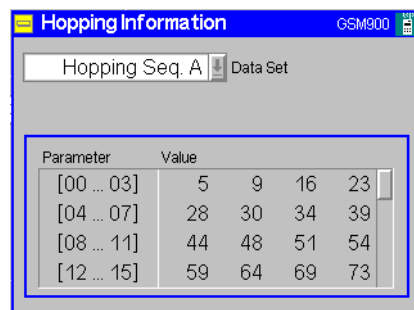

This dialog displays the current hopping sequences A to D. The four sequences can be selected in the *Data Set* list.

Note: *The hopping sequence can be (re)defined in the table-oriented version of the BS Signal tab while the CMU is in the signalling states Signal Off, Signal On, or Synchronized. See section Table-oriented Version on p. 4.174 ff.*

Remote control

```
PROCedure:SIGNalling[:CSwitched][:TCH][:SSLot]:
FHOPping:SEquence
CONFigure:BSSignal[:CSwitched][:TCH][:SSLot]:FHOPping:A
CONFigure:BSSignal[:CSwitched][:TCH][:SSLot]:FHOPping:B
CONFigure:BSSignal[:CSwitched][:TCH][:SSLot]:FHOPping:C
CONFigure:BSSignal[:CSwitched][:TCH][:SSLot]:FHOPping:D
```

Timeslot

The *Timeslot* softkey determines the traffic channel timeslot number for the single slot circuit switched connection.

Remote control

```
PROCedure:SIGNalling[:CSwitched][:TCH][:SSLot]:TIMeslot
CONFigure:BSsignal[:CSwitched][:TCH][:SSLot]:TIMeslot
```

Softkey-oriented Version: Multislot Mode

The *Slot Mode* of the mobile can be set by means of the *Slot Mode* softkey before a call is established. While *Multislot* mode is selected, frequency *Hopping* is set to *Off* and the softkey-oriented version of the *BS Signal* tab determines

- A *Frequency Offset* by which the RF frequency of the BS traffic and control channel (BCCH) signal is modified
- The transmission *Mode*, *BCCH Level* and GSM channel number (*RF Channel*) of the CMU's Broadcast Control Channel (BCCH)
- The definition of the BS signal levels in all timeslots (*Slot Config.*) and the way they are defined (*Level Mode*)
- The GSM channel number (*RF Channel*) of the CMU's traffic channel (TCH)
- The *Main Timeslot* used for signalling and its GSM channel number (*Main Timeslot*)

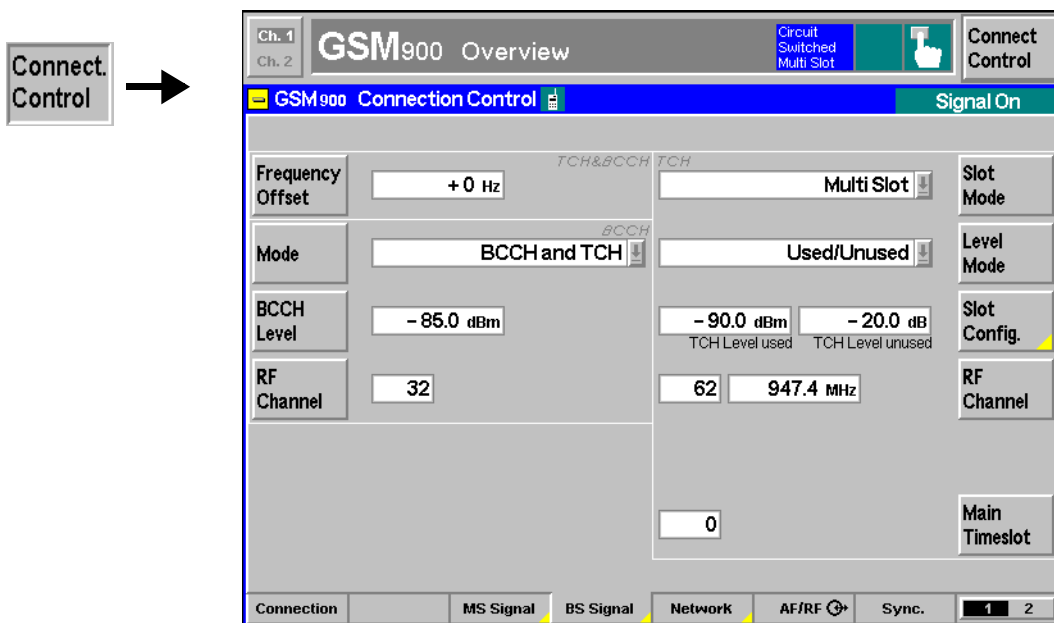


Fig. 4-75 Connection Control – BS Signal (panel, multislot)

The left half of the BS Signal tab contains the BCCH settings described in section [Softkey-oriented Version: Single Slot Mode](#) on p. 4.169 ff. The right half of the BS Signal tab contains the following TCH settings that are not described in section [Softkey-oriented Version: Single Slot Mode](#) on p. 4.169 ff.:

Level Mode

The *Level Mode* softkey determines how the downlink TCH levels are defined if the mobile is in *Multislot* mode:

Used/Unused All active (used) timeslots are at the same level and all inactive (unused) timeslots are at the same level. The *Used Timeslot Level* and the *Unused Timeslot Level* can be defined by means of the *Slot Config.* softkey or in the table-oriented version of the *BS Signal* or of the *MS Signal* tab; see also [Slot Configuration Editor](#) on p. 4.165.

Individual All active (used) timeslots can be set individually and all inactive (unused) timeslots are off (at zero level). The levels of the used timeslots can be defined in the table-oriented version of the *BS Signal* or of the *MS Signal* tab; see also [Slot Configuration Editor](#) on p. 4.165. They are expressed relative to a *Reference Level* which is defined by means of the *Slot Config.* softkey or in the table-oriented version of the *BS Signal* or of the *MS Signal* tab.

Remote control

CONFigure:BSsignal[:CSwitched][:TCH]:MSLot:LMode UUN | IND

Slot Config.

The function of the *Slot Config.* softkey depends on the *Level Mode* setting:

- In the *Used/Unused* level mode, the softkey defines the *Used Timeslot Level* and the *Unused Timeslot Level*.
- In the *Individual* level mode, the softkey sets the *Reference Level* for the individual timeslots.

Pressing the *Slot Config.* softkey twice opens the [Slot Configuration Editor](#) described on p. 4.165. The *Slot Configuration Editor* determines the levels in all uplink and downlink timeslots.

Remote control

CONFigure:BSsignal[:CSwitched][:TCH]:MSLot:SCONfig:UUNused
CONFigure:BSsignal[:CSwitched][:TCH]:MSLot:SCONfig:INDividual

RF Channel

The *RF Channel* softkey selects the GSM channel number of the main timeslot. For an overview of GSM channels see section *Control of Input and Output Signals* on page 4.72 ff.

Remote control

CONFigure:BSsignal[:CSwitched][:TCH]:CHANnel

Main Timeslot

The *Main Timeslot* softkey determines the timeslot that the MS and the BS/CMU use for signalling. The main timeslot can not be switched off in both the downlink and uplink; see [Slot Configuration Editor above](#).

Remote control

PROCedure:SIGNalling[:CSwitched][:TCH]:MSLot:MTimeslot
CONFigure:BSsignal[:CSwitched][:TCH]:MSLot:MTimeslot

Table-oriented Version

The table-oriented version of the *BS Signal* tab contains all BS signal settings of the softkey-oriented version (see sections [Softkey-oriented Version: Single Slot Mode](#) on p. 4.169 and [Softkey-oriented Version: Multislot Mode](#) on p. 4.172). Besides it defines:

- A *Random Frequency Offset* that can change its sign after each GSM frame.
- The additional RF channel *Aux TX*.
- The four *Hopping* sequences A, B, C, and D. The hopping sequences can be defined in the signalling states *Signal On*, *Signal Off* and *Synchronized*. They are valid if the mobile is in *Single Slot* mode only.

The active *Main Service* (*Circuit Switched* or *Packet Data*) is underlined in the *BS Signal* tab. In the following, general parameters and parameters for circuit switched mode are described. For a description of packet data parameters refer to section [RF Signals of the CMU \(Connection Control – BS Signal\)](#) on p. 4.207 ff.

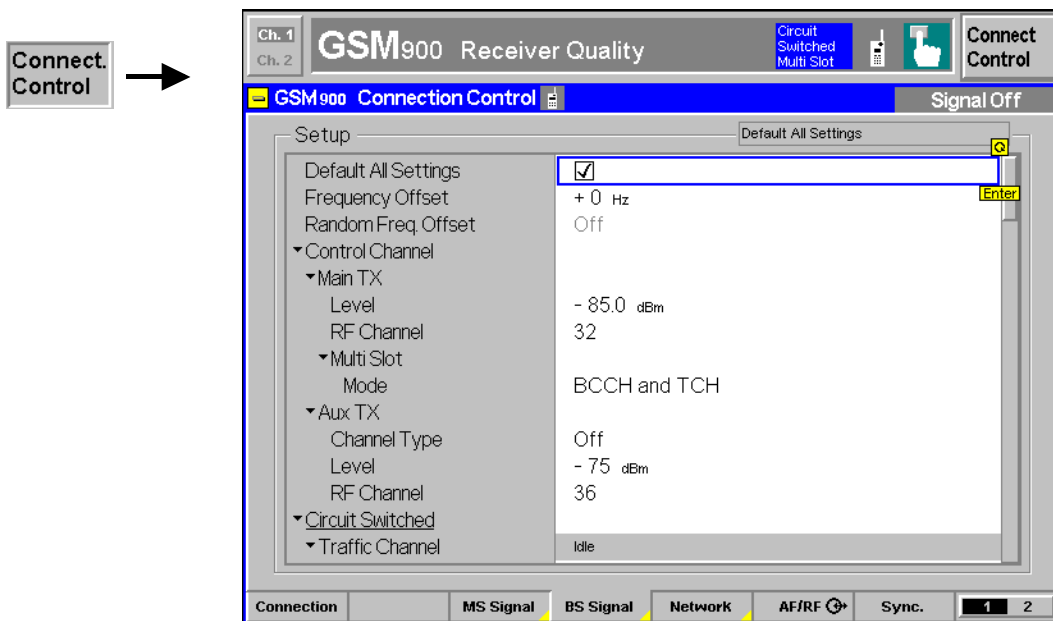


Fig. 4-76 Connection Control – BS Signal (table)

The following settings are not provided in the softkey-oriented versions of the *BS Signal* tab (see sections [Softkey-oriented Version: Single Slot Mode](#) on p. 4.169 and [Softkey-oriented Version: Multislot Mode](#) on p. 4.172 ff.).

Default Settings The *Default All Settings* switch assigns default values to all settings in the *BS Signal* tab (the default values are quoted in the command description in chapter 6 of this manual).

Remote control
-

Random Freq. Offset Enabling the *Random Frequency Offset* causes the (static) frequency offset (see p. 4.169) to randomly change its sign after each frame. More specifically, the probability of a sign change of the frequency offset between two consecutive frames is 50%. The random frequency offset has no effect if the static frequency offset is 0 Hz.

The random frequency offset must be set in the *CEST* (circuit switched main

service) or *TEST* (packet data main service) signalling states. It is automatically reset (switched off) each time that the connection is released.

A test case using the random frequency offset for determining the EGPRS usable receiver input level range is described in standard 3GPP TS 51.010-1.

Remote control

PROCedure:BSSignal:FM:DEVIation:RANDom:ENABLe ON | OFF

Aux TX

If option CMU-B95, *Additional RF Generator*, is fitted, the CMU provides a second RF signal Aux TX that can be used for the BCCH to set up and maintain a connection (circuit switched or packet data main service). The following Aux TX signal parameters can be set:

<i>Channel Type</i>	Switch the Aux TX signal on or off. If Aux TX is switched <i>Off</i> , the <i>Main TX</i> generator provides both the TCH and the BCCH.
<i>Level</i>	Aux TX signal level. This defines the <i>BCCH Level</i> of the softkey-oriented <i>BS Signal</i> tab if Aux TX is used for the BCCH. The Aux TX level is independent of the <i>Main TX</i> level.
<i>RF Channel</i>	Aux TX channel number. This defines the <i>BCCH Channel</i> of the softkey-oriented <i>BS Signal</i> tab if Aux TX is used for the BCCH. The Aux TX channel must be different from the TCH channel.

Note: *After a handover the BS Signal tab no longer shows the current Aux TX settings but displays "from other network", indicating that the values of the origin network have been left unchanged. Display of the current values is restored by returning to the target network or setting up the connection again.*

Remote control


CONFigure:BSSignal:CCH:AUXTx:CHANnel

CONFigure:BSSignal:CCH:AUXTx:CHTYpe

CONFigure:BSSignal:CCH:AUXTx:LEVel[:ABSolute]

Tips for using the Aux TX signal:

The main purpose of the Aux TX signal is to ensure a stable connection (continuous BCCH), while the Main TX signal provides a TCH in all 8 timeslots. This is particularly useful for packet data channels. The following hardware-related restrictions should be kept in mind:

- The RF output connector RF 3 OUT is not available if Aux TX is used. Selecting RF 3 OUT in the AF/RF  tab of the *Connection Control* menu causes an error message.
- The Aux TX channel must be different from the TCH channel. If a conflicting frequency is set, the CMU displays a notice box indicating that the setting will be auto-corrected. Conflicting frequency settings may occur in the *BS Signal* tab (TCH Channel, BCCH Channel, RF Channel, Hopping sequence Lists) but also indirectly when a connection is set up (*Signal On, Main Service*) or a *Power/PCL* measurement is performed.

If equal TCH and BCCH channel numbers are needed for a particular test, it is still possible to select the multislot mode *TCH or BCCH* (see p. 4.170) in order to obtain a TCH in all 8 timeslots.

Hopping sequence List ...

The table section *Hopping Sequence List...* configures the four frequency hopping sequences A, B, C, and D. Configured hopping sequences can be selected via the *Hopping* softkey in the signalling state *Call Established* (see section [Softkey-oriented Version: Single Slot Mode](#) on page 4.169).

In GSM networks, frequency hopping is primarily used for error protection in the radio transmission path. It consists of periodically switching over the transmission channels (except BCCH) to other carrier frequencies. The frequency changes after each radio frame so that the dwell time on each carrier frequency is 4.615 ms ("slow" frequency hopping).

Frequency hopping is controlled by the network: The BTS transfers a hopping sequence (hopping list) to the mobile station. From this list, the mobile station calculates the radio frequency channel for each TDMA frame number according to an algorithm described in GSM 05.02.

Four standard hopping lists *A*, *B*, *C*, and *D* are defined as default sequences, see command description in chapter 6. All four lists can be modified by entering up to 64 channel numbers. If a shorter list is desired, *Off* can be entered for the unused channel numbers.

Remote control

```
PROCedure:SIGNalling[:CSwitched][:TCH][:SSLot]:
                                FHOPping:SEquence
CONFigure:BSSignal[:CSwitched][:TCH][:SSLot]:FHOPping:A
CONFigure:BSSignal[:CSwitched][:TCH][:SSLot]:FHOPping:B
CONFigure:BSSignal[:CSwitched][:TCH][:SSLot]:FHOPping:C
CONFigure:BSSignal[:CSwitched][:TCH][:SSLot]:FHOPping:D
```

Network Parameters (Connection Control – Network)

The *Network* tab defines various parameters of the network that the CMU reports to the mobile station. Some functions of the menu depend on the *Main Service* (*Circuit Switched* or *Packet Data (GPRS)* operating mode) and most parameters can no longer be set after the *Call Established* signalling state is reached. As a consequence, settings may be disabled or even hidden in some operating modes of the CMU/MS test system. Exact information is provided in the command description in chapter 6 of this manual.

The present chapter describes the parameters related to circuit switched operation of the mobile phone. Tests in *Packet Data (GPRS)* mode require option CMU-K42. They are described in section [Network Parameters \(Connection Control – Network\)](#) on p. 4.207 ff.

The CMU provides a softkey-oriented version of the *Network* tab and a table-oriented version with extended functionality. The *Network* hotkey toggles between the two versions if it is pressed repeatedly.

Softkey-oriented Version

The softkey-oriented version of the *Network* tab selects the following traffic channel parameters:

- The channel coding and transmission rate (*Traffic Mode*)
- The bit pattern that the CMU transmits to the MS (*Bit Stream*)

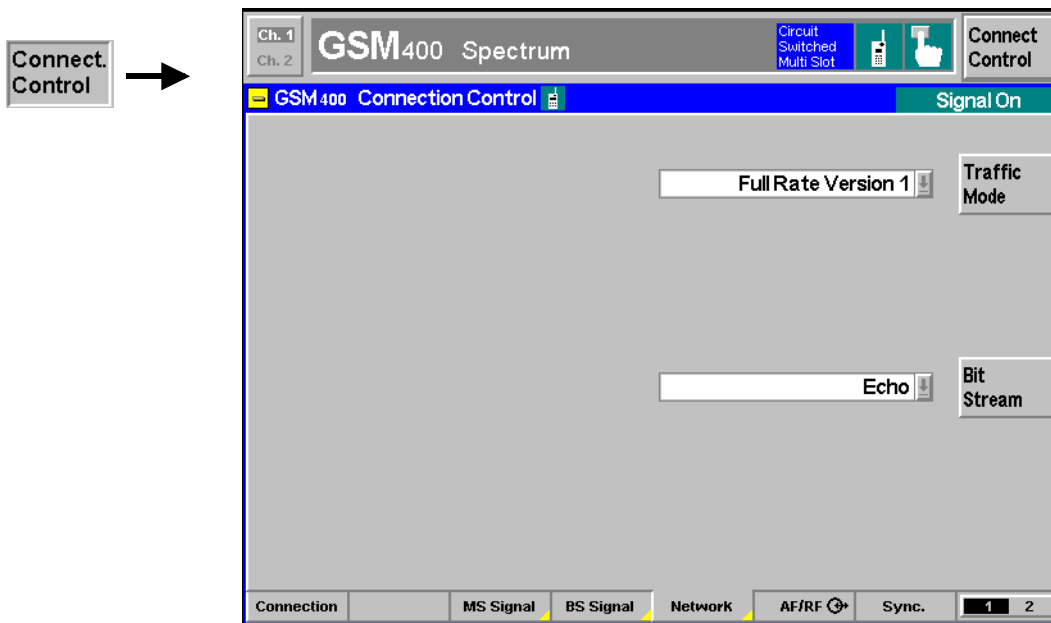


Fig. 4-77 Connection Control – Network parameters (panel)

Traffic Mode

The *Traffic Mode* softkey determines the speech or data channel coding and the transmission rate in the traffic channels:

- Full Rate Version 1* Use of standard full-rate speech coding
- Full Rate Version 2* Enhanced full rate speech coding
- Half Rate Version 1* Half-rate speech coding
- Full Rate Data 4800* Full-rate coding with fixed transmission rate in baud
- Full Rate Data 9600*
- Full Rate Data 14400*
- Half Rate Data 2400* Half-rate coding with fixed transmission rate in baud
- Half Rate Data 4800*

Note: A transmission mode can only be selected if the connected mobile station is equipped with the appropriate speech coder. If this is not the case, the CMU automatically sets the default speech coder (*Full Rate Version 1*).

The following GPRS/EGPRS traffic modes are compatible with reduced signalling mode only: If one of the modes is selected, the *Signalling Channel* is automatically set to *NONE* (see p. 4.183). The *Signalling Channel* can not be changed while one of the (E)GPRS traffic modes is active.

The (EGPRS) modes can be used to perform *Receiver Quality* tests specific to packet-data channels and to measure the Data Block Error Rate (DBLER). GPRS with full signalling and EGPRS requires options CMU-K42/-K43 (see section *GPRS Signalling and EGPRS* on p. 4.195 ff.).

- CS1 Test Mode* Coding according to coding scheme 1 (*CS1*) specified for GPRS.
- ...
- CS4 Test Mode* Coding scheme 4 (*CS4*) specified for GPRS.
- MCS1 Test Mode* Modulation and coding scheme 1 (*MCS1*) specified for EGPRS.
- ...

MCS9 Test Mode Modulation and coding scheme 9 (*MCS9*) specified for EGPRS.

The four coding schemes CS1 to CS4 are defined for the GPRS packet-data traffic channels (PDTCH). For most packet control channels, coding scheme CS1 is used. All coding schemes CS1 to CS4 are mandatory for MSs supporting GPRS.

The nine modulation and coding schemes MCS1 to MCS9 are defined for the EGPRS packet data traffic channels. For all EGPRS packet control channels the corresponding GPRS control channel coding is used. Mobiles supporting EGPRS shall support MCS1 to MCS9 in downlink and MCS1 to MCS4 in uplink.

The following traffic modes are used for tests on mobile phones equipped with an AMR (Adaptive Multi-Rate) codec, available with option CMU-K45, *AMR GSM for R&S CMU 200*:

AMR full rate Test of full rate AMR codec (FR_AMR) with 8 modes and a data rate up to 12.2 kbit/s

AMR half rate Test of half rate AMR codec (HR_AMR) with 6 modes and a data rate up to 7.95 kbit/s

The speech codecs must be supported by the MS under test. Selecting one of the AMR traffic modes opens an extended version of the *Network* tab with further AMR settings; see section [Adaptive Multi-Rate \(AMR\) Speech Codec](#) on p. 4.213 ff.

Remote control

```
CONFigure:NETWork[:CSwitched]:SMODE:TRAFFic
[SENSe]:MSSinfo:TRAFFic?
```

Bit Stream

The *Bit Stream* softkey determines the data transmitted on the traffic channel and the signal path.

PSR 2E9-1 Transmission of the pseudo random sequence to CCITT O.153

PSR 2E11-1 Transmission of the pseudo random sequence to CCITT O.153

PSR 2E15-1 Transmission of the pseudo random sequence to CCITT O.151

PSR 2E16-1 Transmission of a pseudo random sequence (Polynomial: $x^{16} + x^5 + x^3 + x^2 + 1$)

Loopback Loop-back with minimum delay: The CMU sends back all data received on the TCH after 1 speech frame.

Echo Loop-back with delay. The CMU sends back all data received on the TCH after 50 speech frames (Echo) without invoking the speech codec. If the CMU does not receive speech data in this operating mode, it automatically transmits a bit pattern, producing "silence" in the receiver of the mobile station.

Handset The CMU sends and receives speech frames that are routed to the internal speech codec (option CMU-B52). Analog signals are provided via the *SPEECH* connector at the front panel of the instrument. The analog input signal at connector *SPEECH* is amplified by 22.5 dB.

Handset Low The CMU sends and receives speech frames that are routed to the internal speech codec (option CMU-B52). Analog signals are provided via the *SPEECH* connector at the front panel of the instrument. The analog input signal at connector *SPEECH* is not amplified.

Decoder Cal The speech codec (option CMU-B52) provides a 1 kHz sinewave signal at its analog output. This signal is used for external calibration of the analog output paths.

Encoder Cal The speech codec (option CMU-B52) loops the input signal after digital/analog conversion directly to the analog output. This signal is

used for external calibration of the analog input paths.

Codec Cal The CMU sends and receives speech frames that are routed to the internal speech codec (option CMU-B52). Analog signals are provided via the *SPEECH* connector at the front panel of the instrument. The analog input signal at connector *SPEECH* is not amplified. The CMU sends a close loop message to the mobile station to activate an internal test loop.

Receiver Quality measurements require a pseudo random bit sequence to be transmitted on the traffic channel. This sequence can be set independently as *Bit Stream BER* (see p. 4.135); the bit stream set in the *Network* tab is not valid for *Receiver Quality* measurements.

Note: *Some Bit Stream settings require a particular configuration of the instrument. In particular, all settings after Echo (i.e. Handset, Handset Low, Decoder Cal., Encoder Cal, Codec Cal.) are not available if one of the following conditions is true:*

- *The speech codec (option CMU-B52) is not installed.*
- *One of the AMR traffic modes and DTX (MS) mode is active simultaneously.*
- *One of the full or half rate data traffic modes is active.*
- *The B52 Mode (see p. 4.181) is set to Multislot Support.*

Remote control

```
CONFigure:NETWork[:CSwitched]:SMODE:BITStream  
PROCedure:NETWork[:CSwitched]:SMODE:BITStream
```

Table-oriented Version

The table-oriented version of the *Network* tab contains all *Network* settings of the softkey-oriented version (see section [Softkey-oriented Version](#) on p. 4.176). Besides it defines:

- The *Network Support* of the CMU simulating a BS station and the *Main Service*. These network parameters can also be defined in the *Connection* tab; see section [Signalling Control without Signal \(State Signal Off\)](#) on p. 4.94.
- The function of the speech coder (*B52 mode*)
- The code numbers defining the *Network Identity*
- Configuration parameters for signalling (*Starting Time, Location Update, Default IMSI, Power Change, Signalling Channel, Loop Command*)
- The definition of the parameters of the mobile station that are requested by the CMU during *location update* or when a call is setup (*Requested Mobile Data*)
- *Timeouts*
- Parameters for calculation of the *Advice of Charge*
- *System Parameters*
- The used channels in the neighbor cells (*BA List*)

The active *Main Service* (*Circuit Switched* or *Packet Data*) is underlined in the *Network* tab. In the following, general parameters and parameters for circuit switched mode are described. For a description of packet data parameters refer to section [Network Parameters \(Connection Control – Network\)](#) on p. 4.208 ff.

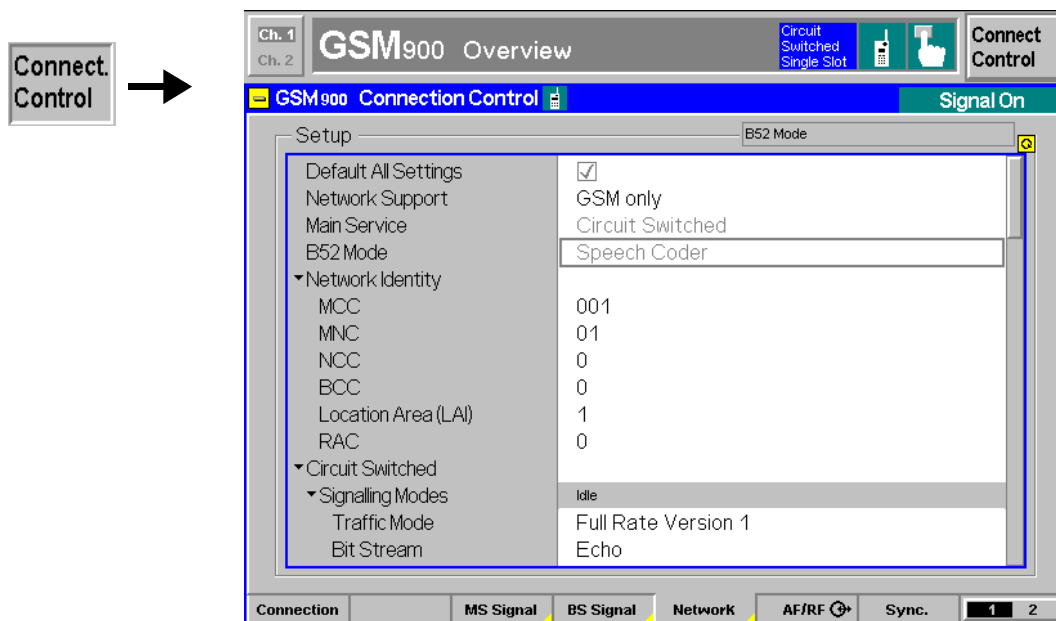


Fig. 4-78 Connection Control – Network parameters (table)

The following settings are not provided in the softkey-oriented version of the *Network* tab (see section [Softkey-oriented Version](#) on p. 4.176 ff.) or in the *Connection* tab.

B52 Mode	<p><i>B52 Mode</i> qualifies whether the speech codec (option CMU-B52) is reserved for audio measurements or for the BLER measurement:</p> <p><i>Speech Coder</i> The speech codec is reserved for audio measurements (see also section AF/RF Connectors (Connection Control – AF/RF) on p. 4.186 ff.). The Block Error Rate (BLER) measurement (see section Receiver Quality Measurements on p. 4.122 ff.) can be performed on one timeslot only.</p> <p><i>Multislot Support</i> The speech codec is used for the BLER measurement so that a result can be obtained in up to 4 timeslots. The speech codec is not available for audio tests, however, direct tests on audio signals are still possible with option CMU-B41, <i>Audio Generator and Analyzer</i> (see CMU 200/300 manual).</p> <p>Switchover of the <i>B52 Mode</i> takes some seconds. This function is not available unless option CMU-B52 is fitted.</p> <p>Remote control CONFigure:NETWork:B52Mode SCOD MSUP</p>
Network Identity	<p>The field <i>Network Identity</i> contains parameters characterizing the radio network that the CMU mimics:</p> <p><i>MCC</i> 3-digit Mobile Country Code, set to 001, <i>MNC</i> 2-digit Mobile Network Code, set to 01, (3-digit for GSM850 and GSM1900, set to 010) <i>NCC</i> Network Color Code, set to 0, <i>BCC</i> Base transceiver station Color Code, set to 0, <i>Loc. Area (LAI)</i> Location Area Code, set to 1. <i>RAC</i> Routing Area Code, set to 0</p> <p>Remote control CONFigure:NETWork:IDENTity:MCC <MCC> CONFigure:NETWork:IDENTity:MNC <MNC> CONFigure:NETWork:IDENTity:NCC <NCC> CONFigure:NETWork:IDENTity:BCC <BCC> CONFigure:NETWork:IDENTity:LAC <LAC> CONFigure:NETWork:IDENTity:RAC <RAC></p>
Signalling Modes	<p>The <i>Signalling Modes</i> table section determines signalling parameters that the CMU conveys to the mobile station to influence its function (the parameters for CMU signals, on the other hand, are set in the BS-Signal tab, see section RF Signals of the CMU (Connection Control – BS Signal) on p. 4.168 ff.). The parameters refer to:</p> <ul style="list-style-type: none"> • <i>Traffic Mode</i> and <i>Bit Stream</i>; see section Softkey-oriented Version on p. 4.176 ff. • Definition of a <i>Starting Time</i> for the channel change and the handover. • <i>Location Update</i> • Input of a mobile subscriber identity used for the location update (<i>Default IMSI</i>) • <i>Power Change</i> mode • <i>Signalling Channel</i> • Condition for closing the loop in the mobile station (<i>Loop Command</i>)
Starting Time	<p><i>Starting Time</i> determines a time interval after which the mobile station performs a new registration to the network after a channel, timeslot and fast power change (see <i>Power Change</i>). This parameter is also used for handover procedures from</p>

WCDMA to a GSM network. The value 0 frames means that no starting time is used.

Remote control
 CONFIGure:NETWork[:CSwitched]:SMODE:STIME <Frames>

Location Update *Location Update* determines in which cases the mobile performs a location update:

- *Always* each time the mobile station is switched on
- *Auto* only if required

A location update is normally used to signal to the base stations that the mobile station has changed its position. In this case, it is used to report to the CMU that the mobile station is switched on and ready for a call. After a location update of the mobile station, the signalling state *Synchronized* is reached. The parameter *Auto* implies that the attach bit is cleared. The mobile station will then only perform a location update if it does not seem to be registered. This may happen when the SIM card is changed or when the network parameters (e.g. *location area*) are changed in the CMU.

Remote control
 CONFIGure:NETWork[:CSwitched]:SMODE:LOCupdate ALways | AUTO

Default IMSI The *Default IMSI* section defines an international mobile subscriber identity (IMSI) which is used to set up the call to the mobile. It consists of:

MCC 3-digit mobile country code
MNC 2-digit mobile network code (3-digit for GSM850 and GSM1900)
MSIN 10-digit mobile subscriber id. No. (9-digit for GSM850 and GSM1900)

The IMSI of the mobile phone must be known before the call can be established. If the IMSI is known and reported to the tester as *Default IMSI*, it doesn't have to be determined during the location update; the call procedure will be faster. For this purpose, the international mobile subscriber identity request must be switched off (*IMSI Request = Off*).

Otherwise, the *Default IMSI* is overwritten by the respective parameters of the mobile station as soon as these are requested and transferred. For this purpose, the international mobile subscriber identity request must be switched on (*IMSI Request = On*).

The default setting for the *Default IMSI* is MCC = 001, MNC = 01, MSIN = 100000095 (Phase-2 mobile phones). For GSM850 and GSM1900, MNC = 010, MSIN = 100000095.

Remote control
 CONFIGure:NETWork[:CSwitched]:SMODE:IMSI:MCC <code>
 CONFIGure:NETWork[:CSwitched]:SMODE:IMSI:MNC <code>
 CONFIGure:NETWork[:CSwitched]:SMODE:IMSI:MSIN <code>

Power Change Mode The *Power Change Mode* controls the power change of the mobile station:

Slow Slow power change, controlled via SACCH (*slow associated control channel*),
Fast fast power change, controlled via FACCH (*fast associated control channel*).

Note: *The CMU does not check whether the new power has already been achieved at the end of the command (be careful with remote-control programs).*

Remote control
 CONFigure:NETWork[:CSwitched]:SMODE:PCHange FAST | SLOW

Signalling Channel

Signalling Channel determines which channel is used for signalling:

SDCCH Signalling via *stand-alone dedicated channel*: Call setup to traffic channel with an extra signalling channel (normal mode in the network), duration 4 s to 6 s

FACCH Signalling via *fast associated control channel*: Fast call setup with signalling on traffic channel, duration 1 s to 2 s

NONE No automatic connection setup: The mobile must be controlled by means of an external test interface so that the CMU reaches the *Call Established* state. This mode is analogous to *Reduced Signalling* in packet data mode; see [Service Selection](#) softkey on p. 4.199. It is automatically activated if one of the (E)GPRS traffic modes is selected (see [Traffic Mode](#) softkey on p. 4.177).

Remote control
 CONFigure:NETWork[:CSwitched]:SMODE:SChannel

Loop Command

Loop Command determines in which cases the close loop command (CLOSE_TCH_LOOP_CMD) is sent to the mobile station. Closing the loop causes the mobile station to return all received bits to the CMU. In the case of an open loop, the mobile station does not send back anything. Most but not all mobiles require a test SIM card to enter the loopback mode.

Enable If the test set sends a pseudo-random sequence (PSR2E9-1, PSR2E11-1, PSR2E15-1, PSR2E16-1, e.g. for *Receiver Quality* measurement), the loop is closed. If no pseudo-random sequence is sent (*Bit Stream = ECHO, Loopback, Handset*; see p. 4.178), the loop is left open. The loop type defined via [Loop](#) (see p. 4.163) is used.

Disable The CMU sends no close loop command (not even if a *Receiver Quality* measurement is active). Exception: See below.

Sensitivity The loop is closed only for *Receiver Quality* measurements. The loop type defined via [Loop](#) (see p. 4.163) is used.

Note: *If a data connection with pseudo-random data is active (see [Traffic Mode](#) softkey on p. 4.177), then the loop command is always closed.*

A closed loop is a prerequisite for a receiver quality test (bit-error-rate measurement). However, it can be useful for transmitter measurements as well, since it permits to obtain a pseudo-random-modulated transmit signal from the mobile in an easy way. If the CMU transmits a pseudo-random modulation, the close loop command also causes a pseudo-random modulation of the signal to be returned by the mobile station.

Remote control
 CONFigure:NETWork[:CSwitched]:SMODE:LCommand

Requested Mobile Data

Requested Mobile Data determines which signalling parameters of the mobile station are requested and displayed:

IMSI Request Request of the international mobile subscriber identity (*On*) or no request (*Off*).

IMEI Request Request of the international mobile station equipment identity (*On*) or no request (*Off*).

Authentication Switching the authentication request *On* or *Off*.

Request

Handover Request Request to determine whether the mobile station can hand over to another GSM radio network (e.g. GSM1800, GSM1900) (*On*) or not (*Off*). Dual band handover is always possible.

The IMSI request can be switched off if the IMSI of the mobile phone is known and reported to the tester as *Default IMSI* (see above). This speeds up the call setup procedure.

Remote control

```
CONFigure:NETWork[:CSwitched]:REQuest:IMSI ON | OFF
CONFigure:NETWork[:CSwitched]:REQuest:IMEI ON | OFF
CONFigure:NETWork[:CSwitched]:REQuest:AUTHenticate ON | OFF
CONFigure:NETWork[:CSwitched]:REQuest:HANdOver ON | OFF
```

Adaptive Multi-Rate (AMR)

Adaptive Multi-Rate (AMR) comprises the settings for the AMR codec. In addition to the settings provided in the softkey-oriented *Network* tab (see section [Adaptive Multi-Rate \(AMR\) Speech Codec](#) on p. 4.213 ff.) the following settings are provided:

Noise Suppression Switch noise suppression at the AMR codec of the mobile station on or off.

Remote control

```
CONFigure:NETWork[:CSwitched]:AMR:NSUPpression ON | OFF
```

Timeouts

The *Timeouts* field determines timeouts after which an interrupted radio link or an unsuccessful call to the mobile station is aborted:

Radiolink Timeout Mobile Time period after which a previously established but interrupted connection is dropped by the mobile station – number of missing SACCH blocks in the value range 4, 8, 12, ... 24, ... 64

Radiolink Timeout Testset Time period after which an existing, but interrupted connection is aborted by the CMU – number of missing SACCH blocks in the value range 4, 5, 6, ... 24, ... 64. In the setting Off, the CMU does not abort the connection; this corresponds to an infinite timeout period

MTC Timeout Maximum time period in seconds during which the phone is ringing in the case of call to mobile (mobile terminated call). If the mobile is not picked up, the CMU returns to the *Synchronized* state. Values from 0 s to 10 s to 60 s can be set. In the Off setting, the number of the mobile station is dialed for an unlimited period of time; this corresponds to an infinite timeout

Timeouts are of particular importance in remote-control mode. For example, the remote-control program will not be able to continue if the keyboard of the mobile station is defective and the call can therefore not be answered by the mobile station.

Remote control

```
CONFigure:NETWork[:CSwitched]:TIMEout:RLINK[:MOBILE] <Time>
CONFigure:NETWork[:CSwitched]:TIMEout:RLINK:TESTset <Time>
CONFigure:NETWork[:CSwitched]:TIMEout:MTC <Time>
```

Advice of Charge

Advice of Charge comprises the settings for the advice of charge on the mobile station:

Enable CMU sends (*On*) or does not send (*Off*) data for the advice of charge to the mobile station,
E1 ... E7 Formulas for calculation of the advice of charge according to GSM specification. Numerical input in the value range 0 to 8191.

Remote control

```
CONFigure:NETWork[:CSwitched]:AOCharge:ENABLE ON | OFF
CONFigure:NETWork[:CSwitched]:AOCharge <Value1>, .. ,<Value7>
```

Slot Offset

Slot Offset defines the DL timeslot that the mobile is to loopback to the uplink main timeslot. The slot offset is counted from the main timeslot number n_{MTS} : A slot offset SO ($-7 \leq SO \leq +7$) means that the selected DL timeslot no. equals to $(n_{MTS} + SO)$. Moreover, the periodicity of timeslots in the GSM TDMA frame scheme implies that *Slot Offset* settings differing by 8 are equivalent.

The DL timeslot no. $(n_{MTS} + SO)$ is equal to the timeslot number (*TN*) parameter in the CLOSE_Multi-slot_LOOP_CMD (GSM04.14).

Remote control

```
CONFigure:NETWork[:CSwitched]:SOFFset <Slots>
```

System Parameters

System Parameters determines system parameters for the radio link:

Band Indicator Indication of the band GSM1800 or GSM1900 that the MS under test can use. If the MS supports this parameter and operates in either one of the GSM1800 or GSM1900 bands, all GSM channels are interpreted according the *Bandwidth Indicator*. The information on the band is essential because the two band partially use the same channel numbers for different frequencies.

BS-AG-BLKS-RES Number of data blocks (access grant channel) reserved for the AGCH access (basic services access grant blocks reserved) in the value range 0 to 7

BS-PA-MFRMS Interval between two paging requests of the CMU in multiframes (basic service paging blocks available per multiframes) and in the value range 2 to 9

Paging Reorganisation Mobile does not switch to the idle mode so it can be reached by all services (setting *Off*). In this state, the spurious emission of a mobile can be measured using a spectrum analyzer.

T3212 Value of the timer T3212 of the periodic location updating procedure in decihours. In the *Off* setting, no periodic location update is performed.

Cell Access Enabling (Not Barred) or disabling (Barred) a radio cell for mobile stations

Barring a radio cell means that the mobile station cannot synchronize to it and cannot perform a location update.

Remote control

```
CONFigure:NETWork:SYSTEM:BINdicator G18 | G19
CONFigure:NETWork:SYSTEM:BSAGblkres <Blocks>
CONFigure:NETWork:SYSTEM:BSpamfrms <Frames>
CONFigure:NETWork:SYSTEM:BSPreorganis ON | OFF
CONFigure:NETWork:SYSTEM:PLUUpdate <Value>
CONFigure:NETWork:SYSTEM:CAccess BARred | NBARred
```

BA List *BA List* configures the list of used channels in the neighbor cells (*BA list, BCCH allocation list*). The BA list is of significance for selecting the radio cells of the mobile station. Up to 16 entries are possible in the list (i.e. 16 used channels in 16 neighbor cells).

00 ... 15 Current number of adjacent cell. It is possible to enter either no channel (*Off*) or one of the GSM channels 0 to 1023.

List Sorted The channel numbers of the BA list are output in increasing order (*On*) or in arbitrary order (*Off*).

Note: *Irrespective of the current GSM band, channel numbers in the range 0 to 1023 can be used to configure the BA list. Each entry is interpreted to denote a GSM channel of the current GSM band corresponding to the active function group.*

Remote control
 CONFigure:NETWork:BAList <Channel1>{, ... ,<Channel15>}

3G Neighbor Cell Description *3G Neighbor Cell Description* defines the 3G (UMTS) neighbor cell description information that can be transferred to the MS in System Information 2ter. The description informs the MS about the existence and about the essential properties of a neighbor cell, e.g. to prepare a handover. The following settings are provided:

Enable If the setting is *On* the 3G neighbor cell description including the selected UARFCN and primary SC is transferred on the BCCH.

FDD ARFCN Band 1 UTRAN Radio Frequency Channel number of the 3G neighbor cell.

Primary Scrambling Code Primary SC characterizing the 3G neighbor cell.

Remote control
 CONFigure:NETWork:SI2Quater:NC3G:ENABLE
 CONFigure:NETWork:SI2Quater:NC3G:FDD:ARFCn
 CONFigure:NETWork:SI2Quater:NC3G:FDD:PSCode

AF/RF Connectors (Connection Control – AF/RF)

The *AF/RF*  tab selects the connectors for RF and AF signals. This includes the setting of

- The RF input and output at the CMU (*RF Output, RF Input*)
- An external attenuation at the connectors (*Ext. Att. Output, Ext. Att. Input*)
- The input source of the CMU speech encoder and the output destination of its speech decoder

If the *Audio Generator and Analyzer* (option CMU-B41) is not fitted, the speech codec (option CMU-B52) is connected to the 9-pole *SPEECH* (handset) connector on the CMU front panel, see chapter 8 of the CMU operating manual. The *Speech Encoder* and *Speech Decoder* settings are not available.

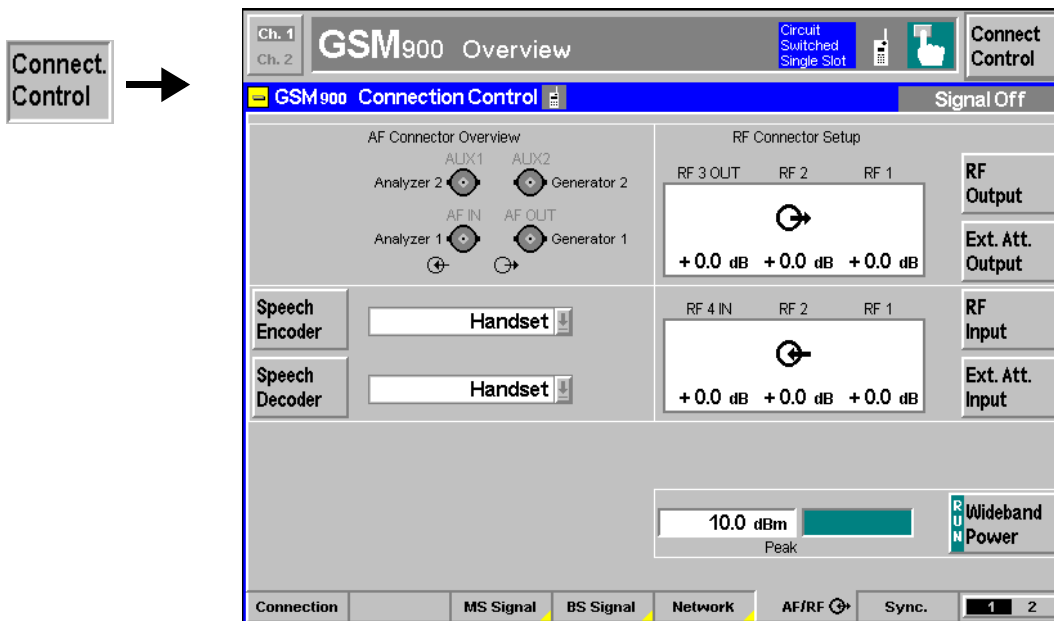


Fig. 4-79 Connection Control – AF/RF connectors

With the exception of the *Speech Encoder* and *Speech Decoder* routing, all functions of this menu are described in section *GSM400/850/900/1800/1900-MS Non Signalling* on page 4.83.

Speech Encoder

The *Speech Encoder* softkey selects the input source for the CMU speech encoder (option CMU-B52). The following two input sources are available:

- Generator* Use the audio generator signal which is also fed to the *AF OUT* connector on the CMU front panel
- Handset* Use the signal of the 9-pole *SPEECH* (handset) connector on the CMU front panel

Remote control

ROUTE:SPENcoder[:INPut] HANDset | GENERator

Speech Decoder

The *Speech Decoder* softkey selects the output destination for the CMU speech decoder (option CMU-B52). The following output destinations are available:

- Handset* Route speech decoder output to the 9-pole *SPEECH* (handset) connector on the CMU front panel
- Analyzer* Route speech decoder output to audio analyzer. The standard analyzer input socket *AF IN* is disabled (*Off*).
- Analyzer 2* Route speech decoder output to secondary audio analyzer. The standard secondary analyzer input socket *AUX 1* is disabled (*Off*).
- Analyzer Both* Route speech decoder output to primary audio analyzer. The standard primary and secondary analyzer input sockets *AF IN* and *AUX 1* are disabled (*Off*).

The primary and secondary audio circuits are described in detail in chapter 4 and 6 of the CMU200/300 operating manual.

Remote control

ROUTE:SPDecoder[:OUTPut] HANDset | ANALyzer | ANA2 | ABOTH

AF Connector Overview

The *AF Connector Overview* shows the destination of the input signals fed in via *AF IN* and *AUX 1* and the signal sources for the two audio output connectors *AF OUT*

and AUX 2. The routing of input and output signals does not depend on the *Speech Encoder* settings but is a function of the *Speech Decoder* output destination. In the default configuration (*Speech Decoder = Handset*), the connectors AF IN and AF OUT are used as input and output for the primary audio circuit (Analyzer 1, Generator 1). AUX 1 and AUX 2 are used as input and output for the secondary audio circuit (Analyzer 2, Generator 2). If the *Speech Decoder* output is routed to one of the Analyzers, it replaces the external audio input signal. The corresponding input connector is disabled (*Off*).

Reference Frequency (Connection Control – Sync.)

The *Sync.* tab determines the reference signal for synchronization. This includes

- The selection of internal or external reference frequency
- The output mode for the reference frequency (*F REF OUT 2*)

The functions of this menu are described in the section *GSM400/850/900/1800/1900-MS Non Signalling* on page 4.86 ff.

Trigger (Connection Control – Trigger)

The *Trigger* tab is part of the second group of tabs in the *Connection Control* menu. It is accessible after pressing the 1 / 2 toggle hotkey once. Pressing 1 / 2 again switches back to the first group of tabs described above.

The *Trigger* tab defines the trigger condition for the measurement and the routing of trigger signals.

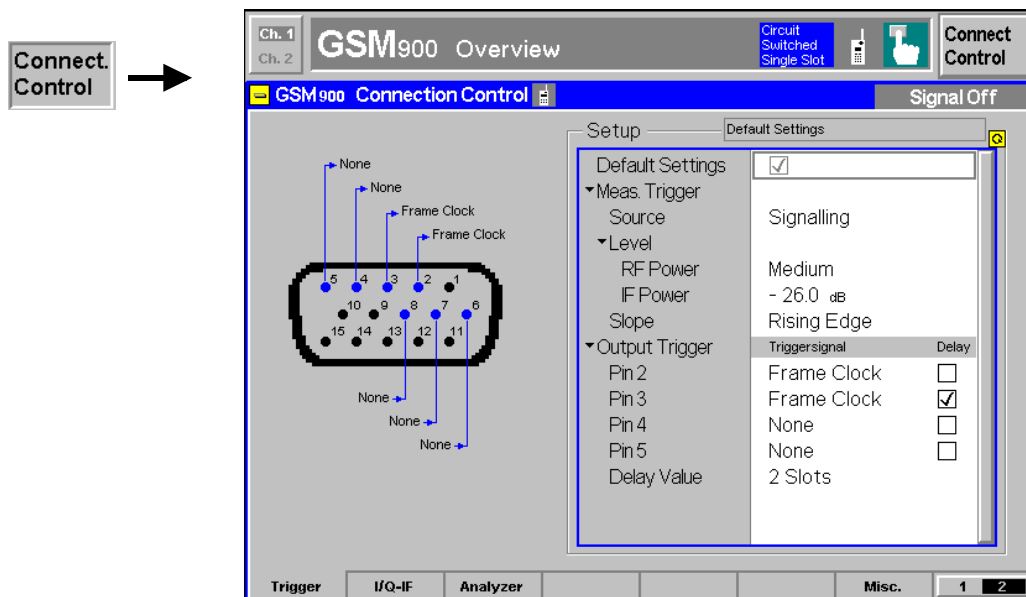


Fig. 4-80 Connection Control – Trigger

Default Settings The *Default Settings* checkbox assigns the default setting to all functions in the *Trigger* tab (the default values are quoted in the command description in chapter 6 of this manual).

Remote control TRIGger[:SEquence]:DEFault ON | OFF

Trigger – Source	Source selects a signal to trigger the measurements:
	<p><i>Free Run</i> Trigger by the GSM input signal: The CMU detects the burst; the exact timing is given by the training sequence. This setting may slow down the measurements. <i>P/t Multislot</i>, <i>Power/Slot</i>, and <i>Power/Frame</i> measurements can not be performed in <i>Free Run</i> trigger mode.</p> <p>Note: <i>In Spectrum measurements, Free Run trigger mode means that the measurement is not correlated with the burst timing. The Switching spectrum must be measured with another trigger source, e.g. IF Power trigger.</i></p> <p><i>RF Power</i> The measurement is triggered by the level of the incoming burst (rising or falling edge; see <i>Slope</i> setting below), the trigger level is specified via the <i>Level</i> parameters. Wideband power trigger on the RF Front End.</p> <p><i>IF Power</i> The measurement is triggered by the level of the IF signal (rising or falling edge; see <i>Slope</i> setting below), the trigger level is specified via the <i>Level</i> parameters. Narrow-band IF power trigger.</p> <p><i>Signalling</i> Triggering by the signalling unit of the instrument, according to the expected frame timing of the RF signal re-transmitted by the MS under test (uplink frame trigger). The uplink frame trigger is always available while the <i>Signalling</i> test mode is active and the CMU transmits an RF signal (i.e. except in the signalling state <i>Signal Off</i>).</p>

The uplink frame trigger signal is also fed to pin 2 of the AUX 3 connector at the front of the instrument where it can be tapped off to synchronize external devices; see *Output Trigger* below. It consists of a high-pulse TTL signal with its rising edge at the beginning of timeslot 0 of each MS TDMA frame except the idle frames and with a length of exactly 1 timeslot (577 µs).

For the *Free Run*, *RF Power* and *IF Power* settings the input signal must be a burst signal. Triggering via an external signal is only possible in the *Non Signalling* mode. In contrast, *Signalling* measurements must be triggered by the signal from the signalling unit or from the mobile phone.

RF Power trigger signals have a small dynamic range which may not be sufficient for triggering. It is recommended to trigger by the *IF Power* instead.

Some measurements require a particular trigger source. E.g., the *Timing Advance Error* in the *Modulation* menu can be measured with *Signalling* trigger mode only.

Remote control

```
TRIGger[:SEquence]:SOURce
    SIGNalling | FRUN | RFPower | IFPower
```

Level The *Level* section defines the trigger thresholds if the measurement is triggered by the *RF Power* or *IF Power* (see *Source* function above) respectively. Both thresholds are defined relative to the maximum input level set in the *Analyzer* tab (see section *Input Path (Connection Control – Analyzer)* on p. 4.191 ff.). The *Level* settings have no influence on *Free Run* or *External* trigger measurements.

Note: *The trigger levels are always relative to the current maximum input level. If Max. Level is set manually (RF Mode = Manual), the current input level is constant and equal to the setting value. In autoranging mode (RF Mode = Auto), the current maximum input level is dynamically adapted to the measured RF input level; the trigger levels change accordingly.*

The **RF Power** trigger threshold is the RF input signal level (*Wideband Power*, see p. 4.96) beyond which the trigger condition is satisfied and a measurement is initiated.

<i>Low</i>	Low trigger threshold, equal to approx. the <i>RF Max. Level</i> –26 dB
<i>Medium</i>	Medium trigger threshold, equal to approx. the <i>RF Max. Level</i> – 16 dB
<i>High</i>	High trigger threshold, equal to approx. the <i>RF Max. Level</i> –6 dB

The **IF Power** trigger threshold is the IF trigger signal level beyond which the trigger condition is satisfied and a measurement is initiated. The *IF Power* input value defines the trigger threshold relative to the maximum input level:

$$IF\ power\ trigger\ threshold = \langle RF\ Max.\ Level \rangle + \langle IF\ Power \rangle$$

Remote control

```
TRIGger[:SEquence]:THReshold:RFPower LOW | MEdium | HIGH
TRIGger[:SEquence]:THReshold:IFPower <Power>
```

Slope *Slope* qualifies whether the trigger event occurs on the *Rising Edge* or on the *Falling Edge* of the trigger signal. The setting has no influence on *Free Run* measurements.

Due to the polarity and the length of the uplink frame trigger signal (see *Source = Signalling* above), changing the slope from *Rising Edge* to *Falling Edge* corresponds to the introduction of a 1-slot delay of the measurements.

Remote control

```
TRIGger[:SEquence]:SLOPe POSitive | NEGative
```

Output Trigger *Output Trigger* assigns the uplink frame trigger signal (or no signal) to the AUX 3 connector and defines a delay time. The settings are only valid for *Signalling* trigger source; see above.

Pin 2/3/4/5 The frame trigger signal can be assigned to any of the pins no. 2 to 5 of the AUX3 connector. Multiple assignments are allowed. The setting *None* means that no output signal is applied to a pin. If the *Delay* box is checked, the trigger signal at one pin is delayed by an integer number of slots.

Delay Sets a delay time (integer number of 0 to 7 slots) for the trigger signal. The undelayed frame trigger signal coincides with the beginning of timeslot 0 of the MS signal, so *Delay* can be used to generate a trigger signal with its rising edge at the beginning of any TDMA timeslot.

Remote control

```
TRIGger:OUTPut:PIN<nr>:SIGNal
TRIGger:OUTPut:PIN<nr>:DELay:ENABle
TRIGger:OUTPut:DELay:VALue
```

I/Q-IF Interface (Connection Control – I/Q-IF)

The *I/Q-IF* tab is part of the second group of tabs in the *Connection Control* menu. It is accessible after pressing the 1 / 2 toggle hotkey once. Pressing 1 / 2 again switches back to the first group of tabs described above.

The *I/Q-IF* tab configures the signal paths for I/Q and IF signals. With option CMU-B17, *I/Q and IF Interfaces*, I/Q and IF signals can be used in the framework of *RF* measurements and in many network tests. The functions of this menu are described in the section *GSM400/850/900/1800/1900-MS Non Signalling* on page 4.91 ff.

Input Path (Connection Control – Analyzer)

The *Analyzer* tab is part of the second group of tabs in the *Connection Control* menu. It is accessible after pressing the 1 / 2 toggle hotkey once. Pressing 1 / 2 again switches back to the first group of tabs described above.

The *Analyzer* tab configures the RF input path by defining:

- The maximum level that the CMU can measure (*RF Max. Level*) and the way it is defined (*RF Mode*)
- An attenuation or gain factor (*RF Attenuation*)
- The timeslot that is measured in all multislot configurations (*Meas. Slot*)

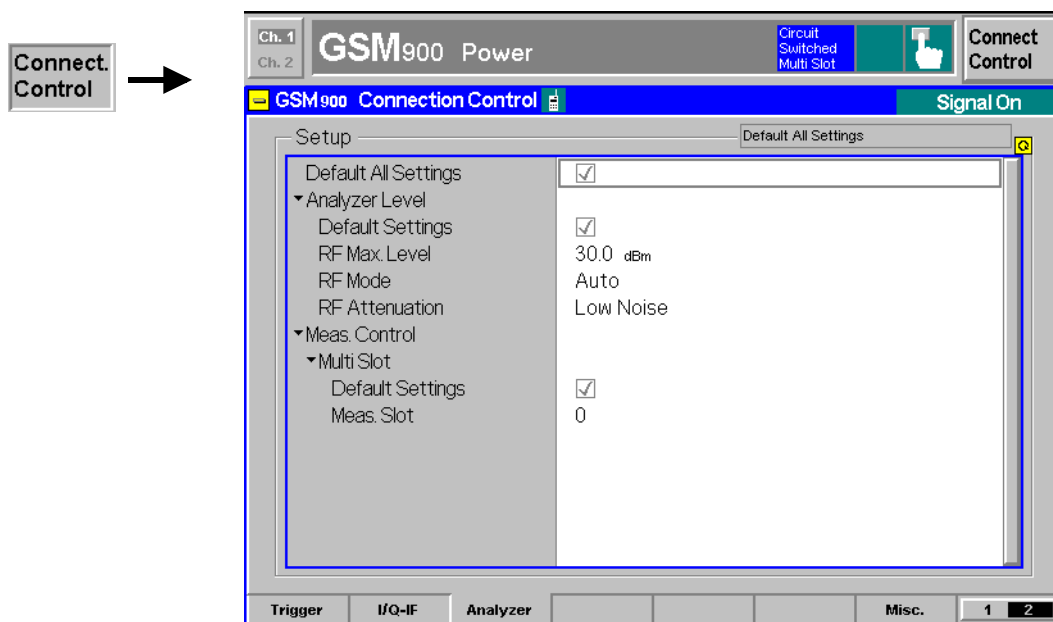


Fig. 4-81 Connection Control – Input level

Default Settings The Default Settings switch overwrites all settings in the *Input Level* tab with their default values. See command description in chapter 6.

```
Remote control
[SENSe:]LEVel:DEFault
MCONTrOl:DEFault
```

Analyzer Level The *Analyzer Level* section configures the RF input path of the CMU. The functions are described in section *GSM400/850/900/1800/1900-MS Non Signalling*. In contrast to the *Non Signalling* mode, the *Signalling* input level can be set corresponding to the PCL of the connected mobile phone.

Analyzer Level – RF Mode The *RF Mode* field qualifies how the maximum input level that can be measured (*RF Max. Level*) is defined. *RF Max. Level* is displayed in the parameter lines above the graphical measurement menus.

- Manual* Manual input of maximum input level
- PCL* Input level corresponding to the power control level of the mobile station.
- Auto* Automatic setting of maximum input level (*autoranging*) according to average burst power of applied signal.

Remote control

[SENSe:]LEVEl:MODE MANual | PCL | AUTOMATIC

Multi Slot Meas. Slot

The *Multi Slot – Meas. Slot* parameter defines in which GSM timeslots MS tests are performed. The *Meas. Slot* setting only affects the measurements performed on the CMU. It can be changed any time without any further impact on the MS under test and the connection.

- If *Slot Count* is equal to 1, then the measurement extends over the *Meas. Slot* plus an appropriate display margin.
- If *Slot Count* is equal to 2, then the timeslot preceding the *Meas. Slot* (*Meas. Slot – 1*) and the *Meas. Slot* are measured.
- If *Slot Count* is equal to 3 (4), then *Meas. Slot – 1*, *Meas. Slot* and the next timeslot (the two next timeslots, *Meas. Slot + 1* and *Meas. Slot + 2*) are measured.

The beginning of the *Meas. Slot* defines the origin (symbol no. 0) of the time axis. The *Meas. Slot* is also the reference for the *Timing* measurement; it must be active to obtain valid measurement results.

The relation between the *Meas. Slot*, the *Slot Count* and the measured time range for a signal with three active timeslots is shown in Fig. 4-82 below.

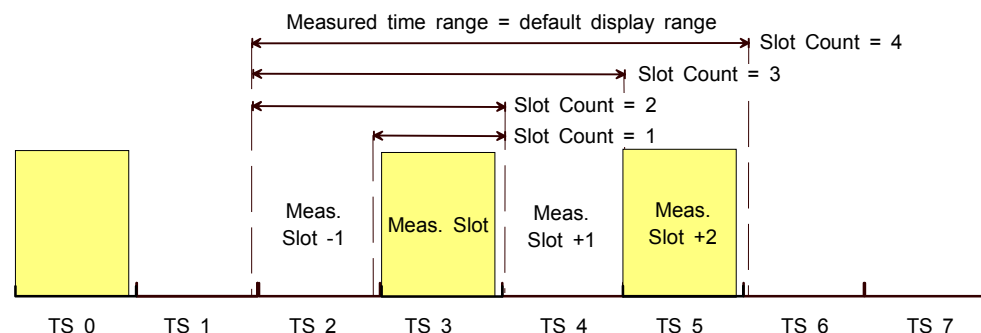


Fig. 4-82 Meas. slot and slot count (for Meas. Slot = 3)

The display range is adapted to the Slot Count and Meas. Slot settings by default but can be modified by means of the *Display Marker – Time Scale* and *Display Marker – Default Scale* hotkeys.

Note: To ensure that the CMU generally measures an occupied timeslot, the Meas. Slot. is set equal to the **Fehler! Unbekanntes Schalterargument.** (see p. 4.166) upon a reset or whenever a connection is set up. In the *Call Established* and *TBF Established* states, the main timeslot and Meas. Slot can be changed independently. In a dual-band handover, the slot configuration of the target network is activated so that the Meas. Slot is set equal to the main timeslot of the target network.

Remote control
 CONFigure:MCONtroll:MSLot:MESLot

Display Control (Connection Control – Misc.)

The *Misc.* tab is part of the second group of tabs in the *Connection Control* menu. It is accessible after pressing the 1 / 2 toggle hotkey once. Pressing 1 / 2 again switches back to the first group of tabs described above.

The *Misc.* tab defines in what instances the *Connection Control* popup menu is automatically opened or closed (*Connect. Control Guidance*).

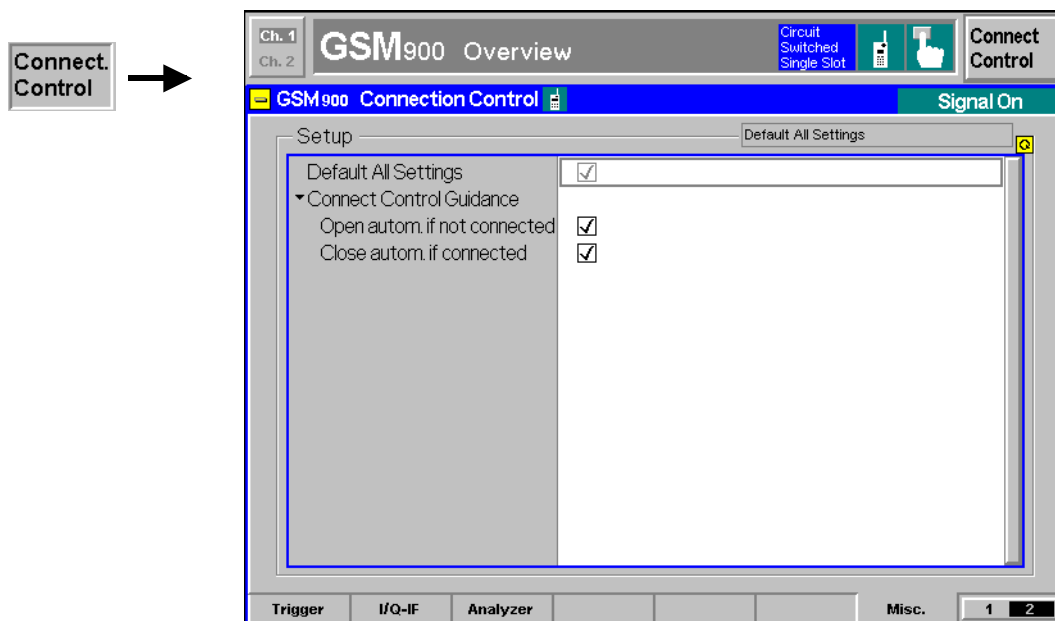


Fig. 4-83 Connection Control – Misc.

Default Settings The *Default All Settings* switch sets all parameters of the *Misc* tab to their default values (see command description in chapter 6).

Remote control No command; screen configuration only.

Connect. Control Guidance Defines in what instances the *Connection Control* popup menu is automatically opened or closed:
Open autom. if not connected

In the *Open automatically* mode, the *Connection Control* menu is automatically opened each time the GSM function group is accessed in *Signalling* test mode, each time a measurement menu is opened while the DUT is not connected and each time a connection is lost. Otherwise the menu must be opened manually.

Close autom. if connected

In the *Close automatically* mode, the *Connection Control* menu is automatically closed as soon as the CMU reaches the *Connected/Call Established* state. Otherwise the menu must be closed manually.

Remote control No command; screen configuration only.

Options and Extensions

The features described in this section require the installation of additional software options; for a complete list of deliverable options refer to the data sheet.

GPRS Signalling and EGPRS (Options CMU-K42/K43)

General Packet Radio Service (GPRS) is one of the extensions of GSM Phase 2+ that are aimed to increase the obtainable data transfer rate. To reach this objective, GPRS relies upon the following key features:

1. Data transfer is packet oriented. In addition, transmission takes place only when there are actually data packets to be transmitted (Temporary Block Flow, TBF): The radio resources for each subscriber are dynamically allocated. Compared to circuit switched data transfer where a fixed physical radio channel is continuously occupied by one call, the radio resources can be used more efficiently.
2. GPRS is a multislot solution: Up to 8 timeslots per TDMA frame can be allocated to a single subscriber.
3. Redundant data transmission required for error protection can be minimized by using different channel coding schemes CS1 to CS4.
4. GPRS can be combined with 8PSK-modulated traffic channels to form Extended GPRS (EGPRS). In EGPRS nine different modulation and coding schemes MCS1 to MCS9 are specified.
5. As a GSM extension, GPRS always works in combination with the existing circuit switched network and does not change or replace any of the existing GSM features. GPRS and GSM services can be used alternately.

The characteristics of the GPRS technology outlined above determine the test requirements for GPRS mobile phones and the GPRS-specific test functionality of the CMU:

1. A GPRS-specific test mode for transmitter tests and a loopback test mode for BER tests has been defined, see [Service Selection](#) softkey on p. 4.199. The CMU is capable of performing *Receiver Quality* measurements on packet switched data traffic channels (PDTCHs) and evaluates the Block Error Ratio (BLER) and the Data Block Error Rate (DBLER). For background information refer to section [BER Tests of PDTCHs](#) on p. 4.124.
2. The CMU is able to measure a mobile station that operates in multislot mode (see [Slot Mode](#) softkey on p. 4.162). In particular, the tester measures and displays the power versus time and performs a limit check in up to 4 consecutive timeslots (see section [P/t Multislot](#) on p. 4.111 ff.). In contrast to circuit switched operation, no single-slot packet data mode is available.
3. The channel coding schemes CS1 to CS4 that a GPRS mobile station under test will use and the modulation and coding scheme MCS1 to MCS9 for an EGPRS mobile station can be set in the *Network* tab of the *Connection Control* menu (*Coding Scheme*; see section [Network Parameters \(Connection Control – Network\)](#) on p. 4.208).
4. The GPRS signalling states and the procedures for setting up a data connection are analogous to the corresponding circuit switched functionality. GPRS is an additional mode of the mobile phone so that the circuit switched GSM and the GPRS signalling schemes are largely independent from each other. Any time before a call or a TBF connection is established, the CMU is able to switch over between circuit switched GSM and GPRS mode (see [Fig. 4-84](#) on p. 4.197).

Setup of a Connection (Popup Menu Connection Control – Connection)

The menu group *Connection Control* controls signalling (setup and release of a connection, services, signalling parameters) and configures the inputs and outputs with the external attenuation values and the reference frequency.

The term signalling denotes all procedures that are necessary for setting up and releasing a connection and for controlling the connection in the mobile radio network. In the case of a GSM mobile phone supporting GPRS, both a circuit switched GSM call connection and an (E)GPRS connection for data transfer can be set up. In addition a special GPRS test mode has been defined for production tests of GPRS mobile phones. The five GSM signalling states *Signal Off*, *Signal On*, *Synchronized*, *Alerting*, *Call Established* of the CMU are therefore complemented by the following GPRS signalling states:

<i>Signal Off</i>	<u>CMU transmits no signal.</u>
<i>Idle</i>	CMU transmits a GSM control channel signal. A GPRS mobile station can detect this signal, synchronize to its timing and frequency and then read the system information. In particular, the MS learns whether the CMU (representing the current cell in a real network) supports GPRS services and can initiate a GPRS attach.
<i>Attach in Progress</i>	Transitory state: GPRS attach is being performed. This step is always initiated by the mobile station under test. The MS identifies itself with its GSM identity (IMSI, Temporary Link Level Identity, TLLI) and indicates its presence to the CMU for the purpose of using GPRS Point to Point (PTP) services. <u>This can be done any time while the CMU is in the <i>Idle</i> state.</u>
<i>Detach in Progress</i>	Transitory state: GPRS detach is being performed. Like GPRS attach, the GPRS detach procedure is always initiated by the mobile station under test.
<i>Attached</i>	The mobile station is GPRS-attached. From this state, it is possible to initiate a TBF connection.
<i>Connecting TBF</i>	Transitory state: The CMU attempts to access the <i>TBF Established</i> state. Unlike the GPRS attach, the TBF connection must be initiated by the CMU.
<i>TBF Established</i>	The mobile station is in the multislot test mode A or B for GPRS specified in 3GPP TS 44.014 (see section 4.198 on p. 4.198). In this mode, it continuously transmits RLC data blocks until the TBF connection is released.
Note:	<i>The TBF Established state was specified especially in order to facilitate production tests. Reaching this state is the goal of the CMU's GPRS signalling scheme. The CMU signalling states Idle, Attached and TBF Established must not be confused with the mobility management states Idle, Standby and Ready defined in GSM 03.60.</i>

A number of actions or control commands which can be initiated either by the CMU (e.g. *Signal On*, *Signal Off*) or by the mobile station (e.g. *MS Attach/Detach*) switch between the different signalling states. In [Fig. 4-84](#) on p. 4.197, dashed lines represent processes initiated by the mobile station.

Activating (E)GPRS The CMU mimics a real GSM base station which may or may not support (E)GPRS. The instrument provides the two *Network Support* modes *GSM*, *GSM + GPRS* or *GSM + EGPRS* that can be selected in the *Network* or in the *Connection* tab of the *Connection Control* menu while the CMU is in the *GSM Signal Off* or *Idle* state (see [Network Support](#) softkey on p. 4.96 ff.).

Operating sequence To establish an (E)GPRS connection proceed as follows:

1. In the *Menu Select* menu, select one of the menus in *GSM Signalling* mode.

The *Connection* tab of the *Connection Control* menu is opened. The CMU should be in the signalling state *Signal On*. The *Main Service* softkey is inactive.

2. Press the *Network Support* softkey to select *GSM + (E)GPRS*.
3. Press the *Main Service* softkey (which is now active) to select *Packet Data* and switch over from the circuit switched GSM to the GPRS/EGPRS signalling scheme.

The CMU is now in the GPRS *Idle* state. It reaches the *Attached* state after the MS

under test attempts a GPRS attach. The *Connection* tab contains an additional softkey labeled *Service Selection*.

4. Press *Service Selection* and select the GPRS test mode appropriate for your test case.
5. To establish a TBF connection proceed as outlined in Fig. 4-84 below and in the following sections.

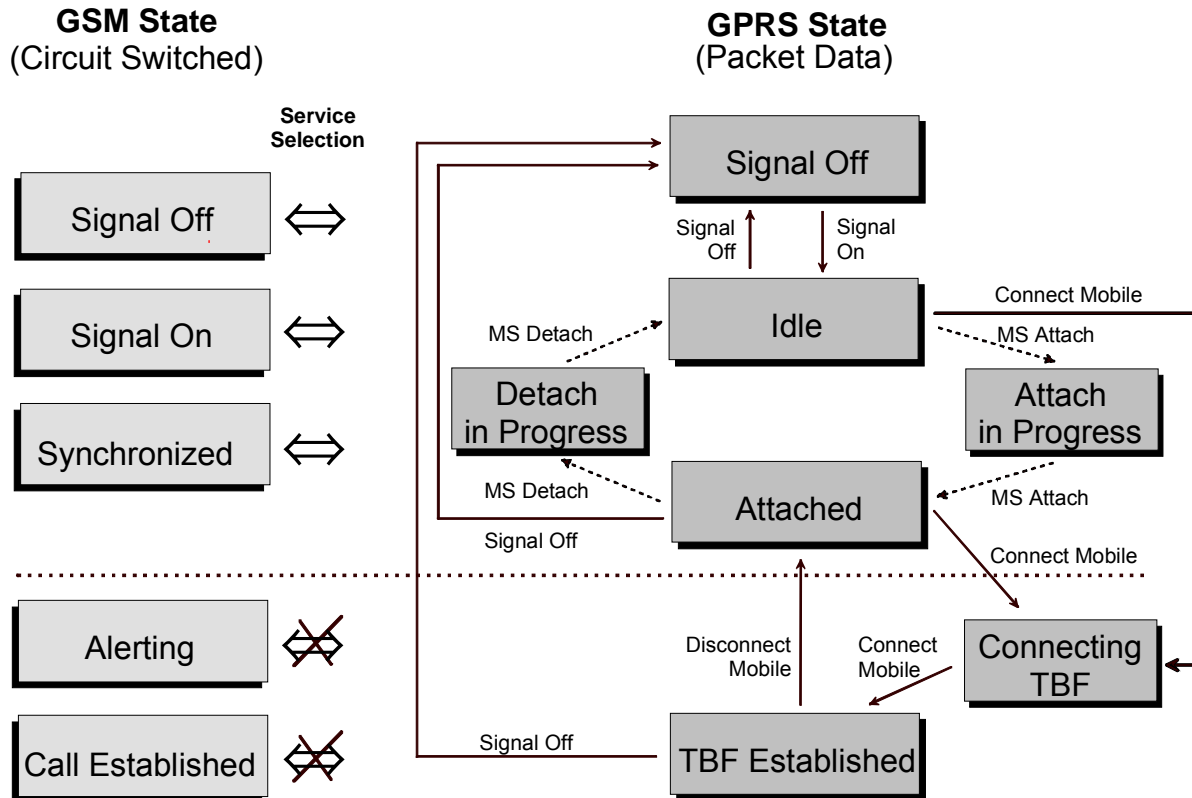


Fig. 4-84 GPRS signalling states

GPRS test mode GPRS mobile tests are to be performed in *TBF Established* mode. This is why the menus for connection setup (*Connection Control – Connection*) appear immediately after the function group and mode *GSM400/850/900/1800/1900-MS Signalling* is activated. The test mode type (A or B, reduced signalling etc.; see [Service Selection](#) softkey on p. 4.199) must be selected before the TBF connection is attempted (i.e. in the *Signal Off*, *Idle* or *Attached* states).

All the tabs in the *Connection Control* menu can be called up any time by pressing the *Connect. Control* softkey at the top right in every measurement menu. They are linked with each other via the hotkey bar at the lower edge of the screen. Pressing the *Escape* key closes the active *Connection Control* menu and re-activates the underlying measurement menu.

Configurations Many applications in *Signalling* mode are only possible or useful in a particular signalling state (for example, many parameters characterizing the MS and its capabilities are announced to the CMU while the MS initiates a GPRS attach, i.e. they are only available for display in the *Attached* and the following signalling states). This implies that many of the *Connection Control* tabs and their functions change with the signalling state. For reference see the *Sig. State* field in the command tables in Chapter 6.

Connection Setup In addition to the five GSM *Connection* tabs⁵, seven different *Connection* tabs corresponding to the seven possible GPRS signalling states are available. When a signalling state is reached, the corresponding *Connection* tab is opened automatically (exceptions: see *Connect. Control Guidance* parameter in section [Display Control \(Connection Control – Misc.\)](#) on p. 4.193 ff.). The three tabs *Attach in Progress*, *Detach in Progress* and *Connecting TBF* indicate transitory states. The remaining four tabs are described in the following sections.

Connection Control – Signal Off

The *Connection (Signal Off)* tab provides information on:

- The current GSM ([Circuit Switched](#)) and GPRS ([Packet Switched](#)) signalling states
- The characteristics of the MS under test (*MS Capabilities* and *Signalling Info*, if available, i.e. if a connection was set up before)
- The most important parameters characterizing the frequency and level of the signal sent by the CMU in the state *Signal On (BS Signal)*
- The *Network* code
- Selected AF and RF connectors and external attenuation (*AF/RF* ↻)
- Status and result of wideband peak power measurement (*Wideband Power*)

Besides, it contains softkeys which lead to other services or signalling states:

- Select another service, e.g. circuit switched mode (*Service Selection*)
- Activate the control channel signal to which the mobile station can synchronize (*Signal On*)

The *Connection (Signal Off)* tab is opened when the function group *GSM-MS Signalling* is selected, or if the control channel signal is switched off (*Signal Off* softkey) while the system is in another signalling state. It is replaced by the *Connection (Idle)* menu after the control channel signal on the CMU is switched on (Softkey *Signal On*).

⁵ The GSM *Connection* tabs correspond to the *Signalling* tabs in firmware version earlier than V3.05 with a new design corresponding to the five GPRS *Connection* tabs described in this supplement.

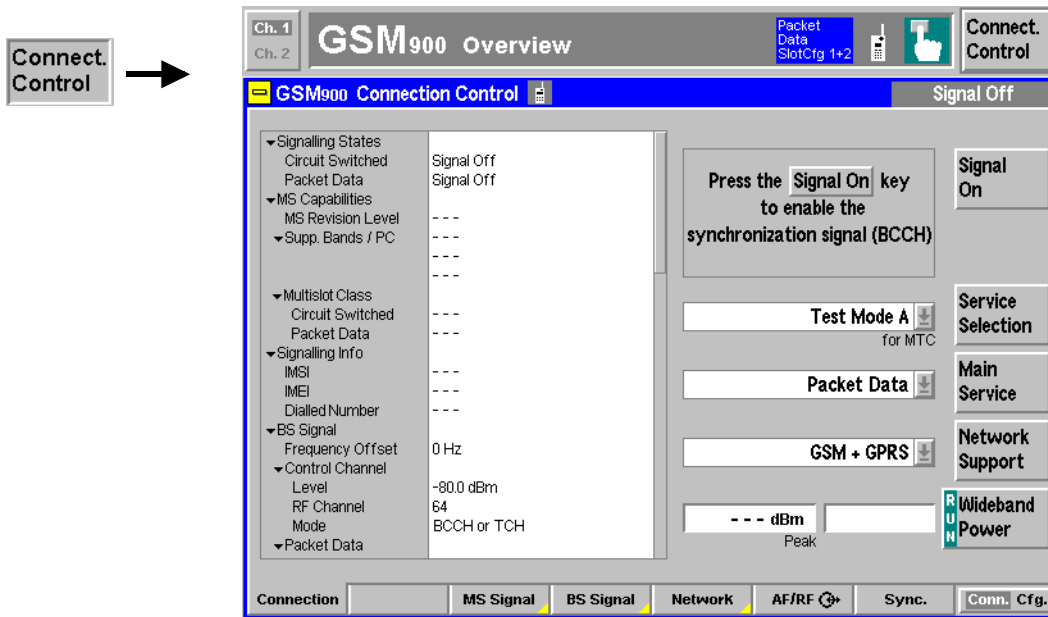


Fig. 4-85 Connection Control – Connection (Signal Off)

The function of the softkeys *Main Service*, *Network Support*, and *Wideband Power* is described in section [Signalling Control without Signal \(State Signal Off\)](#) on page 4.94. The parameter overview in the left half of the menu is also indicated in the other *Connection* tabs and is described in section [Connection Control with Call Established](#) on p. 4.155 ff. Some parameters are not always available, depending on the current and previous signalling states and settings. In this case the table shows invalid or unavailable settings ("----").

Header Message A Header Message displayed on top of each *Connection* tab informs on the current instrument state or indicates how to proceed to get to other signalling states.

Service Selection

The *Service Selection* softkey selects the GPRS test mode. The EGPRS test modes require option CMU-K43. All other test modes require option CMU-K42.

Test Mode A The mobile can be commanded to test mode A specified for MS transmitter RF tests; see below. The CMU uses the GPRS signalling scheme.

Test Mode B The mobile can be commanded to test mode B specified for MS receiver quality (BER) tests; see below. The CMU uses the GPRS signalling scheme.

EGPRS Loopb. sym. The mobile can be commanded to EGPRS Switched Radio Block Loopback Mode; see below. The same modulation is used in uplink and downlink direction. This mode is recommended if the mobile can transmit 8PSK-modulated signals (MCS5 to MCS9).

EGPRS Loopb. asym. The mobile can be commanded to EGPRS Switched Radio Block Loopback Mode; see below. 8PSK modulation (MCS5 to MCS9) is used in downlink direction and GMSK modulation (MCS1 to MCS4) in uplink direction. This mode is for mobiles which can not transmit 8PSK-modulated signals.

- Red. Sig. Mode A** No automatic connection setup: The mobile must be controlled by means of an external test interface so that the CMU reaches the *Call Established* state. The reduced signalling mode is analogous to the *Signalling Channel = NONE* mode for circuit switched channels (see p. 4.183). The *Red. Sig. Mode A* is analogous to the *Test Mode A* and mainly intended for MS transmitter tests. In addition the USF BLER and the CRC Error can be measured; see section *BER Tests of PDTCHs* on p. 4.124 f.
- Red. Sig. Mode B** Test mode B in reduced signalling. In this mode the BER, DBLER, USF BLER and CRC Error can be measured.
- Red. Sig. – EGPRS sym.** Reduced signalling with EGPRS modulation and coding schemes MCS1 to MCS9 and with the same modulation (either GMSK or 8PSK) in uplink and downlink direction. This mode is recommended if the mobile can transmit 8PSK-modulated signals (MCS5 to MCS9).
- Red. Sig. – EGPRS asym.** Reduced signalling with EGPRS modulation and coding schemes and with 8PSK modulation in downlink (MCS5 to MCS9) and GMSK modulation in uplink direction (MCS1 to MCS4).
- Downlink only** The mobile only listens and receives DL data from the CMU; no uplink signal is transmitted. This mode is suitable for mobile-assisted BER tests.
- BLER** Full signalling involving the RLC layer for Block Error Rate (BLER) measurements; see section *BER Tests of PDTCHs* on p. 4.124 f.

Note: GPRS restrictions:

In the current firmware version all modes are available for EGPRS channels (modulation and coding schemes MCS1 to MCS9; the asymmetric modes require a 8PSK scheme in the downlink). All modes except the EGPRS test modes and reduced signaling modes can be used for GPRS channels (CS1 to CS4).

The *Service Selection* softkey is active if the CMU acts as a BTS that supports GPRS or EGPRS; see remark on *Activating (E)GPRS* on p. 4.196 and *Network Support* softkey on p. 4.96. The *Service Selection* softkey is inactive (grayed) unless *Network Support* is set to *GSM + GPRS* or *GSM + EGPRS*.

Remote control

```
PROCedure:SIGNalling:PDATA:ACTion
SOFF | SON | CTMA | CTMB | CRSignalling | CRA | CDLonly CBL
[SENSe:]SIGNalling:PDATA:SERvice?
```

The GPRS test modes A and B are specified in 3GPP TS 44.014. Any MS must be capable of operating either in test mode A, in test mode B or in both test modes. The CMU can activate a test mode if the MS under test supports this mode.

In test mode A, the MS is commanded to continuously transmit RLC data blocks containing a pseudo random data sequence. In test mode B, the CMU transmits RLC blocks on the downlink containing a pseudo random data sequence; the MS loops back the received data.

The test mode is terminated when the CMU initiates the TBF release (*Disconnect Mobile*) or if the CMU's control channel is switched off (*Signal Off*). The duration of test mode A can also be limited to a fixed number of PDUs that the MS has to transmit. Test mode configuration parameters are available in the *Network* tab; see description of the *Packet Data* parameters on p. 4.209.

In addition to the GPRS test modes, the standard defines a EGPRS Switched Radio Block Loopback Mode. This test mode must be supported by any EGPRS MS. The EGPRS loopback mode is a Physical RF layer loopback performed before channel decoding designed to support BER testing. To support EGPRS MSs without 8PSK modulation capability in uplink, an asymmetric loopback mode is defined, where 8PSK modulated radio blocks (MCS5 to MCS9) are looped back with a GMSK modulation and coding scheme (MCS1 to MCS4).

Auto Slot Config.

Auto Slot Config. is an option to automatically activate an appropriate number of slots that is suitable for a particular measurement and supported by the connected MS. The setting (*Auto Slot Config. On*) takes effect after a connection/TBF is established (signalling states *Call Established/TBF Established*) and the CMU and MS operate in *Multislot Mode* (see *Slot Mode* settings on p. 4.162).

The maximum number of slots depends on the capacity of the mobile station (multislot class; see Table 4-13 on p. 4.156). The multislot class is transferred to the CMU during GPRS attach. Uplink and downlink slots are activated according to the needs of the active measurement:

- For transmitter tests, only on DL slot (equal to the *Main Timeslot*) but the maximum number of supported UL slots is activated.
- For BLER tests, the maximum number of DL slots but only one UL slot is activated. The maximum number of DL slots is never larger than the maximum DL slots supported by the CMU (4).
- For tests involving a closed loop (e.g. Test Mode B), the maximum number of slots supported both in the UL and DL is activated.

Remote control

CONFigure:SIGNalling:PDATa:ASConfig:ENABLE ON | OFF

Table 4-14: MS multislot classes

Service Selection	Multislot class	Main Timeslot	Active Slots Downlink (MS RX)	Active Slots Uplink (MS TX)
Test Mode A Reduced Sig. Mode A	1	3	3	3
	2	3	3	3
	3	3	3	3 & 4
	4	3	3	3
	5	3	3	3 & 4
	6	3	3	3 & 4
	7	3	3	2 & 3 & 4
	8	3	3	3
	9	3	3	3 & 4
	10	3	3	3 & 4
	11	3	3	2 & 3 & 4
	12	3	3	2 & 3 & 4 & 5
Test Mode B Reduced Sig. Mode B	1	3	3	3
	2	3	3 & 4	3
	3	3	3	3 & 4
	4	3	2 & 3 & 4	3
	5	3	3 & 4	3 & 4
	6	3	3 & 4	3 & 4
	7	3	3 & 4	3 & 4
	8	4	2 & 3 & 4 & 5	4
	9	3	2 & 3 & 4	3 & 4
	10	3	2 & 3 & 4	3 & 4
	11	3	3 & 4	3 & 4 & 5
	12	3	3 & 4	3 & 4 & 5

Service Selection	Multislot class	Main Timeslot	Active Slots Downlink (MS RX)	Active Slots Uplink (MS TX)
BLER Downlink only	1	4	4	4
	2	4	4 & 5	4
	3	4	4 & 5	4
	4	4	3 & 4 & 5	4
	5	4	4 & 5	4
	6	4	3 & 4 & 5	4
	7	4	3 & 4 & 5	4
	8	4	2 & 3 & 4 & 5	4
	9	4	3 & 4 & 5	4
	10	4	2 & 3 & 4 & 5	4
	11	4	2 & 3 & 4 & 5	4
	12	4	2 & 3 & 4 & 5	4
EGPRS Loopb. sym. EGPRS Loopb. asym. Reduced Sig. – EGPRS sym. Reduced Sig. – EGPRS asym.	1	3	3	3
	2	3	3	3
	3	3	3	3
	4	3	3	3
	5	3	3	3
	6	3	3	3
	7	3	3	3
	8	3	3	3
	9	3	3	3
	10	3	3	3
	11	3	3	3
	12	3	3	3

**Signal
On**

The *Signal On* softkey switches on a control channel signal to which the mobile station can synchronize. By switching on the signal, the CMU changes to the signalling state *Idle*.

Remote control

```
PROCEDURE:SIGNalling:PDATa:ACTion SON
PROCEDURE:SIGNalling:PDATa:ACTion SON
```

Connection Control – Idle

In addition to the parameter overview, the *Service Selection* softkey and the wideband power measurement described in section [Signalling Control without Signal \(State Signal Off\)](#) on page 4.94 ff. the *Connection (Idle)* tab contains the following softkeys which lead to other services or signalling states:

- Switch off the control channel signal for synchronization (*Signal Off*)
- Command the MS to GPRS test mode (*Connect Mobile -> state Connecting TBF*)

The *Connection (Idle)* tab is opened after the control channel signal on the CMU is switched on (*Signal On* softkey in the *Connection (Signal Off)* tab). This signal is switched on automatically when the *Signalling* test mode is activated. The *Signal Off* softkey leads back to the *Connection (Signal Off)* menu. *Connection (Idle)* is replaced by the *Connection (Connecting TBF)* and *Connection (TBF Established)* menus after the CMU attempts a TBF connection. It is replaced by the *Connection (Attached)* menu if the mobile station initiates a GPRS attach.

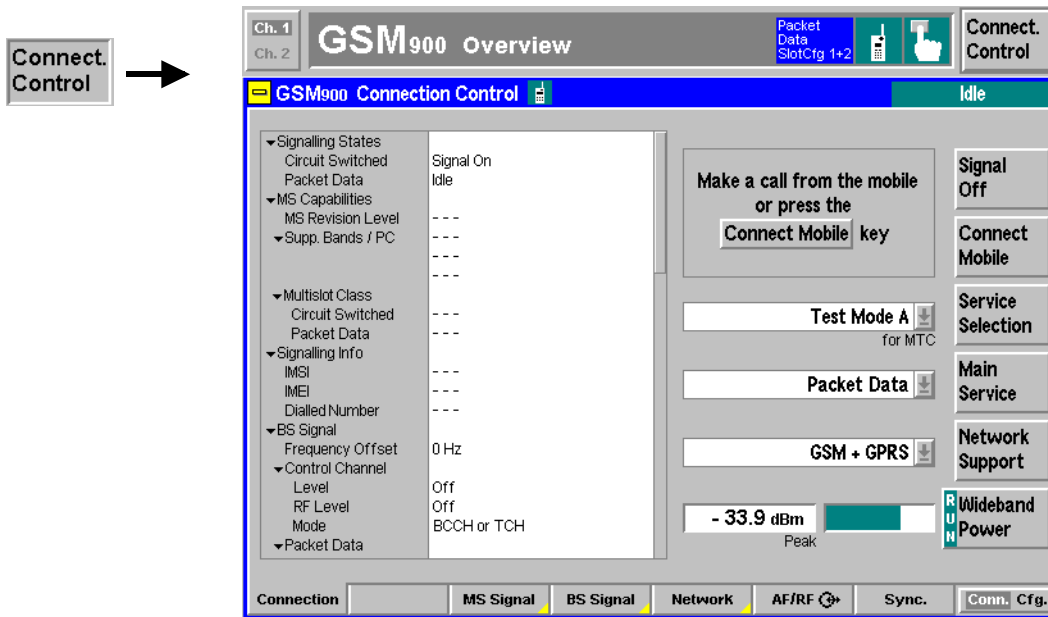


Fig. 4-86 Connection Control – Connection (Idle)

Connection Control – Attached

In addition to the parameter overview, the *Service Selection* softkey and the wideband power measurement described in section *Signalling Control without Signal (State Signal Off)* on page 4.94 ff. the *Connection (Attached)* tab contains the following softkeys which lead to other services or signalling states:

- Switch off the control channel signal for synchronization (*Signal Off*)
- Command the MS to GPRS test mode (*Connect Mobile* -> state *Connecting TBF*)

The *Connection (Attached)* tab is opened after the MS succeeds in establishing a GPRS attach or after the CMU releases a TBF connection (*Disconnect Mobile* softkey in the *Connection (TBF Established)* tab). The *Signal Off* softkey leads back to the *Connection (Signal Off)* menu.

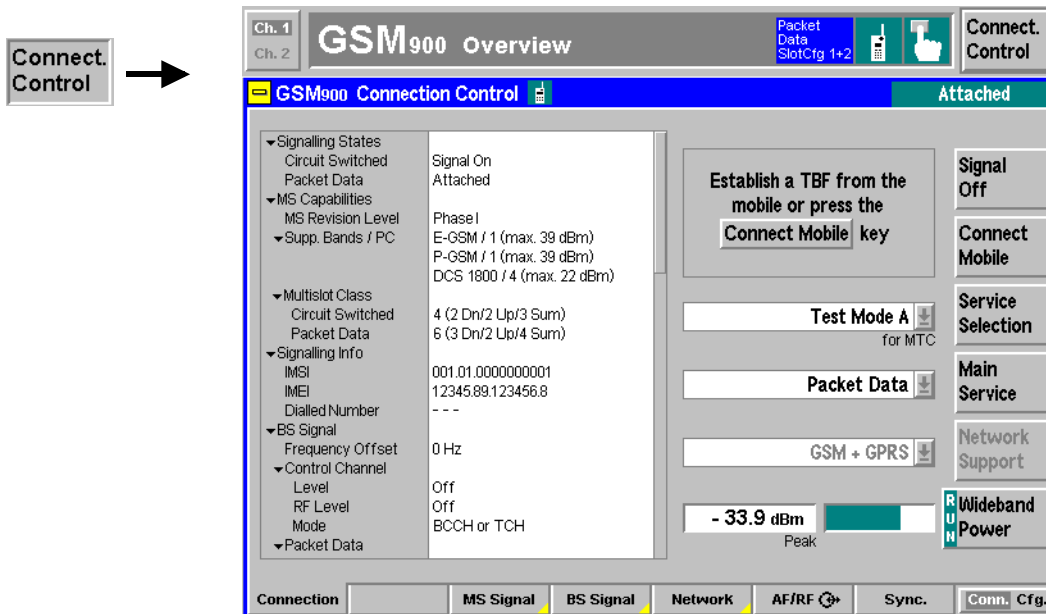


Fig. 4-87 Connection Control – Connection (Attached)

Connection Control – TBF Established

In addition to the parameter overview, the *Service Selection* softkey and the wideband power measurement described in section *Signalling Control without Signal (State Signal Off)* on page 4.94 ff. the *Connection (TBF Established)* tab contains the following softkeys which lead to other services or signalling states:

- Switch off the control channel signal for synchronization (*Signal Off*)
- Terminate the GPRS test mode (*Disconnect Mobile* -> state *Attached*)

The *Connection (TBF Established)* tab is opened after the CMU initiates a TBF connection (*Connect Mobile* softkey in the *Connection (Idle)* or *Connection (Attached)* tabs). The *Signal Off* softkey leads back to the *Connection (Signal Off)* menu. The *Disconnect Mobile* softkey terminates the test mode and leads back to the *Connection (Attached)* menu.

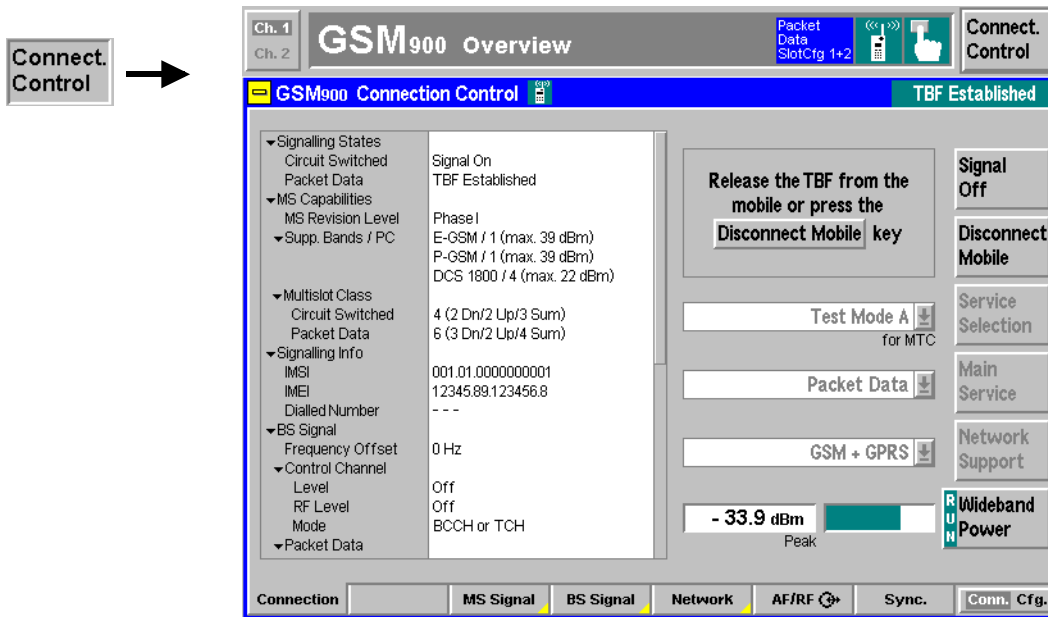


Fig. 4-88 Connection Control – Connection (TBF Established)

RF Signals of the MS (Connection Control – MS Signal)

The *MS Signal* tab configures the operating mode and the RF traffic channel signal of the MS under test. For packet data transfer the following parameters can be set:

- The *Main Timeslot* and the remaining timeslots (*Slot Configuration*) that are used in downlink and uplink direction
- The RF levels and power control parameters in all timeslots

GPRS Uplink Power Control

Power control of the MS is important for spectral efficiency in the cellular system as well as for the reduction of power consumption of the mobile station. In circuit switched mode, where a continuous two way connection between the BTS and the MS is maintained, **closed loop** power control is used: The BTS measures the received signal level from the MS and dynamically adapts the MS output power in 2-dB steps using a fixed scale of Power Control Levels (PCL).

In **open loop** power control, the path loss in downlink and in uplink is assumed to be identical. If the MS detects a reduction of the received signal level C , it tries to compensate for the changed propagation conditions by increasing its own output power P_{CH} by the same amount: The sum of $P_{CH} + C$ is always kept constant. This fast but inaccurate power control mode is useful at the beginning of a packet transmission.

For a discontinuous, packet oriented GPRS connection, a combination of open loop and closed loop power control is used (GSM 11.10). The RF output power P_{CH} on each individual uplink PDCH shall be:

$$P_{CH} = \min(\Gamma_0 - \Gamma_{CH} - \alpha(C + 48), P_{MAX})$$

where Γ_0 is a network-specific constant (+39 dBm for GSM400, GSM850 and GSM900, +36 dBm for GSM 1800 and GSM1900, i.e. the maximum nominal output power of an MS in the network), Γ_{CH} is a power control parameter depending on the MS and channel (analogous to the PCL in circuit switched mode), and α represents a system parameter. Both Γ_{CH} and α are controlled by the BTS. P_{CH} must not exceed the maximum allowed output power in the cell P_{MAX} .

A pure open loop power control is achieved by setting $\alpha = 1$ and keeping Γ_{CH} constant. A closed loop is achieved by setting $\alpha = 0$. The CMU is able to set the individual power control parameters Γ_{CH} for all uplink timeslots whereas the system parameter α is always set to 0.

The CMU provides a softkey-oriented version of the *MS Signal* tab and a table-oriented version with extended functionality. The *MS Signal* hotkey toggles between the two versions if it is pressed repeatedly. For packet data mode, the two tabs provide the same settings.

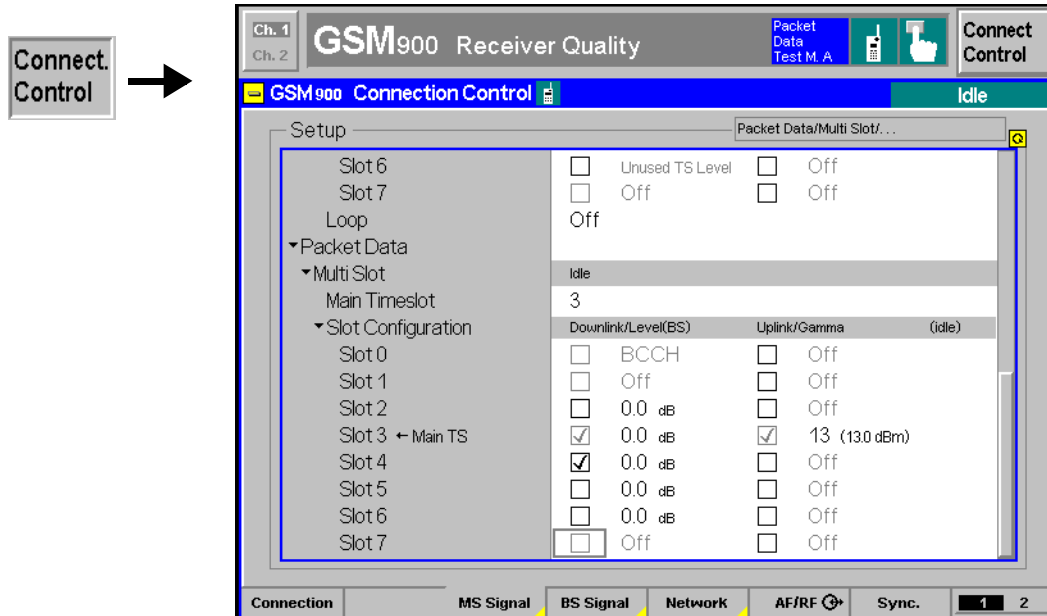


Fig. 4-89 Connection Control – MS Signal (table)

PMAX

The *PMAX* parameter sets the maximum MS transmitter output power allowed in the cell. The value corresponds to the output power at which the mobile station performs a location update to synchronize to the CMU. It is valid both for circuit switched and for packet data mode.

Remote control

CONFigure:MSsignal:CCH:PMAX_

Packet Data – Multi Slot

The *Packet Data – Multi Slot* section defines the timeslot configuration in the uplink and downlink:

Main Timeslot

Timeslot used for signalling. The main timeslot can not be switched off in both the downlink and uplink; see Slot Configuration below. In Receiver Quality tests the main timeslot is always one of the measured slots.

PCL (MS)

PCL (MS) sets (signalling states < Call Established) or changes (signalling states Call Established) the MS output power during the connection. where is this setting?

Remote control

CONFigure:BSSignal:PDATA[:TCH]:MSlot:MTimeslot

Slot Configuration

Table of all used and unused timeslots (GSM timeslots 0 to 7) in the downlink and the uplink. The *Main Timeslot* is always active in both the downlink and uplink direction. The boxes enable (if checked) or disable the other timeslots.

Level (BS)

RF levels in the individual downlink timeslots (RF signal transmitted by the BS/CMU) relative to the *Reference Level* indicated above the *Slot Configuration* table and in the *BS Signal* tab (see section see section [RF Signals of the CMU \(Connection Control – BS Signal\)](#) on p. 4.207 f.).

Gamma

Channel-specific power control parameter Γ_{CH} in dB; see note on GPRS power control above

Note: The number of downlink and uplink channels must be compatible with the multislot class of the MS under test; see [Table 4-13](#) on p. 4.156.

Remote control

```
CONFigure:MSSignal:PDATA[:TCH]:MSLot:SCONfig
CONFigure:BSSignal:PDATA[:TCH]:MSLot:SCONfig
PROCedure:SIGNalling:PDATA[:TCH]:MSLot:SCONfig
```

RF Signals of the CMU (Connection Control – BS Signal)

The *BS Signal* tab configures the RF signals of the CMU (which simulates a base station transmitting a GSM control and traffic channel signal), selects a frequency offset, the frequency hopping scheme and the traffic channel data. For multislot packet data transfer, the downlink (BS signal) and uplink (MS signal) signal configuration is defined in a common table, so the *BS Signal* tab provides many of the settings that are also available in the *MS Signal* tab. The following additional packet data parameters can be set:

- The downlink power control parameter (*P0*)
- The *RF Channel* that the CMU will use for packet data transfer

GPRS Downlink Power Control

A BTS can use downlink power control to reduce its output power. Downlink power control relies on a reduction of the PDCH power relative to the BCCH power. This power reduction is defined in terms of a power control parameter *P0* which can be specific to a particular MS in the network (power control mode A) or the same for all MS with a TBF established on the same PDCH (power control mode B). For details refer to GSM 05.08 and GSM 04.60.

The *P0* parameter can be selected for the BS Signal transmitted by the CMU. The CMU also uses this parameter and its BCCH level to calculate the *Reference Level* for all individual downlink channels in a GPRS multislot configuration.

The CMU provides a softkey-oriented version of the *BS Signal* tab and a table-oriented version with extended functionality. The *MS Signal* hotkey toggles between the two versions if it is pressed repeatedly. For packet data mode, the two tabs provide the same settings.

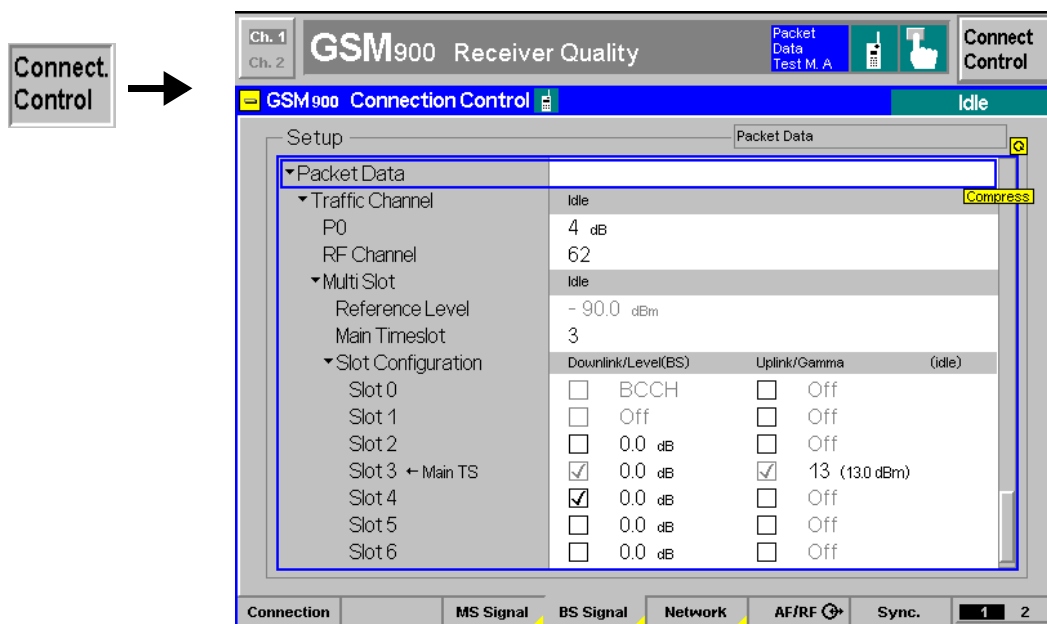


Fig. 4-90 Connection Control – BS Signal (table)

Packet Data – Traffic Channel	The <i>Packet Data – Traffic Channel</i> section defines the power control parameter P0 and the traffic channel that the CMU will use for data transfer:
<i>P0</i>	Downlink power control parameter P0; see background information at the beginning of this section
<i>RF Channel</i>	GSM channel that the CMU will use for packet data transfer
<i>Hopping Sequence</i>	Hopping sequence containing up to 6 channel numbers. <i>Off</i> is used to shorten the hopping sequence. Frequency hopping of the downlink traffic channel must be enabled explicitly.
<i>Hopping</i>	Enable (<i>On</i>) or disable frequency hopping in the downlink traffic channel.
<i>Reference Level</i>	Reference value for the downlink (BS) signal levels. The reference level is calculated from the BCCH level of the BS signal and the downlink power control parameter P0 according to $Reference\ Level = -85\ dBm - P0$.
Remote control	
CONFigure:BSSignal:PDATA[:TCH]:MSLot:PZERO	
CONFigure:BSSignal:PDATA[:TCH]:MSLot:CHANnel	
CONFigure:BSSignal:PDATA[:TCH]:MSLot:FHOPping:SEQuence	
PROCedure:SIGNalling:PDATA[:TCH]:MSLot:FHOPping:ENABle	
[SENSe:]BSSignal:PDATA[:TCH]MSLot:RLEVel?_	

The remaining settings are described in section [RF Signals of the MS \(Connection Control – MS Signal\)](#) on p. 4.205 ff. The relationship between the table-oriented *BS Signal* tab and its softkey-oriented counterpart is analogous the *MS Signal* tab.

Network Parameters (Connection Control – Network)

The *Network* tab defines various parameters of the network that the CMU reports to the mobile station. The following settings are (E)GPRS-specific and available with option CMU-K42/-K43, *(E)GPRS Software Extension*, only:

- Capability of the network: *GSM only* or *GSM + GPRS* or *GSM + EGPRS (Network Support)*
- The *Main Service* of the mobile: *Circuit Switched* or *Packet Data*
- Routing Area Code (*RAC*)
- GPRS and EGPRS *Coding Scheme* and *Puncturing Scheme*
- Parameters of the GPRS test modes (*PC Meas. Chan.*, *USF*, *Extend. Dyn. Alloc.*, *Number of PDUs*, *Slot Offset*, *Test Mode with ACK*, *RLC Mode (Testmode B)*, *Bit Stream*)

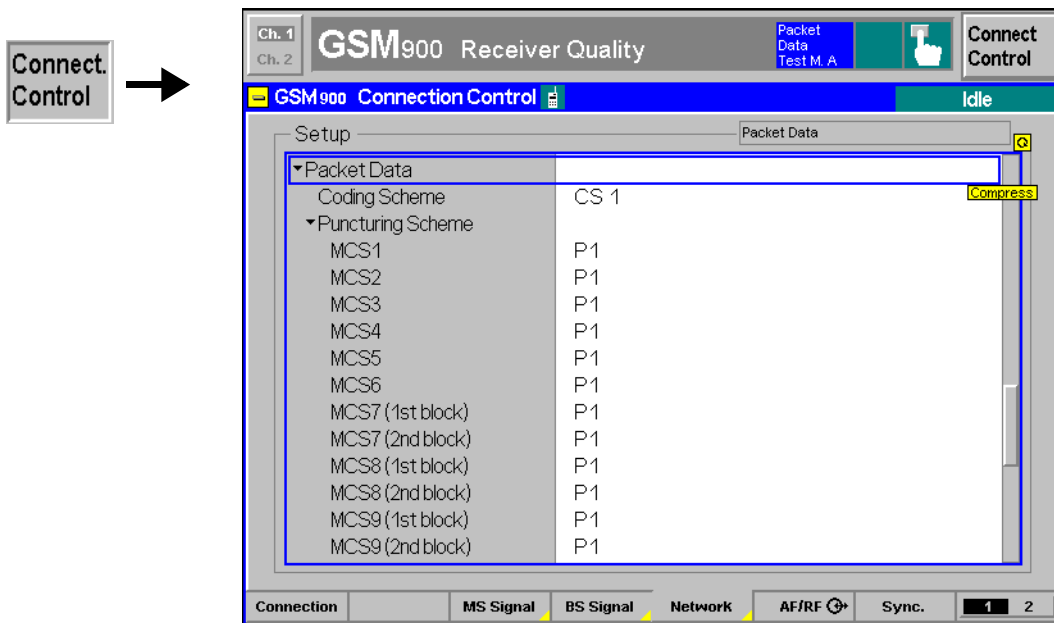


Fig. 4-91 Connection Control – Network

Network Support The *Network Support* parameter is to report to the MS under test whether or not the CMU currently supports GPRS or EGPRS; see [Network Support](#) softkey on p. 4.96.

Remote control

CONFigure:NETWork:NSUPport GSM | GGPR

Main Service The *Main Service* parameter selects the circuit switched or packet data connection scheme of the MS under test. It is equivalent to the *Main Service* softkey described on p. 4.96.

Remote control

[:SENSe:]NETWork:MSERvice

Network Identity The *Network Identity* section contains parameters characterizing the radio network (see also section [Network Parameters \(Connection Control – Network\)](#) on p. 4.176 ff. One of them is specific to the packet data mode:

RAC Routing Area Code, set to 0. The RAC identifies the routing area within a location area.

Remote control

CONFigure:NETWork:IDENtity:RAC <RAC>

Packet Data The *Packet Data* section contains parameters defining the traffic data channel coding schemes and the GPRS test mode (see [Service Selection](#) softkey on p. 4.199):

Coding Scheme Selection of the coding schemes for downlink traffic data channels: Coding schemes CS1 to CS4 for GPRS (with option CMU-K42); modulation and coding schemes MCS1 to MCS9 for EGPRS (with option CMU-K43). The GPRS coding schemes can be used to establish a TBF connection with full signalling; they are independent from the reduced signalling coding schemes selected via [Traffic Mode](#) (see p. 4.177).

Puncturing Sch. Puncturing scheme applied to each of the EGPRS modulation

and coding schemes MCS1 to MCS9. Puncturing means that bits in the radio blocks are removed after channel coding in order to reduce the amount of transferred data and enhance the useful data rate. The puncturing schemes are selectable so that it is possible to test their influence on measured quantities, e.g. bit error rates. Moreover, it is possible to test incremental redundancy with a definite initial puncturing scheme; see below.

3 different puncturing schemes (PS) are defined. The modulation and coding schemes MCS3, MCS4 and MCS7 to MCS9 can be combined with 3 PS, the remaining modulation and coding schemes with 2 PS only.

For schemes MCS1 to MCS6, four normal bursts carry one RLC block. For the remaining schemes MCS7 to MCS9, four normal bursts carry two RLC blocks. The puncturing schemes for the two blocks can be set individually.

Incremental Redundancy

Enable or disable Incremental Redundancy RLC mode for the downlink; see background information below.

With enabled incremental redundancy, the CMU uses the selected puncturing scheme as initial puncturing scheme but cyclically changes the puncturing scheme if data blocks must be retransmitted. This setting corresponds to normal operation of the BTS in the network.

With disabled incremental redundancy, the puncturing scheme is fixed. This setting is suitable for layer 1 tests at fixed transmission parameters.

PC Meas. Chan.

Channel type (BCCH or PDCH) that the mobile uses to determine the received signal strength and quality. The PC Meas. Channel parameter corresponds to the GPRS power control parameter *PC_MEAS_CHAN* in the system information SI 13 Rest Octets (GSM 04.18).

USF

Update State Flag in the range 0 to 7 to be set in the blocks transmitted to the MS in GPRS test mode.

USF Duty Cycle

Defines the percentage of downlink GPRS radio blocks containing the USF assigned to the MS. This setting is provided in *TBF Established* signalling state only, after the selected USF is actually assigned to the MS under test.

100 % assigned means that all blocks contain the assigned USF. *0 % assigned, 100% random* means that each USF (0 to 7) except the assigned one is used with a probability of 1/7. *12.5 % assigned, 87.5 % random* means that each USF including the assigned one is used with a probability of 1/8.

This setting can be used to check whether the USF BLER depends on the transmitted USF.

Extend. Dyn. Alloc.

Enable or disable Extended Dynamic Allocation of the mobile. Extended dynamic allocation is an optional medium access mode (3GPP TS 04.60).

With the *Auto* setting the CMU checks whether the mobile supports Extended Dynamic Allocation by evaluating the *GPRS Extended Dynamic Allocation* message received during the GPRS Attach. Extended Dynamic Allocation is enabled only if the mobile supports this feature.

Number of PDUs

Number of Protocol Data Units (PDUs) that the MS is to transmit in the uplink during GPRS test mode A.

<i>Slot Offset</i>	Timeslot (no. 0 to 7) that is to be taken as the first downlink timeslot when the MS is in multislot operation (downlink timeslot offset parameter in the GPRS_TEST_MODE_CMD).
<i>Testmode with ACK</i>	Enable or disable the operating mode where the mobile periodically transmits a PACKET_UPLINK_ACK_NACK message (GSM 04.60) while it is in test mode B.
<i>RLC Mode (Testmode B)</i>	Explicit setting of the downlink RLC mode for a packet data connection in test mode B (<i>Service Selection = Test Mode B</i>). According to standard 3GPP TS 44.014, test mode B corresponds to <i>Unacknowledged</i> operation where the MS loops back all data received. The alternative <i>Acknowledged</i> mode is to be used for special applications.
<i>PDP Context Activation</i>	Determines how the CMU reacts to a PDP context activation initiated by the MS. Packet Data Protocol (PDP) is a network protocol used by an external packet data network interfacing to GPRS. The CMU can accept or reject a ACTIVATE PDP CONTEXT REQUEST message from the MS (see standard 3GPP TS 24.008). The purpose of the CMU setting is to prevent the MS from attempting repeated PDP context requests. Which setting is suitable depends on the mobile type.
<i>Bit Stream</i>	Bit pattern (pseudo random sequence) that the CMU transmits to the MS in GPRS test mode.

Remote control


```

CONFigure:NETWork:PDATA[:GPRS]:CScheme <Mode>
PROCEDURE:NETWork:PDATA[:GPRS]:CScheme <Mode>
CONFigure:NETWork:PDATA:EGPRS:PScheme <Mode>
PROCEDURE:NETWork:PDATA:EGPRS:PScheme <Mode>
CONFigure:NETWork:PDATA:EGPRS:PScheme:IREdundancy <Enable>
CONFigure:NETWork:PDATA:GPRS:PCMChannel <Type>
CONFigure:NETWork:PDATA:USF <USF>
PROCEDURE:NETWork:PDATA:UDCYcle A100 | A100 | A012
CONFigure:NETWork:PDATA:GPRS:EDAllocation <Enable>
CONFigure:NETWork:PDATA:NOPDus <Number>
CONFigure:NETWork:PDATA:SOFFset <Offset>
CONFigure:NETWork:PDATA:GPRS:TWACK <Enable>
CONFigure:NETWork:PDATA:RLCMode ACKN | UNAC
CONFigure:NETWork:PDATA:PDPContext REJ | ACC
CONFigure:NETWork:PDATA:BITStream <Mode>
PROCEDURE:NETWork:PDATA:BITStream <Mode>
    
```


Incremental Redundancy

Incremental redundancy (IR) is used on EGPRS channels to minimize the number of data blocks that have to be transferred repeatedly (retransmitted) until they can be successfully decoded.

The IR mechanism relies upon the fact that for each input block of information bits, the EGPRS channel coder provides 2 or 3 output blocks of coded bits with equal length but different puncturing scheme. In principle, each output block is sufficient for recovering the original information bits, however, a combination of 2 (or even 3) output blocks leaves more redundancy bits for error correction and therefore increases the chance of correctly receiving the data block.

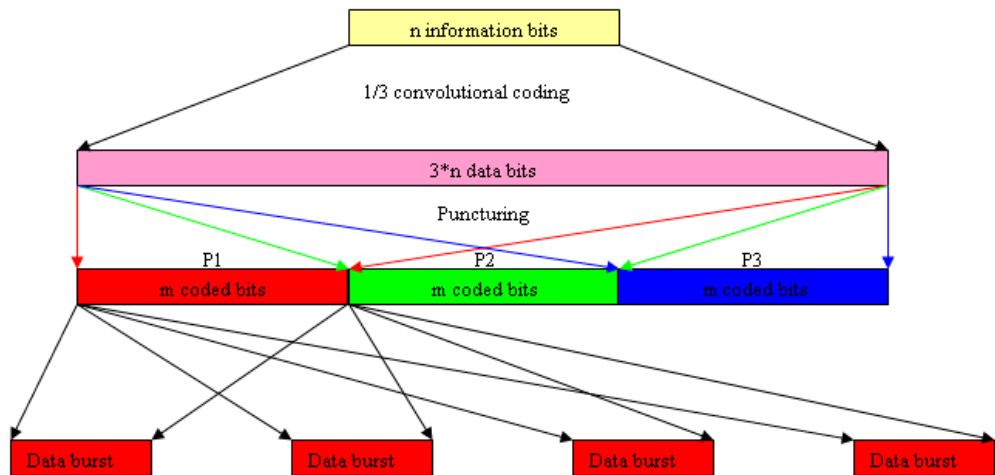

In incremental redundancy mode, the CMU starts transferring the output data block with the selected initial puncturing scheme. If decoding fails, the second data block is transmitted in addition and decoded together with the first block. For modulation and coding schemes MCS3, MCS4 and MCS7 to MCS9, a third stage with a third puncturing scheme is available. The probability of error-free reception increases at each stage; multiple retransmissions of the same data under the same conditions are avoided.

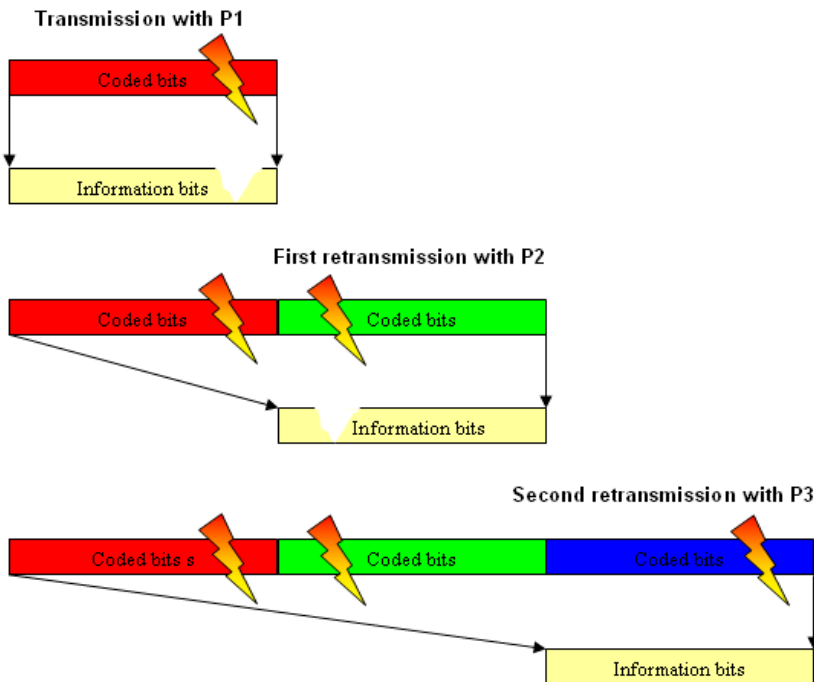

Adaptive Multi-Rate (AMR) Speech Codec (Option R&S CMU-K45)

If an AMR speech codec test is selected (see *Traffic Mode* softkey on p. 4.177) the *Network* tab displays additional softkeys to configure the AMR codec and test the uplink and downlink codec adaptation (inband signalling). The following settings are provided:

- Selection of a subset of codec modes and switching thresholds (*AMR Rate Set*)
- Explicit setting of the codec mode at the CMU (*Codec Mode DL*) and the MS under test (*Codec Mode UL*).
- BS signal level setting in the used and in the unused timeslots (*TCH Level*).

AMR codec The Adaptive Multi-Rate (AMR) codec is an integrated speech codec with six or eight fixed user bit rates ranging from 4.75 kbit/s to 7.95 kbit/s (AMR Half Rate) or 12.2 kbit/s (AMR Full Rate). The speech coder is capable of switching its user bit rate upon command. Decreasing the bit-rate impairs the speech quality but leaves more bits for error protection. This allows a dynamic trade-off between the speech quality and the stability of the connection as the quality of the radio link varies. Codec mode selection is done from a set of 1 to 4 active codec modes (ACS, Active Codec Set) and an associated set of 1 to 3 switching thresholds for increasing and decreasing the bit rate. The necessary signalling messages are included in the AMR speech frames (inband signaling).

Test of inband signalling The MS conformance test specification 3GPP TS 51.010 describes the procedure and conditions for inband signalling tests.

- The purpose of the downlink adaptation test is to verify that the MS can monitor the downlink quality of the dedicated traffic channel (*BS Signal*) and request a BS codec mode according to the thresholds provided at call setup.
- The purpose of the uplink adaptation test is to verify that the MS in the uplink direction applies the codec mode indicated by the network, and that the MS correctly signals the used codec mode to the network.

Both tests shall be performed with the codec mode and threshold settings quoted in Table 4-15 below. The values are different for full rate and half rate AMR speech coders.

Table 4-15 AMR Rate Set according to the conformance test specification

Codec Mode	AMR Full Rate			AMR Half Rate ⁶		
	TCH data rate	Threshold – Down	Threshold – Up	TCH data rate	Threshold – Down	Threshold – Up
Mode 4	12.2 kbit/s	16.5 dB	+ ∞	–		
Mode 3	7.95 kbit/s	11.5 dB	18.5 dB	7.95 kbit/s	12.5 dB	∞
Mode 2	5.9 kbit/s	6.5 dB	13.5 dB	6.7 kbit/s	11.0 dB	15.0 dB
Mode 1	4.75 kbit/s	– ∞	8.5 dB	5.15 kbit/s	– ∞	13.0 dB

⁶ A test model with 4 codec modes is described in standard 3GPP TS 45.009.

To prepare an AMR test...

6. Press *Connect. Control* to open the *Connection Control* menu and access the *Connection* tab.
7. If necessary, disconnect the MS under test and ensure that the CMU is in the *Signal Off*, *Signal On*, or *Synchronized* signaling states.
8. Press the *Network* hotkey to open the *Network* tab. If necessary, press the hotkey again to access the softkey-oriented version of the tab.
9. Press *Traffic Mode* and select the AMR codec supported by your mobile phone (*AMR Full Rate* or *AMR Half Rate*).

To test downlink codec adaptation...

10. Press *AMR Rate Set* to select up to four codec modes and adjust the upper and lower decision thresholds.
11. Return to the *Connection* tab and set up a call to or from the MS.

The CMU enters the *Call Established* signalling state.

12. Press *TCH Level* and vary the used TS level.

The *Codec Mode DL* requested by the MS must be in accordance to the *AMR Rate Set* settings.

To test uplink codec adaptation...

13. Press *Codec Mode UL* and select one of the UL codec modes 1 to 4 for the MS under test.

The *Codec Mode UL* used by the MS must be equal to the selected mode.

To test the speech quality...

The speech quality of an AMR codec is tested in terms of bit error rate or audio tests:

- The bit error rate is measured in the *Receiver Quality* menu; see section [Receiver Quality Measurements](#) on p. 4.122 ff. *BER* and *BER Average* tests can be made without restriction. Note that the AMR Full Rate codec does not provide any Class II bits and that both AMR codecs always operate in circuit-switched mode (no BLER results).
- Audio tests can be performed with option R&S CMU-B41, *Audio Generator and Analyzer*. All *Audio* menus and remote-control commands are described in the R&S CMU 200/300 operating manual.


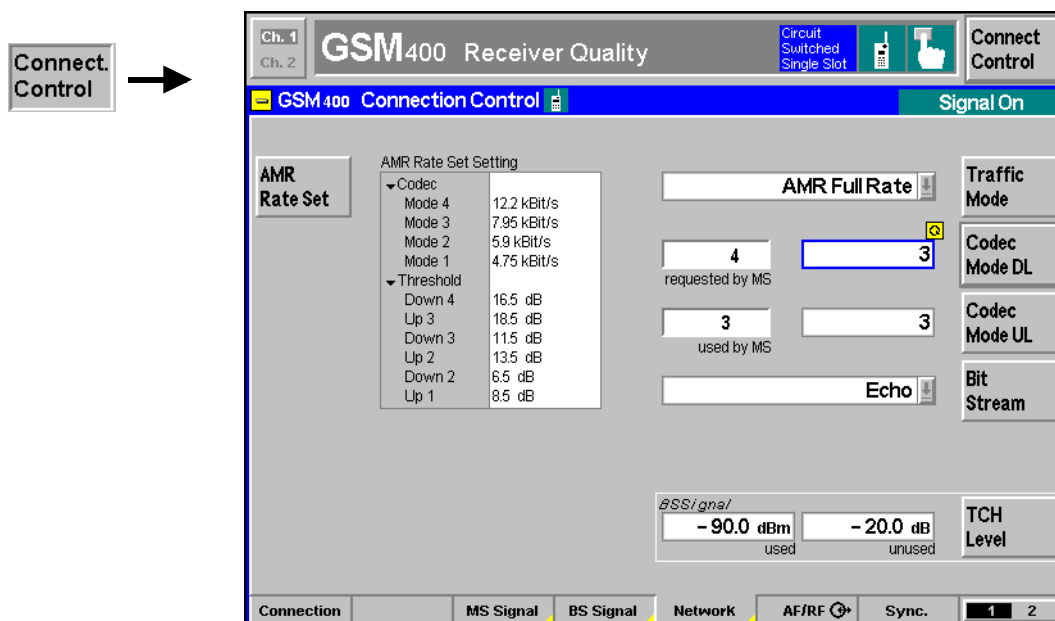


Fig. 4-92 Connection Control – Network parameters (AMR)

**AMR
Rate Set**

The *AMR Rate Set* softkey opens a popup menu to select four codec modes and define the decision thresholds for changing the codec mode.

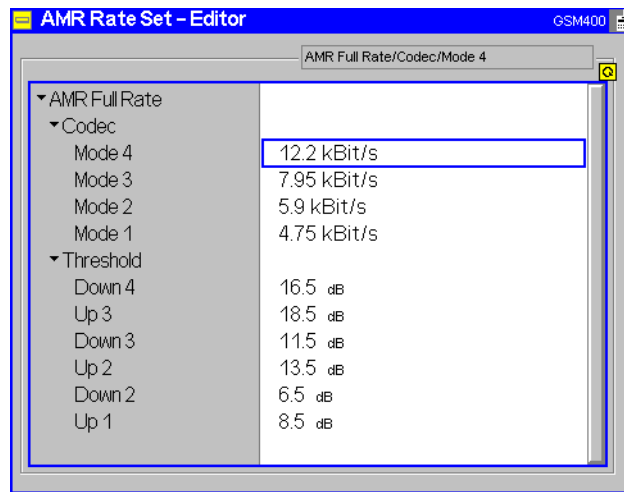


AMR Full Rate The first line of the *AMR Rate Set Editor* indicates the AMR codec type (Full Rate or Half Rate) selected by means of the *Traffic Mode* softkey.

Codec – Mode Selects the data rate for modes 4 to 1. For full rate codecs, the full set of 8 different rates (4.75 kbit/s, 5.15 kbit/s, 5.9 kbit/s, 6.7 kbit/s, 7.4 kbit/s, 7.95 kbit/s, 10.2 kbit/s, 12.2 kbit/s) is available. The last two rates are not provided for half rate codecs.

The selected data rates must be different from each other. The entered values are automatically sorted in descending order so that Rate (Mode 1) < Rate (Mode 2) < Rate (Mode 3) < Rate (Mode 4). To restrict the test model to 1, 2, or 3 modes, the codec modes can be switched off using the *ON/OFF* key.

Threshold Sets the lower decision thresholds for switching between modes *j* and *j – 1* (*Down j* where *j = 2, 3, 4*) and the upper decision thresholds for switching between modes *j* and *j + 1* (*Up j* where *j 0 1, 2, 3*). Both transition thresholds are given in terms of a normalized carrier to interferer (*C/I*) ratio and must be entered in 0.5 dB steps (see standard 3GPP TS 05.09).

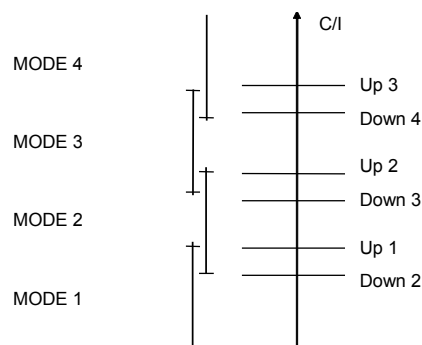

To ensure stable operation near the thresholds, switching down to a lower codec mode is usually initiated at lower *C/I* threshold values than switching up to a higher codec mode. The difference between the upper and lower thresholds is generally termed hysteresis:

$$\text{Hyst}(j) = \text{Up}(j) - \text{Down}(j + 1).$$

Defining and testing threshold values

The standard places the following restrictions to the threshold values:

- The hysteresis must be positive or zero:
Up (j) \geq Down (j + 1) for j= 1 to 3
- Up and Down thresholds must be in descending order:
Down 2 \leq Down 3 \leq Down 4
Up 1 \leq Up 2 \leq Up 3

The C/I is estimated by the MS under test, so the mapping between the *TCH Level* and the thresholds depends on the test setup and on the mobile. As a general rule, reducing (increasing) the *TCH Level* in the used timeslot by n dB reduces (increases) the C/I ratio by roughly the same amount.

Remote control

```
CONFigure:NETWork[:CSwitched]:AMR:HRATE:RSEtting
CONFigure:NETWork[:CSwitched]:AMR:FRATE:RSEtting
```

The following two softkeys define the codec modes to be used in both signal directions:

Codec Mode DL

The *Codec Mode DL* softkey sets the codec mode that the CMU uses to generate the speech data transmitted to the MS under test. The CMU maintains this mode during the measurement, irrespective of the DL codec mode requested by the mobile under test.

The DL codec mode that the MS requests according to the *AMR Rate Set* settings is indicated to the left of the input field for the DL codec mode.

Note: *All Bit Stream settings involving a closed loop or pseudo-random bit sequences require equal uplink and downlink codec modes. Different codec modes can be tested with Bit Stream = Handset or Handset Low.*

Remote control

```
CONFigure:NETWork[:CSwitched]:AMR:HRATE:DLCMode
PROCEDURE:NETWork[:CSwitched]:AMR:HRATE:DLCMode
CONFigure:NETWork[:CSwitched]:AMR:FRATE:DLCMode
PROCEDURE:NETWork[:CSwitched]:AMR:FRATE:DLCMode
[SENSe:]MSSinfo:AMR:HRATE:DLCMode?
[SENSe:]MSSinfo:AMR:FRATE:DLCMode?
```

Codec Mode UL

The *Codec Mode UL* softkey sets the codec mode that the mobile under test shall use in uplink direction.

The actual UL codec mode used by the MS is indicated to the left of the input field for the UL codec mode.

Note: *All Bit Stream settings involving a closed loop or pseudo-random bit sequences require equal uplink and downlink codec modes. Different codec modes can be tested with Bit Stream = Handset or Handset Low.*

Remote control

```
CONFigure:NETWork[:CSwitched]:AMR:HRATE:ULCMode
PROCEDURE:NETWork[:CSwitched]:AMR:HRATE:ULCMode
CONFigure:NETWork[:CSwitched]:AMR:FRATE:ULCMode
PROCEDURE:NETWork[:CSwitched]:AMR:FRATE:ULCMode
[SENSe:]MSSinfo:AMR:HRATE:ULCMode?
[SENSe:]MSSinfo:AMR:FRATE:ULCMode?
```

TCH Level

The *TCH Level* softkey defines the downlink (*BS Signal*) TCH level in the used and unused timeslots (used/unused level mode) or the reference level (individual level mode). The level can be changed to check whether the MS requests the correct DL codec mode according to the *AMR Rate Set* settings (see above).

The two TCH levels are identical with the parameters in the *BS Signal* tab; see description on p. 4.171.

Remote control

```
CONFigure:BSSignal[:CSwitched][:TCH]:LEVel:UTIMeslot
PROCedure:BSSignal[:CSwitched][:TCH]:LEVel:UTIMeslot
CONFigure:BSSignal[:CSwitched][:TCH]:LEVel:UNTimeslot
PROCedure:BSSignal[:CSwitched][:TCH]:LEVel:UNTimeslot
```

Additional AMR settings are provided in the table-oriented version of the *Network* tab (see also p. 4.184):

Adaptive Multi-Rate (AMR)

Noise Suppression Switch noise suppression at the AMR codec of the mobile station on or off.

Remote control

```
CONFigure:NETWork[:CSwitched]:AMR:NSUPpression ON | OFF
```


Contents

5 Remote Control – Basics	5.1
Structure of the GSM Function Groups	5.1
Measurement Control	5.2
Measurement Groups	5.2
Measurement Statistics	5.5
Specifying Limits	5.6
Status Reporting System	5.7
Special Terms and Notation	5.8

5 Remote Control – Basics

This chapter gives a survey of the basic features and concepts of GSM remote control commands. Remote control can be described in terms analogous to the ones used in chapter 3 for the classification of menus and settings for the graphical user interface. In the following, we will particularly point out the similarities and differences between manual and remote control.

Structure of the GSM Function Groups

Chapter 6 of this manual gives a description of all GSM remote control commands, including their parameters, as well as the default values and ranges of all numerical parameters.

Function group and mode The commands for the function groups *GSM400-MS*, *GSM850-MS*, *GSM900-MS*, *GSM1800-MS* and *GSM1900-MS* are largely identical, however, the ranges of numerical values and some default settings may not coincide. In such cases, the numerical values are explicitly quoted for all function groups.

Commands for the two modes *Signalling* and *Non Signalling* are listed separately although many of them have the same syntax. The commands for the measurement groups *WPOWer*, *NPOWer*, *POWer:SLOT*, *POWer:XSLot*, *POWer:FRAMe*, *POWer:MSLot*, *MODulation*, and *SPECtrum* are identical in both test modes, so they are reported only once.

Addressing The CMU uses extended addressing: The instrument is assigned a primary address while each function group and test mode is identified via a secondary address. This allows the same remote commands to be used in several function groups and modes:

```
ibwrt(h_GSM900MS_SIG, "INITiate:POWer")
ibwrt(h_GSM1800MS_SIG, "INITiate:POWer")
ibwrt(h_GSM900MS_NSIG, "INITiate:POWer")
```

provided that the variables *h_GSM900MS_SIG* etc. have been appropriately defined, see program examples in chapter 7.

The remote control commands for first (*SYST:COMM:GPIB:ADDR*) and secondary (*SYST:REM:ADDR:SEC*) addressing are described in the CMU operating manual. The *SYST:REM:ADDR:SEC* command uses the following names to address the GSM network tests described in this manual:

```
GSM400MS_NSig,      GSM400MS_Sig,
GSM850MS_NSig,      GSM850MS_Sig,
GSM900MS_NSig,      GSM900MS_Sig,
GSM1800MS_NSig,     GSM1800MS_Sig,
GSM1900MS_NSig,     GSM1900MS_Sig.
```

Order of commands The commands are arranged to form groups belonging to the same measurement or the same type of configurations. These groups are identified by the second-level keyword (as in *POWer*). Applications belonging to a measurement group (see chapter 5 of the CMU operating manual) are identified by the third-level keyword of each command (as in *SPECtrum:MODulation*). Chapter 6 is organized as follows:

- General configurations in the *Non Signalling* mode: *LEVel*, *RFANalyzer*, *RFGenerator*, *INPut*, *OUTPut*, *CORRection:LOSS*, *DM:CLOCK*, *TRIGger*, *MMEMory*

- Measurement groups (*Non Signalling* mode): POWER[:NORMAl]..., POWER:MPR
- Common command and measurement groups (identical in *Non Signalling* and *Signalling* mode (OPTion, RESet, STATus:OPERation, IQIF, WPOWer, NPOWer, POWer:SLOT, POWer:XSLot, POWer:FRAMe, POWer:MSLot, MODulation..., SPECTrum...))
- Measurement groups (*Signalling* mode): POWER[:NORMAl]..., POWER:ABURst..., POWER:PCL, POWER:MPR, RXQuality...
- General configurations and signalling in the *Signalling* mode (LEVel, TRIGger, SIGNalling, HANdover, MCONtrol, MSSignal, BSSignal, NETWork, INPut, OUTPut, CORRection:LOSS, DM:CLOCK), RREPortS, MSSinfo, MMEMory
- GPRS signalling (with option CMU-K42)

The structure of chapter 6 differs from chapter 4 (*Functions and their Application*) where the measurements are presented first and special configurations are reported at the end of each signalling mode section.

The menu of the graphical user interface corresponding to a group of commands is quoted at the beginning of each section. Lists of all commands (by function and alphabetical) are annexed to chapter 6.

SCPI Conformity

In view of the particular requirements of GSM measurements not all commands could be taken from the SCPI standard. However, the syntax and structure of all commands is based on SCPI rules. For a detailed description of the SCPI standard refer to chapter 5 of the CMU operating manual.

Remote Control

All commands may be used for control of the CMU via GPIB and serial (RS-232) interface.

Measurement Control

The commands in the measurement groups WPOWer, NPOWer, POWer..., MODulation..., SPECTrum..., and RXQuality... have an analogous structure and syntax. The measurements are controlled according to common concepts which are explained in detail in Chapter 5 of the CMU operating manual. The following sections show how the general concepts are applied to GSM-MS measurements.

Measurement Groups

The measurement groups are referred to as *measurement objects* (keyword <meas_obj>) in remote control. Most measurement objects correspond to a measurement group or application in manual control. For GSM measurements, the following measurement objects are defined:

Table 5-1 Measurement objects in Signalling and Non Signalling mode

Non Signalling		Signalling	
Meas. Object	Measurement group / Application	Meas. Object	Measurement group / Application
WPOWER	Wideband Power softkey (wide-band peak power measurement).	WPOWER	Wideband Power softkey (wide-band peak power measurement).
NPOWER	No equivalent in manual control. Narrow-band power.	NPOWER	No equivalent in manual control. Narrow-band power.
POWER[:NORMAl][:GMSK] POWER[:NORMAl]:EPSK	P/t Norm. GMSK P/t Norm. 8PSK Burst power as a function of time.	POWER[:NORMAl][:GMSK]	P/t Norm. GMSK P/t Norm. 8PSK Normal burst power as a function of time.
POWER:MSLot	P/t Multislot Burst power vs. time in up to 4 consecutive timeslots (GMSK or 8PSK modulation).	POWER:MSLot	P/t Multislot Burst power vs. time in up to 4 consecutive timeslots (GMSK or 8PSK modulation).
POWER:MPR	No equivalent in manual control Combined power and modulation measurement which should be used if scalar modulation results are needed while a power measurement is running.	POWER:MPR	No equivalent in manual control Combined power and modulation measurement which should be used if scalar modulation results are needed while a power measurement is running.
POWER:SLOT	P/Slot Graph Average burst power in 8 consecutive timeslots.	POWER:SLOT	P/Slot Graph Average burst power in 8 timeslots of a TDMA frame.
POWER:XSlot	P/Slot Table Average burst power in up to 512 consecutive timeslots.	POWER:XSlot	P/Slot Table Average burst power in up to 512 consecutive timeslots.
POWER:FRAMe	P/Frame Average burst power in a particular timeslot in 128 consecutive frames.	POWER:FRAMe	P/Frame Average burst power in a particular timeslot in 128 consecutive frames.
		POWER:PCL	Average burst power as a function of the PCL of the mobile phone on three or seven different channels.
		POWER:ABURst[:GMSK]	P/t Access GMSK Power of single access burst as a function of time. No 8PSK modulation available.

Non Signalling		Signalling	
Meas. Object	Measurement group / Application	Meas. Object	Measurement group / Application
MODulation[:PERRor] [:GMSK]	No equivalent in manual control Fast phase and frequency error measurement excluding the I/Q imbalance and origin offset.	MODulation[:PERRor] [:GMSK]	No equivalent in manual control Fast phase and frequency error measurement excluding the I/Q imbalance and origin offset.
MODulation:XPERRor [:GMSK]	<i>Ext. Phase Err. GMSK</i> Extended phase and frequency error measurement including the I/Q imbalance and origin offset.	MODulation:XPERRor [:GMSK]	<i>Ext. Phase Err. GMSK</i> Extended phase and frequency error measurement including the I/Q imbalance and origin offset.
MODulation:OVERview :EPSK	<i>Overview 8PSK</i> 8PSK scalar modulation parameters including statistical evaluation.	MODulation:OVERview :EPSK	<i>Overview 8PSK</i> 8PSK scalar modulation parameters including statistical evaluation.
MODulation:EVMagnitude:EPSK	<i>EVM 8PSK</i> Error vector magnitude in 8PSK modulation.	MODulation:EVMagnitude:EPSK	<i>EVM 8PSK</i> Error vector magnitude in 8PSK modulation.
MODulation:PERRor :EPSK	<i>Phase Error 8PSK</i> Phase error in 8PSK modulation.	MODulation:PERRor :EPSK	<i>Phase Error 8PSK</i> Phase error in 8PSK modulation.
MODulation:MERRor :EPSK	<i>Magn. Error 8PSK</i> Magnitude error in 8PSK modulation.	MODulation:MERRor :EPSK	<i>Magn. Error 8PSK</i> Magnitude error in 8PSK modulation.
SPECTrum:MODulation	<i>Modulation</i> Off-carrier power due to the modulation for GSMK or 8PSK modulation schemes including time domain meas.	SPECTrum:MODulation	<i>Modulation</i> Off-carrier power due to the modulation for GSMK or 8PSK modulation schemes including time domain meas.
SPECTrum:SWITching	<i>Switching</i> Off-carrier power due to the switching for GSMK or 8PSK modulation schemes including time domain meas.	SPECTrum:SWITching	<i>Switching</i> Off-carrier power due to the switching for GSMK or 8PSK modulation schemes including time domain meas.
SPECTrum:MSWitching	<i>Modulation & Switching</i> Combined spectrum due to modulation and due to switching measurement	SPECTrum:MSWitching	<i>Modulation & Switching</i> Combined spectrum due to modulation and due to switching measurement
-	-	RXQuality:BER<nr>, RXQuality:BAverage RXQuality:BLER	<i>BER</i> <i>BER Average</i> <i>BLER</i> Receiver quality measurements, i.e. measurement of the bit error rate, residual bit error rate, Block Error Rate etc. with limit check.

The measurement objects in Table 5-1 are complemented by groups of commands used to retrieve results that are automatically provided by the mobile station (e.g. the receiver parameters reported by the mobile phone). These command groups do not represent real measurements; they consist of queries only. For an overview, see the list of remote control commands at the end of chapter 6.

Measurement Statistics

The *repetition mode* defines how many evaluation periods are measured if the measurement is not stopped explicitly (measurement control commands `STOP...`, `ABORT...`) or by a limit failure. With remote control the three repetition modes *Single Shot*, *Continuous* and *Counting* are available (*Counting* is not available in manual control, see chapter 3).

In `POWER`, `MODulation`, and `SPECTrum` measurements, different traces corresponding to the result in the current period, the maximum, minimum, or average evaluated over a set of periods are determined within one measurement. The four results can be queried independently.

Table 5-2 Repetition mode in remote control

Setting	Description	Command
Statistic Count	Integer number of evaluation periods forming one statistics cycle. An evaluation period is equal to a burst length (<code>POWER</code> <code>MODulation</code> <code>SPECTrum</code>) or a frame (<code>RXQuality</code> measurements). The statistic count is set together with the measured quantity.	<code>CONFigure:<meas_obj>:CONTrol SCALar ARRAy, 1 ... 1000 NONE (<meas_obj> = POWER... MODulation... SPECTrum... etc., see Table 5-1)</code> <code>CONFigure:RXQuality:BER<nr> BAverage:CONTrol <Mode>, 1 ... 50000 NONE</code>
Repetition mode Single Shot	The measurement is stopped after one statistics cycle.	<code>CONFigure:<meas_obj>:CONTrol:REPetition SINGLEshot, <StopCondition>, <Stepmode> (<meas_obj> = WPOWER POWER... MODulation... SPECTrum...)</code> <code>CONFigure:RXQuality:BER<nr>:... </code>
Continuous	The measurement is continued until stopped explicitly or by a limit failure. Average values are calculated according to the formulas in chapter 3, section "General Settings".	<code>CONFigure:<meas_obj>:CONTrol:REPetition CONTinuous, <StopCondition>, <Stepmode> (<meas_obj> = WPOWER POWER MODulation SPECTrum:MODulation, SPECTrum:SWITching)</code> <code>CONFigure:RXQuality:BAverage:... </code>
Counting	Repeated single shot measurement with configured statistics cycles. The calculation of statistical quantities (minimum, maximum, average) is restarted after each statistics cycle; each cycle is treated as an independent single shot measurement.	<code>CONFigure:<meas_obj>:CONTrol:REPetition 1 ... 10000, <StopCondition>, <Stepmode> (<meas_obj> = WPOWER POWER... MODulation... SPECTrum...)</code> This mode is not available for <code>RXQuality</code> measurements. A counting measurement with 1 evaluation period is equivalent to a single shot measurement..

Setting	Description	Command
Traces	<p>The specifiers <i>CURRENT</i>, <i>MAXimum</i>, <i>MINimum</i>, <i>MMAx</i>, and <i>AVERage</i> denote the traces for the current evaluation period, the maximum, minimum, extreme value, or average of a set of evaluation periods. They correspond to the <i>Display Mode</i> set in the measurement configuration menus.</p> <p>In general all four traces are evaluated during the measurement. They are selected via a keyword in the queries initiating a measurement and retrieving the results.</p>	<p>Measurement results: <code>READ:ARRay:<meas_obj>[:RESult]<disp>?</code> </p> <p>where <meas_obj> = <i>POWER</i>... <i>MODulation</i>... <i>SPECTrum</i>...</p> <p>Burst matching: <code>CALCULATE:<meas_obj>[:RESult]:</code> <code>LIMit:MATChing<disp>?</code> </p> <p>where <disp> = [:<i>CURRENT</i>] :<i>AVERage</i> :<i>MMAximum</i> :<i>MAXimum</i> :<i>MINimum</i></p>

Specifying Limits

The following table gives an overview of the types of limits and possible results of the limit check.

Table 5-3 Limits and limit check

Type	Description	Command								
Scalar limits	Limit values for a single (scalar) measured quantity. Depending on the measured quantity, either an upper limit or upper and lower limits can be defined.	<code>CONFigure:<meas_obj>:LIMit:<Spec.></code> <code>[<LowerLimit> , <UpperLimit></code> <Spec.> denotes a keyword (an array of keywords) specifying the measured quantity.								
Limit lines	For <i>POWER</i> and <i>SPECTrum</i> measurements a tolerance template consisting of up to 16 time ranges (areas) can be defined (the <i>POWER:MSLot</i> template is composed of several single-slot templates).	<code>CONFigure:<meas_obj>:LIMit:LINE:<Spec.></code> <code><Limit_line_param.></code> <Spec.> denotes the two keywords specifying the upper or lower limit line in a time range and the burst type considered. <Limit_line_param.> contains the coordinates of the start and end points of the limit line plus an information whether the current range is valid or not.								
Limit check	All scalar limits belonging to the same measurement group are read out together with the command on the right side.	<code>CALCulate:<meas_obj.>[:RESult]:LIMit:</code> <code>MATChing?</code>								
	Possible results of the scalar limit check are listed on the right side. Further messages assessing, e.g., the power ramp or the result of the BER test in general, may be issued in particular cases (see detailed command description in chapter 6).	<table border="0"> <tr> <td>NMAU</td> <td>not matching, underflow</td> </tr> <tr> <td>NMAL</td> <td>not matching, overflow</td> </tr> <tr> <td>INV</td> <td>measured value invalid</td> </tr> <tr> <td>OK</td> <td>no limit failure</td> </tr> </table>	NMAU	not matching, underflow	NMAL	not matching, overflow	INV	measured value invalid	OK	no limit failure
NMAU	not matching, underflow									
NMAL	not matching, overflow									
INV	measured value invalid									
OK	no limit failure									
	The result of the limit check depends on the statistics settings (see section <i>Measurement Statistics</i> on page 5.5).	<code>CALCULATE:ARRay:<meas_obj>[:RESult]</code> <code>:LIMit:MATChing<disp>?</code> where <disp> = [: <i>CURRENT</i>] : <i>AVERage</i> : <i>MMAximum</i> : <i>MAXimum</i> : <i>MINimum</i>								

Status Reporting System

A general description of SCPI status registers and of the status reporting system is given in chapter 5 of the CMU operating manual. This section is devoted to the particular features concerning GSM measurements.

The CMU offers 30 independent `STATUS:OPERation:CMU:SUM1|2:CMU<nr>` sub-registers (<nr>=1 ... 15) which are implemented in hierarchical form. The bits of the 30 `STATUS:OPERation` registers are set only after the registers are assigned to a function group and measurement mode.

In the `EVENT` part, the `STATUS:OPERation` register contains information on which actions the instrument has executed since the last readout. All five parts of the registers can be read using one of the commands of the subsystem `STATUS:OPERation:CMU:SUM1|2:CMU<nr>:...`

Note: *Symbolic status register evaluation by means of the commands `STATUS:OPERation:SYMBOLic:ENABLE` and `STATUS:OPERation:SYMBOLic[:EVENT]?` is a convenient alternative method of retrieving status information. See also section Symbolic Status Event Register Evaluation in chapter 5 of the CMU operating manual and chapter 6 of this manual.*

GSM mobile tests comprise the two signalling modes *Non Signalling* and *Signalling* for each of the function groups *GSM400/850/900/1800/1900-MS* so that a total of 10 secondary addresses can be used.

In the status registers for the *Non Signalling* mode the following bits are assigned:

Table 5-4 Meaning of the bits used in the `STATUS:OPERation:CMU:SUM1|2:CMU<nr>` sub-registers assigned to *GSMxxx-MS Non Signalling*

Bit-No.	Meaning	Symbol in <code>STATUS:OPERation:SYMBOLic...</code>
4	Measurement Invalid This bit is set if the active measurement could not performed and terminated correctly (e.g. because of a low signal level) so that the measurement results are invalid.	MINV
11	RF Input Overdriven This bit is set if the RF input level at connector RF1, RF2 or RF 4 IN is larger than the specified <i>RF Max. Level</i> plus an appropriate margin.	RFIO
12	RF Input Underdriven This bit is set while the RF input level at connector RF1, RF2 or RF 4 IN falls below the measurement range controlled by the specified <i>RF Max. Level</i> .	RFIU

In the status registers for the *Signalling* mode the bit assignment is as follows:

Table 5-5 Meaning of the bits used in the `STATUS:OPERation:CMU:SUM1|2:CMU<nr>` sub-registers assigned to *GSMxxx-MS Signalling*

Bit-No.	Meaning	Symbol in <code>STATUS:OPERation:SYMBOLic...</code>
0	Call from Mobile This bit is set while the CMU receives a call from the mobile under test.	CFM

Bit-No.	Meaning	Symbol in STATus:OPERation:SYMBOLic...
1	Release from Mobile This bit is set while the connection to the mobile is being released.	RFM
2	Synchronization Lost This bit is set if the CMU had to leave the signalling state "Synchronized".	SLOS
3	Location Update This bit is set while a location update is being performed.	LUPD
4	Measurement Invalid This bit is set if the active measurement could not be performed and terminated correctly (e.g. because of a low signal level) so that the measurement results are invalid.	MINV
7	IMSI Detach This bit is set if the CMU disconnected from the network.	IDET
8	SMS received This bit is set if a short message has been received but not yet read.	SMSR
10	Measurement report This bit is set if a measurement report from the mobile has been received.	MREP
11	RF Input Overdriven This bit is set if the RF input level at connector RF1, RF2 or RF 4 IN is larger than the specified <i>RF Max. Level</i> plus an appropriate margin.	RFIO
12	RF Input Underdriven This bit is set while the RF input level at connector RF1, RF2 or RF 4 IN falls below the measurement range controlled by the specified <i>RF Max. Level</i> .	RFIU

Special Terms and Notation

Below we list some particular features in the syntax of the GSM commands. The general description of the SCPI command syntax can be found in chapter 5 of the CMU operating manual, section *Structure and Syntax of Device Messages*.

Description of commands

The commands are arranged in tables. From top to bottom, the table rows contain the following entries:

1. Complete command syntax including the complete parameter list or a list of identifiers to be quoted in the parameter description below. The keyword on the right side gives a short description of the command. If possible, it is identical to the corresponding function (softkey, hotkey etc.) in manual control.
2. List of all parameters with short description, range of values and default units (for numerical parameters)
3. Detailed description of the command, signalling state and firmware version required. If no signalling state is indicated, the commands can be executed

in any signalling states. Please note the remarks at the beginning of the sections for each measurement group.

Detailed lists of default values are annexed to the command description. Whenever possible, groups of analogous commands are described in common tables.

Order of commands

The commands are arranged according to their function specified by the keyword in the second level or in the second/third level combined. Lower-level keywords define the command in more detail. This means that commands with the same second-level, third-level etc. keywords are generally grouped together in the same sections.

Example: `CONFigure:POWer:CONTrol:GRID <Enable>`

Commands with the keyword *POWER* in the second level belong to the power measurement. The keywords in the third and fourth level indicate that the command controls whether a grid is displayed in the power versus time diagram.

Scalar results and arrays

To limit the number of remote control commands in an application program, all scalar results of a measurement group are usually measured together and returned in a common list. Arrays (e.g. the traces for *POWER* and *MODulation* measurements) are returned as comma-separated lists of values; it is possible to retrieve either the whole list (see commands `READ:ARRay...` etc.) or the values located in a number of subranges that are part of the total measurement range (see commands `READ:SUBarrays...`; the subarrays are defined via `CONFigure:SUBarrays...`).

Parameters

Setting commands are usually supplemented by a parameter or a list of several parameters. Parameters either provide alternative options (setting a or setting b or setting c ..., see special character "|"), or they form a comma-separated list (setting x,y).

<Par_Name>

In the command tables and lists, parameters are generally described by a name (identifier) written in angle brackets (<>). The identifiers merely serve as a parameters description; in an application program they must be replaced by one of the possible settings reported in the detailed parameter description.

Example: `CONFigure:POWer:CONTrol <Mode>,<Statistics>`

with `<Mode> = SCALar | ARRay`
`<Statistics> = 1 to 10000 | NONE`

possible command syntax: `CONF:POW:CONT SCAL,NONE`

NAN

NAN (not a number) is generally used to represent missing data, e.g. if a portion of a trace has not been acquired yet. It is also returned after invalid mathematical operations such as division by zero. As defined in the SCPI standard, NAN is represented as 9.91 E 37.

INV

INV (invalid) is returned e.g. if a limit check is performed without defining the appropriate tolerance values.

Upper / lower case

Upper/lower case characters characterize the long and short form of the keywords in a command. The short form consists of all upper-case characters, the long form of all upper case plus all lower case characters. On the CMU, either the short form or the long form are allowed; mixed forms will generally not be recognized. Note that the instrument itself does not distinguish upper case and lower case characters.

Special characters

- | A vertical stroke in the parameter list characterizes alternative parameter settings. Only one of the parameters separated by | must be selected.
Example: The following command has two alternative settings:

```
TRIGger:SEquence:DEfault ON | OFF
```
- [] *Key words* in square brackets can be omitted when composing the command header (see chapter 5 of the CMU manual, section "Structure of a Command"). The complete command must be recognized by the instrument for reasons of compatibility with the SCPI standard.

Parameters in square brackets are optional as well. They may be entered in the command or omitted.
- { } Braces or curly brackets enclose one or more parameters that may be included zero or more times.
- <nr> This symbol denotes a numeric suffix, e.g. an enumeration index for input and output connectors.

Lists of commands

- Command:** The *Command* column of the table contains all remote control commands arranged according to their function (configurations or measurement objects). Within a section, the commands are listed in alphabetical order.
- Parameters:** The *Parameter* column lists the parameters of the commands.
- Remarks:** The *Remarks* column gives additional information about the commands which
 - Have no query form (*no query*)
 - Have only a query form (*query only*)
 - Can be used both as setting commands and as queries (*with query*, this applies to all commands belonging to none of the two preceding categories)
- Alphabetical Lists** Chapter 6 concludes with alphabetical command lists for both test modes.

Contents

6 Remote Control – Commands 6.1

Connection Control (Non Signalling only).....6.1

- Subsystem LEVel (Input Level).....6.1
- Subsystem RFANalyzer (Analyzed Input Signals).....6.2
- Subsystem RFGenerator6.4
 - Subsystem RFGenerator[:TX] (TX Generator Control).....6.4
 - Generator Level – Subsystem RFGenerator[:TX]:LEVel.....6.5
 - RF Generator Frequency – Subsystem RFGenerator...:FREQUENCY6.5
 - Subsystem RFGenerator:MODulation6.6
 - Subsystem RFGenerator:AUXTx... (Aux TX Signal)6.7
- Subsystem for Input and Output (Connectors, External Attenuation).....6.8
- Subsystem DM:CLOCK (Synchronization).....6.10
- Subsystem TRIGger (Trigger Mode).....6.10

Config. File Management – System MMEMory6.12

Measurement Groups (Non Signalling only)6.13

- POWER[:NORMal].....6.13
 - Control of measurement – Subsystem Power6.13
 - Test Configuration.....6.14
 - Subsystem POWER:CONTRol6.14
 - Subsystem POWER:LIMit:LINE.....6.16
 - Subsystem POWER:LIMit:ABPower6.22
 - Subsystem SUBarrays:POWER6.23
 - Measured Values – Subsystem POWER6.23
- POWER:MPR6.28
 - Control of measurement – Subsystem POWER:MPR6.28
 - Subsystem POWER:MPR:CONTRol6.29
 - Test Configuration.....6.29
 - Subsystem SUBarrays:POWER:MPR6.30
 - Measured Values – Subsystem POWER:MPR6.31

Common Measurements and Command Groups.....3.34

- Option Query3.34
- Partial Reset.....3.35
- I/Q-IF Interface3.35
- Symbolic Status Event Register Evaluation.....3.36
- WPOWER3.37
 - Measured Values – Subsystem WPOWER?.....3.39
- NPOWER3.40
 - Subsystem NPOWER:CONTRol.....3.41
 - Measured Values – Subsystem NPOWER?3.42
- POWER:SLOT3.43
 - POWER:SLOT:CONTRol.....3.44

Subsystem SUBarrays:POWer:SLOT	3.45
Subsystem POWer:SLOT	3.45
POWer:XSLot.....	3.47
Subsystem POWer:XSLot:CONTRol	3.48
Subsystem POWer:XSLot:SCOUNT.....	3.48
Subsystem SUBarrays:POWer:XSLot	3.50
Subsystem POWer:XSLot?	3.50
POWer:FRAME	3.52
Subsystem POWer:FRAME:CONTRol.....	3.53
Subsystem SUBarrays:POWer:FRAME.....	3.54
Subsystem POWer:FRAME	3.54
POWer:MSLot.....	3.56
Control of Measurement – Subsystem POWer:MSLot.....	3.56
Subsystem POWer:MSLot:CONTRol.....	3.57
Test Configuration.....	3.58
Subsystem SUBarrays:POWer:MSLot	3.60
Measured Values	3.60
Tolerance Template	3.64
MODulation[:PERRor].....	3.66
Control of Measurement – Subsystem MODulation[:PERRor][:GMSK]	3.66
Subsystem MODulation[:PERRor][:GMSK]:CONTRol.....	3.67
Tolerance values – Subsystem MODulation[:PERRor][:GMSK]:LIMit.....	3.68
Subsystem MODulation...:TIME.....	3.70
Subsystem SUBarrays:MODulation[:PERRor][:GMSK].....	3.70
Measured Values – Subsystem MODulation[:PERRor][:GMSK]?	3.71
MODulation:XPERror	3.74
Control of Measurement – Subsystem MODulation:XPERror[:GMSK]	3.74
Subsystem MODulation:XPERror[:GMSK]:CONTRol.....	3.75
Tolerance values – Subsystem MODulation:XPERror[:GMSK]:LIMit.....	3.76
Subsystem SUBarrays:MODulation:XPERror[:GMSK].....	3.78
Measured Values – Subsystem MODulation:XPERror[:GMSK].....	3.79
MODulation[:OVERview].....	3.82
Control of Measurement – Subsystem MODulation:OVERview:EPSK	3.82
Test Configuration.....	3.83
Subsystem MODulation:OVERview:EPSK:CONTRol.....	3.83
Tolerance values – Subsystem MODulation:OEMP:EPSK:LIMit	3.84
Measured Values – Subsystem MODulation:OVERview:EPSK.....	3.85
MODulation:EVMagnitude.....	3.87
Control of Measurement – Subsystem MODulation:EVMagnitude	3.87
Test Configuration.....	3.88
Subsystem MODulation:EVMagnitude:EPSK:CONTRol.....	3.88
Tolerance values – Subsystem MODulation:OEMP:EPSK:LIMit	3.89
Subsystem SUBarrays:MODulation.....	3.90
Measured Values – Subsystem MODulation:EVMagnitude:EPSK	3.91
MODulation:PERRor	3.93
Control of Measurement – Subsystem MODulation:PERRor	3.93
Test Configuration.....	3.94
Subsystem MODulation[:PERRor]:EPSK:CONTRol	3.94
Tolerance values – Subsystem MODulation:OEMP:EPSK:LIMit	3.95

Subsystem SUBarrays:MODulation[:PERRor]:EPSK.....	3.96
Measured Values – Subsystem MODulation[:PERRor]:EPSK.....	3.97
MODulation:MERRor	3.99
Control of Measurement – Subsystem MODulation:MERRor	3.99
Test Configuration.....	3.100
Subsystem MODulation:MERRor:EPSK:CONTRol	3.100
Tolerance values – Subsystem MODulation:OEMP:EPSK:LIMit	3.101
Subsystem SUBarrays:MODulation.....	3.102
Measured Values – Subsystem MODulation:MERRor:EPSK	3.102
SPECTrum	3.105
SPECTrum:MODulation	3.106
Control of Measurement – Subsystem SPECTrum:MODulation	3.106
Subsystem SPECTrum:MODulation:CONTRol.....	3.107
Test Configuration.....	3.108
Subsystem SPECTrum:MODulation:....	3.108
Subsystem SPECTrum:MODulation:LIMit:LINE	3.109
Subsystem SUBarrays:SPECTrum:MODulation.....	3.111
Measured Values	3.112
Subsystem SPECTrum:MODulation	3.112
SPECTrum:SWITching.....	3.116
Control of Measurement – Subsystem SPECTrum:SWITching	3.116
Subsystem SPECTrum:SWITching:CONTRol	3.117
Test Configuration.....	3.119
Subsystem SPECTrum:SWITching:.....	3.119
Subsystem SPECTrum:SWITching:LIMit:LINE	3.119
Subsystem SUBarrays:SPECTrum:SWITching	3.121
Measured Values	3.123
Subsystem SPECTrum:SWITching.....	3.123
SPECTrum:MSWitching	3.127
Control of Measurement – Subsystem SPECTrum:MSWitching.....	3.127
Subsystem SPECTrum:MSWitching:CONTRol	3.128
Test Configuration.....	3.129
Subsystem SPECTrum:MSWitching:LIMit:LINE	3.129
Measured Values	3.129
Subsystem SPECTrum:MSWitching.....	3.130
Measurement Groups (Signalling only)	6.132
POWER[:NORMal].....	6.132
Control of Measurement – Subsystem Power[:NORMal]	6.132
Test Configuration.....	6.134
Subsystem POWER[:NORMal]:CONTRol	6.134
Subsystem POWER[:NORMal]...:LIMit:LINE	6.136
Subsystem POWER[:NORMal]...:LIMit:ABPower	6.141
Subsystem SUBarrays:POWER	6.142
Measured Values	6.142
Subsystem POWER[:NORMal].....	6.142
POWER:ABURst.....	6.148
Control of Measurement – Subsystem Power:ABURst.....	6.148
Test Configuration.....	6.149
Subsystem POWER:ABURst...:TIME	6.149
Subsystem SUBarrays:POWER	6.150

Measured Values	6.150
Subsystem POWER:ABURst.....	6.150
POWER:PCL.....	6.154
Subsystem POWER:PCL:CONTRol.....	6.155
Subsystem POWER:PCL:CHANnel	6.155
Subsystem POWER:PCL	6.156
POWER:MPR	6.158
Control of measurement – Subsystem POWER:MPR	6.158
Subsystem POWER:MPR:CONTRol.....	6.159
Test Configuration.....	6.160
Subsystem SUBarrays:POWER:MPR	6.160
Measured Values – Subsystem POWER:MPR	6.161
Receiver Quality.....	6.164
General Settings – Subsystem RXQuality.....	6.164
Confidence BER – Subsystem RXQuality:CONTRol:CONFidence.....	6.165
Receiver Quality – Single Shot	6.166
Control of Measurement – Subsystem RXQuality:BER	6.166
Subsystem RXQuality:BER:CONTRol.....	6.167
Subsystem RXQuality:BER:LIMit	6.171
Measured Values – Subsystem RXQuality:BER	6.172
Receiver Quality – Continuous	6.175
Control of Measurement – Subsystem RXQuality:BAVerge.....	6.175
Subsystem RXQuality:BAVerge:CONTRol.....	6.176
Subsystem RXQuality:BAVerge:LIMit	6.178
Measured Values – Subsystem RXQuality:BAVerge	6.179
Receiver Quality – Block Error Ratio	6.182
Control of Measurement – Subsystem RXQuality:BLER.....	6.182
Subsystem RXQuality:BLER:CONTRol.....	6.183
Measured Values – Subsystem RXQuality:BLER	6.184
Symbolic Status Event Register Evaluation.....	6.186
Connection Control (Signalling only).....	6.187
Subsystem LEVel (Input Level).....	6.187
Subsystem TRIGger (Trigger Mode).....	6.188
Subsystem SIGNalling (Connection Setup and Cleardown).....	6.190
Subsystem HANDoVer	6.196
Subsystem MCONTRol (Measured Slots).....	6.197
Subsystem MSSignal (Signal of Mobile Station)	6.197
Subsystem BSSignal (Signal of Base Station/CMU)	6.200
Subsystem BSSignal:CCH:AUXTx (Aux Tx Signal)	6.205
Subsystem NETWorK.....	6.206
Subsystem NETWorK:IDENtity	6.207
Subsystem NETWorK:SYSTem (System Parameters).....	6.208
Subsystem NETWorK[:CSWitched]:SMODE (Type of Signalling)	6.210
Subsystem NETWorK[:CSWitched]:REQUest (Requested Mobile Data)	6.212
Subsystem NETWorK[:CSWitched]:AMR (AMR Codec Test)	6.213
Subsystem NETWorK[:CSWitched]:TIMEout	6.216
Subsystem NETWorK:SI2Quater	6.217

Connector Subsystems (External Attenuation at the Connectors)	6.218
Subsystem DM:CLOCK (Synchronization).....	6.219
RREPorts	6.220
MSSInfo (Signalling Information of Mobile Phone)	6.223
File Management – System MMEMemory	6.226
Options and Extensions	6.228
GPRS and EGPRS Signalling.....	6.228
Signalling – Subsystem SIGNalling:PDATa.....	6.228
Subsystem MSSignal:PDATa (RF Signal of MS under Test).....	6.232
Subsystem BSSignal:PDATa (RF Signal of Base Station/CMU)	6.232
Subsystem NETWORK.....	6.234
Subsystem NETWORK:IDENTity	6.235
Subsystem NETWORK:PDATa	6.235
MSSInfo	6.238
Adaptive Multi-Rate (AMR) Speech Codec.....	6.239
Subsystem NETWORK[:CSwitched]:AMR (AMR Codec Test)	6.239
MSSInfo (AMR Codec Modes).....	6.243
List of Commands	6.244
Commands for GSM Module Tests.....	6.244
Commands for GSM Mobile Tests.....	6.263
Alphabetical Command Lists.....	6.291

6 Remote Control – Commands

In the following, all remote-control commands for the function groups *GSM400/850/900/1800/1900-MS* will be presented in tabular form with their parameters and the ranges of values. The chapter is organized in analogy to the reference part for manual operation (chapter 4).

- The measurement modes *Non Signalling* and *Signalling* are presented separately.
- Within the measurement modes, general configurations (*Connection Control*) and the individual measurement groups are described separately.
- Command and measurement groups that are identical in both test modes (*WPOWER*, *NPOWER*, *POWER:SLOT,...,IQIF*, symbolic status register evaluation) are presented in a separate section between the two test modes.

General notes on remote control in the function group *GSM400/850/900/1800/1900-MS* can be found in chapter 5. An introduction to remote control according to the IEEE 488.2/SCPI standard is given in chapter 5 of the CMU200/300 operating manual.

Connection Control (Non Signalling only)

In the *Non Signalling* mode, a GSM-specific RF signal can be generated and an RF signal with GSM characteristics analyzed. No signalling parameters are transferred.

The remote-control commands presented in this section determine the RF analyzer and trigger settings and the signals generated by the CMU, the inputs and outputs used as well as the reference frequency. They correspond to the settings in the popup menu of the softkey *Connect. Control*, located to the right of the headline of each main menu.

Subsystem LEVel (Input Level)

The subsystem *LEVel* controls the level in the RF input signal path. It corresponds to the table section *Input Level* in the *Analyzer* tab of the *Connection Control* menu.

[SENSe:]LEVel:MODE <Mode>		Input level – Mode		
<Mode>	Description of parameters	Def. value	Def. unit	FW vers.
MAN ual	Manual setting	AUT	-	V2.10
AUT omatic	Automatic setting corresponding to average power of signal applied			
Description of command				
This command defines how the maximum input level is set.				

[SENSe:]LEVel:MAXimum <Level>				Max. Level
<Level>	Description of parameters	Def. value	Def. unit	FW vers.
-40 dBm to +53 dBm	Maximum input level for RF 1	+30.0	dBm	V1.20
-54 dBm to +39 dBm	Maximum input level for RF 2	+30.0		
-77 dBm to 0 dBm	Maximum input level for RF 4 IN	0.0		
Description of command				
This command defines the maximum expected input level. This is possible even if the level is determined automatically (command LEV:MODE AUT). The value range depends on the RF input used and the external attenuation set (see [SENSe:]CORRection:LOSS:INPut<nr>[:MAGNitude] command).				

[SENSe:]LEVel:ATTenuation <Mode>				Attenuation
<Mode>	Description of parameters	Def. value	Def. unit	FW vers.
NORMAL	Mixer level in normal range	LNOise	-	V1.20
LNOise	Low noise (mixer level 10 dB higher than in normal setting)			
LDIStortion	Low distortion (mixer level 10 dB lower than in normal setting)			
Description of command				
This command tunes the RF analyzer for normal setting, low noise level (full dynamic range), or low distortion (high intermodulation spacing).				

[SENSe:]LEVel:DEFault <Enable>				Default Settings
<Enable>	Description of parameters	Def. value	Def. unit	FW vers.
ON	The parameters are set to their default values	ON	-	V1.20
OFF	Some or all parameters differ from the default values			
Description of command				
If used as a setting command with the parameter ON this command sets all parameters of the subsystem to their default values (the setting OFF causes an error message).				
If used as a query the command returns whether all parameters are set to their default values (ON) or not (OFF).				

Subsystem RFANalyzer (Analyzed Input Signals)

The subsystem *RFANalyzer* configures the RF analyzer, i.e., it specifies which type of RF signals can be analyzed. It corresponds to the panel *Analyzer Settings* in the *Analyzer* tab of the popup menu *Connect. Control*.

[SENSe]:RFANalyzer:CHANnel <Number>			RF Channel	
<Number>	Description of parameters	Def. value	Def. unit	FW vers.
0.2 MHz to 2700 MHz (see also data sheet)	Input frequency	455 (GSM400) 837 (GSM850) 903 (GSM900) 1750 (GSM1800) 1880 (GSM1900)	MHz MHz MHz MHz MHz	V2.00
Description of command				
<p>This command defines the frequency of the RF signal analyzed. As an alternative to frequencies, the corresponding GSM channels (with the character string CH annexed to the channel number) can be entered (259CH to 293 CH and 306 to 340 for GSM400, 128CH to 251CH for GSM850, 0CH to 124CH or 955CH to 1023CH for GSM900, 512CH to 885CH for GSM1800, 512CH to 810CH for GSM1900, see GSM channel tables in chapter 4). The assignment of channel numbers and frequencies meets the GSM specification for the uplink (signal direction from mobile to CMU). The query always returns frequencies.</p>				

[SENSe]:RFANalyzer:FREQUENCY:OFFSet <FreqOffset>			Frequency Offset	
<FreqOffset>	Description of parameters	Def. value	Def. unit	FW vers.
-100 kHz to +100 kHz	Offset for channel frequency	0	kHz	V1.20
Description of command				
<p>This command defines an offset for the channel frequency set with the command [SENSe]:RFANalyzer:CHANnel <Number>. The offset frequency must be in multiples of 1 Hz.</p>				

[SENSe]:RFANalyzer:TSEQUence <TrainingSequence>			Training Sequence	
<TrainingSequence>	Description of parameters	Def. value	Def. unit	FW vers.
OFF GSM0 to GSM7 DUMMY ANY	No training sequence detected GSM-specific training sequence GSM dummy burst Arbitrary training sequence allowed	OFF	-	V1.15
Description of command				
<p>This command determines the training sequence of the signal analyzed. If no training sequence is specified (OFF), the CMU measures all signals. In the setting ANY, it uses any training sequence for synchronization.</p>				

CONFigure:RFANalyzer:TPCL <PCL>			TPCL	
<PCL>	Description of parameters	Def. value	Def. unit	FW vers.
0 to 31	Template PCL	15	-	V2.10
Description of command				
<p>This command defines the template PCL which is used for dynamic limit line correction in the POWER measurement.</p>				

[SENSe]:RFANalyzer:MODulation <Mod_Scheme>			Modulation	
<Mod_Scheme>	Description of parameters	Def. value	Def. unit	FW vers.
GMSK EPSK	Modulation scheme GMSK or EPSK	GMSK	-	V2.15
Description of command				
<p>This command selects one of the supported modulation schemes.</p>				

CONFigure:RFANalyzer:MCONtrol:TSOFFset <Slots>		Trig. Slot Offset		
<Slots>	Description of parameters	Def. value	Def. unit	FW vers.
0 to 7	Trigger slot offset, no. of slots	0	–	V3.05
Description of command				
This command defines a delay time between the trigger time and the measured timeslot.				

RFANalyzer:DEFault <Enable>		Default Settings		
<Enable>	Description of parameters	Def. value	Def. unit	FW vers.
ON 	The parameters are set to their default values	ON	–	V3.05
OFF	Some or all parameters differ from the default values			
Description of command				
If used as a setting command with the parameter <i>ON</i> this command sets all parameters of the subsystem to their default values (the setting <i>OFF</i> causes an error message).				
If used as a query the command returns whether all parameters are set to their default values (<i>ON</i>) or not (<i>OFF</i>).				

Subsystem RFGenerator

The subsystem *RFGenerator* configures and controls the RF generator. The generator generates two independent RF signals Tx and Aux Tx (with option CMU-B95, *Additional RF Generator*), referenced by the third-level keywords [:TX] and :AUXTx respectively. The generator corresponds to the *Generator* tab in the popup menu *Connect. Control*.

Subsystem RFGenerator[:TX] (TX Generator Control)

The subsystem *RFGenerator[:TX]* controls the RF generator providing the Tx signal. It corresponds to the *Generator Tx – Generator Control* function in the *Generator* tab of the *Connection Control* menu.

INITiate:RFGenerator[:TX]	Start RF generator, reserve resources	⇒	<i>RUN</i>
ABORt:RFGenerator[:TX]	Switch off RF generator, release resources	⇒	<i>OFF</i>
Description of command			FW vers.
These commands have no query form. They start and stop the RF generator for the TX signal, setting it to the status indicated in the top right column.			V1.15

FETCh:RFGenerator[:TX]:STATus?		Generator		
Returned values	Description of parameters	Def. value	Def. unit	FW vers.
OFF 	Generator switched off (ABORt or *RST)	OFF	–	V1.15
RUN 	Running (INITiate)			
ERR	Switched off (could not be started)			
Description of command				
This command is always a query. It returns the current TX generator status.				

Generator Level – Subsystem RFGenerator[:TX]:LEVel

The subsystem *RFGenerator[:TX]:LEVel* determines the level of the generated TX signal. It corresponds to the *Generator TX* level settings in the *Generator* tab of the popup menu *Connect. Control*.

SOURCE:RFGenerator[:TX]:LEVel:UTIMeslot <Level>		RF Level used		
<Level>	Description of parameters	Def. value	Def. unit	FW vers.
-137.0 dBm to -27.0 dBm	RF1 level in used timeslot	-27.0	dBm	V1.15
-137.0 dBm to -10.0 dBm	RF2 level in used timeslot	-27.0	dBm	
-90.0 dBm to +13.0 dBm	RF 3 OUT level in used timeslot	-27.0	dBm	
Description of command				
This command determines the TX generator level in the used timeslot. The value range depends on the RF output of the CMU used and the external attenuation set (see [SENSe:]CORREction:LOSS:OUTPut<nr> [:MAGNitude] command).				
The level ranges and defaults are valid for GMSK-modulated generator signals. With 8PSK modulation, all level ranges are shifted by -4.0 dB and the default level for RF1 is changed to -31.0 dBm.				

SOURCE:RFGenerator[:TX]:LEVel:UNTimeslot <Level>		RF Level unused		
<Level>	Description of parameters	Def. value	Def. unit	FW vers.
-110.0 dB to +0.0 dB	Level in unused timeslots, RF 1	-80.0	dB	V1.15
-110.0 dB to +17.0 dB	Level in unused timeslots, RF 2	-80.0	dB	
-63.0 dB to +40.0 dB	Level in unused timeslots, RF 3 OUT	-80.0	dB	
Description of command				
This command determines the TX generator level in the unused timeslots relative to the level in the used timeslot.				
The absolute level in the unused timeslots, i.e. the sum of numerical values set under <i>UTIMeslot</i> and <i>UNTimeslot</i> must also lie within the range for the RF output. This condition further restricts the permissible maximum level for the unused timeslots.				

RF Generator Frequency – Subsystem RFGenerator...:FREQuency

The subsystem *RFGenerator...:FREQuency* determines the frequency of the generated RF signals *TX* and *Aux TX*. It corresponds to the softkeys *RF Channel* and *Freq. Offset* in the *Generator* tab in the popup menu *Connect. Control*.

Note: *The Frequency can be selected independently for the TX and Aux TX signals. The selected Frequency Offset is a small correction to the frequency which applies to both signals.*

SOURCE:RFGenerator:FM:DEVIation <FrequencyOffset>		Frequency Offset		
<FrequencyOffset>	Description of parameters	Def. value	Def. unit	FW vers.
-100 kHz to +100 kHz	Frequency offset	0	kHz	V1.15
Description of command				
This command determines a frequency offset for the CMU signals in the selected RF channel (relative to the frequency specified in the GSM standard). In firmware versions V3.50 and higher, the frequency offset also applies to <i>Aux TX</i> signals.				

SOURce:RFGenerator[:TX]:FREQUENCY[:CHANnel] <Number>			RF Channel (TX)	
<Number>	Description of parameters	Def. value	Def. unit	FW vers.
0.2 MHz to 2700 MHz (see also data sheet)	Input frequency	465 (GSM400)	MHz	V1.15
		882 (GSM850)	MHz	
		948 (GSM900)	MHz	
		1845 (GSM1800)	MHz	
		1960 (GSM1900)	MHz	
Description of command				
<p>This command defines the frequency of the generated RF signal. The resolution is 200 kHz; all values entered are rounded to 200 kHz steps.</p> <p>As an alternative to frequencies, the corresponding GSM channels (with the character string CH annexed to the channel number) can be entered ((259CH to 293 CH and 306 to 340 for GSM400, 128CH to 251CH for GSM850, 0CH to 124CH or 955CH to 1023CH for GSM900, 512CH to 885CH for GSM1800, 512CH to 810CH for GSM1900, see GSM channel tables in chapter 4). The assignment of channel numbers and frequencies meets the GSM specification for the downlink (signal direction from mobile to CMU). The query always returns frequencies.</p>				

SOURce:RFGenerator:AUXTx:FREQUENCY[:CHANnel] <Frequency>			Frequency (Aux TX)	
<Frequency>	Parameter description	Def. value	Def. unit	FW vers.
350 MHz to 550 MHz 700 MHz to 1100 MHz 1400 MHz to 2200 MHz	Aux Tx frequency	465 (GSM400)	MHz	V3.50
		882 (GSM850)	MHz	
		948 (GSM900)	MHz	
		1845 (GSM1800)	MHz	
		1960 (GSM1900)	MHz	
Command description				
<p>This command defines the frequency of the generated Aux Tx signal. The resolution is 200 kHz; all values entered are rounded to 200 kHz steps. If a value between the three distinct frequency bands is entered, the instrument generates an error message.</p>				

Subsystem RFGenerator:MODulation

The subsystem *RFGenerator:MODulation* determines an information which is modulated on the RF signal generated by the CMU and the signal shape. It corresponds to the panel *Generator Modulation* in the *Generator* tab in the popup menu *Connect. Control*.

CONFigure:RFGenerator:MODulation:BIT:SElection <Selection>			Bit Modulation	
<Selection>	Description of parameters	Def. value	Def. unit	FW vers.
OFF 	No modulation sequence (unmod. carrier)	ALL0	-	V1.15
PRBS 	Pseudo-random bit sequence			V2.15
DUMMybursts 	GSM dummy bursts			(8PSK)
ALL0 	Modulation sequence consisting of zeros			
EALL0 	Zeros, 8PSK modulation			
EPRBs	Pseudo-random bit sequence, 8PSK mod.			
Description of command				
The command selects a bit sequence used to modulate the generated signal.				

CONFigure:RFGenerator:MODulation:TSEquence:SELECTION <SELECTION>		Training Sequence		
<SELECTION>	Description of parameters	Def. value	Def. unit	FW vers.
GSM0 to GSM7 	GSM standard training sequences no. 0 to 7	GSM0	–	V1.15
DUMMY 	GSM dummy burst			
ALLO	Training sequence consisting of zeros only			
Description of command				
The command selects a training sequence used to modulate the signal generated by the CMU.				

CONFigure:RFGenerator:MODulation:TRANsmission <Mode>		Transmission		
<Mode>	Description of parameters	Def. value	Def. unit	FW vers.
BURSt 	Bursted RF signal	BURSt	–	V1.15
CONTinuous	Continuous signal (not for 8PSK modulation)			
Description of command				
This command determines whether the CMU generates a burst or a continuous RF carrier signal. An 8PSK-modulated signal is always bursted.				

Subsystem RFGenerator:AUXTx... (Aux TX Signal)

The subsystem *RFGenerator:AUXTx* configures the auxiliary generator signal *Aux Tx* (only with option CMU-B95, *Additional RF Generator*). It corresponds to the *Generator Aux Tx* section in the *Generator* tab of the *Connection Control* menu.

Aux Tx is an additional RF signal generated by the CMU that can be applied to the one of the RF connectors RF1 or RF2. It is possible to superimpose both RF signals at the same output connector or use different connectors (commands `OUTPut[:STATe]` and `OUTPut:AUXTx[:STATe]`). Moreover, it is possible to assign independent external attenuation factors to both signals (`[SENSe:]CORRection:LOSS:OUTPut<nr>[:MAGNitude]`, `SOURce:CORRection:LOSS:OUTPut<nr>[:MAGNitude]`, `[SENSe:]CORRection:LOSS:OUTPut<nr>:AUXTx[:MAGNitude]`, `SOURce:CORRection:LOSS:OUTPut<nr>:AUXTx[:MAGNitude]`).

Aux Tx is generated with the training sequence and bit modulation settings of the primary TX signal (...*RFGenerator:MODulation*...) but with no ramping.

INITiate:RFGenerator:AUXTx	Start Aux Tx generator, reserve resources	⇒ RUN
ABORt:RFGenerator:AUXTx	Switch off generator, release resources	⇒ OFF
Command description		FW vers.
These commands have no query form. They start or stop the RF generator for the Aux Tx signal, setting it to the status indicated in the top right column.		V3.50

FETCh:RFGenerator:AUXTx:STATus?		Generator status		
Returned value	Parameter description	Def. value	Def. unit	FW vers.
OFF 	Generator switched off (ABORt or *RST)	OFF	–	V3.50
RUN 	Running (INITiate)			
ERR	Switched off (could not be started)			
Command description				
This command is always a query. It returns the current Aux Tx generator status.				

SOURCE:RFGenerator:AUXTx:LEVEL <Level>				RF Level
<Level>	Parameter description	Def. value	Def. unit	FW vers.
-122.0 dBm to -72.0 dBm	Aux Tx output level at RF1	-72.0	dBm	V3.50
-110.0 dBm to -60.0 dBm	Aux Tx output level at RF2	-60.0	dBm	
Command description				
<p>This command defines the Aux Tx signal level. The value range depends on the RF output of the CMU used and the external attenuation set (see [SENSe:]CORRection:LOSS:OUTPut<nr>:AUXTx[:MAGNitude] command).</p> <p>The level ranges and defaults are valid for GMSK-modulated generator signals. With 8PSK modulation, all level ranges are shifted by -4.0 dB and the default level for RF1 is changed to -64.0 dBm.</p>				

Subsystem for Input and Output (Connectors, External Attenuation)

The subsystem for input and output configures the input and output connectors. The subsystem corresponds to the tab *RF* in the popup menu *Connect. Control*.

INPut[:STATe] <State>				RF Input
<State>	Description of parameters	Def. value	Def. unit	FW vers.
RF1	Connector RF 1 used as input	RF2	-	V1.15
RF2	Connector RF 2 used as input			
RF4	Connector RF 4 IN used as input			
Description of command				
<p>This command determines the connector to be used for RF input signals. The bidirectional connectors RF 1 and RF 2 can be used both as input and output connectors in the same measurement (see OUTPut[:STATe]).</p> <p>Only one input and one output may be active at the same time, a new RF input setting supersedes the previous one.</p>				

OUTPut[:STATe] <State>				RF Output
<State>	Description of parameters	Def. value	Def. unit	FW vers.
RF1	Connector RF 1 used as output	RF2	-	V1.15
RF2	Connector RF 2 used as output			
RF3	Connector RF 3 OUT used as output			
Description of command				
<p>This command determines the connector to be used for RF output signals. The bidirectional connectors RF 1 and RF 2 can be used as input and output connectors in the same measurement (see INPut[:STATe]).</p> <p>Only one input and one output may be active at the same time, a new RF output setting supersedes the previous one.</p>				

[SENSe:]CORRection:LOSS:INPut<nr>[:MAGNitude] <Attenuation>				SOURce:CORRection:LOSS:INPut<nr>[:MAGNitude] <Attenuation>		Ext. Att. Input
<Attenuation>	Description of parameters	Def. value	Def. unit	FW vers.		
-50 dB to +50 dB	Value for ext. attenuation at input<nr> where <nr> = 1, 2	0.0	dB	V1.15		
-90 dB to +90 dB	Value for ext. attenuation at RF4 IN (<nr> = 4)	0.0	dB			
Description of command						
This command assigns an external attenuation value to the inputs of the instrument (RF 1, RF 2, RF4 IN).						

[SENSe:]CORRection:LOSS:OUTPut<nr>[:MAGNitude] <Attenuation>				
SOURce:CORRection:LOSS:OUTPut<nr>[:MAGNitude] <Attenuation>		Ext. Att. Output		
<Attenuation>	Description of parameters	Def. value	Def. unit	FW vers.
-50 dB to +50 dB	Value for ext. attenuation at output<nr> where <nr> = 1, 2	0.0	dB	V1.15
-90 dB to +90 dB	Value for ext. attenuation at RF3 OUT (<nr> = 3)	0.0	dB	
Description of command				
This command assigns an external attenuation value to the outputs of the instrument (<i>RF 1, RF 2, RF3 OUT</i>).				

OUTPut:AUXTx[:STATe] <State>		RF Output (Aux TX)		
<State>	Parameter description	Def. value	Default unit	FW vers.
RF1	Connector RF1 used as output	RF2	–	V3.50
RF2	Connector RF2 used as output			
Command description				
This command determines the output connector to be used for the generated Aux Tx signal. The bidirectional connectors RF 1 and RF 2 can be used both as input and output connectors in the same measurement. Only one input and one output may be active simultaneously, so the previous one is automatically deactivated on switch-over.				

[SENSe:]CORRection:LOSS:OUTPut<nr>:AUXTx[:MAGNitude] <Absorption>				
SOURce:CORRection:LOSS:OUTPut<nr>:AUXTx[:MAGNitude] <Absorption>		Ext. Att. Output (Aux TX)		
<Absorption>	Parameter description	Def. value	Default unit	FW vers.
-50 dB to +50 dB	Value for external attenuation at output <nr>, where <nr> = 1,2	0.0	dB	V3.50
Command description				
This command assigns an external attenuation value to the outputs of the instrument. An external attenuation of x dB increases the Aux Tx signal level (<i>SOURce:RFGenerator:AUXTx:LEVel</i>) by x dB.				

Subsystem DM:CLOCK (Synchronization)

The subsystem *DM:CLOCK* sets a system clock specific to the network. This frequency is set in the tab *Sync.* in the popup menu *Connect. Control.*

SOURce:DM:CLOCK:STATe <Mode>		REF OUT 2 on/off		
<Mode>	Description of parameters	Def. value	Def. unit	FW vers.
ON OFF	Switch on/off system clock	OFF	–	V1.15
Description of command				
This commands switches the system clock specific to the network at the <i>REF OUT 2</i> connector on or off.				

SOURce:DM:CLOCK:FREQuency <Frequency>		REF OUT 2				
<Frequency>	Description of parameters	Def. value	Def. unit	FW vers.		
1.219 MHz to 39.000 MHz	Input value for the system clock	13.000	MHz	V1.15		
Description of command						
This command determines the system clock frequency applied to <i>REF OUT 2</i> . The frequency entered is internally rounded to one of the following discrete values:						
39.000 MHz,	19.500 MHz,	13.000 MHz,	9.750 MHz,	7.800 MHz,	6.500 MHz,	5.571 MHz,
4.875 MHz,	4.333 MHz,	3.900 MHz,	3.545 MHz,	3.250 MHz,	3.000 MHz,	2.786 MHz,
2.600 MHz,	2.438 MHz,	2.294 MHz,	2.166 MHz,	2.053 MHz,	1.950 MHz,	1.857 MHz,
1.773 MHz,	1.696 MHz,	1.625 MHz,	1.560 MHz,	1.500 MHz,	1.444 MHz,	1.393 MHz,
1.349 MHz,	1.300 MHz,	1.258 MHz,	1.219 MHz			

Subsystem TRIGger (Trigger Mode)

The subsystem *TRIGger* defines the trigger mode. It corresponds to the *Trigger* tab in the *Connection Control* menu.

TRIGger[:SEQuence]:SOURce <Source>		Source		
<Source>	Description of parameters	Def. value	Def. unit	FW vers.
FRUN	The power measurement is triggered by the TDMA timing of the GSM input signal	IFPower ^{*)}	–	V1.15
RFPower	Wideband RF power trigger			
IFPower	Narrow-band IF power trigger			
EXTErn	External trigger signal at connector AUX3/4.			
Description of command				
This command defines the source for the trigger event. The settings <i>RFPower</i> and <i>IFPower</i> require burst signals. The setting <i>FRUN</i> requires burst signals with incorporated training sequence. Some measurements are not compatible with all trigger sources, see chapter 4.				
*) Firmware version V3.50 and higher. Earlier versions use <i>FRUN</i> as default value.				

TRIGger[:SEQuence]:THReShold:RFPower <Threshold>		Level – RF Power		
<Threshold>	Parameter description	Def. value	Default unit	FW vers.
LOW 	Low trigger threshold (<i>RF Max. Level</i> – 26 dB)	MEDium	–	V3.10
MEDium 	Medium trigger threshold (<i>RF Max. Level</i> – 16 dB)			
HIGH	High trigger threshold (<i>RF Max. Level</i> – 6 dB)			
Command description				
This command sets the RF input signal level at which the measurement is triggered relative to the maximum RF input level; see [SENSe:]LEVel:MAXimum. The setting has effect for trigger source RFPower only (see TRIG:SEQ:SOUR).				

TRIGger[:SEQuence]:THReShold:IFPower <Threshold>		Level – IF Power		
<Threshold>	Parameter description	Def. value	Default unit	FW vers.
–47 dB to 0 dB	IF power threshold	–26	dB	V3.10
Command description				
This command sets the IF signal level at which the measurement is triggered. The IF power threshold is defined relative to the maximum RF input level; see [SENSe:]LEVel:MAXimum. The setting has effect for trigger source IFPower only (see TRIG:SEQ:SOUR).				

TRIGger[:SEQuence]:SLOPe <Slope>		Slope		
<Slope>	Parameter description	Def. value	Default unit	FW vers.
POSitive 	Rising edge	POS	–	V3.10
NEGative	Falling edge			
Command description				
This command qualifies whether the trigger event occurs on the <i>Rising Edge</i> or on the <i>Falling Edge</i> of the trigger signal. The setting has no influence on <i>Free Run</i> measurements (see TRIG:SEQ:SOUR).				

TRIGger[:SEQuence]:SOURce:EXTernal <Source>		Ext. Trigger (AUX 3/4)		
<Source>	Description of parameters	Def. value	Def. unit	FW vers.
PIN6 PIN7 PIN8	Pin for external trigger signal	PIN8	–	V3.10
Description of command				
This command determines the pins on the AUX 3 or AUX4 connectors used for the external trigger signal. The setting only has effect if the trigger source is an <i>External</i> signal.				

TRIGger[:SEQuence]:DEFault <Enable>		Default Settings		
<Enable>	Description of parameters	Def. value	Def. unit	FW vers.
ON 	The parameters are set to their default values	ON	–	V1.15
OFF	Some or all parameters differ from the default values			
Description of command				
If used as a setting command with the parameter <i>ON</i> this command sets all parameters of the subsystem to their default values (the setting <i>OFF</i> causes an error message).				
If used as a query the command returns whether all parameters are set to their default values (<i>ON</i>) or not (<i>OFF</i>).				

Config. File Management – System MMEMoRY

The MMEMoRY system provides mass storage capabilities for the CMU. The functionality of this system is included in the *Data* menu; see CMU200/300 operating manual.

The mass storage of the CMU may be internal or external. The internal mass storage device is a section on the internal hard disk that is reserved for mass storage (directory c:\temp). The external mass storage device is either a floppy disk or a PCMCIA memory card, depending on the instrument configuration. The <msus> (mass storage unit specifier) parameter in the MMEMoRY commands denotes the root directory of the INTernal or EXTernal mass storage device.

The <FileName> parameter is a string. The contents of the string may contain characters for specifying subdirectories, e.g. "\TEMP\TRASH\test.txt" for the file named *test.txt* in the TEMP\TRASH subdirectory of the root directory or "TEMP\TRASH\test.txt" for the file named *test.txt* in the TEMP\TRASH subdirectory of the current directory, to be queried with the base system command MMEMoRY:DIRectory [:CURRent]?. The file name itself may contain the period as a separator for extensions.

MMEMoRY:SAVE:CURRent <FileName> [,<msus>]				
Save configurations in current function group and test mode				
Parameters	Parameter description	Def. value	Def. unit	FW vers.
"<FileName>",	Name of the config. file to be created	–	–	V3.10
INTernal EXTernal	Storage device of the config. file	INTernal	–	
Command description				
This command saves the configuration of the current function group and test mode to a configuration file. A "?" in the specified file name will be replaced by current numbers that are automatically incremented, starting with zero. The auto-increment function overwrites an existing file with a "9" in its file name. For instrument settings that may be different in manual and remote control (e.g. the repetition mode for many measurements) the manual setting is saved. The command is available in all function groups. This command is CMU-specific.				

MMEMoRY:RECall:CURRent <FileName> [,<msus>]				
Recall configurations in current function group and test mode				
Parameters	Parameter description	Def. value	Def. unit	FW vers.
"<FileName>",	Name of the config. file to be recalled	–	–	V3.10
INTernal EXTernal	Storage device of the config. file	INTernal	–	
Command description				
This command recalls the configuration of the current function group and test mode from a configuration file. The command is available in all function groups. This command is CMU-specific.				

Measurement Groups (Non Signalling only)

The measurement groups in this section are either provided in *Non Signalling* mode only or implemented with major differences in the two test modes.

POWER[:NORMAl]

The subsystem *POWER[:NORMAl]* measures the MS transmitter output power versus time. The subsystem corresponds to the measurement menu *Power* and the associated popup menu *Power Configuration*.

Important note on GMSK and 8PSK modulation:

The keywords *[:GMSK]* and *:EPSK* in the remote control commands denote GMSK and 8PSK modulation, respectively. The *:EPSK* commands in *Non Signalling* measurements are included in firmware versions V2.15 and higher. The firmware version numbers quoted in the command tables refer to GMSK modulation.

Control of measurement – Subsystem Power

The subsystem *POWER* controls the power measurement.

INITiate:POWER[:NORMAl][:GMSK]	Start new measurement	⇒ RUN
INITiate:POWER[:NORMAl]:EPSK	Start new measurement	⇒ RUN
ABORt:POWER[:NORMAl][:GMSK]	Abort running measurement and switch off	⇒ OFF
ABORt:POWER[:NORMAl]:EPSK	Abort running measurement and switch off	⇒ OFF
STOP:POWER[:NORMAl][:GMSK]	Stop measurement after current stat. cycle	⇒ STOP
STOP:POWER[:NORMAl]:EPSK	Stop measurement after current stat. cycle	⇒ STOP
CONTinue:POWER[:NORMAl][:GMSK]	Next measurement step (only stepping mode)	⇒ RUN
CONTinue:POWER[:NORMAl]:EPSK	Next measurement step (only stepping mode)	⇒ RUN
Description of command		FW vers.
These commands have no query form. They start and stop the power measurement, setting it to the status indicated in the top right column.		V1.15

CONFigure:POWER[:NORMAl][:GMSK]:EREPorting <Mode>		Event Reporting		
CONFigure:POWER[:NORMAl]:EPSK:EREPorting <Mode>				
<Mode>	Description of parameters	Def. value	Def. unit	FW vers.
SRQ 	Service request	OFF	–	1.17
SOPC 	Single operation complete			
SRSQ 	SRQ and SOPC			
OFF	No reporting			
Description of command				
This command defines the events generated when the measurement is terminated or stopped (<i>event reporting</i> , see chapter 5 of CMU200 manual).				

FETCh:POWer[:NORMal][:GMSK]:STATus? FETCh:POWer[:NORMal]:EPSK:STATus?		Measurement Status		
Return	Description of parameters	Def. value	Def. unit	FW vers.
OFF	Measurement in the <i>OFF</i> state (*RST or ABORT)	OFF	–	V1.15
RUN	Running (after INITiate, CONTinue or READ)			
STOP	Stopped (STOP)			
ERR	<i>OFF</i> (could not be started)			
STEP	Stepping mode (<stepmode>=STEP)			
RDY,	Stopped according to repetition mode and stop condition			
1 to 10000	Counter for current statistics cycle			
NONE,	No counting mode set	NONE	–	
1 to 1000	Counter for current evaluation period within a cycle			
NONE	Statistic count set to off	NONE	–	
Description of command				
This command is always a query. It returns the status of the measurement (see chapters 3 and 5).				

CONFigure:POWer[:NORMal][:GMSK]:TOFFset <Offset> CONFigure:POWer[:NORMal]:EPSK:TOFFset <Offset>		Bit Offset		
<Offset>	Description of parameters	Def. value	Def. unit	FW vers.
–4.00 bit to +4.00 bit	Number of bits	0	bit	V2.15
Description of command				
This command defines an offset time in ¼ bit units by which the burst is shifted relative to the time axis and the tolerance template.				

CONFigure:POWer[:NORMal][:GMSK]:FILTer <Filter> CONFigure:POWer[:NORMal]:EPSK:FILTer <Filter>		Filter		
<Mode>	Description of parameters	Def. value	Def. unit	FW vers.
G500	500 kHz Gaussian filter	G500 for GMSK modulation	–	V3.05
B600	600 kHz bandpass filter	B600 for 8PSK modulation		
Description of command				
This command selects the measurement filter for the <i>P/t</i> measurement. The default filter setting differs for the two modulation schemes.				

Test Configuration

The commands of the following subsystems determine the parameters of the signal power measurement. They correspond to the *Power Configuration* popup menu. For a detailed explanation of the different power tolerance templates defined in the GSM standard see chapter 4.

Subsystem POWER:CONTROL

The subsystem *POWER:CONTROL* defines the repetition mode, statistic count, and stop condition of the measurement. These settings are provided in the *Control tab* in the popup menu *Power Configuration*.

CONFigure:POWer[:NORMal][:GMSK]:CONTRol <Mode>, <Statistics> CONFigure:POWer[:NORMal]:EPsk:CONTRol <Mode>, <Statistics>		Scope of Measurement		
<Mode>	Description of parameters	Def. value	Def. unit	
SCALar	Scalar values only (incl. ramp matching)	ARRay	–	
ARRay	Scalar measured values and arrays			
<Statistics>	Description of parameters	Def. value	Def. unit	FW vers.
1 to 1000	Number of bursts per statistics cycle	100	–	V1.15
NONE	Statistics off (equivalent to 1)			
Description of command				
This command specifies the type of measured values and defines the number of bursts forming a statistics cycle.				

CONFigure:POWer[:NORMal][:GMSK]:CONTRol:REPetition CONFigure:POWer[:NORMal]:EPsk:CONTRol:REPetition <Repetition>, <StopCond>, <Stepmode>		Test cycles		
<Repetition>	Description of parameters	Def. value	Def. unit	
CONTInuous	Continuous measurement (until STOP or ABORT)	SING	–	
SINGleshot	Single shot measurement (until Status = RDY)			
1 to 10000,	Multiple measurement (counting, until Status = STEP RDY)			
<StopCond>	Description of parameters	Def. value	Def. unit	FW vers.
SONerror	Stop measurement in case of error (stop on error)	NONE	–	V1.15
NONE,	Continue measurement even in case of error			
<Stepmode>	Description of parameters	Def. value	Def. unit	
STEP	Interrupt measurement after each statistics cycle	NONE	–	
NONE	Continue measurement according to its rep. mode			
Description of command				
This command determines the number of statistics cycles, the stop condition and the stepping mode for the measurement.				
Note: In the case of READ commands (READ: ...), the <Repetition> parameter has no effect; the measurement is always stopped after a single shot.				

DISPlay:POWer[:NORMal][:GMSK]:CONTRol:GRID <Enable> DISPlay:POWer[:NORMal]:EPsk:CONTRol:GRID <Enable>		Grid		
<Enable>	Description of parameters	Def. value	Def. unit	FW vers.
ON	Switch on the grid lines	ON	–	V1.15
OFF	Switch off the grid lines			
Description of command				
This command switches the grid lines in the test diagram on or off.				

CONFigure:POWer[:NORMal]:EPsk:CONtrol:RPMode <Mode>		Ref. Power Mode		
<Mode>	Description of parameters	Def. value	Def. unit	FW vers.
CURrent	Ref. Power calculated from current burst	CURR	–	V2.15
AVERage	Ref. Power calculated from average curve			
DCOMpens	Data compensated/corrected reference power			
Description of command				
This command determines how the reference power (0-dB line in the <i>P/t Norm. 8PSK</i> test diagram) for 8PSK-modulated signals is calculated.				

CONFigure:POWer[:NORMal][:GMSK]:CONtrol:DEFault <Enable>		Default Settings		
CONFigure:POWer[:NORMal]:EPsk:CONtrol:DEFault <Enable>				
<Enable>	Description of parameters	Def. value	Def. unit	FW vers.
ON	The parameters are set to their default values	ON	–	V2.00
OFF	Some or all parameters differ from the default values			
Description of command				
If used as a setting command with the parameter <i>ON</i> this command sets all parameters of the subsystem to their default values (the setting <i>OFF</i> causes an error message).				
If used as a query the command returns whether all parameters are set to their default values (<i>ON</i>) or not (<i>OFF</i>).				

Subsystem POWer:LIMit:LINE

The subsystem *POWer:LIMit:LINE* defines the limit lines, i.e. the tolerance values for the power measurement. The subsystem corresponds to the tab *Limit Lines* in the popup menu *Power Configuration*.

CONFigure:POWer[:NORMal][:GMSK]:LIMit:LINE:UPPer<nr>[:STATic]:ENABle <Enable>		Upper Limit Line		
CONFigure:POWer[:NORMal]:EPsk:LIMit:LINE:UPPer<nr>[:STATic]:ENABle <Enable>				
CONFigure:POWer[:NORMal][:GMSK]:LIMit:LINE:UPPer<nr>[:STATic]				
CONFigure:POWer[:NORMal]:EPsk:LIMit:LINE:UPPer<nr>[:STATic]				
<i>Parameters for query:</i> <StartTime>, <EndTime>, <StartRelLevel>, <EndRelLevel>, <StartAbsLevel>, <EndAbsLevel>, <StartVisibility>, <EndVisibility>				
<i>for setting:</i> <StartTime>, <EndTime>, <StartRelLevel>, <EndRelLevel>, <StartAbsLevel>, <EndAbsLevel>, <Visibility>				
Parameters	Value range	Description of parameters	Def. values	
<Enable>	ON OFF	Area on/off	see below	
<StartTime>, <EndTime>, <StartRelLevel>, <EndRelLevel>, <StartAbsLevel>, <EndAbsLevel>, <Visibility> <StartVisib> <EndVisib>	–10 bit to +156 ¾ bit OFF –10 bit to +156 ¾ bit OFF, –100 dB to 20 dB OFF, –100 dB to 20 dB OFF, –90 dBm to 50.0 dBm OFF, –90 dBm to 50.0 dBm OFF, ON OFF	Start point of time End point of time Start point of level (relative) End point of level (relative) Start point of level (absolute) End point of level (absolute) Range of limit lines on/off		
Description of command				FW vers.
These commands activate and define upper limit lines for normal bursts. The limit lines are defined area by area; the suffix <nr> numbers the various areas in the burst diagram (see chapter 4).				V1.15

For GMSK modulation (keyword [:GMSK]), 8 areas are defined in the default setting, another 8 areas can be activated if required. The default settings are given in the table below:

Suffix	for Enable		forTable		Start rel.Level	Stop rel.Level	Start abs.Level	Stop abs.Level	Visibility
	Enable	Start Time	Stop Time	Stop Time					
1	ON	-10.0 bit	-7 ¼ bit	-7 ¼ bit	-59.0 ¹ dB	-59.02 dB	-36.0 ² dBm	-36.0 ² dBm	ON
2	ON	-7 ¼ bit	-4 ½ bit	-4 ½ bit	-30.0 dB	-30.0 dB	-17.0 ³ dBm	-17.0 ³ dBm	ON
3	ON	-4 ½ bit	-2 ¼ bit	-2 ¼ bit	-6.0 dB	-6.0 dB	OFF	OFF	ON
4	ON	-2 ¼ bit	+½ bit	+½ bit	+4.0 dB	+4.0 dB	OFF	OFF	ON
5	ON	½ bit	150 ¼ bit	150 ¼ bit	+1.0 dB	+1.0 dB	OFF	OFF	ON
6	ON	150 ¼ bit	152 ½ bit	152 ½ bit	-6.0 dB	-6.0 dB	OFF	OFF	ON
7	ON	152 ½ bit	155 ¼ bit	155 ¼ bit	-30.0 dB	-30.0 dB	-17.0 ³ dBm	-17.0 ³ dBm	ON
8	ON	155 ¼ bit	156 ¾ bit	156 ¾ bit	-59.0 ¹ dB	-59.0 ¹ dB	-36.0 ² dBm	-36.0 ² dBm	ON
9	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF
...									
16	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF

The setting *Visibility = Off* implies that the corresponding range, including the limit check, is switched off. *Enable = Off* switches off the entire limit check.

The default settings for 8MSK modulation (EDGE channels, keyword :EPSK) are given in the table below:

Suffix	for Enable		forTable		Start rel.Level	Stop rel.Level	Start abs.Level	Stop abs.Level	Visibility
	Enable	Start Time	Stop Time	Stop Time					
1	ON	-10.0 symb	-7 ¼ symb	-7 ¼ symb	-59.0 ¹ dB	-59.0 ¹ dB	-36.0 ² dBm	-36.0 ² dBm	ON
2	ON	-7 ¼ symb	-4 ½ symb	-4 ½ symb	-30.0 dB	-30.0 dB	-17.0 ³ dBm	-17.0 ³ dBm	ON
3	ON	-4 ½ symb	-2 ¼ symb	-2 ¼ symb	-6.0 dB	-6.0 dB	OFF	OFF	ON
4	ON	-2 ¼ symb	+½ symb	+½ symb	+4.0 dB	+4.0 dB	OFF	OFF	ON
5	ON	½ symb	1 ½ symb	1 ½ symb	+2.4 dB	+2.4 dB	OFF	OFF	ON
6	ON	1 ½ symb	146 ½ symb	146 ½ symb	+4.0 dB	+4.0 dB	OFF	OFF	ON
7	ON	146 ½ symb	147 ½ symb	147 ½ symb	+2.4 dB	+2.4 dB	OFF	OFF	ON
8	ON	147 ½ symb	150 ¼ symb	150 ¼ symb	+4.0 dB	+4.0 dB	OFF	OFF	ON
9	ON	150 ¼ symb	152 ½ symb	152 ½ symb	-6.0 dB	-6.0 dB	OFF	OFF	ON
10	ON	152 ½ symb	155 ¼ symb	155 ¼ symb	-30.0 dB	-30.0 dB	-17.0 ³ dBm	-17.0 ³ dBm	ON
11	ON	155 ¼ symb	156 ¾ symb	156 ¾ symb	-59.0 ¹ dB	-59.0 ¹ dB	-36.0 ² dBm	-36.0 ² dBm	ON
12	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF
...									
16	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF

¹ GSM400/850/900. The value for GSM1800 and GSM1900 is -48.0 dB.

² GSM400/850/900. The value for GSM1800 and GSM1900 is -48.0 dBm.

³ GSM400/850/900. The value for GSM1800 and GSM1900 is -20.0 dBm.

CONFigure:POWer[:NORMal][:GMSK]:LIMit:LINE:LOWer<nr>[:STAtic]:ENABLE <Enable>
 CONFigure:POWer[:NORMal]:EPSK:LIMit:LINE:LOWer<nr>[:STAtic]:ENABLE <Enable>

CONFigure:POWer[:NORMal][:GMSK]:LIMit:LINE:LOWer<nr>[:STAtic]
 CONFigure:POWer[:NORMal]:EPSK:LIMit:LINE:LOWer<nr>[:STAtic] Lower Limit Line

Parameters for query: <StartTime>, <EndTime>, <StartRelLevel>, <EndRelLevel>,
 <StartAbsLevel>, <EndAbsLevel>, <StartVisibility>, <EndVisibility>
 for setting: <StartTime>, <EndTime>, <StartRelLevel>, <EndRelLevel>,
 <StartAbsLevel>, <EndAbsLevel>, <Visibility>

Parameters	Value range	Description of parameters	Def. value
<Enable>	ON OFF	Definition section on/off	See below
<StartTime>, <EndTime>, <StartRelLevel>, <EndRelLevel>, <StartAbsLevel>, <EndAbsLevel>, <Visibility> <StartVisib.> <EndVisib.>	-10 bit to +156 ¼ bit OFF -10 bit to +156 ¼ bit OFF, -100 dB to 20 dB OFF, -100 dB to 20 dB OFF, -90 dBm to 50 dBm OFF, -90 dBm to 50 dBm OFF, ON OFF	Start point of time End point of time Start point of level (relative) End point of level (relative) Start point of level (absolute) End point of level (absolute) Range of limit lines on/off	
Description of command			FW vers.
These commands activate and define lower limit lines for normal bursts. The limit lines are defined area by area; the suffix <nr> numbers the various areas in the burst diagram (see chapter 4).			V1.15

Only 1 area is defined in the default setting, another 15 areas can be activated if required. The default settings for GMSK modulation (keyword [:GMSK]) are shown in the table below:

Suffix	for Enable		for Table		Stop rel.Level	Start rel.Level	Stop abs.Level	abs.Level	Visibility
	Start Enable	Stop Time	Start Time	Stop Time					
1	ON	-10.0 bit	½ bit	OFF	OFF	OFF	OFF	OFF	OFF
2	ON	½ bit	147 ½ bit	-1.0 dB	-1.0 dB	OFF	OFF	OFF	ON
3	ON	147 ½ bit	156 ¼ bit	OFF	OFF	OFF	OFF	OFF	ON
4	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF
...									
16	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF

The default settings for 8MSK modulation (EDGE channels, keyword :EPSK) are given in the table below:

Suffix	for Enable		for Table		Stop rel.Level	Start rel.Level	Stop abs.Level	abs.Level	Visibility
	Start Enable	Stop Time	Start Time	Stop Time					
1	ON	-10.0 symb	½ symb	OFF	OFF	OFF	OFF	OFF	OFF
2	ON	½ symb	1 symb	-2.0 dB	-2.0 dB	OFF	OFF	OFF	ON
3	ON	1 symb	1 ½ symb	0.0 dB	0.0 dB	OFF	OFF	OFF	ON
4	ON	1 ½ symb	146 ½ symb	-15.0 dB	-15.0 dB	OFF	OFF	OFF	ON
5	ON	146 ½ symb	147 symb	0.0 dB	0.0 dB	OFF	OFF	OFF	ON
6	ON	147 symb	147 ½ symb	-2.0 dB	-2.0 dB	OFF	OFF	OFF	ON
7	ON	147 ½ symb	156 ¾ symb	OFF	OFF	OFF	OFF	OFF	OFF
8	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF
...									
16	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF

CONFigure:POWer[:NORMal][:GMSK]:LIMit:LINE:UPPer<AreaNr>:DYNAMIC<RangeNr>:ENABLE
CONFigure:POWer[:NORMal]:EPsk:LIMit:LINE:UPPer<AreaNr>:DYNAMIC<RangeNr>:ENABLE
 <Enable>

CONFigure:POWer[:NORMal][:GMSK]:LIMit:LINE:UPPer<AreaNr>:DYNAMIC<RangeNr>
CONFigure:POWer[:NORMal]:EPsk:LIMit:LINE:UPPer<AreaNr>:DYNAMIC<RangeNr> <fromTPCL>, <toTPCL>, <Correction>, <Enable> Dynamic Correction

<fromTPCL>	Description of parameters	Def. value	Def. unit	
0 to 31 OFF	First template PCL for which area <AreaNr> is changed	See table below	–	
<toTPCL>	Description of parameters	Def. value	Def. unit	
0 to 31 OFF	Last template PCL for which area <AreaNr> is changed.	See table below	–	
<Correction>	Description of parameters	Def. value	Def. unit	
-10 dB to +10 dB OFF	Correction value (relative) for the limit line in area <AreaNr> applied for all template PCLs between <fromTPCL> and <toTPCL>	See table below	dB	
<Enable>	Description of parameters	Def. value	Def. unit	FW vers.
ON OFF	Enable or disable dynamic correction in the current limit line area and PCL range	See table below	–	V2.00

Description of command

These command activates and defines dynamic correction of the upper limit line of area <AreaNr> (<AreaNr> = 1 to 16) depending on the template PCL range <RangeNr> (<RangeNr> = 1 to 10 for each area). The template PCL is set via CONFigure:RFANalyzer:TPCL.

In the areas no. 3 and 6, the following ranges are defined (both modulation schemes):

Range	fromTPCL	toTPCL	Correction	Enable
1	16	16	+2.0 dB	ON
2	17	17	+4.0 dB	ON
3	18	19	+5.0 dB	ON
4	OFF	OFF	0.0 dB	OFF
5	OFF	OFF	0.0 dB	OFF
6	OFF	OFF	0.0 dB	OFF
7	OFF	OFF	0.0 dB	OFF
8	OFF	OFF	0.0 dB	OFF
9	OFF	OFF	0.0 dB	OFF
10	OFF	OFF	0.0 dB	OFF

In the remaining areas, the dynamic limit line correction is disabled in all ranges.

CONFigure:POWer[:NORMal][:GMSK]:LIMit:LINE:UPPer<AreaNr>:ALL:DYNAMIC:ENABLE
CONFigure:POWer[:NORMal]:EPsk:LIMit:LINE:UPPer<AreaNr>:ALL:DYNAMIC:ENABLE
 <Enable> Dynamic Correction on/off

<Enable>	Description of parameters	Def. value	Def. unit	FW vers.
ON OFF	Switch dynamic correction on or off	ON	–	V2.00

Description of command

This command switches the dynamic correction of the upper limit area <nr> for all ten TPCL ranges on or off.

CONFigure:POWer[:NORMal][:GMSK]:LIMit:LINE:UPPer:ALL:DYNamic:ENABLE <Enable>				
CONFigure:POWer[:NORMal]:EPsk:LIMit:LINE:UPPer:ALL:DYNamic:ENABLE <Enable>				
Dynamic Correction on/off				
<Enable>	Description of parameters	Def. value	Def. unit	FW vers.
ON OFF	Switch dynamic correction for the whole template on or off	ON	–	V2.00
Description of command				
This command switches the dynamic correction of the upper limit line in all areas and for all TPCL ranges on or off. The query returns 160 Boolean values corresponding to the limit check in PCL ranges 1 to 10 (inner loop) in each of the areas 1 to 16 (outer loop).				

CONFigure:POWer[:NORMal][:GMSK]:LIMit:LINE:LOWer<AreaNr>:DYNamic<RangeNr>				
CONFigure:POWer[:NORMal]:EPsk:LIMit:LINE:LOWer<AreaNr>:DYNamic<RangeNr>				
Dynamic Correction				
<fromTPCL>	Description of parameters	Def. value	Def. unit	
0 to 31 OFF	First TPCL for which area <AreaNr> is changed	OFF	TPCL	
<toTPCL>	Description of parameters	Def. value	Def. unit	
0 to 31 OFF	Last TPCL for which area <AreaNr> is changed.	OFF	TPCL	
<Correction>	Description of parameters	Def. value	Def. unit	
-10 dB to +10 dB OFF	Correction value (relative) for the limit line in area <AreaNr> applied for all TPCLs between <fromTPCL> and <toTPCL>	OFF	dB	
<Enable>	Description of parameters	Def. value	Def. unit	FW vers.
ON OFF	Enable or disable dynamic correction in the current limit line area and TPCL range	OFF	–	V2.00
Description of command				
These command activates and defines dynamic correction of the lower limit line of <AreaNr> (<AreaNr> = 1 to 16) depending on the template PCL range <RangeNr> (<RangeNr> = 1 to 10 for each area). The template PCL is set via <code>CONFigure:RFANalyzer:TPCL</code> .				
By default, the dynamic limit line correction is disabled in all ranges and areas.				

CONFigure:POWer[:NORMal][:GMSK]:LIMit:LINE:LOWer<AreaNr>:ALL:DYNamic:ENABLE				
CONFigure:POWer[:NORMal]:EPsk:LIMit:LINE:LOWer<AreaNr>:ALL:DYNamic:ENABLE				
Dynamic Correction on/off				
<Enable>	Description of parameters	Def. value	Def. unit	FW vers.
ON OFF	Switch dynamic correction on or off	OFF	–	V2.00
Description of command				
This command switches the dynamic correction of the lower limit area <AreaNr> for all ten template PCL ranges on or off. The query returns 160 Boolean values corresponding to the limit check in PCL ranges 1 to 10 (inner loop) in each of the areas 1 to 16 (outer loop).				

CONFigure:POWer[:NORMal][:GMSK]:LIMit:LINE:LOWer:ALL:DYNamic:ENABle <Enable>				
CONFigure:POWer[:NORMal]:EPSK:LIMit:LINE:LOWer:ALL:DYNamic:ENABle <Enable>				
Dynamic Correction on/off				
<Enable>	Description of parameters	Def. value	Def. unit	FW vers.
ON OFF	Switch dynamic correction for the whole template on or off	OFF	–	V2.00
Description of command				
This command switches the dynamic correction of the lower limit line in all areas and for all template PCL ranges on or off.				

CONFigure:POWer[:NORMal][:GMSK]:LIMit:LINE:DEFault <Enable>				
CONFigure:POWer[:NORMal]:EPSK:LIMit:LINE:DEFault <Enable>				
Default Settings				
<Enable>	Description of parameters	Def. value	Def. unit	FW vers.
ON OFF	All parameters are set to their default values Some or all parameters differ from the default values	ON	–	V1.15
Description of command				
If used as a setting command with the parameter <i>ON</i> this command sets all parameters of the subsystem to their default values (the setting <i>OFF</i> causes an error message). If used as a query the command returns whether all parameters are set to their default values (<i>ON</i>) or not (<i>OFF</i>).				

Subsystem POWER:LIMit:ABPower

The subsystem *POWER:LIMit:ABPower* defines the limit values for the average burst power. The subsystem corresponds to the tab *Limits* in the popup menu *Power Configuration*.

CONFigure:POWER[:NORMal][:GMSK]:LIMit:ABPower<nr> <StartPCL>, <StopPCL>, <LowerLimit>, <UpperLimit> CONFigure:POWER[:NORMal][:GMSK]:LIMit:ABPower<nr>:ENABLE <Enable>			Average Burst Power		
Parameter	Value range	Description of parameters	Def. value		
<Enable>	ON OFF	Definition section on/off	see below		
<StartPCL>	0 to 31	Start value for PCL	see below		
<StopPCL>	0 to 31	End value for PCL	see below		
<LowerLimit>	-10.0 dB to 0.0 dB	Lower level limit			
<UpperLimit>	0.0 dB to +10.0 dB	Upper level limit			
Description of command			FW vers.		
These commands determine the tolerances for ranges of template power control levels (TPCLs). <nr> is the number of the group (<nr> ∈ {1,...,10}). The setting <i>MAX</i> is synonymous with the highest TPCL.			V1.15		
4 level ranges are defined in the default setting, another 6 ranges can be activated if required. The default settings for GSM 900/1800/1900 are according to the following table. The default settings for GSM850 and GSM400 are identical to GSM900:					
	For Enable	for table			
<u>Suffix</u>	<u>Enable</u>	<u>StartPCL</u>	<u>StopPCL</u>	<u>LowerLimit</u>	<u>UpperLimit</u>
1	ON	MAX	MAX	-2.0 dB	+2.0 dB
2	ON	0	2/8/8	-2.0/-3/-3 dB	+2.0/3.0/3.0 dB
3	ON	3/9/9	15/13/13	-3.0/-4/-4 dB	+3.0/4.0/4.0 dB
4	ON	16/14/14	31/28/29	-5.0 dB	+5.0 dB
5	OFF/ON/ON	OFF/29/30	OFF/29/31	OFF/-2.0/-2.0 dB	OFF/5.0/2.0 dB
6	OFF/ON/OFF	OFF/30/OFF	OFF/31/OFF	OFF/-3.0 dB/OFF	OFF/2.0 dB/OFF
10	OFF	OFF	OFF	OFF	OFF

Returned values	Value range	Def. value	Def. unit	FW vers.
AvgBurstPwCurr,	-137 dBm to +53 dBm	NAN	dBm	V1.15
PeakBurstPwCurr,	-137 dBm to +53 dBm	NAN	dBm	
BurstsOutOfTol,	0.0 % to 100.0 %	NAN	%	
BurstMatching	INV MATC NMAT OUT NTR NRAM OFLW UFLW NTSC OFF	INV	-	
AvgBurstPwAvg	-137 dBm to +53 dBm	NAN	dBm	
Description of command				
<p>These commands are always queries. They start a measurement and return all scalar measurement results (see chapter 5). These are:</p> <p><i>Average power of current burst</i> <i>Peak power of current burst</i> <i>Burst out of tolerance</i> <i>Average power of averaged trace</i></p> <p>The calculation of results in an <i>average</i> or <i>peak</i> measurement is described in chapter 3 (cf. <i>display modes</i>).The following messages may be returned for the value <i>BurstMatching</i>:</p>				
INV	<i>invalid</i>			
MATC	<i>matching</i>			
NMAT	<i>not matching</i>			
OUT	<i>out of range</i>			
NTR	<i>no trigger</i>			
NRAM	<i>not ramping (burst not found)</i>			
OFLW	<i>overflow</i>			
UFLW	<i>underflow</i>			
NTSC	<i>no training sequence code</i>			
OFF	<i>off</i>			

CALCulate[:SCALar]:POWER[:NORMal][:GMSK]:LIMit:MATChing?		Limit Matching		
CALCulate[:SCALar]:POWER[:NORMal]:EPsk:LIMit:MATChing?				
Returned values	Value range	Def. value	Def. unit	FW vers.
AvgBurstPwCurr,	NMAU NMAL INV OK	INV	-	V1.15
PeakBurstPwCurr,	NMAU NMAL INV OK	INV	-	
BurstMatching,	MATC NMAT INV NTSC OUT	INV	-	
AvgBurstPwAvg	NMAU NMAL INV OK	INV	-	
Description of command				
<p>This command is always a query. It indicates whether and in which way the permissible tolerances for the scalar measured values (see command above) have been exceeded.</p> <p>The following messages may be returned for the values <i>AvgBurstPower</i> and <i>PeakBurstPower</i>:</p>				
NMAU	Tolerance value underflow	<i>not matching, underflow</i>		
NMAL	Tolerance value exceeded	<i>not matching, overflow</i>		
INV	Measurement invalid	<i>invalid</i>		
OK	Tolerance value matched			
<p>The following messages may be returned for the value <i>BurstMatching</i>:</p>				
MATC			<i>matching</i>	
NMAT			<i>not matching</i>	
INV			<i>invalid</i>	
NTSC			<i>no training sequence code</i>	
OUT			<i>out of range</i>	

READ:ARRay:POWer[:NORMal][:GMSK][:CURRent]? READ:ARRay:POWer[:NORMal]:EPSK[:CURRent]? READ:ARRay:POWer[:NORMal][:GMSK]:AVERAge? READ:ARRay:POWer[:NORMal]:EPSK:AVERAge? READ:ARRay:POWer[:NORMal][:GMSK]:MAXimum? READ:ARRay:POWer[:NORMal]:EPSK:MAXimum? READ:ARRay:POWer[:NORMal][:GMSK]:MINimum? READ:ARRay:POWer[:NORMal]:EPSK:MINimum? Start single shot measurement and return results	Burst Power	⇒ RUN		
FETCH:ARRay:POWer[:NORMal][:GMSK][:CURRent]? FETCH:ARRay:POWer[:NORMal]:EPSK[:CURRent]? FETCH:ARRay:POWer[:NORMal][:GMSK]:AVERAge? FETCH:ARRay:POWer[:NORMal]:EPSK:AVERAge? FETCH:ARRay:POWer[:NORMal][:GMSK]:MAXimum? FETCH:ARRay:POWer[:NORMal]:EPSK:MAXimum? FETCH:ARRay:POWer[:NORMal][:GMSK]:MINimum? FETCH:ARRay:POWer[:NORMal]:EPSK:MINimum? Read meas. results (unsynchronized)		⇒ RUN		
SAMPlE:ARRay:POWer[:NORMal][:GMSK][:CURRent]? SAMPlE:ARRay:POWer[:NORMal]:EPSK[:CURRent]? PlE:ARRay:POWer[:NORMal][:GMSK]:AVERAge? SAMPlE:ARRay:POWer[:NORMal]:EPSK:AVERAge? SAMPlE:ARRay:POWer[:NORMal][:GMSK]:MAXimum? SAMPlE:ARRay:POWer[:NORMal]:EPSK:MAXimum? SAMPlE:ARRay:POWer[:NORMal][:GMSK]:MINimum? SAMPlE:ARRay:POWer[:NORMal]:EPSK:MINimum? Read results (synchronized)	SAM-	⇒ RUN		
Returned values	Description of parameters	Def. value	Def. unit	FW vers.
-100.0 dB... + 20.0 dB,	BurstPower[1], 1 st value for burst power	NAN	dB	V1.15
...	
-100.0 dB... + 20.0 dB	BurstPower[x], xth value for burst power	NAN	dB	
Description of command				
These commands are always queries. They output the burst power versus time in a fixed ¼ bit pattern. The number of measured values is 668, corresponding to a time range of -10 bit to 156 ¾ bit.				
The calculation of results in the modes <i>current</i> , <i>average</i> , <i>maximum</i> and <i>minimum</i> is explained in chapter 3 (cf. <i>display modes</i>).				

READ:SUBarrays:POWer[:NORMal][:GMSK][:CURRent]? Subarray Results READ:SUBarrays:POWer[:NORMal]:EPSK[:CURRent]? READ:SUBarrays:POWer[:NORMal][:GMSK]:AVERage? READ:SUBarrays:POWer[:NORMal]:EPSK:AVERage? READ:SUBarrays:POWer[:NORMal][:GMSK]:MAXimum? READ:SUBarrays:POWer[:NORMal]:EPSK:MAXimum? READ:SUBarrays:POWer[:NORMal][:GMSK]:MINimum? READ:SUBarrays:POWer[:NORMal]:EPSK:MINimum? Start single shot measurement and return results ⇒ RUN				
FETCH:SUBarrays:POWer[:NORMal][:GMSK][:CURRent]? FETCH:SUBarrays:POWer[:NORMal]:EPSK[:CURRent]? FETCH:SUBarrays:POWer[:NORMal][:GMSK]:AVERage? FETCH:SUBarrays:POWer[:NORMal]:EPSK:AVERage? FETCH:SUBarrays:POWer[:NORMal][:GMSK]:MAXimum? FETCH:SUBarrays:POWer[:NORMal]:EPSK:MAXimum? FETCH:SUBarrays:POWer[:NORMal][:GMSK]:MINimum? FETCH:SUBarrays:POWer[:NORMal]:EPSK:MINimum? Read meas. results (unsynchronized) ⇒ RUN				
SAMPlE:SUBarrays:POWer[:NORMal][:GMSK][:CURRent]? SAMPlE:SUBarrays:POWer[:NORMal]:EPSK[:CURRent]? SAM- PlE:SUBarrays:POWer[:NORMal][:GMSK]:AVERage? SAMPlE:SUBarrays:POWer[:NORMal]:EPSK:AVERage? SAMPlE:SUBarrays:POWer[:NORMal][:GMSK]:MAXimum? SAMPlE:SUBarrays:POWer[:NORMal]:EPSK:MAXimum? SAMPlE:SUBarrays:POWer[:NORMal][:GMSK]:MINimum? SAMPlE:SUBarrays:POWer[:NORMal]:EPSK:MINimum? Read results (synchronized) ⇒ RUN				
Ret. values by subrange	Description of parameters	Def. value	Def. unit	FW vers.
-100.0 dB... + 20.0 dB	BurstPower[1], 1 st value for burst power	NAN	dB	V2.00
...	
-100.0 dB... + 20.0 dB	BurstPower[x], xth value for burst power	NAN	dB	
Description of command				
These commands are always queries. They output the burst power versus time in a fixed ¼-bit pattern and in the subranges defined by means of the CONFIGure:SUBarrays:POWer command. In the default setting of the configuration command the READ:SUBarrays..., FETCH:SUBarrays..., and SAMPlE:SUBarrays... command group is equivalent to the READ:ARRay..., FETCH:ARRay..., and SAMPlE:ARRay... command group described above.				
The CONFIGure:SUBarrays:POWer command defines a maximum of 32 subranges. If one of the statistical modes (ARITHmetical, MINimum, MAXimum) is set, only one value is returned by subrange.				
The calculation of <i>current</i> , <i>average</i> , <i>minimum</i> , and <i>maximum</i> results is explained in chapter 3 (cf. <i>display mode</i>).				

CALCulate:ARRay:POWer[:NORMal][:GMSK]:LIMit:MATChing[:CURRent]?
CALCulate:ARRay:POWer[:NORMal]:EPSK:LIMit:MATChing[:CURRent]?
CALCulate:ARRay:POWer[:NORMal][:GMSK]:LIMit:MATChing:AVERage?
CALCulate:ARRay:POWer[:NORMal]:EPSK:LIMit:MATChing:AVERage?
CALCulate:ARRay:POWer[:NORMal][:GMSK]:LIMit:MATChing:MAXimum?
CALCulate:ARRay:POWer[:NORMal]:EPSK:LIMit:MATChing:MAXimum?
CALCulate:ARRay:POWer[:NORMal][:GMSK]:LIMit:MATChing:MINimum?
CALCulate:ARRay:POWer[:NORMal]:EPSK:LIMit:MATChing:MINimum?

		Burst Matching		
Returned values	Value range	Def. value	Def. unit	FW vers.
<Matching>	MATC NMAT INV NTSC OUT	INV	–	V1.15
Description of command				
This command is always a query. It indicates whether and in which way the tolerances for the burst power (see preceding command) have been exceeded.				
The following messages may be returned for the measured value <i>Matching</i> :				
MATC	<i>matching</i>			
NMAT	<i>not matching</i>			
INV	<i>invalid</i>			
NTSC	<i>no training sequence code</i>			
OUT	<i>out of tolerance</i>			

CALCulate:ARRay:POWer[:NORMal][:GMSK]:AREA:LIMit:MATChing[:CURRent]?
CALCulate:ARRay:POWer[:NORMal]:EPSK:AREA:LIMit:MATChing[:CURRent]?
CALCulate:ARRay:POWer[:NORMal][:GMSK]:AREA:LIMit:MATChing:AVERage?
CALCulate:ARRay:POWer[:NORMal]:EPSK:AREA:LIMit:MATChing:AVERage?
CALCulate:ARRay:POWer[:NORMal][:GMSK]:AREA:LIMit:MATChing:MAXimum?
CALCulate:ARRay:POWer[:NORMal]:EPSK:AREA:LIMit:MATChing:MAXimum?
CALCulate:ARRay:POWer[:NORMal][:GMSK]:AREA:LIMit:MATChing:MINimum?
CALCulate:ARRay:POWer[:NORMal]:EPSK:AREA:LIMit:MATChing:MINimum?

Range Violation

Returned value	Description of parameters	Def. value	Def. unit	FW vers.
32 bit value,	Indicator for upper limit matching in area 1 to 16 (16 least significant bits),	NAN	–	V1.20
32 bit value	Indicator for lower limit matching in area 1 to 16 (16 least significant bits)	NAN	–	
Description of command				
This command is always a query. If a bit is set in the two returned values the corresponding section of the limit lines is exceeded.				

POWER:MPR

The subsystem *Power:MPR* combines the *POWER* and *MODulation* systems, i.e. it measures the signal power vs. time and the scalar modulation parameters simultaneously. The subsystem contains all commands for measurement control and for the output of measurement results; configurations such as limit lines must be defined separately in the *POWER* and *MODulation* systems.

The *POWER:MPR* has no equivalent in manual control where the power and modulation measurement results are displayed separately.

Control of measurement – Subsystem POWER:MPR

The subsystem *Power:MPR* controls the combined power and modulation measurement.

INITiate:POWER[:NORMAl][:GMSK]:MPR	Start new measurement	⇒ <i>RUN</i>
ABORt:POWER[:NORMAl][:GMSK]:MPR	Abort running measurement and switch off	⇒ <i>OFF</i>
STOP:POWER[:NORMAl][:GMSK]:MPR	Stop measurement after current stat. cycle	⇒ <i>STOP</i>
CONTinue:POWER[:NORMAl][:GMSK]:MPR	Next meas. step (only <i>stepping mode</i>)	⇒ <i>RUN</i>
Description of command		FW vers.
These commands have no query form. They start and stop the combined power and modulation measurement, setting it to the status indicated in the top right column.		V2.00

CONFigure:POWER[:NORMAl][:GMSK]:MPR:EREPorting <Mode>		Event Reporting		
<Mode>	Description of parameters	Def. value	Def. unit	FW vers.
SRQ 	Service request	OFF	–	V2.00
SOPC 	Single operation complete			
SRSQ 	SRQ and SOPC			
OFF	No reporting			
Description of command				
This command defines the events generated when the measurement is terminated or stopped (<i>event reporting</i> , see chapter 5 of CMU200 manual).				

FETCH:POWER[:NORMAl][:GMSK]:MPR:STATus?		Measurement Status		
<i>Return</i>	Description of parameters	Def. value	Def. unit	FW vers.
OFF 	Measurement in the <i>OFF</i> state (*RST or ABORt)	OFF	–	V2.00
RUN 	Running (after INITiate, CONTinue or READ)			
STOP 	Stopped (STOP)			
ERR 	<i>OFF</i> (could not be started)			
STEP 	Stepping mode (<stepmode>=STEP)			
RDY,	Stopped according to repetition mode and stop condition			
1 to 10000 	Counter for current statistics cycle			
NONE,	Counter for current evaluation period within a cycle	NONE	–	
1 to 1000 	Statistic count set to off	NONE	–	
NONE				
Description of command				
This command is always a query. It returns the status of the measurement (see chapters 3 and 5).				

Subsystem POWER:MPR:CONTRol

The subsystem *POWER:MPR:CONTRol* defines the repetition mode, statistic count, and stop condition of the measurement.

CONFigure:POWER[:NORMal][:GMSK]:MPR:CONTRol <Mode>, <Statistics>				
				Scope of Measurement
<Mode>	Description of parameters	Def. value	Def. unit	
SCALar	Scalar values only (incl. ramp matching)	ARRay	–	
ARRay	Scalar measured values and arrays			
<Statistics>	Description of parameters	Def. value	Def. unit	FW vers.
1 to 1000	Number of bursts per statistics cycle	100	–	V2.00
NONE	Statistics off (equivalent to 1)			
Description of command				
This command specifies the type of measured values and defines the number of bursts forming a statistics cycle.				

CONFigure:POWER[:NORMal][:GMSK]:MPR:CONTRol:REPetition <Repetition>, <StopCond>, <Stepmode>				
				Test Cycles
<Repetition>	Description of parameters	Def. value	Def. unit	
CONTInuous	Continuous measurement (until <i>STOP</i> or <i>ABORT</i>)	SING	–	
SINGleshot	Single shot measurement (until <i>Status</i> = <i>RDY</i>)			
1 to 10000	Multiple measurement (<i>counting</i> , until <i>Status</i> = <i>STEP</i> <i>RDY</i>)			
<StopCond>	Description of parameters	Def. value	Def. unit	
SONerror	Stop measurement in case of error (<i>stop on error</i>)	NONE	–	
NONE	Continue measurement even in case of error			
<Stepmode>	Description of parameters	Def. value	Def. unit	FW vers.
STEP	Interrupt measurement after each statistics cycle	NONE	–	V2.00
NONE	Continue measurement according to its rep. mode			
Description of command				
This command determines the number of statistics cycles, the stop condition and the stepping mode for the measurement.				
Note: In the case of <i>READ</i> commands (<i>READ: ...</i>), the <Repetition> parameter has no effect; the measurement is always stopped after a single shot.				

Test Configuration

The commands of the following subsystems configure the combined power and modulation measurement. Note that configurations such as limit lines must be defined separately in the *POWER* and *MODulation* systems.

Subsystem SUBarrays:POWer:MPR

The subsystem *SUBarrays:POWer:MPR* defines the measurement range and the type of output values.

CONFigure:SUBarrays:POWer[:NORMal][:GMSK]:MPR <Mode>,<Start>,<Samples>{,<Start>,<Samples>}				
Definition of Subarrays				
<Mode>	Description of parameters	Def. value	Def. unit	
ALL 	Return all measurement values	ALL	–	
ARITHmetical 	Return arithm. mean value in every range			
MINimum 	Return minimum value in every range			
MAXimum 	Return maximum value in every range			
IVAL,	Return single interpolated value at <Start>			
<Start>	Description of parameters	Def. value	Def. unit	
–10 bit to 156 ¼ bit,	Start time in current range	–10	bit	
<Samples>	Description of parameters	Def. value	Def. unit	FW vers.
1 to 668	Number of samples in current range	668	–	V2.00
Description of command				
<p>This command configures the <code>READ:SUBarrays...</code>, <code>FETCh:SUBarrays.....</code>, and <code>SAM-PlE:SUBarrays:POWer:MPR</code> commands. It restricts the measurement to up to 32 subranges where either all measurement results (the number of which is given by the second numerical parameter) or a single statistical value is returned. The subranges are defined by the start time and the number of test points which are located on a fixed, equidistant grid with a step width of ¼ bit. If <Start> does not coincide with a test point then the range will start at the next test point that is larger than <Start>.</p> <p>For <Mode> = IVAL, the <Samples> parameter is ignored and the CMU returns a single measurement value corresponding to the abscissa value <Start>. If <Start> is located between two test points with valid results then the result is calculated from the results at these two adjacent test points by linear interpolation.</p> <p>The subranges may overlap but must be within the total range of the <i>Power</i> measurement. Test points outside this range are not measured (result <i>NAN</i>) and do not enter into the ARITHmetical, MINimum and MAXimum values.</p> <p>By default, only one range corresponding to the total measurement range is used and all measurement values are returned.</p>				

Measured Values – Subsystem POWER:MPR

The subsystem *POWER:MPR* determines and returns the results of the combined power and modulation measurement.

READ[:SCALar]:POWER[:NORMAl][:GMSK]:MPR? Scalar Results:				
				Start single shot measurement and return results
FETCh[:SCALar]:POWER[:NORMAl][:GMSK]:MPR?				
				Read out measurement results (unsynchronized)
SAMPlE[:SCALar]:POWER[:NORMAl][:GMSK]:MPR?				
				Read out measurement results (synchronized)
Returned values	Value range	Def. value	Def. unit	FW vers.
AvgBurstPwCurr,	-137 dBm to +53 dBm	NAN	dBm	V2.00
PeakBurstPwCurr,	-137 dBm to +53 dBm	NAN	dBm	
BurstsOutOfTol,	0.0 % to 100.0 %	NAN	%	
BurstMatching,	INV MATC NMAT OUT NTR NRAM OFLW UFLW NTSC OFF	INV	-	
PhErrPeakCurrent,	-100.0 ° to +100.0 °	NAN	deg	
PhErrPeakAverage,	-100.0 ° to +100.0 °	NAN	deg	
PhErrPeakMaxMin,	-100.0 ° to +100.0 °	NAN	deg	
PhErrRMSCurrent,	-100.0 ° to +100.0 °	NAN	deg	
PhErrRMSAverage,	-100.0 ° to +100.0 °	NAN	deg	
PhErrRMSMaxMin,	-100.0 ° to +100.0 °	NAN	deg	
FreqErrCurrent,	-1000.0 Hz to + 1000.0 Hz	NAN	Hz	
FreqErrAverage,	-1000.0 Hz to + 1000.0 Hz	NAN	Hz	
FreqErrMaxMin,	-1000.0 Hz to + 1000.0 Hz	NAN	Hz	
AvgBurstPwAvg	-137 dBm to +53 dBm	NAN	dBm	
Description of command				
These commands are always queries. They start a combined power vs. time and modulation measurement and return all scalar measurement results. For detailed information refer to the description of the analogous commands in the POWER and MODulation systems.				

READ:ARRay:POWER[:NORMAl][:GMSK]:MPR[:CURRent]?	Traces
READ:ARRay:POWER[:NORMAl][:GMSK]:MPR:AVERAge?	
READ:ARRay:POWER[:NORMAl][:GMSK]:MPR:MAXimum?	
READ:ARRay:POWER[:NORMAl][:GMSK]:MPR:MINimum?	
	Start single shot measurement and return results ⇒ RUN
FETCh:ARRay:POWER[:NORMAl][:GMSK]:MPR[:CURRent]?	
FETCh:ARRay:POWER[:NORMAl][:GMSK]:MPR:AVERAge?	
FETCh:ARRay:POWER[:NORMAl][:GMSK]:MPR:MAXimum?	
FETCh:ARRay:POWER[:NORMAl][:GMSK]:MPR:MINimum?	
	Read meas. results (unsynchronized) ⇒ RUN
SAMPlE:ARRay:POWER[:NORMAl][:GMSK]:MPR[:CURRent]?	
PlE:ARRay:POWER[:NORMAl][:GMSK]:MPR:AVERAge?	
SAMPlE:ARRay:POWER[:NORMAl][:GMSK]:MPR:MAXimum?	
SAMPlE:ARRay:POWER[:NORMAl][:GMSK]:MPR:MINimum?	
	Read results (synchronized) ⇒ RUN

Returned values	Description of parameters	Def. value	Def. unit	FW vers.
-100.0 dB... + 20.0 dB	BurstPower[1], 1 st value for burst power	NAN	dB	V2.00
...	
-100.0 dB... + 20.0 dB	BurstPower[x], xth value for burst power	NAN	dB	
Description of comm				
<p>These commands are always queries. They return the burst power versus time in a fixed ¼- bit pattern. The number of measured values is 668, corresponding to a time range of -10 bit to 156 ¾ bit.</p> <p>The calculation of <i>current</i>, <i>average</i>, <i>minimum</i> and <i>maximum</i> results is explained in chapter 3 (cf. <i>display mode</i>).</p>				

READ:SUBarrays:POWer[:NORMal][:GMSK]:MPR[:CURRent]? READ:SUBarrays:POWer[:NORMal][:GMSK]:MPR:AVERAge? READ:SUBarrays:POWer[:NORMal][:GMSK]:MPR:MAXimum? READ:SUBarrays:POWer[:NORMal][:GMSK]:MPR:MINimum?		Subarray Results		
		⇒ RUN		
FETCH:SUBarrays:POWer[:NORMal][:GMSK]:MPR[:CURRent]? FETCH:SUBarrays:POWer[:NORMal][:GMSK]:MPR:AVERAge? FETCH:SUBarrays:POWer[:NORMal][:GMSK]:MPR:MAXimum? FETCH:SUBarrays:POWer[:NORMal][:GMSK]:MPR:MINimum?		⇒ RUN		
		⇒ RUN		
SAMPLE:SUBarrays:POWer[:NORMal][:GMSK]:MPR[:CURRent]? SAM- Ple:SUBarrays:POWer[:NORMal][:GMSK]:MPR:AVERAge? SAMPLE:SUBarrays:POWer[:NORMal][:GMSK]:MPR:MAXimum? SAMPLE:SUBarrays:POWer[:NORMal][:GMSK]:MPR:MINimum?		⇒ RUN		
		⇒ RUN		
Ret. values by subrange	Description of parameters	Def. value	Def. unit	FW vers.
-100.0 dB... + 20.0 dB	BurstPower[1], 1 st value for burst power	NAN	dB	V2.00
...	
-100.0 dB... + 20.0 dB	BurstPower[x], xth value for burst power	NAN	dB	
Description of command				
<p>These commands are always queries. They return the burst power versus time in a fixed ¼- bit pattern and in the subranges defined by means of the <code>CONFigure:SUBarrays:POWer[:NORMal][:GMSK]:MPR</code> command. In the default setting of the configuration command the <code>READ:SUBarrays...</code>, <code>FETCH:SUBarrays...</code>, and <code>SAMPLE:SUBarrays...</code> command group is equivalent to the <code>READ:ARRay...</code>, <code>FETCH:ARRay...</code>, and <code>SAMPLE:ARRay...</code> command group described above.</p> <p>The <code>CONFigure:SUBarrays:POWer[:NORMal][:GMSK]:MPR</code> command defines a maximum of 32 subranges. If one of the statistical modes (<code>ARITHmetical</code>, <code>MINimum</code>, <code>MAXimum</code>) is set, only one value is returned by subrange.</p> <p>The calculation of <i>current</i>, <i>average</i>, <i>minimum</i>, and <i>maximum</i> results is explained in chapter 3 (cf. <i>display mode</i>).</p>				

CALCulate[:SCALar]POWER[:NORMAl][:GMSK]:MPR:LIMit:MATChing?		Tolerance Error																																		
Returned values	Value range	Def. value	Def. unit	FW vers.																																
AvgBurstPwCurr,	NMAU NMAL INV OK	INV	–	V2.00																																
PeakBurstPwCurr,	NMAU NMAL INV OK	INV	–																																	
BurstMatching,	INV MATC NMAT OUT NTR NRAM OFLW UFLW NTSC OFF	INV	–																																	
PhErrPeakCurrent,		INV	–																																	
PhErrPeakAverage,		INV	–																																	
PhErrPeakMaxMin,		INV	–																																	
PhErrRMSCurrent,	For all measured values:	INV	–																																	
PhErrRMSAverage,		INV	–																																	
PhErrRMSMaxMin,		INV	–																																	
	NMAU NMAL INV OK																																			
FreqErrCurrent,		INV	–																																	
FreqErrAverage,		INV	–																																	
FreqErrMaxMin,		INV	–																																	
AvgBurstPwAvg		INV	–																																	
Description of command																																				
<p>This command is always a query. It indicates whether and in which way the tolerances for the scalar results (see command above) in the <i>Power</i> and the <i>modulation</i> measurement have been exceeded.</p> <p>The following messages may be returned for the values <i>AvgBurstPower</i> and <i>PeakBurstPower</i> and for all results of the modulation measurement:</p> <table border="0"> <tr> <td>NMAU</td> <td>Tolerance value underflow</td> <td><i>not matching, underflow</i></td> </tr> <tr> <td>NMAL</td> <td>Tolerance value exceeded</td> <td><i>not matching, overflow</i></td> </tr> <tr> <td>INV</td> <td>Measurement invalid</td> <td><i>invalid</i></td> </tr> <tr> <td>OK</td> <td>Tolerance value matched</td> <td></td> </tr> </table> <p>The following messages may be returned for the value <i>BurstMatching</i>:</p> <table border="0"> <tr> <td>INV</td> <td><i>invalid</i></td> </tr> <tr> <td>MATC</td> <td><i>matching</i></td> </tr> <tr> <td>NMAT</td> <td><i>not matching</i></td> </tr> <tr> <td>OUT</td> <td><i>out of range</i></td> </tr> <tr> <td>NTR</td> <td><i>no trigger</i></td> </tr> <tr> <td>NRAM</td> <td><i>not ramping (burst not found)</i></td> </tr> <tr> <td>OFLW</td> <td><i>overflow</i></td> </tr> <tr> <td>UFLW</td> <td><i>underflow</i></td> </tr> <tr> <td>NTSC</td> <td><i>no training sequence code</i></td> </tr> <tr> <td>OFF</td> <td><i>off</i></td> </tr> </table>					NMAU	Tolerance value underflow	<i>not matching, underflow</i>	NMAL	Tolerance value exceeded	<i>not matching, overflow</i>	INV	Measurement invalid	<i>invalid</i>	OK	Tolerance value matched		INV	<i>invalid</i>	MATC	<i>matching</i>	NMAT	<i>not matching</i>	OUT	<i>out of range</i>	NTR	<i>no trigger</i>	NRAM	<i>not ramping (burst not found)</i>	OFLW	<i>overflow</i>	UFLW	<i>underflow</i>	NTSC	<i>no training sequence code</i>	OFF	<i>off</i>
NMAU	Tolerance value underflow	<i>not matching, underflow</i>																																		
NMAL	Tolerance value exceeded	<i>not matching, overflow</i>																																		
INV	Measurement invalid	<i>invalid</i>																																		
OK	Tolerance value matched																																			
INV	<i>invalid</i>																																			
MATC	<i>matching</i>																																			
NMAT	<i>not matching</i>																																			
OUT	<i>out of range</i>																																			
NTR	<i>no trigger</i>																																			
NRAM	<i>not ramping (burst not found)</i>																																			
OFLW	<i>overflow</i>																																			
UFLW	<i>underflow</i>																																			
NTSC	<i>no training sequence code</i>																																			
OFF	<i>off</i>																																			

Common Measurements and Command Groups

The commands for the measurement groups in this section are identical or almost identical in both test modes. Minor differences between *Non Signalling* and *Signalling* commands are possible; they will be pointed out throughout the section.

Note1: Measurements and signalling states

To perform any kind of measurement and obtain a meaningful result, an appropriate test setup is required (see application examples in chapter 2 of this manual). Consequently, if the measurements reported in this section are performed in *Signalling* mode, the *Call Established (CEST)* signalling state must be reached before any of the commands retrieving test results (*READ...?*, *FETCH...?*, *SAMPLE...?*, or *CALCulate...LIMIT?*) can be used. Test configurations, however, can be defined any time.

Exception: The wideband power (*WPOWER*) does not involve any signalling. It can be measured irrespective of the current signalling state.

Note2: GMSK and 8PSK modulation

The keywords [*:GMSK*] and *:EPSK* in the remote control commands denote *GMSK* and *8PSK* modulation, respectively. The *:EPSK* commands in *Signalling* measurements are included in firmware versions *V3.05* and higher. The firmware version numbers quoted in the command tables refer either to *GMSK* modulation or *EPSK* modulation in *Non Signalling* mode.

Option Query

The *Options* subsystem contains the commands for querying information on the instrument and the available options. It corresponds to the *Options* tab in the *Setup* menu opened via the *SETUP* key on the front panel.

SYSTem:OPTions:INFO:CURRent?			Device Info	
Response	Def. value	Default unit	FW vers.	
Example: Rohde&Schwarz,CMU 200-1100.0008.02,840675/018, V3.10C:SP02 2002-09-05"GSM900MS_Sig"	–	–	V3.10	
Command description				
This command returns the information on the device comprising the manufacturer, model, serial number and firmware version of the current function group. This command is always a query.				

Partial Reset

The *RESet* subsystem restores the (factory) default values for the current function group and test mode. It is similar to the *Reset* menu opened via the *RESET* key on the front panel.

SYSTEM:RESet:CURRENT		Partial Reset
Command description		FW vers.
This command sets all parameters of the current function group and test mode to default values. The command is available in all function groups. In contrast to the <i>Reset</i> menu the command restores the default values defined for remote control operation. In cases where remote and manual control use distinct settings (e.g. the repetition mode for many measurements), the manual control settings are left unchanged.		V3.10

I/Q-IF Interface

The subsystem *IQIF* configures the signal paths for I/Q and IF signals provided by option CMU-B17, *I/Q and IF Interfaces*. It corresponds to the *I/Q-IF* tab of the *Connection Control* menu.

Hint: *How to make sense out of parameter names*

In all path configurations except bypass, both the I/Q and IF output are connected (to either the RF Unit, the Digital Unit or one of the I/Q-IF inputs). The paths differ in the connection of the input branches: The qualifier IO denotes a connected input (with connected output), XO denotes a disconnected input (with connected output). Many parameters of the IQIF commands are composed of two IO/XO qualifiers, the first one standing for the IF signal, the second for the I/Q signal.

Example: *The parameter IOXO denotes a connected IF input and a disconnected IF output, while both output branches are connected.*

For more information see Chapter 4 and the application examples in the CMU200/300 operating manual.

CONFigure:IQIF:RXTXcombined <Scenario>			I/Q-IF	
<Scenario>	Description of parameters	Def. value	Def. unit	FW vers.
BYP	RX/TX Bypass, RXPath = BYP, TXPath = BYP	BYP	–	V3.10
BYIQ	Bypass w. I/Q-OF OUT, RXPath = TXPath =BYIQ			
XOIO	I/Q IN/OUT, RXPath = TXPath = XOIO			
IOIO	IF IN_I/Q IN/OUT, RXPath = TXPath = IOIO			
IOXO	IF IN/OUT, RXPath = TXPath = IOXO			
FPAT	Fading Path, RXPath = BYP, TXPath = XOIO			
UDEF	User-defined scenario, can not be set but may be returned by the query CONF:IQIF:RXTX?			
Description of command				
This command selects the I/Q-IF test scenario, overwriting the current RX and TX path settings (see commands CONFigure:IQIF:RXPath and CONFigure:IQIF:TXPath below). Six different predefined test scenarios with fixed RX and TX path are provided. Additional scenarios may be defined by selecting any other combination of RX and TX paths.				
Note:	<i>UDEF is not provided as a setting parameter. If the RX/TX path combination defined via CONFigure:IQIF:RXPath and CONFigure:IQIF:TXPath doesn't correspond to any of the predefined scenarios, then a user-defined scenario is set implicitly, i.e. the query CONF:IQIF:RXTX? returns the value UDEF.</i>			

CONFigure:IQIF:RXPath <Path>				RX Path
<Path>	Description of parameters	Def. value	Def. unit	FW vers.
BYP	Bypass	BYP	–	V3.10
BYIQ	Bypass w. I/Q-IF OUT			
XOIO	I/Q IN/OUT			
IOIO	IF IN_I/Q IN/OUT			
IOXO	IF IN/OUT			
Description of command				
This command selects the RX signal path, leaving the TX path (see command <code>CONFigure:IQIF:TXPath</code> below) unchanged but adapting the I/Q-IF test scenario to the new RX/TX path combination: If the combination corresponds to a predefined scenario, then <code>CONFigure:IQIF:RXTXcombined</code> is set to the predefined scenario; otherwise it is set to <code>UDEF</code> .				

CONFigure:IQIF:TXPath <Path>				TX Path
<Path>	Description of parameters	Def. value	Def. unit	FW vers.
BYP	Bypass	BYP	–	V3.10
BYIQ	Bypass w. I/Q-IF OUT			
XOIO	I/Q IN/OUT			
IOIO	IF IN_I/Q IN/OUT			
IOXO	IF IN/OUT			
Description of command				
This command selects the TX signal path, leaving the RX path (see command <code>CONFigure:IQIF:RXPath</code> above) unchanged but adapting the I/Q-IF test scenario to the new RX/TX path combination: If the combination corresponds to a predefined scenario, then <code>CONFigure:IQIF:RXTXcombined</code> is set to the predefined scenario; otherwise it is set to <code>UDEF</code> .				

IQIF:DEFAult <Enable>			Default Settings	
<Enable>	Description of parameters	Def. value	Def. unit	FW vers.
ON 	The parameters are set to their default values	ON	–	V3.10
OFF	Some or all parameters differ from the default values			
Description of command				
If used as a setting command with the parameter <i>ON</i> this command sets all parameters of the subsystem to their default values (the setting <i>OFF</i> causes an error message).				
If used as a query the command returns whether all parameters are set to their default values (<i>ON</i>) or not (<i>OFF</i>).				

Symbolic Status Event Register Evaluation

The following commands are used to retrieve the events reported in function groups *GSM400/850/900/1800/1900-MS Non Signalling* and *Signalling*; see section *Symbolic Status Event Register Evaluation* in Chapter 5 of the CMU operating manual.

STATus:OPERation:SYMBOLic:ENABLE <Event>{,<Event>}		Symbolic status evaluation		
Parameter list	Parameter description	Def. Value ¹	Default Unit	FW vers.
<Event>{,<Event>} NONE	List of symbols for events to be reported No event reported	NONE	–	V3.05
Command description				
<p>This command enables event reporting for one or several events in the current <i>GSMxxx-MS Non Signalling</i> function group, i.e. it sets the corresponding bits in the <code>STATus:OPERation:CMU:SUM<nr>:CMU<nr_event>:ENABLE</code> register (<code><nr> = 1 2</code>, <code><nr_event></code> denotes the current function group) and in all sum registers up to the status byte. The events and the corresponding symbols for the function group are listed in Chapter 5 (see section <i>Status Registers</i>). The symbols may be entered in arbitrary order.</p>				

STATus:OPERation:SYMBOLic[:EVENT]?		Symbolic status evaluation		
Response	Parameter description	Def. Value ²	Default Unit	FW vers.
NONE <Event>{,<Event>}	No event in the <i>RF</i> function group List of reported events	NONE	–	V3.05
Command description				
<p>This command is always a query. It lists the events reported in the current <i>GSMxxx-MS Non Signalling</i> function group and deletes these events in the <code>STATus:OPERation:CMU:SUM<nr>:CMU<nr_event>:EVENT</code> register as well as in all sum registers.</p>				

WPOWer

The subsystem *WPOWer* measures the power of the signal transmitted by the mobile phone using a wideband filter. It corresponds to the softkey *Wideband Power* in the *Connect. Control* menu.

INITiate:WPOWer	Start new measure ment	⇒ <i>RUN</i>
ABORt:WPOWer	Abort measurement and switch off	⇒ <i>OFF</i>
STOP:WPOWer	Stop measurement	⇒ <i>STOP</i>
CONTinue:WPOWer	Next measurement step (only <i>counting mode</i>)	⇒ <i>RUN</i>
Description of command		FW vers.
These commands have no query form. They start or stop the measurement, setting it to the status given in the top right column.		1.15 ³

¹ The default values quoted in this command are achieved after a `STATus:PRESet` command. `*RST` does not overwrite the entries in the status registers; see section *Reset Values of the Status Reporting Systems* in chapter 5.

² The default values quoted in this command are achieved after a `*CLS` command. `*RST` does not overwrite the entries in the status registers; see section *Reset Values of the Status Reporting Systems* in chapter 5.

³ For firmware versions <V2.15, the keyword `WPOWer` is replaced by `SPOWer` in all commands.

CONFigure:WPOWer:EREPorting <Mode>		Event Reporting		
<Mode>	Description of parameters	Def. value	Def. unit	FW vers.
SRQ	Service request	OFF	–	1.17
SOPC	Single operation complete			
SRSQ	SRQ and SOPC			
OFF	No reporting			
Description of command				
This command defines the events generated when the measurement is terminated or stopped (<i>event reporting</i> , see chapter 5 of CMU200 operating manual).				

FETCh:WPOWer:STATus?		Measurement		
Return	Description of parameters	Def. value	Def. unit	FW vers.
OFF	Measurement in the <i>OFF</i> state (*RST or ABORT)	OFF	–	1.15
RUN	Running (after INITiate, CONTinue or READ)			
STOP	Stopped (STOP)			
ERR	<i>OFF</i> (could not be started)			
STEP	Stepping mode (<stepmode>=STEP)			
RDY,	Stopped according to repetition mode and stop condition			
1 ... 10000	Counter for current statistics cycle			
NONE	No counting mode set	NONE	–	
Description of command				
This command is always a query. It returns the status of the measurement (see chapters 3 and 5 of CMU operating manual).				

CONFigure:WPOWer:CONTRol:REPetition <Repetition>,<StopCond>,<Stepmode>		Test cycles		
<Repetition>	Description of parameters	Def. value	Def. unit	FW vers.
CONTInuous	Continuous measurement (until STOP or ABORT)	SING	–	
SINGleshot	Single shot measurement (until Status = RDY)			
1 ... 10000	Multiple measurement (<i>counting</i> , until Status = STEP RDY)			
<StopCond>	Description of parameters	Def. value	Def. unit	
SONerror	Start measurement in case of error (<i>stop on error</i>)	NONE	–	
NONE	Continue measurement even in case of error			
<Stepmode>	Description of parameters	Def. value	Def. unit	FW vers.
STEP	Interrupt measurement after each statistics cycle	NONE	–	1.15
NONE	Continue measurement according to its rep. mode			
Description of command				
This command determines the number of statistics cycles, the stop condition and the stepping mode for the measurement.				
Note: In the case of READ commands (READ: ...), the <Repetition> parameter has no effect; the measurement is always stopped after a single shot.				

Measured Values – Subsystem WPOWer?

The subsystem *WPOWer?* retrieves the results of the wideband power measurement.

READ[:SCALar]:WPOWer?		Start single shot measurement and return results		
FETCh[:SCALar]:WPOWer?		Read out measurement results (unsynchronized)		
SAMPlE[:SCALar]:WPOWer?		Read out measurement results (synchronized)		
<i>Return</i>	Description of parameters	Def. value	Def. unit	FW vers.
-30.0dBm to +30.0 dBm	Maximum burst power (not averaged)	NAN	dBm	1.15
Description of command				
These commands are always queries. They start the measurement of the maximum burst power (<i>peak burst power</i>) and return the result.				

NPOWer

The subsystem *NPOWer* measures the power of the signal transmitted by the mobile phone using the RF analyzer configuration of the *POWer* measurement. Compared to *WPOWer*, the *NPOWer* measurement uses a narrow-band (500 kHz Gauss) filter.

The narrow-band *NPOWer* measurement yields the average, maximum and minimum burst power of the current burst. In addition to these *Current* values the minimum and maximum power in the entire measurement and the average of the average current values, referenced to a statistics cycle, is calculated. The entire measurement curves (arrays) are not available, and no limit check is performed. *NPOWer* is a quick and precise alternative to the *WPOWer* or *POWer* measurements if only scalar results are needed.

Note: A Free Run trigger (*TRIGger[:SEquence]:SOURCE FRUN*) should be avoided because it delays the *NPOWer* measurement.

INITiate:NPOWer	Start new measurement	⇒ <i>RUN</i>
ABORt:NPOWer	Abort measurement and switch off	⇒ <i>OFF</i>
STOP:NPOWer	Stop measurement	⇒ <i>STOP</i>
CONTinue:NPOWer	Next measurement step (only <i>counting mode</i>)	⇒ <i>RUN</i>
Description of command		FW vers.
These commands have no query form. They start or stop the measurement, setting it to the status given in the top right column.		V3.05

CONFigure:NPOWer:EREPorting <Mode>		Event Reporting		
<Mode>	Description of parameters	Def. value	Def. unit	FW vers.
SRQ	Service request	OFF	–	V3.05
SOPC	Single operation complete			
SRSQ	SRQ and SOPC			
OFF	No reporting			
Description of command				
This command defines the events generated when the measurement is terminated or stopped (<i>event reporting</i> , see chapter 5 of CMU200 operating manual).				

FETCh:NPOWer:STATus?		Measurement		
<i>Return</i>	Description of parameters	Def. value	Def. unit	FW vers.
OFF	Measurement in the <i>OFF</i> state (* <i>RST</i> or <i>ABORt</i>)	OFF	–	V3.05
RUN	Running (after <i>INITiate</i> , <i>CONTinue</i> or <i>READ</i>)			
STOP	Stopped (<i>STOP</i>)			
ERR	<i>OFF</i> (could not be started)			
STEP	Stepping mode (< <i>stepmode</i> >= <i>STEP</i>)			
RDY,	Stopped according to repetition mode and stop condition			
1 to 10000	Counter for current statistics cycle			
NONE	No counting mode set	NONE	–	
1 to 1000	Counter for current evaluation period within a cycle			
NONE	Statistic count set to off	NONE	–	
Description of command				
This command is always a query. It returns the status of the measurement (see chapters 3 and 5 of CMU manual operating manual).				

Subsystem NPOWer:CONTRol

The subsystem *NPOWer:CONTRol* defines the repetition mode, statistic count, stop condition, and stepping mode of the *NPOWer* measurement.

CONFigure:NPOWer:CONTRol <Statistics>, <Repetition>,<StopCond>,<Stepmode> Scope of Measurement				
<Statistics>	Description of parameters	Def. value	Def. unit	
1 to 1000 NONE	No. of bursts within a statistics cycle Statistics off	100	–	
<Repetition>	Description of parameters	Def. value	Def. unit	
CONTInuous SINGleshot 1 ... 10000	Continuous measurement (until <i>STOP</i> or <i>ABORT</i>) Single shot measurement (until <i>Status = RDY</i>) Multiple measurement (<i>counting</i> , until <i>Status = STEP RDY</i>)	SING	–	
<StopCond>	Description of parameters	Def. value	Def. unit	
SONerror NONE	Start measurement in case of error (<i>stop on error</i>) Continue measurement even in case of error	NONE	–	
<Stepmode>	Description of parameters	Def. value	Def. unit	FW vers.
STEP NONE	Interrupt measurement after each statistics cycle Continue measurement according to its rep. mode	NONE	–	V3.05
Description of command				
This command selects the type of measured values and determines the number of bursts forming one statistics cycle.				

CONFigure:NPOWer:CONTRol:STATistics <Statistics> Scope of Measurement				
<Statistics>	Description of parameters	Def. value	Def. unit	FW vers.
1 to 1000 NONE	No. of bursts within a statistics cycle Statistics off	100	–	V3.05
Description of command				
This command selects the type of measured values and determines the number of bursts forming one statistics cycle.				

CONFigure:NPOWer:CONTRol:REPetition <Repetition>,<StopCond>,<Stepmode>				Test cycles
<Repetition>	Description of parameters	Def. value	Def. unit	
CONTInuous	Continuous measurement (until STOP or ABORT)	SING	–	
SINGleshot	Single shot measurement (until Status = RDY)			
1 ... 10000	Multiple measurement (counting, until Status = STEP RDY)			
<StopCond>	Description of parameters	Def. value	Def. unit	
SONerror	Start measurement in case of error (stop on error)	NONE	–	
NONE	Continue measurement even in case of error			
<Stepmode>	Description of parameters	Def. value	Def. unit	FW vers.
STEP	Interrupt measurement after each statistics cycle	NONE	–	V3.05
NONE	Continue measurement according to its rep. mode			
Description of command				
This command determines the number of statistics cycles, the stop condition and the stepping mode for the measurement.				
Note: In the case of READ commands (READ: ...), the <Repetition> parameter has no effect; the measurement is always stopped after a single shot.				

Measured Values – Subsystem NPOWer?

The subsystem NPOWer? retrieves the results of the narrow-band power measurement.

READ[:SCALar]:NPOWer?	Start single shot measurement and return results			
FETCh[:SCALar]:NPOWer?	Read out measurement results (unsynchronized)			
SAMPlE[:SCALar]:NPOWer?	Read out measurement results (synchronized)			
Returned values	Value range	Def. value	Def. unit	FW vers.
Avg. Power of Current evaluation period,	–137 dBm to +53 dBm	NAN	dBm	V3.05
Min. Power of Current evaluation period,	–137 dBm to +53 dBm	NAN	dBm	
Max. Power of Current evaluation period,	–137 dBm to +53 dBm	NAN	dBm	
Avg. Power ref. to the last stat. cycle,	–137 dBm to +53 dBm	NAN	dBm	
Min. Power of the entire measurement,	–137 dBm to +53 dBm	NAN	dBm	
Max. Power of the entire measurement	–137 dBm to +53 dBm	NAN	dBm	
Description of command				
These commands are always queries. They start the NPOWer measurement and return the results.				

POWER:SLOT

The subsystem *Power:Slot* controls the *Power vs. Slot* measurement. It corresponds to the measurement menu *Power* with the applications *P/Slot Graph*.

Note: The *POWER:SLOT* measurement can not be carried out with a Free Run trigger (*Trigger[:Sequence]:SOURCE FRUN*).

INITiate:POWER:SLOT	Start new measurement	⇒ <i>RUN</i>
ABORT:POWER:SLOT	Abort running measurement and switch off	⇒ <i>OFF</i>
STOP:POWER:SLOT	Stop measurement after current stat. cycle	⇒ <i>STOP</i>
CONTinue:POWER:SLOT	Next measurement step (only <i>stepping mode</i>)	⇒ <i>RUN</i>
Description of command		FW vers.
These commands have no query form. They start or stop the measurement, setting it to the status indicated in the top right column.		V2.15

CONFigure:POWER:SLOT:EREPorting <Mode>		Event Reporting		
<Mode>	Description of parameters	Def. value	Def. unit	FW vers.
SRQ 	Service request	OFF	–	V2.15
SOPC 	Single operation complete			
SRSQ 	SRQ and SOPC			
OFF	No reporting			
Description of command				
This command defines the events generated when the measurement is terminated or stopped (<i>event reporting</i> , see chapter 5 of CMU manual).				

FETCh[:SCALAr]:POWER:SLOT:STATus?		Measurement Status		
<i>Return</i>	Description of parameters	Def. value	Def. unit	FW vers.
OFF 	Measurement in the <i>OFF</i> state (*RST or ABORT)	OFF	–	V2.15
RUN 	Running (after <i>INITiate</i> , <i>CONTinue</i> or <i>READ</i>)			
STOP 	Stopped (<i>STOP</i>)			
ERR 	<i>OFF</i> (could not be started)			
STEP 	Stepping mode (< <i>stepmode</i> >= <i>STEP</i>)			
RDY,	Stopped according to repetition mode and stop condition			
1 to 10000 	Counter for current statistics cycle			
NONE	No counting mode set	NONE	–	
Description of command				
This command is always a query. It returns the status of the measurement (see chapters 3 and 5 of CMU manual).				

POWER:SLOT:CONTROL

CONFigure:POWER:SLOT:CONTROL:REPetition <Repetition>,<StopCondition>,<Stepmode>				Test Cycles
<Repetition>	Description of parameters	Def. value	Def. unit	
CONTinuous	Continuous measurement (<i>continuous</i> , until STOP or ABORT)	SING	–	
SINGleshot	Single measurement (<i>single shot</i> , until Status = RDY)			
1 to 10000	Multiple measurement (<i>counting</i> , until Status = STEP RDY)			
<StopCond>	Description of parameters	Def. value	Def. unit	
SONerror	Stop measurement in case of error (<i>stop on error</i>)	NONE	–	
NONE	Continue measurement even in case of error			
<Stepmode>	Description of parameters	Def. value	Def. unit	FW vers.
STEP	Interrupt measurement after each statistics cycle	NONE	–	V2.15
NONE	Continue measurement according to its rep. mode			
Description of command				
This command determines the number of statistics cycles and the stepping mode for the measurement.				
Note: In the case of READ commands (READ: ...), the <Repetition> parameter has no effect; the measurement is always stopped after a single shot.				

CONFigure:POWER:SLOT:CONTROL:DEFAULT <Enable>				Default Settings
<Enable>	Description of parameters	Def. value	Def. unit	FW vers.
ON	The parameters are set to their default values	ON	–	V2.15
OFF	The parameters differ from the default values (partially or totally)			
Description of command				
If used as a setting command with the parameter ON this command sets all parameters of the subsystem to their default values (the setting OFF causes an error message).				
If used as a query the command returns whether all parameters are set to their default values (ON) or not (OFF).				

Subsystem SUBarrays:POWER:SLOT

The subsystem *SUBarrays:POWER:SLOT* defines the measurement range and the type of output values.

CONFigure:SUBarrays:POWER:SLOT <Mode>,<Start>,<Samples>{,<Start>,<Samples>}				
Definition of Subarrays				
<Mode>	Description of parameters	Def. value	Def. unit	
ALL	Return all measurement values	ALL	–	
ARITHmetical	Return arithm. mean value in every range			
MINimum	Return minimum value in every range			
MAXimum	Return maximum value in every range			
IVAL,	Return single interpolated value at <Start>			
<Start>	Description of parameters	Def. value	Def. unit	
0 to 7,	Start time in current range	0	–	
<Samples>	Description of parameters	Def. value	Def. unit	FW vers.
1 to 8	Number of samples in current range	8	–	V2.15
Description of command				
<p>This command configures the <code>READ:SUBarrays...</code>, <code>FETCh:SUBarrays...</code>, and <code>SAM-PlE:SUBarrays:POWER:SLOT</code> commands. It restricts the measurement to up to 32 subranges where either all measurement results (the number of which is given by the second numerical parameter) or a single statistical value is returned. The subranges are defined by the current number of the first slot and the number of slots within a subrange. If <Start> does not coincide with a test point then the range will start at the next test point that is larger than <Start>.</p> <p>For <Mode> = IVAL, the <Samples> parameter is ignored and the CMU returns a single measurement value corresponding to the abscissa value <Start>. If <Start> is located between two test points with valid results then the result is calculated from the results at these two adjacent test points by linear interpolation.</p> <p>The subranges may overlap but must be within the total range of the <i>P/Slot Graph</i> measurement. Test points outside this range are not measured (result <i>NAN</i>) and do not enter into the ARITHmetical, MINimum and MAXimum values.</p> <p>By default, only one range corresponding to the total measurement range is used and all measurement values are returned.</p>				

Subsystem POWER:SLOT

The subsystem *POWER:SLOT* measures power versus slot and returns the results. The subsystem corresponds to the measurement menu *P/SLOT Graph*.

READ[:SCALar]:POWER:SLOT:SPOWer<nr>? Single Result Start single shot measurement and return results				
FETCh[:SCALar]:POWER:SLOT:SPOWer<nr>? Read out measurement results (unsynchronized)				
SAMPlE[:SCALar]:POWER:SLOT:SPOWer<nr>? Read out measurement results (synchronized)				
Returned Values	Description of parameters	Def. value	Def. unit	FW vers.
-100 dBm to 100 dBm	Avg. power in slot <nr>	NAN	dBm	V2.15
Description of command				
These commands are always queries. They start a measurement and return the average power in a particular timeslot (numbered by <nr>=1 to 8, corresponding to timeslots 0 to 7).				

P/Slot Graph Results				
READ:ARRAy:POWER:SLOT? Start single shot measurement and return results				
FETCh:ARRAy:POWER:SLOT? Read out measurement results (unsynchronized)				
SAMPlE:ARRAy:POWER:SLOT? Read out measurement results (synchronized)				
Returned Values	Description of parameters	Def. value	Def. unit	FW vers.
-100 dBm to 100 dBm,	Avg. power in slot 0,	NAN,	dBm,	V2.15
...	
-100 dBm to 100 dBm	Avg. power in slot Slot 7	NAN	dBm	
Description of command				
These commands are always queries. They start a measurement and return all measurement results. The returned list contains the average burst power of the mobile phone in eight consecutive timeslots.				

Subarray Results				
READ:SUBArrays:POWER:SLOT? Start single shot measurement and return results				
FETCh:SUBArrays:POWER:SLOT? Read out measurement results (unsynchronized)				
SAMPlE:SUBArrays:POWER:SLOT? Read out measurement results (synchronized)				
Ret. values per subrange	Description of parameters	Def. value	Def. unit	FW vers.
-100 dBm to 100 dBm,	Avg. power in first slot,	NAN	dB	V2.15
...	
-100 dBm to 100 dBm	Avg. power in last slot	NAN	dB	
Description of command				
These commands are always queries. They return the burst power versus time in a fixed ¼-bit pattern and in the subranges defined by means of the <code>CONFIgure:SUBArrays:POWer[:NORMal][:GMSK]:MPR</code> command. In the default setting of the configuration command the <code>READ:SUBArrays...</code> , <code>FETCh:SUBArrays...</code> , and <code>SAMPlE:SUBArrays...</code> command group is equivalent to the <code>READ:ARRAy...</code> , <code>FETCh:ARRAy...</code> , and <code>SAMPlE:ARRAy...</code> command group described above.				
The <code>CONFIgure:SUBArrays:POWer[:NORMal][:GMSK]:MPR</code> command defines a maximum of 32 subranges. If one of the statistical modes (<code>ARITHmetical</code> , <code>MINimum</code> , <code>MAXimum</code>) is set, only one value is returned per subrange.				
The calculation of <i>current</i> , <i>average</i> , <i>minimum</i> , and <i>maximum</i> results is explained in chapter 3 (cf. <i>display mode</i>).				

P_{OW}er:XS_{LO}t

The subsystem *P_{OW}er:XS_{LO}t* controls the *Power vs. Slot* measurement. It corresponds to the measurement menu *Power* with the applications *P/Slot Table*.

Note: The *P_{OW}er:XS_{LO}t* measurement can not be carried out with a Free Run trigger (*TRIGGER[:SEquence]:SOURCE FRUN*).

INITiate:P_{OW}er:XS_{LO}t	Start new measurement	⇒ <i>RUN</i>
ABORT:P_{OW}er:XS_{LO}t	Abort running measurement and switch off	⇒ <i>OFF</i>
STOP:P_{OW}er:XS_{LO}t	Stop measurement after current stat. cycle	⇒ <i>STOP</i>
CONTinue:P_{OW}er:XS_{LO}t	Next measurement step (only <i>stepping mode</i>)	⇒ <i>RUN</i>
Description of command		FW vers.
These commands have no query form. They start or stop the measurement, setting it to the status indicated in the top right column.		V2.15

CONFigure:P_{OW}er:XS_{LO}t:EREPorting <Mode>		Event Reporting		
<Mode>	Description of parameters	Def. value	Def. unit	FW vers.
SRQ 	Service request	OFF	–	V2.15
SOPC 	Single operation complete			
SRSQ 	SRQ and SOPC			
OFF	No reporting			
Description of command				
This command defines the events generated when the measurement is terminated or stopped (<i>event reporting</i> , see chapter 5 of CMU manual).				

FETCH[:SCALar]:P_{OW}er:XS_{LO}t:STATus?		Measurement Status		
Return	Description of parameters	Def. value	Def. unit	FW vers.
OFF 	Measurement in the <i>OFF</i> state (<i>*RST</i> or <i>ABORT</i>)	OFF	–	–
RUN 	Running (after <i>INITiate</i> , <i>CONTinue</i> or <i>READ</i>)			
STOP 	Stopped (<i>STOP</i>)			
ERR 	<i>OFF</i> (could not be started)			
STEP 	Stepping mode (< <i>stepmode</i> >= <i>STEP</i>)			
RDY,	Stopped according to repetition mode and stop condition			
1 to 10000 	Counter for current statistics cycle			
NONE	No counting mode set	NONE	–	V2.15
Description of command				
This command is always a query. It returns the status of the measurement (see chapters 3 and 5 of CMU manual).				

Subsystem POWER:XSLot:CONTROL

CONFigure:POWER:XSLot:CONTROL:REPetition <Repetition>,<StopCondition>,<Stepmode>				Test Cycles
<Repetition>	Description of parameters	Def. value	Def. unit	
CONTInuous	Continuous measurement (<i>continuous</i> , until STOP or ABORT)	SING	–	
SINGleshot	Single measurement (<i>single shot</i> , until Status = RDY)			
1 to 10000	Multiple measurement (<i>counting</i> , until Status = STEP RDY)			
<StopCond>	Description of parameters	Def. value	Def. unit	
SONerror	Stop measurement in case of error (<i>stop on error</i>)	NONE	–	
NONE	Continue measurement even in case of error			
<Stepmode>	Description of parameters	Def. value	Def. unit	FW vers.
STEP	Interrupt measurement after each statistics cycle	NONE	–	V2.15
NONE	Continue measurement according to its rep. mode			
Description of command				
This command determines the number of statistics cycles and the stepping mode for the measurement.				
Note: In the case of READ commands (READ: ...), the <Repetition> parameter has no effect; the measurement is always stopped after a single shot.				

CONFigure:POWER:XSLot:CONTROL:DEFault <Enable>				Default Settings
<Enable>	Description of parameters	Def. value	Def. unit	FW vers.
ON	The parameters are set to their default values	ON	–	V2.15
OFF	The parameters differ from the default values (partially or totally)			
Description of command				
If used as a setting command with the parameter ON this command sets all parameters of the subsystem to their default values (the setting OFF causes an error message).				
If used as a query the command returns whether all parameters are set to their default values (ON) or not (OFF).				

Subsystem POWER:XSLot:SCOUNT

The subsystem *POWER:XSLot:SCOUNT* defines the total number of slots measured. It corresponds to the *Slot Count* parameter in the *Control* tab of the *Power Configuration* menu.

CONFigure:POWer:XSLot:SCOut <Group>[,<Number>]				Slot Count
<Group>	Description of parameters	Def. value	Def. unit	
S128 S256 S384 S512	Number of slots measured, if an integer multiple of 128	S128	–	
<Number>	Description of parameters	Def. value	Def. unit	FW vers.
1 to 512	Number of slots measured, for FW vers. V3.05 and higher	128	–	V2.15
Description of command				
<p>This command defines the total number of slots measured. The first parameter sets the slot count in multiples of 128 (Sn where n = 1 to 4) and defines the number of returned values. The second parameter is equal to the <i>Slot Count</i> in manual control and must be used if a <i>Slot Count</i> $m \neq n*128$ is desired. m supersedes n such that $n \geq m$.</p> <p>Examples:</p> <ul style="list-style-type: none"> • CONF:POW:XSL:SCO S128,128 causes 128 values to be calculated and returned. <p>CONF:POW:XSL:SCO S128,129 is equivalent to CONF:POW:XSL:SCO S256,129. 129 values are measured. The output arrays of the XSLot measurement group consist of 129 valid and 127 invalid (NAN) results.</p>				

Subsystem SUBarrays:POWER:XSLot

The subsystem *SUBarrays:POWER:XSLot* defines the measurement range and the type of output values.

CONFigure:SUBarrays:POWER:XSLot <Mode>,<Start>,<Samples>{,<Start>,<Samples>}				
Definition of Subarrays				
<Mode>	Description of parameters	Def. value	Def. unit	
ALL	Return all measurement values	ALL	–	
ARITHmetical	Return arithm. mean value in every range			
MINimum	Return minimum value in every range			
MAXimum	Return maximum value in every range			
IVAL,	Return single interpolated value at <Start>			
<Start>	Description of parameters	Def. value	Def. unit	
0 to 511,	Start time in current range	0	–	
<Samples>	Description of parameters	Def. value	Def. unit	FW vers.
1 to 512	Number of samples in current range	512	–	V2.15
Description of command				
<p>This command configures the <code>READ:SUBarrays...</code>, <code>FETCh:SUBarrays...</code>, and <code>SAM-PlE:SUBarrays:POWER:XSLot</code> commands. It restricts the measurement to up to 32 subranges where either all measurement results (the number of which is given by the second numerical parameter) or a single statistical value is returned. The subranges are defined by the current number of the first slot and the number of slots within a subrange. If <Start> does not coincide with a test point then the range will start at the next test point that is larger than <Start>.</p> <p>For <Mode> = IVAL, the <Samples> parameter is ignored and the CMU returns a single measurement value corresponding to the abscissa value <Start>. If <Start> is located between two test points with valid results then the result is calculated from the results at these two adjacent test points by linear interpolation.</p> <p>The subranges may overlap but must be within the total range of the <i>P/Slot Table</i> measurement. Test points outside this range are not measured (result <i>NAN</i>) and do not enter into the ARITHmetical, MINimum and MAXimum values.</p> <p>By default, only one range corresponding to the total measurement range is used and all measurement values are returned.</p>				

Subsystem POWER:XSLot?

The subsystem *POWER:XSLot* measures power versus slot and returns the results. The subsystem corresponds to the measurement menu *P/Slot Table*.

		Single Result		
READ[:SCALar]:POWER:XSlot:SPOWer<nr>?		Start single shot measurement and return results		
FETCh[:SCALar]:POWER:XSlot:SPOWer<nr>?		Read out measurement results (unsynchronized)		
SAMPlE[:SCALar]:POWER:XSlot:SPOWer<nr>?		Read out measurement results (synchronized)		
Returned Values	Description of parameters	Def. value	Def. unit	FW vers.
-100 dBm to 100 dBm	Avg. power in slot <nr>	NAN	dBm	V2.15
Description of command				
<p>These commands are always queries. They start a measurement and return the average power in a particular timeslot (numbered by <nr>=1 to 128, corresponding to slot 0 to slot 127 of the graphical user interface). The number of slots measured can be increased by means of the <code>CONFigure:POWER:XSlot:SCOUNT</code> command.</p>				

		P/Slot Graph Results		
READ:ARRAy:POWER:XSlot?		Start single shot measurement and return results		
FETCh:ARRAy:POWER:XSlot?		Read out measurement results (unsynchronized)		
SAMPlE:ARRAy:POWER:XSlot?		Read out measurement results (synchronized)		
Returned Values	Description of parameters	Def. value	Def. unit	FW vers.
-100 dBm to 100 dBm,	Avg. power in slot 0,	NAN,	dBm,	V2.15
...	
-100 dBm to 100 dBm	Avg. power in slot Slot 127	NAN	dBm	
Description of command				
<p>These commands are always queries. They start a measurement and return all measurement results. The returned list contains the average burst power of the mobile phone in 128 consecutive timeslots.</p>				

		Subarray Results		
READ:SUBArrays:POWER:XSlot?		Start single shot measurement and return results		
FETCh:SUBArrays:POWER:XSlot?		Read out measurement results (unsynchronized)		
SAMPlE:SUBArrays:POWER:XSlot?		Read out measurement results (synchronized)		
Ret. values per subrange	Description of parameters	Def. value	Def. unit	FW vers.
-100 dBm to 100 dBm,	Avg. power in first slot,	NAN	dB	V2.15
...	
-100 dBm to 100 dBm	Avg. power in last slot	NAN	dB	
Description of command				
<p>These commands are always queries. They return the burst power versus time in a fixed ¼-bit pattern and in the subranges defined by means of the <code>CONFigure:SUBArrays:POWER[:NORMAL][:GMSK]:MPR</code> command. In the default setting of the configuration command the <code>READ:SUBArrays...</code>, <code>FETCh:SUBArrays...</code>, and <code>SAMPlE:SUBArrays...</code> command group is equivalent to the <code>READ:ARRAy...</code>, <code>FETCh:ARRAy...</code>, and <code>SAMPlE:ARRAy...</code> command group described above.</p> <p>The <code>CONFigure:SUBArrays:POWER[:NORMAL][:GMSK]:MPR</code> command defines a maximum of 32 subranges. If one of the statistical modes (<code>ARITHmetical</code>, <code>MINimum</code>, <code>MAXimum</code>) is set, only one value is returned per subrange.</p> <p>The calculation of <i>current</i>, <i>average</i>, <i>minimum</i>, and <i>maximum</i> results is explained in chapter 3 (cf. <i>display mode</i>).</p>				

POWER:FRAME

The subsystem *POWER:FRAME* controls the *Power vs. Frame* measurement. It corresponds to the measurement menu *Power* with the applications *P/Frame*.

Note: The *POWER:FRAME* measurement can not be carried out with a Free Run trigger (*TRIGGER[:SEquence]:SOURCE FRUN*).

INITiate:POWER:FRAME	Start new measurement	⇒ <i>RUN</i>
ABORT:POWER:FRAME	Abort running measurement and switch off	⇒ <i>OFF</i>
STOP:POWER:FRAME	Stop measurement after current stat. cycle	⇒ <i>STOP</i>
CONTinue:POWER:FRAME	Next measurement step (only <i>stepping mode</i>)	⇒ <i>RUN</i>
Description of command		FW vers.
These commands have no query form. They start or stop the measurement, setting it to the status indicated in the top right column.		V2.15

CONFigure:POWER:FRAME:EREPorting <Mode>		Event Reporting		
<Mode>	Description of parameters	Def. value	Def. unit	FW vers.
SRQ 	Service request	OFF	–	V2.15
SOPC 	Single operation complete			
SRSQ 	SRQ and SOPC			
OFF	No reporting			
Description of command				
This command defines the events generated when the measurement is terminated or stopped (<i>event reporting</i> , see chapter 5 of CMU manual).				

FETCh[:SCALar]:POWER:FRAME:STATus?		Measurement Status		
<i>Return</i>	Description of parameters	Def. value	Def. unit	FW vers.
OFF 	Measurement in the <i>OFF</i> state (*RST or ABORT)	OFF	–	–
RUN 	Running (after <i>INITiate</i> , <i>CONTinue</i> or <i>READ</i>)			
STOP 	Stopped (<i>STOP</i>)			
ERR 	<i>OFF</i> (could not be started)			
STEP 	Stepping mode (< <i>stepmode</i> >= <i>STEP</i>)			
RDY,	Stopped according to repetition mode and stop condition			
1 to 10000 	Counter for current statistics cycle			
NONE	No counting mode set	NONE	–	V2.15
Description of command				
This command is always a query. It returns the status of the measurement (see chapters 3 and 5 of CMU manual).				

CONFigure:POWER:FRAME:FCOunt <No_of_Frames>		Frame Count		
<No_of_Frames>	Description of parameters	Def. value	Def. unit	FW vers.
1 to 128 	Number of measured frames	128	–	V3.05
1 to 256	Number of measured frames	128	–	V3.40
Description of command				
This command defines the number of consecutive frames measured.				

Subsystem POWER:FRAME:CONTROL

CONFigure:POWER:FRAME:CONTROL:REPetition <Repetition>,<StopCondition>,<Stepmode>				Test Cycles
<Repetition>	Description of parameters	Def. value	Def. unit	
CONTInuous	Continuous measurement (<i>continuous</i> , until STOP or ABORT)	SING	–	
SINGleshot	Single measurement (<i>single shot</i> , until Status = RDY)			
1 to 10000	Multiple measurement (<i>counting</i> , until Status = STEP RDY)			
<StopCond>	Description of parameters	Def. value	Def. unit	
SONerror	Stop measurement in case of error (<i>stop on error</i>)	NONE	–	
NONE	Continue measurement even in case of error			
<Stepmode>	Description of parameters	Def. value	Def. unit	FW vers.
STEP	Interrupt measurement after each statistics cycle	NONE	–	V2.15
NONE	Continue measurement according to its rep. mode			
Description of command				
This command determines the number of statistics cycles and the stepping mode for the measurement.				
Note: In the case of READ commands (READ: ...), the <Repetition> parameter has no effect; the measurement is always stopped after a single shot.				

CONFigure:POWER:FRAME:CONTROL:DEFault <Enable>				Default Settings
<Enable>	Description of parameters	Def. value	Def. unit	FW vers.
ON	The parameters are set to their default values	ON	–	V2.15
OFF	The parameters differ from the default values (partially or totally)			
Description of command				
If used as a setting command with the parameter ON this command sets all parameters of the subsystem to their default values (the setting OFF causes an error message).				
If used as a query the command returns whether all parameters are set to their default values (ON) or not (OFF).				

Subsystem SUBarrays:POWER:FRAME

The subsystem *SUBarrays:POWER:FRAME* defines the measurement range and the type of return values.

CONFigure:SUBarrays:POWER:FRAME <Mode>,<Start>,<Samples>{,<Start>,<Samples>}				
Definition of Subarrays				
<Mode>	Description of parameters	Def. value	Def. unit	
ALL	Return all measurement values	ALL	–	
ARITHmetical	Return arithm. mean value in every range			
MINimum	Return minimum value in every range			
MAXimum	Return maximum value in every range			
IVAL,	Return single interpolated value at <Start>			
<Start>	Description of parameters	Def. value	Def. unit	
0 to 255,	Start time in current range	0	–	
<Samples>	Description of parameters	Def. value	Def. unit	FW vers.
1 to 256	Number of samples in current range	128	–	V2.15
Description of command				
<p>This command configures the READ:SUBarrays..., FETCh:SUBarrays..., and SAMPlE:SUBarrays:POWER:FRAME commands. It restricts the measurement to up to 32 subranges where either all measurement results (the number of which is given by the second numerical parameter) or a single statistical value is returned. The subranges are defined by the current number of the first slot and the number of slots within a subrange. If <Start> does not coincide with a test point then the range will start at the next test point that is larger than <Start>.</p> <p>For <Mode> = IVAL, the <Samples> parameter is ignored and the CMU returns a single measurement value corresponding to the abscissa value <Start>. If <Start> is located between two test points with valid results then the result is calculated from the results at these two adjacent test points by linear interpolation.</p> <p>The subranges may overlap but must be within the total range of the <i>P/Frame</i> measurement. Test points outside this range are not measured (result <i>NAN</i>) and do not enter into the ARITHmetical, MINimum and MAXimum values.</p> <p>By default, only one range corresponding to the total measurement range is used and all measurement values are returned.</p>				

Subsystem POWER:FRAME

The subsystem *POWER:FRAME* measures the power versus frame and returns the results. The subsystem corresponds to the measurement menu *P/Frame*.

		Single Result		
READ[:SCALar]:POWER:FRAME:FPOWER<nr>?	Start single shot measurement and return results			
FETCh[:SCALar]:POWER:FRAME:FPOWER<nr>?	Read out measurement results (unsynchronized)			
SAMPlE[:SCALar]:POWER:FRAME:FPOWER<nr>?	Read out measurement results (synchronized)			
Returned Values	Description of parameters	Def. value	Def. unit	FW vers.
-100 dBm to 100 dBm	Avg. power in slot <nr>	NAN	dBm	V2.15
Description of command				
These commands are always queries. They start a measurement and return the average power in a particular frame (numbered by <nr>=1 to 256, corresponding to frame 0 to frame 255 of the graphical user interface).				

		P/Slot Graph Results		
READ:ARRAy:POWER:FRAME?	Start single shot measurement and return results			
FETCh:ARRAy:POWER:FRAME?	Read out measurement results (unsynchronized)			
SAMPlE:ARRAy:POWER:FRAME?	Read out measurement results (synchronized)			
Returned Values	Description of parameters	Def. value	Def. unit	FW vers.
-100 dBm to 100 dBm,	Avg. power in slot 0,	NAN,	dBm,	V2.15
...	
-100 dBm to 100 dBm	Avg. power in slot Slot 255	NAN	dBm	
Description of command				
These commands are always queries. They start a measurement and return all measurement results. The returned list contains the average burst power of the mobile phone in 256 consecutive timeslots.				

		Subarray Results		
READ:SUBArrays:POWER:FRAME?	Start single shot measurement and return results			
FETCh:SUBArrays:POWER:FRAME?	Read out measurement results (unsynchronized)			
SAMPlE:SUBArrays:POWER:FRAME?	Read out measurement results (synchronized)			
Ret. values per subrange	Description of parameters	Def. value	Def. unit	FW vers.
-100 dBm to 100 dBm,	Avg. power in first slot,	NAN	dB	V2.15
...	
-100 dBm to 100 dBm	Avg. power in last slot	NAN	dB	
Description of command				
These commands are always queries. They output the burst power versus time in a fixed ¼-bit pattern and in the subranges defined by means of the <code>CONFIgure:SUBArrays:POWer[:NORMal][:GMSK]:MPR</code> command. In the default setting of the configuration command the <code>READ:SUBArrays...</code> , <code>FETCh:SUBArrays...</code> , and <code>SAMPlE:SUBArrays...</code> command group is equivalent to the <code>READ:ARRAy...</code> , <code>FETCh:ARRAy...</code> , and <code>SAMPlE:ARRAy...</code> command group described above.				
The <code>CONFIgure:SUBArrays:POWer[:NORMal][:GMSK]:MPR</code> command defines a maximum of 32 subranges. If one of the statistical modes (<code>ARITHmetical</code> , <code>MINimum</code> , <code>MAXimum</code>) is set, only one value is returned per subrange.				
The calculation of <i>current</i> , <i>average</i> , <i>minimum</i> , and <i>maximum</i> results is explained in chapter 3 (cf. <i>display mode</i>).				

POWER:MSLot

The subsystem *POWER:MSLot* measures the MS output carrier power versus time in up to 4 consecutive timeslots. The subsystem corresponds to the measurement menu *Power*, application *P/t Multislot*, and the associated popup menu *Power Configuration*.

Note: The *POWER:MSLot* measurement can not be carried out with a Free Run trigger (*TRIGGER[:SEquence]:SOURCE FRUN*).

Control of Measurement – Subsystem POWER:MSLot

The subsystem *POWER:MSLot* controls the P/t multislot measurement.

INITiate:POWER:MSLot	Start new measurement	⇒	<i>RUN</i>
ABORT:POWER:MSLot	Abort measurement and switch off	⇒	<i>OFF</i>
STOP:POWER:MSLot	Stop measurement after current stat. cycle	⇒	<i>STOP</i>
CONTinue:POWER:MSLot	Next meas. step (only <i>stepping mode</i>)	⇒	<i>RUN</i>
Description of command			FW vers.
These commands have no query form. They start or stop the measurement, setting it to the status indicated in the top right column.			V3.05

CONFigure:POWER:MSLot:EREPorting <Mode>		Event Reporting		
<Mode>	Description of parameters	Def. value	Def. unit	FW vers.
SRQ	Service request	OFF	–	V3.05
SOPC	Single operation complete			
SRSQ	SRQ and SOPC			
OFF	No reporting			
Description of command				
This command defines the events generated when the measurement is terminated or stopped (<i>event reporting</i> , see chapter 5 of CMU manual).				

FETCH:POWER:MSLot:STATus?		Measurement Status		
Returned values	Description of parameters	Def. value	Def. unit	FW vers.
OFF	Measurement in the <i>OFF</i> state (*RST or ABORT)	OFF	–	V3.05
RUN	Running (after INITiate, CONTinue or READ)			
STOP	Stopped (STOP)			
ERR	<i>OFF</i> (could not be started)			
STEP	Stepping mode (<stepmode>=STEP)			
RDY,	Stopped according to repetition mode and stop condition			
1 to 10000	Counter for current statistics cycle			
NONE,	No counting mode set	NONE	–	
1 to 1000	Counter for current evaluation period within a cycle			
NONE	Statistic count set to off	NONE	–	
Description of command				
This command is always a query. It returns the status of the measurement (see chapters 3 and 5 of CMU manual of CMU manual).				

Subsystem PWER:MSLot:CONTROL

The subsystem *PWER:MSLot:CONTROL* defines the repetition mode, statistic count, and stop condition of the measurement. These settings are provided in the *Control* tab of the popup menu *Power Configuration*.

CONFigure:PWer:MSLot:CONTROL <Mode>,<Statistics>		Scope of Measurement		
<Mode>	Description of parameters	Def. value	Def. unit	
SCALar	Scalar values only (incl. ramp matching)	ARRay	–	
ARRay,	Scalar measured values and arrays			
<Statistics>	Description of parameters	Def. value	Def. unit	FW vers.
1 to 1000	Number of bursts per statistics cycle	100	–	V3.05
NONE	Statistics off (equivalent to 1)			
Description of command				
This command restricts the type of measured values to accelerate the measurement and determines the number of bursts within a statistics cycle.				

CONFigure:PWer:MSLot:CONTROL:REPetition <Repetition>,<StopCond>,<Stepmode>		Test Cycles		
<Repetition>	Description of parameters	Def. value	Def. unit	
CONTInuous	Continuous measurement (until STOP or ABORT)	SING	–	
SINGleshot	Single shot measurement (until Status = RDY)			
1 to 10000	Multiple measurement (counting, until Status = STEP RDY)			
<StopCondition>	Description of parameters	Def. value	Def. unit	
SONerror	Stop measurement in case of error (stop on error)	NONE	–	
NONE	Continue measurement even in case of error			
<Stepmode>	Description of parameters	Def. value	Def. unit	FW vers.
STEP	Interrupt measurement after each statistics cycle	NONE	–	V3.05
NONE	Continue measurement according to its rep. mode			
Description of command				
This command determines the number of statistics cycles, the stop condition and the stepping mode for the measurement.				
Note: In the case of READ commands (READ: ...), the <Repetition> parameter has no effect; the measurement is always stopped after a single shot.				

DISPlay:PWer:MSLot:CONTROL:GRID <Enable>		Grid		
<Enable>	Description of parameters	Def. value	Def. unit	FW vers.
ON	Switch on grid lines	ON	–	V3.05
OFF	Switch off grid lines			
Description of command				
This command switches the grid lines in the test diagrams on or off.				

CONFigure:POWER:MSLot:CONTRol:DEFault <Enable>		Default Settings		
<Enable>	Description of parameters	Def. value	Def. unit	FW vers.
ON	The parameters are set to their default values	ON	–	V3.05
OFF	Some or all parameters are not set to default			
Description of command				
If used as a setting command with the parameter <i>ON</i> this command sets all parameters of the subsystem to their default values (the setting <i>OFF</i> causes an error message).				
If used as a query the command returns whether all parameters are set to their default values (<i>ON</i>) or not (<i>OFF</i>).				

Test Configuration

The commands of the following subsystems configure the *P/t Multislot* measurement. They correspond to some of the softkey/hotkey combinations in the graphical measurement menu and to some of the settings in the *Power Configuration* popup menu that are related to the *P/t Multislot* measurement.

CONFigure:POWER:MSLot:MVlew <Mod_-1>,<Mod_0>, <Mod_1>, <Mod_2>		Modulation View		
<Mod_1>, ... , <Mod_2>	Description of parameters	Def. value	Def. unit	FW vers.
GMSK	GMSK modulation required	ANY	–	V3.05
EPSK	8PSK modulation required			
ANY	GMSK or 8PSK modulation			
OFF	Inactive timeslot (power off) required			
Description of command				
This command defines the modulation schemes and power/time templates for the Meas. Timeslot –1, Meas. Timeslot and the two following timeslots. Values for timeslots that are currently switched off (see command CONFigure:POWER:MSLot:SCOunt) are not taken into consideration.				

CONFigure:POWER:MSLot:SCOunt <Slots>		Slot Count		
<Slots>	Description of parameters	Def. value	Def. unit	FW vers.
1	Meas. timeslot (MTS)	2	–	V3.05
2	MTS – 1, MTS			
3	MTS – 1, MTS, MTS + 1			
4	MTS – 1, MTS, MTS + 1, MTS + 2			
Description of command				
This command defines the number of timeslots measured and determines the length of the measurement arrays (see READ:ARRay:POWER:MSLot... commands). The measured timeslot is defined via <code>CONFigure:RFANalyzer:MCONTRol:TSoFFset</code> (Non Signalling) or <code>CONFigure:MSSignal:MCONTRol:MEsLot</code> (Signalling).				

CONFigure:POWER:MSLot:TOFFset <Offset>		Timing Offset		
<Offset>	Description of parameters	Def. value	Def. unit	FW vers.
–4.00 to +4.00	Number of bits (in ¼ symbol steps)	0	symp.	V3.05
Description of command				
This command defines an offset time by which the burst is shifted relative to the time axis and the tolerance template. The values entered are rounded to ¼ symbol steps.				

CONFigure:POWer:MSLot:FILTer <Filter>				Filter
<Mode>	Description of parameters	Def. value	Def. unit	FW vers.
G500	500 kHz Gaussian filter	G500	–	V3.05
B600	600 kHz bandpass filter			
Description of command				
This command selects the measurement filter for the measurement.				

CONFigure:POWer:MSLot:LIMit:LINE:GLEVel <Level>				Multislot Guard
<Level>	Description of parameters	Def. value	Def. unit	FW vers.
0.00 dB to +10.00 dB	Multislot guard level	3	dB	V3.05
Description of command				
This command defines the raising of the upper limit line in the guard period between two consecutive bursts.				

Subsystem SUBarrays:POWER:MSLot

The subsystem *SUBarrays:POWER:MSLot* defines the measurement range and the type of output values.

CONFigure:SUBarrays:POWER:MSLot <Mode>,<Start>,<Samples>{,<Start>,<Samples>}		Definition of Subarrays		
<Mode>	Description of parameters	Def. value	Def. unit	
ALL ARITHmetical MINimum MAXimum IVAL ,	Return all measurement values Return arithm. mean value in every range Return minimum value in every range Return maximum value in every range Return single interpolated value at <Start>	ALL	–	
<Start>	Description of parameters	Def. value	Def. unit	
–180 symbols to +520 symbols	Start time in current range, relative to symbol 0 of the meas. slot	–165	symb.	
<Samples>	Description of parameters	Def. value	Def. unit	FW vers.
1 to 2613	Number of samples in current range, depending on SCOUNT (see commands READ:ARRay:POWER:MSLot...)	2613	–	V3.05
Description of command				
<p>This command configures the <code>READ:SUBarrays:POWER...</code>, <code>FETCh:SUBarrays:POWER...</code>, and <code>SAMPlE:SUBarrays:POWER</code> commands. It restricts the measurement to up to 32 subranges where either all measurement results (the number of which is given by the second numerical parameter) or a single statistical value is returned. The subranges are defined by the start time and the number of test points which are located on a fixed, equidistant grid with a step width of $\frac{1}{4}$ symbols. If <Start> does not coincide with a test point then the range will start at the next test point that is larger than <Start>.</p> <p>For <Mode> = IVAL, the <Samples> parameter is ignored and the CMU returns a single measurement value at the abscissa value <Start>. If <Start> is located between two test points with valid results then the result is calculated from the results at these two adjacent test points by linear interpolation.</p> <p>The subranges may overlap but must be within the total range of the <i>POWER</i> measurement. Test points outside this range are not measured (result <i>NAN</i>) and do not enter into the <i>ARITHmetical</i>, <i>MINimum</i> and <i>MAXimum</i> values.</p> <p>By default, only one range corresponding to the total measurement range is used and all measurement values are returned.</p>				

Measured Values

The subsystem *POWER:MSLot...* contains the commands to measure the normal burst power, compare it with the tolerances and retrieve the results. The subsystem corresponds to the graphical measurement menu *Power*.

		Scalar results																
READ[:SCALar]:POWer:MSLot?		Start single shot measurement and return results																
FETCh[:SCALar]:POWer:MSLot?		Read out measurement results (unsynchronized)																
SAMPle[:SCALar]:POWer:MSLot?		Read out measurement results (synchronized)																
Returned values per timeslot	Value range	Def. value	Def. unit	FW vers.														
BurstsOutOfTolerance,	0.0 % to 100.0 %	NAN	%	V3.05														
AvgBurstPowerCurrent,	-137 dBm to +53 dBm	NAN	dBm															
AvgBurstPwAvg	-137 dBm to +53 dBm	NAN	dBm															
PeakBurstPowerCurrent,	-137 dBm to +53 dBm	NAN	dBm															
TimingError,	-100.0 bit to+100.0 bit	NAN	bit															
BurstMatching	INV MATC NMAT OUT NTR NRAM OFF	INV	—															
Description of command																		
<p>These commands are always queries.</p> <ul style="list-style-type: none"> - READ starts a single shot measurement and returns the results. - FETCh returns the results irrespective of the measurement state. - SAMPle waits until the results are valid (depending on the statistic count) and then returns the results. <p>For more details refer to the description of measurement control in chapter 5 of the CMU200 operating manual.</p> <p>The following messages may be output for the value <i>BurstMatching</i>:</p> <table border="0"> <tr><td>INV</td><td><i>invalid</i></td></tr> <tr><td>MATC</td><td><i>matching</i></td></tr> <tr><td>NMAT</td><td><i>not matching</i></td></tr> <tr><td>OUT</td><td><i>out of range</i></td></tr> <tr><td>NTR</td><td><i>no trigger</i></td></tr> <tr><td>NRAM</td><td><i>not ramping (burst not found)</i></td></tr> <tr><td>OFF</td><td><i>off</i></td></tr> </table> <p>The complete list of results is repeated four times (timeslots 0, -1, +1, +2; see command CONFigure:POWer:MSLot:SCOunt).</p>					INV	<i>invalid</i>	MATC	<i>matching</i>	NMAT	<i>not matching</i>	OUT	<i>out of range</i>	NTR	<i>no trigger</i>	NRAM	<i>not ramping (burst not found)</i>	OFF	<i>off</i>
INV	<i>invalid</i>																	
MATC	<i>matching</i>																	
NMAT	<i>not matching</i>																	
OUT	<i>out of range</i>																	
NTR	<i>no trigger</i>																	
NRAM	<i>not ramping (burst not found)</i>																	
OFF	<i>off</i>																	

CALCulate:POWer:MSLot:LIMit:MATChing?		Limit Matching		
Returned values per timeslot	Value range	Def. value	Def. unit	FW vers.
AvgBurstPowerCurrent,	NMAU NMAL INV OK	INV	—	V3.05
AvgBurstPwAvg	NMAU NMAL INV OK	INV	—	
PeakBurstPowerCurrent,	NMAU NMAL INV OK	INV	—	
TimingError,	OK (no limit check)	INV	—	
BurstMatching	INV MATC NMAT OUT NTR NRAM OFF	INV		
Description of command				
<p>This command is always a query. It indicates whether and in which way the permissible tolerances for the scalar measured values (see command above) have been exceeded.</p> <p>The complete list of results is repeated four times (timeslots 0, -1, +1, +2; see command CONFigure:POWer:MSLot:SCOunt).</p>				

READ:ARRAY:POWER:MSLot[:CURRENT]?					Burst Power
READ:ARRAY:POWER:MSLot:AVERAGE?					
READ:ARRAY:POWER:MSLot:MAXIMUM?					
READ:ARRAY:POWER:MSLot:MINIMUM?					
FETCH:ARRAY:POWER:MSLot[:CURRENT]?					Start single shot measurement and return results
FETCH:ARRAY:POWER:MSLot:AVERAGE?					
FETCH:ARRAY:POWER:MSLot:MAXIMUM?					
FETCH:ARRAY:POWER:MSLot:MINIMUM?					Read measurement results (unsynchronized)
SAMPLE:ARRAY:POWER:MSLot[:CURRENT]?					
SAMPLE:ARRAY:POWER:MSLot:AVERAGE?					
SAMPLE:ARRAY:POWER:MSLot:MAXIMUM?					
SAMPLE:ARRAY:POWER:MSLot:MINIMUM?					Read results (synchronized)
Returned values	Description of parameters	Def. value	Def. unit	FW vers.	
-100.0 dB to + 20.0 dB	BurstPower[1]	NAN	dB	V3.05	
...		
-100.0 dB to + 20.0 dB	BurstPower[n]	NAN	dB		
Description of command					
These commands are always queries. They return the burst power relative to the average burst power in the measurement slot at n equidistant measurement points with a fixed ¼ symbol spacing. The time range measured corresponds to 1 to 4 entire timeslots plus 18 ¼ symbol periods before the beginning (symbol 0) of the first slot and 10 symbol periods after the end of the last slot. The resulting array lengths n are listed below.					
Number of timeslots (according to CONFigure:POWER:MSLot:SCOUNT)	1	2	3	4	
n	738	1363	1988	2613	

READ:SUBarrays:POWer:MSLot[:CURRent]? READ:SUBarrays:POWer:MSLot:AVERAge? READ:SUBarrays:POWer:MSLot:MAXimum? READ:SUBarrays:POWer:MSLot:MINimum?		Subarray Results		
		Start single shot measurement and return results		⇒ RUN
FETCh:SUBarrays:POWer:MSLot[:CURRent]? FETCh:SUBarrays:POWer:MSLot:AVERAge? FETCh:SUBarrays:POWer:MSLot:MAXimum? FETCh:SUBarrays:POWer:MSLot:MINimum?				
		Read meas. results (unsynchronized)		⇒ RUN
SAMPlE:SUBarrays:POWer:MSLot[:CURRent]? SAMPlE:SUBarrays:POWer:MSLot:AVERAge? SAMPlE:SUBarrays:POWer:MSLot:MAXimum? SAMPlE:SUBarrays:POWer:MSLot:MINimum?				
		Read results (synchronized)		⇒ RUN
Ret. values per subrange	Description of parameters	Def. value	Def. unit	FW vers.
-100.0 dB to + 20.0 dB	BurstPower[1]	NAN	dB	V3.05
...	
-100.0 dB to + 20.0 dB	BurstPower[m]	NAN	dB	
Description of command				
<p>These commands are always queries. They return the burst power relative to the average burst power in the measurement slot in the subranges defined by means of the <code>CONFigure:SUBarrays:POWer</code> command. In the default setting of the configuration command the <code>READ:SUBarrays...</code>, <code>FETCh:SUBarrays...</code>, and <code>SAMPlE:SUBarrays...</code> command group is equivalent to the <code>READ:ARRay...</code>, <code>FETCh:ARRay...</code>, and <code>SAMPlE:ARRay...</code> command group described above.</p> <p>The <code>CONFigure:SUBarrays:POWer</code> command defines a maximum of 32 subranges. If one of the statistical modes (<code>ARITHmetical</code>, <code>MINimum</code>, <code>MAXimum</code>) is set, only one value is returned per subrange.</p> <p>The calculation of <i>current</i>, <i>average</i>, <i>minimum</i>, and <i>maximum</i> results is explained in chapter 3 (cf. <i>display mode</i>).</p>				

CALCulate:ARRay:POWer:MSLot:LIMit:MATChing[:CURRent]?		Global Burst Matching		
Returned values	Value range	Def. value	Def. unit	FW vers.
Matching	INV MATC NMAT OUT NTR NRAM OFF	INV	-	V3.05
Description of command				
<p>This command is always a query. It indicates whether and in which way the tolerances for the burst power (see command above) in all measured timeslots have been exceeded.</p>				

CALCulate:ARRay:POWer:MSLot:AREA:LIMit:MATChing[:CURRent]?		Area Limit Matching		
Returned value	Description of parameters	Def. value	Def. unit	FW vers.
64 bit value,	Indicator for upper limit matching in area 1 to n	NAN	-	V3.05
64 bit value	Indicator for lower limit matching in area 1 to n	NAN	-	
Description of command				
<p>This command is always a query. A bit in the two output values is set if the corresponding section of the limit lines is exceeded. $n \leq 64$ is the total number of areas in the limit lines, depending on the number of bursts measured (according to CONFigure:POWer:MSLot:SCount).</p>				

Tolerance Template

The subsystem *POWER:MSLot:AREA:LIMit...* contains the commands to return the current position of the multislot tolerance template and the curve. The subsystem has no equivalent in manual control, however, the current template is indicated in the graphical *P/t Multislot* digaram.

[SENSe:]ARRay:POWer:MSLot:AREA:LIMit:UPPer:TIME?		Time of all Areas		
[SENSe:]ARRay:POWer:MSLot:AREA:LIMit:LOWer:TIME?				
Returned values	Value range	Def. value	Def. unit	FW vers.
-180 symb. to +520 symb. OFF,	Start time in area no. 1	NAN	symbols	V3.10
-180 symb. to +520 symb. OFF,	Stop time in area no. 1	NAN		
...				
-180 symb. to +520 symb. OFF,	Start time in area no. n	NAN		
-180 symb. to +520 symb. OFF	Stop time in area no. n	NAN		
Description of command				
These commands return the time of all areas of the multislot tolerance template, relative to the start of the measured timeslot (<i>Meas. Slot</i>). OFF means that the limit line and limit check in an area is switched off. The number of areas and thus the number of output values varies with the number of measured slots and the definition of the single slot template. The maximum allowed number of output values is 2 x 64.				

[SENSe:]ARRay:POWer:MSLot:AREA:LIMit:UPPer:LEVel?		Level of all Areas		
[SENSe:]ARRay:POWer:MSLot:AREA:LIMit:LOWer:LEVel?				
Returned values	Value range	Def. value	Def. unit	FW vers.
-100.0 dB to + 20.0 dB OFF,	Start level in area no. 1	NAN	dB	V3.10
-100.0 dB to + 20.0 dB OFF,	Stop level in area no. 1	NAN		
...				
-100.0 dB to + 20.0 dB OFF,	Start level in area no. n	NAN	dB	
-100.0 dB to + 20.0 dB OFF	Stop level in area no. n	NAN	dB	
Description of command				
These commands return the level of all areas of the multislot tolerance template, relative to the useful level of the measured timeslot (<i>Meas. Slot</i>). OFF means that the limit line and limit check in an area is switched off. The number of areas and thus the number of output values varies with the number of measured slots and the definition of the single slot template. The maximum allowed number of output values is 2 x 64.				

[SENSe:]ARRay:POWer:MSLot:AREA:LIMit:UPPer:INFO?		Timeslot of all Areas		
[SENSe:]ARRay:POWer:MSLot:AREA:LIMit:LOWer:INFO?				
Returned values	Value range	Def. value	Def. unit	FW vers.
-1 0 1 2,	Timeslot of area no. 1	NAN	dB	V3.10
...				
-1 0 1 2*)	Timeslot of area no. n	NAN	dB	
Description of command				
These commands return the timeslot of all areas of the multislot tolerance template, relative to the measured timeslot (<i>Meas. Slot</i> , slot no. 0). The number of areas and thus the number of output values varies with the number of measured slots and the definition of the single slot template. The maximum allowed number of output values is 64.				
*) If the timeslots no. -2 or +3 are active and if an area overlaps to one of these slots, the query may also return -2 or +3.				

[SENSe:]ARRay:POWEr:MSLot:AREA:LIMit:INFO:STIME?		Timeslot of all Areas		
Returned value	Value range	Def. value	Def. unit	FW vers.
-180 symb. to +520 symb.	Start time of measurement curve	NAN	symb.	V3.10
Description of command				
<p>This commands returns the start time of the measurement curve relative to the beginning of the measured time-slot (<i>Meas. Slot</i>, slot no. 0). The start time is the relative time of the first sample of the curve; all remaining samples follow with a ¼ symbol spacing.</p>				

MODulation[:PERRor]

The subsystem *MODulation[:PERRor][:GMSK]* measures the modulation parameters (frequency and phase errors) in GMSK modulation. The subsystem corresponds to the measurement menu *Modulation*, application *Ext. Phase Err. GMSK*, and the associated popup menu *Modulation Config*, however, it does not provide the I/Q Imbalance and the Origin Offset in the I/Q constellation diagram.

If results for the I/Q Imbalance and the Origin Offset are needed, the slower *MODulation:XPERRor* measurement must be used; see p. 3.74 ff.

Note: GMSK and 8PSK modulation

The keywords *[:GMSK]* and *:EPSK* in the remote control commands denote GMSK and 8PSK modulation, respectively. The *:EPSK* commands in Signalling measurements are included in firmware versions V3.05 and higher. The firmware version numbers quoted in the command tables refer either to GMSK modulation or EPSK modulation in Non Signalling mode.

Control of Measurement – Subsystem MODulation[:PERRor][:GMSK]

The subsystem *MODulation[:PERRor][:GMSK]* controls the modulation measurement. It corresponds to the softkey *Ext. Phase Err. GMSK* in the measurement menu *Modulation*.

INITiate:MODulation[:PERRor][:GMSK]	Start new measurement	⇒ <i>RUN</i>
ABORt:MODulation[:PERRor][:GMSK]	Abort running measurement and switch off	⇒ <i>OFF</i>
STOP:MODulation[:PERRor][:GMSK]	Stop measurement after current stat. cycle	⇒ <i>STOP</i>
CONTinue:MODulation[:PERRor][:GMSK]	Next measurement step (only <i>stepping mode</i>)	⇒ <i>RUN</i>
Description of command		FW vers.
These commands have no query form. They start and stop the modulation measurement, setting it to the status indicated in the top right column.		V1.15

CONFigure:MODulation[:PERRor][:GMSK]:EREPorting <Mode>		Event Reporting		
<Mode>	Description of parameters	Def. value	Def. unit	FW vers.
SRQ 	Service request	OFF	–	V1.15
SOPC 	Single operation complete			
SRSQ 	SRQ and SOPC			
OFF	No reporting			
Description of command				
This command defines the events generated when the measurement is terminated or stopped (<i>event reporting</i> , see chapter 5 of CMU manualCMU manual).				

FETCh:MODulation[:PERRor][:GMSK]:STATus?			Measurement Status	
Ret. values	Description of parameters	Def. value	Def. unit	FW vers.
OFF	Measurement in the OFF state (*RST or ABORT)	OFF	–	V1.15
RUN	Running (after INITiate, CONTinue or READ)			
STOP	Stopped (STOP)			
ERR	OFF (could not be started)			
STEP	Stepping mode (<stepmode>=STEP)			
RDY,	Stopped according to repetition mode and stop condition			
1 to 10000	Counter for current statistics cycle			
NONE,	No counting mode set	NONE	–	
1 to 1000	Counter for current evaluation period within a cycle			
NONE	Statistic count set to off	NONE	–	
Description of command				
This command is always a query. It returns the status of the measurement (see chapters 3 and 5 of CMU manual).				

CONFigure:MODulation[:PERRor][:GMSK]:FILTer <Filter>				Filter
<Mode>	Description of parameters	Def. value	Def. unit	FW vers.
G500	500 kHz Gaussian filter	G500	–	V3.05
B600	600 kHz bandpass filter			
Description of command				
This command selects the measurement filter for the XPERror[:GMSK] modulation measurement.				

Subsystem MODulation[:PERRor][:GMSK]:CONTrol

The subsystem *MODulation[:PERRor][:GMSK]:CONTrol* configures the modulation measurement. It corresponds to the *Control* tab in the popup menu *Modulation Config*.

CONFigure:MODulation[:PERRor][:GMSK]:CONTrol <Mode>, <Statistics>				Scope of Measurement
<Mode>	Description of parameters	Def. value	Def. unit	FW vers.
SCALar	Only scalar measured values (incl. tolerance matching)	ARRay	–	
ARRay	Scalar measured values and arrays			
<Statistics>	Description of parameters	Def. value	Def. unit	FW vers.
1 to 1000	No. of bursts within a statistics cycle	100	–	V1.15
NONE	Statistics off			
Description of command				
This command selects the type of measured values and determines the number of bursts forming one statistics cycle.				

CONFigure:MODulation[:PERRor][:GMSK]:CONTRol:REPetition <Repetition> , <StopCond> , <Stepmode>				Test Cycles
<Repetition>	Description of parameters	Def. value	Def. unit	
CONTinuous	Continuous measurement (until STOP or ABORT)	SING	–	
SINGleshot	Single shot measurement (until Status = RDY)			
1 to 10000	Multiple measurement (counting, until Status = STEP RDY)			
<StopCond>	Description of parameters	Def. value	Def. unit	
SONerror	Stop measurement in case of error (stop on error)	NONE	–	
NONE	Continue measurement even in case of error			
<Stepmode>	Description of parameters	Def. value	Def. unit	FW vers.
STEP	Interrupt measurement after each statistics cycle	NONE	–	V1.15
NONE	Continue measurement according to its rep. mode			
Description of command				
This command determines the number of statistics cycles, the stop condition and the stepping mode for the measurement.				
Note: In the case of READ commands (READ: ...), the <Repetition> parameter has no effect; the measurement is always stopped after a single shot.				

CONFigure:MODulation[:PERRor][:GMSK]:CONTRol:DEFault <Enable>				Default Settings
<Enable>	Description of parameters	Def. value	Def. unit	FW vers.
ON	The parameters are set to their default values	ON	–	V1.15
OFF	Some or all parameters differ from the default values			
Description of command				
If used as a setting command with the parameter ON this command sets all parameters of the subsystem to their default values (the setting OFF causes an error message).				
If used as a query the command returns whether all parameters are set to their default values (ON) or not (OFF).				

Tolerance values – Subsystem MODulation[:PERRor][:GMSK]:LIMit

The subsystem MODulation[:PERRor][:GMSK]:LIMit defines tolerance values for the modulation measurement. The subsystem corresponds to the tab *Limits* in the popup menu *Modulation Configuration*.

CONFigure:MODulation[:PERRor][:GMSK]:LIMit[:CURRent] <PhaseErrorPeak> , <PhaseErrorRMS> , <FrequencyError>				Upper Modulation Errors
Parameter	Description of parameters	Def. value	Def. unit	FW vers.
0.0 deg to +50.0 deg	PhaseErrorPeak	+20.0	deg	V1.15
0.0 deg to +50.0 deg	PhaseErrorRMS	+5.0	deg	
0.0 Hz to +999 Hz	FrequencyError	+90	Hz	
Description of command				
This command defines limits for the peak and RMS phase error as well as for the frequency error in the current or maximum trace. The default frequency error is 49 Hz for GSM400, 90 Hz for GSM850 and GSM900, 180 Hz for GSM1800, 190 Hz for GSM1900. Besides, the ranges and default values for the upper and lower <i>PhaseErrorPeak</i> and <i>FrequencyError</i> limits have equal magnitude but different sign.				

CONFigure:MODulation[:PERRor][:GMSK]:LIMit:UPPer:MODE <Mode>		Upper Limit Check on/off		
<Mode>	Description of parameters	Def. value	Def. unit	FW vers.
ON	Upper limit check on	ON	–	V2.00
OFF	Upper limit check off			
Description of command				
This command switches on or off the tolerance check with respect to the upper limit lines (current and average).				

CONFigure:MODulation[:PERRor][:GMSK]:LIMit:LOWer:MODE <Mode>		Lower Limit Check on/off		
<Mode>	Description of parameters	Def. value	Def. unit	FW vers.
ON	Lower limit check on	ON	–	V2.00
OFF	Lower limit check off			
Description of command				
This command switches on or off the tolerance check with respect to the lower limit lines (current and average).				

CONFigure:MODulation[:PERRor][:GMSK]:LIMit:AVERAge		Upper Average Limits		
<PhaseErrorPeak>, <PhaseErrorRMS>, <FrequencyError>		Def. value	Def. unit	FW vers.
Parameter	Description of parameters	Def. value	Def. unit	FW vers.
0.0 to +50.0 deg	PhaseErrorPeak	+20.0	deg	V1.15
0.0 to +50.0 deg	PhaseErrorRMS	+5.0	deg	
0.0 to +999 Hz	FrequencyError	+90	Hz	
Description of command				
This command defines limits for the peak and RMS phase error as well as for the frequency error in the average trace. The default frequency error is 49 Hz for GSM400, 90 Hz for GSM850 and GSM900, 180 Hz for GSM1800, 190 Hz for GSM1900. Besides, the ranges and default values for the upper and lower <i>PhaseErrorPeak</i> and <i>FrequencyError</i> limits have equal magnitude but different sign.				

CONFigure:MODulation[:PERRor][:GMSK]:LIMit:DEFault <Enable>		Default Settings		
<Enable>	Description of parameters	Def. value	Def. unit	FW vers.
ON	The parameters are set to their default values	ON	–	V1.15
OFF	Some or all parameters differ from the default values			
Description of command				
If used as a setting command with the parameter <i>ON</i> this command sets all parameters of the subsystem to their default values (the setting <i>OFF</i> causes an error message).				
If used as a query the command returns whether all parameters are set to their default values (<i>ON</i>) or not (<i>OFF</i>).				

Subsystem MODulation...:TIME

The subsystem *MODulation...:TIME* defines the decoding for the *Modulation* measurement. The subsystem corresponds to the *Decode* hotkey in the graphical measurement menu *Modulation*.

CONFigure:MODulation[:PERRor][:GMSK]:TIME:DECode <Mode>				Decode
<Mode>	Description of parameters	Def. value	Def. unit	FW vers.
STANdard	The standard bit range is decoded	GTBits	–	V2.15
GTBits	The guard and tail bits are also decoded			
Description of command				
This command selects the type of decoding applied for the determination of phase and frequency errors.				

Subsystem SUBarrays:MODulation[:PERRor][:GMSK]

The subsystem *SUBarrays:MODulation[:PERRor][:GMSK]* defines the measurement range and the type of returned values.

CONFigure:SUBarrays:MODulation[:PERRor][:GMSK] <Mode>,<Start>,<Samples>{,<Start>,<Samples>}				
Definition of Subarrays				
<Mode>	Description of parameters	Def. value	Def. unit	
ALL	Return all measurement values	ALL	–	
ARITHmetical	Return arithm. mean value in every range			
MINimum	Return minimum value in every range			
MAXimum	Return maximum value in every range			
IVAL ,	Return single interpolated value at <Start>			
<Start>	Description of parameters	Def. value	Def. unit	
0 bit to 146 ¾ bit ,	Start time in current range	0	bit	
<Samples>	Description of parameters	Def. value	Def. unit	FW vers.
1 to 588	Number of samples in current range	588	–	V2.00
Description of command				
This command configures the <code>READ:SUBarrays...</code> , <code>FETCh:SUBarrays...</code> , and <code>SAMple:SUBarrays:MODulation[:PERRor][:GMSK]</code> commands. It restricts the measurement to up to 32 subranges where either all measurement results (the number of which is given by the second numerical parameter) or a single statistical value is returned. The subranges are defined by the start time and the number of test points which are located on a fixed, equidistant grid with a step width of ¼ bit. If <Start> does not coincide with a test point then the range will start at the next test point that is larger than <Start>.				
For <Mode> = IVAL, the <Samples> parameter is ignored and the CMU returns a single measurement value corresponding to the abscissa value <Start>. If <Start> is located between two test points with valid results then the result is calculated from the results at these two adjacent test points by linear interpolation.				
The subranges may overlap but must be within the total range of the <i>MODulation[:PERRor][:GMSK]</i> measurement. Test points outside this range are not measured (result <i>NAN</i>) and do not enter into the <i>ARITHmetical</i> , <i>MINimum</i> and <i>MAXimum</i> values.				
By default, only one range corresponding to the total measurement range is used and all measurement values are returned.				

Measured Values – Subsystem MODulation[:PERRor][:GMSK]?

The subsystem *MODulation[:PERRor][:GMSK]* measures and returns the modulation results and compares them with the tolerance values. The subsystem corresponds to the various output elements in the graphical measurement menu *MODulation[:PERRor][:GMSK]*.

		Scalar Results:		
READ[:SCALar]:MODulation[:PERRor][:GMSK]?		Start single shot meas. and return results		
FETCh[:SCALar]:MODulation[:PERRor][:GMSK]?		Read out meas. results (unsynchronized)		
SAMPle[:SCALar]:MODulation[:PERRor][:GMSK]?		Read out meas. results (synchronized)		
Returned values	Value range	Def. value	Def. unit	FW vers.
PhErrPeakCurrent,	-100.0 ° to +100.0 °	NAN	deg	V1.15
PhErrPeakAverage,	-100.0 ° to +100.0 °	NAN	deg	
PhErrPeakMaxMin,	-100.0 ° to +100.0 °	NAN	deg	
PhErrRMSCurrent,	-100.0 ° to +100.0 °	NAN	deg	
PhErrRMSAverage,	-100.0 ° to +100.0 °	NAN	deg	
PhErrRMSMaxMin,	-100.0 ° to +100.0 °	NAN	deg	
FreqErrCurrent,	-1000.0 Hz to +1000.0 Hz	NAN	Hz	
FreqErrAverage,	-1000.0 Hz to +1000.0 Hz	NAN	Hz	
FreqErrMaxMin,	-1000.0 Hz to +1000.0 Hz	NAN	Hz	
AvgBurstPowerCurr,	-137 dBm to +53 dBm	NAN	dBm	
BurstsOutOfTol	0.0 % to 100.0 %	NAN	%	
Description of command				
These commands are always queries. They start a measurement and return all scalar measurement results (see chapter 5). These are:				
Peak phase error of current burst		<i>phase error peak current</i>		
Peak phase error of average measurement		<i>phase error peak average</i>		
Peak phase error of peak measurement		<i>phase error peak max./min.</i>		
Rms phase error of current burst		<i>phase error RMS current</i>		
Rms phase error of average measurement		<i>phase error RMS average</i>		
Rms phase error of peak measurement		<i>phase error RMS max./min.</i>		
Frequency error of current burst		<i>frequency error current</i>		
Frequency error of average measurement		<i>frequency error average</i>		
Frequency error of peak measurement		<i>frequency error max./min.</i>		
Average burst power of current burst		<i>avg. burst power current</i>		
Relative portion of faulty bursts		<i>bursts out of tolerance</i>		
The calculation of results in an <i>average</i> or <i>peak</i> measurement is described in chapter 3 (cf. <i>calculation of statistical quantities</i>).				

CALCulate:MODulation[:PERRor][:GMSK]:LIMit:MATChing?		Bursts out of Tolerance		
Returned values	Value range	Def. value	Def. unit	FW vers.
PhErrPeakCurrent, PhErrPeakAverage, PhErrPeakMaxMin,	For all measured values:	INV	–	V1.15
PhErrRMSCurrent, PhErrRMSAverage, PhErrRMSMaxMin,		INV	–	
FreqErrCurrent, FreqErrAverage, FreqErrMaxMin,		INV	–	
AvgBurstPowerCurr	NMAU NMAL INV OK	INV	–	
Description of command				
This command is always a query. It indicates whether and in which way the error limits for the scalar measured values (see above command) have been exceeded.				
The following messages may be returned for all measured values:				
NMAU			Underflow of tolerance value	
<i>not matching, underflow</i>				
NMAL			Tolerance value exceeded	
<i>not matching, overflow</i>				
INV			Measurement invalid	
<i>invalid</i>				
OK			all tolerances matched	

READ:ARRay:MODulation[:PERRor][:GMSK]:CURRent?		Phase Error in Burst		
Returned values	Description of parameters	Def. value	Def. unit	FW vers.
READ:ARRay:MODulation[:PERRor][:GMSK]:AVERAge?				
READ:ARRay:MODulation[:PERRor][:GMSK]:MMAximum?				
	Start single shot measurement and return results			⇒ RUN
FETCh:ARRay:MODulation[:PERRor][:GMSK]:CURRent?				
FETCh:ARRay:MODulation[:PERRor][:GMSK]:AVERAge?				
FETCh:ARRay:MODulation[:PERRor][:GMSK]:MMAximum?				
	Read measurement results (unsynchronized)			⇒ RUN
SAMPlE:ARRay:MODulation[:PERRor][:GMSK]:CURRent?				
SAMPlE:ARRay:MODulation[:PERRor][:GMSK]:AVERAge?				
SAMPlE:ARRay:MODulation[:PERRor][:GMSK]:MMAximum?				
	Read measurement results (synchronized)			⇒ RUN
Returned values	Description of parameters	Def. value	Def. unit	FW vers.
–100.0 deg to+ 100.0 deg,	1 st value for phase error	NAN	dB	V1.15
... ,	
–100.0 deg to+ 100.0 deg	xth value for phase error	NAN	dB	
Description of command				
These commands are always queries. They return the phase error of the burst vs. time in a fixed ¼ bit pattern. The number of measured values is 588, corresponding to a time range of 0 bit to 146 ¼ bit.				
The calculation of <i>current</i> , <i>average</i> , and <i>mmax</i> (Min./Max.) results is explained in chapter 3 (cf. <i>display mode</i>).				

READ:SUBarrays:MODulation[:PERRor][:GMSK][:CURRENT]? READ:SUBarrays:MODulation[:PERRor][:GMSK]:AVERage? READ:SUBarrays:MODulation[:PERRor][:GMSK]:MMAximum?					Subarray Results
		Start single shot measurement and return results			⇒ RUN
FETCh:SUBarrays:MODulation[:PERRor][:GMSK][:CURRENT]? FETCh:SUBarrays:MODulation[:PERRor][:GMSK]:AVERage? FETCh:SUBarrays:MODulation[:PERRor][:GMSK]:MMAximum?					
		Read meas. results (unsynchronized)			⇒ RUN
SAMPlE:SUBarrays:MODulation[:PERRor][:GMSK][:CURRENT]? SAMPlE:SUBarrays:MODulation[:PERRor][:GMSK]:AVERage? SAMPlE:SUBarrays:MODulation[:PERRor][:GMSK]:MMAximum?					
		Read results (synchronized)			⇒ RUN
<i>Ret. values per subrange</i>	Description of parameters	Def. value	Def. unit	FW vers.	
-100.0 deg to+ 100.0 deg,	1 st value for phase error	NAN	dB	V2.00	
... ,		
-100.0 deg to+ 100.0 deg	xth value for phase error	NAN	dB		
Description of command					
<p>These commands are always queries. They output the phase error versus time in a fixed ¼-bit pattern and in the subranges defined by means of the <code>CONFigure:SUBarrays:MODulation[:PERRor][:GMSK]</code> command. In the default setting of the configuration command the <code>READ:SUBarrays...</code>, <code>FETCh:SUBarrays...</code>, and <code>SAMPlE:SUBarrays...</code> command group is equivalent to the <code>READ:ARRay...</code>, <code>FETCh:ARRay...</code>, and <code>SAMPlE:ARRay...</code> command group described above.</p> <p>The <code>CONFigure:SUBarrays:MODulation[:PERRor][:GMSK]</code> command defines a maximum of 32 subranges. If one of the statistical modes (<code>ARITHmetical</code>, <code>MINimum</code>, <code>MAXimum</code>) is set, only one value is returned per subrange.</p> <p>The calculation of <i>current</i>, <i>average</i>, <i>minimum</i>, and <i>maximum</i> results is explained in chapter 3 (cf. <i>display mode</i>).</p>					

MODulation:XPError

The subsystem *MODulation:XPError[:GMSK]* measures the modulation parameters (frequency and phase errors) in GMSK modulation including the I/Q Imbalance and the Origin Offset in the I/Q constellation diagram. The subsystem corresponds to the measurement menu *Modulation*, application *Ext. Phase Err. GMSK*, and the associated popup menu *Modulation Configuration*.

If no results for the I/Q Imbalance and the Origin Offset are needed, it is recommended to use the faster *MODulation[:PError]* measurement; see p.3.66 ff.

Control of Measurement – Subsystem MODulation:XPError[:GMSK]

The subsystem *MODulation:XPError[:GMSK]* controls the modulation measurement. It corresponds to the softkey *Ext. Phase Err. GMSK* in the measurement menu *Modulation*.

INITiate:MODulation:XPError[:GMSK]	Start new measurement	⇒ <i>RUN</i>
ABORt:MODulation:XPError[:GMSK]	Abort running measurement and switch off	⇒ <i>OFF</i>
STOP:MODulation:XPError[:GMSK]	Stop measurement after current stat. cycle	⇒ <i>STOP</i>
CONTinue:MODulation:XPError[:GMSK]	Next measurement step (only <i>stepping mode</i>)	⇒ <i>RUN</i>
Description of command		FW vers.
These commands have no query form. They start and stop the modulation measurement, setting it to the status indicated in the top right column.		V2.15

CONFigure:MODulation:XPError[:GMSK]:EREPorting <Mode>		Event Reporting		
<Mode>	Description of parameters	Def. value	Def. unit	FW vers.
SRQ 	Service request	OFF	–	V2.15
SOPC 	Single operation complete			
SRSQ 	SRQ and SOPC			
OFF	No reporting			
Description of command				
This command defines the events generated when the measurement is terminated or stopped (<i>event reporting</i> , see chapter 5 of CMU manual).				

FETCH:MODulation:XPError[:GMSK]:STATus?		Measurement Status		
Ret. values	Description of parameters	Def. value	Def. unit	FW vers.
OFF 	Measurement in the <i>OFF</i> state (*RST or ABORt)	OFF	–	V2.15
RUN 	Running (after INITiate, CONTinue or READ)			
STOP 	Stopped (STOP)			
ERR 	<i>OFF</i> (could not be started)			
STEP 	Stepping mode (<stepmode>=STEP)			
RDY,	Stopped according to repetition mode and stop condition			
1 to 10000 	Counter for current statistics cycle			
NONE,	Counter for current evaluation period within a cycle	NONE	–	
1 to 1000 	Statistic count set to off			
NONE		NONE	–	
Description of command				
This command is always a query. It returns the status of the measurement (see chapters 3 and 5 of CMU manual).				

CONFigure:MODulation:XPERror[:GMSK]:TIME:DECode <Mode>				Decode
<Mode>	Description of parameters	Def. value	Def. unit	FW vers.
STANdard	The standard bit range is decoded	GTBits	–	V2.15
GTBits	The guard and tail bits are also decoded			
Description of command				
This command selects the type of decoding applied for the determination of phase and frequency errors.				

CONFigure:MODulation:XPERror[:GMSK]:FILTer <Filter>				Filter
<Mode>	Description of parameters	Def. value	Def. unit	FW vers.
G500	500 kHz Gaussian filter	G500	–	V3.05
B600	600 kHz bandpass filter			
Description of command				
This command selects the measurement filter for the XPERror[:GMSK] modulation measurement.				

Subsystem MODulation:XPERror[:GMSK]:CONTRol

The subsystem *MODulation:XPERror[:GMSK]:CONTRol* configures the modulation measurement. It corresponds to the *Control* tab in the popup menu *Modulation Config*.

CONFigure:MODulation:XPERror[:GMSK]:CONTRol <Mode>, <Statistics>				Scope of Measurement	
<Mode>	Description of parameters	Def. value	Def. unit		
SCALar	Only scalar measured values (incl. tolerance matching)	ARRay	–		
ARRay	Scalar measured values and arrays				
<Statistics>	Description of parameters	Def. value	Def. unit	FW vers.	
1 to 1000	No. of bursts within a statistics cycle	100	–	V2.15	
NONE	Statistics off				
Description of command					
This command selects the type of measured values and determines the number of bursts forming one statistics cycle.					

CONFigure:MODulation:XPError[:GMSK]:CONtrol:REPetition <Repetition> , <StopCond> , <Stepmode>				Test Cycles	
<Repetition>	Description of parameters	Def. value	Def. unit		
CONTinuous SINGleshot 1 to 10000 ,	Continuous measurement (until STOP or ABORT) Single shot measurement (until Status = RDY) Multiple measurement (counting, until Status = STEP RDY)	SING	–		
<StopCond>	Description of parameters	Def. value	Def. unit		
SONerror NONE ,	Stop measurement in case of error (stop on error) Continue measurement even in case of error	NONE	–		
<Stepmode>	Description of parameters	Def. value	Def. unit	FW vers.	
STEP NONE	Interrupt measurement after each statistics cycle Continue measurement according to its rep. mode	NONE	–	V2.15	
Description of command					
This command determines the number of statistics cycles, the stop condition and the stepping mode for the measurement.					
Note: In the case of READ commands (READ: ...), the <Repetition> parameter has no effect; the measurement is always stopped after a single shot.					

CONFigure:MODulation:XPError[:GMSK]:CONtrol:DEFault <Enable>				Default Settings	
<Enable>	Description of parameters	Def. value	Def. unit	FW vers.	
ON OFF	The parameters are set to their default values Some or all parameters differ from the default values	ON	–	V2.15	
Description of command					
If used as a setting command with the parameter ON this command sets all parameters of the subsystem to their default values (the setting OFF causes an error message).					
If used as a query the command returns whether all parameters are set to their default values (ON) or not (OFF).					

Tolerance values – Subsystem MODulation:XPError[:GMSK]:LIMit

The subsystem MODulation:XPError[:GMSK]:LIMit defines tolerance values for the modulation measurement. The subsystem corresponds to the tab Limits in the popup menu Modulation.

CONFigure:MODulation:XPError[:GMSK]:LIMit[:CURRent]				Current & Max. Errors	
<PhaseErrorPeak> , <PhaseErrorRMS> , <OrigOffs> , <IQImb> , <FrequencyError>					
Parameter	Description of parameters	Def. value	Def. unit	FW vers.	
0.0 deg to +50.0 deg	Phase Error Peak	+20.0	deg	V2.15	
0.0 deg to +50.0 deg	Phase Error RMS	+5.0	deg		
–100.0 dB to 0 dB	Origin Offset	–20	dB		
–100.0 dB to 0 dB	I/Q Imbalance	–20	dB		
0.0 Hz to +999 Hz	Frequency Error	+90	Hz		
Description of command					
This command defines limits for the modulation parameters in the Current or Max./Min. trace. For quantities with alternating sign (the Phase Error Peak and the Frequency Error), the absolute value must fall below the specified limit. The default frequency error is 49 Hz for GSM400, 90 Hz for GSM850 and GSM900, 180 Hz for GSM1800, 190 Hz for GSM1900.					

CONFigure:MODulation:XPError[:GMSK]:LIMit:AVERage		Average Errors		
<PhaseErrorPeak>,<PhaseErrorRMS>,<OrigOffs>,<IQImb>,<FrequencyError>				
Parameter	Description of parameters	Def. value	Def. unit	FW vers.
0.0 deg to +50.0 deg	Phase Error Peak	+20.0	deg	V2.15
0.0 deg to +50.0 deg	Phase Error RMS	+5.0	deg	
-100.0 dB to 0 dB	Origin Offset	-20	dB	
-100.0 dB to 0 dB	I/Q Imbalance	-20	dB	
0.0 Hz to +999 Hz	Frequency Error	+90	Hz	
Description of command				
This command defines limits for the modulation parameters in the <i>Average</i> trace. For quantities with alternating sign (the <i>Phase Error Peak</i> and the <i>Frequency Error</i>), the absolute value must fall below the specified limit. The default frequency error is 49 Hz for GSM400, 90 Hz for GSM850 and GSM900, 180 Hz for GSM1800, 190 Hz for GSM1900.				

CONFigure:MODulation:XPError[:GMSK]:LIMit:UPPer:MODE <Mode>		Upper Limit Check on/off		
<Mode>	Description of parameters	Def. value	Def. unit	FW vers.
ON	Upper limit check on	ON	-	V2.15
OFF	Upper limit check off			
Description of command				
This command switches on or off the tolerance check with respect to the upper limit lines (current and average).				

CONFigure:MODulation:XPError[:GMSK]:LIMit:LOWer:MODE <Mode>		Lower Limit Check on/off		
<Mode>	Description of parameters	Def. value	Def. unit	FW vers.
ON	Lower limit check on	ON	-	V2.15
OFF	Lower limit check off			
Description of command				
This command switches on or off the tolerance check with respect to the lower limit lines (current and average).				

CONFigure:MODulation:XPError[:GMSK]:LIMit:DEFault <Enable>		Default Settings		
<Enable>	Description of parameters	Def. value	Def. unit	FW vers.
ON	The parameters are set to their default values	ON	-	V2.15
OFF	Some or all parameters differ from the default values			
Description of command				
If used as a setting command with the parameter <i>ON</i> this command sets all parameters of the subsystem to their default values (the setting <i>OFF</i> causes an error message).				
If used as a query the command returns whether all parameters are set to their default values (<i>ON</i>) or not (<i>OFF</i>).				

Subsystem SUBarrays:MODulation:XPError[:GMSK]

The subsystem *SUBarrays:MODulation:XPError[:GMSK]* defines the measurement range and the type of output values.

CONFigure:SUBarrays:MODulation:XPError[:GMSK]		Definition of Subarrays		
<Mode>,<Start>,<Samples>{,<Start>,<Samples>}				
<Mode>	Description of parameters	Def. value	Def. unit	
ALL 	Return all measurement values	ALL	–	
ARITHmetical 	Return arithm. mean value in every range			
MINimum 	Return minimum value in every range			
MAXimum 	Return maximum value in every range			
IVAL,	Return single interpolated value at <Start>			
<Start>	Description of parameters	Def. value	Def. unit	
0 bit to 146 ¼ bit,	Start time in current range	0	bit	
<Samples>	Description of parameters	Def. value	Def. unit	FW vers.
1 to 588	Number of samples in current range	588	–	V2.15
Description of command				
<p>This command configures the <code>READ:SUBarrays...</code>, <code>FETCh:SUBarrays...</code>, and <code>SAMPlE:SUBarrays:MODulation:XPError[:GMSK]</code> commands. It restricts the measurement to up to 32 subranges where either all measurement results (the number of which is given by the second numerical parameter) or a single statistical value is returned. The subranges are defined by the start time and the number of test points which are located on a fixed, equidistant grid with a step width of ¼ bit. If <Start> does not coincide with a test point then the range will start at the next test point that is larger than <Start>.</p> <p>For <Mode> = IVAL, the <Samples> parameter is ignored and the CMU returns a single measurement value corresponding to the abscissa value <Start>. If <Start> is located between two test points with valid results then the result is calculated from the results at these two adjacent test points by linear interpolation.</p> <p>The subranges may overlap but must be within the total range of the <i>MODulation:XPError[:GMSK]</i> measurement. Test points outside this range are not measured (result <i>NAN</i>) and do not enter into the ARITHmetical, MINimum and MAXimum values.</p> <p>By default, only one range corresponding to the total measurement range is used and all measurement values are returned.</p>				

Measured Values – Subsystem MODulation:XPError[:GMSK]

The subsystem *MODulation:XPError[:GMSK]* measures and returns the modulation results and compares them with the tolerance values. The subsystem corresponds to the various output elements in the graphical measurement menu *MODulation:XPError[:GMSK]*.

Scalar Results:				
READ[:SCALar]:MODulation:XPError[:GMSK]? Start single shot meas. and return results				
FETCh[:SCALar]:MODulation:XPError[:GMSK]? Read out meas. results (unsynchronized)				
SAMPle[:SCALar]:MODulation:XPError[:GMSK]? Read out meas. results (synchronized)				
Returned values	Value range	Def. value	Def. unit	FW vers.
Phase Err. Peak Current,	-100.0° to +100.0°	NAN	deg	V2.15
Phase Err. Peak Average,	-100.0° to +100.0°	NAN	deg	
Phase Err. Peak MaxMin,	-100.0° to +100.0°	NAN	deg	
Phase Err. RMS (x3),	-100.0° to +100.0°	NAN	deg	
Origin Offset (x3),	-100.0 dB to +100.0 dB	NAN	dB	
I/Q Imbalance (x3),	-100.0 dB to +100.0 dB	NAN	dB	
Frequency Error (x3),	-1000.0 Hz to +1000.0 Hz	NAN	deg	
AvgBurstPowerCurr,	-137 dBm to +53 dBm	NAN	dBm	
BurstsOutOfTol	0.0 % to 100.0 %	NAN	%	
Phase of Origin Offset Vector	-180° to +180°	NAN	deg	
Description of command				
<p>These commands are always queries. They start a measurement and return all scalar measurement results (see chapter 5). The symbol (x3) behind a value indicates that the list contains three results corresponding to the <i>Current</i>, the <i>Average</i>, and the <i>MMAX</i> curve.</p> <p>The phase of the origin offset vector, which is measured relative to the phase of the 3rd test point in the <i>Modulation</i> trace (bit ½), can be retrieved in remote control only. The origin offset vector in the I/Q plane is thus completely determined by its phase and its magnitude (i.e. the quantity <i>Origin Offset</i>).</p> <p>The calculation of results in an <i>average</i> or <i>peak</i> measurement is described in chapter 3 (cf. <i>calculation of statistical quantities</i>).</p>				

CALCulate:MODulation:XPError[:GMSK]:LIMit:MATChing?		Bursts out of Tolerance		
Returned values	Value range	Def. value	Def. unit	FW vers.
Phase Err. Peak Current,	For all measured values:	INV	–	V2.15
Phase Err. Peak Average,		INV	–	
Phase Err. Peak MaxMin,		INV	–	
Phase Err. RMS (x3),		INV	–	
Origin Offset (x3),		INV	–	
I/Q Imbalance (x3),		INV	–	
Frequency Error (x3),		NMAU NMAL INV OK	INV	
AvgBurstPowerCurr		INV	–	
Description of command				
This command is always a query. It indicates whether and in which way the error limits for the scalar measured values (see above command) have been exceeded.				
The following messages may be returned for all measured values:				
NMAU	Underflow of tolerance value		<i>not matching, underflow</i>	
NMAL	Tolerance value exceeded		<i>not matching, overflow</i>	
INV	Measurement invalid		<i>invalid</i>	
OK	all tolerances matched			

READ:ARRay:MODulation:XPError[:GMSK]:CURRent?		Phase Error in Burst		
READ:ARRay:MODulation:XPError[:GMSK]:AVERAge?				
READ:ARRay:MODulation:XPError[:GMSK]:MMAximum?				
Start single shot measurement and return results		⇒ RUN		
FETCH:ARRay:MODulation:XPError[:GMSK]:CURRent?				
FETCH:ARRay:MODulation:XPError[:GMSK]:AVERAge?				
FETCH:ARRay:MODulation:XPError[:GMSK]:MMAximum?				
Read measurement results (unsynchronized)		⇒ RUN		
SAMPle:ARRay:MODulation:XPError[:GMSK]:CURRent?				
SAMPle:ARRay:MODulation:XPError[:GMSK]:AVERAge?				
SAMPle:ARRay:MODulation:XPError[:GMSK]:MMAximum?				
Read measurement results (synchronized)		⇒ RUN		
Returned values	Description of parameters	Def. value	Def. unit	FW vers.
–100.0 deg to+ 100.0 deg,	1 st value for phase error	NAN	dB	V2.15
... ,	
–100.0 deg to+ 100.0 deg	xth value for phase error	NAN	dB	
Description of command				
These commands are always queries. They return the phase error of the burst vs. time in a fixed ¼-bit pattern. The number of measured values is 588, corresponding to a time range of 0 bit to 146 ¾ bit. The calculation of <i>current</i> , <i>average</i> , and <i>mmax</i> (Min./Max.) results is explained in chapter 3 (cf. <i>display mode</i>).				

READ:SUBarrays:MODulation:XPError[:GMSK][:CURRENT]? READ:SUBarrays:MODulation:XPError[:GMSK]:AVERage? READ:SUBarrays:MODulation:XPError[:GMSK]:MMAximum?					Subarray Results
		Start single shot measurement and return results			⇒ RUN
FETCh:SUBarrays:MODulation:XPError[:GMSK][:CURRent]? FETCh:SUBarrays:MODulation:XPError[:GMSK]:AVERage? FETCh:SUBarrays:MODulation:XPError[:GMSK]:MMAximum?					
		Read meas. results (unsynchronized)			⇒ RUN
SAMPlE:SUBarrays:MODulation:XPError[:GMSK][:CURRent]? SAMPlE:SUBarrays:MODulation:XPError[:GMSK]:AVERage? SAMPlE:SUBarrays:MODulation:XPError[:GMSK]:MMAximum?					
		Read results (synchronized)			⇒ RUN
Ret. values per subrange	Description of parameters	Def. value	Def. unit	FW vers.	
-100.0 deg to+ 100.0 deg,	1 st value for phase error	NAN	dB	V2.15	
... ,		
-100.0 deg to+ 100.0 deg	xth value for phase error	NAN	dB		
Description of command					
<p>These commands are always queries. They return the phase error versus time in a fixed ¼-bit pattern and in the subranges defined by means of the <code>CONFigure:SUBarrays:MODulation:XPError[:GMSK]</code> command. In the default setting of the configuration command the <code>READ:SUBarrays...</code>, <code>FETCh:SUBarrays...</code>, and <code>SAMPlE:SUBarrays...</code> command group is equivalent to the <code>READ:ARRay...</code>, <code>FETCh:ARRay...</code>, and <code>SAMPlE:ARRay...</code> command group described above.</p> <p>The <code>CONFigure:SUBarrays:MODulation:XPError[:GMSK]</code> command defines a maximum of 32 subranges. If one of the statistical modes (<code>ARITHmetical</code>, <code>MINimum</code>, <code>MAXimum</code>) is set, only one value is returned per subrange.</p> <p>The calculation of <i>current</i>, <i>average</i>, <i>minimum</i>, and <i>maximum</i> results is explained in chapter 3 (cf. <i>display mode</i>).</p>					

MODulation[:OVERview]

The subsystem *MODulation[:OVERview]:EPSK* measures general scalar modulation parameters in 8PSK modulation. The subsystem corresponds to the measurement menu *Modulation*, application *Overview 8PSK*, and the associated popup menu *Modulation Configuration*.

Control of Measurement – Subsystem MODulation:OVERview:EPSK

The subsystem *MODulation:OVERview:EPSK* controls the modulation measurement. It corresponds to the softkey *Overview 8PSK* in the measurement menu *Modulation*.

INITiate:MODulation:OVERview:EPSK	Start new measurement	⇒ <i>RUN</i>
ABORt:MODulation:OVERview:EPSK	Abort running measurement and switch off	⇒ <i>OFF</i>
STOP:MODulation:OVERview:EPSK	Stop measurement after current stat. cycle	⇒ <i>STOP</i>
CONTinue:MODulation:OVERview:EPSK	Next measurement step (only <i>stepping mode</i>)	⇒ <i>RUN</i>
Description of command		FW vers.
These commands have no query form. They start and stop the modulation measurement, setting it to the status indicated in the top right column.		V2.15

CONFigure:MODulation:OVERview:EPSK:EREPorting <Mode>		Event Reporting		
<Mode>	Description of parameters	Def. value	Def. unit	FW vers.
SRQ 	Service request	OFF	–	V2.15
SOPC 	Single operation complete			
SRSQ 	SRQ and SOPC			
OFF	No reporting			
Description of command				
This command defines the events generated when the measurement is terminated or stopped (<i>event reporting</i> , see chapter 5 of CMU manual).				

FETCh:MODulation:OVERview:EPSK:STATus?		Measurement Status		
Ret. values	Description of parameters	Def. value	Def. unit	FW vers.
OFF 	Measurement in the <i>OFF</i> state (* <i>RST</i> or <i>ABORt</i>)	OFF	–	V2.15
RUN 	Running (after <i>INITiate</i> , <i>CONTinue</i> or <i>READ</i>)			
STOP 	Stopped (<i>STOP</i>)			
ERR 	<i>OFF</i> (could not be started)			
STEP 	Stepping mode (< <i>stepmode</i> >= <i>STEP</i>)			
RDY,	Stopped according to repetition mode and stop condition			
1 to 10000 	Counter for current statistics cycle			
NONE,	No counting mode set	NONE	–	
1 to 1000 	Counter for current evaluation period within a cycle			
NONE	Statistic count set to off	NONE	–	
Description of command				
This command is always a query. It returns the status of the measurement (see chapters 3 and 5 of CMU manual).				

Test Configuration

The commands of the following subsystems configure the *Modulation* measurement. They correspond to the sections in the *Modulation Configuration* menu that are related to the *Overview* application.

Subsystem MODulation:OVERview:EPSK:CONTrol

The subsystem *MODulation:OVERview:EPSK:CONTrol* configures the modulation measurement. It corresponds to the *Control* tab in the popup menu *Modulation Configuration*.

CONFigure:MODulation:OVERview:EPSK:CONTrol <Mode>, <Statistics>				
				Scope of Measurement
<Mode>	Description of parameters	Def. value	Def. unit	
SCALar	Only scalar measured values (incl. tolerance matching)	SCALar	–	
ARRay	Scalar measured values and arrays			
<Statistics>	Description of parameters	Def. value	Def. unit	FW vers.
1 to 1000	No. of bursts within a statistics cycle	100	–	V2.15
NONE	Statistics off			
Description of command				
This command selects the type of measured values and determines the number of bursts forming one statistics cycle.				

CONFigure:MODulation:OVERview:EPSK:CONTrol:REPetition				
<Repetition> , <StopCond>, <Stepmode>				Test Cycles
<Repetition>	Description of parameters	Def. value	Def. unit	
CONTInuous	Continuous measurement (until STOP or ABORT)	SING	–	
SINGleshot	Single shot measurement (until Status = RDY)			
1 to 10000	Multiple measurement (counting, until Status = STEP RDY)			
<StopCond>	Description of parameters	Def. value	Def. unit	
SONerror	Stop measurement in case of error (<i>stop on error</i>)	NONE	–	
NONE	Continue measurement even in case of error			
<Stepmode>	Description of parameters	Def. value	Def. unit	FW vers.
STEP	Interrupt measurement after each statistics cycle	NONE	–	V2.15
NONE	Continue measurement according to its rep. mode			
Description of command				
This command determines the number of statistics cycles, the stop condition and the stepping mode for the measurement.				
Note: In the case of READ commands (READ: ...), the <Repetition> parameter has no effect; the measurement is always stopped after a single shot.				

CONFigure:MODulation:OVERview:EPSK:CONTRol:DEFault <Enable>		Default Settings		
<Enable>	Description of parameters	Def. value	Def. unit	FW vers.
ON	The parameters are set to their default values	ON	–	V2.15
OFF	Some or all parameters differ from the default values			
Description of command				
If used as a setting command with the parameter <i>ON</i> this command sets all parameters of the subsystem to their default values (the setting <i>OFF</i> causes an error message).				
If used as a query the command returns whether all parameters are set to their default values (<i>ON</i>) or not (<i>OFF</i>).				

Tolerance values – Subsystem MODulation:OEMP:EPSK:LIMit

The subsystem *MODulation:OEMP:EPSK:LIMit* defines tolerance values for the modulation measurement in all four 8PSK applications. The subsystem corresponds to the *Limits* tab in the popup menu *Modulation Configuration*.

CONFigure:MODulation:OEMP:EPSK:LIMit[:CURRent]		Limits Current & Max		
<PhaseErrorPeak>, <PhaseErrorRMS>, <MagnErrorPeak>, <MagnErrorRMS>, <EVMEErrorPeak>, <EVMEErrorRMS>, <OriginOffset>, <IQImbalance>, <FreqError>				
Parameter	Description of parameters	Def. value	Def. unit	FW vers.
0.0 % to +50.0 %,	EVMEErrorPeak	+30.0	%	V2.15
0.0 % to +50.0 %,	EVMEErrorRMS	+9.0	%	
0.0 % to +50.0 %,	MagnErrorPeak	+17.7	%	
0.0 % to +50.0 %,	MagnErrorRMS	+12.5	%	
0.0 deg to +180.0 deg,	PhaseErrorPeak	+20.0	deg	
0.0 deg to +180.0 deg,	PhaseErrorRMS	+5.0	deg	
–100.0 dB to +0.0 dB,	OriginOffset	–30.0	dB	
0 Hz to 999 Hz	FrequencyError	+90	Hz	
Description of command				
This command defines upper limits for the <i>Current</i> and <i>Max./Min.</i> traces and for the scalar modulation parameters derived from them.				

CONFigure:MODulation:OEMP:EPSK:LIMit:AVERAge		Limits Average		
<PhaseErrorPeak>, <PhaseErrorRMS>, <MagnErrorPeak>, <MagnErrorRMS>, <EVMEErrorPeak>, <EVMEErrorRMS>, <OriginOffset>, <IQImbalance>, <FreqError>				
Parameter	Description of parameters	Def. value	Def. unit	FW vers.
0.0 % to +50.0 %,	EVMEErrorPeak	+30.0	%	V2.15
0.0 % to +50.0 %,	EVMEErrorRMS	+9.0	%	
0.0 % to +50.0 %,	MagnErrorPeak	+17.7	%	
0.0 % to +50.0 %,	MagnErrorRMS	+12.5	%	
0.0 deg to +180.0 deg,	PhaseErrorPeak	+20.0	deg	
0.0 deg to +180.0 deg,	PhaseErrorRMS	+5.0	deg	
–100.0 dB to +0.0 dB,	OriginOffset	–30.0	dB	
0 Hz to 999 Hz	FrequencyError	+90	Hz	
Description of command				
This command defines upper limits for the <i>Average</i> traces and for the scalar modulation parameters derived from them.				

CONFigure:MODulation:OEMP:EPSK:LIMit:P95Th				95 th Percentile
<EVM95%>, <MError95%>, <PError95%>				
Parameter	Description of parameters	Def. value	Def. unit	FW vers.
0% to 50.0%,	95 th percentile EVM	+5.0	%	V2.15
0% to 50.0%,	95 th percentile modulation error	+5.0	%	
0° to +180°	95 th percentile phase error	+5.0	deg	
Description of command				
This command defines upper limits for the 95 th percentile of the three quantities <i>error vector magnitude</i> , <i>modulation error</i> , and <i>phase error</i> . The 95 th percentile is the limit below which 95% of the measured errors are located.				

CONFigure:MODulation:OEMP:EPSK:LIMit:DEFault <Enable>				Default Settings
<Enable>	Description of parameters	Def. value	Def. unit	FW vers.
ON	The parameters are set to their default values	ON	–	V2.15
OFF	Some or all parameters differ from the default values			
Description of command				
If used as a setting command with the parameter <i>ON</i> this command sets all parameters of the subsystem to their default values (the setting <i>OFF</i> causes an error message).				
If used as a query the command returns whether all parameters are set to their default values (<i>ON</i>) or not (<i>OFF</i>).				

Measured Values – Subsystem MODulation:OVERview:EPSK

The subsystem *MODulation:OVERview:EPSK* measures and returns the modulation parameters and compares them with the tolerance values. The subsystem corresponds to the various output elements in the measurement menu *MODulation*, application *Overview 8PSK*.

READ[:SCALar]:MODulation:OVERview:EPSK?	Scalar Results:			
	Start single shot measurement and return results			
FETCh[:SCALar]:MODulation:OVERview:EPSK?	Read out meas. results (unsynchronized)			
SAMPlE[:SCALar]:MODulation:OVERview:EPSK?	Read out measurement results (synchronized)			
Returned values	Value range	Def. value	Def. unit	FW vers.
95thPercentileEVM,	0.0 % to 100.0 %	NAN	%	V2.15
95thPercentileMagErr,	0.0 % to 100.0 %	NAN	%	
95thPercentilePhErr,	–100.0 deg to +100.0 deg	NAN	deg	
EVMPeak (x3),	0.0 % to 100.0 %	NAN	%	
EVMRMS (x3),	0.0 % to 100.0 %	NAN	%	
MagnErrorPeak (x3),	0.0 % to 100.0 %	NAN	%	
MagnErrorRMS (x3),	0.0 % to 100.0 %	NAN	%	
PhErrorPeak(x3),	–100.0 deg to +100.0 deg	NAN	deg	
PhErrorRMS (x3),	–100.0 deg to +100.0 deg	NAN	deg	
OriginOffset (x3),	–100.0 dB to +100.0 dB	NAN	dB	
FrequencyError (x3),	–1000.0 Hz to +1000.0 Hz	NAN	Hz	
AvgBurstPowerCurr,	–137 dBm to +53 dBm	NAN	dBm	
BurstsOutOfTol	0.0 % to 100.0 %	NAN	%	

Description of command

These commands are always queries. They start a modulation measurement and output all scalar measurement results (see chapter 4). The calculation of results in an *average* or *peak* measurement is described in chapter 3 (see *calculation of statistical quantities*). The symbol (x3) behind a value indicates that the list contains three results corresponding to the *Current*, the *Average*, and the *MMax* value.

CALCulate:MODulation:OVERview:EPSK:LIMit:MATChing?																
		Bursts out of Tolerance														
Returned values	Value range	Def. value	Def. unit	FW vers.												
95thPercentileEVM,	For all measured values:	INV	–	V2.15												
95thPercentileMagErr,		INV	–													
95thPercentilePhErr,		INV	–													
EVMPeak (x3),		INV	–													
EVMRMS (x3),		INV	–													
MagnErrorPeak (x3),		INV	–													
MagnErrorRMS (x3),		INV	–													
PhErrorPeak(x3),		NMAU NMAL INV OK	INV		–											
PhErrorRMS (x3),		INV	–													
OriginOffset (x3),			INV		–											
FrequencyError (x3),		INV	–													
AvgBurstPowerCurr		INV	–													
Description of command																
<p>This command is always a query. It indicates whether and in which way the error limits for the scalar measured values (see above command) have been exceeded. The symbol (x3) behind a value indicates that the list contains three results corresponding to the <i>Current</i>, the <i>Average</i>, and the <i>MMax</i> value.</p> <p>The following messages may be output for all measured values:</p> <table border="0"> <tr> <td>NMAU</td> <td>Underflow of tolerance value</td> <td><i>not matching, underflow</i></td> </tr> <tr> <td>NMAL</td> <td>Tolerance value exceeded</td> <td><i>not matching, overflow</i></td> </tr> <tr> <td>INV</td> <td>Measurement invalid</td> <td><i>invalid</i></td> </tr> <tr> <td>OK</td> <td>all tolerances matched</td> <td></td> </tr> </table>					NMAU	Underflow of tolerance value	<i>not matching, underflow</i>	NMAL	Tolerance value exceeded	<i>not matching, overflow</i>	INV	Measurement invalid	<i>invalid</i>	OK	all tolerances matched	
NMAU	Underflow of tolerance value	<i>not matching, underflow</i>														
NMAL	Tolerance value exceeded	<i>not matching, overflow</i>														
INV	Measurement invalid	<i>invalid</i>														
OK	all tolerances matched															

MODulation:EVMagnitude

The subsystem *MODulation:EVMagnitude* measures the error vector magnitude as well as general scalar modulation parameters. The subsystem corresponds to the measurement menu *Modulation*, application *EVM 8PSK*, and the associated popup menu *Modulation Configuration*.

Control of Measurement – Subsystem MODulation:EVMagnitude

The subsystem *MODulation:EVMagnitude* controls the modulation measurement. It corresponds to the softkey *EVM 8PSK* in the measurement menu *Modulation*.

INITiate:MODulation:EVMagnitude:EPSK	Start new measurement	⇒	<i>RUN</i>
ABORt:MODulation:EVMagnitude:EPSK	Abort running measurement and switch off	⇒	<i>OFF</i>
STOP:MODulation:EVMagnitude:EPSK	Stop measurement after current stat. cycle	⇒	<i>STOP</i>
CONTinue:MODulation:EVMagnitude:EPSK	Next meas. step (only <i>stepping mode</i>)	⇒	<i>RUN</i>
Description of command			FW vers.
These commands have no query form. They start and stop the modulation measurement, setting it to the status indicated in the top right column.			V2.15

CONFigure:MODulation:EVMagnitude:EPSK:EREPorting <Mode>		Event Reporting		
<Mode>	Description of parameters	Def. value	Def. unit	FW vers.
SRQ 	Service request	OFF	–	V2.15
SOPC 	Single operation complete			
SRSQ 	SRQ and SOPC			
OFF	No reporting			
Description of command				
This command defines the events generated when the measurement is terminated or stopped (<i>event reporting</i> , see chapter 5 of CMU manual).				

FETCh:MODulation:EVMagnitude:EPSK:STATus?		Measurement Status		
Ret. values	Description of parameters	Def. value	Def. unit	FW vers.
OFF 	Measurement in the <i>OFF</i> state (*RST or ABORt)	OFF	–	V2.15
RUN 	Running (after INITiate, CONTinue or READ)			
STOP 	Stopped (STOP)			
ERR 	<i>OFF</i> (could not be started)			
STEP 	Stepping mode (<stepmode>=STEP)			
RDY,	Stopped according to repetition mode and stop condition			
1 to 10000 	Counter for current statistics cycle			
NONE,	No counting mode set	NONE	–	
1 to 1000 	Counter for current evaluation period within a cycle			
NONE	Statistic count set to off	NONE	–	
Description of command				
This command is always a query. It returns the status of the measurement (see chapters 3 and 5 of CMU manual).				

Test Configuration

The commands of the following subsystems configure the *Modulation* measurement. They correspond to the sections in the *Modulation Configuration* menu that are related to the *Error Vector Magnitude* application.

Subsystem MODulation:EVMagnitude:EPSK:CONTROL

The subsystem *MODulation:EVMagnitude:EPSK:CONTROL* configures the modulation measurement. It corresponds to the *Control* tab in the popup menu *Modulation Configuration*.

CONFigure:MODulation:EVMagnitude:EPSK:CONTROL <Mode>, <Statistics>				
				Scope of Measurement
<Mode>	Description of parameters	Def. value	Def. unit	
SCALar	Only scalar measured values (incl. tolerance matching)	ARRay	–	
ARRay	Scalar measured values and arrays			
<Statistics>	Description of parameters	Def. value	Def. unit	FW vers.
1 to 1000	No. of bursts within a statistics cycle	100	–	V2.15
NONE	Statistics off			
Description of command				
This command selects the type of measured values and determines the number of bursts forming one statistics cycle.				

CONFigure:MODulation:EVMagnitude:EPSK:CONTROL:REPetition				
<Repetition>, <StopCond>, <Stepmode>				Test Cycles
<Repetition>	Description of parameters	Def. value	Def. unit	
CONTInuous	Continuous measurement (until STOP or ABORT)	SING	–	
SINGleshot	Single shot measurement (until Status = RDY)			
1 to 10000	Multiple measurement (counting, until Status = STEP RDY)			
<StopCond>	Description of parameters	Def. value	Def. unit	
SONerror	Stop measurement in case of error (<i>stop on error</i>)	NONE	–	
NONE	Continue measurement even in case of error			
<Stepmode>	Description of parameters	Def. value	Def. unit	FW vers.
STEP	Interrupt measurement after each statistics cycle	NONE	–	V2.15
NONE	Continue measurement according to its rep. mode			
Description of command				
This command determines the number of statistics cycles, the stop condition and the stepping mode for the measurement.				
Note: In the case of READ commands (READ: ...), the <Repetition> parameter has no effect; the measurement is always stopped after a single shot.				

CONFigure:MODulation:EVMagnitude:EPSK:CONTRol:DEFault <Enable>		Default Settings		
<Enable>	Description of parameters	Def. value	Def. unit	FW vers.
ON	The parameters are set to their default values	ON	–	V2.15
OFF	Some or all parameters differ from the default values			
Description of command				
If used as a setting command with the parameter <i>ON</i> this command sets all parameters of the subsystem to their default values (the setting <i>OFF</i> causes an error message).				
If used as a query the command returns whether all parameters are set to their default values (<i>ON</i>) or not (<i>OFF</i>).				

Tolerance values – Subsystem MODulation:OEMP:EPSK:LIMit

The subsystem *MODulation:OEMP:EPSK:LIMit* (see p. 3.84 ff) defines tolerance values for the modulation measurement **in all four applications**. The subsystem corresponds to the *Limits* tab in the popup menu *Modulation Configuration*.

Subsystem SUBarrays:MODulation

The subsystem *SUBarrays:MODulation* defines the measurement range and the type of output values.

CONFigure:SUBarrays:MODulation:EVMagnitude:EPSK <Mode>,<Start>,<Samples>{,<Start>,<Samples>}		Definition of Subarrays		
<Mode>	Description of parameters	Def. value	Def. unit	
ALL 	Return all measurement values	ALL	–	
ARITHmetical 	Return arithm. mean value in every range			
MINimum 	Return minimum value in every range			
MAXimum 	Return maximum value in every range			
IVAL,	Return single interpolated value at <Start>			
<Start>	Description of parameters	Def. value	Def. unit	
0 bit to 146 ¼ bit,	Start time in current range	0	bit	
<Samples>	Description of parameters	Def. value	Def. unit	FW vers.
1 to 588	Number of samples in current range	588	–	V2.15
Description of command				
<p>This command configures the <code>READ:SUBarrays...</code>, <code>FETCh:SUBarrays...</code>, and <code>SAMPlE:SUBarrays:MODulation:EVMagnitude:EPSK</code> commands. It restricts the measurement to up to 32 subranges where either all measurement results (the number of which is given by the second numerical parameter) or a single statistical value is returned. The subranges are defined by the start time and the number of test points which are located on a fixed, equidistant grid with a step width of ¼ bit. If <Start> does not coincide with a test point then the range will start at the next test point that is larger than <Start>.</p> <p>For <Mode> = IVAL, the <Samples> parameter is ignored and the CMU returns a single measurement value corresponding to the abscissa value <Start>. If <Start> is located between two test points with valid results then the result is calculated from the results at these two adjacent test points by linear interpolation.</p> <p>The subranges may overlap but must be within the total range of the <i>Modulation</i> measurement. Test points outside this range are not measured (result <i>NAN</i>) and do not enter into the ARITHmetical, MINimum and MAXimum values.</p> <p>By default, only one range corresponding to the total measurement range is used and all measurement values are returned.</p>				

Measured Values – Subsystem MODulation:EVMagnitude:EPSK

The subsystem *MODulation:EVMagnitude:EPSK* measures and returns the modulation parameters and compares them with the tolerance values. The subsystem corresponds to the various output elements in the measurement menu *MODulation*, application *EV M 8PSK*.

READ[:SCALar]:MODulation:EVMagnitude:EPSK?		Scalar Results:		
FETCh[:SCALar]:MODulation:EVMagnitude:EPSK?		Start single shot meas. and return results		
SAMPle[:SCALar]:MODulation:EVMagnitude:EPSK?		Read out meas. results (unsynchronized)		
		Read out meas. results (synchronized)		
Returned values	Value range	Def. value	Def. unit	FW vers.
95 th Percentile EVM	0.0 % to 100.0 %	NAN	%	V2.15
EVM Peak (x3),	0.0 % to 100.0 %	NAN	%	
EVM RMS (x3),	0.0 % to 100.0 %	NAN	%	
Origin Offset (x3),	-100.0 dB to +100.0 dB	NAN	dB	
Frequency Error (x3),	-1000.0 Hz to +1000.0 Hz	NAN	Hz	
Avg Burst Power Curr,	-137 dBm to +53 dBm	NAN	dBm	
Bursts Out Of Tol	0.0 % to 100.0 %	NAN	%	
Description of command				
These commands are always queries. They start a modulation measurement and output all scalar measurement results (see chapter 4). The calculation of results in an <i>average</i> or <i>peak</i> measurement is described in chapter 3 (see <i>calculation of statistical quantities</i>). The symbol (x3) behind a value indicates that the list contains three results corresponding to the <i>Current</i> , the <i>Average</i> , and the <i>MMax</i> value.				

CALCulate:MODulation:EVMagnitude:EPSK:LIMit:MATChing?		Bursts out of Tolerance		
Returned values	Value range	Def. value	Def. unit	FW vers.
95 th Percentile EVM		INV	–	V2.15
Ph Error Peak (x3),		INV	–	
Ph Error RMS (x3),	For all measured values:	INV	–	
		INV	–	
Origin Offset (x3),	NMAU NMAL INV OK			
Frequency Error(x3)		INV	–	
		INV	–	
Description of command				
This command is always a query. It indicates whether and in which way the error limits for the scalar measured values (see above command) have been exceeded. The symbol (x3) behind a value indicates that the list contains three results corresponding to the <i>Current</i> , the <i>Average</i> , and the <i>MMax</i> value. The limits are defined with the <code>CONFigure:MODulation:OEMP...</code> commands.				
The following messages may be output for all measured values:				
NMAU	Underflow of tolerance value	<i>not matching, underflow</i>		
NMAL	Tolerance value exceeded	<i>not matching, overflow</i>		
INV	Measurement invalid	<i>invalid</i>		
OK	all tolerances matched			

READ:ARRay:MODulation:EVMagnitude:EPSK[:CURRent]? READ:ARRay:MODulation:EVMagnitude:EPSK:AVERAge? READ:ARRay:MODulation:EVMagnitude:EPSK:MMAximum?		Phase Error in Burst		
Start single shot measurement and return results		⇒ RUN		
FETCh:ARRay:MODulation:EVMagnitude:EPSK[:CURRent]? FETCh:ARRay:MODulation:EVMagnitude:EPSK:AVERAge? FETCh:ARRay:MODulation:EVMagnitude:EPSK:MMAximum?		Read measurement results (unsynchronized)		
Read measurement results (unsynchronized)		⇒ RUN		
SAMPlE:ARRay:MODulation:EVMagnitude:EPSK[:CURRent]? SAMPlE:ARRay:MODulation:EVMagnitude:EPSK:AVERAge? SAMPlE:ARRay:MODulation:EVMagnitude:EPSK:MMAximum?		Read measurement results (synchronized)		
Read measurement results (synchronized)		⇒ RUN		
Returned values	Description of parameters	Def. value	Def. unit	FW vers.
0.0 % to+ 100.0 %, ... , 0.0 % to+ 100.0 %	1 st value for error vector magnitude ... xth value for error vector magnitude	NAN ... NAN	% ... %	V2.15
Description of command				
These commands are always queries. They return the error vector magnitude vs. time at fixed, equidistant test points. The number of measured values is 588, corresponding to a time range of 0 bit to 146 ¾ bit.				
The calculation of <i>current</i> , <i>average</i> , and <i>mmax</i> (Min./Max.) results is explained in chapter 3 (see <i>display mode</i>).				

READ:SUBarrays:MODulation:EVMagnitude:EPSK[:CURRent]? READ:SUBarrays:MODulation:EVMagnitude:EPSK:AVERAge? READ:SUBarrays:MODulation:EVMagnitude:EPSK:MMAximum?		Subarray Results		
Start single shot measurement and return results		⇒ RUN		
FETCh:SUBarrays:MODulation:EVMagnitude:EPSK[:CURRent]? FETCh:SUBarrays:MODulation:EVMagnitude:EPSK:AVERAge? FETCh:SUBarrays:MODulation:EVMagnitude:EPSK:MMAximum?		Read meas. results (unsynchronized)		
Read meas. results (unsynchronized)		⇒ RUN		
SAMPlE:SUBarrays:MODulation:EVMagnitude:EPSK[:CURRent]? SAMPlE:SUBarrays:MODulation:EVMagnitude:EPSK:AVERAge? SAMPlE:SUBarrays:MODulation:EVMagnitude:EPSK:MMAximum?		Read results (synchronized)		
Read results (synchronized)		⇒ RUN		
Ret. values per subrange	Description of parameters	Def. value	Def. unit	FW vers.
0.0 % to+ 100.0 %, ... , 0.0 % to+ 100.0 %	1 st value for error vector magnitude ... xth value for error vector magnitude	NAN ... NAN	% ... %	V2.15
Description of command				
These commands are always queries. They measure and return the error vector magnitude versus time in the subranges defined by means of the <code>CONFigure:SUBarrays:MODulation:EVMagnitude:EPSK</code> command. In the default setting of the configuration command the <code>READ:SUBarrays...</code> , <code>FETCh:SUBarrays...</code> , and <code>SAMPlE:SUBarrays...</code> command group is equivalent to the <code>READ:ARRay...</code> , <code>FETCh:ARRay...</code> , and <code>SAMPlE:ARRay...</code> command group described above.				
The <code>CONFigure:SUBarrays:MODulation:EVMagnitude:EPSK</code> command defines a maximum of 32 subranges. If one of the statistical modes (<code>ARITHmetical</code> , <code>MINimum</code> , <code>MAXimum</code>) is set, only one value is returned per subrange.				
The calculation of <i>current</i> , <i>average</i> , <i>minimum</i> , and <i>maximum</i> results is explained in chapter 3 (see <i>display mode</i>).				

MODulation:PERRor

The subsystem *MODulation:PERRor* measures the phase error as well as general scalar modulation parameters. The subsystem corresponds to the measurement menu *Modulation*, application *Phase Error 8PSK*, and the associated popup menu *Modulation Configuration*.

Control of Measurement – Subsystem MODulation:PERRor

The subsystem *MODulation:PERRor* controls the modulation measurement. It corresponds to the soft-key *Phase Error 8PSK* in the measurement menu *Modulation*.

INITiate:MODulation[:PERRor]:EPSK	Start new measurement	⇒ <i>RUN</i>
ABORt:MODulation[:PERRor]:EPSK	Abort running measurement and switch off	⇒ <i>OFF</i>
STOP:MODulation[:PERRor]:EPSK	Stop measurement after current stat. cycle	⇒ <i>STOP</i>
CONTinue:MODulation[:PERRor]:EPSK	Next measurement step (only <i>stepping mode</i>)	⇒ <i>RUN</i>
Description of command		FW vers.
These commands have no query form. They start and stop the modulation measurement, setting it to the status indicated in the top right column.		V2.15

CONFigure:MODulation[:PERRor]:EPSK:EREPorting <Mode>		Event Reporting		
<Mode>	Description of parameters	Def. value	Def. unit	FW vers.
SRQ 	Service request	OFF	–	V2.15
SOPC 	Single operation complete			
SRSQ 	SRQ and SOPC			
OFF	No reporting			
Description of command				
This command defines the events generated when the measurement is terminated or stopped (<i>event reporting</i> , see chapter 5 of CMU manual).				

FETCh:MODulation[:PERRor]:EPSK:STATus?		Measurement Status		
Ret. values	Description of parameters	Def. value	Def. unit	FW vers.
OFF 	Measurement in the <i>OFF</i> state (* <i>RST</i> or <i>ABORt</i>)	OFF	–	V2.15
RUN 	Running (after <i>INITiate</i> , <i>CONTinue</i> or <i>READ</i>)			
STOP 	Stopped (<i>STOP</i>)			
ERR 	<i>OFF</i> (could not be started)			
STEP 	Stepping mode (< <i>stepmode</i> >= <i>STEP</i>)			
RDY,	Stopped according to repetition mode and stop condition			
1 to 10000 	Counter for current statistics cycle			
NONE,	No counting mode set	NONE	–	
1 to 1000 	Counter for current evaluation period within a cycle			
NONE	Statistic count set to off	NONE	–	
Description of command				
This command is always a query. It returns the status of the measurement (see chapters 3 and 5 of CMU manual).				

Test Configuration

The commands of the following subsystems configure the *Modulation* measurement. They correspond to the sections in the *Modulation Configuration* menu that are related to the *Phase Error* application.

Subsystem MODulation[:PERRor]:EPSK:CONTrol

The subsystem *MODulation[:PERRor]:EPSK:CONTrol* configures the modulation measurement. It corresponds to the *Control* tab in the popup menu *Modulation Configuration*.

CONFigure:MODulation[:PERRor]:EPSK:CONTrol <Mode>, <Statistics>		Scope of Measurement		
<Mode>	Description of parameters	Def. value	Def. unit	
SCALar	Only scalar measured values (incl. tolerance matching)	ARRay	–	
ARRay	Scalar measured values and arrays			
<Statistics>	Description of parameters	Def. value	Def. unit	FW vers.
1 to 1000	No. of bursts within a statistics cycle	100	–	V2.15
NONE	Statistics off			
Description of command				
This command selects the type of measured values and determines the number of bursts forming one statistics cycle.				

CONFigure:MODulation[:PERRor]:EPSK:CONTrol:REPetition <Repetition>, <StopCond>, <Stepmode>		Test Cycles		
<Repetition>	Description of parameters	Def. value	Def. unit	
CONTInuous	Continuous measurement (until STOP or ABORT)	SING	–	
SINGleshot	Single shot measurement (until Status = RDY)			
1 to 10000	Multiple measurement (counting, until Status = STEP RDY)			
<StopCond>	Description of parameters	Def. value	Def. unit	
SONerror	Stop measurement in case of error (<i>stop on error</i>)	NONE	–	
NONE	Continue measurement even in case of error			
<Stepmode>	Description of parameters	Def. value	Def. unit	FW vers.
STEP	Interrupt measurement after each statistics cycle	NONE	–	V2.15
NONE	Continue measurement according to its rep. mode			
Description of command				
This command determines the number of statistics cycles, the stop condition and the stepping mode for the measurement.				
Note: In the case of READ commands (READ: ...), the <Repetition> parameter has no effect; the measurement is always stopped after a single shot.				

CONFigure:MODulation[:PERRor]:EPSK:CONtrol:DEFault <Enable>		Default Settings		
<Enable>	Description of parameters	Def. value	Def. unit	FW vers.
ON	The parameters are set to their default values	ON	–	V2.15
OFF	Some or all parameters differ from the default values			
Description of command				
If used as a setting command with the parameter <i>ON</i> this command sets all parameters of the subsystem to their default values (the setting <i>OFF</i> causes an error message).				
If used as a query the command returns whether all parameters are set to their default values (<i>ON</i>) or not (<i>OFF</i>).				

Tolerance values – Subsystem MODulation:OEMP:EPSK:LIMit

The subsystem *MODulation:OEMP:EPSK:LIMit* (see p. 3.84 ff) defines tolerance values for the modulation measurement **in all four applications**. The subsystem corresponds to the *Limits* tab in the popup menu *Modulation Configuration*.

Subsystem SUBarrays:MODulation[:PERRor]:EPSK

The subsystem *SUBarrays:MODulation* defines the measurement range and the type of output values.

CONFigure:SUBarrays:MODulation[:PERRor]:EPSK <Mode>,<Start>,<Samples>{,<Start>,<Samples>}		Definition of Subarrays		
<Mode>	Description of parameters	Def. value	Def. unit	
ALL ARITHmetical MINimum MAXimum IVAL,	Return all measurement values Return arithm. mean value in every range Return minimum value in every range Return maximum value in every range Return single interpolated value at <Start>	ALL	–	
<Start>	Description of parameters	Def. value	Def. unit	
0 bit to 146 ¼ bit,	Start time in current range	0	bit	
<Samples>	Description of parameters	Def. value	Def. unit	FW vers.
1 to 588	Number of samples in current range	588	–	V2.15
Description of command				
<p>This command configures the READ:SUBarrays..., FETCH:SUBarrays..., and SAMPLE:SUBarrays:MODulation[:PERRor]:EPSK commands. It restricts the measurement to up to 32 subranges where either all measurement results (the number of which is given by the second numerical parameter) or a single statistical value is returned. The subranges are defined by the start time and the number of test points which are located on a fixed, equidistant grid with a step width of ¼ bit. If <Start> does not coincide with a test point then the range will start at the next test point that is larger than <Start>.</p> <p>For <Mode> = IVAL, the <Samples> parameter is ignored and the CMU returns a single measurement value corresponding to the abscissa value <Start>. If <Start> is located between two test points with valid results then the result is calculated from the results at these two adjacent test points by linear interpolation.</p> <p>The subranges may overlap but must be within the total range of the <i>Modulation</i> measurement. Test points outside this range are not measured (result <i>NAN</i>) and do not enter into the ARITHmetical, MINimum and MAXimum values.</p> <p>By default, only one range corresponding to the total measurement range is used and all measurement values are returned.</p>				

Measured Values – Subsystem MODulation[:PERRor]:EPSK

The subsystem *MODulation[:PERRor]:EPSK* measures and returns the modulation parameters and compares them with the tolerance values. The subsystem corresponds to the various output elements in the measurement menu *MODulation*, application *Phase Error 8PSK*.

		Scalar Results:		
READ[:SCALar]:MODulation[:PERRor]:EPSK?		Start single shot meas. and return results		
FETCH[:SCALar]:MODulation[:PERRor]:EPSK?		Read out meas. results (unsynchronized)		
SAMPle[:SCALar]:MODulation[:PERRor]:EPSK?		Read out measurement results (synchronized)		
Returned values	Value range	Def. value	Def. unit	FW vers.
95thPercentilePhase Error	0.0 % to 100.0 %	NAN	%	V2.15
PhErrorPeak (x3),	0.0 % to 100.0 %	NAN	%	
PhErrorRMS (x3),	0.0 % to 100.0 %	NAN	%	
OriginOffset (x3),	-100.0 dB to +100.0 dB	NAN	dB	
FrequencyError (x3),	-1000.0 Hz to +1000.0 Hz	NAN	Hz	
AvgBurstPowerCurr,	-137 dBm to +53 dBm	NAN	dBm	
BurstsOutOfTol	0.0 % to 100.0 %	NAN	%	
Description of command				
<p>These commands are always queries. They start a modulation measurement and output all scalar measurement results (see chapter 4), either for the whole burst or for the 1st ten valid symbols in the burst. The calculation of results in an <i>average</i> or <i>peak</i> measurement is described in chapter 3 (see <i>calculation of statistical quantities</i>). The symbol (x3) behind a value indicates that the list contains three results corresponding to the <i>Current</i>, the <i>Average</i>, and the <i>MMax</i> value.</p>				

		Bursts out of Tolerance		
CALCulate:MODulation[:PERRor]:EPSK:LIMit:MATChing?				
Returned values	Value range	Def. value	Def. unit	FW vers.
95thPercentilePhError		INV	-	V2.15
PhErrorPeak (x3),	For all measured values:	INV	-	
PhErrorRMS (x3),		INV	-	
OriginOffset (x3),	NMAU NMAL INV OK	INV	-	
FrequencyError(x3)		INV	-	
Description of command				
<p>This command is always a query. It indicates whether and in which way the error limits for the scalar measured values (see above command) have been exceeded. The symbol (x3) behind a value indicates that the list contains three results corresponding to the <i>Current</i>, the <i>Average</i>, and the <i>MMax</i> value. The limits are defined with the <i>CONFigure:MODulation:OEMP...</i> commands.</p> <p>The following messages may be output for all measured values:</p>				
NMAU				Underflow of tolerance value
<i>not matching, underflow</i>				
NMAL				Tolerance value exceeded
<i>not matching, overflow</i>				
INV				Measurement invalid
<i>invalid</i>				
OK				all tolerances matched

READ:ARRay:MODulation[:PERRor]:EPSK[:CURRent]? READ:ARRay:MODulation[:PERRor]:EPSK:AVERAge? READ:ARRay:MODulation[:PERRor]:EPSK:MMAximum?		Phase Error in Burst		
Start single shot measurement and return results		⇒ RUN		
FETCh:ARRay:MODulation[:PERRor]:EPSK[:CURRent]? FETCh:ARRay:MODulation[:PERRor]:EPSK:AVERAge? FETCh:ARRay:MODulation[:PERRor]:EPSK:MMAximum?		Read measurement results (unsynchronized)		
Read measurement results (unsynchronized)		⇒ RUN		
SAMPlE:ARRay:MODulation[:PERRor]:EPSK[:CURRent]? SAMPlE:ARRay:MODulation[:PERRor]:EPSK:AVERAge? SAMPlE:ARRay:MODulation[:PERRor]:EPSK:MMAximum?		Read measurement results (synchronized)		
Read measurement results (synchronized)		⇒ RUN		
Returned values	Description of parameters	Def. value	Def. unit	FW vers.
-100.0 deg to+ 100.0 deg,	1 st value for phase error	NAN	deg	V2.15
... ,	
-100.0 deg to+ 100.0 deg	xth value for phase error	NAN	deg	
Description of command				
These commands are always queries. They return the phase error vs. time at fixed, equidistant test points. The number of measured values is 588, corresponding to a time range of 0 bit to 146 ¾ bit.				
The calculation of <i>current</i> , <i>average</i> , and <i>mmax</i> (Min./Max.) results is explained in chapter 3 (see <i>display mode</i>).				

READ:SUBArrays:MODulation[:PERRor]:EPSK[:CURRent]? READ:SUBArrays:MODulation[:PERRor]:EPSK:AVERAge? READ:SUBArrays:MODulation[:PERRor]:EPSK:MMAximum?		Subarray Results		
Start single shot measurement and return results		⇒ RUN		
FETCh:SUBArrays:MODulation[:PERRor]:EPSK[:CURRent]? FETCh:SUBArrays:MODulation[:PERRor]:EPSK:AVERAge? FETCh:SUBArrays:MODulation[:PERRor]:EPSK:MMAximum?		Read meas. results (unsynchronized)		
Read meas. results (unsynchronized)		⇒ RUN		
SAMPlE:SUBArrays:MODulation[:PERRor]:EPSK[:CURRent]? SAMPlE:SUBArrays:MODulation[:PERRor]:EPSK:AVERAge? SAMPlE:SUBArrays:MODulation[:PERRor]:EPSK:MMAximum?		Read results (synchronized)		
Read results (synchronized)		⇒ RUN		
Ret. values per subrange	Description of parameters	Def. value	Def. unit	FW vers.
100.0 deg to+ 100.0 deg,	1 st value for phase error	NAN	deg	V2.15
... ,	
-100.0 deg to+ 100.0 deg	xth value for phase error	NAN	deg	
Description of command				
These commands are always queries. They measure and return the phase error versus time in the subranges defined by means of the <code>CONFIgure:SUBArrays:MODulation[:PERRor]:EPSK</code> command. In the default setting of the configuration command the <code>READ:SUBArrays...</code> , <code>FETCh:SUBArrays...</code> , and <code>SAMPlE:SUBArrays...</code> command group is equivalent to the <code>READ:ARRay...</code> , <code>FETCh:ARRay...</code> , and <code>SAMPlE:ARRay...</code> command group described above.				
The <code>CONFIgure:SUBArrays:MODulation[:PERRor]:EPSK</code> command defines a maximum of 32 subranges. If one of the statistical modes (<code>ARITHmetical</code> , <code>MINimum</code> , <code>MAXimum</code>) is set, only one value is returned per subrange.				
The calculation of <i>current</i> , <i>average</i> , <i>minimum</i> , and <i>maximum</i> results is explained in chapter 3 (see <i>display mode</i>).				

MODulation:MERRor

The subsystem *MODulation:MERRor* measures the magnitude error as well as general scalar modulation parameters. The subsystem corresponds to the measurement menu *Modulation*, application *Magn. Error 8PSK*, and the associated popup menu *Modulation Configuration*.

Control of Measurement – Subsystem MODulation:MERRor

The subsystem *MODulation:MERRor* controls the modulation measurement. It corresponds to the soft-key *Magn. Error 8PSK* in the measurement menu *Modulation*.

INITiate:MODulation:MERRor:EPSK	Start new measurement	⇒ <i>RUN</i>
ABORt:MODulation:MERRor:EPSK	Abort running measurement and switch off	⇒ <i>OFF</i>
STOP:MODulation:MERRor:EPSK	Stop measurement after current stat. cycle	⇒ <i>STOP</i>
CONTinue:MODulation:MERRor:EPSK	Next measurement step (only <i>stepping mode</i>)	⇒ <i>RUN</i>
Description of command		FW vers.
These commands have no query form. They start and stop the modulation measurement, setting it to the status indicated in the top right column.		V2.15

CONFigure:MODulation:MERRor:EPSK:EREPorting <Mode>		Event Reporting		
<Mode>	Description of parameters	Def. value	Def. unit	FW vers.
SRQ 	Service request	OFF	–	V2.15
SOPC 	Single operation complete			
SRSQ 	SRQ and SOPC			
OFF	No reporting			
Description of command				
This command defines the events generated when the measurement is terminated or stopped (<i>event reporting</i> , see chapter 5 of CMU manual).				

FETCh:MODulation:MERRor:EPSK:STATus?		Measurement Status		
Ret. values	Description of parameters	Def. value	Def. unit	FW vers.
OFF 	Measurement in the <i>OFF</i> state (* <i>RST</i> or <i>ABORt</i>)	OFF	–	V2.15
RUN 	Running (after <i>INITiate</i> , <i>CONTinue</i> or <i>READ</i>)			
STOP 	Stopped (<i>STOP</i>)			
ERR 	<i>OFF</i> (could not be started)			
STEP 	Stepping mode (< <i>stepmode</i> >= <i>STEP</i>)			
RDY,	Stopped according to repetition mode and stop condition			
	Counter for current statistics cycle			
1 to 10000 	No counting mode set			
NONE,	Counter for current evaluation period within a cycle	NONE	–	
1 to 1000 	Statistic count set to off			
NONE		NONE	–	
Description of command				
This command is always a query. It returns the status of the measurement (see chapters 3 and 5 of CMU manual).				

Test Configuration

The commands of the following subsystems configure the *Modulation* measurement. They correspond to the sections in the *Modulation Configuration* menu that are related to the *Magnitude Error* application.

Subsystem MODulation:MERRor:EPSK:CONTRol

The subsystem *MODulation:MERRor:EPSK:CONTRol* configures the modulation measurement. It corresponds to the *Control* tab in the popup menu *Modulation Configuration*.

CONFigure:MODulation:MERRor:EPSK:CONTRol <Mode>, <Statistics>		Scope of Measurement		
<Mode>	Description of parameters	Def. value	Def. unit	
SCALar	Only scalar measured values (incl. tolerance matching)	ARRay	–	
ARRay	Scalar measured values and arrays			
<Statistics>	Description of parameters	Def. value	Def. unit	FW vers.
1 to 1000	No. of bursts within a statistics cycle	100	–	V2.15
NONE	Statistics off			
Description of command				
This command selects the type of measured values and determines the number of bursts forming one statistics cycle.				

CONFigure:MODulation:MERRor:EPSK:CONTRol:REPetition <Repetition>, <StopCond>, <Stepmode>		Test Cycles		
<Repetition>	Description of parameters	Def. value	Def. unit	
CONTInuous	Continuous measurement (until <i>STOP</i> or <i>ABORT</i>)	SING	–	
SINGleshot	Single shot measurement (until <i>Status</i> = <i>RDY</i>)			
1 to 10000	Multiple measurement (<i>counting</i> , until <i>Status</i> = <i>STEP</i> <i>RDY</i>)			
<StopCond>	Description of parameters	Def. value	Def. unit	
SONerror	Stop measurement in case of error (<i>stop on error</i>)	NONE	–	
NONE	Continue measurement even in case of error			
<Stepmode>	Description of parameters	Def. value	Def. unit	FW vers.
STEP	Interrupt measurement after each statistics cycle	NONE	–	V2.15
NONE	Continue measurement according to its rep. mode			
Description of command				
This command determines the number of statistics cycles, the stop condition and the stepping mode for the measurement.				
Note: In the case of <i>READ</i> commands (<i>READ: ...</i>), the <Repetition> parameter has no effect; the measurement is always stopped after a single shot.				

CONFigure:MODulation:MERRor:EPSK:CONTRol:DEFault <Enable>		Default Settings		
<Enable>	Description of parameters	Def. value	Def. unit	FW vers.
ON	The parameters are set to their default values	ON	–	V2.15
OFF	Some or all parameters differ from the default values			
Description of command				
If used as a setting command with the parameter <i>ON</i> this command sets all parameters of the subsystem to their default values (the setting <i>OFF</i> causes an error message).				
If used as a query the command returns whether all parameters are set to their default values (<i>ON</i>) or not (<i>OFF</i>).				

Tolerance values – Subsystem MODulation:OEMP:EPSK:LIMit

The subsystem *MODulation:OEMP:EPSK:LIMit* (see p. 3.84 ff) defines tolerance values for the modulation measurement **in all four applications**. The subsystem corresponds to the *Limits* tab in the popup menu *Modulation Configuration*.

Subsystem SUBarrays:MODulation

The subsystem *SUBarrays:MODulation* defines the measurement range and the type of output values.

CONFigure:SUBarrays:MODulation:MERRor:EPSK <Mode>,<Start>,<Samples>{,<Start>,<Samples>}		Definition of Subarrays		
<Mode>	Description of parameters	Def. value	Def. unit	
ALL	Return all measurement values	ALL	–	
ARITHmetical	Return arithm. mean value in every range			
MINimum	Return minimum value in every range			
MAXimum	Return maximum value in every range			
IVAL,	Return single interpolated value at <Start>			
<Start>	Description of parameters	Def. value	Def. unit	
0 bit to 146 ¼ bit,	Start time in current range	0	bit	
<Samples>	Description of parameters	Def. value	Def. unit	FW vers.
1 to 588	Number of samples in current range	588	–	V2.15
Description of command				
<p>This command configures the READ:SUBarrays..., FETCH:SUBarrays..., and SAMPLE:SUBarrays:MODulation:MERRor:EPSK commands. It restricts the measurement to up to 32 subranges where either all measurement results (the number of which is given by the second numerical parameter) or a single statistical value is returned. The subranges are defined by the start time and the number of test points which are located on a fixed, equidistant grid with a step width of ¼ bit. If <Start> does not coincide with a test point then the range will start at the next test point that is larger than <Start>.</p> <p>For <Mode> = IVAL, the <Samples> parameter is ignored and the CMU returns a single measurement value corresponding to the abscissa value <Start>. If <Start> is located between two test points with valid results then the result is calculated from the results at these two adjacent test points by linear interpolation.</p> <p>The subranges may overlap but must be within the total range of the <i>Modulation</i> measurement. Test points outside this range are not measured (result <i>NAN</i>) and do not enter into the ARITHmetical, MINimum and MAXimum values.</p> <p>By default, only one range corresponding to the total measurement range is used and all measurement values are returned.</p>				

Measured Values – Subsystem MODulation:MERRor:EPSK

The subsystem *MODulation:MERRor:EPSK* measures and returns the modulation parameters and compares them with the tolerance values. The subsystem corresponds to the various output elements in the measurement menu *MODulation*, application *Magn. Error 8PSK*.

		Scalar Results:		
READ[:SCALar]:MODulation:MERRor:EPSK?		Start single shot meas. and return results		
FETCh[:SCALar]:MODulation:MERRor:EPSK?		Read out meas. results (unsynchronized)		
SAMPlE[:SCALar]:MODulation:MERRor:EPSK?		Read out measurement results (synchronized)		
Returned values	Value range	Def. value	Def. unit	FW vers.
95thPercentileMErr	0.0 % to 100.0 %	NAN	%	V2.15
MErrPeak (x3),	0.0 % to 100.0 %	NAN	%	
MErrRMS (x3),	0.0 % to 100.0 %	NAN	%	
OriginOffset (x3),	-100.0 dB to +100.0 dB	NAN	dB	
FrequencyError (x3),	-1000.0 Hz to +1000.0 Hz	NAN	Hz	
AvgBurstPowerCurr,	-137 dBm to +53 dBm	NAN	dBm	
BurstsOutOfTol	0.0 % to 100.0 %	NAN	%	
Description of command				
<p>These commands are always queries. They start a modulation measurement and output all scalar measurement results (see chapter 4), either for the whole burst or for the 1st ten valid symbols in the burst. The calculation of results in an <i>average</i> or <i>peak</i> measurement is described in chapter 3 (see <i>calculation of statistical quantities</i>). The symbol (x3) behind a value indicates that the list contains three results corresponding to the <i>Current</i>, the <i>Average</i>, and the <i>MMax</i> value.</p>				

		Bursts out of Tolerance		
CALCulate:MODulation:MERRor:EPSK:LIMit:MATChing?				
Returned values	Value range	Def. value	Def. unit	FW vers.
95thPercentileMErr		INV	-	V2.15
MErrPeak (x3),		INV	-	
MErrRMS (x3),	For all measured values:	INV	-	
OriginOffset (x3),	NMAU NMAL INV OK	INV	-	
FrequencyError (x3)		INV	-	
Description of command				
<p>This command is always a query. It indicates whether and in which way the error limits for the scalar measured values (see above command) have been exceeded. The symbol (x3) behind a value indicates that the list contains three results corresponding to the <i>Current</i>, the <i>Average</i>, and the <i>MMax</i> value. The limits are defined with the <code>CONFigure:MODulation:OEMP...</code> commands.</p> <p>The following messages may be output for all measured values:</p>				
NMAU	Underflow of tolerance value	<i>not matching, underflow</i>		
NMAL	Tolerance value exceeded	<i>not matching, overflow</i>		
INV	Measurement invalid	<i>invalid</i>		
OK	all tolerances matched			

READ:ARRay:MODulation:MERRor:EPSK[:CURRent]? READ:ARRay:MODulation:MERRor:EPSK:AVERAge? READ:ARRay:MODulation:MERRor:EPSK:MMAximum?		Phase Error in Burst		
Start single shot measurement and return results		⇒ RUN		
FETCh:ARRay:MODulation:MERRor:EPSK[:CURRent]? FETCh:ARRay:MODulation:MERRor:EPSK:AVERAge? FETCh:ARRay:MODulation:MERRor:EPSK:MMAximum?		Read measurement results (unsynchronized)		
Read measurement results (unsynchronized)		⇒ RUN		
SAMPlE:ARRay:MODulation:MERRor:EPSK[:CURRent]? SAMPlE:ARRay:MODulation:MERRor:EPSK:AVERAge? SAMPlE:ARRay:MODulation:MERRor:EPSK:MMAximum?		Read measurement results (synchronized)		
Read measurement results (synchronized)		⇒ RUN		
Returned values	Description of parameters	Def. value	Def. unit	FW vers.
0.0 % to+ 100.0 %, ... , 0.0 % to+ 100.0 %	1 st value for magnitude error ... xth value for magnitude error	NAN ... NAN	% ... %	V2.15
Description of command				
These commands are always queries. They return the magnitude error vs. time at fixed, equidistant test points. The number of measured values is 588, corresponding to a time range of 0 bit to 146 3/4 bit.				
The calculation of <i>current</i> , <i>average</i> , and <i>mmax</i> (Min./Max.) results is explained in chapter 3 (see <i>display mode</i>).				

READ:SUBarrays:MODulation:MERRor:EPSK[:CURRent]? READ:SUBarrays:MODulation:MERRor:EPSK:AVERAge? READ:SUBarrays:MODulation:MERRor:EPSK:MMAximum?		Subarray Results		
Start single shot measurement and return results		⇒ RUN		
FETCh:SUBarrays:MODulation:MERRor:EPSK[:CURRent]? FETCh:SUBarrays:MODulation:MERRor:EPSK:AVERAge? FETCh:SUBarrays:MODulation:MERRor:EPSK:MMAximum?		Read meas. results (unsynchronized)		
Read meas. results (unsynchronized)		⇒ RUN		
SAMPlE:SUBarrays:MODulation:MERRor:EPSK[:CURRent]? SAMPlE:SUBarrays:MODulation:MERRor:EPSK:AVERAge? SAMPlE:SUBarrays:MODulation:MERRor:EPSK:MMAximum?		Read results (synchronized)		
Read results (synchronized)		⇒ RUN		
Ret. values per subrange	Description of parameters	Def. value	Def. unit	FW vers.
0.0 % to+ 100.0 %, ... , 0.0 % to+ 100.0 %	1 st value for magnitude error ... xth value for magnitude error	NAN ... NAN	% ... %	V2.15
Description of command				
These commands are always queries. They measure and return the magnitude error versus time in the subranges defined by means of the <code>CONFigure:SUBarrays:MODulation:MERRor:EPSK</code> command. In the default setting of the configuration command the <code>READ:SUBarrays...</code> , <code>FETCh:SUBarrays...</code> , and <code>SAMPlE:SUBarrays...</code> command group is equivalent to the <code>READ:ARRay...</code> , <code>FETCh:ARRay...</code> , and <code>SAMPlE:ARRay...</code> command group described above.				
The <code>CONFigure:SUBarrays:MODulation:MERRor:EPSK</code> command defines a maximum of 32 subranges. If one of the statistical modes (<code>ARITHmetical</code> , <code>MINimum</code> , <code>MAXimum</code>) is set, only one value is returned per subrange.				
The calculation of <i>current</i> , <i>average</i> , <i>minimum</i> , and <i>maximum</i> results is explained in chapter 3 (see <i>display mode</i>).				

SPECTrum

The subsystem *SPECTrum* provides commands for application-independent *Spectrum* measurement settings. The commands correspond to the application-independent parameters in the *Spectrum Configuration* menu.

CONFigure:SPECTrum:LIMit:LINE:SElect <Modulation>		Limit Selection		
<Modulation>	Description of parameters	Def. value	Def. unit	FW vers.
AUTO	Auto-detect modulation and adjust template	AUTO	–	V3.50
GMSK	Use GMSK template			
EP SK	Use EP SK template			
Description of command				
These commands selects the limit line to be applied. The current template can be queried using [SENSe:]SPECTrum:<Application>:LIMit:LINE:USED?.				

SPECTrum:MODulation

The subsystem *SPECTrum:MODulation* measures the off-carrier power due to the modulation of the GSM signal. The subsystem corresponds to the measurement menu *Spectrum*, application *Modulation*, and the associated configuration popups.

Control of Measurement – Subsystem SPECTrum:MODulation

The subsystem *SPECTrum:MODulation* controls the spectrum due to modulation measurement.

INITiate:SPECTrum:MODulation	Start new measurement	⇒	<i>RUN</i>
ABORt:SPECTrum:MODulation	Abort running meas. and switch off	⇒	<i>OFF</i>
STOP:SPECTrum:MODulation	Stop meas. after current stat. cycle	⇒	<i>STOP</i>
CONTinue:SPECTrum:MODulation	Next meas. step (only <i>stepping mode</i>)	⇒	<i>RUN</i>
Description of command			FW vers.
These commands have no query form. They start or stop the measurement, setting it to the status indicated in the top right column.			V1.20

CONFigure:SPECTrum:MODulation:EREPorting <Mode>		Event Reporting		
<Mode>	Description of parameters	Def. value	Def. unit	FW vers.
SRQ 	Service request	OFF	–	V1.20
SOPC 	Single operation complete			
SRSQ 	SRQ and SOPC			
OFF	No reporting			
Description of command				
This command defines the events generated when the measurement is terminated or stopped (<i>event reporting</i> , see chapter 5 of CMU manual).				

FETCh:SPECTrum:MODulation:STATus?		Measurement Status		
Returned values	Description of parameters	Def. value	Def. unit	FW vers.
OFF 	Measurement in the <i>OFF</i> state (*RST or ABORt)	OFF	–	V1.20
RUN 	Running (after INITiate, CONTinue or READ)			
STOP 	Stopped (STOP)			
ERR 	<i>OFF</i> (could not be started)			
STEP 	Stepping mode (<stepmode>=STEP)			
RDY,	Stopped according to repetition mode and stop condition			
1 to 10000 	Counter for current statistics cycle			
NONE,	No counting mode set	NONE	–	
1 to 1000 	Counter for current evaluation period within a cycle			
NONE	Statistic count set to off	NONE	–	
Description of command				
This command is always a query. It returns the status of the measurement (see chapters 3 and 5 of CMU manual).				

Subsystem SPECTrum:MODulation:CONTRol

The subsystem *SPECTrum:MODulation:CONTRol* defines the repetition mode, statistic count, and stop condition of the measurement. These settings are provided in the *Control* and *Meas X* tabs of the popup menu *Spectrum Configuration*.

CONFigure:SPECTrum:MODulation:CONTRol <Mode>,<Statistics>		Scope of Measurement		
<Mode>	Description of parameters	Def. value	Def. unit	
SCALar	Only scalar measured values	ARRay	–	
ARRay	Scalar measured values and arrays			
<Statistics>	Description of parameters	Def. value	Def. unit	FW vers.
1 to 1000	Number of bursts per statistics cycle	200	–	V1.20
NONE	Statistics off (equivalent to 1)			
Description of command				
This command restricts the type of measured values and determines the number of bursts within a statistics cycle.				

CONFigure:SPECTrum:MODulation:CONTRol:REPetition <Repetition>,<StopCondition>,<Stepmode>		Test cycles		
<Repetition>	Description of parameters	Def. value	Def. unit	
CONTInuous	Continuous measurement (until STOP or ABORT)	SING	–	
SINGleshot	Single shot measurement (until Status = RDY)			
1 to 10000	Multiple measurement (counting, until Status = STEP RDY)			
<StopCondition>	Description of parameters	Def. value	Def. unit	
SONerror	Stop measurement in case of error (stop on error)	NONE	–	
NONE	Continue measurement even in case of error			
<Stepmode>	Description of parameters	Def. value	Def. unit	FW vers.
STEP	Interrupt measurement after each statistics cycle	NONE	–	V1.20
NONE	Continue measurement according to its rep. mode			
Description of command				
This command defines the number of test cycles, the stepping mode and, if required, a stop condition for the measurement.				
Note: In the case of READ commands (READ: ...), the <Repetition> parameter has no effect; the measurement is always stopped after a single shot.				

CONFigure:SPECTrum:MODulation:CONTRol:MPOINT<nr>:ENABLE <Enable>		Fixed Measurement Points		
<Enable>	Description of parameters	Def. value	Def. unit	FW vers.
ON	Switch on measurement point <nr>	ON	–	V1.20
OFF	Switch off measurement point <nr>			
Description of command				
This command switches the measurement at the fixed frequency points no. 1 to 11 (numbered by the numeric suffix <nr>) on or off. Each number denotes a pair of frequency points symmetric to the carrier, <nr>=1 corresponding to ±0.1 MHz, <nr>=11 to ±1.8 MHz.				
A measurement point which is selected for the time domain measurement (CONFigure:SPECTrum:MODulation:TDFSelect) can not be switched off. On the other hand, a measurement point is switched on automatically when it is selected for the time domain measurement.				

CONFigure:SPECTrum:MODulation:CONTRol:VMPOint<nr> <Frequency>		Variable Measurement Points		
<Enable>	Description of parameters	Def. value	Def. unit	FW vers.
0.0 MHz to 2.5 MHz	Variable meas. point with R&S CMU-U65 Var04	0.9 (<nr> = 1)	MHz	V3.50
0.0 MHz to 1.8 MHz	Variable meas. point with oder versions	1.1 (<nr> = 2)	MHz	
ON OFF	Switch on or off measurement point <nr>	1.3 (<nr> = 3)	MHz	
		1.5 (<nr> = 4)	MHz	
Description of command				
<p>This command sets and enables additional pairs of measurement points at up to 4 variable offset frequencies (numbered by the numeric suffix <nr> = 1 to 4). The variable measurement points are switched off after a reset; the parameter ON activates the default values quoted above.</p> <p>A measurement point which is selected for the time domain measurement (CONFig- ure:SPECTrum:MODulation:TDFSelect) can not be switched off. On the other hand, a measurement point is switched on automatically when it is selected for the time domain measurement.</p>				

Test Configuration

The commands of the following subsystems configure the spectrum due to modulation. They correspond to the *Modulation* sections in the *Spectrum Configuration* menu.

Subsystem SPECTrum:MODulation:...

The following commands correspond to various settings in the *Control* tab of the popup menu *Spectrum Configuration*.

CONFigure:SPECTrum:MODulation:TDFSelect <Frequency>		Time D. @ Freq.		
<Frequency>	Description of parameters	Def. value	Def. unit	FW vers.
N18 N160 N140 N120 N100 N080 N060 N040 N025 N020 N010 REF	Fixed measurement points at negative frequencies Carrier frequency (0 Hz offset)	OFF	-	V3.50
P010 P020 P025 P040 P060 P080 P100 P120 P140 P160 P180	Fixed measurement points at positive frequencies			
NV4 NV3 NV2 NV1 PV1 PV2 PV3 PV4	Variable measurement points at negative or positive frequencies			
OFF ON	Switch time domain measurement off or on			
Description of command				
<p>These commands selects the measurement frequency for the time domain (power vs. time) measurement results, to be retrieved by means of READ:ARRay:SPECTrum:MODulation:TDOMain? etc. The time domain measurement can be performed at all enabled fixed and variable measurement points (CONFig- ure:SPECTrum:MODulation:CONTRol:MPOint<nr>:ENABLE, CONFig- ure:SPECTrum:MODulation:CONTRol:VMPOint<nr>). OFF disables the time domain measurement so that READ:ARRay:SPECTrum:MODulation:TDOMain? etc. return NAN results.</p>				

CONFigure:SPECTrum:MODulation:AVGareas <Area>		Averaging Areas		
<Area>	Description of parameters	Def. value	Def. unit	FW vers.
A B	Use averaging area A (before training sequence) or B (after TS)	B	–	V3.50
AB	Use averaging area A and B			
Description of command				
These commands selects one or two 40-bit sections of the burst which are measured and averaged in order to calculate the <i>Modulation</i> results.				

Subsystem SPECTrum:MODulation:LIMit:LINE

The subsystem *SPECTrum:MODulation:LIMit:LINE* defines the limit lines, i.e. the tolerance values for the spectrum due to modulation measurement. The subsystem corresponds to the *Modulation* sections in the tab *Limit Lines* in the popup menu *Spectrum Configuration*.

[SENSe:]SPECTrum:MODulation:LIMit:LINE:USED?		Current Limit Template		
Response	Description of parameters	Def. value	Def. unit	FW vers.
GMSK	Use GMSK template	–	–	V3.50
EP SK	Use EP SK template			
Description of command				
These commands is always a query and returns the current limit line template. The template can be selected using CONFigure:SPECTrum:LIMit:LINE:SElect.				

CONFigure:SPECTrum:MODulation[:GMSK]:LIMit:LINE:UPPer<nr>:ENABLE		Limits		
CONFigure:SPECTrum:MODulation:EP SK:LIMit:LINE:UPPer<nr>:ENABLE				
<Enable>				
CONFigure:SPECTrum:MODulation[:GMSK]:LIMit:LINE:UPPer<nr>				
CONFigure:SPECTrum:MODulation:EP SK:LIMit:LINE:UPPer<nr>				
<MinPwLevelRel>, <MaxPwLevelRel>, <AbsPwLevel>, <Enable>				
Numeric Suffix	Value range	Description of parameters	Def. value	
<nr>	1 to 11	Measurement point (frequency) no.		
Parameters	Value range	Description of parameters	Def. value	
<Enable>	ON OFF	Defined frequency on/off	ON	
<MinPwLevelRel>,	–99.9 dB to 99.9 dB	Limit for relative power below the interpolation range	See below	
<MaxPwLevelRel>,	–99.9 dB to 99.9 dB	Limit for relative power above the interpolation range	See below	
<AbsPwLevel>,	–99.9 dBm to 99.9 dBm	Alternative absolute power limit		
<Enable>	ON OFF	Enable or disable limit check for frequency point <nr>	See below	
Description of command				
These commands activate and define limit lines for the spectrum due to modulation measurement. Each number <nr> denotes a pair of frequency points symmetric to the carrier, <nr>=1 corresponding to ±0.1 MHz, <nr>=11 to ±1.8 MHz.				
FW vers.				
V1.20				

The limits are defined at up to 11 fixed frequencies numbered by the numeric suffix <nr> and as a function of the MS output power level. Outside the interpolation range defined via `CONFigure:SPECTrum:MODulation:LIMit:LINE:REFPower[:UPPer]`, the fixed relative power limits <MinPwLevelRel> and <MaxPwLevelRel> apply. Inside this range, the limits are derived from these values by linear interpolation. As an alternative, an absolute power limit is set. For a more detailed explanation see chapter 4.

To switch on or off the complete limit check please use the command

```
CONFigure:SPECTrum:MODulation:LIMit:LINE:MODE[:UPPer] <Mode>
```

Default values for GSM400/900 in both modulation schemes:

Frequency	Min.P. Lev.rel.	Max.P. Lev.rel.	Level abs.
± 0.10 MHz	+0.5 dB	+ 0.5 dB	- 36.0 dBm
± 0.20 MHz	-30.0 dB	- 30.0 dB	- 36.0 dBm
± 0.25 MHz	-33.0 dB	- 33.0 dB	- 36.0 dBm
± 0.40 MHz	-60.0 dB	- 60.0 dB	- 36.0 dBm
± 0.60 MHz	-60.0 dB	- 66.0 dB	- 51.0 dBm
± 0.80 MHz	-60.0 dB	- 66.0 dB	- 51.0 dBm
± 1.00 MHz	-60.0 dB	- 66.0 dB	- 51.0 dBm
± 1.20 MHz	-60.0 dB	- 66.0 dB	- 51.0 dBm
± 1.40 MHz	-60.0 dB	- 66.0 dB	- 51.0 dBm
± 1.60 MHz	-60.0 dB	- 66.0 dB	- 51.0 dBm
± 1.80 MHz	-60.0 dB	- 66.0 dB	- 51.0 dBm

Default values for GSM1800/1900 in both modulation schemes:

Frequency	Min.P. Lev.rel.	Max.P. Lev.rel.	Level abs.
± 0.10 MHz	+0.5 dB	+ 0.5 dB	- 36.0 dBm
± 0.20 MHz	-30.0 dB	- 30.0 dB	- 36.0 dBm
± 0.25 MHz	-33.0 dB	- 33.0 dB	- 36.0 dBm
± 0.40 MHz	-60.0 dB	- 60.0 dB	- 36.0 dBm
± 0.60 MHz	-60.0 dB	- 60.0 dB	- 56.0 dBm
± 0.80 MHz	-60.0 dB	- 60.0 dB	- 56.0 dBm
± 1.00 MHz	-60.0 dB	- 60.0 dB	- 56.0 dBm
± 1.20 MHz	-60.0 dB	- 60.0 dB	- 56.0 dBm
± 1.40 MHz	-60.0 dB	- 60.0 dB	- 56.0 dBm
± 1.60 MHz	-60.0 dB	- 60.0 dB	- 56.0 dBm
± 1.80 MHz	-60.0 dB	- 60.0 dB	- 56.0 dBm

<code>CONFigure:SPECTrum:MODulation[:GMSK]:LIMit:LINE:REFPower[:UPPer]</code>				Reference Power	
<code>CONFigure:SPECTrum:MODulation:EPSK:LIMit:LINE:REFPower[:UPPer]</code>					
<Minimum>, <Maximum>					
<Minimum>	Description of parameters	Def. value	Def. unit		
-99.9 dBm to +38.0 dBm	Ref. power for min. power level	33	dBm		
<Maximum>	Description of parameters	Def. value	Def. unit	FW vers.	
+34.0 dBm to +99.9 dBm	Ref. power for max. power level	39	dBm	V1.25	
Description of command					
This command defines the MS output power range where the relative limit lines are given by linear interpolation between a minimum and a maximum relative power level. See command <code>CONFigure:SPECTrum:MODulation[:GMSK]:LIMit:LINE[:ASYMmetrical]:UPPer<nr></code> and detailed explanation in chapter 4. The value range applies with the additional condition $\text{<Minimum>} \leq \text{<Maximum>} - 1\text{dB}$.					

CONFigure:SPECTrum:MODulation[:GMSK]:LIMit:LINE:MODE[:UPPer] <Mode>		Limits on/off		
CONFigure:SPECTrum:MODulation:EPSK:LIMit:LINE:MODE[:UPPer] <Mode>		Def. value	Def. unit	FW vers.
<Mode>	Description of parameters			
ON	Switch on limit lines	ON	–	V1.20
OFF	Switch off limit lines			
Description of command				
This command switches all limit lines for the spectrum due to modulation measurement on or off.				

Subsystem SUBarrays:SPECTrum:MODulation

The subsystem *SUBarrays:SPECTrum:MODulation* defines the measurement range and the type of output values.

CONFigure:SUBarrays:SPECTrum:MODulation[:FDOMain]		Definition of Subarrays: Frequency Domain		
<Mode>,<Start>,<Samples>{,<Start>,<Samples>}		Def. value	Def. unit	FW vers.
<Mode>	Description of parameters			
ALL	Return all measurement values	ALL	–	
ARITHmetical	Return arithm. mean value in every range			
MINimum	Return minimum value in every range			
MAXimum	Return maximum value in every range			
IVAL,	Return single interpolated value at <Start>			
<Start>	Description of parameters	Def. value	Def. unit	
–1.8 MHz to 1.8 MHz,	Frequency of first point in current range	–1.8	MHz	
<Samples>	Description of parameters	Def. value	Def. unit	FW vers.
1 to 23	Number of samples in current range	23	–	V2.00
Description of command				
<p>This command configures the READ:SUBarrays... , FETCh:SUBarrays... , and SAM- Ple:SUBarrays:SPECTrum:MODulation[:FDOMain] commands. It restricts the measurement to up to 32 subranges where either all measurement results (the number of which is given by the second numerical param- eter) or a single statistical value is returned. The subranges are defined by the start time and the number of test points which are located at fixed frequencies (see command CONFig- ure:SPECTrum:MODulation...:LIMit:LINE<nr>). If <Start> does not coincide with a test point then the range will start at the next test point that is larger than <Start>.</p> <p>For <Mode> = IVAL, the <Samples> parameter is ignored and the CMU returns a single measurement value corresponding to the abscissa value <Start>. If <Start> is located between two test points with valid results then the result is calculated from the results at these two adjacent test points by linear interpolation.</p> <p>The subranges may overlap but must be within the total range of the <i>spectrum due to modulation</i> measurement. Test points outside this range are not measured (result <i>NAN</i>) and do not enter into the ARITHmetical, MINimum and MAXimum values.</p> <p>By default, only one range corresponding to the total measurement range is used and all measurement values are returned.</p>				

CONFigure:SUBarrays:SPECTrum:MODulation:TDOMain		Definition of Subarrays: Time Domain		
<Mode>,<Start>,<Samples>{,<Start>,<Samples>}				
<Mode>	Description of parameters	Def. value	Def. unit	
ALL	Return all measurement values	ALL	–	
ARITHmetical	Return arithm. mean value in every range			
MINimum	Return minimum value in every range			
MAXimum	Return maximum value in every range			
IVAL,	Return single interpolated value at <Start>			
<Start>	Description of parameters	Def. value	Def. unit	
–30 to +175,	First symbol point in current range	–30	(symp)	
<Samples>	Description of parameters	Def. value	Def. unit	FW vers.
1 to 618	Number of samples in current range	618	–	V3.50
Description of command				
This command configures the READ:SUBarrays., FETCh:SUBarrays., and SAM- Ple:SUBarrays:SPECTrum:MODulation:TDOMain commands. It is analogous to the subarray command for the frequency domain (CONFigure:SUBarrays:SPECTrum:MODulation[:FDOMain]).				

Measured Values

The commands of the following subsystems determine and return the results of the spectrum due to modulation measurement. They correspond to the graphical menu *Spectrum* with its various display elements.

Subsystem SPECTrum:MODulation

The subsystem *SPECTrum:MODulation* measures and returns the *Modulation* spectrum and compares it with tolerance values. The subsystem corresponds to the graphical measurement menu *Spectrum*.

		Scalar Results:		
READ[:SCALar]:SPECTrum:MODulation?	Start single shot measurement and return results			
FETCh[:SCALar]:SPECTrum:MODulation?	Read measurement results (unsynchronized)			
SAMPlE[:SCALar]:SPECTrum:MODulation?	Read measurement results (synchronized)			
Returned values	Value range	Def. value	Def. unit	FW vers.
Reference Power,	–100.0 dBm to +100.0 dBm	NAN	dBm	V1.20
Matching	INV MATC NMAT OUT NTR NRAM OFLW UFLW NTSC OFF	INV	–	
Description of command				
These commands are always queries.				
<ul style="list-style-type: none"> - READ starts a single shot measurement and returns the results. - FETCh outputs the current results regardless of the measurement state. - SAMPlE waits until the results are valid for the first time (depending on the chosen statistic count) and then outputs the results. 				
For more details refer to the description of measurement control in chapter 5 of the CMU200 operating manual.				

The reference power is the absolute carrier power measured as specified in the GSM standard. The following messages may be output for the value *Matching*:

INV	<i>invalid</i>
MATC	<i>matching</i>
NMAT	<i>not matching</i>
OUT	<i>out of range</i>
NTR	<i>no trigger</i>
NRAM	<i>not ramping (burst not found)</i>
OFLW	<i>overflow</i>
UFLW	<i>underflow</i>
NTSC	<i>no training sequence code</i>
OFF	<i>off</i>

Spectrum Results: Frequency Domain, Fixed Meas. Points

READ:ARRay:SPECTrum:MODulation[:FDOmain]? Start single shot measurement and return results

FETCh:ARRay:SPECTrum:MODulation[:FDOmain]? Read measurement results (unsynchronized)

SAMPlE:ARRay:SPECTrum:MODulation[:FDOmain]? Read results (synchronized)

Returned values	Description of parameters	Def. value	Def. unit	FW vers.
-100.0 dB to + 20.0 dB,	Power at measurement point 1 (-1.8 MHz)	NAN	dB	V1.20
...,	
-100.0 dB to + 20.0 dB,	Power at measurement point 12 (0 MHz)	NAN	dB...	
...,	
-100.0 dB to + 20.0 dB	Power at measurement point 23 (+1.8 MHz)	NAN	dB	

Description of command

These commands are always queries. They return the off-carrier power due to modulation at all enabled fixed measurement points (CONFigure:SPECTrum:MODulation:CONTrol:MPOINT<nr>:ENABle). NAN is returned at the disabled points.

Spectrum Results: Frequency Domain, Variable Meas. Points

READ:ARRay:SPECTrum:MODulation[:FDOmain]:VMPoint? Start single shot measurement and return results

FETCh:ARRay:SPECTrum:MODulation[:FDOmain]:VMPoint? Read measurement results (unsynchronized)

SAMPlE:ARRay:SPECTrum:MODulation[:FDOmain]:VMPoint? Read results (synchronized)

Returned values	Description of parameters	Def. value	Def. unit	FW vers.
-100.0 dB to + 20.0 dB,	Power at measurement point 4 (neg. freq. offset)	NAN	dB	V3.50
...,	
-100.0 dB to + 20.0 dB,	Power at measurement point 1 (neg. freq. offset)	NAN	dB...	
-100.0 dB to + 20.0 dB,	Power at measurement point 1 (pos. freq. offset)	NAN	dB	
...,	
-100.0 dB to + 20.0 dB	Power at measurement point 4 (pos. freq. offset)	NAN	dB	

Description of command

These commands are always queries. They return the off-carrier power due to modulation at all enabled variable measurement points (CONFigure:SPECTrum:MODulation:CONTrol:VMPOINT<nr>). NAN is returned at the disabled points.

		Subarray Results: Frequency Domain		
READ:SUBarrays:SPECTrum:MODulation[:FDOmain]?		Start single shot meas. and return results	⇒ RUN	
FETCh:SUBarrays:SPECTrum:MODulation[:FDOmain]?		Read meas. results (unsynchronized)	⇒ RUN	
SAMPlE:SUBarrays:SPECTrum:MODulation[:FDOmain]?		Read results (synchronized)	⇒ RUN	
Ret. values per subrange	Description of parameters	Def. value	Def. unit	FW vers.
-100.0 dB to + 20.0 dB	Power[1], 1 st value for power	NAN	dB	V2.00
...	
-100.0 dB to + 20.0 dB	Power[x], xth value for power	NAN	dB	
Description of command				
<p>These commands are always queries. They output the off-carrier power due to modulation in the subranges defined by means of the <code>CONFigure:SUBarrays:SPECTrum:MODulation[:FDOmain]</code> command. In the default setting of the configuration command the <code>READ:SUBarrays...</code>, <code>FETCh:SUBarrays...</code>, and <code>SAMPlE:SUBarrays...</code> command group is equivalent to the <code>READ:ARRay...</code>, <code>FETCh:ARRay...</code>, and <code>SAMPlE:ARRay...</code> command group described above.</p> <p>The <code>CONFigure:SUBarrays:SPECTrum:MODulation[:FDOmain]</code> command defines a maximum of 32 subranges. If one of the statistical modes (<code>ARIThmetical</code>, <code>MINimum</code>, <code>MAXimum</code>) is set, only one value is returned per subrange.</p>				

CALCulate:ARRay:SPECTrum:MODulation[:FDOmain]:AREA:LIMit:MATChing?		Limit Matching		
Returned value	Description of parameters	Def. value	Def. unit	FW vers.
32 bit value	Indicator for limit matching at fixed meas. points 1 to 23 (least significant bits)	NAN	-	V3.50
Description of command				
<p>This command is always a query. A bit in the output value is set if the corresponding fixed measurement point exceeds the limit.</p>				

		Spectrum Results: Time Domain		
READ:ARRay:SPECTrum:MODulation:TDOmain?		Start single shot measurement and return results		
FETCh:ARRay:SPECTrum:MODulation:TDOmain?		Read measurement results (unsynchronized)		
SAMPlE:ARRay:SPECTrum:MODulation:TDOmain?		Read results (synchronized)		
Returned values	Description of parameters	Def. value	Def. unit	FW vers.
-100.0 dB to + 20.0 dB,	Power at measurement point 1	NAN	dB	V3.50
....,	
-100.0 dB to + 20.0 dB	Power at measurement point 618	NAN	dB	
Description of command				
<p>These commands are always queries. They return the off-carrier power vs. time at a definite offset frequency from the carrier (<code>CONFigure:SPECTrum:MODulation:TDFSelect</code>). The position of the measurement points is as reported in the <code>CONFigure:SUBarrays:SPECTrum:MODulation:TDOmain</code> command description.</p>				

		Subarray Results: Time Domain		
READ:SUBarrays:SPECTrum:MODulation:TDOMain?		Start single shot meas. and return results	⇒ RUN	
FETCh:SUBarrays:SPECTrum:MODulation:TDOMain?		Read meas. results (unsynchronized)	⇒ RUN	
SAMPlE:SUBarrays:SPECTrum:MODulation:TDOMain?		Read results (synchronized)	⇒ RUN	
<i>Ret. values per subrange</i>	Description of parameters	Def. value	Def. unit	FW vers.
-100.0 dB to + 20.0 dB	Power[1], 1 st value for power	NAN	dB	V3.50
...	
-100.0 dB to + 20.0 dB	Power[x], xth value for power	NAN	dB	
Description of command				
<p>These commands are always queries. They output the off-carrier power due to modulation in the subranges defined by means of the <code>CONFigure:SUBarrays:SPECTrum:MODulation:TDOMain</code> command. In the default setting of the configuration command the <code>READ:SUBarrays...</code>, <code>FETCh:SUBarrays...</code>, and <code>SAMPlE:SUBarrays...</code> command group is equivalent to the <code>READ:ARRay...</code>, <code>FETCh:ARRay...</code>, and <code>SAMPlE:ARRay...</code> command group described above.</p> <p>The <code>CONFigure:SUBarrays:SPECTrum:MODulation:TDOMain</code> command defines a maximum of 32 subranges. If one of the statistical modes (<code>ARITHmetical</code>, <code>MINimum</code>, <code>MAXimum</code>) is set, only one value is returned per subrange.</p>				

SPECTrum:SWITching

The subsystem *SPECTrum:SWITching* measures the off-carrier power due to the bursty nature of the GSM signal. The subsystem corresponds to the measurement menu *Spectrum*, application *Switching*, and the associated configuration popups.

Control of Measurement – Subsystem SPECTrum:SWITching

The subsystem *SPECTrum:SWITching* controls the spectrum due to switching measurement.

INITiate:SPECTrum:SWITching	Start new measurement	⇒	<i>RUN</i>
ABORT:SPECTrum:SWITching	Abort running measurement and switch off	⇒	<i>OFF</i>
STOP:SPECTrum:SWITching	Stop measurement after current stat. cycle	⇒	<i>STOP</i>
CONTinue:SPECTrum:SWITching	Next measurement step (only <i>stepping mode</i>)	⇒	<i>RUN</i>
Description of command			FW vers.
These commands have no query form. They start or stop the measurement, setting it to the status indicated in the top right column.			V1.20

CONFigure:SPECTrum:SWITching:EREPorting <Mode>		Event Reporting		
<Mode>	Description of parameters	Def. value	Def. unit	FW vers.
SRQ 	Service request	OFF	–	V1.20
SOPC 	Single operation complete			
SRSQ 	SRQ and SOPC			
OFF	No reporting			
Description of command				
This command defines the events generated when the measurement is terminated or stopped (<i>event reporting</i> , see chapter 5 of CMU manual).				

FETCh:SPECTrum:SWITChing:STATus?		Measurement Status		
Returned values	Description of parameters	Def. value	Def. unit	FW vers.
OFF RUN STOP ERR STEP RDY,	Measurement in the OFF state (*RST or ABORT) Running (after INITiate, CONTInue or READ) Stopped (STOP) OFF (could not be started) Stepping mode (<stepmode>=STEP) Stopped according to repetition mode and stop condition	OFF	–	V1.20
1 to 10000 NONE,	Counter for current statistics cycle No counting mode set	NONE	–	
1 to 1000 NONE	Counter for current evaluation period within a cycle Statistic count set to off	NONE	–	
Description of command				
This command is always a query. It returns the status of the measurement (see chapters 3 and 5 of CMU manual).				

CONFigure:SPECTrum:SWITChing:CSMODE <Mode>		Cont. Stat. Mode		
<Mode>	Description of parameters	Def. value	Def. unit	FW vers.
PHOL SCO	Peak Hold Statistic Count	PHOL	–	V3.10
Description of command				
This command defines the continuous statistical mode for the spectrum due to switching measurement.				

Subsystem SPECTrum:SWITChing:CONTRol

The subsystem *SPECTrum:SWITChing:CONTRol* defines the repetition mode, statistic count, and stop condition of the measurement. These settings are provided in the *Control* and *Meas X* tabs of the popup menu *Spectrum Configuration*.

CONFigure:SPECTrum:SWITChing:CONTRol <Mode>,<Statistics>		Scope of Measurement		
<Mode>	Description of parameters	Def. value	Def. unit	FW vers.
SCALar ARRay	Only scalar measured values Scalar measured values and arrays	ARRay	–	
<Statistics>	Description of parameters	Def. value	Def. unit	FW vers.
1 to 1000 NONE	Number of bursts per statistics cycle Statistics off (equivalent to 1)	10	–	V1.20
Description of command				
This command restricts the type of measured values and determines the number of bursts within a statistics cycle.				

CONFigure:SPECTrum:SWITching:CONTrol:REPetition		Test Cycles		
<Repetition>,<StopCondition>, <Stepmode>				
<Repetition>	Description of parameters	Def. value	Def. unit	FW vers.
CONTinuous	Continuous measurement (until STOP or ABORT)	SING	–	
SINGleshot	Single shot measurement (until Status = RDY)			
1 to 10000	Multiple measurement (counting, until Status = STEP RDY)			
<StopCondition>	Description of parameters	Def. value	Def. unit	
SONerror	Stop measurement in case of error (stop on error)	NONE	–	
NONE	Continue measurement even in case of error			
<Stepmode>	Description of parameters	Def. value	Def. unit	FW vers.
STEP	Interrupt measurement after each statistics cycle	NONE	–	V1.20
NONE	Continue measurement according to its rep. mode			
Description of command				
This command defines the number of test cycles, the stepping mode and, if required, a stop condition for the measurement.				
Note: In the case of READ commands (READ: ...), the <Repetition> parameter has no effect; the measurement is always stopped after a single shot.				

CONFigure:SPECTrum:SWITching:CONTrol:MPOint<nr>:ENABle <Enable>		Fixed Measurement Points		
<Enable>	Description of parameters	Def. value	Def. unit	FW vers.
ON	Switch on measurement point <nr>	ON	–	V1.20
OFF	Switch off measurement point <nr>			
Description of command				
This command switches the measurement at the fixed frequency points no. 1 to 4 (numbered by the numeric suffix <nr>) on or off. Each number denotes a pair of frequency points symmetric to the carrier, <nr>=1 corresponding to ±0.4 MHz, <nr>=4 to ±1.8 MHz.				
A measurement point which is selected for the time domain measurement (CONFigure:SPECTrum:SWITching:TDFSelect) can not be switched off. On the other hand, a measurement point is switched on automatically when it is selected for the time domain measurement.				

CONFigure:SPECTrum:SWITching:CONTrol:VMPOint<nr> <Frequency>		Variable Measurement Points		
<Enable>	Description of parameters	Def. value	Def. unit	FW vers.
0.0 MHz to 2.5 MHz	Variable meas. point with R&S CMU-U65 Var04	0.8 (<nr> = 1)	MHz	V3.50
0.0 MHz to 1.8 MHz	Variable meas. point with oder versions	1.0 (<nr> = 2)	MHz	
ON	Switch on or off measurement point <nr>	1.4 (<nr> = 3)	MHz	
OFF		1.6 (<nr> = 4)	MHz	
Description of command				
This command sets and enables additional pairs of measurement points at up to 4 variable offset frequencies (numbered by the numeric suffix <nr> = 1 to 4). The variable measurement points are switched off after a reset; the parameter ON activates the default values quoted above.				
A measurement point which is selected for the time domain measurement (CONFigure:SPECTrum:SWITching:TDFSelect) can not be switched off. On the other hand, a measurement point is switched on automatically when it is selected for the time domain measurement.				

Test Configuration

The commands of the following subsystems configure the spectrum due to switching. They correspond to the *Switching* sections in the *Spectrum Configuration* menu.

Subsystem SPECTrum:SWITching:...

The following commands correspond to various settings in the *Control* tab of the popup menu *Spectrum Configuration*.

CONFigure:SPECTrum:SWITching:TDFSelect <Frequency>		Time D. @ Freq.		
<Frequency>	Description of parameters	Def. value	Def. unit	FW vers.
N18 N120 N060 N040 REF P040 P060 P120 P180 NV4 NV3 NV2 NV1 PV1 PV2 PV3 PV4 OFF ON	Fixed meas. points at negative frequencies Carrier frequency (0 Hz offset) Fixed meas. points at positive frequencies Variable measurement points at negative or positive frequencies	OFF	–	V3.50
Description of command				
These commands selects the measurement frequency for the time domain (power vs. time) measurement results, to be retrieved by means of READ:ARRay:SPECTrum:SWITching:TDOMain? etc. The time domain measurement can be performed at all enabled fixed and variable measurement points (CONFigure:SPECTrum:SWITching:CONTRol:MPoint<nr>:ENABle, CONFigure:SPECTrum:SWITching:CONTRol:VMPoint<nr>). OFF disables the time domain measurement so that READ:ARRay:SPECTrum:SWITching:TDOMain? etc. return NAN results.				

CONFigure:SPECTrum:SWITching:NOSlots <Slots>		Slot Count		
<Slots>	Description of parameters	Def. value	Def. unit	FW vers.
1 to 8	Number of slots per TDMA frame measured	1	–	V3.50
Description of command				
These commands defines the number of timeslots which are considered for the <i>Spectrum due to Switching</i> measurement.				

Subsystem SPECTrum:SWITching:LIMit:LINE

The subsystem *SPECTrum:SWITching:LIMit:LINE* defines the limit lines, i.e. the tolerance values for the spectrum due to switching measurement. The subsystem corresponds to the *Switching* sections in the tab *Limit Lines* in the popup menu *Spectrum Configuration*.

[SENSe:]SPECTrum:SWITching:LIMit:LINE:USED?		Current Limit Template		
Response	Description of parameters	Def. value	Def. unit	FW vers.
GMSK EPSK	Use GMSK template Use EPSK template	–	–	V3.50
Description of command				
These commands is always a query and returns the current limit line template. The template can be selected using CONFigure:SPECTrum:LIMit:LINE:SElect.				

			Limits		
CONFigure:SPECTrum:SWITching[:GMSK]:LIMit:LINE:UPPEr<nr>:ENABLE CONFigure:SPECTrum:SWITching:EPSK:LIMit:LINE:UPPEr<nr>:ENABLE <Enable> CONFigure:SPECTrum:SWITching[:GMSK]:LIMit:LINE:UPPEr<nr> CONFigure:SPECTrum:SWITching:EPSK:LIMit:LINE:UPPEr<nr> <Power level>, <Limit at 0.4 MHz>, <Limit at 0.6 MHz>, <Limit at 1.2 MHz>, <Limit at 1.8 MHz>, <Enable>					
Numeric Suffix	Value range	Description of parameters	Def. value		
<nr>	1 to 10	Power level no.			
Parameters	Value range	Description of parameters	Def. value		
<Enable>	ON OFF	Defined section on/off	ON		
<Power level>, <Limit at 0.4 MHz>, <Limit at 0.6 MHz>, <Limit at 1.2 MHz>, <Limit at 1.8 MHz>, <Enable>	-100 dBm to 30 dBm	MS output power for power level <nr> Limit for the measurement point at: 0.4 MHz from carrier frequency 0.6 MHz from carrier frequency 1.2 MHz from carrier frequency 1.8 MHz from carrier frequency	See below See below		
	-100 dBm to 30 dBm		See below		
	-100 dBm to 30 dBm		See below		
	-100 dBm to 30 dBm		See below		
	ON OFF DEFault	Enable or disable limit check for power level <nr>	See below		
Description of command			FW vers.		
These commands activate and define limit lines for the spectrum due to switching measurement. The value range for the individual power levels <nr> at the same frequency applies with the additional conditions $\langle \text{PowerLevel}(n+1) \rangle \leq \langle \text{PowerLevel}(n) \rangle - 1 \text{ dB}$ and $ \langle \text{PowerLevel}(n+1) \rangle - \langle \text{PowerLevel}(n) \rangle \leq 100 \text{ dB}$. The limits are defined depending on 10 definable MS output power levels numbered by the numeric suffix <nr> and four fixed frequency offsets from the carrier. The first parameter defines the power of level no. <nr>. For the 1 st and the 10 th level, limit values are entered: The levels then comprise all powers greater than or less than the specified limits. To switch one measurement point over all power levels on or off, please use the command CONFigure:SPECTrum:SWITching:LIMit:LINE:ENABLE[:UPPEr] To switch on or off the limit check altogether please use the command CONFigure:SPECTrum:SWITching:LIMit:LINE:MODE[:UPPEr] <Mode>			V1.20		
Default values for GSM400/850/900 (both modulation schemes):					
Level <nr>	Level / [dBm]	0.4 MHz / [dBc]	0.6 MHz / [dBc]	1.2 MHz / [dBc]	1.8 MHz / [dBc]
1	≥ 39.0	-13.0	-21.0	-21.0	-24.0
2	37.0	-15.0	-21.0	-21.0	-24.0
3	35.0	-17.0	-21.0	-21.0	-24.0
4	33.0	-19.0	-21.0	-21.0	-24.0
5	31.0	-21.0	-23.0	-23.0	-26.0
6	29.0	-23.0	-25.0	-25.0	-28.0
7	27.0	-23.0	-26.0	-27.0	-30.0
8	25.0	-23.0	-26.0	-29.0	-32.0
9	23.0	-23.0	-26.0	-31.0	-34.0
10	≤ 21.0	-23.0	-26.0	-32.0	-36.0

Default values for GSM1800 (both modulation schemes):

Level <nr>	Level / [dBm]	0.4 MHz / [dBc]	0.6 MHz / [dBc]	1.2 MHz / [dBc]	1.8 MHz / [dBc]
1	≥ 36.0	-16.0	-21.0	-21.0	-24.0
2	34.0	-18.0	-21.0	-21.0	-24.0
3	32.0	-20.0	-22.0	-22.0	-25.0
4	30.0	-22.0	-24.0	-24.0	-27.0
5	28.0	-23.0	-25.0	-26.0	-29.0
6	26.0	-23.0	-26.0	-28.0	-31.0
7	24.0	-23.0	-26.0	-30.0	-33.0
8	22.0	-23.0	-26.0	-31.0	-35.0
9	≤ 20.0	-23.0	-26.0	-32.0	-36.0

Default values for GSM1900 (both modulation schemes):

Level <nr>	Level / [dBm]	0.4 MHz / [dBc]	0.6 MHz / [dBc]	1.2 MHz / [dBc]	1.8 MHz / [dBc]
1	≥ 33.0	-19.0	-22.0	-22.0	-25.0
2	32.0	-20.0	-22.0	-22.0	-25.0
3	30.0	-22.0	-24.0	-24.0	-27.0
4	28.0	-23.0	-25.0	-26.0	-29.0
5	26.0	-23.0	-26.0	-28.0	-31.0
6	24.0	-23.0	-26.0	-30.0	-33.0
7	22.0	-23.0	-26.0	-31.0	-35.0
8	≤ 20.0	-23.0	-26.0	-32.0	-36.0

CONFigure:SPECTrum:SWITching[:GMSK]:LIMit:LINE:MODE[:UPPer] <Mode>
CONFigure:SPECTrum:SWITching:EPSK:LIMit:LINE:MODE[:UPPer] <Mode> Limit Check on/off

<Mode>	Description of parameters	Def. value	Def. unit	FW vers.
ON	Switch on limit lines	ON	-	V1.20
OFF	Switch off limit lines			

Description of command

This command switches all limits for the spectrum due to switching measurement on or off.

CONFigure:SPECTrum:SWITching[:GMSK]:LIMit:LINE:DEFAult <Enable>
CONFigure:SPECTrum:SWITching:EPSK:LIMit:LINE:DEFAult <Enable> Default Settings

<Enable>	Description of parameters	Def. value	Def. unit	FW vers.
ON	All the parameters of the subsystem are set to default values	ON	-	V2.00
OFF	At least one parameter of the subsystem differs from its default value			

Description of command

If used as a setting command with *ON*, this command sets all the parameters of the subsystem to their default values (*OFF* causes an error message). In the query format, the command returns *ON* if all the parameters of the subsystem correspond to their default values, otherwise it returns *OFF*.

Subsystem SUBarrays:SPECTrum:SWITching

The subsystem *SUBarrays:SPECTrum:SWITching* defines the measurement range and the type of output values.

CONFigure:SUBarrays:SPECTrum:SWITching[:FDOmain]		Definition of Subarrays: Frequency Domain		
<Mode>,<Start>,<Samples>{,<Start>,<Samples>}				
<Mode>	Description of parameters	Def. value	Def. unit	
ALL 	Return all measurement values	ALL	–	
ARITHmetical 	Return arithm. mean value in every range			
MINimum 	Return minimum value in every range			
MAXimum 	Return maximum value in every range			
IVAL,	Return single interpolated value at <Start>			
<Start>	Description of parameters	Def. value	Def. unit	
–1.8 MHz to 1.8 MHz,	Start frequency in current range	–1.8	MHz	
<Samples>	Description of parameters	Def. value	Def. unit	FW vers.
1 to 9	Number of samples in current range	9	–	V2.00
Description of command				
<p>This command configures the <code>READ:SUBarrays...</code>, <code>FETCh:SUBarrays...</code>, and <code>SAM- Ple:SUBarrays:SPECTrum:SWITching[:FDOmain]</code> commands. It restricts the measurement to up to 32 subranges where either all measurement results (the number of which is given by the second numerical parameter) or a single statistical value is returned. The subranges are defined by the start time and the number of test points which are located at fixed frequencies (see command <code>CONFig- ure:SPECTrum:SWITching...:LIMit:LINE<nr></code>). If <Start> does not coincide with a test point then the range will start at the next test point that is larger than <Start>.</p> <p>For <Mode> = IVAL, the <Samples> parameter is ignored and the CMU returns a single measurement value corresponding to the abscissa value <Start>. If <Start> is located between two test points with valid results then the result is calculated from the results at these two adjacent test points by linear interpolation.</p> <p>The subranges may overlap but must be within the total range of the spectrum due to switching measurement. Test points outside this range are not measured (result <i>NAN</i>) and do not enter into the ARITHmetical, MINimum and MAXimum values. By default, only one range corresponding to the total measurement range is used and all measurement values are returned.</p>				

CONFigure:SUBarrays:SPECTrum:SWITching:TDOMain		Definition of Subarrays: Time Domain		
<Mode>,<Start>,<Samples>{,<Start>,<Samples>}				
<Mode>	Description of parameters	Def. value	Def. unit	
ALL	Return all measurement values	ALL	–	
ARITHmetical	Return arithm. mean value in every range			
MINimum	Return minimum value in every range			
MAXimum	Return maximum value in every range			
IVAL,	Return single interpolated value at <Start>			
<Start>	Description of parameters	Def. value	Def. unit	
–30 to 175	First symbol point in current range, Slot Count = 1	–30	(syMb)	
–186 to 175	First symbol point in current range, Slot Count = 2	–186	(syMb)	
–186 to 331	First symbol point in current range, Slot Count = 3	–186	(syMb)	
–186 to 587	First symbol point in current range, Slot Count = 4	–186	(syMb)	
–186 to 643	First symbol point in current range, Slot Count = 5	–186	(syMb)	
–186 to 799	First symbol point in current range, Slot Count = 6	–186	(syMb)	
–186 to 955	First symbol point in current range, Slot Count = 7	–186	(syMb)	
–186 to 1111	First symbol point in current range, Slot Count = 8	–186	(syMb)	
<Samples>	Description of parameters	Def. value	Def. unit	FW vers.
1 to 618	Number of samples in current range, Slot Count = 1	618	–	V3.50
1 to 1086	Number of samples in current range, Slot Count = 2	1086	–	
1 to 1554	Number of samples in current range, Slot Count = 3	1554	–	
1 to 2022	Number of samples in current range, Slot Count = 4	2022	–	
1 to 2490	Number of samples in current range, Slot Count = 5	2490	–	
1 to 2958	Number of samples in current range, Slot Count = 6	2958	–	
1 to 3426	Number of samples in current range, Slot Count = 7	3426	–	
1 to 3894	Number of samples in current range, Slot Count = 8	3894	–	
Description of command				
This command configures the READ:SUBarrays. . . , FETCh:SUBarrays. . . , and SAM- Ple:SUBarrays:SPECTrum:SWITching:TDOMain commands. It is analogous to the subarray command for the frequency domain (CONFigure:SUBarrays:SPECTrum:SWITching[:FDMain]). The number of sam- ples and the start value depends on the slot count (CONFigure:SPECTrum:SWITching:NOSlots)				

Measured Values

The commands of the following subsystems determine and return the results of the spectrum due to switching measurement. They correspond to the graphical menu *Spectrum* with its various display elements.

Subsystem SPECTrum:SWITching

The subsystem *SPECTrum:SWITching* measures and returns the *Switching* spectrum and compares it with tolerance values. The subsystem corresponds to the graphical measurement menu *Spectrum*.

		Scalar Results:		
READ[:SCALar]:SPECTrum:SWITching?	Start single shot measurement and return results			
FEtCh[:SCALar]:SPECTrum:SWITching?	Read measurement results (unsynchronized)			
SAMPlE[:SCALar]:SPECTrum:SWITching?	Read measurement results (synchronized)			
Returned values	Value range	Def. value	Def. unit	FW vers.
Reference Power, Matching	-100.0 dBm to +100.0 dBm INV MATC NMAT OUT NTR NRAM OFLW UFLW NTSC OFF	NAN INV	dBm -	V1.20
Description of command				
These commands are always queries. They start a measurement and return the results. For more details refer to the description of measurement control in chapter 5 of the CMU200 operating manual.				
The reference power is the absolute carrier power measured as specified in the GSM standard. The following messages may be output for the value <i>Matching</i> :				
INV	<i>invalid</i>			
MATC	<i>matching</i>			
NMAT	<i>not matching</i>			
OUT	<i>out of range</i>			
NTR	<i>no trigger</i>			
NRAM	<i>not ramping (burst not found)</i>			
OFLW	<i>overflow</i>			
UFLW	<i>underflow</i>			
NTSC	<i>no training sequence code</i>			
OFF	<i>off</i>			

		Spectrum Results: Frequency Domain, Fixed Meas. Points		
READ:ARRay:SPECTrum:SWITching[:FDOMain]?	Start single shot measurement and return results			
FEtCh:ARRay:SPECTrum:SWITching[:FDOMain]?	Read measurement results (unsynchronized)			
SAMPlE:ARRay:SPECTrum:SWITching[:FDOMain]?	Read results (synchronized)			
Returned values	Description of parameters	Def. value	Def. unit	FW vers.
-100.0 dBm to + 100.0 dBm, ..., -100.0 dBm to + 100.0 dBm, ..., -100.0 dBm to + 100.0 dBm	Power at measurement point 1 (-1.8 MHz) ... Power at measurement point 5 (0 MHz) ... Power at measurement point 9 (+1.8 MHz)	NAN ... NAN ... NAN	dBm ... dBm ... dBm	V1.20
Description of command				
These commands are always queries. They return the off-carrier power due to switching at all enabled fixed measurement points (<i>CONFigure:SPECTrum:SWITching:CONTRol:MPOint<nr>:ENABle</i>). NAN is returned at the disabled points.				

Spectrum Results: Frequency Domain, Variable Meas. Points				
READ:ARRAY:SPECTrum:SWITching[:FDOmain]:VMPoint?		Start single shot measurement and return results		
FETCH:ARRAY:SPECTrum:SWITching[:FDOmain]:VMPoint?		Read measurement results (unsynchronized)		
SAMPLE:ARRAY:SPECTrum:SWITching[:FDOmain]:VMPoint?		Read results (synchronized)		
Returned values	Description of parameters	Def. value	Def. unit	FW vers.
-100.0 dBm to + 20.0 dBm,	Power at meas. point 4 (neg. freq. offset)	NAN	dBm	V3.50
...,	
-100.0 dBm to + 20.0 dBm,	Power at meas. point 1 (neg. freq. offset)	NAN	dBm	
-100.0 dBm to + 20.0 dBm,	Power at meas. point 1 (pos. freq. offset)	NAN	dBm	
...,	
-100.0 dBm to + 20.0 dBm	Power at meas. point 4 (pos. freq. offset)	NAN	dBm	
Description of command				
These commands are always queries. They return the off-carrier power due to switching at all enabled variable measurement points (CONFIGure:SPECTrum:SWITching:CONTrol:VMPoint<nr>). NAN is returned at the disabled points.				

Subarray Results: Frequency Domain				
READ:SUBarrays:SPECTrum:SWITching[:FDOmain]?		Start meas. and return results		⇒ RUN
FETCH:SUBarrays:SPECTrum:SWITching[:FDOmain]?		Read meas. results (unsynchronized)		⇒ RUN
SAMPLE:SUBarrays:SPECTrum:SWITching[:FDOmain]?		Read results (synchronized)		⇒ RUN
Ret. values per subrange	Description of parameters	Def. value	Def. unit	FW vers.
-100.0 dBm to + 100.0 dBm,	Power[1], 1 st value for power	NAN	dBm	V2.00
...,	
-100.0 dBm to + 100.0 dBm	Power[x], xth value for power	NAN	dBm	
Description of command				
These commands are always queries. They output the off-carrier power due to switching in the subranges defined by means of the CONFIGure:SUBarrays:SPECTrum:SWITching[:FDOmain] command. In the default setting of the configuration command the READ:SUBarrays..., FETCH:SUBarrays..., and SAmPle:SUBarrays... command group is equivalent to the READ:ARRAY..., FETCH:ARRAY..., and SAmPle:ARRAY... command group described above.				
The CONFIGure:SUBarrays:SPECTrum:SWITching[:FDOmain] command defines a maximum of 32 subranges. If one of the statistical modes (ARITHmetical, MINimum, MAXimum) is set, only one value is returned per subrange.				

CALCulate:ARRAY:SPECTrum:SWITching[:FDOmain]:AREA:LIMit:MATCHing?		Limit Matching		
Returned value	Description of parameters	Def. value	Def. unit	FW vers.
32 bit value	Indicator for limit matching at fixed meas. points (9 least significant bits)	NAN	-	V3.50
Description of command				
This command is always a query. A bit in the output value is set if the corresponding fixed measurement point exceeds the limit.				

Returned values		Description of parameters	Def. value	Def. unit	FW vers.
-100.0 dBm to +100.0 dBm,		Power at measurement point 1	NAN	dBm	V3.50
...,		
-100.0 dBm to +100.0 dBm		Power at measurement point n	NAN	dBm	

Description of command

These commands are always queries. They return the off-carrier power vs. time at a definite offset frequency from the carrier (CONFigure:SPECTrum:SWITching:TDFSelect). The number of results depends on the slot count (CONFigure:SPECTrum:SWITching:NOSlots):

Slot count	1	2	3	4	5	6	7	8
n	618	1086	1554	2022	2490	2958	3426	3894

The position of the measurement points is as reported in the CONFigure:SUBarrays:SPECTrum:SWITching:TDOMain command description.

Ret. values per subrange		Description of parameters	Def. value	Def. unit	FW vers.
-100.0 dBm to + 20.0 dBm,		Power[1], 1 st value for power	NAN	dBm	V3.50
...,		
-100.0 dBm to + 20.0 dBm		Power[x], xth value for power	NAN	dBm	

Description of command

These commands are always queries. They output the off-carrier power due to modulation in the subranges defined by means of the CONFigure:SUBarrays:SPECTrum:SWITching:TDOMain command. In the default setting of the configuration command the READ:SUBarrays..., FETCh:SUBarrays..., and SAMPlE:SUBarrays... command group is equivalent to the READ:ARRay..., FETCh:ARRay..., and SAMPlE:ARRay... command group described above.

The CONFigure:SUBarrays:SPECTrum:SWITching:TDOMain command defines a maximum of 32 subranges. If one of the statistical modes (ARIThmetical, MINimum, MAXimum) is set, only one value is returned per subrange.

SPECtrum:MSWitching

The subsystem *SPECtrum:MSWitching* measures the spectrum due to modulation and the spectrum due to switching in a single measurement shot. The subsystem corresponds to the measurement menu *Spectrum*, application *Modulation & Switching*, and the associated configuration popups.

Note: *The combined MSWitching measurement takes longer than a single MODulation or SWITching measurement, however, all results can be retrieved with a single command.*

Control of Measurement – Subsystem SPECtrum:MSWitching

The subsystem *SPECtrum:MSWitching* controls the spectrum due to modulation and switching measurement.

INITiate:SPECtrum:MSWitching	Start new measurement	⇒	<i>RUN</i>
ABORt:SPECtrum:MSWitching	Abort running measurement and switch off	⇒	<i>OFF</i>
STOP:SPECtrum:MSWitching	Stop measurement after current stat. cycle	⇒	<i>STOP</i>
CONTinue:SPECtrum:MSWitching	Next measurement step (only <i>stepping mode</i>)	⇒	<i>RUN</i>
Description of command			FW vers.
These commands have no query form. They start or stop the measurement, setting it to the status indicated in the top right column.			V3.50

CONFigure:SPECtrum:MSWitching:EREPorting <Mode>		Event Reporting		
<Mode>	Description of parameters	Def. value	Def. unit	FW vers.
SRQ 	Service request	OFF	–	V3.50
SOPC 	Single operation complete			
SRSQ 	SRQ and SOPC			
OFF	No reporting			
Description of command				
This command defines the events generated when the measurement is terminated or stopped (<i>event reporting</i> , see chapter 5 of CMU manual).				

FETCh:SPECTrum:MSWitching:STATus?		Measurement Status		
Returned values	Description of parameters	Def. value	Def. unit	FW vers.
OFF 	Measurement in the <i>OFF</i> state (*RST or ABORT)	OFF	–	V1.20
RUN 	Running (after INITiate, CONTinue or READ)			
STOP 	Stopped (STOP)			
ERR 	<i>OFF</i> (could not be started)			
STEP 	Stepping mode (<stepmode>=STEP)			
RDY,	Stopped according to repetition mode and stop condition			
1 to 10000 	Counter for current statistics cycle			
NONE,	No counting mode set	NONE	–	
1 to 1000 	Counter for current evaluation period within a cycle			
NONE	Statistic count set to off	NONE	–	
Description of command				
This command is always a query. It returns the status of the measurement (see chapters 3 and 5 of CMU manual).				

Subsystem SPECTrum:MSWitching:CONTROL

The subsystem *SPECTrum:MSWitching:CONTROL* defines the repetition mode, statistic count, and stop condition of the measurement. These settings are provided in the *Control* and *Meas X* tabs of the popup menu *Spectrum Configuration*.

CONFigure:SPECTrum:MSWitching:CONTROL <Mode>,<Statistics>		Scope of Measurement		
<Mode>	Description of parameters	Def. value	Def. unit	
SCALar 	Only scalar measured values	ARRay	–	
ARRay	Scalar measured values and arrays			
<Statistics>	Description of parameters	Def. value	Def. unit	FW vers.
1 to 1000 	Number of bursts per statistics cycle	10	–	V3.50
NONE	Statistics off (equivalent to 1)			
Description of command				
This command restricts the type of measured values and determines the number of bursts within a statistics cycle.				

CONFigure:SPECTrum:MSWitching:CONTRol:REPetition		Test Cycles		
<Repetition>, <StopCondition>, <Stepmode>				
<Repetition>	Description of parameters	Def. value	Def. unit	FW vers.
CONTinuous	Continuous measurement (until STOP or ABORT)	SING	–	
SINGleshot	Single shot measurement (until Status = RDY)			
1 to 10000	Multiple measurement (counting, until Status = STEP RDY)			
<StopCondition>	Description of parameters	Def. value	Def. unit	
SONerror	Stop measurement in case of error (stop on error)	NONE	–	
NONE	Continue measurement even in case of error			
<Stepmode>	Description of parameters	Def. value	Def. unit	FW vers.
STEP	Interrupt measurement after each statistics cycle	NONE	–	V3.50
NONE	Continue measurement according to its rep. mode			
Description of command				
This command defines the number of test cycles, the stepping mode and, if required, a stop condition for the measurement.				
Note: In the case of READ commands (READ: ...), the <Repetition> parameter has no effect; the measurement is always stopped after a single shot				

Test Configuration

The commands of the following subsystems configure the spectrum due to switching. They correspond to the *Switching* sections in the *Spectrum Configuration* menu.

Subsystem SPECTrum:MSWitching:LIMit:LINE

The subsystem *SPECTrum:MSWitching:LIMit:LINE* defines the limit lines, i.e. the tolerance values for the spectrum due to switching measurement. The subsystem corresponds to the *Switching* sections in the tab *Limit Lines* in the popup menu *Spectrum Configuration*.

[SENSe:]SPECTrum:MSWitching:LIMit:LINE:USED?		Current Limit Template		
Response	Description of parameters	Def. value	Def. unit	FW vers.
GMSK	Use GMSK template	–	–	V3.50
EPsk	Use EPsk template			
Description of command				
These commands is always a query and returns the current limit line template. The template can be selected using CONFigure:SPECTrum:LIMit:LINE:SElect.				

Measured Values

The commands of the following subsystems determine and return the results of the spectrum due to switching measurement. They correspond to the graphical menu *Spectrum* with its various display elements.

Subsystem SPECTrum:MSWitching

The subsystem *SPECTrum:MSWitching* measures and returns the *Switching* spectrum and compares it with tolerance values. The subsystem corresponds to the graphical measurement menu *Spectrum*.

		Scalar Results:		
READ[:SCALar]:SPECTrum:MSWitching?	Start single shot measurement and return results			
FETCh[:SCALar]:SPECTrum:MSWitching?	Read measurement results (unsynchronized)			
SAMPlE[:SCALar]:SPECTrum:MSWitching?	Read measurement results (synchronized)			
Returned values	Value range	Def. value	Def. unit	FW vers.
Reference Power (Modulation), Matching (Modulation),	-100.0 dBm to +100.0 dBm INV MATC NMAT OUT NTR NRAM OFLW UFLW NTSC OFF	NAN INV	dBm -	V3.50
Reference Power (Switching), Matching (Switching)	-100.0 dBm to +100.0 dBm INV MATC NMAT OUT NTR NRAM OFLW UFLW NTSC OFF	NAN INV	dBm -	
Description of command				
These commands are always queries. They start a measurement and return the results. For more details refer to the description of measurement control in chapter 5 of the CMU200 operating manual.				
The reference powers are absolute carrier powers measured according to GSM conformance test specification for the spectrum due to modulation and spectrum due to switching (see Chapter 4). The following messages may be output for the values <i>Matching</i> :				
INV	<i>invalid</i>			
MATC	<i>matching</i>			
NMAT	<i>not matching</i>			
OUT	<i>out of range</i>			
NTR	<i>no trigger</i>			
NRAM	<i>not ramping (burst not found)</i>			
OFLW	<i>overflow</i>			
UFLW	<i>underflow</i>			
NTSC	<i>no training sequence code</i>			
OFF	<i>off</i>			

		Spectrum Results: Frequency Domain, Fixed Meas. Points		
READ:ARRay:SPECTrum:MSWitching?	Start single shot measurement and return results			
FETCh:ARRay:SPECTrum:MSWitching?	Read measurement results (unsynchronized)			
SAMPlE:ARRay:SPECTrum:MSWitching?	Read results (synchronized)			
Returned values	Description of parameters	Def. value	Def. unit	FW vers.
-100.0 dB to + 20.0 dB,	1 st modulation result (at -1.8 MHz)	NAN	dB	V3.50
...,	
-100.0 dB to + 20.0 dB,	23 rd modulation result (at +1.8 MHz)	NAN	dB	
-100.0 dBm to + 100.0 dBm,	1 st switching result (at -1.8 MHz)	NAN	dBm	
...,	
-100.0 dBm to + 100.0 dBm	9 th switching result (at +1.8 MHz)	NAN	dBm	
Description of command				
These commands are always queries. They return the off-carrier power due to modulation and switching at all enabled fixed measurement points (CONFigure:SPECTrum:<Application>:CONTrol:MPoint<nr>: EN-ABLE). NAN is returned at the disabled points.				

		Spectrum Results: Frequency Domain, Variable Meas. Points		
READ:ARRay:SPECTrum:MSWitching:VMPoint?		Start single shot measurement and return results		
FETCh:ARRay:SPECTrum:MSWitching:VMPoint?		Read measurement results (unsynchronized)		
SAMPlE:ARRay:SPECTrum:MSWitching:VMPoint?		Read results (synchronized)		
Returned values	Description of parameters	Def. value	Def. unit	FW vers.
-100.0 dB to + 20.0 dB,	1 st modulation result	NAN	dBm	V3.50
...,	
-100.0 dB to + 20.0 dB,	8 th modulation result	NAN	dBm	
-100.0 dBm to + 100.0 dBm,	1 st switching result	NAN	dBm	
...,		
-100.0 dBm to + 100.0 dBm	8 th switching result	NAN	dBm	
Description of command				
These commands are always queries. They return the off-carrier power due to modulation and switching at all enabled variable measurement points (CONFigure:SPECTrum:<Application>:CONTrol:VMPoint<nr>). NAN is returned at the disabled points.				

		Limit Matching		
CALCulate:ARRay:SPECTrum:MSWitching:AREA:LIMit:MATCHing?				
Returned value	Description of parameters	Def. value	Def. unit	FW vers.
32 bit value,	Indicator for modulation limit matching at fixed meas. Points (23 least significant bits)	NAN, NAN	-	V3.50
32 bit value	Indicator for switching limit matching at fixed meas. points (9 least significant bits)			
Description of command				
This command is always a query. A bit in the output values is set if the corresponding fixed measurement point exceeds the limit.				

Measurement Groups (Signalling only)

The measurement groups in this section are either provided in *Signalling* mode only or implemented with major differences in the two test modes.

POWER[:NORMAl]

The subsystem *Power[:NORMAl]* measures the MS transmitter output power versus time for normal bursts. The subsystem corresponds to the measurement menu *Power*, application *P/t Normal...*, and the associated popup menu *Power Configuration*.

Note1: Measurements and signalling states

To perform any kind of measurement and obtain a meaningful result, an appropriate test setup is required (see application examples in chapter 2 of this manual). Consequently, for the measurements reported in the following sections, the Call Established (CEST) signalling state must be reached before any of the commands retrieving test results (READ...?, FETCh...?, SAMPlE...?, or CALCuLATE...LIMit?) can be used. Test configurations, however, can be defined any time.

Note2: GMSK and 8PSK modulation

The keywords [:GMSK] and :EPSK in the remote control commands denote GMSK and 8PSK modulation, respectively. The :EPSK commands in Signalling measurements are included in firmware versions V3.05 and higher. The firmware version numbers quoted in the command tables refer to GMSK modulation.

Control of Measurement – Subsystem Power[:NORMAl]

The subsystem *Power[:NORMAl]* controls the normal burst power measurement.

INITiate:POWER[:NORMAl][:GMSK]		
INITiate:POWER[:NORMAl]:EPSK	Start new measurement	⇒ RUN
ABORt:POWER[:NORMAl][:GMSK]		
ABORt:POWER[:NORMAl]:EPSK	Abort running measurement and switch off	⇒ OFF
STOP:POWER[:NORMAl][:GMSK]		
STOP:POWER[:NORMAl]:EPSK	Stop measurement after current stat. cycle	⇒ STOP
CONTInue:POWER[:NORMAl][:GMSK]		
CONTInue:POWER[:NORMAl]:EPSK	Next measurement step (only stepping mode)	⇒ RUN
Description of command		FW vers.
These commands have no query form. They start or stop the measurement, setting it to the status indicated in the top right column.		V1.15

CONFigure:POWER[:NORMAl][:GMSK]:EREPorting <Mode>		Event Reporting		
CONFigure:POWER[:NORMAl]:EPSK:EREPorting <Mode>				
<Mode>	Description of parameters	Def. value	Def. unit	FW vers.
SRQ	Service request	OFF	–	V1.15
SOPC	Single operation complete			
SRSQ	SRQ and SOPC			
OFF	No reporting			
Description of command				
This command defines the events generated when the measurement is terminated or stopped (<i>event reporting</i> , see chapter 5 of CMU manual).				

FETCh:POWER[:NORMAl][:GMSK]:STATus?		Measurement Status		
FETCh:POWER[:NORMAl]:EPSK:STATus?				
Returned values	Description of parameters	Def. value	Def. unit	FW vers.
OFF	Measurement in the OFF state (*RST or ABORT)	OFF	–	V1.15
RUN	Running (after INITiate, CONTinue or READ)			
STOP	Stopped (STOP)			
ERR	OFF (could not be started)			
STEP	Stepping mode (<stepmode>=STEP)			
RDY,	Stopped according to repetition mode and stop condition			
1 to 10000	Counter for current statistics cycle			
NONE,	No counting mode set	NONE	–	
1 to 1000	Counter for current evaluation period within a cycle			
NONE	Statistic count set to off	NONE	–	
Description of command				
This command is always a query. It returns the status of the measurement (see chapters 3 and 5 of CMU manual).				

CONFigure:POWER[:NORMAl][:GMSK]:TOFFset <Offset>		Bit Offset		
CONFigure:POWER[:NORMAl]:EPSK:TOFFset <Offset>				
<Offset>	Description of parameters	Def. value	Def. unit	FW vers.
–4.00 to +4.00	Number of bits	0	bit	V2.15
Description of command				
This command defines an offset time in ¼ bit units by which the burst is shifted relative to the time axis and the tolerance template.				

CONFigure:POWER[:NORMAl][:GMSK]:FILTer <Filter>		Filter		
CONFigure:POWER[:NORMAl]:EPSK:FILTer <Filter>				
<Mode>	Description of parameters	Def. value	Def. unit	FW vers.
G500	500 kHz Gaussian filter	G500 for GMSK modulation	–	V3.05
B600	600 kHz bandpass filter	B600 for 8PSK modulation		
Description of command				
This command selects the measurement filter for the P/t measurement. The default filter setting differs for the two modulation schemes.				

Test Configuration

The commands of the following subsystems configure the power measurement. They correspond to the sections in the *Power Configuration* popup menu that are related to the normal burst power measurement. For a detailed explanation of the power tolerance template defined in the GSM standard see chapter 4.

Subsystem POWER[:NORMAl]:CONTrol

The subsystem *POWER[:NORMAl]:CONTrol* defines the repetition mode, statistic count, and stop condition of the measurement. These settings are provided in the *Control* tab of the popup menu *Power Configuration*.

CONFigure:POWER[:NORMAl][:GMSK]:CONTrol <Mode>, <Statistics>		Scope of Measurement		
CONFigure:POWER[:NORMAl]:EPSK:CONTrol <Mode>, <Statistics>				
<Mode>	Description of parameters	Def. value	Def. unit	
SCALar ARRAy,	Scalar values only (incl. ramp matching) Scalar measured values and arrays	ARRAy	–	
<Statistics>	Description of parameters	Def. value	Def. unit	FW vers.
1 to 1000 OFF	Number of bursts per statistics cycle Statistics off (equivalent to 1)	100	–	V1.15
Description of command				
This command restricts the type of measured values to accelerate the measurement and determines the number of bursts within a statistics cycle.				

CONFigure:POWER[:NORMAl][:GMSK]:CONTrol:REPetition		Test cycles		
CONFigure:POWER[:NORMAl]:EPSK:CONTrol:REPetition <Repetition>,<StopCond>,<Stepmode>				
<Repetition>	Description of parameters	Def. value	Def. unit	
CONTInuous SINGleshot 1 to 10000	Continuous measurement (until STOP or ABORT) Single shot measurement (until Status = RDY) Multiple measurement (counting, until Status = STEP RDY)	SING	–	
<StopCondition>	Description of parameters	Def. value	Def. unit	
SONerror NONE	Stop measurement in case of error (stop on error) Continue measurement even in case of error	NONE	–	
<Stepmode>	Description of parameters	Def. value	Def. unit	FW vers.
STEP NONE	Interrupt measurement after each statistics cycle Continue measurement according to its rep. mode	NONE	–	V1.15
Description of command				
This command determines the number of statistics cycles, the stop condition and the stepping mode for the measurement.				
Note: In the case of READ commands (READ:...), the <Repetition> parameter has no effect; the measurement is always stopped after a single shot				

DISPlay:POWer[:NORMa]][:GMSK]:CONTRol:GRID <Enable>				Grid
DISPlay:POWer[:NORMa]][:EPsk]:CONTRol:GRID <Enable>				
<Enable>	Description of parameters	Def. value	Def. unit	FW vers.
ON 	Switch on grid lines	ON	–	V1.15
OFF	Switch off grid lines			
Description of command				
This command switches the grid lines in the test diagrams on or off.				

CONFIgure:POWer[:NORMa]][:EPsk]:CONTRol:RPMoDe <Mode>				Ref. Power Mode
<Mode>	Description of parameters	Def. value	Def. unit	FW vers.
CURRent 	Ref. Power calculated from current burst	CURR	–	V2.15
AVERAge 	Ref. Power calculated from average curve			
DCOMpens	Data compensated/corrected reference power			
Description of command				
This command determines how the reference power (0-dB line in the <i>P/t Norm. 8PSK</i> test diagram) for 8PSK-modulated signals is calculated.				

CONFIgure:POWer[:NORMa]][:GMSK]:CONTRol:DEFault <Enable>				Default Settings
CONFIgure:POWer[:NORMa]][:EPsk]:CONTRol:DEFault <Enable>				
<Enable>	Description of parameters	Def. value	Def. unit	FW vers.
ON 	The parameters are set to their default values	ON	–	V2.00
OFF	Some or all parameters are not set to default			
Description of command				
If used as a setting command with the parameter <i>ON</i> this command sets all parameters of the subsystem to their default values (the setting <i>OFF</i> causes an error message).				
If used as a query the command returns whether all parameters are set to their default values (<i>ON</i>) or not (<i>OFF</i>).				

The default settings for 8MSK modulation (EDGE channels, keyword :EPsk) are given in the table below:

Suffix	for Enable		for Table		Start rel.Level	Stop rel.Level	Start abs.Level	Stop abs.Level	Visibility
	Enable	Start Time	Stop Time	Start Time					
1	ON	-10.0 symb	-7 ¼ symb	-59.0 ¹ dB	-59.0 ¹ dB	-36.0 ² dBm	-36.0 ² dBm	ON	
2	ON	-7 ¼ symb	-4 ½ symb	-30.0 dB	-30.0 dB	-17.0 ³ dBm	-17.0 ³ dBm	ON	
3	ON	-4 ½ symb	-2 ¼ symb	-6.0 dB	-6.0 dB	OFF	OFF	ON	
4	ON	-2 ¼ symb	+½ symb	+4.0 dB	+4.0 dB	OFF	OFF	ON	
5	ON	½ symb	1 ½ symb	+2.4 dB	+2.4 dB	OFF	OFF	ON	
6	ON	1 ½ symb	146 ½ symb	+4.0 dB	+4.0 dB	OFF	OFF	ON	
7	ON	146 ½ symb	147 ½ symb	+2.4 dB	+2.4 dB	OFF	OFF	ON	
8	ON	147 ½ symb	150 ¼ symb	+4.0 dB	+4.0 dB	OFF	OFF	ON	
9	ON	150 ¼ symb	152 ½ symb	-6.0 dB	-6.0 dB	OFF	OFF	ON	
10	ON	152 ½ symb	155 ¼ symb	-30.0 dB	-30.0 dB	-17.0 ³ dBm	-17.0 ³ dBm	ON	
11	ON	155 ¼ symb	156 ¾ symb	-59.0 ¹ dB	-59.0 ¹ dB	-36.0 ² dBm	-36.0 ² dBm	ON	
12	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	
...									
16	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	

CONFigure:POWER[:NORMa]J[:GMSK]:LIMit:LINE:LOWer<nr>[:STATic]:ENABle <Enable>
 CONFigure:POWER[:NORMa]J:EPsk:LIMit:LINE:LOWer<nr>[:STATic]:ENABle <Enable>

CONFigure:POWER[:NORMa]J[:GMSK]:LIMit:LINE:LOWer<nr>[:STATic]
 CONFigure:POWER[:NORMa]J:EPsk:LIMit:LINE:LOWer<nr>[:STATic] Lower Limit Line

Parameters for query: <StartTime>, <EndTime>, <StartRelLevel>, <EndRelLevel>,
 <StartAbsLevel>, <EndAbsLevel>, <StartVisibility>, <EndVisibility>

for setting: <StartTime>, <EndTime>, <StartRelLevel>, <EndRelLevel>,
 <StartAbsLevel>, <EndAbsLevel>, <Visibility>

Parameters	Value range	Description of parameters	Def. value
<Enable>	ON OFF	Definition section on/off	See below
<StartTime>, <EndTime>, <StartRelLevel>, <EndRelLevel>, <StartAbsLevel>, <EndAbsLevel>, <Visibility> <StartVisib.> <EndVisib>	-10 bit to +156 ¾ bit OFF, -10 bit to +156 ¾ bit OFF, -100 dB to 20 dB OFF, -100 dB to 20 dB OFF, -90 dBm to 50 dBm OFF, -90 dBm to 50 dBm OFF, ON OFF	Start point of time End point of time Start point of level (relative) End point of level (relative) Start point of level (absolute) End point of level (absolute) Range of limit lines on/off	

Description of command FW vers.

These commands activate and define lower limit lines for normal bursts. The limit lines are defined section by section; the suffix <nr> numbers the different ranges of limit lines. V1.15

Only 1 area is defined in the default setting, another 15 areas can be activated if required. The default settings for GMSK modulation (keyword [:GMSK]) are shown in the table below:

Suffix	for Enable		for Table		Start rel.Level	Stop rel.Level	Start abs.Level	Stop abs.Level	Visibility
	Enable	Start Time	Stop Time	Start Time					
1	ON	-10.0 bit	½ bit	OFF	OFF	OFF	OFF	OFF	
2	ON	½ bit	147 ½ bit	-1.0 dB	-1.0 dB	OFF	OFF	ON	
3	ON	147 ½ bit	156 ¾ bit	OFF	OFF	OFF	OFF	ON	
4	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	
...									
16	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	

The default settings for 8MSK modulation (EDGE channels, keyword :EPsk) are given in the table below:

Suffix	for Enable		for Table		Start rel.Level	Stop rel.Level	Start abs.Level	Stop abs.Level	Visibility
	Start Enable	Stop Time	Start Time	Stop rel.Level					
1	ON	-10.0 symb	½ symb	OFF	OFF	OFF	OFF	OFF	OFF
2	ON	½ symb	1 symb	-2.0 dB	-2.0 dB	OFF	OFF	ON	ON
3	ON	1 symb	1 ½ symb	0.0 dB	0.0 dB	OFF	OFF	ON	ON
4	ON	1 ½ symb	146 ½ symb	-15.0 dB	-15.0 dB	OFF	OFF	ON	ON
5	ON	146 ½ symb	147 symb	0.0 dB	0.0 dB	OFF	OFF	ON	ON
6	ON	147 symb	147 ½ symb	-2.0 dB	-2.0 dB	OFF	OFF	ON	ON
7	ON	147 ½ symb	156 ¾ symb	OFF	OFF	OFF	OFF	OFF	OFF
8	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF
...									
16	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF

CONFigure:POWER[:NORMAl][:GMSK]:LIMit:LINE:UPPer<AreaNr>:DYNamic<RangeNr>:ENABle
 CONFigure:POWER[:NORMAl]:EPsk:LIMit:LINE:UPPer<AreaNr>:DYNamic<RangeNr>:ENABle
 <Enable>

CONFigure:POWER[:NORMAl][:GMSK]:LIMit:LINE:UPPer<AreaNr>:DYNamic<RangeNr>
 CONFigure:POWER[:NORMAl]:EPsk:LIMit:LINE:UPPer<AreaNr>:DYNamic<RangeNr> <fromTPCL>,
 <toTPCL>, <Correction>, <Enable> Dynamic Correction

<fromPCL>	Description of parameters	Def. value	Def. unit	
0 to 31 MAX OFF	First PCL for which area <AreaNr> is changed	See table below	PCL	
<toPCL>	Description of parameters	Def. value	Def. unit	
0 to 31 MAX OFF	Last PCL for which area <AreaNr> is changed.	See table below	PCL	
<Correction>	Description of parameters	Def. value	Def. unit	
-10 dB to +10 dB OFF	Correction value (relative) for the limit line in area <AreaNr> applied for all PCLs between <fromPCL> and <toPCL> (including)	See table below	dB	
<Enable>	Description of parameters	Def. value	Def. unit	FW vers.
ON OFF	Enable or disable dynamic correction in the current limit line area and PCL range	See table below	-	V1.15

Description of command

These command activates and defines dynamic correction of the upper limit line of area <AreaNr> (<AreaNr> = 1 to 16) depending on the PCL range <RangeNr> (<RangeNr> = 1 to 10 for each area). MAX denotes the maximum output power (smallest PCL) of the mobile phone under test.

In the areas no. 3 and 6, the following ranges are defined:

Range	from TPCL	to TPCL	Correction	Enable
1	16	16	+2.0 dB	ON
2	17	17	+4.0 dB	ON
3	18	19	+5.0 dB	ON
4	OFF	OFF	0.0 dB	OFF
5	OFF	OFF	0.0 dB	OFF
6	OFF	OFF	0.0 dB	OFF
7	OFF	OFF	0.0 dB	OFF
8	OFF	OFF	0.0 dB	OFF
9	OFF	OFF	0.0 dB	OFF
10	OFF	OFF	0.0 dB	OFF

In the remaining areas, the dynamic limit line correction is disabled in all ranges.

CONFigure:POWER[:NORMAl][:GMSK]:LIMit:LINE:UPPer<AreaNr>:ALL:DYNamic:ENABLE
CONFigure:POWER[:NORMAl]:EPSK:LIMit:LINE:UPPer<AreaNr>:ALL:DYNamic:ENABLE
 <Enable> Dynamic Correction on/off

<Enable>	Description of parameters	Def. value	Def. unit	FW vers.
ON OFF	Switch dynamic correction on or off	ON	–	V2.00

Description of command

This command switches the dynamic correction of the upper limit area <nr> for all ten PCL ranges on or off.

CONFigure:POWER[:NORMAl][:GMSK]:LIMit:LINE:UPPer:ALL:DYNamic:ENABLE <Enable>
CONFigure:POWER[:NORMAl]:EPSK:LIMit:LINE:UPPer:ALL:DYNamic:ENABLE <Enable>
 Dynamic Correction on/off

<Enable>	Description of parameters	Def. value	Def. unit	FW vers.
ON OFF	Switch dyn. correction for the whole template on or off	ON	–	VV2.00

Description of command

This command switches the dynamic correction of the upper limit line in all areas and for all PCL ranges on or off. The query returns 160 Boolean values corresponding to the limit check in PCL ranges 1 to 10 (inner loop) in each of the areas 1 to 16 (outer loop).

CONFigure:POWER[:NORMAl][:GMSK]:LIMit:LINE:LOWer<AreaNr>:DYNamic<RangeNr>
CONFigure:POWER[:NORMAl]:EPSK:LIMit:LINE:LOWer<AreaNr>:DYNamic<RangeNr>
 <fromTPCL>, <toTPCL>, <Correction>, <Enable> Dynamic Correction

<fromPCL>	Description of parameters	Def. value	Def. unit	
0 to 31 MAX OFF	First PCL for which area <AreaNr> is changed	OFF	PCL	
<toPCL>	Description of parameters	Def. value	Def. unit	
0 to 31 MAX OFF	Last PCL for which area <AreaNr> is changed.	OFF	PCL	
<Correction>	Description of parameters	Def. value	Def. unit	
-10 dB to +10 dB OFF	Correction value (relative) for the limit line in area <AreaNr> applied for all PCLs between <fromPCL> and <toPCL> (including)	OFF	dB	
<Enable>	Description of parameters	Def. value	Def. unit	FW vers.
ON OFF	Enable or disable dynamic correction in the current limit line area and PCL range	OFF	–	VV2.00

Description of command

These command activates and defines dynamic correction of the lower limit line of area <AreaNr> depending on the PCL range <RangeNr>. MAX denotes the maximum output power (smallest PCL) of the mobile phone under test.

By default, the dynamic limit line correction is disabled in all ranges and areas.

CONFigure:POWER[:NORMAl][:GMSK]:LIMit:LINE:LOWer<AreaNr>:ALL:DYNamic:ENABLE				
CONFigure:POWER[:NORMAl]:EPSK:LIMit:LINE:LOWer<AreaNr>:ALL:DYNamic:ENABLE				
<Enable>		Dynamic Correction on/off		
<Enable>	Description of parameters	Def. value	Def. unit	FW vers.
ON OFF	Switch dynamic correction on or off	OFF	–	VV2.00
Description of command				
This command switches the dynamic correction of the lower limit area <nr> for all ten PCL ranges on or off. The query returns 160 Boolean values corresponding to the limit check in PCL ranges 1 to 10 (inner loop) in each of the areas 1 to 16 (outer loop).				

CONFigure:POWER[:NORMAl][:GMSK]:LIMit:LINE:LOWer:ALL:DYNamic:ENABLE <Enable>				
CONFigure:POWER[:NORMAl]:EPSK:LIMit:LINE:LOWer:ALL:DYNamic:ENABLE <Enable>				
<Enable>		Dynamic Correction on/off		
<Enable>	Description of parameters	Def. value	Def. unit	FW vers.
ON OFF	Switch dyn. correction for the whole template on or off	OFF	–	VV2.00
Description of command				
This command switches the dynamic correction of the lower limit line in all areas and for all PCL ranges on or off.				

CONFigure:POWER[:NORMAl][:GMSK]:LIMit:LINE:DEFault <Enable>				
CONFigure:POWER[:NORMAl]:EPSK:LIMit:LINE:DEFault <Enable>				
<Enable>		Default Settings		
<Enable>	Description of parameters	Def. value	Def. unit	FW vers.
ON OFF	All parameters are set to their default values Some or all parameters differ from the default values	ON	–	V1.15
Description of command				
If used as a setting command with the parameter <i>ON</i> this command sets all parameters of the subsystem to their default values (the setting <i>OFF</i> causes an error message). If used as a query the command returns whether all parameters are set to their default values (<i>ON</i>) or not (<i>OFF</i>).				

Subsystem POWER[:NORMAl]...:LIMit:ABPower

The subsystem *POWER[:NORMAl]...:LIMit:ABPower* defines the limit values for the average normal burst power. The subsystem corresponds to the tab *Limits* in the popup menu *Power Configuration*.

CONFigure:POWER[:NORMAl][:GMSK]:LIMit:ABPower<nr>			Average Burst Power		
<StartPCL>, <StopPCL>, <LowerLimit>, <UpperLimit>					
CONFigure:POWER[:NORMAl][:GMSK]:LIMit:ABPower<nr>:ENABle <Enable>					
Parameter	Value range	Description of parameters	Def. value		
<Enable>	ON OFF	Definition section on/off	see below		
<StartPCL> ,	0 to 31 MAX	Start value for PCL	see below		
<StopPCL> ,	0 to 31 MAX	End value for PCL	see below		
<LowerLimit> ,	-10.0 dB to 0.0 dB	Lower level limit			
<UpperLimit>	0.0 dB to +10.0 dB	Upper level limit			
Description of command			FW vers.		
These commands determine the tolerances for ranges of power control levels (PCLs). <nr> is the number of the group (< nr > ∈ {1,...,10})			V1.15		
The setting <i>MAX</i> is synonymous with the highest PCL of the mobile, depending on its power class.					
4 level ranges are defined in the default setting, another 6 ranges can be activated if required. The default settings for GSM 900/1800/1900 are according to the following table. The default settings for GSM850 and GSM400 are identical to GSM900:					
	For Enable	for table			
<u>Suffix</u>	<u>Enable</u>	<u>StartPCL</u>	<u>StopPCL</u>	<u>LowerLimit</u>	<u>UpperLimit</u>
1	ON	MAX	MAX	-2.0 dB	+2.0 dB
2	ON	0	2/8/8	-2.0/-3/-3 dB	+2.0/3.0/3.0 dB
3	ON	3/9/9	15/13/13	-3.0/-4/-4 dB	+3.0/4.0/4.0 dB
4	ON	16/14/14	31/28/29	-5.0 dB	+5.0 dB
5	OFF/ON/ON	OFF/29/30	OFF/29/31	OFF/-2.0/-2.0 dB	OFF/5.0/2.0 dB
6	OFF/ON/OFF	OFF/30/OFF	OFF/31/OFF	OFF/-3.0 dB/OFF	OFF/2.0 dB/OFF
10	OFF	OFF	OFF	OFF	OFF

Subsystem *SUBarrays:POWER*

The subsystem *SUBarrays:POWER* defines the measurement range and the type of output values.

CONFigure:SUBarrays:POWER[:NORMa][:GMSK]		Definition of Subarrays		
CONFigure:SUBarrays:POWER[:NORMa]:EPSK				
<Mode>,<Start>,<Samples>{,<Start>,<Samples>}				
<Mode>	Description of parameters	Def. value	Def. unit	
ALL	Return all measurement values	ALL	–	
ARITHmetical	Return arithm. mean value in every range			
MINimum	Return minimum value in every range			
MAXimum	Return maximum value in every range			
IVAL,	Return single interpolated value at <Start>			
<Start>	Description of parameters	Def. value	Def. unit	
–10 bit to 156 ¼ bit,	Start time in current range	–10	bit	
<Samples>	Description of parameters	Def. value	Def. unit	FW vers.
1 to 668	Number of samples in current range	668	–	VV2.00
Description of command				
<p>This command configures the <i>READ:SUBarrays:POWER...</i>, <i>FETCh:SUBarrays:POWER...</i>, and <i>SAMPlE:SUBarrays:POWER</i> commands. It restricts the measurement to up to 32 subranges where either all measurement results (the number of which is given by the second numerical parameter) or a single statistical value is returned. The subranges are defined by the start time and the number of test points which are located on a fixed, equidistant grid with a step width of ¼ bit. If <Start> does not coincide with a test point then the range will start at the next test point that is larger than <Start>.</p> <p>For <Mode> = IVAL, the <Samples> parameter is ignored and the CMU returns a single measurement value corresponding to the abscissa value <Start>. If <Start> is located between two test points with valid results then the result is calculated from the results at these two adjacent test points by linear interpolation.</p> <p>The subranges may overlap but must be within the total range of the <i>POWER</i> measurement. Test points outside this range are not measured (result <i>NAN</i>) and do not enter into the ARITHmetical, MINimum and MAXimum values.</p> <p>By default, only one range corresponding to the total measurement range is used and all measurement values are returned.</p>				

Measured Values

The commands of the following subsystems determine and return the results of the normal burst power measurement. They correspond to the graphical menu *Power* with its various display elements.

Subsystem *POWER[:NORMa]*...

The subsystem *POWER[:NORMa]*... contains the commands for measurement and output of the normal burst power and its comparison with tolerance values. The subsystem corresponds to the graphical measurement menu *Power*.

READ[:SCALar]:POWER[:NORMa]J[:GMSK]?	Scalar results:			
READ[:SCALar]:POWER[:NORMa]J[:EPSK]?	Start single shot measurement and return results			
FETCh[:SCALar]:POWER[:NORMa]J[:GMSK]?	Read out measurement results (unsynchronized)			
FETCh[:SCALar]:POWER[:NORMa]J[:EPSK]?	Read out measurement results (synchronized)			
SAMPle[:SCALar]:POWER[:NORMa]J[:GMSK]?	Read out measurement results (synchronized)			
SAMPle[:SCALar]:POWER[:NORMa]J[:EPSK]?	Read out measurement results (synchronized)			
Returned values	Value range	Def. value	Def. unit	FW vers.
AvgBurstPwCurr,	-137 dBm to +53 dBm	NAN	dBm	V1.15
PeakBurstPwCurr,	-137 dBm to +53 dBm	NAN	dBm	
PowerControlLevel,	0 to 32 (dep. on network, see chap. 4)	NAN	PCL	
TimingAdvError,	-100.0 bit to +100.0 bit	NAN	bit	
BurstsOutOfTol,	0.0 % to 100.0 %	NAN	%	
BurstMatching	INV MATC NMAT OUT NTR NRAM OFLW UFLW NTSC OFF	INV	–	
AvgBurstPwAvg	-137 dBm to +53 dBm	NAN	dBm	
Description of command				
These commands are always queries.				
<ul style="list-style-type: none"> - READ starts a single shot measurement and returns the results. - FETCh outputs the results without taking care of the measurement state. - SAMPle waits until the results are valid for the first time (depending on the chosen statistic count) and then outputs the results. 				
For more details refer to the description of measurement control in chapter 5 of the CMU200 operating manual.				
The results are:				
<i>Average burst power (current burst)</i>				
<i>Peak burst power (current burst)</i>				
<i>Power control level</i>				
<i>Timing advance error</i>				
<i>Burst out of tolerance</i>				
<i>Burst template matching</i>				
<i>Average burst power of average trace</i>				
The following messages may be output for the value <i>BurstMatching</i> :				
INV	<i>invalid</i>			
MATC	<i>matching</i>			
NMAT	<i>not matching</i>			
OUT	<i>out of range</i>			
NTR	<i>no trigger</i>			
NRAM	<i>not ramping (burst not found)</i>			
OFLW	<i>overflow</i>			
UFLW	<i>underflow</i>			
NTSC	<i>no training sequence code</i>			
OFF	<i>off</i>			

CALCulate:POWER[:NORMal][:GMSK]:LIMit:MATChing? CALCulate:POWER[:NORMal]:EPsk:LIMit:MATChing?		Limit Matching																																		
Returned values	Value range	Def. value	Def. unit	FW vers.																																
AvgBurstPwCurr,	NMAU NMAL INV OK	INV	—	V1.15																																
PeakBurstPwCurr,	NMAU NMAL INV OK	INV	—																																	
TimingAdvError,	OK (no limit check)	INV	—																																	
BurstMatching	INV MATC NMAT OUT NTR NRAM OFLW UFLW NTSC OFF	INV	—																																	
AvgBurstPwAvg	NMAU NMAL INV OK	INV																																		
Description of command																																				
<p>This command is always a query. It indicates whether and in which way the tolerances for the scalar measured values (see command above) have been exceeded. The following messages may be output for the values <i>AvgBurstPowerCurr</i>, <i>PeakBurstPowerCurr</i> and <i>AvgBurstPowerAvg</i>:</p> <table border="0"> <tr> <td>OK</td> <td>Tolerance value matched</td> <td>OK.</td> </tr> <tr> <td>NMAU</td> <td>Underflow of tolerance value</td> <td><i>not matching, underflow</i></td> </tr> <tr> <td>NMAL</td> <td>Tolerance value exceeded</td> <td><i>not matching, overflow</i></td> </tr> <tr> <td>INV</td> <td>Measured value invalid</td> <td><i>invalid</i></td> </tr> </table> <p>The following messages may be output for the value <i>BurstMatching</i>:</p> <table border="0"> <tr> <td>INV</td> <td><i>invalid</i></td> </tr> <tr> <td>MATC</td> <td><i>matching</i></td> </tr> <tr> <td>NMAT</td> <td><i>not matching</i></td> </tr> <tr> <td>OUT</td> <td><i>out of range</i></td> </tr> <tr> <td>NTR</td> <td><i>no trigger</i></td> </tr> <tr> <td>NRAM</td> <td><i>not ramping (burst not found)</i></td> </tr> <tr> <td>OFLW</td> <td><i>overflow</i></td> </tr> <tr> <td>UFLW</td> <td><i>underflow</i></td> </tr> <tr> <td>NTSC</td> <td><i>no training sequence code</i></td> </tr> <tr> <td>OFF</td> <td><i>off</i></td> </tr> </table>					OK	Tolerance value matched	OK.	NMAU	Underflow of tolerance value	<i>not matching, underflow</i>	NMAL	Tolerance value exceeded	<i>not matching, overflow</i>	INV	Measured value invalid	<i>invalid</i>	INV	<i>invalid</i>	MATC	<i>matching</i>	NMAT	<i>not matching</i>	OUT	<i>out of range</i>	NTR	<i>no trigger</i>	NRAM	<i>not ramping (burst not found)</i>	OFLW	<i>overflow</i>	UFLW	<i>underflow</i>	NTSC	<i>no training sequence code</i>	OFF	<i>off</i>
OK	Tolerance value matched	OK.																																		
NMAU	Underflow of tolerance value	<i>not matching, underflow</i>																																		
NMAL	Tolerance value exceeded	<i>not matching, overflow</i>																																		
INV	Measured value invalid	<i>invalid</i>																																		
INV	<i>invalid</i>																																			
MATC	<i>matching</i>																																			
NMAT	<i>not matching</i>																																			
OUT	<i>out of range</i>																																			
NTR	<i>no trigger</i>																																			
NRAM	<i>not ramping (burst not found)</i>																																			
OFLW	<i>overflow</i>																																			
UFLW	<i>underflow</i>																																			
NTSC	<i>no training sequence code</i>																																			
OFF	<i>off</i>																																			

READ:ARRay:POWer[:NORMa]][:GMSK][:CURRent]? READ:ARRay:POWer[:NORMa]][:EPsk][:CURRent]? Burst Power READ:ARRay:POWer[:NORMa]][:GMSK]:AVERAge? READ:ARRay:POWer[:NORMa]][:EPsk]:AVERAge? READ:ARRay:POWer[:NORMa]][:GMSK]:MAXimum? READ:ARRay:POWer[:NORMa]][:EPsk]:MAXimum? READ:ARRay:POWer[:NORMa]][:GMSK]:MINimum? READ:ARRay:POWer[:NORMa]][:EPsk]:MINimum? Start single shot measurement and return results ⇒ RUN				
FETCH:ARRay:POWer[:NORMa]][:GMSK][:CURRent]? FETCH:ARRay:POWer[:NORMa]][:EPsk][:CURRent]? FETCH:ARRay:POWer[:NORMa]][:GMSK]:AVERAge? FETCH:ARRay:POWer[:NORMa]][:EPsk]:AVERAge? FETCH:ARRay:POWer[:NORMa]][:GMSK]:MAXimum? FETCH:ARRay:POWer[:NORMa]][:EPsk]:MAXimum? FETCH:ARRay:POWer[:NORMa]][:GMSK]:MINimum? FETCH:ARRay:POWer[:NORMa]][:EPsk]:MINimum? Read meas. results (unsynchronized) ⇒ RUN				
SAMPlE:ARRay:POWer[:NORMa]][:GMSK][:CURRent]? SAMPlE:ARRay:POWer[:NORMa]][:EPsk][:CURRent]? SAMPlE:ARRay:POWer[:NORMa]][:GMSK]:AVERAge? SAMPlE:ARRay:POWer[:NORMa]][:EPsk]:AVERAge? SAMPlE:ARRay:POWer[:NORMa]][:GMSK]:MAXimum? SAMPlE:ARRay:POWer[:NORMa]][:EPsk]:MAXimum? SAMPlE:ARRay:POWer[:NORMa]][:GMSK]:MINimum? SAMPlE:ARRay:POWer[:NORMa]][:EPsk]:MINimum? Read results (synchronized) ⇒ RUN				
Returned values	Description of parameters	Def. value	Def. unit	FW vers.
-100.0 dB to + 20.0 dB	BurstPower[1], 1 st value for burst power	NAN	dB	V1.15
...	
-100.0 dB to + 20.0 dB	BurstPower[x], xth value for burst power	NAN	dB	
Description of command				
These commands are always queries. They output the different power values of the bursts in a fixed ¼-bit pattern. The number of measured values is 668, corresponding to a time range of -10 bit to 156 ¾ bit.				

READ:SUBarrays:POWER[:NORMal][:GMSK][:CURRENT]? READ:SUBarrays:POWER[:NORMal]:EPSK[:CURRENT]? READ:SUBarrays:POWER[:NORMal][:GMSK]:AVERAGE? READ:SUBarrays:POWER[:NORMal]:EPSK:AVERAGE? READ:SUBarrays:POWER[:NORMal][:GMSK]:MAXimum? READ:SUBarrays:POWER[:NORMal]:EPSK:MAXimum? READ:SUBarrays:POWER[:NORMal][:GMSK]:MINimum? READ:SUBarrays:POWER[:NORMal]:EPSK:MINimum? Start single shot measurement and return results ⇒ RUN FETCH:SUBarrays:POWER[:NORMal][:GMSK][:CURRENT]? FETCH:SUBarrays:POWER[:NORMal]:EPSK[:CURRENT]? FETCH:SUBarrays:POWER[:NORMal][:GMSK]:AVERAGE? FETCH:SUBarrays:POWER[:NORMal]:EPSK:AVERAGE? FETCH:SUBarrays:POWER[:NORMal][:GMSK]:MAXimum? FETCH:SUBarrays:POWER[:NORMal]:EPSK:MAXimum? FETCH:SUBarrays:POWER[:NORMal][:GMSK]:MINimum? FETCH:SUBarrays:POWER[:NORMal]:EPSK:MINimum? Read meas. results (unsynchronized) ⇒ RUN SAMPLE:SUBarrays:POWER[:NORMal][:GMSK][:CURRENT]? SAMPLE:SUBarrays:POWER[:NORMal]:EPSK[:CURRENT]? SAMPLE:SUBarrays:POWER[:NORMal][:GMSK]:AVERAGE? SAMPLE:SUBarrays:POWER[:NORMal]:EPSK:AVERAGE? SAMPLE:SUBarrays:POWER[:NORMal][:GMSK]:MAXimum? SAMPLE:SUBarrays:POWER[:NORMal]:EPSK:MAXimum? SAMPLE:SUBarrays:POWER[:NORMal][:GMSK]:MINimum? SAMPLE:SUBarrays:POWER[:NORMal]:EPSK:MINimum? Read results (synchronized) ⇒ RUN	Subarray Results
--	------------------

Ret. values per subrange	Description of parameters	Def. value	Def. unit	FW vers.
-100.0 dB to + 20.0 dB	BurstPower[1], 1 st value for burst power	NAN	dB	VV2.00
...	
-100.0 dB to + 20.0 dB	BurstPower[x], xth value for burst power	NAN	dB	

Description of command

These commands are always queries. They output the burst power versus time in a fixed ¼-bit pattern and in the subranges defined by means of the CONFIGure:SUBarrays:POWER command. In the default setting of the configuration command the READ:SUBarrays..., FETCH:SUBarrays..., and SAMPLE:SUBarrays... command group is equivalent to the READ:ARRAY..., FETCH:ARRAY..., and SAMPLE:ARRAY... command group described above.

The CONFIGure:SUBarrays:POWER command defines a maximum of 32 subranges. If one of the statistical modes (ARITHmetical, MINimum, MAXimum) is set, only one value is returned per subrange.

The calculation of *current*, *average*, *minimum*, and *maximum* results is explained in chapter 3 (cf. *display mode*).

CALCulate:ARRay:POWer[:NORMaI][:GMSK]:LIMit:MATChing[:CURRent]?
 CALCulate:ARRay:POWer[:NORMaI]:EPsk:LIMit:MATChing[:CURRent]?
 CALCulate:ARRay:POWer[:NORMaI][:GMSK]:LIMit:MATChing:AVERage?
 CALCulate:ARRay:POWer[:NORMaI]:EPsk:LIMit:MATChing:AVERage?
 CALCulate:ARRay:POWer[:NORMaI][:GMSK]:LIMit:MATChing:MAXimum?
 CALCulate:ARRay:POWer[:NORMaI]:EPsk:LIMit:MATChing:MAXimum?
 CALCulate:ARRay:POWer[:NORMaI][:GMSK]:LIMit:MATChing:MINimum?
 CALCulate:ARRay:POWer[:NORMaI]:EPsk:LIMit:MATChing:MINimum?
 Burst Matching

Returned values	Value range	Def. value	Def. unit	FW vers.
Matching	MATC NMAT INV NTSC OUT	INV	–	V1.15

Description of command

This command is always a query. It indicates whether and in which way tolerances for the burst power (see command above) have been exceeded.

The following messages may be output for the value *Matching*:

MATC	<i>matching</i>
NMAT	<i>not matching</i>
INV	<i>invalid</i>
NTSC	<i>no training sequence code</i>
OUT	<i>out of tolerance</i>

CALCulate:ARRay:POWer[:NORMaI][:GMSK]:AREA:LIMit:MATChing[:CURRent]?
 CALCulate:ARRay:POWer[:NORMaI]:EPsk:AREA:LIMit:MATChing[:CURRent]?
 CALCulate:ARRay:POWer[:NORMaI][:GMSK]:AREA:LIMit:MATChing:AVERage?
 CALCulate:ARRay:POWer[:NORMaI]:EPsk:AREA:LIMit:MATChing:AVERage?
 CALCulate:ARRay:POWer[:NORMaI][:GMSK]:AREA:LIMit:MATChing:MAXimum?
 CALCulate:ARRay:POWer[:NORMaI]:EPsk:AREA:LIMit:MATChing:MAXimum?
 CALCulate:ARRay:POWer[:NORMaI][:GMSK]:AREA:LIMit:MATChing:MINimum?
 CALCulate:ARRay:POWer[:NORMaI]:EPsk:AREA:LIMit:MATChing:MINimum?
 Range Violation

Returned value	Description of parameters	Def. value	Def. unit	FW vers.
32 bit value,	Indicator for upper limit matching in area 1 to 16 (16 least significant bits),	NAN	–	1.20
32 bit value	Indicator for lower limit matching in area 1 to 16 (16 least significant bits)	NAN	–	

Description of command

This command is always a query. If a bit is set in the two returned values the corresponding section of the limit lines is exceeded.

POWER:ABURst

The subsystem *POWER:ABURst* measures the MS output carrier power versus time for access bursts. The subsystem corresponds to the measurement menu *Power*, application *P/t Access...*, and the associated popup menu *Power Configuration*. It contains all commands for measurement control and for the output of measurement results. The limit lines, however, are taken from the `POWER[:NBURst]` subsystem and adapted to the shortened access burst:

- The central part (area no. 5 of the upper limit line and area no. 3 of the lower limit line) is 60 bits shorter.
- The position of areas around the falling edge is adapted to the shortened central part: Areas no. 6 to 8 of the upper limit line and area no. 3 of the lower limit line are shifted by -60 bit.

Note that access burst measurements are always made on a single burst, so no `:CONTROL` subsystem and no display modes `[:CURRENT]`, `:AVERAGE`, `MINIMUM`, `:MAXIMUM` are needed.

Note:

To perform any kind of measurement and obtain a meaningful result, an appropriate test setup is required (see application examples in chapter 2 of this manual). Consequently, for the measurements reported in the following sections, the *Call Established (CEST)* signalling state must be reached before any of the commands retrieving test results (*READ...?*, *FETCH...?*, *SAMPLE...?*, or *CALCulate...LIMIT?*) can be used. Test configurations, however, can be defined any time.

Control of Measurement – Subsystem POWER:ABURst

The subsystem *POWER:ABURst* controls the access burst power measurement.

INITiate:POWER:ABURst[:GMSK]	Start new measurement	⇒	<i>RUN</i>
ABORt:POWER:ABURst[:GMSK]	Abort measurement and switch off	⇒	<i>OFF</i>
STOP:POWER:ABURst[:GMSK]	Stop measurement after current stat. cycle	⇒	<i>STOP</i>
CONTInue:POWER:ABURst[:GMSK]	Next meas. step (only <i>stepping mode</i>)	⇒	<i>RUN</i>
Description of command			FW vers.
These commands have no query form. They start or stop the measurement, setting it to the status indicated in the top right column.			V3.0

CONFigure:POWER:ABURst[:GMSK]:EREPorting <Mode>		Event Reporting		
<Mode>	Description of parameters	Def. value	Def. unit	FW vers.
SRQ 	Service request	OFF	–	V3.0
SOPC 	Single operation complete			
SRSQ 	SRQ and SOPC			
OFF	No reporting			
Description of command				
This command defines the events generated when the measurement is terminated or stopped (<i>event reporting</i> , see chapter 5 of CMU manual).				

FETCh:POWer:ABURst[:GMSK]:STATus?		Measurement Status		
Returned values	Description of parameters	Def. value	Def. unit	FW vers.
OFF	Measurement in the OFF state (*RST or ABORT)	OFF	–	V3.0
RUN	Running (after INITiate, CONTINUE or READ)			
STOP	Stopped (STOP)			
ERR	OFF (could not be started)			
STEP	Stepping mode (<stepmode>=STEP)			
RDY,	Stopped according to repetition mode and stop condition			
1 to 10000	Counter for current statistics cycle			
NONE	No counting mode set	NONE	–	
Description of command				
This command is always a query. It returns the status of the measurement (see chapters 3 and 5 of CMU manual).				

Test Configuration

The commands of the following subsystems configure the signal power measurement. They correspond to the sections in the *Power Configuration* popup menu that are related to the access burst power measurement.

Subsystem POWER:ABURst...:TIME

The subsystem *POWER:ABURst...:TIME* contains the command for shifting the time axis (and thus the tolerance mask). The subsystem corresponds to the *Timing Bit Offset* hotkey in the graphical measurement menu *Power*.

CONFigure:POWer:ABURst[:GMSK]:TOFFset <Offset>		Bit Offset		
<Offset>	Description of parameters	Def. value	Def. unit	FW vers.
–4.00 to +4.00	Number of bits	0	bit	V3.0
Description of command				
This command defines an offset time in ¼ bit units by which the burst is shifted relative to the time axis and the tolerance template.				

Subsystem *SUBarrays:POWer*

The subsystem *SUBarrays:POWer* defines the measurement range and the type of output values.

CONFigure:SUBarrays:POWer:ABURst[:GMSK] <Mode>,<Start>,<Samples>{,<Start>,<Samples>}		Definition of Subarrays		
<Mode>	Description of parameters	Def. value	Def. unit	
ALL ARITHmetical MINimum MAXimum IVAL,	Return all measurement values Return arithm. mean value in every range Return minimum value in every range Return maximum value in every range Return single interpolated value at <Start>	ALL	–	
<Start>	Description of parameters	Def. value	Def. unit	
–10 bit to 96 ¼ bit,	Start time in current range	–10	bit	
<Samples>	Description of parameters	Def. value	Def. unit	FW vers.
1 to 428	Number of samples in current range	428	–	V3.0
Description of command				
<p>This command configures the <i>READ:SUBarrays:POWer...</i>, <i>FETCh:SUBarrays:POWer...</i>, and <i>SAMPlE:SUBarrays:POWer</i> commands. It restricts the measurement to up to 32 subranges where either all measurement results (the number of which is given by the second numerical parameter) or a single statistical value is returned. The subranges are defined by the start time and the number of test points which are located on a fixed, equidistant grid with a step width of ¼ bit. If <Start> does not coincide with a test point then the range will start at the next test point that is larger than <Start>.</p> <p>For <Mode> = IVAL, the <Samples> parameter is ignored and the CMU returns a single measurement value corresponding to the abscissa value <Start>. If <Start> is located between two test points with valid results then the result is calculated from the results at these two adjacent test points by linear interpolation.</p> <p>The subranges may overlap but must be within the total range of the <i>POWer</i> measurement. Test points outside this range are not measured (result <i>NAN</i>) and do not enter into the ARITHmetical, MINimum and MAXimum values.</p> <p>By default, only one range corresponding to the total measurement range is used and all measurement values are returned.</p>				

Measured Values

The commands of the following subsystems determine and return the results of the access burst power measurement. They correspond to the graphical menu *Power* with its various display elements.

Subsystem *POWer:ABURst...*

The subsystem *POWer:ABURst...* contains the commands for measurement and output of the access burst power and its comparison with tolerance values. The subsystem corresponds to the graphical measurement menu *Power*.

READ[:SCALar]:POWER:ABURst[:GMSK]?	Scalar results			
FETCh[:SCALar]:POWER:ABURst[:GMSK]?	Start single shot measurement and return results			
SAMPLe[:SCALar]:POWER:ABURst[:GMSK]?	Read out measurement results (unsynchronized)			
	Read out measurement results (synchronized)			
Returned values	Value range	Def. value	Def. unit	FW vers.
Avg. Burst Pw. (Curr),	See data sheet	NAN	dBm	V3.0
Time of Arrival,	-100.0 bit to +100.0 bit	NAN	bit	
TSC detected,	OFF GSM0 to GSM7 DUMMY	NAN	-	
BurstMatching	INV MATC NMAT OUT NTR NRAM OFLW UFLW NTSC OFF	INV	-	
Description of command				
These commands are always queries.				
<ul style="list-style-type: none"> - READ starts a single shot measurement and returns the results. - FETCh outputs the results without taking care of the measurement state. - SAMPLe waits until the results are valid for the first time (depending on the chosen statistic count) and then outputs the results. 				
For more details refer to the description of measurement control in chapter 5 of the CMU200 operating manual.				
The following messages may be output for the value <i>BurstMatching</i> :				
INV	<i>invalid</i>			
MATC	<i>matching</i>			
NMAT	<i>not matching</i>			
OUT	<i>out of range</i>			
NTR	<i>no trigger</i>			
NRAM	<i>not ramping (burst not found)</i>			
OFLW	<i>overflow</i>			
UFLW	<i>underflow</i>			
NTSC	<i>no training sequence code</i>			
OFF	<i>off</i>			

CALCulate:POWer:ABURst[:GMSK]:LIMit:MATChing?		Limit Matching																																		
Returned values	Value range	Def. value	Def. unit	FW vers.																																
Avg. Burst Pw. (Curr),	NMAU NMAL INV OK	INV	–	V3.0																																
BurstMatching	INV MATC NMAT OUT NTR NRAM OFLW UFLW NTSC OFF	INV	–																																	
Description of command																																				
<p>This command is always a query. It indicates whether and in which way the tolerances for the scalar measured values (see command above) have been exceeded.</p> <p>The following messages may be output for the value <i>AvgBurstPowerCurr</i>:</p> <table border="0"> <tr> <td>OK</td> <td>Tolerance value matched</td> <td>OK.</td> </tr> <tr> <td>NMAU</td> <td>Underflow of tolerance value</td> <td><i>not matching, underflow</i></td> </tr> <tr> <td>NMAL</td> <td>Tolerance value exceeded</td> <td><i>not matching, overflow</i></td> </tr> <tr> <td>INV</td> <td>Measured value invalid</td> <td><i>invalid</i></td> </tr> </table> <p>The following messages may be output for the value <i>BurstMatching</i>:</p> <table border="0"> <tr> <td>INV</td> <td><i>invalid</i></td> </tr> <tr> <td>MATC</td> <td><i>matching</i></td> </tr> <tr> <td>NMAT</td> <td><i>not matching</i></td> </tr> <tr> <td>OUT</td> <td><i>out of range</i></td> </tr> <tr> <td>NTR</td> <td><i>no trigger</i></td> </tr> <tr> <td>NRAM</td> <td><i>not ramping (burst not found)</i></td> </tr> <tr> <td>OFLW</td> <td><i>overflow</i></td> </tr> <tr> <td>UFLW</td> <td><i>underflow</i></td> </tr> <tr> <td>NTSC</td> <td><i>no training sequence code</i></td> </tr> <tr> <td>OFF</td> <td><i>off</i></td> </tr> </table>					OK	Tolerance value matched	OK.	NMAU	Underflow of tolerance value	<i>not matching, underflow</i>	NMAL	Tolerance value exceeded	<i>not matching, overflow</i>	INV	Measured value invalid	<i>invalid</i>	INV	<i>invalid</i>	MATC	<i>matching</i>	NMAT	<i>not matching</i>	OUT	<i>out of range</i>	NTR	<i>no trigger</i>	NRAM	<i>not ramping (burst not found)</i>	OFLW	<i>overflow</i>	UFLW	<i>underflow</i>	NTSC	<i>no training sequence code</i>	OFF	<i>off</i>
OK	Tolerance value matched	OK.																																		
NMAU	Underflow of tolerance value	<i>not matching, underflow</i>																																		
NMAL	Tolerance value exceeded	<i>not matching, overflow</i>																																		
INV	Measured value invalid	<i>invalid</i>																																		
INV	<i>invalid</i>																																			
MATC	<i>matching</i>																																			
NMAT	<i>not matching</i>																																			
OUT	<i>out of range</i>																																			
NTR	<i>no trigger</i>																																			
NRAM	<i>not ramping (burst not found)</i>																																			
OFLW	<i>overflow</i>																																			
UFLW	<i>underflow</i>																																			
NTSC	<i>no training sequence code</i>																																			
OFF	<i>off</i>																																			

READ:ARRay:POWer:ABURst[:GMSK]? FETCh:ARRay:POWer:ABURst[:GMSK]? SAMPle:ARRay:POWer:ABURst[:GMSK]?		Burst Power		
		Start single shot measurement and return results		
		Read measurement results (unsynchronized)		
		Read results (synchronized)		
Returned values	Description of parameters	Def. value	Def. unit	FW vers.
–100.0 dB to + 20.0 dB	BurstPower[1], 1 st value for burst power	NAN	dB	V3.0
...	
–100.0 dB to + 20.0 dB	BurstPower[x], xth value for burst power	NAN	dB	
Description of command				
<p>These commands are always queries. They output the different power values of the bursts in a fixed ¼-bit pattern. The number of measured values is 428, corresponding to a time range of –10 bit to 96 ¾ bit.</p>				

				Subarray Results
READ:SUBarrays:POWer:ABURst[:GMSK]? Start single shot meas. and return results				⇒ RUN
FETCh:SUBarrays:POWer:ABURst[:GMSK]? Read meas. results (unsynchronized)				⇒ RUN
SAMPlE:SUBarrays:POWer:ABURst[:GMSK]? Read results (synchronized)				⇒ RUN
Ret. values per subrange	Description of parameters	Def. value	Def. unit	FW vers.
-100.0 dB to + 20.0 dB	BurstPower[1], 1 st value for burst power	NAN	dB	V3.0
...	
-100.0 dB to + 20.0 dB	BurstPower[x], xth value for burst power	NAN	dB	
Description of command				
<p>These commands are always queries. They output the burst power versus time in a fixed ¼-bit pattern and in the subranges defined by means of the <code>CONFigure:SUBarrays:POWer</code> command. In the default setting of the configuration command the <code>READ:SUBarrays...</code>, <code>FETCh:SUBarrays...</code>, and <code>SAMPlE:SUBarrays...</code> command group is equivalent to the <code>READ:ARRay...</code>, <code>FETCh:ARRay...</code>, and <code>SAMPlE:ARRay...</code> command group described above.</p> <p>The <code>CONFigure:SUBarrays:POWer</code> command defines a maximum of 32 subranges. If one of the statistical modes (<code>ARITHmetical</code>, <code>MINimum</code>, <code>MAXimum</code>) is set, only one value is returned per subrange.</p> <p>The calculation of <i>current</i>, <i>average</i>, <i>minimum</i>, and <i>maximum</i> results is explained in chapter 3 (cf. <i>display mode</i>).</p>				

CALCulate:ARRay:POWer:ABURst[:GMSK]:LIMit:MATChing?		Limit Matching, Array		
Returned values	Value range	Def. value	Def. unit	FW vers.
Matching	INV MATC NMAT OUT NTR NRAM OFLW UFLW NTSC OFF	INV	-	V3.0
Description of command				
<p>This command is always a query. It indicates whether and in which way the tolerances for the burst power (see command above) have been exceeded. The following messages may be output for the value <i>Matching</i>:</p> <p>INV <i>invalid</i> MATC <i>matching</i> NMAT <i>not matching</i> OUT <i>out of range</i> NTR <i>no trigger</i> NRAM <i>not ramping (burst not found)</i> OFLW <i>overflow</i> UFLW <i>underflow</i> NTSC <i>no training sequence code</i> OFF <i>off</i></p>				

CALCulate:ARRay:POWer:ABURst[:GMSK]:AREA:LIMit:MATChing?		Limit Matching, Area		
Returned value	Description of parameters	Def. value	Def. unit	FW vers.
32 bit value,	Indicator for upper limit matching in area 1 to 16 (16 least significant bits),	NAN	-	V3.0
32 bit value	Indicator for lower limit matching in area 1 to 16 (16 least significant bits)	NAN	-	
Description of command				
<p>This command is always a query. If a bit is set in the two returned values the corresponding section of the limit lines is exceeded.</p>				

POWER:PCL

The subsystem *POWER:PCL* controls the power vs PCL measurement. It corresponds to the measurement menu *Power* with the application *P/PCL*:

INITiate:POWER:PCL	Start new measurement	⇒ <i>RUN</i>
ABORt:POWER:PCL	Abort running measurement and switch off	⇒ <i>OFF</i>
STOP:POWER:PCL	Stop measurement after current stat. cycle	⇒ <i>STOP</i>
CONTinue:POWER:PCL	Next measurement step (only <i>stepping mode</i>)	⇒ <i>RUN</i>
Description of command		FW vers.
These commands have no query form. They start or stop the measurement, setting it to the status indicated in the top right column.		VV2.00

CONFigure:POWER:PCL:EREPorting <Mode>		Event Reporting		
<Mode>	Description of parameters	Def. value	Def. unit	FW vers.
SRQ 	Service request	OFF	–	VV2.00
SOPC 	Single operation complete			
SRSQ 	SRQ and SOPC			
OFF	No reporting			
Description of command				
This command defines the events generated when the measurement is terminated or stopped (<i>event reporting</i> , see chapter 5 of CMU manual).				

FETCh[:SCALAr]:POWER:PCL:STATus?		Measurement Status		
Return	Description of parameters	Def. value	Def. unit	FW vers.
OFF 	Measurement in the <i>OFF</i> state (*RST or ABORt)	OFF	–	VV2.00
RUN 	Running (after INITiate, CONTinue or READ)			
STOP 	Stopped (STOP)			
ERR 	<i>OFF</i> (could not be started)			
STEP 	Stepping mode (<stepmode>=STEP)			
RDY,	Stopped according to repetition mode and stop condition			
1 to 10000 	Counter for current statistics cycle			
NONE	No counting mode set	NONE	–	
Description of command				
This command is always a query. It returns the status of the measurement (see chapters 3 and 5 of CMU manual).				

Subsystem PWER:PCL:CONTROL

CONFigure:POWER:PCL:CONTROL:REPetition <Repetition>,<StopCondition>,<Stepmode>				Test Cycles
<Repetition>	Description of parameters	Def. value	Def. unit	
CONTInuous	Continuous measurement (<i>continuous</i> , until STOP or ABORT)	SING	–	
SINGleshot	Single measurement (<i>single shot</i> , until Status = RDY)			
1 to 10000	Multiple measurement (<i>counting</i> , until Status = STEP RDY)			
<StopCond>	Description of parameters	Def. value	Def. unit	
SONerror	Stop measurement in case of error (<i>stop on error</i>)	NONE	–	
NONE	Continue measurement even in case of error			
<Stepmode>	Description of parameters	Def. value	Def. unit	FW vers.
STEP	Interrupt measurement after each statistics cycle	NONE	–	VV2.00
NONE	Continue measurement according to its rep. mode			
Description of command				
This command determines the number of statistics cycles and the stepping mode for the measurement.				
Note: In the case of READ commands (READ : ...), the <Repetition> parameter has no effect; the measurement is always stopped after a single shot.				

Subsystem PWER:PCL:CHANnel

The subsystem *PWER:PCL:CHANnel* defines three or seven channels for the *P/PCL* measurement. The subsystem corresponds to the *Channel Count* hotkey and the MS Signal softkey in the measurement menu *P/PCL*.

CONFigure:POWER:PCL:CCOunt <Channels>				Channel Count
<Channels>	Description of parameters	Def. value	Def. unit	FW vers.
C3 C7	3 or 7 different channels measured	C3	–	V2.15
Description of command				
This command defines whether three or seven different channels are measured in the <i>P/PCL</i> measurement.				

CONFigure:POWER:PCL:CHANnel <Channel1>, ..., <Channeln>				Channel
Channel<nr>	Value range	Def. value: Cannel 1,2,3	Def. unit	FW vers.
GSM400	259 to 293, 306 to 340	259,276,293	–	VV2.00 ⁴
GSM850	128 to 251	128,190,251		
GSM900	0 to 124; 955 to 1023	1,62,124		
GSM1800	512 to 885	512,698,885		
GSM1900	512 to 810	512,661,810		

⁴ In firmware versions <2.15, only three channels could be measured.

Description of command	
This command defines the GSM channel numbers for the P/PCL measurement. The total number n of channels measured is either 3 or 7, depending on the CONFIGure:POWER:PCL:CCOUNT setting.	
If 7 channels are measured, the following default values apply:	
GSM400	259, 265, 270, 276, 282, 287, 293
GSM850	128, 149, 169, 190, 210, 230, 251
GSM900	1, 22, 42, 63, 83, 104, 124
GSM1800	512, 574, 636, 669, 761, 823, 885
GSM1900	512, 562, 611, 661, 711, 760, 810

Subsystem POWER:PCL

The subsystem *POWER:PCL* contains the commands for measurement and output of the power versus PCL application for three or seven selected channels. The subsystem corresponds to the measurement menu *P/PCL*.

		Scalar Results		
READ[:SCALAR]:POWER:PCL?	Start single shot measurement and return results			
FETCH[:SCALAR]:POWER:PCL?	Read out measurement results (unsynchronized)			
SAMPLE[:SCALAR]:POWER:PCL?	Read out measurement results (synchronized)			
Return	Value range	Def. value	Def. unit	FW vers.
PCL1, P1Ch1, P1Ch2, P1Ch3,	GSM400/850/900:			VV2.00
	PCL: 0 to 31	NAN	–	
... ,	GSM1800:			dBm
	PCL:0 to 31	NAN		
PCLn, PnCh1, PnCh2,PnCh3	GSM1900:			dBm
	PCL:0 to 31	NAN		
	Power: 0.0 dBm to +36.0 dBm	NAN		
	Power: 0.0 dBm to +33.0 dBm	NAN		
Description of command				
These commands are always queries. They start a measurement and return all measurement results. The returned list contains all possible PCLs of the mobile phone together with the measured MS output powers in the three selected channels. The output values are:				
- PCL1 to PCLn	<i>PCLs of the mobile</i>			
- PxChy	<i>Average burst power for PCL = x and channel = y</i>			
The PCL range depends on the GSM phase and the power class of the mobile. For a list of possible PCLs and nominal maximum output power of the mobiles refer to chapter 4.				

		Scalar Results		
READ[:SCALar]:POWER:PCL:PCLPower<PCL>?		Start single shot measurement and return results		
FEtCh[:SCALar]:POWER:PCL:PCLPower<PCL>?		Read out measurement results (unsynchronized)		
SAMPlE[:SCALar]:POWER:PCL:PCLPower<PCL>?		Read out measurement results (synchronized)		
Returned Value	Value range	Def. value	Def. unit	FW vers.
PCh1, ... , P1Chn	See previous command	NAN	dBm	V2.15
Description of command				
<p>These commands are always queries. They start a measurement and return the mobile output power at one particular PCL specified with the numeric index <PCL> and for the channels specified via <code>CONFigure:POWER:PCL:CHANnel</code>. The total number n of channels measured is either 3 or 7, depending on the <code>CONFigure:POWER:PCL:CCOunt</code> setting. See also command description for <code>READ[:SCALar]:POWER:PCL[:CURRent]?</code></p>				

		Results of Limit Check														
CALCulate:POWER:PCL[:CURRent]:LIMit:MATChing?																
Returned values	Description of parameters	Def. value	Def. unit	FW vers.												
Matching	OK NMAU NMAL INV	INV	–	VV2.00												
Description of command																
<p>This command is always a query. It indicates whether and in which way the tolerances for the burst power (see preceding command) are exceeded. The tolerance values are set via <code>CONF:POW:LIM:ABP<nr></code>.</p> <p>The following messages may be output for the measured value <i>Matching</i>:</p> <table border="0"> <tr> <td>OK</td> <td>Tolerance value matched</td> <td>OK.</td> </tr> <tr> <td>NMAU</td> <td>Underflow of tolerance value</td> <td><i>not matching, underflow</i></td> </tr> <tr> <td>NMAL</td> <td>Tolerance value exceeded</td> <td><i>not matching, overflow</i></td> </tr> <tr> <td>INV</td> <td>Measured value invalid</td> <td><i>invalid</i></td> </tr> </table> <p>The complete output list reports the limit matching for all measured PCLs and the three or seven channels defined via <code>CONFigure:POWER:PCL:CHANnel</code>, starting with the channels for the first PCL, e.g. (for three channels):</p> <p>1, OK, OK, OK, 2, OK, OK, OK, 3, OK, OK, OK, ...</p>					OK	Tolerance value matched	OK.	NMAU	Underflow of tolerance value	<i>not matching, underflow</i>	NMAL	Tolerance value exceeded	<i>not matching, overflow</i>	INV	Measured value invalid	<i>invalid</i>
OK	Tolerance value matched	OK.														
NMAU	Underflow of tolerance value	<i>not matching, underflow</i>														
NMAL	Tolerance value exceeded	<i>not matching, overflow</i>														
INV	Measured value invalid	<i>invalid</i>														

POWER:MPR

The subsystem *POWER:MPR* combines the *POWER* and *MODulation* systems, i.e. it measures the signal power vs. time and the scalar modulation parameters simultaneously. The subsystem contains all commands for measurement control and for the output of measurement results; configurations such as limit lines must be defined separately in the *POWER* and *MODulation* systems.

The *POWER:MPR* has no equivalent in manual control where the power and modulation measurement results are displayed separately.

Control of measurement – Subsystem POWER:MPR

The subsystem *POWER:MPR* controls the combined power and modulation measurement.

INITiate:POWER[:NORMAl][:GMSK]:MPR	Start new measurement	⇒ RUN
ABORt:POWER[:NORMAl][:GMSK]:MPR	Abort running measurement and switch off	⇒ OFF
STOP:POWER[:NORMAl][:GMSK]:MPR	Stop measurement after current stat. cycle	⇒ STOP
CONTinue:POWER[:NORMAl][:GMSK]:MPR	Next meas. step (only <i>stepping mode</i>)	⇒ RUN
Description of command		FW vers.
These commands have no query form. They start and stop the combined power and modulation measurement, setting it to the status indicated in the top right column.		VV2.00

CONFigure:POWER[:NORMAl][:GMSK]:MPR:EREPorting <Mode>		Event Reporting		
<Mode>	Description of parameters	Def. value	Def. unit	FW vers.
SRQ	Service request	OFF	–	VV2.00
SOPC	Single operation complete			
SRSQ	SRQ and SOPC			
OFF	No reporting			
Description of command				
This command defines the events generated when the measurement is terminated or stopped (<i>event reporting</i> , see chapter 5 of CMU manual).				

FETCH:POWER[:NORMAl][:GMSK]:MPR:STATus?		Measurement Status		
Return	Description of parameters	Def. value	Def. unit	FW vers.
OFF	Measurement in the <i>OFF</i> state (*RST or ABORt)	OFF	–	V2.00
RUN	Running (after INITiate, CONTinue or READ)			
STOP	Stopped (STOP)			
ERR	OFF (could not be started)			
STEP	Stepping mode (<stepmode>=STEP)			
RDY,	Stopped according to repetition mode and stop condition			
1 to 10000	Counter for current statistics cycle	NONE	–	
NONE,	Counter for current evaluation period within a cycle			
1 to 1000	Statistic count set to off	NONE	–	
NONE				
Description of command				
This command is always a query. It returns the status of the measurement (see chapters 3 and 5 of CMU manual).				

Subsystem POWER:MPR:CONTROL

The subsystem *POWER:MPR:CONTROL* defines the repetition mode, statistic count, and stop condition of the measurement.

CONFigure:POWER[:NORMAl][:GMSK]:MPR:CONTROL <Mode>, <Statistics>				Scope of Measurement	
<Mode>	Description of parameters	Def. value	Def. unit		
SCALar	Scalar values only (incl. ramp matching)	ARRay	–		
ARRay	Scalar measured values and arrays				
<Statistics>	Description of parameters	Def. value	Def. unit	FW vers.	
1 to 1000	Number of bursts per statistics cycle	100	–	V2.00	
NONE	Statistics off (equivalent to 1)				
Description of command					
This command specifies the type of measured values and defines the number of bursts forming a statistics cycle.					

CONFigure:POWER[:NORMAl][:GMSK]:MPR:CONTROL:REPetition <Repetition>, <StopCond>, <Stepmode>				Test Cycles	
<Repetition>	Description of parameters	Def. value	Def. unit		
CONTInuous	Continuous measurement (until STOP or ABORT)	SING	–		
SINGleshot	Single shot measurement (until Status = RDY)				
1 to 10000	Multiple measurement (counting, until Status = STEP RDY)				
<StopCond>	Description of parameters	Def. value	Def. unit		
SONerror	Stop measurement in case of error (stop on error)	NONE	–		
NONE	Continue measurement even in case of error				
<Stepmode>	Description of parameters	Def. value	Def. unit	FW vers.	
STEP	Interrupt measurement after each statistics cycle	NONE	–	V2.00	
NONE	Continue measurement according to its rep. mode				
Description of command					
This command determines the number of statistics cycles, the stop condition and the stepping mode for the measurement.					
Note: In the case of READ commands (READ: ...), the <Repetition> parameter has no effect; the measurement is always stopped after a single shot.					

Test Configuration

The commands of the following subsystems configure the combined power and modulation measurement. Note that configurations such as limit lines must be defined separately in the POWER and MODulation systems.

Subsystem SUBarrays:POWER:MPR

The subsystem SUBarrays:POWER:MPR defines the measurement range and the type of output values.

CONFigure:SUBarrays:POWER[:NORMal][:GMSK]:MPR <Mode>,<Start>,<Samples>{,<Start>,<Samples>}		Definition of Subarrays		
<Mode>	Description of parameters	Def. value	Def. unit	
ALL ARITHmetical MINimum MAXimum IVAL,	Return all measurement values Return arithm. mean value in every range Return minimum value in every range Return maximum value in every range Return single interpolated value at <Start>	ALL	–	
<Start>	Description of parameters	Def. value	Def. unit	
–10 bit to 156 ¼ bit,	Start time in current range	–10	bit	
<Samples>	Description of parameters	Def. value	Def. unit	FW vers.
1 to 668	Number of samples in current range	668	–	V2.00
Description of command				
<p>This command configures the READ:SUBarrays..., FETCh:SUBarrays..., and SAMPlE:SUBarrays:POWER:MPR commands. It restricts the measurement to up to 32 subranges where either all measurement results (the number of which is given by the second numerical parameter) or a single statistical value is returned. The subranges are defined by the start time and the number of test points which are located on a fixed, equidistant grid with a step width of ¼ bit. If <Start> does not coincide with a test point then the range will start at the next test point that is larger than <Start>.</p> <p>For <Mode> = IVAL, the <Samples> parameter is ignored and the CMU returns a single measurement value corresponding to the abscissa value <Start>. If <Start> is located between two test points with valid results then the result is calculated from the results at these two adjacent test points by linear interpolation.</p> <p>The subranges may overlap but must be within the total range of the Power measurement. Test points outside this range are not measured (result NAN) and do not enter into the ARITHmetical, MINimum and MAXimum values.</p> <p>By default, only one range corresponding to the total measurement range is used and all measurement values are returned.</p>				

Measured Values – Subsystem POWER:MPR

The subsystem *POWER:MPR* determines and outputs the results of the combined power and modulation measurement.

		Scalar Results		
READ[:SCALar]:POWer[:NORMal][:GMSK]:MPR?		Start single shot measurement and return results		
FETCh[:SCALar]:POWer[:NORMal][:GMSK]:MPR?		Read out meas. results (unsynchronized)		
SAMPlE[:SCALar]:POWer[:NORMal][:GMSK]:MPR?		Read out measurement results (synchronized)		
Returned values	Value range	Def. value	Def. unit	FW vers.
AvgBurstPwCurr,	-137 dBm to +53 dBm	NAN	dBm	V2.00
PeakBurstPwCurr,	-137 dBm to +53 dBm	NAN	dBm	
PowerControlLevel,	0 to 32 (dep. on network, power class...)	NAN	PCL	
TimingAdvError,	-100.0 bit to +100.0 bit	NAN	bit	
BurstsOutOfTol,	0.0% too 100.0%	NAN	%	
BurstMatching,	INV MATC NMAT OUT NTR NRAM OFLW UFLW NTSC OFF	INV	-	
PhErrPeakCurrent,	-100.0 ° to +100.0 °	NAN	deg	
PhErrPeakAverage,	-100.0 ° to +100.0 °	NAN	deg	
PhErrPeakMaxMin,	-100.0 ° to +100.0 °	NAN	deg	
PhErrRMSCurrent,	-100.0 ° to +100.0 °	NAN	deg	
PhErrRMSAverage,	-100.0 ° to +100.0 °	NAN	deg	
PhErrRMSMaxMin,	-100.0 ° to +100.0 °	NAN	deg	
FreqErrCurrent,	-1000.0 Hz to + 1000.0 Hz	NAN	Hz	
FreqErrAverage,	-1000.0 Hz to + 1000.0 Hz	NAN	Hz	
FreqErrMaxMin,	-1000.0 Hz to + 1000.0 Hz	NAN	Hz	
AvgBurstPwAvg	-137 dBm to +53 dBm	INV	dBm	
Description of command				
These commands are always queries. They start a combined power vs. time and modulation measurement and output all scalar measurement results. For detailed information refer to the description of the analogous commands in the POWER and MODulation systems.				

READ:ARRay:POWer[:NORMal][:GMSK]:MPR[:CURRent]?	Traces
READ:ARRay:POWer[:NORMal][:GMSK]:MPR:AVERAge?	
READ:ARRay:POWer[:NORMal][:GMSK]:MPR:MAXimum?	
READ:ARRay:POWer[:NORMal][:GMSK]:MPR:MINimum?	
	Start measurement and wait for end ⇒ RUN
FETCh:ARRay:POWer[:NORMal][:GMSK]:MPR[:CURRent]?	
FETCh:ARRay:POWer[:NORMal][:GMSK]:MPR:AVERAge?	
FETCh:ARRay:POWer[:NORMal][:GMSK]:MPR:MAXimum?	
FETCh:ARRay:POWer[:NORMal][:GMSK]:MPR:MINimum?	
	Read meas. results (unsynchronized) ⇒ RUN
SAMPlE:ARRay:POWer[:NORMal][:GMSK]:MPR[:CURRent]?	
SAMPlE:ARRay:POWer[:NORMal][:GMSK]:MPR:AVERAge?	
SAMPlE:ARRay:POWer[:NORMal][:GMSK]:MPR:MAXimum?	
SAMPlE:ARRay:POWer[:NORMal][:GMSK]:MPR:MINimum?	
	Read results (synchronized) ⇒ RUN

Returned values	Description of parameters	Def. value	Def. unit	FW vers.
-100.0 dB to + 20.0 dB	BurstPower[1], 1 st value for burst power	NAN	dB	V2.00
...	
-100.0 dB to + 20.0 dB	BurstPower[x], xth value for burst power	NAN	dB	

Description of command

These commands are always queries. They output the burst power versus time in a fixed ¼- bit pattern. The number of measured values is 668, corresponding to a time range of -10 bit to 156 ¾ bit.

The calculation of *current*, *average*, *minimum* and *maximum* results is explained in chapter 3 (cf. *display mode*).

READ:SUBarrays:POWER[:NORMal][:GMSK]:MPR[:CURRent]? Subarray Results

READ:SUBarrays:POWER[:NORMal][:GMSK]:MPR:AVERAge?

READ:SUBarrays:POWER[:NORMal][:GMSK]:MPR:MAXimum?

READ:SUBarrays:POWER[:NORMal][:GMSK]:MPR:MINimum?

Start measurement and wait for end ⇒ RUN

FETCh:SUBarrays:POWER[:NORMal][:GMSK]:MPR[:CURRent]?

FETCh:SUBarrays:POWER[:NORMal][:GMSK]:MPR:AVERAge?

FETCh:SUBarrays:POWER[:NORMal][:GMSK]:MPR:MAXimum?

FETCh:SUBarrays:POWER[:NORMal][:GMSK]:MPR:MINimum?

Read meas. results (unsynchronized) ⇒ RUN

SAMPle:SUBarrays:POWER[:NORMal][:GMSK]:MPR[:CURRent]?

SAMPle:SUBarrays:POWER[:NORMal][:GMSK]:MPR:AVERAge?

SAMPle:SUBarrays:POWER[:NORMal][:GMSK]:MPR:MAXimum?

SAMPle:SUBarrays:POWER[:NORMal][:GMSK]:MPR:MINimum?

Read results (synchronized) ⇒ RUN

Ret. values per subrange	Description of parameters	Def. value	Def. unit	FW vers.
-100.0 dB to + 20.0 dB	BurstPower[1], 1 st value for burst power	NAN	dB	V2.00
...	
-100.0 dB to + 20.0 dB	BurstPower[x], xth value for burst power	NAN	dB	

Description of command

These commands are always queries. They output the burst power versus time in a fixed ¼- bit pattern and in the subranges defined by means of the `CONFigure:SUBarrays:POWER[:NORMal][:GMSK]:MPR` command. In the default setting of the configuration command the `READ:SUBarrays...`, `FETCh:SUBarrays...`, and `SAMPle:SUBarrays...` command group is equivalent to the `READ:ARRay...`, `FETCh:ARRay...`, and `SAMPle:ARRay...` command group described above.

The `CONFigure:SUBarrays:POWER[:NORMal][:GMSK]:MPR` command defines a maximum of 32 subranges. If one of the statistical modes (`ARITHmetical`, `MINimum`, `MAXimum`) is set, only one value is returned per subrange.

The calculation of *current*, *average*, *minimum*, and *maximum* results is explained in chapter 3 (cf. *display mode*).

CALCulate:POWER[:NORMal][:GMSK]:MPR:LIMit:MATChing?		Limit Matching																																		
Returned values	Value range	Def. value	Def. unit	FW vers.																																
AvgBurstPwCurr,	NMAU NMAL INV OK	INV	–	V2.00																																
PeakBurstPwCurr,	NMAU NMAL INV OK	INV	–																																	
BurstMatching,	INV MATC NMAT OUT NTR NRAM OFLW UFLW NTSC OFF	INV	–																																	
PhErrPeakCurrent,		INV	–	–																																
PhErrPeakAverage,	For all measured values:	INV	–																																	
PhErrPeakMaxMin,		INV	–																																	
PhErrRMSCurrent,		INV	–																																	
PhErrRMSAverage,		INV	–																																	
PhErrRMSMaxMin,	NMAU NMAL INV OK	INV	–																																	
FreqErrCurrent,		INV	–																																	
FreqErrAverage,		INV	–																																	
FreqErrMaxMin,		INV	–																																	
AvgBurstPwAvg		INV	–																																	
Description of command																																				
<p>This command is always a query. It indicates whether and in which way the tolerances for the scalar results (see command above) in the <i>power vs time</i> and the <i>modulation</i> measurement have been exceeded.</p> <p>The following messages may be output for the values <i>AvgBurstPower</i> (current or average) and <i>PeakBurstPower</i> and for all results of the modulation measurement:</p> <table border="0"> <tr> <td>NMAU</td> <td>Tolerance value underflow</td> <td><i>not matching, underflow</i></td> </tr> <tr> <td>NMAL</td> <td>Tolerance value exceeded</td> <td><i>not matching, overflow</i></td> </tr> <tr> <td>INV</td> <td>Measurement invalid</td> <td><i>invalid</i></td> </tr> <tr> <td>OK</td> <td>Tolerance value matched</td> <td></td> </tr> </table> <p>The following messages may be output for the value <i>BurstMatching</i>:</p> <table border="0"> <tr> <td>INV</td> <td><i>invalid</i></td> </tr> <tr> <td>MATC</td> <td><i>matching</i></td> </tr> <tr> <td>NMAT</td> <td><i>not matching</i></td> </tr> <tr> <td>OUT</td> <td><i>out of range</i></td> </tr> <tr> <td>NTR</td> <td><i>no trigger</i></td> </tr> <tr> <td>NRAM</td> <td><i>not ramping (burst not found)</i></td> </tr> <tr> <td>OFLW</td> <td><i>overflow</i></td> </tr> <tr> <td>UFLW</td> <td><i>underflow</i></td> </tr> <tr> <td>NTSC</td> <td><i>no training sequence code</i></td> </tr> <tr> <td>OFF</td> <td><i>off</i></td> </tr> </table>					NMAU	Tolerance value underflow	<i>not matching, underflow</i>	NMAL	Tolerance value exceeded	<i>not matching, overflow</i>	INV	Measurement invalid	<i>invalid</i>	OK	Tolerance value matched		INV	<i>invalid</i>	MATC	<i>matching</i>	NMAT	<i>not matching</i>	OUT	<i>out of range</i>	NTR	<i>no trigger</i>	NRAM	<i>not ramping (burst not found)</i>	OFLW	<i>overflow</i>	UFLW	<i>underflow</i>	NTSC	<i>no training sequence code</i>	OFF	<i>off</i>
NMAU	Tolerance value underflow	<i>not matching, underflow</i>																																		
NMAL	Tolerance value exceeded	<i>not matching, overflow</i>																																		
INV	Measurement invalid	<i>invalid</i>																																		
OK	Tolerance value matched																																			
INV	<i>invalid</i>																																			
MATC	<i>matching</i>																																			
NMAT	<i>not matching</i>																																			
OUT	<i>out of range</i>																																			
NTR	<i>no trigger</i>																																			
NRAM	<i>not ramping (burst not found)</i>																																			
OFLW	<i>overflow</i>																																			
UFLW	<i>underflow</i>																																			
NTSC	<i>no training sequence code</i>																																			
OFF	<i>off</i>																																			

Receiver Quality

The subsystem *RXQuality* comprises the commands for all receiver quality measurements. The subsystem corresponds to the main menu *Receiver Quality* and the associated popup menu *Receiver Quality Configuration*.

Important Note: Receiver Quality Measurements with MCS-5 to MCS-9

Receiver Quality measurements on circuit-switched channels using the modulation and coding schemes MCS-5 to MCS-9 (see `CONFigure:NETWork[:CSWitched]:SMODE:TRAFFic` command) can not be performed in parallel to TX Tests (`POWER...`, `MODulation...`, `SPECTrum`). The Receiver Quality measurement must be in the READY or OFF state before a TX Test can be started. Conversely, all TX Tests must be in the READY or OFF state before a Receiver Quality measurement using MCS-5 to MCS-9 can be started.

General Settings – Subsystem RXQuality...

The subsystem *RXQuality...* provides settings for all types of receiver quality measurements.

CONFigure:RXQuality[:CSWitched]:BITStream <Mode>				Bit Stream BER	
CONFigure:RXQuality:PDATA:BITStream <Mode>					
<Mode>	Description of parameters	Def. value	Def. unit	FW vers.	
PR9 	2 ⁹ -1 PSR bit pattern	PR9	–	V3.10	
PR11 	2 ¹¹ -1 PSR bit pattern				
PR15 	2 ¹⁵ -1 PSR bit pattern				
PR16	2 ¹⁶ -1 PSR bit pattern				
Description of command				Sig. State	
This command defines the pseudo random bit sequence that the CMU transmits to the MS during <i>Receiver Quality</i> measurements.				all	

CONFigure:RXQuality:CONTRol:HTIME <AGCTime>, <SynchTime>				AGC Holdoff Time, Sync Holdoff Time	
<AGCTime>	Description of parameters	Def. value	Def. Unit		
0 s to 100 s	Automatic gain control	0.5	s		
<SynchTime>	Description of parameters	Def. value	Def. Unit	FW vers.	
0 s to 100 s	Bit stream synchronization	0.2	s	V2.00	
Description of command					
This command defines hold off times during which the mobile can adapt itself to the new RF level at the beginning of the <i>Receiver Quality</i> measurement and send back the bit stream received.					
By reducing the hold off times, the measurement can be speeded up. The default settings for both times do not depend on the application.					

CONFigure:RXQuality:CONTrol:DEFault <Enable>		Default Settings		
<Enable>	Description of parameters	Def. value	Def. unit	FW vers.
ON OFF	The parameters are set to default values Some or all parameters differ from the default value	ON	–	V2.00
Description of command				
As a <i>setting command</i> with the setting <i>ON</i> this command sets all parameters of the subsystem to default values (the setting <i>OFF</i> causes an error message).				
As a query, this command reads out whether all parameters are set to default values (<i>ON</i>) or not (<i>OFF</i>).				

Confidence BER – Subsystem RXQuality:CONTrol:CONFidence...

The subsystem *RXQuality:CONTrol:CONFidence...* configures the single shot or continuous confidence BER measurement. The settings are provided in the *Confidence Settings* section of the *Control* tab of the *Receiver Configuration* menu.

CONFigure:RXQuality:CONTrol:CONFidence:FAIL <Level>		Confidence Fail		
<Level>	Description of parameters	Def. value	Def. unit	FW vers.
C500 C900 C980 C998	95 %, 99 %, 99.8 % or 99.98 % confidence level	C980	–	V3.40
Description of command				
This command defines the confidence level for early fail decisions.				

CONFigure:RXQuality:CONTrol:CONFidence:PASS <Level>		Confidence Pass		
<Level>	Description of parameters	Def. value	Def. unit	FW vers.
C500 C900 C980 C998	95 %, 99 %, 99.8 % or 99.98 % confidence level	C980	–	V3.40
Description of command				
This command defines the confidence level for early pass decisions.				

CONFigure:RXQuality:CONTrol:CONFidence:RWINdow <Factor>		Result Window		
<Factor>	Description of parameters	Def. value	Def. unit	FW vers.
OFF P10 P20 P30	Dual-limit test switched off, single-limit test Dual-limit test with a range of 10, %, 20 %, or 30 %	OFF	–	V3.40
Description of command				
This command selects the BER range factor for statistical dual-limit BER tests.				

CONFigure:RXQuality:CONTrol:CONFidence:MTTime <Time>		Min. Test Time		
<Time>	Description of parameters	Def. value	Def. unit	FW vers.
0.0 s to 100 000.0 s	Minimum Test Time	0.0	s	V3.40
Description of command				
This command defines the minimum test time before a check of the early pass and early fail limits can stop the measurement.				

Receiver Quality – Single Shot

The subsystem *RXQuality:BER* contains the commands for receiver quality measurements in the single shot repetition mode. The subsystem corresponds to the main menu *Receiver Quality*, application *BER*, and the corresponding sections of the associated popup menu *Receiver Quality Configuration*.

Control of Measurement – Subsystem *RXQuality:BER*

The subsystem *RXQuality:BER* controls the single shot receiver quality measurements.

CONFigure:RXQuality:BER:TSEtup <TestSetup>				Test Setup
<TestSetup>	Description of parameters	Def. value	Def. unit	FW vers.
T1	Single Shot Test Setup 1	T1	–	V2.00
T2	...			
...				
T10	Single Shot Test Setup 10			
Description of command				
This command selects one out of 10 test setups, i.e. one data set parametrizing a particular single shot receiver quality measurement. When a new test setup is selected, the running measurement is aborted (measurement state <i>OFF</i>) and all measured values are set to <i>INV</i> (invalid). The new measurement must be re-started with <i>INITiate:RXQuality:BER</i> .				

INITiate:RXQuality:BER	Start new measurement	⇒	<i>RUN</i>
ABORt:RXQuality:BER	Abort running measurement and switch off	⇒	<i>OFF</i>
STOP:RXQuality:BER	Stop measurement	⇒	<i>STOP</i>
CONTinue:RXQuality:BER	Next measurement step (only <i>stepping mode</i>)	⇒	<i>RUN</i>
Description of command			
These commands have no query form. They start or stop the current single shot measurement, setting it to the status indicated in the top right column.			
			FW vers.
			V2.00

CONFigure:RXQuality:BER:EREPorting <Mode>				Event Reporting
<Mode>	Description of parameters	Def. value	Def. unit	FW vers.
SRQ	Service request	OFF	–	V2.00
SOPC	Single operation complete			
SRSQ	SRQ and SRSQ			
OFF	No reporting			
Description of command				
This command defines the events generated when the measurement is terminated or stopped (<i>event reporting</i> , see chapter 5).				

FETCh:RXQuality:BER:STATus?		Measurement Status		
Return	Description of parameters	Def. value	Def. unit	FW vers.
OFF	Measurement in the OFF state (*RST or ABORT)	OFF	–	V2.00
RUN	Running (after INITiate, CONTinue or READ)			
STOP	Stopped (STOP)			
ERR	OFF (could not be started)			
STEP	Stepping mode (<stepmode>=STEP)			
RDY,	Stopped according to repetition mode and stop condition			
1 to 50000	Counter for current evaluation period (frame)			
NONE	Statistic count set to off (only 1 frame)	NONE	–	
Description of command				
This command is always a query. It returns the status of the measurement (see chapter 5).				

Subsystem RXQuality:BER:CONTRol

The subsystem *RXQuality:BER:CONTRol* sets the control parameters for the single shot receiver quality measurements. The subsystem corresponds to the tab *Control* in the popup menu *Receiver Quality Configuration*.

		Meas. Mode, Frames, BER								
CONFigure:RXQuality:BER<nr>:CONTRol[:CSWitched] <Mode>, <FramesToAverage>										
CONFigure:RXQuality:BER<nr>:CONTRol:PDATa <Mode>, <FramesToAverage>										
<Mode>	Description of parameters	Def. value	Def. unit							
RFER	Residual bit error rate, frame erasure rate	BER	–							
BER	Bit error rate									
BBB	Burst by burst									
BDBL	BER/Data Block Error Rate									
<FramesToSend>	Description of parameters	Def. value	Def. unit	FW vers.						
1 to 50000	No. of frames to be sent	See	–	V2.00						
NONE	No average (only 1 frame considered)	below								
Description of command										
This command defines the measured value and the number of frames to be sent in a single shot measurement, constituting a statistics cycle. The suffix <nr> refers to the selected test setup (<nr> = 1 to 10). For definition of the measured value (BER, RFER etc.) see chapter 4.										
The following default settings are valid for the command parameters:										
<nr>	1	2	3	4	5	6	7	8	9	10
Mode	BER	BER	BER	BER	BER	BER	BER	BER	BER	BER
Frames	100	100	500	500	100	500	500	100	100	100

CONFigure:RXQuality:BER<nr>:CONTrol:REPetition				Test Cycles						
<StopCondition>,<Stepmode>										
<StopCondition>	Description of parameters	Def. value	Def. unit							
ALIMits	Measurement aborted when all limits are exceeded	See below	–							
FLIMit	Aborted when first limit value is exceeded									
CLEVel	Statistical BER test switched on									
NONE	Not aborted, measurement over all frames									
<Stepmode>	Description of parameters	Def. value	Def. unit	FW vers.						
STEP	Interrupt measurement after each statistics cycle	NONE	–	V2.00						
NONE	Continue measurement according to its rep. mode									
Description of command										
This command determines the stop condition and the stepping mode for the measurement. The repetition mode of the measurement (single shot) is identified by the BER keyword.										
Depending on the test setup, the following default settings are valid:										
<nr>	1	2	3	4	5	6	7	8	9	10
StopCond	FLIM	FLIM	FLIM	FLIM	FLIM	FLIM	FLIM	FLIM	FLIM	FLIM

CONFigure:RXQuality:BER<nr>:CONTrol[:CSWitched][:TCH]:LEVel:UTIMeslot <Level>				TCH Level BER, Used Timeslot						
<Level>	Description of parameters	Def. value	Def. unit	FW vers.						
–137 dBm to –27 dBm	RF1 level in used timeslot	See below	dBm	V2.00						
–137 dBm to –10 dBm	RF2 level in used timeslot		dBm							
–90 dBm to +13 dBm	RF3 OUT level in used timeslot		dBm							
Description of command										
This command defines the absolute level of the traffic channel (TCH) in the used timeslot for the single shot application <nr>. This level applies to the receiver quality measurement only.										
The default setting depends on the test setup (all level values in dBm, corresponding to RF2):										
<nr>	1	2	3	4	5	6	7	8	9	10
Level	–102.0	–104.0	–102.0	–104.0	–100.0	–100.0	–100.0	–102.0	–102.0	–102.0

CONFigure:RXQuality:BER<nr>:CONTrol[:CSWitched][:TCH]:LEVel:UNTImeslot <Level>				TCH Level BER, Unused Timeslot						
<Level>	Description of parameters	Def. value	Def. unit	FW vers.						
–127 dB to +127 dB	Level in unused timeslot	See below	dB	V2.00						
Description of command										
This command defines the relative level of the traffic channel (TCH) in the unused timeslot for the single shot application <nr>. This level applies to the receiver quality measurement only. The level range quoted above is restricted by the condition that the absolute level (calculated from the used timeslot level and the relative level in the unused timeslots) must not exceed the level ranges of the RF connectors.										
Example: With output connector RF2 and a default used timeslot level of –102 dBm, the unused timeslot level can be set in the range –35 dB to +92 dB, corresponding to an absolute level of –137 dBm to –10 dBm.										
The default setting depends on the test setup (all level values in dB):										
<nr>	1	2	3	4	5	6	7	8	9	10
Level	–18.0	–16.0	–18.0	–16.0	–20.0	–20.0	–20.0	–18.0	–18.0	–18.0

Reference Level, Multislot										
CONFigure:RXQuality:BER<nr>:CONTrol[:CSWitched][:TCH]:MSLot:RLEVel <Level>										
CONFigure:RXQuality:BER<nr>:CONTrol:PDATa[:TCH]:MSLot:RLEVel <Level>										
<Level>	Description of parameters	Def. value	Def. unit	FW vers.						
-137 dBm to -27 dBm	Reference level for RF1	See below	dBm	V3.05						
-137 dBm to -10 dBm	Reference level for RF2	See below	dBm							
-90 dBm to +13 dBm	Reference level for RF3 OUT	-90	dBm							
Description of command										
<p>This command defines the reference value for the individual downlink (BS) TCH signal levels used for the multislot BER test on circuit switched channels. See command CONFigure:RXQuality:BER<nr>:CONTrol[:CSWitched][:TCH]:MSLot:LEVel:INDividual on p. 6.169 and the corresponding packet data command.</p> <p>The default setting depends on the test setup (all level values in dB):</p>										
<nr>	1	2	3	4	5	6	7	8	9	10
Level	-102.0	-104.0	-102.0	-104.0	-100.0	-100.0	-100.0	-102.0	-102.0	-102.0

Slot Configuration: Individual (Multislot)				
CONFigure:RXQuality:BER<nr>:CONTrol[:CSWitched][:TCH]:MSLot:LEVel:INDividual				
CONFigure:RXQuality:BER<nr>:CONTrol:PDATa[:TCH]:MSLot:LEVel:INDividual				
<Level_0>, ..., <Level_7>				
<Level_n>	Description of parameters	Def. value	Def. unit	FW vers.
-127 dB to +127 dB	Power of CMU in timeslot no. n	0	dB	V3.05
Description of command				
<p>This command defines the levels in all 8 timeslots of the downlink (BS) TCH signal relative to the <i>Reference Level</i> set via CONFigure:RXQuality:BER<nr>:CONTrol[:CSWitched][:TCH]:MSLot:RLEVel (see p. 6.169) and the corresponding packet data command. The levels are valid for BER tests if the MS is set to multislot operation.</p> <p>The level range quoted above is restricted by the condition that the absolute level (calculated from the reference level and the relative individual levels) must not exceed the level ranges of the RF connectors.</p> <p>Example: With output connector RF2 and a default used timeslot level of -102 dBm, the individual levels can be set in the range -35 dB to +92 dB, corresponding to absolute levels of -137 dBm to -10 dBm.</p> <p>The PDATa command refers to packet-switched data traffic channels and requires option CMU-K42.</p>				

Slot Configuration: Individual (Single-Slot, Circuit Switched)

CONFigure:RXQuality:BER<nr>:CONTrol[:CSWitched][:TCH]:LEVel[:SLOT]:ZERO <Level>
CONFigure:RXQuality:BER<nr>:CONTrol[:CSWitched][:TCH]:LEVel[:SLOT]:ONE <Level>
CONFigure:RXQuality:BER<nr>:CONTrol[:CSWitched][:TCH]:LEVel[:SLOT]:TWO <Level>
CONFigure:RXQuality:BER<nr>:CONTrol[:CSWitched][:TCH]:LEVel[:SLOT]:THree <Level>
CONFigure:RXQuality:BER<nr>:CONTrol[:CSWitched][:TCH]:LEVel[:SLOT]:FOUR <Level>
CONFigure:RXQuality:BER<nr>:CONTrol[:CSWitched][:TCH]:LEVel[:SLOT]:FIVE <Level>
CONFigure:RXQuality:BER<nr>:CONTrol[:CSWitched][:TCH]:LEVel[:SLOT]:SIX <Level>
CONFigure:RXQuality:BER<nr>:CONTrol[:CSWitched][:TCH]:LEVel[:SLOT]:SEVen <Level>

<Level>	Description of parameters	Def. value	Def. unit	FW vers.
-127 dB to +127 dB	Power of CMU in timeslot no. n	0	dB	V3.05

Description of command

These commands define the levels of the downlink (BS) TCH signal relative to the *Reference Level* set via [CONFigure:RXQuality:BER<nr>:CONTrol\[:CSWitched\]\[:TCH\]:MSLot:RLEVel](#) (see p. 6.169). The levels are valid for BER tests if the MS is set to multislot operation.

The level range quoted above is restricted by the condition that the absolute level (calculated from the reference level and the relative individual levels) must not exceed the level ranges of the RF connectors.

Example With output connector RF2 and a default used timeslot level of -102 dBm, the individual levels can be set in the range -35 dB to +92 dB, corresponding to absolute levels of -137 dBm to -10 dBm.

Slot Configuration: Individual (Single-Slot, Packet Data)

CONFigure:RXQuality:BER<nr>:CONTrol:PDATa[:TCH]:LEVel[:SLOT]:ZERO <Level>
CONFigure:RXQuality:BER<nr>:CONTrol:PDATa[:TCH]:LEVel[:SLOT]:ONE <Level>
CONFigure:RXQuality:BER<nr>:CONTrol:PDATa[:TCH]:LEVel[:SLOT]:TWO <Level>
CONFigure:RXQuality:BER<nr>:CONTrol:PDATa[:TCH]:LEVel[:SLOT]:THree <Level>
CONFigure:RXQuality:BER<nr>:CONTrol:PDATa[:TCH]:LEVel[:SLOT]:FOUR <Level>
CONFigure:RXQuality:BER<nr>:CONTrol:PDATa[:TCH]:LEVel[:SLOT]:FIVE <Level>
CONFigure:RXQuality:BER<nr>:CONTrol:PDATa[:TCH]:LEVel[:SLOT]:SIX <Level>
CONFigure:RXQuality:BER<nr>:CONTrol:PDATa[:TCH]:LEVel[:SLOT]:SEVen <Level>

<Level>	Description of parameters	Def. value	Def. unit	FW vers.
-127 dB to +127 dB	Power of CMU in timeslot no. n	0	dB	V3.40

Description of command

These commands define the levels of the downlink (BS) TCH signal relative to the *Reference Level* set via [CONFigure:RXQuality:BER<nr>:CONTrol:PDATa\[:TCH\]:MSLot:RLEVel](#) (see p. 6.169). The levels are valid for BER tests if the MS is set to multislot operation.

The level range quoted above is restricted by the condition that the absolute level (calculated from the reference level and the relative individual levels) must not exceed the level ranges of the RF connectors.

Example With output connector RF2 and a default used timeslot level of -102 dBm, the individual levels can be set in the range -35 dB to +92 dB, corresponding to absolute levels of -137 dBm to -10 dBm.

CONFigure:RXQuality:BER<nr>:CONTrol:DEFault <Enable> Default Settings

<Enable>	Description of parameters	Def. value	Def. unit	FW vers.
ON	All parameters are set to their default values	ON	-	V2.00
OFF	Some or all parameters differ from the default values			

Description of command

As a *setting command* with the setting *ON* this command sets all parameters of the subsystem to default values (the setting *OFF* causes an error message).

As a query, this command reads out whether all parameters are set to default values (*ON*) or not (*OFF*).

Subsystem RXQuality:BER:LIMit

The subsystem *RXQuality:BER:LIMit* defines tolerance values for the single shot receiver quality measurements. The subsystem corresponds to the tab *Limits* in the popup menu *Receiver Quality Configuration*.

CONFigure:RXQuality:BER<nr>:LIMit:CLII <ClassII BER>			Class II Bits	
<ClassII BER>	Description of parameters	Def. value	Def. unit	FW vers.
0 % to 100 %	Upper limit of error rate for class II bits	0.2	%	V2.00
Description of command				
This command defines an upper limit for the bit error rate of class II (unprotected bits, see chapter 4) in test setup <nr>.				
Irrespective of the test setup, the default setting is 0.2 %.				

CONFigure:RXQuality:BER<nr>:LIMit:CLIB <ClassIb BER>			Class Ib Bits	
<ClassIb BER>	Description of parameters	Def. value	Def. unit	FW vers.
0 % to 100 %	Upper limit of error rate for class Ib bits	0.4	%	V2.00
Description of command				
This command defines an upper limit for the bit error rate of class Ib (partly protected bits, see chapter 4) in the test setup <nr>.				
Irrespective of the test setup, the default setting is 0.4 %.				

CONFigure:RXQuality:BER<nr>:LIMit:FERRors <Frame Errors>			Frame Errors	
<FERRors>	Description of parameters	Def. value	Def. unit	FW vers.
0 % to 100 %	Upper limit for erased frame errors	0.1	%	V2.00
Description of command				
This command defines an upper limit for frame errors in the test setup <nr>.				
Irrespective of the test setup, the default setting is 0.1 %.				

CONFigure:RXQuality:BER<nr>:LIMit:DBLER <Data_BLER>			Data Block Error Rate	
<Data_BLER>	Description of parameters	Def. value	Def. unit	FW vers.
0 % to 100 %	Upper limit for data block error rate	10.0	%	V3.05
Description of command				
This command defines an upper limit for the data BLER in the test setup <nr>.				
Irrespective of the test setup, the default setting is 10.0 %.				

CONFigure:RXQuality:BER<nr>:LIMit:USFBler <USF_BLER>			USF Block Error Rate	
<USF_BLER>	Description of parameters	Def. value	Def. unit	FW vers.
0 % to 100 %	Upper limit for USF block error rate	1.0	%	V3.05
Description of command				
This command defines an upper limit for the USF BLER in the test setup <nr>.				
Irrespective of the test setup, the default setting is 10.0 %.				

CONFigure:RXQuality:BER<nr>:LIMit:DEFAult <Enable>		Default Settings		
<Enable>	Description of parameters	Def. value	Def. unit	FW vers.
ON	All parameters are set to their default values	ON	–	V2.00
OFF	Some or all parameters differ from the default values			
Description of command				
As a <i>setting command</i> with the setting <i>ON</i> this command sets all parameters of the subsystem to default values (the setting <i>OFF</i> causes an error message).				
As a query, this command reads out whether all parameters are set to default values (<i>ON</i>) or not (<i>OFF</i>).				

Measured Values – Subsystem RXQuality:BER

The subsystem *RXQuality:BER* measures and outputs the bit error rate and compares it with the tolerance values. The subsystem corresponds to the measurement menus *Receiver Quality* for the single shot type of measurement and measured values (*RFER*, *BER*, *BurstByBurst*).

		Scalar Results		
READ[:SCALar]:RXQuality:BER?		Start single shot measurement and return results		
FETCh[:SCALar]:RXQuality:BER?		Read out meas. results (unsynchronized)		
SAMPlE[:SCALar]:RXQuality:BER?		Read out measurement results (synchronized)		
<i>Returned values for RFER</i>		Value range	Def. value	Def. unit
ProgressTime,		0.0% to 100.0%	NAN	%
ClasslIBits,		0.000% to 100.000%	NAN	%
ClasslBBits,		0.000% to 100.000%	NAN	%
FER,		0.000% to 100.000%	NAN	%
CRCErrors,		0 to 50000	NAN	–
Status		INV PASS FAIL TLOW IMP	INV	–
Statistical Result^{*)}		RUN EFAI EPAS FAIL PASS THIG TLOW	INV	–
<i>Returned values for BER</i>		Value range	Def. value	Def. unit
ProgressTime,		0.0% to 100.0%	NAN	%
ClasslIBits,		0.000% to 100.000%	NAN	%
ClasslBBits,		0.000% to 100.000%	NAN	%
CRCErrors,		0 to 50000	NAN	–
Status		INV PASS FAIL TLOW IMP	INV	–
Statistical Result^{*)}		RUN EFAI EPAS FAIL PASS THIG TLOW	INV	–
<i>Returned values for BBB</i>		Value range	Def. value	Def. unit
ProgressTime,		0.0% to 100.0%	NAN	%
BER,		0.000% to 100.000%	NAN	%
CRCErrors,		0 to 50000	NAN	–
Status		INV PASS FAIL TLOW IMP	INV	–
Statistical Result^{*)}		RUN EFAI EPAS FAIL PASS THIG TLOW	INV	–

Returned values for BDBL	Value range	Def. value	Def. unit	FW vers.																																										
ProgressTime,	0.0% to 100.0%	NAN	%	V2.00																																										
BER,	0.000% to 100.000%	NAN	%																																											
USFBLER	0.000% to 100.000%	NAN	%																																											
DBLER	0.000% to 100.000%	NAN	%																																											
CRCErrors,	0 to 50000	NAN	–	V3.40																																										
Status	INV PASS FAIL TLOW IMP	INV	–																																											
Statistical Result^{*)}	RUN EFAI EPAS FAIL PASS THIG TLOW	INV	–																																											
Description of command																																														
<p>These commands are always queries. They start a bit-error-rate test in the single shot repetition mode and output the measurement results (see also detailed explanation of measured values in chapter 4 and table in section <i>BER Tests of PDTCHs</i>). The results depend on the measurement mode set via the <code>CONFigure:RXQuality:BER<nr>:CONTrol</code> command (RFER, BER, BBB, DBLER). They are</p> <table border="0"> <tr> <td>ProgressTime</td> <td>Relative progress of the measurement</td> </tr> <tr> <td>ClassIIbits</td> <td>(Residual) bit error rate for class II bits</td> </tr> <tr> <td>ClassIbBits</td> <td>(Residual) bit error rate for class Ib bits</td> </tr> <tr> <td>FER</td> <td>Frame erasure rate</td> </tr> <tr> <td>BER</td> <td>Bit error rate (no distinction between bit classes)</td> </tr> <tr> <td>DBLER</td> <td>Data block error rate</td> </tr> <tr> <td>USFBLER</td> <td>USF block error rate, available for packet-switched channels only (CMU-K42)</td> </tr> <tr> <td>CRCErrors</td> <td>Cyclic redundancy check (CRC) errors</td> </tr> <tr> <td>Status</td> <td>Measurement status</td> </tr> </table> <p>The following messages can be output for the measurement status:</p> <table border="0"> <tr> <td>INV</td> <td>Measurement invalid</td> <td><i>invalid</i></td> </tr> <tr> <td>PASS</td> <td>All tolerances matched</td> <td><i>passed</i></td> </tr> <tr> <td>FAIL</td> <td>Not all tolerances matched</td> <td><i>failed</i></td> </tr> <tr> <td>IMP</td> <td>Measurement impossible, therefore invalid</td> <td><i>impossible</i></td> </tr> </table> <p>^{*)} The statistical result is available only if statistical BER testing is activated via <code>CONFigure:RXQuality:BER<nr>:CONTrol:REPetition</code> (see p. 6.168) following messages can be output for the measurement status:</p> <table border="0"> <tr> <td>INV</td> <td>Measurement invalid</td> <td><i>invalid</i></td> </tr> <tr> <td>PASS</td> <td>All tolerances matched</td> <td><i>passed</i></td> </tr> <tr> <td>FAIL</td> <td>Not all tolerances matched</td> <td><i>failed</i></td> </tr> <tr> <td>IMP</td> <td>Measurement impossible, therefore invalid</td> <td><i>impossible</i></td> </tr> </table>					ProgressTime	Relative progress of the measurement	ClassIIbits	(Residual) bit error rate for class II bits	ClassIbBits	(Residual) bit error rate for class Ib bits	FER	Frame erasure rate	BER	Bit error rate (no distinction between bit classes)	DBLER	Data block error rate	USFBLER	USF block error rate, available for packet-switched channels only (CMU-K42)	CRCErrors	Cyclic redundancy check (CRC) errors	Status	Measurement status	INV	Measurement invalid	<i>invalid</i>	PASS	All tolerances matched	<i>passed</i>	FAIL	Not all tolerances matched	<i>failed</i>	IMP	Measurement impossible, therefore invalid	<i>impossible</i>	INV	Measurement invalid	<i>invalid</i>	PASS	All tolerances matched	<i>passed</i>	FAIL	Not all tolerances matched	<i>failed</i>	IMP	Measurement impossible, therefore invalid	<i>impossible</i>
ProgressTime	Relative progress of the measurement																																													
ClassIIbits	(Residual) bit error rate for class II bits																																													
ClassIbBits	(Residual) bit error rate for class Ib bits																																													
FER	Frame erasure rate																																													
BER	Bit error rate (no distinction between bit classes)																																													
DBLER	Data block error rate																																													
USFBLER	USF block error rate, available for packet-switched channels only (CMU-K42)																																													
CRCErrors	Cyclic redundancy check (CRC) errors																																													
Status	Measurement status																																													
INV	Measurement invalid	<i>invalid</i>																																												
PASS	All tolerances matched	<i>passed</i>																																												
FAIL	Not all tolerances matched	<i>failed</i>																																												
IMP	Measurement impossible, therefore invalid	<i>impossible</i>																																												
INV	Measurement invalid	<i>invalid</i>																																												
PASS	All tolerances matched	<i>passed</i>																																												
FAIL	Not all tolerances matched	<i>failed</i>																																												
IMP	Measurement impossible, therefore invalid	<i>impossible</i>																																												

CALCulate:RXQuality:BER:LIMit:MATChing?			Limit Matching																							
Returned values for RFER	Value range	Def. value	Def. unit																							
Total,	PASS FAIL INV TLOW IMP	INV	–																							
ClassIBits,	NMAU INV OK	INV	–																							
ClassbBits,	NMAU INV OK	INV	–																							
FER,	NMAU INV OK	INV	–																							
CRCErrors	NMAU INV OK	INV	–																							
Returned values for BER	Value range	Def. value	Def. unit																							
Total,	PASS FAIL INV TLOW IMP	INV	–																							
ClassIBits,	NMAU INV OK	INV	–																							
ClassbBits,	NMAU INV OK	INV	–																							
CRC	NMAU INV OK	INV	–																							
Returned values for BBB	Value range	Def. value	Def. unit																							
Total,	PASS FAIL INV TLOW IMP	INV	–																							
BER,	NMAU INV OK	INV	–																							
CRCErrors	NMAU INV OK	INV	–																							
Returned values for BDBL	Value range	Def. value	Def. unit	FW vers.																						
Total,	PASS FAIL INV TLOW IMP	INV	–	V3.40																						
BER,	NMAU INV OK	INV	–																							
USFBLER	NMAU INV OK	INV	–																							
DBLER	NMAU INV OK	INV	–																							
CRCErrors	NMAU INV OK	INV	–																							
Description of command																										
<p>This command is always a query. It indicates whether and in which way the tolerances for the bit error rate test (see command above) have been exceeded. See also detailed explanation of measured values in chapter 4 and table in section <i>BER Tests of PDTCHs</i>.</p> <p>The following messages can be output for the measured quantities:</p> <table border="0"> <tr> <td>PASS</td> <td>all tolerances matched</td> <td><i>passed</i></td> </tr> <tr> <td>FAIL</td> <td>Not all tolerances matched</td> <td><i>failed</i></td> </tr> <tr> <td>INV</td> <td>Invalid measurement</td> <td><i>invalid</i></td> </tr> <tr> <td>IMP</td> <td>Measurement impossible, therefore invalid</td> <td><i>impossible</i></td> </tr> <tr> <td>NMAU</td> <td>Tolerance exceeded</td> <td><i>not matching, underflow</i></td> </tr> <tr> <td>INV</td> <td>Invalid measurement</td> <td><i>invalid</i></td> </tr> <tr> <td>OK.</td> <td>all tolerances matched</td> <td></td> </tr> </table>						PASS	all tolerances matched	<i>passed</i>	FAIL	Not all tolerances matched	<i>failed</i>	INV	Invalid measurement	<i>invalid</i>	IMP	Measurement impossible, therefore invalid	<i>impossible</i>	NMAU	Tolerance exceeded	<i>not matching, underflow</i>	INV	Invalid measurement	<i>invalid</i>	OK.	all tolerances matched	
PASS	all tolerances matched	<i>passed</i>																								
FAIL	Not all tolerances matched	<i>failed</i>																								
INV	Invalid measurement	<i>invalid</i>																								
IMP	Measurement impossible, therefore invalid	<i>impossible</i>																								
NMAU	Tolerance exceeded	<i>not matching, underflow</i>																								
INV	Invalid measurement	<i>invalid</i>																								
OK.	all tolerances matched																									

Receiver Quality – Continuous

The subsystem *RXQuality:BAverage* contains the commands for receiver quality measurement with continuous repetition. The subsystem corresponds to the main menu *Receiver Quality*, application *BER Average* and the corresponding parts of the associated popup menu *Receiver Quality Configuration*.

Control of Measurement – Subsystem *RXQuality:BAverage*

The subsystem *RXQuality:BAverage* controls the *Continuous* measurement.

INITiate:RXQuality:BAverage	Start new measurement	⇒	<i>RUN</i>
ABORt:RXQuality:BAverage	Abort running measurement and switch off	⇒	<i>OFF</i>
STOP:RXQuality:BAverage	Stop measurement	⇒	<i>STOP</i>
CONTinue:RXQuality:BAverage	Next measurement step (only <i>stepping mode</i>)	⇒	<i>RUN</i>
Description of command			FW vers.
These commands have no query form. They start or stop the Continuous measurement, setting it to the status indicated in the top right column.			V2.00

CONFigure:RXQuality:BAverage:EREPorting <Mode>		Event Reporting		
<Mode>	Description of parameters	Def. value	Def. unit	FW vers.
SRQ 	Service request	OFF	–	V2.00
SOPC 	Single operation complete			
SRSQ 	SRQ and SRSQ			
OFF	No reporting			
Description of command				
This command defines the events generated when the measurement is terminated or stopped (<i>event reporting</i> , see chapter 5).				

FETCH:RXQuality:BAverage:STATus?		Measurement Status		
Return	Description of parameters	Def. value	Def. unit	FW vers.
OFF 	Measurement in the <i>OFF</i> state (*RST or ABORt)	OFF	–	V2.00
RUN 	Running (after INITiate, CONTinue or READ)			
STOP 	Stopped (STOP)			
ERR 	<i>OFF</i> (could not be started)			
STEP 	Stepping mode (<stepmode>=STEP)			
RDY,	Stopped according to repetition mode and stop condition			
1 to 500 	Counter for current evaluation period (frame)			
NONE	No averaging	NONE	–	
Description of command				
This command is always a query. It returns the status of the measurement (see chapter 5).				

Subsystem RXQuality:BAverage:CONTRol

The subsystem *RXQuality:BAverage:CONTRol* sets the parameters for the continuous receiver quality measurement. The subsystem corresponds to the tab *Control* in the popup menu *Receiver Quality Configuration*.

Meas. Mode, Average				
CONFigure:RXQuality:BAverage:CONTRol[:CSWitched] <Mode>, <FramesToAverage>				
CONFigure:RXQuality:BAverage:CONTRol:PDATa <Mode>, <FramesToAverage>				
<Mode>	Description of parameters	Def. value	Def. unit	
RFER 	Residual bit error rate, frame erasure rate	BER	–	
BER	Bit error rate			
BBB	Burst by burst			
BDBL	BER/Data Block Error Rate			
<FramesToAverage>	Description of parameters	Def. value	Def. unit	FW vers.
1 to 500 	No. of frames to average	100	–	V2.00
OFF	No average (only 1 frame considered)			
Description of command				
This command defines the measured value and the number of frames to be averaged in the continuous measurement, constituting a statistics cycle. For definition of the measured value (BER, RBER etc.) see chapter 4.				

Stop Condition				
CONFigure:RXQuality:BAverage:CONTRol:REPetition <StopCondition> ,<Stepmode>				
<StopCondition>	Description of parameters	Def. value	Def. Unit	
ALIMits 	Measurement aborted when all limits are exceeded	FLIM	–	
FLIMit 	Aborted when first limit value is exceeded			
NONE	Not aborted, measurement over all frames			
<Stepmode>	Description of parameters	Def. value	Def. Unit	FW vers.
STEP 	Interrupt measurement after each statistics cycle	NONE	–	V2.00
NONE	Continue measurement according to its rep. mode			
Description of command				
This command determines the stop condition and the stepping mode for the measurement.				

TCH BER Level, Used Timeslot				
CONFigure:RXQuality:BAverage:CONTRol[:TCH]:LEVel:UTIMeslot <Level>				
<Level>	Description of parameters	Def. value	Def. unit	FW vers.
–137 dBm to –27 dBm	RF1 level in used timeslot	–102.0	dBm	V2.00
–137 dBm to –10 dBm	RF2 level in used timeslot	–102.0		
–90 dBm to +13 dBm	RF3 OUT level in used timeslot	–90.0		
Description of command				
This command defines the absolute level of the traffic channel (<i>TCH</i>) in the used timeslot for the continuous application. This level applies to the <i>Receiver Quality</i> measurement only				

TCH BER Level, Unused Timeslot

CONFigure:RXQuality:BAverage:CONTRol[:TCH]:LEVel:UNTimeslot <Level>

<Level>	Description of parameters	Def. value	Def. unit	FW vers.
-127 dB to +127 dB	Level in unused timeslot	-18.0	dB	V2.00

Description of command

This command defines the relative level of the traffic channel (*TCH*) in the unused timeslot for the continuous application. This level applies to the receiver quality measurement only. The value range mentioned above is valid provided that the sum of the absolute level of the used timeslot and the relative value for the unused timeslot does not exceed the value ranges for the absolute level of the used timeslot (for RF1, RF2 and RF3 OUT).

Reference Level, Multislot

CONFigure:RXQuality:BAverage:CONTRol[:CSWitched][:TCH]:MSLot:RLEVel <Level>
CONFigure:RXQuality:BAverage:CONTRol:PDATa[:TCH]:MSLot:RLEVel <Level>

<Level>	Description of parameters	Def. value	Def. unit	FW vers.
-137 dBm to -27 dBm	RF1 reference level	-102.0	dBm	V3.05
-137 dBm to -10 dBm	RF2 reference level	-102.0	dBm	
-90 dBm to +13 dBm	RF3 OUT reference level	-90.0	dBm	

Description of command

These commands define the reference value for the individual downlink (BS) TCH signal levels used for the multislot BAverage test on circuit switched and packet data channels. See command [CONFigure:RXQuality:BAverage:CONTRol\[:CSWitched\]\[:TCH\]:MSLot:LEVel:INDividual](#) on p. 6.177 and the corresponding packet data command.

Slot Configuration: Individual (Multislot)

CONFigure:RXQuality:BAverage:CONTRol[:CSWitched][:TCH]:MSLot:LEVel:INDividual
CONFigure:RXQuality:BAverage:CONTRol:PDATa[:TCH]:MSLot:LEVel:INDividual
<Level_0>, ..., <Level_7>

<Level_n>	Description of parameters	Def. value	Def. unit	FW vers.
-127 dB to +127 dB	Power of CMU in timeslot no. n	0	dB	V3.05

Description of command

This command defines the levels in all 8 timeslots of the downlink (BS) TCH signal relative to the *Reference Level* set via [CONFigure:RXQuality:BAverage:CONTRol\[:CSWitched\]\[:TCH\]:MSLot:RLEVel](#) (see p. 6.177) and the corresponding packet data command. The levels are valid for BER tests if the MS is set to multislot operation.

The level range quoted above is restricted by the condition that the absolute level (calculated from the reference level and the relative individual levels) must not exceed the level ranges of the RF connectors.

Example: With output connector RF2 and a default used timeslot level of -102 dBm, the individual levels can be set in the range -35 dB to +92 dB, corresponding to absolute levels of -137 dBm to -10 dBm.

The PDATa command refers to packet-switched data traffic channels and requires option CMU-K42.

CONFigure:RXQuality:BAverage:CONTRol:DEFault <Enable>		Default Settings		
<Enable>	Description of parameters	Def. value	Def. unit	FW vers.
ON	The parameters are set to default values	ON	–	V2.00
OFF	Some or all parameters differ from the default value			
Description of command				
As a <i>setting command</i> with the setting <i>ON</i> this command sets all parameters of the subsystem to default values (the setting <i>OFF</i> causes an error message).				
As a query, this command reads out whether all parameters are set to default values (<i>ON</i>) or not (<i>OFF</i>).				

Subsystem RXQuality:BAverage:LIMit

The subsystem *RXQuality:BAverage:LIMit* defines tolerance values for the continuous receiver quality measurement. The subsystem corresponds to the tab *Limits* in the popup menu *Receiver Quality Configuration*.

CONFigure:RXQuality:BAverage:LIMit:CLII <ClassII BER>		Class II Bits		
<ClassII BER>	Description of parameters	Def. value	Def. unit	FW vers.
0 % to 100 %	Upper limit of error rate for class II bits	0.2	%	V2.00
Description of command				
This command defines an upper limit for the bit error rate of class II (unprotected bits, see chapter 4) for continuous application.				

CONFigure:RXQuality:BAverageLIMit:CLIB <ClassIb BER>		Class Ib Bits		
<ClassIb BER>	Description of parameters	Def. value	Def. unit	FW vers.
0 % to 100 %	Upper limit of error rate for class Ib bits	0.4	%	V2.00
Description of command				
This command defines an upper limit for the bit error rate of class Ib (partly protected bits, see chapter 4) for the continuous application.				

CONFigure:RXQuality:BAverage:LIMit:FERRors <Frame Errors>		Frame Errors		
<FERRors>	Description of parameters	Def. value	Def. unit	FW vers.
0 % to 100 %	Upper limit for erased frame errors	0.1	%	V2.00
Description of command				
This command defines an upper limit for the relative portion of invalid and therefore erased frames (<i>frame erasure rate</i> , see chapter 4) in the measurement of the residual bit error rate (<i>RB ER</i> , see command <code>CONFigure:RXQuality:BAverage:CONTRol</code>) and for the continuous application.				

CONFigure:RXQuality:BAverage:LIMit:DBLER <Data_BLER>		Data Block Error Rate		
<Data_BLER>	Description of parameters	Def. value	Def. unit	FW vers.
0 % to 100 %	Upper limit for data block error rate	10.0	%	V3.05
Description of command				
This command defines an upper limit for the data BLER.				

CONFigure:RXQuality:BAverage:LIMit:USFBler <USF_BLER>		USF Block Error Rate		
<USF_BLER>	Description of parameters	Def. value	Def. unit	FW vers.
0 % to 100 %	Upper limit for USF block error rate	10.0	%	V3.05
Description of command				
This command defines an upper limit for the USF BLER.				

CONFigure:RXQuality:BAverage:LIMit:DEfault <Enable>		Default Settings		
<Enable>	Description of parameters	Def. value	Def. unit	FW vers.
ON OFF	The parameters are set to default values Some or all parameters differ from the default value	ON	–	V2.00
Description of command				
As a <i>setting command</i> with the setting <i>ON</i> this command sets all parameters of the subsystem to default values (the setting <i>OFF</i> causes an error message).				
As a query, this command reads out whether all parameters are set to default values (<i>ON</i>) or not (<i>OFF</i>).				

Measured Values – Subsystem RXQuality:BAverage

The subsystem *RXQuality:BAverage* contains the commands for measurement and output of the bit error rate and its comparison with the tolerance values. The subsystem corresponds to the measurement menus *Receiver Quality* for the continuous measurement.

FETCh[:SCALar]:RXQuality:BAverage?		Scalar Results		
SAMPlE[:SCALar]:RXQuality:BAverage?		Read out results (synchronized)		
Returned values for RFER	Value range	Def. value	Def. unit	
ProgressTime,	0.0 to 100.0 %	NAN	%	
ClassIBits,	0.000 to 100.000 %	NAN	%	
ClasslBbits,	0.000 to 100.000 %	NAN	%	
FER,	0.000 to 100.000 %	NAN	%	
CRCErrors,	0 to 500	NAN	–	
Status	INV PASS FAIL TLOW IMP	INV	–	
Returned values for BER	Value range	Def. value	Def. unit	
ProgressTime,	0.0 to 100.0 %	NAN	%	
ClassIBits,	0.000 to 100.000 %	NAN	%	
ClasslBbits,	0.000 to 100.000 %	NAN	%	
CRCErrors,	0 to 500	NAN	–	
Status	INV PASS FAIL TLOW IMP	INV	–	
Returned values for BBB	Value range	Def. value	Def. unit	
ProgressTime,	0.0% to 100.0%	NAN	%	
ClassIBits,	0.000% to 100.000%	NAN	%	
CRCErrors,	0 to 500	NAN	–	
Status	INV PASS FAIL TLOW IMP	INV	–	

Returned values for BDBL	Value range	Def. value	Def. unit	FW vers.																														
ProgressTime,	0.0% to 100.0%	NAN	%	V2.00																														
BER,	0.000% to 100.000%	NAN	%																															
USFBLER	0.000% to 100.000%	NAN	%																															
DBLER	0.000% to 100.000%	NAN	%																															
CRCErrors,	0 to 500	NAN	–																															
Status	INV PASS FAIL TLOW IMP	INV	–																															
Description of command																																		
<p>These commands are always queries. They start a bit error rate test in the continuous repetition mode and output the measurement results (see also detailed explanation of measured values in chapter 4). The results depend on the measurement mode set via the <code>CONFigure:RXQuality:BAverage<nr> :CONTrol</code> command (RFER, BER etc.). They are</p> <table> <tr> <td>ProgressTime</td> <td>Relative progress of the measurement</td> </tr> <tr> <td>ClassIIBits</td> <td>(Residual) bit error rate for class II bits</td> </tr> <tr> <td>ClassIbBits</td> <td>(Residual) bit error rate for class Ib bits</td> </tr> <tr> <td>BER</td> <td>Bit error rate (no distinction between bit classes)</td> </tr> <tr> <td>FER</td> <td>Frame erasure rate</td> </tr> <tr> <td>DBLER</td> <td>Data Block Error Rate</td> </tr> <tr> <td>USFBLER</td> <td>USF block error rate, available for packet-switched channels only (CMU-K42)</td> </tr> <tr> <td>CRCErrors</td> <td>Cyclic redundancy check (CRC) errors</td> </tr> <tr> <td>Status</td> <td>Measurement status</td> </tr> </table> <p>The following messages can be output for the measurement status:</p> <table> <tr> <td>INV</td> <td>Measurement invalid</td> <td><i>invalid</i></td> </tr> <tr> <td>PASS</td> <td>All tolerances matched</td> <td><i>passed</i></td> </tr> <tr> <td>FAIL</td> <td>Not all tolerances matched</td> <td><i>failed</i></td> </tr> <tr> <td>IMP</td> <td>Measurement impossible, therefore invalid</td> <td><i>impossible</i></td> </tr> </table>					ProgressTime	Relative progress of the measurement	ClassIIBits	(Residual) bit error rate for class II bits	ClassIbBits	(Residual) bit error rate for class Ib bits	BER	Bit error rate (no distinction between bit classes)	FER	Frame erasure rate	DBLER	Data Block Error Rate	USFBLER	USF block error rate, available for packet-switched channels only (CMU-K42)	CRCErrors	Cyclic redundancy check (CRC) errors	Status	Measurement status	INV	Measurement invalid	<i>invalid</i>	PASS	All tolerances matched	<i>passed</i>	FAIL	Not all tolerances matched	<i>failed</i>	IMP	Measurement impossible, therefore invalid	<i>impossible</i>
ProgressTime	Relative progress of the measurement																																	
ClassIIBits	(Residual) bit error rate for class II bits																																	
ClassIbBits	(Residual) bit error rate for class Ib bits																																	
BER	Bit error rate (no distinction between bit classes)																																	
FER	Frame erasure rate																																	
DBLER	Data Block Error Rate																																	
USFBLER	USF block error rate, available for packet-switched channels only (CMU-K42)																																	
CRCErrors	Cyclic redundancy check (CRC) errors																																	
Status	Measurement status																																	
INV	Measurement invalid	<i>invalid</i>																																
PASS	All tolerances matched	<i>passed</i>																																
FAIL	Not all tolerances matched	<i>failed</i>																																
IMP	Measurement impossible, therefore invalid	<i>impossible</i>																																

CALCulate:RXQuality:BAverage:LIMit:MATChing?				Limit Matching
Returned values for RFER	Value range	Def. value	Def. unit	
Total,	PASS FAIL INV TLOW IMP	INV	–	
ClassIIBits,	NMAU INV OK	INV	–	
ClassIbBits,	NMAU INV OK	INV	–	
FER,	NMAU INV OK	INV	–	
CRCErrors	NMAU INV OK	INV	–	
Returned values for BER	Value range	Def. value	Def. unit	
Total,	PASS FAIL INV TLOW IMP	INV	–	
ClassIIBits,	NMAU INV OK	INV	–	
ClassIbBits,	NMAU INV OK	INV	–	
CRC	NMAU INV OK	INV	–	
Returned values for BBB	Value range	Def. value	Def. unit	
Total,	PASS FAIL INV TLOW IMP	INV	–	
BER,	NMAU INV OK	INV	–	
CRCErrors	NMAU INV OK	INV	–	
Returned values for BDBL	Value range	Def. value	Def. unit	FW vers.
Total,	PASS FAIL INV TLOW IMP	INV	–	V2.00
BER,	NMAU INV OK	INV	–	
USFBLER	NMAU INV OK	INV	–	
DBLER	NMAU INV OK	INV	–	
CRCErrors	NMAU INV OK	INV	–	
Description of command				
This command is always a query. It indicates whether and in which way the tolerances for the bit error rate test (see command above) have been exceeded.				
The following messages can be output for the measured quantities:				
PASS	all tolerances matched			<i>passed</i>
FAIL	Not all tolerances matched			<i>failed</i>
INV	Invalid measurement			<i>invalid</i>
IMP	Measurement impossible, therefore invalid			<i>impossible</i>
NMAU	Tolerance exceeded			<i>not matching, underflow</i>
INV	Invalid measurement			<i>invalid</i>
OK.	all tolerances matched			

Receiver Quality – Block Error Ratio

The subsystem *RXQuality:BLER* contains the commands for the Block Error Ratio (BLER) measurement. The subsystem corresponds to the main menu *Receiver Quality*, application *BLER* and the corresponding parts of the associated popup menu *Receiver Quality Configuration*.

Control of Measurement – Subsystem *RXQuality:BLER*

The subsystem *RXQuality:BLER* controls the BLER measurement.

INITiate:RXQuality:BLER	Start new measurement	⇒	<i>RUN</i>
ABORt:RXQuality:BLER	Abort running measurement and switch off	⇒	<i>OFF</i>
STOP:RXQuality:BLER	Stop measurement	⇒	<i>STOP</i>
CONTinue:RXQuality:BLER	Next measurement step (only <i>stepping mode</i>)	⇒	<i>RUN</i>
Description of command			FW vers.
These commands have no query form. They start or stop the BLER measurement, setting it to the status indicated in the top right column.			V3.10

CONFigure:RXQuality:BLER:EREPorting <Mode>		Event Reporting		
<Mode>	Description of parameters	Def. value	Def. unit	FW vers.
SRQ	Service request	OFF	–	V3.10
SOPC	Single operation complete			
SRSQ	SRQ and SRSQ			
OFF	No reporting			
Description of command				
This command defines the events generated when the measurement is terminated or stopped (<i>event reporting</i> , see chapter 5).				

FETCh:RXQuality:BLER:STATus?		Measurement Status		
Return	Description of parameters	Def. value	Def. unit	FW vers.
OFF	Measurement in the <i>OFF</i> state (* <i>RST</i> or <i>ABORt</i>)	OFF	–	V3.10
RUN	Running (after <i>INITiate</i> , <i>CONTinue</i> or <i>READ</i>)			
STOP	Stopped (<i>STOP</i>)			
ERR	<i>OFF</i> (could not be started)			
STEP	Stepping mode (< <i>stepmode</i> >= <i>STEP</i>)			
RDY,	Stopped according to repetition mode and stop cond.			
1 to 2000	Counter for current evaluation period (RLC blocks)			
NONE	Statistic count set to <i>OFF</i> (only one block)	NONE	–	
Description of command				
This command is always a query. It returns the status of the measurement (see chapter 5).				

Subsystem RXQuality:BLER:CONTROL

The subsystem *RXQuality:BLER:CONTROL* defines parameters controlling the scope of the BLER measurement. The subsystem corresponds to the *Control* tab in the popup menu *Receiver Quality Configuration*.

CONFigure:RXQuality:BLER:CONTROL:REPetition <Repetition> ,<Stepmode>				Stop Condition
<Repetition>	Description of parameters	Def. value	Def. unit	
CONTInuous SINGleshot 1 to 10000	Continuous measurement (until STOP or ABORT) Single shot measurement (until Status = RDY) Multiple measurement (counting, until Status = STEP RDY)	SING	–	
<StopCond>	Description of parameters	Def. value	Def. unit	
NONE	Continue measurement even in case of error	NONE	–	
<Stepmode>	Description of parameters	Def. value	Def. unit	FW vers.
STEP NONE	Interrupt measurement after each statistics cycle Continue measurement according to its rep. mode	NONE	–	V2.00
Description of command				
This command determines the number of statistics cycles, the stop condition and the stepping mode for the measurement. The second parameter is reserved for the limit check and has no effect at present.				
Note: In the case of READ commands (READ: ...), the <Repetition> parameter has no effect; the measurement is always stopped after a single shot				

CONFigure:RXQuality:BLER:CONTROL:RLBCount <Blocks> RLC Block Count				
<Blocks>	Description of parameters	Def. value	Def. unit	FW vers.
100 to 2000	Number of RLC blocks	2000	(blocks)	V3.10
Description of command				
This command sets the number of RLC blocks to be sent and evaluated in a single shot BLER measurement.				

CONFigure:RXQuality:BLER:CONTROL:PDATA[:TCH]:MSLot:RLEVEL <Level>					Reference Level, Multislot
<Level>	Description of parameters	Def. value	Def. unit	FW vers.	
–137 dBm to –27 dBm	RF1 reference level	–85	dBm	V3.10	
–137 dBm to –10 dBm	RF2 reference level	–85	dBm		
–90 dBm to +13 dBm	RF3 OUT reference level	–85	dBm		
Description of command					
This command defines the reference value for the individual downlink (BS) TCH signal levels used for the multislot BLER test on packet data channels. See command CONFigure:RXQuality:BLER:CONTROL:PDATA[:TCH]:MSLot:LEVEL:INDividual.					

CONFigure:RXQuality:BLER:CONTROL:PDATA[:TCH]:MSLot:LEVEL:INDividual					Slot Configuration: Individual (Multislot)
<Level_0>, ..., <Level_7>					
<Level_n>	Description of parameters	Def. value	Def. unit	FW vers.	
–127 dB to +127 dB	Power of CMU in timeslot no. n	0	dB	V3.10	

Description of command				
<p>This command defines the levels in all 8 timeslots of the downlink (BS) TCH signal relative to the <i>Reference Level</i>/set via <code>CONFigure:RXQuality:BLER:CONTRol:PDATA[:TCH]:MSLot:RLEVEL</code> and the corresponding packet data command. The levels are valid for BLER tests if the MS is set to multislot operation.</p> <p>The level range quoted above is restricted by the condition that the absolute level (calculated from the reference level and the relative individual levels) must not exceed the level ranges of the RF connectors.</p> <p>Example: With output connector RF2 and a default used timeslot level of -85 dBm, the individual levels can be set in the range -52 dB to +75 dB, corresponding to absolute levels of -137 dBm to -10 dBm.</p>				

CONFigure:RXQuality:BLER:CONTRol:DLDCycle <Blocks> DL Resources in Use				
<Blocks>	Description of parameters	Def. value	Def. unit	FW vers.
RB1 RB2 ... RB12	n/12 of the DL RLC blocks where n= 1 ... 12	RB12	–	V3.50
Description of command				
<p>This command selects the percentage of DL RLC blocks assigned to the MS under test and used for the BLER calculation.</p>				

CONFigure:RXQuality:BLER:CONTRol:DEFault <Enable>				Default Settings
<Enable>	Description of parameters	Def. value	Def. unit	FW vers.
ON OFF	The parameters are set to default values Some or all parameters differ from the default value	ON	–	V3.10
Description of command				
<p>As a <i>setting command</i> with the setting <i>ON</i> this command sets all parameters of the subsystem to default values (the setting <i>OFF</i> causes an error message).</p> <p>As a query, this command reads out whether all parameters are set to default values (<i>ON</i>) or not (<i>OFF</i>).</p>				

Measured Values – Subsystem RXQuality:BLER

The subsystem *RXQuality:BLER* contains the commands for measurement and output of the Block Error Ratio. The subsystem corresponds to the measurement menu *Receiver Quality* for the BLER measurement.

		Scalar Results		
READ[:SCALar]:RXQuality:BLER?		Start single shot measurement and return results		
FETCh[:SCALar]:RXQuality:BLER?		Read out results (unsynchronized)		
SAMPlE[:SCALar]:RXQuality:BLER?		Read out results (synchronized)		
Returned values	Value range	Def. value	Def. unit	FW vers.
Progress Time	0.000 % to 100.000 %	NAN	%	V3.10
BLER Overall	0.000 % to 100.000 %	NAN	%	
Overall No. of RLC Blocks,	1 to 2000	NAN	–	
BLER Slot 0,	0.000 % to 100.000 %	NAN	%	
RLC Blocks Slot 0,	0 to 2 ³² – 1	NAN	–	
...				
BLER Slot 7,	0.000 to 100.000 %	NAN	%	
RLC Blocks Slot 7,	0 to 2 ³² – 1	NAN	–	
RLC Data Rate Overall	0 kbit/s to 80 kbit/s	NAN	kbit/s	
RLC Data Rate Slot 0	0 kbit/s to 80 kbit/s	NAN	kbit/s	V3.40
...				
RLC Data Rate Slot 7	0 kbit/s to 80 kbit/s	NAN	kbit/s	
Long Term Throughput	0 kbit/s to 80 kbit/s	NAN	kbit/s	V3.50
Long Term Throughput/Slot	0 kbit/s to 80 kbit/s	NAN	kbit/s	V3.50
Description of command				
<p>These commands are always queries. They start a Block Error Ratio test in the continuous repetition mode and output the measurement results (see also detailed explanation of measured values in chapter 4). <i>Progress Time</i> is the relative progress of the BLER measurement. In a single shot measurement the <i>RLC Data Rate</i> is only available if the number of transferred blocks (command <code>CONFigure:RXQuality:BLER:CONTrol:RLBCount</code>) is larger or equal than 400 times the number of active DL slots.</p>				

Symbolic Status Event Register Evaluation

The following commands are used to retrieve the events reported in function groups *GSM400/850/900/1800/1900-MS Signalling*; see section *Symbolic Status Event Register Evaluation* in Chapter 5 of the CMU operating manual.

STATus:OPERation:SYMBOLic:ENABle <Event>{,<Event>}		Symbolic status evaluation		
<i>Parameter list</i>	Parameter description	Def. Value ⁵	Default Unit	FW vers.
<Event>{,<Event>} NONE	List of symbols for events to be reported No event reported	NONE	–	V3.05
Command description				
This command enables event reporting for one or several events in the current <i>GSMxxx-MS Signalling</i> function group, i.e. it sets the corresponding bits in the <code>STATus:OPERation:CMU:SUM<nr>:CMU<nr_event>:ENABle</code> register (<nr> = 1 2, <nr_event> denotes the current function group) and in all sum registers up to the status byte. The events and the corresponding symbols for the function group are listed in Chapter 5 (see section <i>Status Registers</i>). The symbols may be entered in arbitrary order.				

STATus:OPERation:SYMBOLic[:EVENT]?		Symbolic status evaluation		
<i>Response</i>	Parameter description	Def. Value ⁶	Default Unit	FW vers.
NONE <Event>{,<Event>}	No event in the <i>RF</i> function group List of reported events	NONE	–	V3.05
Command description				
This command is always a query. It lists the events reported in the current <i>GSMxxx-MS Signalling</i> function group and deletes these events in the <code>STATus:OPERation:CMU:SUM<nr>:CMU<nr_event>:EVENT</code> register as well as in all sum registers.				

⁵ The default values quoted in this command are achieved after a `STATus:PRESet` command. `*RST` does not overwrite the entries in the status registers; see section *Reset Values of the Status Reporting Systems* in chapter 5.

⁶ The default values quoted in this command are achieved after a `*CLS` command. `*RST` does not overwrite the entries in the status registers; see section *Reset Values of the Status Reporting Systems* in chapter 5.

Connection Control (Signalling only)

In the *Signalling* mode, the CMU is able to generate BCCH and TCH signals and to set up a connection to the mobile. A broad range of signalling parameters can be configured and measurements may be performed with a connection established.

The remote-control commands presented in this section control the signalling (connection setup and release, services, signalling parameters), determine the inputs and outputs as well as the reference frequency. They correspond to the settings in the popup menu of the softkey *Connect. Control* located to the right of the headline of each main menu.

Important note: Current vs. default values

Some parameters of the CMU can assume two independent values: The **default** value is used to set up a connection; it can be modified in the signalling states Signal Off, Signal On and Registered. The **current** value is valid during the connection (signalling state Call Established). Whenever the CMU goes into the Call Established state the default value overwrites the current value. The current value can still be changed during the connection, however, modifying this current value does not alter the default value. An example for such a double parameter in GSM-MS is the BS signal level in the used and unused timeslots.

Default values are set with a *CONFigure ... command*, current values are set with the corresponding *PROCedure ... command*.

Subsystem LEVel (Input Level)

The subsystem *LEVel* controls the level in the RF input signal path. It corresponds to the table section *Analyzer Level* in the *MS Signal* tab of the *Connection Control* menu.

[SENSe:]LEVel:MODE <Mode>		Input Level – Mode		
<Mode>	Description of parameters	Def. value	Def. unit	FW vers.
MANual	Manual setting of max. input level	PCLevel	–	V1.15
PCLevel	According to power control level of the mobile			
AUTomatic	Automatic setting corresponding to average power of signal applied			
Description of command				
This command defines the mode for setting the maximum input level.				

[SENSe:]LEVel:MAXimum <Level>		Max. Level		
<Level>	Description of parameters	Def. value	Def. unit	FW vers.
–40 dBm to +53 dBm	Maximum input level for RF1	+30.0	dBm	V1.15
–54 dBm to +39 dBm	Maximum input level for RF2	+30.0	dBm	
–77 dBm to 0 dBm	Maximum input level for RF 4 IN	0.0	dBm	
Description of command				
This command defines the maximum input level. The value range depends on the RF input used and the external attenuation set (see [SENSe:]CORRection:LOSS:INPut<nr>[:MAGNitude] command).				

[SENSe:]LEVel:ATTenuation <Mode>			Attenuation	
<Mode>	Description of parameters	Def. value	Def. unit	FW vers.
NORMal	Mixer level in normal range	LNOise	–	V1.15
LNOise	Low noise (mixer level 10 dB higher than in normal setting)			
LDIStortion	Low distortion (mixer level 10 dB lower than in normal setting)			
Description of command				
This command tunes the RF analyzer for normal setting, low noise level (full dynamic range), or low distortion (high intermodulation spacing).				

[SENSe:]LEVel:DEFault <Enable>			Default Settings	
<Enable>	Description of parameters	Def. value	Def. unit	FW vers.
ON	All parameters are set to their default values	ON	–	V2.00
OFF	All or some parameters differ from the default values			
Description of command				
If used as a setting command with the parameter <i>ON</i> this command sets all parameters of the subsystem to their default values (the setting <i>OFF</i> causes an error message).				
If used as a query the command returns whether all parameters are set to their default values (<i>ON</i>) or not (<i>OFF</i>).				

Subsystem TRIGger (Trigger Mode)

The subsystem *TRIGger* defines the trigger mode. It corresponds to the *Trigger* tab in the *Connection Control* menu.

TRIGger[:SEqueNce]:SOURce <Source>			Trigger Source	
<Source>	Description of parameters	Def. value	Def. unit	FW vers.
SIGNalling	The measurement is triggered by the signalling unit	SIGN	–	V1.15
FRUN	The measurement is triggered by the TDMA timing (free-run mode) of the analyzed signal			
RFPower	Wideband RF power trigger			
IFPower	Narrow-band IF power trigger			
Description of command				
This command defines the source for the trigger event. The settings <i>RFPower</i> and <i>IFPower</i> require burst signals. The setting <i>FRUN</i> requires burst signals with incorporated training sequence.				

TRIGger[:SEqueNce]:THREshold:RFPower <Threshold>			Level – RF Power	
<Threshold>	Parameter description	Def. value	Default unit	FW vers.
LOW	Low trigger threshold (<i>RF Max. Level</i> – 26 dB)	MEDIUM	–	V3.10
MEDium	Medium trigger threshold (<i>RF Max. Level</i> – 16 dB)			
HIGH	High trigger threshold (<i>RF Max. Level</i> – 6 dB)			
Command description				
This command sets the RF input signal level at which the measurement is triggered relative to the maximum RF input level; see [SENSe:]LEVel:MAXimum. The setting has effect for trigger source <i>RFPower</i> only (see TRIG:SEQ:SOUR).				

TRIGger[:SEQuence]:THREshold:IFPower <Threshold>		Level – IF Power		
<Threshold>	Parameter description	Def. value	Default unit	FW vers.
–47 dB to 0 dB	IF power threshold	–26	dB	V3.10
Command description				
This command sets the IF signal level at which the measurement is triggered. The IF power threshold is defined relative to the maximum RF input level; see [SENSe:]LEVEl:MAXimum. The setting has effect for trigger source IFPower only (see TRIG:SEQ:SOUR).				

TRIGger[:SEQuence]:SLOPe <Slope>		Slope		
<Slope>	Parameter description	Def. value	Default unit	FW vers.
POSitive NEGative	Rising edge Falling edge	POS	–	V3.10
Command description				
This command qualifies whether the trigger event occurs on the <i>Rising Edge</i> or on the <i>Falling Edge</i> of the trigger signal. The setting has no influence on <i>Free Run</i> measurements (see TRIG:SEQ:SOUR).				

TRIGger:OUTPut:PIN<nr>:SIGNal <Signal>		Output Trigger Signal		
<Signal>	Parameter description	Def. value	Default unit	FW vers.
NONE FCL	No trigger signal or frame trigger at pin <nr>	FCL (for <nr> = 2, 3), NONE (for <nr> = 4, 5)	–	V3.10
Command description				
This command assigns the frame trigger signal (or no signal) to pins 2 to 5 (<nr> = 2 to 5) of the AUX 3 connector. The settings are only valid for <i>Signalling</i> trigger source (command TRIGger[:SEQuence]:SOURce SIGNalling).				

TRIGger:OUTPut:PIN<nr>:DELAy:ENABle <Enable>		Output Trigger Signal		
<Enable>	Parameter description	Def. value	Default unit	FW vers.
ON OFF	Enable delay at pin 2	OFF (for <nr> = 2, 4, 5) ON (for <nr> = 3)	–	V3.10
Command description				
This command qualifies whether the frame trigger signal at pins 2 to 5 (<nr> = 2 to 5) of the AUX 3 connector is delayed by the specified delay time (see command TRIGger:OUTPut:DELAy:VALue below). The settings are only valid if a trigger signal is actually applied to the pins (command TRIGger:OUTPut:PIN:SIGNal).				

TRIGger:OUTPut:DELAy:VALue <Slots>		Delay		
<Slots>	Parameter description	Def. value	Default unit	FW vers.
0 to 7	Delay time for frame trigger signal	2	(slots)	V3.10
Command description				
This command sets a delay time (integer number of slots) for the trigger signal. 0 slots is equivalent to the <i>OFF</i> setting in the TRIGger:OUTPut:PIN:DELAy:ENABle command.				

TRIGger[:SEQuence]:DEFault <Enable>		Trigger Default Settings		
<Enable>	Description of parameters	Def. value	Def. unit	FW vers.
ON	All parameters are set to their default values	ON	–	V2.00
OFF	All or some parameters differ from the default values			
Description of command				
If used as a setting command with the parameter ON this command sets all parameters of the subsystem to their default values (the setting OFF causes an error message).				
If used as a query the command returns whether all parameters are set to their default values (ON) or not (OFF).				

Subsystem SIGNalling (Connection Setup and Cleardown)

The subsystem *SIGNalling* controls the connection setup and cleardown from the CMU to the mobile and determines the signalling parameters. Together with the subsystem *WPOWer* it corresponds to the different *Signalling* tabs (for different signalling states, see command PROCEDURE:SIGNalling[:CSWitched]:ACTION) in the popup menu *Connect. Control*.

PROCEDURE:SIGNalling[:CSWitched]:ACTION <Action>		Signalling Control		
<Action>	Description of parameters	Def. value	Def. unit	FW vers.
SOFF	Switch off BCCH signal (<i>signal off</i>)	–	–	V1.15
SON	Switch on BCCH signal (<i>signal on</i>)			
MTC	Mobile terminating call			
SMS	Short message service			
CRELease	Call release			
HANDOver	Dual-band handover (to target network defined via CONFIGure:HANDOver:TARGet)			
Description of command				Sig. State
This command has no query form. It changes between the different signalling states of the CMU.				See below
The current state can be queried via SIGN:STAT?				

Important Note: Signalling States and Local to Remote Switchover

The default signalling state of the CMU in remote control is SOFF (see Fig. 6-1 below). This state is automatically reached on switchover from manual to remote control; an existing connection to the MS under test is dropped.

To suspend this default behavior of the CMU, the base system command SYSTEM:GTRM:COMP has been introduced. SYSTEM:GTRM:COMP OFF prevents the instrument from changing the signalling state local to remote switchover. In particular, an existing connection is maintained. The default behavior of the CMU is restored each time the instrument is rebooted. For more information see the documentation of the base system commands in the CMU manual.

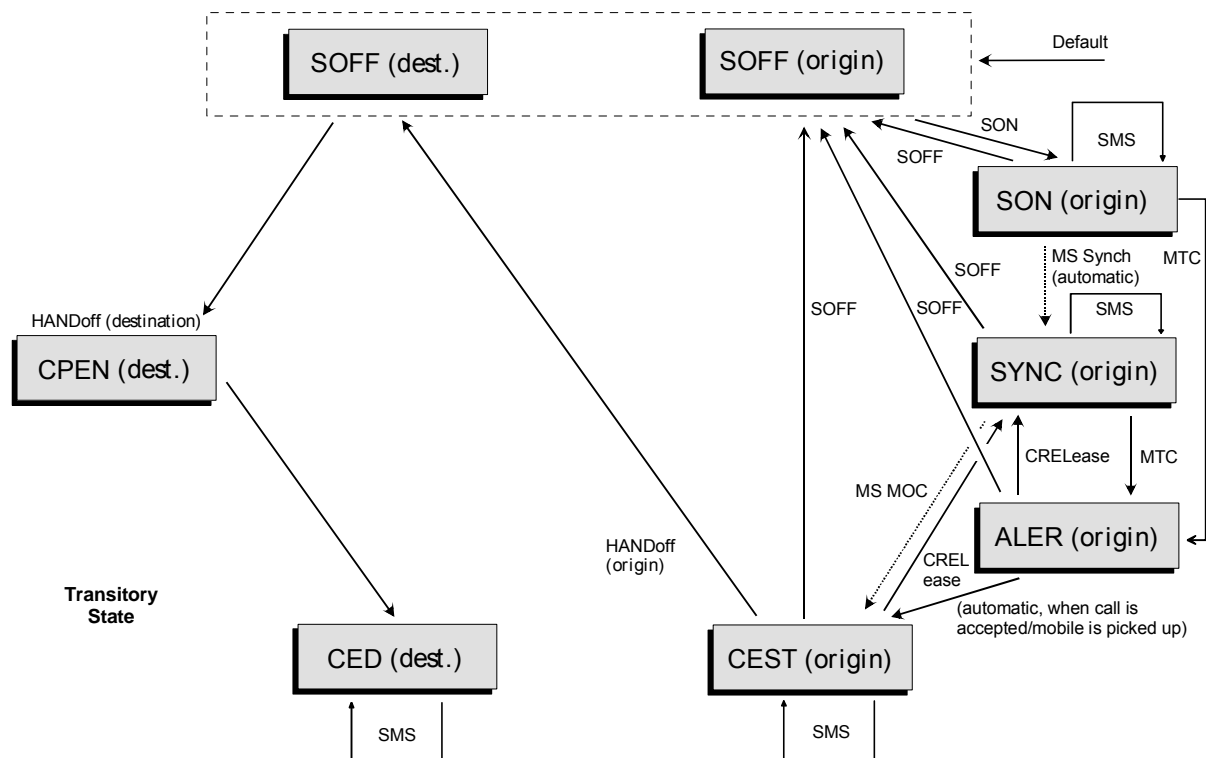


Fig. 6-1 Signalling states of the CMU and transitions including handover

Signalling states:

SOFF	signal off	CEST	call established
SON	signal on	CPEN	call pending
SYNC	synchronized	CED	call established dual band
ALER	alerting		

Actions:

initiated from the CMU:

See description of command

initiated from the mobile phone:

MS Synchron Synchronization of mobile phone
MS MOC Mobile originated call

Further transitions between the signalling states (not shown in Fig. 6-1) may occur, e.g. in case of errors (see chapter 4 of this manual).

[SENSe:]SIGNalling[:CSWitched]:STATe?		Signalling State		
Return	Description of parameters	Def. value	Def. unit	FW vers.
SOFF	Signal for synchronization switched off (<i>signal off</i>)	SOFF	–	V1.15
SON	Signal for synchronization switched on (<i>signal on</i>)			
SYNC	Synchronization of CMU and mobile phone and location update established (<i>synchronized</i>)			
ALER	Mobile is ringing (<i>Alerting</i>)			
CEST	Call to mobile set up (<i>call established</i>)			
CPEN	Call pending			
CED	Call established dual band			
Description of command				Sig. State
This command is always a query. It returns the current signalling state.				all

PROCedure:SIGNalling[:CSWitched]:DAI <Interface>		DAI Acoustic Dev.		
<Interface>	Description of parameters	Def. value	Def. unit	FW vers.
NORMal	Default setting active during call setup	NORM	–	V3.0
DECoDer	Test of speech decoder / DTX functions (downlink)			
ENCoDer	Test of speech encoder / DTX functions (uplink)			
ADEvice	Test of acoustic devices and A/D & D/A			
Description of command				Sig. State
This command determines the routing of the speech data and which device is being tested.				CEST

[SENSe:]SIGNalling[:CSWitched]:SMS?		Short Message Service Text		
Return	Description of parameters	Def. value	Def. unit	FW vers.
"<String>"	Short message received	""	–	V2.0
Description of command				Sig. State
This command is always a query. It reads the short message received.				all

CONFigure:SIGNalling[:CSWitched]:SMS <Text>		Short Message Service Text		
<Text>	Description of parameters	Def. value	Def. unit	FW vers.
"<String>"	Short message to be sent	"Rohde & Schwarz Short Message Service Text"	–	V2.0
Description of command				Sig. State
This command defines a short message in the form of any alphanumeric string with a maximum of 160 characters.				all

PROCedure:SIGNalling[:CSWitched][:TCH]:CHANnel <Number>		Traffic Channel		
<Number>	Description of parameters	Def. value	Def. unit	FW vers.
259 to 293 306 to 340	Number of traffic channel, GSM400	275	–	–
128 to 251	Number of traffic channel, GSM850	192	–	–
0 to 124 955 to 1023	Number of traffic channel, GSM900	62	–	–
512 to 885	Number of traffic channel, GSM1800	740	–	–
512 to 810	Number of traffic channel, GSM1900	610	–	V1.15
Description of command				Sig. State
This command changes the traffic channel number (and thus the frequency) for signals of the CMU while a connection is established.				CEST

PROCedure:SIGNalling[:CSWitched][:TCH]:TADVance <Bit >		Timing Advance		
<Bit>	Description of parameters	Def. value	Def. unit	FW vers.
0 bit to 63 bit	Timing advance for GSM850/900/1800/1900	0	bit	V3.05
0 bit to 219 bit	Timing advance for GSM400	0	bit	
Description of command				Sig. State
This command changes the mobile's timing while a connection is established.				CEST

				Combined Channel/TS/PCL Change
PROCEDURE:SIGNalling[:CSWitched][:TCH][:SSLot]:CHCCombined				
<ChannelNumber>, <Timeslot>, <PCL>				
<ChannelNumber>	Description of parameters	Def. value	Def. unit	
259 to 293 306 to 340	Number of traffic channel, GSM400	275	–	
128 to 251	Number of traffic channel, GSM850	192	–	
0 to 124 955 to 1023	Number of traffic channel, GSM900	62	–	
512 to 885	Number of traffic channel, GSM1800	740	–	
512 to 810	Number of traffic channel, GSM1900	610	–	
<Timeslot>	Description of parameters	Def. value	Def. unit	
2 to 6 	Number of timeslot with BATC setting	3	–	
0 to 7	Number of timeslot with BOTC setting			
<PCL>	Description of parameters	Def. value	Def. unit	FW vers.
5 to 19	Power of mobile phone in PCL units, GSM400/850/900	15	PCL	–
0 to 31	GSM1800	10	PCL	–
0 to 31	GSM1900	10	PCL	V1.15
Description of command				Sig. State
This command controls the combined channel change, the number of the traffic channel for signals of the CMU, the timeslot for this channel and the mobile power level being changed at the same time. Thus, the command combines the three commands PROCEDURE:SIGNalling[:CSWitched][:TCH]:CHANnel <Number>, PROCEDURE:SIGNalling[:CSWitched][:TCH][:SSLot]:TIMESlot <Timeslot>, and PROCEDURE:SIGNalling[:CSWitched]:MS:PCL <PCL> (see below). All GSM timeslots are available if the control channel mode is set to BOTC (see command CONFigure:BSSignal:CCH[:TX]:MODE on p. 6.200). The GSM PCL levels are listed in chapter 4 (see list of tables or index).				CEST

				Hopping
PROCEDURE:SIGNalling[:CSWitched][:TCH][:SSLot]:FHOPping:SEquence <Sequence>				
<Sequence>	Description of parameters	Def. value	Def. unit	FW vers.
A B C D 	Select hopping sequence	OFF	–	V3.05
OFF	Switch off frequency hopping			
Description of command				Sig. State
This command selects one out of the four possible hopping sequences for the traffic channel or switches frequency hopping off. The hopping sequences are defined via CONFigure:BSSignal[:CSWitched][:TCH][:SSLot]:FHOPping ; see p. 6.202.				CEST

				Timeslot
PROCEDURE:SIGNalling[:CSWitched][:TCH][:SSLot]:TIMESlot <Timeslot>				
<Timeslot>	Description of parameters	Def. value	Def. unit	FW vers.
2 to 6 	Number of timeslot with BATC setting	3	–	V1.15
0 to 7	Number of timeslot with BOTC setting			
Description of command				Sig. State
This command changes the traffic channel timeslot while a connection is established. All GSM timeslots are available if the control channel mode is set to BOTC (see command CONFigure:BSSignal:CCH[:TX]:MODE on p. 6.200).				CEST

PROCedure:SIGNalling[:CSWitched][:TCH][:SSLot]:MS:PCL <PCL>				PCL
<PCL>	Description of parameters	Def. value	Def. unit	FW vers.
0 to 19	Power of mobile phone in PCL units, GSM400/850/900	15	PCL	–
0 to 31	GSM1800	10	PCL	–
0 to 31	GSM1900	10	PCL	V1.15
Description of command				Sig. State
This command commands the mobile phone to change its power control level while a connection is established. The range depends on the GSM phase of the mobile (see chapter 4).				CEST Q: all

PROCedure:SIGNalling[:CSWitched][:TCH]:MSLot:SCONfig				Slot Configuration: Uplink/Downlink
<Main_Slot>, <DL_Enable_0>, ..., <DL_Enable_7>, <DL_Power_0>, ..., <DL_Power_7> <UL_Enable_0>, ..., <UL_Enable_7>, <UL_PCL_0>, ..., <UL_PCL_7>, <Main_TS>				
<Main_Slot>	Description of parameters	Def. value	Def. unit	FW vers.
0 to 7	Main timeslot, used for signalling	3	–	V3.40
<DL_Enable_n>	Description of parameters	Def. value	Def. unit	FW vers.
ON OFF	Enable or disable timeslot no. n	ON (slots 3 and 4) OFF (other slots)	–	V3.10
<DL_Power_n>	Description of parameters	Def. value	Def. unit	
–127.0 dB to +127.0 dB	Individual BS level in timeslot no. n:	0.0 (all active DL slots)	dB	
<UL_Enable_n>	Description of parameters	Def. value	Def. unit	
ON OFF	Enable or disable timeslot no. n	ON (slot 3) OFF (other slots)	–	
<UL_PCL_n>	Description of parameters	Def. value	Def. unit	Sig. State
0 to 19	MS level in timeslot no. n: GSM400/850/900	15 (slot 3)	PCL	CEST
0 to 31	GSM1800/1900	15 (slot 3)	PCL	
Description of command				
This command changes the main timeslot and the levels in all active or inactive timeslots slots of the BS and MS signal (current values) for the <i>Individual</i> level mode (see <i>Slot Configuration Editor</i> in manual control and command CONFigure:BSSignal[:CSWitched][:TCH]:MSLot:LMODe on p. 6.204). This command overwrites the main timeslot defined via CONFigure:BSSignal[:CSWitched][:TCH]:MSLot:MTIMeslot (see p. 6.204).				
For the DL signal all GSM timeslots are available if the control channel mode is set to BOTC (see command CONFigure:BSSignal:CCH[:TX]:MODE on p. 6.200). Their levels are set individually relative to the <i>Reference Level</i> set via PROCedure:BSSignal[:CSWitched][:TCH]:MSLot:RLEVel (see p. 6.203). The DL level range quoted above is restricted by the condition that the absolute level (calculated from the reference level and the relative individual levels) must not exceed the level ranges of the RF connectors.				
Example: With output connector RF2 and a reference level of –85 dBm, the individual DL timeslot levels can be set in the range –52 dB to +75 dB, corresponding to an absolute level of –137 dBm to –10 dBm.				
The UL signal settings must be compatible with the capabilities of the MS under test (multislot class, power class).				

PROCedure:SIGNalling[:CSWitched][:TCH][:SSLot]:LOOP <Loop>				Loop
PROCedure:SIGNalling[:CSWitched][:TCH]:MSLot:LOOP <Loop>				
<Loop>	Description of parameters	Def. value	Def. unit	FW vers.
OFF	No test loop set	A (single slot)	–	V3.10
A	TCH loop including signalling of erased frames			
B	Speech TCH loop without signalling of erased frames			
C	TCH burst-by-burst loop	H (multi-slot)		
G	Multi-slot TCH burst-by-burst loop			
H	Multi-slot TCH loop including signalling of erased frames			
Description of command				Sig. State
This command sets the loop type for all but <i>RXQuality</i> tests. Test loops A, B, and C are single-slot loops, test loops G and H are multislot loops.				CEST, Q: all

Subsystem HANdOver

The subsystem *HANdOver* sets the target for a forced handover of the mobile phone. The corresponding softkeys are located in the *Handover* tab in the popup menu *Connect. Control*.

STATus:HANdOver:TARGet:LIST?			Destination List	
Response	Description of parameters	Def. value	Def. unit	FW vers.
"GSM400MsDualBand", "GSM850MsDualBand", "GSM900MsDualBand", "GSM1800MsDualBand", "GSM1900MsDualBand"	Target list (4 entries at maximum): All installed and enabled GSM networks except the current network	– – – – –	– – – – –	V2.00 V3.01 (ext.)
Description of command				Sig. State
This command is always a query and returns a list of all networks that are available for a handover. The list depends on the software configuration and on the current network.				CEST

CONFigure:HANdOver:TARGet <Target>			Destination Selection	
<Target>	Description of parameters	Def. value	Def. unit	FW vers.
"GSM400MsDualBand" "GSM850MsDualBand" "GSM900MsDualBand" "GSM1800MsDualBand" "GSM1900MsDualBand" NONE	Possible target networks No handover	see below	–	V2.00 V3.01 (ext.)
Description of command				Sig. State
This command selects a handover target. The available targets comprise all installed and enabled GSM networks except the current network. The handover itself is started via the PROCedure:SIGNalling[:CSwitched]:ACTion HANdOver command. If GSM400, GSM850, GSM1800, or GSM1900 is the current network and GSM900 is enabled, GSM900 is used as a default target. If GSM900 is the current network and GSM1800 is enabled, GSM1800 is the default target. Otherwise the default target is set to <i>NONE</i> .				CEST

CONFigure:HANdOver:ALERting <Mode>			Alerting (WCMA to GSM handover)	
<Mode>	Description of parameters	Def. value	Def. unit	FW vers.
NONE WGSM	No alerting Alerting with GSM setup message	NONE	–	3.50
Description of command				Sig. State
This command qualifies whether or not alerting is initiated at the mobile so that it starts ringing before the GSM connection is established. It is generally used in a GSM prepare session before a handover from WCDMA to GSM. The setting has no effect for GSM measurements.				all

CONFigure:HANdOver:CSYNc <Mode>			Cell Synchronization (WCMA to GSM handover)	
<Mode>	Description of parameters	Def. value	Def. unit	FW vers.
FSYN NSYN	Finely synchronized cell case Non synchronized cell case	FSYN	–	3.50
Description of command				Sig. State
This command selects the procedure for physical channel establishment in a WCDMA to GSM handover. It is generally used in a GSM prepare session before the handover from WCDMA to GSM is initiated. The setting has no effect for GSM measurements.				all

Subsystem MCONtrol (Measured Slots)

The subsystem *MCONtrol* defines the measured timeslots in MS multislot mode. It corresponds to the *Meas. Control* section in the *Analyzer* tab of the *Connection Control* menu.

CONFigure:MCONtrol:MSLot:MESLot <Slot_No>				Meas. Slot
<Slot_No>	Description of parameters	Def. value	Def. unit	FW vers.
0 to 7	Traffic channel timeslot number	3	–	V3.10
Description of command				Sig. State
This command defines the measured timeslot of the MS signal.				≠CEST, Q: all
<p>Note: To ensure that the CMU generally measures an occupied timeslot, the <i>Meas. Slot</i> is set equal to the main timeslot upon a reset or whenever a connection is set up. In the <i>CEST</i> and <i>TEST</i> states, the main timeslot and <i>Meas. Slot</i> can be changed independently. In a dual-band handover, the slot configuration of the target network is activated so that the <i>Meas. Slot</i> is set equal to the main timeslot of the target network.</p>				

MCONtrol:DEfault <Enable>		Default Settings		
<Enable>	Description of parameters	Def. value	Def. unit	FW vers.
ON OFF	All parameters are set to their default values All or some parameters differ from the default values	ON	–	V3.10
Description of command				
If used as a setting command with the parameter <i>ON</i> this command sets all parameters of the subsystem to their default values (the setting <i>OFF</i> causes an error message).				
If used as a query the command returns whether all parameters are set to their default values (<i>ON</i>) or not (<i>OFF</i>).				

Subsystem MSSignal (Signal of Mobile Station)

The subsystem *MSSignal* configures the operating mode and the RF traffic channel signal of the MS under test. It corresponds to the tab *MS Signal* in the popup menu *Connect. Control*.

CONFigure:MSSignal:CCH:PMAX ¹ <Level>				PMAX
<Level>	Description of parameters	Def. value	Def. unit	FW vers.
0 to 19	Maximum MS power in the cell, GSM400/850/900	5	PCL	–
0 to 31	GSM1800/GSM1900	0	PCL	V3.05
Description of command				Sig. State
This command defines the maximum MS transmitter output power allowed in the cell. The value corresponds to the output power at which the mobile station synchronizes to the network. It is valid both for circuit-switched and for packet data mode. An overview of power control levels (PCL) in GSM is given in chapter 4 (see table or index).				≠CEST ≠TEST, Q: all
The output power during a call can be set by means of the following commands:				
CONFigure:MSSignal[:CSWitched][:TCH][:SSLot]:MS:PCL			(circuit switched, single slot)	
CONFigure:MSSignal[:CSWitched][:TCH]:MSLot:SCONfig			(circuit switched, multislot)	
CONFigure:MSSignal:PDATa[:TCH]:MSLot:SCONfig			(packet data, single slot)	

¹ In firmware versions <V3.05, this command is replaced by `CONFigure:NETWork[:MS]POWer`. This command sets the maximum MS transmitter power and the MS transmitter power during a call to the same value. It is still available for compatibility reasons.

CONFigure:MSSignal[:CSWitched]:DTX <Mode>				DTX
<Mode>	Description of parameters	Def. value	Def. unit	FW vers.
ON OFF	Transmission with interruption not possible	OFF	–	V3.05
	Transmission with interruption possible			
Description of command				Sig. State
This command permits the mobile to make use of the DTX mode (<i>discontinuous transmission mode</i>). The status assumed by the mobile is to be determined using the command [SENSe:]RREPortS:DTX?.				≠CEST, Q: all
Only useful data are transferred in DTX mode; if nothing is spoken, the mobile will transmit nothing in the traffic frames.				

CONFigure:MSSignal[:CSWitched][:TCH]:TADVance <Bit >				Timing Advance
<Bit>	Description of parameters	Def. value	Def. unit	FW vers.
0 bit to 63 bit	Timing advance for GSM850/900/1800/1900	0	bit	V3.05
0 bit to 219 bit	Timing advance for GSM400	0	bit	
Description of command				Sig. State
This command sets the default value for the mobile's timing.				≠CEST, Q: all

CONFigure:MSSignal[:CSWitched][:TCH][:SSLot]:MS:PCL <Level>				PCL Level
<Level>	Description of parameters	Def. value	Def. unit	FW vers.
0 to 19	Power of mobile phone in PCL units, GSM400/850/900	15	PCL	V3.05
0 to 31	GSM1800/1900	10	PCL	
Description of command				Sig. State
This command defines the mobile power level upon registration in the network. An overview of power control levels (PCL) in GSM is given in chapter 4 (see table or index).				≠CEST, Q: all

CONFigure:MSSignal[:CSWitched][:TCH]:MSLot:SCONfig				Slot Configuration: Uplink
<Enable_0>, <Enable_1>, ..., <Enable_7>, <PCL_0>, ..., <PCL_7>				
<Enable_n>	Description of parameters	Def. value	Def. unit	
ON OFF	Enable or disable timeslot no. n	see below	–	
<PCL_n>	Description of parameters	Def. value	Def. unit	FW vers.
0 to 19	Power of mobile phone in timeslot no. n: GSM400/850/900	15	PCL	V3.05
0 to 31	GSM1800/1900	10	PCL	
Description of command				Sig. State
This command defines the active timeslots slots of the MS signal and the transmitter output power that the MS will use in all active slots (default values).				≠CEST, Q: all
In the default setting, only slot 3 is enabled. Slot no. 3 is also the main timeslot; see CONFigure:BSSignal[:CSWitched][:TCH]:MSLot:MTimeslot command on p. 6.204.				

CONFigure:MSSignal[:CSWitched][:TCH][:SSLot]:LOOP <Loop>				Loop
CONFigure:MSSignal[:CSWitched][:TCH]:MSLot:LOOP <Loop>				
<Loop>	Description of parameters	Def. value	Def. unit	FW vers.
OFF	No test loop set	OFF	–	V3.10
A	TCH loop including signalling of erased frames			
B	Speech TCH loop without signalling of erased frames			
C	TCH burst-by-burst loop			
G	Multi-slot TCH burst-by-burst loop			
H	Multi-slot TCH loop including signalling of erased frames			
Description of command				Sig. State
This command sets the loop type for all but <code>RXQuality</code> tests. Test loops A, B, and C are single-slot loops, test loops G and H are multislot loops.				≠CEST, Q: all

Subsystem BSSignal (Signal of Base Station/CMU)

The subsystem *BSSignal* configures the operating mode and the RF control and traffic channels that the CMU transmits to communicate with the MS under test. It corresponds to the tab *BS Signal* in the popup menu *Connect. Control*.

CONFigure:BSSignal:FM:DEVIation <FrequencyOffset>				Frequency Offset
PROCEdure:BSSignal:FM:DEVIation <FrequencyOffset>				
<FrequencyOffset>	Description of parameters	Def. value	Def. unit	FW vers.
-100 kHz to +100 kHz	Frequency offset	0.0	Hz	V1.15
Description of command				Sig. State
This command determines a frequency offset for the CMU signals (CCH and TCH). The PROCEdure... command is available for firmware versions \geq V3.10. See note on Current vs. default values on p. 6.187.				all

PROCEdure:BSSignal:FM:DEVIation:RANDom:ENABle <Enable>				Random Frequency Offset
<Enable>	Description of parameters	Def. value	Def. unit	FW vers.
ON OFF	Enable or disable random freq. offset	OFF	–	V3.40
Description of command				Sig. State
This command switches the random frequency on or off. The ON setting causes the (static) frequency offset set via <code>CONFigure:BSSignal:FM:DEVIation</code> to randomly change its sign after each frame. The random frequency offset is automatically switched off each time that the connection is released.				CEST, TEST

CONFigure:BSSignal:CCH[:TX]:MODE <Mode>				BCCH – Mode
<CCHChannel>	Description of parameters	Def. value	Def. unit	FW vers.
BATC	BCCH and TCH	BATC	–	V3.05
BOTC	BCCH or TCH			
Description of command				Sig. State
This command determines the BS signal configuration in the CEST state. In the BOTH setting the BCCH is switched off as soon as CEST is reached so that all 8 timeslots are available for the traffic channel (see command <code>CONFigure:BSSignal[:CSWitched][:TCH][:SSLot]:TIMeslot</code> on p. 6.202).				\neq CEST, Q: all

CONFigure:BSSignal:CCH[:TX]:CHANnel <CCHChannel>				BCCH – RF Channel
<CCHChannel>	Description of parameters	Def. value	Def. unit	FW vers.
259 to 293 306 to 340	Number of control channel, GSM400	270	–	V1.15
128 to 251	Number of control channel, GSM850	162	–	
0 to 124 955 to 1023	Number of control channel, GSM900	32	–	
512 to 885	Number of control channel, GSM1800	735	–	
512 to 810	Number of control channel, GSM1900	600	–	
Description of command				Sig. State
This command determines the control channel for the CMU signals (BCCH).				SON, SOFF

CONFigure:BSSignal:CCH[:TX]:LEVel[:ABSolute] <Level>				BCCH Level
<Level>	Description of parameters	Def. value	Def. unit	FW vers.
-137 dBm to -27 dBm	Absol. level of control channel, RF1	-85	dBm	V1.15
-137 dBm to -10 dBm	Absol. level of control channel, RF2	-85	dBm	
-90 dBm to +13 dBm	Absol. level of control channel, RF3 OUT	-85	dBm	
Description of command				Sig. State
This command determines the level of the control channel in absolute units.				all
<p>Note: In firmware versions <V3.10 the BCCH level can not be changed in the CEST state.</p> <p>After a handover the BCCH level of the origin network is maintained (indication "from other network" in the BS Signal tab of the Connection Control menu), however, the query <code>CONFigure:BSSignal:CCH[:TX]:LEVel[:ABSolute]?</code> will return the default value of the target network, which may differ from the actual BCCH level.</p> <p>Changing the BCCH level after a handover (i.e. in the CEST state of the target network) is not allowed and will cause an error message -200, "Execution error".</p>				

CONFigure:BSSignal[:CSWitched][:TCH]:CHANnel <TCHChannel>				Traffic Channel
<TCHChannel>	Description of parameters	Def. value	Def. unit	FW vers.
259 to 293 306 to 340	Number of traffic channel, GSM400	275	-	V1.15
128 to 251	Number of traffic channel, GSM850	192	-	
0 to 124 955 to 1023	Number of traffic channel, GSM900	62	-	
512 to 885	Number of traffic channel, GSM1800	740	-	
512 to 810	Number of traffic channel, GSM1900	610	-	
Description of command				Sig. State
This command determines the number of the traffic channel.				≠CEST, Q: all

CONFigure:BSSignal[:CSWitched][:TCH]:LEVel:UTIMeslot <Level>				Used Timeslot Level
<Level>	Description of parameters	Def. value	Def. unit	FW vers.
-137 dBm to -27 dBm	RF1 level in used timeslot	-90	dBm	V1.15
-137 dBm to -10 dBm	RF2 level in used timeslot	-90	dBm	
-90 dBm to +13 dBm	RF3 OUT level in used timeslot	-90	dBm	
Description of command				Sig. State
This command determines the absolute level in the used timeslot. The value range depends on the RF output of the CMU used. See note on Current vs. default values on p. 6.187.				all

CONFigure:BSSignal[:CSWitched][:TCH]:LEVel:UNTimeslot <Level> PROCedure:BSSignal[:CSWitched][:TCH]:LEVel:UNTimeslot <Level>				Unused Timeslot Level
<Level>	Description of parameters	Def. value	Def. unit	FW vers.
-127 dB to +127 dB	Level in unused timeslot	see below	dB	V1.15
Description of command				Sig. State
<p>This command determines the (relative) level in the unused timeslots.</p> <p>The level range quoted above is restricted by the condition that the absolute level (calculated from the used timeslot level and the relative level in the unused timeslots) must not exceed the level ranges of the RF connectors.</p> <p>Example: With output connector RF2 and a default used timeslot level of -90 dBm, the unused timeslot level can be set in the range -47 dB to +80 dB, corresponding to an absolute level of -137 dBm to -10 dBm.</p> <p>See note on Current vs. default values on p. 6.187.</p>				all

CONFigure:BSSignal[:CSWitched][:TCH][:SSLot]:TIMeslot <Timeslot>				Timeslot
<Timeslot>	Description of parameters	Def. value	Def. unit	FW vers.
2 to 6 0 to 7	Number of timeslot with BATC setting Number of timeslot with BOTC setting	3	-	V1.15
Description of command				Sig. State
<p>This command determines the timeslot for the BS traffic channel. All GSM timeslots are available if the control channel mode is set to BOTC (see command CONFigure:BSSignal:CCH[:TX]:MODE on p. 6.200).</p>				≠CEST, Q: all

Edit Hopping Sequence				
CONFigure:BSSignal[:CSWitched][:TCH][:SSLot]:FHOPping:A <Channel>{,<Channel> CONFigure:BSSignal[:CSWitched][:TCH][:SSLot]:FHOPping:B <Channel>{,<Channel> CONFigure:BSSignal[:CSWitched][:TCH][:SSLot]:FHOPping:C <Channel>{,<Channel> CONFigure:BSSignal[:CSWitched][:TCH][:SSLot]:FHOPping:D <Channel>{,<Channel>				
<Channel>	Description of parameters	Def. value	Def. unit	FW vers.
0 to 124, 955 to 1023 OFF	Sequence of up to 64 GSM channels, depending on the GSM band used (example: GSM900), undefined channel number	see below	-	1.20
Description of command				Sig. State
<p>These commands define hopping sequences that overwrite the four hopping sequences A to D quoted below. The sequence may consist of up to 64 arbitrary GSM channel numbers; however, a query returns each hopping sequence in ascending order. Undefined channels are set to OFF. The current hopping sequence can be changed during the connection, see command PROCedure:SIGNalling[:CSWitched][:TCH][:SSLot]:FHOPping:SEquence on p. 6.193.</p> <p>For GSM400, the following four default sequences are available:</p>				≠CEST, Q: all
Sequence A:	260, 262, 265, 267, 269, 272, 274, 278, 280, 282, 285, 287, 290, 292, OFF, ... OFF			
Sequence B:	159, 276, 293, OFF, ... OFF			
Sequence C:	307, 309, 312, 314, 316, 319, 321, 325, 327, 329, 332, 334, 337, 339, OFF, ... OFF			
Sequence D:	306, 323, 340, OFF, ... OFF			

For GSM850, the following four default sequences are available:	
Sequence A:	130, 134, 138, 143, 145, 149, 153, 157, 163, 167, 171, 176, 181, 185, 189, 193, 198, 202, 205, 209, 211, 215, 217, 219, 221, 227, 231, 234, 238, 242, 246, 250, OFF, ... OFF
Sequence B:	132, 135, 139, 142, 144, 148, 151, 156, 161, 164, 166, 173, 177, 179, 182, 186, OFF,...OFF
Sequence C:	195, 203, 206, 210, 213, 216, 220, 223, 226, 229, 232, 235, 239, 243, 245, 249, OFF, ... OFF
Sequence D:	128, 190, 251, OFF, ... OFF
For GSM900, the following four default sequences are available:	
Sequence A:	5, 9, 16, 23, 28, 30, 34, 39, 44, 48, 51, 54, 59, 64, 69, 73, 75, 79, 82, 86, 89, 92, 96, 98, 101, 106, 109, 113, 117, 121, OFF, ... OFF
Sequence B:	4, 12, 17, 19, 23, 25, 29, 33, 36, 41, 45, 47, 53, 61, 63, OFF,...OFF
Sequence C:	65, 68, 72, 76, 79, 81, 84, 88, 91, 93, 98, 102, 105, 112, 118, OFF, ... OFF
Sequence D:	1, 62, 124, OFF, ... OFF
For GSM1800, the following four default sequences are available:	
Sequence A:	533, 559, 568, 592, 604, 617, 631, 642, 678, 697, 722, 743, 759, 796, 811, 824, OFF, ... OFF
Sequence B:	513, 518, 527, 533, 541, 545, 553, 562, 570, 577, 585, 597, OFF,...OFF
Sequence C:	755, 761, 773, 777, 788, 796, 801, 807, 816, 824, 829, 833, 847 OFF, ... OFF
Sequence D:	512, 698, 885, OFF, ... OFF
For GSM1900, the following four default sequences are available:	
Sequence A:	533, 559, 568, 592, 604, 617, 631, 642, 678, 697, 722, 743, 759, 796, OFF, ... OFF
Sequence B:	513, 518, 527, 533, 541, 545, 553, 562, 570, 577, 585, 597, OFF,...OFF
Sequence C:	755, 761, 773, 777, 788, 796, 801, 807, OFF, ... OFF
Sequence D:	512, 660, 810, OFF, ... OFF

CONFigure:BSSignal[:CSWitched][:TCH]:MSLot:RLEVel <Level>				Reference Level
PROCedure:BSSignal[:CSWitched][:TCH]:MSLot:RLEVel <Level>				
<Level>	Description of parameters	Def. value	Def. unit	FW vers.
-137 dBm to -27 dBm	RF1 level in used timeslot	-85	dBm	V3.05
-137 dBm to -10 dBm	RF2 level in used timeslot	-85	dBm	
-90 dBm to +13 dBm	RF3 OUT level in used timeslot	-85	dBm	
Description of command				Sig. State
This command defines the reference value for the individual downlink (BS) signal levels. See command PROCedure:SIGNalling[:CSWitched][:TCH]:MSLot:BS:SCONfig:INDividual on p. 6.194. See also note on Current vs. default values on p. 6.187.				all

CONFigure:BSSignal[:CSWitched][:TCH]:MSLot:MTimeslot <Slot_No>			Main Timeslot	
<Slot_No>	Description of parameters	Def. value	Def. unit	FW vers.
0 to 7	Main timeslot, used for signalling	3	–	V3.05
Description of command				Sig. State
This command defines the timeslot that the MS and the BS/CMU use for signalling (default value). Changing the main timeslot also overwrites the <i>Meas.- Slot</i> (command CONFigure:MCONTRol:MSLot:MESLot). If used in the CEST state, this command overwrites the main timeslot set via <i>PROCedure:SIGNalling[:CSWitched][:TCH]:MSLot:SCONfig</i> (see p. 6.194).				≠CEST, Q: all

CONFigure:BSSignal[:CSWitched][:TCH]:MSLot:LMODe <Mode>			Level Mode	
<Slot_No>	Description of parameters	Def. value	Def. unit	FW vers.
UUN IND	Used timeslot and unused timeslot levels Individual timeslot levels	UUN	–	V3.05
Description of command				Sig. State
This command determines whether the CMU uses the used/unused timeslot level scheme (two different levels) or individual levels in all timeslots.				≠CEST, Q: all

CONFigure:BSSignal[:CSWitched][:TCH]:MSLot:SCONfig:UUNused <Enable_0>,<Enable_1>, ..., <Enable_7>			Slot Configuration: Used/Unused	
<Enable_n>	Description of parameters	Def. value	Def. unit	FW vers.
ON OFF	Enable or disable timeslot no. n	see below	–	V3.05
Description of command				Sig. State
This command defines the active timeslots slots of the BS signal (default values) and implicitly defines the levels for the <i>Used/Unused</i> level mode (see command CONFigure:BSSignal[:CSWitched][:TCH]:MSLot:LMODe on p. 6.204).				≠CEST, Q: all
<ul style="list-style-type: none"> The level in all enabled timeslots is given by the <i>Used Timeslot Level</i> defined via CONFigure:BSSignal[:CSWitched][:TCH]:LEVel:UNTimeslot (see p. 6.202). The level in all disabled timeslots is given by the <i>Unused Timeslot Level</i> def. via CONFigure:BSSignal[:CSWitched][:TCH]:LEVel:UTIMeslot (see p. 6.201). 				
In the default setting, timeslots 3 and 4 are enabled. By default, slot no. 3 is also the main timeslot; see command CONFigure:BSSignal[:CSWitched][:TCH]:MSLot:MTimeslot on p. 6.204.				
Note: The <Enable_n> parameters also apply in individual level mode; they overwrite the parameters in the CONFigure:BSSignal[:CSWitched][:TCH]:MSLot:SCONfig:INDividual command.				

CONFigure:BSSignal[:CSWitched][:TCH]:MSLot:SCONfig:INDividual				Slot Configuration Individual
<Enable_0>, <Enable_1>, ..., <Enable_7>, <Level_0>, ..., <Level_7>				
<Enable_n>	Description of parameters	Def. value	Def. unit	
ON OFF	Enable or disable downlink timeslot no. n (the MS is instructed to listen to this TS)	see below	–	
<Level_n>	Description of parameters	Def. value	Def. unit	FW vers.
–127 dB to +127 dB	Power of CMU in timeslot no. n (the CMU actually transmits a signal in this TS)	see below	dB	V3.05
Description of command				Sig. State
<p>This command defines the active timeslots slots of the BS signal (default values) and the levels for the <i>Individual</i> level mode (see command CONFigure:BSSignal[:CSWitched][:TCH]:MSLot:LMODe on p. 6.204). All 8 timeslots can be enabled and their levels can be set individually. They are defined relative to the <i>Reference Level</i> set via CONFigure:BSSignal[:CSWitched][:TCH]:MSLot:RLEVel (see p. 6.203). The level range quoted above is restricted by the condition that the absolute level (calculated from the reference level and the relative individual levels) must not exceed the level ranges of the RF connectors.</p> <p>Example: With output connector RF2 and a reference level of –85 dBm, the individual timeslot levels can be set in the range –52 dB to +75 dB, corresponding to an absolute level of –137 dBm to –10 dBm.</p> <p>In the default setting, slots 3 and 4 are enabled, both levels are 0 dB. By default, slot no. 3 is also the main timeslot; see CONFigure:BSSignal[:CSWitched][:TCH]:MSLot:MTIMeslot command on p. 6.204.</p> <p>Note 1: The <Enable_n> parameters also apply in used/unused level mode; they overwrite the parameters in the CONFigure:BSSignal[:CSWitched][:TCH]:MSLot:UUNused command.</p> <p>Note 2: Reserved BCCH Slot</p> <p>If the control channel mode is set to BATC (see command CONFigure:BSSignal:CCH[:TX]:MODe on p. 6.200), slots 2 to 6 can be configured as traffic channels. The settings for slots 0, 1 and 7 are ignored; a query returns BCCH for slot no. 0.</p>				≠CEST, Q: all

Subsystem BSSignal:CCH:AUXTx (Aux Tx Signal)

The subsystem *BSSignal:CCH:AUXTx...* configures the additional RF generator signal Aux Tx (with option CMU-B95). It corresponds to the Aux TX section in the *BS Signal* tab in the popup menu *Connect. Control*.

CONFigure:BSSignal:CCH:AUXTx:CHTYpe <Mode>				Aux TX – Channel Type
<Mode>	Description of parameters	Def. value	Def. unit	FW vers.
OFF	Aux TX signal switched off	OFF	–	V3.40
BCCH	Aux TX signal provides the BCCH			
Description of command				Sig. State
This command switches the Aux TX signal on or off.				SON, SOFF

CONFigure:BSSignal:CCH:AUXTx:CHANnel <Channel>		Aux TX – RF Channel		
<Channel>	Description of parameters	Def. value	Def. unit	FW vers.
259 to 293 306 to 340	Number of Aux TX channel, GSM400	266	–	V3.40
128 to 251	Number of Aux TX channel, GSM850	166	–	
0 to 124 955 to 1023	Number of Aux TX channel, GSM900	36	–	
512 to 885	Number of Aux TX channel, GSM1800	731	–	
512 to 810	Number of Aux TX channel, GSM1900	605	–	
Description of command				Sig. State
This command determines the control channel for the CMU signals (BCCH).				SON, SOFF
Note: The control channel must be different from the traffic channel set via <code>CONFigure:BSSignal[:CSwitched][:TCH]:CHANnel</code> (see p. 6.201). An attempt to select equal channel numbers for both channels causes a settings conflict.				

CONFigure:BSSignal:CCH:AUXTx:LEVel[:ABSolute] <Level>		Aux TX – Level		
<Level>	Description of parameters	Def. value	Def. unit	FW vers.
–122 dBm to –72 dBm	Absol. level of Aux TX channel, RF1	–75	dBm	V3.40
–110 dBm to –60 dBm	Absol. level of Aux TX channel, RF2	–75	dBm	
Description of command				Sig. State
This command determines the Aux TX level in absolute units. Output of the Aux TX signal at RF3 OUT is not possible.				all
Note: After a handover the Aux TX level of the origin network is maintained (indication "from other network" in the BS Signal tab of the Connection Control menu), however, the query <code>CONFigure:BSSignal:CCH:AUXTx:LEVel[:ABSolute]?</code> will return the default value of the target network, which may differ from the actual Aux TX level.				
Changing the Aux TX level after a handover (i.e. in the CEST state of the target network) is not allowed and will cause an error message –200, "Execution error".				

Subsystem NETWORK

The subsystem *NETWork* defines various parameters of the network that the CMU reports to the mobile station. The subsystem corresponds to the *Network* tab in the *Connect. Control* menu.

CONFigure:NETWork:BAList <Channel> {,<Channel>}		BA List		
<Channel>	Description of parameters	Def. value	Def. unit	FW vers.
0 to1023 OFF	BCCH ch. numbers BA list switched off	260,330,OFF,...,OFF (GSM400) 130,250,OFF,...,OFF (GSM850) 10,120,OFF,...,OFF (GSM900) 520,620,OFF,... (GSM1800) 550,700,OFF,... (GSM1900)	–	V1.15
Description of command				
This command generates the list of up to 16 used channels in the adjacent cells (BA list, <i>BCCH allocation list</i>). In the query format, the command returns the channel numbers in the BA list.				≠CEST, Q: all

CONFigure:NETWork[:CSWitched]:AOCHarge:ENABLE <Enable>				Advice of Charge
CONFigure:NETWork[:CSWitched]:AOCHarge <Value1>, <Value2> ... , <Value7>				
<Enable>	Description of parameters	Def. value	Def. unit	
ON OFF	Switch on or off data for advice of charge	ON	–	
<Value n> ...	Description of parameters	Def. value	Def. unit	FW vers.
0 to 8191	Values 1 to 7 for calculating the charges	0,0,0,0,0,0,0	–	V1.15
Description of command				Sig. State
The seven numbers denote the following:				≠CEST, Q: all
	Units per interval			
	Seconds / time interval			
	Scaling factor			
	Unit increment			
	Units per data interval			
	Segments / data interval			
	Initial secs / t interval			

CONFigure:NETWork[:CSWitched]:SOFFset <Offset>				Slot Offset
<Offset>	Description of parameters	Def. value	Def. unit	FW vers.
-7 to +7	Slot Offset	0	–	V3.05
Description of command				Sig. State
This command defines the DL timeslot that the mobile loops back to the uplink main timeslot.				≠CEST, Q: all

CONFigure:NETWork:B52Mode <Mode> B52 Mode				
<Offset>	Description of parameters	Def. value	Def. unit	FW vers.
SCOD MSUP	Speech codec reserved for audio tests Speech codec supports BLER measurement	SCOD	–	V3.10
Description of command				Sig. State
This command defines the function of the speech codec.				SOFF, Q: all

Subsystem NETWork:IDENTity

The subsystem *NETWork:IDENTity* defines the identity of the mobile radio network. The subsystem corresponds to the table section *Network Identity* in the *Network* tab of the *Connection Control* menu.

CONFigure:NETWork:IDENTity:NCC <Code>				NCC
<Code>	Description of parameters	Def. value	Def. unit	FW vers.
0 to 7	Color code of mobile network	0	–	V1.15
Description of command				Sig. State
This command defines the color code of the network (<i>NCC = network color</i>) for the signals of the measuring instrument.				SOFF, SON Q: all

CONFigure:NETWork:IDENtity:MCC <Code>				MCC
<Code>	Description of parameters	Def. value	Def. unit	FW vers.
0 to 999	Mobile Country Code	001	–	V1.15
Description of command				Sig. State
This command defines the Mobile Country Code.				SOFF, SON Q: all

CONFigure:NETWork:IDENtity:MNC <Code>				MNC
<Code>	Description of parameters	Def. value	Def. unit	FW vers.
0 to 99	Mobile Network Code, GSM400/900/1800	01	–	V1.15
0 to 999	Mobile Network Code, GSM850/1900	010	–	
Description of command				Sig. State
This command defines the 2- or 3-digit Mobile Network Code.				SOFF, SON Q: all

CONFigure:NETWork:IDENtity:BCC <Code>				BCC
<Code>	Description of parameters	Def. value	Def. unit	FW vers.
0 to 7	BTS Color Code	1	–	V1.15
Description of command				Sig. State
This command defines the Color Code of the BTS (<i>base transceiver station color code, BTS color code = BCC</i>).				SOFF, SON Q: all

CONFigure:NETWork:IDENtity:LAC <Code>				LAC
<Code>	Description of parameters	Def. value	Def. unit	FW vers.
1 to 65533 and 65535	Location Area Code	1	–	V1.15
Description of command				Sig. State
This command defines the Location Area Code.				SOFF, SON Q: all

Subsystem NETWork:SYSTEM (System Parameters)

The subsystem *NETWork:System* determines system parameters for the radio connection. The subsystem corresponds to the table section *System Parameters* in the *Network* tab of the *Connection Control* menu.

CONFigure:NETWork:SYSTem:CACcess <Mode>				Cell Access
<Mode>	Description of parameters	Def. value	Def. unit	FW vers.
BARred NBARred	Radio cell disabled for all mobiles Radio cell accessible	NBARred	–	V1.15
Description of command				Sig. State
This command enables or disables the radio cell for mobiles.				SOFF, SON Q: all

CONFigure:NETWork:SYSTem:BINdicator <Band> Band Indicator				
<Blocks>	Description of parameters	Def. value	Def. unit	FW vers.
G18 G19	GSM band that the mobile can use	see below	–	V3.10
Description of command				Sig. State
This command sets the band indicator of the MS under test. The default value is G18 if the current function group is GSM400/900 or GSM1800 and G19 if the current function group is GSM850 or GSM1900.				≠CEST, Q: all

CONFigure:NETWork:SYSTem:BSAGblksres <Blocks>				Number of Reserved Blocks
<Blocks>	Description of parameters	Def. value	Def. unit	FW vers.
0 to 7	Number of reserved blocks in the BCCH for access channel	0	–	V1.15
Description of command				Sig. State
This command determines the number of data blocks to be reserved for the granted access (<i>access grant channel = AGC</i>) within the BCCH (<i>basic services access grant blocks reserved</i>).				≠CEST, Q: all

CONFigure:NETWork:SYSTem:BSpamfrms <Frames>				Paging Request Interval
<Frames>	Description of parameters	Def. value	Def. unit	FW vers.
2 to 9	Interval between two paging requests	2		V1.15
Description of command				Sig. State
This command defines the interval between two paging requests in a multiframe in frames (<i>basic services paging blocks available per multiframe</i>).				≠CEST, Q: all

CONFigure:NETWork:SYSTem:BSProrganis <Mode>				Paging Reorganisation
<Mode>	Description of parameters	Def. value	Def. unit	FW vers.
ON OFF	Paging reorganization on/off	OFF	–	V2.00
Description of command				Sig. State
This command switches the paging reorganization parameter on and off. In the <i>OFF</i> state, the mobile is prevented from switching to the idle mode.				≠CEST, Q: all

CONFigure:NETWork:SYSTem:PLUdiate <Value>				TS1232, Periodic Location Update
<Value>	Description of parameters	Def. value	Def. unit	FW vers.
OFF 0 to 255	No periodic location update performed Value of T1232 timer	OFF	deci-hours	V3.10
Description of command				Sig. State
This command sets the value of the timer T3212 of the periodic location updating procedure. The unit decihours corresponds to 6 minutes or 360 seconds.				≠CEST, Q: all

CONFigure:NETWork:SYSTem:AClass <Code>			Access Class	
<Code>	Description of parameters	Def. value	Def. unit	FW vers.
0 to 2¹⁶-1 (16 bit value)	Access classes (0 to 15) barred from network access	0	–	V3.05
Description of command				Sig. State
<p>This command prevents mobile stations of definite access classes from making access attempts when the CMU starts transmitting its BCCH channel. The 16 bit value is written to the <i>RACH Control Parameter</i> information element and broadcast to the MS. Each true bit (no. 0 to 15, starting with the least significant bit) means that the corresponding access class is barred.</p> <p>Barring the network access is useful to establish an off-air connection to a mobile station with a particular access class while preventing other mobiles from making access attempts. The feature is not available in manual control. The default value (no access class barred) is restored each time the CMU is rebooted.</p>				SON, SOFF Q: all

Subsystem NETWork[:CSWitched]:SMODE (Type of Signalling)

The subsystem *NETWork[:CSWitched]:SMODE* defines signalling parameters concerning the function of the mobile. The subsystem corresponds to the table section *Signalling Modes* in the *Network* tab of the *Connection Control* menu.

CONFigure:NETWork[:CSWitched]:SMODE:LOCupdate <Mode>			Location Update	
<Mode>	Description of parameters	Def. value	Def. unit	FW vers.
ALWays AUTO	Location update each time the mobile is switched on Only if necessary	ALW	–	V1.20
Description of command				Sig. State
This command determines in which cases the mobile performs a location update.				≠CEST, Q: all

CONFigure:NETWork[:CSWitched]:SMODE:PCHange <Mode>			Power Change Mode	
<Mode>	Description of parameters	Def. value	Def. unit	FW vers.
FAST SLOW	Fast power change Slow power change	FAST	–	V1.15
Description of command				Sig. State
This command determines the speed of power control on the mobile phone. The slow power change is controlled via SACCH (<i>slow associated control channel</i>), the fast power change via FACCH (<i>fast associated control channel</i>).				≠CEST, Q: all

CONFigure:NETWork[:CSWitched]:SMODE:SCHannel <Channel>			Signalling Channel	
<Channel>	Description of parameters	Def. value	Def. unit	FW vers.
SDCCh FACCh NONE	Signalling via <i>stand-alone dedicated control channel</i> Signalling via <i>fast associated control channel</i> No signalling	FACCh	–	V1.15
Description of command				Sig. State
This command determines the control channel type that the CMU uses for signalling.				≠CEST, Q: all

CONFigure:NETWork[:CSWitched]:SMODE:TRAFfic <Mode>				Traffic Mode
<Mode>	Description of parameters	Def. value	Def. unit	FW vers.
FRV1	Full-rate coding, Full Rate Version 1	FRV1	–	V1.15
FRV2	Full Rate Version 2 (Enhanced Full Rate)			
HRV1	Half-rate coding, Half Rate Version 1			
FD48	Full Rate Data 4800 Baud			
FD96	Full Rate Data 9600 Baud			
FD14	Full Rate Data 14400 Baud			
HD24	Half Rate Data 2400 Baud			
HD48	Half Rate Data 4800 Baud			
C1TM	GPRS coding scheme 1 (CS-1)			V3.0
...	...			
C4TM	GPRS coding scheme 4 (CS-4)			
MC1Tm	EGPRS modulation and coding scheme 1 (MCS-1)			
...	...			
MC4Tm	EGPRS modulation and coding scheme 9 (MCS-9)			
AMRH	Adaptive Multi-Rate (AMR) half rate (option CMU-K45)			V3.40
AMRF	Adaptive Multi-Rate (AMR) full rate (option CMU-K45)			
Description of command				Sig. State
This command determines the speech coding and voice transmission in the traffic channels (full-rate channel, half-rate channel, packet data channel etc.).				≠CEST, Q: all

CONFigure:NETWork[:CSWitched]:SMODE:BITStream <Mode>				Bit Stream			
<Mode>	Description of parameters	Def. value	Def. unit	FW vers.			
ECHO	Loop back in the CMU with delay	ECHO	–	V3.05			
LOOP	Loop back in the CMU with minimal delay						
PR9	2 ⁹ -1 PSR bit pattern						
PR11	2 ¹¹ -1 PSR bit pattern						
PR15	2 ¹⁵ -1 PSR bit pattern						
PR16	2 ¹⁶ -1 PSR bit pattern						
HANDset	Handset						
HLOW	Handset Low						
CCAL	Codec Cal						
ECAL	Encoder Cal						
DCAL	Decoder Cal						
Description of command					Sig. State		
This command determines the type of data transmitted in the traffic channel. For BER measurements, one of the pseudo random sequences (PSR) must be used. See note on Current vs. default values on p. 6.187.					all		

CONFigure:NETWork[:CSWitched]:SMODE:LCOMmand <Mode>			Loop Command	
<Mode>	Description of parameters	Def. value	Def. unit	FW vers.
ENABLE	The CMU sends "Close Loop" every time a connection is established	BER	–	V1.15
DISable	The CMU never sends „Close Loop“ → Mobile never sends back			
BER	Loop is closed for BER measurements only			
Description of command				Sig. State
This command determines in which cases the open/close loop command is sent to the mobile. Closing of the loop causes the mobile to send back the bits received.				≠CEST, Q: all

CONFigure:NETWork[:CSWitched]:SMODE:STIme <Mode>			Starting Time	
PROCedure:NETWork[:CSWitched]:SMODE:STIme <Mode>				
<Mode>	Description of parameters	Def. value	Def. unit	FW vers.
0 to 600 Frames	Starting time, number of frames transferred	0	–	V1.15
Description of command				Sig. State
The starting time is used with channel, timeslot and fast power change. The value 0 means that no start time is used. See note on Current vs. default values on p. 6.187.				all

CONFigure:NETWork[:CSWitched]:SMODE:IMSI:MNC <MNC>			Default IMSI:	
CONFigure:NETWork[:CSWitched]:SMODE:IMSI:MCC <MCC>			Mobile Network Code	
CONFigure:NETWork[:CSWitched]:SMODE:IMSI:MSIN <MSIN>			Mobile Country Code	
			Mobile Subscriber Id. No	
Parameter	Value ranges	Def. value	Def. unit	FW vers.
MCC	0 to 999	001	–	V1.15
MNC	0 to 99 (GSM400/900/1800)	01	–	
	0 to 999 (GSM850/1900)	010	–	
MSIN	"0" to "9999999999" *)	"1000000095"	–	
Description of command				Sig. State
This command defines an international mobile subscriber identity (<i>IMSI</i>) which serves as the default setting for a call to the mobile. It consists of the mobile country code (<i>MCC</i>), mobile network code (<i>MNC</i>) and the mobile subscriber identification no. (<i>MSIN</i>). <i>MSIN</i> is a string variable and must be entered in quotation marks (' or ").				≠CEST, Q: all
The values defined here can be overwritten by the mobile parameters. The default value quoted above for <i>MSIN</i> applies to phase II mobiles. The default value for phase I mobiles is "1000000000".				
*) GSM400/900/1800. For GSM850 and GSM1900 networks, the <i>MSIN</i> comprises 9 digits only.				

Subsystem NETWork[:CSWitched]:REQuest (Requested Mobile Data)

The subsystem *NETWork[:CSWitched]:REQuest* determines the signalling parameters of the mobile to be requested. The subsystem corresponds to the table section *Requested Mobile Data* in the *Network* tab of the *Connection Control* menu.

CONFigure:NETWork[:CSWitched]:REQuest:IMSI <Mode>			IMSI Request	
<Mode>	Description of parameters	Def. value	Def. unit	FW vers.
ON 	IMSI requested	ON	–	V1.15
OFF	No request			
Description of command				Sig. State
This command determines whether the international mobile subscriber identity of the connected mobile phone is requested during <i>location update</i> , <i>call to mobile</i> , <i>call from mobile</i> , or <i>SMS transfer</i> .				≠CEST, Q: all

CONFigure:NETWork[:CSWitched]:REQuest:IMEI <Mode>			IMEI Request	
<Mode>	Description of parameters	Def. value	Def. unit	FW vers.
ON 	IMEI requested	ON	–	V1.15
OFF	No request			
Description of command				Sig. State
This command determines whether the international mobile station equipment identity (IMEI) of the connected mobile is requested during <i>location update</i> , <i>call to mobile</i> , <i>call from mobile</i> , or <i>SMS transfer</i> .				≠CEST, Q: all

CONFigure:NETWork[:CSWitched]:REQuest: AUTHenticate <Mode>			Authentication Request	
<Mode>	Description of parameters	Def. value	Def. unit	FW vers.
ON 	Authentication request	OFF	–	V1.15
OFF	No request			
Description of command				Sig. State
This command determines whether an authentication request of the connected mobile is made during <i>location update</i> , <i>call to mobile</i> , <i>call from mobile</i> , or <i>SMS transfer</i> .				≠CEST, Q: all

CONFigure:NETWork[:CSWitched]:REQuest:HANdOver <Mode>			Handover Request	
<Mode>	Description of parameters	Def. value	Def. unit	FW vers.
ON 	Handover request	ON	–	V1.15
OFF	No handover request			
Description of command				Sig. State
This command determines whether the capability to perform a handover is requested on the connected mobile during <i>location update</i> , <i>call to mobile</i> , <i>call from mobile</i> , or <i>SMS transfer</i> .				≠CEST, Q: all

Subsystem NETWork[:CSWitched]:AMR (AMR Codec Test)

The subsystem *NETWork[:CSWitched]:AMR* comprises the commands to test the AMR speech codec. The subsystem corresponds to the table section *Adaptive Multi-Rate (AMR)* in the *Network* tab of the *Connection Control* menu.

CONFigure:NETWork[:CSWitched]:AMR:NSUPpression <Enable>			Noise Suppression	
<Enable>	Description of parameters	Def. value	Def. unit	FW vers.
ON OFF	Noise suppression switched on or off	ON	–	V3.40
Description of command				Sig. State
This command switches noise suppression at the AMR speech codec of the MS on or off.				≠CEST, Q: all

CONFigure:NETWork[:CSWitched]:AMR:HRATE:DLCMode <Mode>		Codec Mode DL, Half Rate		
PROCedure:NETWork[:CSWitched]:AMR:HRATE:DLCMode <Mode>				
<Mode>	Description of parameters	Def. value	Def. unit	FW vers.
CM1 CM2 CM3 CM4	DL codec mode 1, 2, 3, 4	CM3	–	V3.40
Description of command				Sig. State
<p>This command sets the codec mode that the CMU uses to generate the speech data transmitted to the MS under test. The setting is valid for Half Rate AMR speech coder tests; see command CONFigure:NETWork[:CSWitched]:SMODE:TRAFFic on p. 6.211.</p> <p>To query the DL codec mode that the MS requests use [SENSe:]MSSinfo:AMR:HRATE:DLCMode? (p. 6.225).</p>				all

CONFigure:NETWork[:CSWitched]:AMR:FRATE:DLCMode <Mode>		Codec Mode DL, Full Rate		
PROCedure:NETWork[:CSWitched]:AMR:FRATE:DLCMode <Mode>				
<Mode>	Description of parameters	Def. value	Def. unit	FW vers.
CM1 CM2 CM3 CM4	DL codec mode 1, 2, 3, 4	CM3	–	V3.40
Description of command				Sig. State
<p>This command sets the codec mode that the CMU uses to generate the speech data transmitted to the MS under test. The setting is valid for Full Rate AMR speech coder tests; see command CONFigure:NETWork[:CSWitched]:SMODE:TRAFFic on p. 6.211.</p> <p>To query the DL codec mode that the MS requests use [SENSe:]MSSinfo:AMR:FRATE:DLCMode? (see p. 6.225).</p>				all

CONFigure:NETWork[:CSWitched]:AMR:HRATE:ULCMode <Mode>		Codec Mode UL, Half Rate		
PROCedure:NETWork[:CSWitched]:AMR:HRATE:ULCMode <Mode>				
<Mode>	Description of parameters	Def. value	Def. unit	FW vers.
CM1 CM2 CM3 CM4	UL codec mode 1, 2, 3, 4	CM3	–	V3.40
Description of command				Sig. State
<p>This command sets the codec mode that the mobile under test shall use in uplink direction. The setting is valid for Half Rate AMR speech coder tests; see command CONFigure:NETWork[:CSWitched]:SMODE:TRAFFic on p. 6.211.</p> <p>To query the UL codec mode that is actually used by the MS use [SENSe:]MSSinfo:AMR:HRATE:ULCMode? (see p. 6.225).</p>				all

CONFigure:NETWork[:CSWitched]:AMR:FRATE:ULCMode <Mode>		Codec Mode UL, Full Rate		
PROCedure:NETWork[:CSWitched]:AMR:FRATE:ULCMode <Mode>				
<Mode>	Description of parameters	Def. value	Def. unit	FW vers.
CM1 CM2 CM3 CM4	UL codec mode 1, 2, 3, 4	CM3	–	V3.40
Description of command				Sig. State
<p>This command sets the codec mode that the mobile under test shall use in uplink direction. The setting is valid for Full Rate AMR speech coder tests; see command CONFigure:NETWork[:CSWitched]:SMODE:TRAFFic on p. 6.211.</p> <p>To query the UL codec mode that is actually used by the MS use [SENSe:]MSSinfo:AMR:FRATE:ULCMode? (see p. 6.225).</p>				all

CONFigure:NETWork[:CSWitched]:AMR:HRATe:RSETting		AMR Rate Set, Half Rate		
<CM4>, <CM3>, CM2>, <CM1>, <ThrDown4>, <ThrUp3>, <ThrDown3>, <ThrUp2>, <ThrDown2>, <ThrUp1>				
<CM4>, <CM3>, <CM2>, CM1>	Description of parameters	Def. value	Def. unit	FW vers.
C1220 C1020 C0795 C0740 C0670 C0590 C0515 C0475 OFF	User bit rate for codec modes 4 to 1. Mode switched off	C0795, C0670, C0590, C0515,	–	
<ThrDown4>	Description of parameters	Def. value	Def. unit	
0.0 dB to 31.5 dB (in 0.5 dB steps)	Lower decision threshold for switching between modes 4 and 3	15.0,	dB	
<ThrUp3>	Description of parameters	Def. value	Def. unit	
0.0 dB to 31.5 dB (in 0.5 dB steps)	Upper decision threshold for switching between modes 3 and 4	17.0,	dB	
<ThrDown3>	Description of parameters	Def. value	Def. unit	
0.0 dB to 31.5 dB (in 0.5 dB steps)	Lower decision threshold for switching between modes 3 and 2	12.5,	dB	
<ThrUp2>	Description of parameters	Def. value	Def. unit	
0.0 dB to 31.5 dB (in 0.5 dB steps)	Upper decision threshold for switching between modes 2 and 3	15.0,	dB	
<ThrDown2>	Description of parameters	Def. value	Def. unit	
0.0 dB to 31.5 dB (in 0.5 dB steps)	Lower decision threshold for switching between modes 2 and 1	11.0,	dB	
<ThrUp1>	Description of parameters	Def. value	Def. unit	FW vers.
0.0 dB to 31.5 dB (in 0.5 dB steps)	Upper decision threshold for switching between modes 1 and 2	13.0	dB	V3.40
Description of command				Sig. State
<p>These commands select four codec modes and define the decision thresholds for changing the codec mode. The settings are valid for Half Rate AMR speech coder tests; see command CONFigure:NETWork[:CSWitched]:SMODE:TRAFfic on p. 6.211. The instrument rejects the settings (SCPI error –221, Settings conflict) unless the values meet all of the following conditions:</p> <ul style="list-style-type: none"> • The rates must be in descending order so that <CM4> is the largest bit rate. • Up to 3 codec modes can be switched off. OFF must be the first values of the parameter list, preceding the used codec modes. • Thresholds must be in descending order so that <ThrDown2> ≤ <ThrDown3> ≤ <ThrDown4> and <ThrUp1> ≤ <ThrUp2> ≤ <ThrUp3>. • The hysteresis must be positive so that Up (j) ≥ Down (j + 1) for j= 1 to 3 <p>To query the DL codec mode requested by the MS use [SENSe:]MSSinfo:AMR:HRATe:DLCode? and [SENSe:]MSSinfo:AMR:FRATe:DLCode? (see p. 6.225).</p>				≠CEST, Q: all

CONFigure:NETWork[:CSWitched]:AMR:FRATe:RSETting		AMR Rate Set, Full Rate		
<CM4>, <CM3>, <CM2>, <CM1>, <ThrDown4>, <ThrUp3>, <ThrDown3>, <ThrUp2>, <ThrDown2>, <ThrUp1>				
<CM4>, <CM3>, <CM2>, <CM1>	Description of parameters	Def. value	Def. unit	
C1220 C1020 C0795 C0740 C0670 C0590 C0515 C0475	User bit rate for codec modes 4 to 1. The rates must be in descending order so that <CM4> is the largest bit rate	C1220, C0795, C0590, C0475,	–	
<ThrDown4>	Description of parameters	Def. value	Def. unit	
0.0 dB to 31.5 dB (in 0.5 dB steps)	Lower decision threshold for switching between modes 4 and 3	16.5,	dB	
<ThrUp3>	Description of parameters	Def. value	Def. unit	
0.0 dB to 31.5 dB (in 0.5 dB steps)	Upper decision threshold for switching between modes 3 and 4	18.5,	dB	
<ThrDown3>	Description of parameters	Def. value	Def. unit	
0.0 dB to 31.5 dB (in 0.5 dB steps)	Lower decision threshold for switching between modes 3 and 2	11.5,	dB	
<ThrUp2>	Description of parameters	Def. value	Def. unit	
0.0 dB to 31.5 dB (in 0.5 dB steps)	Upper decision threshold for switching between modes 2 and 3	13.5,	dB	
<ThrDown2>	Description of parameters	Def. value	Def. unit	
0.0 dB to 31.5 dB (in 0.5 dB steps)	Lower decision threshold for switching between modes 2 and 1	6.5,	dB	
<ThrUp1>	Description of parameters	Def. value	Def. unit	FW vers.
0.0 dB to 31.5 dB (in 0.5 dB steps)	Upper decision threshold for switching between modes 1 and 2	8.5	dB	V3.40
Description of command				Sig. State
<p>These commands select four codec modes and define the decision thresholds for changing the codec mode. The settings are valid for Full Rate AMR speech coder tests; see command CONFigure:NETWork[:CSWitched]:SMODE:TRAFfic on p. 6.211. The instrument rejects the settings (SCPI error –221, Settings conflict) unless the values meet all of the following conditions:</p> <ul style="list-style-type: none"> • The rates must be in descending order so that <CM4> is the largest bit rate. • Up to 3 codec modes can be switched off. OFF must be the first values of the parameter list, preceding the used codec modes. • Thresholds must be in descending order so that <ThrDown2> ≤ <ThrDown3> ≤ <ThrDown4> and <ThrUp1> ≤ <ThrUp2> ≤ <ThrUp3>. • The hysteresis must be positive so that Up (j) ≥ Down (j + 1) for j= 1 to 3 <p>To query the DL codec mode requested by the MS use [SENSe:]MSSinfo:AMR:HRATe:DLCode? and [SENSe:]MSSinfo:AMR:FRATe:DLCode? (see p. 6.225).</p>				≠CEST, Q: all

Subsystem NETWork[:CSWitched]:TIMEout

The subsystem *NETWork[:CSWitched]:TIMEout* defines timeouts for aborting an unused radio link or an unsuccessful call to the mobile. The subsystem corresponds to the table section *Timeouts* in the *Network* tab of the *Connection Control* menu.

CONFigure:NETWork[:CSWitched]:TIMEout:RLINK[:MOBile] <Time>		Radiolink Timeout Mobile		
<Time>	Description of parameters	Def. value	Def. unit	FW vers.
4 to 64	Number of missing SACCH blocks (the step size is 4)	24	–	V1.15
Description of command				Sig. State
This command defines the maximum number of SACCH blocks which may be missing before a mobile phone considers the radio link to be interrupted (<i>radio link timeout</i>)				≠CEST, Q: all

CONFigure:NETWork[:CSWitched]:TIMEout:RLINK:TESTset <Time>		Radiolink Timeout Testset		
<Time>	Description of parameters	Def. value	Def. unit	FW vers.
4 to 64 OFF	Number of missing SACCH blocks (the step size is 1) Monitoring of radio link is switched off (ie there is no Sync. Lost in the case of missing SACCH blocks)	24	–	V1.15
Description of command				Sig. State
This command determines the maximum number of SACCH blocks which may be missing before the CMU considers the radio link to be interrupted (<i>radio link timeout for test set</i>).				≠CEST, Q: all

CONFigure:NETWork[:CSWitched]:TIMEout:MTC <Time>		MTC Timeout		
<Time>	Description of parameters	Def. value	Def. unit	FW vers.
0 s to 60 s OFF	Time limit for call to mobile No time limit (unlimited ringing)	10	s	V1.15
Description of command				Sig. State
This command determines the maximum dialing time until the mobile accepts the call (<i>mobile terminated call timeout</i>); after this time, the attempted call setup is aborted.				≠CEST, Q: all
In the setting OFF, ringing is possible for an unlimited period of time.				

Subsystem NETWork:SI2Quater

The subsystem *NETWork:SI2Quater* defines the 3G (UMTS) neighbor cell description information that can be transferred to the MS in System Information 2ter. The subsystem corresponds to the table section *3G Neighbor Cell Description* in the *Network* tab of the *Connection Control* menu.

CONFigure:NETWork:SI2Quater:NC3G:ENABLE <Enable>		3G Neighbor Cell Description – Enable		
<Enable>	Description of parameters	Def. value	Def. unit	FW vers.
ON OFF	Enable or disable transmission of 3G neighbor cell information	OFF	–	V3.50
Description of command				Sig. State
This command enables or disables the transfer of 3G neighbor cell information including the selected UARFCN and primary SC.				all

CONFigure:NETWork:SI2Quater:NC3G:FDD:ARFCN <Channel>		FDD ARFCN Band 1		
<Channel>	Description of parameters	Def. value	Def. unit	FW vers.
10562 to 10838	ARFCN	10562	–	V3.50
Description of command				Sig. State
This command defines the UTRAN Radio Frequency Channel number of the 3G neighbor cell.				all

CONFigure:NETWork:SI2Quater:NC3G:FDD:PSCode <Code>		Primary Scrambling Code		
<Channel>	Description of parameters	Def. value	Def. unit	FW vers.
#H000 to #H1FF	Primary Scrambling Code	#H9	–	V3.50
Description of command				Sig. State
This command defines the Primary SC characterizing the 3G neighbor cell.				all

Connector Subsystems (External Attenuation at the Connectors)

The commands in this section configure the input and output connectors. The commands correspond to the tab *RF* in the popup menu *Connect. Control*.

INPut[:STATe] <State>				RF Input
<State>	Description of parameters	Def. value	Def. unit	FW vers.
RF1	Connector RF1 used as input	RF2	–	V1.15
RF2	Connector RF2 used as input			
RF4	Connector RF4 IN used as input			
Description of command				Sig. State
This command determines the connector to be used for RF input signals. The bidirectional connectors RF1 and RF2 can be used both as input and output connectors in the same measurement (see <i>OUTPut[:STATe]</i>).				all
Only one input and one output may be active at the same time, a new RF input setting overwrites the previous one.				

OUTPut[:STATe] <State>				RF Output
<State>	Description of parameters	Def. value	Def. unit	FW vers.
RF1	Connector RF1 used as output	RF2	–	V1.15
RF2	Connector RF2 used as output			
RF3	Connector RF3 OUT used as output			
Description of command				Sig. State
This command determines the connector to be used for RF output signals. The bidirectional connectors RF1 and RF2 can be used as input and output connectors in the same measurement (see <i>INPut[:STATe]</i>).				all
Only one input and one output may be active at the same time, a new RF output setting overwrites the previous one.				

[SENSe:]CORRection:LOSS:INPut<nr>[:MAGNitude] <Attenuation >				Ext. Att. Input
<Attenuation >	Description of parameters	Def. value	Def. unit	FW vers.
–50 dB to +50 dB	Ext. attenuation at RF <nr>, where <nr> = 1,2	0	dB	V1.15
–90 dB to +90 dB	Ext. attenuation at RF 4 IN			
Description of command				Sig. State
This command assigns an external attenuation value to one of the inputs defined before (see command <i>INPut:STATe</i>).				all

[SENSe:]CORRection:LOSS:OUTPut<nr>[:MAGNitude] <Attenuation>				Ext. Att. Output
SOURce:CORRection:LOSS:OUTPut<nr>[:MAGNitude] <Attenuation>				
<Attenuation>	Description of parameters	Def. value	Def. unit	FW vers.
-50 dB to +50 dB	Ext. attenuation at RF <nr>, where <nr> = 1,2	0	dB	V1.15
-90 dB to +90 dB	Ext. attenuation at RF3 OUT			
Description of command				Sig. State
This command assigns an external attenuation value to one of the outputs defined before (see command <code>OUTPut : STATE</code>).				all

ROUTE:SPENcoder[:INPut] <Source>				Speech Encoder
<Source>	Description of parameters	Def. value	Def. unit	FW vers.
HANDset 	Handset is used as source	HAND	-	V2.00
GENerator	AF generator is used as source			
Description of command				Sig. State
This command determines the input source that feeds the CMU speech encoder (option CMU-B52).				all

ROUTE:SPDecoder[:OUTPut] <Destination>				Speech Decoder
<Destination>	Description of parameters	Def. value	Def. unit	FW vers.
HANDset 	Speech decoder output routed to the handset	HAND	-	V2.00
ANALyzer 	Speech dec. output routed to primary AF analyzer			
ANA2 	Speech dec. output routed to secondary AF analyzer			
ABOTH	Speech dec. output routed to both AF analyzers			
Description of command				Sig. State
This command routes the CMU speech decoder output (option CMU-B52). The ANA2 and ABOTH settings are provided in firmware versions ≥ 3.05 .				all

Subsystem DM:CLOCK (Synchronization)

The subsystem *DM:CLOCK* sets a system clock specific to the network. This frequency is set in the tab *Synch.* in the popup menu *Connect. Control*.

SOURce:DM:CLOCK:STATe <Mode>				REF OUT 2 on/off
<Mode>	Description of parameters	Def. value	Def. unit	FW vers.
ON OFF	Switching the system clock frequency on/off	OFF	-	V1.15
Description of command				Sig. State
This command switches the system clock frequency at output <i>REF OUT 2</i> on or off.				SOFF Q: all

SOURce:DM:CLOCK:FREQUENCY <Frequency>				REF OUT 2
<Frequency>	Description of parameters	Def. value	Def. unit	FW vers.
1.2190 MHz to 39.000 MHz	Input value for system clock frequency	13.000	MHz	V1.15
Description of command				Sig. State
This command defines the system clock frequency applied to output <i>REF OUT 2</i> . The frequency entered is rounded to one of the following discrete values:				SOFF Q: all
39.000 MHz, 19.500 MHz, 13.000 MHz, 9.750 MHz, 7.800 MHz, 6.500 MHz, 5.571 MHz, 4.875 MHz, 4.333 MHz, 3.900 MHz, 3.545 MHz, 3.250 MHz, 3.000 MHz, 2.786 MHz, 2.600 MHz, 2.438 MHz, 2.294 MHz, 2.166 MHz, 2.053 MHz, 1.950 MHz, 1.857 MHz, 1.773 MHz, 1.696 MHz, 1.625 MHz, 1.560 MHz, 1.500 MHz, 1.444 MHz, 1.393 MHz, 1.349 MHz, 1.300 MHz, 1.258 MHz, 1.219 MHz				

RREPorts

The subsystem *RREPorts* contains the commands for requesting the receiver report of the mobile. Together with *NETWork[:MS]* the subsystem corresponds to the softkey *MS Rcv. Reports* in the main menu *GSMxxx-MS Overview*. The receiver characteristics do not really represent a measured value, since the values are automatically transmitted during signalling.

[SENSe:]RREPorts:RXLevel?				RX Level
Return	Description of parameters	Def. value	Def. unit	FW vers.
0 to 63	Receive signal level at the mobile phone	NAN	–	V1.15
Description of command				Sig. State
This command is always a query. It outputs the receiver level that the mobile reports to the CMU, expressed in dimensionless levels (see chapter 4).				CEST

[SENSe:]RREPorts:RXQuality?				RX Quality
Return	Description of parameters	Def. value	Def. unit	FW vers.
0 to 7	Received signal quality at the mobile	NAN	–	V1.15
Description of command				Sig. State
This command is always a query. It outputs the received signal quality that the mobile reports to the CMU, expressed in dimensionless quality levels (see chapter 4).				CEST

[SENSe:]RREPorts:RPCL?				Reported PCL
Return	Description of parameters	Def. value	Def. unit	FW vers.
0 to 19	Reported power of mobile phone in PCL units, GSM400/850/900	NAN	PCL	–
0 to 31	GSM1800	NAN	PCL	–
0 to 31	GSM1900	NAN	PCL	V3.05
Description of command				Sig. State
This command is always a query. It returns the transmitter output power in PCL units that the MS reports to the network/CMU.				CEST

[SENSe:]RREPorts:NCELI?		RX Level in Neighbor Cells		
Return	Description of parameters	Def. value	Def. unit	FW vers.
0 to 124 955 to 1023, 0 to 63 NAN	Channel numbers of the 6 neighbor cells RX Level in neighbor cells	NAN, NAN	–	V1.15
Description of command				Sig. State
This command is always a query. It returns the channel number and the signal level for six neighbor channels (see command [SENSe:]RREPorts:RXLevel? and chapter 4). The output list consists of 6 pairs of channels and corresponding RX Levels, separated by commas. The channel numbers depend on the GSM band (the parameter list quoted above is valid for GSM900), see chapter 4.				CEST

[SENSe:]RREPorts:DTX?		DTX		
Returned values	Description of parameters	Def. value	Def. unit	FW vers.
ON OFF	Mobile phone transmits with interruption Mobile phone transmits without interruption	NAN	–	V1.15
Description of command				Sig. State
This command is always a query and returns the DTX mode (<i>discontinuous transmission mode</i>) currently used by the mobile phone.				CEST

[SENSe:]RREPorts:COUNT?		Number of Measurement Reports		
Returned values	Description of parameters	Def. value	Def. unit	FW vers.
0 to n	Number of measurement reports received	0	–	VV2.00
Description of command				Sig. State
This command is always a query and returns the number of receiver reports transmitted since the connection was established. According to GSM specifications, a receiver report is transmitted every 4 multiframes.				CEST

[SENSe:]RREPorts:CVALue?		C Value		
Returned values	Description of parameters	Def. value	Def. unit	FW vers.
0 to 63	Reported C value of the mobile phone (GPRS mode)	NAN	–	V3.50
Description of command				Sig. State
This command is always a query. It returns the normalized received signal level at the MS.				CEST

[SENSe:]RREPorts:SVARiance?		Sign. Var.		
Returned values	Description of parameters	Def. value	Def. unit	FW vers.
0 to 7	Reported signal variance of the mobile (GPRS mode)	NAN	–	V3.50
Description of command				Sig. State
This command is always a query. It returns the variance of the received signal level.				CEST

[SENSe:]RREPorts:GMBep? [SENSe:]RREPorts:EMBep?		Mean BEP, GMSK Mean BEP, 8PSK		
Returned values	Description of parameters	Def. value	Def. unit	FW vers.
0 to 31	Reported mean BEP (EGPRS mode)	NAN	–	V3.50
Description of command				Sig. State
These commands are always queries. They return the average Bit Error Probability (BEP) of GMSK and 8PSK-modulated radio blocks, respectively.				CEST

[SENSe:]RREPorts:GCBep?		CV BEP, GMSK		
[SENSe:]RREPorts:ECBep?		CV BEP, 8PSK		
Returned values	Description of parameters	Def. value	Def. unit	FW vers.
0 to 7	Reported CV BEP (EGPRS mode)	NAN	–	V3.50
Description of command				Sig. State
These commands are always queries. They return the Coefficient of Variation of the Bit Error Probability (BEP) of GMSK and 8PSK-modulated radio blocks, respectively.				CEST

MSSinfo (Signalling Information of Mobile Phone)

The subsystem *MSSinfo* contains the commands for querying the parameters of the mobile. The subsystem corresponds to the *Signalling Info* output table in the main menu *GSMxxx-MS Overview*. The mobile parameters do not actually represent a measured value, they are provided by the mobile phone during location update.

[SENSe:]MSSinfo:IMSI:MCC?				MCC
[SENSe:]MSSinfo:IMSI:MNC?				MNC
[SENSe:]MSSinfo:IMSI:MSIN?				MSIN
Returned parameter	Value ranges	Def. value	Def. unit	FW vers.
MCC	0 to 999	NAN	–	V1.15
MNC	0 to 99 (GSM400/900/1800)	NAN	–	
	0 to 999 (GSM850/1900)	NAN	–	
MSIN	"0" to "9999999999"*	"" (empty string)	–	
Description of command				Sig. State
These commands are always queries and return the international mobile subscriber identification code (IMSI) of the mobile. It consists of the mobile country code (<i>MCC</i>), the mobile network code (<i>MNC</i>) and the mobile subscriber identification no. (<i>MSIN</i>).				SYNC CEST
*) GSM400/900/1800. For GSM850 and GSM1900 networks, MSIN comprises 9 digits only.				

[SENSe:]MSSinfo:IMEI:FAC?				Intern. mobile station equipment id.:	FAC
[SENSe:]MSSinfo:IMEI:TAC?					TAC
[SENSe:]MSSinfo:IMEI:SNR?					SNR
[SENSe:]MSSinfo:IMEI:SVN?					SVN
Returned values	Value ranges	Description of parameters	Def. value	Def. unit	FW vers.
TAC	6-digit	Type approval code	NAN	–	V1.15
FAC	2-digit	Final assembly code	NAN	–	
SNR	6-digit	Serial number	NAN	–	
SVN	1 2-digit	Software version number	NAN	–	
Description of command					Sig. State
These commands are always queries and return the international mobile station equipment identity (IMEI) of the mobile phone. It consists of a type approval code (<i>TCC</i>), the final assembly code (<i>FAC</i>), the serial number (<i>SNR</i>) and the software version number (<i>SVR</i>).					SYNC CEST

[SENSe:]MSSinfo:REVisioN?				MS Rev. Level	
Returned values	Description of parameters	Def. value	Def. unit	FW vers.	
PH1 	Phase 1	NAN	–	V1.15	
PH2 	Phase 2				
PH2P	Phase 2+				
Description of command					Sig. State
This command is always a query and returns the output (GSM phase) of the mobile.					SYNC CEST

[SENSe:]MSSinfo:DNUMBER?			Dialled Number	
Returned values	Description of parameters	Def. value	Def. unit	FW vers.
"Max. 20-digit"	Dialed number	NAN	–	V1.15
Description of command				Sig. State
This command is always a query and returns the number dialed at the mobile.				CEST

[SENSe:]MSSinfo:TRAFFIC?			Traffic Mode	
Returned values	Description of parameters	Def. value	Def. unit	FW vers.
FRV1	Full-rate coding, Full Rate Version 1	NAN	–	V1.15
FRV2	Full Rate Version 2 (Enhanced Full Rate)			
HRV1	Half-rate coding, Half Rate Version 1			
FD48	Full Rate Data 4800 Baud			
FD96	Full Rate Data 9600 Baud			
FD14	Full Rate Data 14400 Baud			
HD24	Half Rate Data 2400 Baud			
HD48	Half Rate Data 4800 Baud			
C1TM to C4TM MC1T to MC9T	Coding scheme 1 to 4 for GPRS Modulation and coding scheme 1 to 9 for EGPRS			
AMRH AMRF	Adaptive Multi-Rate (AMR) half rate (option CMU-K45) Adaptive Multi-Rate (AMR) full rate (option CMU-K45)			V3.40
Description of command				Sig. State
This command is always a query and returns the speech coding and transfer in the traffic channel (full-rate channel, half-rate channel, full-rate channel with variable transfer rate).				CEST

[SENSe:]MSSinfo:POWER:CLASS?			Power Class	
Returned values	Description of parameters	Def. value	Def. unit	FW vers.
1 to 5	Power class of mobile	NAN	–	V1.15
Description of command				Sig. State
This command is always a query and returns the power class of the mobile.				SYNC CEST

[SENSe:]MSSinfo:MSClass:CSWITCHED?			Multislot Class	
Returned values	Description of parameters	Def. value	Def. unit	FW vers.
1 to 29	Multislot class of mobile	NAN	–	V3.05
Description of command				Sig. State
This command is always a query and returns the multislot class of the mobile while it operates in circuit switched mode.				SYNC CEST

[SENSe:]MSSInfo:AMR:HRATe:DLCMode?		Codec Mode DL, requested by MS (Half Rate)		
<Mode>	Description of parameters	Def. value	Def. unit	FW vers.
CM1 CM2 CM3 CM4	DL codec mode 1, 2, 3, 4	NAN	–	V3.40
Description of command				Sig. State
This command is always a query and returns the codec mode that the MS requests according to the AMR Rate Set settings (see command CONFigure:NETWork[:CSwitched]:AMR:HRATe:RSETting (see p. 6.215)). The setting is valid for Half Rate AMR speech coder tests; see command CONFigure:NETWork[:CSwitched]:SMODE:TRAFfic on p. 6.211.				CEST

[SENSe:]MSSInfo:AMR:FRATe:DLCMode?		Codec Mode DL, requested by MS (Full Rate)		
<Mode>	Description of parameters	Def. value	Def. unit	FW vers.
CM1 CM2 CM3 CM4	DL codec mode 1, 2, 3, 4	NAN	–	V3.40
Description of command				Sig. State
This command is always a query and returns the codec mode that the MS requests according to the AMR Rate Set settings (see command CONFigure:NETWork[:CSwitched]:AMR:FRATe:RSETting (see p. 6.242)). The setting is valid for Full Rate AMR speech coder tests; see command CONFigure:NETWork[:CSwitched]:SMODE:TRAFfic on p. 6.211.				CEST

[SENSe:]MSSInfo:AMR:HRATe:ULCMode?		Codec Mode UL, used by MS (Half Rate)		
<Mode>	Description of parameters	Def. value	Def. unit	FW vers.
CM1 CM2 CM3 CM4	UL codec mode 1, 2, 3, 4	NAN	–	V3.40
Description of command				Sig. State
This command is always a query and returns the actual UL codec mode used by the MS, irrespective of the commanded codec mode (see command CONFigure:NETWork[:CSwitched]:AMR:HRATe:ULCMode on p. 6.214). The setting is valid for Half Rate AMR speech coder tests; see command CONFigure:NETWork[:CSwitched]:SMODE:TRAFfic on p. 6.211.				CEST

[SENSe:]MSSInfo:AMR:FRATe:ULCMode?		Codec Mode UL, used by MS (Full Rate)		
<Mode>	Description of parameters	Def. value	Def. unit	FW vers.
CM1 CM2 CM3 CM4	UL codec mode 1, 2, 3, 4	NAN	–	V3.40
Description of command				Sig. State
This command is always a query and returns the actual UL codec mode used by the MS, irrespective of the commanded codec mode (see command CONFigure:NETWork[:CSwitched]:AMR:FRATe:ULCMode on p. 6.214). The setting is valid for Full Rate AMR speech coder tests; see command CONFigure:NETWork[:CSwitched]:SMODE:TRAFfic on p. 6.211.				CEST

File Management – System MMEMemory

The MMEMemory system provides mass storage capabilities for the CMU. The functionality of this system is included in the *Data* menu; see CMU200/300 operating manual.

The mass storage of the CMU may be internal or external. The internal mass storage device is a section on the internal hard disk that is reserved for mass storage (directory c:\temp). The external mass storage device is either a floppy disk or a PCMCIA memory card, depending on the instrument configuration. The <msus> (mass storage unit specifier) parameter in the MMEMemory commands denotes the root directory of the *INTernal* or *EXTernal* mass storage device.

The <FileName> parameter is a string. The contents of the string may contain characters for specifying subdirectories, e.g. "\TEMP\TRASH\test.txt" for the file named *test.txt* in the *TEMP\TRASH* subdirectory of the root directory or "TEMP\TRASH\test.txt" for the file named *test.txt* in the *TEMP\TRASH* subdirectory of the current directory, to be queried with the base system command MMEMemory:DIRectory [:CURrent]?. The file name itself may contain the period as a separator for extensions.

MMEMemory:SAVE:CURrent <FileName> [,<msus>]				
Save configurations in current function group and test mode				
Parameters	Parameter description	Def. value	Def. unit	FW vers.
"<FileName>",	Name of the config. file to be created	–	–	V3.10
INTernal EXTernal	Storage device of the config. file	INTernal	–	
Command description				
This command saves the configuration of the current function group and test mode to a configuration file. A "?" in the specified file name will be replaced by current numbers that are automatically incremented, starting with zero. The auto-increment function overwrites an existing file with a "9" in its file name. For instrument settings that may be different in manual and remote control (e.g. the repetition mode for many measurements) the manual setting is saved. The command is available in all function groups. This command is CMU-specific.				

MMEMemory:RECall:CURrent <FileName> [,<msus>]				
Recall configurations in current function group and test mode				
Parameters	Parameter description	Def. value	Def. unit	FW vers.
"<FileName>",	Name of the config. file to be recalled	–	–	V3.10
INTernal EXTernal	Storage device of the config. file	INTernal	–	
Command description				
This command recalls the configuration of the current function group and test mode from a configuration file. The command is available in all function groups. This command is CMU-specific.				

MMEMemory:L3MSg:CDESTination <FileName>				Change Destination
Parameters	Parameter description	Def. value	Def. unit	FW vers.
"<FileName>"	Default file name	–	–	V3.10
Description of command				
This command has no query form. It changes the default file name and path for logging files in the current storage device. The command is CMU-specific.				

MMEMoRY:L3MSg:SAVE [<FileName>] [<msus>]		Save to File		
Parameters	Parameter description	Def. value	Def. unit	FW vers.
"<FileName>",	Name of the file to be saved	see description	–	–
INTernal EXTernal	Storage device of the file to be saved	INTernal	–	V3.10
Description of command				
<p>This command has no query form. It saves the current ring buffer content to the default logging file INTERNAL\LOG\GSM_L3_?.LOG (if no parameter is specified, see command MMEMoRY:L3MSg:CDEStination) or to the specified file and storage device. In the default file name "GSM_L3_?.LOG" the "?" is replaced by current numbers that are automatically incremented, starting with zero. The auto-increment function overwrites an existing file with a "9" in its file name. The command is CMU-specific.</p> <p>Note: The default directory for logging files INTERNAL\LOG is fixed and can not be overwritten by the base system command MMEMoRY:CDIRectory.</p>				

MMEMoRY:L3MSg:BWRiting <Enable>		Buffer Writing		
Parameters	Parameter description	Def. value	Def. unit	FW vers.
ON OFF	Activate or deactivate buffer writing	OFF	–	V3.10
Description of command				
<p>This command controls data recording into the ring buffer. The command is CMU-specific.</p>				

MMEMoRY:L3MSg:BEMPTy?		Buffer Empty		
Ret. Parameters	Parameter description	Def. value	Def. unit	FW vers.
EMPT FULL	Buffer contains no data Buffer contains data	–	–	V3.10
Description of command				
<p>This command is always a query and returns whether or not the buffer is empty. The command is CMU-specific and has no equivalent in manual control.</p>				

Options and Extensions

The features described in this section require the installation of additional software options; for a complete list of deliverable options refer to the data sheet.

GPRS and EGPRS Signalling (with Options R&S CMU-K42 and R&S CMU-K43)

The remote-control commands presented in this section control the setup and release of a TBF connection, configure the MS and BS Signals and define the network parameters for packet data services. They correspond to the settings in the *Connect. Control* popup menu that are related to packet data services.

Note 1: Current vs. default values

Some parameters of the CMU can assume two independent values: The **default** value is used to set up a connection; it can be modified in the signalling states Signal Off, Idle and Attached. The **current** value is valid during the connection (signalling state TBF Established). Whenever the CMU goes into the TBF Established state the default value overwrites the current value. The current value during the connection can still be changed, however, modifying this current value does not alter the default value. An example for such a double parameter in packet data mode is the bit stream.

Default values are set with a *CONFigure ...* command, current values are set with the corresponding *PROCedure ...* command.

Note 2: Receiver Quality measurements

Several additional commands have been introduced for Receiver Quality measurements on packet-data (GPRS) channels. These commands contain the *PDATa* keyword but are described in section Receiver Quality for systematic reasons.

Signalling – Subsystem SIGNalling:PDATa

The subsystem *SIGNalling:PDATa* controls the connection between the CMU and the MS under test and changes the test mode parameters while a GPRS TBF connection is established (current parameters). In manual control, these functions are distributed over the different *Signalling* tabs (for different signalling states, see command *PROCedure: SIGNalling:PDATa:ACTion*) and the *MS Signal*, *BS Signal* and *Network* tabs in the popup menu *Connect. Control*.

PROCedure:SIGNalling:PDATa:ACTion <Action>		GPRS Signalling Control		
<Action>	Description of parameters	Def. value	Def. unit	FW vers.
SOFF	Switch off BCCH signal (<i>signal off</i>)	–	–	V3.05
SON	Switch on BCCH signal (<i>signal on</i>)			
CTMA	Connect Test Mode A			
CTMB	Connect Test Mode B			
CRA	Connect Reduced Signalling Mode A			
CRSignalling	Connect Reduced Signalling Mode B			
CDLonly	Connect Downlink only			
CBler	Connect Block Error Rate (BLER)			
DISConnect	Disconnect			
HANDoVer	Dual-band handover (to target network defined via CONFigure:HANDoVer:TARGet)			V3.40
CRES	Connect reduced signaling EGPRS symmetrical			
CREA	Connect reduced signaling EGPRS asymmetrical			
Description of command				Sig. State
This command has no query form. It changes between the different packet data signalling states of the CMU. The current state can be queried via SIGN:PDAT:STAT?				See below

Important Note: Signalling States and Local to Remote Switchover

The default signalling state of the CMU in remote control is SOFF (see Fig. 6-2 below). This state is automatically reached on switchover from manual to remote control; an existing connection to the MS under test is dropped.

To suspend this default behavior of the CMU, the base system command SYSTem:GTRM:COMP has been introduced. SYSTem:GTRM:COMP OFF prevents the instrument from changing the signalling state local to remote switchover. In particular, an existing connection is maintained. The default behavior of the CMU is restored each time the instrument is rebooted. For more information see the documentation of the base system commands in the CMU manual.

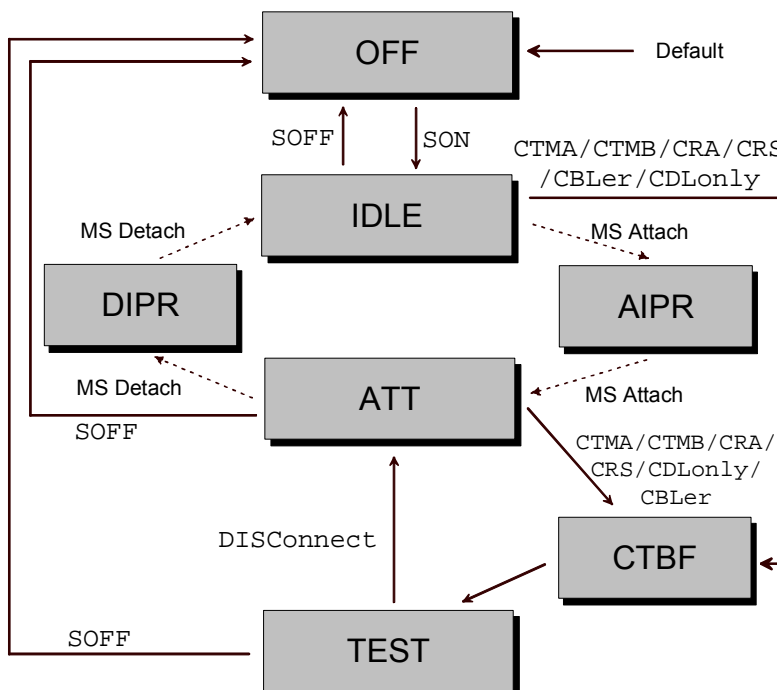


Fig. 6-2 GPRS signalling states of the CMU and transitions

Signalling states: See command [SENSe:]SIGNalling:PDATa:STATe? below.

Actions:

<i>initiated from the CMU:</i>	<i>initiated from the mobile phone:</i>
See description of command	MS Attach MS initiates GPRS-attach
PROC:SIGN:PDAT:ACT	MS Detach MS initiates GPRS-detach

Further transitions between the signalling states (not shown in Fig. 6-2) may occur, e.g. in case of errors. Handover transitions can be performed in analogy to the circuit-switched case; see Fig. 6-1 on p. 6.191.

[SENSe:]SIGNalling:PDATa:STATe?		GPRS Signalling State		
Return	Description of parameters	Def. value	Def. unit	FW vers.
OFF	CMU transmits no control channel signal	OFF	–	V3.01
IDLE	No GPRS-attach performed yet			
ATT	GPRS-attach succeeded			
RAUP	Routing area update in progress			
AIPR	GPRS-attach is currently being performed			
CTBF	CMU attempts a TBF connection			
TEST	TBF connection established			
DIPR	GPRS-detach is currently being performed			
FPEN	Fallback pending			
TPEN	TBF pending			
TED	TBF established dual band			
Description of command				Sig. State
This command is always a query. It returns the current (E)GPRS signalling state.				all
Note: All commands that operate in TEST state can also be used in TED state and vice versa.				

[SENSe:]SIGNalling:PDATa:SERVice?		Service Selection		
Return	Description of parameters	Def. value	Def. unit	FW vers.
TMA	Test Mode A	INV	–	V3.05
TMB	Test Mode B			
LBS	EGPRS Loopback symmetrical			
LBA	EGPRS Loopback asymmetrical			
RSA	Reduced Signalling Mode A			
RSIG	Reduced Signalling Mode B			
RSCS	Reduced Signalling – EGPRS symmetrical			
RSCA	Reduced Signalling – EGPRS asymmetrical			
DLON	Downlink only			
BLER	Block Error Rate			
Description of command				Sig. State
This command is always a query. It returns the current GPRS service. The different test modes are accessed via PROCedure:SIGNalling:PDATa:ACTion (see p. 6.229).				TEST

PROCedure:SIGNalling:PDATa[:TCH]:MSLot:CHANnel <Number>		RF Channel		
<Number>	Description of parameters	Def. value	Def. unit	FW vers.
259 to 293 306 to 340	Number of traffic channel, GSM400	275	–	V3.10
128 to 251	Number of traffic channel, GSM850	192	–	
0 to 124 955 to 1023	Number of traffic channel, GSM900	62	–	
512 to 885	Number of traffic channel, GSM1800	740	–	
512 to 810	Number of traffic channel, GSM1900	610	–	
Description of command				Sig. State
This command changes the RF channel that the CMU uses for data transfer while it is in test mode (current parameter).				TEST, Q: all

PROCEDURE:SIGNalling:PDATa[:TCH]:MSLot:SCONfig		Slot Configuration: Uplink/Downlink		
<Main_TS>,<DL_Enable_0>,..., <DL_Enable_7>, <DL_Power_0>, ..., <DL_Power_7> <UL_Enable_0>,..., <UL_Enable_7>, <UL_Gamma_0>, ..., <UL_Gamma_7>				
<Main_TS>	Description of parameters	Def. value	Def. unit	FW vers.
0 to 7	Main timeslot used for signalling	3	–	V3.10
<DL_Enable_n>	Description of parameters	Def. value	Def. unit	
ON OFF	Enable or disable timeslot no. n	ON (slots 3 and 4) OFF (other slots)	–	
<DL_Power_n>	Description of parameters	Def. value	Def. unit	
–127.0 dB to +127.0 dB	Individual BS level in timeslot no. n:	0.0 (all active DL slots)	dB	
<UL_Enable_n>	Description of parameters	Def. value	Def. unit	
ON OFF	Enable or disable timeslot no. n	ON (slot 3) OFF (other slots)	–	
<UL_Gamma_n>	Description of parameters	Def. value	Def. unit	Sig. State
0 to 31	Power control parameter Γ_{CH} in timeslot no. n	13 (slot 3)	–	CEST
Description of command				
This command changes the main timeslot, the levels in all active or inactive timeslots slots of the BS signal and the channel-specific power control parameters Γ_{CH} that the MS uses in test mode (current values, see <i>Slot Configuration Editor</i> in manual control). This command overwrites the main timeslot defined via CONFigure:BSsignal:PDATa[:TCH]:MSLot:MTimeslot (see p. 6.233).				
For the DL signal all GSM timeslots are available if the control channel mode is set to BOTC (see command CONFigure:BSsignal:CCH[:TX]:MODE on p. 6.200). Their levels are set individually relative to the <i>Reference Level</i> set via [SENSe:]BSsignal:PDATa[:TCH]:MSLot:RLEVel (see p. 6.233). The DL level range quoted above is restricted by the condition that the absolute level (calculated from the reference level and the relative individual levels) must not exceed the level ranges of the RF connectors.				
Example: With output connector RF2 and a reference level of –85 dBm, the individual DL timeslot levels can be set in the range –52 dB to +75 dB, corresponding to an absolute level of –137 dBm to –10 dBm.				
The UL signal settings must be compatible with the capabilities of the MS under test (multislot class, power class).				

PROCEDURE:SIGNalling:PDATa[:TCH]:MSLot:MS:SCONfig:GAMMa		Change of Γ_{CH} <UL_Gamma_0>, ..., <UL_Gamma_7>		
<UL_Gamma_n>	Description of parameters	Def. value	Def. unit	FW vers.
0 to 31	Power control parameter Γ_{CH} in timeslot no. n	13 (slot 3)	–	V3.40
Description of command				Sig. State
This command changes the channel-specific power control parameters Γ_{CH} that the MS uses in test mode (current values, see <i>Slot Configuration Editor</i> in manual control).				CEST

PROCEDURE:SIGNalling:PDATa[:TCH]:MSLot:FHOPping:ENABLE <Enable>		Enable Frequency Hopping		
<Sequence>	Description of parameters	Def. value	Def. unit	FW vers.
ON OFF	Enable or disable frequency hopping	OFF	–	V3.40
Description of command				Sig. State
This command enables or disables frequency hopping in the downlink traffic channel. The hopping sequences are defined via CONFigure:BSsignal:PDATa[:TCH]:MSLot:FHOPping:SEquence ; see p. 6.233.				CEST Q: all

CONFigure:SIGNalling:PDATa:ASConfig:ENABLE <Enable>			Auto Slot Config.	
<Sequence>	Description of parameters	Def. value	Def. unit	FW vers.
ON OFF	Enable or disable automatic slot configuration	OFF	–	V3.50
Description of command				Sig. State
This command enables or disables automatically activation of an appropriate number of slots that is suitable for a particular measurement and supported by the connected MS.				≠TEST, Q: all

Subsystem MSSignal:PDATa (RF Signal of MS under Test)

The subsystem *MSSignal:PDATa* configures the RF signal that the MS under test is to transmit in GPRS test mode. It corresponds to the *Packet Data* section in the *MS Signal* tab of the popup menu *Connect. Control*.

CONFigure:MSSignal:PDATa[:TCH]:MSLot:SCONfig <Enable_0>,...,<Enable_7>,<Gamma_0>,...<Gamma_7>			Uplink Slot Configuration	
<Enable_n>	Description of parameters	Def. value	Def. unit	
ON OFF	Enable or disable uplink timeslot no. n	n = 3: ON	–	
<Gamma_n>	Description of parameters	Def. value	Def. unit	FW vers.
0 to 31	Power control parameter Γ_{CH} in timeslot no. n	3	–	V3.05
Description of command				Sig. State
This command defines the slot configuration and the channel-specific power control parameters Γ_{CH} that the MS is to use in test mode (default parameters). In the default setting, only slot 3 is enabled. Slot no. 3 is also the main timeslot; see CONFigure:BSSignal:PDATa[:TCH]:MSLot:MTimeslot command on p. 6.233.				≠TEST, Q: all

Subsystem BSSignal:PDATa (RF Signal of Base Station/CMU)

The subsystem *BSSignal:PDATa* configures the RF signal that the CMU transmits in packet data transfer mode. It corresponds to the *Packet Data* section in the *BS Signal* tab of the popup menu *Connect. Control*.

CONFigure:BSSignal:PDATa[:TCH]:MSLot:PZERo <P0>			P0 Parameter	
<P0>	Description of parameter	Def. value	Def. unit	FW vers.
0 dB to 31 dB	Value of P0	5	dB	V3.05
Description of command				Sig. State
This command defines the downlink power control parameter P0.				≠TEST, Q: all

CONFigure:BSSignal:PDATa[:TCH]:MSLot:CHANnel <Number>				RF Channel
<Number>	Description of parameters	Def. value	Def. unit	FW vers.
259 to 293 306 to 340	Number of traffic channel, GSM400	275	–	–
128 to 251	Number of traffic channel, GSM850	192	–	–
0 to 124 955 to 1023	Number of traffic channel, GSM900	62	–	–
512 to 885	Number of traffic channel, GSM1800	740	–	–
512 to 810	Number of traffic channel, GSM1900	610	–	V3.05
Description of command				Sig. State
This command changes the RF channel that the CMU shall use for data transfer once it is in test mode (default parameter).				≠TEST, Q: all

CONFigure:BSSignal:PDATa[:TCH]:MSLot:FHOpping:SEquence <Sequence> Hopping Sequence				
<Sequence>	Description of parameters	Def. value	Def. unit	FW vers.
0 to 124, 955 to 1023 OFF	Sequence of up to 6 GSM channels, depending on the GSM band used (example: GSM900), undefined channel number	see below	–	V3.40
Description of command				Sig. State
This command defines a hopping sequence containing up to 6 channel numbers. <i>Off</i> is used to shorten the hopping sequence. Frequency hopping of the downlink traffic channel must be enabled explicitly using PROCedure:SIGNalling:PDATa[:TCH]:MSLot:FHOpping:ENABLE (see p. 6.231). The default hopping sequences depend on the network:				CEST Q: all
GSM400	306	323	340	OFF OFF OFF
GSM850	128	190	251	OFF OFF OFF
GSM900	1	62	124	OFF OFF OFF
GSM1800	512	698	885	OFF OFF OFF
GSM1850	512	660	810	OFF OFF OFF

[SENSe:]BSSignal:PDATa[:TCH]:MSLot:RLEVel? <Level>				Reference Level
<Level>	Description of parameter	Def. value	Def. unit	FW vers.
–116 dBm to –85 dBm	Reference level for all downlink channels	–90	dBm	V3.05
Description of command				Sig. State
This command is always a query. It returns the reference level for all downlink (<i>BS Signal</i>) channels, calculated according to $RLEVel = -85\text{ dB} - PZERO$. Both the current and the default levels in all downlink timeslots are defined relative to the reference level (see commands Error! Reference source not found. and CONFigure:BSSignal:PDATa[:TCH]:MSLot:SCONfig).				all

CONFigure:BSSignal:PDATa[:TCH]:MSLot:MTIMeslot <Number>				Main Timeslot
<Number>	Description of parameters	Def. value	Def. unit	FW vers.
0 to 7	Main timeslot	3	–	V3.05
Description of command				Sig. State
This command changes the main timeslot that the CMU uses for signalling (default parameter). Changing the main timeslot also overwrites the <i>Meas.- Slot</i> (command CONFigure:MCONtrol:MSLot:MESLot). If used in the CEST state, this command overwrites the main timeslot set via PROCedure:SIGNalling:PDATa[:TCH]:MSLot:SCONfig (see p. 6.231).				≠TEST, Q: all

CONFigure:BSSTa[Signal:PDATa]:TCH]:MSLot:SCONfig			Downlink Slot Configuration	
<Enable_0>, ..., <Enable_7>, <Level_0>, ..., <Level_7>				
<Enable_n>	Description of parameters	Def. value	Def. unit	
ON OFF	Enable or disable timeslot no. n (the MS is instructed to listen to this TS)	see below	–	
<Level_n>	Description of parameters	Def. value	Def. unit	FW vers.
–127 dB to +127 dB	Power of CMU in timeslot no. n (the CMU actually transmits a signal in this TS)	see below	dB	V3.05
Description of command				Sig. State
<p>This command changes the slot configuration and the RF levels that the CMU uses in test mode (default parameters). All levels are relative to the reference level queried via [SENSE:]BSSTa[Signal:PDATa]:TCH]:MSLot:RLEVel?. The level range quoted above is restricted by the condition that the absolute level (calculated from the reference level and the relative individual levels) must not exceed the level ranges of the RF connectors.</p> <p>Example: With output connector RF2 and a reference level of –90 dBm, the individual timeslot levels can be set in the range –47 dB to +80 dB, corresponding to an absolute level of –137 dBm to –10 dBm.</p> <p>In the default setting, only slot 3 is enabled, the level is 0 dB. By default, slot no. 3 is also the main timeslot; see CONFigure:BSSTa[Signal:PDATa]:TCH]:MSLot:MTIMeslot command on p. 6.233.</p> <p>Note 2: Reserved BCCH Slot</p> <p><i>If the control channel mode is set to BATC (see command CONFigure:BSSTa[CCH]:TX]:MODE on p. 6.200), slots 2 to 6 can be configured as traffic channels. The settings for slots 0, 1 and 7 are ignored; a query returns BCCH for slot no. 0.</i></p>				≠TEST, Q: all

Subsystem NETWORK

The subsystem *NETWork* determines the parameters of the radio network and the existing radio link. The subsystem corresponds to the *Network* tab in the popup menu *Connect. Control*. The following commands are related to packet data transfer:

CONFigure:NETWork:NSUPport		Network Support		
Return	Description of parameters	Def. value	Def. unit	FW vers.
GSM	Circuit-switched GSM without (E)GPRS support	GSM	–	V3.01
GGPR	Circuit-switched GSM plus GPRS support			
GEGP	Circuit-switched GSM plus EPRS support			
Description of command				Sig. State
<p>This command defines whether or not the CMU currently supports GPRS. It is available with option CMU-K42, <i>GPRS Software Extension</i>, only. The option GEGP is available for firmware versions ≥V3.10 and with option CMU-K43.</p>				SOFF IDLE Q: all

[SENSe:]NETWork:MSERvice?				Main Service
<i>Return</i>	Description of parameters	Def. value	Def. unit	FW vers.
CSWitched	Circuit switched GSM	CSW	–	V3.05
PDATA	GPRS packet data service			
Description of command				Sig. State
This command is always a query and returns whether the MS under test operates in GSM or GPRS mode.				all

Subsystem NETWork:IDENTity

The subsystem *NETWork:IDENTity* defines the identity of the mobile radio network. The subsystem corresponds to the table section *Network Identity* in the *Network* tab. The following commands are related to packet data transfer:

CONFigure:NETWork:IDENTity:RAC <Code>				Routing Area Code
<Code>	Description of parameters	Def. value	Def. unit	FW vers.
0 to 255	Routing area code	0	–	V3.05
Description of command				Sig. State
This command defines the routing area code for GPRS services.				SOFF, IDLE Q: all

Subsystem NETWork:PDATA

The subsystem *NETWork:PDATA* defines the GPRS test mode and the traffic data channel coding scheme. The subsystem corresponds to the table section *Network Identity* in the *Network* tab. The following commands are related to packet data transfer:

CONFigure:NETWork:PDATA:CSCHEME <Coding_Scheme>				Coding Scheme
PROCedure:NETWork:PDATA:CSCHEME <Coding_Scheme>				
<Coding_Scheme>	Description of parameters	Def. value	Def. unit	FW vers.
CS1 to CS4	GPRS channel coding scheme CS-1 to CS-4	CS1	–	V3.05
MCS1 to MCS 9	EGPRS modulation and coding scheme MCS-1 to MCS-4			
Description of command				Sig. State
This command selects the GPRS coding scheme for packet data channels. The EGPRS modulation and coding schemes and the <code>PROCedure . . .</code> command are available in FW versions \geq V3.10. See note on Current vs. default values on p. 6.228.				all

CONFigure:NETWork:PDATA:EGPRs:PSCHeme <PS_1>, ... <PS_12>				Puncturing Scheme
PROCedure:NETWork:PDATA:EGPRs:PSCHeme <PS_1>, ... <PS_12>				
<Coding_Scheme>	Description of parameters	Def. value	Def. unit	FW vers.
P1 P2,	Puncturing scheme for MCS-1	CS1	–	V3.40
P1 P2,	Puncturing scheme for MCS-2			
P1 P2 P3,	Puncturing scheme for MCS-3			
P1 P2 P3,	Puncturing scheme for MCS-4			
P1 P2,	Puncturing scheme for MCS-5			
P1 P2,	Puncturing scheme for MCS-6			
P1 P2 P3,	Puncturing scheme for MCS-7 block 1			
P1 P2 P3,	Puncturing scheme for MCS-7 block 2			
P1 P2 P3,	Puncturing scheme for MCS-8 block 1			
P1 P2 P3,	Puncturing scheme for MCS-8 block 2			
P1 P2 P3,	Puncturing scheme for MCS-9 block 1			
P1 P2 P3	Puncturing scheme for MCS-9 block 2			
Description of command				Sig. State
This command selects the EGPRS puncturing scheme for packet data channels. See note on Current vs. default values on p. 6.228.				all

CONFigure:NETWork:PDATA:EGPPRs:PSCHeme:IREDundancy <Enable>				Incremental Redundancy
<Enable>	Description of parameters	Def. value	Def. unit	FW vers.
ON OFF	Enable or disable incremental redundancy	ON	–	V3.40
Description of command				Sig. State
This command enables or disables incremental redundancy RLC mode for the downlink.				all

CONFigure:NETWork:PDATA:PCMChannel <Type>				PC Meas. Channel
<Type>	Description of parameters	Def. value	Def. unit	FW vers.
BCCH PDCH	PC measurement channel	BCCH	–	V3.05
Description of command				Sig. State
This command defines the channel type that the mobile uses to determine the received signal strength and quality.				SOFF, IDLE Q: all

CONFigure:NETWork:PDATA:USF <Code>				Uplink State Flag
<Code>	Description of parameters	Def. value	Def. unit	FW vers.
0 to 7	Uplink State Flag	0	–	V3.05
Description of command				Sig. State
This command defines the Uplink State Flag (USF) in the blocks transmitted to the MS while the CMU is in GPRS test mode.				SOFF, IDLE Q: all

CONFigure:NETWork:PDATA:UDCYcle <Code>				USF Duty Cycle
<Code>	Description of parameters	Def. value	Def. unit	FW vers.
A100 A000 A012	100 % assigned 0 % assigned, 100 % random 12.5 % assigned, 87.5 % random	A100	–	V3.40
Description of command				Sig. State
This command defines the percentage of downlink radio blocks that are transmitted with the USF assigned to the MS.				TEST Q: all

CONFigure:NETWork:PDATA:EDAllocation <Enable>				Extend. Dyn. Alloc..
<Enable>	Description of parameters	Def. value	Def. unit	FW vers.
ON OFF AUTO	Enable or disable extended dynamic allocation Enable only if the MS supports extended dynamic allocation	AUTO	–	V3.05
Description of command				Sig. State
This command enables or disables extended dynamic allocation of the mobile.				SOFF, IDLE Q: all

CONFigure:NETWork:PDATA:NOPDus <Number>				Number of PDUs
<Number>	Description of parameters	Def. value	Def. unit	FW vers.
1 to 4095	Number of PDUs	4095	–	V3.05
Description of command				Sig. State
This command defines the number of Protocol Data Units (PDUs) that the MS is to transmit in the uplink during GPRS test mode A.				SOFF, IDLE Q: all

CONFigure:NETWork:PDATA:SOFFset <Offset> Slot Offset				
<Code>	Description of parameters	Def. value	Def. unit	FW vers.
0 to 7	Slot Offset	0	–	V3.05
Description of command				Sig. State
This command defines the timeslot to be taken as the first downlink timeslot when the MS is in multislot operation.				SOFF, IDLE Q: all

CONFigure:NETWork:PDATA:TWACK <Enable>				Testmode with ACK
<Enable>	Description of parameters	Def. value	Def. unit	FW vers.
ON OFF	Enable or disable test mode with ACK	OFF	–	V3.05
Description of command				Sig. State
This command enables or disables the operating mode where the mobile periodically transmits a PACKET_UPLINK_ACK_NACK message (GSM 04.60) while it is in test mode B.				SOFF, IDLE Q: all

CONFigure:NETWork:PDATa:RLCMode <Mode>				RLC Mode (Testmode B)
<Mode>	Description of parameters	Def. value	Def. unit	FW vers.
ACKN 	Acknowledged mode (for special applications)	UNAC	–	V3.10
UNAC	Unacknowledged mode			
Description of command				Sig. State
This command defines the downlink RLC mode for a packet data connection in test mode B. According to standard GSM 04.14, test mode B corresponds to <i>Unacknowledged</i> operation where the MS loops back all data received.				SOFF, IDLE, ATT Q: all

CONFigure:NETWork:PDATa:PDPContext <Mode>				PDP Context Activation
<Mode>	Description of parameters	Def. value	Def. unit	FW vers.
ACC 	Accept PDP context activation	ACC	–	V3.50
REJ	Reject PDP context activation			
Description of command				Sig. State
This command determines how the CMU reacts to a PDP context activation initiated by the MS.				all

CONFigure:NETWork:PDATa:BITStream <Mode>				Bit Stream
PROCedure:NETWork:PDATa:BITStream <Mode>				
<Mode>	Description of parameters	Def. value	Def. unit	FW vers.
PR9 	2 ⁹ -1 PSR bit pattern	PR9	–	V3.05
PR11 	2 ¹¹ -1 PSR bit pattern			
PR15 	2 ¹⁵ -1 PSR bit pattern			
PR16	2 ¹⁶ -1 PSR bit pattern			
Description of command				Sig. State
This command defines the pseudo random bit sequence that the CMU transmits to the MS in GPRS test mode. See note on Current vs. default values on p. 6.228.				all

MSSinfo (Signalling information of mobile phone)

The subsystem *MSSinfo* contains the commands for querying the parameters of the mobile. The subsystem corresponds to the *Signalling Info* output table in the main menu *GSMxxx-MS Overview*. The mobile parameters do not actually represent a measured value, they are provided by the mobile phone during location update. The following parameters are related to packet data transfer.

[SENSe:]MSSinfo:MSClass:PDATa[:GPRS]? [SENSe:]MSSinfo:MSClass:PDATa:EGPRS?				Multislot Class
Returned values	Description of parameters	Def. value	Def. unit	FW vers.
1 to 29	Multislot class of mobile	NAN	–	V3.05
Description of command				Sig. State
This command is always a query and returns the multislot class of a GPRS or EGPRS mobile.				ATT TEST

Adaptive Multi-Rate (AMR) Speech Codec (Option R&S CMU-K45)

With option R&S CMU-K45, the CMU provides the functionality for AMR speech codec tests. The additional commands belong to the *NETWork[:CSWitched]...* and *MSSInfo* subsystems.

Subsystem NETWork[:CSWitched]:AMR (AMR Codec Test)

The subsystem *NETWork[:CSWitched]:AMR* comprises the commands to configure and test the AMR speech codec. The subsystem corresponds to the table section *Adaptive Multi-Rate (AMR)* in the *Network* tab of the *Connection Control* menu.

CONFigure:NETWork[:CSWitched]:AMR:NSUPpression <Enable>		Noise Suppression		
<Enable>	Description of parameters	Def. value	Def. unit	FW vers.
ON OFF	Noise suppression switched on or off	ON	–	V3.40
Description of command				Sig. State
This command switches noise suppression at the AMR speech codec of the MS on or off.				≠CEST, Q: all

CONFigure:NETWork[:CSWitched]:AMR:HRATE:DLCMode <Mode>		Codec Mode DL, Half Rate		
PROCedure:NETWork[:CSWitched]:AMR:HRATE:DLCMode <Mode>				
<Mode>	Description of parameters	Def. value	Def. unit	FW vers.
CM1 CM2 CM3 CM4	DL codec mode 1, 2, 3, 4	CM3	–	V3.40
Description of command				Sig. State
This command sets the codec mode that the CMU uses to generate the speech data transmitted to the MS under test. The setting is valid for Half Rate AMR speech coder tests; see command CONFigure:NETWork[:CSWitched]:SMODE:TRAFfic on p. 6.211.				all
To query the DL codec mode that the MS requests use [SENSe:]MSSInfo:AMR:HRATE:DLCMode? (p. 6.225).				

CONFigure:NETWork[:CSWitched]:AMR:FRATE:DLCMode <Mode>		Codec Mode DL, Full Rate		
PROCedure:NETWork[:CSWitched]:AMR:FRATE:DLCMode <Mode>				
<Mode>	Description of parameters	Def. value	Def. unit	FW vers.
CM1 CM2 CM3 CM4	DL codec mode 1, 2, 3, 4	CM3	–	V3.40
Description of command				Sig. State
This command sets the codec mode that the CMU uses to generate the speech data transmitted to the MS under test. The setting is valid for Full Rate AMR speech coder tests; see command CONFigure:NETWork[:CSWitched]:SMODE:TRAFfic on p. 6.211.				all
To query the DL codec mode that the MS requests use [SENSe:]MSSInfo:AMR:FRATE:DLCMode? (see p. 6.225).				

CONFigure:NETWork[:CSWitched]:AMR:HRATE:ULCMode <Mode>		Codec Mode UL, Half Rate		
PROCedure:NETWork[:CSWitched]:AMR:HRATE:ULCMode <Mode>				
<Mode>	Description of parameters	Def. value	Def. unit	FW vers.
CM1 CM2 CM3 CM4	UL codec mode 1, 2, 3, 4	CM3	–	V3.40
Description of command				Sig. State
<p>This command sets the codec mode that the mobile under test shall use in uplink direction. The setting is valid for Half Rate AMR speech coder tests; see command CONFigure:NETWork[:CSWitched]:SMODE:TRAFFic on p. 6.211.</p> <p>To query the UL codec mode that is actually used by the MS use [SENSe:]MSSinfo:AMR:HRATE:ULCMode? (see p. 6.225).</p>				all

CONFigure:NETWork[:CSWitched]:AMR:FRATE:ULCMode <Mode>		Codec Mode UL, Full Rate		
PROCedure:NETWork[:CSWitched]:AMR:FRATE:ULCMode <Mode>				
<Mode>	Description of parameters	Def. value	Def. unit	FW vers.
CM1 CM2 CM3 CM4	UL codec mode 1, 2, 3, 4	CM3	–	V3.40
Description of command				Sig. State
<p>This command sets the codec mode that the mobile under test shall use in uplink direction. The setting is valid for Full Rate AMR speech coder tests; see command CONFigure:NETWork[:CSWitched]:SMODE:TRAFFic on p. 6.211.</p> <p>To query the UL codec mode that is actually used by the MS use [SENSe:]MSSinfo:AMR:FRATE:ULCMode? (see p. 6.225).</p>				all

CONFigure:NETWork[:CSWitched]:AMR:HRATe:RSETting		AMR Rate Set, Half Rate		
<CM4>, <CM3>, CM2>, <CM1>, <ThrDown4>, <ThrUp3>, <ThrDown3>, <ThrUp2>, <ThrDown2>, <ThrUp1>				
<CM4>, <CM3>, <CM2>, CM1>	Description of parameters	Def. value	Def. unit	FW vers.
C1220 C1020 C0795 C0740 C0670 C0590 C0515 C0475 OFF	User bit rate for codec modes 4 to 1. Mode switched off	C0795, C0670, C0590, C0515,	–	
<ThrDown4>	Description of parameters	Def. value	Def. unit	
0.0 dB to 31.5 dB (in 0.5 dB steps)	Lower decision threshold for switching between modes 4 and 3	15.0,	dB	
<ThrUp3>	Description of parameters	Def. value	Def. unit	
0.0 dB to 31.5 dB (in 0.5 dB steps)	Upper decision threshold for switching between modes 3 and 4	17.0,	dB	
<ThrDown3>	Description of parameters	Def. value	Def. unit	
0.0 dB to 31.5 dB (in 0.5 dB steps)	Lower decision threshold for switching between modes 3 and 2	12.5,	dB	
<ThrUp2>	Description of parameters	Def. value	Def. unit	
0.0 dB to 31.5 dB (in 0.5 dB steps)	Upper decision threshold for switching between modes 2 and 3	15.0,	dB	
<ThrDown2>	Description of parameters	Def. value	Def. unit	
0.0 dB to 31.5 dB (in 0.5 dB steps)	Lower decision threshold for switching between modes 2 and 1	11.0,	dB	
<ThrUp1>	Description of parameters	Def. value	Def. unit	FW vers.
0.0 dB to 31.5 dB (in 0.5 dB steps)	Upper decision threshold for switching between modes 1 and 2	13.0	dB	V3.40
Description of command				Sig. State
<p>These commands select four codec modes and define the decision thresholds for changing the codec mode. The settings are valid for Half Rate AMR speech coder tests; see command CONFigure:NETWork[:CSWitched]:SMODE:TRAFfic on p. 6.211. The instrument rejects the settings (SCPI error –221, Settings conflict) unless the values meet all of the following conditions:</p> <ul style="list-style-type: none"> • The rates must be in descending order so that <CM4> is the largest bit rate. • Up to 3 codec modes can be switched off. OFF must be the first values of the parameter list, preceding the used codec modes. • Thresholds must be in descending order so that <ThrDown2> ≤ <ThrDown3> ≤ <ThrDown4> and <ThrUp1> ≤ <ThrUp2> ≤ <ThrUp3>. • The hysteresis must be positive so that Up (j) ≥ Down (j + 1) for j= 1 to 3 <p>To query the DL codec mode requested by the MS use [SENSe:]MSSinfo:AMR:HRATe:DLCode? and [SENSe:]MSSinfo:AMR:FRATe:DLCode? (see p. 6.225).</p>				≠CEST, Q: all

CONFigure:NETWork[:CSWitched]:AMR:FRATe:RSETting		AMR Rate Set, Full Rate		
<CM4>, <CM3>, CM2>, <CM1>, <ThrDown4>, <ThrUp3>, <ThrDown3>, <ThrUp2>, <ThrDown2>, <ThrUp1>				
<CM4>, <CM3>, <CM2>, CM1>	Description of parameters	Def. value	Def. unit	
C1220 C1020 C0795 C0740 C0670 C0590 C0515 C0475	User bit rate for codec modes 4 to 1. The rates must be in descending order so that <CM4> is the largest bit rate	C1220, C0795, C0590, C0475,	–	
<ThrDown4>	Description of parameters	Def. value	Def. unit	
0.0 dB to 31.5 dB (in 0.5 dB steps)	Lower decision threshold for switching between modes 4 and 3	16.5,	dB	
<ThrUp3>	Description of parameters	Def. value	Def. unit	
0.0 dB to 31.5 dB (in 0.5 dB steps)	Upper decision threshold for switching between modes 3 and 4	18.5,	dB	
<ThrDown3>	Description of parameters	Def. value	Def. unit	
0.0 dB to 31.5 dB (in 0.5 dB steps)	Lower decision threshold for switching between modes 3 and 2	11.5,	dB	
<ThrUp2>	Description of parameters	Def. value	Def. unit	
0.0 dB to 31.5 dB (in 0.5 dB steps)	Upper decision threshold for switching between modes 2 and 3	13.5,	dB	
<ThrDown2>	Description of parameters	Def. value	Def. unit	
0.0 dB to 31.5 dB (in 0.5 dB steps)	Lower decision threshold for switching between modes 2 and 1	6.5,	dB	
<ThrUp1>	Description of parameters	Def. value	Def. unit	FW vers.
0.0 dB to 31.5 dB (in 0.5 dB steps)	Upper decision threshold for switching between modes 1 and 2	8.5	dB	V3.40
Description of command				Sig. State
These commands select four codec modes and define the decision thresholds for changing the codec mode. The settings are valid for Full Rate AMR speech coder tests; see command CONFigure:NETWork[:CSWitched]:SMODE:TRAFfic on p. 6.211. The instrument rejects the settings (SCPI error –221, Settings conflict) unless the values meet all of the following conditions:				≠CEST, Q: all
<ul style="list-style-type: none"> • The rates must be in descending order so that <CM4> is the largest bit rate. • Up to 3 codec modes can be switched off. OFF must be the first values of the parameter list, preceding the used codec modes. • Thresholds must be in descending order so that <ThrDown2> ≤ <ThrDown3> ≤ <ThrDown4> and <ThrUp1> ≤ <ThrUp2> ≤ <ThrUp3>. • The hysteresis must be positive so that Up (j) ≥ Down (j + 1) for j= 1 to 3 To query the DL codec mode requested by the MS use [SENSe:]MSSinfo:AMR:HRATe:DLCode? and [SENSe:]MSSinfo:AMR:FRATe:DLCode? (see p. 6.225).				

MSSinfo (AMR Codec Modes)

The subsystem *MSSinfo* contains the commands to query the AMR codec modes used and requested by the mobile. The information is provided in the *Network* tab of the *Connection Control* menu.

[SENSe:]MSSinfo:AMR:HRATe:DLCMode?		Codec Mode DL, requested by MS (Half Rate)		
<Mode>	Description of parameters	Def. value	Def. unit	FW vers.
CM1 CM2 CM3 CM4	DL codec mode 1, 2, 3, 4	NAN	–	V3.40
Description of command				Sig. State
This command is always a query and returns the codec mode that the MS requests according to the <i>AMR Rate Set</i> settings (see command CONFigure:NETWork[:CSwitched]:AMR:HRATe:RSETting (see p. 6.215). The setting is valid for Half Rate AMR speech coder tests; see command CONFigure:NETWork[:CSwitched]:SMODE:TRAFFic on p. 6.211.				CEST

[SENSe:]MSSinfo:AMR:FRATe:DLCMode?		Codec Mode DL, requested by MS (Full Rate)		
<Mode>	Description of parameters	Def. value	Def. unit	FW vers.
CM1 CM2 CM3 CM4	DL codec mode 1, 2, 3, 4	NAN	–	V3.40
Description of command				Sig. State
This command is always a query and returns the codec mode that the MS requests according to the <i>AMR Rate Set</i> settings (see command CONFigure:NETWork[:CSwitched]:AMR:FRATe:RSETting (see p. 6.242). The setting is valid for Full Rate AMR speech coder tests; see command CONFigure:NETWork[:CSwitched]:SMODE:TRAFFic on p. 6.211.				CEST

[SENSe:]MSSinfo:AMR:HRATe:ULCMode?		Codec Mode UL, used by MS (Half Rate)		
<Mode>	Description of parameters	Def. value	Def. unit	FW vers.
CM1 CM2 CM3 CM4	UL codec mode 1, 2, 3, 4	NAN	–	V3.40
Description of command				Sig. State
This command is always a query and returns the actual UL codec mode used by the MS, irrespective of the commanded codec mode (see command CONFigure:NETWork[:CSwitched]:AMR:HRATe:ULCMode on p. 6.214). The setting is valid for Half Rate AMR speech coder tests; see command CONFigure:NETWork[:CSwitched]:SMODE:TRAFFic on p. 6.211.				CEST

[SENSe:]MSSinfo:AMR:FRATe:ULCMode?		Codec Mode UL, used by MS (Full Rate)		
<Mode>	Description of parameters	Def. value	Def. unit	FW vers.
CM1 CM2 CM3 CM4	UL codec mode 1, 2, 3, 4	NAN	–	V3.40
Description of command				Sig. State
This command is always a query and returns the actual UL codec mode used by the MS, irrespective of the commanded codec mode (see command CONFigure:NETWork[:CSwitched]:AMR:FRATe:ULCMode on p. 6.214). The setting is valid for Full Rate AMR speech coder tests; see command CONFigure:NETWork[:CSwitched]:SMODE:TRAFFic on p. 6.211.				CEST

List of Commands

In the following, all remote control commands of the function group GSM900/1800/1900-MS are listed with their parameters and page numbers. They are arranged alphabetically according to the **second** keyword of the command so that related commands belong to the same group. The commands for the two test modes *Non Signalling* and *Signalling* are listed separately.

Commands for GSM Module Tests

Table 6-1 Remote control commands: Non Signalling

Command, Non Signalling	Parameter	Remark	Page
Inputs and outputs			
[SENSe:]CORRection:LOSS:INPut<nr>[:MAGNitude]	-50 dB to +50 dB	with query	6.8
SOURce:CORRection:LOSS:INPut<nr>[:MAGNitude]	-50 dB to +50 dB	with query	6.8
[SENSe:]CORRection:LOSS:OUTPut<nr>:AUXTx[:MAGNitude]	-50 dB to 50 dB	with query	6.9
SOURce:CORRection:LOSS:OUTPut<nr>:AUXTx[:MAGNitude]	-50 dB to 50 dB	with query	6.9
[SENSe:]CORRection:LOSS:OUTPut<nr>[:MAGNitude]	-50 dB to +50 dB	with query	6.9
SOURce:CORRection:LOSS:OUTPut<nr>[:MAGNitude]	-50 dB to +50 dB	with query	6.9
SOURce:DM:CLOCK:FREQuency	1.219 MHz to 39.000 MHz	with query	6.10
SOURce:DM:CLOCK:STATe	ON OFF	with query	6.10
INPut[:STATe]	RF1 RF2 RF4	with query	6.8
OUTPut[:STATe]	RF1 RF2 RF3	with query	6.9
OUTPut:AUXTx[:STATe]	ON OFF	with query	6.9
I/Q-IF Inputs and Outputs			
IQIF:DEFault	ON OFF	with query	3.36
CONFigure:IQIF:RXPath	BYP BYIQ XOIO IOIO IOXO	with query	3.36
CONFigure:IQIF:RXTXcombined	BYP BYIQ XOIO IOIO IOXO FPAT UDEF	with query	3.35
CONFigure:IQIF:TXPath	BYP BYIQ XOIO IOIO IOXO	with query	3.36
Input and output level			
[SENSe:]LEVel:ATTenuation	NORMal LNOise LDISTortion	with query	6.2
[SENSe:]LEVel:DEFault	ON OFF	with query	6.2
[SENSe:]LEVel:MAXimum	<Level>	with query	6.2
[SENSe:]LEVel:MODE	MANual AUTomatic	with query	6.1
File Management			
MMEMemory:RECall:CURRent	<FileName> [,<msus>]	no query	6.12
MMEMemory:SAVE:CURRent	<FileName> [,<msus>]	no query	6.12
Modulation measurement: 8PSK Modulation, Error Vector Magnitude			
INITiate:MODulation:EVMagnitude:EPSK	-	no query	3.87
ABORt:MODulation:EVMagnitude:EPSK	-	no query	3.87
STOP:MODulation:EVMagnitude:EPSK	-	no query	3.87
CONTinue:MODulation:EVMagnitude:EPSK	-	no query	3.87
CONFigure:SUBarrays:MODulation:EVMagnitude:EPSK	ALL ARITHmetical MINimum MAXimum IVAL,<Start>,<Samples>{,<Start>,<Samples>}	with query	3.90

Command, Non Signalling	Parameter	Remark	Page
READ:ARRay:MODulation:EVMagnitude:EPSK:AVERAge?	-100.0 dB to +100.0 dB	query only	3.92
FETCh:ARRay:MODulation:EVMagnitude:EPSK:AVERAge?	-100.0 dB to +100.0 dB	query only	3.92
SAMPlE:ARRay:MODulation:EVMagnitude:EPSK:AVERAge?	-100.0 dB to +100.0 dB	query only	3.92
READ:SUBarrays:MODulation:EVMagnitude:EPSK:AVERAge?	-100.0 dB to +20.0 dB	query only	3.92
FETCh:SUBarrays:MODulation:EVMagnitude:EPSK:AVERAge?	-100.0 dB to +20.0 dB	query only	3.92
SAMPlE:SUBarrays:MODulation:EVMagnitude:EPSK:AVERAge?	-100.0 dB to +20.0 dB	query only	3.92
CONFigure:MODulation:EVMagnitude:EPSK:CONTRol	SCALar ARRay, 1 to 1000 NONE	with query	3.88
CONFigure:MODulation:EVMagnitude:EPSK:CONTRol:DEFault	ON OFF	with query	3.89
CONFigure:MODulation:EVMagnitude:EPSK:CONTRol:REPetition	CONTInuous SINGleshot 1 to 10000, SONerror NONE, STEP NONE	with query	3.88
CONFigure:MODulation:EVMagnitude:EPSK:EREPorting	SRQ SOPC SRSQ OFF	with query	3.87
CALCulate:MODulation:EVMagnitude:EPSK:LIMit:MATChing?	<Result>	query only	3.91
READ:ARRay:MODulation:EVMagnitude:EPSK:MMAximUm?	-100.0 dB to +100.0 dB	query only	3.92
FETCh:ARRay:MODulation:EVMagnitude:EPSK:MMAximUm?	-100.0 dB to +100.0 dB	query only	3.92
SAMPlE:ARRay:MODulation:EVMagnitude:EPSK:MMAximUm?	-100.0 dB to +100.0 dB	query only	3.92
READ:SUBarrays:MODulation:EVMagnitude:EPSK:MMAximUm?	-100.0 dB to +20.0 dB	query only	3.92
FETCh:SUBarrays:MODulation:EVMagnitude:EPSK:MMAximUm?	-100.0 dB to +20.0 dB	query only	3.92
SAMPlE:SUBarrays:MODulation:EVMagnitude:EPSK:MMAximUm?	-100.0 dB to +20.0 dB	query only	3.92
FETCh:MODulation:EVMagnitude:EPSK:STATus?	OFF RUN STOP ERR STEP RDY, 1 to 10000 NONE, 1 to 1000 NONE	query only	3.87
READ[:SCALar]:MODulation:EVMagnitude:EPSK?	<Result>	query only	3.91
FETCh[:SCALar]:MODulation:EVMagnitude:EPSK?	<Result>	query only	3.91
SAMPlE[:SCALar]:MODulation:EVMagnitude:EPSK?	<Result>	query only	3.91
READ:ARRay:MODulation:EVMagnitude:EPSK[:CURRent]?	-100.0 dB to +100.0 dB	query only	3.92
FETCh:ARRay:MODulation:EVMagnitude:EPSK[:CURRent]?	-100.0 dB to +100.0 dB	query only	3.92
SAMPlE:ARRay:MODulation:EVMagnitude:EPSK[:CURRent]?	-100.0 dB to +100.0 dB	query only	3.92
READ:SUBarrays:MODulation:EVMagnitude:EPSK[:CURRent]?	-100.0 dB to +20.0 dB	query only	3.92
FETCh:SUBarrays:MODulation:EVMagnitude:EPSK[:CURRent]?	-100.0 dB to +20.0 dB	query only	3.92
SAMPlE:SUBarrays:MODulation:EVMagnitude:EPSK[:CURRent]?	-100.0 dB to +20.0 dB	query only	3.92
Modulation measurement: 8PSK Modulation, Magnitude Error			
INITiate:MODulation:MERRor:EPSK	-	no query	3.99
ABORt:MODulation:MERRor:EPSK	-	no query	3.99
STOP:MODulation:MERRor:EPSK	-	no query	3.99
CONTInue:MODulation:MERRor:EPSK	-	no query	3.99
CONFigure:SUBarrays:MODulation:MERRor:EPSK	ALL ARITHmetical MINimum MAXimum IVAL, <Start>, <Samples>{, <Start>, <Samples>}	with query	3.102
READ:ARRay:MODulation:MERRor:EPSK:AVERAge?	-100.0 dB to +100.0 dB	query only	3.104
FETCh:ARRay:MODulation:MERRor:EPSK:AVERAge?	-100.0 dB to +100.0 dB	query only	3.104
SAMPlE:ARRay:MODulation:MERRor:EPSK:AVERAge?	-100.0 dB to +100.0 dB	query only	3.104

Command, Non Signalling	Parameter	Remark	Page
READ:SUBarrays:MODulation:MERRor:EPSK:AVERage?	-100.0 dB to +20.0 dB	query only	3.104
FETCh:SUBarrays:MODulation:MERRor:EPSK:AVERage?	-100.0 dB to +20.0 dB	query only	3.104
SAMPlE:SUBarrays:MODulation:MERRor:EPSK:AVERage?	-100.0 dB to +20.0 dB	query only	3.104
CONFigure:MODulation:MERRor:EPSK:CONTRol	SCALar ARRay, 1 to 1000 NONE	with query	3.100
CONFigure:MODulation:MERRor:EPSK:CONTRol:DEFault	ON OFF	with query	3.101
CONFigure:MODulation:MERRor:EPSK:CONTRol:REPetition	CONTInuous SINGleshot 1 to 1000, SONerror NONE, STEP NONE	with query	3.100
CONFigure:MODulation:MERRor:EPSK:EREPorting	SRQ SOPC SRSQ OFF	with query	3.99
CALCulate:MODulation:MERRor:EPSK:LIMit:MATChing?	<Result>	query only	3.103
READ:ARRay:MODulation:MERRor:EPSK:MMAximum?	-100.0 dB to +100.0 dB	query only	3.104
FETCh:ARRay:MODulation:MERRor:EPSK:MMAximum?	-100.0 dB to +100.0 dB	query only	3.104
SAMPlE:ARRay:MODulation:MERRor:EPSK:MMAximum?	-100.0 dB to +100.0 dB	query only	3.104
READ:SUBarrays:MODulation:MERRor:EPSK:MMAximum?	-100.0 dB to +20.0 dB	query only	3.104
FETCh:SUBarrays:MODulation:MERRor:EPSK:MMAximum?	-100.0 dB to +20.0 dB	query only	3.104
SAMPlE:SUBarrays:MODulation:MERRor:EPSK:MMAximum?	-100.0 dB to +20.0 dB	query only	3.104
FETCh:MODulation:MERRor:EPSK:STATus?	OFF RUN STOP ERR STEP RDY, 1 to 10000 NONE, 1 to 1000 NONE	query only	3.99
READ[:SCALar]:MODulation:MERRor:EPSK?	<Result>	query only	3.103
FETCh[:SCALar]:MODulation:MERRor:EPSK?	<Result>	query only	3.103
SAMPlE[:SCALar]:MODulation:MERRor:EPSK?	<Result>	query only	3.103
READ:ARRay:MODulation:MERRor:EPSK[:CURRent]?	-100.0 dB to +100.0 dB	query only	3.104
FETCh:ARRay:MODulation:MERRor:EPSK[:CURRent]?	-100.0 dB to +100.0 dB	query only	3.104
SAMPlE:ARRay:MODulation:MERRor:EPSK[:CURRent]?	-100.0 dB to +100.0 dB	query only	3.104
READ:SUBarrays:MODulation:MERRor:EPSK[:CURRent]?	-100.0 dB to +20.0 dB	query only	3.104
FETCh:SUBarrays:MODulation:MERRor:EPSK[:CURRent]?	-100.0 dB to +20.0 dB	query only	3.104
SAMPlE:SUBarrays:MODulation:MERRor:EPSK[:CURRent]?	-100.0 dB to +20.0 dB	query only	3.104
CONFigure:MODulation:OEMP:EPSK:LIMit:AVERage	<PhaseErrorPeak>, <PhaseErrorRMS>, <MagnErrorPeak>, <MagnErrorRMS>, <EVMEErrorPeak>, <EVMEErrorRMS>, <OriginOffset>, <IQImbalance>, <FreqError>	with query	3.84
CONFigure:MODulation:OEMP:EPSK:LIMit:DEFault	ON OFF	with query	3.85
CONFigure:MODulation:OEMP:EPSK:LIMit:P95Th	<EVM95%>, <MError95%>, <PError95%>	with query	3.85
CONFigure:MODulation:OEMP:EPSK:LIMit[:CURRent]	<PhaseErrorPeak>, <PhaseErrorRMS>, <MagnErrorPeak>, <MagnErrorRMS>, <EVMEErrorPeak>, <EVMEErrorRMS>, <OriginOffset>, <IQImbalance>, <FreqError>	with query	3.84
Modulation measurement: 8PSK Modulation, Overview			
INITiate:MODulation:OVERview:EPSK	-	no query	3.82
ABORt:MODulation:OVERview:EPSK	-	no query	3.82
STOP:MODulation:OVERview:EPSK	-	no query	3.82
CONTInue:MODulation:OVERview:EPSK	-	no query	3.82
CONFigure:MODulation:OVERview:EPSK:CONTRol	SCALar ARRay, 1 to 1000 NONE	with query	3.83

Command, Non Signalling	Parameter	Remark	Page
CONFigure:MODulation:OVERview:EPSK:CONtrol:DEFault	ON OFF	with query	3.84
CONFigure:MODulation:OVERview:EPSK:CONtrol:REPetition	CONTInuous SINGleshot 1 to 10000, SONerror NONE, STEP NONE	with query	3.83
CONFigure:MODulation:OVERview:EPSK:EREPorting	SRQ SOPC SRSQ OFF	with query	3.82
CALCulate:MODulation:OVERview:EPSK:LIMit:MATChing?	<Result>	query only	3.86
FETCh:MODulation:OVERview:EPSK:STATus?	OFF RUN STOP ERR STEP RDY, 1 to 10000 NONE, 1 to 1000 NONE	query only	3.82
READ[:SCALar]:MODulation:OVERview:EPSK?	<Result>	query only	3.85
FETCh[:SCALar]:MODulation:OVERview:EPSK?	<Result>	query only	3.85
SAMPle[:SCALar]:MODulation:OVERview:EPSK?	<Result>	query only	3.85
Modulation measurement: 8PSK Modulation, Phase Error			
INITiate:MODulation[:PERRor]:EPSK	–	no query	3.93
ABORt:MODulation[:PERRor]:EPSK	–	no query	3.93
STOP:MODulation[:PERRor]:EPSK	–	no query	3.93
CONTInue:MODulation[:PERRor]:EPSK	–	no query	3.93
CONFigure:SUBarrays:MODulation[:PERRor]:EPSK	ALL ARITHmetical MINimum MAXimum IVAL,<Start>,<Samples>{,<Start>,<Samples>}	with query	3.96
READ:ARRay:MODulation[:PERRor]:EPSK:AVERAge?	–100.0 dB to +100.0 dB	query only	3.98
FETCh:ARRay:MODulation[:PERRor]:EPSK:AVERAge?	–100.0 dB to +100.0 dB	query only	3.98
SAMPle:ARRay:MODulation[:PERRor]:EPSK:AVERAge?	–100.0 dB to +100.0 dB	query only	3.98
READ:SUBarrays:MODulation[:PERRor]:EPSK:AVERAge?	–100.0 dB to +20.0 dB	query only	3.98
FETCh:SUBarrays:MODulation[:PERRor]:EPSK:AVERAge?	–100.0 dB to +20.0 dB	query only	3.98
SAMPle:SUBarrays:MODulation[:PERRor]:EPSK:AVERAge?	–100.0 dB to +20.0 dB	query only	3.98
CONFigure:MODulation[:PERRor]:EPSK:CONtrol	SCALar ARRay, 1 to 1000 NONE	with query	3.94
CONFigure:MODulation[:PERRor]:EPSK:CONtrol:DEFault	ON OFF	with query	3.95
CONFigure:MODulation[:PERRor]:EPSK:CONtrol:REPetition	CONTInuous SINGleshot 1 to 10000, SONerror NONE, STEP NONE	with query	3.94
CONFigure:MODulation[:PERRor]:EPSK:EREPorting	SRQ SOPC SRSQ OFF	with query	3.93
CALCulate:MODulation[:PERRor]:EPSK:LIMit:MATChing?	<Result>	query only	3.97
READ:ARRay:MODulation[:PERRor]:EPSK:MMAximum?	–100.0 dB to +100.0 dB	query only	3.98
FETCh:ARRay:MODulation[:PERRor]:EPSK:MMAximum?	–100.0 dB to +100.0 dB	query only	3.98
SAMPle:ARRay:MODulation[:PERRor]:EPSK:MMAximum?	–100.0 dB to +100.0 dB	query only	3.98
READ:SUBarrays:MODulation[:PERRor]:EPSK:MMAximum?	–100.0 dB to +20.0 dB	query only	3.98
FETCh:SUBarrays:MODulation[:PERRor]:EPSK:MMAximum?	–100.0 dB to +20.0 dB	query only	3.98
SAMPle:SUBarrays:MODulation[:PERRor]:EPSK:MMAximum?	–100.0 dB to +20.0 dB	query only	3.98
FETCh:MODulation[:PERRor]:EPSK:STATus?	OFF RUN STOP ERR STEP RDY, 1 to 10000 NONE, 1 to 1000 NONE	query only	3.93
READ[:SCALar]:MODulation[:PERRor]:EPSK?	<Result>	query only	3.97
FETCh[:SCALar]:MODulation[:PERRor]:EPSK?	<Result>	query only	3.97
SAMPle[:SCALar]:MODulation[:PERRor]:EPSK?	<Result>	query only	3.97
READ:ARRay:MODulation[:PERRor]:EPSK[:CURRent]?	–100.0 dB to +100.0 dB	query only	3.98
FETCh:ARRay:MODulation[:PERRor]:EPSK[:CURRent]?	–100.0 dB to +100.0 dB	query only	3.98
SAMPle:ARRay:MODulation[:PERRor]:EPSK[:CURRent]?	–100.0 dB to +100.0 dB	query only	3.98

Command, Non Signalling	Parameter	Remark	Page
READ:SUBarrays:MODulation[:PERRor]:EPSK[:CURRent]?	-100.0 dB to +20.0 dB	query only	3.98
FETCh:SUBarrays:MODulation[:PERRor]:EPSK[:CURRent]?	-100.0 dB to +20.0 dB	query only	3.98
SAMPlE:SUBarrays:MODulation[:PERRor]:EPSK[:CURRent]?	-100.0 dB to +20.0 dB	query only	3.98
Modulation measurement: GMSK Modulation, Phase Error			
INITiate:MODulation[:PERRor][:GMSK]	-	no query	3.66
ABORt:MODulation[:PERRor][:GMSK]	-	no query	3.66
STOP:MODulation[:PERRor][:GMSK]	-	no query	3.66
CONTInue:MODulation[:PERRor][:GMSK]	-	no query	3.66
CONFIgure:SUBarrays:MODulation[:PERRor][:GMSK]	ALL ARITHmetical MINimum MAXimum IVAL, <Start>, <Samples>, <Start>, <Samples>	with query	3.70
READ:ARRay:MODulation[:PERRor][:GMSK]:AVERAge?	-100.0 dB to +100.0 dB	query only	3.72
FETCh:ARRay:MODulation[:PERRor][:GMSK]:AVERAge?	-100.0 dB to +100.0 dB	query only	3.72
SAMPlE:ARRay:MODulation[:PERRor][:GMSK]:AVERAge?	-100.0 dB to +100.0 dB	query only	3.72
READ:SUBarrays:MODulation[:PERRor][:GMSK]:AVERAge?	-100.0 dB to +20.0 dB	query only	3.73
FETCh:SUBarrays:MODulation[:PERRor][:GMSK]:AVERAge?	-100.0 dB to +20.0 dB	query only	3.73
SAMPlE:SUBarrays:MODulation[:PERRor][:GMSK]:AVERAge?	-100.0 dB to +20.0 dB	query only	3.73
CONFIgure:MODulation[:PERRor][:GMSK]:CONTrol	SCALAR ARRAY, 1 to 1000 NONE	with query	3.67
CONFIgure:MODulation[:PERRor][:GMSK]:CONTrol:DEFault	ON OFF	with query	3.68
CONFIgure:MODulation[:PERRor][:GMSK]:CONTrol:REPetition	CONTInuous SINGleshot 1 to 10000, SONerror NONE, STEP NONE	with query	3.68
CONFIgure:MODulation[:PERRor][:GMSK]:EREPorting	SRQ SOPC SRSQ OFF	with query	3.66
CONFIgure:MODulation[:PERRor][:GMSK]:FILTer	G500 B600	with query	3.67
CONFIgure:MODulation[:PERRor][:GMSK]:LIMit:AVERAge	0.0 deg to 50.0 deg, 0.0 deg to 50.0 deg, 0 Hz to 999 Hz	with query	3.69
CONFIgure:MODulation[:PERRor][:GMSK]:LIMit:DEFault	ON OFF	with query	3.69
CONFIgure:MODulation[:PERRor][:GMSK]:LIMit:LOWer:MODE	ON OFF	with query	3.69
CALCulate:MODulation[:PERRor][:GMSK]:LIMit:MATCHing?	<Result>	query only	3.72
CONFIgure:MODulation[:PERRor][:GMSK]:LIMit:UPPer:MODE	ON OFF	with query	3.69
CONFIgure:MODulation[:PERRor][:GMSK]:LIMit[:CURRent]	0.0 deg to 50.0 deg, 0.0 deg to 50.0 deg, 0 Hz to 999 Hz	with query	3.68
READ:ARRay:MODulation[:PERRor][:GMSK]:MMAximum?	-100.0 dB to +100.0 dB	query only	3.72
FETCh:ARRay:MODulation[:PERRor][:GMSK]:MMAximum?	-100.0 dB to +100.0 dB	query only	3.72
SAMPlE:ARRay:MODulation[:PERRor][:GMSK]:MMAximum?	-100.0 dB to +100.0 dB	query only	3.72
READ:SUBarrays:MODulation[:PERRor][:GMSK]:MMAximum?	-100.0 dB to +20.0 dB	query only	3.73
FETCh:SUBarrays:MODulation[:PERRor][:GMSK]:MMAximum?	-100.0 dB to +20.0 dB	query only	3.73
SAMPlE:SUBarrays:MODulation[:PERRor][:GMSK]:MMAximum?	-100.0 dB to +20.0 dB	query only	3.73
FETCh:MODulation[:PERRor][:GMSK]:STATus?	OFF RUN STOP ERR STEP RDY, 1 to 10000 NONE, 1 to 1000 NONE	query only	3.67
CONFIgure:MODulation[:PERRor][:GMSK]:TIME:DECode	STANdard GTBits	with query	3.70
READ[:SCALAR]:MODulation[:PERRor][:GMSK]?	<Result>	query only	3.71
FETCh[:SCALAR]:MODulation[:PERRor][:GMSK]?	<Result>	query only	3.71
SAMPlE[:SCALAR]:MODulation[:PERRor][:GMSK]?	<Result>	query only	3.71
READ:ARRay:MODulation[:PERRor][:GMSK]:CURRent?	-100.0 dB to +100.0 dB	query only	3.72

Command, Non Signalling	Parameter	Remark	Page
FETCh:ARRay:MODulation[:PERRor[:GMSK[:CURRent]?]	-100.0 dB to +100.0 dB	query only	3.72
SAMPlE:ARRay:MODulation[:PERRor[:GMSK[:CURRent]?]	-100.0 dB to +100.0 dB	query only	3.72
READ:SUBarrays:MODulation[:PERRor[:GMSK[:CURRent]?]	-100.0 dB to +20.0 dB	query only	3.73
FETCh:SUBarrays:MODulation[:PERRor[:GMSK[:CURRent]?]	-100.0 dB to +20.0 dB	query only	3.73
SAMPlE:SUBarrays:MODulation[:PERRor[:GMSK[:CURRent]?]	-100.0 dB to +20.0 dB	query only	3.73
Modulation measurement: GMSK Modulation, Extended Phase Error			
INITiate:MODulation:XPERror[:GMSK]	-	no query	3.74
ABORt:MODulation:XPERror[:GMSK]	-	no query	3.74
STOP:MODulation:XPERror[:GMSK]	-	no query	3.74
CONTinue:MODulation:XPERror[:GMSK]	-	no query	3.74
CONFigure:SUBarrays:MODulation:XPERror[:GMSK]	ALL ARITHmetical MINimum MAXimum IVAL,<Start>,<Samples>{,<Start>,<Samples>}	with query	3.78
READ:ARRay:MODulation:XPERror[:GMSK]:AVERage?	-100.0 dB to +100.0 dB	query only	3.80
FETCh:ARRay:MODulation:XPERror[:GMSK]:AVERage?	-100.0 dB to +100.0 dB	query only	3.80
SAMPlE:ARRay:MODulation:XPERror[:GMSK]:AVERage?	-100.0 dB to +100.0 dB	query only	3.80
READ:SUBarrays:MODulation:XPERror[:GMSK]:AVERage?	-100.0 dB to +20.0 dB	query only	3.81
FETCh:SUBarrays:MODulation:XPERror[:GMSK]:AVERage?	-100.0 dB to +20.0 dB	query only	3.81
SAMPlE:SUBarrays:MODulation:XPERror[:GMSK]:AVERage?	-100.0 dB to +20.0 dB	query only	3.81
CONFigure:MODulation:XPERror[:GMSK]:CONTrol	SCALar ARRay, 1 to 1000 NONE	with query	3.75
CONFigure:MODulation:XPERror[:GMSK]:CONTrol:DEFault	ON OFF	with query	3.76
CONFigure:MODulation:XPERror[:GMSK]:CONTrol:REPetition	CONTinuous SINGleshot 1 to 10000, SONerror NONE, STEP NONE	with query	3.76
CONFigure:MODulation:XPERror[:GMSK]:EREPorting	SRQ SOPC SRSQ OFF	with query	3.74
CONFigure:MODulation:XPERror[:GMSK]:FILTer	G500 B600	with query	3.75
CONFigure:MODulation:XPERror[:GMSK]:LIMit:AVERage	0.0 deg to 50.0 deg, 0.0 deg to 50.0 deg, -100 dB to 0 dB, -100 dB to 0 dB, 0 Hz to 999 Hz	with query	3.77
CONFigure:MODulation:XPERror[:GMSK]:LIMit:DEFault	ON OFF	with query	3.77
CONFigure:MODulation:XPERror[:GMSK]:LIMit:LOWer:MODE	ON OFF	with query	3.77
CALCulate:MODulation:XPERror[:GMSK]:LIMit:MATCHing?	<Result>	query only	3.80
CONFigure:MODulation:XPERror[:GMSK]:LIMit:UPPer:MODE	ON OFF	with query	3.77
CONFigure:MODulation:XPERror[:GMSK]:LIMit[:CURRent]	0.0 deg to 50.0 deg, 0.0 deg to 50.0 deg, -100 dB to 0 dB, -100 dB to 0 dB, 0 Hz to 999 Hz	with query	3.76
READ:ARRay:MODulation:XPERror[:GMSK]:MMAximum?	-100.0 dB to +100.0 dB	query only	3.80
FETCh:ARRay:MODulation:XPERror[:GMSK]:MMAximum?	-100.0 dB to +100.0 dB	query only	3.80
SAMPlE:ARRay:MODulation:XPERror[:GMSK]:MMAximum?	-100.0 dB to +100.0 dB	query only	3.80
READ:SUBarrays:MODulation:XPERror[:GMSK]:MMAximum?	-100.0 dB to +20.0 dB	query only	3.81
FETCh:SUBarrays:MODulation:XPERror[:GMSK]:MMAximum?	-100.0 dB to +20.0 dB	query only	3.81
SAMPlE:SUBarrays:MODulation:XPERror[:GMSK]:MMAximum?	-100.0 dB to +20.0 dB	query only	3.81
FETCh:MODulation:XPERror[:GMSK]:STATus?	OFF RUN STOP ERR STEP RDY, 1 to 10000 NONE, 1 to 1000 NONE	query only	3.74
CONFigure:MODulation:XPERror[:GMSK]:TIME:DECode	STANdard GTBits	with query	3.75
READ[:SCALar]:MODulation:XPERror[:GMSK]?]	<Result>	query only	3.79
FETCh[:SCALar]:MODulation:XPERror[:GMSK]?]	<Result>	query only	3.79

Command, Non Signalling	Parameter	Remark	Page
SAMPlE[:SCALar]:MODulation:XPERror[:GMSK]?	<Result>	query only	3.79
READ:ARRay:MODulation:XPERror[:GMSK][:CURRent]?	-100.0 dB to +100.0 dB	query only	3.80
FETCh:ARRay:MODulation:XPERror[:GMSK][:CURRent]?	-100.0 dB to +100.0 dB	query only	3.80
SAMPlE:ARRay:MODulation:XPERror[:GMSK][:CURRent]?	-100.0 dB to +100.0 dB	query only	3.80
READ:SUBarrays:MODulation:XPERror[:GMSK][:CURRent]?	-100.0 dB to +20.0 dB	query only	3.81
FETCh:SUBarrays:MODulation:XPERror[:GMSK][:CURRent]?	-100.0 dB to +20.0 dB	query only	3.81
SAMPlE:SUBarrays:MODulation:XPERror[:GMSK][:CURRent]?	-100.0 dB to +20.0 dB	query only	3.81
NPOWER measurement			
INITiate:NPOWER	-	no query	3.40
ABORt:NPOWER	-	no query	3.40
STOP:NPOWER	-	no query	3.40
CONTInue:NPOWER	-	no query	3.40
CONFigure:NPOWER:CONTRol	1 to 1000 NONE,CONTInuous SINGleshot 1 ... 10000, SONerror NONE,STEP NONE	with query	3.41
CONFigure:NPOWER:CONTRol:REPetition	CONTInuous SINGleshot 1 ... 10000, SONerror NONE,STEP NONE	with query	3.42
CONFigure:NPOWER:CONTRol:STATistics	1 to 1000 NONE	with query	3.41
CONFigure:NPOWER:EREPorting	SRQ SOPC SRSQ OFF	with query	3.40
FETCh:NPOWER:STATus?	OFF RUN STOP ERR STEP RDY, 1 to 10000 NONE, 1 to 1000 NONE	query only	3.40
READ[:SCALar]:NPOWER?	-30 dBm to +30 dBm	query only	3.42
FETCh[:SCALar]:NPOWER?	-30 dBm to +30 dBm	query only	3.42
SAMPlE[:SCALar]:NPOWER?	-30 dBm to +30 dBm	query only	3.42
Options			
SYSTem:OPTions:INFO:CURRent?		query only	6.34
POWER:FRAME measurement			
INITiate:POWER:FRAME	-	no query	3.52
ABORt:POWER:FRAME	-	no query	3.52
STOP:POWER:FRAME	-	no query	3.52
CONTInue:POWER:FRAME	-	no query	3.52
CONFigure:SUBarrays:POWER:FRAME	ALL ARITHmetical MINimum MAXimum IVAL,<Start>,<Samples>{,<Start>,<Samples>}	with query	3.54
CONFigure:POWER:FRAME:CONTRol:DEFault	ON OFF	with query	3.53
CONFigure:POWER:FRAME:CONTRol:REPetition	CONTInuous SINGleshot 1 to 10000, SONerror NONE, STEP NONE	with query	3.53
CONFigure:POWER:FRAME:EREPorting	SRQ SOPC SRSQ OFF	with query	3.52
CONFigure:POWER:FRAME:FCOunt	1 to 128	with query	3.52
READ[:SCALar]:POWER:FRAME:FPOWER<nr>?	<Result>	query only	3.55
FETCh[:SCALar]:POWER:FRAME:FPOWER<nr>?	<Result>	query only	3.55
SAMPlE[:SCALar]:POWER:FRAME:FPOWER<nr>?	<Result>	query only	3.55
FETCh:POWER:FRAME:STATus?	OFF RUN STOP ERR STEP RDY, 1 to 10000 NONE	query only	3.52
READ:ARRay:POWER:FRAME?	<Result>	query only	3.55
FETCh:ARRay:POWER:FRAME?	<Result>	query only	3.55

Command, Non Signalling	Parameter	Remark	Page
SAMPlE:ARRAy:POWer:FRAMe?	<Result>	query only	3.55
READ:SUBArrays:POWer:FRAMe?	<Result>	query only	3.55
FETCh:SUBArrays:POWer:FRAMe?	<Result>	query only	3.55
SAMPlE:SUBArrays:POWer:FRAMe?	<Result>	query only	3.55
POWER:MSLot measurement			
INITiate:POWer:MSLot	–	no query	3.56
ABORt:POWer:MSLot	–	no query	3.56
STOP:POWer:MSLot	–	no query	3.56
CONTInue:POWer:MSLot	–	no query	3.56
CONFigure:SUBArrays:POWer:MSLot	ALL ARITHmetical MINimum MAXimum, <Start>, <Samples>{, <Start>, <Samples>}	with query	3.60
[SENSe:]ARRAy:POWer:MSLot:AREA:LIMit:INFO:STIMe?	<Start_Time>	query only	3.65
[SENSe:]ARRAy:POWer:MSLot:AREA:LIMit:LOWer:INFO?	<Result>	query only	3.64
[SENSe:]ARRAy:POWer:MSLot:AREA:LIMit:LOWer:LEVel?	<Result>	query only	3.64
[SENSe:]ARRAy:POWer:MSLot:AREA:LIMit:LOWer:TIME?	<Result>	query only	3.64
CALCulate:ARRAy:POWer:MSLot:AREA:LIMit:MATChing:MINimum?	<Matching>	query only	3.63
CALCulate:ARRAy:POWer:MSLot:AREA:LIMit:MATChing[:CURRent]?	<Matching>	query only	3.63
[SENSe:]ARRAy:POWer:MSLot:AREA:LIMit:UPPer:INFO?	<Result>	query only	3.64
[SENSe:]ARRAy:POWer:MSLot:AREA:LIMit:UPPer:LEVel?	<Result>	query only	3.64
[SENSe:]ARRAy:POWer:MSLot:AREA:LIMit:UPPer:TIME?	<Result>	query only	3.64
READ:ARRAy:POWer:MSLot:AVERAge?	–100.0 dB to +20.0 dB	query only	3.62
FETCh:ARRAy:POWer:MSLot:AVERAge?	–100.0 dB to +20.0 dB	query only	3.62
SAMPlE:ARRAy:POWer:MSLot:AVERAge?	–100.0 dB to +20.0 dB	query only	3.62
READ:SUBArrays:POWer:MSLot:AVERAge?	–100.0 dB to +20.0 dB	query only	3.63
FETCh:SUBArrays:POWer:MSLot:AVERAge?	–100.0 dB to +20.0 dB	query only	3.63
SAMPlE:SUBArrays:POWer:MSLot:AVERAge?	–100.0 dB to +20.0 dB	query only	3.63
CONFigure:POWer:MSLot:CONTRol	SCALAr ARRAy, 1 to 1000 NONE	with query	3.57
CONFigure:POWer:MSLot:CONTRol:DEFault	ON OFF	with query	3.58
DISPlay:POWer:MSLot:CONTRol:GRID	ON OFF	with query	3.57
CONFigure:POWer:MSLot:CONTRol:REPetition	CONTInuous SINGleshot 1 to 10000, SONerror NONE, STEP NONE	with query	3.57
CONFigure:POWer:MSLot:EREPorting	SRQ SOPC SRSQ OFF	with query	3.56
CONFigure:POWer:MSLot:FILTer	G500 B600	with query	3.59
CONFigure:POWer:MSLot:LIMit:LINE:GLEVel	0.00 dB to +10.00 dB	with query	3.59
CALCulate:ARRAy:POWer:MSLot:LIMit:MATChing:MINimum?	<Matching>	query only	3.63
CALCulate:POWer:MSLot:LIMit:MATChing?	AvgBurstPowerCurr, PeakBurstPowerCurr, BurstMatching, AvgBurstPowerAvg	query only	3.61
CALCulate:ARRAy:POWer:MSLot:LIMit:MATChing[:CURRent]?	<Matching>	query only	3.63
READ:ARRAy:POWer:MSLot:MAXimum?	–100.0 dB to +20.0 dB	query only	3.62
FETCh:ARRAy:POWer:MSLot:MAXimum?	–100.0 dB to +20.0 dB	query only	3.62
SAMPlE:ARRAy:POWer:MSLot:MAXimum?	–100.0 dB to +20.0 dB	query only	3.62
READ:SUBArrays:POWer:MSLot:MAXimum?	–100.0 dB to +20.0 dB	query only	3.63
FETCh:SUBArrays:POWer:MSLot:MAXimum?	–100.0 dB to +20.0 dB	query only	3.63

Command, Non Signalling	Parameter	Remark	Page
SAMPlE:SUBArrays:POWer:MSLot:MAXimum?	-100.0 dB to +20.0 dB	query only	3.63
READ:ARRAy:POWer:MSLot:MINimum?	-100.0 dB to +20.0 dB	query only	3.62
FETCh:ARRAy:POWer:MSLot:MINimum?	-100.0 dB to +20.0 dB	query only	3.62
SAMPlE:ARRAy:POWer:MSLot:MINimum?	-100.0 dB to +20.0 dB	query only	3.62
READ:SUBArrays:POWer:MSLot:MINimum?	-100.0 dB to +20.0 dB	query only	3.63
FETCh:SUBArrays:POWer:MSLot:MINimum?	-100.0 dB to +20.0 dB	query only	3.63
SAMPlE:SUBArrays:POWer:MSLot:MINimum?	-100.0 dB to +20.0 dB	query only	3.63
CONFigure:POWer:MSLot:MVlew	<Mod_-1>, <Mod_0>, <Mod_1>, <Mod_2>	with query	3.58
CONFigure:POWer:MSLot:SCOUnt	1 to 4	with query	3.58
FETCh:POWer:MSLot:STATus?	OFF RUN STOP ERR STEP RDY, 1 to 10000 NONE, 1 to 1000 NONE	query only	3.56
CONFigure:POWer:MSLot:TOFFset	-4.00 to +4.00	with query	3.58
READ[:SCALAr]:POWer:MSLot?	<Result>	query only	3.61
FETCh[:SCALAr]:POWer:MSLot?	<Result>	query only	3.61
SAMPlE[:SCALAr]:POWer:MSLot?	<Result>	query only	3.61
READ:ARRAy:POWer:MSLot[:CURRent]?	-100.0 dB to +20.0 dB	query only	3.62
FETCh:ARRAy:POWer:MSLot[:CURRent]?	-100.0 dB to +20.0 dB	query only	3.62
SAMPlE:ARRAy:POWer:MSLot[:CURRent]?	-100.0 dB to +20.0 dB	query only	3.62
READ:SUBArrays:POWer:MSLot[:CURRent]?	-100.0 dB to +20.0 dB	query only	3.63
FETCh:SUBArrays:POWer:MSLot[:CURRent]?	-100.0 dB to +20.0 dB	query only	3.63
SAMPlE:SUBArrays:POWer:MSLot[:CURRent]?	-100.0 dB to +20.0 dB	query only	3.63
POWer:SLOT measurement			
INITiate:POWer:SLOT	-	no query	3.43
ABORt:POWer:SLOT	-	no query	3.43
STOP:POWer:SLOT	-	no query	3.43
CONTInue:POWer:SLOT	-	no query	3.43
CONFigure:SUBArrays:POWer:SLOT	ALL ARITHmetical MINimum MAXimum IVAL, <Start>, <Samples>{, <Start>, <Samples>}	with query	3.45
CONFigure:POWer:SLOT:CONTRol:DEFault	ON OFF	with query	3.44
CONFigure:POWer:SLOT:CONTRol:REPetition	CONTInuous SINGleshot 1 to 10000, SONerror NONE, STEP NONE	with query	3.44
CONFigure:POWer:SLOT:EREPorting	SRQ SOPC SRSQ OFF	with query	3.43
READ[:SCALAr]:POWer:SLOT:SPOWer<nr>?	<Result>	query only	3.46
FETCh[:SCALAr]:POWer:SLOT:SPOWer<nr>?	<Result>	query only	3.46
SAMPlE[:SCALAr]:POWer:SLOT:SPOWer<nr>?	<Result>	query only	3.46
FETCh:POWer:SLOT:STATus?	OFF RUN STOP ERR STEP RDY, 1 to 10000 NONE	query only	3.43
READ:ARRAy:POWer:SLOT?	<Result>	query only	3.46
FETCh:ARRAy:POWer:SLOT?	<Result>	query only	3.46
SAMPlE:ARRAy:POWer:SLOT?	<Result>	query only	3.46
READ:SUBArrays:POWer:SLOT?	<Result>	query only	3.46
FETCh:SUBArrays:POWer:SLOT?	<Result>	query only	3.46
SAMPlE:SUBArrays:POWer:SLOT?	<Result>	query only	3.46
POWer:X SLOT measurement			

Command, Non Signalling	Parameter	Remark	Page
INITiate:POWer:XSLot	–	no query	3.47
ABORt:POWer:XSLot	–	no query	3.47
STOP:POWer:XSLot	–	no query	3.47
CONTInue:POWer:XSLot	–	no query	3.47
CONFigure:SUBarrays:POWer:XSLot	ALL ARITHmetical MINimum MAXimum IVAL,<Start>,<Samples>{,<Start>,<Samples>}	with query	3.50
CONFigure:POWer:XSLot:CONTRol:DEFault	ON OFF	with query	3.48
CONFigure:POWer:XSLot:CONTRol:REPetition	CONTInuous SINGleshot 1 to 10000, SONerror NONE, STEP NONE	with query	3.48
CONFigure:POWer:XSLot:EREPorting	SRQ SOPC SRSQ OFF	with query	3.47
CONFigure:POWer:XSLot:SCOut	S128 S256 S384 S512[,1 to 512]	with query	3.49
READ[:SCALar]:POWer:XSLot:SPOWer<nr>?	<Result>	query only	3.51
FETCh[:SCALar]:POWer:XSLot:SPOWer<nr>?	<Result>	query only	3.51
SAMPlE[:SCALar]:POWer:XSLot:SPOWer<nr>?	<Result>	query only	3.51
FETCh:POWer:XSLot:STATus?	OFF RUN STOP ERR STEP RDY, 1 to 10000 NONE	query only	3.47
READ:ARRay:POWer:XSLot?	<Result>	query only	3.51
FETCh:ARRay:POWer:XSLot?	<Result>	query only	3.51
SAMPlE:ARRay:POWer:XSLot?	<Result>	query only	3.51
READ:SUBarrays:POWer:XSLot?	<Result>	query only	3.51
FETCh:SUBarrays:POWer:XSLot?	<Result>	query only	3.51
SAMPlE:SUBarrays:POWer:XSLot?	<Result>	query only	3.51
POWer versus time measurement: 8PSK modulation			
INITiate:POWer[:NORMal]:EPSK	–	no query	6.13
ABORt:POWer[:NORMal]:EPSK	–	no query	6.13
STOP:POWer[:NORMal]:EPSK	–	no query	6.13
CONTInue:POWer[:NORMal]:EPSK	–	no query	6.13
CONFigure:SUBarrays:POWer[:NORMal]:EPSK	ALL ARITHmetical MINimum MAXimum IVAL,<Start>,<Samples>{,<Start>,<Samples>}	with query	6.23
CALCulate:ARRay:POWer[:NORMal]:EPSK:AREA:LIMit:MATChing:AVERAge?	<Matching>	query only	6.27
CALCulate:ARRay:POWer[:NORMal]:EPSK:AREA:LIMit:MATChing:MAXimum?	<Matching>	query only	6.27
CALCulate:ARRay:POWer[:NORMal]:EPSK:AREA:LIMit:MATChing:MINimum?	<Matching>	query only	6.27
CALCulate:ARRay:POWer[:NORMal]:EPSK:AREA:LIMit:MATChing[:CURRent]?	<Matching>	query only	6.27
READ:ARRay:POWer[:NORMal]:EPSK:AVERAge?	–100.0 dB to +20.0 dB	query only	6.25
FETCh:ARRay:POWer[:NORMal]:EPSK:AVERAge?	–100.0 dB to +20.0 dB	query only	6.25
SAMPlE:ARRay:POWer[:NORMal]:EPSK:AVERAge?	–100.0 dB to +20.0 dB	query only	6.25
READ:SUBarrays:POWer[:NORMal]:EPSK:AVERAge?	–100.0 dB to +20.0 dB	query only	6.26
FETCh:SUBarrays:POWer[:NORMal]:EPSK:AVERAge?	–100.0 dB to +20.0 dB	query only	6.26
SAMPlE:SUBarrays:POWer[:NORMal]:EPSK:AVERAge?	–100.0 dB to +20.0 dB	query only	6.26
CONFigure:POWer[:NORMal]:EPSK:CONTRol	SCALar ARRay, 1 to 1000 NONE	with query	6.15

Command, Non Signalling	Parameter	Remark	Page
CONFigure:POWer[:NORMal]:EPsk:CONTRol:DEFault	ON OFF	with query	6.16
DISPlay:POWer[:NORMal]:EPsk:CONTRol:GRID	ON OFF	with query	6.15
CONFigure:POWer[:NORMal]:EPsk:CONTRol:REPetition	CONTInuous SINGleshot 1 to 10000, SONerror NONE,STEP NONE	with query	6.15
CONFigure:POWer[:NORMal]:EPsk:CONTRol:RPMode	CURRent AVERAge DCOMPens	with query	6.16
CONFigure:POWer[:NORMal]:EPsk:EREPorting	SRQ SOPC SRSQ OFF	with query	6.13
CONFigure:POWer[:NORMal]:EPsk:FILTer	G500 B600	with query	6.14
CONFigure:POWer[:NORMal]:EPsk:LIMit:LINE:DEFault	ON OFF	with query	6.21
CONFigure:POWer[:NORMal]:EPsk:LIMit:LINE:LOWER:ALL:DYNamic:ENABLE	ON OFF	with query	6.21
CONFigure:POWer[:NORMal]:EPsk:LIMit:LINE:LOWER<nr>:ALL:DYNamic:ENABLE	ON OFF	with query	6.20
CONFigure:POWer[:NORMal]:EPsk:LIMit:LINE:LOWER<nr>:DYNamic<RgNr>	<fromTPCL>, <toTPCL>, <Correction>, ON OFF	with query	6.20
CONFigure:POWer[:NORMal]:EPsk:LIMit:LINE:LOWER<nr>[:STATic]	<StartTime>, <EndTime>, <StartRelLevel>, <EndRelLevel>, <StartAbsLevel>, <EndAbsLevel>, <Visibility>	with query	6.18
CONFigure:POWer[:NORMal]:EPsk:LIMit:LINE:LOWER<nr>[:STATic]:ENABLE	ON OFF	with query	6.18
CONFigure:POWer[:NORMal]:EPsk:LIMit:LINE:UPPer:ALL:DYNamic:ENABLE	ON OFF	with query	6.20
CONFigure:POWer[:NORMal]:EPsk:LIMit:LINE:UPPer<nr>:ALL:DYNamic:ENABLE	ON OFF	with query	6.19
CONFigure:POWer[:NORMal]:EPsk:LIMit:LINE:UPPer<nr>:DYNamic<nr>	<fromTPCL>, <toTPCL>, <Correction>, ON OFF	with query	6.19
CONFigure:POWer[:NORMal]:EPsk:LIMit:LINE:UPPer<nr>:DYNamic<nr>:ENABLE	ON OFF	with query	6.19
CONFigure:POWer[:NORMal]:EPsk:LIMit:LINE:UPPer<nr>[:STATic]	<StartTime>, <EndTime>, <StartRelLevel>, <EndRelLevel>, <StartAbsLevel>, <EndAbsLevel>, <Visibility>	with query	6.16
CONFigure:POWer[:NORMal]:EPsk:LIMit:LINE:UPPer<nr>[:STATic]:ENABLE	ON OFF	with query	6.16
CALCulate:ARRay:POWer[:NORMal]:EPsk:LIMit:MATChing:AVERAge?	MATC NMAT INV NTSC OUT	query only	6.27
CALCulate:ARRay:POWer[:NORMal]:EPsk:LIMit:MATChing:MAXimum?	MATC NMAT INV NTSC OUT	query only	6.27
CALCulate:ARRay:POWer[:NORMal]:EPsk:LIMit:MATChing:MINimum?	MATC NMAT INV NTSC OUT	query only	6.27
CALCulate[:SCALar]:POWer[:NORMal]:EPsk:LIMit:MATChing?	AvgBurstPowerCurr, PeakBurstPowerCurr, BurstMatching, AvgBurstPowerAvg	query only	6.24
CALCulate:ARRay:POWer[:NORMal]:EPsk:LIMit:MATChing[:CURRent]?	MATC NMAT INV NTSC OUT	query only	6.27
READ:ARRay:POWer[:NORMal]:EPsk:MAXimum?	-100.0 dB to +20.0 dB	query only	6.25
FETCh:ARRay:POWer[:NORMal]:EPsk:MAXimum?	-100.0 dB to +20.0 dB	query only	6.25
SAMPle:ARRay:POWer[:NORMal]:EPsk:MAXimum?	-100.0 dB to +20.0 dB	query only	6.25
READ:SUBarrays:POWer[:NORMal]:EPsk:MAXimum?	-100.0 dB to +20.0 dB	query only	6.26
FETCh:SUBarrays:POWer[:NORMal]:EPsk:MAXimum?	-100.0 dB to +20.0 dB	query only	6.26
SAMPle:SUBarrays:POWer[:NORMal]:EPsk:MAXimum?	-100.0 dB to +20.0 dB	query only	6.26
READ:ARRay:POWer[:NORMal]:EPsk:MINimum?	-100.0 dB to +20.0 dB	query only	6.25

Command, Non Signalling	Parameter	Remark	Page
FETCh:ARRay:POWer[:NORMal]:EPsK:MINimum?	-100.0 dB to +20.0 dB	query only	6.25
SAMPlE:ARRay:POWer[:NORMal]:EPsK:MINimum?	-100.0 dB to +20.0 dB	query only	6.25
READ:SUBarrays:POWer[:NORMal]:EPsK:MINimum?	-100.0 dB to +20.0 dB	query only	6.26
FETCh:SUBarrays:POWer[:NORMal]:EPsK:MINimum?	-100.0 dB to +20.0 dB	query only	6.26
SAMPlE:SUBarrays:POWer[:NORMal]:EPsK:MINimum?	-100.0 dB to +20.0 dB	query only	6.26
FETCh:POWer[:NORMal]:EPsK:STATus?	OFF RUN STOP ERR STEP RDY, 1 to 10000 NONE, 1 to 1000 NONE	query only	6.14
CONFigure:POWer[:NORMal]:EPsK:TOFFset	-4.00 to +4.00	with query	6.14
READ[:SCALar]:POWer[:NORMal]:EPsK?	<Result>	query only	6.23
FETCh[:SCALar]:POWer[:NORMal]:EPsK?	<Result>	query only	6.23
SAMPlE[:SCALar]:POWer[:NORMal]:EPsK?	<Result>	query only	6.23
READ:ARRay:POWer[:NORMal]:EPsK[:CURRent]?	-100.0 dB to +20.0 dB	query only	6.25
FETCh:ARRay:POWer[:NORMal]:EPsK[:CURRent]?	-100.0 dB to +20.0 dB	query only	6.25
SAMPlE:ARRay:POWer[:NORMal]:EPsK[:CURRent]?	-100.0 dB to +20.0 dB	query only	6.25
READ:SUBarrays:POWer[:NORMal]:EPsK[:CURRent]?	-100.0 dB to +20.0 dB	query only	6.26
FETCh:SUBarrays:POWer[:NORMal]:EPsK[:CURRent]?	-100.0 dB to +20.0 dB	query only	6.26
SAMPlE:SUBarrays:POWer[:NORMal]:EPsK[:CURRent]?	-100.0 dB to +20.0 dB	query only	6.26
POWER versus time measurement: GMSK modulation			
INITiate:POWer[:NORMal][:GMSK]	-	no query	6.13
ABORt:POWer[:NORMal][:GMSK]	-	no query	6.13
STOP:POWer[:NORMal][:GMSK]	-	no query	6.13
CONTinue:POWer[:NORMal][:GMSK]	-	no query	6.13
CONFigure:SUBarrays:POWer[:NORMal][:GMSK]	ALL ARITHmetical MINimum MAXimum IVAL, <Start>, <Samples>, <Start>, <Samples>	with query	6.23
CALCulate:ARRay:POWer[:NORMal][:GMSK]:AREA: LIMit:MATChing:AVErAge?	<Matching>	query only	6.27
CALCulate:ARRay:POWer[:NORMal][:GMSK]:AREA: LIMit:MATChing:MAXimum?	<Matching>	query only	6.27
CALCulate:ARRay:POWer[:NORMal][:GMSK]:AREA: LIMit:MATChing:MINimum?	<Matching>	query only	6.27
CALCulate:ARRay:POWer[:NORMal][:GMSK]:AREA: LIMit:MATChing[:CURRent]?	<Matching>	query only	6.27
READ:ARRay:POWer[:NORMal][:GMSK]:AVErAge?	-100.0 dB to +20.0 dB	query only	6.25
FETCh:ARRay:POWer[:NORMal][:GMSK]:AVErAge?	-100.0 dB to +20.0 dB	query only	6.25
SAMPlE:ARRay:POWer[:NORMal][:GMSK]:AVErAge?	-100.0 dB to +20.0 dB	query only	6.25
READ:SUBarrays:POWer[:NORMal][:GMSK]:AVErAge?	-100.0 dB to +20.0 dB	query only	6.26
FETCh:SUBarrays:POWer[:NORMal][:GMSK]:AVErAge?	-100.0 dB to +20.0 dB	query only	6.26
SAMPlE:SUBarrays:POWer[:NORMal][:GMSK]:AVErAge?	-100.0 dB to +20.0 dB	query only	6.26
CONFigure:POWer[:NORMal][:GMSK]:CONTRol	SCALar ARRay, 1 to 1000 NONE	with query	6.15
CONFigure:POWer[:NORMal][:GMSK]:CONTRol:DEFault	ON OFF	with query	6.16
DISPlay:POWer[:NORMal][:GMSK]:CONTRol:GRID	ON OFF	with query	6.15
CONFigure:POWer[:NORMal][:GMSK]:CONTRol:REPetition	CONTinuous SINGleshot 1 to 10000, SONerror NONE, STEP NONE	with query	6.15
CONFigure:POWer[:NORMal][:GMSK]:EREPorting	SRQ SOPC SRSQ OFF	with query	6.13
CONFigure:POWer[:NORMal][:GMSK]:FILTer	G500 B600	with query	6.14

Command, Non Signalling	Parameter	Remark	Page
CONFigure:POWer[:NORMal][:GMSK]:LIMit:ABPower<nr>	ON OFF	with query	6.22
CONFigure:POWer[:NORMal][:GMSK]:LIMit:ABPower<nr>:ENABle	ON OFF	with query	6.22
CONFigure:POWer[:NORMal][:GMSK]:LIMit:LINE:DEFault	ON OFF	with query	6.21
CONFigure:POWer[:NORMal][:GMSK]:LIMit:LINE:LOWer:ALL:DYNamic:ENABle	ON OFF	with query	6.21
CONFigure:POWer[:NORMal][:GMSK]:LIMit:LINE:LOWer<AreaNr>:ALL:DYNamic:ENABle	ON OFF	with query	6.20
CONFigure:POWer[:NORMal][:GMSK]:LIMit:LINE:LOWer<nr>:DYNamic<RgNr>	<fromTPCL>, <toTPCL>, <Correction>, ON OFF	with query	6.20
CONFigure:POWer[:NORMal][:GMSK]:LIMit:LINE:LOWer<nr>[:STATic]	<StartTime>, <EndTime>, <StartRelLevel>, <EndRelLevel>, <StartAbsLevel>, <EndAbsLevel>, <Visibility>	with query	6.18
CONFigure:POWer[:NORMal][:GMSK]:LIMit:LINE:LOWer<nr>[:STATic]:ENABle	ON OFF	with query	6.18
CONFigure:POWer[:NORMal][:GMSK]:LIMit:LINE:UPPer:ALL:DYNamic:ENABle	ON OFF	with query	6.20
CONFigure:POWer[:NORMal][:GMSK]:LIMit:LINE:UPPer<nr>:ALL:DYNamic:ENABle	ON OFF	with query	6.19
CONFigure:POWer[:NORMal][:GMSK]:LIMit:LINE:UPPer<nr>:DYNamic<nr>	<fromTPCL>, <toTPCL>, <Correction>, ON OFF	with query	6.19
CONFigure:POWer[:NORMal][:GMSK]:LIMit:LINE:UPPer<nr>:DYNamic<nr>:ENABle	ON OFF	with query	6.19
CONFigure:POWer[:NORMal][:GMSK]:LIMit:LINE:UPPer<nr>[:STATic]	<StartTime>, <EndTime>, <StartRelLevel>, <EndRelLevel>, <StartAbsLevel>, <EndAbsLevel>, <Visibility>	with query	6.16
CONFigure:POWer[:NORMal][:GMSK]:LIMit:LINE:UPPer<nr>[:STATic]:ENABle	ON OFF	with query	6.16
CALCulate:ARRAy:POWer[:NORMal][:GMSK]:LIMit:MATChing:AVERAge?	MATC NMAT INV NTSC OUT	query only	6.27
CALCulate:ARRAy:POWer[:NORMal][:GMSK]:LIMit:MATChing:MAXimum?	MATC NMAT INV NTSC OUT	query only	6.27
CALCulate:ARRAy:POWer[:NORMal][:GMSK]:LIMit:MATChing:MINimum?	MATC NMAT INV NTSC OUT	query only	6.27
CALCulate[:SCALar]:POWer[:NORMal][:GMSK]:LIMit:MATChing?	AvgBurstPowerCurr, PeakBurstPowerCurr, BurstMatching, AvgBurstPowerAvg	query only	6.24
CALCulate:ARRAy:POWer[:NORMal][:GMSK]:LIMit:MATChing[:CURRent]?	MATC NMAT INV NTSC OUT	query only	6.27
READ:ARRAy:POWer[:NORMal][:GMSK]:MAXimum?	-100.0 dB to +20.0 dB	query only	6.25
FETCh:ARRAy:POWer[:NORMal][:GMSK]:MAXimum?	-100.0 dB to +20.0 dB	query only	6.25
SAMPle:ARRAy:POWer[:NORMal][:GMSK]:MAXimum?	-100.0 dB to +20.0 dB	query only	6.25
READ:SUBArrays:POWer[:NORMal][:GMSK]:MAXimum?	-100.0 dB to +20.0 dB	query only	6.26
FETCh:SUBArrays:POWer[:NORMal][:GMSK]:MAXimum?	-100.0 dB to +20.0 dB	query only	6.26
SAMPle:SUBArrays:POWer[:NORMal][:GMSK]:MAXimum?	-100.0 dB dB to +20.0 dB	query only	6.26
READ:ARRAy:POWer[:NORMal][:GMSK]:MINimum?	-100.0 dB to +20.0 dB	query only	6.25
FETCh:ARRAy:POWer[:NORMal][:GMSK]:MINimum?	-100.0 dB to +20.0 dB	query only	6.25
SAMPle:ARRAy:POWer[:NORMal][:GMSK]:MINimum?	-100.0 dB to +20.0 dB	query only	6.25
READ:SUBArrays:POWer[:NORMal][:GMSK]:MINimum?	-100.0 dB to +20.0 dB	query only	6.26
FETCh:SUBArrays:POWer[:NORMal][:GMSK]:MINimum?	-100.0 dB to +20.0 dB	query only	6.26

Command, Non Signalling	Parameter	Remark	Page
SAMPlE:SUBArrays:POWer[:NORMal][:GMSK]:MINimum?	-100.0 dB to +20.0 dB	query only	6.26
INITiate:POWer[:NORMal][:GMSK]:MPR	-	no query	6.28
ABORt:POWer[:NORMal][:GMSK]:MPR	-	no query	6.28
STOP:POWer[:NORMal][:GMSK]:MPR	-	no query	6.28
CONTInue:POWer[:NORMal][:GMSK]:MPR	-	no query	6.28
CONFIgure:SUBArrays:POWer[:NORMal][:GMSK]:MPR	ALL ARITHmetical MINimum MAXimum IVAL,<Start>,<Samples>{,<Start>,<Samples>}	with query	6.30
READ:ARRAy:POWer[:NORMal][:GMSK]:MPR:AVERAge?	-100.0 dB to +20.0 dB	query only	6.31
FETCh:ARRAy:POWer[:NORMal][:GMSK]:MPR:AVERAge?	-100.0 dB to +20.0 dB	query only	6.31
SAMPlE:ARRAy:POWer[:NORMal][:GMSK]:MPR:AVERAge?	-100.0 dB to +20.0 dB	query only	6.31
READ:SUBArrays:POWer[:NORMal][:GMSK]:MPR:AVERAge?	-100.0 dB to +20.0 dB	query only	6.32
FETCh:SUBArrays:POWer[:NORMal][:GMSK]:MPR:AVERAge?	-100.0 dB to +20.0 dB	query only	6.32
SAMPlE:SUBArrays:POWer[:NORMal][:GMSK]:MPR:AVERAge?	-100.0 dB to +20.0 dB	query only	6.32
CONFIgure:POWer[:NORMal][:GMSK]:MPR:CONTRol	SCALAR ARRAY, 1 to 1000 NONE	with query	6.29
CONFIgure:POWer[:NORMal][:GMSK]:MPR:CONTRol:REPetition	CONTInuous SINGleshot 1 to 10000, SONerror NONE,STEP NONE	with query	6.29
CONFIgure:POWer[:NORMal][:GMSK]:MPR:EREPorting	SRQ SOPC SRSQ OFF	with query	6.28
CALCulate[:SCALAR]:POWer[:NORMal][:GMSK]:MPR:LIMit:MATChing?	<Result>	query only	6.33
READ:ARRAy:POWer[:NORMal][:GMSK]:MPR:MAXimum?	-100.0 dB to +20.0 dB	query only	6.31
FETCh:ARRAy:POWer[:NORMal][:GMSK]:MPR:MAXimum?	-100.0 dB to +20.0 dB	query only	6.31
SAMPlE:ARRAy:POWer[:NORMal][:GMSK]:MPR:MAXimum?	-100.0 dB to +20.0 dB	query only	6.31
READ:SUBArrays:POWer[:NORMal][:GMSK]:MPR:MAXimum?	-100.0 dB to +20.0 dB	query only	6.32
FETCh:SUBArrays:POWer[:NORMal][:GMSK]:MPR:MAXimum?	-100.0 dB to +20.0 dB	query only	6.32
SAMPlE:SUBArrays:POWer[:NORMal][:GMSK]:MPR:MAXimum?	-100.0 dB to +20.0 dB	query only	6.32
READ:ARRAy:POWer[:NORMal][:GMSK]:MPR:MINimum?	-100.0 dB to +20.0 dB	query only	6.31
FETCh:ARRAy:POWer[:NORMal][:GMSK]:MPR:MINimum?	-100.0 dB to +20.0 dB	query only	6.31
SAMPlE:ARRAy:POWer[:NORMal][:GMSK]:MPR:MINimum?	-100.0 dB to +20.0 dB	query only	6.31
READ:SUBArrays:POWer[:NORMal][:GMSK]:MPR:MINimum?	-100.0 dB to +20.0 dB	query only	6.32
FETCh:SUBArrays:POWer[:NORMal][:GMSK]:MPR:MINimum?	-100.0 dB to +20.0 dB	query only	6.32
SAMPlE:SUBArrays:POWer[:NORMal][:GMSK]:MPR:MINimum?	-100.0 dB to +20.0 dB	query only	6.32
FETCh:POWer[:NORMal][:GMSK]:MPR:STATus?	OFF RUN STOP ERR STEP RDY, 1 to 10000 NONE, 1 to 1000 NONE	query only	6.28
READ[:SCALAR]:POWer[:NORMal][:GMSK]:MPR?	<Result>	query only	6.31
FETCh[:SCALAR]:POWer[:NORMal][:GMSK]:MPR?	<Result>	query only	6.31
SAMPlE[:SCALAR]:POWer[:NORMal][:GMSK]:MPR?	<Result>	query only	6.31
READ:ARRAy:POWer[:NORMal][:GMSK]:MPR[:CURRent]?	-100.0 dB to +20.0 dB	query only	6.31
FETCh:ARRAy:POWer[:NORMal][:GMSK]:MPR[:CURRent]?	-100.0 dB to +20.0 dB	query only	6.31
SAMPlE:ARRAy:POWer[:NORMal][:GMSK]:MPR[:CURRent]?	-100.0 dB to +20.0 dB	query only	6.31
READ:SUBArrays:POWer[:NORMal][:GMSK]:MPR[:CURRent]?	-100.0 dB to +20.0 dB	query only	6.32
FETCh:SUBArrays:POWer[:NORMal][:GMSK]:MPR[:CURRent]?	-100.0 dB to +20.0 dB	query only	6.32
SAMPlE:SUBArrays:POWer[:NORMal][:GMSK]:MPR[:CURRent]	-100.0 dB to +20.0 dB	query only	6.32

Command, Non Signalling	Parameter	Remark	Page
]?			
FETCh:POWer[:NORMal][:GMSK]:STATus?	OFF RUN STOP ERR STEP RDY, 1 to 10000 NONE , 1 to 1000 NONE	query only	6.14
CONFigure:POWer[:NORMal][:GMSK]:TOFFset	-4.00 to +4.00	with query	6.14
READ[:SCALar]:POWer[:NORMal][:GMSK]?	<Result>	query only	6.23
FETCh[:SCALar]:POWer[:NORMal][:GMSK]?	<Result>	query only	6.23
SAMPlE[:SCALar]:POWer[:NORMal][:GMSK]?	<Result>	query only	6.23
READ:ARRay:POWer[:NORMal][:GMSK][:CURRent]?	-100.0 dB to +20.0 dB	query only	6.25
FETCh:ARRay:POWer[:NORMal][:GMSK][:CURRent]?	-100.0 dB to +20.0 dB	query only	6.25
SAMPlE:ARRay:POWer[:NORMal][:GMSK][:CURRent]?	-100.0 dB to +20.0 dB	query only	6.25
READ:SUBarrays:POWer[:NORMal][:GMSK][:CURRent]?	-100.0 dB to +20.0 dB	query only	6.26
FETCh:SUBarrays:POWer[:NORMal][:GMSK][:CURRent]?	-100.0 dB to +20.0 dB	query only	6.26
SAMPlE:SUBarrays:POWer[:NORMal][:GMSK][:CURRent]?	-100.0 dB to +20.0 dB	query only	6.26
SAMPlE:SUBarrays:POWer[:NORMal][:GMSK]:MPR[:CURRent]?	-100.0 dB to +20.0 dB	query only	6.30
Reset			
SYSTem:RESet:CURRent		no query	3.35
RF Signal received			
[SENSe:]RFANalyzer:CHANnel	0.2 MHz to 2700 MHz	with query	6.3
RFANalyzer:DEFault	ON OFF	with query	6.4
[SENSe:]RFANalyzer:FREQuency:OFFSet	-10 kHz to 10 kHz	with query	6.3
CONFigure:RFANalyzer:MCONTRol:TSoFFset	0 to 7	with query	6.4
[SENSe:]RFANalyzer:MODulation	GMSK EPSK	with query	6.3
CONFigure:RFANalyzer:TPCL	0 to 31	with query	6.3
[SENSe:]RFANalyzer:TSEquence	OFF GSM0 to GSM7 DUMMy	with query	6.3
RF Signal generated			
INITiate:RFGenerator	-	no query	6.7
ABORt:RFGenerator	-	no query	6.7
SOURce:RFGenerator:AUXTx:FREQuency[:CHANnel]	350 MHz to 550 MHz 700 MHz to 1100 MHz 1400 MHz to 2200 MHz	with query	6.6
SOURce:RFGenerator:AUXTx:LEVel	-110 dBm to -60 dBm	with query	6.8
FETCh:RFGenerator:AUXTx:STATus?	OFF RUN ERR	query only	6.7
SOURce:RFGenerator:FM:DEViation	-100 kHz to 100 kHz	with query	6.5
CONFigure:RFGenerator:MODulation:BIT:SElection	OFF PRBS DUMMybursts	with query	6.6
CONFigure:RFGenerator:MODulation:TRANsmission	BURSt CONTinuous	with query	6.7
CONFigure:RFGenerator:MODulation:TSEquence:SElection	GSM0 to GSM7 DUMMy	with query	6.7
INITiate:RFGenerator[:TX]	-	no query	6.4
ABORt:RFGenerator[:TX]	-	no query	6.4
SOURce:RFGenerator[:TX]:FREQuency[:CHANnel]	0.2 MHz to 2700 MHz	with query	6.6
SOURce:RFGenerator[:TX]:LEVel:UNTimeslot	<Level>	with query	6.5
SOURce:RFGenerator[:TX]:LEVel:UTIMeslot	<Level>	with query	6.5
FETCh:RFGenerator[:TX]:STATus?	OFF RUN ERR	query only	6.4
Spectrum due to modulation measurements			
CONFigure:SPECTrum:LIMit:LINE:SElect	GMSK EPSK	with query	3.105
INITiate:SPECTrum:MODulation	-	no query	3.106
ABORt:SPECTrum:MODulation	-	no query	3.106

Command, Non Signalling	Parameter	Remark	Page
STOP:SPECTrum:MODulation	–	no query	3.106
CONTInue:SPECTrum:MODulation	–	no query	3.106
CONFigure:SPECTrum:MODulation:AVGareas	A B AB	with query	3.109
CONFigure:SPECTrum:MODulation:AVGareas	A B AB	with query	3.119
CONFigure:SPECTrum:MODulation:CONTrol	SCALar ARRay, 1 to 1000 NONE	with query	3.107
CONFigure:SPECTrum:MODulation:CONTrol: MPOint<nr>:ENABle	ON OFF	with query	3.107
CONFigure:SPECTrum:MODulation:CONTrol:REPetition	CONTInuous SINGleshot 1 to 10000, SONerror NONE, STEP NONE	with query	3.107
CONFigure:SPECTrum:MODulation:CONTrol:VMPOint<nr>	0 MHz to 2.5 MHz OFF	with query	3.108
CONFigure:SPECTrum:MODulation:EPSK:LIMit:LINE: MODE[:UPPer]	ON OFF	with query	3.111
CONFigure:SPECTrum:MODulation:EPSK:LIMit:LINE: REFPower[:UPPer]	<Minimum>, <Maximum>	with query	3.110
CONFigure:SPECTrum:MODulation:EPSK:LIMit:LINE: UPPer<nr>	<MinLevel>,<MaxLevel>,<AbsLevel>,<Enable>	with query	3.109
CONFigure:SPECTrum:MODulation:EPSK:LIMit:LINE: UPPer<nr>:ENABle	ON OFF	with query	3.109
CONFigure:SPECTrum:MODulation:EREPorting	SRQ SOPC SRSQ OFF	with query	3.106
[SENSe:]SPECTrum:MODulation:LIMit:LINE:USED?	GMSK EPSK	query only	3.109
FETCh:SPECTrum:MODulation:STATus?	OFF RUN STOP ERR STEP RDY, 1 to 10000 NONE, 1 to 1000 NONE	only query	3.106
CONFigure:SPECTrum:MODulation:TDFSelect	N18 N160 N140 N120 N100 N080 N060 N040 N025 N020 N010 REF P010 P020 P025 P040 P060 P080 P100 P120 P140 P160 P180 NV4 NV3 NV2 NV1 PV1 PV2 PV3 PV4 OFF ON	with query	3.108
CONFigure:SUBarrays:SPECTrum:MODulation:TDOMain	ALL ARITHmetical MINimum MAXimum IVAL,<Start>,<Samples>{,<Start>,<Samples>}	with query	3.112
READ:ARRay:SPECTrum:MODulation:TDOMain?	–100.0 dB to +20.0 dB, ...	query only	3.114
FETCh:ARRay:SPECTrum:MODulation:TDOMain?	–100.0 dB to +20.0 dB, ...	query only	3.114
SAMPle:ARRay:SPECTrum:MODulation:TDOMain?	–100.0 dB to +20.0 dB, ...	query only	3.114
READ:SUBarrays:SPECTrum:MODulation:TDOMain?	–100.0 dB to +20.0 dB, ...	query only	3.115
FETCh:SUBarrays:SPECTrum:MODulation:TDOMain?	–100.0 dB to +20.0 dB, ...	query only	3.115
SAMPle:SUBarrays:SPECTrum:MODulation:TDOMain?	–100.0 dB to +20.0 dB, ...	query only	3.115
READ[:SCALar]:SPECTrum:MODulation?	<Result>	only query	3.112
FETCh[:SCALar]:SPECTrum:MODulation?	<Result>	only query	3.112
SAMPle[:SCALar]:SPECTrum:MODulation?	<Result>	only query	3.112
CONFigure:SUBarrays:SPECTrum:MODulation[:FDOMain]	ALL ARITHmetical MINimum MAXimum IVAL,<Start>,<Samples>{,<Start>,<Samples>}	with query	3.111
CALCulate:ARRay:SPECTrum:MODulation[:FDOMain]: AREA:LIMit:MATChing?	<Matching>	query only	3.114
READ:ARRay:SPECTrum:MODulation[:FDOMain]:VMPoint?	–100.0 dB to +20.0 dB, ...	query only	3.113
FETCh:ARRay:SPECTrum:MODulation[:FDOMain]:VMPoint?	–100.0 dB to +20.0 dB, ...	query only	3.113
SAMPle:ARRay:SPECTrum:MODulation[:FDOMain]:VMPoint?	–100.0 dB to +20.0 dB, ...	query only	3.113

Command, Non Signalling	Parameter	Remark	Page
READ:ARRay:SPECTrum:MODulation[:FDOMain]?	-100.0 dB to +20.0 dB, ...	query only	3.113
FETCh:ARRay:SPECTrum:MODulation[:FDOMain]?	-100.0 dB to +20.0 dB, ...	query only	3.113
SAMPlE:ARRay:SPECTrum:MODulation[:FDOMain]?	-100.0 dB to +20.0 dB, ...	query only	3.113
READ:SUBarrays:SPECTrum:MODulation[:FDOMain]?	-100.0 dB to +20.0 dB, ...	query only	3.114
FETCh:SUBarrays:SPECTrum:MODulation[:FDOMain]?	-100.0 dB to +20.0 dB, ...	query only	3.114
SAMPlE:SUBarrays:SPECTrum:MODulation[:FDOMain]?	-100.0 dB to +20.0 dB, ...	query only	3.114
CONFigure:SPECTrum:MODulation[:GMSK]:LIMit:LINE:MODE[:UPPer]	ON OFF	with query	3.111
CONFigure:SPECTrum:MODulation[:GMSK]:LIMit:LINE:REFPower[:UPPer]	<Minimum>, <Maximum>	with query	3.110
CONFigure:SPECTrum:MODulation[:GMSK]:LIMit:LINE:UPPer<nr>	<MinLevel>, <MaxLevel>, <AbsLevel>, <Enable>	with query	3.109
CONFigure:SPECTrum:MODulation[:GMSK]:LIMit:LINE:UPPer<nr>:ENABLE	ON OFF	with query	3.109
Spectrum due to modulation and switching measurements			
INITiate:SPECTrum:MSWitching	-	no query	3.127
ABORt:SPECTrum:MSWitching	-	no query	3.127
STOP:SPECTrum:MSWitching	-	no query	3.127
CONTInue:SPECTrum:MSWitching	-	no query	3.127
CALCulate:ARRay:SPECTrum:MSWitching:AREA:LIMit:MATChing?	<Matching>	query only	3.131
CONFigure:SPECTrum:MSWitching:CONTRol	SCALAR ARRAY, 1 to 1000 NONE	with query	3.128
CONFigure:SPECTrum:MSWitching:CONTRol:REPetition	CONTInuous SINGleshot 1 to 10000, SONerror NONE, STEP NONE	with query	3.129
CONFigure:SPECTrum:MSWitching:EREPorting	SRQ SOPC SRSQ OFF	with query	3.127
[SENSe:]SPECTrum:MSWitching:LIMit:LINE:USED?	GMSK EPSK	query only	3.129
FETCh:SPECTrum:MSWitching:STATus?	OFF RUN STOP ERR STEP RDY, 1 to 10000 NONE, 1 to 1000 NONE	only query	3.128
READ:ARRay:SPECTrum:MSWitching:VMPoint?	-100.0 dBm to +100.0 dBm, ...	query only	3.131
FETCh:ARRay:SPECTrum:MSWitching:VMPoint?	-100.0 dBm to +100.0 dBm, ...	query only	3.131
SAMPlE:ARRay:SPECTrum:MSWitching:VMPoint?	-100.0 dBm to +100.0 dBm, ...	query only	3.131
READ[:SCALAR]:SPECTrum:MSWitching?	<Result>	only query	3.130
FETCh[:SCALAR]:SPECTrum:MSWitching?	<Result>	only query	3.130
SAMPlE[:SCALAR]:SPECTrum:MSWitching?	<Result>	only query	3.130
READ:ARRay:SPECTrum:MSWitching?	<32 results>dBm	only query	3.130
FETCh:ARRay:SPECTrum:MSWitching?	<32 results>	only query	3.130
SAMPlE:ARRay:SPECTrum:MSWitching?	<32 results>	only query	3.130
Spectrum due to switching measurements			
INITiate:SPECTrum:SWITChing	-	no query	3.116
ABORt:SPECTrum:SWITChing	-	no query	3.116
STOP:SPECTrum:SWITChing	-	no query	3.116
CONTInue:SPECTrum:SWITChing	-	no query	3.116
CONFigure:SPECTrum:SWITChing:CONTRol	SCALAR ARRAY, 1 to 1000 NONE	with query	3.117
CONFigure:SPECTrum:SWITChing:CONTRol:MPOint<nr>:ENABLE	ON OFF	with query	3.118
CONFigure:SPECTrum:SWITChing:CONTRol:REPetition	CONTInuous SINGleshot 1 to 10000, SONerror NONE, STEP	with query	3.118

Command, Non Signalling	Parameter	Remark	Page
	NONE		
CONFigure:SPECtrum:SWITching:CONtrol:VMPOint<nr>	0 MHz to 2.5 MHz OFF	with query	3.118
CONFigure:SPECtrum:SWITching:CSMODE	PHOL SCO	with query	3.117
CONFigure:SPECtrum:SWITching:EPSK:LIMit:LINE:DEfault	ON OFF	with query	3.121
CONFigure:SPECtrum:SWITching:EPSK:LIMit:LINE:MODE[:UPPer]	ON OFF	with query	3.121
CONFigure:SPECtrum:SWITching:EPSK:LIMit:LINE:UPPer<nr>	<Power level>, <Limit at 0.4 MHz>, <Limit at 0.6 MHz>, <Limit at 1.2 MHz>, <Limit at 1.8 MHz>,<Enable>	with query	3.120
CONFigure:SPECtrum:SWITching:EPSK:LIMit:LINE:UPPer<nr>:ENABle	ON OFF	with query	3.120
CONFigure:SPECtrum:SWITching:EREPorting	SRQ SOPC SRSQ OFF	with query	3.116
[SENSe:]SPECtrum:SWITching:LIMit:LINE:USED?	GMSK EPSK	query only	3.119
FETCh:SPECtrum:SWITching:STATus?	OFF RUN STOP ERR STEP RDY, 1 to 10000 NONE , 1 to 1000 NONE	only query	3.117
CONFigure:SPECtrum:SWITching:TDFSelect	N18 N120 N060 N040 REF P040 P060 P120 P180 NV4 NV3 NV2 NV1 PV1 PV2 PV3 PV4 OFF ON	with query	3.119
CONFigure:SUBarrays:SPECtrum:SWITching:TDOMain	ALL ARITHmetical MINimum MAXimum IVAL,<Start>,<Samples>{,<Start>,<Samples>}	with query	3.123
READ:ARRay:SPECtrum:SWITching:TDOMain?	-100.0 dB to +100.0 dBm, ...	query only	3.126
FETCh:ARRay:SPECtrum:SWITching:TDOMain?	-100.0 dBm to +100.0 dBm, ...	query only	3.126
SAMPlE:ARRay:SPECtrum:SWITching:TDOMain?	-100.0 dBm to +100.0 dBm, ...	query only	3.126
READ:SUBarrays:SPECtrum:SWITching:TDOMain?	-100.0 dBm to +100.0 dBm, ...	query only	3.126
FETCh:SUBarrays:SPECtrum:SWITching:TDOMain?	-100.0 dBm to +100.0 dBm, ...	query only	3.126
SAMPlE:SUBarrays:SPECtrum:SWITching:TDOMain?	-100.0 dBm to +100.0 dBm, ...	query only	3.126
READ[:SCALar]:SPECtrum:SWITching?	<Result>	only query	3.124
FETCh[:SCALar]:SPECtrum:SWITching?	<Result>	only query	3.124
SAMPlE[:SCALar]:SPECtrum:SWITching?	<Result>	only query	3.124
CONFigure:SUBarrays:SPECtrum:SWITching[:FDOMain]	ALL ARITHmetical MINimum MAXimum IVAL,<Start>,<Samples>{,<Start>,<Samples>}	with query	3.122
CALCulate:ARRay:SPECtrum:SWITching[:FDOMain]:AREA:LIMit:MATChing?	<Matching>	query only	3.125
READ:ARRay:SPECtrum:SWITching[:FDOMain]:VMPOint?	-100.0 dBm to +100.0 dBm, ...	query only	3.125
FETCh:ARRay:SPECtrum:SWITching[:FDOMain]:VMPOint?	-100.0 dBm to +100.0 dBm, ...	query only	3.125
SAMPlE:ARRay:SPECtrum:SWITching[:FDOMain]:VMPOint?	-100.0 dBm to +100.0 dBm, ...	query only	3.125
READ:ARRay:SPECtrum:SWITching[:FDOMain]?	-100.0 dBm to +100.0 dBm	only query	3.124
FETCh:ARRay:SPECtrum:SWITching[:FDOMain]?	-100.0 dBm to +100.0 dBm	only query	3.124
SAMPlE:ARRay:SPECtrum:SWITching[:FDOMain]?	-100.0 dBm to +100.0 dBm	only query	3.124
READ:SUBarrays:SPECtrum:SWITching[:FDOMain]?	-100.0 dBm to +100.0 dBm, ...	query only	3.125
FETCh:SUBarrays:SPECtrum:SWITching[:FDOMain]?	-100.0 dBm to +100.0 dBm, ...	query only	3.125
SAMPlE:SUBarrays:SPECtrum:SWITching[:FDOMain]?	-100.0 dBm to +100.0 dBm, ...	query only	3.125
CONFigure:SPECtrum:SWITching[:GMSK]:LIMit:LINE:DEfault	ON OFF	with query	3.121
CONFigure:SPECtrum:SWITching[:GMSK]:LIMit:LINE:MODE[:UPPer]	ON OFF	with query	3.121
CONFigure:SPECtrum:SWITching[:GMSK]:LIMit:LINE:	<Power level>, <Limit at 0.4 MHz>, <Limit at 0.6 MHz>, <Limit	with query	3.120

Command, Non Signalling	Parameter	Remark	Page
UPPer<nr>	at 1.2 MHz>, <Limit at 1.8 MHz>,<Enable>		
CONFigure:SPECTrum:SWITching[:GMSK]:LIMit:LINE:UPPer<nr>:ENABLE	ON OFF	with query	3.120
Symbolic Status Register Evaluation			
STATus:OPERation:SYMBOLic:ENABLE	<Event>{,<Event>}	with query	3.37
STATus:OPERation:SYMBOLic[:EVENT]?	NONE <Event>{,<Event>}	query only	3.37
Trigger			
TRIGger[:SEQUence]:DEFAULT	ON OFF	with query	6.11
TRIGger[:SEQUence]:SLOPe	POSitive NEGative	with query	6.11
TRIGger[:SEQUence]:SOURce	FRUN RFPower IFPower EXTErn	with query	6.10
TRIGger[:SEQUence]:SOURce:EXTernal	PIN6 PIN7 PIN8	with query	6.11
TRIGger[:SEQUence]:THREShold:IFPower	<Threshold>	with query	6.11
TRIGger[:SEQUence]:THREShold:RFPower	LOW MEDium HIGH	with query	6.11
Wideband Power			
INITiate:WPOWER	–	no query	3.37
ABORt:WPOWER	–	no query	3.37
STOP:WPOWER	–	no query	3.37
CONTinue:WPOWER	–	no query	3.37
CONFigure:WPOWER:CONTRol:REPetition	CONTInuous SINGleshot 1 ... 10000, SONerror NONE,STEP NONE	with query	3.38
CONFigure:WPOWER:EREPorting	SRQ SOPC SRSQ OFF	with query	3.37
FETCh:WPOWER:STATus?	OFF RUN STOP ERR STEP RDY, 1 ... 10000 NONE	query only	3.38
READ[:SCALar]:WPOWER?	–30 dBm to +30 dBm	query only	3.39
FETCh[:SCALar]:WPOWER?	–30 dBm to +30 dBm	query only	3.39
SAMPlE[:SCALar]:WPOWER?	–30 dBm to +30 dBm	query only	3.39

Commands for GSM Mobile Tests

Table 6-2 Remote control commands: Signalling mode

Command, Signalling	Parameter	Remark	Page
RF generator signal of CMU			
CONFigure:BSSignal:CCH:AUXTx:CHANnel	<Channel>	with query	6.206
CONFigure:BSSignal:CCH:AUXTx:CHTYpe	OFF BCCH	with query	6.205
CONFigure:BSSignal:CCH:AUXTx:LEVel[:ABSolute]	<Level>	with query	6.206
CONFigure:BSSignal:CCH[:TX]:CHANnel	<Channel>	with query	6.200
CONFigure:BSSignal:CCH[:TX]:LEVel[:ABSolute]	<Level>	with query	6.201
CONFigure:BSSignal:CCH[:TX]:MODE	BATC BOTC	with query	6.200
CONFigure:BSSignal:FM:DEViation	-100 kHz to +100 kHz	with query	6.200
PROCeDure:BSSignal:FM:DEViation	-100 kHz to +100 kHz	with query	6.200
PROCeDure:BSSignal:FM:DEViation:RANDom:ENABLE	ON OFF	with query	6.200
CONFigure:BSSignal:PDATa[:TCH]:MSLot:CHANnel	<Number>	with query	6.233
CONFigure:BSSignal:PDATa[:TCH]:MSLot:FHOPping:SEQuence	ON OFF	with query	6.233
CONFigure:BSSignal:PDATa[:TCH]:MSLot:MTIMeslot	<Number>	with query	6.233
CONFigure:BSSignal:PDATa[:TCH]:MSLot:PZERo	<P0>	with query	6.232
[SENSe:]BSSignal:PDATa[:TCH]:MSLot:RLEVel?	<Level>	query only	6.233
CONFigure:BSSignal:PDATa[:TCH]:MSLot:SCONfig	<Enable_0>,..., <Enable_7>, <Level_0>,... <Level_7>	with query	6.234
CONFigure:BSSignal[:CSWitched][:TCH]:CHANnel	<TCHChannel>	with query	6.201
CONFigure:BSSignal[:CSWitched][:TCH]:LEVel:UNTimeslot	<Level>	with query	6.202
PROCeDure:BSSignal[:CSWitched][:TCH]:LEVel:UNTimeslot	<Level>	with query	6.202
CONFigure:BSSignal[:CSWitched][:TCH]:LEVel:UTIMeslot	<Level>	with query	6.201
PROCeDure:BSSignal[:CSWitched][:TCH]:LEVel:UTIMeslot	<Level>	with query	6.201
CONFigure:BSSignal[:CSWitched][:TCH]:MSLot:LMODE	UUN IND	with query	6.204
CONFigure:BSSignal[:CSWitched][:TCH]:MSLot:MTIMeslot	0 to 7	with query	6.204
CONFigure:BSSignal[:CSWitched][:TCH]:MSLot:RLEVel	<Level>	with query	6.203
PROCeDure:BSSignal[:CSWitched][:TCH]:MSLot:RLEVel	<Level>	with query	6.203
CONFigure:BSSignal[:CSWitched][:TCH]:MSLot:SCONfig:INDividu al	<Enable_0>,<Enable_1>, ..., <Enable_7>, <PCL_0>, ..., <PCL_7>	with query	6.205
CONFigure:BSSignal[:CSWitched][:TCH]:MSLot:SCONfig:UUNuse d	<Enable_0>,<Enable_1>, ..., <Enable_7>	with query	6.204
CONFigure:BSSignal[:CSWitched][:TCH][:SSLot]:FHOPping:A	<Channel>{,<Channel>}	with query	6.202
CONFigure:BSSignal[:CSWitched][:TCH][:SSLot]:FHOPping:B	Channel>{,<Channel>}	with query	6.202
CONFigure:BSSignal[:CSWitched][:TCH][:SSLot]:FHOPping:C	Channel>{,<Channel>}	with query	6.202
CONFigure:BSSignal[:CSWitched][:TCH][:SSLot]:FHOPping:D	Channel>{,<Channel>}	with query	6.202
CONFigure:BSSignal[:CSWitched][:TCH][:SSLot]:TIMeslot	2 to 6 0 to 7	with query	6.202
Inputs and Outputs			
[SENSe:]CORRection:LOSS:INPut<nr>[:MAGNitude]	-50 dB to 50 dB	with query	6.218
SOURce:CORRection:LOSS:INPut<nr>[:MAGNitude]	-50 dB to 50 dB	with query	6.218
[SENSe:]CORRection:LOSS:OUTPut<nr>[:MAGNitude]	-50 dB to 50 dB	with query	6.219
SOURce:CORRection:LOSS:OUTPut<nr>[:MAGNitude]	-50 dB to 50 dB	with query	6.219
SOURce:DM:CLOCK:FREQuency	1.2190 MHz to 39.000 MHz	with query	6.220
SOURce:DM:CLOCK:STATe	ON OFF	with query	6.219
INPut[:STATe]	RF1 RF2 RF4	with query	6.218

Command, Signalling	Parameter	Remark	Page
OUTPut[:STATe]	RF1 RF2 RF3	with query	6.218
Handover			
CONFigure:HANdOver:ALERting	<Target>	with query	6.196
CONFigure:HANdOver:CSYNc	FSYN NSYN	with query	6.196
CONFigure:HANdOver:TARGet	<Target>	with query	6.196
STATus:HANdOver:TARGet:LIST?	<List>	query only	6.196
Input Power			
[SENSe:]LEVel:ATTenuation	NORMal LNOise LDISTortion	with query	6.188
[SENSe:]LEVel:DEFault	ON OFF	with query	6.188
[SENSe:]LEVel:MAXimum	<Level>	with query	6.187
[SENSe:]LEVel:MODE	MANual PCLevel AUTomatic	with query	6.187
I/Q-IF Inputs and Outputs			
IQIF:DEFault	ON OFF	with query	3.36
CONFigure:IQIF:RXPath	BYP BYIQ XOIO IOIO IOXO	with query	3.36
CONFigure:IQIF:RXTXcombined	BYP BYIQ XOIO IOIO IOXO FPAT UDEF	with query	3.35
CONFigure:IQIF:TXPath	BYP BYIQ XOIO IOIO IOXO	with query	3.36
Measurement Control			
MCONTrOl:DEFault	ON OFF	with query	6.197
CONFigure:MCONTrOl:MSLot:MESLot	0 to 7	with query	6.197
Configuration and Message File Management			
MMEMory:L3MSg:BEMpty	ON OFF	query only	6.227
MMEMory:L3MSg:BWRiting	ON OFF	with query	6.227
MMEMory:L3MSg:CDEStination	<FileName>	no query	6.226
MMEMory:L3MSg:SAVE	[<FileName>] [,<msus>]	no query	6.227
MMEMory:RECall:CURRent	<FileName> [,<msus>]	no query	6.226
MMEMory:SAVE:CURRent	<FileName> [,<msus>]	no query	6.226
Modulation measurement: 8PSK Modulation, Error Vector Magnitude			
INITiate:MODulation:EVMagnitude:EPSK	–	no query	3.87
ABORt:MODulation:EVMagnitude:EPSK	–	no query	3.87
STOP:MODulation:EVMagnitude:EPSK	–	no query	3.87
CONTInue:MODulation:EVMagnitude:EPSK	–	no query	3.87
CONFigure:SUBarrays:MODulation:EVMagnitude:EPSK	ALL ARITHmetical MINimum MAXimum IVAL,<Start>,<Samples>{,<Start>,<Samples>}	with query	3.90
READ:ARRAy:MODulation:EVMagnitude:EPSK:AVERAge?	–100.0 dB to +100.0 dB	query only	3.92
FETCh:ARRAy:MODulation:EVMagnitude:EPSK:AVERAge?	–100.0 dB to +100.0 dB	query only	3.92
SAMPle:ARRAy:MODulation:EVMagnitude:EPSK:AVERAge?	–100.0 dB to +100.0 dB	query only	3.92
READ:SUBarrays:MODulation:EVMagnitude:EPSK:AVERAge?	–100.0 dB to +20.0 dB	query only	3.92
FETCh:SUBarrays:MODulation:EVMagnitude:EPSK:AVERAge?	–100.0 dB to +20.0 dB	query only	3.92
SAMPle:SUBarrays:MODulation:EVMagnitude:EPSK:AVERAge?	–100.0 dB to +20.0 dB	query only	3.92
CONFigure:MODulation:EVMagnitude:EPSK:CONTrOl	SCALAR ARRAy, 1 to 1000 NONE	with query	3.88

Command, Signalling	Parameter	Remark	Page
CONFigure:MODulation:EVMagnitude:EPsk:CONtrol:DEFault	ON OFF	with query	3.89
CONFigure:MODulation:EVMagnitude:EPsk:CONtrol:REPetition	CONTInuous SINGleshot 1 to 10000, SONerror NONE, STEP NONE	with query	3.88
CONFigure:MODulation:EVMagnitude:EPsk:EREPorting	SRQ SOPC SRSQ OFF	with query	3.87
CALCulate:MODulation:EVMagnitude:EPsk:LIMit:MATCHing?	<Result>	query only	3.91
READ:ARRay:MODulation:EVMagnitude:EPsk:MMAximum?	-100.0 dB to +100.0 dB	query only	3.92
FETCh:ARRay:MODulation:EVMagnitude:EPsk:MMAximum?	-100.0 dB to +100.0 dB	query only	3.92
SAMPlE:ARRay:MODulation:EVMagnitude:EPsk:MMAximum?	-100.0 dB to +100.0 dB	query only	3.92
READ:SUBarrays:MODulation:EVMagnitude:EPsk:MMAximum?	-100.0 dB to +20.0 dB	query only	3.92
FETCh:SUBarrays:MODulation:EVMagnitude:EPsk:MMAximum?	-100.0 dB to +20.0 dB	query only	3.92
SAMPlE:SUBarrays:MODulation:EVMagnitude:EPsk:MMAximum?	-100.0 dB to +20.0 dB	query only	3.92
FETCh:MODulation:EVMagnitude:EPsk:STATus?	OFF RUN STOP ERR STEP RDY, 1 to 10000 NONE, 1 to 1000 NONE	query only	3.87
READ[:SCALar]:MODulation:EVMagnitude:EPsk?	<Result>	query only	3.91
FETCh[:SCALar]:MODulation:EVMagnitude:EPsk?	<Result>	query only	3.91
SAMPlE[:SCALar]:MODulation:EVMagnitude:EPsk?	<Result>	query only	3.91
READ:ARRay:MODulation:EVMagnitude:EPsk[:CURRent]?	-100.0 dB to +100.0 dB	query only	3.92
FETCh:ARRay:MODulation:EVMagnitude:EPsk[:CURRent]?	-100.0 dB to +100.0 dB	query only	3.92
SAMPlE:ARRay:MODulation:EVMagnitude:EPsk[:CURRent]?	-100.0 dB to +100.0 dB	query only	3.92
READ:SUBarrays:MODulation:EVMagnitude:EPsk[:CURRent]?	-100.0 dB to +20.0 dB	query only	3.92
FETCh:SUBarrays:MODulation:EVMagnitude:EPsk[:CURRent]?	-100.0 dB to +20.0 dB	query only	3.92
SAMPlE:SUBarrays:MODulation:EVMagnitude:EPsk[:CURRent]?	-100.0 dB to +20.0 dB	query only	3.92
Modulation measurement: 8PSK Modulation, Magnitude Error			
INITiate:MODulation:MERRor:EPsk	-	no query	3.99
ABORt:MODulation:MERRor:EPsk	-	no query	3.99
STOP:MODulation:MERRor:EPsk	-	no query	3.99
CONTInue:MODulation:MERRor:EPsk	-	no query	3.99
CONFigure:SUBarrays:MODulation:MERRor:EPsk	ALL ARITHmetical MINimum MAXimum IVAL,<Start>,<Samples>{,<Start>,<Samples>}	with query	3.102
READ:ARRay:MODulation:MERRor:EPsk:AVERAge?	-100.0 dB to +100.0 dB	query only	3.104
FETCh:ARRay:MODulation:MERRor:EPsk:AVERAge?	-100.0 dB to +100.0 dB	query only	3.104
SAMPlE:ARRay:MODulation:MERRor:EPsk:AVERAge?	-100.0 dB to +100.0 dB	query only	3.104
READ:SUBarrays:MODulation:MERRor:EPsk:AVERAge?	-100.0 dB to +20.0 dB	query only	3.104
FETCh:SUBarrays:MODulation:MERRor:EPsk:AVERAge?	-100.0 dB to +20.0 dB	query only	3.104
SAMPlE:SUBarrays:MODulation:MERRor:EPsk:AVERAge?	-100.0 dB to +20.0 dB	query only	3.104
CONFigure:MODulation:MERRor:EPsk:CONtrol	SCALar ARRay, 1 to 1000 NONE	with query	3.100
CONFigure:MODulation:MERRor:EPsk:CONtrol:DEFault	ON OFF	with query	3.101
CONFigure:MODulation:MERRor:EPsk:CONtrol:REPetition	CONTInuous SINGleshot 1 to 10000, SONerror NONE, STEP NONE	with query	3.100
CONFigure:MODulation:MERRor:EPsk:EREPorting	SRQ SOPC SRSQ OFF	with query	3.99

Command, Signalling	Parameter	Remark	Page
CALCulate:MODulation:MERRor:EPSK:LIMit:MATCHing?	<Result>	query only	3.103
READ:ARRay:MODulation:MERRor:EPSK:MMAximum?	-100.0 dB to +100.0 dB	query only	3.104
FETCh:ARRay:MODulation:MERRor:EPSK:MMAximum?	-100.0 dB to +100.0 dB	query only	3.104
SAMPlE:ARRay:MODulation:MERRor:EPSK:MMAximum?	-100.0 dB to +100.0 dB	query only	3.104
READ:SUBarrays:MODulation:MERRor:EPSK:MMAximum?	-100.0 dB to +20.0 dB	query only	3.104
FETCh:SUBarrays:MODulation:MERRor:EPSK:MMAximum?	-100.0 dB to +20.0 dB	query only	3.104
SAMPlE:SUBarrays:MODulation:MERRor:EPSK:MMAximum?	-100.0 dB to +20.0 dB	query only	3.104
FETCh:MODulation:MERRor:EPSK:STATus?	OFF RUN STOP ERR STEP RDY, 1 to 10000 NONE, 1 to 1000 NONE	query only	3.99
READ[:SCALar]:MODulation:MERRor:EPSK?	<Result>	query only	3.103
FETCh[:SCALar]:MODulation:MERRor:EPSK?	<Result>	query only	3.103
SAMPlE[:SCALar]:MODulation:MERRor:EPSK?	<Result>	query only	3.103
READ:ARRay:MODulation:MERRor:EPSK[:CURRent]?	-100.0 dB to +100.0 dB	query only	3.104
FETCh:ARRay:MODulation:MERRor:EPSK[:CURRent]?	-100.0 dB to +100.0 dB	query only	3.104
SAMPlE:ARRay:MODulation:MERRor:EPSK[:CURRent]?	-100.0 dB to +100.0 dB	query only	3.104
READ:SUBarrays:MODulation:MERRor:EPSK[:CURRent]?	-100.0 dB to +20.0 dB	query only	3.104
FETCh:SUBarrays:MODulation:MERRor:EPSK[:CURRent]?	-100.0 dB to +20.0 dB	query only	3.104
SAMPlE:SUBarrays:MODulation:MERRor:EPSK[:CURRent]?	-100.0 dB to +20.0 dB	query only	3.104
CONFigure:MODulation:OEMP:EPSK:LIMit:AVERage	<PhaseErrorPeak>, <PhaseErrorRMS>, <MagnErrorPeak>, <MagnErrorRMS>, <EVMErrorPeak>, <EVMErrorRMS>, <OriginOffset>, <IQImbalance>, <FreqError>	with query	3.84
CONFigure:MODulation:OEMP:EPSK:LIMit:DEFault	ON OFF	with query	3.85
CONFigure:MODulation:OEMP:EPSK:LIMit:P95Th	<EVM95%>, <MError95%>, <PError95%>	with query	3.85
CONFigure:MODulation:OEMP:EPSK:LIMit[:CURRent]	<PhaseErrorPeak>, <PhaseErrorRMS>, <MagnErrorPeak>, <MagnErrorRMS>, <EVMErrorPeak>, <EVMErrorRMS>, <OriginOffset>, <IQImbalance>, <FreqError>	with query	3.84
Modulation measurement: 8PSK Modulation, Overview			
INITiate:MODulation:OVERview:EPSK	-	no query	3.82
ABORT:MODulation:OVERview:EPSK	-	no query	3.82
STOP:MODulation:OVERview:EPSK	-	no query	3.82
CONTinue:MODulation:OVERview:EPSK	-	no query	3.82
CONFigure:MODulation:OVERview:EPSK:CONTRol	SCALar ARRy, 1 to 1000 NONE	with query	3.83
CONFigure:MODulation:OVERview:EPSK:CONTRol:DEFault	ON OFF	with query	3.84
CONFigure:MODulation:OVERview:EPSK:CONTRol:REPetition	CONTinuous SINGleshot 1 to 10000, SONerror NONE, STEP NONE	with query	3.83
CONFigure:MODulation:OVERview:EPSK:EREPorting	SRQ SOPC SRSQ OFF	with query	3.82
CALCulate:MODulation:OVERview:EPSK:LIMit:MATCHing?	<Result>	query only	3.86
FETCh:MODulation:OVERview:EPSK:STATus?	OFF RUN STOP ERR STEP RDY, 1 to 10000 NONE, 1 to 1000 NONE	query only	3.82
READ[:SCALar]:MODulation:OVERview:EPSK?	<Result>	query only	3.85

Command, Signalling	Parameter	Remark	Page
FETCh[:SCALar]:MODulation:OVERview:EPSK?	<Result>	query only	3.85
SAMPlE[:SCALar]:MODulation:OVERview:EPSK?	<Result>	query only	3.85
Modulation measurement: 8PSK Modulation, Phase Error			
INITiate:MODulation[:PERRor]:EPSK	–	no query	3.93
ABORt:MODulation[:PERRor]:EPSK	–	no query	3.93
STOP:MODulation[:PERRor]:EPSK	–	no query	3.93
CONTInue:MODulation[:PERRor]:EPSK	–	no query	3.93
CONFIgure:SUBarrays:MODulation[:PERRor]:EPSK	ALL ARITHmetical MINimum MAXimum IVAL,<Start>,<Samples>{,<Start>,<Samples>}	with query	3.96
READ:ARRay:MODulation[:PERRor]:EPSK:AVERAge?	–100.0 dB to +100.0 dB	query only	3.98
FETCh:ARRay:MODulation[:PERRor]:EPSK:AVERAge?	–100.0 dB to +100.0 dB	query only	3.98
SAMPlE:ARRay:MODulation[:PERRor]:EPSK:AVERAge?	–100.0 dB to +100.0 dB	query only	3.98
READ:SUBarrays:MODulation[:PERRor]:EPSK:AVERAge?	–100.0 dB to +20.0 dB	query only	3.98
FETCh:SUBarrays:MODulation[:PERRor]:EPSK:AVERAge?	–100.0 dB to +20.0 dB	query only	3.98
SAMPlE:SUBarrays:MODulation[:PERRor]:EPSK:AVERAge?	–100.0 dB to +20.0 dB	query only	3.98
CONFIgure:MODulation[:PERRor]:EPSK:CONTrol	SCALar ARRay, 1 to 1000 NONE	with query	3.94
CONFIgure:MODulation[:PERRor]:EPSK:CONTrol:DEFault	ON OFF	with query	3.95
CONFIgure:MODulation[:PERRor]:EPSK:CONTrol:REPetition	CONTInuous SINGleshot 1 to 10000, SONerror NONE, STEP NONE	with query	3.94
CONFIgure:MODulation[:PERRor]:EPSK:EREPorting	SRQ SOPC SRSQ OFF	with query	3.93
CALCulate:MODulation[:PERRor]:EPSK:LIMit:MATChing?	<Result>	query only	3.97
READ:ARRay:MODulation[:PERRor]:EPSK:MMAximum?	–100.0 dB to +100.0 dB	query only	3.98
FETCh:ARRay:MODulation[:PERRor]:EPSK:MMAximum?	–100.0 dB to +100.0 dB	query only	3.98
SAMPlE:ARRay:MODulation[:PERRor]:EPSK:MMAximum?	–100.0 dB to +100.0 dB	query only	3.98
READ:SUBarrays:MODulation[:PERRor]:EPSK:MMAximum?	–100.0 dB to +20.0 dB	query only	3.98
FETCh:SUBarrays:MODulation[:PERRor]:EPSK:MMAximum?	–100.0 dB to +20.0 dB	query only	3.98
SAMPlE:SUBarrays:MODulation[:PERRor]:EPSK:MMAximum?	–100.0 dB to +20.0 dB	query only	3.98
FETCh:MODulation[:PERRor]:EPSK:STATus?	OFF RUN STOP ERR STEP RDY, 1 to 10000 NONE , 1 to 1000 NONE	query only	3.93
READ[:SCALar]:MODulation[:PERRor]:EPSK?	<Result>	query only	3.97
FETCh[:SCALar]:MODulation[:PERRor]:EPSK?	<Result>	query only	3.97
SAMPlE[:SCALar]:MODulation[:PERRor]:EPSK?	<Result>	query only	3.97
READ:ARRay:MODulation[:PERRor]:EPSK[:CURRent]?	–100.0 dB to +100.0 dB	query only	3.98
FETCh:ARRay:MODulation[:PERRor]:EPSK[:CURRent]?	–100.0 dB to +100.0 dB	query only	3.98
SAMPlE:ARRay:MODulation[:PERRor]:EPSK[:CURRent]?	–100.0 dB to +100.0 dB	query only	3.98
READ:SUBarrays:MODulation[:PERRor]:EPSK[:CURRent]?	–100.0 dB to +20.0 dB	query only	3.98
FETCh:SUBarrays:MODulation[:PERRor]:EPSK[:CURRent]?	–100.0 dB to +20.0 dB	query only	3.98
SAMPlE:SUBarrays:MODulation[:PERRor]:EPSK[:CURRent]?	–100.0 dB to +20.0 dB	query only	3.98
Modulation measurement: GMSK Modulation, Phase Error			
INITiate:MODulation[:PERRor]:GMSK	–	no query	3.66
ABORt:MODulation[:PERRor]:GMSK	–	no query	3.66
STOP:MODulation[:PERRor]:GMSK	–	no query	3.66
CONTInue:MODulation[:PERRor]:GMSK	–	no query	3.66
CONFIgure:SUBarrays:MODulation[:PERRor]:GMSK	ALL ARITHmetical	with query	3.70

Command, Signalling	Parameter	Remark	Page
	MINimum MAXimum IVAL, <Start>, <Samples>, <Start>, <Samples>		
READ:ARRay:MODulation[:PERRor][:GMSK]:AVERage?	-100.0 dB to +100.0 dB	query only	3.72
FETCh:ARRay:MODulation[:PERRor][:GMSK]:AVERage?	-100.0 dB to +100.0 dB	query only	3.72
SAMPlE:ARRay:MODulation[:PERRor][:GMSK]:AVERage?	-100.0 dB to +100.0 dB	query only	3.72
READ:SUBarrays:MODulation[:PERRor][:GMSK]:AVERage?	-100.0 dB to +20.0 dB	query only	3.73
FETCh:SUBarrays:MODulation[:PERRor][:GMSK]:AVERage?	-100.0 dB to +20.0 dB	query only	3.73
SAMPlE:SUBarrays:MODulation[:PERRor][:GMSK]:AVERage?	-100.0 dB to +20.0 dB	query only	3.73
CONFigure:MODulation[:PERRor][:GMSK]:CONTRol	SCALar ARRay, 1 to 1000 NONE	with query	3.67
CONFigure:MODulation[:PERRor][:GMSK]:CONTRol:DEFault	ON OFF	with query	3.68
CONFigure:MODulation[:PERRor][:GMSK]:CONTRol:REPetition	CONTInuous SINGleshot 1 to 10000, SONerror NONE, STEP NONE	with query	3.68
CONFigure:MODulation[:PERRor][:GMSK]:EREPorting	SRQ SOPC SRSQ OFF	with query	3.66
CONFigure:MODulation[:PERRor][:GMSK]:FILTer	G500 B600	with query	3.67
CONFigure:MODulation[:PERRor][:GMSK]:LIMit:AVERage	0.0 deg to 50.0 deg, 0.0 deg to 50.0 deg, 0 Hz to 999 Hz	with query	3.69
CONFigure:MODulation[:PERRor][:GMSK]:LIMit:DEFault	ON OFF	with query	3.69
CONFigure:MODulation[:PERRor][:GMSK]:LIMit:LOWer:MODE	ON OFF	with query	3.69
CALCulate:MODulation[:PERRor][:GMSK]:LIMit:MATChing?	<Result>	query only	3.72
CONFigure:MODulation[:PERRor][:GMSK]:LIMit:UPPer:MODE	ON OFF	with query	3.69
CONFigure:MODulation[:PERRor][:GMSK]:LIMit:CURRent]	0.0 deg to 50.0 deg, 0.0 deg to 50.0 deg, 0 Hz to 999 Hz	with query	3.68
READ:ARRay:MODulation[:PERRor][:GMSK]:MMAximum?	-100.0 dB to +100.0 dB	query only	3.72
FETCh:ARRay:MODulation[:PERRor][:GMSK]:MMAximum?	-100.0 dB to +100.0 dB	query only	3.72
SAMPlE:ARRay:MODulation[:PERRor][:GMSK]:MMAximum?	-100.0 dB to +100.0 dB	query only	3.72
READ:SUBarrays:MODulation[:PERRor][:GMSK]:MMAximum?	-100.0 dB to +20.0 dB	query only	3.73
FETCh:SUBarrays:MODulation[:PERRor][:GMSK]:MMAximum?	-100.0 dB to +20.0 dB	query only	3.73
SAMPlE:SUBarrays:MODulation[:PERRor][:GMSK]:MMAximum?	-100.0 dB to +20.0 dB	query only	3.73
FETCh:MODulation[:PERRor][:GMSK]:STATus?	OFF RUN STOP ERR STEP RDY, 1 to 10000 NONE, 1 to 1000 NONE	query only	3.67
CONFigure:MODulation[:PERRor][:GMSK]:TIME:DECode	STANdard GTBits	with query	3.70
READ[:SCALar]:MODulation[:PERRor][:GMSK]?	<Result>	query only	3.71
FETCh[:SCALar]:MODulation[:PERRor][:GMSK]?	<Result>	query only	3.71
SAMPlE[:SCALar]:MODulation[:PERRor][:GMSK]?	<Result>	query only	3.71
READ:ARRay:MODulation[:PERRor][:GMSK][:CURRent]?	-100.0 dB to +100.0 dB	query only	3.72
FETCh:ARRay:MODulation[:PERRor][:GMSK][:CURRent]?	-100.0 dB to +100.0 dB	query only	3.72
SAMPlE:ARRay:MODulation[:PERRor][:GMSK][:CURRent]?	-100.0 dB to +100.0 dB	query only	3.72
READ:SUBarrays:MODulation[:PERRor][:GMSK][:CURRent]?	-100.0 dB to +20.0 dB	query only	3.73
FETCh:SUBarrays:MODulation[:PERRor][:GMSK][:CURRent]?	-100.0 dB to +20.0 dB	query only	3.73
SAMPlE:SUBarrays:MODulation[:PERRor][:GMSK][:CURRent]?	-100.0 dB to +20.0 dB	query only	3.73
Modulation measurement: GMSK Modulation, Extended Phase Error			
INITiate:MODulation:XPERror[:GMSK]	-	no query	3.74
ABORt:MODulation:XPERror[:GMSK]	-	no query	3.74
STOP:MODulation:XPERror[:GMSK]	-	no query	3.74

Command, Signalling	Parameter	Remark	Page
CONTINUE:MODulation:XPERRor[:GMSK]	–	no query	3.74
CONFigure:SUBarrays:MODulation:XPERRor[:GMSK]	ALL ARITHmetical MINimum MAXimum IVAL,<Start>,<Samples>{,<Start>,<Samples>}	with query	3.78
READ:ARRay:MODulation:XPERRor[:GMSK]:AVERage?	–100.0 dB to +100.0 dB	query only	3.80
FETCH:ARRay:MODulation:XPERRor[:GMSK]:AVERage?	–100.0 dB to +100.0 dB	query only	3.80
SAMPLE:ARRay:MODulation:XPERRor[:GMSK]:AVERage?	–100.0 dB to +100.0 dB	query only	3.80
READ:SUBarrays:MODulation:XPERRor[:GMSK]:AVERage?	–100.0 dB to +20.0 dB	query only	3.81
FETCH:SUBarrays:MODulation:XPERRor[:GMSK]:AVERage?	–100.0 dB to +20.0 dB	query only	3.81
SAMPLE:SUBarrays:MODulation:XPERRor[:GMSK]:AVERage?	–100.0 dB to +20.0 dB	query only	3.81
CONFigure:MODulation:XPERRor[:GMSK]:CONTrol	SCALAR ARRAY, 1 to 1000 NONE	with query	3.75
CONFigure:MODulation:XPERRor[:GMSK]:CONTrol:DEFault	ON OFF	with query	3.76
CONFigure:MODulation:XPERRor[:GMSK]:CONTrol:REPetition	CONTinuous SINGleshot 1 to 10000, SONerror NONE, STEP NONE	with query	3.76
CONFigure:MODulation:XPERRor[:GMSK]:EREPorting	SRQ SOPC SRSQ OFF	with query	3.74
CONFigure:MODulation:XPERRor[:GMSK]:FILTer	G500 B600	with query	3.75
CONFigure:MODulation:XPERRor[:GMSK]:LIMit:AVERage	0.0 deg to 50.0 deg, 0.0 deg to 50.0 deg, –100 dB to 0 dB, –100 dB to 0 dB, 0 Hz to 999 Hz	with query	3.77
CONFigure:MODulation:XPERRor[:GMSK]:LIMit:DEFault	ON OFF	with query	3.77
CONFigure:MODulation:XPERRor[:GMSK]:LIMit:LOWer:MODE	ON OFF	with query	3.77
CALCulate:MODulation:XPERRor[:GMSK]:LIMit:MATCHing?	<Result>	query only	3.80
CONFigure:MODulation:XPERRor[:GMSK]:LIMit:UPPer:MODE	ON OFF	with query	3.77
CONFigure:MODulation:XPERRor[:GMSK]:LIMit[:CURRent]	0.0 deg to 50.0 deg, 0.0 deg to 50.0 deg, –100 dB to 0 dB, –100 dB to 0 dB, 0 Hz to 999 Hz	with query	3.76
READ:ARRay:MODulation:XPERRor[:GMSK]:MMAximum?	–100.0 dB to +100.0 dB	query only	3.80
FETCH:ARRay:MODulation:XPERRor[:GMSK]:MMAximum?	–100.0 dB to +100.0 dB	query only	3.80
SAMPLE:ARRay:MODulation:XPERRor[:GMSK]:MMAximum?	–100.0 dB to +100.0 dB	query only	3.80
READ:SUBarrays:MODulation:XPERRor[:GMSK]:MMAximum?	–100.0 dB to +20.0 dB	query only	3.81
FETCH:SUBarrays:MODulation:XPERRor[:GMSK]:MMAximum?	–100.0 dB to +20.0 dB	query only	3.81
SAMPLE:SUBarrays:MODulation:XPERRor[:GMSK]:MMAximum?	–100.0 dB to +20.0 dB	query only	3.81
FETCH:MODulation:XPERRor[:GMSK]:STATus?	OFF RUN STOP ERR STEP RDY, 1 to 10000 NONE, 1 to 1000 NONE	query only	3.74
CONFigure:MODulation:XPERRor[:GMSK]:TIME:DECode	STANDARD GTBits	with query	3.75
READ[:SCALar]:MODulation:XPERRor[:GMSK]?	<Result>	query only	3.79
FETCH[:SCALar]:MODulation:XPERRor[:GMSK]?	<Result>	query only	3.79
SAMPLE[:SCALar]:MODulation:XPERRor[:GMSK]?	<Result>	query only	3.79
READ:ARRay:MODulation:XPERRor[:GMSK][:CURRent]?	–100.0 dB to +100.0 dB	query only	3.80
FETCH:ARRay:MODulation:XPERRor[:GMSK][:CURRent]?	–100.0 dB to +100.0 dB	query only	3.80
SAMPLE:ARRay:MODulation:XPERRor[:GMSK][:CURRent]?	–100.0 dB to +100.0 dB	query only	3.80
READ:SUBarrays:MODulation:XPERRor[:GMSK][:CURRent]?	–100.0 dB to +20.0 dB	query only	3.81
FETCH:SUBarrays:MODulation:XPERRor[:GMSK][:CURRent]?	–100.0 dB to +20.0 dB	query only	3.81
SAMPLE:SUBarrays:MODulation:XPERRor[:GMSK][:CURRent]?	–100.0 dB to +20.0 dB	query only	3.81

Command, Signalling	Parameter	Remark	Page
RF signal of the mobile phone			
CONFigure:MSSignal:CCH:PMAX	<Level>	with query	6.197
CONFigure:MSSignal:PDATa[:TCH]:MSLot:SCONfig	<Enable_0>, ..., <Enable_7>, <Gamma_0>, ..., <Gamma_7>	with query	6.232
CONFigure:MSSignal[:CSWitched]:DTX	ON OFF	with query	6.198
CONFigure:MSSignal[:CSWitched][:TCH]:MSLot:LOOP	<Loop>	with query	6.199
CONFigure:MSSignal[:CSWitched][:TCH]:MSLot:SCONfig	<Enable_0>, <Enable_1>, ..., <Enable_7>, <PCL_0>, ..., <PCL_7>	with query	6.198
CONFigure:MSSignal[:CSWitched][:TCH]:TADVance	0 bit to 63 bit	with query	6.198
CONFigure:MSSignal[:CSWitched][:TCH][:SSLot]:LOOP	<Loop>	with query	6.199
CONFigure:MSSignal[:CSWitched][:TCH][:SSLot]:MS:PCL	<Level>	with query	6.198
Parameters of the mobile phone			
[SENSe:]MSSinfo:AMR:FRATe:DLCMode?	CM1 CM2 CM3 CM4	with query	6.225
[SENSe:]MSSinfo:AMR:FRATe:DLCMode?	CM1 CM2 CM3 CM4	with query	6.243
[SENSe:]MSSinfo:AMR:FRATe:ULCMode?	CM1 CM2 CM3 CM4	with query	6.225
[SENSe:]MSSinfo:AMR:FRATe:ULCMode?	CM1 CM2 CM3 CM4	with query	6.243
[SENSe:]MSSinfo:AMR:HRATe:DLCMode?	CM1 CM2 CM3 CM4	with query	6.225
[SENSe:]MSSinfo:AMR:HRATe:DLCMode?	CM1 CM2 CM3 CM4	with query	6.243
[SENSe:]MSSinfo:AMR:HRATe:ULCMode?	CM1 CM2 CM3 CM4	with query	6.225
[SENSe:]MSSinfo:AMR:HRATe:ULCMode?	CM1 CM2 CM3 CM4	with query	6.243
[SENSe:]MSSinfo:DNumber?	Max. 20-digit	query only	6.224
[SENSe:]MSSinfo:IMEI:FAC?	2-digit NAN	query only	6.223
[SENSe:]MSSinfo:IMEI:SNR?	6-digit NAN	query only	6.223
[SENSe:]MSSinfo:IMEI:SVN?	1 2-digit NAN	query only	6.223
[SENSe:]MSSinfo:IMEI:TAC?	6-digit NAN	query only	6.223
[SENSe:]MSSinfo:IMSI:MCC?	0 to 999 NAN	query only	6.223
[SENSe:]MSSinfo:IMSI:MNC?	0 to 99 NAN	query only	6.223
[SENSe:]MSSinfo:IMSI:MSIN?	"0" to "9999999999" NAN	query only	6.223
[SENSe:]MSSinfo:MSCClass:CSWitched?	1 to 29	query only	6.224
[SENSe:]MSSinfo:MSCClass:PDATa:EGPRS?	1 to 29	query only	6.238
[SENSe:]MSSinfo:MSCClass:PDATa[:GPRS]?	1 to 29	query only	6.238
[SENSe:]MSSinfo:POWer:CLASs?	1 to 5	query only	6.224
[SENSe:]MSSinfo:REVisioN?	PH1 PH2 PH2P	query only	6.223
[SENSe:]MSSinfo:TRAFfic?	FRV1 FRV2 HRV1 FD48 FD96 FD14 HD24 HD48 C1TM to C4TM, MC1T to MC9T AMRH AMRF	query only	6.224
Network parameters			
CONFigure:NETWork:BAList	<Channel> {, <Channel>}	with query	6.206
CONFigure:NETWork:IDENtity:BCC	0 to 7	with query	6.208
CONFigure:NETWork:IDENtity:LAC	1 to 65533 and 65535	with query	6.208
CONFigure:NETWork:IDENtity:MCC	0 to 999	with query	6.208
CONFigure:NETWork:IDENtity:MNC	0 to 99 0 to 999	with query	6.208
CONFigure:NETWork:IDENtity:NCC	0 to 7	with query	6.207
CONFigure:NETWork:IDENtity:RAC	0 to 255	with query	6.235
[SENSe:]NETWork:MSERvice?	CSWitched PDATa	query only	6.235
CONFigure:NETWork:NSUPport	GSM GGPR GEGP	with query	6.234

Command, Signalling	Parameter	Remark	Page
PROCedure:NETWork:PDATa:BITStream	PR9 PR11 PR15 PR16	with query	6.238
CONFigure:NETWork:PDATa:BITStream	PR9 PR11 PR15 PR16	with query	6.238
CONFigure:NETWork:PDATa:CSCHEME	CS1 to CS4 MCS1 ato MCS9	with query	6.235
PROCedure:NETWork:PDATa:CSCHEME	CS1 to CS4 MCS1 to MCS9	with query	6.235
CONFigure:NETWork:PDATa:EDAllocation	ON OFF AUTO	with query	6.237
CONFigure:NETWork:PDATa:EGPRs:PSCHeme	<PS_1>, ... <PS_12>	with query	6.236
PROCedure:NETWork:PDATa:EGPRs:PSCHeme	<PS_1>, ... <PS_12>	with query	6.236
CONFigure:NETWork:PDATa:EGPRs:PSCHeme:IREDundancy	ON OFF	with query	6.236
CONFigure:NETWork:PDATa:NOPDus	1 to 4095	with query	6.237
CONFigure:NETWork:PDATa:PCMChannel	BCCH PDCH	with query	6.236
CONFigure:NETWork:PDATa:RLCMode	ACKN UNAC	with query	6.238
CONFigure:NETWork:PDATa:RLCMode	ACKN UNAC	with query	6.238
CONFigure:NETWork:PDATa:SOFFset	0 to 7	with query	6.237
CONFigure:NETWork:PDATa:TWACK	ON OFF	with query	6.237
CONFigure:NETWork:PDATa:UDCYcle	A100 A000 A012	with query	6.237
CONFigure:NETWork:PDATa:USF	0 to 7	with query	6.236
CONFigure:NETWork:SI2Quater:NC3G:ENABLE	ON OFF	with query	6.217
CONFigure:NETWork:SI2Quater:NC3G:FDD:ARFCN	ON OFF	with query	6.217
CONFigure:NETWork:SI2Quater:NC3G:FDD:PSCode	ON OFF	with query	6.218
CONFigure:NETWork:SYSTEM:AClass	0 to 2 ¹⁶ -1	with query	6.210
CONFigure:NETWork:SYSTEM:BINDicator	G18 G19	with query	6.209
CONFigure:NETWork:SYSTEM:BSAGblksres	0 to 7	with query	6.209
CONFigure:NETWork:SYSTEM:BSPamfrms	2 to 9	with query	6.209
CONFigure:NETWork:SYSTEM:BSPReorganis	ON OFF	with query	6.209
CONFigure:NETWork:SYSTEM:CACCess	BARRed NBARred	with query	6.209
CONFigure:NETWork:SYSTEM:PLUPdate	OFF 0 to 255	with query	6.209
CONFigure:NETWork[:CSWitched]:AMR:FRATE:DLCMode	ON OFF	with query	6.214
PROCedure:NETWork[:CSWitched]:AMR:FRATE:DLCMode	ON OFF	with query	6.214
CONFigure:NETWork[:CSWitched]:AMR:FRATE:DLCMode	ON OFF	with query	6.239
PROCedure:NETWork[:CSWitched]:AMR:FRATE:DLCMode	ON OFF	with query	6.239
CONFigure:NETWork[:CSWitched]:AMR:FRATE:RSETting	<CM4>, <CM3>, CM2>, <CM1>,<ThrDown4>, <ThrUp3>, <ThrDown3>, <ThrUp2>, <ThrDown2>, <ThrUp1>	with query	6.216
CONFigure:NETWork[:CSWitched]:AMR:FRATE:RSETting	<CM4>, <CM3>, CM2>, <CM1>,<ThrDown4>, <ThrUp3>, <ThrDown3>, <ThrUp2>, <ThrDown2>, <ThrUp1>	with query	6.242
CONFigure:NETWork[:CSWitched]:AMR:FRATE:ULCMode	ON OFF	with query	6.214
PROCedure:NETWork[:CSWitched]:AMR:FRATE:ULCMode	ON OFF	with query	6.214
CONFigure:NETWork[:CSWitched]:AMR:FRATE:ULCMode	ON OFF	with query	6.240
PROCedure:NETWork[:CSWitched]:AMR:FRATE:ULCMode	ON OFF	with query	6.240
CONFigure:NETWork[:CSWitched]:AMR:HRATE:DLCMode	ON OFF	with query	6.214
PROCedure:NETWork[:CSWitched]:AMR:HRATE:DLCMode	ON OFF	with query	6.214
CONFigure:NETWork[:CSWitched]:AMR:HRATE:DLCMode	ON OFF	with query	6.239
PROCedure:NETWork[:CSWitched]:AMR:HRATE:DLCMode	ON OFF	with query	6.239

Command, Signalling	Parameter	Remark	Page
CONFigure:NETWork[:CSWitched]:AMR:HRATe:RSETting	<CM4>, <CM3>, CM2>, <CM1>,<ThrDown4>, <ThrUp3>, <ThrDown3>, <ThrUp2>, <ThrDown2>, <ThrUp1>	with query	6.215
CONFigure:NETWork[:CSWitched]:AMR:HRATe:RSETting	<CM4>, <CM3>, CM2>, <CM1>,<ThrDown4>, <ThrUp3>, <ThrDown3>, <ThrUp2>, <ThrDown2>, <ThrUp1>	with query	6.241
CONFigure:NETWork[:CSWitched]:AMR:HRATe:ULCMode	ON OFF	with query	6.214
PROCedure:NETWork[:CSWitched]:AMR:HRATe:ULCMode	ON OFF	with query	6.214
CONFigure:NETWork[:CSWitched]:AMR:HRATe:ULCMode	ON OFF	with query	6.240
PROCedure:NETWork[:CSWitched]:AMR:HRATe:ULCMode	ON OFF	with query	6.240
CONFigure:NETWork[:CSWitched]:AMR:NSUPpression	ON OFF	with query	6.213
CONFigure:NETWork[:CSWitched]:AMR:NSUPpression	ON OFF	with query	6.239
CONFigure:NETWork[:CSWitched]:AOCHarge	<Value1>, <Value2> ... , <Value7>	with query	6.207
CONFigure:NETWork[:CSWitched]:AOCHarge:ENABLE	ON OFF		6.207
CONFigure:NETWork[:CSWitched]:REQuest:AUTHenticate	ON OFF	with query	6.213
CONFigure:NETWork[:CSWitched]:REQuest:HANdOver	ON OFF	with query	6.213
CONFigure:NETWork[:CSWitched]:REQuest:IMEI	ON OFF	with query	6.213
CONFigure:NETWork[:CSWitched]:REQuest:IMSI	ON OFF	with query	6.213
CONFigure:NETWork[:CSWitched]:SMODE:BITStream	ECHO LOOP PR9 PR11 PR15 PR16 HANdset HLOW CCAL ECAL DCAL	with query	6.211
PROCedure:NETWork[:CSWitched]:SMODE:BITStream	ECHO LOOP PR9 PR11 PR15 PR16 HANdset HLOW CCAL ECAL DCAL	with query	6.211
CONFigure:NETWork[:CSWitched]:SMODE:IMSI:MCC	0 to 999	with query	6.212
CONFigure:NETWork[:CSWitched]:SMODE:IMSI:MNC	0 to 99	with query	6.212
CONFigure:NETWork[:CSWitched]:SMODE:IMSI:MSIN	"0" to "9999999999"	with query	6.212
CONFigure:NETWork[:CSWitched]:SMODE:LCOMmand	ENABLE DISable BER	with query	6.212
CONFigure:NETWork[:CSWitched]:SMODE:LOCupdate	ALWays AUTO	with query	6.210
CONFigure:NETWork[:CSWitched]:SMODE:PCHange	FAST SLOW	with query	6.210
CONFigure:NETWork[:CSWitched]:SMODE:SCHannel	SDCCCh FACCh NONE	with query	6.210
CONFigure:NETWork[:CSWitched]:SMODE:STIME	0 to 600	with query	6.212
PROCedure:NETWork[:CSWitched]:SMODE:STIME	0 to 600	with query	6.212
CONFigure:NETWork[:CSWitched]:SMODE:TRAFfic	FRV1 FRV2 HRV1 FD24 FD48 FD96 FD14 HD24 HD48 C1TM ... C4TM MC1TM ... MC4TM AMRH AMRF	with query	6.211
CONFigure:NETWork[:CSWitched]:SOFFset	-7 to 7	with query	6.207
CONFigure:NETWork[:CSWitched]:TIMEout:MTC	0 s to 60 s OFF	with query	6.217
CONFigure:NETWork[:CSWitched]:TIMEout:RLINK:TESTset	4 to 64 OFF	with query	6.217
CONFigure:NETWork[:CSWitched]:TIMEout:RLINK[:MOBile]	4 to 64	with query	6.217
CONFigure:NETWork[:B52Mode]	SCOD MSUP	with query	6.207
NPOWER measurement			
INITiate:NPOWER	-	no query	3.40

Command, Signalling	Parameter	Remark	Page
ABORt:NPOWer	–	no query	3.40
STOP:NPOWer	–	no query	3.40
CONTInue:NPOWer	–	no query	3.40
CONFigure:NPOWer:CONTRol	1 to 1000 NONE,CONTInuous SINGleshot 1 ... 10000, SONerror NONE,STEP NONE	with query	3.41
CONFigure:NPOWer:CONTRol:REPetition	CONTInuous SINGleshot 1 ... 10000, SONerror NONE,STEP NONE	with query	3.42
CONFigure:NPOWer:CONTRol:STATistics	1 to 1000 NONE	with query	3.41
CONFigure:NPOWer:EREPorting	SRQ SOPC SRSQ OFF	with query	3.40
FETCh:NPOWer:STATus?	OFF RUN STOP ERR STEP RDY, 1 to 10000 NONE, 1 to 1000 NONE	query only	3.40
READ[:SCALar]:NPOWer?	–30 dBm to +30 dBm	query only	3.42
FETCh[:SCALar]:NPOWer?	–30 dBm to +30 dBm	query only	3.42
SAMPlE[:SCALar]:NPOWer?	–30 dBm to +30 dBm	query only	3.42
Options			
SYSTem:OPTions:INFO:CURRent?		query only	6.34
Power vs. time, access burst			
INITiate:POWer:ABURst[:GMSK]	–	no query	6.148
ABORt:POWer:ABURst[:GMSK]	–	no query	6.148
STOP:POWer:ABURst[:GMSK]	–	no query	6.148
CONTInue:POWer:ABURst[:GMSK]	–	no query	6.148
CONFigure:SUBarrays:POWer:ABURst[:GMSK]	ALL ARITHmetical MINimum MAXimum,<Start>,<Samples> {,<Start>,<Samples>}	with query	6.150
CALCulate:ARRay:POWer:ABURst[:GMSK]:AREA:LIMit:MATChing ?	<Matching>	query only	6.153
CONFigure:POWer:ABURst[:GMSK]:EREPorting	SRQ SOPC SRSQ OFF	with query	6.148
CALCulate:POWer:ABURst[:GMSK]:LIMit:MATChing?	AvgBurstPowerCurr, PeakBurstPowerCurr, BurstMatching, AvgBurstPowerAvg	query only	6.152
CALCulate:ARRay:POWer:ABURst[:GMSK]:LIMit:MATChing?	<Matching>	query only	6.153
FETCh:POWer:ABURst[:GMSK]:STATus?	OFF RUN STOP ERR STEP RDY, 1 to 10000 NONE , 1 to 1000 NONE	query only	6.149
CONFigure:POWer:ABURst[:GMSK]:TOFFset	–4.00 to +4.00	with query	6.149
READ[:SCALar]:POWer:ABURst[:GMSK]?	<Result>	query only	6.151
FETCh[:SCALar]:POWer:ABURst[:GMSK]?	<Result>	query only	6.151
SAMPlE[:SCALar]:POWer:ABURst[:GMSK]?	<Result>	query only	6.151
READ:ARRay:POWer:ABURst[:GMSK]?	–100.0 to +20.0	query only	6.152
FETCh:ARRay:POWer:ABURst[:GMSK]?	–100.0 to +20.0	query only	6.152
SAMPlE:ARRay:POWer:ABURst[:GMSK]?	–100.0 to +20.0	query only	6.152
READ:SUBarrays:POWer:ABURst[:GMSK]?	–100.0 to +20.0	query only	6.153
FETCh:SUBarrays:POWer:ABURst[:GMSK]?	–100.0 to +20.0	query only	6.153
SAMPlE:SUBarrays:POWer:ABURst[:GMSK]?	–100.0 to +20.0	query only	6.153
POWer:FRAMe measurement			

Command, Signalling	Parameter	Remark	Page
INITiate:POWer:FRAMe	–	no query	3.52
ABORt:POWer:FRAMe	–	no query	3.52
STOP:POWer:FRAMe	–	no query	3.52
CONTInue:POWer:FRAMe	–	no query	3.52
CONFIgure:SUBarrays:POWer:FRAMe	ALL ARITHmetical MINimum MAXimum IVAL,<Start>,<Samples>{,<Start>,<Samples>}	with query	3.54
CONFIgure:POWer:FRAMe:CONTRol:DEFault	ON OFF	with query	3.53
CONFIgure:POWer:FRAMe:CONTRol:REPetition	CONTInuous SINGleshot 1 to 10000, SONerror NONE, STEP NONE	with query	3.53
CONFIgure:POWer:FRAMe:EREPorting	SRQ SOPC SRSQ OFF	with query	3.52
CONFIgure:POWer:FRAMe:FCOunt	1 to 128	with query	3.52
READ[:SCALar]:POWer:FRAMe:FPOWer<nr>?	<Result>	query only	3.55
FETCh[:SCALar]:POWer:FRAMe:FPOWer<nr>?	<Result>	query only	3.55
SAMPlE[:SCALar]:POWer:FRAMe:FPOWer<nr>?	<Result>	query only	3.55
FETCh:POWer:FRAMe:STATus?	OFF RUN STOP ERR STEP RDY, 1 to 10000 NONE	query only	3.52
READ:ARRAy:POWer:FRAMe?	<Result>	query only	3.55
FETCh:ARRAy:POWer:FRAMe?	<Result>	query only	3.55
SAMPlE:ARRAy:POWer:FRAMe?	<Result>	query only	3.55
READ:SUBarrays:POWer:FRAMe?	<Result>	query only	3.55
FETCh:SUBarrays:POWer:FRAMe?	<Result>	query only	3.55
SAMPlE:SUBarrays:POWer:FRAMe?	<Result>	query only	3.55
POWer:MSLot measurement			
INITiate:POWer:MSLot	–	no query	3.56
ABORt:POWer:MSLot	–	no query	3.56
STOP:POWer:MSLot	–	no query	3.56
CONTInue:POWer:MSLot	–	no query	3.56
CONFIgure:SUBarrays:POWer:MSLot	ALL ARITHmetical MINimum MAXimum,<Start>,<Samples>{,<Start>,<Samples>}	with query	3.60
[SENSe:]ARRAy:POWer:MSLot:AREA:LIMit:INFO:STIME?	<Start_Time>	query only	3.65
[SENSe:]ARRAy:POWer:MSLot:AREA:LIMit:LOWer:INFO?	<Result>	query only	3.64
[SENSe:]ARRAy:POWer:MSLot:AREA:LIMit:LOWer:LEVel?	<Result>	query only	3.64
[SENSe:]ARRAy:POWer:MSLot:AREA:LIMit:LOWer:TIME?	<Result>	query only	3.64
CALCulate:ARRAy:POWer:MSLot:AREA:LIMit:MATChing:MINimum?	<Matching>	query only	3.63
CALCulate:ARRAy:POWer:MSLot:AREA:LIMit:MATChing[:CURRent]?	<Matching>	query only	3.63
[SENSe:]ARRAy:POWer:MSLot:AREA:LIMit:UPPer:INFO?	<Result>	query only	3.64
[SENSe:]ARRAy:POWer:MSLot:AREA:LIMit:UPPer:LEVel?	<Result>	query only	3.64
[SENSe:]ARRAy:POWer:MSLot:AREA:LIMit:UPPer:TIME?	<Result>	query only	3.64
READ:ARRAy:POWer:MSLot:AVERAge?	–100.0 dB to +20.0 dB	query only	3.62
FETCh:ARRAy:POWer:MSLot:AVERAge?	–100.0 dB to +20.0 dB	query only	3.62
SAMPlE:ARRAy:POWer:MSLot:AVERAge?	–100.0 dB to +20.0 dB	query only	3.62
READ:SUBarrays:POWer:MSLot:AVERAge?	–100.0 dB to +20.0 dB	query only	3.63

Command, Signalling	Parameter	Remark	Page
FETCh:SUBarrays:POWer:MSLot:AVERAge?	-100.0 dB to +20.0 dB	query only	3.63
SAMPlE:SUBarrays:POWer:MSLot:AVERAge?	-100.0 dB to +20.0 dB	query only	3.63
CONFigure:POWer:MSLot:CONTRol	SCALar ARRay, 1 to 1000 NONE	with query	3.57
CONFigure:POWer:MSLot:CONTRol:DEFault	ON OFF	with query	3.58
DISPlay:POWer:MSLot:CONTRol:GRID	ON OFF	with query	3.57
CONFigure:POWer:MSLot:CONTRol:REPetition	CONTInuous SINGleshot 1 to 10000, SONerror NONE,STEP NONE	with query	3.57
CONFigure:POWer:MSLot:EREPorting	SRQ SOPC SRSQ OFF	with query	3.56
CONFigure:POWer:MSLot:FILTer	G500 B600	with query	3.59
CONFigure:POWer:MSLot:LIMit:LINE:GLEVel	0.00 dB to +10.00 dB	with query	3.59
CALCulate:ARRay:POWer:MSLot:LIMit:MATChing:MINimum?	<Matching>	query only	3.63
CALCulate:POWer:MSLot:LIMit:MATChing?	AvgBurstPowerCurr, PeakBurstPowerCurr, BurstMatching, AvgBurstPowerAvg	query only	3.61
CALCulate:ARRay:POWer:MSLot:LIMit:MATChing[:CURRent]?	<Matching>	query only	3.63
READ:ARRay:POWer:MSLot:MAXimum?	-100.0 dB to +20.0 dB	query only	3.62
FETCh:ARRay:POWer:MSLot:MAXimum?	-100.0 dB to +20.0 dB	query only	3.62
SAMPlE:ARRay:POWer:MSLot:MAXimum?	-100.0 dB to +20.0 dB	query only	3.62
READ:SUBarrays:POWer:MSLot:MAXimum?	-100.0 dB to +20.0 dB	query only	3.63
FETCh:SUBarrays:POWer:MSLot:MAXimum?	-100.0 dB to +20.0 dB	query only	3.63
SAMPlE:SUBarrays:POWer:MSLot:MAXimum?	-100.0 dB to +20.0 dB	query only	3.63
READ:ARRay:POWer:MSLot:MINimum?	-100.0 dB to +20.0 dB	query only	3.62
FETCh:ARRay:POWer:MSLot:MINimum?	-100.0 dB to +20.0 dB	query only	3.62
SAMPlE:ARRay:POWer:MSLot:MINimum?	-100.0 dB to +20.0 dB	query only	3.62
READ:SUBarrays:POWer:MSLot:MINimum?	-100.0 dB to +20.0 dB	query only	3.63
FETCh:SUBarrays:POWer:MSLot:MINimum?	-100.0 dB to +20.0 dB	query only	3.63
SAMPlE:SUBarrays:POWer:MSLot:MINimum?	-100.0 dB to +20.0 dB	query only	3.63
CONFigure:POWer:MSLot:MVlew	<Mod_-1>, <Mod_0>, <Mod_1>, <Mod_2>	with query	3.58
CONFigure:POWer:MSLot:SCOut	1 to 4	with query	3.58
FETCh:POWer:MSLot:STATus?	OFF RUN STOP ERR STEP RDY, 1 to 10000 NONE, 1 to 1000 NONE	query only	3.56
CONFigure:POWer:MSLot:TOFFset	-4.00 to +4.00	with query	3.58
READ[:SCALar]:POWer:MSLot?	<Result>	query only	3.61
FETCh[:SCALar]:POWer:MSLot?	<Result>	query only	3.61
SAMPlE[:SCALar]:POWer:MSLot?	<Result>	query only	3.61
READ:ARRay:POWer:MSLot[:CURRent]?	-100.0 dB to +20.0 dB	query only	3.62
FETCh:ARRay:POWer:MSLot[:CURRent]?	-100.0 dB to +20.0 dB	query only	3.62
SAMPlE:ARRay:POWer:MSLot[:CURRent]?	-100.0 dB to +20.0 dB	query only	3.62
READ:SUBarrays:POWer:MSLot[:CURRent]?	-100.0 dB to +20.0 dB	query only	3.63
FETCh:SUBarrays:POWer:MSLot[:CURRent]?	-100.0 dB to +20.0 dB	query only	3.63
SAMPlE:SUBarrays:POWer:MSLot[:CURRent]?	-100.0 dB to +20.0 dB	query only	3.63
Power vs PCL			
INITiate:POWer:PCL	-	no query	6.154
ABORt:POWer:PCL	-	no query	6.154

Command, Signalling	Parameter	Remark	Page
STOP:POWer:PCL	–	no query	6.154
CONTInue:POWer:PCL	–	no query	6.154
CONFigure:POWer:PCL:CCOunt	C3 C7	with query	6.155
CONFigure:POWer:PCL:CHANnel	<Channel1>, ... ,<Channeln>	with query	6.155
CONFigure:POWer:PCL:CONTrol:REPetition	CONTInuous SINGleshot 1 to 10000, SONerror NONE, STEP NONE	with query	6.155
CONFigure:POWer:PCL:EREPorting	SRQ SOPC SRSQ OFF	with query	6.154
READ[:SCALar]:POWer:PCL:PCLPower<PCL>?	<Result>	query only	6.157
FETCh[:SCALar]:POWer:PCL:PCLPower<PCL>?	<Result>	query only	6.157
SAMPlE[:SCALar]:POWer:PCL:PCLPower<PCL>?	<Result>	query only	6.157
FETCh:POWer:PCL:STATus?	OFF RUN STOP ERR STEP RDY, 1 to 10000 NONE	query only	6.154
READ[:SCALar]:POWer:PCL?	<Result>	query only	6.156
FETCh[:SCALar]:POWer:PCL?	<Result>	query only	6.156
SAMPlE[:SCALar]:POWer:PCL?	<Result>	query only	6.156
CALCulate:POWer:PCL[:CURRent]:LIMit:MATChing?	OK NMAU NMAL INV	query only	6.157
POWer:SLOT measurement			
INITiate:POWer:SLOT	–	no query	3.43
ABORt:POWer:SLOT	–	no query	3.43
STOP:POWer:SLOT	–	no query	3.43
CONTInue:POWer:SLOT	–	no query	3.43
CONFigure:SUBarrays:POWer:SLOT	ALL ARITHmetical MINimum MAXimum IVAL,<Start>,<Samples>{,<Start>,<Samples>}	with query	3.45
CONFigure:POWer:SLOT:CONTrol:DEFault	ON OFF	with query	3.44
CONFigure:POWer:SLOT:CONTrol:REPetition	CONTInuous SINGleshot 1 to 10000, SONerror NONE, STEP NONE	with query	3.44
CONFigure:POWer:SLOT:EREPorting	SRQ SOPC SRSQ OFF	with query	3.43
READ[:SCALar]:POWer:SLOT:SPOWer<nr>?	<Result>	query only	3.46
FETCh[:SCALar]:POWer:SLOT:SPOWer<nr>?	<Result>	query only	3.46
SAMPlE[:SCALar]:POWer:SLOT:SPOWer<nr>?	<Result>	query only	3.46
FETCh:POWer:SLOT:STATus?	OFF RUN STOP ERR STEP RDY, 1 to 10000 NONE	query only	3.43
READ:ARRay:POWer:SLOT?	<Result>	query only	3.46
FETCh:ARRay:POWer:SLOT?	<Result>	query only	3.46
SAMPlE:ARRay:POWer:SLOT?	<Result>	query only	3.46
READ:SUBarrays:POWer:SLOT?	<Result>	query only	3.46
FETCh:SUBarrays:POWer:SLOT?	<Result>	query only	3.46
SAMPlE:SUBarrays:POWer:SLOT?	<Result>	query only	3.46
POWer:X SLOT measurement			
INITiate:POWer:XSlot	–	no query	3.47
ABORt:POWer:XSlot	–	no query	3.47
STOP:POWer:XSlot	–	no query	3.47
CONTInue:POWer:XSlot	–	no query	3.47
CONFigure:SUBarrays:POWer:XSlot	ALL ARITHmetical	with query	3.50

Command, Signalling	Parameter	Remark	Page
	MINimum MAXimum IVAL,<Start>,<Samples>{,<Start>,<Samples>}		
CONFigure:POWer:XSLot:CONTRol:DEFault	ON OFF	with query	3.48
CONFigure:POWer:XSLot:CONTRol:REPetition	CONTInuous SINGleshot 1 to 10000, SONerror NONE, STEP NONE	with query	3.48
CONFigure:POWer:XSLot:EREPorting	SRQ SOPC SRSQ OFF	with query	3.47
CONFigure:POWer:XSLot:SCOUnt	S128 S256 S384 S512[,1 to 512]	with query	3.49
READ[:SCALar]:POWer:XSLot:SPOWer<nr>?	<Result>	query only	3.51
FETCh[:SCALar]:POWer:XSLot:SPOWer<nr>?	<Result>	query only	3.51
SAMPlE[:SCALar]:POWer:XSLot:SPOWer<nr>?	<Result>	query only	3.51
FETCh:POWer:XSLot:STATus?	OFF RUN STOP ERR STEP RDY, 1 to 10000 NONE	query only	3.47
READ:ARRay:POWer:XSLot?	<Result>	query only	3.51
FETCh:ARRay:POWer:XSLot?	<Result>	query only	3.51
SAMPlE:ARRay:POWer:XSLot?	<Result>	query only	3.51
READ:SUBarrays:POWer:XSLot?	<Result>	query only	3.51
FETCh:SUBarrays:POWer:XSLot?	<Result>	query only	3.51
SAMPlE:SUBarrays:POWer:XSLot?	<Result>	query only	3.51
Power vs. time (normal burst, 8PSK modulation)			
INITiate:POWer[:NORMal]:EPSK	–	no query	6.13
ABORT:POWer[:NORMal]:EPSK	–	no query	6.13
STOP:POWer[:NORMal]:EPSK	–	no query	6.13
CONTInue:POWer[:NORMal]:EPSK	–	no query	6.13
CONFigure:SUBarrays:POWer[:NORMal]:EPSK	ALL ARITHmetical MINimum MAXimum IVAL,<Start>,<Samples>{,<Start>,<Samples>}	with query	6.23
CALCulate:ARRay:POWer[:NORMal]:EPSK:AREA:LIMit:MATChing:AVERAge?	<Matching>	query only	6.27
CALCulate:ARRay:POWer[:NORMal]:EPSK:AREA:LIMit:MATChing:MAXimum?	<Matching>	query only	6.27
CALCulate:ARRay:POWer[:NORMal]:EPSK:AREA:LIMit:MATChing:MINimum?	<Matching>	query only	6.27
CALCulate:ARRay:POWer[:NORMal]:EPSK:AREA:LIMit:MATChing[:CURRent]?	<Matching>	query only	6.27
READ:ARRay:POWer[:NORMal]:EPSK:AVERAge?	–100.0 dB to +20.0 dB	query only	6.25
FETCh:ARRay:POWer[:NORMal]:EPSK:AVERAge?	–100.0 dB to +20.0 dB	query only	6.25
SAMPlE:ARRay:POWer[:NORMal]:EPSK:AVERAge?	–100.0 dB to +20.0 dB	query only	6.25
READ:SUBarrays:POWer[:NORMal]:EPSK:AVERAge?	–100.0 dB to +20.0 dB	query only	6.26
FETCh:SUBarrays:POWer[:NORMal]:EPSK:AVERAge?	–100.0 dB to +20.0 dB	query only	6.26
SAMPlE:SUBarrays:POWer[:NORMal]:EPSK:AVERAge?	–100.0 dB to +20.0 dB	query only	6.26
CONFigure:POWer[:NORMal]:EPSK:CONTRol	SCALar ARRay, 1 to 1000 NONE	with query	6.15
CONFigure:POWer[:NORMal]:EPSK:CONTRol:DEFault	ON OFF	with query	6.16
DISPlay:POWer[:NORMal]:EPSK:CONTRol:GRID	ON OFF	with query	6.15
CONFigure:POWer[:NORMal]:EPSK:CONTRol:REPetition	CONTInuous SINGleshot 1 to 10000, SONerror NONE,STEP NONE	with query	6.15

Command, Signalling	Parameter	Remark	Page
CONFigure:POWer[:NORMal]:EPsk:CONTRol:RPMoDe	CURRent AVERAge DCOMpens	with query	6.16
CONFigure:POWer[:NORMal]:EPsk:EREPorting	SRQ SOPC SRSQ OFF	with query	6.13
CONFigure:POWer[:NORMal]:EPsk:FILTer	G500 B600	with query	6.14
CONFigure:POWer[:NORMal]:EPsk:LIMit:LINE:DEFault	ON OFF	with query	6.21
CONFigure:POWer[:NORMal]:EPsk:LIMit:LINE:LOWer:ALL:DYNamic:ENABle	ON OFF	with query	6.21
CONFigure:POWer[:NORMal]:EPsk:LIMit:LINE:LOWer<AreaNr>:ALL:DYNamic:ENABle	ON OFF	with query	6.20
CONFigure:POWer[:NORMal]:EPsk:LIMit:LINE:LOWer<nr>:DYNamic<RgNr>	<fromTPCL>, <toTPCL>, <Correction>, ON OFF	with query	6.20
CONFigure:POWer[:NORMal]:EPsk:LIMit:LINE:LOWer<nr>[:STATic]	<StartTime>, <EndTime>, <StartRelLevel>, <EndRelLevel>, <StartAbsLevel>, <EndAbsLevel>, <Visibility>	with query	6.18
CONFigure:POWer[:NORMal]:EPsk:LIMit:LINE:LOWer<nr>[:STATic]:ENABle	ON OFF	with query	6.18
CONFigure:POWer[:NORMal]:EPsk:LIMit:LINE:UPPer:ALL:DYNamic:ENABle	ON OFF	with query	6.20
CONFigure:POWer[:NORMal]:EPsk:LIMit:LINE:UPPer<nr>:ALL:DYNamic:ENABle	ON OFF	with query	6.19
CONFigure:POWer[:NORMal]:EPsk:LIMit:LINE:UPPer<nr>:DYNamic<nr>	<fromTPCL>, <toTPCL>, <Correction>, ON OFF	with query	6.19
CONFigure:POWer[:NORMal]:EPsk:LIMit:LINE:UPPer<nr>:DYNamic<nr>:ENABle	ON OFF	with query	6.19
CONFigure:POWer[:NORMal]:EPsk:LIMit:LINE:UPPer<nr>[:STATic]	<StartTime>, <EndTime>, <StartRelLevel>, <EndRelLevel>, <StartAbsLevel>, <EndAbsLevel>, <Visibility>	with query	6.16
CONFigure:POWer[:NORMal]:EPsk:LIMit:LINE:UPPer<nr>[:STATic]:ENABle	ON OFF	with query	6.16
CALCulate:ARRay:POWer[:NORMal]:EPsk:LIMit:MATChing:AVERAge?	MATC NMat INV NTSC OUT	query only	6.27
CALCulate:ARRay:POWer[:NORMal]:EPsk:LIMit:MATChing:MAXimum?	MATC NMat INV NTSC OUT	query only	6.27
CALCulate:ARRay:POWer[:NORMal]:EPsk:LIMit:MATChing:MINimum?	MATC NMat INV NTSC OUT	query only	6.27
CALCulate[:SCALar]:POWer[:NORMal]:EPsk:LIMit:MATChing?	AvgBurstPowerCurr, PeakBurstPowerCurr, BurstMatching, AvgBurstPowerAvg	query only	6.24
CALCulate:ARRay:POWer[:NORMal]:EPsk:LIMit:MATChing[:CURRent]?	MATC NMat INV NTSC OUT	query only	6.27
READ:ARRay:POWer[:NORMal]:EPsk:MAXimum?	-100.0 dB to +20.0 dB	query only	6.25
FETCh:ARRay:POWer[:NORMal]:EPsk:MAXimum?	-100.0 dB to +20.0 dB	query only	6.25
SAMPlE:ARRay:POWer[:NORMal]:EPsk:MAXimum?	-100.0 dB to +20.0 dB	query only	6.25
READ:SUBarrays:POWer[:NORMal]:EPsk:MAXimum?	-100.0 dB to +20.0 dB	query only	6.26
FETCh:SUBarrays:POWer[:NORMal]:EPsk:MAXimum?	-100.0 dB to +20.0 dB	query only	6.26
SAMPlE:SUBarrays:POWer[:NORMal]:EPsk:MAXimum?	-100.0 dB to +20.0 dB	query only	6.26
READ:ARRay:POWer[:NORMal]:EPsk:MINimum?	-100.0 dB to +20.0 dB	query only	6.25
FETCh:ARRay:POWer[:NORMal]:EPsk:MINimum?	-100.0 dB to +20.0 dB	query only	6.25
SAMPlE:ARRay:POWer[:NORMal]:EPsk:MINimum?	-100.0 dB to +20.0 dB	query only	6.25

Command, Signalling	Parameter	Remark	Page
READ:SUBarrays:POWer[:NORMal]:EPsK:MINimum?	-100.0 dB to +20.0 dB	query only	6.26
FETCh:SUBarrays:POWer[:NORMal]:EPsK:MINimum?	-100.0 dB to +20.0 dB	query only	6.26
SAMPlE:SUBarrays:POWer[:NORMal]:EPsK:MINimum?	-100.0 dB to +20.0 dB	query only	6.26
FETCh:POWer[:NORMal]:EPsK:STATus?	OFF RUN STOP ERR STEP RDY, 1 to 10000 NONE, 1 to 1000 NONE	query only	6.14
CONFIgure:POWer[:NORMal]:EPsK:TOFFset	-4.00 to +4.00	with query	6.14
READ[:SCALar]:POWer[:NORMal]:EPsK?	<Result>	query only	6.23
FETCh[:SCALar]:POWer[:NORMal]:EPsK?	<Result>	query only	6.23
SAMPlE[:SCALar]:POWer[:NORMal]:EPsK?	<Result>	query only	6.23
READ:ARRay:POWer[:NORMal]:EPsK[:CURRent]?	-100.0 dB to +20.0 dB	query only	6.25
FETCh:ARRay:POWer[:NORMal]:EPsK[:CURRent]?	-100.0 dB to +20.0 dB	query only	6.25
SAMPlE:ARRay:POWer[:NORMal]:EPsK[:CURRent]?	-100.0 dB to +20.0 dB	query only	6.25
READ:SUBarrays:POWer[:NORMal]:EPsK[:CURRent]?	-100.0 dB to +20.0 dB	query only	6.26
FETCh:SUBarrays:POWer[:NORMal]:EPsK[:CURRent]?	-100.0 dB to +20.0 dB	query only	6.26
SAMPlE:SUBarrays:POWer[:NORMal]:EPsK[:CURRent]?	-100.0 dB to +20.0 dB	query only	6.26
Power vs. time (normal burst, GMSK modulation)			
INITiate:POWer[:NORMal][:GMSK]	-	no query	6.13
ABORt:POWer[:NORMal][:GMSK]	-	no query	6.13
STOP:POWer[:NORMal][:GMSK]	-	no query	6.13
CONTI nue:POWer[:NORMal][:GMSK]	-	no query	6.13
CONFIgure:SUBarrays:POWer[:NORMal][:GMSK]	ALL ARITHmetical MINimum MAXimum IVAL,<Start>,<Samples>{,<Start>,<Samples>}	with query	6.23
CALCulate:ARRay:POWer[:NORMal][:GMSK]:AREA: LIMit:MATChing:AVERAge?	<Matching>	query only	6.27
CALCulate:ARRay:POWer[:NORMal][:GMSK]:AREA: LIMit:MATChing:MAXimum?	<Matching>	query only	6.27
CALCulate:ARRay:POWer[:NORMal][:GMSK]:AREA: LIMit:MATChing:MINimum?	<Matching>	query only	6.27
CALCulate:ARRay:POWer[:NORMal][:GMSK]:AREA: LIMit:MATChing[:CURRent]?	<Matching>	query only	6.27
READ:ARRay:POWer[:NORMal][:GMSK]:AVERAge?	-100.0 dB to +20.0 dB	query only	6.25
FETCh:ARRay:POWer[:NORMal][:GMSK]:AVERAge?	-100.0 dB to +20.0 dB	query only	6.25
SAMPlE:ARRay:POWer[:NORMal][:GMSK]:AVERAge?	-100.0 dB to +20.0 dB	query only	6.25
READ:SUBarrays:POWer[:NORMal][:GMSK]:AVERAge?	-100.0 dB to +20.0 dB	query only	6.26
FETCh:SUBarrays:POWer[:NORMal][:GMSK]:AVERAge?	-100.0 dB to +20.0 dB	query only	6.26
SAMPlE:SUBarrays:POWer[:NORMal][:GMSK]:AVERAge?	-100.0 dB to +20.0 dB	query only	6.26
CONFIgure:POWer[:NORMal][:GMSK]:CONTRol	SCALar ARRay, 1 to 1000 NONE	with query	6.15
CONFIgure:POWer[:NORMal][:GMSK]:CONTRol:DEFault	ON OFF	with query	6.16
DISPlay:POWer[:NORMal][:GMSK]:CONTRol:GRID	ON OFF	with query	6.15
CONFIgure:POWer[:NORMal][:GMSK]:CONTRol:REPetition	CONTInuous SINGleshot 1 to 10000, SONerror NONE,STEP NONE	with query	6.15
CONFIgure:POWer[:NORMal][:GMSK]:EREPorting	SRQ SOPC SRSQ OFF	with query	6.13
CONFIgure:POWer[:NORMal][:GMSK]:FILTer	G500 B600	with query	6.14
CONFIgure:POWer[:NORMal][:GMSK]:LIMit: ABPower<nr>	ON OFF	with query	6.22

Command, Signalling	Parameter	Remark	Page
CONFigure:POWer[:NORMal][:GMSK]:LIMit: ABPower<nr>:ENABle	ON OFF	with query	6.22
CONFigure:POWer[:NORMal][:GMSK]:LIMit:LINE:DEFault	ON OFF	with query	6.21
CONFigure:POWer[:NORMal][:GMSK]:LIMit:LINE: LOWer:ALL:DYNamic:ENABle	ON OFF	with query	6.21
CONFigure:POWer[:NORMal][:GMSK]:LIMit:LINE: LOWer<AreaNr>:ALL:DYNamic:ENABle	ON OFF	with query	6.20
CONFigure:POWer[:NORMal][:GMSK]:LIMit:LINE: LOWer<nr>:DYNamic<RgNr>	<fromTPCL>, <toTPCL>, <Correction>, ON OFF	with query	6.20
CONFigure:POWer[:NORMal][:GMSK]:LIMit:LINE: LOWer<nr>[:STATic]	<StartTime>, <EndTime>, <StartRelLevel>, <EndRelLevel>, <StartAbsLevel>, <EndAbsLevel>, <Visibility>	with query	6.18
CONFigure:POWer[:NORMal][:GMSK]:LIMit:LINE: LOWer<nr>[:STATic]:ENABle	ON OFF	with query	6.18
CONFigure:POWer[:NORMal][:GMSK]:LIMit:LINE: UPPer:ALL:DYNamic:ENABle	ON OFF	with query	6.20
CONFigure:POWer[:NORMal][:GMSK]:LIMit:LINE: UPPer<nr>:ALL:DYNamic:ENABle	ON OFF	with query	6.19
CONFigure:POWer[:NORMal][:GMSK]:LIMit:LINE: UPPer<nr>:DYNamic<nr>	<fromTPCL>, <toTPCL>, <Correction>, ON OFF	with query	6.19
CONFigure:POWer[:NORMal][:GMSK]:LIMit:LINE: UPPer<nr>:DYNamic<nr>:ENABle	ON OFF	with query	6.19
CONFigure:POWer[:NORMal][:GMSK]:LIMit:LINE: UPPer<nr>[:STATic]	<StartTime>, <EndTime>, <StartRelLevel>, <EndRelLevel>, <StartAbsLevel>, <EndAbsLevel>, <Visibility>	with query	6.16
CONFigure:POWer[:NORMal][:GMSK]:LIMit:LINE: UPPer<nr>[:STATic]:ENABle	ON OFF	with query	6.16
CALCulate:ARRay:POWer[:NORMal][:GMSK]:LIMit: MATChing:AVERAge?	MATC NMAT INV NTSC OUT	query only	6.27
CALCulate:ARRay:POWer[:NORMal][:GMSK]:LIMit: MATChing:MAXimum?	MATC NMAT INV NTSC OUT	query only	6.27
CALCulate:ARRay:POWer[:NORMal][:GMSK]:LIMit: MATChing:MINimum?	MATC NMAT INV NTSC OUT	query only	6.27
CALCulate[:SCALar]:POWer[:NORMal][:GMSK]:LIMit: MATChing?	AvgBurstPowerCurr, PeakBurstPowerCurr, BurstMatching, AvgBurstPowerAvg	query only	6.24
CALCulate:ARRay:POWer[:NORMal][:GMSK]:LIMit: MATChing[:CURRent]?	MATC NMAT INV NTSC OUT	query only	6.27
READ:ARRay:POWer[:NORMal][:GMSK]:MAXimum?	-100.0 dB to +20.0 dB	query only	6.25
FETCh:ARRay:POWer[:NORMal][:GMSK]:MAXimum?	-100.0 dB to +20.0 dB	query only	6.25
SAMPlE:ARRay:POWer[:NORMal][:GMSK]:MAXimum?	-100.0 dB to +20.0 dB	query only	6.25
READ:SUBarrays:POWer[:NORMal][:GMSK]:MAXimum?	-100.0 dB to +20.0 dB	query only	6.26
FETCh:SUBarrays:POWer[:NORMal][:GMSK]:MAXimum?	-100.0 dB to +20.0 dB	query only	6.26
SAMPlE:SUBarrays:POWer[:NORMal][:GMSK]:MAXimum?	-100.0 dB dB to +20.0 dB	query only	6.26
READ:ARRay:POWer[:NORMal][:GMSK]:MINimum?	-100.0 dB to +20.0 dB	query only	6.25
FETCh:ARRay:POWer[:NORMal][:GMSK]:MINimum?	-100.0 dB to +20.0 dB	query only	6.25
SAMPlE:ARRay:POWer[:NORMal][:GMSK]:MINimum?	-100.0 dB to +20.0 dB	query only	6.25
READ:SUBarrays:POWer[:NORMal][:GMSK]:MINimum?	-100.0 dB to +20.0 dB	query only	6.26
FETCh:SUBarrays:POWer[:NORMal][:GMSK]:MINimum?	-100.0 dB to +20.0 dB	query only	6.26

Command, Signalling	Parameter	Remark	Page
SAMPlE:SUBarrays:POWer[:NORMal][:GMSK]:MINimum?	-100.0 dB to +20.0 dB	query only	6.26
INITiate:POWer[:NORMal][:GMSK]:MPR	-	no query	6.28
ABORt:POWer[:NORMal][:GMSK]:MPR	-	no query	6.28
STOP:POWer[:NORMal][:GMSK]:MPR	-	no query	6.28
CONTInue:POWer[:NORMal][:GMSK]:MPR	-	no query	6.28
CONFigure:SUBarrays:POWer[:NORMal][:GMSK]:MPR	ALL ARITHmetical MINimum MAXimum IVAL,<Start>,<Samples>{,<Start>,<Samples>}	with query	6.30
READ:ARRay:POWer[:NORMal][:GMSK]:MPR:AVERAge?	-100.0 dB to +20.0 dB	query only	6.31
FETCh:ARRay:POWer[:NORMal][:GMSK]:MPR:AVERAge?	-100.0 dB to +20.0 dB	query only	6.31
SAMPlE:ARRay:POWer[:NORMal][:GMSK]:MPR:AVERAge?	-100.0 dB to +20.0 dB	query only	6.31
READ:SUBarrays:POWer[:NORMal][:GMSK]:MPR:AVERAge?	-100.0 dB to +20.0 dB	query only	6.32
FETCh:SUBarrays:POWer[:NORMal][:GMSK]:MPR:AVERAge?	-100.0 dB to +20.0 dB	query only	6.32
SAMPlE:SUBarrays:POWer[:NORMal][:GMSK]:MPR:AVERAge?	-100.0 dB to +20.0 dB	query only	6.32
CONFigure:POWer[:NORMal][:GMSK]:MPR:CONTrol			
CONFigure:POWer[:NORMal][:GMSK]:MPR:CONTrol:REPetition	CONTInuous SINGleshot 1 to 10000, SONerror NONE,STEP NONE	with query	6.29
CONFigure:POWer[:NORMal][:GMSK]:MPR:EREPorting	SRQ SOPC SRSQ OFF	with query	6.28
CALCulate[:SCALar]:POWer[:NORMal][:GMSK]:MPR:LIMit:MATChing?	<Result>	query only	6.33
READ:ARRay:POWer[:NORMal][:GMSK]:MPR:MAXimum?	-100.0 dB to +20.0 dB	query only	6.31
FETCh:ARRay:POWer[:NORMal][:GMSK]:MPR:MAXimum?	-100.0 dB to +20.0 dB	query only	6.31
SAMPlE:ARRay:POWer[:NORMal][:GMSK]:MPR:MAXimum?	-100.0 dB to +20.0 dB	query only	6.31
READ:SUBarrays:POWer[:NORMal][:GMSK]:MPR:MAXimum?	-100.0 dB to +20.0 dB	query only	6.32
FETCh:SUBarrays:POWer[:NORMal][:GMSK]:MPR:MAXimum?	-100.0 dB to +20.0 dB	query only	6.32
SAMPlE:SUBarrays:POWer[:NORMal][:GMSK]:MPR:MAXimum?	-100.0 dB to +20.0 dB	query only	6.32
READ:ARRay:POWer[:NORMal][:GMSK]:MPR:MINimum?	-100.0 dB to +20.0 dB	query only	6.31
FETCh:ARRay:POWer[:NORMal][:GMSK]:MPR:MINimum?	-100.0 dB to +20.0 dB	query only	6.31
SAMPlE:ARRay:POWer[:NORMal][:GMSK]:MPR:MINimum?	-100.0 dB to +20.0 dB	query only	6.31
READ:SUBarrays:POWer[:NORMal][:GMSK]:MPR:MINimum?	-100.0 dB to +20.0 dB	query only	6.32
FETCh:SUBarrays:POWer[:NORMal][:GMSK]:MPR:MINimum?	-100.0 dB to +20.0 dB	query only	6.32
SAMPlE:SUBarrays:POWer[:NORMal][:GMSK]:MPR:MINimum?	-100.0 dB to +20.0 dB	query only	6.32
FETCh:POWer[:NORMal][:GMSK]:MPR:STATus?	OFF RUN STOP ERR STEP RDY, 1 to 10000 NONE, 1 to 1000 NONE	query only	6.28
READ[:SCALar]:POWer[:NORMal][:GMSK]:MPR?	<Result>	query only	6.31
FETCh[:SCALar]:POWer[:NORMal][:GMSK]:MPR?	<Result>	query only	6.31
SAMPlE[:SCALar]:POWer[:NORMal][:GMSK]:MPR?	<Result>	query only	6.31
READ:ARRay:POWer[:NORMal][:GMSK]:MPR[:CURRent]?	-100.0 dB to +20.0 dB	query only	6.31
FETCh:ARRay:POWer[:NORMal][:GMSK]:MPR[:CURRent]?	-100.0 dB to +20.0 dB	query only	6.31
SAMPlE:ARRay:POWer[:NORMal][:GMSK]:MPR[:CURRent]?	-100.0 dB to +20.0 dB	query only	6.31
READ:SUBarrays:POWer[:NORMal][:GMSK]:MPR[:CURRent]?	-100.0 dB to +20.0 dB	query only	6.32
FETCh:SUBarrays:POWer[:NORMal][:GMSK]:MPR[:CURRent]?	-100.0 dB to +20.0 dB	query only	6.32
SAMPlE:SUBarrays:POWer[:NORMal][:GMSK]:MPR[:CURRent]?	-100.0 dB to +20.0 dB	query only	6.32
FETCh:POWer[:NORMal][:GMSK]:STATus?	OFF RUN STOP ERR	query only	6.14

Command, Signalling	Parameter	Remark	Page
	STEP RDY, 1 to 10000 NONE, 1 to 1000 NONE		
CONFigure:POWer[:NORMal][:GMSK]:TOFFset	-4.00 to +4.00	with query	6.14
READ[:SCALar]:POWer[:NORMal][:GMSK]?	<Result>	query only	6.23
FETCh[:SCALar]:POWer[:NORMa][:GMSK]?	<Result>	query only	6.23
SAMPle[:SCALar]:POWer[:NORMal][:GMSK]?	<Result>	query only	6.23
READ:ARRay:POWer[:NORMal][:GMSK][:CURRent]?	-100.0 dB to +20.0 dB	query only	6.25
FETCh:ARRay:POWer[:NORMal][:GMSK][:CURRent]?	-100.0 dB to +20.0 dB	query only	6.25
SAMPle:ARRay:POWer[:NORMal][:GMSK][:CURRent]?	-100.0 dB to +20.0 dB	query only	6.25
READ:SUBarrays:POWer[:NORMal][:GMSK][:CURRent]?	-100.0 dB to +20.0 dB	query only	6.26
FETCh:SUBarrays:POWer[:NORMal][:GMSK][:CURRent]?	-100.0 dB to +20.0 dB	query only	6.26
SAMPle:SUBarrays:POWer[:NORMal][:GMSK][:CURRent]?	-100.0 dB to +20.0 dB	query only	6.26
SAMPle:SUBarrays:POWer[:NORMal][:GMSK]:MPR[:CURRent]?	-100.0 dB to +20.0 dB	query only	6.30
Reset			
SYSTem:RESet:CURRent		no query	3.35
MS Receiver Reports			
[SENSe:]RREPorts:COUNT?	<Counts>	query only	6.221
[SENSe:]RREPorts:CVALue?	0 to 63 NAN	query only	6.221
[SENSe:]RREPorts:DTX?	ON OFF	query only	6.221
[SENSe:]RREPorts:GCBep?	0 to 7 NAN	query only	6.222
[SENSe:]RREPorts:GMBep?	0 to 31 NAN	query only	6.221
[SENSe:]RREPorts:NCELI?	<Channel>, 0 to 63 NAN	query only	6.221
[SENSe:]RREPorts:RPCL?	0 to 31	query only	6.220
[SENSe:]RREPorts:RXLevel?	0 to 63 NAN	query only	6.220
[SENSe:]RREPorts:RXQuality?	0 to 7 NAN	query only	6.220
[SENSe:]RREPorts:SVARiance?	0 to 7 NAN	query only	6.221
Receiver quality measurements, Continuous			
INITiate:RXQuality:BAverage	-	no query	6.175
ABORt:RXQuality:BAverage	-	no query	6.175
STOP:RXQuality:BAverage	-	no query	6.175
CONTInue:RXQuality:BAverage	-	no query	6.175
CONFigure:RXQuality:BAverage:CONTRol:BAverage	RFER BER BBB, 1 to 500 OFF	with query	6.176
CONFigure:RXQuality:BAverage:CONTRol:DEFault	ON OFF	with query	6.178
CONFigure:RXQuality:BAverage:CONTRol:PDATa[:TCH]:MSLot:LEVel:INDividual	<Level_0>, ..., <Level_7>	with query	6.177
CONFigure:RXQuality:BAverage:CONTRol:PDATa[:TCH]:MSLot:RL EVel	-127 dB to +127 dB	with query	6.177
CONFigure:RXQuality:BAverage:CONTRol:REPetition	FLIMit ALIMits NONE, STEP NONE	with query	6.176
CONFigure:RXQuality:BAverage:CONTRol[:CSWitched]	RFER BER BBB, 1 to 500 OFF	with query	6.176
CONFigure:RXQuality:BAverage:CONTRol[:CSWitched][:TCH]:MSLot:LEVel:INDividual	<Level_0>, ..., <Level_7>	with query	6.177
CONFigure:RXQuality:BAverage:CONTRol[:CSWitched][:TCH]:MSLot:RLEVel	-127 dB to +127 dB	with query	6.177
CONFigure:RXQuality:BAverage:CONTRol[:TCH]:LEVel:UNTimeslot	-127 dB to +127 dB	with query	6.177

Command, Signalling	Parameter	Remark	Page
CONFigure:RXQuality:BAverage:CONTRol[:TCH]:LEVel:UTIMeslot	<Level>	with query	6.176
CONFigure:RXQuality:BAverage:EREPorting	SRQ SOPC SRSQ OFF	with query	6.175
CONFigure:RXQuality:BAverage:LIMit:CLIB	0 % to 100 %	with query	6.178
CONFigure:RXQuality:BAverage:LIMit:CLII	0 % to 100 %	with query	6.178
CONFigure:RXQuality:BAverage:LIMit:DBLer	0 % to 100 %	with query	6.178
CALCulate:RXQuality:BAverage:LIMit:MATChing?	<Result>	query only	6.181
CONFigure:RXQuality:BAverage:LIMit:USFBler	0 % to 100 %	with query	6.179
FETCh:RXQuality:BAverage:STATus?	OFF RUN STOP ERR STEP RDY, 1 to 500 NONE	query only	6.175
FETCh[:SCALar]:RXQuality:BAverage?	<Result>	query only	6.179
SAMPlE[:SCALar]:RXQuality:BAverage?	<Result>	query only	6.179
CONFigure:RXQuality:BAverageLIMit:DEFault	ON OFF	with query	6.179
CONFigure:RXQuality:BAverageLIMit:FERRors	0 % to 100 %	with query	6.178
Receiver quality measurements, Single Shot			
INITiate:RXQuality:BER	–	no query	6.166
ABORt:RXQuality:BER	–	no query	6.166
STOP:RXQuality:BER	–	no query	6.166
CONTInue:RXQuality:BER	–	no query	6.166
CONFigure:RXQuality:BER:EREPorting	SRQ SOPC SRSQ OFF	with query	6.166
CALCulate:RXQuality:BER:LIMit:MATChing?	<Result>	query only	6.174
FETCh:RXQuality:BER:STATus?	OFF RUN STOP ERR STEP RDY, 1 to 50000 NONE	query only	6.167
CONFigure:RXQuality:BER:TSETup	T1 T2 T3 T4 T5 T6 T7 T8 T9 T10	with query	6.166
READ[:SCALar]:RXQuality:BER?	<Result>	query only	6.172
FETCh[:SCALar]:RXQuality:BER?	<Result>	query only	6.172
SAMPlE[:SCALar]:RXQuality:BER?	<Result>	query only	6.172
CONFigure:RXQuality:BER<nr>:CONTRol:BER<nr>	RFER BER BBB, 1 to 500 OFF	with query	6.167
CONFigure:RXQuality:BER<nr>:CONTRol:DEFault	ON OFF	with query	6.170
CONFigure:RXQuality:BER<nr>:CONTRol:PDATA[:TCH]:LEVel[:SL OT]:FIVE	<Level>	with query	6.170
CONFigure:RXQuality:BER<nr>:CONTRol:PDATA[:TCH]:LEVel[:SL OT]:FOUR	<Level>	with query	6.170
CONFigure:RXQuality:BER<nr>:CONTRol:PDATA[:TCH]:LEVel[:SL OT]:ONE	<Level>	with query	6.170
CONFigure:RXQuality:BER<nr>:CONTRol:PDATA[:TCH]:LEVel[:SL OT]:SEVen	<Level>	with query	6.170
CONFigure:RXQuality:BER<nr>:CONTRol:PDATA[:TCH]:LEVel[:SL OT]:SIX	<Level>	with query	6.170
CONFigure:RXQuality:BER<nr>:CONTRol:PDATA[:TCH]:LEVel[:SL OT]:THRee	<Level>	with query	6.170
CONFigure:RXQuality:BER<nr>:CONTRol:PDATA[:TCH]:LEVel[:SL OT]:TWO	<Level>	with query	6.170
CONFigure:RXQuality:BER<nr>:CONTRol:PDATA[:TCH]:LEVel[:SL OT]:ZERO	<Level>	with query	6.170
CONFigure:RXQuality:BER<nr>:CONTRol:PDATA[:TCH]:MSLot:LEVel:INDividual	<Level_0>, ..., <Level_7>	with query	6.169
CONFigure:RXQuality:BER<nr>:CONTRol:PDATA[:TCH]:MSLot:RL	–127 dB to +127 dB	with query	6.169

Command, Signalling	Parameter	Remark	Page
<i>EVel</i>			
<i>CONFigure:RXQuality:BER<nr>:CONTRol:REPetition</i>	<i>ALIMits FLIMit NONE, STEP NONE</i>	<i>with query</i>	6.168
<i>CONFigure:RXQuality:BER<nr>:CONTRol[:CSWitched]</i>	<i>RFER BER BBB, 1 to 500 OFF</i>	<i>with query</i>	6.167
<i>CONFigure:RXQuality:BER<nr>:CONTRol[:CSWitched][:TCH]:LEVel:UNTimeslot</i>	<i>-127 dB to +127 dB</i>	<i>with query</i>	6.168
<i>CONFigure:RXQuality:BER<nr>:CONTRol[:CSWitched][:TCH]:LEVel:UTIMeslot</i>	<i><Level></i>	<i>with query</i>	6.168
<i>CONFigure:RXQuality:BER<nr>:CONTRol[:CSWitched][:TCH]:LEVel[:SLOT]:FIVE</i>	<i><Level></i>	<i>with query</i>	6.170
<i>CONFigure:RXQuality:BER<nr>:CONTRol[:CSWitched][:TCH]:LEVel[:SLOT]:FOUR</i>	<i><Level></i>	<i>with query</i>	6.170
<i>CONFigure:RXQuality:BER<nr>:CONTRol[:CSWitched][:TCH]:LEVel[:SLOT]:ONE</i>	<i><Level></i>	<i>with query</i>	6.170
<i>CONFigure:RXQuality:BER<nr>:CONTRol[:CSWitched][:TCH]:LEVel[:SLOT]:SEVen</i>	<i><Level></i>	<i>with query</i>	6.170
<i>CONFigure:RXQuality:BER<nr>:CONTRol[:CSWitched][:TCH]:LEVel[:SLOT]:SIX</i>	<i><Level></i>	<i>with query</i>	6.170
<i>CONFigure:RXQuality:BER<nr>:CONTRol[:CSWitched][:TCH]:LEVel[:SLOT]:THRee</i>	<i><Level></i>	<i>with query</i>	6.170
<i>CONFigure:RXQuality:BER<nr>:CONTRol[:CSWitched][:TCH]:LEVel[:SLOT]:TWO</i>	<i><Level></i>	<i>with query</i>	6.170
<i>CONFigure:RXQuality:BER<nr>:CONTRol[:CSWitched][:TCH]:LEVel[:SLOT]:ZERO</i>	<i><Level></i>	<i>with query</i>	6.170
<i>CONFigure:RXQuality:BER<nr>:CONTRol[:CSWitched][:TCH]:MSLot:LEVel:INDividual</i>	<i><Level_0>, ..., <Level_7></i>	<i>with query</i>	6.169
<i>CONFigure:RXQuality:BER<nr>:CONTRol[:CSWitched][:TCH]:MSLot:RLEVel</i>	<i>-127 dB to +127 dB</i>	<i>with query</i>	6.169
<i>CONFigure:RXQuality:BER<nr>:LIMit:CLIB</i>	<i>0 % to 100 %</i>	<i>with query</i>	6.171
<i>CONFigure:RXQuality:BER<nr>:LIMit:CLII</i>	<i>0 % to 100 %</i>	<i>with query</i>	6.171
<i>CONFigure:RXQuality:BER<nr>:LIMit:DBLer</i>	<i>0 % to 100 %</i>	<i>with query</i>	6.171
<i>CONFigure:RXQuality:BER<nr>:LIMit:DEFault</i>	<i>ON OFF</i>	<i>with query</i>	6.172
<i>CONFigure:RXQuality:BER<nr>:LIMit:FERRors</i>	<i>0 % to 100 %</i>	<i>with query</i>	6.171
<i>CONFigure:RXQuality:BER<nr>:LIMit:USFBler</i>	<i>0 % to 100 %</i>	<i>with query</i>	6.171
Receiver quality measurements, BLER			
<i>INITiate:RXQuality:BLER</i>	<i>-</i>	<i>no query</i>	6.182
<i>ABORt:RXQuality:BLER</i>	<i>-</i>	<i>no query</i>	6.182
<i>STOP:RXQuality:BLER</i>	<i>-</i>	<i>no query</i>	6.182
<i>CONTInue:RXQuality:BLER</i>	<i>-</i>	<i>no query</i>	6.182
<i>CONFigure:RXQuality:BLER:CONTRol:DEFault</i>	<i>ON OFF</i>	<i>with query</i>	6.184
<i>CONFigure:RXQuality:BLER:CONTRol:DLDCycle</i>	<i>RB1 RB2 ... RB12</i>	<i>with query</i>	6.184
<i>CONFigure:RXQuality:BLER:CONTRol:PDATa[:TCH]:MSLot:LEVel:INDividual</i>	<i><Level_0>, ..., <Level_7></i>	<i>with query</i>	6.183
<i>CONFigure:RXQuality:BLER:CONTRol:PDATa[:TCH]:MSLot:RLEVel</i>	<i>-127 dB to +127 dB</i>	<i>with query</i>	6.183
<i>CONFigure:RXQuality:BLER:CONTRol:REPetition</i>	<i>CONT SING 1 to 10000, STEP NONE</i>	<i>with query</i>	6.183
<i>CONFigure:RXQuality:BLER:CONTRol:RLBCount</i>	<i>100 to 2000</i>	<i>with query</i>	6.183
<i>CONFigure:RXQuality:BLER:EREPorting</i>	<i>SRQ SOPC SRSQ OFF</i>	<i>with query</i>	6.182
<i>FETCh:RXQuality:BLER:STATus?</i>	<i>OFF RUN STOP ERR STEP RDY, 1 to 500 </i>	<i>query only</i>	6.182

Command, Signalling	Parameter	Remark	Page
	NONE		
READ[:SCALar]:RXQuality:BLER?	<Result>	query only	6.185
FETCh[:SCALar]:RXQuality:BLER?	<Result>	query only	6.185
SAMPl[:SCALar]:RXQuality:BLER?	<Result>	query only	6.185
CONFigure:RXQuality:CONTRol:CONFidence:FAIL	C500 C900 C980 C998	with query	6.165
CONFigure:RXQuality:CONTRol:CONFidence:MTTime	0.0 s to 100000.0 s	with query	6.165
CONFigure:RXQuality:CONTRol:CONFidence:PASS	C500 C900 C980 C998	with query	6.165
CONFigure:RXQuality:CONTRol:CONFidence:RWINdow	OFF P10 P20 P30	with query	6.165
CONFigure:RXQuality:CONTRol:DEFault	ON OFF	with query	6.165
CONFigure:RXQuality:CONTRol:HTIME	0 s to 100 s, 0 s to 100 s	with query	6.164
CONFigure:RXQuality:PDATa:BITStream	PR9 PR11 PR15 PR16	with query	6.164
CONFigure:RXQuality[:CSWitched]:BITStream	PR9 PR11 PR15 PR16	with query	6.164
Signalling			
PROCedure: SIGNalling:PDATa:ACTion	SOFF SON CTMA CTMB CRA CRSignalling CDLonly CBLer DISConnect HANDover CRES CREA	no query	6.229
PROCedure:SIGNalling:PDATa:ASConfig:ENABLE	ON OFF	with query	6.232
[SENSe:]SIGNalling:PDATa:SERVice?	TMA TMB LBS LBA RSA RSIG RSCS RSCA DLON BLER	query only	6.230
[SENSe:]SIGNalling:PDATa:STATe?	IDLE ATT RAUP AIPR DIPR	query only	6.230
PROCedure:SIGNalling:PDATa[:TCH]:MSLot:CHANnel	<Number>	with query	6.230
PROCedure:SIGNalling:PDATa[:TCH]:MSLot:FHOpping:ENABLE	ON OFF	with query	6.231
PROCedure:SIGNalling:PDATa[:TCH]:MSLot:MS:SCONfig:GAMMA	<UL_Gamma_0>, ..., <UL_Gamma_7>	with query	6.231
PROCedure:SIGNalling:PDATa[:TCH]:MSLot:SCONfig	<Main_TS>,<DL_Enable_0>,. ..., <DL_Enable_7>, <DL_Power_0>, ..., <DL_Power_7> <UL_Enable_0>,..., <UL_Enable_7>, <UL_Gamma_0>, ..., <UL_Gamma_7>,<Main_TS>	with query	6.231
PROCedure:SIGNalling[:CSWitched]:ACTion	SOFF SON MTC SMS CRElease HANDover	no query	6.190
PROCedure:SIGNalling[:CSWitched]:DAI	NORMal DECoder ENCOder ADEVice	with query	6.192
CONFigure:SIGNalling[:CSWitched]:SMS	<Text>	with query	6.192
[SENSe:]SIGNalling[:CSWitched]:SMS?	<Text>	query only	6.192
[SENSe:]SIGNalling[:CSWitched]:STATe?	SOFF SON SYNC CEST CPEN CED	query only	6.191
PROCedure:SIGNalling[:CSWitched][:TCH]:CHANnel	<Number>	with query	6.192
PROCedure:SIGNalling[:CSWitched][:TCH]:MSLot:LOOP	<Loop>	with query	6.195
PROCedure:SIGNalling[:CSWitched][:TCH]:MSLot:SCONfig	<Main_Slot>, <Enable_0>,<Enable_1>, ..., <Enable_7>, <PCL_0>, ..., <PCL_7>,<Main_TS>	with query	6.194
PROCedure:SIGNalling[:CSWitched][:TCH]:TADVance	0 bit to 63 bit	with query	6.192
PROCedure:SIGNalling[:CSWitched][:TCH][:SSLot]:CHCCombined	<ChannelNumber>, <Timeslot>, <PCL>	with query	6.193

Command, Signalling	Parameter	Remark	Page
PROCedure:SIGNalling[:CSWitched][:TCH][:SSLot]:FHOPping:SEQuence	A B C D OFF	with query	6.193
PROCedure:SIGNalling[:CSWitched][:TCH][:SSLot]:LOOP	<Loop>	with query	6.195
PROCedure:SIGNalling[:CSWitched][:TCH][:SSLot]:MS:PCL	0 to 31	with query	6.194
PROCedure:SIGNalling[:CSWitched][:TCH][:SSLot]:TIMeslot	2 to 6 0 to 7	with query	6.193
Speech Codec			
ROUte:SPDecoDer:OUTPut	HANdset ANALyzer ANA2 ABOTh	with query	6.219
ROUte:SPENCoDer[:INPut]	HANdset GENERator	with query	6.219
Spectrum due to modulation measurements			
CONFigure:SPECtrum:LIMit:LINE:SELEct	GMSK EPSK	with query	3.105
INITiate:SPECtrum:MODulation	–	no query	3.106
ABORt:SPECtrum:MODulation	–	no query	3.106
STOP:SPECtrum:MODulation	–	no query	3.106
CONTInue:SPECtrum:MODulation	–	no query	3.106
CONFigure:SPECtrum:MODulation:AVGareas	A B AB	with query	3.109
CONFigure:SPECtrum:MODulation:AVGareas	A B AB	with query	3.119
CONFigure:SPECtrum:MODulation:CONTRol	SCALar ARRay, 1 to 1000 NONE	with query	3.107
CONFigure:SPECtrum:MODulation:CONTRol:MPoInt<nr>:ENABle	ON OFF	with query	3.107
CONFigure:SPECtrum:MODulation:CONTRol:REPetition	CONTInuous SINGleshot 1 to 10000, SONerror NONE, STEP NONE	with query	3.107
CONFigure:SPECtrum:MODulation:CONTRol:VMPOInt<nr>	0 MHz to 2.5 MHz OFF	with query	3.108
CONFigure:SPECtrum:MODulation:EPSK:LIMit:LINE:MODE[:UPPer]	ON OFF	with query	3.111
CONFigure:SPECtrum:MODulation:EPSK:LIMit:LINE:REFPower[:UPPer]	<Minimum>, <Maximum>	with query	3.110
CONFigure:SPECtrum:MODulation:EPSK:LIMit:LINE:UPPer<nr>	<MinLevel>,<MaxLevel>,<AbsLevel>,<Enable>	with query	3.109
CONFigure:SPECtrum:MODulation:EPSK:LIMit:LINE:UPPer<nr>:ENABle	ON OFF	with query	3.109
CONFigure:SPECtrum:MODulation:EREPorting	SRQ SOPC SRSQ OFF	with query	3.106
[SENSe:]SPECtrum:MODulation:LIMit:LINE:USED?	GMSK EPSK	query only	3.109
FETCh:SPECtrum:MODulation:STATus?	OFF RUN STOP ERR STEP RDY, 1 to 10000 NONE, 1 to 1000 NONE	only query	3.106
CONFigure:SPECtrum:MODulation:TDFSelect	N18 N160 N140 N120 N100 N080 N060 N040 N025 N020 N010 REF P010 P020 P025 P040 P060 P080 P100 P120 P140 P160 P180 NV4 NV3 NV2 NV1 PV1 PV2 PV3 PV4 OFF ON	with query	3.108
CONFigure:SUBarrays:SPECtrum:MODulation:TDOMain	ALL ARITHmetical MINimum MAXimum IVAL,<Start>,<Samples>{,<Start>,<Samples>}	with query	3.112
READ:ARRay:SPECtrum:MODulation:TDOMain?	–100.0 dB to +20.0 dB, ...	query only	3.114
FETCh:ARRay:SPECtrum:MODulation:TDOMain?	–100.0 dB to +20.0 dB, ...	query only	3.114
SAMPLe:ARRay:SPECtrum:MODulation:TDOMain?	–100.0 dB to +20.0 dB, ...	query only	3.114
READ:SUBarrays:SPECtrum:MODulation:TDOMain?	–100.0 dB to +20.0 dB, ...	query only	3.115

Command, Signalling	Parameter	Remark	Page
FETCh:SUBarrays:SPECTrum:MODulation:TDOMain?	-100.0 dB to +20.0 dB, ...	query only	3.115
SAMPlE:SUBarrays:SPECTrum:MODulation:TDOMain?	-100.0 dB to +20.0 dB, ...	query only	3.115
READ[:SCALar]:SPECTrum:MODulation?	<Result>	only query	3.112
FETCh[:SCALar]:SPECTrum:MODulation?	<Result>	only query	3.112
SAMPlE[:SCALar]:SPECTrum:MODulation?	<Result>	only query	3.112
CONFigure:SUBarrays:SPECTrum:MODulation[:FDOMain]	ALL ARITHmetical MINimum MAXimum IVAL,<Start>,<Samples>{,<Start>,<Samples>}	with query	3.111
CALCulate:ARRay:SPECTrum:MODulation[:FDOMain]:AREA:LIMit:MATCHing?	<Matching>	query only	3.114
READ:ARRay:SPECTrum:MODulation[:FDOMain]:VMPoint?	-100.0 dB to +20.0 dB, ...	query only	3.113
FETCh:ARRay:SPECTrum:MODulation[:FDOMain]:VMPoint?	-100.0 dB to +20.0 dB, ...	query only	3.113
SAMPlE:ARRay:SPECTrum:MODulation[:FDOMain]:VMPoint?	-100.0 dB to +20.0 dB, ...	query only	3.113
READ:ARRay:SPECTrum:MODulation[:FDOMain]?	-100.0 dB to +20.0 dB, ...	query only	3.113
FETCh:ARRay:SPECTrum:MODulation[:FDOMain]?	-100.0 dB to +20.0 dB, ...	query only	3.113
SAMPlE:ARRay:SPECTrum:MODulation[:FDOMain]?	-100.0 dB to +20.0 dB, ...	query only	3.113
READ:SUBarrays:SPECTrum:MODulation[:FDOMain]?	-100.0 dB to +20.0 dB, ...	query only	3.114
FETCh:SUBarrays:SPECTrum:MODulation[:FDOMain]?	-100.0 dB to +20.0 dB, ...	query only	3.114
SAMPlE:SUBarrays:SPECTrum:MODulation[:FDOMain]?	-100.0 dB to +20.0 dB, ...	query only	3.114
CONFigure:SPECTrum:MODulation[:GMSK]:LIMit:LINE:MODE[:UPPer]	ON OFF	with query	3.111
CONFigure:SPECTrum:MODulation[:GMSK]:LIMit:LINE:REFPower[:UPPer]	<Minimum>, <Maximum>	with query	3.110
CONFigure:SPECTrum:MODulation[:GMSK]:LIMit:LINE:UPPer<nr>	<MinLevel>,<MaxLevel>,<AbsLevel>,<Enable>	with query	3.109
CONFigure:SPECTrum:MODulation[:GMSK]:LIMit:LINE:UPPer<nr>:ENABLE	ON OFF	with query	3.109
Spectrum due to switching measurements: 8PSK modulation			
INITiate:SPECTrum:MSWitching	-	no query	3.127
ABORt:SPECTrum:MSWitching	-	no query	3.127
STOP:SPECTrum:MSWitching	-	no query	3.127
CONTinue:SPECTrum:MSWitching	-	no query	3.127
CALCulate:ARRay:SPECTrum:MSWitching:AREA:LIMit:MATCHing?	<Matching>	query only	3.131
CONFigure:SPECTrum:MSWitching:CONTROL	SCALar ARRay, 1 to 1000 NONE	with query	3.128
CONFigure:SPECTrum:MSWitching:CONTROL:REPetition	CONTInuous SINGleshot 1 to 10000, SONerror NONE, STEP NONE	with query	3.129
CONFigure:SPECTrum:MSWitching:EREPorting	SRQ SOPC SRSQ OFF	with query	3.127
[SENSe:]SPECTrum:MSWitching:LIMit:LINE:USED?	GMSK EPSK	query only	3.129
FETCh:SPECTrum:MSWitching:STATus?	OFF RUN STOP ERR STEP RDY, 1 to 10000 NONE, 1 to 1000 NONE	only query	3.128
READ:ARRay:SPECTrum:MSWitching:VMPoint?	-100.0 dBm to +100.0 dBm, ...	query only	3.131
FETCh:ARRay:SPECTrum:MSWitching:VMPoint?	-100.0 dBm to +100.0 dBm, ...	query only	3.131
SAMPlE:ARRay:SPECTrum:MSWitching:VMPoint?	-100.0 dBm to +100.0 dBm, ...	query only	3.131
READ[:SCALar]:SPECTrum:MSWitching?	<Result>	only query	3.130

Command, Signalling	Parameter	Remark	Page
FETCh[:SCALar]:SPECTrum:MSWitching?	<Result>	only query	3.130
SAMPlE[:SCALar]:SPECTrum:MSWitching?	<Result>	only query	3.130
READ:ARRay:SPECTrum:MSWitching?	<32 results>dBm	only query	3.130
FETCh:ARRay:SPECTrum:MSWitching?	<32 results>	only query	3.130
SAMPlE:ARRay:SPECTrum:MSWitching?	<32 results>	only query	3.130
Spectrum due to switching measurements			
INITiate:SPECTrum:SWITching	–	no query	3.116
ABORt:SPECTrum:SWITching	–	no query	3.116
STOP:SPECTrum:SWITching	–	no query	3.116
CONTInue:SPECTrum:SWITching	–	no query	3.116
CONFigure:SPECTrum:SWITching:CONTRol	SCALar ARRay, 1 to 1000 NONE	with query	3.117
CONFigure:SPECTrum:SWITching:CONTRol:MPoInt<nr>:ENABle	ON OFF	with query	3.118
CONFigure:SPECTrum:SWITching:CONTRol:REPetition	CONTInuous SINGleshot 1 to 10000, SONerror NONE, STEP NONE	with query	3.118
CONFigure:SPECTrum:SWITching:CONTRol:VMPOInt<nr>	0 MHz to 2.5 MHz OFF	with query	3.118
CONFigure:SPECTrum:SWITching:CSMODE	PHOL SCO	with query	3.117
CONFigure:SPECTrum:SWITching:EPSK:LIMit:LINE:DEFault	ON OFF	with query	3.121
CONFigure:SPECTrum:SWITching:EPSK:LIMit:LINE:MODE[:UPPer]	ON OFF	with query	3.121
CONFigure:SPECTrum:SWITching:EPSK:LIMit:LINE:UPPer<nr>	<Power level>, <Limit at 0.4 MHz>, <Limit at 0.6 MHz>, <Limit at 1.2 MHz>, <Limit at 1.8 MHz>, <Enable>	with query	3.120
CONFigure:SPECTrum:SWITching:EPSK:LIMit:LINE:UPPer<nr>:ENABle	ON OFF	with query	3.120
CONFigure:SPECTrum:SWITching:EREPorting	SRQ SOPC SRSQ OFF	with query	3.116
[SENSe:]SPECTrum:SWITching:LIMit:LINE:USED?	GMSK EPSK	query only	3.119
FETCh:SPECTrum:SWITching:STATus?	OFF RUN STOP ERR STEP RDY, 1 to 10000 NONE, 1 to 1000 NONE	only query	3.117
CONFigure:SPECTrum:SWITching:TDFSelect	N18 N120 N060 N040 REF P040 P060 P120 P180 NV4 NV3 NV2 NV1 PV1 PV2 PV3 PV4 OFF ON	with query	3.119
CONFigure:SUBarrays:SPECTrum:SWITching:TDOMain	ALL ARITHmetical MINimum MAXimum IVAL, <Start>, <Samples>{, <Start>, <Samples>}	with query	3.123
READ:ARRay:SPECTrum:SWITching:TDOMain?	–100.0 dB to +100.0 dBm, ...	query only	3.126
FETCh:ARRay:SPECTrum:SWITching:TDOMain?	–100.0 dBm to +100.0 dBm, ...	query only	3.126
SAMPlE:ARRay:SPECTrum:SWITching:TDOMain?	–100.0 dBm to +100.0 dBm, ...	query only	3.126
READ:SUBarrays:SPECTrum:SWITching:TDOMain?	–100.0 dBm to +100.0 dBm, ...	query only	3.126
FETCh:SUBarrays:SPECTrum:SWITching:TDOMain?	–100.0 dBm to +100.0 dBm, ...	query only	3.126
SAMPlE:SUBarrays:SPECTrum:SWITching:TDOMain?	–100.0 dBm to +100.0 dBm, ...	query only	3.126
READ[:SCALar]:SPECTrum:SWITching?	<Result>	only query	3.124
FETCh[:SCALar]:SPECTrum:SWITching?	<Result>	only query	3.124

Command, Signalling	Parameter	Remark	Page
SAMPlE[:SCALar]:SPECTrum:SWITChing?	<Result>	only query	3.124
CONFIgure:SUBarrays:SPECTrum:SWITChing[:FDOMain]	ALL ARITHmetical MINimum MAXimum IVAL,<Start>,<Samples>{,<Start>,<Samples>}	with query	3.122
CALCulate:ARRay:SPECTrum:SWITChing[:FDOMain]:AREA:LIMit:MATChing?	<Matching>	query only	3.125
READ:ARRay:SPECTrum:SWITChing[:FDOMain]:VMPoint?	-100.0 dBm to +100.0 dBm, ...	query only	3.125
FETCh:ARRay:SPECTrum:SWITChing[:FDOMain]:VMPoint?	-100.0 dBm to +100.0 dBm, ...	query only	3.125
SAMPlE:ARRay:SPECTrum:SWITChing[:FDOMain]:VMPoint?	-100.0 dBm to +100.0 dBm, ...	query only	3.125
READ:ARRay:SPECTrum:SWITChing[:FDOMain]?	-100.0 dBm to +100.0 dBm	only query	3.124
FETCh:ARRay:SPECTrum:SWITChing[:FDOMain]?	-100.0 dBm to +100.0 dBm	only query	3.124
SAMPlE:ARRay:SPECTrum:SWITChing[:FDOMain]?	-100.0 dBm to +100.0 dBm	only query	3.124
READ:SUBarrays:SPECTrum:SWITChing[:FDOMain]?	-100.0 dBm to +100.0 dBm, ...	query only	3.125
FETCh:SUBarrays:SPECTrum:SWITChing[:FDOMain]?	-100.0 dBm to +100.0 dBm, ...	query only	3.125
SAMPlE:SUBarrays:SPECTrum:SWITChing[:FDOMain]?	-100.0 dBm to +100.0 dBm, ...	query only	3.125
CONFIgure:SPECTrum:SWITChing[:GMSK]:LIMit:LINE:DEFault	ON OFF	with query	3.121
CONFIgure:SPECTrum:SWITChing[:GMSK]:LIMit:LINE:MODE[:UPPer]	ON OFF	with query	3.121
CONFIgure:SPECTrum:SWITChing[:GMSK]:LIMit:LINE:UPPer<nr>	<Power level>, <Limit at 0.4 MHz>, <Limit at 0.6 MHz>, <Limit at 1.2 MHz>, <Limit at 1.8 MHz>,<Enable>	with query	3.120
CONFIgure:SPECTrum:SWITChing[:GMSK]:LIMit:LINE:UPPer<nr>:ENABle	ON OFF	with query	3.120
Symbolic Status Register Evaluation			
STATus:OPERation:SYMBOLic:ENABle	<Event>{,<Event>}	with query	3.37
STATus:OPERation:SYMBOLic:ENABle	<Event>{,<Event>}	with query	6.186
Trigger			
TRIGger:OUTPut:DELay:VALue	0 to 7	with query	6.189
TRIGger:OUTPut:PIN<nr>:DELay:ENABle	ON OFF	with query	6.189
TRIGger:OUTPut:PIN<nr>:SIGNal	NONE FCL	with query	6.189
TRIGger[:SEQuence]:DEFault	ON OFF	with query	6.190
TRIGger[:SEQuence]:SLOPe	POSitive NEGative	with query	6.189
TRIGger[:SEQuence]:SOURce	SIGNalling FRUN RFPower IFPower	with query	6.188
TRIGger[:SEQuence]:THReshold:IFPower	<Threshold>	with query	6.189
TRIGger[:SEQuence]:THReshold:RFPower	LOW MEdium HIGH	with query	6.188
Wideband Power			
INITiate:WPOWer	-	no query	3.37
ABORt:WPOWer	-	no query	3.37
STOP:WPOWer	-	no query	3.37
CONTInue:WPOWer	-	no query	3.37
CONFIgure:WPOWer:CONTRol:REPetition	CONTInuous SINGleshot 1 ... 10000, SONerror NONE,STEP NONE	with query	3.38

Command, Signalling	Parameter	Remark	Page
CONFigure:WPOWer:EREPorting	SRQ SOPC SRSQ OFF	with query	3.37
FETCh:WPOWer:STATus?	OFF RUN STOP ERR STEP RDY, 1 ... 10000 NONE	query only	3.38
READ[:SCALar]:WPOWer?	-30 dBm to +30 dBm	query only	3.39
FETCh[:SCALar]:WPOWer?	-30 dBm to +30 dBm	query only	3.39
SAMPlE[:SCALar]:WPOWer?	-30 dBm to +30 dBm	query only	3.39

Alphabetical Command Lists

Table 6-3 Remote control commands: *Non Signalling* mode

Command (Non Signalling, alphabetical)	Page
ABORt:MODulation:EVMagnitude:EPSK	3.87
ABORt:MODulation:MERRor:EPSK	3.99
ABORt:MODulation:OVERview:EPSK	3.82
ABORt:MODulation:XPERror[:GMSK]	3.74
ABORt:MODulation[:PERRor]:EPSK	3.93
ABORt:MODulation[:PERRor][:GMSK]	3.66
ABORt:NPOWer	3.40
ABORt:POWer:FRAMe	3.52
ABORt:POWer:MSLot	3.56
ABORt:POWer:SLOT	3.43
ABORt:POWer:XSLot	3.47
ABORt:POWer[:NORMal]:EPSK	6.13
ABORt:POWer[:NORMal][:GMSK]	6.13
ABORt:POWer[:NORMal][:GMSK]:MPR	6.28
ABORt:RFGenerator	6.7
ABORt:RFGenerator[:TX]	6.4
ABORt:SPECTrum:MODulation	3.106
ABORt:SPECTrum:MSWitching	3.127
ABORt:SPECTrum:SWITChing	3.116
ABORt:WPOWer	3.37
CALCulate:ARRay:POWer:MSLot:AREA:LIMit:MATChing:MINimum?	3.63
CALCulate:ARRay:POWer:MSLot:AREA:LIMit:MATChing[:CURRent]?	3.63
CALCulate:ARRay:POWer:MSLot:LIMit:MATChing:MINimum?	3.63
CALCulate:ARRay:POWer:MSLot:LIMit:MATChing[:CURRent]?	3.63
CALCulate:ARRay:POWer[:NORMal]:EPSK:AREA:LIMit:MATChing:AVERage?	6.27
CALCulate:ARRay:POWer[:NORMal]:EPSK:AREA:LIMit:MATChing:MAXimum?	6.27
CALCulate:ARRay:POWer[:NORMal]:EPSK:AREA:LIMit:MATChing:MINimum?	6.27
CALCulate:ARRay:POWer[:NORMal]:EPSK:AREA:LIMit:MATChing[:CURRent]?	6.27
CALCulate:ARRay:POWer[:NORMal]:EPSK:LIMit:MATChing:AVERage?	6.27
CALCulate:ARRay:POWer[:NORMal]:EPSK:LIMit:MATChing:MAXimum?	6.27
CALCulate:ARRay:POWer[:NORMal]:EPSK:LIMit:MATChing:MINimum?	6.27
CALCulate:ARRay:POWer[:NORMal]:EPSK:LIMit:MATChing[:CURRent]?	6.27
CALCulate:ARRay:POWer[:NORMal][:GMSK]:AREA:LIMit:MATChing:AVERage?	6.27
CALCulate:ARRay:POWer[:NORMal][:GMSK]:AREA:LIMit:MATChing:MAXimum?	6.27
CALCulate:ARRay:POWer[:NORMal][:GMSK]:AREA:LIMit:MATChing:MINimum?	6.27
CALCulate:ARRay:POWer[:NORMal][:GMSK]:AREA:LIMit:MATChing[:CURRent]?	6.27
CALCulate:ARRay:POWer[:NORMal][:GMSK]:LIMit:MATChing:AVERage?	6.27
CALCulate:ARRay:POWer[:NORMal][:GMSK]:LIMit:MATChing:MAXimum?	6.27
CALCulate:ARRay:POWer[:NORMal][:GMSK]:LIMit:MATChing:MINimum?	6.27
CALCulate:ARRay:POWer[:NORMal][:GMSK]:LIMit:MATChing[:CURRent]?	6.27
CALCulate:ARRay:SPECTrum:MODulation[:FDOMain]:AREA:LIMit:MATChing?	3.114
CALCulate:ARRay:SPECTrum:MSWitching:AREA:LIMit:MATChing?	3.131
CALCulate:ARRay:SPECTrum:SWITChing[:FDOMain]:AREA:LIMit:MATChing?	3.125
CALCulate:MODulation:EVMagnitude:EPSK:LIMit:MATChing?	3.91
CALCulate:MODulation:MERRor:EPSK:LIMit:MATChing?	3.103
CALCulate:MODulation:OVERview:EPSK:LIMit:MATChing?	3.86
CALCulate:MODulation:XPERror[:GMSK]:LIMit:MATChing?	3.80
CALCulate:MODulation[:PERRor]:EPSK:LIMit:MATChing?	3.97

Command (Non Signalling, alphabetical)	Page
CALCulate:MODulation[:PERRor][:GMSK]:LIMit:MATChing?	3.72
CALCulate:POWer:MSLot:LIMit:MATChing?	3.61
CALCulate[:SCALar]:POWer[:NORMal]:EPSK:LIMit:MATChing?	6.24
CALCulate[:SCALar]:POWer[:NORMal][:GMSK]:LIMit:MATChing?	6.24
CALCulate[:SCALar]:POWer[:NORMal][:GMSK]:MPR:LIMit:MATChing?	6.33
CONFigure:IQIF:RXPath	3.36
CONFigure:IQIF:RXTXcombined	3.35
CONFigure:IQIF:TXPath	3.36
CONFigure:MODulation:EVMagnitude:EPSK:CONTRol	3.88
CONFigure:MODulation:EVMagnitude:EPSK:CONTRol:DEFault	3.89
CONFigure:MODulation:EVMagnitude:EPSK:CONTRol:REPetition	3.88
CONFigure:MODulation:EVMagnitude:EPSK:EREPorting	3.87
CONFigure:MODulation:MERRor:EPSK:CONTRol	3.100
CONFigure:MODulation:MERRor:EPSK:CONTRol:DEFault	3.101
CONFigure:MODulation:MERRor:EPSK:CONTRol:REPetition	3.100
CONFigure:MODulation:MERRor:EPSK:EREPorting	3.99
CONFigure:MODulation:OEMP:EPSK:LIMit:AVERage	3.84
CONFigure:MODulation:OEMP:EPSK:LIMit:DEFault	3.85
CONFigure:MODulation:OEMP:EPSK:LIMit:P95Th	3.85
CONFigure:MODulation:OEMP:EPSK:LIMit[:CURRent]	3.84
CONFigure:MODulation:OVERview:EPSK:CONTRol	3.83
CONFigure:MODulation:OVERview:EPSK:CONTRol:DEFault	3.84
CONFigure:MODulation:OVERview:EPSK:CONTRol:REPetition	3.83
CONFigure:MODulation:OVERview:EPSK:EREPorting	3.82
CONFigure:MODulation:XPERror[:GMSK]:CONTRol	3.75
CONFigure:MODulation:XPERror[:GMSK]:CONTRol:DEFault	3.76
CONFigure:MODulation:XPERror[:GMSK]:CONTRol:REPetition	3.76
CONFigure:MODulation:XPERror[:GMSK]:EREPorting	3.74
CONFigure:MODulation:XPERror[:GMSK]:FILTer	3.75
CONFigure:MODulation:XPERror[:GMSK]:LIMit:AVERage	3.77
CONFigure:MODulation:XPERror[:GMSK]:LIMit:DEFault	3.77
CONFigure:MODulation:XPERror[:GMSK]:LIMit:LOWer:MODE	3.77
CONFigure:MODulation:XPERror[:GMSK]:LIMit:UPPer:MODE	3.77
CONFigure:MODulation:XPERror[:GMSK]:LIMit[:CURRent]	3.76
CONFigure:MODulation:XPERror[:GMSK]:TIME:DECode	3.75
CONFigure:MODulation[:PERRor]:EPSK:CONTRol	3.94
CONFigure:MODulation[:PERRor]:EPSK:CONTRol:DEFault	3.95
CONFigure:MODulation[:PERRor]:EPSK:CONTRol:REPetition	3.94
CONFigure:MODulation[:PERRor]:EPSK:EREPorting	3.93
CONFigure:MODulation[:PERRor][:GMSK]:CONTRol	3.67
CONFigure:MODulation[:PERRor][:GMSK]:CONTRol:DEFault	3.68
CONFigure:MODulation[:PERRor][:GMSK]:CONTRol:REPetition	3.68
CONFigure:MODulation[:PERRor][:GMSK]:EREPorting	3.66
CONFigure:MODulation[:PERRor][:GMSK]:FILTer	3.67
CONFigure:MODulation[:PERRor][:GMSK]:LIMit:AVERage	3.69
CONFigure:MODulation[:PERRor][:GMSK]:LIMit:DEFault	3.69
CONFigure:MODulation[:PERRor][:GMSK]:LIMit:LOWer:MODE	3.69
CONFigure:MODulation[:PERRor][:GMSK]:LIMit:UPPer:MODE	3.69
CONFigure:MODulation[:PERRor][:GMSK]:LIMit[:CURRent]	3.68
CONFigure:MODulation[:PERRor][:GMSK]:TIME:DECode	3.70
CONFigure:NPOWer:CONTRol	3.41
CONFigure:NPOWer:CONTRol:REPetition	3.42

Command (Non Signalling, alphabetical)	Page
CONFigure:NPOWer:CONTRol:STATistics	3.41
CONFigure:NPOWer:EREPorting	3.40
CONFigure:POWer:FRAMe:CONTRol:DEFault	3.53
CONFigure:POWer:FRAMe:CONTRol:REPetition	3.53
CONFigure:POWer:FRAMe:EREPorting	3.52
CONFigure:POWer:FRAMe:FCOunt	3.52
CONFigure:POWer:MSLot:CONTRol	3.57
CONFigure:POWer:MSLot:CONTRol:DEFault	3.58
CONFigure:POWer:MSLot:CONTRol:REPetition	3.57
CONFigure:POWer:MSLot:EREPorting	3.56
CONFigure:POWer:MSLot:FILTer	3.59
CONFigure:POWer:MSLot:LIMit:LINE:GLEVel	3.59
CONFigure:POWer:MSLot:MVlew	3.58
CONFigure:POWer:MSLot:SCOunt	3.58
CONFigure:POWer:MSLot:TOFFset	3.58
CONFigure:POWer:SLOT:CONTRol:DEFault	3.44
CONFigure:POWer:SLOT:CONTRol:REPetition	3.44
CONFigure:POWer:SLOT:EREPorting	3.43
CONFigure:POWer:XSLot:CONTRol:DEFault	3.48
CONFigure:POWer:XSLot:CONTRol:REPetition	3.48
CONFigure:POWer:XSLot:EREPorting	3.47
CONFigure:POWer:XSLot:SCOunt	3.49
CONFigure:POWer[:NORMal]:EPSK:CONTRol	6.15
CONFigure:POWer[:NORMal]:EPSK:CONTRol:DEFault	6.16
CONFigure:POWer[:NORMal]:EPSK:CONTRol:REPetition	6.15
CONFigure:POWer[:NORMal]:EPSK:CONTRol:RPMode	6.16
CONFigure:POWer[:NORMal]:EPSK:EREPorting	6.13
CONFigure:POWer[:NORMal]:EPSK:FILTer	6.14
CONFigure:POWer[:NORMal]:EPSK:LIMit:LINE:DEFault	6.21
CONFigure:POWer[:NORMal]:EPSK:LIMit:LINE:LOWer:ALL:DYNamic:ENABLE	6.21
CONFigure:POWer[:NORMal]:EPSK:LIMit:LINE:LOWer<AreaNr>:ALL:DYNamic:ENABLE	6.20
CONFigure:POWer[:NORMal]:EPSK:LIMit:LINE:LOWer<nr>:DYNamic<RgNr>	6.20
CONFigure:POWer[:NORMal]:EPSK:LIMit:LINE:LOWer<nr>[:STATic]	6.18
CONFigure:POWer[:NORMal]:EPSK:LIMit:LINE:LOWer<nr>[:STATic]:ENABLE	6.18
CONFigure:POWer[:NORMal]:EPSK:LIMit:LINE:UPPer:ALL:DYNamic:ENABLE	6.20
CONFigure:POWer[:NORMal]:EPSK:LIMit:LINE:UPPer<nr>:ALL:DYNamic:ENABLE	6.19
CONFigure:POWer[:NORMal]:EPSK:LIMit:LINE:UPPer<nr>:DYNamic<nr>	6.19
CONFigure:POWer[:NORMal]:EPSK:LIMit:LINE:UPPer<nr>:DYNamic<nr>:ENABLE	6.19
CONFigure:POWer[:NORMal]:EPSK:LIMit:LINE:UPPer<nr>[:STATic]	6.16
CONFigure:POWer[:NORMal]:EPSK:LIMit:LINE:UPPer<nr>[:STATic]:ENABLE	6.16
CONFigure:POWer[:NORMal]:EPSK:TOFFset	6.14
CONFigure:POWer[:NORMal][:GMSK]:CONTRol	6.15
CONFigure:POWer[:NORMal][:GMSK]:CONTRol:DEFault	6.16
CONFigure:POWer[:NORMal][:GMSK]:CONTRol:REPetition	6.15
CONFigure:POWer[:NORMal][:GMSK]:EREPorting	6.13
CONFigure:POWer[:NORMal][:GMSK]:FILTer	6.14
CONFigure:POWer[:NORMal][:GMSK]:LIMit:ABPower<nr>	6.22
CONFigure:POWer[:NORMal][:GMSK]:LIMit:ABPower<nr>:ENABLE	6.22
CONFigure:POWer[:NORMal][:GMSK]:LIMit:LINE:DEFault	6.21
CONFigure:POWer[:NORMal][:GMSK]:LIMit:LINE:LOWer:ALL:DYNamic:ENABLE	6.21
CONFigure:POWer[:NORMal][:GMSK]:LIMit:LINE:LOWer<AreaNr>:ALL:DYNamic:ENABLE	6.20
CONFigure:POWer[:NORMal][:GMSK]:LIMit:LINE:LOWer<nr>:DYNamic<RgNr>	6.20

Command (Non Signalling, alphabetical)	Page
CONFigure:POWer[:NORMal][:GMSK]:LIMit:LINE:LOWer<nr>[:STATic].....	6.18
CONFigure:POWer[:NORMal][:GMSK]:LIMit:LINE:LOWer<nr>[:STATic]:ENABle.....	6.18
CONFigure:POWer[:NORMal][:GMSK]:LIMit:LINE:UPPer:ALL:DYNamic:ENABle.....	6.20
CONFigure:POWer[:NORMal][:GMSK]:LIMit:LINE:UPPer<nr>:ALL:DYNamic:ENABle.....	6.19
CONFigure:POWer[:NORMal][:GMSK]:LIMit:LINE:UPPer<nr>:DYNamic<nr>.....	6.19
CONFigure:POWer[:NORMal][:GMSK]:LIMit:LINE:UPPer<nr>:DYNamic<nr>:ENABle.....	6.19
CONFigure:POWer[:NORMal][:GMSK]:LIMit:LINE:UPPer<nr>[:STATic].....	6.16
CONFigure:POWer[:NORMal][:GMSK]:LIMit:LINE:UPPer<nr>[:STATic]:ENABle.....	6.16
CONFigure:POWer[:NORMal][:GMSK]:MPR:CONTRol.....	6.29
CONFigure:POWer[:NORMal][:GMSK]:MPR:CONTRol:REPetition.....	6.29
CONFigure:POWer[:NORMal][:GMSK]:MPR:EREPorting.....	6.28
CONFigure:POWer[:NORMal][:GMSK]:TOFFset.....	6.14
CONFigure:RFANalyzer:MCONTRol:TSoFFset.....	6.4
CONFigure:RFANalyzer:TPCL.....	6.3
CONFigure:RFGenerator:MODulation:BIT:SELECTION.....	6.6
CONFigure:RFGenerator:MODulation:TRANSMission.....	6.7
CONFigure:RFGenerator:MODulation:TSEQUence:SELECTION.....	6.7
CONFigure:SPECTrum:LIMit:LINE:SElect.....	3.105
CONFigure:SPECTrum:MODulation:AVGareAs.....	3.109
CONFigure:SPECTrum:MODulation:AVGareAs.....	3.119
CONFigure:SPECTrum:MODulation:CONTRol.....	3.107
CONFigure:SPECTrum:MODulation:CONTRol:MPoInt<nr>:ENABle.....	3.107
CONFigure:SPECTrum:MODulation:CONTRol:REPetition.....	3.107
CONFigure:SPECTrum:MODulation:CONTRol:VMPOInt<nr>.....	3.108
CONFigure:SPECTrum:MODulation:EPsk:LIMit:LINE:MODE[:UPPer].....	3.111
CONFigure:SPECTrum:MODulation:EPsk:LIMit:LINE:REFPowEr[:UPPer].....	3.110
CONFigure:SPECTrum:MODulation:EPsk:LIMit:LINE:UPPer<nr>.....	3.109
CONFigure:SPECTrum:MODulation:EPsk:LIMit:LINE:UPPer<nr>:ENABle.....	3.109
CONFigure:SPECTrum:MODulation:EREPorting.....	3.106
CONFigure:SPECTrum:MODulation:TDFSelect.....	3.108
CONFigure:SPECTrum:MODulation[:GMSK]:LIMit:LINE:MODE[:UPPer].....	3.111
CONFigure:SPECTrum:MODulation[:GMSK]:LIMit:LINE:REFPowEr[:UPPer].....	3.110
CONFigure:SPECTrum:MODulation[:GMSK]:LIMit:LINE:UPPer<nr>.....	3.109
CONFigure:SPECTrum:MODulation[:GMSK]:LIMit:LINE:UPPer<nr>:ENABle.....	3.109
CONFigure:SPECTrum:MSWitching:CONTRol.....	3.128
CONFigure:SPECTrum:MSWitching:CONTRol:REPetition.....	3.129
CONFigure:SPECTrum:MSWitching:EREPorting.....	3.127
CONFigure:SPECTrum:SWITching:CONTRol.....	3.117
CONFigure:SPECTrum:SWITching:CONTRol:MPoInt<nr>:ENABle.....	3.118
CONFigure:SPECTrum:SWITching:CONTRol:REPetition.....	3.118
CONFigure:SPECTrum:SWITching:CONTRol:VMPOInt<nr>.....	3.118
CONFigure:SPECTrum:SWITching:CSMODE.....	3.117
CONFigure:SPECTrum:SWITching:EPsk:LIMit:LINE:DEFault.....	3.121
CONFigure:SPECTrum:SWITching:EPsk:LIMit:LINE:MODE[:UPPer].....	3.121
CONFigure:SPECTrum:SWITching:EPsk:LIMit:LINE:UPPer<nr>.....	3.120
CONFigure:SPECTrum:SWITching:EPsk:LIMit:LINE:UPPer<nr>:ENABle.....	3.120
CONFigure:SPECTrum:SWITching:EREPorting.....	3.116
CONFigure:SPECTrum:SWITching:TDFSelect.....	3.119
CONFigure:SPECTrum:SWITching[:GMSK]:LIMit:LINE:DEFault.....	3.121
CONFigure:SPECTrum:SWITching[:GMSK]:LIMit:LINE:MODE[:UPPer].....	3.121
CONFigure:SPECTrum:SWITching[:GMSK]:LIMit:LINE:UPPer<nr>.....	3.120
CONFigure:SPECTrum:SWITching[:GMSK]:LIMit:LINE:UPPer<nr>:ENABle.....	3.120

Command (Non Signalling, alphabetical)	Page
CONFigure:SUBarrays:MODulation:EVMagnitude:EPSK.....	3.90
CONFigure:SUBarrays:MODulation:MERRor:EPSK.....	3.102
CONFigure:SUBarrays:MODulation:XPERror[:GMSK].....	3.78
CONFigure:SUBarrays:MODulation[:PERRor]:EPSK.....	3.96
CONFigure:SUBarrays:MODulation[:PERRor][:GMSK].....	3.70
CONFigure:SUBarrays:POWer:FRAMe.....	3.54
CONFigure:SUBarrays:POWer:MSLot.....	3.60
CONFigure:SUBarrays:POWer:SLOT.....	3.45
CONFigure:SUBarrays:POWer:XSLot.....	3.50
CONFigure:SUBarrays:POWer[:NORMal]:EPSK.....	6.23
CONFigure:SUBarrays:POWer[:NORMal][:GMSK].....	6.23
CONFigure:SUBarrays:POWer[:NORMal][:GMSK]:MPR.....	6.30
CONFigure:SUBarrays:SPECtrum:MODulation:TDOMain.....	3.112
CONFigure:SUBarrays:SPECtrum:MODulation[:FDOMain].....	3.111
CONFigure:SUBarrays:SPECtrum:SWITching:TDOMain.....	3.123
CONFigure:SUBarrays:SPECtrum:SWITching[:FDOMain].....	3.122
CONFigure:WPOWer:CONTRol:REPetition.....	3.38
CONFigure:WPOWer:EREPorting.....	3.37
CONTInue:MODulation:EVMagnitude:EPSK.....	3.87
CONTInue:MODulation:MERRor:EPSK.....	3.99
CONTInue:MODulation:OVERview:EPSK.....	3.82
CONTInue:MODulation:XPERror[:GMSK].....	3.74
CONTInue:MODulation[:PERRor]:EPSK.....	3.93
CONTInue:MODulation[:PERRor][:GMSK].....	3.66
CONTInue:NPOWer.....	3.40
CONTInue:POWer:FRAMe.....	3.52
CONTInue:POWer:MSLot.....	3.56
CONTInue:POWer:SLOT.....	3.43
CONTInue:POWer:XSLot.....	3.47
CONTInue:POWer[:NORMal]:EPSK.....	6.13
CONTInue:POWer[:NORMal][:GMSK].....	6.13
CONTInue:POWer[:NORMal][:GMSK]:MPR.....	6.28
CONTInue:SPECtrum:MODulation.....	3.106
CONTInue:SPECtrum:MSWitching.....	3.127
CONTInue:SPECtrum:SWITching.....	3.116
CONTInue:WPOWer.....	3.37
DISPlay:POWer:MSLot:CONTRol:GRID.....	3.57
DISPlay:POWer[:NORMal]:EPSK:CONTRol:GRID.....	6.15
DISPlay:POWer[:NORMal][:GMSK]:CONTRol:GRID.....	6.15
FETCh:ARRay:MODulation:EVMagnitude:EPSK:AVERage?.....	3.92
FETCh:ARRay:MODulation:EVMagnitude:EPSK:MMAximum?.....	3.92
FETCh:ARRay:MODulation:EVMagnitude:EPSK[:CURRent]?.....	3.92
FETCh:ARRay:MODulation:MERRor:EPSK:AVERage?.....	3.104
FETCh:ARRay:MODulation:MERRor:EPSK:MMAximum?.....	3.104
FETCh:ARRay:MODulation:MERRor:EPSK[:CURRent]?.....	3.104
FETCh:ARRay:MODulation:XPERror[:GMSK]:AVERage?.....	3.80
FETCh:ARRay:MODulation:XPERror[:GMSK]:MMAximum?.....	3.80
FETCh:ARRay:MODulation:XPERror[:GMSK][:CURRent]?.....	3.80
FETCh:ARRay:MODulation[:PERRor]:EPSK:AVERage?.....	3.98
FETCh:ARRay:MODulation[:PERRor]:EPSK:MMAximum?.....	3.98
FETCh:ARRay:MODulation[:PERRor]:EPSK[:CURRent]?.....	3.98
FETCh:ARRay:MODulation[:PERRor][:GMSK]:AVERage?.....	3.72

Command (Non Signalling, alphabetical)	Page
FETCh:ARRay:MODulation[:PERRor][:GMSK]:MMAximum?	3.72
FETCh:ARRay:MODulation[:PERRor][:GMSK]:CURRentj?	3.72
FETCh:ARRay:POWer:FRAMe?	3.55
FETCh:ARRay:POWer:MSLot:AVERage?	3.62
FETCh:ARRay:POWer:MSLot:MAXimum?	3.62
FETCh:ARRay:POWer:MSLot:MINimum?	3.62
FETCh:ARRay:POWer:MSLot[:CURRentj]?	3.62
FETCh:ARRay:POWer:SLOT?	3.46
FETCh:ARRay:POWer:XSLot?	3.51
FETCh:ARRay:POWer[:NORMal]:EPSK:AVERage?	6.25
FETCh:ARRay:POWer[:NORMal]:EPSK:MAXimum?	6.25
FETCh:ARRay:POWer[:NORMal]:EPSK:MINimum?	6.25
FETCh:ARRay:POWer[:NORMal]:EPSK[:CURRentj]?	6.25
FETCh:ARRay:POWer[:NORMal][:GMSK]:AVERage?	6.25
FETCh:ARRay:POWer[:NORMal][:GMSK]:MAXimum?	6.25
FETCh:ARRay:POWer[:NORMal][:GMSK]:MINimum?	6.25
FETCh:ARRay:POWer[:NORMal][:GMSK]:MPR:AVERage?	6.31
FETCh:ARRay:POWer[:NORMal][:GMSK]:MPR:MAXimum?	6.31
FETCh:ARRay:POWer[:NORMal][:GMSK]:MPR:MINimum?	6.31
FETCh:ARRay:POWer[:NORMal][:GMSK]:MPR[:CURRentj]?	6.31
FETCh:ARRay:POWer[:NORMal][:GMSK]:CURRentj?	6.25
FETCh:ARRay:SPECTrum:MODulation:TDOMain?	3.114
FETCh:ARRay:SPECTrum:MODulation[:FDOMain]:VMPoint?	3.113
FETCh:ARRay:SPECTrum:MODulation[:FDOMain]?	3.113
FETCh:ARRay:SPECTrum:MSWitching:VMPoint?	3.131
FETCh:ARRay:SPECTrum:MSWitching?	3.130
FETCh:ARRay:SPECTrum:SWITching:TDOMain?	3.126
FETCh:ARRay:SPECTrum:SWITching[:FDOMain]:VMPoint?	3.125
FETCh:ARRay:SPECTrum:SWITching[:FDOMain]?	3.124
FETCh:MODulation:EVMAgnitude:EPSK:STATus?	3.87
FETCh:MODulation:MERRor:EPSK:STATus?	3.99
FETCh:MODulation:OVERview:EPSK:STATus?	3.82
FETCh:MODulation:XPERRor[:GMSK]:STATus?	3.74
FETCh:MODulation[:PERRor]:EPSK:STATus?	3.93
FETCh:MODulation[:PERRor][:GMSK]:STATus?	3.67
FETCh:NPOWer:STATus?	3.40
FETCh:POWer:FRAMe:STATus?	3.52
FETCh:POWer:MSLot:STATus?	3.56
FETCh:POWer:SLOT:STATus?	3.43
FETCh:POWer:XSLot:STATus?	3.47
FETCh:POWer[:NORMal]:EPSK:STATus?	6.14
FETCh:POWer[:NORMal][:GMSK]:MPR:STATus?	6.28
FETCh:POWer[:NORMal][:GMSK]:STATus?	6.14
FETCh:RFGenerator:AUXTx:STATus?	6.7
FETCh:RFGenerator[:TX]:STATus?	6.4
FETCh:SPECTrum:MODulation:STATus?	3.106
FETCh:SPECTrum:MSWitching:STATus?	3.128
FETCh:SPECTrum:SWITching:STATus?	3.117
FETCh:SUBarrays:MODulation:EVMAgnitude:EPSK:AVERage?	3.92
FETCh:SUBarrays:MODulation:EVMAgnitude:EPSK:MMAximum?	3.92
FETCh:SUBarrays:MODulation:EVMAgnitude:EPSK[:CURRentj]?	3.92
FETCh:SUBarrays:MODulation:MERRor:EPSK:AVERage?	3.104

Command (Non Signalling, alphabetical)	Page
FETCh:SUBarrays:MODulation:MERRor:EPSK:MMAXimum?	3.104
FETCh:SUBarrays:MODulation:MERRor:EPSK[:CURRent]?	3.104
FETCh:SUBarrays:MODulation:XPERror[:GMSK]:AVERage?	3.81
FETCh:SUBarrays:MODulation:XPERror[:GMSK]:MMAXimum?	3.81
FETCh:SUBarrays:MODulation:XPERror[:GMSK][:CURRent]?	3.81
FETCh:SUBarrays:MODulation[:PERRor]:EPSK:AVERage?	3.98
FETCh:SUBarrays:MODulation[:PERRor]:EPSK:MMAXimum?	3.98
FETCh:SUBarrays:MODulation[:PERRor]:EPSK[:CURRent]?	3.98
FETCh:SUBarrays:MODulation[:PERRor][:GMSK]:AVERage?	3.73
FETCh:SUBarrays:MODulation[:PERRor][:GMSK]:MMAXimum?	3.73
FETCh:SUBarrays:MODulation[:PERRor][:GMSK][:CURRent]?	3.73
FETCh:SUBarrays:POWer:FRAMe?	3.55
FETCh:SUBarrays:POWer:MSLot:AVERage?	3.63
FETCh:SUBarrays:POWer:MSLot:MAXimum?	3.63
FETCh:SUBarrays:POWer:MSLot:MINimum?	3.63
FETCh:SUBarrays:POWer:MSLot[:CURRent]?	3.63
FETCh:SUBarrays:POWer:SLOT?	3.46
FETCh:SUBarrays:POWer:XSLot?	3.51
FETCh:SUBarrays:POWer[:NORMal]:EPSK:AVERage?	6.26
FETCh:SUBarrays:POWer[:NORMal]:EPSK:MAXimum?	6.26
FETCh:SUBarrays:POWer[:NORMal]:EPSK:MINimum?	6.26
FETCh:SUBarrays:POWer[:NORMal]:EPSK[:CURRent]?	6.26
FETCh:SUBarrays:POWer[:NORMal][:GMSK]:AVERage?	6.26
FETCh:SUBarrays:POWer[:NORMal][:GMSK]:MAXimum?	6.26
FETCh:SUBarrays:POWer[:NORMal][:GMSK]:MINimum?	6.26
FETCh:SUBarrays:POWer[:NORMal][:GMSK]:MPR:AVERage?	6.32
FETCh:SUBarrays:POWer[:NORMal][:GMSK]:MPR:MAXimum?	6.32
FETCh:SUBarrays:POWer[:NORMal][:GMSK]:MPR:MINimum?	6.32
FETCh:SUBarrays:POWer[:NORMal][:GMSK]:MPR[:CURRent]?	6.32
FETCh:SUBarrays:POWer[:NORMal][:GMSK][:CURRent]?	6.26
FETCh:SUBarrays:SPECTrum:MODulation:TDOMain?	3.115
FETCh:SUBarrays:SPECTrum:MODulation[:FDOMain]?	3.114
FETCh:SUBarrays:SPECTrum:SWITching:TDOMain?	3.126
FETCh:SUBarrays:SPECTrum:SWITching[:FDOMain]?	3.125
FETCh:WPOWer:STATus?	3.38
FETCh[:SCALar]:MODulation:EVMAgnitude:EPSK?	3.91
FETCh[:SCALar]:MODulation:MERRor:EPSK?	3.103
FETCh[:SCALar]:MODulation:OVERview:EPSK?	3.85
FETCh[:SCALar]:MODulation:XPERror[:GMSK]?	3.79
FETCh[:SCALar]:MODulation[:PERRor]:EPSK?	3.97
FETCh[:SCALar]:MODulation[:PERRor][:GMSK]?	3.71
FETCh[:SCALar]:NPOWer?	3.42
FETCh[:SCALar]:POWer:FRAMe:FPOWer<nr>?	3.55
FETCh[:SCALar]:POWer:MSLot?	3.61
FETCh[:SCALar]:POWer:SLOT:SPOWer<nr>?	3.46
FETCh[:SCALar]:POWer:XSLot:SPOWer<nr>?	3.51
FETCh[:SCALar]:POWer[:NORMal]:EPSK?	6.23
FETCh[:SCALar]:POWer[:NORMal][:GMSK]:MPR?	6.31
FETCh[:SCALar]:POWer[:NORMal][:GMSK]?	6.23
FETCh[:SCALar]:SPECTrum:MODulation?	3.112
FETCh[:SCALar]:SPECTrum:MSWitching?	3.130
FETCh[:SCALar]:SPECTrum:SWITching?	3.124

Command (Non Signalling, alphabetical)	Page
FETCh[:SCALar]:WPOWer?	3.39
INITiate:MODulation:EVMagnitude:EPSK	3.87
INITiate:MODulation:MERRor:EPSK	3.99
INITiate:MODulation:OVERview:EPSK	3.82
INITiate:MODulation:XPERRor[:GMSK]	3.74
INITiate:MODulation[:PERRor]:EPSK	3.93
INITiate:MODulation[:PERRor][:GMSK]	3.66
INITiate:NPOWer	3.40
INITiate:POWer:FRAMe	3.52
INITiate:POWer:MSLot	3.56
INITiate:POWer:SLOT	3.43
INITiate:POWer:XSLot	3.47
INITiate:POWer[:NORMal]:EPSK	6.13
INITiate:POWer[:NORMal][:GMSK]	6.13
INITiate:POWer[:NORMal][:GMSK]:MPR	6.28
INITiate:RFGenerator	6.7
INITiate:RFGenerator[:TX]	6.4
INITiate:SPECtrum:MODulation	3.106
INITiate:SPECtrum:MSWitching	3.127
INITiate:SPECtrum:SWITChing	3.116
INITiate:WPOWer	3.37
INPut[:STATe]	6.8
IQIF:DEFault	3.36
MMEMory:RECall:CURRent	6.12
MMEMory:SAVE:CURRent	6.12
OUTPut:AUXTx[:STATe]	6.9
OUTPut[:STATe]	6.8
READ:ARRay:MODulation:EVMagnitude:EPSK:AVERage?	3.92
READ:ARRay:MODulation:EVMagnitude:EPSK:MMAximum?	3.92
READ:ARRay:MODulation:EVMagnitude:EPSK[:CURRent]?	3.92
READ:ARRay:MODulation:MERRor:EPSK:AVERage?	3.104
READ:ARRay:MODulation:MERRor:EPSK:MMAximum?	3.104
READ:ARRay:MODulation:MERRor:EPSK[:CURRent]?	3.104
READ:ARRay:MODulation:XPERRor[:GMSK]:AVERage?	3.80
READ:ARRay:MODulation:XPERRor[:GMSK]:MMAximum?	3.80
READ:ARRay:MODulation:XPERRor[:GMSK][:CURRent]?	3.80
READ:ARRay:MODulation[:PERRor]:EPSK:AVERage?	3.98
READ:ARRay:MODulation[:PERRor]:EPSK:MMAximum?	3.98
READ:ARRay:MODulation[:PERRor]:EPSK[:CURRent]?	3.98
READ:ARRay:MODulation[:PERRor][:GMSK]:AVERage?	3.72
READ:ARRay:MODulation[:PERRor][:GMSK]:MMAximum?	3.72
READ:ARRay:MODulation[:PERRor][:GMSK][:CURRent]?	3.72
READ:ARRay:POWer:FRAMe?	3.55
READ:ARRay:POWer:MSLot:AVERage?	3.62
READ:ARRay:POWer:MSLot:MAximum?	3.62
READ:ARRay:POWer:MSLot:MINimum?	3.62
READ:ARRay:POWer:MSLot[:CURRent]?	3.62
READ:ARRay:POWer:SLOT?	3.46
READ:ARRay:POWer:XSLot?	3.51
READ:ARRay:POWer[:NORMal]:EPSK:AVERage?	6.25
READ:ARRay:POWer[:NORMal]:EPSK:MAximum?	6.25
READ:ARRay:POWer[:NORMal]:EPSK:MINimum?	6.25

Command (Non Signalling, alphabetical)	Page
READ:ARRay:POWer[:NORMal]:EPSK[:CURRent]?	6.25
READ:ARRay:POWer[:NORMal]:GMSK:AVERAge?	6.25
READ:ARRay:POWer[:NORMal]:GMSK:MAXimum?	6.25
READ:ARRay:POWer[:NORMal]:GMSK:MINimum?	6.25
READ:ARRay:POWer[:NORMal]:GMSK:MPR:AVERAge?	6.31
READ:ARRay:POWer[:NORMal]:GMSK:MPR:MAXimum?	6.31
READ:ARRay:POWer[:NORMal]:GMSK:MPR:MINimum?	6.31
READ:ARRay:POWer[:NORMal]:GMSK:MPR[:CURRent]?	6.31
READ:ARRay:POWer[:NORMal]:GMSK[:CURRent]?	6.25
READ:ARRay:SPEctrum:MODulation:TDOMain?	3.114
READ:ARRay:SPEctrum:MODulation[:FDOMain]:VMPoint?	3.113
READ:ARRay:SPEctrum:MODulation[:FDOMain]?	3.113
READ:ARRay:SPEctrum:MSWitching:VMPoint?	3.131
READ:ARRay:SPEctrum:MSWitching?	3.130
READ:ARRay:SPEctrum:SWITching:TDOMain?	3.126
READ:ARRay:SPEctrum:SWITching[:FDOMain]:VMPoint?	3.125
READ:ARRay:SPEctrum:SWITching[:FDOMain]?	3.124
READ:SUBarrays:MODulation:EVMagnitude:EPSK:AVERAge?	3.92
READ:SUBarrays:MODulation:EVMagnitude:EPSK:MMAximum?	3.92
READ:SUBarrays:MODulation:EVMagnitude:EPSK[:CURRent]?	3.92
READ:SUBarrays:MODulation:MERRor:EPSK:AVERAge?	3.104
READ:SUBarrays:MODulation:MERRor:EPSK:MMAximum?	3.104
READ:SUBarrays:MODulation:MERRor:EPSK[:CURRent]?	3.104
READ:SUBarrays:MODulation:XPERRor[:GMSK]:AVERAge?	3.81
READ:SUBarrays:MODulation:XPERRor[:GMSK]:MMAximum?	3.81
READ:SUBarrays:MODulation:XPERRor[:GMSK][:CURRent]?	3.81
READ:SUBarrays:MODulation[:PERRor]:EPSK:AVERAge?	3.98
READ:SUBarrays:MODulation[:PERRor]:EPSK:MMAximum?	3.98
READ:SUBarrays:MODulation[:PERRor]:EPSK[:CURRent]?	3.98
READ:SUBarrays:MODulation[:PERRor]:GMSK:AVERAge?	3.73
READ:SUBarrays:MODulation[:PERRor]:GMSK:MMAximum?	3.73
READ:SUBarrays:MODulation[:PERRor]:GMSK[:CURRent]?	3.73
READ:SUBarrays:POWer:FRAMe?	3.55
READ:SUBarrays:POWer:MSLot:AVERAge?	3.63
READ:SUBarrays:POWer:MSLot:MAXimum?	3.63
READ:SUBarrays:POWer:MSLot:MINimum?	3.63
READ:SUBarrays:POWer:MSLot[:CURRent]?	3.63
READ:SUBarrays:POWer:SLOT?	3.46
READ:SUBarrays:POWer:XSLot?	3.51
READ:SUBarrays:POWer[:NORMal]:EPSK:AVERAge?	6.26
READ:SUBarrays:POWer[:NORMal]:EPSK:MAXimum?	6.26
READ:SUBarrays:POWer[:NORMal]:EPSK:MINimum?	6.26
READ:SUBarrays:POWer[:NORMal]:EPSK[:CURRent]?	6.26
READ:SUBarrays:POWer[:NORMal]:GMSK:AVERAge?	6.26
READ:SUBarrays:POWer[:NORMal]:GMSK:MAXimum?	6.26
READ:SUBarrays:POWer[:NORMal]:GMSK:MINimum?	6.26
READ:SUBarrays:POWer[:NORMal]:GMSK:MPR:AVERAge?	6.32
READ:SUBarrays:POWer[:NORMal]:GMSK:MPR:MAXimum?	6.32
READ:SUBarrays:POWer[:NORMal]:GMSK:MPR:MINimum?	6.32
READ:SUBarrays:POWer[:NORMal]:GMSK:MPR[:CURRent]?	6.32
READ:SUBarrays:POWer[:NORMal]:GMSK[:CURRent]?	6.26
READ:SUBarrays:SPEctrum:MODulation:TDOMain?	3.115

Command (Non Signalling, alphabetical)	Page
READ:SUBarrays:SPECTrum:MODulation[:FDOMain]?	3.114
READ:SUBarrays:SPECTrum:SWITching:TDOMain?	3.126
READ:SUBarrays:SPECTrum:SWITching[:FDOMain]?	3.125
READ[:SCALar]:MODulation:EVMagnitude:EPSK?	3.91
READ[:SCALar]:MODulation:MERRor:EPSK?	3.103
READ[:SCALar]:MODulation:OVERview:EPSK?	3.85
READ[:SCALar]:MODulation:XPERror[:GMSK]?	3.79
READ[:SCALar]:MODulation[:PERRor]:EPSK?	3.97
READ[:SCALar]:MODulation[:PERRor][:GMSK]?	3.71
READ[:SCALar]:NPOWer?	3.42
READ[:SCALar]:POWer:FRAMe:FPOWer<nr>?	3.55
READ[:SCALar]:POWer:MSLot?	3.61
READ[:SCALar]:POWer:SLOT:SPOWer<nr>?	3.46
READ[:SCALar]:POWer:XSLot:SPOWer<nr>?	3.51
READ[:SCALar]:POWer[:NORMal]:EPSK?	6.23
READ[:SCALar]:POWer[:NORMal][:GMSK]:MPR?	6.31
READ[:SCALar]:POWer[:NORMal][:GMSK]?	6.23
READ[:SCALar]:SPECTrum:MODulation?	3.112
READ[:SCALar]:SPECTrum:MSWitching?	3.130
READ[:SCALar]:SPECTrum:SWITching?	3.124
READ[:SCALar]:WPOWer?	3.39
RFANalyzer:DEFault	6.4
SAMPlE:ARRay:MODulation:EVMagnitude:EPSK:AVERage?	3.92
SAMPlE:ARRay:MODulation:EVMagnitude:EPSK:MMAximum?	3.92
SAMPlE:ARRay:MODulation:EVMagnitude:EPSK[:CURRent]?	3.92
SAMPlE:ARRay:MODulation:MERRor:EPSK:AVERage?	3.104
SAMPlE:ARRay:MODulation:MERRor:EPSK:MMAximum?	3.104
SAMPlE:ARRay:MODulation:MERRor:EPSK[:CURRent]?	3.104
SAMPlE:ARRay:MODulation:XPERror[:GMSK]:AVERage?	3.80
SAMPlE:ARRay:MODulation:XPERror[:GMSK]:MMAximum?	3.80
SAMPlE:ARRay:MODulation:XPERror[:GMSK][:CURRent]?	3.80
SAMPlE:ARRay:MODulation[:PERRor]:EPSK:AVERage?	3.98
SAMPlE:ARRay:MODulation[:PERRor]:EPSK:MMAximum?	3.98
SAMPlE:ARRay:MODulation[:PERRor]:EPSK[:CURRent]?	3.98
SAMPlE:ARRay:MODulation[:PERRor][:GMSK]:AVERage?	3.72
SAMPlE:ARRay:MODulation[:PERRor][:GMSK]:MMAximum?	3.72
SAMPlE:ARRay:MODulation[:PERRor][:GMSK][:CURRent]?	3.72
SAMPlE:ARRay:POWer:FRAMe?	3.55
SAMPlE:ARRay:POWer:MSLot:AVERage?	3.62
SAMPlE:ARRay:POWer:MSLot:MAximum?	3.62
SAMPlE:ARRay:POWer:MSLot:MINimum?	3.62
SAMPlE:ARRay:POWer:MSLot[:CURRent]?	3.62
SAMPlE:ARRay:POWer:SLOT?	3.46
SAMPlE:ARRay:POWer:XSLot?	3.51
SAMPlE:ARRay:POWer[:NORMal]:EPSK:AVERage?	6.25
SAMPlE:ARRay:POWer[:NORMal]:EPSK:MAximum?	6.25
SAMPlE:ARRay:POWer[:NORMal]:EPSK:MINimum?	6.25
SAMPlE:ARRay:POWer[:NORMal]:EPSK[:CURRent]?	6.25
SAMPlE:ARRay:POWer[:NORMal][:GMSK]:AVERage?	6.25
SAMPlE:ARRay:POWer[:NORMal][:GMSK]:MAximum?	6.25
SAMPlE:ARRay:POWer[:NORMal][:GMSK]:MINimum?	6.25
SAMPlE:ARRay:POWer[:NORMal][:GMSK]:MPR:AVERage?	6.31

Command (Non Signalling, alphabetical)	Page
SAMPlE:ARRAy:POWer[:NORMAl][:GMSK]:MPR:MAXimum?	6.31
SAMPlE:ARRAy:POWer[:NORMAl][:GMSK]:MPR:MINimum?	6.31
SAMPlE:ARRAy:POWer[:NORMAl][:GMSK]:MPR[:CURRent]?	6.31
SAMPlE:ARRAy:POWer[:NORMAl][:GMSK][:CURRent]?	6.25
SAMPlE:ARRAy:SPEcTrum:MODulation:TDOMain?	3.114
SAMPlE:ARRAy:SPEcTrum:MODulation[:FDOMain]:VMPoint?	3.113
SAMPlE:ARRAy:SPEcTrum:MODulation[:FDOMain]?	3.113
SAMPlE:ARRAy:SPEcTrum:MSWitching:VMPoint?	3.131
SAMPlE:ARRAy:SPEcTrum:MSWitching?	3.130
SAMPlE:ARRAy:SPEcTrum:SWITching:TDOMain?	3.126
SAMPlE:ARRAy:SPEcTrum:SWITching[:FDOMain]:VMPoint?	3.125
SAMPlE:ARRAy:SPEcTrum:SWITching[:FDOMain]?	3.124
SAMPlE:SUBarrays:MODulation:EVMagNitude:EPSK:AVERage?	3.92
SAMPlE:SUBarrays:MODulation:EVMagNitude:EPSK:MMAximum?	3.92
SAMPlE:SUBarrays:MODulation:EVMagNitude:EPSK[:CURRent]?	3.92
SAMPlE:SUBarrays:MODulation:MERRor:EPSK:AVERage?	3.104
SAMPlE:SUBarrays:MODulation:MERRor:EPSK:MMAximum?	3.104
SAMPlE:SUBarrays:MODulation:MERRor:EPSK[:CURRent]?	3.104
SAMPlE:SUBarrays:MODulation:XPERror[:GMSK]:AVERage?	3.81
SAMPlE:SUBarrays:MODulation:XPERror[:GMSK]:MMAximum?	3.81
SAMPlE:SUBarrays:MODulation:XPERror[:GMSK][:CURRent]?	3.81
SAMPlE:SUBarrays:MODulation[:PERRor]:EPSK:AVERage?	3.98
SAMPlE:SUBarrays:MODulation[:PERRor]:EPSK:MMAximum?	3.98
SAMPlE:SUBarrays:MODulation[:PERRor]:EPSK[:CURRent]?	3.98
SAMPlE:SUBarrays:MODulation[:PERRor][:GMSK]:AVERage?	3.73
SAMPlE:SUBarrays:MODulation[:PERRor][:GMSK]:MMAximum?	3.73
SAMPlE:SUBarrays:MODulation[:PERRor][:GMSK][:CURRent]?	3.73
SAMPlE:SUBarrays:POWer:FRAMe?	3.55
SAMPlE:SUBarrays:POWer:MSLot:AVERage?	3.63
SAMPlE:SUBarrays:POWer:MSLot:MAXimum?	3.63
SAMPlE:SUBarrays:POWer:MSLot:MINimum?	3.63
SAMPlE:SUBarrays:POWer:MSLot[:CURRent]?	3.63
SAMPlE:SUBarrays:POWer:SLOT?	3.46
SAMPlE:SUBarrays:POWer:XSLot?	3.51
SAMPlE:SUBarrays:POWer[:NORMAl]:EPSK:AVERage?	6.26
SAMPlE:SUBarrays:POWer[:NORMAl]:EPSK:MAXimum?	6.26
SAMPlE:SUBarrays:POWer[:NORMAl]:EPSK:MINimum?	6.26
SAMPlE:SUBarrays:POWer[:NORMAl]:EPSK[:CURRent]?	6.26
SAMPlE:SUBarrays:POWer[:NORMAl][:GMSK]:AVERage?	6.26
SAMPlE:SUBarrays:POWer[:NORMAl][:GMSK]:MAXimum?	6.26
SAMPlE:SUBarrays:POWer[:NORMAl][:GMSK]:MINimum?	6.26
SAMPlE:SUBarrays:POWer[:NORMAl][:GMSK]:MPR:AVERage?	6.32
SAMPlE:SUBarrays:POWer[:NORMAl][:GMSK]:MPR:MAXimum?	6.32
SAMPlE:SUBarrays:POWer[:NORMAl][:GMSK]:MPR:MINimum?	6.32
SAMPlE:SUBarrays:POWer[:NORMAl][:GMSK]:MPR[:CURRent]?	6.32
SAMPlE:SUBarrays:POWer[:NORMAl][:GMSK][:CURRent]?	6.26
SAMPlE:SUBarrays:SPEcTrum:MODulation:TDOMain?	3.115
SAMPlE:SUBarrays:SPEcTrum:MODulation[:FDOMain]?	3.114
SAMPlE:SUBarrays:SPEcTrum:SWITching:TDOMain?	3.126
SAMPlE:SUBarrays:SPEcTrum:SWITching[:FDOMain]?	3.125
SAMPlE[:SCALar]:MODulation:EVMagNitude:EPSK?	3.91
SAMPlE[:SCALar]:MODulation:MERRor:EPSK?	3.103

Command (Non Signalling, alphabetical)	Page
SAMPlE[:SCALar]:MODulation:OVERview:EPsk?	3.85
SAMPlE[:SCALar]:MODulation:XPError[:GMSK]?	3.79
SAMPlE[:SCALar]:MODulation[:PERror]:EPsk?	3.97
SAMPlE[:SCALar]:MODulation[:PERror][:GMSK]?	3.71
SAMPlE[:SCALar]:NPOWer?	3.42
SAMPlE[:SCALar]:POWer:FRAMe:FPOWer<nr>?	3.55
SAMPlE[:SCALar]:POWer:MSLot?	3.61
SAMPlE[:SCALar]:POWer:SLOT:SPOWer<nr>?	3.46
SAMPlE[:SCALar]:POWer:XSLot:SPOWer<nr>?	3.51
SAMPlE[:SCALar]:POWer[:NORMal]:EPsk?	6.23
SAMPlE[:SCALar]:POWer[:NORMal][:GMSK]:MPR?	6.31
SAMPlE[:SCALar]:POWer[:NORMal][:GMSK]?	6.23
SAMPlE[:SCALar]:SPECTrum:MODulation?	3.112
SAMPlE[:SCALar]:SPECTrum:MSWitching?	3.130
SAMPlE[:SCALar]:SPECTrum:SWITching?	3.124
SAMPlE[:SCALar]:WPOWer?	3.39
[SENSe:]ARRay:POWer:MSLot:AREA:LIMit:INFO:STIME?	3.65
[SENSe:]ARRay:POWer:MSLot:AREA:LIMit:LOWer:INFO?	3.64
[SENSe:]ARRay:POWer:MSLot:AREA:LIMit:LOWer:LEVel?	3.64
[SENSe:]ARRay:POWer:MSLot:AREA:LIMit:LOWer:TIME?	3.64
[SENSe:]ARRay:POWer:MSLot:AREA:LIMit:UPPer:INFO?	3.64
[SENSe:]ARRay:POWer:MSLot:AREA:LIMit:UPPer:LEVel?	3.64
[SENSe:]ARRay:POWer:MSLot:AREA:LIMit:UPPer:TIME?	3.64
[SENSe:]CORRection:LOSS:INPut<nr>[:MAGNitude]	6.8
[SENSe:]CORRection:LOSS:OUTPut<nr>:AUXTx[:MAGNitude]	6.9
[SENSe:]CORRection:LOSS:OUTPut<nr>[:MAGNitude]	6.9
[SENSe:]LEVel:ATTenuation	6.2
[SENSe:]LEVel:DEFault	6.2
[SENSe:]LEVel:MAXimum	6.2
[SENSe:]LEVel:MODE	6.1
[SENSe:]RFANalyzer:CHANnel	6.3
[SENSe:]RFANalyzer:FREQuency:OFFSet	6.3
[SENSe:]RFANalyzer:MODulation	6.3
[SENSe:]RFANalyzer:TSEquence	6.3
[SENSe:]SPECTrum:MODulation:LIMit:LINE:USED?	3.109
[SENSe:]SPECTrum:MSWitching:LIMit:LINE:USED?	3.129
[SENSe:]SPECTrum:SWITching:LIMit:LINE:USED?	3.119
SOURce:CORRection:LOSS:INPut<nr>[:MAGNitude]	6.8
SOURce:CORRection:LOSS:OUTPut<nr>:AUXTx[:MAGNitude]	6.9
SOURce:CORRection:LOSS:OUTPut<nr>[:MAGNitude]	6.9
SOURce:DM:CLOCK:FREQuency	6.10
SOURce:DM:CLOCK:STATe	6.10
SOURce:RFGenerator:AUXTx:FREQuency[:CHANnel]	6.6
SOURce:RFGenerator:AUXTx:LEVel	6.8
SOURce:RFGenerator:FM:DEViation	6.5
SOURce:RFGenerator[:TX]:FREQuency[:CHANnel]	6.6
SOURce:RFGenerator[:TX]:LEVel:UNTimeslot	6.5
SOURce:RFGenerator[:TX]:LEVel:UTIMeslot	6.5
STATus:OPERation:SYMBOLic:ENABLE	3.37
STATus:OPERation:SYMBOLic:EVENT?	3.37
STOP:MODulation:EVMagnitude:EPsk	3.87
STOP:MODulation:MERRor:EPsk	3.99

Command (Non Signalling, alphabetical)	Page
STOP:MODulation:OVERview:EPSK.....	3.82
STOP:MODulation:XPERror[:GMSK].....	3.74
STOP:MODulation[:PERRor]:EPSK.....	3.93
STOP:MODulation[:PERRor][:GMSK].....	3.66
STOP:NPOWer.....	3.40
STOP:POWer:FRAMe.....	3.52
STOP:POWer:MSLot.....	3.56
STOP:POWer:SLOT.....	3.43
STOP:POWer:XSLot.....	3.47
STOP:POWer[:NORMal]:EPSK.....	6.13
STOP:POWer[:NORMal][:GMSK].....	6.13
STOP:POWer[:NORMal][:GMSK]:MPR.....	6.28
STOP:SPECTrum:MODulation.....	3.106
STOP:SPECTrum:MSWitching.....	3.127
STOP:SPECTrum:SWITching.....	3.116
STOP:WPOWer.....	3.37
SYSTem:OPTions:INFO:CURRent?.....	3.34
SYSTem:RESet:CURRent.....	3.35
TRIGger[:SEQuence]:DEFault.....	6.11
TRIGger[:SEQuence]:SLOPe.....	6.11
TRIGger[:SEQuence]:SOURce.....	6.10
TRIGger[:SEQuence]:SOURce:EXTernal.....	6.11
TRIGger[:SEQuence]:THReshold:IFPower.....	6.11
TRIGger[:SEQuence]:THReshold:RFPower.....	6.11

Table 6-4 Remote control commands: Signalling mode

Command (Signalling, alphabetical)	Page
ABORt:MODulation:EVMagnitude:EPSK	3.87
ABORt:MODulation:MERRor:EPSK	3.99
ABORt:MODulation:OVERview:EPSK	3.82
ABORt:MODulation:XPERror[:GMSK]	3.74
ABORt:MODulation[:PERRor]:EPSK	3.93
ABORt:MODulation[:PERRor][:GMSK]	3.66
ABORt:NPOWer	3.40
ABORt:POWer:ABURst[:GMSK]	6.148
ABORt:POWer:FRAMe	3.52
ABORt:POWer:MSLot	3.56
ABORt:POWer:PCL	6.154
ABORt:POWer:SLOT	3.43
ABORt:POWer:XSLot	3.47
ABORt:POWer[:NORMal]:EPSK	6.132
ABORt:POWer[:NORMal][:GMSK]	6.132
ABORt:POWer[:NORMal][:GMSK]:MPR	6.158
ABORt:RXQuality:BAverage	6.175
ABORt:RXQuality:BER	6.166
ABORt:RXQuality:BLER	6.182
ABORt:SPECTrum:MODulation	3.106
ABORt:SPECTrum:MSWitching	3.127
ABORt:SPECTrum:SWITChing	3.116
ABORt:WPOWer	3.37
CALCulate:ARRay:POWer:ABURst[:GMSK]:AREA:LIMit:MATChing?	6.153
CALCulate:ARRay:POWer:ABURst[:GMSK]:LIMit:MATChing?	6.153
CALCulate:ARRay:POWer:MSLot:AREA:LIMit:MATChing:MINimum?	3.63
CALCulate:ARRay:POWer:MSLot:AREA:LIMit:MATChing[:CURRent]?	3.63
CALCulate:ARRay:POWer:MSLot:LIMit:MATChing:MINimum?	3.63
CALCulate:ARRay:POWer:MSLot:LIMit:MATChing[:CURRent]?	3.63
CALCulate:ARRay:POWer[:NORMal]:EPSK:AREA:LIMit:MATChing:AVERage?	6.147
CALCulate:ARRay:POWer[:NORMal]:EPSK:AREA:LIMit:MATChing:MAXimum?	6.147
CALCulate:ARRay:POWer[:NORMal]:EPSK:AREA:LIMit:MATChing:MINimum?	6.147
CALCulate:ARRay:POWer[:NORMal]:EPSK:AREA:LIMit:MATChing[:CURRent]?	6.147
CALCulate:ARRay:POWer[:NORMal]:EPSK:LIMit:MATChing:AVERage?	6.147
CALCulate:ARRay:POWer[:NORMal]:EPSK:LIMit:MATChing:MAXimum?	6.147
CALCulate:ARRay:POWer[:NORMal]:EPSK:LIMit:MATChing:MINimum?	6.147
CALCulate:ARRay:POWer[:NORMal]:EPSK:LIMit:MATChing[:CURRent]?	6.147
CALCulate:ARRay:POWer[:NORMal][:GMSK]:AREA:LIMit:MATChing:AVERage?	6.147
CALCulate:ARRay:POWer[:NORMal][:GMSK]:AREA:LIMit:MATChing:MAXimum?	6.147
CALCulate:ARRay:POWer[:NORMal][:GMSK]:AREA:LIMit:MATChing:MINimum?	6.147
CALCulate:ARRay:POWer[:NORMal][:GMSK]:AREA:LIMit:MATChing[:CURRent]?	6.147
CALCulate:ARRay:POWer[:NORMal][:GMSK]:LIMit:MATChing:AVERage?	6.147
CALCulate:ARRay:POWer[:NORMal][:GMSK]:LIMit:MATChing:MAXimum?	6.147
CALCulate:ARRay:POWer[:NORMal][:GMSK]:LIMit:MATChing:MINimum?	6.147
CALCulate:ARRay:POWer[:NORMal][:GMSK]:LIMit:MATChing[:CURRent]?	6.147
CALCulate:ARRay:SPECTrum:MODulation[:FDOMain]:AREA:LIMit:MATChing?	3.114
CALCulate:ARRay:SPECTrum:MSWitching:AREA:LIMit:MATChing?	3.131
CALCulate:ARRay:SPECTrum:SWITChing[:FDOMain]:AREA:LIMit:MATChing?	3.125
CALCulate:MODulation:EVMagnitude:EPSK:LIMit:MATChing?	3.91
CALCulate:MODulation:MERRor:EPSK:LIMit:MATChing?	3.103

Command (Signalling, alphabetical)	Page
CALCulate:MODulation:OVERview:EPSK:LIMit:MATChing?	3.86
CALCulate:MODulation:XPERror[:GMSK]:LIMit:MATChing?	3.80
CALCulate:MODulation[:PERRor]:EPSK:LIMit:MATChing?	3.97
CALCulate:MODulation[:PERRor][:GMSK]:LIMit:MATChing?	3.72
CALCulate:POWer:ABURst[:GMSK]:LIMit:MATChing?	6.152
CALCulate:POWer:MSLot:LIMit:MATChing?	3.61
CALCulate:POWer:PCL[:CURRent]:LIMit:MATChing?	6.157
CALCulate:POWer[:NORMal]:EPSK:LIMit:MATChing?	6.144
CALCulate:POWer[:NORMal][:GMSK]:LIMit:MATChing?	6.144
CALCulate:POWer[:NORMal][:GMSK]:MPR:LIMit:MATChing?	6.163
CALCulate:RXQuality:BAverage:LIMit:MATChing?	6.181
CALCulate:RXQuality:BER:LIMit:MATChing?	6.174
CONFigure:BSSignal:CCH:AUXTx:CHANnel	6.206
CONFigure:BSSignal:CCH:AUXTx:CHType	6.205
CONFigure:BSSignal:CCH:AUXTx:LEVel[:ABSolute]	6.206
CONFigure:BSSignal:CCH[:TX]:CHANnel	6.200
CONFigure:BSSignal:CCH[:TX]:LEVel[:ABSolute]	6.201
CONFigure:BSSignal:CCH[:TX]:MODE	6.200
CONFigure:BSSignal:FM:DEVIation	6.200
CONFigure:BSSignal:PDATA[:TCH]:MSLot:CHANnel	6.233
CONFigure:BSSignal:PDATA[:TCH]:MSLot:FHOPping:SEquence	6.233
CONFigure:BSSignal:PDATA[:TCH]:MSLot:MTIMeslot	6.233
CONFigure:BSSignal:PDATA[:TCH]:MSLot:PZERo	6.232
CONFigure:BSSignal:PDATA[:TCH]:MSLot:SCONfig	6.234
CONFigure:BSSignal[:CSWitched][:TCH]:CHANnel	6.201
CONFigure:BSSignal[:CSWitched][:TCH]:LEVel:UNTimeslot	6.202
CONFigure:BSSignal[:CSWitched][:TCH]:LEVel:UTIMeslot	6.201
CONFigure:BSSignal[:CSWitched][:TCH]:MSLot:LMODE	6.204
CONFigure:BSSignal[:CSWitched][:TCH]:MSLot:MTIMeslot	6.204
CONFigure:BSSignal[:CSWitched][:TCH]:MSLot:RLEVel	6.203
CONFigure:BSSignal[:CSWitched][:TCH]:MSLot:SCONfig:INDividual	6.205
CONFigure:BSSignal[:CSWitched][:TCH]:MSLot:SCONfig:UUNused	6.204
CONFigure:BSSignal[:CSWitched][:TCH][:SSLot]:FHOPping:A	6.202
CONFigure:BSSignal[:CSWitched][:TCH][:SSLot]:FHOPping:B	6.202
CONFigure:BSSignal[:CSWitched][:TCH][:SSLot]:FHOPping:C	6.202
CONFigure:BSSignal[:CSWitched][:TCH][:SSLot]:FHOPping:D	6.202
CONFigure:BSSignal[:CSWitched][:TCH][:SSLot]:TIMeslot	6.202
CONFigure:HANDover:ALERTing	6.196
CONFigure:HANDover:CSYNc	6.196
CONFigure:HANDover:TARGet	6.196
CONFigure:IQIF:RXPath	3.36
CONFigure:IQIF:RXTXcombined	3.35
CONFigure:IQIF:TXPath	3.36
CONFigure:MCONtrol:MSLot:MESLot	6.197
CONFigure:MODulation:EVMagnitude:EPSK:CONTRol	3.88
CONFigure:MODulation:EVMagnitude:EPSK:CONTRol:DEFault	3.89
CONFigure:MODulation:EVMagnitude:EPSK:CONTRol:REPetition	3.88
CONFigure:MODulation:EVMagnitude:EPSK:EREPorting	3.87
CONFigure:MODulation:MERRor:EPSK:CONTRol	3.100
CONFigure:MODulation:MERRor:EPSK:CONTRol:DEFault	3.101
CONFigure:MODulation:MERRor:EPSK:CONTRol:REPetition	3.100
CONFigure:MODulation:MERRor:EPSK:EREPorting	3.99

Command (Signalling, alphabetical)	Page
CONFigure:MODulation:OEMP:EPSK:LIMit:AVERage	3.84
CONFigure:MODulation:OEMP:EPSK:LIMit:DEFault	3.85
CONFigure:MODulation:OEMP:EPSK:LIMit:P95Th	3.85
CONFigure:MODulation:OEMP:EPSK:LIMit[:CURRent]	3.84
CONFigure:MODulation:OVERview:EPSK:CONTRol	3.83
CONFigure:MODulation:OVERview:EPSK:CONTRol:DEFault	3.84
CONFigure:MODulation:OVERview:EPSK:CONTRol:REPetition	3.83
CONFigure:MODulation:OVERview:EPSK:EREPorting	3.82
CONFigure:MODulation:XPERror[:GMSK]:CONTRol	3.75
CONFigure:MODulation:XPERror[:GMSK]:CONTRol:DEFault	3.76
CONFigure:MODulation:XPERror[:GMSK]:CONTRol:REPetition	3.76
CONFigure:MODulation:XPERror[:GMSK]:EREPorting	3.74
CONFigure:MODulation:XPERror[:GMSK]:FILTer	3.75
CONFigure:MODulation:XPERror[:GMSK]:LIMit:AVERage	3.77
CONFigure:MODulation:XPERror[:GMSK]:LIMit:DEFault	3.77
CONFigure:MODulation:XPERror[:GMSK]:LIMit:LOWer:MODE	3.77
CONFigure:MODulation:XPERror[:GMSK]:LIMit:UPPer:MODE	3.77
CONFigure:MODulation:XPERror[:GMSK]:LIMit[:CURRent]	3.76
CONFigure:MODulation:XPERror[:GMSK]:TIME:DECode	3.75
CONFigure:MODulation[:PERRor]:EPSK:CONTRol	3.94
CONFigure:MODulation[:PERRor]:EPSK:CONTRol:DEFault	3.95
CONFigure:MODulation[:PERRor]:EPSK:CONTRol:REPetition	3.94
CONFigure:MODulation[:PERRor]:EPSK:EREPorting	3.93
CONFigure:MODulation[:PERRor][:GMSK]:CONTRol	3.67
CONFigure:MODulation[:PERRor][:GMSK]:CONTRol:DEFault	3.68
CONFigure:MODulation[:PERRor][:GMSK]:CONTRol:REPetition	3.68
CONFigure:MODulation[:PERRor][:GMSK]:EREPorting	3.66
CONFigure:MODulation[:PERRor][:GMSK]:FILTer	3.67
CONFigure:MODulation[:PERRor][:GMSK]:LIMit:AVERage	3.69
CONFigure:MODulation[:PERRor][:GMSK]:LIMit:DEFault	3.69
CONFigure:MODulation[:PERRor][:GMSK]:LIMit:LOWer:MODE	3.69
CONFigure:MODulation[:PERRor][:GMSK]:LIMit:UPPer:MODE	3.69
CONFigure:MODulation[:PERRor][:GMSK]:LIMit[:CURRent]	3.68
CONFigure:MODulation[:PERRor][:GMSK]:TIME:DECode	3.70
CONFigure:MSSignal:CCH:PMAX	6.197
CONFigure:MSSignal:PDATA[:TCH]:MSLot:SCONfig	6.232
CONFigure:MSSignal[:CSWitched]:DTX	6.198
CONFigure:MSSignal[:CSWitched][:TCH]:MSLot:LOOP	6.199
CONFigure:MSSignal[:CSWitched][:TCH]:MSLot:SCONfig	6.198
CONFigure:MSSignal[:CSWitched][:TCH]:TADVance	6.198
CONFigure:MSSignal[:CSWitched][:TCH][:SSLot]:LOOP	6.199
CONFigure:MSSignal[:CSWitched][:TCH][:SSLot]:MS:PCL	6.198
CONFigure:NETWork:BAList	6.206
CONFigure:NETWork:IDENtity:BCC	6.208
CONFigure:NETWork:IDENtity:LAC	6.208
CONFigure:NETWork:IDENtity:MCC	6.208
CONFigure:NETWork:IDENtity:MNC	6.208
CONFigure:NETWork:IDENtity:NCC	6.207
CONFigure:NETWork:IDENtity:RAC	6.235
CONFigure:NETWork:NSUPport	6.234
CONFigure:NETWork:PDATA:BITStream	6.238
CONFigure:NETWork:PDATA:CSCHeme	6.235

Command (Signalling, alphabetical)	Page
CONFigure:NETWork:PDATA:EDAllocation	6.237
CONFigure:NETWork:PDATA:EGPRs:PSCHeme	6.236
CONFigure:NETWork:PDATA:EGPRs:PSCHeme:IREdundancy	6.236
CONFigure:NETWork:PDATA:NOPDus	6.237
CONFigure:NETWork:PDATA:PCMChannel	6.236
CONFigure:NETWork:PDATA:RLCMode	6.238
CONFigure:NETWork:PDATA:RLCMode	6.238
CONFigure:NETWork:PDATA:SOFFset	6.237
CONFigure:NETWork:PDATA:TWACK	6.237
CONFigure:NETWork:PDATA:UDCYcle	6.237
CONFigure:NETWork:PDATA:USF	6.236
CONFigure:NETWork:SI2Quater:NC3G:ENABle	6.217
CONFigure:NETWork:SI2Quater:NC3G:FDD:ARFCN	6.217
CONFigure:NETWork:SI2Quater:NC3G:FDD:PSCode	6.218
CONFigure:NETWork:SYSTem:ACLass	6.210
CONFigure:NETWork:SYSTem:BINdicator	6.209
CONFigure:NETWork:SYSTem:BSAGblksres	6.209
CONFigure:NETWork:SYSTem:BSpamfrms	6.209
CONFigure:NETWork:SYSTem:BSPreorganis	6.209
CONFigure:NETWork:SYSTem:CACcEss	6.209
CONFigure:NETWork:SYSTem:PLUUpdate	6.209
CONFigure:NETWork[:CSWitched]:AMR:FRATe:DLCMode	6.214
CONFigure:NETWork[:CSWitched]:AMR:FRATe:DLCMode	6.239
CONFigure:NETWork[:CSWitched]:AMR:FRATe:RSETting	6.216
CONFigure:NETWork[:CSWitched]:AMR:FRATe:RSETting	6.242
CONFigure:NETWork[:CSWitched]:AMR:FRATe:ULCMode	6.214
CONFigure:NETWork[:CSWitched]:AMR:FRATe:ULCMode	6.240
CONFigure:NETWork[:CSWitched]:AMR:HRATe:DLCMode	6.214
CONFigure:NETWork[:CSWitched]:AMR:HRATe:DLCMode	6.239
CONFigure:NETWork[:CSWitched]:AMR:HRATe:RSETting	6.215
CONFigure:NETWork[:CSWitched]:AMR:HRATe:RSETting	6.241
CONFigure:NETWork[:CSWitched]:AMR:HRATe:ULCMode	6.214
CONFigure:NETWork[:CSWitched]:AMR:HRATe:ULCMode	6.240
CONFigure:NETWork[:CSWitched]:AMR:NSUPpression	6.213
CONFigure:NETWork[:CSWitched]:AMR:NSUPpression	6.239
CONFigure:NETWork[:CSWitched]:AOCharge	6.207
CONFigure:NETWork[:CSWitched]:AOCharge:ENABle	6.207
CONFigure:NETWork[:CSWitched]:REQuest:AUTHenticate	6.213
CONFigure:NETWork[:CSWitched]:REQuest:HANdOver	6.213
CONFigure:NETWork[:CSWitched]:REQuest:IMEI	6.213
CONFigure:NETWork[:CSWitched]:REQuest:IMSI	6.213
CONFigure:NETWork[:CSWitched]:SMODE:BITStream	6.211
CONFigure:NETWork[:CSWitched]:SMODE:IMSI:MCC	6.212
CONFigure:NETWork[:CSWitched]:SMODE:IMSI:MNC	6.212
CONFigure:NETWork[:CSWitched]:SMODE:IMSI:MSIN	6.212
CONFigure:NETWork[:CSWitched]:SMODE:LCOmmand	6.212
CONFigure:NETWork[:CSWitched]:SMODE:LOCUpdate	6.210
CONFigure:NETWork[:CSWitched]:SMODE:PCHange	6.210
CONFigure:NETWork[:CSWitched]:SMODE:SCHannel	6.210
CONFigure:NETWork[:CSWitched]:SMODE:STIme	6.212
CONFigure:NETWork[:CSWitched]:SMODE:TRAFfic	6.211
CONFigure:NETWork[:CSWitched]:SOFFset	6.207

Command (Signalling, alphabetical)	Page
CONFigure:NETWork[:CSWitched]:TIMEout:MTC	6.217
CONFigure:NETWork[:CSWitched]:TIMEout:RLINK:TESTset	6.217
CONFigure:NETWork[:CSWitched]:TIMEout:RLINK[:MOBile].....	6.217
CONFigure:NETWorkB52Mode.....	6.207
CONFigure:NPOWer:CONTRol.....	3.41
CONFigure:NPOWer:CONTRol:REPetition	3.42
CONFigure:NPOWer:CONTRol:STATistics	3.41
CONFigure:NPOWer:EREPorting	3.40
CONFigure:POWer:ABURstf[:GMSK]:EREPorting	6.148
CONFigure:POWer:ABURstf[:GMSK]:TOFFset	6.149
CONFigure:POWer:FRAMe:CONTRol:DEFault	3.53
CONFigure:POWer:FRAMe:CONTRol:REPetition.....	3.53
CONFigure:POWer:FRAMe:EREPorting.....	3.52
CONFigure:POWer:FRAMe:FCOunt	3.52
CONFigure:POWer:MSLot:CONTRol	3.57
CONFigure:POWer:MSLot:CONTRol:DEFault.....	3.58
CONFigure:POWer:MSLot:CONTRol:REPetition.....	3.57
CONFigure:POWer:MSLot:EREPorting.....	3.56
CONFigure:POWer:MSLot:FILTer.....	3.59
CONFigure:POWer:MSLot:LIMit:LINE:GLEVel	3.59
CONFigure:POWer:MSLot:MVlew	3.58
CONFigure:POWer:MSLot:SCOunt.....	3.58
CONFigure:POWer:MSLot:TOFFset	3.58
CONFigure:POWer:PCL:CCOunt.....	6.155
CONFigure:POWer:PCL:CHANnel.....	6.155
CONFigure:POWer:PCL:CONTRol:REPetition.....	6.155
CONFigure:POWer:PCL:EREPorting.....	6.154
CONFigure:POWer:SLOT:CONTRol:DEFault.....	3.44
CONFigure:POWer:SLOT:CONTRol:REPetition.....	3.44
CONFigure:POWer:SLOT:EREPorting.....	3.43
CONFigure:POWer:XSLot:CONTRol:DEFault	3.48
CONFigure:POWer:XSLot:CONTRol:REPetition	3.48
CONFigure:POWer:XSLot:EREPorting	3.47
CONFigure:POWer:XSLot:SCOunt	3.49
CONFigure:POWer[:NORMal]:EPSK:CONTRol.....	6.134
CONFigure:POWer[:NORMal]:EPSK:CONTRol:DEFault.....	6.135
CONFigure:POWer[:NORMal]:EPSK:CONTRol:REPetition.....	6.134
CONFigure:POWer[:NORMal]:EPSK:CONTRol:RPMode.....	6.135
CONFigure:POWer[:NORMal]:EPSK:EREPorting.....	6.133
CONFigure:POWer[:NORMal]:EPSK:FILTer.....	6.133
CONFigure:POWer[:NORMal]:EPSK:LIMit:LINE:DEFault	6.140
CONFigure:POWer[:NORMal]:EPSK:LIMit:LINE:LOWer:ALL:DYNamic:ENABLE	6.140
CONFigure:POWer[:NORMal]:EPSK:LIMit:LINE:LOWer<AreaNr>:ALL:DYNamic:ENABLE	6.140
CONFigure:POWer[:NORMal]:EPSK:LIMit:LINE:LOWer<nr>:DYNamic<RgNr>	6.139
CONFigure:POWer[:NORMal]:EPSK:LIMit:LINE:LOWer<nr>[:STATic].....	6.137
CONFigure:POWer[:NORMal]:EPSK:LIMit:LINE:LOWer<nr>[:STATic]:ENABLE.....	6.137
CONFigure:POWer[:NORMal]:EPSK:LIMit:LINE:UPPer:ALL:DYNamic:ENABLE	6.139
CONFigure:POWer[:NORMal]:EPSK:LIMit:LINE:UPPer<nr>:ALL:DYNamic:ENABLE.....	6.139
CONFigure:POWer[:NORMal]:EPSK:LIMit:LINE:UPPer<nr>:DYNamic<nr>	6.138
CONFigure:POWer[:NORMal]:EPSK:LIMit:LINE:UPPer<nr>:DYNamic<nr>:ENABLE.....	6.138
CONFigure:POWer[:NORMal]:EPSK:LIMit:LINE:UPPer<nr>[:STATic].....	6.136
CONFigure:POWer[:NORMal]:EPSK:LIMit:LINE:UPPer<nr>[:STATic]:ENABLE	6.136

Command (Signalling, alphabetical)	Page
CONFigure:POWer[:NORMal]:EPSK:TOFFset	6.133
CONFigure:POWer[:NORMal][:GMSK]:CONTRol.....	6.134
CONFigure:POWer[:NORMal][:GMSK]:CONTRol:DEFault	6.135
CONFigure:POWer[:NORMal][:GMSK]:CONTRol:REPetition	6.134
CONFigure:POWer[:NORMal][:GMSK]:EREPorting	6.133
CONFigure:POWer[:NORMal][:GMSK]:FILTer	6.133
CONFigure:POWer[:NORMal][:GMSK]:LIMit:ABPower<nr>.....	6.141
CONFigure:POWer[:NORMal][:GMSK]:LIMit:ABPower<nr>:ENABle	6.141
CONFigure:POWer[:NORMal][:GMSK]:LIMit:LINE:DEFault	6.140
CONFigure:POWer[:NORMal][:GMSK]:LIMit:LINE:LOWer:ALL:DYNamic:ENABle	6.140
CONFigure:POWer[:NORMal][:GMSK]:LIMit:LINE:LOWer<AreaNr>:ALL:DYNamic:ENABle	6.140
CONFigure:POWer[:NORMal][:GMSK]:LIMit:LINE:LOWer<nr>:DYNamic<RgNr>	6.139
CONFigure:POWer[:NORMal][:GMSK]:LIMit:LINE:LOWer<nr>[:STATic].....	6.137
CONFigure:POWer[:NORMal][:GMSK]:LIMit:LINE:LOWer<nr>[:STATic]:ENABle.....	6.137
CONFigure:POWer[:NORMal][:GMSK]:LIMit:LINE:UPPer:ALL:DYNamic:ENABle	6.139
CONFigure:POWer[:NORMal][:GMSK]:LIMit:LINE:UPPer<nr>:ALL:DYNamic:ENABle	6.139
CONFigure:POWer[:NORMal][:GMSK]:LIMit:LINE:UPPer<nr>:DYNamic<nr>	6.138
CONFigure:POWer[:NORMal][:GMSK]:LIMit:LINE:UPPer<nr>:DYNamic<nr>:ENABle	6.138
CONFigure:POWer[:NORMal][:GMSK]:LIMit:LINE:UPPer<nr>[:STATic].....	6.136
CONFigure:POWer[:NORMal][:GMSK]:LIMit:LINE:UPPer<nr>[:STATic]:ENABle	6.136
CONFigure:POWer[:NORMal][:GMSK]:MPR:CONTRol.....	6.159
CONFigure:POWer[:NORMal][:GMSK]:MPR:CONTRol:REPetition	6.159
CONFigure:POWer[:NORMal][:GMSK]:MPR:EREPorting	6.158
CONFigure:POWer[:NORMal][:GMSK]:TOFFset.....	6.133
CONFigure:RXQuality:BAVerage:CONTRol:BAVerage	6.176
CONFigure:RXQuality:BAVerage:CONTRol:DEFault	6.178
CONFigure:RXQuality:BAVerage:CONTRol:PDATa[:TCH]:MSLot:LEVel:INDividual	6.177
CONFigure:RXQuality:BAVerage:CONTRol:PDATa[:TCH]:MSLot:RLEVel	6.177
CONFigure:RXQuality:BAVerage:CONTRol:REPetition	6.176
CONFigure:RXQuality:BAVerage:CONTRol[:CSWitched]	6.176
CONFigure:RXQuality:BAVerage:CONTRol[:CSWitched][:TCH]:MSLot:LEVel:INDividual.....	6.177
CONFigure:RXQuality:BAVerage:CONTRol[:CSWitched][:TCH]:MSLot:RLEVel	6.177
CONFigure:RXQuality:BAVerage:CONTRol[:TCH]:LEVel:UNTimeslot	6.177
CONFigure:RXQuality:BAVerage:CONTRol[:TCH]:LEVel:UTIMeslot	6.176
CONFigure:RXQuality:BAVerage:EREPorting.....	6.175
CONFigure:RXQuality:BAVerage:LIMit:CLIB	6.178
CONFigure:RXQuality:BAVerage:LIMit:CLII	6.178
CONFigure:RXQuality:BAVerage:LIMit:DBLer	6.178
CONFigure:RXQuality:BAVerage:LIMit:USFBler	6.179
CONFigure:RXQuality:BAVerageLIMit:DEFault.....	6.179
CONFigure:RXQuality:BAVerageLIMit:FERRors	6.178
CONFigure:RXQuality:BER:EREPorting	6.166
CONFigure:RXQuality:BER:TSETup	6.166
CONFigure:RXQuality:BER<nr>:CONTRol:BER<nr>	6.167
CONFigure:RXQuality:BER<nr>:CONTRol:DEFault	6.170
CONFigure:RXQuality:BER<nr>:CONTRol:PDATa[:TCH]:LEVel[:SLOT]:FIVE.....	6.170
CONFigure:RXQuality:BER<nr>:CONTRol:PDATa[:TCH]:LEVel[:SLOT]:FOUR.....	6.170
CONFigure:RXQuality:BER<nr>:CONTRol:PDATa[:TCH]:LEVel[:SLOT]:ONE.....	6.170
CONFigure:RXQuality:BER<nr>:CONTRol:PDATa[:TCH]:LEVel[:SLOT]:SEVen.....	6.170
CONFigure:RXQuality:BER<nr>:CONTRol:PDATa[:TCH]:LEVel[:SLOT]:SIX.....	6.170
CONFigure:RXQuality:BER<nr>:CONTRol:PDATa[:TCH]:LEVel[:SLOT]:THRee	6.170
CONFigure:RXQuality:BER<nr>:CONTRol:PDATa[:TCH]:LEVel[:SLOT]:TWO	6.170

Command (Signalling, alphabetical)	Page
CONFigure:RXQuality:BER<nr>:CONTRol:PDATa[:TCH]:LEVel[:SLOT]:ZERO	6.170
CONFigure:RXQuality:BER<nr>:CONTRol:PDATa[:TCH]:MSLot:LEVel:INDividual	6.169
CONFigure:RXQuality:BER<nr>:CONTRol:PDATa[:TCH]:MSLot:RLEVel	6.169
CONFigure:RXQuality:BER<nr>:CONTRol:REPetition	6.168
CONFigure:RXQuality:BER<nr>:CONTRol[:CSWitched]	6.167
CONFigure:RXQuality:BER<nr>:CONTRol[:CSWitched][:TCH]:LEVel:UNTImeslot	6.168
CONFigure:RXQuality:BER<nr>:CONTRol[:CSWitched][:TCH]:LEVel:UTImeslot	6.168
CONFigure:RXQuality:BER<nr>:CONTRol[:CSWitched][:TCH]:LEVel[:SLOT]:FIVE	6.170
CONFigure:RXQuality:BER<nr>:CONTRol[:CSWitched][:TCH]:LEVel[:SLOT]:FOUR	6.170
CONFigure:RXQuality:BER<nr>:CONTRol[:CSWitched][:TCH]:LEVel[:SLOT]:ONE	6.170
CONFigure:RXQuality:BER<nr>:CONTRol[:CSWitched][:TCH]:LEVel[:SLOT]:SEVen	6.170
CONFigure:RXQuality:BER<nr>:CONTRol[:CSWitched][:TCH]:LEVel[:SLOT]:SIX	6.170
CONFigure:RXQuality:BER<nr>:CONTRol[:CSWitched][:TCH]:LEVel[:SLOT]:THRee	6.170
CONFigure:RXQuality:BER<nr>:CONTRol[:CSWitched][:TCH]:LEVel[:SLOT]:TWO	6.170
CONFigure:RXQuality:BER<nr>:CONTRol[:CSWitched][:TCH]:LEVel[:SLOT]:ZERO	6.170
CONFigure:RXQuality:BER<nr>:CONTRol[:CSWitched][:TCH]:MSLot:LEVel:INDividual	6.169
CONFigure:RXQuality:BER<nr>:CONTRol[:CSWitched][:TCH]:MSLot:RLEVel	6.169
CONFigure:RXQuality:BER<nr>:LIMit:CLIB	6.171
CONFigure:RXQuality:BER<nr>:LIMit:CLII	6.171
CONFigure:RXQuality:BER<nr>:LIMit:DBLer	6.171
CONFigure:RXQuality:BER<nr>:LIMit:DEFault	6.172
CONFigure:RXQuality:BER<nr>:LIMit:FERRors	6.171
CONFigure:RXQuality:BER<nr>:LIMit:USFBler	6.171
CONFigure:RXQuality:BLER:CONTRol:DEFault	6.184
CONFigure:RXQuality:BLER:CONTRol:DLDCycle	6.184
CONFigure:RXQuality:BLER:CONTRol:PDATa[:TCH]:MSLot:LEVel:INDividual	6.183
CONFigure:RXQuality:BLER:CONTRol:PDATa[:TCH]:MSLot:RLEVel	6.183
CONFigure:RXQuality:BLER:CONTRol:REPetition	6.183
CONFigure:RXQuality:BLER:CONTRol:RLBCount	6.183
CONFigure:RXQuality:BLER:EREPorting	6.182
CONFigure:RXQuality:CONTRol:CONFidence:FAIL	6.165
CONFigure:RXQuality:CONTRol:CONFidence:MTTime	6.165
CONFigure:RXQuality:CONTRol:CONFidence:PASS	6.165
CONFigure:RXQuality:CONTRol:CONFidence:RWINDow	6.165
CONFigure:RXQuality:CONTRol:DEFault	6.165
CONFigure:RXQuality:CONTRol:HTIME	6.164
CONFigure:RXQuality:PDATa:BITStream	6.164
CONFigure:RXQuality[:CSWitched]:BITStream	6.164
CONFigure:SIGNalling[:CSWitched]:SMS	6.192
CONFigure:SPECTrum:LIMit:LINE:SElect	3.105
CONFigure:SPECTrum:MODulation:AVGareas	3.109
CONFigure:SPECTrum:MODulation:AVGareas	3.119
CONFigure:SPECTrum:MODulation:CONTRol	3.107
CONFigure:SPECTrum:MODulation:CONTRol:MPOint<nr>:ENABLE	3.107
CONFigure:SPECTrum:MODulation:CONTRol:REPetition	3.107
CONFigure:SPECTrum:MODulation:CONTRol:VMPOint<nr>	3.108
CONFigure:SPECTrum:MODulation:EPSK:LIMit:LINE:MODE[:UPPer]	3.111
CONFigure:SPECTrum:MODulation:EPSK:LIMit:LINE:REFPower[:UPPer]	3.110
CONFigure:SPECTrum:MODulation:EPSK:LIMit:LINE:UPPer<nr>	3.109
CONFigure:SPECTrum:MODulation:EPSK:LIMit:LINE:UPPer<nr>:ENABLE	3.109
CONFigure:SPECTrum:MODulation:EREPorting	3.106
CONFigure:SPECTrum:MODulation:TDFSelect	3.108

Command (Signalling, alphabetical)	Page
CONFigure:SPEctrum:MODulation[:GMSK]:LIMit:LINE:MODE[:UPPer]	3.111
CONFigure:SPEctrum:MODulation[:GMSK]:LIMit:LINE:REFFPower[:UPPer]	3.110
CONFigure:SPEctrum:MODulation[:GMSK]:LIMit:LINE:UPPer<nr>	3.109
CONFigure:SPEctrum:MODulation[:GMSK]:LIMit:LINE:UPPer<nr>:ENABle	3.109
CONFigure:SPEctrum:MSWitching:CONTRol	3.128
CONFigure:SPEctrum:MSWitching:CONTRol:REPetition	3.129
CONFigure:SPEctrum:MSWitching:EREPorting	3.127
CONFigure:SPEctrum:SWITching:CONTRol	3.117
CONFigure:SPEctrum:SWITching:CONTRol:MPOint<nr>:ENABle	3.118
CONFigure:SPEctrum:SWITching:CONTRol:REPetition	3.118
CONFigure:SPEctrum:SWITching:CONTRol:VMPOint<nr>	3.118
CONFigure:SPEctrum:SWITching:CSDMODE	3.117
CONFigure:SPEctrum:SWITching:EPsk:LIMit:LINE:DEFault	3.121
CONFigure:SPEctrum:SWITching:EPsk:LIMit:LINE:MODE[:UPPer]	3.121
CONFigure:SPEctrum:SWITching:EPsk:LIMit:LINE:UPPer<nr>	3.120
CONFigure:SPEctrum:SWITching:EPsk:LIMit:LINE:UPPer<nr>:ENABle	3.120
CONFigure:SPEctrum:SWITching:EREPorting	3.116
CONFigure:SPEctrum:SWITching:TDFSelect	3.119
CONFigure:SPEctrum:SWITching[:GMSK]:LIMit:LINE:DEFault	3.121
CONFigure:SPEctrum:SWITching[:GMSK]:LIMit:LINE:MODE[:UPPer]	3.121
CONFigure:SPEctrum:SWITching[:GMSK]:LIMit:LINE:UPPer<nr>	3.120
CONFigure:SPEctrum:SWITching[:GMSK]:LIMit:LINE:UPPer<nr>:ENABle	3.120
CONFigure:SUBarrays:MODulation:EVMagNitude:EPsk	3.90
CONFigure:SUBarrays:MODulation:MERRor:EPsk	3.102
CONFigure:SUBarrays:MODulation:XPERror[:GMSK]	3.78
CONFigure:SUBarrays:MODulation[:PERRor]:EPsk	3.96
CONFigure:SUBarrays:MODulation[:PERRor][:GMSK]	3.70
CONFigure:SUBarrays:POWer:ABURst[:GMSK]	6.150
CONFigure:SUBarrays:POWer:FRAMe	3.54
CONFigure:SUBarrays:POWer:MSLot	3.60
CONFigure:SUBarrays:POWer:SLOT	3.45
CONFigure:SUBarrays:POWer:XSLot	3.50
CONFigure:SUBarrays:POWer[:NORMal]:EPsk	6.142
CONFigure:SUBarrays:POWer[:NORMal][:GMSK]	6.142
CONFigure:SUBarrays:POWer[:NORMal][:GMSK]:MPR	6.160
CONFigure:SUBarrays:SPEctrum:MODulation:TDOMain	3.112
CONFigure:SUBarrays:SPEctrum:MODulation[:FDOMain]	3.111
CONFigure:SUBarrays:SPEctrum:SWITching:TDOMain	3.123
CONFigure:SUBarrays:SPEctrum:SWITching[:FDOMain]	3.122
CONFigure:WPOWer:CONTRol:REPetition	3.38
CONFigure:WPOWer:EREPorting	3.37
CONtinue:MODulation:EVMagNitude:EPsk	3.87
CONtinue:MODulation:MERRor:EPsk	3.99
CONtinue:MODulation:OVERview:EPsk	3.82
CONtinue:MODulation:XPERror[:GMSK]	3.74
CONtinue:MODulation[:PERRor]:EPsk	3.93
CONtinue:MODulation[:PERRor][:GMSK]	3.66
CONtinue:NPOWer	3.40
CONtinue:POWer:ABURst[:GMSK]	6.148
CONtinue:POWer:FRAMe	3.52
CONtinue:POWer:MSLot	3.56
CONtinue:POWer:PCL	6.154

Command (Signalling, alphabetical)	Page
CONTinue:POWer:SLOT	3.43
CONTinue:POWer:XSLot.....	3.47
CONTinue:POWer[:NORMal]:EPSK.....	6.132
CONTinue:POWer[:NORMal]:GMSK].....	6.132
CONTinue:POWer[:NORMal]:GMSK]:MPR.....	6.158
CONTinue:RXQuality:BAverage	6.175
CONTinue:RXQuality:BER.....	6.166
CONTinue:RXQuality:BLER.....	6.182
CONTinue:SPECTrum:MODulation.....	3.106
CONTinue:SPECTrum:MSWitching.....	3.127
CONTinue:SPECTrum:SWITChing.....	3.116
CONTinue:WPOWer.....	3.37
DISPlay:POWer:MSLot:CONTRol:GRID.....	3.57
DISPlay:POWer[:NORMal]:EPSK:CONTRol:GRID.....	6.135
DISPlay:POWer[:NORMal]:GMSK]:CONTRol:GRID.....	6.135
FETCh:ARRay:MODulation:EVMagnitude:EPSK:AVERage?	3.92
FETCh:ARRay:MODulation:EVMagnitude:EPSK:MMAximum?	3.92
FETCh:ARRay:MODulation:EVMagnitude:EPSK[:CURRent]?	3.92
FETCh:ARRay:MODulation:MERRor:EPSK:AVERage?	3.104
FETCh:ARRay:MODulation:MERRor:EPSK:MMAximum?	3.104
FETCh:ARRay:MODulation:MERRor:EPSK[:CURRent]?	3.104
FETCh:ARRay:MODulation:XPERror[:GMSK]:AVERage?	3.80
FETCh:ARRay:MODulation:XPERror[:GMSK]:MMAximum?	3.80
FETCh:ARRay:MODulation:XPERror[:GMSK]:CURRent]?	3.80
FETCh:ARRay:MODulation[:PERRor]:EPSK:AVERage?	3.98
FETCh:ARRay:MODulation[:PERRor]:EPSK:MMAximum?	3.98
FETCh:ARRay:MODulation[:PERRor]:EPSK[:CURRent]?	3.98
FETCh:ARRay:MODulation[:PERRor]:GMSK]:AVERage?	3.72
FETCh:ARRay:MODulation[:PERRor]:GMSK]:MMAximum?	3.72
FETCh:ARRay:MODulation[:PERRor]:GMSK]:CURRent]?	3.72
FETCh:ARRay:POWer:ABURst[:GMSK]?.....	6.152
FETCh:ARRay:POWer:FRAMe?	3.55
FETCh:ARRay:POWer:MSLot:AVERage?	3.62
FETCh:ARRay:POWer:MSLot:MAximum?	3.62
FETCh:ARRay:POWer:MSLot:MINimum?	3.62
FETCh:ARRay:POWer:MSLot[:CURRent]?.....	3.62
FETCh:ARRay:POWer:SLOT?	3.46
FETCh:ARRay:POWer:XSLot?	3.51
FETCh:ARRay:POWer[:NORMal]:EPSK:AVERage?	6.145
FETCh:ARRay:POWer[:NORMal]:EPSK:MAximum?	6.145
FETCh:ARRay:POWer[:NORMal]:EPSK:MINimum?	6.145
FETCh:ARRay:POWer[:NORMal]:EPSK[:CURRent]?.....	6.145
FETCh:ARRay:POWer[:NORMal]:GMSK]:AVERage?	6.145
FETCh:ARRay:POWer[:NORMal]:GMSK]:MAximum?	6.145
FETCh:ARRay:POWer[:NORMal]:GMSK]:MINimum?	6.145
FETCh:ARRay:POWer[:NORMal]:GMSK]:MPR:AVERage?	6.161
FETCh:ARRay:POWer[:NORMal]:GMSK]:MPR:MAximum?	6.161
FETCh:ARRay:POWer[:NORMal]:GMSK]:MPR:MINimum?	6.161
FETCh:ARRay:POWer[:NORMal]:GMSK]:MPR[:CURRent]?.....	6.161
FETCh:ARRay:POWer[:NORMal]:GMSK]:CURRent]?.....	6.145
FETCh:ARRay:SPECTrum:MODulation:TDOMain?	3.114
FETCh:ARRay:SPECTrum:MODulation[:FDOMain]:VMPoint?.....	3.113

Command (Signalling, alphabetical)	Page
FETCh:ARRAy:SPEctrum:MODulation[:FDOMain]?	3.113
FETCh:ARRAy:SPEctrum:MSWitching:VMPoint?	3.131
FETCh:ARRAy:SPEctrum:MSWitching?	3.130
FETCh:ARRAy:SPEctrum:SWITching:TDOMain?	3.126
FETCh:ARRAy:SPEctrum:SWITching[:FDOMain]:VMPoint?	3.125
FETCh:ARRAy:SPEctrum:SWITching[:FDOMain]?	3.124
FETCh:MODulation:EVMagnitude:EPSK:STATus?	3.87
FETCh:MODulation:MERRor:EPSK:STATus?	3.99
FETCh:MODulation:OVERview:EPSK:STATus?	3.82
FETCh:MODulation:XPERror[:GMSK]:STATus?	3.74
FETCh:MODulation[:PERRor]:EPSK:STATus?	3.93
FETCh:MODulation[:PERRor][:GMSK]:STATus?	3.67
FETCh:NPOWer:STATus?	3.40
FETCh:POWer:ABURst[:GMSK]:STATus?	6.149
FETCh:POWer:FRAMe:STATus?	3.52
FETCh:POWer:MSLot:STATus?	3.56
FETCh:POWer:PCL:STATus?	6.154
FETCh:POWer:SLOT:STATus?	3.43
FETCh:POWer:XSLot:STATus?	3.47
FETCh:POWer[:NORMal]:EPSK:STATus?	6.133
FETCh:POWer[:NORMal][:GMSK]:MPR:STATus?	6.158
FETCh:POWer[:NORMal][:GMSK]:STATus?	6.133
FETCh:RXQuality:BAverage:STATus?	6.175
FETCh:RXQuality:BER:STATus?	6.167
FETCh:RXQuality:BLER:STATus?	6.182
FETCh:SPEctrum:MODulation:STATus?	3.106
FETCh:SPEctrum:MSWitching:STATus?	3.128
FETCh:SPEctrum:SWITching:STATus?	3.117
FETCh:SUBarrays:MODulation:EVMagnitude:EPSK:AVERage?	3.92
FETCh:SUBarrays:MODulation:EVMagnitude:EPSK:MMAximum?	3.92
FETCh:SUBarrays:MODulation:EVMagnitude:EPSK[:CURRent]?	3.92
FETCh:SUBarrays:MODulation:MERRor:EPSK:AVERage?	3.104
FETCh:SUBarrays:MODulation:MERRor:EPSK:MMAximum?	3.104
FETCh:SUBarrays:MODulation:MERRor:EPSK[:CURRent]?	3.104
FETCh:SUBarrays:MODulation:XPERror[:GMSK]:AVERage?	3.81
FETCh:SUBarrays:MODulation:XPERror[:GMSK]:MMAximum?	3.81
FETCh:SUBarrays:MODulation:XPERror[:GMSK][:CURRent]?	3.81
FETCh:SUBarrays:MODulation[:PERRor]:EPSK:AVERage?	3.98
FETCh:SUBarrays:MODulation[:PERRor]:EPSK:MMAximum?	3.98
FETCh:SUBarrays:MODulation[:PERRor]:EPSK[:CURRent]?	3.98
FETCh:SUBarrays:MODulation[:PERRor][:GMSK]:AVERage?	3.73
FETCh:SUBarrays:MODulation[:PERRor][:GMSK]:MMAximum?	3.73
FETCh:SUBarrays:MODulation[:PERRor][:GMSK][:CURRent]?	3.73
FETCh:SUBarrays:POWer:ABURst[:GMSK]?	6.153
FETCh:SUBarrays:POWer:FRAMe?	3.55
FETCh:SUBarrays:POWer:MSLot:AVERage?	3.63
FETCh:SUBarrays:POWer:MSLot:MAximum?	3.63
FETCh:SUBarrays:POWer:MSLot:MINimum?	3.63
FETCh:SUBarrays:POWer:MSLot[:CURRent]?	3.63
FETCh:SUBarrays:POWer:SLOT?	3.46
FETCh:SUBarrays:POWer:XSLot?	3.51
FETCh:SUBarrays:POWer[:NORMal]:EPSK:AVERage?	6.146

Command (Signalling, alphabetical)	Page
<i>FETCh:SUBarrays:POWer[:NORMal]:EPSK:MAXimum?</i>	6.146
<i>FETCh:SUBarrays:POWer[:NORMal]:EPSK:MINimum?</i>	6.146
<i>FETCh:SUBarrays:POWer[:NORMal]:EPSK[:CURRent]?</i>	6.146
<i>FETCh:SUBarrays:POWer[:NORMal]:GMSK:AVERage?</i>	6.146
<i>FETCh:SUBarrays:POWer[:NORMal]:GMSK:MAXimum?</i>	6.146
<i>FETCh:SUBarrays:POWer[:NORMal]:GMSK:MINimum?</i>	6.146
<i>FETCh:SUBarrays:POWer[:NORMal]:GMSK:MPR:AVERage?</i>	6.162
<i>FETCh:SUBarrays:POWer[:NORMal]:GMSK:MPR:MAXimum?</i>	6.162
<i>FETCh:SUBarrays:POWer[:NORMal]:GMSK:MPR:MINimum?</i>	6.162
<i>FETCh:SUBarrays:POWer[:NORMal]:GMSK:MPR[:CURRent]?</i>	6.162
<i>FETCh:SUBarrays:POWer[:NORMal]:GMSK[:CURRent]?</i>	6.146
<i>FETCh:SUBarrays:SPECTrum:MODulation:TDOMain?</i>	3.115
<i>FETCh:SUBarrays:SPECTrum:MODulation[:FDOMain]?</i>	3.114
<i>FETCh:SUBarrays:SPECTrum:SWITching:TDOMain?</i>	3.126
<i>FETCh:SUBarrays:SPECTrum:SWITching[:FDOMain]?</i>	3.125
<i>FETCh:WPOWer:STATus?</i>	3.38
<i>FETCh[:SCALar]:MODulation:EVMagnitude:EPSK?</i>	3.91
<i>FETCh[:SCALar]:MODulation:MERRor:EPSK?</i>	3.103
<i>FETCh[:SCALar]:MODulation:OVERview:EPSK?</i>	3.85
<i>FETCh[:SCALar]:MODulation:XPERror[:GMSK]?</i>	3.79
<i>FETCh[:SCALar]:MODulation[:PERRor]:EPSK?</i>	3.97
<i>FETCh[:SCALar]:MODulation[:PERRor][:GMSK]?</i>	3.71
<i>FETCh[:SCALar]:NPOWer?</i>	3.42
<i>FETCh[:SCALar]:POWer:ABURst[:GMSK]?</i>	6.151
<i>FETCh[:SCALar]:POWer:FRAME:FPOWer<nr>?</i>	3.55
<i>FETCh[:SCALar]:POWer:MSLot?</i>	3.61
<i>FETCh[:SCALar]:POWer:PCL:PCLPower<PCL>?</i>	6.157
<i>FETCh[:SCALar]:POWer:PCL?</i>	6.156
<i>FETCh[:SCALar]:POWer:SLOT:SPOWer<nr>?</i>	3.46
<i>FETCh[:SCALar]:POWer:XSLot:SPOWer<nr>?</i>	3.51
<i>FETCh[:SCALar]:POWer[:NORMal]:EPSK?</i>	6.143
<i>FETCh[:SCALar]:POWer[:NORMal]:GMSK:MPR?</i>	6.161
<i>FETCh[:SCALar]:POWer[:NORMal]:GMSK?</i>	6.143
<i>FETCh[:SCALar]:RXQuality:BAverage?</i>	6.179
<i>FETCh[:SCALar]:RXQuality:BER?</i>	6.172
<i>FETCh[:SCALar]:RXQuality:BLER?</i>	6.185
<i>FETCh[:SCALar]:SPECTrum:MODulation?</i>	3.112
<i>FETCh[:SCALar]:SPECTrum:MSWitching?</i>	3.130
<i>FETCh[:SCALar]:SPECTrum:SWITching?</i>	3.124
<i>FETCh[:SCALar]:WPOWer?</i>	3.39
<i>INITiate:MODulation:EVMagnitude:EPSK</i>	3.87
<i>INITiate:MODulation:MERRor:EPSK</i>	3.99
<i>INITiate:MODulation:OVERview:EPSK</i>	3.82
<i>INITiate:MODulation:XPERror[:GMSK]</i>	3.74
<i>INITiate:MODulation[:PERRor]:EPSK</i>	3.93
<i>INITiate:MODulation[:PERRor][:GMSK]</i>	3.66
<i>INITiate:NPOWer</i>	3.40
<i>INITiate:POWer:ABURst[:GMSK]</i>	6.148
<i>INITiate:POWer:FRAME</i>	3.52
<i>INITiate:POWer:MSLot</i>	3.56
<i>INITiate:POWer:PCL</i>	6.154
<i>INITiate:POWer:SLOT</i>	3.43

Command (Signalling, alphabetical)	Page
INITiate:POWer:XSLot	3.47
INITiate:POWer[:NORMal]:EPSK.....	6.132
INITiate:POWer[:NORMal][:GMSK].....	6.132
INITiate:POWer[:NORMal][:GMSK]:MPR.....	6.158
INITiate:RXQuality:BAverage	6.175
INITiate:RXQuality:BER	6.166
INITiate:RXQuality:BLER	6.182
INITiate:SPECTrum:MODulation	3.106
INITiate:SPECTrum:MSWitching.....	3.127
INITiate:SPECTrum:SWITching	3.116
INITiate:WPOWer	3.37
INPut[:STATe].....	6.218
IQIF:DEFault	3.36
MCONTRol:DEFault	6.197
MMEMemory:L3MSg:BEMPTy.....	6.227
MMEMemory:L3MSg:BWRiting.....	6.227
MMEMemory:L3MSg:CDEStination	6.226
MMEMemory:L3MSg:SAVE	6.227
MMEMemory:RECall:CURRent.....	6.226
MMEMemory:SAVE:CURRent	6.226
OUTPut[:STATe].....	6.218
PROcedure: SIGNalling:PDATa:ACTion.....	6.229
PROcedure:BSSignal:FM:DEVIation	6.200
PROcedure:BSSignal:FM:DEVIation:RANDom:ENABle	6.200
PROcedure:BSSignal[:CSWitched][:TCH]:LEVel:UNTimeslot	6.202
PROcedure:BSSignal[:CSWitched][:TCH]:LEVel:UTIMeslot	6.201
PROcedure:BSSignal[:CSWitched][:TCH]:MSLot:RLEVel	6.203
PROcedure:NETWork:PDATa:BITStream	6.238
PROcedure:NETWork:PDATa:CSCHEme	6.235
PROcedure:NETWork:PDATa:EGPRs:PSCHEme.....	6.236
PROcedure:NETWork[:CSWitched]:AMR:FRATe:DLCMode.....	6.214
PROcedure:NETWork[:CSWitched]:AMR:FRATe:DLCMode.....	6.239
PROcedure:NETWork[:CSWitched]:AMR:FRATe:ULCMode.....	6.214
PROcedure:NETWork[:CSWitched]:AMR:FRATe:ULCMode.....	6.240
PROcedure:NETWork[:CSWitched]:AMR:HRATe:DLCMode	6.214
PROcedure:NETWork[:CSWitched]:AMR:HRATe:DLCMode	6.239
PROcedure:NETWork[:CSWitched]:AMR:HRATe:ULCMode	6.214
PROcedure:NETWork[:CSWitched]:AMR:HRATe:ULCMode	6.240
PROcedure:NETWork[:CSWitched]:SMODE:BITStream	6.211
PROcedure:NETWork[:CSWitched]:SMODE:STIME.....	6.212
PROcedure:SIGNalling:PDATa:ASConfig:ENABle	6.232
PROcedure:SIGNalling:PDATa[:TCH]:MSLot:CHANnel	6.230
PROcedure:SIGNalling:PDATa[:TCH]:MSLot:FHOPping:ENABle	6.231
PROcedure:SIGNalling:PDATa[:TCH]:MSLot:MS:SCONfig:GAMMa	6.231
PROcedure:SIGNalling:PDATa[:TCH]:MSLot:SCONfig	6.231
PROcedure:SIGNalling[:CSWitched]:ACTion	6.190
PROcedure:SIGNalling[:CSWitched]:DAI	6.192
PROcedure:SIGNalling[:CSWitched][:TCH]:CHANnel	6.192
PROcedure:SIGNalling[:CSWitched][:TCH]:MSLot:LOOP.....	6.195
PROcedure:SIGNalling[:CSWitched][:TCH]:MSLot:SCONfig.....	6.194
PROcedure:SIGNalling[:CSWitched][:TCH]:TADVance.....	6.192
PROcedure:SIGNalling[:CSWitched][:TCH][:SSLot]:CHCCombined.....	6.193

Command (Signalling, alphabetical)	Page
<i>PROCedure:SIGNalling[:CSWitched][:TCH][:SSLot]:FHOPping:SEquence</i>	6.193
<i>PROCedure:SIGNalling[:CSWitched][:TCH][:SSLot]:LOOP</i>	6.195
<i>PROCedure:SIGNalling[:CSWitched][:TCH][:SSLot]:MS:PCL</i>	6.194
<i>PROCedure:SIGNalling[:CSWitched][:TCH][:SSLot]:TIMeslot</i>	6.193
<i>READ:ARRay:MODulation:EVMagnitude:EPSK:AVERage?</i>	3.92
<i>READ:ARRay:MODulation:EVMagnitude:EPSK:MMAximum?</i>	3.92
<i>READ:ARRay:MODulation:EVMagnitude:EPSK[:CURRent]?</i>	3.92
<i>READ:ARRay:MODulation:MERRor:EPSK:AVERage?</i>	3.104
<i>READ:ARRay:MODulation:MERRor:EPSK:MMAximum?</i>	3.104
<i>READ:ARRay:MODulation:MERRor:EPSK[:CURRent]?</i>	3.104
<i>READ:ARRay:MODulation:XPERRor[:GMSK]:AVERage?</i>	3.80
<i>READ:ARRay:MODulation:XPERRor[:GMSK]:MMAximum?</i>	3.80
<i>READ:ARRay:MODulation:XPERRor[:GMSK][:CURRent]?</i>	3.80
<i>READ:ARRay:MODulation[:PERRor]:EPSK:AVERage?</i>	3.98
<i>READ:ARRay:MODulation[:PERRor]:EPSK:MMAximum?</i>	3.98
<i>READ:ARRay:MODulation[:PERRor]:EPSK[:CURRent]?</i>	3.98
<i>READ:ARRay:MODulation[:PERRor][:GMSK]:AVERage?</i>	3.72
<i>READ:ARRay:MODulation[:PERRor][:GMSK]:MMAximum?</i>	3.72
<i>READ:ARRay:MODulation[:PERRor][:GMSK][:CURRent]?</i>	3.72
<i>READ:ARRay:POWer:ABURst[:GMSK]?</i>	6.152
<i>READ:ARRay:POWer:FRAME?</i>	3.55
<i>READ:ARRay:POWer:MSLot:AVERage?</i>	3.62
<i>READ:ARRay:POWer:MSLot:MAximum?</i>	3.62
<i>READ:ARRay:POWer:MSLot:MINimum?</i>	3.62
<i>READ:ARRay:POWer:MSLot[:CURRent]?</i>	3.62
<i>READ:ARRay:POWer:SLOT?</i>	3.46
<i>READ:ARRay:POWer:XSLot?</i>	3.51
<i>READ:ARRay:POWer[:NORMal]:EPSK:AVERage?</i>	6.145
<i>READ:ARRay:POWer[:NORMal]:EPSK:MAximum?</i>	6.145
<i>READ:ARRay:POWer[:NORMal]:EPSK:MINimum?</i>	6.145
<i>READ:ARRay:POWer[:NORMal]:EPSK[:CURRent]?</i>	6.145
<i>READ:ARRay:POWer[:NORMal][:GMSK]:AVERage?</i>	6.145
<i>READ:ARRay:POWer[:NORMal][:GMSK]:MAximum?</i>	6.145
<i>READ:ARRay:POWer[:NORMal][:GMSK]:MINimum?</i>	6.145
<i>READ:ARRay:POWer[:NORMal][:GMSK]:MPR:AVERage?</i>	6.161
<i>READ:ARRay:POWer[:NORMal][:GMSK]:MPR:MAximum?</i>	6.161
<i>READ:ARRay:POWer[:NORMal][:GMSK]:MPR:MINimum?</i>	6.161
<i>READ:ARRay:POWer[:NORMal][:GMSK]:MPR[:CURRent]?</i>	6.161
<i>READ:ARRay:POWer[:NORMal][:GMSK][:CURRent]?</i>	6.145
<i>READ:ARRay:SPECTrum:MODulation:TDOMain?</i>	3.114
<i>READ:ARRay:SPECTrum:MODulation[:FDOMain]:VMPoint?</i>	3.113
<i>READ:ARRay:SPECTrum:MODulation[:FDOMain]?</i>	3.113
<i>READ:ARRay:SPECTrum:MSWitching:VMPoint?</i>	3.131
<i>READ:ARRay:SPECTrum:MSWitching?</i>	3.130
<i>READ:ARRay:SPECTrum:SWITching:TDOMain?</i>	3.126
<i>READ:ARRay:SPECTrum:SWITching[:FDOMain]:VMPoint?</i>	3.125
<i>READ:ARRay:SPECTrum:SWITching[:FDOMain]?</i>	3.124
<i>READ:SUBarrays:MODulation:EVMagnitude:EPSK:AVERage?</i>	3.92
<i>READ:SUBarrays:MODulation:EVMagnitude:EPSK:MMAximum?</i>	3.92
<i>READ:SUBarrays:MODulation:EVMagnitude:EPSK[:CURRent]?</i>	3.92
<i>READ:SUBarrays:MODulation:MERRor:EPSK:AVERage?</i>	3.104
<i>READ:SUBarrays:MODulation:MERRor:EPSK:MMAximum?</i>	3.104

Command (Signalling, alphabetical)	Page
READ:SUBarrays:MODulation:MERRor:EPSK[:CURRent]?	3.104
READ:SUBarrays:MODulation:XPERror[:GMSK]:AVERage?	3.81
READ:SUBarrays:MODulation:XPERror[:GMSK]:MMAximum?	3.81
READ:SUBarrays:MODulation:XPERror[:GMSK][:CURRent]?	3.81
READ:SUBarrays:MODulation[:PERRor]:EPSK:AVERage?	3.98
READ:SUBarrays:MODulation[:PERRor]:EPSK:MMAximum?	3.98
READ:SUBarrays:MODulation[:PERRor]:EPSK[:CURRent]?	3.98
READ:SUBarrays:MODulation[:PERRor][:GMSK]:AVERage?	3.73
READ:SUBarrays:MODulation[:PERRor][:GMSK]:MMAximum?	3.73
READ:SUBarrays:MODulation[:PERRor][:GMSK][:CURRent]?	3.73
READ:SUBarrays:POWer:ABURst[:GMSK]?	6.153
READ:SUBarrays:POWer:FRAMe?	3.55
READ:SUBarrays:POWer:MSLot:AVERage?	3.63
READ:SUBarrays:POWer:MSLot:MAximum?	3.63
READ:SUBarrays:POWer:MSLot:MINimum?	3.63
READ:SUBarrays:POWer:MSLot[:CURRent]?	3.63
READ:SUBarrays:POWer:SLOT?	3.46
READ:SUBarrays:POWer:XSLot?	3.51
READ:SUBarrays:POWer[:NORMal]:EPSK:AVERage?	6.146
READ:SUBarrays:POWer[:NORMal]:EPSK:MAximum?	6.146
READ:SUBarrays:POWer[:NORMal]:EPSK:MINimum?	6.146
READ:SUBarrays:POWer[:NORMal]:EPSK[:CURRent]?	6.146
READ:SUBarrays:POWer[:NORMal][:GMSK]:AVERage?	6.146
READ:SUBarrays:POWer[:NORMal][:GMSK]:MAximum?	6.146
READ:SUBarrays:POWer[:NORMal][:GMSK]:MINimum?	6.146
READ:SUBarrays:POWer[:NORMal][:GMSK]:MPR:AVERage?	6.162
READ:SUBarrays:POWer[:NORMal][:GMSK]:MPR:MAximum?	6.162
READ:SUBarrays:POWer[:NORMal][:GMSK]:MPR:MINimum?	6.162
READ:SUBarrays:POWer[:NORMal][:GMSK]:MPR[:CURRent]?	6.162
READ:SUBarrays:POWer[:NORMal][:GMSK][:CURRent]?	6.146
READ:SUBarrays:SPECTrum:MODulation:TDOMain?	3.115
READ:SUBarrays:SPECTrum:MODulation[:FDOMain]?	3.114
READ:SUBarrays:SPECTrum:SWITching:TDOMain?	3.126
READ:SUBarrays:SPECTrum:SWITching[:FDOMain]?	3.125
READ[:SCALar]:MODulation:EVMAgnitude:EPSK?	3.91
READ[:SCALar]:MODulation:MERRor:EPSK?	3.103
READ[:SCALar]:MODulation:OVERview:EPSK?	3.85
READ[:SCALar]:MODulation:XPERror[:GMSK]?	3.79
READ[:SCALar]:MODulation[:PERRor]:EPSK?	3.97
READ[:SCALar]:MODulation[:PERRor][:GMSK]?	3.71
READ[:SCALar]:NPOWer?	3.42
READ[:SCALar]:POWer:ABURst[:GMSK]?	6.151
READ[:SCALar]:POWer:FRAMe:FPOWer<nr>?	3.55
READ[:SCALar]:POWer:MSLot?	3.61
READ[:SCALar]:POWer:PCL:PCLPower<PCL>?	6.157
READ[:SCALar]:POWer:PCL?	6.156
READ[:SCALar]:POWer:SLOT:SPOWer<nr>?	3.46
READ[:SCALar]:POWer:XSLot:SPOWer<nr>?	3.51
READ[:SCALar]:POWer[:NORMal]:EPSK?	6.143
READ[:SCALar]:POWer[:NORMal][:GMSK]:MPR?	6.161
READ[:SCALar]:POWer[:NORMal][:GMSK]?	6.143
READ[:SCALar]:RXQuality:BER?	6.172

Command (Signalling, alphabetical)	Page
READ[:SCALar]:RXQuality:BLER?.....	6.185
READ[:SCALar]:SPECtrum:MODulation?	3.112
READ[:SCALar]:SPECtrum:MSWitching?	3.130
READ[:SCALar]:SPECtrum:SWITching?.....	3.124
READ[:SCALar]:WPOWer?.....	3.39
ROUTe:SPDecoder:OUTPut.....	6.219
ROUTe:SPENcoder[:INPut].....	6.219
SAMPlE:ARRay:MODulation:EVMagnitude:EPSK:AVERage?	3.92
SAMPlE:ARRay:MODulation:EVMagnitude:EPSK:MMAximum?	3.92
SAMPlE:ARRay:MODulation:EVMagnitude:EPSK[:CURRent]?	3.92
SAMPlE:ARRay:MODulation:MERRor:EPSK:AVERage?	3.104
SAMPlE:ARRay:MODulation:MERRor:EPSK:MMAximum?	3.104
SAMPlE:ARRay:MODulation:MERRor:EPSK[:CURRent]?	3.104
SAMPlE:ARRay:MODulation:XPERror[:GMSK]:AVERage?	3.80
SAMPlE:ARRay:MODulation:XPERror[:GMSK]:MMAximum?	3.80
SAMPlE:ARRay:MODulation:XPERror[:GMSK][:CURRent]?	3.80
SAMPlE:ARRay:MODulation[:PERRor]:EPSK:AVERage?	3.98
SAMPlE:ARRay:MODulation[:PERRor]:EPSK:MMAximum?	3.98
SAMPlE:ARRay:MODulation[:PERRor]:EPSK[:CURRent]?	3.98
SAMPlE:ARRay:MODulation[:PERRor][:GMSK]:AVERage?	3.72
SAMPlE:ARRay:MODulation[:PERRor][:GMSK]:MMAximum?	3.72
SAMPlE:ARRay:MODulation[:PERRor][:GMSK][:CURRent]?	3.72
SAMPlE:ARRay:POWer:ABURst[:GMSK]?	6.152
SAMPlE:ARRay:POWer:FRAMe?	3.55
SAMPlE:ARRay:POWer:MSLot:AVERage?	3.62
SAMPlE:ARRay:POWer:MSLot:MAximum?	3.62
SAMPlE:ARRay:POWer:MSLot:MINimum?.....	3.62
SAMPlE:ARRay:POWer:MSLot[:CURRent]?	3.62
SAMPlE:ARRay:POWer:SLOT?	3.46
SAMPlE:ARRay:POWer:XSLot?	3.51
SAMPlE:ARRay:POWer[:NORMal]:EPSK:AVERage?	6.145
SAMPlE:ARRay:POWer[:NORMal]:EPSK:MAximum?	6.145
SAMPlE:ARRay:POWer[:NORMal]:EPSK:MINimum?	6.145
SAMPlE:ARRay:POWer[:NORMal]:EPSK[:CURRent]?	6.145
SAMPlE:ARRay:POWer[:NORMal][:GMSK]:AVERage?	6.145
SAMPlE:ARRay:POWer[:NORMal][:GMSK]:MAximum?	6.145
SAMPlE:ARRay:POWer[:NORMal][:GMSK]:MINimum?	6.145
SAMPlE:ARRay:POWer[:NORMal][:GMSK]:MPR:AVERage?	6.161
SAMPlE:ARRay:POWer[:NORMal][:GMSK]:MPR:MAximum?	6.161
SAMPlE:ARRay:POWer[:NORMal][:GMSK]:MPR:MINimum?	6.161
SAMPlE:ARRay:POWer[:NORMal][:GMSK]:MPR[:CURRent]?	6.161
SAMPlE:ARRay:POWer[:NORMal][:GMSK][:CURRent]?	6.145
SAMPlE:ARRay:SPECtrum:MODulation:TDOMain?.....	3.114
SAMPlE:ARRay:SPECtrum:MODulation[:FDOMain]:VMPoint?	3.113
SAMPlE:ARRay:SPECtrum:MODulation[:FDOMain]?.....	3.113
SAMPlE:ARRay:SPECtrum:MSWitching:VMPoint?.....	3.131
SAMPlE:ARRay:SPECtrum:MSWitching?	3.130
SAMPlE:ARRay:SPECtrum:SWITching:TDOMain?.....	3.126
SAMPlE:ARRay:SPECtrum:SWITching[:FDOMain]:VMPoint?	3.125
SAMPlE:ARRay:SPECtrum:SWITching[:FDOMain]?.....	3.124
SAMPlE:SUBarrays:MODulation:EVMagnitude:EPSK:AVERage?	3.92
SAMPlE:SUBarrays:MODulation:EVMagnitude:EPSK:MMAximum?	3.92

Command (Signalling, alphabetical)	Page
SAMPlE:SUBarrays:MODulation:EVMAgnitude:EPSK[:CURRent]?	3.92
SAMPlE:SUBarrays:MODulation:MERRor:EPSK:AVERage?	3.104
SAMPlE:SUBarrays:MODulation:MERRor:EPSK:MMAximum?	3.104
SAMPlE:SUBarrays:MODulation:MERRor:EPSK[:CURRent]?	3.104
SAMPlE:SUBarrays:MODulation:XPERror[:GMSK]:AVERage?	3.81
SAMPlE:SUBarrays:MODulation:XPERror[:GMSK]:MMAximum?	3.81
SAMPlE:SUBarrays:MODulation:XPERror[:GMSK][:CURRent]?	3.81
SAMPlE:SUBarrays:MODulation[:PERRor]:EPSK:AVERage?	3.98
SAMPlE:SUBarrays:MODulation[:PERRor]:EPSK:MMAximum?	3.98
SAMPlE:SUBarrays:MODulation[:PERRor]:EPSK[:CURRent]?	3.98
SAMPlE:SUBarrays:MODulation[:PERRor][:GMSK]:AVERage?	3.73
SAMPlE:SUBarrays:MODulation[:PERRor][:GMSK]:MMAximum?	3.73
SAMPlE:SUBarrays:MODulation[:PERRor][:GMSK][:CURRent]?	3.73
SAMPlE:SUBarrays:POWer:ABURst[:GMSK]?	6.153
SAMPlE:SUBarrays:POWer:FRAMe?	3.55
SAMPlE:SUBarrays:POWer:MSLot:AVERage?	3.63
SAMPlE:SUBarrays:POWer:MSLot:MAximum?	3.63
SAMPlE:SUBarrays:POWer:MSLot:MINimum?	3.63
SAMPlE:SUBarrays:POWer:MSLot[:CURRent]?	3.63
SAMPlE:SUBarrays:POWer:SLOT?	3.46
SAMPlE:SUBarrays:POWer:XSLot?	3.51
SAMPlE:SUBarrays:POWer[:NORMal]:EPSK:AVERage?	6.146
SAMPlE:SUBarrays:POWer[:NORMal]:EPSK:MAximum?	6.146
SAMPlE:SUBarrays:POWer[:NORMal]:EPSK:MINimum?	6.146
SAMPlE:SUBarrays:POWer[:NORMal]:EPSK[:CURRent]?	6.146
SAMPlE:SUBarrays:POWer[:NORMal][:GMSK]:AVERage?	6.146
SAMPlE:SUBarrays:POWer[:NORMal][:GMSK]:MAximum?	6.146
SAMPlE:SUBarrays:POWer[:NORMal][:GMSK]:MINimum?	6.146
SAMPlE:SUBarrays:POWer[:NORMal][:GMSK]:MPR:AVERage?	6.162
SAMPlE:SUBarrays:POWer[:NORMal][:GMSK]:MPR:MAximum?	6.162
SAMPlE:SUBarrays:POWer[:NORMal][:GMSK]:MPR:MINimum?	6.162
SAMPlE:SUBarrays:POWer[:NORMal][:GMSK]:MPR[:CURRent]?	6.162
SAMPlE:SUBarrays:POWer[:NORMal][:GMSK][:CURRent]?	6.146
SAMPlE:SUBarrays:SPECtrum:MODulation:TDOMain?	3.115
SAMPlE:SUBarrays:SPECtrum:MODulation[:FDOMain]?	3.114
SAMPlE:SUBarrays:SPECtrum:SWITChing:TDOMain?	3.126
SAMPlE:SUBarrays:SPECtrum:SWITChing[:FDOMain]?	3.125
SAMPlE[:SCALar]:MODulation:EVMAgnitude:EPSK?	3.91
SAMPlE[:SCALar]:MODulation:MERRor:EPSK?	3.103
SAMPlE[:SCALar]:MODulation:OVERview:EPSK?	3.85
SAMPlE[:SCALar]:MODulation:XPERror[:GMSK]?	3.79
SAMPlE[:SCALar]:MODulation[:PERRor]:EPSK?	3.97
SAMPlE[:SCALar]:MODulation[:PERRor][:GMSK]?	3.71
SAMPlE[:SCALar]:NPOWER?	3.42
SAMPlE[:SCALar]:POWer:ABURst[:GMSK]?	6.151
SAMPlE[:SCALar]:POWer:FRAMe:FPOWER<nr>?	3.55
SAMPlE[:SCALar]:POWer:MSLot?	3.61
SAMPlE[:SCALar]:POWer:PCL:PCLPower<PCL>?	6.157
SAMPlE[:SCALar]:POWer:PCL?	6.156
SAMPlE[:SCALar]:POWer:SLOT:SPOWER<nr>?	3.46
SAMPlE[:SCALar]:POWer:XSLot:SPOWER<nr>?	3.51
SAMPlE[:SCALar]:POWer[:NORMal]:EPSK?	6.143

Command (Signalling, alphabetical)	Page
SAMPlE[:SCALar]:POWer[:NORMal][:GMSK]:MPR?	6.161
SAMPlE[:SCALar]:POWer[:NORMal][:GMSK]?	6.143
SAMPlE[:SCALar]:RXQuality:BAverage?	6.179
SAMPlE[:SCALar]:RXQuality:BER?	6.172
SAMPlE[:SCALar]:RXQuality:BLER?	6.185
SAMPlE[:SCALar]:SPECTrum:MODulation?	3.112
SAMPlE[:SCALar]:SPECTrum:MSWitching?	3.130
SAMPlE[:SCALar]:SPECTrum:SWITching?	3.124
SAMPlE[:SCALar]:WPOWer?	3.39
[SENSe:]ARRay:POWer:MSLot:AREA:LIMit:INFO:STIME?	3.65
[SENSe:]ARRay:POWer:MSLot:AREA:LIMit:LOWer:INFO?	3.64
[SENSe:]ARRay:POWer:MSLot:AREA:LIMit:LOWer:LEVel?	3.64
[SENSe:]ARRay:POWer:MSLot:AREA:LIMit:LOWer:TIME?	3.64
[SENSe:]ARRay:POWer:MSLot:AREA:LIMit:UPPer:INFO?	3.64
[SENSe:]ARRay:POWer:MSLot:AREA:LIMit:UPPer:LEVel?	3.64
[SENSe:]ARRay:POWer:MSLot:AREA:LIMit:UPPer:TIME?	3.64
[SENSe:]BSSignal:PDATa[:TCH]:MSLot:RLEVel?	6.233
[SENSe:]CORRection:LOSS:INPut<nr>[:MAGNitude]	6.218
[SENSe:]CORRection:LOSS:OUTPut<nr>[:MAGNitude]	6.219
[SENSe:]LEVel:ATTenuation	6.188
[SENSe:]LEVel:DEFault	6.188
[SENSe:]LEVel:MAXimum	6.187
[SENSe:]LEVel:MODE	6.187
[SENSe:]MSSinfo:AMR:FRATe:DLCMode?	6.225
[SENSe:]MSSinfo:AMR:FRATe:DLCMode?	6.243
[SENSe:]MSSinfo:AMR:FRATe:ULCMode?	6.225
[SENSe:]MSSinfo:AMR:FRATe:ULCMode?	6.243
[SENSe:]MSSinfo:AMR:HRATe:DLCMode?	6.225
[SENSe:]MSSinfo:AMR:HRATe:DLCMode?	6.243
[SENSe:]MSSinfo:AMR:HRATe:ULCMode?	6.225
[SENSe:]MSSinfo:AMR:HRATe:ULCMode?	6.243
[SENSe:]MSSinfo:DNUMber?	6.224
[SENSe:]MSSinfo:IMEI:FAC?	6.223
[SENSe:]MSSinfo:IMEI:SNR?	6.223
[SENSe:]MSSinfo:IMEI:SVN?	6.223
[SENSe:]MSSinfo:IMEI:TAC?	6.223
[SENSe:]MSSinfo:IMSI:MCC?	6.223
[SENSe:]MSSinfo:IMSI:MNC?	6.223
[SENSe:]MSSinfo:IMSI:MSIN?	6.223
[SENSe:]MSSinfo:MSCLass:CSWitched?	6.224
[SENSe:]MSSinfo:MSCLass:PDATa:EGPRs?	6.238
[SENSe:]MSSinfo:MSCLass:PDATa[:GPRS]?	6.238
[SENSe:]MSSinfo:POWer:CLASs?	6.224
[SENSe:]MSSinfo:REVision?	6.223
[SENSe:]MSSinfo:TRAFFic?	6.224
[SENSe:]NETWork:MSERvice?	6.235
[SENSe:]RREPorts:COUNT?	6.221
[SENSe:]RREPorts:CVALue?	6.221
[SENSe:]RREPorts:DTX?	6.221
[SENSe:]RREPorts:GCBeP?	6.222
[SENSe:]RREPorts:GMBeP?	6.221
[SENSe:]RREPorts:NCELL?	6.221

Command (Signalling, alphabetical)	Page
[SENSe:]RREPorts:RPCL?	6.220
[SENSe:]RREPorts:RXLevel?	6.220
[SENSe:]RREPorts:RXQuality?	6.220
[SENSe:]RREPorts:SVARiance?	6.221
[SENSe:]SIGNalling:PDATa:SERVice?	6.230
[SENSe:]SIGNalling:PDATa:STATe?	6.230
[SENSe:]SIGNalling[:CSWitched]:SMS?	6.192
[SENSe:]SIGNalling[:CSWitched]:STATe?	6.191
[SENSe:]SPECTrum:MODulation:LIMit:LINE:USED?	3.109
[SENSe:]SPECTrum:MSWitching:LIMit:LINE:USED?	3.129
[SENSe:]SPECTrum:SWITching:LIMit:LINE:USED?	3.119
SOURce:CORRection:LOSS:INPut<nr>[:MAGNitude]	6.218
SOURce:CORRection:LOSS:OUTPut<nr>[:MAGNitude]	6.219
SOURce:DM:CLOCK:FREQuency	6.220
SOURce:DM:CLOCK:STATe	6.219
STATus:HANdover:TARGet:LIST?	6.196
STATus:OPERation:SYMBOLic:ENABle	3.37
STATus:OPERation:SYMBOLic:ENABle	6.186
STATus:OPERation:SYMBOLic[:EVENT]?	3.37
STATus:OPERation:SYMBOLic[:EVENT]?	6.186
STOP:MODulation:EVMAgnitude:EPSK	3.87
STOP:MODulation:MERRor:EPSK	3.99
STOP:MODulation:OVERview:EPSK	3.82
STOP:MODulation:XPERRor[:GMSK]	3.74
STOP:MODulation[:PERRor]:EPSK	3.93
STOP:MODulation[:PERRor][:GMSK]	3.66
STOP:NPOWER	3.40
STOP:POWER:ABURst[:GMSK]	6.148
STOP:POWER:FRAMe	3.52
STOP:POWER:MSLot	3.56
STOP:POWER:PCL	6.154
STOP:POWER:SLOT	3.43
STOP:POWER:XSLot	3.47
STOP:POWER[:NORMal]:EPSK	6.132
STOP:POWER[:NORMal][:GMSK]	6.132
STOP:POWER[:NORMal][:GMSK]:MPR	6.158
STOP:RXQuality:BAverage	6.175
STOP:RXQuality:BER	6.166
STOP:RXQuality:BLER	6.182
STOP:SPECTrum:MODulation	3.106
STOP:SPECTrum:MSWitching	3.127
STOP:SPECTrum:SWITching	3.116
STOP:WPOWER	3.37
SYSTem:OPTions:INFO:CURRent?	3.34
SYSTem:RESet:CURRent	3.35
TRIGger:OUTPut:DELay:VALue	6.189
TRIGger:OUTPut:PIN<nr>:DELay:ENABle	6.189
TRIGger:OUTPut:PIN<nr>:SIGNal	6.189
TRIGger[:SEQUence]:DEFault	6.190
TRIGger[:SEQUence]:SLOPe	6.189
TRIGger[:SEQUence]:SOURce	6.188
TRIGger[:SEQUence]:THReshold:IFPower	6.189

Command (Signalling, alphabetical)	Page
<i>TRIGger[:SEquence]:THReshold:RFPower</i>	6.188

Contents

7 Remote Control – Program Examples	7.1
GSM Non Signalling Measurements	7.1
GSM Signalling Measurements	7.3
Call Setup to the Mobile Phone, Simple RX/TX Measurements	7.3
Handover.....	7.5

7 Remote Control – Program Examples

The following program examples illustrate how to solve typical measurement tasks in the *Non Signalling* and in the *Signalling* mode. To keep the syntax as short and simple as possible, the programs were written with the aid of *Winbatch*, a batch job tool organizing and simplifying the transfer of commands and data between the controller and the instrument.

Winbatch uses device names such as *CMUBASE*, *CMUGSMNS*, *CMUGSMSIG* which are previously defined and assigned to the primary address, secondary address, and some general device settings. With these device names, a complete command line reads:

```
CMUBASE: <CMU_Command>
```

where <CMU_Command> may be any of the commands (setting commands or queries) specified within the function group and mode identified by the device name *CMUBASE*. Program sequences consisting of commands that are defined in several function groups and modes can be re-used with an exchanged device name.

In addition to these data transfer commands, *Winbatch* provides *WHILE*, *GOTO*, and *IF* statements to express conditions and define loops. With the statement

```
WHILE CMUGSM: SENS:SIGN:STAT? <> SYNC
```

the instrument waits until it has reached the signalling state *Synchronized* before it executes the following commands.

For a C program assigning secondary addresses refer to chapter 7 of the CMU200 manual.

GSM-MS Non Signalling Measurements

The CMU generates a GSM signal which is configured, output via RF 3, fed in via RF 4, and measured with the appropriate analyzer settings. To see which analyzer settings are necessary, it is recommended to carry out the measurement manually first. Before doing so and running the program, connect RF 1 to RF 2 using a coax cable, in analogy to the test setup suggested in chapter 2. Also, configure your *Winbatch* settings such that *CMUBASE* is the device name for the CMU *BASE* system and *CMUGSMNS* denotes function group *GSM900-MS Non Signalling*.

```
ECHO ON
```

```
FPRINT .....
FPRINT   INITIALISATION ROUTINE:
FPRINT   ASK FOR THE IDENTIFIER OF THE CMU, RESET THE INSTRUMENT,
FPRINT   DEFINE THE SECONDARY ADDRESSES FOR ALL AVAILABLE FUNCTION GROUPS
FPRINT .....
```

```
CMUBASE: *IDN?           Identification query
CMUBASE: *RST;*OPC?     Reset the instrument; prevent the following
                        command to be executed before *RST is
                        complete
CMUBASE: *CLS           Clear output buffer, set status byte
CMUBASE: SYST:REM:ADDR:SEC 1,"RF_NSig"      Define all function groups
CMUBASE: SYST:REM:ADDR:SEC 2,"GSM900MS_Sig"
CMUBASE: SYST:REM:ADDR:SEC 3,"GSM900MS_NSig"
CMUBASE: SYST:REM:ADDR:SEC 4,"GSM1800MS_Sig"
CMUBASE: SYST:REM:ADDR:SEC 5,"GSM1800MS_NSig"
CMUBASE: SYST:REM:ADDR:SEC 6,"GSM1900MS_Sig"
CMUBASE: SYST:REM:ADDR:SEC 7,"GSM1900MS_NSig"
```

```
FPRINT .....
FPRINT   CONNECTORS + ATTENUATION
```

```

FPRINT .....
CMUGSMNS: INP:STAT RF4           Define input connector RF4
CMUGSMNS: OUTP:STAT RF3         Define output connector RF3
CMUGSMNS: SENS:CORR:LOSS:INP2 0.0  Make sure that external attenuations are set
CMUGSMNS: SENS:CORR:LOSS:OUTP2 0.0  to zero

FPRINT .....
FPRINT  GENERATOR SETTINGS
FPRINT .....

CMUGSMNS: CONF:RFG:MOD:BIT:SEL DUMM  Select GSM dummy burst to be generated
CMUGSMNS: CONF:RFG:MOD:TSEQ:SEL GSM0  Select training sequence
CMUGSMNS: CONF:RFG:MOD:TRAN BURS     Select signal shape (burst signal)
CMUGSMNS: SOUR:RFG:FREQ:CHAN 900 MHZ  Set RF carrier frequency
CMUGSMNS: SOUR:RFG:LEV:UTIM -5       Set RF level in used timeslot
CMUGSMNS: INIT:RFG:*OPC?            Switch on RF generator

FPRINT .....
FPRINT  ANALYZER SETTINGS
FPRINT .....

CMUGSMNS: RFAN:CHAN 900 MHZ         Adjust analyzer frequency to generator freq.
CMUGSMNS: RFAN:TSEQ GSM0           Adjust training sequence analyzed
CMUGSMNS: SYST:ERR?                Read error queue

FPRINT .....
FPRINT  CONFIGURE THE POWER MEASUREMENT
FPRINT .....

CMUGSMNS: CONF:POW:CONT SCAL,1      Scalar results, one burst per statistics cycle
CMUGSMNS: CONF:POW:CONT:REP SING,NONE,NONE  Single shot measurement, no stop on error
CMUGSMNS: CONF:POW:MPR:CONT SCAL,1   Same settings as before, but for combined
CMUGSMNS: CONF:POW:MPR:CONT:REP SING,NONE,NONE  power and modulation measurement

FPRINT .....
FPRINT  SETTLE THE EXPECTED POWER (+OVERSHOOT MARGIN) AND MEASURE THE POWER
FPRINT  REMEMBER: RFG POWER -5 dBm
FPRINT .....

CMUGSMNS: LEV:MAX 0                 Adjust expected maximum level
CMUGSMNS: READ:POW:MPR?            Start single shot measurement, wait until it is
                                     terminated, and return scalar power and
                                     modulation results

FPRINT .....
FPRINT  FREE TX MEASUREMENT DSP RESOURCES
FPRINT .....

CMUGSMNS: ABOR:POW:MPR             Abort combined power/mod measurement,
                                     free resources

FPRINT .....
FPRINT  RFG POWER -10 dBm, USING FASTER WIDEBAND PEAK POWER METER
FPRINT .....

CMUGSMNS: SOUR:RFG:LEV:UTIM -10;*OPC?  Select RF level in used timeslot
CMUGSMNS: LEV:MAX -5               Adjust expected maximum level
CMUGSMNS: READ:SPOW?              Start single shot wide band peak power
                                     measurement, wait until it is terminated,
                                     and return result
    
```

The measurement can be easily repeated at other RF levels or with different configurations.

GSM Signalling Measurements

A GSM mobile phone is connected to the bidirectional connector RF2 as described in chapter 2 and tested. We assume that the mobile phone is capable of operating in the GSM900 band; in the example involving a GSM900/1800 handover, an appropriate dual-band mobile must be used. Moreover, a test SIM card for the mobile phone is required.

Call Setup to the Mobile Phone, Simple RX/TX Measurements

Preliminary configurations for a power and receiver quality measurement are defined, and the network parameters are set for maximum speed of the call procedure. The IMSI of the mobile phone must be known to set up a call; it can be either reported to the tester or will be determined during the location update. The first alternative will speed up the call procedure.

Next, the CMU generates a BCCH (C0 carrier) signal for synchronization. The mobile phone searches the whole channel range for this BCCH and camps on it for some mobile-specific time until it reaches the *Synchronized* state. In this state, configuration settings made at the beginning are checked, and the CMU sets up a call to the mobile phone. Parameters such as the PCL and channel should be defined before the call is setup to reduce signalling time (no PCL/channel change). As soon as the call is established, power and receiver quality measurements are performed.

Before running the program, configure your *Winbatch* settings such that *CMUBASE* is the device name for the CMU *BASE* system and *CMUGSM* denotes function group *GSM900-MS Signalling*.

ECHO ON

```
FPRINT .....
FPRINT   INITIALISATION ROUTINE:
FPRINT   ASK FOR THE IDENTIFIER OF THE CMU, RESET THE INSTRUMENT,
FPRINT   DEFINE THE SECONDARY ADDRESSES FOR ALL AVAILABLE FUNCTION GROUPS
FPRINT .....

CMUBASE: *IDN?           Identification query
CMUBASE: *RST;*OPC?     Reset the instrument; prevent the following
                        command to be executed before *RST is
                        complete
CMUBASE: *CLS           Clear output buffer, set status byte
CMUBASE: SYST:REM:ADDR:SEC 1,"RF_NSig"      Define all function groups
CMUBASE: SYST:REM:ADDR:SEC 2,"GSM900MS_Sig"
CMUBASE: SYST:REM:ADDR:SEC 3,"GSM900MS_NSig"
CMUBASE: SYST:REM:ADDR:SEC 4,"GSM1800MS_Sig"
CMUBASE: SYST:REM:ADDR:SEC 5,"GSM1800MS_NSig"
CMUBASE: SYST:REM:ADDR:SEC 6,"GSM1900MS_Sig"
CMUBASE: SYST:REM:ADDR:SEC 7,"GSM1900MS_NSig"

FPRINT .....
FPRINT   CONNECTORS + ATTENUATION
FPRINT .....

CMUGSM: INP:STAT RF2     Define input connector RF2
CMUGSM: OUTP:STAT RF2   Define output connector RF2
CMUGSM: SENS:CORR:LOSS:INP2 1.0   Define external attenuation to compensate
CMUGSM: SENS:CORR:LOSS:OUTP2 1.0   for known cable losses

FPRINT .....
FPRINT   NETWORK PARAMETERS, SELECTED FOR MAXIMUM SPEED OF THE CALL PROCEDURE
FPRINT   THE IMSI REQUIRED MAY DIFFER FROM THE EXAMPLE (=DEFAULT) SETTINGS
FPRINT .....

CMUGSM: CONF:NETW:SMOD:IMSI:MNC 001;MCC 01;MSIN '1000000095'      Set IMSI
CMUGSM: CONF:NETW:REQ:IMSI OFF                                     Switch IMSI request off
```

```

CMUGSM: CONF:NETW:REQ:IMEI OFF           Switch IMEI request off
CMUGSM: CONF:NETW:REQ:AUTH OFF          Switch authentication request off
CMUGSM: CONF:NETW:REQ:HAND OFF         Switch handover request off
CMUGSM: CONF:NETW:SMOD:SCH FACCH       Signalling via FACCH
CMUGSM: CONF:NETW:SMOD:PCH FAST        Fast power change (over FACCH)

FPRINT .....
FPRINT  CONFIGURATION OF A SINGLE SHOT BER MEASUREMENT
FPRINT .....

CMUGSM: CONF:RXQ:CONT:HTIM 0.2,0.0     Reduce holdoff times for AGC and
                                         bit stream synchronization
CMUGSM: CONF:RXQ:BER1:CONT:LEV:UTIM -102.0 Absolute level in used timeslot
CMUGSM: CONF:RXQ:BER1:CONT:LEV:UNT -20.0 Relative level in unused timeslot
CMUGSM: CONF:RXQ:BER1:CONT:REP NONE,NONE No stop on error
CMUGSM: CONF:RXQ:BER1:CONT BER,129     Bit error rate measurement over 129 frames
CMUGSM: CONF:RXQ:BER:TSET T1          Store configuration in test setup 1

FPRINT .....
FPRINT  CONFIGURATION OF A SINGLE SHOT POWER MEASUREMENT
FPRINT .....

CMUGSM: CONF:POW:MPR:CONT SCAL,10      Scalar results, 10 bursts per statistics cycle
CMUGSM: CONF:POW:MPR:CONT:REP SING,NONE,NONE Single shot measurement, no stop on error

FPRINT .....
FPRINT  DEFINITION FOR BCCH BS POW: -85 dBm / Channel 5
FPRINT .....

CMUGSM: CONF:BSS:CCH:LEV -85.0;*OPC?   Absolute power of BCCH BS signal
CMUGSM: CONF:BSS:CCH:CHAN 30;*OPC?     Channel number of BCCH BS signal

FPRINT .....
FPRINT  DEFINITION FOR TESTSET BS POW: -85 dBm (-102 dBm) / Channel 1 / PCL 5
FPRINT .....

CMUGSM: CONF:BSS:TCH:LEV:UTIM -85.0;*OPC? Absolute power of TCH BS signal, used TS
CMUGSM: CONF:BSS:CHAN 1;*OPC?         Channel number of TCH BS signal
CMUGSM: CONF:NETW:POW 5;*OPC?        Power control level of the mobile
                                         setting up a call

FPRINT .....
FPRINT  GENERATING THE BCCH
FPRINT .....

CMUGSM: PROC:SIGN:ACT SON;*OPC?       Switch on BCCH signal

FPRINT .....
FPRINT  WAIT FOR LOCATION UPDATE
FPRINT .....

REPORT OFF
WHILE CMUGSM: SENS:SIGN:STAT? <> SYNC Wait until signalling state Synchronized is
                                         reached, then go to next command

REPORT ON

FPRINT .....
FPRINT  CALL PROCEDURE (CHECK IMSI IF THIS PROCEDURE FAILS)
FPRINT .....

CMUGSM: PROC:SIGN:ACT MTC;*OPC?       Initiate a mobile terminating call

FPRINT .....
FPRINT  REDUCE THE BS POWER. THIS AFFECTS THE BER BUT NOT THE TX MEASUREMENTS
FPRINT .....

```

```

CMUGSM: PROC:BSS:LEV:UTIM -102;*OPC?           Absolute power of TCH BS signal, used TS

FPRINT .....
FPRINT  START THE SINGLE SHOT BER (RXQ:BER) AND THE POWER/MODULATION MEASUREMENT
FPRINT  THE TX MEASUREMENTS ARE FASTER AND WILL BE FINISHED FIRST
FPRINT  WHILE THE RXQ:BER MEAS. IS RUNNING THE RXLEV AND RXQUAL CAN BE QUERIED
FPRINT  .....

CMUGSM: INIT:RXQ:BER;*OPC?           Initiate single shot BER measurement
CMUGSM: INIT:POW:MPR;*OPC?         Initiate combined power/mod. measurement

WHILE CMUGSM: FETC:POW:MPR:STAT? !{} RDY      Wait until power/mod. measurement is in the
                                           RDY (ready) state, then go to next command
CMUGSM: FETC:POW:MPR?               Return scalar power/mod. results

[MEAS1_1]
IF CMUGSM: FETC:RXQ:BER:STAT? {} RDY GOTO MEAS1_2  Check whether BER measurement is ready
CMUGSM: RREP:RXL?                   Return RXLev reported by the mobile
CMUGSM: RREP:RXQ?                   Return RXQual reported by the mobile
GOTO MEAS1_1
[MEAS1_2]
CMUGSM: FETC:RXQ:BER?               Read out BER measurement results
    
```

To change the traffic channel without dropping the call, use the `PROC:SIGN:CHAN` command. To change the PCL of the mobile, use `PROC:SIGN:MS:PCL`. To change both parameters simultaneously, use `PROC:SIGN:CHCC`.

Handover

The example of the last section is repeated for a GSM900/1800 dual-band mobile phone. To this end, extend your *Winbatch* settings such that *CMUDCS* denotes function group *GSM1800-MS Signalling*. Repeat and modify the program of the last section in the following way:

- Before the BCCH signal is generated, set the parameters for call setup and for the measurements in function group *GSM1800-MS Signalling*:

```

CMUDCS: INP:STAT RF2                 Define input connector RF2
CMUDCS: OUTP:STAT RF2               Define output connector RF2
CMUDCS: SENS:CORR:LOSS:INP2 2.0     Define external attenuation to compensate
CMUDCS: SENS:CORR:LOSS:OUTP2 2.0   for known cable losses

CMUDCS: CONF:NETW:SMOD:PCH FAST      Fast power change (over FACCH)

CMUDCS: CONF:RXQ:CONT:HTIM 0.2,0.0  Reduce holdoff times for AGC and
                                           bit stream synchronization
CMUDCS: CONF:RXQ:BER1:CONT:LEV:UTIM -102.0  Absolute level in used timeslot
CMUDCS: CONF:RXQ:BER1:CONT:LEV:UNT -20.0   Relative level in unused timeslot
CMUDCS: CONF:RXQ:BER1:CONT:REP NONE,NONE    No stop on error
CMUDCS: CONF:RXQ:BER1:CONT BER,129         Bit error rate measurement over 129 frames
CMUDCS: CONF:RXQ:BER:TSET T1             Store configuration in test setup 1

CMUDCS: CONF:POW:MPR:CONT SCAL,10       Scalar results, 10 bursts per statistics cycle
CMUDCS: CONF:POW:MPR:CONT:REP SING,NONE,NONE  Single shot measurement, no stop on error

CMUDCS: CONF:BSS:CHAN 512             Channel number of TCH BS signal
CMUDCS: CONF:NETW:POW 5               Power control level of the mobile
                                           setting up a call
    
```

- Generate the BCCH signal and set up the call as shown in the previous section. This means that the mobile operates on the GSM900 band while the signalling procedures are carried out.

- As soon as the call is established `RXQuality` and other measurements can be performed in the GSM900 band. Instead initiate a dual-band handover to GSM1800:

```

FPRINT .....
FPRINT  DUALBAND HANDOVER
FPRINT .....

CMUGSM: CONF:HAND:TARG 'GSM1800MsDualBand'      Define target band for handover
CMUGSM: PROC:SIGN:ACT HAND;*OPC?                Initiate handover procedure

REPORT OFF
WHILE CMUDCS: SENS:SIGN:STAT? <> CED            Wait until signalling state Call Established
                                                Dualband is reached, then continue

REPORT ON

CMUDCS: SENS:SIGN:STAT?                          Query signalling state (printout)

FPRINT .....
FPRINT  CHANNEL 512, PCL 0
FPRINT .....

CMUDCS: INIT:RXQ:BER                             Initiate single shot BER measurement
CMUDCS: INIT:POW:MPR                             Initiate combined power/mod. measurement

WHILE CMUDCS: FETC:POW:MPR:STAT? !{ } RDY      Wait until power/mod. measurement is in the
                                                RDY (ready) state, then go to next command
                                                Return scalar power/mod. results

CMUDCS: FETC:POW:MPR?

FPRINT .....
FPRINT  CALL RELEASE
FPRINT .....

CMUDCS: PROC:SIGN:ACT CREL;*OPC?
    
```

Index

1

1st Chan 4.108

3

3G Neighbor Cell Description 4.186, 6.217

8

8PSK modulation 4.33

9

95th percentile 4.47, 3.85

A

Access burst 4.32
 Access Class 6.210
 Additional RF Generator 4.78, 4.175
 Address (primary/secondary) 5.1
 Advice of Charge 4.184, 6.207
 AF Connector Overview
 Non Signalling 4.84
 Signalling 4.187
 AF/RF Input/Output
 indication 4.158
 AGC Holdoff Time 4.146
 Alerting 4.93, 4.196
 WCDMA to GSM handover 4.158, 6.196
 AMR
 remote control 6.213, 6.239
 AMR Rate Set 4.215, 6.215, 6.241
 Analyzer
 Signalling 4.191
 Analyzer (Non Signalling) 4.72
 Analyzer Level
 Non Signalling 4.76
 Power (NS) 4.12
 Power vs. Time (Sig) 4.104
 Signalling 4.192
 Analyzer Settings (Power) 4.13
 Analyzer/Generator menu 4.2
 Applic1/Applic2
 Power (Sig) 4.102
 Application 2.21, 3.5
 Modulation – 8PSK 4.45
 Modulation – GMSK 4.40
 Power (NS) 4.5, 4.10
 Receiver Quality 4.134
 Spectrum 4.57
 Area Info 4.35
 Attenuation 6.2, 6.188
 external 4.85
 input level 4.77
 Audio
 measurements
 Non Signalling 4.71
 Audio Generator and Analyzer 4.186
 Authentication Request 4.183, 6.213
 Auto Slot Config 4.201, 6.232
 Automatic gain control 4.146
 Autoranging 4.76
 AUX 3 connector 4.189

Aux Tx 4.78
 Aux TX 4.175, 6.205
 Non Signalling 4.78
 Average 4.29
 Average Burst Power 4.6, 4.7, 4.117
 Average values (calculation) 3.7
 Averaging Areas 4.63, 3.109

B

B52 Mode 4.181, 6.207
 BA List 2.17, 4.186, 6.206
 Bad DUT 4.146
 Band Indicator 4.185, 6.209
 Bar graph (Spectrum)
 Due to Modulation 4.59, 3.113
 Due to Switching 4.61, 3.124
 Modulation 4.60, 3.113, 3.114, 3.125, 3.126, 3.131
 Switching 4.61, 3.130
 BCC 4.181, 6.208
 BCCH Level 4.170, 6.201
 BER 4.133
 remote control 6.164
 BER Average 4.134
 Bit class 4.122
 Bit error rate see BER
 Bit Modulation 4.82, 6.6
 Bit Modulation (Power, NS) 4.15
 Bit Offs. 6.14, 6.133, 6.149
 Bit Stream 4.178, 6.211, 6.238
 GPRS 4.211
 Power 4.106
 Bit Stream BER 4.135
 Bit stream synchronization 4.146
 Bit StreamBER 6.164
 Bit structure (normal burst) 4.74
 BLEP
 display of results 4.139
 hotkey 4.134
 Braces 5.10
 BS Signal 2.15, 4.207
 indication 4.158
 menu 4.168
 Receiver Quality 4.135
 remote control 6.200, 6.232
 softkey 4.105, 4.108
 BS-AG-BLKS-RES 4.185, 6.209
 BS-PA-MFRMS 4.185, 6.209
 Buffer Writing 6.227
 Burst (bit structure) 4.74
 Burst Matching
 Non Signalling 4.59
 Power 3.63
 Power (NS) 4.21, 6.27
 Power (Sig) 6.147
 Burst power (trace)
 Power 3.62
 Power (Sig) 6.152
 Power (NS) 4.22, 4.24, 6.25
 Power (Sig) 6.145
 Bursts out of Tolerance
 Modulation 3.72
 Modulation (GMSK) 4.42

C

C Value 4.142, 6.221

Call Access 6.209
 Call Established 4.93, 4.196
 Call from MS 4.93
 Call Pending (Handover) 4.159
 Call setup 2.14
 program example 7.3
 Cancel Prepar. 4.161
 Cell Access 4.185
 Cell Synchronization 4.158, 6.196
 Change Destination 6.226
 Channel 4.105, 6.155
 Power 4.14
 Channel Count 4.107, 6.155
 Channel Type
 Aux TX 4.175, 6.205
 Circuit Switched – Traffic Channel 4.165
 Class 1b Bits 4.150, 6.171, 6.178
 Class II Bits 4.150, 6.171, 6.178
 Closed loop (power control) 4.205
 CMU-B41 (option) 4.186
 CMU-B52 (option) 4.186, 6.219
 CMU-B95 4.78, 4.175
 Codec Cal 4.179
 Codec Mode DL 4.216, 6.214, 6.239
 requested by MS 4.216, 6.225, 6.243
 Codec Mode UL 4.216, 6.214, 6.240
 used by MS 4.216, 6.225, 6.243
 Coding Scheme 4.209, 6.235
 Command
 order 5.8
 structure 5.1
 tables (description) 5.8
 Confidence BER 4.129
 Confidence Fail 4.146, 6.165
 Confidence Pass 4.146, 6.165
 Confidence Settings 4.146, 6.166
 Configuration 3.2
 Configuration file 4.147
 Connect Mobile 4.93, 4.98, 4.153
 Connect. Control Guidance 4.193
 Connection (Alerting) 4.153
 Connection (Call Established) 4.155
 Connection (Signal Off) 4.94
 Connection (Signal On) 4.97
 Connection (Synchronized) 4.152
 Connection Control
 Non Signalling 4.72
 remote control (NS) 6.1
 remote control (Sig) 6.187
 Signalling 4.93, 4.152, 4.196
 Connectors (RF) 2.3
 Cont. Stat. Mode 4.63, 3.117
 Continuous 5.5
 Continuous measurement 4.29
 Receiver Quality 4.134
 Counting 5.5
 CS1 to CS4 4.177, 4.209
 Current 4.29
 Current parameter set 6.187
 (E)GPRS 6.228
 CV BEP 4.143, 6.222
 Cyclic redundancy check 4.122

D

DAI Acoustic Dev. 4.163, 6.192
 Data Block Error Rate 4.123
 Data compensated (ref. power) 4.30
 DBLER 4.123, 4.151
 Decode 4.40, 4.52, 3.70, 3.75
 Decoder Cal 4.178

Default IMSI 4.182, 6.212
 Default parameter set 6.187
 (E)GPRS 6.228
 Default Scale 4.19
 Default Settings 4.28
 Delay
 trigger 4.190, 6.189
 Delta marker 4.15
 Destination Parameter 4.160
 Destination Selection 4.159, 6.196
 Dialed Number 4.157, 6.224
 Digital Audio Interface (DAI) 4.163
 Disconnect Mobile 4.154
 Discontinuous Transmission (DTX) 4.168
 Display Area (Power, NS) 4.16
 Display line 4.15
 Display mode 3.6, 3.7
 Display Mode
 Modulation (NS) 4.51
 Power 4.12
 Power (NS) 4.29
 Display/Marker 4.18
 Spectrum 4.57
 Display/Marker (Power, NS) 4.16
 DL Resources in Use 4.149, 6.184
 D-Line
 Non Signalling 4.16
 Doppler shift 4.74
 Downlink Power Control 4.207
 DTX 2.17, 4.168, 6.198, 6.221
 Dual-band handover 4.159
 Dummy burst 4.32
 Dummy Bursts 4.82
 Duplex spacing 4.73, 4.80
 Dynamic limit line correction 4.36
 Dynamic power control 2.19
 Dynamic range 4.77

E

EDGE 4.33
 E-GSM 4.73, 4.80
 Enable software 1.6
 Encoder Cal 4.178
 EPSK 6.13, 3.34, 3.66, 3.106, 6.132
 Err. Vect. Magn.
 peak 4.7
 RMS 4.7
 Error Vector Magn. 8PSK 4.45
 Error Vector Magnitude see EVM
 Non Signalling 4.7
 EVM 8PSK 4.45
 Ext. Att. Input 4.85, 6.8, 6.218
 Ext. Att. Output 4.85, 6.9, 6.219
 Ext. Phase Err. GMSK 4.39
 Ext. Phase Error GMSK
 Analyzer/Generator 4.5
 Ext. Trigger (AUX 3/4) 4.90, 6.11
 Extend. Dyn. Alloc 4.210, 6.237
 External attenuation 4.85
 remote control (NS) 6.8
 External trigger 4.89

F

FAC 4.157, 6.223
 False USF Det 4.123
 FDD ARFCN Band 1 4.186, 6.217
 FER 4.151
 Filter 6.14, 3.59, 3.67, 3.75, 6.133
 Power (NS) 4.30

Fixed Meas. Points (Spectrum) 4.69, 3.107
 Frame Count 4.32, 3.52
 Frame erasure rate 4.122
 Frame Errors 6.178
 Frame trigger 4.189
 Frames 4.147
 Free run trigger 4.89, 4.189
 Free Run trigger 4.13
 Frequency 4.14
 Aux Tx generator 6.6
 Aux TX generator 4.82
 Power 4.14
 Frequency Error 4.6, 4.7
 Frequency error (GMSK) 4.38
 Frequency hopping 2.19, 4.176
 Frequency hopping table 4.171
 Frequency Offset 4.169, 6.200
 analyzer 4.14, 4.74
 RF generator 4.81, 6.5
 Frequency Offset (Power, NS) 4.14
 Frequency Offset analyzer 6.3
 from other network 4.170, 4.175
 Full Rate 4.177
 Function group 5.1
 GSM400/850/900/1800/1900-MS Non Signaling 4.2
 GSM400/850/900/1800/1900-MS Signalling 4.93

G

Gain 4.85
 Gamma 4.206
 Generator 4.79, 6.4
 6.5
 Generator (Non Signalling) 4.78
 Generator Aux TX 4.81
 Generator control
 remote control (NS) 6.4
 Generator frequency (NS) 4.80
 Generator level (NS) 4.79
 Generator modulation
 remote control (NS) 6.6
 Generator Settings (Power) 4.14
 Getting Started 2.1
 GMSK 6.13, 3.34, 3.66, 3.106, 6.132
 GMSK 8PSK 6.3
 GMSK modulation 2.13
 GPRS 4.195
 Grid
 Power 3.57
 Power (NS) 4.30, 6.15
 Power (Sig) 6.135
 3.107, 3.118
 GSM band 4.156
 GSM modulation 4.32
 GSM phase 4.156
 Guard bit 4.52

H

Half Rate 4.177
 Handover 4.158
 program example 7.5
 remote control 6.196
 WCDMA to GSM 4.158
 Handover (softkey) 4.161
 Handover Request 4.184, 6.213
 Handset 4.178
 Handset Low 4.178
 HLT state 2.9
 Holdoff Time 4.145, 6.164
 Hopping 4.105, 6.193

Enable, Packet Data 4.208, 6.231
 Softkey 4.171
 Hopping Sequence
 Packet Data 4.208, 6.233
 Hopping Sequence List 4.175
 Hotkey 2.11

I

I/Q Imbalance
 8PSK 4.44
 GMSK 4.42
 I/Q-IF 4.91, 3.35
 Non Signalling 4.91
 Signalling 4.191
 I/Q-IF Interface
 remote control 3.35
 Identifier 5.9
 IF Power 6.11, 6.189
 IF Power (trigger) 4.90
 IMEI 4.157
 IMEI Request 4.183, 6.213
 IMSI 4.157
 IMSI Request 4.183, 6.213
 Incremental Redundancy 6.236
 Incremental Redundancy 4.210
 Individual Levels BER 4.149
 Info 3.34
 Info box
 Power (NS) 4.21, 4.23
 Power (Sig) 4.109, 4.114
 Info Box 4.19, 4.32
 Input level
 remote control (NS) 6.1, 6.187
 Inputs/outputs
 Non Signalling 4.83
 remote control (Sig) 6.218
 Signalling 4.186
 Installation 1.1
 Installation (software) 1.1
 Interference 2.23
 Intermodulation 4.77
 INV 5.9

L

LAC 6.208
 Level
 Aux TX 4.175, 6.206
 Level (trigger)
 Non Signalling 4.90
 Signalling 4.190
 Level Mode 4.173, 6.204
 Level Scale 4.19
 Limit
 check 5.6
 lines 5.6
 specify 5.6
 Limit lines
 remote control (NS) 6.16
 remote control (Sig) 6.136
 Limit lines (Power)
 Non Signalling 4.32
 Signalling 4.113, 4.115
 Limit Matching
 Power 3.61
 Power (Sig) 6.152
 Power (NS) 6.24
 Power (Sig) 6.144
 Limit Selection 4.66, 3.105
 Limits

8PSK modulation	3.84
Modulation	3.84
Spectrum – Modulation	3.109
Limits (Modulation)	
Non Signalling	4.52
Non Signalling	4.52
remote control	3.68, 3.76
Limits (Power)	
Signalling	4.37, 4.116
Limits (Receiver Quality)	
remote control	6.171, 6.178
Signalling	4.138, 4.146, 4.150
Limits (Spectrum)	
Non Signalling	4.64, 3.120
remote control	3.109, 3.119, 3.129
List of Commands	
description	5.10
Local to Remote	6.190, 6.229
Location Update	2.17, 4.182, 6.210
Loop	6.195, 6.199
Multislot	4.167
Single Slot	4.163
Loop Command	4.183, 6.212
Loop-back	4.178
Loopback mode	4.122, 4.126
Low distortion	4.77
Low noise	4.77
Lower Limit Line	4.37
Power (NS)	6.18
Power (Sig)	6.137

M

Magnitude Error 8PSK	4.46
Main Service	4.96, 6.235
Main Timeslot	4.108, 4.166, 4.173, 4.206, 6.204, 6.233
Receiver Quality	4.124
Mains switch	2.2
Manual control	3.1
Marker	2.11, 4.15
Marker/Display	
Spectrum	4.58
Marker/Display (Power, NS)	4.15
Max. Level	6.2, 6.187
input	4.73
Maximum	4.29
Maximum timeout	4.184
Maximum/Minimum	4.51
MCC	4.157, 6.208, 6.223
MCS1 to MCS9	4.177, 4.209
Mean BEP	4.143, 6.221
Meas X	
Spectrum Configuration	4.69
Meas. Control	
remote control	6.197
Meas. Mode	
Receiver Quality	4.148
remote control	6.167, 6.176
Meas. Slot	4.107, 4.118, 4.120, 4.192, 6.197
Meas. Timeslot	
Receiver Quality	4.124
.....	3.107, 3.118
Measure Points (Spectrum)	3.118
Measurement control	5.2
Measurement groups	3.3
Measurement report (MS)	4.141
Menu Select	2.4, 2.14
Menu structure	3.1
Message box	4.95
Min. Test Time	4.146, 6.165
Minimum	4.29

Misc.	4.193
MNC	4.157
Mobile country code	4.181
Mobile network code	4.181
Mobile Originated Call	4.93
Mobile phone (connection)	2.2
Mobile Terminating Call	4.93
Mode	4.170
BCCH	6.200
Modulation	3.75, 3.83, 3.88, 3.94, 3.100
Modulation & Switching	4.61, 3.127
Modulation (Spectrum)	4.56, 4.57
Modulation Configuration	
Non Signalling	4.50
remote control	3.83, 3.88
Signalling	4.119
Modulation Error	
Modulation	3.68, 3.76, 3.77
Modulation measurement	
Non Signalling	4.38
remote control	3.66
Signalling	4.118
Modulation measurement (control)	
Non Signalling	4.50
remote control	3.67
Modulation View	4.19, 4.31, 3.58
Modulation/Switching (Spectrum)	4.57
Module test	2.6
MS Capabilities	4.156
MS Rev. Level	6.223
MS Signal	4.104, 4.205
indication	4.157
menu	4.161
P/PCL	4.107
remote control	6.197, 6.232
MSIN	4.157, 6.223
Multislot	
NS	4.17
Multislot class	6.224, 6.238
Multislot Guard	4.37, 3.59

N

NAN	5.9
Narrowband power	
remote control	3.40
NCC	4.181, 6.207
Neighbor Cells	4.134
Network	4.106, 4.135
indication	4.158
menu	4.176, 4.208
Network Identity	4.181, 4.209
Network parameters	
remote control	6.206, 6.234
Network Support	4.96, 4.209, 6.234
NETWork[
CSWitched] parameters	
remote control	6.212
Noise Suppression	4.184, 4.217, 6.213, 6.239
Non Signalling	3.1
functions	4.2
program example	7.1
Non signalling measurements	2.6
Normal (attenuation)	4.77
Normal burst	4.32
Notation (remote control)	5.8
Number of PDUs	4.210, 6.237

O

On Limit Failure	4.29
------------------------	------

Open loop (power control) 4.205
 Operating concept 3.1
 5.7
 Option
 CMU-B41 4.186
 CMU-B52 4.186, 6.219
 Options (Setup)
 remote control 3.34
 Origin Offset
 8PSK 4.44
 GMSK 4.42
 Out-of-tolerance measurement
 Power vs Time 2.19
 Sensitivity 2.23
 Output fields
 Spectrum 4.59
 Output Trigger 4.190, 6.189
 Overview (Signalling) 4.99
 Overview 8PSK 4.45
 Analyzer/Generator 4.5
 Ovw., EVM, ME, PE, DQPSK 4.53

P

P/Frame
 Power (NS) 4.11
 Power (Sig) 4.103
 P/PCL 4.103, 4.107
 P/Slot Graph
 Power (NS) 4.11
 Power (Sig) 4.103
 P/Slot Table
 Power (NS) 4.11
 Power (Sig) 4.103
 P/t Access Burst
 Power (Sig) 4.104
 P/t Multislot
 Power (NS) 4.11, 4.103
 remote control 3.56
 Sig 4.106
 P/t Multislot (control)
 remote control 3.56
 P/t Norm. 8PSK 4.17
 P/t Norm. GMSK 4.10
 Analyzer/Generator 4.4
 P/t Normal 8PSK
 Power (NS) 4.10
 Power (Sig) 4.103
 P/t Normal GMSK
 Analyzer/Generator 4.5
 Power (NS) 4.10
 Power (Sig) 4.103
 P0 4.208, 6.232
 Packet Data 4.209
 Packet Data – Multi Slot 4.206, 4.208
 Paging Reorganisation 4.185, 6.209
 Parameter
 current vs. default 6.187
 current vs. default ((E)GPRS) 6.228
 Parameter (SCPI command) 5.9
 Parameter line 4.20
 Partial reset 3.35
 PC Meas. Chan. 4.210, 6.236
 PCL 4.104, 4.117, 6.194
 PCL (softkey) 4.162
 PCL Level 4.116, 2.19, 6.198
 PCL/Channel (table) 4.113
 PDP Context Activation 4.211, 6.238
 PDU 4.210, 6.237
 Peak Burst Power 4.6, 4.7
 P-GSM 4.73, 4.80

Phase difference trajectory 4.38
 Phase error
 peak 4.6
 RMS 4.6
 Phase error (GMSK) 4.38
 Phase Error 8PSK 4.46
 Phase Error GMSK 4.40
 PIN number 2.15
 PMAX 4.168, 6.197
 Power 6.14, 3.57, 3.107, 6.134
 Non Signalling 4.8
 remote control (NS) 6.13
 Signalling 4.101
 Power
 remote control (Sig) 6.132
 Power
 remote control (Sig) 6.148
 Power (control)
 remote control (Sig) 6.148
 Power configuration
 remote control (Sig) 6.134, 6.149, 6.160
 Power (control)
 remote control (NS) 6.13
 remote control (Sig) 6.132
 Power (wide band)
 Non Signalling 4.75
 Signalling 4.96
 Power (wideband)
 remote control 3.37, 3.40
 Power change 4.182
 Power Change Mode 4.182, 6.210
 Power class 4.116, 6.224
 Power class 4.156
 Power configuration
 Non Signalling 4.28
 remote control 3.58
 remote control (NS) 6.14, 6.29
 Power Configuration 4.115
 Power control 4.116
 Power Control 4.205
 Power control level 4.116
 Power measurement (control)
 Non Signalling 4.28
 remote control (NS) 6.29
 remote control (Sig) 6.159
 Signalling 4.115
 Power Ramp 4.6
 Power results
 Non Signalling 4.20
 Power supply 2.3
 Power switch 2.3
 Power vs Time
 program example 7.3
 Power/Frame measurement (control)
 remote control 3.52
 POWER/MPR
 remote control (NS) 6.28
 remote control (Sig) 6.158
 Power/PCL measurement (control)
 remote control 6.154
 Power/Slot measurement (control)
 remote control 3.43, 3.47
 Power/time template (multislot) 4.24, 3.64
 PRBS 4.82
 Primary address 5.1
 Primary Scrambling Code 4.186, 6.218
 Program examples 7.1
 Pseudo random bit sequence 4.82
 Pseudo random sequence (PRBS) 4.178
 PUK number 2.15
 Puncturing Scheme 4.209, 6.236

R

- RAC 4.181, 6.235
- Random access 4.32
- Random Frequency Offset 4.169, 4.174, 6.200
- Recall
 - current 6.12, 6.226
- Receiver quality
 - program example 7.3
- Receiver Quality
 - measurement examples 2.22
 - remote control 6.164
- Receiver Quality (control)
 - Signalling 4.145
- Receiver Quality Configuration 4.145
- Receiver Quality measurements 4.122
 - statistical 4.129
- Receiver reports (MS) 2.20
 - remote control 6.220
 - Signalling 4.141
- REF OUT 2 4.88, 6.10, 6.219
- Ref. Power 4.66, 3.110
- Ref. Power Mode 4.30, 6.16, 6.135
- Ref. R 4.15
- Reference chapter 4.1
- Reference Frequency 4.86
 - Non Signalling 4.86
 - remote control (NS) 6.10
 - remote control (Sig) 6.219
 - Signalling 4.188
- Reference level 4.32
- Reference Level 4.166, 6.203, 6.233
 - BER multislot 6.169, 6.177, 6.183
 - Packet Data 4.208
- Reference marker 4.15
- Rel. 1 4.15
- Rel. 2 4.16
- Remote control
 - basics 5.1
 - commands 6.1
 - notation 5.8
 - Program examples 7.1
- Repetition
 - Modulation 3.68, 3.83
 - Power 4.11, 3.57
 - Power (NS) 4.29
 - Spectrum 3.107, 3.118, 3.129
- Repetition mode 3.6, 5.5
- Requested Mobile Data 4.183
- Reset 2.2
- Residual bit error rate 4.122
- Result (Modulation)
 - Non Signalling 4.41, 4.42, 4.46
 - remote control 3.71
 - Signalling 4.119
- Result (Power)
 - Non Signalling 4.20
 - remote control 3.60
 - remote control (NS) 6.23
 - remote control (Sig) 6.142, 6.150, 6.155
 - Signalling 4.108, 4.110
- Result (Power/MPR)
 - remote control (NS) 6.31
 - remote control (Sig) 6.161
- Result (RXQuality – BAverage) 6.179
- Result (RXQuality – BER) 6.172
- Result (RXQuality – BLER) 6.184
- Result (Spectrum – Switching)
 - remote control 3.129
- Result (Spectrum due to Modulation)
 - Non Signalling 4.58
 - remote control 3.112
 - Signalling 4.121
- Result (Spectrum due to Switching)
 - Non Signalling 4.60
 - Signalling 4.121
- Result (Spectrum – Switching)
 - remote control 3.123
- Result Window 4.146, 6.165
- RF Analyzer
 - remote control (NS) 6.2
- RF Attenuation 4.13, 4.77
- RF carrier signals 2.15
- RF Channel 6.6, 6.200, 6.230, 6.233
 - analyzer 4.73, 6.3
 - Aux TX 4.175, 6.206
 - BCCH 4.170
 - generator 4.80
 - Multislot 4.173
 - TCH 4.171
- RF connector 2.2
- RF generator
 - remote control (NS) 6.4
- RF Input 4.85, 6.8, 6.218
- RF Level
 - AUX Tx Generator 6.8
 - Power 4.14
- RF Level unused 4.79, 6.5
- RF Level used 4.79, 6.5
- RF Max. Level 4.12, 4.76
- RF Mode 4.76
- RF Mode (input level) 4.12, 4.192
- RF Output 4.84, 6.8, 6.9, 6.218
- RF Power 6.11, 6.188
- RF Power (trigger) 4.90
- R-GSM 4.73, 4.80
- RLC Block Count 4.148, 6.183
- RLC Blocks 4.139
- RLC Data Rate 4.139
- RLC Mode (Testmode B) 4.211, 6.238
- Routing Area Code 6.235
- RX Level 4.141, 6.220
- RX Path 4.91, 3.36
- RX Quality 4.142, 6.220
 - GPRS 6.228
- RXQuality
 - remote control 6.175, 6.182

S

- Samples 4.122
- Sampling rate 4.38
- Save
 - current 6.12, 6.226
- Save to File 6.227
- Scalar result
 - Modulation 4.41, 4.48
 - Power (NS) 4.20
- SCPI standard 5.2
- Secondary address 5.1, 5.7
- Second-level keyword 5.1
- Send SMS 4.98
- Service Selection 4.199, 4.209, 6.230
- Settings (table) 4.138
- Sign. Var. 4.142, 6.221
- Signal Off 4.93, 4.97, 4.196
- Signal On 4.93, 4.95, 4.196, 4.202
- Signalling 3.1, 3.2, 4.93, 4.196
 - program example 7.3
 - remote control 6.190, 6.228

Signalling (Attached) 4.203
 Signalling (Idle) 4.202
 Signalling (Signal Off)..... 4.198
 Signalling (TBF Established) 4.204
 Signalling Channel 4.183, 6.210
 Signalling control
 GPRS 6.229
 Signalling Info..... 4.157, 6.223, 6.238
 Signalling Measurements 2.14
 Signalling mode..... 4.181, 5.1
 Signalling State
 GPRS 6.230
 Signalling states..... 4.93, 4.196, 6.190
 indication..... 4.156
 SIM card..... 2.15, 2.22
 Single Shot..... 5.5
 Single-shot measurement..... 4.29
 Slope..... 6.11, 6.189
 Slope (trigger) 4.90
 Slot Config. 4.165, 4.173
 Power 4.104, 4.106
 Slot Configuration..... 4.166, 4.206, 6.194, 6.198, 6.231
 Downlink 6.234
 Uplink GPRS..... 6.232
 Slot Count 4.63, 3.49, 3.119
 Multislot (NS) 4.18
 Multislot (Sig) 4.107
 P/Slot Table 4.32
 P/t Multislot 4.31
 Slot Mode..... 4.162, 4.170
 Slot Offset
 circuit switched 4.185, 6.207
 packet data 4.211, 6.237
 SNR 4.157, 6.223
 Softkey 2.11
 Software (enable)..... 1.6
 Source..... 6.10, 6.188
 trigger (Non Signalling)..... 4.89
 trigger (Signalling)..... 4.189
 Special character 5.10
 Spectrum Configuration
 Non Signalling..... 4.62
 remote control 3.119, 3.129
 Signalling 4.121
 Spectrum measurement
 Non Signalling..... 4.55
 remote control 3.116
 Signalling 4.120
 Spectrum measurement (control)
 Non Signalling..... 4.62
 remote control..... 3.106, 3.116, 3.117, 3.127, 3.128
 Speech coding 4.122
 Speech Decoder 4.187, 6.219
 Speech Encoder..... 4.187, 6.219
 Square brackets 5.10
 Standby mode..... 2.3
 Starting Time..... 4.181, 6.212
 Startup menu..... 1.1, 2.2
 Static limit line 4.36
 Statistic Count..... 3.5, 4.12, 5.5
 Modulation 3.67, 3.75, 3.83
 Power 3.57
 Power (NS) 4.30, 6.15
 Power (Sig)..... 6.134
 Spectrum 3.117, 3.128
 Statistical quantities 3.7
 Statistics
 remote control 5.5
 Statistics cycle 3.5
 5.7

OPERation-Register
 symbolic evaluation..... 3.36, 6.186
 Status reporting system 5.7
 Stepping mode
 Modulation..... 3.68, 3.83
 Power 3.57
 Spectrum 3.107, 3.118, 3.129
 Stop Condition 3.6, 4.12
 Modulation..... 3.68, 3.83
 Power 4.29, 3.57
 Receiver Quality..... 4.147
 Spectrum..... 3.107, 3.118, 3.129
 Subarrays
 Modulation..... 3.70
 P/Frame 3.54
 P/Slot Graph..... 3.45
 P/Slot Table..... 3.50
 Power 3.60
 Power (NS)..... 6.23
 Power (Sig) 6.142, 6.150
 POWer/MPR (NS) 6.30
 POWer/MPR (Sig)..... 6.160
 Spectrum – Modulation..... 3.111
 Spectrum – Modulation..... 3.112, 3.123
 Spectrum – Switching..... 3.122
 SVN..... 4.157, 6.223
 Switching (Spectrum)..... 4.57
 Symbol Offset..... 4.21
 Symbolic evaluation of status register..... 6.186
 Non Signalling 3.36
 Symbols (Signalling Mode) 3.2
 Sync Holdoff Time 4.146
 Synchronization
 internal/external..... 4.86
 remote control (NS) 6.10
 Synchronization burst 4.32
 Synchronized 4.93, 4.196
 System clock 4.86
 System Parameters 4.185, 6.208

T

T3212 4.185
 TAC 4.157, 6.223
 Tail bit..... 4.52
 Target test time..... 4.131
 TCH BER Level 6.176
 TCH Level 4.105, 4.171, 4.217
 TCH Level BER..... 4.135, 4.149, 6.168
 TCH Level BLER 4.135
 Template PCL..... 4.13, 4.78, 6.3
 Test mode 3.1
 Test mode 2.6
 Test Setup..... 6.166
 BER..... 4.147
 Test SIM card 2.15
 Testmode with ACK..... 4.211, 6.237
 Time
 remote control 3.70
 remote control (Sig)..... 6.149
 Time D. @ Freq..... 4.63, 3.108, 3.119
 Time of Arrival 4.114
 Time Scale 4.19
 Timeouts..... 4.184
 TimeOuts 6.216
 Timeslot..... 4.105, 6.193, 6.202
 MS Signal..... 4.172
 Timing Offset..... 4.19, 4.31
 Timing advance
 access burst 4.32
 Timing Advance..... 4.163, 6.192, 6.198

Power (Sig).....	4.105
Timing Advance Error.....	4.119
Timing Offset.....	3.58
Timing Offset (Power, NS)	4.16
Tolerance check.....	4.38, 4.43
Tolerance values (Modulation)	4.52
Trace.....	5.6
Modulation	4.50
Traffic Channel.....	6.192, 6.201
Traffic Mode	4.106, 4.177, 6.211, 6.224
Training Sequence	6.3, 6.7
input (NS).....	4.74
output (NS)	4.82
Training Sequence (Power, NS).....	4.14
Transmission.....	4.82, 6.7
Transmission (Power, NS).....	4.15
Transmission reserve.....	4.77
Transmitter carrier power	4.32
Trig. Slot Offset.....	4.12, 4.18, 4.78, 6.4
Trigger	
Non Signalling.....	4.88
remote control (NS).....	6.10
remote control (Sig).....	6.188
Signalling	4.188
Trigger Level	4.13
Non Signalling.....	4.90
Signalling	4.190
Trigger Source	4.13
Signalling	4.189
TS1232	6.209
TSC detected	
Modulation (8PSK).....	4.47, 4.49
Modulation (GMSK).....	4.42
Tx / Aux Tx.....	4.86
TX Path.....	4.92, 3.36

U

Unused timeslot.....	4.79
Unused Timeslot.....	4.171, 6.202
Update (software).....	1.1
Uplink Power Control.....	4.205
Uplink State Flag	6.236
Upper Limit Line	
Power (NS).....	6.16
Power (Sig)	6.136
Upper Limit Line (Power, NS)	4.35
Upper/lower case characters	5.9
Used timeslot.....	4.79, 4.149, 4.171
Used Timeslot.....	6.201
Useful duration (burst)	4.32, 4.74
USF.....	4.210, 6.236
USF BLER.....	4.151
USF Block Error Rate	4.123
USF Duty Cycle.....	4.210, 6.237

V

Variable Meas. Points (Spectrum)	4.70, 3.108, 3.118
Voice activity detection	4.168

W

Wideband power	
remote control	3.37
Wideband Power	
Non Signalling	4.75
Signalling.....	4.96
Winbatch	7.1