

R&S® FSV-K7/K7S

Firmware Options Analog Demodulation and FM Stereo Operating Manual



1173.0666.02 – 06

This manual describes the following R&S®FSV options:

- R&S FSV-K7 (1310.8103.02)
- R&S FSV-K7S (1310.8126.02)

This manual is applicable for the following analyzer models with firmware version 1.70 and higher:

- R&S®FSV 3 (1307.9002K03)
- R&S®FSV 7 (1307.9002K07)
- R&S®FSV 13 (1307.9002K13)
- R&S®FSV 30 (1307.9002K30)
- R&S®FSV 40 (1307.9002K39)
- R&S®FSV 40 (1307.9002K40)

The firmware of the instrument makes use of several valuable open source software packages. For information, see the "Open Source Acknowledgement" on the user documentation CD-ROM (included in delivery).

Rohde & Schwarz would like to thank the open source community for their valuable contribution to embedded computing.

© 2011 Rohde & Schwarz GmbH & Co. KG

Muehldorfstr. 15, 81671 Munich, Germany

Phone: +49 89 41 29 - 0

Fax: +49 89 41 29 12 164

E-mail: info@rohde-schwarz.com

Internet: <http://www.rohde-schwarz.com>

Printed in Germany – Subject to change – Data without tolerance limits is not binding.

R&S® is a registered trademark of Rohde & Schwarz GmbH & Co. KG.

Trade names are trademarks of the owners.

The following abbreviations are used throughout this manual: R&S®FSV is abbreviated as R&S FSV.

Contents

1	Preface.....	5
1.1	Documentation Overview.....	5
1.2	Conventions Used in the Documentation.....	7
1.3	How to Use the Help System.....	8
2	Analog Demodulation Option R&S FSV-K7.....	10
2.1	Instrument Functions Analog Demodulation (R&S FSV-K7).....	10
2.2	Softkeys of the Analog Demodulation option (K7).....	23
2.3	Remote Commands of the Analog Demodulation (R&S FSV-K7).....	79
3	FM Stereo Option R&S FSV-K7S.....	184
3.1	Instrument Functions FM Stereo (R&S FSV-K7S).....	184
3.2	Remote Commands of the FM Stereo Option (R&S FSV-K7S).....	224
	List of Commands.....	248
	Index.....	254

1 Preface

1.1 Documentation Overview

The user documentation for the R&S FSV is divided as follows:

- Quick Start Guide
- Operating Manuals for base unit and options
- Service Manual
- Online Help
- Release Notes

Quick Start Guide

This manual is delivered with the instrument in printed form and in PDF format on the CD. It provides the information needed to set up and start working with the instrument. Basic operations and basic measurements are described. Also a brief introduction to remote control is given. The manual includes general information (e.g. Safety Instructions) and the following chapters:

Chapter 1	Introduction, General information
Chapter 2	Front and Rear Panel
Chapter 3	Preparing for Use
Chapter 4	Firmware Update and Installation of Firmware Options
Chapter 5	Basic Operations
Chapter 6	Basic Measurement Examples
Chapter 7	Brief Introduction to Remote Control
Appendix 1	Printer Interface
Appendix 2	LAN Interface

Operating Manuals

The Operating Manuals are a supplement to the Quick Start Guide. Operating Manuals are provided for the base unit and each additional (software) option.

The Operating Manual for the base unit provides basic information on operating the R&S FSV in general, and the "Spectrum" mode in particular. Furthermore, the software options that enhance the basic functionality for various measurement modes are described here. The set of measurement examples in the Quick Start Guide is expanded by more advanced measurement examples. In addition to the brief introduction to remote control in the Quick Start Guide, a description of the basic analyzer commands and programming examples is given. Information on maintenance, instrument interfaces and error messages is also provided.

In the individual option manuals, the specific instrument functions of the option are described in detail. For additional information on default settings and parameters, refer to the data sheets. Basic information on operating the R&S FSV is not included in the option manuals.

The following Operating Manuals are available for the R&S FSV:

- R&S FSV base unit; in addition:
 - R&S FSV-K9 Power Sensor Support
 - R&S FSV-K14 Spectrogram Measurement
- R&S FSV-K7 Analog Demodulation and R&S FSV-K7S FM Stereo Measurements
- R&S FSV-K10 GSM/EDGE Measurement
- R&S FSV-K30 Noise Figure Measurement
- R&S FSV-K40 Phase Noise Measurement
- R&S FSV-K70 Vector Signal Analysis Operating Manual
R&S FSV-K70 Vector Signal Analysis Getting Started (First measurements)
- R&S FSV-K72 3GPP FDD BTS Analysis
- R&S FSV-K73 3GPP FDD UE Analysis
- R&S FSV-K76/77 3GPP TD-SCDMA BTS/UE Measurement
- R&S FSV-K82/83 CDMA2000 BTS/MS Analysis
- R&S FSV-K84/85 1xEV-DO BTS/MS Analysis
- R&S FSV-K91 WLAN IEEE 802.11a/b/g/j/n
- R&S FSV-K93 WiMAX IEEE 802.16 OFDM/OFDMA Analysis
- R&S FSV-K100/K104 EUTRA / LTE Downlink Measurement Application
- R&S FSV-K101/K105 EUTRA / LTE Uplink Measurement Application

These manuals are available in PDF format on the CD delivered with the instrument. The printed manual can be ordered from Rohde & Schwarz GmbH & Co. KG.

Service Manual

This manual is available in PDF format on the CD delivered with the instrument. It describes how to check compliance with rated specifications, instrument function, repair, troubleshooting and fault elimination. It contains all information required for repairing the R&S FSV by replacing modules. The manual includes the following chapters:

Chapter 1	Performance Test
Chapter 2	Adjustment
Chapter 3	Repair
Chapter 4	Software Update / Installing Options
Chapter 5	Documents

Online Help

The online help contains context-specific help on operating the R&S FSV and all available options. It describes both manual and remote operation. The online help is installed on

the R&S FSV by default, and is also available as an executable .chm file on the CD delivered with the instrument.

Release Notes

The release notes describe the installation of the firmware, new and modified functions, eliminated problems, and last minute changes to the documentation. The corresponding firmware version is indicated on the title page of the release notes. The current release notes are provided in the Internet.

1.2 Conventions Used in the Documentation

1.2.1 Typographical Conventions

The following text markers are used throughout this documentation:

Convention	Description
"Graphical user interface elements"	All names of graphical user interface elements on the screen, such as dialog boxes, menus, options, buttons, and softkeys are enclosed by quotation marks.
KEYS	Key names are written in capital letters.
File names, commands, program code	File names, commands, coding samples and screen output are distinguished by their font.
<i>Input</i>	Input to be entered by the user is displayed in italics.
Links	Links that you can click are displayed in blue font.
"References"	References to other parts of the documentation are enclosed by quotation marks.

1.2.2 Conventions for Procedure Descriptions

When describing how to operate the instrument, several alternative methods may be available to perform the same task. In this case, the procedure using the touch screen is described. Any elements that can be activated by touching can also be clicked using an additionally connected mouse. The alternative procedure using the keys on the instrument or the on-screen keyboard is only described if it deviates from the standard operating procedures.

The term "select" may refer to any of the described methods, i.e. using a finger on the touchscreen, a mouse pointer in the display, or a key on the instrument or on a keyboard.

1.3 How to Use the Help System

Calling context-sensitive and general help

- ▶ To display the general help dialog box, press the HELP key on the front panel.

The help dialog box "View" tab is displayed. A topic containing information about the current menu or the currently opened dialog box and its function is displayed.



For standard Windows dialog boxes (e.g. File Properties, Print dialog etc.), no context-sensitive help is available.

- ▶ If the help is already displayed, press the softkey for which you want to display help.
A topic containing information about the softkey and its function is displayed.



If a softkey opens a submenu and you press the softkey a second time, the submenu of the softkey is displayed.

Contents of the help dialog box

The help dialog box contains four tabs:

- "Contents" - contains a table of help contents
- "View" - contains a specific help topic
- "Index" - contains index entries to search for help topics
- "Zoom" - contains zoom functions for the help display

To change between these tabs, press the tab on the touchscreen.

Navigating in the table of contents

- To move through the displayed contents entries, use the UP ARROW and DOWN ARROW keys. Entries that contain further entries are marked with a plus sign.
- To display a help topic, press the ENTER key. The "View" tab with the corresponding help topic is displayed.
- To change to the next tab, press the tab on the touchscreen.

Navigating in the help topics

- To scroll through a page, use the rotary knob or the UP ARROW and DOWN ARROW keys.
- To jump to the linked topic, press the link text on the touchscreen.

Searching for a topic

1. Change to the "Index" tab.

2. Enter the first characters of the topic you are interested in. The entries starting with these characters are displayed.
3. Change the focus by pressing the ENTER key.
4. Select the suitable keyword by using the UP ARROW or DOWN ARROW keys or the rotary knob.
5. Press the ENTER key to display the help topic.

The "View" tab with the corresponding help topic is displayed.

Changing the zoom

1. Change to the "Zoom" tab.
2. Set the zoom using the rotary knob. Four settings are available: 1-4. The smallest size is selected by number 1, the largest size is selected by number 4.

Closing the help window

- ▶ Press the ESC key or a function key on the front panel.

2 Analog Demodulation Option R&S FSV-K7

Overview of firmware option R&S FSV-K7

This section contains all information required for operation of an R&S FSV equipped with Application Firmware R&S FSV-K7. It covers operation via menus and the remote control commands for analog demodulation measurements.

This part of the documentation consists of the following chapters:

- [chapter 2.1, "Instrument Functions Analog Demodulation \(R&S FSV-K7\)",](#) on page 10 describes the overall instrument functions and provides further information
- [chapter 2.2.1, "Softkeys of the Analog Demodulation Menu \(R&S FSV-K7\)",](#) on page 24 shows all softkeys available in the "Analog Demod" menu. This chapter also presents the remote control commands associated with each softkey function.
- The following chapters describe the softkeys of the other keys for the Analog Demodulation option.
- [chapter 2.3, "Remote Commands of the Analog Demodulation \(R&S FSV-K7\)",](#) on page 79 describes all remote control commands defined for the analog demodulation measurement.

This part of the documentation includes only functions of the Application Firmware R&S FSV-K7. For all other descriptions, please refer to the description of the base unit.

2.1 Instrument Functions Analog Demodulation (R&S FSV-K7)

The digital signal processing in the R&S FSV, used in the analyzer mode for digital IF filters, is also ideally suited for demodulating AM, FM, or PM signals. The firmware option R&S FSV-K7 provides the necessary measurement functions.

The R&S FSV is equipped with a demodulator that is capable of performing AM, FM, and PM demodulation at a time. Additionally maximum, minimum and average or current values can be obtained parallel over a selected number of measurements.

By sampling (digitization) already at the IF and digital down-conversion to the baseband (I/Q), the demodulator achieves maximum accuracy and temperature stability. There is no evidence of typical errors of an analog down-conversion and demodulation like AM to FM conversion and vice versa, deviation error, frequency response or frequency drift at DC coupling.

To open the Analog Demodulation menu

- If the "Analog Demodulation" mode is not the active measurement mode, press the MODE key and select the "Analog Demodulation" softkey.
- If the "Analog Demodulation" mode is already active, press the HOME or MEASkey.

The "Analog Demod" menu is displayed (see [chapter 2.2, "Softkeys of the Analog Demodulation option \(K7\)"](#), on page 23).

Further information

2.1.1	Circuit Description – Block Diagrams.....	11
2.1.2	Demodulation Bandwidth.....	13
2.1.3	Configuring Traces.....	13
2.1.4	Trace Mode Overview.....	15
2.1.5	AF Trigger.....	16
2.1.6	Stability of Measurement Results.....	17
2.1.7	Detector Overview.....	17
2.1.8	Sample Rate, Measurement Time and Trigger Offset.....	18
2.1.9	Measurement Result Display.....	20
2.1.10	ASCII File Export Format.....	23

2.1.1 Circuit Description – Block Diagrams

The software demodulator runs on the main processor of the analyzer. The demodulation process is shown in [figure 2-1](#) the figure below. All calculations are performed simultaneously with the same I/Q data set. Magnitude (= amplitude) and phase of the complex I/Q pairs are determined. The frequency result is obtained from the differential phase.

For details on the analyzer signal processing refer to the `TRACe:IQ` subsystem in the base unit.

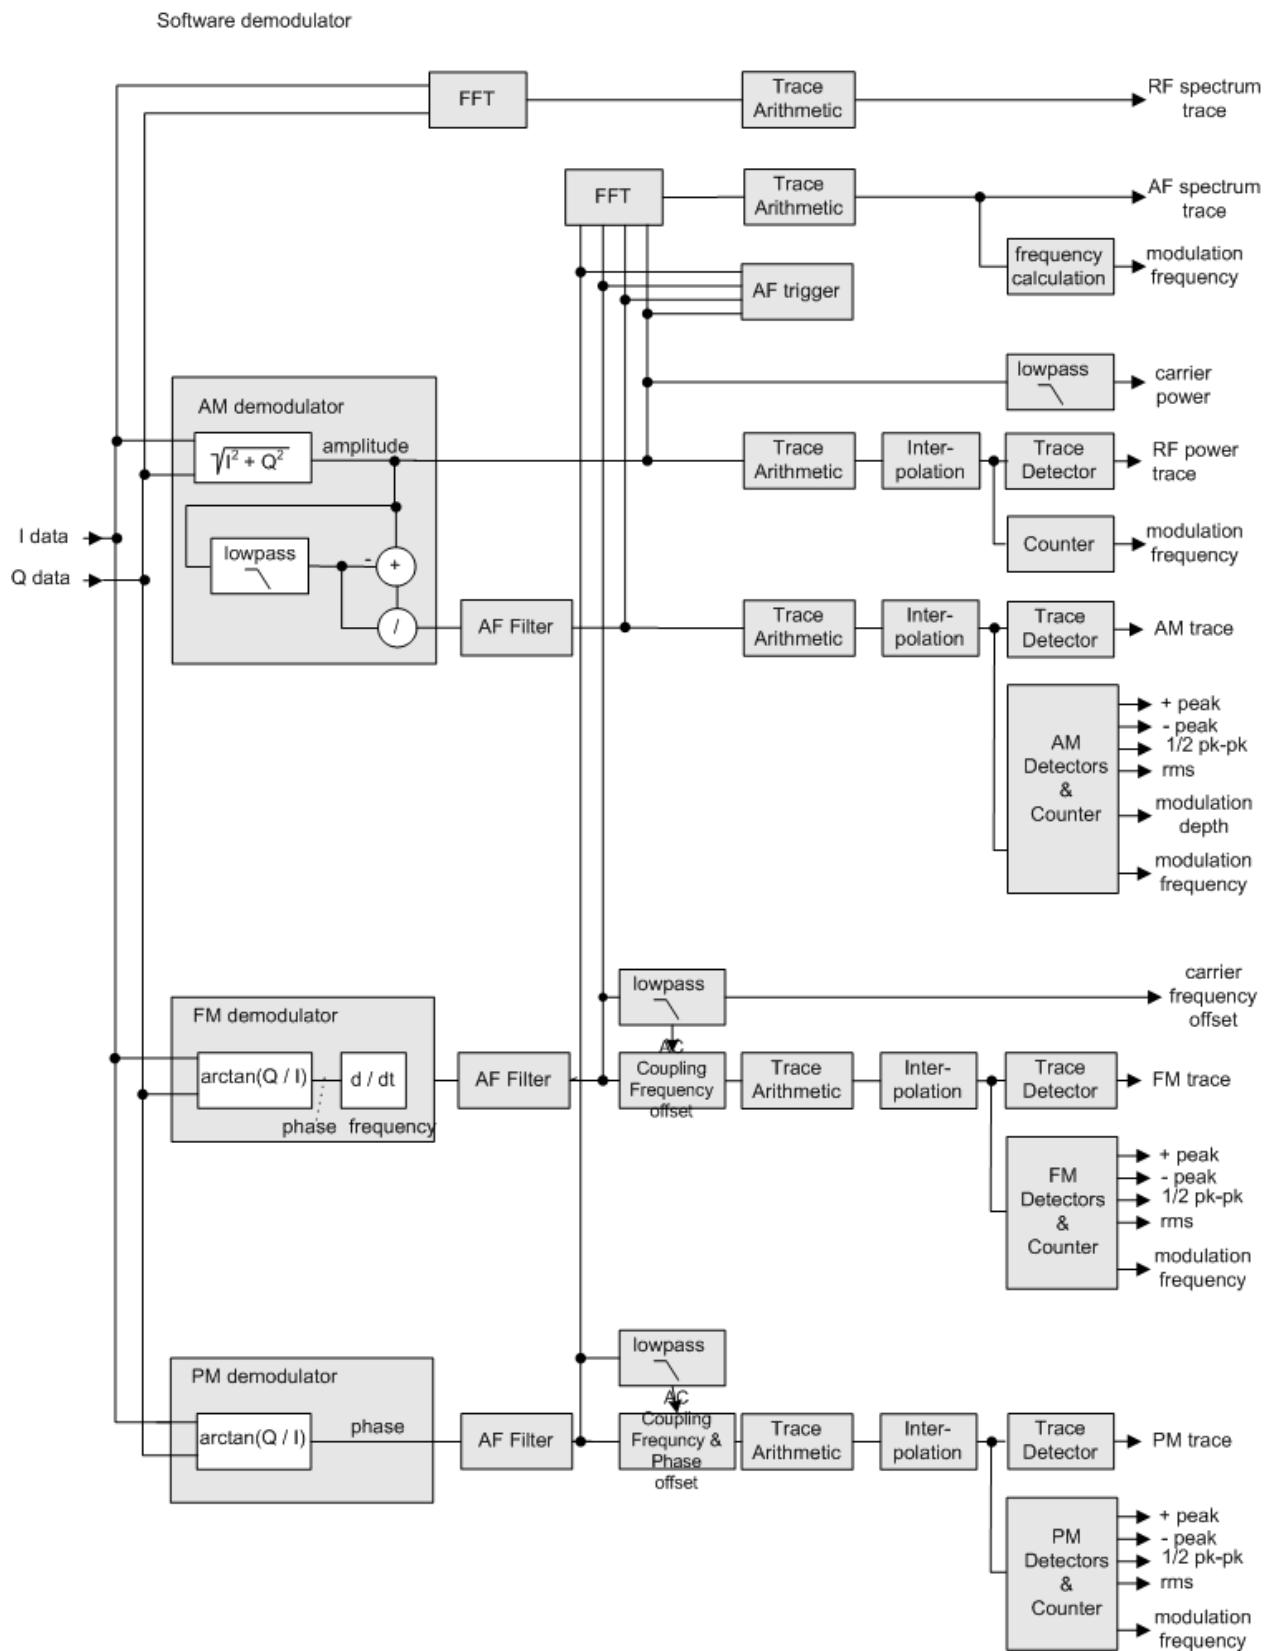


Fig. 2-1: Block diagram of software demodulator

The AM DC, FM DC and PM DC raw data of the demodulators is fed into the Trace Arithmetic block that combines consecutive data sets. Possible trace modes are: Clear Write, Max Hold, Min Hold and Average (for details refer to [chapter 2.1.4, "Trace Mode Overview"](#), on page 15). The output data of the Trace Arithmetic block can be read via remote control.

The collected measured values are evaluated by the selected detector (for details refer to [chapter 2.1.7, "Detector Overview"](#), on page 17). The result is displayed on the screen and can be read out via remote control.

In addition, important parameters are calculated:

- A counter determines the modulation frequency for AM, FM, and PM.
- average power = carrier power (RF power)
- average frequency = carrier frequency offset (FM)
- The modulation depth or the frequency or phase deviation is displayed.
- AC coupling is possible with FM and PM display. The deviations are determined from the trace data. +Peak, -Peak, $\frac{1}{2}$ Peak-Peak and RMS are displayed.

2.1.2 Demodulation Bandwidth

The demodulation bandwidth is not the 3 dB bandwidth but the useful bandwidth which is distortion-free with regard to phase and amplitude.

Therefore the following formulas apply:

- AM: demodulation bandwidth $\geq 2 \times$ modulation frequency
- FM: demodulation bandwidth $\geq 2 \times (\text{frequency deviation} + \text{modulation frequency})$
- PM: demodulation bandwidth $\geq 2 \times \text{modulation frequency} \times (1 + \text{phase deviation})$



If the center frequency of the analyzer is not set exactly to the signal frequency, the demodulation bandwidth must be selected larger by the carrier offset, in addition to the requirement described above. This also applies if FM or PM AC coupling has been selected.

In general, the demodulation bandwidth should be as narrow as possible to improve the S/N ratio. The residual FM caused by noise floor and phase noise increases dramatically with the bandwidth, especially with FM.

2.1.3 Configuring Traces


1. To open the trace wizard, press the TRACE key and then the "Trace Wizard" softkey (see ["Trace Wizard"](#) on page 59).

Tip: Context-sensitive menus for traces. Traces have context-sensitive menus. If you right-click on a trace in the display or a trace setting in the information channel bar (or touch it for about 1 second), a menu is displayed which corresponds to the softkey

functions available for traces. This is useful, for example, when the softkey display is hidden.

If a menu entry contains an arrow to the right of it, a submenu is available for that entry.

To close the menu, press the ESC key or click in the display outside of the menu.

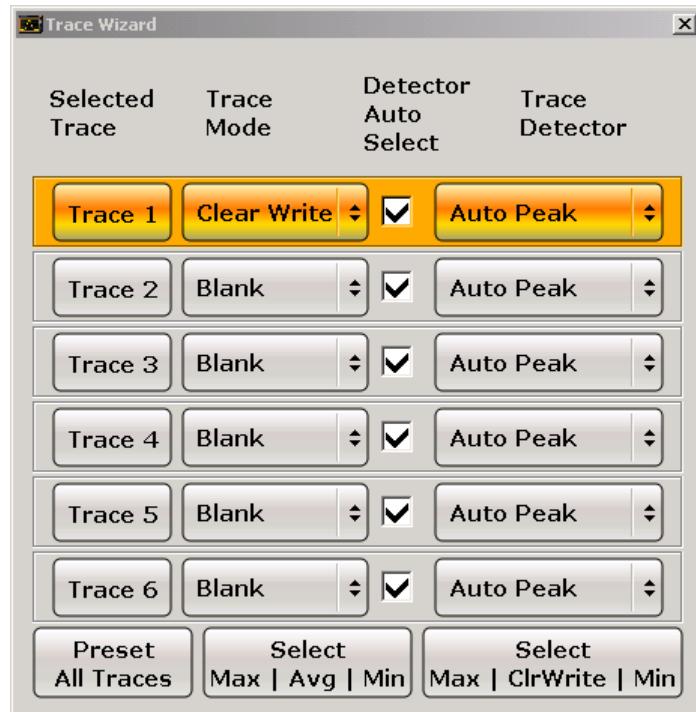

- For each trace you can define the following settings:

Display Mode	<ul style="list-style-type: none"> Clear Write Max Hold Min Hold Average View Blank <p>For details see chapter 2.1.4, "Trace Mode Overview", on page 15</p>
Detector Auto Select	Activates automatic detector selection (see Auto Select softkey). If activated, the "Trace Detector" setting is ignored.
Trace Detector	<p>Defines a specific trace detector. If one of the following settings is defined, the "Detector Auto Select" option is deactivated.</p> <ul style="list-style-type: none"> "Auto Select" on page 57 "Auto Peak" on page 57 "Positive Peak" on page 57 "Negative Peak" on page 58 "Sample" on page 58 "RMS" on page 58 "Average" on page 58 "Quasipeak" on page 58

- To configure several traces to predefined display modes in one step, press the button for the required function:

Preset All Traces	Trace 1: Clear Write Trace 2-6: Blank
Select Max Avg Min	Trace 1: Max Hold Trace 2: Average Trace 3: Min Hold Trace 4-6: Blank
Select Max ClrWrite Min	Trace 1: Max Hold Trace 2: Clear Write Trace 3: Min Hold Trace 4-6: Blank

For details see [chapter 2.1.4, "Trace Mode Overview"](#), on page 15.

2.1.4 Trace Mode Overview

The traces can be activated individually for a measurement or frozen after completion of a measurement. Traces that are not activated are hidden. Each time the trace mode is changed, the selected trace memory is cleared.

The R&S FSV offers 6 different trace modes:

Clear Write

Overwrite mode: the trace is overwritten by each sweep. This is the default setting.

All available detectors can be selected.

SCPI command:

`DISP:TRAC:MODE WRIT`, see [DISPLAY\[:WINDOW<n>\]:TRACE<t>:MODE](#) on page 109

Max Hold

The maximum value is determined over several sweeps and displayed. The R&S FSV saves the sweep result in the trace memory only if the new value is greater than the previous one.

The detector is automatically set to "Positive Peak".

This mode is especially useful with modulated or pulsed signals. The signal spectrum is filled up upon each sweep until all signal components are detected in a kind of envelope.

This mode is not available for statistics measurements.

SCPI command:

`DISP:TRAC:MODE MAXH`, see [DISPLAY\[:WINDOW<n>\]:TRACE<t>:MODE](#) on page 109

Min Hold

The minimum value is determined from several measurements and displayed. The R&S FSV saves for each sweep the smallest of the previously stored/currently measured values in the trace memory.

The detector is automatically set to "Negative Peak".

This mode is useful e.g. for making an unmodulated carrier in a composite signal visible. Noise, interference signals or modulated signals are suppressed whereas a CW signal is recognized by its constant level.

This mode is not available for statistics measurements.

SCPI command:

DISP:TRAC:MODE MINH, see [DISPLAY\[:WINDOW<n>\]:TRACe<t>:MODE](#) on page 109

Average

The average is formed over several sweeps. The [Sweep Count](#) determines the number of averaging procedures.

All available detectors can be selected. If the detector is automatically selected, the sample detector is used (see [chapter 2.1.7, "Detector Overview"](#), on page 17).

This mode is not available for statistics measurements.

SCPI command:

DISP:TRAC:MODE AVER, see [DISPLAY\[:WINDOW<n>\]:TRACe<t>:MODE](#) on page 109

View

The current contents of the trace memory are frozen and displayed.

Note: If a trace is frozen, the instrument settings, apart from level range and reference level (see below), can be changed without impact on the displayed trace. The fact that the displayed trace no longer matches the current instrument setting is indicated by the  icon on the tab label.

If the level range or reference level is changed, the R&S FSV automatically adapts the measured data to the changed display range. This allows an amplitude zoom to be made after the measurement in order to show details of the trace.

SCPI command:

DISP:TRAC:MODE VIEW, see [DISPLAY\[:WINDOW<n>\]:TRACe<t>:MODE](#) on page 109

Blank

Hides the selected trace.

SCPI command:

DISP:TRAC OFF, see [DISPLAY\[:WINDOW<n>\]:TRACe<t>\[:STATE\]](#) on page 110

2.1.5 AF Trigger

The analog demodulation option allows triggering to the demodulated signal. The display is stable if a minimum of five modulation periods are within the recording time.

Triggering is always DC-coupled. Therefore triggering is possible directly to the point where a specific carrier level, phase or frequency is exceeded or not attained.

2.1.6 Stability of Measurement Results

Despite amplitude and frequency modulation, the display of carrier power and carrier frequency offset is stable.

This is achieved by a digital filter which sufficiently suppresses the modulation, provided, however, that the measurement time is $\geq 3 \times 1 / \text{modulation frequency}$, i.e. that at least three periods of the AF signal are recorded.

The mean carrier power for calculating the AM is also calculated with a digital filter that returns stable results after a measurement time of $\geq 3 \times 1 / \text{modulation frequency}$, i.e. at least three cycles of the AF signal must be recorded before a stable AM can be shown.

2.1.7 Detector Overview

The measurement detector for the individual display modes can be selected directly by the user or set automatically by the R&S FSV. The detector activated for the specific trace is indicated in the corresponding trace display field by an abbreviation.

The detectors of the R&S FSV are implemented as pure digital devices. They collect signal power data within each measured point during a sweep. The default number of sweep points is 691. The following detectors are available:

Table 2-1: Detector types

Detector	Indicator	Function
Auto Peak	Ap	Determines the maximum and the minimum value within a measurement point (not available for SEM)
Positive Peak	Pk	Determines the maximum value within a measurement point
Negative Peak (min peak)	Mi	Determines the minimum value within a measurement point
RMS	Rm	Determines the root mean square power within a measurement point
Average	Av	Determines the linear average power within a measurement point
Sample	Sa	Selects the last value within a measurement point
Quasi Peak	QP	Determines the quasipeak power within a measurement point for EMI measurements (not available for SEM)

The result obtained from the selected detector within a measurement point is displayed as the power value at this measurement point.

All detectors work in parallel in the background, which means that the measurement speed is independent of the detector combination used for different traces.



Number of measured values

During a frequency sweep, the R&S FSV increments the first local oscillator in steps that are smaller than approximately 1/10 of the bandwidth. This ensures that the oscillator step speed is conform to the hardware settling times and does not affect the precision of the measured power.

The number of measured values taken during a sweep is independent of the number of oscillator steps. It is always selected as a multiple or a fraction of 691 (= default number of trace points displayed on the screen). Choosing less than 691 measured values (e.g. 125 or 251) will lead to an interpolated measurement curve, choosing more than 691 points (e.g. 1001, 2001 ...) will result in several measured values being overlaid at the same frequency position.



RMS detector and VBW

If the RMS detector is selected, the video bandwidth in the hardware is bypassed. Thus, duplicate trace averaging with small VBWs and RMS detector no longer occurs. However, the VBW is still considered when calculating the sweep time. This leads to a longer sweep time for small VBW values. Thus, you can reduce the VBW value to achieve more stable trace curves even when using an RMS detector. Normally, if the RMS detector is used the sweep time should be increased to get more stable trace curves.

2.1.8 Sample Rate, Measurement Time and Trigger Offset

Depending on the sample rate, the maximum demodulation bandwidths listed in the table can be obtained during the measurement. The permissible value range of the measurement time and trigger offset depends on the selected demodulation bandwidth and demodulation filter. If the AF filter or the AF trigger are not active, the measurement time increases by 20 %.



Option K7S

The K7S option always uses the demodulation bandwidth 400 kHz.

Table 2-2: Sample Rate, Measurement Time and Trigger Offset using a flat demodulation filter

Demod. band-width	Sample rate	Measurement time		Trigger offset	
		Min.	Max.	Min.	Max.
40 MHz*	64 MHz	15.625 ns	25 ms	-25 ms	3.2768 s
28 MHz	64 MHz	15.625 ns	25 ms	-25 ms	3.2768 s
18 MHz	32 MHz	31.25 ns	50 ms	-50 ms	6.5536 s
10 MHz	32 MHz	31.25 ns	50 ms	-50 ms	6.5536 s
8 MHz	16 MHz	62.5 ns	100 ms	-100 ms	13.1072 s
5 MHz	8 MHz	125 ns	200 ms	-200 ms	26.2144 s
3 MHz	4 MHz	250 ns	400 ms	-400 ms	52.4288 s

Demod. band-width	Sample rate	Measurement time		Trigger offset	
		Min.	Max.	Min.	Max.
1.6 MHz	2 MHz	500 ns	800 ms	-800 ms	104.8576 s
800 kHz	1 MHz	1 µs	1.6 s	-1.6 s	209.7152 s
400 kHz	500 kHz	2 µs	3.2 s	-3.2 s	419.4304 s
200 kHz	250 kHz	4 µs	6.4 s	-6.4 s	838.8608 s
100 kHz	125 kHz	8 µs	12.8 s	-12.8 s	1677.7216 s
50 kHz	62.5 kHz	16 µs	25.6 s	-25.6 s	3355.4432 s
25 kHz	31.25 kHz	32 µs	51.2 s	-51.2 s	6710.8864 s
12.5 kHz	15.625 kHz	64 µs	102.4 s	-102.4 s	13421.7728 s
6.4 kHz	7.8125 kHz	128 µs	204.8 s	-204.8 s	26843.5456 s
3.2 kHz	3.90625 kHz	256 µs	409.6 s	-409.6 s	53687.0912 s
1.6 kHz	1.953125 kHz	512 µs	819.2 s	-819.2 s	107374.1824 s
800 Hz	976.5625 Hz	1.024 ms	1638.4 s	-1638.4 s	214748.3648 s
400 Hz	488.28125 Hz	2.048 ms	3276.8 s	-3276.8 s	429496.7296 s
200 Hz	244.140625 Hz	4.096 ms	6553.6 s	-6553.6 s	858993.4592 s
100 Hz	122.0703125 Hz	8.192 ms	13107.2 s	-13107.2 s	1717986.918 s
* only available with option B70					

Table 2-3: Sample Rate, Measurement Time and Trigger Offset using a Gaussian demodulation filter

Demod. band-width	Sample rate	Measurement time		Trigger offset	
		Min.	Max.	Min.	Max.
28 MHz*	112 MHz	8.929 ns	14.28 ms	-14.28	1.872457134 s
18 MHz*	72 MHz	13.88 ns	22.22 ms	-22.22 ms	2.912711097 s
10 MHz	40 MHz	25 ns	40 ms	-40 ms	5,242879975 s
8 MHz	32 MHz	31.25 ns	50 ms	-50 ms	6.553599969 s
5 MHz	12 MHz	83.33 ns	133.3 ms	-80 ms	10,48575995 s
3 MHz	10.666 MHz	93.75 ns	150 ms	-133.3 ms	17,47626667 s
1.6 MHz	6.4 MHz	156.25 ns	250 ms	-250 ms	32.76799984 s
800 kHz	3.2 MHz	312.5 ns	5 ms	-5 ms	65.53599969 s
400 kHz	1.6 MHz	625 ns	1 s	-1 s	131.0719994 s
200 kHz	800 kHz	1.25 µs	2 s	-2 s	262.1439988 s
100 kHz	400 kHz	2.5 µs	4 s	-4 s	524.2879975 s
* gaussian filter curve is limited by IQ bandwidth					

Demod. band-width	Sample rate	Measurement time		Trigger offset	
		Min.	Max.	Min.	Max.
50 kHz	200 kHz	5 us	8 s	-8 s	1048.575995 s
25 kHz	100 kHz	10 us	16 s	-16 s	2097.15199 s
12.5 kHz	50 kHz	20 us	32 s	-32 s	4194.30398 s
6.4 kHz	25.6 kHz	39.0625 us	62.5 s	-62.5 s	8191.999961 s
3.2 kHz	12.8 kHz	78.125 us	125 s	-125 s	16383.999992 s
1.6 kHz	6.4 kHz	156.25 us	250 s	-250 s	32767.999984 s
800 Hz	3.2 kHz	312.5 us	500 s	-500 s	65535.999969 s
400 Hz	1.6 kHz	625 us	1000 s	-1000 s	131071.9994 s
200 Hz	800 Hz	1.25 ms	2000 s	-2000 s	262143.9988 s
100 Hz	400 Hz	2.5 ms	4000 s	-4000 s	524287.9975 s

* gaussian filter curve is limited by IQ bandwidth

Large numbers of samples

Principally, the R&S FSV can handle up to 1.6 million samples. However, when 480 001 samples are exceeded, all traces that are not currently being displayed on a screen are deactivated to improve performance. The traces can only be activated again when the samples are reduced.

2.1.9 Measurement Result Display

In Analog Demodulation mode, the measurement results can be displayed in up to 4 different screens (windows), plus an additional marker table, if applicable. Each screen shows either the measurement results as a diagram or the results of evaluation functions in a table ("Result Summary").

All displays are determined by the I/Q data set recorded for the measurement.

You can define the display configuration for up to 4 different screens at once using the "Display Config" on page 26 softkey.

Screen configuration

For each screen you can define:

- **Off:** Whether it is displayed or not
- **Summary:** Whether a result summary for all screens is displayed instead of a diagram
- **AM/FM/PM/RF Diagrams:** Which type of diagram is displayed

Diagram types

The following diagram types can be selected for display.

- **AM/FM/PM Time Domain**

Selects the AF display in zero span, calculated from the AM, FM, or PM signal.

SCPI command:

```
CALC:FEED 'XTIM:FM' (see CALCulate<n>:FEED on page 89)
```

Displays the demodulated FM signal from trace 1 in screen A.

- **AM/FM/PM Spectrum**

Selects the display of the AF spectrum. The AF spectrum can be calculated from the AM, FM, or PM signal in zero span.

SCPI command:

```
DISP:WIND2:SEL
```

Sets the focus on screen B.

```
CALC2:FEED 'XTIME:FM:AFSPektrum2' (see CALCulate<n>:FEED on page 89)
```

Displays an AF spectrum diagram of the demodulated FM signal from trace 2 in screen B.

- **RF Time Domain**

Selects the display of the RF power in zero span. In contrast to normal analyzer operation, the level values are the magnitude of the I/Q data set.

SCPI command:

```
CALC:FEED 'XTIM:RFP' (see CALCulate<n>:FEED on page 89)
```

- **RF Spectrum**

Selects the display of the RF signal in span > 0. In contrast to normal spectrum analyzer operation, the measured values are determined using FFT from the recorded I/Q data set.

SCPI command:

```
CALC:FEED 'XTIM:SPECTRUM' (see CALCulate<n>:FEED on page 89)
```

Diagram header information

For each diagram, the header provides the following information:

A(FM)	● 1AP Clrw	Ref: 0.00 Hz	DC
1 2	3 4 5 6	7	8

1. Screen A/B/C/D
2. Modulation type
3. Trace color
4. Trace number
5. Detector
6. Trace mode

7. Reference value
8. AF coupling (AC/DC), only in AF time domains, if applicable

Result Summary

The result summary displays the results of the evaluation functions for all channels in a table.

D Result Summary							
	Carrier Power: -30.00 dBm			Carrier Offset: -1.08 Hz			
	+Peak	-Peak	±Peak/2	RMS	Mod Freq	SINAD	THD
FM	113.87 kHz	-114.06 kHz	113.96 kHz	71.052 kHz	99.999 kHz	54.479 dB	-61.820 dB
PM	1.0028 rad	-1.0024 rad	1.0026 rad	707.15 mrad	99.999 kHz	---	---



Summaries that take up the entire width of the screen are displayed as tables; if only half the screen width is available (2 windows next to each other), the summary is displayed as a list. Thus, the factory-set predefined screen configurations contain only 3 screens: 2 for diagrams and one full-width screen for the summary.

For each channel, the following information is provided:

Label	Description
+Peak	Positive peak (maximum)
-Peak	Negative peak (minimum)
+/Peak/2	Average of positive and negative peaks
RMS	Root Mean Square value
Mod Freq	Modulation frequency
SINAD	<p>Signal-to-noise and distortion</p> <p>Measures the ratio of the total power to the power of noise and harmonic distortions. The noise and harmonic power is calculated inside the AF spectrum span. The DC offset is removed before the calculation.</p> $SINAD[dB] = 20 \cdot \log \left[\frac{\text{total power}}{\text{noise + distortion power}} \right]$
THD	<p>Total harmonic distortion</p> <p>The ratio of the harmonics to the fundamental and harmonics. All harmonics inside the AF spectrum span are considered up to the tenth harmonic.</p> $THD[dB] = 20 \cdot \log \left[\sqrt{\frac{\sum_{i=2}^{\infty} U_i^2}{\sum_{i=1}^{\infty} U_i^2}} \right]$

In addition, the following general information for the input signal is provided:

- Carrier Power
- Carrier Offset
- Modulation Depth

2.1.10 ASCII File Export Format

The data of the file header consist of three columns, each separated by a semicolon: parameter name; numeric value; basic unit. The data section starts with the keyword "Trace <n>" (<n> = number of stored trace), followed by the measured data in one or several columns (depending on measurement) which are also separated by a semicolon.

File contents: header and data section	Description
Type;FSV;	Instrument model
Version;1.50;	Firmware version
Date;01.Apr 2010;	Date of data set storage
Screen;A;	Instrument mode
Points per Symbol;4;	Points per symbol
x Axis Start;-13;sym;	Start value of the x axis
x Axis Stop;135;sym;	Stop value of the x axis
Ref value y axis;-10.00;dBm;	Y axis reference value
Ref value position;100;%;	Y axis reference position
Trace;1;	Trace number
Meas;Result;	Result type
Meas Signal;Magnitude;	Result display
Demodulator;Offset QPSK;	Demodulation type
ResultMode;Trace;	Result mode
x unit;sym;	Unit of the x axis
y unit;dBm;	Unit of the y axis
Trace Mode;Clear Write;	Trace mode
Values;592;	Number of results
<values>	List of results

2.2 Softkeys of the Analog Demodulation option (K7)

Apart from the power measurement menu (MEAS key) that is not available in the "Analog Demodulation" mode, all other menus not described here are provided as described for the base unit. For details refer to the corresponding menu descriptions.



Importing and Exporting I/Q Data

I/Q data that was captured in the R&S FSV-K7 application can now be exported to a file on the R&S FSV. The stored data can then be imported again at a later time, also by different applications, for further processing.

As opposed to storing trace data, which may be averaged or restricted to peak values, I/Q data is stored as it was captured, without further processing. The data is stored as complex values in 32-bit floating-point format. The I/Q data is stored in a packed format with the file extension .iq.tar.

The "Import" and "Export" functions are available from the "Save/Recall" menu, which is displayed when you press the SAVE/RCL key on the front panel. For details see "Importing and Exporting I/Q Data" in the base unit description.

To display help to a softkey, press the HELP key and then the softkey for which you want to display help. To close the help window, press the ESC key. For further information refer to [chapter 1.3, "How to Use the Help System", on page 8](#).

2.2.1	Softkeys of the Analog Demodulation Menu (R&S FSV-K7).....	24
2.2.2	Softkeys of the Frequency Menu – FREQ Key (R&S FSV-K7).....	38
2.2.3	Softkeys of the Span Menu – SPAN Key (R&S FSV-K7).....	40
2.2.4	Softkeys of the Amplitude Menu – AMPT Key (R&S FSV-K7).....	41
2.2.5	Softkeys of the Auto Set menu - AUTO SET Key (R&S FSV-K7).....	47
2.2.6	Softkeys of the Bandwidth Menu – BW Key (R&S FSV-K7).....	49
2.2.7	Softkeys of the Sweep Menu – SWEEP Key (R&S FSV-K7).....	53
2.2.8	Softkeys of the Trace Menu – TRACE key (R&S FSV-K7).....	55
2.2.9	Softkeys of the Trigger Menu – TRIG Key (R&S FSV-K7).....	60
2.2.10	Softkeys of the Marker Menu – MKR key (R&S FSV-K7).....	65
2.2.11	Softkeys of the Marker Function Menu – MKR FUNC Key (R&S FSV-K7).....	69
2.2.12	Softkeys of the Input/Output Menu.....	73

2.2.1 Softkeys of the Analog Demodulation Menu (R&S FSV-K7)

The following table shows all softkeys available in the "Analog Demod" menu.

AM.....	26
L Display Config.....	26
L Screen A-D.....	26
L Predefined.....	27
L Add.....	28
L Apply.....	28
L Remove.....	28
L Restore.....	28
L Select Trace.....	28

└ Demod BW.....	28
└ Meas Time.....	29
└ AF Filter.....	29
└ High Pass.....	29
└ Low Pass.....	29
└ Weighting.....	30
└ None.....	30
└ CCITT.....	30
└ CCIR Unweighted.....	30
└ CCIR Weighted.....	31
└ A Weighted.....	31
└ Deemphasis.....	31
└ All AF Filter Off.....	32
└ AF Range.....	32
└ Dev per Division.....	32
└ Reference Position.....	32
└ Reference Value.....	33
└ AF Coupling AC/DC.....	33
└ Deviation Lin/Log.....	33
└ Unit.....	33
└ Phase Unit (Rad/Deg).....	34
└ THD Unit (% / DB).....	34
└ Abs. Dev Unit (kHz/dBm).....	34
└ Rel. Dev Unit (dB / %).....	34
└ Time Domain Zoom.....	34
└ State On / Off.....	34
└ Start.....	34
└ Length Manual.....	34
└ Length Auto.....	35
└ Squelch.....	35
└ Squelch Level.....	35
FM.....	35
└ Display Config.....	35
└ Select Trace.....	35
└ Demod BW.....	35
└ Meas Time.....	35
└ AF Filter.....	35
└ AF Range.....	36
└ Time Domain Zoom.....	36
└ Squelch.....	36
└ Squelch Level.....	36
PM.....	36
└ Display Config.....	36
└ Select Trace.....	36
└ Demod BW.....	36
└ Meas Time.....	36
└ AF Filter.....	36
└ AF Range.....	36
└ Time Domain Zoom.....	36
└ Squelch.....	36

└ Squelch Level	36
└ Zero Phase Reference Point	37
└ Phase Wrap On/Off	37
RF Power	37
└ Display Config	37
└ Select Trace	37
└ Demod BW	37
└ Meas Time	37
└ AF Filter	37
└ AF Range	37
└ Time Domain Zoom	38
└ Squelch	38
└ Squelch Level	38
Display Config	38

AM

Selects AM as the modulation type, changes the signal display, and opens a submenu to set the measurement configuration.

In single sweep mode, the data is determined from the current I/Q data set, i.e. a change to a different type does not trigger a new measurement.

This menu is also displayed when you press the MEAS CONFIG key after changing the modulation type.

SCPI command:

`CALC:FEED 'XTIM:AM'` (see [CALCulate<n>:FEED](#) on page 89)


Display Config ← AM

You configure the display settings for the results in the "Display Configuration" dialog box. This dialog box contains the following tabs:

- "Screen A-D": a separate tab for each of the four available screens
- "Predefined": for predefined display configurations

Screen A-D ← Display Config ← AM

For each of the four available screens you can configure what is to be displayed. To define the result display configuration for a screen, select the corresponding tab. For each screen you can define:

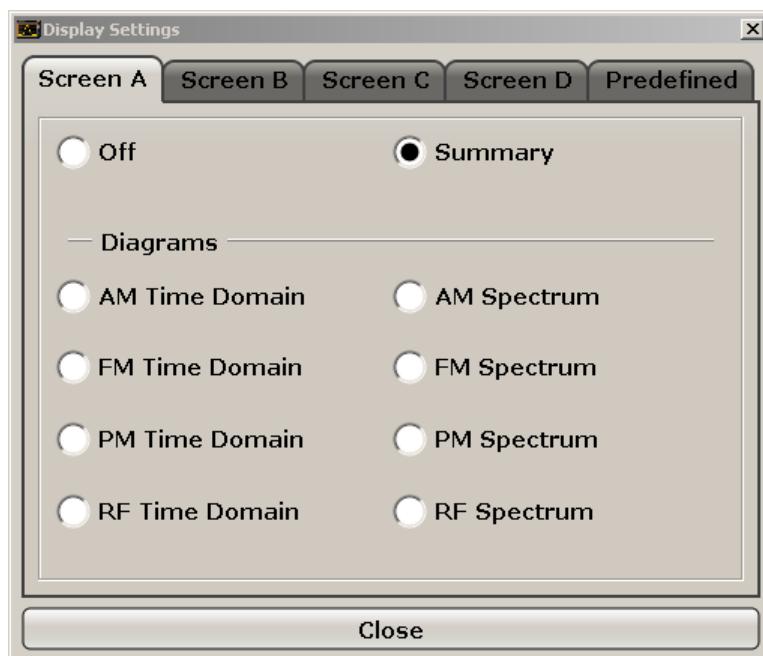

- **Off:** Whether it is displayed or not
- **Summary:** Whether a summary of the evaluation lists from all screens is displayed instead of a diagram
- **AM/FM/PM/RF Diagrams:** Which type of diagram is displayed
For details on the result diagram types, see [chapter 2.1.9, "Measurement Result Display", on page 20](#).

Note: By default, the diagram or summary displays the data from trace 1. To change the trace, use the [Select Trace](#) softkey.

SCPI command:

`DISP:WIND2:STAT ON` (see [DISPLAY\[:WINDOW<n>\]:STATE](#) on page 108)


Displays second window (Screen B).

`CALC2:FEED 'XTIME:FM:AFSPektrum1'` (see [CALCULATE<n>:FEED](#) on page 89)

Displays an AF spectrum diagram of the demodulated FM signal from trace 1 in screen B.

Predefined ← Display Config ← AM

You can store and load predefined screen configurations. All available configurations are displayed in the "Predefined" tab. The current screen configuration is indicated under "Current" at the top of the list.

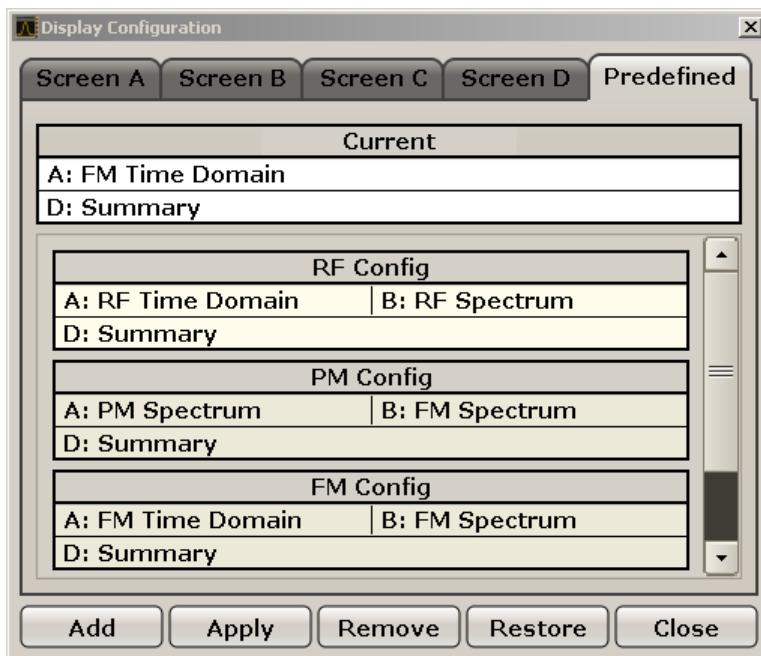**Add ← Predefined ← Display Config ← AM**

Opens an edit dialog box to enter a name for the current screen configuration. The configuration is then stored and added to the list.

Apply ← Predefined ← Display Config ← AM

Applies the currently selected configuration from the list to the current display.

Remove ← Predefined ← Display Config ← AM

Removes the currently selected configuration from the list.

Restore ← Predefined ← Display Config ← AM

Restores the default display configurations. Existing configurations with the default names are replaced.

Select Trace ← AM

Opens an edit dialog box to enter the number of the trace for which the data is to be displayed in the currently selected screen. Only activated traces can be selected.

Demod BW ← AM

Opens an edit dialog box to enter the demodulation bandwidth of the analog demodulation. The demodulation bandwidth determines the sampling rate for recording the signal to be analyzed. For details on the relation between demodulation bandwidth and sampling rate refer to [chapter 2.1.8, "Sample Rate, Measurement Time and Trigger Offset"](#), on page 18.

SCPI command:

[SENSe:] BANDwidth | BWIDth:DEMod on page 144

Meas Time ← AM

Opens an editor for entering the measurement time of the analog demodulation. For details on the measurement time values refer to [chapter 2.1.8, "Sample Rate, Measurement Time and Trigger Offset", on page 18](#).

Note: For FM Stereo measurements (option K7S), the minimum measurement time is 2 ms.

SCPI command:

[SENSe:] ADEMod:MTIMe on page 130

AF Filter ← AM

The bandwidth of the demodulated signal can be reduced by high pass or low pass filters and also a de-emphasis can be switched on. The selected filters are used for AM, FM and PM demodulation in common. Individual settings are not possible.

High Pass ← AF Filter ← AM

Opens the "High Pass" selection list to switch on a high pass filter with the given limit to separate the DC component. The filters are indicated by the 3 dB cutoff frequency. The 50 Hz and 300 Hz filters are designed as 2nd-order Butterworth filter (12 dB/octave). The 20 Hz filter is designed as 3rd-order Butterworth filter (18 dB/octave).

"None" deactivates the AF high pass filter. Default is "None".

The high pass filters are active in the following demodulation bandwidth range:

20 Hz	100 Hz ≤ demodulation bandwidth ≤ 1.6 MHz
50 Hz:	200 Hz ≤ demodulation bandwidth ≤ 3 MHz
300 Hz:	800 Hz ≤ demodulation bandwidth ≤ 8 MHz
Note: for FM stereo (K7S), all filters are active at all times, as the demodulation range is always 400 kHz	

SCPI command:

[SENSe:] FILTer<n>:HPASS [:STATe] on page 148

[SENSe:] FILTer<n>:HPASS:FREQuency on page 148

Low Pass ← AF Filter ← AM

Opens the "Low Pass" selection list to select the filter type. Relative and absolute low pass filter are available.

- Absolute low pass filters:

The 3 kHz, 15 kHz; 23 kHz and 150 kHz softkeys switch on a absolute low pass filter. The filters are indicated by the 3 dB cutoff frequency. The 3 kHz, 15 kHz and 23 kHz filters are designed as 5th-order Butterworth filters (30 dB/octave). The 150 kHz filter is designed as 8th-order Butterworth filter (48 dB/octave).

The absolute low pass filters are active in the following demodulation bandwidth range:

3 kHz:	6.4 kHz ≤ demodulation bandwidth ≤ 3 MHz
15 kHz:	50 kHz ≤ demodulation bandwidth ≤ 8 MHz
Note: for FM stereo (K7S), all filters are active at all times, as the demodulation range is always 400 kHz	

23 kHz	50 kHz ≤ demodulation bandwidth ≤ 18 MHz
150 kHz:	400 kHz ≤ demodulation bandwidth ≤ 8 MHz

Note: for FM stereo (K7S), all filters are active at all times, as the demodulation range is always 400 kHz

- Relative low pass filters:

The filters (3 dB) can be selected in % of the demodulation bandwidth. The filters are designed as 5th-order Butterworth filter (30 dB/octave) and active for all demodulation bandwidths.

- "None" deactivates the AF low pass filter. Default is "None".

SCPI command:

[SENSe:] FILTer<n>:LPASS[:STATe] on page 148

[SENSe:] FILTer<n>:LPASS:FREQuency[:ABSolute] on page 149

[SENSe:] FILTer<n>:LPASS:FREQuency:RELative on page 149

SFM:

[SENSe:] SFM:<ChannelType>:FILTer:LPASS:STATe on page 237

[SENSe:] SFM:<ChannelType>:FILTer:LPASS:FREQuency on page 237

Weighting ← AF Filter ← AM

Opens the "Weighting" selection list to select the weighting AF filter.

None ← Weighting ← AF Filter ← AM

Deactivates the weighting filter. This is the default setting.

SCPI command:

[SENSe:] FILTer<n>:HPASS[:STATe] on page 148

CCITT ← Weighting ← AF Filter ← AM

Switches on a CCITT P.53 weighting filter. The weighting filter is active in the following demodulation bandwidth range:

20 kHz ≤ demodulation bandwidth ≤ 3 MHz

For FM stereo (K7S), the filter is active at all times, as the demodulation range is always 400 kHz.

SCPI command:

[SENSe:] FILTer<n>:CCIT on page 146

SFM:

[SENSe:] SFM:<ChannelType>:FILTer:CCITT:STATe on page 234

CCIR Unweighted ← Weighting ← AF Filter ← AM

Switches on the CCIR unweighted filter, which is the combination of the 20 Hz highpass and 23 kHz low pass filter. The weighting filter is active in the following demodulation bandwidth range:

50 kHz ≤ demodulation bandwidth ≤ 1.6 MHz

For FM stereo (K7S), the filter is active at all times, as the demodulation range is always 400 kHz.

SCPI command:

[\[SENSe:\] FILTer<n>:CCIR\[:UNWeighted\]\[:STATE\]](#) on page 146

SFM:

[\[SENSe:\] SFM:<ChannelType>:FILTer:CCIR\[:UNWeighted\]\[:STATE\]](#)

on page 234

CCIR Weighted ← Weighting ← AF Filter ← AM

Switches on the CCIR weighted filter. The weighting filter is active in the following demodulation bandwidth range:

100 kHz ≤ demodulation bandwidth ≤ 3.0 MHz

For FM stereo (K7S), the filter is active at all times, as the demodulation range is always 400 kHz.

SCPI command:

[\[SENSe:\] FILTer<n>:CCIR:WEIGHTed\[:STATE\]](#) on page 147

SFM:

[\[SENSe:\] SFM:<ChannelType>:FILTer:CCIR:WEIGHTed\[:STATE\]](#) on page 235

A Weighted ← Weighting ← AF Filter ← AM

Switches on the A weighted filter. The weighting filter is active in the following demodulation bandwidth range:

100 kHz ≤ demodulation bandwidth ≤ 800 kHz

SCPI command:

[\[SENSe:\] FILTer<n>:AWEIGHTed\[:STATE\]](#) on page 145

SFM:

[\[SENSe:\] SFM:<ChannelType>:FILTer:AWEIGHTed\[:STATE\]](#) on page 234

Deemphasis ← AF Filter ← AM

Opens the "Deemphasis" selection list to switch on a deemphasis with the given time constant.

The deemphasis is active in the following demodulation bandwidth range:

Note: For FM stereo measurements (K7S), the demodulation bandwidth is always 400 kHz, thus the deemphasis is always active.

25 µs:	25 kHz ≤ demodulation bandwidth ≤ 40 MHz
50 µs:	6.4 kHz ≤ demodulation bandwidth ≤ 18 MHz
75 µs:	6.4 kHz ≤ demodulation bandwidth ≤ 18 MHz
750 µs:	800 Hz ≤ demodulation bandwidth ≤ 3 MHz

The following table shows the required demodulation bandwidth for an error less than 0.5 dB up to a maximum AF frequency.

deemphasis	25 µs	50 µs	75 µs	750 µs
max. AF frequency	25 kHz	12 kHz	8 kHz	800 Hz
required demodulation bandwidth	≥ 200 kHz	≥ 100 kHz	≥ 50 kHz	≥ 6.4 kHz

For higher AF frequencies the demodulation bandwidth must be increased.

SCPI command:

[SENSe:] FILTer<n>:DEMPhasis[:STATe] on page 147

[SENSe:] FILTer<n>:DEMPhasis:TCONstant on page 147

SFM:

[SENSe:] SFM:<ChannelType>:FILTer:DEMPhasis:STATe on page 235

[SENSe:] SFM:<ChannelType>:FILTer:DEMPhasis:TCONstant on page 236

All AF Filter Off ← AF Filter ← AM

Disables all specified AF Filters.

SCPI command:

[SENSe:] FILTer<n>:AOFF on page 145

AF Range ← AM

Opens a submenu to define the diagram scaling for AF displays.

Dev per Division ← AF Range ← AM

Opens an edit dialog box to set the modulation depth or the phase deviation (R&S FSV-K7 only), or frequency deviation per division:

AM display:	0.0001 % to 1000 %
FM display:	1 Hz/div to 100 MHz/div
PM display:	0.0001 rad/div to 1000 rad/div

The softkey is not available if logarithmic display is set ("Deviation Lin/Log" softkey).

SCPI command:

DISPlay[:WINDOW<n>]:TRACe<t>:MODE:HCONTinuous on page 111

Reference Position ← AF Range ← AM

Determines the position of the reference line for the modulation depth or the phase deviation (R&S FSV-K7 only) or frequency deviation on the y-axis of the diagram. By default, this line is set to 0.

The position is entered as a percentage of the diagram height with 100 % corresponding to the upper diagram border. The default setting is 50 % (diagram center) for the display of the AM, FM, or PM signal, and 100 % (upper diagram border) for the AF spectrum display of the AM, FM, or PM signal.

SCPI command:

DISPlay[:WINDOW<n>]:TRACe<t>:Y[:SCALE]:RPOSition on page 112

Reference Value ← AF Range ← AM

Determines the modulation depth or the phase deviation (R&S FSV-K7 only) or the frequency deviation at the reference line of the y-axis. The reference value is set separately for each display of the AM, FM, and PM signal and the AF spectrum of the AM, FM, and PM signal.

- AM/FM/PM signal display

The trace display takes individual frequency/phase offsets into account (in contrast, the **AF Coupling AC/DC** softkey permits automatic correction by the average frequency/phase offset of the signal, and can therefore not be activated simultaneously). Possible values: 0 and ± 10000 % (AM), 0 and ± 10 MHz (FM), 0 and ± 10000 rad (PM).

- AF spectrum display of the AM/FM/PM signal

In the default setting, the reference value defines the modulation depth or the FM/PM deviation at the upper diagram border.

Possible values: 0 and 10000 % (AM), 0 and 10 MHz (FM), 0 and 10000 rad (PM).

SCPI command:

[DISPLAY\[:WINDOW<n>\]:TRACE<t>:Y\[:SCALE\]:RVALue](#) on page 112

AF Coupling AC/DC ← AF Range ← AM

Controls the automatic correction of the frequency offset and phase offset of the input signal:

(**Note:** This function is not available with the AF spectrum display of the FM or PM signal.)

- FM signal display

If DC is selected, the absolute frequency is displayed, i.e. an input signal with an offset relative to the center frequency is not displayed symmetrically with respect to the zero line.

If AC is selected, the frequency offset is automatically corrected, i.e. the trace is always symmetric with respect to the zero line.

- PM signal display

If DC is selected, the phase runs according to the existing frequency offset. In addition, the DC signal contains a phase offset of $\pm \pi$.

If AC is selected, the frequency offset and phase offset are automatically corrected, i.e. the trace is always symmetric with respect to the zero line.

SCPI command:

[\[SENSe:\]ADEMod<n>:AF:COUPLing](#) on page 119

Deviation Lin/Log ← AF Range ← AM

Switches between logarithmic and linear display of the modulation depth or the phase deviation (R&S FSV-K7 only) or the frequency deviation.

SCPI command:

[DISPLAY\[:WINDOW<n>\]:TRACE<t>:Y:SPACing](#) on page 113

Unit ← AF Range ← AM

Opens a submenu to define the modulation unit.

Phase Unit (Rad/Deg) ← Unit ← AF Range ← AM

Sets the phase unit to rad or deg for displaying PM signals.

SCPI command:

[UNIT:THD](#) on page 165

THD Unit (% / DB) ← Unit ← AF Range ← AM

Sets the unit to percent or DB for THD measurements.

SCPI command:

[UNIT:THD](#) on page 165

Abs. Dev Unit (kHz/dBm) ← Unit ← AF Range ← AM

Sets the unit for absolute deviation to kHz or dBm. This softkey is only available with the FM Stereo option K7S.

SCPI command:

[UNIT:ADEV](#) on page 246

Rel. Dev Unit (dB / %) ← Unit ← AF Range ← AM

Sets the unit for relative deviation to dB or percent. This softkey is only available with the FM Stereo option K7S.

SCPI command:

[UNIT:RDEV](#) on page 247

Time Domain Zoom ← AM

Opens a submenu to activate and configure the zoom function.

State On / Off ← Time Domain Zoom ← AM

Activates or deactivates the time domain zoom according to the defined settings.

"ON" Activates the time domain zoom. The zoom area is defined using the "Start""[Start](#)" on page 34 and "Length Manual""[Length Manual](#)" on page 34 / "Length Auto""[Length Auto](#)" on page 35 softkeys.

"OFF" If more measured values than measurement points are available, several measured values are combined in one measurement point according to the method of the selected trace detector. For details on detectors refer to [chapter 2.1.7, "Detector Overview"](#), on page 17.

SCPI command:

[\[SENSe:\] ADEMod<n>:ZOOM\[:STATE\]](#) on page 140

Start ← Time Domain Zoom ← AM

Opens an edit dialog box to define the start time for the zoom area.

SCPI command:

[\[SENSe:\] ADEMod<n>:ZOOM:START](#) on page 140

Length Manual ← Time Domain Zoom ← AM

Opens an edit dialog box to define the length of the zoom area (as a time value) manually.

SCPI command:

[\[SENSe:\] ADEMod<n>:ZOOM:LENGTH](#) on page 141

Length Auto ← Time Domain Zoom ← AM

Automatically sets the length of the zoom area to the number of sweep points (see "Sweep Points" on page 54).

SCPI command:

[SENSe:] ADEMod<n>:ZOOM:LENGTH:MODE on page 141

Squelch ← AM

Activates the squelch function, i.e. if the signal falls below a defined threshold, the demodulated data is automatically set to 0. This is useful, for example, to avoid demodulation noise during transmission breaks.

SCPI command:

[SENSe:] ADEMod:SQUELCH[:STATE] on page 139

Squelch Level ← AM

Defines the level threshold below which the demodulated data is set to 0 if squelching is enabled. The squelch level is an absolute value.

SCPI command:

[SENSe:] ADEMod:SQUELCH:LEVEL on page 139

FM

Selects FM as the modulation type, changes the signal display, and opens a submenu to set the measurement configuration. The average value of the demodulated signal is mapped depending on the "AF Coupling" softkey setting (see "AF Coupling AC/DC" on page 33).

In single sweep mode, the data is determined from the current I/Q data set, i.e. a change to a different type does not trigger a new measurement.

This menu is also displayed when you press the MEAS CONFIG key after changing the modulation type.

SCPI command:

CALC:FEED 'XTIM:FM' (see CALCULATE<n>:FEED on page 89)

Display Config ← FM

See "Display Config" on page 26.

Select Trace ← FM

See "Select Trace" on page 28.

Demod BW ← FM

See "Demod BW" on page 28.

Meas Time ← FM

See "Meas Time" on page 29.

AF Filter ← FM

See "AF Filter" on page 29.

AF Range ← FM

See "[AF Range](#)" on page 32.

Time Domain Zoom ← FM

See "[Time Domain Zoom](#)" on page 34.

Squelch ← FM

See "[Squelch](#)" on page 35.

Squelch Level ← FM

See "[Squelch Level](#)" on page 35.

PM

Selects PM as the modulation type, changes the signal display, and opens a submenu to set the measurement configuration.

In single sweep mode, the data is determined from the current I/Q data set, i.e. a change to a different type does not trigger a new measurement.

This menu is also displayed when you press the MEAS CONFIG key after changing the modulation type.

SCPI command:

CALC:FEED 'XTIM:PM' (see [CALCulate<n>:FEED](#) on page 89)

Display Config ← PM

See "[Display Config](#)" on page 26.

Select Trace ← PM

See "[Select Trace](#)" on page 28.

Demod BW ← PM

See "[Demod BW](#)" on page 28.

Meas Time ← PM

See "[Meas Time](#)" on page 29.

AF Filter ← PM

See "[AF Filter](#)" on page 29.

AF Range ← PM

See "[AF Range](#)" on page 32.

Time Domain Zoom ← PM

See "[Time Domain Zoom](#)" on page 34.

Squelch ← PM

See "[Squelch](#)" on page 35.

Squelch Level ← PM

See "[Squelch Level](#)" on page 35.

Zero Phase Reference Point ← PM

Defines the position at which the phase of the PM-demodulated signal is set to 0 rad. The entry is made with respect to time. In the default setting, the first measured value is set to 0 rad.

This softkey is only available in the PM display with DC coupling.

SCPI command:

[\[SENSe:\]ADEMod:PM:RPOint \[:X\]](#) on page 134

Phase Wrap On/Off ← PM

Activates/deactivates the phase wrap.

On	The phase will be displayed in the range $\pm 180^\circ$ ($\pm \pi$). For example, if the phase exceeds $+180^\circ$, 360° is subtracted from the phase value, with the display thus showing $>-180^\circ$.
Off	The phase will not be wrapped.

This softkey is available in the PM signal displays.

SCPI command:

[CALC:FORM PHAS](#) (see [CALCulate<n>:FORMAT](#) on page 91)

RF Power

Selects RF power as the modulation type, changes the signal display, and opens a submenu to set the measurement configuration.

In single sweep mode, the data is determined from the current I/Q data set, i.e. a change to a different type does not trigger a new measurement.

This menu is also displayed when you press the MEAS CONFIG key after changing the modulation type.

SCPI command:

[CALC:FEED 'XTIM:RFPower'](#) (see [CALCulate<n>:FEED](#) on page 89)

Display Config ← RF Power

See "[Display Config](#)" on page 26.

Select Trace ← RF Power

See "[Select Trace](#)" on page 28.

Demod BW ← RF Power

See "[Demod BW](#)" on page 28.

Meas Time ← RF Power

See "[Meas Time](#)" on page 29.

AF Filter ← RF Power

See "[AF Filter](#)" on page 29.

AF Range ← RF Power

See "[AF Range](#)" on page 32.

Time Domain Zoom ← RF Power

See "Time Domain Zoom" on page 34.

Squelch ← RF Power

See "Squelch" on page 35.

Squelch Level ← RF Power

See "Squelch Level" on page 35.

Display Config

See "Display Config" on page 26.

2.2.2 Softkeys of the Frequency Menu – FREQ Key (R&S FSV-K7)

The following table shows all softkeys available in the "Frequency" menu in "Analog Demodulation" mode (FREQ key). It is possible that your instrument configuration does not provide all softkeys. If a softkey is only available with a special option, model or (measurement) mode, this information is delivered in the corresponding softkey description.

Center.....	38
CF StepSize.....	38
└ 0.1*Span (RF Spectrum).....	39
└ 0.1*Demod BW (AF/RF Time Domain, AF Spectrum).....	39
└ 0.5*Span (RF Spectrum).....	39
└ 0.5*Demod BW (AF/RF Time Domain, AF Spectrum).....	39
└ x*Span (RF Spectrum).....	39
└ x*Demod BW (AF/RF Time Domain, AF Spectrum).....	39
└ =Center.....	39
└ Manual.....	40
AF Center (AF Spectrum).....	40
AF Start.....	40
AF Stop.....	40

Center

Opens an edit dialog box to enter the center frequency. The allowed range of values for the center frequency depends on the frequency span.

$\text{span} > 0: \text{span}_{\min}/2 \leq f_{\text{center}} \leq f_{\max} - \text{span}_{\min}/2$

$\text{span} = 0: 0 \text{ Hz} \leq f_{\text{center}} \leq f_{\max}$

f_{\max} and span_{\min} are specified in the data sheet.

SCPI command:

[SENSe:] FREQuency:CENTer on page 150

CF StepSize

Opens a submenu to set the step size of the center frequency. Apart from the =Center and Manual softkeys, the other softkeys are displayed depending on the selected frequency span.

The step size can be coupled to the span (span > 0) or the demodulation bandwidth (span = 0) or it can be manually set to a fixed value.

0.1*Span (RF Spectrum) ← CF Stepsize

Sets the step size for the center frequency to 10 % of the span.

SCPI command:

[SENSe:] FREQuency:CENTER:STEP:LINK on page 150

[SENSe:] FREQuency:CENTER:STEP:LINK:FACTOr on page 151

0.1*Demod BW (AF/RF Time Domain, AF Spectrum) ← CF Stepsize

Sets the step size for the center frequency to 10 % of the demodulation bandwidth. This is the default setting.

SCPI command:

[SENSe:] FREQuency:CENTER:STEP:LINK on page 150

[SENSe:] FREQuency:CENTER:STEP:LINK:FACTOr on page 151

0.5*Span (RF Spectrum) ← CF Stepsize

Sets the step size for the center frequency to 50 % of the span.

SCPI command:

[SENSe:] FREQuency:CENTER:STEP:LINK on page 150

[SENSe:] FREQuency:CENTER:STEP:LINK:FACTOr on page 151

0.5*Demod BW (AF/RF Time Domain, AF Spectrum) ← CF Stepsize

Sets the step size for the center frequency to 50 % of the demodulation bandwidth.

SCPI command:

[SENSe:] FREQuency:CENTER:STEP:LINK on page 150

[SENSe:] FREQuency:CENTER:STEP:LINK:FACTOr on page 151

x*Span (RF Spectrum) ← CF Stepsize

Opens an edit dialog box to set the step size for the center frequency as % of the span.

SCPI command:

[SENSe:] FREQuency:CENTER:STEP:LINK on page 150

[SENSe:] FREQuency:CENTER:STEP:LINK:FACTOr on page 151

x*Demod BW (AF/RF Time Domain, AF Spectrum) ← CF Stepsize

Opens an edit dialog box to set the step size for the center frequency as % of the demodulation bandwidth. Values between 1 and 100 % in steps of 1 % are allowed. The default setting is 10 %.

SCPI command:

[SENSe:] FREQuency:CENTER:STEP:LINK on page 150

[SENSe:] FREQuency:CENTER:STEP:LINK:FACTOr on page 151

=Center ← CF Stepsize

Sets the step size to the value of the center frequency and removes the coupling of the step size to span or resolution bandwidth. This function is especially useful during measurements of the signal harmonic content because by entering the center frequency each stroke of the arrow key selects the center frequency of another harmonic.

Manual ← CF StepSize

Opens an edit dialog box to enter a fixed step size for the center frequency.

SCPI command:

[\[SENSe:\] FREQuency:CENTER:STEP\[:VALue\] on page 150](#)

AF Center (AF Spectrum)

Opens an edit box to enter the center frequency within the AF spectrum.

SCPI command:

[\[SENSe:\] ADEMod<n>:AF:CENTER on page 118](#)

AF Start

Opens an edit box to define the start frequency within the AF spectrum.

SCPI command:

[\[SENSe:\] ADEMod<n>:AF:START on page 120](#)

AF Stop

Opens an edit box to define the stop frequency within the AF spectrum.

The maximum AF stop frequency corresponds to half the demodulation bandwidth.

SCPI command:

[\[SENSe:\] ADEMod<n>:AF:STOP on page 121](#)

2.2.3 Softkeys of the Span Menu – SPAN Key (R&S FSV-K7)

The following table shows all softkeys available in the ""Span"" menu in ""Analog Demodulation"" mode (SPAN key). It is possible that your instrument configuration does not provide all softkeys. If a softkey is only available with a special option, model or (measurement) mode, this information is delivered in the corresponding softkey description.

Span Manual (RF Spectrum)	40
AF Span Manual (AF Spectrum)	40
Demod BW	41
Full Span (RF Spectrum)	41
AF Full Span (AF Spectrum)	41

Span Manual (RF Spectrum)

Opens an edit dialog box to enter the frequency span. The center frequency is kept constant. If the RF spectrum display is active, values between the sampling rate/1000 and the demodulation bandwidth are allowed.

SCPI command:

[\[SENSe:\] ADEMod:SPECTrum:SPAN:ZOOM on page 139](#)

AF Span Manual (AF Spectrum)

Opens an edit dialog box to enter the frequency range for the AF spectrum display. Values between the sampling rate/1000 and the demodulation bandwidth/2 are allowed.

SCPI command:

[\[SENSe:\] ADEMod<n>:AF:SPAN on page 119](#)

Demod BW

Opens an edit dialog box to enter the demodulation bandwidth of the analog demodulation. The demodulation bandwidth determines the sampling rate for recording the signal to be analyzed. For details on the relation between demodulation bandwidth and sampling rate refer to [chapter 2.1.8, "Sample Rate, Measurement Time and Trigger Offset"](#), on page 18.

SCPI command:

[\[SENSe:\]BANDwidth|BWIDth:DEMod](#) on page 144

Full Span (RF Spectrum)

Sets the span to the maximum frequency range of the R&S FSV specified in the data sheet. This setting is useful for overview measurements.

If the RF spectrum display is active, the full frequency range corresponds to the demodulation bandwidth.

SCPI command:

[\[SENSe:\]ADEMod:SPECTrumb:SPAN:ZOOM](#) on page 139

AF Full Span (AF Spectrum)

Sets the span to the maximum frequency range for the AF spectrum display. The maximum frequency range corresponds to half the demodulation bandwidth.

SCPI command:

[\[SENSe:\]ADEMod<n>:AF:SPAN:FULL](#) on page 120

2.2.4 Softkeys of the Amplitude Menu – AMPT Key (R&S FSV-K7)

The following table shows all softkeys available in the "Amplitude" menu in "Analog Demodulation" mode (AMPT key). It is possible that your instrument configuration does not provide all softkeys. If a softkey is only available with a special option, model or (measurement) mode, this information is delivered in the corresponding softkey description.

Ref Level.....	42
AF Range.....	42
Range.....	42
└ Range Log 100 dB.....	42
└ Range Log 50 dB.....	42
└ Range Log 10 dB.....	43
└ Range Log 5 dB.....	43
└ Range Log 1 dB.....	43
└ Range Log Manual.....	43
└ Range Linear %.....	43
└ Range Lin. Unit.....	44
Unit.....	44
└ Phase Unit (Rad/Deg).....	44
└ THD Unit (% / DB).....	44
Preamp On/Off (option RF Preamplifier, B22/B24).....	44
RF Atten Manual/Mech Att Manual.....	44
RF Atten Auto/Mech Att Auto.....	45

El Atten On/Off.....	45
El Atten Mode (Auto/Man).....	45
Ref Level Offset.....	46
Ref Level Position.....	46
Grid Abs/Rel	46
Input (AC/DC).....	46
Input 50 Ω/75 Ω	46

Ref Level

Opens an edit dialog box to enter the reference level in the currently active unit (dBm, dB μ V, etc).

The reference level value is the maximum value the AD converter can handle without distortion of the measured value. Signal levels above this value will not be measured correctly, which is indicated by the "IFOVL" status display.

SCPI command:

`DISPlay[:WINDOW<n>]:TRACe<t>:Y[:SCALE]:RLEVel` on page 111

AF Range

Only available for AM/FM/PM measurements (see chapter 2.1.9, "Measurement Result Display", on page 20).

For details refer to the "AF Range" softkey of the main menu (see "AF Range" on page 32).

Range

Only available for RF measurements (see chapter 2.1.9, "Measurement Result Display", on page 20).

Opens a submenu to define the level display range.

Range Log 100 dB ← Range

Sets the level display range to 100 dB.

SCPI command:

`DISP:WIND:TRAC:Y:SPAC LOG`

(To define logarithmic scaling, see `DISPlay[:WINDOW<n>]:TRACe<t>:Y:SPACing` on page 113.)

`DISP:WIND:TRAC:Y 100DB` (see `DISPlay[:WINDOW<n>]:TRACe<t>:Y[:SCALE]` on page 110).

Range Log 50 dB ← Range

Sets the level display range to 50 dB.

SCPI command:

`DISP:WIND:TRAC:Y:SPAC LOG`

(To define logarithmic scaling, see `DISPlay[:WINDOW<n>]:TRACe<t>:Y:SPACing` on page 113.)

`DISP:WIND:TRAC:Y 50DB`

Sets the level display range to 50 dB (see `DISPlay[:WINDOW<n>]:TRACe<t>:Y[:SCALE]` on page 110).

Range Log 10 dB ← Range

Sets the level display range to 10 dB.

SCPI command:

DISP:WIND:TRAC:Y:SPAC LOG

(To define logarithmic scaling, see [DISPLAY\[:WINDOW<n>\]:TRACE<t>:Y:SPACING](#) on page 113.)

DISP:WIND:TRAC:Y 10DB (see [DISPLAY\[:WINDOW<n>\]:TRACE<t>:Y\[:SCALE\]](#) on page 110).

Range Log 5 dB ← Range

Sets the level display range to 5 dB.

SCPI command:

DISP:WIND:TRAC:Y:SPAC LOG

(To define logarithmic scaling, see [DISPLAY\[:WINDOW<n>\]:TRACE<t>:Y:SPACING](#) on page 113.)

DISP:WIND:TRAC:Y 5DB (see [DISPLAY\[:WINDOW<n>\]:TRACE<t>:Y\[:SCALE\]](#) on page 110).

Range Log 1 dB ← Range

Sets the level display range to 1 dB.

SCPI command:

DISP:WIND:TRAC:Y:SPAC LOG

(To define logarithmic scaling, see [DISPLAY\[:WINDOW<n>\]:TRACE<t>:Y:SPACING](#) on page 113.)

DISP:WIND:TRAC:Y 1DB (see [DISPLAY\[:WINDOW<n>\]:TRACE<t>:Y\[:SCALE\]](#) on page 110).

Range Log Manual ← Range

Opens an edit dialog box to enter a value for logarithmic scaling for the level display range.

SCPI command:

DISP:WIND:TRAC:Y:SPAC LOG

(To define logarithmic scaling, see [DISPLAY\[:WINDOW<n>\]:TRACE<t>:Y:SPACING](#) on page 113.)

[DISPLAY\[:WINDOW<n>\]:TRACE<t>:Y\[:SCALE\]](#) on page 110

Range Linear % ← Range

Selects linear scaling in % for the level display range, i.e. the horizontal grid lines are labeled in %. The grid is divided in decadal steps.

Markers are displayed in the selected unit ("Unit" softkey). Delta markers are displayed in % referenced to the voltage value at the position of marker 1. This is the default setting for linear scaling.

SCPI command:

DISP:TRAC:Y:SPAC LIN, see [DISPLAY\[:WINDOW<n>\]:TRACE<t>:Y:SPACING](#) on page 113

Range Lin. Unit ← Range

Selects linear scaling in dB for the level display range, i.e. the horizontal lines are labeled in dB.

Markers are displayed in the selected unit ("Unit" softkey). Delta markers are displayed in dB referenced to the power value at the position of marker 1.

SCPI command:

[DISP:TRAC:Y:SPAC LDB](#), see [DISPLAY\[:WINDOW<n>\]:TRACe<t>:Y:SPACING](#) on page 113

Unit

Opens a submenu to define the unit of the measurement results.

Phase Unit (Rad/Deg) ← Unit

Sets the phase unit to rad or deg for displaying PM signals.

SCPI command:

[UNIT:THD](#) on page 165

THD Unit (% / DB) ← Unit

Sets the unit to percent or DB for THD measurements.

SCPI command:

[UNIT:THD](#) on page 165

Preamp On/Off (option RF Preamplifier, B22/B24)

Switches the preamplifier on or off.

If option R&S FSV-B22 is installed, the preamplifier is only active below 7 GHz.

If option R&S FSV-B24 is installed, the preamplifier is active for all frequencies.

This function is not available for input from the R&S Digital I/Q Interface (option R&S FSV-B17).

SCPI command:

[INPut:GAIN:STATE](#) on page 177

RF Atten Manual/Mech Att Manual

Opens an edit dialog box to enter the attenuation, irrespective of the reference level. If electronic attenuation is activated (option R&S FSV-B25 only; "El Atten Mode Auto" softkey), this setting defines the mechanical attenuation.

The mechanical attenuation can be set in 10 dB steps.

The RF attenuation can be set in 5 dB steps (with option R&S FSV-B25: 1 dB steps). The range is specified in the data sheet. If the defined reference level cannot be set for the set RF attenuation, the reference level is adjusted accordingly.

This function is not available for input from the R&S Digital I/Q Interface (option R&S FSV-B17).

The RF attenuation defines the level at the input mixer according to the formula:

" $level_{mixer} = level_{input} - RF\ attenuation$ "

Note: As of firmware version 1.61, the maximum mixer level allowed is **0 dBm**. Mixer levels above this value may lead to incorrect measurement results, which are indicated

by the "OVLD" status display. The increased mixer level allows for an improved signal, but also increases the risk of overloading the instrument!

SCPI command:

[INPut:ATTenuation](#) on page 173

RF Atten Auto/Mech Att Auto

Sets the RF attenuation automatically as a function of the selected reference level. This ensures that the optimum RF attenuation is always used. It is the default setting.

This function is not available for input from the R&S Digital I/Q Interface (option R&S FSV-B17).

SCPI command:

[INPut:ATTenuation:AUTO](#) on page 173

EI Atten On/Off

This softkey switches the electronic attenuator on or off. This softkey is only available with option R&S FSV-B25.

When the electronic attenuator is activated, the mechanical and electronic attenuation can be defined separately. Note however, that both parts must be defined in the same mode, i.e. either both manually, or both automatically.

This function is not available for input from the R&S Digital I/Q Interface (option R&S FSV-B17).

- To define the mechanical attenuation, use the [RF Atten Manual/Mech Att Manual](#) or [RF Atten Auto/Mech Att Auto](#) softkeys.
- To define the electronic attenuation, use the [EI Atten Mode \(Auto/Man\)](#) softkey.

Note: This function is not available for stop frequencies (or center frequencies in zero span) >7 GHz. In this case, the electronic and mechanical attenuation are summarized and the electronic attenuation can no longer be defined individually. As soon as the stop or center frequency is reduced below 7 GHz, this function is available again.

When the electronic attenuator is switched off, the corresponding RF attenuation mode (auto/manual) is automatically activated.

SCPI command:

[INPut:EATT:AUTO](#) on page 177

EI Atten Mode (Auto/Man)

This softkey defines whether the electronic attenuator value is to be set automatically or manually. If manual mode is selected, an edit dialog box is opened to enter the value.

This softkey is only available with option R&S FSV-B25, and only if the electronic attenuator has been activated via the [EI Atten On/Off](#) softkey.

Note: This function is not available for stop frequencies (or center frequencies in zero span) >7 GHz. In this case, the electronic and mechanical attenuation are summarized and the electronic attenuation can no longer be defined individually. As soon as the stop or center frequency is reduced below 7 GHz, electronic attenuation is available again. If the electronic attenuation was defined manually, it must be re-defined.

The attenuation can be varied in 1 dB steps from 0 to 30 dB. Other entries are rounded to the next lower integer value.

To re-open the edit dialog box for manual value definition, select the "Man" mode again.

If the defined reference level cannot be set for the given RF attenuation, the reference level is adjusted accordingly and the warning "Limit reached" is output.

SCPI command:

[INPut:EATT:AUTO](#) on page 177

[INPut:EATT](#) on page 177

Ref Level Offset

Opens an edit dialog box to enter the arithmetic level offset. This offset is added to the measured level irrespective of the selected unit. The scaling of the y-axis is changed accordingly. The setting range is ± 200 dB in 0.1 dB steps.

SCPI command:

[DISPlay\[:WINDOW<n>\]:TRACe<t>:Y\[:SCALe\]:RLEVel:OFFSet](#) on page 112

Ref Level Position

Opens an edit dialog box to enter the reference level position, i.e. the position of the maximum AD converter value on the level axis. The setting range is from -200 to +200 %, 0 % corresponding to the lower and 100 % to the upper limit of the diagram.

Only available for RF measurements.

Grid Abs/Rel

Switches between absolute and relative scaling of the level axis (not available with "Linear" range).

Only available for RF measurements.

"Abs" Absolute scaling: The labeling of the level lines refers to the absolute value of the reference level. Absolute scaling is the default setting.

"Rel" Relative scaling: The upper line of the grid is always at 0 dB. The scaling is in dB whereas the reference level is always in the set unit (for details on unit settings see the "Unit" softkey).

SCPI command:

[DISPlay\[:WINDOW<n>\]:TRACe<t>:Y\[:SCALe\]:MODE](#) on page 110

Input (AC/DC)

Toggles the RF input of the R&S FSV between AC and DC coupling.

This function is not available for input from the R&S Digital I/Q Interface (option R&S FSV-B17).

SCPI command:

[INPut:COUPLing](#) on page 174

Input 50 Ω/75 Ω

Uses 50 Ω or 75 Ω as reference impedance for the measured levels. Default setting is 50 Ω.

The setting 75 Ω should be selected if the 50 Ω input impedance is transformed to a higher impedance using a 75 Ω adapter of the RAZ type (= 25 Ω in series to the input impedance of the instrument). The correction value in this case is 1.76 dB = $10 \log (75 \Omega / 50 \Omega)$.

All levels specified in this Operating Manual refer to the default setting of the instrument (50 Ω).

This function is not available for input from the R&S Digital I/Q Interface (option R&S FSV-B17).

SCPI command:

[INPut:IMPedance](#) on page 178

2.2.5 Softkeys of the Auto Set menu - AUTO SET Key (R&S FSV-K7)

The following table shows all softkeys available in the "Auto Set" menu. It is possible that your instrument configuration does not provide all softkeys. If a softkey is only available with a special option, model or (measurement) mode, this information is provided in the corresponding softkey description.



Adjusting settings automatically during triggered measurements

When you select an auto adjust function a measurement is performed to determine the optimal settings. If you select an auto adjust function for a triggered measurement, you can select how the R&S FSV should behave:

- (default:) The measurement for adjustment waits for the next trigger
- The measurement for adjustment is performed without waiting for a trigger.
The trigger source is temporarily set to "Free Run". After the measurement is completed, the original trigger source is restored. The trigger level for IF Power and RF Power triggers is adjusted as follows:
Trigger Level = Reference Level - 15 dB

Auto All.....	47
Auto Freq.....	47
Auto Level.....	48
Settings.....	48
└ Meas Time Manual.....	48
└ Meas Time Auto.....	48
└ Upper Level Hysteresis.....	48
└ Lower Level Hysteresis.....	48
AF Auto Scale.....	49

Auto All

Performs all automatic settings.

- ["Auto Freq" on page 47](#)
- ["Auto Level" on page 48](#)

SCPI command:

[\[SENSe:\]ADJJust:ALL](#) on page 142

Auto Freq

Defines the center frequency automatically by determining the highest frequency level in the frequency span. This function uses the signal counter; thus it is intended for use with sinusoidal signals.

This function is not available for input from the R&S Digital I/Q Interface (option R&S FSV-B17).

SCPI command:

[SENSe:]ADJust:FREQuency on page 143

Auto Level

Defines the optimal reference level for the current measurement automatically.

The measurement time for automatic leveling can be defined using the **Settings** softkey.

SCPI command:

[SENSe:]ADJust:LEVel on page 143

Settings

Opens a submenu to define settings for automatic leveling.

Possible settings are:

- "Meas Time Manual" on page 48
- "Meas Time Auto" on page 48

Meas Time Manual ← Settings

Opens an edit dialog box to enter the duration of the level measurement in seconds. The level measurement is used to determine the optimal reference level automatically (see the "Auto Level" softkey, "Auto Level" on page 48). The default value is 1 ms.

SCPI command:

[SENSe:]ADJust:CONFigure:LEVel:DURation on page 143

Meas Time Auto ← Settings

The level measurement is used to determine the optimal reference level automatically (see the **Auto Level** softkey).

This softkey resets the level measurement duration for automatic leveling to the default value of 100 ms.

Upper Level Hysteresis ← Settings

Defines an upper threshold the signal must exceed before the reference level is automatically adjusted when the "Auto Level" function is performed.

SCPI command:

[SENSe:]ADJust:CONFiguration:HYSTeresis:UPPer on page 143

Lower Level Hysteresis ← Settings

Defines a lower threshold the signal must exceed before the reference level is automatically adjusted when the "Auto Level" function is performed.

SCPI command:

[SENSe:]ADJust:CONFiguration:HYSTeresis:LOWER on page 142

AF Auto Scale

Activates automatic scaling of the y-axis for AF measurements. RF power and RF spectrum measurements are not affected by the auto-scaling.

SCPI command:

[SENSe:] ADJust:SCALe:Y:AUTO [:CONTinuous] on page 144

2.2.6 Softkeys of the Bandwidth Menu – BW Key (R&S FSV-K7)

The following table shows all softkeys available in the "Bandwidth" menu in "Analog Demodulation" mode (BW key). It is possible that your instrument configuration does not provide all softkeys. If a softkey is only available with a special option, model or (measurement) mode, this information is delivered in the corresponding softkey description.

Res BW (span > 0).....	49
Demod BW.....	49
Meas Time.....	50
AF Filter.....	50
└ High Pass.....	50
└ Low Pass.....	50
└ Weighting.....	51
└ None.....	51
└ CCITT.....	51
└ CCIR Unweighted.....	51
└ CCIR Weighted.....	52
└ A Weighted.....	52
└ Deemphasis.....	52
└ All AF Filter Off.....	53
Demod Filter.....	53

Res BW (span > 0)

Opens an edit dialog box to enter a value for the resolution bandwidth. The range is specified in the data sheet.

This softkey is only available for spectrum measurements (see [chapter 2.1.9, "Measurement Result Display", on page 20](#)).

SCPI command:

[SENSe:] ADEM:SPECtrum:BANDwidth|BWIDth[:RESolution] on page 136

Demod BW

Opens an edit dialog box to enter the demodulation bandwidth of the analog demodulation. The demodulation bandwidth determines the sampling rate for recording the signal to be analyzed. For details on the relation between demodulation bandwidth and sampling rate refer to [chapter 2.1.8, "Sample Rate, Measurement Time and Trigger Offset", on page 18](#).

SCPI command:

[SENSe:] BANDwidth|BWIDth:DEMod on page 144

Meas Time

Opens an editor for entering the measurement time of the analog demodulation. For details on the measurement time values refer to [chapter 2.1.8, "Sample Rate, Measurement Time and Trigger Offset", on page 18](#).

Note: For FM Stereo measurements (option K7S), the minimum measurement time is 2 ms.

SCPI command:

[SENSe:] ADEMod:MTIMe on page 130

AF Filter

The bandwidth of the demodulated signal can be reduced by high pass or low pass filters and also a de-emphasis can be switched on. The selected filters are used for AM, FM and PM demodulation in common. Individual settings are not possible.

High Pass ← AF Filter

Opens the "High Pass" selection list to switch on a high pass filter with the given limit to separate the DC component. The filters are indicated by the 3 dB cutoff frequency. The 50 Hz and 300 Hz filters are designed as 2nd-order Butterworth filter (12 dB/octave). The 20 Hz filter is designed as 3rd-order Butterworth filter (18 dB/octave).

"None" deactivates the AF high pass filter. Default is "None".

The high pass filters are active in the following demodulation bandwidth range:

20 Hz	100 Hz ≤ demodulation bandwidth ≤ 1.6 MHz
50 Hz:	200 Hz ≤ demodulation bandwidth ≤ 3 MHz
300 Hz:	800 Hz ≤ demodulation bandwidth ≤ 8 MHz
Note: for FM stereo (K7S), all filters are active at all times, as the demodulation range is always 400 kHz	

SCPI command:

[SENSe:] FILTer<n>:HPASS[:STATe] on page 148

[SENSe:] FILTer<n>:HPASS:FREQuency on page 148

Low Pass ← AF Filter

Opens the "Low Pass" selection list to select the filter type. Relative and absolute low pass filter are available.

- Absolute low pass filters:

The 3 kHz, 15 kHz; 23 kHz and 150 kHz softkeys switch on a absolute low pass filter. The filters are indicated by the 3 dB cutoff frequency. The 3 kHz, 15 kHz and 23 kHz filters are designed as 5th-order Butterworth filters (30 dB/octave). The 150 kHz filter is designed as 8th-order Butterworth filter (48 dB/octave).

The absolute low pass filters are active in the following demodulation bandwidth range:

3 kHz:	6.4 kHz ≤ demodulation bandwidth ≤ 3 MHz
15 kHz:	50 kHz ≤ demodulation bandwidth ≤ 8 MHz
Note: for FM stereo (K7S), all filters are active at all times, as the demodulation range is always 400 kHz	

23 kHz	50 kHz ≤ demodulation bandwidth ≤ 18 MHz
150 kHz:	400 kHz ≤ demodulation bandwidth ≤ 8 MHz

Note: for FM stereo (K7S), all filters are active at all times, as the demodulation range is always 400 kHz

- Relative low pass filters:

The filters (3 dB) can be selected in % of the demodulation bandwidth. The filters are designed as 5th-order Butterworth filter (30 dB/octave) and active for all demodulation bandwidths.

- "None" deactivates the AF low pass filter. Default is "None".

SCPI command:

[SENSe:] FILTer<n>:LPASS[:STATe] on page 148

[SENSe:] FILTer<n>:LPASS:FREQuency[:ABSolute] on page 149

[SENSe:] FILTer<n>:LPASS:FREQuency:RELative on page 149

SFM:

[SENSe:] SFM:<ChannelType>:FILTer:LPASS:STATe on page 237

[SENSe:] SFM:<ChannelType>:FILTer:LPASS:FREQuency on page 237

Weighting ← AF Filter

Opens the "Weighting" selection list to select the weighting AF filter.

None ← Weighting ← AF Filter

Deactivates the weighting filter. This is the default setting.

SCPI command:

[SENSe:] FILTer<n>:HPASS[:STATe] on page 148

CCITT ← Weighting ← AF Filter

Switches on a CCITT P.53 weighting filter. The weighting filter is active in the following demodulation bandwidth range:

20 kHz ≤ demodulation bandwidth ≤ 3 MHz

For FM stereo (K7S), the filter is active at all times, as the demodulation range is always 400 kHz.

SCPI command:

[SENSe:] FILTer<n>:CCIT on page 146

SFM:

[SENSe:] SFM:<ChannelType>:FILTer:CCITT:STATe on page 234

CCIR Unweighted ← Weighting ← AF Filter

Switches on the CCIR unweighted filter, which is the combination of the 20 Hz highpass and 23 kHz low pass filter. The weighting filter is active in the following demodulation bandwidth range:

50 kHz ≤ demodulation bandwidth ≤ 1.6 MHz

For FM stereo (K7S), the filter is active at all times, as the demodulation range is always 400 kHz.

SCPI command:

[\[SENSe:\] FILTer<n>:CCIR\[:UNWeighted\]\[:STATE\]](#) on page 146

SFM:

[\[SENSe:\] SFM:<ChannelType>:FILTer:CCIR\[:UNWeighted\]\[:STATE\]](#)

on page 234

CCIR Weighted ← Weighting ← AF Filter

Switches on the CCIR weighted filter. The weighting filter is active in the following demodulation bandwidth range:

100 kHz ≤ demodulation bandwidth ≤ 3.0 MHz

For FM stereo (K7S), the filter is active at all times, as the demodulation range is always 400 kHz.

SCPI command:

[\[SENSe:\] FILTer<n>:CCIR:WEIGHTed\[:STATE\]](#) on page 147

SFM:

[\[SENSe:\] SFM:<ChannelType>:FILTer:CCIR:WEIGHTed\[:STATE\]](#) on page 235

A Weighted ← Weighting ← AF Filter

Switches on the A weighted filter. The weighting filter is active in the following demodulation bandwidth range:

100 kHz ≤ demodulation bandwidth ≤ 800 kHz

SCPI command:

[\[SENSe:\] FILTer<n>:AWEIGHTed\[:STATE\]](#) on page 145

SFM:

[\[SENSe:\] SFM:<ChannelType>:FILTer:AWEIGHTed\[:STATE\]](#) on page 234

Deemphasis ← AF Filter

Opens the "Deemphasis" selection list to switch on a deemphasis with the given time constant.

The deemphasis is active in the following demodulation bandwidth range:

Note: For FM stereo measurements (K7S), the demodulation bandwidth is always 400 kHz, thus the deemphasis is always active.

25 µs:	25 kHz ≤ demodulation bandwidth ≤ 40 MHz
50 µs:	6.4 kHz ≤ demodulation bandwidth ≤ 18 MHz
75 µs:	6.4 kHz ≤ demodulation bandwidth ≤ 18 MHz
750 µs:	800 Hz ≤ demodulation bandwidth ≤ 3 MHz

The following table shows the required demodulation bandwidth for an error less than 0.5 dB up to a maximum AF frequency.

deemphasis	25 µs	50 µs	75 µs	750 µs
max. AF frequency	25 kHz	12 kHz	8 kHz	800 Hz
required demodulation bandwidth	≥ 200 kHz	≥ 100 kHz	≥ 50 kHz	≥ 6.4 kHz

For higher AF frequencies the demodulation bandwidth must be increased.

SCPI command:

[SENSe:] FILTer<n>:DEMPhasis[:STATe] on page 147

[SENSe:] FILTer<n>:DEMPhasis:TCONstant on page 147

SFM:

[SENSe:] SFM:<ChannelType>:FILTer:DEMPhasis:STATe on page 235

[SENSe:] SFM:<ChannelType>:FILTer:DEMPhasis:TCONstant on page 236

All AF Filter Off ← AF Filter

Disables all specified AF Filters.

SCPI command:

[SENSe:] FILTer<n>:AOFF on page 145

Demod Filter

By default, a flat demodulation filter is used in Analog Demodulation mode. However, in order to optimize the settling behaviour of the filter, a Gaussian filter can be used instead.

For details on sample rates, measurement times and trigger offsets for various demodulation bandwidths when using a Gaussian filter, see [chapter 2.1.8, "Sample Rate, Measurement Time and Trigger Offset"](#), on page 18.

SCPI command:

[SENSe:] BANDwidth:DEMod:TYPE on page 144

2.2.7 Softkeys of the Sweep Menu – SWEEP Key (R&S FSV-K7)

The following table shows all softkeys available in the "Sweep" menu in "Analog Demodulation" mode (SWEEP key). It is possible that your instrument configuration does not provide all softkeys. If a softkey is only available with a special option, model or (measurement) mode, this information is delivered in the corresponding softkey description.

Continuous Sweep.....	53
Single Sweep.....	54
Continue Single Sweep.....	54
Meas Time.....	54
Sweep Count.....	54
Sweep Points.....	54

Continuous Sweep

Sets the continuous sweep mode: the sweep takes place continuously according to the trigger settings. This is the default setting.

The trace averaging is determined by the sweep count value (see the "Sweep Count" softkey, "[Sweep Count](#)" on page 54).

SCPI command:

`INIT:CONT ON`, see [INITiate<n>:CONTinuous](#) on page 182

Single Sweep

Sets the single sweep mode: after triggering, starts the number of sweeps that are defined by using the [Sweep Count](#) softkey. The measurement stops after the defined number of sweeps has been performed.

SCPI command:

`INIT:CONT OFF`, see [INITiate<n>:CONTinuous](#) on page 182

Continue Single Sweep

Repeats the number of sweeps set by using the [Sweep Count](#) softkey, without deleting the trace of the last measurement.

This is particularly of interest when using the trace configurations "Average" or "Max Hold" to take previously recorded measurements into account for averaging/maximum search.

SCPI command:

[INITiate<n>:CONMeas](#) on page 181

Meas Time

Opens an editor for entering the measurement time of the analog demodulation. For details on the measurement time values refer to [chapter 2.1.8, "Sample Rate, Measurement Time and Trigger Offset"](#), on page 18.

Note: For FM Stereo measurements (option K7S), the minimum measurement time is 2 ms.

SCPI command:

[\[SENSe:\] ADEMod:MTIMe](#) on page 130

Sweep Count

Opens an edit dialog box to enter the number of sweeps to be performed in the single sweep mode. Values from 0 to 32767 are allowed. If the values 0 or 1 are set, one sweep is performed. The sweep count is applied to all the traces in a diagram.

If the trace configurations "Average", "Max Hold" or "Min Hold" are set, the sweep count value also determines the number of averaging or maximum search procedures.

In continuous sweep mode, if sweep count = 0 (default), averaging is performed over 10 sweeps. For sweep count =1, no averaging, maxhold or minhold operations are performed.

SCPI command:

[\[SENSe:\] SWEEp:COUNT](#) on page 151

Sweep Points

Opens an edit dialog box to enter the number of measured values to be collected during one sweep.

- Entry via rotary knob:

- In the range from 101 to 1001, the sweep points are increased or decreased in steps of 100 points.
- In the range from 1001 to 32001, the sweep points are increased or decreased in steps of 1000 points.
- Entry via keypad:
All values in the defined range can be set.

The default value is 691 sweep points.

SCPI command:

[SENSe:] SWEEp:POINTs on page 153

2.2.8 Softkeys of the Trace Menu – TRACE key (R&S FSV-K7)

The TRACE key is used to configure the data acquisition for measurement and the analysis of the measurement data.

Trace 1/Trace 2/Trace 3/Trace 4/Trace 5/Trace 6

Selects the active trace (1, 2, 3, 4, 5, 6) and opens the "Trace Mode" submenu for the selected trace. The default setting is trace 1 in the overwrite mode (see "[Clear Write](#)" on page 15), the other traces are switched off (see "[Blank](#)" on page 16).

For details see [chapter 2.1.4, "Trace Mode Overview"](#), on page 15.

Tip: To configure several traces in one step, press the [Trace Wizard](#) softkey to open a trace configuration dialog. See also [chapter 2.1.3, "Configuring Traces"](#), on page 13.

SCPI command:

Selected via numeric suffix of:TRACe<1...6> commands

Clear Write ← Trace 1/Trace 2/Trace 3/Trace 4/Trace 5/Trace 6

Overwrite mode: the trace is overwritten by each sweep. This is the default setting.

All available detectors can be selected.

SCPI command:

DISP:TRAC:MODE WRIT, see [DISPLAY\[:WINDOW<n>\]:TRACe<t>:MODE](#) on page 109

Max Hold ← Trace 1/Trace 2/Trace 3/Trace 4/Trace 5/Trace 6

The maximum value is determined over several sweeps and displayed. The R&S FSV saves the sweep result in the trace memory only if the new value is greater than the previous one.

The detector is automatically set to "Positive Peak".

This mode is especially useful with modulated or pulsed signals. The signal spectrum is filled up upon each sweep until all signal components are detected in a kind of envelope.

This mode is not available for statistics measurements.

SCPI command:

DISP:TRAC:MODE MAXH, see [DISPLAY\[:WINDOW<n>\]:TRACe<t>:MODE](#) on page 109

Min Hold ← Trace 1/Trace 2/Trace 3/Trace 4/Trace 5/Trace 6

The minimum value is determined from several measurements and displayed. The R&S FSV saves for each sweep the smallest of the previously stored/currently measured values in the trace memory.

The detector is automatically set to "Negative Peak".

This mode is useful e.g. for making an unmodulated carrier in a composite signal visible. Noise, interference signals or modulated signals are suppressed whereas a CW signal is recognized by its constant level.

This mode is not available for statistics measurements.

SCPI command:

DISP:TRAC:MODE MINH, see [DISPLAY\[:WINDOW<n>\]:TRACe<t>:MODE](#) on page 109

Average ← Trace 1/Trace 2/Trace 3/Trace 4/Trace 5/Trace 6

The average is formed over several sweeps. The [Sweep Count](#) determines the number of averaging procedures.

All available detectors can be selected. If the detector is automatically selected, the sample detector is used (see [chapter 2.1.7, "Detector Overview"](#), on page 17).

This mode is not available for statistics measurements.

SCPI command:

DISP:TRAC:MODE AVER, see [DISPLAY\[:WINDOW<n>\]:TRACe<t>:MODE](#) on page 109

View ← Trace 1/Trace 2/Trace 3/Trace 4/Trace 5/Trace 6

The current contents of the trace memory are frozen and displayed.

Note: If a trace is frozen, the instrument settings, apart from level range and reference level (see below), can be changed without impact on the displayed trace. The fact that the displayed trace no longer matches the current instrument setting is indicated by the  icon on the tab label.

If the level range or reference level is changed, the R&S FSV automatically adapts the measured data to the changed display range. This allows an amplitude zoom to be made after the measurement in order to show details of the trace.

SCPI command:

DISP:TRAC:MODE VIEW, see [DISPLAY\[:WINDOW<n>\]:TRACe<t>:MODE](#) on page 109

Blank ← Trace 1/Trace 2/Trace 3/Trace 4/Trace 5/Trace 6

Hides the selected trace.

SCPI command:

DISP:TRAC OFF, see [DISPLAY\[:WINDOW<n>\]:TRACe<t>\[:STATE\]](#) on page 110

Detector ← Trace 1/Trace 2/Trace 3/Trace 4/Trace 5/Trace 6

Opens a submenu to select the detector manually, or activate automatic selection.

If a detector was selected manually, the "MAN" indicator is highlighted.

If "AUTO" is selected, the detector is defined automatically, depending on the selected trace mode:

Trace mode	Detector
Clear Write	Auto Peak
Max Hold	Positive Peak
Min Hold	Negative Peak
Average	Sample Peak
View	—
Blank	—

For details see [chapter 2.1.7, "Detector Overview"](#), on page 17.

Note: In Analog Demod mode, if AUTO is selected, the Auto Peak detector is used regardless of the trace mode. However, if Noise or Phase Noise measurements are performed in Analog Demod mode, the Sample Detector is used.

Auto Select ← Detector ← Trace 1/Trace 2/Trace 3/Trace 4/Trace 5/Trace 6

Selects the optimum detector for the selected trace and filter mode. This is the default setting.

For details see also [chapter 2.1.7, "Detector Overview"](#), on page 17.

Trace mode	Detector
Clear/Write	Auto Peak
Average	Sample
Max Hold	Max Peak
Min Hold	Min Peak

SCPI command:

[SENSe:] [WINDOW:] DETector<trace>[:FUNCTION] :AUTO on page 155

Auto Peak ← Detector ← Trace 1/Trace 2/Trace 3/Trace 4/Trace 5/Trace 6

Selects the "Auto Peak" detector.

For details see [chapter 2.1.7, "Detector Overview"](#), on page 17.

SCPI command:

DET APE, see [SENSe:] [WINDOW:] DETector<trace>[:FUNCTION]
on page 155

Positive Peak ← Detector ← Trace 1/Trace 2/Trace 3/Trace 4/Trace 5/Trace 6

Selects the "Positive Peak" detector.

For details see [chapter 2.1.7, "Detector Overview"](#), on page 17.

SCPI command:

DET POS, see [SENSe:] [WINDOW:] DETector<trace>[:FUNCTION]
on page 155

Negative Peak ← Detector ← Trace 1/Trace 2/Trace 3/Trace 4/Trace 5/Trace 6
Selects the "Negative Peak" detector.

For details see [chapter 2.1.7, "Detector Overview"](#), on page 17.

SCPI command:

DET NEG, see [\[SENSe:\] \[WINDOW:\] DETector<trace>\[:FUNCTION\]](#)
on page 155

Sample ← Detector ← Trace 1/Trace 2/Trace 3/Trace 4/Trace 5/Trace 6
Selects the "Sample" detector.

For details see [chapter 2.1.7, "Detector Overview"](#), on page 17.

SCPI command:

DET SAMP, see [\[SENSe:\] \[WINDOW:\] DETector<trace>\[:FUNCTION\]](#)
on page 155

RMS ← Detector ← Trace 1/Trace 2/Trace 3/Trace 4/Trace 5/Trace 6
Selects the "RMS" detector.

For details see [chapter 2.1.7, "Detector Overview"](#), on page 17.

SCPI command:

DET RMS, see [\[SENSe:\] \[WINDOW:\] DETector<trace>\[:FUNCTION\]](#)
on page 155

Average ← Detector ← Trace 1/Trace 2/Trace 3/Trace 4/Trace 5/Trace 6
Selects the "Average" detector.

For details see [chapter 2.1.7, "Detector Overview"](#), on page 17.

SCPI command:

DET AVER, see [\[SENSe:\] \[WINDOW:\] DETector<trace>\[:FUNCTION\]](#)
on page 155

Quasipeak ← Detector ← Trace 1/Trace 2/Trace 3/Trace 4/Trace 5/Trace 6
Selects the "Quasipeak" detector.

The quasipeak detector is available with option R&S FSV-K54.

For details see [chapter 2.1.7, "Detector Overview"](#), on page 17.

SCPI command:

DET QPE, see [\[SENSe:\] \[WINDOW:\] DETector<trace>\[:FUNCTION\]](#)
on page 155

CISPR Average ← Detector ← Trace 1/Trace 2/Trace 3/Trace 4/Trace 5/Trace 6
Selects the "CISPR Average" detector.

The CISPR Average detector is available with option R&S FSV-K54.

For details see [chapter 2.1.7, "Detector Overview"](#), on page 17.

SCPI command:

DET CAV, see [\[SENSe:\] \[WINDOW:\] DETector<trace>\[:FUNCTION\]](#)
on page 155

RMS Average ← Detector ← Trace 1/Trace 2/Trace 3/Trace 4/Trace 5/Trace 6

Selects the "RMS Average" detector.

The quasipeak detector is available with option R&S FSV-K54.

For details see [chapter 2.1.7, "Detector Overview"](#), on page 17.

SCPI command:

DET CRMS, see [\[SENSe:\] \[WINDOW:\] DETector<trace>\[:FUNCTION\]](#)

on page 155

More Traces

Opens a submenu to select one of the traces not currently displayed in the main menu.

Trace Wizard

Opens the "Trace Wizard" dialog. See [chapter 2.1.3, "Configuring Traces"](#), on page 13.

Average Mode

Opens a submenu to select the averaging method for the average trace mode. The following methods are available:

- [Lin](#)
- [Log](#)
- [Power](#)

Logarithmic averaging is preferred to display signals with a low signal to noise ratio. While positive peak values are decreased in logarithmic averaging due to the characteristics involved, it is also true that negative peaks are increased relative to the average value. If the distorted amplitude distribution is averaged, a value is obtained that is smaller than the actual average value. The difference is -2.5 dB.

This low average value is usually corrected in noise power measurements by a 2.5 dB factor. Therefore the R&S FSV offers the selection of linear averaging. The trace data is converted to linear values prior to averaging, then averaged and reconverted to logarithmic values. After these conversions the data is displayed on the screen. The average value is always correctly displayed irrespective of the signal characteristic.

In case of stationary sinusoidal signals both logarithmic and linear averaging has the same results.

Lin ← Average Mode

Activates linear averaging. Linear averaging means that the power level values are converted into linear units prior to averaging. After the averaging, the data is converted back into its original unit.

This softkey takes effect if the grid is set to a linear scale (see "Range Linear" softkey, "[Range Linear %](#)" on page 43). In this case, the averaging is done in two ways (depending on the set unit – see "Unit" softkey):

- The unit is set to either W or dBm: the data is converted into W prior to averaging, i.e. averaging is done in W.
- The unit is set to either V, A, dBmV, dB μ V, dB μ A or dB μ W: the data is converted into V prior to averaging, i.e. averaging is done in V.

SCPI command:

SENS:AVER1:TYPE LIN, see [\[SENSe:\] AVERage<n>:TYPE](#) on page 154

Log ← Average Mode

Activates logarithmic averaging.

This averaging method only takes effect if the grid is set to a logarithmic scale ("Range" softkey), i.e. the unit of the data is dBm. In this case the values are averaged in dBm. Otherwise (i.e. with linear scaling), the behavior is the same as with linear averaging (see [Lin](#) softkey). For further information on logarithmic scaling refer to the "Average Mode" softkey.

SCPI command:

`SENS:AVER1:TYPE VID`, see [\[SENSe:\] AVERage<n>:TYPE](#) on page 154

Power ← Average Mode

Activates linear power averaging.

The power level values are converted into unit Watt prior to averaging. After the averaging, the data is converted back into its original unit.

Unlike the linear mode, the averaging is always done in W.

SCPI command:

`SENS:AVER1:TYPE POW`, see [\[SENSe:\] AVERage<n>:TYPE](#) on page 154

ASCII Trace Export

Opens the "ASCII Trace Export Name" dialog box and saves the active trace in ASCII format to the specified file and directory.

The file consists of the header containing important scaling parameters and a data section containing the trace data. For details on an ASCII file see [chapter 2.1.10, "ASCII File Export Format"](#), on page 23.

This format can be processed by spreadsheet calculation programs, e.g. MS-Excel. It is necessary to define ';' as a separator for the data import. Different language versions of evaluation programs may require a different handling of the decimal point. It is therefore possible to select between separators '.' (decimal point) and ',' (comma) using the "Decim Sep" softkey (see ["Decim Sep"](#) on page 60).

SCPI command:

[FORMAT:DEXPort:DSEParator](#) on page 181

[MMEMory:STORe<n>:TRACe](#) on page 179

Decim Sep

Selects the decimal separator with floating-point numerals for the ASCII Trace export to support evaluation programs (e.g. MS-Excel) in different languages. The values '.' (decimal point) and ',' (comma) can be set.

SCPI command:

[FORMAT:DEXPort:DSEParator](#) on page 181

2.2.9 Softkeys of the Trigger Menu – TRIG Key (R&S FSV-K7)

The following table shows all softkeys available in the "Trigger" menu in "Analog Demodulation" mode (TRIG key). It is possible that your instrument configuration does not pro-

vide all softkeys. If a softkey is only available with a special option, model or (measurement) mode, this information is delivered in the corresponding softkey description.

Trigger Source	61
└ Free Run	61
└ External	61
└ RF Power	61
└ IF Power	62
└ FM	62
└ AM	63
└ PM	63
└ RF	63
└ Time	63
Trigger Level	63
Trigger Polarity	63
Trigger Offset	64
Repetition Interval	64
Trigger Hysteresis	64
Trigger Holdoff	64

Trigger Source

Opens the "Trg Source" submenu to select the trigger source.

In "Analog Demodulation" mode, the next measurement is triggered if the selected input signal exceeds the threshold specified using the "Trigger Level" softkey (see "[Trigger Level](#)" on page 63). A periodic signal modulated onto the carrier frequency can be displayed in this way. It is recommended that the measurement time covers at least five periods of the audio signal.

For triggering with AM, FM, PM or RF trigger sources to be successful, the measurement time must cover at least 5 periods of the audio signal.

SCPI command:

[TRIGger<n>\[:SEQUence\]:SOURce](#) on page 163

Free Run ← Trigger Source

The start of a sweep is not triggered. Once a measurement is completed, another is started immediately.

SCPI command:

[TRIG:SOUR IMM](#), see [TRIGger<n>\[:SEQUence\]:SOURce](#) on page 163

External ← Trigger Source

Defines triggering via a TTL signal at the "EXT TRIG/GATE IN" input connector on the rear panel.

SCPI command:

[TRIG:SOUR EXT](#), see [TRIGger<n>\[:SEQUence\]:SOURce](#) on page 163

RF Power ← Trigger Source

Defines triggering of the measurement via signals which are outside the measurement channel.

This trigger mode is available with detector board 1307.9554.02 Rev 05.00 or higher. It is not available for input from the R&S Digital I/Q Interface (option R&S FSV-B17). If RF Power trigger mode is selected and digital baseband input is activated, the trigger mode is automatically switched to "Free Run".

In RF Power trigger mode the instrument uses a level detector at the first intermediate frequency. The detector threshold can be selected in a range between - 50 dBm and -10 dBm at the input mixer. The resulting trigger level at the RF input lies within the following range:

(-24dBm + RF Att) ≤ Triggerlevel ≤ (+5dBm + RF Att), max. 30 dBm, for Preamp = OFF
(-40dBm + RF Att) ≤ Triggerlevel ≤ (-11dBm + RF Att), max. 30 dBm, for Preamp = ON
with

500 MHz ≤ InputSignal ≤ 7 GHz

Note: If input values outside of this range occur (e.g. for fullspan measurements), the sweep may be aborted and a message indicating the allowed input values is displayed in the status bar.

SCPI command:

TRIG:SOUR RFP, see [TRIGger<n>\[:SEQUence\]:SOURce](#) on page 163

SWE:EGAT:SOUR RFP for gated triggering, see [\[SENSe:\]SWEEp:EGATE:SOURce](#) on page 152

IF Power ← Trigger Source

Defines triggering of the measurement via signals which are outside the measurement channel.

For this purpose, the R&S FSV uses a level detector at the second intermediate frequency. Its threshold can be set in a range between -50 dBm and -10 dBm at the input mixer. The resulting trigger level at the RF input is calculated via the following formula:

"mixerlevel_{min} + RFAtt – PreampGain ≤ Input Signal ≤ mixerlevel_{max} + RFAtt – PreampGain"

The bandwidth at the intermediate frequency is 20 MHz. The R&S FSV is triggered as soon as the trigger threshold is exceeded within a 10 MHz range around the selected frequency (= start frequency in the frequency sweep).

Thus, the measurement of spurious emissions, e.g. for pulsed carriers, is possible even if the carrier lies outside the selected frequency span.

SCPI command:

TRIG:SOUR IFP, see [TRIGger<n>\[:SEQUence\]:SOURce](#) on page 163

SWE:EGAT:SOUR IFP for gated triggering, see [\[SENSe:\]SWEEp:EGATE:SOURce](#) on page 152

FM ← Trigger Source

Triggers on the specified frequency level of the FM signal.

SCPI command:

TRIG:SEQ:SOUR FM, see [TRIGger<n>\[:SEQUence\]:SOURce](#) on page 163

AM ← Trigger Source

Triggers on the specified modulation depth of the AM signal.

SCPI command:

TRIG:SEQ:SOUR AMR, see [TRIGger<n>\[:SEQUence\]:SOURce](#) on page 163

PM ← Trigger Source

Triggers on the specified phase of the PM signal.

SCPI command:

TRIG:SEQ:SOUR PM, see [TRIGger<n>\[:SEQUence\]:SOURce](#) on page 163

RF ← Trigger Source

Triggers on the specified level of the RF signal.

Note: The RF **offline** trigger is based on the I/Q data of the demodulated signal, limited to the demodulation bandwidth. For a wider trigger bandwidth and triggering based on the currently measured RF input signal, use the more powerful **RF Power** trigger.

SCPI command:

TRIG:SEQ:SOUR AM, see [TRIGger<n>\[:SEQUence\]:SOURce](#) on page 163

Time ← Trigger Source

Opens an edit dialog box to define a repetition interval in which the measurement is triggered. The shortest interval is 2 ms.

SCPI command:

TRIG:SOUR TIME[TRIGger<n>\[:SEQUence\]:SOURce](#) on page 163

Trigger Level

Defines the trigger level as a numeric value.

In the trigger mode "Time", this softkey is not available.

SCPI command:

[TRIGger<n>\[:SEQUence\]:LEVel:IFPower](#) on page 161

For digital input via the R&S Digital I/Q Interface, R&S FSV-B17:

[TRIGger<n>\[:SEQUence\]:LEVel:BBPower](#) on page 160

Trigger Polarity

Sets the polarity of the trigger source.

The sweep starts after a positive or negative edge of the trigger signal. The default setting is "Pos". The setting applies to all modes with the exception of the "Free Run" and "Time" mode.

"Pos" Level triggering: the sweep is stopped by the logic "0" signal and restarted by the logical "1" signal after the gate delay time has elapsed.

"Neg" Edge triggering: the sweep is continued on a "0" to "1" transition for the gate length duration after the gate delay time has elapsed.

SCPI command:

[TRIGger<n>\[:SEQUence\]:SLOPe](#) on page 162

[\[SENSe:\] SWEEp:EGATe:POLarity](#) on page 152

Trigger Offset

Opens an edit dialog box to enter the time offset between the trigger signal and the start of the sweep. The time may be entered in multiples of 125 ns in the range -13 s to 13 s (default 0 s).

offset > 0:	start of the sweep is delayed
offset < 0:	sweep starts earlier (pre-trigger) only possible for span = 0 and gated trigger switched off not possible if RMS or average detector activated maximum allowed range and the maximum resolution limited by the sweep time: <ul style="list-style-type: none"> • $\text{range}_{\max} = -499/500 \times \text{sweep time}$ • $\text{resolution}_{\max} = \text{sweep time}/500$

In the trigger mode [Time](#), this softkey is not available.

For details on the relation between demodulation bandwidth and trigger offset refer to [chapter 2.1.8, "Sample Rate, Measurement Time and Trigger Offset"](#), on page 18.

SCPI command:

[TRIGger<n>\[:SEQUence\]:HOLDoff\[:TIME\]](#) on page 159

Repetition Interval

Opens an edit dialog box to define a repetition interval in which the measurement is triggered. The shortest interval is 2 ms. This softkey is only available if the trigger source "Time" is selected (see "[Time](#)" on page 63).

SCPI command:

[TRIGger<n>\[:SEQUence\]:TIME:RINTERval](#) on page 162

Trigger Hysteresis

Defines the value for the trigger hysteresis for "IF power" or "RF Power" trigger sources. The hysteresis in dB is the value the input signal must stay below the power trigger level in order to allow a trigger to start the measurement. The range of the value is between 3 dB and 50 dB with a step width of 1 dB.

SCPI command:

[TRIGger<n>\[:SEQUence\]:IFPower:HYSTeresis](#) on page 159

Trigger Holdoff

Defines the value for the trigger holdoff. The holdoff value in s is the time which must pass before triggering, in case another trigger event happens.

This softkey is only available if "IFPower", "RF Power" or "BBPower" is the selected trigger source.

SCPI command:

[TRIGger<n>\[:SEQUence\]:IFPower:HOLDoff](#) on page 159

For digital input via the R&S Digital I/Q Interface, R&S FSV-B17:

[TRIGger<n>\[:SEQUence\]:BBPower:HOLDoff](#) on page 158

2.2.10 Softkeys of the Marker Menu – MKR key (R&S FSV-K7)

The following table shows all softkeys available in the "Marker" menu in "Analog Demodulation" mode (MKR key). It is possible that your instrument configuration does not provide all softkeys. If a softkey is only available with a special option, model or (measurement) mode, this information is provided in the corresponding softkey description.

Marker 1 / Marker 2 / Marker 3 / ... Marker 16,/ Marker Norm/Delta	65
More Markers	65
Marker to Trace	66
Marker Wizard	66
└ All Marker Off	67
All Marker Off	67
Marker Table	67
Marker Stepsize	67
└ Stepsize Standard	68
└ Stepsize Sweep Points	68
Marker Zoom (span > 0)	68
Link Mkr1 and Delta1	68
Link Time Marker	69
Link AF Spectrum Marker	69

Marker 1 / Marker 2 / Marker 3 / ... Marker 16,/ Marker Norm/Delta

The "Marker X" softkey activates the corresponding marker and opens an edit dialog box to enter a value for the marker to be set to. Pressing the softkey again deactivates the selected marker.

If a marker value is changed using the rotary knob, the step size is defined via the [Stepsize Standard](#) or [Stepsize Sweep Points](#) softkeys.

Marker 1 is always the reference marker for relative measurements. If activated, markers 2 to 16 are delta markers that refer to marker 1. These markers can be converted into markers with absolute value display using the "Marker Norm/Delta" softkey. If marker 1 is the active marker, pressing the "Marker Norm/Delta" softkey switches on an additional delta marker.

SCPI command:

[CALCulate<n>:MARKer<m>\[:STATE\]](#) on page 102
[CALCulate<n>:MARKer<m>:X](#) on page 103
[CALCulate<n>:MARKer<m>:Y](#) on page 106
[CALCulate<n>:DELTAmarker<m>\[:STATE\]](#) on page 170
[CALCulate<n>:DELTAmarker<m>:X](#) on page 171
[CALCulate<n>:DELTAmarker<m>:X:RELative](#) on page 171
[CALCulate<n>:DELTAmarker<m>:Y](#) on page 172

More Markers

Opens a sub-menu to select one of up to 16 available markers. See "[Marker 1 / Marker 2 / Marker 3 / ... Marker 16,/ Marker Norm/Delta](#)" on page 65.

Marker to Trace

Opens an edit dialog box to enter the number of the trace on which the marker is to be placed.

SCPI command:

[CALCulate<n>:MARKer<m>:TRACe](#) on page 103

Marker Wizard

Opens a configuration dialog for markers. The marker wizard allows you to configure and activate up to 16 different markers in one dialog. The first 8 markers are displayed on one tab, the last 8 markers on a second tab. For each marker, the following settings are available:



"Selected/
State" When you press the "Selected" or "State" field the corresponding marker is activated and the marker row is highlighted.

"Normal/Delta" Defines whether it is a normal marker or delta marker. For delta markers you can define a reference marker.

"Ref. Marker" Reference marker for delta markers. The marker values for the delta marker are indicated relative to the specified reference marker. The reference marker can either be another active marker, or a fixed reference marker ("FXD", see "[Ref Fixed](#)" on page 70).

"Trace" Trace for which the marker is to be set.

SCPI command:

[CALCulate<n>:MARKer<m>\[:STATE\]](#) on page 102

[CALCulate<n>:DELTAmarker<m>\[:STATE\]](#) on page 170

[CALCulate<n>:MARKer<m>:TRACe](#) on page 103

[CALCulate<n>:DELTAmarker<m>:TRACe](#) on page 171

[CALCulate<n>:DELTAmarker<m>:MREF](#) on page 170

All Marker Off ← Marker Wizard

Switches all markers off. It also switches off all functions and displays that are associated with the markers/delta markers.

SCPI command:

[CALCulate<n>:MARKer<m>:AOFF](#) on page 97

All Marker Off

Switches all markers off. It also switches off all functions and displays that are associated with the markers/delta markers.

SCPI command:

[CALCulate<n>:MARKer<m>:AOFF](#) on page 97

Marker Table

Defines how the marker information is displayed.

For more information, see "Displayed Marker Information" in the description of the base unit.

"On" Displays the marker information in a table in a separate area beneath the diagram.

"Off" Displays the marker information within the diagram area.

"Aut" (Default) The marker table is displayed automatically if more than 2 markers are active, and removed if only 1 or 2 markers are active. This helps keep the information in the display clear.

SCPI command:

[DISPLAY:MTABLE](#) on page 107

Marker Stepsize

Opens a submenu to set the step size of all markers and delta markers.

Default value for the marker step size is [Stepsize Sweep Points](#).

Stepsize Standard ← Marker Stepsize

Moves the marker or delta marker from one measurement point to the next, if the marker or delta marker value is changed via the rotary knob ("Marker 1 / Marker 2 / Marker 3 / ... Marker 16,/ Marker Norm/Delta" softkeys, see "[Marker 1 / Marker 2 / Marker 3 / ... Marker 16,/ Marker Norm/Delta](#)" on page 65). If more measured values than measurement points exist, it is not possible to read out all measured values. In this case, use the **Stepsize Sweep Points** softkey.

SCPI command:

CALC:MARK:X:SSIZ STAN (see [CALCulate<n>:MARKer<m>:X:SSIZE](#) on page 105)

Stepsize Sweep Points ← Marker Stepsize

Moves the marker or delta marker from one measured value to the next, if the marker or delta marker value is changed via the rotary knob ("Marker 1 / Marker 2 / Marker 3 / ... Marker 16,/ Marker Norm/Delta" softkeys, see "[Marker 1 / Marker 2 / Marker 3 / ... Marker 16,/ Marker Norm/Delta](#)" on page 65). If more measured values than measurement points exist, every single measured value is accessible and its value is displayed in the marker field.

The number of measured values is defined in the ""Sweep"" menu via the **Sweep Points** softkey.

This functionality is available for all base unit measurements with the exception of statistics ("APD" and "CCDF" softkeys in the "Measurement" menu).

SCPI command:

CALC:MARK:X:SSIZ POIN (see [CALCulate<n>:MARKer<m>:X:SSIZE](#) on page 105)

Marker Zoom (span > 0)

Opens an edit dialog box to enter a display range for the zoom. The area around marker 1 is expanded accordingly and more details of the result can be seen. If no marker is activated, marker 1 is switched on and set on the largest signal.

The following sweep is stopped at the position of the reference marker. The frequency of the signal is counted and the measured frequency becomes the new center frequency. The zoomed display range is then configured and the new settings are used by the R&S FSV for further measurements.

If the display has not yet been switched to the new frequency display range and you press the softkey, the procedure is aborted. If an instrument setting is changed during this operation, the procedure is also aborted.

SCPI command:

[CALCulate<n>:MARKer<m>:FUNCTION:ZOOM](#) on page 94

Link Mkr1 and Delta1

The delta marker 1 is linked to marker 1, so if the x-axis value of the marker 1 is changed, the delta marker 1 will follow on the same x-position. The link is off by default.

You can set the two markers on different traces to measure the difference (e.g. between a max hold trace and a min hold trace or between a measurement and a reference trace).

SCPI command:

[CALCulate<n>:DELTamarker<m>:LINK](#) on page 169

Link Time Marker

Links the markers in all time domain diagrams.

SCPI command:

[CALCulate<n>:MARKer<m>:LINK](#) on page 94

Link AF Spectrum Marker

Links the markers in all AF spectrum displays.

SCPI command:

[CALCulate<n>:MARKer<m>:LINK](#) on page 94

2.2.11 Softkeys of the Marker Function Menu – MKR FUNC Key (R&S FSV-K7)

The following table shows all softkeys available in the "Marker Function" menu.

Select Marker (No).....	69
Phase Noise.....	70
Ref Fixed.....	70
└ Ref. Fixed On/Off.....	70
└ Ref Point Level.....	70
└ Ref Point Frequency (span > 0)/Ref Point Time (zero span).....	70
└ Peak Search.....	70
n dB down.....	71
Marker Peak List.....	71
└ Peak List On/Off.....	72
└ Sort Mode Freq/Lvl.....	72
└ Max Peak Count.....	72
└ Peak Excursion.....	72
└ Left Limit.....	72
└ Right Limit.....	72
└ Threshold.....	73
└ ASCII File Export.....	73
└ Decim Sep.....	73
└ Marker Number.....	73

Select Marker (No)

Opens a submenu to select one of 16 markers and define whether the marker is a normal or a delta marker (see "Marker 1 / Marker 2 / Marker 3 / ... Marker 16,/ Marker Norm/Delta" on page 65). "(No)" indicates the number of the currently active marker.

See "Marker 1 / Marker 2 / Marker 3 / ... Marker 16,/ Marker Norm/Delta" on page 65.

Phase Noise

For AF spectrum displays, the Phase Noise marker is a normal marker with a special display value.

SCPI command:

[CALCulate<n>:MARKer<m>:FUNCTION:PNoise:RESULT](#) on page 92

[CALCulate<n>:MARKer<m>:FUNCTION:PNoise:RESULT](#) on page 92

Ref Fixed

Opens a submenu to set all values of a reference point. Instead of using the current values of the reference marker (marker 1) as reference point for the delta markers, level and frequency or time are set to fixed values and used as reference point.

Ref. Fixed On/Off ← Ref Fixed

Switches the relative measurement to a fixed reference value on or off. The level and frequency or time values of marker 1 immediately become the reference point, but can be altered using the corresponding softkeys ("Ref Point Level" on page 70, "Ref Point Frequency (span > 0)/Ref Point Time (zero span)" on page 70 and "Peak Search" on page 70).

When set to ON, all delta markers which previously referenced marker 1 are automatically set to reference the fixed marker.

The reference marker assignment can be changed using the "Marker Wizard" (see "Marker Wizard" on page 66).

SCPI command:

[CALCulate<n>:DELTAmarker<m>:FUNCTION:FIXed\[:STATE\]](#) on page 168

Ref Point Level ← Ref Fixed

Opens an edit dialog box to enter a reference level value. All relative level values of the delta markers refer to this reference level.

SCPI command:

[CALCulate<n>:DELTAmarker<m>:FUNCTION:FIXed:RPoint:Y](#) on page 167

Ref Point Frequency (span > 0)/Ref Point Time (zero span) ← Ref Fixed

Opens an edit dialog box to enter a frequency reference or time value. All relative frequency or time values of the delta markers refer to this frequency reference. For phase noise measurement, input of reference time is not possible.

SCPI command:

[CALCulate<n>:DELTAmarker<m>:FUNCTION:FIXed:RPoint:X](#) on page 167

Peak Search ← Ref Fixed

Sets the maximum value of the selected trace as the reference point.

SCPI command:

[CALCulate<n>:DELTAmarker<m>:FUNCTION:FIXed:RPoint:MAXimum\[:PEAK\]](#) on page 166

n dB down

Opens an edit dialog box to enter a value to define the level spacing of the two temporary markers to the right and left of marker 1 (default setting: 3 dB). Activates the temporary markers T1 and T2. The values of the temporary markers (T1, T2) and the entered value (n dB) are displayed in the marker field.

If a positive value is entered, the markers T1 and T2 are placed below the active reference marker. If a negative value (e.g. for notch filter measurements) is entered, the markers T1 and T2 are placed above the active reference marker. Marker T1 is placed to the left and marker T2 to the right of the reference marker.

In the marker table, the following results are displayed:

Span setting	Parameter name	Description
span > 0	Bw	frequency spacing of the two temporary markers
	Q factor	quality of the displayed bandwidth value (Bw)
span = 0	PWid	pulse width between the two temporary markers

If it is not possible to form the frequency spacing for the n dB value (e.g. because of noise display), dashes instead of a measured value are displayed.

SCPI command:

CALC:MARK1:FUNC:NDBD:STAT ON, see [CALCulate<n>:MARKer<m>:FUNCTION:NDBDown:STATE](#) on page 101

CALC:MARK1:FUNC:NDBD 3dB, see [CALCulate<n>:MARKer<m>:FUNCTION:NDBDown](#) on page 99

CALC:MARK1:FUNC:NDBD:RES?, see [CALCulate<n>:MARKer<m>:FUNCTION:NDBDown:RESult](#) on page 100

CALC:MARK:FUNC:NDBD:QFAC?, see [CALCulate<n>:MARKer<m>:FUNCTION:NDBDown:QFACTOR](#) on page 100

CALC:MARK1:FUNC:NDBD:FREQ? (span > 0), see [CALCulate<n>:MARKer<m>:FUNCTION:NDBDown:FREQuency](#) on page 99

CALC:MARK1:FUNC:NDBD:TIME? (span = 0), see [CALCulate<n>:MARKer<m>:FUNCTION:NDBDown:TIME](#) on page 101

Marker Peak List

Opens the "Peak List" submenu to define criteria for the sort order and the contents of the peak list. For each listed peak the frequency ("Stimulus") and level ("Response") values are given. In addition, the peaks are indicated in the trace display. A maximum of 50 entries are listed.

SCPI command:

[CALCulate<n>:MARKer<m>:FUNCTION:FPEaks:COUNT](#) on page 97

[CALCulate<n>:MARKer<m>:FUNCTION:FPEaks:X](#) on page 98

[CALCulate<n>:MARKer<m>:FUNCTION:FPEaks:Y](#) on page 98

Peak List On/Off ← Marker Peak List

Activates/deactivates the marker peak list. If activated, the peak list is displayed and the peaks are indicated in the trace display.

SCPI command:

[CALCulate<n>:MARKer<m>:FUNCTION:FPEaks:STAT](#) on page 93

Sort Mode Freq/Lvl ← Marker Peak List

Defines the criteria for sorting:

FREQ	sorting in ascending order of frequency values (span > 0) or time values (span = 0)
"Lvl"	sorting in ascending order of the level

SCPI command:

[CALCulate<n>:MARKer<m>:FUNCTION:FPEaks:SORT](#) on page 97

Max Peak Count ← Marker Peak List

Defines the maximum number of peaks to be determined and displayed.

SCPI command:

[CALCulate<n>:MARKer<m>:FUNCTION:FPEaks:LIST:SIZE](#) on page 93

Peak Excursion ← Marker Peak List

Opens an edit dialog box for level measurements to enter the minimum level value by which a signal must rise or fall so that it will be identified as a maximum or a minimum by the search functions. Entries from 0 dB to 80 dB are allowed; the resolution is 0.1 dB. The default setting for the peak excursion is 6 dB.

For details see also "Specifying the suitable peak excursion" and "Effect of different peak excursion settings" in the description of the base unit.

SCPI command:

[CALCulate<n>:MARKer<m>:PEXCursion](#) on page 102

Left Limit ← Marker Peak List

Opens an edit dialog box to enter a value for the lower limit (left vertical line: S1 for span > 0; T1 for zero span). The search is performed between the lines of the left and right limit (see also [Right Limit](#) softkey).

SCPI command:

[CALCulate<n>:MARKer<m>:X:SLIMits:LEFT](#) on page 104

Right Limit ← Marker Peak List

Opens an edit dialog box to enter a value for the upper limit (left vertical line: S2 for span > 0; T2 for zero span). The search is performed between the lines of the left and right limit (see also [Left Limit](#) softkey). If no value is set, the upper limit corresponds to the stop frequency.

SCPI command:

[CALCulate<n>:MARKer<m>:X:SLIMits:RIGHT](#) on page 104

Threshold ← Marker Peak List

Opens an edit dialog box to define the threshold line. The threshold line represents the lower level limit for a "Peak" search and the upper level limit for a "Min" search.

SCPI command:

[CALCulate<n>:THRESHold:STATe](#) on page 95

[CALCulate<n>:THRESHold](#) on page 95

ASCII File Export ← Marker Peak List

Opens the "ASCII File Export Name" dialog box and saves the active peak list in ASCII format to the specified file and directory.

The file consists of the header containing important scaling parameters and a data section containing the marker data. For details on an ASCII file see [chapter 2.1.10, "ASCII File Export Format"](#), on page 23.

This format can be processed by spreadsheet calculation programs, e.g. MS-Excel. It is necessary to define ';' as a separator for the data import. Different language versions of evaluation programs may require a different handling of the decimal point. It is therefore possible to select between separators '.' (decimal point) and ',' (comma) using the "Decim Sep" softkey (see "[Decim Sep](#)" on page 60).

SCPI command:

[FORMAT:DDEXPort:DSEParator](#) on page 181

[MMEMory:STORe<n>:LIST](#) on page 179

Decim Sep ← Marker Peak List

Selects the decimal separator with floating-point numerals for the ASCII Trace export to support evaluation programs (e.g. MS-Excel) in different languages. The values '.' (decimal point) and ',' (comma) can be set.

SCPI command:

[FORMAT:DDEXPort:DSEParator](#) on page 181

Marker Number ← Marker Peak List

If enabled, the determined peaks are indicated by their corresponding marker number in the trace display.

SCPI command:

[CALCulate<n>:MARKer<m>:FUNCTION:FPEaks:ANN:LAB:STAT](#) on page 92

2.2.12 Softkeys of the Input/Output Menu

The following table shows all softkeys available in the "Input/Output" menu. It is possible that your instrument configuration does not provide all softkeys. If a softkey is only available with a special option, model or (measurement) mode, this information is provided in the corresponding softkey description.

Input (AC/DC)	74
Noise Source	74
Video Output	74
Tracking Generator	74
Power Sensor	75

Trigger Out.....	75
External Mixer.....	75
Probe Config.....	75
Signal Source.....	75
└ Input Path.....	75
└ Connected Device.....	76
└ Input Sample Rate.....	76
└ Full Scale Level.....	76
└ Level Unit.....	76
└ Adjust Reference Level to Full Scale Level.....	76
EXIQ.....	76
└ TX Settings.....	77
└ RX Settings.....	77
└ Send To.....	77
└ Firmware Update.....	77
└ R&S Support.....	77
└ DigiConf.....	77
Digital IQ Info.....	78

Input (AC/DC)

Toggles the RF input of the R&S FSV between AC and DC coupling.

This function is not available for input from the R&S Digital I/Q Interface (option R&S FSV-B17).

SCPI command:

[INPut:COUPLing](#) on page 174

Noise Source

Switches the supply voltage for an external noise source on or off. For details on connectors refer to the R&S FSV Quick Start Guide, "Front and Rear Panel" chapter.

SCPI command:

[DIAgnostic<n>:SERViCe:NSOurce](#) on page 181

Video Output

Sends a video output signal according to the measured level to the connector on the rear panel of the R&S FSV.

Note: Video output does not return valid values in IQ or FFT mode.

SCPI command:

[OUTP:IF VID](#) , see [OUTPut:IF\[:SOURce\]](#) on page 179

Tracking Generator

This softkey is only available if the R&S FSV option Tracking Generator (R&S FSV-B9) or External Tracking Generator (R&S FSV-B10) or both are installed. It is not available in I/Q Analyzer mode.

For details see the base unit description.

Power Sensor

For precise power measurement a power sensor can be connected to the instrument via the front panel (USB connector) or the rear panel (power sensor, option R&S FSV-B5). The Power Sensor Support firmware option (R&S FSV-K9) provides the power measurement functions for this test setup.

This softkey is only available if the R&S FSV option Power Sensor (R&S FSV-K9) is installed.

For details see the chapter "Instrument Functions Power Sensor (K9)" in the base unit description.

This softkey is available for RF measurements.

Trigger Out

Sets the Trigger Out port in the Additional Interfaces (option R&S FSV-B5 only) to low or high. Thus, you can trigger an additional device via the external trigger port, for example.

SCPI command:

[OUTPut:TRIGger](#) on page 180

External Mixer

Opens the submenu for the external mixer.

For details see the base unit description.

Probe Config

With firmware R&S FSV 1.61SP2 or newer, active probes are supported (via an adapter). This softkey opens an edit dialog box to activate and configure a connected probe which is to provide an input signal. It is only available if a probe is connected to the instrument's RF INPUT and USB connectors.

For details see the base unit Operating Manual.

SCPI command:

[PROBe\[:STATe\]](#) on page 114

[PROBe:SETuP:MODE](#) on page 115

Signal Source

Opens a dialog box to select the signal source. For "Digital Baseband (I/Q)", the source can also be configured here.

Input Path ← Signal Source

Defines whether the "RF Radio Frequency" or the "Digital IQ" input path is used for measurements. "Digital IQ" is only available if option R&S FSV-B17 (R&S Digital I/Q Interface) is installed.

Note: Note that the input path defines the characteristics of the signal, which differ significantly between the RF input and digital input.

SCPI command:

[INPut:SELect](#) on page 178

Connected Device ← Signal Source

Displays the name of the device connected to the optional R&S Digital I/Q Interface (R&S FSV-B17) to provide Digital IQ input. The device name cannot be changed here.

The device name is unknown.

SCPI command:

[INPut:DIQ:CDEVice](#) on page 174

Input Sample Rate ← Signal Source

Defines the sample rate of the digital I/Q signal source. This sample rate must correspond with the sample rate provided by the connected device, e.g. a generator.

SCPI command:

[INPut:DIQ:SRATE](#) on page 176

Full Scale Level ← Signal Source

The "Full Scale Level" defines the level that should correspond to an I/Q sample with the magnitude "1".

The level can be defined either in dBm or Volt.

SCPI command:

[INPut:DIQ:RANGE\[:UPPer\]](#) on page 176

Level Unit ← Signal Source

Defines the unit used for the full scale level.

SCPI command:

[INPut:DIQ:RANGE\[:UPPer\]:UNIT](#) on page 176

Adjust Reference Level to Full Scale Level ← Signal Source

If enabled, the reference level is adjusted to the full scale level automatically if any change occurs.

SCPI command:

[INPut:DIQ:RANGE:COUPLing](#) on page 175

EXIQ

Opens a configuration dialog box for an optionally connected R&S EX-IQ-BOX and a submenu to access the main settings quickly.

If the optional R&S DigiConf software is installed, the submenu consists only of one key to access the software. **Note that R&S DigiConf requires a USB connection (not LAN!) from the R&S FSV to the R&S EX-IQ-BOX in addition to the R&S Digital I/Q Interface connection. R&S DigiConf version 2.10 or higher is required.**

For typical applications of the R&S EX-IQ-BOX see also the description of the R&S Digital I/Q Interface (R&S FSV-B17) in the base unit manual.

For details on configuration see the "R&S®Ex I/Q Box - External Signal Interface Module Manual".

For details on installation and operation of the R&S DigiConf software, see the "R&S®EX-IQ-BOX Digital Interface Module R&S®DigiConf Software Operating Manual".

TX Settings ← EXIQ

Opens the "EX-IQ-BOX Settings" dialog box to configure the R&S FSV for digital output to a connected device ("Transmitter" Type).

RX Settings ← EXIQ

Opens the "EX-IQ-BOX Settings" dialog box to configure the R&S FSV for digital input from a connected device ("Receiver" Type).

Send To ← EXIQ

The configuration settings defined in the dialog box are transferred to the R&S EX-IQ-BOX.

Firmware Update ← EXIQ

If a firmware update for the R&S EX-IQ-BOX is delivered with the R&S FSV firmware, this function is available. In this case, when you select the softkey, the firmware update is performed.

R&S Support ← EXIQ

Stores useful information for troubleshooting in case of errors.

This data is stored in the `C:\R_S\Instr\user\Support` directory on the instrument.

If you contact the Rohde&Schwarz support to get help for a certain problem, send these files to the support in order to identify and solve the problem faster.

DigIConf ← EXIQ

Starts the optional R&S DigIConf application. This softkey is only available if the optional software is installed.

To return to the R&S FSV application, press any key on the front panel. The application is displayed with the "EXIQ" menu, regardless of which key was pressed.

For details on the R&S DigIConf application, see the "R&S®EX-IQ-BOX Digital Interface Module R&S®DigIConf Software Operating Manual".

Note: If you close the R&S DigIConf window using the "Close" icon, the window is minimized, not closed.

If you select the "File > Exit" menu item in the R&S DigiConf window, the application is closed. Note that in this case the settings are lost and the EX-IQ-BOX functionality is no longer available until you restart the application using the "DigiConf" softkey in the R&S FSV once again.

SCPI command:

Remote commands for the R&S DigiConf software always begin with SOURce:EBOX. Such commands are passed on from the R&S FSV to the R&S DigiConf automatically which then configures the R&S EX-IQ-BOX via the USB connection.

All remote commands available for configuration via the R&S DigiConf software are described in the "R&S®EX-IQ-BOX Digital Interface Module R&S®DigiConf Software Operating Manual".

Example 1:

```
SOURce:EBOX:*RST  
SOURce:EBOX:*IDN?
```

Result:

"Rohde&Schwarz,DigiConf,02.05.436 Build 47"

Example 2:


```
SOURce:EBOX:USER:CLOCK:REFerence:FREQuency 5MHZ
```

Defines the frequency value of the reference clock.

Digital IQ Info

Displays a dialog box with information on the digital I/Q input and output connection via the optional R&S Digital I/Q Interface (R&S FSV-B17), if available. The information includes:

- Device identification
- Used port
- (Maximum) digital input/output sample rates and maximum digital input/output transfer rates
- Status of the connection protocol
- Status of the PRBS descewing test

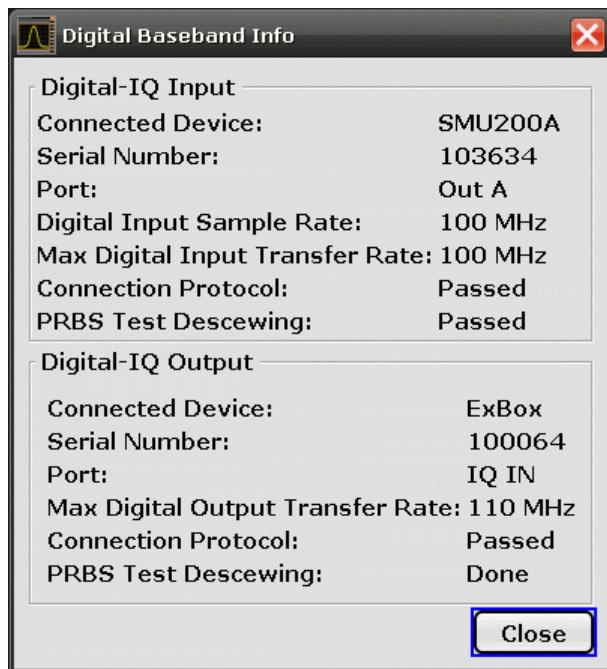

For details see "Interface Status Information" in "Instrument Functions - R&S Digital I/Q Interface (Option R&S FSV-B17)" in the description of the base unit.

SCPI command:

`INPut:DIQ:CDEvice` on page 174

2.3 Remote Commands of the Analog Demodulation (R&S FSV-K7)

In this section all remote control commands specific to the Analog Demodulation option are described in detail. The abbreviation ADEMOP stands for the Analog Demodulation operating mode. For details on conventions used in this chapter refer to [chapter 2.3.1, "Notation"](#), on page 81.

For further information on analyzer or basic settings commands, refer to the corresponding subsystem in the base unit description.

In particular, the following subsystems are identical to the base unit; refer to the base unit description:

- `CALCulate:DELTamarker`
- `CALCulate:MARKer` (except for the K7-specific commands described in [chapter 2.3.2, "CALCulate Subsystem \(Analog Demodulation, R&S FSV-K7\)"](#), on page 83)
- `INITiate` subsystem
- `INPut` subsystem
- `OUTput` subsystem

Subsystems of the Analog Demodulation (R&S FSV-K7)

2.3.1	Notation.....	81
2.3.2	CALCulate Subsystem (Analog Demodulation, R&S FSV-K7).....	83
2.3.2.1	CALCulate:MARKer:FUNCTION:ADEMod Subsystem (Analog Demodulation, R&S FSV-K7).....	83
2.3.2.2	Other CALCulate commands.....	89
2.3.2.3	Other Referenced CALCulate Commands.....	97
2.3.3	DISPLAY Subsystem (Analog Demodulation, R&S FSV-K7).....	107
2.3.4	INSTrument Subsystem (Analog Demodulation, R&S FSV-K7).....	114
2.3.5	PROBe subsystem.....	114
2.3.6	SENSe Subsystem (Analog Demodulation, R&S FSV-K7).....	116
2.3.6.1	Trace Mode Result Types.....	116
2.3.6.2	Formats for Returned Values: ASCII Format and Binary Format.....	117
2.3.6.3	SENSe:ADEMod Subsystem (Analog Demodulation, R&S FSV-K7).....	117
2.3.6.4	SENSe:ADJust Subsystem.....	142
2.3.6.5	SENSe:BANDwidth Subsystem (Analog Demodulation, R&S FSV-K7).....	144
2.3.6.6	SENSe:FILTter Subsystem (Analog Demodulation, R&S FSV-K7).....	145
2.3.6.7	SENSe:FREQuency Subsystem (Analog Demodulation, R&S FSV-K7).....	150
2.3.6.8	SENSe:SWEep Subsystem (Analog Demodulation, R&S FSV-K7).....	151
2.3.6.9	Other commands in the SENSe subsystem.....	154
2.3.7	TRACe Subsystem (Analog Demodulation, R&S FSV-K7).....	156
2.3.7.1	Commands of the TRACe subsystem.....	156
2.3.7.2	Formats for Returned Values: ASCII Format and Binary Format.....	157
2.3.8	TRIGger Subsystem (Analog Demodulation, R&S FSV-K7).....	158
2.3.9	UNIT Subsystem (Analog Demodulation, R&S FSV-K7).....	165
2.3.10	Other Commands Referenced in this Manual.....	166
2.3.10.1	CALCulate:DELTamarker Subsystem (Analog Demodulation, R&S FSV-K7).....	166
2.3.10.2	INPut subsystem.....	173
2.3.10.3	MMEMemory subsystem.....	179
2.3.10.4	OUTPut subsystem.....	180
2.3.10.5	Other Commands.....	180

2.3.1 Notation

In the following sections, all commands implemented in the instrument are first listed and then described in detail, arranged according to the command subsystems. The notation is adapted to the SCPI standard. The SCPI conformity information is included in the individual description of the commands.

Individual Description

The individual description contains the complete notation of the command. An example for each command, the *RST value and the SCPI information are included as well.

The options and operating modes for which a command can be used are indicated by the following abbreviations:

Abbreviation	Description
A	spectrum analysis
A-F	spectrum analysis – span > 0 only (frequency mode)
A-T	spectrum analysis – zero span only (time mode)
ADEMOK	analog demodulation (option R&S FSV-K7)
BT	Bluetooth (option R&S FSV-K8)
CDMA	CDMA 2000 base station measurements (option R&S FSV-K82)
EVDO	1xEV-DO base station analysis (option R&S FSV-K84)
GSM	GSM/Edge measurements (option R&S FSV-K10)
IQ	IQ Analyzer mode
OFDM	WiMAX IEEE 802.16 OFDM measurements (option R&S FSV-K93)
OFDMA/WiBro	WiMAX IEEE 802.16e OFDMA/WiBro measurements (option R&S FSV-K93)
NF	Noise Figure measurements (R&S FSV-K30)
PHN	Phase Noise measurements (R&S FSV-K40)
PSM	Power Sensor measurements (option R&S FSV-K9)
SFM	Stereo FM measurements (option R&S FSV-K7S)
SPECM	Spectrogram mode (option R&S FSV-K14)
TDS	TD-SCDMA base station / UE measurements (option R&S FSV-K76/K77)
VSA	Vector Signal Analysis (option R&S FSV-K70)
WCDMA	3GPP Base Station measurements (option R&S FSV-K72), 3GPP UE measurements (option R&S FSV-K73)
WLAN	WLAN TX measurements (option R&S FSV-K91)



The spectrum analysis mode is implemented in the basic unit. For the other modes, the corresponding options are required.

Upper/Lower Case Notation

Upper/lower case letters are used to mark the long or short form of the key words of a command in the description. The instrument itself does not distinguish between upper and lower case letters.

Special Characters

	A selection of key words with an identical effect exists for several commands. These keywords are indicated in the same line; they are separated by a vertical stroke. Only one of these keywords needs to be included in the header of the command. The effect of the command is independent of which of the keywords is used.
--	---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

Example:

```
SENSe:FREQuency:CW|:FIXed
```

The two following commands with identical meaning can be created. They set the frequency of the fixed frequency signal to 1 kHz:

```
SENSe:FREQuency:CW 1E3
```

```
SENSe:FREQuency:FIXed 1E3
```

A vertical stroke in parameter indications marks alternative possibilities in the sense of "or". The effect of the command differs, depending on which parameter is used.

Example: Selection of the parameters for the command

```
[SENSe<1...4>:] AVERage<1...4>:TYPE VIdeo | LINear
```

[]	Key words in square brackets can be omitted when composing the header. The full command length must be accepted by the instrument for reasons of compatibility with the SCPI standards. Parameters in square brackets can be incorporated optionally in the command or omitted as well.
----	--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

{}	Parameters in braces can be incorporated optionally in the command, either not at all, once or several times.
----	---------------------------------------------------------------------------------------------------------------

Description of Parameters

Due to the standardization, the parameter section of SCPI commands consists always of the same syntactical elements. SCPI has therefore specified a series of definitions, which are used in the tables of commands. In the tables, these established definitions are indicated in angled brackets (<...>) and is briefly explained in the following.

For details see the chapter "SCPI Command Structure" in the base unit description.

<Boolean>

This keyword refers to parameters which can adopt two states, "on" and "off". The "off" state may either be indicated by the keyword OFF or by the numeric value 0, the "on" state is indicated by ON or any numeric value other than zero. Parameter queries are always returned the numeric value 0 or 1.

<numeric_value> <num>

These keywords mark parameters which may be entered as numeric values or be set using specific keywords (character data). The following keywords given below are permitted:

- MAXimum: This keyword sets the parameter to the largest possible value.
- MINimum: This keyword sets the parameter to the smallest possible value.
- DEFault: This keyword is used to reset the parameter to its default value.
- UP: This keyword increments the parameter value.
- DOWN: This keyword decrements the parameter value.

The numeric values associated to MAXimum/MINimum/DEFault can be queried by adding the corresponding keywords to the command. They must be entered following the quotation mark.

Example:

```
SENSe:FREQuency:CENTer? MAXimum
```

Returns the maximum possible numeric value of the center frequency as result.

<arbitrary block program data>

This keyword is provided for commands the parameters of which consist of a binary data block.

2.3.2 CALCulate Subsystem (Analog Demodulation, R&S FSV-K7)

The CALCulate subsystem contains commands for converting instrument data, transforming and carrying out corrections. These functions are carried out subsequent to data acquisition, i.e. following the SENSe subsystem.

2.3.2.1	CALCulate:MARKer:FUNCTION:ADEMod Subsystem (Analog Demodulation, R&S FSV-K7).....	83
2.3.2.2	Other CALCulate commands.....	89
2.3.2.3	Other Referenced CALCulate Commands.....	97

2.3.2.1 CALCulate:MARKer:FUNCTION:ADEMod Subsystem (Analog Demodulation, R&S FSV-K7)

The CALCulate:MARKer:FUNCTION:ADEMod subsystem contains the marker functions for the Analog Demodulation mode.

Commands of the CALCulate:MARKer:FUNCTION:ADEMod Subsystem

CALCulate<n>:MARKer:FUNCTION:ADEMod:AFREquency[:RESult<t>].....	84
CALCulate<n>:MARKer:FUNCTION:ADEMod:AM[:RESult<t>].....	84
CALCulate<n>:MARKer:FUNCTION:ADEMod:CARRier[:RESult<t>].....	85
CALCulate<n>:MARKer:FUNCTION:ADEMod:FERRor[:RESult<t>].....	86

CALCulate<n>:MARKer:FUNCTION:ADEMod:FM[:RESUlt<t>].....	86
CALCulate<n>:MARKer:FUNCTION:ADEMod:PM[:RESUlt<t>].....	87
CALCulate<n>:MARKer:FUNCTION:ADEMod:SINad:RESUlt<t>.....	88
CALCulate<n>:MARKer:FUNCTION:ADEMod:THD:RESUlt<t>.....	88

CALCulate<n>:MARKer:FUNCTION:ADEMod:AFREquency[:RESUlt<t>]?

This command queries the audio frequency with analog demodulation in the specified window.

If several demodulation modes are activated simultaneously (e.g. with the [\[SENSe:\] ADEMod:FM\[:TDOMain\] \[:TYPE\]](#) command, the audio frequency of the display mode selected with [CALCulate<n>:FEED](#) on page 89 is returned.

Suffix:

<n>	1 window
<t>	1...6 irrelevant

Example:

ADEM ON, see [\[SENSe:\] ADEMod\[:STATe\]](#) on page 118
 Switches on analog demodulator
 CALC:FEED 'XTIM:AM:TDOM', see [CALCulate<n>:FEED](#) on page 89
 Switches on AM result display.
 DISP:TRAC ON, see [DISPlay\[:WINDow<n>\]:TRACe<t>\[:STATe\]](#) on page 110
 Switches the trace on.
 CALC:MARK:FUNC:ADEM:AFR?
 Queries the audio frequency.

Usage:

Query only

Mode:

ADEM

CALCulate<n>:MARKer:FUNCTION:ADEMod:AM[:RESUlt<t>]? <Result>
CALCulate<n>:MARKer:FUNCTION:ADEMod:AM[:RESUlt<t>]? <MeasType>

This command queries the results of the AM modulation measurement.

Suffix:

<n>	1...4 irrelevant
<t>	1...6 trace 1, 2, 3, 4, 5 or 6

Parameters:

<Result> The result of the selected measurement type is returned.

Query parameters:

<MeasType> PPEak | MPEak | MIDDLE | RMS

PPEak

Measurement with detector Pluspeak (+PK)

MPEak

Measurement with detector MinusPeak (-PK)

MIDDLE

Averaging \pm PK/2

RMS

RMS measurement

Example:

ADEM ON (see [\[SENSe:\]ADEMod\[:STATe\]](#) on page 118)

Switches on the analog demodulator.

CALC:FEED 'XTIM:AM:TDOM', see [CALCulate<n>:FEED](#) on page 89

Switches on the AM result display.

DISP:TRAC ON, see [DISPlay\[:WINDOW<n>\]:TRACe<t>\[:STATe\]](#) on page 110

Switches on the trace.

CALC:MARK:FUNC:ADEM:AM? PPE

Queries the peak value.

Usage:

Query only

Mode:

ADEM

CALCulate<n>:MARKer:FUNCTION:ADEMod:CARRier[:RESULT<t>]?

This command queries the carrier power.

With RF Power result display, the carrier power is determined from trace 1 to 6 indicated in the suffix. With all other result displays, the carrier power is determined from the current trace data (CLR/ WRITE trace).

Suffix:

<n> 1...4
irrelevant

<t> 1...6
irrelevant

Example:

ADEM ON (see [\[SENSe:\]ADEMod\[:STATe\]](#) on page 118)

Switches on analog demodulator

CALC:FEED 'XTIM:RFP', see [CALCulate<n>:FEED](#) on page 89

Switches on RF power result display

CALC:MARK:FUNC:ADEM:CARR?

Queries the carrier power

Usage:

Query only

Mode:

ADEM

CALCulate<n>:MARKer:FUNCTION:ADEMod:FERRor[:RESUlt<t>]?

This command queries the frequency error with FM and PM demodulation. The frequency error is determined from the current measurement data (CLR/WRITE trace).

The offset thus determined differs from that calculated in the [\[SENSe:\]ADEMod:FM:OFFSet](#) on page 129 command since, for determination of the frequency deviation, the modulation is removed by means of low pass filtering, producing results that are different from those obtained by averaging with the SENSe command.

Suffix:

<n>	1...4 irrelevant
<t>	1...6 irrelevant

Example:

ADEM ON (see [\[SENSe:\]ADEMod\[:STATe\]](#) on page 118)
Switches on analog demodulator
CALC:FEED 'XTIM:FM:TDOM', see [CALCulate<n>:FEED](#) on page 89
Switches on FM result display
CALC:MARK:FUNC:ADEM:FERR?
Queries the frequency error of trace 1

Usage: Query only

Mode: ADEM

CALCulate<n>:MARKer:FUNCTION:ADEMod:FM[:RESUlt<t>]? <Result>**CALCulate<n>:MARKer:FUNCTION:ADEMod:FM[:RESUlt<t>]? <MeasType>**

This command queries the results of FM modulation measurement.

Suffix:

<n>	1...4 irrelevant
<t>	1...6 trace 1, 2, 3, 4, 5 or 6

Parameters:

<Result> The result of the selected measurement type is returned.

Query parameters:

<MeasType> PPEak | MPEak | MIDDLE | RMS

PPEak

Measurement with detector Pluspeak (+PK)

MPEak

Measurement with detector MinusPeak (-PK)

MIDDLE

Averaging \pm PK/2

RMS

RMS measurement

Example:

ADEM ON (see [\[SENSe:\]ADEMod\[:STATE\]](#) on page 118)

Switches on the analog demodulator.

CALC:FEED 'XTIM:FM:TDOM', see [CALCulate<n>:FEED](#) on page 89

Switches on the FM result display.

CALC:MARK:FUNC:ADEM:FM? PPE

Queries the peak value.

Usage: Query only

Mode: ADEM

CALCulate<n>:MARKer:FUNCTION:ADEM:PM[:RESUlt<t>]? <Result>

CALCulate<n>:MARKer:FUNCTION:ADEM:PM[:RESUlt<t>]? <MeasType>

This command queries the results of PM modulation measurement of analog demodulation.

Suffix:

<t> 1...6
trace 1, 2, 3, 4, 5 or 6

<n> 1...4
irrelevant

Parameters:

<Result> The result of the selected measurement type is returned.

Query parameters:

<MeasType> PPEak | MPEak | MIDDLE | RMS

PPEak

Measurement with detector Pluspeak (+PK)

MPEak

Measurement with detector MinusPeak (-PK)

MIDDLE

Averaging \pm PK/2

RMS

RMS measurement

Remote Commands of the Analog Demodulation (R&S FSV-K7)

Example:	ADEM ON (see [SENSe:]ADEMod[:STATe] on page 118) Switches on the analog demodulator. CALC:FEED 'XTIM:FM:TDOM', see CALCulate<n>:FEED on page 89 Switches on the FM result display. CALC:MARK:FUNC:ADEM:PM? PPE Queries the peak value.
Usage:	Query only
Mode:	ADEM

CALCulate<n>:MARKer:FUNCTION:ADEMod:SINAd:RESUlt<t>?

This command queries the result of the SINAD measurement in the specified window.

Suffix:	
<n>	1...4 window
<t>	1...6 trace 1, 2, 3, 4, 5 or 6
Example:	ADEM ON (see [SENSe:]ADEMod[:STATe] on page 118) Switches on analog demodulator CALC:FEED 'XTIM:FM:AFSP', see CALCulate<n>:FEED on page 89 Switches on AF spectrum of FM CALC:MARK:FUNC:ADEM:SIN:RES? Queries SINAD value
Usage:	Query only
Mode:	ADEM

CALCulate<n>:MARKer:FUNCTION:ADEMod:THD:RESUlt<t>?

This command queries the result of the THD measurement in the specified window.

Suffix:	
<n>	1...4 window
<t>	1...6 trace 1, 2, 3, 4, 5 or 6

Example:	ADEM ON (see [SENSe:]ADEMod[:STATe] on page 118) Switches on analog demodulator
	CALC:FEED 'XTIM:FM:AFSP', see CALCulate<n>:FEED on page 89 Switches on AF spectrum of FM
	DISP:TRAC ON, see DISPlay[:WINDOW<n>]:TRACe<t>[: STATe] on page 110 Switches on the trace
	CALC:MARK:FUNC:ADEM:THD:RES? Queries THD result
Usage:	Query only
Mode:	ADEM

2.3.2.2 Other CALCulate commands

CALCulate<n>:FEED <Evaluation>

This command selects the evaluation method of the measured data that is to be displayed in the specified window.

The suffix <1...6> indicates which of the traces is evaluated in the result summary. Note that all result summaries are identical, as the results of all evaluations are included in the summary.

Suffix:

<n>	1...4
	window

Parameters:

<Evaluation>

XTIM:AM:RELative[:TDOMain] |
XTIM:AM:RELative:AFSPectrum<1...6> |
XTIM:AM[:ABSolute][:TDOMain] | XTIM:RFPower[:TDOMain] |
XTIM:FM[:TDOMain] | XTIM:FM:AFSPectrum<1...6> |
XTIM:PM[:TDOMain] | XTIM:PM:AFSPectrum<1...6> |
XTIM:AMSummary<1...6>[:ABSolute] |
XTIM:AMSummary<1...6>:RELative |
XTIM:FMSummary<1...6> | XTIM:PMSummary<1...6> |
XTIM:SPECtrum | XTIM:SUMMARY<1...6> |
XTIM:RFPower[:TDOMain] | XTIM:SPECtrum |
XTIM:SUMMARY<1...6> | XFREQUENCY:SFM:LEFT |
XFREQUENCY:SFM:RIGHT | XFREQUENCY:SFM:MPX |
XFREQUENCY:SFM:MONO | XFREQUENCY:SFM:STEReo |
XFREQUENCY:SFM:RDS | XFREQUENCY:SFM:PIlot |
XTIME:SFM:LEFT | XTIME:SFM:RIGHT | XTIME:SFM:MPX |
XTIME:SFM:MONO | XTIME:SFM:STEReo | XTIME:SFM:RDS |
XTIME:SFM:PIlot

XTIM:AM:RELative[:TDOMain]

Demodulated AM signal in time domain

XTIM:AM:RELative:AFSPectrum<1...6>

AF spectrum of the demodulated AM signal

XTIM:AM[:ABSolute][:TDOMain]

RF signal in time domain (RF power)

Same as 'XTIM:RFPower'

XTIM:RFPower[:TDOMain]

RF power of the signal (RF signal in time domain)

XTIM:FM[:TDOMain]

Demodulated FM signal in time domain

XTIM:FM:AFSPectrum<1...6>

AF spectrum of the demodulated FM signal

XTIM:PM[:TDOMain]

Demodulated PM signal in time domain

XTIM:PM:AFSPectrum<1...6>

AF spectrum of the demodulated PM signal

XTIM:AMSummary<1...6>[:ABSolute]

Result summary for RF signal

XTIM:AMSummary<1...6>:RELative

Result summary for demodulated AM signal

XTIM:FMSummary<1...6>

Result summary for demodulated FM signal

XTIM:PMSummary<1...6>

Result summary for demodulated PM signal

XTIM:SPECtrum

Remote Commands of the Analog Demodulation (R&S FSV-K7)

RF spectrum of the signal determined from the measured data via FFT

XTIM:SUMMAny<1...6>

Summary of all evaluation lists

XFReQuency:SFM:LEFT

Left channel spectrum of FM stereo signal

XFReQuency:SFM:RIGHT

Right channel spectrum of FM stereo signal

XFReQuency:SFM:MPX

MPX channel spectrum of FM stereo signal

XFReQuency:SFM:MONO

Mono channel spectrum of FM stereo signal

XFReQuency:SFM:STEReo

Stereo channel spectrum of FM stereo signal

XFReQuency:SFM:RDS

RDS channel spectrum of FM stereo signal

XFReQuency:SFM:PILot

Pilot channel spectrum of FM stereo signal

XTIMe:SFM:LEFT

Left channel of FM stereo signal in time domain

XTIMe:SFM:RIGHT

Right channel of FM stereo signal in time domain

XTIMe:SFM:MPX

MPX channel of FM stereo signal in time domain

XTIMe:SFM:MONO

Mono channel of FM stereo signal in time domain

XTIMe:SFM:STEReo

Stereo channel of FM stereo signal in time domain

XTIMe:SFM:RDS

RDS channel of FM stereo signal in time domain

XTIMe:SFM:PILot

Pilot channel of FM stereo signal in time domain

Example:

INST:SEL ADEM

(see [INSTRument \[:SElect\]](#) on page 114)

Activates analog demodulator.

CALC:FEED 'XTIM:FM'

Selects the display of the FM signal.

Usage:

SCPI confirmed

Mode:

ADEM, SFM

CALCulate<n>:FORMAT <Limitation>

This command activates the limitation to $\pm 180^\circ$.

Suffix:

<n> 1...4
 irrelevant

Parameters:

<Limitation> PHASe | UPHase
PHASe
 Limitation to $\pm 180^\circ$
UPHase
 Unwrapped
 *RST: UPHase

Example:

CALC:FORM PHAS
 Activates the limitation to $\pm 180^\circ$.

Usage:

SCPI confirmed

Mode:

ADEM0D

CALCulate<n>:MARKer<m>:FUNCTION:PNOise:RESult?

This command queries the result of the phase noise measurement at the specified marker in the specified window.

A complete sweep with synchronization to the sweep end must be performed between switching on the function and querying the measured value in order to obtain a correct query result. This is only possible in single sweep mode.

Suffix:

<n> 1...4
 window
 <m> 1...16
 marker

Example:

INIT:CONT OFF
 Switches to single sweep mode.
 CALC:MARK2 ON
 Switches on marker 2.
 CALC:MARK2:FUNC:PNO ON
 Switches on the phase noise marker 2.
 INIT;*WAI
 Starts a sweep and waits for the end.
 CALC:MARK2:PNO:RES?
 Outputs the phase noise result of marker 2.

Usage:

Query only

Mode:

ADEM0D

CALCulate<n>:MARKer<m>:FUNCTION:FPEaks:ANN:LAB:STAT <State>

If enabled, the peaks are labelled by the corresponding marker number in the diagram.

Suffix:

<n> window; For applications that do not have more than 1 measurement window, the suffix <n> is irrelevant.

<m> marker number

Parameters:

<State> **ON | OFF**
 *RST: ON

Example: CALC:MARK:FUNC:FPE:ANN:LAB:STAT OFF
 Removes the peak labels from the diagram

Mode: A, ADEM0D

CALCulate<n>:MARKer<m>:FUNCTION:FPEaks:LIST:SIZE <MaxNoPeaks>

This command defines the maximum number of peaks the marker peak list may contain, i.e. how many peaks are determined at the most.

Suffix:

<n> window; For applications that do not have more than 1 measurement window, the suffix <n> is irrelevant.

<m> marker number

Parameters:

<MaxNoPeaks> Maximum number of peaks to be determined.
 *RST: 50

Example: CALC:MARK:FUNC:FPE:LIST:SIZE 10
 The marker peak list will contain a maximum of 10 peaks.

Mode: A, ADEM0D

CALCulate<n>:MARKer<m>:FUNCTION:FPEaks:STAT <State>

Activates or deactivates the marker peak search.

Suffix:

<n> window; For applications that do not have more than 1 measurement window, the suffix <n> is irrelevant.

<m> marker number

Parameters:

<State> **ON | OFF**
 *RST: OFF

Example: CALC:MARK:FUNC:FPE:STAT ON
 Activates marker peak search

Mode: A, ADEM0D

CALCulate<n>:MARKer<m>:FUNCtion:PNOise <State>

This command switches the phase noise measurement for the specified marker on or off in the specified window. The phase noise power density is measured at the position of the markers. The result can be queried with [CALCulate<n>:MARKer<m>:FUNCTION:PNOise:RESULT](#) on page 92.

Suffix:

<n> 1...4
 window

<m> 1...16
 marker

Parameters:

<State> ON | OFF
 *RST: OFF

Example: CALC:MARK2:FUNC:PNO ON
 Switches on the phase noise marker 2.

Mode: ADEMOM

CALCulate<n>:MARKer<m>:FUNCtion:ZOOM <Range>

This command defines the range to be zoomed around marker 1 in the window specified by the suffix <n>. Marker 1 is activated first, if necessary.

The subsequent frequency sweep is stopped at the marker position and the frequency of the signal is counted. This frequency becomes the new center frequency, and the zoomed span is set. In order to recognize the end of the operation the synchronization to the sweep end should be activated. This is only possible in single sweep mode.

Suffix:

<n> window; For applications that do not have more than 1 measurement window, the suffix <n> is irrelevant.

<m> marker number

Parameters:

<Range> <numeric_value>

Example: INIT:CONT OFF
 Switches to single sweep mode
 CALC:MARK:FUNC:ZOOM 1kHz; *WAI
 Activates zooming and waits for its end.

Mode: A-F, ADEMOM, PHN

CALCulate<n>:MARKer<m>:LINK <DisplayType>

Links the markers in all displays of the specified type.

Suffix:

<n> 1...4
 window

<m> 1...16
 marker

Parameters:

<DisplayType> TIME | SPECtrum | BOTH | NONE

TIME

Links the markers in all time domain diagrams

SPECtrum

Links the markers in all AF Spectrum displays

BOTH

Links the markers both in the time domain diagrams and in the AF Spectrum displays

NONE

Markers are not linked.

*RST: NONE

Example:

CALC1:MARK1:LINK TIME

Links the marker 1 in all time domain diagrams in screen A.

Mode:

ADEM0D

CALCulate<n>:THreshold <Mode>

This command defines the threshold value for the maximum/minimum search of markers with marker search functions. The associated display line is automatically switched on.

Suffix:

<n> irrelevant

Parameters:

<Mode> MINimum to MAXimum (depending on current unit)

*RST: (STATe to OFF)

Example:

CALC:THR -82DBM

Sets the threshold value to -82 dBm.

Mode:

A, ADEM0D, EVDO, SPECM, CDMA, TDS

CALCulate<n>:THreshold:STATe <State>

This command switches on or off the threshold line. The unit depends on the setting performed with [CALCulate<n>:UNIT:POWer](#).

Suffix:

<n> irrelevant

Parameters:

<State> ON | OFF

*RST: OFF

Example:

CALC:THR:STAT ON

Switches on the threshold line.

Mode:

A, ADEMOS, SPECM

CALCulate<n>:UNIT:ANGLE <Unit>

This command selects the unit for angles.

The unit is defined globally for all windows.

Suffix:

<n> irrelevant

Parameters:

<Unit> DEG | RAD

*RST: RAD

Example:

CALC:UNIT:ANGL DEG

Mode:

ADEMOS

CALCulate<n>:UNIT:POWER <Unit>

This command selects the unit for power.

The unit is defined globally for all windows.

Suffix:

<n> irrelevant

Parameters:

<Unit> DBM | V | A | W | DBPW | WATT | DBUV | DBMV | VOLT | DBUA | AMPere

*RST: dBm

Example:

CALC:UNIT:POW DBM

Sets the power unit to dBm.

Mode:

A, ADEMOS, BT, CDMA, EVDO, TDS, WCDMA, VSA, SPECM

CALC:UNIT:THD <Mode>

Selects the unit for THD measurements.

Parameters:

<Mode> DB | PCT

*RST: DB

Example:

CALC:UNIT:THD PCT

Mode: ADEMODO, SFM

2.3.2.3 Other Referenced CALCulate Commands

CALCulate<n>:MARKer<m>:AOFF

This command switches off all active markers, delta markers, and marker measurement functions in the specified window.

Suffix:

- <n> window; For applications that do not have more than 1 measurement window, the suffix <n> is irrelevant.
- <m> depends on mode
irrelevant

Example:

```
CALC:MARK:AOFF
Switches off all markers.
```

Mode: all

CALCulate<n>:MARKer<m>:FUNCTION:FPEaks:COUNt

This query reads out the number of maxima found during the search. If no search for maxima has been performed, 0 is returned.

Suffix:

- <n> irrelevant
- <m> marker number

Example:

```
CALC:MARK:FUNC:FPE 3
Searches the 3 highest maxima for trace 1
CALC:MARK:FUNC:FPE:COUN?
Queries the number of maxima found
```

Mode: A, ADEMODO, TDS

CALCulate<n>:MARKer<m>:FUNCTION:FPEaks:SORT <SortMode>

This command sets the sort mode for the search for maxima in the window specified by the suffix <n>.

Suffix:

- <n> window; For applications that do not have more than 1 measurement window, the suffix <n> is irrelevant.
- <m> marker number

Parameters:

- <SortMode>
 - X: the maxima are sorted in the list of responses according to increasing X values
 - Y: the maxima are sorted in the list of responses according to decreasing Y values

Example:	CALC:MARK:FUNC:FPE:SORT Y Sets the sort mode to decreasing y values
Mode:	A, ADEMODO

CALCulate<n>:MARKer<m>:FUNCTION:FPEaks:X

This query reads out the list of X values of the maxima found in the window specified by the suffix <n>. The number of available values can be queried with [CALCulate<n>:MARKer<m>:FUNCTION:FPEaks:COUNT](#).

With sort mode X, the X values are in increasing order; with sort mode Y the order corresponds to the decreasing order of the Y values.

Suffix:

<n> window; For applications that do not have more than 1 measurement window, the suffix <n> is irrelevant.

<m> marker number

Example:

```
CALC:MARK:FUNC:FPE:SORT Y
Sets the sort mode to decreasing y values
CALC:MARK:FUNC:FPE 3
Searches the 3 highest maxima for trace 1
CALC:MARK:FUNC:FPE:COUN?
Queries the number of maxima found
CALC:MARK:FUNC:FPE:X?
Queries the frequencies (span <> 0) or. time (span = 0) of the
maxima found
107.5E6,153.8E6,187.9E6
frequencies in increasing order
2.05E-3,2.37E-3, 3.71e-3
times in increasing order
```

Mode: A, ADEMODO, TDS

CALCulate<n>:MARKer<m>:FUNCTION:FPEaks:Y

This query reads out the list of X values of the maxima found in the window specified by the suffix <n>. The number of available values can be queried with [CALCulate<n>:MARKer<m>:FUNCTION:FPEaks:COUNT](#) on page 97.

With sort mode X, the X values are in increasing order; with sort mode Y the order corresponds to the decreasing order of the Y values.

Suffix:

<n> window; For applications that do not have more than 1 measurement window, the suffix <n> is irrelevant.

<m> marker number

Return values:

Return values	-37.5,-58.3,-59.6 level in decreasing order
---------------	------------------------------------------------

Example:	CALC:MARK:FUNC:FPE:SORT Y Sets the sort mode to decreasing y values
	CALC:MARK:FUNC:FPE 3 Searches the 3 highest maxima for trace 1
	CALC:MARK:FUNC:FPE:COUN? Queries the number of maxima found
	CALC:MARK:FUNC:FPE:Y? Queries the levels of the maxima found
Mode:	A, ADEMOS, TDS

CALCulate<n>:MARKer<m>:FUNCTION:NDBDown <LevelSpacing>

This command defines the level spacing of the two temporary markers to the right and left of marker 1 in the window specified by the suffix <n>.

The temporary markers T1 and T2 are positioned by n dB below the active reference marker. The value measured by these markers can be queried with [CALCulate<n>:MARKer<m>:FUNCTION:NDBDown:RESult?](#).

Suffix:

<n> window; For applications that do not have more than 1 measurement window, the suffix <n> is irrelevant.

<m> irrelevant

Parameters:

<LevelSpacing> *RST: 6dB

Example:	CALC:MARK:FUNC:NDBD 3dB Sets the level spacing to 3 dB.
-----------------	------------------------------------------------------------

Mode:	A, ADEMOS
--------------	-----------

CALCulate<n>:MARKer<m>:FUNCTION:NDBDown:FREQuency

This command queries the values of the two temporary markers for span>0 in the window specified by the suffix <n>. The frequency values are separated by comma and output in ascending order.

A complete sweep with synchronization to sweep end must be performed between switching on the function and querying the measured value to obtain a correct query result. This is only possible in single sweep mode.

This command is only a query and therefore has no *RST value.

Suffix:

<n> window; For applications that do not have more than 1 measurement window, the suffix <n> is irrelevant.

<m> irrelevant

Example:	<pre>INIT:CONT OFF Switches to single sweep mode. CALC:MARK:FUNC:NDBD ON Switches on the n dB down function. INIT;*WAI Starts a sweep and waits for the end. CALC:MARK:FUNC:NDBD:FREQ? Outputs the frequencies of the temporary markers.</pre>
Mode:	A, ADEMODO

CALCulate<n>:MARKer<m>:FUNCTION:NDBDown:QFACTor

This command queries the Q factor (quality) of the measured bandwidth for span>0 in the window specified by the suffix <n>.

Suffix:	
<n>	window; For applications that do not have more than 1 measurement window, the suffix <n> is irrelevant.
<m>	marker number
Example:	<pre>INIT:CONT OFF Switches to single sweep mode. CALC:MARK:FUNC:NDBD ON Switches on the n dB down function. INIT;*WAI Starts a sweep and waits for the end. CALC:MARK:FUNC:NDBD:QFAC? Queries the Q factor of the measured bandwidth.</pre>
Mode:	A, ADEMODO

CALCulate<n>:MARKer<m>:FUNCTION:NDBDown:RESULT

This command queries the measured value in the window specified by the suffix <n>. The value depends on the span setting:

- span > 0: frequency spacing of the two temporary markers (in Hz)
- span = 0: pulse width between the two temporary markers (in s)

A complete sweep with synchronization to sweep end must be performed between switching on the function and querying the measured value in order to obtain a correct query result. This is only possible in single sweep mode.

Suffix:	
<n>	window; For applications that do not have more than 1 measurement window, the suffix <n> is irrelevant.
<m>	irrelevant

Example:	INIT:CONT OFF Switches to single sweep mode. CALC:MARK:FUNC:NDBD ON Switches on the n dB down function. INIT; *WAI Starts a sweep and waits for the end. CALC:MARK:FUNC:NDBD:RES? Outputs the measured value.
Mode:	A, ADEMODO

CALCulate<n>:MARKer<m>:FUNCTION:NDBDown:STATE <State>

This command switches the "N dB Down" function on or off in the window specified by the suffix <n>. Marker 1 is activated first, if necessary.

Suffix:

<n>	window; For applications that do not have more than 1 measurement window, the suffix <n> is irrelevant.
<m>	irrelevant

Parameters:

<State>	ON OFF
	*RST: OFF

Example:	CALC:MARK:FUNC:NDBD:STAT ON Switches on the "N dB Down" function.
-----------------	----------------------------------------------------------------------

Mode:	A, ADEMODO
--------------	------------

CALCulate<n>:MARKer<m>:FUNCTION:NDBDown:TIME

This command queries the values of the two temporary markers in zero span in the window specified by the suffix <n>. The time values are separated by comma and output in ascending order.

A complete sweep with synchronization to sweep end must be performed between switching on the function and querying the measured value to obtain a correct query result. This is only possible in single sweep mode.

Suffix:

<n>	window; For applications that do not have more than 1 measurement window, the suffix <n> is irrelevant.
<m>	irrelevant

Example:	INIT:CONT OFF Switches to single sweep mode CALC:MARK:FUNC:NDBD ON Switches on the n dB down function. INIT;*WAI Starts a sweep and waits for the end. CALC:MARK:FUNC:NDBD:TIME? Outputs the time values of the temporary markers.
Mode:	A-T, ADEMOM

CALCulate<n>:MARKer<m>:PEXCursion <Value>

This command defines the peak excursion, i.e. the spacing below a trace maximum which must be attained before a new maximum is recognized, or the spacing above a trace minimum which must be attained before a new minimum is recognized. The set value applies to all markers and delta markers in the window specified by the suffix <n>. The unit depends on the selected operating and display mode.

Mode/Display mode	Unit
Spectrum	dB
ADEMOM, RF display	dB
ADEMOM, AM display	PCT
ADEMOM, FM display	kHz
ADEMOM, PM display	RAD

Suffix:

<n> window; For applications that do not have more than 1 measurement window, the suffix <n> is irrelevant.

<m> irrelevant

Parameters:

<Value> <numeric_value>

*RST: 6dB in "Spectrum" mode and RF displays; 5 PCT in AM displays, 50 kHz in FM displays, (0.5 RAD in PM displays

Example:

CALC:MARK:PEXC 10dB

Defines peak excursion 10 dB in "Spectrum" mode.

Mode:

A, ADEMOM, BT, TDS

CALCulate<n>:MARKer<m>[:STATe] <State>

This command activates a marker in the specified window. If no indication is made, marker 1 is selected automatically. If activate, the marker is switched to normal mode.

Suffix:	
<n>	window; For applications that do not have more than 1 measurement window, the suffix <n> is irrelevant.
<m>	depends on mode marker number; For applications that do not have more than 1 marker, the suffix <m> is irrelevant.
Parameters:	
<State>	ON OFF *RST: OFF
Example:	CALC:MARK3 ON Switches on marker 3 or switches to marker mode.
Mode:	all

CALCulate<n>:MARKer<m>:TRACe <Trace>

This command assigns the selected marker to the indicated trace in the specified window. The corresponding trace must be active, i.e. its status must not be "BLANK".

If necessary, the corresponding marker is switched on prior to the assignment.

Suffix:	
<n>	window; For applications that do not have more than 1 measurement window, the suffix <n> is irrelevant.
<m>	depends on mode marker number; For applications that do not have more than 1 marker, the suffix <m> is irrelevant.
Parameters:	
<Trace>	1 to 6 Trace number the marker is assigned to.
Example:	CALC:MARK3:TRAC 2 Assigns marker 3 to trace 2.
Mode:	all

CALCulate<n>:MARKer<m>:X <Position>

This command positions the selected marker to the indicated x-value in the window specified by the suffix <n>.

If marker 2, 3 or 4 is selected and used as delta marker, it is switched to marker mode.

Suffix:	
<n>	window; For applications that do not have more than 1 measurement window, the suffix <n> is irrelevant.
<m>	marker number
Parameters:	
<Position>	0 to MAX (frequency sweep time level)

Example: CALC:MARK2:X 1.7MHz
Positions marker 2 to frequency 1.7 MHz.

Mode: ALL

CALCulate<n>:MARKer<m>:X:SLIMits:LEFT <Limit>

This command sets the left limit of the search range for markers and delta markers in the window specified by the suffix <n>. Depending on the span setting of the x-axis the indicated value defines a frequency (span > 0) or time (span = 0).

If the power measurement in zero span is active, this command limits the evaluation range to the trace.

Note: The function is only available if the search limit for marker and delta marker is switched on (see [CALCulate<n>:MARKer<m>:X:SLIMits \[:STATE\]](#) on page 105).

Suffix:

<n> window; For applications that do not have more than 1 measurement window, the suffix <n> is irrelevant.
<m> irrelevant

Parameters:

<Limit> 0 to MAX (frequency | sweep time)
*RST: (is set to the left diagram border when switching on search limits)

Example: CALC:MARK:X:SLIM ON
Switches the search limit function on.
CALC:MARK:X:SLIM:LEFT 10MHz
Sets the left limit of the search range to 10 MHz.

Mode: all

CALCulate<n>:MARKer<m>:X:SLIMits:RIGHT <Limit>

This command sets the right limit of the search range for markers and delta markers in the window specified by the suffix <n>. Depending on the span setting of the x-axis the indicated value defines a frequency (span > 0) or time (span = 0).

If the power measurement in zero span is active, this command limits the evaluation range to the trace.

Note: The function is only available if the search limit for marker and delta marker is switched on ([CALCulate<n>:MARKer<m>:X:SLIMits \[:STATE\]](#) on page 105).

Suffix:

<n> window; For applications that do not have more than 1 measurement window, the suffix <n> is irrelevant.
<m> irrelevant

Parameters:

<Limit> 0 to MAX (frequency | sweep time)
*RST: (is set to the right diagram border when switching on search limits)

Example:

CALC:MARK:X:SLIM ON
Switches the search limit function on.
CALC:MARK:X:SLIM:RIGH 20MHz
Sets the right limit of the search range to 20 MHz.

Mode:

all

CALCulate<n>:MARKer<m>:X:SLIMits[:STATe] <State>

This command switches between a limited (ON) and unlimited (OFF) search range. If the power measurement in zero span is active, this command limits the evaluation range on the trace.

Suffix:

<n> window; For applications that do not have more than 1 measurement window, the suffix <n> is irrelevant.
<m> marker

Parameters:

<State> ON | OFF
*RST: OFF

Example:

CALC:MARK:X:SLIM ON
Switches on search limitation.

Mode:

all

CALCulate<n>:MARKer<m>:X:SSIZE <StepSize>

This command defines the step size of the rotary knob for marker or delta marker value changes. It only takes effect in manual operation. It is available for all base unit measurements with the exception of statistics.

Suffix:

<n> irrelevant
<m> irrelevant

Parameters:

<StepSize> STANdard | POINts
STANdard
 step size corresponds to space between two pixels
POINts
 step size corresponds to space between two measured values
 (number of measured values is defined via the
 [[SENSe:> : \] SWEEP:POINts](#) command, see [[SENSe:> : \] SWEEP:POINts](#) on page 153)
 *RST: POINts

Example:

[CALC:MARK:X:SSIZ STAN](#)
 Sets the measured value step size.

Mode:

all

CALCulate<n>:MARKer<m>:Y?

This command queries the measured value of the selected marker in the window specified by the suffix <n>. The corresponding marker is activated before or switched to marker mode, if necessary.

To obtain a correct query result, a complete sweep with synchronization to the sweep end must be performed after the change of a parameter and before the query of the Y value. This is only possible in single sweep mode.

If the analog demodulator (option Analog Demodulation, R&S FSV-K7) is activated, the query result is output in the following units in the window specified by the suffix <1...4>:

Result display	Output unit
AM	%
FM	Hz
PM	rad/deg (defined with CALCulate<n>:UNIT:ANGLE on page 96)
RF	dB (Range Log or Range Linear %) % (Range Linear dB)

Suffix:

<n> window; For applications that do not have more than 1 measurement window, the suffix <n> is irrelevant.

<m> marker number

Return values:

<Result> The measured value of the selected marker is returned.

Example:	INIT:CONT OFF Switches to single sweep mode. CALC:MARK2 ON Switches marker 2. INIT; *WAI Starts a sweep and waits for the end. CALC:MARK2:Y? Outputs the measured value of marker 2.
Usage:	Query only
Mode:	ALL

2.3.3 DISPlay Subsystem (Analog Demodulation, R&S FSV-K7)

The DISPLay subsystem controls the selection and presentation of textual and graphic information as well as of measurement data on the display.

DISPlay:MTABLE.....	107
DISPlay[:WINDOW<n>]:STATE.....	108
DISPlay[:WINDOW<n>][:SUBWindow<1 2>]:SElect.....	108
DISPlay[:WINDOW<n>]:SSELect.....	108
DISPlay[:WINDOW<n>]:TRACe<t>:MODE.....	109
DISPlay[:WINDOW<n>]:TRACe<t>[:STATe].....	110
DISPlay[:WINDOW<n>]:TRACe<t>:Y[:SCALe].....	110
DISPlay[:WINDOW<n>]:TRACe<t>:Y[:SCALe]:MODE.....	110
DISPlay[:WINDOW<n>]:TRACe<t>:MODE:HCOntinuous.....	111
DISPlay[:WINDOW<n>]:TRACe<t>:Y[:SCALe]:RLEVel.....	111
DISPlay[:WINDOW<n>]:TRACe<t>:Y[:SCALe]:RLEVel:OFFSet.....	112
DISPlay[:WINDOW<n>]:TRACe<t>:Y[:SCALe]:RPOSITION.....	112
DISPlay[:WINDOW<n>]:TRACe<t>:Y[:SCALe]:RVALUE.....	112
DISPlay[:WINDOW<n>]:TRACe<t>:Y:SPACing.....	113
DISPlay:WSElect.....	113

DISPlay:MTABle <DisplayMode>

This command toggles the display of the marker table. With automatic display, the table is displayed if 2 or more markers are active.

Parameters:

<DisplayMode>	ON OFF AUTO
ON	Marker table is displayed.
OFF	Marker table is not displayed.
AUTO	Marker table is only displayed if 2 or more markers are active.
*RST:	AUTO

Example: To activate the table display:
DISP:MTAB ON
To query the current state of the marker table display:
DISP:MTAB?

Mode: All

DISPlay[:WINDOW<n>]:STATe <State>

This command activates the measurement specified window.

Suffix:

<n> 1...4
window

Parameters:

<State> ON | OFF

Example: DISP:WIND2:STAT ON

Displays a second window (Screen B).

Usage: SCPI confirmed

Mode: ADEM0D

DISPlay[:WINDOW<n>][:SUBWindow<1|2>]:SELect

Moves the focus area to the selected window and subwindow.

Suffix:

<n> 1
window

Example: DISP:WIND2:STAT ON

Displays a second window (Screen B).

CALC2:FEED 'XTIME:FM:AFSPektrum1'

Displays an AF spectrum diagram of the demodulated FM signal from trace 1 in screen B.

DISP:WIND2:SEL

Switches the focus area to the evaluation list of the AF spectrum diagram in screen B.

Usage: SCPI confirmed

Mode: ADEM0D

DISPlay[:WINDOW<n>]:SSELect?

Queries the currently selected subwindow.

Suffix:

<n> 1...4
window

Return values:

<Result>	1 2 1 Diagram 2 Result list
----------	-------------------------------------------

Example:

```
DISP:WIND2:SUBW2:SEL
Switches the focus area to the result list in screen B.
```

```
DISP:WIND2:SSEL?
```

```
Result: 2
```

Usage:

Query only
SCPI confirmed

Mode:

ADEM0D

DISPlay[:WINDoW<n>]:TRACe<t>:MODE <Mode>

This command defines the type of display and the evaluation of the traces in the window specified by the suffix <n>. WRITE corresponds to the Clr/Write mode of manual operation. The trace is switched off (= BLANK in manual operation) with `DISPlay[:WINDoW<n>]:TRACe<t>[:STATE]`.

The number of measurements for AVERage, MAXHold and MINHold is defined with the `[SENSe:]AVERage<n>:COUNT` or `[SENSe:]SWEEp:COUNT` commands. It should be noted that synchronization to the end of the indicated number of measurements is only possible in single sweep mode.

Suffix:

<n>	window; For applications that do not have more than 1 measurement window, the suffix <n> is irrelevant.
-----	---------------------------------------------------------------------------------------------------------

<t>	trace
-----	-------

Parameters:

<Mode>	WRITe VIEW AVERage MAXHold MINHold BLANK *RST: WRITe for TRACe1, STATE OFF for TRACe2/3/4/5/6 For details on trace modes refer to chapter 2.1.4, "Trace Mode Overview , on page 15.
--------	---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

Example:

```
INIT:CONT OFF
Switching to single sweep mode.
SWE:COUN 16
Sets the number of measurements to 16.
DISP:TRAC3:MODE MAXH
Switches on the calculation of the maximum peak for trace 3.
INIT;*WAI
Starts the measurement and waits for the end of the 16 sweeps.
```

Mode:

all

DISPlay[:WINDOW<n>]:TRACe<t>[:STATe] <State>

This command switches on or off the display of the corresponding trace in the window specified by the suffix <n>. The other measurements are not aborted but continue running in the background.

Suffix:

<n> window; For applications that do not have more than 1 measurement window, the suffix <n> is irrelevant.

<t> trace

Parameters:

<State> ON | OFF

*RST: ON for TRACe1, OFF for TRACe2 to 6

Example: DISP:TRAC3 ON

Mode: all

DISPlay[:WINDOW<n>]:TRACe<t>:Y[:SCALe] <Range>

This command defines the display range of the y-axis (level axis) with logarithmic scaling ([DISPlay\[:WINDOW<n>\]:TRACe<t>:Y:SPACing](#) on page 113) in the window specified by the suffix <n>.

For linear scaling, the display range is fixed and cannot be modified.

Suffix:

<n> window; For applications that do not have more than 1 measurement window, the suffix <n> is irrelevant.

<t> irrelevant

Parameters:

<Range> 10 dB to 200 dB or value in Hz

*RST: 100dB

Example: DISP:TRAC:Y 110dB

Mode: all

DISPlay[:WINDOW<n>]:TRACe<t>:Y[:SCALe]:MODE <Mode>

This command defines the scale type of the y-axis (absolute or relative) in the window specified by the suffix <n>.

When [SYSTem:DISPlay:UPDate](#) is set to OFF, this command has no immediate effect on the screen (see [SYSTem:DISPlay:UPDate](#) on page 183).

Suffix:

<n> window; For applications that do not have more than 1 measurement window, the suffix <n> is irrelevant.

<t> irrelevant

Parameters:

<Mode> ABSolute | RELative
 *RST: ABS

Example: DISP:TRAC:Y:MODE REL

Mode: all

DISPlay[:WINDOW<n>]:TRACe<t>:MODE:HCONtinuous <State>

This command defines whether traces in Min Hold, Max Hold and Average mode are reset in the window specified by the suffix <n> after parameter change or not.

Normally, the measurement is started anew after parameter changes, before the measurement results are evaluated (e.g. using a marker). In all cases that require a new measurement after parameter changes, the trace is reset automatically to avoid false results (e.g. with span changes). For applications that require no reset after parameter changes, the automatic reset can be switched off.

Suffix:

<n> window; For applications that do not have more than 1 measurement window, the suffix <n> is irrelevant.
 <t> trace

Parameters:

<State> OFF | ON
OFF
 After certain parameter changes the traces are reset.
ON
 The automatic reset is switched off.
 *RST: OFF

Example: DISP:WIND:TRAC3:MODE:HCON ON
 Switches off the reset function.

Mode: A

DISPlay[:WINDOW<n>]:TRACe<t>:Y[:SCALe]:RLEVel <Value>

This command sets the reference level.

With the reference level offset <> 0, the indicated value range of the reference level is modified by the offset.

Suffix:

<n> irrelevant.
 <t> irrelevant

Parameters:

<Value> *RST: -10dBm

Example: DISP:TRAC:Y:RLEV -60dBm

Mode: A, ADEMOT, BT, CDMA, EVDO, PHN, TDS, VSA, WCDMA

DISPlay[:WINDOW<n>]:TRACe<t>:Y[:SCALe]:RLEVel:OFFSet <Value>

This command sets the reference level offset.

Suffix:

<n> irrelevant.

<t> irrelevant

Parameters:

<Value> -200dB to 200dB

*RST: 0dB

Example: DISP:TRAC:Y:RLEV:OFFS -10dB

Mode: ALL

DISPlay[:WINDOW<n>]:TRACe<t>:Y[:SCALe]:RPOSITION <Position>

This remote command defines the position of the reference value on the Y axis (1 – 100 %) in the window specified by the suffix <n>.

When using a tracking generator (only with option R&S FSV-B9 or -B10, requires active normalization), and in Bluetooth mode (option R&S FSV-K8) this command defines the position of the reference value for all windows.

Suffix:

<n> window; For applications that do not have more than 1 measurement window, the suffix <n> is irrelevant.

<t> irrelevant

Parameters:

<Position> 0 to 100PCT

*RST: 100 PCT = "Spectrum" mode, AF spectrum display;
50 PCT = Tracking Generator mode or time display

Example: DISP:TRAC:Y:RPOS 50PCT

Mode: A, BT, CDMA, EVDO, TDS, WCDMA, ADEMOT, VSA

DISPlay[:WINDOW<n>]:TRACe<t>:Y[:SCALe]:RVALue <Value>

This command defines the reference value assigned to the reference position in the specified window. Separate reference values are maintained for the various displays.

Suffix:

<n> 1...4
window

<t> irrelevant

Parameters:

<Value> *RST: 0 PCT = AM display, (0 Hz = FM display), (0 rad = PM display), (100 PCT = AF spectrum display of AM signal), (250 kHz = AF spectrum display of FM signal), (10 rad = AF spectrum display of PM signal)

Example:

`DISP:TRAC:Y:RVAL 0`

Sets the value assigned to the reference position to 0 Hz (analog demodulation)

DISPlay[:WINDOW<n>]:TRACe<t>:Y:SPACing <ScalingType>

This command selects the scaling for the level display range in the window specified by the suffix <n>.

For AF spectrum displays, only the parameters "LINEar" and "LOGarithmic" are permitted.

Suffix:

<n> window; For applications that do not have more than 1 measurement window, the suffix <n> is irrelevant.

<t> irrelevant

Parameters:

<ScalingType> LOGarithmic | LINEar | LDB

LOGarithmic

Selects logarithmic scaling.

LINEar

Selects linear scaling in %.

LDB

Selects linear scaling in dB.

*RST: LOGarithmic

Example:

`DISP:TRAC:Y:SPAC LIN`

Mode:

A, ADEMOS, BT, VSA

DISPlay:WSELect?

Queries the currently selected window.

Example:

`DISP:WIND2:SEL`

Switches the focus area to screen B.

`DISP:WSEL?`

Result: 2

Usage:

Query only
SCPI confirmed

Mode:

ADEMOS

2.3.4 INSTRument Subsystem (Analog Demodulation, R&S FSV-K7)

The INSTRument subsystem selects the operating mode of the unit either via text parameters or fixed numbers.

INSTRument[:SElect]	114
INSTRument:NSELect <Mode>	114

INSTRument[:SElect] <Mode>

Selects the instrument mode.

Parameters:

<Mode>	ADEM Analog Demodulation option, R&S FSV-K7
	SFM FM Stereo option, R&S FSV-K7S
Mode:	ADEM, SFM

INSTRument:NSELect <Mode> <Mode>

Selects the instrument mode.

Parameters:

<Mode>	3 Analog Demodulation option, R&S FSV-K7
	7 FM Stereo option, R&S FSV-K7S
Mode:	ADEM, SFM

2.3.5 PROBe subsystem

With firmware R&S FSV 1.61SP2 or newer, active probes are supported (via an adapter). The following commands activate and configure a connected probe which is to provide an input signal. They are only available if a probe is connected to the instrument's RF INPUT and USB connectors.

For details see the base unit description.

PROBe[:STATe] <State>

This command activates a connected probe. Use this command to switch off the probe and measure the digital input without considering the transducer factor of the probe.

Parameters:

<State>	ON OFF
	*RST: OFF

Example: PROB:STAT ON

Mode: A

PROBe:ID:PARTnumber?

This command returns the material part number of the connected probe.

Example: PROB:ID:PART?

Usage: Query only

Mode: A

PROBe:ID:SRNumber?

This command returns the serial number of the connected probe.

Example: PROB:ID:SRN?

Usage: Query only

Mode: A

PROBe:SETUp:MODE <Mode>

This command defines which action is taken when the probe's micro button is pressed.

Parameters:

<Mode> **RSINgle**
 A single sweep is performed.
 NOACtion
 No action is taken.
 *RST: OFF

Example: PROB:SET:STAT ON

Mode: A

PROBe:SETUp:NAME?

This command returns the name of the connected probe.

Example: PROB:SET:NAME?

Usage: Query only

Mode: A

PROBe:SETUp:STATE?

This command queries whether a probe is connected to the instrument's RF INPUT and USB connectors and was recognized by the R&S FSV.

Example: PROB:SET:STAT ON

Usage: Query only

Mode: A

2.3.6 SENSe Subsystem (Analog Demodulation, R&S FSV-K7)

The SENSe subsystem is organized in several subsystems. The commands of these subsystems directly control device-specific settings, they do not refer to the signal characteristics of the measurement signal.

The SENSe subsystem controls the essential parameters of the analyzer. In accordance with the SCPI standard, the keyword "SENSe" is optional for this reason, which means that it is not necessary to include the SENSe node in command sequences.

The following subsystems are included:

2.3.6.1	Trace Mode Result Types.....	116
2.3.6.2	Formats for Returned Values: ASCII Format and Binary Format.....	117
2.3.6.3	SENSe:ADEMod Subsystem (Analog Demodulation, R&S FSV-K7).....	117
2.3.6.4	SENSe:ADJust Subsystem.....	142
2.3.6.5	SENSe:BANDwidth Subsystem (Analog Demodulation, R&S FSV-K7).....	144
2.3.6.6	SENSe:FILTer Subsystem (Analog Demodulation, R&S FSV-K7).....	145
2.3.6.7	SENSe:FREQuency Subsystem (Analog Demodulation, R&S FSV-K7).....	150
2.3.6.8	SENSe:SWEep Subsystem (Analog Demodulation, R&S FSV-K7).....	151
2.3.6.9	Other commands in the SENSe subsystem.....	154

2.3.6.1 Trace Mode Result Types

The following result types can be set:

WRITe	The current trace results will be obtained
AVERage	The trace results will be averaged over the given # of measurements
MAXHold	The maximum trace result values will be obtained over the given # of measurements
MINHold	The minimum trace result values will be obtained over the given # of measurements
VIEW	The trace results are frozen and displayed, i.e. they are not calculated for subsequent measurements. Traces in this mode cannot be queried.
OFF	The result type will not be used.



It is not possible to query trace data when result type VIEW is selected.

Each value besides OFF can only be assigned to one result type at a time.

If all result types are set to OFF, the AM, FM, or PM demodulator will be deactivated.

2.3.6.2 Formats for Returned Values: ASCII Format and Binary Format

- ASCII Format (FORMAT ASCII):

The command reads out a list of comma separated values (CSV) of the measured values in floating point format.
- Binary Format (FORMAT REAL,32):

The command reads out binary data (Definite Length Block Data according to IEEE 488.2), each measurement value being formatted in 32 Bit IEEE 754 Floating-Point-Format. The schematics of the result string will be as follows:
#41024<value1><value2>...<value n> with

#4	number of digits (= 4 in the example) of the following number of data bytes
1024	number of following data bytes (= 1024 in the example)
<value>	4-byte floating point value

2.3.6.3 SENSe:ADEM Subsystem (Analog Demodulation, R&S FSV-K7)

The SENSe:ADEM Subsystem contains commands to set up the instrument for the measurement of analog demodulated signals and query the result at the end of the measurement.

Further information

- [chapter 2.3.6.1, "Trace Mode Result Types", on page 116](#)
- [chapter 2.3.6.2, "Formats for Returned Values: ASCII Format and Binary Format", on page 117](#)

[SENSe:]ADEMod[:STATe].....	118
[SENSe:]ADEMod<n>:AF:CENTER.....	118
[SENSe:]ADEMod<n>:AF:COUPLing.....	119
[SENSe:]ADEMod<n>:AF:SPAN.....	119
[SENSe:]ADEMod<n>:AF:SPAN:FULL.....	120
[SENSe:]ADEMod<n>:AF:STARt.....	120
[SENSe:]ADEMod<n>:AF:STOP.....	121
[SENSe:]ADEMod:AM[:ABSolute]][:TDOMain]:RESUlt.....	121
[SENSe:]ADEMod:AM[:ABSolute]][:TDOMain]][:TYPE].....	122
[SENSe:]ADEMod:AM:RELative[:TDOMain]][:TYPE].....	123
[SENSe:]ADEMod:AM:RELative[:TDOMain]:RESUlt.....	123
[SENSe:]ADEMod:AM:RELative:AFSPectrum[:TYPE].....	124
[SENSe:]ADEMod:AM:RELative:AFSPectrum:RESUlt.....	125
[SENSe:]ADEMod:BANDwidth BWIDth:DEModulation.....	126
[SENSe:]ADEMod:BANDwidth BWIDth:DEModulation:TYPE.....	126
[SENSe:]ADEMod:FM[:TDOMain]][:TYPE].....	126
[SENSe:]ADEMod:FM[:TDOMain]:RESUlt.....	127
[SENSe:]ADEMod:FM:AFSPectrum[:TYPE].....	128
[SENSe:]ADEMod:FM:AFSPectrum:RESUlt.....	128
[SENSe:]ADEMod:FM:OFFSet.....	129
[SENSe:]ADEMod:MTIMe.....	130
[SENSe:]ADEMod:PM[:TDOMain]][:TYPE].....	130

[SENSe:]ADEMod:PM[:TDOMain]:REsUlt.....	131
[SENSe:]ADEMod:PM:AFSPectrum[:TYPE].....	132
[SENSe:]ADEMod:PM:AFSPectrum:REsUlt.....	133
[SENSe:]ADEMod:PM:RPOInt[:X].....	134
[SENSe:]ADEMod:RLENgth.....	135
[SENSe:]ADEMod:SET.....	135
[SENSe:]ADEMod:SPECtum[:TYPE].....	136
[SENSe:]ADEMod:SPECtum:BANDwidth BWIDth[:RESolution].....	136
[SENSe:]ADEMod:SPECtum:REsUlt.....	137
[SENSe:]ADEMod:SPECtum:SPAN[:MAXimum].....	138
[SENSe:]ADEMod:SPECtum:SPAN:ZOOM.....	139
[SENSe:]ADEMod:SQUElch[:STATE].....	139
[SENSe:]ADEMod:SQUElch:LEVel.....	139
[SENSe:]ADEMod:SRATe.....	140
[SENSe:]ADEMod<n>:ZOOM[:STATE].....	140
[SENSe:]ADEMod<n>:ZOOM:START.....	140
[SENSe:]ADEMod<n>:ZOOM:LENGTH.....	141
[SENSe:]ADEMod<n>:ZOOM:LENGTH:MODE.....	141

[SENSe:]ADEMod[:STATe] <State>

This command activates the analog demodulator of the instrument. The instrument will be set to zero span at the current center frequency.

Parameters:

<State>	ON OFF
*RST:	OFF

Example:

ADEM ON	
Switches the analog demodulator on.	

Mode:

ADEM	OD
------	----

[SENSe:]ADEMod<n>:AF:CENTER <Frequency>

This command sets the center frequency for AF spectrum result display.

Suffix:

<n>	1...4
	irrelevant

Parameters:

<Frequency>	*RST: 1.25 MHz
-------------	----------------

Example:	ADEM ON, see CALCulate<n>:FEED on page 89 Switches on the analog demodulator
	CALC:FEED 'XTIM:FM:AFSP', see CALCulate<n>:FEED on page 89 Switches on AF spectrum result display of FM
	ADEM:BAND 5 MHz, see [SENSe:]ADEMod:BANDwidth BWIDth:DEModulation on page 126 Sets the measurement bandwidth
	ADEM:AF:CENT 500kHz, see [SENSe:]ADEMod<n>:AF:CENTER on page 118 Sets the AF center frequency
	ADEM:AF:SPAN 200kHz, see [SENSe:]ADEMod<n>:AF:SPAN on page 119 Sets the AF span
Mode:	ADEM

[SENSe:]ADEMod<n>:AF:COUPling <Coupling>

This command selects the coupling of the AF path of the analyzer in the specified window.

Suffix:

<n>	1...4 window
-----	-----------------

Parameters:

<Coupling>	AC DC *RST: AC (PM); DC (FM)
------------	-----------------------------------

Example:

ADEM:AF:COUP DC
Switches on DC coupling.

Mode:

ADEM

**[SENSe:]ADEMod<n>:AF:SPAN **

This command sets the span for AF spectrum result display.

The span is limited to half the measurement bandwidth of analog demodulation ([\[SENSe:\]ADEMod:BANDwidth|BWIDth:DEModulation](#) on page 126).

Suffix:

<n>	1...4 irrelevant
-----	---------------------

Parameters:

	*RST: 2.5 MHz
--------	---------------

Example:	ADEM ON, see [SENSe:]ADEMod[:STATe] on page 118 Switches on the analog demodulator CALC:FEED 'XTIM:FM:AFSP' , see CALCulate<n>:FEED on page 89 Switches on AF spectrum result display of FM ADEM:BAND 5 MHz , see [SENSe:]ADEMod:BANDwidth BWIDth:DEModulation on page 126 Sets the measurement bandwidth ADEM:AF:CENT 500kHz , see [SENSe:]ADEMod<n>:AF:CENTER on page 118 ADEM:AF:SPAN 200 kHz Sets the AF span to 200 kHz
Mode:	ADEM

[SENSe:]ADEMod<n>:AF:SPAN:FULL

This command sets the maximum span for AF spectrum result display.

The maximum span corresponds to half the measurement bandwidth of analog demodulation ([\[SENSe:\]ADEMod:BANDwidth|BWIDth:DEModulation](#) on page 126).

Suffix:	
<n>	1...4 irrelevant
Example:	ADEM ON, see [SENSe:]ADEMod[:STATe] on page 118 Switches on the analog demodulator CALC:FEED 'XTIM:FM:AFSP' , see CALCulate<n>:FEED on page 89 Switches on AF spectrum result display of FM ADEM:BAND 5 MHz , see [SENSe:]ADEMod:BANDwidth BWIDth:DEModulation on page 126 Sets the measurement bandwidth to 5 MHz ADEM:AF:SPAN:FULL Sets the AF span to 2.5 MHz
Mode:	ADEM

[SENSe:]ADEMod<n>:AF:STARt <Frequency>

This command sets the start frequency for AF spectrum result display.

Suffix:	
<n>	1...4 irrelevant
Parameters:	
<Frequency>	*RST: 0 MHz

Example:	ADEM ON, see [SENSe:]ADEMod[:STATE] on page 118 Switches on the analog demodulator CALC:FEED 'XTIM:FM:AFSP', see CALCulate<n>:FEED on page 89 Switches on AF spectrum result display of FM ADEM:BAND 5 MHz, see [SENSe:]ADEMod:BANDwidth BWIDth:DEModulation on page 126 Sets the measurement bandwidth to 5 MHz ADEM:AF:STAR 0 kHz Sets the AF start frequency to 0 kHz [SENSe:]ADEMod<n>:AF:STOP on page 121 Sets the AF stop frequency to 500 kHz
Mode:	ADEM

[SENSe:]ADEMod<n>:AF:STOP <Frequency>

This command sets the stop frequency for AF spectrum result display.

The stop frequency is limited to half the measurement bandwidth of analog demodulation ([\[SENSe:\]ADEMod:BANDwidth|BWIDth:DEModulation](#) on page 126).

Suffix:

<n>	1...4
	irrelevant

Parameters:

<Frequency>	*RST: 2.5 MHz
-------------	---------------

Example:

ADEM ON, see [SENSe:]ADEMod[:STATE] on page 118 Switches on the analog demodulator CALC:FEED 'XTIM:FM:AFSP', see CALCulate<n>:FEED on page 89 Switches on AF spectrum result display of FM ADEM:BAND 5 MHz, see [SENSe:]ADEMod:BANDwidth BWIDth:DEModulation on page 126 Sets the measurement bandwidth to 5 MHz [SENSe:]ADEMod<n>:AF:START on page 120 Sets the AF start frequency to 0 kHz ADEM:AF:STOP 500 kHz Sets the AF stop frequency to 500 kHz

Mode:

ADEM

[SENSe:]ADEMod:AM[:ABSolute][:TDOMain]:RESUlt? <TraceMode>

This command reads the result data of the RF signal in zero span in the specified trace mode. The data format of the output data block is defined by the FORMat command (see [chapter 2.3.6.2, "Formats for Returned Values: ASCII Format and Binary Format"](#), on page 117).

The output unit is dBm (logarithmic display) or V (linear display).

Query parameters:

<TraceMode> WRITe | AVERage | MAXHold | MINHold | VIEW
 The specified trace mode must be one of those configured by
 [**SENSe:ADEMod:AM[:ABSolute][:TDOMain][:TYPE]**] on page 122. Otherwise a query error is generated.
 For details on trace modes see [chapter 2.3.6.1, "Trace Mode Result Types"](#), on page 116.

Example:

ADEM:SET 8MHz,32000,EXT,POS,-500,30

Sets up demodulator parameters

ADEM:AM AVER,MAXH,MINH

Sets up AM results to be measured

ADEM ON

Switches on demodulator

INIT; *WAI

Starts measurement and waits for sync

FORM ASC

Selects output format

ADEM:AM:RES? AVER

Reads AM average results

ADEM:AM:RES? MAXH

Reads AM max hold results

ADEM:AM:RES? MINH

Reads AM min hold results

Usage:

Query only

Mode:

ADEM

[**SENSe:ADEMod:AM[:ABSolute][:TDOMain][:TYPE]**] <TraceMode>

This command selects the trace modes of the RF signal to be measured simultaneously in zero span. For each of the six available traces a mode can be defined.

Parameters:

<TraceMode> <TraceMode1>, <TraceMode2>, <TraceMode3>, <TraceMode4>, <TraceMode5>, <TraceMode6>
WRITe | AVERage | MAXHold | MINHold | VIEW | OFF
 For details on trace modes see [chapter 2.3.6.1, "Trace Mode Result Types"](#), on page 116.
 *RST: WRITe,OFF,OFF,OFF,OFF,OFF (FM-Stereo:OFF,OFF,OFF,OFF,OFF,OFF)

Example:	ADEM:AM AVER,MAXH,MINH,OFF,OFF,OFF Determines average, max hold and min hold values simultaneously for the traces 1-3.
	ADEM:AM WRIT,OFF,OFF,OFF,OFF,OFF Determines only the current measurement values for trace 1.
	ADEM:AM OFF,OFF,OFF,OFF,OFF,OFF Switches AM demodulation off.

Mode:	ADEM
--------------	------

[SENSe:]ADEMod:AM:RELative[:TDOMain][:TYPE] <TraceMode>

This command selects the result types to be measured simultaneously by AM demodulation.

Parameters for setting and query:

<TraceMode>	<TraceMode1>, <TraceMode2>, <TraceMode3>, <TraceMode4>, <TraceMode5>, <TraceMode6> WRITe AVERage MAXHold MINHold VIEW OFF For details on trace modes see chapter 2.3.6.1, "Trace Mode Result Types" , on page 116.
*RST:	WRITe,OFF,OFF,OFF,OFF,OFF (FM-Stereo:OFF,OFF,OFF,OFF,OFF,OFF)

Example:	ADEM:AM:REL AVER,MAXH,MINH Determines average, max hold and min hold values simultaneously.
	ADEM:AM:REL WRIT,OFF,OFF Determines only the current measurement values.
	ADEM:AM:REL OFF,OFF,OFF Switches AM demodulation off.

Mode:	ADEM
--------------	------

[SENSe:]ADEMod:AM:RELative[:TDOMain]:RESult? <TraceMode>

This command reads the result data obtained by AM demodulation for the specified result type. The data format of the output data block is defined by the FORMat command (see [chapter 2.3.6.2, "Formats for Returned Values: ASCII Format and Binary Format"](#), on page 117).

The output unit is %.

Query parameters:

<TraceMode>	WRITe AVERage MAXHold MINHold VIEW The specified trace mode must be one of those configured by [SENSe:]ADEMod:AM[:ABSolute] [:TDOMain] [:TYPE] on page 122. Otherwise a query error is generated. For details on trace modes see chapter 2.3.6.1, "Trace Mode Result Types" , on page 116.
-------------	------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

Remote Commands of the Analog Demodulation (R&S FSV-K7)

Example:	ADEM:SET 8MHz,32000,EXT,POS,-500,30 Sets up demodulator parameters ADEM:FM AVER,MAXH,MINH Selects FM results to be measured ADEM:AM:REL WRIT,OFF,OFF Selects AM results to be measured ADEM ON Switches on demodulator INIT; WAI Starts measurement and waits for sync FORM ASC Selects output format ADEM:FM:RES? AVER Reads FM average results ADEM:FM:RES? MAXH Reads FM max hold results ADEM:FM:RES? MINH Reads FM min hold results ADEM:AM:REL:RES? WRIT Reads current AM result data
Usage:	Query only
Mode:	ADEM

[SENSe:]ADEMod:AM:RELative:AFSPectrum[:TYPE] <TraceMode>

This command selects the AF spectrum result types of the AM-demodulated signal to be measured simultaneously.

Note: in FM stereo mode (option K7S), only those traces can be measured that are currently displayed in at least one screen.

Parameters:

<TraceMode>	<TraceMode1>, <TraceMode2>, <TraceMode3>, <TraceMode4>, <TraceMode5>, <TraceMode6> WRITe AVERage MAXHold MINHold VIEW OFF For details on trace modes see chapter 2.3.6.1, "Trace Mode Result Types" , on page 116. *RST: WRITe,OFF,OFF,OFF,OFF,OFF (FM-Stereo:OFF,OFF,OFF,OFF,OFF,OFF)
-------------	----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

Example:

ADEM:AM:REL:AFSP AVER,MAXH,MINH
Determines average, maximum and minimum value simultaneously
ADEM:AM:REL:AFSP WRIT,OFF,OFF
Determines only current measurement results
ADEM:AM:REL:AFSP OFF,OFF,OFF
Switches off calculation of the AF spectrum

Mode:

ADEMOD

[SENSe:]ADEMod:AM:RELative:AFSPectrum:RESult? <TraceMode>

This command reads out the AF spectrum result data of the AM-demodulated signal for the specified result type. The data format of the output data is determined with the FORMat command (see [chapter 2.3.6.2, "Formats for Returned Values: ASCII Format and Binary Format"](#), on page 117).

The output unit is dB (logarithmic display) or % (linear display).

Query parameters:

<TraceMode> WRITe | AVERage | MAXHold | MINHold | VIEW

The specified trace mode must be one of those configured by
[SENSe:]ADEMod:AM[:ABSolute][:TDOMain][:TYPE] on page 122. Otherwise a query error is generated.

For details on trace modes see [chapter 2.3.6.1, "Trace Mode Result Types"](#), on page 116.

Example:

ADEM:SET 8MHz,32000,EXT,POS,-500,30

Sets the demodulator

ADEM:FM AVER,MAXH,MINH

Selects the FM results to be measured

ADEM:AM:REL WRIT,OFF,OFF

Selects the AM results to be measured

ADEM:AM:REL:AFSP WRIT,OFF,OFF

Selects the AF spectrum results of the demodulated AM signal to be measured

ADEM ON

Switches on the demodulator

INIT; WAI

Starts the measurement and waits for the termination

FORM ASC

Selects the output format

ADEM:FM:RES? AVER

Reads the FM average result data

ADEM:FM:RES? MAXH

Reads the FM Maxhold result data

ADEM:FM:RES? MINH

Reads the FM Minhold result data

ADEM:AM:REL:RES? WRIT

Reads the current AM result data

ADEM:AM:REL:AFSP:RES? WRIT

Reads the current AF spectrum result data of the demodulated AM signal

Usage:

Query only

Mode:

ADEM

[SENSe:]ADEMod:BANDwidth|BWIDth:DEModulation <Bandwidth>

This command defines the demodulation bandwidth used for analog demodulation. The required sampling rate is automatically set depending on the selected demodulation bandwidth. The available demodulation bandwidths are determined by the existing sampling rates. For details on the relation between demodulation bandwidth and sampling rate refer to [chapter 2.1.8, "Sample Rate, Measurement Time and Trigger Offset", on page 18](#).

Parameters:

<Bandwidth> *RST: 5 MHz
For details on the correlation of bandwidth and sample rate refer to chapter "Instrument Functions", section "Analog Demodulation (Option K7)" – [chapter 2.1.8, "Sample Rate, Measurement Time and Trigger Offset", on page 18](#).

Example:

ADEM:BAND:DEM 1MHz

Sets the demodulation bandwidth to 1 MHz.

Mode:

ADEMODO

[SENSe:]ADEMod:BANDwidth|BWIDth:DEModulation:TYPE <FilterType>

This command defines the type of demodulation filter to be used.

Parameters:

<FilterType> **FLAT**
Standard flat demodulation filter
GAUSs
Gaussian filter for optimized settling behaviour
*RST: FLAT

Example:

BAND:DEM:TYPE GAUS

Selects the Gaussian filter.

Mode:

ADEMODO

[SENSe:]ADEMod:FM[:TDOMain][:TYPE] <Type>

This command selects the result types to be measured simultaneously by FM demodulation.

Parameters:

<Type> *RST: WRITe, OFF, OFF
<result type 1|2|3|4|5|6>: WRITe, AVERage, MAXHold, MINHold, VIEW, OFF; for details see [chapter 2.3.6.1, "Trace Mode Result Types", on page 116](#).

Example:	[SENSe:]ADEMod:FM[:TDOMain][:TYPE] on page 126 "Creates average, max hold and min hold values simultaneously DEM:FM WRIT,OFF,OFF Only creates the current measurement values ADEM:FM OFF,OFF,OFF Switches analog demodulator off
Mode:	ADEMODO

[SENSe:]ADEMod:FM[:TDOMain]:RESUlt <Type>

This command reads the result data obtained by analog demodulation for the specified result type. The data format of the output data block is defined by the FORMat command.

Return values:

<Type>	<result type>: WRITe, AVERage, MAXHold, MINHold; for details see chapter 2.3.6.1, "Trace Mode Result Types", on page 116 . The result type indicated must be one of those configured by [SENSe:]ADEMod:FM[:TDOMain][:TYPE] on page 126. Otherwise a query error will be generated.
Return values	ASCII Format (FORMAT ASCII) or Binary Format (FORMAT REAL, 32); for details see chapter 2.3.6.2, "Formats for Returned Values: ASCII Format and Binary Format", on page 117 . Default unit: Hz

Example:

ADEM:SET 8MHz,32000,EXT,POS,-500,30, see [SENSe:]ADEMod:SET on page 135
Sets up demodulator parameters
ADEM:FM AVER,MAXH,MINH, see [SENSe:]ADEMod:FM[:TDOMain][:TYPE] on page 126
Selects FM results to be measured
ADEM:AM WRIT,OFF,OFF
Selects AM results to be measured
ADEM ON, see [SENSe:]ADEMod[:STATE] on page 118
Switches on demodulator
INIT; WAI
Starts measurement and waits for sync
FORM ASC, see FORMAT[:DATA] on page 180
Selects output format
ADEM:FM:RES? AVER
Reads FM average results
ADEM:FM:RES? MAXH
Reads FM max hold results
ADEM:FM:RES? MINH
Reads FM min hold results
ADEM:AM:RES? WRIT
Reads current AM results

Mode:

ADEMOD

[SENSe:]ADEMod:FM:AFSPectrum[:TYPE] <Type>

This command selects the AF spectrum result types of the FM demodulated signal to be measured simultaneously.

Parameters:

<Type> *RST: OFF, OFF, OFF
<result type 1|2|3|4|5|6>: WRITe, AVERage, MAXHold, MINHold, VIEW, OFF; for details see [chapter 2.3.6.1, "Trace Mode Result Types"](#), on page 116.

The result type "AF spectrum of the FM demodulated signal" cannot be activated at the same time as "AF spectrum of AM or PM demodulated signal".

Example:

ADEM:FM:AFSP AVER,MAXH,MINH

Determines average, maximum and minimum value simultaneously

ADEM:FM:AFSP WRIT,OFF,OFF

Determines only current measurement results

ADEM:FM:AFSP OFF,OFF,OFF

Switches calculation of AF spectrum off

Mode:

ADEMODO

[SENSe:]ADEMod:FM:AFSPectrum:RESUlt <Type>

This command reads out the AF spectrum result data of the FM demodulated signal for the specified result type. The data format of the output data is determined with the FORMat command.

Return values:

<Type> <result type>: WRITe, AVERage, MAXHold, MINHold; for details see [chapter 2.3.6.1, "Trace Mode Result Types"](#), on page 116.
The specified result type must be one of those configured with the **[SENSe:]ADEMod:FM:AFSPectrum[:TYPE]** command. Otherwise a query error will be generated.

Return values

ASCII Format (FORMat ASCII) or Binary Format (FORMat REAL, 32); for details see [chapter 2.3.6.2, "Formats for Returned Values: ASCII Format and Binary Format"](#), on page 117.

Default unit: dB (logarithmic display) or Hz (linear display)

Example:	ADEM:SET 8MHz,32000,EXT,POS,-500,30, see [SENSe:] ADEMod:SET on page 135 Sets demodulator
	ADEM:FM AVER,MAXH,MINH, see [SENSe:] ADEMod:FM[:TDOMain] [:TYPE] on page 126 Selects the FM results to be measured
	ADEM:AM:REL WRIT,OFF,OFF, see [SENSe:] ADEMod:FM: AFSPectrum[:TYPE] on page 128 Selects the AM results to be measured
	ADEM:FM:AFSP WRIT,OFF,OFF, see [SENSe:] ADEMod:FM: AFSPectrum[:TYPE] on page 128 Selects the AF spectrum results of the demodulated FM signal to be measured
	ADEM ON, see [SENSe:] ADEMod[:STATe] on page 118 Switches the demodulator on
	INIT; WAI Starts the measurement and waits for termination
	FORM ASC, see FORMat[:DATA] on page 180 Selects output format
	ADEM:FM:RES? AVER, see [SENSe:] ADEMod:FM[:TDOMain]:RESult on page 127 Reads FM average result data
	ADEM:FM:RES? MAXH, see [SENSe:] ADEMod:FM[:TDOMain]:RESult on page 127 Reads FM maxhold result data
	ADEM:FM:RES? MINH, see [SENSe:] ADEMod:FM[:TDOMain]:RESult on page 127 Reads FM minhold result data
	ADEM:AM:RES? WRIT, see [SENSe:] ADEMod:AM[:ABSolute] [:TDOMain]:RESult on page 121 Reads current AM result data
	ADEM:FM:AFSP:RES? WRIT Reads current AF spectrum result data of demodulated FM signal
Mode:	ADEM

[SENSe:]ADEMod:FM:OFFSet <Type>

This command calculates the FM offset of the currently available measurement data set.

If averaging has been activated before acquiring the data set (using [SENSe:] ADEMod:FM[:TDOMain] [:TYPE] on page 126, the averaged FM offset over several measurements can also be obtained by setting <result type> = AVERage.

The offset thus determined differs from the one calculated by the CALCulate<n>: MARKer:FUNCTION:ADEMod:FERRor[:RESUlt<t>] on page 86 command since, for determination of the frequency deviation, the modulation is removed by means of low pass filtering, producing results that are different from those obtained by averaging.

Parameters:

<Type>

<result type> | IMMEDIATE | AVERage

IMMEDIATE

The current measurement results will be used for calculating the FM offset

AVERage

The measurement results that were averaged over the given # of measurements will be used for calculating the FM offset

If no average measurement was active during the last measurement sequence only the [SENSe:]ADEMod:FM:OFFSet

IMMEDIATE command (see [SENSe:]ADEMod:FM:OFFSet on page 129) will return a correct result (data to calculate the offset are taken from the last measured data set).

[SENSe:]ADEMod:FM:OFFSet AVERage will cause a query error in this case.

Example:

ADEM:SET 8MHz,32000,EXT,POS,-500,30, see [SENSe:]ADEMod:SET on page 135

Sets up demodulator parameters to execute 30 measurements
ADEM:FM AVER, OFF, OFF

Selects FM results to perform averaging

ADEM:AM OFF, OFF, OFF

Switches off AM demodulation

ADEM ON, see [SENSe:]ADEMod[:STATE] on page 118

Switches on analog demodulator

INIT; WAI

Starts measurement and waits for sync

ADEM:FM:OFFS? IMM

Reads FM offset of last measurement of the sequence of 30

ADEM:FM:OFFS? AVER

Reads FM offset averaged over 30 measurements

Mode:

ADEM

[SENSe:]ADEMod:MTIMe <Time>

This command defines the measurement time for analog demodulation.

Parameters:

<Time>

*RST: 62.5us

Example:

ADEM:MTIM 62.5us

Sets the measurement time to 62.5 µs.

Mode:

ADEM

[SENSe:]ADEMod:PM[:TDOMain][:TYPE] <Type>

This command selects the result types of the PM-demodulated signal to be created simultaneously.

Parameters:**<Type>**

*RST: OFF,OFF,OFF
<result type 1|2|3|4|5|6>: WRITe, AVERage, MAXHold, MINHold,
VIEW; for details see [chapter 2.3.6.1, "Trace Mode Result Types"](#), on page 116.

Example:

ADEM:PM AVER,MAXH,MINH, see [[SENSe: \]ADEMod:PM\[:TDOMain\] \[:TYPE\]](#) on page 130

Determines average, maximum and minimum value simultaneously

ADEM:PM WRIT,OFF,OFF

Determines only current measurement results

ADEM:PM OFF,OFF,OFF

Switches the PM demodulator off.

Mode:

ADEMODO

[SENSe:]ADEMod:PM[:TDOMain]:RESUlt <Type>

This command reads the result data of the PM demodulation for the specified result type. The data format of the output data is determined with the FORMat command.

Return values:**<Type>**

<result type>: WRITe, AVERage, MAXHold, MINHold; for details see [chapter 2.3.6.1, "Trace Mode Result Types"](#), on page 116. The specified result type must be one of those configured with the [[SENSe: \]ADEMod:PM\[:TDOMain\] \[:TYPE\]](#) command. Otherwise a query error will be generated.

Return values

ASCII Format (FORMat ASCII) or Binary Format (FORMat REAL, 32); for details see [chapter 2.3.6.2, "Formats for Returned Values: ASCII Format and Binary Format"](#), on page 117 .

Default unit: dB (logarithmic display) or RAD or DEG (linear display)

Example:	ADEM:SET 8MHz,32000,EXT,POS,-500,30, see [SENSe:] ADEMod:SET on page 135 Sets the demodulator parameters.
	ADEM:PM AVER,MAXH,MINH, see [SENSe:] ADEMod:PM[:TDOMain] [:TYPE] on page 130 Selects the PM results to be measured.
	ADEM:AM WRIT,OFF,OFF Selects the AM results to be measured.
	ADEM ON, see [SENSe:] ADEMod[:STATE] on page 118 Switches on the demodulator.
	INIT; WAI Starts the measurement and waits for termination.
	FORM ASC, see FORMat [:DATA] on page 180 Selects the output format.
	ADEM:PM:RES? AVER Reads the PM average result data.
	ADEM:PM:RES? MAXH Reads the PM maxhold result data.
	ADEM:PM:RES? MINH Reads the PM minhold result data.
	ADEM:AM:RES? WRIT Reads the current AM result data.
Mode:	ADEM

[SENSe:]ADEMod:PM:AFSPectrum[:TYPE] <Type>

This command selects the AF spectrum result types of the PM-demodulated signal to be measured simultaneously.

Parameters:

<Type>	*RST: OFF,OFF,OFF <result type 1 2 3 4 5 6>: WRITe, AVERage, MAXHold, MINHold, VIEW; for details see chapter 2.3.6.1, "Trace Mode Result Types", on page 116. The result type "AF spectrum of the PM demodulated signal" cannot be activated at the same time as "AF spectrum of AM or FM demodulated signal".
--------	----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

Example:

ADEM:PM:AFSP AVER,MAXH,MINH Determines average, maximum and minimum value simultaneously
ADEM:PM:AFSP WRIT,OFF,OFF Determines only current measurement results
ADEM:PM:AFSP OFF,OFF,OFF Switches calculation of AF spectrum off

Mode:

ADEMOD

[SENSe:]ADEMod:PM:AFSPectrUm:RESUlt <Type>

This command reads out the AF spectrum result data of the PM-demodulated signal for the specified result type. The data format of the output data is determined with the FORMat command.

Return values:

<Type>

<result type>: WRITe, AVERage, MAXHold, MINHold; for details see [chapter 2.3.6.1, "Trace Mode Result Types", on page 116](#). The specified result type must be one of those configured with the [\[SENSe:\]ADEMod:PM:AFSPectrUm\[:TYPE\]](#) on page 132 command. Otherwise a query error will be generated.

Return values

ASCII Format (FORMAT ASCII) or Binary Format (FORMAT REAL, 32); for details see [chapter 2.3.6.2, "Formats for Returned Values: ASCII Format and Binary Format", on page 117](#).

Default unit: dB (logarithmic display) or RAD or DEG (linear display)

Remote Commands of the Analog Demodulation (R&S FSV-K7)

Example:	ADEM:SET 8MHz,32000,EXT,POS,-500,30, see [SENSe:] ADEMod:SET on page 135 Sets demodulator
	ADEM:PM AVER,MAXH,MINH, see [SENSe:] ADEMod:PM[:TDOMain] [:TYPE] on page 130 Selects the PM results to be measured
	ADEM:AM:REL WRIT,OFF,OFF, see [SENSe:] ADEMod:FM: AFSPectrum[:TYPE] on page 128 Selects the AM results to be measured
	ADEM:PM:AFSP WRIT,OFF,OFF, see [SENSe:] ADEMod:PM: AFSPectrum[:TYPE] on page 132 Selects the AF spectrum results of the demodulated PM signal to be measured
	ADEM ON, see [SENSe:] ADEMod[:STATe] on page 118 Switches the demodulator on
	INIT; WAI Starts the measurement and waits for termination
	FORM ASC, see FORMat[:DATA] on page 180 Selects output format
	ADEM:PM:RES? AVER, see [SENSe:] ADEMod:PM: AFSPectrum:RESult on page 133 Reads PM average result data
	ADEM:PM:RES? MAXH, see [SENSe:] ADEMod:PM: AFSPectrum:RESult on page 133 Reads PM maxhold result data
	ADEM:PM:RES? MINH, see [SENSe:] ADEMod:PM: AFSPectrum:RESult on page 133 Reads PM minhold result data
	ADEM:AM:RES? WRIT, see [SENSe:] ADEMod:PM: AFSPectrum:RESult on page 133 Reads current AM result data
	ADEM:PM:AFSP:RES? WRIT Reads current AF spectrum result data of demodulated PM signal
Mode:	ADEM

[SENSe:]ADEMod:PM:RPOint[:X] <Time>

This command determines the position where the phase of the PM-demodulated signal is set to 0 rad. The maximum possible value depends on the measurement time selected in the instrument; this value is output in response to the query ADEM:PM:RPO:X? MAX.

Parameters:

<Time>	0 s to measurement time
*RST:	0 s

Example:

ADEM:PM:RPO 500us
Sets the position where the phase to 0 rad setting to 500 μ s.

Usage: SCPI confirmed

Mode: ADEM0D

[SENSe:]ADEMod:RLENgth?

This command returns the record length set up for the current analog demodulation measurement.

Example: ADEM:RLEN?
Returns the current record length.

Usage: Query only

Mode: ADEM0D

[SENSe:]ADEMod:SET <sample rate> | <record length> | <trigger source> | <trigger slope> | <offset samples> | <# of meas>

This command configures the analog demodulator of the instrument.

Parameters:

<sample rate>	numeric value The frequency at which measurement values are taken from the A/D-converter and stored in I/Q memory. Allowed range: refer to Sample Rate, Measurement Time and Trigger Offset . Note: for FM stereo measurements (K7S option), the sample rate is always 500 kHz (as the demodulation bandwidth is permanently set to 400 kHz). Thus, this parameter is ignored in this case. *RST: 8 MHz
<record length>	Number of samples to be stored in I/Q memory. Range: 1 to 400001 with AF filter or AF trigger active, 1 to 480001 with both AF filter and AF trigger deactive *RST: 501)
<trigger source>	Selection of the trigger source to use for the demodulator. IMMEDIATE EXTERNAL IFFPower RFPOWER AF AM AMRelative FM PM Note: After selecting IF Power, the trigger threshold can be set with the TRIGger<n>[:SEQUENCE]:LEVEL:IFFPower command. *RST: IMMEDIATE
<trigger slope>	POSitive NEGative Used slope of the trigger signal. The value indicated here will be ignored for <trigger source> = IMMEDIATE. *RST: POSITIVE

Remote Commands of the Analog Demodulation (R&S FSV-K7)

<offset samples> Number of samples to be used as an offset to the trigger signal.
 For details refer to [chapter 2.1.8, "Sample Rate, Measurement Time and Trigger Offset", on page 18](#).
 The value indicated here is ignored for <trigger source> = "IMMEDIATE".

*RST: 0

<# of meas> Number of repetitions of the measurement to be executed. The value indicated here is especially necessary for the average/max-hold/minhold function.

Range: 0 to 32767

*RST: 0

Example: ADEM:SET 8MHz,32000,EXT,POS,-500,30

Performs a measurement at:

sample rate = 8 MHz

record length = 32000

trigger source = EXternal

trigger slope = POSitive

offset samples = -500 (500 samples before trigger occurred)

of meas = 30

Mode: ADEM

[SENSe:]ADEMod:SPECtrum[:TYPE] <Type>

This command selects the result types to be created in parallel by the RF spectrum measurement with active analog demodulation.

Parameters:

<Type> *RST: OFF,OFF,OFF
 <result type 1|2|3|4|5|6>: WRITe, AVERage, MAXHold, MINHold, VIEW, OFF; for details see [chapter 2.3.6.1, "Trace Mode Result Types", on page 116](#).

Example: ADEM:SPEC AVER,MAXH,MINH

Creates average, max hold and min hold values at a time

ADEM:SPEC WRIT,OFF,OFF

Only creates the current measurement values

ADEM:SPEC OFF,OFF,OFF

Switches analog demodulator off

Mode: ADEM

[SENSe:]ADEMod:SPECtrum:BANDwidth|BWIDth[:RESolution] <Bandwidth>

This command sets the resolution bandwidth for the spectrum representation that was determined from the analog demodulation data.

The recording time required is calculated from the sampling rate indirectly set via [\[SENSe:\]ADEMod:SPECTrum:SPAN\[:MAXimum\]](#) on page 138 or [\[SENSe:\]ADEMod:BANDwidth|BWIDth:DEModulation](#) on page 126. If the available recording time is not sufficient for the given bandwidth, the recording time is set to its maximum and the resolution bandwidth is enlarged to the resulting bandwidth.

Parameters:

<Bandwidth>	refer to data sheet *RST: 61.2 kHz
Example:	ADEM ON, see [SENSe:]ADEMod[:STATe] on page 118 Switches on the analog demodulator CALC:FEED 'XTIM:SPEC', see CALCulate<n>:FEED on page 89 Switches on the RF spectrum result display or CALC:FEED 'XTIM:FM:AFSP', see CALCulate<n>:FEED on page 89 Switches on the AF spectrum result display of FM signal ADEM:SPEC:BAND 61.2kHz Sets the resolution bandwidth to 61.2 kHz.
Mode:	ADEM

[SENSe:]ADEMod:SPECTrum:RESUlt <Type>

This command reads out the RF spectrum result data for the specified result type. The data format of the output data block is defined by the FORMat command.

Return values:

<Type>	<result type>: WRITe, AVERage, MAXHold, MINHold; for details see chapter 2.3.6.1, "Trace Mode Result Types" , on page 116. The result type indicated must be one of those configured by [SENSe:]ADEMod:SPECTrum[:TYPE] on page 136. Otherwise a query error will be generated.
Return values	ASCII Format (FORMat ASCII) or Binary Format (FORMat REAL, 32); for details see chapter 2.3.6.2, "Formats for Returned Values: ASCII Format and Binary Format" , on page 117. The output units are described in CALCulate<n>:MARKer<m>:PEXCursion on page 102.

Remote Commands of the Analog Demodulation (R&S FSV-K7)

Example:	ADEM:SET 8MHz,32000,EXT,POS,-500,30, see [SENSe:ADEMod:SET on page 135] Sets demodulator ADEM:SPEC AVER,MAXH,MINH Selects RF spectrum results to be measured ADEM:SPEC WRIT,OFF,OFF Selects the AM results to be measured ADEM ON, see [SENSe:ADEMod[:STATE] on page 118] Switches the demodulator on INIT; WAI Starts the measurement and waits for termination FORM ASC, see [FORMAT[:DATA] on page 180] Selects output format ADEM:SPEC:RES? AVER Reads RF spectrum average results ADEM:SPEC:RES? MAXH Reads RF spectrum max hold results ADEM:SPEC:RES? MINH Reads RF spectrum min hold results ADEM:SPEC:RES? WRIT Reads spectrum current results
Mode:	ADEM

[SENSe:]ADEMod:SPECtrum:SPAN[:MAXimum] <FreqRange>

This command sets the maximum frequency range for displaying the RF spectrum that was determined from the FM demodulation data. The maximum span corresponds to the measurement bandwidth of analog demodulation (for details refer to [[SENSe:ADEMod:BANDwidth|BWIDth:DEModulation](#) on page 126]).

For details refer on the relation of bandwidth and sample rate refer to [Sample Rate, Measurement Time and Trigger Offset](#).

Parameters:

<FreqRange> *RST: 5 MHz

Example:

ADEM ON, see [[SENSe:ADEMod\[:STATE\]](#) on page 118]
Switches on the analog demodulator
CALC:FEED 'XTIM:SPEC', see [[CALCulate<n>:FEED](#) on page 89]
Switches on RF spectrum result display.
ADEM:SPEC:SPAN:MAX 5 MHz
Sets the max. span to 5 MHz
ADEM:SPEC:SPAN:ZOOM 1 MHz
Sets the displayed span to 1 MHz

Mode:

ADEMOD

[SENSe:]ADEMod:SPECtrum:SPAN:ZOOM <FreqRange>

This command sets the frequency range for the RF spectrum result display determined from analog demodulation data. The frequency range for result display is limited to the maximum span ([\[SENSe:\]ADEMod:SPECtrum:SPAN\[:MAXimum\] on page 138](#)) or to the measurement bandwidth of analog demodulation ([\[SENSe:\]ADEMod:BANDwidth|BWIDth:DEModulation on page 126](#)).

Parameters:

<FreqRange> *RST: 5 MHz

Example:

ADEM ON, see [\[SENSe:\]ADEMod\[:STATe\] on page 118](#)

Switches on the analog demodulator

CALC:FEED 'XTIM:SPEC', see [CALCulate<n>:FEED on page 89](#)

Switches on RF spectrum result display.

ADEM:SPEC:SPAN:MAX 5 MHz, see [\[SENSe:\]ADEMod:SPECtrum:SPAN\[:MAXimum\] on page 138](#)

Sets the maximum span to 5 MHz

ADEM:SPEC:SPAN:ZOOM 1 MHz

Sets displayed span to 1 MHz

Mode:

ADEM

[SENSe:]ADEMod:SQUelch[:STATe] <State>

This command activates the squelch function, i.e. if the signal falls below a defined threshold (see [\[SENSe:\]ADEMod:SQUelch:LEVel on page 139](#)), the demodulated data is automatically set to 0.

Parameters:

<State> ON | OFF

*RST: OFF

Example:

DEM:SQU ON

Signals below the level threshold are squelched.

Usage:

SCPI confirmed

Mode:

A, ADEM, SFM

[SENSe:]ADEMod:SQUelch:LEVel <Threshold>

This command defines the level threshold below which the demodulated data is set to 0 if squelching is enabled (see [\[SENSe:\]ADEMod:SQUelch\[:STATe\] on page 139](#)).

Parameters:

<Threshold> numeric value

The absolute threshold level

Range: -150 dBm to 30 dBm

*RST: -40 dBm

Example:	DEM:SQU:LEV -80 If the signal drops below -80 dBm, the demodulated data is set to 0.
Usage:	SCPI confirmed
Mode:	ADEMODO, SFM

[SENSe:]ADEMod:SRATe?

This command returns the sample rate set up for the current analog demodulation measurement.

Example:	ADEM:SRAT? Returns the current sample rate.
Usage:	Query only
Mode:	ADEMODO

[SENSe:]ADEMod<n>:ZOOM[:STATe] <State>

The command enables or disables the zoom function for the analog-demodulated measurement data in the specified window. Depending on the selected measurement time and the demodulation bandwidth, the number of recorded test points may be greater than that shown on the display.

If the zoom function is enabled, the default number of sweep points in "Spectrum" mode of the result memory are displayed from the specified start time with [\[SENSe:\]ADEMod<n>:ZOOM:STARt](#) on page 140.

If the zoom function is disabled, data reduction is used to adapt the test points to the number of points available on the display.

Suffix:	
<n>	1...4 window

Parameters:	
<State>	ON OFF
	*RST: OFF

Example:	ADEM:ZOOM ON Switches on the zoom function
Mode:	ADEMODO

[SENSe:]ADEMod<n>:ZOOM:STARt <Time>

The command selects the start time for the display of individual measured values of the analog demodulation in the specified window. The maximum possible value depends on the measurement time, which is set in the instrument and can be queried with the [\[SENSe:\]ADEMod:MTIME](#) on page 130 command.

If the zoom function is enabled, the default number of sweep points in "Spectrum" mode of the result memory are displayed from the specified start time with [\[SENSe:\] ADEMod<n>:ZOOM:START](#) on page 140.

Suffix:

<n> 1...4
 window

Parameters:

<Time> *RST: 0 s
 0 s to measurement time – (default number of sweep points in "Spectrum" mode – 1 * 1/sample rate)

Example:

ADEM:ZOOM:STAT ON (see [\[SENSe:\] ADEMod<n>:ZOOM\[:STATE\]](#) on page 140)
Switches on the zoom function
ADEM:ZOOM:STAR 500us
Sets the starting point of the display to 500 µs.

Mode:

ADEMOD

[SENSe:]ADEMod<n>:ZOOM:LENGth <Length>

The command allows you to define the length of the zoom area for the analog-demodulated measurement data in the specified window manually. If the length is defined manually using this command, the zoom mode is also set to manual.

Suffix:

<n> 1...4
 window

Parameters:

<Length> *RST: sweep time
 Length of the zoom area in seconds.

Example:

ADEM:ZOOM:LENG 2s
Zoom mode is set to manual and the zoom length to 2 seconds.

Mode:

ADEMOD

[SENSe:]ADEMod<n>:ZOOM:LENGth:MODE <Mode>

The command defines whether the length of the zoom area for the analog-demodulated measurement data is defined automatically or manually in the specified window. By default and in automatic mode, the number of sweep points is used as the zoom length. If the zoom length was already entered using [\[SENSe:\] ADEMod<n>:ZOOM:LENGth](#) on page 141, manual zoom mode is set automatically.

Suffix:

<n> 1...4
 window

Parameters:

<Mode> AUTO | MAN
 *RST: AUTO

Example:

ADEM:ZOOM:LENG:MODE MAN
 Zoom function uses the length defined manually.

Mode:

ADEM

2.3.6.4 SENSe:ADJust Subsystem

The ADJust subsystem controls automatic definition of frequency and level settings.

[SENSe:]ADJust:ALL.....	142
[SENSe:]ADJust:CONFIGuration:HYSTerisis:LOWer.....	142
[SENSe:]ADJust:CONFIGuration:HYSTerisis:UPPer.....	143
[SENSe:]ADJust:CONFigure:LEVel:DURation.....	143
[SENSe:]ADJust:FREQuency.....	143
[SENSe:]ADJust:LEVel.....	143
[SENSe:]ADJust:SCALe:Y:AUTO[:CONTinuous].....	144

[SENSe:]ADJust:ALL

Activates all automatic settings:

- Frequency
- Level

Example:

ADJ:ALL

Mode:

A, ADEM, CDMA, EVDO, PHN, TDS, WCDMA

[SENSe:]ADJust:CONFIGuration:HYSTerisis:LOWer <Threshold>

This command defines a lower threshold the signal must drop below before the reference level is automatically adjusted when the "Auto Level" function is performed.

(See [\[SENSe:\]ADJust:LEVel](#) on page 143).

Parameters:

<Threshold> Range: 0 to 200
 *RST: +1 dB
 Default unit: dB

Example:

SENS:ADJ:CONF:HYST:LOW 2

Example:

For an input signal level of currently 20 dBm, the reference level will only be adjusted when the signal level falls below 18 dBm.

Mode:

A, ADEM, BT, SFM, CDMA, EVDO, PHN, TDS, WCDMA, VSA

[SENSe:]ADJJust:CONFiguration:HYSTeresis:UPPer <Threshold>

This command defines an upper threshold the signal must exceed before the reference level is automatically adjusted when the "Auto Level" function is performed.

(See [\[SENSe:\]ADJJust:LEVel](#) on page 143).

Parameters:

<Threshold>	Range: 0 to 200
	*RST: +1 dB
	Default unit: dB

Example:

SENS:ADJ:CONF:HYST:UPP 2

For an input signal level of currently 20 dBm, the reference level will only be adjusted when the signal level rises above 22 dBm.

Mode:

A, ADEMODO, BT, SFM, CDMA, EVDO, PHN, TDS, WCDMA, VSA

[SENSe:]ADJJust:CONFigure:LEVel:DURation <Duration>

Defines the duration of the level measurement used to determine the optimal reference level automatically (for SENS:ADJ:LEV ON).

Parameters:

<Duration>	<numeric value> in seconds
	Range: 0.001 to 16000.0
	*RST: 0.001
	Default unit: s

Example:

ADJ:CONF:LEV:DUR:5

Mode:

A, ADEMODO, CDMA, EVDO, TDS, VSA, WCDMA

[SENSe:]ADJJust:FREQuency

Defines the center frequency automatically by determining the highest level in the frequency span.

Example:

ADJ:FREQ

Mode:

A, ADEMODO, CDMA, EVDO, PHN, TDS, WCDMA

[SENSe:]ADJJust:LEVel

This command automatically sets the optimal reference level for the current measurement.

You can define a threshold that the signal must exceed before the reference level is adjusted, see [\[SENSe:\]ADJJust:CONFiguration:HYSTeresis:UPPer](#) on page 143 and [\[SENSe:\]ADJJust:CONFiguration:HYSTeresis:LOWER](#) on page 142.

Example:

ADJ:LEV

Mode: A, ADEM0D, CDMA, EVDO, PHN, TDS, WCDMA

[SENSe:]ADJJust:SCALe:Y:AUTO[:CONTinuous] <state>

Activates automatic scaling of the y-axis. Currently auto-scaling is only available for AF measurements. RF power and RF spectrum measurements are not affected by the auto-scaling.

Parameters:

<state>	ON OFF *RST: OFF
---------	-----------------------

Example: SENS1:ADJ:SCAL:Y:AUTO ON

Mode: ADEM0D, SFM

2.3.6.5 SENSe:BANDwidth Subsystem (Analog Demodulation, R&S FSV-K7)

This subsystem controls the setting of the instruments filter bandwidths. Both groups of commands (BANDwidth and BWIDth) perform the same functions.

[SENSe:]BANDwidth BWIDth:DEMod.....	144
[SENSe:]BANDwidth:DEMod:TYPE.....	144

[SENSe:]BANDwidth|BWIDth:DEMod <Bandwidth>

This command sets the bandwidth for analog demodulation. Depending on the selected demodulation bandwidth, the instrument selects the required sampling rate.

The available values of the demodulation bandwidths are determined by the sampling rates. For details on the correlation between demodulation bandwidth and sampling rate refer to [chapter 2.1.8, "Sample Rate, Measurement Time and Trigger Offset", on page 18](#).

Parameters:

<Bandwidth>	*RST: 5 MHz
-------------	-------------

Example: BAND:DEM 1MHz
Sets test bandwidth to 1 MHz

Mode: A-F, ADEM0D

[SENSe:]BANDwidth:DEMod:TYPE <FilterType>

This command defines the type of demodulation filter to be used.

Parameters:

<FilterType>	FLAT
--------------	-------------

Standard flat demodulation filter

GAUSS

Gaussian filter for optimized settling behaviour

*RST:	FLAT
-------	------

Example: BAND:DEM:TYPE GAUS
Selects the Gaussian filter.

Mode: ADEM0D

2.3.6.6 SENSe:FILTter Subsystem (Analog Demodulation, R&S FSV-K7)

The SENSe:FILTter subsystem selects the filters to reduce the bandwidth of the demodulated signal. The selected filters are used for AM, FM and PM demodulation in common.



Using the commands in the SENSe:FILTter subsystem you can define filter settings for each window individually. Note, however, that if the same modulation type is used in several windows, the settings defined for that modulation are used in all the corresponding windows.

Commands of the SENSe:FILTter subsystem

[SENSe:]FILTter<n>:AOFF	145
[SENSe:]FILTter<n>:AWEighted[:STATe]	145
[SENSe:]FILTter<n>:CCIT	146
[SENSe:]FILTter<n>:CCIR[:UNWeighted][:STATe]	146
[SENSe:]FILTter<n>:CCIR:WEIGHTed[:STATe]	147
[SENSe:]FILTter<n>:DEMPhasis[:STATe]	147
[SENSe:]FILTter<n>:DEMPhasis:TCONstant	147
[SENSe:]FILTter<n>:HPASs[:STATe]	148
[SENSe:]FILTter<n>:HPASs:FREQuency	148
[SENSe:]FILTter<n>:LPASs[:STATe]	148
[SENSe:]FILTter<n>:LPASS:FREQuency[:ABSolute]	149
[SENSe:]FILTter<n>:LPASS:FREQuency:RELative	149

[SENSe:]FILTter<n>:AOFF

This command switches all AF filters in the specified window off.

Suffix:

<n> 1...4
 window

Example: SENS:FILT:AOFF

Usage: Event

Mode: ADEM0D, SFM

[SENSe:]FILTter<n>:AWEighted[:STATe] <State>

This command activates/deactivates the "A" weighting filter in the specified window.

For details on the A weighted filter see "[A Weighted](#)" on page 31.

Suffix:

<n> 1...4
window

Parameters:

<State> ON | OFF
*RST: OFF

Example:

FILT:AWE ON
Activates the A weighting filter.

Mode:

ADEMOP

[SENSe:]FILTer<n>:CCIT <State>

This command activates/deactivates the CCITT (CCITT P.53) weighting filter in the specified window.

For details on the CCITT filter see "[CCITT](#)" on page 30.

Suffix:

<n> 1...4
window

Parameters:

<State> ON | OFF
*RST: OFF

Example:

FILT:CCIT ON
Activates the CCITT weighting filter.

Mode:

ADEMOP

[SENSe:]FILTer<n>:CCIR[:UNWeighted][:STATe] <State>

This command activates/deactivates the unweighted CCIR filter in the specified window.

For details on the unweighted CCIR filter see "[CCIR Unweighted](#)" on page 30.

Suffix:

<n> 1...4
window

Parameters:

<State> ON | OFF
*RST: OFF

Example:

FILT:CCIR:UNW ON
Activates the unweighted CCIR filter.

Mode:

ADEMOP

[SENSe:]FILTer<n>:CCIR:WEIGHTed[:STATe] <State>

This command activates/deactivates the weighted CCIR filter in the specified window.

For details on the weighted CCIR filter see "["CCIR Weighted"](#)" on page 31.

Suffix:

<n> 1...4
 window

Parameters:

<State> ON | OFF
 *RST: OFF

Example: FILT:CCIR:WEIG ON

Activates the weighted CCIR filter.

Mode: ADEM0D

[SENSe:]FILTer<n>:DEMPhasis[:STATe] <State>

This command activates/deactivates the selected deemphasis in the specified window.

For details about deemphasis refer to "["Deemphasis"](#)" on page 31.

Suffix:

<n> 1...4
 window

Parameters:

<State> ON | OFF
 *RST: OFF

Example: FILT:DEMP ON

Activates the selected deemphasis.

Mode: ADEM0D

[SENSe:]FILTer<n>:DEMPhasis:TCONstant

This command selects the deemphasis in the specified window.

For details on deemphasis refer to "["Deemphasis"](#)" on page 31.

For details on the demodulation bandwidth range refer to "["Demod BW"](#)" on page 28.

Suffix:

<n> 1...4
 window

Parameters:

25 us | 50 us | 75 us | 750 us
 *RST: 50 us

Example: FILT:DEMP:TCON 750us
Selects the deemphasis for the demodulation bandwidth range from 800 Hz to 4 MHz with a time constant of 750 µs.

Mode: ADEM0D

[SENSe:]FILTer<n>:HPASs[:STATe] <State>

This command activates/deactivates the selected high pass filter in the specified window.
For details on the high pass filter refer to "[High Pass](#)" on page 29.

Suffix:

<n> 1...4
window

Parameters:

<State> ON | OFF
*RST: OFF

Example: FILT:HPAS ON
Activates the selected high pass filter.

Mode: ADEM0D

[SENSe:]FILTer<n>:HPASs:FREQuency <FilterType>

This command selects the high pass filter type in the specified window. For details on filters refer to "[High Pass](#)" on page 29.

For details about the demodulation bandwidth range refer to "[Demod BW](#)" on page 28.

Suffix:

<n> 1...4
window

Parameters:

<FilterType> Range: 50 to 300
*RST: 300Hz
Default unit: Hz

Example: FILT:HPAS:FREQ 300Hz
Selects the high pass filter for the demodulation bandwidth range from 800 Hz to 16 MHz.

Mode: ADEM0D

[SENSe:]FILTer<n>:LPASs[:STATe] <State>

This command activates/deactivates the selected low pass filter in the specified window.
For details on the low pass filter refer to "[Low Pass](#)" on page 29.

Suffix:

<n> 1...4
 window

Parameters:

<State> ON | OFF
 *RST: OFF

Example:

FILT:LPAS ON
Activates the selected low pass filter.

Mode:

ADEMOP

[SENSe:]FILTer<n>:LPASs:FREQuency[:ABSolute] <FilterType>

This command selects the absolute low pass filter type in the specified window. For details on filters refer to "["Low Pass"](#) on page 29.

For details about the demodulation bandwidth range refer to "["Demod BW"](#) on page 28.

Suffix:

<n> 1...4
 window

Parameters:

<FilterType> 3kHz | 15kHz | 150kHz
 *RST: 15kHz

Example:

FILT:LPAS:FREQ 150kHz
Selects the low pass filter for the demodulation bandwidth range from 400 kHz to 16 MHz.

Mode:

ADEMOP

[SENSe:]FILTer<n>:LPASs:FREQuency:RELative <FilterType>

This command selects the relative low pass filter type in the specified window. For details on filters refer to ["Low Pass"](#) softkey.

For details about the demodulation bandwidth range refer to "["Demod BW"](#) on page 28.

Suffix:

<n> 1...4
 window

Parameters:

<FilterType> 5PCT | 10PCT | 25PCT
 *RST: 25PCT

Example:

FILT:LPAS:FREQ 25PCT
Selects the low pass filter as 25 % of the demodulation bandwidth.

Mode:

ADEMOP

2.3.6.7 SENSe:FREQuency Subsystem (Analog Demodulation, R&S FSV-K7)

The SENSe:FREQuency subsystem defines the frequency axis of the active display. The frequency axis can either be defined via the start/stop frequency or via the center frequency and span.

[SENSe:]FREQuency:CENTER.....	150
[SENSe:]FREQuency:CENTER:STEP[:VALue].....	150
[SENSe:]FREQuency:CENTER:STEP:LINK.....	150
[SENSe:]FREQuency:CENTER:STEP:LINK:FACTOr.....	151

[SENSe:]FREQuency:CENTER <Frequency>

This command defines the center frequency of the analyzer or the measuring frequency for span = 0.

Parameters:

<Frequency>	Range: 0 to fmax *RST: fmax/2 Default unit: Hz f_{\max} is specified in the data sheet. min span is 10 Hz
-------------	----------------------------------------------------------------------------------------------------------------------

Example: FREQ:CENT 100 MHz

Mode: all

[SENSe:]FREQuency:CENTER:STEP[:VALue] <StepSize>

This command defines the step size of the center frequency.

Parameters:

<StepSize>	Range: 1 to fmax *RST: 0.1 x Default unit: Hz
------------	------------------------------------------------------------------

Example: FREQ:CENT:STEP 120 MHz

Mode: all

[SENSe:]FREQuency:CENTER:STEP:LINK <CouplingType>

This command couples the step size of the center frequency to span (span >0) or to the resolution bandwidth (span = 0) or cancels the couplings.

Parameters:

<CouplingType> OFF | SPAN | RBW

SPAN

coupling to frequency display range (for span > 0)
(for RF spectrum result display)

RBW

coupling to resolution bandwidth (for span = 0)
(for all result displays except RF spectrum)

OFF

manual input, no coupling

*RST: SPAN

Example:

FREQ:CENT:STEP:LINK SPAN

Mode:

A, ADEMODO, CDMA, EVDO, TDS, WCDMA

[SENSe:]FREQuency:CENTER:STEP:LINK:FACTOr <Value>

This command couples the step size of the center frequency with a factor to the span (span >0) or to the resolution bandwidth (span = 0).

Parameters:

<Value> 1 to 100 PCT

*RST: 10

Example:

FREQ:CENT:STEP:LINK:FACT 20PCT

Mode:

A, ADEMODO, CDMA, EVDO, TDS, WCDMA

2.3.6.8 SENSe:SWEep Subsystem (Analog Demodulation, R&S FSV-K7)

The SENSe:SWEep subsystem controls the sweep parameters.

[SENSe:]SWEep:COUNt.....	151
[SENSe:]SWEep:EGATe:HOLDoff.....	152
[SENSe:]SWEep:EGATe:POLarity.....	152
[SENSe:]SWEep:EGATe:SOURce.....	152
[SENSe:]SWEep:EGATe:TYPE.....	153
[SENSe:]SWEep:POINts.....	153
[SENSe:]SWEep:TIME.....	153

[SENSe:]SWEep:COUNt <NumberSweeps>

This command defines the number of sweeps started with single sweep, which are used for calculating the average or maximum value. If the values 0 or 1 are set, one sweep is performed.

Parameters:

<NumberSweeps> 0 to 32767

*RST: 0 (GSM: 200, PHN:1)

Example:	SWE:COUN 64 Sets the number of sweeps to 64.
	INIT:CONT OFF Switches to single sweep mode.
	INIT;*WAI Starts a sweep and waits for its end.
Mode:	A, ADEMODO, BT, CDMA, EVDO, PHN, TDS, WCDMA, GSM, NF

[SENSe:]SWEEp:EGATe:HOLDoff <DelayTime>

This command defines the delay time between the external gate signal and the continuation of the sweep.

Note: Using gate mode "level" (see [\[SENSe:\] SWEEp:EGATe:TYPE](#) on page 153) and an IFP trigger (see [TRIGger<n>\[:SEQUence\]:SOURce](#) on page 163), the holdoff time for the IFP trigger is ignored for frequency sweep, FFT sweep, zero span and IQ mode measurements.

Parameters:

<DelayTime>	0 s to 30 s
	*RST: 0s

Example: SWE:EGAT:HOLD 100us**Mode:** A, ADEMODO, BT, EVDO, TDS**[SENSe:]SWEEp:EGATe:POLarity <Polarity>**

This command determines the polarity of the external gate signal. The setting applies both to the edge of an edge-triggered signal and the level of a level-triggered signal.

Parameters:

<Polarity>	POSitive NEGative
	*RST: POSitive

Example: SWE:EGAT:POL POS**Mode:** A, ADEMODO, BT, EVDO, TDS, WCDMA**[SENSe:]SWEEp:EGATe:SOURce <Source>**

This command toggles between the available signal sources for the gate mode. If an IF power signal is used, the gate is opened as soon as a signal at > -20 dBm is detected within the IF path bandwidth (10 MHz).

For details see the "[Trigger Source](#)" on page 61 softkey.

Parameters:

<Source>	EXTernal IFPower VIDeo RFPower PSEN
	*RST: IFPower

Example: SWE:EGAT:SOUR IFP
Switches the gate source to IF power.

Mode: A, ADEMODO, BT, EVDO, TDS, WCDMA, CDMA

[SENSe:]SWEEp:EGATE:TYPE <Type>

This command sets the type of triggering by the external gate signal.

A delay between applying the gate signal and the start of recording measured values can be defined, see [\[SENSe:\] SWEEp:EGATE:HOLDoff](#) on page 152.

Parameters:

<Type> LEVel | EDGE

LEVel

The gate is level-triggered:

After detection of the gate signal, the gate remains open until the gate signal disappears. The gate opening time cannot be defined with the command [\[SENSe:\] SWEEp:EGATE:HOLDoff](#).

Note: Using gating with gate mode "level" and an IFP trigger (see [TRIGger<n>\[:SEQUence\]:SOURce](#) on page 163), the holdoff time for the IFP trigger is ignored for frequency sweep, FFT sweep, zero span and IQ mode measurements.

EDGE

The gate is edge-triggered:

After detection of the set gate signal edge, the gate remains open until the gate delay ([\[SENSe:\] SWEEp:EGATE:HOLDoff](#)) has expired.

*RST: EDGE

Example: SWE:EGAT:TYPE EDGE

Mode: A, ADEMODO, BT, EVDO, TDS

[SENSe:]SWEEp:POINts <NumberPoints>

This command defines the number of measurement points to be collected during one sweep.

Parameters:

<NumberPoints> Range: 101 to 32001
*RST: 691

Example: SWE:POIN 251

Mode: A, ADEMODO, BT, CDMA, EVDO, TDS, NF, PHN, WCDMA

[SENSe:]SWEEp:TIME <Time>

This command defines the sweep time.

Parameters:

<Time>

Refer to [Instrument Functions Analog Demodulation \(R&S FSV-K7\) – Sample Rate, Measurement Time and Trigger Offset](#).**2.3.6.9 Other commands in the SENSe subsystem****[SENSe:]AVERage<n>:COUNT <NoMeasurements>**

This command defines the number of measurements which contribute to the average value in the window specified by the AVERage<n> suffix.

Note that continuous averaging is performed after the indicated number has been reached in continuous sweep mode.

In single sweep mode, the sweep is stopped as soon as the indicated number of measurements (sweeps) is reached. Synchronization to the end of the indicated number of measurements is only possible in single sweep mode.

This command has the same effect as the [SENSe<source>:] SWEep:COUNT command. In both cases, the number of measurements is defined whether the average calculation is active or not.

The number of measurements applies to all traces in the window.

Suffix:

<n>

window; For applications that do not have more than 1 measurement window, the suffix <n> is irrelevant.

Parameters:

<NoMeasurements> 0 to 32767

*RST: 0

Example:

SWE:CONT OFF

Switching to single sweep mode.

AVER:COUN 16

Sets the number of measurements to 16.

AVER:STAT ON

Switches on the calculation of average.

INIT;*WAI

Starts the measurement and waits for the end of the 16 sweeps.

Mode:

all

[SENSe:]AVERage<n>:TYPE <FunctionType>

This command selects the type of average function in the window specified by the AVERAGE<n> suffix.

Suffix:

<n>

window; For applications that do not have more than 1 measurement window, the suffix <n> is irrelevant.

Parameters:

<FunctionType>	VIDeo LINear POWer
VIDeo	The logarithmic power values are averaged.
LINear	The power values are averaged before they are converted to logarithmic values.
POWer	The power level values are converted into unit Watt prior to averaging. After the averaging, the data is converted back into its original unit.
*RST:	VIDeo
Example:	AVER:TYPE LIN Switches to linear average calculation.
Mode:	A, ADEMODO, BT, WCDMA

[SENSe:]**[WINDOW:]****DETector<trace>[:FUNCTION]** <Function>

This command switches on the detector for the data acquisition in the selected trace in the specified window.

Suffix:

<trace>	1...6 trace
---------	----------------

Parameters:

<Function>	APEak NEGative POSitive SAMPlE RMS AVERage QPEak
*RST:	APEak

For details on detectors refer to [chapter 2.1.7, "Detector Overview"](#), on page 17.

Example:

DET POS
Sets the detector to "positive peak".

Mode:

A, ADEMODO

[SENSe:]**[WINDOW:]****DETector<trace>[:FUNCTION]:AUTO** <State>

This command either couples the detector to the current trace setting or turns coupling off in the specified window.

Suffix:

<trace>	1...6 trace
---------	----------------

Parameters:

<State>	ON OFF
*RST:	ON

Example: DET:AUTO OFF

Mode: A, ADEM0D

2.3.7 TRACe Subsystem (Analog Demodulation, R&S FSV-K7)

The TRACe subsystem controls access to the instruments internal trace memory.

- | | |
|--------------------------------------------------------------------------|-----|
| 2.3.7.1 Commands of the TRACe subsystem..... | 156 |
| 2.3.7.2 Formats for Returned Values: ASCII Format and Binary Format..... | 157 |

2.3.7.1 Commands of the TRACe subsystem

TRACe<n>[:DATA]? <ResultType>

This command returns the current trace data or measurement results. In case of several result displays, you have to use specific parameters to query the results.

For details on saving and recalling data refer to the **MMEOrY** subsystem in the description of the base unit.

Suffix:

<n> 1...4

window; For applications that have only one measurement screen, the suffix is irrelevant.

Query parameters:

<ResultType> TRACE1 | TRACE2 | TRACE3 | TRACE4 | TRACE5 | TRACE6
Selects the type of result to be returned.

TRACE1 | ...| TRACE6

The query returns a list of results with one value for each sweep point in the currently set level unit.

For details see [table 2-4](#)

Example: TRAC? TRACE1

Returns the trace data for Trace 1.

Usage: Query only

Mode: A, ADEM0D, BT, NF, PHN, TDS

Table 2-4: Results for <TRACe...> ResultTypes

<p>The query returns a list of results with one value for each sweep point in the currently set level unit. By default, the list contains 691 values. The currently used number of sweep points can be determined using SWE.POIN?, see [SENSe :] SWEep:POINts on page 153.</p>

FORMat REAL, 32 is used as format for binary transmission, and FORMat ASCii for ASCII transmission.

With the auto peak detector, only positive peak values can be read out.

In **IQ Analyzer mode**, if the result display configuration "Real/Imag (I/Q)" is selected, this query returns the I values of each trace point first, then the Q values:

<result>= I₁,I₂,...,I_n, Q₁,Q₂,...,Q_n

2.3.7.2 Formats for Returned Values: ASCII Format and Binary Format

ASCII Format (FORMAT ASCII)

The command reads out a list of comma separated values (CSV) of the measured values in floating point format.



Reading out data in binary format is quicker than in ASCII format. Thus, binary format is recommended for large amounts of data.

Binary Format (FORMAT REAL,32)

The command reads out binary data (Definite Length Block Data according to IEEE 488.2), each measurement value being formatted in 32 Bit IEEE 754 Floating-Point-Format.

Depending on the number of samples to be transferred, 2 different kinds of syntax are used:

For <10¹⁰ samples:

The schema of the result string is as follows:

#<NoOfDigits><NoOfDataBytes><value1><value2>...<value n>, with

#	Header prefix, 1 byte
<NoOfDigits>	Number of digits of the following number of data bytes (= 4 in the example), 1 byte
<NoOfDataBytes>	Number of following data bytes in decimal form (= 1024 in the example), 1...9 bytes
<Value>	Data values, each one is a 4-byte floating point value

Example:

#41024<value1><value2>...<value 256>

4: the following number of data bytes has 4 digits

1024: 1024 Bytes of following data; float: 4 Bytes / value => 1024 / 4 = 256 values (128 I and 128 Q values)

<value x>: 4 Byte values, must be interpreted as float

For ≥10¹⁰ samples:

The schema of the result string is as follows:

(<NoOfDataBytes>) <value1><value2>...<value n>, with

#	Header prefix, 1 byte
(1 byte
<NoOfDataBytes>	number of following data bytes (= 1024 in the example), 10 bytes

)	1 byte
<Value>	Data values, each one is a 4-byte floating point value

Example:

#(1677721600)<value 1><value 2> ... <value 419430400>

(1677721600): 1677721600 Bytes of following data; float: 4 Bytes / value ==>
1677721600/ 4 = 419430400 values (200Ms I and 200Ms Q values)

<value x>: 4 Byte values, must be interpreted as float

2.3.8 TRIGger Subsystem (Analog Demodulation, R&S FSV-K7)

The TRIGger subsystem is used to synchronize instrument actions with events. It is thus possible to control and synchronize the start of a sweep.

TRIGger<n>[:SEQUence]:BBPower:HOLDoff	158
TRIGger<n>[:SEQUence]:HOLDoff[:TIME]	159
TRIGger<n>[:SEQUence]:IFPower:HOLDoff	159
TRIGger<n>[:SEQUence]:IFPower:HYSTeresis	159
TRIGger<n>[:SEQUence]:LEVel:AM[:ABSolute]	160
TRIGger<n>[:SEQUence]:LEVel:AM:RELative	160
TRIGger<n>[:SEQUence]:LEVel:BBPower	160
TRIGger<n>[:SEQUence]:LEVel:FM	161
TRIGger<n>[:SEQUence]:LEVel:IFPower	161
TRIGger<n>[:SEQUence]:LEVel:RFPower	161
TRIGger<n>[:SEQUence]:LEVel:PM	161
TRIGger<n>[:SEQUence]:TIME:RINTerval	162
TRIGger<n>[:SEQUence]:LEVel:VIDeo	162
TRIGger<n>[:SEQUence]:SLOPe	162
TRIGger<n>[:SEQUence]:SOURce	163

TRIGger<n>[:SEQUence]:BBPower:HOLDoff <Value>

This command sets the holding time before the next BB power trigger event (for digital input via the R&S Digital I/Q Interface, R&S FSV-B17).

Suffix:

< n > irrelevant

Parameters:

<Value> *RST: 150 ns

Example:

TRIG:SOUR BBP

Sets the baseband

TRIG:BBP:HOLD 200 ns

58

TRIGger<n>[:SEQUence]:HOLDOff[:TIME] <Delay>

This command defines the length of the trigger delay.

A negative delay time (pretrigger) can be set in zero span only.

Suffix:

< n > irrelevant

Parameters:

<Delay> Range: zero span: -sweptime (see data sheet) to 30 s; span:
0 to 30 s
*RST: 0 s

Example: TRIG:HOLD 500us

Mode: All

TRIGger<n>[:SEQUence]:IFPower:HOLDoff <Value>

This command sets the holding time before the next IF power trigger event.

Suffix:

<np> irrelevant

Parameters:

<Value> *BST: 150 ns

Example: TRIG:SOUR IFP
Sets the IF power trigger source.
TRIG:IFP:HOLD 200 ns
Sets the holding time to 200 ns.

Mode: A-F, ADEM0D, CDMA, EVDO, GSM, VSA, OFDM, OFDMA/WiBro, TDS, WCDMA, WLAN

TRIGger<n>[:SEQquence1:]IFPower:HYSTeresis <Value>

This command sets the limit that the hysteresis value for the IF power trigger has to fall below in order to trigger the next measurement.

Suffix-

$\langle n \rangle$ irrelevant

Parameters:

<Value> *BST: 3 dB

Example: TRIG:SOUR IFP
Sets the IF power trigger source.
TRIG:IFP:HYST 10DB
Sets the hysteresis limit value.

Mode: All

TRIGger<n>[:SEQUence]:LEVel:AM[:ABSolute] <Level>

The command sets the level when RF power signals are used as trigger source.

For triggering with AF, AM, AMRelative, FM, and PM trigger sources to be successful, the measurement time must cover at least 5 periods of the audio signal.

Suffix:

n irrelevant

Parameters:

<Level> Range: -100 to +30
 *RST: -20 dBm
 Default unit: dBm

Example:

TRIG:LEV:AM -30 dBm

Sets the RF power signal trigger threshold to -30 dBm

Mode:

ADEMOP

TRIGger<n>[:SEQUence]:LEVel:AM:RELative <Level>

The command sets the level when AM-modulated signals are used as trigger source.

For triggering with AF, AM, AMRelative, FM, and PM trigger sources to be successful, the measurement time must cover at least 5 periods of the audio signal.

Suffix:

n irrelevant

Parameters:

<Level> Range: -100 to +100
 *RST: 0 %
 Default unit: %

Example:

TRIG:LEV:AM:REL -20 %

Sets the AM trigger threshold to -20 %

Mode:

ADEMOP

TRIGger<n>[:SEQUence]:LEVel:BBPower <Level>

This command sets the level of the baseband power trigger source (for digital input via the R&S Digital I/Q Interface, R&S FSV-B17).

Suffix:

<n> irrelevant

Parameters:

<Level> Range: -50 dBm to +20 dBm
 *RST: -20 DBM

Example:

TRIG:LEV:BB -30 DBM

Mode:

All

TRIGger<n>[:SEQUence]:LEVel:FM <Level>

The command sets the level when FM-modulated signals are used as trigger source.

For triggering with AF, AM, AMRelative, FM, and PM trigger sources to be successful, the measurement time must cover at least 5 periods of the audio signal.

Suffix:

<n> irrelevant

Parameters:

<Level> Range: -10 to +10
*RST: 0 Hz
Default unit: MHz

Example:

TRIG:LEV:FM 10 kHz
Sets the FM trigger threshold to 10 kHz

Mode: ADEMOM

TRIGger<n>[:SEQUence]:LEVel:IFPower <TriggerLevel>

This command sets the level of the IF power trigger source.

Suffix:

<n> irrelevant

Parameters:

<TriggerLevel> -50 to +20 dBm
*RST: -20 dBm

Example:

TRIG:LEV:IFP -30dBm

Mode: All

TRIGger<n>[:SEQUence]:LEVel:RFPower <TriggerLevel>

This command sets the level of the RF power trigger source.

Suffix:

<n> irrelevant

Parameters:

<TriggerLevel> Range: -50 to -10 dBm
*RST: -20 dBm

Example:

TRIG:LEV:RFP -30dBm

Mode: A, ADEMOM, FMS, OFDM, OFDM/WiBro, WLAN

TRIGger<n>[:SEQUence]:LEVel:PM <Level>

The command sets the level when PM-modulated signals are used as trigger source.

For triggering with AF, AM, AMRelative, FM, and PM trigger sources to be successful, the measurement time must cover at least 5 periods of the audio signal.

Suffix:

n irrelevant

Parameters:

<Level> Range: -1000 to +1000
 *RST: 0 RAD
 Default unit: RAD | DEG

Example:

TRIG:LEV:PM 1.2 RAD

Sets the PM trigger threshold to 1.2 rad

Mode:

ADEMOM

TRIGger<n>[:SEQUence]:TIME:RINTerval <Interval>

This command sets the repetition interval for the time trigger source.

Suffix:

<n> irrelevant

Parameters:

<Interval> 2.0 ms to 5000
 *RST: 1.0

Example:

TRIG:SOUR TIME

Selects the time trigger input for triggering.

TRIG:TIME:RINT 50

The sweep starts every 50 s.

Mode:

All

TRIGger<n>[:SEQUence]:LEVel:VIDeo <Value>

This command sets the level of the video trigger source.

Suffix:

<n> irrelevant

Parameters:

<Value> 0 to 100 PCT
 *RST: 50 PCT

Example:

TRIG:LEV:VID 50PCT

Mode:

all, except ADEMOM

TRIGger<n>[:SEQUence]:SLOPe <Type>

This command selects the slope of the trigger signal. The selected trigger slope applies to all trigger signal sources.

Suffix:

<n> irrelevant

Parameters:

<Type> POSitive | NEGative
*RST: POSitive

Example: TRIG:SLOP NEG

Mode: all

TRIGger<n>[:SEQUence]:SOURce <Source>

This command selects the trigger source for the start of a sweep.

For triggering with AF, AM, AMRelative, FM, and PM trigger sources to be successful, the measurement time must cover at least 5 periods of the audio signal. For details on trigger modes refer to the [Trigger Source](#) softkey.

For details on trigger modes refer to the "Trg/Gate Source" softkey in the base unit description.

Suffix:

<n> irrelevant

Parameters:**<Source>****IMMEDIATE**

Free Run

EXTERN

External trigger

IFPOWER

Second intermediate frequency

TIME

Time interval

GP0 | GP1 | GP2 | GP3 | GP4 | GP5

For I/Q Analyzer or AnalogDemod mode only:

Defines triggering of the measurement directly via the LVDS connector. The parameter specifies which general purpose bit (0 to 5) will provide the trigger data.

This trigger mode is available for input from the R&S Digital I/Q Interface (option R&S FSV-B17) only.

The assignment of the general purpose bits used by the Digital IQ trigger to the LVDS connector pins is provided in [table 2-5](#)**VIDEO**

Video mode is only available in the time domain and only in Spectrum mode.

BBPOWER

Baseband power (for digital input via the R&S Digital I/Q Interface, R&S FSV-B17)

PSEN

External power sensor (requires R&S FSV-K9 option)

AF

AF power signal

FM

FM power signal

AM

corresponds to the RF power signal

AMRELATIVE

corresponds to the AM signal

PM

PM power signal

*RST: IMMEDIATE

Example:

TRIG:SOUR EXT

Selects the external trigger input as source of the trigger signal

Mode:

ALL

Table 2-5: Assignment of general purpose bits to LVDS connector pins

Bit	LVDS pin
GP0	SDATA4_P - Trigger1
GP1	SDATA4_P - Trigger2

Bit	LVDS pin
GP2	SDATA0_P - Reserve1
GP3	SDATA4_P - Reserve2
GP4	SDATA0_P - Marker1
GP5	SDATA4_P - Marker2

2.3.9 UNIT Subsystem (Analog Demodulation, R&S FSV-K7)

UNIT:ANGLE <Unit>

This command selects the unit for angles (e.g. for PM display).

The unit is defined globally for all windows.

Suffix:

<n> irrelevant

Parameters:

<Unit>	DEG RAD
	*RST: RAD

Example: UNIT:ANGL DEG

Mode: ADEMOT, SFM

UNIT:POWer <Unit>

This command selects the unit for power.

The unit is defined globally for all windows.

Suffix:

<n> irrelevant

Parameters:

<Unit>	DBM V A W DBPW WATT DBUV DBMV VOLT DBUA AMPere
	*RST: dBm

Example: UNIT:POW DBM
Sets the power unit to dBm.

Mode: A, ADEMOT, SFM, SPECM

UNIT:THD <Mode>

Selects the unit for THD measurements.

Parameters:

<Mode> DB | PCT
 *RST: DB

Example: UNIT:THD PCT

Mode: ADEMODO, SFM

2.3.10 Other Commands Referenced in this Manual

2.3.10.1 CALCulate:DELTamarker Subsystem (Analog Demodulation, R&S FSV-K7)

The CALCulate:DELTamarker subsystem controls the delta marker functions of the instrument.

CALCulate<n>:DELTamarker<m>:FUNCTION:FIXed:RPOint:MAXimum[:PEAK].....	166
CALCulate<n>:DELTamarker<m>:FUNCTION:FIXed:RPOint:X.....	167
CALCulate<n>:DELTamarker<m>:FUNCTION:FIXed:RPOint:Y.....	167
CALCulate<n>:DELTamarker<m>:FUNCTION:FIXed[:STATE].....	168
CALCulate<n>:DELTamarker<m>:FUNCTION:PNOise[:STATE].....	168
CALCulate<n>:DELTamarker<m>:FUNCTION:PNOise:AUTO.....	169
CALCulate<n>:DELTamarker<m>:LINK.....	169
CALCulate<n>:DELTamarker<m>:MREF.....	170
CALCulate<n>:DELTamarker<m>[:STATE].....	170
CALCulate<n>:DELTamarker<m>:TRACe.....	171
CALCulate<n>:DELTamarker<m>:X.....	171
CALCulate<n>:DELTamarker<m>:X:RELative.....	171
CALCulate<n>:DELTamarker<m>:Y.....	172

CALCulate<n>:DELTamarker<m>:FUNCTION:FIXed:RPOint:MAXimum[:PEAK] <Value>

For a measurement with a fixed reference point (see [CALCulate<n>:DELTamarker<m>:FUNCTION:FIXed\[:STATE\]](#) on page 168), this command sets the reference point level for all delta markers in the window specified by the suffix <n> to the peak of the selected trace.

For phase-noise measurements see ([CALCulate<n>:DELTamarker<m>:FUNCTION:PNOise\[:STATE\]](#) on page 168), the command defines a new reference point level for delta marker 2.

Suffix:

<n> window; For applications that do not have more than 1 measurement window, the suffix <n> is irrelevant.
 <m> marker number

Parameters:

<Value>

Example:	CALC:DELT:FUNC:FIX:RPO:MAX Sets the reference point level for delta markers to the peak of the selected trace.
Mode:	A, ADEMODO, EVDO

CALCulate<n>:DELTamarker<m>:FUNCTION:FIXed:RPOint:X <Reference>

For a measurement with a fixed reference value (see [CALCulate<n>:DELTamarker<m>:FUNCTION:FIXed\[:STATE\]](#) on page 168), this command defines a new frequency reference (span > 0) or time (span = 0) for all delta markers in the window specified by the suffix <n>.

For phase-noise measurements (see [CALCulate<n>:DELTamarker<m>:FUNCTION:PNOise:AUTO](#) on page 169), the command defines a new frequency reference or time for delta marker 2.

Suffix:

<n>	window; For applications that do not have more than 1 measurement window, the suffix <n> is irrelevant.
<m>	marker number

Parameters:

<Reference>	<numeric_value>
	*RST: ("CALCulate<n>:DELTamarker<m>:FUNCTION:FIXed" is set to OFF)

Example:

CALC:DELT:FUNC:FIX:RPO:X 128 MHz
Sets the frequency reference to 128 MHz.

Mode:

A, ADEMODO, EVDO, TDS, WCDMA

CALCulate<n>:DELTamarker<m>:FUNCTION:FIXed:RPOint:Y <RefPointLevel>

For a measurement with a fixed reference point ([CALCulate<n>:DELTamarker<m>:FUNCTION:FIXed\[:STATE\]](#)), this command defines a new reference point level for all delta markers in the window specified by the suffix <n>.

For phase-noise measurements ([CALCulate<n>:DELTamarker<m>:FUNCTION:PNOise\[:STATE\]](#) on page 168), the command defines a new reference point level for delta marker 2.

Suffix:

<n>	window; For applications that do not have more than 1 measurement window, the suffix <n> is irrelevant.
<m>	marker number

Parameters:

<RefPointLevel>	<numeric_value>
	*RST: ("CALCulate<n>:DELTamarker<m>:FUNCTION:FIXed" is set to OFF)

Example:	CALC:DELT:FUNC:FIX:RPO:Y -10dBm Sets the reference point level for delta markers to -10 dBm.
Mode:	A, ADEMOM, EVDO, TDS, WCDMA

CALCulate<n>:DELTamarker<m>:FUNCTION:FIXed[:STATe] <State>

This command switches the relative measurement to a fixed reference value on or off. Marker 1 is activated previously and a peak search is performed, if necessary. If marker 1 is activated, its position becomes the reference point for the measurement. The reference point can then be modified with the [CALCulate<n>:DELTamarker<m>:FUNCTION:FIXed:RPOint:X](#) commands and [CALCulate<n>:DELTamarker<m>:FUNCTION:FIXed:RPOint:Y](#) independently of the position of marker 1 and of a trace. It applies to all delta markers in the window specified by the suffix <n> as long as the function is active.

Suffix:

<n>	window; For applications that do not have more than 1 measurement window, the suffix <n> is irrelevant.
<m>	marker number

Parameters:

<State>	ON OFF
*RST:	OFF

Example:

CALC:DELT:FUNC:FIX ON
Switches on the measurement with fixed reference value for all delta markers.
CALC:DELT:FUNC:FIX:RPO:X 128 MHZ
Sets the frequency reference to 128 MHz.
CALC:DELT:FUNC:FIX:RPO:Y 30 DBM
Sets the reference level to +30 dBm.

Mode:

A, ADEMOM, EVDO, TDS, WCDMA

CALCulate<n>:DELTamarker<m>:FUNCTION:PNoise[:STATe] <State>

This command switches on or off the phase-noise measurement with all active delta markers in the window specified by the suffix <n>. The correction values for the bandwidth and the log amplifier are taken into account in the measurement.

Marker 1 is activated, if necessary, and a peak search is performed. If marker 1 is activated, its position becomes the reference point for the measurement.

The reference point can then be modified with the [CALCulate<n>:DELTamarker<m>:FUNCTION:FIXed:RPOint:X](#) and [CALCulate<n>:DELTamarker<m>:FUNCTION:FIXed:RPOint:Y](#) commands independently of the position of marker 1 and of a trace (the same commands used for the measurement with fixed reference point).

Suffix:

<n> window; For applications that do not have more than 1 measurement window, the suffix <n> is irrelevant.

<m> irrelevant

Note: marker 2 is always the deltamarker for phase noise measurement results.

Parameters:

<State> ON | OFF

*RST: OFF

Example:

CALC:DELT:FUNC:PNO ON

Switches on the phase-noise measurement with all delta markers.

CALC:DELT:FUNC:FIX:RPO:X 128 MHZ

Sets the frequency reference to 128 MHz.

CALC:DELT:FUNC:FIX:RPO:Y 30 DBM

Sets the reference level to +30 dBm

Mode:

A, ADEMOM, CDMA, EVDO, TDS, WCDMA, SPECM

CALCulate<n>:DELTamarker<m>:FUNCTION:PNOise:AUTO <State>

This command activates an automatic peak search for the reference fixed marker 1 at the end of each particular sweep in the window specified by the suffix <n>.

Suffix:

<n> window; For applications that do not have more than 1 measurement window, the suffix <n> is irrelevant.

<m> irrelevant

Parameters:

<State> ON | OFF

*RST: OFF

Example:

CALC:DELT:FUNC:PNO:AUTO ON

Activates an automatic peak search for the reference marker in a phase-noise measurement.

Mode:

A, ADEMOM, CDMA, EVDO, TDS, WCDMA, SPECM

CALCulate<n>:DELTamarker<m>:LINK <State>

This command links delta marker 1 to marker 1. If you change the horizontal position of the marker, so does the delta marker.

Suffix:

<n> window; For applications that do not have more than 1 measurement window, the suffix <n> is irrelevant.

<m> 1
irrelevant

Parameters:

<State> ON | OFF

*RST: OFF

Example: CALC:DELT:LINK ON**Mode:** A, ADEMODO, CDMA, EVDO, TDS, WCDMA, SPECM VSA**CALCulate<n>:DELTamarker<m>:MREF <RefMarkerNo>**

This command defines the reference marker for the selected delta marker. The marker values for the delta marker are indicated relative to the specified reference marker.

The reference marker can either be another active marker, or a fixed reference marker (FIXed, see [CALCulate<n>:DELTamarker<m>:FUNCTION:FIXed\[:STATE\]](#) on page 168).

Suffix:

<n> window; For applications that do not have more than 1 measurement window, the suffix <n> is irrelevant.

<m> marker number

Parameters:

<RefMarkerNo> 1 to 16 or FIXed

Example: CALC:DELT3:MREF 2

Specifies that the values of delta marker 3 are relative to marker 2.

Mode: All**CALCulate<n>:DELTamarker<m>[:STATE] <State>**

This command defines the marker specified by the suffix <m> as a delta marker for the window specified by the suffix <n>. If the corresponding marker was not already active, it is activated and positioned on the maximum of the measurement curve.

If no suffix is given for DELTamarker, delta marker 1 is selected automatically.

Suffix:

<n> window; For applications that do not have more than 1 measurement window, the suffix <n> is irrelevant.

<m> marker number

Parameters:

<State> ON | OFF

*RST: OFF

Example: CALC:DELT1 ON

Switches marker 1 to delta marker mode.

Mode: All

CALCulate<n>:DELTamarker<m>:TRACe <TraceNumber>

This command assigns the selected delta marker to the indicated trace in the window specified by the suffix <n>. The selected trace must be active, i.e. its state must be different from "BLANK".

Suffix:

<n> window; For applications that do not have more than 1 measurement window, the suffix <n> is irrelevant.

<m> marker number

Parameters:

<TraceNumber> **1 to 6**

Selects trace 1 through 6.

Example:

CALC:DELT3:TRAC 2

Assigns delta marker 3 to trace 2.

Mode:

A, ADEMODO, CDMA, EVDO, PHN, TDS, WCDMA, SPECM, RT, VSA

CALCulate<n>:DELTamarker<m>:X <Position>

This command positions the selected delta marker to the indicated value in the window specified by the suffix <n>. The input is in absolute values.

Suffix:

<n> window; For applications that do not have more than 1 measurement window, the suffix <n> is irrelevant.

<m> marker number

Parameters:

<Position> 0 to maximum frequency or sweep time

Example:

CALC:DELT:X?

Outputs the absolute frequency/time of delta marker 1.

Mode:

A, ADEMODO, CDMA, EVDO, PHN, TDS, WCDMA, VSA

CALCulate<n>:DELTamarker<m>:X:RELative

This command queries the x-value of the selected delta marker relative to marker 1 or to the reference position (for CALC:DELT:FUNC:FIX:STAT ON) in the window specified by the suffix <n>. The command activates the corresponding delta marker, if necessary.

Suffix:

<n> window; For applications that do not have more than 1 measurement window, the suffix <n> is irrelevant.

<m> marker number

Example: CALC:DELT3:X:REL?
Outputs the frequency of delta marker 3 relative to marker 1 or relative to the reference position.

Mode: A, ADEMOT, CDMA, EVDO, TDS, WCDMA, VSA

CALCulate<n>:DELTamarker<m>:Y?

This command queries the measured value of the selected delta marker in the specified window. The corresponding delta marker is activated, if necessary. The output is always a relative value referred to marker 1 or to the reference position (reference fixed active).

To obtain a correct query result, a complete sweep with synchronization to the sweep end must be performed between the activation of the delta marker and the query of the y value. This is only possible in single sweep mode.

Depending on the unit defined with CALC:UNIT:POW or on the activated measuring functions, the query result is output in the units below:

Table 2-6: Analog demodulation measurements

Parameter, measuring function or result display	Output unit
AM result display (R&S FSV-K7)	% (lin) dB (log)
FM result display (R&S FSV-K7)	Hz (lin) dB (log)
PM result display (R&S FSV-K7)	rad deg (lin) dB (log)
RF result display (R&S FSV-K7)	dB (Range Log or Range Linear %) % (Range Linear %)

Suffix:

<n> window; For applications that do not have more than 1 measurement window, the suffix <n> is irrelevant.

<m> marker number

Example: INIT:CONT OFF
Switches to single sweep mode.
INIT; *WAI
Starts a sweep and waits for its end.
CALC:DELT2 ON
Switches on delta marker 2.
CALC:DELT2:Y?
Outputs measurement value of delta marker 2.

Usage: Query only

Mode: A, ADEMOT, BT, CDMA, EVDO, TDS, WCDMA, VSA

2.3.10.2 INPut subsystem

INPut:ATTenuation.....	173
INPut:ATTenuation:AUTO.....	173
INPut:COUPling.....	174
INPut:DIQ:CDEVice.....	174
INPut:DIQ:RANGE:COUPLing.....	175
INPut:DIQ:RANGE[:UPPer].....	176
INPut:DIQ:RANGE[:UPPer]:UNIT.....	176
INPut:DIQ:SRAte.....	176
INPut:EATT.....	177
INPut:EATT:AUTO.....	177
INPut:GAIN:STATe	177
INPut:IMPedance.....	178
INPut:SElect.....	178

INPut:ATTenuation <Value>

This command programs the input attenuator. To protect the input mixer against damage from overloads, the setting 0 dB can be obtained by entering numerals, not by using the DOWN command.

The attenuation can be set in 5 dB steps (with option R&S FSV-B25: 1 dB steps). If the defined reference level cannot be set for the set RF attenuation, the reference level is adjusted accordingly.

In the default state with "Spectrum" mode, the attenuation set on the step attenuator is coupled to the reference level of the instrument. If the attenuation is programmed directly, the coupling to the reference level is switched off.

This function is not available if the R&S Digital I/Q Interface (R&S FSV-B17) is active.

Parameters:

<Value> *RST: 10 dB (AUTO is set to ON)

Example:

INP:ATT 30dB

Sets the attenuation on the attenuator to 30 dB and switches off the coupling to the reference level.

Mode:

all

INPut:ATTenuation:AUTO <State>

This command automatically couples the input attenuation to the reference level (state ON) or switches the input attenuation to manual entry (state OFF).

This function is not available if the R&S Digital I/Q Interface (R&S FSV-B17) is active.

Parameters:

<State> ON | OFF

*RST: ON

Example: INP:ATT:AUTO ON
Couples the attenuation set on the attenuator to the reference level.

Mode: All

INPut:COUPLing <CouplingType>

Toggles the RF input of the R&S FSV between AC and DC coupling.

This function is not available if the R&S Digital I/Q Interface (R&S FSV-B17) is active.

Parameters:

<CouplingType> AC | DC
*RST: AC

Example: INP:COUP:DC

Mode: A, ADEMOM, BTS, CDMA, EVDO, TDS, VSA, WCDMA

INPut:DIQ:CDEVice

This command queries the current configuration and the status of the digital baseband input from the optional R&S Digital I/Q Interface (option R&S FSV-B17).

For details see the section "Interface Status Information" for the R&S Digital I/Q Interface (R&S FSV-B17) in the description of the base unit.

Return values:

<ConnState>	Defines whether a device is connected or not. 0 No device is connected. 1 A device is connected.
<DeviceName>	Device ID of the connected device
<SerialNumber>	Serial number of the connected device
<PortName>	Port name used by the connected device
<SampleRate>	Maximum or currently used sampling rate of the connected device in Hz (depends on the used connection protocol version; indicated by <SampleRateType> parameter)
<MaxTransferRate>	Maximum data transfer rate of the connected device in Hz

<ConnProtState>	State of the connection protocol which is used to identify the connected device. Not Started Has to be Started Started Passed Failed Done
<PRBSTestState>	State of the PRBS test. Not Started Has to be Started Started Passed Failed Done
<SampleRateType>	0 Maximum sampling rate is displayed 1 Current sampling rate is displayed
<Placeholder>	for future use; currently "0"
Example:	INP:DIQ:CDEV? Result: 1,SMU200A,103634,Out A,70000000,100000000,Passed,Not Started,0,0
Mode:	IQ, VSA, EVDO, CDMA, WCDMA, GSM, ADEMOT, TDS

INPut:DIQ:RANGE:COUPLing <State>

If enabled, the reference level for digital input is adjusted to the full scale level automatically if the fullscale level changes.

This command is only available if the optional R&S Digital I/Q Interface (option R&S FSV-B17) is installed.

For details see the R&S Digital I/Q Interface (R&S FSV-B17) description of the base unit.

Parameters:

<State>	ON OFF
---------	----------

*RST:	OFF
-------	-----

Example:	INP:DIQ:RANG:COUP OFF
-----------------	-----------------------

Mode:	IQ, VSA, EVDO, CDMA, WCDMA, GSM, ADEMOT, TDS
--------------	----------------------------------------------

INPut:DIQ:RANGE[:UPPer] <Level>

Defines or queries the "Full Scale Level", i.e. the level that should correspond to an I/Q sample with the magnitude "1".

It can be defined either in dBm or Volt (see "[Full Scale Level](#)" on page 76).

This command is only available if the optional R&S Digital I/Q Interface (option R&S FSV-B17) is installed.

For details see the R&S Digital I/Q Interface (R&S FSV-B17) description of the base unit.

Parameters:

<Level> <numeric value>

Range: 70.711 nV to 7.071 V

*RST: 1 V

Example: INP:DIQ:RANG 1V

Mode: A, IQ, NF, TDS, VSA, CDMA, EVDO, WCDMA, ADEM, GSM, OFDM, OFDMA/WiBro, WLAN

INPut:DIQ:RANGE[:UPPer]:UNIT <Unit>

Defines the unit of the full scale level (see "[Level Unit](#)" on page 76). The availability of units depends on the measurement application you are using.

This command is only available if the optional R&S Digital I/Q Interface (option R&S FSV-B17) is installed.

For details see the R&S Digital I/Q Interface (R&S FSV-B17) description of the base unit.

Parameters:

<Level> V | dBm | dBpW | W | dBmV | dBuV | dBuA | A

*RST: Volt

Example: INP:DIQ:RANG:UNIT A

Mode: IQ, VSA, EVDO, CDMA, WCDMA, GSM, ADEM, TDS

INPut:DIQ:SRATE <SampleRate>

This command specifies or queries the sample rate of the input signal from the R&S Digital I/Q Interface (see "[Input Sample Rate](#)" on page 76).

Note: the final user sample rate of the R&S FSV may differ and is defined using SENSe:ADEM:SRATE (see [[SENSe:](#)] ADEM:SRATE on page 140).

This command is only available if the optional R&S Digital I/Q Interface (option R&S FSV-B17) is installed.

For details see the R&S Digital I/Q Interface (R&S FSV-B17) description of the base unit.

Parameters:

<SampleRate> Range: 1 Hz to 10 GHz
 *RST: 32 MHz

Example: INP:DIQ:SRAT 200 MHz

Mode: A, IQ, NF, TDS, VSA, CDMA, EVDO, WCDMA, ADEMOM, GSM, OFDM, OFDMA/WiBro, WLAN

INPut:EATT <Attenuation>

Requires option R&S FSV-B25.

Switches the electronic attenuator on (if not already active) and allows the attenuation of the electronic attenuator to be set.

This command is only available with option R&S FSV-B25, but not if R&S FSV-B17 is active.

The attenuation can be varied in 1 dB steps from 0 to 25 dB. Other entries are rounded to the next lower integer value.

If the defined reference level cannot be set for the given RF attenuation, the reference level is adjusted accordingly and the warning "Limit reached" is output.

Parameters:

<Attenuation> 0...25
 *RST: 0 dB (OFF)

Example: INP1:EATT 10 dB

Mode: all

INPut:EATT:AUTO <State>

Switches the automatic behaviour of the electronic attenuator on or off. If activated, electronic attenuation is used to reduce the operation of the mechanical attenuation whenever possible.

This command is only available with option R&S FSV-B25, but not if R&S FSV-B17 is active.

Parameters:

<State> ON | OFF
 *RST: ON

Example: INP1:EATT:AUTO OFF

Mode: all

INPut:GAIN:STATe <State>

This command switches the preamplifier on or off (only for option RF Preamplifier, R&S FSV-B22/B24).

With option R&S FSV-B22, the preamplifier only has an effect below 7 GHz.

With option R&S FSV-B24, the amplifier applies to the entire frequency range.

This command is not available when using R&S Digital I/Q Interface (R&S FSV-B17).

Parameters:

<State> ON | OFF

*RST: OFF

Example:

INP:GAIN:STAT ON

Switches on 20 dB preamplification.

Mode: A, ADEMODO, BT, CDMA, EVDO, NF, PHN, WCDMA, GSM, VSA, TDS

INPut:IMPedance <Value>

This command sets the nominal input impedance of the instrument. The set impedance is taken into account in all level indications of results.

The setting $75\ \Omega$ should be selected, if the $50\ \Omega$ input impedance is transformed to a higher impedance using a $75\ \Omega$ adapter of the RAZ type (= $25\ \Omega$ in series to the input impedance of the instrument). The correction value in this case is $1.76\ \text{dB} = 10 \log(75\Omega/50\Omega)$.

This function is not available if the R&S Digital I/Q Interface (R&S FSV-B17) is active.

Parameters:

<Value> 50 | 75

*RST: $50\ \Omega$

Example: INP:IMP 75

Mode: all

INPut:SELect <Source>

This command selects the signal source for measurements.

Parameters:

<Source> RF | DIQ

RF

Radio Frequency ("RF INPUT" connector)

DIQ

Digital IQ (only available with R&S Digital I/Q Interface, option R&S FSV-B17)

*RST: RF

Example: INP:SEL RF

Mode: A, IQ, NF, TDS, VSA, CDMA, EVDO, WCDMA, ADEMODO, GSM, OFDM, OFDMA/WiBro, WLAN

2.3.10.3 MMEMory subsystem

MMEMory:STORe<n>:LIST <FileName>

This command stores the current list evaluation results in a <file name>.dat file. The file consists of a data section containing the list evaluation results.

Suffix:

<n> irrelevant

Parameters:

<FileName> <file name>

Example:

MMEM:STOR:LIST 'test'

Stores the current list evaluation results in the test.dat file.

Mode:

A, ADEMODO, CDMA, EVDO, NF, TDS, WCDMA

OUTPut:IF[:SOURce] <Source>

This command switches the source of the IF output between the demodulated signal and the IF signal.

Parameters:

<Source> IF | VIDeo

IF

intermediate frequency output

VIDeo

video output, 200 mV

*RST: IF

Example:

OUTP:IF VID

Selects the video signal for the IF output connector.

Mode:

A

MMEMory:STORe<n>:TRACe <Trace>, <FileName>

This command stores the selected trace in the specified window in a file with ASCII format. The file format is described in [chapter 2.1.10, "ASCII File Export Format", on page 23](#)

The decimal separator (decimal point or comma) for floating-point numerals contained in the file is defined with the **FORMAT:DDEXPort:DSEParator** command (see [FORMAT:DDEXPort:DSEParator on page 181](#)).

Suffix:

<n> window; For applications that do not have more than 1 measurement window, the suffix <n> is irrelevant.

Parameters:

<Trace> 1 to 6

selected measurement trace

<FileName> DOS file name
The file name includes indication of the path and the drive name.
Indication of the path complies with DOS conventions.

Example: MMEM:STOR:TRAC 3, 'TEST.ASC'
Stores trace 3 in the file TEST.ASC.

Mode: all

2.3.10.4 OUTPut subsystem

OUTPut:DIQ <State>

If enabled, the captured IQ data is output to the R&S Digital I/Q Interface in a continuous stream. This function requires the LVDS interface option (R&S FSV-B17).

Digital input and digital output cannot be used simultaneously.

Parameters:

<State> **ON | OFF**
*RST: OFF

Example: OUTP:DIQ ON

Mode: ADEM, IQ, VSA

OUTPut:TRIGger <PortLevel>

Sets the Trigger Out port in the Additional Interfaces (option B5 only) to low or high. Thus, you can trigger an additional device via the external trigger port, for example.

Parameters:

<PortLevel> **LOW | HIGH**
*RST: LOW

Example: OUTP:TRIG HIGH

Mode: A

2.3.10.5 Other Commands

FORMAT[:DATA] <Format>

This command specifies the data format for the data transmitted from the instrument to the control PC. It is used for the transmission of trace data. The data format of trace data received by the instrument is automatically recognized, regardless of the format which is programmed.

(See also [TRACe<n> \[:DATA\]](#) on page 156).

Parameters:

<Format> ASCII | REAL

ASCII

ASCII data are transmitted in plain text, separated by commas.

REAL

REAL data are transmitted as 32-bit IEEE 754 floating-point numbers in the "definite length block format".

*RST: ASCII

Example:

FORM REAL, 32

FORM ASC

Mode:

all

FORMAT:DEXPort:DSEParator <Separator>

This command defines which decimal separator (decimal point or comma) is to be used for outputting measurement data to the file in ASCII format. Different languages of evaluation programs (e.g. MS-Excel) can thus be supported.

Parameters:

<Separator> POINT | COMMA

*RST: (factory setting is POINT; *RST does not affect setting)

Example:

FORM:DEXP:DSEP POINT

Sets the decimal point as separator.

Mode:

all

DIAGnostic<n>:SERVice:NSource <State>

This command switches the 28 V supply of the noise source on or off.

Suffix:

<n> irrelevant

Parameters:

<State> ON | OFF

*RST: OFF

Example:

DIAG:SERV:NSO ON

Mode:

all

INITiate<n>:CONMeas

This command restarts a measurement that has been stopped in single sweep mode.

The measurement is restarted at the first sweep point.

With sweep count > 0 or average count > 0, this means a restart of the indicated number of measurements. With trace functions MAXHold, MINHold and AVERage, the previous results are reset on restarting the measurement.

In single sweep mode, you can synchronize to the end of the measurement with *OPC, *OPC? or *WAI. In continuous sweep mode, synchronization to the end of the measurement is not possible. Thus, it is not recommended that you use continuous sweep mode in remote control, as results like trace data or markers are only valid after a single sweep end synchronization.

Suffix:

<n> irrelevant

Example:

INIT:CONT OFF

Switches to single sweep mode.

DISP:WIND:TRAC:MODE AVER

Switches on trace averaging.

SWE:COUN 20

Setting the sweep counter to 20 sweeps.

INIT;*WAI

Starts the measurement and waits for the end of the 20 sweeps.

Mode:

all

SYSTem:DISPlay:UPDate <State>

In remote control mode, this command switches on or off the instrument display. If switched on, only the diagrams, traces and display fields are displayed and updated.

The best performance is obtained if the display output is switched off during remote control.

Parameters:

<State> ON | OFF

*RST: OFF

Example:

SYST:DISP:UPD ON

Mode:

all

3 FM Stereo Option R&S FSV-K7S

The firmware option "FM Stereo" extends the "Analog Demodulation" option K7 to handle FM stereo signals. The "FM Stereo" mode requires an instrument equipped with the corresponding optional software, as well as the Analog Demodulation option (K7).

This section contains all information required for operation of an R&S FSV equipped with Application Firmware R&S FSV-K7S. It covers operation via menus and the remote control commands for FM stereo analog demodulation measurements.

- [chapter 3.1, "Instrument Functions FM Stereo \(R&S FSV-K7S\)", on page 184](#) shows all softkeys available in the "FM Stereo" menu. This chapter also presents the remote control commands associated with each softkey function.
- The following chapters describe the softkeys of the other keys for the FM Stereo option.
- [chapter 3.2, "Remote Commands of the FM Stereo Option \(R&S FSV-K7S\)", on page 224](#) describes all remote control commands defined for the FM Stereo option.

This part of the documentation includes only additional functions of the Application Firmware R&S FSV-K7S. For all other descriptions, please refer to the description of the Analog Demodulation option K7 (see [chapter 2.2.1, "Softkeys of the Analog Demodulation Menu \(R&S FSV-K7\)", on page 24](#)).

3.1 Instrument Functions FM Stereo (R&S FSV-K7S)

The firmware option R&S FSV-K7S (together with the Analog Demodulation option K7) provides the necessary measurement functions to demodulate FM stereo signals. It allows you to detect and analyze characteristic data in an FM stereo signal.

To open the FM Stereo menu

- If the "FM Stereo" mode is not the active measurement mode, press the MODE key and select the "FM Stereo" softkey.
- If the "FM Stereo" mode is already active, press the HOME key or the MEAS key. The "FM Stereo" menu is displayed.

Menu and softkey description

The following softkey menus are specific to the FM Stereo option:

- [chapter 3.1.2, "Softkeys of the FM Stereo Menu - MEAS key \(K7S\)", on page 188](#)
- [chapter 3.1.3, "Softkeys of the Amplitude Menu – AMPT Key \(R&S FSV-K7S\)", on page 202](#)
- [chapter 3.1.6, "Softkeys of the Marker Function Menu – MKR FUNC Key \(R&S FSV-K7S\)", on page 217](#)
- [chapter 3.1.5, "Softkeys of the Trigger Menu – TRIG Key \(R&S FSV-K7S\)", on page 212](#)

Apart from the power measurement menu (MEAS key) that is not available in the "FM Stereo" mode, all other menus not described here are provided as described for Analog Demodulation mode (R&S FSV-K7). For details refer to the corresponding menu descriptions.

- [chapter 2.2.2, "Softkeys of the Frequency Menu – FREQ Key \(R&S FSV-K7\)", on page 38](#)
- [chapter 2.2.3, "Softkeys of the Span Menu – SPAN Key \(R&S FSV-K7\)", on page 40](#)
- [chapter 2.2.5, "Softkeys of the Auto Set menu - AUTO SET Key \(R&S FSV-K7\)", on page 47](#)
- [chapter 2.2.7, "Softkeys of the Sweep Menu – SWEEP Key \(R&S FSV-K7\)", on page 53](#)
- [chapter 2.2.8, "Softkeys of the Trace Menu – TRACE key \(R&S FSV-K7\)", on page 55](#)
- [chapter 2.2.10, "Softkeys of the Marker Menu – MKR key \(R&S FSV-K7\)", on page 65](#)

To display help to a softkey, press the HELP key and then the softkey for which you want to display help. To close the help window, press the ESC key. For further information refer to [chapter 1.3, "How to Use the Help System", on page 8](#).

Further Information

• chapter 2.1.8, "Sample Rate, Measurement Time and Trigger Offset", on page 18		
• chapter 3.1.1, "Measurement Result Display (FM Stereo)", on page 185		
3.1.1	Measurement Result Display (FM Stereo).....	185
3.1.2	Softkeys of the FM Stereo Menu - MEAS key (K7S).....	188
3.1.3	Softkeys of the Amplitude Menu – AMPT Key (R&S FSV-K7S).....	202
3.1.4	Softkeys of the Bandwidth Menu – BW Key (R&S FSV-K7S).....	208
3.1.5	Softkeys of the Trigger Menu – TRIG Key (R&S FSV-K7S).....	212
3.1.6	Softkeys of the Marker Function Menu – MKR FUNC Key (R&S FSV-K7S).....	217

3.1.1 Measurement Result Display (FM Stereo)

In FM Stereo mode, the measurement results can be displayed in up to 4 different screens (windows), plus an additional marker table, if applicable. Each screen shows either the measurement results as a diagram or the results of evaluation functions in a table ("Result Summary").

All displays are determined by the I/Q data set recorded for the measurement.

You can define the display configuration for up to 4 different screens at once using the ["Display Config" on page 189](#) softkey.

Screen configuration

For each screen you can define:

- **Off:** Whether it is displayed or not
- **Summary:** Whether a result summary for all screens is displayed instead of a diagram
- **RF Diagrams:** Whether an RF diagram is displayed; these displays correspond to those for Analog Demodulation mode (R&S FSV-K7, see [chapter 2.1.9, "Measurement Result Display"](#), on page 20)
- **FM Stereo Diagrams: For which channel a time domain or spectrum diagram is displayed**

Diagram types

The following diagram types can be selected for display.

- **RF Time Domain**

Selects the display of the RF power in zero span. In contrast to normal analyzer operation, the level values are the magnitude of the I/Q data set.

SCPI command:

CALC:FEED 'XTIM:RFP' (see [CALCulate<n>:FEED](#) on page 89)

- **RF Spectrum**

Selects the display of the RF signal in span > 0. In contrast to normal spectrum analyzer operation, the measured values are determined using FFT from the recorded I/Q data set.

SCPI command:

CALC:FEED 'XTIM:SPECTRUM' (see [CALCulate<n>:FEED](#) on page 89)

- **<FM Stereo Channel Type> Time Domain**

Selects the display of the channel power in zero span. In contrast to normal analyzer operation, the level values are the magnitude of the I/Q data set.

SCPI command:

CALC:FEED 'XTIM:SFM:<ChannelType>', e.g. CALC:FEED 'XTIM:SFM:LEFT' (see [CALCulate<n>:FEED](#) on page 89)

- **<FM Stereo Channel Type> Spectrum**

Selects the display of the channel signal in span > 0. In contrast to normal spectrum analyzer operation, the measured values are determined using FFT from the recorded I/Q data set.

SCPI command:

CALC:FEED 'XFR:SFM:<ChannelType>', e.g. CALC:FEED 'XFR:SFM:LEFT' (see [CALCulate<n>:FEED](#) on page 89)

Diagram header information

For each diagram, the header provides the following information:



1. Screen A/B/C/D
2. Channel type
3. Trace color
4. Trace number
5. Detector
6. Trace mode
7. Reference value

Diagram footer information

In addition to the used frequency and span information, the diagram footer also indicates the used weighting filter, if any, in FM stereo mode.

Result Summary

The result summary displays the results of the evaluation functions for all channels in a table.

D Result Summary							
		Carrier Power: -30.00 dBm	Carrier Freq: 15.0 GHz	Ref Deviation: 54.305 kHz			
		Cross Talk: -2.87 dB					
	Detector	Result Mode	Dev.	Rel. to Ref.	Mod. Freq.	SINAD	THD
Left	±Peak/2	Clear Write	54.305 kHz	0.00 dB	1.0000 kHz	70.88 dB	-92.99 dB
Right	±Peak/2	Clear Write	39.010 kHz	-2.87 dB	3.0000 kHz	67.95 dB	-97.02 dB
MPX	±Peak/2	Clear Write	73.596 kHz	2.64 dB	3.0000 kHz	1.98 dB	-85.42 dB
Mono	±Peak/2	Clear Write	36.336 kHz	-3.49 dB	1.0000 kHz	4.68 dB	-4.68 dB
Stereo	±Peak/2	Clear Write	63.823 kHz	1.40 dB	3.0000 kHz		
RDS	±Peak/2	Clear Write	2.046 kHz	-28.48 dB			
Pilot	±Peak/2	Clear Write	7.508 kHz	-17.19 dB	19.000 kHz		



Summaries that take up the entire width of the screen are displayed as tables; if only half the screen width is available (2 windows next to each other), the summary is displayed as a list. Thus, the factory-set predefined screen configurations contain only 3 screens: 2 for diagrams and one full-width screen for the summary.

For each channel, the following information is provided:

Label	Description
Detector	Selected detector type
Result Mode	Selected result mode
Dev.	Deviation
Rel. to Ref.	Relative to reference
Mod. Freq.	Modulation frequency

Label	Description
SINAD	<p>Signal-to-noise and distortion</p> <p>Measures the ratio of the total power to the power of noise and harmonic distortions. The noise and harmonic power is calculated inside the AF spectrum span. The DC offset is removed before the calculation.</p> $SINAD[dB] = 20 \cdot \log \left[\frac{\text{total power}}{\text{noise + distortion power}} \right]$
THD	<p>Total harmonic distortion</p> <p>The ratio of the harmonics to the fundamental and harmonics. All harmonics inside the AF spectrum span are considered up to the tenth harmonic.</p> $THD[dB] = 20 \cdot \log \left[\frac{\sqrt{\sum_{i=2}^{\infty} U_i^2}}{\sqrt{\sum_{i=1}^{\infty} U_i^2}} \right]$

In addition, the following general information for the input signal is provided:

- Carrier Power
- Carrier Frequency
- Reference Deviation
- Cross Talk (difference between left and right signal in dB), see also
`CALCulate<n>:MARKer:FUNCTION:SFM:<ChannelType>[:RESULT<m>]`
on page 230

3.1.2 Softkeys of the FM Stereo Menu - MEAS key (K7S)

This section describes all softkeys available in the "FM Stereo" menu.

Left.....	189
└ Display Config.....	189
└ Screen A-D.....	190
└ Predefined.....	191
└ Add.....	191
└ Apply.....	191
└ Remove.....	191
└ Restore.....	191
└ Close.....	191
└ Result Summary Setup.....	192
└ Detector.....	193
└ Mode.....	193
└ Coupled.....	193
└ Meas To Ref.....	194
└ Meas Time.....	194

L AF Filter.....	194
L High Pass.....	194
L Low Pass.....	195
L Weighting.....	195
L None.....	196
L CCITT.....	196
L CCIR Unweighted.....	196
L CCIR Weighted.....	196
L A Weighted.....	196
L Deemphasis.....	197
L Coupled.....	197
L All AF Filter Off.....	197
L AF Range.....	198
L Dev per Division.....	198
L Reference Position.....	198
L Reference Value.....	198
L AF Coupling AC/DC.....	198
L Deviation Lin/Log.....	199
L Unit.....	199
L Phase Unit (Rad/Deg).....	199
L THD Unit (% / DB).....	199
L Abs. Dev Unit (kHz/dBm).....	199
L Rel. Dev Unit (dB / %).....	199
L Time Domain Zoom.....	200
L State On / Off.....	200
L Start.....	200
L Length Manual.....	200
L Length Auto.....	200
L Time per Division.....	200
L Squelch.....	201
L Squelch Level.....	201
Right.....	201
MPX.....	201
Mono.....	201
Stereo.....	201
RDS.....	201
Pilot.....	202
RF Power.....	202
Display Config.....	202

Left

Displays the left signal of the FM stereo input and the "Left" submenu.

SCPI command:


[CALCulate<n>:FEED](#) on page 89

Display Config ← Left

You configure the display settings for the results in the "Display Configuration" dialog box.
This dialog box contains the following tabs:

- "Screen A-D": a separate tab for each of the four available screens

- "Predefined": for predefined display configurations

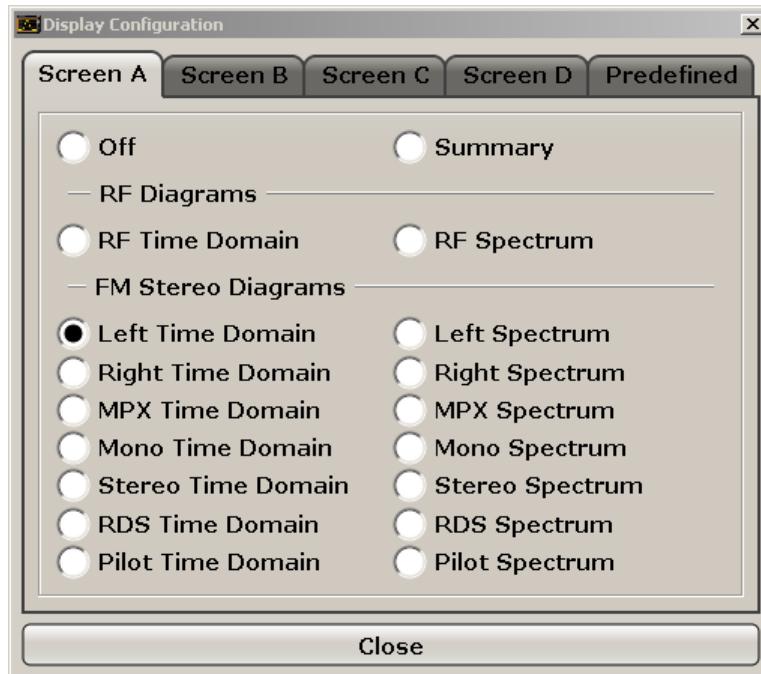

Screen A-D ← Display Config ← Left

For each of the four available screens you can configure what is to be displayed. To define the Display Configuration for a screen, select the corresponding tab. For each screen you can define:

- "Off": Whether it is displayed or not
- "Summary": Whether a summary of the evaluation lists from all screens is displayed instead of a diagram
- "RF Diagrams": Which type of diagram is displayed; this is the standard R&S FSV-K7 diagram type
For details on the result diagram types, see [chapter 2.1.9, "Measurement Result Display"](#), on page 20.
- "FM Stereo Diagrams": Which type of FM stereo diagram is displayed; each measurement type can be displayed either in the time domain or as a spectrum

Note: Summaries that take up the entire width of the screen are displayed as tables; if only half the screen width is available (2 windows next to each other), the summary is displayed as a list. Thus, the factory-set predefined screen configurations contain only 3 screens: 2 for diagrams and one full-width screen for the summary.

SCPI command:

[INSTrument \[:SElect\]](#) on page 114


Activates stereo fm demodulation.

[CALculate<n>:FEED](#) on page 89

Defines the display configuration.

Predefined ← Display Config ← Left

You can store and load predefined screen configurations. All available configurations are displayed in the "Predefined" tab. The current screen configuration is indicated under "Current" at the top of the list.

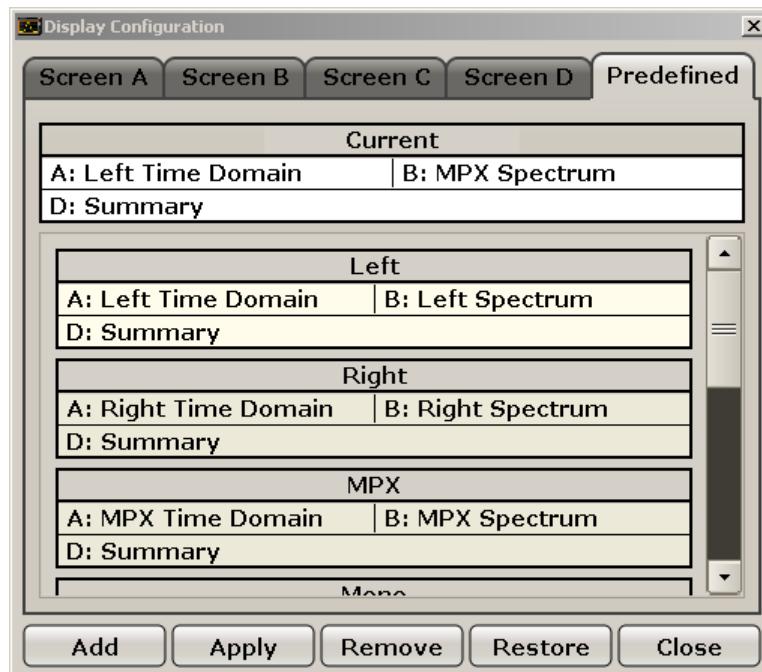**Add ← Predefined ← Display Config ← Left**

Opens an edit dialog box to enter a name for the current screen configuration. The configuration is then stored and added to the list.

Apply ← Predefined ← Display Config ← Left

Applies the currently selected configuration from the list to the current display.

Remove ← Predefined ← Display Config ← Left

Removes the currently selected configuration from the list.


Restore ← Predefined ← Display Config ← Left

Restores the default display configuration. Existing configurations with the default names are replaced.

Close ← Predefined ← Display Config ← Left

Closes the displays settings dialog box.

Result Summary Setup ← Left

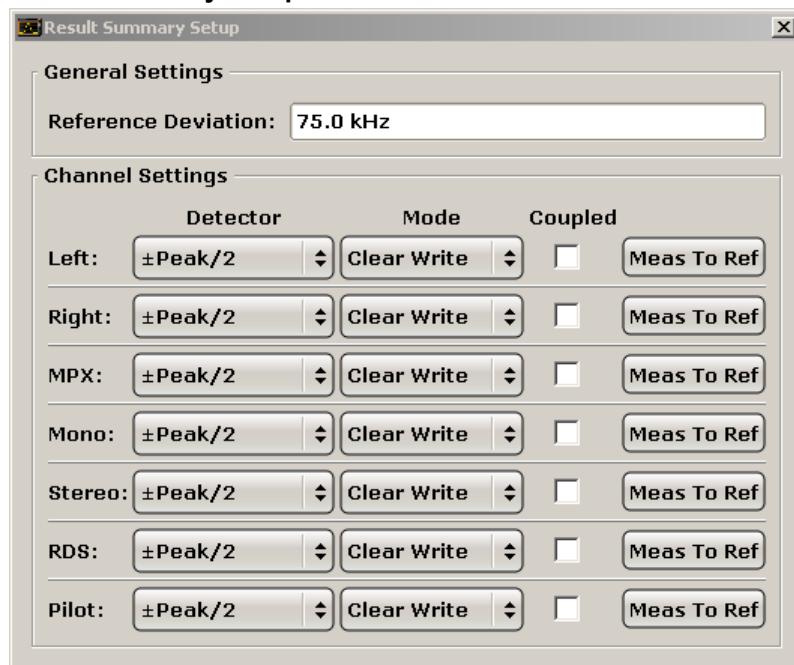

The result summary table displays the results of all channel measurements in a table. It is configured in the "Result Summary Setup" dialog box. This function is only available for screens for which an FM stereo measurement is selected in the "Display Settings" (see "[Display Config](#)" on page 189).

B Result Summary							
Carrier Power: -200.97 dBm		Carrier Freq: 15.0 GHz		Mod Depth: 0.0 %			
	Detector	Result Mode	Dev.	Rel. to Ref.	Mod. Freq.	SINAD	THD
Left	±Peak/2	Clear Write	0.000 Hz	---	---	---	---
Right	±Peak/2	Clear Write	0.000 Hz	---	---	---	---
MPX	±Peak/2	Clear Write	0.000 Hz	---	---	---	---
Mono	±Peak/2	Clear Write	0.000 Hz	---	---	---	---
Stereo	±Peak/2	Clear Write	0.000 Hz	---	---	---	---
RDS	±Peak/2	Clear Write	0.000 Hz	---	---	---	---
Pilot	±Peak/2	Clear Write	0.000 Hz	---	---	---	---

Fig. 3-1: Result summary for an FM stereo measurement

In the "General Settings" area you define the "Reference Deviation" for all summaries manually. Alternatively, you can determine the reference deviation from one of the channel measurements by selecting "Meas To Ref" (see "[Meas To Ref](#)" on page 194).

For each FM stereo channel you can define individual channel settings:

- "[Detector](#)" on page 193
- "[Mode](#)" on page 193
- "[Coupled](#)" on page 193
- "[Meas To Ref](#)" on page 194

-

SCPI command:

[SENSe:] SFM:REFerence on page 232
[SENSe:] SFM:<ChannelType>:RSUMmary:DETector[:FUNCTION] on page 239
[SENSe:] SFM:<ChannelType>:RSUMmary:MODE on page 239
[SENSe:] SFM:<ChannelType>:RSUMmary:COUPLing on page 238
[SENSe:] SFM:<ChannelType>:RSUMmary:REFERENCE[:AUTO] ONCE on page 240

Detector ← Result Summary Setup ← Left

Defines the detector used for the deviation measurement.

- "RMS"
- "RMS*SQRT2"
- "Pos Peak"
- "Neg Peak"
- "±Peak/2"
- "QP CCIR"
- "QP*SQRT2"

Note: To ensure correct measurements with QP detectors, it is recommended that you set the measurement time to its maximum value (see "[Meas Time](#)" on page 29 and [chapter 2.1.8, "Sample Rate, Measurement Time and Trigger Offset"](#), on page 18).

SCPI command:

[SENSe:] SFM:<ChannelType>:RSUMmary:DETector[:FUNCTION] on page 239

Mode ← Result Summary Setup ← Left

Defines the result summary mode for the absolute deviation and the deviation relative to the reference.

- | | |
|---------------|----------------------------------------------------------------------------------------|
| "Clear Write" | Overwrite mode: the summary is overwritten by each sweep. This is the default setting. |
| "Peak Hold" | The peak values are determined over several sweeps and displayed. |
| "Average" | The average is formed over several sweeps. |

SCPI command:

[SENSe:] SFM:<ChannelType>:RSUMmary:MODE on page 239

Coupled ← Result Summary Setup ← Left

All channels for which this option is enabled are configured identically, i.e. the channel settings are coupled. If you change the settings for one coupled channel, the settings are changed for all other coupled channels, as well. The settings are taken from the first channel for which coupling is enabled.

SCPI command:

[SENSe:] SFM:<ChannelType>:RSUMmary:COUPLing on page 238

Meas To Ref ← Result Summary Setup ← Left

Determines the "Reference Deviation" from the current channel measurement.

SCPI command:

[SENSe:] SFM:<ChannelType>:RSUMmary:REFerence [:AUTO] ONCE
on page 240

Meas Time ← Left

Opens an editor for entering the measurement time of the analog demodulation. For details on the measurement time values refer to [chapter 2.1.8, "Sample Rate, Measurement Time and Trigger Offset", on page 18](#).

Note: For FM Stereo measurements (option K7S), the minimum measurement time is 2 ms.


SCPI command:

[SENSe:] ADEMod:MTIMe on page 130

AF Filter ← Left

Opens a dialog to select the appropriate filters.

The bandwidth of the demodulated signal can be reduced by high pass or low pass filters and also a weighting or de-emphasis can be switched on. You can define different filter settings for each channel.

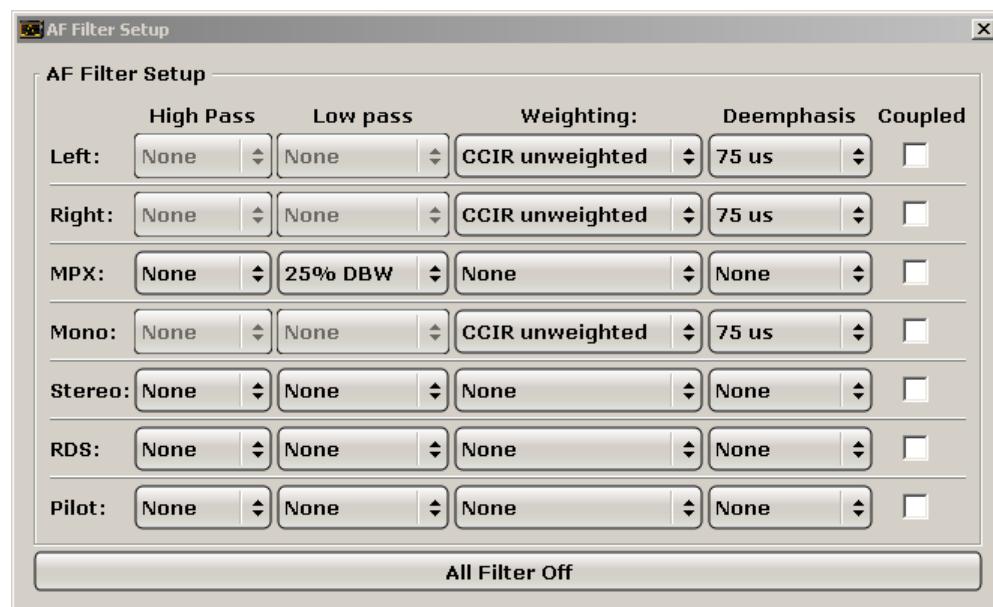**High Pass ← AF Filter ← Left**

Opens the "High Pass" selection list to switch on a high pass filter with the given limit to separate the DC component. The filters are indicated by the 3 dB cutoff frequency. The 50 Hz and 300 Hz filters are designed as 2nd-order Butterworth filter (12 dB/octave). The 20 Hz filter is designed as 3rd-order Butterworth filter (18 dB/octave).

"None" deactivates the AF high pass filter. Default is "None".

The high pass filters are active in the following demodulation bandwidth range:

20 Hz	100 Hz ≤ demodulation bandwidth ≤ 1.6 MHz
50 Hz:	200 Hz ≤ demodulation bandwidth ≤ 3 MHz
300 Hz:	800 Hz ≤ demodulation bandwidth ≤ 8 MHz

Note: for FM stereo (K7S), all filters are active at all times, as the demodulation range is always 400 kHz

SCPI command:

[SENSe:] FILTer<n>:HPASS[:STATE] on page 148

[SENSe:] FILTer<n>:HPASS:FREQuency on page 148

Low Pass ← AF Filter ← Left

Opens the "Low Pass" selection list to select the filter type. Relative and absolute low pass filter are available.

- Absolute low pass filters:

The 3 kHz, 15 kHz; 23 kHz and 150 kHz softkeys switch on a absolute low pass filter.

The filters are indicated by the 3 dB cutoff frequency. The 3 kHz, 15 kHz and 23 kHz filters are designed as 5th-order Butterworth filters (30 dB/octave). The 150 kHz filter is designed as 8th-order Butterworth filter (48 dB/octave).

The absolute low pass filters are active in the following demodulation bandwidth range:

3 kHz:	6.4 kHz ≤ demodulation bandwidth ≤ 3 MHz
15 kHz:	50 kHz ≤ demodulation bandwidth ≤ 8 MHz
23 kHz	50 kHz ≤ demodulation bandwidth ≤ 18 MHz
150 kHz:	400 kHz ≤ demodulation bandwidth ≤ 8 MHz

Note: for FM stereo (K7S), all filters are active at all times, as the demodulation range is always 400 kHz

- Relative low pass filters:

The filters (3 dB) can be selected in % of the demodulation bandwidth. The filters are designed as 5th-order Butterworth filter (30 dB/octave) and active for all demodulation bandwidths.

- "None" deactivates the AF low pass filter. Default is "None".

SCPI command:

[SENSe:] FILTer<n>:LPASS[:STATE] on page 148

[SENSe:] FILTer<n>:LPASS:FREQuency[:ABSolute] on page 149

[SENSe:] FILTer<n>:LPASS:FREQuency:RELative on page 149

SFM:

[SENSe:] SFM:<ChannelType>:FILTer:LPASS:STATE on page 237

[SENSe:] SFM:<ChannelType>:FILTer:LPASS:FREQuency on page 237

Weighting ← AF Filter ← Left

Opens the "Weighting" selection list to select the weighting AF filter.

None ← Weighting ← AF Filter ← Left

Deactivates the weighting filter. This is the default setting.

SCPI command:

[SENSe:] FILTER<n>:HPASS [:STATE] on page 148

CCITT ← Weighting ← AF Filter ← Left

Switches on a CCITT P.53 weighting filter. The weighting filter is active in the following demodulation bandwidth range:

20 kHz ≤ demodulation bandwidth ≤ 3 MHz

For FM stereo (K7S), the filter is active at all times, as the demodulation range is always 400 kHz.

SCPI command:

[SENSe:] FILTER<n>:CCIT on page 146

SFM:

[SENSe:] SFM:<ChannelType>:FILTER:CCITT:STATE on page 234

CCIR Unweighted ← Weighting ← AF Filter ← Left

Switches on the CCIR unweighted filter, which is the combination of the 20 Hz highpass and 23 kHz low pass filter. The weighting filter is active in the following demodulation bandwidth range:

50 kHz ≤ demodulation bandwidth ≤ 1.6 MHz

For FM stereo (K7S), the filter is active at all times, as the demodulation range is always 400 kHz.

SCPI command:

[SENSe:] FILTER<n>:CCIR[:UNWeighted] [:STATE] on page 146

SFM:

[SENSe:] SFM:<ChannelType>:FILTER:CCIR[:UNWeighted] [:STATE]

on page 234

CCIR Weighted ← Weighting ← AF Filter ← Left

Switches on the CCIR weighted filter. The weighting filter is active in the following demodulation bandwidth range:

100 kHz ≤ demodulation bandwidth ≤ 3.0 MHz

For FM stereo (K7S), the filter is active at all times, as the demodulation range is always 400 kHz.

SCPI command:

[SENSe:] FILTER<n>:CCIR:WEIGHTed [:STATE] on page 147

SFM:

[SENSe:] SFM:<ChannelType>:FILTER:CCIR:WEIGHTed [:STATE] on page 235

A Weighted ← Weighting ← AF Filter ← Left

Switches on the A weighted filter. The weighting filter is active in the following demodulation bandwidth range:

100 kHz ≤ demodulation bandwidth ≤ 800 kHz

SCPI command:

[SENSe:] FILTer<n>:AWEightEd[:STATe] on page 145

SFM:

[SENSe:] SFM:<ChannelType>:FILTer:AWEightEd[:STATe] on page 234

Deemphasis ← AF Filter ← Left

Opens the "Deemphasis" selection list to switch on a deemphasis with the given time constant.

The deemphasis is active in the following demodulation bandwidth range:

Note: For FM stereo measurements (K7S), the demodulation bandwidth is always 400 kHz, thus the deemphasis is always active.

25 µs:	25 kHz ≤ demodulation bandwidth ≤ 40 MHz
50 µs:	6.4 kHz ≤ demodulation bandwidth ≤ 18 MHz
75 µs:	6.4 kHz ≤ demodulation bandwidth ≤ 18 MHz
750 µs:	800 Hz ≤ demodulation bandwidth ≤ 3 MHz

The following table shows the required demodulation bandwidth for an error less than 0.5 dB up to a maximum AF frequency.

deemphasis	25 µs	50 µs	75 µs	750 µs
max. AF frequency	25 kHz	12 kHz	8 kHz	800 Hz
required demodulation bandwidth	≥ 200 kHz	≥ 100 kHz	≥ 50 kHz	≥ 6.4 kHz

For higher AF frequencies the demodulation bandwidth must be increased.

SCPI command:

[SENSe:] FILTer<n>:DEMPhasis[:STATe] on page 147

[SENSe:] FILTer<n>:DEMPhasis:TCONstant on page 147

SFM:

[SENSe:] SFM:<ChannelType>:FILTer:DEMPhasis:STATe on page 235

[SENSe:] SFM:<ChannelType>:FILTer:DEMPhasis:TCONstant on page 236

Coupled ← AF Filter ← Left

All channels for which this option is enabled are configured identically, i.e. the channel settings are coupled. If you change the settings for one coupled channel, the settings are changed for all other coupled channels, as well. The settings are taken from the first channel for which coupling is enabled.

SCPI command:

[SENSe:] SFM:<ChannelType>:RSUMmary:COUPLing on page 238

All AF Filter Off ← AF Filter ← Left

Disables all specified AF Filters.

SCPI command:

[SENSe:] FILTer<n>:AOFF on page 145

AF Range ← Left

Opens a submenu to define the diagram scaling for AF displays.

Dev per Division ← AF Range ← Left

Opens an edit dialog box to set the modulation depth or the phase deviation (R&S FSV-K7 only), or frequency deviation per division:

AM display:	0.0001 % to 1000 %
FM display:	1 Hz/div to 100 MHz/div
PM display:	0.0001 rad/div to 1000 rad/div

The softkey is not available if logarithmic display is set ("Deviation Lin/Log" softkey).

SCPI command:

[DISPLAY\[:WINDOW<n>\]:TRACE<t>:MODE:HCONTINUOUS](#) on page 111

Reference Position ← AF Range ← Left

Determines the position of the reference line for the modulation depth or the phase deviation (R&S FSV-K7 only) or frequency deviation on the y-axis of the diagram. By default, this line is set to 0.

The position is entered as a percentage of the diagram height with 100 % corresponding to the upper diagram border. The default setting is 50 % (diagram center) for the display of the AM, FM, or PM signal, and 100 % (upper diagram border) for the AF spectrum display of the AM, FM, or PM signal.

SCPI command:

[DISPLAY\[:WINDOW<n>\]:TRACE<t>:Y\[:SCALE\]:RPOSITION](#) on page 112

Reference Value ← AF Range ← Left

Determines the modulation depth or the phase deviation (R&S FSV-K7 only) or the frequency deviation at the reference line of the y-axis. The reference value is set separately for each display of the AM, FM, and PM signal and the AF spectrum of the AM, FM, and PM signal.

- AM/FM/PM signal display

The trace display takes individual frequency/phase offsets into account (in contrast, the [AF Coupling AC/DC](#) softkey permits automatic correction by the average frequency/phase offset of the signal, and can therefore not be activated simultaneously).

Possible values: 0 and ± 10000 % (AM), 0 and ± 10 MHz (FM), 0 and ± 10000 rad (PM).

- AF spectrum display of the AM/FM/PM signal

In the default setting, the reference value defines the modulation depth or the FM/PM deviation at the upper diagram border.

Possible values: 0 and 10000 % (AM), 0 and 10 MHz (FM), 0 and 10000 rad (PM).

SCPI command:

[DISPLAY\[:WINDOW<n>\]:TRACE<t>:Y\[:SCALE\]:RVALUE](#) on page 112

AF Coupling AC/DC ← AF Range ← Left

Controls the automatic correction of the frequency offset and phase offset of the input signal:

(**Note:** This function is not available with the AF spectrum display of the FM or PM signal.)

- **FM signal display**

If DC is selected, the absolute frequency is displayed, i.e. an input signal with an offset relative to the center frequency is not displayed symmetrically with respect to the zero line.

If AC is selected, the frequency offset is automatically corrected, i.e. the trace is always symmetric with respect to the zero line.

- **PM signal display**

If DC is selected, the phase runs according to the existing frequency offset. In addition, the DC signal contains a phase offset of $\pm \pi$.

If AC is selected, the frequency offset and phase offset are automatically corrected, i.e. the trace is always symmetric with respect to the zero line.

SCPI command:

[\[SENSe:\]ADEMod<n>:AF:COUpling](#) on page 119

Deviation Lin/Log ← AF Range ← Left

Switches between logarithmic and linear display of the modulation depth or the phase deviation (R&S FSV-K7 only) or the frequency deviation.

SCPI command:

[DISPLAY\[:WINDOW<n>\]:TRACe<t>:Y:SPACing](#) on page 113

Unit ← AF Range ← Left

Opens a submenu to define the modulation unit.

Phase Unit (Rad/Deg) ← Unit ← AF Range ← Left

Sets the phase unit to rad or deg for displaying PM signals.

SCPI command:

[UNIT:THD](#) on page 165

THD Unit (% / dB) ← Unit ← AF Range ← Left

Sets the unit to percent or dB for THD measurements.

SCPI command:

[UNIT:THD](#) on page 165

Abs. Dev Unit (kHz/dBm) ← Unit ← AF Range ← Left

Sets the unit for absolute deviation to kHz or dBm. This softkey is only available with the FM Stereo option K7S.

SCPI command:

[UNIT:ADEV](#) on page 246

Rel. Dev Unit (dB / %) ← Unit ← AF Range ← Left

Sets the unit for relative deviation to dB or percent. This softkey is only available with the FM Stereo option K7S.

SCPI command:

[UNIT:RDEV](#) on page 247

Time Domain Zoom ← Left

Opens a submenu to activate and configure the zoom function.

State On / Off ← Time Domain Zoom ← Left

Activates or deactivates the time domain zoom according to the defined settings.

"ON" Activates the time domain zoom. The zoom area is defined using the "Start""Start" on page 34 and "Length Manual""Length Manual" on page 34 / "Length Auto""Length Auto" on page 35 softkeys.

"OFF" If more measured values than measurement points are available, several measured values are combined in one measurement point according to the method of the selected trace detector. For details on detectors refer to [chapter 2.1.7, "Detector Overview"](#), on page 17.

SCPI command:

[SENSe:] ADEMod<n>:ZOOM[:STATe] on page 140

Start ← Time Domain Zoom ← Left

Opens an edit dialog box to define the start time for the zoom area.

SCPI command:

[SENSe:] ADEMod<n>:ZOOM:START on page 140

Length Manual ← Time Domain Zoom ← Left

Opens an edit dialog box to define the length of the zoom area (as a time value) manually.

SCPI command:

[SENSe:] ADEMod<n>:ZOOM:LENGTH on page 141

Length Auto ← Time Domain Zoom ← Left

Automatically sets the length of the zoom area to the number of sweep points (see "[Sweep Points](#)" on page 54).

SCPI command:

[SENSe:] ADEMod<n>:ZOOM:LENGTH:MODE on page 141

Time per Division ← Left

This function enables the "Time Domain Zoom" function and defines the zoom area length in one step. The width of the zoom display is divided into 10 divisions; thus, by entering the time that is displayed in each division, you indirectly define the zoom area length ("Time per Division" * 10). The starting point of the zoom area is determined automatically. To specify the starting point manually, use the "Start" function in the "Time Domain Zoom" submenu.

For details see "Time Domain Zoom".

SCPI command:

Squelch ← Left

Activates the squelch function, i.e. if the signal falls below a defined threshold, the demodulated data is automatically set to 0. This is useful, for example, to avoid demodulation noise during transmission breaks.

SCPI command:

[SENSe:] ADEMod:SQUelch[:STATe] on page 139

Squelch Level ← Left

Defines the level threshold below which the demodulated data is set to 0 if squelching is enabled. The squelch level is an absolute value.

SCPI command:

[SENSe:] ADEMod:SQUelch:LEVel on page 139

Right

Displays the right signal of the FM stereo input and the "Right" submenu, which is identical to the "Left" submenu, see "[Left](#)" on page 189.

SCPI command:

[CALCulate<n>:FEED](#) on page 89

MPX

Displays the MPX signal of the FM stereo input and the "MPX" submenu, which is identical to the "Left" submenu, see "[Left](#)" on page 189.

SCPI command:

[CALCulate<n>:FEED](#) on page 89

Mono

Displays the mono signal of the FM stereo input (= Left channel + Right channel) and the "Mono" submenu, which is identical to the "Left" submenu, see "[Left](#)" on page 189.

SCPI command:

[CALCulate<n>:FEED](#) on page 89

Stereo

Displays the stereo signal of the FM stereo input (= Left channel - Right channel) and the "Stereo" submenu, which is identical to the "Left" submenu, see "[Left](#)" on page 189.

SCPI command:

[CALCulate<n>:FEED](#) on page 89

RDS

Displays the RDS signal of the FM stereo input and the "RDS" submenu, which is identical to the "Left" submenu, see "[Left](#)" on page 189.

SCPI command:

[CALCulate<n>:FEED](#) on page 89

Pilot

Displays the pilot signal of the FM stereo input and the "Pilot" submenu, which is identical to the "Left" submenu, see "["Left"](#) on page 189.

SCPI command:

[CALCulate<n>:FEED](#) on page 89

RF Power

Selects RF power as the modulation type, changes the signal display, and opens a submenu to set the measurement configuration. For details see the Analog Demodulation option K7 ("["RF Power"](#) on page 37).

SCPI command:

[CALCulate<n>:FEED](#) on page 89

Display Config

See "["Display Config"](#) on page 189

3.1.3 Softkeys of the Amplitude Menu – AMPT Key (R&S FSV-K7S)

The following table shows all softkeys available in the "Amplitude" menu in "FM stereo" mode (AMPT key).

Ref Level	203
AF Range	203
└ Dev per Division	203
└ Reference Position	203
└ Reference Value	203
└ AF Coupling AC/DC	204
└ Deviation Lin/Log	204
└ Unit	204
└ Phase Unit (Rad/Deg)	204
└ THD Unit (% / DB)	204
└ Abs. Dev Unit (kHz/dBm)	205
└ Rel. Dev Unit (dB / %)	205
Unit	205
└ Phase Unit (Rad/Deg)	205
└ THD Unit (% / DB)	205
└ Abs. Dev Unit (kHz/dBm)	205
└ Rel. Dev Unit (dB / %)	205
Preamp On/Off (option RF Preamplifier, B22/B24)	205
RF Atten Manual/Mech Att Manual	206
RF Atten Auto/Mech Att Auto	206
EI Atten On/Off	206
EI Atten Mode (Auto/Man)	207
Ref Level Offset	207
Input (AC/DC)	207
Input 50 Ω/75 Ω	207

Ref Level

Opens an edit dialog box to enter the reference level in the currently active unit (dBm, dB μ V, etc.).

The reference level value is the maximum value the AD converter can handle without distortion of the measured value. Signal levels above this value will not be measured correctly, which is indicated by the "IFOVL" status display.

SCPI command:

[DISPLAY\[:WINDOW<n>\]:TRACE<t>:Y\[:SCALE\]:RLEVel](#) on page 111

AF Range

Opens a submenu to define the diagram scaling for AF displays.

Dev per Division ← AF Range

Opens an edit dialog box to set the modulation depth or the phase deviation (R&S FSV-K7 only), or frequency deviation per division:

AM display:	0.0001 % to 1000 %
FM display:	1 Hz/div to 100 MHz/div
PM display:	0.0001 rad/div to 1000 rad/div

The softkey is not available if logarithmic display is set ("Deviation Lin/Log" softkey).

SCPI command:

[DISPLAY\[:WINDOW<n>\]:TRACE<t>:MODE:HCONTinuous](#) on page 111

Reference Position ← AF Range

Determines the position of the reference line for the modulation depth or the phase deviation (R&S FSV-K7 only) or frequency deviation on the y-axis of the diagram. By default, this line is set to 0.

The position is entered as a percentage of the diagram height with 100 % corresponding to the upper diagram border. The default setting is 50 % (diagram center) for the display of the AM, FM, or PM signal, and 100 % (upper diagram border) for the AF spectrum display of the AM, FM, or PM signal.

SCPI command:

[DISPLAY\[:WINDOW<n>\]:TRACE<t>:Y\[:SCALE\]:RPOSITION](#) on page 112

Reference Value ← AF Range

Determines the modulation depth or the phase deviation (R&S FSV-K7 only) or the frequency deviation at the reference line of the y-axis. The reference value is set separately for each display of the AM, FM, and PM signal and the AF spectrum of the AM, FM, and PM signal.

- AM/FM/PM signal display

The trace display takes individual frequency/phase offsets into account (in contrast, the **AF Coupling AC/DC** softkey permits automatic correction by the average frequency/phase offset of the signal, and can therefore not be activated simultaneously). Possible values: 0 and ± 10000 % (AM), 0 and ± 10 MHz (FM), 0 and ± 10000 rad (PM).

- AF spectrum display of the AM/FM/PM signal

In the default setting, the reference value defines the modulation depth or the FM/PM deviation at the upper diagram border.

Possible values: 0 and 10000 % (AM), 0 and 10 MHz (FM), 0 and 10000 rad (PM).

SCPI command:

[DISPLAY\[:WINDOW<n>\]:TRACE<t>:Y\[:SCALE\]:RVALue](#) on page 112

AF Coupling AC/DC ← AF Range

Controls the automatic correction of the frequency offset and phase offset of the input signal:

(**Note:** This function is not available with the AF spectrum display of the FM or PM signal.)

- FM signal display

If DC is selected, the absolute frequency is displayed, i.e. an input signal with an offset relative to the center frequency is not displayed symmetrically with respect to the zero line.

If AC is selected, the frequency offset is automatically corrected, i.e. the trace is always symmetric with respect to the zero line.

- PM signal display

If DC is selected, the phase runs according to the existing frequency offset. In addition, the DC signal contains a phase offset of $\pm \pi$.

If AC is selected, the frequency offset and phase offset are automatically corrected, i.e. the trace is always symmetric with respect to the zero line.

SCPI command:

[\[SENSe:\]ADEMod<n>:AF:COUPLing](#) on page 119

Deviation Lin/Log ← AF Range

Switches between logarithmic and linear display of the modulation depth or the phase deviation (R&S FSV-K7 only) or the frequency deviation.

SCPI command:

[DISPLAY\[:WINDOW<n>\]:TRACE<t>:Y:SPACing](#) on page 113

Unit ← AF Range

Opens a submenu to define the modulation unit.

Phase Unit (Rad/Deg) ← Unit ← AF Range

Sets the phase unit to rad or deg for displaying PM signals.

SCPI command:

[UNIT:THD](#) on page 165

THD Unit (% / DB) ← Unit ← AF Range

Sets the unit to percent or DB for THD measurements.

SCPI command:

[UNIT:THD](#) on page 165

Abs. Dev Unit (kHz/dBm) ← Unit ← AF Range

Sets the unit for absolute deviation to kHz or dBm. This softkey is only available with the FM Stereo option K7S.

SCPI command:

[UNIT:ADEV](#) on page 246

Rel. Dev Unit (dB / %) ← Unit ← AF Range

Sets the unit for relative deviation to dB or percent. This softkey is only available with the FM Stereo option K7S.

SCPI command:

[UNIT:RDEV](#) on page 247

Unit

Opens a submenu to define the modulation unit.

Phase Unit (Rad/Deg) ← Unit

Sets the phase unit to rad or deg for displaying PM signals.

SCPI command:

[UNIT:THD](#) on page 165

THD Unit (% / DB) ← Unit

Sets the unit to percent or DB for THD measurements.

SCPI command:

[UNIT:THD](#) on page 165

Abs. Dev Unit (kHz/dBm) ← Unit

Sets the unit for absolute deviation to kHz or dBm. This softkey is only available with the FM Stereo option K7S.

SCPI command:

[UNIT:ADEV](#) on page 246

Rel. Dev Unit (dB / %) ← Unit

Sets the unit for relative deviation to dB or percent. This softkey is only available with the FM Stereo option K7S.

SCPI command:

[UNIT:RDEV](#) on page 247

Preamp On/Off (option RF Preamplifier, B22/B24)

Switches the preamplifier on or off.

If option R&S FSV-B22 is installed, the preamplifier is only active below 7 GHz.

If option R&S FSV-B24 is installed, the preamplifier is active for all frequencies.

This function is not available for input from the R&S Digital I/Q Interface (option R&S FSV-B17).

SCPI command:

[INPut:GAIN:STATE](#) on page 177

RF Atten Manual/Mech Att Manual

Opens an edit dialog box to enter the attenuation, irrespective of the reference level. If electronic attenuation is activated (option R&S FSV-B25 only; "El Atten Mode Auto" softkey), this setting defines the mechanical attenuation.

The mechanical attenuation can be set in 10 dB steps.

The RF attenuation can be set in 5 dB steps (with option R&S FSV-B25: 1 dB steps). The range is specified in the data sheet. If the defined reference level cannot be set for the set RF attenuation, the reference level is adjusted accordingly.

This function is not available for input from the R&S Digital I/Q Interface (option R&S FSV-B17).

The RF attenuation defines the level at the input mixer according to the formula:

$$\text{level}_{\text{mixer}} = \text{level}_{\text{input}} - \text{RF attenuation}$$

Note: As of firmware version 1.61, the maximum mixer level allowed is **0 dBm**. Mixer levels above this value may lead to incorrect measurement results, which are indicated by the "OVLD" status display. The increased mixer level allows for an improved signal, but also increases the risk of overloading the instrument!

SCPI command:

[INPut:ATTenuation](#) on page 173

RF Atten Auto/Mech Att Auto

Sets the RF attenuation automatically as a function of the selected reference level. This ensures that the optimum RF attenuation is always used. It is the default setting.

This function is not available for input from the R&S Digital I/Q Interface (option R&S FSV-B17).

SCPI command:

[INPut:ATTenuation:AUTO](#) on page 173

El Atten On/Off

This softkey switches the electronic attenuator on or off. This softkey is only available with option R&S FSV-B25.

When the electronic attenuator is activated, the mechanical and electronic attenuation can be defined separately. Note however, that both parts must be defined in the same mode, i.e. either both manually, or both automatically.

This function is not available for input from the R&S Digital I/Q Interface (option R&S FSV-B17).

- To define the mechanical attenuation, use the [RF Atten Manual/Mech Att Manual](#) or [RF Atten Auto/Mech Att Auto](#) softkeys.
- To define the electronic attenuation, use the [El Atten Mode \(Auto/Man\)](#) softkey.

Note: This function is not available for stop frequencies (or center frequencies in zero span) >7 GHz. In this case, the electronic and mechanical attenuation are summarized and the electronic attenuation can no longer be defined individually. As soon as the stop or center frequency is reduced below 7 GHz, this function is available again.

When the electronic attenuator is switched off, the corresponding RF attenuation mode (auto/manual) is automatically activated.

SCPI command:

[INPut:EATT:AUTO](#) on page 177

EI Atten Mode (Auto/Man)

This softkey defines whether the electronic attenuator value is to be set automatically or manually. If manual mode is selected, an edit dialog box is opened to enter the value. This softkey is only available with option R&S FSV-B25, and only if the electronic attenuator has been activated via the [EI Atten On/Off](#) softkey.

Note: This function is not available for stop frequencies (or center frequencies in zero span) >7 GHz. In this case, the electronic and mechanical attenuation are summarized and the electronic attenuation can no longer be defined individually. As soon as the stop or center frequency is reduced below 7 GHz, electronic attenuation is available again. If the electronic attenuation was defined manually, it must be re-defined.

The attenuation can be varied in 1 dB steps from 0 to 30 dB. Other entries are rounded to the next lower integer value.

To re-open the edit dialog box for manual value definition, select the "Man" mode again. If the defined reference level cannot be set for the given RF attenuation, the reference level is adjusted accordingly and the warning "Limit reached" is output.

SCPI command:

[INPut:EATT:AUTO](#) on page 177

[INPut:EATT](#) on page 177

Ref Level Offset

Opens an edit dialog box to enter the arithmetic level offset. This offset is added to the measured level irrespective of the selected unit. The scaling of the y-axis is changed accordingly. The setting range is ± 200 dB in 0.1 dB steps.

SCPI command:

[DISPlay\[:WINDOW<n>\]:TRACe<t>:Y\[:SCALE\]:RLEVel:OFFSet](#) on page 112

Input (AC/DC)

Toggles the RF input of the R&S FSV between AC and DC coupling.

This function is not available for input from the R&S Digital I/Q Interface (option R&S FSV-B17).

SCPI command:

[INPut:COUPLing](#) on page 174

Input 50 Ω/75 Ω

Uses 50 Ω or 75 Ω as reference impedance for the measured levels. Default setting is 50 Ω.

The setting 75 Ω should be selected if the 50 Ω input impedance is transformed to a higher impedance using a 75 Ω adapter of the RAZ type (= 25 Ω in series to the input impedance of the instrument). The correction value in this case is 1.76 dB = $10 \log (75 \Omega / 50 \Omega)$.

All levels specified in this Operating Manual refer to the default setting of the instrument (50 Ω).

This function is not available for input from the R&S Digital I/Q Interface (option R&S FSV-B17).

SCPI command:

[INPut:IMPedance](#) on page 178

3.1.4 Softkeys of the Bandwidth Menu – BW Key (R&S FSV-K7S)

The following table shows all softkeys available in the "Bandwidth" menu in FM Stereo mode (BW key).

Res BW (span > 0)	208
Meas Time	208
AF Filter	208
└ High Pass	209
└ Low Pass	209
└ Weighting	210
└ None	210
└ CCITT	210
└ CCIR Unweighted	210
└ CCIR Weighted	210
└ A Weighted	211
└ Deemphasis	211
└ All AF Filter Off	212

Res BW (span > 0)

Opens an edit dialog box to enter a value for the resolution bandwidth. The range is specified in the data sheet.

This softkey is only available for spectrum measurements (see [chapter 2.1.9, "Measurement Result Display", on page 20](#)).

SCPI command:

[\[SENSe:\]ADEMod:SPECTr um:BANDwidth|BWIDth\[:RESolution\]](#) on page 136

Meas Time

Opens an editor for entering the measurement time of the analog demodulation. For details on the measurement time values refer to [chapter 2.1.8, "Sample Rate, Measurement Time and Trigger Offset", on page 18](#).

Note: For FM Stereo measurements (option K7S), the minimum measurement time is 2 ms.

SCPI command:

[\[SENSe:\]ADEMod:MTIMe](#) on page 130

AF Filter

The bandwidth of the demodulated signal can be reduced by high pass or low pass filters and also a de-emphasis can be switched on. The selected filters are used for AM, FM and PM demodulation in common. Individual settings are not possible.

High Pass ← AF Filter

Opens the "High Pass" selection list to switch on a high pass filter with the given limit to separate the DC component. The filters are indicated by the 3 dB cutoff frequency. The 50 Hz and 300 Hz filters are designed as 2nd-order Butterworth filter (12 dB/octave). The 20 Hz filter is designed as 3rd-order Butterworth filter (18 dB/octave).

"None" deactivates the AF high pass filter. Default is "None".

The high pass filters are active in the following demodulation bandwidth range:

20 Hz	$100 \text{ Hz} \leq \text{demodulation bandwidth} \leq 1.6 \text{ MHz}$
50 Hz:	$200 \text{ Hz} \leq \text{demodulation bandwidth} \leq 3 \text{ MHz}$
300 Hz:	$800 \text{ Hz} \leq \text{demodulation bandwidth} \leq 8 \text{ MHz}$

Note: for FM stereo (K7S), all filters are active at all times, as the demodulation range is always 400 kHz

SCPI command:

[SENSe:] FILTer<n>:HPASs [:STATe] on page 148

[SENSe:] FILTer<n>:HPASs:FREQuency on page 148

Low Pass ← AF Filter

Opens the "Low Pass" selection list to select the filter type. Relative and absolute low pass filter are available.

- Absolute low pass filters:

The 3 kHz, 15 kHz; 23 kHz and 150 kHz softkeys switch on a absolute low pass filter. The filters are indicated by the 3 dB cutoff frequency. The 3 kHz, 15 kHz and 23 kHz filters are designed as 5th-order Butterworth filters (30 dB/octave). The 150 kHz filter is designed as 8th-order Butterworth filter (48 dB/octave).

The absolute low pass filters are active in the following demodulation bandwidth range:

3 kHz:	$6.4 \text{ kHz} \leq \text{demodulation bandwidth} \leq 3 \text{ MHz}$
15 kHz:	$50 \text{ kHz} \leq \text{demodulation bandwidth} \leq 8 \text{ MHz}$
23 kHz	$50 \text{ kHz} \leq \text{demodulation bandwidth} \leq 18 \text{ MHz}$
150 kHz:	$400 \text{ kHz} \leq \text{demodulation bandwidth} \leq 8 \text{ MHz}$

Note: for FM stereo (K7S), all filters are active at all times, as the demodulation range is always 400 kHz

- Relative low pass filters:

The filters (3 dB) can be selected in % of the demodulation bandwidth. The filters are designed as 5th-order Butterworth filter (30 dB/octave) and active for all demodulation bandwidths.

- "None" deactivates the AF low pass filter. Default is "None".

SCPI command:

[SENSe:] FILTER<n>:LPASS[:STATE] on page 148

[SENSe:] FILTER<n>:LPASS:FREQuency[:ABSolute] on page 149

[SENSe:] FILTER<n>:LPASS:FREQuency:RELative on page 149

SFM:

[SENSe:] SFM:<ChannelType>:FILTER:LPASS:STATE on page 237

[SENSe:] SFM:<ChannelType>:FILTER:LPASS:FREQuency on page 237

Weighting ← AF Filter

Opens the "Weighting" selection list to select the weighting AF filter.

None ← Weighting ← AF Filter

Deactivates the weighting filter. This is the default setting.

SCPI command:

[SENSe:] FILTER<n>:HPASS[:STATE] on page 148

CCITT ← Weighting ← AF Filter

Switches on a CCITT P.53 weighting filter. The weighting filter is active in the following demodulation bandwidth range:

20 kHz ≤ demodulation bandwidth ≤ 3 MHz

For FM stereo (K7S), the filter is active at all times, as the demodulation range is always 400 kHz.

SCPI command:

[SENSe:] FILTER<n>:CCIT on page 146

SFM:

[SENSe:] SFM:<ChannelType>:FILTER:CCIT[:STATE] on page 234

CCIR Unweighted ← Weighting ← AF Filter

Switches on the CCIR unweighted filter, which is the combination of the 20 Hz highpass and 23 kHz low pass filter. The weighting filter is active in the following demodulation bandwidth range:

50 kHz ≤ demodulation bandwidth ≤ 1.6 MHz

For FM stereo (K7S), the filter is active at all times, as the demodulation range is always 400 kHz.

SCPI command:

[SENSe:] FILTER<n>:CCIR[:UNWeighted] [:STATE] on page 146

SFM:

[SENSe:] SFM:<ChannelType>:FILTER:CCIR[:UNWeighted] [:STATE]

on page 234

CCIR Weighted ← Weighting ← AF Filter

Switches on the CCIR weighted filter. The weighting filter is active in the following demodulation bandwidth range:

100 kHz ≤ demodulation bandwidth ≤ 3.0 MHz

For FM stereo (K7S), the filter is active at all times, as the demodulation range is always 400 kHz.

SCPI command:

[\[SENSe:\] FILTer<n>:CCIR:WEIGHTed\[:STATE\]](#) on page 147

SFM:

[\[SENSe:\] SFM:<ChannelType>:FILTer:CCIR:WEIGHTed\[:STATE\]](#) on page 235

A Weighted ← Weighting ← AF Filter

Switches on the A weighted filter. The weighting filter is active in the following demodulation bandwidth range:

100 kHz ≤ demodulation bandwidth ≤ 800 kHz

SCPI command:

[\[SENSe:\] FILTer<n>:AWEIGHTed\[:STATE\]](#) on page 145

SFM:

[\[SENSe:\] SFM:<ChannelType>:FILTer:AWEIGHTed\[:STATE\]](#) on page 234

Deemphasis ← AF Filter

Opens the "Deemphasis" selection list to switch on a deemphasis with the given time constant.

The deemphasis is active in the following demodulation bandwidth range:

Note: For FM stereo measurements (K7S), the demodulation bandwidth is always 400 kHz, thus the deemphasis is always active.

25 µs:	25 kHz ≤ demodulation bandwidth ≤ 40 MHz
50 µs:	6.4 kHz ≤ demodulation bandwidth ≤ 18 MHz
75 µs:	6.4 kHz ≤ demodulation bandwidth ≤ 18 MHz
750 µs:	800 Hz ≤ demodulation bandwidth ≤ 3 MHz

The following table shows the required demodulation bandwidth for an error less than 0.5 dB up to a maximum AF frequency.

deemphasis	25 µs	50 µs	75 µs	750 µs
max. AF frequency	25 kHz	12 kHz	8 kHz	800 Hz
required demodulation bandwidth	≥ 200 kHz	≥ 100 kHz	≥ 50 kHz	≥ 6.4 kHz

For higher AF frequencies the demodulation bandwidth must be increased.

SCPI command:

[\[SENSe:\] FILTer<n>:DEMPhasis\[:STATE\]](#) on page 147

[\[SENSe:\] FILTer<n>:DEMPhasis:TCONSTant](#) on page 147

SFM:

[\[SENSe:\] SFM:<ChannelType>:FILTer:DEMPhasis:STATE](#) on page 235

[\[SENSe:\] SFM:<ChannelType>:FILTer:DEMPhasis:TCONSTant](#) on page 236

All AF Filter Off ← AF Filter

Disables all specified AF Filters.

SCPI command:

[SENSe:] FILTER<n>:AOFF on page 145

3.1.5 Softkeys of the Trigger Menu – TRIG Key (R&S FSV-K7S)

The following table shows all softkeys available in the "Trigger" menu in "FM Stereo" mode (TRIG key). It is possible that your instrument configuration does not provide all softkeys. If a softkey is only available with a special option, model or (measurement) mode, this information is delivered in the corresponding softkey description.

Trigger Source	212
└ Free Run	213
└ External	213
└ RF Power	213
└ IF Power	213
└ Left	214
└ Right	214
└ MPX	214
└ Mono	214
└ Stereo	214
└ RDS	214
└ Pilot	214
└ RF	215
└ Time	215
Trigger Level	215
Trigger Polarity	215
Trigger Offset	215
Repetition Interval	216
Trigger Hysteresis	216
Trigger Holdoff	216

Trigger Source

Opens the "Trg Source" submenu to select the trigger source.

In "FM Stereo" mode, the next measurement is triggered if the selected input signal exceeds the threshold specified using the "[Trigger Level](#)" on page 63 softkey. A periodic signal modulated onto the carrier frequency can be displayed in this way. It is recommended that the measurement time covers at least five periods of the audio signal.

For triggering to be successful, the measurement time must cover at least 5 periods of the audio signal.

SCPI command:

[TRIGger<n>\[:SEQUence\]:SOURce](#) on page 163

Free Run ← Trigger Source

The start of a sweep is not triggered. Once a measurement is completed, another is started immediately.

SCPI command:

TRIG:SOUR IMM, see [TRIGger<n>\[:SEQUence\]:SOURce](#) on page 163

External ← Trigger Source

Defines triggering via a TTL signal at the "EXT TRIG/GATE IN" input connector on the rear panel.

SCPI command:

TRIG:SOUR EXT, see [TRIGger<n>\[:SEQUence\]:SOURce](#) on page 163

RF Power ← Trigger Source

Defines triggering of the measurement via signals which are outside the measurement channel.

This trigger mode is available with detector board 1307.9554.02 Rev 05.00 or higher. It is not available for input from the R&S Digital I/Q Interface (option R&S FSV-B17). If RF Power trigger mode is selected and digital baseband input is activated, the trigger mode is automatically switched to "Free Run".

In RF Power trigger mode the instrument uses a level detector at the first intermediate frequency. The detector threshold can be selected in a range between - 50 dBm and -10 dBm at the input mixer. The resulting trigger level at the RF input lies within the following range:

(-24dBm + RF Att) ≤ Triggerlevel ≤ (+5dBm + RF Att), max. 30 dBm, for Preamp = OFF
(-40dBm + RF Att) ≤ Triggerlevel ≤ (-11dBm + RF Att), max. 30 dBm, for Preamp = ON
with

500 MHz ≤ InputSignal ≤ 7 GHz

Note: If input values outside of this range occur (e.g. for fullspan measurements), the sweep may be aborted and a message indicating the allowed input values is displayed in the status bar.

SCPI command:

TRIG:SOUR RFP, see [TRIGger<n>\[:SEQUence\]:SOURce](#) on page 163

SWE:EGAT:SOUR RFP for gated triggering, see [\[SENSe:\]SWEEp:EGATe:SOURce](#) on page 152

IF Power ← Trigger Source

Defines triggering of the measurement via signals which are outside the measurement channel.

For this purpose, the R&S FSV uses a level detector at the second intermediate frequency. Its threshold can be set in a range between -50 dBm and -10 dBm at the input mixer. The resulting trigger level at the RF input is calculated via the following formula:

"mixerlevel_{min} + RFAtt – PreampGain ≤ Input Signal ≤ mixerlevel_{max} + RFAtt – Preamp-Gain"

The bandwidth at the intermediate frequency is 20 MHz. The R&S FSV is triggered as soon as the trigger threshold is exceeded within a 10 MHz range around the selected frequency (= start frequency in the frequency sweep).

Thus, the measurement of spurious emissions, e.g. for pulsed carriers, is possible even if the carrier lies outside the selected frequency span.

SCPI command:

[TRIG:SOUR IFP](#), see [TRIGger<n>\[:SEQUence\]:SOURce](#) on page 163

[SWE:EGAT:SOUR IFP](#) for gated triggering, see [\[SENSe:\]SWEEp:EGATE:SOURce](#) on page 152

Left ← Trigger Source

Triggers on the specified frequency level of the left FM signal.

SCPI command:

[TRIGger<n>\[:SEQUence\]:LEVel:SFM:LEFT](#) on page 242

Right ← Trigger Source

Triggers on the specified frequency level of the right FM signal.

SCPI command:

[TRIGger<n>\[:SEQUence\]:LEVel:SFM:RIGHT](#) on page 242

MPX ← Trigger Source

Triggers on the specified frequency level of the MPX FM signal.

SCPI command:

[TRIGger<n>\[:SEQUence\]:LEVel:SFM:MPX](#) on page 242

Mono ← Trigger Source

Triggers on the specified frequency level of the mono FM signal.

SCPI command:

[TRIGger<n>\[:SEQUence\]:LEVel:SFM:MONO](#) on page 243

Stereo ← Trigger Source

Triggers on the specified frequency level of the stereo FM signal.

SCPI command:

[TRIGger<n>\[:SEQUence\]:LEVel:SFM:STEReo](#) on page 243

RDS ← Trigger Source

Triggers on the specified frequency level of the RDS FM signal.

SCPI command:

[TRIGger<n>\[:SEQUence\]:LEVel:SFM:RDS](#) on page 243

Pilot ← Trigger Source

Triggers on the specified frequency level of the pilot FM signal.

SCPI command:

[TRIGger<n>\[:SEQUence\]:LEVel:SFM:PILot](#) on page 244

RF ← Trigger Source

Triggers on the specified level of the RF signal.

Note: The RF **offline** trigger is based on the I/Q data of the demodulated signal, in a very limited bandwidth. For a wider trigger bandwidth and triggering based on the currently measured RF input signal, use the more powerful **RF Power** trigger.

SCPI command:

[TRIGger<n>\[:SEQUence\]:LEVEL:AM\[:ABSolute\]](#) on page 160

Time ← Trigger Source

Opens an edit dialog box to define a repetition interval in which the measurement is triggered. The shortest interval is 2 ms.

SCPI command:

[TRIG:SOUR TIME](#)[TRIGger<n>\[:SEQUence\]:SOURce](#) on page 163

Trigger Level

Defines the trigger level as a numeric value.

In the trigger mode "Time", this softkey is not available.

SCPI command:

[TRIGger<n>\[:SEQUence\]:LEVEL:IFPower](#) on page 161

For digital input via the R&S Digital I/Q Interface, R&S FSV-B17:

[TRIGger<n>\[:SEQUence\]:LEVEL:BBPower](#) on page 160

Trigger Polarity

Sets the polarity of the trigger source.

The sweep starts after a positive or negative edge of the trigger signal. The default setting is "Pos". The setting applies to all modes with the exception of the "Free Run" and "Time" mode.

- | | |
|-------|-----------------------------------------------------------------------------------------------------------------------------------------------|
| "Pos" | Level triggering: the sweep is stopped by the logic "0" signal and restarted by the logical "1" signal after the gate delay time has elapsed. |
| "Neg" | Edge triggering: the sweep is continued on a "0" to "1" transition for the gate length duration after the gate delay time has elapsed. |

SCPI command:

[TRIGger<n>\[:SEQUence\]:SLOPe](#) on page 162

[\[SENSe:\]SWEEp:EGATe:POLarity](#) on page 152

Trigger Offset

Opens an edit dialog box to enter the time offset between the trigger signal and the start of the sweep.

offset > 0:	Start of the sweep is delayed
offset < 0:	<p>Sweep starts earlier (pre-trigger)</p> <p>Only possible for span = 0 (e.g. I/Q Analyzer mode) and gated trigger switched off</p> <p>Maximum allowed range limited by the sweep time: $\text{pretrigger}_{\max} = \text{sweep time}$</p> <p>When using the R&S Digital I/Q Interface (R&S FSV-B17) with I/Q Analyzer mode, the maximum range is limited by the number of pretrigger samples.</p> <p>See the R&S Digital I/Q Interface(R&S FSV-B17) description in the base unit.</p>

In the "External" or "IF Power" trigger mode, a common input signal is used for both trigger and gate. Therefore, changes to the gate delay will affect the trigger delay (trigger offset) as well.

In the "Time" trigger mode, this softkey is not available.

SCPI command:

[TRIGger<n>\[:SEQUence\]:HOLDoff\[:TIME\]](#) on page 159

Repetition Interval

Opens an edit dialog box to define a repetition interval in which the measurement is triggered. The shortest interval is 2 ms. This softkey is only available if the trigger source "Time" is selected (see "Time" on page 63).

SCPI command:

[TRIGger<n>\[:SEQUence\]:TIME:RINTERval](#) on page 162

Trigger Hysteresis

Defines the value for the trigger hysteresis for "IF power" or "RF Power" trigger sources. The hysteresis in dB is the value the input signal must stay below the power trigger level in order to allow a trigger to start the measurement. The range of the value is between 3 dB and 50 dB with a step width of 1 dB.

SCPI command:

[TRIGger<n>\[:SEQUence\]:IFPower:HYSTeresis](#) on page 159

Trigger Holdoff

Defines the value for the trigger holdoff. The holdoff value in s is the time which must pass before triggering, in case another trigger event happens.

This softkey is only available if "IFPower", "RF Power" or "BBPower" is the selected trigger source.

SCPI command:

[TRIGger<n>\[:SEQUence\]:IFPower:HOLDoff](#) on page 159

For digital input via the R&S Digital I/Q Interface, R&S FSV-B17:

[TRIGger<n>\[:SEQUence\]:BBPower:HOLDoff](#) on page 158

3.1.6 Softkeys of the Marker Function Menu – MKR FUNC Key (R&S FSV-K7S)

The MKR FUNC menu provides the following functions.

Select Marker (No).....	217
Ref Fixed.....	217
└ Ref. Fixed On/Off.....	217
└ Ref Point Level.....	218
└ Ref Point Frequency (span > 0)/Ref Point Time (zero span).....	218
└ Peak Search.....	218
Diff.Freq.Distortion.....	218
└ Diff.Freq.Distortion (On/Off).....	219
└ Unit (% / DB).....	219
└ Search Signals.....	219
Intermod. Distortion.....	219
└ Intermod.Distortion (On/Off).....	220
└ Unit (% / DB).....	220
└ Search Signals.....	221
n dB down.....	221
Marker Peak List.....	222
└ Peak List On/Off.....	222
└ Sort Mode Freq/Lvl.....	222
└ Max Peak Count.....	222
└ Peak Excursion.....	222
└ Left Limit.....	222
└ Right Limit.....	223
└ Threshold.....	223
└ ASCII File Export.....	223
└ Decim Sep.....	223
└ Marker Number.....	223

Select Marker (No)

Opens a submenu to select one of 16 markers and define whether the marker is a normal or a delta marker (see "Marker 1 / Marker 2 / Marker 3 / ... Marker 16,/ Marker Norm/ Delta" on page 65). "(No)" indicates the number of the currently active marker.

See "Marker 1 / Marker 2 / Marker 3 / ... Marker 16,/ Marker Norm/Delta" on page 65.

Ref Fixed

Opens a submenu to set all values of a reference point. Instead of using the current values of the reference marker (marker 1) as reference point for the delta markers, level and frequency or time are set to fixed values and used as reference point.

Ref. Fixed On/Off ← Ref Fixed

Switches the relative measurement to a fixed reference value on or off. The level and frequency or time values of marker 1 immediately become the reference point, but can be altered using the corresponding softkeys ("Ref Point Level" on page 70, "Ref Point Frequency (span > 0)/Ref Point Time (zero span)" on page 70 and "Peak Search" on page 70).

When set to ON, all delta markers which previously referenced marker 1 are automatically set to reference the fixed marker.

The reference marker assignment can be changed using the "Marker Wizard" (see "[Marker Wizard](#)" on page 66).

SCPI command:

[CALCulate<n>:DELTamarker<m>:FUNCTION:FIXed\[:STATE\]](#) on page 168

Ref Point Level ← Ref Fixed

Opens an edit dialog box to enter a reference level value. All relative level values of the delta markers refer to this reference level.

SCPI command:

[CALCulate<n>:DELTamarker<m>:FUNCTION:FIXed:RPoint:Y](#) on page 167

Ref Point Frequency (span > 0)/Ref Point Time (zero span) ← Ref Fixed

Opens an edit dialog box to enter a frequency reference or time value. All relative frequency or time values of the delta markers refer to this frequency reference. For phase noise measurement, input of reference time is not possible.

SCPI command:

[CALCulate<n>:DELTamarker<m>:FUNCTION:FIXed:RPoint:X](#) on page 167

Peak Search ← Ref Fixed

Sets the maximum value of the selected trace as the reference point.

SCPI command:


[CALCulate<n>:DELTamarker<m>:FUNCTION:FIXed:RPoint:MAXimum\[:PEAK\]](#) on page 166

Diff.Freq.Distortion

Opens a submenu to enable and configure difference frequency distortion measurement. This function is only available for AF spectrum measurements.

Definition of the difference frequency distortion:

f1 and f2 represent the frequencies of two sine-wave signals with the same level. Their frequencies should preferably differ by 80 Hz. The difference frequency distortion factors of 2nd and 3rd order (dd2, dd3) are defined as follows:

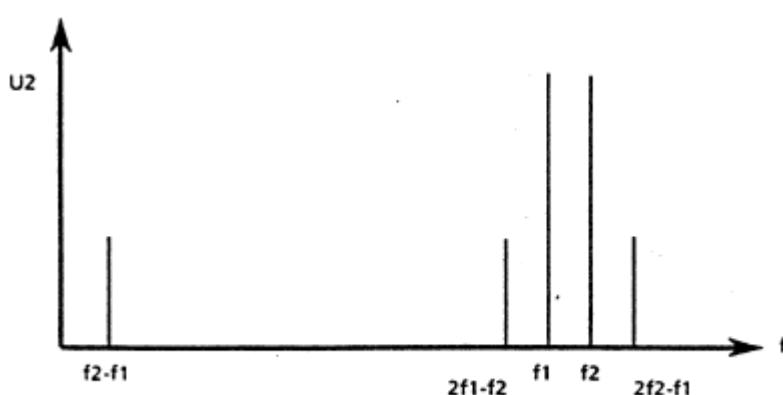

$$d_{d2} = \frac{U_2(f_2 - f_1)}{2 * U_2(f_2)} * 100\%$$

for percentage indication or

$$d_{d2} = 20 * \lg\left(\frac{U_2(f_2 - f_1)}{2 * U_2(f_2)}\right)$$

for indication in dB

$$d_{d3} = \frac{U_2(2 * f_2 - f_1) + U_2(2 * f_1 - f_2)}{2 * U_2(f_2)}$$

for percentage indication or

$$d_{d3} = 20 * \lg\left(\frac{U_2(2 * f_2 - f_1) + U_2(2 * f_1 - f_2)}{2 * U_2(f_2)}\right)$$

for indication in dB

Diff.Freq.Distortion (On/Off) ← Diff.Freq.Distortion

Enables difference frequency distortion. The results are displayed in the summary table with the function "DiffDist 2/3". The markers are indicated as "DFD2, DFD3".

SCPI command:

[CALCulate<n>:MARKer:FUNCTION:DFD\[:STATE\]](#) on page 227

Unit (% / DB) ← Diff.Freq.Distortion

Sets the unit to percent or DB for differential frequency distortion.

SCPI command:

[CALCulate<n>:MARKer:FUNCTION:DFD:UNIT](#) on page 227

Search Signals ← Diff.Freq.Distortion

Starts the search of the signals required for the difference frequency distortion measurement.

SCPI command:


[CALCulate<n>:MARKer:FUNCTION:DFD:SEARchsignal ONCE](#) on page 228

Intermod. Distortion

Opens a submenu to enable and configure intermodulation distortion measurement. This function is only available for AF spectrum measurements.

Definition of the intermodulation distortion:

f1 and f2 represent the frequencies of two sine-wave signals. f2 should be at least 8*f1. The level of f2 should be 1/4th of the level of f1. The modulation factors of 2nd and 3rd order (dm2, dm3) are defined as follows:

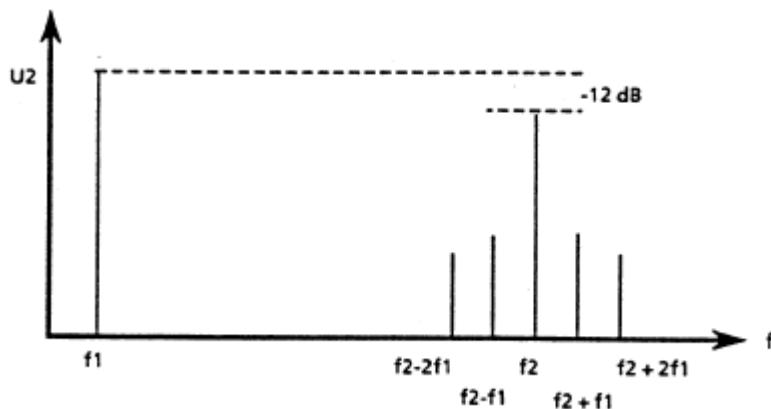

$$dm_2 = \frac{U_2(f_2 + f_1) + U_2(f_2 - f_1)}{U_2(f_2)} * 100\%$$

for percentage indication or

$$dm_2 = 20 * \lg\left(\frac{U_2(f_2 + f_1) + U_2(f_2 - f_1)}{U_2(f_2)}\right)$$

for indication in dB

$$dm_3 = \frac{U_2(f_2 + 2f_1) + U_2(f_2 - 2f_1)}{U_2(f_2)} * 100\%$$

for percentage indication

$$dm_3 = 20 * \lg\left(\frac{U_2(f_2 + 2f_1) + U_2(f_2 - 2f_1)}{U_2(f_2)}\right)$$

for indication in dB

Intermod.Distortion (On/Off) ← Intermod. Distortion

Enables intermodulation distortion. The results are displayed in the summary table with the function "IModDist 2/3". The markers are indicated as "IMD2, IMD3".

SCPI command:

[CALCulate<n>:MARKer:FUNCTION:IMD\[:STATE\]](#) on page 228

Unit (% / dB) ← Intermod. Distortion

Sets the unit to percent or dB for intermodulation distortion.

SCPI command:

[CALCulate<n>:MARKer:FUNCTION:IMD:UNIT](#) on page 229

Search Signals ← Intermod. Distortion

Starts the search of the signals required for the intermodulation distortion measurement.

SCPI command:

[CALCulate<n>:MARKer:FUNCTION:IMD:SEARchsignal ONCE](#) on page 229

n dB down

Opens an edit dialog box to enter a value to define the level spacing of the two temporary markers to the right and left of marker 1 (default setting: 3 dB). Activates the temporary markers T1 and T2. The values of the temporary markers (T1, T2) and the entered value (n dB) are displayed in the marker field.

If a positive value is entered, the markers T1 and T2 are placed below the active reference marker. If a negative value (e.g. for notch filter measurements) is entered, the markers T1 and T2 are placed above the active reference marker. Marker T1 is placed to the left and marker T2 to the right of the reference marker.

In the marker table, the following results are displayed:

Span setting	Parameter name	Description
span > 0	Bw	frequency spacing of the two temporary markers
	Q factor	quality of the displayed bandwidth value (Bw)
span = 0	PWid	pulse width between the two temporary markers

If it is not possible to form the frequency spacing for the n dB value (e.g. because of noise display), dashes instead of a measured value are displayed.

SCPI command:

[CALC:MARK1:FUNC:NDBD:STAT ON](#), see [CALCulate<n>:MARKer<m>:FUNCTION:NDBDown:STATE](#) on page 101

[CALC:MARK1:FUNC:NDBD 3dB](#), see [CALCulate<n>:MARKer<m>:FUNCTION:NDBDown](#) on page 99

[CALC:MARK1:FUNC:NDBD:RES?](#), see [CALCulate<n>:MARKer<m>:FUNCTION:NDBDown:RESult](#) on page 100

[CALC:MARK:FUNC:NDBD:QFAC?](#), see [CALCulate<n>:MARKer<m>:FUNCTION:NDBDown:QFACTOR](#) on page 100

[CALC:MARK1:FUNC:NDBD:FREQ?](#) (span > 0), see [CALCulate<n>:MARKer<m>:FUNCTION:NDBDown:FREQuency](#) on page 99

[CALC:MARK1:FUNC:NDBD:TIME?](#) (span = 0), see [CALCulate<n>:MARKer<m>:FUNCTION:NDBDown:TIME](#) on page 101

Marker Peak List

Opens the "Peak List" submenu to define criteria for the sort order and the contents of the peak list. For each listed peak the frequency ("Stimulus") and level ("Response") values are given. In addition, the peaks are indicated in the trace display. A maximum of 50 entries are listed.

SCPI command:

[CALCulate<n>:MARKer<m>:FUNCTION:FPEaks:COUNT](#) on page 97

[CALCulate<n>:MARKer<m>:FUNCTION:FPEaks:X](#) on page 98

[CALCulate<n>:MARKer<m>:FUNCTION:FPEaks:Y](#) on page 98

Peak List On/Off ← Marker Peak List

Activates/deactivates the marker peak list. If activated, the peak list is displayed and the peaks are indicated in the trace display.

SCPI command:

[CALCulate<n>:MARKer<m>:FUNCTION:FPEaks:STAT](#) on page 93

Sort Mode Freq/Lvl ← Marker Peak List

Defines the criteria for sorting:

FREQ	sorting in ascending order of frequency values (span > 0) or time values (span = 0)
"Lvl"	sorting in ascending order of the level

SCPI command:

[CALCulate<n>:MARKer<m>:FUNCTION:FPEaks:SORt](#) on page 97

Max Peak Count ← Marker Peak List

Defines the maximum number of peaks to be determined and displayed.

SCPI command:

[CALCulate<n>:MARKer<m>:FUNCTION:FPEaks:LIST:SIZE](#) on page 93

Peak Excursion ← Marker Peak List

Opens an edit dialog box for level measurements to enter the minimum level value by which a signal must rise or fall so that it will be identified as a maximum or a minimum by the search functions. Entries from 0 dB to 80 dB are allowed; the resolution is 0.1 dB. The default setting for the peak excursion is 6 dB.

For details see also "Specifying the suitable peak excursion" and "Effect of different peak excursion settings" in the description of the base unit.

SCPI command:

[CALCulate<n>:MARKer<m>:PEXCursion](#) on page 102

Left Limit ← Marker Peak List

Opens an edit dialog box to enter a value for the lower limit (left vertical line: S1 for span > 0; T1 for zero span). The search is performed between the lines of the left and right limit (see also [Right Limit](#) softkey).

SCPI command:

[CALCulate<n>:MARKer<m>:X:SLIMits:LEFT](#) on page 104

Right Limit ← Marker Peak List

Opens an edit dialog box to enter a value for the upper limit (left vertical line: S2 for span > 0; T2 for zero span). The search is performed between the lines of the left and right limit (see also [Left Limit](#) softkey). If no value is set, the upper limit corresponds to the stop frequency.

SCPI command:

[CALCulate<n>:MARKer<m>:X:SLIMits:RIGHT](#) on page 104

Threshold ← Marker Peak List

Opens an edit dialog box to define the threshold line. The threshold line represents the lower level limit for a "Peak" search and the upper level limit for a "Min" search.

SCPI command:

[CALCulate<n>:THreshold:STATE](#) on page 95

[CALCulate<n>:THreshold](#) on page 95

ASCII File Export ← Marker Peak List

Opens the "ASCII File Export Name" dialog box and saves the active peak list in ASCII format to the specified file and directory.

The file consists of the header containing important scaling parameters and a data section containing the marker data. For details on an ASCII file see [chapter 2.1.10, "ASCII File Export Format"](#), on page 23.

This format can be processed by spreadsheet calculation programs, e.g. MS-Excel. It is necessary to define ';' as a separator for the data import. Different language versions of evaluation programs may require a different handling of the decimal point. It is therefore possible to select between separators '.' (decimal point) and ',' (comma) using the "Decim Sep" softkey (see ["Decim Sep"](#) on page 60).

SCPI command:

[FORMAT:DEXPort:DSEParator](#) on page 181

[MMEMory:STORe<n>:LIST](#) on page 179

Decim Sep ← Marker Peak List

Selects the decimal separator with floating-point numerals for the ASCII Trace export to support evaluation programs (e.g. MS-Excel) in different languages. The values '.' (decimal point) and ',' (comma) can be set.

SCPI command:

[FORMAT:DEXPort:DSEParator](#) on page 181

Marker Number ← Marker Peak List

If enabled, the determined peaks are indicated by their corresponding marker number in the trace display.

SCPI command:

[CALCulate<n>:MARKer<m>:FUNCTION:FPEaks:ANN:LAB:STAT](#) on page 92

3.2 Remote Commands of the FM Stereo Option (R&S FSV-K7S)

In this section, all remote control commands specific to the FM Stereo option are described in detail.

In addition to these, all remote control commands described for the analog Demodulation option (K7) are available, as well (see [chapter 2.3, "Remote Commands of the Analog Demodulation \(R&S FSV-K7\)"](#), on page 79).

For details on conventions used in this chapter refer to [chapter 2.3.1, "Notation"](#), on page 81.

For further information on analyzer or basic settings commands, refer to the corresponding subsystem in the base unit description.

Subsystems for FM Stereo (R&S FSV-K7S)

3.2.1	Notation.....	224
3.2.2	CALCulate:MARKer:FUNCTION Subsystem (FM Stereo Option, R&S FSV-K7S).....	227
3.2.3	SENSe Subsystem.....	231
3.2.4	[SENSe:]SFM:<ChannelType> Subsystem.....	232
3.2.5	TRIGger Subsystem (FM Stereo, R&S FSV-K7S).....	241
3.2.6	UNIT Subsystem (FM Stereo, R&S FSV-K7S).....	246

3.2.1 Notation

In the following sections, all commands implemented in the instrument are first listed and then described in detail, arranged according to the command subsystems. The notation is adapted to the SCPI standard. The SCPI conformity information is included in the individual description of the commands.

Individual Description

The individual description contains the complete notation of the command. An example for each command, the *RST value and the SCPI information are included as well.

The options and operating modes for which a command can be used are indicated by the following abbreviations:

Abbreviation	Description
A	spectrum analysis
A-F	spectrum analysis – span > 0 only (frequency mode)
A-T	spectrum analysis – zero span only (time mode)
ADEM	analog demodulation (option R&S FSV-K7)

BT	Bluetooth (option R&S FSV-K8)
CDMA	CDMA 2000 base station measurements (option R&S FSV-K82)
EVDO	1xEV-DO base station analysis (option R&S FSV-K84)
GSM	GSM/Edge measurements (option R&S FSV-K10)
IQ	IQ Analyzer mode
OFDM	WiMAX IEEE 802.16 OFDM measurements (option R&S FSV-K93)
OFDMA/WiBro	WiMAX IEEE 802.16e OFDMA/WiBro measurements (option R&S FSV-K93)
NF	Noise Figure measurements (R&S FSV-K30)
PHN	Phase Noise measurements (R&S FSV-K40)
PSM	Power Sensor measurements (option R&S FSV-K9)
SFM	Stereo FM measurements (option R&S FSV-K7S)
SPECM	Spectrogram mode (option R&S FSV-K14)
TDS	TD-SCDMA base station / UE measurements (option R&S FSV-K76/K77)
VSA	Vector Signal Analysis (option R&S FSV-K70)
WCDMA	3GPP Base Station measurements (option R&S FSV-K72), 3GPP UE measurements (option R&S FSV-K73)
WLAN	WLAN TX measurements (option R&S FSV-K91)



The spectrum analysis mode is implemented in the basic unit. For the other modes, the corresponding options are required.

Upper/Lower Case Notation

Upper/lower case letters are used to mark the long or short form of the key words of a command in the description. The instrument itself does not distinguish between upper and lower case letters.

Special Characters

	A selection of key words with an identical effect exists for several commands. These keywords are indicated in the same line; they are separated by a vertical stroke. Only one of these keywords needs to be included in the header of the command. The effect of the command is independent of which of the keywords is used.
--	---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

Example:

SENSe:FREQuency:CW|:FIXed

The two following commands with identical meaning can be created. They set the frequency of the fixed frequency signal to 1 kHz:

SENSe:FREQuency:CW 1E3

SENSe:FREQuency:FIXed 1E3

A vertical stroke in parameter indications marks alternative possibilities in the sense of "or". The effect of the command differs, depending on which parameter is used.

Example: Selection of the parameters for the command

```
[SENSe<1...4>:] AVERage<1...4>:TYPE VIDeo | LINear
```

[]	Key words in square brackets can be omitted when composing the header. The full command length must be accepted by the instrument for reasons of compatibility with the SCPI standards. Parameters in square brackets can be incorporated optionally in the command or omitted as well.
{} 	Parameters in braces can be incorporated optionally in the command, either not at all, once or several times.

Description of Parameters

Due to the standardization, the parameter section of SCPI commands consists always of the same syntactical elements. SCPI has therefore specified a series of definitions, which are used in the tables of commands. In the tables, these established definitions are indicated in angled brackets (<...>) and is briefly explained in the following.

For details see the chapter "SCPI Command Structure" in the base unit description.

<Boolean>

This keyword refers to parameters which can adopt two states, "on" and "off". The "off" state may either be indicated by the keyword OFF or by the numeric value 0, the "on" state is indicated by ON or any numeric value other than zero. Parameter queries are always returned the numeric value 0 or 1.

<numeric_value> <num>

These keywords mark parameters which may be entered as numeric values or be set using specific keywords (character data). The following keywords given below are permitted:

- MAXimum: This keyword sets the parameter to the largest possible value.
- MINimum: This keyword sets the parameter to the smallest possible value.
- DEFault: This keyword is used to reset the parameter to its default value.
- UP: This keyword increments the parameter value.
- DOWN: This keyword decrements the parameter value.

The numeric values associated to MAXimum/MINimum/DEFault can be queried by adding the corresponding keywords to the command. They must be entered following the quotation mark.

Example:

```
SENSe:FREQuency:CENTER? MAXimum
```

Returns the maximum possible numeric value of the center frequency as result.

<arbitrary block program data>

This keyword is provided for commands the parameters of which consist of a binary data block.

3.2.2 CALCulate:MARKer:FUNCTION Subsystem (FM Stereo Option, R&S FSV-K7S)

The CALCulate:MARKer:FUNCTION subsystem contains the marker functions for the option FM Stereo,R&S FSV-K7S.

CALCulate<n>:MARKer:FUNCTION:Dfd[:STATe].....	227
CALCulate<n>:MARKer:FUNCTION:Dfd:UNIT.....	227
CALCulate<n>:MARKer:FUNCTION:Dfd[:RESUlt<m>].....	228
CALCulate<n>:MARKer:FUNCTION:Dfd:SEARchsignal ONCE.....	228
CALCulate<n>:MARKer:FUNCTION:IMD[:STATe].....	228
CALCulate<n>:MARKer:FUNCTION:IMD:UNIT.....	229
CALCulate<n>:MARKer:FUNCTION:IMD[:RESUlt<m>].....	229
CALCulate<n>:MARKer:FUNCTION:IMD:SEARchsignal ONCE.....	229
CALCulate<n>:MARKer:FUNCTION:Sfm[:RESUlt<m>].....	230
CALCulate<n>:MARKer:FUNCTION:Sfm:<ChannelType>[:RESUlt<m>].....	230

CALCulate<n>:MARKer:FUNCTION:Dfd[:STATe] <State>

This command activates difference frequency distortion measurement in the specified window.

Suffix:

<n> 1...4
 window

Parameters:

<State> **ON | OFF**
*RST: OFF

Example: CALC:MARK:FUNC:Dfd:ON

Mode: SFM

CALCulate<n>:MARKer:FUNCTION:Dfd:UNIT <ResultUnit>

This command defines the unit for the difference frequency distortion measurement results.

Suffix:

<n> 1...4
 irrelevant

Parameters:

<ResultUnit> **PCT | DB**
*RST: PCT

Example: CALC:MARK:FUNC:DFD:UNIT DB

Mode: SFM

CALCulate<n>:MARKer:FUNCTION:DFD[:RESult<m>]?

This command queries the result of the difference frequency distortion measurement in the specified window.

Suffix:

<n> 1...4
window

<m> 1...6
irrelevant

Return values:

<Result> <dd2>,<dd3>
The difference frequency distortion factors of 2nd and 3rd order
(see "Diff.Freq.Distortion" on page 218)

Example: CALC:MARK:FUNC:DFD:RES?

Usage: Query only

Mode: SFM

CALCulate<n>:MARKer:FUNCTION:DFD:SEARchsignal ONCE

This command starts the search of the signals required for the difference frequency distortion measurement in the specified window.

Suffix:

<n> 1...4
window

Example: CALC:MARK:FUNC:DFD:SEAR ONCE

Usage: Event

Mode: SFM

CALCulate<n>:MARKer:FUNCTION:IMD[:STATe] <State>

This command activates intermodulation distortion measurement in the specified window.

Suffix:

<n> 1...4
window

Parameters:

<State> **ON | OFF**

*RST: OFF

Example: CALC:MARK:FUNC:IMD:ON

Mode: SFM

CALCulate<n>:MARKer:FUNCTION:IMD:UNIT <ResultUnit>

This command defines the unit for the intermodulation distortion measurement results.

Suffix:

<n> 1...4
irrelevant

Parameters:

<ResultUnit> PCT | DB
*RST: PCT

Example: CALC:MARK:FUNC:IMD:UNIT DB

Mode: SFM

CALCulate<n>:MARKer:FUNCTION:IMD[:RESUlt<m>]?

This command queries the result of the intermodulation distortion measurement in the specified window.

Suffix:

<n> 1...4
window
<m> 1...6
irrelevant

Return values:

<Result> <dm2>,<dm3>
The modulation factors of 2nd and 3rd order

Example: CALC:MARK:FUNC:IMD:RES?

Usage: Query only

Mode: SFM

CALCulate<n>:MARKer:FUNCTION:IMD:SEARchsignal ONCE

This command starts the search of the signals required for the intermodulation distortion measurement in the specified window.

Suffix:

<n> 1...4
window

Example: CALC:MARK:FUNC:IMD:SEAR ONCE

Usage: Event

Mode: SFM

CALCulate<n>:MARKer:FUNCTION:SFM[:RESULT<m>]? <ResultType>

This command queries the results of the stereo measurement.

Suffix:

<n>	1...4 window
-----	-----------------

Query parameters:

<ResultType>	SUMMARY FCARRIER XTALK
--------------	----------------------------

SUMMARY

Returns all results of the measurement.

FCARRIER

Returns only the carrier frequency.

XTALK

Returns crosstalk between left and right channels in dB:

-20|log(Left [kHz] / Right[kHz])| dB

Return values:

<SUMMARY>	<Absolute deviation>, <Relative deviation>, <SINAD>, <THD>, <Modulation frequency>
-----------	------------------------------------------------------------------------------------

The results consist of the described 5 values for each channel, separated by commas.

Note: if one of the result values is not available, $9.91E+37$ is inserted for the missing value.

To obtain the results for an individual channel, or only individual results, use the specific commands:

CALCulate<n>:MARKer:FUNCTION:SFM:<ChannelType>[:RESULT<m>] on page 230

<FCARRIER>	The carrier frequency is returned.
------------	------------------------------------

Example: CALC1:MARK:FUNC:SFM:RES?

Usage: Query only

Mode: SFM

CALCulate<n>:MARKer:FUNCTION:SFM:<ChannelType>[:RESULT<m>]? <MeasType>

This command queries the results of the measurement type for the selected channel in the specified window.

Suffix:

<n>	1...4 window
-----	-----------------

<ChannelType>	LEFT RIGHT MPX MONO STEREO RDS PILOT
---------------	--------------------------------------------------

Channel type for which the command is performed.

Query parameters:

<MeasType> ALL | ADEV | RDEV | SINad | THD | AFrequency

ALL

All available measurement values

ADEV

The absolute deviation

RDEV

The relative deviation

SINad

The signal-to-noise-and-distortion value

THD

Total harmonic distortion

AFFrequency

Audio frequency

*RST: ALL

Return values:

<Result> Measurement value according to the specified measurement type.
Note: if the specified result value is not available, a "Query Error" is returned. If all result values are queried (query parameter "ALL"), and one of them is not available, $9.91E+37$ is inserted for the missing value.

Example:

CALC1:MARK:FUNC:SFM:LEFT? THD

Queries the total harmonic distortion for the left stereo channel.

Usage:

Query only

Mode:

SFM

3.2.3 SENSe Subsystem

The SENSe subsystem controls the essential parameters of the stereo FM demodulator. In accordance with the SCPI standard, the keyword SENSe is optional for this reason, which means that it is not necessary to include the SENSe node in command sequences.

[SENSe:]SFM:FILT _n :AOFF	231
[SENSe:]SFM:STATE.....	232
[SENSe:]SFM:REFERENCE.....	232

[SENSe:]SFM:FILT_n:AOFF

This command switches all AF filters off.

Suffix:

<n> 1...4
window

Example:

SENS:SFM:FILT:AOFF

Usage:

Event

Mode: SFM

[SENSe:]SFM:STATe <State>

This command switches between Stereo FM and Spectrum mode.

Parameters:

<State>	ON OFF
	*RST: OFF

Example: SFM:STAT ON

Mode: SFM

[SENSe:]SFM:REFerence <Level>

This command defines the reference deviation required for relative deviation measurements. Alternatively, it can be defined automatically, see e.g. [\[SENSe:\]SFM:<ChannelType>:RSUMmary:REFerence\[:AUTO\] ONCE](#) on page 240

Parameters:

<Level>	<numeric value> in Hz or dBm
	*RST: -10.0 dBm

Example: SFM:REF 2Hz

Mode: SFM

3.2.4 [SENSe:]SFM:<ChannelType> Subsystem

The **[SENSe:]SFM:<ChannelType>** subsystem contains commands for the definition of frequency and level settings when measuring the specific channels of FM stereo signals.

[SENSe:]SFM:<ChannelType>:AFSPectrum:TYPE	233
[SENSe:]SFM:<ChannelType>:AFSPectrum:RESult	233
[SENSe:]SFM:<ChannelType>:FILTer:AWEighted[:STATe]	234
[SENSe:]SFM:<ChannelType>:FILTer:CCITt:STATe	234
[SENSe:]SFM:<ChannelType>:FILTer:CCIR[:UNWeighted][:STATe]	234
[SENSe:]SFM:<ChannelType>:FILTer:WEIGHTed[:STATe]	235
[SENSe:]SFM:<ChannelType>:FILTter:COUpling	235
[SENSe:]SFM:<ChannelType>:FILTter:DEMPhasis:STATe	235
[SENSe:]SFM:<ChannelType>:FILTter:DEMPhasis:TConstant	236
[SENSe:]SFM:<ChannelType>:FILTter:HPASs:STATe	236
[SENSe:]SFM:<ChannelType>:FILTter:HPASs:FREQuency	236
[SENSe:]SFM:<ChannelType>:FILTter:LPASs:STATe	237
[SENSe:]SFM:<ChannelType>:FILTter:LPASs:FREQuency	237
[SENSe:]SFM:<ChannelType>:FILTter:LPASs:FREQuency[:ABSolute]	237
[SENSe:]SFM:<ChannelType>:FILTter:LPASs:FREQuency:RELative	238
[SENSe:]SFM:<ChannelType>:RSUMmary:COUpling	238
[SENSe:]SFM:<ChannelType>:RSUMmary:DETector[:FUNCtion]	239

[SENSe:]SFM:<ChannelType>:RSUMmary:MODE.....	239
[SENSe:]SFM:<ChannelType>:RSUMmary:REFerence[:AUTO] ONCE.....	240
[SENSe:]SFM:<ChannelType>:TDOmain:RESult.....	240
[SENSe:]SFM:<ChannelType>:TDOmain:TYPE.....	241

[SENSe:]SFM:<ChannelType>:AFSPectrum:TYPE <TraceMode>

This command selects the trace modes of the FM stereo AF spectrum to be measured simultaneously. For each trace a mode can be defined, however only if the specified channel is currently displayed in one of the four screens. If a trace mode is set for a channel that is not displayed, a query error is generated.

Suffix:

<ChannelType> LEFT | RIGHT | MPX | MONO | STEReo | RDS | PIlot
Channel type for which the command is performed.

Parameters:

<TraceMode> <TraceMode1>, <TraceMode2>, <TraceMode3>, <TraceMode4>, <TraceMode5>, <TraceMode6>
WRITe | AVERage | MAXHold | MINHold | VIEW | OFF
For details on trace modes see [chapter 2.3.6.1, "Trace Mode Result Types", on page 116](#).
*RST: OFF,OFF,OFF,OFF,OFF,OFF

Example: SFM:LEFT:AFSP:TYPE WRIT,OFF,AVER

Mode: SFM

[SENSe:]SFM:<ChannelType>:AFSPectrum:RESULT? <TraceMode>

This command reads the AF spectrum result data of the FM stereo signal in the specified trace mode. The data format of the output data block is defined by the FORMat command (see [chapter 2.3.6.2, "Formats for Returned Values: ASCII Format and Binary Format", on page 117](#)).

The output units are described in [CALCulate<n>:MARKer<m>:PEXCursion](#) on page 102.

Suffix:

<ChannelType> LEFT | RIGHT | MPX | MONO | STEReo | RDS | PIlot
Channel type for which the command is performed.

Query parameters:

<TraceMode> WRITe
At least one screen must display a channel with the specified channel type that has the trace mode "Write" specified using [\[SENSe:\]ADEMod:AM\[:ABSolute\]\[:TDOmain\]\[:TYPE\]](#) on page 122. Otherwise a query error is generated.

Example:

SFM:LEFT:AFSP:RES MINH

Returns the minimum value in the left channel after a series of measurements.

Usage: Query only

Mode: SFM

[SENSe:]SFM:<ChannelType>:FILT:AWEWeighted[:STATe] <State>

This command activates/deactivates the weighted CCIR filter for the specified channel type.

For details on the weighted "A" filter see "[A Weighted](#)" on page 31.

Suffix:

<ChannelType> LEFT | RIGHT | MPX | MONO | STEReo | RDS | PIlot
Channel type for which the command is performed.

Parameters:

<State> **ON | OFF**

*RST: OFF

Example: SFM:LEFT:FILT:AWEI ON

Mode: SFM

[SENSe:]SFM:<ChannelType>:FILT:CCITt:STATe <State>

This command activates/deactivates the CCIT (CCIT P.53) weighting filter for the specified channel type.

For details on the CCIT filter see "[CCITT](#)" on page 30.

Suffix:

<ChannelType> LEFT | RIGHT | MPX | MONO | STEReo | RDS | PIlot
Channel type for which the command is performed.

Parameters:

<State> **ON | OFF**

*RST: OFF

Example: SFM:LEFT:FILT:CCIT:STAT ON

Mode: SFM

[SENSe:]SFM:<ChannelType>:FILT:CCIR[:UNWeighted][:STATe] <State>

This command activates/deactivates the unweighted CCIR filter for the specified channel type.

For details on the unweighted CCIR filter see "[CCIR Unweighted](#)" on page 30.

Suffix:

<ChannelType> LEFT | RIGHT | MPX | MONO | STEReo | RDS | PIlot
Channel type for which the command is performed.

Parameters:

<State> **ON | OFF**
 *RST: OFF

Example: SFM:LEFT:FILT:CCIR ON

Mode: SFM

[SENSe:]SFM:<ChannelType>:FILTer:CCIR:WEIGhted[:STATe] <State>

This command activates/deactivates the weighted CCIR filter for the specified channel type.

For details on the weighted CCIR filter see "["CCIR Weighted"](#) on page 31.

Suffix:

<ChannelType> LEFT | RIGHT | MPX | MONO | STEReo | RDS | PIlot
 Channel type for which the command is performed.

Parameters:

<State> **ON | OFF**
 *RST: OFF

Example: SFM:LEFT:FILT:CCIR:WEIG ON

Mode: SFM

[SENSe:]SFM:<ChannelType>:FILTer:COUPLing <State>

This command couples the filter settings for the specified channel type to other channels. The filter settings for all channels for which this setting is set to "ON" are defined identically.

Suffix:

<ChannelType> LEFT | RIGHT | MPX | MONO | STEReo | RDS | PIlot
 Channel type for which the command is performed.

Parameters:

<State> **ON | OFF**
 *RST: OFF

Example: SFM:LEFT:FILT:COUP ON

Mode: SFM

[SENSe:]SFM:<ChannelType>:FILTer:DEMPhasis:STATe <State>

This command activates/deactivates the selected deemphasis for the specified channel type.

Suffix:

<ChannelType> LEFT | RIGHT | MPX | MONO | STEReo | RDS | PIlot
 Channel type for which the command is performed.

Parameters:**<State>** **ON | OFF**

*RST: OFF

Example:

SFM:LEFT:FILT:DEMP:STAT ON

Mode: SFM

[SENSe:]SFM:<ChannelType>:FILTer:DEMPhasis:TCONstant <Value>

This command selects the deemphasis for the specified channel type. For details on deemphasis refer to "[Deemphasis](#)" on page 31.

Suffix:**<ChannelType>** LEFT | RIGHT | MPX | MONO | STEReo | RDS | PIlot
Channel type for which the command is performed.**Parameters:****<Value>** 25 us | 50 us | 75 us | 750 us

*RST: 50 us

Example:

SFM:LEFT:FILT:DEMP:TCON 75us

Mode: SFM

[SENSe:]SFM:<ChannelType>:FILTer:HPASs:STATe <State>

This command activates/deactivates the selected high pass filter for the specified channel type.

For details on the high pass filter refer to "[High Pass](#)" on page 29.

Suffix:**<ChannelType>** LEFT | RIGHT | MPX | MONO | STEReo | RDS | PIlot
Channel type for which the command is performed.**Parameters:****<State>** **ON | OFF**

*RST: OFF

Example:

SFM:LEFT:FILT:HPAS:STAT ON

Mode: SFM

[SENSe:]SFM:<ChannelType>:FILTer:HPASs:FREQuency <FilterType>

This command selects the high pass filter type for the specified channel type. For details on filters refer to "[Deemphasis](#)" on page 31.

Suffix:**<ChannelType>** LEFT | RIGHT | MPX | MONO | STEReo | RDS | PIlot
Channel type for which the command is performed.

Parameters:

<FilterType> Range: 50 to 300
*RST: 300Hz
Default unit: Hz

Example:

SFM:LEFT:FILT:HPAS:FREQ 300Hz

Mode:

SFM

[SENSe:]SFM:<ChannelType>:FILT:LPASs:STATE <State>

This command activates the low pass filter for the specified channel type.

For details on the low pass filter refer to "[Low Pass](#)" on page 29.

Suffix:

<ChannelType> LEFT | RIGHT | MPX | MONO | STEReo | RDS | PIlot
Channel type for which the command is performed.

Parameters:

<State> **ON | OFF**

*RST: OFF

Example:

SFM:LEFT:FILT:LPAS:STAT ON

Mode:

SFM

[SENSe:]SFM:<ChannelType>:FILT:LPASs:FREQuency <Level>

This command activates/deactivates the selected low pass filter for the specified channel type.

For details on the low pass filter refer to "[Low Pass](#)" on page 29.

Suffix:

<ChannelType> LEFT | RIGHT | MPX | MONO | STEReo | RDS | PIlot
Channel type for which the command is performed.

Parameters:

<Level> <numeric value>

*RST: RST value

Example:

SFM:LEFT:FILT:LPAS:FREQ 10

Mode:

SFM

[SENSe:]SFM:<ChannelType>:FILT:LPASs:FREQuency[:ABSolute] <FilterType>

This command selects the absolute low pass filter type in the specified window. For details on filters refer to "[Low Pass](#)" on page 29.

For details about the demodulation bandwidth range refer to "[Demod BW](#)" on page 28.

Suffix:

<n> 1...4
 window

Parameters:

<FilterType> 3kHz | 15kHz | 150kHz
 *RST: 15kHz

Example:

SFM:LEFT:FILT:LPAS:FREQ 150kHz

Selects the low pass filter for the demodulation bandwidth range from 400 kHz to 16 MHz.

Mode:

SFM

[SENSe:]SFM:<ChannelType>:FILTer:LPASs:FREQuency:RELative <FilterType>

This command selects the relative low pass filter type in the specified window. For details on filters refer to [Low Pass](#) softkey.

For details about the demodulation bandwidth range refer to "[Demod BW](#)" on page 28.

Suffix:

<n> 1...4
 window

Parameters:

<FilterType> 5PCT | 10PCT | 25PCT
 *RST: 25PCT

Example:

SFM:LEFT:FILT:LPAS:FREQ 25PCT

Selects the low pass filter as 25 % of the demodulation bandwidth.

Mode:

SFM

[SENSe:]SFM:<ChannelType>:RSUMmary:COUPLing <State>

This command couples the channel settings to other channels, i.e. channels for which this command is set to "ON" are configured identically.

Suffix:

<ChannelType> LEFT | RIGHT | MPX | MONO | STEReo | RDS | PIlot
 Channel type for which the command is performed.

Parameters:

<State> ON | OFF

*RST: OFF

Example:

SFM:LEFT:RSUM:COUP ON

Mode:

SFM

[SENSe:]SFM:<ChannelType>:RSUMmary:DETector[:FUNCTION] <Detector>

This command defines the detector used to determine the deviation value of the left channel of the FM stereo signal in the result summary.

Suffix:

<ChannelType> LEFT | RIGHT | MPX | MONO | STEReo | RDS | PIlot
Channel type for which the command is performed.

Parameters:

<Detector> RMS | SRMS | PPEak | NPEak | PAverage | QPEak | SQPeak

RMS

RMS

SRMS

RMS^{*}SQRT2

PPEak

Positive peak

NPEak

Negative peak

PAverage

±Peak/2

QPEak

Quasipeak CCIR

SQPeak

Quasipeak^{*}SQRT2

*RST: PAverage

Example:

SFM:LEFT:RSUM:DET PPE

Sets the detector for the left channel to positive peak.

Mode:

SFM

[SENSe:]SFM:<ChannelType>:RSUMmary:MODE <Mode>

This command defines the result summary mode for the absolute and relative deviation. It does not affect the trace mode.

Suffix:

<ChannelType> LEFT | RIGHT | MPX | MONO | STEReo | RDS | PIlot
Channel type for which the command is performed.

Parameters:

<Mode>	WRITe AVERage PHOLD
	WRITe
	Clear Write: Overwrite mode; the summary is overwritten by each sweep.
	AVERage
	The average is formed over several sweeps. The number of sweeps is defined by the sweep count (see [SENSe:SWEEp:COUNt on page 151] or [SENSe:AVERage<n>:COUNt on page 154]).
	PHOLD
	Peak hold: The maximum values are determined over several sweeps and displayed. The number of sweeps is defined by the sweep count (see [SENSe:SWEEp:COUNt on page 151] or [SENSe:AVERage<n>:COUNt on page 154]).

*RST: WRITe

Example:

AVER:COUN 16
 Sets the number of measurements to 16.
 SFM:LEFT:RSUM:MODE PHOL
 Sets the result summary mode for the left channel to peak hold.
 The maximum value during 16 measurements is displayed in the result summary.

Mode:

SFM

[SENSe:]SFM:<ChannelType>:RSUMmary:REFerence[:AUTO] ONCE

This command determines the reference deviation from the current channel measurement.

Suffix:

<ChannelType> LEFT | RIGHT | MPX | MONO | STEReo | RDS | PIlot
 Channel type for which the command is performed.

Example:

SFM:LEFT:RSUM:REF ONCE

Mode:

SFM

[SENSe:]SFM:<ChannelType>:TDOmain:RESult? <TraceMode>

This command reads the result data of the FM stereo signal in zero span in the specified trace mode. The data format of the output data block is defined by the FORMat command (see [chapter 2.3.6.2, "Formats for Returned Values: ASCII Format and Binary Format"](#), on page 117).

The output units are described in [CALCulate<n>:MARKer<m>:PEXCursion](#) on page 102.

Suffix:

<ChannelType> LEFT | RIGHT | MPX | MONO | STEReo | RDS | PIlot
Channel type for which the command is performed.

Query parameters:

<TraceMode> WRITe

At least one screen must display a left channel that has the trace mode "Write" specified using [SENSe:]ADEMod:AM[:
ABSolute] [:TDOmain] [:TYPE] on page 122. Otherwise a query error is generated.

Example:

SFM:LEFT:TDOM:RES WRIT

Returns the current trace results in the left channel.

Usage:

Query only

Mode:

SFM

[SENSe:]SFM:<ChannelType>:TDOmain:TYPE <TraceMode>

This command selects the trace modes of the FM stereo signal to be measured simultaneously in zero span. For each trace a mode can be defined, however only if the specified channel is currently displayed in one of the four screens. If a trace mode is set for a channel that is not displayed, a query error is generated.

Suffix:

<ChannelType> LEFT | RIGHT | MPX | MONO | STEReo | RDS | PIlot
Channel type for which the command is performed.

Parameters:

<TraceMode> <TraceMode1>, <TraceMode2>, <TraceMode3>, <TraceMode4>, <TraceMode5>, <TraceMode6>

WRITe | AVERage | MAXHold | MINHold | VIEW | OFF

For details on trace modes see [chapter 2.3.6.1, "Trace Mode Result Types"](#), on page 116.

*RST: OFF,OFF,OFF,OFF,OFF,OFF

Example:

SFM:LEFT:TDOM:TYPE WRIT,OFF,AVER

Mode:

SFM

3.2.5 TRIGger Subsystem (FM Stereo, R&S FSV-K7S)

The TRIGger subsystem is used to synchronize instrument actions with events. It is thus possible to control and synchronize the start of a sweep.

Commands of the TRIGger Subsystem

TRIGger<n>[:SEQUence]:LEVel:SFM:LEFT	242
TRIGger<n>[:SEQUence]:LEVel:SFM:RIGHT	242
TRIGger<n>[:SEQUence]:LEVel:SFM:MPX	242
TRIGger<n>[:SEQUence]:LEVel:SFM:MONO	243

TRIGger<n>[:SEQUence]:LEVel:SFM:STEReo.....	243
TRIGger<n>[:SEQUence]:LEVel:SFM:RDS.....	243
TRIGger<n>[:SEQUence]:LEVel:SFM:PILOT.....	244
TRIGger<n>[:SEQUence]:SOURce.....	244

TRIGger<n>[:SEQUence]:LEVel:SFM:LEFT <Level>

The command sets the level when the left stereo channel is used as trigger source.

Suffix:

<n>	1...4
	irrelevant

Parameters:

<Level>	Range: -10 to +10
	*RST: 0 Hz
	Default unit: MHz

Example:

TRIG:LEV:SFM:LEFT 2Hz

Sets the left stereo signal trigger threshold to 2 Hz.

Mode:

SFM

TRIGger<n>[:SEQUence]:LEVel:SFM:RIGHT <Level>

The command sets the level when the right stereo channel is used as trigger source.

Suffix:

<n>	1...4
	irrelevant

Parameters:

<Level>	Range: -10 to +10
	*RST: 0 Hz
	Default unit: MHz

Example:

TRIG:LEV:SFM:RIGHT 2Hz

Sets the trigger threshold of the right stereo signal to 2 Hz.

Mode:

SFM

TRIGger<n>[:SEQUence]:LEVel:SFM:MPX <Level>

The command sets the level when the MPX stereo channel is used as trigger source.

Suffix:

<n>	1...4
	irrelevant

Parameters:

<Level>	Range: -10 to +10
	*RST: 0 Hz
	Default unit: MHz

Example: TRIG:LEV:SFM:MPX 2Hz
Sets the trigger threshold of the MPX stereo signal to 2 Hz.

Mode: SFM

TRIGger<n>[:SEQUence]:LEVel:SFM:MONO <Level>

The command sets the level when the mono channel of a FM stereo signal is used as trigger source.

Suffix:
<n> 1...4
irrelevant

Parameters:
<Level> Range: -10 to +10
*RST: 0 Hz
Default unit: MHz

Example: TRIG:LEV:SFM:MONO 2Hz
Sets the trigger threshold of the mono stereo signal to 2 Hz.

Mode: SFM

TRIGger<n>[:SEQUence]:LEVel:SFM:STEReo <Level>

The command sets the level when the stereo channel is used as trigger source.

Suffix:
<n> 1...4
irrelevant

Parameters:
<Level> Range: -10 to +10
*RST: 0 Hz
Default unit: MHz

Example: TRIG:LEV:SFM:STER 2Hz
Sets the trigger threshold of the stereo signal to 2 Hz.

Mode: SFM

TRIGger<n>[:SEQUence]:LEVel:SFM:RDS <Level>

The command sets the level when the RDS stereo channel is used as trigger source.

Suffix:
<n> 1...4
irrelevant

Parameters:
<Level> Range: -10 to +10
*RST: 0 Hz
Default unit: MHz

Example: TRIG:LEV:SFM:RDS 2Hz
Sets the trigger threshold of the RDS stereo signal to 2 Hz.

Mode: SFM

TRIGger<n>[:SEQUence]:LEVel:SFM:PILot <Level>

The command sets the level when the pilot stereo channel is used as trigger source.

Suffix:

<n> 1...4
irrelevant

Parameters:

<Level> Range: -10 to +10
*RST: 0 Hz
Default unit: MHz

Example: TRIG:LEV:SFM:PIL 2Hz

Sets the trigger threshold of the pilot stereo signal to 2 Hz.

Mode: SFM

TRIGger<n>[:SEQUence]:SOURce <Source>

This command selects the trigger source for the start of a sweep.

Suffix:

<n> 1...4
irrelevant

Parameters:

<Source>

IMMEDIATE | EXTERNAL | IFPOWER | AF | FM | AM | AMRELATIVE | PM | TIME | SLEFT | SRIGHT | SMPX | SMONO | STEREO | SRDS | SPILOT

For details on trigger sources refer to the "[Trigger Source](#)" on page 212 softkey.

For triggering with AF, AM, AMRelative, FM, and PM trigger sources to be successful, the measurement time must cover at least 5 periods of the audio signal.

IMMEDIATE

Free Run (no trigger)

EXTERNAL

External trigger

IFPOWER

Triggering via signals which are outside the measurement channel

AF

Audio frequency trigger

FM

Triggering via FM frequency level

AM

Triggering via RF power signal

AMRELATIVE

Triggering via AM signal

PM

Triggering via PM frequency level

TIME

Triggering according to repetition interval

SLEFT

Triggering via left stereo signal

SRIGHT

Triggering via right stereo signal

SMPX

Triggering via MPX stereo signal

SMONO

Triggering via mono stereo signal

STEREO

Triggering via stereo FM signal

SRDS

Triggering via RDS stereo signal

SPILOT

Triggering via pilot stereo signal

*RST: IMM

Example:

TRIG:SEQ:SOUR:SRDS

Defines triggering on the RDS stereo signal.

Mode: SFM

3.2.6 UNIT Subsystem (FM Stereo, R&S FSV-K7S)

UNIT:ADEV <Unit>

Selects the unit for absolute deviation measurements.

Parameters:

<Unit> HZ | DBM
*RST: HZ

Example: UNIT:ADEV DBM

Mode: SFM

UNIT:ANGLE <Unit>

This command selects the unit for angles (e.g. for PM display).

The unit is defined globally for all windows.

Suffix:

<n> irrelevant

Parameters:

<Unit> DEG | RAD
*RST: RAD

Example: UNIT:ANGL DEG

Mode: ADEMOT, SFM

UNIT:POWER <Unit>

This command selects the unit for power.

The unit is defined globally for all windows.

Suffix:

<n> irrelevant

Parameters:

<Unit> DBM | V | A | W | DBPW | WATT | DBUV | DBMV | VOLT | DBUA | AMPere
*RST: dBm

Example: UNIT:POW DBM
Sets the power unit to dBm.

Mode: A, ADEMOT, SFM, SPECM

UNIT:RDEV <Unit>

Selects the unit for relative deviation measurements.

Parameters:

<Unit> DB | PCT

*RST: HZ

Example: UNIT:RDEV PCT

Mode: SFM

UNIT:THD <Mode>

Selects the unit for THD measurements.

Parameters:

<Mode> DB | PCT

*RST: DB

Example: UNIT:THD PCT

Mode: ADEMOM, SFM

List of Commands

CALC:UNIT:THD.....	96
CALCulate<n>:DELTamarker<m>:FUNCTION:FIXed:RPOint:MAXimum[:PEAK].....	166
CALCulate<n>:DELTamarker<m>:FUNCTION:FIXed:RPOint:X.....	167
CALCulate<n>:DELTamarker<m>:FUNCTION:FIXed:RPOint:Y.....	167
CALCulate<n>:DELTamarker<m>:FUNCTION:FIXed[:STATe].....	168
CALCulate<n>:DELTamarker<m>:FUNCTION:PNOise:AUTO.....	169
CALCulate<n>:DELTamarker<m>:FUNCTION:PNOise[:STATe].....	168
CALCulate<n>:DELTamarker<m>:LINK.....	169
CALCulate<n>:DELTamarker<m>:MREF.....	170
CALCulate<n>:DELTamarker<m>:TRACE.....	171
CALCulate<n>:DELTamarker<m>:X.....	171
CALCulate<n>:DELTamarker<m>:X:RELative.....	171
CALCulate<n>:DELTamarker<m>:Y.....	172
CALCulate<n>:DELTamarker<m>[:STATe].....	170
CALCulate<n>:FEED.....	89
CALCulate<n>:FORMAT.....	91
CALCulate<n>:MARKer:FUNCTION:ADEMod:AFREquency[:RESUlt<t>].....	84
CALCulate<n>:MARKer:FUNCTION:ADEMod:AM[:RESUlt<t>].....	84
CALCulate<n>:MARKer:FUNCTION:ADEMod:CARRIER[:RESUlt<t>].....	85
CALCulate<n>:MARKer:FUNCTION:ADEMod:FERRor[:RESUlt<t>].....	86
CALCulate<n>:MARKer:FUNCTION:ADEMod:FM[:RESUlt<t>].....	86
CALCulate<n>:MARKer:FUNCTION:ADEMod:PM[:RESUlt<t>].....	87
CALCulate<n>:MARKer:FUNCTION:ADEMod:SINad:RESUlt<t>.....	88
CALCulate<n>:MARKer:FUNCTION:ADEMod:THD:RESUlt<t>.....	88
CALCulate<n>:MARKer:FUNCTION:DFD:SEARchsignal ONCE.....	228
CALCulate<n>:MARKer:FUNCTION:DFD:UNIT.....	227
CALCulate<n>:MARKer:FUNCTION:DFD[:RESUlt<m>].....	228
CALCulate<n>:MARKer:FUNCTION:DFD[:STATe].....	227
CALCulate<n>:MARKer:FUNCTION:IMD:SEARchsignal ONCE.....	229
CALCulate<n>:MARKer:FUNCTION:IMD:UNIT.....	229
CALCulate<n>:MARKer:FUNCTION:IMD[:RESUlt<m>].....	229
CALCulate<n>:MARKer:FUNCTION:IMD[:STATe].....	228
CALCulate<n>:MARKer:FUNCTION:SFM:<ChannelType>[:RESUlt<m>].....	230
CALCulate<n>:MARKer:FUNCTION:SFM[:RESUlt<m>].....	230
CALCulate<n>:MARKer<m>:AOFF.....	97
CALCulate<n>:MARKer<m>:FUNCTION:FPEaks:ANN:LAB:STAT.....	92
CALCulate<n>:MARKer<m>:FUNCTION:FPEaks:COUNT.....	97
CALCulate<n>:MARKer<m>:FUNCTION:FPEaks:LIST:SIZE.....	93
CALCulate<n>:MARKer<m>:FUNCTION:FPEaks:SORT.....	97
CALCulate<n>:MARKer<m>:FUNCTION:FPEaks:STAT.....	93
CALCulate<n>:MARKer<m>:FUNCTION:FPEaks:X.....	98
CALCulate<n>:MARKer<m>:FUNCTION:FPEaks:Y.....	98
CALCulate<n>:MARKer<m>:FUNCTION:NDBDown.....	99
CALCulate<n>:MARKer<m>:FUNCTION:NDBDown:FREQuency.....	99
CALCulate<n>:MARKer<m>:FUNCTION:NDBDown:QFACTor.....	100

CALCulate<n>:MARKer<m>:FUNCTION:NDBDown:RESULT.....	100
CALCulate<n>:MARKer<m>:FUNCTION:NDBDown:STATE.....	101
CALCulate<n>:MARKer<m>:FUNCTION:NDBDown:TIME.....	101
CALCulate<n>:MARKer<m>:FUNCTION:PNOise.....	94
CALCulate<n>:MARKer<m>:FUNCTION:PNOise:RESULT.....	92
CALCulate<n>:MARKer<m>:FUNCTION:ZOOM.....	94
CALCulate<n>:MARKer<m>:LINK.....	94
CALCulate<n>:MARKer<m>:PEXCursion.....	102
CALCulate<n>:MARKer<m>:TRACe.....	103
CALCulate<n>:MARKer<m>:X.....	103
CALCulate<n>:MARKer<m>:X:SLIMits:LEFT.....	104
CALCulate<n>:MARKer<m>:X:SLIMits:RIGHT.....	104
CALCulate<n>:MARKer<m>:X:SLIMits[:STATe].....	105
CALCulate<n>:MARKer<m>:X:SSIZE.....	105
CALCulate<n>:MARKer<m>:Y.....	106
CALCulate<n>:MARKer<m>[:STATe].....	102
CALCulate<n>:THreshold.....	95
CALCulate<n>:THreshold:STATe.....	95
CALCulate<n>:UNIT:ANGLE.....	96
CALCulate<n>:UNIT:POWER.....	96
DIAGnostic<n>:SERVice:NSource.....	181
DISPLAY:MTABLE.....	107
DISPLAY:WSELect.....	113
DISPLAY[:WINDOW<n>]:SSElect.....	108
DISPLAY[:WINDOW<n>]:STATE.....	108
DISPLAY[:WINDOW<n>]:TRACe<t>:MODE.....	109
DISPLAY[:WINDOW<n>]:TRACe<t>:MODE:HCONTinuous.....	111
DISPLAY[:WINDOW<n>]:TRACe<t>:Y:SPACing.....	113
DISPLAY[:WINDOW<n>]:TRACe<t>:Y[:SCALE].....	110
DISPLAY[:WINDOW<n>]:TRACe<t>:Y[:SCALE]:MODE.....	110
DISPLAY[:WINDOW<n>]:TRACe<t>:Y[:SCALE]:RLEVel.....	111
DISPLAY[:WINDOW<n>]:TRACe<t>:Y[:SCALE]:RLEVel:OFFSet.....	112
DISPLAY[:WINDOW<n>]:TRACe<t>:Y[:SCALE]:RPOSITION.....	112
DISPLAY[:WINDOW<n>]:TRACe<t>:Y[:SCALE]:RVALue.....	112
DISPLAY[:WINDOW<n>]:TRACe<t>[:STATe].....	110
DISPLAY[:WINDOW<n>]:SUBWindow<1 2>:SELect.....	108
FORMAT:DEXPort:DSEParator.....	181
FORMAT[:DATA].....	180
INITiate<n>:CONMeas.....	181
INITiate<n>:CONTinuous.....	182
INITiate<n>[:IMMEDIATE].....	182
INPUT:ATTenuation.....	173
INPUT:ATTenuation:AUTO.....	173
INPUT:COUpling.....	174
INPUT:DIQ:CDEvice.....	174
INPUT:DIQ:RANGE:COUpling.....	175
INPUT:DIQ:RANGE[:UPPer].....	176
INPUT:DIQ:RANGE[:UPPer]:UNIT.....	176

INPut:DIQ:SRATE.....	176
INPut:EATT.....	177
INPut:EATT:AUTO.....	177
INPut:GAIN:STATe	177
INPut:IMPedance.....	178
INPut:SELect.....	178
INSTrument:NSELect <Mode>.....	114
INSTrument[:SELect].....	114
MMEMory:STORe<n>:LIST.....	179
MMEMory:STORe<n>:TRACe.....	179
OUTPut:DIQ.....	180
OUTPut:IF[:SOURce].....	179
OUTPut:TRIGger.....	180
PROBe:ID:PARTnumber.....	115
PROBe:ID:SRNumber.....	115
PROBe:SETup:MODE.....	115
PROBe:SETup:NAME.....	115
PROBe:SETup:STATE.....	115
PROBe[:STATe].....	114
SYSTem:DISPlay:UPDATE.....	183
TRACe<n>[:DATA].....	156
TRIGGER<n>[:SEQUence]:BBPower:HOLDoff.....	158
TRIGGER<n>[:SEQUence]:HOLDoff[:TIME].....	159
TRIGGER<n>[:SEQUence]:IFPower:HOLDoff.....	159
TRIGGER<n>[:SEQUence]:IFPower:HYSTeresis.....	159
TRIGGER<n>[:SEQUence]:LEVel:AM:RELative.....	160
TRIGGER<n>[:SEQUence]:LEVel:AM[:ABSolute].....	160
TRIGGER<n>[:SEQUence]:LEVel:BBPower.....	160
TRIGGER<n>[:SEQUence]:LEVel:FM.....	161
TRIGGER<n>[:SEQUence]:LEVel:IFPower.....	161
TRIGGER<n>[:SEQUence]:LEVel:PM.....	161
TRIGGER<n>[:SEQUence]:LEVel:RFPower.....	161
TRIGGER<n>[:SEQUence]:LEVel:SFM:LEFT.....	242
TRIGGER<n>[:SEQUence]:LEVel:SFM:MONO.....	243
TRIGGER<n>[:SEQUence]:LEVel:SFM:MPX.....	242
TRIGGER<n>[:SEQUence]:LEVel:SFM:PILot.....	244
TRIGGER<n>[:SEQUence]:LEVel:SFM:RDS.....	243
TRIGGER<n>[:SEQUence]:LEVel:SFM:RIGHT.....	242
TRIGGER<n>[:SEQUence]:LEVel:SFM:STEReo.....	243
TRIGGER<n>[:SEQUence]:LEVel:VIDeo.....	162
TRIGGER<n>[:SEQUence]:SLOPe.....	162
TRIGGER<n>[:SEQUence]:SOURce.....	163
TRIGGER<n>[:SEQUence]:SOURce.....	244
TRIGGER<n>[:SEQUence]:TIME:RINTerval.....	162
UNIT:ADEV.....	246
UNIT:ANGLE.....	165
UNIT:ANGLE.....	246
UNIT:POWER.....	165

UNIT:POWER.....	246
UNIT:RDEV.....	247
UNIT:THD.....	165
UNIT:THD.....	247
[SENSe:]ADEMod:AM:RELative:AFSPectrum:RESult.....	125
[SENSe:]ADEMod:AM:RELative:AFSPectrum[:TYPE].....	124
[SENSe:]ADEMod:AM:RELative[:TDOMain]:RESult.....	123
[SENSe:]ADEMod:AM:RELative[:TDOMain][:TYPE].....	123
[SENSe:]ADEMod:AM[:ABSolute][:TDOMain]:RESult.....	121
[SENSe:]ADEMod:AM[:ABSolute][:TDOMain][:TYPE].....	122
[SENSe:]ADEMod:BANDwidth BWIDth:DEModulation.....	126
[SENSe:]ADEMod:BANDwidth BWIDth:DEModulation:TYPE.....	126
[SENSe:]ADEMod:FM:AFSPectrum:RESult.....	128
[SENSe:]ADEMod:FM:AFSPectrum[:TYPE].....	128
[SENSe:]ADEMod:FM:OFFSet.....	129
[SENSe:]ADEMod:FM[:TDOMain]:RESult.....	127
[SENSe:]ADEMod:FM[:TDOMain][:TYPE].....	126
[SENSe:]ADEMod:MTIMe.....	130
[SENSe:]ADEMod:PM:AFSPectrum:RESult.....	133
[SENSe:]ADEMod:PM:AFSPectrum[:TYPE].....	132
[SENSe:]ADEMod:PM:RPOint[:X].....	134
[SENSe:]ADEMod:PM[:TDOMain]:RESult.....	131
[SENSe:]ADEMod:PM[:TDOMain][:TYPE].....	130
[SENSe:]ADEMod:RLENgth.....	135
[SENSe:]ADEMod:SET.....	135
[SENSe:]ADEMod:SPECtrum:BANDwidth BWIDth[:RESolution].....	136
[SENSe:]ADEMod:SPECtrum:RESult.....	137
[SENSe:]ADEMod:SPECtrum:SPAN:ZOOM.....	139
[SENSe:]ADEMod:SPECtrum:SPAN[:MAXimum].....	138
[SENSe:]ADEMod:SPECtrum[:TYPE].....	136
[SENSe:]ADEMod:SQUElch:LEVel.....	139
[SENSe:]ADEMod:SQUElch[:STATE].....	139
[SENSe:]ADEMod:SRATe.....	140
[SENSe:]ADEMod<n>:AF:CENTER.....	118
[SENSe:]ADEMod<n>:AF:COUPLing.....	119
[SENSe:]ADEMod<n>:AF:SPAN.....	119
[SENSe:]ADEMod<n>:AF:SPAN:FULL.....	120
[SENSe:]ADEMod<n>:AF:STARt.....	120
[SENSe:]ADEMod<n>:AF:STOP.....	121
[SENSe:]ADEMod<n>:ZOOM:LENGTH.....	141
[SENSe:]ADEMod<n>:ZOOM:LENGTH:MODE.....	141
[SENSe:]ADEMod<n>:ZOOM:START.....	140
[SENSe:]ADEMod<n>:ZOOM[:STATE].....	140
[SENSe:]ADEMod[:STATE].....	118
[SENSe:]ADJust:ALL.....	142
[SENSe:]ADJust:CONFIGuration:HYSTeresis:LOWER.....	142
[SENSe:]ADJust:CONFIGuration:HYSTeresis:UPPer.....	143
[SENSe:]ADJust:CONFigure:LEVel:DURation.....	143

[SENSe:]ADJust:FREQuency.....	143
[SENSe:]ADJust:LEVel.....	143
[SENSe:]ADJust:SCALE:Y:AUTO[:CONTinuous].....	144
[SENSe:]AVERage<n>:COUNT.....	154
[SENSe:]AVERage<n>:TYPE.....	154
[SENSe:]BANDwidth:DEMod:TYPE.....	144
[SENSe:]BANDwidth BWIDth:DEMod.....	144
[SENSe:]FILTTer<n>:AOFF.....	145
[SENSe:]FILTTer<n>:AWEighted[:STATe].....	145
[SENSe:]FILTTer<n>:CCIR:WEIGHTed[:STATe].....	147
[SENSe:]FILTTer<n>:CCIR[:UNWeighted]][:STATe].....	146
[SENSe:]FILTTer<n>:CCIT.....	146
[SENSe:]FILTTer<n>:DEMPhasis:TCONstant.....	147
[SENSe:]FILTTer<n>:DEMPhasis[:STATe].....	147
[SENSe:]FILTTer<n>:HPASs:FREQuency.....	148
[SENSe:]FILTTer<n>:HPASs[:STATe].....	148
[SENSe:]FILTTer<n>:LPASs:FREQuency:RELative.....	149
[SENSe:]FILTTer<n>:LPASs:FREQuency[:ABSolute].....	149
[SENSe:]FILTTer<n>:LPASs[:STATe].....	148
[SENSe:]FREQuency:CENTER.....	150
[SENSe:]FREQuency:CENTER:STEP:LINK.....	150
[SENSe:]FREQuency:CENTER:STEP:FACTOr.....	151
[SENSe:]FREQuency:CENTER:STEP[:VALue].....	150
[SENSe:]SFM:<ChannelType>:AFSPectrum:RESUlt.....	233
[SENSe:]SFM:<ChannelType>:AFSPectrum:TYPE.....	233
[SENSe:]SFM:<ChannelType>:FILTTer:AWEighted[:STATe].....	234
[SENSe:]SFM:<ChannelType>:FILTTer:CCIR:WEIGHTed[:STATe].....	235
[SENSe:]SFM:<ChannelType>:FILTTer:CCIR[:UNWeighted]][:STATe].....	234
[SENSe:]SFM:<ChannelType>:FILTTer:CCITt:STATe.....	234
[SENSe:]SFM:<ChannelType>:FILTTer:COUpling.....	235
[SENSe:]SFM:<ChannelType>:FILTTer:DEMPhasis:STATe.....	235
[SENSe:]SFM:<ChannelType>:FILTTer:DEMPhasis:TCONstant.....	236
[SENSe:]SFM:<ChannelType>:FILTTer:HPASs:FREQuency.....	236
[SENSe:]SFM:<ChannelType>:FILTTer:HPASs:STATe.....	236
[SENSe:]SFM:<ChannelType>:FILTTer:LPASs:FREQuency.....	237
[SENSe:]SFM:<ChannelType>:FILTTer:LPASs:FREQuency:RELative.....	238
[SENSe:]SFM:<ChannelType>:FILTTer:LPASs:FREQuency[:ABSolute].....	237
[SENSe:]SFM:<ChannelType>:FILTTer:LPASs:STATe.....	237
[SENSe:]SFM:<ChannelType>:RSUMmary:COUpling.....	238
[SENSe:]SFM:<ChannelType>:RSUMmary:DETector[:FUNCTION].....	239
[SENSe:]SFM:<ChannelType>:RSUMmary:MODE.....	239
[SENSe:]SFM:<ChannelType>:RSUMmary:REFerence[:AUTO] ONCE.....	240
[SENSe:]SFM:<ChannelType>:TDOmain:RESUlt.....	240
[SENSe:]SFM:<ChannelType>:TDOmain:TYPE.....	241
[SENSe:]SFM:FILTTer<n>:AOFF.....	231
[SENSe:]SFM:REFERENCE.....	232
[SENSe:]SFM:STATe.....	232
[SENSe:]SWEep:COUNT.....	151

[SENSe:]SWEep:EGATe:HOLDoff.....	152
[SENSe:]SWEep:EGATe:POLarity.....	152
[SENSe:]SWEep:EGATe:SOURce.....	152
[SENSe:]SWEep:EGATe:TYPE.....	153
[SENSe:]SWEep:POINts.....	153
[SENSe:]SWEep:TIME.....	153
[SENSe:][:WINDow:]DETector<trace>[:FUNCTION].....	155
[SENSe:][:WINDow:]DETector<trace>[:FUNCTION]:AUTO.....	155

Index

A

- Abs. Dev Unit
 - softkey 34, 199, 205
- Active probes
 - Activating 75
- AF Auto Scale
 - softkey 49
- AF diagram 26
 - K7 189
- AF Full Span
 - softkey 41
- AF Spectrum (analog demodulation) 21
- AF Time Domain (analog demodulation) 21
- AF trigger (K7) 16
- All AF Filter Off
 - softkey 32, 53, 197, 212
- AM
 - softkey 63
- Amplitude menu
 - analog demodulation 41
 - K7 202
- analog demodulation 10
 - AF trigger (K7) 16
 - bandwidth (K7) 13
 - circuit description (K7) 11
 - measurement results (analog demodulation) 17
 - measurement time (analog demodulation) 18
 - sample rate (analog demodulation) 18
 - trigger offset (analog demodulation) 18
- Analog Demodulation menu (K7) 10, 24
- ASCII Trace export 23
- attenuation
 - (option B25) 45, 207
- Attenuation
 - (option B25) 45, 206
 - Automatic 45, 206
 - Manual 44, 173, 206
 - Option B25 44, 206
- Auto level
 - Hysteresis 48
- Auto Peak detector 17
- Auto Set menu 47
- Average detector 17
- Average trace mode 16, 56
- A Weighted
 - Softkey 31, 52, 196, 211

B

- bandwidth
 - resolution (analog demodulation) 49, 208
- Bandwidth menu
 - analog demodulation 49
 - K7S 208
- Blank trace mode 16, 56
- C**
- CCIR
 - Softkey 30, 31, 51, 52, 196, 210
- CCIT
 - Softkey 30, 51, 196, 210

- Center frequency 38
- Characters

- Special 82, 225
- Clear Write trace mode 15, 55
- Commands
 - Description 81, 224
- Continuous sweep 53
- Coupled
 - Result Summary Setup (K7S) 193, 197

D

- Demod Filter
 - Gaussian 53
 - softkey 53
- demodulation bandwidth (K7) 13
- detector
 - overview 17
- Detector
 - Auto Peak 57
 - Autoselect 57
 - Average 58
 - CISPR Average 58
 - K7S 193
 - Negative Peak 58
 - Positive Peak 57
 - Quasi Peak 58
 - RMS 58
 - RMS Average 59
 - Sample 58
- Diff.Freq. Distortion
 - remote control 227
 - softkey 218
- Diff.Freq.Distortion (On/Off)
 - softkey 219
- DigIConf
 - Softkey 77
- Digital IQ data
 - device 76
- Digital IQ Info
 - Remote control 174
 - Softkey 78
- display configuration
 - analog demodulation 20
 - K7 189
 - K7S 185
- Display configuration 26
- display range
 - level 42, 43
- Display range
 - Frequency 38
- E**
- Electronic input attenuation
 - FSV-B25 177
- EX-IQ-BOX 76
- DigIConf 77
- export format 23
- External Mixer (B21)
 - softkey 75
 - external noise source 74
 - external trigger 61, 213

F

- Filters
 - A Weighted 31, 52, 196, 211
 - fixed reference 70, 217
- FM
 - softkey 62
- FM Stereo 184
- FM Stereo menu (K7) 184
- Frequency
 - Center 38
- Frequency menu
 - analog demodulation 38
- Full Scale Level
 - Digital I/Q Interface (remote control) 175, 176
 - Digital IQ 76

H

- Hysteresis
 - Lower (Auto level) 48
 - Upper (Auto level) 48

I

- IEC/IEEE bus
 - Command description 81, 224
- Impedance
 - Input 46, 207
- Input/Output menu 73
- Input sample rate
 - Digital IQ 76
- Intermod. Distortion
 - softkey 219, 228
- Intermod.Distortion (On/Off)
 - softkey 220

K

- key
 - MEAS CONFIG (K7) 26

L

- Left
 - softkey 189, 214
- level
 - display range 42, 43
 - range 42, 43
- Level
 - Reference 42, 203
- Level Unit
 - Digital I/Q Interface (remote control) 176
 - Digital IQ 76
- line
 - threshold 73, 223
- Lower-case (commands) 82, 225
- Lower Level Hysteresis
 - Softkey 48

M

- Marker
 - Zoom 68
- Marker menu
 - analog demodulation 65
- Marker Number

- softkey 73, 223
- Marker Peak List
 - Activating/Deactivating 72, 222
 - Configuring 71, 222
 - Number display 73, 223
 - Number of entries 72, 222

Markers

- Set to trace 66
- Marker Wizard
 - softkey 66
- Max Hold trace mode 15, 55
- Max Peak Count
 - softkey 72, 222
- MEAS CONFIG key
 - K7 26
- Meas To Ref
 - Result Summary Setup (K7S) 194

menu

- Amplitude (analog demodulation) 41
- Amplitude (K7) 202
- Analog Demodulation (K7) 10, 24
- Auto Set (analog demodulation) 47
- Bandwidth (analog demodulation) 49
- Bandwidth (K7S) 208
- FM Stereo (K7) 184
- Frequency (analog demodulation) 38
- Input/Output 73
- Marker (analog demodulation) 65
- Measurement (K7) 24
- Span (analog demodulation) 40
- Sweep (analog demodulation) 53
- Trigger (analog demodulation) 60
- Trigger (K7S) 212
- Min Hold trace mode 15, 56
- Mode
 - Result Summary (K7S) 193
- Mono
 - softkey 201, 214
- More Traces
 - softkey 59
- MPX
 - softkey 201, 214

N

- n dB down
 - marker function 71, 221
- Negative Peak detector 17
- noise
 - source, external 74

O

- offset
 - reference level 46, 207
- Offset
 - Trigger 215
- online help
 - working with 8
- options
 - Analog Demodulation (K7) 10
 - FM Stereo (K7) 184
- Options
 - FSV-B25 44, 177, 206
 - RF Preamplifier (B22) 44, 205
- Overwrite mode 15, 55

P

Peak List On/Off
 softkey 72, 222

Ph. Noise Auto Peak Search
 remote control 169

Pilo
 softkey 202

Pilot
 softkey 214

PM
 softkey 63

polarity
 external trigger 63, 215
 trigger edge 63, 215

Positive Peak detector 17

Preamplifier (B22) 44, 205

pre-trigger 64, 216

Probes
 Activating 75
 Configuration (Softkey) 75

R

R&S Digital I/Q Interface (B17) 78, 174, 180

R&S Support
 softkey 77

RDS
 softkey 201, 214

reference
 fixed 70, 217

Reference Deviation
 K7S 192

reference level
 offset 46, 207

Reference level 42, 203

Reference Level
 Digital IQ 76

reference point
 frequency 70, 218
 level 70, 218
 peak search 70, 218
 time 70, 218

Repetition interval
 Time trigger 64, 216

resolution bandwidth
 analog demodulation 49, 208

Result Display
 analog demodulation 20
 K7S 185

Result Summary Setup
 softkey 192

RF
 softkey 63, 215

RF diagram 26

 K7 189

RF Power trigger 61, 213

RF Preamplifier (B22) 44, 205

RF Spectrum (analog demodulation) 21

RF Spectrum (K7) 186

RF Time Domain (analog demodulation) 21

RF Time Domain (K7S) 186

Right
 softkey 201, 214

RMS
 VBW 18

RMS detector 17

RX Settings

 softkey 77

S

Sample detector 17

Sample rate
 Digital I/Q Interface (remote control) 176
 Digital IQ 76

scaling
 level axis 46

SCPI
 Conformity information 81, 224

Search Signals
 remote control 229
 softkey 219, 221

Signal Source
 I/Q Analyzer 75
 Remote control 178
 Softkey 75

softkey
 0.1 * RBW (remote control) 150, 151
 0.1 * Span (remote control) 150, 151
 0.5 * RBW (remote control) 150, 151
 0.5 * Span (remote control) 150, 151
 = Center 39
 Abs Dev. Unit (K7S, remote control) 246, 247
 AF Center (analog demodulation) 40
 AF Center (remote control, analog demodulation) 118
 AF Coupling AC/DC (K7) 33, 198, 204
 AF Coupling AC/DC (remote control, analog demodulation) 119
 AF Filter (K7s) 194
 AF Full Span (analog demodulation) 41
 AF Full Span (remote control, analog demodulation) 120
 AF Range (K7s) 32, 198, 203
 AF Span Manua (remote control, analog demodulation) 119
 AF Span Manual (analog demodulation) 40
 AF Start (analog demodulation) 40
 AF Start (remote control, analog demodulation) 120
 AF Stop (analog demodulation) 40
 AF Stop (remote control, analog demodulation) 121
 All AF Filter OFF (remote control, analog demodulation) 145, 231
 All Marker Off 67
 AM/FM/PM/RF (remote control, analog demodulation) 89
 AM (K7) 26
 ASCII File Export 73, 223
 ASCII File Export (remote control) 179
 ASCII Trace Export 60
 Auto All 47
 Average Mode (remote control) 154
 A Weighted (remote control) 234
 CF Stepsize (remote control) 150
 Continue Single Sweep (remote control) 181, 182
 Continuous Sweep (remote control) 182
 Cont Meas (remote control) 182
 Decim Sep 60, 73, 223
 Deemphasis (remote control, analog demodulation) 147

- Demod BW (analog demodulation) 28, 41, 49
 Demod BW (remote control, analog demodulation) 144
 Demod Filter 53
 Demod Filter (remote control) 126, 144
 Detector Auto Select (remote control) 155
 Detector Manual Select (remote control) 155
 Deviation Lin/Log (K7) 33, 199, 204
 Deviation Lin/Log (remote control) 113
 Dev per Division (K7) 32, 198, 203
 Display Config (K7) 189
 Display Config (remote control, analog demodulation) 89
 Display Config (remote control) 108
 EI Atten Mode (Auto/Man) 45, 207
 External 61, 213
 FM (K7) 35
 Free Run 61, 213
 Full Span (analog demodulation) 41
 Full Span (remote control, K7) 139
 Gate Delay (remote control) 152
 Gated Trigger (remote control) 152
 Gate Mode Lvl/Edge (remote control) 153
 Grid Abs/Rel 46
 Grid Abs/Rel (remote control) 110
 High Pass AF Filter (analog demodulation) 29, 50, 194, 209
 High Pass AF Filter (remote control, analog demodulation) 148
 IF Output IF/Video (remote control) 179
 IF Power 62, 213
 Input 50 Ω/75 Ω (remote control) 178
 Left Limit 72, 222
 Left Limit (remote control) 104
 Length Auto (K7) 35, 200
 Length Auto (remote control, analog demodulation) 141
 Length Manual (K7) 34, 200
 Length Manual (remote control, analog demodulation) 141
 Limits On/Off (remote control) 105
 Lin 59
 Link AF Spectrum Marker 69
 Link AF Spectrum Marker (remote control) 94
 Link Mkr1 and Delta1 68
 Link Mrk1 and Delta1 (remote control) 169
 Link Time Marker 69
 Link Time Marker (remote control) 94
 Low Pass AF Filter (remote control, analog demodulation) 148, 149, 237, 238
 Manual 40
 Manual (remote control) 150
 Marker 1, Marker 2 ...16 65
 Marker 1 (remote control) 170
 Marker 1-16 65
 Marker 1 to 4 (remote control) 102, 103, 171
 Marker 2 (remote control) 170
 Marker 3 (remote control) 170
 Marker 4 (remote control) 170
 Marker Norm/Delta 65
 Marker Norm/Delta (remote control) 170
 Marker StepSize 67
 Marker StepSize (remote control) 105
 Marker Table (Off/On/Aut) (remote control) 107
 Marker Table (On/Off) 67
 Marker to Trace (remote control) 170, 171
 Marker Wizard 66
 Marker Zoom (remote control) 94
 Meas Time Auto 48
 Meas Time Manual 48, 143
 More Markers 65
 n dB down 71, 221
 n dB down (remote control) 99, 100, 101
 Noise Source 74
 Noise Src On/Off (remote control) 181
 Peak Excursion 72, 222
 Peak Excursion (remote control) 102
 Peak Search 70, 218
 Peak Search (remote control) 97, 98, 166
 Phase Noise 70
 Phase Noise (remote control, analog demodulation) 94
 Phase Unit Rad/Deg (K7) 34, 44, 199, 204, 205
 Phase Wrap On/Off (K7) 37
 Phase Wrap On/Off (remote control, analog demodulation) 91
 Ph Noise/Ref Fixed (remote control) 168
 Ph Noise On/Off (remote control) 168
 PM (K7) 36
 Power 60
 Power Sensor 73
 R&S Support 77
 Range Lin. Unit 44
 Range Lin. Unit (remote control) 113
 Range Linear % 43
 Range Linear % (remote control) 113
 Range Log (remote control) 110, 113
 Range Log 100 dB 42
 Range Log 10 dB 43
 Range Log 1 dB 43
 Range Log 50 dB 42
 Range Log 5 dB 43
 Range Log Manual 43
 Reference Fixed On/Off 70, 217
 Reference Position (K7) 32, 198, 203
 Reference Position (remote control) 112
 Reference Value (K7) 33, 198, 203
 Reference Value (remote control, analog demodulation) 112
 Ref Fixed 70, 217
 Ref Level Offset 46, 207
 Ref Level Offset (remote control) 112
 Ref Level Position 46
 Ref Level Position (remote control) 112
 Ref Point Frequency 70, 218
 Ref Point Frequency (remote control) 167
 Ref Point Level 70, 218
 Ref Point Level (remote control) 167
 Ref Point Time (remote control) 167
 Ref Value Position (remote control) 112
 Res BW (analog demodulation) 49, 208
 Res BW (remote control, K7) 136
 RF Power(K7) 37
 Right Limit 72, 223
 Right Limit (remote control) 104
 Save Evaluation List (remote control) 179
 Search Limits (remote control) 105
 Search Lim Off (remote control) 95, 105
 Select 1 2 3 4 (remote control) 102
 Select Marker (No) 69, 217
 Select Trace (K7) 28
 Settings 48
 Single Meas (remote control) 182
 Single Sweep (remote control) 182

Sort Mode Freq/Lvl (remote control)	93, 97
Span Manual (analog demodulation)	40
Span Manual (remote control, K7)	139
Start (K7)	34, 200
Stepsize Standard	68
Stepsize Standard (remote control)	105
Stepsize Sweep Points	68
Stepsize Sweep Points (remote control)	105
Sweep Count	54
Sweep Points	54
Sweep Points (remote control)	153
THD Unit %/DB (K7)	34, 44, 199, 204, 205
THD Unit %/DB (remote control)	96, 165, 247
Threshold	73, 223
Threshold (remote control)	95
Trace 1 2 3 4 5 6 (remote control)	110
Trace Mode (remote control)	110
Tracking Generator	73
Trg/Gate Level (remote control)	162
Trg/Gate Polarity Pos/Neg (remote control)	152, 162
Trg/Gate Source (remote control)	152, 161
Trigger Holdoff (remote control)	159
Trigger Offset (analog demodulation)	64
Trigger Out (Low/High)(remote control)	180
Trigger Polarity	63, 215
Trigger Source (analog demodulation)	61
Trigger Source (K7S)	212
Trigger Source (remote control, K7)	244
Unit (K7s)	33, 199, 204, 205
Unit (remote control)	96, 165, 246
Unit %/DB (K7)	219, 220
Video Output	74
Weighting (remote control, analog demodulation)	145, 146, 147
X * RBW (remote control)	150, 151
X * Span (remote control)	150, 151
Zero Phase Reference Point (K7)	37
Zero Phase Reference Point (remote control, K7)	134
Zoom (remote control, analog demodulation)	140
 Softkey	
AF Filter (analog demodulation)	29, 50, 208
Auto Freq	47
Auto Level	48
Average	16, 56
Average Mode	59
BB Power Retrigger Holdoff (remote control)	158
Blank	16, 56
Center	38
Center (remote control)	150
Clear Write	15, 55
Continue Single Sweep	54
Continuous Sweep	53
Continuous Sweep (remote control)	182
Cont Meas (remote control)	182
Decim Sep (remote control)	181
Deemphasis (analog demodulation)	31, 52, 197, 211
DigIConf	77
Display Config	26
EL Atten Mode (Auto/Man) (remote control)	177
EL Atten On/Off	45, 206
EX-IQ-BOX	76
IF Power Retrigger Holdoff (remote control)	159
 IF Power Retrigger Hysteresis (remote control)	159
Input (AC/DC)	46, 74, 207
Input (AC/DC)(remote control)	174
Input 50 Ω/75 Ω	46, 207
Log	60
Low Pass AF Filter (analog demodulation)	29, 50, 195, 209
Marker 1 to 4 (remote control)	106, 172
Marker Number	73, 223
Marker Number (remote control)	92
Marker Peak List	71, 222
Marker to Trace	66
Marker to Trace (remote control)	103
Marker Zoom	68
Max Hold	15, 55
Max Peak Count	72, 222
May Peak Size (remote control)	93
Meas Time (analog demodulation)	29, 50, 54, 194, 208
Mech Atten Auto	45, 206
Mech Atten Auto (remote control)	173
Mech Atten Manual	44, 206
Mech Atten Manual (remote control)	173
Min Hold	15, 56
Peak List On/Off	72, 222
Preamp On/Off	44, 205
Preamp On/Off (remote control)	177
Ref Level	42, 203
Ref Level (remote control)	111
RF Atten Auto	45, 206
RF Atten Auto (remote control)	173
RF Atten Manual	44, 206
RF Atten Manual (remote control)	173
RF Power	61, 213
Save (remote control)	179
Select 1 2 3 4 (remote control)	106
Single Meas (remote control)	182
Single Sweep	54
Single Sweep (remote control)	182
Sort Mode Freq/Lvl	72, 222
Squelch	35, 201
Squelch (remote control)	139
Squelch Level	35, 201
State On / Off	34, 200
Sweep Count (remote control)	151
Time Domain Zoom (K7)	34, 200
Trace 1	55
Trace 2	55
Trace 3	55
Trace 4	55
Trace 5	55
Trace 6	55
Trace Mode (remote control)	109
Trg/Gate Source (remote control)	160, 161, 163
Trigger Holdoff	64, 216
Trigger Hysteresis	64, 216
Trigger Offset	215
Trigger Out	75
View	16, 56
Weighting AF Filter	30, 51, 195, 210
 Softkeys	
Autoselect	57
Detector Auto Peak	57
Detector Average	58
Detector CISPR Average	58
Detector Manual Select	56

Detector Negative Peak	58
Detector Positive Peak	57
Detector Quasi Peak	58
Detector RMS	58
Detector RMS Average	59
Detector Sample	58
Lower Level Hysteresis	48
Probe Config	75
Upper Level Hysteresis	48
Span menu	
analog demodulation	40
Special characters	82, 225
Squelch	
Remote control	139
Softkey	35, 201
Squelch Level	
Softkey	35, 201
Stereo	
softkey	201, 214
supply voltage, external noise source	74
sweep	
count	54
Free Run	61, 213
Sweep	
Continue single sweep	54
Continuous	53
Single	54
Sweep menu	
analog demodulation	53
T	
threshold	
line	73, 223
Time	
softkey	63, 215
Time per Division	
softkey	200
Time trigger	
Repetition interval	64, 216
Trace	
Clear Write	15, 55
Trace mode	
Average	16, 56
Blank	16, 56
Clear Write	15, 55
Max Hold	15, 55
Min Hold	15, 56
View	16, 56
trigger	
external	61, 213
slope	63, 215
Trigger	
Holdoff	64, 216
Hysteresis	64, 216
Level	63, 215
Offset	215
Trigger menu	
analog demodulation	60
K7S	212
trigger mode	
External	61, 213
Free Run	61, 213
IF power	62, 213
Trigger mode	
RF power	61, 213
TX Settings	
EX-IQ-BOX	77
U	
Upper-case (commands)	82, 225
Upper Level Hysteresis	
Softkey	48
V	
VBW	
RMS detector	18
View trace mode	16, 56
W	
Weighting	
Analog demodulation	30, 51, 196, 210
Z	
Zoom	68
Amplitude	16, 56