



ROHDE & SCHWARZ

Test and Measurement
Division

Release Notes

Firmware

R&S® SMATE200A

Version 2.05.104.56

Printed in the Federal Republic of Germany

Dear Customer,

throughout this manual, R&S SMATE is generally used as an abbreviation for the Vector Signal Generator R&S® SMATE200A.
R&S® is a registered trademark of Rohde & Schwarz GmbH & Co. KG
Trade names are trademarks of the owners

Table of Contents

1	General Information	5
2	Firmware Update	6
	2.1 Local Firmware Update.....	6
	2.2 Remote Firmware Update.....	8
3	Modifications in Current Version.....	10
	Version 2.05.104.56	10
	Version 2.05.104.54	10
	Version 2.05.104.33	10
	Version 2.04.303.32	12
	Version 2.04.303.31	12
	Version 2.04.303.17	12
	Version 2.04.303.16	12
	Version 2.04.303.03	12
	Version 2.04.303	13
	Version 2.04.202	13
	Version 2.04.201	13
	Version 2.02.170	14
	Version 2.02.145	14
	Version 2.02.130	14
	Version 2.02.116	14
	Version 1.40.21	15
	Version 1.40.20	15
	Version 1.40.19	15

Version 1.40.13.....	15
Version 1.35.13.....	16
Version 1.35.10.....	16
Version 1.35.06.....	16
Version 1.35.05.....	16
Version 1.30.08.....	16
4 Problems Eliminated.....	18
Version 2.05.104.56.....	18
Version 2.05.104.54.....	18
Version 2.05.104.33.....	18
Version 2.04.303.32.....	18
Version 2.04.303.31.....	18
Version 2.04.303.17.....	18
Version 2.04.303.16.....	19
Version 2.04.303 / 2.04.303.03.....	19
Version 2.04.202.....	19
Version 2.04.201.....	19
Version 2.02.170.....	20
Version 2.02.145.....	20
Version 2.02.130.....	20
Version 2.02.116.....	20
Version 1.40.21.....	21
Version 1.40.20.....	21
Version 1.40.19.....	21
Version 1.40.13.....	21
Version 1.35.13.....	22
Version 1.35.10.....	22
Version 1.35.06.....	22

Version 1.35.0522

5 Open Source Acknowledgement.....24

OpenSSL / SSLeay License24

6 Our Hotline27

1 General Information

ATTENTION

It is strongly recommended to do **no firmware downgrade** below the version the device was delivered originally (this is the version you can see if you select “Factory Default” starting with Backup/Recovery).

This R&S SMATE firmware revision consists of only one file :

SMATE200A_2.05.104.56.exe

There are two possible ways to update your instrument:

Local Firmware Update

The firmware update is performed directly on the instrument, typically using an USB stick. Mouse and keyboard have to be connected to the instrument. For instruments without front panel display (like the SMATE) an external monitor is required too. The appropriate VGA plug is located on the rear panel.

The front panel keys like **PRESET** or **SETUP** can be emulated performing a right-click on the block diagram.

See Chapter 2.1 for details.

Remote Firmware Update

Alternatively the firmware update can be performed over LAN or SCPI from an external PC (running Windows XP). Connect the instrument via LAN or SCPI to the PC and run the firmware update from the PC.

See Chapter 2.2 for details.

ATTENTION**Important Note for updating without SP2:**

Please contact your local R&S service department in order to update your instrument. Alternatively the needed files and packages can be installed manually. In this case download the file SystemSetup4SignalGenerators.zip and follow the instructions given in readme.txt.


2 Firmware Update


2.1 Local Firmware Update

The following description of the firmware update references the use of the USB interface. The update via LAN interface is similar.

1. Save the current version

It is recommended to save the current/running version. This can be done very easily and completely intuitive with an USB keyboard and an USB mouse.

- Switch off the device and switch it on again. When the device is starting now you see the Bootmanager window (blue background, white field inside and a red selection line) after a short time. If you see this window press the cursor key  under the rotary knob, select **Backup/Recovery** and confirm this with pressing the key **BACKSPACE** on the device or **Enter** on the USB keyboard..
- After a short time the recovery and backup service ist started.

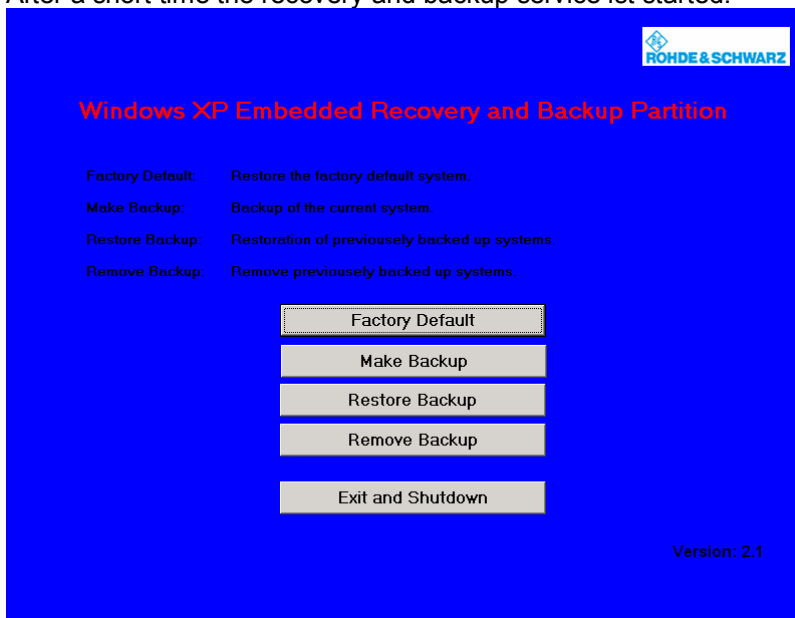

Select **Make Backup** via mouse or keyboard. The menu disappears and the device shows you the versions of what will be stored.



Select **Make Backup**, follow the instructions and the device starts working. The backup process takes some minutes. Please do not switch off the device, otherwise your

backup may be corrupt. It's safe to switch off the device with the **Exit and Shutdown** button, when the menu is shown again.

If you want to restore a previously saved version select **Restore Backup** in the same way.

2. Install the new firmware version on the R&S SMATE

- Switch off the instrument.
- Connect the external mouse and keyboard to the USB interface.
- Switch on the instrument.
- **Access Windows XP desktop**

Operating with the mouse

- Wait until R&S SMATE firmware boot window with the progress bars appears.
- Click on the **Abort** button in the boot window. Booting of the instrument firmware is aborted and the Windows XP desktop is displayed.

Operation with the keyboard

- Wait until R&S instrument firmware has booted and the application has started.
- Press **Alt** + **F4** to close the application. The Windows XP desktop is displayed.

- **Install new firmware version**

- Plug in the USB memory stick which contains the update file.
- Double-click the item **SMATE200A_2.05.104.56.exe**
- Select Next / Install and wait until installation has finished.
- Confirm that you want to reboot the instrument in order to activate the firmware update (the instrument then restarts automatically, the USB memory stick has to be removed)

3. Execute Internal Adjustments


- Press the **PRESET** key on the instrument front panel.
- Press the **SETUP** key emulation (called by a right mouse click) , select **Internal Adjustments** and execute **Adjust All**.
This process updates internal instrument adjustments and will take several minutes. Adjustments requiring external measurement equipment are not affected by the firmware update and need not to be performed.

The firmware has been updated and the installation is completed.

2.2 Remote Firmware Update


1. Install firmware

- Ø Run **SMATE200A_2.05.104.56.exe** on your PC
- Ø Select "Remote Installation"

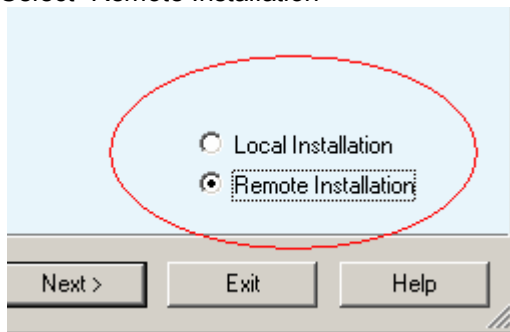

and click the button "Next>"

- Ø After scanning SCPI and your LAN subnet all found instruments are listed. Select the instruments you want to update:

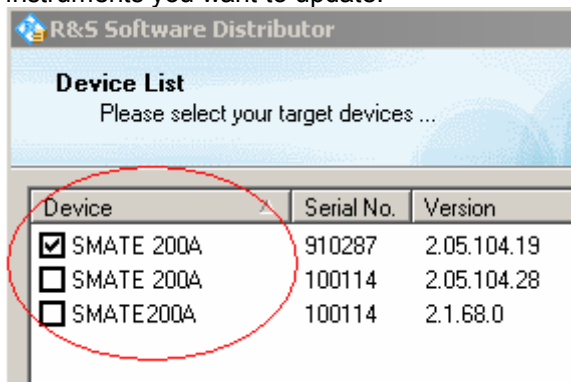

ATTENTION



Please be careful and check twice if you have selected the correct instruments. Depending on your company's network structure also instruments of other departments will show up!

- Ø Additional help will be displayed after clicking the button "Help"
- Ø Start installation by selecting "Install"
- Ø Confirm that you want to reboot the instrument in order to activate the firmware update (the instrument then restarts automatically)

2. Execute internal adjustments

- Ø Press the **PRESET** key on the instrument front panel

Press the **SETUP** key emulation (called by a right mouse click), select **Internal Adjustments** and execute **Adjust All**.

This process updates internal instrument adjustments and will take several minutes. Adjustments requiring external measurement equipment are not affected by the firmware update and need not to be performed.

3 Modifications in Current Version

The new firmware offers the following functional improvements:

Version 2.05.104.56

- None

Version 2.05.104.54

- SMU-B90 (LO sync board for MIMO)
- XM-Radio : frame counter implemented

Version 2.05.104.33

New standards/options/modules

- SMATE-B90 (LO sync board for MIMO)
- SMATE-K57 (FM stereo)
- SMATE-K59 (HSPA+)
- Support of new synthesizer SSYN (1141.4220)

Other features

- Factory preset, standard Preset/*RST does not reset reference oscillator or power on state (level)
- Several layouts of external keyboards supported
- Busy display for Preset/Save/Recall and switching digital standards
- Custom Digital Modulation : support of QAM128, several improvements of data list editor
- All sweeps support now shapes sawtooth and triangle
- Phase continuous frequency setting
- Setting times for level/frequency reduced by typ. 100 μ s
- Display of NRP-Z81 peak power

EUTRA/LTE

Compatibility

- All supported features are in line with the following official 3GPP specifications unless not revised by the according CRs listed below:
 - TS36.211 v.8.2.0
 - TS36.212 v.8.2.0
 - TS36.213 v.8.2.0
- The following CRs are implemented:
 - R1-081248: PRS sequence generation for downlink reference signal
 - R1-081518: Draft CR on Correction of the number of subcarriers in PUSCH transform precoding

- R1-081520: Draft CR on Correction of PUCCH resource index for PUCCH format 2
- R1-081576: Correction of the number of subcarriers in PUSCH precoding
- R1-081577: Correction of PHICH mapping
- R1-081578: Correction of PUCCH resource index for PUCCH format 2
- The Downlink of this version of the SMx-K55 is compatible with FSQ-SW LTE K100/K101/K102 Version 2.2 BETA 3

General Features

- Updated bandwidth definitions 1.4MHz and 3MHz (previously supported by user defined settings)
- Support of User Filter: user-defined TX-filter can be generated (e.g. by means of R&S FiltWiz) and then uploaded to the SMx-K55.

Downlink

- Full support of P-SYNC, S_SYNC and DL Reference Signal derived from CELL ID
- Supports channel coding for PDSCH
- Support channel coding for PBCH
- Supports scrambling for PDSCH and PBCH
- Full MIMO and Transmit Diversity support (all precoding and CDD formats)
- Support of PCFICH
- Support of PHICH
- Support of PDCCH: An arbitrary bit stream (PN9, data list, pattern...) is used by the SMx-K55 (can be uploaded from external if needed), and PDCCH processing starts with "scrambling" (see 36.211, 6.8.2). The next steps of PDCCH are performed as defined in 36.211. The user is responsible for the content of the several PDCCHs (see 36.212, 5.3.3.1 DCI Formats) and the multiplexing of them. SMx-K55 does the scrambling, layer mapping, precoding and RE mapping including permutation and cyclic shifting.

Uplink

- Support of new definitions of reference signal sequences
- Update on demodulation and sounding reference signals
- Support of group and sequence hopping
- Supports channel coding for PUSCH including multiplexing of data and control information
- Supports scrambling of PUSCH
- Support of all PUCCH formats

3GPP-FDD

New Features

- HSPA+
 - higher order modulation: downlink 64QAM
 - CPC: HS-SCCH less operation
 - MIMO support
 - new H-Sets 7-9 (3GPP Rel.7)
- new H-Set 10 (3GPP Rel. 8)
- more flexibility in the H-Set configuration („User“ – H-Set)
- The user gets support by the user interface for selecting the right ARB sequence length when generating H-Set signals.
- For H-Sets, the (least necessary) UE-category is displayed.
- third OCNS-Mode „HSDPA 2“ (according to TS 25.101)
- E-AGCH: now with user coding

Bugfixes / Changes

- Computationally expensive realtime-signals (e.g. RMC384 or H-Set3) were sporadically shifted in time after retrigger: fixed.

- Conflicts between H-Sets and OCNS in the channel configuration are avoided now.
- When switching off the OCNS-Mode, the OCNS-Channel state is switched off now (in previous releases the channels were only converted to normal DPCHs, but with state on).
- When generating H-Set 6, the database was read out at the wrong positions: fixed.
- HARQ-Feedback:
 - Immediately after retrigger, the packets were sent with random retransmission sequence number (RSN): fixed.
 - When changing from one RSN to another, the last 1024 chips of the old packet were sent already with the new RSN: fixed.

Wimax

- CSTD (Cyclic Delay Diversity)
- Coupled Baseband Modes (Baseband B is controlled from Baseband A for STC configurations)
- Transmit Diversity with 4 antennas
- Band AMC modes for 2x3 AMC
- Band bitmap for sounding
- Additional user definable power boosting for each zone
- Time Plan displays inactive zones in grey (such as SISO zones on Antenna 1)
- Multiple PDUs per burst
- DCD and UCD added for OFMD mode
- UL-MAP and DL-MAP in one burst for OFDM mode

Version 2.04.303.32

- None

Version 2.04.303.31

- SMATE-K65 : Assisted GPS

Version 2.04.303.17

- None

Version 2.04.303.16

New standards/options

- SMATE-K47 : 1xEVDO Rev. A
- SMATE-K53 : T-DMB / DAB
- SMATE-B33/38: Enhanced Output Power

Version 2.04.303.03

- None

Version 2.04.303

New standards/options

- SMATE-K54 : IEEE 802.11n

Extentions to existing standards / Improvements

WiMAX

- Corrigendum2/D4 compatibility
- Uplink Sounding
- Added Zone_Switch_IE in DL-MAP
- Mixed STC Matrix A and B configuration within the same zone
- CID_Switch_IE inclusion in DL-MAP can be toggled
- Added Collaborative Spacial Multiplexing in uplink

Other

- Improved level uncertainty

Version 2.04.202

- None

Version 2.04.201

New standards/options

- SMATE-K55 : EUTRA/LTE
- SMATE-K56 : XM-Radio
- SMATE-K6 : Support of external Pulse Sequencer Software

Extentions to existing standards / Improvements

3GPP

- 3GPP HSDPA H-SET6 Extensions
- 3GPP HSUPA Extensions (E-DPDCH with new symbol rates 15ksps and 30 ksps, separate channel powers possible, HARQ State)

WiMAX

- HARQ
- Offline Filter
- AMC 2x3
- Fast Feedback Bursts
- Dedicated Pilots for AMC 2x3 and PUSC

- Switchable Subchannel Rotation for Uplink PUSC
- DCD and UCD Bursts
- New modulation QAM 5/6
- Extension of DL-MAP (CID-SWITCH-IE, bursts of all zones, MAC Header and CRC on, ...)

Other

- AWGN : Extended S/N Range -50 dB to +30 dB
- TD-SCDMA : Predefined Settings / Testmodels
- NRP power sensors : persistent power display in block diagram
- List mode : level setting without interruption/blanking
- ARB Multi segment : several improvements / bugfixes
- Armed/Triggered state visible in block diagram
- Security Menu : possibility to switch off USB port and LAN for file transfer
- New optimization mode "high quality" to reduce modulation frequency response

Version 2.02.170

- Support of new options SMATE-B33 and SMATE-B38

Version 2.02.145

- Improvement of the level adjustment (new internal adjustment "level attenuation")

Version 2.02.130

- Support of new main board with FMR7 (first version)

Version 2.02.116

- Support of SMATE-B9 - Baseband with ARB(128Msamples)
- Digital standard DVB (SMATE-K52)
- Digital standard TD-SCDMA with two options
SMATE-K50 (basic functions)
SMATE-K51 (Enhanced BS/MS test)
- Digital standard SMATE-K45 (3GPP FDD HSUPA)
- Support of NRP-Zxx power sensors (power viewer and user correction)
- Support of hardware IO-Leitungen: RF OFF (PIF fpga version 5.10 or higher required)
- New menu for FPGA update (SETUP-UPDATE)

- Internal adjustment: reference frequency mode not changed to “internal” during internal adjustment
- GPIB channel address: now saved immediately to support hard power off
- 3GPP Power Control: new marker mode “Dynamic Power Control” for marker 4
- "Generate Waveform File" for all digital standards (for multi carrier/ multi segment)
- Support of user filter files generated with R&S FiltWiz
- Import of list mode and user correction data from CSV and TXT files
- WiMAX (SMATE-K49) : several extensions including WiBro and multi zones
- BBIN (SMATE-B17) : Several improvements
- 3GPP FDD (SMATE-K43) : parameter range of BER / BLER extended to 50%, 3 power steps for HS-DPCCH
- Setup menu : Display of instruments TCPIP address and BIOS version
- list mode : frequency and level display dotted when list mode running
- SCPI: Error Queue entries with path indication A/B
- phase modulation: unit rad and degree supported (attention: default is rad now!)

Version 1.40.21

- None

Version 1.40.20

- None

Version 1.40.19

- New level calibration for factory purposes supported
- Improvement of settling time with IQ modulation on

Version 1.40.13

- Generation of HSDPA H-Sets (SMATE-K44)
- Support of WiMAX OFDMA mode (SMATE-K49)
- Support of ARB multi carrier
- Support of parameter variation with mouse wheel
- UCOR level range extended to 100 dB
- Several improvements of file dialog
- Several improvements of AWGN dialog (SMATE-K62)

Version 1.35.13

- Loading from setups from elder versions improved

Version 1.35.10

- None

Version 1.35.06

- None

Version 1.35.05

- New: Support of digital standard SMATE-K44 (GPS)
- New: Support of digital standard SMATE-K48 (WLAN IEEE 802.11 (a/b/g))
- New: Support of digital standard SMATE-K49 (WiMax IEEE 802.16 (d))
- New: 3GPP FDD “Test Case Wizard...” (according to TS25.141)
- New: Support of option Differential I/Q Out (Option SMATE-B16)
- New: Custom digital modulation – Modulation Type -Variable FSK: 4/8/16FSK with free selectable deviations available now
- New: phase offset available in baseband block menu
- New: Custom digital modulation: display type of modulation directly in the baseband block
- „User Marker / Aux I/O Settings ...“ now directly in menu “Trigger/Marker”
- New: separate “*rst” for path A and B possible via :SOURCE<HW>:PRESet and DEVice:PRESet
- Digital standard 3GPP FDD: Channel Coding - Transport Channel: max value of “Transport Blocks” now 24
- New: GSM/EDGE: External trigger source “external clock” added including trigger delay and trigger inhibit
- Improvement in I/Q calibration (better side band suppression)
- New: AWGN: mode “CW Interferer” and reference mode

Version 1.30.08

- First release

4 Problems Eliminated

Version 2.05.104.56

Sometimes the guaranteed maximum level was not reached: fixed 6899

Version 2.05.104.54

Custom Digital modulation : bit clock now used falling slope with external data and symbol clock 6627

GSM : Instrument crashes using external retrigger mode : fixed 6754

Remote control : transfer fails if character 0x0A is in first block of binary data : fixed 6783

Version 2.05.104.33

Several hyperlinks in online help not working : fixed 5323

Construction of multi segment waveform in path P erroneous 5366

Level sweep without dropouts : fixed 6533

Trigger not stored in multisegment waveform : fixed 6589

Several bugs with multi segment waveform : fixed 5205

ARB file selection dialog improved (tool tipp with all comments) : fixed 5884

DigMod: Pure Gauss parameter not accessible from SCPI : fixed 6168

Several small changes in user manual / online help : fixed 6334

DigMod: 16QAM Edge not properly working : fixed 6434

Version 2.04.303.32

Sometimes the device does not shut down correctly : fixed 6424

Sporadic bit errors in GSM and 3GPP FDD signal generation (problem was observed only in combination with UNICOD version > 6.00): fixed

Front led for lxi doesn't show the correct LAN status: fixed

Version 2.04.303.31

Sporadic extension of setting times for level and frequency : fixed 6273

Wrong display of AWGN values in display mode baseband 6290

Version 2.04.303.17

Support of multilevel user correction protected with a registry key; feature now available for all 6196

WiMAX: OFDMA: Predefined settings not available 6200

AM: Sometimes an error message "...output unlevelled" occurred when using AM with low deviation 6206

Version 2.04.303.16

XM-Radio. No markers in physical layer mode "Terrestrial A" and "Terrestrial B"	5834
IEEE 802.16 WiMAX: system crash possible when changing from uplink to downlink, standard is active and predefined settings are used	6000
Option SMATE-K6: option not usable in path B (error message „option missing“)	6028
IEEE 802.11 n: Indikator „MOD OFF“ does not disappear when this standard is activated	6042

Version 2.04.303 / 2.04.303.03

CDMA2000: new default setting (one channel switch to ON to avoid error messages when setting state to ON)	
WiMax:	
- Subchannel rotation fixed for uplink PUSC zones including FastFeedback and Ranging bursts	
- Fix in uplink AMC2x3 mode	
- STC Matrix B mode fixed	
ARB: sine generator: error message when using sine generator immediately after switching on EUTRA (SMATE-K55)	
Custom Digital Modulation: List editor: system crash when using "goto"-command	
FM: source is "INTERNAL + EXTERNAL": sensitivity not visible in dialog	
W3GPP: Enhanced channel 11: selecting "config data" shows no reaction (menu don't open)	
ARB: Loading AMIQ/SMIQ waveforms sometimes causes an error message	
SCPI: all return values of "...:stat?" is OFF/ON instead of 0/1 (bug in V2.04.202 only)	
Custom Digital Modulation: "user filter" doesn't work in path B	
CDMA2000: "Set To Default" resets settings in path A and B (not the selected path only!)	
W3GPP: error message when selecting "PRACH Preamble only" with trigger mode "Armed Auto external"	
W3GPP: copy BS1 to BS2 doesn't copy all relevant parameters	
WLAN: when setting state to ON the filter settings are always the default one, not the displayed one!	
AWGN: Doesn't work if no option B9/10/11 or B17 is installed (bug in V2.04.202 only)	
GSM: Recall doesn't set the frames	
WLAN: sequence length not limited correctly	
CDMA2000: unknown exception when using predefined settings RC4 with frame length = 80 ms	

Version 2.04.202

- Sometimes at startup an error message occurs „... uncod SDRAM ...“; only with V2.04.201
- BBIN: in rare cases the output spectrum is not ok; only with V2.04.201

Version 2.04.201

ARB test sine signals : some remote commands not working	4376
CustomDigMod/FSK : envelope not constant with root cosine filter and some roll-off factors	4763
ARB sequence length : maximum depending on ARB size	4815
3GPP FDD : Save waveform not working for uplink	4850
WLAN : predefined frames not working correctly	4903
WiMax/3GPP : clipping not working correctly	4907
WiMax : output power not correct when using more than 15 frames	4913
Save/Recall : 'exclude frequency' and "exclude level" without impact	5109

Data lists exceeding 256 Mbyte cannot be loaded to SMATE-B9 5161

Version 2.02.170

Error message "I/Q out level is below minimum..." with option SMATE-B16 4866
 Error messages while graphic is running and trigger mode is armed 4885
 Sometimes trigger input 1 and 2 does not work immediately after power on 5069
 MCCW: spectrum not perfect with 3 or 15 carriers 5087
 Sometimes a system crash happens at power on 5151
 Error message „General plugin error“ in GSM after PRESET and :BB:GSM:MODE SINGLE 5197
 :syst:time xx,xx,xx and :syst:date xx,xx,xx doesn't work anymore 5272
 Sometimes system hangup while doubleclicking menu points (e.g.GPIB or Ethenet) 5280

Version 2.02.145

GUI (with external monitor): Sometimes GUI is frozen after PRESET (you cannot open any new window in the application after PRESET) 4884
 GUI (with external monitor): I: Some menus have an unnecessary horizontal scroll bar (bug in V2.02.130 only)
 Menu SETUP-HARDWARE CONFIG: memory leak caused system hang up 5025

Version 2.02.130

Custom Digital Modulation: *.vam files couldn't be selected via IEEE bus 4270
 Custom Digital Modulation: symbol rate not accessible via GUI 4845
 Option SMATE-B16: error message "I/Q out level is below minimum for 'optimize I/Q signals for RF output' enabled" sometimes doesn't disappear (V2.02.116 only) 4866
 Option SMATE-K52 (DVB): main menu entry "DVB..." not visible 4908

Version 2.02.116

Renaming files with MMEM:MOVE did not work 2875
 Eye diagram did not work correctly 3417
 Save/Recall with :MMEM:LOAD:STAT / :MMEM:STOR:STAT not working 3473
 sporadic crashes when handling big ARB waveforms 4026
 inconsistent block diagram in REMOTE state 4029
 GSM/EDGE:'Recall Predefined Frame' cannot copy to frame 2 4074
 Custom Digital Modulation: ASK: graphic for 'Modulation Settings' empty 4131
 SCPI commands for ARB multi segment SOUR:BB:ARB:WSEG: missing 4210
 sporadic erros in output signal when I/Q graphic is running 4214
 block diagram with BBIN without baseband block incorrect 4495
 ARB Multi Segment: Recall GUI Problem 4623
 Multi Carrier: "Division by zero" if all carriers are switched off 4639
 ARB: tag "clock rate": precision too low 4708
 List mode: system hang up while editing via "Insert Range..." 4713
 System crash while switching off incompatible modulations internally 4748

Version 1.40.21

- WLAN: save/recall not possible if CDMA2000 and 3GPP FDD is not available
- Bugfix with new calibration data from level (RFM V2.0; internal use only)

Version 1.40.20

- Bugfix with new calibration data from level (RFM V2.0; internal use only)

Version 1.40.19

- In rare cases the level adjustment failed with error "DACIF..."; fixed

Version 1.40.13

List-Mode : dwell time of first step not correct	2703
Custom DigMod : support of CW switching incorrect	2966
:SYST:SERR? does not respond "no error" if everything is ok	3225
Changing the remote interface VXI11 <-> GPIB causes crash of instrument	3360
ARB: no independent sine test signal output possible on path A/B	3365
Pulse modulation deactivates digital modulation	3687
Internal graphics stopps when both paths are triggered by marker 1	3699
3GPP FDD : TFCI setting of S-CCPCH not allowed	3716
List mode : online help missing	3849
FM external impedance only switchable if FM is ON	3870
Setups of older firmware versions cannot be read	3877
Power-on-preset not working	3879
All standards : units of single trigger duration harmonized	3892
Input of values with leading floating point (eg. ".5") not supported	3906
Pop-ups not operable without mouse (eg. ARB multi segment)	3911
Fading : insertion loss not working correctly	3917
Multi carrier/SCPI : unit [dB] not accepted	3938
Sweep : Attenuator switches in fixed mode (occasionally)	3966
Power Up/Down (RF level) not supported by remote interface	3973
All standards / SCPI : instrument crashes when pattern length exceeds 32	3987
3GPP FDD : Update problem when changing UE4 paramaters with active addional Ues	3992
WLAN : given RF level not referred to burst power	4012
Multi carrier : Set To Default does not reset output signal	4015
Custom DigMod : symbol rate remains unchanged after recall	4066
CDMA2000 : SCPI command BB:C2K:MSTation1:CHANnel1:DATA:RATE not working	4088
3GPP FDD : progress bar missing after fast parameter change (occasionally)	4094
Some standards : pattern editor not operable after leaving with ESC before	4096
All standards : trigger delay ignored when trigger source is other baseband	4117

WLAN : chip rate can be set to 100 MHz (fixed:limited to 40 MHz)	4132
Range of level in attenuator fixed mode wrong (occasionally)	4138
Displayed baseband signal level wrong with fading and or AWGN	4174
Sometimes no baseband signal with external clock and internal trigger	4176
Fading Birth Death Propagation: delay grid minimum wrong; check of offset/hopping dwell missing	4188
:swe:res:all does not work	4195

Version 1.35.13

- Device with 2 RF channels but no baseband: coupling of IQ state channel B in block menu does not work with state in IQ menu; fixed
- Problems eliminated with *rst via IEEE bus (in special cases system crashes are possible); fixed

Version 1.35.10

- Gui Update State: version 1.35.05/06 starts with state off, which is not intuitive for the user due to differences between displayed (external monitor) and real state; fixed (set to state on again)

Version 1.35.06

- Setup not ok for option GPS (file missing); fixed

Version 1.35.05

- SCPI order „:freq? min|max“ and „:pow? min|max“ does not work; fixed
- Editing a bit pattern: in very rare cases the system crashes while editing the pattern; fixed
- In some cases the tooltip lost the units; fixed
- File dialog: sometimes two lines are highlighted and/or no focus; fixed
- Digital standard 3GPP FDD: sometimes no marker output at first start; fixed
- Digital standard 3GPP FDD: unnecessary info messages when selecting “Set To Default” or “Recall 3GPP FDD Settings”; fixed
- Custom digital modulation: error message using modulation FSK with coding GSM; fixed (now no selection of coding GSM with modulation FSK allowed)
- Sometimes no min/max check while changing parameters via cursor up/down; fixed
- No capitals with external keyboard possible (i.e. file dialog); fixed
- CList editor: cursor left/right has no function; fixed (now: same functionality as rotary knob)
- Sweep: setting a new frequency in mode STEP results in a wrong output frequency (always max value of step mode); fixed
- Sweep: mode STEP: variation with rotary knob works til min/max is reached, then no further variation possible; fixed

- GSM/EDGE: Editing the slot defined marker results in a system crash; fixed
- List mode with high power option: max value for power is now 30 dB (not 20 dB); fixed
- Error messages from DAC-Board occurred in devices without baseband source; fixed
- Internal: setting of operation time and power on count possible for service purposes
- 3GPP FDD and MCCW: Trigger in: external trigger delay does not work; fixed
- 3GPP FDD: power setting of uplink HS-DPCCH has no effect; fixed
- Common: loading of ARB waveforms accelerated

5 Open Source Acknowledgement

This firmware makes use of the following open source software package. The verbatim license text is provided in the following chapters.

Package	Link	License
OpenSSL	http://www.openssl.org/	OpenSSL / SSLeay

This product includes cryptographic software written by Eric Young (eay@cryptsoft.com) and software written by Tim Hudson (tjh@cryptsoft.com).

Rohde & Schwarz would like to thank the open source community for their valuable contribution to embedded computing. The source code of the open source packages is available on request.

OpenSSL / SSLeay License

LICENSE ISSUES
=====

The OpenSSL toolkit stays under a dual license, i.e. both the conditions of the OpenSSL License and the original SSLeay license apply to the toolkit. See below for the actual license texts. Actually both licenses are BSD-style Open Source licenses. In case of any license issues related to OpenSSL please contact openssl-core@openssl.org.

OpenSSL License

```
/* =====
 * Copyright (c) 1998-2007 The OpenSSL Project. All rights reserved.
 *
 * Redistribution and use in source and binary forms, with or without
 * modification, are permitted provided that the following conditions
 * are met:
 *
 * 1. Redistributions of source code must retain the above copyright
 * notice, this list of conditions and the following disclaimer.
 *
 * 2. Redistributions in binary form must reproduce the above copyright
 * notice, this list of conditions and the following disclaimer in
 * the documentation and/or other materials provided with the
 * distribution.
 *
 * 3. All advertising materials mentioning features or use of this
 * software must display the following acknowledgment:
 * "This product includes software developed by the OpenSSL Project
 * for use in the OpenSSL Toolkit. (http://www.openssl.org/)"
 *
 * 4. The names "OpenSSL Toolkit" and "OpenSSL Project" must not be used to
 * endorse or promote products derived from this software without
 * prior written permission. For written permission, please contact
 * openssl-core@openssl.org.
 *
 * 5. Products derived from this software may not be called "OpenSSL"
 * nor may "OpenSSL" appear in their names without prior written
 * permission of the OpenSSL Project.
 *
 * 6. Redistributions of any form whatsoever must retain the following
 * acknowledgment:
 * "This product includes software developed by the OpenSSL Project
 * for use in the OpenSSL Toolkit (http://www.openssl.org/)"
 *
```


* THIS SOFTWARE IS PROVIDED BY THE OpenSSL PROJECT ``AS IS" AND ANY
 * EXPRESSED OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE
 * IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR
 * PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE OpenSSL PROJECT OR
 * ITS CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL,
 * SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT
 * NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES;
 * LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION)
 * HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT,
 * STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE)
 * ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED
 * OF THE POSSIBILITY OF SUCH DAMAGE.

* =====

*
 * This product includes cryptographic software written by Eric Young
 * (eay@cryptsoft.com). This product includes software written by Tim
 * Hudson (tjh@cryptsoft.com).
 *
 */

Original SSLeay License

/* Copyright (C) 1995-1998 Eric Young (eay@cryptsoft.com)

* All rights reserved.

*

* This package is an SSL implementation written

* by Eric Young (eay@cryptsoft.com).

* The implementation was written so as to conform with Netscapes SSL.

*

* This library is free for commercial and non-commercial use as long as

* the following conditions are adhered to. The following conditions

* apply to all code found in this distribution, be it the RC4, RSA,

* lhash, DES, etc., code; not just the SSL code. The SSL documentation

* included with this distribution is covered by the same copyright terms

* except that the holder is Tim Hudson (tjh@cryptsoft.com).

*

* Copyright remains Eric Young's, and as such any Copyright notices in

* the code are not to be removed.

* If this package is used in a product, Eric Young should be given

* attribution as the author of the parts of the library used.

* This can be in the form of a textual message at program startup or

* in documentation (online or textual) provided with the package.

*

* Redistribution and use in source and binary forms, with or without

* modification, are permitted provided that the following conditions

* are met:

* 1. Redistributions of source code must retain the copyright

* notice, this list of conditions and the following disclaimer.

* 2. Redistributions in binary form must reproduce the above copyright

* notice, this list of conditions and the following disclaimer in the

* documentation and/or other materials provided with the distribution.

* 3. All advertising materials mentioning features or use of this software

* must display the following acknowledgement:

* "This product includes cryptographic software written by

* Eric Young (eay@cryptsoft.com)"

* The word 'cryptographic' can be left out if the routines from the

* library being used are not cryptographic related :-).

* 4. If you include any Windows specific code (or a derivative thereof)

* from the apps directory (application code) you must include an

* acknowledgement:

* "This product includes software written by

* Tim Hudson (tjh@cryptsoft.com)"

*

* THIS SOFTWARE IS PROVIDED BY ERIC YOUNG ``AS IS" AND

* ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE

* IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR

* PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE AUTHOR OR CONTRIBUTORS BE

* LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR

* CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF

* SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS

* INTERRUPTION)

* HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT,

* STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING
* IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE
* POSSIBILITY OF SUCH DAMAGE.
*
* The licence and distribution terms for any publically available version
* or derivative of this code cannot be changed. i.e. this code cannot
* simply be copied and put under another distribution licence
* [including the GNU Public Licence.]
*/

6 Our Hotline

If you have any questions or suggestions, please contact our hotline:

Telephone: +49 (0)180 512 42 42

Fax: +49 89 41 29 137 77

E-mail: CustomerSupport@rohde-schwarz.com