


# Xerox Control Program-Five (CP-V)

Xerox 560 and Sigma 6/7/9 Computers

Data Base

Technical Manual

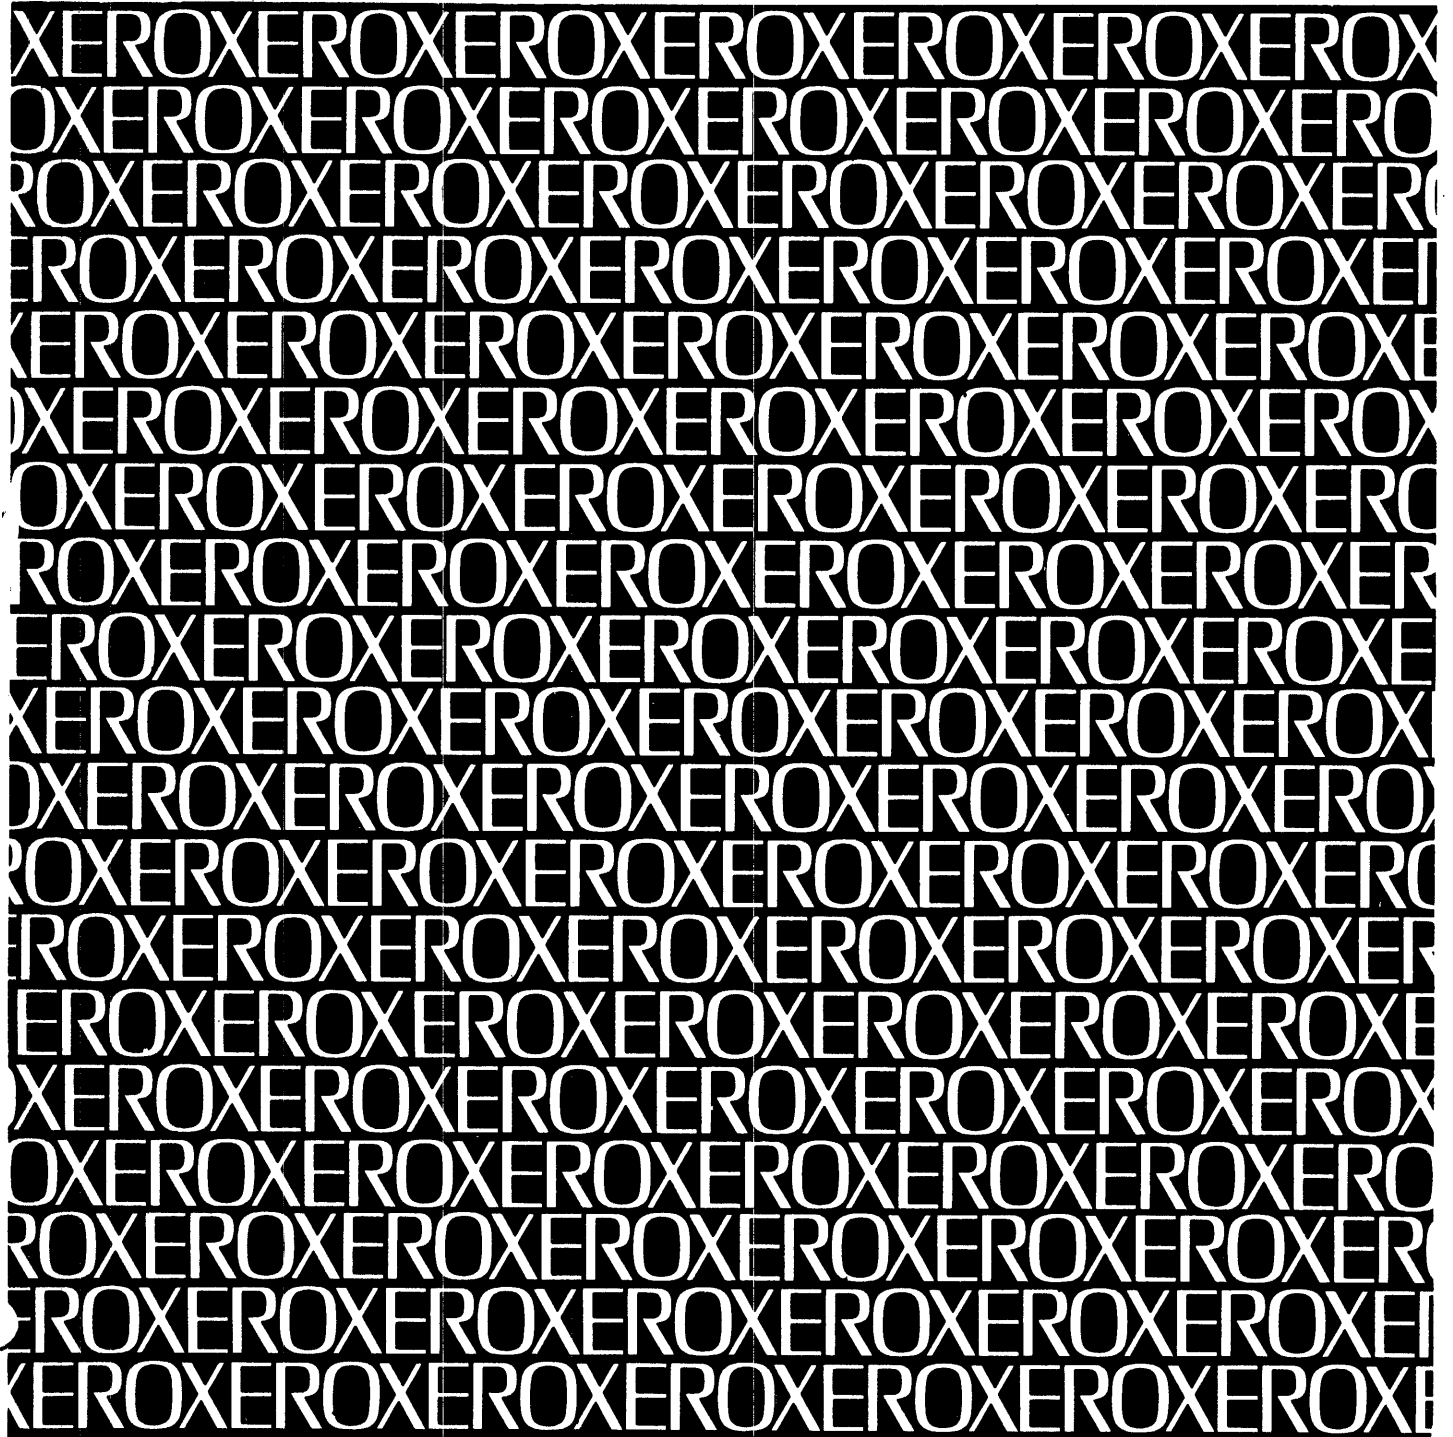

# **Xerox Control Program-Five (CP-V)**

**Xerox 560 and Sigma 5/6/7/9 Computers**

## **Data Base Technical Manual**

90 19 95D  
90 19 95D-1  
90 19 95D-2  
90 19 95D-3

September 1978

**REVISION**

**This publication documents the F00 version of Control Program-Five (CP-V). Pages dated 9/1/78, denote changes that reflect the F00 version.**

# TABLE OF CONTENTS

	<u>Section</u>	<u>Page</u>
JIT - Job Information Table.....	VA	1
Usage.....	VA	1
Description.....	VA	2
JIT Picture.....	VA	3
Label Definitions.....	VA	17
JIT Usage by Processors.....	VA.01	19
 Scheduler.....	 VC	 20
Scheduler Queues.....	VC	20
Event Transition Tables.....	VC	20
Resource Sub-Queues.....	VC	20
Situational Priority Increments.....	VC	20
Scheduler States.....	VC	21
Scheduler Events.....	VC	21
Scheduler/Swapper Tables.....	VC	22
Scheduler/State Tables/Queues.....	VC	22
Scheduler Priority and Real-Time Data.....	VC	23
 User Tables.....	 VD	 24
Common Multiprocessor Control Tables.....	VD.01	27
 Shared Processor Tables.....	 VE	 35
Tables Displaced by Processor Number.....	VE	35
Processor Table Layout.....	VE	36
Ghost Job Tables.....	VE	37
 Memory Allocation.....	 VF	 38
On-Line Memory Pointers.....	VF.01	38
Batch Memory Pointers.....	VF.01	38
Physical Memory Allocation.....	VF.01	39
CP-V Buffer Linking.....	VF.01	40
Swap Storage Layout.....	VF.02	41
Swapping RAD Granule Table.....	VF.02	42
Memory and Stolen Page Data .....	VF.02	44a
 Input/Output Tables.....	 VG	 45
DCT - Device Control.....	VG.01	45
RAD/PACK Characteristics.....	VG.01	48
IOQ - I/O Enqueueing.....	VG.02	49
DOT - Device Operations.....	VG.02	50
CIT - Channel Information.....	VG.02	50
DTT - Device Type - Class Tables.....	VG.03	51
AVR Tables.....	VG.04	57
AVR Table Bit Definitions.....	VG.04	58
Table Contents and Bit Settings.....	VG.04	59
COC Tables.....	VG.05	62

	<u>Section</u>	<u>Page</u>
<b>File Tables</b> .....	VH	66
<b>Master Index Format for Level 0</b> .....	VH.01	66
<b>Master Index Format for a Higher Level Index</b> .....	VH.01	69
Account Directory.....	VH.02	70
<b>Master Index Format for the Public File Account Directory</b> ....	VH.02	70
Entry Format for Public File Account Directory.....	VH.02	70
Entry Format for a Private Volume Set Account Directory.....	VH.02	71
<b>File Directory</b> .....	VH.03	72
<b>Master Index Format for Public and Private File Directories</b> ..	VH.03	73
<b>Free Granule Pool (FSP) Format</b> .....	VH.03	75
<b>File Information Table (FIT) Format</b> .....	VH.04	76
<b>Private Volume Set Tables</b> .....	VH.06	80
<b>VTOC - Volume Table of Contents</b> .....	VH.06	81
<b>HGP - Allocation Tables</b> .....	VH.07	83
<b>CFU - Current File Usage Tables</b> .....	VH.08	85
<b>ACNCFU - Account Directory CFU</b> .....	VH.08	86
<b>FILCFU - File Directory CFU</b> .....	VH.08	89
<b>User File CFU</b> .....	VH.08	91
<b>File DCB</b> .....	VH.09	93
<b>Labeled Tape DCB</b> .....	VH.10	104
<b>ANS Labeled Tape DCB</b> .....	VH.11	112
<b>Device DCB</b> .....	VH.12	119
<b>CP-V Labeled Tape</b> .....	VH.16.01	126
<b>General Format of Sentinels</b> .....	VH.16.01	127
<b>Record Format</b> .....	VH.16.01	129
<b>ANS Labeled Tape</b> .....	VH.16.02	132
<b>General Format and Sentinels</b> .....	VH.16.02	132
<b>Generalized Disk Address</b> .....	VH.17	135
<b>Consecutive File Format</b> .....	VH.18	136
<b>Schema for Locating and Referencing Public Files</b> .....	VH.19	139
<b>Schema for Locating and Referencing Private Files</b> .....	VH.20	140
<b>Read-Ahead Tables</b> .....	VH.21	141
<b>Symbionts and Cooperatives</b> .....	VI.01	144
<b>Symbiont/Cooperative File Block</b> .....	VI.01	144
<b>Symbiont Tables</b> .....	VI.01	146
<b>Linkage Between Logical Device Tables</b> .....	VI.01	149
<b>Input Symbiont Context Block</b> .....	VI.01	152
<b>Cooperative Context Block</b> .....	VI.01	153
<b>Output Symbiont Context Block</b> .....	VI.01	154
<b>Symbiont/Cooperative Context Block Displacement Symbols</b> .....	VI.01	156
<b>RBBAT Communication Buffers</b> .....	VI.01	161
<b>Multi-Batch Scheduler Tables</b> .....	VI.02	171
<b>MBS Tables in RBBAT</b> .....	VI.02	171
<b>Priority Tables</b> .....	VI.02	171
<b>Symbiont File Tables</b> .....	VI.02	172
<b>Serial Number Tables</b> .....	VI.02	173

	<u>Section</u>	<u>Page</u>
MBS Tables in Core.....	VI.02	174
Resource Allocation Tables.....	VI.02	174
Serial Number Tables for Running Jobs.....	VI.02	175
Partition Tables.....	VI.02	176
Partition Table Layout.....	VI.02	178
GI Tables.....	VI.02	179
Service Limit Tables.....	VI.02	180
Peripheral Authorization Tables.....	VI.02	181
Error Log.....	VK	182
Error Log Format.....	VK	182
File Control Pointers.....	VK	183
Error Log Core Structure.....	VK	184
Overview.....	VK	185
Glossary.....	VK	190
Error Log Codes.....	VK	200
Error Log Entry Formats.....	VK	208
CSE STOP Tables.....	VK.01	236
Assign/Merge Table.....	VL	238
Function.....	VL	238
Structure.....	VL	238
Format of Assign/Merge Table.....	VL	238
Format of RUN Table.....	VL.01	241
Error Codes and Error Messages.....	VM	247
Error Message File Format.....	VM	247
Error Messages.....	VM	249
:USERS - Logon File.....	VN.01	261
Structure.....	VN.01	262
Contents.....	VN.01	264
:ACCTLG - Accounting Log Format.....	VN.02	268
Structure.....	VN.02	269
Contents.....	VN.02	270
RATE Record.....	VN.03	273
Structure.....	VN.03	273
:RBLOG - Remote Batch Logon File.....	VN.04	274
Purpose.....	VN.04	274
Contents.....	VN.04	275
Structure of the RBID Record.....	VN.04	280
:PROC - Restricted Processor List.....	VN.05	281

	<u>Section</u>	<u>Page</u>
Loader Tables.....	VO	283
Task Control Block (TCB).....	VO	283
DCB Name Table (DCBTAB).....	VO	283
Load Module Layout.....	VO	284
HEAD Record.....	VO	285
TREE Record.....	VO	287
Segment Components.....	VO	288
Libraries.....	VO	289
REF/BREF Tables.....	VO	291
REF/DEF and Expression Stack.....	VO	292
Relocation Dictionary.....	VO	294
LOCCT Table.....	VO	297
Real Time.....	VP	299
Interrupt Control Block Formats.....	VP	299
ICB for User Task.....	VP	299
ICB for Ghost Job.....	VP	300
ICB for CLOCK3.....	VP	301
ICB Field Descriptions.....	VP	302
ICB Chain Headers.....	VP	306
DO List Block Formats.....	VP	306
WAIT List Block Format.....	VP	308
M:FRGD Module.....	VP	309
M:IMC Modifications.....	VP	311
ENQ/DEQ.....	VQ	313
Description.....	VQ	313
Queue Head Entries.....	VQ	313
SQ Entries.....	VQ	315
QECB Entries.....	VQ	316
QNAME Entries.....	VQ	316
Remote Processing.....	VR	318
Remote Processing Tables in Core.....	VR	318
Remote Processing Tables in RBBAT.....	VR	319
RB:FLAG Structure.....	VR	320
IRBT and 2780 Context.....	VR	321
Remote Processing Handler Structure.....	VR	324
Screech Codes.....	VS	325

	<u>Section</u>	<u>Page</u>
Transaction Processing.....	VT	347
Physical Work Pages (PWPTABLE).....	VT	347
TTP Resident Table - Queue Management.....	VT	348
Recovery Tables.....	VU	351
Core Dump Format.....	VU	351
Dump Tape Format.....	VU	351
Recovery Buffer.....	VU	352
Power Fail-Safe Interrupt Status.....	VU	353
Index.....		354



NAME: JIT

USAGE: THE LABELS OF THE ITEMS IN JIT ARE CONSTRUCTED using the following conventions. These conventions allow the user to determine from the label itself whether it is an address or a displacement within JIT and whether it has byte, halfword or word resolution. items in jit should always be referenced by label rather than absolutely because the internal structure of JIT may change.

JIT LABELING CONVENTIONS: All the labels defined in JIT are constructed using the following conventions. These conventions allow the user to determine whether the label is an address or a displacement from J:JIT and its resolution from the label itself.

- 1.) A colon (:) indicates that the label is an address.  
Example: J:TCB, JH:PC, JB:VLH
- 2.) No colon indicates that the label is a displacement from J:JIT.  
Example: JTCB, PRDCRM, JBVLH
- 3.) If the label starts with JH:, JH or HA, it has JB or BA, it has byte resolution. If it starts with JX: or JX, it may be either byte or halfword, depending on value assigned by :BIG during sysgen. Any other characters indicate word resolution.  
Examples: Word - J:UNAME, JUNAME, UNAME  
Halfword - JH:PC, JHDA  
Byte - JB:VLH, JBVLH, BAABC
- 4.) In some cases several labels will reference the same item giving address and displacement with different resolution for the same item.  
Example: The I/O abort code - word 17, byte 0 - J:ABC, JABC, ABC and BAABC

DESCRIPTION: Each user receives an initialized JIT when the job or terminal session begins. This JIT stays with the job until it is logged off.

A user's JIT contains his accounting data, resource usage limitations, various flags describing the status of his job, some loader data, the M:UC and M:XX DCBs, memory management data, a temp stack for monitor use, pointers and addresses of data in his context block, his map and access code images and swapper data, as well as many other items too numerous to mention. The JIT is 512 words long (1 page) and is always loaded at .8C00 (virtual).

The seek addresses (JH:DA) and the command list (J:CL) used by the swapper to swap a user in or out are contained in JIT. There is enough space in JIT to contain this data for a user whose size is no greater than 20 pages on Sigma 7 and small memory Sigma 9/560 systems. If a user's size exceeds 20 pages, he is allocated an AJIT, "additional JIT", and the swapper command list is moved into AJIT. The space in JIT that was formerly used for the command list is then used for the seek addresses, i.e., JH:DA spills over INTO J:CL. ON LARGE MEMORY SYSTEMS (GREATER than 128K), all users receive an AJIT at the time they receive the JIT. The AJIT contains both the swapper command list and the seek address table, JH:DA.

	0	1	2	3	4	16	31	
J:JIT, JIT								SYSID
J:UN								SYSID
J:ACCN								JACCN
								ACCN
J:UNAME								JUNAME
								UNAME
J:CTIME								CEXT
J:OVHTIM								OVHTIME
J:CALCNT								IOTIME
J:PTIME								TPEXT
J:UTIME								TUEXT

JIT	8C00
JIT	8C00
JIT	8C00
JIT	8C00
JIT	8C00
JIT	8C00
JIT	8C00
JIT	8C00
JIT	8C00
JIT	8C00
JIT	8C01
JIT	8C01
JIT	8C01
JIT	8C01
JIT	8C01
JIT	8C01
JIT	8C03
JIT	8C03
JIT	8C03
JIT	8C03
JIT	8C03
JIT	8C03
JIT	8C03
JIT	8C03
JIT	8C06
JIT	8C06
JIT	8C06
JIT	8C06
JIT	8C07
JIT	8C07
JIT	8C07
JIT	8C08
JIT	8C08
JIT	8C08
JIT	8C08
JIT	8C09
JIT	8C09
JIT	8C09
JIT	8C0A
JIT	8C0A
JIT	8C0A
JIT	8C0A
JIT	8C0B
JIT	8C0B
JIT	8C0B
JIT	8C0C
JIT	8C0C
JIT	8C0C

	USER OVERHEAD TIME						TUOVT	JIT	8COD				
	USER PAGE * TIME MEMORY USE FACTOR						TUIOT	JIT	8COD				
J:DELTAT	-- TIME QUANTUM LEFT (INC BY CLOCK4)						TIMTMP	JIT	8COF				
J:MRT	MAX RUN TIME. IF ZERO, NO MAX						MRT	JIT	8COF				
	0	8	11		23	26	31	JIT	8C10				
J:ABC	ABORT CODE	JOB PRIOR			SENSE SWITCHS		JABC, PRT SS, BAABC	JIT	8C11				
	-ENQ'S OUTSTANDING							JIT	8C11				
	0	8	9	10	14	16	17	18	20	24	31	JIT	8C12
F J:RNST	RUN STATUS	RUN FLAG			X S L	LINK COUNTER	RUNFLAG JRNST, PUF CCBEF, RNST BARNST	JIT	8C12				
	- EXEC. SEV. LEVEL							JIT	8C12				
	- RETURN M:EXIT AFTER M:LINK							JIT	8C12				
	- RETURN M:FRR/M:XXX AFTER M:LINK							JIT	8C12				
	- SAVE/RES J:CCBUF ON M:LINK/M:LDTRC							JIT	8C12				
	-COMMAND IN J:CCBUF							JIT	8C12				
	-CONTROL CMND BUF FULL							JIT	8C12				



	USER PAGE COUNT	ADDRESS OF CCI'S LOADER	ALOCCT	JIT	8C19		
		COMMAND TABLE	CUPO	JIT	8C19		
				JIT	8C19		
				JIT	8C19		
J:JIP	MAX USER LP PAGES	JOB IN PROGRESS FLAG	MUPO	JIT	8C1A		
				JIT	8C1A		
				JIT	8C1A		
J:INTER	DIAGNOSTIC PAGE CNT	# OF INTERACTIONS	CDPO	JIT	8C1B		
				JIT	8C1B		
				JIT	8C1B		
J:RWEBC	MAX DO PAGES OUT	ECB ADDRESS	MDPO	JIT	8C1C		
				JIT	8C1C		
				JIT	8C1C		
JB:STEP	# OF STEPS	JOB ORIGIN	# TAPE READ & WRITES	TPACCESS	JIT	8C1D	
JB:ORG				JIT	8C1D		
				JIT	8C1D		
J:ASPIN	ACTIVE SPINDLES			JIT	8C1E		
				JIT	8C1E		
				JIT	8C1E		
				JIT	8C1E		
				JIT	8C1E		
J:ALB	UNUSED	CAL3	*J:ALB	JIT	8C20		
				JIT	8C20		
				JIT	8C20		
J:TELFLGS	CCI AND TEL FLAGS (SEE DEF)			CCLTFLGS	JIT	8C21	
				CCLFLGS	JIT	8C21	
				MJCFLG	JIT	8C21	
				JTELFLGS	JIT	8C21	
	0	8	25	31	JIT	8C22	
J:CASSIN	REMOTE	REMOTE	UNUSED	FLAGS	ERLFLGS	JIT	8C22
	BATCH FLAG	BATCH ID			ERRFLGS	JIT	8C22
					JRBID	JIT	8C22

	0	15	31	
J:INTENT	0-----0	USER CONSOLE INTERUPT ENTRY ADDRESS		INTENT
		COMMAND PROCESSOR BREAK CONTROL		
J:TIMENT	0-----0	ENTRY ADDRESS FOR M:STIMER		TIMENT
J:UTIMER		INTERVAL SET BY M:STIMER		UTIMER
		7 8 9 10 11 12 14 15	31	
J:USENT		TRAP FLAGS	ADD. OF USER TRAP ROUTINES BY M:TRAP	TRPFLAGS
		---BAD CAL TRAP CONTROL ---FIXED POINT TRAP CONTROL ---DECIMAL TRAP CONTROL ---FLOATING POINT TRAP CONTROL ---STACK TRAP CONTROL ---UNIMPLEMENTED INSTR TRAP CONTROL ---NON-ALLOWED OPERATION TRAP CNTRL ---RSVRD. - TRAP CONTROL		
J:TCB	0-----0	TCB ADDRESS		TCBADR
J:TREE	0-----0	TREE TABLE ADDRESS		JITREE
		MIN TEMP PACK SPACE REMAINING		TMPDPPK

JIT	8C23
JIT	8C23
JIT	8C23
JIT	8C23
JIT	8C23
JIT	8C23
JIT	8C23
JIT	8C24
JIT	8C24
JIT	8C24
JIT	8C24
JIT	8C25
JIT	8C25
JIT	8C25
JIT	8C25
JIT	8C26
JIT	8C26
JIT	8C26
JIT	8C26
JIT	8C26
JIT	8C26
JIT	8C26
JIT	8C26
JIT	8C26
JIT	8C26
JIT	8C26
JIT	8C26
JIT	8C26
JIT	8C26
JIT	8C26
JIT	8C26
JIT	8C26
JIT	8C26
JIT	8C27
JIT	8C27
JIT	8C27
JIT	8C27
JIT	8C28
JIT	8C28
JIT	8C28
JIT	8C28
JIT	8C29
JIT	8C29
JIT	8C29

7

J:USCDX	0-----0   ADDR CONTEXT DATA     BUFFER CHAIN	
J:DCBLINK	0-----0   ADDR REST OF DCB NAMES	DCBLINK
M:UC J:COCOFT	 : COC OPTIONS IN M:UC+8	
J:TITLE	IF BATCH, JOB TITLE IN TEXTC (21 WORDS)     IF ONLINE, M:UC (22 WORDS)     IF SUB TASK, CONTROL INFO(SEF DEF)(RSRVD)	ATITLE
	0           31	
J:UPRIV	USER PRIVILEGE FLAGS	
J:XP	DEFAULT FILE EXPIRE.   MAX FILE EXPIRATION	
	0   8   16   24   31	
JB:PRIV JB:NFPPOOL	JOB   CUL-(CLL   RESERVED   NFPPOOL     PRIVILEGE   +2)           IN PAGES	JBNFPPOOL
	0     15     31	
J:ABUF	0-----0   ADR OF ASSIGN-MERGE BUF	

JIT 8C2A  
JIT 8C2A  
JIT 8C2A  
JIT 8C2A  
JIT 8C2B  
JIT 8C2B  
JIT 8C2B  
JIT 8C2C  
JIT 8C2C  
JIT 8C2C  
JIT 8C2C  
JIT 8C2C  
JIT 8C2C  
JIT 8C2C  
JIT 8C2C  
JIT 8C2C  
JIT 8C41  
JIT 8C41  
JIT 8C41  
JIT 8C41  
JIT 8C42  
JIT 8C42  
JIT 8C42  
JIT 8C43  
JIT 8C43  
JIT 8C43  
JIT 8C43  
JIT 8C43  
JIT 8C43  
JIT 8C44  
JIT 8C44  
JIT 8C44



	0 1 2	7 8 9	14 15	31		JIT	8C44
J:SIMSP	-----					JIT	8C44
						JIT	8C44
	-----					JIT	8C44
					ADDR OF TRAPPED REG	JIT	8C44
					ZERO IN TSTACK	JIT	8C44
					-- 'OR' OF INHIBIT BITS FROM TRAPPED	JIT	8C44
					PSD	JIT	8C44
					----- BITS 10-15 FROM TRAPPED PSD	JIT	8C44
					(ARITHMETIC & DECIMAL FAULT MASKS)	JIT	8C44
					----- MAP BIT (BIT 9) FROM TRAPPED PSD	JIT	8C44
					----- MODE ALTERED BIT (BIT 40) OR'D WITH	JIT	8C44
					SLAVE BIT (BIT 8) OF TRAPPED PSD	JIT	8C44
	0	8	16	24	31	JIT	8C45
JB:CCARS	-----					JIT	8C45
JB:DISP	RECORD SZ	DISPLACE.	CURRENT	SPEC SHRD		JIT	8C45
JB:CUN	C.C.	IN C.C.	USER #	PROC. #		JIT	8C45
JB:OTEL	-----					JIT	8C45
JB:LPP	-----					JIT	8C46
JB:LC	# OF LINES	CURRENT #	PLATEN	PROMPT		JIT	8C46
6 JB:PCW	PER PAGE	OF LINES	WIDTH	BYTE		JIT	8C46
JB:PROMPT	DEF=0	DEF=0	DEF=0	DEF=0		JIT	8C46
	-----					JIT	8C46
J:IDELTAT	-----					JIT	8C47
		INITIAL VALUE OF J:DELTAT				JIT	8C47
	-----					JIT	8C47
	0 1 2 3 4 5 6 7 8	15		31		JIT	8C48
J:EXTENT	-----					JIT	8C48
		ADDR OF EXIT CONTROL				JIT	8C48
	-----					JIT	8C48
		-- 'LAST' OP ON EXIT CNTRL				JIT	8C48
		-----STEP CONDITION CODE				JIT	8C48
		-----EXIT CNTRL;C-Y AND QUIT				JIT	8C48
		-----UNUSED				JIT	8C48
		-----M:LINK OR M:LDTRC EXIT CONDITION				JIT	8C48
		-----EXIT CNTRL BY CMND PROC				JIT	8C48
		-----EXIT CNTRL IN PROGRESS				JIT	8C48
		-----SOME LIMIT EXCEEDED				JIT	8C48
		-----OPERATOR ABORT OR LINE HNGUP				JIT	8C48

	MIN TEMP RAD SPACE REMAINING	TMPDCPK	JIT	8C49
			JIT	8C49
			JIT	8C49
			JIT	8C49
J:XPSD	OLD PSD		JIT	8C49
			JIT	8C49
	CAL3 HANDLER PSD		JIT	8C49
			JIT	8C49
			JIT	8C49
TSTACK	TEMPORARY STACK DOUBLEWORD (BOUND 8)		JIT	8C4E
UTS			JIT	8C4E
			JIT	8C4E
	TEMPORARY STACK OF SIZE=JTSTACKSZ=121		JIT	8C4E
			JIT	8C4E
			JIT	8C4E
			JIT	8C4E
			JIT	8C4E
			JIT	8C4E
			JIT	8C4E
			JIT	8C4E
J:OVRLY	OVERLAY ENTRY POINT ADDRESS		JIT	8CC9
10			JIT	8CC9
	0            8            16            24            31		JIT	8CC9
			JIT	8CCA
J:CPROCS	UB:APR      UB:APO      UB:ASP      UB:DB		JIT	8CCA
			JIT	8CCA
	0                            16                            31		JIT	8CCB
			JIT	8CCB
J:CFLGS	GARBAGE                      UH:FLG    AT SAVE		JIT	8CCB
			JIT	8CCB

J:CCBUF	CONTROL COMMAND BUFFER FOR CCI AND TEL 20 WORDS FOR TEL 30 WORDS FOR CCI		JIT	8CCC
J:DWSK(20)			JIT	8CCC
J:LMN(26)	LAST LM FORMED - 3 WORDS, TEXTC		JIT	8CCC
J:START(29)	START ADDRESS OF CURRENT PROGRAM		JIT	8CCC
M:XX	M:XX DCB 22 WORDS		JIT	8CEA
MXFPL	M:XX FUNCTION PARAMETER LIST 10 WORDS		JIT	8CFA
MXKB	M:XX KEY BUFFER 8 WORDS		JIT	8CEA
	0	24		31
J:BUS	0-----0   BEGIN USER PAGE #		JBUP	JIT 8D12
J:EUP	0-----0   ENDING USER PAGE #		JEUP	JIT 8D13
J:PLL	0-----0   PAGE # PROG LOWER LIMIT		JPLL	JIT 8D14
J:PUL	0-----0   PAGE # PROG UPPER LIMIT		JPUL	JIT 8D14
J:DLL	0-----0   PAGE # DATA LOWER LIMIT		JDLL	JIT 8D16

:(24)JOPT

J:DUL	0-----0   PAGE # DATA UPPER LIMIT	JDUL
J:DDLL	0-----0   PAGE # DYNAMIC DATA   LOWER LIMIT	JDDLL
J:DDUL	0-----0   PAGE # DYNAMIC DATA   UPPER LIMIT	JDDUL
J:CLL	0-----0   PAGE # CONTEXT LOW LIMIT	
	0-----0   PAGE # CONTEXT UP LIMIT	
J:DCBLL	0-----0   PAGE # DCB LOW LIMIT	JDCBLL
J:DCBUL	0-----0   PAGE # DCB UPPER LIMIT	JDCBUL
JB:PCP		JPCP
JB:PCD	PG CNT OF   PG CNT OF   PG CNT OF   PG CNT OF	JBPCP
JB:PCDD	PROCEDURE   DATA   DYNM DATA   CONTEXT	JBPCDD
JB:PCC		JBPCC
JB:PCDCB	PG CNT OF   SPARE BUF   PG CNT   FILE MNGT	
JB:PCPWP	DCBS   SWAP FLAG   ASSIGNED   SPARE BUF	JSPBFLG
JB:FBUC	PHYS.PGS   USE CNT	JBFBUC
JB:FBUL	FILE MNGT   FILE MNGT*   COOP   COOP	JBFBFP
JB:CBUC	SPARE BUF   FREE BUF   SPARE BUF   SPARE BUF	JBCBLL
	UPPER LIM   POOL HEAD   LOW LIMIT   USE CNT	JBCBUC
	* INTERRUPT ALTERED	
JB:TDP	PG # TOP   PG # BOTTM   FINAL RUN   NEXT AVAIL	JBTDTP
JB:BCP	DYNM DATA   COMMON   STATUS   SECTOR POS	JBBCP
JB:FRS		JBNASP
J:USER	2 WORDS FOR INSTALLATION USE	

JIT	8D17
JIT	8D17
JIT	8D17
JIT	8D18
JIT	8D18
JIT	8D18
JIT	8D18
JIT	8D19
JIT	8D19
JIT	8D19
JIT	8D19
JIT	8D19
JIT	8D1A
JIT	8D1A
JIT	8D1A
JIT	8D1B
JIT	8D1B
JIT	8D1B
JIT	8D1C
JIT	8D1C
JIT	8D1C
JIT	8D1D
JIT	8D1D
JIT	8D1D
JIT	8D1F
JIT	8D1F
JIT	8D1F
JIT	8D1E
JIT	8D1E
JIT	8D1F
JIT	8D1F
JIT	8D1F
JIT	8D1F
JIT	8D1F
JIT	8D20
JIT	8D20
JIT	8D20
JIT	8D20
JIT	8D20
JIT	8D20
JIT	8D21
JIT	8D21
JIT	8D21
JIT	8D21
JIT	8D21
JIT	8D22
JIT	8D22
JIT	8D22
JIT	8D22
JIT	8D22

J:CLS	CLOSE STATUS INFO				
	NUMBER OF PACK READS AND WRITES   DPACCESS				
	NUMBER OF DISC READS AND WRITES   DCACCESS				
	0	8	16	24	31
JB:MAX	MAXIMUM RESOURCES ALLOWED TO USER  JBMNPA				
JB:MNPA	4 WORD BYTE TABLE				
	0	16			31
	PHYSICAL PAGE		UNUSFD		JXPPH
13 JX:PPH	CHAIN HEAD				JPPH
	0	16		24	31
JX:PPT	PHYSICAL PAGE		SLNK	XLNK	JPPT
JB:SLNK	CHAIN TAIL				JXPPT
JB:XLNK					
	0	8	16	24	31
JB:PPC	PHYS PAGE	PARTITION	# REMAIN	UNUSED	JPPC
JB:NRG	CHAIN CNT	#	GRANULES		JBPPC
JB:PNR	JBNRG				
JB:VLH	VIRT. PG	PEAK CORE	ON-LINE PAGE		JBVLH
JB:PEAK	LINK HEAD		COUNT		JVLH
JH:PC					
JB:STEPCC					
JB:VLT	VIRT PG	STEP COND.	# DISC	# TAPES	JVLT
JB:PMTS	LINK TAIL	CODES	PACK MOUNT	MOUNTS	
JB:TMTS					

JIT	8D24
JIT	8D24
JIT	8D24
JIT	8D25
JIT	8D25
JIT	8D25
JIT	8D26
JIT	8D26
JIT	8D26
JIT	8D27
JIT	8D27
JIT	8D27
JIT	8D27
JIT	8D27
JIT	8D27
JIT	8D27
JIT	8D27
JIT	8D27
JIT	8D2B
JIT	8D2B
JIT	8D2B
JIT	8D2B
JIT	8D2B
JIT	8D2C
JIT	8D2C
JIT	8D2C
JIT	8D2C
JIT	8D2C
JIT	8D2D
JIT	8D2D
JIT	8D2D
JIT	8D2D
JIT	8D2E
JIT	8D2E
JIT	8D2E
JIT	8D2E
JIT	8D2F
JIT	8D2F
JIT	8D2F
JIT	8D2F

	PERMANENT RAD SPACE REMAINING	PRDCRM	JIT	8D30
	-----		JIT	8D30
	PERMANENT PACK SPACE REMAINING	PRDPRM	JIT	8D31
	-----		JIT	8D31
	TEMPORARY RAD SPACE REMAINING	TMDCRM	JIT	8D32
	-----		JIT	8D32
	TEMPORARY PACK SPACE REMAINING	TMDPRM	JIT	8D33
	-----		JIT	8D33
	TEMPORARY PACK SPACE REMAINING	TMDPRM	JIT	8D33
	-----		JIT	8D33
J:VLCS	VIRTUAL LINK CHAIN STOP	JVLCS	JIT	8D34
	-----		JIT	8D34
			JIT	8D34
J:AJ	ADDITIONAL JIT PHYSICAL PAGE NUMBER	JAJ	JIT	8D35
	-----		JIT	8D35
			JIT	8D35
J:CLPA	COMMAND LIST PHYSICAL ADDRESS	JCLPA	JIT	8D36
	-----		JIT	8D36
			JIT	8D36
<sup>h</sup> J:CLE	NUMBER OF WORDS IN COMMAND LIST	JCLE	JIT	8D37
	-----		JIT	8D37
			JIT	8D37
	POINTER TO TRANSFER IN CHANNEL IN J:CL	JCLP	JIT	8D38
	-----		JIT	8D38
			JIT	8D38
	SAVED WORD OF COMMAND LIST WHERE TIC WENT	JCLT	JIT	8D39
	-----		JIT	8D39
			JIT	8D39
J:FDDA	FILE DIRECTORY DISC ADDRESS		JIT	8D3A
	-----		JIT	8D3A
	0	16	31	JIT
			JIT	8D3B
J:T	READ COMP TIME	READ CURRENT TIME		JIT
	-----	-----		JIT
			JIT	8D3B
			JIT	8D3B
			JIT	8D3B
J:JAC	ACCESS CODES FOR USER	JJAC	JIT	8D3C
	: 2 BITS PER PAGE - 12 WORDS	:	JIT	8D3C
	:	:	JIT	8D3C
	-----	-----	JIT	8D3C

J:STAR

FDA OF *B
*D
*G
*L
*T
*N (LNKTRC)

J:BASE

SPILL BUFFER FOR INDEX BUFFERS.
: ALSO USED BY OTHER MONITOR ROUTINES :
: AS TEMPORARY STORAGE. 12 WORDS :
0 16 31

J:TIC

RESPONSE TIME, 2MS OR 0; TURNAROUND TIME OR 0;
--

J:AMR

DISC ADDRESS OF ASSIGN-MERGE RECORD
0 15 31

J:ICBHDR

HEAD OF ACTIVE ICB CHAIN
--M: IOEX CAL ISSUED
---REAL TIME CAL ISSUED

J:PPRIV

PROCESSOR PRIVILEGE FLAGS
---------------------------

JB:LMAP

VIRTUAL PAGE # CHAIN
: BYTE TABLE BY VIRTUAL PAGE # :
: 53 WORDS :

JBLMAP  
JLMAP

JIT	8D48
JIT	8D48
JIT	8D48
JIT	8D48
JIT	8D48
JIT	8D48
JIT	8D48
JIT	8D48
JIT	8D48
JIT	8D48
JIT	8D48
JIT	8D48
JIT	8D4E
JIT	8D4E
JIT	8D4E
JIT	8D4E
JIT	8D4E
JIT	8D5A
JIT	8D5A
JIT	8D5A
JIT	8D5A
JIT	8D5B
JIT	8D5B
JIT	8D5B
JIT	8D5B
JIT	8D5C
JIT	8D5C
JIT	8D5C
JIT	8D5C
JIT	8D5C
JIT	8D5C
JIT	8D5C
JIT	8D5D
JIT	8D5D
JIT	8D5D
JIT	8D5D
JIT	8D5E
JIT	8D5E
JIT	8D5E
JIT	8D5E
JIT	8D5E

15

JB:CUR

CURRENT RESOURCES ALLOCATED TO USER

4 WORD BYTE TABLE

JX:CMAP

 PHYSICAL PAGE # CHAIN  
 : HALF-WORD OR BYTE :  
 : INDEXED BY VIRTUAL PAGE # :  
 : 53 WORDS OR 106 ON BIG 9 :

0

31

J:LDCF  
JH:LDCF

PERIPHERAL FLAGS

JH:DA

 SEEK ADDRESS USED BY J:CL : JDA  
 : (SIGMA 7 AND SMALL SIGMA 9) :  
 : LOCATED AT END OF AJIT IF BIG SYSTEM: :

J:CL

COMMAND LIST USED BY SWAPPER

 :  
 : SEEK IOCD BA(JH:DA(0)) :  
 : READ/WRITE IOCD :  
 : READ/WRITE IOCD :  
 : READ/WRITE IOCD :  
 : READ/WRITE IOCD :  
 : SEEK BA(JH:DA(1)) :  
 : READ/WRITE IOCD :  
 : : :

J:AJIT

ADDR OF AJIT IF J:CL TOO BIG FOR JIT

 JIT 8D63  
 JIT 8D63  
 JIT 8D63  
 JIT 8D63  
 JIT 8D63  
 JIT 8D63  
 JIT 8D63  
 JIT 8D63  
 JIT 8D63  
 JIT 8D93  
 JIT 8D93  
 JIT 8D93  
 JIT 8D93  
 JIT 8D93  
 JIT 8D93  
 JIT 8D93  
 JIT 8D93  
 JIT 8D93  
 JIT 8D93  
 JIT 8D93  
 JIT 8D93  
 JIT 8D93  
 JIT 8D93  
 JIT 8D93  
 JIT 8D93  
 JIT 8D93  
 JIT 8D93  
 JIT 8D93  
 JIT 8D93  
 JIT 8E00  
 JIT 8E00  
 JIT 8E00
JXCMAP  
JCMAP

JDA

JCL

16



## JIT LABEL DEFINITIONS

:AMHED	ASSIGN/MERGE RECORD HEAD
:LOGSZ	:USERS RECORD SIZE
ABO	I/O ABNORMAL OVERRIDE ADDR.
ACCN	(SEE J:ACCN)
ALOCCT	ADDR OF LOCCT TABLE BUILT BY CCI.
ATITLE	(SEE J:TITLE)
BAABC	(SEE J:ABC)
BARNST	(SEE J:RNST)
CCBEF	(SEE J:RNST)
CCLFLAGS	(SEE J:TELFLGS)
CCLTFLGS	(SEE J:TELFLGS)
CDPO	(SEE J:INTER)
CEXT	(SEE J:CTIME)
CIC	(SEE J:NRS)
COCLN	DISPLACEMENT IN M:UC TO LINE #
CPE	(SEE J:ASSIGN)
CPO	TOTAL # OF CARDS PUNCHED FOR JOB.
CPPO	(SEE J:CPPO)
CUPO	CURRENT # OF USER PAGES OUT.
DCACCESS	TOTAL # OF DISC READS AND WRITES FOR JOB.
DCBLINK	(SEE J:DCBLINK)
DPACCESS	TOTAL # OF PACK READS AND WRITES FOR THE JOB.
ERLFLAGS	(SEE J:CASSIN)
ERO	I/O ERROR OVERRIDE ADDR.
ERRLFLGS	(SEE J:CASSIN)
FPMC	FREE PAGE MAP CONSTANT
HANSWAPS	HALFWORD ADDR OF # OF SWAPS PRIOR TO A TRAP
INTENT	(SEE J:INTENT)
IOTIME	(SEE J:CALCNT)
J:ABC	BITS 0-7: I/O ABORT CODE
J:ABUF	LOCATION OF ASSIGN-MERGE BUFFER IF IN CORE,
J:ACCN	ACCOUNT # FOR THIS JOB (EBCDIC-2 WORDS).
J:AJ	PHYS PAGE # OF AJIT (ADDITIONAL JIT)
J:AJIT	ADDR OF ADDITIONAL JIT. AJIT NEEDED IF J:CL
J:ALB	ADDR OF LAST BRANCH (FOR 560 ONLY).
J:AMR	DISC ADDR OF THE ASSIGN-MERGE RECORD.
J:ASPIN	TWO WORD BIT TABLE USED TO MARK THE DCT
J:ASSIGN	BIT 0: ASSIGNS HAVE BEEN MERGED.
J:BASE	SCRATCH STORAGE (12 WORDS)

J: BUP PAGE # OF LOWER LIMIT OF USER AREA (1ST PAGE #).  
J: CALCNT COUNT OF CAL1 CALLS EXECUTED.  
J: CASSIN BITS 8-15: WORK-STATION OF ORIGIN.  
JB: CCARS ACTUAL RECORDED SIZE OF CONTROL CMND.  
J: CCBUF CONTROL CMND BUFFER USED BY TEL AND CCI  
JB: CCDISP DISPLACEMENT INTO CONTROL CMND.  
J: CFLGS THIS FIELD IS SET UP BY THE SAVE CAL.  
J: CL START OF SWAPPER CMND LIST IF NO AJIT.  
J: CLE # OF WORDS IN SWAPPER CMND LIST.  
J: CLL PAGE # OF LOWER LIMIT OF JOB CONTEXT AREA  
J: CLPA PHYS ADDR OF SWAPPER CMND LIST.  
J: CLS CLOSE STATUS INFORMATION.  
J: COCOPT COC OPTIONS (M:UC+8)  
J: CPPO BITS 0-14: CURRENT PROCESSOR PAGES OUT.  
J: CPROCS PROCESSORS ASSOCIATED AT TIME OF SAVE CAL.  
J: CTIME # OF I/O OPERATIONS IN CURRENT QUANTUM \* SL:IOTA.  
J: CUL PAGE # OF UPPER LIMIT OF JOB CONTEXT AREA.  
JB: CUN CURRENT USER NUMBER  
J: DCBLINK ADDR OF DCB TABLE.  
J: DCBLL PAGE # OF DCB LOWER LIMIT.  
J: DCBUL PAGE # OF DCB UPPER LIMIT.  
J: DLLL PAGE # OF LOWER LIMIT OF DYNAMIC DATA AREA.  
J: DDUL PAGE # OF UPPER LIMIT OF DYNAMIC DATA AREA  
J: DELTAT NEGATIV VALUE OF QUANTUM REMAINING, INC BY CLOCK4.  
J: DLL PAGE # OF LOWER LIMIT OF PROGRAM DATA AREA.  
J: DUL PAGE # OF UPPER LIMIT OF PROGRAM DATA AREA.  
J: DWSK RESERVED FOR DOO.  
J: EUP PAGE # OF UPPER LIMIT OF USER AREA  
J: EXLY CURRENTLY EXECUTING AN EXECUTE-ONLY LOAD MODULE.  
J: EXTENT BIT 0: OPERATOR ABORT OR LINE HANGUP.  
J: FDDA FILE DIRECTORY DISC ADDR FOR THIS ACCOUNT.  
J: ICBHDR BIT 0: USER HAS ISSUED REAL-TIME CAL1.  
J: IDELTAT INITIAL VALUE OF J:DELTAT (NEGATIVE QUANTUM).  
J: INTENT BIT 0: CMND PROCESSOR BREAK CONTROL FLAG.  
J: INTER BITS 0-14: CURRENT DIAGNOSTIC PAGES OUT.  
J: JAC TABLE OF THE TWO BIT ACCESS PROTECTION CODES  
J: JIP BITS 0-14: MAXIMUM USER PAGES OUT.  
J: JIT JIT START ADDR, CURRENTLY X'8C00'.  
J: LDCF PERIPHERAL AUTHORIZATION FLAGS, PARELLEL TO

J:LMN NAME OF LAST LOAD MODULE FORMED  
J:MRT MAXIMUM RUN TIME. ZERO IMPLIES NO MAXIMUM.  
J:NRS BITS 0-14: TOTAL # OF CARDS READ FOR JOB.  
J:OPT BITS REPRESENTING NON-STANDARD OPTIONS  
J:OVHTIM OVERHEAD TIME FOR CURRENT QUANTUM.  
J:OVRLY OVERLAY ENTRY POINT ADDR.  
J:PLL PAGE # OF LOWER LIMIT OF  
J:PPRIV PRIVILEGED PROCESSOR FLAGS  
J:PTIME TOTAL PROCESSOR EXECUTION TIME FOR JOB.  
J:PUL PAGE # OF UPPER LIMIT PROGRAM PURE PROCEDURE.  
J:RNST BIT 0: M:ERR.  
J:RWECEB ECB ADDR  
J:SIMSP SIMULATORS WORK CELL (SIGMA 5 ONLY)  
J:STAR LIST OF STAR FILE FIT DISC ADDRESS(6 WORDS)  
J:START START ADDR OF CURRENT PROGRAM.  
J:T USED FOR PERFORMANCE MEASUREMENT.  
J:TCB TCB ADDR OF THE EXECUTING USER  
J:TELFLGS FLAGS USED BY TEL AND CCI  
J:TIC USED FOR PERFORMANCE MEASUREMENT.  
J:TIMENT ADDR OF ROUTINE TO BE ENTERED  
J:TITLE JOB TITLE IN TEXTC FORMAT IF BATCH;  
J:TRAP BITS 0-14: MAXIMUM PROCESSOR PAGES OUT.  
J:TREE TREE TABLE ADDR OF EXECUTING  
J:UN (SEE J:JIT)  
J:UNAME USER'S NAME (EBCDIC-3 WORDS).  
J:UPRIV USER PRIVILEGE FLAGS  
J:USCDX ADDR OF USED CONTEXT DATA  
J:USENT BIT 7: RSVRD.-TRAP CONTROL  
J:USER AVAILABLE FOR INSTALLATION DEFINITION.  
J:UTIME TOTAL USER EXECUTION TIME FOR CURRENT JOB.  
J:UTIMER TIME INTERVAL SPECIFIED BY M:STIMER CAL.  
J:VLCS VIRTUAL PAGE LINK STOP.  
J:XP BITS 0-15: DEFAULT FILE EXPIRATION PARAMETERS.  
J:XPSD XPSD BLOCK FOR CAL3  
JABC (SEE J:ABC)  
JACCN (SEE J:ACCN)  
JAJ (SEE J:AJ)  
JAJITVP VIRTUAL PAGE # OF AJIT  
JASSIGN (SEE J:ASSIGN)

JB:ALN      ACTUAL LINE NUMBER; USED WHEN A SAVED IMAGE  
JB:BCP      PAGE # OF BASE OF COMMON PAGE  
JB:CBUC     COOP SPARE BUFFER USE COUNT.  
JB:COCOPT2  COC OPTIONS  
JB:CUR      BYTE TABLE GIVING THE # OF  
JB:DPRMPT  DEFAULT PROMPT CHARACTER  
JB:FBUC     FILE MANAGEMENT SPARE BUFFER USE COUNT  
JB:FBUL     FILE MANAGEMENT SPARE BUFFER UPPER LIMIT.  
JB:FRS      FINAL RUN STATUS.  
JB:LAPH                LINES AFTER PAGE HEADING, INITIALLY 6  
JB:LBPH                LINES BEFORE PAGE HEADING, INITIALLY 5  
JB:LC        COUNT OF LINES OUTPUT ON CURRENT PAGE.  
JB:LMAP     BYTE TABLE INDEXED BY VIRTUAL PAGE  
JB:LPP      # OF USER LINES PER PAGE ON TERMINAL.  
JB:MAX      BYTE TABLE CONTAINING THE MAXIMUM  
JB:MNPA     MAXIMUM # OF PAGES AVAILABLE.  
JB:NFPPOOL  MAX # FILE BUFFERS FOR THIS JOB  
JB:NRG      # OF REMAINING GRANULES.  
JB:ORG      JOB ORIGIN  
JB:OTEL     SP. SHRD PROC. NUMBER OVERLAY TEL.  
JB:PCC      PAGE COUNT OF CONTEXT  
JB:PCD      PAGE COUNT OF DATA.  
JB:PCDCB    PAGE COUNT OF DCBS.  
JB:PCDD     PAGE COUNT OF DYNAMIC DATA.  
JB:PCP      PAGE COUNT OF PURE PROCEDURE.  
JB:PCPWP    PAGE CNT OF ASSIGNED PHY. PGS.  
JB:PCW      PLATEN WIDTH (# OF CHARACTERS PER LINE).  
JB:PEAK     PEAK # OF CORE PAGES INCURRED  
JB:PMTS     # OF DISK PACKS MOUNTED FOR THIS JOB  
JB:PNR      PARTITION # UNDER WHICH THE JOB IS RUNNING.  
JB:PPC      PHYS PAGE CHAIN COUNT.  
JB:PRIV     BITS 0-7 CONTAIN THE PRIVILEGE  
JB:PROMPT   CURRENT PROMPT CHARACTER.  
JB:SLNK     USED TO LINK THE SERIAL #S OF  
JB:STEP     BITS 0-7: COUNT OF JOB STEPS.  
JB:STEPCC   STEP CONDITION CODE FOR THIS JOB STEP.  
JB:TDP      PAGE # OF TOP OF DYNAMIC DATA.  
JB:TMTS     # OF TAPES MOUNTED FOR JOB.  
JB:VLH      VIRTUAL PAGE LINK HEAD.

JB:VLT VIRTUAL PAGE LINK TAIL.  
JB:XLNK USED TO LINK THE SERIAL #S  
JBBCP BYTE DISPLACEMENT OF JB:BCP.  
JBCBLL COOP SPARE BUFFER LOWER LIMIT.  
JBCBUC COOP SPARE BUFFER USE COUNT.  
JBFBFP FILE MANAGEMENT FREE BUFFER POOL HEAD  
JBFBUC FILE MANAGEMENT SPARE BUFFER USE COUNT  
JBLMAP BYTE DISPLACEMENT OF JB:LMAP  
JBMNPA BYTE DISPLACEMENT OF JB:MNPA.  
JBNASP BYTE DISPLACEMENT OF JB:NASP.  
JBNFPPOOL MAXIMUM # OF FILE BUFFERS FOR THIS JOB.  
JBNRG BYTE DISPLACEMENT OF JB:NRG.  
JBPCP BYTE DISPLACEMENT OF JB:PCC.  
JBPCDD BYTE DISPLACEMENT OF JB:PCDD.  
JBPCP BYTE DISPLACEMENT OF JB:PCP.  
JBPPC BYTE DISPLACEMENT OF JB:PPC.  
JBTDP BYTE DISPLACEMENT OF JB:TDP.  
JBUP (SEE J:BUP)  
JBUPVP VP # OF USERS BEGINNING PAGE.  
JBUPVPA WORD ADDR OF USERS BEGINNING PAGE  
JBVLH BYTE DISPLACEMENT OF JB:VLH.  
JCCL MAXIMUM JIT CMND LIST LENGTH.  
JCL (SEE J:CL)  
JCLE (SEE J:CLE)  
JCLP (SEE J:CLP)  
JCLPA (SEE J:CLPA)  
JCLT (SEE J:CLT)  
JCMAP (SEE JB:CMAP)  
JCOVP VP # OF FIRST COOP BUFFER.  
JCOVPA WORD ADDR EQUIVALENT OF JCOVP.  
JCO2VPA WORD ADDR OF SECOND COOP BUFFER.  
JCPPO (SEE J:CPPO)  
JDA (SEE J:DA)  
JDCBLL PAGE # OF DCB LOWER LIMIT.  
JDCBUL PAGE # OF DCB UPPER LIMIT.  
JDDL (SEE J:DDL)  
JDDUL (SEE J:DDUL)  
JDLL (SEE J:DLL)  
JDUL (SEE J:DUL)

JEUP (SEE J:EUP)  
JEUPVP VP # OF END USERS PAGE  
JH:DA HALFWORD TABLE OF SEEK ADDRESSES  
JH:LDCF PERIPHERAL AUTHORIZATION FLAGS, PARALLEL TO  
JH:PC ON-LINE PAGE COUNT.  
JIT (SEE J:JIT)  
JITREE TREE TABLE ADDRESS OF EXECUTING  
JJAC (SEE J:JAC)  
JJITVP VP # OF JIT.  
JLMAP (SEE JB:LMAP)  
JOPT BITS REPRESENTING NON-STANDARD OPTIONS(SEE J:OPT)  
JOVVP VP # START OF MAP IMAGE WHICH  
JOVVPA WORD ADDR EQUIVALENT OF JOVVP.  
JPCP (SEE JB:PCP)  
JPLL (SEE J:PLL)  
JPPC (SEE JB:PPC)  
JPPH (SEE JX:PPH)  
JPPT (SEE JX:PPT)  
JPUL (SEE J:PUL)  
JRBID REMOTE BATCH JOB ID.  
JRNST (SEE J:RNST)  
JSBUF1VP VP # OF FIRST SPECIAL BUFFER  
JSBUF2VP VP # OF SECOND SPECIAL BUFFER.  
JSPBFLG SPARE BUFFER SWAP FLAG.  
JSPVP VP # OF SPECIAL SHARED PROCESSOR.  
JTEFLGS (SEE J:TEFLGS)  
JTSTACKSZ LENGTH OF TSTACK.  
JUNAME USER'S NAME (EBCDIC - 3 WORDS).  
JVLCS (SEE J:VLCS)  
JVLH (SEE JB:VLH)  
JVLT (SEE JB:VLT)  
JX:CMAP BYTE/HALFWORD TABLE INDEXED BY  
JX:PPH PHYSICAL PAGE CHAIN HEAD  
JX:PPT PHYSICAL PAGE CHAIN TAIL  
JXBUFVP VP # START OF JIT MAP IMAGE.  
JXCMAP BYTE DISPLACEMENT (SEE JX:CMAP).  
JXPPH BYTE DISPLACEMENT OF JX:PPH.  
JXPPT BYTE DISPLACEMENT OF JX:PPT.  
M:UC M:UC DCB IF ONLINE (JOB TITLE IF

M:XX	A SYSTEM DCB USED BY DELTA AND
MDPO	MAXIMUM DIAGNOSTIC PAGES OUT.
MJCFLG	(SEE J:TELFLG)
MPO	MAXIMUM CARD PUNCH OUT.
MPPO	MAXIMUM PROCESSOR PAGES OUT.
MRT	MAXIMUM RUN TIME FOR BATCH JOB.
MUPO	MAXIMUM USER PAGES OUT.
MXFPL	M:XX FUNCTION PARAMETER LIST (10 WORDS)
MXKB	M:XX KEY BUFFER (8 WORDS)
NSWAPS	# OF SWAPS.
OVHTIME	OVERHEAD TIME FOR PROCESSOR OR USER
PPMD	(SEE J:ASSIGN)
PRDCRM	PERM RAD SPACE THAT CAN BE USED FOR THIS JOB.
PRDPRM	PERM DISK SPACE THAT CAN BE USED FOR THIS JOB.
PRT	(SEE J:ABC)
PUF	(SEE J:RNST)
RNST	(SEE J:RNST)
RUNFLAG	(SEE J:RNST)
SBUF1VPA	WORD ADDR EQUIVALENT TO JSBUF1VP.
SBUF2VPA	WORD ADDR EQUIVALENT TO JSBUF2VP.
SEED	SEED FOR PASSWORD SCRAMBLING ALGORITHM
SPDBASE	SPECIAL SHARED PROCESSOR DATA ADDRESS.
SPPBASE	DELTA'S PROCEDURE ADDR.
SS	(SEE J:ABC)
SYSID	SYSTEM ID FOR THIS BATCH JOB.
TCBADR	(SEE J:TCB)
TIMENT	(SEE J:TIMENT)
TIMTP	(SEE J:DELTAT)
TMDCRM	TEMPORARY RAD SPACE THAT CAN BE
TMDPRM	TEMP DISK PACK SPACE THAT CAN
TMPDCPK	MINIMUM OF TEMP RAD SPACE
TMPDPPK	MINIMUM OF TEMP PACK SPACE
TPACCESS	# OF TAPE READS AND WRITES FOR THIS JOB.
TPEXT	TOTAL PROCESSOR EXECUTION TIME FOR THIS JOB.
TPIOT	PROCESSOR MEMORY USE FACTOR
TPOVT	TOTAL PROCESSOR OVERHEAD TIME FOR THIS JOB.
TRPFLAGS	(SEE J:USENT)
TSTACK	USER'S MAPPED TEMP STACK. (X'7A' WORDS)
TUEXT	TOTAL USER EXECUTION TIME FOR THIS JOB

CP-V TECHNICAL MANUAL

Section VA  
Page 24  
9/1/78

TUIOT	USER MEMORY USE FACTOR (USER PAGES*TIME).
TUOVT	TOTAL USER OVERHEAD TIME FOR THIS JOB
UNAME	(SEE J:UNAME)
USRENT	(SEE J:USENT)
UTIMER	TIME INTERVAL SPECIFIED BY M:STIMER CAL.
UTS	(SEE TSTACK)

Note: Pages 18g through 18o were deleted by the F00 release.




LANGUAGE PROCESSOR CHART  
JIT USAGE BY PROCESSORS

		APL	BASIC	EASY	FLAG	FORIV	GPDS	LIB	META	SL/1	TEXT	SORT	EDMS	EDMS Re- structuring	IDP	MANAGE	COBOL	RPG	MERGE
ABSOLUTE ADDRESSES	X'28'	X				X						X	X						
	X'4F'		X		X	X	X		X	X		X	X						
	JOPT								X										
	CGBUF				X														
	J:ACCN	X		X							X								
	J:CTIME																		
	J:DELTAT	X																	
	J:JIT	X		X							X								
	J:OPT					X										X			
	J:PTIME	X		X															
	J:UTIME	X																	
	J:UNAME										X								
	J:UTIME	X		X															
	JB:LC																		
	JCPPO				X								X						
	M:UC			X		X													
	MRT				X														
	J:CPROCS													X					
	J:IDELTAT	X																	
	J:OVHTIME			X															
	J:RNST			X															
	J:TCB			X															
	J:TELFLGS			X															

19


SCHEDULER QUEUES

SB:SWP

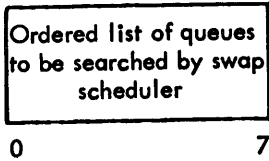


- SW
- SC10
- STI
- STOB
- SQR
- SQF1
- SQA
- SC9
- SC8
- SC7
- SC6
- SC5
- SC4
- SC3
- SC2
- SC1
- SC0
- SRT


EVENT TRANSITION TABLES

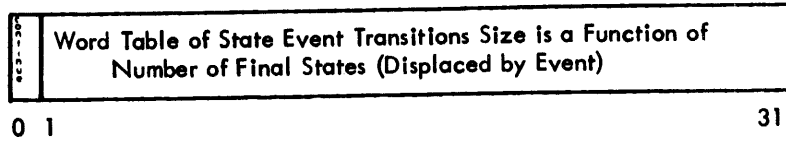

SB:SET

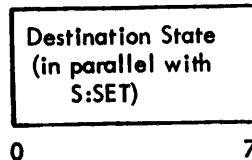

RESOURCE SUB-QUEUES FOR SQR/SQRO

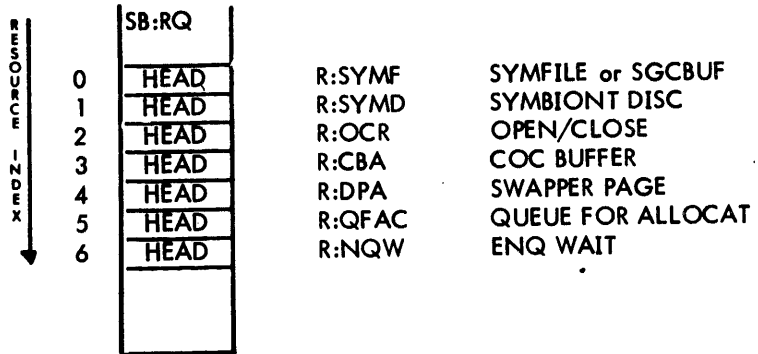


SITUATIONAL PRIORITY INCREMENTS

SH:PINC

0	15	
Not Used		
3		Special Compute
2		I/O Complete
6		Interactive
4		Terminal Output Cont
3		Resource Unblock

Subtracted from user base priority (UB:PRIOB) to compute current priority (UB:PRIO).

Chains for sub-states in SQR/SQRO are linked using U:MISC and UB:PRIO as shown.

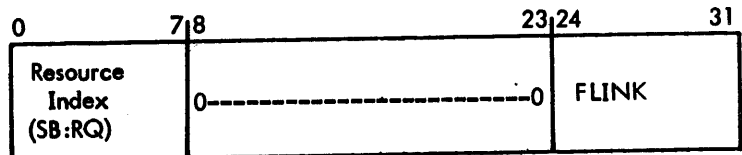

SB:IOTA - Cell containing I/O time allowance. Remaining quantum is decremented by this value for each I/O.

SL:OPC - Word containing monitor overlay protection counter value.

S:OPC - Word containing working value for overlay protection counter, decremented when unsuccessful at swap scheduling. Refreshed by SL:OPC when successful swap schedule.


SCHEDULER STATES

<u>STATE</u>	<u>#</u>	<u>MEANING</u>
SRT	1	Real Time Compute
SC0	2	Background Compute X'C0' < UB:PRIO < X'F5'
SC1	3	Background Compute Priority = X'F6'
SC2	4	" " X'F7'
SC3	5	" " X'F8'
SC4	6	" " X'F9'
SC5	7	" " X'FA'
SC6	8	" " X'FB'
SC7	9	" " X'FC'
SC8	A	" " X'FD'
SC9	B	" " X'FE'
SC10	C	" " X'FF'
SCU	D	Current User
STOB	E	Terminal Output Blocked
STOBO	F	Terminal Output Blocked Out of Core
SLOW	10	I/O Wait
SIOMF	11	Master I/O Function Count Too High
SW	12	Wait (Asleep)
SQA	13	Queued for Access (To RBBAT)
SQR	14	Queued for Dynamic Resource
SQRO	15	Queued for Dynamic Resource Out of Core
STI	16	Terminal Inputting
STIO	17	Terminal Inputting Out of Core
SQFI	18	Queued for Real Time Interrupt
SNULL	19	Empty User Slot


SCHEDULER EVENTS

<u>STATE</u>	<u>#</u>	<u>MEANING</u>
E:IIP	0	I/O in Progress
E:QMF, E:IP	1	Queue for Master Function Count Too High
E:CRD	2	Terminal Read
E:CIC	3	Terminal Input Complete
E:CBL	5	Terminal Output Block
E:CUB	6	Terminal Output Unblock
E:CBK	8	User Hit Break
E:CEC	A	User Hit Control-Y
E:ERR	C	User to be Errored
E:ABRT, E:OFF	E	User to be Aborted
E:WU	10	Wake Up Sleeping User
E:SL	12	Begin Wait (Sleep)
E:QA	13	Queue for Access to RBBAT
E:ART	14	Activate Real Time User
E:UQA	16	Unqueue for Access
E:KO	18	Kick Out of Core
E:AP, E:NC	1A	Associate Shared Processor, Need Core Page
E:QE	1B	Quantum End
E:IC	1C	I/O Complete
E:QFI	1D	Queue for Real Time Interrupt
E:NSYMF	1E	No Symbiont File Entries OR RBBAT comm. Buffers
E:SYMF	1F	Symbiont File Entries or RBBAT Comm. Buffers Available
E:NSYMD	20	No Symbiont Disc Space
E:SYMD	21	Symbiont Disc Space Available
E:OCR	22	Open/Close Request
E:NOCR	23	Open/Close Available
E:CFB	24	Need COC Buffer
E:CBA	25	COC Buffer Available
E:ND	26	Need Swapper Page
E:DPA	27	Swapper Page Available
E:QFAC	28	Queue for ALLOCAT
E:UQFAC	29	Unqueue for ALLOCAT
E:NQW	30	ENQ Wait
E:NQR	31	ENQ Release


SCHEDULER/SWAPPER TABLES









First BYTE Contains number of Users in List  
Length = SMAXOUT




First BYTE Contains number of Procs in List  
Length = 2 \*SMAXOUT




Length = SMAXOUT

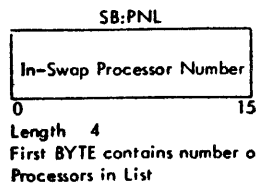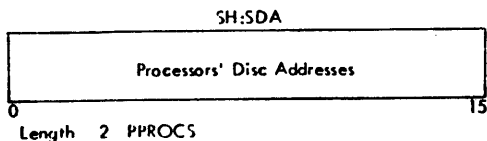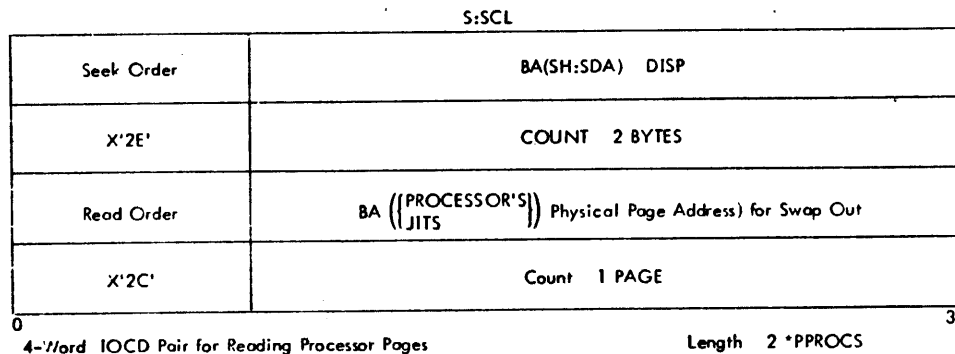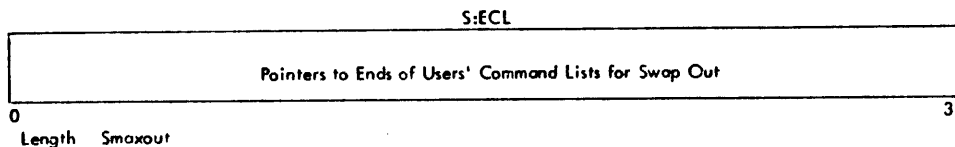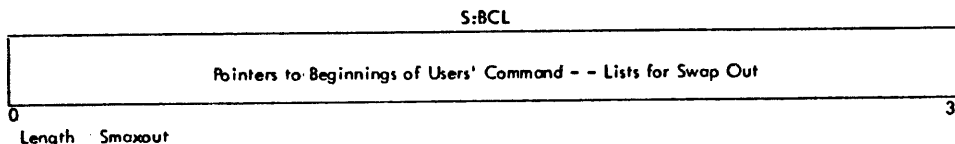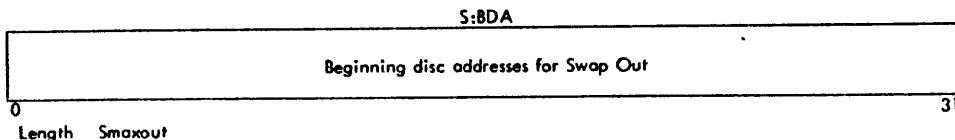

SCHEDULER/STATE TABLES/QUEUES




Queues displaced by state number. They are zero if no User in Queue.



UB:FL and UB:BL are used to Link Users in Queue.

S:BADFLG is a one-word cell designed to indicate if any real-time activity has occurred. This will be displayed permanently by ANLZ.

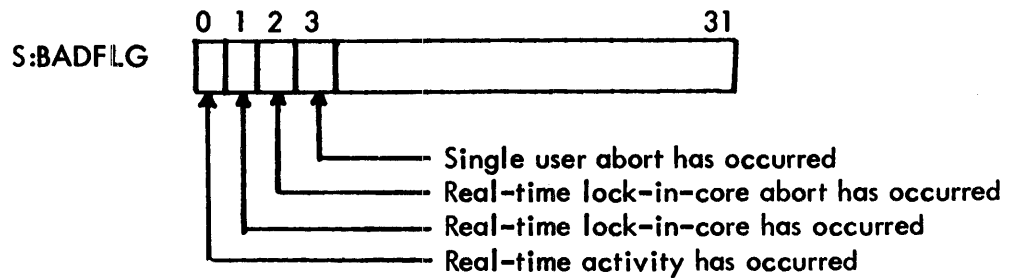

- S:IRPINC            Cell containing I/O complete priority increment. Default = 4.
- S:IOPINC           Cell containing I/O complete priority increment. Default = 3.
- S:CPINC            Cell containing special compute priority increment. Default = 1.
- SB:RQ              Byte table containing user number for head of resource subqueue - indexed by resource number which is the integer part of (E:BLK or E:REL)/2. Users in a subqueue are linked through U:MISC. Major queue for a user in any dynamic resource subqueue will be SQR or SQRO.
  
- S:CUP               Cell, current user's priority. Set to X'FF' when idle.
- S:PRIODEC          Cell, priority decrement to be applied when interrupting a user for a high-priority user. Applied to UB:PRIO.
  
- S:RTIR              Cell, real-time user in and ready flag.
- SB:HQ/SB:TQ        Initialized to have SNULL point to chain of empty user slots.

USER TABLES

UB:DB  
Proc. # of Debugger  
if any  
(indexed by user #)  
0 7

UB:OV  
Proc. # of Mon. Overlay  
Required by user  
(indexed by user #)  
0 7

UB:US  
User State #  
(indexed by user #)  
0 7

UB:FL  
FLINK in state queue  
(0 TOP)  
(indexed by user #)  
0 7

UB:BL  
Blink in state queue  
(0 if Bottom)  
(indexed by user #)  
0 7

UX:JIT  
Physical Page # of JIT  
(if in Core)  
(indexed by user #)  
0 7/15

UB:MF  
# Outstanding  
I/O Operations  
0 7

UB:ASP  
PROC # of special pro-  
cessor except TEL or CCI  
(indexed by user #)  
0 7

UB:PRIO-\*IA  
Current user  
Execution priority  
0 7

UB:PRIOB-\*IA  
User Base Execution  
Priority  
0 7

UB:APO  
Associated Processor  
Overlay  
(by user #)  
0 7

UB:APR  
Processor Number  
or Proc. Overlay  
(by user #)  
0 7

UB:NECB  
Total # of ECB's yet  
to be posted  
0 7

UH:WL-\*IA  
Pointer to head of list of  
ECB's to be posted before re-scheduling  
0 15

UB:SWAPI  
Index to Swap  
device for user  
0 7

UB:C#  
User cylinder #  
0 7

UB:PCT  
User Page Count  
(by user #)  
0 7

UB:ACP  
Proc. # of  
Command Processor  
0 7

U:MISC (indexed by user number)

Sleep Time (No. TICS)		State SW
Quantum Time at Last Schedule		State SQR
Resource No.	SUBQUEUE LNK	State SCU
0 7	24 31	

U:P# (Disk Pack Swapper Only)

Proc # of processors outswapped with user (by user #)  
0 31

UH:JIT  
Users JIT Disc Address, Zero if no JIT  
(by user #)  
0 15


UH:AJIT  
Users Additional JIT Disc Address if any  
(by user #)  
0 15

Length of all these tables is SMUIS+1  
SMUIS = Maximum number of users in system (parameter).  
\*IA = Interrupt Altered  
NOTE: SMUIS =  
MAXG+MAXB+MAXOL  
specified by user in  
PASS2


CP-V TECHNICAL MANUAL

Added User Tables


UB:MPFLG - exists only if NSCPU > 0

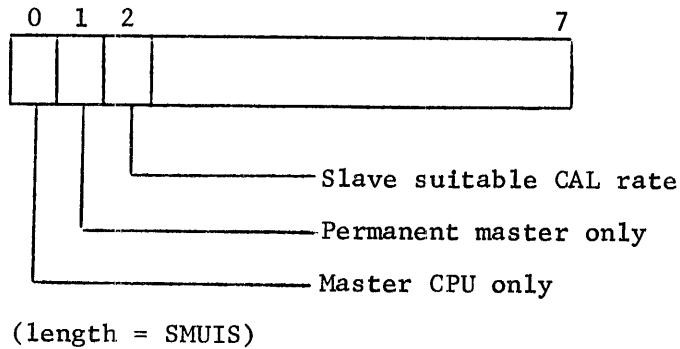

UB:CALR - exists only if NSCPU > 0




U:CALC - exists if NSCPU > 0



CP-V TECHNICAL MANUAL


SECTION VD  
Page 3  
10/31/74

UH:FLG




<u>Bit</u>	<u>Meaning if Set</u>
0	Bypass, available core too small now
1	STEP in progress or unblock received before block
2	Initial DCBs being swapped in
3	Special JIT access
4	Initialization must be done
5	DELTA is associated
6	JIT is in core
7	Job is batch
8	TEL in control (or CCI, other CP)
9	DELTA in control
10	Interactive user
11	Pure procedure must be swapped
12	OPNCLS user
13	:ACCTLG or :USERS open
14	Intentry inhibit (real time)
15	Ready to run

UH:FLG2 - \*IA



<u>Bit</u>	<u>Meaning if Set</u>
0	Unused
1	Command processor break
2	Lock in core for RMA (Gentle)
3	COC event for transaction processing
4	Real time lock in core (absolute)
5	System ghost locked out (real time lock in core)
6	Interrupted during a CAL
7	Transaction processing function
8	Concurrent output mode (keyin) - Special Systems
9	Suspended for reconnection - Special Systems
10	COC line hang-up
11	Just swapped in
12	Swap Quantum not satisfied
13	User swap error
14	Context swap error
15	JIT swap error

UH:DL - \*IA




<u>Bit</u>	<u>Meaning if Set</u>
0	Job is to be aborted
1	Job is to be errored
2	Control-Y received
3	Break received
4 - 15	Doubleword address of DO list



Common Multiprocessor Control Tables


SB:INIT - preserved over recovery

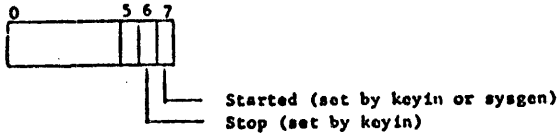


SB:MINT \*




SB:MPSW



SB:PFLG




SB:RCVA




SB:RCVR



SB:SFLG




SB:STATE




- 0 - not active = stopped
- 1 - INIT+IDLE
- 2 - user in progress


SH:MINQ



SH:MAXQ




SX:SPP




Byte if :BIG=0.

S:ADR




S:CLAIM



- 0 < CLAIMED
- 0 ≥ AVAILABLE

S:PCUN



\* MPIPI - value def specifying presence of interprocessor interrupt pair. Controls interpretation of SB:MINT.

NPCPU - value def declaring number of CPUs which exist other than master.

1. All tables are NSCPU+1 long.
2. Entry 0 is master CPU.
3. Index by processor no. (software).

FB:FLT

0 7  
FAULT TYPE  
INDEX

FB:EPLG

0 7  
Error log buffer  
full flag

FB:SCRCH

0 15  
SCREECH CODE

F:ZADDR

0 31  
Real address of error log buffer for  
slave CPU fault

Special Multi-Processing Cells

SL:BSTRT

0 31  
AUTO START INHIBIT

0 -> permit auto start at boot/reboot.  
1 -> inhibit auto start at boot/reboot.

S:SSCRCH

0 31  
SLAVE INITIATED SCREECH CODE

Non-zero => SCREECH

S:MPKYN

0 31  
MOOSE RE-ENTRANCY COUNTER  
(Inc by KEYIN)

S:MPDISP

0 31  
FLAG SET BY KEYIN TO TRIGGER  
MOOSE DISPLAY

S:STOUT

0 31  
TIME OUT VALUE WHEN WAITING FOR  
RECOVERY ACKNOWLEDGE

Special Cells - Processor Private


XPSD receivers for the following traps and interrupts are contained in each processors' private page:

NOPPSD	Trap X'40', non-allowed operation	CAL4PSD	Trap X'48', Call 4
UNIMPSD	Trap X'41', unimplemented instruction	IPT47	Trap X'47', interprocessor trap (X560)
STKLPSD	Trap X'42', stack limit trap	PSD\$T46	Trap X'46', watchdog timer
FIXOVPSD	Trap X'43', fixed point arithmetic	PSD\$T4C	Trap X'4C', parity error
FLTFFPSD	Trap X'44', floating point arithmetic	PSD\$T4D	Trap X'4D', instruction exception
DECPSPD	Trap X'45', decimal fault	PSD\$I57	Interrupt X'57'
CAL1PSD	Trap X'48', Call 1	FFSR46PSD	Trap X'46', receiver during power fail safe
CAL2PSD	Trap X'49', Call 2	POWROFF	Interrupt/Trap X'51' power off
CAL3PSD	Trap X'4A', Call 3		

The following XPSD receivers for miscellaneous purposes are also located in the private page:

CTRAPSD	Transfer to central trap handler
RCVPSD	Entry to recovery/T:SCREECHS
BLKPSD	Block user on slave CPU

S:PNO




This cell exists in VPXPSDT, the CPU private page, and hence is unique for each processor. Master is processor 0. Slave numbers are set by MOOSE.

S:CLOCK4





Clock 4, the subjective counter, will tick indirect this cell.

S:REGS




Trap handler temp for register save

S:INTBIT

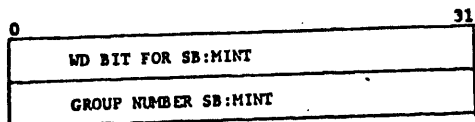


} Doubleword  
Aligned

S:CUN




FULLE1

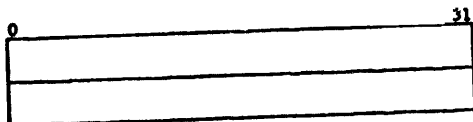


Doubleword temp for T:FULLE and entry.

TEMP\$REG




Temp cell for use while acquiring last branch register.

TEMP  
TEMP1  
TEMP2

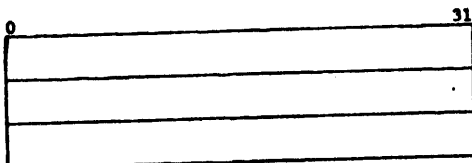


Doubleword aligned temp block for general miscellaneous use.

FFSR5W




Sense switch settings at power fail safe.

BALANCE




Balance counter for power fail safe.

OFFCINTER



Count of power off interrupts.

ONCINTER




Count of power on interrupts.

NFRST




Flag for multiple power off interrupts.

FD:PSD




PSD at time of slave CPU fault.

F:REGS  
SREG1

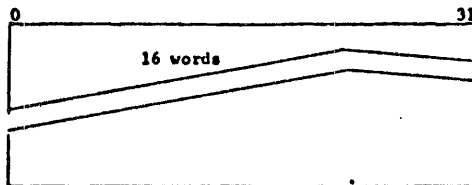

Register block one at FFSR or registers at CPU fault.

FB:CF




Condition codes and floating mode bits at hardware fault.

FB:END




End action driver for CPU fault handler.

F:TEMP1



Fault handler temp cell.

F:TEMP2



Fault handler temp cell.

		0		31	
F:ELCGB	0		CODE		
	1		TIME		
FD:EPSD	2		PSD		
	3		PSD		
	4				RESERVED
	5				
FH:IFLG	6		CCS AND FLAGS		
F:IREAL	7		REAL ADDR OF TRAPPED INST		
F:INST	8		TRAPPED INST		
F:EVIRT	9		ANLZ CC AND VIRTUAL ADDR		
F:REAL	A		REAL EFFECTIVE ADDR		

Error log buffer for slave fault handlers.

Multi-Processing Performance Monitor Cells

C:SIDLE

0	31
SLAVE 1 IDLE	
SLAVE 2 IDLE	
SLAVE 3 IDLE	

C:SUSER

0	31
SLAVE 1 COMPUTE	
SLAVE 2 COMPUTE	
SLAVE 3 COMPUTE	

C:SCHED

0	31
# OF SCHEDULES FOR MASTER	
# OF SCHEDULES FOR SLAVE 1	
SLAVE 2	
SLAVE 3	

Multiprocessing Sysgen Built Tables

If no :SCPU command is detected, PASS2 builds a dummy command.  
From this command the load module STABLES is built. This module  
contains the following tables and absolute DEFs.

Absolute DEFs

NSCPU = # of slave CPUs (from NSCPU)\*  
MPIPI = 1 if MPIPI specified  
      = 0 if MPIPI not specified

\* These are the only entries in STABLES if a non-multi-processing  
system, i.e., NSCPU = 0, MPIPI = 0, S:ADR is a word long.

Tables

<u>name</u>	<u>entry size</u>	<u>length</u>	<u>contents</u>
S:PCUN	wd	NSCPU+1	0
SB:MPSW	byte	NSCPU+1	0
SB:PFLG	byte	NSCPU+1	0
SX:SFP	byte/hw	NSCPU+1	0
	depending on :BIG		
SB:STATE	byte	NSCPU+1	0
SB:INIT	byte	NSCPU+1	bit 7 = 1 if AUTO specified for entry
S:CLAIM	word	NSCPU+1	0
SB:MINT	byte	NSCPU+1	INTS value specified for entry
SH:MINQ	hw	NSCPU+1	MINQ/2 for entry
SH:MAXQ	hw	NSCPU+1	MAXQ/2 for entry
S:ADR	word	NSCPU+1	0
SB:SFLG	byte	NSCPU+1	0
SB:RCVR	byte	NSCPU+1	0
SB:RCVA	byte	NSCPU+1	0
SL:BSTRT	wd	1	1 if NOAUTO specified
S:MPKYN	wd	1	0
S:MPDISP	wd	1	0
SL:MPCALR	wd	1	10
S:STOUT	wd	1	3000
FB:FLT	byte	NSCPU+1	0
F:EADDR	word	NSCPU+1	0
FB:EFLG	byte	NSCPU+1	0
F:PFSR	word	1	0
FH:SCRCH	halfword	NSCPU+1	0



Tables Displaced by Processor Number (Located in M:SPROCS)

P: NAME  
 \_\_\_\_\_  
 PROCESSOR ROOT OR OVERLAY NAME IN TEXTC FORMAT  
 0 31 32 63

PB: LNK* Proc. # of next overlay 0 7	PX: HPP** Head of physical page chain 0 7/15	PX: TPP Tail of physical page chain 0 7/15	PB: UC No. of users in core using processor 0 7
--	--	--	---

PB: PSZ No. of pages of pure procedure 0 7	PB: DSZ No. of pages of Data 0 7	PB: DCBSZ No. of pages of DCBs 0 7	PB: PVA Virtual page No. of first proc. page 0 7
--	--	--	--

0 1 2 3 4 5 6 7 8	P: SA 15 31
± J S D P M T B G C	Processor Start Address

- Processor was loaded with CORELIB option.
- Processor is allowed maximum memory.
- Processor is a public library.
- Processor is a debugger.
- Processor is special shared processor.
- Allowed to alter JIT

\* Zero is none.  
 \*\* Zero if not in core.  
 \*\*\* Disk Pack Swapping Systems only.

PB: REP No. of users associated with Processor 0 7	PB: HVA Virtual page No. of first page not used 0 7
--	---

PB: C#*** Cylinder Number of Procedure 0 7	PB: DC#*** Cylinder Number of Data 0 7
--	--

PH: PDA  
 \_\_\_\_\_  
 Disk address of first page of procedure  
 0 15

PH: DDA  
 \_\_\_\_\_  
 Disk address of first page of data & DCBs  
 0 15

P: TCB  
 \_\_\_\_\_  
 Processors TCB address (zero implies none)  
 0 31

PH: FRQ  
 \_\_\_\_\_  
 0 15


PB: LCT  
 \_\_\_\_\_  
 # of users associated that are real-time locked in core  
 0 7

P: AC  
 \_\_\_\_\_  
 Access codes for top 16 virtual pages (special processor area)  
 0 31 32 63

PBT: LOCK  
 \_\_\_\_\_  
 Processor locked in core bit table - length = (PNAMEND + 31)/32 words  
 0 31 32 63

1 bit/processor - indexed (from left) by processor number.




± T - Teletype Command Processor  
 B - Batch Command Processor  
 G - Ghost Command Processor

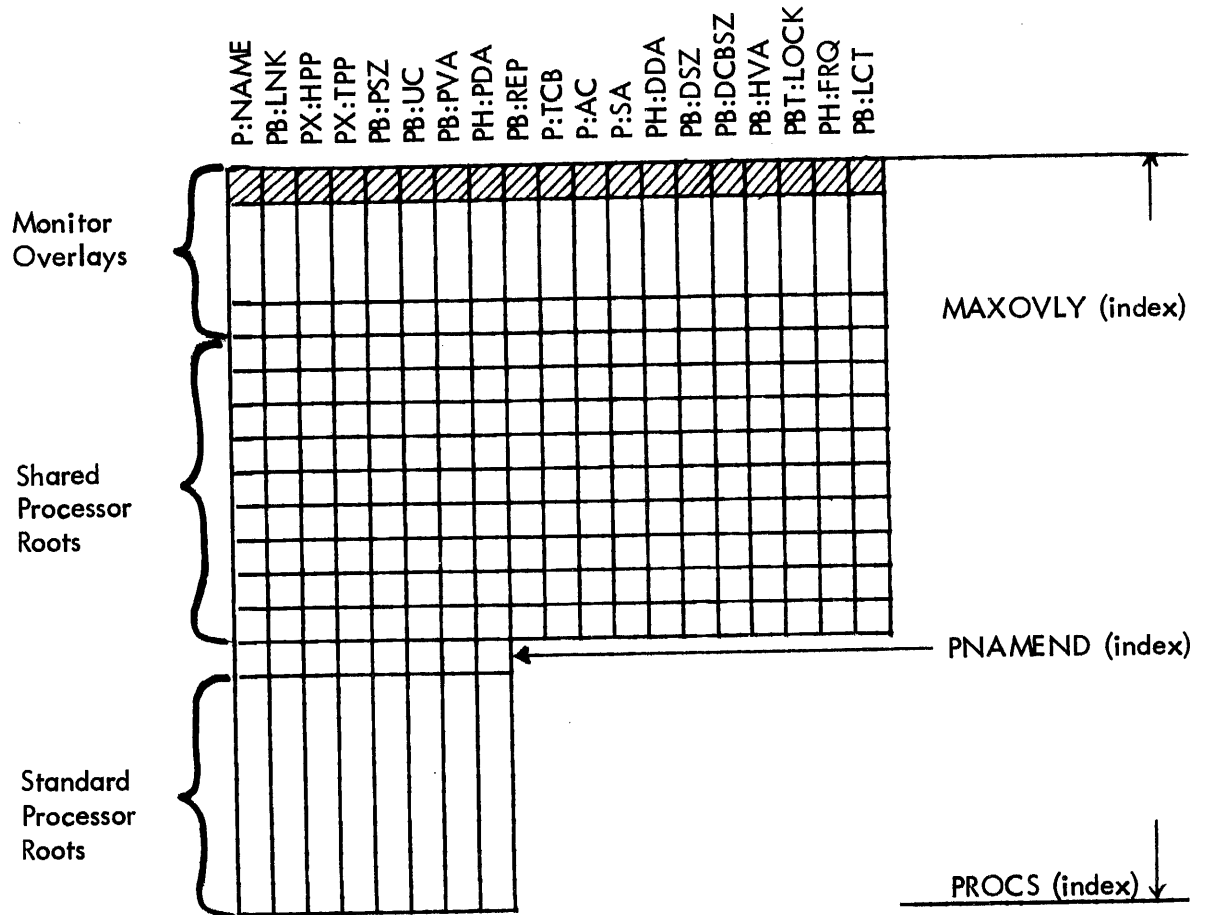


- MAXOLVY     number of monitor overlays plus one (plus one because entry 0 in processor tables is not used)
- SPSIZE       total number of spare pages required for one shared processor (a PASS2 parameter)
- PNAMEND     index number plus one of last shared processor root entry
- PPROCS      index number plus one of last shared processor overlay entry

GHOST JOB TABLES-Interrupt Altered


MAXG - Maximum number of Ghost Jobs

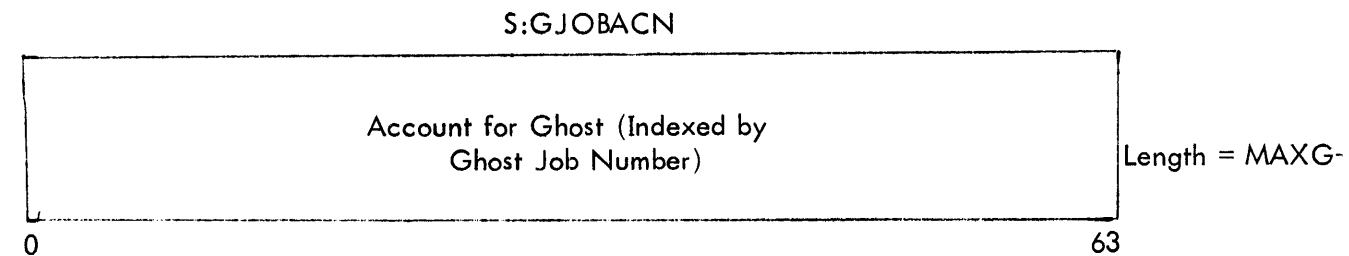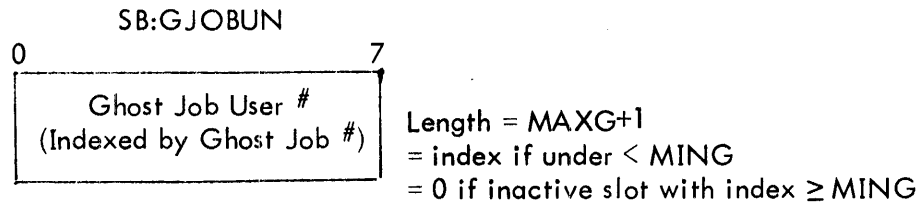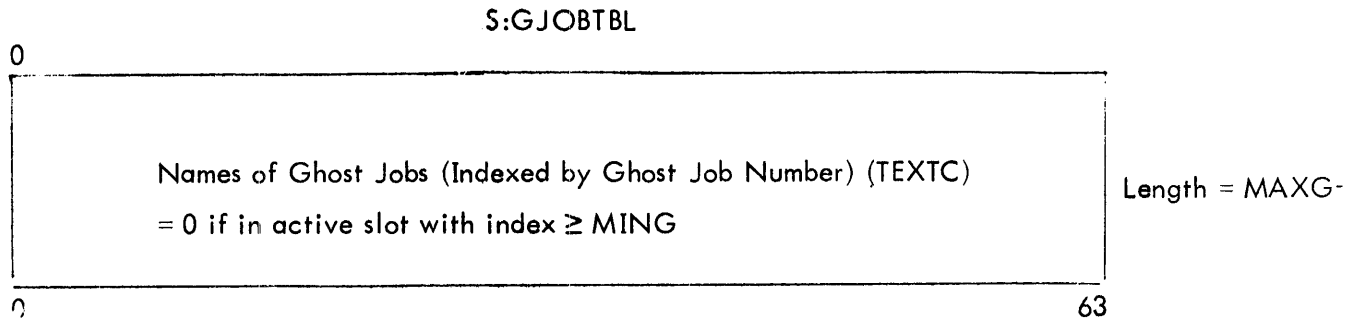


ON-LINE MEMORY POINTERS

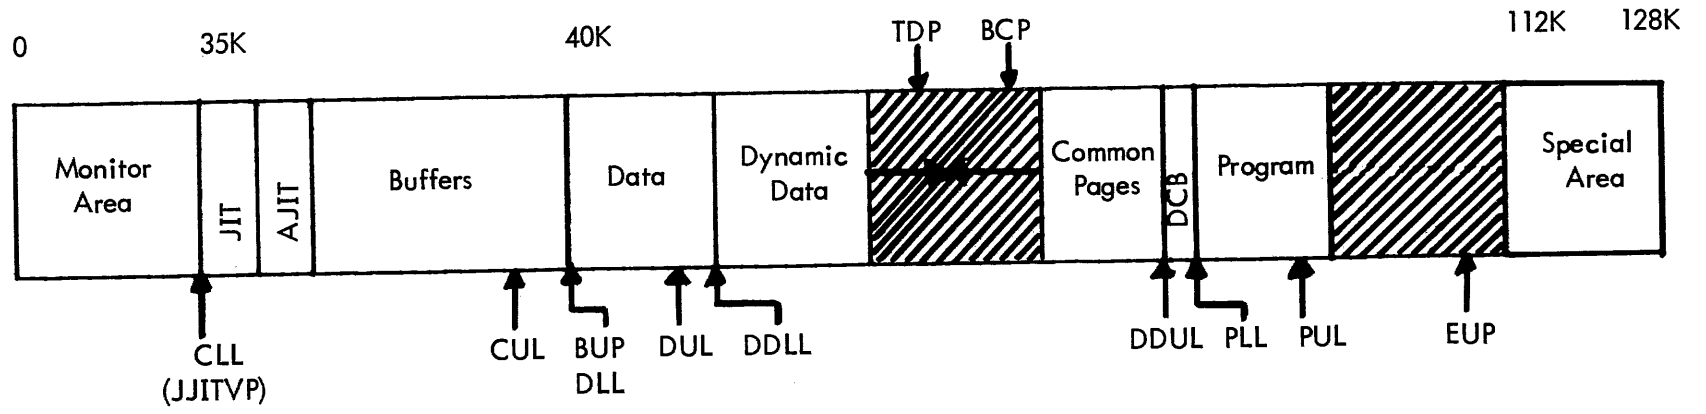


BATCH MEMORY POINTERS

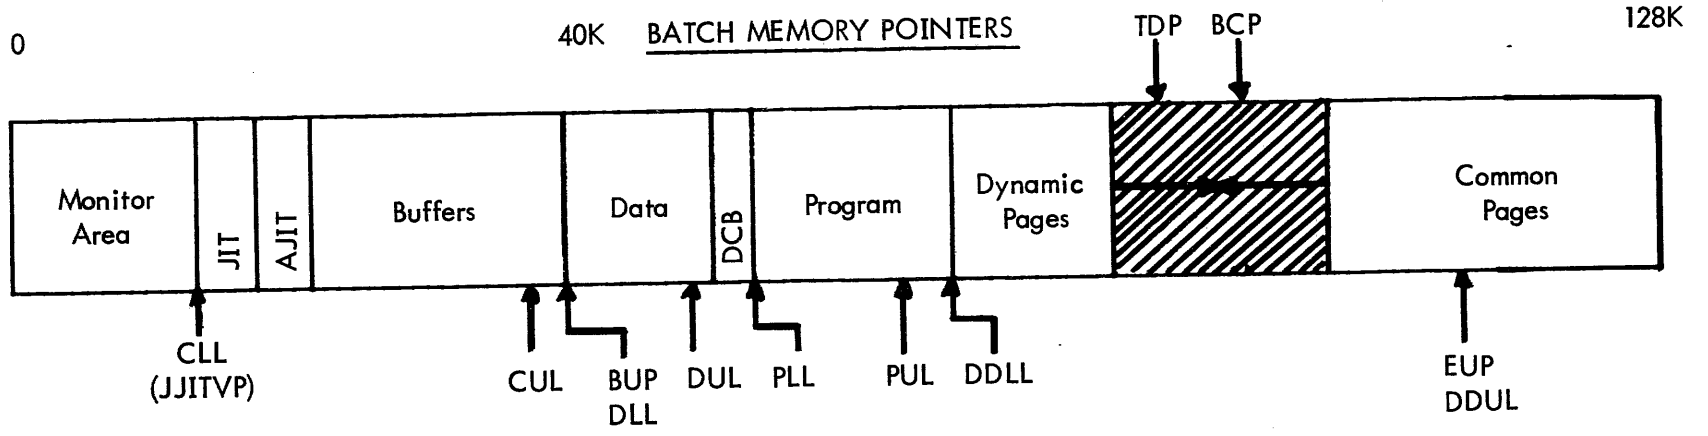


CP-V TECHNICAL MANUAL

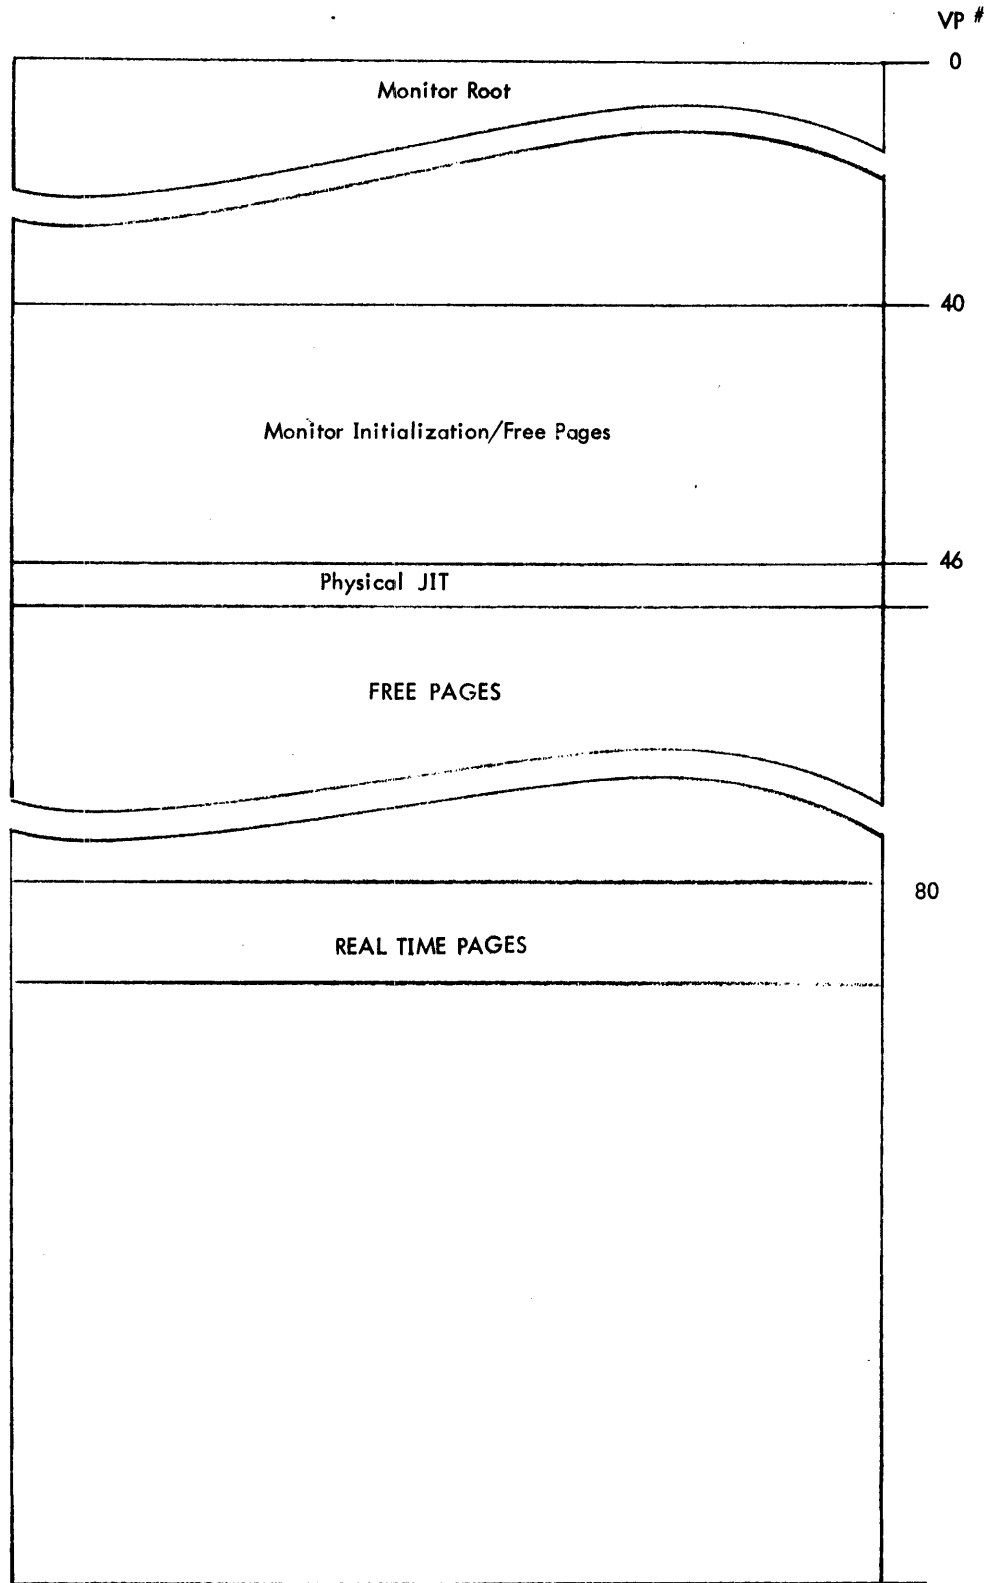


CP-V Buffer Linking

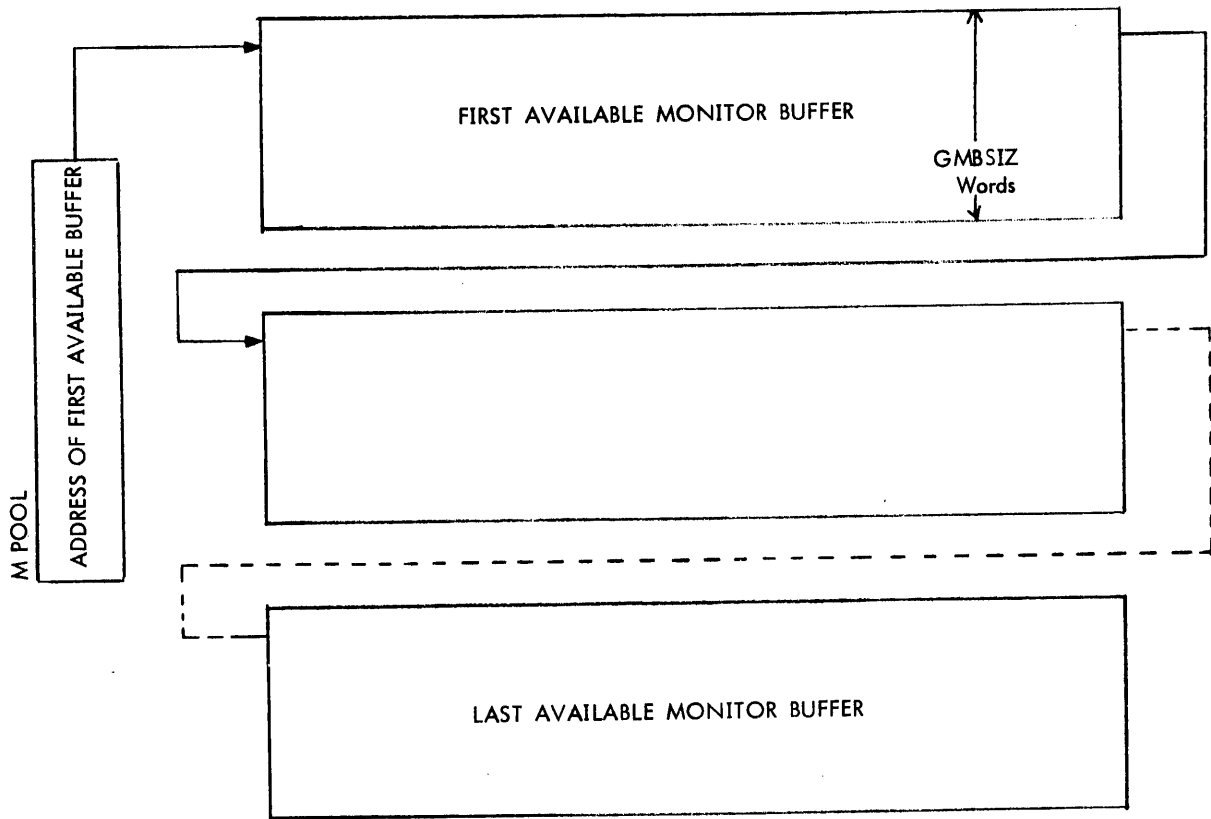

SYSTEM LAYOUT ON RAD

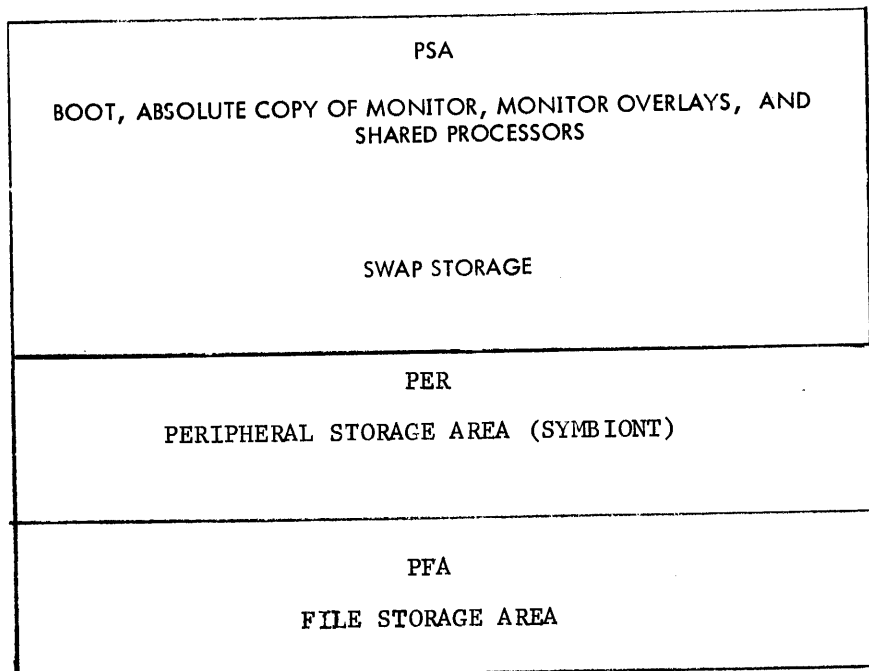

SWAP STORAGE LAYOUT

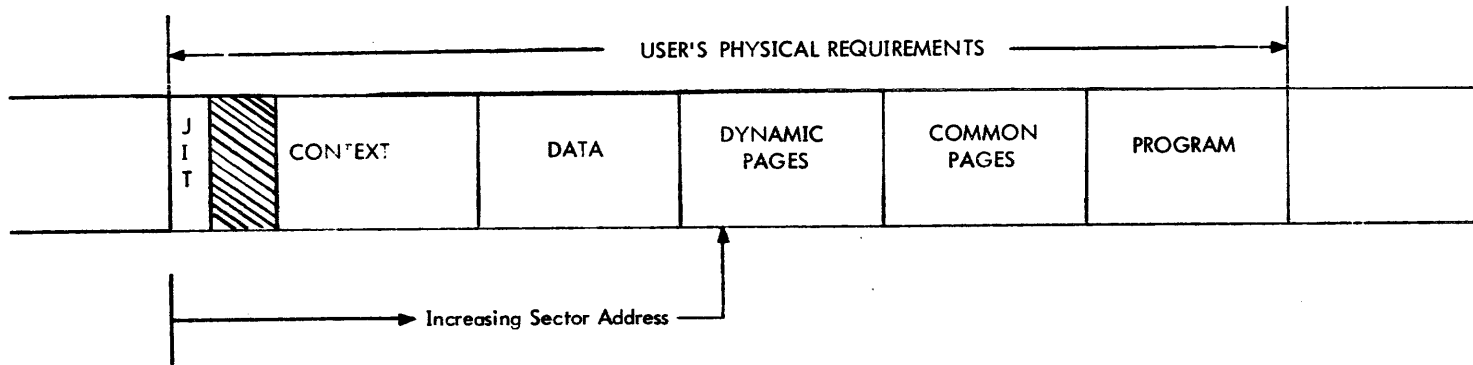

The disc address of JIT is always maintained in core. The JIT page contains the disc address of the remaining portions of the user's program. The shaded area represents a sufficient number of sector times to allow for initializing the command chains.

10/31/74


SWAPPING RAD GRANULE TABLE

M:SGP is a word table containing pointers to the swapping granule table for each RAD swap device.

There are four types of granule tables:


Type	RAD	PSA (Hex)	PSA	
0	7212	0	PSA	40
1	7232	0	PSA	80
2	7232	81	PSA	100
3	7232	101	PSA	200
4	3214	0	PSA	80
5	3214	81	PSA	100

Vertical words are granule positions. Horizontal is track or band number. In each word tracks go from R to L. If bit is set, this granule is available.




Swapping Granule Table

PSA RAD TYPE 0

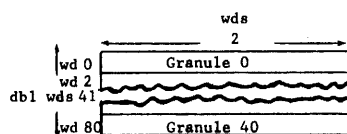


Type 0

PSA RAD TYPE 1

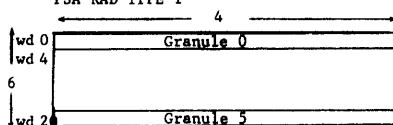


Type 1

PSD RAD TYPE 2




Type 2

PSA RAD TYPE 3




Type 3

PSA RAD TYPE 4

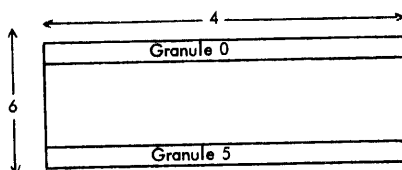

Type 4

PSA RAD TYPE 5

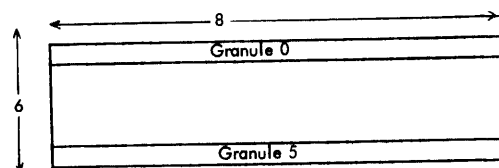

Type 5




4.3

Name	Value							Description
	PSA Type	0	1	2	3	4	5	
MB:GAM1		63	7	7	7	7	7	Granule address mask.
MB:GAM2		1	3	7	15	3	7	Mask to extract #SGP words/granule.
MB:GAM3		-1	-2	-3	-4	-2	-3	Shift count to convert SGP index to granule#.
MB:GAM4		6	3	3	3	3	3	Shift count to form track address.
MB:GAM5		7	-4	-4	-4	-4	-4	Shift count to obtain track address.
MB:GAM6		127	15	15	15	15	15	Sector address mask.
MB:GAM7		0	0	0	0	16	16	Low order track bit.
MB:GPT		41	6	6	6	6	6	# Granules per track.
MB:SPT		82	12	12	12	12	12	#Sectors per track.
MB:SWAPS		0	1	2	3	1	2	Shift count to obtain SGP index from granule#.
MB:DWT		41	12	24	48	12	24	SGP size in doublewords.
MB:SPACEJIT		7	1	1	1	1	1	Granule increment to space JITs around RAD.
M:GATLIM		63	127	255	511	127	255	Highest valid track number.
M:GASLIM		80	10	10	10	10	10	Highest valid sector number.
M:ADRINCR		46	4	4	4	5	5	Increment to add to last sector to get first sector on next track.

- Note: 1. Swapper related tables contain an entry for each swap device. The total number of entries is defined by LSWAP+1.
2. The user table, UB:SWAPI, contains the index into the swap tables.


M:CLBGN	Beginning of swap command list.
M:FREE#GRAN	Number of available granules.
M:HLTIC	TIC to be inserted at end of command list.
M:JITPAGE	Granule position for next JIT.
M:SGP	Address of SGP table.
M:SNSDA	Buffer for sense information.
M:SWAPD	Device address.
M:SWPEND	Highest possible PSA seek address.
M:WCKBCL	Beginning of command list for write check.
M:WCKECL	End of command list for write check.
MB:SDI	Swapper DCT index.
MB:SFC	Swapper function code.
MB:#RTRY	Number of remaining retries.
MH:CLEND	End of swap command list.

CP-V TECHNICAL MANUAL  
 MEMORY AND STOLEN PAGE DATA

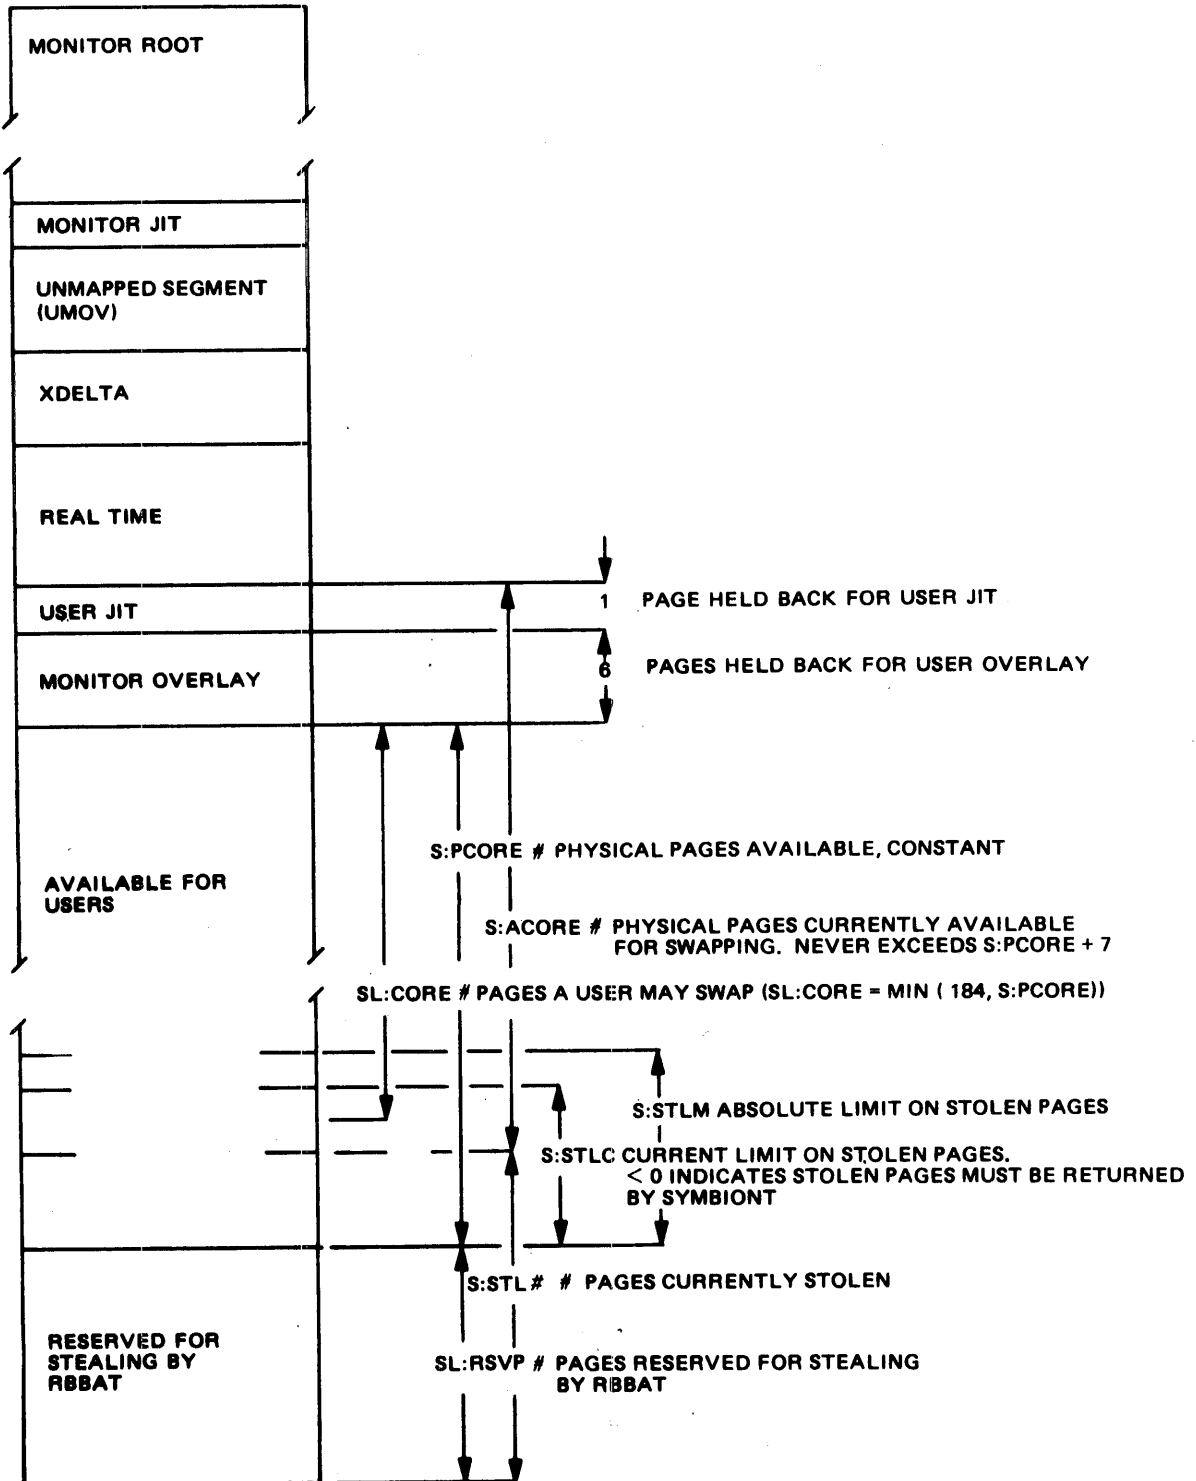

CP-V TECHNICAL MANUAL


(This page intentionally left blank.)

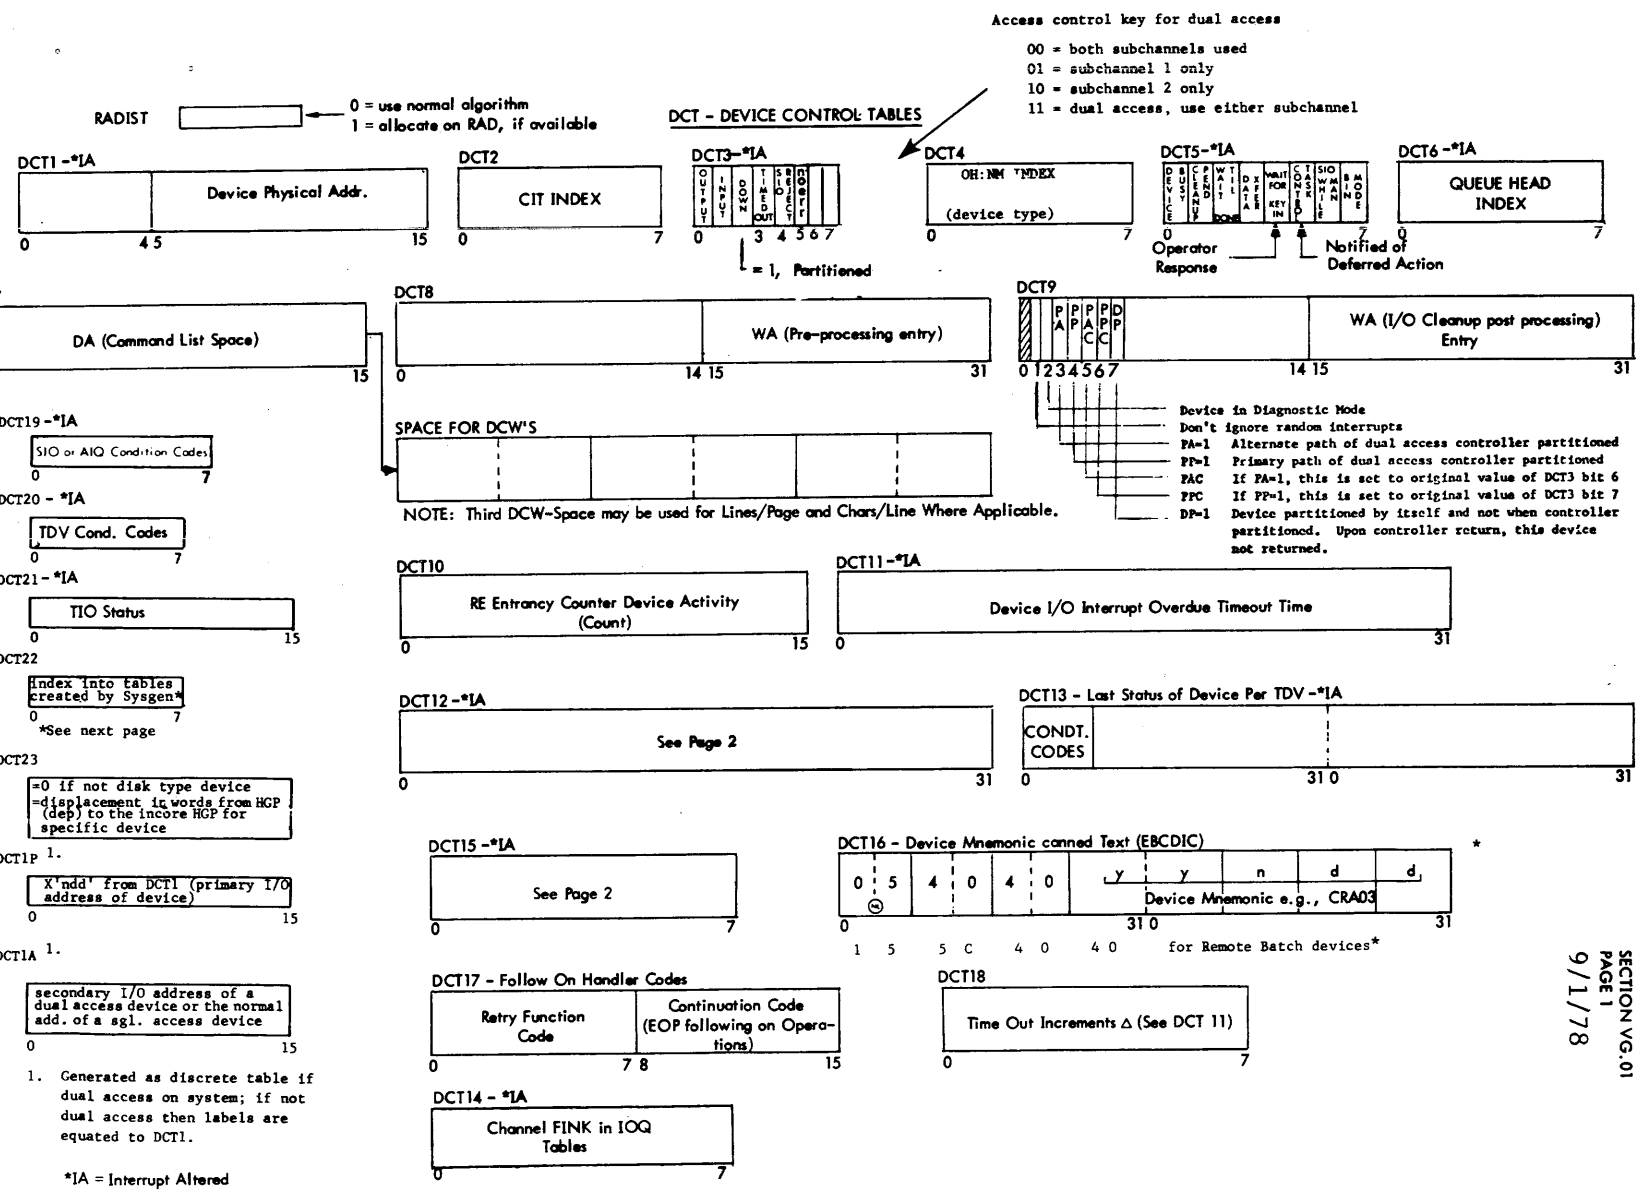


45

DCT Tables

DCT15 - \*IA




if DCT5 indicates "DEVICE BUSY"




if DCT5 does not indicate "DEVICE BUSY"

0 implies monitor I/O permissible  
 ≠ 0 implies this is the user number of real-time user who may issue M:IOEX requests

DCT12 - \*IA



if DCT15 = 0

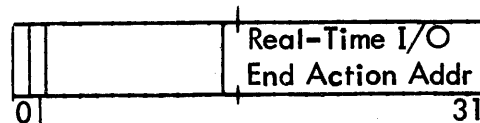


if DCT15 ≠ 0

— set if device was pre-empted via a DCB call to STOPIO  
 — set if real-time I/O is currently active (i. e. interrupt pending)


DCT24 - \*IA - RMA TABLE

- Byte table
- Parallel to DCT1
- Entry contains:

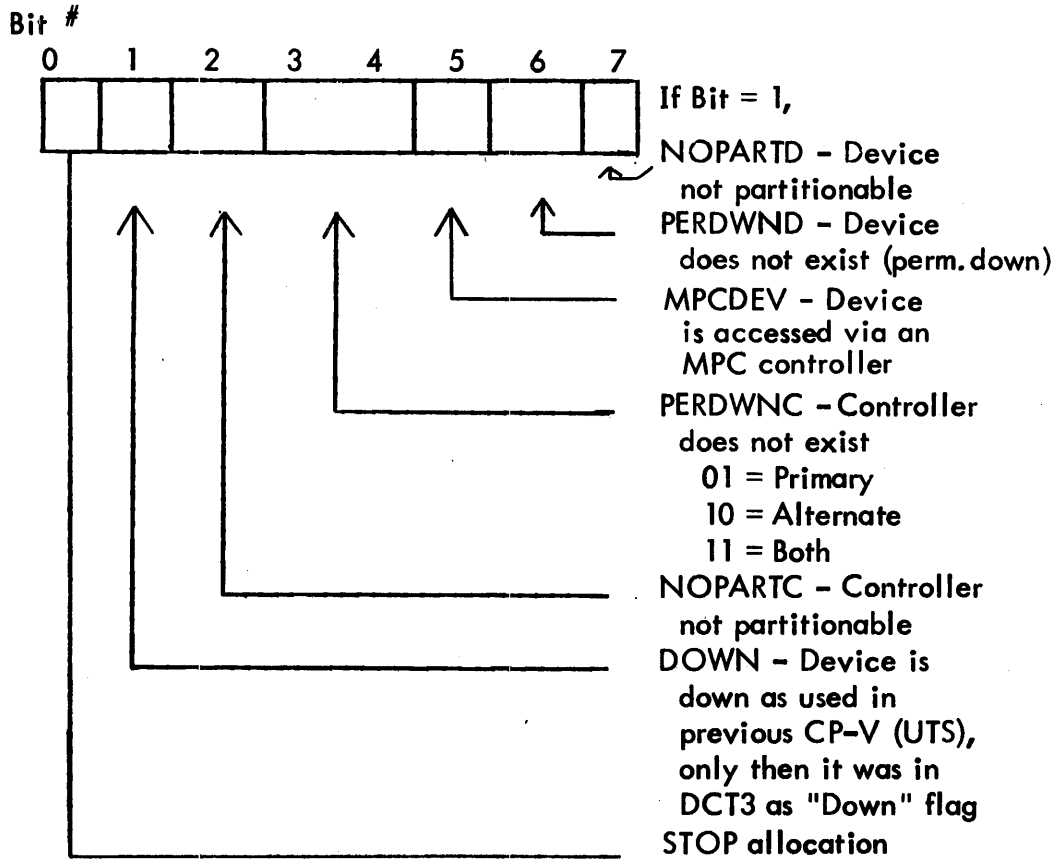

DCT25


DCT26 (RESERVED)

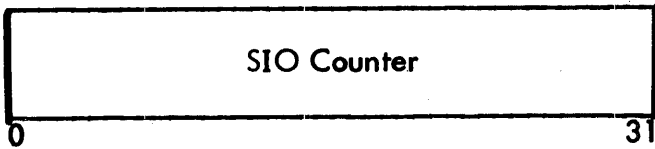

DCT27



DCT28



DCT29



BYTE 0 OF DCT27 HOLDS DCTX OF LAST SIO ISSUED.  
 DCT28 BIT 7 DETERMINES IF DEFERRED IO ALLOWED.  
 DCT28 BIT 6 DETERMINES IF ABNORMAL HIO ALLOWED.

The following tables are indexed by DCT22

Disclims



Largest valid SECTOR ADDRESS + 1

NCYL



Number of cylinders on device. 0 for RADs.

NTPC




Number of tracks/cylinder. For RAD, 1 cylinder assumed.

NSPT



Number of sectors/track

CYL\$SHFT



Shift instruction to position CYL portion of seek address of the form SLS, 9 XX or NOP if not present

TRK\$SHFT



Same as above except for track SLS, 8 XX


SEC\$SHFT



Same as above except for SEC SLS, 7



IOQ - I/O ENQUEUING TABLES

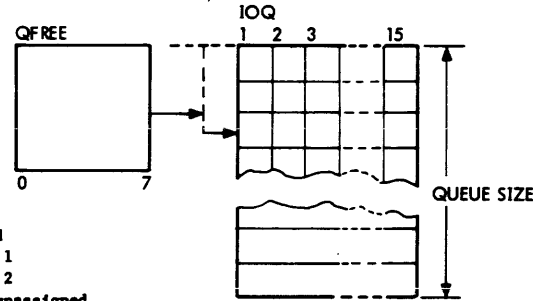

- 000 Both subchannels required
- 001 Restricted to subchannel 1
- 010 Restricted to subchannel 2
- 100 Dual-access, subchannel unassigned

IOQ1-\*IA

Q Chain Back Link 0 Head
0 7

IOQ2-\*IA

Q Chain Fwd Link 0 Tail	→
0 7	

IOQ3 - Status -\*IA

R E Q U E S T Y	O R G A N I Z E D	M A S T E R	U N D E R	F R E E	E R R O R	5	6	7
0	1	2	3	4	5	6	7	

IOQ4 - Software Function Codes -\*IA

Calling Function Code
0 7

IOQ5-\*IA

Current Function Code
0 7

IOQ6-\*IA

Old Software Function Code	WA(Calling DCB) 0	DCB Not Used
0	14 15	31

- Codes: TY: 0 - Read with editing  
 1 - Write  
 2 - Write with device name  
 3 - Read without editing  
 4 - Read with editing recover
- Codes: TY: 5 - Write new/line characters  
 CR: 0 - Read binary  
 2 - Read automatic

IOQ7-\*IA (IOQ8) BA(BUFF)

DCT Index
0 7

- Codes: LP: 3 - Write with format

IOQ8-\*IA

1	0											DA (Data Chain CLIST)	
0	1	X											DA (CLIST+Time Out)
0	0											BA (BUFFER)	
0	1	12 13 14 15 16										31	

X = 1 if channel is to be left "not busy" following SIO

IOQ9-\*IA

# CDW's
TIME OUT A
BA (BUFFER SIZE)
0 15

IOQ10-\*IA

Number of retry requests
0 7

IOQ11-\*IA

Number of retries remaining
0 7

IOQ12-\*IA

TRACK	SECTOR	7231/32, 1201/02/04/05, 7211/12
BAND	SECTOR	
RAD Seek Address & DCTX for Device or OC; or SYMX		
0	7 8 9 11 12	15
31		

Codes (continued):

- CP: 0 - Punch EBCDIC  
 1 - Punch binary

- DC: 0 - Read  
 1 - Write  
 2 - Sense  
 3 - Check write  
 4 - Write with check-write


- 7T, 9T: 0 - Read 9T(7T read packed)  
 1 - Write 9T (7T write packed)  
 2 - Read 7T binary  
 3 - Write 7T binary  
 4 - Back space record

- 7T, 9T: 5 - Fore space record  
 6 - Back space file  
 7 - Fore space file  
 8 - Write tape mark  
 9 - Rewind  
 A - Rewind off-line  
 B - 9T sense  
 C - Read 7T decimal  
 D - Write 7T decimal  
 E - Read recovery 9T (7T packed)  
 F - Write recovery 9T, (7T packed)  
 10 - Read backward 9T  
 11 - Read backward 9T recovery  
 12 - 7T read binary recovery  
 13 - 7T write binary recovery  
 14 - 7T read decimal recovery

- 7T, 9T: 15 - 7T write decimal recovery  
 16 - Read backward 7T packed  
 17 - Read backward 7T binary  
 18 - Read backward 7T decimal


49

IOQ - I/O ENQUEUING TABLES (continued)

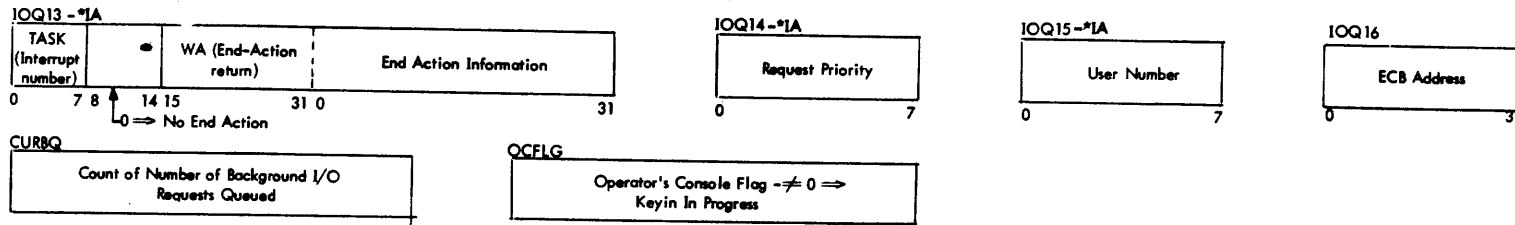

DEVICE OPERATION TABLE (DOT)

DOT - DEVICE OPERATIONS; CIT - CHANNEL QUEUING INFO

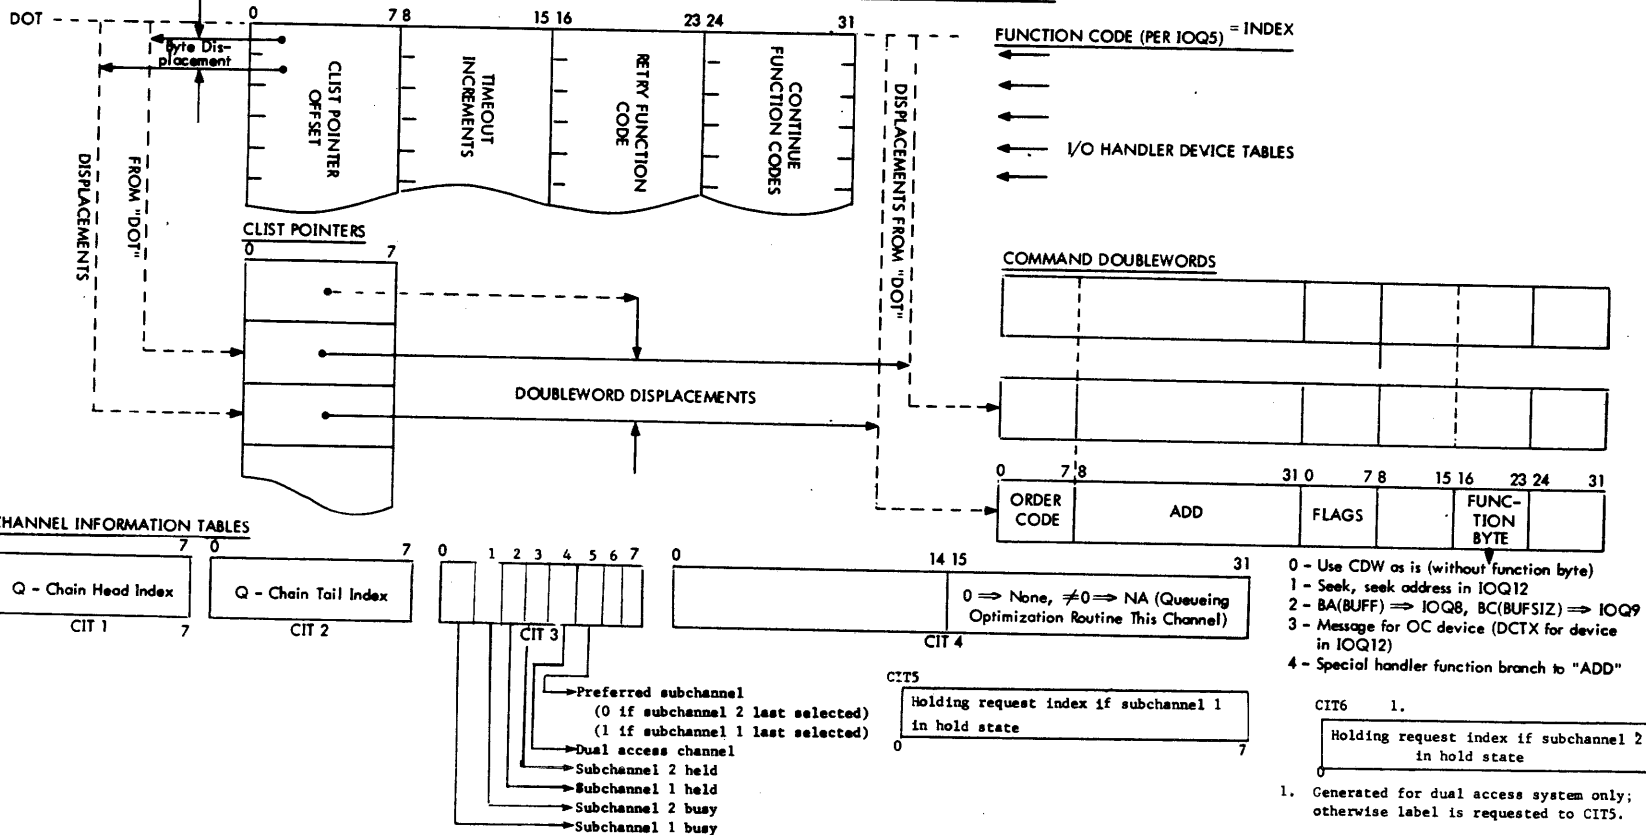

50

Device Type-Class Tables (DTT)


The directing label table exists in three parts.


The first part consists of the device type or mnemonic table, the parallel assignment tables,  $OB:\begin{Bmatrix} B \\ O \\ G \end{Bmatrix} TX$ , and the descriptor tables. If the device appears in the Resource Allocation Table (SH:RNM), then,  $OB:\begin{Bmatrix} B \\ O \\ G \end{Bmatrix} TX$  contains the index into SH:RNM.

If not, the entries will contain either the appropriate DCT index or the logical stream index i SH:LNМ. The TB:SZ, TB:MAX, TB:FLGS, and TB:FLGS1 tables contain descriptors of the physical device attributes. The information is developed from the :DEVICE card in SYSGEN.

The second part consists of operational labels and the assignment table. This information is developed from the :OPLBLT card in SYSGEN.

The third part consists of logical stream names and the default device type to which they apply. This information comes from :LDEV in SYSGEN.

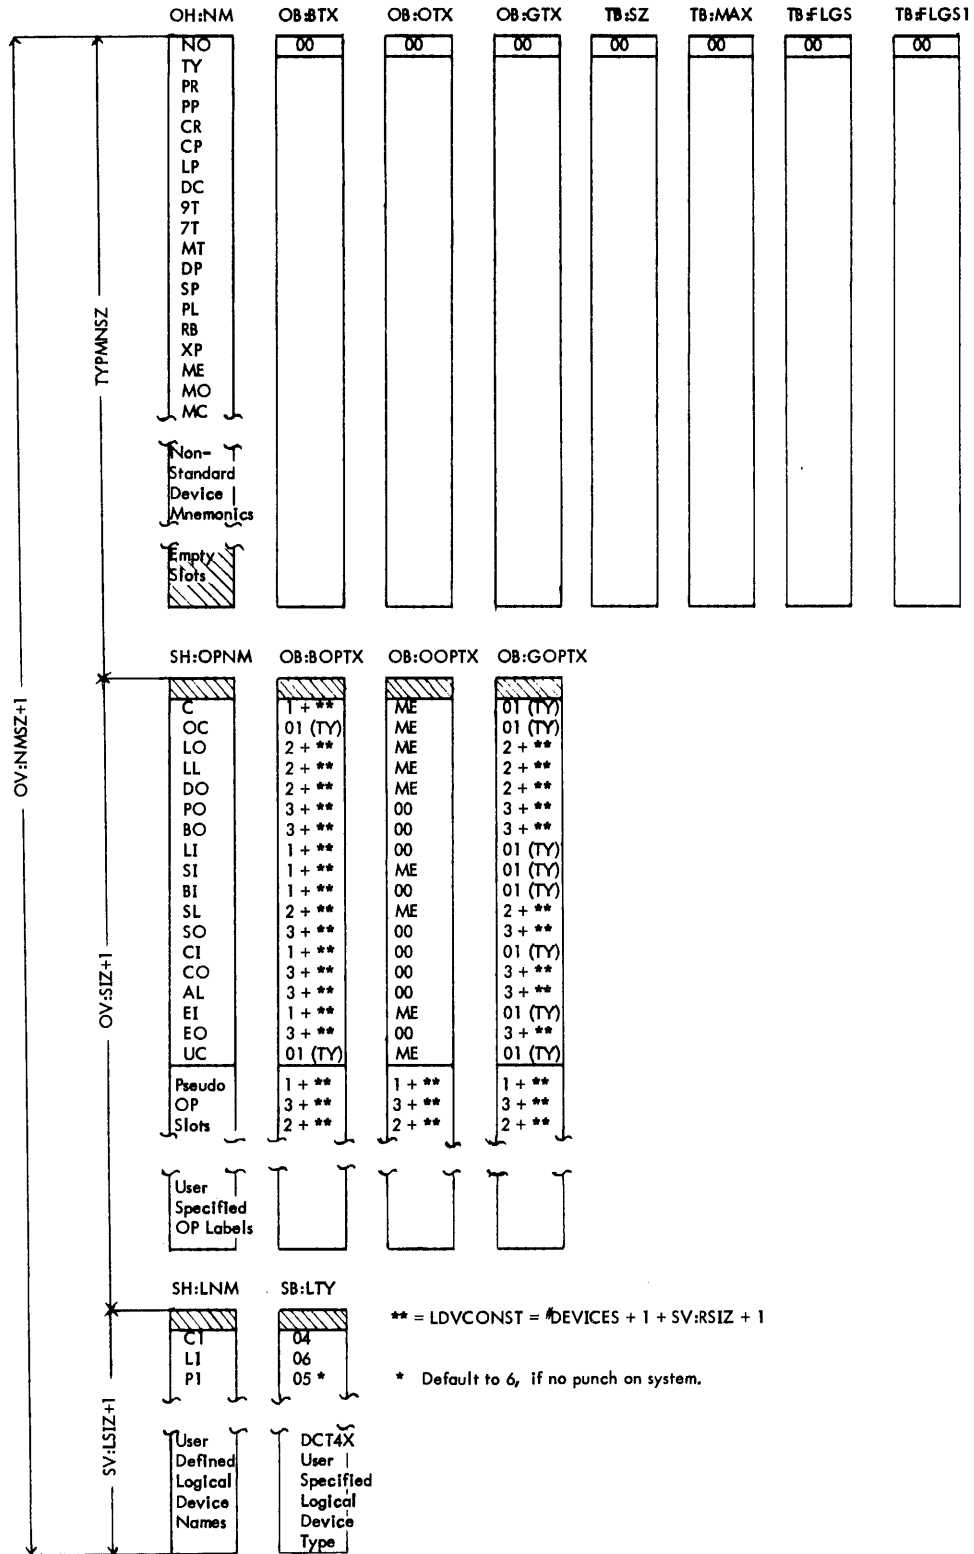

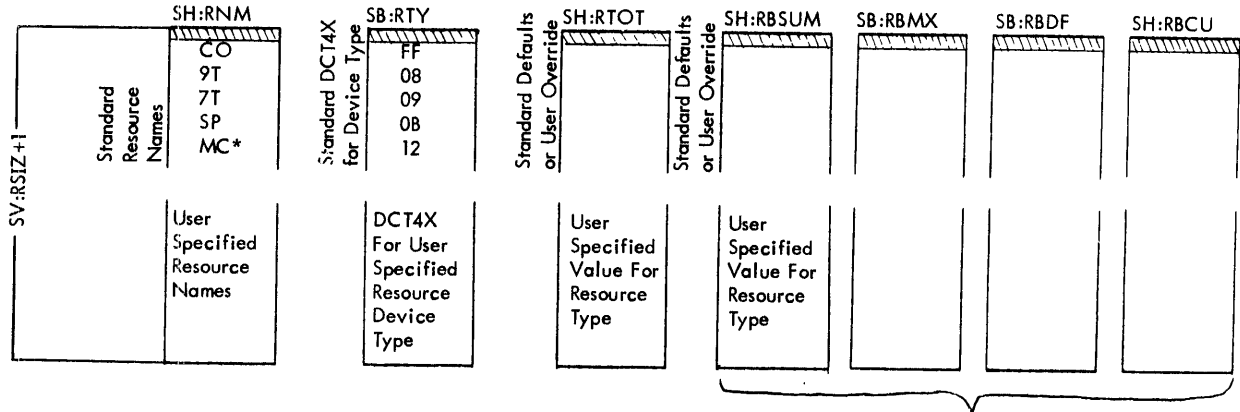

\* If MC is present as a device, it is automatically included in the group of standard resources.

These tables are repeated for on-line and ghost with the 'B' replaced by 'O' or 'G' in each of the table names.

Standard Defaults for these Resource Tables

Standard Resource Table Name	CO (core)	9T (tapes)	7T (tapes)	SP (private disk packs)	MC
SH:RTOT	X'7FFF'	# <sup>1</sup>	#	#	1
SH:RBSUM	X'7FFF'	#	#	#	1
SB:RBMX	X'10'	#	#	#	1
SB:RBDF	X'C'	0	0	0	0
SH:RBCU	0	0	0	0	0
SH:ROSUM	X'7FFF'	#	#	#	1
SB:ROMX	X'10'	#-1 <sup>2</sup>	#-1	#-1	1
SB:RODF	X'C'	0	0	0	0
SH:ROCU	0	0	0	0	0
SH:RGSUM	X'7FFF'	#	#	#	1
SB:RGMX	X'FF'	#-1 <sup>2</sup>	#-1	#-1	1
SB:RBDF	X'FF'	#-1 <sup>2</sup>	#-1	#-1	1
SH:RCU	0	0	0	0	0

1 # is the total number of this type of device specified on :DEVICE commands.

2 If #-1 = 0, then the value is set to 1.

TYPMNSZ Value definition that specifies number of device type mnemonics and empty slots.

OV:SZ Value definition which specifies number of operational labels defined.

OV:NM TEXT of label as specified on :OPLBLT or type mnemonic as specified on the :DEVICE.

SH:OPNM Default OP label table and OP label assignments.

OB:BTX \*Index into DCT, RAT or LDEV (Batch).

OB:BOPTX \*Index into DCT or LDEV (Batch).

OB:OTX \*Index into DCT, RAT, or LDEV (On-line).

OB:OOPTX \*Index into DCT or LDEV (On-line).

OB:GTX \*Index into DCT, RAT or LDEV (Ghost).

OB:GODTX \*Index into DCT or LDEV (Ghost).


TB:SZ Form size or minimum record length.

TB:MAX Maximum record size.

TB:FLGS	TYPE		IN	OUT	BIN	READ REVERSE	COMP	VFC
	0	1						
OTHER	0	0	-	-	-	-	-	-
LISTING	0	1	0	1	-	-	1	1
TAPE	1	0	1	1	-	-	-	-
PACK (SP)	1	1	1	1	-	-	-	-
RAD (DC)	1	1	0	0	-	-	-	-

\* A DCT index appears as the DCT index into the DCT tables.  
 A RAT index appears as #DEVICES+1+RAT index; RAT index = index into SH:RNM  
 An LDEV index appears as #DEVICES+1+SV:RSIZ+1+LDEV index; LDEV index = index into SH:LNLM; #DEVICES = DCTSIZE

If TB:FLGS Type = 10(TAPE), then

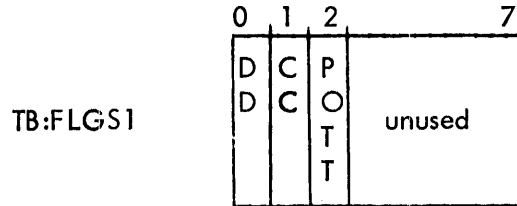

where

DD is the Dual Density indicator

0 = device does not have dual density capability

1 = device has dual density capability

CC is the Code Conversion indicator

0 = device does not have code conversion capability

1 = device has code conversion capability

POTT is the Potter tape drive indicator

1 = 9T device for which sense and set correction orders are invalid

SV:LSIZ

Value definition defining the number of logical devices defined, 15 maximum.

SV:LSIZP

Value definition determined as follows:

<u>#LDEV</u>	<u>SV:LSIZP</u>
0-3	2
4-5	3
6	4
7-8	5
9-10	6
11	7
12-13	8
14-15	9

SV:LSIZPA

Value definition equal to SV:LSIZP\*9.

OV:NMSZ

Value definition equal to TYPMNSZ+OV:SIZ+1+SV:LSIZ+1.

SH:LNМ

TEXT of label as specified on :LDEV at SYSGEN time.

SB:LTY


Default device type.

The following logical device filenames will always be present:

- |                              |   |
|------------------------------|---|
| C1 - Input stream (card)     | -required to be device type CR                        |
| L1 - Output stream (printer) | -default device type LP                               |
| P1 - Output stream (punch)   | -default device type CP or LP (if no punch on system) |



# AVR TABLES

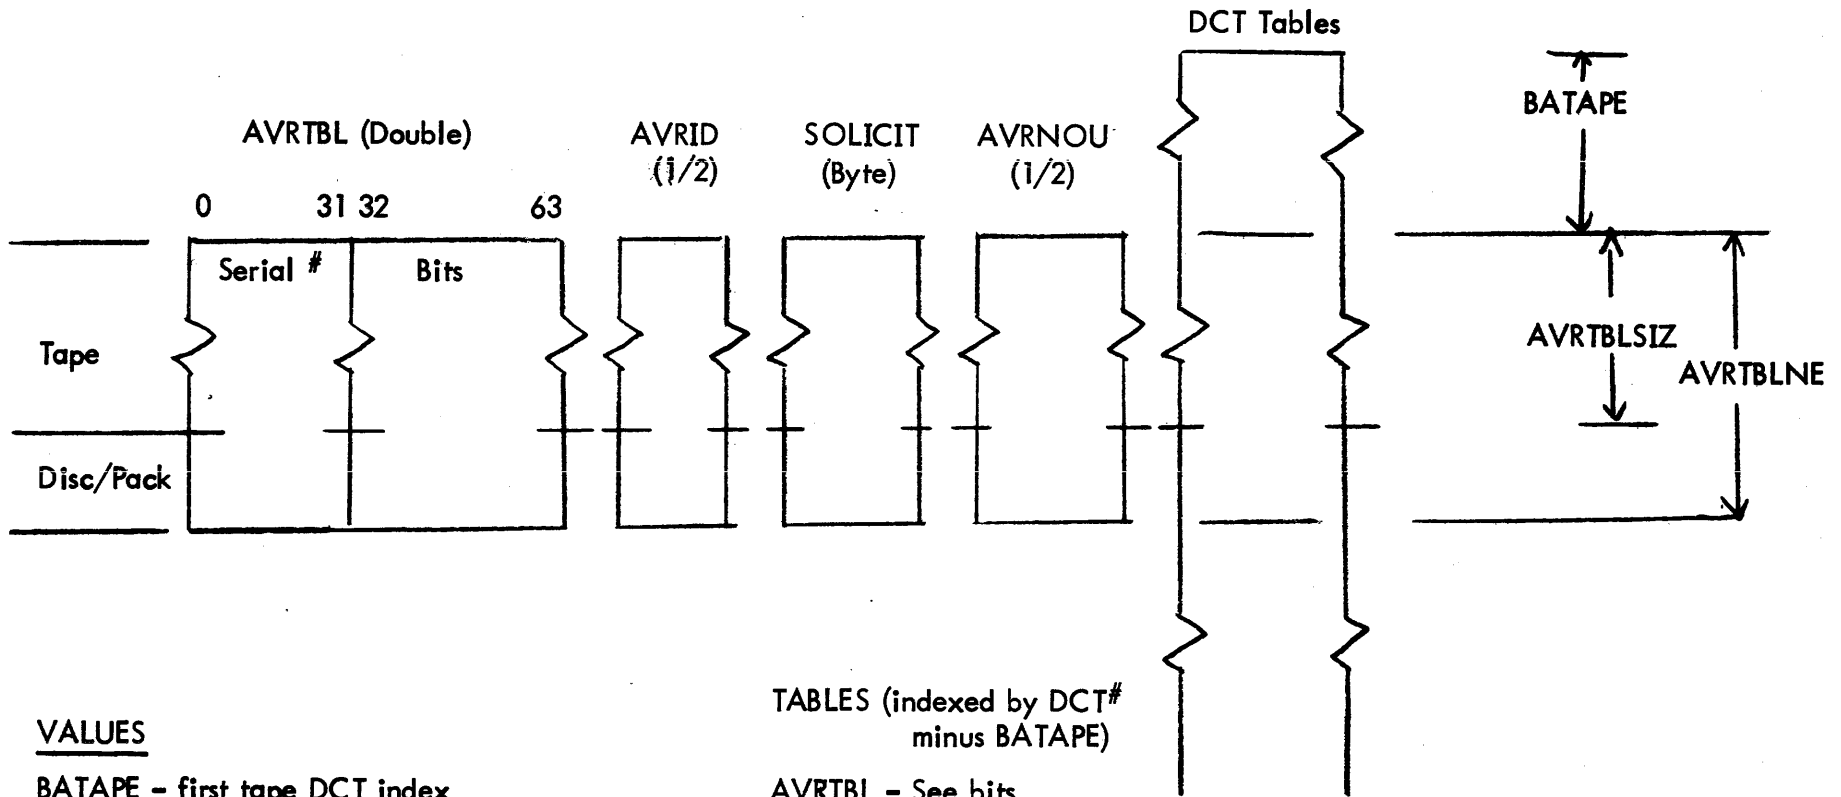

57

CP-V TECHNICAL MANUAL

## VALUES

BATAPE - first tape DCT index  
 AVRTBLSIZ - # tape entries  
 AVRTBLNE - # tape + # packs


TABLES (indexed by DCT#  
 minus BATAPE)

AVRTBL - See bits  
 AVRID - User #/SID s-1 = Lock  
 SOLICIT - 0 = No, ≠0 = Yes  
 AVRNOU - # DCBs + # users for packs  
 # tape spacing operations in progress for tapes

AVR Table Bit Definitions

AVRTBL (AVRTBLSIZ=number of tapes, AVRTBLNE=tapes + private packs, BATAPE=first tape DCT index) (EQUed in PASS2)

Entry Format for Labeled Tapes

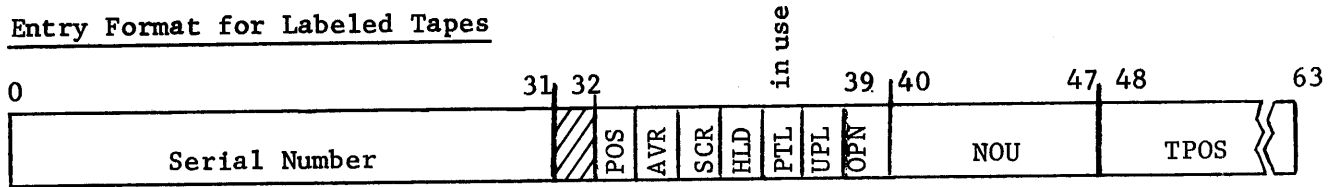

- Serial Number Four-byte EBCDIC serial number of volume mounted.
- POS Tape at beginning, Yes (0) or no (1).
- AVR Volume serial number verified, yes (1) or No (0)
- SCR Scratch tape mounted, yes (1) or no (0).
- HLD Volume can be dismounted, yes (1) or no (0)
- PTL PTL option specified in last M;CLOSE, yes (1) or no (0).
- UPL Labeled tape - out or outin, yes (1) or no (0).
- OPN Tape position known by system, yes (1) or no (0).
- NOU Number of DCBs open to files on the volume.
- TPOS Number of tape marks between load point and present position of tape.
- in use Set when drive is allocated.

Entry Format for Direct Access Devices




- Serial Number EBCDIC serial of current volume. This field and all other flags are reset to zero when system dismounts volume.
- PUB Device public (1) or private (0).
- AVR Volume serial verified and cylinder BIT MAPS moved to allocation table, yes (1) or no (0).
- INIT Private volume being initialized, yes (1) or no (0).
- VER Verification in progress (1) or not active (0).
- MTD Mount requested (pending), yes (1) or no (0).
- PRIM Volume mounted is primary volume in a private volume set, yes (1) or no (0).
- NOU Number of DCBs open to files on this volume.
- HGPDISP Word displacement from HGP to FWA of allocation table for device.

AVR TABLES

Table Content and Bit Settings

TAPE OR PACK STATUS	PUB	SERIAL	AVR NOU	AVR	AVR ID	SOLICIT	VER	SCR
Premount Public	1	#	1	0	0	0	0	0
Premount	0	#	0	0	#	0	0	0
Available (Empty)	0	0	0	0	0	0	0	0
Solicited	1 0	#	#	0	#	1	0 1	0
Being Verified	1 - 0	#	1	0	#	0	1	0
Dismount (lock)	1	#	#	1	-1	0	0	0
Private non shareable	0	#	#	1	#	0	0	0
Share PRIVATE	0	#	#	1	0	0	0	0
Public (operator)	1	#	#	1	0	0	0	0
System	1	0	0	0	0	0	0	0
Scratch	0	#	0	1	#	0	0	1
Premount SCRATCH	0	#	0	0	0, #	0	0	1
Solicited SCRATCH	0	-1	0	0	#	1	0	0


AVRSID



Used between end-action and user M:CHECK (or equiv.) for M:PRECORD operations.


TYC - I/O completion type	}	from register 12
RBC - Remaining record count	}	on user end action

AVRFNMT - Six Words

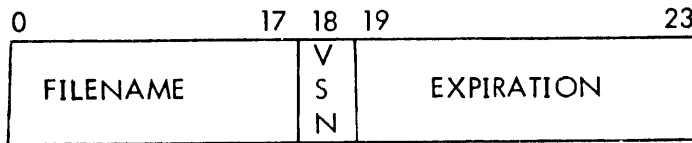

FILENAME            name of the first file on the tape volume (TEXTC).  
 VSN                volume sequence number (binary)  
 EXPIRATION        Julian expiration date (five bytes representing YYDDD in EBCDIC).

ANSFLGS - One Byte



AT            tape is ANS (0 = no, 1 = yes).  
 TO            type of DCB (0 = NON-ANS, 1 = ANS)  
 ERR          error flags (00 = no error, 01 = NOT ANS, 10 = NOT EXPIRED, 11 = ANS VOL).  
 AK            ANSSCRATCH key-in processed (0=no, 1=yes).  
 RO            Access protection (0 = unrestricted, 1 = read only).  
 BLP          BLP option specified (0 = no, 1 = yes). If CPV labeled tape bit set implies no un-blocked records can be written.  
 MS            MOUNT OR SCRATCH (0 = Mount, 1 = Scratch)

	0	1	2	3		7
AVRFLGS	D	C	R	A		R
	D	C	E	T		D
	S	S	W	O		K

where

DDS is the Dual Density Status indicator

0 = density is 1600 bpi (PE)

1 = density is 800 bpi (NRZI)

DDS is only meaningful for output tapes where DD in TB:FLGS1 is 1.

CCS is the Code Conversion Status indicator

0 = no code conversion is performed

1 = code conversion is performed between EBCDIC (in core) and ASCII (on tape).

CCS is only meaningful for tapes where CC in TB:FLGS1 is 1.

REW is the rewinding bit, indicating a REW was initiated but the end action has not yet occurred.

0 = not rewinding

1 = rewinding - no other operations may start on this drive.

ATO is the Asynchronous Tape Operation flag.

1 = a tape spacing operation is in progress and data transfers are not to be initiated - AVRNOU contains the number of operations in progress.











0 = data transfers are OK.

RDK is the READ keyin flag.







1 = a READ keyin has previously been received for this user for this tape.

COC TABLES (indexed by Line Number) Length LNOL

'All are Interrupt Altered

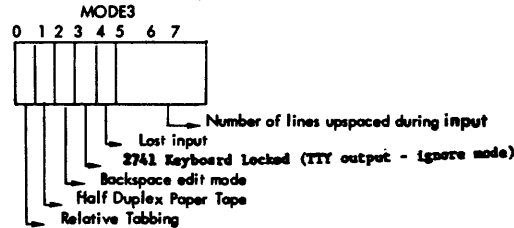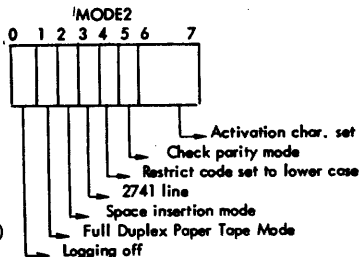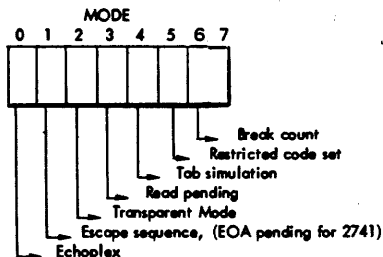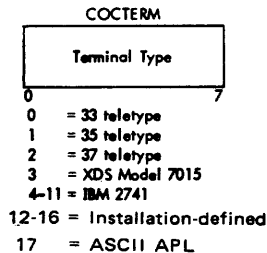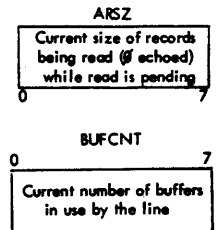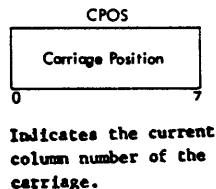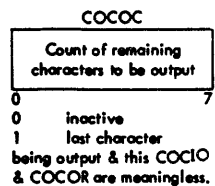





62

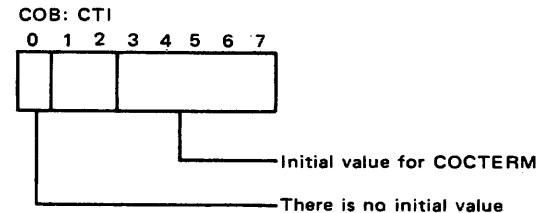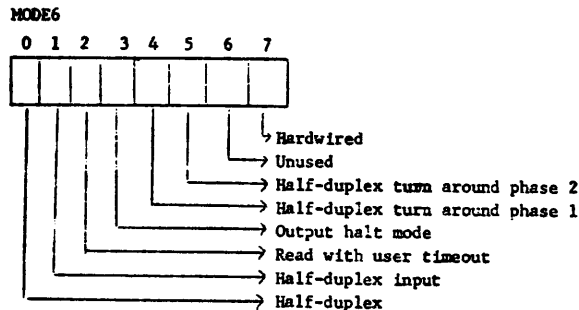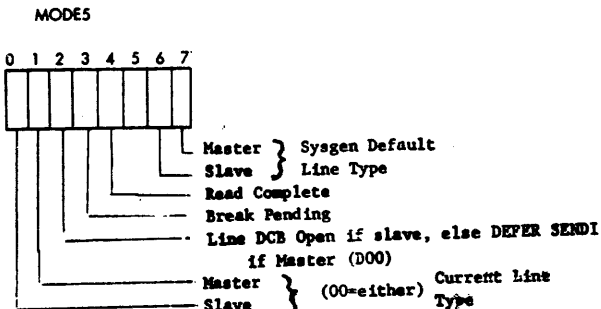


A value of 8000 indicates no tabs in effect for the read.

If no read pending, the input buffer address where activation took place.


\* Significant only if COUPLE option specified in PASS2



MODE 4

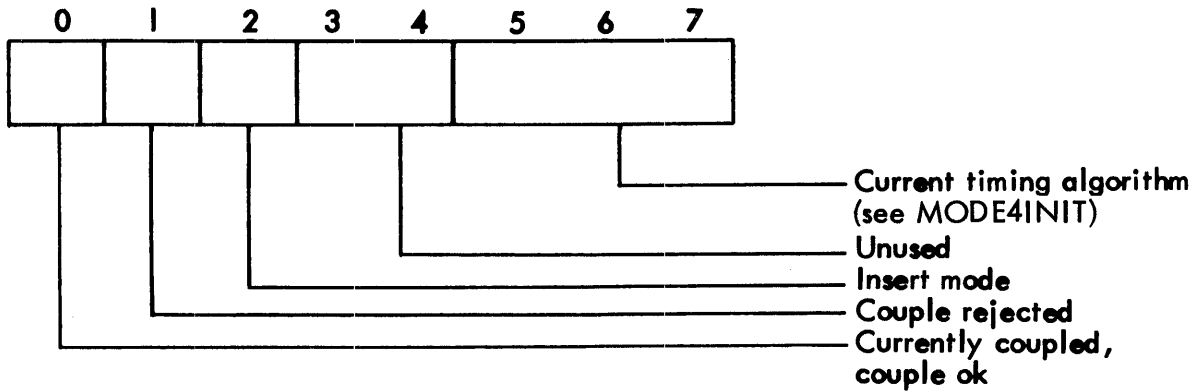

MODE 4 INIT

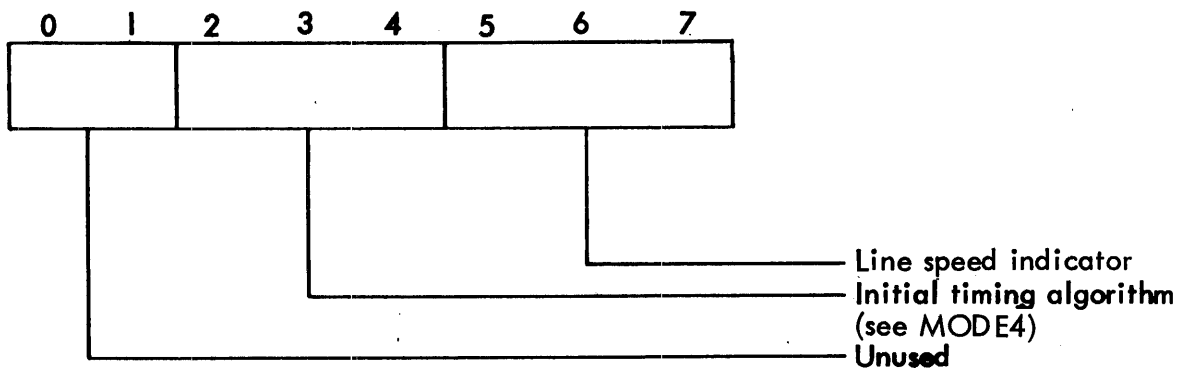

Line Speed Indicator	Characters Per Second	Baud
0	10	110
1	15	134/150
2	30	300
3	60	600
4	120	1200
5	240	2400
6	480	4800
7	960	9600

Algorithm	Applicable Terminals
0	TTY 33, 35, 37, Most CRT's
1	2741-Types, Texas Instruments 733
2	Execuport, Datapoint
3	Memorex
4	All (Combination of 2 and 3)
5	Texas Instruments 725
6	Teletype Model 40 Hardcopy Printer
7	Unused

CP-V TECHNICAL MANUAL

(This page intentionally left blank.)



TRANSLATION TABLES

TTYIN	ASCII to EBCDIC	For TTY
TTYOUT	EBCDIC TO ASCII	
EAPLLC	EAPL Lower Case to EBCDIC	For 2741
EAPLUC	EAPL Upper Case to EBCDIC	With EBCD
EAPL	EBCDIC to EAPL	APL type-ball
ESTDLC	ESTD Lower Case to EBCDIC	For 2741
ESTDUC	ESTD Upper Case to EBCDIC	With EBCD standard
ESTD	EBCDIC to ESTD	Type-ball
SAPLLC	SAPL Lower Case to EBCDIC	For 2741
SAPLUC	SAPL Upper Case to EBCDIC	With selectric
SAPL	EBCDIC to SAPL	APL type-ball
SSTDLC	SSTD Lower Case to EBCDIC	For 2741
SSTDUC	SSTD Upper Case to EBCDIC	With selectric
SSTD	EBCDIC to SSTD	Standard type-ball
AAPLIN	ASCII APL TO EBCDIC	For ASCII terminals
AAPLOUT	EBCDIC TO ASCII APL	With APL font

DOUBLEWORD TABLES INDEXED BY COC NUMBER

COD:LPC      Word 0 contains the logical line number that corresponds to physical line number 0 on the COC.  
Word 1 contains the logical line number that corresponds to the last physical line on that COC.

WORD TABLES INDEXED BY COC NUMBER

CO:CMND	DA (command list)
CO:IIL	Input interrupt level select bit for WRITE DIRECT instructions
CO:LNM	Mask for obtaining line number; X'3F' for a COC, X'7F' for an FECF
CO:LST	BA (next character in ring buffer) - BA (first byte after end of ring buffer)
CO:OIL	Output interrupt level select bit for WRITE DIRECT instructions.
CO:OUT	WA (4 word output interrupt PSD block)
CO:RINGE	WA (first word after the end of the ring buffer)
CO:XPSDO	Output interrupt XPSD instruction

HALFWORD TABLES INDEXED BY COC NUMBER

COH:DN	COC device address
COH:II	Input interrupt location
COH:IO	Output interrupt location
COH:RBS	Byte size of ring buffer

BYTE TABLES INDEXED BY COC NUMBER

COB:SIO	Condition codes from the SIO instruction in COCINIT
---------	---

READ/WRITE DIRECT INSTRUCTIONS INDEXED BY COC NUMBER


Table Instruction Description (d = DIO address)

CO:OUTRS	RD,7	.30d0	Output response
CO:STAT	WD,10	.30d0	Sense receiver status
CO:RCVOFF	WD,7	.30d2	Turn receiver off
CO:RCVON	WD,7	.30d1	Turn receiver on
CO:RCVDOFF	WD,7	.30d3	Turn receiver data set off
CO:XDATA	WD,6	.30d5	Transmit data
CO:TSTAT	WD,7	.30d4	Sense transmitter status
CO:XSTOP	WD,7	.30dE	Stop transmit

COC BUFFER LINKAGES

Free Chain: COCHPB is the head pointer. FLINKs occupy word 0 of the buffer, and are word displacements from COCBUF to the next buffer.

Input, Output, and Tab Buffer Chains: COCIR, COCOR, and TL are the respective head pointers. FLINKs occupy halfword 0 of the buffer, and are the byte displacement from COCBUF to byte 2 of the next buffer in the chain.

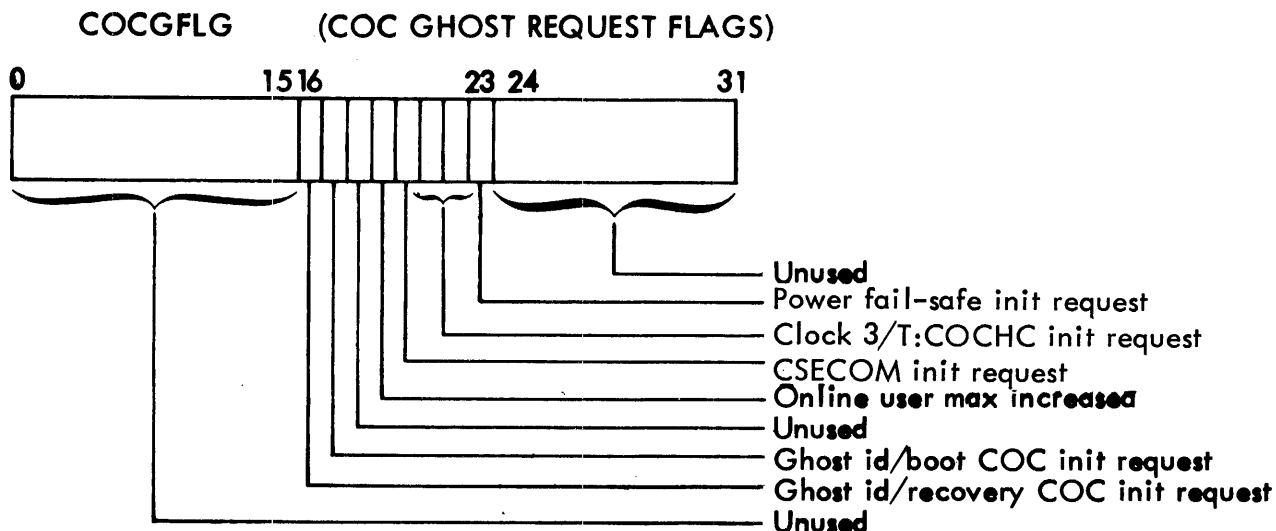

Additional Data Cells for CP-V L6 Front-end:

L6LIMS                      Doubleword containing first L6 logical line number and last L6 logical line number; contains 1 and 0 if no front-end.

Additional ADEF for the CP-V L6 Front end:

L6#FIRST                    ADEF giving the first L6 front-end COC number EQU'ed to LCOC+1 if no L6 front-end

Changes to the RD/WD Instruction Tables for the CP-V L6 Front-end:


<u>Table Name</u>	<u>Contents</u>
CO:OUTRS	NOP
CO:STAT	XPSD,0                  Rcur status routine
CO:RCVOFF	NOP
CO:RCVON	XPSD,0                  Turn Rcur on routine
CO:RCVDOFF	XPSD,0                  Turn data set off routine
CO:XDATA	XPSD,0                  Transmit character routine
CO:TSTAT	LCI                      3
CO:XSTOP	NOP

CP-V TECHNICAL MANUAL

(This page intentionally left blank.)

The level 0 index granule format is detailed below followed by the level 0 key entry


Master Index Format

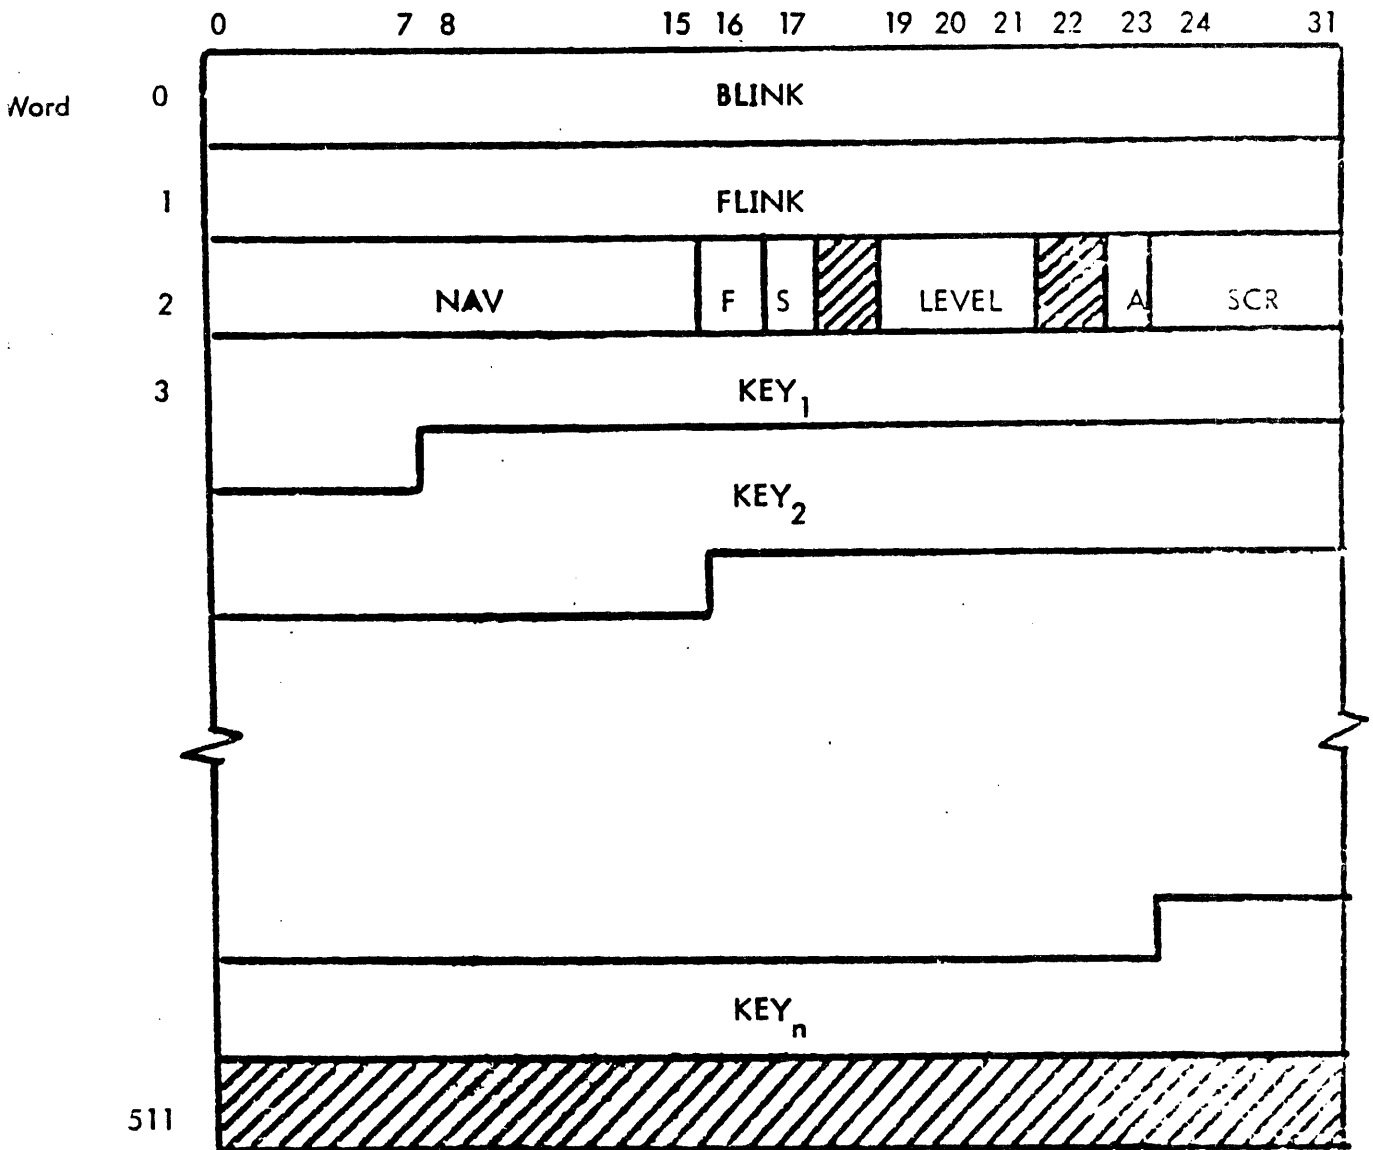

where:

- S = 1 if full-granule size; 0 if half-granule size
- BLINK contains the disk address of the preceding index granule, or zero, if none.
- FLINK contains the disk address of the next index granule, or zero, if none.
- NAV contains the number of significant bytes in the index granule (i.e., points to the next available byte in the index granule).
- LEVEL contains the level of the index entries (i.e., contains 0).
- A is the added flag and indicates whether or not this index half-granule has been added since the current higher level index structure was created (0 means no, 1 means yes).
- KEY is the key entry, shown below
- SCR 1 + KEYM (see description on 14-38)
- F = 1 if FIT is in this granule; 0, otherwise. The FIT will occupy the final 80 words, if present.

KEY ENTRY

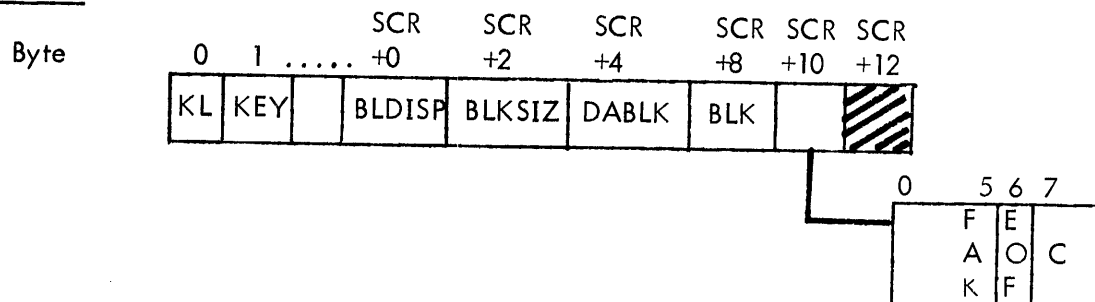

- KL contains the number of bytes in the key
- KEY contains the character string that identifies the record
- BLDISP contains the byte displacement of the record segment associated with this key entry within the data granule pointed to by DABLK


- BLKSIZ** contains the byte count of the initial size of the record segment associated with this key entry. BLKSIZ is never updated.
- DABLK** contains the disk address of the data granule that contains the record segment associated with this key entry.
- BLK** contains the count of the number of bytes of data currently in the record segment associated with this key entry ( $BLK \leq BLKSIZ$ ).
- FAK** indicates whether or not this entry is the first appearance of this key (0 means no, 1 means yes).
- EOF** indicates whether or not this entry is the last undeleted entry in the file (0 means no, 1 means yes).
- C** indicates whether or not this record segment is the final segment of the record (0 means yes, 1 means no).




MASTER INDEX FORMAT FOR A HIGHER LEVEL INDEX

The formats of the higher-level granule and the higher-level key entry are detailed below.

Master Index

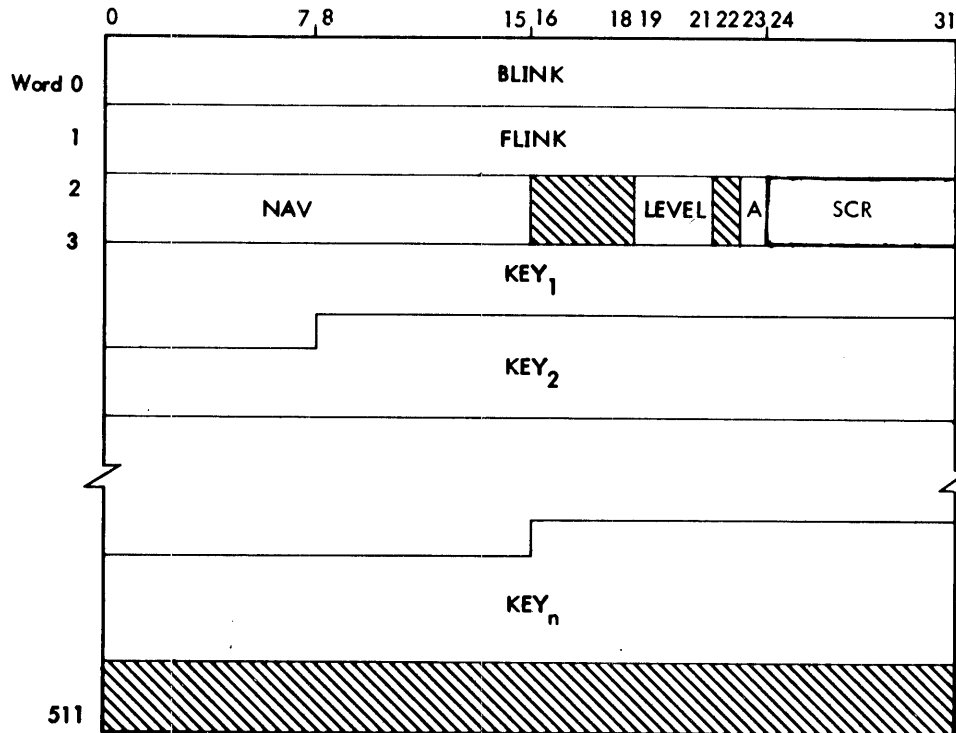

Key Entry

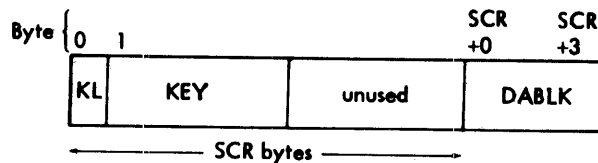

where


- KL contains the number of bytes in the key. If the key entry in the level 0 half granule pointed to by DABLK is not the first appearance of that key at level 0, the high order bit of KL (at level 1) is set.
- KEY contains the key from the first key entry in an index granule on the lower level.
- SCR is a field in the DCB and equals the maximum key length + 1.
- DABLK contains the disk address of the index granule on the lower level.
- BLINK contains the disk address of the preceding index granule at this level, or zero, if none.
- FLINK contains the disk address of the next index granule at this level or zero, if none.
- NAV contains the number of significant bytes in the index granule.
- LEVEL contains the level of the index entries (the lowest is level 0, the next is level 1, and so forth).
- A only meaningful at level 0; always 0 on higher levels.

ACCOUNT DIRECTORY


An account directory consists of a master index. An account directory index granule consists of entries that contain an account number and the disk addresses of the file directory associated with the account. There is one account directory for all public files in the system. Each private volume set has its own account directory which is limited to 96 entries. The permanent information about the public file account directory is contained in the ACNCFU. ACNCFU is not used for private account directories. A private account directory is always located on Granule 1 of the primary volume in the set.

FORMAT FOR THE PUBLIC FILE ACCOUNT DIRECTORY

Master Index

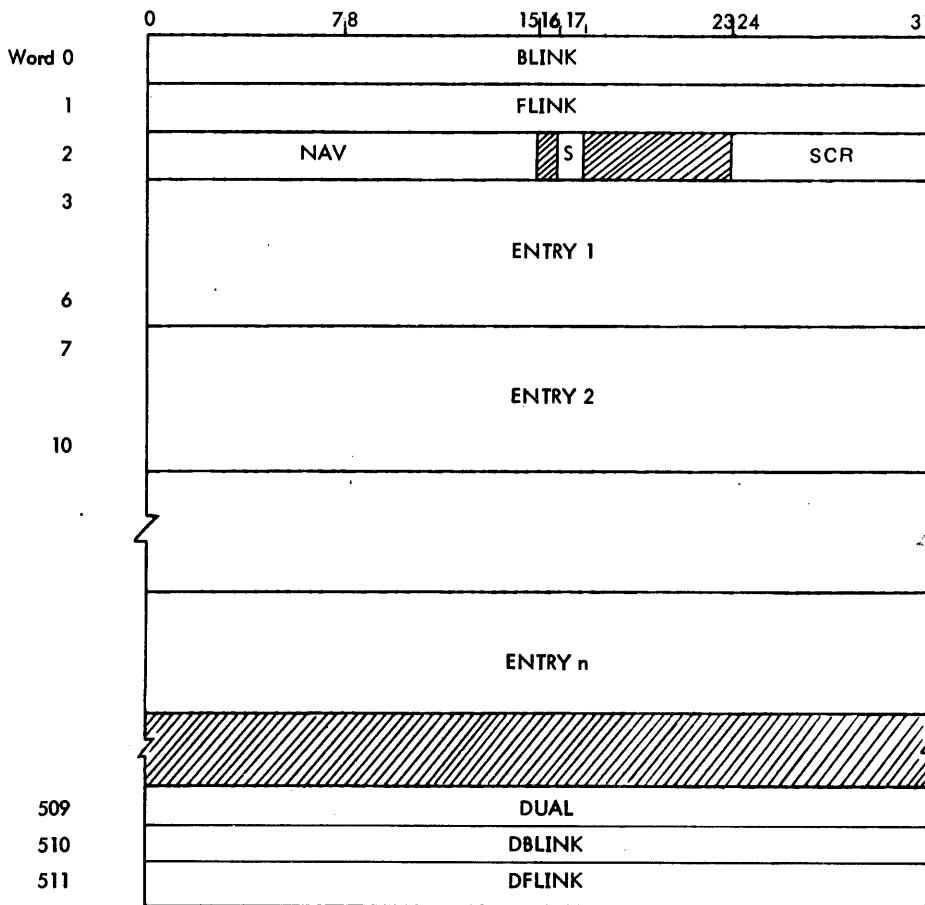


Entry Format for Public

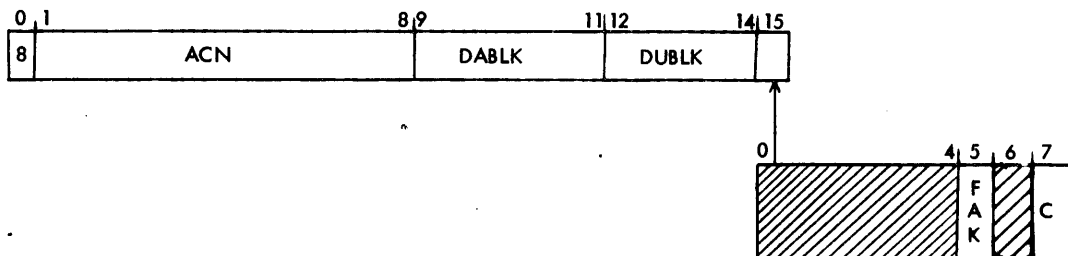

where

- S = 1 for full-granule size; S = 0 for half-granule size.
- ACN contains an eight-byte EBCDIC account number.
- DABLK contains the disk address of the file directory associated with this account.
- DUBLK contains the disk address of the dual of the first granule of the file directory in question.
- FAK = 1; indicates that this entry is the first appearance of this key.
- C = 0; has no meaning for an account directory.
- BLINK, FLINK and NAV have the same meaning as in the Master Index for Level 0. Both BLINK and FLINK are zero for a private volume set account directory.
- DUAL disk address of the dual location for current granule.
- DFLINK, DBLINK same as FLINK and BLINK except that these disk addresses apply to the dual structure for the directory.
- SCR 9 for public account directories, X'C' for private account directories.

Entry Format for Private

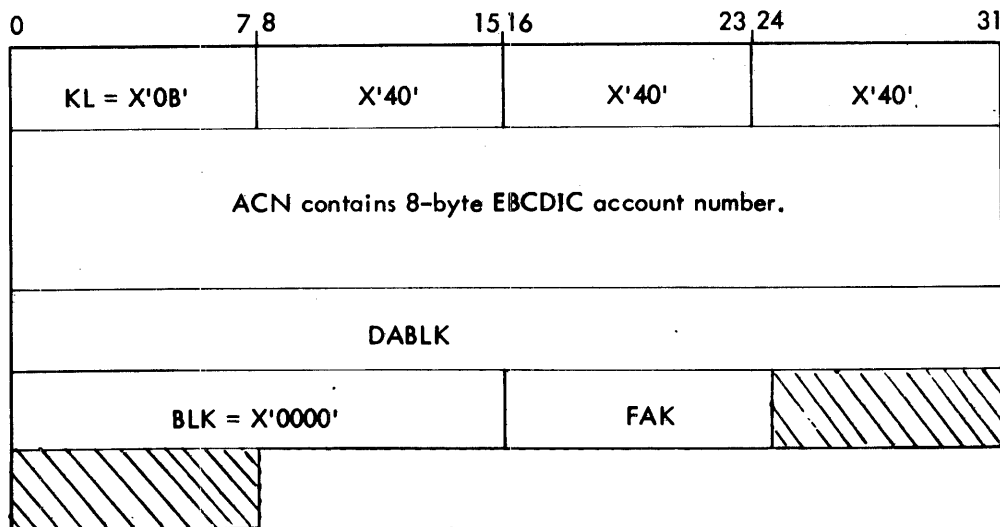


## FILE DIRECTORY


A file directory consists of a Master Index (MI) and a set of File Information Tables (FITs). A file directory index granule consists of key entries that contain the name of a file in the associated account and the disk address of the file's FIT. A FIT is located on a granule allocated to the file and contains all the information necessary to open a file. Information about the file directory itself (its mini-FIT) is contained in the last three words of the first block of its master index. The information from the mini-FIT is maintained in the FILCFU when the file directory is being updated. Public and private file directories have the same formats.

FORMAT FOR PUBLIC AND PRIVATE FILE DIRECTORIES

Granule Format

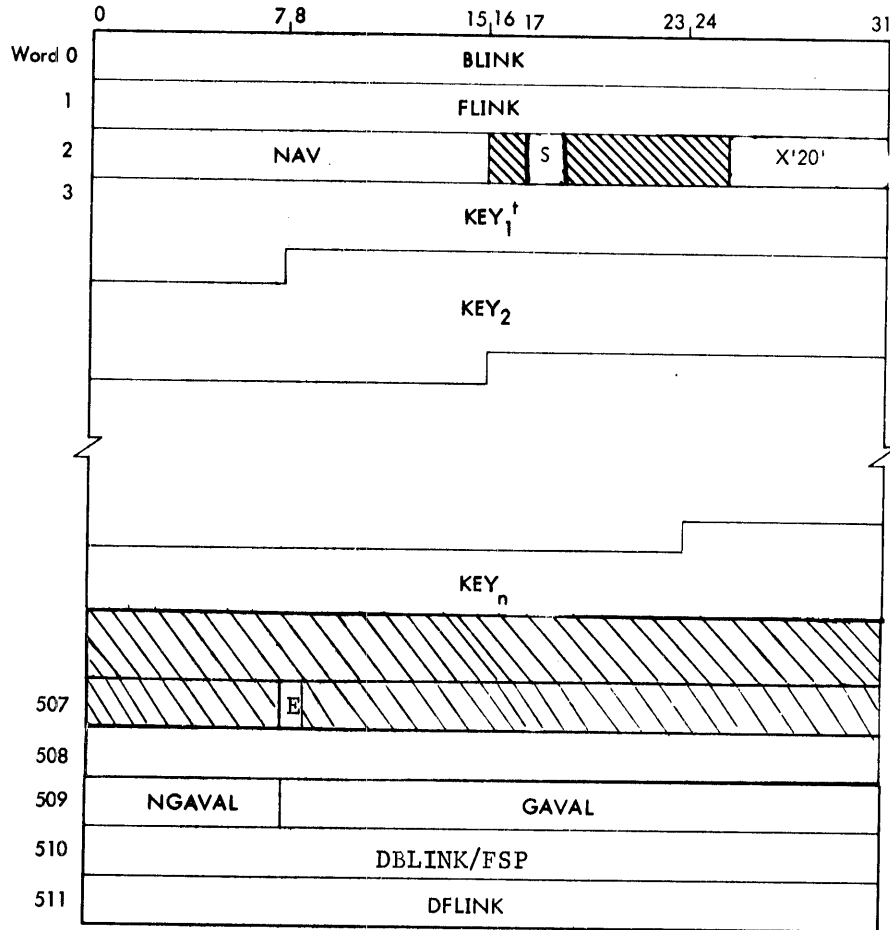

Key Entry Format



<sup>†</sup>The first entry in the file directory is a null entry for use with the NXTF option.

CP-V TECHNICAL MANUAL

Section VH.03

Page 3

2/10/76

E set if directory is empty.  
FSP disk address of free granule pool (only in first directory granule).

where:

S = 1 for full-granule size; =0, for half-granule size.  
KL contains the number of bytes in the key.  
FNE contains an EBCDIC file name.  
DABLK contains the disk address of the file's FIT.  
BLK Descriptors.

dynamic descriptors

bit 0 is 1  
bit 1 is 0 in file directory; but set to 1 in DCB field if we are creating a new synonymous file.  
bit 2 is 0 in file directory; but set to 1 in DCB field if a synonymous file is being processed  
bit 3 is unused  
bit 4 is 1 if the file has been modified since it was backed up by FILL  
bit 5 is 1 if the file has been modified since it was last backed up by an Increment  
bit 6 is 1 if the file has been modified since it was last backed up by a Saveall  
bit 7 is 1 if the file has been modified since the last Fill

static descriptors

bit 0 is 1 if the file has a password  
bit 1 is 1 if the file is a SYNON file  
bit 2 is 1 if the file organization is random  
bit 3 is reserved for expansion  
bit 4 is 1 if the file is not to be automatically backed up  
bit 5 is 1 if the access date is not to be updated  
bit 6 is 1 if the file is not to be semi-automatically deleted  
bit 7 is unassigned, but see the X'11' VLP, below

entry descriptors (unchanged)

bits 0-4 are not used  
bit 5 is 1 (FAK)  
bit 6 is 1 if this is the last FD entry for the account (EOF)  
bit 7 is 0 (C)  
FAK = 1; indicates that this entry is the first appearance of this key.

EOF indicates whether or not this key entry is the last in the file (0 means no, 1 means yes).

C = 0; has no meaning for a file directory.

DBLINK, DFLINK, BLINK, FLINK, and NAV have the same meaning as is previous Account Directory formats. NGVAL,GAVAL, have the same meanings as in the FILCFU (see File Directory CFU (FILCFU) later in this chapter).

Words 509 and 510 as specified only for the initial granule of a directory; otherwise, they contain the same dual information as does an account directory granule.

(Material on this page has been deleted.)

FILE INFORMATION TABLE (FIT) FORMAT FOR AN ORIGINAL FILE

0 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31																																			
(9 words) FNE (in TEXTC format)																																			
X'03'				LE = 0				NDW = 2				NAW = 2																							
PASSWORD (2 words)																																			
X'05'				LE = 0				NDW				NAW																							
Read ACNs (2 words each)																																			
X'06'				LE = 0				NDW				NAW																							
Write ACNs (2 words each)																																			
X'14'				LE = 0				NDW				NAW																							
Execute ACNs (2 words each)																																			
X'15'				LE = 0				NDW				NAW																							
Execute Vehicles (3 words each, TEXTC)																																			
X'04'				LE = 0				NDW = 2				NAW = 2																							
Expiration Date																																			
X'0F'				LE = 0				NDW = 2				NAW = 2																							
Last Access Date																																			
X'10'				LE = 0				NDW = 2				NAW = 2																							
Backup Date																																			
X'0E'				LE = 0				NDW = 2				NAW = 2																							
Creation Date																																			
X'0A'				LE = 0				NDW = 3				NAW = 3																							
Modification Date																																			
X'0D'				LE = 0				NDW = 1				NAW = 1																							
File Size																																			
X'0C'				LE = 0				NDW = 7				NAW = 7																							
E FDA																																			
TDA																																			
NGAVAL																CAVAL																			
CCBD																0				SLIDES															
SREC																																			
LDA																																			
X'09'				LE = 1				NDW = 3				NAW = 3																							
ORG				KEYM																															
LSLDES																LRDLO				SPARE															
NSF																10000000				S <sub>0</sub> S <sub>1</sub> S <sub>2</sub> S <sub>3</sub> S <sub>4</sub> S <sub>5</sub> S <sub>6</sub> S <sub>7</sub>															

These coded entries are optional; presence of the entry is indicated by the byte 0 hex code.

See CFU format for meaning of fields

See DCB for meaning of fields.

The maximum size of the FIT is 80 words. The only limit on the number of read, write, execute accounts and execute vehicles is the 80 word maximum FIT size.

\*The FIT starts in word 4 for consecutive files and in the 80th word from the end for keyed or random files.



<u>Field</u>	<u>Description</u>
ACN	is an account number. Each ACN is an eight-byte EBCDIC entry with trailing blanks. If there is no Read ACN entry, and ACN can read the file. If there is no Write ACN, no one can write in the file except the ACN that created the file
CCBD	contains, for keyed files, either the byte displacement to the next available byte in the last data granule of the file (SREC), which means that the blocking buffer was truncated; or 0, which means that the last data granule in the file (SREC) contains 512 words.
CYL	specifies whether the file assigned to the DCB is to be allocated by granules or cylinders (0 = granule allocation, 1 = cylinder allocation). It is only meaningful for public files.
Date	is of the form MMDDHHYY, where MM is numerical month DD is day of month HH is hour of day YY is last two digits of the year, all in EBCDIC bytes  Expiration date may contain the word NEVER followed by three blanks, which indicates that the file does not have an expiration date.  The modification date contains three words. The third word is of the form HHMM, where HH is a repeat of the hour MM is the minute
E = 1	file contains no record
FDA	contains the disk address of the file's first index granule at level 0.
File size	contains the current number of index and data granules allocated to keyed and consecutive files; or the number of data granules allocated for random files.
FNE	is the EBCDIC name of the file in TEXTC format.
GAVAL	contains the disk address of the next available granule in the last cylinder allocated to the file; zero if none.
KEYM	contains 1. the maximum length, in bytes, of the keys in the file. Applicable to keyed files. Maximum value is 31. 2. the type of device that the random file is to be allocated on (0 = allocate on either RAD or DP, X'7' = allocate on RAD, X'B' = allocate on DP). Applicable to random files.
LDA	contains the disk address of the file's last index granule at level 0.
LRDLO	contains the limiting number of contiguous index granules that can be allocated in level 0 and not be reflected in level 1 before the flag, which signals CLOSE to reconstruct the higher level index structure, is set (i.e., before SLIDES in the CFU is set equal to 255).
LSLIDES	has meaning only if a multilevel index exists and contains 1. the limiting number of index granules that can be allocated in level 0 and not be reflected in level 1 before the flag, which signals CLOSE to reconstruct the higher level index structure, is set. 2. the value 255, which means that once a higher level index structure exists, it is not to be reconstructed.  LSLIDES is only used for keyed files.
NAW	is the number of available words in the entry (not including the control word).
NDW	is the number of significant data words in the entry (not including the control word).

NGAVAL is the number of available granules in the last cylinder allocated to the file

NOSEP specifies whether or not granules are to be allocated on a specific device type. This flag has no meaning for private or random files.

NSF is the number of files synonymous with this file.

O is a level 1 flag indicating whether or not a level 1 index exists in a keyed file (0 = no, 1 = yes).

ORG is the file organization indicator (0 = non specified and is treated as consecutive, 1 = consecutive, 2 = keyed, 3 = random).

PASSWORD is an eight-byte EBCDIC entry with trailing blanks.

SLIDES contains, for keyed files, either

1. a tally of the number of index granules allocated at level 0 since the current multilevel index structure was created, or if non exists, since the file was first opened.
2. a tally of the number of index granules allocated at the current level while the multilevel index structure is being (re) created.
3. the value 255, which means that a new multilevel index structure should be built when the file is closed (unless LSLIDES in the DCB equals 255 and a level -1 index exists).

Field	Description
LE	is the last entry flag and indicates whether or not this parameter is the last entry in the FIT (0 means no, 1 means yes).
SPARE	contains the number of spare byte positions to be left unused in the end of the current index granule in the event that the key to be added is the last key in the file.  SPARE is only used for keyed files.
SREC	contains the disk address of the last data granule in the file. It is only used in the output mode.
TDA	contains, for keyed files, either
	<ol style="list-style-type: none"> <li>1. the disk address of the first index granule at the top of the multilevel structure, if one exists.</li> <li>2. the disk address of the middle index granule, if there are three level-0 index granules and the file is keyed.</li> <li>3. 0, which means that either the file is consecutive, or that the file is keyed and there are at the most two index half-granules.</li> </ol>
	For consecutive files, TDA contains the number of records in the file.

S<sub>0</sub> = 0  
 S<sub>1</sub> = 0  
 S<sub>2</sub> = 1 if file organization is random  
 S<sub>3</sub> = 0  
 S<sub>4</sub> = 1 if file is not to be automatically backed up  
 S<sub>5</sub> = 1 if access date is not to be updated  
 S<sub>6</sub> = 1 if file is not to be semi-automatically deleted  
 S<sub>7</sub> = 0

FILE INFORMATION TABLE (FIT) FORMAT FOR A SYNONYMOUS FILE

0	7 8	15 16	23 24	31
01	LE = 1	NDW = 8	NAW = 8	
FNE (TEXTC Format)				
0B	LE	NDW	NAW	
SYNON FILE NAME (TEXTC Format)				

\*

A synonymous file does not have a FIT, but if a synonymous file is accessed on a NXTF open with FPARAM, an X'08' error return is made with the above information passed as the FPARAM.


---

\* This entry replaces the optional entries on the original file.

PRIVATE VOLUME SET TABLES

A private volume set is a collection of disk pack volumes that the user has grouped together, containing any number of files with any type of organization. A private volume set is a self-contained entity and contains its own account directory and file directories (which contain information about all files on the private volume set). The account directory for a private volume set is located on granule 1 of the primary volume. The first file directory begins on granule 2; each file directory thereafter begins on a successive logical cylinder boundary. Because volumes can be mounted serially for consecutive files, file directories cannot extend beyond the primary volume. The format for the private file directories is the same as for the public directories. Every private volume has a Volume Table of Contents (VTOC) which is built by the VOLINIT processor and is located on granule 0 of the volume. The format of the VTOC is shown on the following page.

VOLUME TABLE OF CONTENTS (VTOC) FORMAT

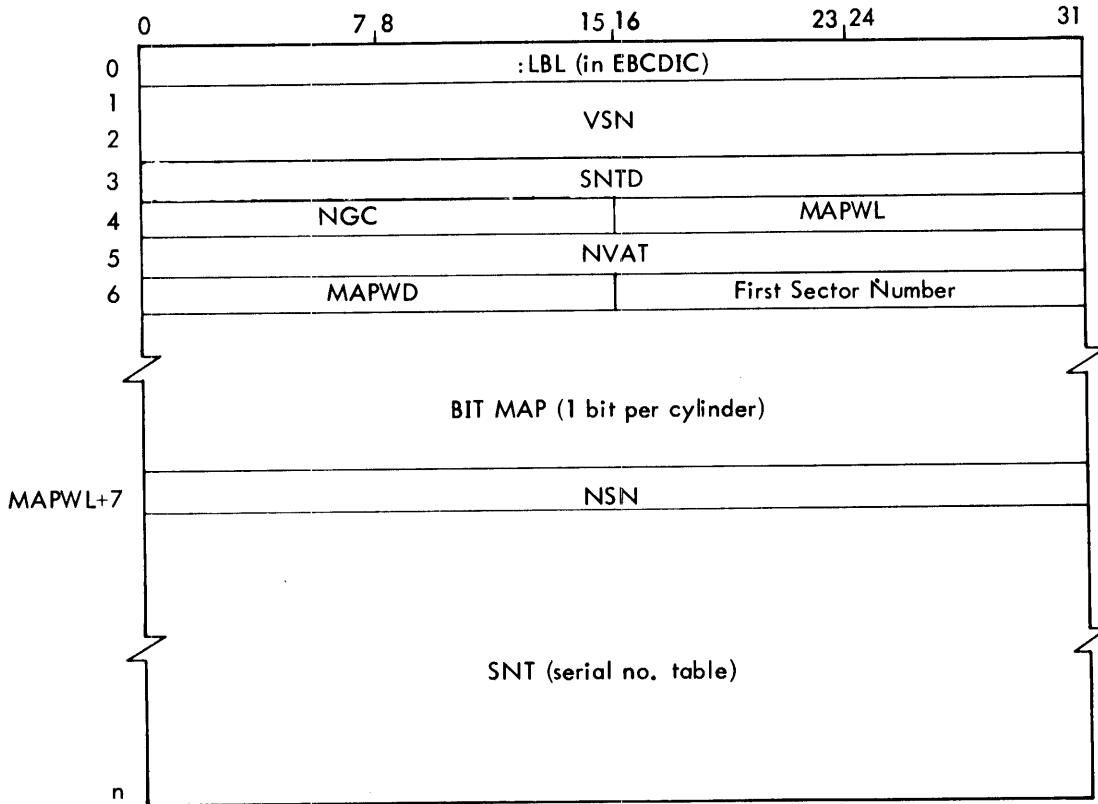

VTOC Fields

<u>Field Name</u>	<u>Word</u>	<u>Meaning</u>
Bit Map	7+n	contains the cylinder bit map for the volume. If the bit is set, the cylinder is unallocated. If the bit is reset, the cylinder is allocated. For devices where the number of cylinders is not an even multiple of 32, VOLINIT resets the bits in the last word which do not represent cylinders.
First Sector Number	6	contains the sector number for the first sector on the device (i.e., sector 0).
MAPWD	6	contains the word displacement from the start of an allocation table to the bit map. MAPWD is set to X'07' by the VOLINIT processor.
MAPWL	4	contains the number of words in the bit map.
NSN		contains the number of serial numbers in the Serial Number Table.
NGC	4	contains the number of granules per logical cylinder.

<u>Field Name</u>	<u>Word</u>	<u>Meaning</u>
NVAT	5	contains the next volume's cylinder 0 allocation table. Each bit represents a granule. If the bit is set, the granule is unallocated. If the bit is reset, the granule is allocated. The first bit, which represents granule 0 is always set allocated. NVAT is only used when a consecutive file extends beyond volume boundaries.
SNT		contains the serial numbers of all the volumes in the private volume set for the primary volume. The position of a serial number represents its volume number. (The primary volume is always volume 1.) The order of the serial numbers never changes, but new volumes can be added to the set, and will be added at the end. For other volumes, this table contains only the serial number of the primary volume. Only the first four bytes of the serial number are carried in the serial number table.
SNTD	3	contains the word displacement from the start of the VTOC to the start of the Serial Number Table.
VSN	(1&2)	contains the volume serial number (left-justified and blank-filled to eight bytes.)

CP-V TECHNICAL MANUAL

**ALLOCATION TABLES (HGP)**

SYSGEN creates an allocation table (called HGP - Heading Granule Pool for each disk device (RAD or disk pack) defined at SYSGEN time. The HGPs are located in ALLOCAT's data (See Section GB) - ALLOCAT) and in CORE starting at the location HGP. (The bit maps for public devices are not in the CORE HGP Tables.) Allocation tables are used to allocate and release granule/cylinder units from symbiont storage areas of a device and the file. An allocation table contains (1) information about the file and symbiont storage areas of a device, (2) the relationship between the device's physical (sector and track) and logical (granule or cylinder) units, and (3) the maps which control the allocation of the granule/cylinder units in the file and in the symbiont storage areas of the device. The system device's allocation table is always the first one and begins at the location HGP. The allocation table format (HGP) is shown below.

Allocation Table Format (HGP)

	0	7,8	15,16,17	23,24	31
0	FLINK				
1	0-----0	DCT	CYL PRV	TYPE	NGC
2	NST/SFLNK				
3	O/LBP		NSG/LBD		
4	PER MAPWL		PFA MAPWL		
5	NVAT				
	E	PER MAPWD		PER 1st SECTOR NO.	
6	E	PFA MAPWD		PFA 1st SECTOR NO.	
7	PER BIT MAP				
	PFA BIT MAP				
n					

where

CYL indicates whether the device is allocated by cylinder or granule (0 means granule, 1 means cylinder). All private devices are allocated by cylinder. Disks can only be allocated by granule. Symbiont storage only exists on devices allocated by granule.

DCT	contains the DCT index of the device the allocation table is associated with.
E	if set, indicates that this portion of the bit map (PER or PFA) is all zeroes (ALLOCAT data).
FLINK	contains the address of the next allocation table, or zero if none. HGP equals the address of the first allocation table in the chain.
LBP, LBO	contains the bit position and word displacement of the last single granule allocated from the bit map (ALLOCAT data only).
NGC	contains the number of granules per cylinder, but only has meaning if CYL is set.
NSG	contains the number of sectors per 512 - word granule for this device (CORE headers only).
NST	contains the number of sectors per track for the device (CORE headers only).
NVAT	contains the next volume's cylinder 0 allocation table (if PRIV is set). Each bit represents a granule. If the bit is set, the granule is unallocated. If the bit is reset, the granule is allocated.
PER bit map	is a map in which each bit represents a granule in the symbiont storage area. (Symbionts are only allocated on devices with granule allocation units). The bits are ordered left to right within a word so that bit 0 of the first word represents the first granule in the symbiont storage area, bit 0 of the second word represents the 32nd granule in the storage area, and so forth. If the bit is set, the granule is unallocated, if the bit is reset, the granule is allocated.
PER MAPWD	contains the word displacement from the start of this allocation table to the first word of the bit map for the symbiont storage area.
PER MAPWL	contains the number of words in the bit map for the symbiont storage area.
PER first sector number	contains the sector number of the first track in the symbiont storage area. (Sectors are numbered starting with 0.)
PFA bit map	is a map in which each bit represents a granule or cylinder (depending upon the CYL flag) in the file storage area. The bits are ordered left to right within a word so that bit 0 of the first word represents the first granule/cylinder in the file storage area, but 0 of the second word represents the 32nd granule/cylinder in the storage area, and so forth. If the bit is set, the granule/cylinder is unallocated; if the bit is reset, the granule/cylinder is allocated.
PER MAPWD	contains the word displacement from the start of this allocation table to the first word of the bit map for the symbiont storage area.
PER MAPWL	contains the number of words in the bit map for the symbiont storage area.
PER first sector number	contains the sector number of the first track in the symbiont storage area. (Sectors are numbered starting with 0.)
PFA bit map	is a map in which each bit represents a granule or cylinder (depending upon the CYL flag) in the file storage area. The bits are ordered left to right within a word so that bit 0 of the first word represents the first granule/cylinder in the file storage area, but 0 of the second word represents the 32nd granule/cylinder in the storage area, and so forth. If the bit is set, the granule/cylinder is unallocated; if the bit is reset, the granule/cylinder is allocated.
PFA MAPWD	contains the word displacement from the start of this allocation table to the first word of the bit map for the file storage area.
PFA MAPWL	contains the number of words in the bit map for the file storage area.
PFA first sector number	contains the sector number of the first track in the file storage area. (Sectors are numbered starting with 0.)
PRIV	indicates whether the device is public or private (0 means public, 1 means private).
SFLNK	contains the address of the next allocation table in the circular chain of similar usage devices (ALLOCAT data only).
TYPE	contains the device type (7 means disk; B means disk pack).



## CURRENT FILE USAGE (CFU) TABLES

The CFU tables contain information about the currently open disk files. Each open file, whether public or private, has a CFU table. In the case where an old version of a file exists and a new version is being created, the two versions are considered as different files until the new version is closed, at which time it replaces the old version. If the old version is opened in the input mode at the same time the new version is opened in the OUT or OUTIN mode, each will have a different CFU, but the CFUs are linked together and each is called the secondary CFU of the other. SYSGEN creates a pool of user CFU buffers from the number specified in the CFU option of the Monitor's command. In addition, SYSGEN creates two SYSGEN CFUs called ACNCFU and FILCFU, which immediately precede the user CFU pool. ACNCFU contains information about the public file account directory. FILCFU contains information about the currently referenced public or private file directory. The CFU tables are core-resident in the data area of the Monitor's root. The constants ACNCFU and FILCFU equal the addresses of the account and file directory CFUs respectively. The constant BGRCFU equals the address of the first user CFU buffer, and the constant LASTCFU equals the address of the last user CFU buffer.

The Account CFU (ACNCFU)

Word/Bit	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31
0																	NEWFD															
1	E																					FDA										
2																					CDAM											
3	NGAVAL																				GAVAL											
4																					DCDAM											
5																	TDA															
6																					RDA											
7																					DRDA											
8																					DFDA											
9																					DIGRAN											
10																					DBUFF3											
11	CC1																															
12	CC2																SIGCLS															
13																	ACCTTBL															
14	ACCTCNT																															
15																	NAMTBL															
16																	NAMTBL															
17																	FREE CFU															
18																	REDFLGS															

CP-V TECHNICAL MANUAL

<u>FIELD</u>	<u>WORD</u>	<u>MEANING</u>
ACCTTBL	13	is the word address of the start of the account name entries in the user CFU area.
ACCTCNT	14	is a count of the number of account name entries currently in the user CFU area.
CDAM	2	disc address of the granule of the account directory currently being processed.
DCDAM	4	disc address of the dual of the granule of the account directory currently being processed.
DBUFF3	10	disc address of the dual of the granule currently being processed in BUFF3 in the INST routines in WRTF.
DFDA	8	disc address of the dual of the FDA (see below).
DIGRAN	9	disc address of the dual supplied by the GETIGRAN routine in WRTF.
DRDA	7	disc address of the dual of the RDA (see below).
E	1	is the empty directory flag and is only one for a short period at the start of a cold boot of a PO tape.
CC1	11	set by a STCF in the FINDFIL routines in OPN and CLS after determining whether (equal) or not (not equal) the FILCFU is set up for the directory required.
CC2	12	set by a STCF in the FINDFIL routines in OPN and CLS indicating whether (equal) or not (not equal) the directory to be processed is that of :SYS.
FDA	1	disc address of the start (1st granule) in the account directory.
GAVAL	3	disc address of the next granule available from the cylinder most recently allocated to the account directory. Unless the system contains public cylinder devices, this field and NGAVAL are always zero.
FREECFU	17	address of the last 8-word block set up by CLOSE. Whenever a disk file is closed, the address in FREECFU is decremented by 8. If the CFU to which it now points is not active, the CFU for the file being closed is moved to this CFU and the original CFU is clobbered. If the CFU being pointed to is active, FREECFU is reset to the address of the last 8-word block.

<u>FIELD</u>	<u>WORD</u>	<u>MEANING</u>
NGAVAL	3	the number of granules still unallocated from the cylinder most recently allocated to the account directory.
NAMTBL	15	word address of the start of the file name entries in the user CFU area.
NAMTBLE	16	word address of the next available word in the user CFU area into which a file name can be placed.
NEWFD	0	is a flag used in CLS to indicate whether or not a new file directory is being created.
RDA	6	disc address of the granule requested to be read by the REDSEC routines in RDF.
REDFLGS	18	control flags used by the REDSEC routines in RDF.
SIGCLS	12	flag indicating whether (not zero) or not (zero) a CFU with a name has been released since the last restructuring of the user CFU area.
TDA	5	always zero indicating that no multi-level structure exists.

The File CFU (FILCFU)


Word/Bit	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30					
0															P	CMD																				
1								FDA																												
2								CDAM																												
3	NGAVAL							GAVAL																												
4								DCDAM																												
5								TDA																												
6								FITDA																												
7								FSP																												
8								DFDA																												
9								ACN																												
10																																				
11																																				
12																																				
13																																				
14																																				
15								CBLINK																												
16																																				
17	CYLFLG																																			
18																																				

CP-V TECHNICAL MANUAL

where:

<u>FIELD</u>	<u>WORD</u>	<u>MEANING</u>
ACN	9,10	the eight characters of the account name of the current file directory.
CBLINK	16	the blink of the granule indicated by CDAM.
CDAM	2	disc address of the granule of the file directory currently being processed.
CMD	0	displacement in the appropriate account directory granule of the entry for the current file directory. This field is only used when a new file directory is being created.
DCDAM	4	dual disk address of the granule pointed to by CDAM.
DFDA	8	disc address of the dual of the FDA (see below).
FDA	1	disc address of the start (1st granule) of the file directory.
GAVAL	3	disc address of the next granule available from the cylinder most recently allocated to the file directory. This field contains zeros if there are none left from the last cylinder or if the directory is being allocated on a granule device.
NGAVAL	3	the number of granules still unallocated from the cylinder most recently allocated to the file directory.
FITDA	6	disc address of the file information table during OPN and CLS.
FSP	7	disc address of the start of the free sector pool or zero.
NFD	17	number of granules in the file directory.
NFIT	17	number of random files in the current account.
NFSP	18	number of granules in the free sector pool.
P	0	is the private flag indicating whether (one) or not (zero) the current file directory is from a private pack set.
TDA	5	always zero indicating that no multi-level structure exist

User CFU

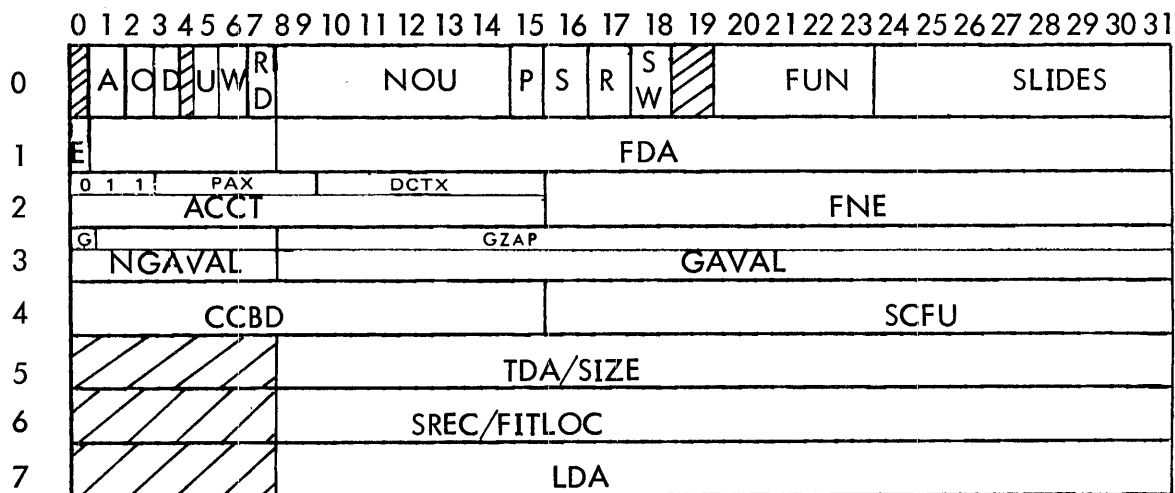

<u>Field Name</u>	<u>Word</u>	<u>Meaning</u>
A	0	Active flag, indicating whether or not a DCB is associated with this CFU (0 means no, 1 yes).
ACCT	2	For non-star public files, this is a doubleword index to a table of account names. The base address of the table is in ACNCFU+13.
CCBD	4	For keyed files only, either the byte displacement to the next available byte in the last data granule (SREC) which means that the blocking buffer was truncated, or 0.
D	0	Indicating whether (=1) or not (=0) to release the granules of the file during close.
DCTX	2	For private pack files, the DCT index of the primary volume as mounted.
E	1	For keyed and consecutive files, =1 if file contains no records, 0, otherwise.
FDA	1	For keyed files, the disk address of the first level 0 Master index granule. For random and consecutive files, the disk address of the first granule of the file.

CP-V TECHNICAL MANUAL

FNE	2	For non-star files, this is a word address to a table of file names in TEXTC form.
FITLOC	6	For random files, the disk address of the file information table (FIT).
FUN	0	The function of the DCBs associated with this CFU (1 = In, 2 = OUT, 4 = INOUT, 8 = OUTIN).
G	3	For random files, if set indicates a newly allocated file being cleaned.
GAVAL	3	The disk address of the next available granule in the cylinder most recently allocated to this file or zero.
GZAP	3	For random files, the address of the monitor buffer in which the cleaning data is kept. Only meaningful if G is set.
LDA	7	For keyed files, the disk address of the final level zero master index granule. For consecutive files, the disk address of the final granule of the file.
NGAVAL	3	Tally of the number of available granules in the cylinder most recently allocated to this file.
NOU	0	Tally of the number of DCBs currently associated with this CFU.
O	0	For keyed files, a flag indicating whether (= 1) or not (= 0) a level above the level 0 master index exists.
P	0	Private flag, indicating whether (= 1) or not (= 0) the file associated with this CFU is on a private pack.
PAX	2	For private files, the index of the account in the private volume set account directory.
R	0	Random flag, indicating whether (= 1) or not (= 0) the file associated with this CFU has random organization.
RD	0	Read has occurred flag, indicating whether (= 1) or not (= 0) a read CAL has been executed for the file associated with this CFU during this open.
S	0	Shared flag, indicating whether (= 1) or not (= 0) the DCB (s) associated with this CFU have the share specification.
SCFU	4	Word address of the secondary CFU ( if any ) associated with the current CFU.
SIZE	5	For consecutive files, a tally of the number of records currently existing in the file. For random files, a tally of the number of granules in the file.
SLIDES	0	For keyed files only, a tally of the number of master index granules at level 0 which are not reflected in a higher level index. If this value is 255, it indicates that a threshold has been exceeded which indicates that the upper level indices should be (re) built.
SREC	6	For keyed files only, the disk address of the final data granule in the file.
SW	0	Shared write flag, indicating whether (= 1) or not (= 0) a modification to the file is currently in progress.
TDA	5	For keyed files only either the disk address of the top of the upper level index structure if the upper exists, or zero.
W	0	Write flag, indicating whether (= 1) or not (= 0) the file contents have been modified during this open.
U	0	Update FIT flag, set by open if the FIT needs to be updated at close.



This appendix contains the formats for the three kinds of DCBs created by the monitor: files, devices, and labeled tape. Following each format, the parameter fields of the DCB are described in alphabetical sequence by their mnemonic. All referenced addresses have word resolution unless otherwise specified.

**FILE DCB**

Figure A-1 shows the format of the DCB for consecutive, keyed, and random files. All single fields are applicable to the three kinds of files. Fields shown with a heavy border depict differences between consecutive, keyed, and random. Shaded fields are not used by the DCB.

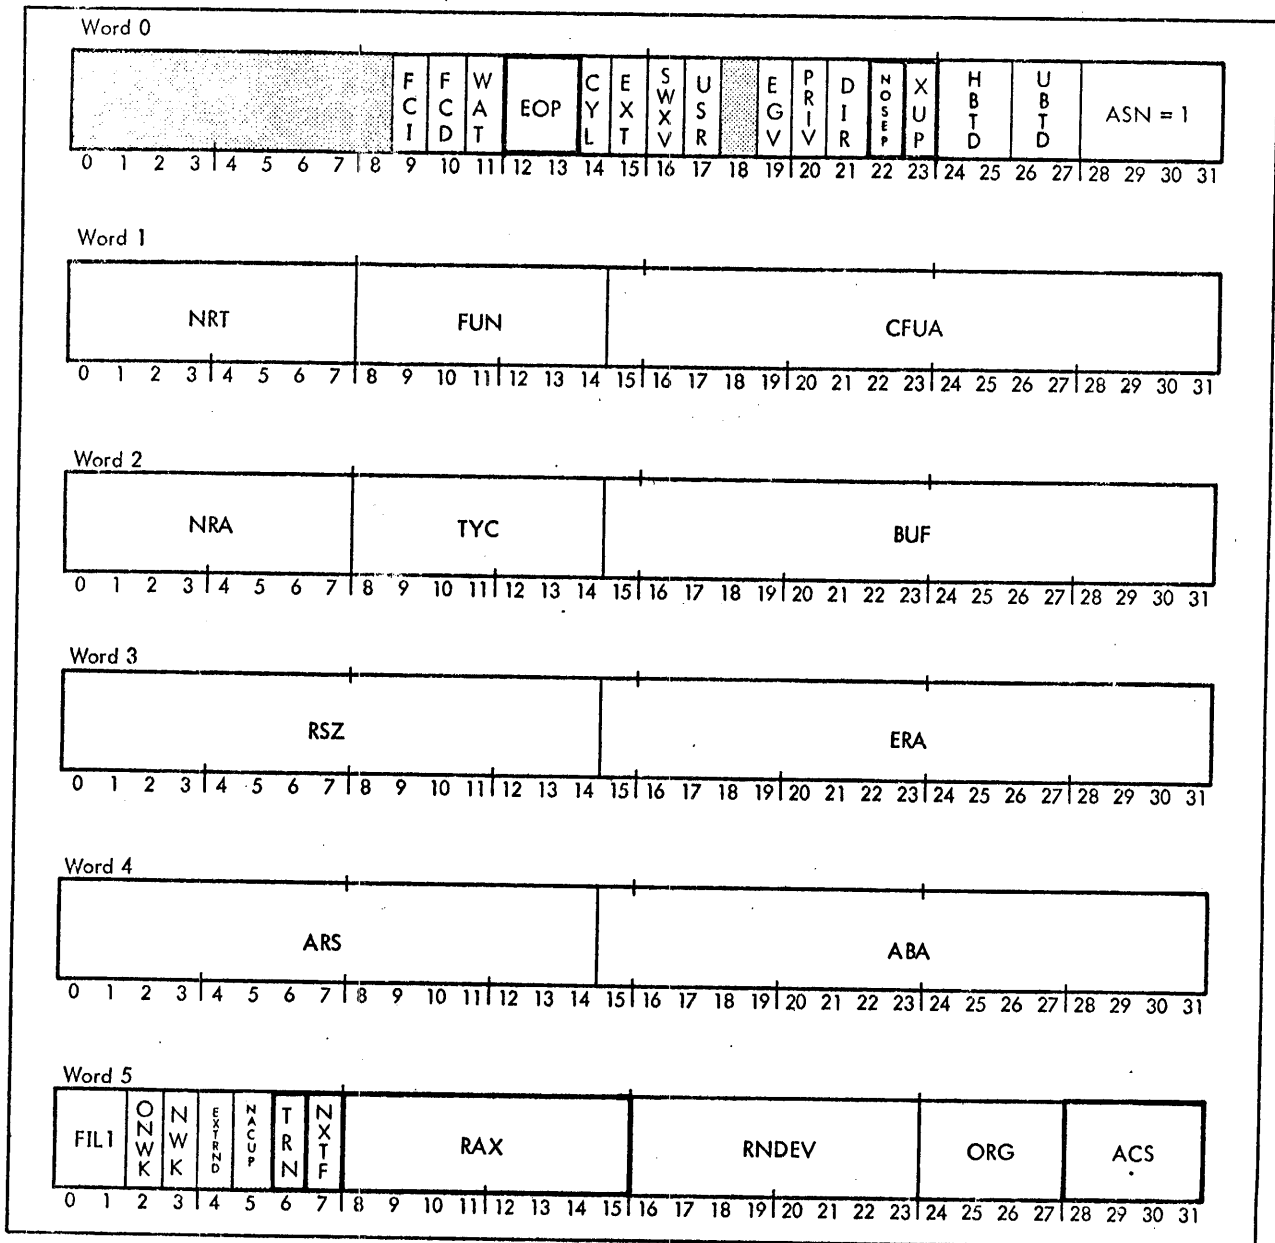


Figure A-1. Format of File DCB

CP-V TECHNICAL MANUAL

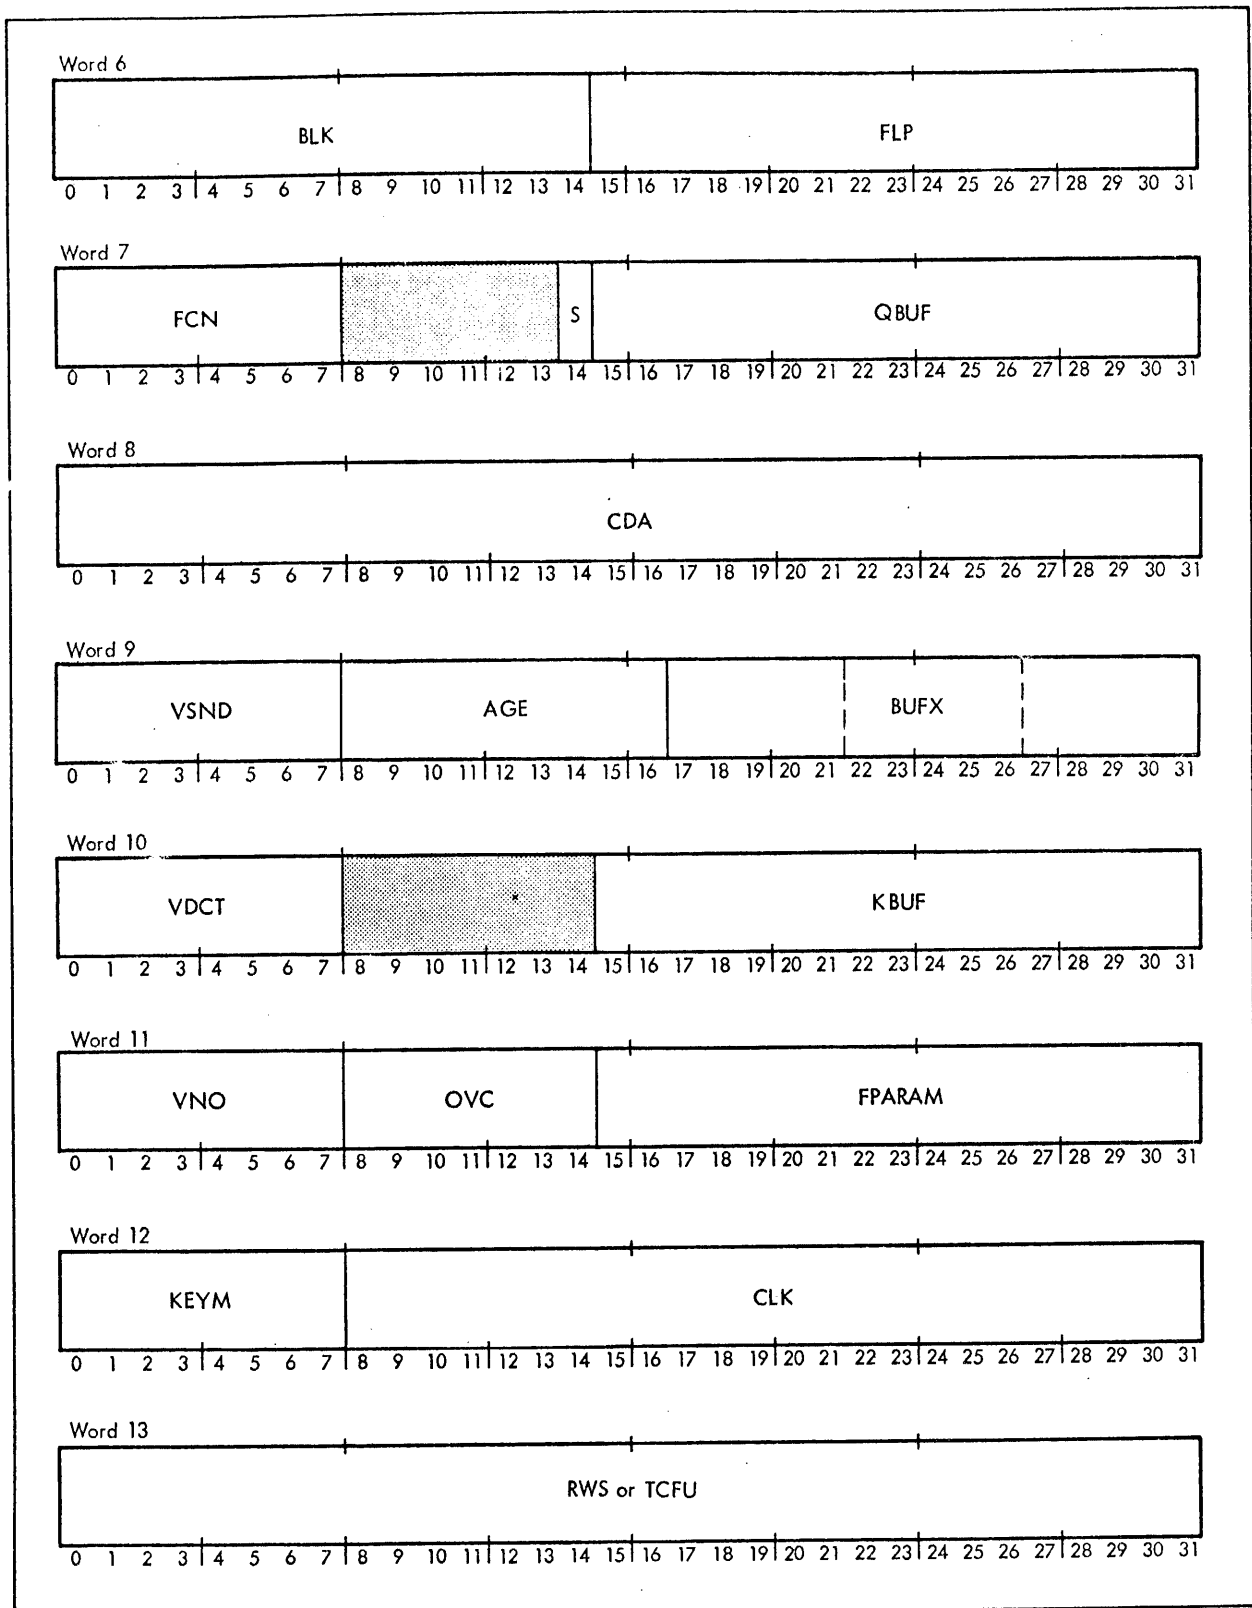


Figure A-1. Format of File DCB (cont.)

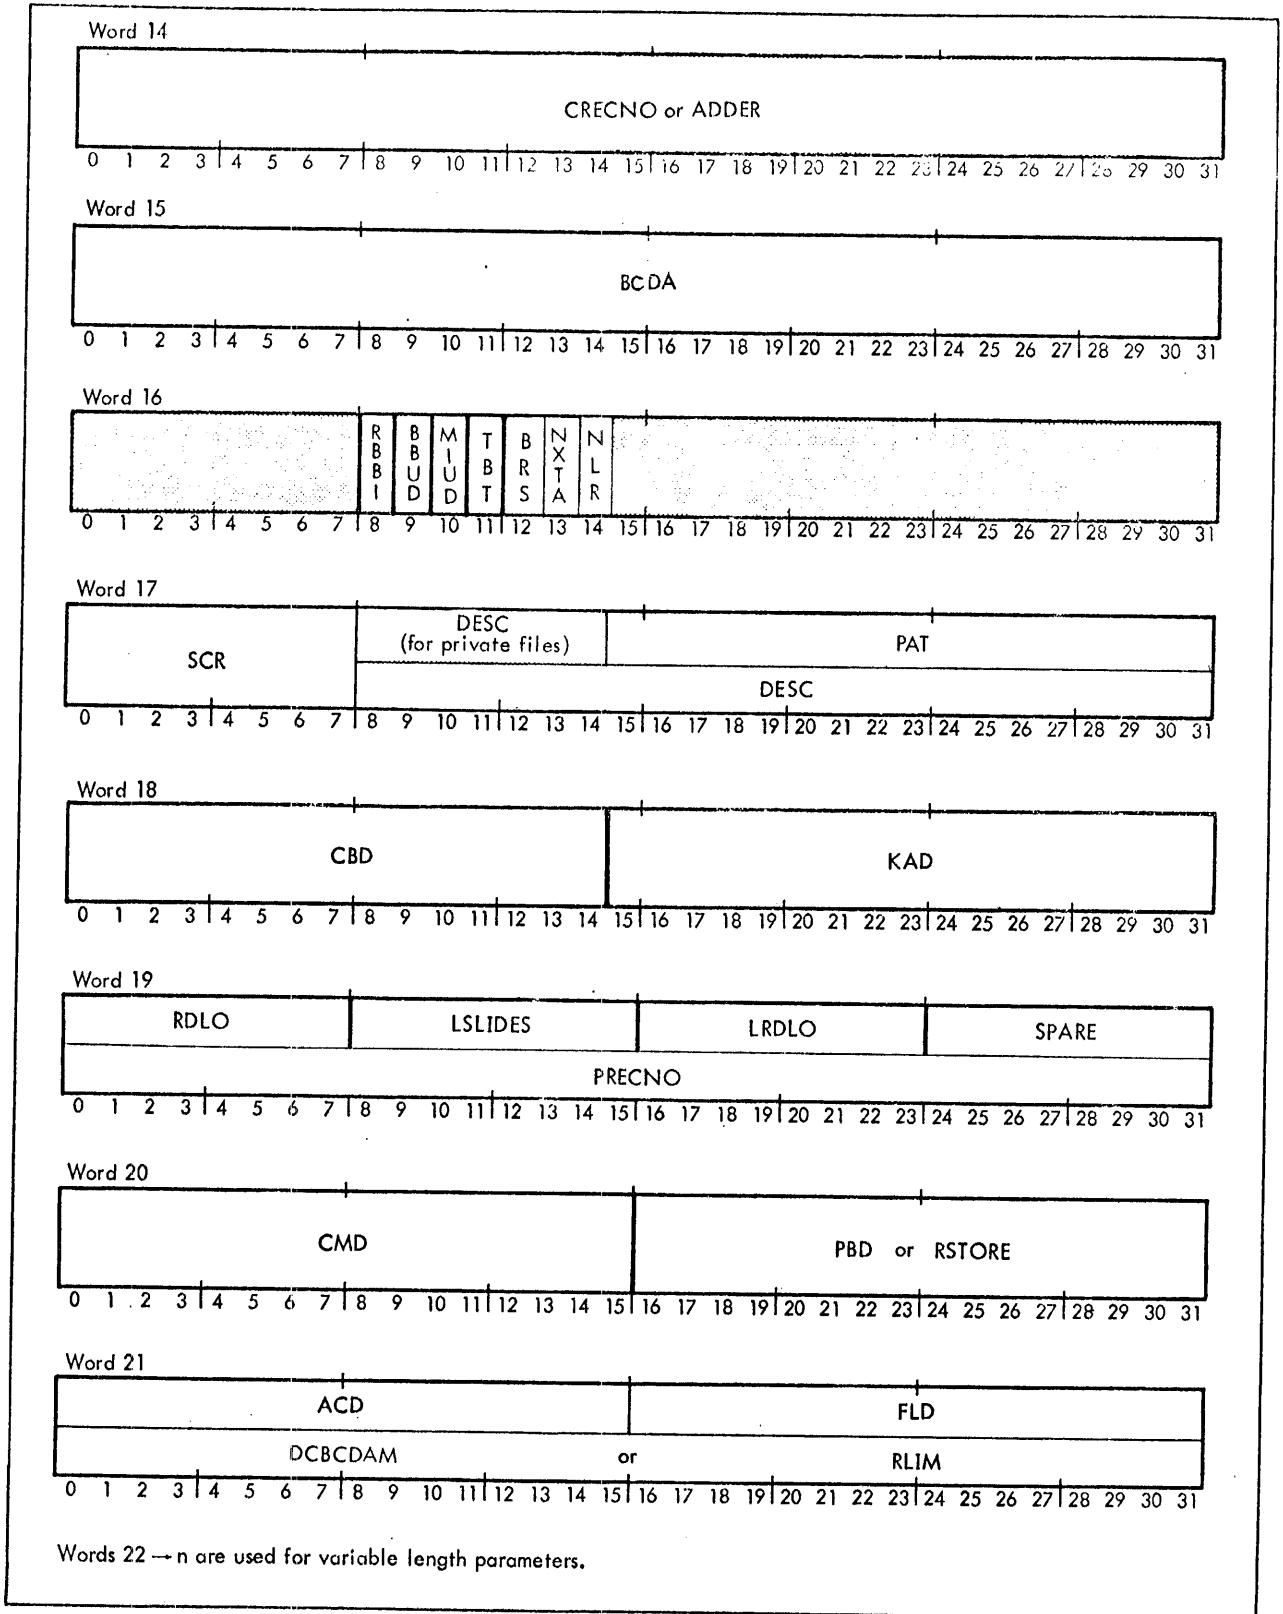


Figure A-1. Format of File DCB (cont.)

CP-V TECHNICAL MANUAL

<u>Field</u>	<u>Description</u>	<u>Word</u>
ABA	Contains the address of the user's routine that will handle abnormal conditions resulting from insufficient or conflicting information. (The monitor returns to ABA in the FPT if the abnormal condition is the result of a device abnormality.)	4
ACD	contains the word displacement to the user's account number in the DCB relative to the start of the variable length parameters. (FLP+ACD = FWA of the EBCDIC account number.)	21
ACS	is the file access indicator (0 = none specified and is treated as sequential, 1 = sequential, 2 = direct). ACS is only meaningful when a file is first written in the OUT or OUTIN mode. If a file has consecutive organization, OPEN always sets ACS to sequential (regardless of the access specified). If a file has keyed organization and access is not specified, OPEN leaves ACS unchanged and the residual ACS value applies. If a file has keyed organization and sequential access is specified, the keys written must be in ascending order. However, if the organization is keyed and direct access is specified, the keys can be written in any order (the monitor sorts them into ascending order).  ACS is not used by random files.	5
ADDER	contains the size of a single entry in the master index structure or directory for operations on keyed files or directories.	14
AGE	is used to measure the most recent activity on the DCB so that buffer truncation can be made more efficiently.	9
ARS	contains <ul style="list-style-type: none"> <li>1. the actual number of data bytes transferred to or from the user following a read or write.</li> <li>2. the number of records remaining to be skipped following a PRECORD operation that has terminated due to an end-of-file or a beginning-of-file condition.</li> </ul>	4
ASN	indicates the assignment type currently in effect for the DCB (0 = null, 1 = file, 2 = Xerox labeled tape, 3 = device, X'A' = ANS labeled tape).	0
BBUD	indicates whether or not the blocking buffer (BUF1) has been changed since it was last read or initialized (0 = unchanged, 1 = changed). This flag is used to determine whether or not BUF1 needs to be written out to the data granule specified in BCDA before truncating the buffer.  BBUD is not used by random files.	16
BCDA	contains the disk address of the data granule currently in the blocking buffer (BUF1).  BCDA is not used by random files.	15
BLK	contains <ul style="list-style-type: none"> <li>1. the byte count of the record segment pointed to by either CBD or PBD, depending upon the point in time. Not applicable to random files.</li> <li>2. the number of bytes to be transferred by the I/O routines whenever called.</li> </ul>	6 6
BRS	indicates whether or not the record segment pointed to be CBD or PBD, depending upon the point in time, is blocked (0 = unblocked, 1 = blocked).  BRS is not used by random files.  During an open BRS, indicates whether the 'TEST' option was indicated in the open FPT (0 = not test, 1 = test).	16

<u>Field</u>	<u>Description</u>	<u>Word</u>
BUF	contains the address of the user's buffer where the data record is to be read or written.	2
BUF <sub>X</sub>	contains three 5-bit subfields used to index into the table of pooled buffers available to the file management system. These indexes have varying significance depending on the current operation being performed.	9
CBD	contains the current byte displacement within the blocking buffer (BUF1). CBD specifies where the record segment associated with the key pointed to by CMD begins. When writing on the file, CBD = 0 if a data granule other than the last is being updated.  CBD is not used by random files.	18
CDA	contains <ol style="list-style-type: none"> <li>the disk address to be used by the I/O routines whenever called.</li> <li>a counter indicating the number of records to skip. Not applicable to random files.</li> </ol>	
CFUA	contains the address of the CFU associated with the file. During open or close operations, CFUA contains the address of the ACNCFU and FILCFU.	1
CLK	contains <ol style="list-style-type: none"> <li>the net number of data and Master Index granules allocated to or released from the file during this OPEN. Applicable to keyed and consecutive files. The field is a 23-bit signed integer with a guard bit in bit 8 that is used to prevent overflow into the KEYM field.</li> <li>the number of granules allocated to the file. Applicable to random files.</li> </ol>	12
CMD	contains <ol style="list-style-type: none"> <li>the byte displacement to the current key entry in the Master Index Buffer (BUF2) for keyed files. CMD, along with TRN and DCBCDAM, points to the current position in the file. For consecutive files, CMD contains a word position in the granule pointed to by DCBCDAM. None of this is applicable to random files.</li> <li>the byte displacement to the current entry in the Account Directory or File Directory index buffer (BUF2) when the file is being opened or closed.</li> </ol>	20
CRECNO	contains the current record number. It is set to <ol style="list-style-type: none"> <li>0 if at the beginning of the file.</li> <li>the number of records in the file (obtained from TDA in the CFU) if at the end of the file.</li> <li>the sequential record number of the record most recently read or written.</li> </ol> CRECNO is only used for consecutive files.	14
CYL	specifies whether the file assigned to the DCB is to be allocated by granules or cylinders (0 = granule allocation, 1 = cylinder allocation). Only meaningful for public files.	0

<u>Field</u>	<u>Description</u>	<u>Word</u>
DCBCDAM	is used when CFUA points to a user CFU for keyed or random files and contains the disk address of the current index half-granule in the Master Index Buffer (BUF2). If CFUA points to the Account or File Directory CFU, CDAM in FILCFU or ACNCFU contains the disk address of the current index half-granule in BUF2. For consecutive files, DCBCDAM contains a disk address of a granule, reflecting (in conjunction with CMD) the location in the file at which the most recent data transfer operation took place.	21
DESC	is used as temporary storage for file descriptors during open and close. For private files, DESC resides in bits 8-14.	17
DIR	indicates the direction of the read operation (0 = forward, 1 = reverse). DIR is not used by random files.	0
EGV	is the event-given flag and indicates whether or not the completion code posted in the TYC field has been communicated to the user's program by the CHECK routine (0 = no, 1 = yes).  The CHECK routine is called either directly by the user or indirectly by the monitor, depending upon the WAIT, ERR, and ABN options in the FPT.	0
EOP	is the ending operation indicator (0 = other, e.g., rewind, 1 = read, 2 = write). Specifies the type of I/O operation currently or last performed. EOP is not used by random files.	0
ERA	contains the address of the user's routine that will handle error conditions resulting from insufficient or conflicting information. (The monitor returns to the ERA in the FPT if the error condition is the result of a device failure.)	3
EXT	is the file extension flag and indicates whether OPEN is to position to the beginning or end of a specified file (0 = beginning-of-file, 1 = end-of-file).	0
EXTRND	is set to one if the NLR field is to be logically appended to the RSTORE field (NLR being the most significant field) for a random file. Otherwise, it is set to zero.	5
FCD	indicates whether the DCB is opened or closed (0 = closed, 1 = opened).	0
FCI	indicates whether the DCB has ever been closed. This flag is set when the DCB is first closed and then never reset (0 = DCB has never been closed, 1 = DCB has been previously opened and closed).	0
FCN	indicates the current number of I/O operations that have been initiated but not completed, for this DCB.	7
FIL1	indicates the file option last specified (0 = none specified and is treated as release, 1 = release, 2 = save).	5
FLD	contains the word displacement to the file name in the DCB relative to the start of the variable length parameters (FLD + FLP = FWA of the EBCDIC file name).	21
FLP	contains the address of the start of the variable length parameters in the DCB (called the file list-pointer).	6
FPARAM	contains the receiving address of the user's 90-word buffer to which the variable length parameters from the file's FIT are to be passed.	11
FUN	indicates the file mode function (0 = null, 1 = IN, 2 = OUT, 4 = INOUT, 8 = OUTIN). Since the monitor does not distinguish between INOUT and OUTIN on random files, OUTIN is set the same as INOUT for random files.	1
HBTD	is the I/O handler's byte displacement indicator and is used whenever the I/O routines are called to specify the byte displacement within QBUF into which the data transfer is to begin.	0

CP-V TECHNICAL MANUAL

<u>Field</u>	<u>Description</u>	<u>Word</u>
IMT	is the image-type flag and indicates the type of key entry in BUF2 (0 = Account or File Directory key, 4 = user's file key).	16
KAD	contains <ol style="list-style-type: none"> <li>the address of the key specified by the user in the read or write FPT. If a consecutive file is being written, KAD points to the dummy key (in the VLP). If a consecutive file is being read, KAD contains 0. Applicable to keyed and consecutive files.</li> <li>the address of the account number or file name when opening or closing the file.</li> </ol>	18
KBUF	contains <ol style="list-style-type: none"> <li>the address of the buffer containing the key most recently accessed in the Master Index or File Directory. The field is set up by the M:DCB procedure and points to an 8-word buffer following the VLPs. Not applicable to random files except during open.</li> <li>the address of the word buffer containing the relative granule number of the first sector to be used in the I/O transfer. Applicable to random files only.</li> <li>the address of an 8-word buffer in the DCB that contains the TEXTC key or records read sequentially from a keyed file.</li> </ol>	10
KEYM	contains <ol style="list-style-type: none"> <li>the maximum length, in bytes, of the keys in the file pointed to by the DCB. Applicable to keyed files. Maximum value is 31.</li> <li>the type of device that the random file is to be allocated on (0 = allocate on RAD or DP, X'7' = allocate on RAD, X'B' = allocate on DP). Applicable to random files.</li> </ol>	12
LRDLO	contains the limiting number of contiguous index half-granules that can be allocated in level 0 and not be reflected in level 1 before the flag, which signals CLOSE to reconstruct the higher level index structure, is set (i.e., before SLIDES in the CFU is set equal to 255).  LRDLO is only used for keyed files.	19
LSLIDES	only has meaning if a multilevel index exists and contains <ol style="list-style-type: none"> <li>the limiting number of index half granules that can be allocated in level 0 and not be reflected in level 1 before the flag, which signals CLOSE to reconstruct the higher level index structure, is set.</li> <li>the value 255, which means that once a higher level index structure exists, it is not to be reconstructed.</li> </ol> LSLIDES is only used for keyed files.	19
MIUD	indicates whether or not the Master Index Buffer (BUF2) has been changed since it was last read or initialized (0 = unchanged, 1 = changed). This flag is used to determine whether or not BUF2 needs to be written out to the sector specified in either DCBCDAM or CDAM in FILCFU or ACNCFU before truncating the buffer.	16
NACUP	indicates whether the file's descriptors indicate that the last access date is not to be updated (0 = may be updated, 1 = may not be updated).	5
NLR	indicates whether or not the record segment pointed to by CBD is the first record in a continued data record (0 = second or nth record segment, 1 = first or only record segment). NLR is only meaningful during a WRITE operation.	16

<u>Field</u>	<u>Description</u>	<u>Word</u>
NOSEP	<p>specifies whether or not index granules are to be allocated like data granules (0 = no, 1 = yes). Normally, index granules are allocated on DP. However, if all the devices of the normally allocated type are saturated, the system attempts to allocate on an alternate device. The order of allocation for data granules is DP and RAD regardless of the NOSEP flag. The order of allocation for index granules also is DP and RAD if the NOSEP flag is reset. If the NOSEP flag is set, index granules are allocated like data granules. This flag has no meaning for private files.</p> <p>NOSEP is not used by random files.</p>	0
NRA	<p>indicates the number of recovery tries that may be attempted before a device error message is to be logged.</p>	2
NRT	<p>indicates the number of recovery tries remaining before a device error message is to be logged.</p>	1
NWK	<p>indicates whether or not NEWKEY was specified in the M:WRITE FPT (0 = replace an existing key, if the key does not exist, take an abnormal return; 1 = write a new key, if the key already exists, take an abnormal return). If ONWK is set, the NWK flag is ignored.</p> <p>NWK is only used for keyed files.</p>	5
NXTA	<p>is the next account indicator and specifies whether this account (i. e., the account number in the DCB/JIT) or the next account in the Account Directory (i. e., the one following the account named in the DCB) is to be assigned to the DCB at OPEN (0 = this account, 1 = the next account). If an account number is not specified in the DCB and the NXTA indicator is set, the first account in the Account Directory is put in the DCB and nothing more is done unless NXTF is also set. The previous is not applicable for private volumes. After a file is open, the bit is set to 1 if the DCB is open to a star file (see Glossary); otherwise, it is set to 0.</p>	16
NXTF	<p>is the next file indicator and specifies whether this file (i. e., the file named in the DCB/FPT) or the next file in the File Directory (i. e., the one following the file named in the DCB) is to be assigned to the DCB at OPEN. If a file name is not specified (in either the DCB or FPT), the first name in the File Directory is put in the DCB and assigned (0 = this file, 1 = next file).</p>	5
ONWK	<p>indicates whether or not ONEKEY was specified in the M:WRITE FPT (0 = check NWK flag, 1 = if the key already exists, replace the corresponding record, otherwise write a new record).</p> <p>ONWK is only used for keyed files.</p>	5
ORG	<p>is the file organization indicator (0 = none specified and is treated as consecutive, 1 = consecutive, 2 = keyed, 3 = random).</p>	5
OVC	<p>is the open volume count and only has meaning for private files.</p> <ol style="list-style-type: none"> <li>1. for consecutive private files, OVC indicates whether or not the volume pointed to by VNO is opened or not (0 = no, 1 = yes).</li> <li>2. for keyed or random private files, OVC contains a count of the numbers of volumes that have been opened.</li> </ol>	11
PAT	<p>contains the allocation table address of the private volume pointed to by VNO. Only has meaning for private files.</p>	17



<u>Field</u>	<u>Description</u>	<u>Word</u>
PBD	is the previous buffer displacement indicator, specifying at which byte in the blocking buffer (BUF1) the previous record segment begins.  PBD is not used by random files.	20
PRECNO	contains the direction (+ or -) and the number of records that must be skipped from the position indicated in CRECNO prior to a data transfer operation (read, write, or delete).  PRECNO is only used for consecutive files.	19
PRIV	indicates whether the file assigned to the DCB is public or private (0 = public, 1 = private). Public files reside on public devices and private files reside on private volume sets.	0
QBUF	contains  1. the buffer address to be used by the I/O routines whenever called.  2. the address within the user's buffer where the next record segment begins.  QBUF, 2 is not applicable to random files.	7
RAX	controls read ahead. If set to X'FF', no read ahead is possible. If set to zero, no read ahead is in progress. Otherwise, RAX contains an index into read ahead tables.	5
RBB1	is the release blocking buffer inhibit flag and indicates whether or not the blocking buffer (BUF1) should be released during end-action after the data granule has been read into (BUF1) and the record segment has been transferred to the user's buffer. (0 = release BUF1, 1 = do not release BUF1.)  RBB1 is not used by random files.	16
RDLO	contains a tally (up to 255) of the number of index half-granules that are read or inserted at level 0 to locate the position of a user-specified key entry at level 0. If RDLO is greater than LRDLO, the flag, which signals CLOSE to reconstruct the higher level index structure, is set.  RDLO is only used for keyed files.	19
RLIM	temporarily contains the number of granules specified in the RSTORE option on the ASSIGN control command during the ASSIGN/DCB merge. The first halfword contains X'6E4C' which is used as a flag to indicate that RSTORE was specified.  RLIM is used by random files only.	21
RNDEV	contains the type of device requested for file allocation (0 = none specified and for private files gets changed to X'B', 7 = RAD, and X'B' = DP).	5
RSTORE	contains the number of granules to be allocated to the file.  RSTORE is used by random files only. If RSTORE value is zero when a random file is created, an abnormal return is made with a code of X'14'. Bits 8-15 of word 5 are used by random files as a high order extension of this field if the EXTRAND bit is set.	20
RSZ	indicates the default record size, in bytes.	3
RWS	indicates  1. the requested number of bytes to be read or written from the user's buffer (BUF). During the I/O operation, RWS is decremented by the value in BLK each time that a record segment is either output or blocked. At the termination of the I/O operation, RWS is set equal to ARS. Applicable to keyed and consecutive files.  2. the requested number of bytes to be read or written from the user's buffer (BUF). At the termination of the I/O operation, RWS is set equal to ARS. Applicable to random files.	13

CP-V TECHNICAL MANUAL

<u>Field</u>	<u>Description</u>	<u>Word</u>																																										
S	contains the value of the S field from the mode specification in the Open Cal FPT. S = 1 means SHARE; S = 0 means EXCLUSIVE.	7																																										
SCR	indicates <ol style="list-style-type: none"> <li>the byte length of the key portion of the entries in the Master Index currently referenced by the DCB. This can be the Master Index for the Account Directory, the File Directory, or the user's file.</li> <li>this field is used to temporarily contain the contents of KEYM field. Applicable to random files only.</li> </ol>	17																																										
SPARE	contains the number of spare byte positions to be left unused in the end of the current index half-granule in the event that the key to be added is the last key in the file.  SPARE is only used for keyed files.	19																																										
SWXV	is the switch volume flag and indicates whether or not the current volume is to be switched to the next volume after all updated buffers have been output to the current volume (0 = no, 1 = yes). Only used for consecutive private files.	0																																										
TBT	not meaningfully used for files; however, the flag does get set and reset.	16																																										
TCFU	contains the address of the user CFU during CLOSE.	13																																										
TRN	indicates, for keyed files, whether the file is positioned before or after the data record whose key entry is pointed to by CMD (0 = after, 1 = before). For consecutive files, this bit is set only if the most recently executed operation on the file was a read backwards.	5																																										
TYC	indicates the type of completion of an I/O operation.	2																																										
	<table border="1"> <thead> <tr> <th><u>TYC Code</u></th> <th><u>Corresponding Error/ Abnormal Code</u></th> <th><u>Meaning</u></th> </tr> </thead> <tbody> <tr> <td>0</td> <td>0</td> <td>normal without device I/O transfer</td> </tr> <tr> <td>1</td> <td>0</td> <td>normal with a device I/O transfer</td> </tr> <tr> <td>2</td> <td>7</td> <td>lost data</td> </tr> <tr> <td>3</td> <td>10</td> <td>beginning-of-tape</td> </tr> <tr> <td>4</td> <td>4</td> <td>beginning-of-file</td> </tr> <tr> <td>5</td> <td>1C</td> <td>end-of-reel</td> </tr> <tr> <td>6</td> <td>5</td> <td>end-of-data</td> </tr> <tr> <td>7</td> <td>6</td> <td>end-of-file</td> </tr> <tr> <td>8</td> <td>41</td> <td>read error</td> </tr> <tr> <td>9</td> <td>45</td> <td>write error</td> </tr> <tr> <td>A</td> <td>57</td> <td>public devices/private volume-set saturated</td> </tr> <tr> <td>B</td> <td>0</td> <td>SLIDES is 255</td> </tr> <tr> <td>C</td> <td>0</td> <td>partial higher level index built</td> </tr> </tbody> </table>	<u>TYC Code</u>	<u>Corresponding Error/ Abnormal Code</u>	<u>Meaning</u>	0	0	normal without device I/O transfer	1	0	normal with a device I/O transfer	2	7	lost data	3	10	beginning-of-tape	4	4	beginning-of-file	5	1C	end-of-reel	6	5	end-of-data	7	6	end-of-file	8	41	read error	9	45	write error	A	57	public devices/private volume-set saturated	B	0	SLIDES is 255	C	0	partial higher level index built	
<u>TYC Code</u>	<u>Corresponding Error/ Abnormal Code</u>	<u>Meaning</u>																																										
0	0	normal without device I/O transfer																																										
1	0	normal with a device I/O transfer																																										
2	7	lost data																																										
3	10	beginning-of-tape																																										
4	4	beginning-of-file																																										
5	1C	end-of-reel																																										
6	5	end-of-data																																										
7	6	end-of-file																																										
8	41	read error																																										
9	45	write error																																										
A	57	public devices/private volume-set saturated																																										
B	0	SLIDES is 255																																										
C	0	partial higher level index built																																										
UBTD	is the byte displacement indicator, specifying at which byte in the user's buffer (BUF) the data record begins.	0																																										

CP-V TECHNICAL MANUAL

<u>Field</u>	<u>Description</u>	<u>Word</u>
USR	indicates whether the JOB account number is the same as the account number specified in the DCB (0 = yes, 1 = no).	0
VDCT	contains the DCT index of the device on which the volume (in a private volume set) pointed to by VNO is mounted. Only meaningful for private files.	10
VNO	contains the volume number of the private volume currently being referenced via the DCB. Volume number is the position (starting with one) of a volume within the DCB's SN list. The SN list in the DCB has a fixed order and comes from the serial number table on the primary volume of a private volume set. Only meaningful for private files.	11
VSND	contains the word displacement to the serial number table of the private volume set (i.e., the SN list) in the DCB relative to the start of the Variable Length Parameters (FLP + VSND = the control word of the SN list).	9
WAT	is the wait flag and indicates whether or not WAIT was specified in the FPT (0 = no, 1 = yes).	0
XUP	indicates whether or not a higher level index structure is in the process of being reconstructed or constructed (0 = either that there is no higher level index or that the higher level index is complete, 1 = that the higher level index is being built). Only meaningful for keyed files.	0

VARIABLE LENGTH PARAMETERS

22 → n

Each variable length parameter entry is preceded by a control word of the following form:

Byte 0 = a code number (see Table A-1) identifying the parameter which follows.

Byte 1 = code for the entry position (00 = more parameter entries to follow, 01 = last parameter entry).

Byte 2 = number of significant data words in the parameter entry.

Byte 3 = total number of words reserved for the entry, not including the control word (that is, maximum entry length).

Table A-1. Variable Length Parameter Codes

Code	Parameter Type
01	File name (the first byte of which contains the number of characters in the name).
02	Account number.
03	Password.
04	Expiration date.
05	READ account numbers.
06	WRITE account numbers.
07	SN/INSN serial numbers.
08	OUTSN serial numbers.
09	File information (see Figure A-2).
0A	Modification date.
0B	SYNON name.
0C	File information (see Figure A-2).
0D	File size.
0E	Creation date.
0F	Last access date.
10	Backup date.
11	Descriptors.
12	Search open mask.
13	Reserved for later use.
14	Execute account numbers.
15	Execute vehicle
16	Account list
17	Permission bits corresponding to 16 above.
18	For use by installation.
19	For inclusion of device open prime PLIST.

CP-V TECHNICAL MANUAL

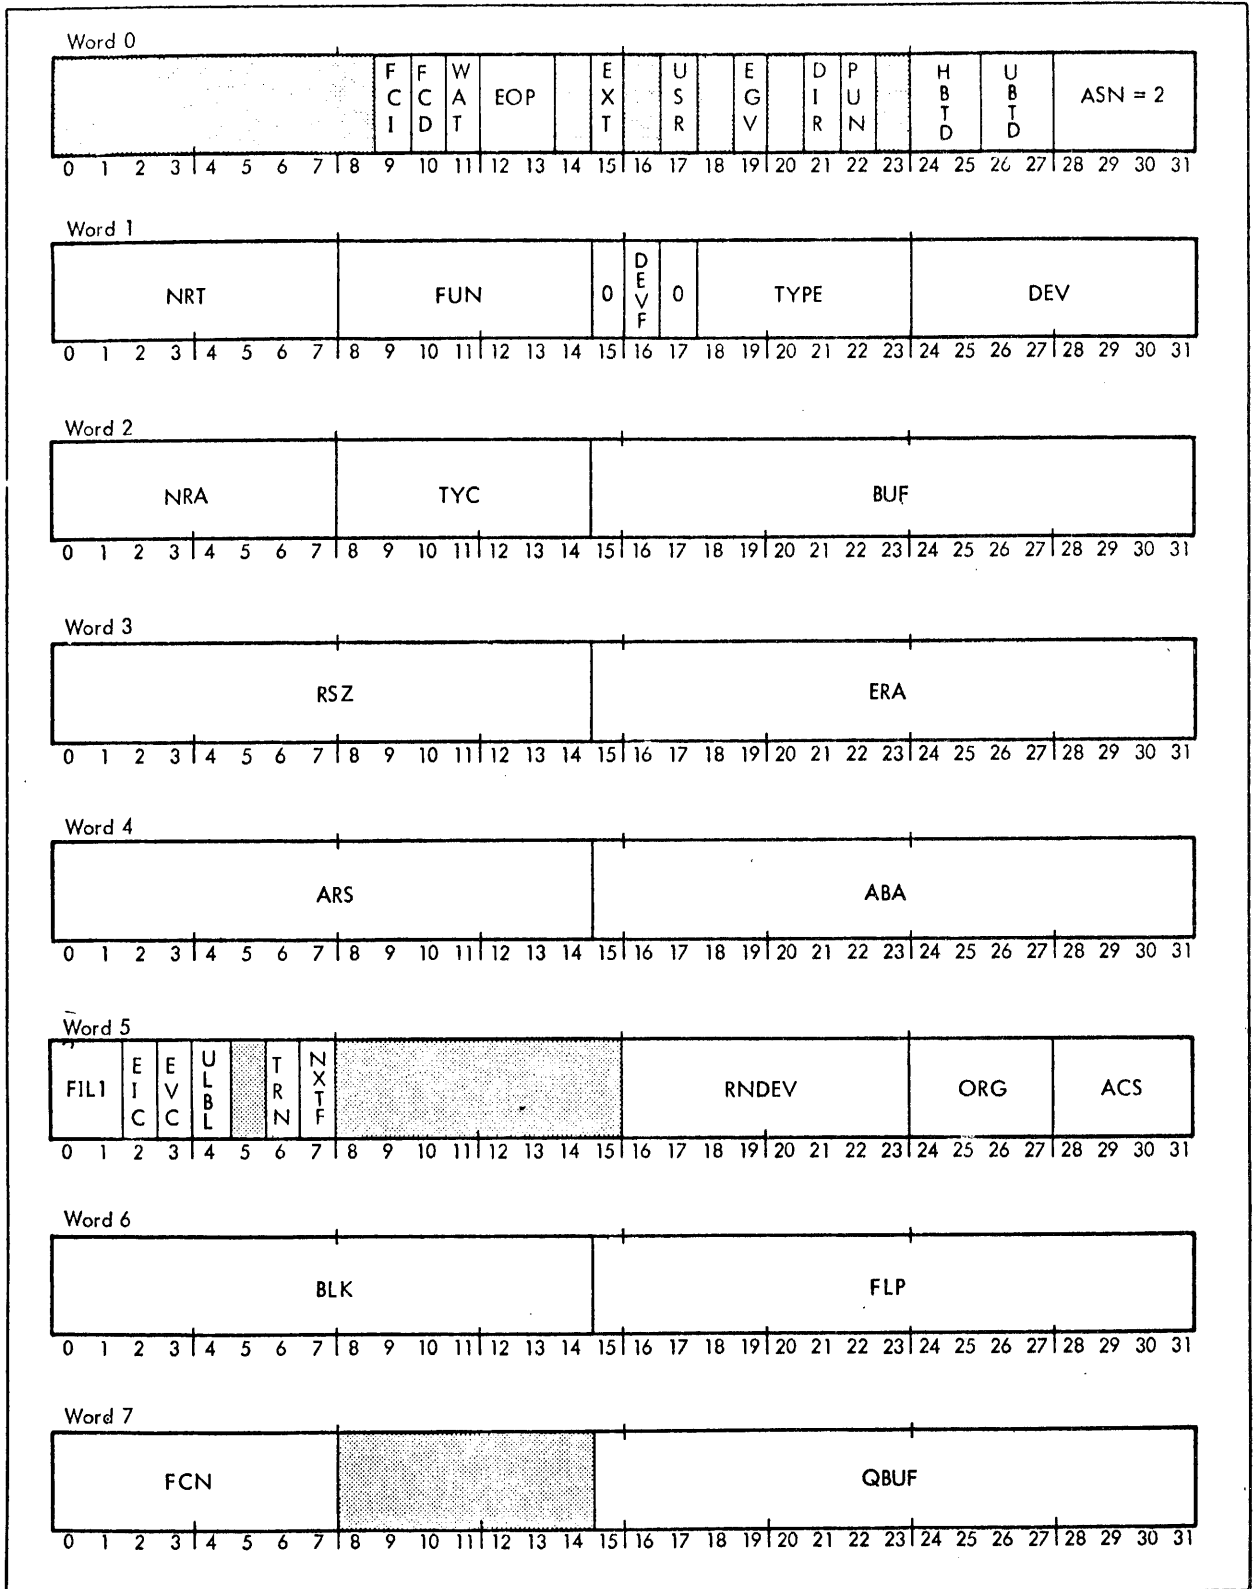


Figure A-4. Format of Xerox Labeled Tape DCB

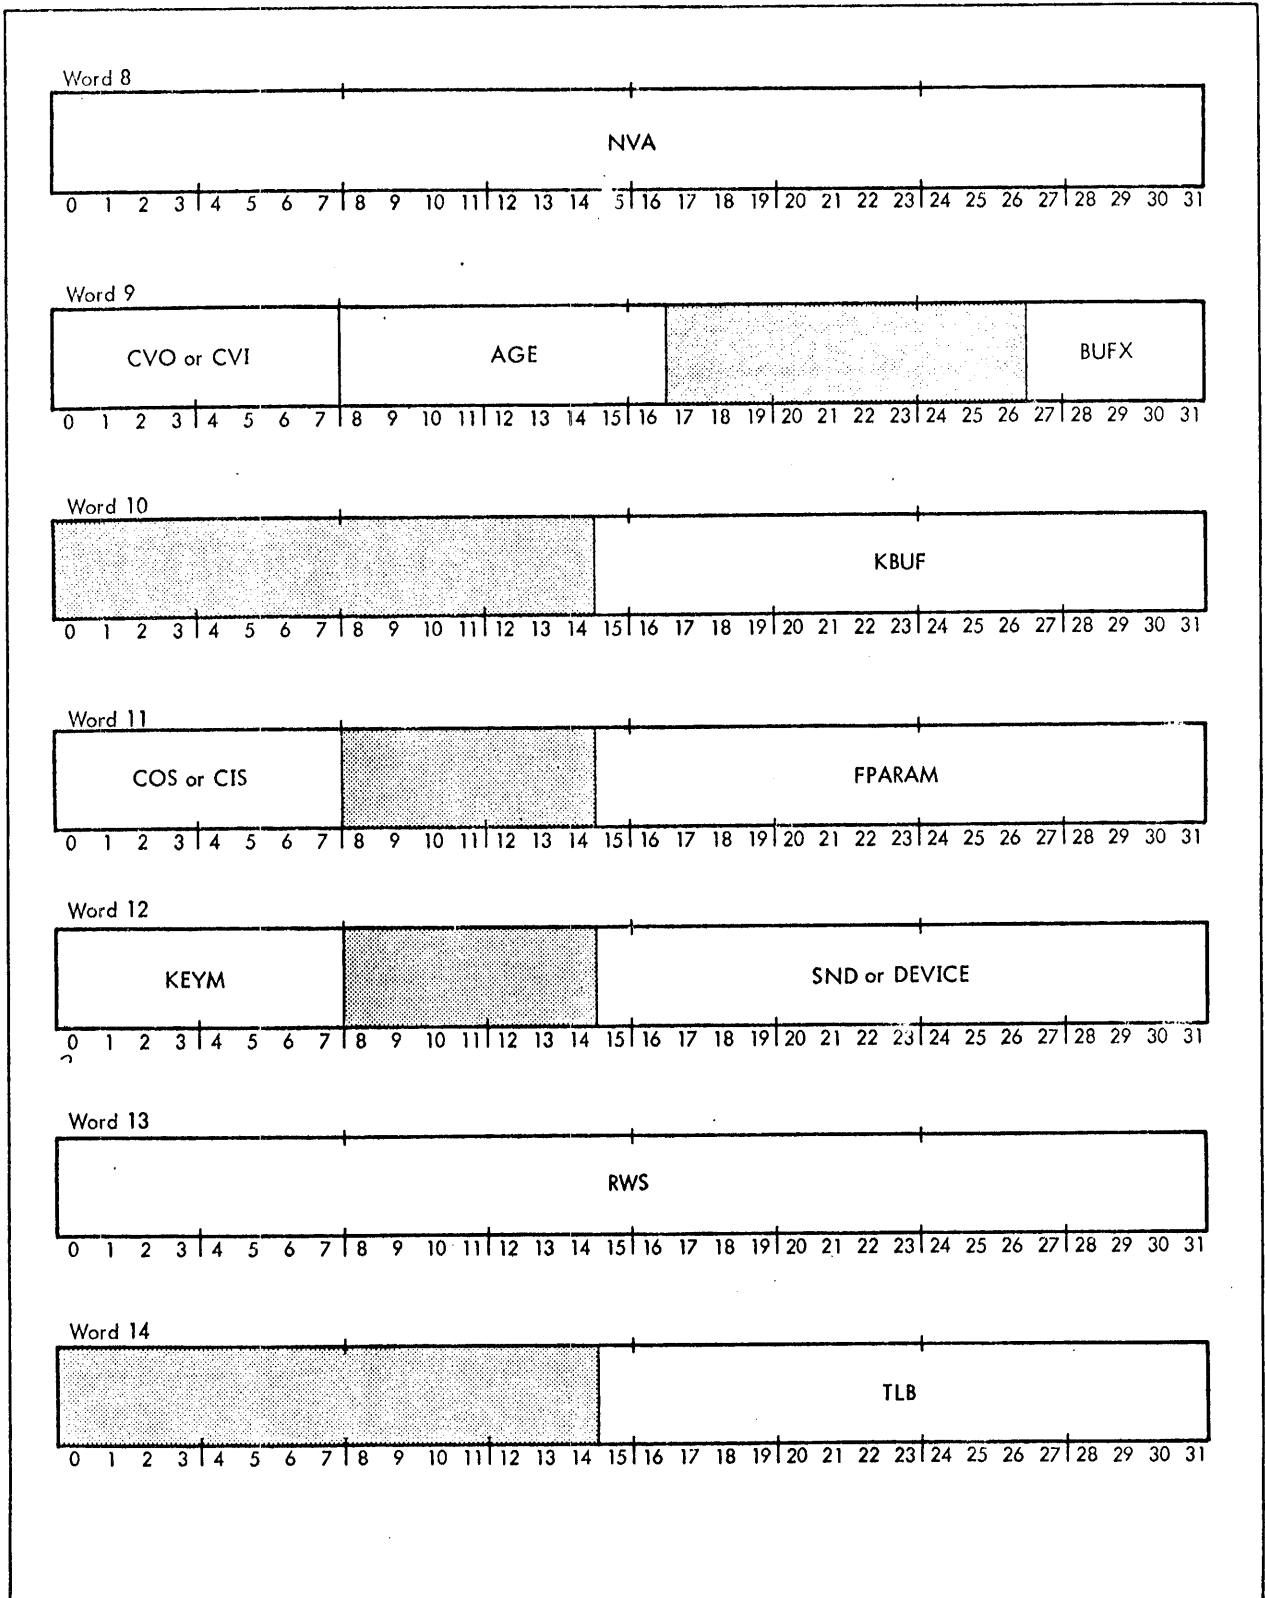


Figure A-4. Format of Xerox Labeled Tape DCB (cont.)

CP-V TECHNICAL MANUAL

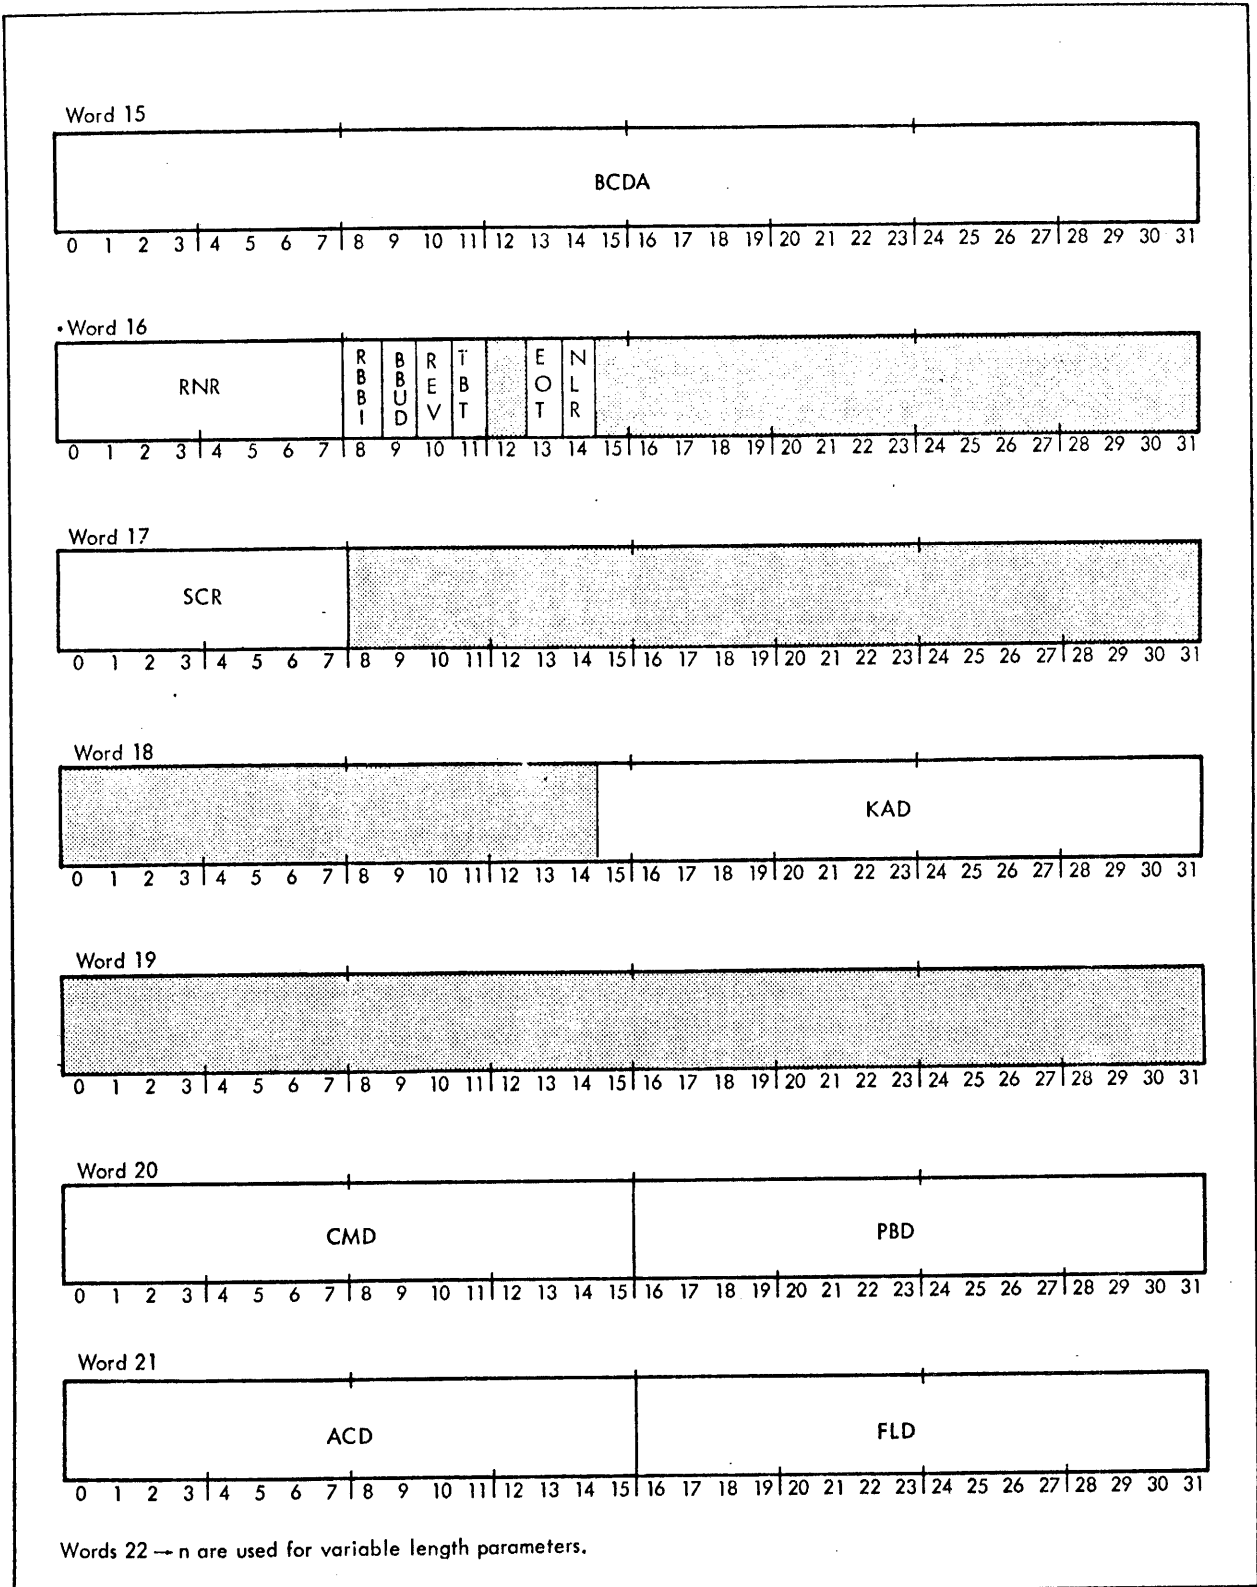


Figure A-4. Format of Xerox Labeled Tape DCB (cont.)

CP-V TECHNICAL MANUAL

<u>Field</u>	<u>Description</u>	<u>Word</u>
ABA	contains the address of the user's routine that will handle abnormal conditions resulting from insufficient or conflicting information. (The monitor returns to ABA in the FPT if the abnormal condition is the result of a device abnormality.)	4
ACD	contains the word displacement to the users account number in the DCB relative to the start of the variable length parameters. (FLP + ACD = FWA of the EBCDIC account number.)	21
ACS	is the file access indicator (0 = none specified and is treated as sequential, 1 = sequential, 2 = direct). If a file has keyed organization, the keys written must be in ascending order regardless of the access specified.	5
AGE	is used to measure the most recent activity on the DCB so that buffer truncation can be made more efficiently.	9
ARS	contains <ol style="list-style-type: none"> <li>1. the actual number of data bytes transferred to or from the user following a read or write.</li> <li>2. the number of records remaining to be skipped following a PRECORD operation that has terminated due to an end-of-file or a beginning-of-file condition.</li> </ol>	4
ASN	indicates the assignment type currently in effect for the DCB (0 = null, 1 = file, 2 = Xerox labeled tape, 3 = device, X'A' = ANS labeled tape).	0
BBUD	indicates whether or not the blocking buffer (BUF1) has been changed since it was last read or initialized (0 = unchanged, 1 = changed). The monitor uses this flag to determine whether or not BUF1 needs to be written out to the data granule specified in BCDA before truncating the buffer.	16
BCDA	contains the number of either the current or last accessed entry in the blocking buffer (BUF1), depending upon the point in time. An entry in a Labeled Tape block consists of a key, control information, and the associated record segment. Entries are numbered from 1 to n.	15
BLK	contains <ol style="list-style-type: none"> <li>1. the byte count of the record segment pointed to by either CBD or PBD, depending upon the point in time.</li> <li>2. the number of bytes to be transferred by the I/O routines whenever called.</li> </ol>	6
BUF	contains the address of the user's buffer where the data record is to be read or written, or where user trailer labels are to be read.	2
BUFX	contains the index of the blocking buffer.	9
CIS	contains the relative position of the serial number (in the SN list) of the magnetic tape reel used for current file input.	11
CMD	contains the byte displacement to the current entry in the blocking buffer (BUF1). An entry in a Labeled Tape block consists of a key, control information, and the associated record segment.	20
COS	contains the relative position of the serial number (in the SN list) of the magnetic tape reel used for current file output.	11

<u>Field</u>	<u>Description</u>	<u>Word</u>
CVI	indicates the relative volume number of the current input tape within the current file. CVI is taken from the beginning-of-file sentinel, which appears at the beginning of file and at the beginning of each reel, if the file is continued on more than one reel.	9
CVO	indicates the relative volume number of the current output tape with respect to the current file. CVO is recorded in the beginning-of-file sentinel which is written at the beginning of the file and at the beginning of each reel, if the file is continued on more than one reel.	9
DEV	contains the DCT index of the device assigned to the DCT. DEV is only meaningful if DEVF = 1. When DEVF = 0, the field is defined as OPLB.	1
DEVF	indicates whether the DCB is assigned to a device or an operational label. (0 = operational label, 1 = device.)	1
DEVICE	contains the EBCDIC name specified on the DEVICE option in the M:OPEN call. This use is only transient, and the field is later overlaid by SND.	12
DIR	indicates the direction of the read operations (0 = forward, 1 = reverse).	0
EGV	is the event-given flag and indicates whether or not the completion code posted in the TYC field has been communicated to the user's program by the CHECK routine (0 = no, 1 = yes). The CHECK routine is called either directly by the user or indirectly by the monitor, depending upon the WAIT, ERR, and ABN options in the FPT.	0
EIC	indicates whether or not the last block read from a consecutive file was in error and that a validity check on the control information revealed inconsistencies (0 = no, 1 = yes).	5
EOP	is the ending operation indicator (0 = other, e.g., rewind, 1 = read, 2 = write). Specifies the type of I/O operation currently or last performed.	0
EOT	indicates whether or not the physical end-of-tape mark has been encountered (0 = no, 1 = yes).	16
ERA	contains the address of the user's routine that will handle error conditions resulting from insufficient or conflicting information. (The monitor returns to the ERA in the FPT if the error condition is the result of the device failure.)	3
EVC	indicates whether or not the last block read from a consecutive file was in error but a validity check on control information revealed no inconsistencies (0 = no, 1 = yes).	5
EXT	is the file extension flag and indicates whether OPEN is to position a tape at the beginning or end of a specified file (0 = beginning-of-file, 1 = end-of-file).	0
FCD	indicates whether the DCB is opened or closed (0 = closed, 1 = opened).	0
FCI	indicates whether the DCB has ever been closed. This flag is set when the DCB is first closed and then never reset (0 = DCB has never been closed, 1 = DCB has been previously open and closed).	0
FCN	indicates the current number of I/O operations that have been initiated but not completed, for this DCB.	7
FIL1	indicates the file option specified when the DCB was last opened (0 = none specified, 1 = release, 2 = save).	5
FLD	contains the word displacement to the file name in the DCB relative to the start of the variable length parameters (FLD + FLP = FWA of the EBCDIC file name).	21



CP-V TECHNICAL MANUAL

<u>Field</u>	<u>Description</u>	<u>Word</u>
FLP	contains the address of the variable length parameters in the DCB (called the file list-pointer).	6
FPARAM	contains the receiving address of the user's 90-word buffer to which the variable length parameters from the file's FIT are to be passed.	11
FUN	indicates the file mode function (0 = null, 1 = IN, 2 = OUT, 4 = INOUT, 8 = OUTIN).	1
HBTD	is the I/O handler's byte indicator and is used whenever the I/O routines are called to specify the byte displacement within QBUF into which the data transfer is to begin.	0
KAD	contains the address of the key specified by the user in the read or write FPT. If a consecutive file is being written, KAD points to the dummy key. If a consecutive file is being read, KAD contains 0.	18
KBUF	contains the address of the buffer containing the key associated with the data record last accessed in the blocking buffer.	10
KEYM	contains the maximum length, in bytes, of the keys in the file pointed to by the DCB. Only meaningful for keyed files. Maximum value is 31.	12
NLR	indicates whether or not the record segment pointed to by CMD is the first record in a continued data record (0 = second or nth record segment, 1 = first or only record segment). NLR is only meaningful during a write and is reset to zero when the first record segment is output.	16
NRA	indicates the number of recovery tries that may be attempted before a device error message is to be logged.	2
NRT	indicates the number of recovery tries remaining before a device error message is to be logged.	1
NXTF	is the next file indicator and specifies whether this file (i.e., the file named in the DCB/FPT) or the next file in the File Directory (i.e., the one following the file named in the DCB) is to be assigned to the DCB at OPEN. If a file name is not specified (in either the DCB or FPT), the first name in the File Directory is put in the DCB and assigned (0 = this file, 1 = next file).	5
NVA	contains a counter indicating the number of records to skip. It is also used as an indicator. If NVA is negative, the last operation performed was a rewind.	8
ORG	is the file organization indicator (0 = none specified, and is treated as consecutive, 1 = consecutive, 2 = keyed).	5

CP-V TECHNICAL MANUAL

<u>Field</u>	<u>Description</u>	<u>Word</u>
PBD	contains <ol style="list-style-type: none"> <li>1. a counter used by M:OPEN to determine how many volumes remain to be searched for the specified file.</li> <li>2. the number of bytes in the previous labeled tape block. PBD is only meaningful on a read operation and is taken from the PBS field of a labeled block.</li> </ol>	20
PUN	indicates whether a 7-track tape is to be read/written in the packed or unpacked mode (0 = unpacked, 1 = packed).	0
QBUF	contains <ol style="list-style-type: none"> <li>1. the buffer address to be used by the I/O routines whenever called.</li> <li>2. the address within the user's buffer where the next record segment begins.</li> </ol>	7
RBBI	indicates whether or not the blocking buffer should be released at end-action (0 = release blocking buffer, 1 = do not release blocking buffer because the buffer will be reused to read in the next block). RBBI is set during a read operation when a data record is continued and more than one read request will be initiated.	16
REV	indicates whether the Labeled Tape block currently in the blocking buffer (BUF1) was read in the forward or reverse direction (0 = forward, 1 = reverse).	16
RNDEV	contains the type of device specified (0 = none specified, 8 = 9T, 9 = 7T, X'A' = MT).	5
RNR	is a transient flag used by the system to defer error reporting for a tape block read by the monitor in anticipation of a read not yet requested by the user (0 = user requested read, 1 = user read not requested).	16
RSZ	indicates the default record size, in bytes.	3
RWS	indicates the requested number of bytes to be read or written from the user's buffer (BUF). At the termination of the I/O operation, RWS is set equal to ARS.	13
SCR	indicates the byte length of the key portion of the entries in the Labeled Tape block.	17
SND	contains the word displacement to the tape serial number (SN list) in the DCB relative to the start of the variable length parameters (FLP + SND = FWA of the EBCDIC serial numbers).	12
TBT	indicates whether or not the Labeled Tape blocking buffer has been truncated (0 = no, 1 = yes). Truncation means that monitor has taken the blocking buffer and, if necessary, written the block on tape.	16
TLB	contains the address of a user's label that is to be written on a tape file when the file is output.	14
TRN	indicates whether the file is positioned before or after the data record whose key entry is pointed to by CMD (0 = after, 1 = before).	5

CP-V TECHNICAL MANUAL

<u>Field</u>	<u>Description</u>	<u>Word</u>
TYC	indicates the type of completion of an I/O operation.	2

<u>TYC Code</u>	<u>Corresponding Error/ Abnormal Code</u>	<u>Meaning</u>
0	0	normal without device I/O transfer
1	0	normal with a device I/O transfer
2	7	lost data
3	1D	beginning-of-tape
4	4	beginning-of-file
5	1C	end-of-reel
6	5	end-of-data
7	6	end-of-file
8	41	read error
9	45	write error

TYPE	contains the device-type code for the tape assigned to this DCB.	1
UBTD	is the byte displacement indicator, specifying at which byte in the user's buffer (BUF) the data record begins.	0
ULBL	indicates whether or not the ULBL option was specified in the FPT of M:READ (0 = no, 1 = yes).	5
USR <sup>2</sup>	indicates whether or not the job account number is the same as the account number specified in the DCB (0 = yes, 1 = no).	0
WAT	is the wait flag and indicates whether or not WAIT was specified in the FPT (0 = no, 1 = yes).	0

VARIABLE LENGTH PARAMETERS

22→n

Each variable length parameter entry is preceded by a control word of the form shown for File DCB and in Table A-1.

CP-V TECHNICAL MANUAL

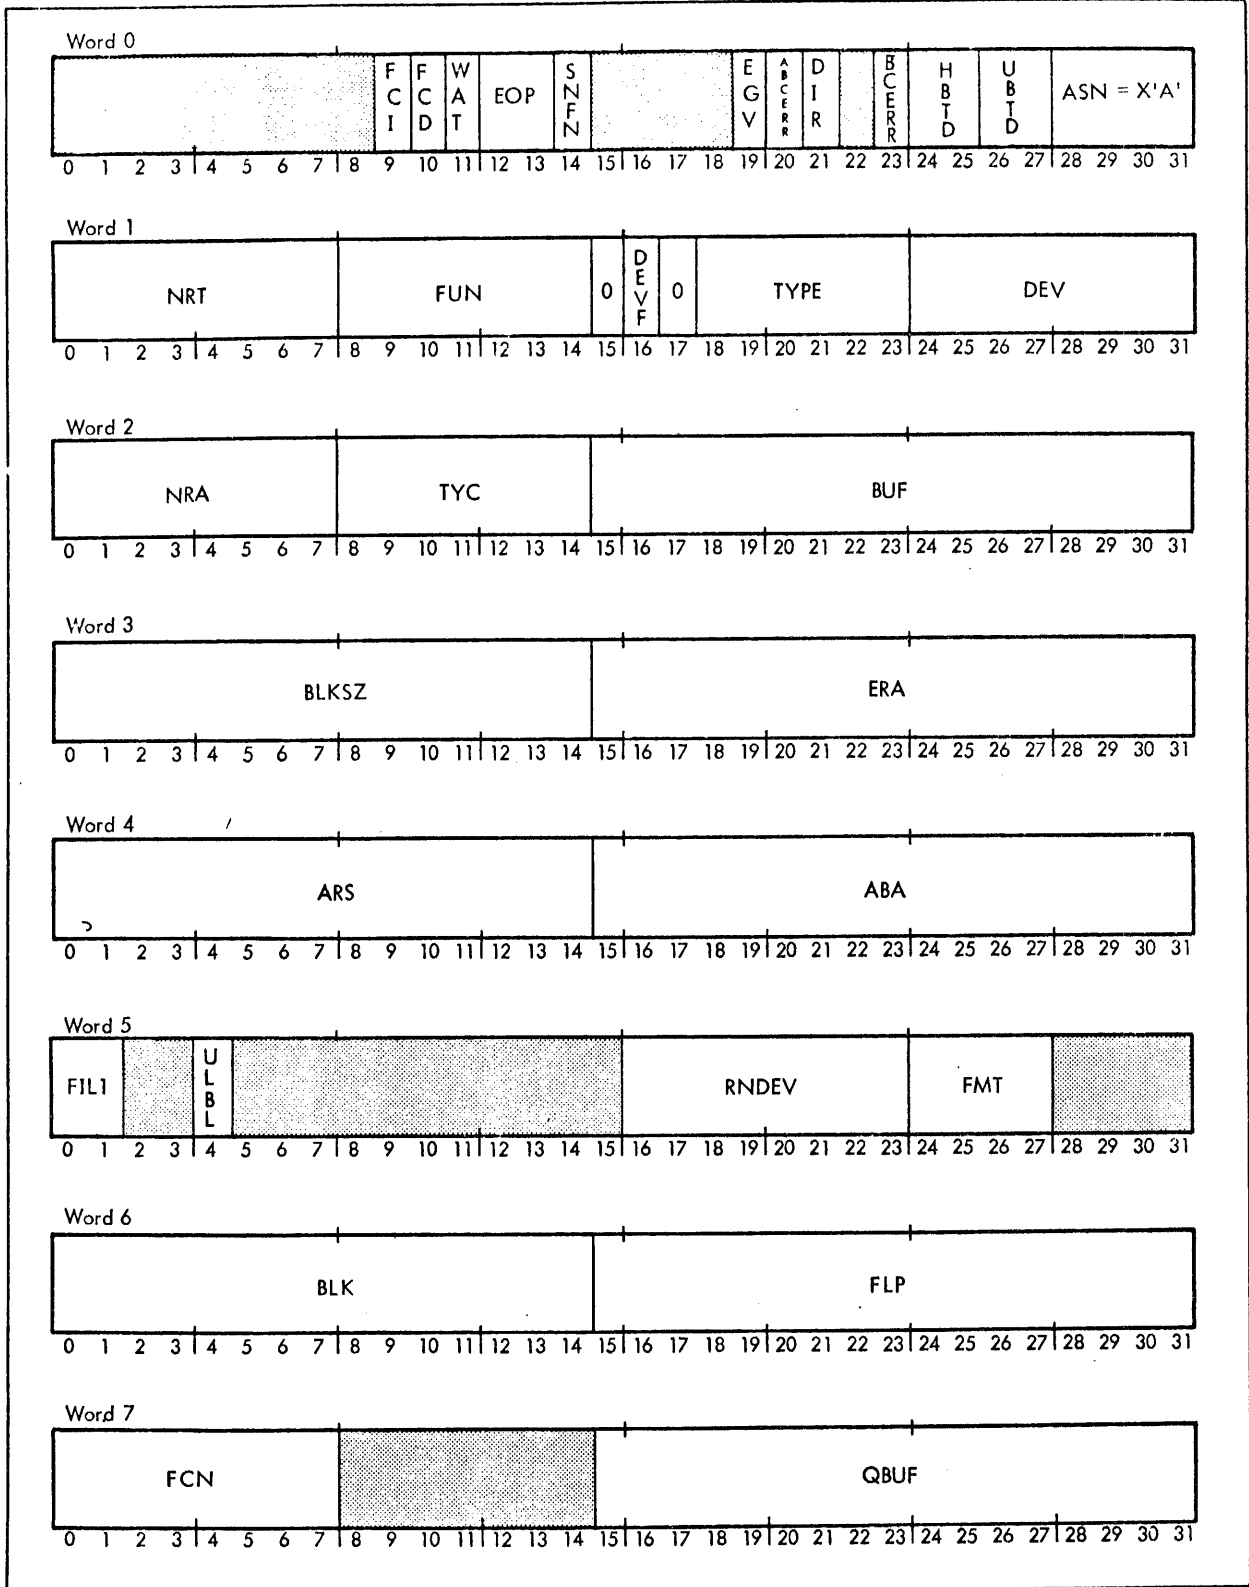


Figure A-5. Format of ANS Labeled Tape DCB

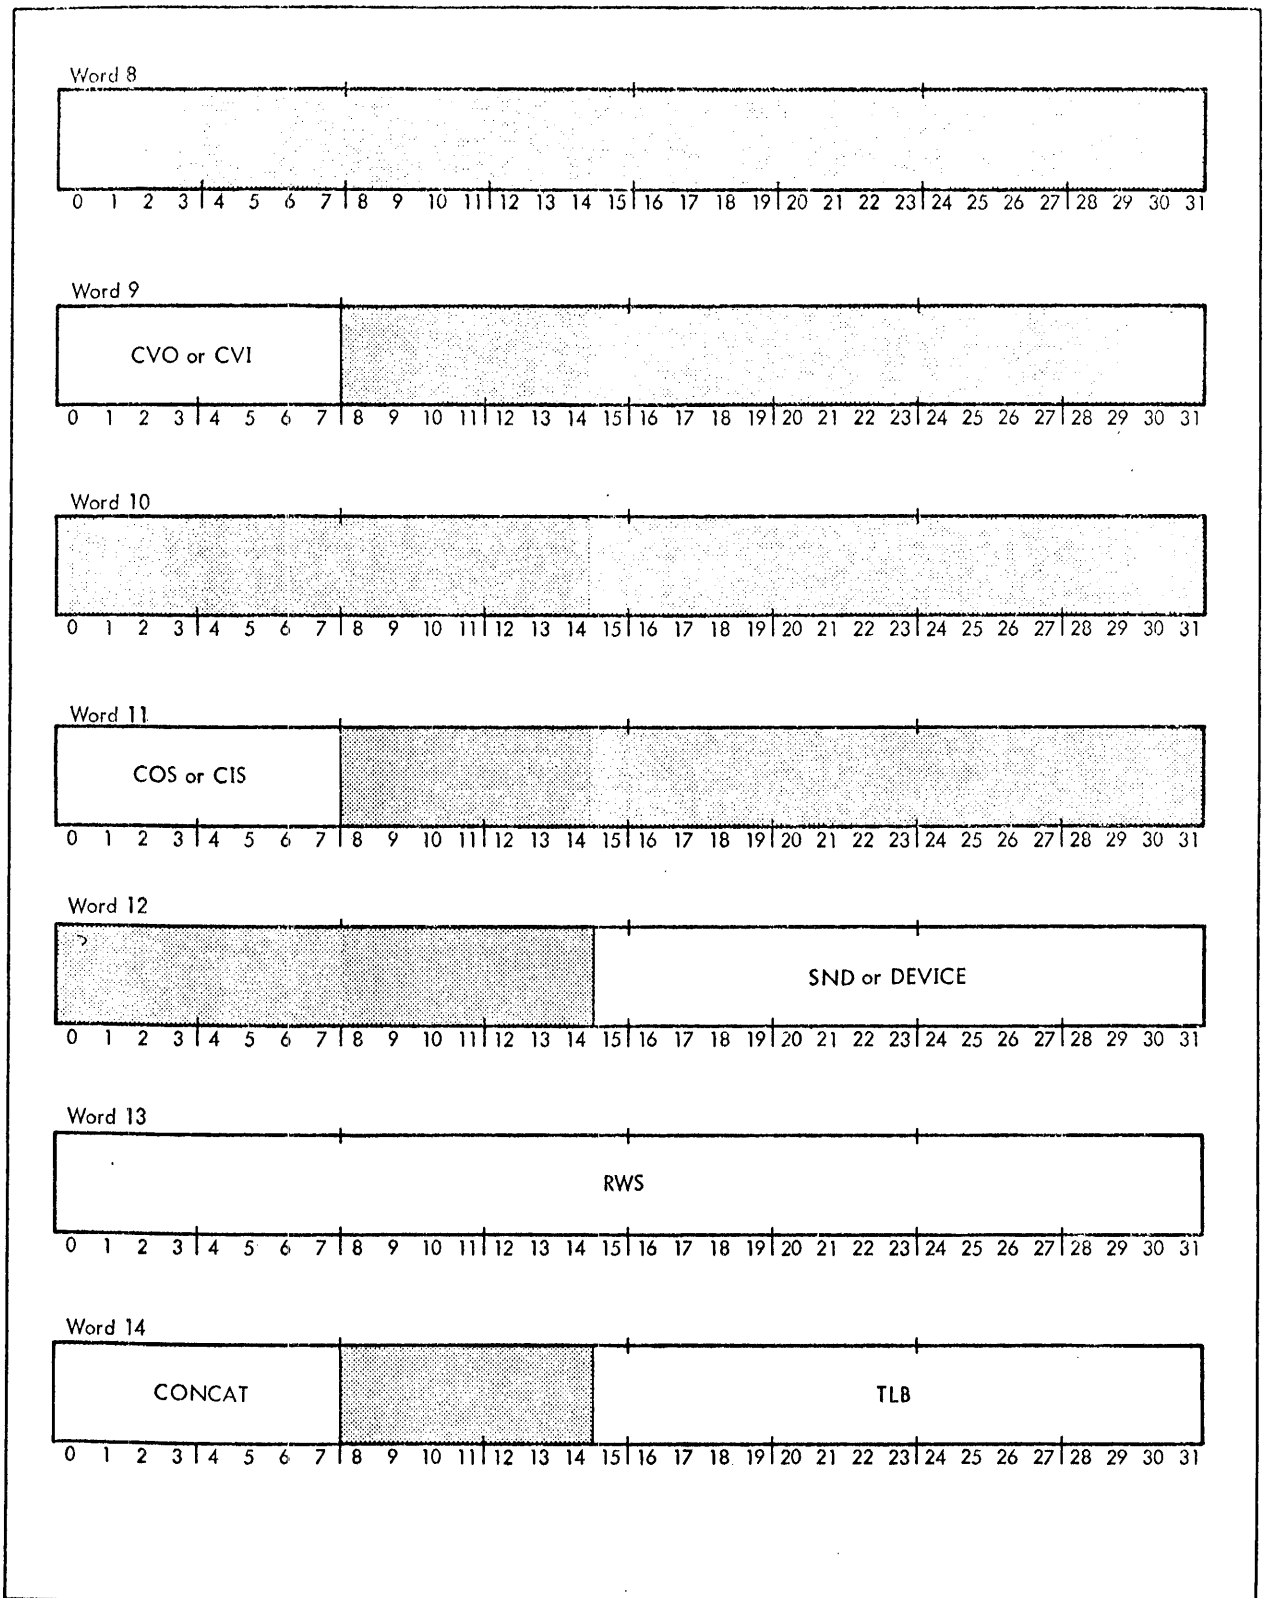


Figure A-5. Format of ANS Labeled Tape DCB (cont.)

CP-V TECHNICAL MANUAL

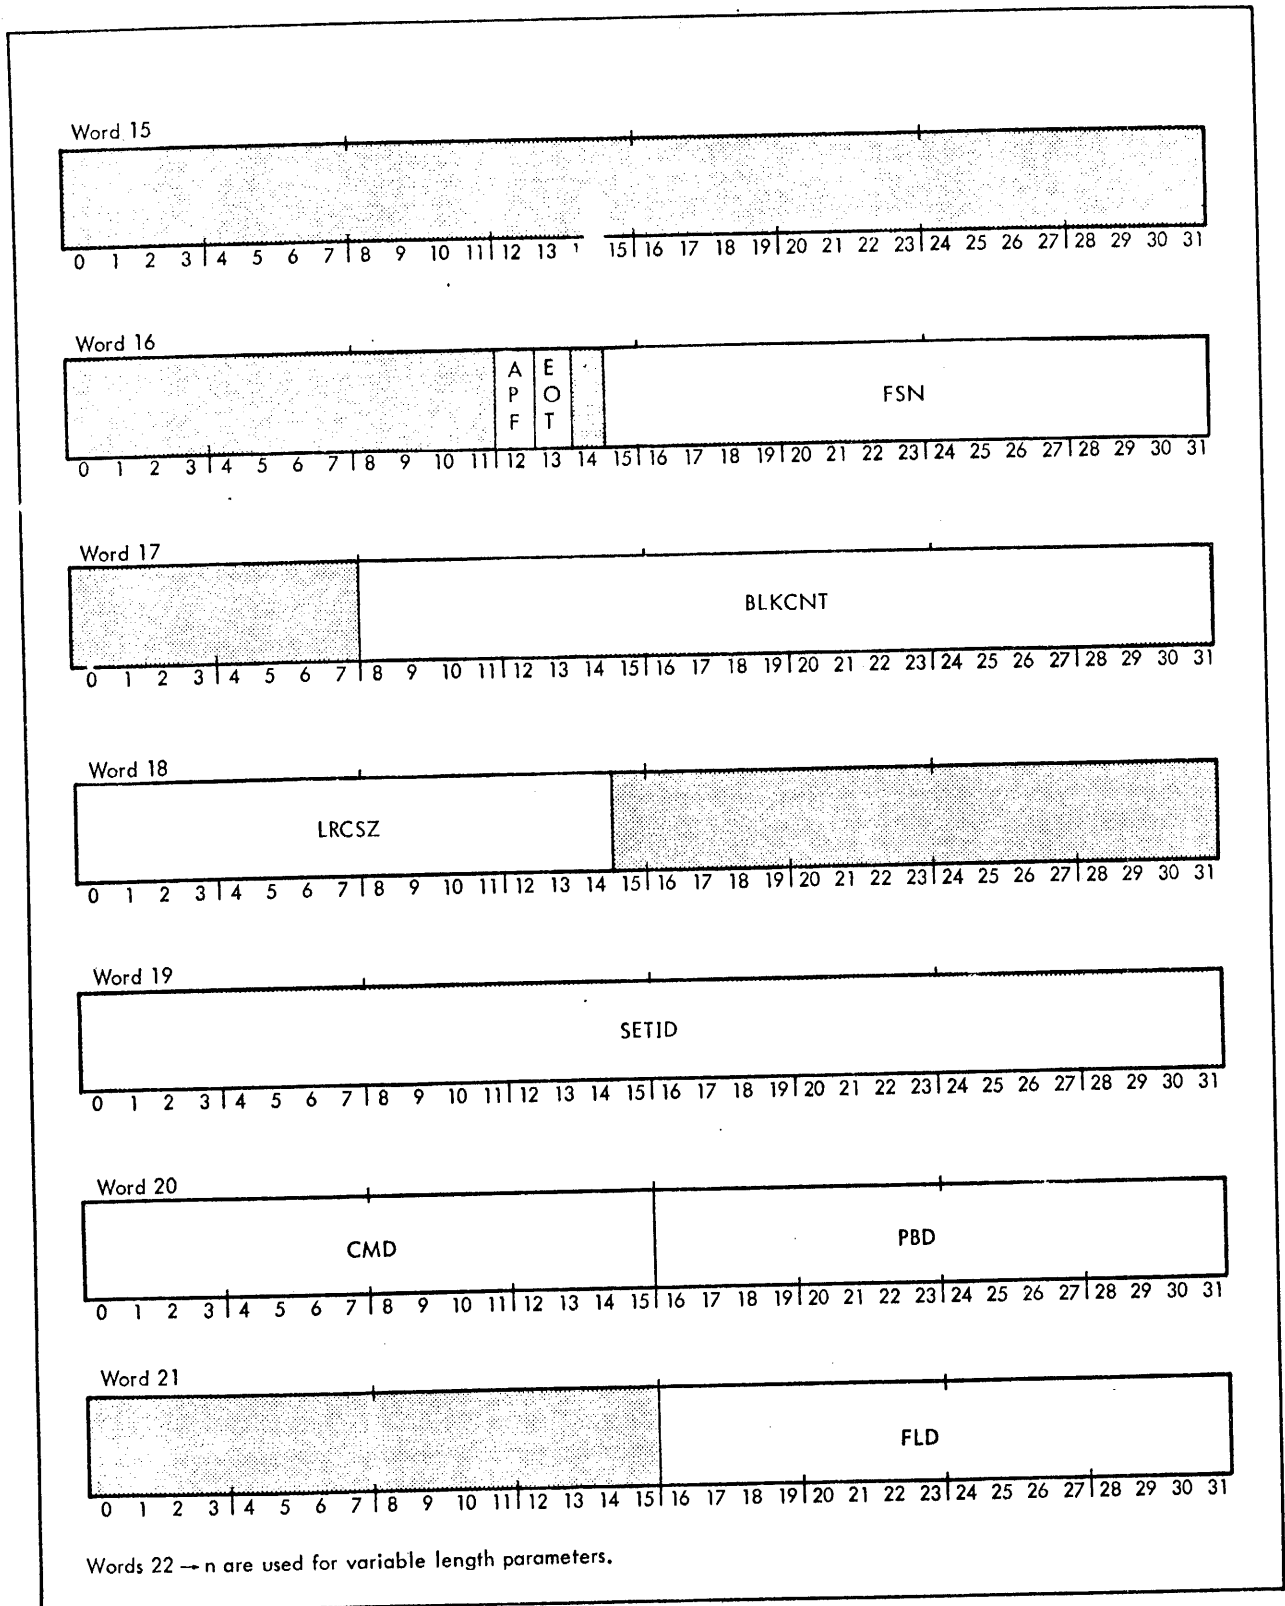


Figure A-5. Format of ANS Labeled Tape DCB (cont.)

<u>Field</u>	<u>Description</u>	<u>Word</u>
ABA	contains the address of the user's routine that will handle abnormal conditions resulting from insufficient or conflicting information. (The monitor returns to ABA in the FPT if the abnormal condition is the result of a device abnormality.)	4
ABCERR	indicates whether or not block count errors are to be accepted; i. e., whether or not processing is to continue in the case of inconsistency between the tape-specified and system-accumulated block counts (0 = no, 1 = yes).	0
APF	contains the ANS post flag. If set to 1, it indicates that ANS post-processing of an I/O operation has not yet been done.	16
ARS	contains <ol style="list-style-type: none"><li>1. the actual number of data bytes transferred to or from the user following a read or write.</li><li>2. the number of records remaining to be skipped following a PRECORD operation that has terminated due to an end-of-file or a beginning-of-file condition.</li></ol>	4
ASN	indicates the assignment type currently in effect for the DCB (0 = null, 1 = file, 2 = Xerox labeled tape, 3 = device, X'A' = ANS labeled tape).	0
BCERR	indicates whether or not a block count error has been detected during EOF/EOT processing (0 = no, 1 = yes). Always cleared before returning to user.	0
BLK	contains <ol style="list-style-type: none"><li>1. the byte count of the record segment pointed to by either CBD or PBD, depending upon the point in time.</li><li>2. the number of bytes to be transferred by the I/O routines whenever called.</li></ol>	6
BLKCNT	specifies the number of blocks in the file.	17
BLKSZ	specifies the block size in bytes.	3
BUF	contains the address of the user's buffer where the data record is to be read or written, or where user trailer labels are to be read.	2
CIS	contains the relative position of the serial number (in the SN list) of the magnetic tape reel used for current file input.	11
CMD	contains the number of tape marks that may be passed during an OPEN while searching the last tape of a set.	20
CONCAT	specifies the number of identically named files that are to be read as one logical file (concatenation).	14
COS	contains the relative position of the serial number (in the SN list) of the magnetic tape reel used for current file output.	11

<u>Field</u>	<u>Description</u>	<u>Word</u>
CVI	indicates the relative volume number of the current input tape within the current file. CVI is taken from the beginning-of-file sentinel, which appears at the beginning of file and at the beginning of each reel, if the file is continued on more than one reel.	9
CVO	indicates the relative volume number of the current output tape with respect to the current file. CVO is recorded in the beginning-of-file sentinel which is written at the beginning of the file and at the beginning of each reel, if the file is continued on more than one reel.	9
DEV	contains the DCT index of the device assigned to the DCT. DEV is only meaningful if DEVF = 1. When DEVF = 0, the field is defined as OPLB.	1
DEVF	indicates whether the DCB is assigned to a device or an operational label. (0 = operational label, 1 = device.)	1
DEVICE	contains the EBCDIC name specified on the DEVICE option in the M:OPEN call. This use is only transient, and the field is later overlaid by SND.	12
DIR	indicates the direction of the read operations (0 = forward, 1 = reverse).	0
EGV	is the event-given flag and indicates whether or not the completion code posted in the TYC field has been communicated to the user's program by the CHECK routine (0 = no, 1 = yes). The CHECK routine is called either directly by the user or indirectly by the monitor, depending upon the WAIT, ERR, and ABN options in the FPT.	0
EOP	is the ending operation indicator (0 = other, e. g., rewind, 1 = read, 2 = write). Specifies the type of I/O operation currently or last performed.	0
EOT	indicates whether or not the physical end-of-tape mark has been encountered (0 = no, 1 = yes).	16
ERA	contains the address of the user's routine that will handle error conditions resulting from insufficient or conflicting information. (The monitor returns to the ERA in the FPT if the error condition is the result of the device failure.)	3
FCD	indicates whether the DCB is opened or closed (0 = closed, 1 = opened).	0
FCI	indicates whether the DCB has ever been closed. This flag is set when the DCB is first closed and then never reset (0 = DCB has never been closed, 1 = DCB has been previously open and closed).	0
FCN	indicates the current number of I/O operations that have been initiated but not completed, for this DCB.	7
FIL1	indicates the file option specified when the DCB was last opened (0 = none specified, 1 = release, 2 = save).	5
FLD	contains the word displacement to the file name in the DCB relative to the start of the variable length parameters (FLD + FLP = FWA of the EBCDIC file name).	21



<u>Field</u>	<u>Description</u>	<u>Word</u>
FLP	contains the address of the variable length parameters in the DCB (called the file list-pointer).	6
FMT	indicates the record format, where 1 = F (fixed length) 2 = D (variable, expressed in decimal) 3 = V (variable, expressed in binary) 4 = U (undefined)	5
FSN	specifies the file sequence number.	16
FUN	indicates the file mode function (0 = null, 1 = IN, 2 = OUT, 4 = INOUT, 8 = OUTIN).	1
HBTD	is the I/O handler's byte indicator and is used whenever the I/O routines are called to specify the byte displacement within QBUF into which the data transfer is to begin.	0
LRCSZ	specifies the logical record size in bytes.	
NRA	indicates the number of recovery tries that may be attempted before a device error message is to be logged.	2
NRT	indicates the number of recovery tries remaining before a device error message is to be logged.	1
PBD	contains 1. a counter used by M:OPEN to determine how many volumes remain to be searched for the specified file. 2. the number of bytes in the previous labeled tape block. PBD is only meaningful on a read operation and is taken from the PBS field of a labeled block.	20
QBUF	contains 1. the buffer address to be used by the I/O routines whenever called. 2. the address within the user's buffer where the next record segment begins.	7
RNDEV	contains the type of device specified (0 = none specified, 8 = 9T, 9 = 7T, X'A' = MT).	5
RWS	indicates the requested number of bytes to be read or written from the user's buffer (BUF). At the termination of the I/O operation, RWS is set equal to ARS.	13
SETID	specifies the file set identification.	19
SND	contains the word displacement to the tape serial number (SN list) in the DCB relative to the start of the variable length parameters (FLP + SND = FWA of the EBCDIC serial numbers).	12
SNFN	indicates the access method (0 = serial number, 1 = filename).	0
TLB	contains the address of a user's label that is to be written on a tape file when the file is output.	14

<u>Field</u>	<u>Description</u>	<u>Word</u>
TYC	indicates the type of completion of an I/O operation.	2

<u>TYC Code</u>	<u>Corresponding Error/ Abnormal Code</u>	<u>Meaning</u>
0	0	normal without device I/O transfer
1	0	normal with a device I/O transfer
2	7	lost data
3	1D	beginning-of-tape
4	4	beginning-of-file
5	1C	end-of-reel
6	5	end-of-data
7	6	end-of-file
8	41	read error
9	45	write error

TYPE	contains the device-type code for the tape assigned to this DCB.	1
UBTD	is the byte displacement indicator, specifying at which byte in the user's buffer (BUF) the data record begins.	0
ULBL	indicates whether or not the ULBL option was specified in the FPT of M:READ (0 = no, 1 = yes).	5
WAT	is the wait flag and indicates whether or not WAIT was specified in the FPT (0 = no, 1 = yes).	0

VARIABLE LENGTH PARAMETERS

22--n

Each variable length parameter entry for ANS labeled tapes is preceded by a control word of the following form:

Byte 0 = a code number (see Table A-2) identifying the parameter which follows.

Byte 1 = code for the entry position (00 = more parameter entries to follow, 01 = last parameter entry).

Byte 2 = number of significant data words in the parameter entry.

Byte 3 = total number of words reserved for the entry, not including the control word (that is, maximum entry length).

Table A-2. Variable Length Parameter Codes for ANS Labeled Tapes

Code	Parameter Type
01	File name (the first byte of which contains the number of characters in the name).
04	Expiration date.
07	SN/INSN serial numbers. (ANS serial numbers are encoded to fit in 32 bits.)
08	OUTSN serial numbers. (ANS serial numbers are encoded to fit in 32 bits.)

CP-V TECHNICAL MANUAL

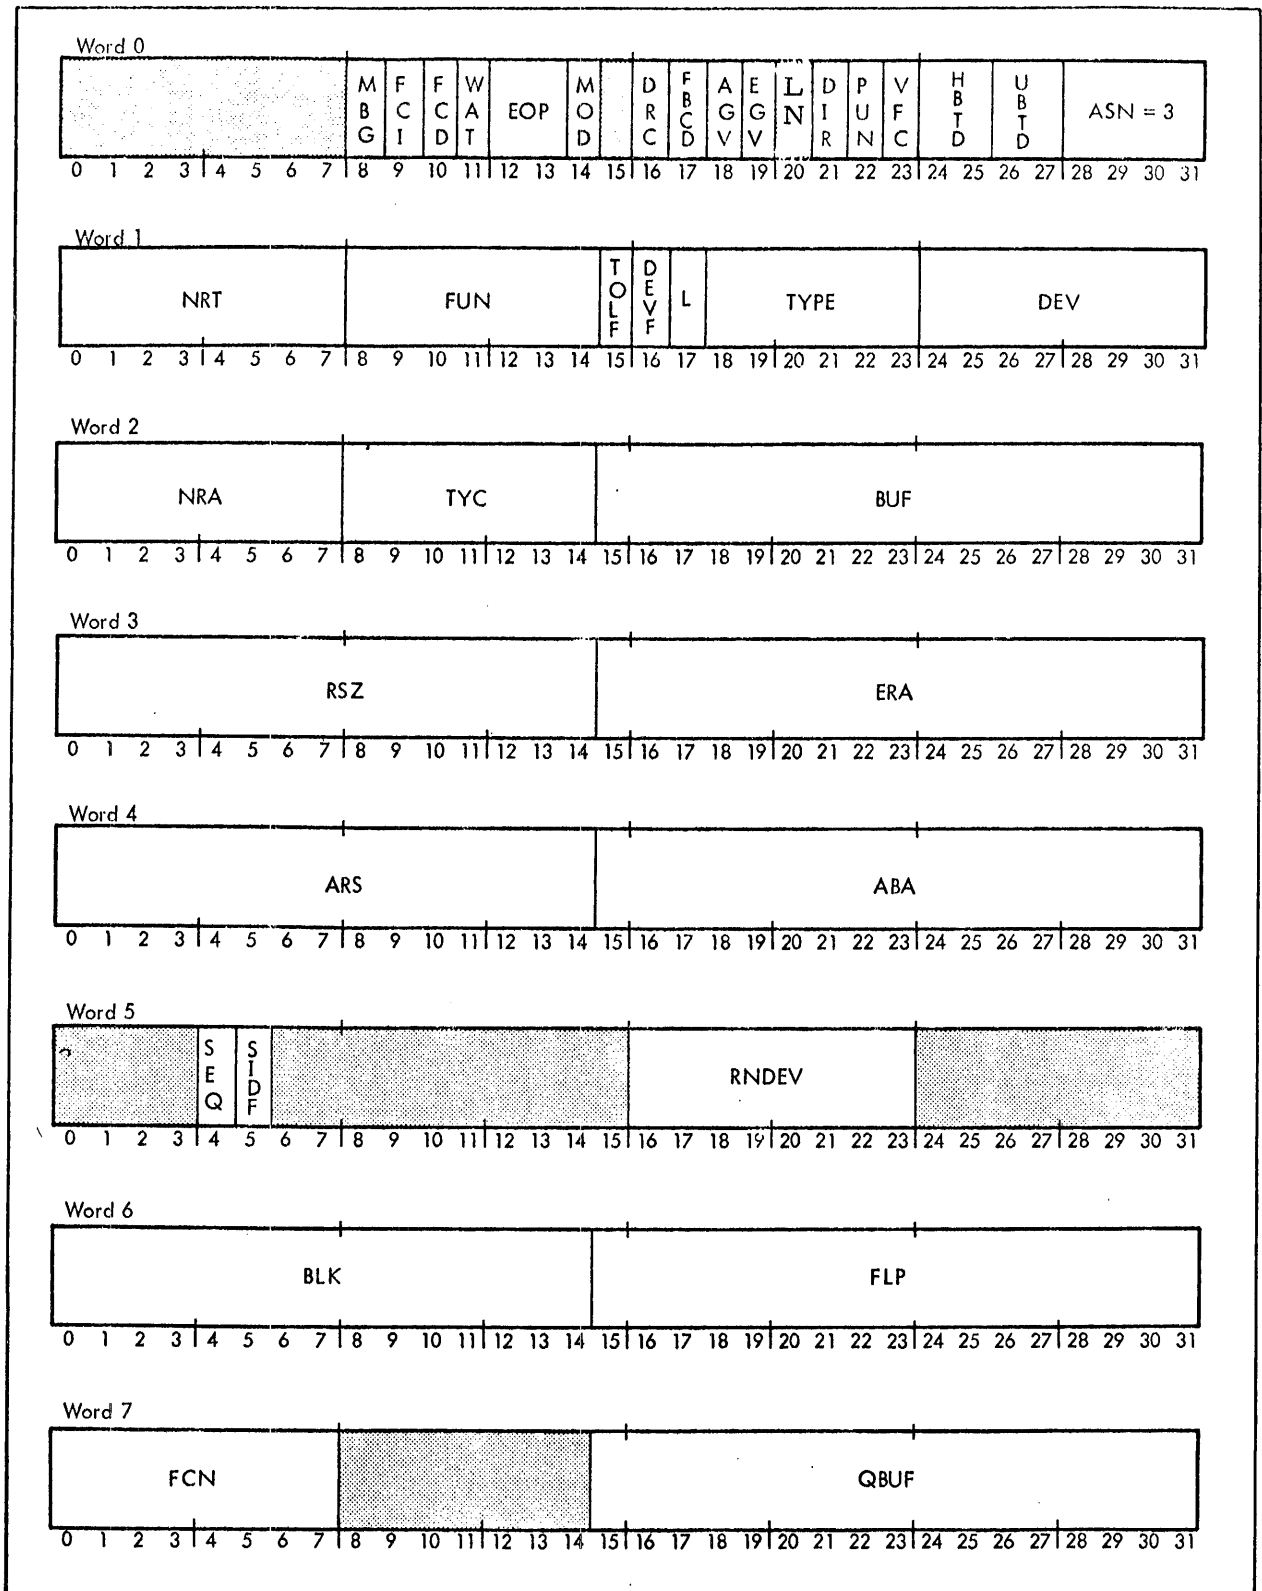


Figure A-3. Format of Device DCB

CP-V TECHNICAL MANUAL

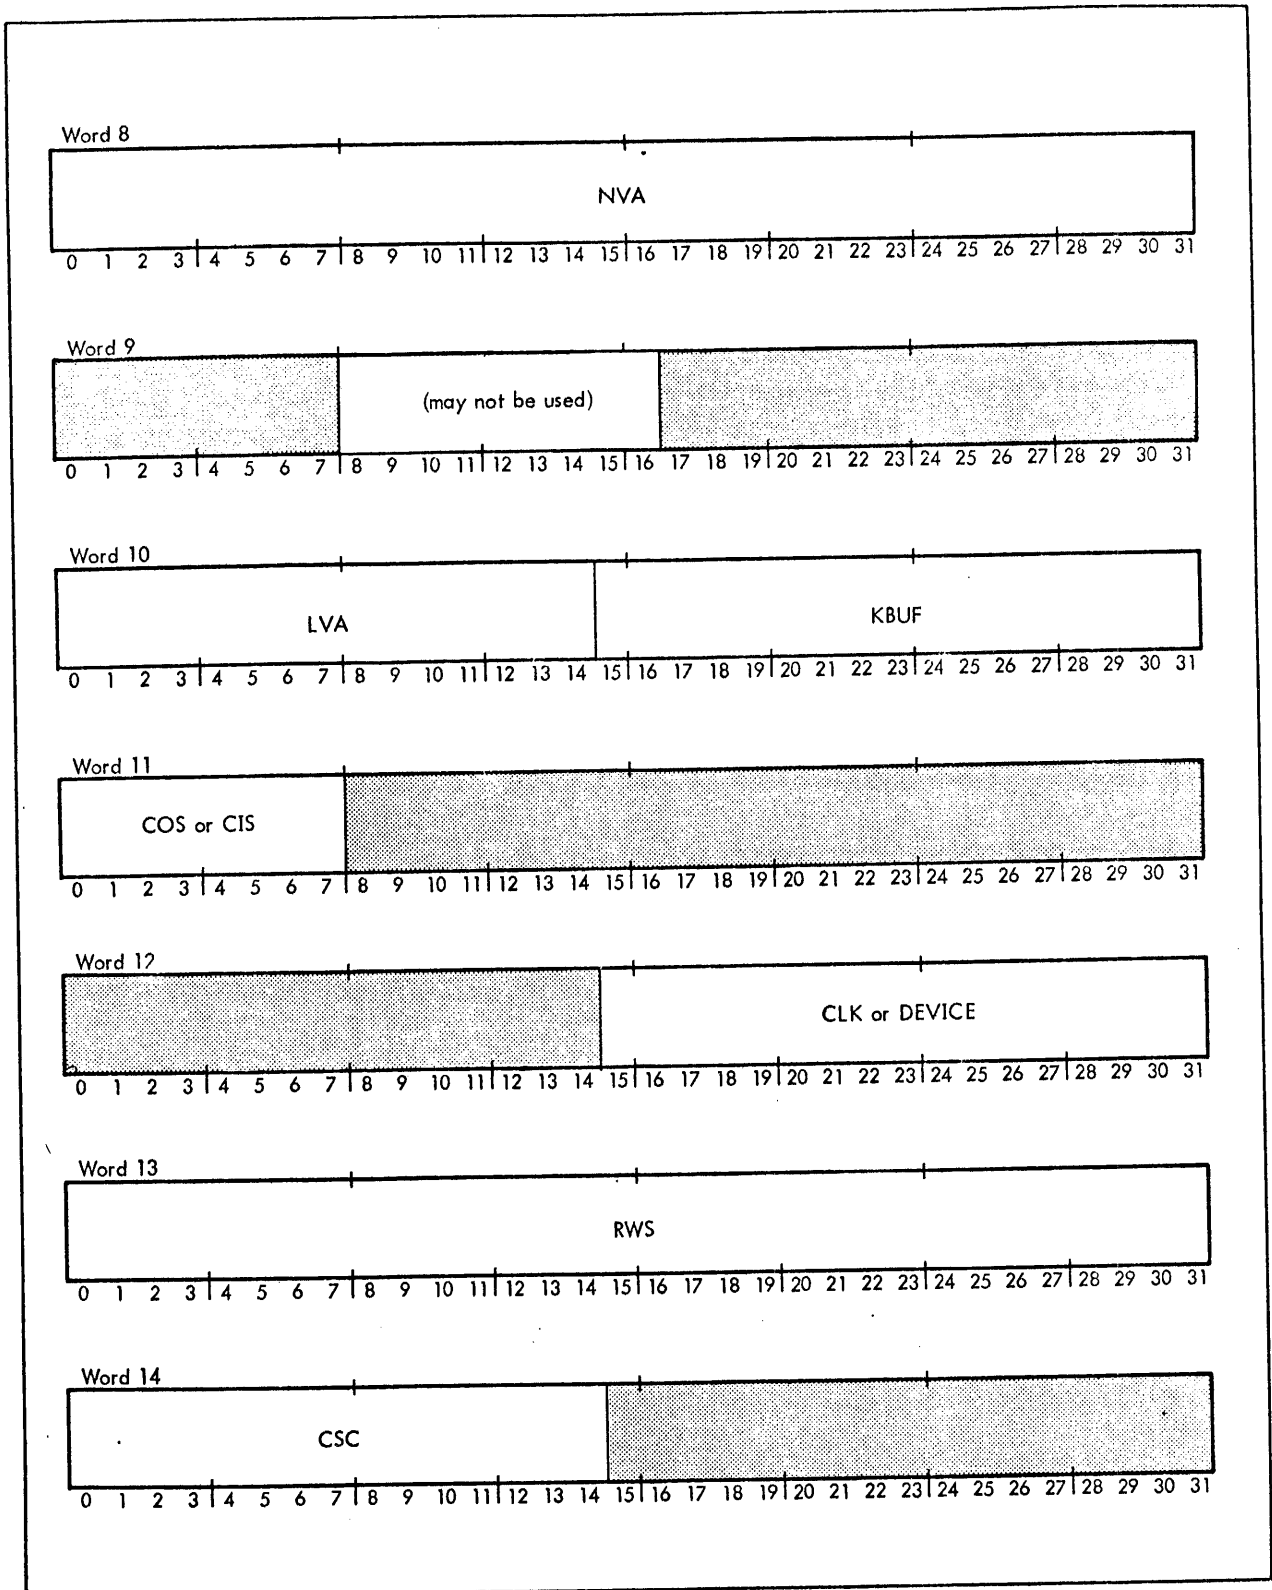


Figure A-3. Format of Device DCB (cont.)

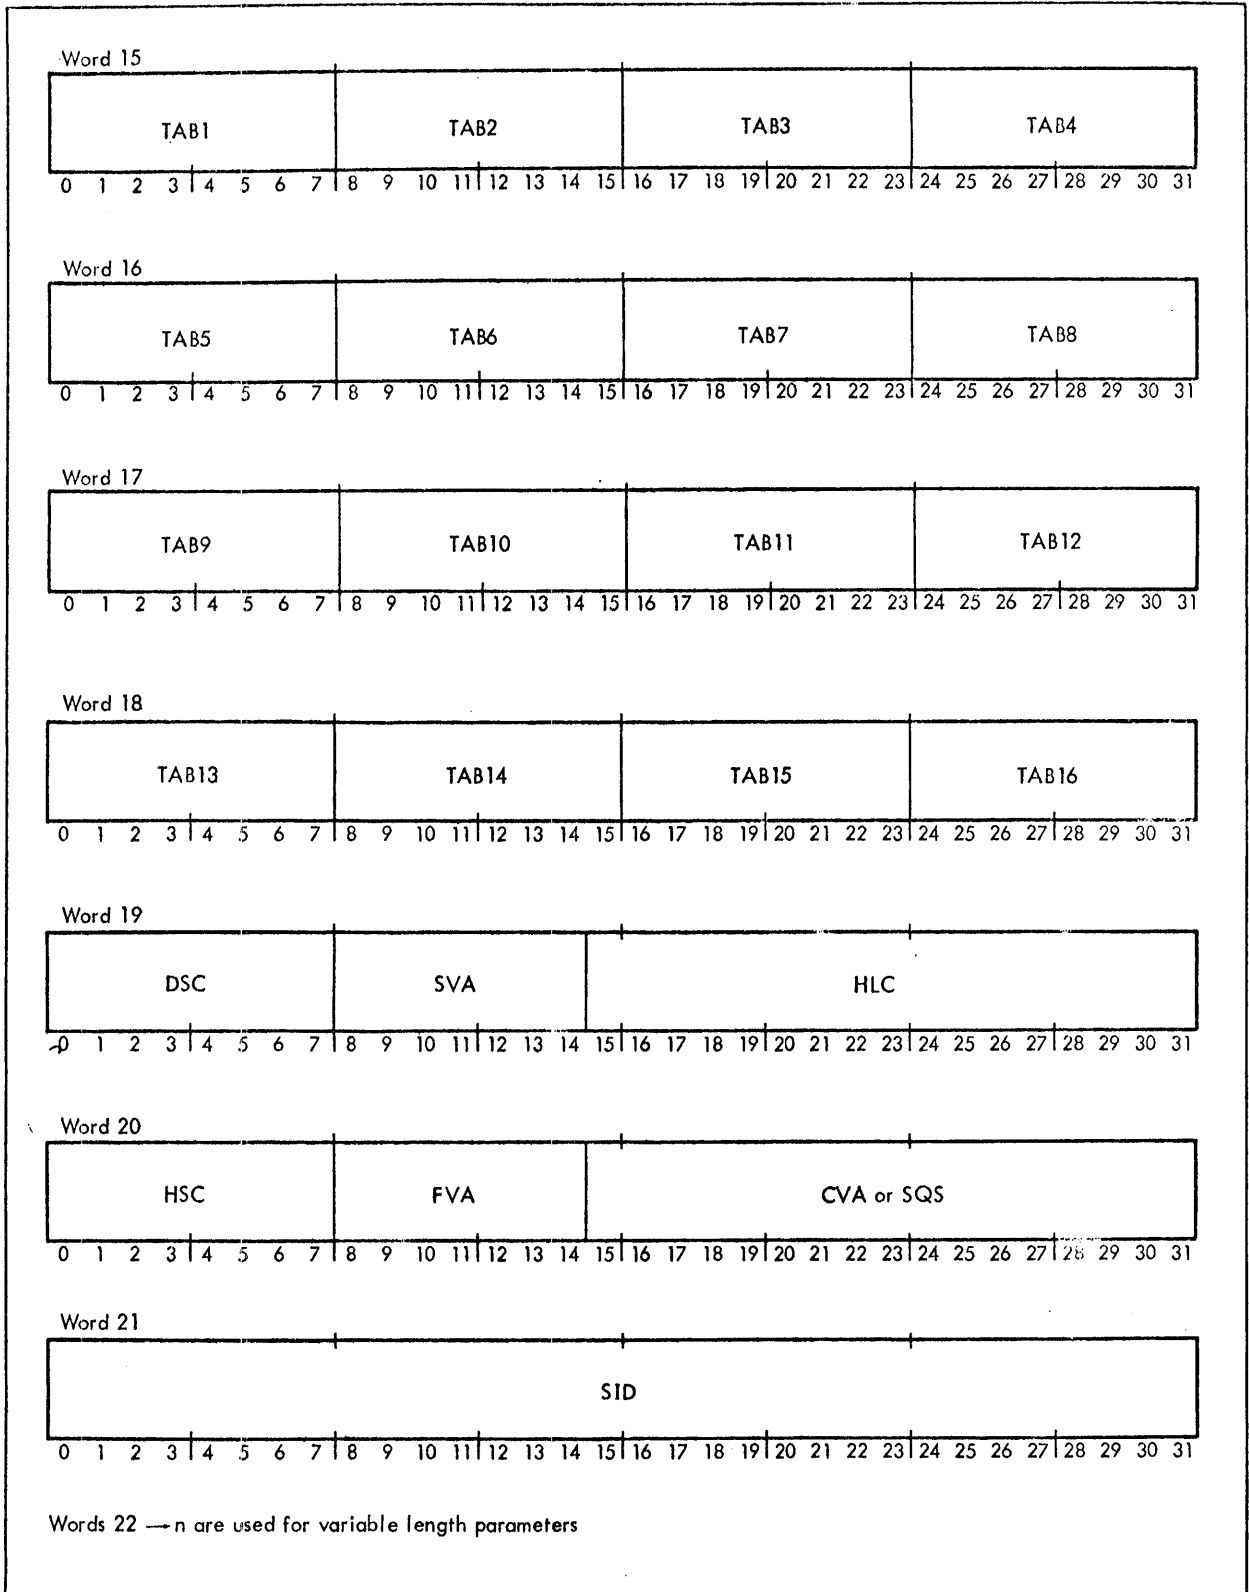


Figure A-3. Format of Device DCB (cont.)

CP-V TECHNICAL MANUAL

<u>Field</u>	<u>Description</u>	<u>Word</u>
ABA	contains the address of the user's routine that will handle abnormal conditions resulting from insufficient or conflicting information. (The monitor returns to ABA in the FPT if the abnormal condition is the result of a device abnormality.)	4
AGV	is the abnormal given flag and indicates whether or not an end-of-file completion code has been returned to the user because a control command was encountered when reading from the C device, (0 = no, 1 = yes).	0
ARS	contains the actual number of data bytes transferred to or from the user in the I/O operation.	4
ASN	indicates the assignment type currently in effect for the DCB (0 = null, 1 = file, 2 = Xerox labeled tape, 3 = device, X'A' = ANS labeled tape).	0
BLK	contains the number of bytes to be transferred by the I/O routines whenever called.	6
BUF	contains the address of the user's buffer where the data record is to be read or written.	2
CIS	contains the relative position of the serial number (in the SN list) of the magnetic tape reel used for current file input.	11
CLK	for a nonsymbiont device, contains 0. For a symbiont device, contains the accounting type in bits 20-23 (0 = none, 1 = DO, 2 = PO, 3 = UO, 4 = LO) and the logical device index in bits 24-31.	12
COS	contains the relative position of the serial number (in the SN list) of the magnetic tape reel used for current file output.	11
CSC	indicates the number of the column at which the page count is to begin (for printer or typewriter). The most significant digit of the count will be printed in this column on the page.	14
CVA	indicates the current value of the page count (for printer or typewriter).	20
DEV	contains the DCT index of the device assigned to the DCB. DEV is only meaningful if DEVF equals 1.	1
DEVF	indicates whether the DCB is assigned to a device or an operational label (0 = operational label, 1 = device).	1
DEVICE	contains the EBCDIC name specified on the DEVICE option in the M:OPEN call. This use is only transient, and the field is later overlaid by CLK.	12
DIR	indicates the direction of the read operation (0 = forward, 1 = reverse).	0
DRC	is the format control flag and indicates whether or not the monitor is to do special formatting of records on read or write operations (0 = yes, 1 = no).	0

CP-V TECHNICAL MANUAL

<u>Field</u>	<u>Description</u>	<u>Word</u>
DSC	indicates the column number at which the output record is to begin (for a card punch, typewriter, or printer).	19
EGV	is the event-given flag and indicates whether or not the completion code posted in the TYC field has been communicated to the user's program by M:CHECK (1 = yes, 0 = no). M:CHECK is called either directly by the user or indirectly by monitor, depending upon the WAIT, ERR, and ABN options in the FPT.	0
EOP	is the ending operation indicator (0 = other, e.g., rewind, 1 = read, 2 = write). Specifies the type of I/O operation currently or last performed.	0
ERA	contains the address of the user's routine that will handle error conditions resulting from insufficient or conflicting information. (The monitor returns to the ERA in the FPT if the error condition is the result of a device failure.)	3
FBCD	is the FORTRAN BCD flag and indicates whether or not BCD is to be converted to EBCDIC on input, or EBCDIC is to be converted to BCD on output. (0=no conversion, 1=conversion.)	0
FCD	indicates whether the DCB is opened or closed (0 = closed, 1 = opened).	0
FCI	indicates whether the DCB has ever been closed. This flag is set when the DCB is first closed, and then never reset (0 = DCB has never been closed, 1 = DCB has been previously opened and closed).	0
FCN	indicates the current number of I/O operations that have been initiated but not completed, for this DCB.	7
FLP	contains the address of the variable length parameters in the DCB (called the file list-pointer).	6
EUN	contains the file mode function (0=null, 1=IN, 2=OUT, 3=IN and OUT, 4= INOUT, 8=OUTIN).	1
FVA	indicates the first line on which printing is to begin (for printer or typewriter).	20
HBTD	is the I/O handler's byte indicator and is used whenever the I/O routines are called to specify the byte displacement within QBUF into which the data transfer is to begin.	0
HLC	contains the address of the user's page header that is to be output at the beginning of each listing page (the first byte of the page header contains the byte count).	19
HSC	indicates the column number at which the user's page header is to begin (for printer or typewriter).	20
KBUF	not used for devices but because of common program logic, the field contains a meaningless address.	10
L	indicates whether or not the user specified that the DCB was assigned to a listing type device. (0 = no, 1 = yes.) This flag is only used by the FORTRAN I/O routines. The monitor automatically sets this flag when the DCB is assigned to a listing type device (such as the line printer).	1
LN	<b>used in conjunction with ASN to determine that the DCB is a Transaction Processing slave line DCB.</b>	

<u>Field</u>	<u>Description</u>	<u>Word</u>
LVA	indicates the number of printable lines per logical page (for printer or typewriter). Value is 0 when stream default is selected.	10
MBG	is the monitor buffer-flag and indicates whether or not a 34-word output buffer has been allocated to the DCB from the monitor's buffer pool. (0 = the actual I/O operation will take place directly from the user's buffer, 1 = the output record will be transferred from the user's buffer to the monitor's buffer and that the actual I/O operation will take place using the monitor's buffer.)	0
MOD	is the mode flag and indicates the device mode to be used in the I/O operation. (0 = EBCDIC, 1 = binary.) This flag is only used when <ol style="list-style-type: none"> <li>1. the DCB is assigned to a card punch or 7-track magnetic tape.</li> <li>2. the DCB is assigned to a card reader and DRC has been specified.</li> </ol>	0
NRA	indicates the number of recovery tries that may be attempted before a device error message is to be logged.	2
NRT	indicates the number of recovery tries remaining before a device error message is to be logged.	1
NVA	contains a counter indicating the number of records to skip on magnetic tape. It is also used as an indicator. If NVA is negative, the last operation performed was a rewind.	8
PUN	indicates whether a 7-track tape is to be read or written in the packed or unpacked mode (0 = unpacked, 1 = packed). PUN is only meaningful when MOD is set.	0
QBUF	contains the buffer address to be used by the I/O routines whenever called.	7
RNDEV	same as TYPE field, except when DCB is a slave line DCB. In this case, RNDEV has the value 0 if the DCB is associated with MOC controller and value = line # + 1 if associated with a COC line.	5
RSZ	indicates the default record size, in bytes.	3
RWS	indicates the requested number of bytes to be read or written from the user's buffer (BUF).	13
SEQ	is the sequence option flag and indicates whether or not punched output is to have sequencing in columns 77-80 (0 = no, 1 = yes).	5
SIDF	is the sequence identification (ID) flag and indicates whether or not punched output is to have sequence identification in columns 73-76 (0 = no, 1 = yes).	5
SID	contains the 4-byte EBCDIC identification to be output in the sequencing identification field (columns 73-76) of punched card output.	21
SQS	indicates the next sequence number to be output in columns 77-80 (for punched card output).	20



<u>Field</u>	<u>Description</u>	<u>Word</u>
SVA	indicates the number of lines to be spaced between printed lines (for typewriter or printer). A 0 means SPACE was not specified; the output will be single spaced.	19
TAB1-16	indicates the column numbers for the tab-stop settings (for output devices).	15-18
TOLF	if 1, bits 16-31 of DCB are TEXT OPLABEL. If 0, DEVF is meaningful.	1
TYC	indicates the type of completion of an I/O operation.	

<u>TYC Code</u>	<u>Corresponding Error/ Abnormal Code</u>	<u>Meaning</u>
0	0	normal without device I/O transfer
1	0	normal with device I/O transfer
2	7	lost data
3	1D	beginning-of-tape
4	4	beginning-of-file
5	1C	end-of-reel
6	5	end-of-data
7	6	end-of-file
8	41	read error
9	45	write error

TYPE	contains the device-type code assigned to the DCB. This field is set whether the DCB is assigned directly to a device or indirectly through an operational label.	1
UBTD	is the type displacement indicator, specifying at which byte in the user's buffer (BUF) the data record begins.	0
VFC	is the vertical format control-flag and indicates whether or not the first byte of the output is a format control character (0 = no, 1 = yes). This flag is only used for printer output.	0
WAT	is the wait flag and indicates whether or not WAIT was specified in the FPT (0 = no, 1 = yes).	0

VARIABLE LENGTH PARAMETERS

22 n

Each variable length parameter entry is preceded by a control word of the form shown for File DCB and in Table A-1.

LABELLED TAPE, GENERAL FORMAT AND SENTINELS

Shown below are two labeled tapes containing two volumes of file A, having a total of four records, and the one-record file B. The various sentinels are explained following the tape format sketches. All sentinels begin on a word boundary.

Tape 1

Label Sentinel (:LBL)
Identification Sentinel (:ACN)
Tape Mark
Beginning of File A (:BOF)
User's Label (optional)
Tape Mark
Record 1 of File A
Record 2 of File A
Record 3 of File A
Tape Mark
End of Volume (:EOV)
Trailer Label (optional)
Tape Mark
End of Reel (:EOR)
Tape Mark
Tape Mark

Tape 2

Label Sentinel (:LBL)
Identification Sentinel (:ACN)
Tape Mark
Beginning of File A (:BOF)
User's Label (optional)
Tape Mark
Record 4 of File A
Tape Mark
End of File A (:EOF) (optional)
Tape Mark (optional)
Beginning of File B (:BOF)
Tape Mark
Record 1 of File B
Tape Mark
End of File B (:EOF) (optional)
Trailer Label (optional)
Tape Mark (optional)
End of Reel (:EOR)
Tape Mark
Tape Mark

where

:LBL identifies the reel number of the tape (SN). Reel number are four alphanumeric characters in length. Sentinel length is 12 bytes, including four padding bytes. The format is shown below.

:	L	B	L
X	X	X	X
4 PADDING BYTES			

Label Sentinel


:ACN identifies the owner of the tape (ACCNT #), the expiration date, and the creation date, in that order.

The account number is eight alphanumeric characters in length, left-justified and in EBCDIC code. The dates are of the form  $m_1m_2d_1d_2yy_1y_2$ , where  $m_1m_2$  is the numerical representation of the month,  $d_1d_2$  the day,  $yy_1y_2$  are blanks, and  $y_1y_2$  are the last two digits of the year. The digits are in EBCDIC

and the blanks must appear. Sentinel length is 28 bytes followed by a physical end-of-file (tape mark record). The format of the ACN Sentinel, also referred to as the identification sentinel, is shown below.

:	A	C	N
a <sub>1</sub>	a <sub>2</sub>	a <sub>3</sub>	a <sub>4</sub>
a <sub>5</sub>	a <sub>6</sub>	a <sub>7</sub>	a <sub>8</sub>
m <sub>1</sub>	m <sub>2</sub>	d <sub>1</sub>	d <sub>2</sub>
∅	∅	γ <sub>1</sub>	γ <sub>2</sub>
m <sub>1</sub>	m <sub>2</sub>	d <sub>1</sub>	d <sub>2</sub>
∅	∅	γ <sub>1</sub>	γ <sub>2</sub>
Inter-record Gap			
Tape Mark Record			

:BOF is the beginning-of-file sentinel consisting of the file-information record, the user's label (if specified), and a physical end of file (tape mark record). The format of the :BOF Sentinel is shown below.

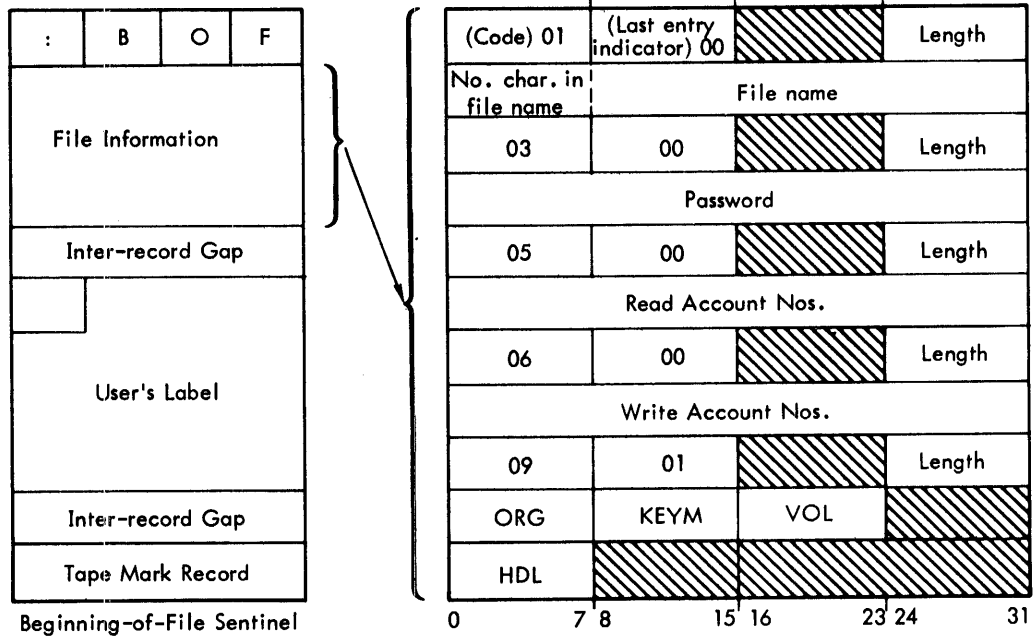

The file-information record, as shown, contains several control words and the information associated with each of these. The control words have the following form:

Code	LEI		Length
------	-----	--	--------

where

Code identifies the type of information following the control word. The codes are:

01 - file name. The file name may be a maximum of 31 characters. An additional byte is used to state the length of the file name.

03 - password (2 words, left-justified).

05 - Read account numbers.

06 - Write account numbers.

Each account number is left-justified, blank-filled, and two words long. The total number of Read and Write accounts must not exceed 16. Read accounts identify those who may have only read access to the file. Write accounts identify those who may read and write the file. None or All are also allowed.

09 - miscellaneous information, such as:

ORG - gives file organization, i. e., keyed or consecutive.

KEYM - specifies maximum length of the keys. Keys may not be greater than 31 bytes. An additional byte is used to specify the length of the key. On consecutive files, the length of the dummy key is assumed to be three; therefore, KEYM is ignored. On keyed files, if KEYM=0, maximum length is assumed to be 11.

VOL - on multi-reel files, this entry specifies the position of this tape in the file. For example, VOL=2 implies this is the second tape of the multi-reel file. VOL=1 indicates the beginning of the file. Every file begins with VOL=1 (including single-reel files).

HDL - specifies the length of user's label. If HDL=0, then no user's label exists and the following record must be a physical end-of-file.

LEI is the last-entry indicator; this entry in the control word indicates the end of the file information. The control words, along with the information they define, do not have to be in a particular order, but LEI must equal 0 if the file information entry is not the last one and must equal 1 if the entry is the last.

Length specifies the length, in words, of the information associated with a particular entry (i. e., following the code word).


:EOV is the End-of-Volume sentinel:

:	E	O	V
		PBS	
Inter-record Gap			
Tape Mark Record			

:EOR is the End-of-Reel sentinel:

	E	O	R
		PBS	
Inter-record Gap			
Tape Mark Record			

:EOF is the End-of-File sentinel:

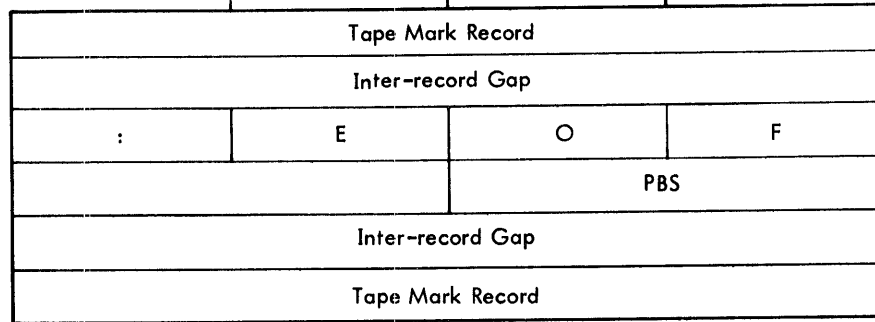


where

PBS is the previous block size, in bytes.

**RECORD FORMAT**

The labeled-tape record format for blocked records is shown below. The truth table following the diagram shows the possible combinations, of blocked/unblocked continued/not continued records. Figure 16-1 shows a number of examples of various types of records.

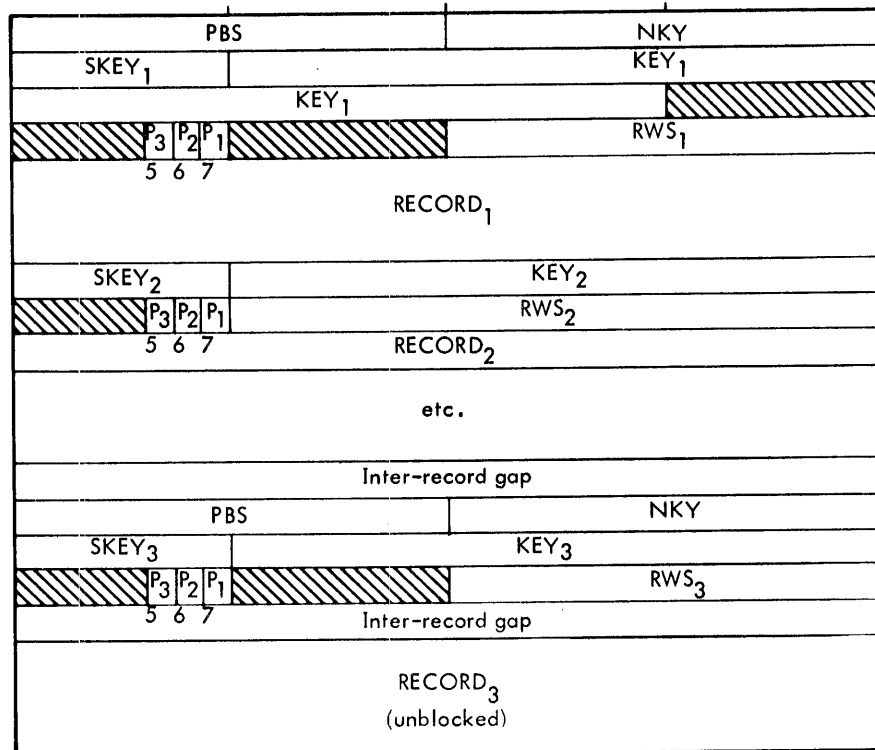


where

NKY is number of entries in block.

PBS is previous block size.

<sup>†</sup>Must start on word boundary.



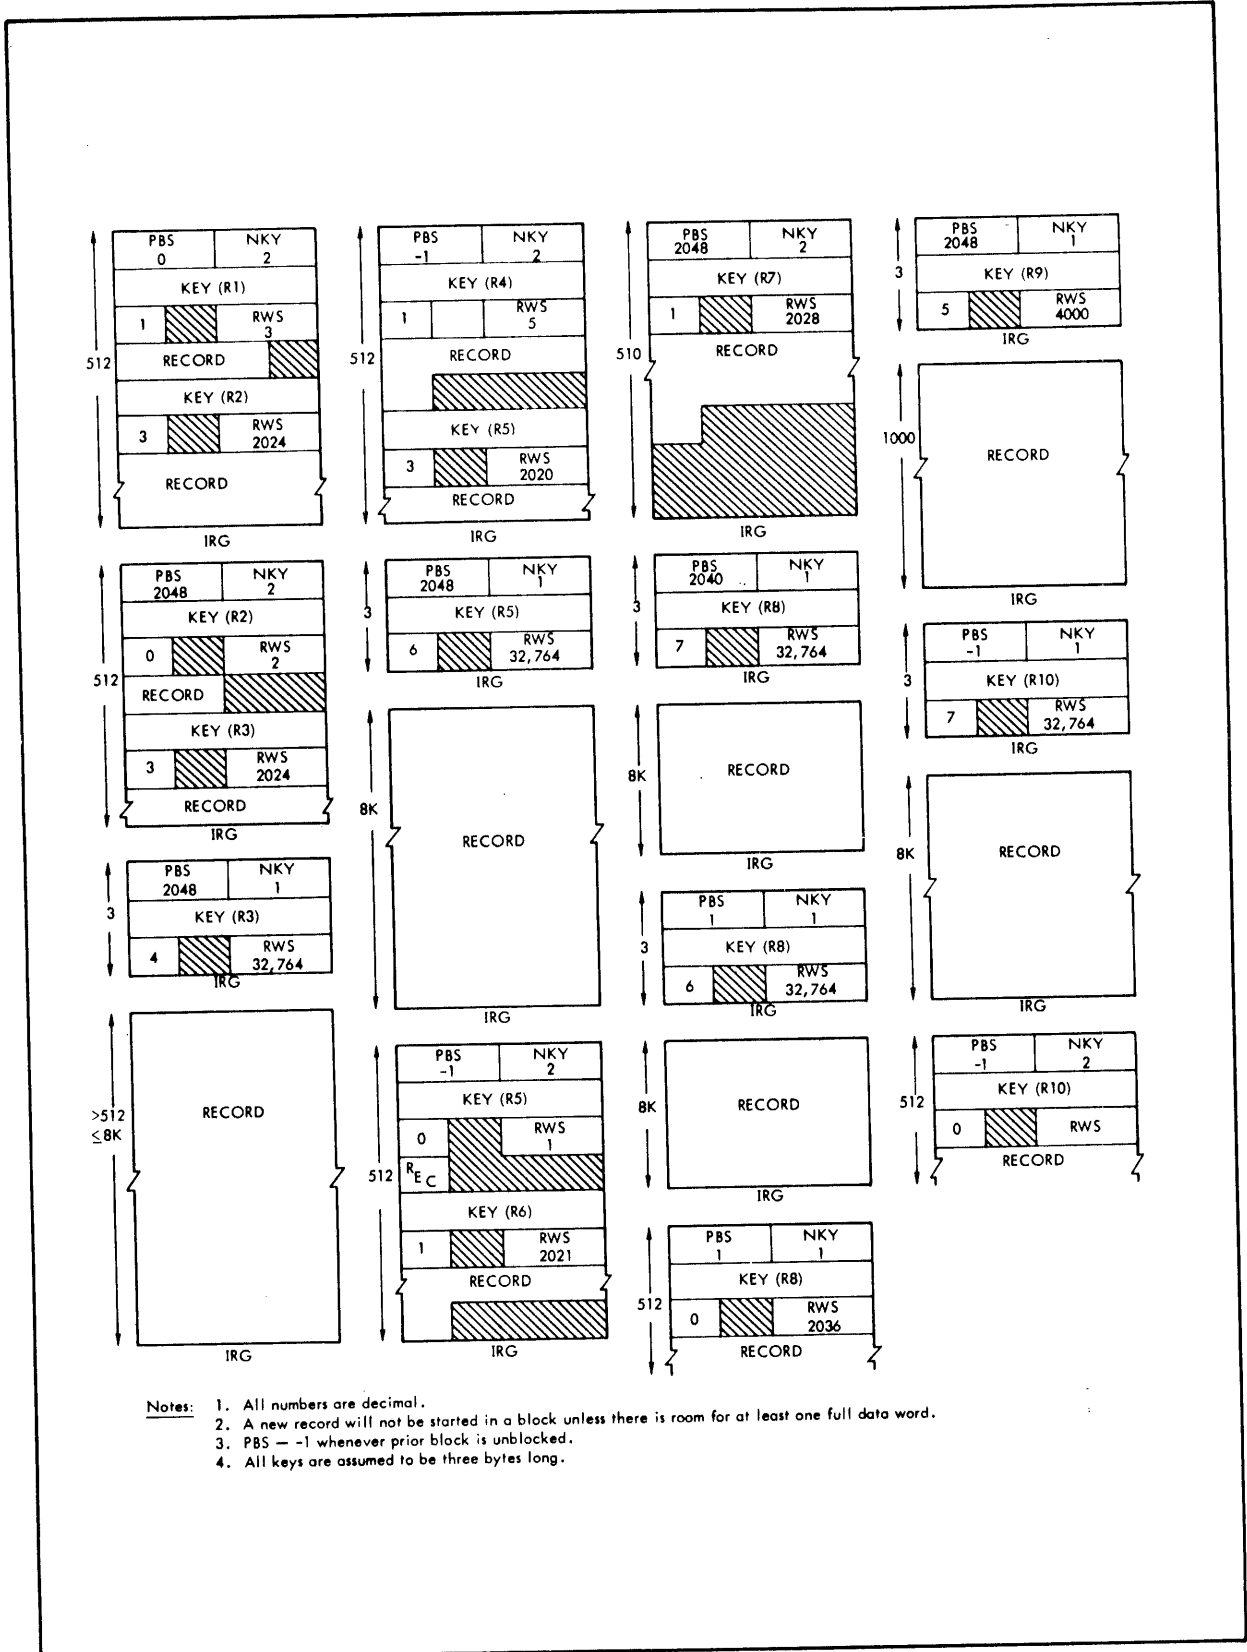

- Notes:
1. All numbers are decimal.
  2. A new record will not be started in a block unless there is room for at least one full data word.
  3. PBS = -1 whenever prior block is unblocked.
  4. All keys are assumed to be three bytes long.

Figure 16.1 Examples of Different Types of Records

SKEY is size of key.

RWS is size of record in block.

$P_3$  is 1 if record is unblocked, 0 if blocked.

$P_2$  is 1 if record is continued into next block, 0 if record is not continued.

$P_1$  is 1 if this is first part of record, 0 if it is not first part.

Truth Table. Combinations of Record Types

Unblocked $P_3$	Continued $P_2$	1st. Segment $P_1$	Meaning of Control Bits
0	0	1	Record is wholly contained within this 512 word block.
0	1	1	1st record segment of N segments. Continued next block.
0	1	0	Not possible.
0	0	0	Nth record segment ( $N > 1$ ) of N. If $N > 2$ , $\therefore$ N-1 was unblocked.
1	0	0	Physical record following is Nth segment of N ( $N > 1$ ).
1	0	1	Physical record following is complete.
1	1	1	Physical record following is not complete. Size = 8K words.
1	1	0	Physical record following is not complete. Size = 8K words. This is ith segment of N ( $1 > i < N$ ).

ANS TAPE, GENERAL FORMAT AND SENTINELS

The overall structure for ANS tapes and the sentinel format are shown below.

Single file, single volume

VOL1 - HDR1 - HDR2 - UHL1 \* file A \* EOF1 - EOF2 - UTL1\*\*

Single file, multi-volume

VOL1 - HDR1 - HDR2 - UHL1 \* file A \* EOVI - EOVI - UTL1\*\*

VOL1 - HDR1 - HDR2 - UHL1 \* file A \* EOF1 - EOF2 - UTL1 \*\*

Multi-file, single volume

VOL1 - HDR1 - HDR2 - UHL1 \* file A \* EOF1 - EOF2 - UTL1 \*

HDR1 - HDR2 - UHL1 \* file B \* EOF1 - EOF2 - UTL1 \*\*

Multi-file, multi-volume

VOL1 - HDR1 - HDR2 - UHL1 \* file A \* EOVI - EOVI - UTL1\*\*

VOL1 - HDR1 - HDR2 - UHL1 \* file A \* EOF1 - EOF2 - UTL1 \*

HDR1 - HDR2 - UHL1 \* file B \* EOF1 - EOF2 - UTL1 \*\*

Note: An asterisk denotes a physical tape mark.  
A dash denotes an inter-record gap.



CP-V TECHNICAL MANUAL

ANS TAPES - Block counts, file and volume sequence numbers

Single file, single volume

VOL1 - HDR1110 \* file A - file A - file A \* EOF1113 \*\*

Single file, multi-volume

VOL1 - HDR1110 \* A - A - A \* EOF1113 \*\*

VOL1 - HDR1210 \* A - A - A - A \* EOF1214 \*\*

Multi-file, single volume

VOL1 - HDR1110 \* A - A \* EOF1112 \* HDR1120 \* B \* EOF1121 \*\*

Multi-file, multi volume

VOL1 - HDR1110 \* A - A \* EOF1112 \* HDR1120 \* B \* EOF1121 \*\*

VOL1 - HDR1220 \* B - B - B \* EOF1223 \*\*

NOTE:

An asterisk denotes a physical tape mark.

A dash denotes an inter-record gap.

The three numbers in HDR1/EOV1/EOF1 represent volume sequence number, File sequence number and block count respectively.


ANS TAPE LABELS FORMAT

<u>HEADER</u>	<u>CHARACTER POSITION</u>	<u>DESCRIPTION</u>	<u>SOURCE/VALUE</u>
VOLI	1-4	VOLI	
	5-10	Volume serial number	AVRTBL
	11	Security	0
	12-80	Not used	Blanks
H:HDR1/EOV1/EOF1	1-4	HDR1/EOF1/EOV1	
	5-21	Filename	DCB:FN (VLP=01)
	22-27	Serial number first volume	AVRSID
	28-31	Volume sequence number	DCB:CVO
	32-35	File sequence number	DCB:FSN
	36-41	Not used	Blank
	42-47	Julian creation date	date
	48-53	Julian expiration date	DCB:EXPR (VLP=04)
	54	Security	0
	55-60	Block count	DCB:BLKCNT
	61-73	CP-V version number	Core address X'2B'
74-80	Not used	Blanks	
HDR2/EOF2/EOV2	1-4	HDR2/EOF2/EOV2	
	5	Format	DCB:FMT
	6-10	Block size	DCB:BLKSZ
	11-15	Logical record size	DCB:LRCSZ
	16	Recording density	2(800 BPI)
	17	System use	0
	18-50	Not used	Blanks
	51-52	Buffer offset	0(4 if Format =V)
	53-80	Not used	Blanks

### GENERALIZED DISK ADDRESS

File Management routines work with generalized disk addresses which are the addresses of granules on disk or DP. IOQ is responsible for correctly converting the disk address to seek address for the specific device.

### GENERALIZED DISK ADDRESS FORMAT



where

**DCT** is the DCT index of the device (DCT indexes start with 1). Used for public files at all times, but for private files only when IOQ is called.

**VNO** the volume number within a private volume set, if the file is private. VNO is converted to a DCT index immediately before IOQ is called.

**Sector number** is the relative sector number (starting with 0) of the sector on the device. SX is the sector extension field. Bit 9 is the most significant bit of the sector number, and bit 8 is the next most significant bit.

CP-V TECHNICAL MANUAL

Consecutive File Format

All information in the consecutive file format is contained in full granule sized records. There are no master index half granules used. Many files consist only of control granules which are flinked and blinked and contain all record data and control information. Each record is broken into segments with length less than or equal to 2048 bytes. Record segments which are shorter than 2033 bytes are blocked into the control granules in monitor blocking buffers for input or output: but record segments of greater length are written from, or read to, the user's buffer directly.

Zero length records are treated as no record on output. Records which are less than 2049 bytes long appear as one segment, unless the record is shorter than 2033 bytes but longer than the amount of space available in the final granule of the file at the time it was written. If such is the case, the record is broken into two segments, the first filling out the current granule and the second starting a new final granule. Records with length greater than 2048 bytes are broken into a sufficient number of 2048 byte segments to reduce the remainder to less than 2049 bytes. This remainder is treated as described above.

Record Segments - Each record is broken into segments  $\leq$  2048 bytes.

Case 1. Record Segment  $<$  2033 bytes

Control Word:

- bit 0 = 0 (for blocked)
- bit 1 = FAK = 1 for initial segment of record, 0 if not initial.
- bit 2 = C = 0 for last segment of record, 1 if otherwise
- bit 3 = 0
- bit 4-15 = # of data bytes in segment (call it m)
- bit 16-31 = word position of previous record segment control word in this granule; or if this is the first segment in the granule, 0.

The next  $\left\lceil \frac{m+3}{4} \right\rceil$  words contain the data of the segment.

Case 2. 2033 bytes  $\leq$  Record Segment  $\leq$  2048 bytes

Control Word:

- bit 0 = 1 (for unblocked)
- bit 1 = FAK
- bit 2 = C
- bit 3 = 1 if preceding word in the granule is a backspace control word (see below).  
= 0 if this is the first record segment of the granule or if the preceding record segment in the granule is also unblocked.
- bits 4-7 = # of data bytes in the segment less 2033.
- bits 8-31 = generalized disk address of the granule containing the data starting at byte 0.

Case 3. Backspace Control Word. (This word is used only when a granule contains a blocked segment followed by an unblocked segment whose control word is in the same granule. The word is inserted following the data of the blocked segment and preceding the control word of the unblocked segment.)

bits 0-15 = 0

bits 16-31 = word position of previous record segment control word in this granule.

#### Control Information for Control Granules

Word 0 Blink

Word 1 Flink

Word 2

bit 0 = 0 if no case entries appear in the granule, 1 otherwise.

bit 1 = 0 for granule not full, 1 otherwise.

bits 2-15 = 0

bits 16-31 = If bit 1=0, the word position of the next available word in the granule.

If bit 1=1, the word position of the last segment control word in the granule.

The initial granule of a file contains the FIT for that file in words 4-83 of the granule. Word 3 contains a dummy segment control word of type described in Case 1 above with FAK = 0, C = 0, and M = 320. If a record is deleted from a consecutive file, the FAK bit in the first (or only) segment control word for the record is reset to 0.

CP-V TECHNICAL MANUAL

The following statements apply to the use of granules for consecutive files:

1. If the remainder of a record to be written is at least 2033 bytes long, up to 2048 bytes will be written unblocked except in one very rare circumstance (see paragraph 4 below).
2. If the remainder of a record to be written is at least 2033 bytes long, it will be written as one or two blocked segments. If the remainder will not fit entirely in the appropriate granule, as much as will fit is placed in that granule, and the remainder is placed in the succeeding granule as a continuation record segment.
3. All bytes of each granule are used except:
  - a. some number of bytes in the final granule of the file beyond the end of file;
  - b. up to fifteen bytes at the end of a data granule for an unblocked segment;
  - c. the final four bytes of a control granule will contain a backspace control word if a blocked segment would have otherwise started there;
  - d. up to three bytes per blocked final segment of a record will be unused if the record length is not congruent to zero modulo 4.
4. If the data granule of an unblocked record segment would fall into a different volume of a private volume set from the volume containing the control word for that segment, as many bytes from the start of the segment as will fit into the control granule are written in a blocked fashion to fill out the control granule.


The following changes to the CFU (FIT) and DCB are made:

1. TDA in the CFU (FIT) contains the number of records in the file.
2. FDA and LDA in the CFU (FIT) now contain the appropriate granule addresses as opposed to half-granule addresses.
3. The TRN bit in word 5 of the DCB is 1 only if the most recently executed operation on the file was a read backwards.
4. The fourteenth word of the DCB (W14) contains one of the following:
  - a. 0 if at BOF
  - b. the contents of TDA, if at EOF
  - c. the sequential record number of the record most recently read or written.
5. The nineteenth word of the DCB (W14) contains the direction (+ or -) and the number of records that must be skipped from the position indicated in W14 prior to a data transfer operation (read, write, or delete).
6. The CMD halfword in word 20 of the DCB contains a word position in the granule pointed to by DCBCDAM (see below).
7. DCBCDAM in word 21 of the DCB contains a disk address of a granule reflecting (in conjunction with CMD and W14) the location in the file at which the most recent data transfer operation took place.

It should be noted that all positioning operations for consecutive files will be done with no I/O. Positioning operations are PRECORD, PFIL, and OPEN with extension. When these operations are encountered, the appropriate modification is made to W19 of the DCB. Only when a data transfer operation is about to take place will the positioning be effected; and at that time, there will be three known points in the file which can be used as a starting point (beginning-of-file, end-of-file, and the position chosen will be the one which requires the fewest record skips to be made.

On a delete forward operation on a consecutive file, all vacated granules will be returned to the availability pool at that time rather than when the file is released.

**PUBLIC FILES**

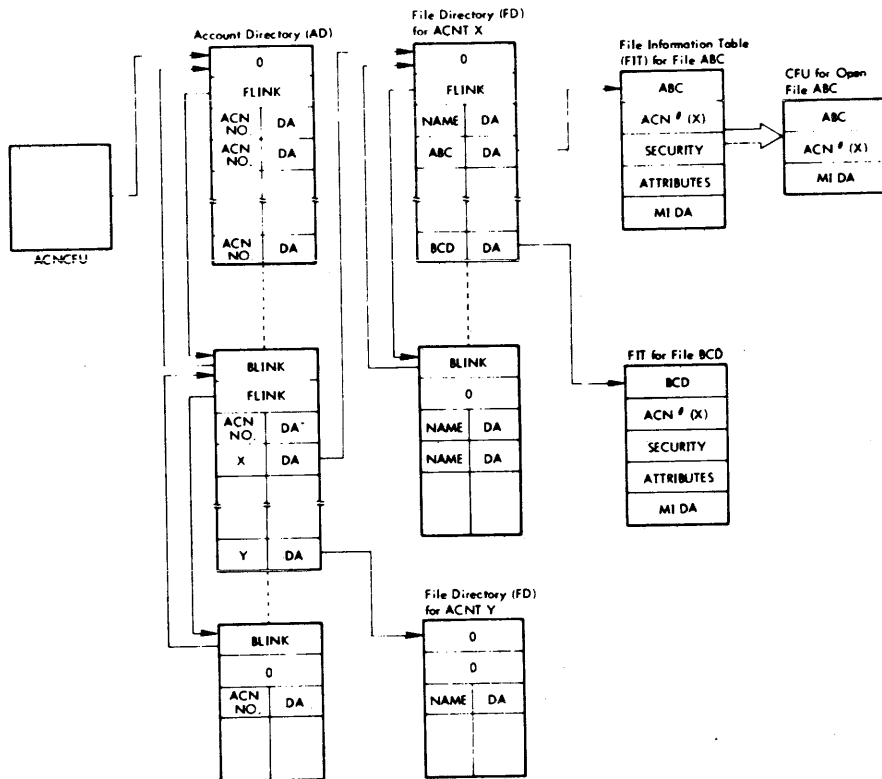


**OPEN**

1. First block of AD read into index buffer.
2. If desired ACN not there, second block of AD read into index buffer, etc.
3. When ACN is found, disk address (DA) of account's FD is available.
4. First block of FD read into same index buffer.
5. If desired file not there, second block of FD read into index buffer, etc.
6. When file is found, disk address of file's FIT is available.
7. FIT is read into same index buffer.
8. Security checks are made.
9. File's attributes initialize DCB.
10. FIT less security information and file attributes transferred to CFU and index buffer released.
11. File is now open.

**PUBLIC KEYED FILES**

(Without Higher-Level Index)

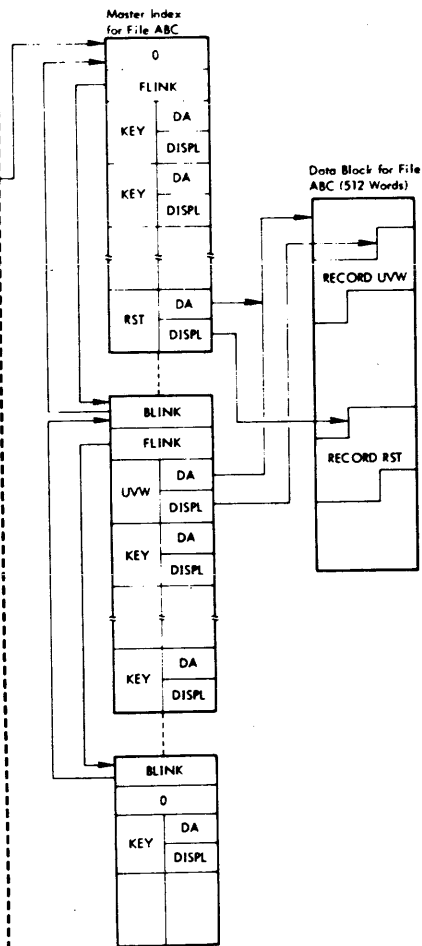


**FIRST READ**

1. First block of MI read into index buffer.
2. If desired key not there, second block of MI read into index buffer, etc.
3. When key is found, DA of data block in which record is contained is available.
4. Obtain blocking buffer (BB) and read data block.
5. Transfer record to user's buffer.

**SUBSEQUENT READS**

6. Requested key searched in current MI block.
7. If not there, read next adjacent MI block.
8. When key is found, determine if BB contains required data block.
9. If not, read required data block into BB.
10. Transfer record to user's buffer.

VH. 19. Schema for Locating and Referencing Public Files

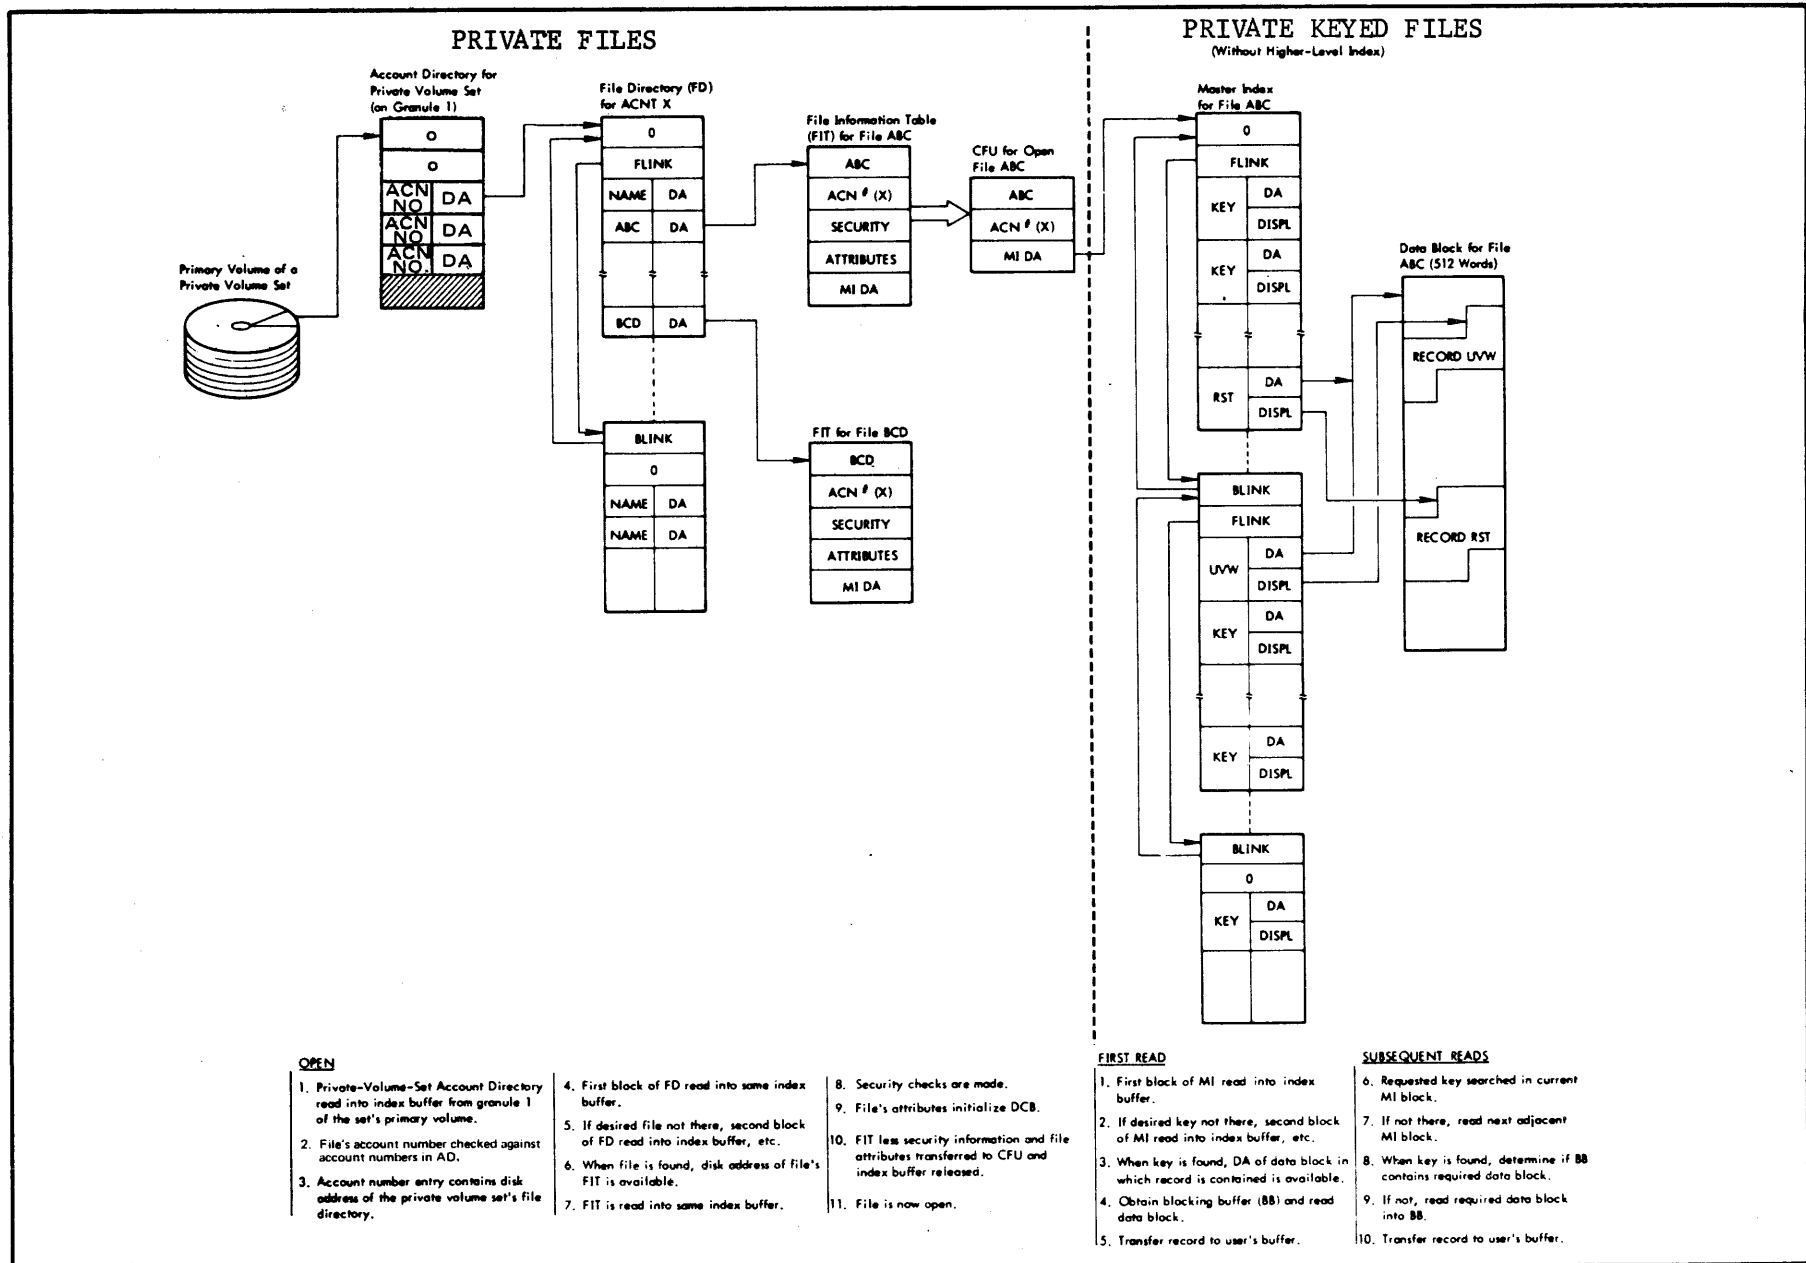


VH. 20 Schema for Locating and Referencing Private Files




READ-AHEAD TABLES

Parallel Tables - Length = RASIZE

RA:DA

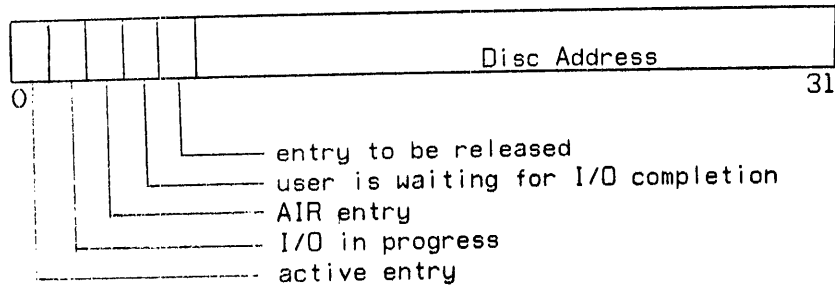


RAH:DCB \*




Most significant 16 bits of DCB address

RAH:TIME




Time at which this entry was gotten  
(32 msec units)

RAX:PAGE




Physical page address of buffer for  
this entry

RAB:USER \*




User number of user associated with this  
ENTRY

RAB:FLINK



Index of next oldest active entry

RAB:BLINK



Index of next newest active entry

The zeroth index into the table is used as follows:

RAB:USER	links the unused entries
RAB:FLINK	links the used entries from oldest to newest
RAB:BLINK	links the used entries from newest to oldest

\* UNUSED FOR AIR ENTRIES

Single Cells

RA:CURA	number AIR entries currently active
RA:CURR	number read-ahead entries currently active
RA:CURF	number entries in free pool (inactive but with a buffer page associated)
RA:ABNTB	number operations not started because of not enough table entries
RA:ABNCO	number operations not started because no free core page available
RA:ABNTA	number AIR entries timed out
RA:ABNTR	number read-ahead entries timed out
RA:ABNNN	number read-ahead entries not needed
RA:ABNWP	number times a read-ahead buffer is requested but the read-ahead that was done for a different disc address
RA:ASTOR	number attempts to add a file directory (AIR) entry
RA:SSTOR	number AIR entries successfully added
RA:AINIT	number attempts to start a read-ahead
RA:SINIT	number read-aheads started
RA:AGET	number attempts to retrieve an AIR entry

CP-V TECHNICAL MANUAL

SECTION VH.21  
PAGE 3  
10/31/74

RA:SGET	number AIR entries successfully retrieved
SL:RAMR	maximum number simultaneous read-aheads allowed
SL:AIRM	maximum number simultaneous AIR entries allowed
SL:RAMF	maximum number pages allowed in free pool
SL:RATOR	time-out for read-ahead entries
SL:AIRTO	time-out for AIR entries

SYMBIONT COOPERATIVE DATA BASES


Symbiont File Block Format - In CP-V both input and output symbiont file blocks have the same format. Each such block contains 256 words, and two blocks reside in a granule of file storage. Word 0 of the block is used for forward link address that is inserted by the system when the file is created. A value of zero implies no forward address (i.e., end of file). Word 255 is used for the backward link address again inserted when the file is created. A value of zero implies no backward address (i.e., beginning of file). Each record in the block is preceded by four bytes of control information. Neither the record nor the control information need start on a word boundary except the first control string. Each control string must immediately follow the preceding record. The first two bytes of a control string are the byte count (BC) of the following record. BC must be greater than zero and less than 1008. No record may be split between blocks. If a block does not have space remaining for a block end control string, a record control string and a record, the next record must begin in a new block. The third byte of a control string is the record control character (RCC) which defines the record.

RCC =	0	a BCD record (e.g., card)
	1	an EOD record (e.g., !EOD)
	2	a binary record (BIN)
	4 or 5	a PRINT record without a VFC character
	6 or 7	a PRINT record, the first byte of which is a VFC character
	x'40'	a block ending control string (i.e., no more records this block)
	X'86'	header line for on-line output.
	X'88'	header line for output repackaged by recovery.

SK=3 at least for header lines; the first two skipped bytes are the number of times the line is to be printed and the VFC character to be used each not-first time the line is printed.

Other values for RCC are reserved for future enhancements and should not be used. The fourth byte of a control string is the skip byte (SK) defined for the convenience of the block encoder. SK may have the values 1 through 4 inclusive.

The next SK-1 bytes following the control sequence have no significance and are skipped before the start of data. The skipped bytes are provided to allow a byte aligned MBS instruction (the most efficient execution) to move the bytes into the symbiont block, or to allow placement of the record on a word boundary for record construction ease. The final control string of a block must have RCC = x'40'. BC and SK are not relevant in the final control string.

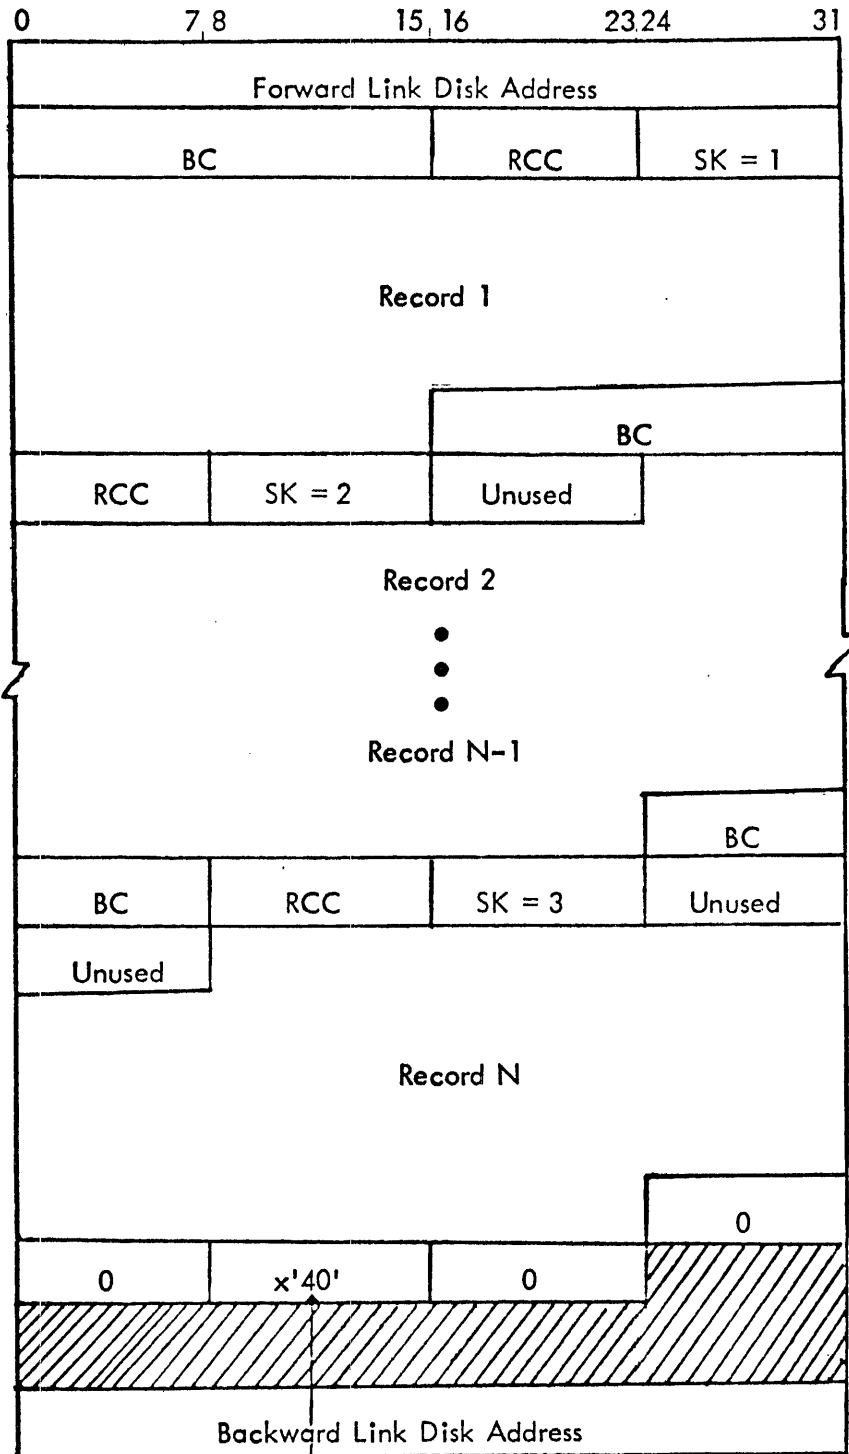


SYMBIONT FILE BLOCK FORMAT

End of data this buffer. If forward link disk address = 0, this is EOF.  
If not, file is continued at forward link.  
Records are never split between blocks.

CP-V TECHNICAL MANUAL

SYMTAB - SYMBIONT TABLES

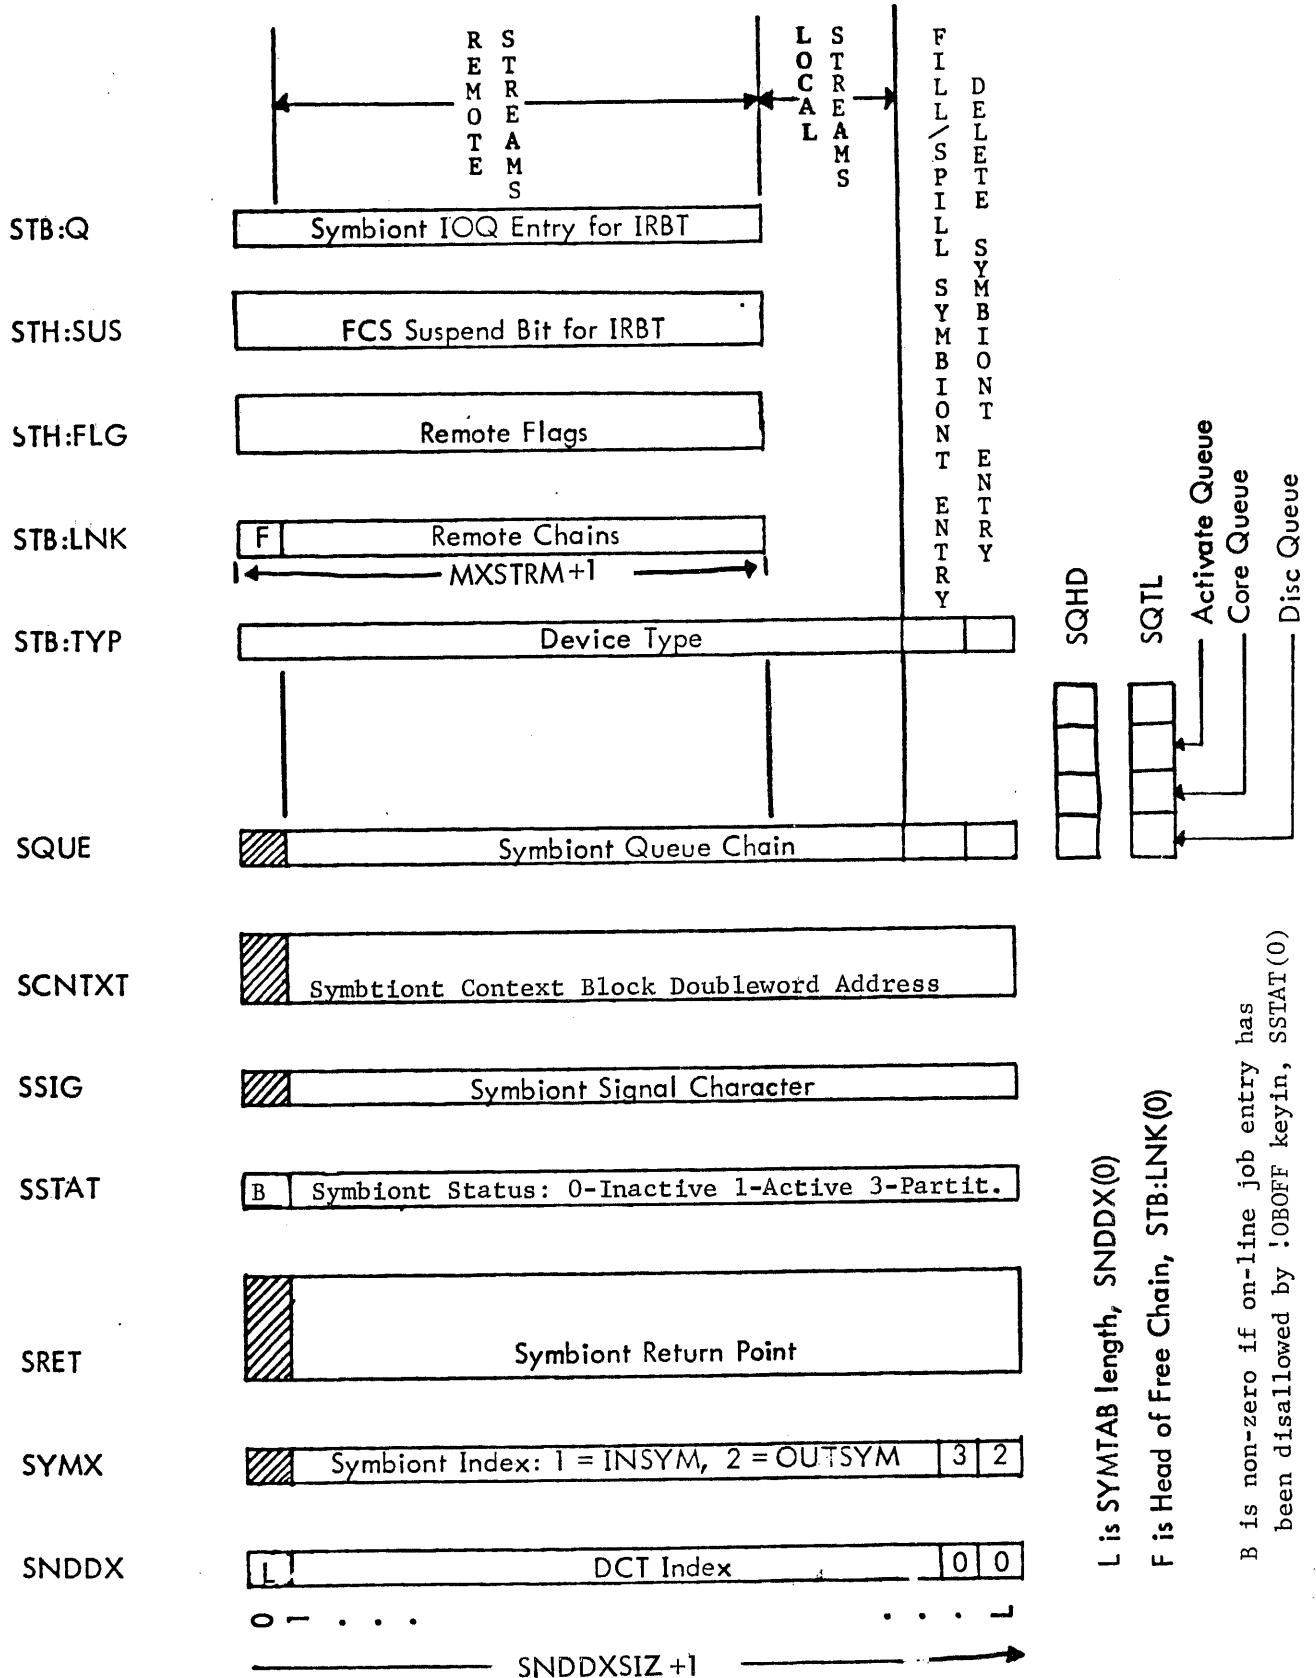

L is SYMTAB length, SNDDX(0)  
 F is Head of Free Chain, STB:LNK(0)

B is non-zero if on-line job entry has been disallowed by !OBOFF keyin, SSTAT(0)


FORMAT OF SYMX ENTRY

0	1	2	3	4	5	6	7
T	L	O	K	I	N	O	I
E	I	C	E	R	C	U	N
R	S	P	E	B		T	
M	T		P	T			

IN = 1        signifies input symbiont  
 OUT = 1     signifies output symbiont  
 NC = 1     signifies non-control mode if IN  
              signifies write EOF if OUT  
 IRBT        device is on an IRBT

KEEP = 1     signifies that granules are kept until done  
 OCP = 1     signifies OCP device  
 LIST = 1    signifies Listing type device  
 TERM = 1    signifies terminate on EOF

DEVICE DCB - WORD 12

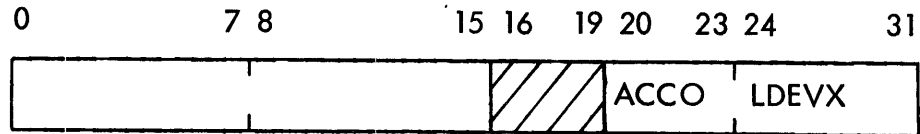


where:

ACCO = 0,     no accounting  
          1,     Do-type accounting  
          2,     PO-type accounting  
          3,     UO-type accounting  
          4,     LO-type accounting


LDVEX =        index into SH:LNМ

SYMBIONT TABLES IN RBBAT

STW:FORM

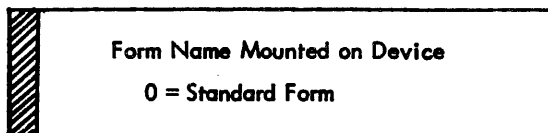


STH:CMDV




STH:NM



STB:DPD

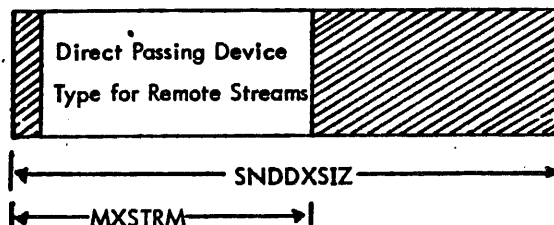

FORMAT OF STH:FLG ENTRY

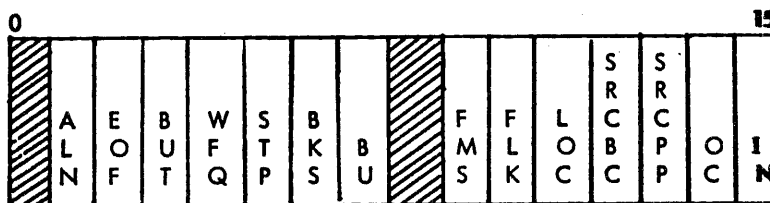

IN  
OC  
SRCBP }  
SRCPC }  
LOC  
FLK }  
FMS }


Input  
Operator console  
SRCB type of device  
Device locked if set  
CP-V to CP-V  
Forms control

BU }  
BKS }  
BUT }  
STP  
WFQ  
EOF  
ALN

FCS device  
Suspend control  
Output ready  
Waiting for symbiont start  
EOF pending  
RBALIGN pending



LINKAGE BETWEEN LOGICAL DEVICE TABLES

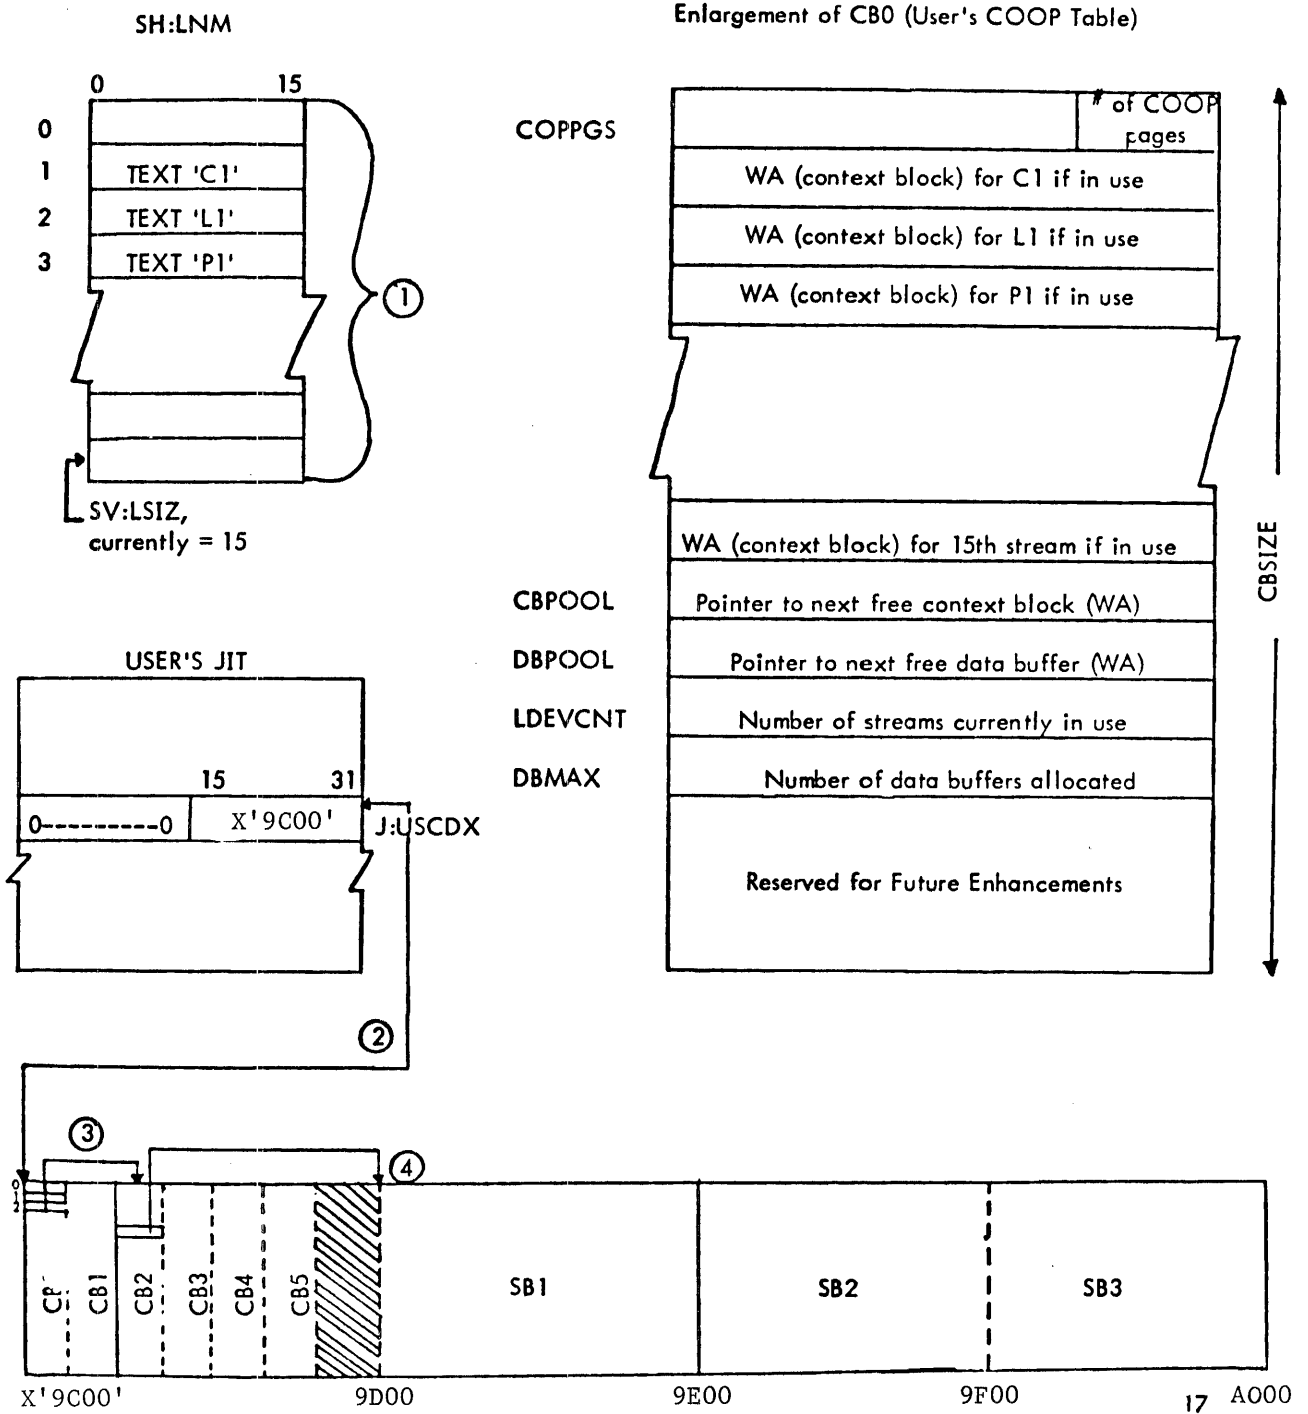

Notes on diagram "LINKAGE BETWEEN LOGICAL DEVICE TABLES"

1. Given a stream name in text, find index into SH:LNМ (e.g., L1 has index 2).
2. Fetch J:USCDX which points to base of user's COOP table (X'9C00' in example).
3. Use index from Step 1 to fetch context block pointer for this stream (e.g., L1 has context block CB2).
4. Fetch stream's data buffer address from context block using displacement symbol SCFBUF (e.g., L1 has data buffer SB1 as indicated in CB2).

CP-V TECHNICAL MANUAL

Symbiont/Cooperative Context Block - The context block for symbiont/cooperative operations has been totally redefined for CP-V. The salient features of the new context block format include:

1. Definition of new displacement symbols, conforming to more rigorous conventions than previously (i.e., all start with "SC"; "SCF" signifies a file-related value; "SCD" signifies a device-related value). All current symbols (e.g., SCBINFOX, SCJOBX) have been discarded.
2. Space is provided in the new context block for NEWQ arguments used in performing disc and device I/O operations (SCFQARGS, SCDQARGS). Notice that there is not a DCB in the CP-V context block.
3. Space is provided for "stream attribute" values which are modifiable by the user via the LDEV command (e.g., SCSEQ, SCFORM, SCMISC). All stream attribute fields are used in the cooperative context block; some of them are free for different use by INSYM and OUTSYM (since LDEV acts directly on the COOP's context block only).
4. Space is provided for values maintained internally by the symbiont/cooperative system, including values related to symbiont file construction (SCBLDA, SCFLDA, SCSVDGI) and values used for accounting purposes (SCRCO, SCPCO, SCGCO).

CP-V TECHNICAL MANUAL

WORD	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31
0	0 SYMTABX		SYMBIONT BASE ADDRESS																													
1																									DEVICE TYPE							
2																																
3	BLINK DISC ADDRESS																															
4	FIRST DISC ADDRESS OF FILE																															
5	WRITE DISC FUNCTION CODE	I/O PRIORITY				NRT				0-----0																						
6	BLOCKING BUFFER BYTE ADDRESS																															
7													BLOCK BYTE COUNT																			
8	FILE CURRENT DISC ADDRESS																															
9	FILE SIDE:END ACTION ADDRESS																															
10	READ FUNCTION CODE	I/O PRIORITY				NRT				DEVICE DCTX																						
11	CURRENT BLOCK POINTER (BYTES)																															
12	MAXIMUM RECORD BYTE COUNT																															
13																									SYMTABX							
14	DEVICE SIDE:END ACTION ADDRESS																															
15	DISC WRITE FOLLOWON: 0 READ A CARD, 1 ADD INPUT FILE																															
16	4 WORD TEMPORARY SAVE AREA																															
17																																
18																																
19																																
20																																
21	BLOCKING MODE: 1 RB CC's, 0 NORMAL																															
22	(COUNT OF RECORDS READ) - 1																															
23	COUNT OF JOB CARDS																															
24	# OF GRANULES																															
25	BASE OF 3 WORD "NO COMM BUFF" TEMP AREA																															
26																																
27																																
28	FIN	FIN = 1 IF FIN CARD HAS BEEN READ																														
29																									SYMX BYTE FOR THIS STREAM							
30	NAME FROM !INCTL CMD																															

INSYM CONTEXT BLOCK

CP-V TECHNICAL MANUAL


Section VI.01  
Page 9  
4/1/74

WORD	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31
0	0																									STREAM NUMBER						
1	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	
1	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	
2																																
3	BLINK DISC ADDRESS																															
4	FILE STARTING DISC ADDRESS																															
5	READ OR WRITE DISC FUNC. CODE	I/O PRIORITY					NRT					0-----0																				
6	0	CORE BLOCK ADDRESS																														
7	FCN # IO IN PROGRESS																BLOCK BYTE COUNT															
8	FILE CURRENT DISC ADDRESS																															
9	0	0-----0					FILE SIDE END ACTION ADDRESS																									
10																																
11	CURRENT BLOCK POINTER BYTES																															
12																																
13																																
14																																
15																RBID																
16																									MINIMUM RECORD SIZE OR LINES PER PAGE							
17																									MAXIMUM RECORD SIZE OR WIDTH							
18	COUNT					SPACE					JDE					COPIES																
19	SEQUENCE ID																															
20																																
21																									BLOCKS PROCESSED THIS FILE							
22																									RECORDS PROCESSED THIS FILE							
23																									PAGES PROCESSED THIS FILE							
24	FORM PROJECTOR CONTROL																															
25	FORM NAME (OR ZERO FOR NONE)																															
26	FUTURE FORM NAME (OR ZERO FOR NONE)																															
27	RELEASE PREVIOUS DISC ADDRESS																															
28																									CURRENT USER NUMBER							
29	CURRENT LINE COUNT THIS PAGE																															

COOP CONTEXT BLOCK

Word	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31
0	0	SYMTABX	SYMBIONT BASE ADDRESS																													
1													Flags (Bit description next page)						DEVICE TYPE													
2	FLINK DISC ADDRESS																															
3	BLINK DISC ADDRESS																															
4	COPY COUNT		FILE OLDEST DISC ADDRESS																													
5	READ DISC FUNCTION CODE		I/O PRIORITY						NRT						0-----0																	
6	0		CORE BLOCK ADDRESS																													
7													BLOCK BYTE COUNT																			
8	FILE CURRENT DISC ADDRESS																															
9	0	FILE SIDE:END ACTION ADDRESS																														
10	RECORD FUNCTION CODE		I/O PRIORITY						NRT						DEVICE DCTX																	
11	CURRENT BLOCK POINTER (BYTES)																															
12	CURRENT RECORD BYTE COUNT																															
13	SYMTABX OR RESTORE DISC ADDRESS																															
14	0		DEVICE SIDE:END ACTION ADDRESS																													
15	SYMBIONT PRIORITY		RBID						FILE SYSID																							
16	VARIOUS TEMP. USES (SCTYC)																															
17	I/O CALL ADDRESS																															
18	LAST TOP OF FORM DISP.																															
19	LAST TOP OF FORM DISK ADDRESS																															
20	IRBT BACKUP DISP.																															
21	IRBT BACKUP DISK ADDRESS																															
22	IRBT TEMP. BACKUP DISP.																															
23	IRBT TEMP. BACKUP DISK ADDRESS																															
24	# OF GRANULES REMAINING IN FILE																															
25	RETRY COUNTER FOR BLINK FAILURE																															
26	KEYIN BACKUP DISK																															
27	BACKUP LIST																															
28	⋮																															
39																																

Flags - Word 1 of OUTSYM context block

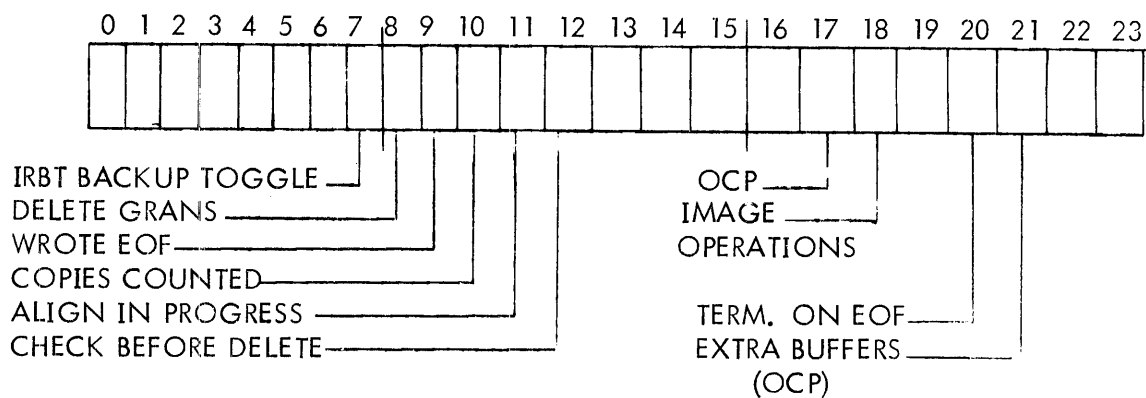

Symbiont/Cooperative Context Block Displacement Symbols

SCAIF	ADD input file flag Used by INSYM at Disc write end action to decide to read a card (SCAIF = 0) or ADD input file (SCAIF = 1).
SCBESTDA	Best Disk Address File starting disk address used by INSYM to AIF, SYMFILS to delete partial input file, COOP to AOF, SYMFILS to add output, OUTSYM to AOFF. When OUTSYM is deleting or outputting with catchup delete this is the oldest not deleted granule.
SCBLDA	Backward Link Disc Address Contains SCCDA's predecessor except while updating disk addresses.
SCBSIZ	Block Size Used as the file side size argument to NEWQ and as the boundary during block construction.
SCBUDA	Backup Disk Address Is the Backup point for OUTSYM for the 'R' Keyin (and 'Q' in 'DELETE' mode).
SCBUPPT	Backup Point Used by OUTSYM when IRBT routines request symbiont to backup because of line block reconstruction. This 2 word area contains an appropriate SCDBI and SCCDA.
SCBUPPTS	Backup Point Save Used by OUTSYM to define point of last record output. When IRBT routines send a block down the line this 2 word area is copied over SCBUPPT.
SCCDA	Current Disk Address NEWQ argument defining source or destination of current block on file; used by SYMFILS in output closing.
SCGUN	Current User Number Used by COOP to pass to the end-action routine the number of the user whose I/O is completing so the event may be reported.



SCDALST	OUTSYM Backup Disk Address List Previously output disk addresses used by OUTSYM for the Syyndd, R Keyin.
SCDALSZ	Size of SCDALST Currently 14.
SCDBC	Device Byte Count Symbiont NEWQ argument for record transfer
SCDBI	Data Byte Index Byte displacement to the source or destination of the next record to be processed.
SCDCDA	Device CDA NEWQ argument slot used to pass symbiont SYMTABX to handler or HASPIO.
SCDEV TYP	Device type Byte 3 contains normal device type for operations on local peripherals but is only meaningful to HASPIO on remote operations. Bytes 0-2 are flags.
SCDINFO	Device Information Defines the base of the module specific information. Used by INSYM as the start of a 4-word save area.
SCDQARGS	Device IOQ Arguments Base of a 5-word NEWQ device calling sequence. Contains IO handler function code, IO request priority, number of retries and DCTX in bytes 0-3 respectively.
SCDQFC	Device IOQ Functions Codes Base of an 8-byte (2 word) translation table used to convert generalized system function codes into specific handler function codes.
SCFBUF	File Buffer Contains either a byte address or word address, physical or virtual (as appropriate and convenient to the routine using the context block) which indicates the blocking buffer currently being used.
SCFCO	File Count Used by OUTSYM as a count of files processed since initiation.

SCFFORM	<p>Future Form The name of the FORM to be used when the user issues an M:DEVICE (FORM) CAL without a form name.</p>
SCFINFLG	<p>IFIN Flag The high order bit is used by INSYM to remember to communicate to RBBAT that the current file was terminated by a IFIN control card.</p>
SCFLDA	<p>Forward Link DISC Address Used in symbiont file linkage handling to hold the DISC address of the next block.</p>
SCFORM	<p>FORM Name Used by COOP to contain the name of the paper or card stock to be associated with an output file or to identify the desired non-control input file.</p>
SCFPC	<p>FORM Projector Control Used by COOP to contain the name of the overlay to be used on SHAMROCK FORM projector for the output file</p>
SCFQARGS	<p>File Queue Arguments Base of a 5-word NEWQ calling sequence. Contains handler function code, IO request priority, number of retries in bytes 0, 1, and 2, respectively.</p>
SCGCO	<p>Granule Count Actually the count of the number of symbiont blocks in the file which is two times the number of granules.</p>
SCJCO	<p>JOB Count Used by INSYM to count the number JOB cards encountered since initiation. Also used to recognize and treat properly the case of a lone IIFIN card.</p>
SCLINES	<p>Line Count This Page Used to recognize listing page boundaries for header processing in output file creation.</p>
SCMAXR	<p>Maximum Record Size COOP truncates output records to this size while blocking. Also used in the blocking buffer full test.</p>

SCMINR	<p>Minimum Record Size Used in output file creation to pad short records to an acceptable width. On a listing type device, this cell contains the number of lines per page.</p>
SCMISC	<p>Miscellaneous Contains miscellaneous output file attributes such as column of stream heading page count, default line spacing, job descriptor entry and number of copies.</p>
SCMODE	<p>Blocking Mode Used by INSYM to control file terminations. SCMODE = 1 implies !JOB or !IFIN terminates this file, SCMODE = 0 implies !JOB or !IFIN or !RB terminates. Thus, SCMODE = 1 while blocking RB CCs into a file.</p>
SCNCBT	<p>No Communication Buffer Temp. Defines a 4-word area to hold RBBAT communication arguments while a symbiont is waiting in the activate queue for an RBBAT communication buffer.</p>
SCPCO	<p>Page Count Contains number of print pages processed for the current file.</p>
SCRCO	<p>Record Count Contains the number of records processed for the current file.</p>
SCRCVLST	<p>Recovery List A pointer to and control word for the list of prior disc addresses not released in catchup deletion mode in OUTSYM.</p>
SCRPA	<p>Release Previous Disc Addresses If nonzero, contains a disc address not released by cooperative end-action because ALLOCATs core stacks were full.</p>
SCSEQ	<p>Sequence ID Contains the sequence ID to be used in stream card sequencing.</p>
SCSVDGI	<p>Saved Ghost Information Contains the file priority, RBID and SYSID of the current file to be used to ADD partial output in the event of a 'Q' signal or system crash during OUTSYM processing.</p>

SCSYMX	<b>SYMX Table Contents</b> Contains for INSYM the contents of the appropriate entry in the SYMTAB table SYMX.
SCTOFDA	<b>Top of Form Disc Address</b> Disc address of the granule containing the record belonging on the tope of the current form.
SCTYC	<b>Type of IO Completion</b> Temporary holding place for TYC at OUTSYM end-action for later examinations.
SCXTRAB	<b>Extra Buffer List</b> A pointer to and control word for the list of buffers used by OUTSYM in multi-core buffer operation.


RBBAT COMMUNICATION BUFFERS

In the following descriptions, the numbers in the diagram below are used to describe the fields in a particular RBBAT communication buffer.

LINK	2	3	GFC
5	6	7	8
9	10	11	12
13	14	15	16

Byte 1 is always the link to the next buffer. The buffers are linked to SGCHD as in the diagram below.

Byte 4 is always the Ghost Function Code (GFC) which tells RBBAT what operation to perform.

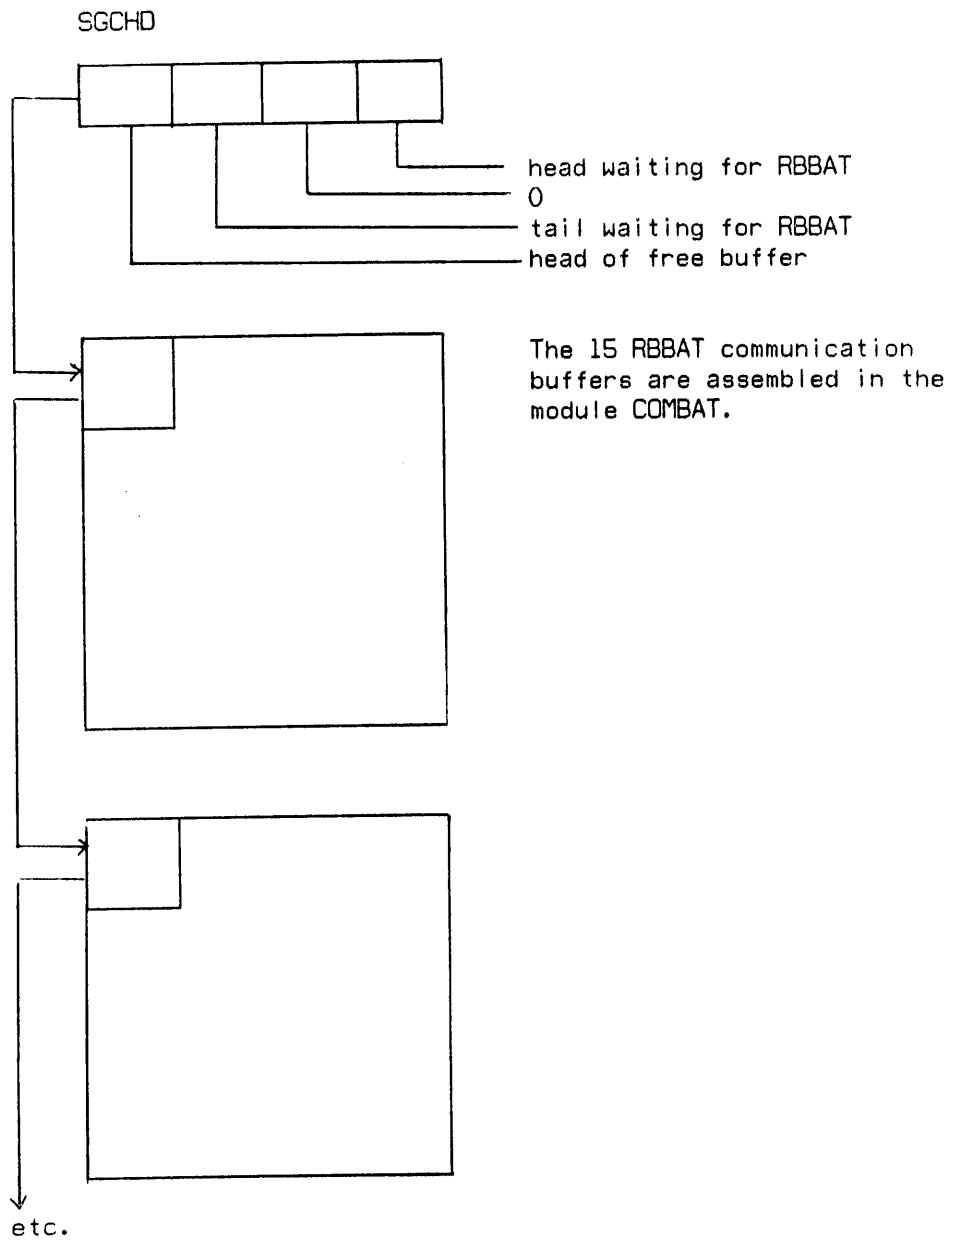

GFC: NOPGFC  
OPERATION: None - release buffer only  
CALLED BY: Those who use two (2) buffers  
NOTE: See the two-buffer-calls below.

---

GFC: AIF  
OPERATION: Add Symbiont Control Input File  
CALLED BY: INSYM  
Byte 2: SYMBX  
Byte 3: DCTX  
Bytes 5 - 8: Starting disk address  
Bytes 15 - 16: Number of granules

---

GFC: AIFJE  
OPERATION: Add JOBENT Control Input File  
CALLED BY: T:JOBENT  
Bytes 5 - 8: Starting disc address  
Bytes 9 - 12: SYSID

---

GFC: AIFNC  
OPERATION: Add Symbiont Non-control Input File  
CALLED BY: INSYM  
Bytes 2 - 3: SYMBX, DCTX  
Bytes 5 - 8: Starting disc address  
Bytes 9 - 12: Name from :NCTL  
Bytes 13 - 16: Number of granules

---

CP-V TECHNICAL MANUAL

SECTION VI.01  
PAGE 20  
10/31/74

GFC: AOF, AOFL, AOFNB  
OPERATION: Add Output File (Last, Non-Batch)  
CALLED BY: SUPCLS, T:JOBENT  
Byte 2: Link to second buffer if any  
Byte 3: Device type  
Byte 5: Number of copies  
Bytes 6 - 8: Starting disc address  
Byte 9: Priority  
Byte 10: RBID  
Bytes 11 - 12: SYSID  
Bytes 13 - 16: Number of granules

SECOND BUFFER

Byte 3: JDE  
Bytes 5 - 8: Form name  
Bytes 9 - 12: Forms overlay name

---

GFC: AOFB  
OPERATION: Add Partial Output File  
CALLED BY: OUTSYM  
Byte 2: SYMBX  
Byte 3: DCTX  
Byte 5: Number of copies  
Bytes 6 - 8: Starting disc address  
Byte 9: RBSWITCHED, HASP, PARTIAL, Priority (1,1,1,5)  
Byte 10: RBID  
Bytes 11 - 12: SYSID  
Bytes 13 - 16: Number of granules

---

GFC: MBSGFC  
OPERATION: Perform Multi-Batch Schedule  
CALLED BY: CLOCKI

---



GFC: AOF, AOFL, AOFNB  
OPERATION: Add Output File (Last, Non-Batch)  
CALLED BY: SUPCLS, T:JOBENT  
Byte 2: Link to second buffer if any  
Byte 3: Device type  
Byte 5: Number of copies or 1st byte of COMID (see SECOND BUFFER)  
Bytes 6 - 8: Starting disc address  
Byte 9: Priority  
Byte 10: RBID  
Bytes 11 - 12: SYSID  
Bytes 13 - 16: Number of granules

SECOND BUFFER

Byte 3: 2nd byte of COMID  
Byte 3 (bits 1 - 7): JDE, bit 0 of byte 3: if set, byte 5 of 1st buffer is 1st byte of COMID  
Bytes 5 - 8: Form name  
Bytes 9 - 12: Forms overlay name

Note: If a COMID is being passed and bit 0 of the first byte of the COMID is set, this indicates the last "chunk" of concurrent mode output.

---

GFC: AOFP  
OPERATION: Add Partial Output File  
CALLED BY: OUTSYM  
Byte 2: SYMBX  
Byte 3: DCTX  
Byte 5: Number of copies  
Bytes 6 - 8: Starting disc address  
Byte 9: RBSWITCHED, HASP, PARTIAL, Priority (1,1,1,5)  
Byte 10: RBID  
Bytes 11 - 12: SYSID  
Bytes 13 - 16: Number of granules

---

GFC: MBSGFC  
OPERATION: Perform Multi-Batch Schedule  
CALLED BY: CLOCK1

---

GFC: GOF  
OPERATION: Get Output File

CALLED BY: OUTSYM

Byte 2: SYMBX  
Byte 3: DCTX  
Bytes 5 - 8: -1

ON RETURN

Byte 5: Number of copies  
Bytes 6 - 8: Starting disc address (0 = no file)  
Byte 9: RBSWITCHED, HASP, ZERO, Priority (1,1,1,5)  
Byte 10: RBID  
Bytes 11 - 12: SYSID  
Bytes 13 - 16: Number of granules

---

GFC: GIFNC  
OPERATION: Get Non-Control Input File

CALLED BY: OPNLD

Byte 3: Device type  
Byte 5: User number  
Byte 8: RBID  
Bytes 9 - 12: Name

ON RETURN

Bytes 5 - 8: Starting disc address (0 = no file found)

---

GFC: PRIOGFC  
OPERATION: PRIO Keyin

CALLED BY: KEYIN

Byte 5: Device type (0 = all)  
Bytes 7 - 8: SYSID  
Bytes 9 - 12: New PRIO

GFC: KDELGFC  
OPERATION: DELE Keyin  
CALLED BY: KEYIN  
Byte 5: Device type (0 = all)  
Bytes 7 - 8: SYSID

---

GFC: KFRMGFC  
OPERATION: (SYYndd,F'XXXX') Type Form Keyin  
CALLED BY: KEYIN  
Byte 2: SYMBX of SYYndd  
Byte 3: JDE (-1 not changed)  
Bytes 5 - 8: Form name (-1 not changed)  
Bytes 9 - 12: Forms overlay name (-1 not changed)

---

GFC: KFCGFC  
OPERATION: (Form 3B) Type Form Keyin  
CALLED BY: KEYIN  
Byte 5: Device type  
Bytes 7 - 8: SYSID  
Bytes 9 - 12: New form name

---

GFC: KDISPGFC  
OPERATION: Display Keyins  
CALLED BY: KEYIN  
Bytes 5 - 8: A 0 = no option or OC  
                  1 = SYSID  
                  -1 = NORUN  
                  -2 = SYMB  
                  -3 = output  
Bytes 9 - 12: A=1 SYSID  
                  A=0 =0 on LP  
                          ≠0 on OC

---

GFC: KCOMGFC, SNDGFC, BCSTGFC  
OPERATION: RBCOM, RSEND, RBBCST Keyins  
CALLED BY: KEYIN  
Byte 3: DCTX to send to  
Bytes 5 - 8: MPOOL word address of TEXTC message

---

GFC: JESTAT  
OPERATION: JOBENT Status Request  
CALLED BY: T:JOBENT  
Byte 5: Requesting user number  
Bytes 7 - 8: SYSID for status

ON RETURN

Bytes 5 - 8: 1 = running  
2 = waiting to run  
4 = waiting to output  
0 = completed  
Bytes 9 - 12: number waiting to run if bytes 5 through 8 = 2

---

GFC: SWITGFC  
OPERATION: RBSWITCH Keyin  
CALLED BY: KEYIN  
Byte 2: Link to second buffer  
Byte 3: Byte count of WSN  
Bytes 7 - 8: SYSID  
Bytes 9 - 12: Device type (TEXT)

SECOND BUFFER

Bytes 5 - 8: 'TO' workstation name, word 1  
Bytes 9 - 12: WSN, word 2

---

GFC: JEDEL  
OPERATION: Cancel Command  
CALLED BY: T:JOBENT  
Byte 2: Link to second buffer  
Byte 4: Requesting user number  
Bytes 7 - 8: SYSID to delete

SECOND BUFFER

Bytes 5 - 8: Word 1 of account  
Bytes 9 - 12: Word 2 of account

ON RETURN (BUFF1)

Bytes 5 - 8: X'3A' no such file  
X'39' wrong account  
0 AOK

---

GFC: DUP, HUP  
OPERATION: RB Dial Up, RB Hang Up  
CALLED BY: BSCIO, RBSSS, DSCIO  
Byte 3: DCTX

---

GFC: LORR  
OPERATION: RB Logon Record Received  
CALLED BY: BSCIO, DSCIO, RBSSS  
Byte 3: DCTX  
Bytes 9 - 12: MPOOL word address of logon record

---

GFC: OCMGFC  
OPERATION: IRBT OC Input Message  
CALLED BY: HASPIO  
Byte 3: DCTX  
Bytes 9 - 12: MPOOL word address of message

CP-V TECHNICAL MANUAL

SECTION VI.01  
PAGE 25  
10/31/74

GFC: RCVRIGFC  
OPERATION: Marks Point of Recovery in COMBUFS  
CALLED BY: RECOVER

---

GFC: RCVRGFC  
OPERATION: Perform RBBAT Recovery  
CALLED BY: RECOVER

Bytes 5 - 8: Size of dynamic data (-1 says recovery doesn't know)  
Bytes 9 S:CUN at time of crash  
Bytes 10 - 12: Flags

1	=	operator recovery
2	=	data zapped
4	=	COMBUFS zapped
8	=	RBBAT wasn't running

---

GFC: KOSTOP  
OPERATION: OUTPUT STOP keyin  
CALLED BY: KEYIN  
Byte 2: SYMBX


---

GFC: KFLUSH  
OPERATION: FLUSH keyin  
CALLED BY: KEYIN  
Byte 2: SYMBX  
Byte 3: Device Type  
Bytes 7 - 8: SYSID

MBS TABLES IN RBBAT: PRIORITY TABLE

Name	Index	Table Name	
		BH:HPRI	BH:TPRI
OIPRI	0	Head of PRIO 0 Input	Tail of PRIO 0 Input
		⋮	⋮
FIPRI	F	Head of PRIO F Input	Tail of PRIO F Input
RUNPRI	10	Head of Running Jobs	Tail of Running Jobs
OOPRI	11	Head of PRIO 0 Output	Tail of PRIO 0 Output
		⋮	⋮
FOPRI	20	Head of PRIO F Output	Tail of PRIO F Output
MFPRI	21	Head of Message File Output	Tail of Message File Output
NCIPRI	22	Head of Non-Control Input	Tail of Non-Control Input
DELPRI	23	Head of Files to be Deleted	Tail of Files to be Deleted
FREI	24	Head of Free Input Slots	Tail of Free Input Slots
FREO	25	Head of Free Output Slots	Tail of Free Output Slots

- Both are halfword tables
- Displacements are hexadecimal

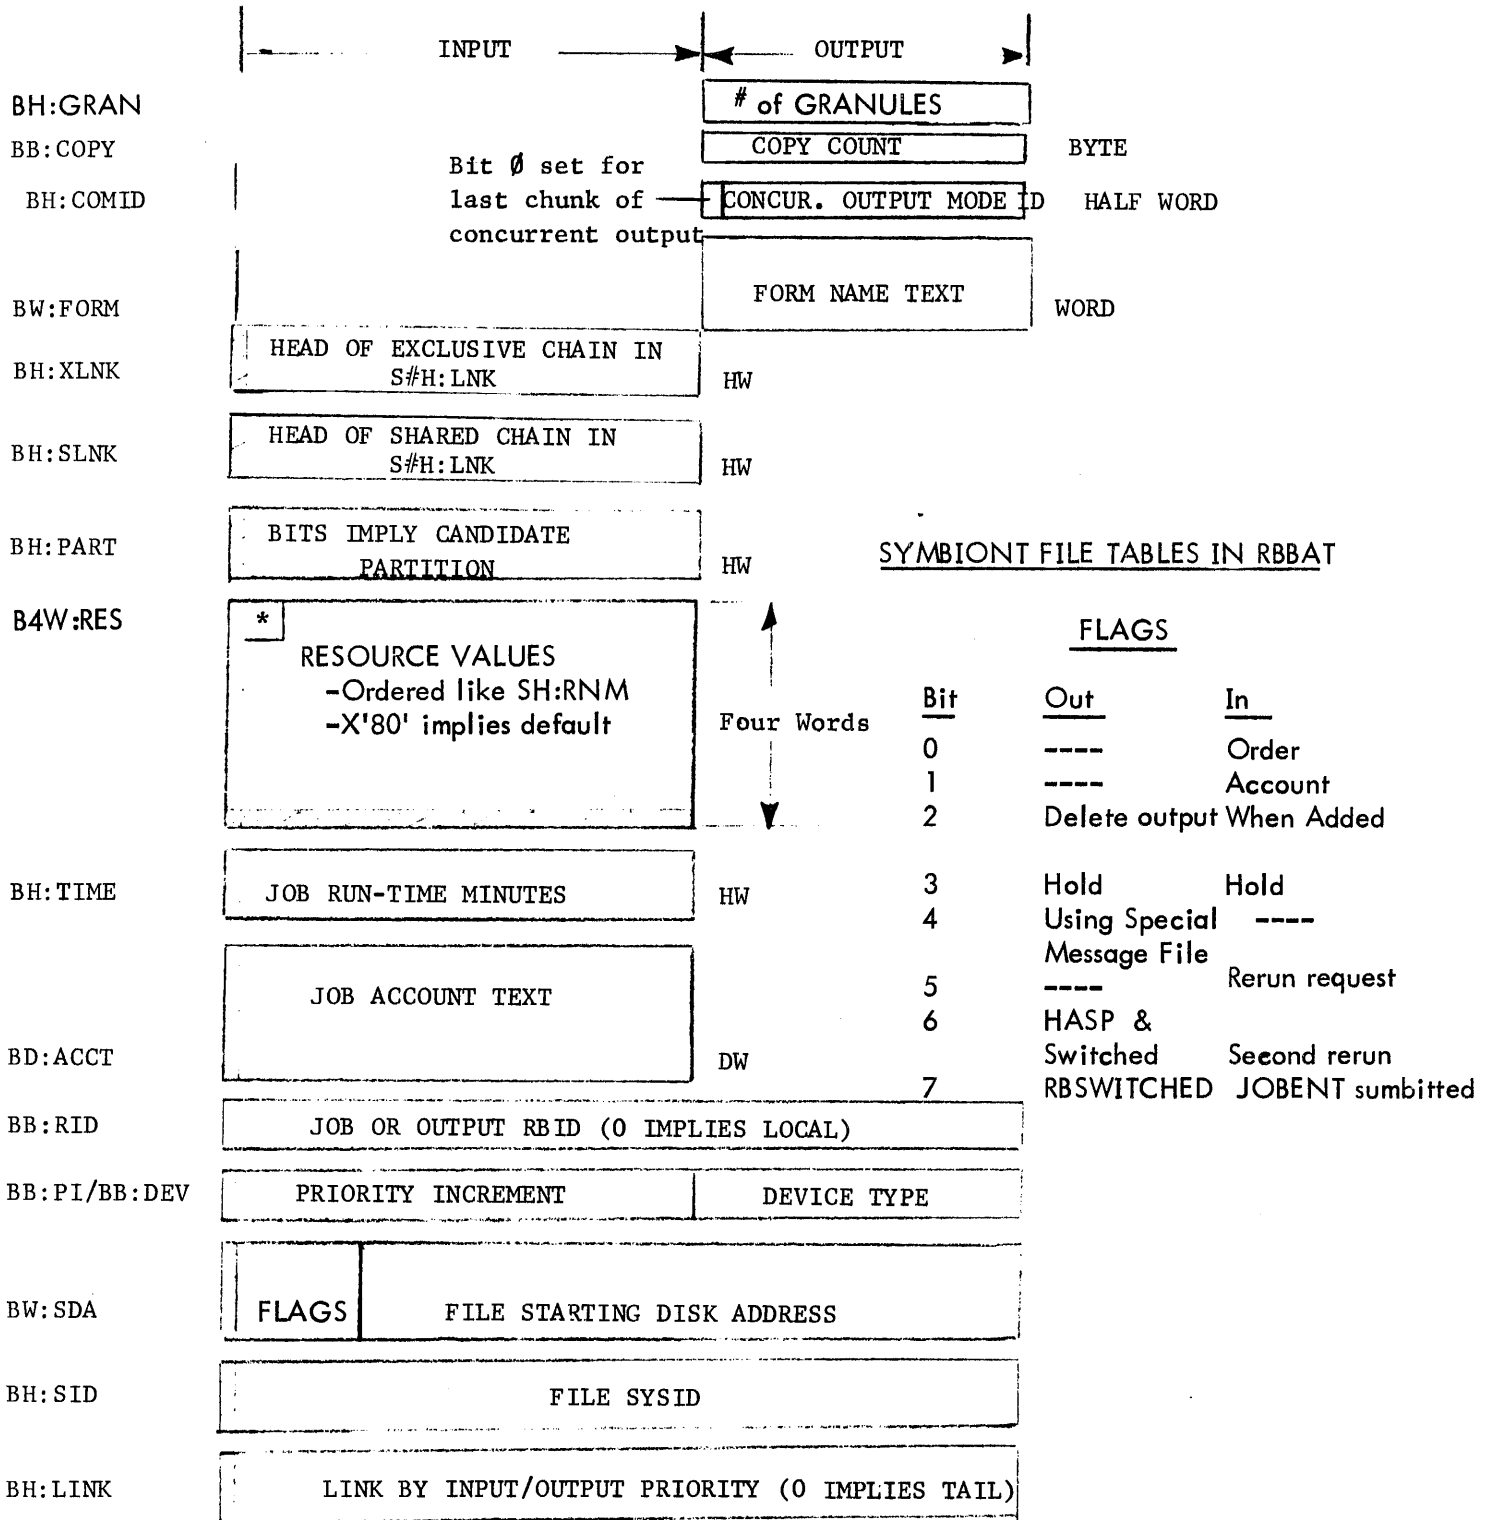

index 0 1 INFIL+1

zeroeth entry net used


\* job priority





MBS TABLES IN CORE:

Resource Allocation Tables (RAT)

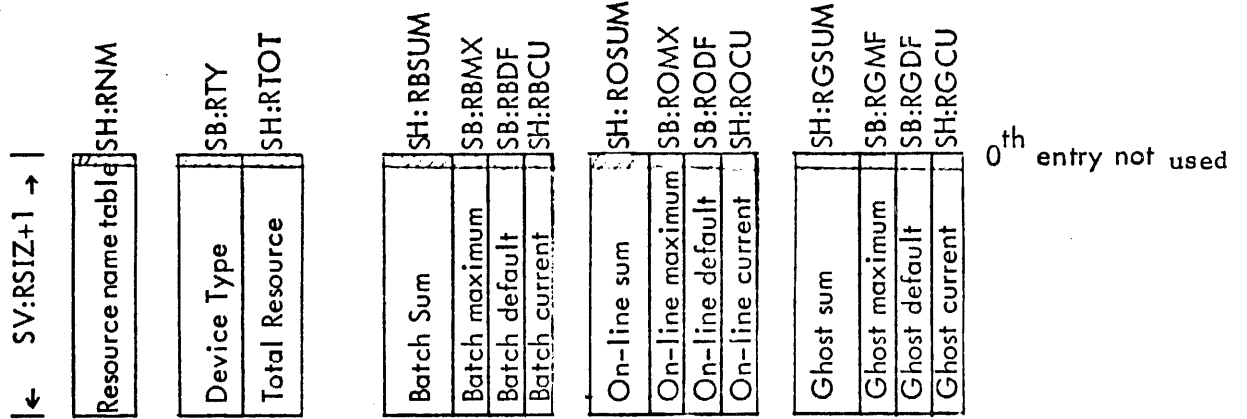


- SH:RNM            Resource namet table in TEXT (halfword)
- SB:RTY            Device type (Byte) (entries are unique)
- SH:RTOT            Total system resource
- SH:R $\left\{ \begin{matrix} B \\ O \\ G \end{matrix} \right\}$  SUM            Total resources available for the  $\left\{ \begin{matrix} \text{batch} \\ \text{on-line} \\ \text{ghost} \end{matrix} \right\}$  load
- SB:R $\left\{ \begin{matrix} B \\ O \\ G \end{matrix} \right\}$  MX            Maximum allocation per  $\left\{ \begin{matrix} \text{batch} \\ \text{on-line} \\ \text{ghost} \end{matrix} \right\}$  user
- SB:R $\left\{ \begin{matrix} B \\ O \\ G \end{matrix} \right\}$  DF            Default allocation per  $\left\{ \begin{matrix} \text{batch} \\ \text{on-line} \\ \text{ghost} \end{matrix} \right\}$  user
- SH:R $\left\{ \begin{matrix} B \\ O \\ G \end{matrix} \right\}$  CU            Currently allocated for the  $\left\{ \begin{matrix} \text{batch} \\ \text{on-line} \\ \text{ghost} \end{matrix} \right\}$  load

Note: SH:RNM and the value definition SV:RSIZ < 15 are in the SYSGEN produced load module SG:RNT. (The value tables are monitor resident, having been initially incorporated into the monitor from the SYSGEN module SG:RCT.) The first four entries are CO, 9T, 7T, and SP.

CP-V TECHNICAL MANUAL

MBS TABLES IN CORE: SERIAL NUMBER TABLES FOR RUNNING JOBS

Table Name

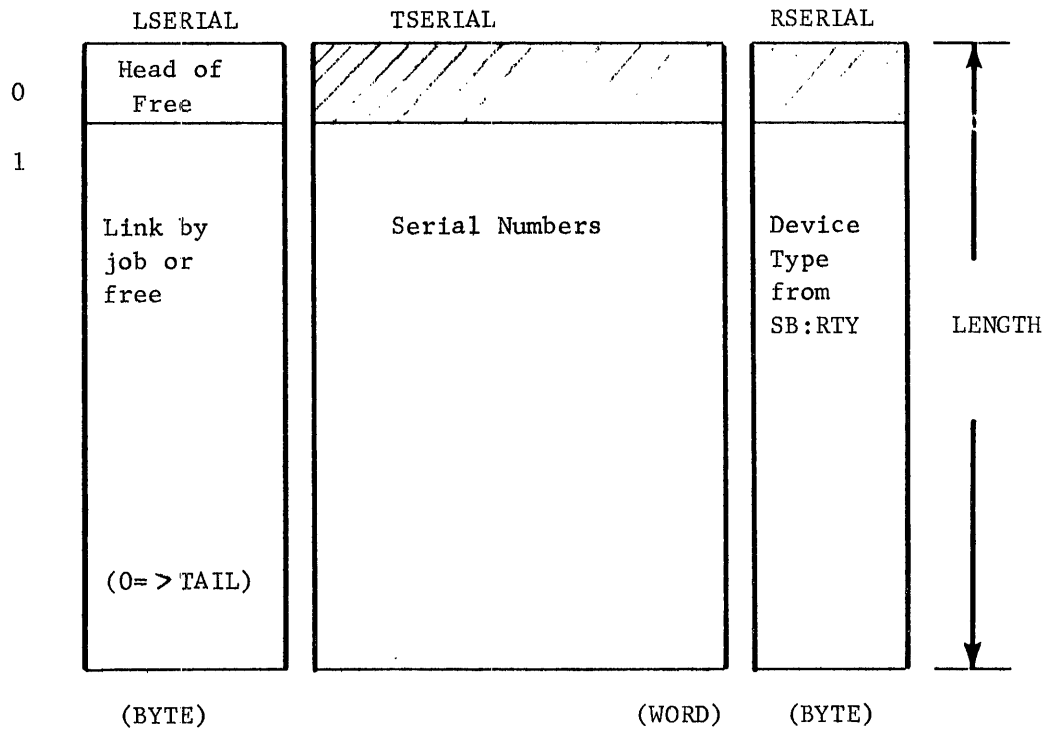

- Heads of serial number chains are in users JIT.
- Length = 255 or  $((16 * \text{AVGSER} + 3) / 4) + 1 + 16$   
 (whichever is less)


MBS TABLES IN CORE: PARTITION TABLES

<u>SYSTEM NAME</u>	<u>DEFINITION</u>	<u>ENTRY SIZE</u>
PL:LK	Partition table lock control word set if tables currently being altered or used.	1 word
PL:CHG	Control - altered partition status word which flags an occurring change in partition tables and signals which partitions definition has been altered.	1 word

Each of the tables below is of length LPART (number of partitions defined).

PLH:TL	Lower time limit of partition n.	halfword
PLH:TU	Upper time limit of partition n.	halfword
PLH:QN	Quantum time of partition n.	halfword
PLD:ACT	Current running account of partition n.	doubleword
PLH:CUR	Current number of jobs which have been selected under current partition definition.	halfword
PLH:TOL	Total number of jobs run under this partition.	halfword
PLB:USR	User number of user currently using partition.	byte
PLH:SID	SYSID of job currently using partition.	halfword
PLH:FLG	Partition control flags.	halfword


PLH:FLG

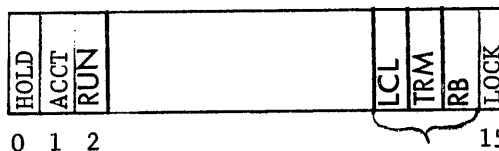

1 = legal ORFGON

The following two tables of length LPART are (number of defined resources) bytes wide.


<u>SYSTEM NAME</u>	<u>DEFINITION</u>	<u>ENTRY SIZE</u>
PLB:MAX	Upper resource limits of partition n.	# resources bytes
PLB:MIN	Lower resource limits of partition n.	# resources bytes

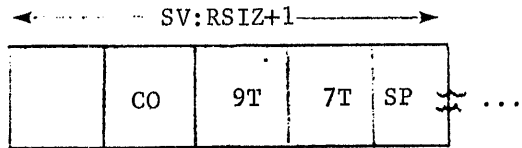

Resource order corresponds to order in SH:RNM.

Byte 0 of PLB:MIN for a partition contains the head of the exclusive serial number chain into LSERIAL for the job running in that partition.

MBS TABLES IN CORE: PARTITION TABLE LAYOUT (PLD:ACT TO PLB:MAX)

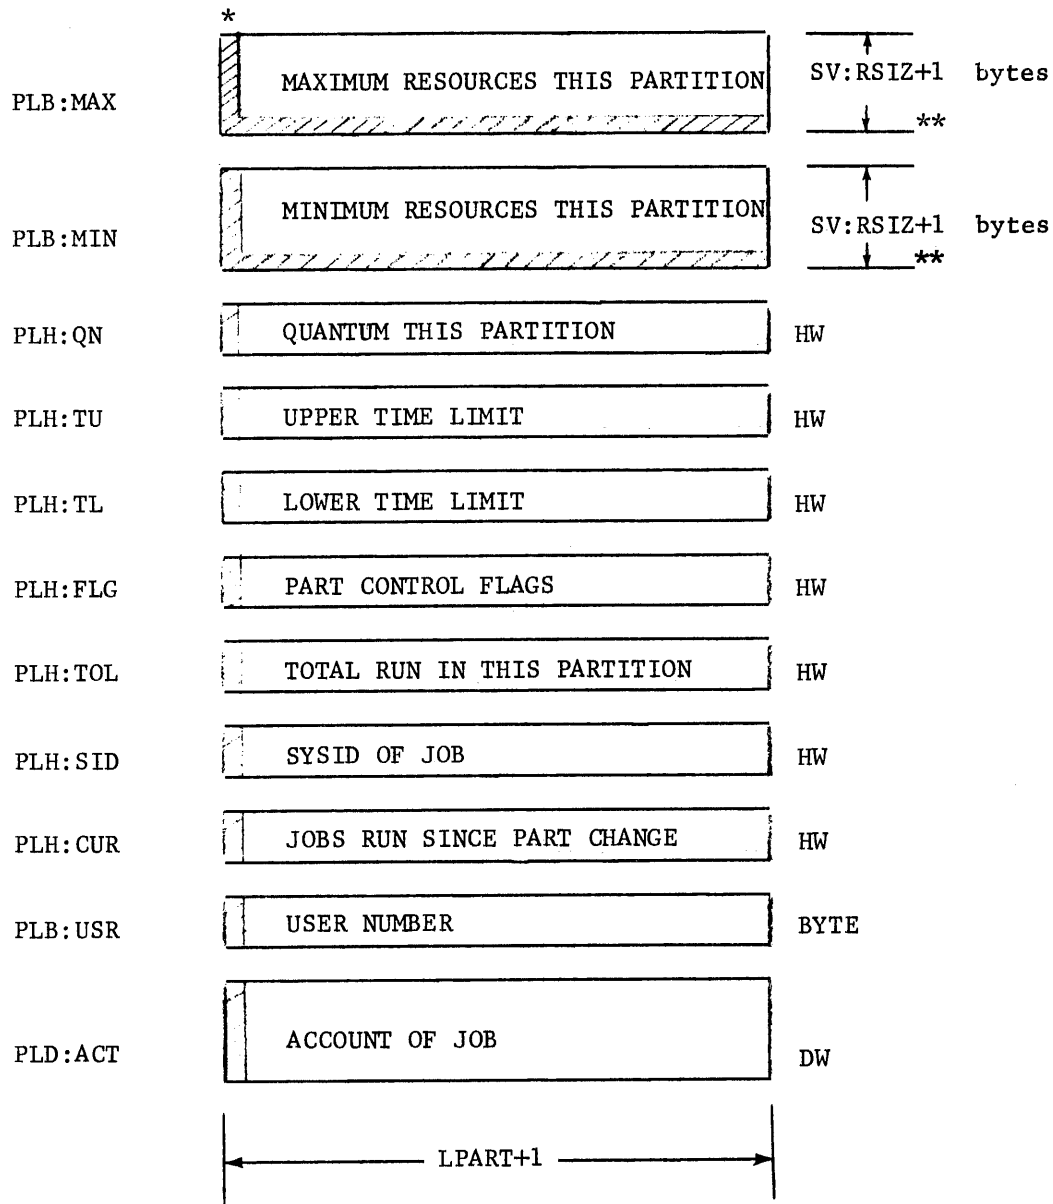

\* zeroeth entry not used.  
\*\* zeroeth sub-entry not used.

GI Tables


These tables (assembled into the module COMBAT) are the communication path from the Multibatch Scheduler to CCI via the input cooperative through the routine GETI. Each table has three entries allowing the MBS to supply three jobs in one scheduling pass by finding three jobs and filling in the information from its internal tables (the Batch Tables) into the GI tables.

GETI, when called in response to a CCI read, finds the proper GI entry by matching the current user number, S:CUN, against the table GIB:UN.

Information from other GI tables is moved to JIT as indicated in the table below, the file indicated in GI:SDA is read, and the GI table entry is freed by placing its entry number on the free list GI:FRE.

GIB:UN	- User number
GIH:TIM	- maximum run time minutes (stored in J:MRT)
GI:ASPN	- 3 words containing the shareable Drives/Spindles Bit Map (stored in J:ASPIN)
GI:RES	- 4 word list of required resources (store in JB:MAX);parallels RAT.
GIB:SLN, GIB:XLN	- shared and exclusive serial number table linkages (stored in JB:SLNK, JB:XLNK)
GIB:RID	- remote identification (stored in JRBID)
GI:SDA	- starting disk address, input file
GIB:PRT	- partition number (stored in JB:PNR; SYSID from PLH:SID store in J:JIT)
GI:FRE	- A word which lists the free GI entries.
GIB:PRI	- PRIO from job card or PRIO keyin; stored in JIT+PRT

Service Limit Tables (SLT)

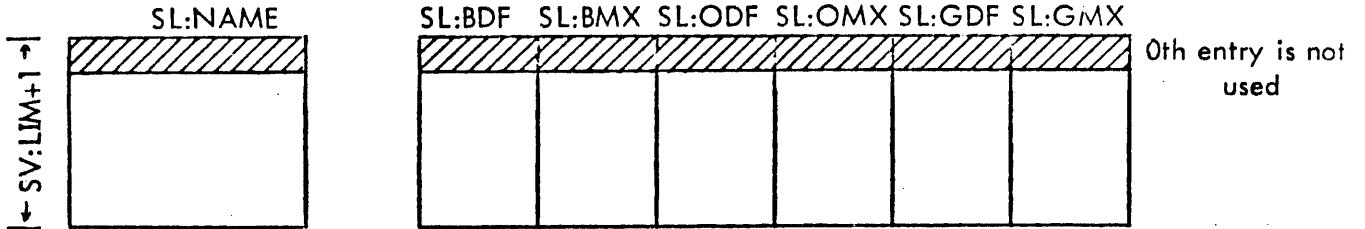

**SL:NAME** Word table containing the first four characters of the limit name (left justified blank filled).

$SL: \begin{Bmatrix} B \\ O \\ G \end{Bmatrix} DF$  Word tables containing the default limit values for any  $\begin{Bmatrix} \text{batch} \\ \text{on-line} \\ \text{ghost} \end{Bmatrix}$  job.


$SL: \begin{Bmatrix} B \\ O \\ G \end{Bmatrix} MX$  Word tables containing the maximum limit values for any  $\begin{Bmatrix} \text{batch} \\ \text{on-line} \\ \text{ghost} \end{Bmatrix}$  job.

**SV:LIM** Value definition defining the number of entries in the SL:NAME table.

SL:NAME and the value definition SV:LIM are in the SYSGEN produced load module SG:LNT. A value definition is produced for each limit name. The value definition is made up of SV: and the first two characters of the limit name. These value definitions are also included in the SYSGEN module SG:LNT. The value tables are monitor resident, having been initially incorporated into the monitor from the SYSGEN module SG:DLNT.



Peripheral Authorization Tables (PAT)

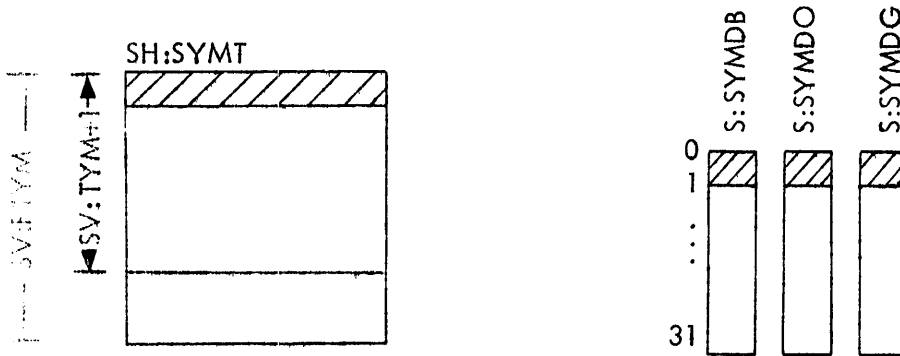

SH:SYMT A table in TEXT containing those device types to be associated with symbionts. The table consists of half-word entries in TEXT format left justified and blank filled. The bottom of the table contains FAUTH values as above.

S:SYMD  $\left. \begin{matrix} B \\ O \\ G \end{matrix} \right\}$  Words containing Bit tables which are the default authorization flags. Bit 1 corresponds to the 1st entry.

SV:TYM Is a value defining the table length, for SYMBIONT DEVICES.

SV:FTYM Is a value defining the table length including FAUTHs, 15 max.

Note; SH:SYMT and the value definition SV:TYM and SV:FTYM are in the SYSGEN produced load module SG:PNT. S:SYMD  $\left. \begin{matrix} B \\ O \\ G \end{matrix} \right\}$  are core resident.


ERROR LOG FORMAT

The Error Log File is a special consecutive file on the RAD written by ERRLOG. The file is not accessed by name, but by a special pointer in memory which contains the disk address of the first record in the file. Each record is 64 words long and contains a backward and forward link. The backward link is the disk address of the previous record and the forward link is the disk address of the next record in the file. The backward link is never zero since the file is considered as open and the next record to be written is being constructed in a core buffer as the errors occur. The forward link in the last record written contains the disk address where the next record is to be written.

The record format in the file is as follows:

0	Backward Link
1	Forward Link
2	Number of Words in this Buffer
3	Message 1
	Message 2
	.
	Message N
63	

Each record may contain several unused words at the end of the record since messages may vary in size, from one to eighteen words each. Therefore, up to nine words may be unused. The maximum number of useful words in a record is 61. The format of the backward and forward link disk address is as follows:

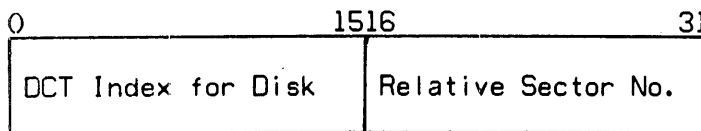

Disk granules for writing the file are obtained by calling the GBG (Get Background Granule) routine. This routine gets one granule at a time. Each granule contains one record of the file.

FILE CONTROL POINTERS

Several pointers in memory provide the necessary control information for constructing and accessing the file. The following is a list of pointers, all of word length, and their definitions:


- SGRAN            contains the disk address of the first record in the file.
- BGRAN           contains the disk address of the last record written.
- CURGRAN        contains the disk address of the next record to be written.
- FGRAN1         contains the disk address of the record to be written following the current record.
- CURBUF          contains address of buffer which is currently being used to pack the messages.

Two 64-word buffers are used for packing the messages. The labels for the two buffers are BUF1 and BUF2. Each buffer is preceded by two control words. The first control word contains the memory address of where the next message will be stored in the buffer. The second control word contains the number of words of space remaining in the buffer. The first three words of the buffer are the same as the first three words of the record on disk. The backward and forward link addresses are put in the buffer before any messages are packed in the buffer.


If one of the buffers is in the process of being written to the disk and the second buffer fills up before the writing of the first is completed, then all error messages for the errors which occur while this condition exists will be lost. The error logging routine just exits when there is no space available in either of the buffers.

Error Log Core Structure

ERRLG TAB

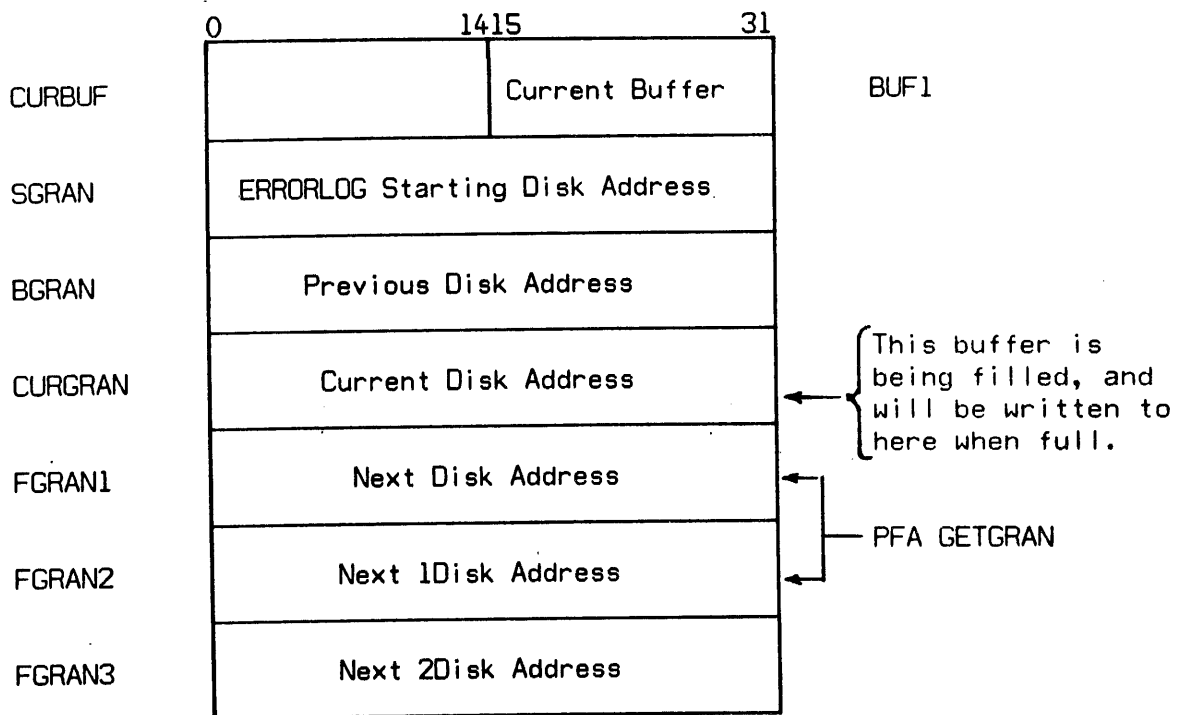

BUF1/BUF2 Description

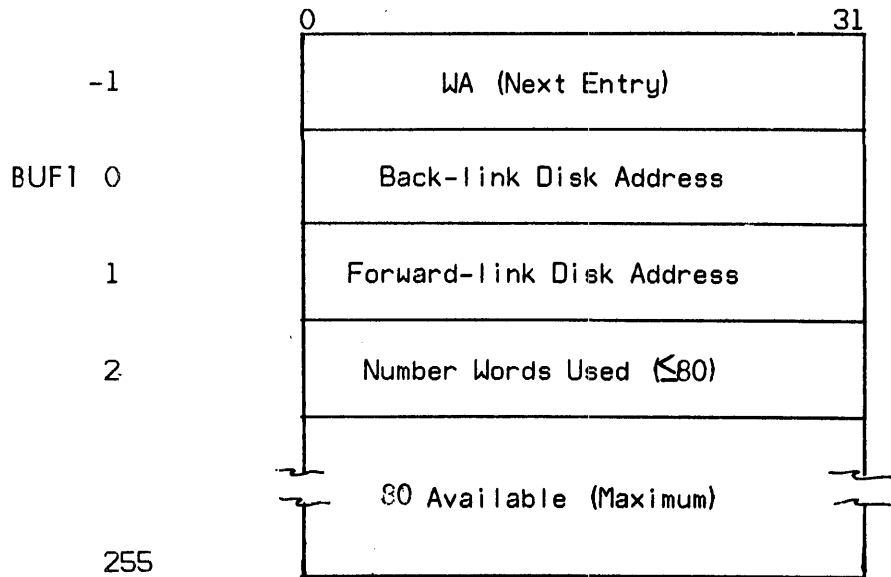

OVERVIEW

The system error log is a standard file of the operating system in question. It may be organized in any access method convenient to the individual operating system but must be accessible sequentially. The name of the file is to be ERRFILE and the account shall be :SYS. Logical records within the file are variable length but may be carried in a fixed length record if convenient. Logical records will never be longer than 20 words.

Each logical record of ERRFILE begins with a byte containing the error log entry code and a byte containing the total number of words in the record.

If a keyed file organization is used to facilitate analysis, the keys will be formatted as follows:

The key contains the Julian date in packed decimal, the time of the error in EBCDIC, and a sequence number for errors with the same time. This sequence number is reset to zero for each entry with a new time. The format of the key is

08	yy	od	dd
h	h	m	m
n			

where:

- 08 is the number of bytes in the key.
- yyoddd is the Julian date in packed decimal.
- hhmm is the time in hours and minutes (EBCDIC).
- n is the sequence number.

CP-V Error Log Mechanism

In CP-V, the mechanism for creating the error log utilizes a monitor resident recording routine ERRLOG which blocks individual error entries into 64-word blocks using a standard double buffering technique. When full, these blocks may be written into a chain of sectors obtained from the permanent file area (PFA). Only the first 64 words of each 256-word sector is used in order to minimize the core requirement for buffering. Blocks are chained by links carried in the first words of each block and are not part of the standard file system. The core resident head of chain is carried across recoveries by the recovery routines.

Each time six errors are recorded by ERRLOG, the ghost job, ERR:FIL, is triggered. This program uses the privileged error log reading CAL to obtain the blocks of error log entries from the chained file. The read is destructive and secondary storage granules are returned to the system (PFA) as the information is read from them. ERR:FIL deblocks the individual entries, creates a key for the record indicating date and time of the entry, and writes the record into the file, ERRFILE, in account :SYS using the keyed file organization. Each time ERR:FIL is awakened, it continues copying until no more error log entries remain to be copied.

This process is outlined in Figure 1.

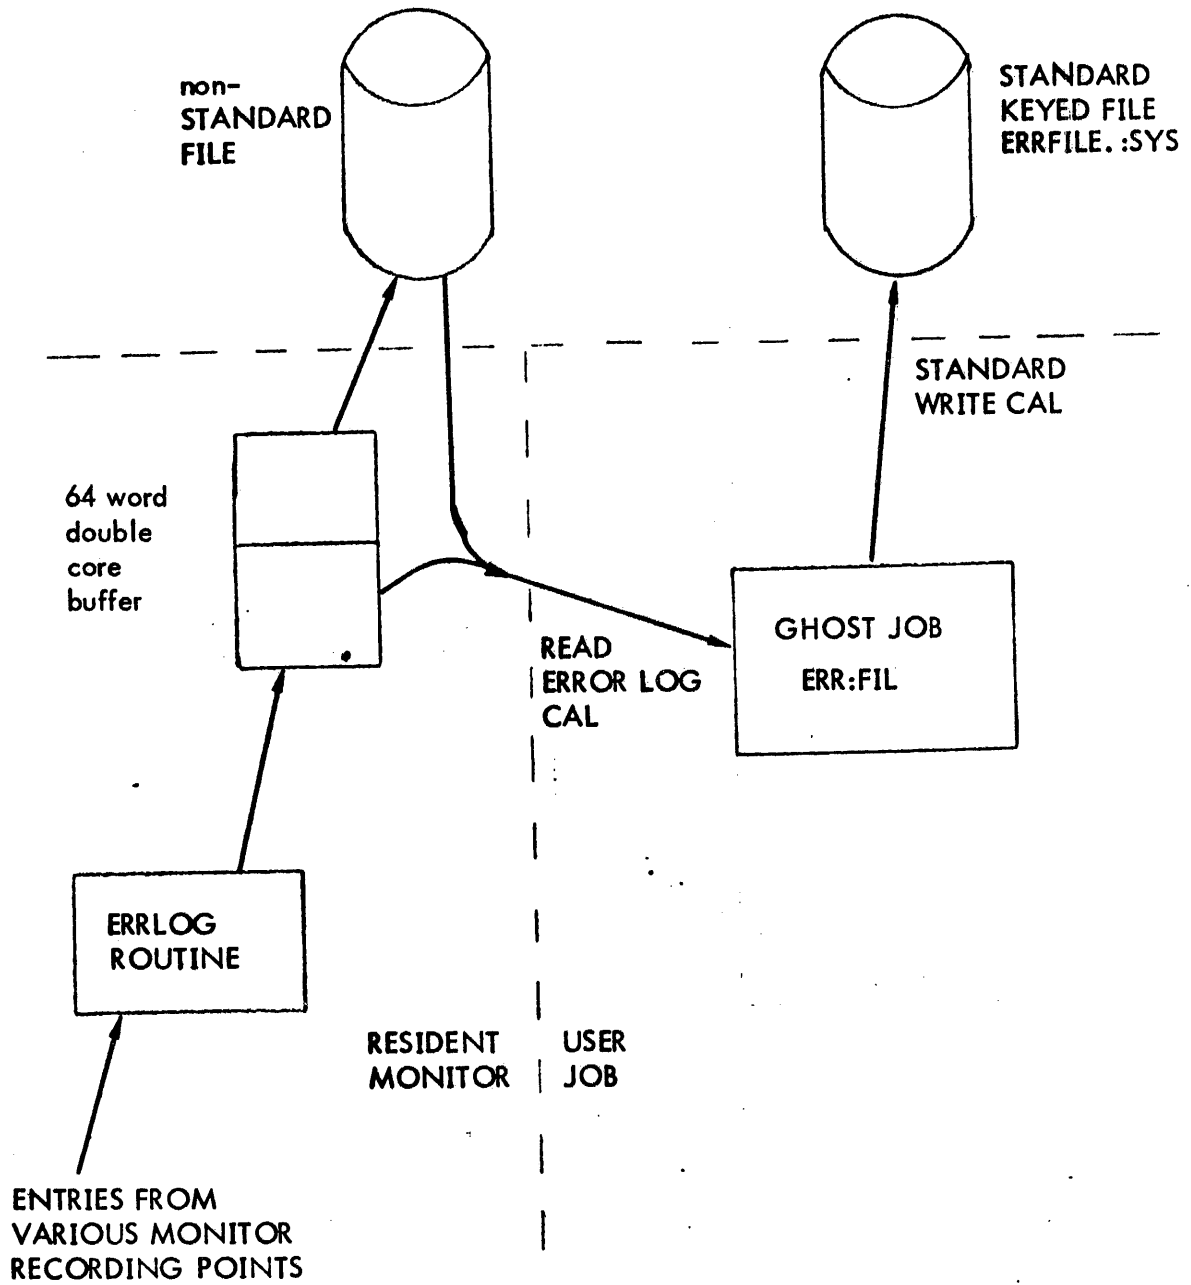


FIGURE 1 - CP-V ERROR LOGGING SCHEME



SUMMARY OF ERROR LOG ENTRIES

Error Codes

0	Null Entry
10	Copy Error (several subtypes)
11	SIO Failure
12	Device Time Out
13	Unexpected Interrupt
14	Reserved
15	Device Error
16	Secondary Device Error
18	System Startup/Recovery
1A	File Inconsistency Entry
1B	Software-detected Symbiont Inconsistency
1C	Reserved
1E	Lost Entries'
1F	Duplicate Entries
20	Power On
21	Configuration
22	System Identification
23	Time Stamp
24	Bad Granule Release
25	Reserved
26	Remote Processing Error Record
27	Operator Message
28	I/O Activity Count
29-2C	Reserved
2D	Hardware Error
2E	Watchdog Timer
2F	Instruction Exception
30	PFI Primary Record
31	MFI Primary Record
32	Secondary Record for Poll Information
33-40	Reserved
41	560 Processor Configuration
42	560 Memory Parity Secondary Record
43	Sigma 9 Memory Parity Secondary Record
45-48	Reserved
49	Memory Parity Secondary Record
4A-4F	Reserved
50	ENQUEUE Table Overflow
51	Partitioned Resource
52	Returned Resource

Reserved for Future Enhancements

53 - 5F	For CP-V
60 - 6F	For CP-R
70 - BF	New Features

GLOSSARY OF TERMS

The following pages detail the terms used in the error log formats for each operating system.

## CP-R GLOSSARY OF TERMS

AIO CC	A 4-bit value (bits 0-3 of designated byte) representing the condition codes as returned by the hardware in response to an AIO instruction.
AIO Status	A 16-bit value representing the status as returned by the hardware in response to an AIO instruction.
Alternate I/O Address	A 16-bit value representing an alternate physical I/O address by which a dual-access device can be referenced.
Bad Location (Sigma 7 only)	A 32-bit value representing the real memory address which caused a memory parity interrupt.
Code	An 8-bit value in the first byte of an error log message indicating message type.
Core Size (in 8K word blocks)	An 8-bit value representing the number of 8K (8192) blocks of words.
Count	An 8-bit value in the second byte of the error log message representing the number of useful 32-bit words contained in the error log record. Includes the first word in the count.
Current Command Doubleword	A 64-bit value representing the command doubleword currently being processed for a device (as indicated by the TDV status DW).
DCT Index	An 8-bit value indicating the order in which the device is configured into the system (at SYSGEN). The index value for the first device is 1.
Effective Address of Trapped Instruction	A 32-bit value representing the final address computed for the instruction pointed to by the instruction address (IA) in the PSD.

HIO CC	A 4-bit value (bits 0-3 of designated byte) representing the condition codes as returned by the hardware in response to an HIO instruction.
HIO Status	A 16-bit value representing the status as returned by the hardware in response to an HIO instruction.
I/O Address	A 16-bit value representing the physical I/O address.
I/O Count	A 32-bit value representing the number of start input/output (SIO) instructions executed for a device. This value is reset at system boot time.
Julian Day	A 16-bit value representing the julian day of year (e.g., March 1 would be represented as X'3D').
Memory Status Words (only Sigma 9 and 560 series)	Each word is a 32-bit value representing data returned by the hardware in response to a LMS instruction.
MFI (Sigma 6 or 7 only)	A 4-bit value representing the current state of the memory fault indicators returned by the hardware in response to a RD instruction. All memory fault indicators will be reset.
Model Number	A 16-bit value representing the conversion of a number (assigned by Field Engineering to uniquely identify peripheral devices) to a binary value (e.g., 7242 would be represented as X'1C4A').
Number of Parity Errors	A 16-bit value representing the number of bad locations causing memory parity errors (only the first 14 bad locations are entered in the log if the number of errors errors is greater than 14).
Poll CC	A 4-bit value (bits 0-3 of designated byte) representing the condition codes as returned by the hardware in response to a POLP or POLR instruction.
Poll Status (identical to POLR Results)	A 16-bit value representing the processor fault status as returned by the hardware in response to a POLP or POLR Instruction.

Primary I/O Address	A 16-bit value representing the physical I/O address by which a device can be referenced.
PSD	A 64-bit value representing the program status doubleword.
Real Address	A 32-bit value representing the actual memory address. (In an unmapped system, this is the same as the address in the IA field of the PSD.)
Real Time Resolution	An 8-bit value, n, such that actual relative time resolution = 2 milliseconds (e.g., N=1 for a resolution of 500HZ or 2 milliseconds).
Recovery Count	Currently not applicable. Will be 0.
Relative Time	A 32-bit value representing milliseconds since midnight. Resolution is 2 milliseconds.
Retries Remaining	An 8-bit value representing Retry Request minus the number of retries attempted. The range is between Retry Request and -1. A value of -1 indicates the operation was terminated due to retry count rundown.
Retry Request	An 8-bit value representing the maximum number of retries after which device error is returned to the requestor. This value is obtained from the requestor's DCB.
SIO CC	A 4-bit value (bits 0-3 of designated byte) representing the condition codes as returned by the hardware in response to a SIO instruction.
SIO Status	A 16-bit value representing the status as returned by the hardware in response to a SIO instruction.
Site Identification	A 64-bit field. The first 32 bits will contain the EBCDIC representation of the SYSGEN input parameter for version. The second 32 bits will be blanks (X'40').
Startup Type	An 8-bit field indicating type of system initialization. Will be 3 for System device boot.

TDV CC	A 4-bit value (bits 0-3 of designated byte) representing the condition codes as returned by the hardware in response to a TDV instruction.
TDV Status Doubleword	A 64-bit value representing the subchannel status as current command doubleword, device status, and byte count as returned by the hardware in response to a TDV instruction.
TIO CC	A 4-bit value (bits 0-3 of designated byte) representing the condition codes as returned by the hardware in response to a TIO instruction.
TIO Status	A 16-bit value representing the status as returned by the hardware in response to a TIO instruction.
Trap CC	A 4-bit value (bits 0-3 of designated byte) representing the condition codes as returned by the hardware when certain traps occur.
Trapped Instruction	A 32-bit value representing the contents of the location pointed to by the instruction address (IA) in the PSD.
Unit Address	A 6-bit value (bits 2-7 of designated byte) representing the address by which a processor can be referenced. The value is composed of a 3-bit cluster number followed by a 3-bit unit number.
Unit Type	An 8-bit value specifying the type of processor. Bit 0 of the designated byte indicates the presence of the processor in the current operational configuration (0 = present, 1 = not present).
Version	Not currently applicable. Will be 0.
Year	A 16-bit binary value representing the current year minus 1900 (e.g., 1973 will be represented as X'49').

## CP-V GLOSSARY OF TERMS

Account	The doubleword used to identify a user's collection of files.
AIO CC	A 4-bit field (bits 0-3 of designated byte) representing the condition codes as returned by the hardware in response to an AIO instruction.
AIO Status	A 16-bit field representing the status as returned by the hardware in response to an AIO instruction.
Alternate I/O Address	A 16-bit value representing an alternate physical I/O address by which a dual-access device can be referenced.
Bytes Remaining	A 16-bit field representing the Remaining Byte Count (RBC) field as returned by the hardware in response to a TDV instruction.
Code	An 8-bit value in the first byte of the error log message indicating message type.
Consecutive, Keyed, Random	Methods of organizing user files in CP-V (refer to the CP-V Batch Reference Manual)
Core Size	An 8-bit value representing the number of 8K (8192) word blocks.
Count	An 8-bit value in the second byte of the error log message representing the number of useful 32-bit words contained in the error log record. Includes the first word in the count.
Count of Entries Identical to Previous Entry	The number of error log records which are identical to one previously logged for identical reasons (excludes time records).
Count of Entries Lost	The number of error log records lost when logging becomes temporarily impossible for any reason.
Current Command Doubleword	A 64-bit value representing the command doubleword currently being processed for a device (indicated by the TDV status DW).
Caller's Address	The address or EBCDIC name of routine back to which the error logging routine will return when logging is complete; used in isolating software faults.

DCT Index	The 8-bit value indicating the order in which the device is configured into the system (at SYSGEN).
DCT Index of Symbiont Device	The 8-bit value indicating the order in which the device associated with the symbiont is configured into the system (at SYSGEN).
Effective Address	A 32-bit value representing the final address computed for the instruction pointed to by the instruction address (IA) in the PSD.
Error Subcode	An 8-bit field indicating which of several types of file inconsistencies has occurred (see CP-V Batch Reference Manual).
File Name	The TEXTC name used to identify a collection of user data on secondary storage.
Granule	The unit of secondary storage allocation equal to 2048 bytes (usually 2 sectors).
Generalized Disk Address	See Section 6.0.
HIO CC	A 4-bit value (bits 0-3 of designated byte) representing the condition codes as returned by the hardware in response to an HIO instruction.
HIO Status	A 16-bit value representing the status as returned by the hardware in response to an HIO instruction.
I/O Address	A 16-bit value representing the physical I/O address.
I/O Count	A 32-bit value representing the number of SIO instructions executed for a device. This field is reset at system boot and recovery time.
Julian Day	A 16-bit value representing the julian day of the year (e.g., March 1 would be represented as X'3D') when the error was logged.

Memory Status Words (only Sigma 9 and 560 Series)	Each word is a 32-bit value representing data returned by the hardware in response to a LMS instruction.
MFI (Sigma 6 or 7 only)	A 4-bit value representing the current state of the memory fault indicators returned by the hardware in response to a RD instruction. All memory fault indicators will be reset.
Mode	A 16-bit value representing the manner in which the file was last referenced (See CP-V Reference Manual).
Model Number	A 16-bit value representing the conversion of a number (assigned by Field Engineering to uniquely identify peripheral devices) to a binary value (e.g., 7242 would be represented as X'7242').
Number of Parity Errors	A 16-bit value representing the number of bad locations causing memory parity errors (only the first 14 bad locations are entered in the log if the number of errors is greater than 14).
Poll CC	A 4-bit value (bits 0-3 of designated byte) representing the condition codes as returned by the hardware in response to a POLP or POLR instruction.
Poll Status (identical to POLR Results)	A 16-bit value representing the processor fault status as returned by the hardware in response to a POLP or POLR instruction (for 560).
Primary I/O Address	A 16-bit value representing the physical I/O address by which a device can be referenced (see Alternate I/O Address).
PSD	A 64-bit value representing the program status doubleword.
Real Address	A 32-bit value representing the actual memory address (in an unmapped system, this is the same as the address in the field of the PSD).
Recovery Count	An 8-bit value initialized to zero at system initialization and incremented by the value one for every system recovery.



Relative Time	A 32-bit value representing milliseconds since midnight. Resolution is 2 msec.
Relative Time Resolution	An 8-bit value, n, such that actual relative time resolution = 2 msec. (e.g., n=1 for a resolution of 500HZ or 2 msec.)
Retries Remaining	An 8-bit value representing Retry Request minus the number of entries attempted. The range is between Retry Request and -1. A value of -1 indicates the operation was terminated due to retry count rundown.
Retry Request	An 8-bit value representing the maximum number of retries after which device error is returned to the requestor. This value is obtained from the requestor's DCB.
Screech Code	The code used by CP-V to identify the system failure which has occurred.
Screech Subcode	An 8-bit field identifying which type of a specific and similar set of system failures has occurred (see CP-V Systems Management Reference Manual).
Seek Address	The physical disc address last used to access this device.
Sense Information	The diagnostic information returned from the device as a result of sending a "sense" order to the device.
SIO CC	A 4-bit value (bits 0-3 of designated (byte) representing the condition codes as returned by the hardware in response to a SIO instruction.
SIO Status	A 16-bit value representing the status as returned by the hardware in response to a SIO instruction.
Site Identification	A 64-bit field which contains the EBCDIC representation of the SYSGEN input parameter for site identification from the :MON command.
Startup Type	An 8-bit field indicating which of several types of system initialization was used.

Subchannel Status	The status of the I/O subchannel received from the hardware as a result of a TDV instruction.
Symbiont File	A CP-V system special file for buffering data between the CPU and slower speed line printers, card punchers, etc.
TDV CC	A 4-bit value (bits 0-3 of designated byte) representing the condition codes as returned by the hardware in response to a TDV instruction.
TDV Current Command DA	A 24-bit field representing the current command doubleword address used in obtaining the device status with a TDV instruction.
TDV Status Doubleword	A 64-bit field representing the subchannel status, as current command doubleword, device status, and byte count as returned by the hardware in response to a TDV instruction.
TIO CC	A 4-bit value (bits 0-3 of designated byte) representing the condition codes as returned by the hardware in response to a TIO instruction.
TIO Status	A 16-bit value representing the status as returned by the hardware in response to a TIO instruction.
Trap CC	A 4-bit value (bits 0-3 of designated byte) representing the condition codes as returned by the hardware when certain traps occur.
Trapped Instruction	A 32-bit value representing the contents of the location pointed to by the instruction address (IA) in the PSD.
Unit Address	A 6-bit value (bits 2-7 of designated byte) representing the address by which a processor can be referenced. The value is composed of a 3-bit cluster number followed by a 3-bit unit number.

Unit Type	An 8-bit value specifying the type of processor. Bit 0 of the designated byte indicates the presence of the processor in the current operational configuration (0 = present, 1 = not present).
User ID	A 16-bit value which is a unique number assigned by the system to the particular job or session.
User Number	An 8-bit value which is the index into internal system tables used to access user-specific information.
Version	The version identifier of the system running (i.e., A00, B00, etc.).
Volume Serial Number	A 4- or 6-byte field supplied by a user to identify either a tape or private pack.
Year	A 16-bit binary value representing the current year minus 1900 (e.g., 1973 will be represented as X'49').

ERROR LOG FORMATS

The following charts detail formats for the error log. Some of the entries will be followed by secondary entries.

All relative times are in milliseconds since midnight. The count is zeroed at midnight, initialized at system startup, and carried over recovery. An operator-initiated time change will also re-establish the correct count. For CP-V and CP-R, the units are 1 millisecond, however, the clock resolution reduces the relative time resolution to 2 milliseconds.

Hachured fields are unused and may have arbitrary contents.

All condition code fields are the result of use of the STCF instruction, that is, a byte with the condition codes in bits 0-3 and the floating controls in bits 5-7.

All error log entries have a code in byte 0 identifying the entry type, a word count in byte 1. The second word contains relative time. Error Log listing and analysis programs which encounter an illegal or unrecognized entry type must be prepared to display that entry in hexadecimal. The code of zero is reserved for null entries; error list and analysis programs are expected to skip these entries.

560 specific formats are noted on the formats involved and are logged only when CP-V or CP-R is running on the 560 machine. Basically, the 560 error reporting consists of two secondary detail records which record the status of each processor with valid status as reported by a POLR instruction and the status of each memory with a set error bit as reported by a LMS instruction. These records are produced by routine which are called from several places in the monitor following a primary error record:

PFI  
MFI  
I/O With Memory Fault  
Watchdog Timer  
Hardware Fault Trap (4C)  
Instruction Exception

Details of the mechanism are given in Reference 6.

(Material on this page has been deleted.)



CP-V TECHNICAL MANUAL

(Material on this page has been deleted.)

The following codes and causes are utilized by CP-V:

<u>CODE</u>	<u>DESCRIPTION</u>	<u>CAUSE</u>
10	Copy Error	Recorded as a result of several possible error conditions in the error logging mechanism. If the record subtypes as 03, 05, or 06, the record is followed by the 64-word buffer in which the error occurred.
11	SIO Failure	Recorded when condition codes returned by an SIO instruction are such that CC1 or CC2 are set.
12	Device Timeout	Recorded when the timeout value specified by DCT11 has been exceeded. The operating system monitors the length of time operations take for a device to perform. If the device exceeds this time, the operating system assumes faulty operation, records this entry and warns the operator.
13	Unexpected Interrupt	Recorded when no match can be found between the I/O address returned in the status register by an AIO instruction and only DCT1 I/O address of a device known to be busy.
15	Device Error	Recorded as a result of examining the status returned in the status register by an AIO, TIO, or TDV instruction and finding an error condition. This record may be followed by 0 to n Memory Parity Secondary Records (42, 43, or 44), 0 to n Secondary Records for Poll Information (32), and Secondary Records for Pack, RAD, and Tape (16), depending on error and machine types.
16	Secondary Record for Pack, RAD, Tape	Recorded to log specific information returned in response to a sense order issued to a device which has indicated an error. This record is preceded (not necessarily contiguously) by the Device Error record (15).

<u>CODE</u>	<u>DESCRIPTION</u>	<u>CAUSE</u>
18	System Startup	Recorded when the system is booted and at every recovery. This record is followed by System Identification (22), Time Stamp (23), 1 to n Configuration Records (21), or 1 to n Processor Configuration Records (41) depending on machine type.
1A	File Inconsistency Entry	Recorded when the operating system finds it cannot, for whatever reason, access a file in the File Management System. Displayed code is described in the BF Reference Manual for CP-V.
1B	Software Detected Symbiont Inconsistency	Recorded when the operating system finds it cannot, for whatever reason, access a symbiont file in the Symbiont File Management System.
1E	Lost Entry Indicator	Recorded when error log buffering constraints, timing considerations, and error detection rates force error logging to be temporarily suspended or otherwise impossible.
1F	Duplicate Entries	Recorded when the error logging mechanism detects identical consecutive errors. This prevents the error log from becoming saturated with redundant information.
20	Power On	Recorded when the hardware power monitor forces program execution to trap the location X'51' as a result of detecting a restoration of power condition. This normally occurs as a result of a power outage of 500 milliseconds or more in duration.
21	Configuration Recovery	Recorded when the system is booted and at every recovery as part of the set of secondary records associated with System Startup record (18) and as part of the set of secondary records associated with System Identification record (22).




<u>CODE</u>	<u>DESCRIPTION</u>	<u>CAUSE</u>
22	System Identification	Recorded when the system is booted and at every recovery as part of the set of secondary records associated with System Startup record (18). It is also recorded when the error log file ERRFILE is empty and the first records transferred to the file were not System Startup (18) and System Identification (22). When this record is the first record in the ERRFILE file, it is followed by Time Stamp (23), 1 to n Configuration Records (21), 1 to n I/O Activity Count (28), or 1 to n Processor Configuration Records (41) depending on machine types.
23	Time Stamp	Recorded when the system is booted at every recovery as part of the set of secondary records associated with System Startup record (18) and part of the set of secondary records associated with System Identification (22). It is also recorded each and every hour on the hour.
24	Bad Granule Release	Recorded when either a bad disk address has been detected or when the granule to be released is already free (dual allocation).
26	Remote Processing Error Record	Recorded when an error is detected in the transmission of data from a remote processing workstation.
27	Operator Message	Recorded when there is an unsolicited ERRSEND key-in made by the system operator.
28	I/O Activity Count	Recorded at every recovery and every hour on the hour following the Time Stamp (23) and as part of the set of secondary records associated with System Identification (22). I/O activity counts will be reset after this record is logged after recovery.
2D	Hardware Error	Recorded when program execution is interrupted to location X'56' on Sigma 7 or is trapped to location X'4C' on Sigma 9 or Zerox 560. This record may be followed by 0 to n Memory Secondary Records (42, 43, or 44) and 0 to n Secondary Records for Poll Information (32) depending on error and machine type.

<u>CODE</u>	<u>DESCRIPTION</u>	<u>CAUSE</u>
2E	Watchdog Timer	Recorded when program execution traps to location X'46' due to a hardware watchdog timer runout condition. This record may be followed by 0 to n Memory Secondary Records (42, 43, or 44), and 0 to n Secondary Records for Poll Information (32) depending on error and machine type.
2F	Instruction Exception	Recorded when program execution traps to location X'4D' on Sigma 9 or Xerox 560 due to an instruction exception condition. This record may be followed by 0 to n Memory Secondary Records (42, 43, or 44), and 0 to n Secondary Records for Poll Information (32) depending on error and machine type.
30	PFI Primary Record	Recorded when program execution is interrupted to location X'56' on the Xerox 560 due to a processor fault interrupt condition. This record may be followed by 0 to n Memory Parity Secondary Record (42), and 0 to n Secondary Records for Poll Information (32) depending on error type.
31	MFI Primary Record	Recorded when program execution is interrupted to location X'57' on the Sigma 9 or Xerox 560 due to a memory fault interrupt condition. This record may be followed by 0 to n Memory Parity Secondary Records (42 or 43), and 0 to n Secondary Records for Poll Information (32) depending on error and machine type.
32	Secondary Record for Poll Information	Recorded to log information obtained by issuing a POLL instruction subsequent to a Device Error (15), Watchdog Timer (19) Hardware Error (17), Instruction Exception (1D), Processor Fault Interrupt (30), and Memory Fault Interrupt (31), only if useful information has been received from the POLL instruction.


<u>CODE</u>	<u>DESCRIPTION</u>	<u>CAUSE</u>
41	Processor Configuration	Recorded when system is booted as part of the set of secondary records associated with System Startup Record (18), and as part of the set of secondary records associated with System Identification Record (22).
42	560 Memory Parity Secondary Record	Recorded to log specific information returned in response to an LMS instruction subsequent to a Device Error (15), Hardware Error (17), Watchdog Timer (19), Instruction Exception (1D), PFI (30), or MFI (31).
43	Sigma 9 Memory Parity Secondary Record	Recorded to log specific information returned in response to an LMS instruction subsequent to a Device Error (15), Hardware Error (17), Watchdog Timer (19), Instruction Exception (1D), or MFI (31).
49	Sigma 5-7 Memory Parity Secondary Record	Recorded to log specific information obtained by scanning memory to attempt to isolate locations which cannot sustain correct parity subsequent to a Device Error (15), Hardware Error (17), Watchdog Timer (19), or Instruction Exception (1D).
50	Enqueue Table Overflow	Recorded to log specific information after the operating system has detected an enqueue table overflow condition.
51	Partitioned Resource	Recorded when a resource has been partitioned from the system.
52	Returned Resource	Recorded when a resource, previously partitioned, has been returned to the system.

10 - COPY ERROR (Several Subtypes)


Read Error (CP-V) subtype

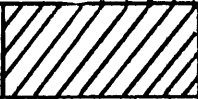10	02		01
Relative Time			


Read Error End (CP-V)

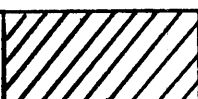10	02		02
Relative Time			


Error Log Record Length Error (CP-V)

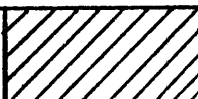10	03		03
Relative Time			
Index to Bad Entry			

Incorrect Time (CP-V)

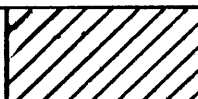10	03		05
Relative Time			
Index to Bad Entry			

Illegal Entry Type (CP-V)

10	03		06
Relative Time			
Index to Bad Entry			

The above entries occur as a result of an error condition arising in the error log recording mechanism.

11 - SIO FAILURE (CP-R/CP-V)

The SIO Failure is emitted when following SIO CC are returned

11	COUNT = 6	Model #	
Relative Time			
SIO STATUS		I/O Address	
MFI if Σ6 or Σ7	SIO CC	TDV CC	
subchan status		TDV CURRENT COMMAND DA	
TDV Status		Bytes Remaining	

<u>5-7</u>	<u>8-9 &amp; 56</u>
01xx	010x
10xx **	100x **
11xx	110x
DCT21, DCT1	
-DCT19, DCT20	
DCT13	

The I/O sequence is SIO, TDV.

\*\* The CC responses which indicate IOP busy may or may not be considered an error condition due to Operating System dependency.

12 - DEVICE TIMEOUT (CP-R/CP-V)

12	COUNT = D	Model #	
Relative Time			
HIO Status		I/O Address	
MFI if Σ6 or Σ7	HIO CC	TDV CC	TIO CC
subchan status	TDV Current Command DA		
TDV Status		Bytes Remaining	
Current Command Doubleword			
TIO Status		Retry Request	Retries Remaining
I/O Count			
Volume Serial Number (6 characters for CP-V ANS Tape)			
		Original Function Code	Current Function Code
Seek Address			

DCT12

-, DCT19, DCT20, DCT20A

DCT13

DCT21, IOQ10, IOQ11

DCT25

IOQ12

13 - UNEXPECTED INTERRUPT (CP-R/CP-V)

13	COUNT = 4	Model #
Relative Time		
AIO Status		I/O Address
	AIO CC	

DCT12

-, DCT19, -, -

15 - DEVICE ERROR (CP-R/CP-V)

15	COUNT = D	Model #	
Relative Time			
AIO Status		I/O Address	
MFI if Σ6 or Σ7	AIO CC	TDV CC	TIO CC
subchan status	TDV Current Command DA		
TDV Status		Bytes Remaining	
Current Command Doubleword			
TIO Status		Retry Request	Retries Remaining
I/O Count			
Volume Serial Number (6 characters for CP-V ANS Tape)			
		Original Function Code	Current Function Code
Seek Address			

DCT12

-, DCT19, DCT20, DCT20A

DCT13

DCT21, IOQ10, IOQ11

DCT25

IOQ12



16 - SECONDARY RECORD FOR PACK, RAD, TAPE (CP-R/CP-V)

16	COUNT as Needed	I/O Address
Relative Time		
Sense Information		
	7242	10 bytes
	Disk A, B	16 bytes
	1600 BPI Tape	6 bytes
	Nine Track Tape	1 byte
	RAD	3 bytes

Note: The I/O Address links the secondary record to the corresponding device error entry.

CP-V TECHNICAL MANUAL

(Material on this page has been deleted.)

18 - SYSTEM STARTUP (CP-V)

0	18	COUNT = 4	Startup Type	Recovery Count	31
Relative Time					
Year - 1900			Julian Day		
Screech Code	Screech Subcode	CPU ADDRESS			

- Screech Code, subcode defined in CP-V Operations Reference Manual
- Recovery Count = 0 for initial startup (values 1, 2, 3 below)
- Startup type codes:
 

<u>Value</u>	<u>Meaning</u>
1	PO Boot, Initial
2	PO Boot, Under Files
3	System Device Boot, (No Recovery)
4	System Recovery
5	Operator Recovery
- For Multiprocessing CP-V
 

6	Slave CPU Start Up
7	Slave CPU Shut Down

CP-V TECHNICAL MANUAL

(Material on this page has been deleted.)

1A - FILE INCONSISTENCY ENTRY ( CP-V)

1A	COUNT = 14	75	Error Subcode
Relative Time			
File Name (8 words)			
From DCB			
Account			
From DCB			
Generalized Disk Address			
Consecutive = 1 ORG Keyed = 2 Random = 3		Mode { <ul style="list-style-type: none"> <li>in = 1</li> <li>out = 2</li> <li>inout = 4</li> <li>outin = 8</li> </ul>	

IB - SOFTWARE DETECTED SYMBIONT INCONSISTENCIES (CP-V)

	0	7 8	15 16	23 24	31
WORD 0	TYPE X' 1B'		LENGTH X '04'	0	SUBCODE
1	RELATIVE TIME				
2	CODE C'O'↔C'F'		BAD VALUE FOR EXPECTED GENERALIZED DISK ADDRESS		
3	0		BEST FILE STARTING POINT GENERALIZED DISK ADDRESS		

CODE

- 0 - 1            RESERVED
- 2 - 6        OUTSYM; SUB CODE IS DCT INDEX
  - 2        BAD BLINK
  - 3        BAD FLINK
  - 4        BAD RCC
  - 5        BAD SCDBI
  - 6        NEWQ INDICATES THAT  
ADDRESS IS FOR A DOWN DEVICE;  
WORD 2 MAY HAVE A VALID  
ADDRESS
- 7 - 9        COOP; SUB CODE IS A STREAM NUMBER
  - 7        RECORD DOES NOT FIT IN DATA  
BUFFER; WORD 2 IS A VALID  
ADDRESS
  - 8        BAD FLINK
  - 9        RESERVED

1E - LOST ENTRY INDICATOR (CP-V)

1E	COUNT = 2	Count of entries lost
Relative time of last lost entry		


The above entry is logged when buffering constraints make error logging temporarily impossible. The newest entries are lost.

1F - DUPLICATE ENTRIES (CP-V)

1F	COUNT = 2	Count of entries identical to previous
Relative Time of last duplicate		

Errorlog routine compares current entry with previous and maintains a count as long as entries are identical, except time. If current and previous are different and count is non-zero, then a duplicate entries entry is made.

20 - POWER ON (CP-V)

20	COUNT = 2	
Relative Time		

21 - CONFIGURATION RECORD (CP-R/CP-V)

21	COUNT as needed		
Relative Time			
Model #			DCT Index
Alternate I/O Address		Primary I/O Address	
<div style="border: 1px solid black; height: 40px; width: 100%;"></div>			

Entered at system STARTUP or RECOVERY

One pair of words per device in DCT order; multiple records may occur -- maximum 5 devices per record

22 - SYSTEM IDENTIFICATION (CP-R/CP-V)

22	COUNT = 5	Core size in 8K word blocks	Relative Time Resolution
Relative Time			
system		version	flags
<div style="border: 1px solid black; height: 40px; width: 100%;"></div>			

Recorded at system STARTUP and RECOVERY

Relative Time Resolution is expressed as a value of n such that actual relative time resolution =  $2^n$  msec. The value of n for the most likely resolutions are

n = 0            when the timing source is supplied by a frequency  $\geq 1$ KHZ

n = 1            500HZ


n = 4            60HZ

For CP-V and CP-R, n = 1.



System, Version, Flags

The format of system, version, flags and of site identification is operating system specific. System, version, and flags are formatted as location X'2B'.



Location 2B contains three items:

1. Monitor - this field contains the code number of the Monitor. The codes are:

<u>Code</u>	<u>Monitor</u>
0	None or indeterminate
1	BCM
2	RBM
3	RBM-2
4	BPM
5	BTM/BPM
6	UTS
7	CP-V
8	CP-R
9-F	Reserved for future use

2. Version - this is the version code of the Monitor and is coded to correspond to the common designation for versions. The alphabetic count of the version designation is the high-order part of the code and the version number is the low-order part. For example, A00 is coded X'10' and D02 is coded X'42'.
3. Parameters - the bits in this field are used to indicate suboptions of the Monitor. They are meaningful only in relation to a particular Monitor. However, the following assignments have been made for BPM, BTM, and CP-V.

<u>Bit</u>	<u>Meaning if Set</u>
31	Symbiont routines included
30	Remote Batch routines included
29	Real-time routines included
28	Unused
27	Reserved for Data Management System
26	Reserved
22-25	Field defining CPU
18	Multiprocessing
17	Transaction Processing
16	On-line

<u>Bit 22</u>	<u>Bit 23</u>	<u>Bit 24</u>	<u>Bit 25</u>	<u>Meaning</u>
0	0	0	0	Sigma 5
0	0	0	1	Sigma 6/Sigma 7 (for CP-R 01 defines Sigma 5/
0	1	0	0	Sigma 9
0	1	1	1	550/560

23 - TIME STAMP (CP-R/CP-V)

23	COUNT = 3	
Relative Time		
Year - 1900		Julian Day

For CP-V, this record entered by ERR:FIL once each hour on the hour

as binary integers

24 - BAD GRANULE RELEASE (CP-V)

24	COUNT = 4	TYPE CODE
Relative Time		
Generalized Disk Address		
Address of Routine Calling ERRLOG or 'ACAT'		

TYPE CODE

- 0 Bad Address
- 1 Dual Allocation

If TYPE CODE = 0

or

Number of Granules Being Released	
--------------------------------------	--

If TYPE CODE = 1

'ACAT' is substituted for the address of routine calling ERRLOG when ALLYCAT detects the error.

26 - REMOTE PROCESSING ERROR RECORD (CP-V)

This record is logged when an error has occurred in the transmission of data from a remote processing workstation.

26	COUNT = 8	I/O Address	
Relative Time			
RB:FLAGS			
Workstation Name			
Current Command Doubleword			
RP1	RP2	RP3	RP4

RP1, RP2, RP3, and RP4 have specific meaning for the type of remote workstation associated with the record as defined by the following tables. Refer to the Remote Processing Reference Manual for definition of terms and codes.

● Xerox 7670 Workstation

RP1	Definition	RP3	RP4
1	First character in record not SOH	Current character position	Offending character
2	Incorrect parity on SEL	"	"
3	Incorrect block protect	"	"
4	Third character in record not STX	"	"
5	RBBAT combuf or MPOOL unavailable for logon	Meaningless	Meaningless
6	Incorrect character parity	Current character position	Offending character
7	Record trailer character not ETX	"	"
8	Incorrect block check parity	"	"
9	Incorrect block check	"	"
A	Communication line time-out	Meaningless	Meaningless
B	NAK received	Response received reading for ACK	
C	Garbled ACK or NAK	Response received reading for ACK	

RP2 represents the current function code associated with the workstation.

RP2	Definition
0	Write card punch
1	Write line printer
2	Send ACK
3	Write TOF (Block protect = 0)
4	Write TOF (Block protect = 1)
5	Write SPACE (Block protect = 0)
6	Write SPACE (Block protect = 1)
7	Read card reader
8	Write TOF (logon)
9	Read card reader (special)
A	Read ACK card punch
B	Read ACK line printer
C	Read ACK TOF (Block protect = 0)
D	Read ACK TOF (Block protect = 1)
E	Read ACK SPACE (Block protect = 0)
F	Read ACK SPACE (Block protect = 1)
10	Write EOT
11	Write DC I
12	Write ACK (special)
13	Write NAK
14	Write NAK (special)
15	Write BEL (on error)

For Xerox 7670 workstations, the current command doubleword in the error log record contains the second command doubleword used to write the text of an output message and is meaningful only for RP1 = 0, 1, A, or B.

Intelligent Remote Batch Terminal (IRBT)

RP1	Definition	RP4 Definition
0	Recoverable block check error	Expected BCB count (sign extended)
1	Catastrophic block check error (NAK sent in case of line error)	Expected BCB count (sign extended)
2	Communication line time-out	Same as RP2
3	Read for ENQ timed-out (logon)	Same as RP2
4	Received ACKO instead of SIGNON at logon	ACKO
5	Inappropriate line bid (not ENQ-master, not ACKO-slave)	Line bid received.
6	NAK received	NAK
7	Read timed out	Same as RP2
8	Incorrect CRC	Last character CRCed
9	Trailer character not ETB	Offending character
A	Leader character not STX	Offending character
B	Lost data	First character after DLE
C	Garbled ACKO-NAK	First character of message
FF	RP1 is 0 or 1 with RP4 = -1 (result appears as X'FFFFFFFF')	

For IRBT, RP2 is the current function code and RP3 is the calling function code. The following table defines RP2 and RP3.

Value	RP2	RP3
0	Disconnect	Software error - should not occur
1	Write block	Write block - read block
2	Write ACK	Write ACK - read block
3	Write block	Write block (Wait-a-bit) - Read special
4	Write Wait-a-bit	Write Wait-a-bit - Read special
5	Read Block	Software error - should not occur
6	Send NAK	Software error - should not occur
7	Send ENQ	Logon as Slave
8	Read for ENQ	Logon as Master
9	ACKO to ENQ	Logon as Master after ENQ Read
A	Read Logon Record	Software error- should not occur
B	NAK Logon Record	Software error - should not occur

IBM 2780

RP1	Definition	RP4 Definition
1	Disconnect due to; a) EOT on read b) Use of 2780 on IRBT only system	EOT ENQ
2	Line timeout	Same as RP2
3	ENQ not received on logon read	Character received
4	No EOT after EOF sent	Character received
5	a) ENQ in text mode b) No ENQ answering WACK c) ENQ answer to ACK of EOF	Character received Character received Character received
6	NAK received	Character received
8	CRC failed on input	Last character CRCed
9	Unknown response reading for ACK	Character received
A	Trailer character not ETB or ETX	Character received
C	Header character not STX	Character received



For IBM 2780, RP2 is the current function code and RP3 is the calling function code. The following table defines RP2 and RP3.

Value	RP2	RP3
0	Disconnect	Software error - should not occur
1	Write Data	Write
2	Send ENQ	Send ENQ (Wait)
3	Send ACKO	Read
4	Send WACK	Send WACK (Wait)
5	Write Data	Write EOF
6	Send ENQ	Request to Output
7	Read for ACK, ENQ, EOT (depends on RP3)	POL for Input
8	Read for ENQ	Logon
9	Read	Software error - should not occur
A	Send NAK	Software error - should not occur
B	Send ACK 1	Software error - should not occur
C	Send EOT	Software error - should not occur

27 - OPERATOR MESSAGE (CP-R/CP-V)

27	COUNT as needed	
Relative Time		
TEXTC COUNT	TEXTC Message Max Size = 71 characters (CP-V) Max Size = 56 characters (CP-R)	

A facility will be provided to inject messages from the operator (or diagnostic program) into the error log. These messages might be used to describe unusual conditions surrounding a particular error. The operator may enter these messages from the operator console via the keyin command 'ERRSEND'.

28 - I/O ACTIVITY COUNT (CP-V)

28	COUNT as needed	DCT Index of First Device
Relative Time		
I/O Address <sub>1</sub>		DCT Index <sub>1</sub>
I/O COUNT <sub>1</sub>		
I/O Address <sub>2</sub>		DCT Index <sub>2</sub>
I/O COUNT <sub>2</sub>		
⋮		

Recorded once per hour and at recovery. Maximum of 10 entries per record. Counts are reset to zero after recording them at recovery.

2D - HARDWARE ERROR (CP-V)

Generated by INTERRUPT 56 (E7)  
 TRAP 4C (E9-X560)

CODE=X'2D'	COUNT=0B	CPU ADDRESS			
TIME					
PSD1					
PSD2					
RESERVED					
RESERVED					
TRAP CC		R B P	I A P	F I P	0 0 0 0
REAL ADDRESS OF TRAPPED INSTRUCTION					
TRAP INSTRUCTION					
ANLZ CC	EFFECTIVE ADDRESS				
REAL EFFECTIVE ADDRESS					

- FIP - When set indicates that a PE occurred while fetching the instruction (causing T4C) or this is an I56 on Sigma 7. In either case, words 4 - 9 will be zero.
- IAP - When set indicates that a PE occurred due to an indirect address fetch. Words 8 - 9 will be zero.
- RBP - When set indicates that a PE is present in the associated R-block registers (Xerox 560 only).

The Effective Address and the Real Effective Address will be of the addressing type indicated by the ANLZ CC (b, hw, w, dw, i).

2E - WATCHDOG TIMER (CP-V)

Generated by TRAP 46

CODE=X'2E'	COUNT=0B	CPU ADDRESS			
TIME					
PSD1					
PSD2					
RESERVED					
RESERVED					
TRAP CC		R B P	I A P	F I P	0 0 0 0
REAL ADDRESS OF TRAPPED INSTRUCTION					
TRAP INSTRUCTION					
ANLZ CC	EFFECTIVE ADDRESS				
REAL EFFECTIVE ADDRESS					

- FIP - When set indicates that a PE occurred while fetching the instruction (causing T4C) or this is an I56 on Sigma 7. In either case, words 4 - 9 will be zero.
- IAP - When set indicates that a PE occurred due to an indirect address fetch. Words 8 - 9 will be zero.
- RBP - When set indicates that a PE is present in the associated R-block registers (Xerox 560 only).

The Effective Address and the Real Effective Address will be of the addressing type indicated by the ANLZ CC (b, hw, w, dw, i).

2F - INSTRUCTION EXECUTION (CP-V)

Generated by TRAP 4D

CODE X'2F'	COUNT=0B	CPU ADDRESS			
TIME					
PSD1					
PSD2					
RESERVED					
RESERVED					
TRAP CC		R B P	I A P	F I P	0 0 0 0
REAL ADDRESS OF TRAPPED INSTRUCTION					
TRAP INSTRUCTION					
ANLZ CC	EFFECTIVE ADDRESS				
REAL EFFECTIVE ADDRESS					


- FIP - When set indicates that a PE occurred while fetching the instruction (causing T4C) or this is an I56 on Sigma 7. In either case, words 4 - 9 will be zero.
- IAP - When set indicates that a PE occurred due to an indirect address fetch. Words 8 - 9 will be zero.
- RBP - When set indicates that a PE is present in the associated R-block registers (Xerox 560 only).

The Effective Address and the Real Effective Address will be of the addressing type indicated by the ANLZ CC (b, hw, w, dw, i).


CP-V TECHNICAL MANUAL

(This page intentionally left blank.)


30 - PFI PRIMARY RECORD (CP-R/CP-V) (560)

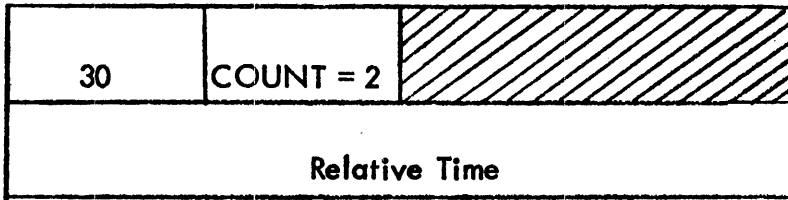

31 - MFI PRIMARY RECORD (CP-R/CP-V) (560/Sigma 9)

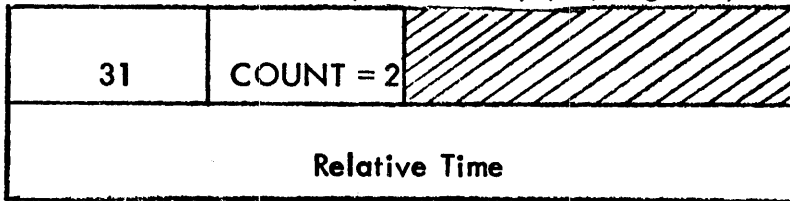


32 - SECONDARY RECORD FOR POLL INFORMATION (CP-R/CP-V) (560)

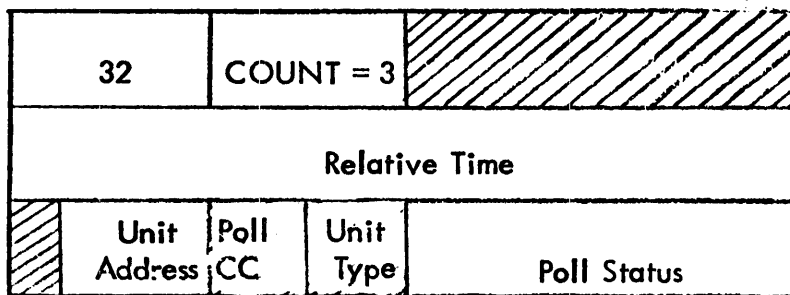

0 1 2      7 8 11 12      15 16

One record produced per valid poll status received.

41 - 560 PROCESSOR CONFIGURATION (CP-R/CP-V) (560)

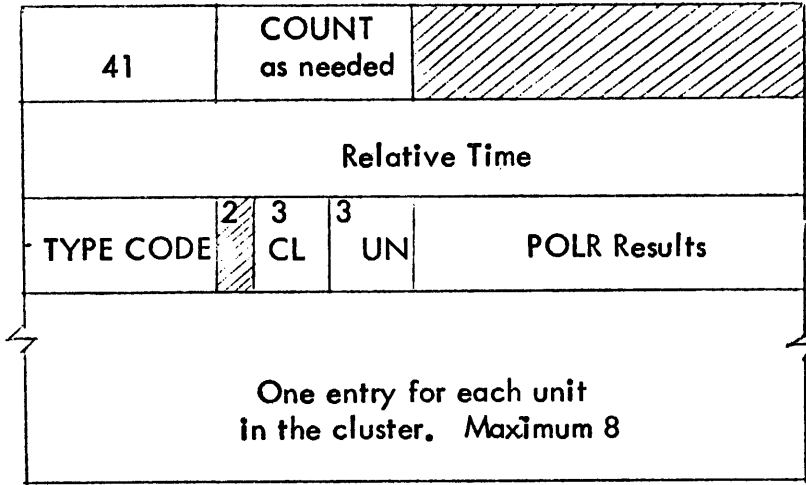


One record per cluster defined in sysgen.

CL = cluster #  
 UN = unit #  
 TYPE = unit type, high bit set if unit does not respond during initialization

TYPE CODE	UNIT NAME
1	CPU
2	MI
3	PI
4	MIOP
5	RMP
6	CT
7	SU

42 - 560 Memory Parity Secondary Record (CP-R/CP-V) (560)

This record is logged to record specific information that is returned in response to an LMS instruction subsequent to detecting hardware errors.

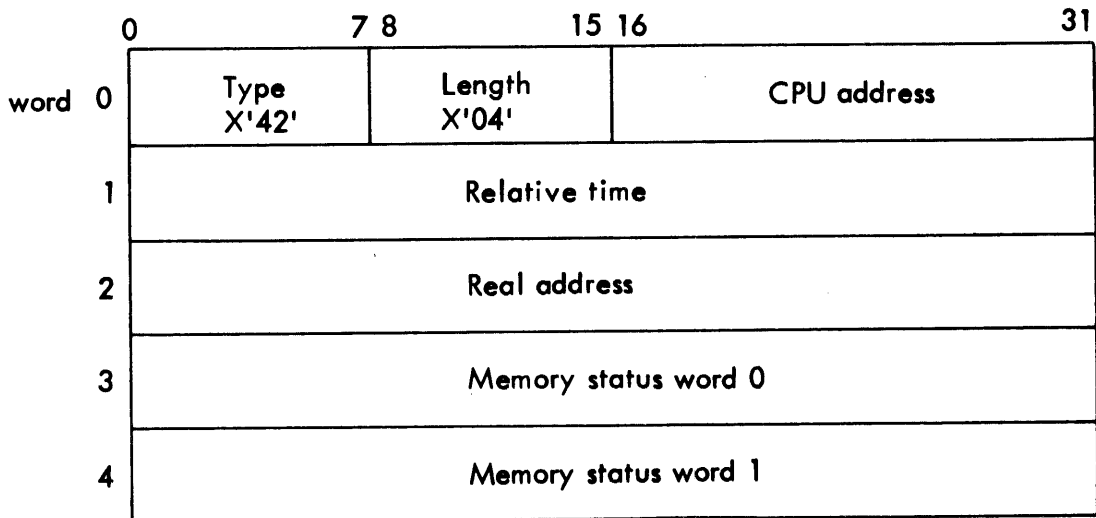



43 - SIGMA 9 Memory Parity Secondary Record (CP-R/CP-V)

This record is logged as a result of the memory fault interrupt associated with location X'57' or the memory parity trap associated with location X'4C' on the Sigma 9 or Xerox 560. This record follows record type X'17' and record type X'31'

word	0	7 8	15 16	31
0	Type X'43'	Length X'06'	CPU Address	
Relative Time				
Real Address				
Memory Status Word 0				
Memory Status Word 1				
Memory Status Word 2				

44 - SIGMA 5-7 Memory Parity Secondary Record (CP-R/CP-V)

44	COUNT as needed	Number of Parity Errors
Relative Time		
1st Bad Location		
14th Bad Location		

49 - MEMORY PARITY SECONDARY RECORD

This record is logged to record specific information that is obtained by scanning memory to attempt to isolate locations that cannot sustain correct parity.

	0	7 8	15 16	31
word 0	Type X'49'	Length X'0B'	CPU address	
word 1	Relative time			
word 2	Number of bad locations in memory			
word 3	Logical AND of addresses of the bad locations			
word 4	Logical OR addresses of the bad locations			
word 5	Logical AND of contents of the bad locations			
word 6	Logical OR of contents of the bad locations			
word 7	LMS CC	Address of lowest location with bad parity		
word 8	Contents of lowest location with bad parity			
word 9	LMS CC	Address of highest location with bad parity		
word 10	Contents of highest location with bad parity			

50 - Enqueue Table Overflow (CP-V)

50	COUNT = 3	
Relative Time		
User ID		Entry Count

- Binary integers

Entry count is the number of entries in the enqueue table belonging to the specified user at the time the error log entry was made.

51 - Partitioned Resource (CP-V)

51	COUNT = 3	Model #
Relative Time		
F	0-----0	I/O Address

0 1

F = 0 for device entry  
F = 1 for controller entry

This entry will be logged when a resource has been partitioned.

52 - Returned Resource (CP-V)

52	COUNT = 3	Model #
Relative Time		
F	0-----0	I/O Address

F = 0 for Device Entry  
F = 1 for Controller entry


This entry will be logged when a resource is returned from being partitioned.

CP-V TECHNICAL MANUAL

(This page intentionally left blank.)

GENERALIZED DISK ADDRESS

CP-V utilizes a special format for rotating memory disk addresses and specialized procedures for handling them. The format of the generalized disk address word follows.

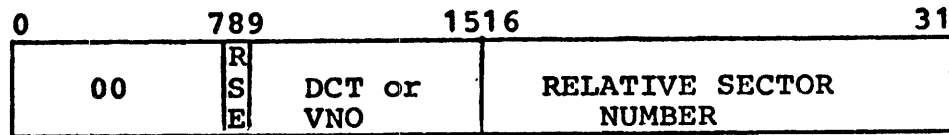

**RSE** is the relative sector number extended bit which is set when relative sector numbers above 65,535 are addressed.

**DCT** is the DCT index of the device on which the sector addressed may be found.

**VNO** is the volume number within a private volume set of the devices on which the sector addressed may be found.

**Relative Sector Number** is the sector number, of the first sector in a granule which is to be accessed. Sector number progresses from zero through device end.

It is recommended that the following set of procedures be used when any of the above items are desired:

[LABEL]	LDCTX,R	[*]ADDRESS,X	Load DCT index
[LABEL]	STDCTX,R	[*]ADDRESS,X	Store DCT index
[LABEL]	LSECTA,RU1	[*]ADDRESS,X	Load sector number
[LABEL]	STSECTA,RU1	[*]ADDRESS,X	Store sector number

where:

- R register to be loaded or stored.
- RU1 odd register to be loaded or stored.
- ADDRESS word address of location containing (or to contain) the disk address.
- X word alignment index register.

These procedures are available in the standard SYSTEM UTS file callable by including the following statement in the appropriate METASYMBOL program:

SYSTEM UTS

CSE STOP Tables

In the event of a catastrophic hardware failure in the central system components (CPU, memory, IOPs, and data busses), the fault handling system attempts to log the faults in the in-core error log buffers at BUF1 and BUF2, and in addition, collects additional information into tables in memory. These tables are collectively called the CSE STOP tables. In the event of a "CSE STOP" message being output on the OC, the operator should record the contents of these tables before attempting an operator recovery or turning the machine over to customer engineers.

The following items are contiguous in memory:

<u>LABEL</u>	<u>SIZE</u>	<u>MEANING OF CONTENTS</u>
R7→CSED\$CF	1 word	High order byte contains trap condition code
CSED\$REGS	16 words	Register at time of last CSE trap
CSED\$WHY	1 word	Internal code for cause of trap
CSED\$PSO	2 words	Current PSO at time of trap
CSED\$MSTAT\$ADR	1 word	0 for Sigma 6/7, address of CSED\$MSTAT table on Sigma 9 and Xerox 560
CSED\$PSTAT\$ADR	1 word	0 for Sigma 6/7/9, address of CSED\$PSTAT table on Xerox 560 (CSED & 3STAT).
CSED\$3STAT\$ADR	1 word	Address of memory content polling table
CSED\$MSG	7 words	Buffer containing CSE STOP message (reason for stopping)

The following items are contiguous in memory:

<u>LABEL</u>	<u>SIZE</u>	<u>MEANING OF CONTENTS</u>
CSED\$3STAT	2 Words	X'490B0000' + CPU address, relative time
CSED\$3COUNT	1 word	Number of bad locations in memory
CSED\$4ANDADO	1 word	Logical AND of addresses of bad locations
CSED\$3ORADO	1 word	Logical OR of addresses of bad locations
CSED\$3ANDCONT	1 word	Logical AND of contents of bad locations
CSED\$3ORCONT	1 word	Logical OR of contents of bad locations
CSED\$3FIRST	1 word	Address of lowest cell with bad contents
CSED\$3FIRSTC	1 word	Contents of lowest cell with bad contents
CSED\$3LAST	1 word	Address of highest cell with bad contents
CSED\$3LASTC	1 word	Contents of highest cell with bad contents

## OPTIONAL TABLE FOR MOS MEMORY SYSTEMS ONLY

The MOSTAB table contains data pertaining to the manner in which each bank of MOS Memory reports Single Bit Correctable Errors (SBCEs) via the memory's built-in Error Detection and Correction (EDAC) mechanism. The SBCEs are reported via Interrupt 57, and the I57 handler decodes and checks the Memory Status Words from the affected bank. If the interrupt was of SBCE nature, and the threshold for that bank has not been reached, the error is passed via the standard logging mechanism to ERRFILE. Once the threshold is reached, the SBCE flip-flop is reset for that bank, and no more SBCEs are reported. (Invoking ELLA then gives the user a graphic report of the failing components.)

The table contains eight entries of the form:

0	1	15	16	31
*	THRESHOLD VALUE	CURRENT VALUE		

where:

- \* Bit 0 is the REPORT flag. When set, it indicates that NO SBCE are to be reported on this bank.

THRESHOLD is the maximum number of single bit correctable errors to be reported for this bank.

CURRENT is the current number of single bit correctable errors that have been reported for this bank.

The table is indexed by a computation of the unit number and bank number, and contains values as follows:

0	UNIT 0 BANK A
1	UNIT 0 BANK B
2	UNIT 0 BANK C
3	UNIT 0 BANK D
4	UNIT 1 BANK A
5	UNIT 1 BANK B
6	UNIT 1 BANK C
7	UNIT 1 BANK D

- NOTE A: The mechanism for error logging sets bit 0 of the associated entry when the threshold is reached.
- NOTE B: At system initialization, any MOS-genned system automatically scans its memory banks and initializes SBCE reporting for each MOS bank in the system. Non-MCS banks have their entry in the table initialized with only the sign bit set.
- NOTE C: CONTROL can be used to examine and set the REPORT, THRESHOLD, and CURRENT values from a X'00' privilege account.



Optional Table for Sigma 9, Xerox 560 Only

CSED\$MSTAT table (Memory Fault Status Register Polling Table)


This table contains up to 5 entries of the form:

Internal Polling Flags	Real Address Causing Fault	Word 0
Memory Fault Status Word 0		Word 1
Memory Fault Status Word 1		Word 2
Memory Fault Status Word 2 (Sigma 9 Only)		Word 3 (Sigma 9 only)

Optional Table for Xerox 560 Only (ref. 560 OPS Manual)

CSED\$PSTAT table (Processor Fault Status Register Polling Table)

Each entry is one word long of the format:



- \* Bit 0, when set indicates presence of valid status
- Proc Addr Processor's cluster/unit address
- POLR CC Condition codes from POLR instruction
- Type Code Processor type: 1 - BP, 2 - MI, 3 - PI, 4 - MIOP, 5 - RMI, 6 - CI, 7 - SU
- Status 16-bit contents of fault status registers (result of POLR instruction)

ID

ASSIGN/MERGE Table

FUNCTION

An Assign/Merge Table is the place where information is kept which must be merged into the DCBs that go into the user's context at load or execute time.

An Assign/Merge Table is associated with each job in the system (whether batch or on-line) as a result of a !JOB command in batch or as a result of logging on.

Modifications to the user's Assign/Merge Table result from the ASSIGN command in batch and from the SET command and various other commands in TEL. The Assign/Merge Table is merged into the DCBs placed in the user's context when the user loads or executes a program. The merging results from the monitor calling on File Management to do the actual merging.

Assign/Merge Tables built by TEL are never modified by CCI and vice versa.

STRUCTURE

An Assign/Merge Table is one page long. It consists of a 22-word header, followed by a number of linked entries.

Assign/Merge Table

	BATCH	ON-LINE
0	Index to First Available Area	Index to First Available Area
1	Index to First Entry or 0	Index to First Entry or 0
2	Unused	Unused (4 words)
3	Load Module Name for :RUN (3 words)	
4		
5	Load Module Password for :RUN (2 words)	Image of J:CPP0 from User JIT
6		Image of J:ASSIGN from User JIT
7		

CP-V TECHNICAL MANUAL

SECTION VL  
PAGE 2  
9/1/78

8	DATE: YEAR Binary	DAY Julian
9	Saved Image of User's STDOPT at Job Step (Online)	
10	Maximum Authorized Privileges (From :USERS)	
11	Saved Image of J:UPRIV	
12	LOGON Time Seconds from Midnight	
13	Billing Rate	System ID
14	Extended Accounting Field	
15	6 words	
16		
17		
18		
19		
20	Permanent Remaining RAD Space Allocated	
21	Permanent Remaining Disk Space Allocated	
22	Command File Name 3 Words	
23		
24		
25	Command File Account 2 Words	
26		
27	Command File Password 2 Words	
28		
29	Command File Record Number	

Assign/Merge Table entries consist of a forward link to the next entry, the DCB name in TEXTC format, and an Adjust DCB (open prime) PLIST whose format is described in the CP-V BP Reference Manual.

DCB names are up to 3 words long for TEL and up to 8 words long for CCI. The Adjust DCB PLIST may be up to 100 words long. The PLIST length for TEL entries is constrained only by the buffer size reserved by TEL to construct the entry. For this reason, TEL entries for C00 CP-V may have:


- Maximum of 8 read accounts
- Maximum of 8 write accounts
- Maximum of 8 execute accounts
- Maximum of 3 SNs

word 1

FLINK or 0
TEXTC DCB Name (zero filled) (Maximum 8 words for CCI) Maximum 3 words for TEL
Adjust DCB PLIST
FLINK or 0

•  
•  
•

Format of RUN Table

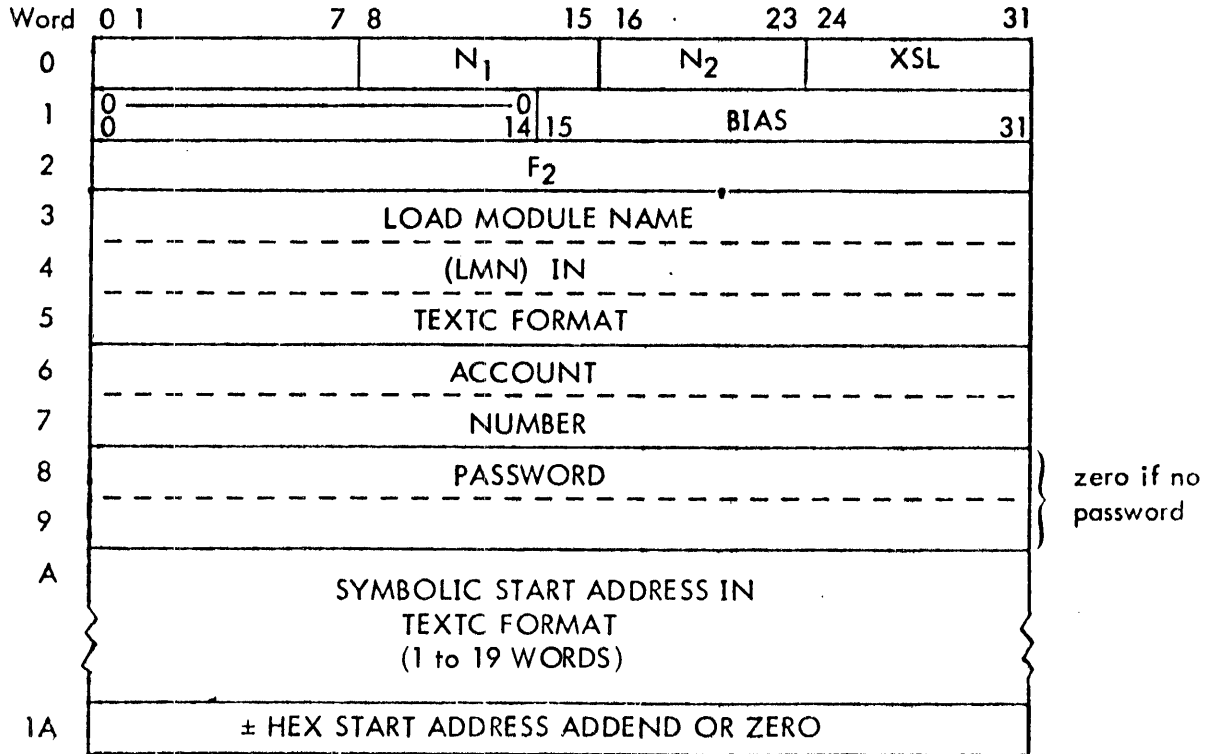

where

N<sub>1</sub> is number of SNAP, SNAPC, IF, AND, OR, and COUNT records in System Debug File.


N<sub>2</sub> is number of MODIFY records in System Debug File.

XSL is value of XSL parameter.

BIAS is value of BIAS parameter.

Format of Modify Table

The Modify Table is written into the system debug file for the current job.

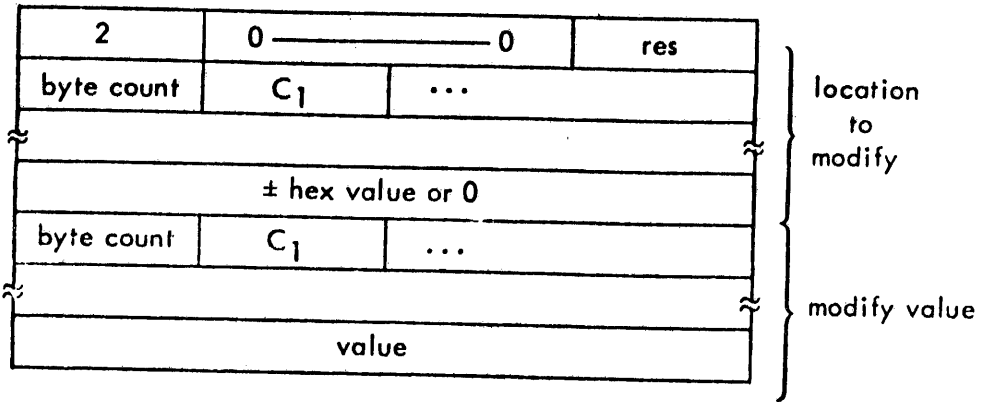


where

res = 0 if byte resolution; = 1 if halfword resolution; = 2 if word resolution; =3 if doubleword resolution. The resolution applies to the name specified with the modify value.

value is value to be given to the location to be modified. It has the form value + res (name) name is the name of an external definition and value is a 1-digit to 8-digit hexadecimal number.

Format of PMD, PMDE, PMDI Table

The PMD, PMDE, PMDI Table is written into the system debug file for the current job.

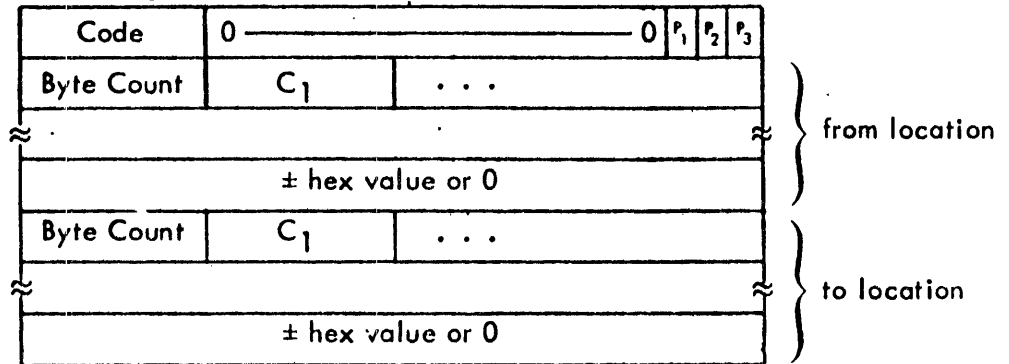

where

Code is 3 for PMD command, 4 for PMDE command, and 5 for PMDI command.

P<sub>1</sub> = 1 for dump protection type 00.

P<sub>2</sub> = 1 for dump protection type 01.

P<sub>3</sub> = 1 for dump protection type 10.

from location is beginning dump location

to location is ending dump location

Format of the SNAP, SNAPC Table

The SNAP, SNAPC Table is written into the system debug file for the current job.

Code	0 _____ 0		
Flag (one to eight characters, ----- left-justified and blank-filled)			
Byte Count	C <sub>1</sub>	...	} SNAP location
± hex value or zero			
Comment (one to eight characters, ----- left-justified and blank-filled)			
Byte Count	C <sub>1</sub>	...	} from location
± hex value or zero			
Byte Count	C <sub>1</sub>	...	} to location
± hex value or zero			

where

Code            is 6 for SNAP command, 7 for SNAPC command  
 SNAP location is location at which SNAP is to be done  
 from location is beginning dump location  
 to location    is ending dump location



Format of IF, AND, OR Table

This table is written into the system debug file for the current job.

Code		r	
Flag(one to eight characters, left-justified and blank filled)			
Byte Count	C <sub>1</sub>	...	} LOC
± hex value or zero			
Byte Count	C <sub>1</sub>	...	} L <sub>1</sub>
*		± hex value or zero	
	b <sub>1</sub>	x <sub>1</sub>	} L <sub>2</sub>
Byte Count	C <sub>1</sub>	...	
*		± hex value or zero	}
	b <sub>2</sub>	x <sub>2</sub>	

where

Code is 8 for IF command, 9 for AND command, 10 for OR command.

r is 0 for GT, 1 for LT, 2 for EQ, 3 for GE, 4 for LE, and 5 for NE.

b<sub>1</sub>, b<sub>2</sub> is 0 for byte, 1 for halfword, 2 for word, and 3 for doubleword.

x<sub>1</sub>, x<sub>2</sub> is 0 through 7.

\* specifies an indirect address (for L<sub>1</sub> or L<sub>2</sub>).

LOC specifies the location at which the test is to take place.

L<sub>1</sub>, L<sub>2</sub> specify the locations to be compared as specified by 'r'.

Format of Count Table

The Count Table is written into the system debug file for the current job.

11	0	_____	0	
Flag (one to eight characters, left-justified and blank filled)				
Byte Count	C <sub>1</sub>	...	} COUNT location	
≈	± hex value or zero			≈
				start
				end
				step

CP-V TECHNICAL MANUAL

ID

Error Codes and Error Messages

This section describes the error codes and error message handling in CP-V. Subsequent subsections cover 1) the format of the error message file, and the general assignment of codes, 2) the meanings of each of the currently assigned codes, and 3) a list of the messages on file in the current CP-V system.

Codes for various detected error conditions are recorded in JIT. The error code is placed in J:ABC (high order byte, and the subcode in ERO (right-justified). When PMD, in the case of batch jobs, or TEL, in the case of on-line jobs is entered, a message is printed to correspond to the code and subcode. This message is obtained from the error file via a keyed read using a key constructed from the code and subcode. If either the file or the message record which corresponds to the code is missing, then a message including the error code itself is printed. Processors also use the error message file and are assigned "group codes" for their messages.

For I/O errors the user may gain control in error situations and handle the error himself, by specifying error or abnormal addresses either in the DCB via M:SETDCB or in the M:READ or M:WRITE procs which is described in the UTS Reference Manual, Appendix B.

ERROR MESSAGE FILE FORMAT

The file ERRMSG in the account :SYS contains the error messages of the system, both for Monitor and processor error conditions. The file contains keyed records with keys in the form used by EDIT so that the file may be conveniently changed to suit the individual installation. The record contains the EBCDIC text of the error message.

Keys are one word long and have the form:

03	GC	EC	SC
----	----	----	----

The first byte always contains 03, the count of bytes in the key, the second byte is the group code, the third, error code, and the fourth is the error subcode.

Group codes presently assigned are:

- |             |            |
|-------------|------------|
| 0 - Monitor | 4 - RUNNER |
| 1 - PCL     | 5 - CCI    |
| 2 - LOADER  | 6 - DRSP   |
| 3 - TEL     | 7 - BATCH  |
|             | 8 - ANLZ   |

Messages in the file with group codes other than zero are not handled in any way by the Monitor itself.

Error codes currently assigned within the Monitor group are:

0-7F	-	I/O error and abnormal codes
80-9F	-	COBOL error codes
A0-BF	-	Monitor codes
C0-FF	-	Unused

Contents of the error message file for each of the assigned codes are given in the following pages. The codes follow the format indicated above (with leading zeros suppressed.)

GRP	ERR	SUB	MODULE	MESSAGE
00	01	00	OPEN	INSUFFICIENT INFORMATION TO OPEN DCB.
00	01	08	OPEN	REQUESTED NUMBER OF CONTIGUOUS GRANULES NOT AVAILABLE
00	02	00	OPEN	CAN'T OPEN NEXT FILE BECAUSE THERE AREN'T ANY MORE.
00	02	01	OPEN	CAN'T OPEN NEXT ACCOUNT BECAUSE THERE AREN'T ANY MORE.
00	03	00	OPEN	FILE DOES NOT EXIST.
00	04	00	OPEN/READ/PRECORD	BEGINNING OF FILE REACHED.
00	05	00	PRECORD/READ	END OF DATA REACHED.
00	06	00	READ	END OF FILE OR MONITOR CONTROL CARD REACHED.
00	07	00	READ	DATA HAS BEEN LOST. (BECAUSE YOUR BUFFER IS TOO SMALL.)
00	08	00	OPEN	'NEXT' FILE WON'T OPEN BECAUSE IT'S SYNONYMOUS TO SOME OTHER FILE.
00	09	00	RDERLOG	DIAGNOSTIC CLOSE ERROR
00	09	01	RDERLOG	NONEXISTENT DEVICE
00	09	02	RDERLOG	DEVICE BUSY
00	09	03	RDERLOG	SYMBIONT DEVICE BUSY
00	09	04	RDERLOG	NO CLIST IN DCB
00	09	05	RDERLOG	COMMAND LIST DESTROYED BY SWAP
00	09	06	RDERLOG	IOCD'S EXCEED LIMIT
00	09	07	RDERLOG	INVALID COMMAND LIST
00	09	08	RDERLOG	INVALID ADDRESS
00	09	09	RDERLOG	BUFFER CANNOT CROSS PAGE BOUNDARY
00	09	10	RDERLOG	A TIO,TDV, OR HIO WAS REQUESTED WITH AN INVALID FPT
00	09	11	RDERLOG	CHAN OPTION ON M;OPEN TO A DEVICE TYPE OR OPLABEL IS ILLEGAL
00	09	0A	RDERLOG	AUTHORIZATION NOT GRANTED OR < AO PRIVILEGE
00	09	0B	RDERLOG	INSUFFICIENT CORE TO PERMIT LOCK
00	09	0C	RDERLOG	CONTROLLER NOT PARTITIONED
00	09	0D	RDERLOG	DEVICE REQUESTED NOT PARTITIONED
00	09	0E	RDERLOG	INVALID ADDRESS
00	09	0F	RDERLOG	INSUFFICIENT SPACE TO PROCESS COMMAND LIST
00	0A	00	CLOSE	THAT DCB IS ALREADY CLOSED.
00	0A	01	CLOSE	ILLEGAL VLP CODE ON M;CLOSE CAL
00	0A	02	CLOSE	NOT ENOUGH ROOM IN FIT FOR REQUESTED CHANGE
00	0A	08	CLOSE	ILLEGAL FILE NAME
00	0A	09	CLOSE	NEW FILE NAME ALREADY EXISTS
00	0A	0A	CLOSE	CAN'T MODIFY A SYNONYMOUS FILE
00	0B	00	OPEN/READ/CVOL	UNRECOGNIZED SENTINEL ON LABELED TAPE.
00	0C	00	OPEN	ILLEGAL SYNON OPERATION.
00	0D	00	OPEN	NOT ENOUGH ROOM IN VLP OF DCB FOR PRIVATE PACK SN.
00	0D	01	PV	I/O ERROR READING VTOC OF A PRIVATE SET

249

250

GRP	ERR	SUB	MODULE	MESSAGE
00	0E	00	OPEN	127 DCB'S OPEN TO FILE - ACCESS DENIED.
00	13	00	DELREC/WRITE	YOU MUST SPECIFY NEWKEY WHEN WRITING A NEW RECORD.
00	14	00	OPNF	ACCESS DENIED - PASSWORD, READ/WRITE ACCOUNT OR WRONG ACCOUNT
00	14	01	OPEN	FILE IS BUSY.
00	14	02	OPEN	BAD FPARAM LOCATION.
00	14	03	OPNL	BREAK OR CONTROL-Y DURING MOUNT REQUEST. OPEN NOT PERFORMED.
00	14	04	MOVECAL(RDL)	INTERRUPTED M;MOVE OF UNCLEAN RANDOM FILE
00	14	05	OPND	INVALID OP LABEL IN DCB
00	14	06	OPNF	CONFLICTING OR MISSING DCB INFORMATION
00	14	07	OPNF	CAN'T OPEN DCB OUT WITH REL
00	14	08	OPEN	ILLEGAL PRIVATE PACK DEVICE TYPE
00	14	11	LBLT	CODE CONVERSION SPECIFIED ON DEVICE NOT HAVING FEATURE
00	14	12	LBLT	800BPI SPECIFIED ON DEVICE NOT HAVING DUAL DENSITY
00	14	13	OPNL	ILLEGAL CODE CONVERSION CHANGE REQUESTED
00	14	14	OPNF	EXECUTE ONLY FILE. THE FILE IS IN OPEN STATUS.
00	15	00	DELREC/WRITE	ILLEGAL OPERATION SEQUENCE ON UPDATE FILE
00	15	01	READ/PRECORD	IMPROPER OPERATION SEQUENCE ON SHARED KEYED FILE
00	16	00	WRITE	CAN'T SAY NEWKEY BECAUSE THE RECORD EXISTS.
00	17	00	WRITE	MUST USE NEWKEY ON OUTPUT FILES
00	18	00	WRITE	KEYS MUST BE GIVEN IN ORDER WHEN WRITING KEYED FILES SEQUENTIALLY.
00	19	00	OPEN/CLOSE	ILLEGAL OPERATION ON M;UC DCB.
00	1A	00	MOVECAL(RDL)	NO ERROR OR ABNORMAL ADDRESS SPECIFIED IN MOVECAL FPT
00	1A	01	MOVECAL(RDL)	SECOND DCB IS MISSING
00	1A	02	MOVECAL(RDL)	ONE OR BOTH DCBS ARE NOT OPEN
00	1A	03	MOVECAL(RDL)	DCB1 NOT OPEN IN OR DCB2 NOT OPEN OUT
00	1A	04	MOVECAL(RDL)	MOVE CAL NOT ALLOWED FOR DEVICE OR ANS DCBS
00	1A	05	MOVECAL(RDL)	THE MOVE CAL WAS ABORTED BY BREAK, CONTROL Y, OR OPERATOR
00	1A	42	MOVECAL(RDL)	KMAX OF INPUT DCB GREATER THAN KMAX OF OUTPUT DCB
00	1A	4A	MOVECAL(RDL)	SPECIFIED BUFFER DOES NOT BELONG TO USER
00	1C	00	READ/WRITE/PRECORD	END OF TAPE REACHED.
00	1C	01	WRITE	END OF TAPE ON COMMON JOURNAL
00	1D	00	READ/PRECORD	BEGINNING OF TAPE, 0 BYTE COC READ, OR BAD COMMAND TO TERMINAL
00	1F	00	WRT/IOD/IORT	BIN (OR VFC) NOT VALID FOR THIS DEVICE
00	20	01	READ	PRIVATE PACK IS LOCKED OUT.
00	20	02	READ	EXCLUSIVE USE OF PRIVATE PACK, NOT THIS USER.
00	20	03	READ	PRIVATE PACK NOT ON !LIMIT COMMAND
00	20	04	RDF	ONLINE USER REQUEST FOR PARTITIONED PRIV. PACK
00	20	05	PV	PACK SET HAS TWO PRIMARY VOLUMES

GRP	ERR	SUB	MODULE	MESSAGE
00	21	00	OPEN/CLOSE	PRIVATE PACK CONSISTENCY CHECK FAILURE.
00	22	00	OPEN	PRIVATE PACK ERROR TRYING TO OPEN EXISTING FILE.
00	23	00	COC	ON-LINE TERMINAL READ TIMED OUT.
00	24	00	COC	ON-LINE CONDITIONAL READ ISSUED WITH NO TYPE-AHEAD.
00	2E	00	OPEN	THAT DCB IS ALREADY OPEN!
00	30	01	LBLT	BAD USER LABEL ON ANS TAPE.
00	30	03	LBLT	INVALID FILE NAME LENGTH.
00	30	04	LBLT	CAN'T SPECIFY EXPIRE, NEVER.
00	30	05	LBLT	ILLEGAL FORMAT CODE.
00	31	00	ENQ/ENQO	DEQUEUE ATTEMPTED ON A RESOURCE/ELEMENT NOT QUEUED
00	31	01	ENQ/ENQO	ENQUEUE ATTEMPTED ON A RESOURCE/ELEMENT ALREADY QUEUED
00	31	02	ENQ/ENQO	ENQUEUE(SHARE) ATTEMPTED ON ELEMENT ALREADY QUEUED(EXCL)
00	31	03	ENQ/ENQO	ENQUEUE ATTEMPTED ON RESOURCE/ELEMENT NOT PRESENTLY AVAILABLE
00	31	04	ENQ/ENQO	ENQUEUE ABORTED BY CONTROL-Y OR BREAK OR OPERATOR
00	32	00	MOCIOP	MULTI-POINT LINE BUFFER SIZE EXCEEDS 2049 BYTES
00	32	01	MOCIOP	UNABLE TO ASSIGN PHYSICAL WORK PAGE; LIMIT REACHED
00	32	02	MOCIOP	UNABLE TO ASSIGN PHYSICAL WORK PAGE; PAGE NOT OWNED BY USER
00	32	03	OPND	POLLING/SELECTION LIST ALREADY IN USE
00	32	04	OPND/MOCIOP	BAD POLLING/SELECTION LIST ADDRESS
00	32	05	OPND	UNABLE TO INITIALIZE SLAVE LINE; BAD SLAVE LINE ID
00	32	06	OPND	ATTEMPTED TO OPEN DCB TO UNOWNED SLAVE LINE
00	32	07	MOCIOP	NUMBER OF POL/SEL LIST COMPONENTS EXCEEDS 254
00	32	08	MOCIOP	END OF LIST HIT ON OPEN LIST DURING AUTOMATIC POLLING OPERATION
00	32	09	OPND	MOCIOP MODULE OR COC SLAVE LINE CODE NOT IN THIS SYSTEM
00	32	70	MOCIOP	STATUS INSTEAD OF DATA IN BUFFER ON MULTI-POINT; LINE READ
00	33	00	IOCHK	READ OR WRITE ON BI-POINT LINE TERMINATED ; BY PURGE CAL
00	3F	35	JOBENT	ILLEGAL ACCOUNT OR PRIORITY
00	3F	36	JOBENT	JOB ENTRY DISALLOWED BY OPERATOR
00	3F	37	JOBENT	USER NOT ALLOWED TO USE JOB ENTRY SERVICE.
00	3F	38	JOBENT	FUNCTION INCONSISTENCY.
00	3F	39	JOBENT	INVALID ID FOR DELETION.
00	3F	3A	JOBENT	TOO LATE TO DELETE JOB.
00	3F	3B	JOBENT	NO MORE SYMBIONT SPACE IS AVAILABLE OR THE QUEUE IS FULL
00	3F	3C	JOBENT	USER NOT ALLOWED TO USE JOB ENTRY SERVICE.
00	3F	3D	JOBENT	SYSTEM OR LL DEVICE NOT SYMBIONT.
00	3F	3E	JOBENT	THE SPECIFIED DCB IS ALREADY OPEN.

251

GRP	ERR	SUB	MODULE	MESSAGE
00	3F	3F	JOBENT	THE SPECIFIED BUFFER ADDRESS OR CONTENTS IS INVALID.
00	40	00	READ	CAN'T READ AN OUTPUT FILE.
00	41	00	READ	IRRECOVERABLE DEVICE READ ERROR.
00	41	01	COOP	INPUT SYMBIONT FILE LOST BAD RAD.
00	41	02	READ	LABELED TAPE READ ERROR.
00	41	03	READ	LABELED TAPE READ ERROR-RECORD NOT TRANSMITTED.
00	41	04	READ	PARTIAL RECORD TRANSMITTED FOLLOWING ERROR 4103.
00	42	00	READ/WRITE/RANDOM	BAD KEY: LENGTH IS ZERO OR GREATER THAN MAX.
00	42	01	STPNR	ILLEGAL BUFFER SIZE ON ASSIGN/MERGE READ OR WRITE
00	43	00	READ	CAN'T FIND A RECORD WITH THAT KEY.
00	44	00	WRITE	CAN'T WRITE AN INPUT FILE.
00	45	00	WRITE	IRRECOVERABLE DEVICE WRITE ERROR.
00	45	01	WRITE	WRITE ERROR ON COMMON JOURNAL
00	46	00	READ	CAN'T OPEN FOR READ.
00	46	01	READ	CAN'T OPEN FOR READ: DCB HASN'T ENOUGH INFORMATION.
00	46	03	READ	CAN'T OPEN FOR READ: FILE DOESN'T EXIST.
00	46	14	OPNF	CAN'T OPEN FOR READ: FILE BUSY, MISSING FILE NAME, ACCOUNT OR PASSWORD
00	46	21	READ/WRITE	PRIVATE PACK LOGIC INCONSISTENCY.
00	46	22	READ	PRIVATE PACK ERROR TRYING TO OPEN EXISTING FILE.
00	46	48	READ	ONLINE USER CANNOT ACCESS CARD READER.
00	46	49	READ	CAN'T OPEN FOR READ, NO DISMOUNTABLE RESOURCES AVAILABLE.
00	47	00	WRITE	CAN'T OPEN FOR WRITE.
00	47	01	WRITE	CAN'T OPEN FOR WRITE: DCB HASN'T ENOUGH INFORMATION.
00	47	03	WRITE	CAN'T OPEN FOR WRITE: FILE DOESN'T EXIST.
00	47	14	OPNF	CAN'T OPEN FOR WRITE: FILE BUSY, MISSING FILE NAME, ACCOUNT OR PASSWORD
00	47	28	OPEN	INVALID OP LABEL IN DCB.
00	47	48	WRITE	SYMBIONT USE FLAG NOT SET FOR ONLINE USER.
00	48	00	OPNLD	PERIPHERAL USE FLAG NOT SET FOR THIS DEVICE
00	48	01	OPEN	ONLINE USER CANNOT ACCESS CARD READER.
00	49	00	PV	YOUR FILE IS WRITE PROTECTED.
00	49	01	OPEN	REQUESTED REMOVABLE DEVICE IS NOT AVAILABLE
00	49	02	PV/OPNTP	USER DISMOUNTABLE RESOURCE LIMIT EXCEEDED
00	49	03	OPEN	INSUFFICIENT DCB SPACE FOR SERIAL NUMBERS
00	4A	00	READ/WRITE/ENG	SPECIFIED BUFFER DOES NOT BELONG TO THE USER.
00	4A	01	IOCHEK	TIME PARAMETER ON M;CHECKECB TOO BIG
00	4A	02	IOCHEK	ECB IN WRONG STATE ON M;CHECKECB OR M;CHECK W/ECB
00	4A	03	IOCHEK	INFINITE WAIT CONDITION ON M;CHECKECB OR M;CHECK W/ECB
00	4A	04	IOCHEK	NO MONITOR WORK SPACE TO HONOR M;CHECKECB OR M;CHECK W/ECB

252



GRP	ERR	SUB	MODULE	MESSAGE
00	4A	05	IOCHK	WRONG ACCESS CODE FOR ECB ADDRESS ON M:CHECKECB OR M:CHECK W/ECH
00	4B	00	READ/WRITE	ATTEMPT TO OPEN A FILE THAT YOU HAVE OPEN ALREADY.
00	4C	00	READ/WRITE	ATTEMPT TO OPEN A FILE THAT SOMEONE ELSE HAS OPEN.
00	4D	00	CLOSE	ATTEMPT TO CLOSE AND RELEASE A FILE THAT SOMEONE ELSE IS READING.
00	4E	00	ARDL	ANS BLOCK COUNT ERROR AND NO ABCERR SPECIFIED.
00	4E	01	READ/CVOL	VOLUME SEQ NUMBER ERROR ON ANS TAPE
00	4E	04	LBLT	BEGINNING OF FILE ON ANS TAPE
00	4E	05	READ/CVOL	ANS BLOCK COUNT ERROR PLUS END OF TAPE.
00	4E	07	READ/CVOL	ANS BLOCK COUNT ERROR PLUS END OF FILE.
00	4F	00	MAGTAPE	UNRECOVERABLE ERROR AFTER REFLECTOR ON TAPE.
00	51	00	CLOSE	YOU STILL HAVE THIS FILE OPEN IN THROUGH ANOTHER DCB.
00	52	00	OPNF	INSUFFICIENT PRIVILEGE FOR THIS CAL
00	54	00	READ	YOU MUST NOT READ MONITOR CONTROL CARDS MORE THAN ONCE.
00	55	00	OPEN	TOO MANY FILES OPEN SIMULTANEOUSLY.
00	56	00	CLOSE/CVOL	NO MORE ROOM ON THIS TAPE OR IN THIS TAPE SET
00	57	00	READ/WRITE	GRANULE LIMIT EXCEEDED OR SPACE EXHAUSTED
00	57	44	RANDOM	NOT ENOUGH GRANULES FOR WRITE OR COUNT ON READ EXTENDS BEYOND EOF.
00	58	00	ENQ/ENQO	ENQUEUE REQUEST WOULD RESULT IN A DEADLOCK
00	58	01	ENQ/ENQO	ENQUEUE TABLES FULL
00	58	02	ENQ/ENQO	ENQUEUE REQUEST FOR ALL WITH OTHER ELEMENTS ALREADY QUEUED
00	58	03	ENQ/ENQO	UNAUTHORIZED USER ATTEMPTED AN ENQUEUE
00	59	00	IORT	ATTEMPTED READ ON BI-POINT LINE WITH A READ OUTSTANDING
00	59	01	MOCIOP	INVALID POL/SEL LIST INDEX VALUE
00	59	02	MOCIOP	POL/SEL LIST INDEX VALUE POINTS TO EXCLUDED OR DUMMY COMPONENT
00	59	03	MOCIOP	AUTO READ REQUEST CONFLICTS WITH OUTSTANDING I/O REQUESTS
00	59	04	MOCIOP	MULTI-POINT LINE CONTROLLER DOWN
00	59	05	MOCIOP	NO RESPONSE FROM MULTI-POINT LINE TERMINAL(READ)
00	59	06	MOCIOP	MULTI-POINT LINE TERMINAL NOT IN TRANSMIT STATE ON SINGLE TERMINAL READ; REQUEST OR HALT SPECIFIED OR END OF OPEN LIST HIT.
00	59	07	MOCIOP	BAD TRAILER RECORD ON MULTI-POINT TERMINAL READ
00	59	08	MOCIOP	PARITY ERROR IN RECORD RECEIVED FROM MULTI-POINT LINE TERMINAL
00	59	09	MOCIOP	BAD HEADER RECORD ON MULTI-POINT TERMINAL READ
00	59	0A	MOCIOP	NO RESPONSE FROM MULTI-POINT LINE TERMINAL (WRITE)
00	59	0B	MOCIOP	ILLEGAL 1ST CHARACTER IN WRITE SELECTION RESPONSE HEADER FROM; MULTI-POINT LINE TERMINAL
00	59	0C	MOCIOP	MULTI-POINT LINE TERMINAL NOT IN RECEIVE STATE ON WRITE REQUEST
00	59	0D	MOCIOP	INTERNAL TERMINAL ERROR ON MULTI-POINT READ
00	59	0E	MOCIOP	MULTI-POINT LINE TERMINAL NAK RECORD (WRITE DATA RESPONSE)

GRP	ERR	SUB	MODULE	MESSAGE
00	59	0F	MOCIOP	LOST DATA ON MULTI-POINT LINE TERMINAL WRITE
00	59	10	MOCIOP	ILLEGAL RESPONSE ON MULTI-POINT LINE READ
00	5A	00	IORT	NO ECB ADDRESS SUPPLIED WITH SLAVE LINE I/O REQUEST
00	5A	01	IOCHEK	NO ECB ADDRESS SUPPLIED WITH SLAVE LINE M:CHECK
00	5B	00	IOCHEK	LINE HUNG UP ON READ PENDING (BI-POINT LINE)
00	5C	00	IOCHEK	LINE HUNG UP ON INCOMPLETE WRITE (BI-POINT LINE)
00	75	00	CLOSE	BAD DISC ADDRESS IN FREE SECTOR POOL (DIRECTORIES ONLY). -ERRLOG ONLY-
00	75	01	READ	DATA RECORDS LOST.
00	75	02	READ	FILE INDEX (AND THE ASSOCIATED DATA RECORDS) LOST.
00	75	03	OPEN	ENTIRE FILE LOST.
00	75	04	CLS/OPEN	ERROR IN FILE DIRECTORY. ONE OR MORE FILES ARE INACCESSIBLE.
00	75	05	OPEN	ENTIRE ACCOUNT LOST.
00	75	06	OPEN	ACCOUNT DIRECTORY (AND THE ASSOCIATED ACCOUNTS) LOST.
00	75	07		ERROR IN PYRAMID. (ERRLOG ONLY)
00	75	40		HARDWARE ERROR: FREE SECTOR POOL CONTAINS ERRONEOUS INFORMATION.
00	75	41		HARDWARE ERROR: DATA RECORDS LOST DUE TO BAD DISK ADDRESS.
00	75	42		HARDWARE ERROR: MASTER INDEX AND ASSOCIATED DATA RECORDS LOST.
00	75	43		HARDWARE ERROR: ENTIRE FILE LOST.
00	75	44		HARDWARE ERROR: ONE OR MORE FILES LOST.
00	75	45		HARDWARE ERROR: ALL FILES IN ACCOUNT HAVE BEEN LOST.
00	75	46		HARDWARE ERROR: ONE OR MORE ACCOUNTS HAVE BEEN LOST.
00	75	47		HARDWARE ERROR: ERROR IN PYRAMID.
00	75	7D	OPEN	ERROR DURING FAST OPEN (ERRLOG ONLY).
00	75	7E	RDF	ERROR IN MAIN DIRECTORY GRANULE DUAL READ (ERRLOG ONLY).
00	75	7F	RDF	FILE INCONSISTENCY CORRECTED BY SOFTWARE (ERRLOG ONLY).
00	7F	1D	INITRCVR	SINGLE USER ABORT. SC 1D.
00	7F	21	INITRCVR	SINGLE USER ABORT. SC 21.
00	7F	22	INITRCVR	SINGLE USER ABORT. SC 22.
00	7F	31	INITRCVR	SINGLE USER ABORT. SC 31.
00	7F	32	INITRCVR	SINGLE USER ABORT. SC 32.
00	7F	49	INITRCVR	SINGLE USER ABORT. SC 49.
00	7F	60	TEL	TEL ISSUED SINGLE USER ABORT ON YOU
00	7F	61	INITRCVR	SINGLE USER ABORT. SC 61.
00	7F	6A	INITRCVR	SINGLE USER ABORT. SC 6A.
00	7F	79	INITRCVR	SINGLE USER ABORT. SC 79.
00	7F	7C	INITRCVR	SINGLE USER ABORT. SC 7C.
00	7F	7E	INITRCVR	SINGLE USER ABORT. SC 7E.
00	A0	00	STEP(ASP)	THAT'S NO DEBUGGER!

254

GRP	ERR	SUB	MODULE	MESSAGE
00	A1	00	STEP(ASP)	DON'T TRY TO DEBUG A SHARED PROCESSOR
00	A1	01	STPNR	DON'T TRY TO DEBUG AN EXECUTE ONLY LOAD MODULE
00	A1	02	STPNR	LIBRARY CONFLICTS WITH DEBUGGER
00	A2	00	STEP(ASP)	ATTEMPT TO ACCESS UNAUTHORIZED PROCESSOR(EG. CCI ON-LINE).
00	A2	01	STPNR	ACCESS TO NON-SYSTEM PROCESSOR DENIED BY INSTALLATION
00	A2	02	STPNR	ACCESS TO PROCESSOR DENIED BY INSTALLATION
00	A3	00	TRAP	CAN'T GIVE YOU THIS TRAP. YOUR STACK IS FULL OR NOT THERE.
00	A3	01	TRAPC	NO ENVIRONMENT PRESENT FOR RETURN.
00	A3	02	TRAPC	DON'T SIMULATE THAT TRAP
00	A4	00		YOU TRAPPED
00	A4	01	TRAP	NONEXISTENT INSTRUCTION
00	A4	02	TRAP	NONEXISTENT MEMORY REFERENCE
00	A4	03	TRAP	PRIVILEGED INSTRUCTION
00	A4	04	TRAP	MEMORY PROTECT VIOLATION
00	A4	05	TRAP	UNIMPLEMENTED INSTRUCTION
00	A4	06	TRAP	STACK OVERFLOW
00	A4	07	TRAP	FIXED POINT OVERFLOW
00	A4	08	TRAP	FLOATING POINT FAULT
00	A4	09	TRAP	DECIMAL ARITHMETIC FAULT
00	A4	0A	TRAP	WATCHDOG TIMER RUNOUT. STEP ABORTED.
00	A4	0B	TRAP	TRAP 47 PROGRAMMED TRAP
00	A4	0D	CSEHAND	INSTRUCTION EXCEPTION TRAP - ILLEGAL REGISTER DESIGNATION
00	A5	00	STPNR	LOAD MODULE SIZE EXCEEDS USER LIMIT OR AVAILABLE CORE.
00	A5	02	STPNR	VIRTUAL CORE NOT AVAILABLE SPECIAL SHARED PROCESSOR
00	A5	04	STPNR	EXTENDED MEMORY MODE-CURRENT JOB STEP ABORTED
00	A5	06	STPNR	CURRENT SPECIAL SHARED PROCESSOR ABORTED FOR TEL
00	A5	07	STPNR	PROGRAM OVERLAPS CURRENTLY ALLOCATED COMMON PAGES
00	A5	08	STPNR	PHYSICAL CORE NOT AVAILABLE FOR SHARED PROCESSOR
00	A5	09	STPNR	CORE NOT AVAILABLE FOR CONTEXT BUFFER
00	A5	51	STPNR	BAD DATA BIAS FOR CORE LIBRARY
00	A6	03	STPNR	LOAD MODULE DOES NOT EXIST
00	A6	14	STPNR	LOAD MODULE ACCESS DENIED
00	A6	30	STPNR	BAD DCBS OR DCB TABLE
00	A6	31	STPNR	BAD HEAD RECORD
00	A6	32	STPNR	LOAD MODULE BIAS NOT ON PAGE BOUNDARY

GRP	ERR	SUB	MODULE	MESSAGE
00	A6	33	STPNR	PURE PROCEDURE NOT ON PAGE BOUNDARY
00	A6	34	STPNR	DCBS NOT ON PAGE BOUNDARY
00	A6	35	STPNR	HEAD RECORD IS INCOMPLETE
00	A6	36	STPNR	TREE RECORD IS INCOMPLETE
00	A6	37	STPNR	NO DEBUGS ARE ALLOWED WITH LINK-BUILD LMNS
00	A6	38	STPNR	PROGRAM TOO BIG OR BIASED INCORRECTLY FOR ALLOWED USER AREA
00	A6	39	STPNR	FILE NOT KEYED, NOT A LOAD MODULE
00	A6	3A	STPNR	YOUR DCB CHAIN IS UNLINKED OR CIRCULAR
00	A6	3B	STPNR	TCB ADDRESS NOT WITHIN DATA AREA
00	A6	42	STPNR	THAT'S NO LOAD MODULE
00	A6	43	STPNR	THAT'S NO LOAD MODULE
00	A6	50	STPNR	LOAD MODULE IS PRE-800
00	A6	51	STPNR	PMD/SNAP/MODIFY NOT ALLOWED WITH EXECUTE ONLY LOAD MODULES
00	A8	00	STPNR	YOU ISSUED AN ERROR OR ABORT CAL
00	A9	00	UCAL	ERROR ON READ OR WRITE OF A/M RECORD
00	AA	00	STPNR	WHAT PUBLIC LIBRARY?
00	AC	00		DON'T TRY TO READ THE CARD READER
00	AD	00	STPNR	EXTENDED PROCESSING LIMITS WERE EXCEEDED.
00	AE	00	CALPROC/ALTCP	THAT CAL HAS AN ILLEGAL OP CODE.
00	AF	00	CALPROC	YOUR CAL1 REFERENCES A NON-EXISTENT DCB.
00	B0	00	DUMP	NO M:DO DCB FOR SNAPSHOT
00	B0	01	DUMP	ATTEMPT TO DUMP AN INACCESSABLE LOCATION
00	B0	02	DUMP	INACCESSIBLE FLAG ADDRESS GIVEN ON CONDITIONAL DEBUG
00	B0	03	DUMP	ILLEGAL PARAMETER IN DEBUG CAL.
00	B1	00	SEGLOAD	CAN'T FIND THAT OVERLAY SEGMENT.
00	B1	01	SEGLOAD	TREE RECORD IS INCOMPLETE
00	B1	02	SEGLOAD	TREE RECORD IS CIRCULAR
00	B1	03	SEGLOAD	DATA AREA IS LARGER THAN RESERVED BY HEAD
00	B1	04	SEGLOAD	PP AREA IS LARGER THAN RESERVED BY HEAD
00	B1	05	SEGLOAD	OVERLAY LIMITS DEFINED BY TREE ARE OUTSIDE THOSE DEFINED BY HEAD
00	B1	06	SEGLD	INSUFFICIENT MEMORY (SYSTEM ERROR)
00	B1	07	SEGLOAD	PAGE ACQUIRED BY M:CVM ENCOUNTERED
00	B1	08	SEGLOAD	PAGED LOAD MODULE GREATER THAN 255 SEGMENTS.
00	B2	00	ENTRY	DON'T USE CAL2,CAL3,OR CAL4 INSTRUCTIONS
00	B3	00	WRTD	LIMIT EXCEEDED.
00	B3	01	WRTD	PUNCH LIMIT (PO)
00	B3	02	WRTD	PRINTER PAGE LIMIT FOR PROCESSORS (LO)
00	B3	03	WRTD	PRINTER PAGE LIMIT FOR USER (UO)

GRP	ERR	SUB	MODULE	MESSAGE
00	B3	04	WRTO	PRINTER PAGE LIMIT FOR DEBUG (DO)
00	B3	08	WRTO	EXECUTION TIME LIMIT.
00	B4	00	STPNR	EXIT
00	B4	01	STPNR	YOU ISSUED A M:ERR
00	B4	02	STPNR	YOU ISSUED A M:XXX
00	B4	03	STPNR	OPERATOR ERRORED YOU.
00	B4	04	STPNR	JOB ABORTED BY OPERATOR OR USER.
00	B5	00	STPNR	LOAD MODULE SIZE EXCEEDS USER LIMIT OR AVAILABLE CORE
00	B5	01	LDLNK	LOAD AND LINK CAN'T OPEN YOUR FILE
00	B5	02	STPNR	VIRTUAL CORE NOT AVAILABLE FOR SPECIAL SHARED PROCESSOR
00	B5	03	LDLNK	LOAD AND LINK CAN'T FIND YOUR FILE
00	B5	07	STPNR	PROGRAM OVERLAPS CURRENTLY ALLOCATED COMMON PAGES
00	B5	08	STPNR	PHYSICAL CORE NOT AVAILABLE FOR SHARED PROCESSOR
00	B5	09	STPNR	CORE NOT AVAILABLE FOR CONTEXT BUFFER
00	B5	14	LDLNK	LOAD AND LINK IS DENIED ACCESS TO YOUR FILE.
00	B5	46	LDLNK	LOAD AND LINK HAS INSUFFICIENT INFORMATION TO OPEN YOUR FILE.
00	B5	4A	LNKTRC	COMMAND STRING ADDRESS DOESN'T BELONG TO YOU
00	B5	50	STPNR	LOAD MODULE IS PRE-B00
00	B5	51	STPNR	BAD DATA BIAS FOR CORE LIBRARY
00	B5	57	LDLNK	RAD SATURATED DURING M:LINK CAL
00	B5	62	LDLNK	LOAD AND LINK IS NOT PERMITTED WHEN A SPECIAL PROCESSOR OTHER THAN A CORE LIBRARY IS ASSOCIATED
00	B5	63	LDLNK	LOAD AND LINK IS PERMITTED ONLY WITH PROGRAMS CREATED BY OVERLAY LOADER
00	B5	64	LDLNK	LOAD AND LINK IS NOT PERMITTED ON PROGRAMS NOT OWNING ALL VIRTUAL MEMORY FROM DATA THROUGH DYNAMIC DATA
00	B5	65	LNKTRC	PAGE ACQUIRED BY CVM ENCOUNTERED
00	B5	66	LNKTRC	OUT OF PAGES (SYSTEM ERROR)
00	B5	67	LDLNK	INVALID ATTEMPT TO PERFORM LOAD AND LINK EXIT AT JOB STEP
00	B5	68	LDLNK	LOAD AND LINK OPERATION IS ILLEGAL AS SPECIFIED
00	B5	69	LDLNK	LDLNK CLEANUP WITHOUT PREVIOUS LDLNK OPERATION.
00	B5	6A	LNKTRC	LOAD AND LINK TO COMMAND PROCESSOR NOT ALLOWED
00	B5	6B	STPNR	LOAD AND LINK TO LINKED PROGRAM NOT ALLOWED
00	B5	6C	STPNR	LOAD AND LINK TO SPECIAL SHARED PROCESSOR NOT ALLOWED
00	B5	6D	LNKTRC	PHYSICAL CORE FOR LIBRARY NOT AVAILABLE FOLLOWING LNKTRC
00	B5	6E	LNKTRC	M:LINK/LDTRC ILLEGAL FOR PROGRAMS WITH TP CALS OUTSTANDING
00	B5	6F	LNKTRC	LDTRC TO PREVIOUSLY EXECUTED FILE
00	B5	70	LNKTRC	LOAD AND LINK IS ILLEGAL WITH REAL-TIME ICBS PRESENT
00	B6	00	LDLNK	THAT'S NO SEGLD DCB
00	B6	01	STPNR	THE DCB NAME CHAIN IS NOT IN THE DCB RECORD
00	B6	02	STPNR	THE DCB NAME CHAIN MAY NOT BE LINKED
00	B6	03	STPNR	THE DCB NAME CHAIN IS IRREGULAR
00	B6	04	STPNR	THE DCB HAS NO NAME
00	B6	05	STPNR	USER HAS MORE THAN 509 DCBS

GRP	ERR	SUB	MODULE	MESSAGE
00	B6	06	STPNR	THE DCB IS OUTSIDE THE BUFFER
00	B6	07	STPNR	THE DCB MAY NOT CROSS PAGE BOUNDARIES
00	B6	08	STPNR	THE DCB MUST BE AT LEAST 22 WORDS LONG
00	B6	09	STPNR	KBUF MUST LIE WITHIN THE DCB
00	B6	0A	STPNR	FLP MUST LIE WITHIN THE DCB
00	B6	0B	STEP	BAD DCB: FLP OVERLAPS INTO KBUF
00	B6	0C	STEP	M:SEGLD DCB NEEDS 10 WORDS FOR VLPS
00	B7	00	OPNLD	UNRECOGNIZED STREAM ID
00	B7	01	OPNLD	UNRECOGNIZED DEV SPECIFICATION
00	B7	02	OPNLD	FUNCTION NOT LEGAL FOR DEVICE
00	B7	03	OPNLD	UNRECOGNIZED WSN
00	B7	04	OPNLD	PERIPHERAL USE FLAG NOT SET FOR THIS DEVICE
00	B7	05	OPNLD	MULTIPLE COPIES NOT ALLOWED IN CONCURRENT OUTPUT MODE
00	B7	06	OPNLD	CONCURRENT OUPUT MODE ILLEGAL FOR IRBT
00	B7	07	OPNLD	YOU ARE NOT AUTHORIZED TO USE CONCURRENT OUTPUT MODE
00	B8	00	RTRoot	THIS ERROR CODE IS RESERVED FOR REAL-TIME PURPOSES
00	B8	01	RTRoot	QFI ATTEMPTED WITH NO ICB'S ASSOCIATED
00	B8	02	RTRoot	INTRTN ISSUED WHEN NO ICB'S WERE ACTIVE
00	B8	03	RTRoot	RESTRICTED CAL1 ISSUED FOLLOWING M:HOLD (ON)
00	B8	04	RTNR	USER PROVIDED AN ILLEGAL OR NON-EXISTANT INTERRUPT ADDRESS OR TEXT LABEL
00	B8	05	RTNR	ILLEGAL FPT OR MISSING REQUIRED PARAMETER
00	B8	06	RTNR	ZERO TIMER UNITS SPECIFIED VIA M:CLOCK CAL1
00	B8	07	T:JOBENT/GRAN	USER REQUESTED A SERVICE FROM A SYSTEM GHOST AFTER HAVING BLOCKED; THAT GHOST VIA M:HOLD (ON)
00	B9	00	RTRoot	THIS ERROR CODE IS RESERVED FOR REAL-TIME PURPOSES
00	B9	01	ALTCP/RTRoot	USER HAS INSUFFICIENT PRIVILEGE TO ISSUE THIS CAL1,S
00	B9	02	RTRoot	INVALID DEVICE ADR, DEVICE NOT PRE-EMPTED, OR SPECIFIED DCB ; IS NOT OPENED PROPERLY (M:IOEX)
00	B9	04	ALTCP	EFFECTIVE ADDRESS OF M:EXU IS IN PROTECTED MEMORY
00	B9	05	ALTCP	INSTRUCTION TO BE EXECUTED VIA M:EXU HAD INVALID OP-CODE
00	BC	01	TQ	TP SERVICE REQUESTED IS ILLEGAL FOR THIS USER
00	BC	02	TQ	AN EVENT ASSOCIATED WITH THE USER HAS OCCURRED (E.G., M:INT, ABORT, ESC)
00	BC	03	TQ	ERROR RETURN FROM GET PHYSICAL WORK PAGE
00	BC	07	TQ	QUEUE SATURATED (INDEX CORE SPACE OR SECONDARY STORAGE UNAVAILABLE)
00	BC	08	TQ	QUEUE LOCK/UNLOCK CALLER DOES NOT HAVE THE REQUIRED PRIVILEGE
00	BC	09	TQ	DCB NOT OPEN FOR A LOCK/UNLOCK REQUEST
00	BC	0A	TQ	SPACE IS NOT AVAILABLE TO DEFINE A LIST
00	BC	10	TQ	ERROR IN SPECIFIED ADDRESS, SIZE, OR QUEUE MSG FORMAT

258

GRP	ERR	SUB	MODULE	MESSAGE
00	BC	11	TQ	QUEUE LOCKED
00	BC	12	TQ	QUEUE PHYSICAL PAGE SPACE IS NOT AVAILABLE
00	BC	13	TQ	ERROR IN FPT PARAMETERS OR SPECIFIED LIST
00	BC	14	TQ	ENTRY NOT FOUND FOR A QUEUE REQUEST REQUIRING AN EXISTING ENTRY
00	BC	15	TQ	I/O ERROR DURING CONTROL/INDEX TRANSFER FOR AN UNLOCK REQUEST
00	BC	16	TQ	I/O ERROR DURING A DATA BLOCK TRANSFER
00	BC	17	TQ	QUEUE BUSY
00	BC	20	TQ	QUEUE GET OR PURGE REQUEST FOR A NON-EXISTENT GET LIST
00	BC	21	TQ	QUEUE HAS NOT BEEN OPENED BUT A NON-TP; USER IS TRYING TO ACCESS IT.
01	01	00	PCL	ARGUMENT GREATER THAN 31 CHARACTERS
01	02	00	PCL	ILLEGAL DEVICE CODE
01	03	00	PCL	INVALID REEL NUMBER SPECIFICATION
01	04	00	PCL	ILLEGAL FILE NAME SPECIFICATION
01	05	00	PCL	ILLEGAL ACCOUNT NUMBER SPECIFICATION
01	06	00	PCL	ILLEGAL PASSWORD SPECIFICATION
01	07	00	PCL	TOO MANY FIELDS IN A FILE ID SPECIFICATION
01	08	00	PCL	INVALID FILE RANGE SPECIFICATION
01	09	00	PCL	MORE THAN TEN RS FIELDS FOR AN INPUT DEVICE
01	0A	00	PCL	VOLUME NUMBER BEYOND END OF SN
01	0B	00	PCL	INVALID DECIMAL NUMBER
01	0C	00	PCL	CS ID-FIELD GREATER THAN FOUR CHARACTERS
01	0D	00	PCL	ERROR ON N OR K VALUE OF CS OPTION
01	0E	00	PCL	IMPROPER TERMINATION WITHIN RS, LN, OR CS OPTION
01	0F	00	PCL	) ) MUST TERMINATE RS, LN, OR CS OPTION
01	10	00	PCL	SPECIAL ARGUMENTS MUST HAVE ) AS TERMINATOR-
01	11	00	PCL	EH?
01	12	00	PCL	UNDEFINED COMMAND
01	13	00	PCL	ILLEGAL INPUT DEVICE
01	14	00	PCL	NO DEFINED OUTPUT DEVICE
01	15	00	PCL	ILLEGAL OUTPUT DEVICE
01	16	00	PCL	REEL NUMBER SPECIFICATION NOT VALID
01	17	00	PCL	FILE SPECIFICATION NOT VALID
01	18	00	PCL	DATA CODE SPECIFICATION NOT VALID
01	19	00	PCL	MODE SPECIFICATION NOT VALID
01	1A	00	PCL	SEQUENCE SPECIFICATION NOT VALID
01	1B	00	PCL	RECORD SELECTION SPECIFICATION NOT VALID
01	1C	00	PCL	PK/BIN/7T COMBINATION NOT VALID

259

GRP	ERR	SUB	MODULE	MESSAGE
01	1D	00	PCL	NULL ARGUMENT (TWO DELIMITERS IN A ROW)
01	1E	00	PCL	IMPROPER TERMINATION OF THE COMMAND
01	1F	00	PCL	ONE REEL NUMBER MUST BE SPECIFIED ON THIS COMMAND
01	20	00	PCL	TO, INTO, OR OVER NOT SPECIFIED
01	21	00	PCL	RECORD SIZE EXCEEDS AVAILABLE MEMORY
01	22	00	PCL	INVALID DEVICE TYPE FOR THIS COMMAND
01	23	00	PCL	TOO MANY REEL NUMBERS SPECIFIED
01	24	00	PCL	'TO' FILE EXISTS
01	25	00	PCL	INVALID DIRECTION INDICATOR ON 'SPF' COMMAND
01	26	00	PCL	INPUT RECORD SIZE LARGER THAN 32767 BYTES
01	27	00	PCL	INVALID OPTION FOR THIS COMMAND
01	28	00	PCL	TOO MANY SN,RD,WR,EX,UN SPECIFICATIONS
01	29	00	PCL	RS SPECIFICATION BEYOND END OF FILE
01	2A	00	PCL	ERROR IN COMPRESSED INPUT
01	2B	00	PCL	PCL NEEDS AT LEAST TWO DATA PAGES TO RUN
01	2C	00	PCL	TOO MANY ERRORS - PROCESS ABORTED
01	2D	00	PCL	INVALID TAB SPECIFICATION
01	2E	00	PCL	OVERFLOW ON EDIT LINE NUMBER
01	2F	00	PCL	ZERO INCREMENT ON CS OR LN OPTION
01	30	00	PCL	TX OPTION USED WITHOUT TABS COMMAND
01	31	00	PCL	M49 RES
01	32	00	PCL	CONFLICTING OR DUPLICATE OPTION
01	33	00	PCL	MORE THAN 16 TAB VALUES
01	34	00	PCL	INVALID HEXADECIMAL NUMBER
01	35	00	PCL	TOO MANY CHARACTERS IN THE COMMAND
01	36	00	PCL	INVALID VALUE FOR ANS OPTION
01	37	00	PCL	TOO MANY BLANKS IN A DELETE COMMAND
01	38	00	PCL	ERROR WRITING LISTING OUTPUT
01	39	00	PCL	TAPE DENSITY SPECIFICATION IS IN ERROR
02	00	01	LOADER	UNEXPECTED EOF
02	00	02	LOADER	ILLEGAL RECORD I.D.
02	00	03	LOADER	SEQUENCE ERROR
02	00	04	LOADER	ILLEGAL RECORD SIZE
02	00	05	LOADER	CHECKSUM ERROR
02	00	06	LOADER	ABNORMAL I/O
02	00	07	LOADER	CANNOT OPEN E.F.
02	00	08	LOADER	STACK OVERFLOW
02	00	09	LOADER	BIAS TOO LARGE



GRP	ERR	SUB	MODULE	MESSAGE	
02	00	0A	LOADER	ILL. ROM LANGUAGE	
02	00	0B	LOADER	BAD START ADDRESS	
02	00	0C	LOADER	UNEXPECTED ROM END	
02	00	0D	LOADER	REPEAT LOAD IS ZERO	
02	00	0E	LOADER	IMPROPER BOUND	
02	00	0F	LOADER	ILLEGAL ORG	
02	00	10	LOADER	BAD I/O RETURN FROM M:LM DCB	
02	00	11	LOADER	SEV. LEV. EXCEEDED	
02	00	12	LOADER	ILL. LIB. LOAD MOD.	
02	00	13	LOADER	NO ROOM TO ROUND DCBS TO PAGE BOUNDARIES. TRY FORCING XMEM	
02	00	14	LOADER	ILL. DSECT	
02	00	15	LOADER	ROOT SEGMENT TOO LARGE TO LOAD	IN2
02	00	16	LOADER	TOO MANY CORE LIBRARIES ASSOCIATED	IN2
02	00	17	LOADER	CANNOT ENTER XMEM. STACKS TOO LARGE.	IN2
02	00	18	LOADER	NOT ENOUGH ROOM TO CONCATENATE XMEM PAGES	IN2
02	00	19	LOADER	NO ROOM TO READ LIBRARY CORE IMAGE	EVL
02	00	1A	LOADER	NO ROOM TO READ LIBRARY RELOCATION DICTIONARY	EVL
02	00	1B	LOADER	NO ROOM FOR NEW EXPRESSION	WRT
02	00	1C	LOADER	NO ROOM TO BUILD DCB TABLE. TRY FORCING XMEM	WRT
02	00	1D	LOADER	NO ROOM TO BUILD DCB TABLE.	WRT
02	00	1E	LOADER	LIBRARY LOAD MODULE REF/DEF STACK TOO LARGE TO UPDATE	WRT
02	00	1F	LOADER	INSUFFICIENT PHYSICAL MEMORY	
02	00	20	LOADER	BAD ASSIGN/MERGE RECORD	
02	00	21	LOADER	NO ROOM TO ADD LIBRARY LOAD MODULE TO ROM TABLE	
02	00	22	LOADER	NO ROOM TO READ LIBRARY REF/DEF STACK	
02	00	23	LOADER	NO ROOM TO UPDATE LIBRARY	
02	00	24	LOADER	INVALID KEY SUPPLIED FOR DELETE RECORD ON M:DIC	
02	00	25	LOADER	I/O ERROR ON M:DIC IN WRITESEG	
02	00	26	LOADER	ILLEGAL LIBRARY LOAD MODULE NAME	
02	00	27	LOADER	ABNORMAL I/O ON OPEN OR READ TO CORE LIBRARY	
02	00	28	LOADER	INVALID DECLARATION NUMBER REFERENCE (BAD ROM).	
02	00	29	LOADER	INVALID KEY SUPPLIED FOR WRITE RECORD ON M:DIC	
02	00	2A	LOADER	ILLEGAL LOADER TRAP	
02	00	2B	LOADER	ABNORMAL I/O IN WRITELIB	
02	00	2C	LOADER	CANNOT FIND REF/DEF NAME IN STACK	
02	00	2D	LOADER	LIB LOAD MODULE TOO BIG - CANNOT USE EXTENDED MEMORY	
02	00	2E	LOADER	LIB LMN IS NOT ALLOWED ON A PRIVATE VOLUME	
02	00	2F	LOADER	ABNORMAL I/O READING LIB LMN	EVL

260 a

GRP	ERR	SUB	MODULE	MESSAGE
02	00	30	LOADER	PAGED LMN MUST NOT HAVE MORE THAN 256 SEGMENTS
02	00	31	LOADER	LMN'S SIZE TOO BIG
02	00	32	LOADER	THAT'S NOT A (MAPPABLE) LOAD MODULE
02	00	33	LOADER	BAD ENTRY IN LIBRARY REF/DEF STACK
02	00	34	LOADER	BAL TO AN OVERLAY ON REGISTER ZERO DETECTED WHILE IN BREF MODE
03	01	00	TEL	COMMAND LEGAL ONLY AT JOB STEP - QUIT OR GO
03	01	01	TEL	IMPROPER FORMAT FOR SET COMMAND
03	01	02	TEL	ILLEGAL OR INCONSISTENT RESOURCE NAME
03	01	03	TEL	DCB NOT ASSIGNED - CAN'T UPDATE
03	01	04	TEL	FILENAME: ME IS ILLEGAL
03	01	05	TEL	CAN'T CREATE OR MODIFY DCB - A/M RECORD FULL
03	01	06	TEL	BAD A/M ENTRY - RESPECIFY SET FOR THIS DCB
03	01	07	TEL	OPTION ILLEGAL FOR UNKNOWN FILE TYPE
03	01	08	TEL	OPTION ILLEGAL FOR FILES
03	01	09	TEL	OPTION ILLEGAL FOR XEROX LABELED TAPE
03	01	0A	TEL	OPTION ILLEGAL FOR DEVICES
03	01	0B	TEL	OPTION ILLEGAL FOR JOURNAL TAPE
03	01	0C	TEL	OPTION ILLEGAL FOR ANS LABELED TAPE
03	01	0D	TEL	OPTION LEGAL ONLY FOR DEVICES
03	01	0E	TEL	READ ACCOUNTS EXCEED 8 ENTRIES
03	01	0F	TEL	WRITE ACCOUNTS EXCEED 8 ENTRIES
03	01	10	TEL	EXECUTE ACCOUNTS EXCEED 8 ENTRIES
03	01	11	TEL	MAXIMUM NUMBER OF SN'S EXCEEDED
03	01	12	TEL	ON FILE ILLEGAL
03	01	13	TEL	START WHAT?
03	01	14	TEL	CONTINUE WHAT?
03	01	15	TEL	ILLEGAL DCB NAME
03	01	16	TEL	DONT WHAT?
03	02	00	TEL	BACKUP RECORD FULL, CAN'T ADD MORE
03	02	01	TEL	UNABLE TO GET PAGE FOR BACKUP RECORD
03	02	02	TEL	FILE DOES NOT EXIST
03	02	03	TEL	BACKUP FILE BUSY, TRY AGAIN LATER
03	02	04	TEL	FILE INELIGIBLE FOR BACKUP
03	02	05	TEL	BACKUP OF FILE ALREADY EXISTS
03	03	00	TEL	UNABLE TO GET COMMON PAGE FOR SHOW
03	04	00	TEL	NOTHING TO SAVE
03	04	01	TEL	CAN'T SAVE EXECUTE-ONLY PRGM, QUIT OR GO
03	04	02	TEL	NO SAVE FILE NAMED

260b

EVL

CP-V TECHNICAL MANUAL

Section VM  
Page 16  
9/1/78

GRP	ERR	SUR	MODULE	MESSAGE
03	04	03	TEL	GET FILE DOES NOT MATCH THIS SYSTEM VERSION
03	04	04	TEL	BAD GET FILE - INVALID LIMITS
03	04	05	TEL	BAD GET FILE - INVALID JIT
03	04	06	TEL	GET CAL FAILED - PROBABLY BAD DCBS
03	04	07	TEL	GET WHAT?
03	04	08	TEL	ERROR WRITING SAVE FILE - SAVE ABORTED
03	04	09	TEL	BAD GET FILE - M:CVM FAILURE DURING RESTORE
03	04	0A	TEL	CAN'T GET PAGE FOR RESTORE - GET ABORTED
03	05	00	TEL	:USERS FILE BUSY, TRY AGAIN LATER
03	05	01	TEL	UNABLE TO OPEN :USERS FILE, COMMAND ABORTED
03	05	02	TEL	ERROR READING :USERS FILE, COMMAND ABORTED
03	05	03	TEL	ERROR WRITING :USERS RECORD, COMMAND ABORTED
03	05	04	TEL	PASSWORD CHANGE SUCCESSFUL
03	05	05	TEL	PASSWORD SUPPLIED DOESN'T MATCH CURRENT PASSWORD
03	05	06	TEL	PASSWORD > 8 CHARS ILLEGAL
03	05	07	TEL	PASSWORD CHANGE REQUIRES ,OLD,NEW PASSWORDS
03	06	00	TEL	CAN'T DEBUG EXECUTE-ONLY PRGM, QUIT OR GO
03	07	00	TEL	TERMINAL TYPE NOT VALID
03	08	00	TEL	EXPANDED INPUT EXCEEDS 80 CHARS
03	08	01	TEL	ERROR, COMMAND EXCEEDS 80 CHARACTERS
03	09	00	TEL	COMPLETED
03	09	01	TEL	RUNNING
03	09	02	TEL	DOESN'T EXIST
03	09	03	TEL	WAITING: TO RUN
03	09	04	TEL	WAITING TO OUTPUT
03	0A	00	TEL	ID CANCELED
03	0A	01	TEL	NOT YOUR JOB
03	0A	02	TEL	COMPLETED OR NOT INPUT
03	0B	00	TEL	CAN'T CHANGE MORE THAN 6 PSEUDO SWITCHES
03	0C	01	TEL	TP NOT IN THIS SYSTEM
03	0C	02	TEL	TP IS NOT CURRENTLY ACTIVE
03	0C	03	TEL	LOGGING OFF TO FREE YOUR LINE FOR TP
03	0D	00	TEL	MESSAGE DISALLOWED BY DONT SEND
03	0E	00	TEL	COUPLE REJECTED FROM
03	0F	00	TEL	NO ROOM IN A/M FOR COMMAND FILE INFO.
03	0F	01	TEL	I/O ERR ON COMMAND FILE
03	0F	02	TEL	***XEQ TERMINATED***
03	0F	03	TEL	***XEQ FILE INTERRUPT***

260c

GRP	ERR	SUB	MODULE	MESSAGE
03	0F	04	TEL	COMMANDS FROM FILE MUST BEGIN WITH A BANG (!)
04	03	58	RUNNER	BAD DEBUG LOCATION NAME -
04	03	59	RUNNER	BAD IF/AND/OR TEST NAME -
04	03	5A	RUNNER	BAD SNAP FROM/TO NAME -
04	03	5B	RUNNER	BAD PMD FROM/TO NAME -
04	03	5C	RUNNER	BAD MODIFY NAME -
04	03	5D	RUNNER	
04	03	5E	RUNNER	0
04	03	5F	RUNNER	TOO MANY DEBUG COMMANDS
04	03	60	RUNNER	INVALID DEBUG RECORD TYPE
04	03	60	RUNNER	RUNNER RECEIVED ABOVE I/O ERROR READING LOAD MODULE WITH KEY=
04	03	61	RUNNER	1
04	03	62	RUNNER	RUNNER RECEIVED ABOVE I/O ERROR READING DEBUG FILE
04	03	63	RUNNER	BAD START ADDRESS NAME -
04	03	64	RUNNER	MODIFY LOCATION NOT WITHIN PROGRAM -
04	03	65	RUNNER	START ADDRESS NOT WITHIN PROGRAM -
04	03	66	RUNNER	BAD SEGMENT NAME IN DEBUG COMMAND -
04	03	67	RUNNER	CAN'T GET PAGE AFTER PURE-PROCEDURE FOR DEBUG AND CLOBBER TABLE
04	03	68	RUNNER	PMD FROM/TO ADDRESS NOT WITHIN USER AREA -
04	03	69	RUNNER	DEBUG LOCATION NOT WITHIN PROGRAM -
04	03	6A	RUNNER	SNAP FROM/TO ADDRESS NOT WITHIN USER AREA -
04	03	6B	RUNNER	8
04	03	6C	RUNNER	PMDS AND DEBUGS NOT ALLOWED FOR LOAD MODULES BUILT BY LINK
04	03	6D	RUNNER	NOT ENOUGH CORE TO PROCESS DEBUG COMMANDS
04	03	6E	RUNNER	MALFORMED LOAD MODULE HEAD OR TREE RECORD
06	00	00	DRSP	NO ERRORS
06	00	01	DRSP	INSUFFICIENT PRIVILEGE LEVEL TO PROCESS THIS COMMAND
06	00	02	DRSP	INSUFFICIENT MEMORY TO READ TREE
06	00	03	DRSP	DRSP PROGRAM ERROR (SHOULDN'T HAPPEN)
06	00	04	DRSP	PRONAME REQUIRED
06	00	05	DRSP	NO SUCH OVERLAY/PROCESSOR
06	00	06	DRSP	ILLEGAL COMMAND OPTION
06	00	07	DRSP	ILLEGAL FLAG COMBINATION
06	00	08	DRSP	DON'T SET FLAGS WITH MONITOR OVERLAY
06	00	09	DRSP	PROCESSOR/OVERLAY ALREADY EXISTS
06	00	0A	DRSP	DON'T USE COMMAND ON TEL/CCI
06	00	0B	DRSP	ILLEGAL PRONAME, NOT ;PNN FORMAT
06	00	0C	DRSP	CANNOT OPEN THE FID
06	00	0D	DRSP	FID IS NOT A LOAD MODULE

260d

269e

GRP	ERR	SUR	MODULE	MESSAGE
06	00	0E	DRSP	ONLY ONE LEVEL OF OVERLAYS FOR SHARED PROCESSORS
06	00	0F	DRSP	OVLY DATA EXCEEDS RANGE 8000-8BFF
06	00	10	DRSP	ONLY PROCEDURE IS ALLOWED IN A PROCESSOR OVERLAY
06	00	11	DRSP	NO PRONAME SLOTS AVAILABLE
06	00	12	DRSP	INSUFFICIENT OVERLAY SLOTS
06	00	13	DRSP	INSUFFICIENT SPACE ON SWAP RAD
06	00	14	DRSP	FILE STORAGE LIMIT IN SYSTEM ACCOUNT
06	00	15	DRSP	INSUFFICIENT VIRTUAL MEMORY TO EXECUTE DRSP
06	00	16	DRSP	INSUFFICIENT MEMORY TO READ MAX RECORD OF FID
06	00	17	DRSP	INSUFFICIENT PRIVILEGE FOR DRSP USAGE
06	00	18	DRSP	DRSP I/O ERR/ABN (CLOSE)
06	00	19	DRSP	DRSP I/O ERR/ABN (PERM)
06	00	1A	DRSP	ILLEGAL COMMAND
06	00	1B	DRSP	DRSP I/O ERROR IN READING COMMAND
06	00	1C	DRSP	DRSP M:EI ERROR (PERM)
06	00	1D	DRSP	ILLEGAL INDEX RANGE
06	00	1E	DRSP	ILLEGAL PROTECTION TYPE FOR PUBLIC LIBRARY
06	00	1F	DRSP	LM MUST BE ROOT ONLY, PROCEDURE ONLY
06	00	20	DRSP	PRONAME IS ILLEGAL
06	00	21	DRSP	MONITOR OVERLAY CANNOT HAVE OVERLAYS
06	00	22	DRSP	DRSP M:EI ERROR (WRITESWAP)
06	00	23	DRSP	PRONAME NOT FOUND ON RAD
06	00	24	DRSP	PRONAME FOUND ON RAD
06	00	25	DRSP	READ ERROR READING FID (COPY)
06	00	26	DRSP	WRITE ERROR WRITING FID (COPY)
06	00	28	DRSP	DRSP M:BO ERROR (PERM)
06	00	29	DRSP	CAN'T OPEN M:BO (PERM)
06	00	2A	DRSP	CAN'T MAKE PERM, NO RAD SLOTS
06	00	2B	DRSP	DRSP NOT FOUND IN PROCESSOR TABLES
06	00	30	DRSP	INCORRECT FID
06	00	31	DRSP	WRITE RAD FILE I/O ERRORS
06	00	32	DRSP	RAD OVERFLOW - DISK SPACE ALLOTTED FOR THE SHARED PROCS IS EXHAUSTED
06	00	34	DRSP	I/O ERROR WHILE WRITING PROCESSOR TO THE SWAP DISK
06	00	35	DRSP	ILLEGAL LMN (LOAD BIAS CHECK)
06	00	36	DRSP	ILLEGAL LOAD MODULE - POSSIBLY BAD BIAS OR CREATED BY LINK LOADER
06	00	39	DRSP	PROCESSOR OVERLAY SLOTS EXHAUSTED
06	00	3A	DRSP	VERSION OF MONSTK LOADED WITH DRSP NOT VALID FOR THIS SYSTEM
06	00	50	DRSP	BREAK 50

GRP	ERR	SUB	MODULE	MESSAGE
06	00	51	DRSP	BREAK 51
06	00	52	DRSP	BREAK 52
06	00	53	DRSP	BREAK 53
06	00	54	DRSP	BREAK 54
08	FF	00	ROOTSUBR	OPERATOR INITIATED RECOVERY
08	01	00	SCHED/MM	USERS PAGE CHAIN INCONSISTENT
08	02	00	SCHED	REPORTED EVENT INCONSISTENT WITH USER'S CURRENT STATE
08	04	04	SCHED	OPERATOR INITIATED SHUTDOWN
08	0A	00	TSIO/DPSIO	OPCODE IN SWAP COMMAND LIST IS INVALID
08	0B	00	TSIO/DPSIO	INCORRECT ORDER CODE IN SWAP COMMAND LIST
08	0C	00	TSIO/DPSIO	ATTEMPT MADE TO SWAP MONITORS MEMORY
08	0D	00	TSIO	HALT FLAGS MISSING IN SWAP COMMAND LIST
08	0E	00	TSIO	I/O REQUEST WITH NULL COMMAND LIST
08	0F	00	TSIO/DPSIO	INPUT FUNCTION CODE IS INVALID
08	10	00	COC/ECBBLK	COC-BAD COC BUF POOL, OR BAD BUF ADR ON RELEASE REQUEST
08	11	00	COC	COC-INVALID INTERNAL CONTROL CODE TRANSLATE REQUEST
08	12	00	COC	COC-BAD INPUT BUF LINKAGE ON RELEASE REQUEST
08	13	00	COC	COC-OUTPUT BUF LINKAGE OR CHARACTER COUNT BAD
08	14	00	THEUNCOC	COC ROUTINE WAS CALLED IN A NON-COC SYSTEM
08	14	01	THEUNCOC	COCIO CALLED IN A NON-COC SYSTEM
08	14	02	THEUNCOC	COCOFF CALLED IN A NON-COC SYSTEM
08	14	03	THEUNCOC	COCSENDX CALLED IN A NON-COC SYSTEM
08	14	04	THEUNCOC	ECHOCR2 CALLED IN A NON-COC SYSTEM
08	17	00	IOG	INVALID DISC ADDRESS PASSED FOR AN I/O OPERATION
08	19	00	BUFF	INVALID BUFFER ADDRESS PASSED FOR RELEASE
08	19	01	OPEN/CLOSE	TOO MANY CLIST ENTRIES IN MPOOL
08	1A	00	CLS	ACCOUNT DIRECTORY IS INACCESSIBLE
08	1B	00	SWAPPER	USERS PAGE CHAIN NON-ZERO AT SWAP COMPLETION
08	1C	00	SWAPPER	INSWAP PROCESSOR SIZE EXCEEDS CLIST SPACE
08	1D	00	T;OV	REQUESTED OVERLAY NUMBER IS OUT OF RANGE
08	1E	00	SCHED	SYSTEM REBOOTED WITHOUT A PROPER SHUTDOWN
08	1F	00	SWAPPER	NOT ENOUGH PAGES TO PERFORM THIS SWAP
08	21	00	MM	ATTEMPT TO SET ACCESS ON AN NON-EXISTENT VIRTUAL PAGE
08	22	00	TYPR	PRIVATE VOLUME ALLOCATION ERROR
08	23	00	CSEHAND	INVALID ENTRY TO CSE HANDLERS
08	24	00	CSEHAND	INSTRUCTION EXCEPTION TRAP IN MASTER MODE
08	25	00	CSEHAND	UNRECOVERABLE WATCHDOG TIMER TRAP
08	26	00	CSEHAND	CSE TRAP DURING MFI, PFI HANDLING

260f

Section VM  
Page 20  
9/1/78

CP-V TECHNICAL MANUAL

GRP	ERR	SUB	MODULE	MESSAGE
08	27	00	CSEHAND	PROCESSOR FAULT INTERRUPT
08	28	00	CSEHAND	MEMORY PARITY ERROR - MEMORY ALTERED
08	29	00	CSEHAND	TRAP 4C - BUS CHECK FAULT
08	29	01	CSEHAND	TRAP 4C - MAP PARITY ERROR
08	29	02	CSEHAND	TRAP 4C - REGISTER BLOCK PARITY ERROR
08	29	03	CSEHAND	TRAP 4C - WRITE LOCK REGISTER PARITY ERROR
08	2C	00	ADD	BATCH SCHEDULING ERROR - MBS/CCI ERROR
08	2D	00	COOP	COOPERATIVE BUFFER MANAGEMENT ERROR
08	2D	01	COOP	SYMBIONT/COOP FILE DEVICE INACCESSIBLE
08	2D	02	COOP	USERS COOP CONTEXT BLOCK CHAIN LOST
08	2D	03	SACT	COOP CONTEXT BLOCK POINTERS CLOBBERED
08	2D	04	SUPCLS	COOP DATA BUFFERS MISALLOCATED.
08	2E	00	RDF	POOL BUFFERS LOST - NONE ALLOCATED CURRENTLY
08	2E	01	RA	INCONSISTENCY IN READ-AHEAD TABLES
08	30	00	PFSR	UNBALANCED POWER ON/OFF INTERRUPT PAIRS
08	31	00	IORT	INVALID RESOURCE TYPE
08	32	00	IOQ	DCB DOESNT CONTAIN A VALID DCT INDEX
08	34	00	TPQ1	TRANSACTION PROCESSING FAILURE
08	37	00	ENQUE	ENQ/DEQ TABLES MALFORMED
08	38	00	COOP	SYMBIONT DEVICE IS DOWN
08	41	01	RTROOT	FAILED TO FIND USER'S STATE (M;INTSTAT)
08	41	10	RTROOT	ERROR RETURN FROM NEWQNW ON M;IOEX CALL
08	41	11	RTNR	UNABLE TO RE-START SYSTEM I/O VIA M;STARTIO REQUEST
08	43	01	CLOCK4	NO ICBS CHAINED INTO RTICBCLKHDR
08	43	02	CLOCK4	ICBCLK FIELD OF ICB NEGATIVE
08	43	03	CLOCK4/RTNR	NO BACK-LINK FOUND IN DE-CHAINED ICB
08	46	21	PV	PRIVATE VOLUME LOGIC INCONSISTENCY
08	49	00	TYPR	RESOURCE PRE-ALLOCATION INCONSISTENT WITH REQUESTS
08	56	00	MOCIOP	UNABLE TO RELEASE ASSIGNED PHYSICAL WORK PAGE
08	60	00	TEL	USER ALREADY HAS SBUF1 AT ENTRY FOR TEL
08	60	01	TEL	TEL FAILED TO GET SBUF2 FOR READING ASSIGN/MERGE RECORD
08	60	02	TEL	TEL FAILED TO GET SBUF2 FOR A GET
08	60	03	TEL	ASSIGN/MERGE RECORD INCONSISTENT WITH USER IN COMMAND FILE MODE
08	60	04	TEL	USER'S MAP DIRTY FROM A PREVIOUS M;CVM CAL
08	61	00	INITRCVR	TEL OR CCI HAS TRAPPED
08	61	40	INITRCVR	TEL/CCI SUFFERED A TRAP 40
08	61	42	INITRCVR	TEL/CCI COMMITTED A STACK TRAP
08	62	00	SCHED	USER PROGRAM TOO LARGE FOR PHYSICAL MEMORY

2608

GRP	ERR	SUB	MODULE	MESSAGE
08	63	00	DPSIO	INSUFFICIENT INFORMATION AVAILABLE TO SWAP THIS USER
08	6A	00	MM	ATTEMPT TO RELEASE VIA M3CVM FROM USER W/O PROPER PRIVILEGE
08	6B	00	SWAPPER	ERROR IN SPARE BUFFER TABLES
08	78	00	MPSUB/SMON	SECONDARY CPU INVOKED CRASH
08	78	01	ENTRY	SLAVE CPU TRAPPED WITH NO USER ASSOCIATED
08	78	7F	SCHDSUB	SECONDARY CPU CRASH ATTEMPT IN NON-MP SYSTEM
08	79	00	ENTRY	MONITOR COMMITTED A STACK TRAP
08	79	01	T:OV	OSTACK OVERFLOW OCCURRED
08	79	02	SSSIM	SIMULATORS CAUSED TSTACK OVERFLOW
08	7C	00	ALTCP	ALTCP CALLED TO SERVICE A CAL THAT DOESN'T BELONG TO ALTCP
08	7E	00	INITRCVR	MONITOR HAS SUFFERED A TRAP 40
08	7E	40	INITRCVR	MONITOR HAS TRAPPED
08	7E	41	INITRCVR	MONITOR HAS TRAPPED
08	87	00	ALLOCAT	ALLOCATION BUFFERS CONTAIN INVALID WORD COUNT
08	88	00	SCHED	ALLOCAT CLOBBERED ONE OF THE ALLOCATION BUFFERS
08	89	00	ALLOCAT	ALLOCATS HGP CHAIN CLOBBERED
08	89	10	ALLOCAT	DATA CHECKSUM ERROR
08	93	00	TSIO/DPSIO	TVD ADDRESS DOESNT POINT TO THE COMMAND LIST
08	94	00	TSIO/DPSIO	COMMAND LIST CLOBBERED DURING WRITE-CHECK
08	95	00	TSIO/DPSIO	UNRECOVERABLE I/O ERROR READING USER'S JIT
08	96	00	TSIO/DPSIO	UNRECOVERABLE I/O ERROR READING SHARED PROCESSOR
08	C0	C0	COC	ESC-ETB SNAPSHOT OF RUNNING MONITOR

260h

CP-V TECHNICAL MANUAL

Section VM  
Page 22  
9/1/78



DATA BASES

:USER File Record Format


Each 126 word record in the logon file, called :USERS, corresponds to an authorized user. Whenever an on-line or batch user attempts to use the system, the :USERS file is checked to determine if there is a corresponding record. If not, he is denied access to the system, if there is a record associated with that user and if he has logged on with the correct password (if any), he may access the system.

Each record in the :USERS file contains a profile of a user authorization for use of various system resources - such as number of spindles, tape drives, core space RAD and DISK space, etc. At log on time, these various items are placed into corresponding fields in JIT and/or Assign-Merge Table so that information about the user is readily accessible. Controls can then be duly exerted by the monitor. The :USERS file is accessed by SUPER, TEL, CCI, and LOGON.

Word	0					Account
	1					
	2					
	3					
	4					Name
	5	0		27 28 29 30 31 MC XO RP SF		
	6					Flag Bits
	7					
	8					Password
	9					
	10					Password
	11					
	12	Count				Account
	13					
	14					
	15	Batch billing	on-line billing	ghost billing		
	16	Batch privilege	on-line privilege	ghost privilege		Auto-Call Processor
	17					
	18	Accumulated Permanent RAD Space *				Name (TEXTC format)
	19					
	20	Default Reten. Per.	Max. Reten. Period			
	21					
	22	Accumulated Permanent DISK Space *				
	23					
	24	Extended Accounting				
	25	Information				
	26	(6 words)				
	27					
	28					
	29					

UB:BILL  
UB:PRIV

\*Updated by LOG-OFF

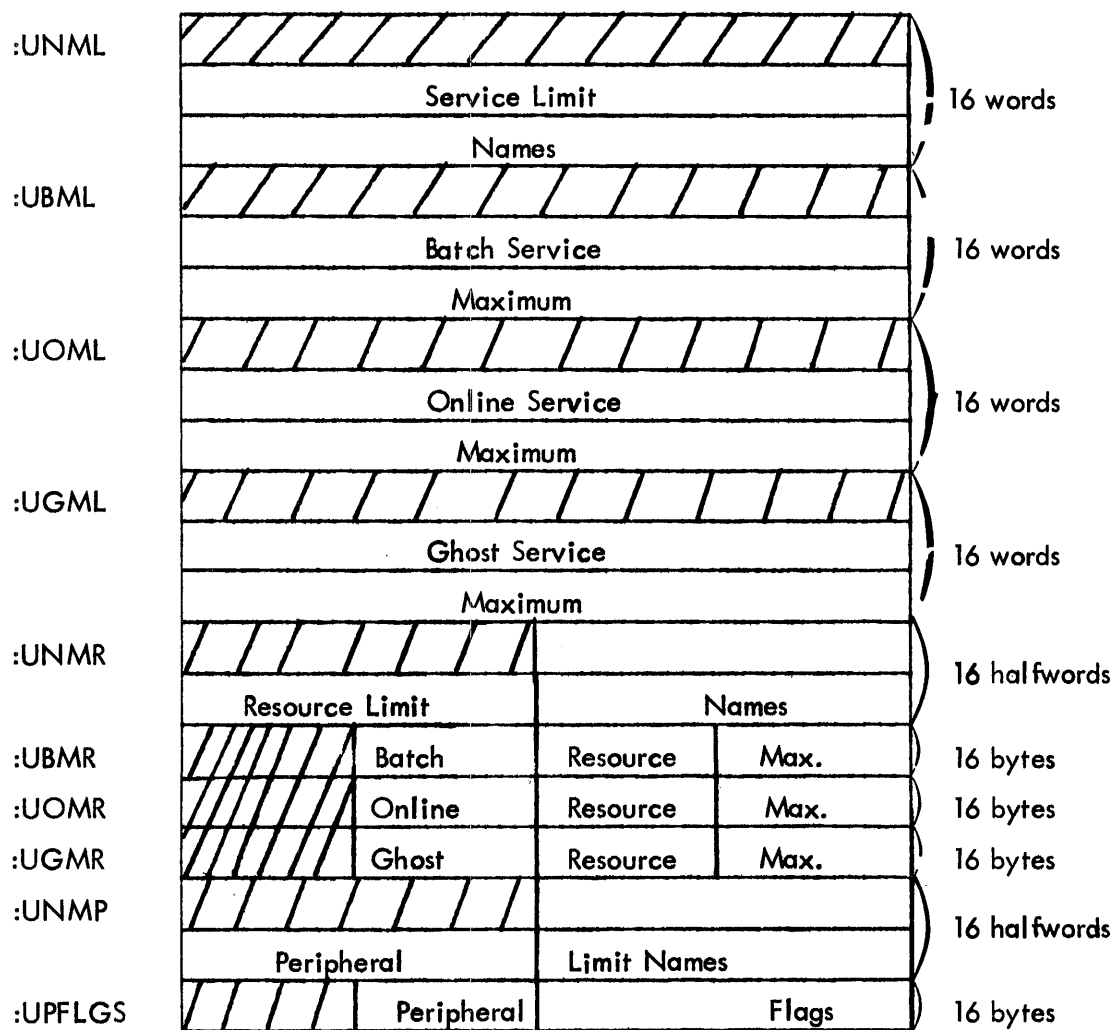

Contents of Users File Record

Name	Description
Account	EBCDIC. Account under which the user is authorized to log in. Value may be 1 to 8 characters in length and is left-justified with trailing blanks.
Name	EBCDIC. Name under which the user is authorized to log in. Value may be 1 to 12 characters in length and is left-justified with trailing blanks.
All	Bit 0 Default read access for user, 0 indicates ALL; 1 indicates NONE.
MC	Word 5, bit 27. Set if user has the MC (Maintenance Console) specified as a resource. Used for internal use by SUPER.
XO	Word 5, bit 28. Set if user may execute processors from :SYS account <u>only</u> . Default = 0.
RP	Word 5, bit 29. Set if user has one or more entries in the :PROCS file specifying this user is allowed/disallowed to execute.
SE	Word 5, bit 30. Set if security check of granule and core cleaning is required.
Password	EBCDIC. Password assigned to this name-account. The contents of the field is the latest value entered by the user himself with a TEL PASSWORD command, or by SUPER via the PASSWORD option of a CREATE or MODIFY command. Value may be 1 to 8 characters in length and is left-justified with trailing blanks. If no password has been specified, these words contain zeroes.

Auto-Call	EBCDIC. Password of LMN to be automatically connected to the user's job when he logs on. Value may be 1 to 8 characters in length and is left-justified* with trailing blanks. If no auto-call LMN has been specified, auto-call password contains zeroes.																		
Auto-Call account	EBCDIC. Account in which resides the LMN to be automatically connected to the user's job when he logs in. Value may be 1 to 8 characters in length and is left-justified with trailing blanks. The value for system processors is ":SYS". If no auto-call LMN has been specified, these words contain zeroes.																		
Auto-call name	EBCDIC. Name of LMN to be automatically connected to the user's job when he logs in. The value is in TEXTC format, may be 1 to 11 characters in length, and is left-justified with trailing blanks; the first byte contains a count. If no auto-call LMN has been specified, these words contain zeroes.																		
Billing	Binary. Charge class level referencing a charge class table in the RATE file which is used in account processing. The halfword value must lie in the range:  $0 \leq \text{charge class} < 7$																		
Privilege	Binary. Privilege level granted the user. The higher privilege codes include the lower privilege. The range of the privilege codes is X'0' to X'FF'. The currently meaningful codes are as follows:  <table border="1" data-bbox="743 1457 1409 1990"> <thead> <tr> <th><u>hex code</u></th> <th><u>typical use</u></th> <th><u>facilities allowed</u></th> </tr> </thead> <tbody> <tr> <td>C0.</td> <td>systems programmer</td> <td>Issue M:SYS CAL Bypass file security checks.</td> </tr> <tr> <td>B0</td> <td>systems programmer</td> <td>Access and change monitor</td> </tr> <tr> <td>A0</td> <td>diagnostic programs</td> <td>Read and write error file; request devices; invoke diagnostics.</td> </tr> <tr> <td>80</td> <td>performance displays</td> <td>Examine monitor</td> </tr> <tr> <td>40</td> <td>normal programs (online and batch)</td> <td>Default privilege level</td> </tr> </tbody> </table>	<u>hex code</u>	<u>typical use</u>	<u>facilities allowed</u>	C0.	systems programmer	Issue M:SYS CAL Bypass file security checks.	B0	systems programmer	Access and change monitor	A0	diagnostic programs	Read and write error file; request devices; invoke diagnostics.	80	performance displays	Examine monitor	40	normal programs (online and batch)	Default privilege level
<u>hex code</u>	<u>typical use</u>	<u>facilities allowed</u>																	
C0.	systems programmer	Issue M:SYS CAL Bypass file security checks.																	
B0	systems programmer	Access and change monitor																	
A0	diagnostic programs	Read and write error file; request devices; invoke diagnostics.																	
80	performance displays	Examine monitor																	
40	normal programs (online and batch)	Default privilege level																	

Maximum Retention	Binary. Hours of maximum retention period for files created by the user. A zero means the system default value and X'FFFF' means the files are to be retained indefinitely.
Accumulated Permanent DISK Space	Binary. Permanent DISK storage accumulated by the user. This field is not modified by SUPER.
Accumulated Permanent RAD Space	Binary. Permanent RAD storage accumulated by the user. This field is not modified by SUPER.
Extended Accounting Information	EBCDIC. This field specifies installation specific accounting information. A maximum of 24 characters is allowed. The character ; is not allowed.
Service Limit	0-15 four character service limit names. This table gives the services for which the maximum values are given in the next three tables.
Batch, Online and Ghost Service Maximum	Three parallel tables of 0-15 full word binary values associated with the service limit names. One table each for batch, online and ghost operation in this account.
Resource Limit Names	0-15 two character resource limit names. This table gives the resources for which maximum usage values are given in the next three tables.
Batch, Online and Ghost Resource Maximum	Three parallel tables of 0-15 byte binary values associated with the resource limit names. One table each for batch, online and ghost operation.

<p>Default Retention Period</p>	<p>Binary. Hours of retention period for files created by the user. A zero means the system default value and X'FFFF' means the files are to be retained indefinitely.</p>								
<p>Peripheral Limit Names</p>	<p>0-15 two character peripheral device limit names. This table contains the peripheral device names for which use authorization flags are given in the next table.</p>								
<p>Peripheral Flags</p>	<p>A table of 0-15 bytes parallel to peripheral limit names each byte has the form:</p> <div style="text-align: center;"> <table border="1" data-bbox="847 905 1240 961"> <tr> <td>0</td><td>1</td><td>2</td><td>3</td><td>4</td><td>5</td><td>6</td><td>7</td> </tr> </table> <div style="margin-left: 100px;"> <p>└──┬── ghost</p> <p>└──┬── online</p> <p>└──┬── batch</p> </div> </div> <p>A bit value of one means that authorization to use the device is granted.</p>	0	1	2	3	4	5	6	7
0	1	2	3	4	5	6	7		

Job Accounting Record

The following Figure shows the additional structure of the job accounting record. Words 0-37 remain unchanged with respect to previous versions except that the field marked "scratch tapes" in word 32 is now unused.

Four words have been appended to the record, words 38-41 and contain the resource allocation values: the number allocated for batch jobs (regardless of whether or not they were actually used), and, for on-line and ghost jobs it is the number in use at time of logoff. Byte zero of word 38 contains flags which indicate the condition under which the accounting record was generated. The start and end time may be optionally expressed in seconds from midnight by the installation's setting of bits 31 of S:OPTION in the Monitor Root.



0	Account			
2	Name			
5	Extended Accounting			
11	Charge Units			
12	Line Number	Priority	Final Run Status	Job Steps
13	Job Origin	System Version		
14	Start Date			
15	Start Time			
16	End Time			
17	Console Interactions			
18	Finish Date			
19	SYSID		Pack Mounts	Spindles
20	Cards Read		Cards Punched	
21	Processor Pages		User Pages	
22	Diagnostic Pages		Tape Mounts	Tape Drives
23	Tape Accesses			
24	RAD Accesses			
25	Disk Accesses			
26	I/O CALS			
27	Permanent RAD Granules			
28	Permanent Disk Granules			
29	Core Usage			
30	Processor Execution Time			
31	Processor Service Time			
32	Maximum Core Size	Partition	Save Tapes	Search Tapes
33	User Execution Time			
34	User Service Time			
35	Peak Temporary RAD Granules			
36	Peak Temporary Disk Granules			
37	Billing Rate			
38	Flags	Resource Allocation Values		
39				
40				
41				

Name	Description
Account	Account number of the user as specified on the job card or log-on message.
Name	Name of the user as specified on the job card or log-on message.
Extended Accounting	Installation-defined accounting information as specified on the job card or log-on message.
Charge Units	Accumulated charge units calculated for the user through use of the rates table.
Line Number	Line number (Data Set Controller Subchannel) to which the user connected. Line Number is set to X'FF' if entry is for a batch job.
Priority	Priority specified on the job card. Unused if entry is for a terminal session.
Final Run Status	<p>Run status at the completion of the job (an eight bit field).</p> <p>X'00' - Job exited normally.</p> <p>X'01' - Job aborted, illegal trap.</p> <p>X'02' - Job aborted, I/O error.</p> <p>X'04' - Job aborted, limit exceeded.</p> <p>X'08' - Reserved for CHKPT.</p> <p>X'10' - Job aborted, 'X' key-in.</p> <p>X'20' - Last job step errored, 'E' key-in.</p> <p>X'40' - Job aborted, M:xxx.</p> <p>X'80' - Last job step errored, M:ERR.</p>
Job Steps	Total number of job steps if batch; total number of subsystem operations if on-line.
Job Origin	<p>Origin of batch job.</p> <p>0 - From local card reader</p> <p>1 - From on-line terminal</p> <p>2 - Reserved for remote batch</p>
System Version	Version of operating system (from cell X'2B') in EBCDIC.
Start Date	Date at job or terminal session start, where the left halfword is the year and the right halfword is the day. Year is a binary value; e. g., 1970 is represented as X'7B2'. Day is the Julian day of the year represented in binary; e. g., September 14 is represented as X'101'.
Start Time	Time of day at start of job or terminal session in minutes from midnight. The value is expressed in binary.
End Time	Time of day at end of job or terminal session. Expressed in the same format as start time.
Console Interactions	Number of interactions during the course of a terminal session (zero for batch).

Name	Description
Finish Date	Date at job or terminal session finish. The format is the same as for Start Date.
Sysid	ID assigned to user job or session.
Pack Mounts	Number of disk packs mounted.
Spindles	Maximum number of disk pack spindles allocated to batch.
Cards Read	Number of cards read, including the job card and any EOD cards, but no FIN cards.
Cards Punched	Number of cards punched, including ID card, JOB card, BIN cards and EOD cards, but not blank cards inserted by the punch symbiont between jobs. If no punched output is produced by the job, the ID and JOB cards are suppressed and the punched card count is reduced to zero.
Processor Pages	Number of pages of printed output generated by shared processors, plus two ID pages at the beginning of the job and the accounting page at the end.
User Pages	The number of pages of printed output generated by user programs only.
Diagnostic Pages	The number of pages of all output to a symbiont file through the M:DO DCB, including core dump snaps and debug output. However, output is not counted if it goes to a user file, even though it goes via M:DO.
Tape Mounts	Number of tapes mounted unless premounted by the operator.
Tape Drives	Maximum number of tape drives allocated to batch.
Tape Accesses RAD Accesses Disk Accesses	Number of read, write, and file positioning accesses on the specified device, but not seek accesses since these are considered part of a read or write. A chargeable access is actually a request to a queue.
I/O CALs	Number of CALI, 1 operations performed.
Permanent RAD Granules	Net change in accumulated RAD storage. This is a signed binary value.
Permanent Disk Granules	Net change in accumulated public disk pack storage. This is a signed binary value.
Core Usage	Product of CPU time times core size in pages (ticks <sup>†</sup> x pages). Includes all core usage by job.
Processor Execution Time	CPU time spent in shared processors in the slave mode, expressed in ticks. <sup>†</sup>
Maximum Core Size	Peak value of core reached, expressed as the number of pages. Does not include shared processors or context.
Partition	Partition number under which the job ran (zero if terminal session).
Save Tapes	Number of save tapes used.
User Execution Time	CPU time spent in other than shared processors expressed in ticks. <sup>†</sup>
User Service Time	Monitor service time spent for other than shared processors expressed in ticks. <sup>†</sup>
Peak Temporary RAD Granules	Peak value of temporary RAD granules used.
Peak Temporary Disk Granules	Peak value of temporary public disk pack granules used.
Billing Rate	Charge class used for accounting for this user. The value is obtained from the user's log-on record and is in the range 0 to 7.

<sup>†</sup>One tick equals two milliseconds.

## Contents of Accounting Record (cont.)

Name	Description
Flags	<p>Indicate condition under which accounting record was generated</p> <ul style="list-style-type: none"><li>0 = Normal</li><li>1 = Recovery condition</li><li>2 = Assign-Merge record error</li><li>3 = Recovery-but missing or bad A/M record</li></ul>
Resource Allocation	<p>15 byte table containing the number of resources of each type allocated. For batch jobs it is the number allocated (regardless of whether or not they were actually used). For online or ghost jobs it is the number of resources in use at time of log off.</p>

RATE RECORD FORMAT

0		8	Charge class pointer for charge classes zero through seven. Values are relative pointers to the following rate tables.	
1		16		
2		8		
3		8		
4		8		
5		8		
6		8		
7		8		
8		6	Batch rate table	
9		1		CPU time X core size
10		0		Terminal Interactions
11	1000			I/O CALs
12	0			Console minutes
13	100000			Tapes and packs mounted
14	10000			Page - day storage
15	2000			Peripheral I/O cards + pages
16		6	On-Line rate table	
17		1		CPU time X core size
18	1000			Terminal Interactions
19	1000			I/O CALs
20	200			Console minutes
21	100000			Tapes and packs mounted
22	10000			Page - day storage
23	2000			Peripheral I/O cards + pages

ID

:RBLOG - Remote Batch Logon File

PURPOSE

Each record except the ID record in the remote batch logon file, called :RBLOG, corresponds to an authorized work station. Whenever a user tries to log a work station onto the system via the !RBID command, or uses a work station name on a JOB card, the :RBLOG file is checked to determine if there is a corresponding record. If not, access to the system is denied; if there is a record associated with that work station name, the system may be accessed. The :RBLOG file is accessed by SUPER, RBBAT, and LDEV.

:RBLOG File Record Format

The remote batch ID record (RBID), which is written with the key '...', contains a chain of used RBIDs and a chain of free RBIDs.

The record written with a key of '////' contains the list of WSNs indexed by RBIDs.

The records keyed by WSN are described in three formats:

1. Record layout with associated SUPER internal labels.
2. Record elements keyed to the SUPER internal labels.
3. A bit by bit breakdown of the three flag word formats used in the :RBLOG record.

INTERNAL LABEL	RECORD INDEX	FORMAT/CONTENT				
		0	8	16	24	
RB:RBID	0	RBID				
R:FLAG	1	Flag Bits				
RD:WSN	2	Work station name in text				
	3	1-8 characters				
RB:RP	4	Max. Priority				
R:BUF	5	Buff				
RD:RWSN	6	Remote work station name in text				
	7	(1-8 characters)				
RB:DSM	8	DSM		RMT Number (slave)		
R:RMT						
R:INRCB	9				OC Input RCB	
R:HSX	10	Highest device (stream index)				
R:OUTRCB	11				SMD output RCB	
RH:DEV	12	Device name table 16 HW Text				
	19					8 words
RB:RCB	20	RCB table - 16 bytes				
	23					4 words
RH:F1	24	FLAG 1 Table - 16 HW				
	31					8 words
RH:F2	32	FLAG 2 Table - 16 HW				
	39					8 words
RH:SUS	40	SUSBIT Table - 16 HW				
	47					8 words
RB:MAX	48	Maximum Record Count Table 16 bytes				
	51					4 words
RB:MIN	52	Minimum record Count Table 16 bytes				
	55					4 words
RB:PRIV	56	Privilege Table 16 Bytes				
	59					4 words
RB:TYPX	60	Type Index Table for DC Option 16 Byte.				
	63					4 words
RD:GHOST	64	TEXT GHOST NAME				
	65					2 words
	66	Reserved for future use				
	79					14 words

\*These are nine parallel table of 16 elements each, indexed by device.

Internal Label	Min. Value	Max. Value	Default Value	Data Type	Associated Super Option	Note
R:RBID	0	X'FF'		hex		Assigned by Super
R:FLAG					Type Master/Slave X1/N/ X2/N2 SYS/NSYS	description of R:FLAG follows
RD:WSN				Text 1-8 char.	W	Specified by user when creating new work station
RB:RP	0	X'F'	X'7'	hex	RP	
R:BUFF	1	FF	1	flag	MRB	MRB→FF NMRB→1
RD:WSN				text 1-8 char.	RWSN	
RB:DSM	0	X'FF'	0	hex	DSM	
R:RMT				text 2 char	RMT	
R:INRCB	0	X'FF'	0	hex	IRCB	
R:HSX	0	X'F'			DEV DD	Maintained by SUPER, Indicates the number of devices in record minus 1.
R:OUTRCB					SMD/NSMD	Only one allowed per work station
RH:DEV				Text 2 char.	DEV DD	
RB:RCB	1	X'FF'	must be specified	hex	RCB	



Internal Label	Min. Value	Max. Value	Default Value	Data Type	Associated Super Option	Note
RH:F1					CTL/NCTL SRCB IN/OUT DEV:CC	description of RH:F1 follows
RH:F2					DEV=OC DIR/NDIR LIST SRCB IN/OUT BIN/NBIN	description of RH:F2 follows
RH:SUS	0	X'FFFF'	0	hex	SUS	
RB:MAX	1	255	80 *	decimal	MAX, CP2, LP2	
RB:MIN	1	255	1	decimal	MIN, LPP	
RB:PRIV	0	X'FF'	40	hex	PRIV	
RB:TYPX	0	TYPMNES2	0		DC	Only symb. device types legal
RD:GHOST			0	Text C	GHOST	

\* For listing devices, defaults are: Max 132  
Min 38 (lines per page)

FLAG NAME	BIT NUMBER (0 - 31 )	SET	RESET
R:FLAG (word)	6	TYPE= IRBT	TYPE=7670 or 2780
	7	SIGMA is in SLAVE mode	in MASTER mode
	9	X1 specified	not X1
	10	TYP = 2780	TYPE = IRBT or 7670
	19	SYS specified	NSYS
	24	X2 specified	Not X2
	30	EM specified	NEM
	(remaining bits currently unspecified)		
RH:F1	0	IN and NCTL or OUT and DEV ≠ OC	IN and CTL or OUT and DEV = OC
	12	SRCB=C	not C
	13	SRCB=P	not P
	14	DEV=OC	DEV≠ OC
	15	IN	OUT
RH:F2 (HW)	0	DEV=OC	DEV ≠ OC
	1	DIR	NDIR
	2	LIST=P	LIST≠ P
	3	LIST= S	≠ S
	5	SRCB = U	≠ U
	6	SRCB = C *	≠ C * C + P = X
	7	SRCB = P	≠ P
	9	LIST = Y	
		LIST = S	
	10	IN	OUT
	11	OUT	IN
	12	BIN	NBIN
	15	LIST = Y	
		LIST = S	

DESCRIPTION OF :RBLOG FLAG WORDS

Note regarding bit values relative to LIST option in RH:F2

	BIT	2	3	9	15
LIST= N		0	0	0	0
P		1	0	0	0
Y		0	0	1	1
S		0	1	1	1

CP-V TECHNICAL MANUAL

Structure of the RBID Record

Word 0	HOF	0	TOU	HOU
1	1	2	3	4
2	5	6	7	8
3				
.				
.				
64	253	254	255	0

- HOF = Head of Free (initially 1)
- TOU = Tail of Used (initially 0)
- HOU = Head of Used (initially 0)

Values in words 1 - 64 are changed as work stations are authorized or deleted.

:PROCS File

The setting of the RP bit in the :USERS record (word 5, bit 27) indicates the presence of a record for that user in the :PROCS file. The :PROCS file is a keyed file, keyed by the concatenated user account and name identically to the :USERS file.


The data record will be of variable size up to a full granule (512 words). The first word of the record is reserved for flag bits and a count. The count is in the high order halfword's bits 1 - 7. The low order halfword contains an index to the next free byte in the record.

Bit 0, called PM, indicates the mode of the processor list. PM = 1 indicates that the list is a list of processors which are not allowed for this user. All processors not listed are allowed. When the PM bit is reset, each entry indicates a processor which is allowed in the specified mode (s), all others being disallowed.

(NOTE: The effectiveness of the :PROCS restrictions on executing processors is dependent upon execute only access on these processors so that the user cannot copy them.)


The remainder of the :PROCS record contains variable length items of the form:

Word 0

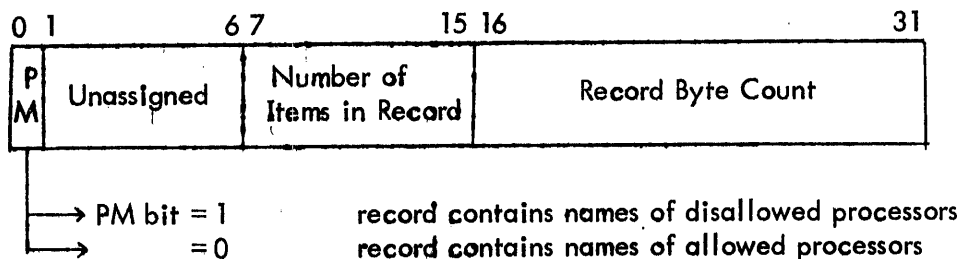


CP-V TECHNICAL MANUAL

The remainder of the :PROCS record contains variable length items of the form:

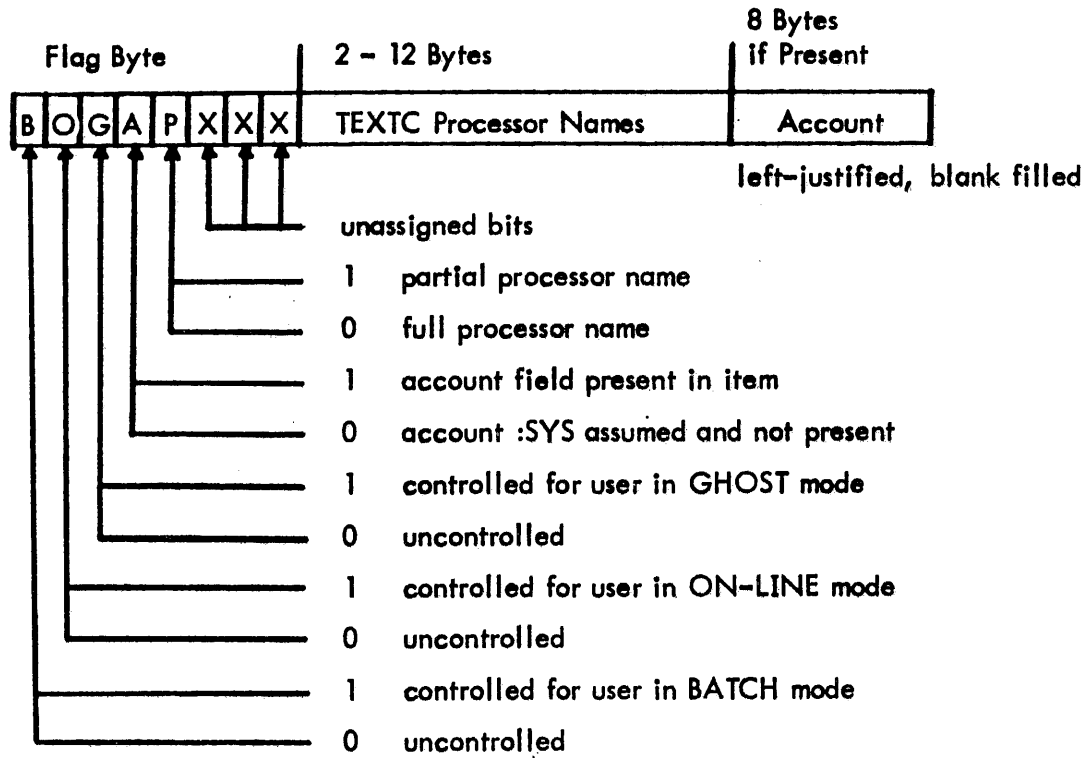


The minimum item size is 3 bytes, the maximum, 21 bytes. There is room in the record for 97 maximum size or 200 'ordinary' sized items.

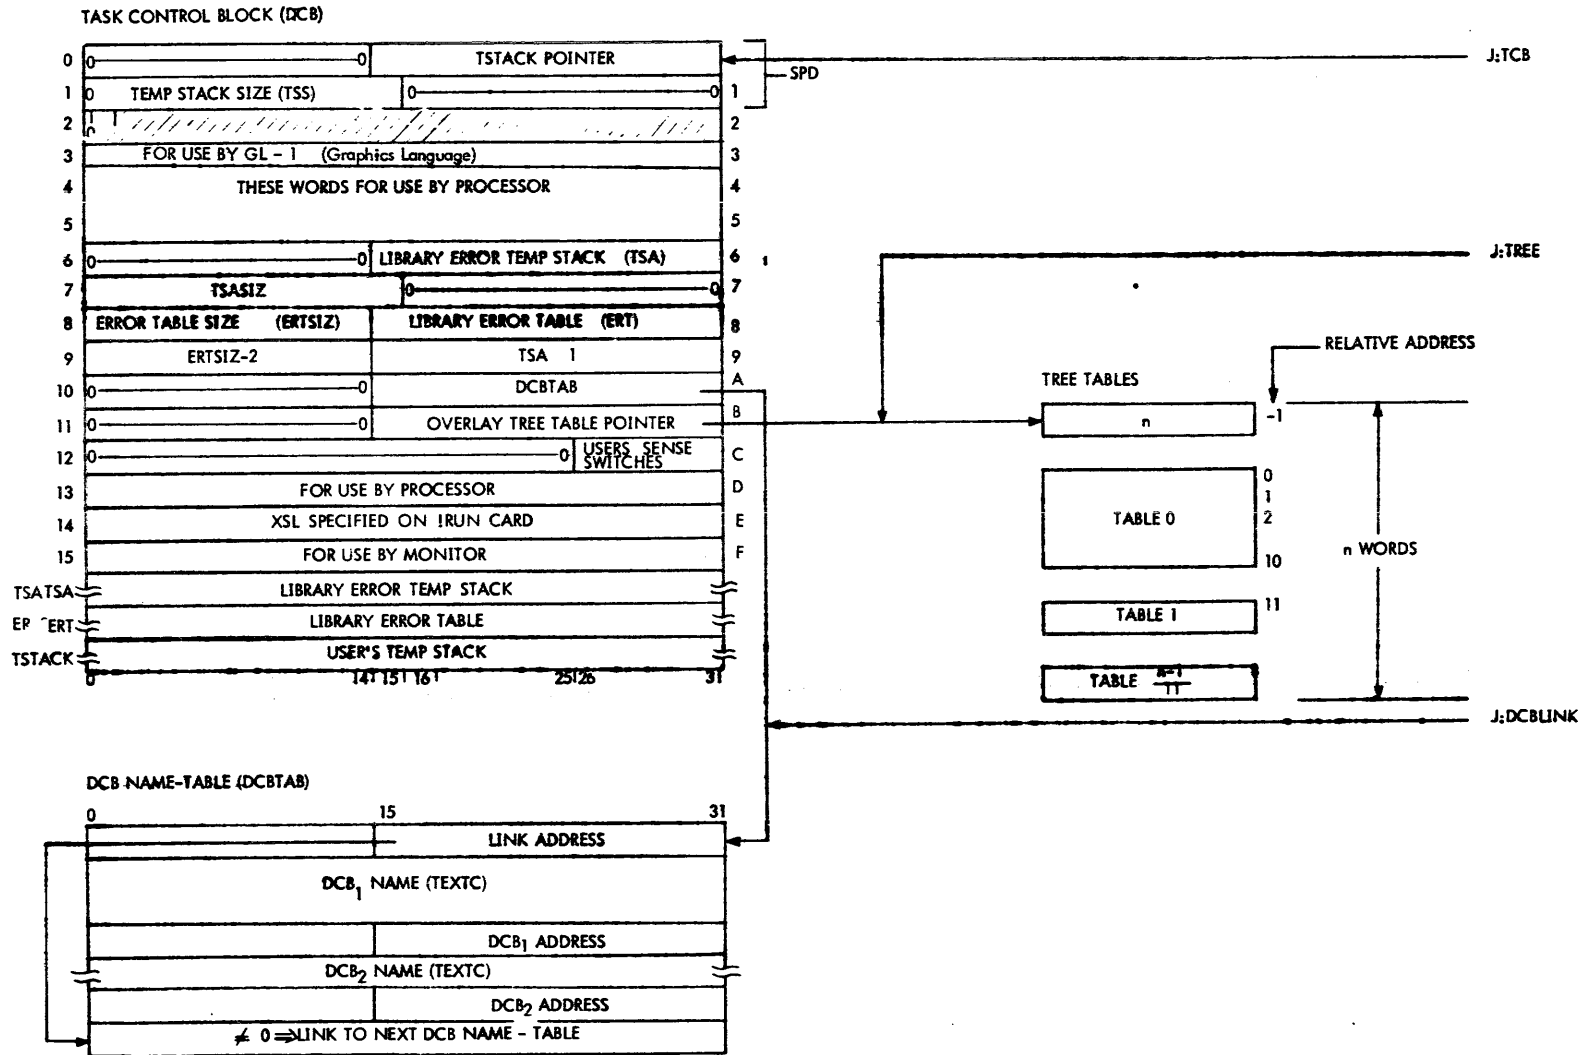


200

Overlay Loader-Built Load Module Layout at Run Time

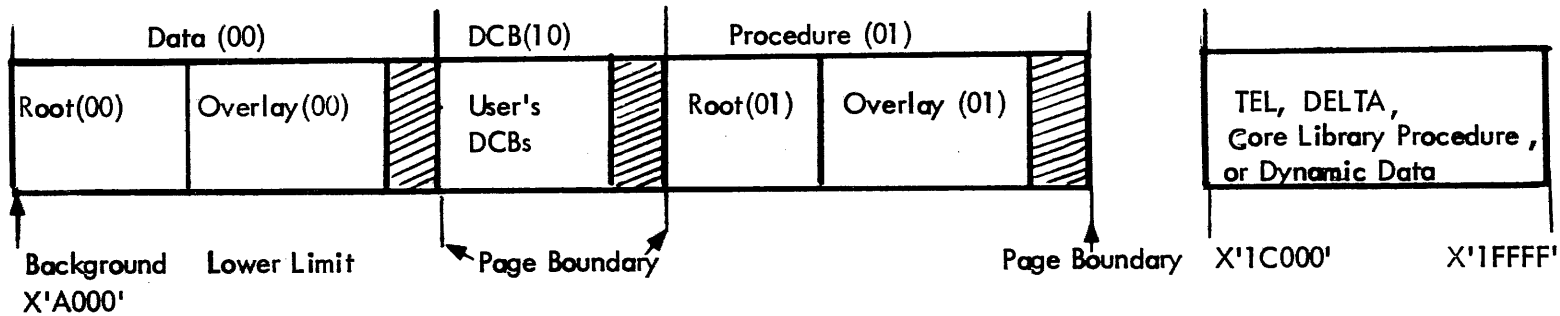


Detail of Root

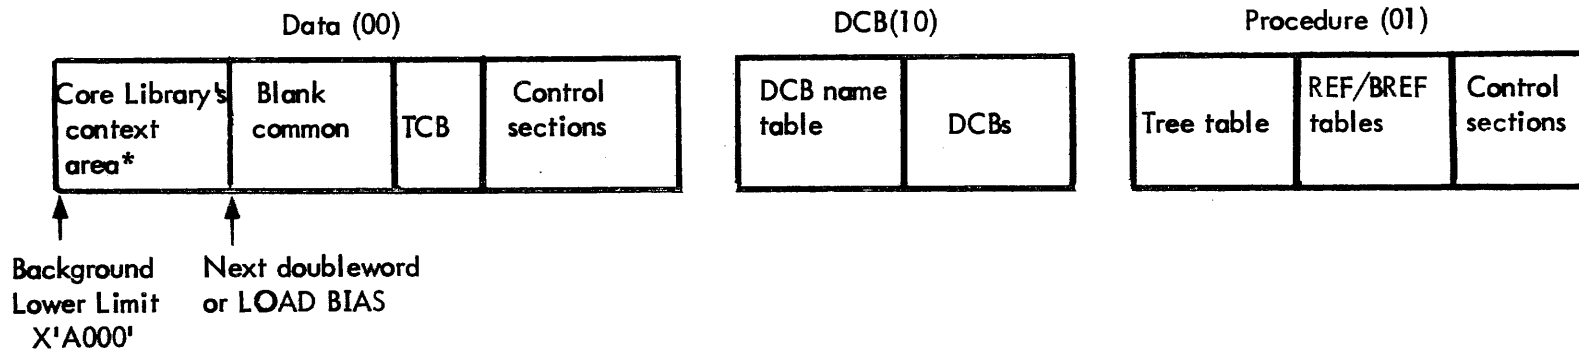

284

LINK-Built Load Module Layout at Run Time

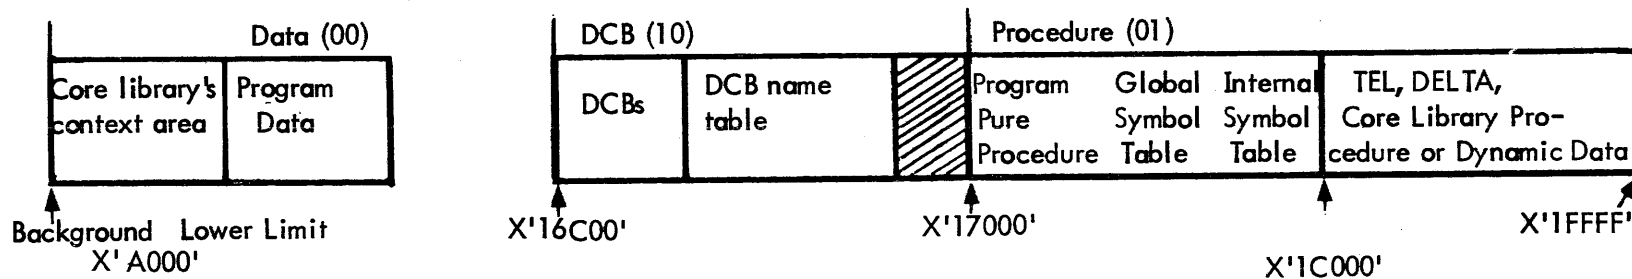

\*Allocated by Loader and initialized at run time by core library procedure routines.



CP-V TECHNICAL MANUAL

Load Modules, Overall Format

A load module is a keyed file whose name was supplied to the Overlay Loader or LINK (default = idL). The keys and records are as follows:

Record

0	8X	00	FF	n
1	A   B   SL	⋮   ⋮   ⋮   ⋮	START address	
2	TCB*		Module Bias*	
3	DATA Size*		DATA (00) Base*	
4	PROCEDURE SIZE *		PROCEDURE (01) Base*	
5	MAX RF/DF Size		TREE Size	
6	DCB Size*		DCB Base (10)*	
7		0	0	**
8		0	0	***
9		0	0	} ****
A		0	0	
B		0	0	

(Footnotes are on next page.)

Footnotes to keys and records shown on previous page:

\*Doubleword address

In byte 0, word 0

- X = 0, load module produced by Loader
- = 1, load module produced by SYSGEN.
- = 2, library load module produced by Loader.
- = 3, load module produced by DEFCON (consists of HEAD, TREE, and REF/DEF (Stack).
- = 4, load module produced by LINK.
- = 5, paged load module produced by Loader.

n = number of bytes in the HEAD record. For CP-V, n = X'30'.

A = 1, abs module

B = 1, NOTCB

SL= Final Severity Level

\*\* Word 7

If DEFCON output, this word = byte size of DATA area.

\*\*\* Word 8

If the LMN contains global symbol table (GST) information,

Word 7 contains the size in words of the GST in bits 0-14 and location of the GST in bits 15-31.

If the LMN internal symbol table (IST) information,

Word 8 contains size in words of the IST in bits 0-14 and location of the IST in bits 15-31.

\*\*\*\* Words 9, A, B

If the LMN is associated with a core library, these words are :Pnnn in TEXTC format. If the CORELIB option was specified for a loader-built load module and no core library was associated, bit 0 of word 9 = 1.

CP-V TECHNICAL MANUAL


Key = TREE      Record is the Tree Tables

Tree Tables

Overall picture for M segments (S0, ... SM)

n = total size of the tables

TREE

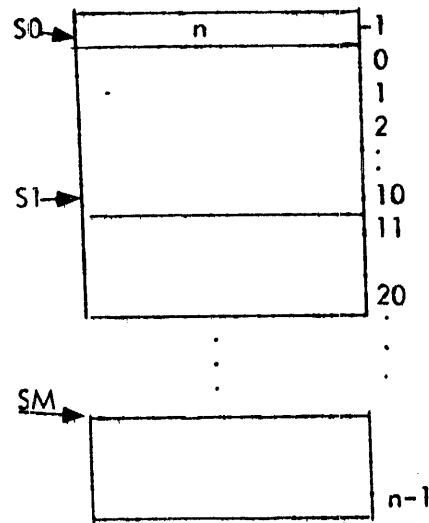

Tree Table Format (one 11-word Table per Segment)

	Tree Size		-1
	Segment Name in		0
	TEXTC Format		1
			2
Displacement from the beginning of the ROM Tables to the first ROM Table for this segment	ROM Pointer	Back Link **	3
	Forward Link**	Overlay Link**	4
	00 Size *	00 Loc*	5
	REF/DEF Size	REF/DEF Loc*	6
	01 Size*	01 Loc*	7
	Expr. Size	Expr. Loc*	8
	10 Size*	10 Loc*	9
			10

} Initially  
Clear-  
ed

Tree Tables

Segment name is determined by the name of the first file in the segment. (If the load module has only one segment, i.e., the root, the keys begin with load module name. If no load module name was supplied, the name is idL.)

Words 5-10 of each Tree Table are computed by the Loader or LINK.  
Word 10 of the ROOT Tree Table is used by the Loader to monitor the size of the REF/BREF Tables.

\*Doubleword address or # of doublewords

\*\* Displacements from TREE

Segment Components - Standard Load Module

For each segment, the following records are built:

	<u>Key</u>	<u>Record</u>
Segment Name Concatenated with: {	00	→ REF/DEF stack *
	01	→ EXPR stack *
	02	→ 00 REL DICT**
	03	→ 00 Control Sections
	04	→ 01 REL DICT**
	05	→ 01 Control Sections
	06	→ 10 REL DICT**
	07	→ 10 Control Sections
	09	→ Global Symbol Table (output by SYMCON or LINK)
Input File Name Concatenated with: {	10	→ Internal Symbol Table (output by LOADER or LINK)

Segment Components - Paged Load Module Built by the Overlay Loader

For each segment, the expression stack and REF/DEF stack records have the same format as those for the standard load module. Relocation dictionary records are not constructed.

\* Output by Loader

\*\* These records are output by Loader for a relocatable load module.

The core images are partitioned into records of at most 512 words in length with 3-byte keys of the following format:

SEG	00	PAGE
-----	----	------

where SEG = the TREE segment number of the segment containing the core image.

PAGE = the page number of the virtual page that will contain this record at execution time.


All core image records are one page in length except for the first record of an overlay segment's 00, 01, and 10 areas. The length of this record satisfies the following: at execution time, the record begins at the execution bias for this protection type and ends at the next page boundary.

Library Load Modules Built by the Overlay Loader

A library constructed by the Overlay Loader consists of two keyed files, :LIB and :DIC. The library load modules actually reside in one file (:LIB). :DIC is a dictionary whose keys are the text names of DEFs. The record associated with a dictionary key is the text name of the load module (within :LIB) in which that DEF is defined. Thus, in order to locate the unique group of records within :LIB which pertain to a given PREF, the Loader does a keyed READ to :DIC, the key being the PREF which is being satisfied. This keyed READ returns the library load module name within :LIB. With this information the Loader can then read the library load module records into core and merge them with the target load module.

The keys and records in :LIB are identical to those of non-library load modules (see above) except that the keys "HEAD" and "TREE" are concatenated with the TEXT load module name (to keep them unique). Each individual library load module name is "synonymous" (in a file sense) with the name :LIB.

A slight difference also exists in the REF/DEF and expression stack formats. The VALUE word of an entry in the REF/DEF stack is actually the head of a chain through the expression stack of all those entries which involve that REF/DEF. (This expedites subsequent merging of the stacks when the library is included in a user program.)

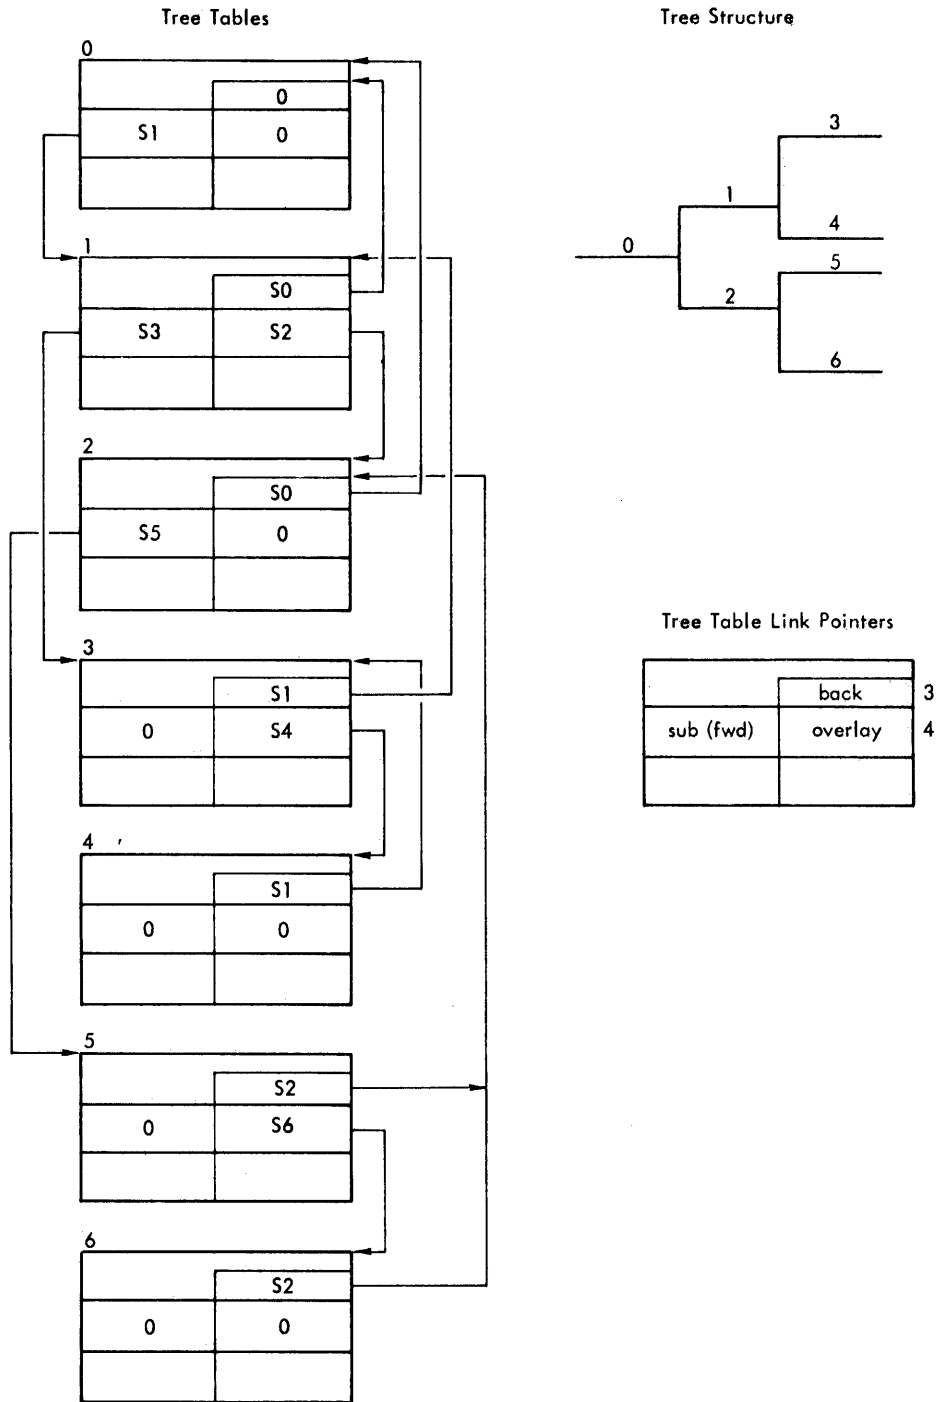


TREE Table Linking – in Relation to the Overlay Structure

REF/BREF Tables Built by the Overlay Loader

REF Table


An entry is created for every load item involving a REF defined in a higher segment.  
The load item is replaced by a CAL1,8 X where X is the REF Table entry address  
( a PLIST for the CAL).

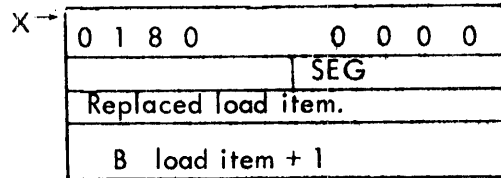

SEG = 17 bit address of higher segment name in Tree Table.

BREF Table

An entry is created for every branch type instruction involving a REF to a higher segment. The branch type instruction is replaced by a branch (of the same type) to the BREF entry.




where: S:OVRLY is a system library routine

SEG = segment number (Tree Table displacement/11)

ADDR = address field of replaced instruction

\*, x = indirect and index fields from replaced instruction

GENERAL REF/DEF STACK FORMAT  
USED BY THE OVERLAY LOADER

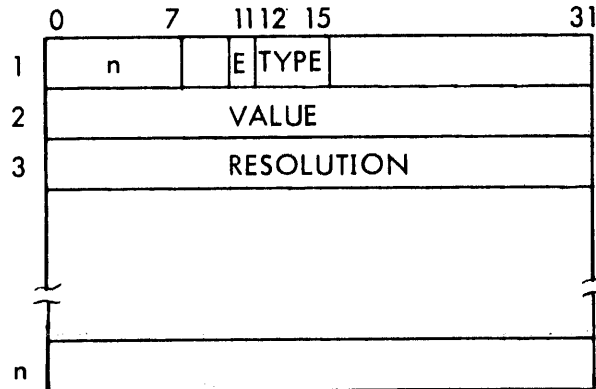


where:

n = number of words in this entry.  
E = 1, if the entry has a VALUE

TYPE = 0 or 8 DEF  
1 SREF  
2 PREF  
3 or B Dummy Section  
4 or 6 Control Section  
5 or 7 Forward Reference  
C or E Page Boundary Control Section

VALUE = constant or address if the load module is not a library  
or  
head of a chain in the expression stack if the load module is a library

RESOLUTION = the resolution in which the VALUE is expressed. Resolution is of the form:



If the VALUE is a constant, the RESOLUTION word is 0.


If the VALUE is an address, one and only one byte of the RESOLUTION word is nonzero (viz., the appropriate byte = X'01').

If the RESOLUTION assumes a form different from either of the above, the VALUE is of mixed resolution. (In this case the load module cannot be relocated and is forced ABS.)



CP-V TECHNICAL MANUAL

GENERAL EXPRESSION STACK ENTRY USED BY THE OVERLAY LOADER

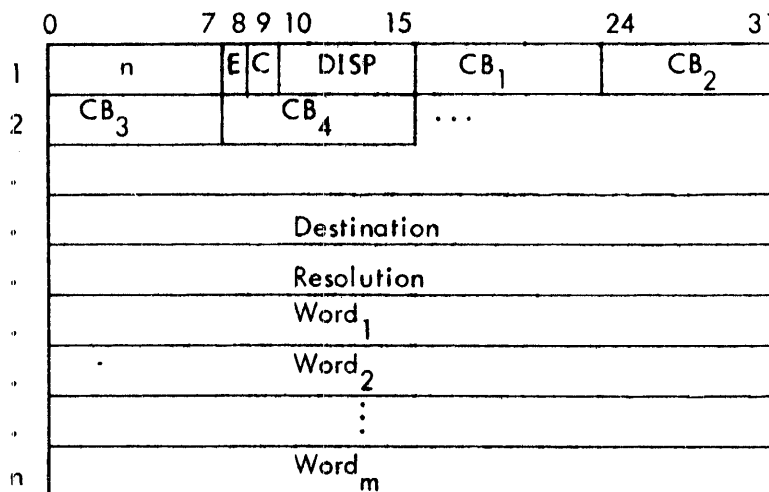

where:

n = number of words in entry

E = 1, this entry has been evaluated.

= 0, this entry has not been evaluated.


C = 0, this entry's Destination is a pointer to the REF/DEF stack.

= 1, this entry's Destination is a core expression.

DISP = number of words to Word<sub>1</sub>.

Destination: (where the value of the entry is to be deposited) =  
one of the following forms, depending upon the value of C.

REF/DEF Pointer



Core Expression



Resolution: Same as REF/DEF stack.

CB<sub>i</sub> = a control byte of the expression.

Word<sub>i</sub> = is referenced by a control byte and is a constant or pointer to the segment's REF/DEF stack (same form as Destination where C=0).

RELOCATION DICTIONARY

If ABS is not specified on the ILOAD card each segment of Loader-built load modules will have records of relocation dictionaries (one per protection type). One relocation digit is developed for each word in the protection area.

Relocation Dictionary Digits

<u>Digit</u>	<u>Type of Relocation</u>
0	relocate the word at byte resolution.
1	relocate the word at halfword resolution.
2	relocate the word at word resolution.
3	relocate the word at doubleword resolution.
8	relocate the left half of the word at doubleword resolution.
9	relocate the right half of the word at doubleword resolution.
A	relocate both halves of the word at doubleword resolution.
E	absolute.

Notice that relocation digits exist only for items that terminate on halfword boundaries.

A load module which has an item not amenable to one of these digits is set to ABS.

Example:

```

BOUND 4
ZAP EQU DA($)
GEN, 8, 16, 8 0, ZAP, 0

```

or

```

BOUND 4
ZAP EQU $
GEN, 3, 17, 12 0, ZAP, 0

```

Either of these would cause the module to be set ABS since ZAP does not terminate on a halfword boundary.

## Symbol Tables

### Global Symbols:

A global symbol table is constructed by LINK or by SYMCON. This table is a list of correspondences between symbolic identifiers (labels) used in the original source program and the values of virtual core addresses which have been assigned to them at load time. The global symbols identify object (DEFs) within a module which may be referred to (REFed) in other modules. This table is available to DELTA, for use in debugging.

### Internal Symbols:

An internal symbol table is a list of correspondences similar to the global but which applies solely within the module. It is built by LINK or the Loader for each input ROM which contains IST load items. Each internal symbol table is associated with that specific input file (ROM) and identified by its name. The internal as well as the global symbol tables are created for use by the debug processors, such as DELTA. The user has the ability under DELTA to define which set of internal symbols is to be used for specific debugging activities.

### Symbol Table Format:

Both global and internal symbol tables consist of three word entries. Symbolic identifiers (labels) are limited to seven (7) characters plus count. Symbols originally longer than seven are truncated leaving the initial characters, although the original character count is retained. Symbols which are identical in their first seven characters and are of equal length occupy one position in the symbol table. The value or definition for such multiply defined symbols is the first one encountered during the linking process. Each symbol entered into the table has a type and internal resolution classification. The internal resolution types are: byte, halfword, word, doubleword, and constant. The following are the symbol types which are supplied by the object language and maintained in the symbol table: instruction, integer, EBCDIC text, short floating point, long floating point, decimal, packed decimal, and hexadecimal.

Location Symbol - code = 01

01	C T	S <sub>1</sub>	S <sub>2</sub>	S <sub>3</sub>
	S <sub>4</sub>	S <sub>5</sub>	S <sub>6</sub>	S <sub>7</sub>
t	res	value		

where:

CT is a six-bit field containing the character count of the original symbol.  
S<sub>i</sub> are the first seven (7) characters of the symbol. Symbols with fewer than seven characters are zero filled.

t is a five-bit field where the values are:

- 00000 - instruction
- 00001 - integer
- 00111 - EBCDIC test (also for unpacked decimal)
- 00010 - short floating point
- 00011 - long floating point
- 00110 - hexadecimal (also for packed decimal)
- 01001 - integer array
- 01010 - short floating point array
- 01011 - long floating complex array
- 01000 - logical array
- 10000 - undefined symbol

res is a three-bit field representing the internal resolution. The values are:

- 000 - byte
- 001 - halfword
- 010 - word
- 011 - doubleword

value location symbols are always represented as a 19-bit byte resolution value.

Constants - code = 10

10	CT	S <sub>1</sub>	S <sub>2</sub>	S <sub>3</sub>
	S <sub>4</sub>	S <sub>5</sub>	S <sub>6</sub>	S <sub>7</sub>
value				

where: CT and S<sub>i</sub> have the same meaning as above  
value is the 32-bit value of the constant.

Loader Control Command Table (LOCCT)

Size of the three tables to follow																															(CP-V only)
LOCCT	0	1	2	3	4	5	6	7	8	9	10	11	12	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31*	
	R	Q	S	X	F1	F2	F3	F4	T	Y	U	V	SL	P	O	N	M	L	K	J	I	H	G	F	E	D	C	B	A	F1 = do not build internal symbol tables	
1	P1	P2	P3	P4	SYSid																F2 = build global symbol tables										
2	Displacement from LOCCT to TREET																														F3 = inhibit output of segment size summary
3	Displacement from LOCCT to ROMT																														F4 = DREF specified
4	REF or BREF count (default = 0)															LOAD BIAS (WA) **															
5	Number of Execute Accounts (default = 1)																														**
6	FCOM Size															FCOM (DA) ***															
7	ERSTACK Size (default, X'A')															ERTABLE Size (default, X'A')															
8	TSS Size (default = X'40')															Number of UNSAT accounts (default = 0 if NOSYSLIB; = 1 (:SYS) if not)															
9	Number of READ accounts (default = 1)															Number of WRITE accounts (default = 1)															
10																															
11	Load Module Name, TEXTC followed by blanks. (default = three characters SYSid L)																														
12																															
13	User Account Number																														
14																															
15	Load Module Password (default = 0, 0)																														
16																															
17	EXPIRE date; 'mmdl/yy' or 'NEVER' (BPM) 0, 0 (CP-V)																														
18																															
19	Library Password i. e., (PERM, LIB, password) (default = 0, 0)																														
20																															
8 max.	READ Account Numbers - 2 words per account #, (default = 'ALL0000')																														
8 max.	WRITE Account Numbers - 2 words per account #, (default = 'NONE0000')																														
8 max.	UNSAT Account Numbers and Passwords - 4 words per (acct #, pass). (default password = 0, 0)																														
8 max.	EXECUTE Account Numbers - 2 words per acct. #																														
1 max.	EXECUTE Vehicle - 3 words per vehicle, (default = FETCH000000)																														
	Total Number of words in TREE Tables																														
TREET																															
	TREE Tables - 1 Table per Segment - 11 words per table ( See Figure 12 for format)																														
ROMT																															
	ROM Tables - 1 Table per ROM - 7 words per table (See Figure 11 for format)																														

- \* NOTE:
- A = 1, UDEF specified
  - B = 1, NOSYSLIB specified
  - C = 1, REF specified
  - D = 1, PERM specified
  - E = 1, LIB specified
  - F = 1, M10 specified
  - G = 1, M100 specified
  - H = 1, FCOM specified if BPM. If CP-V, the OSP specified.
  - I = 1, ABS specified
  - J = 1, Assigns Read
  - K = 1, GO specified
  - L = 1, BI specified
  - M = 1, CSEC1 specified
  - N = 1, NOTCB specified
  - O = 1, XMEM in effect (set by the Loader in IN2), or PAGE specified
  - P = 1, LDEF specified
  - Q = 1, BREF specified
  - R = 1, EF specified
  - S = 1, CORELIB specified
  - T = 1, RDEF specified
  - bits 10 - 11    0 = no map
  - 1 = map by NAME
  - 2 = map by VALUE
  - 3 = map by NAME and VALUE
  - X = 1, Execute Vehicle specified
  - Y = 1, MAPONLY specified
  - SL = Severity Level (default = 4)


\*\* BPM-CP-V differences in the LOCCT Tables:

<u>Word</u>	<u>BPM</u>	<u>CP-V</u>
4	LOAD BIAS field, default = 0	LOAD BIAS, Default = background lower limit WA
5	Background lower limit	Number of Execute Accounts, Default = 1
*** 6	Passed to the Loader in Register D4 (D4) = FCOM size	

REAL TIME


ICB TABLE FORMATS

Type I: ICB Connected to Interrupt  
Associated with User Task

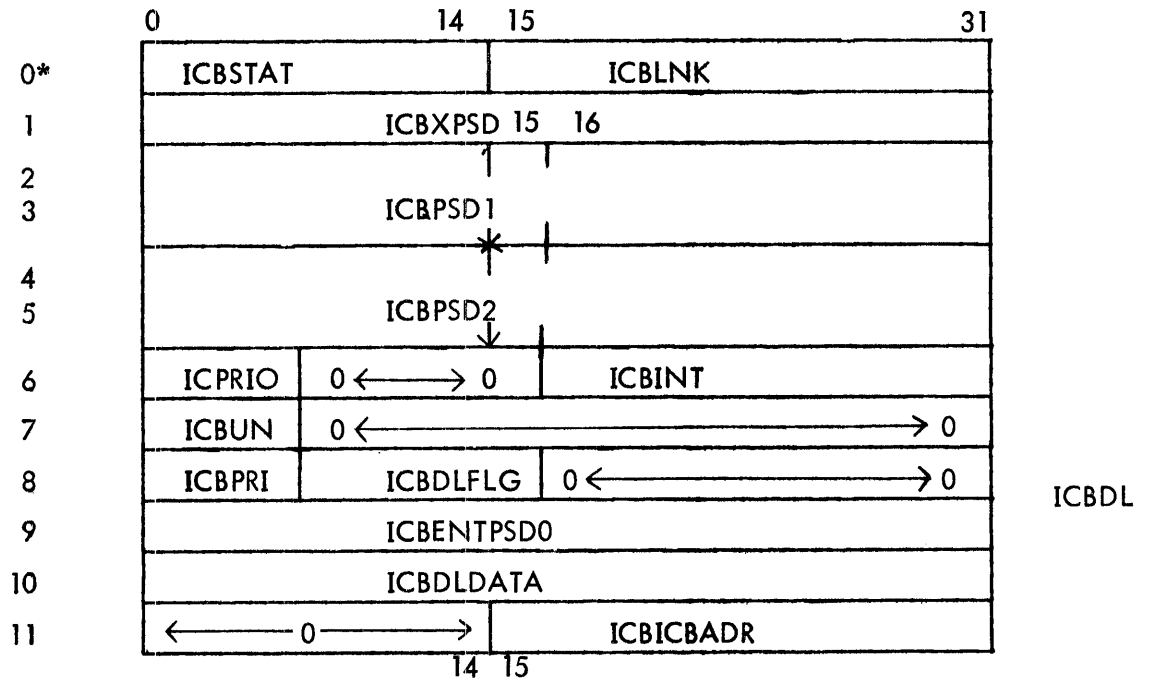

\* doubleword boundary


Type II: ICB Connected To Interrupt  
Associated With Ghost Job

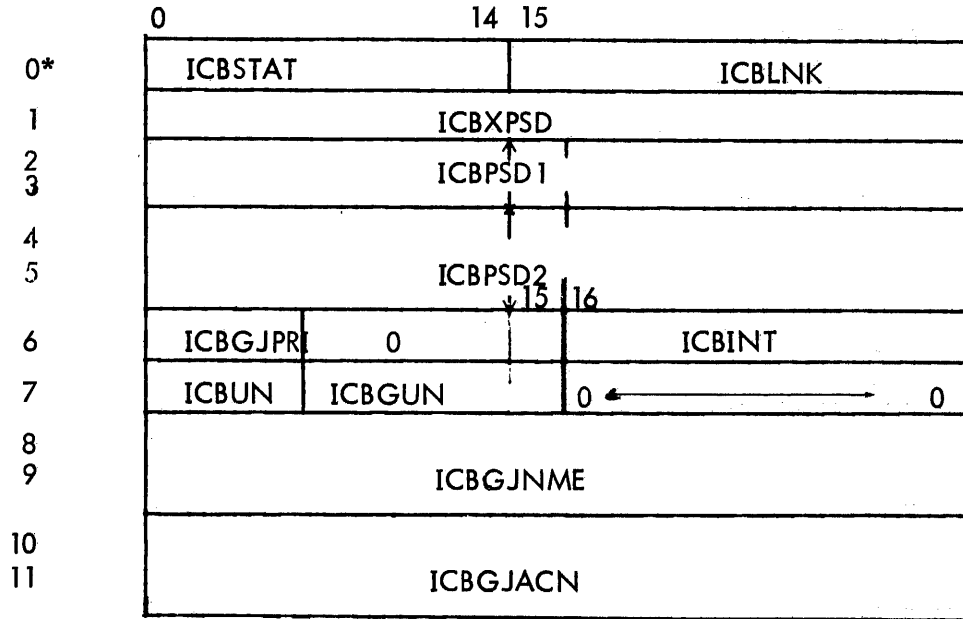

\* doubleword boundary



ICB Connected to CLOCK-3 Interrupt

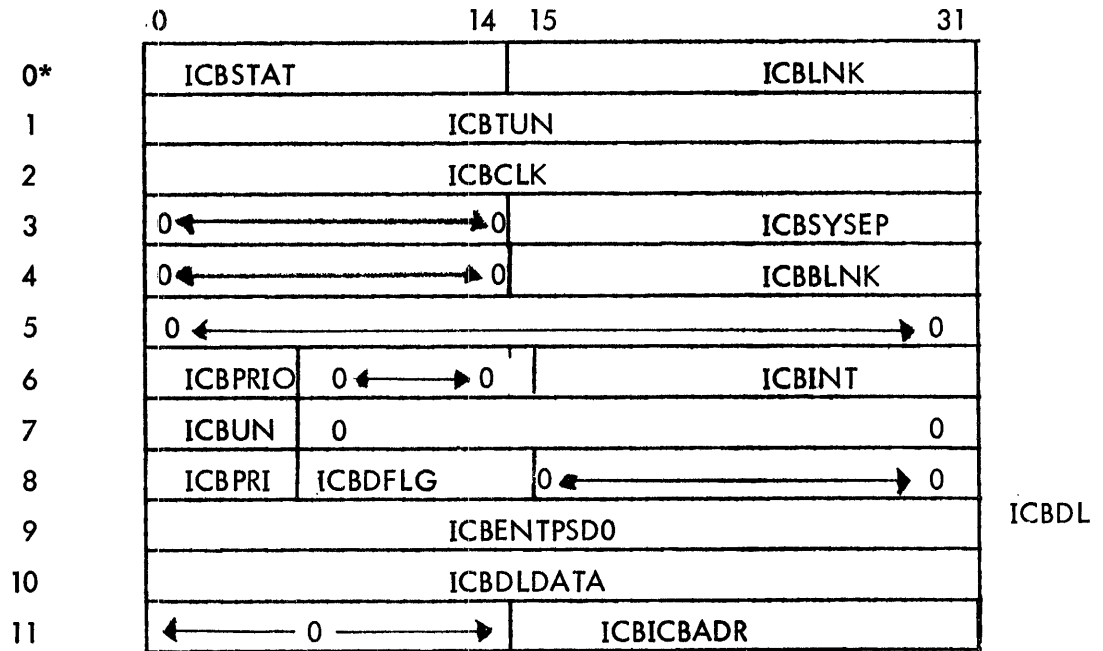

\* doubleword boundary

ICB Field Descriptions

WORD	NAME	DESCRIPTION									
0	ICBSTAT	<u>Status Flags:</u>									
		<u>BIT POSITION</u>	<u>NAME</u>								
			<u>DESCRIPTION</u>								
		0	ICBSTATA set if ICB is active								
		1	ICBSTATC set if CLEAR was specified via M:CONNECT.								
		2	ICBSTATDL set if ICBDL is already chained into UH:DL								
		3	ICBSTATO set if ONE SHOT was specified via M:CLOCK								
		4-6	ICBSTATINT associated interrupt status:								
			<table border="1"> <thead> <tr> <th>Bit Position</th> <th>Meaning if set</th> </tr> </thead> <tbody> <tr> <td>4</td> <td>if pseudo interrupt: trigger pending if real interrupt: has been triggered (interrupt is active)</td> </tr> <tr> <td>5</td> <td>enabled</td> </tr> <tr> <td>6</td> <td>armed</td> </tr> </tbody> </table>	Bit Position	Meaning if set	4	if pseudo interrupt: trigger pending if real interrupt: has been triggered (interrupt is active)	5	enabled	6	armed
Bit Position	Meaning if set										
4	if pseudo interrupt: trigger pending if real interrupt: has been triggered (interrupt is active)										
5	enabled										
6	armed										
		7-8	ICBSTATYP defines ICB type:  00:: user task (Type I) 01:: ghost job (Type II) 10:: clock (Type III)								
		9	ICBSTASY set if ICB is a SYSTEM ICB, in which case, the ICB is only five words in length.								

WORD	NAME	DESCRIPTION
0	ICBLNK	Chain link address
1	ICBXPSD	(Types I and II only) this word contains an XPSD instruction; this location is the effective address of the new PSD at location ICBPSD2 which is loaded as a result of the hardware interrupt occurring (in the case of a real interrupt) or the result of an XPSD instruction (in the case of a pseudo-interrupt). This technique allows the interrupt handling routine to determine which ICB is associated with the interrupt that just occurred.
1	ICBTUN	(Type III only) value (in two-millisecond units) from M:CLOCK CALI.

2-3	ICBPSD1	(Types I and II only) storage area for old (interrupted) PSD upon the occurrence of an interrupt; this location is the effective address of the XPSD instruction in the hardware interrupt location associated with the ICB.
2	ICBCLK	(Type III only) number of clock ticks remaining before an interrupt will occur for the user associated with the ICB.
3	ICBSYSEP	(Type III only) if the ICBSTATSY bit of ICBSTAT is set, then this is a SYSTEM ICB and is only five words in length (0-4); ICBYSEP contains the address of the system entry point which will be entered upon the expiration of the elapsed time specified in ICBTUN.
4	ICBBLNK	(Type III only) Back link for ICBs currently chained into ICBCLKHDR.
4-5	ICBPSD2	(Types I and II only) contains the new PSD which will be loaded as a result of the execution of the XPSD instruction in the hardware interrupt location associated with the ICB; the instruction address of this PSD will cause the XPSD instruction at ICBXPSD to be executed.
6	ICBPRI0	(Types I and III only) used to save the associated user's priority (his old priority) at the time of the interrupt associated with this ICB.
6	ICBGJPRI	(Type II only) contains the execution priority of the ghost job to be scheduled as the result of the interrupt associated with the ICB.
6	ICBINT	Contains the hardware or pseudo-interrupt location associated with this ICB.
7	ICBUN	The internal number of the user associated with this ICB (the owner).
7	ICBGUN	(Type II only) the internal number of the ghost job itself (user number).
8	ICBPRI	(Types I and III only) contains the execution priority of the task to be scheduled as a result of the interrupt associated with this ICB.

- 8      **ICBDLFLG**      (Types I and III only) contains the value X'82' which is a code within the DO-LIST table which, in this case, is a subtable of the ICB.
- 8-9    **ICBGJNME**      (Type II only) contains the TEXTC-formatted name of the ghost job to be placed into execution as a result of the interrupt associated with this ICB.
- 9      **ICBENTPSDO**    (Types I and III only) contains an image of word 0 of the PSD to be loaded prior to going to the user upon the occurrence of the interrupt as follows:

0	8	9	10	15		31	
		M				entry	
0	0	S	1	0	0	address	

where:


M } reset if MASTER was specified via  
S } M:CONNECT/M:CLOCK.

address      is the virtual address at which the user is to be given control upon the occurrence of the interrupt; specified via M:CONNECT/M:CLOCK.

- 10-11 **ICBGJACN**      (Type II only) contains the TEXT-formatted name (left-justified, trailing blanks) of the account in whose directory may be found the ghost job to be placed into execution as a result of the interrupt associated with this ICB.
- 10      **ICBDLDATA**      (Type I) contains the interrupt location associated with this ICB (i. e., same as ICBINT). (Type III) same as ICBTUN (i. e., requested elapsed time in two-millisecond units).
- 11      **ICBICBADR**      (Types I and III) contains the address of word 0 of this ICB.

ICB Chain Headers

ICB Chain Headers are of the form



where address is the word address of word zero of an ICB which in turn points to the next ICB in the chain (ICBLNK). The last ICB in the chain has an ICBLNK of zero.


RTICBHDR

This header is built and DEFed by SYSGEN-PASS2 and contained in the M:FRGD module; if this is a real-time system, RTICBHDR will point to the first of a user-specified number of available ICBs. If this is a non-real-time system, RTICBHDR will be set to -1.

RTICBCLKHDR

This header is assembled into and DEFed in the TABLES module; this chain header always points to the five-word SYSTEM ICB associated with the 1, 2-second time-of-day routine. RTICBCLKHDR also contains a back link which points to the last ICB chained into RTICBCLKHDR.

DO LIST BLOCK FORMATS

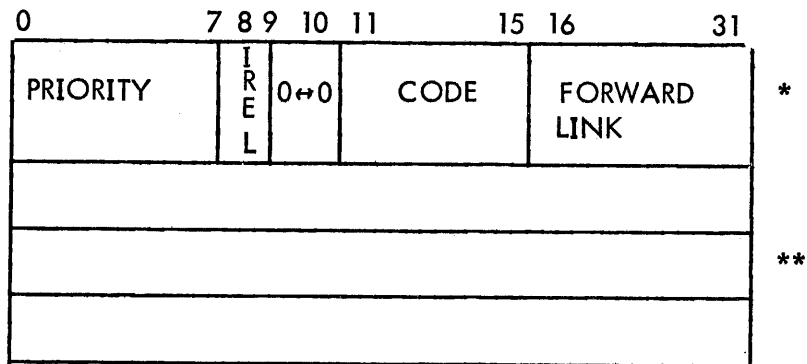


IREL

Do not release block to free chain when done.  
Set when block is contained in an ICB.

\*Header


\*\*Data Words dependent on code value

Do List Format for Interrupt Entry

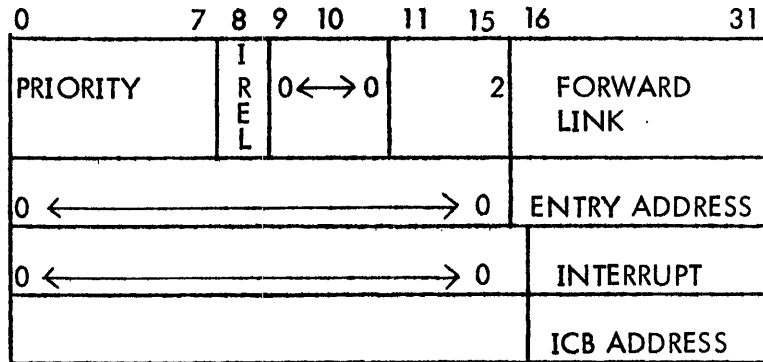

IREL ⇒ Inhibit release of block. Set if block contained in ICB.

Do List Format for Post-ECB Entry

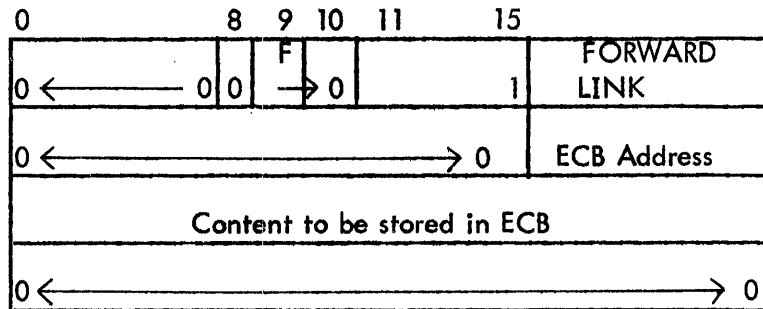


\*(unused)

- 0 = WORD
- 1 = DW
- 2 = HW
- 3 = BYTE

F = posted entry or wait list

Wait List Block Format

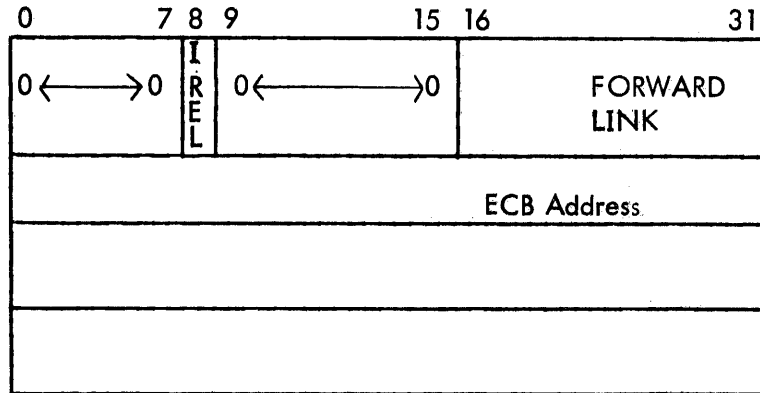

**IREL**                      Inhibits release of block. Used when block is contained within a larger block.



M:FRGD MODULE

For a real-time system, one having a :FRGD command present, the following tables will be generated:

RT:GINTP	BOUND 8 DATA 0,0 GEN, 12, 20 0, RT:GINTP GEN, 8, 1, 6, 16 X'17', :9, 0, :9, 0	
RT:UINTP	DATA 0,0 GEN, 12, 20 0, RT:UINTP GEN, 8, 1, 6, 1, 16 X'17':9, 0, :9, 0	
	DEF RT:GINTP, RT:UINTP REF RT:GINTP, RT:UINTP	
ICBSIZE	DEF ICBSIZE, ICB, LASTICB, NINTS EQU 12	
ICB	EQU \$	
I	DO NINTS	No. of interrupts
	{ DO I=NINTS DATA 0,0 ELSE DATA \$+12,0 FIN DATA, 8 0,0,0,0,0 FIN	
LASTICB	EQU \$	
RTICBHDR	EQU \$ DO 0=NINTS DATA 0 ELSE DATA ICB	
	DEF RTICBHDR, RESDF	

	DEF	RESDF, CRESDF, RESDFP, DYNRESDF, MDYNRESDF
RESDF	DATA	SIZE (number of RESDF pages)
CRESDF	DATA	SIZE (number of RESDF pages)
RESDFP	DATA	ADDRESS (RESDF address)
DYNRESDF	DATA	0
MDYNRESDF	DATA	PAGES (maximum number DYNRESDF pages)
	DEF	PPTABLE, PPTABLSZ
PPTABLE	EQU	\$
	DOI	2+(#SEGMENTS-1)
	DATA	0
PPTABLSZ	EQU	\$-PPTABLE
	DEF	PP:UPPH, PP:UPPT, PP:UPPC
PP:UPPH	DATA	0
PP:UPPT	DATA	0
PP:UPPC	DATA	0
	DEF	PPTABDSK2
PPTABDSK2	DATA	0

```

INTLB1      DEF      INTLB1, INTLB2, INTLBSIZ, INTLB3
            DATA, 2  0
            DATA, 2  'LA'      }
            DATA, 2  'BB'      } text interrupt labels
            :
INTLBSIZ    EQU      HA ($) - HA(INTLB1)
INTLB2      DATA, 2  0
            DATA, 2  X'65'    )
            DATA, 2  X'1022'  ) interrupt addresses
            :
INTLB3      DATA, 1  0
            DATA, 1  X'65'    ) default (SYSGEN-specified) execution priority
            DATA, 1  X'82'    )
            :

```

Defaults:

```

NINTS      = 0      Address = X'10000'      # SEGMENTS = 1
SIZE       = 0      PAGES = 0

```

For a non-real-time system, the following subset will be generated:

```

RTICBHDR    DEF      RTICBADR
            DATA    -1

```

M:IMC MODULE

- a. Initialize all entries in UB:US to 31
- b. Delete UH:TS.
- c. ADD UH:DL, a halfword table parallel to other user tables and initiated to zero.
- d. Add UH:WL, a halfword table initialized to zero.
- e. Add UP:PRIO, a byte table initialized to X'FF'.
- f. Add UB:PRIOB, a byte table initialized to zero.
- g. Add UB:NECB, a byte table initialized to zero.

h. Generate the cells:

<u>OPTION</u>	<u>DEF</u>	<u>DESCRIPTION</u>	<u>DEFAULT</u>
BPRIO	SL:BPRIO	Batch default priority	X'FC'
OPRIO	SL:OPRIO	On-line default priority	X'FC'
GPRIO	SL:GPRIO	Ghost default priority	X'FC'

ENQ/DEQ TABLES

ENQ/DEG uses the new Queue Table (QT), U:MISC, and the JIT flag ENQ (J:ABC bit 23). U:MISC is set with sleep time whenever a user is put into the sleep state, and JIT:ENQ is set when a user request ENQ and checked by STEP and SSS. The QT is a pool of double words that can be used to contain various kinds of data.

The hierarchy of the Queue Tables is as follows:

- a. The first level of entries is the pool of empty entries.
- b. The second level of entries is the names of all the queues (qnames) for resources. These are referred to as Q entries.
- c. The third level of entries is the user numbers of all the users of a queue (qname). These are referred to as U entries, and the first one is Uhead.
- d. The fourth level of entries is the names of all the sub-queues (sname) for elements. The order of the sub-queues is first, NULL, if present then ALL, if present, then those with regular names. These are referred to as S entries.
- e. The fifth level is the queues of users for the various resource/elements. These may be referred to as SQ or user entries, depending on their context of an S chain or a U chain.

The third and fourth levels might be more appropriately thought of as two dimensions at the same level, i. e., a queue can be looked upon as the users of sub-queues or sub-queues of users. Both the third and fourth levels contain the heads of threads through the fifth level.

Double words, or contiguous blocks of double words, are also used as appendages to second and fourth level entries to contain names (qname or sname) that exceed three characters in length. Double words are also used as fifth level appendages to contain the ECB address for pending requests.

The formats of the various types of entries are as follows.

QHEAD ENTRIES

The Q, U, or S entries consist of three fields - the half-word AHVP and OHHP, and the full word QHNAME.

0	15 16	31 32	63
QHHP	QHVP	QHNAME	

QHHP

Queue Head Horizontal Pointer

Entry 0 contains the double word index in QT of the first empty entry. Other first level entries contain the double word index of the next empty entry (zero is terminator).

Level 2 (Q) entries contain the double word index in the QT of the next qname (Q) entry (zero is terminator).

Level 3 (U) entries contain the double word index in the QT of the next user number (U) entry for this queue name (zero is terminator).

Level 4 (S) entries contain the double word index in QT of the next sub-queue name (sname) entry for this queue (zero is terminator).

QHVP

Queue Head Vertical Pointer

Entry 0 contains the double word index in QT of the first queue name (qname) entry, i.e., the first entry in level 2.


Level 2 (Q) entries contain the double word index in QT of the first QHEAD level 3 (U) entry, that is, the head of the user lists for this queue (qname).

Level 3 (U) first entry contains the double word index in QT of the first sub-queue name (sname) entry. Other level 3 entries contain the double word index in QT of the first SQ entry for each user (user chain).

Level 4 (S) entries contain the double word index in QT of the head of the sub-queue (S) entry (SQ chain).

SQ ENTRIES

The SQ entries consist of five fields - the one-byte QQUN and QQF, and the half-word QQHP, QUVP, and QUHP.



QQHP

Queue Queue Horizontal Pointer

Contains the double word index in QT of the next entry in this sname queue (S chain).

QUHP

Queue User Horizontal Pointer

Contains the double word index in QT of the next sname queue entry for this user (U chain). If QQF bit 6 is set, that next entry is an ECB address entry relating to the same sname queue.

QQUN

Queue Queue User Number

Contains the user number of the user at this position in the sname queue.

QUVP

Queue User Vertical Pointer

Contains the double word index in QT of the sname (S or level 4) entry for this queue. During a dead-lock check, bit 0 is set to mark the path of checking.

QQF

Queue Queue Flags


- Bit 0     1 if the next entry for this user (object of QUHP) is an ECB address entry.
- Bit 1     1 if access has been allowed for this user (allocated).
- Bit 2     1 if the request was NOWAIT.
- Bit 3     1 if the user is currently asleep pending receiving access in this sub-queue (sname).

- Bit 4 1 if this user is temporarily blocked from access because he was not a user of this queue (qname) when an EXCL or ALL user was denied immediate access.
- Bit 5 1 if a JOB entry.
- Bit 6 1 if request was for SHARE.
- Bit 7 1 if this is a SHARE entry and there is also an EXCL entry pending upgrade on this sub-queue for this user.

NOTE: If bit 1 is set the queue entry is "allocated"; if bit 4 is set the queue entry is "blocked"; and if neither is set the queue entry is "pending".

QECB ENTRIES

The QECB entries consist of three fields, the half-word QUPP and QUHP, and the 17 bit QUEA.



QUPP

Queue User's Primary Entry Pointer

Contains the double word index in Qt of the primary portion of this entry - points back to the entry whose QUHP points to it.

QUHP

Queue User Horizontal Pointer

Same as under SQ entries above.

QUEA

Queue User ECB Address

Contains the ECB address for user QQUN for sub-queue QUVP.

QNAME ENTRIES

The QNAME entries consist of a single, variable length field. One to four consecutive QT entries are used to contain queue (qname) or sub-queue (sname) names when the names do not fit in the QHNAME field of the Q or



S entry. One double word is used for names of four to seven characters, two double words for names of eight to fifteen characters, three double words for names of sixteen to twenty three characters, and four double words for names of twenty four to the maximum thirty one characters.

REMOTE PROCESSING TABLES

All the Remote Processing Tables are named RB  $\begin{bmatrix} B \\ H \\ D \end{bmatrix}$ :xxxx and are indexed by DCT index. Most exist only for RB device DCT indices although a few (marked with \* below) have one additional entry for LOCAL use indexed LCLX a value defined by SYSGEN. Note that this means that the tables usually do not start where their names are defined since the names are EQUed backwards from the tables to make DCT indexing possible. A doubleword, RBLIMS, is defined in the monitor by SYSGEN such that the following test determines whether a device is RB (and thus the tables are meaningful):

CLM, DCTX	RBLIMS
BCR, 9	ITS\$REMOTE
BCS, 9	ITS\$LOCAL

REMOTE PROCESSING TABLES IN CORE

RB:FLAG            A word table containing flag bits which control the basic flow of Remote Processing. See the bit descriptions below.

RB:BUF            A word table containing the address of the context area for IRBT and 2780. IRBTs have a page of context; 2780s one-half page. For 7670, holds number of retries.

RBD:WSN           A doubleword table containing the Workstation Name (WSN) when the line is logged on or if it is set by SYSGEN (WSN option) or KEYIN (IRBLOG).

RBH:ACK           A halfword table used as a buffer to read short messages (ACK, NAK, ENQ, etc.) from the RBT or IRBT.

RBB:ID            A byte table containing the RBID of logged on lines. Often used to tell whether a line is logged on ( $\neq 0$ ) or not.

RBB:HFE, RBB:HOU  
RBB:HIN           Byte tables containing the heads of the free, outputting, and inputting chains of symbionts through STB:LNK, respectively for IRBTs. For RBTs (7670, 2780) RBB:HFE is the head of the chains of all symbionts for this line (CR is always first), and whichever of RBB:HIN and RBB:HOU is non-zero is the input or output symbiont that currently is using the line. Note: for IRBTs, the OC device is always the RBB:HOU chain.

RBB:BCB           A byte table that contains the BCB count next expected from an IRBT line. It is used in 7670 to count errors for ERROR MAX, and unused in 2780.

RBB:LPZ, RBB:CPZ	Byte tables used in 7670 and 2780 to keep the current max printer and puch record length. Unused in IRBT.
RBB:SPC	A byte table used in 7670 to help keep track of the number of formats to be performed before a print. Unused in 2780 and IRBT.
RBB:SFC	A byte table used in 7670 to preserve the current function when a warning BELL is being sent. Unused in 2780 and IRBT.

REMOTE PROCESSING TABLES IN RBBAT

*RB:MFAD	A word table containing the address of the current message file buffer. Zero if none.
*RB:SPMF	A word table containing the used byte count of space in the message file buffer.
*RBH:MFY	A halfword table containing the BH:LINK entry index for the message file under construction.
RBB:MXP	A byte table containing the maximum priority for jobs submitted from this WSN. Also used as the priority for any direct passed output.
RBB:DSM	A byte table containing the device selector mask for this WSN.
RBB:SMD	A byte table containing the symbiont index of the system message device for this WSN.

RB:FLAG STRUCTURE

<u>Bit</u>	<u>Name</u>	<u>7670</u>	<u>2780</u>	<u>IRBT</u>	<u>Meaning</u>
0	BPBIT	x	x		Block protect toggle
1	IGBIT	x	x	x	Cards after LFIN were ignored
2	MORBIT	x			Waiting for next chunk of deck
3	HUBIT	x	x	x	Line hung up
4	PUNBIT	x			Punching is allowed
5	DCBIT	x	x	x	WSN specified at SYSGEN
6	HASPBIT	x	x	x	IRBT line
7	SLVBIT			x	We are slave
8	ALBIT	x	x	x	RBLOG keyin done
9	XP1BIT			x	X1 specified in SUPER
10	2780BIT	x	x	x	2780 line (may be changed to IRBT at logon)
11	IBMBIT			x	N3 specified in SUPER
12	DIALBIT	x	x	x	Dial specified at SYSGEN
13	EDISBIT	x	x	x	ERROR MAX on line
14	OFFBIT	x	x	x	Do not connect line (BRX) - Set except at logon for IRBT
15	RBXBIT	x	x	x	Disconnect line now
16	DUPBIT	x	x	x	1 = Full duplex
17	DISCBIT	x	x	x	Disconnect when output done
18	LOFBIT	x	x	x	RBDISC sent (TEMP)
19	SYSBIT	x	x	x	:SYS jobs legal
20	HALBIT	x	x	x	HOLD all flag r
21	CLKBIT			x	Wait before ACKO-idle
22	ACTBIT	x	x	x	Line logged on
23	CRTBIT	x			RBBAT disables RBSSS
24	XP2BIT			x	X2 specified in SUPER
25	OADBIT	x	x	x	Set OFFBIT after disconnect
26	FIABIT	x	x	x	RBCC altered stream status
27	SSSBIT	x			Inputting with output suspended
28	LIPBIT	x	x	x	Logging on
29	FINBIT	x			FIN has been read
30	EMBIT	x	x		1 = NOEM specified
31	OBBIT			x	Old BCB was read
31	FRBIT	x			Initial read of file

IRBT CONTEXT PAGE

0	LINK	Context (see descriptions)
73	LINK	Input Buffer
183	LINK	Input Buffer
293	LINK	Output Buffer
403		Output Buffer

2780 CONTEXT 1/2 PAGE

0		Context (see Descriptions)
38	LINK	Buffer
148	LINK	Buffer

## LRBT


## \*\*\*\*\* CONTEXT POINTERS \*\*\*\*\*

Symbol	Equation	Value	Description
INSV	EQU	0	PREV INSYMN FOR FIN READ
HFB	EQU	1	HEAD PARSE BUFFS
HBB	EQU	2	HEAD BUILD BUFFS
HRB	EQU	3	HEAD READ BUFFS
HWB	EQU	4	HEAD WRITE BUFFS
CRB	EQU	5	CURRENT BSC\$PRS BUFF
CBB	EQU	6	CURRENT BSC\$BLD BUFF
CRB	EQU	7	CURRENT READ BUFF
CWB	EQU	8	CURRENT WRITE BUFF
POP	EQU	9	POINTER OF BSC\$PRS
PBB	EQU	10	POINTER OF BSC\$BLD
PIP	EQU	11	BSC\$PRS IN PROGRESS
OCOB	EQU	12	CUR. OUTPUT COB
OCRCB	EQU	13	INPUT COB FOR OC
RBC	EQU	14	REMAINING BYTE COUNT (OUT)
OCRC	EQU	15	CUR. CRC (OUT)
CURX	EQU	16	CUR. USER (OUT)
BIP	EQU	17	BSC\$BLD IN PROGRESS
FBF	EQU	18	FORCE BUFFER FULL
CIP	EQU	19	CONTROL IN PROGRESS
FCOI	EQU	20	COMB. INPUT FCS
FCF	EQU	21	CUR. FUNCTION CODE
BUT	EQU	22	BACKUP TOGGLE
BIN	EQU	23	BINARY REC RCVD.
CURF	EQU	24	LAST FAILING USER (OUT)
LTYC	EQU	25	LINE TYC
RST	EQU	26	SUSPENDED USERS TO RESTART
SAB	EQU	27	SUSCK ABORTS BSC\$BLD
RSP	EQU	28	FUNC PERM POINTER
EDF	EQU	29	EDF(S) IN THIS BLOCK (OUT)
CONT	EQU	30	CONTINUATION BUFF ADDR
CONTCK	EQU	31	CONT SYMB INDEX
CONTCNT	EQU	32	CONT BYTE COUNT
SCRC	EQU	33	FUNC PERM CRC
HIP	EQU	34	HANG UP IN PROGRESS
BKD	EQU	35	SYMBIONT ACTUALLY BACKED UP
TTP	EQU	36	0=IRBT, 1=2780
RTRY	EQU	37	NUMBER OF RETRIES
SPB	EQU	38	SPECIAL BUFFER WHEN WAB SENT

2780

*****#			
*			CONTEXT POINTERS*****
FNSV	EDU	0	
HPB	EDU	1	HEAD PARSE BUFFS
HBB	EDU	2	HEAD BUILD BUFFS
HRE	EDU	3	HEAD READ BUFFS
HMB	EDU	4	HEAD WRITE BUFFS
CPB	EDU	5	CURRENT PARSE BUFF
CBP	EDU	6	CURRENT BUILD BUFF
CRB	EDU	7	CURRENT READ BUFF
CWB	EDU	8	CURRENT WRITE BUFF
POP	EDU	9	POINTER OF PARSE
POB	EDU	10	POINTER OF BUILD
PIP	EDU	11	PARSE IN PROGRESS
DBOB	EDU	12	*UNUSED IN 2780*
DCROB	EDU	13	*UNUSED*
RBC	EDU	14	REMAINING BYTE COUNT (OUT)
CCRC	EDU	15	CUR CRC (OUT)
CURX	EDU	16	HOLDS 0.5 UNTIL READY
BIP	EDU	17	BUILD IN PROGRESS
FBF	EDU	18	FORCE BUFFER FULL
CIP	EDU	19	CONTROL IN PROGRESS
FCOI	EDU	20	TEMP HOLD TO CWT WFC
CFC	EDU	21	CUR. FUNCTION CODE
BUT	EDU	22	*UNUSED*
BIN	EDU	23	*UNUSED*
CURF	EDU	24	# OF RECS IN CUR BLK
LTYC	EDU	25	LINE TYC
RST	EDU	26	*UNUSED*
SAB	EDU	27	TURNS OFF OUTPUT TIL READY
PSP	EDU	28	*UNUSED*
EOF	EDU	29	EOF IN CUR BLK (OUT)
CONT	EDU	30	SYMB OPERATION IN PROG
CONTCK	EDU	31	# OF REC ALLOWED/BLK SAB=1MRP=FF
CONTONT	EDU	32	*UNUSED*
SCRC	EDU	33	*UNUSED*
HIP	EDU	34	HANG UP IN PROGRESS
BKD	EDU	35	*UNUSED*
TTYR	EDU	36	2780=1,IRBT=0
RTRY	EDU	37	NUMBER OF RETRIES
SPB	EDU	38	*UNUSED*

REMOTE PROCESSING MODULE STRUCTURE

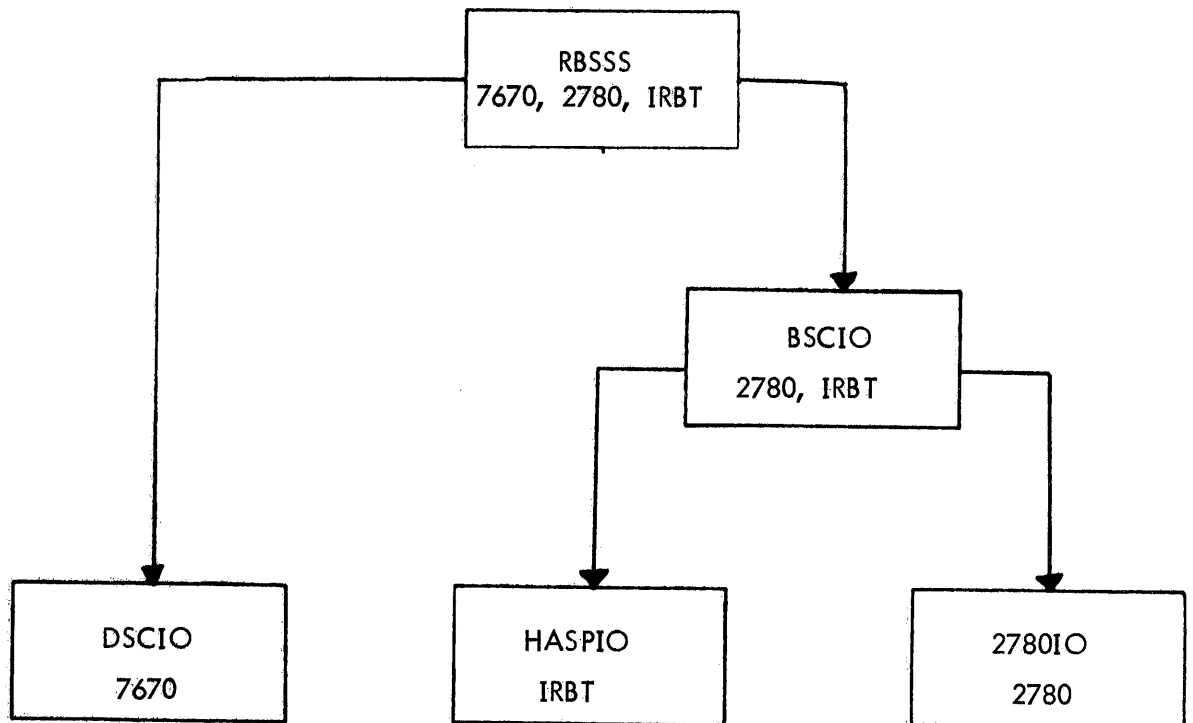



SCREECH CODE: #FF-00 CALLED FROM: BOOTSUBR  
MESSAGE: OPERATOR INITIATED RECOVERY  
REGISTERS: R0 - Sigma 6-7 11  
Sigma 9 15  
R1 - Sigma 6-7 Not changed - the contents  
are the same as when the  
recovery was initiated.  
Sigma 9 Either not changed or 0.  
R2-R15 - Not changed  
REMARKS: Called from BOOTSUBR on a boot from disk when sense  
switch 3 is set.

\*\*\*\*\*

SCREECH CODE: #01 CALLED FROM: SCHED, MM  
MESSAGE: USERS - PAGE CHAIN INCONSISTENT  
REGISTERS: Case 1, called from SCHED  
R0 - 0 if circular or unlinked chain; otherwise, the  
Link # index in chain  
R1 - Link register  
R2 - Next page chain link  
R4 - User Being Scheduled  
R7 - Address of Chain Head, Tail, and Count  
Table  
SR4 - Offending page number  
Case 2, called from MM (T:XPGVI)  
R1 - 0  
R3 - Physical page number  
R7 - Virtual page number  
REMARKS: Can't find requested virtual page in user virtual map  
chain (JB:LMAP).  
1. See T:PGCHK in SCHED.  
2. Effective when SSI set.

\*\*\*\*\*

\*\*\*\*\*

SCREECH CODE: #02 CALLED FROM: SCHED  
MESSAGE: REPORTED EVENT INCONSISTENT WITH USER'S CURRENT STATE

REGISTERS:  
\*R3 = Previous state  
\*R4 = User number (T:RE,T:RCE)  
\*R5 = User number (T:RUE)  
\*R6 = Event number  
\*R7 = Line number (T:RCE)  
SR4 = Rtn. Addr. for reschedule

REMARKS: \*Contents dependent upon called entry point; if R4 = S:CU, call was T:RE; if R7 is line number of user in R4, call was T:RCE; if R4 = R5, entry is T:RUE.

\*\*\*\*\*

SCREECH CODE: #04-04 CALLED BY: SCHED  
MESSAGE (ON OC): THAT'S ALL FOLKS!:: OPERATOR INITIATED SHUTDOWN

REGISTERS: Not Displayed.

REMARKS: Called by SSS after the system has quieted down following a ZAP key-in. Recovery then saves some system tables, but does not enter the system restoration phases. No recovery dump file is written.

\*\*\*\*\*

SCREECH CODE: #0A CALLED FROM: DPSIO, TSIO

MESSAGE: OPCODE IN SWAP COMMAND CHAIN IS INVALID

REGISTERS: Case 1, command list security checks - SS4 set.

- R1 - Incorrect command list order code if not equal R3
- R2 - Incorrect command list entry address (IOCD)
- R3 - Order code of first IOCD in command list
- R4 - Swap device index
- R6 - Command list beginning address
- R7 - Swapper function code

Case 2, Unrecoverable read error during inswap

- R1 - Inswap user number
- R7 - DCT index
- SR1 - Incorrect command list entry address (IOCD)
- D1 - Order code

\*\*\*\*\*

SCREECH CODE: #0B CALLED FROM: DPSIO, TSIO

MESSAGE: INCORRECT ORDER CODE IN SWAP COMMAND LIST

REGISTERS: R1 - Incorrect order code, not seek  
R2-R7 - See case 1, S/C #0A above.

REMARKS: SS4 must be on for check,

\*\*\*\*\*

SCREECH CODE: #0C CALLED FROM: DPSIO, TSIO

MESSAGE: ATTEMPT TO SWAP MONITOR'S MEMORY

REGISTERS: R1 - Buffer address  
R2-R7 - See case 1, S/C #0A above.

REMARKS: SS-4 must be on for check.

\*\*\*\*\*

SCREECH CODE #0D CALLED FROM: TSIO

MESSAGE: HALT FLAGS MISSING IN SWAP COMMAND LIST

REGISTERS: R0 = FLAGS byte from TIC command  
R1 = TIC order code  
R2-R7 = See case 1, S/C #0A above.

REMARKS: SS-4 must be set to check. FLAGS must not have command chaining set and must have interrupt on zero byte count or channel end set.

\*\*\*\*\*

SCREECH CODE: #0E CALLED FROM: TSIO

MESSAGE: I/O REQUEST WITH NULL COMMAND LIST

REGISTERS: R4 = Swap device index  
R6 = Command list beginning address  
R7 = Swapper function code

REMARKS: Not checked for pack-only swappers.

\*\*\*\*\*

SCREECH CODE: #0F CALLED FROM: DPSIO, TSIO

MESSAGE: INPUT FUNCTION CODE IS INVALID

REGISTERS: R2 = Swapper function code  
D4 = X'0F

REMARKS: SS-4 must be on to check. Function code not between one and five exclusively.

\*\*\*\*\*

CP-V TECHNICAL MANUAL

Section VS  
Page 5  
9/1/78

SCREECH CODE: #10 CALLED FROM: COC, ECBLK |  
MESSAGE: BAD COC BUF POOL, OR BAD BUF ADR ON RELEASE REQUEST  
REGISTERS: R2 Logical line number  
R4 Buffer address  
R6 Return address from buffer return call  
REMARKS: 1. On a COC buffer release, an invalid relative buffer address was specified (address 15 or HRBA\*4+15).  
2. On a COC buffer GET or RELEASE, an invalid relative buffer address was found in the free pool chain. If the COC module was assembled with the COCBUG and COCPBUG flags set (normally they're not), and sense switch 4 is set, the entire free pool chain is checked on each PUT and GET operation. (The R4 and R6 contents listed above are valid only at entry and exit times.)

\*\*\*\*\*

SCREECH CODE: #11 CALLED FROM: COC  
MESSAGE: INVALID INTERNAL CONTROL CODE TRANSLATE REQUEST  
REGISTERS: \*R1 = DCB address  
R2 = Line number  
R5 = Character  
\*R7 = Byte address of user buffer  
\*SR2 = Rtrn address  
SR3 = Output translation table address  
REMARKS: Cause is translate table error (e.g., 2741 N/L on non-2741 line), or bad input buffer chain.  
\*Not always set.

\*\*\*\*\*

CP-V TECHNICAL MANUAL

Section VS  
Page 6  
9/1/78

SCREECH CODE: #12 CALLED FROM: COC

MESSAGE: COC - BAD INPUT BUF LINKAGE ON RELEASE REQUEST

REGISTERS: \*R0 = Removal point  
\*R1 = DCB address  
R2 = Line number  
\*R3 = COC #  
\*R4 = Current release point  
SR3 = Output translate table addr.  
SR4 = Caller's return, RTN+1 = activation  
D3 = Return address

REMARKS: The COC input buffers are being released, and there is a conflict between the insertion and removal points and the chain.

\* not always set

\*\*\*\*\*

SCREECH CODE: #13 CALLED FROM: COC

MESSAGE: COC - OUTPUT BUF LINKAGE OR CHARACTER COUNT BAD

REGISTERS: \*R1 = DCB address  
R2 = Line number  
R3 = COC number  
R4 = Removal point (usually neg.)  
R5 = Character  
SR4 = Output count, usually = -1

REMARKS: Inconsistent output count and buffers, may be caused by extended interrupt pulse or clobbered COC tables - usually COCOC, COCOI, or COCOR.

\* not always set

\*\*\*\*\*

CP-V TECHNICAL MANUAL

Section VS  
Page 7  
9/1/78

SCREECH CODE: #14 CALLED FROM: THEUNCOC

MESSAGE: COC ROUTINE CALLED IN NON-COC SYSTEM

REGISTERS: SR2 = BAL adr if 14-03  
SR4 = BAL adr if 14-01 or 14-02  
D4 = BAL adr if 14-04

REMARKS: The subcode indicates which routine was called:

14-01 COCIO  
14-02 COCOFF  
14-03 COCSENDX  
14-04 ECHOCR2

\*\*\*\*\*

SCREECH CODE: #17 CALLED FROM: IOQ

MESSAGE: INVALID DISK ADDRESS PASSED FOR AN I/O OPERATION

REGISTERS: R1 = IOQ7,3 = DCTX=0  
\*R2 = DCB address  
R3 = Queue index  
\*SR1 = Seek address from CDA,R2  
SR4 = IOQ +.175  
D4 = X'17'

REMARKS: Caused by invalid DCT index. If on a RAD/disk, DSCVT will have been called indicating SR1 setup.

\*\*\*\*\*

SCREECH CODE: #19 CALLED FROM: BUFF

MESSAGE: INVALID BUFFER ADDRESS PASSED FOR RELEASE

REGISTERS: R1 = Index to BUFLIMS  
R2 = Head of respective buffer pool  
R5 = JIT address  
SR4 = LINK Return address  
D3 = Buffer address  
D4 = X'19'

REMARKS: Occurs both on releasing and acquiring buffers of most types (CPOOL, SPOOL, and MPOOL).

\*\*\*\*\*

CP-V TECHNICAL MANUAL

Section VS  
Page 8  
9/1/78

\*\*\*\*\*

SCREECH CODE: #19-01 CALLED FROM: MPCDIO  
MESSAGE: TOO MANY CDWs in MPOOL  
REGISTERS: R1 = DCT index  
R2 = CIT index  
R3 = IOG index  
R12 = Actual number of CDWs in request  
REMARKS: An I/O request passed to the MPC disk handler may contain at most 5 command doublewords.

\*\*\*\*\*

SCREECH CODE: 1A CALLED FROM: CLS  
MESSAGE: ACCOUNT DIRECTORY INACCESSIBLE  
REGISTERS: No registers significant.  
REMARKS: Account directory is bad, and Monitor is unable to reconstruct it. All files are lost.

\*\*\*\*\*

SCREECH CODE: #1B CALLED FROM: SWAPPER  
MESSAGE: USERS PAGE CHAIN NON ZERO AT SWAP COMPLETION  
REGISTERS: R1 = Inswap user number (S:ISUN)  
R2 = Physical byte address of JIT  
R3 = UB:US,1 (user state)  
R4 = Physical page head  
R5 = Physical page tail  
R6 = Physical page count  
SR4 = Count of swapper free page chain (S:FPPC)  
REMARKS: Swappers' free page pool must be nonzero at end of inswap. S:FPPH, S:FPPT contain head and tail of pages just allocated to the inswap user.

\*\*\*\*\*



\*\*\*\*\*

SCREECH CODE: #1C-00 CALLED FROM: SWAPPER

MESSAGE: INSWAP PROCESSOR SIZE EXCEEDS SIZE OF CLIST

REGISTERS: R1 = Index into processor inswap list  
R3 = Inswap processor number  
R4 = # of pages by which processor size exceeds available CLIST space.

REMARKS: A shared processor (possibly with an overlay) cannot be inswapped because its size exceeds the size of the command list space used for processor swapping.

\*\*\*\*\*

SCREECH CODE: #1D CALLED FROM: T:OV

MESSAGE: REQUESTED OVERLAY NUMBER IS OUT OF RANGE

REGISTERS: R2 = Overlay name  
R3 = Overlay name  
R4 = 0  
D4 = X'1D'

REMARKS: Requested monitor overlay not in shared processor table.

\*\*\*\*\*

SCREECH CODE: #1E CALLED FROM: SWAPPER

MESSAGE: NOT ENOUGH PAGES TO PERFORM THIS SWAP

REGISTERS: R3 = Page to release SR1 = Deficient page count

\*\*\*\*\*

CP-V TECHNICAL MANUAL

Section VS  
Page 10  
9/1/78

SCREECH CODE: #21 CALLED FROM: MM  
MESSAGE: ATTEMPT TO SET ACCESS CONTROLS ON NON-EXISTENT  
VIRTUAL PAGE  
REGISTERS: R6 = Number of pages to set R7 = Virtual page  
number SR4 = Link register

\*\*\*\*\*

SCREECH CODE: #22 CALLED FROM: TYPR  
MESSAGE: PRIVATE VOLUME ALLOCATION ERROR  
REGISTERS: R2 = SN Count  
R3 = DCB volume no.  
R4 = SYSID (0 = EXCL. use)  
R6 = DCB address  
SR4 = RTN. adr.  
D2 = DCB:SNT  
D4 = X'22'

REMARKS: Error in allocation; specified entry in AVRTAB not  
found or with bad flags.

\*\*\*\*\*

SCREECH CODE: #23 CALLED FROM: CSES7, CSES9,  
CSEX560, CSECOM  
MESSAGE: INVALID ENTRY TO CSE HANDLERS  
REGISTERS: None significant  
REMARKS: Entry was made to an unused slot of the CSE branch  
vector for this machine.

\*\*\*\*\*

SCREECH CODE: #24 CALLED FROM: CSEHAND  
MESSAGE: INSTRUCTION EXCEPTION TRAP IN MASTER MODE  
REGISTERS: All relevant information in in-core error log buffers.  
REMARKS: Trap X'4D' while in master mode. Slave mode trap  
causes normal user job step abort.

\*\*\*\*\*

SCREECH CODE: #25 CALLED FROM: CSEHAND  
MESSAGE: UNRECOVERABLE WATCHDOG TIMER TRAP  
REGISTERS: All relevant information in in-core error log buffers.  
REMARKS: Sigma 9 and Xerox 560 systems will attempt recovery from watchdog timer traps from I/O instructions without SCREECHing.

\*\*\*\*\*

SCREECH CODE: #26 CALLED FROM: CSEHAND  
MESSAGE: CSE TRAP DURING MFI,PFI HANDLING  
REGISTERS: All relevant information is in in-core error log buffers.  
REMARKS: On Sigma 9 during MFI handling, or on Xerox 560 during MFI or PFI handling, a CSE trap (X'46', X'4C', X'4D') occurred.

\*\*\*\*\*

SCREECH CODE: #27 CALLED FROM: CSEHAND  
MESSAGE: PROCESSOR FAULT INTERRUPT  
REGISTERS: All relevant information is in in-core error log buffers.  
REMARKS: For Xerox 560 systems only, a processor fault interrupt occurred for which continued operation is unlikely.

\*\*\*\*\*

SCREECH CODE: #28 CALLED FROM: CSEHAND  
MESSAGE: MEMORY PARITY ERROR - MEMORY ALTERED  
REGISTERS: All relevant information is in in-core error log buffers.  
REMARKS: Memory parity error correction caused memory to be altered, continuation without recovery not possible. Caused by I56 (Sigma 6/7) or T4C (Sigma 9, Xerox 560).

\*\*\*\*\*



SCREECH CODE: #2C-00 CALLED FROM: ADD

MESSAGE: BATCH SCHEDULING ERROR - MBS/CCI ERROR

REGISTERS:

R1	=	(S:CUN) current user #
R2	=	Device type
R3	=	Context block address
R5	=	0
R6	=	User's DCB addr (M:C)
SR2	=	OPNLD + .14
SR3	=	Context block address
SR4	=	OPNLD + .40
D1	=	BA (OPNLD+ .1E7) +.28
D2	=	BA (CONXT BLK+SCFQARGS) +.28
D3	=	Device type mnemonic text

REMARKS: Register contents significantly different from above indicate the monitor wandered into GETI in ADD. Otherwise, a batch user has been created and has read a card before MBS selected him to be run. Actually all recorded 2C's have been CCI attempting to start a second job. Problem is either CCI read past FIN or MBS/GETI communication (e.g., GIB:UN clobbered).

\*\*\*\*\*

SCREECH CODE: #2D-00 CALLED FROM: COOP

MESSAGE: COOPERATIVE BUFFER MANAGEMENT ERROR

REGISTERS:

R1	=	BUFLIMS index for S/C 19
R2	=	.BC11
R3	=	Context block
SR4	=	COOP+ .18D
D3	=	0

REMARKS: At context block initialization a buffer was allocated for the context block. This buffer has been lost through core clobbering or mismanagement of a buffer chain. The particular user cannot continue.

\*\*\*\*\*



SCREECH CODE: #2D-04 CALLED FROM: SUPCLS

MESSAGE: COOP DATA BUFFERS MISALLOCATED

REGISTERS: D3 = Buffer being released, including spare buffer index in byte 0.  
R5 = Context block 0 address and DBPOOL which is the address of the free context buffer list.  
R2 = SV:LSIZ  
SR4 = Return address of caller of RCBUFF.

REMARKS: An attempt was made to release a COOP data buffer when the free data buffer pool was full. Either the free data buffer pool has been clobbered or too many buffers have been allocated meaning some other COOP data area has been clobbered.

\*\*\*\*\*

SCREECH CODE: #2E CALLED FROM: RDF

MESSAGE: POOL BUFFERS LOST - NONE ALLOCATED CURRENTLY

REGISTERS: SR3 = DCB for which buffer is needed.  
D4 = X'2E'

REMARKS: An attempt was made to get an IPOOL or FPOOL buffer, but none were in free pool and no open DCB had any. Probably either DCB chain has been clobbered or one or more DCBs have been clobbered.

\*\*\*\*\*

SCREECH CODE: #2E-01 CALLED FROM: RA

MESSAGE: INCONSISTENCY IN READ-AHEAD TABLES

REGISTERS: R12 = Disc address

REMARKS: An attempt was made to add an AIR block to the tables when it was already there.

\*\*\*\*\*

SCREECH CODE: #30 CALLED FROM: PFSR  
MESSAGE: UNBALANCED POWER ON/POWER OFF INTERRUPT PAIRS  
REGISTERS: Indeterminate  
REMARKS: Unbalanced power on/power off interrupt pairs, more of one than another (usually power on, or else system would hang in wait, B \$-1).

\*\*\*\*\*

SCREECH CODE: #31 CALLED FROM: IORT  
MESSAGE: INVALID RESOURCE TYPE  
REGISTERS: SR4 = ADDRESS+1 where discovered.  
REMARKS: Invalid resource type found.

\*\*\*\*\*

SCREECH CODE: #32-00 CALLED FROM: IOQ  
MESSAGE: DCB DOESN'T CONTAIN A VALID DCT INDEX  
REGISTERS: R2 = Address of DCB  
REMARKS: DCT index not present in DCB.

\*\*\*\*\*

SCREECH CODE: #34-00 CALLED FROM: TPQ1  
MESSAGE: TRANSACTION PROCESSING FAILURE  
REGISTERS:  
REMARKS: The system queue manager for TP has discovered an unrecoverable state while processing transactions.

\*\*\*\*\*



CP-V TECHNICAL MANUAL

Section VS  
Page 17  
9/1/78

\*\*\*\*\*

SCREECH CODE: #37-00 CALLED FROM: ENQ  
MESSAGE: ENQ/DEQ TABLES MALFORMED  
REMARKS: Register values depend upon how EQSC00 was called.  
See code.

\*\*\*\*\*

SCREECH CODE: #3B CALLED FROM: OUTSYM  
MESSAGE: OUTSYM ATTEMPTED I/O ON A MISSING OR DOWN DEVICE  
REGISTERS: R14 = Disk address in error.  
REMARKS: The disk address passed to OUTSYM is either garbled  
or refers to a down device. OUTSYM cannot continue  
with this file.

\*\*\*\*\*

SCREECH CODE: #41-01 CALLED FROM: RTROOT  
MESSAGE: FAILED TO FIND USER'S STATE (M: INTSTAT)  
REGISTERS: R2 = Address of ICB being checked.  
REMARKS: Probably results from a state having been added to  
SCHED without updating the four masks used by the  
M:INTSTAT routine (WAIT:MASK, EXU:MASK,  
IOWAIT:MASK, BLCKD:MASK).

\*\*\*\*\*

CP-V TECHNICAL MANUAL

Section VS  
Page 18  
9/1/78

```
*****
SCREECH CODE:  #41-10                CALLED FROM:  RTNR
MESSAGE:        BAD IOEX CALL TO NEWQ
REGISTERS:      Set for BAL,R11 NEWQNW
REMARKS:        NEWQNW returned to BAL+1.
*****
SCREECH CODE:  #41-11                CALLED FROM:  RTNR
MESSAGE:        UNABLE TO RETURN PRE-EMPTED DEVICE
REGISTERS:
REMARKS:        RTNR's call to RMAOV was invalid.
*****
SCREECH CODE:  #43-01                CALLED FROM:  CLOCK4
MESSAGE:        NO ICBs CHAINED INTO RTICBCLKHDR
REGISTERS:      Not relevant
REMARKS:        Would probably be caused by overwriting lowcore.
*****
SCREECH CODE:  #43-02                CALLED FROM:  CLOCK4
MESSAGE:        ICBCLK FIELD OF ICB NEGATIVE
REGISTERS:      R2   =   Address of bad ICB
                 R10  =   Current timer increment
REMARKS:        The ICBCLK field of an ICB should never go negative.
*****
```

\*\*\*\*\*

SCREECH CODE: #43-03 CALLED FROM: RTNR, CLOCK4

MESSAGE: NO BACK-LINK FOUND IN DE-CHAINED ICB

REGISTERS: R2 = Current ICB (the one being de-chained)  
R4 = Forward link (next ICB in chain)

REMARKS: A back-link of zero implies that the current ICB is SYSCB1 (the 1-second CLOCK3 ICB). This ICB should never be de-chained (i.e., de-activated).

\*\*\*\*\*

SCREECH CODE: #46-21 CALLED FROM: PV

MESSAGE: PRIVATE VOLUME LOGIC INCONSISTENCY

REGISTERS: SR4 = Address where error was detected.

REMARKS: Numerous modules call PVERR.

\*\*\*\*\*

SCREECH CODE: #49 CALLED FROM: TYPR

MESSAGE: RESOURCE PREALLOCATION INCONSISTENT WITH REQUESTS

REGISTERS: R2 = 0  
R3 = Reel number  
D4 = X'49'

REMARKS: Due usually to MBS failure to properly set/reset resource flags or resource (tape or private volume) not properly or fully released back to system.

\*\*\*\*\*

SCREECH CODE: #56 CALLED FROM: MOCIOP

MESSAGE: UNABLE TO RELEASE PHYSICAL WORK PAGE

REGISTERS: Registers at time of trap.

REMARKS: Originates in MOCIOP module when unable to release a physical work page locked in core during Transaction Processing I/O on a Message Oriented Controller (e.g., 7605).

\*\*\*\*\*

\*\*\*\*\*

SCREECH CODE: #61 - (Trap Cell) CALLED FROM: INITRCVR  
 MESSAGE: TEL OR CCI HAS TRAPPED  
 REGISTERS: Registers at time of trap.  
 REMARKS: Trap occurred while operating mapped, slave, and with  
 TEL-in-control set. Subcode is trap location.

\*\*\*\*\*

SCREECH CODE: #62 CALLED FROM: SCHED  
 MESSAGE: USER PROGRAM TOO LARGE FOR PHYSICAL MEMORY  
 REGISTERS: R0 = Pages freed  
 R4 = Inswap user (S:ISUN)  
 REMARKS: R0 greater than SL:CORE, user got swapped out but now  
 can't fit back in; pages may be released but not  
 reported; JIT-in-core flag = 0 (UH:FLG X'200').

\*\*\*\*\*

SCREECH CODE: #63 CALLED FROM: DPSIO  
 MESSAGE: INSUFFICIENT INFORMATION AVAILABLE TO SWAP THIS USER  
 REGISTERS: R2 = IOCD  
 R6 = Command list address  
 R7 = Function code  
 D4 = X'63'  
 REMARKS: Insufficient data to complete function, follow-on  
 function code invalid, or flags not set properly;  
 disk pack-only swappers.

\*\*\*\*\*







SCREECH CODE: #87 CALLED FROM: ALLOCAT

MESSAGE: ALLOCATION BUFFERS CONTAIN INVALID WORD COUNT

REGISTERS: R2 = Stack count  
R1 = Stack number

REMARKS: Either low core has been clobbered or some one has changed ALLOCAT's in-core data.

\*\*\*\*\*

SCREECH CODE: #88 CALLED FROM: SCHED

MESSAGE: ALLOCAT CLOBBERED ONE OF THE ALLOCATION BUFFERS

REGISTERS: R1 = Stack index  
R3 = Stack count

REMARKS: ALLOCAT end-action has discovered discrepancy in granule/cylinder stacks.

\*\*\*\*\*

SCREECH CODE: #89-00 CALLED BY: ALLOCAT

MESSAGE: ALLOCAT'S HGP CHAIN CLOBBERED

REGISTERS: R7 = Invalid HGP chain address  
R9 = ALLOCAT internal link register

REMARKS: ALLOCAT data (HGPs and TABLES) has been destroyed.

\*\*\*\*\*

SCREECH CODE: #89-10 CALLED FROM: ALLOCAT

MESSAGE: DATA CHECKSUM ERROR

REGISTERS: None

REMARKS: ALLOCAT data (HGPs and TABLES) has been destroyed,

\*\*\*\*\*



```

*****
SCREECH CODE:  #93                      CALLED FROM:  DPSIO, TSIO
MESSAGE:       TDV COMMAND ADDRESS DOESNT POINT TO COMMAND LIST
REGISTERS:    R1   =   0
              SR1  =   Command list address from TDV
              SR2  =   TDV status
              D2   =   Cmd. list pointer (S:BECL,R1)
REMARKS:      IOP/memory failure; extraneous entry to TSIO/DPSIO
              not generated within CLIST.

```

```

*****
SCREECH CODE:  #94                      CALLED FROM:  DPSIO, TSIO
MESSAGE:       COMMAND LIST CLOBBERED DURING WRITE CHECK
REGISTERS:    SR1  =   Incorrect command list entry address
              SR2  =   TDV status
              R12  =   Order code from incorrect command
                   list entry
REMARKS:      Can't find seek or TIC within next five command list
              entries following error entry, on write or write
              check.

```

```

*****
SCREECH CODE:  #95                      CALLED FROM:  DPSIO, TSIO
MESSAGE:       UNRECOVERABLE I/O ERROR READING USER'S JIT
REGISTERS:    R1   =   Inswap user number (S:ISUN)
              R7   =   DCT Index
              SR1  =   Command list address from TDV status
              SR2  =   TDV status

```

```


*****
SCREECH CODE:  #96                      CALLED FROM:  DSPIO, TSIO
MESSAGE:       UNRECOVERABLE I/O ERROR READING SHARED PROCESSOR
REGISTERS:    R1   =   Inswap user number (S:ISUN)
              R7   =   DCT index
              SR1  =   Command list address from TDV status
              SR2  =   TDV status

```

CP-V TECHNICAL MANUAL

(This page intentionally left blank.)

PWPTABLE - Physical Work Pages for TP

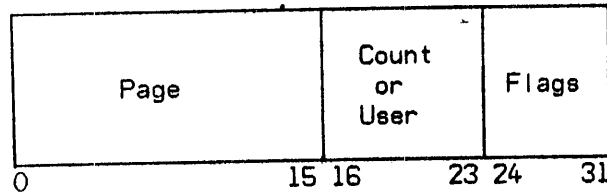


Length = PWPEND - PWPTABLE+1

Bit

- 0-15      Physical page number (left-justified)
- 16-23    If bit 26 is 0 - assign count; if bit 26 is 1 - user number
- 24        Reserved
- 25        Reserved
- 26        Release is being accomplished by clock processing due  
          to unavailability of work space
- 27        Virtual window is being established in user in order  
          to assign a page
- 28        Reserved
- 29        Page has been acquired by calling GPWP (Get Physical Work Page)
- 30        Page has been acquired by APWP (Assign Physical Work Page)
- 31        0 - this word in PWPTABLE is free for use  
          1 - this word in PWPTABLE is currently in use


SL:PWP



Bit

- 0-31      Current limit of physical work pages

S:PWP#



Bit

- 0-31      Current count of physical work pages

CP-V TECHNICAL MANUAL

SECTION VT  
PAGE 2  
10/31/74

TTP RESIDENT TABLE - QUEUE MANAGEMENT ELEMENTS

0	78	1516	2324	31
	Q: MAP			0
Q: CC	Q: CFU			1
Q: NSN	Q: SN			2
Q: MAX	Q: INXCONTROL			3
Q: DEF				4
Q: GET				5
Q: GET				6
	Q: LID	Q: MIN	Q: INXNAV	7
	Q: QHEAD			8
	Q: QTAIL			9
	Q: QTAIL			10
	Q: QTAIL			11
	Q: INXTAIL			12
	Q: MPOOL			13
	Q: TID			14
Q: USR	Q: SAT	Q: PAGES	Q: DWN	15
Q: TPPP				16
Q: TPPTAIL				17
Q: CONT				18
Q: CONTTAIL				19
Q: DATA				20
Q: DATATAIL				21
Q: PAUSE				22

TTP Table Item Descriptions

<u>Item Name</u>	<u>(Bit/Byte) Word</u>	<u>Type</u>	<u>Description</u>
Q:BACK	0 (6)	Bit	Backup option requested during unlock, 1 = yes
Q:CC	1 (0)	Byte	I/O completion code; set by end-action
Q:CFU	1	Address	Real address of the queue CFU table
Q:CONT	18 - 19	Word	Chain header, queue control blocks
Q:CONTTAIL			
Q:DATA	20 - 21	Word	Chain head/tail, queue data blocks
Q:DATATAIL			
Q:DEF	4	Doubleword	Chain head/tail, inactive criteria control (points to U:QLIST)
Q:GET	6	Doubleword	Chain head/tail, active criteria control entries (points to U:QLIST)
Q:INXNAV	8 (3)	Byte	Maximum number of keys in an index block
Q:INX	11 - 12	Word	Chain header, queue index blocks
Q:INXTAIL			
Q:INXCONTROL	3	Address	Address of the index control block
Q:LID	8 (0)	Halfword	Identification number to be assigned to the next GET list; initialized during queue unlock processing
Q:LOCK	0 (2)	Bit	Queue status, 1 = unlocked

CP-V TECHNICAL MANUALSECTION VT  
PAGE 4  
10/31/74

<u>Item Name</u>	(Bit/Byte) <u>Word</u>	<u>Type</u>	<u>Description</u>
Q:MAP	0	Address	Address of the Queue Allocation Map
Q:MAX	3 (0)	Byte	Maximum number of queue index blocks retained in core
Q:MIN	8 (2)	Byte	Minimum number of pages required for queue blocks
Q:MPOOL	13	Address	Monitor Buffer Address (MPOOL)
Q:NSN	2 (0)	Byte	Number of volumes if queue is on private storage
Q:OWN	15 (3)	Byte	User number, queue owner
Q:PAUSE	22	Bit	Queue in lock, pause mode
Q:PAGES	15 (2)	Byte	Current number of physical pages allocated for queue usage
Q:QHEAD	9	Address	Word address, head of chain of users queued for access or space (U:QUES)
Q:QTAIL	10	Address	Word address, tail of chain of users queued for access or space (U:QUES)
Q:RCV	0 (7)	Bit	Recovery in progress, 1 = yes
Q:SAT	15 (1)	Byte	Queue saturation percentage to accept high priority PUTs only
Q:SN	2	Address	Address of the queue serial numbers for private storage
Q:TID	14	Word	Highest TID
Q:TPPP	16 - 17	Word	Chain header, queue physical pages
Q:TPPPTAIL			
Q:USR	15 (0)	Byte	User number, current queue I/O operation

RECOVERY TABLES

Core Dump Format

CORE is converted to a page number and the space required is compared with the RAD space available (RCVRDSZ). If space needed exceeds space available, TAPDMP is called. Otherwise, RCVRAD+2 is entered into the RECOVERY buffer.

CORE is dumped with an SIO and command chain in RCVDMF.

Following system reboot and core initialization, but before swapping RAD initialization, the dump space on RAD is written as a keyed file on the file RAD.

The keys for core pages are 

03	00	00	Page#
----	----	----	-------

The user JITS are added to the keyed file with keys of 

03	user#	00	00
----	-------	----	----

.

Dump Tape Format

The dump tape is a labeled tape and each logical record is one page of core memory.

The label sentinel is :LBL RCVT.

The identification sentinel is :ACN :SYSbbbb Date of the crash in format from DATE and DATE+1.

Tape mark

The beginning of the file sentinel is:

:BOF				
01	00	02	02	
7	T	A	P	file name is TAPDUMP
D	U	M	P	
09	01	00	02	ORG is conseq., VOL is 1
01	00	00	00	
00	00	00	00	

Tape mark

Control record

Each data record is 512 words.

The tape mark record is:

```

                                tape mark
                                :EOF
                                3*4           previous block size
tape mark
                                end of reel sentinel terminates the dump
                                tape mark
                                :EOR
                                NULL
                                tape mark
                                tape mark

```

Recovery Buffer

Each item of information within the Recovery buffer is followed by an identification word. The identification consists of an id code in byte 0 and the word count of the information item in bytes 2 and 3. The items are not necessarily in the buffer in id order.

<u>ID</u> <u>CODE</u>	<u>PROBABLE</u> <u>COUNT</u>	<u>ITEM</u>
01	64+5+2	SGRAN, BGRAN, CURGRAN, FGRAN1, CURBUF and contents of CURBUF and 2 preceding words
02	16	Administrative message (COCMES)
03	3	Initial and final RCVRAD from RCVOMP and RCVRCNT
04	size	Size of RECOVERY buffer
05	1	Dump tape identification
06	value	Down device number
07	value	Number of locked symbiont devices + 1, RCVRCNT, and SGB
08	logged on users	User #, swap index, seek address (8, 8, 16)
09	149	Partition limits, system limits
0A		Unused
0B	0	HGP reconstruction required
0C		Unused
0D	1	First disc address of granule stack for release
0E		Unused
0F	4	Write symbiont ghost recovery files
10	61 (SGCBUFSZ)	Symbiont ghost communication buffer
11	1	Symbiont ghost error word



BUFFER LAYOUT:

. . . . | DATE | DATE+1 | TIME | 02 3 | 04 | SIZE |

DESCRIPTION:

The Recovery buffer is a RES of 1024 words in the data area of RECOVERY. When RECOVERY processing is completed, the size of the Recovery buffer and its contents are moved to the first 2 granules of RCVRAD on the system RAD. Since the JITS are used by the second phase, any JITS occupying the area of the system swapping RAD where GHOST1 will be swapped must be moved to some other space on the RAD. MVEBUF accomplishes this by investigating the JIT addresses saved in the Recovery buffer and calling RDRAD1 and WRRAD1.

The data (00 protection) and AJIT pages of the symbiont ghost job (RBBAT) also must not be in the area of the system swapping RAD where GHOST1 will be swapped. These pages are moved at the same time as user JITS.

Power Fail-Safe Interrupt Status Tables

PFSRARM - Arm flip-flop status  
PFSRTRIG - Trigger flip-flop status  
PFSRENAB - Enable flip-flop status

These are halfword tables with a halfword for each interrupt group, including the non-existent group one, SYSGENed in the system.

## INDEX

\*RB:MFAD, VR-2  
\*RB:SPMF, VR-2  
\*RBH:MF, VR-2  
:ACCTLG, VN.02-1  
:AMHED, VA.01-1  
:LOGSZ, VA.01-1  
:PROCS, VN.05-1  
:RATES, VN.03-1  
:RBLOG, VN.04-1  
:UBML, VN.01-3  
:UBMR, VN.01-3  
:UGML, VN.01-3  
:UGMR, VN.01-3  
:UNML, VN.01-3  
:UNMP, VN.01-3  
:UNMR, VN.01-3  
:UOML, VN.01-3  
:UOMR, VN.01-3  
:UPFLGS, VN.01-3  
:USER, VN.01-1  
2780, VR-4, -7  
3COUNT, VK.01-1

### A

ABO, VA-4  
ACCN, VA-3  
ACCO, VI.01-4  
ACCOUNT DIRECTORY, VH.02-1  
ACCOUNTING RECORD, VN.02-1  
ACNCFU, VH.08-2  
AIR, VH.21-2  
ALLOCATION, VH.07-1  
ALOCCT, VA-5  
ANS, VH.16.01-2  
ANS DCB, VH.11-1  
ANSFLGS, VG.04-4  
ARSZ, VG.05-1  
ASSIGN/MERGE, VA-11, VL-1  
ATITLE, VA-6  
AVR, VG.04-1  
AVRFLGS, VG.04-5  
AVRFNMT, VG.04-4  
AVRID, VG.04-1  
AVRNOU, VG.04-1  
AVRTBL, VG.04-1, -2  
AVRTBLNE, VG.04-1  
AVRTBLSIZ, VG.04-1

### B

B4W:RES, VI.02-2  
BAABC, VA-4  
BARNST, VA-4

BATAPE, VG.04-1, -2  
BB: . . . VI.02-2  
BCP, VF.01-1  
BD:ACCT, VI.02-2  
BGRAN, VK-2  
BH: . . . , VI.02-1, -2  
BPRI, VP-13  
BREF, VO-9  
BSCIO, VR-7  
BUFCNT, VG.05-1  
BUFFER, VF.01-3  
BUP, VF.01-1  
BW:FORM, VI.02-2  
BW:SDA, VI.02-2

### C

C1, VG.03-6  
CBPOOL, VI.01-6  
CCBEF, VA-4  
CCLFLAGS, VA-5  
CCLTFLAGS, VA-5  
CDPO, VA-5  
CEXT, VA-3  
CFU, VH.08-1  
CFU, USER, VH.08-7  
CIC, VA-4  
CIT, VG.01-1, VG.02-2  
CLL, VF.01-1  
CO: . . . , VG.05-3, -4  
COB:SIOS, VG.05-3  
COC, VG.05  
COCBUF, VG.05-4  
COCHPB, VG.05-4  
COCII, VG.05-1  
COCIR, VG.05-1, -4  
COCO1, VG.05-1  
COCOC, VG.05-1  
COCOR, VG.05-1, -4  
COCTERM, VG.05-1  
COD:HWL, VG.05-2  
COD:LPC, VG.05-2  
COH: . . . , VG.05-3  
CONSECUTIVE, VH.18-1  
CONTEXT BLOCK, VI.01-7A  
CONTEXT BLOCK DISPLACEMENT SYMBOLS, VI.02-12  
COOP CONTEXT, VI.01-9  
COOPERATIVE, VI.01-1  
COPPGS, VI.01-6  
CPE, VA-4  
CPI, VG.05-1  
CPO, VA-4  
CPOS, VG.05-1  
CPPO, VA-4

CRESDF, VP-11  
CSE STOP, VK.01-1  
CSED\$, VK.01-1  
CUL, VF.01-1  
CUPO, VA-5  
CURBUF, VK-2  
CURGRAN, VK-2

## D

DBMAX, VI.01-6  
DBPOOL, VI.01-6  
DCACCESS, VA-9  
DCBLINK, VA-6  
DCBTAB, VO-1  
DCT, VG.01-1, VG.03-4  
DCW, VG.01-1  
DDLL, VF.01-1  
DDUL, VF.01-1  
DEQ, VQ-1  
DEVICE DCB, VH.12-1  
DISK ADDRESS, VH.17-1  
DLL, VF.01-1  
DO, VA-5  
DO LIST, VP-7  
DOT, VG.02-2  
DPACCESS, VA-9  
DSCIO, VR-7  
DTT, VG.03-1  
DUL, VF.01-1  
DUMP, VU-1  
DYNRESDF, VP-11

## E

E:..., VC-2  
EAPL, VG.05-2  
EAPLLC, VG.05-2  
EAPLOC, VG.05-2  
ECB, VA-5  
ENQ, VQ-1  
EOMTIME, VG.05-1  
ERLFLAGS, VA-5  
ERO, VA-4  
ERRFLGS, VA-5  
ERROR CODE, VM-1  
ERROR LOG, VK-1  
ERROR LOG CODES, VK-20  
ERROR LOG ENTRIES, VK-8  
ERROR MESSAGES, VM-1  
ERROR SUBCODE, VM-1  
ESTD, VG.05-2  
ESTDLC, VG.05-2  
ESTDUC, VG.05-2  
EUP, VF.01-1  
EVENT TRANSITION, VC-1

EVENTS, VC-2  
EXPRESSION STACK, VO-11

## F

FGRAN1, VK-2  
FILCFU, VH.08-5  
FILE DCB, VH.09-1  
FILE DESCRIPTORS, VH.03-3  
FILE DIRECTORY, VH.03-1  
FIT, VH.04-1  
FSP, VH.03-4

## G

GENERALIZED DISK ADD., VK-54  
GFC, VI.02-17  
GHOST, VE-3  
GI TABLES, VI.02-9  
GI:..., VI.02-9  
GIB:..., VI.02-9  
GIH:IM, VI.02-9  
GLOBAL, VO-13  
GLOSSARY, VK-9  
GPRIOR, VP-13  
GROUP CODE, VM-1

## H

HANSWAPS, VA-4  
HASPIO, VR-7  
HEAD, VO-3  
HGP, VH.07-1  
HIGHER INDEX, VH.01-4

## I

IA, VD-1  
ICB, VP-1, -10  
ICBSIZE, VP-10  
INSYM CONTEXT, VI.01-8  
INTENT, VA-5  
INTERNAL SYMBOL, VO-13  
INTLB1, VP-12  
INTLB2, VP-12  
INTLB3, VP-12  
INTLBSIZ, VP-12  
IOQ, VG.02-1  
IOTIME, VA-3  
IRBT, VR-4  
IREL, VP-7

J

J:ABC, VA-4  
 J:ABUF, VA-6  
 J:ACCN, VA-3  
 J:AJ, VA-10  
 J:AJIT, VA-12  
 J:ALB, VA-5  
 J:AMR, VA-11  
 J:ASPIN, VA-5  
 J:ASSIGN, VA-4  
 J:BASE, VA-11  
 J:BUP, VA-8  
 J:CALCNT, VA-3  
 J:CASSIN, VA-5  
 J:CBBUF, VA-4  
 J:CCBUF, VA-8  
 J:CFLAGS, VA-7  
 J:CL, VA-12  
 J:CLE, VA-11  
 J:CLL, VA-9  
 J:CLM, VA-8  
 J:CLPA, VA-10  
 J:CLS, VA-9  
 J:CPPO, VA-4  
 J:CPROCS, VA-7  
 J:CTIME, VA-3  
 J:CUP, VA-9  
 J:DCBLINK, VA-6  
 J:DCBLINK, VO-1  
 J:DCBLL, VA-9  
 J:DCBUL, VA-9  
 J:DDLL, VA-8  
 J:DDUL, VA-8  
 J:DELTAT, VA-3, -7  
 J:DLL, VA-8  
 J:DUL, VA-8  
 J:DWSK, VA-8  
 J:EUP, VA-8  
 J:EXLY, VA-4  
 J:EXTENT, VA-7  
 J:FDPA, VA-11  
 J:ICBHDR, VA-11  
 J:IDELTAT, VA-7  
 J:INTENT, VA-5  
 J:INTER, VA-5  
 J:JAC, VA-11  
 J:JIP, VA-5  
 J:JIT, VA-3  
 J:LMN, VA-8  
 J:MRT, VA-3  
 J:NRS, VA-4  
 J:OVHTIM, VA-3  
 J:OVRLY, VA-7  
 J:PLL, VA-8  
 J:PTIME, VA-3  
 J:PUF, VA-7  
 J:PUL, VA-8  
 J:RNST, VA-4  
 J:RWECB, VA-5

J:STAR, VA-11  
 J:START, VA-8  
 J:T, VA-11  
 J:TCB, VA-6, VO-1  
 J:TELBUF, VA-7  
 J:TELFLGS, VA-5  
 J:TIC, VA-11  
 J:TIMENT, VA-5  
 J:TITLE, VA-6  
 J:TRAP, VA-4  
 J:TREE, VA-6, VO-1  
 J:UN, VA-3  
 J:UNAME, VA-3  
 J:USCDX, VA-6  
 J:USENT, VA-6  
 J:USER, VA-9  
 J:UTIME, VA-3  
 J:UTIMER, VA-5  
 J:VLCS, VA-10  
 J:XP, VA-6  
 JACB, VA-4  
 JACCN, VA-3  
 JAJ, VA-10  
 JASSIGN, VA-4  
 JB:BCP, VA-9  
 JB:CBUC, VA-9  
 JB:COR, VA-10  
 JB:FBUC, VA-9  
 JB:FBUL, VA-9  
 JB:FRS, VA-9  
 JB:LC, VA-7  
 JB:LMAP, VA-11  
 JB:LPP, VA-7  
 JB:MAX, VA-9  
 JB:MNPA, VA-9  
 JB:NFPPOOL, VA-6  
 JB:NRG, VA-10  
 JB:ORG, VA-5  
 JB:PCC, VA-9  
 JB:PCD, VA-9  
 JB:PCDCB, VA-9  
 JB:PCDD, VA-9  
 JB:PCP, VA-9  
 JB:PCW, VA-7  
 JB:PECK, VA-10  
 JB:PMTS, VA-10  
 JB:PNR, VA-10  
 JB:PPC, VA-10  
 JB:PRIV, VA-6  
 JB:PROMPT, VA-7  
 JB:SLNK, VA-10  
 JB:STEP, VA-5  
 JB:STEPCC, VA-10  
 JB:TDP, VA-9  
 JB:TMST, VA-10  
 JB:VLH, VA-10  
 JB:VLT, VA-10  
 JB:XLNK, VA-10  
 JBBCP, VA-9  
 JBCBLL, VA-9

JBCBUC, VA-9  
JBFBFP, VA-9  
JBFBUC, VA-9  
JBLMAP, VA-11  
JBMNPA, VA-9  
JBNASP, VA-9  
JBNFPOOL, VA-6  
JBNRG, VA-10  
JBPC, VA-9  
JBPCDD, VA-9  
JBPCP, VA-9  
JBPPC, VA-10  
JBTD, VA-9  
JBUP, VA-8  
JBVLH, VA-10  
JCL, VA-12  
JCLE, VA-11  
JCLP, VA-11  
JCLPA, VA-10  
JCLT, VA-11  
JCMAP, VA-12  
JCPPPO, VA-4  
JDA, VA-12  
JDCBLL, VA-9  
JDCBUL, VA-9  
JDDLL, VA-8  
JDDUL, VA-8  
JDLL, VA-8  
JDUL, VA-8  
JEUP, VA-8  
JH:DA, VA-12  
JH:LDCF, VA-10  
JH:PC, VA-6  
JIT, VA-1, -3  
JITREE, VA-6  
JJAC, VA-11  
JJITVP, VF.01-1  
JLMAP, VA-11  
JOPT, VA-8  
JPCP, VA-9  
JPLL, VA-8  
JPPC, VA-10  
JPPH, VA-10  
JPPT, VA-10  
JPUF, VA-7  
JPUL, VA-8  
JRBID, VA-5  
JRESOPT, VA-8  
JRNST, VA-4  
JSPBFLG, VA-9  
JSTDOPT, VA-8  
JTEFLGS, VA-5  
JUNAME, VA-3  
JVLS, VA-10  
JVLH, VA-10  
JVLT, VA-10  
JX:, VA-1  
JX:CMAP, VA-12  
JX:PPH, VA-10  
JX:PPT, VA-10

JXCMAP, VA-12  
JXPPH, VA-10  
JXPPT, VA-10

## L

L1, VG.03-6  
L6LIMS, VG.05-5  
LG# FIRST, VG.05-5  
LABELED TAPE DCB, VH.10-1  
LABELED TAPE RECORD FORMAT, VH.16.01-4  
LABELED TAPE SENTINELS, VH.16.01-1  
LASTICB, VP-10  
LB:UN, VG.05-1  
LDEV, VG.03-4  
LDEVCNT, VI.01-6  
LDVCONST, VG.03-2  
LDVEX, VI.01-4  
LIBRARY, VO-7  
LINK, VO-2  
LNOL, VG.05-1  
LOAD, VO-2  
LOCCT, VO-15  
LP, VA-5  
LPART, VI.02-7  
LSERIAL, VI.02-5

## M

M:FRGD, VP-10  
M:IMC, VP-12  
M:SGP, VF.02-2  
M:SPROCS, VE-1  
M:UC, VA-6  
M:XX, VA-8  
MASTER INDEX, VH.01-1, -4  
MAXG, VE-3  
MAXOVLY, VE-2  
MBS, VI.02-1, -4  
MDPO, VA-5  
MDYNRESDF, VP-11  
MEMORY, VF.01-1  
MEMORY ALLOCATION, VF.01-2  
MEMORY AND STOLEN PAGE DATA, VF.02-5  
MJCFLG, VA-5  
MODE, VG.05-1  
MPO, VA-4  
MPOOL, VF.01-3  
MPPO, VA-4  
MRT, VA-3  
MUPO, VA-5  
MXFPL, VA-8  
MXSTRM, VI.01-3

## N

NFPOOL, VA-6  
NSWAPS, VA-4

## O

OB:..., VG.03-1  
OB:BOPTX, VG.03-2, -4  
OB:BTX, VG.03-2, -4  
OB:GODTX, VG.03-4, -2  
OB:GTX, VG.03-2, -4  
OB:OOPTX, VG.03-2, -4  
OB:OTX, VG.03-2, -4  
OH:NM, VG.01-1, VG.03-2  
OPRIO, VP-13  
OV:NM, VG.03-4  
OV:NMSZ, VG.03-2, -5  
OV:SIZ, VG.03-2, -4  
OVHTIME, VA-3

## P

P:AC, VE-2  
P:NAME, VE-1, -2  
P:SA, VE-1, -2  
P:TCB, VE-2  
P1, VG.03-6  
PACK, VG.04-3  
PARTITION, VI.02-6  
PAT, VI.02-11  
PB:..., VE-1, -2  
PBT:LOCK, VE-2  
PER, VF.01-3  
PFA, VF.01-3  
PFSRARM, VU-3  
PFSRENAB, VU-3  
PFSRTRIG, VU-3  
PH:DDA, VE-2  
PH:FRQ, VE-2  
PH:PDA, VE-2  
PL:..., VI.02-6  
PLB:..., VI.02-6  
PLB:MAX, VI.02-7  
PLB:MIN, VI.02-7  
PLD:ACT, VI.02-6  
PLH:..., VI.02-6  
PLL, VF.01-1  
PNAMEND, VE-2  
POWER FAIL-SAFE, VU-3  
PP:UPPC, VP-11  
PP:UPPH, VP-11  
PP:UPPT, VP-11  
PPMD, VA-4  
PPROCS, VE-2  
PPTABDSK2, VP-11  
PPTABLE, VP-11  
PPTABLSZ, VP-11  
PRDCRM, VA-10  
PRDPRM, VA-10  
PRIVATE, VH.06-1, VH.20-1  
PRT, VA-4  
PSA, VF.01-3

PUBLIC, VH.19-1  
PUF, VA-4  
PUL, VF.01-1  
PWPENO, VT-1  
PWPTABLE, VT-1  
PX:..., VE-1  
PX:HPP, VE-2  
PX:TPP, VE-2

## Q

Q:..., VT-3  
QECB, VQ-4  
QFREE, VG.02-1  
QHEAD, VQ-1  
QHHP, VQ-2  
QHNAME, VQ-2  
QHVP, VQ-2  
QQF, VQ-2  
QQHP, VQ-2  
QQUN, VQ-2  
QT, VQ-2  
QUEA, VQ-4  
QUEUE, VQ-2, VT-2  
QUEUE HEAD, VG.01-1  
QUHP, VQ-2  
QUPP, VQ-4  
QUVP, VQ-2

## R

R:..., VC-1  
RA:..., VH.21-2  
RA:DA, VH.21-1  
RA:SGET, VH.21-3  
RAB:BLINK, VH.21-2  
RAB:FLINK, VH.21-1  
RAB:USER, VH.21-1  
RAH:DCB, VH.21-1  
RAH:TIME, VH.21-1  
RASIZE, VH.21-1  
RAT, VG.03-4, VI.02-4  
RATE VN.03-1  
RAX:PAGE, VH.21-1  
RB:BUF, VR-1  
RB:FLAG, VR-1, -3  
RBB:BCB, VR-1  
RBB:CPZ, VR-2  
RBB:DSM, VR-2  
RBB:HFE, VR-1  
RBB:HIN, VR-1  
RBB:HOU, VR-1  
RBB:ID, VR-1  
RBB:LPZ, VR-2  
RBB:MXP, VR-2  
RBB:SFC, VR-2

RBB:SMD, VR-2  
 RBB:SPC, VR-2  
 RBBAT, VI.01-5, VI.02-1  
 RBBAT COMBUF, VI.02-17  
 RBD:WSN, VR-1  
 RBH:ACK, VR-1  
 RBID, VN.04-1  
 RBLIMS, VR-1  
 RBSSS, VR-7  
 RCVDMP, VU-1  
 READ-AHEAD, VH.21-1  
 REAL TIME, VP-1  
 RECOVERY, VU-1  
 REF, VO-9  
 REF/DEF, VO-10  
 RELOCATION DICTIONARY, VO-12  
 REMOTE PROCESSING ERROR RECORD, VK-42  
 RESDF, VP-11  
 RESDFP, VP-11  
 RNST, VA-4  
 RP1, VK-42  
 RP2, VK-42  
 RP3, VK-42  
 RP4, VK-42  
 RSERIAL, VI.02-5  
 RSZ, VG.05-1  
 RT:GINTP, VP-10  
 RT:UINTP, VP-10  
 RTICBCLKHDR, VP-7  
 RTICBHDR, VP-10, -7  
 RUN STATUS, VA-4  
 RUNFLAG, VA-4

## S

S:BADFLG, VC-4  
 S:BCL, VC-3  
 S:BDA, VC-3  
 S:CPINC, VC-4  
 S:CUT, VC-4  
 S:ECL, VC-3  
 S:GJOBACN, VE-3  
 S:GJOBTBL, VE-3  
 S:IOPINC, VC-4  
 S:IRPINC, VC-4  
 S:OPC, VC-1  
 S:PRIODEC, VC-4  
 S:PWP#, VT-1  
 S:RTIR, VC-4  
 S:SCL, VC-3  
 S:SET, VC-1  
 S:SYMDB, VI.02-11  
 S:SYMDBG, VI.02-11  
 S:SYMDO, VI.02-11  
 S#B:TYP, VI.02-3  
 S#H:LNK, VI.02-3  
 S#W:SER, VI.02-3  
 SAPL, VG.05-2

SAPLLC, VG.05-2  
 SAPLUC, VG.05-2  
 SB:FPL, VC-3  
 SB:GJOBUN, VE-3  
 SB:HQ, VE-3, -4  
 SB:IOTA, VC-1  
 SB:LTY, VG.03-2, -5  
 SB:OSUL, VC-3  
 SB:PNL, VC-3  
 SB:RBDP, VG.03-3, VI.02-4  
 SB:RBMX, VG.03-3, VI.02-4  
 SB:RGDF, VI.02-4  
 SB:RGMF, VI.02-4  
 SB:RGMX, VG.03-3  
 SB:RODF, VG.03-3, VI.02-4  
 SB:ROMX, VG.03-3, VI.02-4  
 SB:RQ, VC-1, -4  
 SB:RTY, VG.03-3, VI.02-4  
 SB:SET, VC-1  
 SB:SWP, VC-1  
 SB:TQ, VC-3, -4  
 SCHEDULER QUEUES, VC-1  
 SCNTXT, VI.01-3  
 SCO-10, VC-1, -2  
 SCREECH, VS-1  
 SCREECH CODE, VS-1  
 SCU, VC-2  
 SERVICE LIMIT, VI.02-10  
 SGCHD, VI.02-18  
 SGRAN, VK-2  
 SH:RTOT, VI.02-4  
 SH:EDA, VC-3  
 SH:LNK, VG.03-2, -5, VI.01-6  
 SH:OPNM, VG.03-2, -4  
 SH:RBCU, VG.03-3, VI.02-4  
 SH:RBSUM, VG.03-3, VI.02-4  
 SH:RGCU, VI.02-4  
 SH:RGSUM, VG.03-3, VI.02-4  
 SH:RNM, VG.03-3, VI.02-4  
 SH:ROCU, VG.03-3, VI.02-4  
 SH:ROSUM, VG.03-3, VI.02-4  
 SH:RTOT, VG.03-3  
 SH:SDA, VC-3  
 SH:SYMT, VI.02-11  
 SIO, VG.01-1  
 SIOMF, VC-2  
 SIOW, VC-2  
 SL:AIRM, VH.21-3  
 SL:AIRTO, VH.21-3  
 SL:BDF, VI.01-10  
 SL:BMX, VI.01-10  
 SL:BPRIO, VP-13  
 SL:GDF, VI.02-10  
 SL:GMX, VI.02-10  
 SL:GPRIO, VP-13  
 SL:NAME, VI.02-10  
 SL:ODF, VI.02-10  
 SL:OMX, VI.02-10  
 SL:OPC, VC-1  
 SL:OPRIO, VP-13

SL:PWP, VT-1  
SL:RAMF, VH. 21-3  
SL:RAMR, VH. 21-3  
SL:RATOR, VH. 21-3  
SMAXOUT, VC-3  
SMUIS, VD-1  
SNDDX, VI. 01-3  
SNDDXSIZ, VI. 01-3  
SNULL, VC-2  
SOFTWARE CHECK, VS-1  
SOLICIT, VG. 04-1  
SPSIZE, VE-2  
SQ, VQ-2  
SQA, VC-1, -2  
SQFI, VC-1, -2  
SQHD, VI. 01-3  
SQR, VC-1, -2  
SQRO, VC-1, -2  
SRTL, VI. 01-3  
SQUE, VI. 01-3  
SRET, VI. 01-3  
SRT, VC-1, -2  
SS, VA-4  
SSIG, VI. 01-3  
SSTAT, VI. 01-3  
SSTD, VG. 05-2  
SSTDLC, VG. 05-2  
SSTDUC, VG. 05-2  
STAR FILES, VA-11  
STATES, VC-2  
STB:DPD, VI. 01-5  
STB:LNK, VI. 01-3  
STB:Q, VI. 01-3  
STB:TYP, VI. 01-3  
STH:FLG, VI. 01-3, -5  
STH:NM, VI. 01-5  
STH:SUS, VI. 01-3  
STI, VC-1, -2  
STIO, VC-2  
STOB, VC-1, -2  
STOBO, VC-2  
STORAGE, VF. 01-3  
STW:FORM, VI. 01-5  
SUPER, VN. 01-1  
SV:FTYM, VI. 02-11  
SV:LIM, VI. 02-10  
SV:LSIZ, VG. 03-5  
SV:LSIZP, VG. 03-5  
SV:LSIZPA, VG. 03-5  
SV:RSIZ, VG. 03-3  
SV:RSIZ, VI. 02-4  
SV:TYM, VI. 02-11  
SW, VC-1, -2  
SWAP STORAGE, VF. 02-1  
SWAPPER, VC-3  
SWAPPER LAYOUT, VF. 02-2  
SYMBIONT, VI. 01-1  
SYMBOL, VO-13  
SYM TAB, VI. 01-3  
SYM X, VI. 01-3

SYNONYMOUS, VH. 04-4  
SYSID, VA-3

## T

TAPE, VG. 04-3  
TB:FLGS, VG. 03-2, -4, -5  
TB:FLGS1, VG. 03-2  
TB:MAX, VG. 03-2, -4  
TB:SZ, VG. 03-2, -4  
TCB, VA-6, VO-1  
TCBADR, VA-6  
TDP, VF. 01-1  
TDV, VG. 01-1  
TIMENT, VA-5  
TIMTMP, VA-3  
TIO, VG. 01-1  
TL, VG. 05-1, -4  
TMDCRM, VA-10  
TMDPRM, VA-10  
TMPDCPK, VA-7  
TMPDPPK, VA-6  
TP, VT-1  
TPACCESS, VA-5  
TPEXT, VA-3  
TPIOT, VA-3  
TPOVT, VA-3  
TRANSLATION, VG. 05-2  
TREE, VO-5  
TREE TABLES, VO-1  
TRPFLAGS, VA-6  
TSERIAL, VI. 02-5  
TSTACK, VA-7  
TTP, VT-2  
TTYIN, VG. 05-2  
TTYOUT, VG. 05-2  
TUEXT, VA-3  
TUIOT, VA-3  
TUOVT, VA-3  
TYC, VH. 09-10, VH. 12-7  
TYPMNSZ, VG. 03-4

## U

U:..., VD-1  
UB:..., VD-1  
UB:APO, VA. 01-2, VA-7  
UB:APR, VA. 01-2, VA-7  
UB:ASP, VA. 01-2, VA-7  
UB:BL, VC-3



UB:DB, VA-7,VA.01-2  
UB:FL, VC-3  
UB:PRIO, VC-1  
UB:PRIOB, VC-1  
UH:..., VD-1  
UH:DL, VD-2  
UH:FLG, VA-7,VD-2  
UH:FLGS, VD-2  
UNAME, VA-3  
USRENT, VA-6  
UTIMER, VA-5  
UTS, VA-7

**V**

VLP, VH.09-11  
VTOC, VH.06-2

**W**

WORK-STATION, VA.01-2

**X**

XSL, VA-4

September 1978

**CORRECTIONS TO CP-V/DATA BASE TECHNICAL MANUAL**

PUBLICATION NO. 90 19 95D-3(9/78)

The attached pages contain changes that reflect the F00 version of Control Program-Five (CP-V). Pages in the D edition of the manual combined with revision pages labeled 90 19 95D-1(5/76) and 90 19 95D-2(2/77) that are to be replaced are: title page/ii, iii/iv, 1 through 18f, 19 through 24, 45 through 50, 57/58, 61/62, 63 through 65, 66, 69 through 72, 75 through 82, 85 through 88, 91/92, 123 through 126, 131/132, 139/140, 147/148, 183 through 186, 189/190, 201 through 208, 213 through 218, 231 through 234, 235/236, 239/240, 249 through 260, 271/272, 297/298, 315/316, 325 through 346, and 357/358.

New pages to be inserted are: 44a/44b, 62a/62b, 65a/65b, 230a through 230d, 234a/234b, 236a/236b, 260a through 260h, and 346a through 346d. The following pages are to be deleted: 18g through 18o.

Revision bars in the margins next to text indicate a change in that part of the page only. Revision bars adjacent to page numbers indicate that material on the page has been reorganized without the content being changed or that the material on the page has been deleted entirely.



PLEASE FOLD AND TAPE –  
NOTE: U. S. Postal Service will not deliver stapled forms

FIRST CLASS  
PERMIT NO. 39531  
WALTHAM, MA  
02154

Business Reply Mail  
Postage Stamp Not Necessary if Mailed in the United States

Postage Will Be Paid By:

HONEYWELL INFORMATION SYSTEMS  
200 SMITH STREET  
WALTHAM, MA 02154

ATTENTION: PUBLICATIONS, MS 486

**Honeywell**

CUT ALONG LINE

CUT ALONG LINE

**Honeywell Information Systems**  
In the U.S.A.: 200 Smith Street, MS 486, Waltham, Massachusetts 02154  
In Canada: 2025 Sheppard Avenue East, Willowdale, Ontario M2J 1W5  
In the U.K.: Great West Road, Brentford, Middlesex TW8 9DH  
In Australia: 124 Walker Street, North Sydney, N.S.W. 2060  
In Mexico: Avenida Nuevo Leon 250, Mexico 11, D.F.

29294, .75C980, Printed in U.S.A.

XN15, Rev. 0