



# DVD-VCR COMBINATION

## DVD-V5000/AAFES



SERVICE MANUAL


DVD-V5000/AAFES

# SERVICE Manual


For mechanical disassembly and adjustment, refer to the "Mechanical Manual" (TS-10 → AC68-01405A).

DVD-VCR COMBINATION

CONTENTS

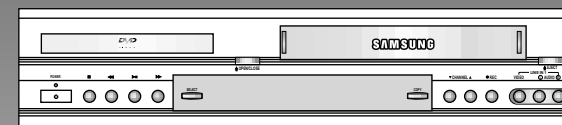

1. Precautions
2. Product Specifications
3. Disassembly and Reassembly
4. Alignment and Adjustment
5. Troubleshooting
6. Exploded View and Parts List
7. Electrical Parts List
8. Block Diagram
9. PCB Diagrams
10. Wiring Diagram
11. Schematic Diagrams

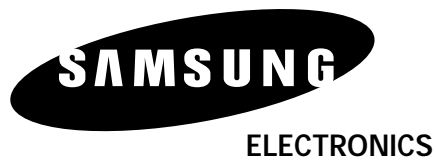

---

# 1. Precautions

---

## 1-1 Safety Precautions

---

1. Be sure that all of the built-in protective devices are replaced. Restore any missing protective shields.
2. When reinstalling the chassis and its assemblies, be sure to restore all protective devices, including : control knobs and compartment covers.
3. Make sure that there are no cabinet openings through which people--particularly children -- might insert fingers and contact dangerous voltages. Such openings include the spacing between the picture tube and the cabinet mask, excessively wide cabinet ventilation slots, and improperly fitted back covers.

If the measured resistance is less than 1.0 megohm or greater than 5.2 megohms, an abnormality exists that must be corrected before the unit is returned to the customer.

4. Leakage Current Hot Check (See Fig. 1-1) :  
Warning : Do not use an isolation transformer during this test. Use a leakage current tester or a metering system that complies with American National Standards Institute (ANSI C101.1, *Leakage Current for Appliances*), and Underwriters Laboratories (*UL Publication UL1410, 59.7*).

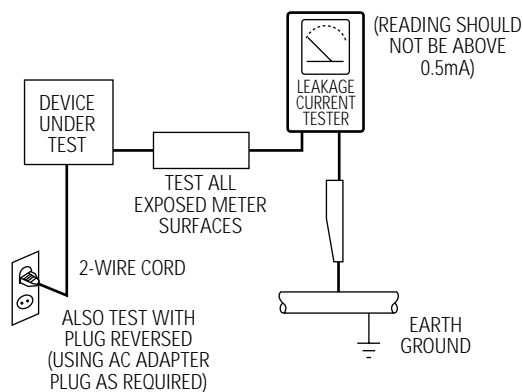




Fig. 1-1 AC Leakage Test

5. With the unit completely reassembled, plug the AC line cord directly the power outlet. With the unit's AC switch first in the ON position and then OFF, measure the current between a known earth ground (metal water pipe, conduit, etc.) and all exposed metal parts, including : antennas, handle brackets, metal cabinets, screwheads and control shafts. The current measured should not exceed 0.5 milliamp. Reverse the power-plug prongs in the AC outlet and repeat the test.
6. Antenna Cold Check :  
With the unit's AC plug disconnected from the AC source, connect an electrical jumper across the two AC prongs. Connect one lead of the ohmmeter to an AC prong. Connect the other lead to the coaxial connector.
7. Some semiconductor ("solid state") devices are easily damaged by static electricity. Such components are called Electrostatically Sensitive Devices (ESDs); examples include integrated circuits and some field-effect transistors. The following techniques will reduce the occurrence of component damage caused by static electricity.
8. Immediately before handling any semiconductor components or assemblies, drain the electrostatic charge from your body by touching a known earth ground. Alternatively, wear a discharging Wrist-strap device. (Be sure to remove it prior to applying power--this is an electric shock precaution.)
9. Design Alteration Warning :  
Never alter or add to the mechanical or electrical design of this unit. Example : Do not add auxiliary audio or video connectors. Such alterations might create a safety hazard. Also, any design changes or additions will void the manufacturer's warranty.
10. Never defeat any of the B+ voltage interlocks. Do not apply AC power to the unit (or any of its assemblies) unless all solid-state heat sinks are correctly installed.

11. Always connect a test instrument's ground lead to the instrument chassis ground before connecting the positive lead; always remove the instrument's ground lead last.
12. Observe the original lead dress, especially near the following areas : Antenna wiring, sharp edges, and especially the AC and high voltage power supplies. Always inspect for pinched, out-of-place, or frayed wiring. Do not change the spacing between components and the printed circuit board. Check the AC power cord for damage. Make sure that leads and components do not touch thermally hot parts.
13. Product Safety Notice :  
Some electrical and mechanical parts have special safety-related characteristics which might not be obvious from visual inspection. These safety features and the protection they give might be lost if the replacement component differs from the original--even if the replacement is rated for higher voltage, wattage, etc.

Components that are critical for safety are indicated in the circuit diagram by shading, (  or  ).

Use replacement components that have the same ratings, especially for flame resistance and dielectric strength specifications. A replacement part that does not have the same safety characteristics as the original might create shock, fire or other hazards.

## 1-2 Handling the optical pick-up

The laser diode in the optical pick up may suffer electrostatic breakdown because of potential static electricity from clothing and your body.

The following method is recommended.

- (1) Place a conductive sheet on the work bench (The black sheet used for wrapping repair parts.)
  - (2) Place the set on the conductive sheet so that the chassis is grounded to the sheet.
  - (3) Place your hands on the conductive sheet (This gives them the same ground as the sheet.)
  - (4) Remove the optical pick up block
  - (5) Perform work on top of the conductive sheet. Be careful not to let your clothes or any other static sources to touch the unit.
- ◆ Be sure to put on a wrist strap grounded to the sheet.
  - ◆ Be sure to lay a conductive sheet made of copper etc. Which is grounded to the table.

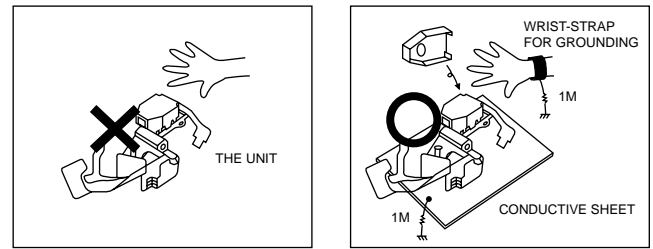


Fig.1-2

- (6) Short the short terminal on the PCB, which is inside the Pick-Up ASS'Y, before replacing the Pick-Up. (The short terminal is shorted when the Pick-Up Ass'y is being lifted or moved.)
- (7) After replacing the Pick-up, open the short terminal on the PCB.

## 1-3 Pick-up disassembly and reassembly

### 1-3-1 Disassembly

- 1) Remove the power cord.
- 2) Disassemble the Deck-Assy.
- 3) Make solder land 4 points short on Pick-up.  
(See Fig. 1-3)
- 4) Disassembly the Pick-up.

### 1-3-2 Assembly

- 1) Replace the Pick-up.
- 2) Remove the soldering 4 points on Pick-up.
- 3) Reassemble the Deck-Assy.

**Note :** If the assembly and disassembly are not done in correct sequence, the Pick-up may be damaged.

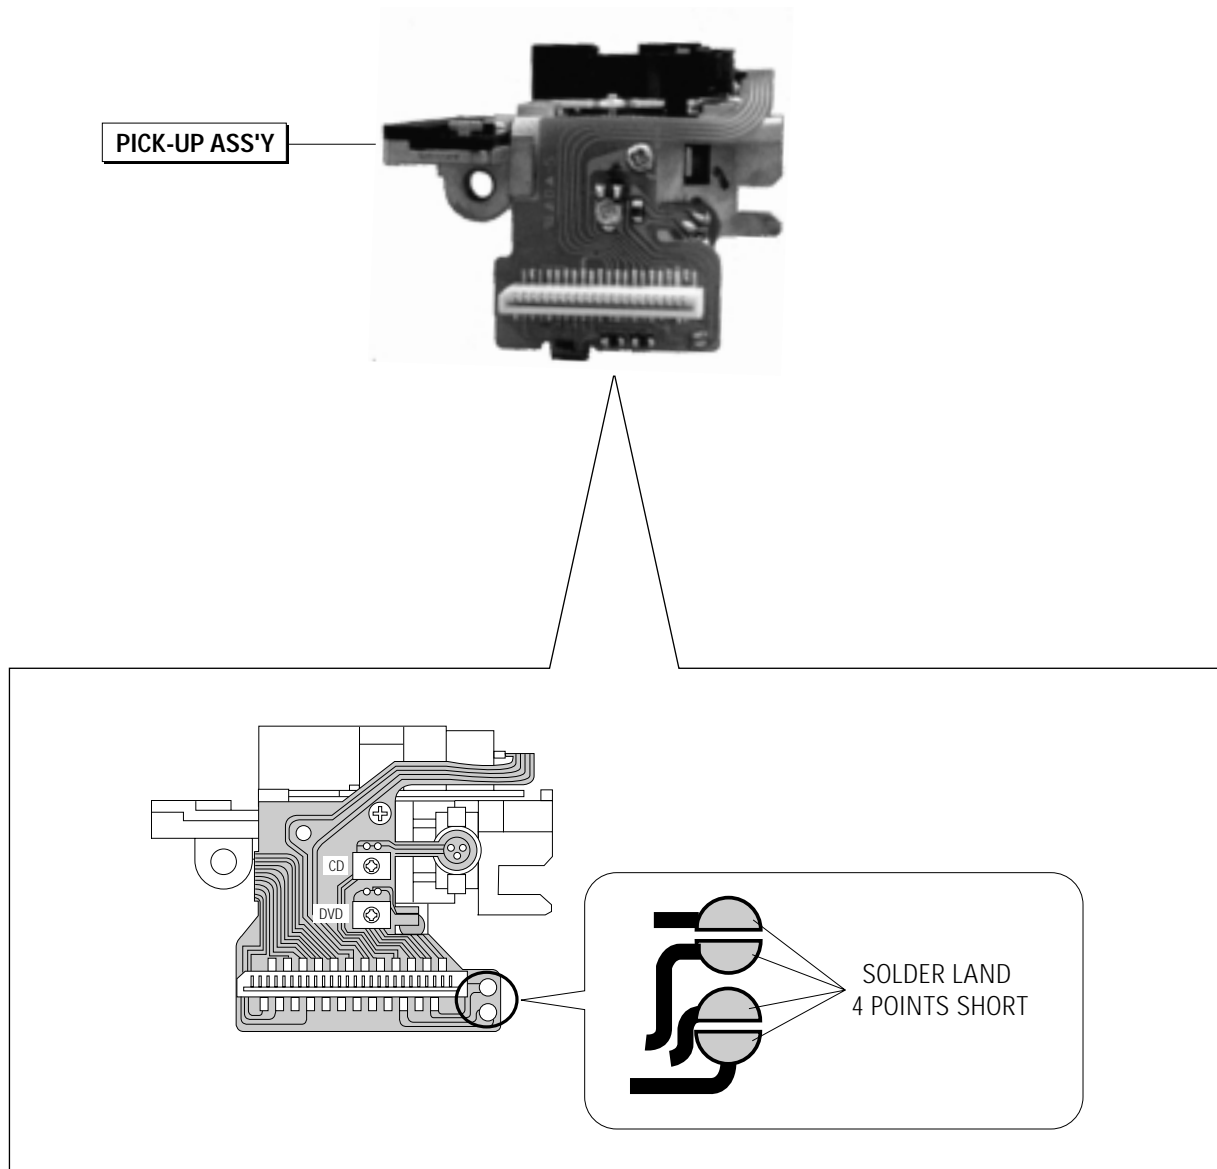


Fig. 1-3









## 2. Product Specifications

<b>INPUTS</b>	AUDIO	2 Stereo audio inputs, RCA Connector, -8dBm, 47K $\Omega$ , front and rear
	VIDEO	2 Composite video inputs, RCA Connector, 75 $\Omega$ , 1Vp-p
	RF	Antenna or CATV Input, F-Connector, 75 $\Omega$
<b>OUTPUTS</b>	AUDIO	2 Stereo audio outputs, RCA Connector, -8dBm, 1.5K $\Omega$
	AUDIO (DVD only)	2 Digital audio outputs, 1 optical, 1 coaxial
	VIDEO	1 Composite video output, RCA Connector, 75 $\Omega$ , 1Vp-p
	VIDEO (DVD only)	1 S-video output, S-Connector, 75 $\Omega$ , Y=1.0Vp-p, C=0.286Vp-p 1 Component video output, 75 $\Omega$ , Y=1.0Vp-p, Pb=0.7Vp-p, Pr=0.7Vp-p
	RF	Channel 3 or 4
<b>VCR</b>	VIDEO SYSTEM	1/2-inch VHS system, 4 rotary head helical scanning: FM azimuth luminance;chrominance: converted sub system phase shift
	AUDIO TRACK	Normal: 1 track; Hi-Fi: 2 track
	PLAY/RECORD TIME	T-180 tape: SP 3 hours, SLP 9 hours
	FF/REW TIME	T-120 tape: <2 minutes
	HEADS	Video: DA 4 rotary Duraheads™
		Audio: 2 rotary heads (Hi-Fi); 1 stationary head (Linear)
		Control: 1 stationary head
	Erase: 1 full track, 1 audio track	
WOW & FLUTTER	Less than 0.005% (Hi-Fi)	
FREQ. RESPONSE	20-20,000Hz (Hi-Fi)	
<b>DVD</b>	DISC COMPATIBILITY	CD, CD-R, Not compatible with CD-RW
		DVD-Video, CD-Digital Audio (5" and 3.5"), CD-Video, MP3 files on CD-ROM
	FREQ. RESPONSE	96/48kHz Sampling: 4Hz-22kHz
	S/N RATIO	110dB
	DYNAMIC RANGE	96dB
THD	0.003%	
<b>SYSTEM</b>	POWER REQUIREMENT	120V AC, 60Hz, 27 watts
	CLOCK BACKUP TIME	6 hours
	ENVIRONMENT	41-104 F (5-40 C); 10%-75% humidity
	WEIGHT	21.5 lbs.

# MEMO

## 3. Disassembly and Reassembly

### 3-1 Cabinet and PCB

#### 3-1-1 Cabinet Top Removal

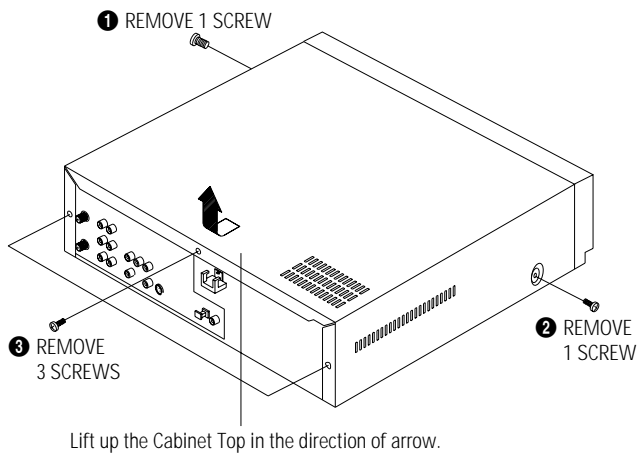


Fig. 3-1 Cabinet Top Removal

#### 3-1-2 Decoration-LEG Removal

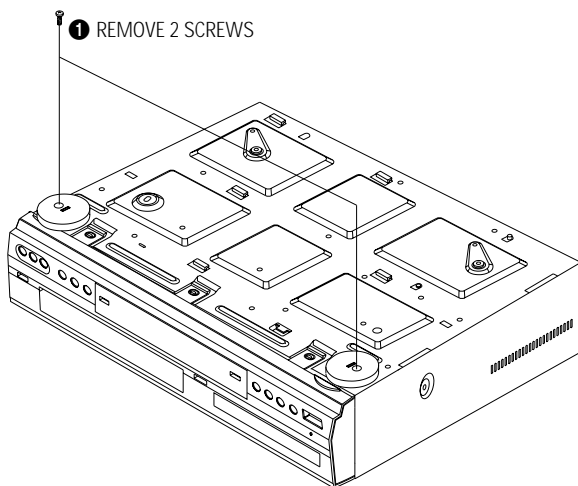


Fig. 3-2 Decoration-LEG Removal

#### 3-1-3 Ass'y Front Panel Removal

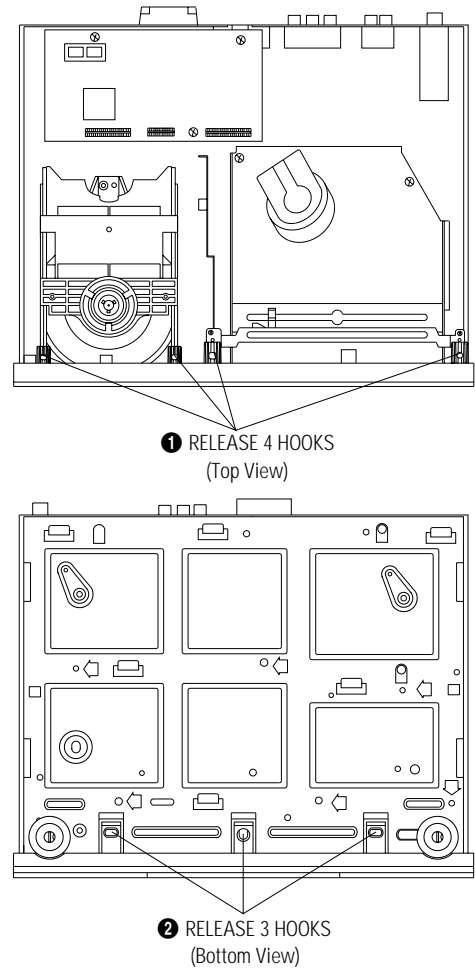


Fig. 3-3 Ass'y Front Panel Removal

#### 3-1-4 Function-Timer PCB Removal

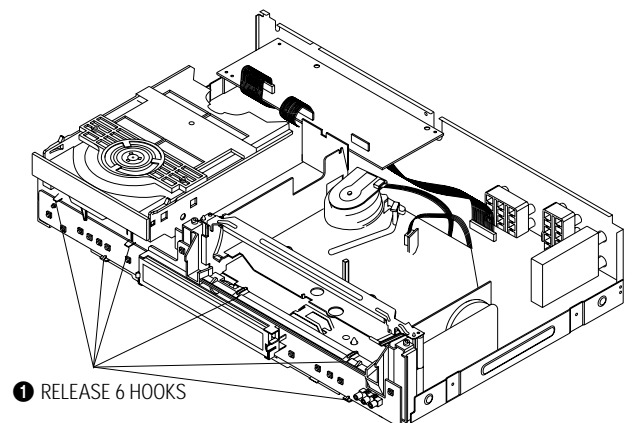


Fig. 3-4 Function-Timer PCB Removal

### 3-1-5 Chassis Removal

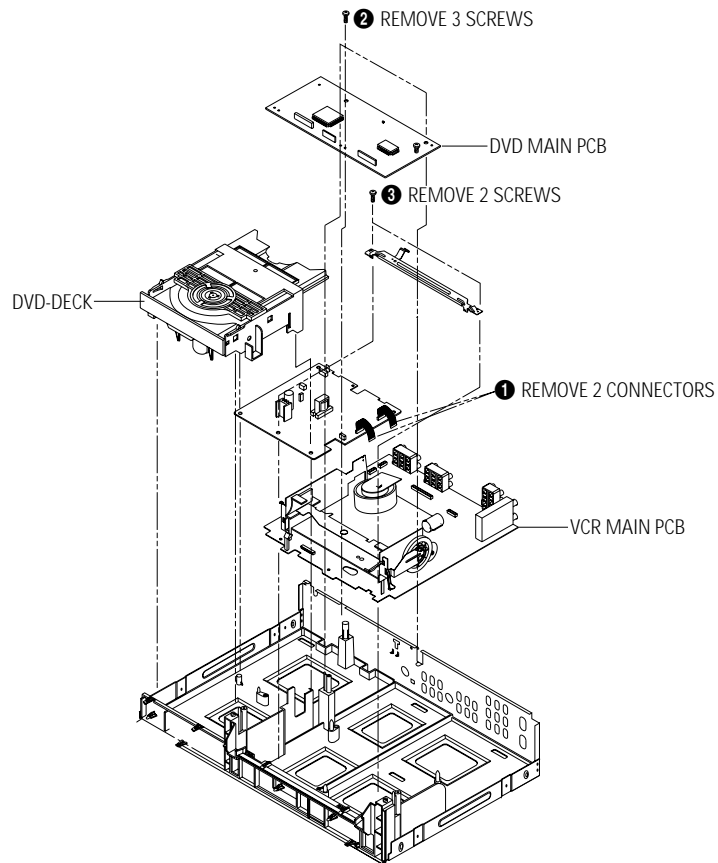


Fig. 3-5 Chassis Removal

### 3-1-6 VCR Main PCB Removal

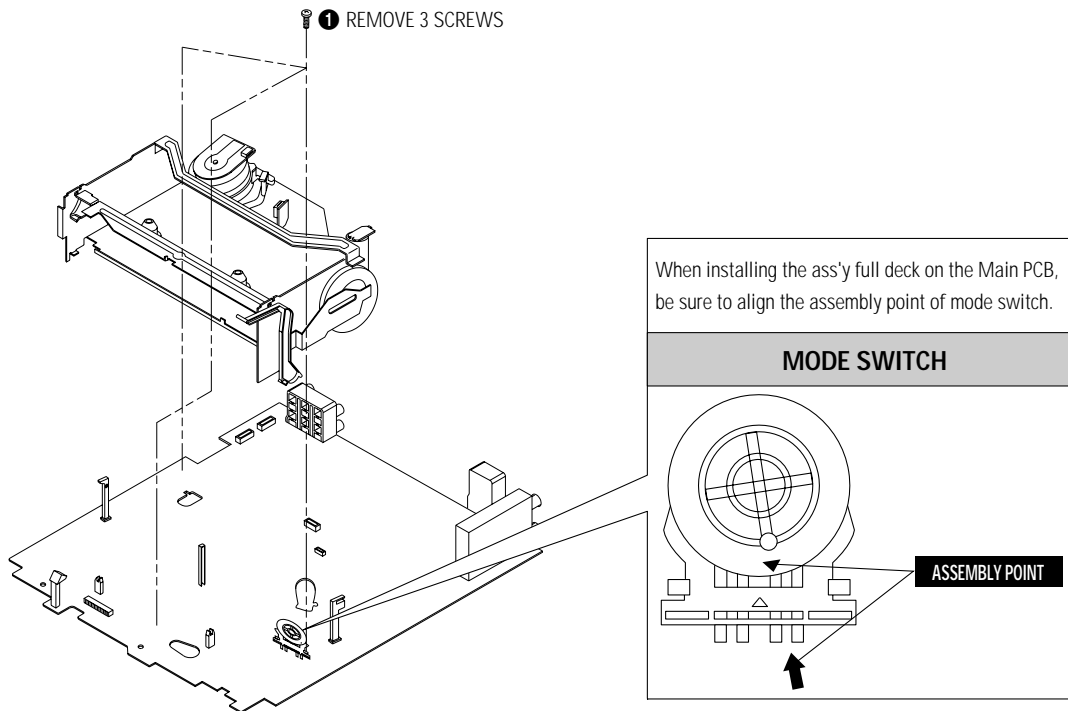


Fig. 3-6 VCR Main PCB Removal

### 3-2 Circuit Board Locations

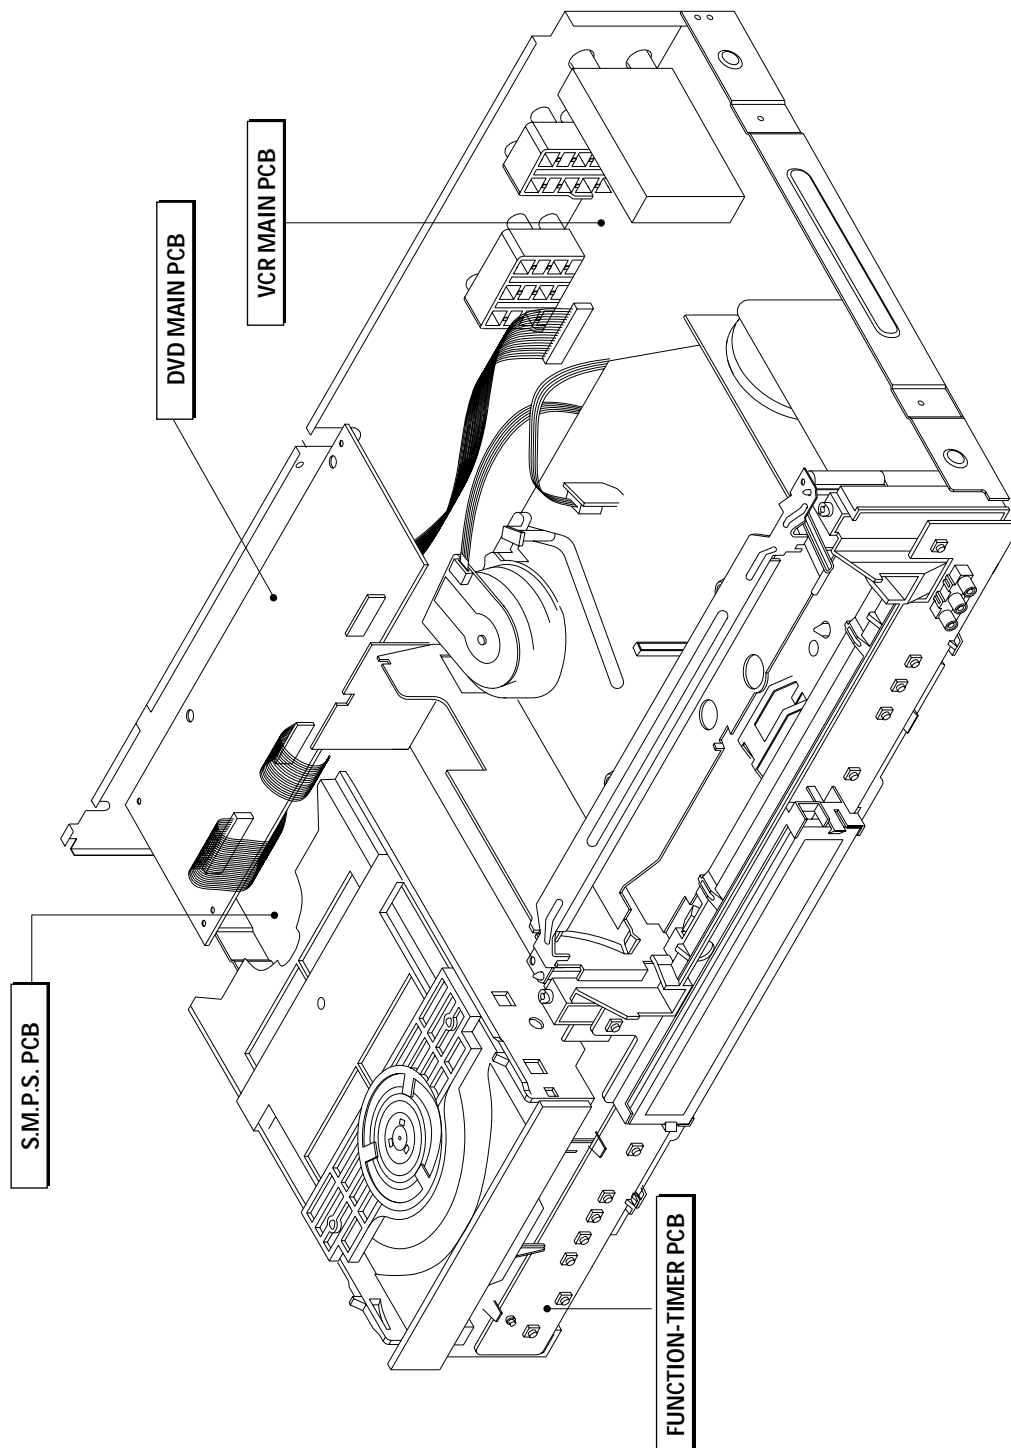


Fig. 3-7 Circuit Board Locations

## 3-3 DVD Deck

### 3-3-1 Tray Disc Removal

- 1) Insert a Screw Driver ① into Emergency Hole ② and push the Slider Housing ③ in the direction arrow "A".
- 2) When the Tray Disc ④ comes out a little, pull it in the direction arrow "B" by hand.
- 3) Pull the Tray Disc ④ to disassemble, while simultaneously pushing 2 Stoppers ⑤ (left, right) in the direction arrow "C", "D".

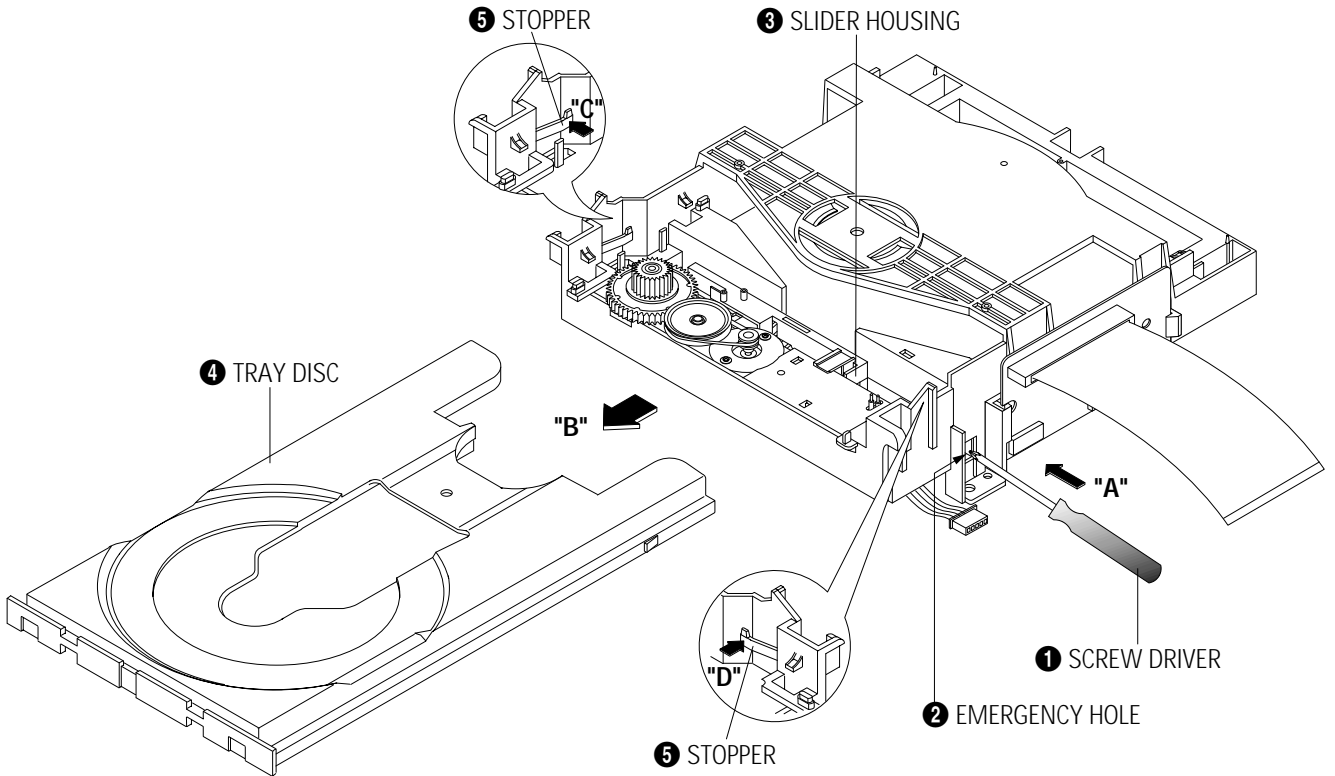


Fig. 3-8 Tray Disc Removal

### 3-3-2 Assy P/U Deck Removal

- 1) Disconnect DCN2 **1**, DCN3 **2**.
- 2) Lift down the Assy P/U Deck **3** while simultaneously pushing 2 Hooks **4**, **5** in the direction of arrow "A", "B".

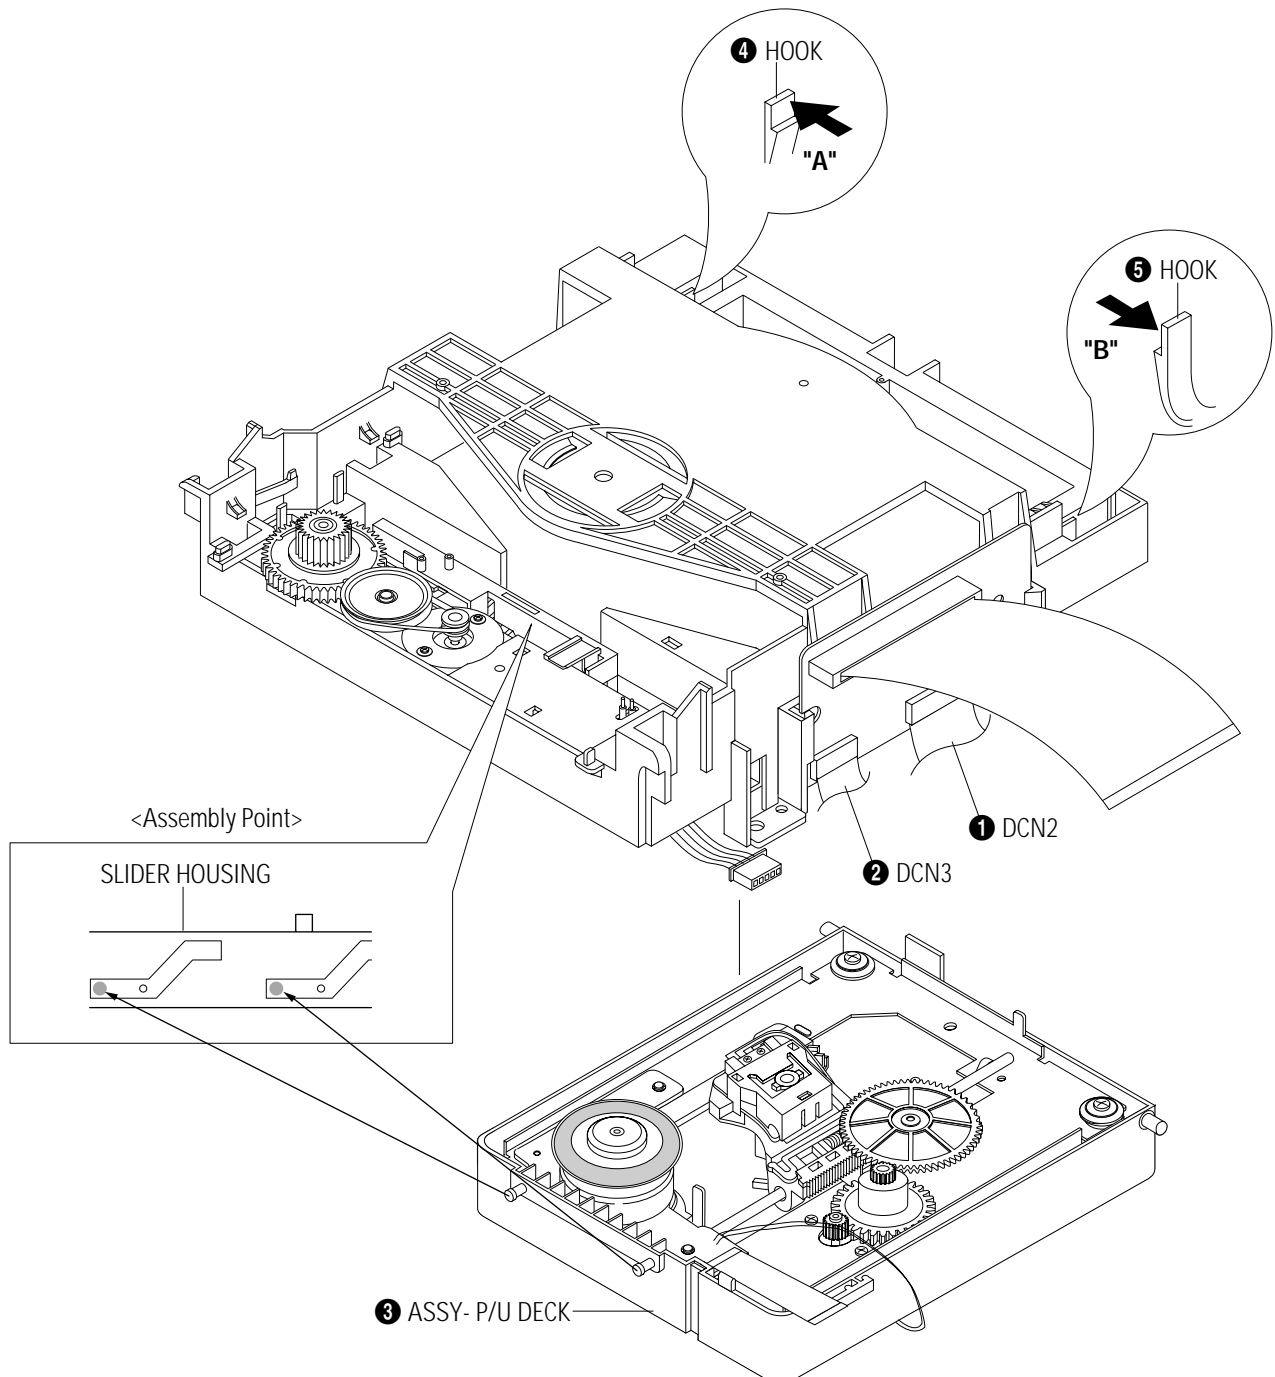


Fig. 3-9 Assy P/U Deck Removal

### 3-3-3 Housing Ass'y Removal

- 1) Remove Belt ❶.
- 2) Push the Hook ❷ in the direction arrow "A" and lift up Pulley Gear ❸.
- 3) Push the Slider Housing ❹ in the direction arrow "B" and lift up the Gear Tray ❺.
- 4) Lift up the Slider Housing ❹.
- 5) Remove the soldering ❻ of 2 points (Red, Black).
- 6) Remove 2 Screws ❼ and lift down the Motor Load Assy ❽.
- 7) Push the 3 Hooks ❾ bottom side in the direction arrow "C" and lift up the Housing PCB ❿.
- 8) Push the Hooks ⓫ and remove Deck PCB ⓬.

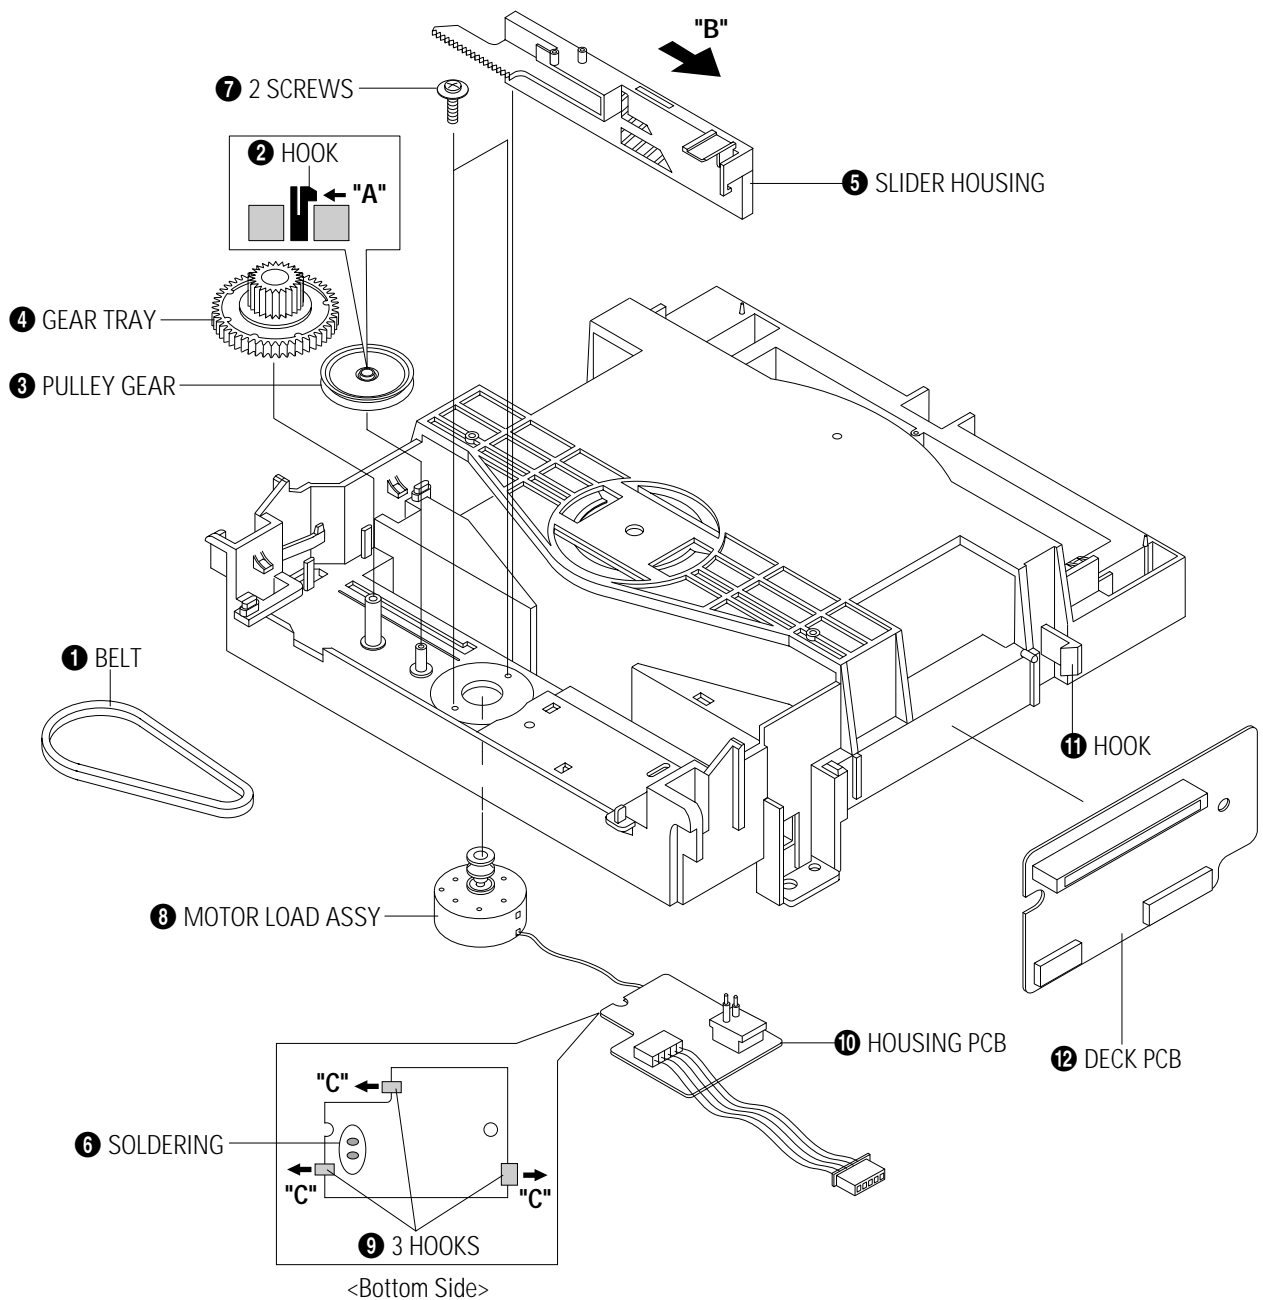


Fig. 3-10 Housing Ass'y Removal



### 3-3-4 Sub Chassis Removal

- 1) Remove the Soldering of Motor Feed (+, - wire) ❶.
- 2) Remove the 4 Screws ❷.
- 3) Lift up the Ass'y Brkt Deck ❸.

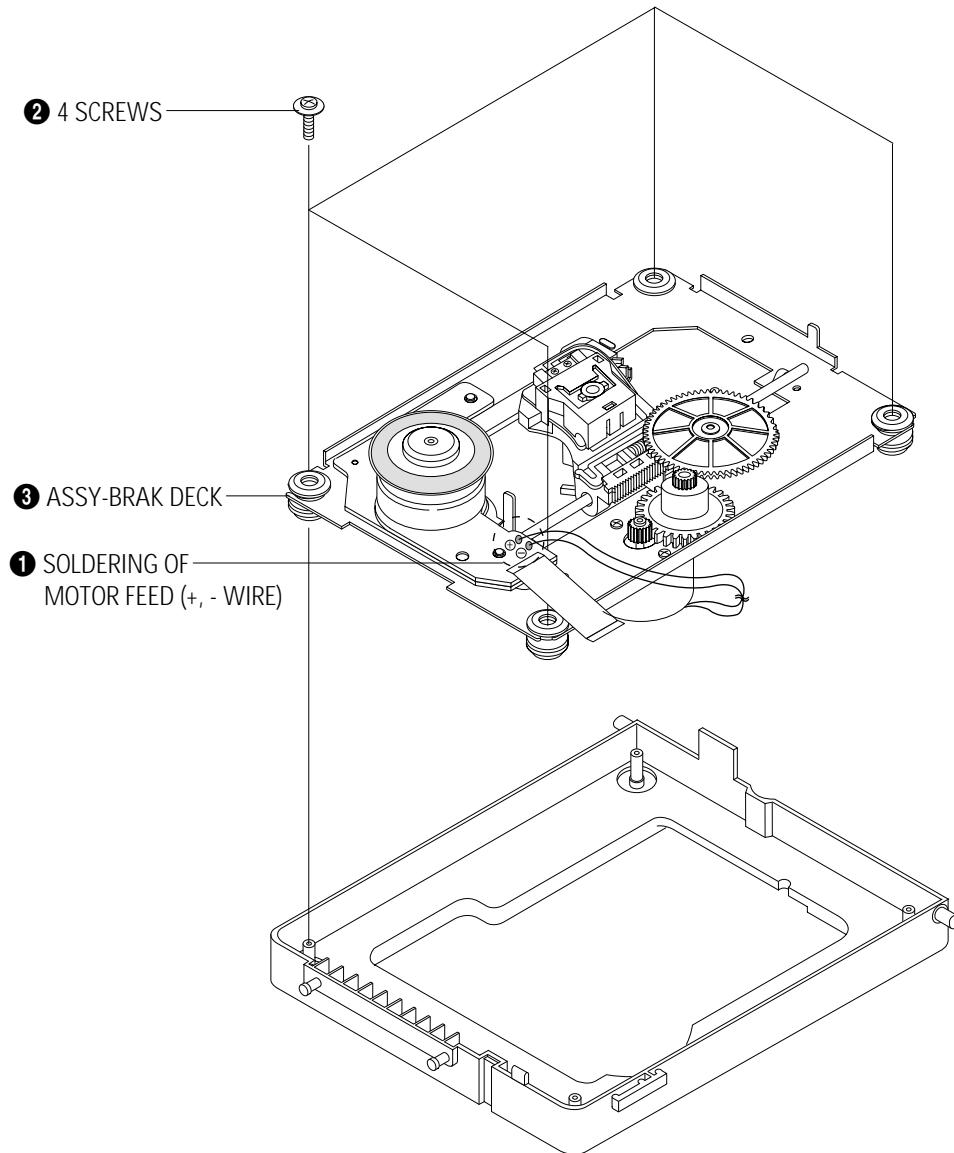


Fig. 3-11 Sub Chassis Removal

### 3-3-5 Ass'y Brkt Deck Removal

- 1) Remove Washer ①.
- 2) Remove Gear Feed B ② , Gear Feed A ③.
- 3) Remove 2 Screws ④.
- 4) Remove Shaft Pick-Up ⑤ and Pick-Up Assy ⑥.
- 5) Remove 1 Screw ⑦.
- 6) Remove 2 Screws ⑧.
- 7) Remove 3 Spring Spindle ⑨ and Motor Spindle Ass'y ⑩.

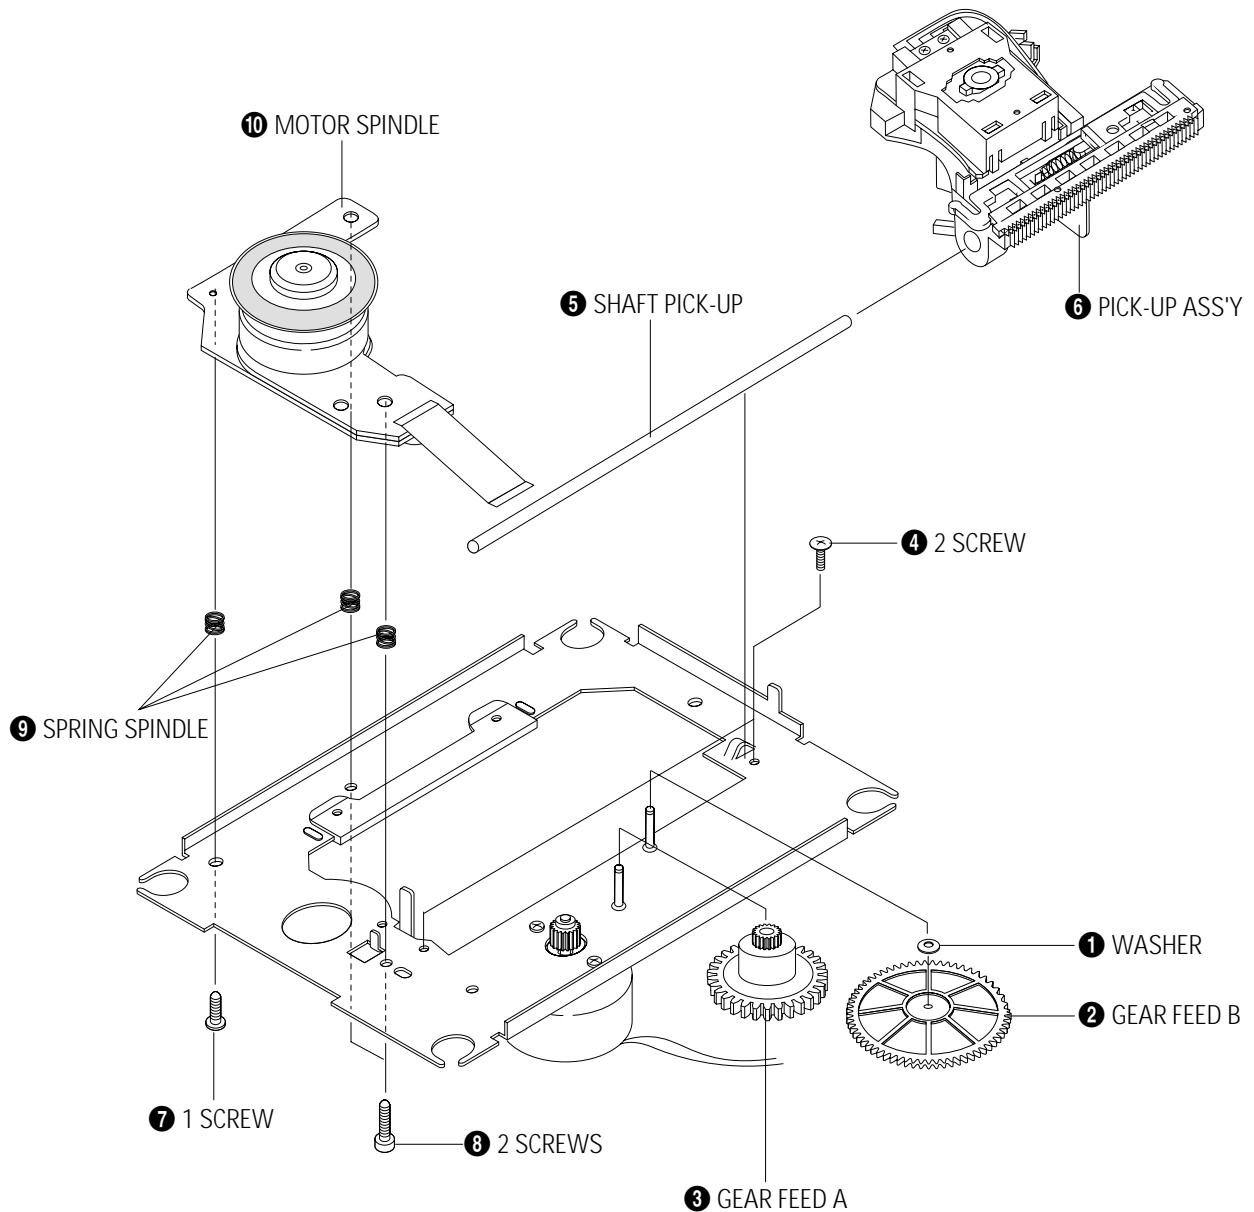


Fig. 3-12 Ass'y Brkt Deck Removal

## 4. VCR Alignment and Adjustments

### 4-1 Reference

- 1) X-Point (Tracking center) adjustment, "Head switching adjustment" and "NVRAM option setting" can be adjusted with remote control.
- 2) When replacing the VCR Main PCB Micom (IC601) and NVRAM (IC605 ; EEPROM) be sure to adjust the "Head switching adjustment" and "NVRAM option setting".
- 3) When replacing the cylinder ass'y, be sure to adjust the "X-Point" and "Head switching adjustment".
- 4) How to adjustment.
  - Press the "SW710 (TEST)" button on Function-Timer PCB to set the adjustment mode.
  - If the corresponding adjustment button is pressed, the adjustment is performed automatically.

#### 4-1-1 Location of adjustment button of remote control

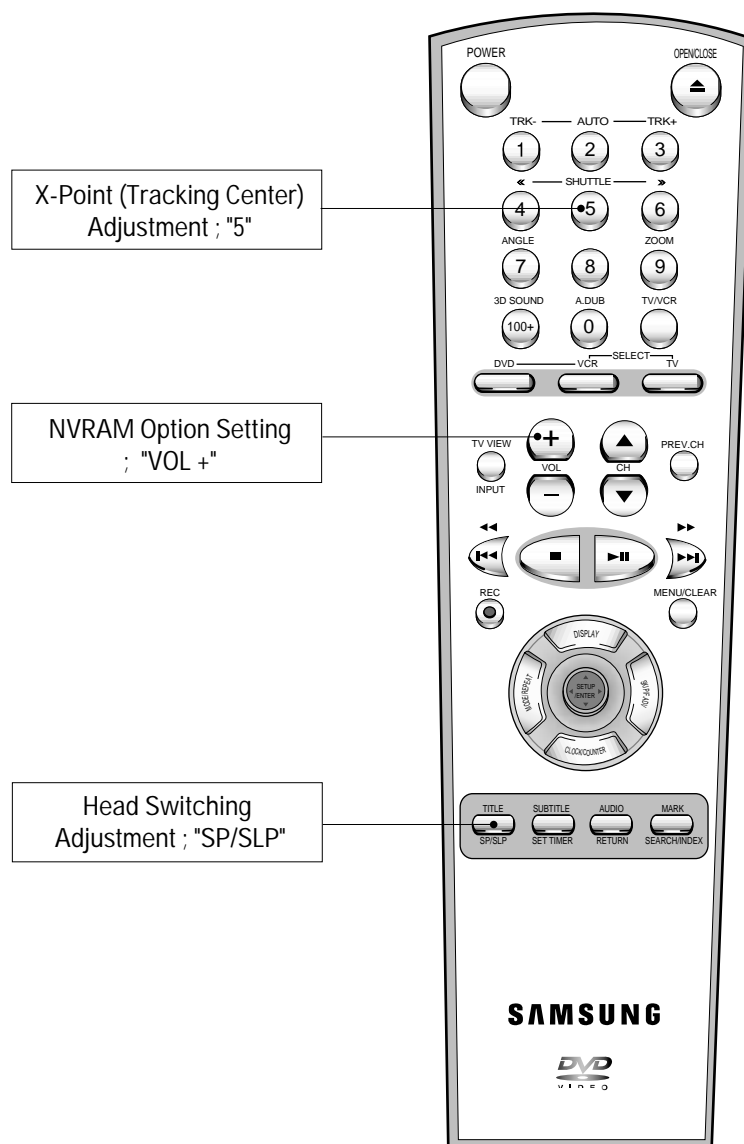


Fig. 4-1

### 4-1-2 SW710 (TEST) location for adjustment mode setting

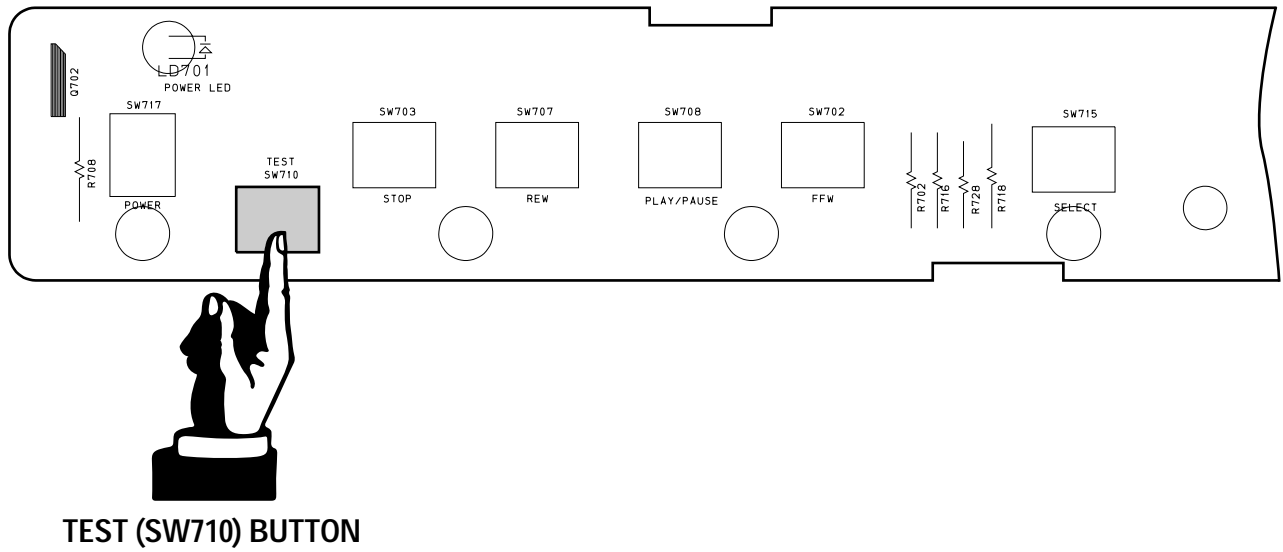


Fig. 4-2 Function-Timer PCB (Top View)

## 4-2 Mechanical Adjustment

Note : Refer to the Mechanical Manual “TS-10 (AC68-01405A)” for the adjustment and confirmation of ass’y full deck.

### 4-2-1 The number and position of test point

<b>Test point :</b>	TP2 (Audio Output)
	TP3 (Envelope)
	TP4 (H'D S/W -Trigger)
	TP5 (Control Pulse)

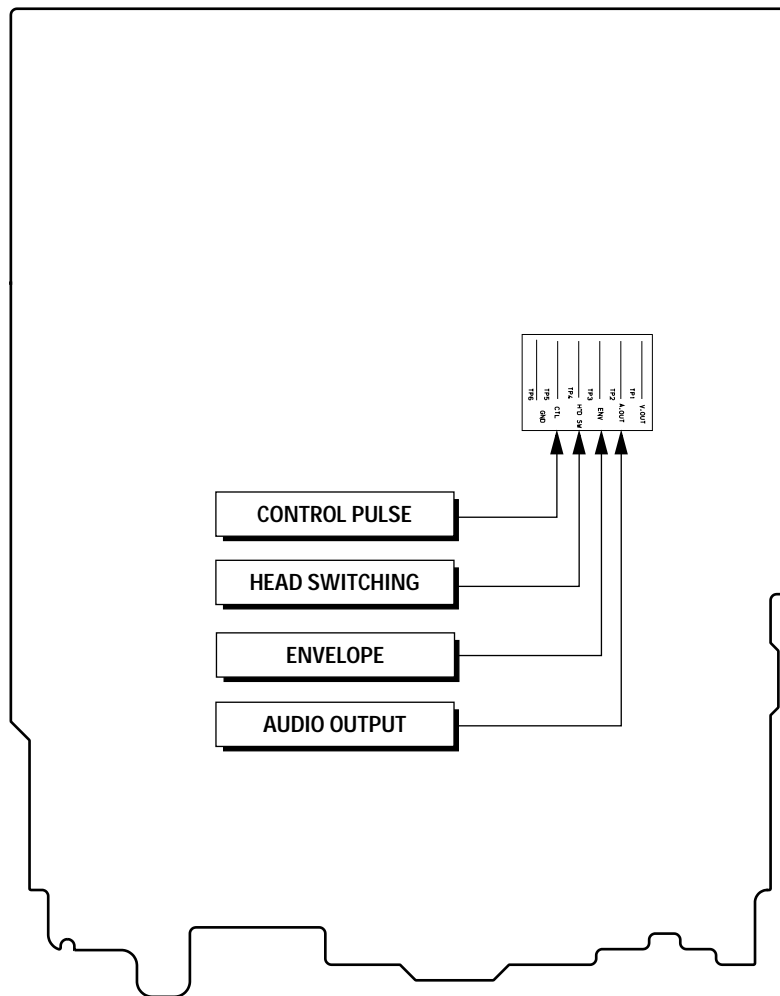


Fig. 4-3 Location of Test point (VCR Main PCB-Top View)

### 4-2-2 ACE Head position (X-Point) Adjustment (See the 4-2-1(d) ACE Head Position (X-Point) Adjustment on page 4-2 of the Mechanical Manual)

- 1) Playback the alignment tape (Color bar).
- 2) Press the “SW710 (TEST)” button on F/Timer PCB to set the adjustment mode. (See Fig. 4-2)
- 3) Press the “5” button of remote control then adjustment is operated automatically. (See Fig. 4-1)
- 4) Connect the CH-1 probe to TP3 (Envelope) the CH-2 probe to TP4 (H'D switching pulse) and then trigger to CH-1.
- 5) Insert the (-) driver into the X-Point adjustment hole and adjust it so that envelope waveform is maximum.
- 6) Turn the Power off.

### 4-3 Head Switching Point Adjustment

- 1) Playback the alignment tape.
- 2) Press the “SW710 (TEST)” button on Function-Timer PCB to set the adjustment mode. (See Fig. 4-2)
- 3) Press the “SP/SLP” button of remote control then adjustment is operated automatically. (See Fig. 4-1)

### 4-4 NVRAM Option Setting

1) NVRAM Option is adjusted at production line basically.  
 2) In case VCR Main PCB Micom (IC601) and NVRAM (IC605 ; EEPROM) is replaced, be sure to set the corresponding option number of the required model. (If the option is not set, the unit is not operated.)

- 1) Press the “SW710 (TEST)” button on Function-Timer PCB to set the adjustment mode. (See Fig. 4-2)
- 2) Press the “VOL +” button on the remote control about 5 seconds then option setting is appeared. (See Fig. 4-4)
- 3) Select the option number (See table 4-1) of corresponding model with “SKIP/F.ADV”, “MODE/REPEAT”, “CLOCK/COUNTER” button on the remote control.
- 4) If selecting the option number is completed, press the “DISPLAY” button of remote control. (If “DISPLAY” button is pressed, the selected number is changes reversed color. ; See Fig. 4-4)
- 5) Press the “SET UP/ENTER” button of remote control again to store the option number. (“PLEASE WAIT” is displayed for a second as shown Fig. 4-5 and this setting is completed.)

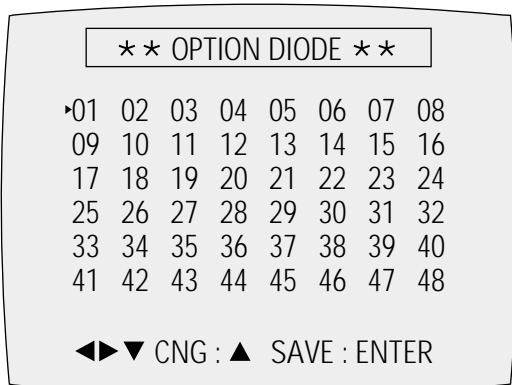


Fig.4-4


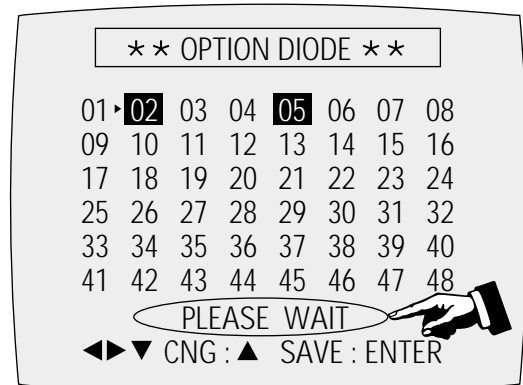




Fig. 4-5

<Table 4-1 NVRAM Option Table>



MODEL	OPTION NUMBER
DVD-V5000	2, 4, 10, 11, 17, 19, 23, 26, 27, 29, 30, 31


## 5. Troubleshooting


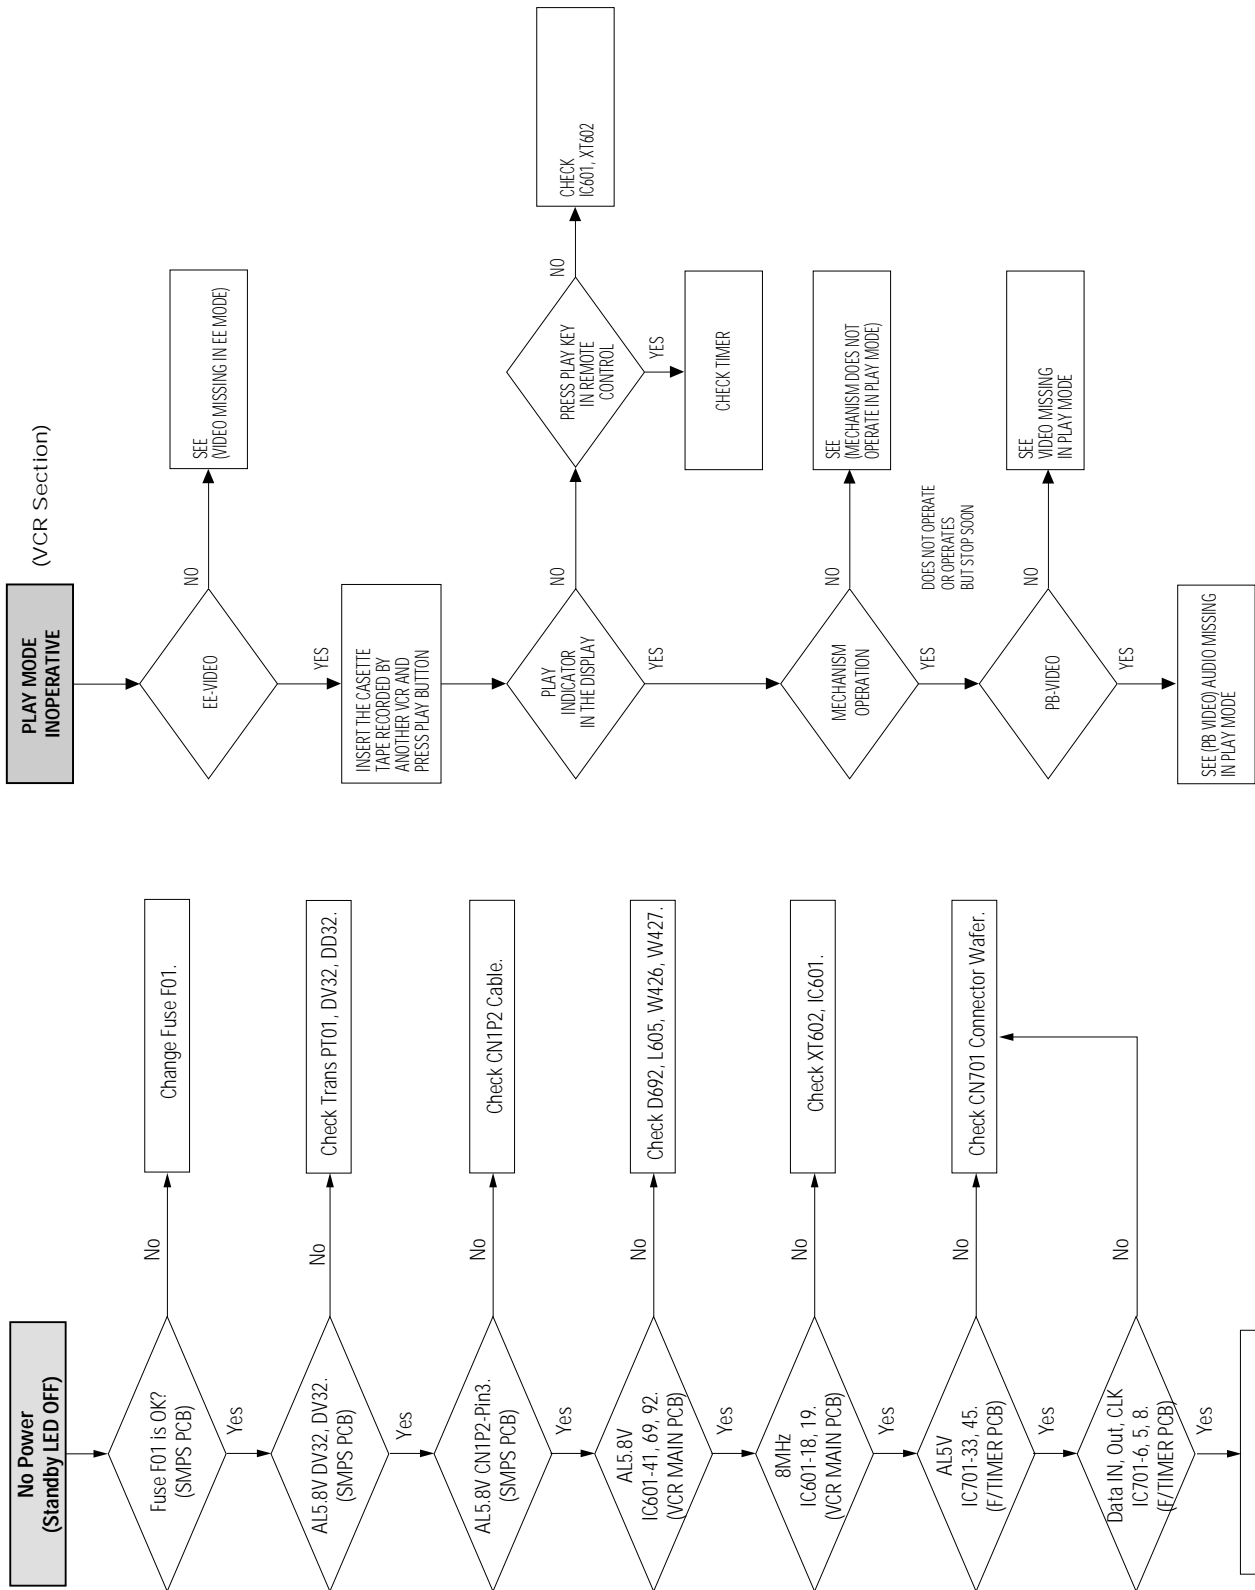


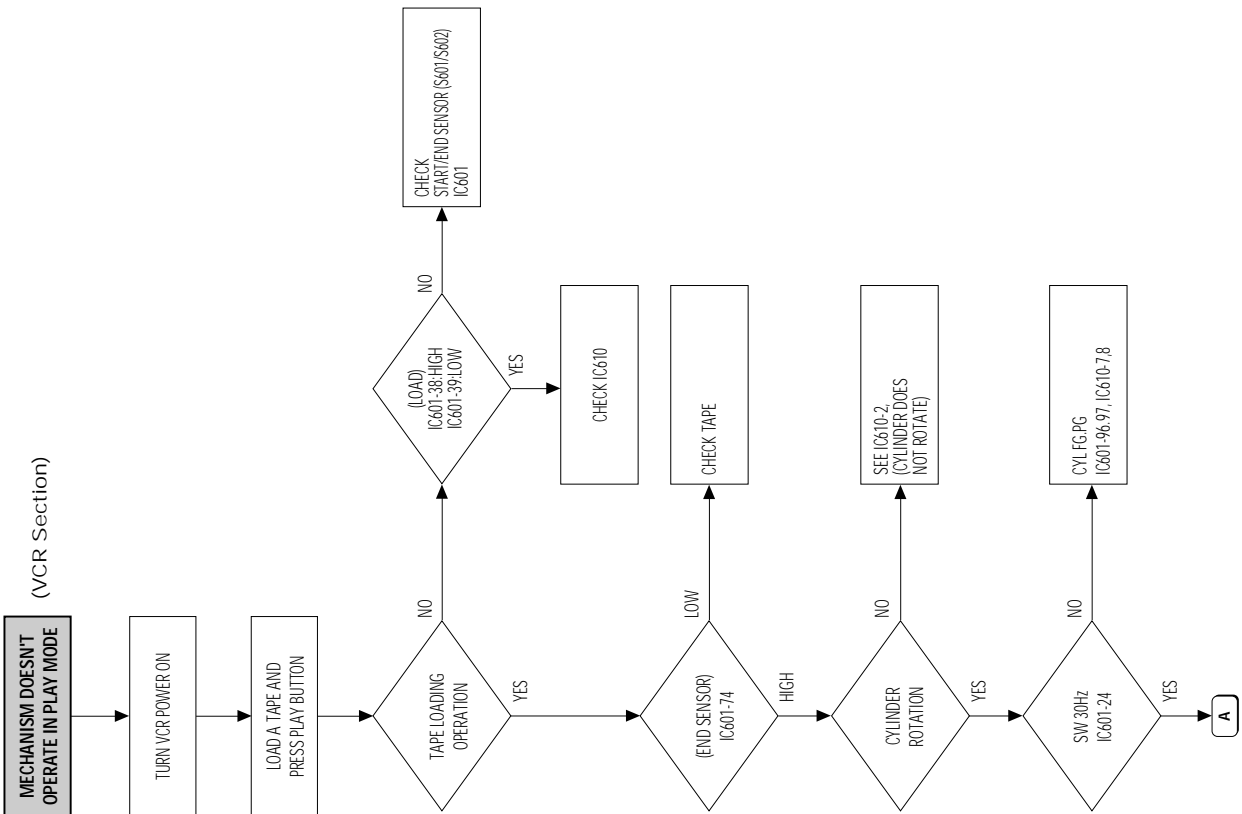
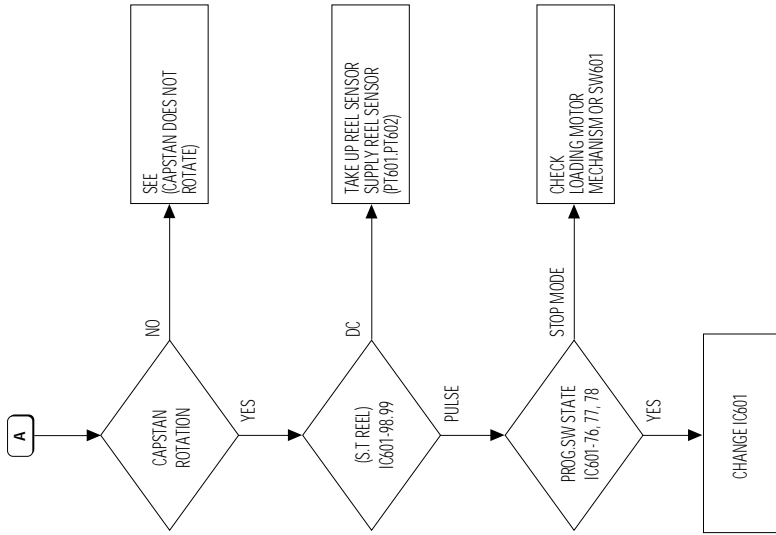






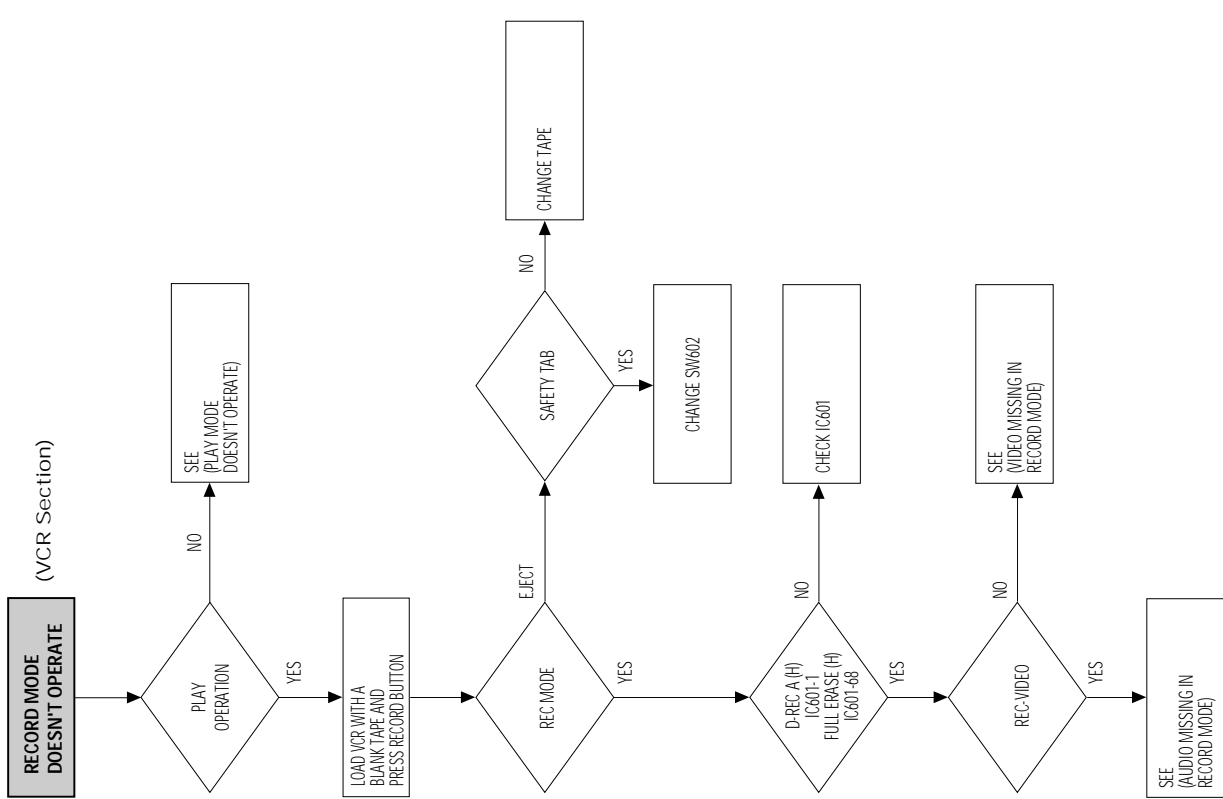
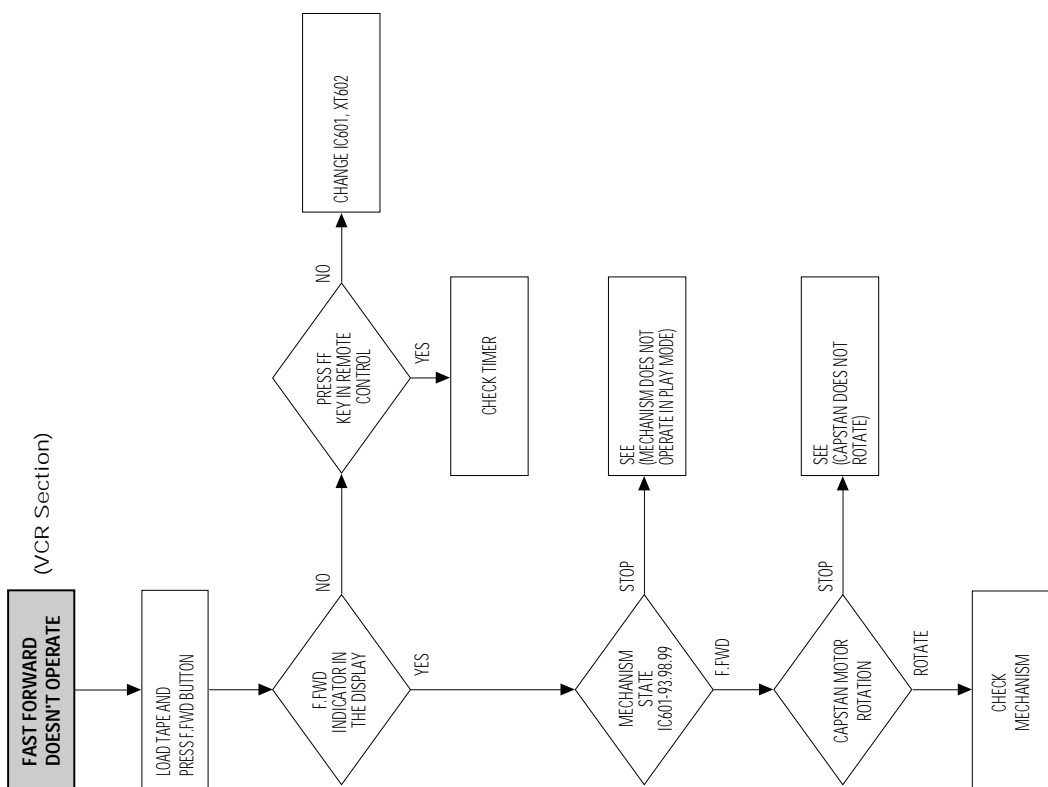



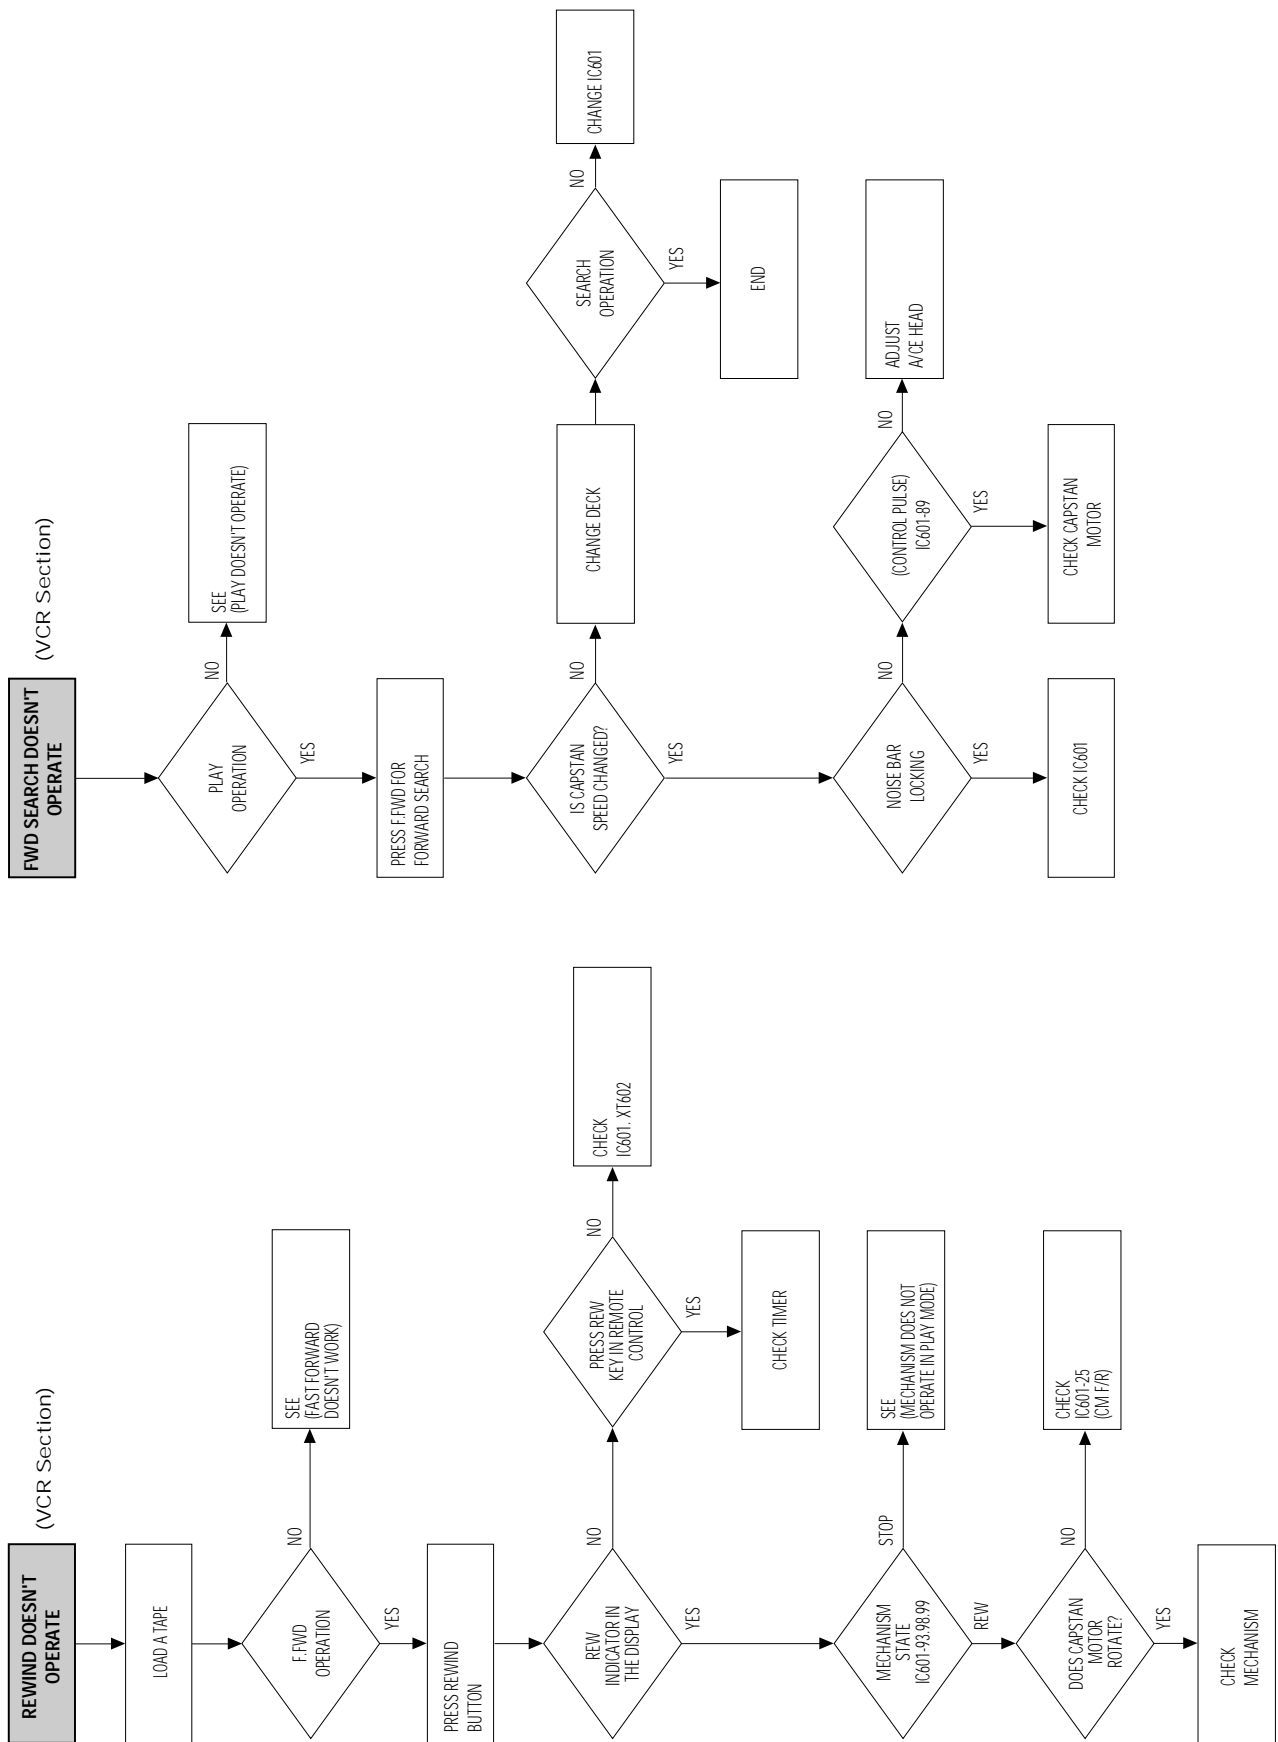


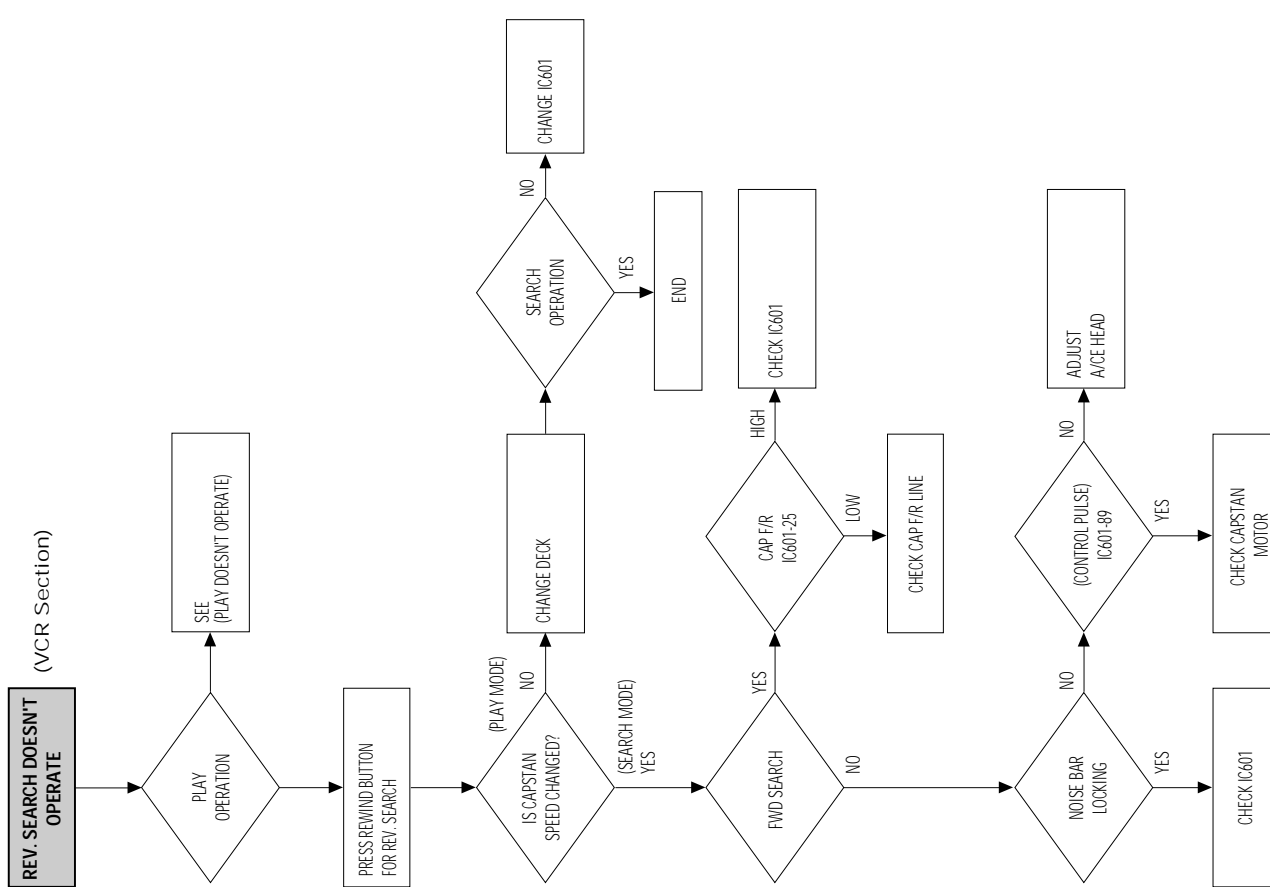
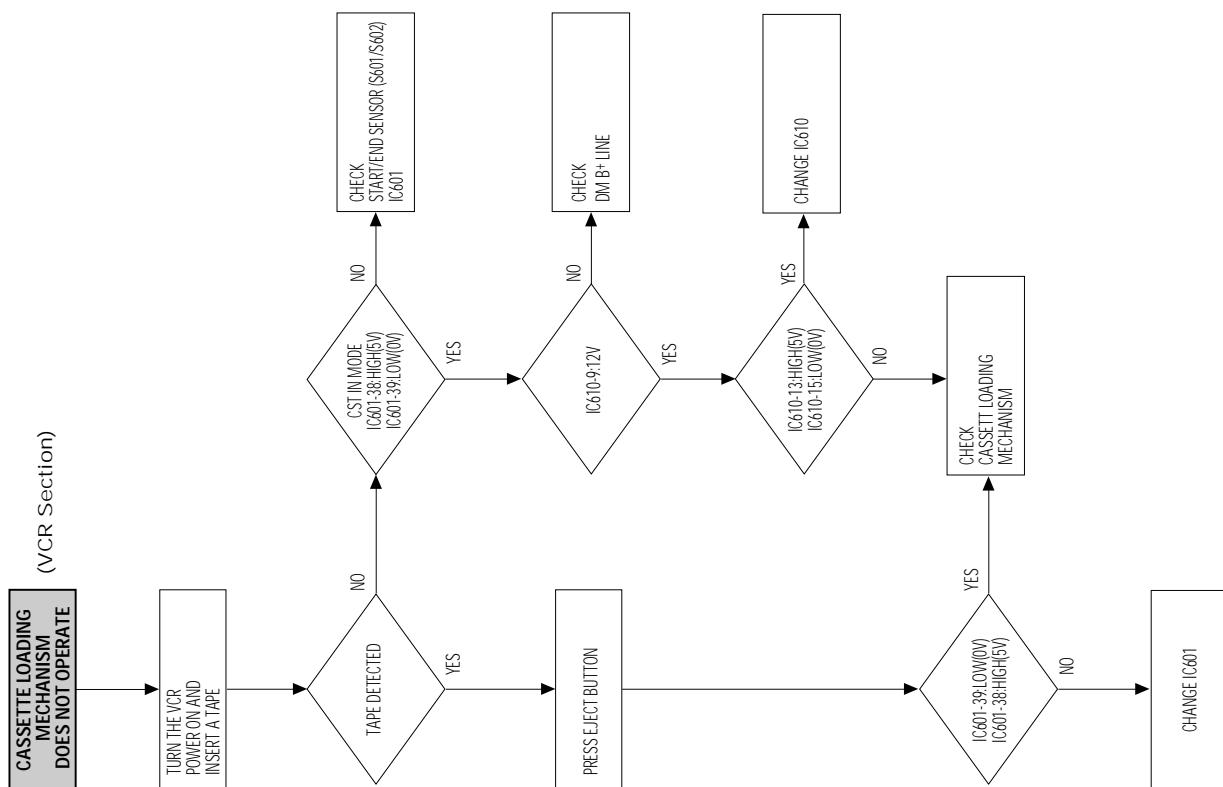


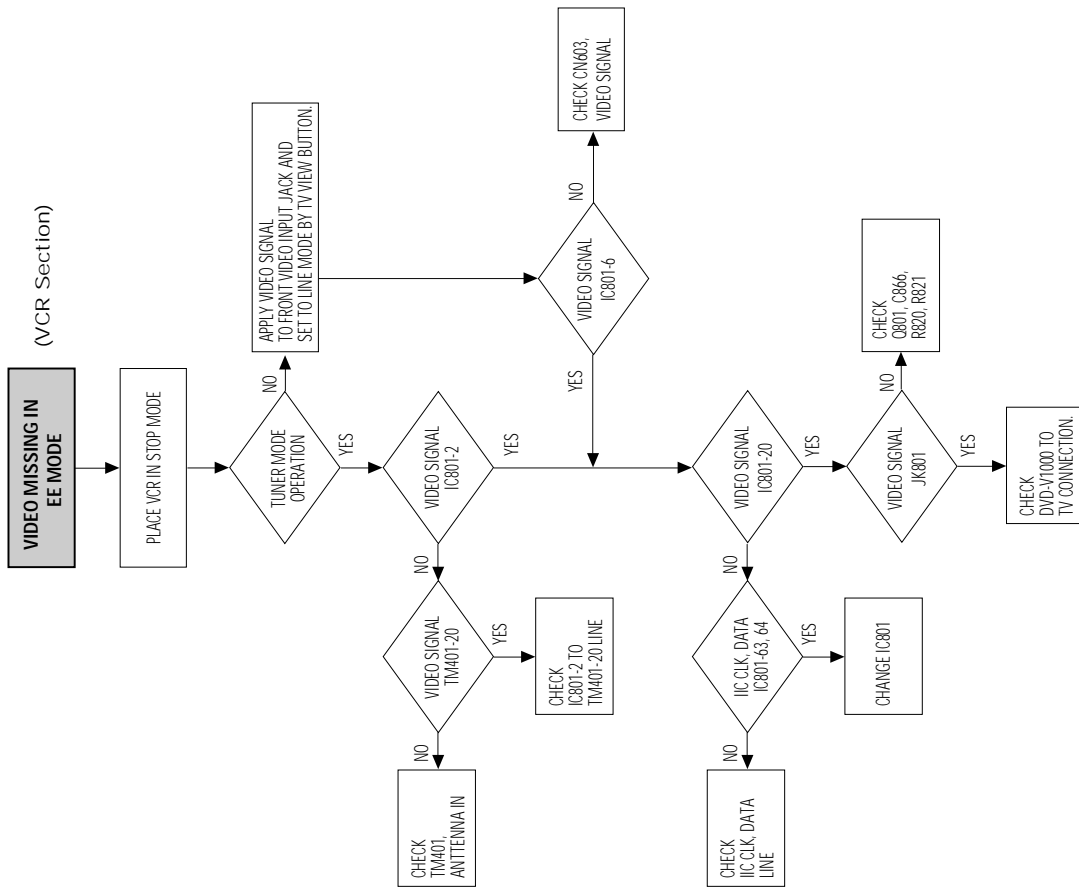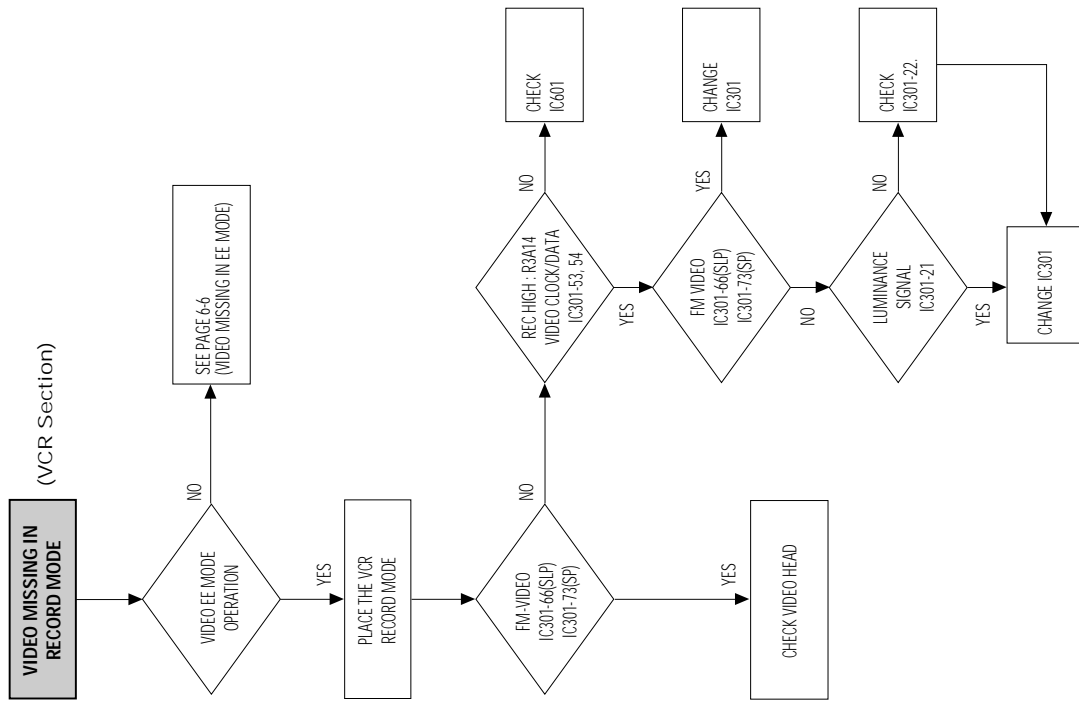

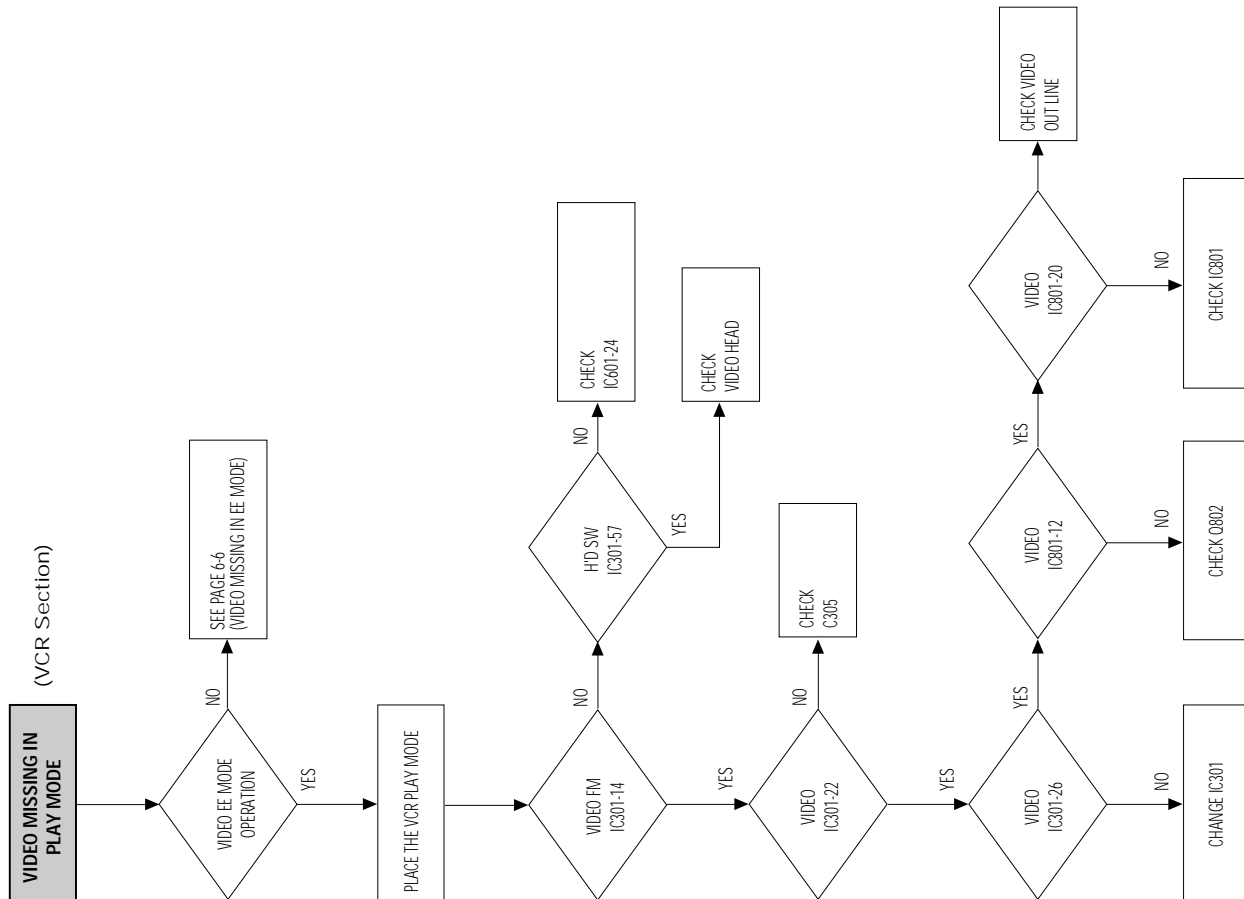
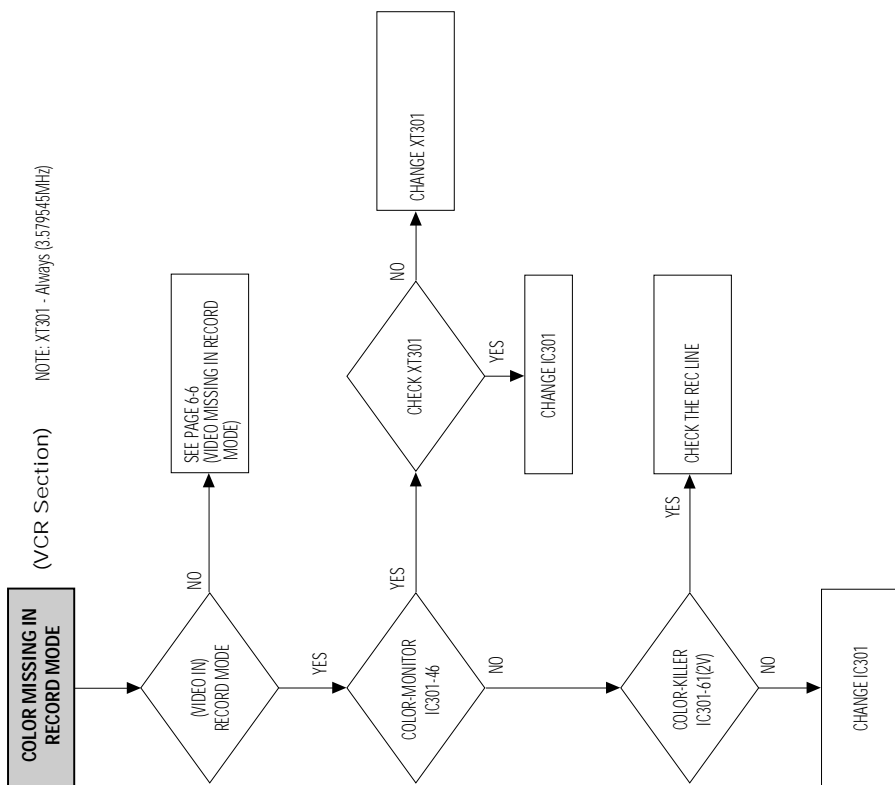


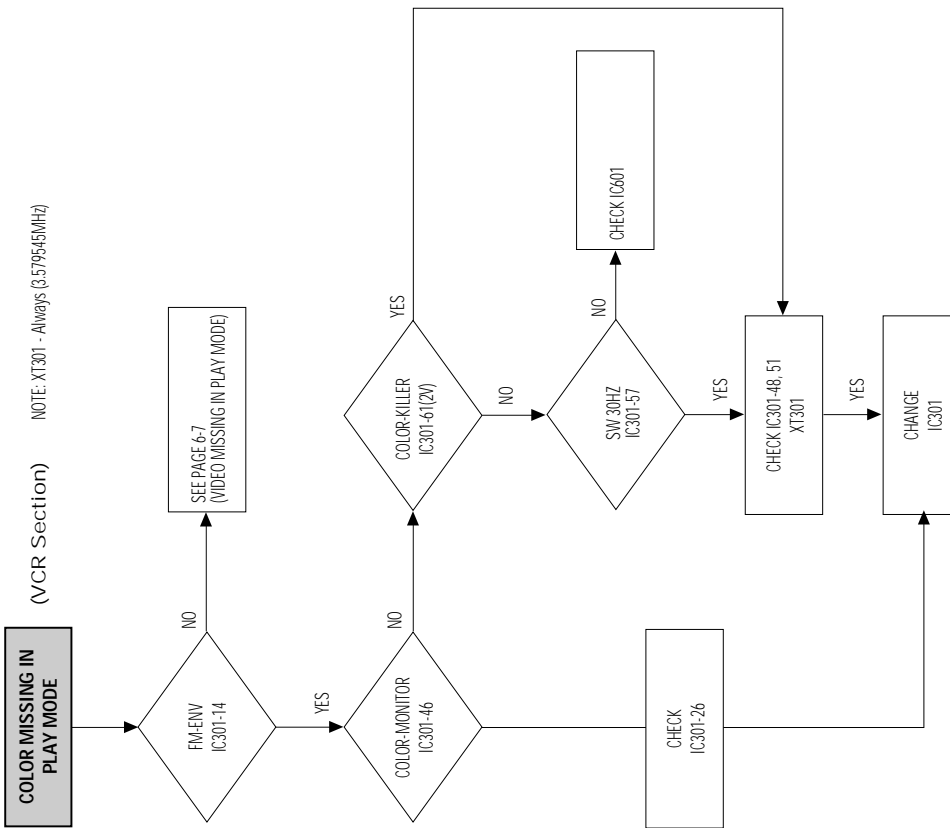
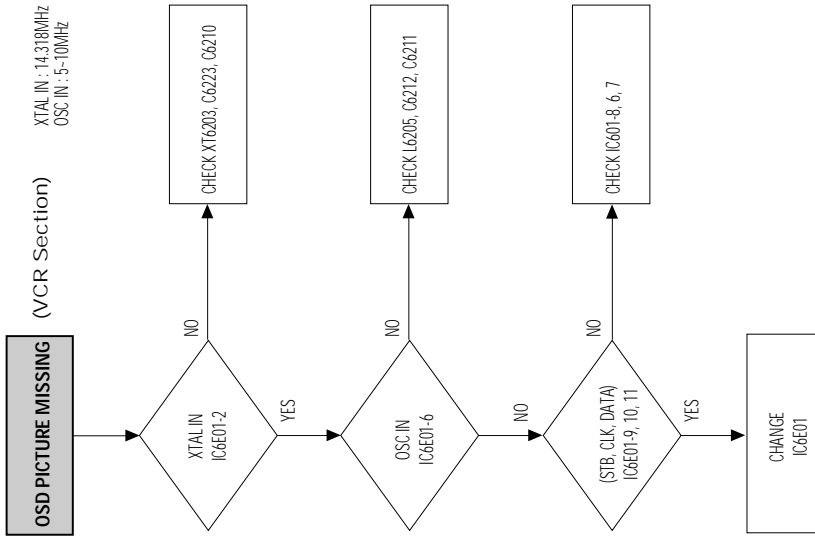


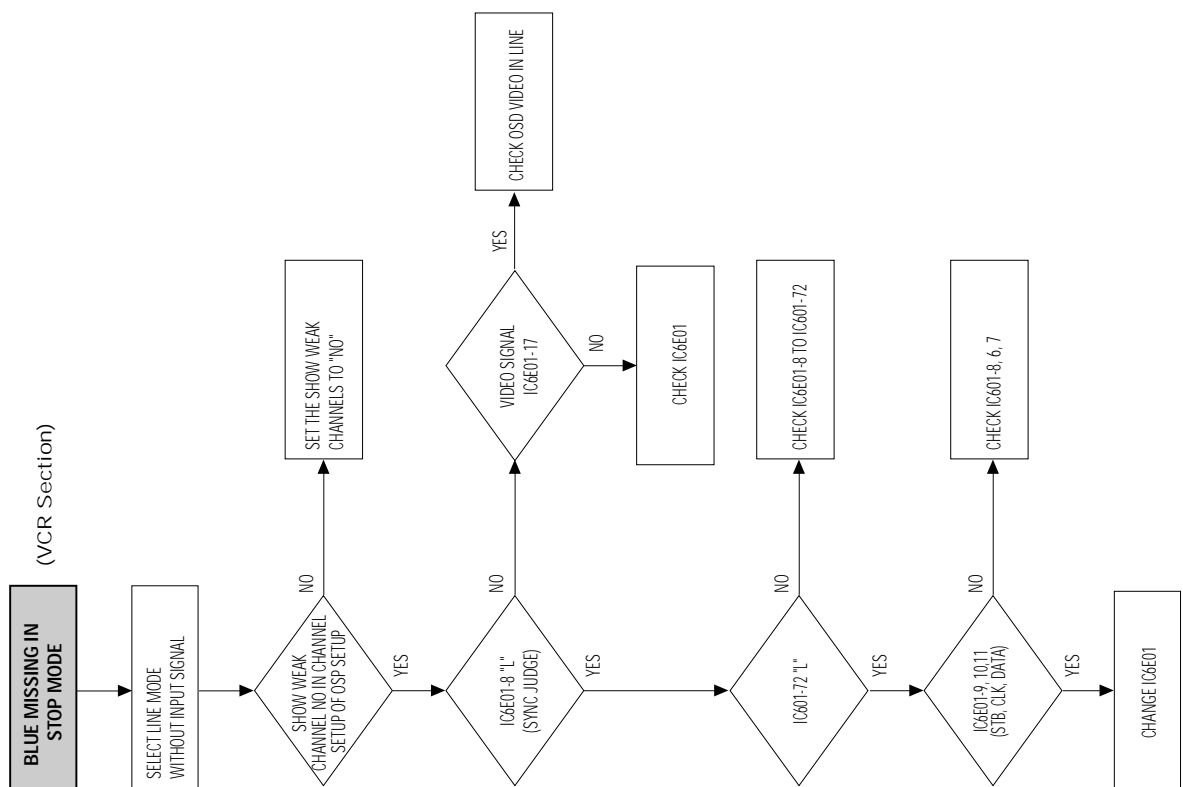
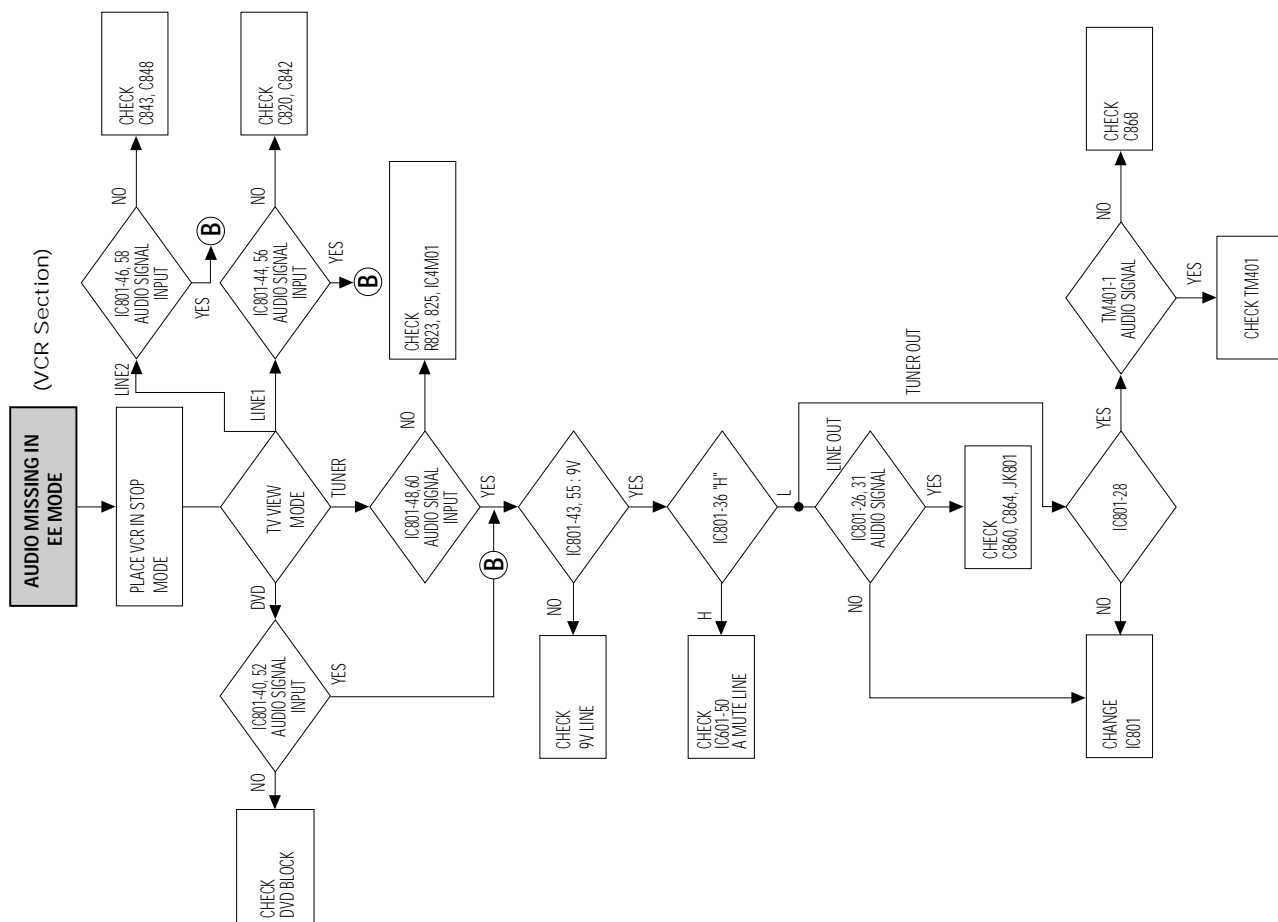


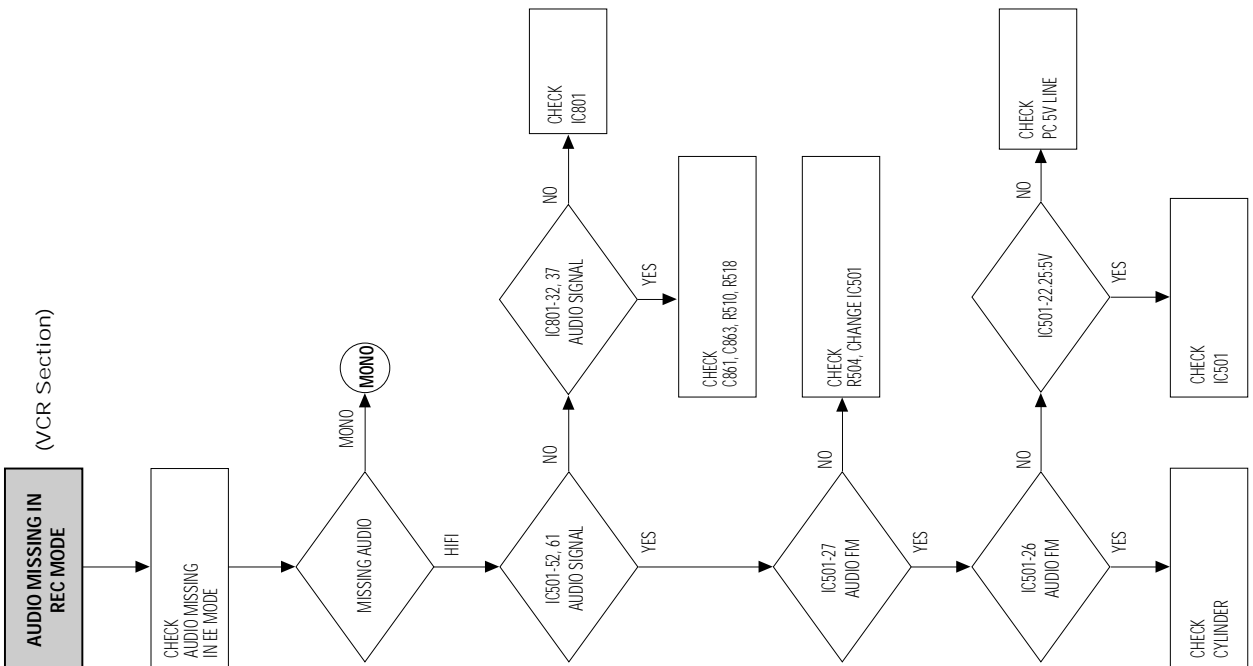
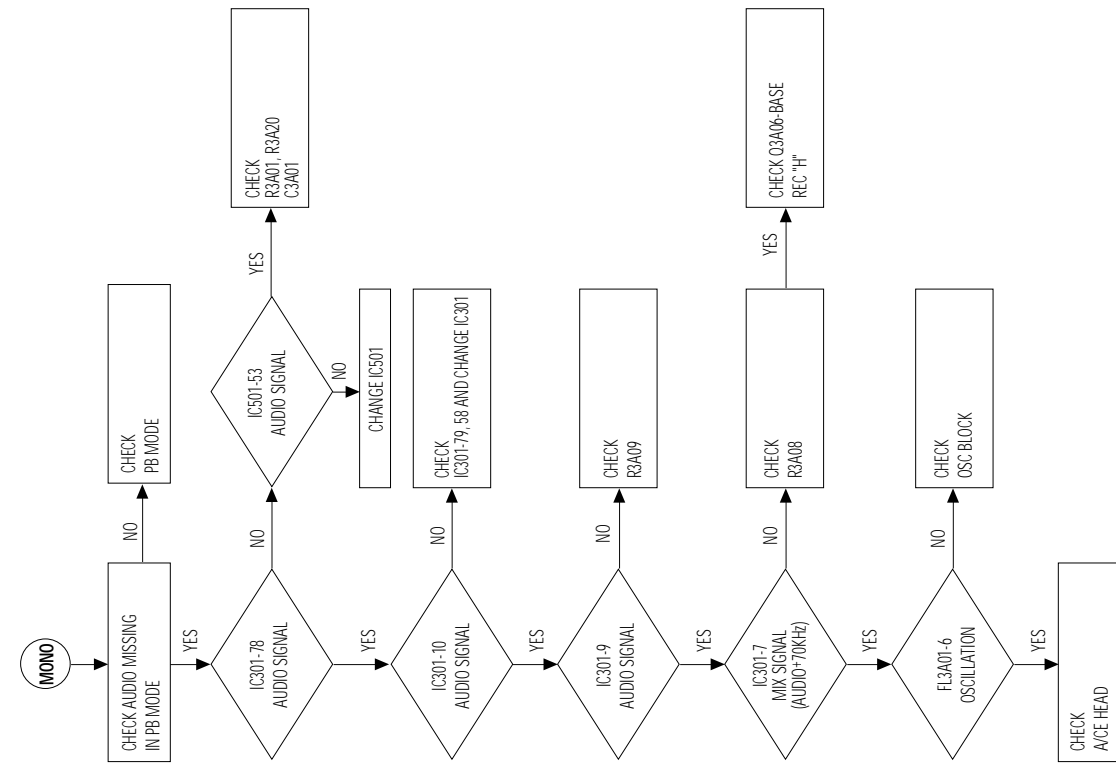





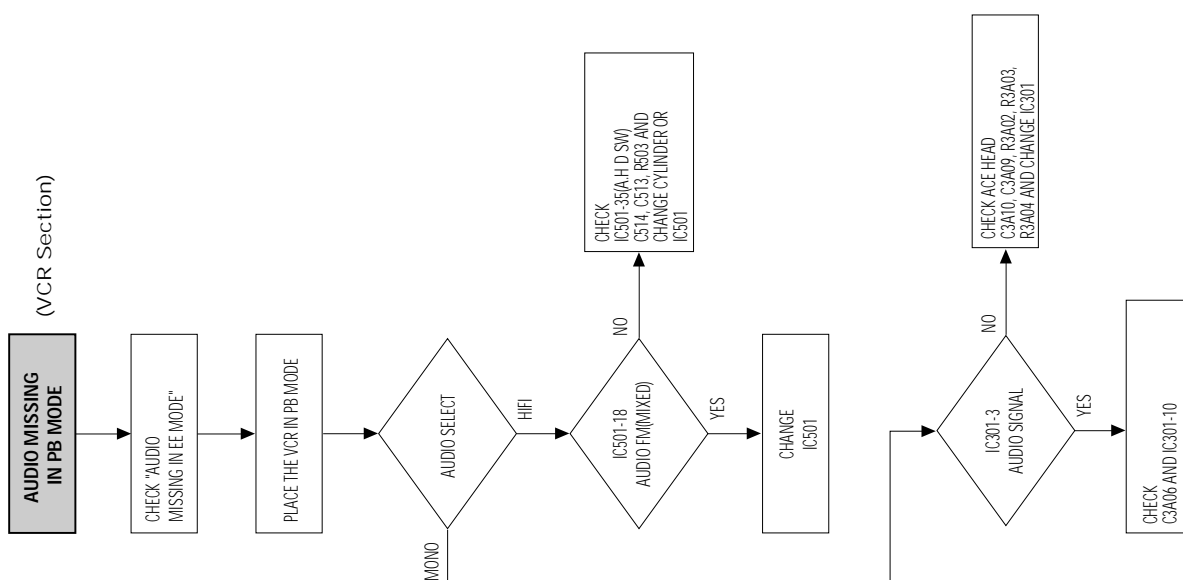
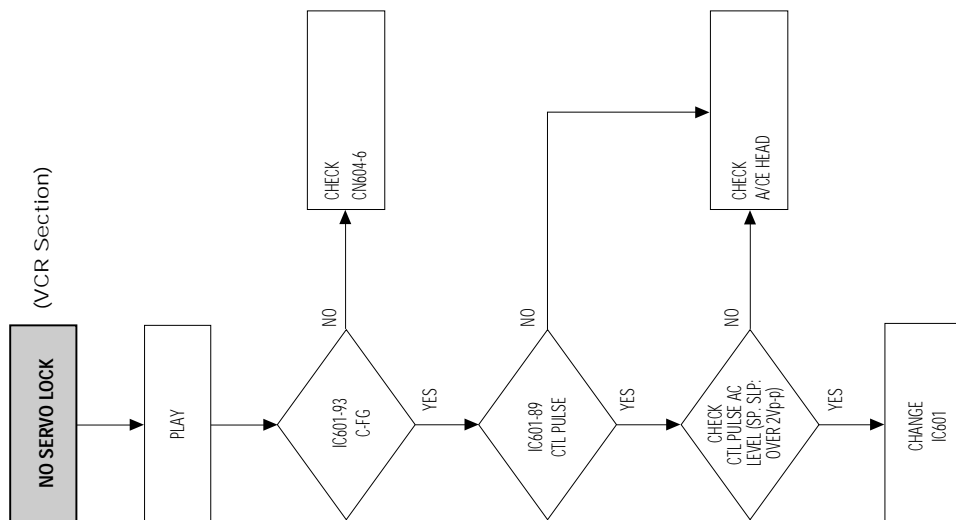


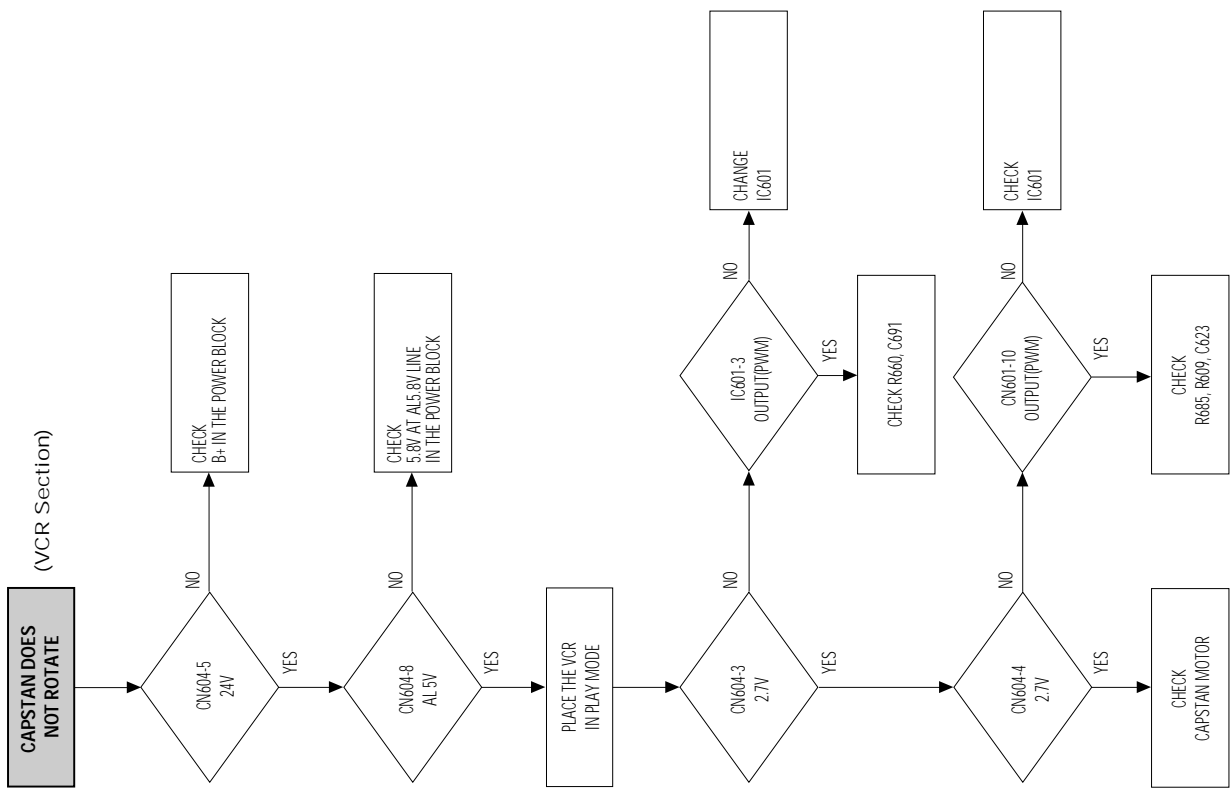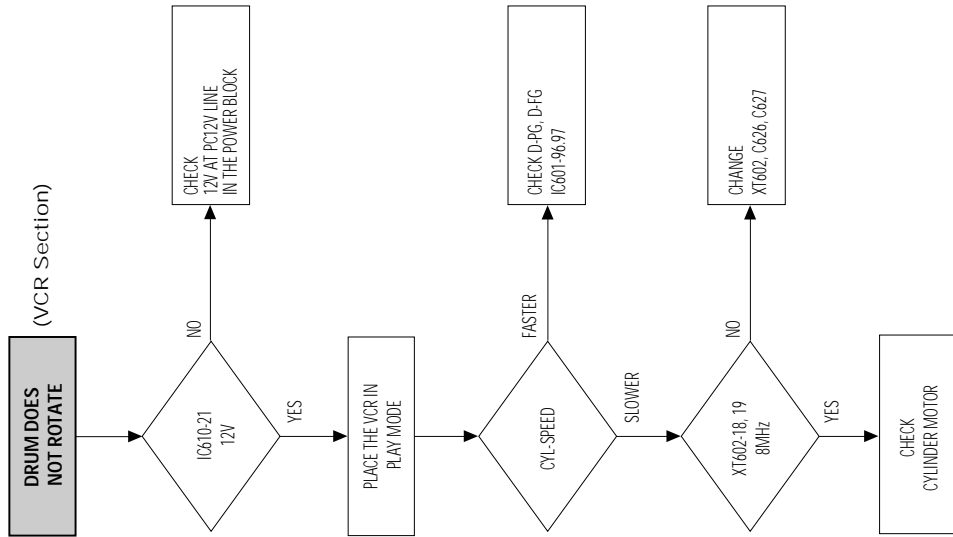


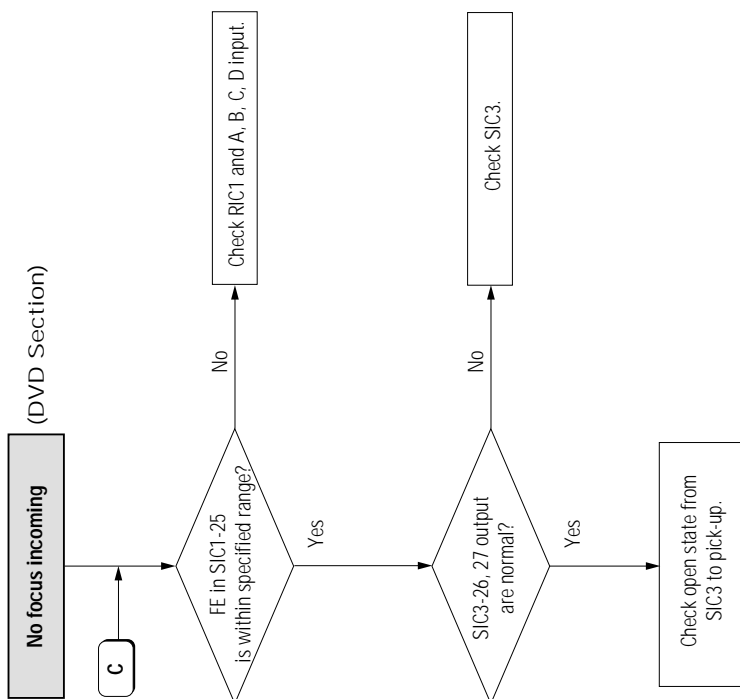
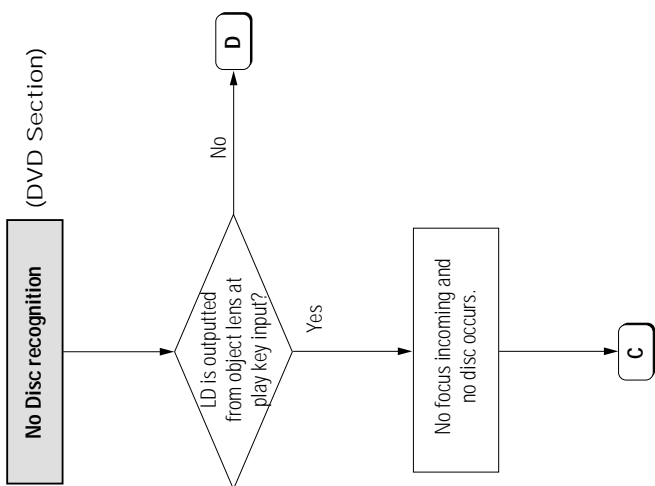


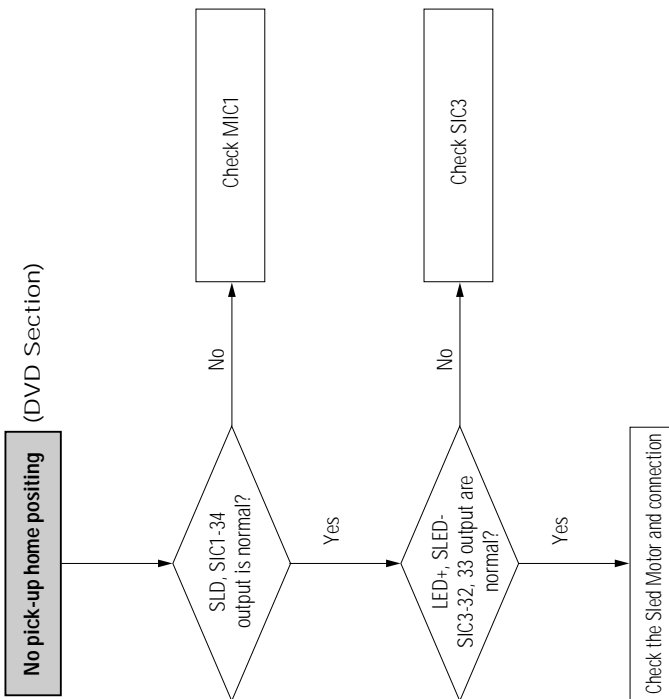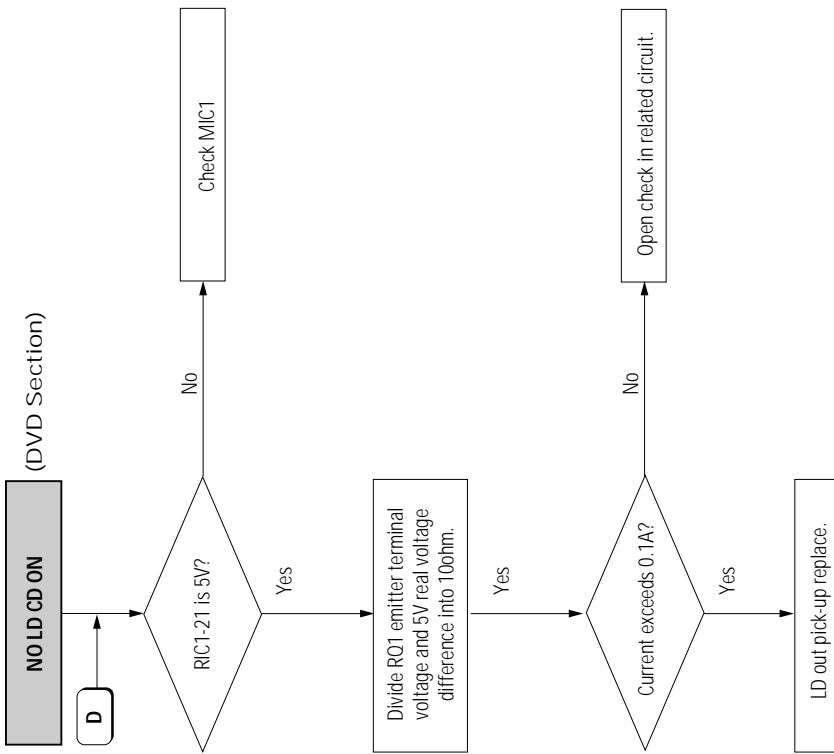

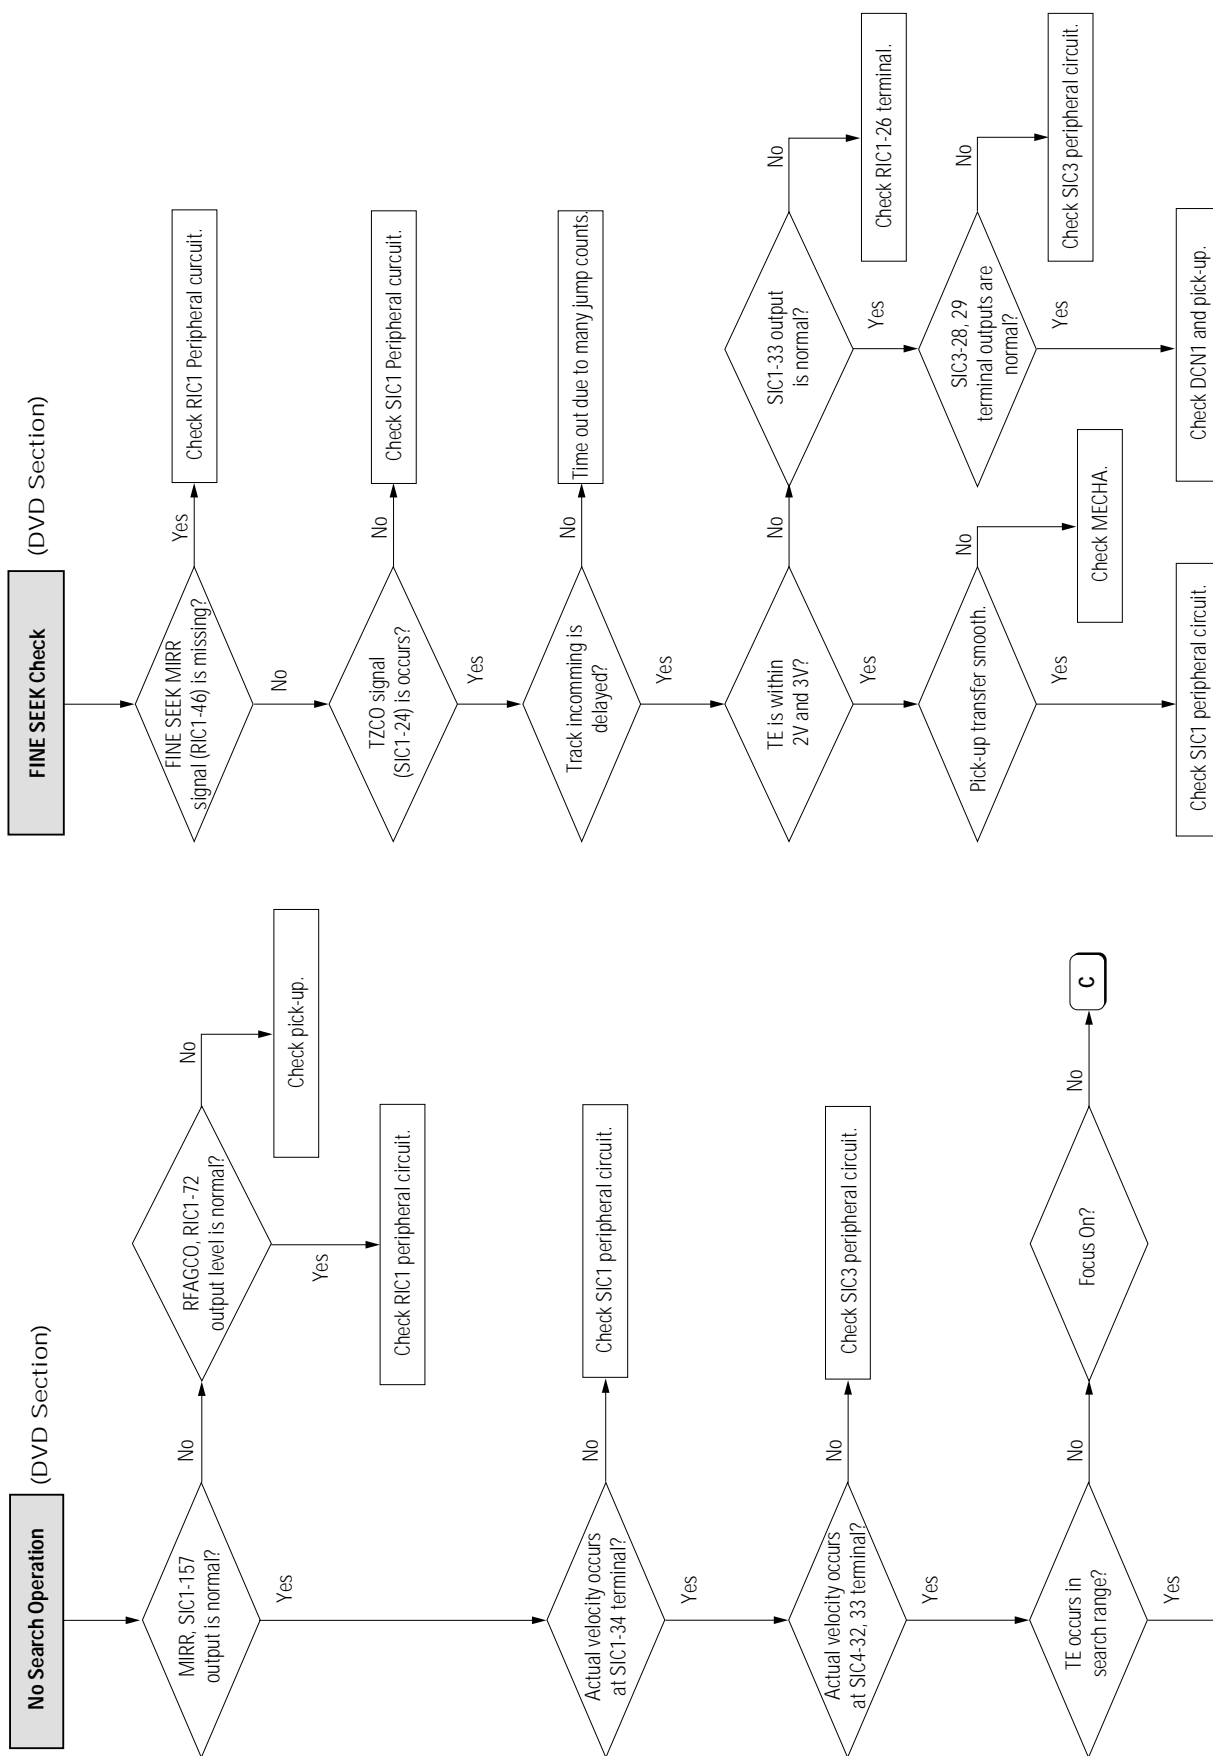


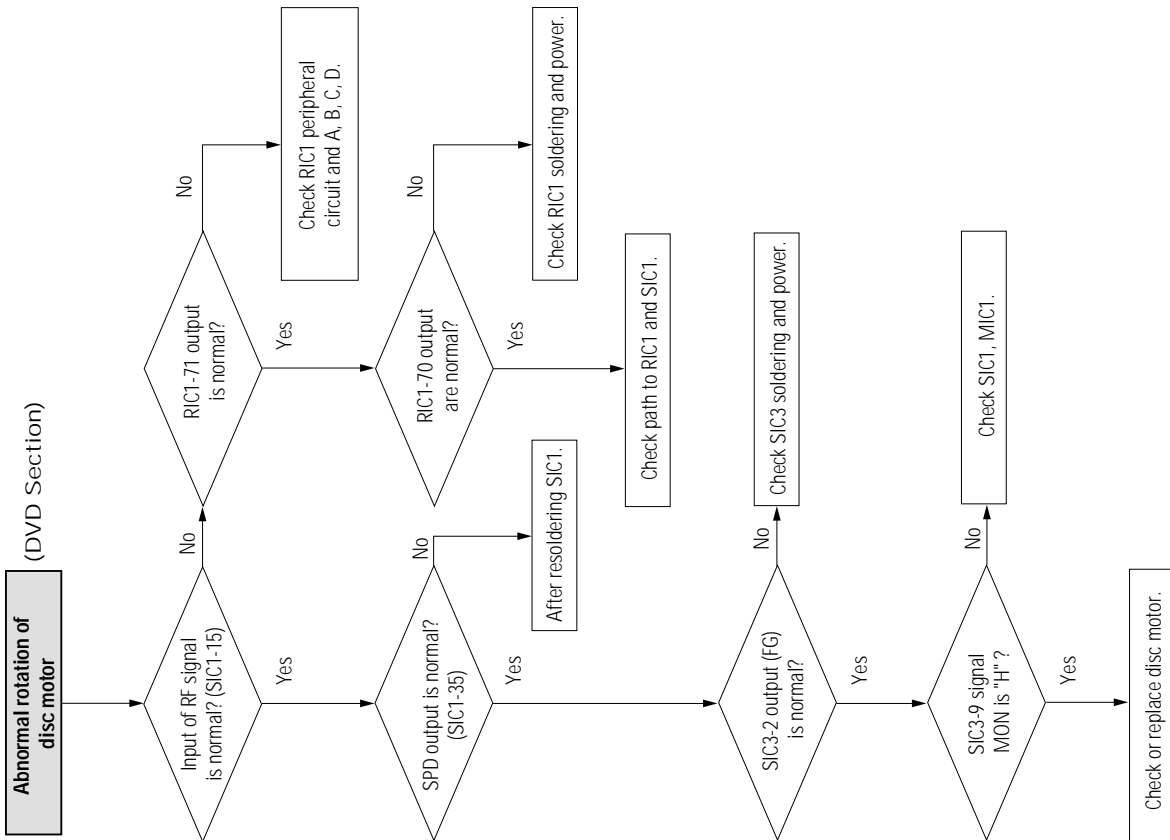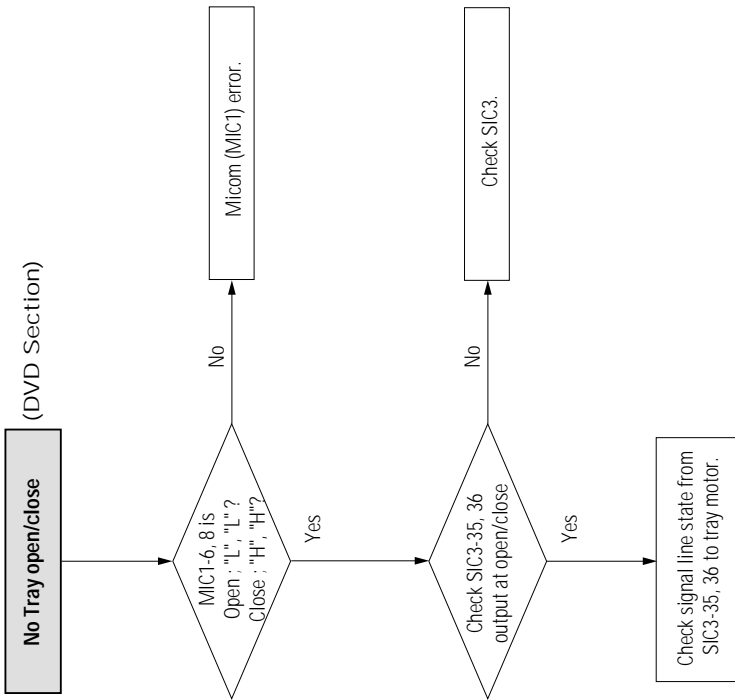

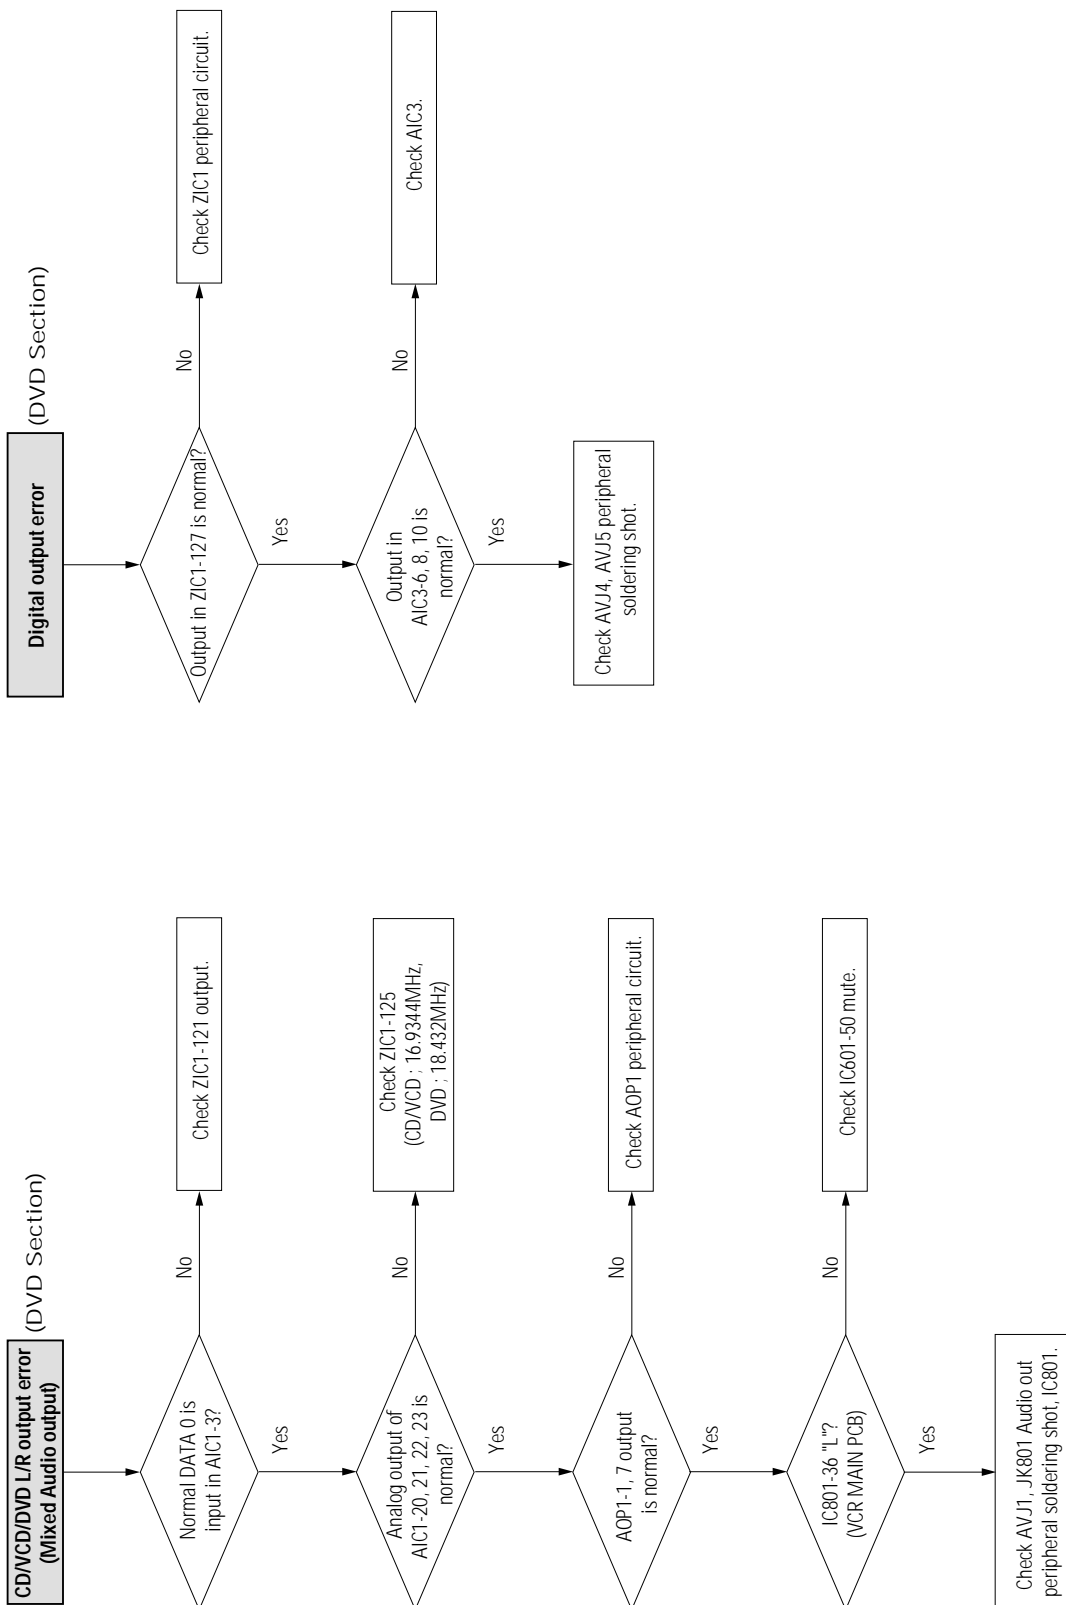

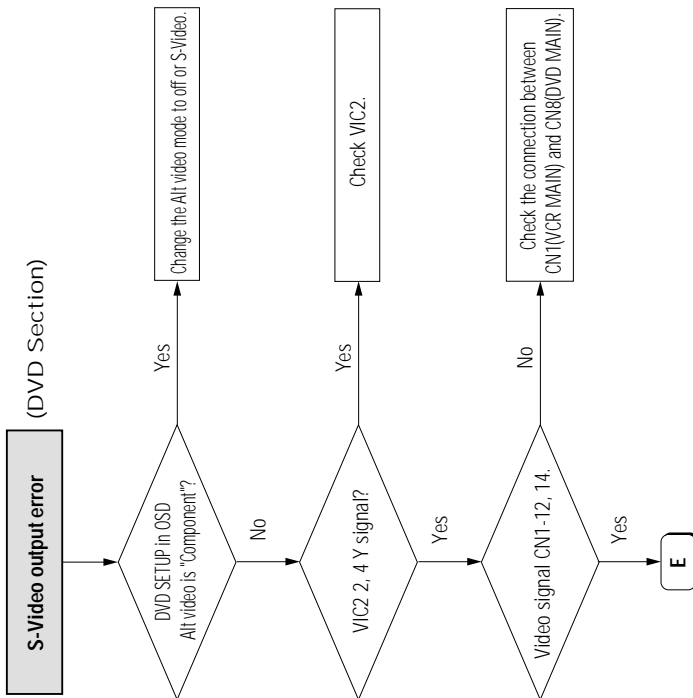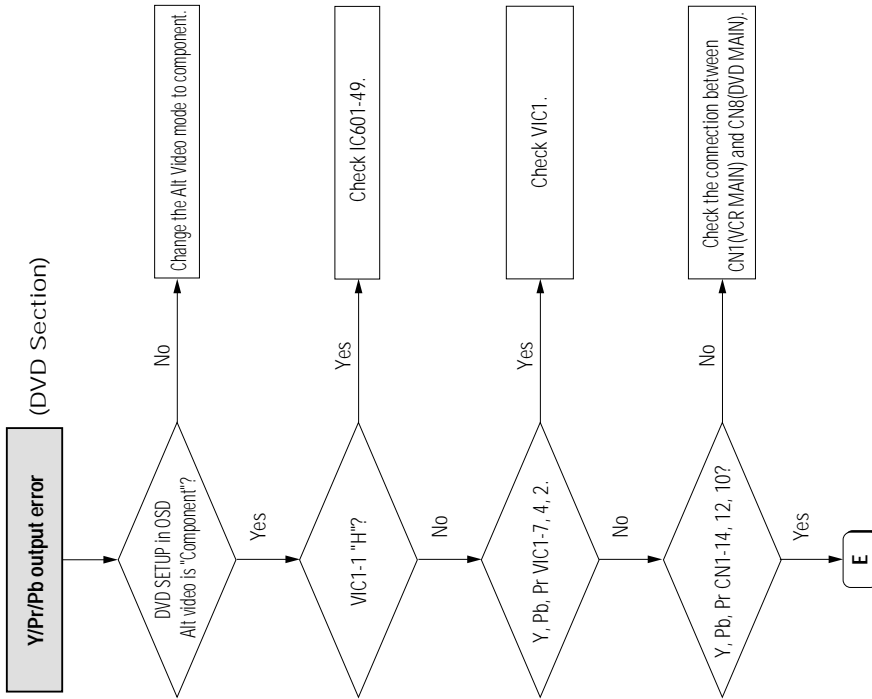



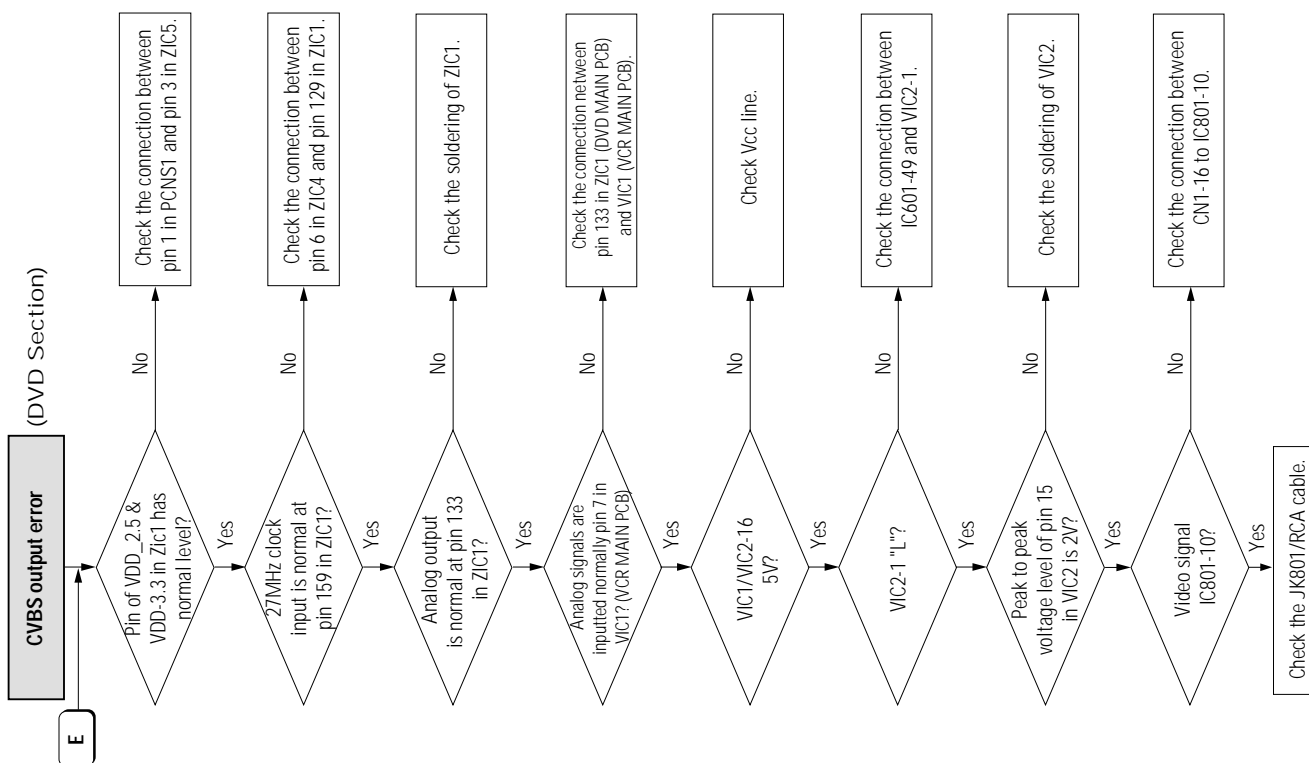

# MEMO


---

## 6. Exploded View and Parts List

---

6-1 Cabinet Assembly	6-2
6-2 VCR Mechanical Parts (Top Side)	6-4
6-3 VCR Mechanical Parts (Bottom Side)	6-6
6-4 DVD Mechanical Parts	6-8


## 6-1 Cabinet Assembly

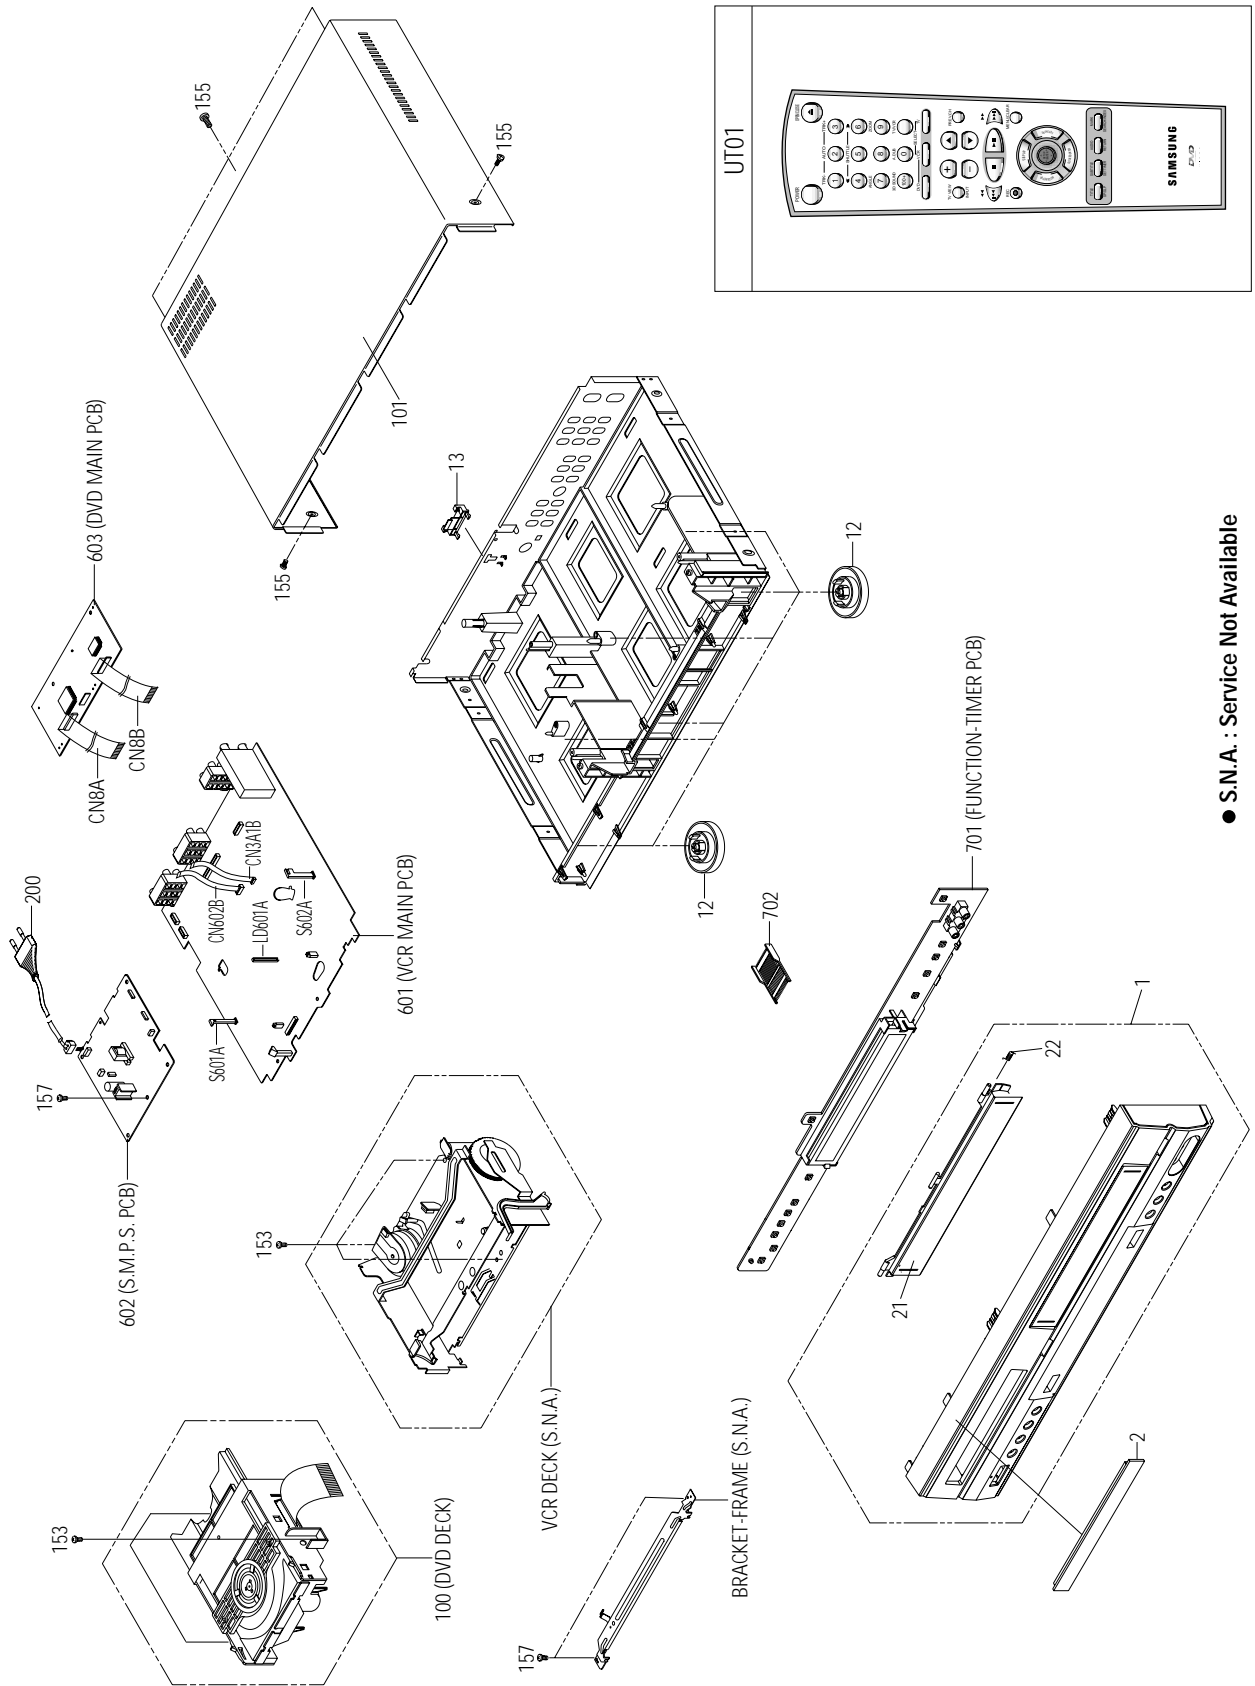

● S.N.A. : Service Not Available

Loc. No	Parts No.	Description ; Specification	Remark
1	AC97-01576A	ASSY-PANEL FRONT;HIPS94V2,DVD-V5000/AFS	
2	AC97-01448A	ASSY-DOOR TRAY;ABS94HB,SV-DVD2E,SILVER	
12	AC64-42114A	DECORATION-LEG;SV-4500W,ABS94,HB,-,D/GRY	
13	AH61-00303A	HOLDER-CORD POWER;- ,ABS 94HB,-,BLK,-,DVD	
21	AC64-00736A	DOOR-CASSETTE;SV-DVD2,ABS 94HB,-,SILVER,	
22	AC61-62032A	SPRING-MASK;X-9,-,SUS,-,4.4,-,SV-C130	
100	AH97-00714D	ASSY-DVD DECK;DP-7,2LD,COMBO2(MILLENO)	
101	AC64-00429C	CABINET TOP;SV-DVD1E,-,PCM(SECC),-,SV-22	
153	AC60-12126A	SCREW-BH;- ,-,FE,FZY,BH,-,4*12,-,-	
155	6003-000275	SCREW-TAPTITE;BH,+ ,B,M3,L10,BLK ,SWCH101	
157	AC60-10063A	SCREW-TAPTITE;- ,-,L12,ZPC3,+ ,-,M3,-,SWRC	
200	AC39-10019A	POWER-CORD;KKP-419C,H03VVH2-F,VFD/KEMA-K	
601	AC92-01010A	ASSY PCB VCR-MAIN DIGITAL;DVD-V1000,DVD+VCR,	
602	AC92-01029A	ASSY PCB-SMPS;SV-DVD90,A/DUB,SP/LP,MULTI	
603	AH92-01004C	ASSY PCB DVD-MAIN;DVD-V1000D/XAA,AUD.B, 4H,	
701	AC92-01031A	ASSY PCB-F/T;DVD-V1000,A/DUB,SP/LP,MULTI	
702	3711-003460	CONNECTOR-HEADER;NOWALL,20P,1R,1.5mm,STR	
CN3A1B	3809-001206	CABLE-FLAT;30V,-20to+80C,140mm,6P,1.25mm	
CN602B	3809-001131	CABLE-FLAT;30V,80C,110MM,7P,1.25MM,UL289	
CN8A	3809-001264	CABLE-FLAT;30V,80C,260MM,35P,1.25MM,UL28	
CN8B	3809-001265	CABLE-FLAT;30V,80C,300MM,35P,1.25MM,UL28	
LD601A	AC61-21009A	HOLDER-LED;- ,POM(M90-44),-,BLK,-,X-9	
S601A	AC61-21008A	HOLDER-SENSOR;- ,POM(M90-44),-,BLK,-,X-9	
S602A	AC61-21008A	HOLDER-SENSOR;- ,POM(M90-44),-,BLK,-,X-9	
UT01	AC59-00052B	REMOCON-ASSY;SVD-V1000,-,-,38KEY,-,-,-	


## 6-2 VCR Mechanical Parts (Top Side)

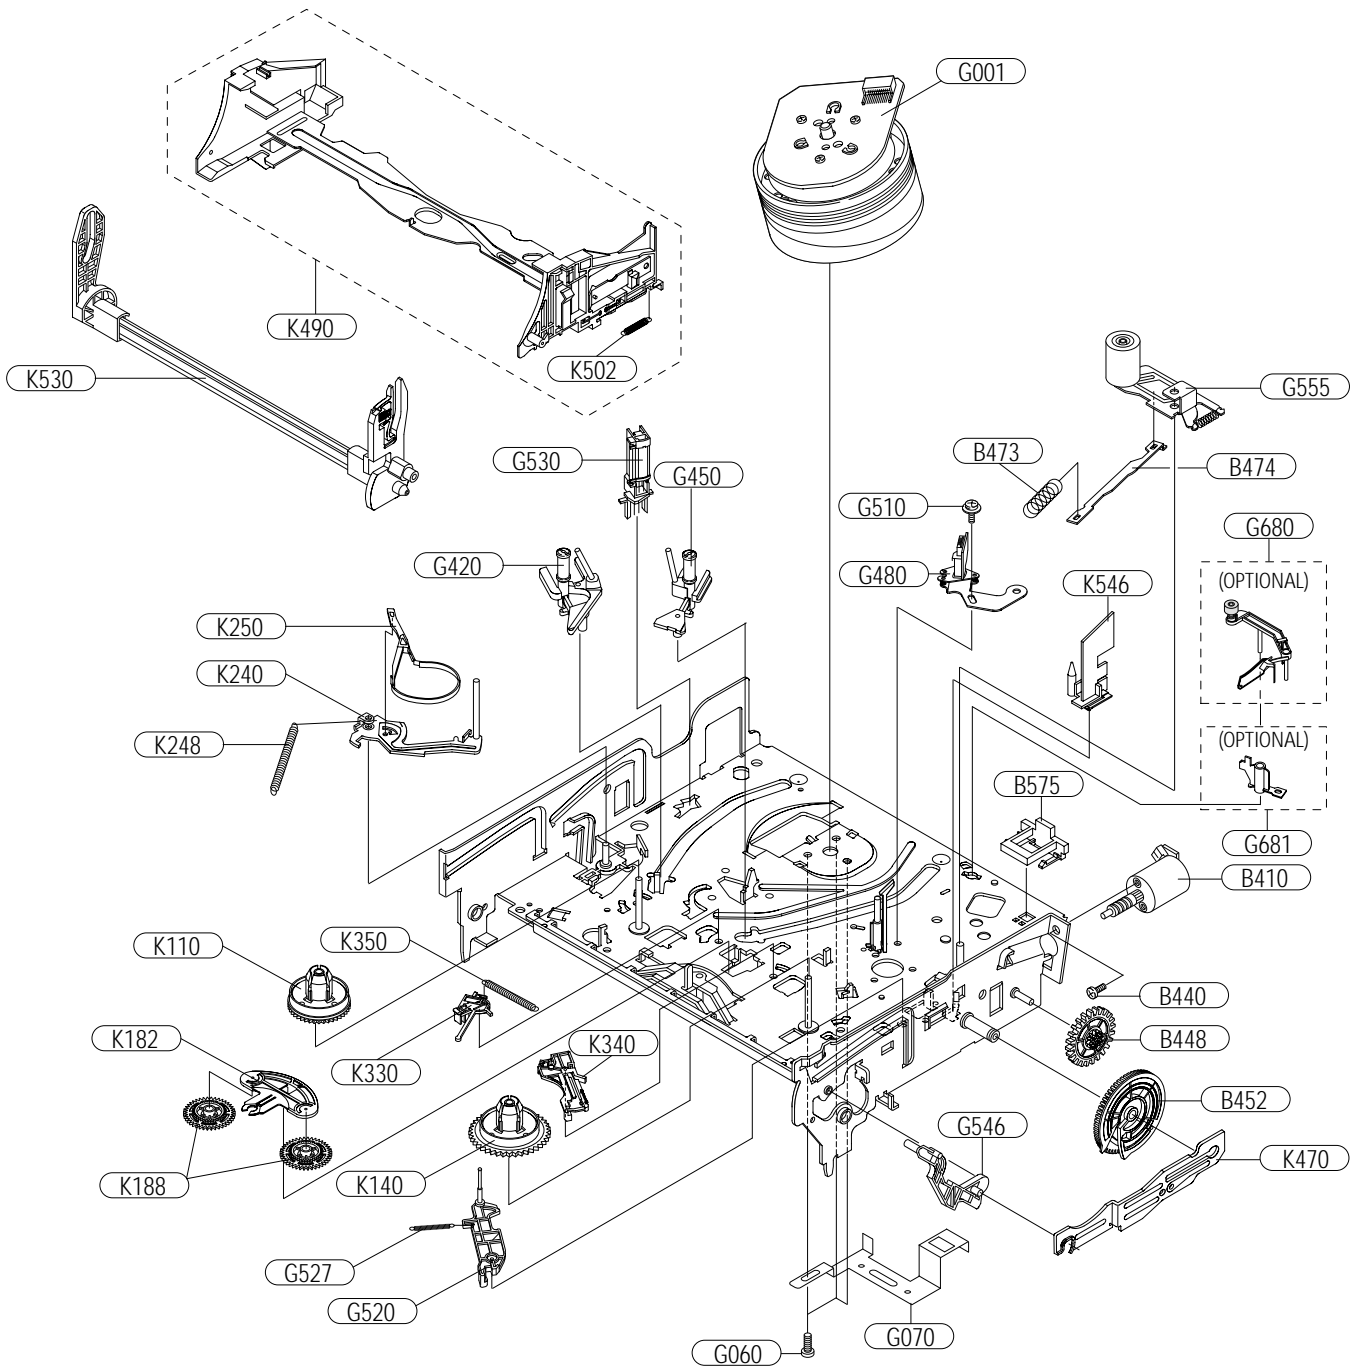

Loc. No	Parts No.	Description ; Specification	Remark
B410	AC31-00012A	MOTOR-LOADING ASSY;TS-10,-,-,-,-,-,-,-,-,-,-	
B440	AC60-10515A	SCREW-MACHINE;,-,-,M3,L3,PH,+,-,-,-,ZPC,-	
B448	AC66-00008A	GEAR-WORM WHEEL;TS-10,POM,0.8,40,-,NAT,3	
B452	AC66-00011A	GEAR-FL CAM;TS-10,POM,0.8,59,-,BLK,48.48	
B473	AC61-00105A	SPRING-PINCH DRIVE;TS-10,SUS304-WPB,-,-,-,-,-	
B474	AC61-30180A	PLATE-JOINT;X-9,SECC20/20,T0.8,-,-,-,-,-	
B575	AC47-00002A	DAMPER-CAPSTAN;TS-10,POM,-,-,-,BLACK	
G001	AC97-01507A	ASSY-CYLINDER;NTSC ,6HD,CTS10A,SEM 'S H	
G060	6006-001092	SCREW-ASS'Y MACH;WS,PH,+,-,M3.0,L6.0,ZPC(Y	
G070	AC61-00161A	PLATE-GROUND DECK;TS-10,SPT,E,T0.3,-,-,-,-,-	
G420	AC66-80142A	SLIDER-SUPPLY ASSY;,-,X-9(TS),-,-,-,-,-,X-9	
G450	AC66-80141A	SLIDER-TAKE UP ASSY;,-,X-9(TS),-,-,-,-,-,X-9	
G480	AC33-00009A	HEAD-ACE ASS'Y;,-,PPS,TS-10,-,-,-,-,-	
G510	6006-001075	SCREW-ASS'Y TAPT;WSP,PH,+,-,M2.6,L5.0,ZPC(	
G520	AC66-00033A	LEVER-#9 GUIDE ASS'Y;TS-10,-,-,-,-,-,-,-,-,-	
G527	AC61-60553A	SPRING-#9 GUIDE;,-,ES,SUS304-WPB,OD3.1,0.	
G530	AC33-00007A	HEAD-FE;,-,-,HVHFOO43A,-,-,-,-,-	
G546	AC66-00005A	LEVER-FL DOOR;TS-10,POM,-,-,-,-,-,NAT,-	
G555	AC66-00032A	LEVER-UNIT PINCH ASS'Y;TS-10,-,-,-,-,-,-,-,-,-	
G680	AC66-00046A	LEVER-HEAD CLEANER ASS'Y;TS-10,POM+URETH	(OPTIONAL)
G681	AC61-50686A	SLEEVE-HEAD CLEANER;,-,POM,-,-,-,-,-,-,-,TS	(OPTIONAL)
K110	AC66-10267A	REEL-DISK S;X-9,POM,-,-,-,-,-,-,-,-,-	
K140	AC66-10268A	REEL-DISK T;X-9,POM,-,-,-,-,-,-,-,-,-	
K182	AC66-30524A	LEVER-IDLER;,-,POM,-,-,-,-,-,-,-,-,-	
K188	AC66-00039A	GEAR-IDLE;TS-10,PET K3372,0.5,-,-,-,NTR,28	
K240	AC66-00035A	LEVER-TENSION ASS'Y;TS-10,SECC E20/20+SU	
K248	AC61-00107A	SPRING-TENSION LEVER;TS-10,SUS304-WPB,-,-,-,-,-	
K250	AC69-00104A	BAND-BRAKE ASS'Y;TS-10,-,-,-,-,-,-,-,-,-	
K330	AC66-30550A	LEVER-S.BRAKE ASSY;,-,POM+SUS,-,-,-,-,-,X-9	
K340	AC66-30549A	LEVER-T.BRAKE ASSY;,-,POM+SUS,-,-,-,-,-,X-9	
K350	AC61-00106A	SPRING-BRAKE;TS-10,SUS304-WPB,-,-,-,-,-,-,-,-	
K470	AC66-00020A	SLIDER-FL DRIVE;TS-10,SECC E20/20,1.0,-,-,-,-,-	
K490	AC61-00120A	HOLDER-FL CASS. ASS'Y;TS-10,-,-,-,-,-,-,-,-,-	
K502	AC61-60561A	SPRING-FL.LEVER-LR;,-,ES,SUS304 WPB,PI2.7	
K530	AC66-00034A	LEVER-FL ARM ASS'Y;TS-10,-,-,-,-,-,-,-,-,-	
K546	AC61-50658A	GUIDE-CASS. DOOR;X-9,POM,-,-,-,-,-,NTR	

### 6-3 VCR Mechanical Parts (Bottom Side)


---

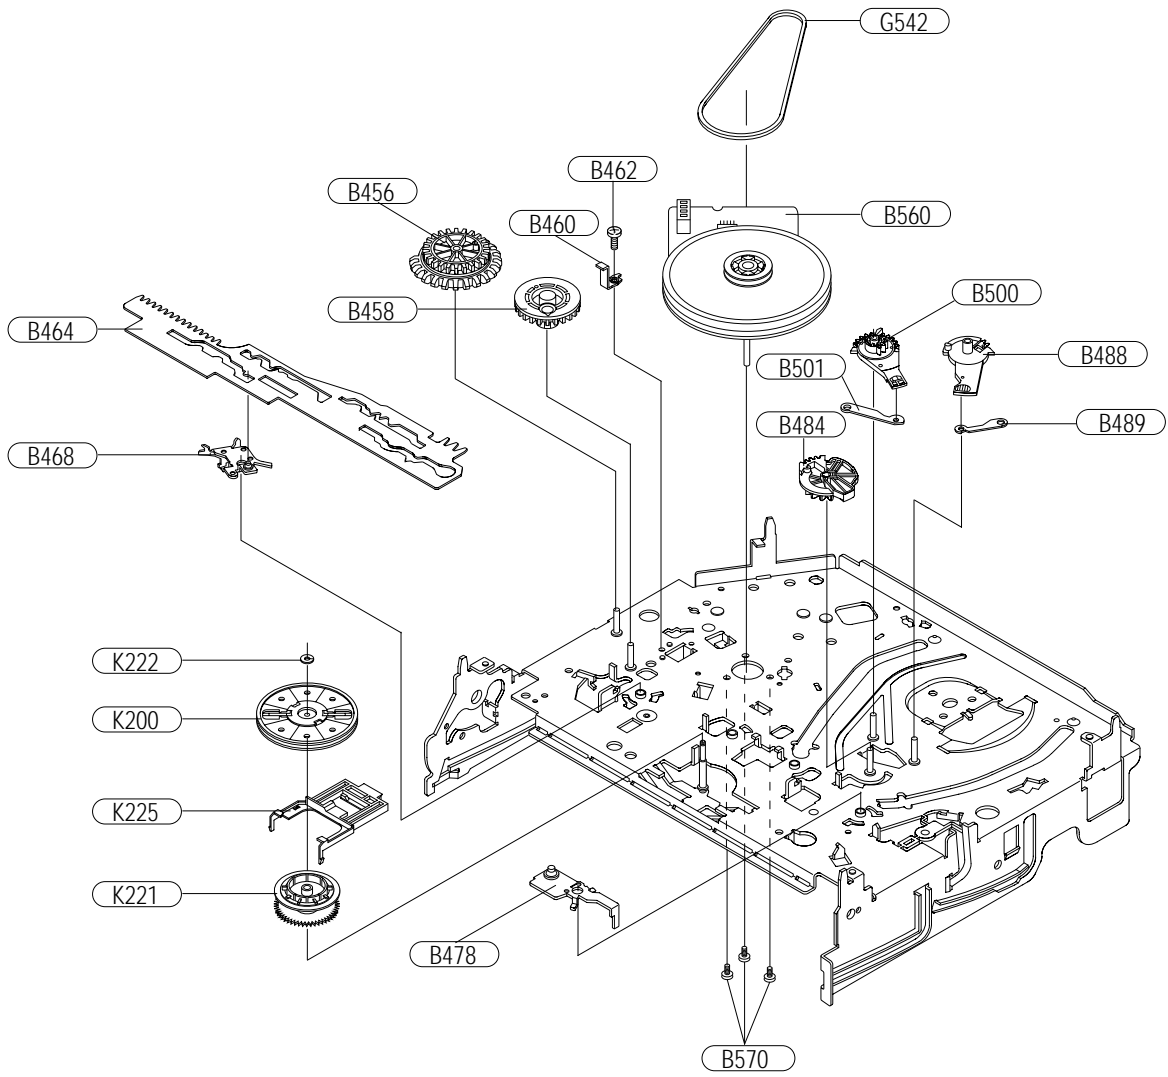



Loc. No	Parts No.	Description ; Specification	Remark
B456	AC66-00009A	GEAR-JOINT 1;TS-10,POM,1.5,17.5(22),-,NA	
B458	AC66-00012A	GEAR-JOINT 2;TS-10,POM,1.0,23,-,BLK,24.6	
B460	AC61-00090A	BRACKET-GEAR;TS-10,SECC E20/20,0.8,-,-,-	
B462	AC60-10517A	SCREW-TAP TITE;-,-,M2.6,L5,PH,+,-,-,ZPC,	
B464	AC66-00019A	SLIDER-CAM;TS-10,SECC E20/20,1.2,-,-,-,-	
B468	AC66-00017A	LEVER-PINCH DRIVE;TS-10,SECC E20/20,1.0	
B478	AC66-00016A	LEVER-TENSION DRIVE;TS-10,SECC E20/20,1	
B484	AC66-00030A	GEAR-LOADING DR. ASS'Y;TS-10,POM+SWPB,-,	
B488	AC66-00023A	LEVER-S LOADING;TS-10,POM,-,-,-,-,NAT,-	
B489	AC66-00021A	LINK-LOADING S;TS-10,SECC E20/20,0.8,-,-	
B500	AC66-00024A	LEVER-T LOADING;TS-10,POM,-,-,-,-,NAT,-	
B501	AC66-00022A	LINK-LOADING T;TS-10,SECC E20/20,0.8,-,-	
B560	AC31-00010A	MOTOR-CAPSTAN;-,-,SANKYO,-,-	
B570	AC60-10514A	SCREW-CAPSTAN;-,-,M2.6,L6,PH,+,-,-,-,-	
G542	AC66-60051A	BELT-PULLEY;-,-,5CM-70,2 * 2,-,-,71.3,-,-,X-9	
K200	AC61-21012A	HOLDER-CLUTCH ASSY;-,-,-,-,-,-,X-9	
K221	AC66-20581A	GEAR-CENTER ASSY;-,-,POM,M=0.5,-,-,HIGHT T.,	
K222	AC60-30306A	WASHER-SLIT;-,-,ID2.1,OD5.0,T0.5,-,-,POLYS	
K225	AC66-00006A	LEVER-UP DOWN;TS-10,POM,-,-,-,-,NAT,-	

## 6-4 DVD Mechanical Parts

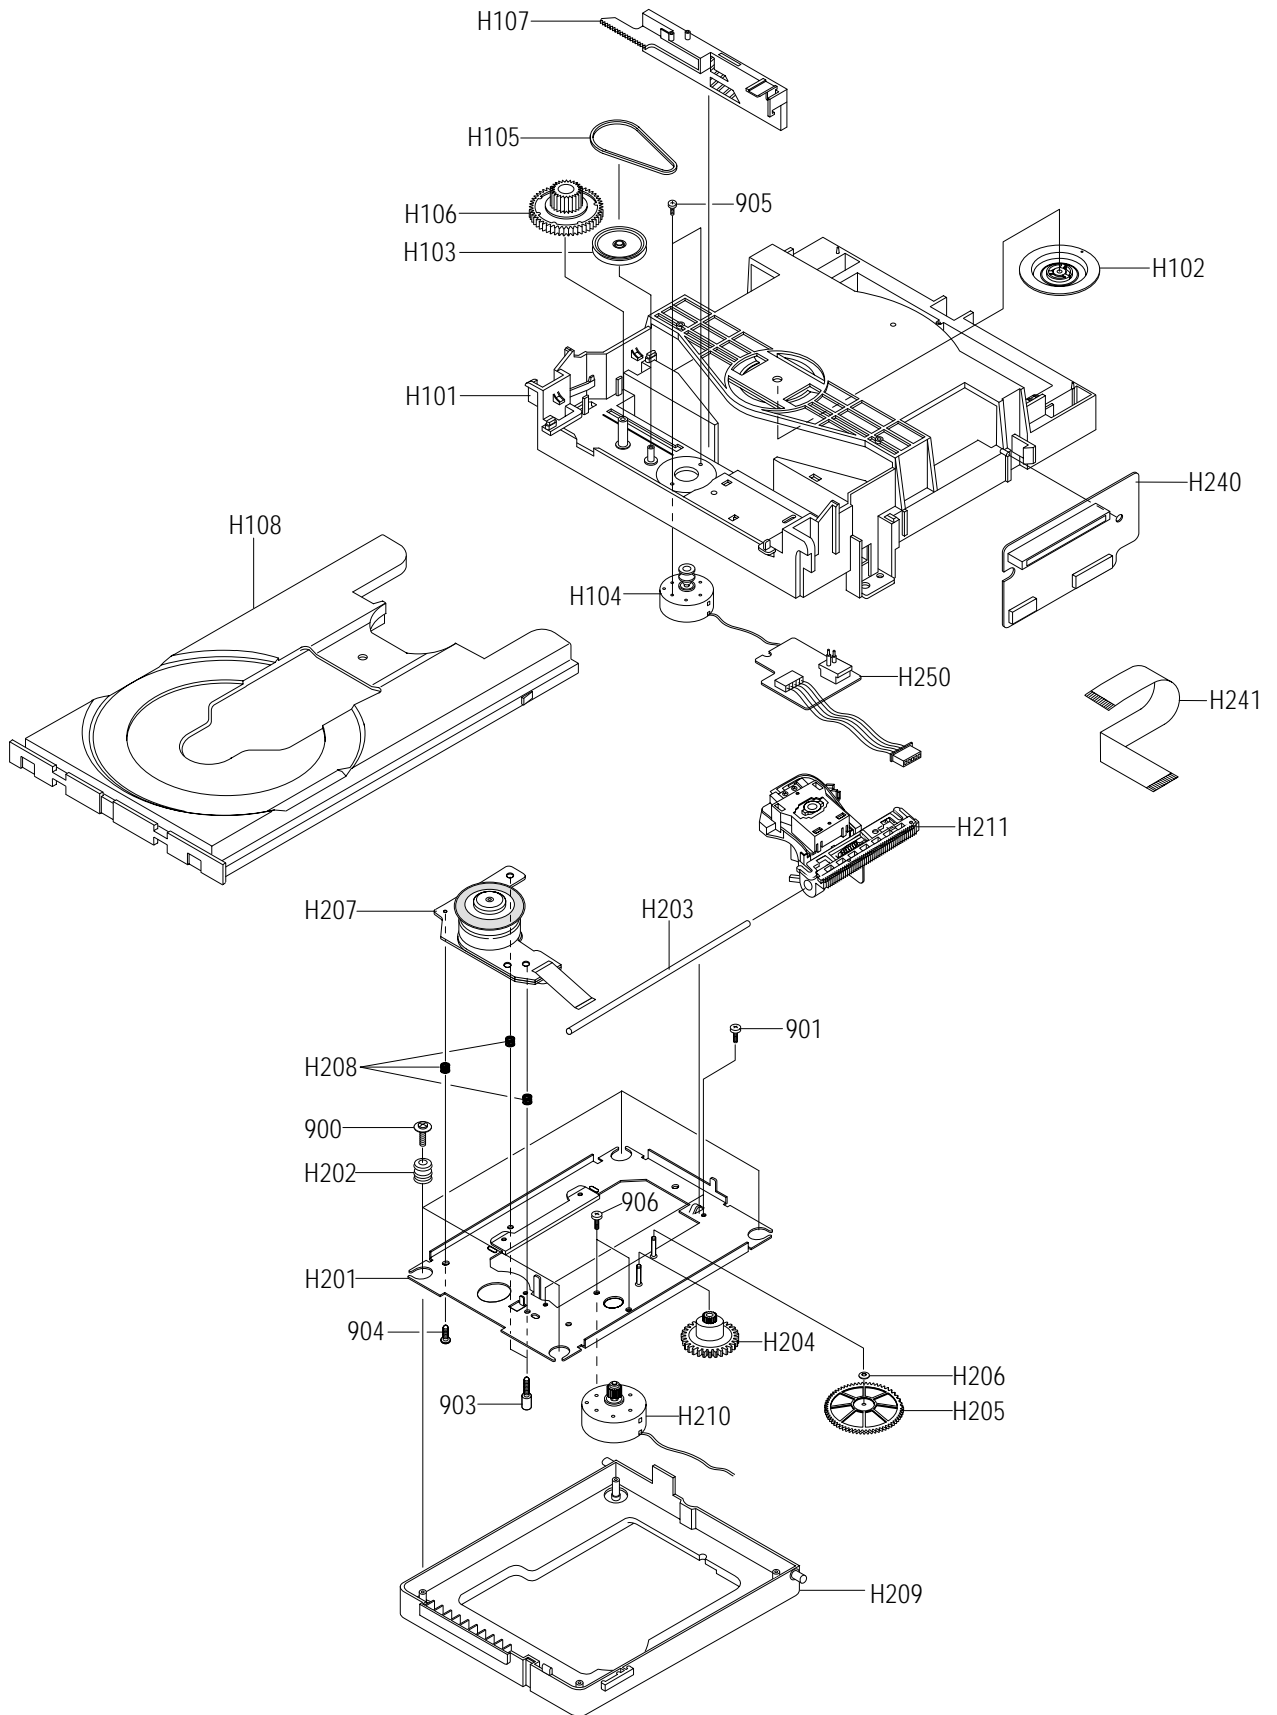

Loc. No	Parts No.	Description ; Specification	Remark
900	6003-001157	SCREW-TAPTITE;PWH,+,B,M2,L6,ZPC(YEL),SWR	
901	6001-001332	SCREW-MACHINE;FH,+,M2,L8,ZPC(YEL),SWRCH1	
903	6009-001245	SCREW-SPECIAL;SWRCH18A,NYLOCK,SOCKET,HEX	
904	6001-001196	SCREW-MACHINE;BH,+,M2,L4,ZPC(YEL),SWRCH	
905	6001-001257	SCREW-MACHINE;PWH,+,M1.7,L3,ZPC(YEL),SWR	
906	AH60-00010A	SCREW-MACHINE-MOTOR;-+,SWCH18AK,M1.7,L2	
H101	AH61-00512A	CHASSIS-HOUSING;DP-7,ABS(SR-0320),-,-,-,	
H102	AH66-00111B	CLAMPER-ASSY;DP-5,POM+MAGNET,-,-,-,-,-	
H103	AH66-00123A	PULLEY-GEAR;DP-7,POM M90-44,-,-,-,-,-,-	
H104	AH31-00024A	MOTOR-LOAD ASSY;SM-2412L2,DP-7,-,-,-,-,-	
H105	6602-001076	BELT-RECTANGULAR;CR,T1.2,4.3%,1.2X25.1,B	
H106	AH66-00124A	GEAR-TRAY;DP-7,POM,M90-44,-,-,-,-,-,-	
H107	AH66-00125A	SLIDER-HOUSING;DP-7,POM,-,-,-,-,-,-	
H108	AH63-00217A	TRAY-DISC;POM,-,BLK,DP-7	
H201	AH97-00561C	ASSY-BKRT DECK;SECC+POM,DP-7,TSEC	
H202	AH73-00023C	RUBBER-INSULATOR;DP-7,BUTYL RUBBER,-,10	
H203	AH61-50327A	SHAFT-P/U;DP,SUS420J2,OD3,L84.7,S/FINISH	
H204	AH66-00075A	GEAR-FEED A;- ,POM M90-44,-,-,-,-,-,-,-	
H205	AH66-00076A	GEAR-FEED B;- ,POM M90-44,-,-,-,-,-,-,-	
H206	AC60-30306A	WASHER-SLIT;- ,ID2.1,OD5.0,T0.5,-,POLYS	
H207	AH31-00022A	MOTOR-SPINDLE ASSY;RSM-2610D,DP-7,-,-,-,	
H208	AH61-00403A	SPRING-SPINDLE;- ,SWPB,-,CS,PI4.9,PI0.7,-	
H209	AH61-00513A	CHASSIS-SUB;DP-7,ABS(SR-0320),-,-,-,-,-,	
H210	AH31-00016A	MOTOR-FEED ASSY;- ,DP-5,-,-	
H211	AH97-00708A	ASSY-PICK-UP;- ,SOH-DM2,ASSY-PICK-UP	
H240	AH92-00963A	ASSY-MILLENO DECK PCB 2LD;DVD-M101,MILLE	
H241	3809-001252	CABLE-FLAT;30V,80C,180mm,22P,1mm,UL2896	
H250	AH92-00900B	ASSY PCB-DECK B;DVD-V1000,MILLENO DECK(B	

# MEMO

## 7. Electrical Parts List

Loc.No	Part No	Description ; Specification	Remark	Loc.No	Part No	Description ; Specification	Remark
601	AC92-01010A	ASSY PCB VCR-MAIN DIGITAL;DVD-V1000,DVD+VCR,		IC605	1103-001149	IC-EEPROM:524C80D41,4KBit,DIP,8P,300MIL,	
<b>SYSTEM CONTROL/SERVO PARTS</b>				IC608	1203-000515	IC-VOL. DETECTOR:7042,TO-92,3P,177MIL,PL	
C605	2202-000797	C-CERAMIC,MLC-AXIAL:10nF,30%,16V,Y5S,TP,		IC610	1003-001318	IC-MOTOR DRIVER:LB11880,DIP,30P,417MIL,-	
C606	2202-000797	C-CERAMIC,MLC-AXIAL:10nF,30%,16V,Y5S,TP,		L603	2701-000002	INDUCTOR-AXIAL:100uH,10%,4.2x9.8mm	
C607	2401-001775	C-AL:470nF,20%,50V,GP,TP,4x7,5		L604	2701-000002	INDUCTOR-AXIAL:100uH,10%,4.2x9.8mm	
C608	2401-002259	C-AL:0.1F,+80-20%,5.5V,-,TP,12.5x11		L605	2701-000002	INDUCTOR-AXIAL:100uH,10%,4.2x9.8mm	
C610	2203-000192	C-CERAMIC,CHIP:100nF,+80-20%,50V,Y5V,TP,		L606	2701-000113	INDUCTOR-AXIAL:100uH,5%,2.5x3.4mm	
C620	2203-000260	C-CERAMIC,CHIP:10nF,10%,50V,X7R,TP,2012		LD601	0601-000517	LED-IR:RECTANGULA,4x6.0mm,75mW,6V,950	
C621	2401-002095	C-AL:47uF,20%,25V,GP,TP,6.3x5,5		PT601	0604-001206	PHOTO-INTERRUPTER:TR,-,150mW,CY5894102,B	
C623	2203-000260	C-CERAMIC,CHIP:10nF,10%,50V,X7R,TP,2012		PT602	0604-001122	PHOTO-INTERRUPTER:TR,0.065%,150mW,DIP-4,	
C624	2203-000634	C-CERAMIC,CHIP:0.022nF,5%,50V,NPO,TP,201		R608	2007-001039	R-CHIP:56KOHM,5%,1/10W,DA,TP,2012	
C625	2203-000634	C-CERAMIC,CHIP:0.022nF,5%,50V,NPO,TP,201		R609	2007-001039	R-CHIP:56KOHM,5%,1/10W,DA,TP,2012	
C626	2203-000634	C-CERAMIC,CHIP:0.47nF,5%,50V,NPO,TP,201		R610	2001-000429	R-CARBON:1KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
C627	2203-000634	C-CERAMIC,CHIP:0.022nF,5%,50V,NPO,TP,201		R611	2001-000429	R-CARBON:1KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
C633	2203-000260	C-CERAMIC,CHIP:10nF,10%,50V,X7R,TP,2012		R612	2001-000429	R-CARBON:1KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
C634	2203-000260	C-CERAMIC,CHIP:10nF,10%,50V,X7R,TP,2012		R613	2007-000468	R-CHIP:1KOHM,5%,1/10W,DA,TP,2012	
C635	2203-000495	C-CERAMIC,CHIP:2.2nF,10%,50V,X7R,TP,2012		R614	2001-000429	R-CARBON:1KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
C636	2203-000495	C-CERAMIC,CHIP:2.2nF,10%,50V,X7R,TP,2012		R615	2003-000111	R-METAL OXIDE:0.47ohm,5%,1W,AD,TP,4.3x12	
C637	2203-000938	C-CERAMIC,CHIP:0.47nF,5%,50V,NPO,TP,2012		R616	2001-000850	R-CARBON:56KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
C638	2401-002299	C-AL:4.7uF,20%,50V,GP,TP,5x7,5		R617	2001-000864	R-CARBON:1KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
C639	2203-000239	C-CERAMIC,CHIP:0.1nF,5%,50V,NPO,TP,2012		R618	2001-000290	R-CARBON:10KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
C640	2203-000192	C-CERAMIC,CHIP:100nF,+80-20%,50V,Y5V,TP,		R619	2001-000290	R-CARBON:10KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
C641	2401-002165	C-AL:100uF,20%,16V,GP,TP,6.3x7,5		R620	2001-000273	R-CARBON:100KOHM,5%,1/8W,AA,TP,1.8X3.2M	
C645	2401-001507	C-AL:47uF,20%,16V,GP,TP,6.3x5,5		R621	2001-000613	R-CARBON:3.9KOHM,5%,1/8W,AA,TP,1.8X3.2M	
C646	2203-000192	C-CERAMIC,CHIP:100nF,+80-20%,50V,Y5V,TP,		R631	2001-000429	R-CARBON:1KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
C650	2401-001507	C-AL:47uF,20%,16V,GP,TP,6.3x5,5		R632	2001-000429	R-CARBON:1KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
C651	2401-001507	C-AL:47uF,20%,16V,GP,TP,6.3x5,5		R633	2001-000429	R-CARBON:1KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
C652	2401-001507	C-AL:47uF,20%,16V,GP,TP,6.3x5,5		R641	2007-000931	R-CHIP:470OHM,5%,1/10W,DA,TP,2012	
C653	2401-003107	C-AL:47uF,20%,16V,GP,TP,5x7,5		R642	2007-000931	R-CHIP:470OHM,5%,1/10W,DA,TP,2012	
C654	2203-000609	C-CERAMIC,CHIP:22nF,10%,50V,X7R,TP,2012		R644	2001-000429	R-CARBON:1KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
C655	2203-000727	C-CERAMIC,CHIP:3.9nF,10%,50V,X7R,TP,2012		R647	2007-000468	R-CHIP:1KOHM,5%,1/10W,DA,TP,2012	
C656	2203-000727	C-CERAMIC,CHIP:3.9nF,10%,50V,X7R,TP,2012		R651	2001-000010	R-CARBON:68KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
C657	2203-000260	C-CERAMIC,CHIP:10nF,10%,50V,X7R,TP,2012		R652	2001-000568	R-CARBON:270HM,5%,1/8W,AA,TP,1.8X3.2MM	
C658	2203-000575	C-CERAMIC,CHIP:220nF,10%,25V,X7R,TP,2012		R657	2007-001124	R-CHIP:68KOHM,1%,1/10W,DA,TP,2012	
C659	2203-001137	C-CERAMIC,CHIP:68nF,+80-20%,50V,Y5V,TP,2		R660	2001-000786	R-CARBON:47KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
C660	2202-002037	C-CERAMIC,MLC-AXIAL:100nF,80-20%,50V,Y5V		R661	2001-000660	R-CARBON:33KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
C661	2202-000854	C-CERAMIC,MLC-AXIAL:47nF,30%,50V,Y5R,TP,		R666	2001-000290	R-CARBON:10KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
C662	2202-000807	C-CERAMIC,MLC-AXIAL:22nF,+80-20%,25V,Y5V		R667	2001-000290	R-CARBON:10KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
C663	2203-001592	C-CERAMIC,CHIP:1nF,5%,50V,X7R,TP,2012		R668	2001-000780	R-CARBON:470OHM,5%,1/8W,AA,TP,1.8X3.2MM	
C665	2401-001733	C-AL:1uF,20%,50V,BP,TP,4x7,2.5		R669	2001-000780	R-CARBON:470OHM,5%,1/8W,AA,TP,1.8X3.2MM	
C666	2203-000609	C-CERAMIC,CHIP:22nF,10%,50V,X7R,TP,2012		R670	2001-000734	R-CARBON:4.7KOHM,5%,1/8W,AA,TP,1.8X3.2M	
C667	2203-000609	C-CERAMIC,CHIP:22nF,10%,50V,X7R,TP,2012		R671	2001-000734	R-CARBON:4.7KOHM,5%,1/8W,AA,TP,1.8X3.2M	
C668	2203-000609	C-CERAMIC,CHIP:22nF,10%,50V,X7R,TP,2012		R672	2001-000734	R-CARBON:4.7KOHM,5%,1/8W,AA,TP,1.8X3.2M	
C669	2203-000192	C-CERAMIC,CHIP:100nF,+80-20%,50V,Y5V,TP,		R673	2007-000468	R-CHIP:1KOHM,5%,1/10W,DA,TP,2012	
C671	2401-003107	C-AL:47uF,20%,16V,GP,TP,5x7,5		R674	2001-000290	R-CARBON:10KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
C688	2401-001507	C-AL:47uF,20%,16V,GP,TP,6.3x5,5		R675	2001-000032	R-CARBON:180OHM,5%,1/4W,AA,TP,2.4X6.4MM	
C691	2203-000260	C-CERAMIC,CHIP:10nF,10%,50V,X7R,TP,2012		R676	2007-000738	R-CHIP:30KOHM,5%,1/10W,DA,TP,2012	
C692	2401-002299	C-AL:4.7uF,20%,50V,GP,TP,5x7,5		R677	2001-000522	R-CARBON:22KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
CN01	3708-001364	CONNECTOR-FPC/FC/PC:35P,1.25MM,STRAIGHT		R678	2001-000522	R-CARBON:22KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
CN1P1	3711-000596	CONNECTOR-HEADER:BOX,10P,1R,2mm,STRAIGHT		R679	2001-000515	R-CARBON:220OHM,5%,1/8W,AA,TP,1.8X3.2MM	
CN601	AC39-20817S	LEAD CONNECTOR-ASSY:DPSMH200-02,YBH200-		R682	2001-000522	R-CARBON:22KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
CN602	3708-001302	CONNECTOR-FPC/FC/PC:7P,1.25mm,STRAIGHT,		R685	2001-000812	R-CARBON:5.6KOHM,5%,1/8W,AA,TP,1.8X3.2M	
CN603	3710-001146	CONNECTOR-SOCKET:20P,1R,1.5mm,ANGLE,SN		R688	2001-000563	R-CARBON:27KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
CN604	3711-003749	CONNECTOR-HEADER:BOX,8P,2R,2mm,STRAIGHT,		R691	2001-000515	R-CARBON:220OHM,5%,1/8W,AA,TP,1.8X3.2MM	
D603	0401-000101	DIODE-SWITCHING:1N4148,100V,200mA,DO-35,		R692	2001-000036	R-CARBON:330OHM,5%,1/4W,AA,TP,2.4X6.4MM	
D613	0402-000127	DIODE-RECTIFIER:1N4002,100V,1A,DO-41,TP		R696	2001-000071	R-CARBON:22KOHM,5%,1/4W,AA,TP,2.4X6.4MM	
D620	0402-000127	DIODE-RECTIFIER:1N4002,100V,1A,DO-41,TP		S601	0603-001011	PHOTO-TR:NPN,35V,6V,50mA,75mW,BK	
D688	0401-000101	DIODE-SWITCHING:1N4148,100V,200mA,DO-35,		S602	0603-001011	PHOTO-TR:NPN,35V,6V,50mA,75mW,BK	
D692	0402-000127	DIODE-RECTIFIER:1N4002,100V,1A,DO-41,TP		SW601	AC34-20100A	SWITCH-MODE:-,X-9,-	
IC601	AC09-00030A	IC MCU:UPD78F4928,100PIN,QFP,-,16BIT,PLA		SW602	AC34-20100B	SWITCH-REC:-,X-9,-	
IC604	AC14-12009W	IC-RESETPTS572K,TO-92,R59-1766 2.5V		W007	2701-000002	INDUCTOR-AXIAL:100uH,10%,4.2x9.8mm	
				W024	2001-000362	R-CARBON:150OHM,5%,1/8W,AA,TP,1.8X3.2MM	

Electrical Parts List

Loc.No	Part No	Description ; Specification	Remark	Loc.No	Part No	Description ; Specification	Remark
W071	0401-000101	DIODE-SWITCHING:1N4148,100V,200mA,DO-35,		C3A15	2203-001128	C-CERAMIC,CHIP:0.68nF,10%,50V,X7R,TP,201	
W103	2001-000362	R-CARBON:150OHM,5%,1/8W,AA,TP,1.8X3.2MM		C3A16	2203-000495	C-CERAMIC,CHIP:2.2nF,10%,50V,X7R,TP,2012	
W174	2001-000362	R-CARBON:150OHM,5%,1/8W,AA,TP,1.8X3.2MM		C3A17	2401-001250	C-AL:4.7uF,20%,35V,GP,TP,4x5,5	
W242	2001-000362	R-CARBON:150OHM,5%,1/8W,AA,TP,1.8X3.2MM		C3A18	2301-000314	C-FILM,PEF:8.2nF,5%,50V,TP,6.5x3.0x5.5mm	
W255	2001-000362	R-CARBON:150OHM,5%,1/8W,AA,TP,1.8X3.2MM		C3A19	2203-000260	C-CERAMIC,CHIP:10nF,10%,50V,X7R,TP,2012	
W259	2001-000362	R-CARBON:150OHM,5%,1/8W,AA,TP,1.8X3.2MM		C3A20	2301-001014	C-FILM,PEF:6.8nF,5%,50V,TP,7x3x6,5mm	
W293	2001-000362	R-CARBON:150OHM,5%,1/8W,AA,TP,1.8X3.2MM		C3A21	2401-000414	C-AL:10uF,20%,16V,GP,TP,4x7,5	
W304	2701-000002	INDUCTOR-AXIAL:100uH,10%,4.2x9.8mm		C3D01	2301-001388	C-FILM,PEF:47nF,5%,100V,TP,7.5x4.5x10.5mm	
W325	2701-000002	INDUCTOR-AXIAL:100uH,10%,4.2x9.8mm		C3D02	2401-001507	C-AL:47uF,20%,16V,GP,TP,6.3x5,5	
W326	2701-000002	INDUCTOR-AXIAL:100uH,10%,4.2x9.8mm		C3D03	2203-000260	C-CERAMIC,CHIP:10nF,10%,50V,X7R,TP,2012	
W327	2702-000106	INDUCTOR-RADIAL:100uH,10%,6.2x7.4mm		C3D04	2203-000891	C-CERAMIC,CHIP:4.7nF,10%,50V,X7R,TP,2012	
W329	2701-000002	INDUCTOR-AXIAL:100uH,10%,4.2x9.8mm		C3D05	2203-000260	C-CERAMIC,CHIP:10nF,10%,50V,X7R,TP,2012	
XT601	2801-003318	CRYSTAL-UNIT:32.768KHz,20ppm,28-AA,12.5		CN1P2	AC39-00055A	CBF HARNESS:SV-DVD1E,-,10P,80,-,5264	
XT602	2801-003139	CRYSTAL-UNIT:8MHz,50ppm,28-AAA,22pf,80oh		CN301	3708-000391	CONNECTOR-FPC/FC/PIC:10P:1.25MM,STRAIGHT	
ZD601	0403-000555	DIODE-ZENER:MTZ30D,30V,29.02-30.51V,500m		CN3A01	3708-001165	CONNECTOR-FPC/FC/PIC:6P:1.25mm,STRAIGHT,	
				CN3A02	3710-001648	CONNECTOR-SOCKET:2P,1R,2.5mm,STRAIGHT,SN	
				FL3A01	AC27-80100C	COIL-OSC:7mm,2.4mH,-	
				FL3D01	AC27-82001C	COIL-BIAS OSC:BO2,W(TOKO)WX1850,-	
				IC301	1204-001832	IC-VIDEO PROCESS:LA71201,QFP,80P,-,PLAST	
				L301	2701-000002	INDUCTOR-AXIAL:100uH,10%,4.2x9.8mm	
				L302	2701-000002	INDUCTOR-AXIAL:100uH,10%,4.2x9.8mm	
				L303	2701-000002	INDUCTOR-AXIAL:100uH,10%,4.2x9.8mm	
				L304	2701-000002	INDUCTOR-AXIAL:100uH,10%,4.2x9.8mm	
				L3A01	2702-000120	INDUCTOR-RADIAL:15mH,5%,6.2x7.4mm	
				L3A02	2701-000002	INDUCTOR-AXIAL:100uH,10%,4.2x9.8mm	
				L3A03	2701-000002	INDUCTOR-AXIAL:100uH,10%,4.2x9.8mm	
				L3D01	2701-000002	INDUCTOR-AXIAL:100uH,10%,4.2x9.8mm	
				Q302	0501-000303	TR-SMALL SIGNAL:KSA733,PNP,250mW,TO-92,T	
				Q303	0501-000398	TR-SMALL SIGNAL:KSC945,NPN,250mW,TO-92,T	
				Q3A01	0501-000303	TR-SMALL SIGNAL:KSA733,PNP,250mW,TO-92,T	
				Q3A03	0501-000442	TR-SMALL SIGNAL:KTC3203-Y,NPN,400MW,TO-9	
				Q3A04	0501-000442	TR-SMALL SIGNAL:KTC3203-Y,NPN,400MW,TO-9	
				Q3A05	0501-000442	TR-SMALL SIGNAL:KTC3203-Y,NPN,400MW,TO-9	
				Q3A06	0501-000303	TR-SMALL SIGNAL:KSA733,PNP,250mW,TO-92,T	
				Q3D01	0501-000442	TR-SMALL SIGNAL:KTC3203-Y,NPN,400MW,TO-9	
				Q3D02	0504-000142	TR-DIGITAL:KSR2001,PNP,300MW,4.7K/4.7K,T	
				Q3D03	0504-000119	TR-DIGITAL:KSR1004,NPN,300MW,4.7K/4.7K,TO-	
				R301	2001-000008	R-CARBON:150OHM,5%,1/8W,AA,TP,1.8X3.2MM	
				R302	2007-001055	R-CHIP:6.2KOHM,5%,1/10W,DA,TP,2012	
				R303	2001-000258	R-CARBON:1.8KOHM,5%,1/8W,AA,TP,1.8X3.2M	
				R304	2007-000267	R-CHIP:1.8KOHM,5%,1/10W,DA,TP,2012	
				R305	2001-000734	R-CARBON:4.7KOHM,5%,1/8W,AA,TP,1.8X3.2M	
				R308	2001-000508	R-CARBON:220KOHM,5%,1/8W,AA,TP,1.8X3.2M	
				R309	2001-000004	R-CARBON:200KOHM,5%,1/8W,AA,TP,1.8X3.2M	
				R310	2007-000493	R-CHIP:2.2KOHM,5%,1/10W,DA,TP,2012	
				R311	2007-001113	R-CHIP:680KOHM,5%,1/10W,DA,TP,2012	
				R312	2007-000221	R-CHIP:1.2KOHM,5%,1/10W,DA,TP,2012	
				R313	2007-000267	R-CHIP:1.8KOHM,5%,1/10W,DA,TP,2012	
				R314	2007-000241	R-CHIP:1.5KOHM,5%,1/10W,DA,TP,2012	
				R315	2007-001177	R-CHIP:8.2KOHM,5%,1/10W,DA,TP,2012	
				R316	2007-000300	R-CHIP:10KOHM,5%,1/10W,DA,TP,2012	
				R317	2007-000457	R-CHIP:18KOHM,5%,1/10W,DA,TP,2012	
				R318	2007-000457	R-CHIP:18KOHM,5%,1/10W,DA,TP,2012	
				R319	2001-000290	R-CARBON:10KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
				R320	2007-000241	R-CHIP:1.5KOHM,5%,1/10W,DA,TP,2012	
				R334	2001-000281	R-CARBON:100OHM,5%,1/8W,AA,TP,1.8X3.2MM	
				R343	2007-001001	R-CHIP:510OHM,5%,1/10W,DA,TP,2012	
				R344	2007-001001	R-CHIP:510OHM,5%,1/10W,DA,TP,2012	
				R346	2001-000429	R-CARBON:1KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
				R3A01	2007-000710	R-CHIP:3.9KOHM,5%,1/10W,DA,TP,2012	
				R3A02	2007-000221	R-CHIP:1.2KOHM,5%,1/10W,DA,TP,2012	
				R3A03	2001-000812	R-CARBON:5.6KOHM,5%,1/8W,AA,TP,1.8X3.2M	
				R3A04	2007-000300	R-CHIP:10KOHM,5%,1/10W,DA,TP,2012	
				R3A05	2007-000757	R-CHIP:330KOHM,5%,1/10W,DA,TP,2012	
				R3A06	2001-000405	R-CARBON:180OHM,5%,1/8W,AA,TP,1.8X3.2MM	
				R3A07	2001-000563	R-CARBON:27KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
<b>AV PARTS</b>							
C301	2401-000598	C-AL:1uF,20%,50V,GP,TP,4x7,5					
C302	2203-001721	C-CERAMIC,CHIP:360pF,5%,50V,NPO,TP,2012,					
C303	2202-002037	C-CERAMIC,MLC-AXIAL:100nF,80-20%,50V,Y5V					
C304	2203-000408	C-CERAMIC,CHIP:0.18nF,5%,50V,NPO,TP,2012					
C305	2401-000598	C-AL:1uF,20%,50V,GP,TP,4x7,5					
C306	2202-002037	C-CERAMIC,MLC-AXIAL:100nF,80-20%,50V,Y5V					
C307	2401-003107	C-AL:47uF,20%,16V,GP,TP,5x7,5					
C308	2401-000922	C-AL:22uF,20%,16V,GP,TP,5x5,5					
C310	2401-000598	C-AL:1uF,20%,50V,GP,TP,4x7,5					
C312	2203-000192	C-CERAMIC,CHIP:100nF,+80-20%,50V,Y5V,TP,					
C313	2401-000407	C-AL:10uF,20%,16V,GP,TP,3.5x5,2.5					
C314	2203-000476	C-CERAMIC,CHIP:1000nF,+80-20%,16V,Y5V,TP					
C315	2401-000598	C-AL:1uF,20%,50V,GP,TP,4x7,5					
C316	2401-001915	C-AL:1uF,20%,50V,GP,TP,3x5,5					
C317	2401-000598	C-AL:1uF,20%,50V,GP,TP,4x7,5					
C318	2202-000797	C-CERAMIC,MLC-AXIAL:10NF,30%,16V,Y5S,TP,					
C320	2203-000260	C-CERAMIC,CHIP:10nF,10%,50V,X7R,TP,2012					
C321	2401-003107	C-AL:47uF,20%,16V,GP,TP,5x7,5					
C322	2203-000260	C-CERAMIC,CHIP:10nF,10%,50V,X7R,TP,2012					
C323	2401-000598	C-AL:1uF,20%,50V,GP,TP,4x7,5					
C324	2203-000260	C-CERAMIC,CHIP:10nF,10%,50V,X7R,TP,2012					
C325	2401-000598	C-AL:1uF,20%,50V,GP,TP,4x7,5					
C326	2203-000609	C-CERAMIC,CHIP:22nF,10%,50V,X7R,TP,2012					
C327	2401-001915	C-AL:1uF,20%,50V,GP,TP,3x5,5					
C328	2401-003107	C-AL:47uF,20%,16V,GP,TP,5x7,5					
C329	2203-000192	C-CERAMIC,CHIP:100nF,+80-20%,50V,Y5V,TP,					
C331	2203-000966	C-CERAMIC,CHIP:47nF,+80-20%,50V,Y5V,TP,2					
C332	2203-000966	C-CERAMIC,CHIP:47nF,+80-20%,50V,Y5V,TP,2					
C333	2203-000966	C-CERAMIC,CHIP:47nF,+80-20%,50V,Y5V,TP,2					
C334	2401-003107	C-AL:47uF,20%,16V,GP,TP,5x7,5					
C335	2203-000237	C-CERAMIC,CHIP:100pF,5%,50V,NPO,TP,2012,					
C358	2202-000797	C-CERAMIC,MLC-AXIAL:10NF,30%,16V,Y5S,TP,					
C359	2203-000260	C-CERAMIC,CHIP:10nF,10%,50V,X7R,TP,2012					
C360	2203-000260	C-CERAMIC,CHIP:10nF,10%,50V,X7R,TP,2012					
C371	2203-001077	C-CERAMIC,CHIP:0.056nF,5%,50V,NPO,TP,201					
C3A01	2203-000192	C-CERAMIC,CHIP:100nF,+80-20%,50V,Y5V,TP,					
C3A02	2401-000918	C-AL:22uF,20%,16V,GP,-,6.3x7,5					
C3A03	2202-002037	C-CERAMIC,MLC-AXIAL:100nF,80-20%,50V,Y5V					
C3A04	2401-003107	C-AL:47uF,20%,16V,GP,TP,5x7,5					
C3A05	2401-002069	C-AL:33uF,20%,16V,GP,TP,6.3x5,5					
C3A06	2203-000192	C-CERAMIC,CHIP:100nF,+80-20%,50V,Y5V,TP,					
C3A07	2203-001214	C-CERAMIC,CHIP:8.2nF,10%,50V,X7R,TP,2012					
C3A08	2203-000260	C-CERAMIC,CHIP:10nF,10%,50V,X7R,TP,2012					
C3A09	2401-000407	C-AL:10uF,20%,16V,GP,TP,3.5x5,2.5					
C3A10	2401-001250	C-AL:4.7uF,20%,35V,GP,TP,4x5,5					
C3A11	2301-000174	C-FILM,PEF:15nF,5%,100V,TP,7.2x4.0x7.5mm					
C3A12	2401-003107	C-AL:47uF,20%,16V,GP,TP,5x7,5					
C3A13	2301-000161	C-FILM,PEF:12nF,5%,50V,TP,6.5x5.5x3.0x5,5					
C3A14	2301-001014	C-FILM,PEF:6.8nF,5%,50V,TP,7x3x6,5mm					

Loc.No	Part No	Description ; Specification	Remark	Loc.No	Part No	Description ; Specification	Remark
R3A08	2007-000468	R-CHIP:1KOHM,5%,1/10W,DA,TP,2012		AR14	2007-000468	R-CHIP:1KOHM,5%,1/10W,DA,TP,2012	
R3A09	2001-000221	R-CARBON:1.2KOHM,5%,1/8W,AA,TP,1.8X3.2MM		AR15	2001-000429	R-CARBON:1KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
R3A11	2001-000258	R-CARBON:1.8KOHM,5%,1/8W,AA,TP,1.8X3.2MM		AR16	2007-000468	R-CHIP:1KOHM,5%,1/10W,DA,TP,2012	
R3A12	2001-000458	R-CARBON:2.20HM,5%,1/8W,AA,TP,1.8X3.2MM		AR17	2007-000468	R-CHIP:1KOHM,5%,1/10W,DA,TP,2012	
R3A13	2007-000931	R-CHIP:470OHM,5%,1/10W,DA,TP,2012		AR18	2007-000221	R-CHIP:1.2KOHM,5%,1/10W,DA,TP,2012	
R3A14	2001-000522	R-CARBON:22KOHM,5%,1/8W,AA,TP,1.8X3.2MM		AR19	2007-000221	R-CHIP:1.2KOHM,5%,1/10W,DA,TP,2012	
R3A16	2001-000290	R-CARBON:10KOHM,5%,1/8W,AA,TP,1.8X3.2MM		AR2	2007-000267	R-CHIP:1.8KOHM,5%,1/10W,DA,TP,2012	
R3A17	2001-000613	R-CARBON:3.9KOHM,5%,1/8W,AA,TP,1.8X3.2MM		AR201	2007-000766	R-CHIP:330OHM,5%,1/10W,DA,TP,2012	
R3A18	2001-000613	R-CARBON:3.9KOHM,5%,1/8W,AA,TP,1.8X3.2MM		AR202	2007-001247	R-CHIP:910HM,5%,1/10W,DA,TP,2012	
R3A19	2001-000405	R-CARBON:180OHM,5%,1/8W,AA,TP,1.8X3.2MM		AR203	2001-000515	R-CARBON:220OHM,5%,1/8W,AA,TP,1.8X3.2MM	
R3A20	2001-000812	R-CARBON:5.6KOHM,5%,1/8W,AA,TP,1.8X3.2MM		AR21	2001-000290	R-CARBON:10KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
R3A24	2007-000586	R-CHIP:22KOHM,5%,1/10W,DA,TP,2012		AR22	2007-000572	R-CHIP:220OHM,5%,1/10W,DA,TP,2012	
R3D01	2007-000947	R-CHIP:470HM,5%,1/10W,DA,TP,2012		AR28	2007-000468	R-CHIP:1KOHM,5%,1/10W,DA,TP,2012	
R3D02	2007-000586	R-CHIP:22KOHM,5%,1/10W,DA,TP,2012		AR29	2007-000468	R-CHIP:1KOHM,5%,1/10W,DA,TP,2012	
R3D03	2007-000881	R-CHIP:4.7OHM,5%,1/10W,DA,TP,2012		AR3	2001-000429	R-CARBON:1KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
XT301	2801-003610	CRYSTAL-UNIT:3.579545MHz,8ppm,28-AAA,S,1		AR30	2007-000468	R-CHIP:1KOHM,5%,1/10W,DA,TP,2012	
<b>TM-BLOCK</b>				AR31	2001-000429	R-CARBON:1KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
C401	2202-002037	C-CERAMIC,MLC-AXIAL:100nF,80-20%,50V,Y5V		AR32	2007-000221	R-CHIP:1.2KOHM,5%,1/10W,DA,TP,2012	
C402	2401-003107	C-AL:47uF,20%,16V,GP,TP,5x7,5		AR33	2007-000221	R-CHIP:1.2KOHM,5%,1/10W,DA,TP,2012	
C403	2202-002037	C-CERAMIC,MLC-AXIAL:100nF,80-20%,50V,Y5V		AR35	2007-000300	R-CHIP:10KOHM,5%,1/10W,DA,TP,2012	
C404	2401-003107	C-AL:47uF,20%,16V,GP,TP,5x7,5		AR36	2007-000572	R-CHIP:220OHM,5%,1/10W,DA,TP,2012	
R401	2001-000780	R-CARBON:470OHM,5%,1/8W,AA,TP,1.8X3.2MM		AR4	2001-000429	R-CARBON:1KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
R402	2001-000780	R-CARBON:470OHM,5%,1/8W,AA,TP,1.8X3.2MM		AR5	2001-000429	R-CARBON:1KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
SW401	3408-001042	SWITCH-SLIDE:DC 12V,100mA,-,OFF-ON,-		AR6	2001-000429	R-CARBON:1KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
TM401	AC40-00012A	TM BLOCK:TMDH2A32A,NTSC-M,181CH,-,25DB,		AR7	2001-000429	R-CARBON:1KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
W400	2007-000029	R-CHIP:00HM,5%,1/10W,DA,TP,2012		AR8	2001-000429	R-CARBON:1KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
W401	2007-000029	R-CHIP:00HM,5%,1/10W,DA,TP,2012		AR9	2001-000258	R-CARBON:1.8KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
W402	2007-000029	R-CHIP:00HM,5%,1/10W,DA,TP,2012		AVJ1	3722-001570	JACK-RCA:5P/6P,3.5mm,NI,BLK,-	
<b>DIGITAL AUDIO PARTS</b>				AVJ4	3707-001005	CONNECTOR-OPTICAL-PLUG,SM,-,4.4/2.0MM	
AC10	2203-000260	C-CERAMIC,CHIP:10nF,10%,50V,X7R,TP,2012		AVJ5	3722-001053	JACK-RCA:TP,3.2mm,NI,BLK,-	
AC11	2301-000423	C-FILM,PEF:3.3nF,5%,100V,TP,7x10x4.5mm,5		FR10	2001-000281	R-CARBON:100OHM,5%,1/8W,AA,TP,1.8X3.2MM	
AC12	2203-000392	C-CERAMIC,CHIP:0.015nF,5%,50V,SL,TP,2012		FR11	2001-000281	R-CARBON:100OHM,5%,1/8W,AA,TP,1.8X3.2MM	
AC13	2301-000423	C-FILM,PEF:3.3nF,5%,100V,TP,7x10x4.5mm,5		FR12	2001-000281	R-CARBON:100OHM,5%,1/8W,AA,TP,1.8X3.2MM	
AC14	2301-000402	C-FILM,PEF:1nF,5%,50V,TP,5x7x2.8mm,5mm		FR13	2001-000281	R-CARBON:100OHM,5%,1/8W,AA,TP,1.8X3.2MM	
AC15	2301-000402	C-FILM,PEF:1nF,5%,50V,TP,5x7x2.8mm,5mm		FR24	2001-000281	R-CARBON:100OHM,5%,1/8W,AA,TP,1.8X3.2MM	
AC201	2203-000260	C-CERAMIC,CHIP:10nF,10%,50V,X7R,TP,2012		FR26	2001-000281	R-CARBON:100OHM,5%,1/8W,AA,TP,1.8X3.2MM	
AC202	2203-000192	C-CERAMIC,CHIP:100nF,+80-20%,50V,Y5V,TP,		HR1	2001-000786	R-CARBON:47KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
AC203	2203-000260	C-CERAMIC,CHIP:10nF,10%,50V,X7R,TP,2012		VC16	2202-002037	C-CERAMIC,MLC-AXIAL:100nF,80-20%,50V,Y5V	
AC4	2202-002037	C-CERAMIC,MLC-AXIAL:100nF,80-20%,50V,Y5V		<b>HI-FI PARTS</b>			
AC5	2202-002037	C-CERAMIC,MLC-AXIAL:100nF,80-20%,50V,Y5V		C4M01	2203-000476	C-CERAMIC,CHIP:1000nF,+80-20%,16V,Y5V,TP	
AC6	2202-002037	C-CERAMIC,MLC-AXIAL:100nF,80-20%,50V,Y5V		C4M02	2203-001035	C-CERAMIC,CHIP:5.6nF,10%,50V,X7R,TP,2012	
AC7	2301-000402	C-FILM,PEF:1nF,5%,50V,TP,5x7x2.8mm,5mm		C4M03	2203-000323	C-CERAMIC,CHIP:12nF,10%,50V,X7R,TP,2012,	
AC76	2203-000938	C-CERAMIC,CHIP:0.47nF,5%,50V,NP0,TP,2012		C4M04	2203-000476	C-CERAMIC,CHIP:1000nF,+80-20%,16V,Y5V,TP	
AC78	2203-001388	C-CERAMIC,CHIP:10nF,5%,50V,X7R,TP,2012		C4M06	2401-000463	C-AL:10uF,20%,35V,GP,-,5x5,2mm	
AC8	2301-000402	C-FILM,PEF:1nF,5%,50V,TP,5x7x2.8mm,5mm		C4M07	2203-001724	C-CERAMIC,CHIP:4700nF,+80-20%,16V,Y5V,TP	
AC87	2203-000260	C-CERAMIC,CHIP:10nF,10%,50V,X7R,TP,2012		C4M08	2203-001724	C-CERAMIC,CHIP:4700nF,+80-20%,16V,Y5V,TP	
AC9	2203-000260	C-CERAMIC,CHIP:10nF,10%,50V,X7R,TP,2012		C4M09	2401-001250	C-AL:4.7uF,20%,35V,GP,TP,4x5,5	
AC96	2203-000260	C-CERAMIC,CHIP:10nF,10%,50V,X7R,TP,2012		C4M10	2203-001724	C-CERAMIC,CHIP:4700nF,+80-20%,16V,Y5V,TP	
AE1	2401-002042	C-AL:220uF,20%,10V,GP,TP,6.3x11,5		C4M13	2401-001020	C-AL:3.3uF,20%,50V,GP,TP,4x7,5	
AE11	2401-002042	C-AL:220uF,20%,10V,GP,TP,6.3x11,5		C4M14	2203-001724	C-CERAMIC,CHIP:4700nF,+80-20%,16V,Y5V,TP	
AE12	2401-000414	C-AL:10uF,20%,16V,GP,TP,4x7,5		C4M15	2401-000407	C-AL:10uF,20%,16V,GP,TP,3.5x5,2.5	
AE17	2401-000414	C-AL:10uF,20%,16V,GP,TP,4x7,5		C4M16	2203-000476	C-CERAMIC,CHIP:1000nF,+80-20%,16V,Y5V,TP	
AE2	2401-002042	C-AL:220uF,20%,10V,GP,TP,6.3x11,5		C4M17	2401-003107	C-AL:47uF,20%,16V,GP,TP,5x7,5	
AE21	2401-002144	C-AL:47uF,20%,16V,GP,TP,5x11,5		C4M18	2203-000192	C-CERAMIC,CHIP:100nF,+80-20%,50V,Y5V,TP,	
AE3	2401-002042	C-AL:220uF,20%,10V,GP,TP,6.3x11,5		C4M19	2401-001250	C-AL:4.7uF,20%,35V,GP,TP,4x5,5	
AE6	2401-000414	C-AL:10uF,20%,16V,GP,TP,4x7,5		C4M20	2203-000533	C-CERAMIC,CHIP:2.7nF,10%,50V,X7R,TP,2012	
AE9	2401-000414	C-AL:10uF,20%,16V,GP,TP,4x7,5		C4M21	2203-000966	C-CERAMIC,CHIP:47nF,+80-20%,50V,Y5V,TP,2	
AIC1	1002-001213	IC-D/A CONVERTER:AK4393VF,24BIT,SOP,28P,		C501	2401-000407	C-AL:10uF,20%,16V,GP,TP,3.5x5,2.5	
AIC3	AH14-10004R	IC:M74HCU04,SOP,TAPE 14P		C502	2401-001915	C-AL:1uF,20%,50V,GP,TP,3x5,5	
AL1	2702-000106	INDUCTOR-RADIAL:100uH,10%,6.2x7.4mm		C503	2401-000918	C-AL:22uF,20%,16V,GP,-,6.3x7,5	
AL201	2901-001125	FILTER-EMI ON BOARD:50V,0.5A,-,220pF,7x2		C504	2401-001250	C-AL:4.7uF,20%,35V,GP,TP,4x5,5	
AOP1	1201-000163	IC-OP AMP:4560,SOP,8P;173MIL,DUAL,100V/m		C505	2203-000260	C-CERAMIC,CHIP:10nF,10%,50V,X7R,TP,2012	
AR10	2001-000258	R-CARBON:1.8KOHM,5%,1/8W,AA,TP,1.8X3.2MM		C506	2401-000922	C-AL:22uF,20%,16V,GP,TP,5x5,5	
AR11	2001-000258	R-CARBON:1.8KOHM,5%,1/8W,AA,TP,1.8X3.2MM		C507	2401-000918	C-AL:22uF,20%,16V,GP,-,6.3x7,5	
				C508	2203-000891	C-CERAMIC,CHIP:4.7nF,10%,50V,X7R,TP,2012	





Loc.No	Part No	Description ; Specification	Remark	Loc.No	Part No	Description ; Specification	Remark
C867	2202-000797	C-CERAMIC,MLC-AXIAL:10NF,30%,16V,Y5S,TP,		<b>602</b>	<b>AC92-01029A</b>	<b>ASSY PCB-SMPS;SV-DVD90,A/DUB,SP/LP,MULTI</b>	
C868	2401-000463	C-AL:10uF,20%,35V,GP,-,5x5,2mm		<b>S.M.P.S. PARTS</b>			
C869	2401-000407	C-AL:10uF,20%,16V,GP,TP,3,5x5,2.5		BD1	AC27-92001M	INDUCTOR:70UH-M RT BFS3565R2F,.,.,.,.	
C871	2401-002144	C-AL:47uF,20%,16V,GP,TP,5x11,5		BDV3	3301-000297	CORE-FERRITE BEAD:AA,3.6x1.2x5.7mm,1400,	
C872	2203-000192	C-CERAMIC,CHIP:100nF,+80-20%,50V,Y5V,TP,		BDV4	3301-000297	CORE-FERRITE BEAD:AA,3.6x1.2x5.7mm,1400,	
C895	2203-000408	C-CERAMIC,CHIP:0.18nF,5%,50V,NP0,TP,2012		C01	2305-001021	C-FILM,MPEF:100nF,20%,275V,TP,17.5x7x13.	△
IC801	AC14-12015T	IC:SV1274/LA7274M,QFP,64PIN,-,-		C02	2305-001021	C-FILM,MPEF:100nF,20%,275V,TP,17.5x7x13.	△
JK801	AC37-20001G	JACK-RCA:DPAE-,6PHIFI,P13.3		C03	2201-000828	C-CERAMIC,DISC:3.3nF,20%,400V,Y5U,TP,15x	△
L801	2701-000002	INDUCTOR-AXIAL:100uH,10%,4.2x9.8mm		C04	2201-000828	C-CERAMIC,DISC:3.3nF,20%,400V,Y5U,TP,15x	△
L802	2701-000002	INDUCTOR-AXIAL:100uH,10%,4.2x9.8mm		C05	2201-002044	C-CERAMIC,DISC:0.1nF,10%,400V,Y5P,TP,8.5	△
L803	2701-000002	INDUCTOR-AXIAL:100uH,10%,4.2x9.8mm		C06	2201-002044	C-CERAMIC,DISC:0.1nF,10%,400V,Y5P,TP,8.5	△
L804	2701-000002	INDUCTOR-AXIAL:100uH,10%,4.2x9.8mm		C10	2401-000342	C-AL:100uF,20%,400V,WT,-,33x30,10mm	
Q801	0501-000303	TR-SMALL SIGNAL:KSA733,PNP,250mW,TO-92,T		C11	2305-001029	C-FILM,MPEF:10nF,10%,630V,TP,12x9x12.5,5	
Q802	0501-000303	TR-SMALL SIGNAL:KSA733,PNP,250mW,TO-92,T		C12	2401-001200	C-AL:33uF,20%,50V,WT,TP,6.3x11,5	
Q803	0501-000398	TR-SMALL SIGNAL:KSC945,NPN,250mW,TO-92,T		C13	2201-000376	C-CERAMIC,DISC:0.22nF,5%,50V,SL,TP,6.3x3	
R801	2001-000780	R-CARBON:470OHM,5%,1/8W,AA,TP,1.8X3.2MM		C14	2201-000012	C-CERAMIC,DISC:0.22nF,10%,1kV,Y5P,TP,6.3	
R802	2001-000780	R-CARBON:470OHM,5%,1/8W,AA,TP,1.8X3.2MM		C32	2401-001992	C-AL:220UF,20%,10V,WT,TP,10X20MM,5	
R803	2001-000429	R-CARBON:1KOHM,5%,1/8W,AA,TP,1.8X3.2MM		C37	2301-000129	C-FILM,PEF:100nF,5%,50V,TP,10X9X4.3X5,5m	
R804	2007-001166	R-CHIP:75OHM,5%,1/10W,DA,TP,2012		CD30	2401-000302	C-AL:100uF,20%,25V,GP,TP,6.3x11,5	
R812	2001-000969	R-CARBON:75OHM,5%,1/8W,AA,TP,1.8X3.2MM		CD33	2401-001353	C-AL:470uF,20%,10V,GP,TP,8x11.5,5	
R820	2001-000969	R-CARBON:75OHM,5%,1/8W,AA,TP,1.8X3.2MM		CD34	2401-003480	C-AL:1000UF,20%,10V,LZ,TP,10X16MM,5	
R821	2001-000025	R-CARBON:75OHM,5%,1/4W,AA,TP,2.4X6.4MM		CD35	2401-003046	C-AL:47uF,20%,50V,WT,TP,6.3x11,2,5	
R826	2001-000977	R-CARBON:8.2KOHM,5%,1/8W,AA,TP,1.8X3.2MM		CD36	2401-001353	C-AL:470uF,20%,10V,GP,TP,8x11.5,5	
R830	2001-000290	R-CARBON:10KOHM,5%,1/8W,AA,TP,1.8X3.2MM		CN01	3711-000178	CONNECTOR-HEADER:1WALL,2P,1R,3.96mm,STRA	
R832	2001-000800	R-CARBON:5.1KOHM,5%,1/8W,AA,TP,1.8X3.2M		CN02	AC39-00055A	CBF HARNESS:SV-DVD1E,-,-,10P,80,-,-,5264	
R833	2001-000812	R-CARBON:5.6KOHM,5%,1/8W,AA,TP,1.8X3.2M		CN03	3711-000596	CONNECTOR-HEADER:BOX,10P,1R,2mm,STRAIGHT	
R834	2001-000032	R-CARBON:180OHM,5%,1/4W,AA,TP,2.4X6.4MM		CN04	AC39-00071A	CBF HARNESS:001-003009,-,-,10P,80,-,-,52	
R835	2001-000241	R-CARBON:1.5KOHM,5%,1/8W,AA,TP,1.8X3.2M		CV30	2401-003137	C-AL:330UF,20%,50V,WT,TP,10X16MM,5	
R841	2007-000941	R-CHIP:47KOHM,5%,1/10W,DA,TP,2012		CV31	2401-001126	C-AL:330UF,20%,25V,WT,TP,10x12.5,5	
R842	2007-000941	R-CHIP:47KOHM,5%,1/10W,DA,TP,2012		CV33	2401-001479	C-AL:470uF,20%,10V,GP,TP,-,-	
R843	2007-000941	R-CHIP:47KOHM,5%,1/10W,DA,TP,2012		CV34	2401-001126	C-AL:330uF,20%,25V,WT,TP,10x12.5,5	
R844	2007-000941	R-CHIP:47KOHM,5%,1/10W,DA,TP,2012		CV35	2401-000385	C-AL:10uF,20%,100V,GP,TP,6.3x11,5	
R851	2007-000290	R-CHIP:100OHM,5%,1/10W,DA,TP,2012		D01	0402-001196	DIODE-RECTIFIER:1T5,600V,1A,TS-1,TP	
R852	2007-000290	R-CHIP:100OHM,5%,1/10W,DA,TP,2012		D02	0402-001196	DIODE-RECTIFIER:1T5,600V,1A,TS-1,TP	
VC12	2203-000784	C-CERAMIC,CHIP:0.33nF,5%,50V,NP0,TP,2012		D03	0402-001196	DIODE-RECTIFIER:1T5,600V,1A,TS-1,TP	
VC17	2203-000192	C-CERAMIC,CHIP:100nF,+80-20%,50V,Y5V,TP,		D04	0402-001196	DIODE-RECTIFIER:1T5,600V,1A,TS-1,TP	
VC18	2203-000784	C-CERAMIC,CHIP:0.33nF,5%,50V,NP0,TP,2012		D05	0402-001196	DIODE-RECTIFIER:1T5,600V,1A,TS-1,TP	
VC4	2203-000784	C-CERAMIC,CHIP:0.33nF,5%,50V,NP0,TP,2012		D10	0402-001195	DIODE-RECTIFIER:F1T4,400V,1.0A,TS-1,TP	
VC9	2203-000784	C-CERAMIC,CHIP:0.33nF,5%,50V,NP0,TP,2012		D11	0402-000012	DIODE-RECTIFIER:UF4007,1KV,1A,DO-41,TP	
VE1	2401-000369	C-AL:100uF,20%,6.3V,GP,-,6.3x11,5		DD30	0402-001195	DIODE-RECTIFIER:F1T4,400V,1.0A,TS-1,TP	
VE10	2401-000369	C-AL:100uF,20%,6.3V,GP,-,6.3x11,5		DD32	0404-001097	DIODE-SCHOTTKY:SG45,45V,7500mA,TO-220A,B	
VE11	2401-000913	C-AL:22uF,20%,16V,GP,TP,5x11,5		DD33	0404-001097	DIODE-SCHOTTKY:SG45,45V,7500mA,TO-220A,B	
VE2	2401-000913	C-AL:22uF,20%,16V,GP,TP,5x11,5		DD34	0402-001195	DIODE-RECTIFIER:F1T4,400V,1.0A,TS-1,TP	
VE3	2401-000369	C-AL:100uF,20%,6.3V,GP,-,6.3x11,5		DD36	0402-001195	DIODE-RECTIFIER:F1T4,400V,1.0A,TS-1,TP	
VE4	2401-000913	C-AL:22uF,20%,16V,GP,TP,5x11,5		DV30	0402-001195	DIODE-RECTIFIER:F1T4,400V,1.0A,TS-1,TP	
VE5	2401-001353	C-AL:470uF,20%,10V,GP,TP,8x11.5,5		DV31	0402-001194	DIODE-RECTIFIER:UG2D,200V,2A,DO-204AC,TP	
VE6	2401-000913	C-AL:22uF,20%,16V,GP,TP,5x11,5		DV32	0404-001097	DIODE-SCHOTTKY:SG45,45V,7500mA,TO-220A,B	
VE9	2401-002144	C-AL:47uF,20%,16V,GP,TP,5x11,5		DV34	0402-001195	DIODE-RECTIFIER:F1T4,400V,1.0A,TS-1,TP	
VIC1	1201-001419	IC-VIDEO AMP:7660,SSOP,16P,173MIL,TRIPLE		F01	3601-001123	FUSE-CARTRIDGE:250V,1.6A,TIME-LAG,CERAMI	△
VIC2	1201-001419	IC-VIDEO AMP:7660,SSOP,16P,173MIL,TRIPLE		IC01	1203-001803	IC-PWM CONTROLLER:STR-F6552,TO-220,5P,-,	
VL1	2701-000145	INDUCTOR-AXIAL:1uH,5%,2.4x3.4mm		IC02	0604-000186	PHOTO-COUPLER:TR-,200mW,DIP,4,ST	△
VL112	3301-000353	CORE-FERRITE BEAD:AB,120ohm,2x1.25x0.9mm		IC03	AC14-12006D	IC:KA431Z,TO-92,TAPING	
VL3	2701-000145	INDUCTOR-AXIAL:1uH,5%,2.4x3.4mm		L01	AC29-00002A	FILTER LINE NOISE:-,30mH,-,-,BLF-2116	△
VL5	2701-000145	INDUCTOR-AXIAL:1uH,5%,2.4x3.4mm		L02	AC29-30050B	FILTER-LINE NOISE:-,400uH,-,AC250V,TR12.	△
VL7	2701-000145	INDUCTOR-AXIAL:1uH,5%,2.4x3.4mm		L31	AC27-12001N	COIL-CHOKE:10UH-15%,RA,K-30,Q80,150KHZ,-	
VR10	2001-000969	R-CARBON:75OHM,5%,1/8W,AA,TP,1.8X3.2MM		LV32	AC27-12001N	COIL-CHOKE:10UH-15%,RA,K-30,Q80,150KHZ,-	
VR11	2001-000969	R-CARBON:75OHM,5%,1/8W,AA,TP,1.8X3.2MM		PT01	AC26-00002L	TRANS SWITCHING:EER3531,SV-DVD90,FREE,-,	△
VR22	2001-000969	R-CARBON:75OHM,5%,1/8W,AA,TP,1.8X3.2MM		R10	2006-000262	R-CEMENT:2.7ohm,10%,2W,CB,TP,7.5x11x20.	
VR23	2001-000969	R-CARBON:75OHM,5%,1/8W,AA,TP,1.8X3.2MM		R11	2001-000113	R-CARBON:18KOHM,5%,1/4W,AA,TP,2.4X6.4MM	
VR24	2001-000969	R-CARBON:75OHM,5%,1/8W,AA,TP,1.8X3.2MM		R12	2001-000113	R-CARBON:18KOHM,5%,1/4W,AA,TP,2.4X6.4MM	
				R13	2001-000113	R-CARBON:18KOHM,5%,1/4W,AA,TP,2.4X6.4MM	
				R14	2001-000113	R-CARBON:18KOHM,5%,1/4W,AA,TP,2.4X6.4MM	
				R15	2001-000096	R-CARBON(S):1MOHM,5%,1/2W,AA,TP,2.4X6.4M	
				R16	2001-000591	R-CARBON:3.3KOHM,5%,1/8W,AA,TP,1.8X3.2M	
				R17	2001-000969	R-CARBON:75OHM,5%,1/8W,AA,TP,1.8X3.2MM	

Electrical Parts List

Loc.No	Part No	Description ; Specification	Remark	Loc.No	Part No	Description ; Specification	Remark
R18	2006-000273	R-CEMENT:27Kohm,5%,2W,CA,BK,6.4x27x6.4mm		RVP4	2001-000515	R-CARBON:220OHM,5%,1/8W,AA,TP,1.8X3.2MM	
R19	2001-000429	R-CARBON:1KOHM,5%,1/8W,AA,TP,1.8X3.2MM		RVP5	2001-000290	R-CARBON:10KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
R20	2003-000105	R-METAL OXIDE:0.33ohm,5%,2W,AD,TP,6x16mm		RVP6	2001-000734	R-CARBON:4.7KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
R21	2006-000273	R-CEMENT:27Kohm,5%,2W,CA,BK,6.4x27x6.4mm		RVP7	2001-000062	R-CARBON:470OHM,5%,1/4W,AA,TP,2.4X6.4MM	
R31	2001-000780	R-CARBON:470OHM,5%,1/8W,AA,TP,1.8X3.2MM		RVP8	2001-000113	R-CARBON:18KOHM,5%,1/4W,AA,TP,2.4X6.4MM	
R32	2001-000429	R-CARBON:1KOHM,5%,1/8W,AA,TP,1.8X3.2MM		ZDDP1	0403-000555	DIODE-ZENER:MTZ30D,30V,29.02-30.51V,500m	
R33	2001-000429	R-CARBON:1KOHM,5%,1/8W,AA,TP,1.8X3.2MM		ZDDP2	0403-000717	DIODE-ZENER:MTZJ5.1B,5.1V,4.94-5.2V,500m	
R34	2004-000869	R-METAL:3Kohm,1%,1/8W,AA,TP,1.8x3.2mm		ZDDP3	0403-001322	DIODE-ZENER:MTZJ8.2B,7.78-8.19V,500mW,DO	
R35	2004-000459	R-METAL:2.2Kohm,1%,1/8W,AA,TP,1.8x3.2m		ZDVP1	0403-001211	DIODE-ZENER:MTZJ12B,11.44-12.03V,500MW,DO	
RD30	2001-000440	R-CARBON:10OHM,5%,1/8W,AA,TP,1.8X3.2MM		ZDVP2	0403-000720	DIODE-ZENER:MTZJ9.1B,9.1V,8.57-9.01V,500	
RD36	2003-000264	R-METAL OXIDE:300ohm,5%,1W,AD,TP,4.3x12m		ZDVP3	0403-000717	DIODE-ZENER:MTZJ5.1B,5.1V,4.94-5.2V,500m	
VA01	1405-001026	VARISTOR:470V,600A,9x7mm,TP		ZDVP4	0403-000390	DIODE-ZENER:UZP33B,33V,31.4-34.6V,1W,DO-	

**POWER DRIVE PARTS**

CDP01	2401-001730	C-AL:10uF,20%,50V,GP,TP,5x11,2.5	
CDP02	2401-001730	C-AL:10uF,20%,50V,GP,TP,5x11,2.5	
CDP03	2401-001730	C-AL:10uF,20%,50V,GP,TP,5x11,2.5	
CDP04	2401-002299	C-AL:4.7uF,20%,50V,GP,TP,5x7,5	
CDP06	2401-001730	C-AL:10uF,20%,50V,GP,TP,5x11,2.5	
CDP07	2401-001730	C-AL:10uF,20%,50V,GP,TP,5x11,2.5	
CDP08	2401-002299	C-AL:4.7uF,20%,50V,GP,TP,5x7,5	
CDP09	2401-000598	C-AL:1uF,20%,50V,GP,TP,4x7,5	
CDP10	2401-001730	C-AL:10uF,20%,50V,GP,TP,5x11,2.5	
CVP01	2401-001730	C-AL:10uF,20%,50V,GP,TP,5x11,2.5	
CVP02	2401-002299	C-AL:4.7uF,20%,50V,GP,TP,5x7,5	
CVP03	2401-001730	C-AL:10uF,20%,50V,GP,TP,5x11,2.5	
CVP04	2401-000598	C-AL:1uF,20%,50V,GP,TP,4x7,5	
CVP05	2401-002299	C-AL:4.7uF,20%,50V,GP,TP,5x7,5	
CVP06	2401-001730	C-AL:10uF,20%,50V,GP,TP,5x11,2.5	
CVP07	2401-002299	C-AL:4.7uF,20%,50V,GP,TP,5x7,5	
CVP08	2401-001730	C-AL:10uF,20%,50V,GP,TP,5x11,2.5	
CVP09	2401-001730	C-AL:10uF,20%,50V,GP,TP,5x11,2.5	
DDP1	0401-000101	DIODE-SWITCHING:1N4148,100V,200mA,DO-35,	
DDP2	0401-000101	DIODE-SWITCHING:1N4148,100V,200mA,DO-35,	
DDP4	0402-000127	DIODE-RECTIFIER:1N4002,100V,1A,DO-41,TP	
DDP5	0402-000127	DIODE-RECTIFIER:1N4002,100V,1A,DO-41,TP	
DDP6	0402-000127	DIODE-RECTIFIER:1N4002,100V,1A,DO-41,TP	
DVP1	0401-000101	DIODE-SWITCHING:1N4148,100V,200mA,DO-35,	
DVP2	0401-000101	DIODE-SWITCHING:1N4148,100V,200mA,DO-35,	
DVP3	0401-000101	DIODE-SWITCHING:1N4148,100V,200mA,DO-35,	
DVP5	0402-000127	DIODE-RECTIFIER:1N4002,100V,1A,DO-41,TP	
DVP6	0402-000127	DIODE-RECTIFIER:1N4002,100V,1A,DO-41,TP	
DVP7	0402-000127	DIODE-RECTIFIER:1N4002,100V,1A,DO-41,TP	
DVP8	0402-000127	DIODE-RECTIFIER:1N4002,100V,1A,DO-41,TP	
DVP9	0402-000127	DIODE-RECTIFIER:1N4002,100V,1A,DO-41,TP	
ICDP1	1203-000122	IC-NEGA FIXED REG.:7908,TO-220,3P,-PLAS	
ICDP2	1203-002185	IC-VOLTAGE REGULATOR:3RD13,TO-220,4P,402	
ODP1	0501-000616	TR-SMALL SIGNAL:KSC2328A-Y,NPN,1W,TO-92L	
ODP2	0501-000616	TR-SMALL SIGNAL:KSC2328A-Y,NPN,1W,TO-92L	
ODP5	0502-000416	TR-POWER:2SD1273P,NPN,2W,TO-220F,BK,800	
ODP6	0504-000142	TR-DIGITAL:KSR2001,PNP,300MW,4.7K/4.7K,T	
ODP7	0501-000398	TR-SMALL SIGNAL:KSC945,NPN,250mW,TO-92,T	
QVP1	0501-000616	TR-SMALL SIGNAL:KSC2328A-Y,NPN,1W,TO-92L	
QVP2	0504-000142	TR-DIGITAL:KSR2001,PNP,300MW,4.7K/4.7K,T	
QVP3	0501-000398	TR-SMALL SIGNAL:KSC945,NPN,250mW,TO-92,T	
QVP4	0502-000416	TR-POWER:2SD1273P,NPN,2W,TO-220F,BK,800	
QVP5	0501-000616	TR-SMALL SIGNAL:KSC2328A-Y,NPN,1W,TO-92L	
QVP6	0501-000616	TR-SMALL SIGNAL:KSC2328A-Y,NPN,1W,TO-92L	
RDP1	2001-000362	R-CARBON:150OHM,5%,1/8W,AA,TP,1.8X3.2MM	
RDP2	2001-000405	R-CARBON:180OHM,5%,1/8W,AA,TP,1.8X3.2MM	
RDP4	2001-000034	R-CARBON:220OHM,5%,1/4W,AA,TP,2.4X6.4MM	
RDP5	2001-000003	R-CARBON:330ohm,5%,1/8W,AA,TP,1.8x3.2mm	
RDP6	2001-000449	R-CARBON:2.2KOHM,5%,1/8W,AA,TP,1.8X3.2M	
RVP1	2001-000855	R-CARBON:560OHM,5%,1/4W,AA,TP,2.4X6.4MM	
RVP2	2001-000362	R-CARBON:150OHM,5%,1/8W,AA,TP,1.8X3.2MM	
RVP3	2001-000449	R-CARBON:2.2KOHM,5%,1/8W,AA,TP,1.8X3.2M	

**603 AH92-01004C ASSY PCB DVD-MAIN;DVD-V1000D/XAA,AUD.B, 4H,**

CN8	3708-001364	CONNECTOR-FPC/FC/PIC:35P,1.25MM,STRAIGHT	
DCN1	3708-001364	CONNECTOR-FPC/FC/PIC:35P,1.25MM,STRAIGHT	
DCN2	3711-001018	CONNECTOR-HEADER:BOX,5P,1R,2mm,STRAIGHT,	
MC1	2203-000257	C-CERAMIC,CHIP:10nF,10%,50V,X7R,TP,1608	
MC10	2203-000257	C-CERAMIC,CHIP:10nF,10%,50V,X7R,TP,1608	
MC11	2203-000626	C-CERAMIC,CHIP:0.022nF,5%,50V,NPO,TP,160	
MC12	2203-000257	C-CERAMIC,CHIP:10nF,10%,50V,X7R,TP,1608	
MC13	2203-000257	C-CERAMIC,CHIP:10nF,10%,50V,X7R,TP,1608	
MC14	2203-000257	C-CERAMIC,CHIP:10nF,10%,50V,X7R,TP,1608	
MC15	2203-000257	C-CERAMIC,CHIP:10nF,10%,50V,X7R,TP,1608	
MC16	2203-000257	C-CERAMIC,CHIP:10nF,10%,50V,X7R,TP,1608	
MC17	2203-000257	C-CERAMIC,CHIP:10nF,10%,50V,X7R,TP,1608	
MC18	2203-005148	C-CERAMIC,CHIP:100nF,10%,16V,X7R,TP,1608	
MC19	2203-005148	C-CERAMIC,CHIP:100nF,10%,16V,X7R,TP,1608	
MC2	2203-000257	C-CERAMIC,CHIP:10nF,10%,50V,X7R,TP,1608	
MC3	2203-000626	C-CERAMIC,CHIP:0.022nF,5%,50V,NPO,TP,160	
MC4	2203-000426	C-CERAMIC,CHIP:0.018nF,5%,50V,NPO,TP,160	
MC5	2203-000426	C-CERAMIC,CHIP:0.018nF,5%,50V,NPO,TP,160	
MC6	2203-000257	C-CERAMIC,CHIP:10nF,10%,50V,X7R,TP,1608	
MC7	2203-000626	C-CERAMIC,CHIP:0.022nF,5%,50V,NPO,TP,160	
MC8	2203-000257	C-CERAMIC,CHIP:10nF,10%,50V,X7R,TP,1608	
MC9	2203-000257	C-CERAMIC,CHIP:10nF,10%,50V,X7R,TP,1608	
MIC1	0903-001224	IC-MICROCONTROLLER:91C219,16Bit,OPF,100P	
MIC2	3704-000472	SOCKET-IC:32PDIPS,SN,2.54mm	
MIC2B	1102-001090	IC-EPROM:27C081,1MX8BIT,DIP,32P,600MIL,1	
MIC3	1106-001341	IC-SRAM:15M256,32Kx8BIT,SOP,28P,346MIL	
MIC4	1103-001204	IC-EEPROM:24C021,256x8BIT,SOP8P,150MIL,	
MIC5	0801-002097	IC-CMOS LOGIC:7ST08,AND GATE,SOP5P,110M	
MIC6	0801-002143	IC-CMOS LOGIC:7S32,OR GATE,SOT-23,5P,63M	
MIC7	0801-002517	IC-CMOS LOGIC:7SET00,NAND GATE,SOP5P,63	
MR1	2007-000090	R-CHIP:10Kohm,5%,1/16W,DA,TP,1608	
MR10	2007-000074	R-CHIP:100ohm,5%,1/16W,DA,TP,1608	
MR11	2007-000074	R-CHIP:100ohm,5%,1/16W,DA,TP,1608	
MR13	2007-000074	R-CHIP:100ohm,5%,1/16W,DA,TP,1608	
MR14	2007-000074	R-CHIP:100ohm,5%,1/16W,DA,TP,1608	
MR15	2007-000074	R-CHIP:100ohm,5%,1/16W,DA,TP,1608	
MR16	2007-000090	R-CHIP:10Kohm,5%,1/16W,DA,TP,1608	
MR17	2007-000090	R-CHIP:10Kohm,5%,1/16W,DA,TP,1608	
MR18	2007-000090	R-CHIP:10Kohm,5%,1/16W,DA,TP,1608	
MR2	2007-000074	R-CHIP:100ohm,5%,1/16W,DA,TP,1608	
MR21	2007-000084	R-CHIP:4.7Kohm,5%,1/16W,DA,TP,1608	
MR23	2007-000090	R-CHIP:10Kohm,5%,1/16W,DA,TP,1608	
MR25	2007-000090	R-CHIP:10Kohm,5%,1/16W,DA,TP,1608	
MR3	2007-000074	R-CHIP:100ohm,5%,1/16W,DA,TP,1608	
MR32	2007-000084	R-CHIP:4.7Kohm,5%,1/16W,DA,TP,1608	
MR4	2007-000074	R-CHIP:100ohm,5%,1/16W,DA,TP,1608	
MR6	2007-000090	R-CHIP:10Kohm,5%,1/16W,DA,TP,1608	
MR7	2007-000090	R-CHIP:10Kohm,5%,1/16W,DA,TP,1608	
MR8	2007-000078	R-CHIP:1Kohm,5%,1/16W,DA,TP,1608	
MR9	2007-000074	R-CHIP:100ohm,5%,1/16W,DA,TP,1608	
MY1	2802-001152	RESONATOR-CERAMIC:20MHZ,0.5%,TP,5.5X3.5X	

Loc.No	Part No	Description ; Specification	Remark	Loc.No	Part No	Description ; Specification	Remark
PC1	2203-000257	C-CERAMIC,CHIP:10nF,10%,50V,X7R,TP,1608		RR12	2007-000102	R-CHIP:100Kohm,5%,1/16W,DA,TP,1608	
PC2	2203-000257	C-CERAMIC,CHIP:10nF,10%,50V,X7R,TP,1608		RR13	2007-000102	R-CHIP:100Kohm,5%,1/16W,DA,TP,1608	
PC3	2203-000257	C-CERAMIC,CHIP:10nF,10%,50V,X7R,TP,1608		RR14	2007-000097	R-CHIP:47Kohm,5%,1/16W,DA,TP,1608	
PC4	2203-000257	C-CERAMIC,CHIP:10nF,10%,50V,X7R,TP,1608		RR15	2007-000078	R-CHIP:1Kohm,5%,1/16W,DA,TP,1608	
PC5	2203-005148	C-CERAMIC,CHIP:100nF,10%,16V,X7R,TP,1608		RR16	2007-000078	R-CHIP:1Kohm,5%,1/16W,DA,TP,1608	
PC6	2203-005148	C-CERAMIC,CHIP:100nF,10%,16V,X7R,TP,1608		RR2	2007-000100	R-CHIP:68Kohm,5%,1/16W,DA,TP,1608	
PCN1	3711-000596	CONNECTOR-HEADER:BOX,10P,1R,2mm,STRAIGHT		RR21	2007-000091	R-CHIP:12Kohm,5%,1/16W,DA,TP,1608	
PE1	2401-002165	C-AL:100uF,20%,16V,GP,TP,6.3x7,5		RR22	2007-000091	R-CHIP:12Kohm,5%,1/16W,DA,TP,1608	
PE2	2401-002165	C-AL:100uF,20%,16V,GP,TP,6.3x7,5		RR23	2007-000655	R-CHIP:27Kohm,5%,1/16W,DA,TP,1608	
PE3	2401-002165	C-AL:100uF,20%,16V,GP,TP,6.3x7,5		RR24	2007-000134	R-CHIP:33Kohm,5%,1/16W,DA,TP,1608	
PE4	2401-002165	C-AL:100uF,20%,16V,GP,TP,6.3x7,5		RR26	2007-000102	R-CHIP:100Kohm,5%,1/16W,DA,TP,1608	
PE5	2401-002165	C-AL:100uF,20%,16V,GP,TP,6.3x7,5		RR3	2007-000093	R-CHIP:20Kohm,5%,1/16W,DA,TP,1608	
PIC1	1203-002178	IC-VOLTAGE REGULATOR:1563,SOP,7P,173MIL		RR32	2007-000102	R-CHIP:100Kohm,5%,1/16W,DA,TP,1608	
R1	2007-000078	R-CHIP:1Kohm,5%,1/16W,DA,TP,1608		RR33	2007-000102	R-CHIP:100Kohm,5%,1/16W,DA,TP,1608	
R2	2007-000080	R-CHIP:2Kohm,5%,1/16W,DA,TP,1608		RR34	2007-000084	R-CHIP:4.7Kohm,5%,1/16W,DA,TP,1608	
R3	2007-000078	R-CHIP:1Kohm,5%,1/16W,DA,TP,1608		RR36	2007-001235	R-CHIP:910Kohm,5%,1/16W,DA,TP,1608	
R4	2007-000080	R-CHIP:2Kohm,5%,1/16W,DA,TP,1608		RR4	2007-000086	R-CHIP:5.6Kohm,5%,1/16W,DA,TP,1608	
RC1	2203-000560	C-CERAMIC,CHIP:220nF,+80-20%,25V,Y5V,TP		RR42	2007-000086	R-CHIP:5.6Kohm,5%,1/16W,DA,TP,1608	
RC14A	2203-005148	C-CERAMIC,CHIP:100nF,10%,16V,X7R,TP,1608		RR6	2007-001056	R-CHIP:6.2Kohm,5%,1/16W,DA,TP,1608	
RC15	2203-005148	C-CERAMIC,CHIP:100nF,10%,16V,X7R,TP,1608		RR7	2007-000077	R-CHIP:470ohm,5%,1/16W,DA,TP,1608	
RC16	2203-000257	C-CERAMIC,CHIP:10nF,10%,50V,X7R,TP,1608		RR8	2007-000312	R-CHIP:100HM,5%,1/8W,DA,TP,3216	
RC17	2203-000975	C-CERAMIC,CHIP:47nF,10%,25V,X7R,TP,1608		RR9	2007-000077	R-CHIP:470ohm,5%,1/16W,DA,TP,1608	
RC18	2203-000975	C-CERAMIC,CHIP:47nF,10%,25V,X7R,TP,1608		SC10	2203-001634	C-CERAMIC,CHIP:33nF,10%,50V,X7R,TP,1608	
RC19	2203-000560	C-CERAMIC,CHIP:220nF,+80-20%,25V,Y5V,TP		SC11	2203-000715	C-CERAMIC,CHIP:3.3nF,10%,50V,X7R,TP,1608	
RC2	2203-005148	C-CERAMIC,CHIP:100nF,10%,16V,X7R,TP,1608		SC12	2203-000140	C-CERAMIC,CHIP:1.5nF,10%,50V,X7R,TP,1608	
RC20	2203-000236	C-CERAMIC,CHIP:0.1nF,5%,50V,NPO,TP,1608		SC13	2203-001652	C-CERAMIC,CHIP:470nF,+80-20%,16V,Y5V,TP	
RC21	2203-000560	C-CERAMIC,CHIP:220nF,+80-20%,25V,Y5V,TP		SC14	2203-000257	C-CERAMIC,CHIP:10nF,10%,50V,X7R,TP,1608	
RC22	2203-005148	C-CERAMIC,CHIP:100nF,10%,16V,X7R,TP,1608		SC15	2203-005148	C-CERAMIC,CHIP:100nF,10%,16V,X7R,TP,1608	
RC23	2203-005148	C-CERAMIC,CHIP:100nF,10%,16V,X7R,TP,1608		SC16	2203-002398	C-CERAMIC,CHIP:22nF,10%,50V,X7R,TP,1608	
RC24	2203-005148	C-CERAMIC,CHIP:100nF,10%,16V,X7R,TP,1608		SC17	2203-001126	C-CERAMIC,CHIP:0.68nF,10%,50V,X7R,TP,160	
RC26	2203-005148	C-CERAMIC,CHIP:100nF,10%,16V,X7R,TP,1608		SC18	2203-005148	C-CERAMIC,CHIP:100nF,10%,16V,X7R,TP,1608	
RC27	2203-005148	C-CERAMIC,CHIP:100nF,10%,16V,X7R,TP,1608		SC19	2203-002398	C-CERAMIC,CHIP:22nF,10%,50V,X7R,TP,1608	
RC3	2203-005148	C-CERAMIC,CHIP:100nF,10%,16V,X7R,TP,1608		SC2	2203-005148	C-CERAMIC,CHIP:100nF,10%,16V,X7R,TP,1608	
RC30	2203-005148	C-CERAMIC,CHIP:100nF,10%,16V,X7R,TP,1608		SC20	2203-005148	C-CERAMIC,CHIP:100nF,10%,16V,X7R,TP,1608	
RC31	2203-000236	C-CERAMIC,CHIP:0.1nF,5%,50V,NPO,TP,1608		SC21	2203-005148	C-CERAMIC,CHIP:100nF,10%,16V,X7R,TP,1608	
RC32	2203-005148	C-CERAMIC,CHIP:100nF,10%,16V,X7R,TP,1608		SC23	2203-000491	C-CERAMIC,CHIP:2.2nF,10%,50V,X7R,TP,1608	
RC33	2203-005065	C-CERAMIC,CHIP:1000nF,+80-20%,10V,Y5V,TP		SC24	2203-000491	C-CERAMIC,CHIP:2.2nF,10%,50V,X7R,TP,1608	
RC34	2203-000257	C-CERAMIC,CHIP:10nF,10%,50V,X7R,TP,1608		SC25	2203-000372	C-CERAMIC,CHIP:15nF,10%,50V,X7R,TP,1608	
RC35	2203-005148	C-CERAMIC,CHIP:100nF,10%,16V,X7R,TP,1608		SC26	2203-000372	C-CERAMIC,CHIP:15nF,10%,50V,X7R,TP,1608	
RC37	2203-000236	C-CERAMIC,CHIP:0.1nF,5%,50V,NPO,TP,1608		SC27	2203-000257	C-CERAMIC,CHIP:10nF,10%,50V,X7R,TP,1608	
RC38	2203-000140	C-CERAMIC,CHIP:1.5nF,10%,50V,X7R,TP,1608		SC28	2203-000257	C-CERAMIC,CHIP:10nF,10%,50V,X7R,TP,1608	
RC4	2203-005148	C-CERAMIC,CHIP:100nF,10%,16V,X7R,TP,1608		SC29	2203-000257	C-CERAMIC,CHIP:10nF,10%,50V,X7R,TP,1608	
RC41	2203-005148	C-CERAMIC,CHIP:100nF,10%,16V,X7R,TP,1608		SC30	2203-000257	C-CERAMIC,CHIP:10nF,10%,50V,X7R,TP,1608	
RC5	2203-005148	C-CERAMIC,CHIP:100nF,10%,16V,X7R,TP,1608		SC32	2203-000257	C-CERAMIC,CHIP:10nF,10%,50V,X7R,TP,1608	
RC50	2203-001607	C-CERAMIC,CHIP:0.22nF,5%,50V,NPO,TP,1608		SC33	2203-000681	C-CERAMIC,CHIP:0.027nF,5%,50V,NPO,TP,160	
RC6	2203-005148	C-CERAMIC,CHIP:100nF,10%,16V,X7R,TP,1608		SC34	2203-000681	C-CERAMIC,CHIP:0.027nF,5%,50V,NPO,TP,160	
RC7	2203-005148	C-CERAMIC,CHIP:100nF,10%,16V,X7R,TP,1608		SC35	2203-000257	C-CERAMIC,CHIP:10nF,10%,50V,X7R,TP,1608	
RC8	2203-005148	C-CERAMIC,CHIP:100nF,10%,16V,X7R,TP,1608		SC36	2203-000257	C-CERAMIC,CHIP:10nF,10%,50V,X7R,TP,1608	
RE1	2401-000414	C-AL:10uF,20%,16V,GP,TP,4x7,5		SC37	2203-000257	C-CERAMIC,CHIP:10nF,10%,50V,X7R,TP,1608	
RE10	2401-000913	C-AL:22uF,20%,16V,GP,TP,5x11,5		SC38	2203-000257	C-CERAMIC,CHIP:10nF,10%,50V,X7R,TP,1608	
RE12	2401-000913	C-AL:22uF,20%,16V,GP,TP,5x11,5		SC39	2203-000626	C-CERAMIC,CHIP:0.022nF,5%,50V,NPO,TP,160	
RE13	2401-000414	C-AL:10uF,20%,16V,GP,TP,4x7,5		SC40	2203-000626	C-CERAMIC,CHIP:0.022nF,5%,50V,NPO,TP,160	
RE14	2401-000414	C-AL:10uF,20%,16V,GP,TP,4x7,5		SC41	2203-000626	C-CERAMIC,CHIP:0.022nF,5%,50V,NPO,TP,160	
RE22	2401-000414	C-AL:10uF,20%,16V,GP,TP,4x7,5		SC42	2203-000257	C-CERAMIC,CHIP:10nF,10%,50V,X7R,TP,1608	
RE29	2401-000414	C-AL:10uF,20%,16V,GP,TP,4x7,5		SC43	2203-000626	C-CERAMIC,CHIP:0.022nF,5%,50V,NPO,TP,160	
RE39	2401-000414	C-AL:10uF,20%,16V,GP,TP,4x7,5		SC44	2203-000257	C-CERAMIC,CHIP:10nF,10%,50V,X7R,TP,1608	
RE40	2401-002165	C-AL:100uF,20%,16V,GP,TP,6.3x7,5		SC45	2203-005148	C-CERAMIC,CHIP:100nF,10%,16V,X7R,TP,1608	
RE41	2401-000414	C-AL:10uF,20%,16V,GP,TP,4x7,5		SC46	2203-000257	C-CERAMIC,CHIP:10nF,10%,50V,X7R,TP,1608	
RIC1	AH13-00007A	IC ASIC:KS1462,DVD-611/XAA,80,+5V,-40t		SC47	2203-000257	C-CERAMIC,CHIP:10nF,10%,50V,X7R,TP,1608	
RL11	3301-000353	CORE-FERRITE BEAD:AB,120ohm,2x1.25x0.9mm		SC48	2203-000257	C-CERAMIC,CHIP:10nF,10%,50V,X7R,TP,1608	
RL3	2703-000398	INDUCTOR-SMD:10uH,10%,3.2x2.5x2.2mm		SC49	2203-005148	C-CERAMIC,CHIP:100nF,10%,16V,X7R,TP,1608	
RQ1	0501-000279	TR-SMALL SIGNAL:KSA1182-Y,PNP,150mW,SOT-		SC50	2203-005148	C-CERAMIC,CHIP:100nF,10%,16V,X7R,TP,1608	
RQ2	0501-000279	TR-SMALL SIGNAL:KSA1182-Y,PNP,150mW,SOT-		SC51	2203-005148	C-CERAMIC,CHIP:100nF,10%,16V,X7R,TP,1608	
RQ3	0504-000128	TR-DIGITAL:-,NPN,200mW,22K/22K,SOT-23,TP		SC52	2203-005148	C-CERAMIC,CHIP:100nF,10%,16V,X7R,TP,1608	
RR1	2007-000091	R-CHIP:12Kohm,5%,1/16W,DA,TP,1608		SC54	2203-001222	C-CERAMIC,CHIP:820pF,10%,50V,X7R,TP,1608	
RR10	2007-000312	R-CHIP:100HM,5%,1/8W,DA,TP,3216		SC55	2203-005148	C-CERAMIC,CHIP:100nF,10%,16V,X7R,TP,1608	

Electrical Parts List

Loc.No	Part No	Description ; Specification	Remark	Loc.No	Part No	Description ; Specification	Remark
SC56	2203-005148	C-CERAMIC,CHIP:100nF,10%,16V,X7R,TP,1608		SR75	2007-000093	R-CHIP:20Kohm,5%,1/16W,DA,TP,1608	
SC57	2203-005148	C-CERAMIC,CHIP:100nF,10%,16V,X7R,TP,1608		SR76	2007-000093	R-CHIP:20Kohm,5%,1/16W,DA,TP,1608	
SC58	2203-005148	C-CERAMIC,CHIP:100nF,10%,16V,X7R,TP,1608		SR77	2007-000092	R-CHIP:15Kohm,5%,1/16W,DA,TP,1608	
SC59	2203-005148	C-CERAMIC,CHIP:100nF,10%,16V,X7R,TP,1608		SR79	2007-000090	R-CHIP:10Kohm,5%,1/16W,DA,TP,1608	
SC60	2203-005148	C-CERAMIC,CHIP:100nF,10%,16V,X7R,TP,1608		SR8	2007-000799	R-CHIP:360ohm,5%,1/16W,DA,TP,1608	
SC61	2203-005148	C-CERAMIC,CHIP:100nF,10%,16V,X7R,TP,1608		SR9	2007-000097	R-CHIP:47Kohm,5%,1/16W,DA,TP,1608	
SC62	2203-005148	C-CERAMIC,CHIP:100nF,10%,16V,X7R,TP,1608		SY1	2801-000261	CRYSTAL-UNIT:33.8688MHZ,50PPM,28-AAA,12P	
SC63	2203-005148	C-CERAMIC,CHIP:100nF,10%,16V,X7R,TP,1608		VR1	2104-001068	VR-SMD:10Kohm,25%,1/20W,TOP	
SC7	2203-001222	C-CERAMIC,CHIP:820pF,10%,50V,X7R,TP,1608		ZC1	2203-000257	C-CERAMIC,CHIP:10nF,10%,50V,X7R,TP,1608	
SC8	2203-005148	C-CERAMIC,CHIP:100nF,10%,16V,X7R,TP,1608		ZC10	2203-000257	C-CERAMIC,CHIP:10nF,10%,50V,X7R,TP,1608	
SC9	2203-005148	C-CERAMIC,CHIP:100nF,10%,16V,X7R,TP,1608		ZC11	2203-000257	C-CERAMIC,CHIP:10nF,10%,50V,X7R,TP,1608	
SC90	2203-000975	C-CERAMIC,CHIP:47nF,10%,25V,X7R,TP,1608,		ZC12	2203-000257	C-CERAMIC,CHIP:10nF,10%,50V,X7R,TP,1608	
SE1	2401-002165	C-AL:100uF,20%,16V,GP,TP,6.3x7,5		ZC13	2203-000257	C-CERAMIC,CHIP:10nF,10%,50V,X7R,TP,1608	
SE10	2401-002144	C-AL:47uF,20%,16V,GP,TP,5x11,5		ZC14	2203-000257	C-CERAMIC,CHIP:10nF,10%,50V,X7R,TP,1608	
SE11	2401-000414	C-AL:10uF,20%,16V,GP,TP,4x7,5		ZC15	2203-000257	C-CERAMIC,CHIP:10nF,10%,50V,X7R,TP,1608	
SE2	2401-000414	C-AL:10uF,20%,16V,GP,TP,4x7,5		ZC16	2203-000257	C-CERAMIC,CHIP:10nF,10%,50V,X7R,TP,1608	
SE3	2401-000414	C-AL:10uF,20%,16V,GP,TP,4x7,5		ZC17	2203-000257	C-CERAMIC,CHIP:10nF,10%,50V,X7R,TP,1608	
SE4	2401-000414	C-AL:10uF,20%,16V,GP,TP,4x7,5		ZC18	2203-000257	C-CERAMIC,CHIP:10nF,10%,50V,X7R,TP,1608	
SE6	2401-001225	C-AL:4.7uF,20%,16V,GP,TP,3x5,5		ZC19	2203-000257	C-CERAMIC,CHIP:10nF,10%,50V,X7R,TP,1608	
SE7	2401-001225	C-AL:4.7uF,20%,16V,GP,TP,3x5,5		ZC2	2203-000257	C-CERAMIC,CHIP:10nF,10%,50V,X7R,TP,1608	
SE8	2401-001225	C-AL:4.7uF,20%,16V,GP,TP,3x5,5		ZC29	2203-000257	C-CERAMIC,CHIP:10nF,10%,50V,X7R,TP,1608	
SE9	2401-002144	C-AL:47uF,20%,16V,GP,TP,5x11,5		ZC3	2203-000257	C-CERAMIC,CHIP:10nF,10%,50V,X7R,TP,1608	
SIC1	AH13-00006A	IC ASIC:KS1454,DVD-611/XAA,160,+3.3V+		ZC37	2203-000257	C-CERAMIC,CHIP:10nF,10%,50V,X7R,TP,1608	
SIC2	1105-001243	IC-DRAM:416C256,256KX16BIT,SOJ,40P,400		ZC38	2203-000257	C-CERAMIC,CHIP:10nF,10%,50V,X7R,TP,1608	
SIC3	1003-001298	IC-MOTOR DRIVER:KA3017,HQFP,48P,550MIL,1		ZC39	2203-000257	C-CERAMIC,CHIP:10nF,10%,50V,X7R,TP,1608	
SIC4	0801-002097	IC-CMOS LOGIC:7ST08,AND GATE,SOP,5P,110M		ZC4	2203-000626	C-CERAMIC,CHIP:0.022nF,5%,50V,NPO,TP,160	
SQ1	0504-000156	TR-DIGITAL:KSR2103,PNP,200MW,22K/22K,SOT		ZC40	2203-000257	C-CERAMIC,CHIP:10nF,10%,50V,X7R,TP,1608	
SR1	2007-000381	R-CHIP:13Kohm,5%,1/16W,DA,TP,1608		ZC41	2203-000257	C-CERAMIC,CHIP:10nF,10%,50V,X7R,TP,1608	
SR14	2007-000078	R-CHIP:1Kohm,5%,1/16W,DA,TP,1608		ZC42	2203-000257	C-CERAMIC,CHIP:10nF,10%,50V,X7R,TP,1608	
SR15	2007-000090	R-CHIP:10Kohm,5%,1/16W,DA,TP,1608		ZC43	2203-005148	C-CERAMIC,CHIP:100nF,10%,16V,X7R,TP,1608	
SR16	2007-000133	R-CHIP:330Kohm,5%,1/16W,DA,TP,1608		ZC44	2203-000257	C-CERAMIC,CHIP:10nF,10%,50V,X7R,TP,1608	
SR18	2007-000102	R-CHIP:100Kohm,5%,1/16W,DA,TP,1608		ZC45	2203-000257	C-CERAMIC,CHIP:10nF,10%,50V,X7R,TP,1608	
SR19	2007-000091	R-CHIP:12Kohm,5%,1/16W,DA,TP,1608		ZC46	2203-000257	C-CERAMIC,CHIP:10nF,10%,50V,X7R,TP,1608	
SR20	2007-001235	R-CHIP:910Kohm,5%,1/16W,DA,TP,1608		ZC47	2203-000257	C-CERAMIC,CHIP:10nF,10%,50V,X7R,TP,1608	
SR21	2007-000092	R-CHIP:15Kohm,5%,1/16W,DA,TP,1608		ZC48	2203-000257	C-CERAMIC,CHIP:10nF,10%,50V,X7R,TP,1608	
SR23	2007-000091	R-CHIP:12Kohm,5%,1/16W,DA,TP,1608		ZC49	2203-000257	C-CERAMIC,CHIP:10nF,10%,50V,X7R,TP,1608	
SR24	2007-000091	R-CHIP:12Kohm,5%,1/16W,DA,TP,1608		ZC5	2203-000626	C-CERAMIC,CHIP:0.022nF,5%,50V,NPO,TP,160	
SR25	2007-000093	R-CHIP:20Kohm,5%,1/16W,DA,TP,1608		ZC50	2203-000257	C-CERAMIC,CHIP:10nF,10%,50V,X7R,TP,1608	
SR26	2007-000092	R-CHIP:15Kohm,5%,1/16W,DA,TP,1608		ZC51	2203-000257	C-CERAMIC,CHIP:10nF,10%,50V,X7R,TP,1608	
SR27	2007-000092	R-CHIP:15Kohm,5%,1/16W,DA,TP,1608		ZC56	2203-000257	C-CERAMIC,CHIP:10nF,10%,50V,X7R,TP,1608	
SR29	2007-000124	R-CHIP:2.2Kohm,5%,1/16W,DA,TP,1608		ZC58	2203-000440	C-CERAMIC,CHIP:1nF,10%,50V,X7R,TP,1608,-	
SR30	2007-000124	R-CHIP:2.2Kohm,5%,1/16W,DA,TP,1608		ZC59	2203-005148	C-CERAMIC,CHIP:100nF,10%,16V,X7R,TP,1608	
SR31	2007-000124	R-CHIP:2.2Kohm,5%,1/16W,DA,TP,1608		ZC6	2203-000626	C-CERAMIC,CHIP:0.022nF,5%,50V,NPO,TP,160	
SR32	2007-000124	R-CHIP:2.2Kohm,5%,1/16W,DA,TP,1608		ZC60	2203-000681	C-CERAMIC,CHIP:0.027nF,5%,50V,NPO,TP,160	
SR4	2007-000078	R-CHIP:1Kohm,5%,1/16W,DA,TP,1608		ZC61	2007-000070	R-CHIP:0ohm,5%,1/16W,DA,TP,1608	
SR40	2007-000078	R-CHIP:1Kohm,5%,1/16W,DA,TP,1608		ZC62	2203-000681	C-CERAMIC,CHIP:0.027nF,5%,50V,NPO,TP,160	
SR44	2007-000109	R-CHIP:1Mohm,5%,1/4W,DA,TP,3216		ZC63	2203-000626	C-CERAMIC,CHIP:0.022nF,5%,50V,NPO,TP,160	
SR48	2007-000078	R-CHIP:1Kohm,5%,1/16W,DA,TP,1608		ZC66	2203-000257	C-CERAMIC,CHIP:10nF,10%,50V,X7R,TP,1608	
SR49	2007-000074	R-CHIP:100ohm,5%,1/16W,DA,TP,1608		ZC67	2203-000257	C-CERAMIC,CHIP:10nF,10%,50V,X7R,TP,1608	
SR50	2007-000074	R-CHIP:100ohm,5%,1/16W,DA,TP,1608		ZC68	2203-000257	C-CERAMIC,CHIP:10nF,10%,50V,X7R,TP,1608	
SR51	2007-000074	R-CHIP:100ohm,5%,1/16W,DA,TP,1608		ZC69	2203-000257	C-CERAMIC,CHIP:10nF,10%,50V,X7R,TP,1608	
SR55	2007-000074	R-CHIP:100ohm,5%,1/16W,DA,TP,1608		ZC7	2203-000257	C-CERAMIC,CHIP:10nF,10%,50V,X7R,TP,1608	
SR56	2007-000074	R-CHIP:100ohm,5%,1/16W,DA,TP,1608		ZC70	2203-000257	C-CERAMIC,CHIP:10nF,10%,50V,X7R,TP,1608	
SR57	2007-000074	R-CHIP:100ohm,5%,1/16W,DA,TP,1608		ZC78	2203-000626	C-CERAMIC,CHIP:0.022nF,5%,50V,NPO,TP,160	
SR58	2007-000082	R-CHIP:3.3Kohm,5%,1/16W,DA,TP,1608		ZC8	2203-000257	C-CERAMIC,CHIP:10nF,10%,50V,X7R,TP,1608	
SR59	2007-000087	R-CHIP:6.8Kohm,5%,1/16W,DA,TP,1608		ZC81	2203-000815	C-CERAMIC,CHIP:0.033nF,5%,50V,NPO,TP,160	
SR60	2007-000082	R-CHIP:3.3Kohm,5%,1/16W,DA,TP,1608		ZC82	2203-000815	C-CERAMIC,CHIP:0.033nF,5%,50V,NPO,TP,160	
SR61	2007-000107	R-CHIP:470Kohm,5%,1/16W,DA,TP,1608		ZC83	2203-000815	C-CERAMIC,CHIP:0.033nF,5%,50V,NPO,TP,160	
SR67	2007-000034	R-CHIP:10HM,5%,1/4W,DA,TP,3216		ZC84	2203-000815	C-CERAMIC,CHIP:0.033nF,5%,50V,NPO,TP,160	
SR68	2007-000034	R-CHIP:10HM,5%,1/4W,DA,TP,3216		ZC9	2203-000257	C-CERAMIC,CHIP:10nF,10%,50V,X7R,TP,1608	
SR69	2007-000655	R-CHIP:27Kohm,5%,1/16W,DA,TP,1608		ZD1	0402-000309	DIODE-RECTIFIER:1SR154-400,400V,1A,PSM	
SR70	2007-000090	R-CHIP:10Kohm,5%,1/16W,DA,TP,1608		ZE30	2401-002165	C-AL:100uF,20%,16V,GP,TP,6.3x7,5	
SR71	2007-000090	R-CHIP:10Kohm,5%,1/16W,DA,TP,1608		ZE34	2401-000414	C-AL:10uF,20%,16V,GP,TP,4x7,5	
SR72	2007-000090	R-CHIP:10Kohm,5%,1/16W,DA,TP,1608		ZE36	2401-000414	C-AL:10uF,20%,16V,GP,TP,4x7,5	
SR73	2007-000090	R-CHIP:10Kohm,5%,1/16W,DA,TP,1608		ZE37	2401-000414	C-AL:10uF,20%,16V,GP,TP,4x7,5	
SR74	2007-000084	R-CHIP:4.7Kohm,5%,1/16W,DA,TP,1608		ZIC1	1204-001673	IC-DECODER:ZIVA4.1,0FP,208P,1100MIL,PLAS	


Loc.No	Part No	Description ; Specification	Remark	Loc.No	Part No	Description ; Specification	Remark
ZIC2	1105-001344	IC-DRAM:638165,4Mx16Bit,TSOP,54P,400MI		D702	0401-000101	DIODE-SWITCHING:1N4148,100V,200mA,DO-35,	
ZIC4	AH14-10004R	IC:M74HCU04,SOP,TAPE 14P		D703	0401-000101	DIODE-SWITCHING:1N4148,100V,200mA,DO-35,	
ZL10	2703-000398	INDUCTOR-SMD:10uH,10%,3.2x2.5x2.2mm		D704	0401-000101	DIODE-SWITCHING:1N4148,100V,200mA,DO-35,	
ZL12	2703-000398	INDUCTOR-SMD:10uH,10%,3.2x2.5x2.2mm		DT701	AC07-00009A	VF DISPLAY:HNV-11SM12,DVR-5000,20.5X135.	
ZL13	3301-001419	CORE-FERRITE BEAD:AB,220ohm,1.6x0.8x0.8mm		IC701	1003-001039	IC-VFD:UPD16311GC-AB6,QFP,52P,-,-,40	
ZL14	3301-001419	CORE-FERRITE BEAD:AB,220ohm,1.6x0.8x0.8mm		JK701	AC37-22002H	JACK-PIN:3.2mm,DPSE-9826,3P,10mm,ARREY	
ZL15	3301-001419	CORE-FERRITE BEAD:AB,220ohm,1.6x0.8x0.8mm		L701	2701-000002	INDUCTOR-AXIAL:100uH,10%,4.2x9.8mm	
ZL16	3301-001419	CORE-FERRITE BEAD:AB,220ohm,1.6x0.8x0.8mm		LD701	0601-000497	LED-ROUND,GRN,3.1mm,565nm	
ZL2	3301-001414	CORE-FERRITE BEAD:AB,75ohm,2x1.25x0.85mm		Q702	0504-000119	TR-DIGITAL:KSR1004,NPN,300MW,47K/47K,TO-	
ZL5	2007-000023	R-CHIP:120OHM,5%,1/10W,DA,TP,2012		R702	2001-000660	R-CARBON:33KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
ZL6	3301-000353	CORE-FERRITE BEAD:AB,120ohm,2x1.25x0.9mm		R703	2001-000290	R-CARBON:10KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
ZL7	3301-000353	CORE-FERRITE BEAD:AB,120ohm,2x1.25x0.9mm		R705	2001-000633	R-CARBON:30KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
ZL9	3301-000353	CORE-FERRITE BEAD:AB,120ohm,2x1.25x0.9mm		R706	2001-000864	R-CARBON:56KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
ZR10	2007-000070	R-CHIP:0ohm,5%,1/16W,DA,TP,1608		R707	2001-000290	R-CARBON:10KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
ZR16	2007-000074	R-CHIP:100ohm,5%,1/16W,DA,TP,1608		R708	2001-000034	R-CARBON:220OHM,5%,1/4W,AA,TP,2.4X6.4MM	
ZR17	2007-000074	R-CHIP:100ohm,5%,1/16W,DA,TP,1608		R710	2001-000290	R-CARBON:10KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
ZR18	2007-000074	R-CHIP:100ohm,5%,1/16W,DA,TP,1608		R711	2001-000734	R-CARBON:4.7KOHM,5%,1/8W,AA,TP,1.8X3.2M	
ZR2	2007-000113	R-CHIP:33ohm,5%,1/16W,DA,TP,1608		R712	2001-000429	R-CARBON:1KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
ZR23	2007-000078	R-CHIP:1Kohm,5%,1/16W,DA,TP,1608		R713	2001-000780	R-CARBON:470OHM,5%,1/8W,AA,TP,1.8X3.2MM	
ZR27	2007-000084	R-CHIP:4.7Kohm,5%,1/16W,DA,TP,1608		R714	2001-000780	R-CARBON:470OHM,5%,1/8W,AA,TP,1.8X3.2MM	
ZR28	2007-000084	R-CHIP:4.7Kohm,5%,1/16W,DA,TP,1608		R715	2001-000290	R-CARBON:10KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
ZR29	2007-000078	R-CHIP:1Kohm,5%,1/16W,DA,TP,1608		R716	2001-000660	R-CARBON:33KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
ZR3	2007-000113	R-CHIP:33ohm,5%,1/16W,DA,TP,1608		R717	2001-000290	R-CARBON:10KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
ZR35	3301-001309	CORE-FERRITE BEAD:AB,47ohm,1.6x0.8x0.8mm		R718	2001-000660	R-CARBON:33KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
ZR4	2007-000113	R-CHIP:33ohm,5%,1/16W,DA,TP,1608		R719	2001-000734	R-CARBON:4.7KOHM,5%,1/8W,AA,TP,1.8X3.2M	
ZR5	2007-000113	R-CHIP:33ohm,5%,1/16W,DA,TP,1608		R728	2001-000660	R-CARBON:33KOHM,5%,1/8W,AA,TP,1.8X3.2MM	
ZR6	2007-001164	R-CHIP:75ohm,1%,1/16W,DA,TP,1608		R729	2001-000333	R-CARBON:120OHM,5%,1/4W,AA,TP,2.4X6.4MM	
ZR68	2007-000078	R-CHIP:1Kohm,5%,1/16W,DA,TP,1608		RM701	AC59-60060A	MODULE-REMOCON:GP1U281R,SHARP,38KHZ,-,-,	
ZR69	2007-000078	R-CHIP:1Kohm,5%,1/16W,DA,TP,1608		SW701	3404-001008	SWITCH-TACT:15V,20mA,160gf,6x7.9x3.5mm,S	
ZR7	2007-001164	R-CHIP:75ohm,1%,1/16W,DA,TP,1608		SW702	3404-001008	SWITCH-TACT:15V,20mA,160gf,6x7.9x3.5mm,S	
ZR70	2007-000078	R-CHIP:1Kohm,5%,1/16W,DA,TP,1608		SW703	3404-001008	SWITCH-TACT:15V,20mA,160gf,6x7.9x3.5mm,S	
ZR72	2011-000816	R-NETWORK:100ohm,5%,63mWL,CHIP8P,TP		SW704	3404-001008	SWITCH-TACT:15V,20mA,160gf,6x7.9x3.5mm,S	
ZR73	2007-000078	R-CHIP:1Kohm,5%,1/16W,DA,TP,1608		SW705	3404-001008	SWITCH-TACT:15V,20mA,160gf,6x7.9x3.5mm,S	
ZR74	2007-000074	R-CHIP:100ohm,5%,1/16W,DA,TP,1608		SW706	3404-001008	SWITCH-TACT:15V,20mA,160gf,6x7.9x3.5mm,S	
ZR75	2007-001164	R-CHIP:75ohm,1%,1/16W,DA,TP,1608		SW707	3404-001008	SWITCH-TACT:15V,20mA,160gf,6x7.9x3.5mm,S	
ZR76	2007-001164	R-CHIP:75ohm,1%,1/16W,DA,TP,1608		SW708	3404-001008	SWITCH-TACT:15V,20mA,160gf,6x7.9x3.5mm,S	
ZR77	2007-001164	R-CHIP:75ohm,1%,1/16W,DA,TP,1608		SW710	3404-001008	SWITCH-TACT:15V,20mA,160gf,6x7.9x3.5mm,S	
ZR78	2007-001164	R-CHIP:75ohm,1%,1/16W,DA,TP,1608		SW714	3404-001008	SWITCH-TACT:15V,20mA,160gf,6x7.9x3.5mm,S	
ZR79	2007-007332	R-CHIP:1.18KOHM,1%,1/10W,DA,TP,2012		SW715	3404-001008	SWITCH-TACT:15V,20mA,160gf,6x7.9x3.5mm,S	
ZR8	2007-001164	R-CHIP:75ohm,1%,1/16W,DA,TP,1608		SW716	3404-001008	SWITCH-TACT:15V,20mA,160gf,6x7.9x3.5mm,S	
ZR84	2007-000078	R-CHIP:1Kohm,5%,1/16W,DA,TP,1608		SW717	3404-001008	SWITCH-TACT:15V,20mA,160gf,6x7.9x3.5mm,S	
ZR86	2007-000078	R-CHIP:1Kohm,5%,1/16W,DA,TP,1608		ZD701	0403-000357	DIODE-ZENER:U25.6BM,5.6V,5-4.5.8V,500mW,	
ZR88	2007-000078	R-CHIP:1Kohm,5%,1/16W,DA,TP,1608					
ZR89	2007-000109	R-CHIP:1Mohm,5%,1/16W,DA,TP,1608		<b>H240</b>	<b>AH92-00963A</b>	<b>ASSY-MILLENO DECK PCB 2LD:DVD-M101,MILLE</b>	
ZR9	2007-001164	R-CHIP:75ohm,1%,1/16W,DA,TP,1608		DC1	2202-002037	C-CERAMIC,MLC-AXIAL:100nF,80-.20%,50V,Y5V	
ZR91	2007-000074	R-CHIP:100ohm,5%,1/16W,DA,TP,1608		DC2	2202-002037	C-CERAMIC,MLC-AXIAL:100nF,80-.20%,50V,Y5V	
ZR92	2007-000074	R-CHIP:100ohm,5%,1/16W,DA,TP,1608		DCN1	3708-001364	CONNECTOR-FPC/FC/PIC:35P,1.25MM,STRAIGHT	
ZR93	2007-000074	R-CHIP:100ohm,5%,1/16W,DA,TP,1608		DCN2	3708-001593	CONNECTOR-FPC/FC/PIC:22P,1mm,ANGLE,SN	
ZR94	2007-000078	R-CHIP:1Kohm,5%,1/16W,DA,TP,1608		DCN3	3708-001589	CONNECTOR-FPC/FC/PIC:13P,1mm,ANGLE,SN	
ZR95	2007-000078	R-CHIP:1Kohm,5%,1/16W,DA,TP,1608		DD1	0401-000101	DIODE-SWITCHING:1N4148,100V,200mA,DO-35,	
ZR96	2007-000078	R-CHIP:1Kohm,5%,1/16W,DA,TP,1608		DD2	0401-000101	DIODE-SWITCHING:1N4148,100V,200mA,DO-35,	
ZY1	2801-003554	CRYSTAL-UNIT:27MHz,10ppm,28-AAM,12pf,40o		DR1	2001-000515	R-CARBON:220OHM,5%,1/8W,AA,TP,1.8X3.2MM	
<b>701</b>	<b>AC92-01031A</b>	<b>ASSY PCB-F/T:DVD-V1000,A/DUB,SP/LP,MULTI</b>		DR2	2001-000515	R-CARBON:220OHM,5%,1/8W,AA,TP,1.8X3.2MM	
C701	2401-002165	C-AL:100uF,20%,16V,GP,TP,6.3x7.5		DR3	2001-000325	R-CARBON:120OHM,5%,1/8W,AA,TP,1.8X3.2MM	
C702	2202-000173	C-CERAMIC,MLC-AXIAL:1nF,10%,50V,Y5P,TP,1		DR4	2001-000325	R-CARBON:120OHM,5%,1/8W,AA,TP,1.8X3.2MM	
C703	2202-000797	C-CERAMIC,MLC-AXIAL:10NF,30%,16V,Y5S,TP,		<b>H250</b>	<b>AH92-00900B</b>	<b>ASSY PCB-DECK B:DVD-V1000,MILLENO DECK(B</b>	
C705	2401-002165	C-AL:100uF,20%,16V,GP,TP,6.3x7.5		HCN1	AC39-00072A	CBF HARNESS:001-003009,-,-,5P,80,-,-,526	
C706	2202-000807	C-CERAMIC,MLC-AXIAL:22nF,+80-.20%,25V,Y5V		HSW1	3409-001119	SWITCH-DETECTOR:5V,DC,1.0A,DPST,30gf,-	
C707	2202-000243	C-CERAMIC,MLC-AXIAL:33pF,5%,50V,SL,TP,3.					
C712	2202-000183	C-CERAMIC,MLC-AXIAL:2.2NF,20%,16V,Y5R,TP					
C713	2202-000797	C-CERAMIC,MLC-AXIAL:10NF,30%,16V,Y5S,TP,					
C714	2202-000183	C-CERAMIC,MLC-AXIAL:2.2NF,20%,16V,Y5R,TP					
CN701	3710-001145	CONNECTOR-SOCKET:20P,1R,1.5mm,STRAIGHT,S					
D701	0401-000101	DIODE-SWITCHING:1N4148,100V,200mA,DO-35,					

# MEMO

Loc.No	Part No	Description ; Specification	Remark
--------	---------	-----------------------------	--------

Loc.No	Part No	Description ; Specification	Remark
--------	---------	-----------------------------	--------

## 8. Block Diagram

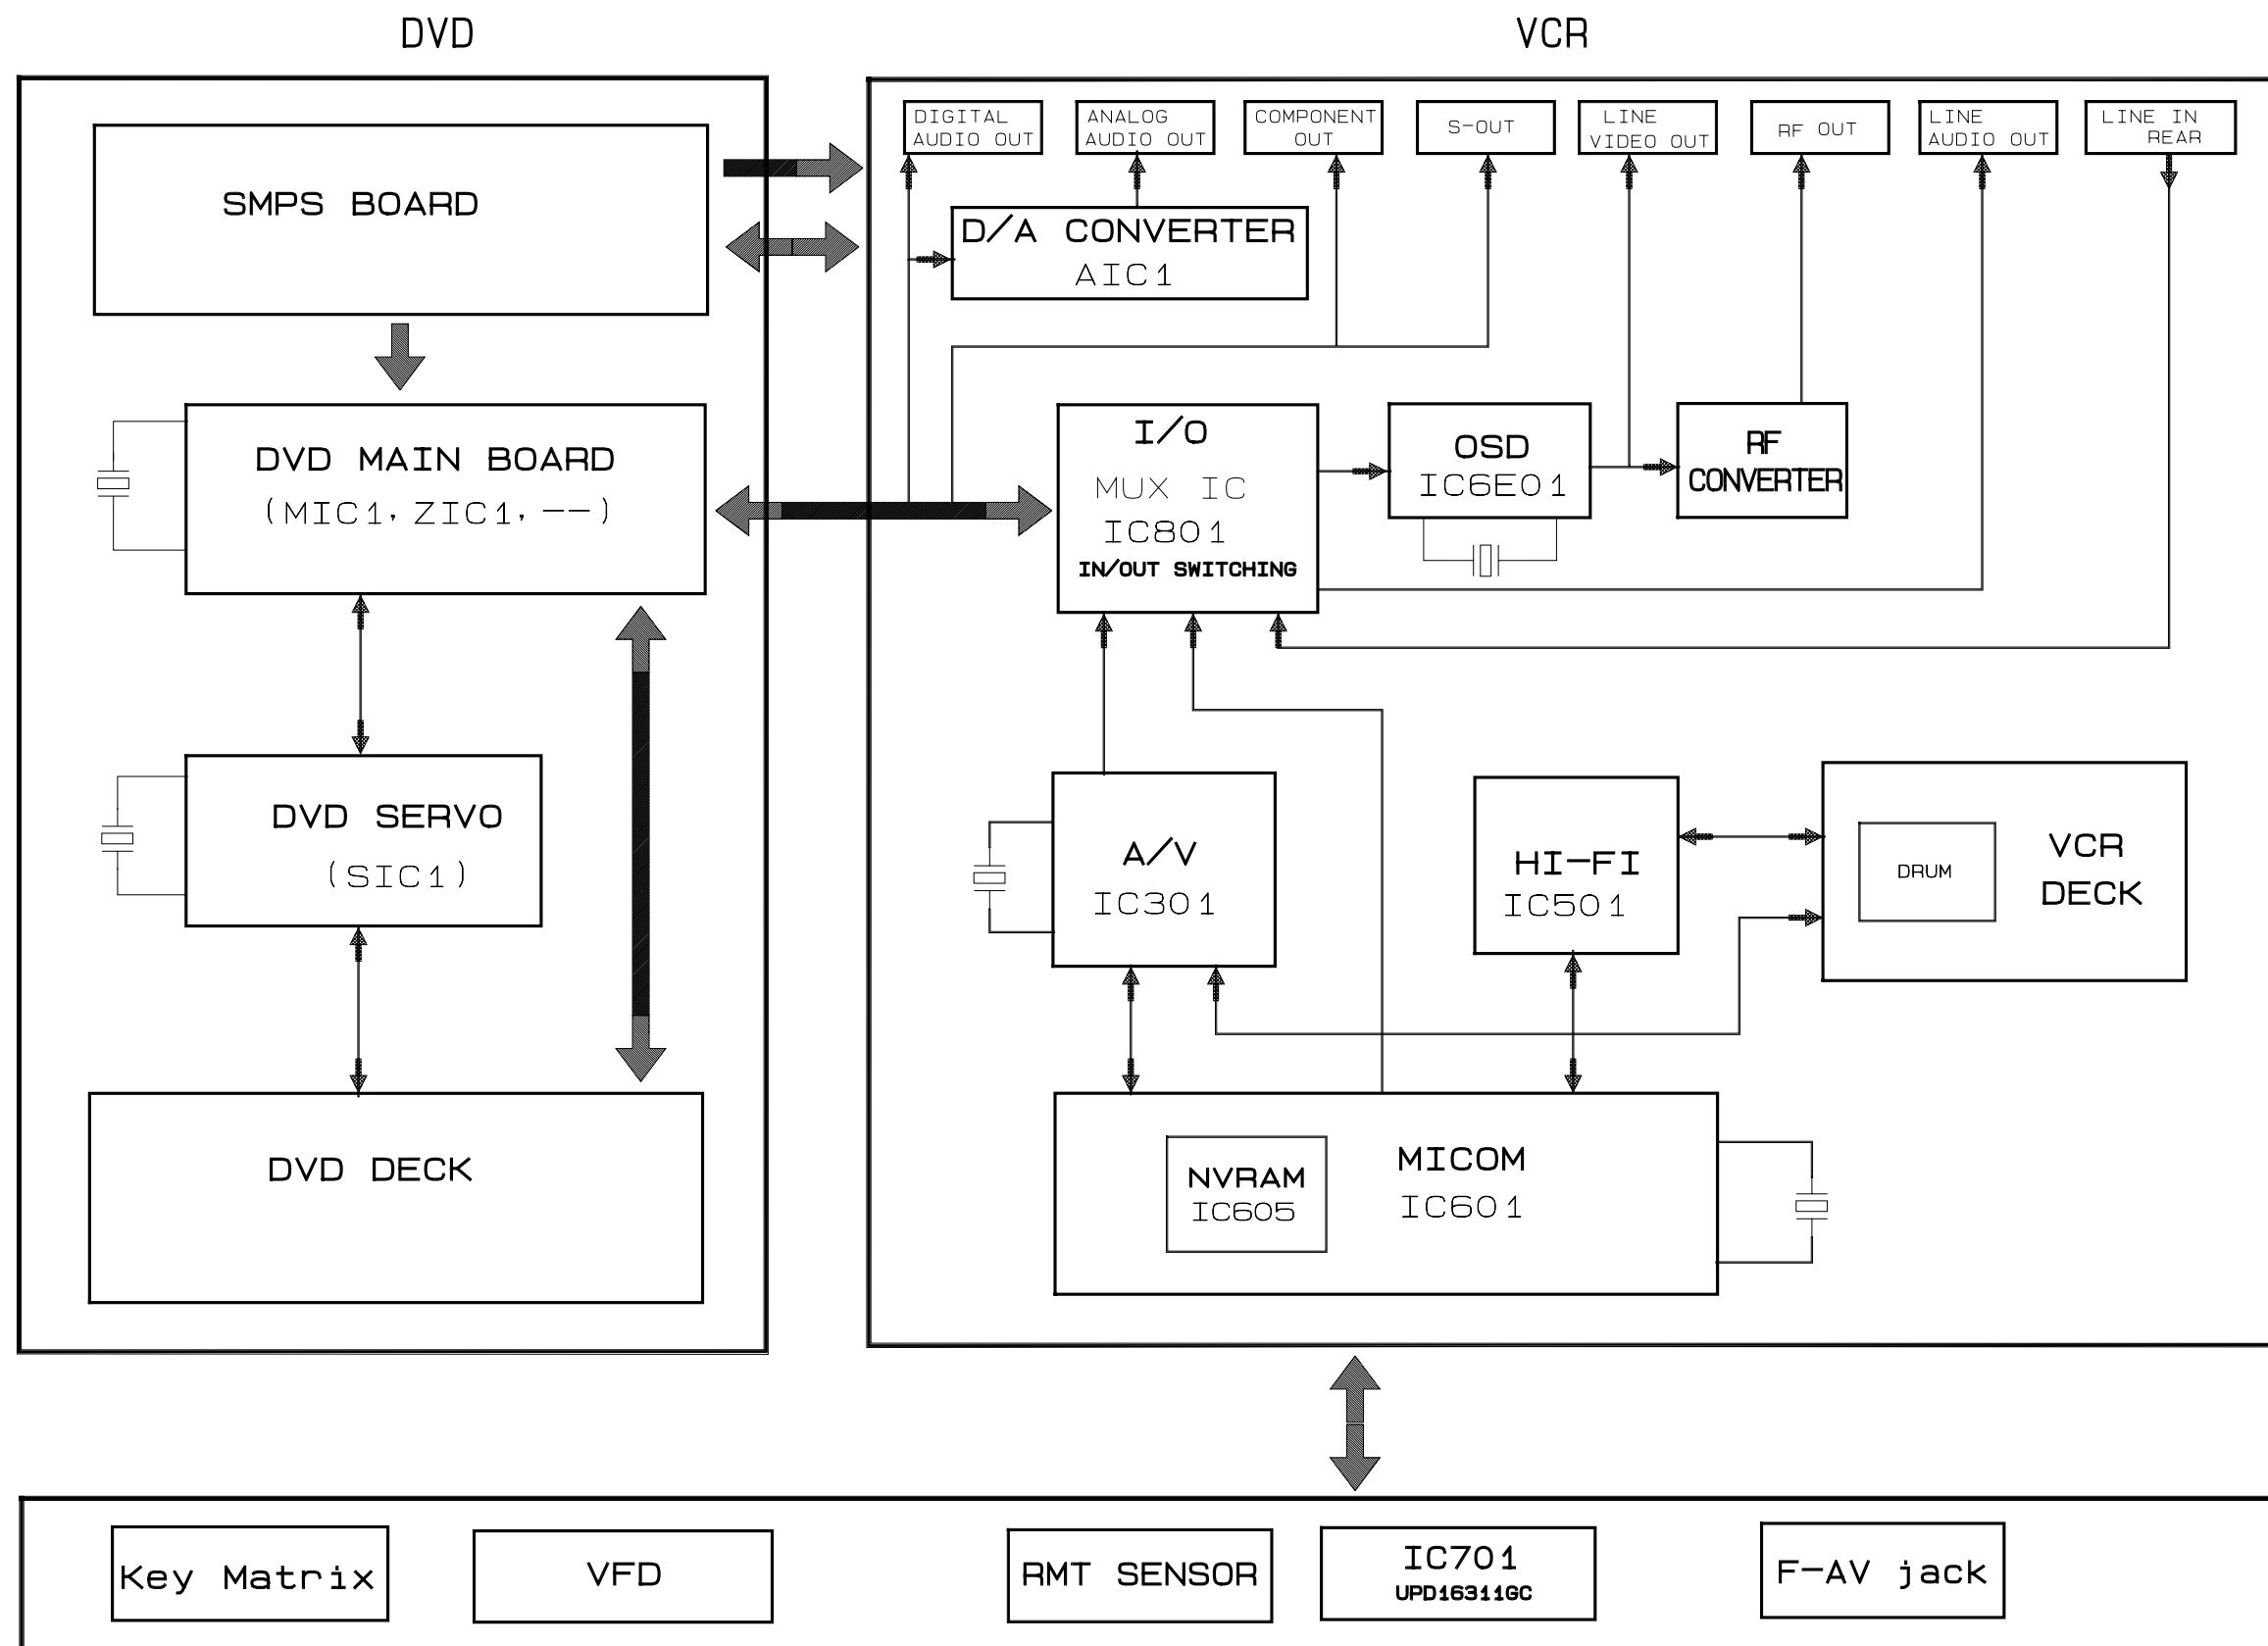



## MEMO


---

## 9. PCB Diagrams

---



9-1 S.M.P.S. - - - - -	9-2
9-2 VCR Main - - - - -	9-3
9-3 DVD Main - - - - -	9-4
9-4 Function-Timer - - - - -	9-5
9-5 DVD Deck - - - - -	9-5
9-6 Housing - - - - -	9-5

### 9-1 S.M.P.S.

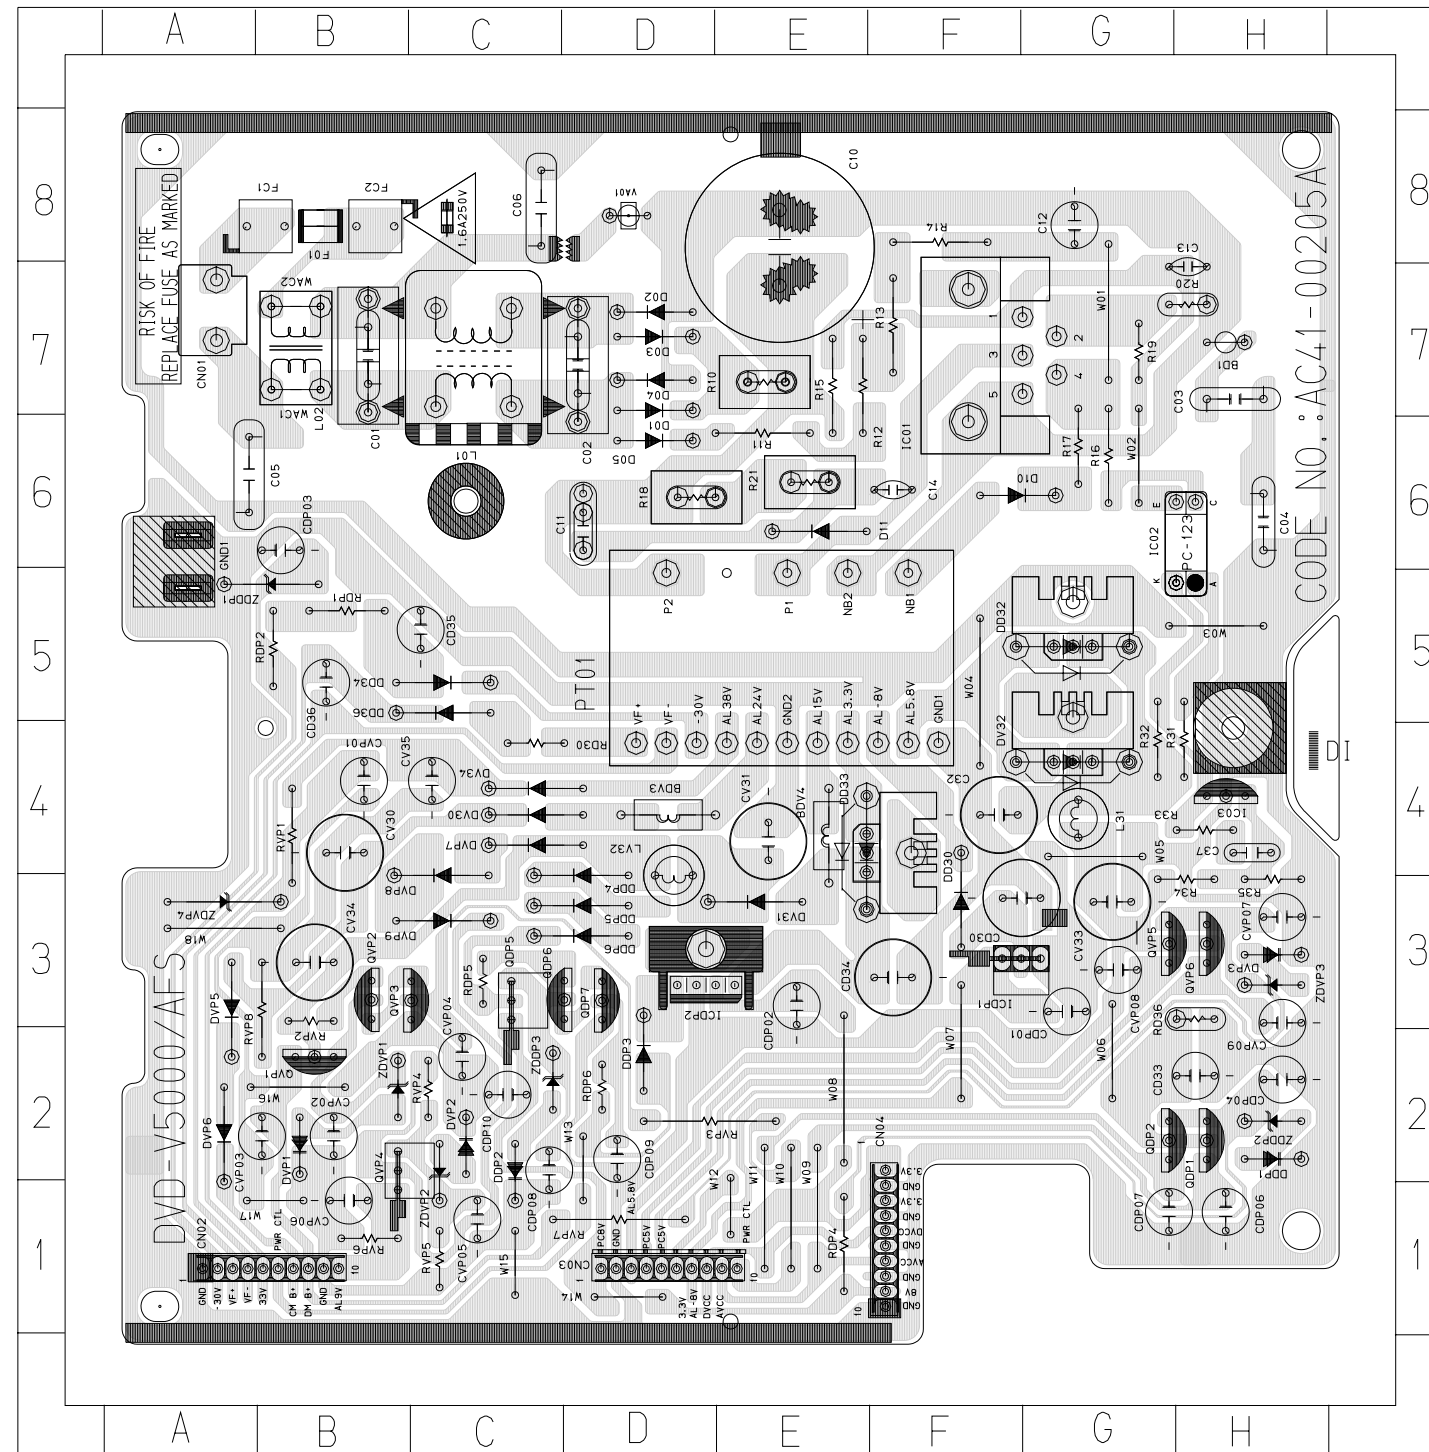





### 9-3 DVD Main

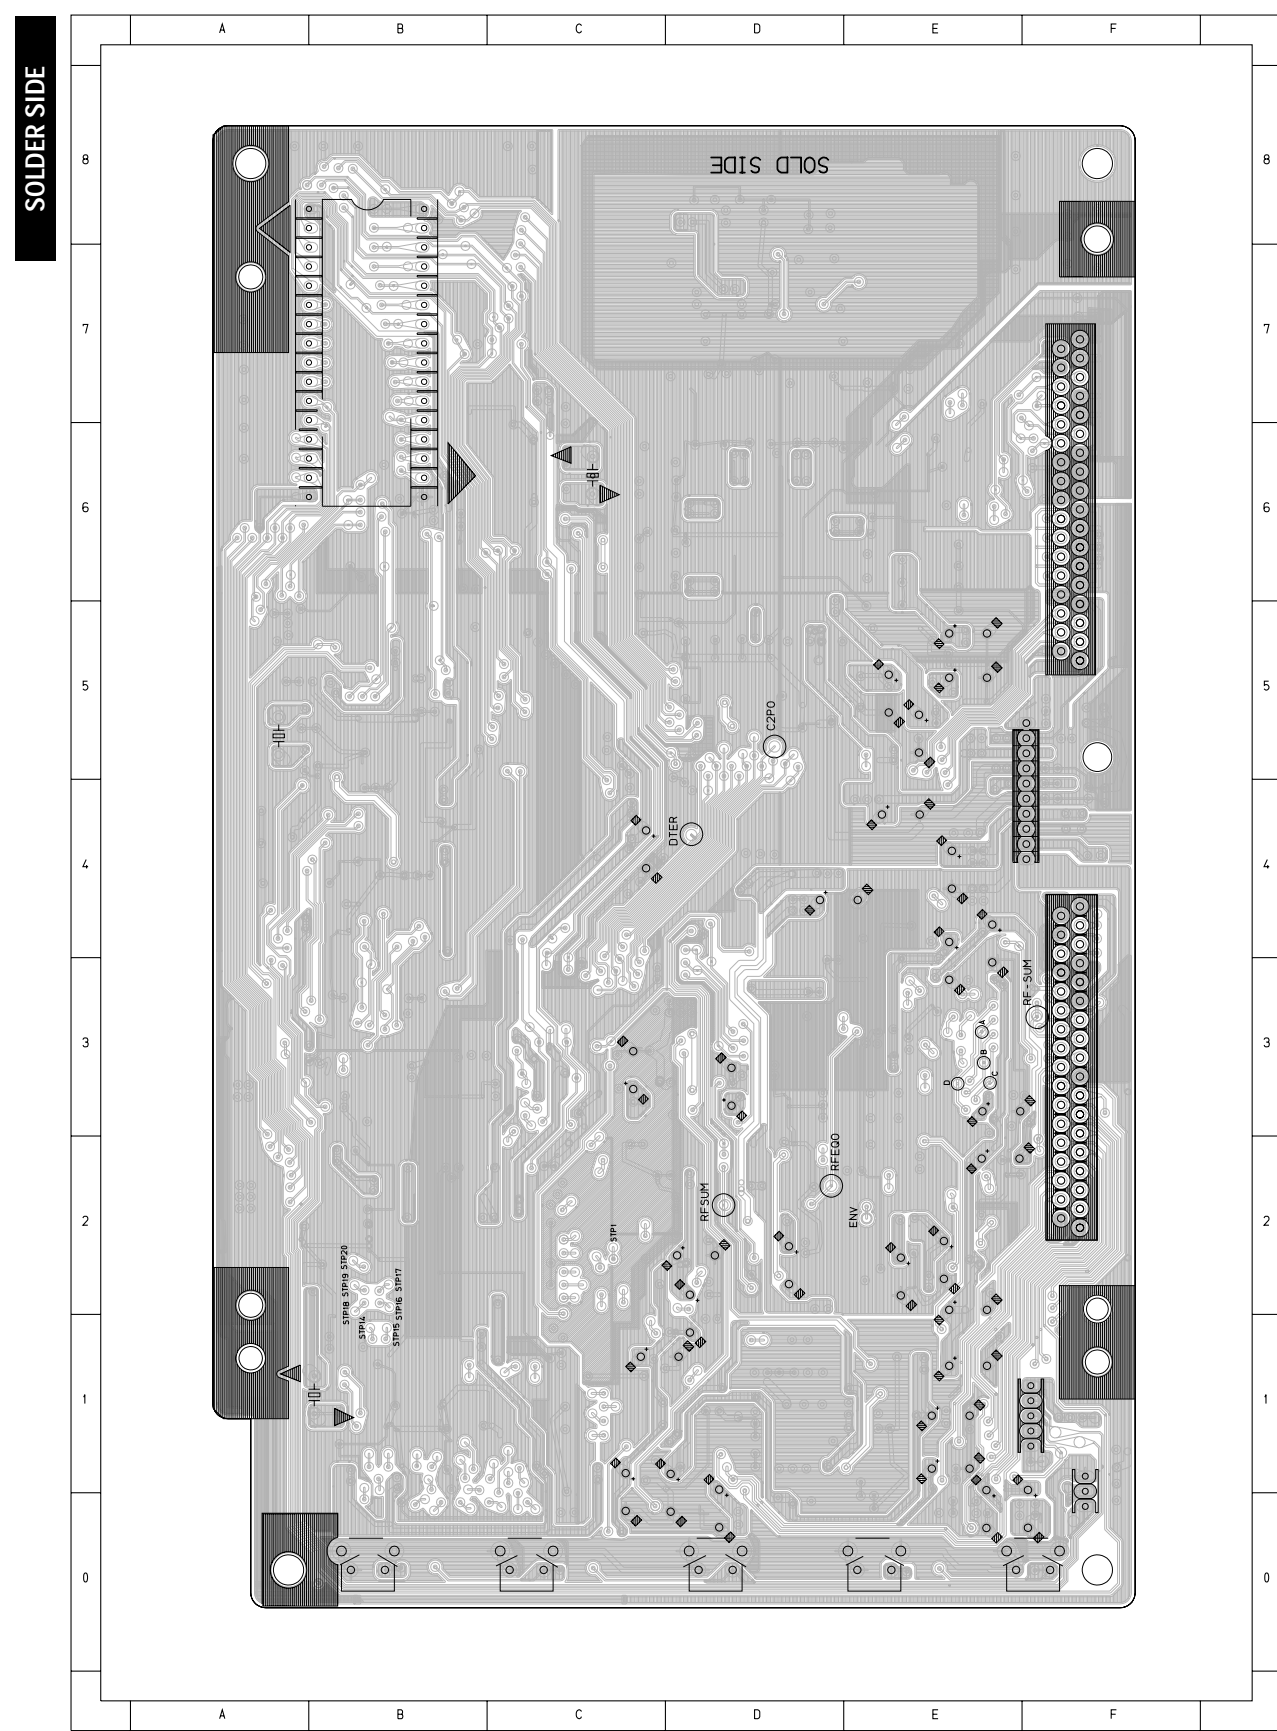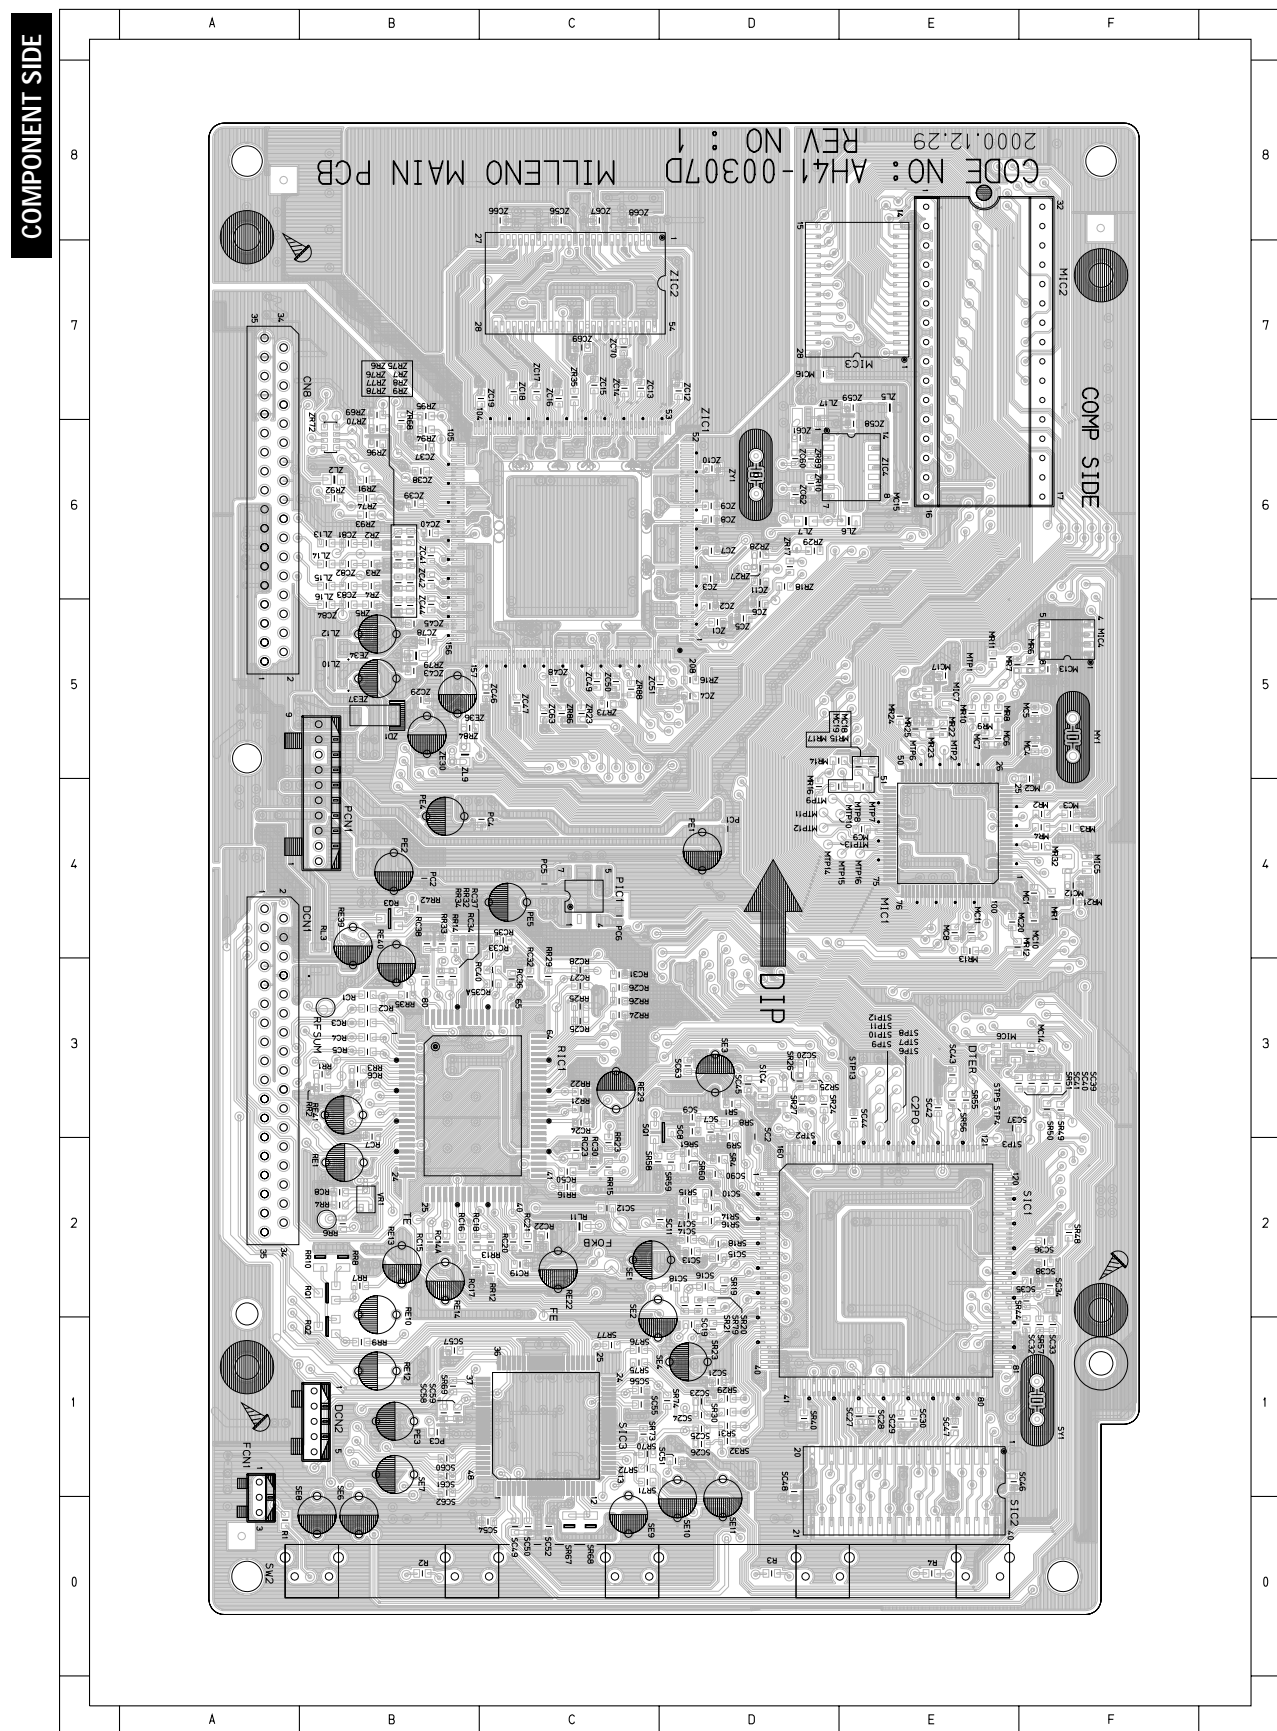


### 9-4 Function-Timer

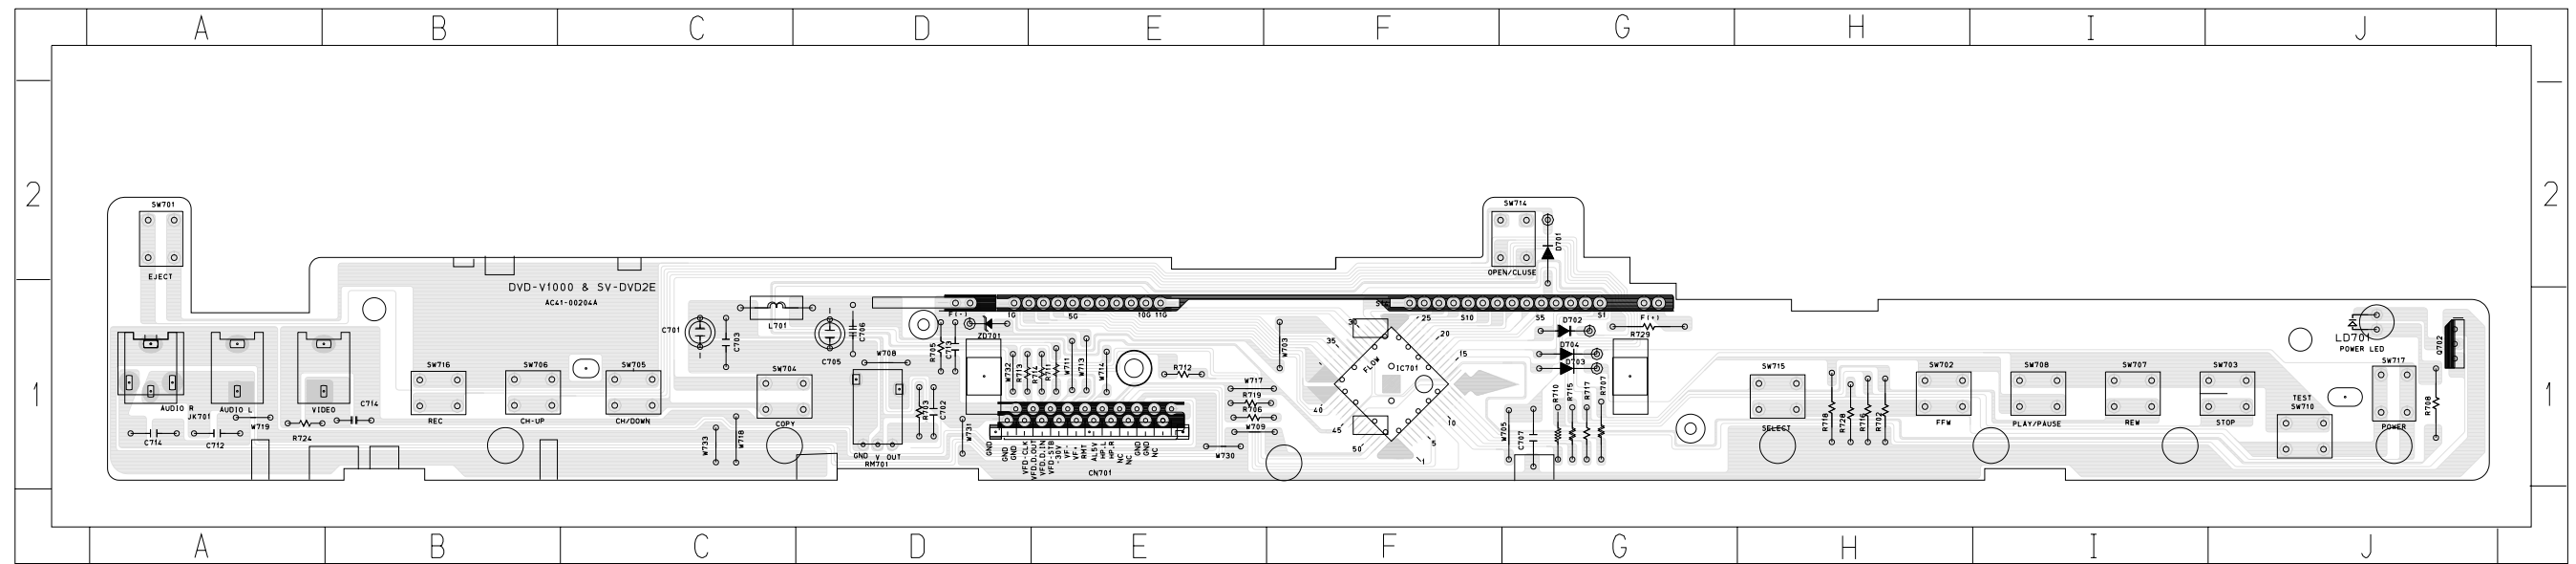

### 9-5 DVD Deck

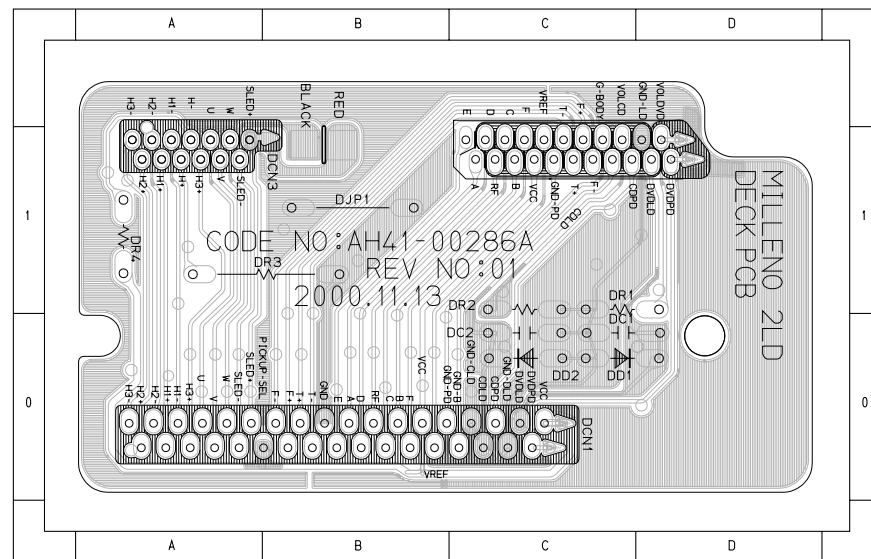


### 9-6 Housing

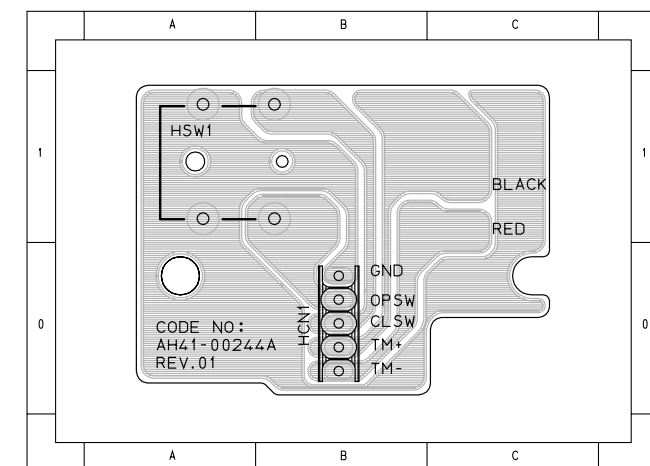

## MEMO

# 10. Wiring Diagram

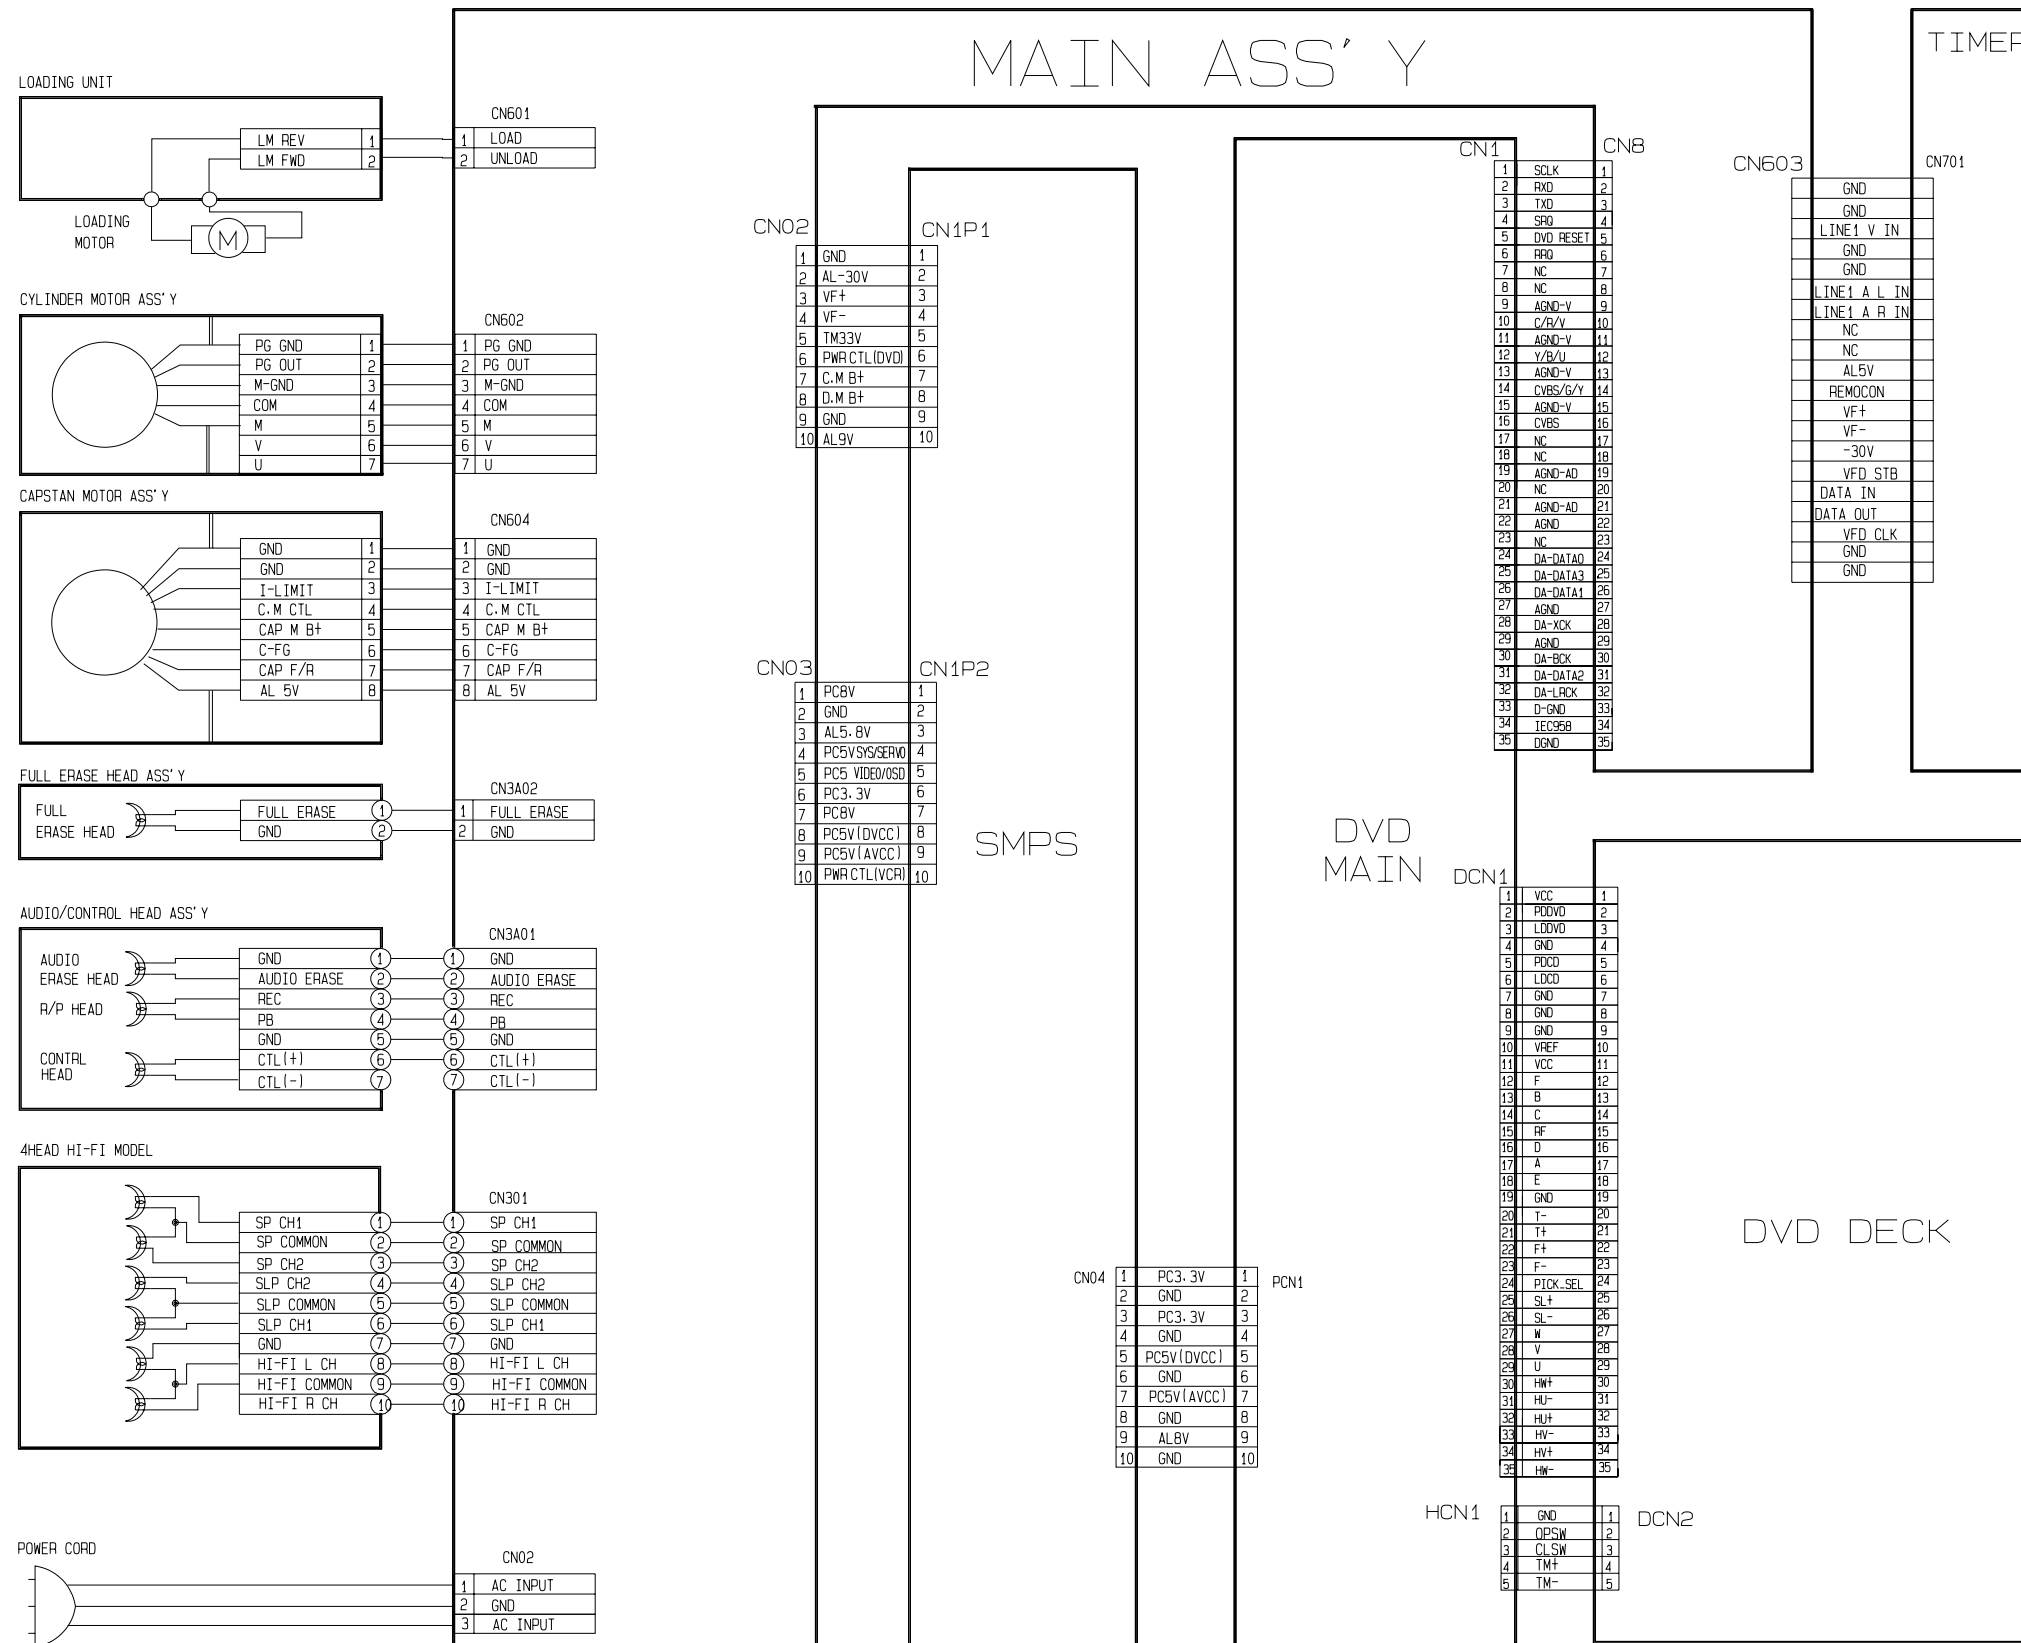



## MEMO

---

## 11. Schematic Diagrams

---

◆ Block Identification of Main PCB .....	11-2
11-1 S.M.P.S. ....	11-3
11-2 Power Drive .....	11-4
11-3 Function-Timer .....	11-5
<b>VCR Main PCB</b>	
11-4 System Control/Servo .....	11-6
11-5 A/V .....	11-7
11-6 TM-Block .....	11-8
11-7 Digital Audio .....	11-9
11-8 Hi-Fi .....	11-10
11-9 OSD .....	11-11
11-10 Input-Output .....	11-12
<b>DVD Main PCB</b>	
11-11 DVD Main-Micom/AV Decoder .....	11-13
11-12 Servo .....	11-14
11-13 DVD Deck .....	11-15

### Note

For schematic Diagram  
- Resistors are in ohms, 1/8W unless otherwise noted.


#### Special note :

Most semiconductor devices are electrostatically sensitive and therefore require the special handling techniques described under the "electrostatically sensitive (ES) devices" section of this service manual.



#### Note :

Do not use the part number shown on this drawing for ordering. The correct part number is shown in the parts list (may be slightly different or amended since this drawing was prepared).


#### Important safety notices :

Components identified with the mark  have the special characteristics for safety. When replacing any of these components. Use only the same type.


◆ Block Identification of Main PCB

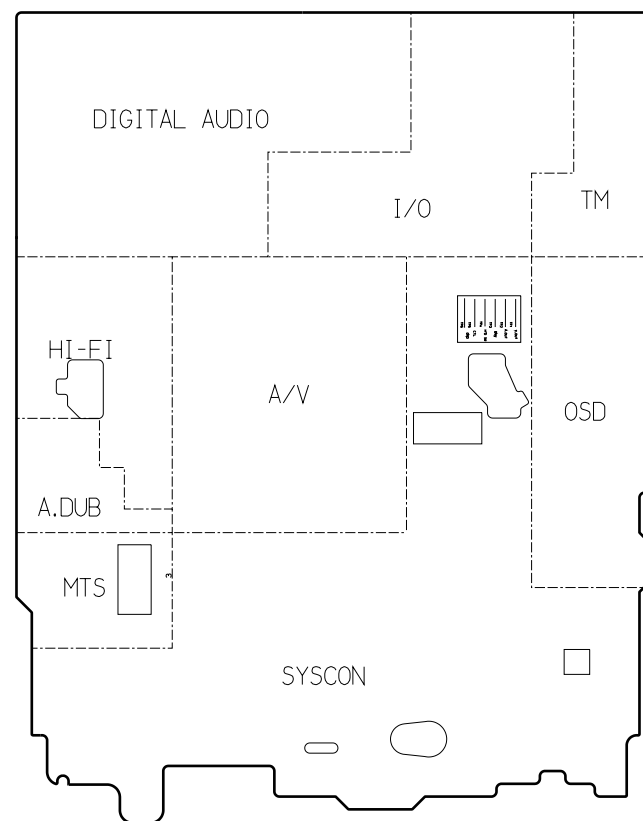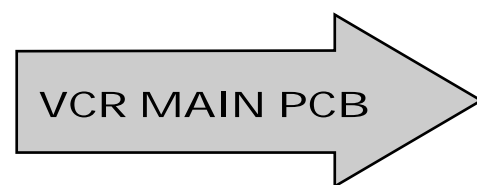

<Component Side>

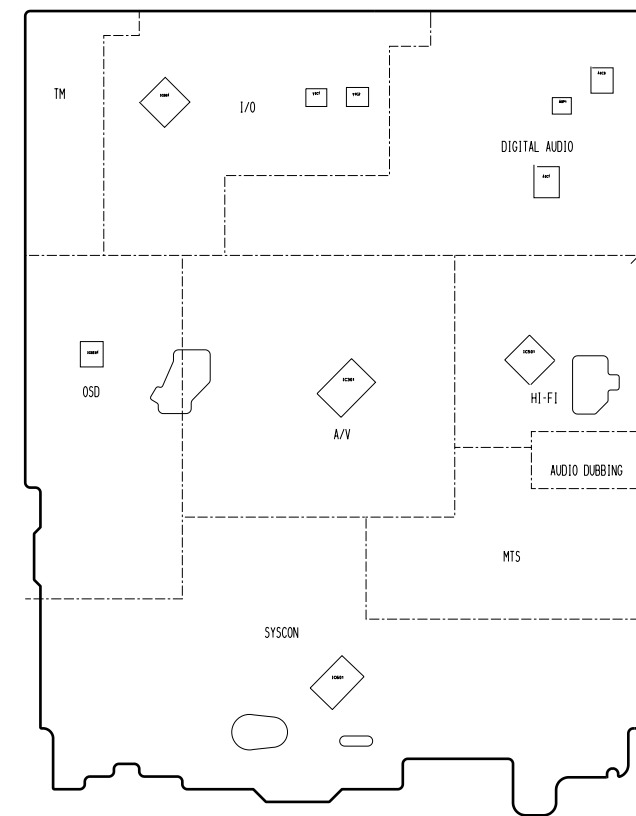


<Conductor Side>

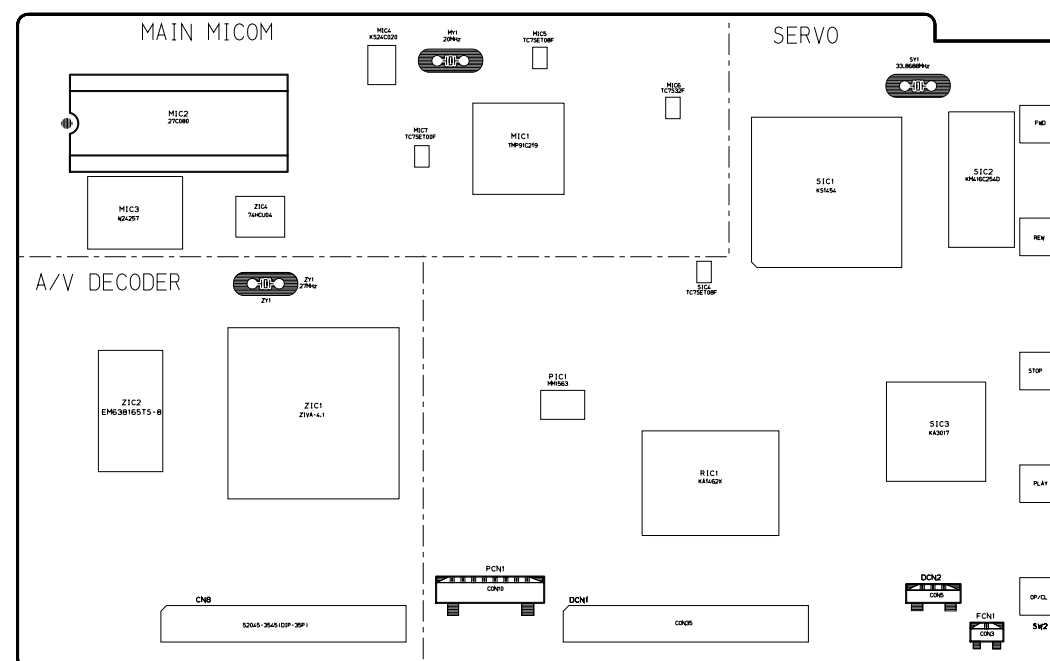


<Component Side>




### 11-2 Power Drive

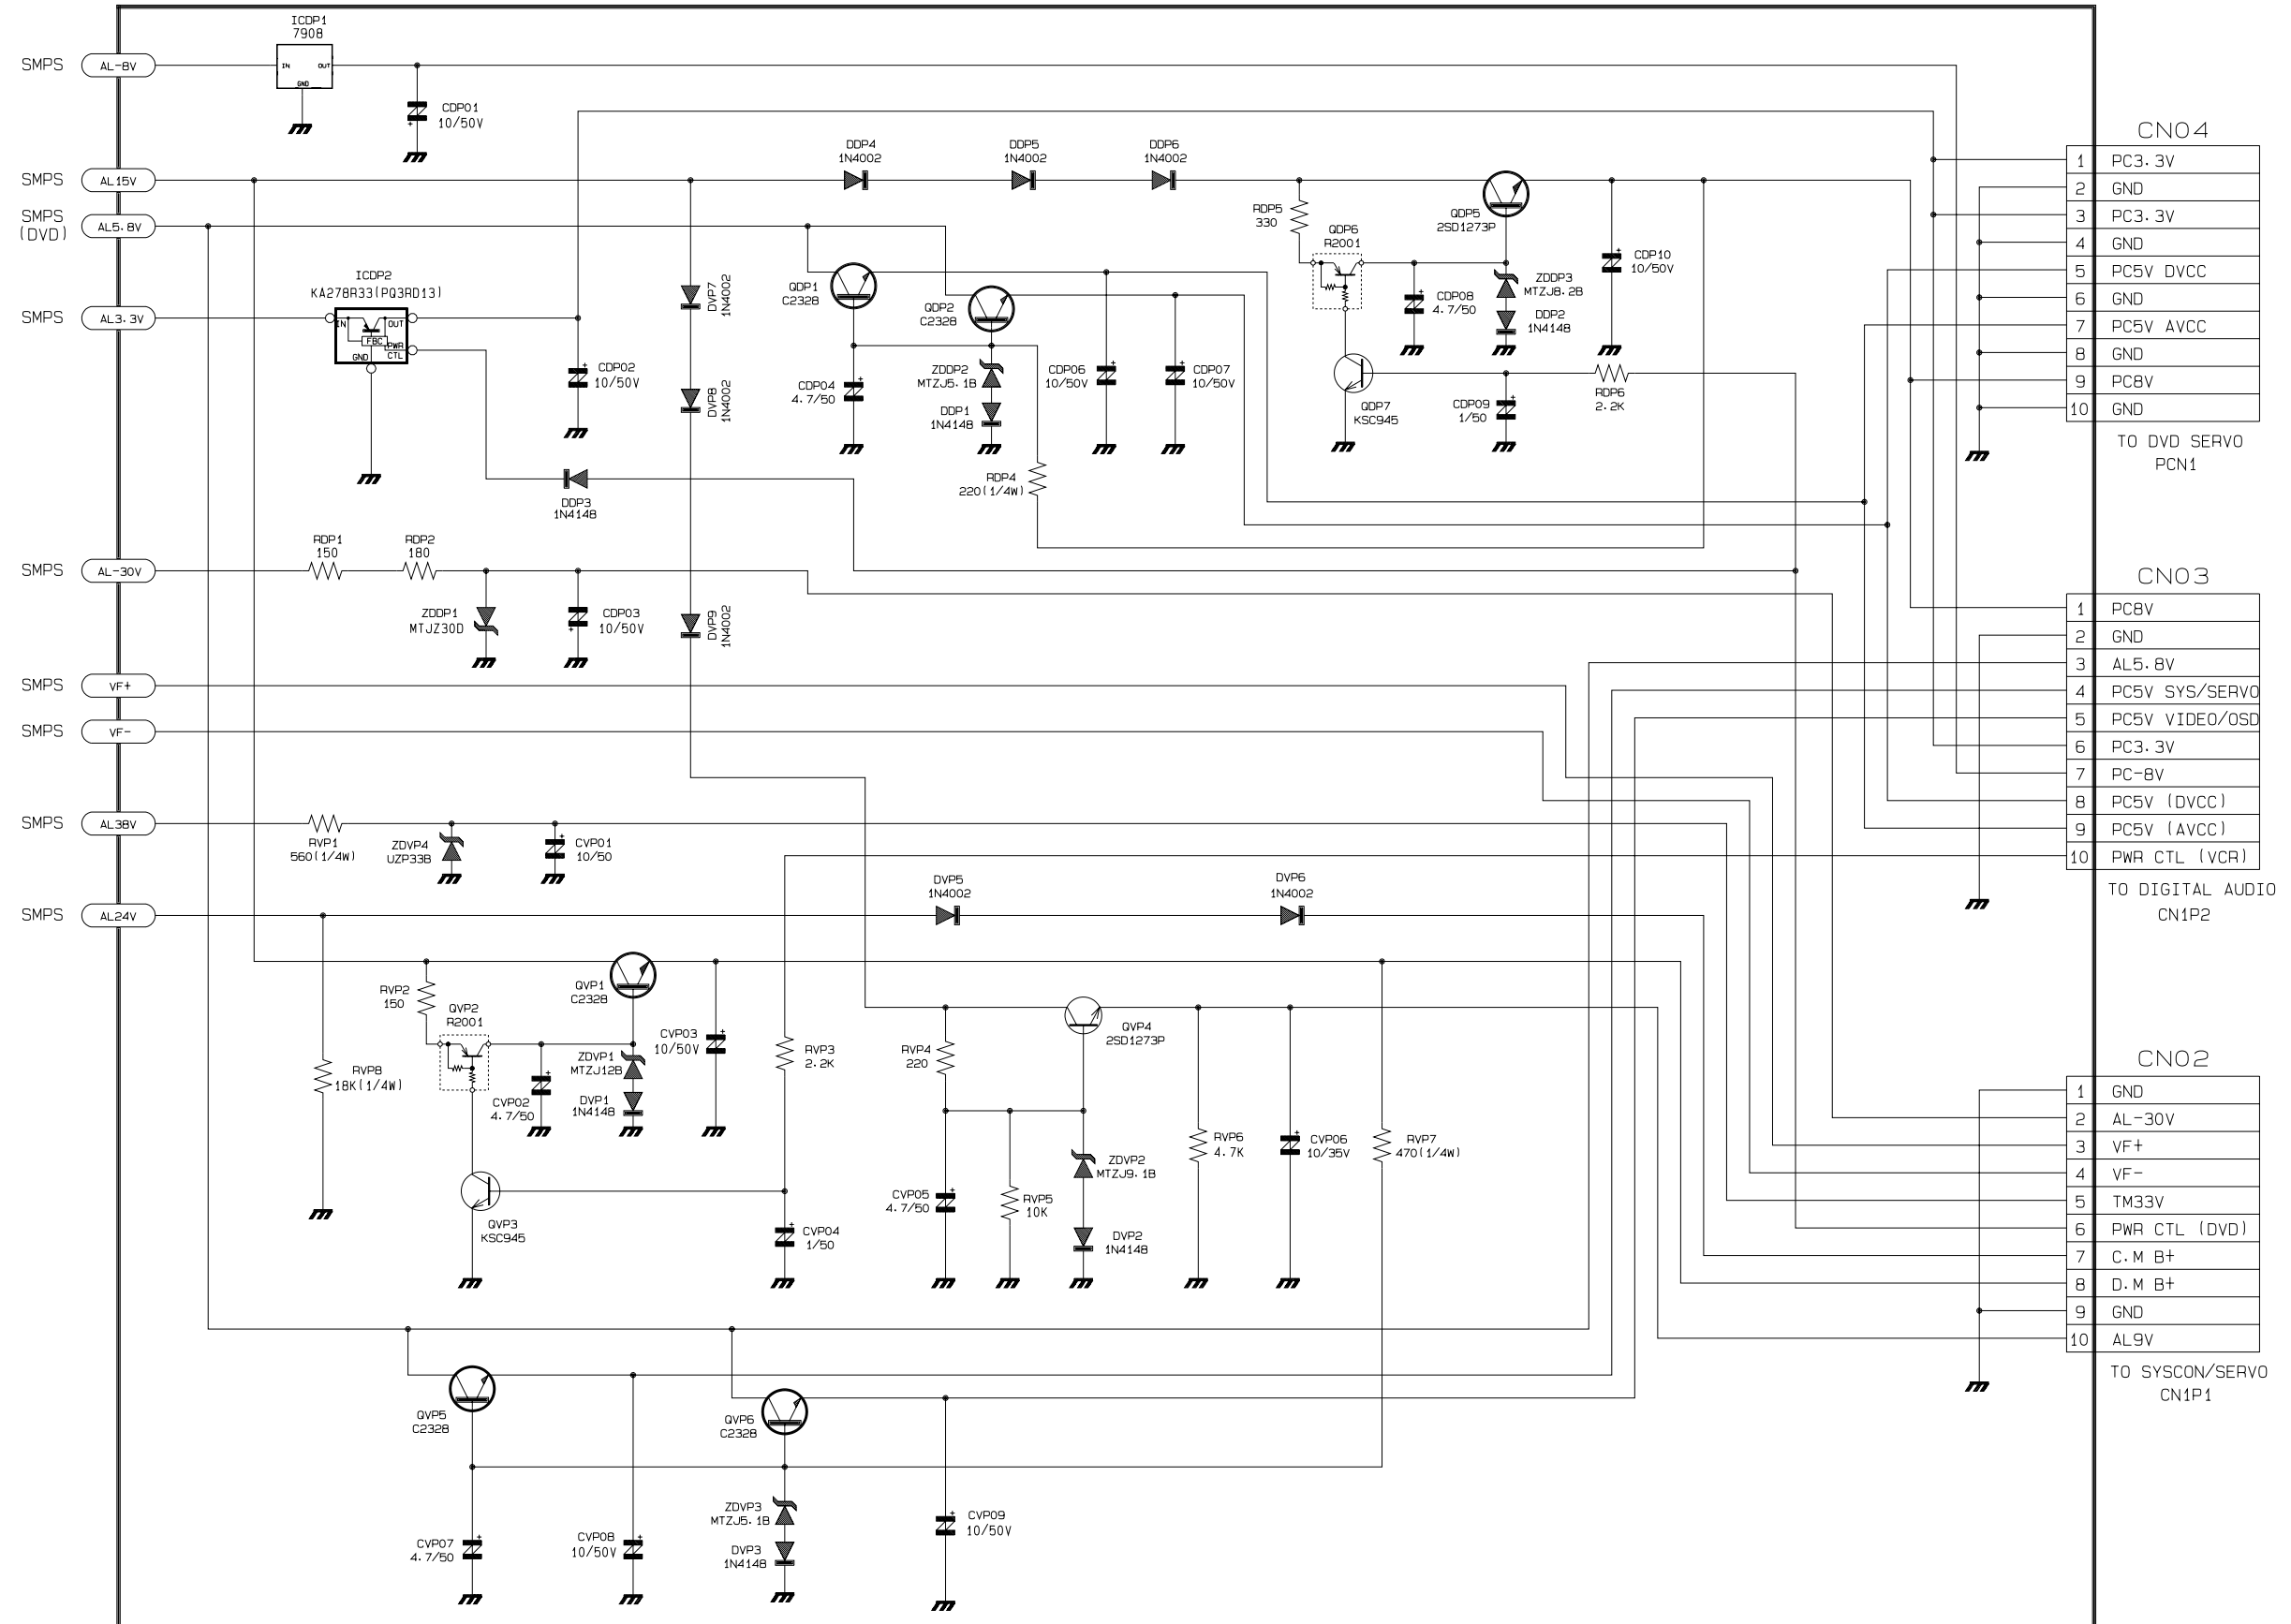

### 11-3 Function-Timer

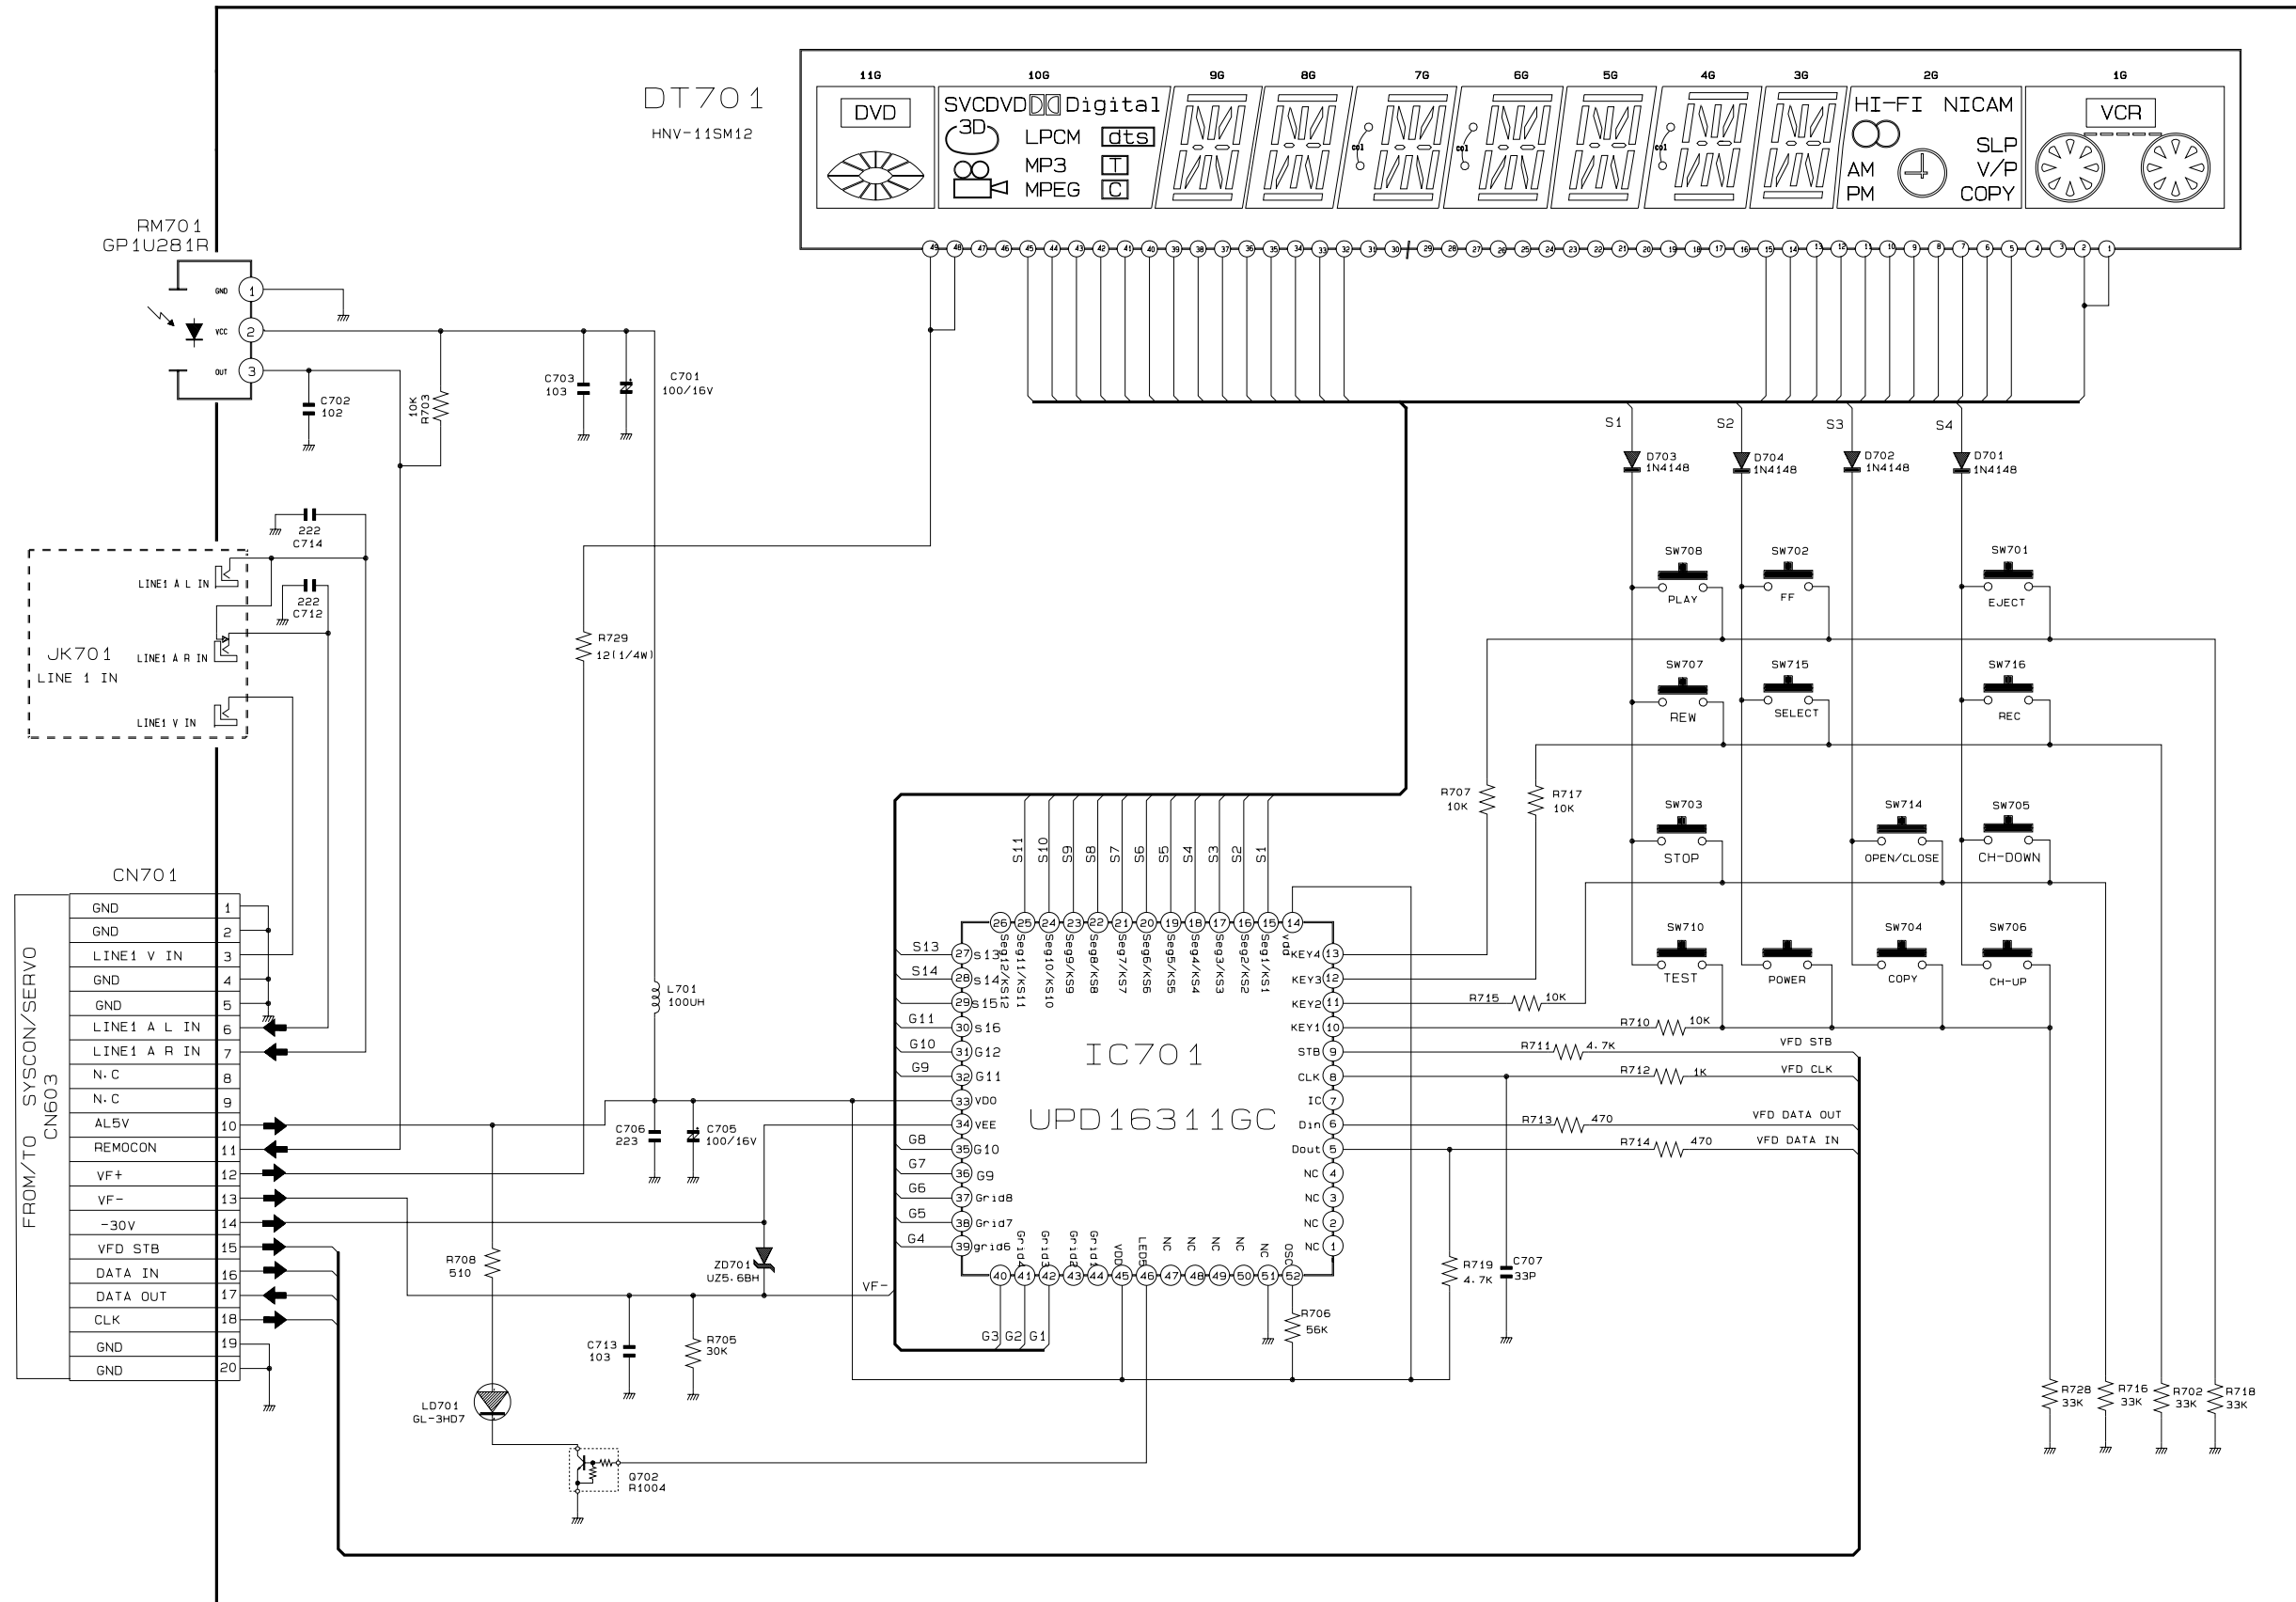


# 11-4 System Control/Servo

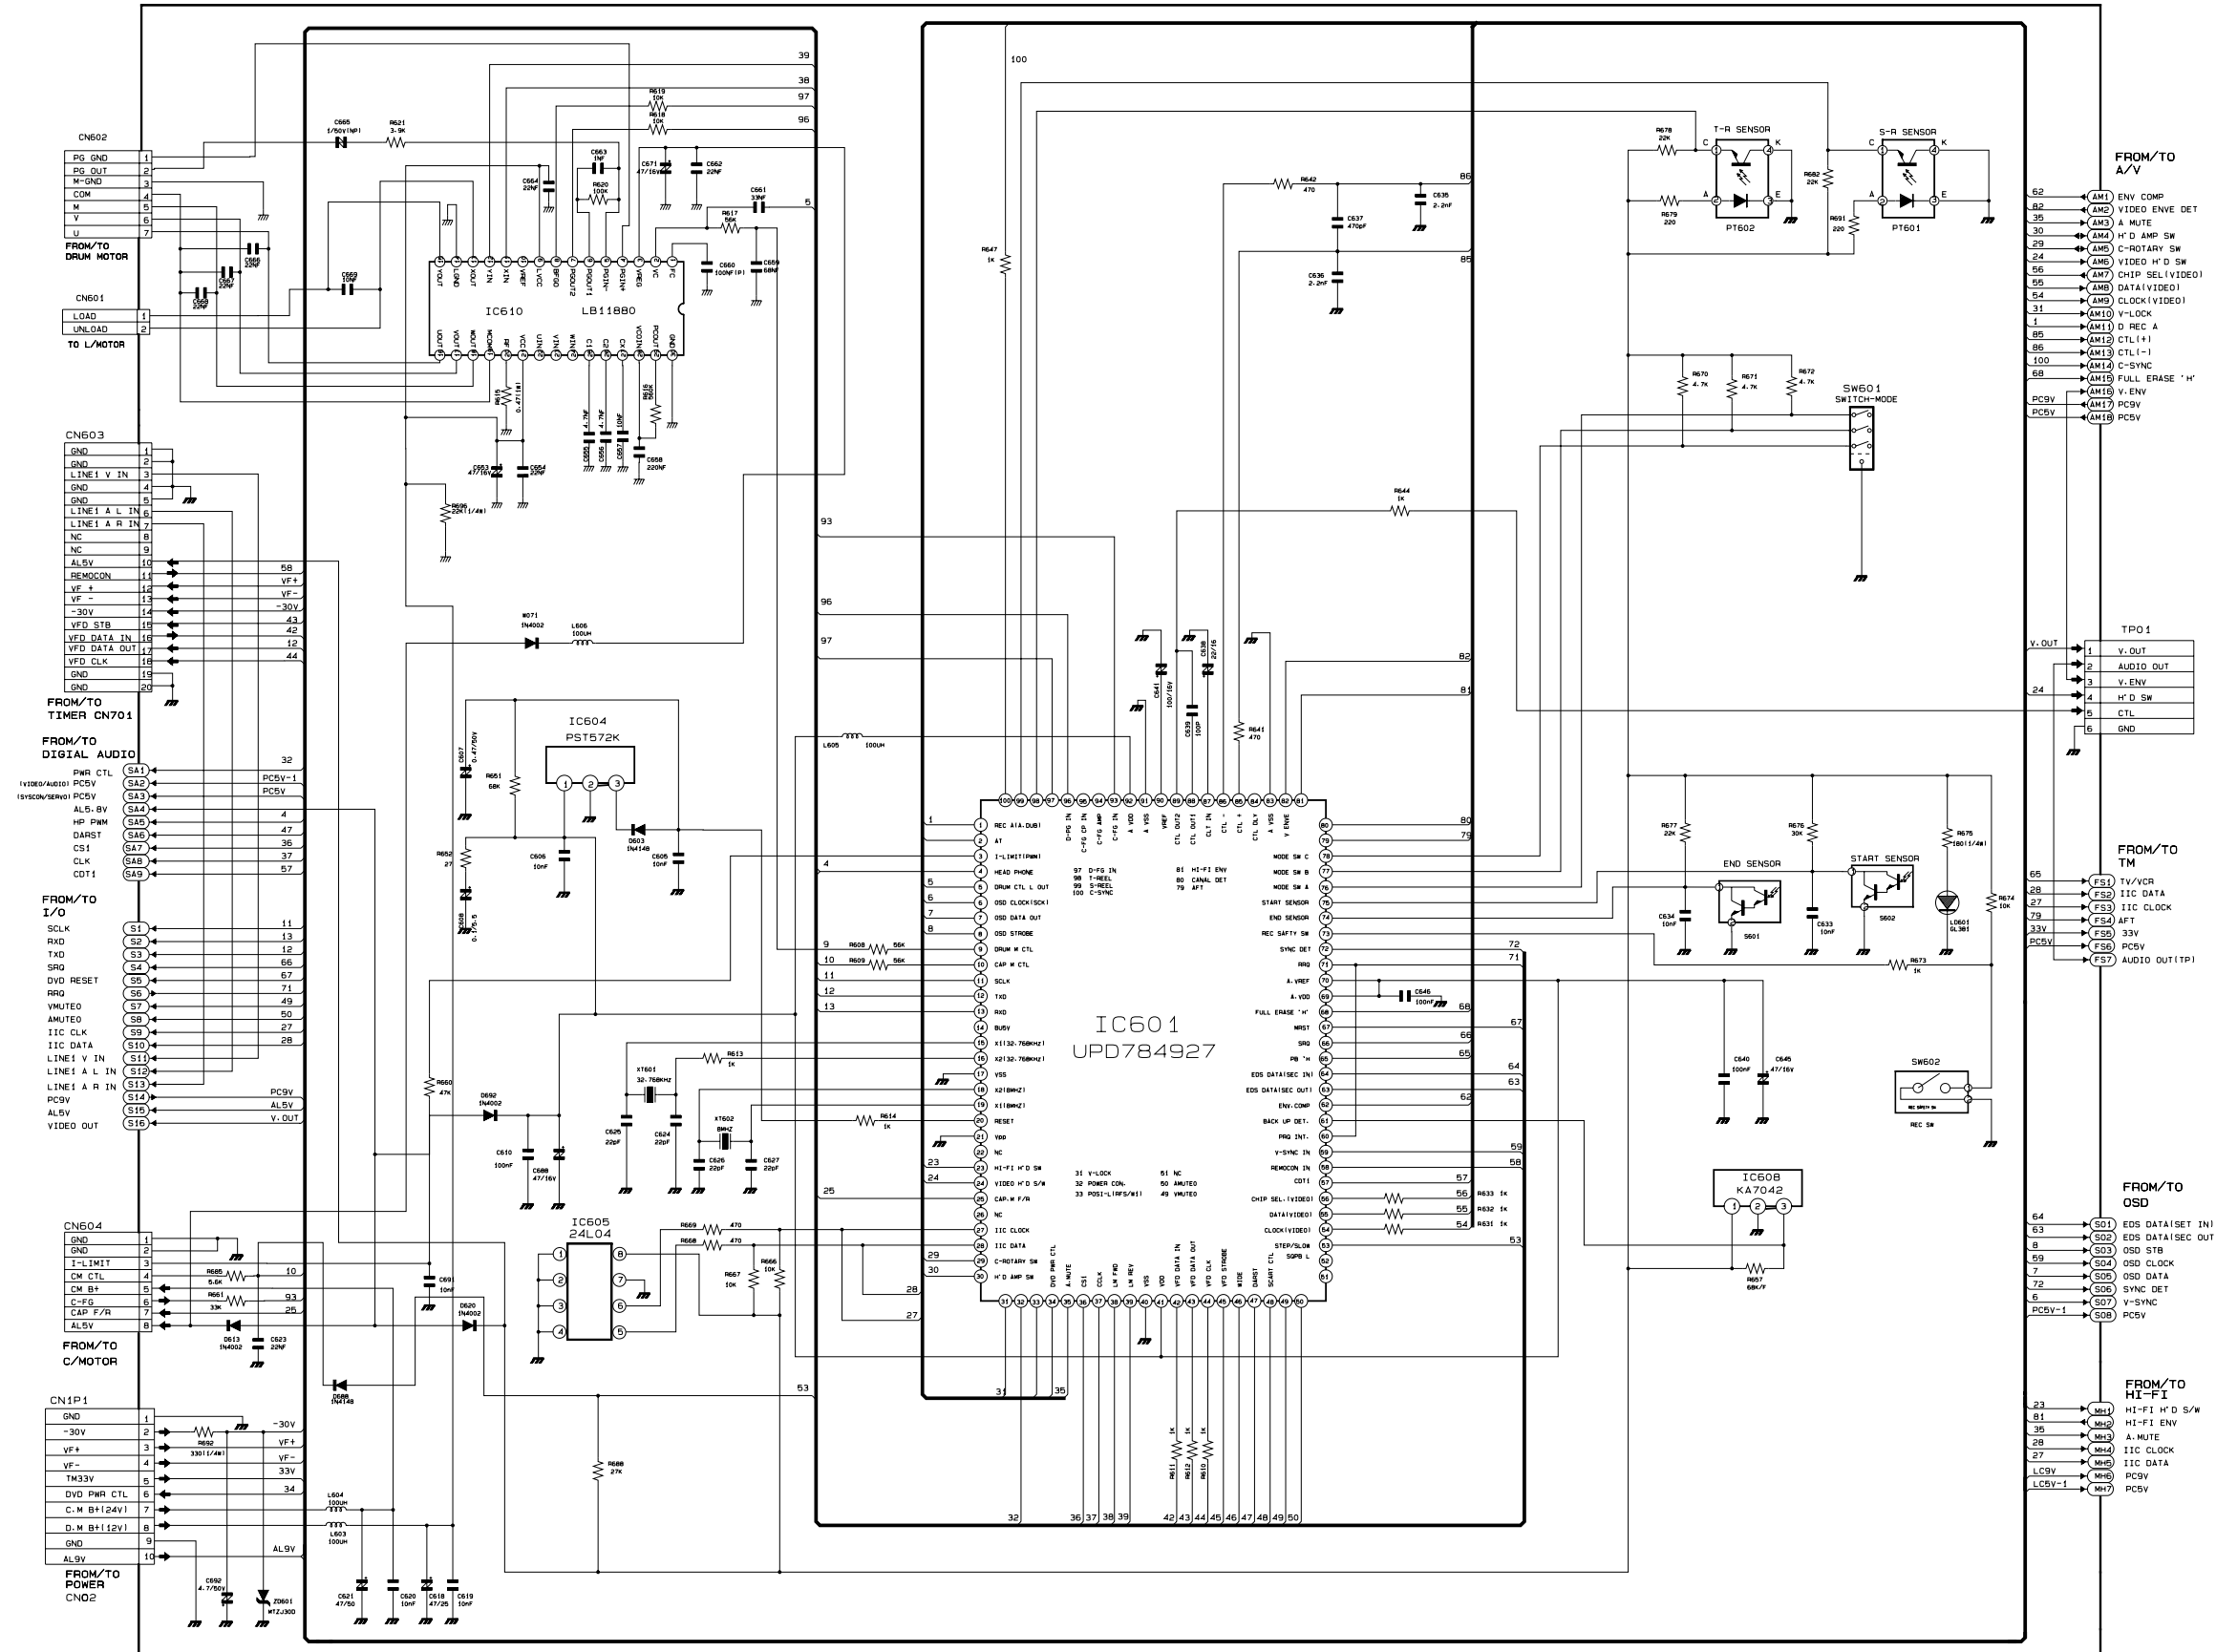







11-6 TM-Block

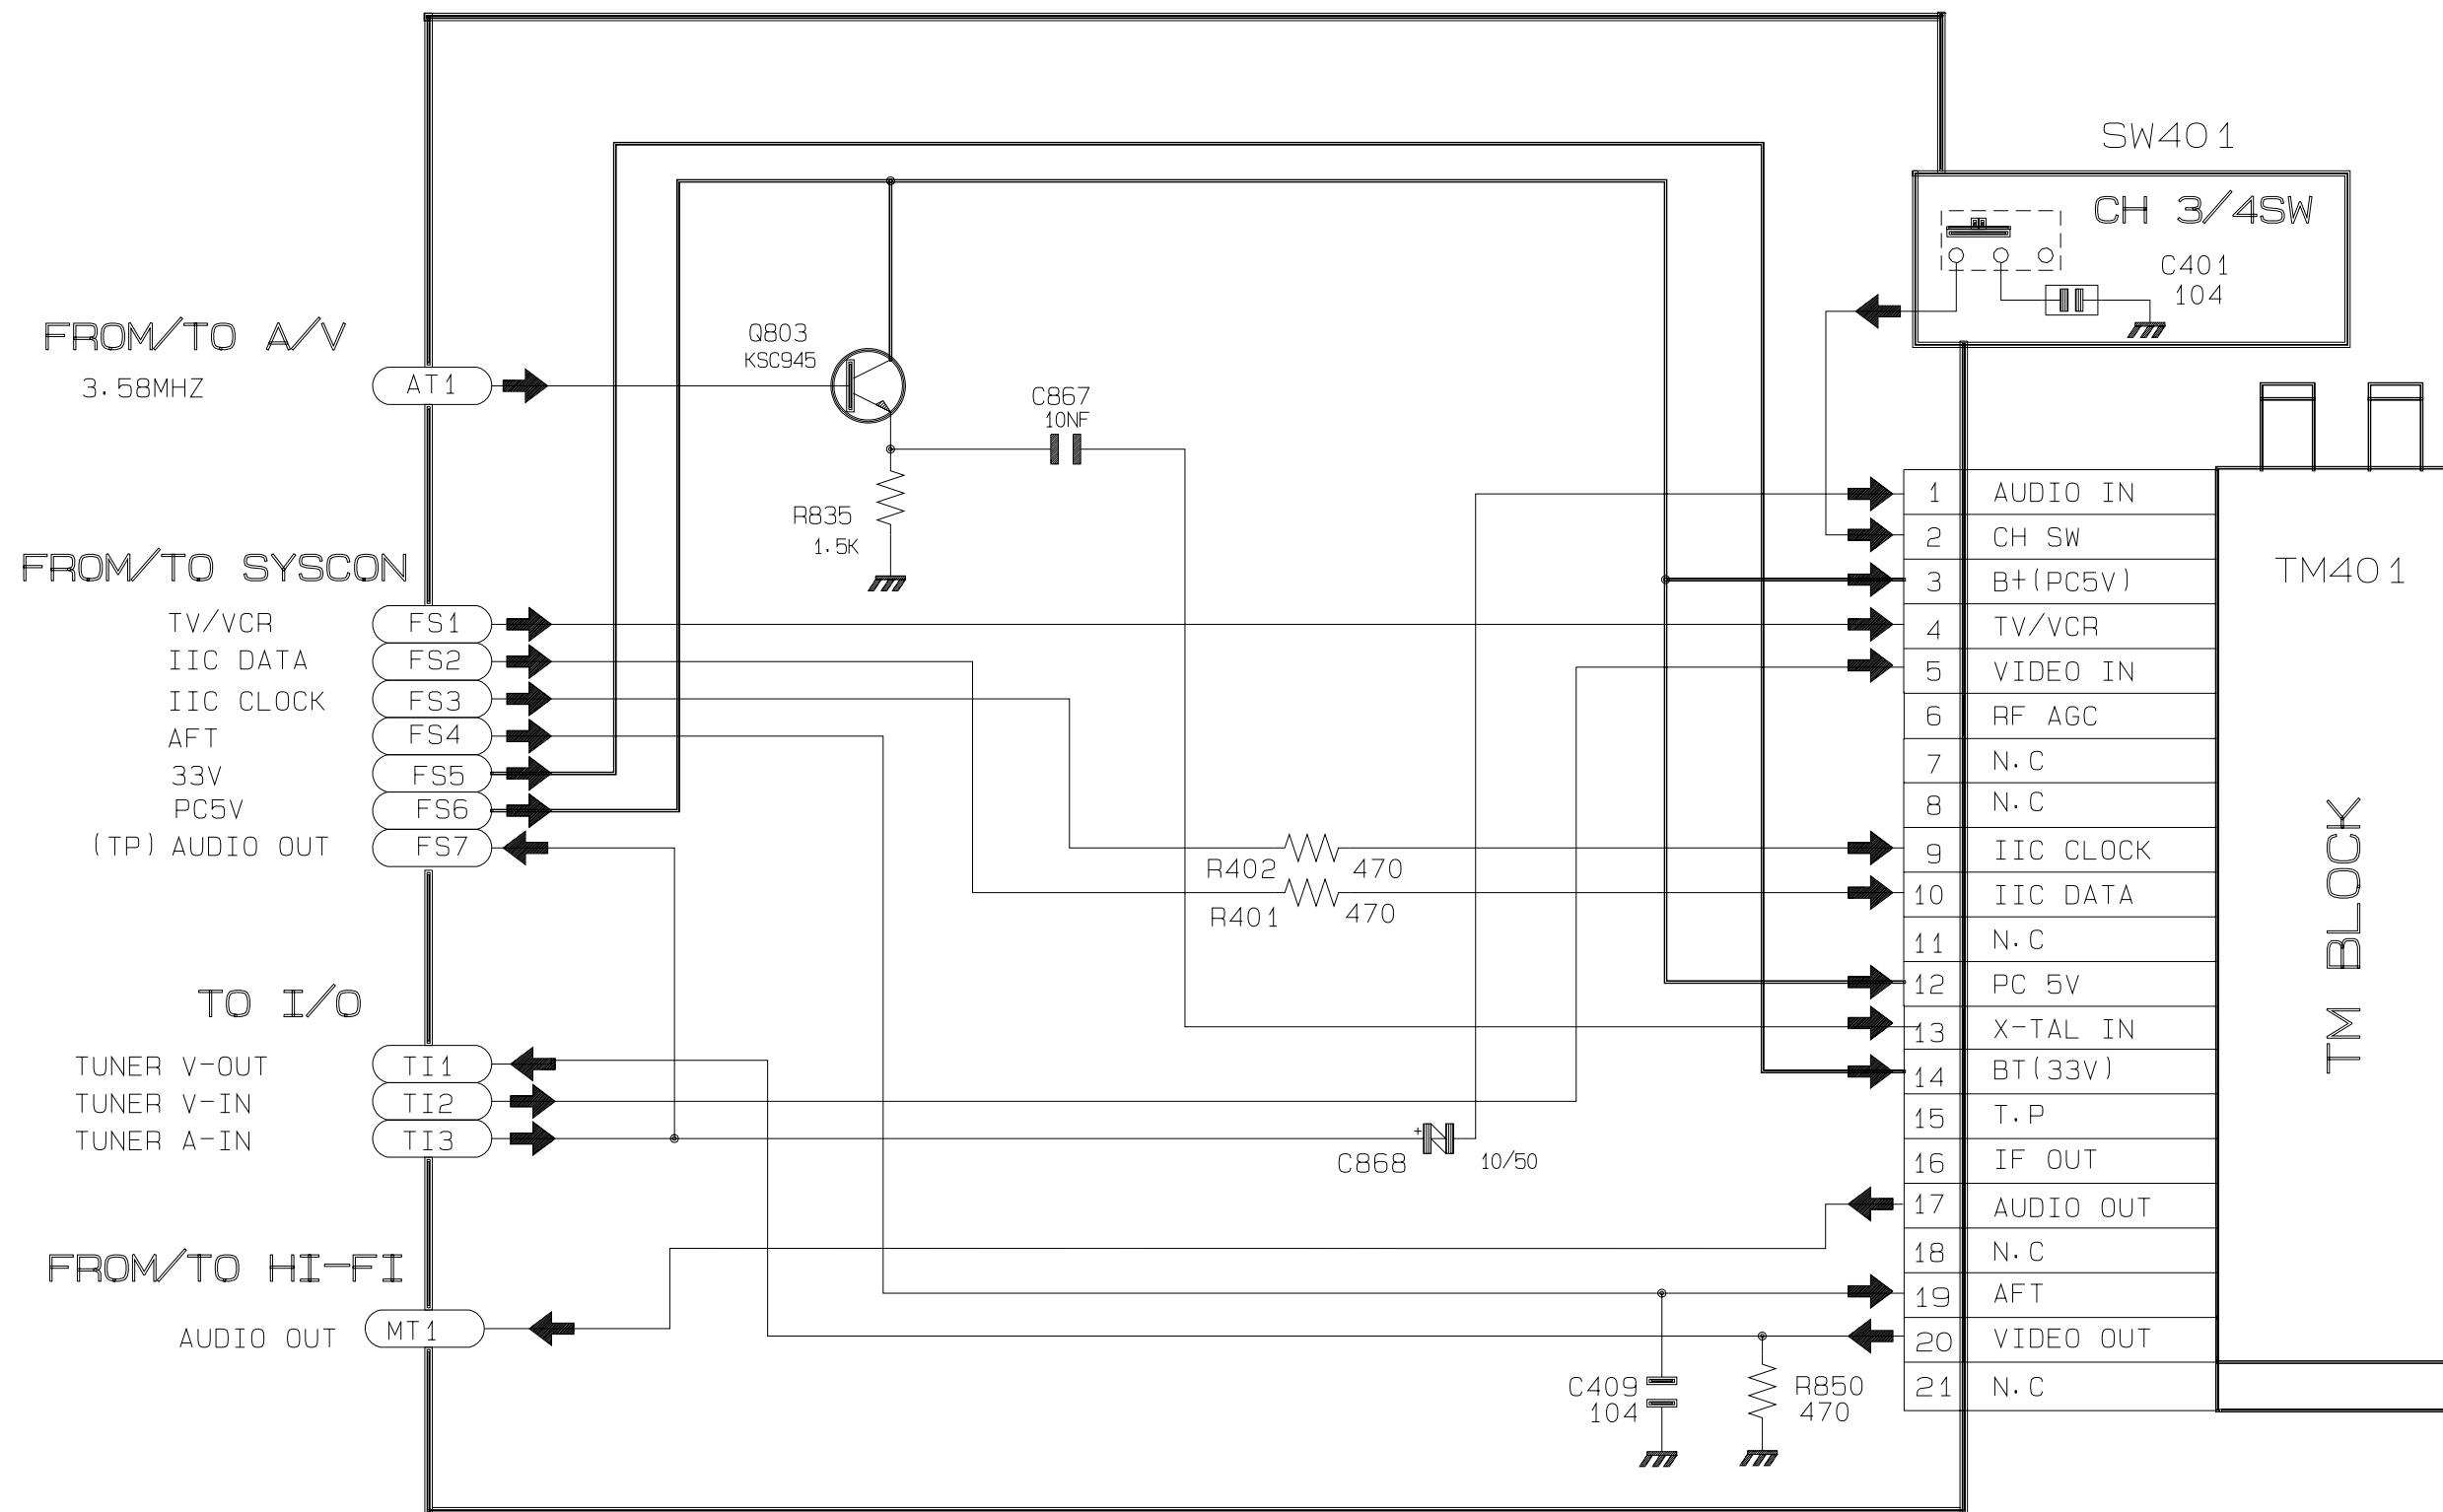


11-7 Digital Audio

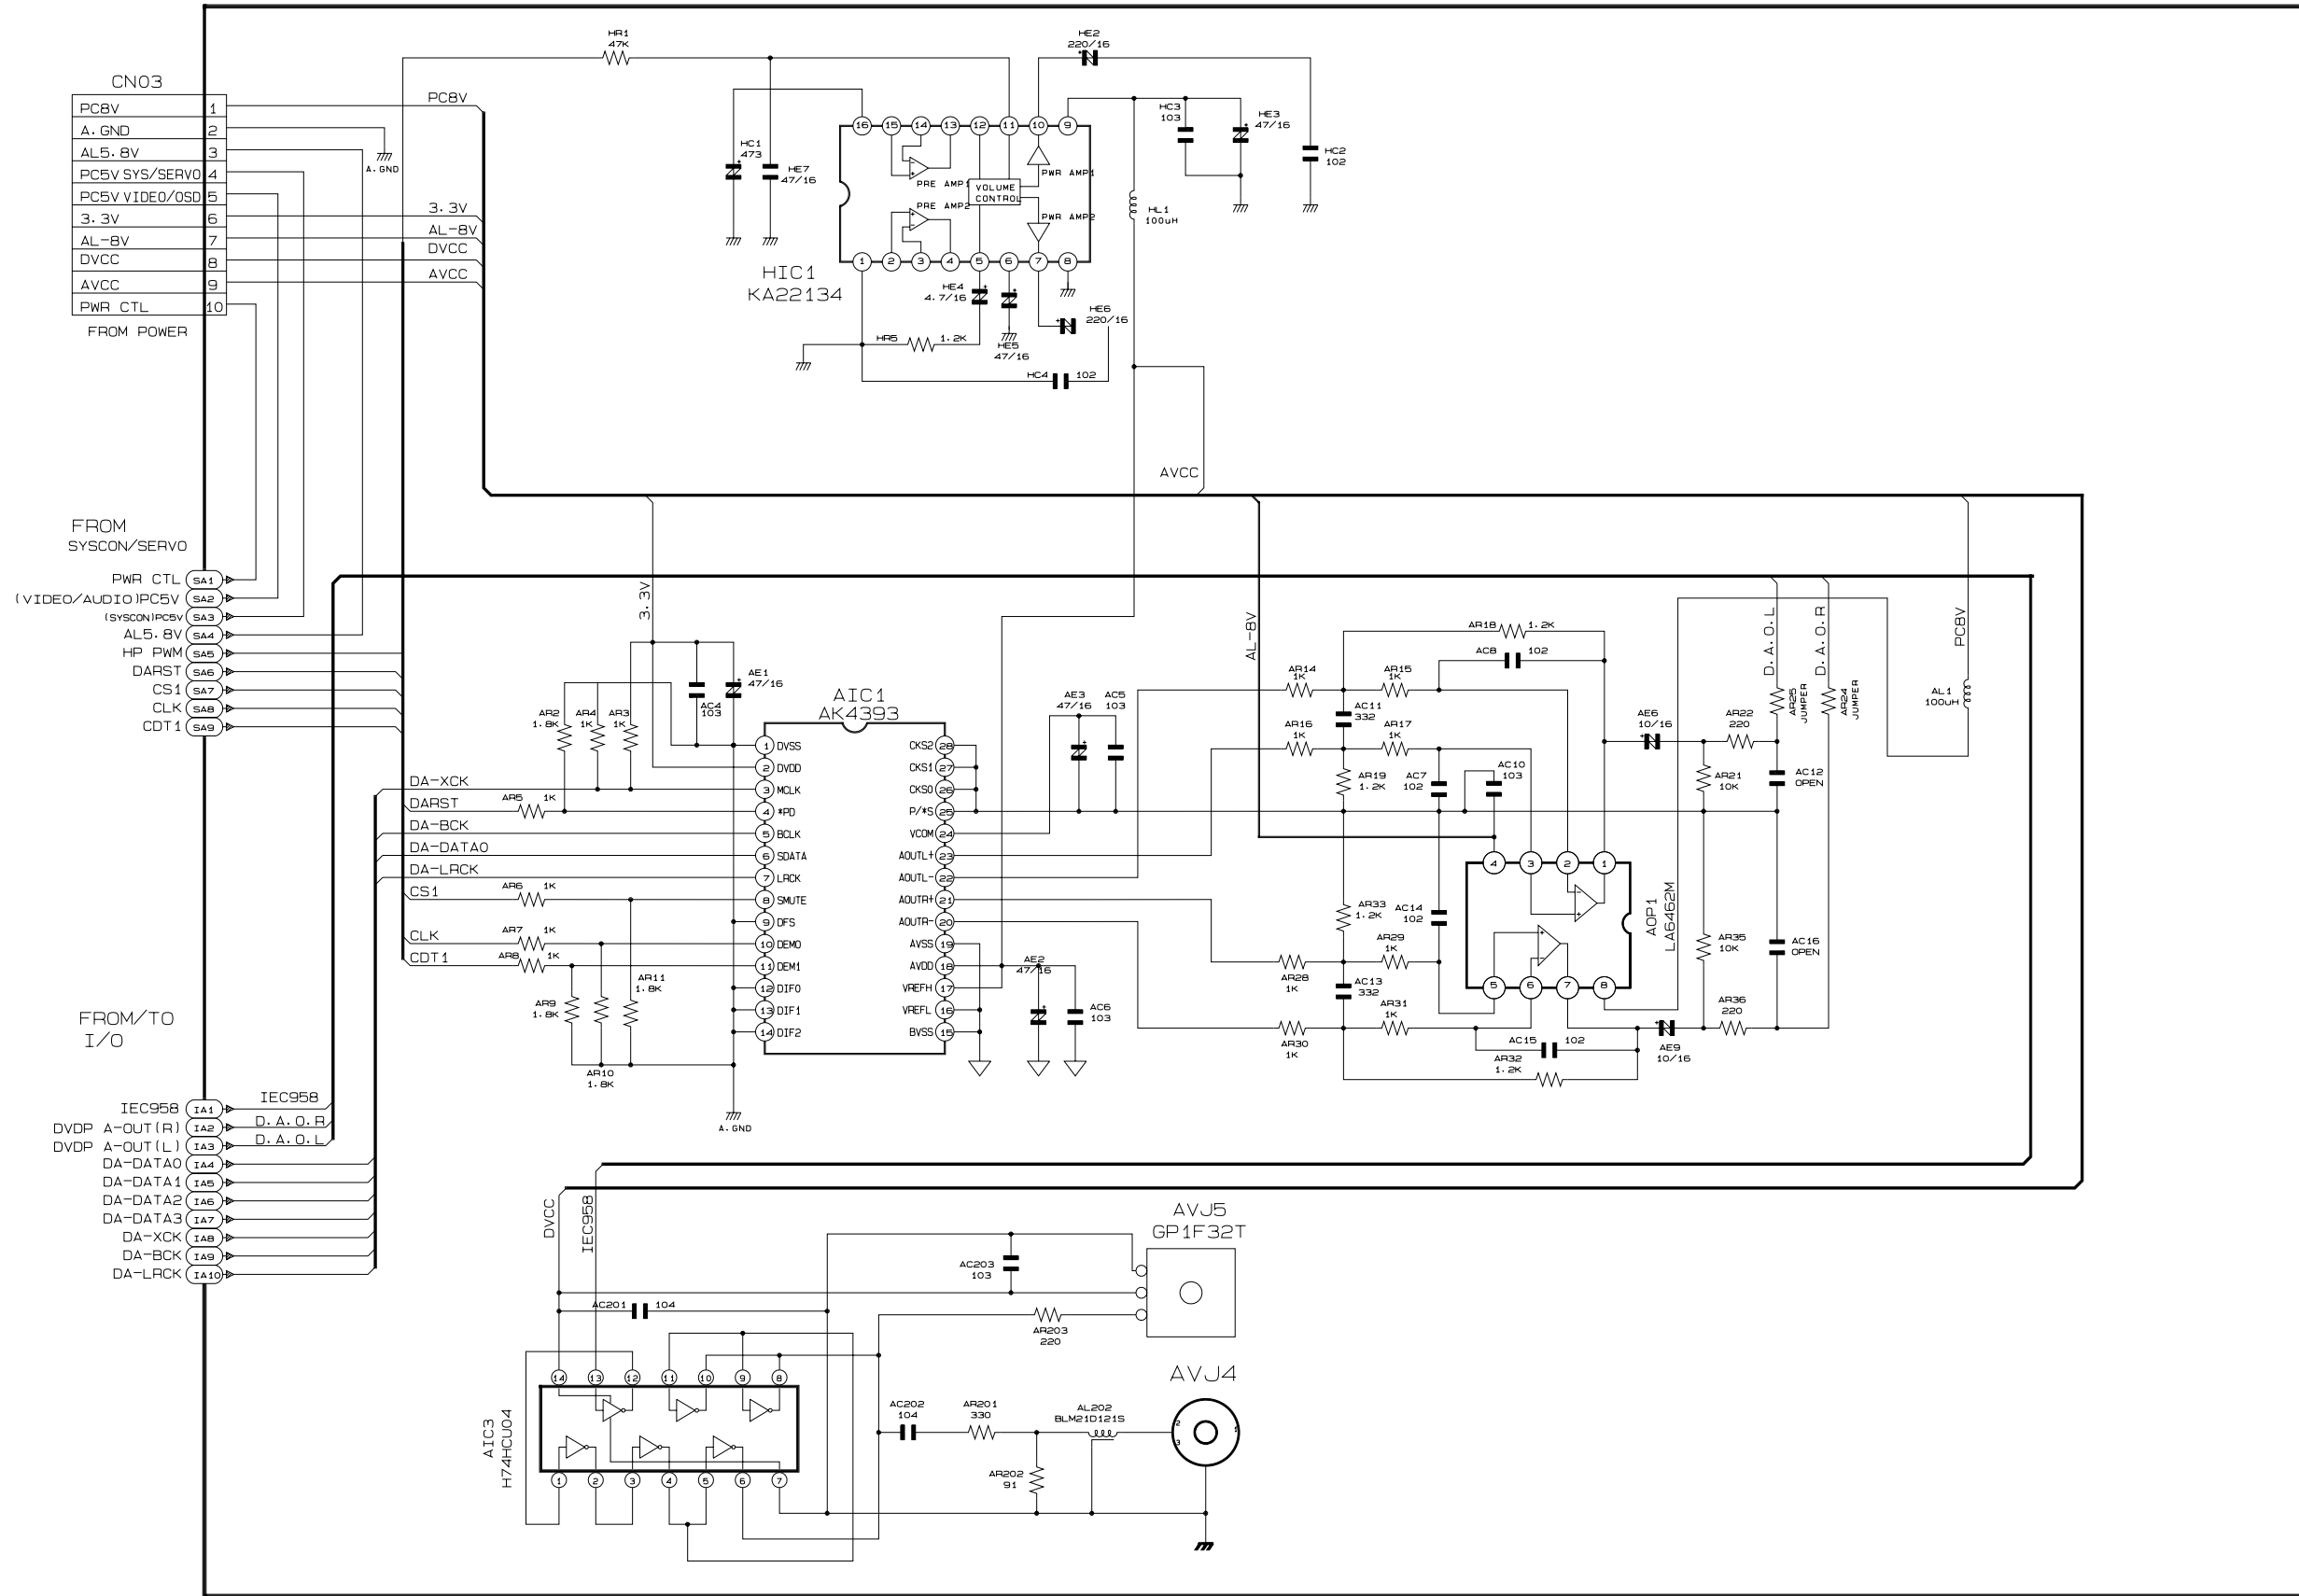


# 11-8 Hi-Fi

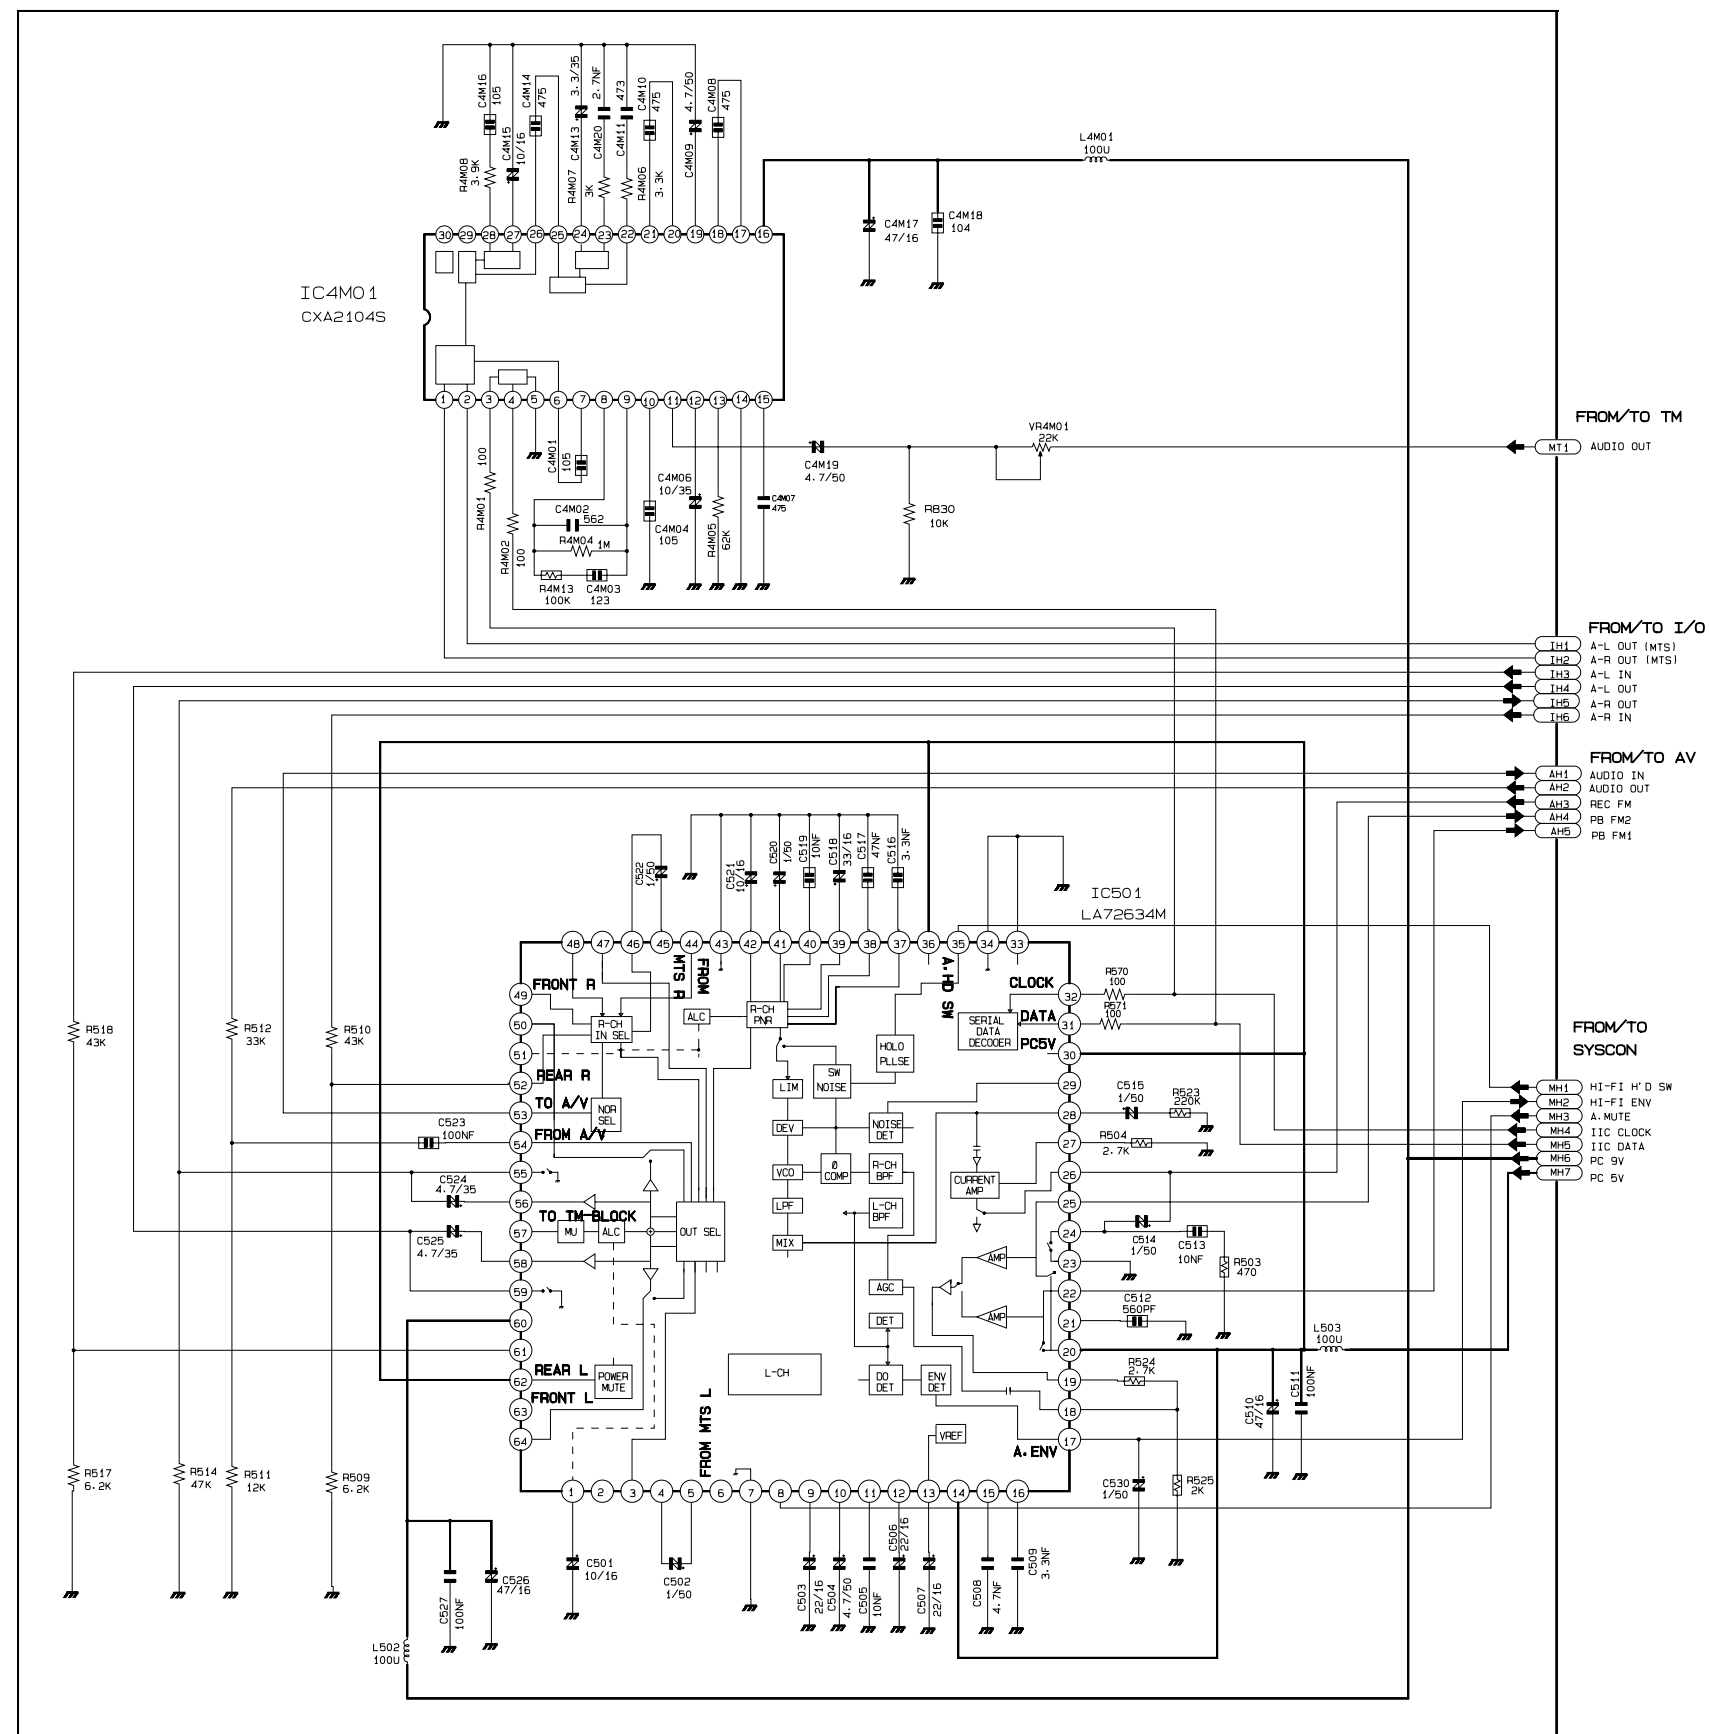


11-9 OSD

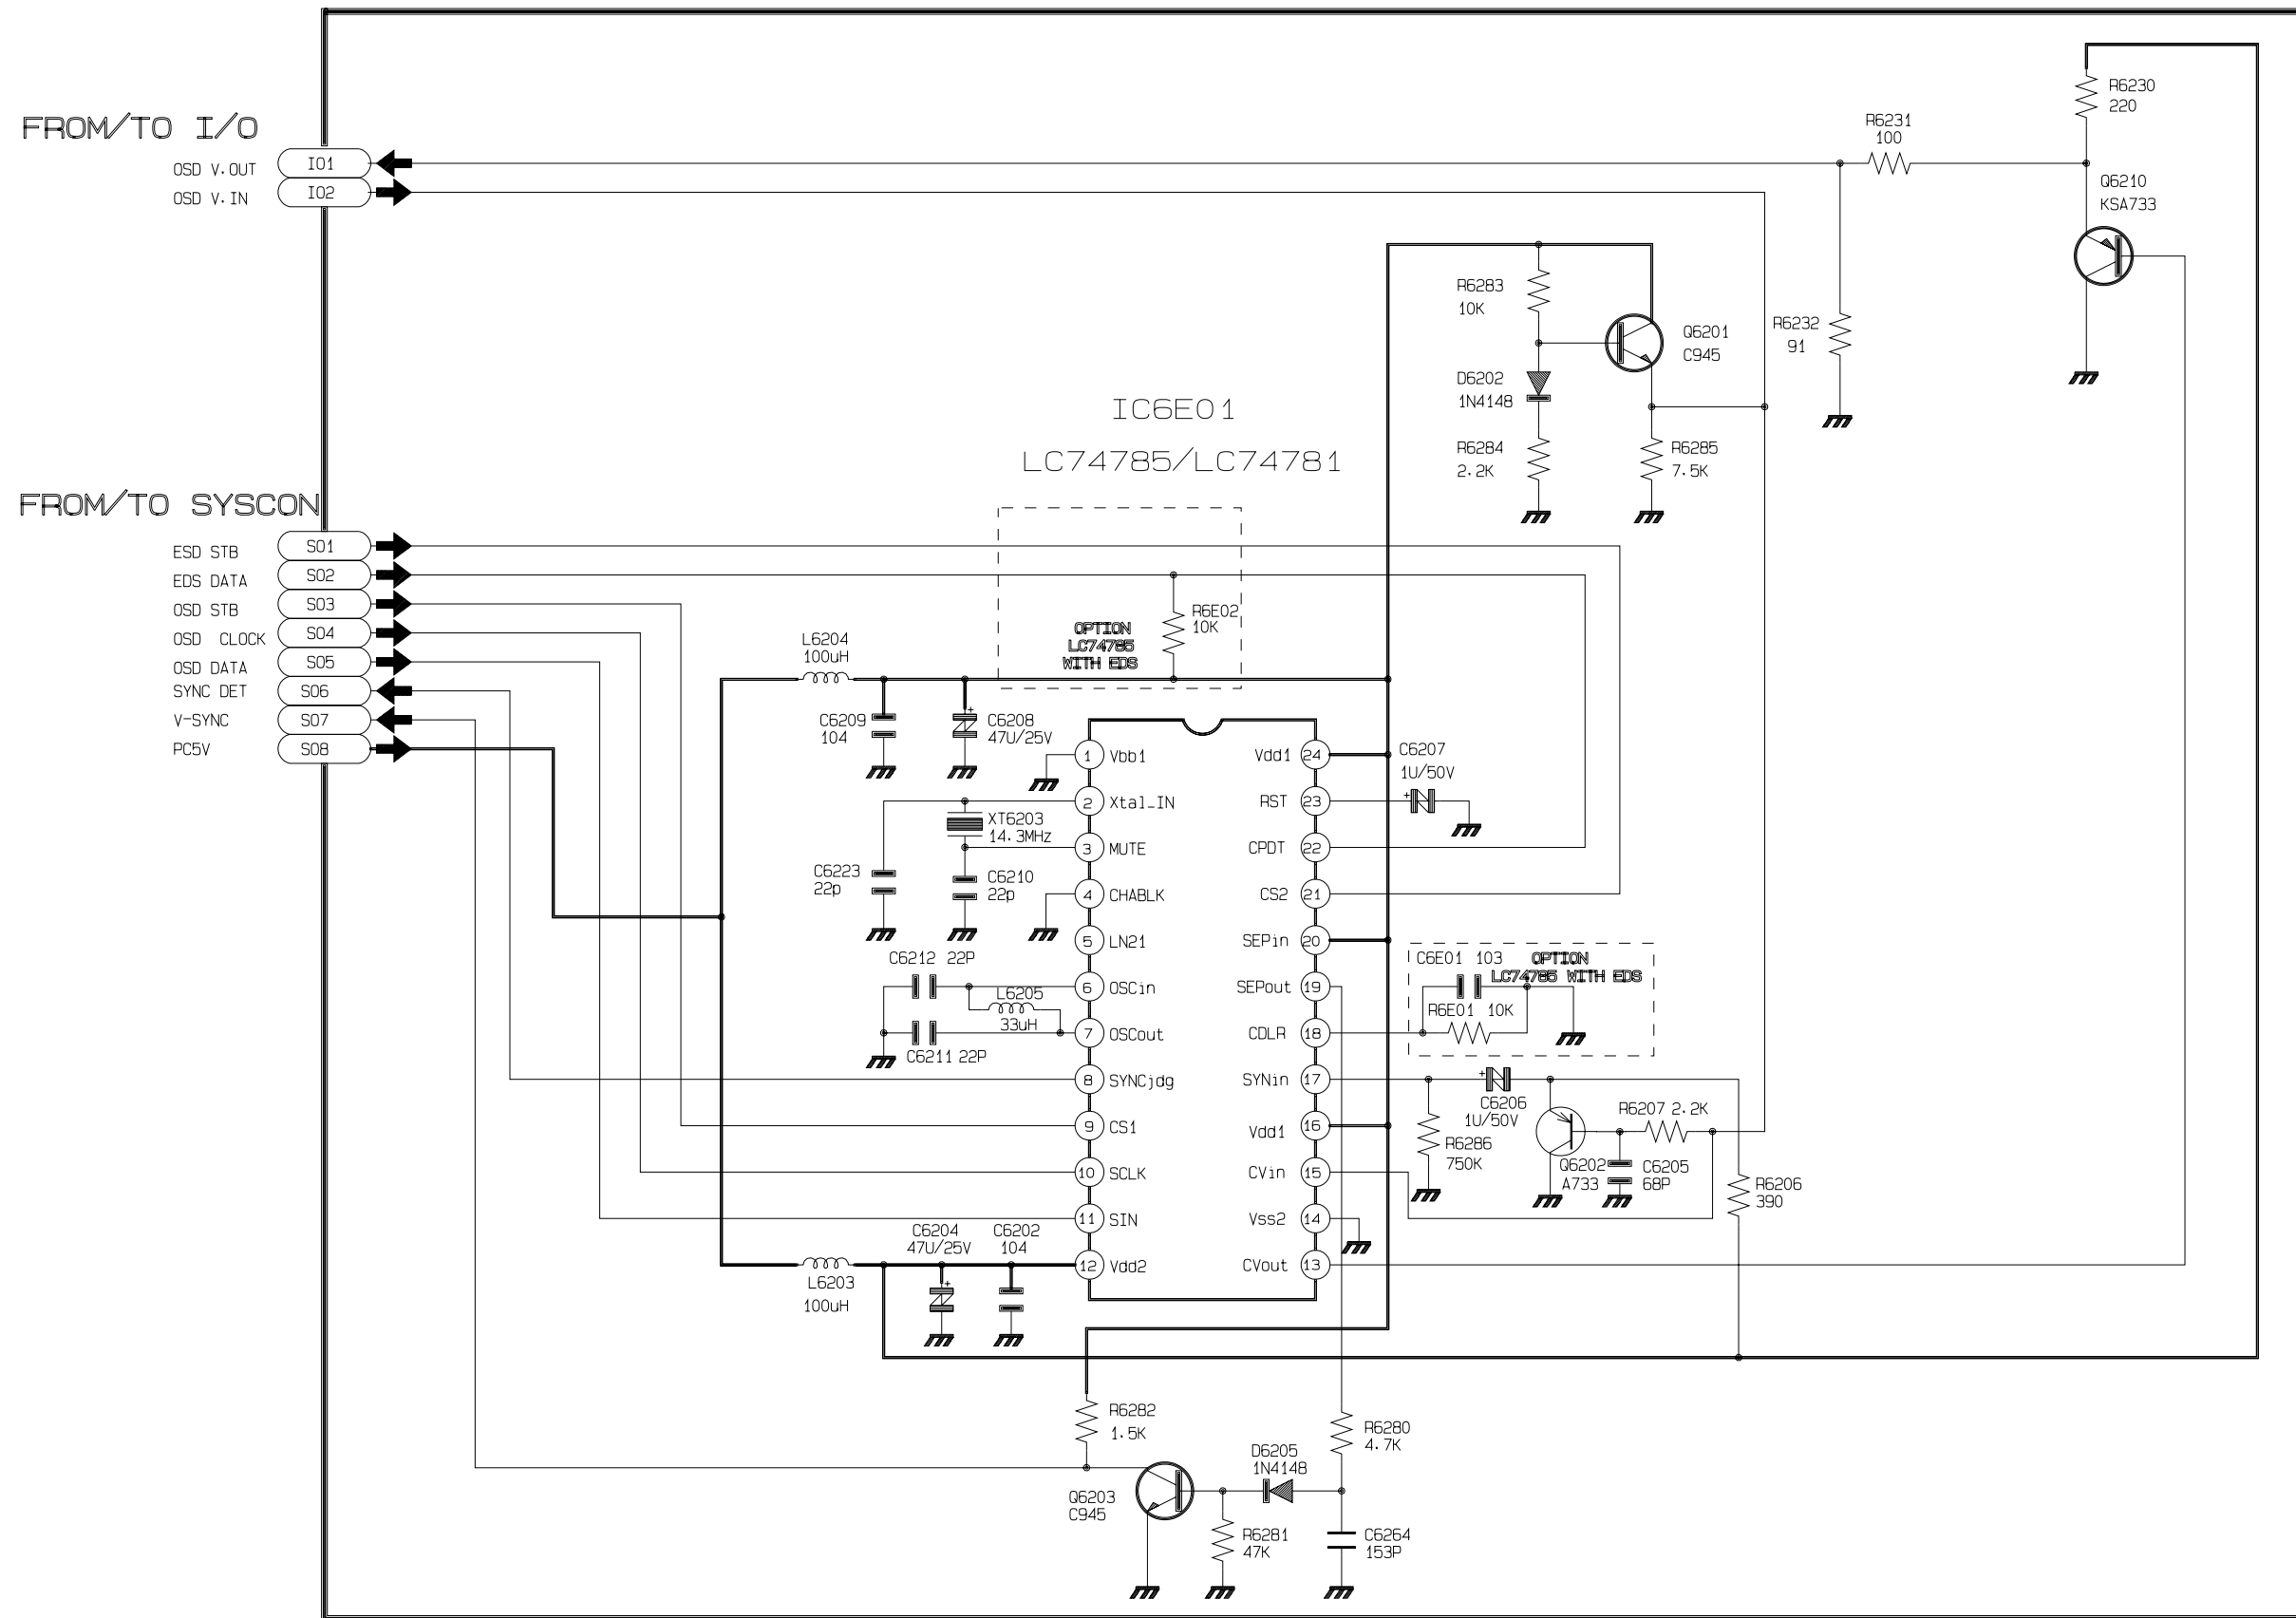

# 11-10 Input-Output

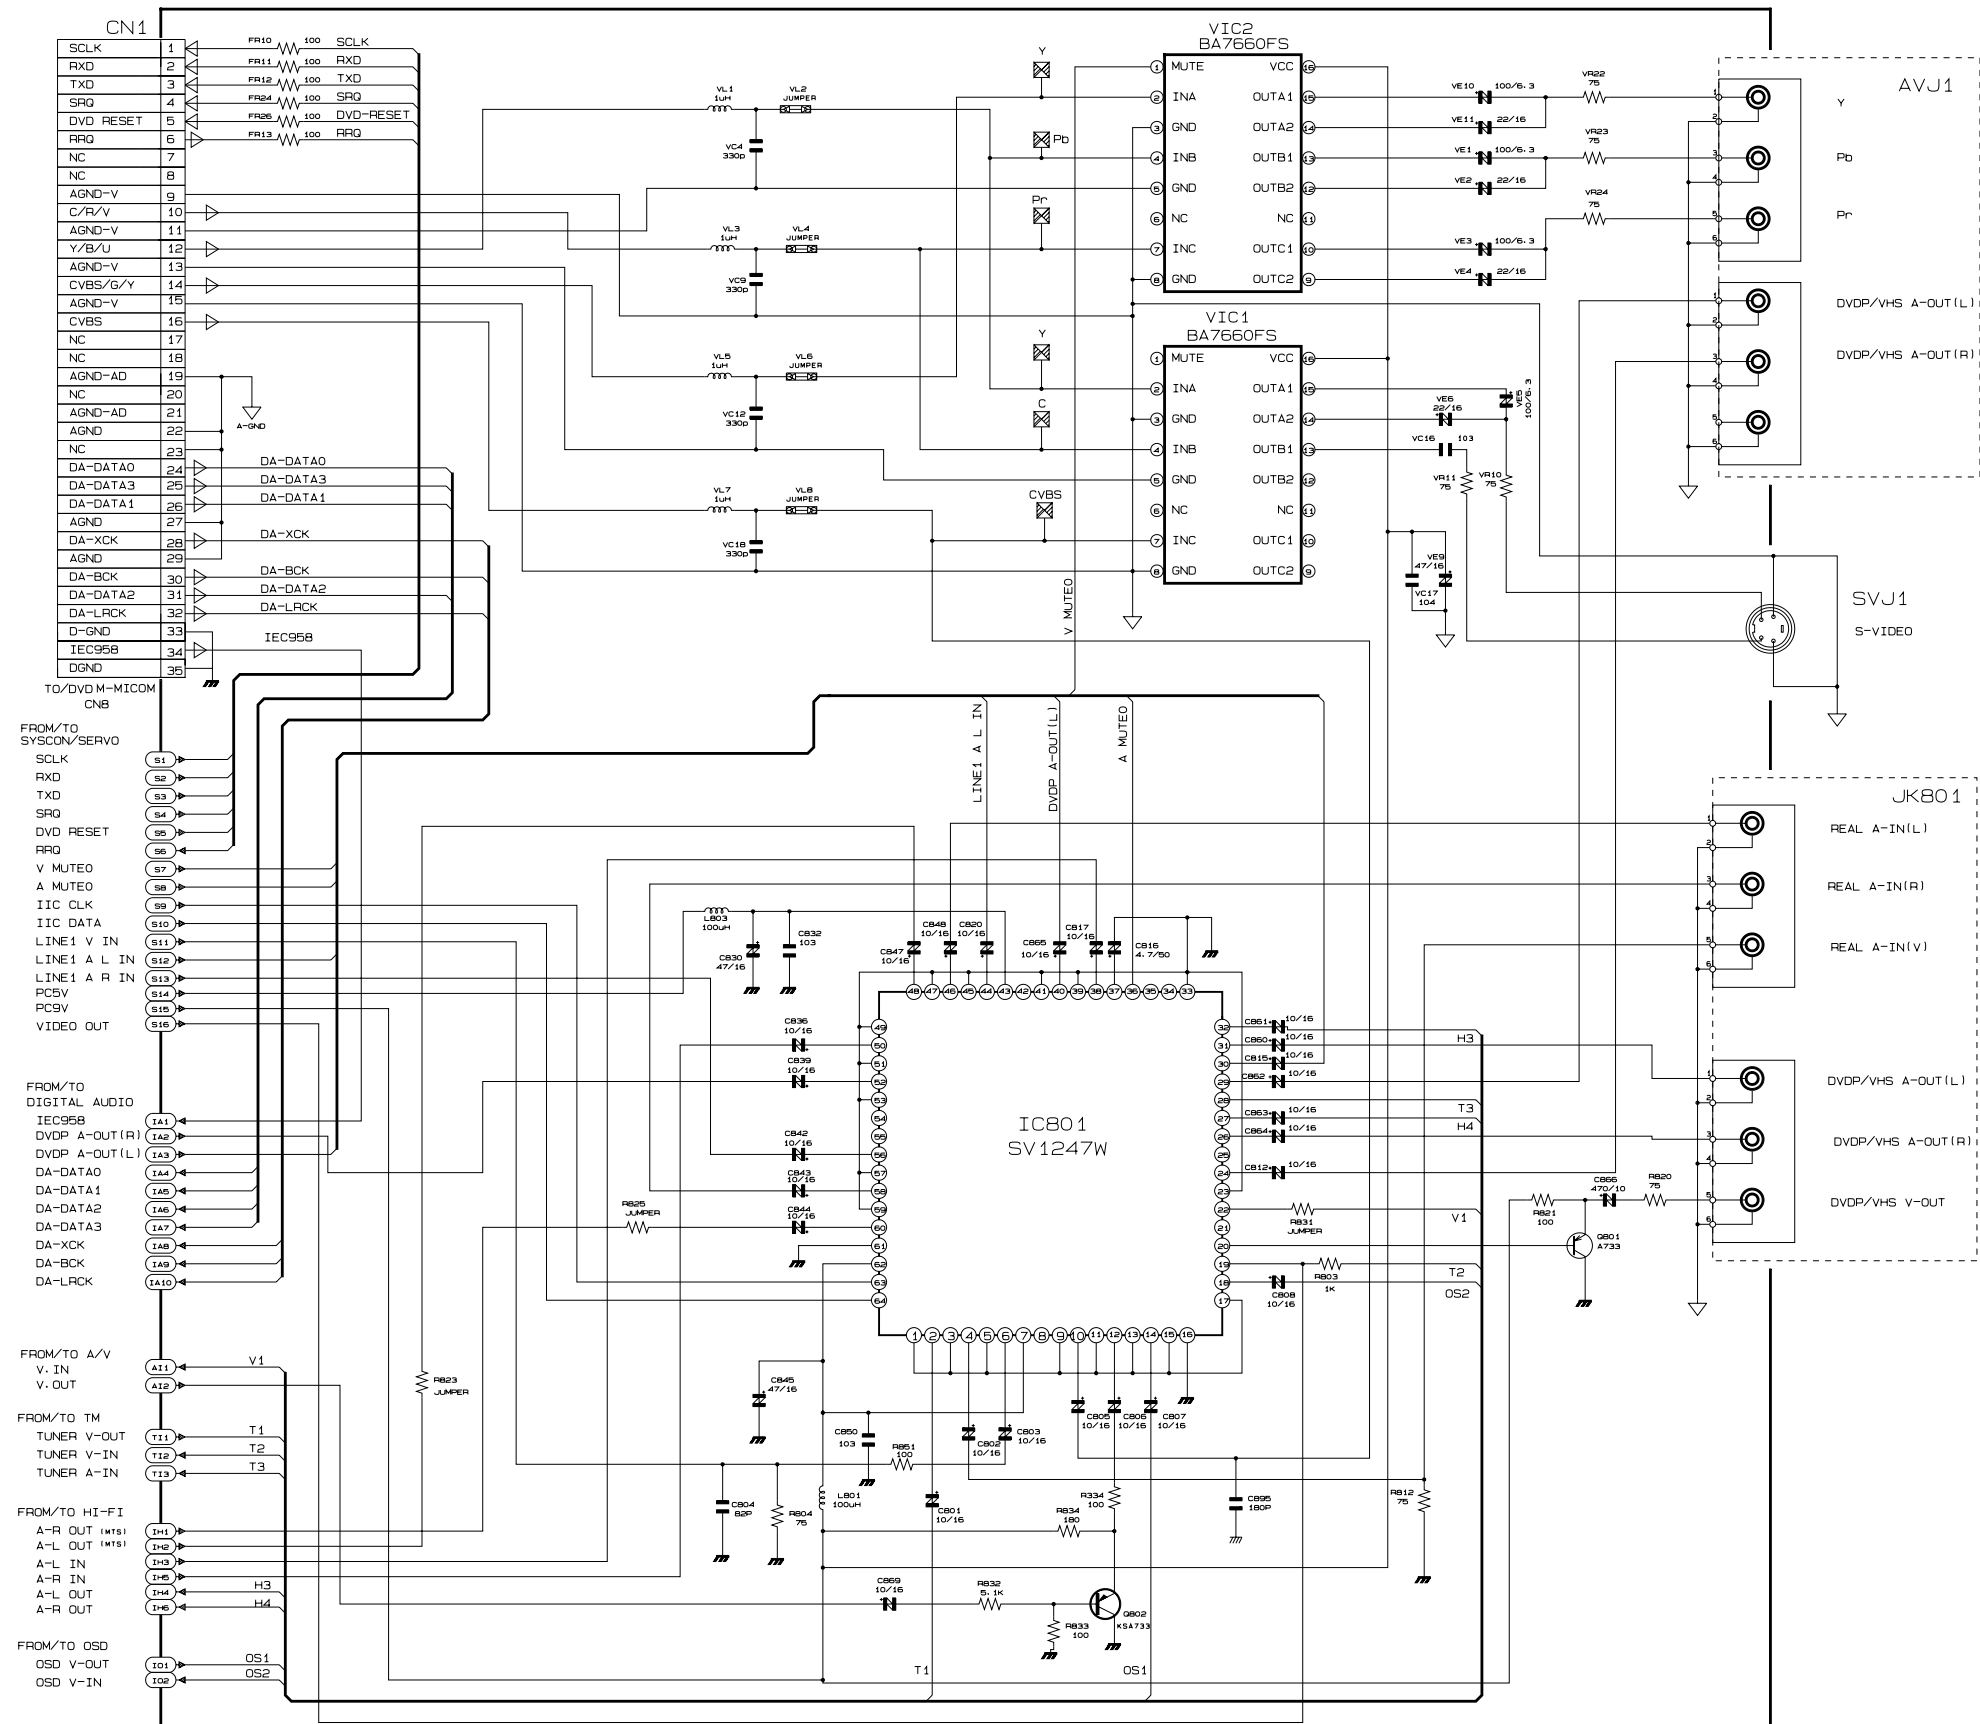


# 11-11 DVD Main-Micom/AV Decoder

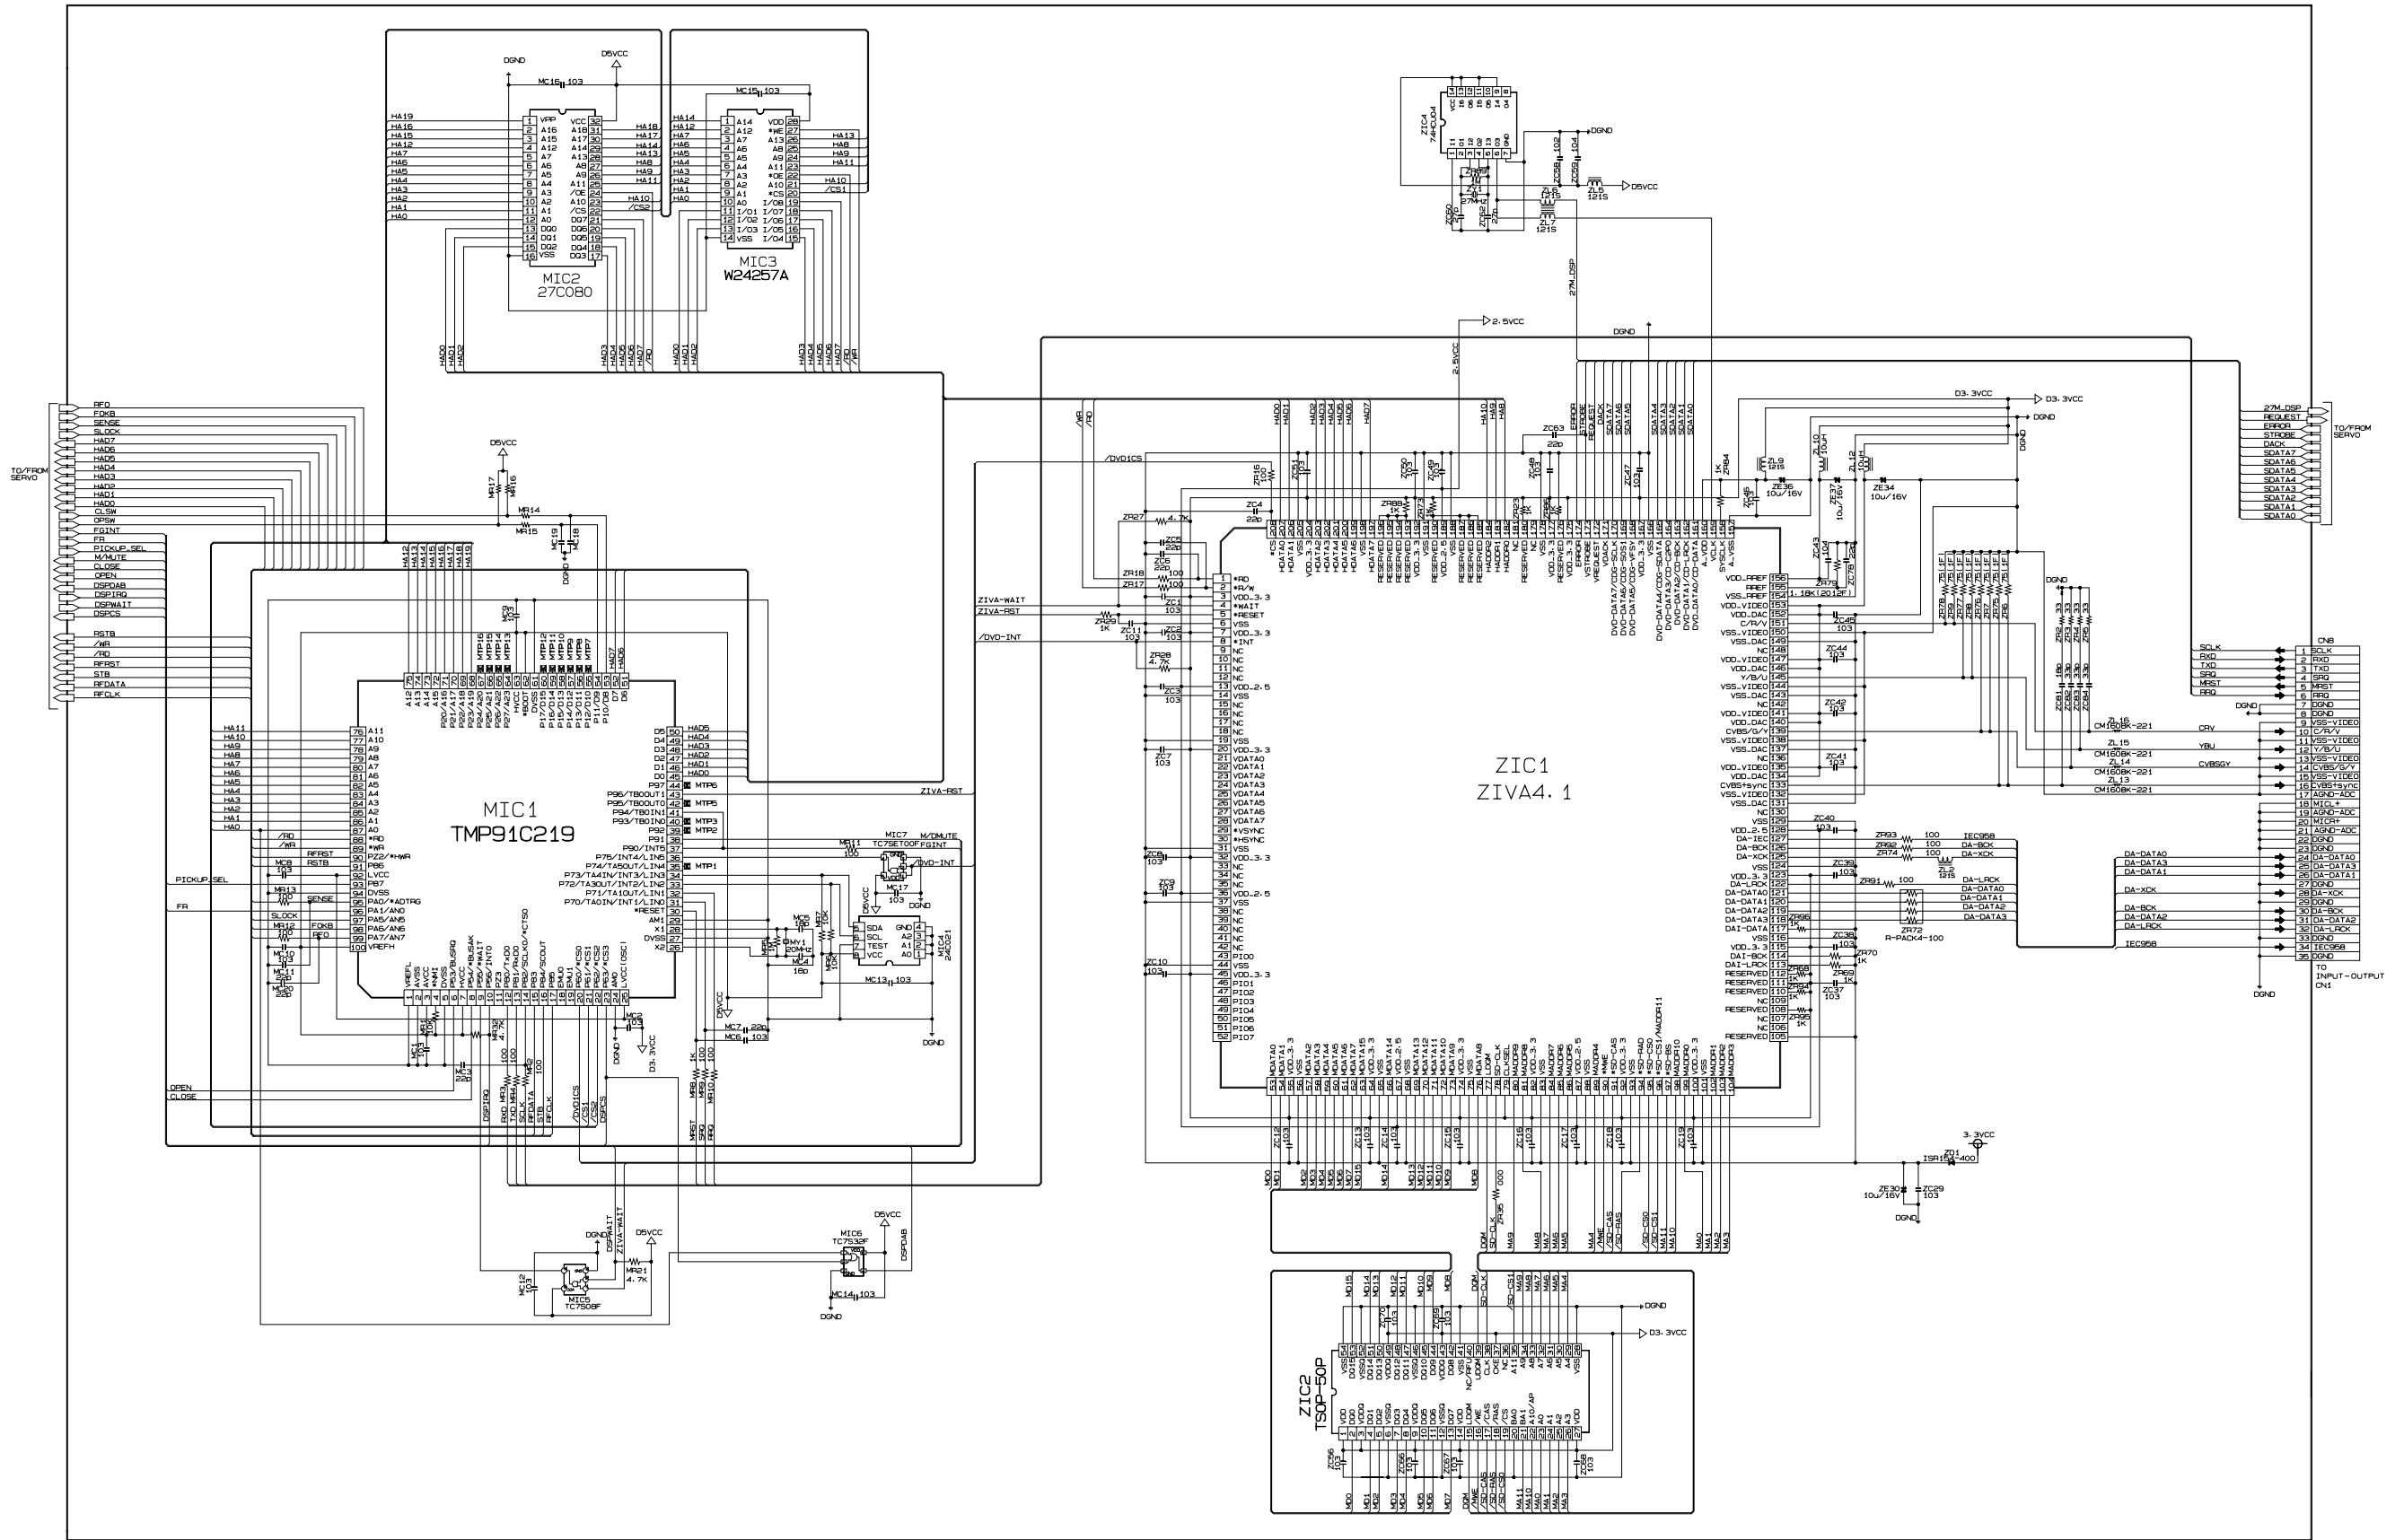



11-13 DVD Deck

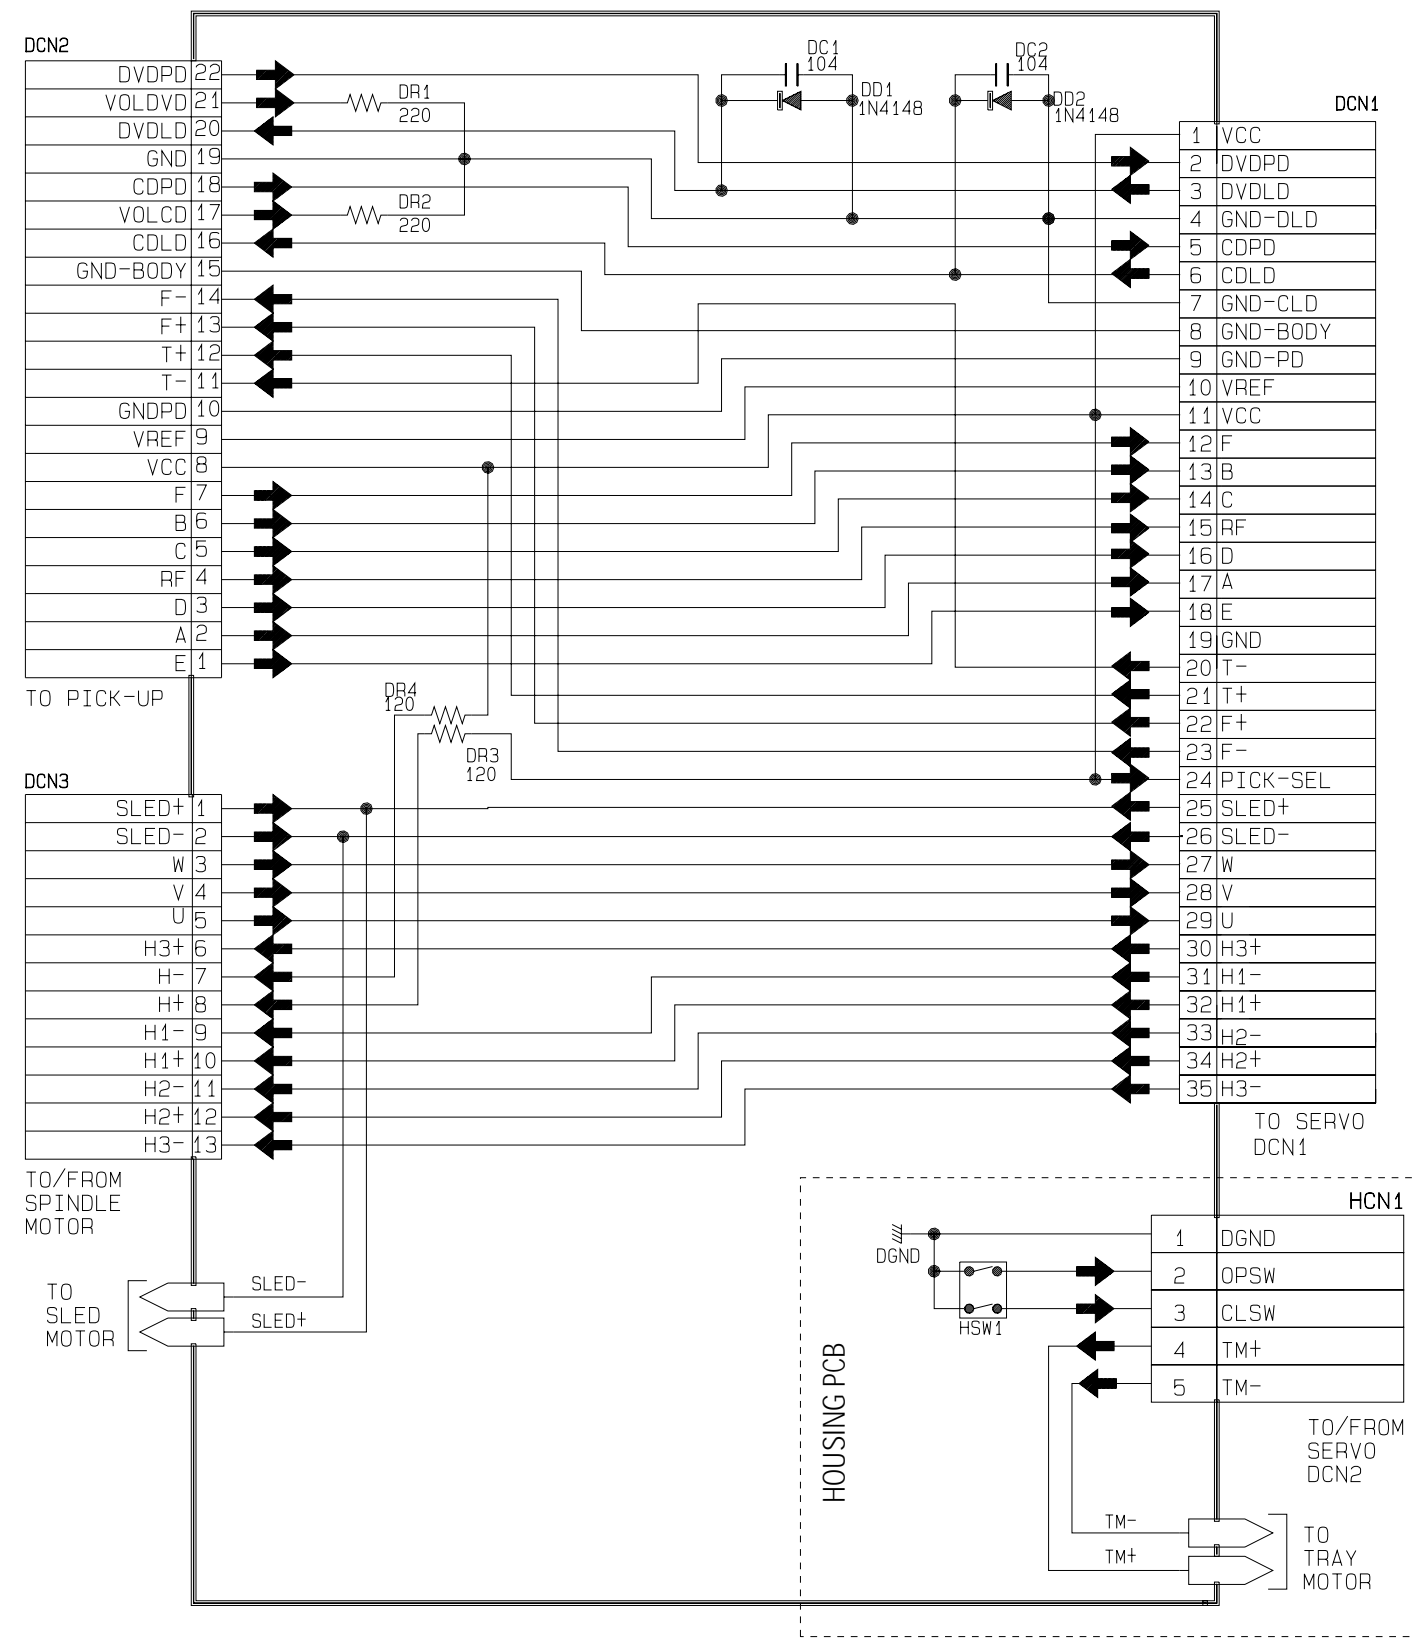



## MEMO



TS-10 DECK

MECHANICAL MANUAL

TS-10 DECK

# MECHANICAL *Manual*


◆ File with the SERVICE MANUAL.



TS-10 DECK

CONTENTS

1. Disassembly and Reassembly
2. Alignment and Adjustment

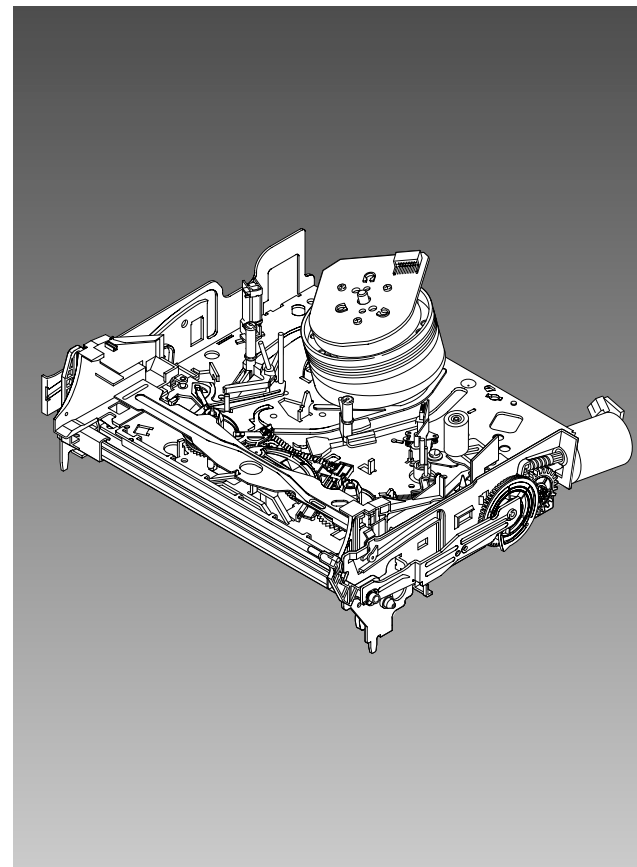

---

# 1. Disassembly and Reassembly

---

## 1-1 Deck Parts Locations

---

### 1-1-1 Top View

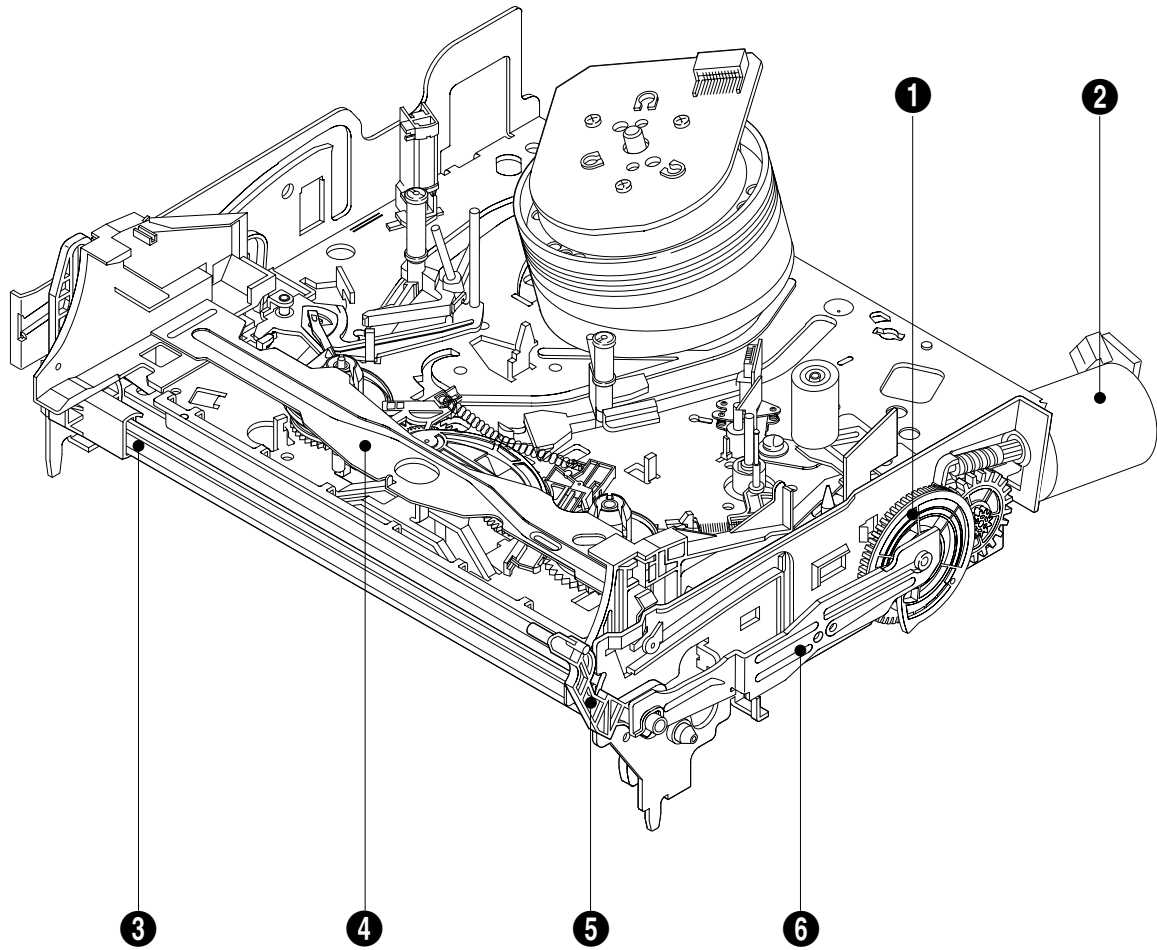


Fig. 1-1 Top parts Location-1

- ❶ GEAR FL CAM
- ❷ MOTOR LOADING ASS'Y
- ❸ LEVER FL ARM ASS'Y
- ❹ HOLDER FL CASSETTE ASS'Y
- ❺ LEVER FL DOOR
- ❻ SLIDER FL DRIVE

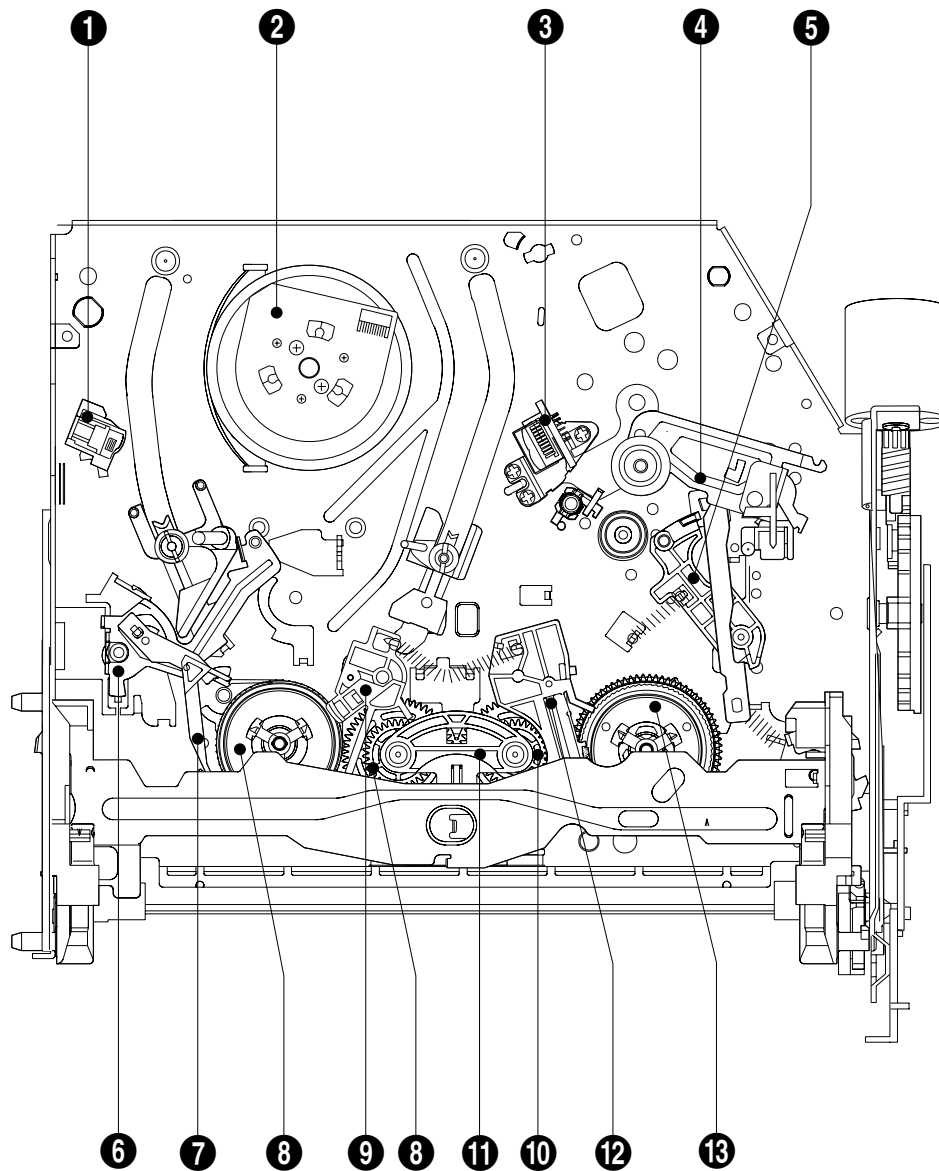


Fig. 1-2 Top Parts Location-2

- |                          |                       |
|--------------------------|-----------------------|
| ❶ FE HEAD                | ❸ DISK S REEL         |
| ❷ CYLINDER ASS'Y         | ❹ LEVER S BRAKE ASS'Y |
| ❸ ACE HEAD ASS'Y         | ❺ GEAR IDLE           |
| ❹ LEVER UNIT PINCH ASS'Y | ❻ LEVER IDLE          |
| ❺ LEVER #9 GUIDE ASS'Y   | ❼ LEVER T BRAKE ASS'Y |
| ❻ LEVER TENSION ASS'Y    | ❽ DISK T REEL         |
| ❼ BAND BRAKE ASS'Y       |                       |

## 1-1-2 Bottom View

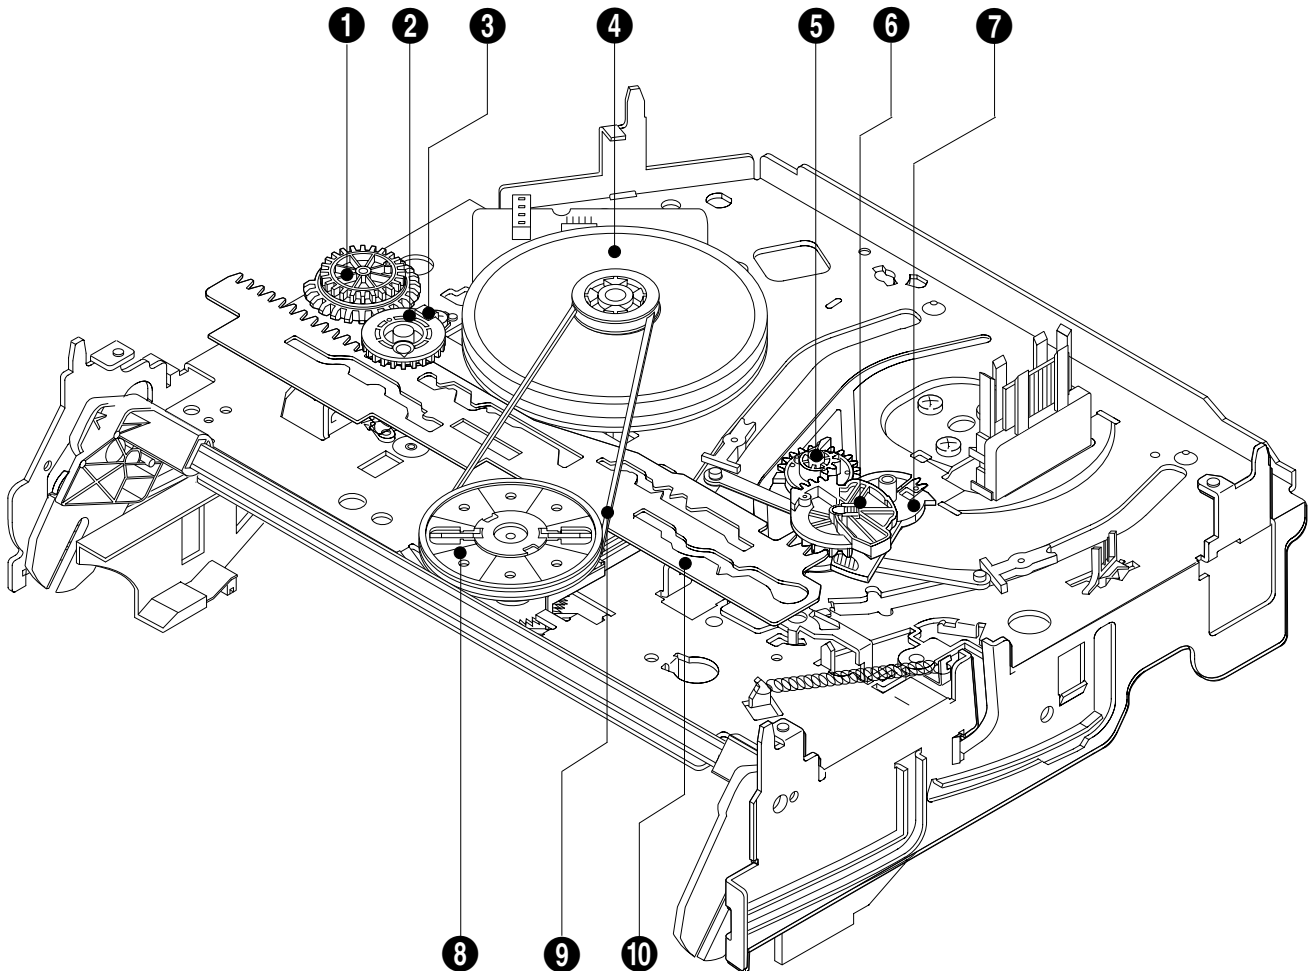


Fig. 1-3 Bottom Parts Location

- ❶ GEAR JOINT 1
- ❷ GEAR JOINT 2
- ❸ BRACKET GEAR
- ❹ MOTOR CAPSTAN ASS'Y
- ❺ LEVER T LOAD ASS'Y
- ❻ GEAR LOADING DRIVE
- ❼ LEVER S LOAD ASS'Y
- ❽ HOLDER CLUTCH ASS'Y
- ❾ BELT PULLEY
- ❿ SLIDER CAM

## 1-2 Main Deck

### 1-2-1 Lever FL Door Removal

- 1) Push the Holder FL Cassette Ass'y ❶ about 20mm in the direction of arrow "A".
- 2) Rotate the Lever FL Door ❷ in the direction of arrow "B".
- 3) Release the Hook ❸ and Remove the Lever FL Door ❷ in the direction of arrow "C".

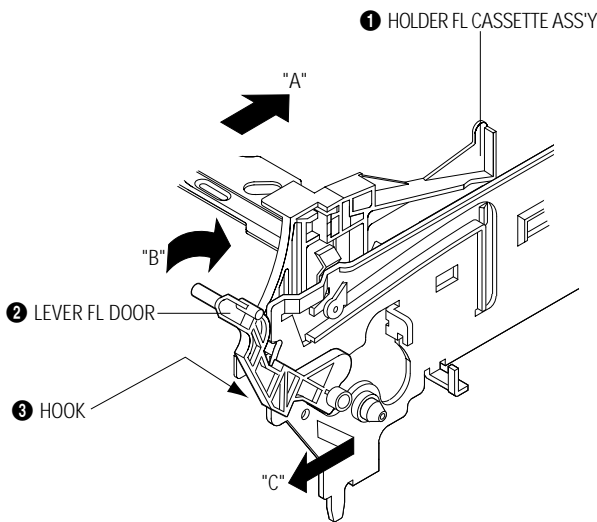


Fig. 1-4 Lever FL Door Removal

### 1-2-2 Holder FL Cassette Ass'y Removal

- 1) Pull the Holder FL Cassette Ass'y ❶ to the eject position.
- 2) Pull the Holder FL Cassette Ass'y ❶ as grasping the Holder FL Cassette Ass'y ❶ and Lever FL Cassette-R ❷ in the same time to release hooking from Main Base until the Boss [A] of Holder FL Cassette Ass'y ❶ is taken out from the Rail [B].
- 3) Lift the Holder FL Cassette Ass'y ❶, in this time, you have to grasp the Lever FL Cassette-R ❷ continuously until the Holder FL Cassette Ass'y ❶ is taken out completely.

**Note :** Be sure to insert Lever FL Cassette-R ❷ in the direction of "A" to prevent separation and breakage of the Lever FL Cassette-R ❷ at disassembling and reassembling.

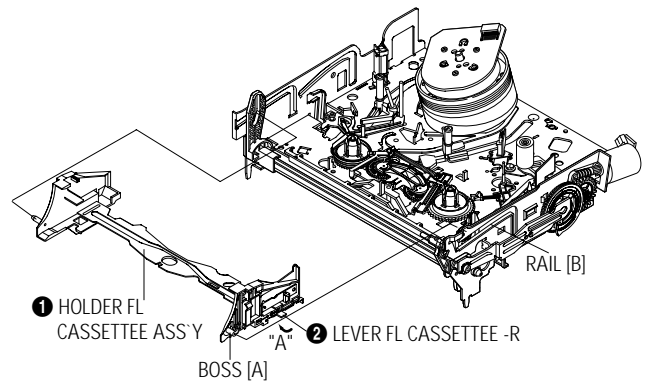


Fig. 1-5 Holder FL Cassette Ass'y Removal

### 1-2-3 Slider FL Drive, Gear FL Cam Removal

- 1) Pull the Slider FL Drive ❶ to the front direction.
- 2) Remove the Slider FL Drive ❶ in the direction of arrow. (Refer to Fig. 1-6)
- 3) Remove the Gear FL cam ❷.

**Note :** When reinstalling be sure to reassemble Slider FL drive ❶ after you insert the Boss of Lever FL ARM-R in Groove of Slider FL drive ❶.

**Assembly :** Align the Gear FL Cam ❶ with the Gear worm wheel Post as shown drawing. (Refer to Timing point)

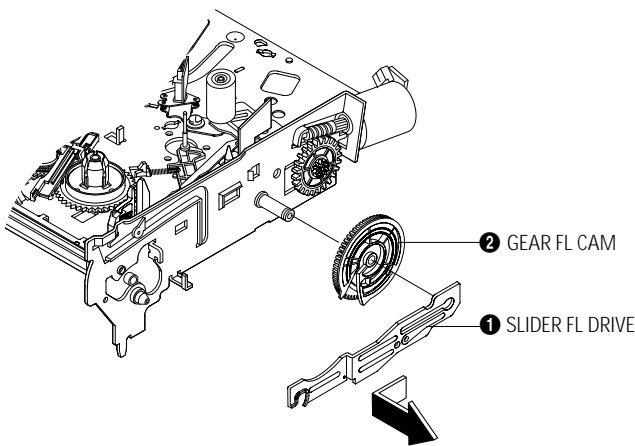


Fig. 1-6 Slider FL Drive Removal

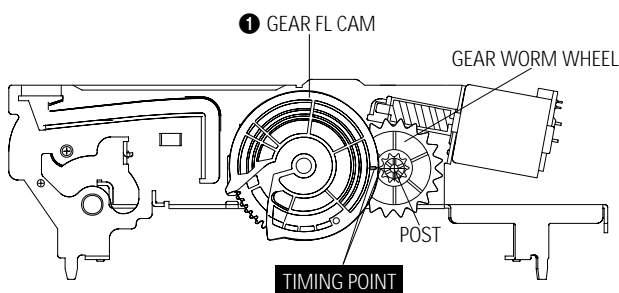


Fig. 1-7 Gear FL Cam, Gear Worm

### 1-2-4 Lever FL Arm Ass'y Removal

- 1) Push the hole "A" in the direction of arrow "B" use the pin.(about Dia. 2.5)
- 2) Pull out the Lever FL Arm Ass'y ❶ from the Boss of Main Base.
- 3) Remove the Lever FL Arm Ass'y ❶ in the direction of arrow "C".

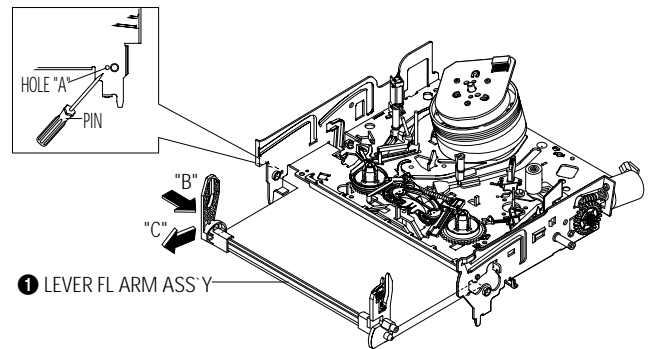


Fig. 1-8 Lever FL Arm Ass'y Removal

### 1-2-5 Gear Worm Wheel Removal

- 1) Remove the Gear Worm wheel ❶.

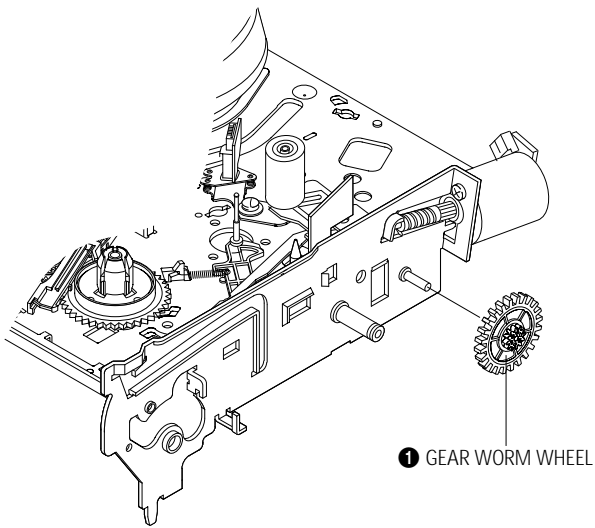


Fig. 1-9 Gear Worm Wheel Removal

### 1-2-6 Motor Loading Ass'y Removal

- 1) Remove the screw ❶.
- 2) Remove the Motor Loading Ass'y ❷.

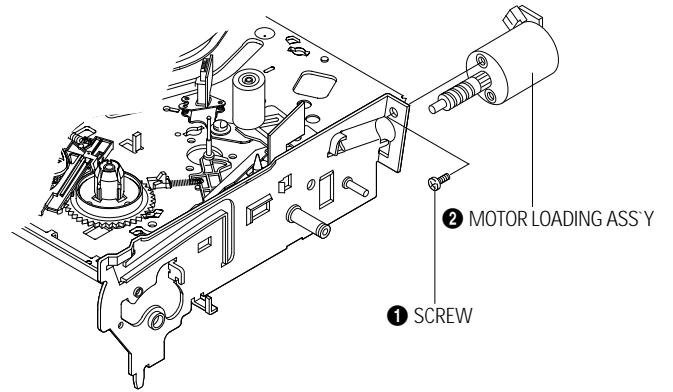


Fig. 1-10 Motor Loading Ass'y Removal



### 1-2-7 Bracket Gear, Gear Joint 2, 1 Removal

- 1) Remove the SCREW ❶.
- 2) Remove the Bracket Gear ❷.
- 3) Remove the Gear Joint 2 ❸.
- 4) Remove the Gear Joint 1 ❹.

#### Assembly :

- 1) Be sure to align dot mark of Gear Joint 1 ❶ with dot mark of Gear Joint 2 ❷ as shown Fig 1-12. (Refer to Timing point1)
- 2) Confirm the Timing Point 2 of the Gear Joint 2 ❷ and Slider Cam ❸.

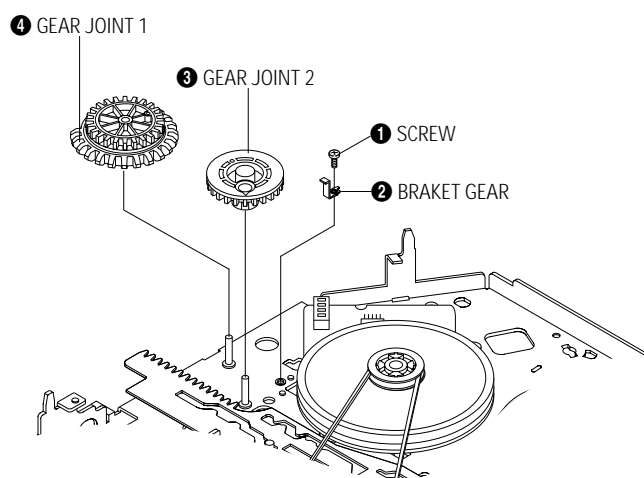


Fig. 1-11 Bracket Gear, Gear Joint 1,2 Removal

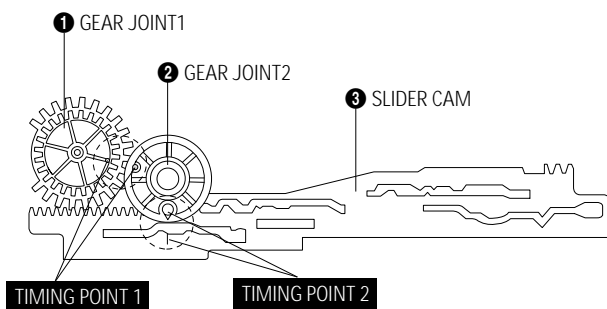


Fig. 1-12 Gear Joint 1,2 Assembly

### 1-2-8 Gear Loading Drive, Slider Cam, Lever Load S, T Ass'y Removal

- 1) Remove the Belt Pulley. (Refer to Fig. 1-30)
- 2) Remove the Gear Loading Drive ❶ after releasing Hook [A] in the direction arrow as shown in detail drawing.
- 3) Remove the Slider Cam ❷.
- 4) Remove the Lever Load ❸, Link Load ❹ & Lever Load ❸, Link Load ❹, Link Load ❺.

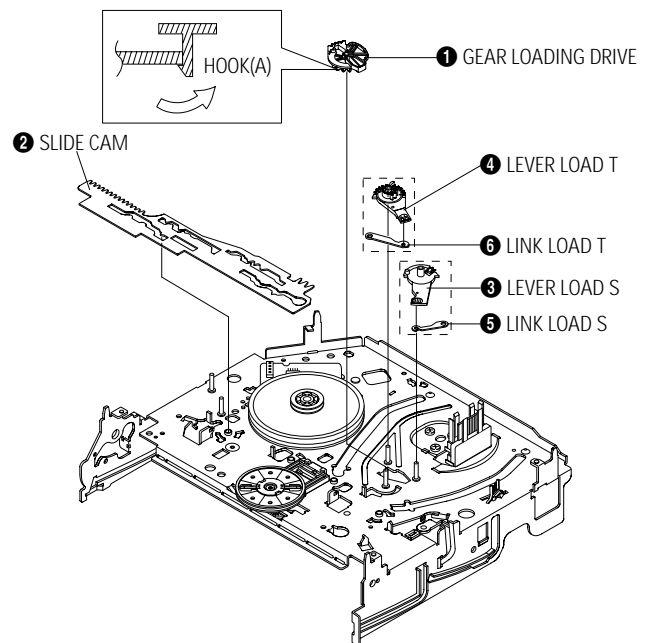


Fig. 1-13 Gear Loading Drive, Slider Cam, Lever T, S Load Ass'y Removal

### 1-2-9 Gear Loading Drive, Slider Cam, Lever Load S, T Ass'y Assembly

- 1) When reinstalling, be sure to align dot of Lever Load T Ass'y **1** with dot of Lever Load S Ass'y **2** as shown in drawing, (Refer to Timing Point 1).
- 2) Insert the Pin A,B,C,D into the Slider Cam **3** hole,
- 3) Be sure to align dot of Lever Load T **1** and dot of Gear Loading Drive **4**, (Refer to Timing Point 2).
- 4) Aline dot of Gear Loading drive **4** with mark of Slider Cam **3** as shown in drawing(Refer to Timing Point 3).

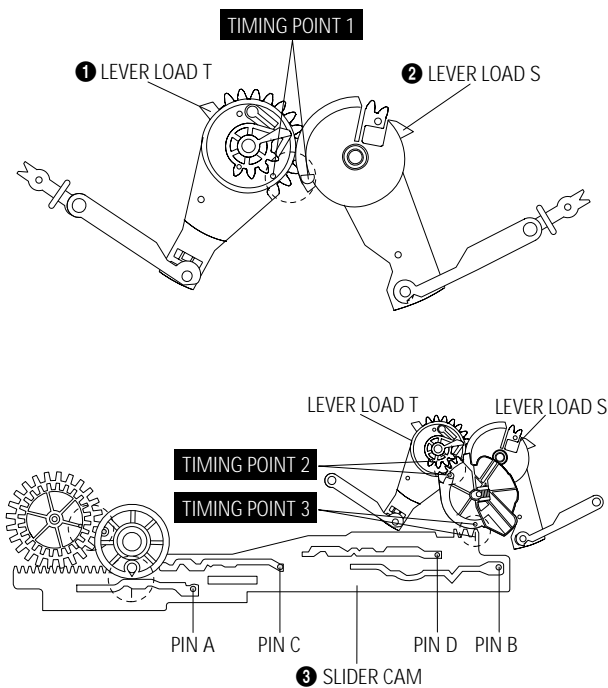


Fig. 1-14 Gear Loading Drive, Slider Cam, Lever Load S, T Ass'y Assembly

### 1-2-10 Lever Pinch Drive, Lever Tension Drive Removal

- 1) Remove the Lever Pinch Drive **1**, Lever Tension Drive **2**.

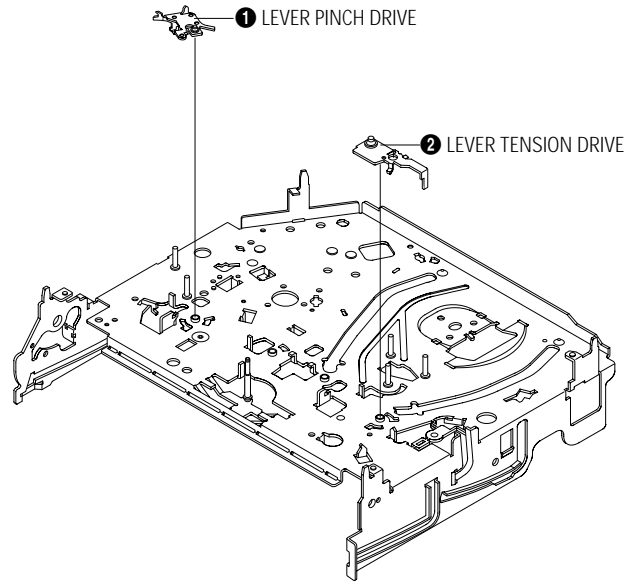


Fig. 1-15 Lever Pinch Drive, Lever Tension Drive Removal

### 1-2-11 Lever Tension Ass'y, Band Brake Ass'y Removal

- 1) Remove the Lever Brake S Ass'y (Refer to Fig 1-17).
- 2) Remove the Spring Tension Lever ❶.
- 3) Rotate stopper of Main Base in the direction of arrow "A".
- 4) Lift the Lever Tension Ass'y ❷ & Band brake Ass'y ❸.

**Note :**

- 1) When replacing the Lever Tension Ass'y ❷, be sure to apply Grease on the post,
- 2) Take care not to touch stain on the felt side, and not to be folder and broken Band brake Ass'y
- 3) After Lever Tension Ass'y seated, Rotate stopper of Main Base to the Mark[B].

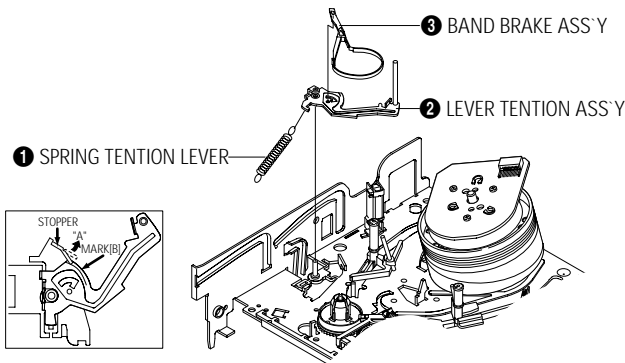


Fig. 1-16 Lever Tension Ass'y,  
Band Brake Ass'y Removal

### 1-2-12 Lever Brake S, T Ass'y Removal

- 1) Release the Hook [A] and the Hook [B], [C] in the direction of arrow as shown in Fig 1-17.
- 2) Lift the Lever S, T Brake Ass'y ❶, ❷ with spring brake ❸.

**Assembly :**

- 1) Assembly the Lever S Brake Ass'y ❶ on the Main Base.
- 2) Assembly the Lever T Brake Ass'y ❷ with spring brake ❸.

**Note :** Take extreme care not to be folded and transformed Spring Brake at removing or reinstalling.

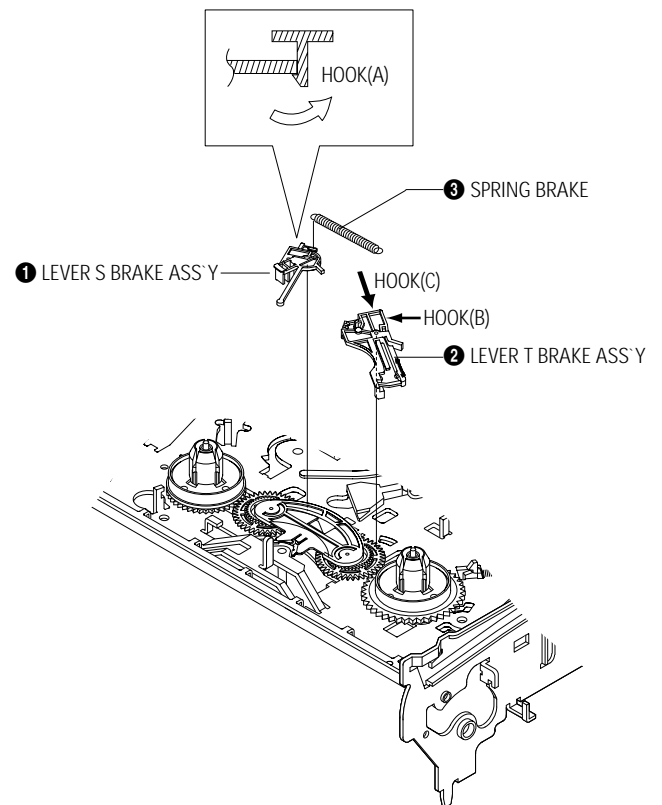


Fig. 1-17 Lever Brake S, T Ass'y Removal

### 1-2-13 Gear Idle Ass'y Removal

- 1) Push the Lever Idle ❶ in the direction of arrow "A", "B".
- 2) Lift the Lever Idle ❶.

#### Assembly :

- 1) Apply oil in two Bosses of Lever Idle ❶.
- 2) Assemble the Gear Idle ❷ with the Lever Idle ❶.

**Note :** When replacing the Gear Idle ❷, be sure to add oil in the boss of Lever Idle ❶.

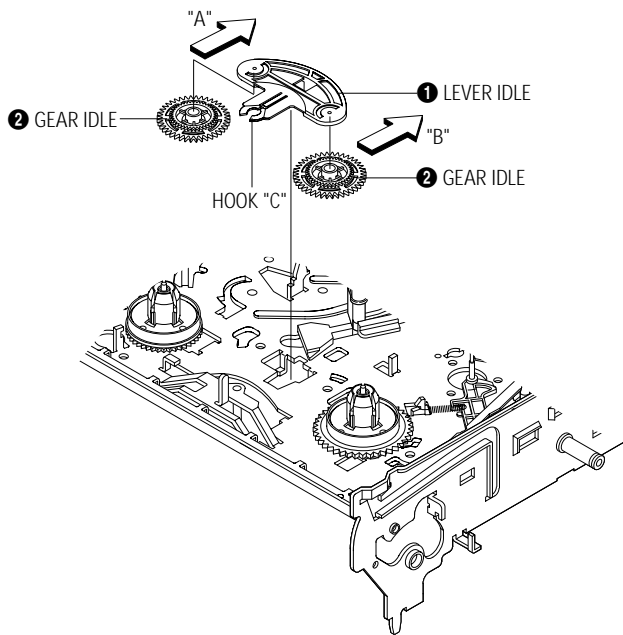


Fig. 1-18 Gear Idle Ass'y Removal

### 1-2-14 Disk S, T Reel Removal

- 1) Lift the Disk S, T Reel ❶, ❷.

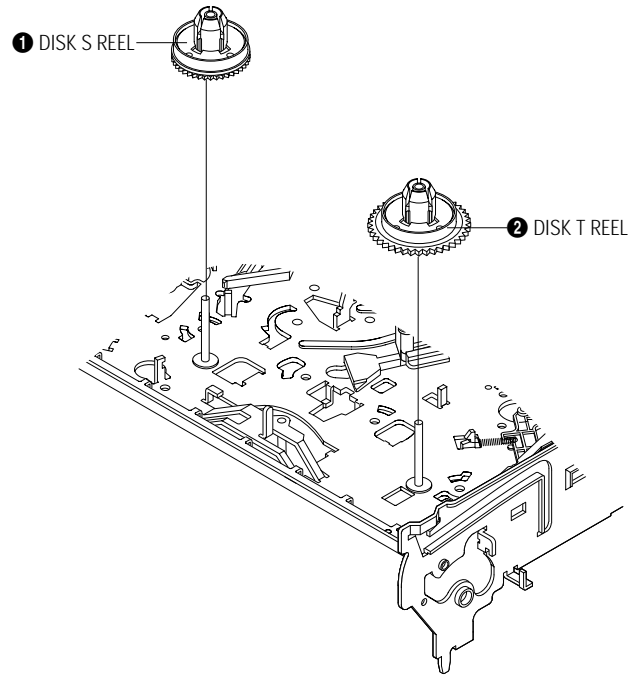


Fig. 1-19 Disk S, T Reel Removal

### 1-2-15 Holder Clutch Ass'y Removal

- 1) Remove the Washer Slit ❶.
- 2) Lift the Holder Clutch Ass'y ❷.

**Note :** When you reinstall Holder Clutch Ass'y

- 1) Check the condition of spring as shown in detail A.
- 2) Don't push Holder Clutch Ass'y down with excessive force Just insert Holder Clutch Ass'y into post center with dead force and Rotate it smoothly. Be sure to confirm that spring is in the slit of Gear Center Ass'y as shown in detail B.

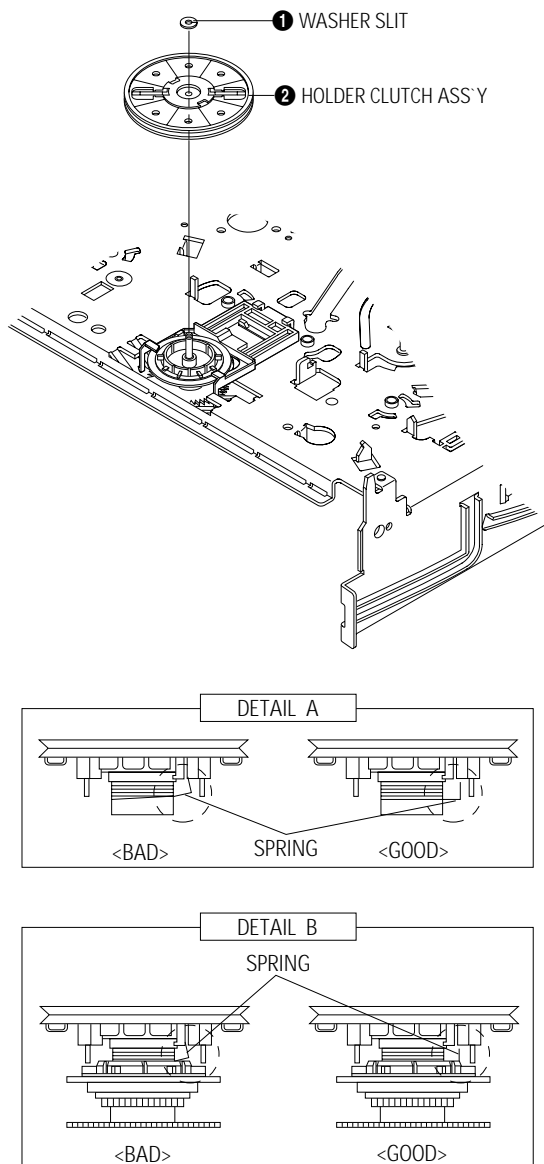


Fig. 1-20 Holder Clutch Ass'y Removal

### 1-2-16 Lever Up Down Ass'y, Gear Center Ass'y Removal

- 1) Remove the 2 hooks in the direction of arrow as shown Fig. 1-21 and lift the Lever Up Down Ass'y ❶.
- 2) Lift the Gear Center Ass'y ❷.

**Assembly :**

- 1) Insert the Lever Up Down Ass'y ❶ in the rectangular holes on Main Base as shown in Fig 1-22.
- 2) Lift the Lever Up Down Ass'y ❶ about 35°. (Refer to Fig 1-22)
- 3) Insert Ring of the Gear Center Ass'y ❷ in the Guide of the Lever Up Down Ass'y ❶.
- 4) Insert the Gear Center Ass'y ❷ in the post on Main Base.
- 5) Push down the Lever Up Down Ass'y ❶ for locking of the Hook.

**Note :**

- 1) Take care not to separate and sentence does not mark sense.
- 2) Be sure to confirm that Ring of the Gear Center Ass'y ❷ is in the Guide of the Lever Up Down Ass'y ❶ after finishing assembly of Lever Up Down Ass'y ❶ and Gear Center Ass'y ❷.

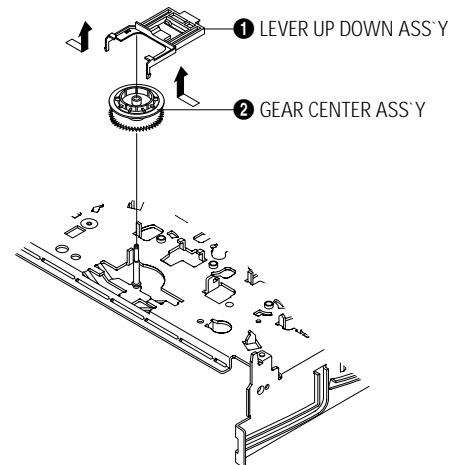


Fig. 1-21 Lever Up Down Ass'y Removal

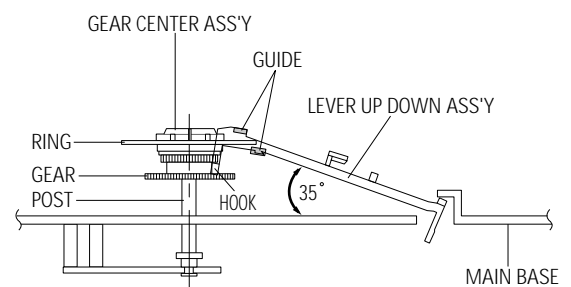


Fig. 1-22 Lever Up Down Ass'y Removal

### 1-2-17 Guide Cassette Door Removal

- 1) Lift the Hook [A].
- 2) Rotate the Guide Cassette Door ❶ in the direction of arrow.

**Note :** After reinstalling the Guide Cassette Door ❶ sure the Hook [A].

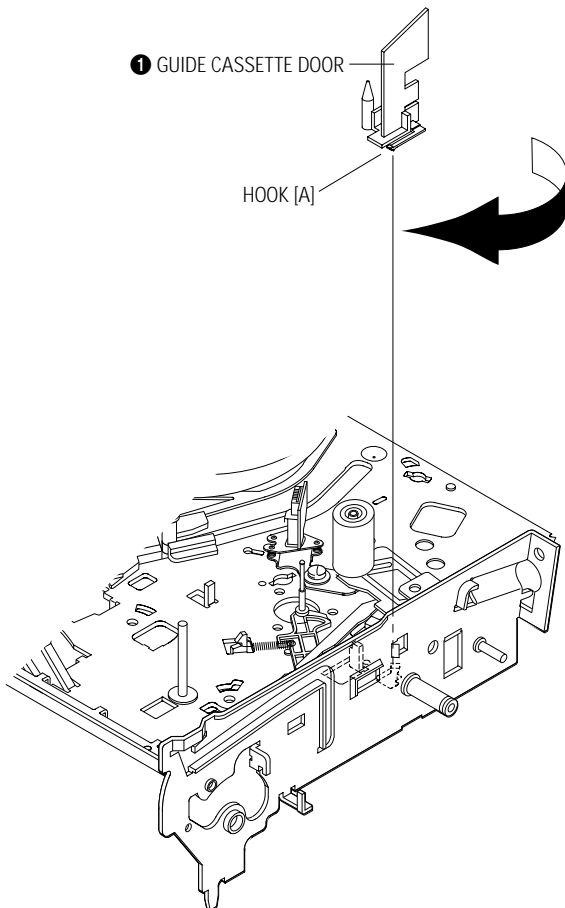


Fig. 1-23 Guide Cassette Door Removal

### 1-2-18 Lever Unit Pinch Ass'y, Plate Joint, Spring Pinch Drive Removal

- 1) Lift the Unit Pinch Ass'y ❶.
- 2) Remove the Plate Joint ❷ from Lever Pinch Drive.
- 3) Remove the Spring Pinch Drive ❸.

**Note :**

- 1) Take extreme care not to touch the grease on the Roller Pinch.
- 2) When reinstalling, be sure to apply grease on the post pinch roller.

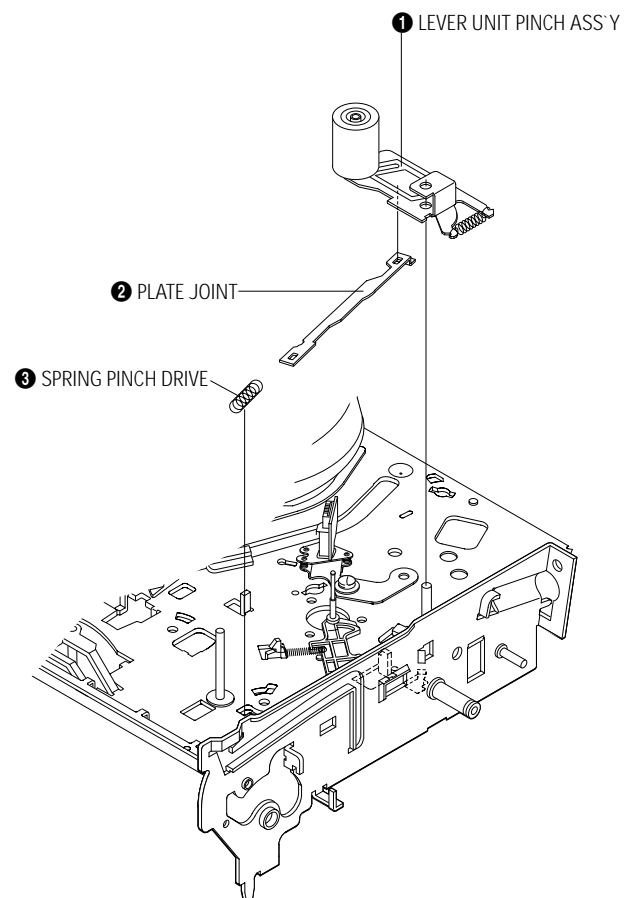


Fig. 1-24 Lever Unit Pinch Ass'y, Plate Joint, Spring Pinch Drive Removal

### 1-2-19 Lever #9 Guide Ass'y Removal

- 1) Remove the Spring #9 Guide ❶.
- 2) Lift the Spring #9 Guide Ass'y ❷ in the direction of arrow "A".

#### Note :

- 1) Take extreme care not to get grease on the tape Guide Post.
- 2) After reinstalling, check the bottom side of the Post #9 Guide to the top side of Main Base.

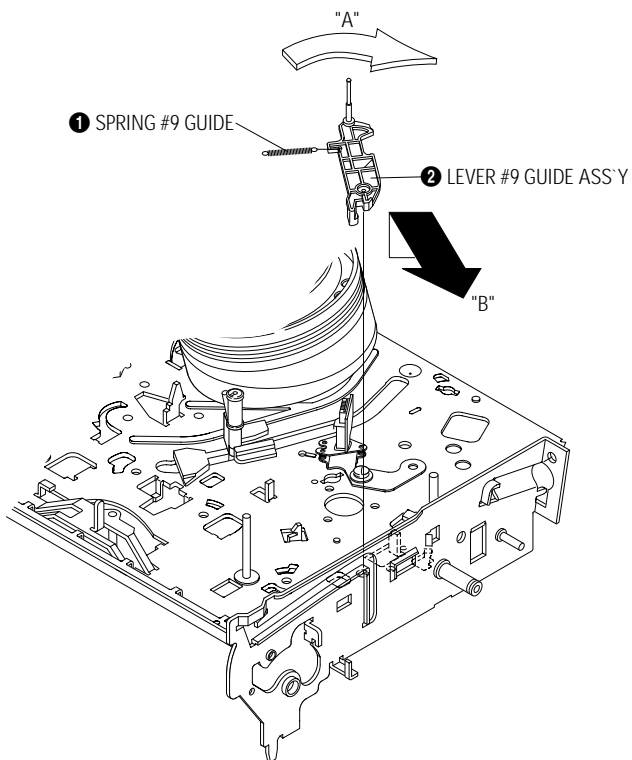


Fig. 1-25 Lever #9 Guide Ass'y Removal

### 1-2-20 FE Head Removal

- 1) Remove the screw ❶.
- 2) Lift the FE Head ❷.

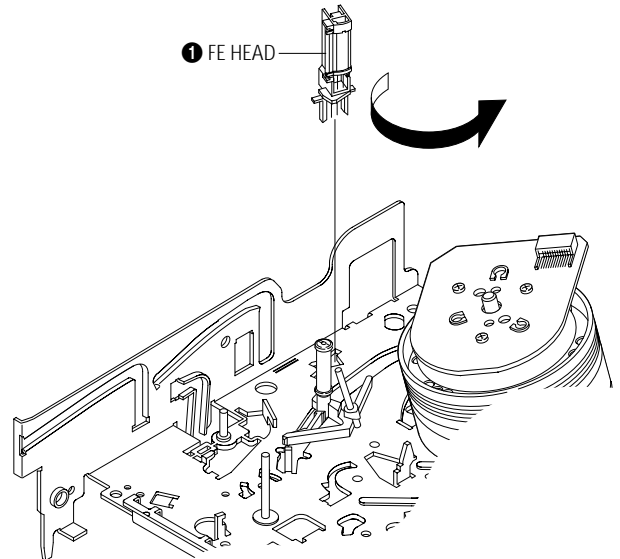


Fig. 1-26 FE Head Removal

### 1-2-21 ACE Head Removal

- 1) Pull out the FPC from connector of ACE Head Ass'y ②.
- 2) Remove the screw ①.
- 3) Lift the ACE Head Ass'y ②.

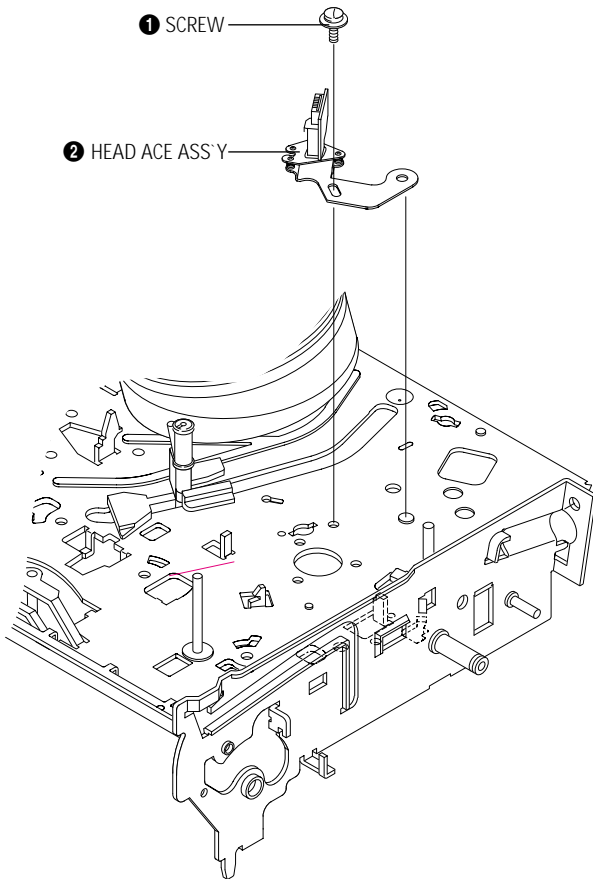


Fig. 1-27 ACE Head Removal

### 1-2-22 Slider S, T Ass'y Removal

- 1) Move the Slider S, T Ass'y ①, ② to slot, and then lift it to remove. (Refer to arrow)

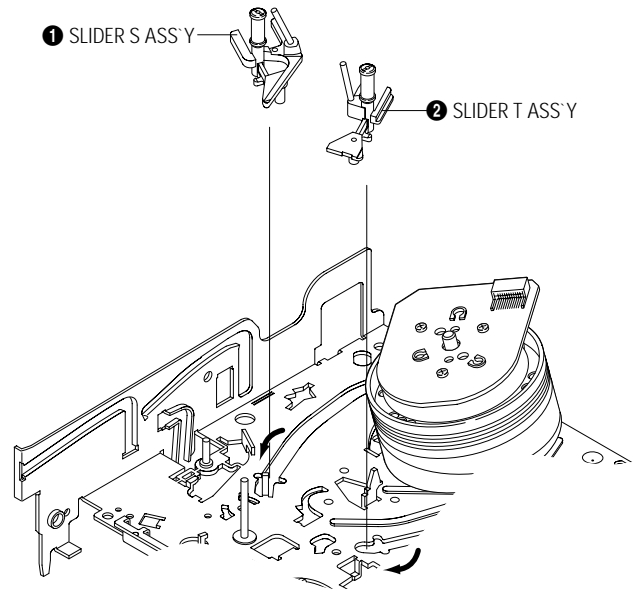


Fig. 1-28 Slider S, T Ass'y Removal



### 1-2-23 Plate Ground Deck, Cylinder Ass'y Removal

- 1) Remove the 3 Screws ❶.
- 2) Lift the Plate Ground Deck ❷.
- 3) Lift the Cylinder Ass'y ❸.

#### Assembly :

- 1) Match the 3 holes in the bottom of Cylinder ass'y ❸ to the 3 holes of Main Base as attending not to drop or knock the Cylinder ass'y ❸.
- 2) Tighten the 1 Screw ❶.
- 3) Match the Plate Ground Deck ❷ to the Hole of Base Main.
- 4) Tighten the other 2 Screws ❶.

#### Note :

- 1) Take care not to touch the Cylinder Ass'y ❸ and the tape guide post at reinstalling.
- 2) When reinstalling, Don't push down too much on Screw Driver.

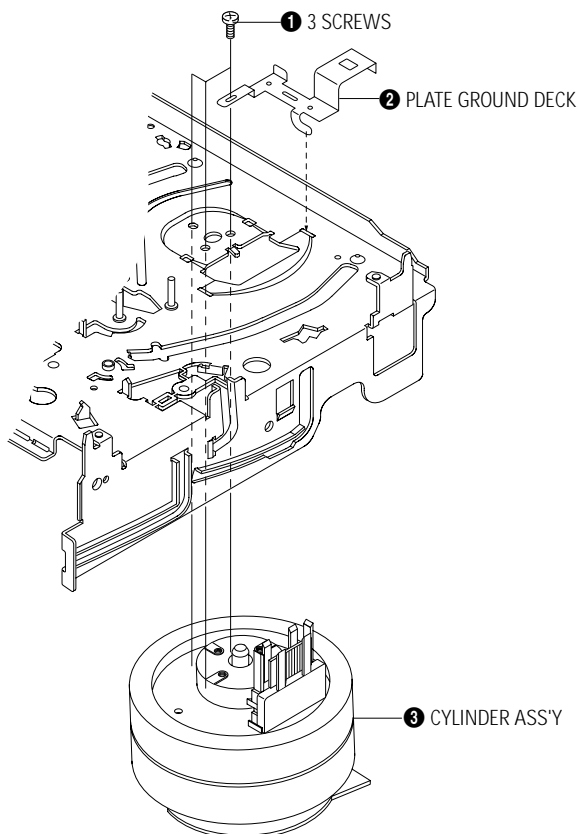


Fig. 1-29 Plate Ground Deck, Cylinder Ass'y Removal

### 1-2-24 Belt Pulley Removal

- 1) Remove the Belt Pulley ❶.

**Note :** Take extreme care not to get grease on Belt Pulley ❶ at assembling or reassembling.

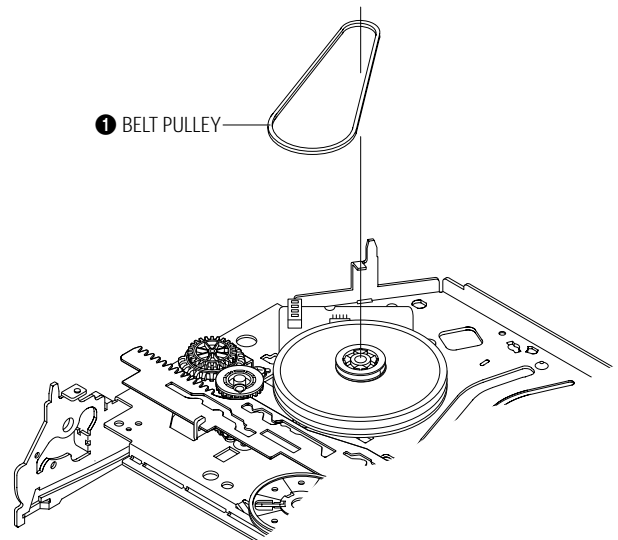


Fig. 1-30 Belt Pulley Removal

### 1-2-25 Level Head Cleaner Ass'y Removal (Optional)

- 1) Release the Hook ❶.
- 2) Lift the Lever Head Cleaner Ass'y ❷.

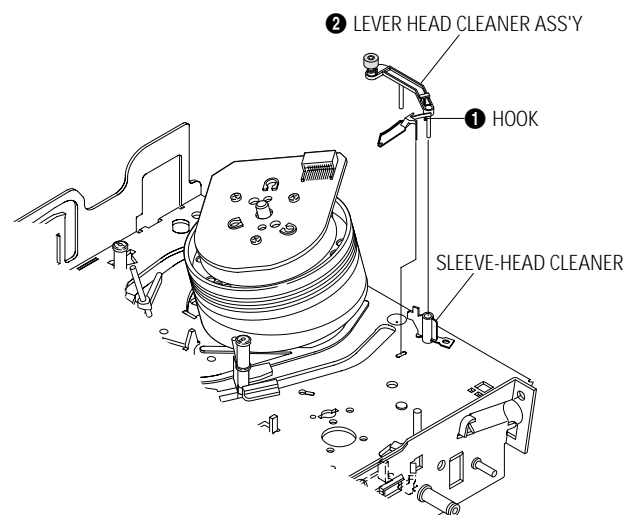


Fig. 1-31 Level Head Cleaner Ass'y Removal

### 1-2-26 Damper Capstan, Motor Capstan Ass'y Removal

- 1) Remove the Damper Capstan ❶ in the direction of arrow.
- 2) Remove the 3 Screws ❷.
- 3) Remove the Motor Capstan Ass'y ❸.

**Assembly :**

- 1) Match the 3 holes of Motor Capstan Ass'y ❸ to the 3 holes of Main Base. Be careful not to drop or knock the Motor Capstan Ass'y ❸.
- 2) Tighten the 3 Screws ❷ in the direction of arrow as shown detail drawing.
- 3) Assemble the Damper Capstan ❶.

**Note :** After tightening screws, check if there is gap between the head of screws and the top side of Main Base. There should have no gap between the head of screws and the top side of Main Base. After reinstalling, adjusting the tape transport system again.

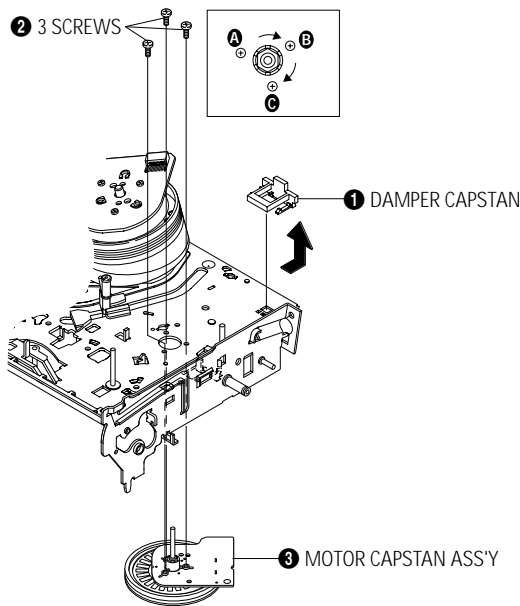


Fig. 1-32 Damper Capstan, Motor Capstan Ass'y Removal

### 1-2-27 How to Eject the Cassette Tape (If the unit does not operate on condition that is inserted into housing ass'y)

- 1) Turn the Gear worm ❶ clockwise with screw driver. (Refer to arrow)  
(Other method : Remove the Screw of Motor Load Ass'y, Separate the Motor Load Ass'y)

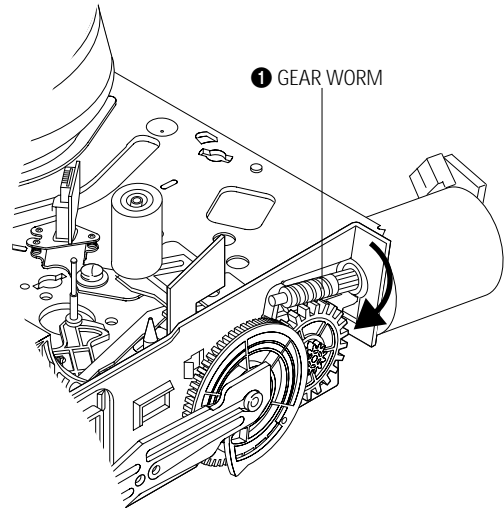


Fig. 1-33

- 2) When Slider S,T are approached in the position of unloading, rotate holder Clutch counterclockwise after inserting screw driver in the hole of frame's bottom in order to wind the unwinded tape. (Refer to Fig.1-34)  
(If you rotate Gear Worm ❶ continuously when tape is in state of unwinding, you may cause a tape contamination by grease and tape damage. Be sure to wind the unwinded tape in the state of set horizontally.)
- 3) Rotate Gear Worm ❶ clockwise using screw driver again up to the state of eject mode and then pick out the tape. (Refer to Fig.1-33)

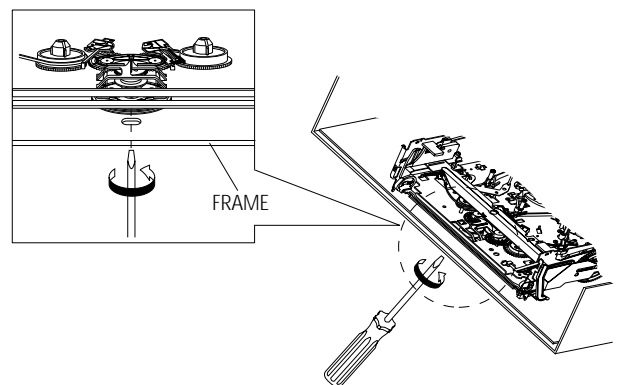


Fig. 1-33

### 1-3 The table of clearing, Lubrication and replacement time about principal parts

- 1) The replacement time of parts is not life of parts.
- 2) The table 1-1 is that the VCR Set is in normal condition (normal temperature, normal humidity).  
The checking period may be changed owing to the condition of use, runtime and environmental conditions.
- 3) Life of the Cylinder Ass'y is depend on the condition of use.
- 4) See exploded view for location of each parts.

&lt;Table 1-1&gt;

*	Parts Name	Checking Period										Remark
		500	1000	1500	2000	2500	3000	3500	4000	4500	5000	
T A P E  P A T H  S Y S T E M	POST TENSION	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ	- To clean the parts, use patch and alcohol (solvent).  - After cleaning, use the video tape after alcohol is gone away completely.  - We recommend to use oil [EP-50] or solvent.  - One or two drops of oil should be applied after cleaning with alcohol.  - Periodic time of applying oil (Apply oil after cleaning) - The excessive applying oil may be the cause of malfunction.
	SLANT POST S, T	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ	
	#8 GUIDE SHAFT	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ	
	CAPSTAN SHAFT	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ	
	#9 GUIDE POST	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ	
	#3 GUIDE POST	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ	
	GUIDE ROLLER S, T	Δ	Δ	Δ	0	0	0	0	0	0	0	
	CYLINDER ASS'Y	Δ	0	0	0	0	0	0	0	0	0	
	FE HEAD	Δ	Δ	Δ	0	0	0	0	0	0	0	
	ACE HEAD	Δ	0	0	0	0	0	0	0	0	0	
	PINCH ROLLER	Δ	0	0	0	0	0	0	0	0	0	
	POST REEL S, T		◆		◆		◆		◆		◆	
	SLEEVE TENSION		◆		◆		◆		◆		◆	
	POST CENTER		◆		◆		◆		◆		◆	
LEVER IDLE BOSS (2Point)		◆		◆		◆		◆		◆		
D R I V I N G  S Y S T E M	CAPSTAN MOTOR PULLEY	Δ	Δ	Δ	Δ	Δ	0	0	0	0	0	
	BELT PULLEY				0	0	0	0	0	0	0	
	HOLDER CLUTCH ASS'Y	Δ	0	0	0	0	0	0	0	0	0	
	GEAR CENTER ASS'Y		0	0	0	0	0	0	0	0	0	
	GEAR IDLE (2Point)		0	0	0	0	0	0	0	0	0	
	LOADING MOTOR		0	0	0	0	0	0	0	0	0	
B R A K E  S Y S T E M	BAND BRAKE ASS'Y		0	0	0	0	0	0	0	0	0	
	BRAKE T ASS'Y		0	0	0	0	0	0	0	0	0	

Δ : Cleaning

0 : Check and replacement in necessary

◆ : Add Oil

# MEMO

## 2. Alignment and Adjustment

### 2-1 Tape Transport System and Adjustment Locations

The tape transport system has been adjusted precisely in the factory. Alignment is not necessary except for the following :

- 1) Noise observed on the screen.
- 2) Tape damage.
- 3) Parts replacement in the tape transport system.

Lower flange height of tape guide is used as the reference for the transport adjustment.

To maintain the height of the tape guide and prevent damage, do not apply excessive force onto the main base.

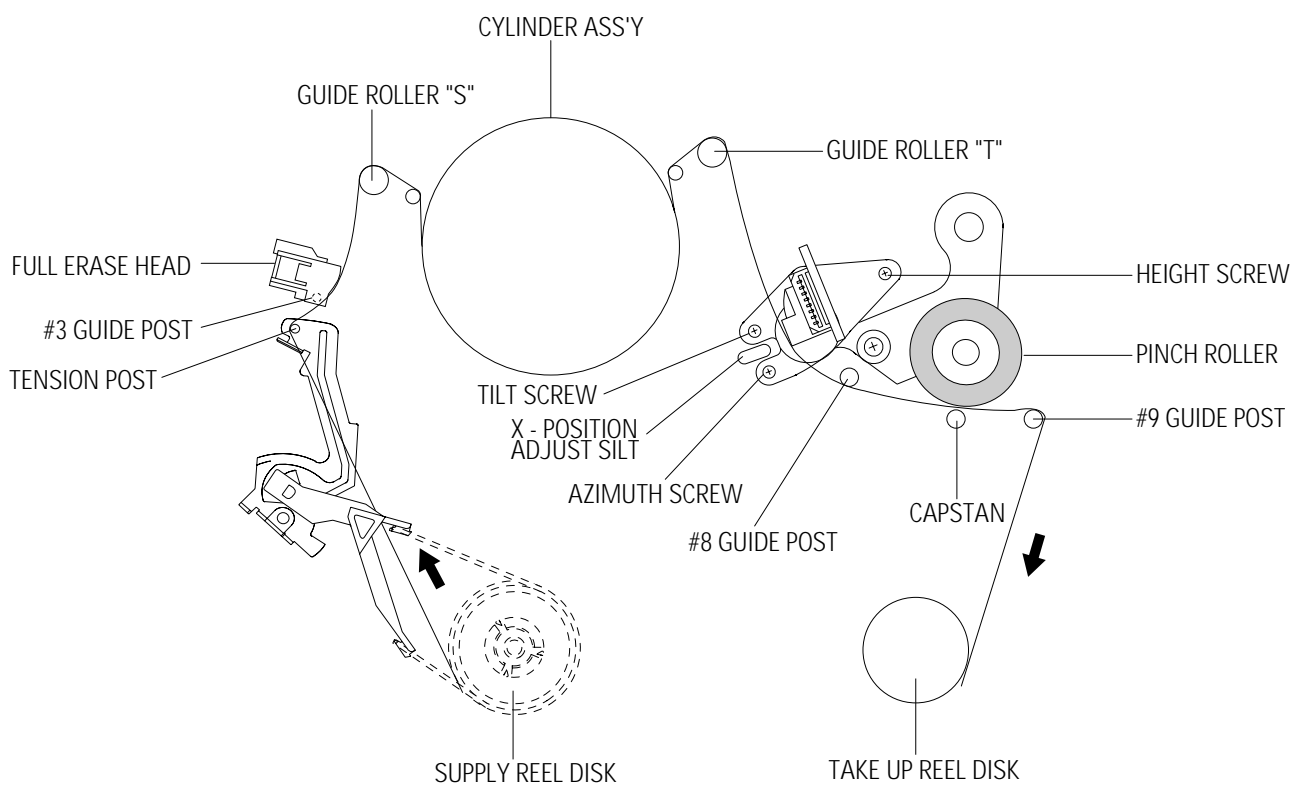


Fig. 2-1 Location of Tape Transport Adjustment

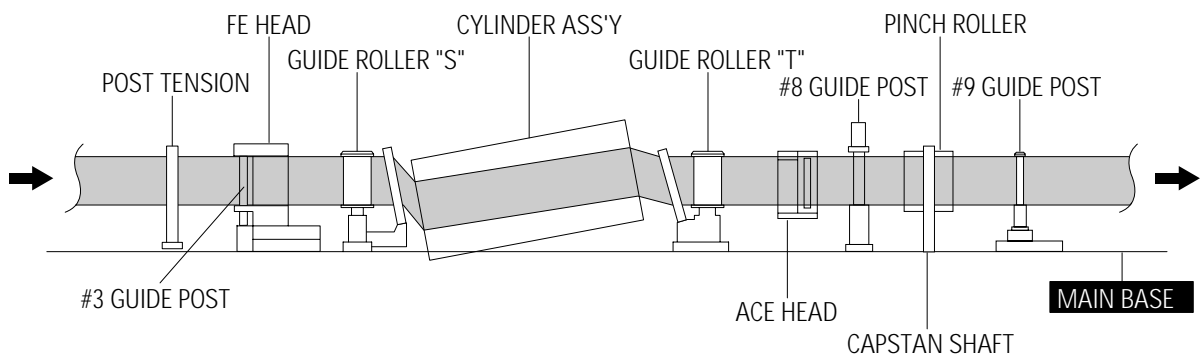


Fig. 2-2 Tape Travel Diagram

## 2-2 Tape Transport System Adjustment

When parts are replaced, perform the required adjustments by referring to procedures for the tape transport system. If there are any changes to the tape path, first run a T-120 tape and make sure excessive tape wrinkle does not occur at the tape guides.

- 1) If tape wrinkle is observed at the guide roller S, T, turn the guide roller S, T until wrinkle disappears.
- 2) If the tape wrinkle is still observed at the tape guide, perform the tilt adjustment of the ACE head. (See "2. Alignment and Adjustment" of the Service Manual for Test Point Locations.)

### 2-2-1 ACE Head Assembly Adjustment

#### 2-2-1(a) ACE HEAD HEIGHT ADJUSTMENT

- 1) Run the alignment tape (Color bar) in the playback mode.
- 2) Observe surface of the audio head using a dental mirror.
- 3) Turn screw (C) clockwise or counterclockwise until the gap of lower tape edge and the lower edge of the control head is about 0.25mm. (Refer to Fig. 2-3 and 2-4)

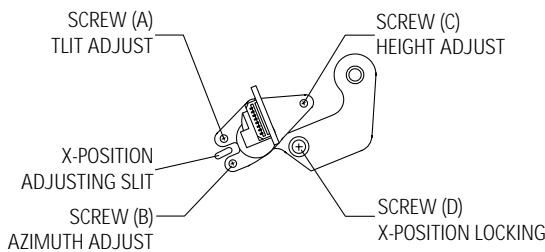


Fig. 2-3 Location of ACE Head Adjustment Screw

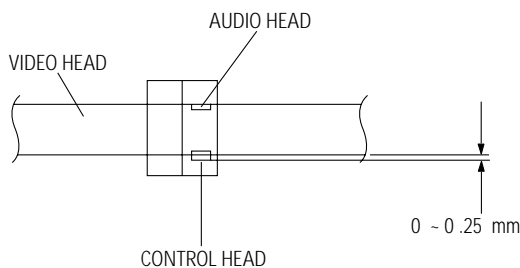


Fig. 2-4 ACE Head Height Adjustment

#### 2-2-1(b) ACE HEAD TILT ADJUSTMENT

- 1) Playback a blank tape and observe the position of the tape at the lower flange of tape guide.
- 2) Confirm that there is no curl or wrinkle at the lower flange of tape guide as shown in Fig. 2-5 (B).
- 3) If a curl or wrinkle of the tape occurs, slightly turn the screw (A) tilt adjust on the ACE head ass'y.
- 4) Reconfirm the ACE head height.

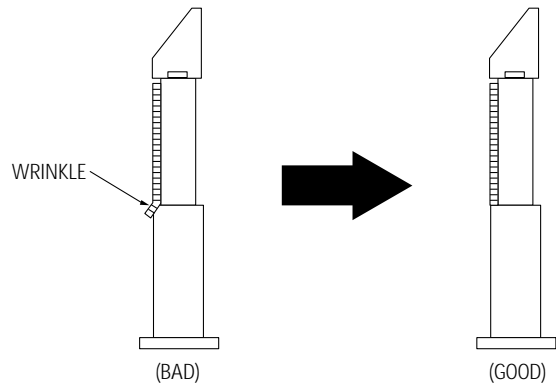


Fig. 2-5 Tape Guide Check

#### 2-2-1(c) AUDIO AZIMUTH ADJUSTMENT

- 1) Load alignment tape (Mono scope) and playback the NTSC : 7KHz (PAL : 6KHz) signal.
- 2) Connect channel-1 scope probe to audio output test point.
- 3) Adjust screw (B) to achieve maximum audio level. (See Fig. 2-3)

#### 2-2-1(d) ACE HEAD POSITION (X-POINT) ADJUSTMENT

- 1) See "2. Alignment and Adjustment" for ACE Head position (X-Point) adjustment.


### 2-2-2 Linearity adjustment (Guide roller S, T adjustment)

- 1) Playback the Mono Scope alignment tape (SP mode).
- 2) Observe the video envelope signal on an oscilloscope (triggered by the video switching pulse).
- 3) Make sure the video envelope waveform (at its minimum) meets the specification shown in Fig. 2-6.  
If it does not, adjust as follows :

**Note :**

- a=Maximum output of the video RF envelope.
- b=Minimum output of the video RF envelope at the entrance side.
- c=Minimum output of the video RF envelope at the center point.
- d=Maximum output of the video RF envelope at the exit side.

- 4) If the section A in Fig. 2-7 does not meet the specification, adjust the guide roller S up or down.
- 5) If the section B in Fig. 2-7 does not meet the specification, adjust the guide roller T up or down.

- 6) Play back the Mono Scope alignment tape (SP mode).
- 7) Connect an oscilloscope CH-1 to the Envelope and CH-2 to the H'D SW Pulse for triggering.
- 8) Turn the guide roller heads with a flat head (  ) driver to obtain a flat video RF envelope as shown in Fig. 2-8.

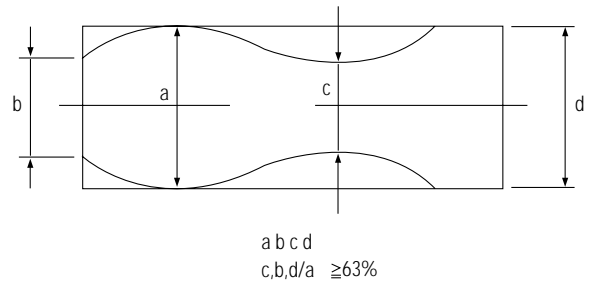


Fig. 2-6 Envelope Waveform Adjustment

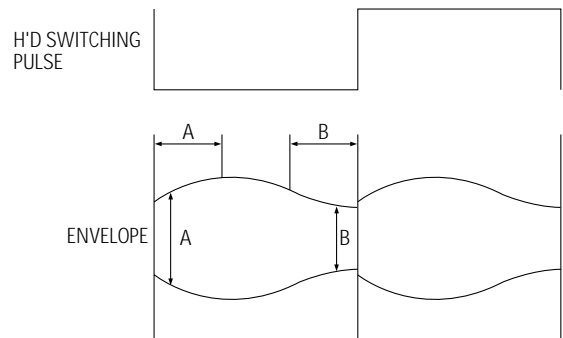


Fig. 2-7 Adjustment Points

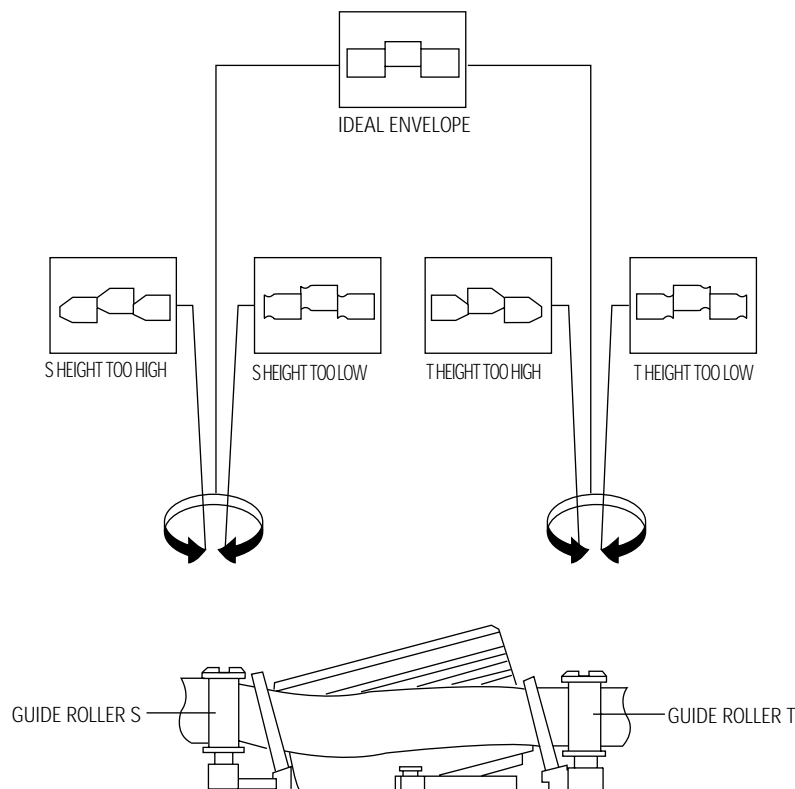


Fig. 2-8 Guide Roller S, T Height Adjustment

### 2-2-3 Check Transitional Operation from RPS to Play

Check transition from RPS mode to play mode :  
 Using a pre-recorded SP tape, make sure the entry side of envelope comes to an appropriate steady state within 3 seconds (as shown in Fig. 2-9).  
 If the envelope waveform does not reach specified peak-to-peak amplitude within 3 seconds, adjust as follows :

- 1) Make sure there is no gap between the supply roller lower flange and the tape.  
 If there is a gap, adjust the supply guide roller again.
- 2) Change operation mode from the RPS to the play mode (again) and make sure the entry side of envelope rises within 3 second.

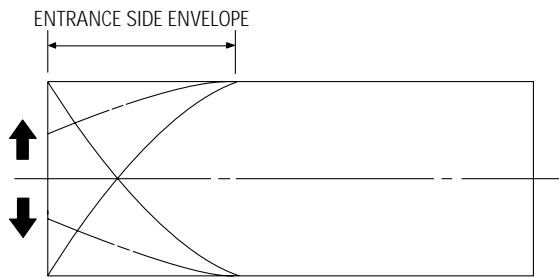


Fig. 2-9 Video Envelope Rising when Operation mode Changes from RPS to Play Mode

### 2-3 Reel Torque

- 1) The rotation of the capstan motor causes the Holder Clutch Ass'y to rotate through the Belt Pulley.
- 2) The spring wrap PLAY/REV of holder clutch ass'y drives the disk reel S, T through gear idle by rotation of gear center ass'y.
- 3) Brake is operated by slider cam at FF/REW mode.
- 4) Transportation of accurate driving force is done by gears. (Gear Center Ass'y)

**Note :** If the spec. does not meet the followings specifications, replace the holder clutch ass'y and then recheck.

### 2-2-4 Envelope Check

- 1) Make recordings on T-120 (E-120) and T-160 (E-180) tape.  
 Make sure the playback output envelope meets the specification as shown in Fig. 2-10.
- 2) Play back a self recorded tape (recording made on the unit using with T-120 (E-120)).  
 The video envelope should meet the specification as shown in Fig. 2-10.  
 In SP mode, (A) should equal (B).  
 If the head gap is wide, upper cylinder should be checked.

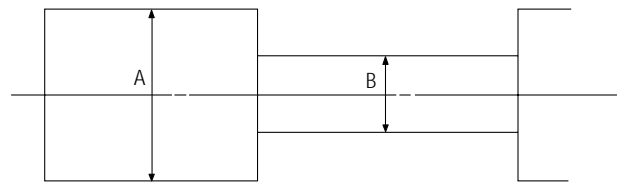


Fig. 2-10 Envelope Output and Output Level

### 2-2-5 Tape Wrinkle Check

- 1) Run the T-160 (E-180) tape in the playback, FPS, RPS and Pause modes and observe tape wrinkle at each guide.
- 2) If excessive tape wrinkle is observed, perform the following adjustments in Playback mode :
  - ◆ Tape wrinkle at the guide roller S, T section :  
Linearity adjustment.
  - ◆ Tape wrinkle at tape guide flange :  
ACE head assembly coarse adjustment.

<Table 2-1>

MODE	TORQUE g/cm	GAUGE
PB	42 ± 11	Cassette Torquemeter
RPS	145 ± 30	Cassette Torquemeter