


SHARP SERVICE MANUAL

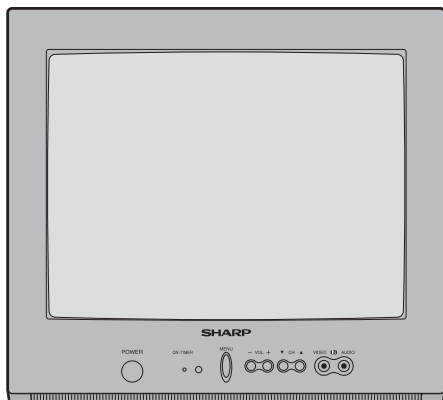

COLOR TELEVISION

Chassis No. GA-1'

MODEL **14LK14**

In the interests of user-safety (Required by safety regulations in some countries) the set should be restored to its original condition and only parts identical to those specified should be used.

CONTENTS

	Page
• ELECTRICAL SPECIFICATIONS	1
• IMPORTANT SERVICE SAFETY PRECAUTION	2
• LOCATION OF USER'S CONTROL	4
• INSTALLATION AND SERVICE INSTRUCTIONS	5
• CHASSIS LAYOUT	13
• BLOCK DIAGRAM	14
• DESCRIPTION OF SCHEMATIC DIAGRAMS	15
• PRINTED WIRING BOARD ASSEMBLIES	19
• REPLACEMENT PARTS LIST	22
• PACKING OF THE SET	27

ELECTRICAL SPECIFICATIONS

POWER INPUT	110-120 V AC 50/60 Hz
POWER RATING	53 W
PICTURE SIZE	574cm ² (88.97sq inch)
CONVERGENCE	Magnetic
SWEEP DEFLECTION	Magnetic
FOCUS	Hi-Bi-Potential Electrostatic
INTERMEDIATE FREQUENCIES	
Picture IF Carrier Frequency	45.75 MHz
Sound IF Carrier Frequency	41.25 MHz
Color Sub-Carrier Frequency	42.17 MHz
	(Nominal)
AUDIO POWER	
OUTPUT RATING	1W (at 10% distortion)

SPEAKER	
SIZE	9 cm x 5 cm
VOICE COIL IMPEDANCE	32 ohm at 400 Hz
ANTENNA INPUT IMPEDANCE	
VHF/UHF	75 ohm Unbalanced
TUNING RANGES	
VHF-Channels	2 thru 13
UHF-Channels	14 thru 69
CATV Channels	1 thru 125

Specifications are subject to change without prior notice.

IMPORTANT SERVICE SAFETY PRECAUTION

- Service work should be performed only by qualified service technicians who are thoroughly familiar with all safety checks and the servicing guidelines which follow:

WARNING

1. For continued safety, no modification of any circuit should be attempted.
2. Disconnect AC power before servicing.
3. Semiconductor heat sinks are potential shock hazards when the chassis is operating.
4. The chassis in this receiver has two ground systems which are separated by insulating material. The non-isolated (hot) ground system is for the B+ voltage regulator circuit and the horizontal output circuit. The isolated ground system is for the low B+ DC voltages and the secondary circuit of the high voltage transformer.
To prevent electrical shock use an isolation transformer between the line cord and power receptacle, when servicing this chassis.

SERVICING OF HIGH VOLTAGE SYSTEM AND PICTURE TUBE

When servicing the high voltage system, remove the static charge by connecting a 10k ohm resistor in series with an insulated wire (such as a test probe) between the picture tube ground and the anode lead. (AC line cord should be disconnected from AC outlet.)

1. Picture tube in this receiver employs integral implosion protection.
2. Replace with tube of the same type number for continued safety.
3. Do not lift picture tube by the neck.
4. Handle the picture tube only when wearing shatterproof goggles and after discharging the high voltage anode completely.

X-RADIATION AND HIGH VOLTAGE LIMITS

1. Be sure all service personnel are aware of the procedures and instructions covering X-radiation. The only potential source of X-ray in current solid state TV receivers is the picture tube. However, the picture tube does not emit measurable X-Ray radiation, if the high voltage is as specified in the "High Voltage Check" instructions.
It is only when high voltage is excessive that X-radiation is capable of penetrating the shell of the picture tube including the lead in the glass material. The important precaution is to keep the high voltage below the maximum level specified.
2. It is essential that servicemen have available at all times an accurate high voltage meter. The calibration of this meter should be checked periodically.
3. High voltage should always be kept at the rated value –no higher. Operation at higher voltages may cause a failure of the picture tube or high voltage circuitry and;also, under certain conditions, may produce radiation in exceeding of desirable levels.
4. When the high voltage regulator is operating properly there is no possibility of an X-radiation problem. Every time a color chassis is serviced, the brightness should be tested while monitoring the high voltage with a meter to be certain that the high voltage does not exceed the specified value and that it is regulating correctly.
5. Do not use a picture tube other than that specified or make unrecommended circuit modifications to the high voltage circuitry.
6. When trouble shooting and taking test measurements on a receiver with excessive high voltage, avoid being unnecessarily close to the receiver.
Do not operate the receiver longer than is necessary to locate the cause of excessive voltage.

IMPORTANT SERVICE SAFETY PRECAUTION

(Continued)

BEFORE RETURNING THE RECEIVER

(Fire & Shock Hazard)


Before returning the receiver to the user, perform the following safety checks.

1. Inspect all lead dress to make certain that leads are not pinched or that hardware is not lodged between the chassis and other metal parts in the receiver.
2. Inspect all protective devices such as non-metallic control knobs, insulating materials, cabinet backs, adjustment and compartment covers or shields, isolation resistor-capacity networks, mechanical insulators and etc.
3. To be sure that no shock hazard exists, check for leakage current in the following manner.
 - Plug the AC cord directly into a 110~220 volt AC outlet, (Do not use an isolation transformer for this test).
 - Using two clip leads, connect a 1.5k ohm, 10 watt resistor paralleled by a 0.15 μ F capacitor in series with all exposed metal cabinet parts and a known earth ground, such as electrical conduit or electrical ground connected to earth ground.
 - Use an AC voltmeter having with 5000 ohm per volt, or higher, sensitivity to measure the AC voltage drop across the resistor.

- Connect the resistor connection to all exposed metal parts having a return to the chassis (antenna, metal cabinet, screw heads, knobs and control shafts, escutcheon and etc.) and measure the AC voltage drop across the resistor.

All checks must be repeated with the AC ine cord plug connection reversed. (If necessary, a non-polarized adapter plug must be used only for the purpose of completing these check.)

Any current measured must not exceed 0.5 milliamp. Any measurements not within the limits outlined above indicate of a potential shock hazard and corrective action must be taken before returning the instrument to the customer.

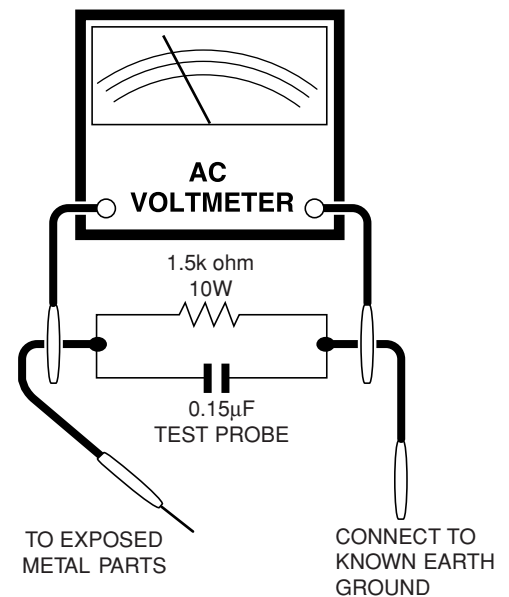

SAFETY NOTICE


Many electrical and mechanical parts in television receivers have special safety-related characteristics. These characteristics are often not evident from visual inspection, nor can protection afforded by them be necessarily increased by using replacement components rated for higher voltage, wattage, etc.

Replacement parts which have these special safety characteristics are identified in this manual; electrical components having such features are identified by " \triangle " and shaded areas in the Replacement Parts Lists and Schematic Diagrams.


For continued protection, replacement parts must be identical to those used in the original circuit. The use of substitute replacement parts which do not have the same safety characteristics as the factory recommended replacement parts shown in this service manual, may create shock, fire, X-radiation or other hazards.

LOCATION OF USER'S CONTROL

Front Panel

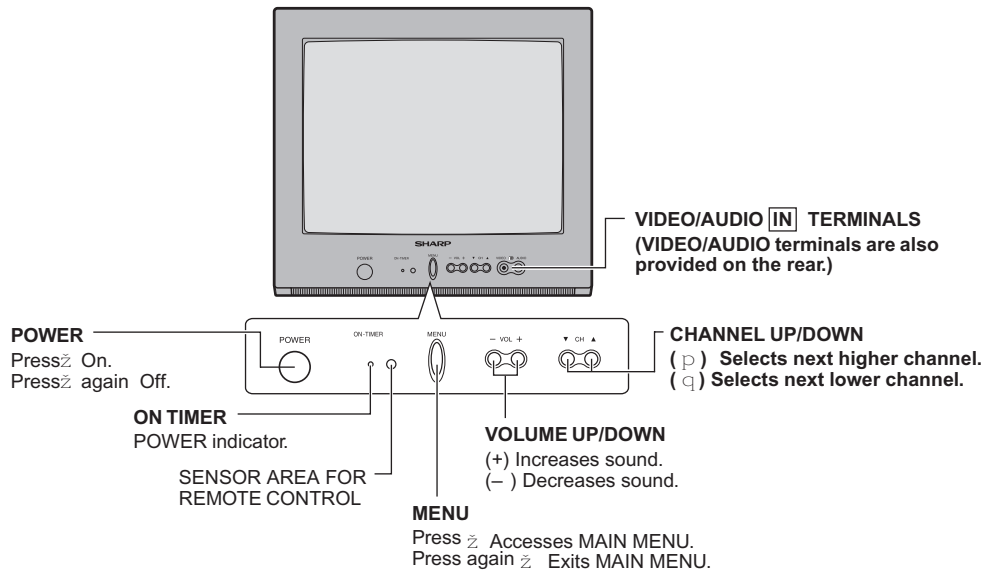

Basic Remote Control Functions

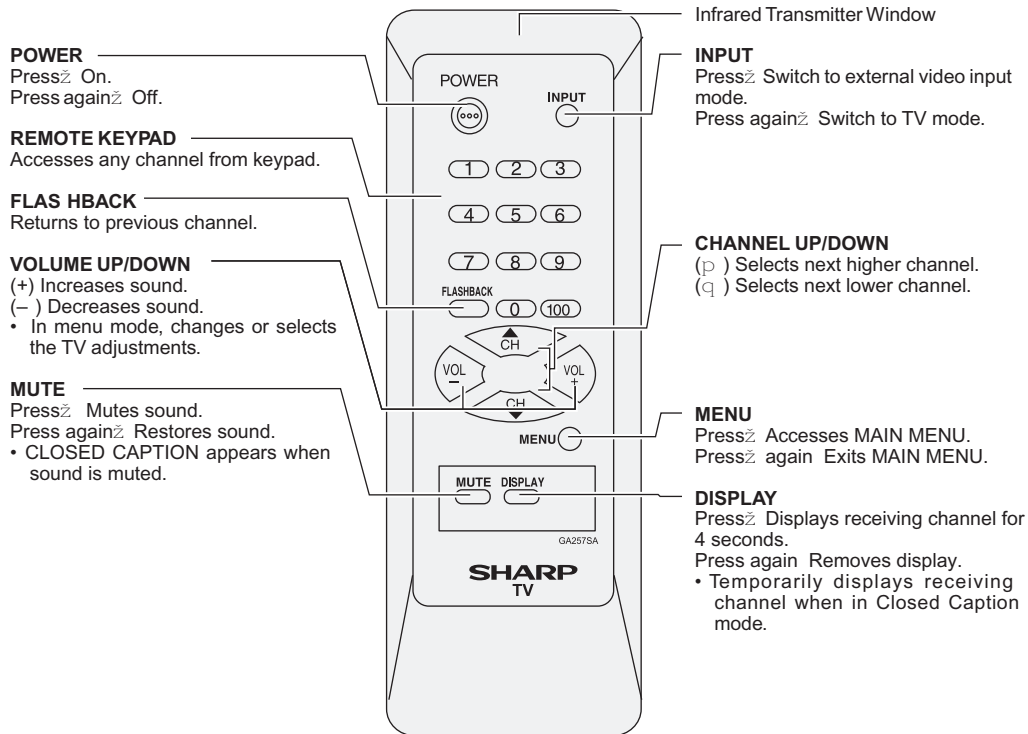

Note:

- The above shaded buttons on the Remote Control glow in the dark. To use the glow-in-the-dark display on the remote control, place it under a fluorescent light or other lighting.
- The phosphorescent material contains no radioactive or toxic material, so it is safe to use.
- The degree of illumination will vary depending on the strength of lighting used.
- The degree of illumination will decrease with time and depending on the temperature.
- The time needed to charge the phosphorescent display will vary depending on the surrounding lighting.
- Sunlight and fluorescent lighting are the most effective when charging the display.
- The TV set and remote control illustrations and the on-screen displays in this manual may differ from their actual appearance.

INSTALLATION AND SERVICE INSTRUCTIONS

- Note:** (1) When performing any adjustments to resistor controls and transformers use non-metallic screwdrivers or TV alignment tools.
 (2) Before performing adjustments, the TV set must be on at least 15 minutes.

CIRCUIT PROTECTION

The receiver is protected by a 3.15A fuse (F701), mounted on PWB-A, wired into one side of the AC line input.

+B DC REGULATOR CONFIRMATION

The + B DC output voltage adjustment is not included in this circuit. However, should confirmation be required proceed as follows.

1. Actuate receiver with 220V AC input voltage.
2. Receive a local channel.
3. Connect positive lead of digital voltmeter to C754 positive side on PWB-A ; negative lead to chassis ground.
4. Confirm this voltage reading is as below.

CAUTION: The reading should be within $130 \pm 2.0V$ DC to ensure normal function and circuitry reliability.

X-RADIATION PROTECTOR CIRCUIT TEST

After service has been performed on the horizontal deflection system, high voltage system, B+ system, test the X-Radiation protection circuit to ascertain proper operation as follows:

1. Apply 220V AC using a variac transformer for accurate input voltage.
2. Allow for warm up and adjust all customer controls for normal picture and sound.
3. Receive a good local channel.
4. Connect a digital voltmeter to TP653 and make sure that the voltmeter reads $21.1 \pm 1.5 V$.
5. Apply external 27.9V DC at TP653 by using an external DC supply, TV must be shut off.
6. To reset the protector, unplug the AC cord and make a short circuit between TP651 and TP652. Now make sure that normal picture appears on the screen.
7. If the operation of the horizontal oscillator does not stop in step 5, the circuit must be repaired before the set is returned to the customer.

HIGH VOLTAGE CHECK

High voltage is not adjustable but must be checked to verify that the receiver is operating within safe and efficient design limitations as specified checks should be as follows:

1. Connect an accurate high voltage meter between ground and anode of picture tube.
2. Operate receiver for at least 15 minutes at 110~220V AC line voltage, with a strong air signal or a properly tuned in test signal.
3. Receive a good local channel.
4. The voltage should be approximately, 23.5kV (at picture MAX, Bright center condition).
If a correct reading cannot be obtained, check circuitry for malfunctioning components. After the voltage test, make Y-mute off to the normal mode.

For adjustments of this model, the bus data is converted to various analog signals by the D/A converter circuit.

Note: There are still a few analog adjustments in this series such as focus and master screen voltage. Follow the steps below whenever the service adjustment is required. See "Table-B" to determine, if service adjustments are required.

1. Service mode

Before putting unit into the service mode, check that customer adjustments are in the normal mode. Use the reset function in the video adjustment menu to ensure customer controls are in their proper (reset) position.

2. Service item selection

Once in the service mode, press the Ch-up or Ch-down button on the remote controller or at the set. The service adjustment item will vary in increments of one. Select the item you wish to adjust.

3. Data number selection

Press the Vol-up or down button to adjust the data number.

To enter the service mode and exit service mode.

Short JA137&JA138 for 1 Second and release to switch to the service mode position, and the microprocessor is in input mode.(Adjustment through the I²C bus control.) To exit the service mode, turn the television off by pressing the power button.


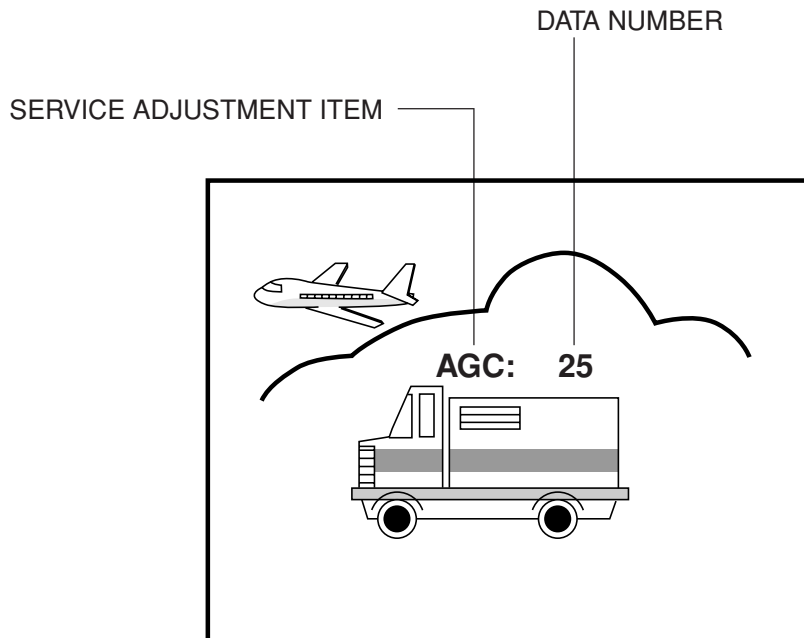


Figure A.

■ SERVICE MODE

(1) In the Service Mode, Key is used to select the mode in the following order.

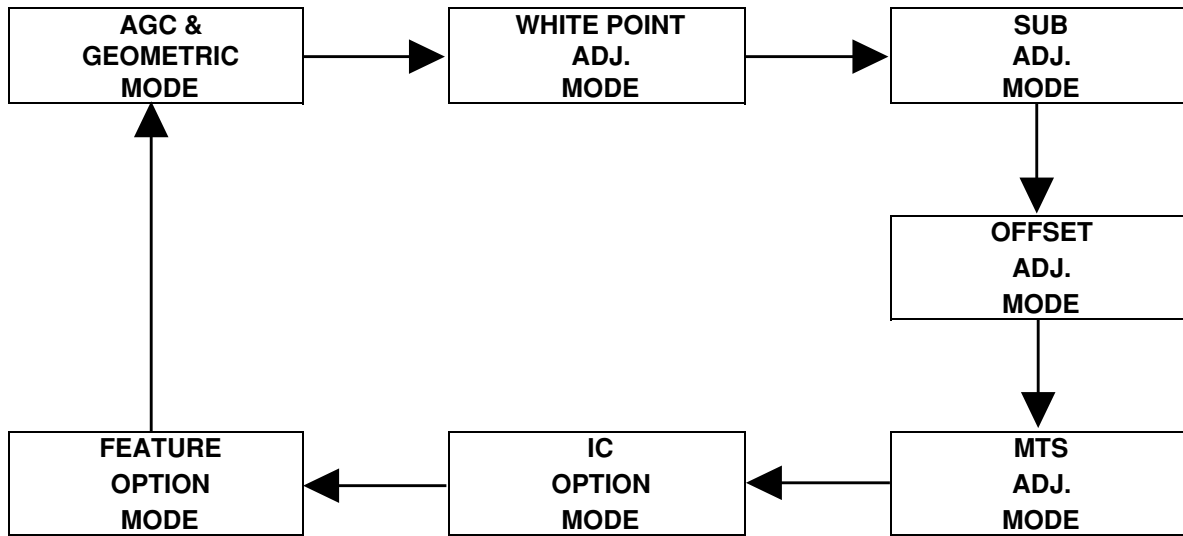

- AGC & GEOMETRIC MODE**
- ↓ AGC TAKE OVER POINT (AGC)
 - ↓ VERTICAL SLOPE (V-LIN)
 - ↓ VERTICAL AMP (V-AMP)
 - ↓ VERTICAL SHIFT (V-CENT)
 - ↓ VERTICAL ZOOM (V-ZOOM)
 - ↓ HORIZONTAL SHIFT (H-CENT)
 - ↓ EAST-WEST WIDTH (H-SIZE)
 - ↓ HORIZONTAL PARALLELOGRAM (EW//)
 - ↓ EAST-WEST PARABOLA / WIDTH (PARA)
 - ↓ EAST-WEST UPPER CORNER PARABOLA (COR(U))
 - ↓ EAST-WEST LOWER CORNER PARABOLA (COR(L))
 - ↓ EAST-WEST TRAPEZIUM (TRAPE)
 - ↓ HORIZONTAL BOW (HB)
 - ↓ S-CORRECTION (S-COR)

- WHITE POINT ADJ. MODE**
- ↓ W.P. RED OFFSET HIGH / OFFSET BLUE TONE (DRI-R-HI)
 - ↓ W.P. GREEN OFFSET HIGH / OFFSET BLUE TONE (DRI-G-HI)
 - ↓ W.P. BLUE OFFSET HIGH / OFFSET BLUE TONE (DRI-B-HI)
 - ↓ W.P. RED MH / STD (DRI-R-MH)
 - ↓ W.P. GREEN MH / STD (DRI-G-MH)
 - ↓ W.P. BLUE MH / STD (DRI-B-MH)
 - ↓ W.P. RED OFFSET ML / OFFSET RED TONE (DRI-R-ML)
 - ↓ W.P. GREEN OFFSET ML / OFFSET RED TONE (DRI-G-ML)
 - ↓ W.P. BLUE OFFSET ML / OFFSET RED TONE (DRI-B-ML)
 - ↓ W.P. RED OFFSET LOW (DRI-R-LO)
 - ↓ W.P. GREEN OFFSET LOW (DRI-G-LO)
 - ↓ W.P. BLUE OFFSET LOW (DRI-B-LO)

- SUB ADJ. MODE**
- ↓ MAX VOLUME (SUB-VOL)
 - ↓ SUB CONTRAST (SUB-CON)
 - ↓ SUB TINT (SUB-TINT)
 - ↓ SUB COLOUR (SUB-COL)
 - ↓ SUB BRIGHTNESS (SUB-BRI)
 - ↓ SUB SHARPNESS (SUB-SHP)
 - ↓ MAX HOTEL VOLUME (HTL-VOL)
 - ↓ HOTEL PROGRAM NO(HTL-PRG)
 - ↓ BLUE BACK CONTRAST (BB-CON)
 - ↓ OSD GRB REFERENCE (RGB)
 - ↓ BLACK LEVEL OFFSET R(CUT-R)
 - ↓ BLACK LEVEL OFFSET G(CUT-G)
 - ↓ CATHODE DRIVE LEVEL(CDL)



Figure B: ADJUSTMENT CATEGORIES

- ① Press the CH DOWN/UP key on the remote controller to get ready to select the mode one by one.
 - ② Press the CH DOWN/UP key on the remote controller to select the modes reversibly one by one.
 - ③ Using the VOLUME UP/DOWN key on the remote controller, the data can be modified.
- (OSD disturbance can be erased by R/C display key)**

SERVICE MODE

SERVICE POSITION	ADJUST ITEM	DATA			REMARK
		RANGE	INITIAL VALUE	FIX/ADJ	
AGC	AGC TAKE OVER POINT	0~63	14	ADJ	
V-LIN	VERTICAL SLOPE	0~63	32	ADJ	
V-AMP	VERTICAL AMP	0~63	32	ADJ	
V-CENT	VERTICAL SHIFT	0~63	32	ADJ	
V-ZOOM	VERTICAL ZOOM	0~63	32	FIX	
H-CENT	HORIZONTAL SHIFT	0~63	32	ADJ	
H-SIZE	EAST-WEST WIDTH	0~63	32	FIX	
EW//	HORIZONTAL PARALLELOGRAM	0~63	32	FIX	
PARA	EAST-WEST PARABOLA / WIDTH	0~63	32	FIX	
COR(U)	EAST-WEST UPPER CORNER PARABOLA	0~63	32	FIX	
COR(L)	EAST-WEST LOWER CORNER PARABOLA	0~63	32	FIX	
TRAPE	EAST-WEST TRAPEZIUM	0~63	32	FIX	
HB	HORIZONTAL BOW	0~63	32	FIX	
S-COR	S-CORRECTION	0~63	0	FIX	must be "17"
DRI-R-HI	"W,P RED OFFSET HIGH / OFFSET BLUE TONE"	0~63	32	FIX	must be "32"
DRI-G-HI	W.P. GREEN OFFSET HIGH / OFFSET BLUE TONE	0~63	32	FIX	must be "32"
DRI-B-HI	W.P.BLUE OFFSET HIGH / OFFSET BLUE TONE	0~63	32	FIX	must be "37"
DRI-R-MH	W.P. RED MH / STD	0~63	25	FIX	must be "32"
DRI-G-MH	W.P. GREEN MH / STD	0~63	32	ADJ	
DRI-B-MH	W.P. BLUE MH / STD	0~63	32	ADJ	
DRI-R-ML	W.P. RED OFFSET ML / OFFSET RED TONE	0~63	32	FIX	must be "32"
DRI-G-ML	W.P. GREEN OFFSET ML / OFFSET RED TONE	0~63	32	FIX	must be "32"
DRI-B-ML	W.P. BLUE OFFSET ML / OFFSET RED TONE	0~63	32	FIX	must be "25"
DRI-R-LO	W.P. RED OFFSET LOW	0~63	32	FIX	must be "32"
DRI-G-LO	W.P. GREEN OFFSET LOW	0~63	32	FIX	must be "22"
DRI-B-LO	W.P. BLUE OFFSET LOW	0~63	32	FIX	must be "19"
SUB-VOL	MAX VOLUME	0~63	63	FIX	must be "63"
SUB-CON	SUB CONTRAST	0~63	63	FIX	must be "52"
SUB-COL	SUB COLOUR	0~63	32	ADJ	
SUB-BRI	SUB BRIGHTNESS	0~63	32	ADJ	
SUB-TINT	SUB TINT	0~63	32	ADJ	
SUB-SHP	SUB SHARPNESS	0~63	32	FIX	must be "24"
HTL-VOL	MAX HOTEL VOLUME	0~63	32	FIX	
HTL-PRG	HOTEL PROGRAM NO	0~125 or >125 for none	255	FIX	
BB-CON	BLUE BACK CONTRAST	0~15	10	FIX	must be "5"
RGB	OSD GRB REFERENCE	0~15	15	FIX	must be "15"
CUT-R	BLACK LEVEL OFFSET R	0~63	32	ADJ	
CUT-G	BLACK LEVEL OFFSET G	0~63	32	ADJ	
CDL	CATHODE DRIVE LEVEL	0~15	0	FIX	must be "2"
DL-TV	Y-D TIME (TV) [YD]	0~15	12	FIX	must be "2"
DL-AV	Y-D TIME (AV) [YD]	0~15	12	FIX	must be "8"
INIT	INITIAL/DEFAULT LANGUAGE	0(English), 1(Spanish), 2(French)	0	FIX*	
FAO-VOL	FAO-MAX VOLUME	0~63	63	FIX	must be "63"
ESV_OFFS	ENERGY SAVE OFFSET	0~63	10	FIX	must be "20"
CCPOS	CLOSE CAPTION POSITION	0~255	32	ADJ	
ATT	ATTENUATE INPUT SIGNAL LEVEL	0~15	10	FIX	
VCO	VCO FREE RUNNING FREQUENCY ADJ.	0~63	32	FIX	
FILTER	"STEREO, SAP, DBX FILTER ADJ. "	0~63	28	FIX	
WIDEBAND	STEREO SEPARATION ADJUSTMENT (300HZ)	0~63	32	FIX	
SPECTRAL	STEREO SEPARATION ADJUSTMENT (3kHz)	0~63	27	FIX	
BASS	BASS LEVEL	0~15	8	FIX	
TREBLE	TREBLE LEVEL	0~15	8	FIX	
VSD	VERTICAL SCAN DISABLE	0 or 1 when item selected	0	FIX	
BKS	BLACK STRETCH	0(disable) or1(enable)	1	FIX	
AVL	AUTOMATIC VOLUME LEVELLING	0(disable) or1(enable)	1	FIX	
FFI	FAST FILTER IF-PLL	0(disable) or1(enable)	0	FIX	
EVG	ENABLE VERTICAL GUARD	0(disable) or1(enable)	1	FIX	
EHT	EHT TRACKING MODE	0(disable) or1(enable)	1	FIX	
OSO	OVERSCAN SWITCH OFF	0(disable) or1(enable)	0	FIX	
ACL	AUTO COLOUR LIMIT	0(disable) or1(enable)	0	FIX	
FCO	FORCED COLOUR-ON	0(disable) or1(enable)	0	FIX	
VMI	VIDEO MUTE AT IDENT LOSS	0(disable) or1(enable)	1	FIX	
VMC	VIDEO MUTE AT PROGRAM/SOURCE CHANGE	0(disable) or1(enable)	1	FIX	
HTL	HOTEL MODE	0(disable) or1(enable)	0	FIX	
BTSC	GAIN FM DEMODULATOR	0(disable) or1(enable)	0	FIX	
CP	CHARGE PUMP	0(fast tuning) or 1 (moderate speed tuning)	0	FIX	

SERVICE POSITION	ADJUST ITEM	DATA			REMARK
		RANGE	INITIAL VALUE	FIX/ADJ	
FMWS	FM WINDOW SELECTION	0(disable) or1(enable)	0	FIX	
SM0	SOUND MUTE BIT 0 (SM0)	0(disable) or1(enable)	1	FIX	
SM1	SOUND MUTE BIT 1	0(disable) or1(enable)	0	FIX	
AGC0	IF AGC SPEED BIT 0	0(disable) or1(enable)	1	FIX	
AGC1	IF AGC SPEED BIT 1	0(disable) or1(enable)	0	FIX	
FOA-FE	PHI 1 TIME CONSTANT FOR FE	0(disable) or1(enable)	0	FIX	
FOB-FE	PHI 1 TIME CONSTANT FOR FE	0(disable) or1(enable)	0	FIX	
FOA-AV	PHI 1 TIME CONSTANT FOR AV	0(disable) or1(enable)	1	FIX	
FOB-AV	PHI 1 TIME CONSTANT FOR AV	0(disable) or1(enable)	1	FIX	
FSL	FORCED SLICING LEVEL FOR VERTICAL SYNC.	0(disable) or1(enable)	0	FIX	
HP2	SYNCHRONISATION OF OSD/TEXT DISPLAY	0(disable) or1(enable)	0	FIX	
RGBL	RGB BLANK	0(disable) or1(enable)	0	FIX	
V-CHIP	V-CHIP	0(disable) or1(enable)	0	FIX	
MTS	MTS DECODING ENABLED	0(disable) or1(enable)	0	FIX	
DEMO	DEMO MODE	0(disable) or1(enable)	1	FIX	
CLOCK	REAL TIME CLOCK / ON TIMER	0(disable) or1(enable)	1	FIX*	
E-SAVE	ENERGY SAVE	0(disable) or1(enable)	1	FIX	
P PREF	PERSONAL PREFERENCE PROGRAM	0(disable) or1(enable)	0	FIX	
UNIV+	UNIVERSAL PLUS	0(disable) or1(enable)	0	FIX	
SPEAKER	SPEAKER ON/OFF	0(disable) or1(enable)	0	FIX	
FAO	FIXED AUDIO OUT	0(disable) or1(enable)	0	FIX	
VIEW-TM	VIEW TIMER	0(disable) or1(enable)	1	FIX*	
FRENCH	FRENCH LANGUAGE	0(disable) or1(enable)	1	FIX	
EZ-SETUP	EZ SETUP / AUTOPRESET	0(AUTOPRESET) or 1(EZ SETUP)	1	FIX	
W-TEMP	WHITE TEMP OR FAVORITE COLOR	0(FC) or 1(WT)	0	FIX	
AV	AV ENABLED OR DISABLED	0(without ext. source) or 1(with external source)	0	FIX	
AV2	AV2 ENABLED OR DISABLED	0(1 input) or 1(2 input)	0	FIX	
DSK	DYNAMIC SKIN CONTROL	0(disable) or1(enable)	0	FIX	
RPO0	RATIO PRE- AND OVERSHOOT BIT 0	0(disable) or1(enable)	0	FIX	
RPO1	RATIO PRE- AND OVERSHOOT BIT 1	0(disable) or1(enable)	0	FIX	
AGN	GAIN FM DEMODULATOR	0(normal) or1(+6dB)	0	FIX	
AUTO-OFF	AUTO SWITCH OFF ENABLED	0(disable) or1(enable)	1	FIX	

Table - A

Holding down to short JA137 & JA138 and turn on the main power SW will automatically write the initial values into IC1003.

This is only can done when a new EEPROM is used. (Judge with the first 4 bytes.)

PART REPLACED	ADJUSTMENT		NOTES
	NECESSARY	UNNECESSARY	
IC801		X	Data is stored in IC1003.
IC1003	X		Holding down to short JA137 & JA138 and turn on the main power SW will automatically write the initial values into IC1003. This is only can done when a new EEPROM is used. (Judge with the first 4 bytes.)
CRT	X		Adjust items related to picture tube only.

Table - B

■ SERVICE ADJUSTMENT

RF AGC Adjustment

1. Receive a good local channel.
2. Enter the service mode signal category and select the service adjustment "AGC".
3. Set the data value to point where no noise or beat appears.
4. Select another channel to confirm that no noise or beat appears.



CHROMA ADJUSTMENT

No.	Adjusting point	Adjusting procedure/conditions	Waveform and others
1	SUB-TINT (I²C BUS CONTROL)	<ol style="list-style-type: none"> 1. Receive the "Colour Bar" signal through AV in. 2. Connect the oscilloscope to TP853 (Pin (5) of P882) BLUE-OUT. <ul style="list-style-type: none"> • Range : 100mV/div. (AC)(Use Probe 10:1) • Sweep time : 10 μsec/div. 3. Call the "SUB-TINT" mode in service mode. Adjust the "SUB-TINT" bus data to obtain the waveform shown as Fig 1. 4. "SUB-TINT" bus data decrease 4 steps to get final waveform. (Fig 2.) 5. Clear the SERVICE mode. 	<p>Fig 1</p> <p>Fig 2</p>

HORIZONTAL AND VERTICAL DEFLECTION LOOP ADJUSTMENT

No.	Adjusting point	Adjusting procedure/conditions	Waveform and others
1	V-SLOPE(I²C BUS CONTROL)	<ol style="list-style-type: none"> 1. Receive Monoscope Pattern Signal. 2. Call the "V-LIN" mode. 3. Increase or decrease "V-LIN" by Volume key till the horizontal line in the center of monoscope is just at the position where the blanking starts. 	
2	V-CENTER (I²C BUS CONTROL)	<ol style="list-style-type: none"> 1. Call the "V-CENT" mode. 2. Increase or decrease "V-CENT" by Volume key till the picture is centered. 	
3	V - AMP (I²C BUS CONTROL)	<ol style="list-style-type: none"> 1. Call the "V-AMP" mode. 2. Increase or decrease "V - AMP" by Volume key to set overscan of 10.0% typical. Adjustment Spec 10.0% range ±1%. 	
4	S-CORRECTION (I²C BUS CONTROL)	FIXED DATA, NO NEED TO ADJUST.	
5	H - CENTER	<ol style="list-style-type: none"> 1. Call the "H-CENT" mode. 2. Increase or decrease "H-CENT" by Volume key to center the picture horizontal. 	
6	Focus adjustment	<ol style="list-style-type: none"> 1. Receive the "Monoscope Pattern" signal. 2. Press R/C to set Picture NORMAL condition. 3. Adjust the focus control to get the best focus. 	


CRT CUT-OFF, BACKGROUND AND SUB-CONTRAST ADJUSTMENT

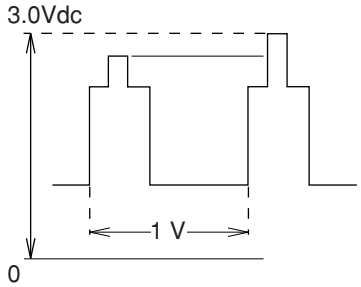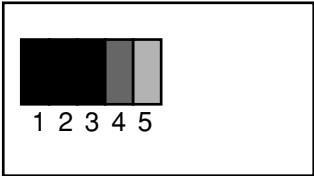No.	Adjusting point	Adjusting procedure/conditions	Waveform and others
1	CRT CUTOFF ADJUSTMENT (I²C BUS CONTROL)	1. Switch TV to VIDEO mode, BLUE BACK OFF, with NO VIDEO signal. 2. Press R/C to set Picture Normal condition. 3. Connect the oscilloscope to Red OUT from IC801.(TP47R) <div style="text-align: center;"> Range : 1 V/Div (DC) Sweep : 5 msec/Div </div> 4. Adjust SCREEN VR ,so that the tip of signal reach 3.0 Vdc + 0.1 Vdc.	
2	SUB-BRIGHTNESS ADJUSTMENT (I²C BUS CONTROL)	1. Call " SUB-BRI" in service mode. (Receive Cross-hatch pattern with 5 black level windows) 2. Adjust the " SUB BRIGHT " bus data in order that the line 1, 2 and 3 have the same darkness wherelse line 4 is slightly brighter than line 1, 2 and 3 and finally line 5 will be the brighter than line 4.	 <p style="text-align: center;">1, 2, 3 are in same black level.</p>
3	WHITE BALANCE SERVICE MODE ADJ. (I²C BUS CONTROL)	1. Receive the "Monoscope Pattern" signal. 2. Press R/C to set Picture NORMAL condition. 3. Connect the DC miliammeter between the TP 602 (-) TP 603 (+). 4. Check Beam current should be around (720μA) 5. Set it to service mode and adjust the DRI-G-MH, & DRI-B-MH data to have a colour temperature of 11,600°K (white). 6. Receive "WHITE" pattern, WITH BURST signal, and set BRIGHTNESS Y by generator, to ** 10 cd/m ² (MINOLTA CA-100) by reducing LUMINATE Y signal. 7. Adjust "CUT-R" & "CUT-G" to get 11,600°K. Then go back NORMAL mode (HIGH BRIGHT**) to check colour temperature. If out of range, back to (1). <p style="text-align: center;">Note: This adjustment must be done after warming up the unit for 30 minutes or longer with a beam current over 500μA.</p> <div style="border: 1px solid black; padding: 5px; width: fit-content; margin: 0 auto;"> DRI-R-MH=32 (FIXED) DRI-G-MH=33 (FIXED) DRI-B-MH=37 (FIXED) DRI-R-MH=32 (FIXED) </div>	# 11,600° K X : 0.273 Y : 0.280 (MINOLTA COLOUR ANALYZER CA-100) *NOTE: Above DATA can be UP/ DOWN by volume key. <div style="text-align: center;"> LOW HIGH 14" 1.8cd/m² 115cd/m² </div> * 11,600° K DRI-GW="DRI-GS"DATA-5 DRI-BW="DRI-BS" DATA-5
4	Maximum beam check	1. Receive the "Monoscope Pattern" signal. 2. Press R/C to set Picture NORMAL condition. 3. Connect the DC miliammeter between TP603 (+) and TP602 (-). (Full Scale: 3 mA Range) 4. Beam current must be within 720 ± 50 μA.	


CHASSIS LAYOUT

H
G
F
E
D
C
B
A

PWB - B
DUNTKA542WE
CRT

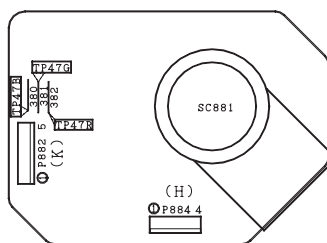


PWB - A
DUNTKA541WE
MAIN

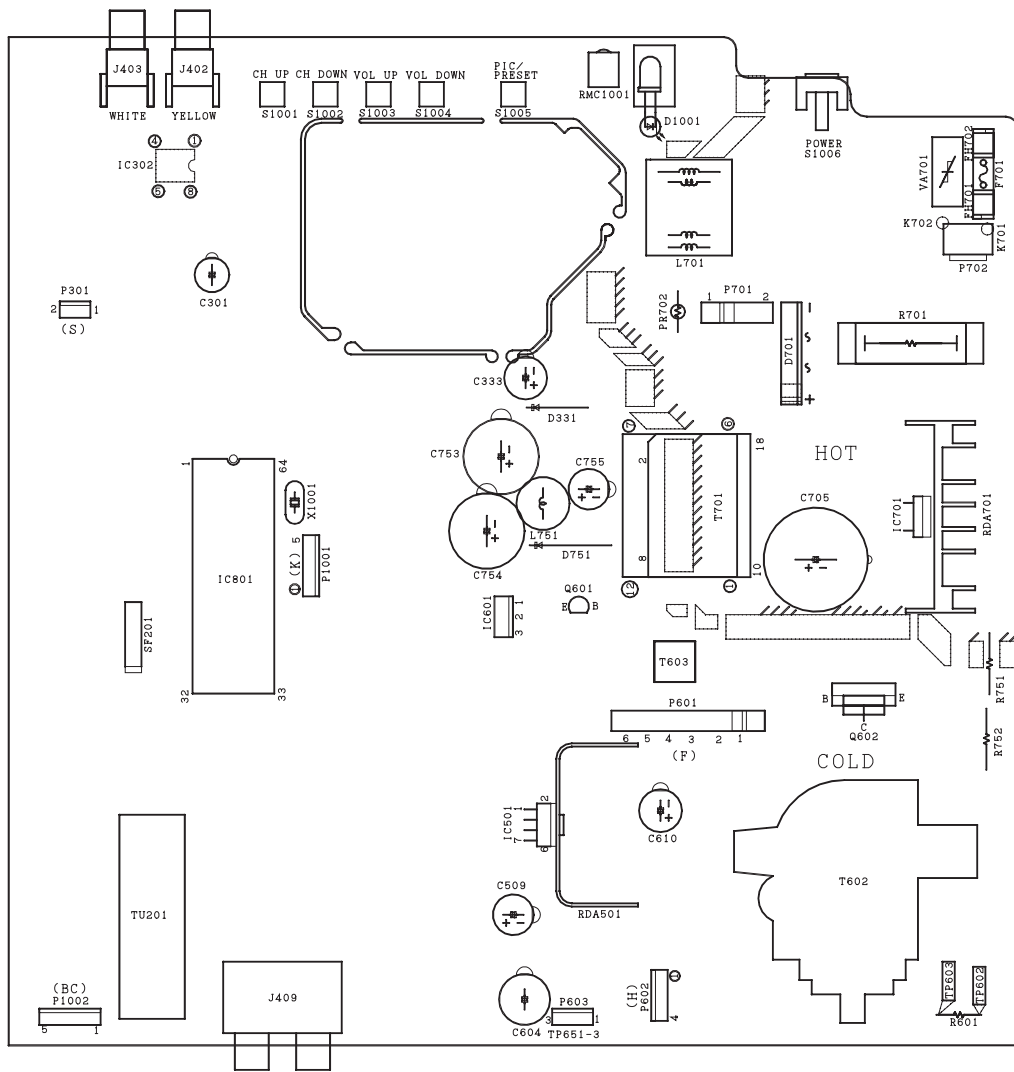

1 2 3 4 5 6

BLOCK DIAGRAM

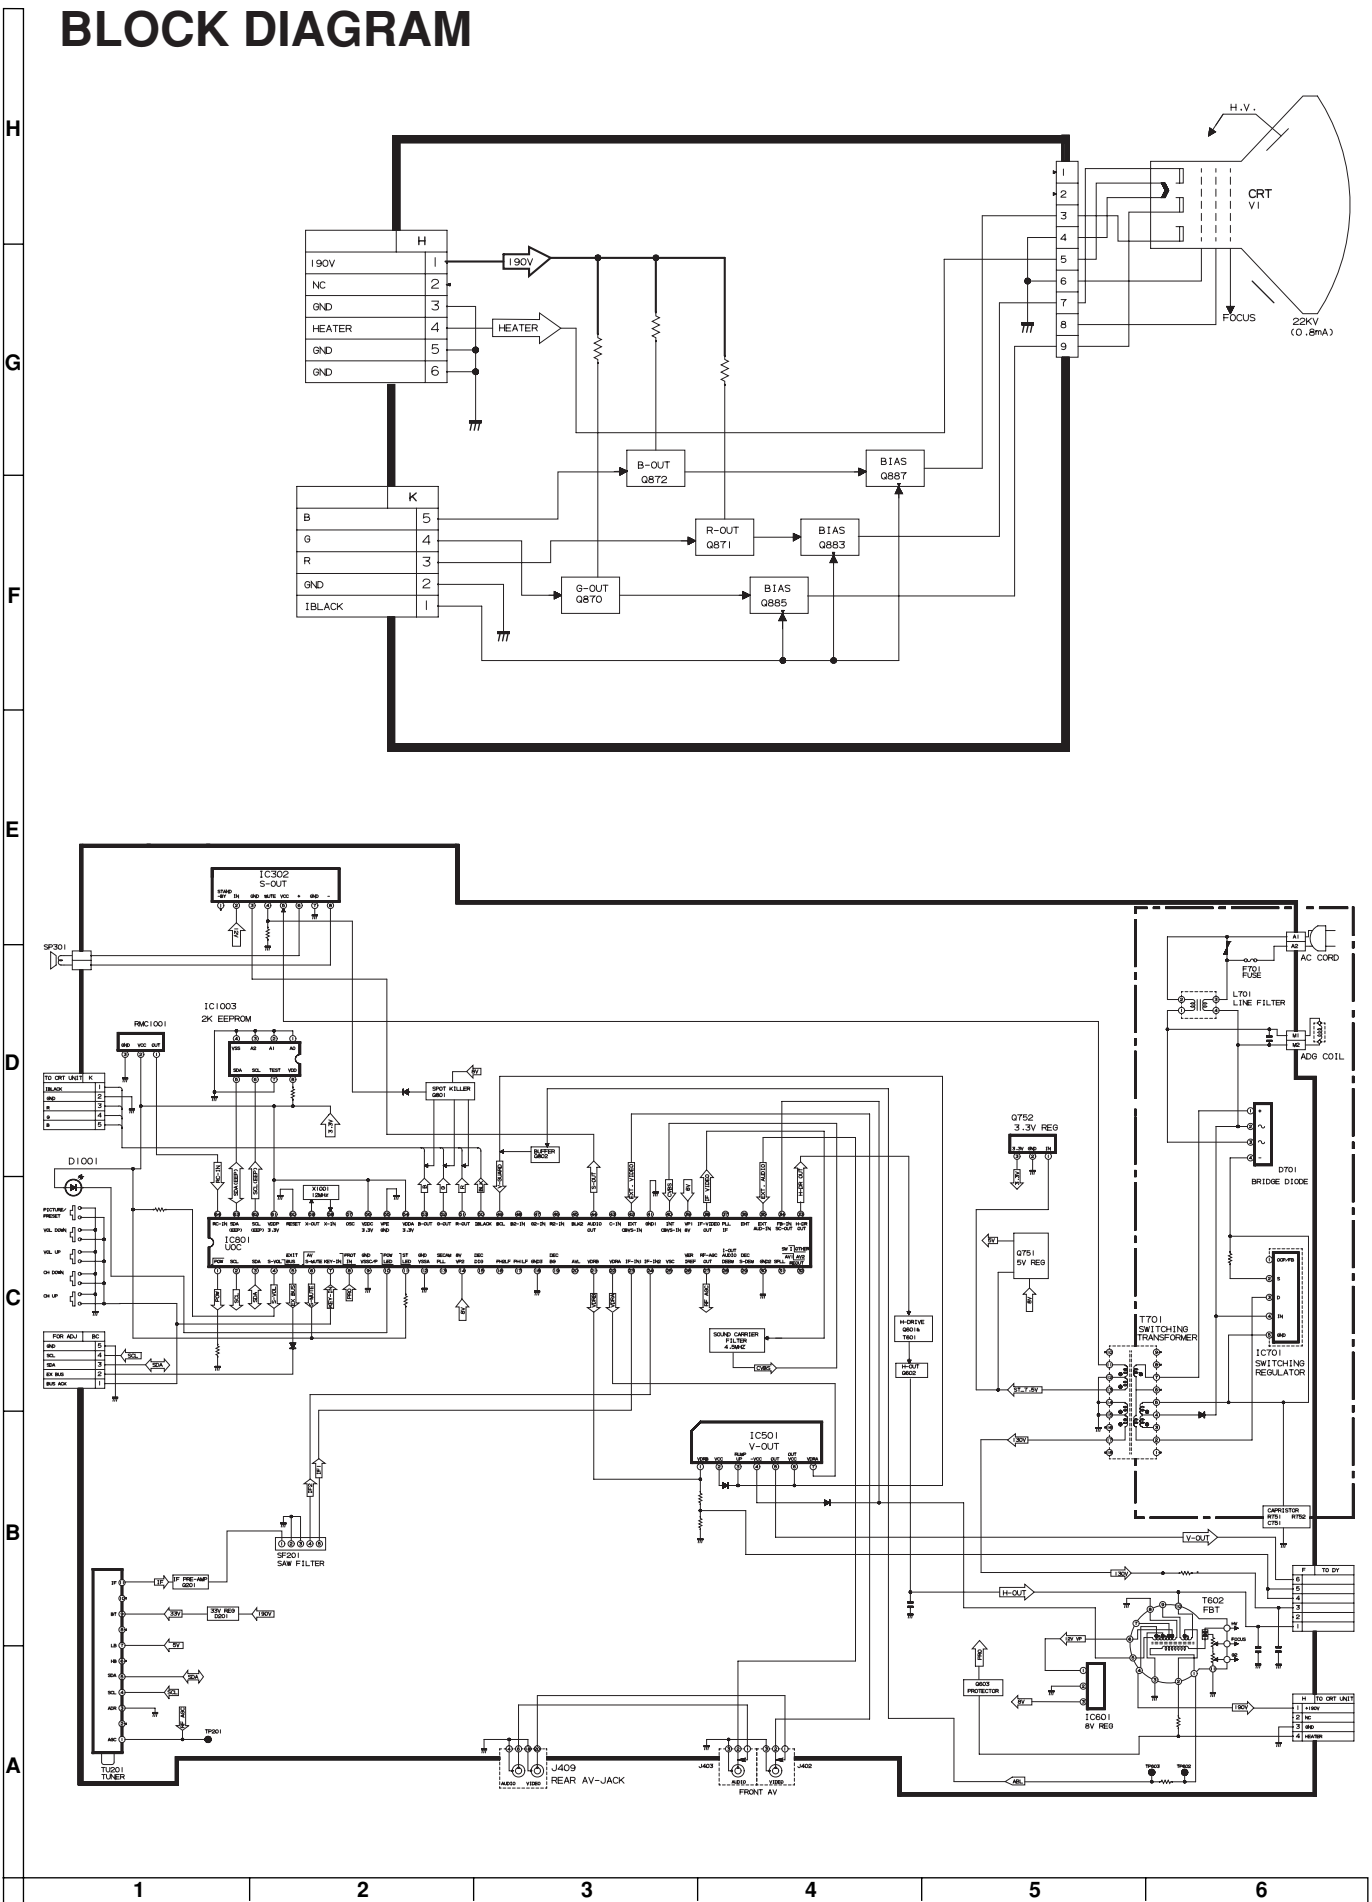

DESCRIPTION OF SCHEMATIC DIAGRAM

NOTES:

1. The unit of resistance "ohm" is omitted.
($K=k\Omega=1000\Omega$, $M=M\Omega$)
2. All resistors are 1/16 watt, unless otherwise noted.
3. All capacitors are μF , unless otherwise noted.
($P=pF=\mu\mu F$)
4. (G) indicates $\pm 2\%$ tolerance may be used.
5. \perp indicates line isolated ground.
6. \downarrow indicates hot ground.

VOLTAGE MEASUREMENT CONDITIONS:

1. All DC voltages are measured with DVM connected between points indicated and chassis ground, line voltage set at 120V AC and all controls set for normal picture unless otherwise indicated.
2. All voltages measured with 1000 μ V B & W or Color signal.


WAVEFORM MEASUREMENT CONDITIONS:

1. Photographs taken on a standard gated color bar signal, the tint setting adjusted for proper color. The wave shapes at the red, green and blue cathodes of the picture tube depend on the tint, color level and picture control.
2. \odot indicates waveform check points (See chart, waveforms are measured from point indicated to chassis ground.)


\triangle AND SHADED () COMPONENTS = SAFETY RELATED PARTS.
 \blacktriangle MARK= X-RAY RELATED PARTS.

This circuit diagram is a standard one, printed circuits may be subject to change for product improvement without prior notice.


WAVEFORMS

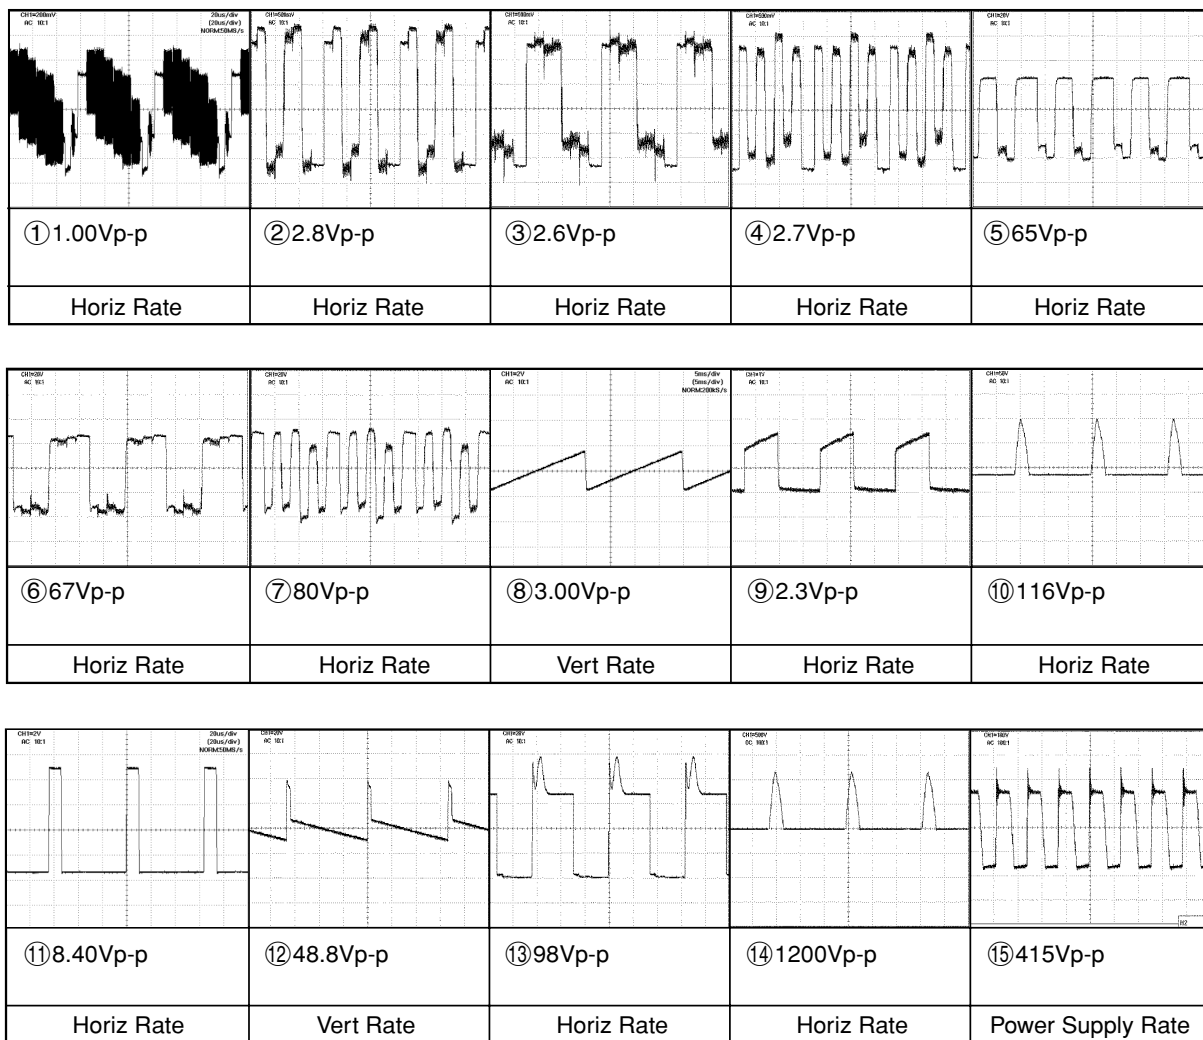

SCHEMATIC DIAGRAM: MAIN-1 Unit

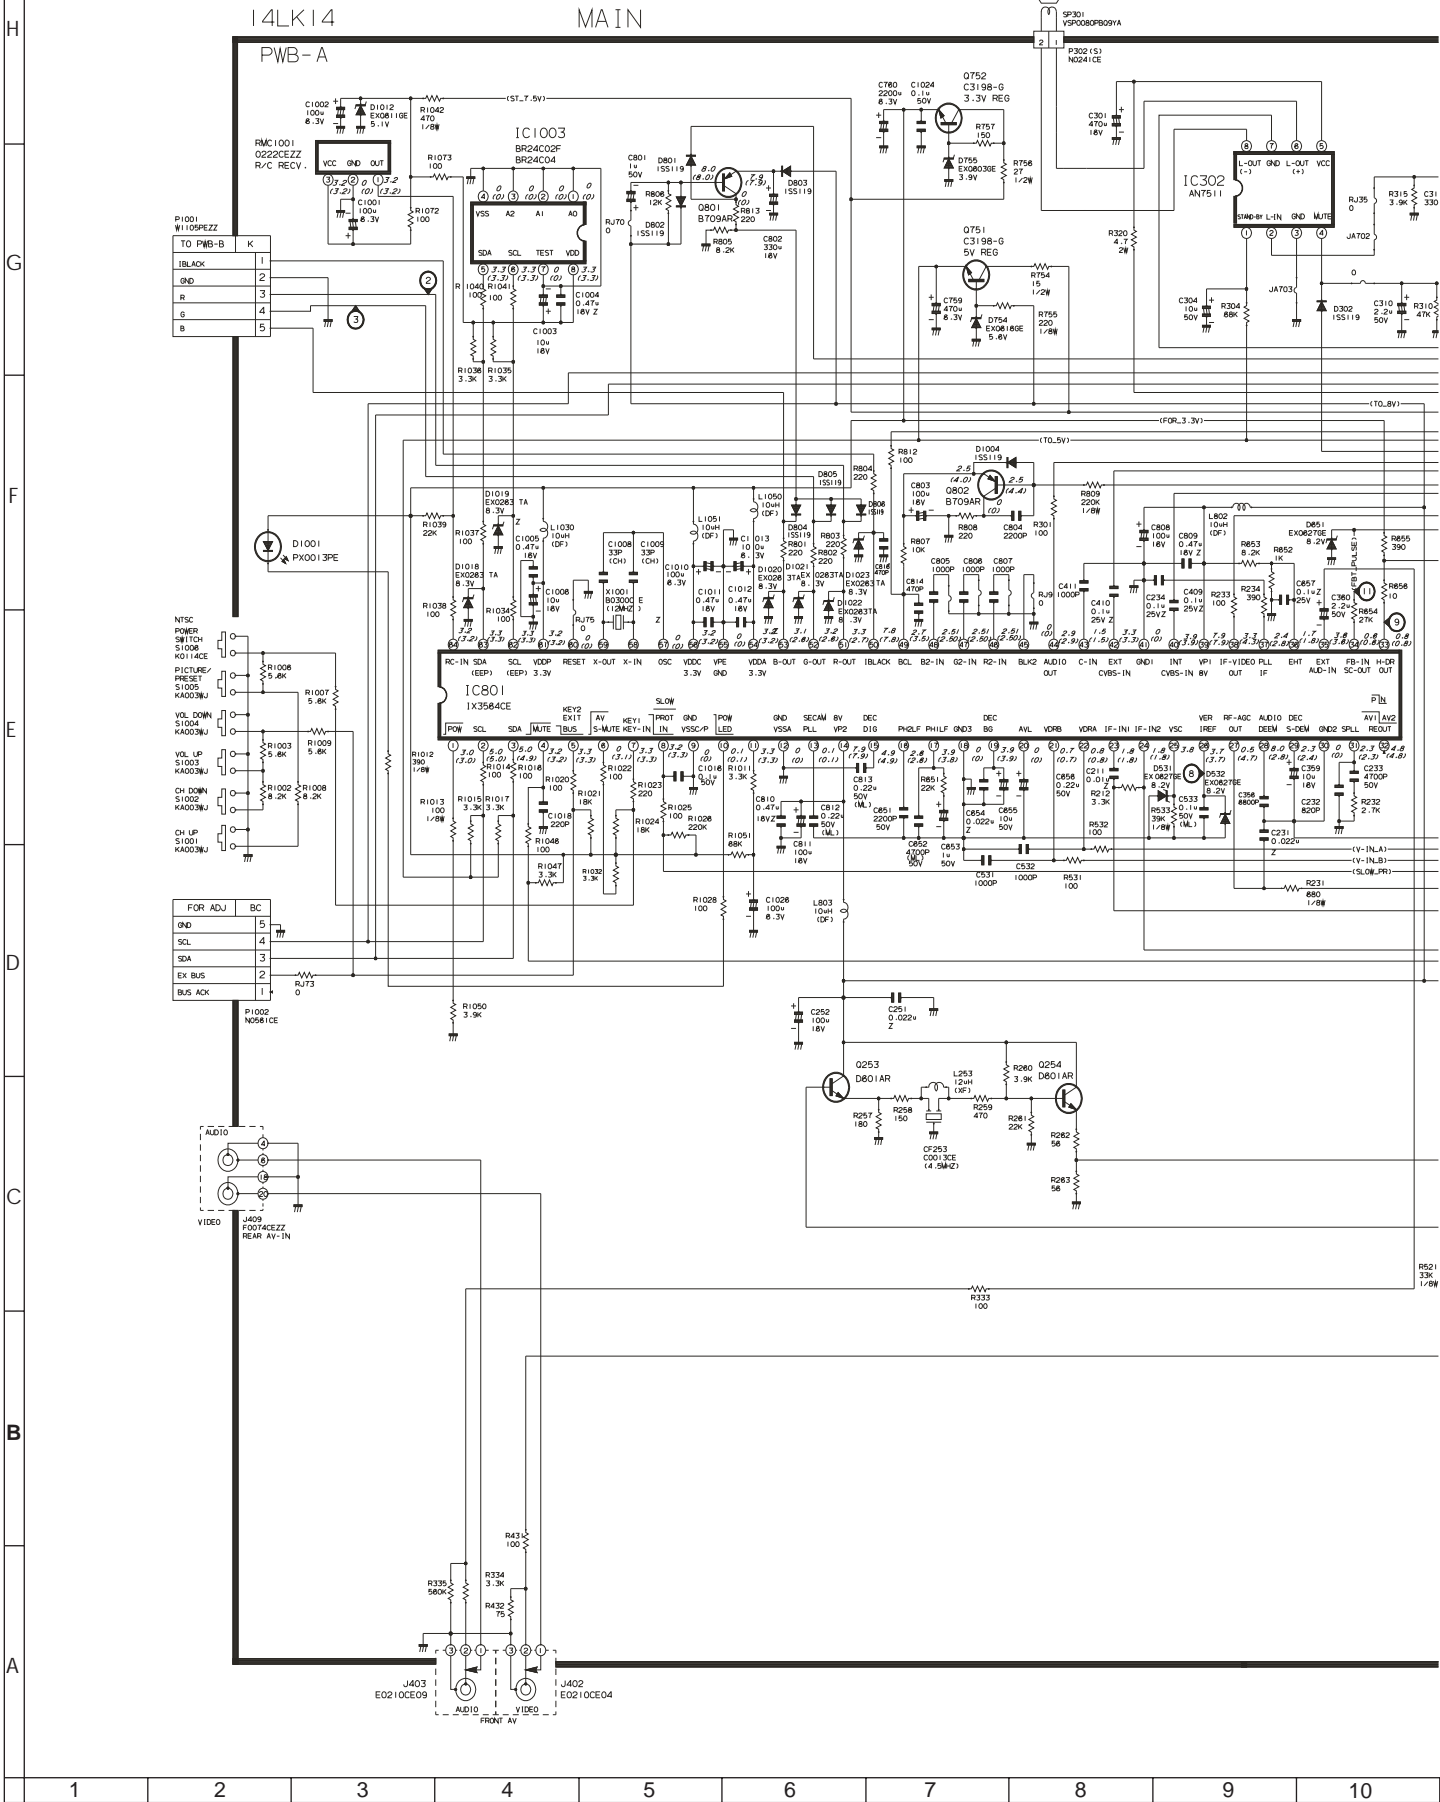


NOTE: 1. THE UNIT OF RESISTANCE "OHM" IS OMITTED (X1000 OHMS=KOHM);
2. ALL RESISTORS ARE 1/8W UNLESS OTHERWISE NOTED.
3. UNIT OF ALL CAPACITORS ARE μ F UNLESS OTHERWISE NOTED.
(i.e. P, ETC.).

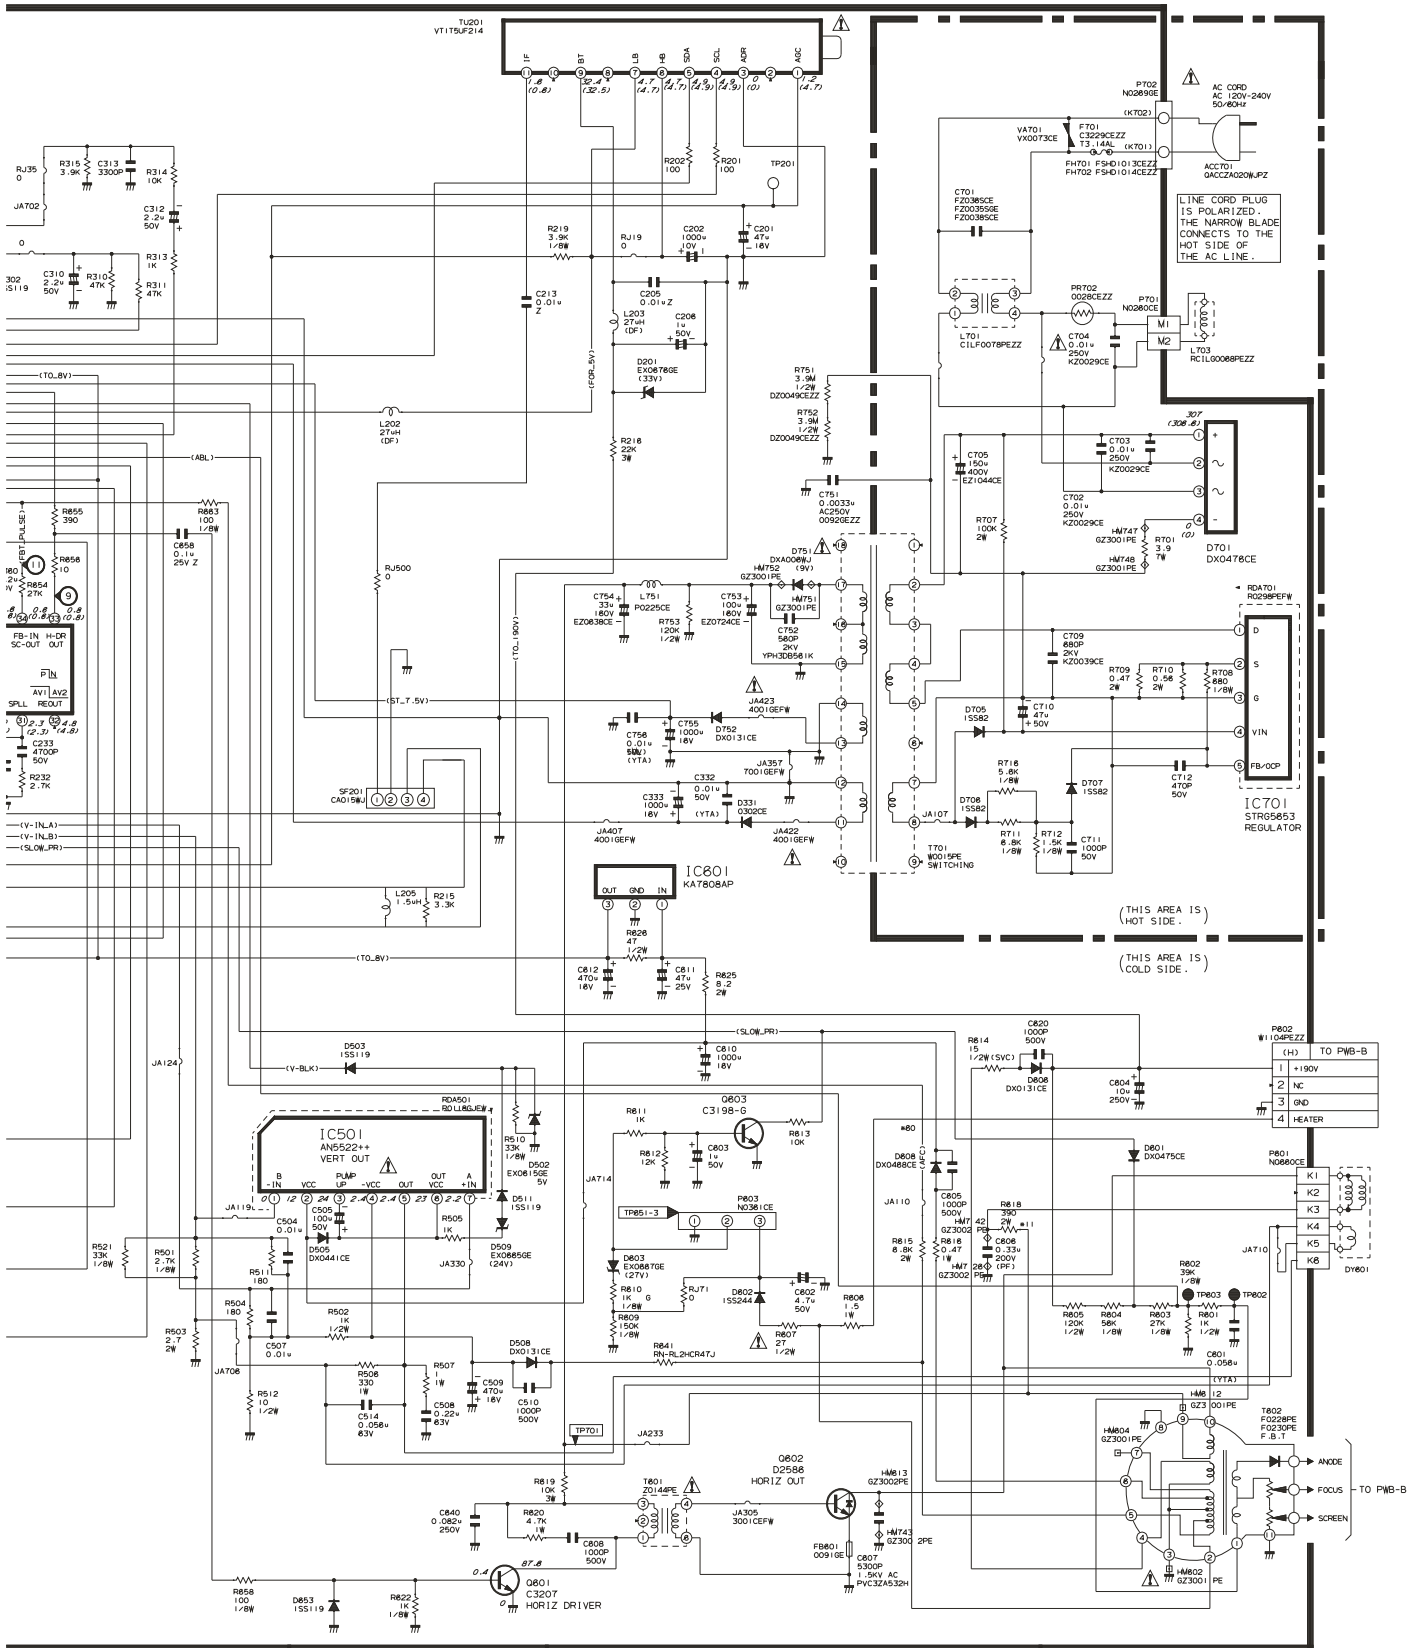

10	11	12	13	14	15	16	17	18	19
----	----	----	----	----	----	----	----	----	----

SCHEMATIC DIAGRAM: CRT Unit

H
G
F
E
D
C
B
A

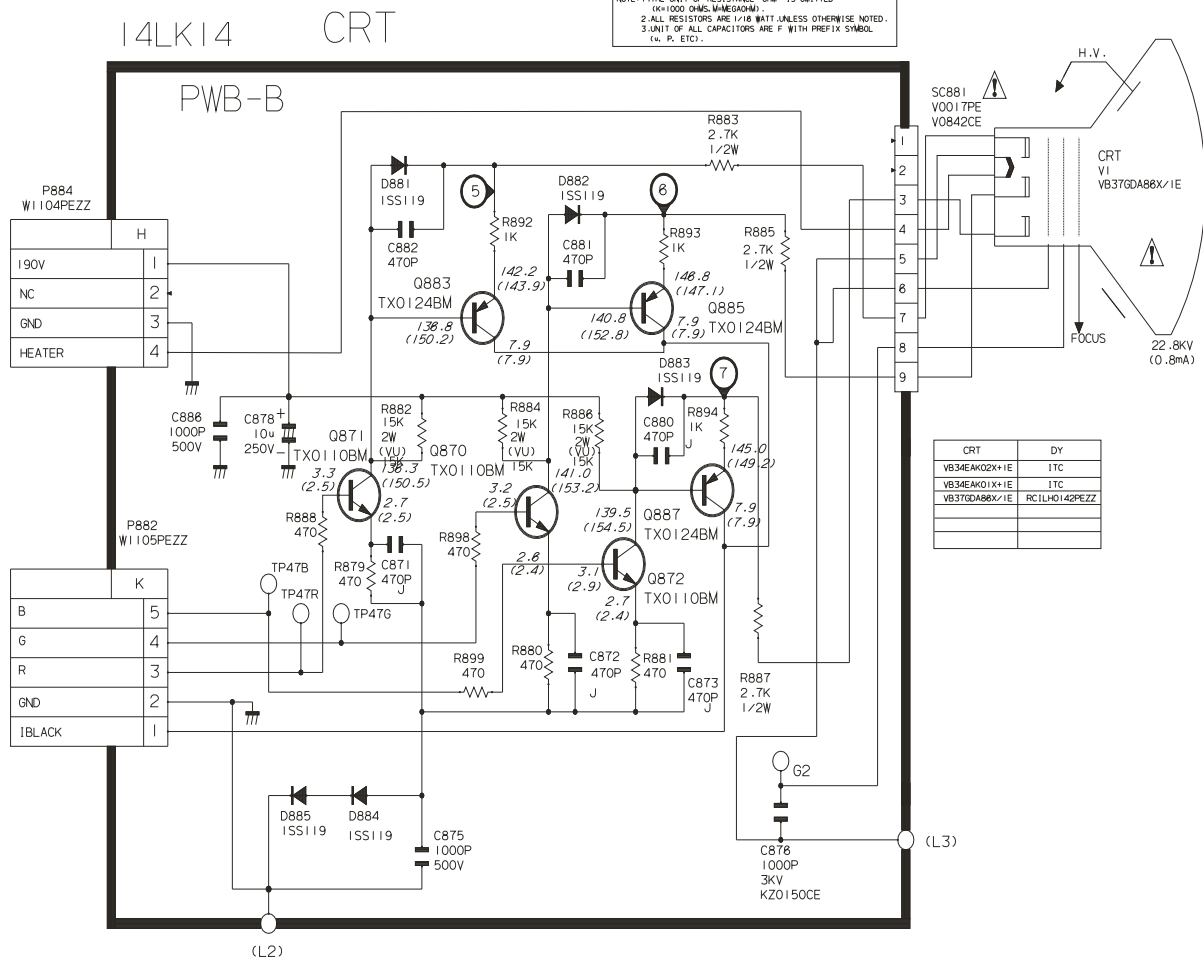


CRT	DY
VB34EAK02X/1E	1TC
VB34EAK01X/1E	1TC
VB37GDA88X/1E	RCILH0142PEZZ


1 2 3 4 5 6

PRINTED WIRING BOARD ASSEMBLIES

H
G
F
E
D
C
B
A

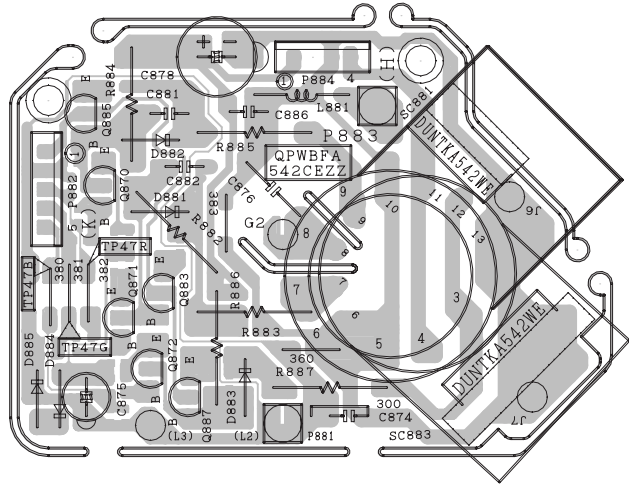


PWB-B: CRT Unit (Wiring Side)

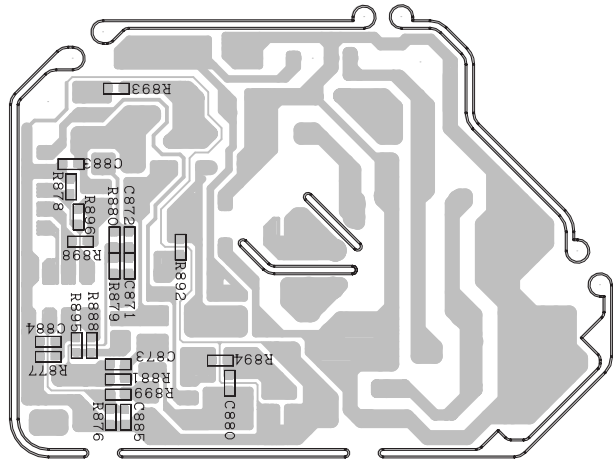

PWB-B: CRT Unit (Chip Parts Side)


1 2 3 4 5 6

H
G
F
E
D
C
B
A

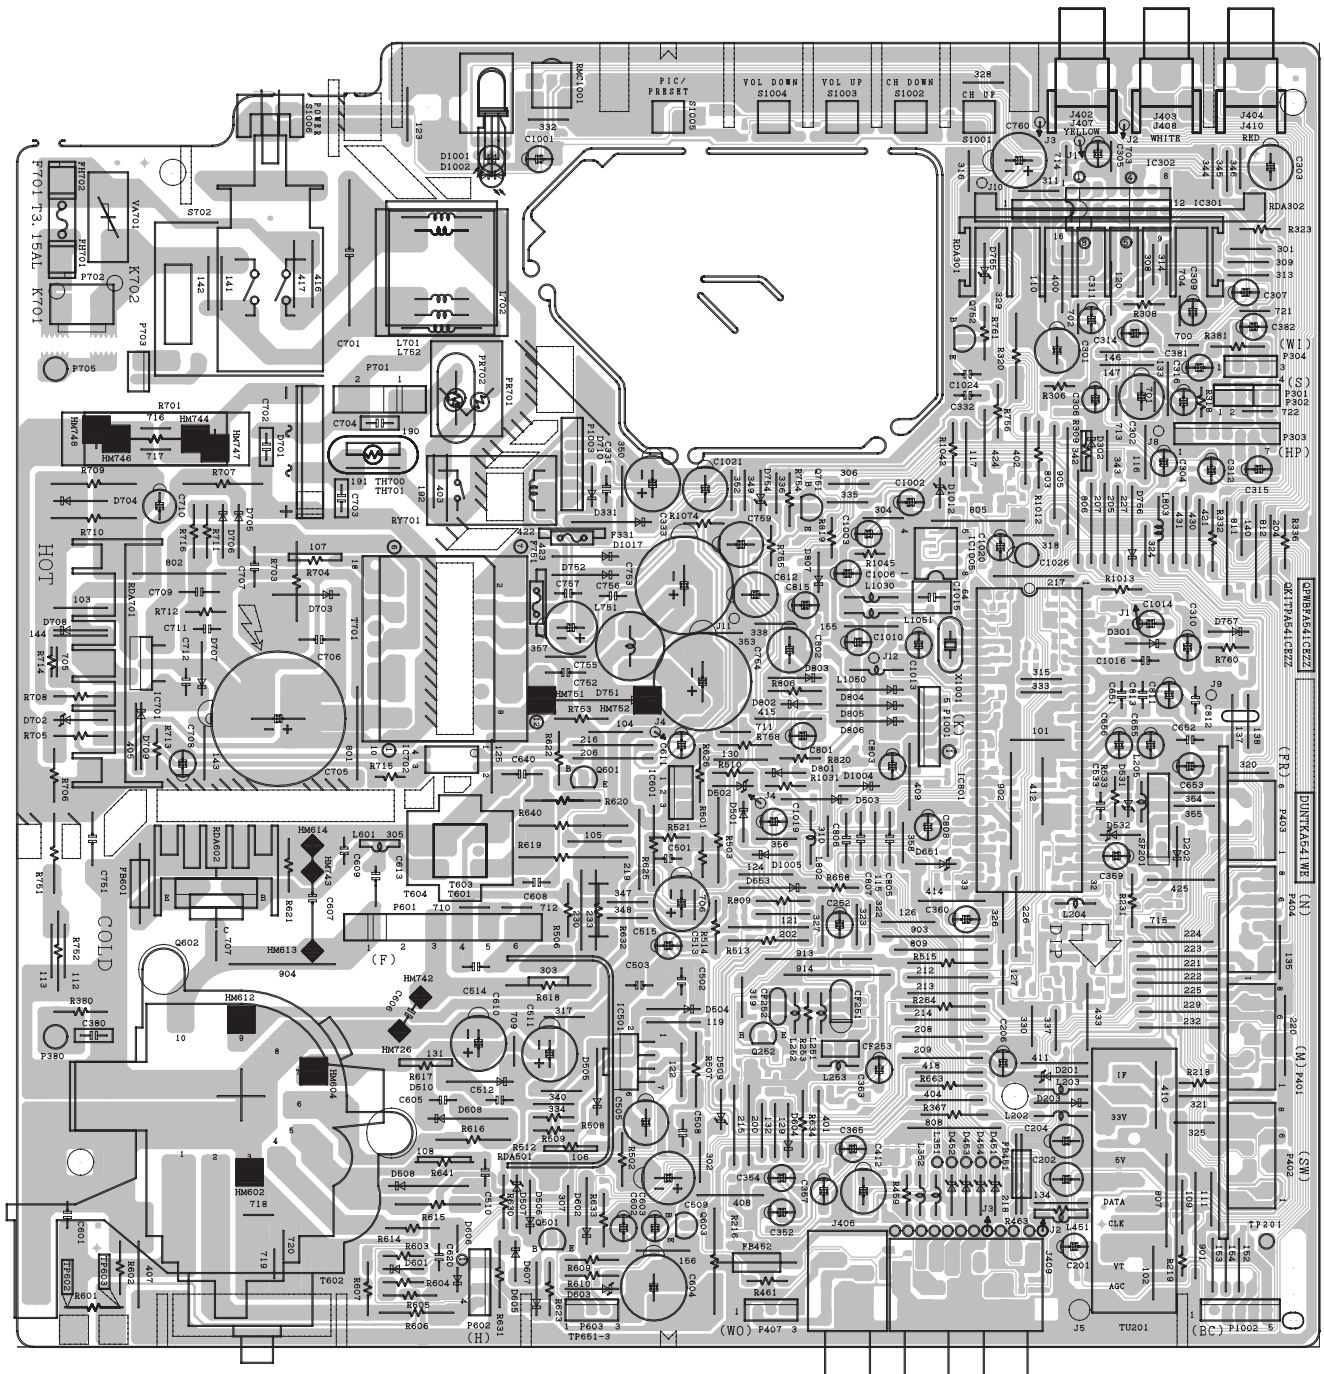

PWB-A: MAIN Unit (Wiring Side)

1 2 3 4 5 6

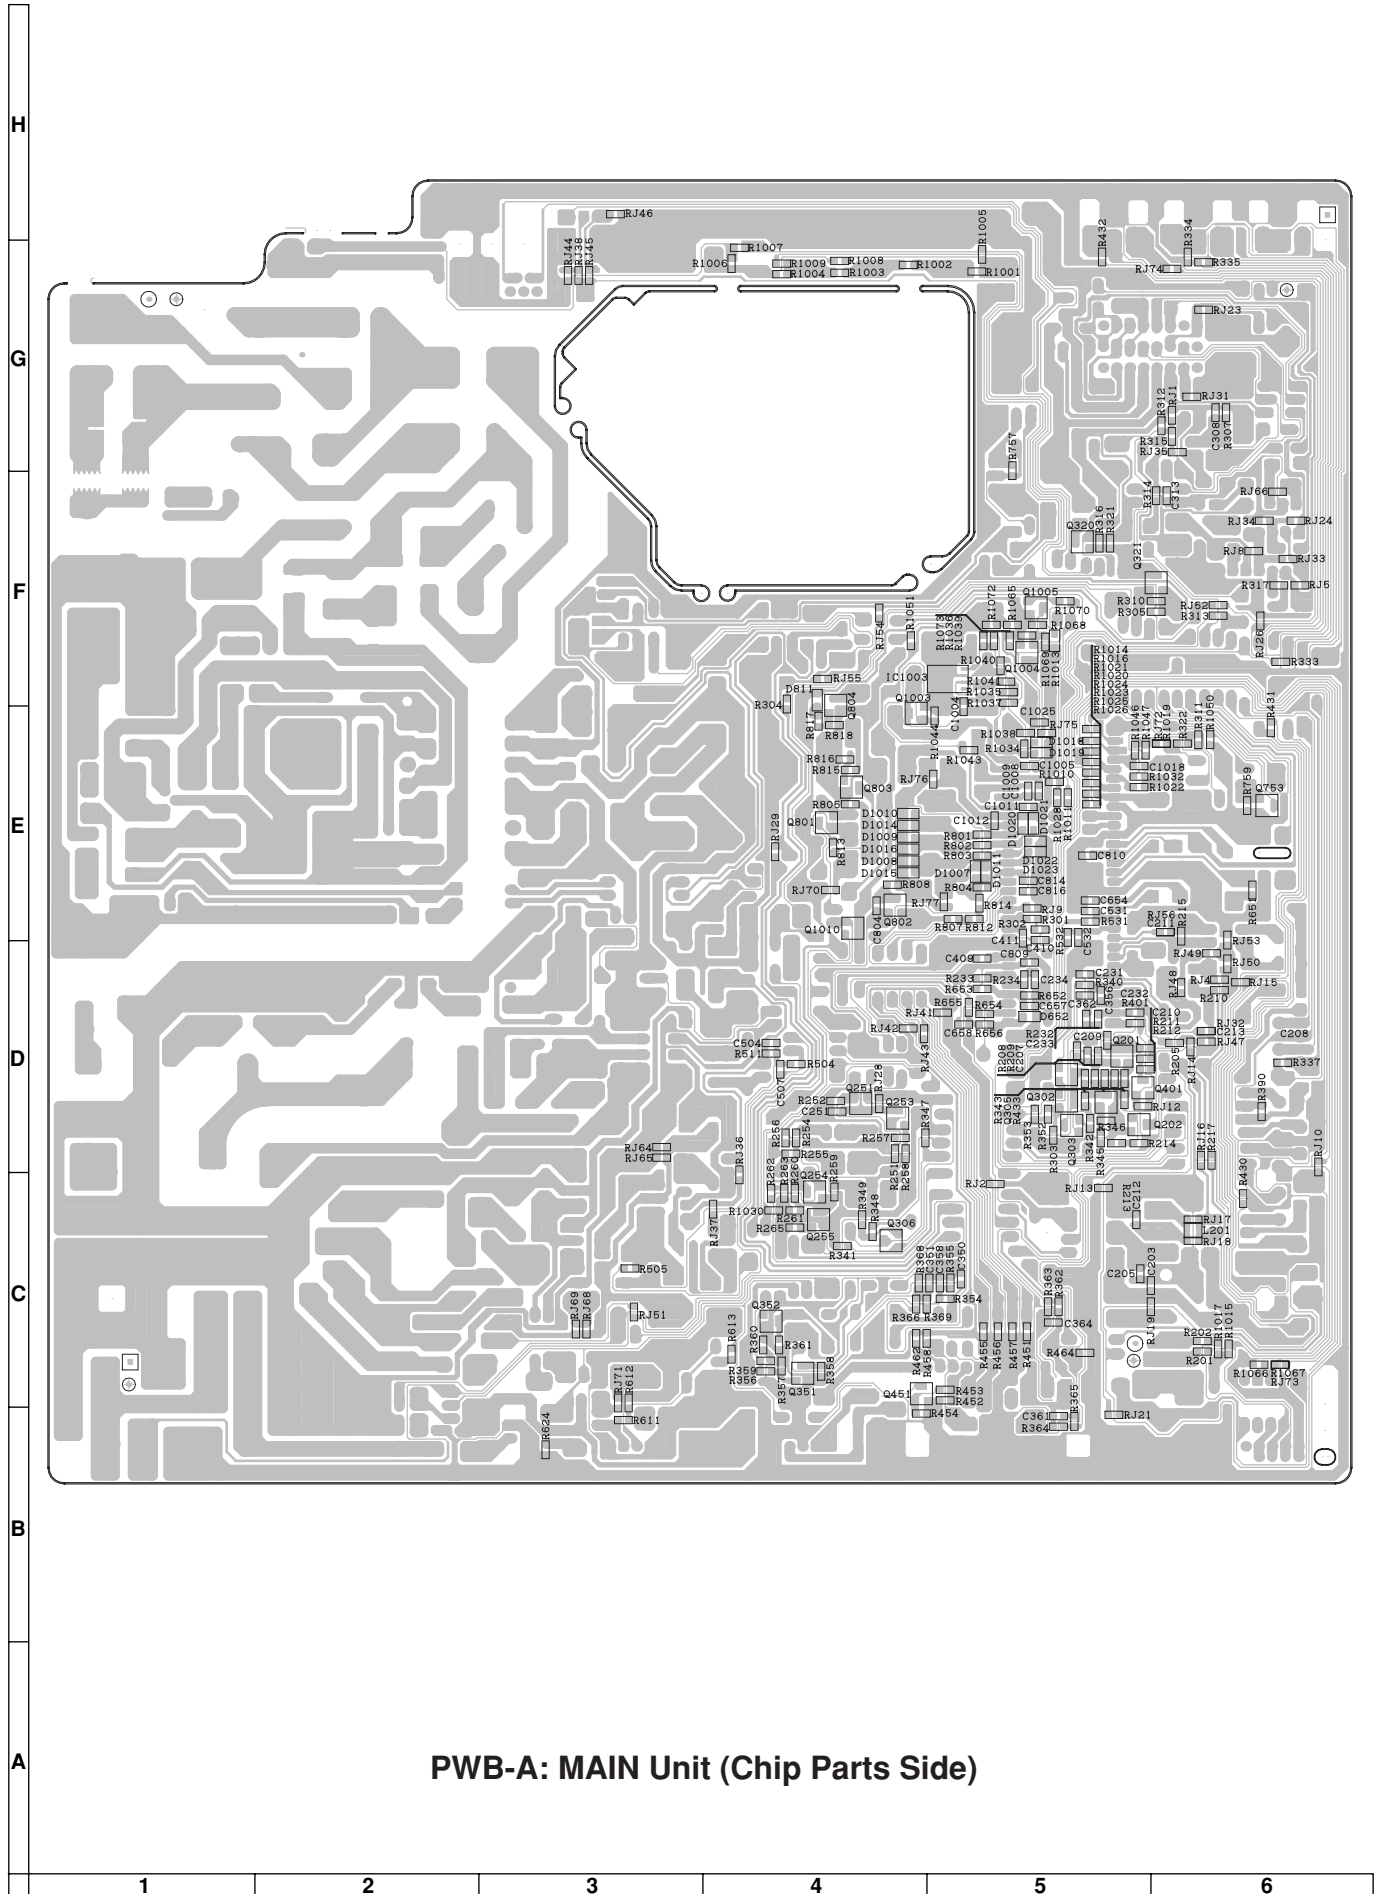

PWB-A: MAIN Unit (Chip Parts Side)

PARTS LIST

PARTS REPLACEMENT

Replacement parts which have these special safety characteristics identified in this manual; electrical components having such features are identified by Δ and shaded areas in the Replacement Parts Lists and Schematic Diagrams. The use of a substitute replacement part which does not have the same safety characteristic as the factory recommended replacement parts shown in this service manual may create shock, fire or other hazards.

"HOW TO ORDER REPLACEMENT PARTS"

To have your order filled promptly and correctly, please furnish the following information.

- | | |
|----------------|-------------|
| 1. REF. NO. | 2. PART NO. |
| 3. DESCRIPTION | 4. Code |

in **USA**: Contact your nearest SHARP Parts Distributor to order. For location of SHARP Parts Distributor, Please call Toll-Free; 1-800-BE-SHARP

« MARK: SPARE PARTS-DELIVERY SECTION

p MARK: X-RAY RELATED PARTS

Ref. No.	Part No.	★	Description	Code
----------	----------	---	-------------	------

PICTURE TUBE

Δ	V101	VB34EAK02X+1E	X	Picture Tube(I.T.C)	BK
Δ	L703	RCILG0068PEZZ	X	Degaussing Coil	AD
		QEARC1436PEZZ	X	Ground Wire (14")	AB

PRINTED WIRING BOARD ASSEMBLIES (NOT REPLACEMENT ITEM)

PWB-A	DUNTKA541WEL5	—	MAIN UNIT	—
PWB-B	DUNTKA542WEA0	—	CRT UNIT	—

Ref. No.	Part No.	★	Description	Code
----------	----------	---	-------------	------

PWB-A: DUNTKA541WEL5 MAIN UNIT

TUNER

NOTE: THE PARTS HERE SHOWN ARE SUPPLIED AS AN ASSEMBLY BUT NOT INDEPENDENTLY

Δ	TU201	VTUVT1T5UF214	X	TUNER	AP
----------	-------	---------------	---	-------	----

INTEGRATED CIRCUITS

	IC302	VHIAN7511//1	X	AN7511	AC
Δ	IC501	VHIAN5522++1	X	An5522	AD
	IC601	VHIKA7808AP-1	X	KIA7808API	AB
	IC701	VHISTRG5653-1	X	STRG5653	AH
	IC801	RH-IX3564CEN4	X	IX3564CE	AT
	IC1003	VHIBR24C02F1EY	X	BR24C02F-WE2	AC

TRANSISTORS

	Q253	VS2SD601AR/-1Y	X	2SD601AR	AB
	Q254	VS2SD601AR/-1Y	X	2SD601AR	AB
	Q601	VS2SC3207//1+	X	2SC3207-AT	AB
	Q602	VS2SD2586//1E	X	2SD2586	AE
	Q603	VS2SC3198-G-1+	X	2SC3198-G	AB
	Q751	VS2SC3198-G-1+	X	2SC3198-G	AB
	Q752	VS2SC3198-G-1+	X	2SC3198-G	AB
	Q801	VS2SB709AR/-1Y	X	2SB709AR	AB
	Q802	VS2SB709AR/-1Y	X	2SB709AR	AB

DIODES

	D201	RH-EX0676GEZZY	X	Zener Diode 32V	AB
	D302	VHD1SS119//1Y	X	Diode	AA
Δ	D331	RH-DX0302CEZZY	X	Diode	AB
	D502	RH-EX0615GEZZY	X	Zener Diode, 5.6V	AB
	D503	VHD1SS119//1Y	X	Diode	AA
	D505	RH-DX0441CEZZY	X	Diode	AB
	D508	RH-DX0131CEZZY	X	Diode	AB
	D509	RH-EX0665GEZZY	X	Zener Diode, 5V	AB
	D511	VHD1SS119//1Y	X	Diode	AA
	D531	RH-EX0627GEZZY	X	Zener Diode, 8.2V	AB
	D532	RH-EX0627GEZZY	X	Zener Diode, 8.2V	AB
	D601	RH-DX0475CEZZY	X	Diode	AB
Δ	D602	VHD1SS244//1Y	X	Diode	AB
Δ	D603	RH-EX0667GEZZY	X	Zener Diode 27V	AB
Δ	D606	RH-DX0131CEZZY	X	Diode	AB
Δ	D608	RH-DX0468CEZZY	X	Diode	AB
	D651	RH-EX0627GEZZY	X	Zener Diode, 8.2V	AB
	D653	VHD1SS119//1Y	X	Diode	AA
	D701	RH-DX0476CEZZY	X	Diode	AC
	D705	VHD1SS82///1AY	X	Diode	AB
	D706	VHD1SS82///1AY	X	Diode	AB
	D707	VHD1SS82///1AY	X	Diode	AB
Δ	D751	RH-DXA006WJZZ	X	Diode	AB
Δ	D752	RH-DX0131CEZZY	X	Diode	AB
	D754	RH-EX0616GEZZY	X	Zener Diode 5.6V	AB
	D755	RH-EX0603GEZZY	X	Zener Diode, 3.9V	AB
	D801	VHD1SS119//1Y	X	Diode	AA
	D802	VHD1SS119//1Y	X	Diode	AA
	D803	VHD1SS119//1Y	X	Diode	AA
	D804	VHD1SS119//1Y	X	Diode	AA
	D805	VHD1SS119//1Y	X	Diode	AA
	D806	VHD1SS119//1Y	X	Diode	AA
	D1001	RH-PX0013PEZZ	X	LED, ON TIMER	AB
	D1004	VHD1SS119//1Y	X	Diode	AA
	D1012	RH-EX0611GEZZY	X	Zener Diode 5.1V	AB
	D1018	RH-EX0263TAZZY	X	EX0263TA	AB
	D1019	RH-EX0263TAZZY	X	EX0263TA	AB
	D1020	RH-EX0263TAZZY	X	EX0263TA	AB
	D1021	RH-EX0263TAZZY	X	EX0263TA	AB
	D1022	RH-EX0263TAZZY	X	EX0263TA	AB
	D1023	RH-EX0263TAZZY	X	EX0263TA	AB

Ref. No. Part No. ★ Description Code

PWB-A: DUNTKA541WEL5

MAIN UNIT

DIODE

△	VA701	RH-VX0073CEZZ	X	Varistor	AB
---	-------	---------------	---	----------	----

PACKAGED CIRCUITS

	PR702	RMPTP0028CEZZ	X	Packaged Circuit	AC
	X1001	RCRSB0300CEZZ	X	Crystal	AC

FILTERS

	CF253	RFILC0013CEZZ	X	Filter	AB
	SF201	RFILCA015WJZZ	X	S.A.W. Filter	AC

COILS

	L202	VP-DF270K0000Y	X	Peaking, 27mH	AB
	L203	VP-DF270K0000Y	X	Peaking, 27mH	AB
	L205	VP-XF1R5K0000Y	X	Peaking 1.5mH	AB
	L253	VP-XF120K0000Y	X	Peaking 12μH	AB
△	L701	RCILF0078PEZZ	X	Coil Line Filter	AC
△	L751	RCILP0225CEZZ	X	Coil,	AB
	L802	VP-DF100K0000Y	X	Peaking, 10mH	AB
	L803	VP-DF100K0000Y	X	Peaking, 10mH	AB
	L1030	VP-DF100K0000Y	X	Peaking, 10mH	AB
	L1050	VP-DF100K0000Y	X	Peaking, 10mH	AB
	L1051	VP-DF100K0000Y	X	Peaking, 10mH	AB

TRANSFORMERS

△	T601	RTRNZ0144PEZZ	X	Transformer	AB
△	T602	RTRNF0228PEZZ	X	FLYBACK	AP
△	T701	RTRNW0015PEN1	X	Transformer	AE

CAPACITORS

[EL... Electrolytic, M-Poly... Metalized Polypro Film]

	C201	VCEA0A1CW476M+	X	47	16V	EL.	AB
	C202	VCEA0A1AW108M+	X	1000	10V	EL.	AB
	C205	VCKYCY1HF103ZY	X	0.01	50V	Ceramic	AA
	C206	VCEA0A1HW105M+	X	1	50V	EL.	AB
	C211	VCKYCY1HF103ZY	X	0.01	50V	Ceramic	AA
	C213	VCKYCY1HF103ZY	X	0.01	50V	Ceramic	AA
	C231	VCKYCY1HF223ZY	X	0.022	50V	Ceramic	AA
	C232	VCKYCY1HB821KY	X	820p	50V	Ceramic	AA
	C233	VCKYCY1HB472KY	X	100	35V	EL.	AA
	C234	VCKYCY1EF104ZY	X	0.1	25V	Ceramic	AA
	C251	VCKYCY1HF223ZY	X	0.022	50V	Ceramic	AA
	C252	VCEA0A1CW107M+	X	100	16V	EL.	AB
	C301	VCEA0A1CW477M+	X	470	16V	EL.	AB
	C304	VCEA0A1HW106M+	X	10	50V	EL.	AB
	C310	VCEA0A1HW225M+	X	2.2	50V	EL.	AB
	C312	VCEA0A1HW225M+	X	2.2	50V	EL.	AB
	C313	VCKYCY1HB332KY	X	3300p	50V	Ceramic	AA
△	C332	VCQYTA1HM103J+	X	0.01	50V	Mylar	AB
△	C333	VCEA0A1CW108M+	X	1000	16V	EL.	AB
	C356	VCKYCY1HB682KY	X	6800p	50V	Ceramic	AA
	C359	VCEA0A1CW106M+	X	10	16V	EL.	AB
	C360	VCEA0A1HW225M+	X	2.2	50V	EL.	AB
	C409	VCKYCY1EF104ZY	X	0.1	25V	Ceramic	AA
	C410	VCKYCY1EF104ZY	X	0.1	25V	Ceramic	AA
	C411	VCKYCY1HB102KY	X	1000p	50V	Ceramic	AA
	C504	VCKYCY1HB103KY	X	0.01	50V	Ceramic	AA
	C505	VCEA0A1HW107M+	X	100	50V	EL.	AB
	C507	VCKYCY1HB103KY	X	0.01	50V	Ceramic	AA
	C508	VCFYSA1JB224J+	X	0.22	63V	Mylar	AB
	C509	VCEA0A1CW477M+	X	470	16V	EL.	AB
	C510	VCKYPA2HB102K+	X	1000p	500V	Ceramic	AB
	C514	VCFYSA1JB563J+	X	0.056	63V	Ceramic	AB
	C531	VCKYCY1HB102KY	X	1000p	50V	Ceramic	AA
	C532	VCKYCY1HB102KY	X	1000p	50V	Ceramic	AA
	C533	VCQYTA1HM104J+	X	0.1	50V	Mylar	AB

Ref. No. Part No. ★ Description Code

CAPACITORS

	C601	VCQYTA1HM563J+	X	0.056	50V	Mylar	AB
	C602	VCEA0A1HW475M+	X	4.7	50V	EL.	AB
	C603	VCEA0A1HW105M+	X	1	50V	EL.	AB
	C604	VCEA0A2EW106M+	X	10	250V	EL.	AB
	C605	VCKYPA2HB102K+	X	1000p	500V	Ceramic	AB
	C606	VCFPVC2DB334J	X	0.33	250V	M-Poly.	AB
	C607	VCFPVC3ZA532H	X	5300p	1.5kV	M-Poly.	AB
	C608	VCKYPA2HB102K+	X	1000p	500V	Ceramic	AB
	C610	VCEA0A1CW108M+	X	1000	16V	EL.	AB
	C611	VCEA0A1EW476M+	X	47	25V	EL.	AB
	C612	VCEA0A1CW477M+	X	470	16V	EL.	AB
	C620	VCKYPA2HB102K+	X	1000p	500V	Ceramic	AB
	C640	VCFYSB2EB823J	X	0.082	250V	M.Poly..	AB
	C651	VCQYTA1HM222J+	X	2200p	50V	Mylar	AA
	C652	VCQYTA1HM472J+	X	4700p	50V	Mylar	AA
	C653	VCEA0A1HW105M+	X	1	50V	EL.	AB
	C654	VCKYCY1HF223ZY	X	0.022	50V	Ceramic	AA
	C655	VCEA0A1HW106M+	X	10	50V	EL.	AB
	C656	VCEA0A1HW224M+	X	0.22	50V	EL.	AB
	C657	VCKYCY1EF104ZY	X	0.1	25V	Ceramic	AA
	C658	VCKYCY1EF104ZY	X	0.1	25V	Ceramic	AA
	C701	RC-FZ036SCEZZ	X	0.1mF	AC125V	Plastic	AB
	C702	RC-KZ0029CEZZ+	X	0.01	AC250V	Ceramic	AB
	C703	RC-KZ0029CEZZ+	X	0.01	AC250V	Ceramic	AB
	C704	RC-KZ0029CEZZ+	X	0.01	AC250V	Ceramic	AB
	C705	RC-EZ1044CEZZ	X	150	400V	EL.	AF
	C709	RC-KZ0039CEZZ	X	680	2kV	Ceramic	AB
	C710	VCEA0A1HW476M+	X	47	50V	EL.	AB
	C711	VCKYPA1HB102K+	X	1000p	50V	Ceramic	AA
	C712	VCKYPA1HB471K+	X	470p	50V	Ceramic	AA
	C751	RC-KZ0092GEZZA	X	3300p	AC250V	Ceramic	AB
△	C752	VCKYPH3DB561K	X	560p	2kV	Ceramic	AB
△	C753	RC-EZ0724CEZZ	X	100	160V	EL.	AC
△	C754	RC-EZ0638CEZZ	X	33	160V	EL.	AC
△	C755	VCEA0A1CW108M+	X	1000	16V	EL.	AB
△	C756	VCQYTA1HM103J+	X	0.01	50V	Mylar	AA
	C759	VCEA0A0JW477M+	X	470	6.3V	EL.	AB
	C760	VCEA0A0JW228M+	X	2200	6.3V	EL.	AB
	C801	VCEA0A1HW105M+	X	1	50V	EL.	AB
	C802	VCEA0A1CW337M+	X	330	16V	EL.	AB
	C803	VCEA0A1CW107M+	X	100	16V	EL.	AB
	C804	VCKYCY1HB222KY	X	2200p	50V	Ceramic	AA
	C805	VCKYD41HB102KY	X	1000p	50V	Ceramic	AB
	C806	VCKYD41HB102KY	X	1000p	50V	Ceramic	AB
	C807	VCKYD41HB102KY	X	1000p	50V	Ceramic	AB
	C808	VCEA0A1CW107M+	X	100	16V	EL.	AB
	C809	VCKYCY1CF474ZY	X	0.47	16V	Ceramic	AB
	C810	VCKYCY1CF474ZY	X	0.47	16V	Ceramic	AB
	C811	VCEA0A1CW107M+	X	100	16V	EL.	AB
	C812	VCFYFA1HA224J+	X	0.22	50V	Mylar	AB
	C813	VCFYFA1HA224J+	X	0.22	50V	Mylar	AB
	C814	VCKYCY1HB471KY	X	470p	50V	Ceramic	AA
	C816	VCKYCY1HB471KY	X	470p	50V	Ceramic	AA
	C1001	VCEA0A0JW107M+	X	100	6.3V	EL.	AB
	C1002	VCEA0A0JW107M+	X	100	6.3V	EL.	AB
	C1003	VCEA0A1CW106M+	X	10	16V	EL.	AB
	C1004	VCKYCY1CF474ZY	X	0.47	16V	Ceramic	AB
	C1005	VCKYCY1CF474ZY	X	0.47	16V	Ceramic	AB
	C1006	VCEA0A1CW106M+	X	10	16V	EL.	AB
	C1008	VCCCCY1HH330JY	X	33p	50V	Ceramic	AA
	C1009	VCCCCY1HH330JY	X	33p	50V	Ceramic	AA
	C1010	VCEA0A0JW107M+	X	100	6.3V	EL.	AB
	C1011	VCKYCY1CF474ZY	X	0.47	16V	Ceramic	AB
	C1012	VCKYCY1CF474ZY	X	0.47	16V	Ceramic	AB
	C1013	VCEA0A0JW107M+	X	100	6.3V	EL.	AB
	C1016	VCQYTA1HM104J+	X	0.1	50V	Mylar	AB
	C1018	VCKYCY1HB221KY	X	220p	50V	Ceramic	AA

Ref. No. Part No. ★ Description Code

PWB-A: DUNTKA541WEL5 MAIN UNIT

RESISTORS

[M-Ox... Metal Oxide, M-Film ... Metal Film]

RJ2	VRS-CY1JF000JY	X	00	1/16W	M-Ox.	AA
RJ8	VRS-CY1JF000JY	X	00	1/16W	M-Ox.	AA
RJ9	VRS-CY1JF000JY	X	00	1/16W	M-Ox.	AA
RJ10	VRS-CY1JF000JY	X	00	1/16W	M-Ox.	AA
RJ13	VRS-CY1JF000JY	X	00	1/16W	M-Ox.	AA
RJ14	VRS-CY1JF000JY	X	00	1/16W	M-Ox.	AA
RJ15	VRS-CY1JF000JY	X	00	1/16W	M-Ox.	AA
RJ16	VRS-CY1JF000JY	X	00	1/16W	M-Ox.	AA
RJ17	VRS-CY1JF000JY	X	00	1/16W	M-Ox.	AA
RJ19	VRS-CY1JF000JY	X	00	1/16W	M-Ox.	AA
RJ21	VRS-CY1JF000JY	X	00	1/16W	M-Ox.	AA
RJ26	VRS-CY1JF000JY	X	00	1/16W	M-Ox.	AA
RJ28	VRS-CY1JF000JY	X	00	1/16W	M-Ox.	AA
RJ31	VRS-CY1JF000JY	X	00	1/16W	M-Ox.	AA
RJ35	VRS-CY1JF000JY	X	00	1/16W	M-Ox.	AA
RJ37	VRS-CY1JF000JY	X	00	1/16W	M-Ox.	AA
RJ38	VRS-CY1JF000JY	X	00	1/16W	M-Ox.	AA
RJ41	VRS-CY1JF000JY	X	00	1/16W	M-Ox.	AA
RJ42	VRS-CY1JF000JY	X	00	1/16W	M-Ox.	AA
RJ43	VRS-CY1JF000JY	X	00	1/16W	M-Ox.	AA
RJ46	VRS-CY1JF000JY	X	00	1/16W	M-Ox.	AA
RJ47	VRS-CY1JF000JY	X	00	1/16W	M-Ox.	AA
RJ49	VRS-CY1JF000JY	X	00	1/16W	M-Ox.	AA
RJ50	VRS-CY1JF000JY	X	00	1/16W	M-Ox.	AA
RJ51	VRS-CY1JF000JY	X	00	1/16W	M-Ox.	AA
RJ52	VRS-CY1JF000JY	X	00	1/16W	M-Ox.	AA
RJ53	VRS-CY1JF000JY	X	00	1/16W	M-Ox.	AA
RJ70	VRS-CY1JF000JY	X	00	1/16W	M-Ox.	AA
RJ71	VRS-CY1JF000JY	X	00	1/16W	M-Ox.	AA
RJ72	VRS-CY1JF000JY	X	00	1/16W	M-Ox.	AA
RJ73	VRS-CY1JF000JY	X	00	1/16W	M-Ox.	AA
RJ75	VRS-CY1JF000JY	X	00	1/16W	M-Ox.	AA
RJ76	VRS-CY1JF000JY	X	00	1/16W	M-Ox.	AA
RJ77	VRS-CY1JF000JY	X	00	1/16W	M-Ox.	AA
R201	VRS-CY1JF101JY	X	100	1/16W	M-Ox.	AA
R202	VRS-CY1JF101JY	X	100	1/16W	M-Ox.	AA
R212	VRS-CY1JF332JY	X	3.3k	1/16W	M-Ox.	AA
R215	VRS-CY1JF332JY	X	3.3k	1/16W	M-Ox.	AA
R216	VRS-RG3LB223J+	X	22k	3W	M-Ox.	AB
R219	VRD-RA2BE392JY	X	3.9k	1/8W	Carbon	AA
R230	VRS-CY1JF473JY	X	47k	1/16W	M-Ox.	AA
R231	VRD-RA2BE681JY	X	1.5k	1/8W	Carbon	AA
R232	VRS-CY1JF272JY	X	2.7k	1/16W	M-Ox.	AA
R233	VRS-CY1JF101JY	X	100	1/16W	M-Ox.	AA
R234	VRS-CY1JF391JY	X	390	1/16W	M-Ox.	AA
R257	VRS-CY1JF181JY	X	180	1/16W	M-Ox.	AA
R258	VRS-CY1JF151JY	X	150	1/16W	M-Ox.	AA
R259	VRS-CY1JF471JY	X	470	1/16W	M-Ox.	AA
R260	VRS-CY1JF392JY	X	3.9k	1/16W	M-Ox.	AA
R261	VRS-CY1JF223JY	X	22k	1/16W	M-Ox.	AA
R262	VRS-CY1JF560JY	X	56	1/16W	M-Ox.	AA
R263	VRS-CY1JF560JY	X	56	1/16W	M-Ox.	AA
R301	VRS-CY1JF101JY	X	100	1/16W	M-Ox.	AA
R304	VRS-CY1JF683JY	X	68k	1/16W	M-Ox.	AA
R310	VRS-CY1JF473JY	X	47k	1/16W	M-Ox.	AA
R311	VRS-CY1JF473JY	X	47k	1/16W	M-Ox.	AA
R313	VRS-CY1JF102JY	X	1k	1/16W	M-Ox.	AA
R314	VRS-CY1JF103JY	X	10k	1/16W	M-Ox.	AA
R315	VRS-CY1JF392JY	X	3.9k	1/16W	M-Ox.	AA
R320	VRN-RL3DB4R7J+	X	4.7	2W	M-Film	AB
R333	VRS-CY1JF101JY	X	100	1/16W	M-Ox.	AA
R334	VRS-CY1JF332JY	X	3.3k	1/16W	M-Ox.	AA

Ref. No. Part No. ★ Description Code

R335	VRS-CY1JF564JY	X	560k	1/16W	M-Ox.	AA
R364	VRS-CY1JF000JY	X	00	1/16W	M-Ox.	AA
R431	VRS-CY1JF101JY	X	100	1/16W	M-Ox.	AA
R432	VRS-CY1JF750JY	X	75	1/16W	M-Ox.	AA
R501	VRD-RA2BE272JY	X	2.7k	1/8W	Carbon	AA
R502	VRD-RM2HD102JY	X	1.0k	1/2W	Carbon	AA
R503	VRN-RL3DB2R7J+	X	2.7	2W	M-Film	AB
R504	VRS-CY1JF181JY	X	180	1/16W	M-Ox.	AA
R505	VRS-CY1JF102JY	X	1k	1/16W	M-Ox.	AA
R506	VRS-RG3AB331J+	X	330	1W	M-Ox.	AB
R507	VRN-RL3AB1R0J+	X	1.0	1W	M-Film	AB
R510	VRD-RA2BE333JY	X	33k	1/8W	Carbon	AA
R511	VRS-CY1JF181JY	X	180	1/16W	M-Ox.	AA
R512	VRD-RM2HD100JY	X	10	1/2W	Carbon	AA
R521	VRD-RA2BE333JY	X	33k	1/8W	Carbon	AA
R531	VRS-CY1JF101JY	X	100	1/16W	M-Ox.	AA
R532	VRS-CY1JF101JY	X	100	1/16W	M-Ox.	AA
R533	VRD-RA2BE393JY	X	39k	1/8W	Carbon	AA
R601	VRS-RG2HC102J+	X	1k	1/2W	M-Ox.	AB
R602	VRD-RA2BE393JY	X	39k	1/8W	Carbon	AA
R603	VRD-RA2BE273JY	X	27k	1/8W	Carbon	AA
R604	VRD-RA2BE563JY	X	56k	1/8W	Carbon	AA
R605	VRD-RM2HD124JY	X	120k	1/2W	Carbon	AA
△ R606	VRN-RL3AB1R5J+	X	1.5	1W	M-Film	AB
△ R607	VRD-RM2HD270JY	X	27	1/2W	Carbon	AA
△ R609	VRD-RA2BE154JY	X	150k	1/8W	Carbon	AA
△ R610	VRD-RA2BE102GY	X	1.0k	1/8W	Carbon	AA
R611	VRS-CY1JF102JY	X	1k	1/16W	M-Ox.	AA
R612	VRS-CY1JF123JY	X	12k	1/16W	M-Ox.	AA
R613	VRS-CY1JF103JY	X	10k	1/16W	M-Ox.	AA
△ R614	VRS-RG2HC150J+	X	15	1/2W	M-Ox.	AB
R615	VRS-RG3DB682J+	X	6.8k	2W	M-Ox.	AB
R616	VRN-RL3ABR47J+	X	0.47	1W	M-Film	AB
R618	VRS-RG3DB391J+	X	390	2W	M-Ox.	AB
R619	VRS-RG3LB103J+	X	10k	3W	M-Ox.	AB
R620	VRS-RG3AB472J+	X	4.7k	1W	M-Ox.	AB
R622	VRD-RA2BE102JY	X	1k	1/8W	Carbon	AA
R625	VRN-VV3DB8R2J	X	8.2	2W	M-Film	AB
R626	VRD-RM2HD470JY	X	47	1/2W	Carbon	AA
R641	VRN-RL2HCR47J+	X	0.47	1/2W	M-Film	AB
R651	VRS-CY1JF223JY	X	22k	1/16W	M-Ox.	AA
R652	VRS-CY1JF102JY	X	1k	1/16W	M-Ox.	AA
R653	VRS-CY1JF822JY	X	8.2k	1/16W	M-Ox.	AA
R654	VRS-CY1JF273JY	X	27k	1/16W	M-Ox.	AA
R655	VRS-CY1JF391JY	X	390	1/16W	M-Ox.	AA
R656	VRS-CY1JF100JY	X	10	1/16W	M-Ox.	AA
R658	VRD-RA2BE101JY	X	100	1/8W	Carbon	AA
R663	VRD-RA2BE101JY	X	100	1/8W	Carbon	AA
R701	VRW-KQ3NC3R9K	X	3.9	7W	Cement	AB
R707	VRS-VV3DB104J	X	100k	2W	M-Ox.	AB
R708	VRD-RA2BE681JY	X	1.5k	1/8W	Carbon	AA
R709	VRN-RL3DBR47J+	X	0.47	2W	M-Film	AB
R710	VRN-RL3DBR56J+	X	.58	2W	Carbon	AB
R711	VRD-RA2BE682JY	X	6.8k	1/8W	Carbon	AA
R712	VRD-RA2BE152JY	X	1.5k	1/8W	Carbon	AA
R716	VRD-RA2BE562JY	X	5.6k	1/8W	Carbon	AA
R751	RR-DZ0049CEZZY	X	3.9M	1/2W	Solid	AB
R752	RR-DZ0049CEZZY	X	3.9M	1/2W	Solid	AB
△ R753	VRD-RM2HD124JY	X	120k	1/2W	Carbon	AA
R754	VRD-RM2HD150JY	X	15	1/2W	Carbon	AA
R755	VRD-RA2BE221JY	X	220	1/8W	Carbon	AA
R756	VRD-RM2HD270JY	X	27	1/2W	Carbon	AA
R757	VRS-CY1JF151JY	X	150	1/16W	M-Ox.	AA
R801	VRS-CY1JF221JY	X	220	1/16W	M-Ox.	AA
R802	VRS-CY1JF221JY	X	220	1/16W	M-Ox.	AA
R803	VRS-CY1JF221JY	X	220	1/16W	M-Ox.	AA
R804	VRS-CY1JF221JY	X	220	1/16W	M-Ox.	AA
R805	VRS-CY1JF822JY	X	8.2k	1/16W	M-Ox.	AA
R806	VRS-CY1JF123JY	X	12k	1/16W	M-Ox.	AA

Ref. No. Part No. ★ Description Code

PWB-A: DUNTKA541WEL5 MAIN UNIT

RESISTORS

[M-Ox... Metal Oxide, M-Film ... Metal Film]

R807	VRS-CY1JF103JY	X	10k	1/16W	M-Ox.	AA
R808	VRS-CY1JF221JY	X	220	1/16W	M-Ox.	AA
R809	VRD-RA2BE224JY	X	220k	1/8W	M-Ox.	AA
R812	VRS-CY1JF101JY	X	100	1/16W	M-Ox.	AA
R813	VRS-CY1JF221JY	X	220	1/16W	M-Ox.	AA
R1002	VRS-CY1JF822JY	X	8.2k	1/16W	M-Ox.	AA
R1003	VRS-CY1JF562JY	X	5.6k	1/16W	M-Ox.	AA
R1006	VRS-CY1JF562JY	X	5.6k	1/16W	M-Ox.	AA
R1007	VRS-CY1JF562JY	X	5.6k	1/16W	M-Ox.	AA
R1008	VRS-CY1JF822JY	X	8.2k	1/16W	M-Ox.	AA
R1009	VRS-CY1JF562JY	X	5.6k	1/16W	M-Ox.	AA
R1011	VRS-CY1JF332JY	X	3.3k	1/16W	M-Ox.	AA
R1012	VRD-RA2BE391JY	X	390	1/8W	Carbon	AA
R1013	VRD-RA2BE101JY	X	100	1/8W	Carbon	AA
R1014	VRS-CY1JF101JY	X	100	1/16W	M-Ox.	AA
R1015	VRS-CY1JF332JY	X	3.3k	1/16W	M-Ox.	AA
R1016	VRS-CY1JF101JY	X	100	1/16W	M-Ox.	AA
R1017	VRS-CY1JF332JY	X	3.3k	1/16W	M-Ox.	AA
R1020	VRS-CY1JF101JY	X	100	1/16W	M-Ox.	AA
R1021	VRS-CY1JF183JY	X	18k	1/16W	M-Ox.	AA
R1022	VRS-CY1JF101JY	X	100	1/16W	M-Ox.	AA
R1023	VRS-CY1JF221JY	X	220	1/16W	M-Ox.	AA
R1024	VRS-CY1JF183JY	X	18k	1/16W	M-Ox.	AA
R1025	VRS-CY1JF101JY	X	100	1/16W	M-Ox.	AA
R1026	VRS-CY1JF224JY	X	220k	1/16W	M-Ox.	AA
R1028	VRS-CY1JF101JY	X	100	1/16W	M-Ox.	AA
R1032	VRS-CY1JF332JY	X	3.3k	1/16W	M-Ox.	AA
R1034	VRS-CY1JF101JY	X	100	1/16W	M-Ox.	AA
R1035	VRS-CY1JF332JY	X	3.3k	1/16W	M-Ox.	AA
R1036	VRS-CY1JF332JY	X	3.3k	1/16W	M-Ox.	AA
R1037	VRS-CY1JF101JY	X	100	1/16W	M-Ox.	AA
R1038	VRS-CY1JF101JY	X	100	1/16W	M-Ox.	AA
R1039	VRS-CY1JF223JY	X	22k	1/16W	M-Ox.	AA
R1040	VRS-CY1JF101JY	X	100	1/16W	M-Ox.	AA
R1041	VRS-CY1JF101JY	X	100	1/16W	M-Ox.	AA
R1042	VRD-RA2BE471JY	X	470	1/8W	Carbon	AA
R1046	VRS-CY1JF101JY	X	100	1/16W	M-Ox.	AA
R1047	VRS-CY1JF332JY	X	3.3k	1/16W	M-Ox.	AA
R1050	VRS-CY1JF392JY	X	3.9k	1/16W	M-Ox.	AA
R1051	VRS-CY1JF683JY	X	68k	1/16W	M-Ox.	AA
R1066	VRS-CY1JF273JY	X	27k	1/16W	M-Ox.	AA
R1072	VRS-CY1JF101JY	X	100	1/16W	M-Ox.	AA
R1073	VRS-CY1JF101JY	X	100	1/16W	M-Ox.	AA
RJ500	VRS-CY1JF000JY	X	00	1/16W	M-Ox.	AA

SWITCHES

S1001	QSW-KA003WJZZ+	X	Switch,			AB
S1002	QSW-KA003WJZZ+	X	Switch,			AB
S1003	QSW-KA003WJZZ+	X	Switch,			AB
S1004	QSW-KA003WJZZ+	X	Switch,			AB
S1005	QSW-KA003WJZZ+	X	Switch,			AB
S1006	QSW-K0114CEZZ	X	Switch,			AC

MISCELLANEOUS PARTS

F701	QFS-C3229CEZZ	X	Fuse, T3.14AL			AB
FB601	RBLN-0091GEZZY	X	Ferrite Bead			AB
FH701	QFSDH1013CEZZ+	X	FUSE CLIP			AB
FH702	QFSDH1014CEZZ+	X	FUSE CLIP			AB
J402	QJAKE0210CE04	X	Jack, Video (AV-In2)			AB
J403	QJAKE0210CE09	X	Jack, Audio (L)(AV-In2)			AB
J409	QJAKF0074CEZZ	X	Jack, Rear AV-In			AC
P302	QPLGN0241CEZZ	X	plug (2 PINS)			AB
P601	QPLGN0660CEZZ	X	plug (6 PINS)			AB

Ref. No. Part No. ★ Description Code

MISCELLANEOUS PARTS

P603	QPLGN0361CEZZA	X	plug,3pin			AB
P701	QPLGN0260CEZZ	X	plug,2pin			AB
P702	QPLGN0269GEZZ	X	plug,2pin			AB
P1001	LHLDW1105PEZZ	X	Holder			AB
P1002	QPLGN0561CEZZ	X	plug (5 PINS)			AB
RMC1001	RRMCU0222CEZZ	X	R/C Receiver			AD
	LHLDW1104PEZZ	X	Holder			AB
	LHLDK0012PEZZ	X	AC Cord holder			AB
	LHLDP1066PE00	X	Holder			AB
	LHLDW0102GJKZ	X	Wire tie (20.32 CM)			AB
	LHLDW1033PEZZ	X	Wire tie (10.4 CM)			AA
TP201	QLUGP0102PEZZ	X	Test point			AA
RDA501	PRDAR0118GJFW	X	Heat Sink for IC501			AB
RDA701	PRDAR0298PEFW	X	Heat Sink for IC701			AC

PWB-B DUNTKA542WEA0 CRT UNIT

TRANSISTORS

Q870	RH-TX0110BMZZ+	X	TX0110BM			AB
Q871	RH-TX0110BMZZ+	X	TX0110BM			AB
Q872	RH-TX0110BMZZ+	X	TX0110BM			AB
Q883	RH-TX0124BMZZ+	X	TX0124BM			AB
Q885	RH-TX0124BMZZ+	X	TX0124BM			AB
Q887	RH-TX0124BMZZ+	X	TX0124BM			AB

DIODES

D881	VHD1SS119/-1Y	X	Diode			AA
D882	VHD1SS119/-1Y	X	Diode			AA
D883	VHD1SS119/-1Y	X	Diode			AA
D884	VHD1SS119/-1Y	X	Diode			AA
D885	VHD1SS119/-1Y	X	Diode			AA

CAPACITORS

[EL... Electrolytic, M-Poly... Metalized Polyprop Film]

C871	VCCSCY1HL471JY	X	470p	50V	Ceramic	AB
C872	VCCSCY1HL471JY	X	470p	50V	Ceramic	AB
C873	VCCSCY1HL471JY	X	470p	50V	Ceramic	AB
C875	VCKYPA2HB102K+	X	1000p	500V	Ceramic	AB
C876	RC-KZ0150CEZZ	X	1000p	3kV	Ceramic	AB
C878	VCEA0A2EW106M+	X	10	250V	EL.	AB
C880	VCCSCY1HL471JY	X	470p	50V	Ceramic	AB
C881	VCKYPA1HB471K+	X	470p	50V	Ceramic	AA
C882	VCKYPA1HB471K+	X	470p	50V	Ceramic	AA
C886	VCKYPA2HB102K+	X	1000p	500V	Ceramic	AB

RESISTORS

[M-Ox... Metal Oxide, M-Film ... Metal Film]

R879	VRS-CY1JF471JY	X	470	1/16W	M-Ox.	AA
R880	VRS-CY1JF471JY	X	470	1/16W	M-Ox.	AA
R881	VRS-CY1JF471JY	X	470	1/16W	M-Ox.	AA
R882	VRS-VV3DB153J	X	15k	2W	M-Ox.	AB
R883	VRD-RM2HD272JY	X	2.7k	1/2W	Carbon	AA
R884	VRS-VV3DB153J	X	15k	2W	M-Ox.	AB
R885	VRD-RM2HD272JY	X	2.7k	1/2W	Carbon	AA
R886	VRS-VV3DB153J	X	15k	2W	M-Ox.	AB
R887	VRD-RM2HD272JY	X	2.7k	1/2W	Carbon	AA
R888	VRS-CY1JF471JY	X	470	1/16W	M-Ox.	AA
R892	VRS-CY1JF102JY	X	1k	1/16W	M-Ox.	AA
R893	VRS-CY1JF102JY	X	1k	1/16W	M-Ox.	AA
R894	VRS-CY1JF102JY	X	1k	1/16W	M-Ox.	AA
R898	VRS-CY1JF471JY	X	470	1/16W	M-Ox.	AA
R899	VRS-CY1JF471JY	X	470	1/16W	M-Ox.	AA

MISCELLANEOUS PARTS

SC881	QSOCV0842CEZZ	X	SOCKET (CRT)			AC
P882	LHLDW1105PEZZ	X	Holder			AB
P884	LHLDW1104PEZZ	X	Holder			AB


Ref. No. Part No. ★ Description Code

MISCELLANEOUS PARTS

△ ACC701	QACCZA020WJPZ	X	AC CORD (LEAD-FREE)	AE
SP301	VSP0080PBQ9YA	X	SPEAKER	AD
	PZETV0103GJKZ	X	INSULATOR	AC
	QCNW-2206PEZZ	X	WIRE (SPEAKER)	AB
	QCNW-2608PEZZ	X	5 PINS (K)	AB
	QCNW-2609PEZZ	X	4 PINS (H)	AB
	QPLGA0017CEZZ	X	PLUG AC ADAPTOR	AC

SUPPLIED ACCESSORIES

TINS-B217WJZZ	X	operation manual	AD
RRMCGA257WJSA	X	Infrared R-C Unit	AH
TCAUS3000GJZZ	X	Caution label	AA

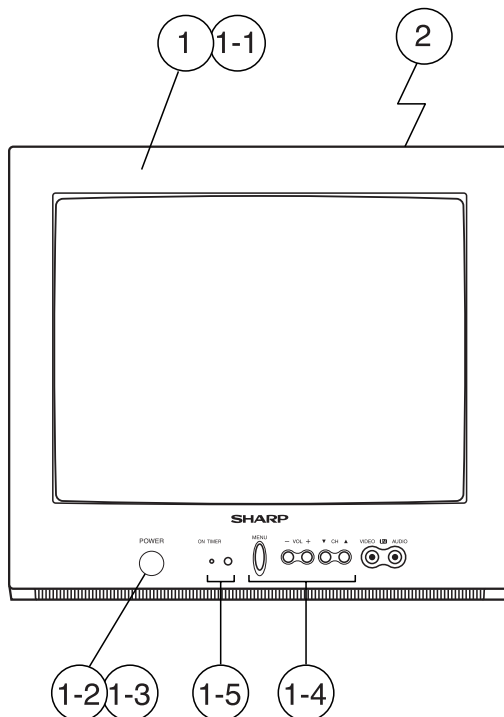

Ref. No. Part No. ★ Description Code


PACKING PARTS (NOT REPLACEMENT ITEM)

SPAKCB304WJZZ	X	Packing case	AK
SPAKP0104GJZZ	X	Wrapping Paper	AC
SPAKX0123GJZZ	X	Packing foam	AE
SSAKA0101GJZZ	X	Plastic bag	AB

CABINET PARTS

1	CCABA0133WEH6	X	Front Cabinet Ass'y	AW
1-1	<i>Not Available</i>	—	Front Cabinet	—
1-2	JBTN-0112GJSC	X	Button power	AG
1-3	MSPRC0005PEFW	X	Spring	AA
1-4	JBTN-0111GJSC	X	Control button	AG
1-5	HDECQ0102GJSA	X	R/C Cover	AC
2	GCABB0124GJKA	X	REAR CABINET	AQ

PACKING OF THE SET

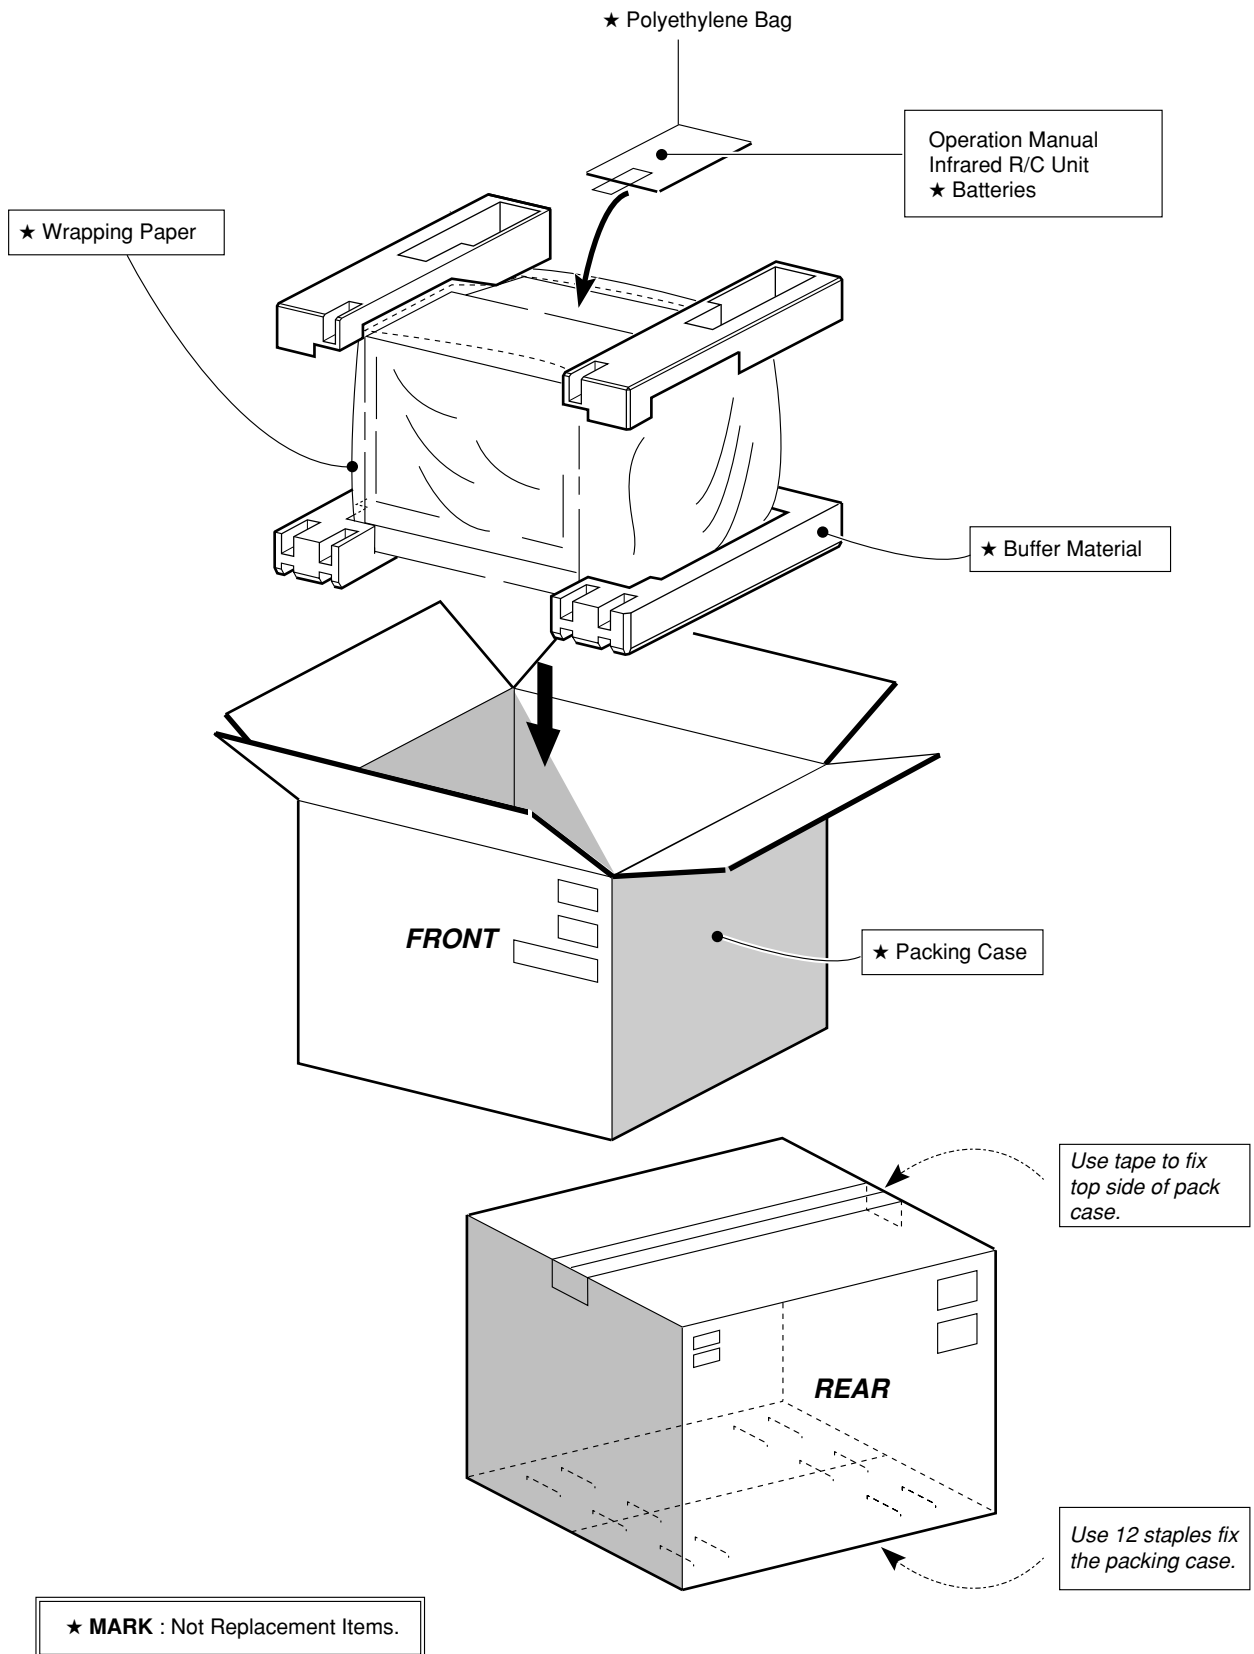

SHARP

COPYRIGHT © 2004 BY SHARP CORPORATION

ALL RIGHTS RESERVED.

No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic, mechanical, photocopying, recording, or otherwise, without prior written permission of the publisher.

QRC0006-L
MAY. 2004
Changes : SEMEX

Design and Production Information
Design base : JAPAN
Production : SEMEX

J B

SHARP ELECTRONICA MEXICO S. A. DE C. V.
Quality & Reliability Control Center
Bld. SHARP No. 3510 Parque Industrial Rosarito
Playas de Rosarito, México B. C. 22710