

*Self Diagnosis*  
Supported model

# SERVICE MANUAL

## FE-2 CHASSIS

MODEL	COMMANDER	DEST	CHASSIS NO.
<b>KV-28LS35B</b>	RM-932	FR	SCC-Q54L-A
<b>KV-28LS35E</b>	RM-932	ESP	SCC-Q53M-A
<b>KV-28LS35U</b>	RM-932	UK	SCC-Q52H-A

## FD Trinitron



TRINITRON<sup>®</sup> COLOR TV  
**SONY<sup>®</sup>**

# TABLE OF CONTENTS

Section	Title	Page	Section	Title	Page
	Specifications .....	3	<b>4. CIRCUIT ADJUSTMENTS</b>		
	Connectors .....	5	4-1. Electrical Adjustments .....		19
	Self Diagnostic Software .....	6	4-2. Test Mode 1 .....		21
<b>1. GENERAL</b>			4-3. Test Mode 2 .....		21
	Switching On the TV and Automatically Tuning .....	7	<b>5. DIAGRAMS</b>		
	Introducing the Menu System .....	8	5-1. Block Diagrams (1) .....		23
	Menu Guide .....	8	Block Diagrams (2) .....		25
	Teletext .....	9	5-2. Circuit Board Location .....		26
	Connecting Optional Equipment.....	10	5-3. Schematic Diagrams and Printed Wiring Boards .....		26
	Using Optional Equipment .....	10	* C Board .....		27
	Specifications .....	11	* VM Board .....		29
	Troubleshooting .....	11	* H2 Board .....		32
<b>2. DISASSEMBLY</b>			* F2 Board .....		33
2-1. Rear Cover Removal .....		12	* D2 Board .....		34
2-2. Speaker Disconnection .....		12	* D3 Board .....		35
2-3. Chassis Removal .....		12	* F3 Board .....		36
2-4. A Board PWB Removal 1 .....		13	* A Board .....		39
2-5. A Board PWB Removal 2 .....		13	5-4. Semiconductors .....		45
2-6. Service Position .....		13	5-5. IC Blocks .....		47
2-7. Side Control Module Removal .....		13	<b>6. EXPLODED VIEWS</b>		
2-8. Picture Tube Removal .....		14	6-1. Chassis .....		48
<b>3. SET-UP ADJUSTMENTS</b>			6-2. Picture Tube .....		49
3-1. Beam Landing .....		15	<b>7. ELECTRICAL PARTS LIST</b>		50
3-2. Convergence .....		16			
3-3. Focus Adjustment .....		18			
3-4. Screen (G2), White Balance .....		18			

## CAUTION

**SHORT CIRCUIT THE ANODE OF THE PICTURE TUBE AND THE ANODE CAP TO THE METAL CHASSIS, CRT SHIELD, OR THE CARBON PAINTED ON THE CRT, AFTER REMOVAL OF THE ANODE CAP.**

## WARNING !!

AN ISOLATION TRANSFORMER SHOULD BE USED DURING ANY SERVICE WORK TO AVOID POSSIBLE SHOCK HAZARD DUE TO LIVE CHASSIS, THE CHASSIS OF THIS RECEIVER IS DIRECTLY CONNECTED TO THE POWER LINE.

## SAFETY-RELATED COMPONENT WARNING !!

COMPONENTS IDENTIFIED BY SHADING AND MARKED  $\Delta$  ON THE SCHEMATIC DIAGRAMS, EXPLODED VIEWS AND IN THE PARTS LIST ARE CRITICAL FOR SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY.

## ATTENTION

**APRES AVOIR DECONNECTE LE CAP DE L'ANODE, COURT-CIRCUITER L'ANODE DU TUBE CATHODIQUE ET CELUI DE L'ANODE DU CAP AU CHASSIS METALLIQUE DE L'APPAREIL, OU AU COUCHE DE CARBONE PEINTE SUR LE TUBE CATHODIQUE OU AU BLINDAGE DU TUBE CATHODIQUE.**

## ATTENTION !!

AFIN D'EVITER TOUT RISQUE D'ELECTROCUTION PROVENANT D'UN CHÂSSIS SOUS TENTION, UN TRANSFORMATEUR D'ISOLEMENT DOIT ETRE UTILISÉ LORS DE TOUT DÉPANNAGE LE CHÂSSIS DE CE RÉCEPTEUR EST DIRECTMENT RACCORDÉ À L'ALIMENTATION SECTEUR.

## ATTENTION AUX COMPOSANTS RELATIFS À LA SÉCURITÉ!!


LES COMPOSANTS IDENTIFIÉS PAR UNE TRAME ET PAR UNE MARQUE  $\Delta$  SUR LES SCHÉMAS DE PRINCIPE, LES VUES EXPLOSÉES ET LES LISTES DE PIÈCES SONT D'UNE IMPORTANCE CRITIQUE POUR LA SÉCURITÉ DU FONCTIONNEMENT, NE LES REMPLACER QUE PAR DES COMPOSANTS SONY DONT LE NUMÉRO DE PIÈCE EST INDIQUÉ DANS LE PRÉSENT MANUEL OU DANS DES SUPPLÉMENTS PUBLIÉS PAR SONY.

ITEM MODEL	Television System	Stereo System	Channel Coverage	Color System
B	B/G/H, D/K, I, L	GERMAN/NICAM Stereo	VHF : E2-E12, F2-F10 UHF : E21-E69, F21-F69, B21-B69 CABLE TV : S01-S03, S1-S20, B-Q HYPER : S21-S41	PAL, SECAM NTSC4.43, NTSC3.58 (VIDEO IN)
E	B/G/H, D/K	GERMAN/NICAM Stereo	VHF : E2-E12 UHF : E21-E69 CABLE TV : S01-S03, S1-S20 HYPER : S21-S41	PAL, SECAM NTSC4.43, NTSC3.58 (VIDEO IN)
U	I	NICAM Stereo	I UHF : E21-E69	PAL, SECAM NTSC4.43, NTSC3.58 (VIDEO IN)

Picture Tube	Flat Display FD Trinitron Approx 71 cm (28 inches) (Approx 66 cm picture measured diagonally) KV-28LS35 Approx 82 cm (32 inches) (Approx 76 cm picture measured diagonally) KV-32LS35	<b>Sound output</b>	
		Right and Left speaker	2x14W (Music Power) 2x7W (RMS)
		Sub Woofer	1x20W (Music Power) 1x10W (RMS)
<b>Input/Output Terminals [REAR]</b>		<b>General Specifications</b>	
1: 21-pin Euro connector (CENELEC standard)	Inputs for Audio and Video signals. Inputs for RGB. Outputs of TV Video and Audio signals.	Power Requirements	220 - 240V
		Power Consumption	90 W (KV-28LS35) 88 W (KV-32LS35)
2: 21-pin Euro connector	Inputs for Audio and Video signals. Inputs for S Video. Outputs of TV Video and Audio signals. (selectable)	Dimensions	Approx 806x497x540mm (KV-28LS35) Approx 891x564x584mm (KV-32LS35)
		Weight	Approx 43kg (KV-28LS35) Approx 60.5kg (KV-32LS35)
Phono Jacks	Output Connectors variable for Audio Signals	Supplied Accessories	RM-932 Remote Commander (1) IEC designated R6 battery (2)
<b>Input/Output Terminals [SIDE]</b>		Other Features	TV system Autodetection, Teletext Virtual Dolby
Headphone jack	stereo mini jack	<b>Remote Control System : Infrared Control</b>	
Audio inputs	phono jacks	Power requirements	3V dc 2 batteries IEC designation R6 (size AA)
Video inputs	phono jacks		
S Video input	4 pin DIN		
<b>Design and specifications are subject to change without notice.</b>			


Model Name Item	KV-28LS35B	KV-28LS35E	KV-28LS35U	KV-32LS35B	KV-32LS35E	KV-32LS35U
Pal Comb	OFF	OFF	OFF	OFF	OFF	OFF
PIP	OFF	OFF	OFF	OFF	OFF	OFF
RGB Priority	ON	ON	ON	ON	ON	ON
Woofer Box	ON	ON	ON	ON	ON	ON
Scart 1	ON	ON	ON	ON	ON	ON
Scart 2	ON	ON	ON	ON	ON	ON
Front in (3)	ON	ON	ON	ON	ON	ON
Scart 4	OFF	OFF	OFF	OFF	OFF	OFF
Projector	OFF	OFF	OFF	OFF	OFF	OFF
Norm B/G	ON	ON	OFF	ON	ON	OFF
Norm I	OFF	OFF	ON	OFF	OFF	ON
Norm D/K	ON	ON	OFF	ON	ON	OFF
Norm AUS	OFF	OFF	OFF	OFF	OFF	OFF
Norm L	OFF	OFF	OFF	OFF	OFF	OFF
Norm SAT	OFF	OFF	OFF	OFF	OFF	OFF
Norm M	OFF	OFF	OFF	OFF	OFF	OFF
Teletext	ON	ON	ON	ON	ON	ON
Nicam Stereo	ON	ON	ON	ON	ON	ON

### WARNING (UK Models only)

The flexible mains lead is supplied connected to a **B.S. 1363** fused plug having a fuse of **5 AMP** rating. Should the fuse need to be replaced, use a **5 AMP FUSE** approved by ASTA to **BS 1362**, ie one that carries the  mark.


IF THE PLUG SUPPLIED WITH THIS APPLIANCE IS NOT SUITABLE FOR THE OUTLET SOCKETS IN YOUR HOME, IT SHOULD BE CUT OFF AND AN APPROPRIATE PLUG FITTED. THE PLUG SEVERED FROM THE MAINS LEAD MUST BE DESTROYED AS A PLUG WITH BARED WIRES IS DANGEROUS IF ENGAGED IN A LIVE SOCKET.

When an alternative type of plug is used, it should be fitted with a **5 AMP FUSE**, otherwise the circuit should be protected by a **5 AMP FUSE** at the distribution board.

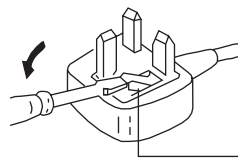

How to replace the fuse.  
Open the fuse compartment with a screwdriver blade and replace the fuse.

## 21 pin connector

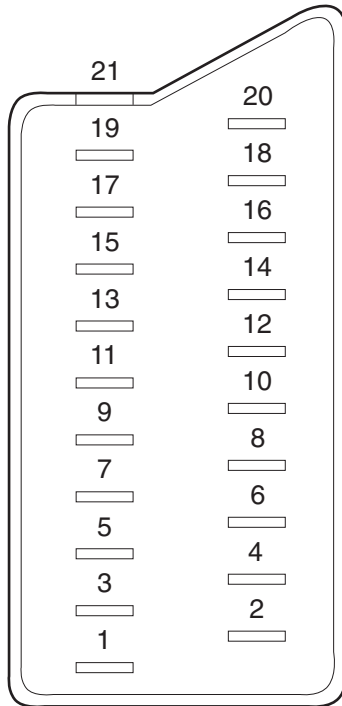

Pin No	1	2	4	Signal	Signal level
1	○	○	○	Audio output B (right)	Standard level : 0.5V rms Output impedance : Less than 1kohm*
2	○	○	○	Audio output B (right)	Standard level : 0.5V rms Output impedance : More than 10kohm*
3	○	○	○	Audio output A (left)	Standard level : 0.5V rms Output impedance : Less than 1kohm*
4	○	○	○	Ground (audio)	
5	○	○	○	Ground (blue)	
6	○	○	○	Audio input A (left)	Standard level : 0.5V rms Output impedance : More than 10kohm*
7	○	●	●	Blue input	0.7 +/- 3dB, 75 ohms positive
8	○	○	○	Function select (AV control)	High state (9.5-12V) : Part mode Low state (0-2V) : TV mode Input impedance : More than 10K ohms Input capacitance : Less than 2nF
9	○	○	○	Ground (green)	
10	○	○	○	Open	
11	○	●	●	Green	Green signal : 0.7 +/- 3dB, 75 ohms, positive
12	○	○	○	Open	
13	○	○	○	Ground (red)	
14	○	○	○	Ground (blanking)	
15	○	-	-	Red input	0.7 +/- 3dB, 75 ohms, positive
	-	○	○	(S signal Chroma input)	0.3 +/- 3dB, 75 ohms, positive
16	○	●	●	Blanking input (Ys signal)	High state (1-3V) Low state (0-0.4V) Input impedance : 75 ohms
17	○	○	○	Ground (video output)	
18	○	○	○	Ground (video input)	
19	○	○	○	Video output	1V +/- 3dB, 75ohms, positive sync 0.3V (-3+10dB)
20	○	-	-	Video input	1V +/- 3dB, 75ohms, positive sync 0.3V (-3+10dB)
	-	○	○	Video input Y (S signal)	1V +/- 3dB, 75ohms, positive sync 0.3V (-3+10dB)
21	○	○	○	Common ground (plug, shield)	

○ Connected      ● Not Connected (open) \* at 20Hz - 20kHz

## Rear Connection Panel



## Front Connection Panel



S-Video socket

S Video socket pin configuration		
Pin No	Signal	Signal Level
1	Ground	-
2	Ground	-
3	Y (S signal) input	1V +/- 3dB 75ohm, positive Sync. 0.3V -3 +10dB
4	C (S signal) input	0.3V +/- 3dB 75ohm, positive Sync.


## FE-2 SELF DIAGNOSTIC SOFTWARE

The identification of errors within the FE-2 chassis is triggered in one of two ways :- 1: Busy or 2: Device failure to respond to IIC. In the event of one of these situations arising the software will first try to release the bus if busy (Failure to do so will report with a continuous flashing LED) and then communicate with each device in turn to establish if a device is faulty. If a device is found to be faulty the relevant device number will be displayed through the LED (Series of flashes which must be counted) See table 1., non fatal errors are reported using this method. Each time the software detects an error it is stored within the NVM. See Table 2.

Table 1


Error Message	LED Code
No error	00
Reserved	01
OCP ( Over Current Protection )	02
Not Used	03
No Vertical Sync	04
IKR Error at power on	05
IIC bus clock and/or data lines low at power on	06
NVM no IIC bus acknowledge at power on	07
Not Used	08
Tuner no acknowledge at power on	09
Sound Processor Error	10
Jungle controller 8 volts error	11

### Flash Timing Example : e.g. error number 3

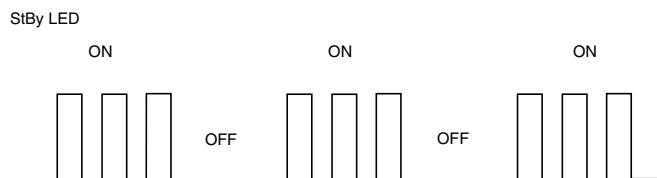

### How to enter into Table 2

1. Turn on the main power switch of the TV set and enter into the 'Standby Mode'.
2. Press the following sequence of buttons on the Remote Commander.

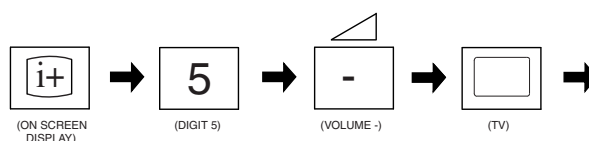

3. The following table will be displayed indicating the error count.

Table 2

ERROR MENU			
E02	OCP	(0, 255)	0
E03	OVP N/A	(0, 255)	0
E04	VSYNC	(0, 255)	0
E05	IKR	(0, 255)	0
E06	IIC	(0, 255)	0
E07	NVM	(0, 255)	0
E08	JUNGLE	(0, 255)	0
E09	TUNER	(0, 255)	0
E10	SOUNDP	(0, 255)	0
E11	8V	(0, 255)	0
WORKING TIME			
HOURS			2
MINUTES			11


**Note:** To clear the error count data press '80' on the Remote commander.

The operating instructions mentioned here are partial abstracts from the 'Operating Instruction Manual'. The page numbers of the 'Operating Instruction Manual' remain as in the manual.


## Switching On the TV and Automatically Tuning

The first time you switch on your TV, a sequence of menu screens appear on the TV enabling you to: 1) choose the language of the menu screen, 2) adjust the picture slant 3) search and store all available broadcast channels and 4) change the order in which the broadcast channels appear on the screen. However, if you need to change any of these settings at a later date, you can do that by selecting the appropriate option in the **Set Up** menu) or by pressing the **Auto Start Up** Button **ASU** on the TV set.

- 1 Connect the TV plug to the mains socket (220-240V AC, 50Hz)  
The first time the TV set is connected, it is usually turned on. If the TV is off, press the **On/Off** button on the TV set to turn on the TV.  
The first time you switch on the TV, a **Language** menu displays automatically on the TV screen.

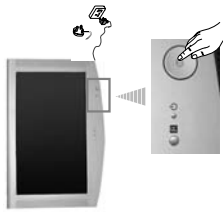


- 2 Press the **Up** or **Down** button on the remote control to select the language, then press the **OK** button to confirm your selection. From now on all the menus will appear in the selected language.



- 3 Because of the earth's magnetism, the picture might slant. The **Picture Rotation** menu allows you to correct the picture slants if it is necessary.

- a) If it is not necessary, press **Up** or **Down** to select **Not necessary** and press **OK**.
- b) If it is necessary, press **Up** or **Down** to select **Adjust now**, then press **OK** and correct any slant of the picture between -5 and +5 by pressing **Left** or **Right**. Finally press **OK** to store.




continued...

- 4 The **Auto Tuning** menu appears on the screen. Press the **OK** button to select **Yes**.




- 5 The TV starts to automatically search and store all available broadcast channels for you.




**Warning:** This procedure could take some minutes. Please be patient and do not press any buttons, otherwise the automatic tuning will not be completed.

**Warning:** If no channels were found during the auto tuning process then a new menu appears automatically on the screen asking you to connect the aerial. Please connect the aerial (see page 6) and press **OK**. The auto tuning process will start again.




- 6 After all available broadcast channels are captured and stored, the **Programme Sorting** menu appears automatically on the screen enabling you to change the order in which the broadcast channels appear on the screen.

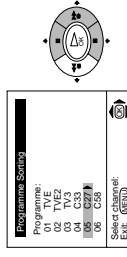

- a) If you wish to keep the broadcast channels in the tuned order, go to step 7.

- b) If you wish to store the broadcast channels in a different order:
  - 1 Press the **Up** or **Down** button to select the programme number with the broadcast channel you wish to rearrange, then press the **Right** button.
  - 2 Press the **Up** or **Down** button to select the new programme number position for your selected broadcast channel, then press **Left**.
  - 3 Repeat steps b)1 and b)2 if you wish to change the order of the other broadcast channels.

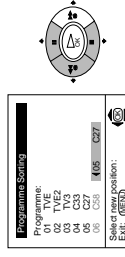


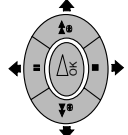
- 7 Press the **MENU** button to remove the menu from the screen.



*Your TV is now ready for use*

# Introducing and Using the Menu System


Your TV uses an on-screen menu system to guide you through the operations. Use the following buttons on the Remote Control to operate the menu system:

- 1 Press the **MENU** button to switch the first level menu on.
 
- 2 To highlight the desired menu or option, press **right** or **left**.
  - To enter to the selected menu or option, press **enter**.
  - To return to the last menu or option, press **back**.
  - To alter settings of your selected option, press **up** / **down** / **left** or **right**.
  - To confirm and store your selection, press **OK**.
 


- 3 Press the **MENU** button to remove the menu from the screen.
 

## Menu Guide

**Level 1**

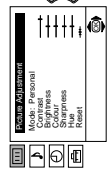

**Level 2**

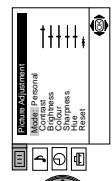

**Level 3 / Function**

**PICTURE ADJUSTMENT**  
The "Picture Adjustment" menu allows you to alter the picture adjustments.

To do this: after selecting the item you want to alter press **right**, then press repeatedly **right** / **left** / **up** or **down** to adjust it and finally press **OK** to store the new adjustment.  
This menu also allows you to customise the picture mode based on the programme you are watching:

- Personal** (for individual settings).
- Live** (for live broadcast programmes, DVD and Digital Set Top Box receivers).
- Movie** (for films).

- **Brightness, Colour and Sharpness** can only be altered if "Personal" mode is selected.
- **Hue** is only available for NTSC colour signal (e.g. USA video tapes).
- Select **Reset** and press **OK** to reset the picture to the factory preset levels.

## Level 1



## Level 2




## Level 3 / Function

**SLEEP TIMER**  
The "Sleep Timer" option in the "Timer" menu allows you to select a time period for the TV to switch itself automatically into the standby mode.

To do this: after selecting the option press **right**, then press **up** or **down** to set the time period delay (max. of 4 hours) and finally press **OK** to store.

- While watching the TV, you can press the **stop** button on the remote control to display the time remaining.
- One minute before the TV switches itself into standby mode, the time remaining is displayed on the TV screen automatically.

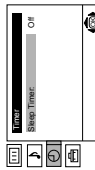

## LANGUAGE

The "Language" option in the "Set Up" menu allows you to select the language that the menus are displayed in.

To do this: after selecting the option, press **right** and then proceed in the same way as in the step 2 of the section "Switching On the TV and Automatically Tuning".




**GB**

## AUTO TUNING

The "Auto Tuning" option in the "Set Up" menu allows you to automatically search for and store all available TV broadcast channels.

To do this: after selecting the option, press **right** and then proceed in the same way as in TV steps 4 and 5 of the section "Switching On the TV and Automatically Tuning".


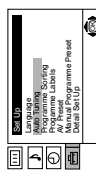
continued...



## Level 1

## Level 2

## Level 3 / Function



**AV2 OUTPUT**  
The "AV2 Output" option in the "Detail Set Up" menu allows you to select the source to be output from the Scart connector (2) / (3). You can record from this Scart any signal coming from the TV or from external equipment connected to the Scart connector (1) / (4) or side connectors (3) and (3).

**i** If your VCR supports Smartlink, this procedure is not necessary.

To do this: after selecting the option, press **➔**. Then press **➔** or **➤** to select the desired output signal: TV, AV1, AV3, YC3 or AUTO.

**A** If you select "AUTO", the output signal will always be the same one that is displayed on the screen.

**A** If you have connected a decoder to the Scart (2) / (3) or to a VCR connected to this Scart, please remember to change back the "AV2 Output" to "AUTO" or "TV" for correct unscrambling.

## Teletext

**i** Teletext is an information service transmitted by most TV stations. The index page of the teletext service (usually page 100) gives you information on how to use the service. To operate teletext, use the remote control buttons as indicated below.

**A** Make sure to use a broadcast channel with a strong signal, otherwise teletext errors may occur.

### To Switch On Teletext :

After selecting the TV channel which carries the teletext service you wish to view, press **⏏**.

### To Select a Teletext page:

Input 3 digits for the page number, using the numbered buttons.

- If you have made a mistake, retype the correct page number.
- If the counter on the screen continues searching, it is because this page is not available. In that case, input another page number



### To access the next or preceding page:

Press **PROG + (2)** or **PROG - (1)**.

### To superimpose teletext on to the TV:

Whilst you are viewing teletext, press **⏏**. Press it again to cancel teletext mode.

### To freeze a teletext page:

Some teletext pages have sub-pages which follow on automatically. To stop them, press **⏏** / **⏏**. Press it again to cancel the freeze.

### To reveal concealed information (e.g. answer to a quiz):

Press **(2)** / **(2)**. Press it again to conceal the information.


### To Switch Off Teletext:

Press **⏏**.

## Fastext

**i** Fastext service lets you access pages with one button push.



While you are in Teletext mode and Fastext is broadcast, a colour coded menu appears at the bottom of the teletext page. Press the colour button (red, green, yellow or blue) to access the corresponding page.



## RGB CENTRING

When connecting an RGB source, such as a "PlayStation", you may need to readjust the horizontal position of the picture. In that case, you can readjust it through the "RGB Centring" option in the "Detail Set Up".

To do this: while watching an RGB source select the "RGB Centring" option and press **➔**. Then press **➔** or **➤** to adjust the centre of the picture between -10 and +10. Finally press **OK** to confirm and store.




## PICTURE ROTATION

Because of the earth's magnetism, the picture might slant. In this case, you can correct the picture slant by using the option "Picture Rotation" in the "Detail Set Up" menu.

To do this: after selecting the option, press **➔**. Then press **➔** or **➤** to correct any slant of the picture between -5 and +5 and finally press **OK** to store.

## Connecting Optional Equipment

**1** Using the following instructions you can connect a wide range of optional equipment to your TV set. (Connecting cables are not supplied).

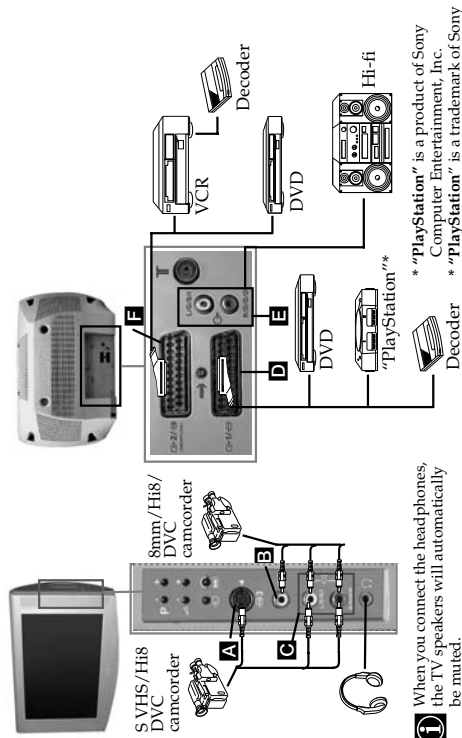

**1** When you connect the headphones, the TV speakers will automatically be muted.

\*PlayStation\*\* is a product of Sony Computer Entertainment, Inc.  
\*PlayStation\*\* is a trademark of Sony Computer Entertainment, Inc.

**2** To avoid picture distortion, do not connect external equipment to connectors **A** and **B** at the same time.

### Connecting a VCR:

To connect a VCR, please refer to the section "Connecting the aerial and VCR" of this instruction manual. We recommend you connect your VCR using a scart lead. If you do not have a scart lead, tune in the VCR test signal to the TV programme number "0" by using the "Manual Programme Preset" option. (for details of how to manually programme these presets, see page 13, step a).

Refer to your VCR instruction manual to find out how to find the output channel of your VCR.

### Connecting a VCR that supports Smartlink:

**1** Smartlink is a direct link between the TV set and the VCR. For more information on Smartlink, please refer to the instruction manual of your VCR.  
If you use a VCR that supports Smartlink, please connect the VCR by using a Scart lead to the Scart **2**/**3** **F**.

continued...


### Connecting to external Audio Equipment:

Plug in your Hi-Fi equipment to the audio output sockets **E** if you wish to amplify the audio output from TV. Next, using the menu system, select the "Sound Adjustment" menu. Enter the "Detail Adjustment" option and set "TV Speakers" to "Off".

**1** The audio level of the external speakers can be modified by pressing the volume buttons on the remote control. Also treble and bass settings can be modified through the "Sound Adjustment" menu.

### To enjoy "Dolby Virtual" sound effect through your Hi-Fi equipment:

Place the speakers of your equipment in front of your sitting place and besides the TV set but keep a distance of 50 cm from each speaker to the TV set. Then by using the menu system, select the menu "Sound Adjustment". Next select "Detail Adjustment" and set "Dolby Virtual" to "On".

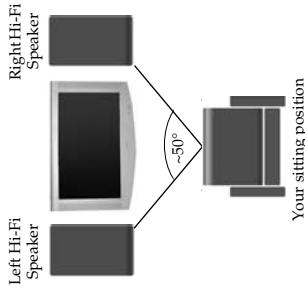

**GB**

## Using Optional Equipment

- 1 Connect your equipment to the designated TV socket, as indicated in the previous page.
- 2 Switch on the connected equipment.
- 3 To watch the picture of the connected equipment, press the **2** button repeatedly until the correct input symbol appears on the screen.

### Symbol Input Signals

- 1** • Audio / video input signal through the Scart connector **D**
  - 2** • RGB input signal through the Scart connector **D**. This symbol appears only if a RGB source has been connected.
  - 2** • Audio / video input signal through the Scart connector **F**.
  - 3** • S Video input signal through the Scart connector **F**.
  - 3** • Video input signal through the phono socket **B** and Audio input signal through **C**.
  - 3** • S Video Input signal through the front S Video input jack **A** and Audio signal through **C**.
- 4 Press **0** button on the remote control to return to the normal TV picture.

### For Mono Equipment

Connect the phono plug to the L/G/S/1 socket on the front of the TV and select **3** or **3** input signal using the instructions above. Finally, refer to the "Sound Adjustment" section of this manual and select "Dual Sound" "A" on the sound menu screen.

## Specifications

### TV system:

I

### Colour system:

PAL

SECAM, NTSC 3.58, 4.43 (only Video In)

### Channel Coverage:

I: UHF B21-B69

### Picture Tube:

Flat Display FD Trinitron WIDE

- KV-28LS35U: 28" (approx. 71 cm. measured diagonally)
- KV-32LS35U: 32" (approx. 82 cm. measured diagonally)

### Rear Terminals

 21-pin scart connector





(CENELEC standard) including audio/video input, RGB input, TV audio/video output.

 21-pin Scart connector

(CENELEC standard) including audio / video input, S video input, selectable audio / video output and Smartlink interface.

 audio outputs (Left/Right) - phono jacks

### Side Terminals

-  5 Video input - 4 pin DIN
-  video input - phono jack
-  audio input - phono jacks
-  headphones jack









**Design and specifications are subject to change without notice.**

**Ecological Paper: Totally Chlorine Free** 

## Troubleshooting



Here are some simple solutions to the problems which may affect the picture and sound.

Problem	Solution
No picture (screen is dark) and no sound.	<ul style="list-style-type: none"> <li>• Check the aerial connection.</li> <li>• Plug the TV in and press the  button on the front of the TV.</li> <li>• If the standby indicator  is on, press TV  button on the remote control.</li> <li>• Using the menu system, select the "Picture Adjustment" menu and select "Reset" to return to the factory settings.</li> </ul>
Poor or no picture (screen is dark), but good sound.	<ul style="list-style-type: none"> <li>• Check that the optional equipment is on and press the  button repeatedly on the remote control until the correct input symbol is displayed on the screen.</li> <li>• Press the  +/- button on the remote control.</li> <li>• Check that "TV Speakers" is "On" on the "Sound Adjustment" menu.</li> <li>• Check that headphones are not connected.</li> </ul>
No colour on colour programmes.	<ul style="list-style-type: none"> <li>• Using the menu system, select the "Picture Adjustment" menu and select "Reset" to return to factory settings.</li> <li>• Turn off any equipment connected to the Scart connector on the rear of the TV.</li> </ul>
Distorted picture when changing programmes or selecting teletext.	<ul style="list-style-type: none"> <li>• Using the menu system, select the "Picture Rotation" option in the "Detail Set Up" menu to correct the picture slant.</li> <li>• Using the menu system, select the "Manual Programme Preset" menu and adjust Fine Tuning (AFT) to obtain better picture reception.</li> <li>• Using the menu system, select the "Noise Reduction" option in the "Detail Set Up" menu and select "Auto" to reduce the noise in the picture.</li> </ul>
Noisy picture when viewing a TV channel.	<ul style="list-style-type: none"> <li>• Using the menu system, select the "Set Up" menu. Then enter to "Detail Set Up" option and set "AV2 Output" to "TV".</li> </ul>
No unscrambling or unstable picture whilst viewing a scrambling channel with a decoder connected through the Scart connector   .	<ul style="list-style-type: none"> <li>• Check that the Media Selector on the remote control is set according to the device you are using (VCR, TV or DVD).</li> <li>• If the remote control does not operate the VCR or DVD even when the Media Selector has been set correctly. Enter the necessary code as explained on "Remote Control Configuration for VCR/DVD" chapter of this instruction manual.</li> <li>• Replace the batteries.</li> <li>• Contact your nearest Sony service centre.</li> </ul>
Remote control does not function.	<ul style="list-style-type: none"> <li>• Check that the Media Selector on the remote control is set according to the device you are using (VCR, TV or DVD).</li> <li>• If the remote control does not operate the VCR or DVD even when the Media Selector has been set correctly. Enter the necessary code as explained on "Remote Control Configuration for VCR/DVD" chapter of this instruction manual.</li> <li>• Replace the batteries.</li> <li>• Contact your nearest Sony service centre.</li> </ul>
The standby indicator  on the TV flashes.	<ul style="list-style-type: none"> <li>• Contact your nearest Sony service centre.</li> </ul>



If you continue to experience problems, have your TV serviced by qualified personnel. Never open the casing yourself.

## GB

### Sound Output:

- 2 x 14 W (music power)
- 2 x 7 W (RMS)

### Woofer:

- 20 W (music power)
- 10 W (RMS)

### Power Consumption:

- KV-28LS35U: 90 W
- KV-32LS35U: 88 W

### Standby Power Consumption:

0.54 W

### Dimensions (w x h x d) :

- KV-28LS35U: Approx. 806 x 497 x 540 mm.
- KV-32LS35U: Approx. 891 x 564 x 584 mm.

### Weight:

- KV-28LS35U: 43 Kg.
- KV-32LS35U: 60.5 Kg.

### Accessories supplied:

- 1 Remote Control (RM-932)
- 2 Batteries (IEC designated)

### Other features:

- Teletext, Fastext, TOPtext
- Sleep Timer
- Smartlink (direct link between your TV set and a compatible VCR. For more information on Smartlink, please refer to the Instruction Manual of your VCR).
- Dolby Virtual
- Auto Format

## SECTION 2 DISASSEMBLY

### 2-1. Rear Cover Removal




Release the mains power cable from its securing posts. Remove the rear cover fixing screws indicated. Pull the rear cover away from the front beznet. Take care when removing the rear cover not to damage the speaker cables as speakers are fitted inside the rear cover.

### 2-2. Speaker Connector Disconnection




Before completely removing the rear cover disconnect the speaker connectors which are located on the inside base of the beznet.

### 2-3. Chassis Removal and Refitting

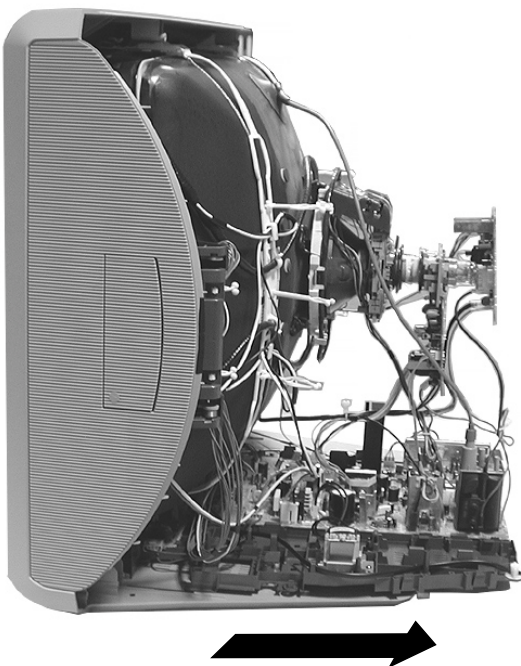


To remove lift the main bracket rear slightly and slide the chassis away from the beznet. Ensure that the interconnecting leads are released from their purse locks to prevent damage being caused.

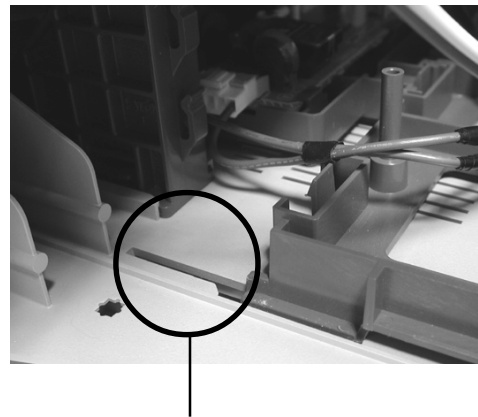

When refitting the chassis ensure that the main bracket is located in the beznet guide slots before sliding the chassis forwards. Refit the interconnecting leads in their respective purse locks.


#### 2-4. A Board PWB Removal [ Step 1 ]

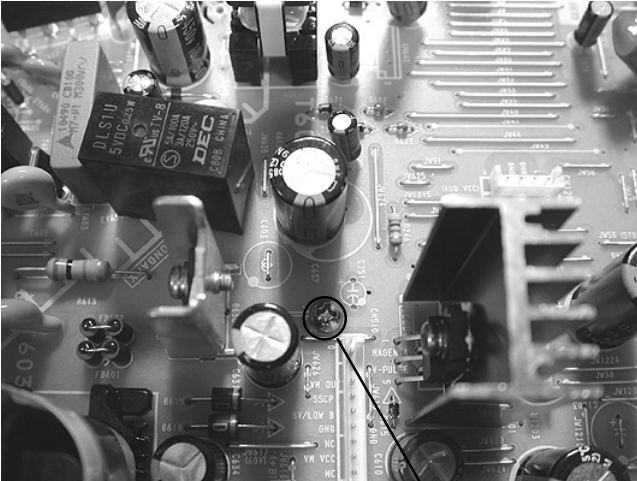

Screw.

Remove the screw securing the PWB to the main bracket.


#### 2-5. A Board PWB Removal [ Step 2 ]

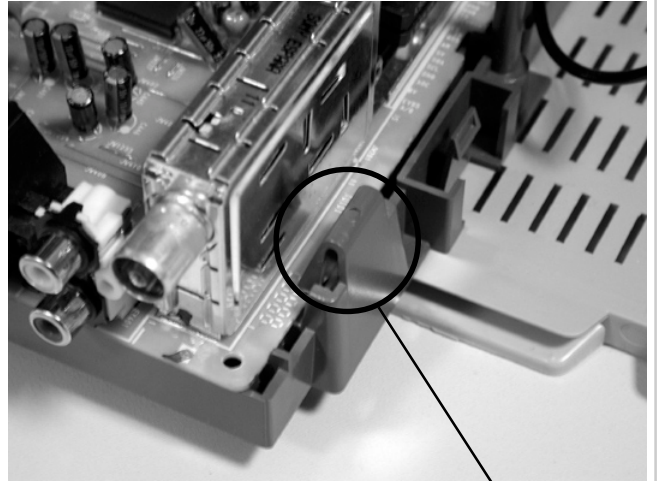

Clip.


Release the 5 securing clips located at the side and front of the chassis and slide the PWB clear of the bracket.

#### 2-6. Service Position

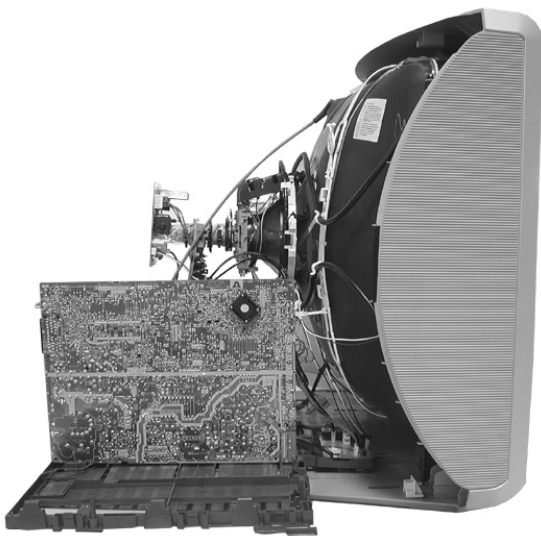

Place the A Board PWB in the position indicated to carry out servicing.

#### 2-7. Side Control Module Removal

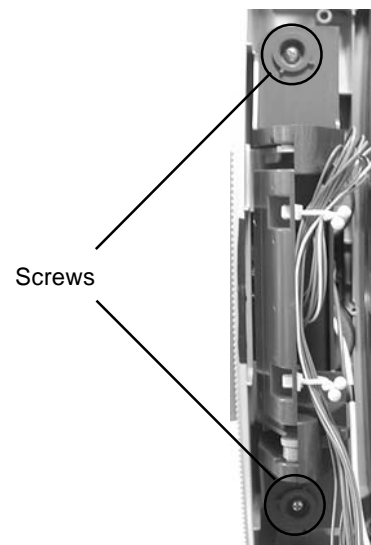



Screws

Remove the two screws fixing the user control module to the side of the set. The control module can then be removed by sliding it towards the rear of the set allowing access to the H2 Board.

## 2-8. Picture Tube Removal

### WARNING: BEFORE REMOVING THE ANODE CAP


High voltage remains in the CRT even after the power is disconnected. To avoid electric shock, discharge CRT **before** attempting to remove the anode cap. Short between anode and CRT coated earth ground strap.

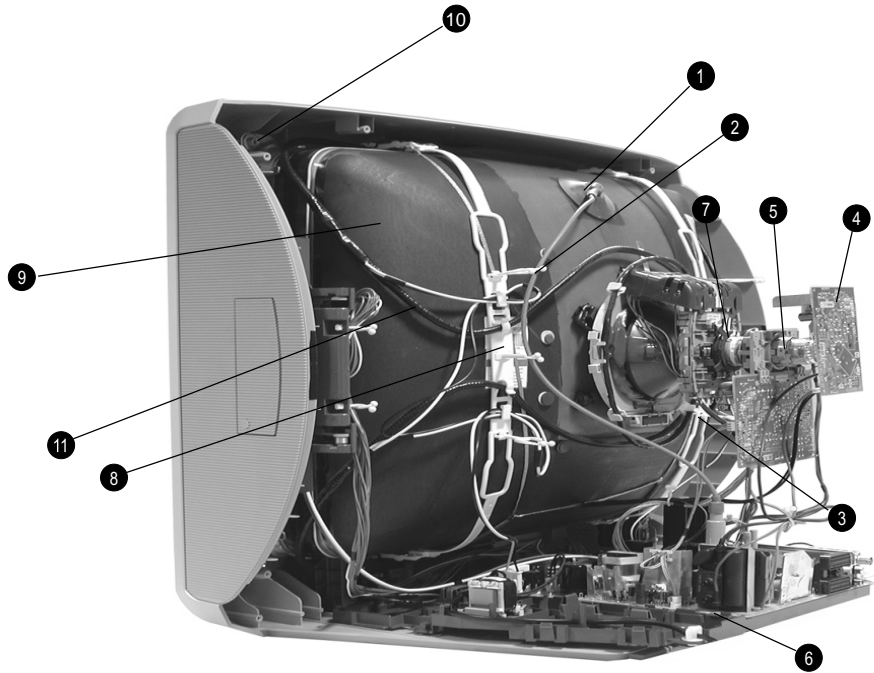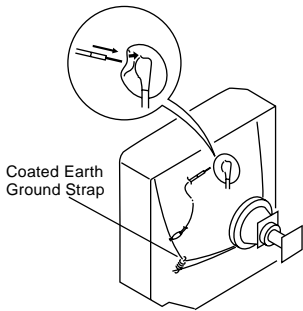

1. Discharge the anode of the CRT and remove the anode cap.
2. Release the EHT lead from its CRT support bracket.
3. Unplug all interconnecting leads from the Deflection yoke, degaussing coils, Rotation coil and CRT grounding strap.
4. Remove the C Board from the CRT.
5. Loosen the VM Block fixing screw and remove.
6. Remove the chassis assembly.
7. Loosen the Deflection yoke fixing screw and remove.
8. Remove the Degaussing Coil holders.
9. Place the set with the CRT face down on a cushion.
10. Unscrew the four CRT fixing screws [ located on each CRT corner ] and remove the CRT.
11. Remove the Degaussing Coils.  
Remove the CRT grounding strap and spring tentioners.  
[Take care not to handle the CRT by the neck.]

### Removal of the Anode-Cap


#### \* REMOVING PROCEDURES.

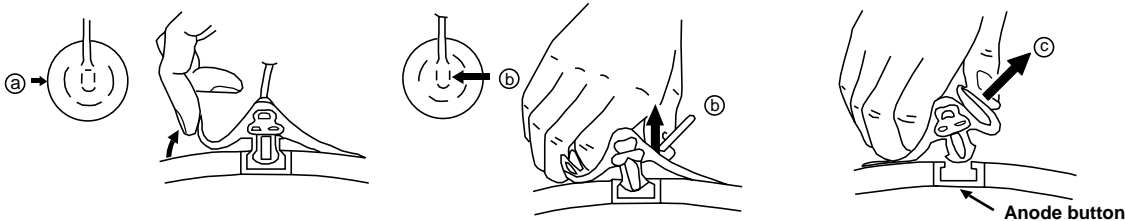

- ① Turn up one side of the rubber cap in the direction indicated by the arrow ①
- ② Using a thumb pull up the rubber cap firmly in the direction indicated by the arrow ②
- ③ When one side of the rubber cap is separated from the anode button, the anode-cap can be removed by turning up the rubber cap and pulling it up in the direction of the arrow ③

### How to handle the Anode-Cap

1. To prevent damaging the surface of the anode-cap do not use sharp materials.
2. Do not apply too great a pressure on the rubber, as this may cause damage to the anode connector.
3. A metal fitting called a shatter hook terminal is fitted inside the rubber cap.
4. Do not turn the rubber foot over excessively, this may cause damage if the shatter hook sticks out.

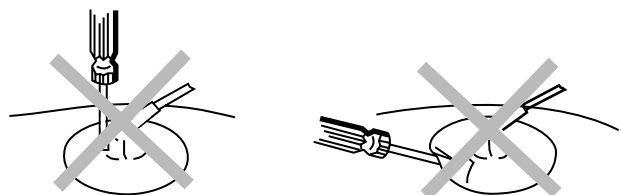

## SECTION 3 SET-UP ADJUSTMENTS

- When complete readjustment is necessary or a new picture tube is installed, carry out the following adjustments.
- Unless there are specific instructions to the contrary, carry out these adjustments with the rated power supply.
- Unless there are specific instructions to the contrary, set the controls and switches to the following settings :

Contrast ..... 80% [or remote control normal]

Brightness ..... 50%

**Carry out the adjustments in the following order :**

- 3-1. Beam Landing.
- 3-2. Convergence.
- 3-3. Focus.
- 3-4. White Balance.

**Note :** Test equipment required.

1. Color bar/pattern generator.
2. Degausser.
3. Oscilloscope.
4. Digital multimeter.

### Preparation:

1. In order to reduce the influence of geomagnetism on the set's picture tube, face it in an easterly or westerly direction.
2. Switch on the set's power and degauss with the degausser.

### 3-1. Beam Landing

1. Input an all white signal from the pattern generator. Set the Contrast and Brightness to normal.
2. Set the pattern generator raster signal to Red.
3. Move the deflection yoke forward and adjust with the purity control so that the Red is at the centre and the Blue and Green take up equally sized areas on each side of the screen. [See Fig.3-1 - 3-3].
4. Move the deflection yoke backwards and adjust so that the entire screen becomes Red. [See Fig.3-1]
5. Switch the raster signal to Blue, then to Green and verify the condition.
6. When the position of the deflection yoke has been determined, fasten the deflection yoke with the screws.
7. If the beam does not land correctly in all the corners, use a magnet to correct it. [See Fig.3-4]

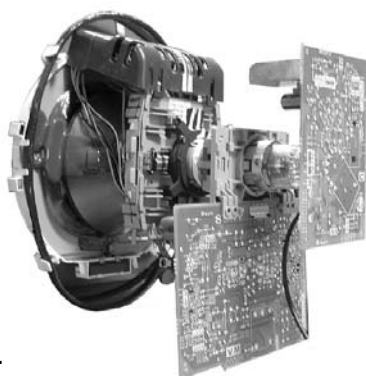


Fig. 3-1.

### Caution :

High voltages are present on the Deflection yoke terminals - take care when handling the Deflection yoke whilst carrying out adjustments.

Fig. 3-2.

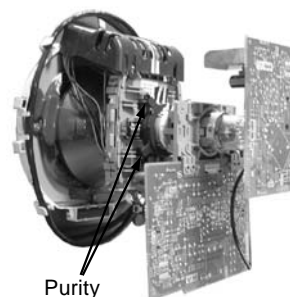


Fig. 3-3.

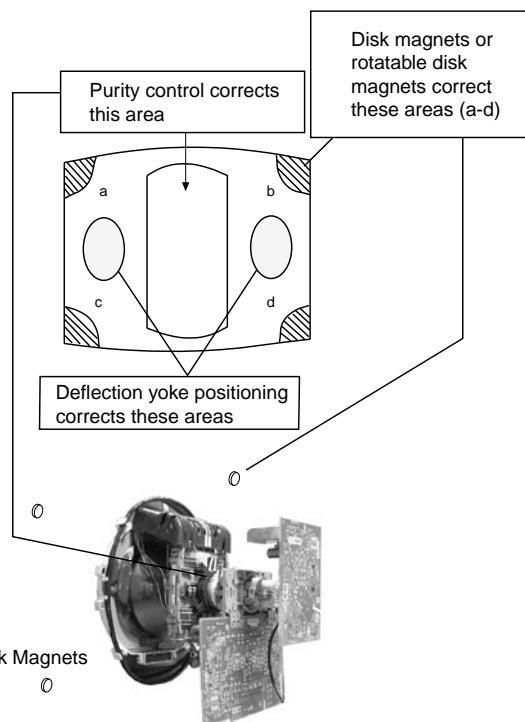
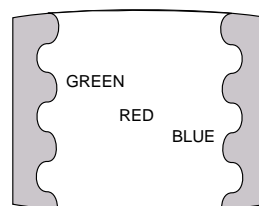


Fig.3-4

## 3-2. Convergence

### Preparation:

- Before starting this adjustment, adjust the focus, horizontal size and vertical size.
- Minimize the Brightness setting.
- Input a dot pattern from the pattern generator.

### Horizontal and Vertical Static Convergence


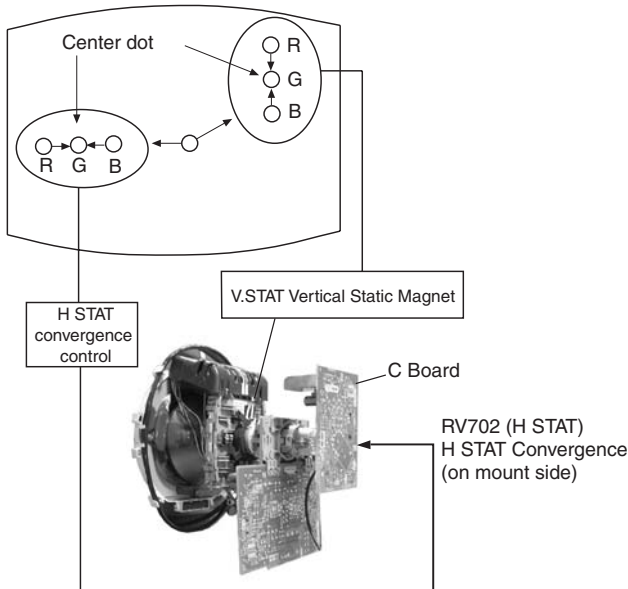


Fig.3-5


1. [Moving horizontally], adjust the H.STAT control so that the Red, Green and Blue points are on top of each other at the centre of the screen.
2. [Moving vertically], adjust the V.STAT magnet so that the Red, Green and Blue points are on top of each other at the centre of the screen.
3. If the H.STAT variable resistor is unable to bring the Red, Green and Blue points together at the centre of the screen, adjust the horizontal convergence with the H.STAT variable resistor and the V.STAT magnet in the manner indicated below.

[In this case, the H.STAT variable resistor and the V.STAT magnet influence each other].


- Tilt the V.STAT magnet and adjust the static convergence by opening or closing the V.STAT magnet.

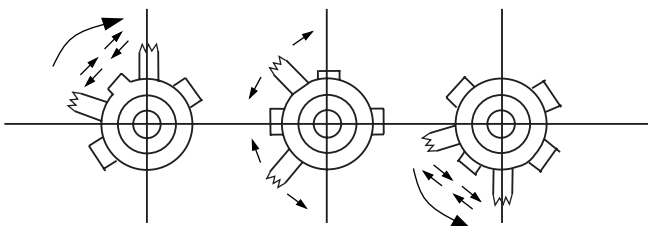

4. If the V.STAT magnet is moved in the direction of the (a) and (b) arrows, the Red, Green and Blue points move as indicated below.

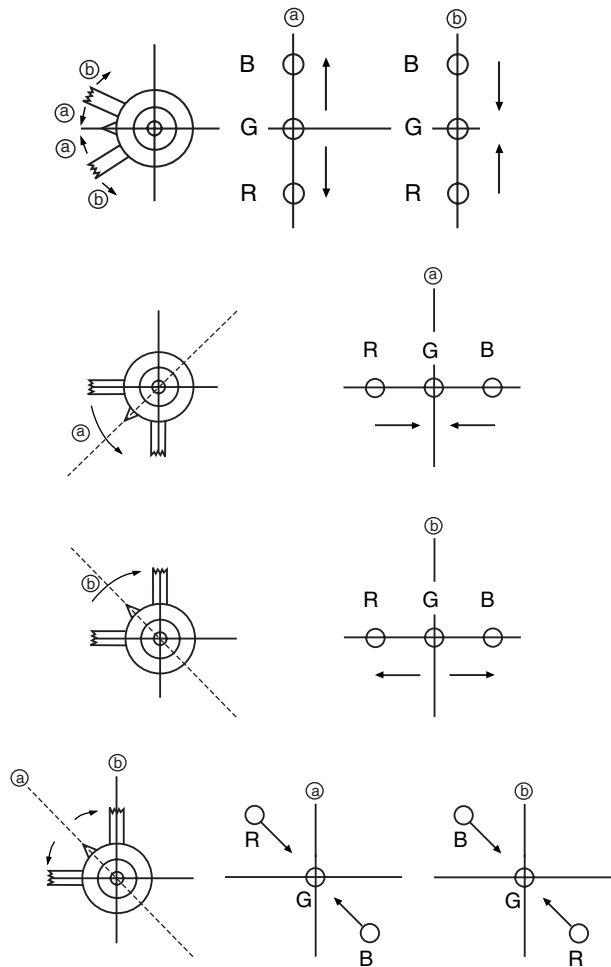

### Operation of the BMC (Hexapole) magnet.

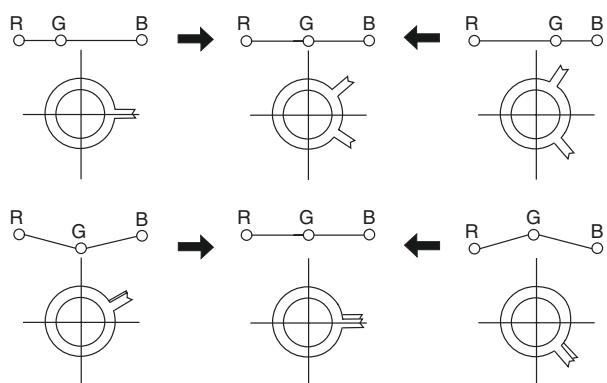

The movement of the magnets interact with each other and so the respective dot position should be monitored while carrying out this adjustment.

Use the H.STAT VR to adjust the Red, Green and Blue dots so that they coincide at the centre of the screen (by moving the dots in the horizontal direction).




## Geometry Adjustment.


### Preparation:

Before starting this adjustment, adjust the horizontal and vertical static convergence.


1. Remove the deflection yoke spacer.
2. Tilt the deflection yoke as indicated in the figure below and optimise the geometry.  
Tilting the DY Up and Down will balance the upper and lower pin adjustment.  
Tilting the DY Left and Right will balance the H-Trap adjustment.
3. Re-install the deflection yoke spacer.

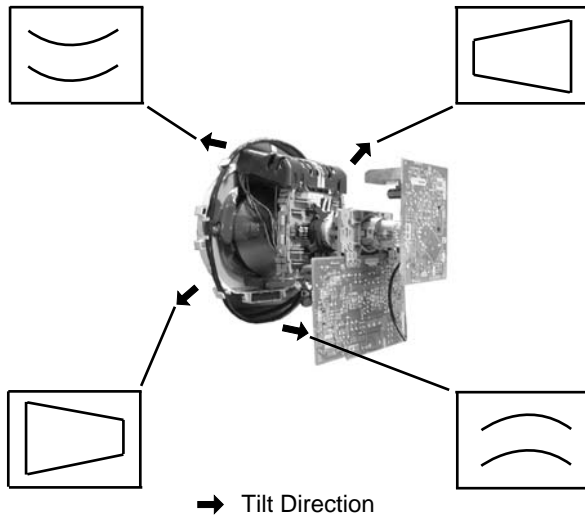


## HTIL Adjustment

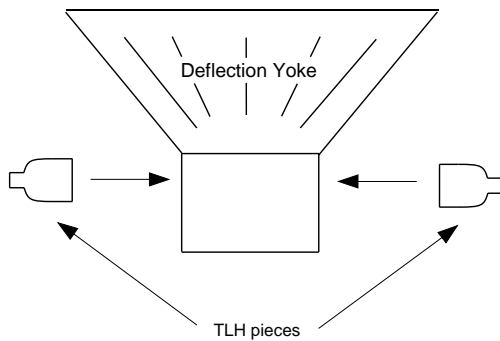


HTIL correction can be performed by adding a TLH correction assembly to the Deflection yoke.

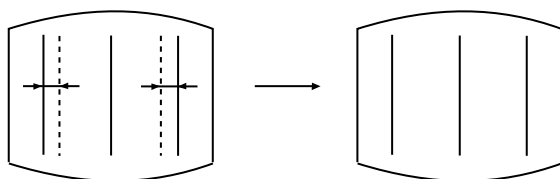

## YCH Adjustment





## TLV Adjustment




## Screen Corner Convergence

If you are unable to adjust the corner convergence properly, this can be corrected with the use of permalloy magnets.

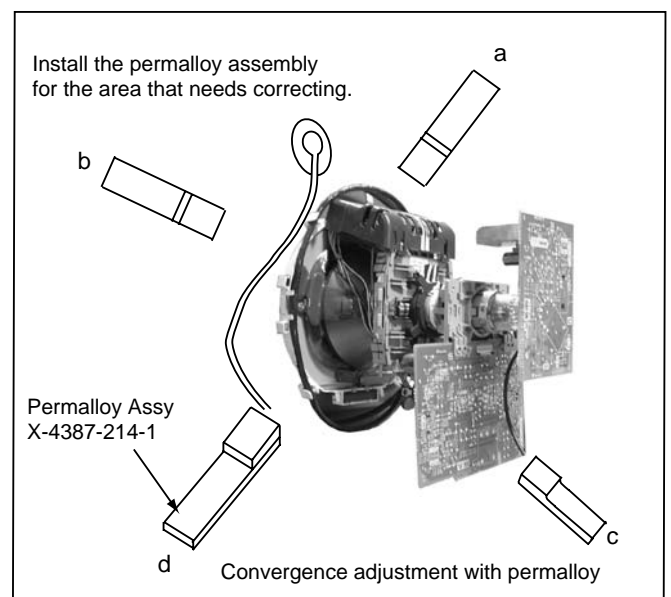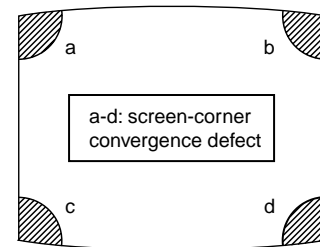


### Layout of each control

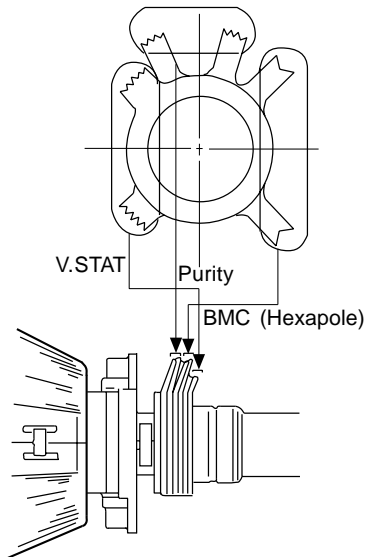

### 3-3. Focus Adjustment

1. Receive a television broadcast signal.
2. Normalize the picture setting.
3. Adjust the focus control located on the flyback transformer to obtain the best focus at the centre of the screen. Bring only the centre area of the screen into focus, the magenta-ring appears on the screen. In this case, adjust the focus to optimize the screen uniformly.

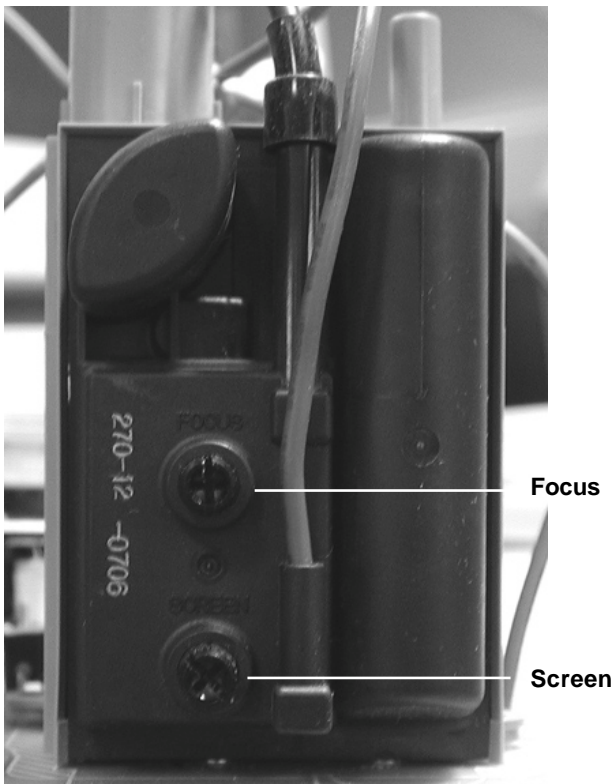

### 3-4. Screen (G2), White Balance

[Adjustment in the service mode using the remote commander]

#### G2 adjustment

1. Input a dot signal from the pattern generator.
2. Enter the 'Service Mode' by pressing 'TEST', 'TEST' and '38' (TT-38) on the remote commander, to set up the G2 service adjustment mode.
3. Whilst watching the picture, adjust the G2 control [SCREEN] located on the Flyback Transformer to the point where the OSD menu indication shows "OK".

#### White balance adjustment for TV mode

1. Input an all-white signal from the pattern generator.
2. Enter into the 'Service Mode' by pressing 'TEST', 'TEST' and 'MENU' on the Service Commander.
3. Select 'Service' from the on screen menu display and press the right arrow button on the remote commander.
4. The 'Service' menu will appear on the screen. [See Page 19]
5. Set the 'Contrast' to MAX.
6. Set the 'R-Drive' to 25.
7. Adjust the 'G-Drive' and the 'B-Drive' so that the white balance becomes optimum.
8. Press the 'OK' button to write the data for each item.
9. Set the 'Contrast' to MIN.
10. Adjust the 'G-Cutoff', and the 'R-Cutoff' with the left and right buttons on the remote commander so that the white balance becomes optimum.
11. Press the 'OK' button to write the data for each item.


# SECTION 4 CIRCUIT ADJUSTMENTS

## 4-1. Electrical Adjustments

Service adjustments to this model can be performed using the supplied remote Commander RM-932.

### How to enter into the Service Mode

1. Turn on the main power switch and enter into the stand-by mode.
2. Press the following sequence of buttons on the Remote Commander.

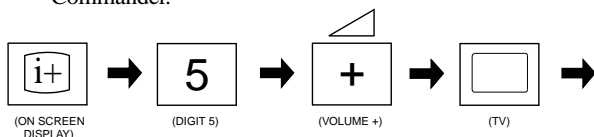

'TT—' will appear in the upper right corner of the screen.  
Other status information will also be displayed.

3. Press 'MENU' on the remote commander to obtain the following menu on the screen.

Geometry	
Service	
Design	
Status	
Sound	
IF adjust	
Error Menu	
FE-2 Stereo v1.30	
Factory data FFh FFh	
MSP Device : MSP3411G	

4. Move to the corresponding adjustment item using the up or down arrow buttons on the Remote Commander.
5. Press the right arrow button to enter into the required menu item.
6. Press the 'Menu' button on the Remote Commander to quit the Service Mode when all adjustments have been completed.

#### Note :

- Before performing any adjustments ensure that the correct model has been selected in the 'Model Setting' menu.
- After carrying out the service adjustments, to prevent the customer accessing the 'Service Menu' switch the TV set OFF and then ON.

#### ERROR MENU

E02	OCP	(0, 255)	0
E03	OVP N/A	(0, 255)	0
E04	VSYNC	(0, 255)	0
E05	IKR	(0, 255)	0
E06	IIC	(0, 255)	0
E07	NVM	(0, 255)	0
E08	JUNGLE	(0, 255)	0
E09	TUNER	(0, 255)	0
E10	SOUNDP	(0, 255)	0
E11	8V	(0, 255)	0

#### WORKING TIME

HOURS	2
MINUTES	11

#### SERVICE

Offset-R	(0, 63)	Adj
Offset-G	(0, 63)	Adj
R-Drive	(0, 63)	25
G-Drive	(0, 63)	Adj
B-Drive	(0, 63)	Adj
Peak-Freq	(0, 3)	0
Luma-Delay	(0, 15)	8
SC0	(0, 3)	2
White-Peak	(0, 15)	15
Subcont	(0, 15)	4
Subright	(0, 63)	31
Subcol	(0, 63)	Adj
Subsharp	(0, 63)	31
Cutoff Br.	(0, 63)	60
Br OSD	(0, 15)	10
Br TXT	(0, 15)	9

#### GEOMETRY

V-Linearity	(0, 63)	Adj
V-Scroll	(0, 63)	32
Left-HBlk	(0, 15)	8
Right-HBlk	(0, 15)	6
V-Angle	(0, 63)	Adj
V-Bow	(0, 63)	Adj
H-Centre	(0, 63)	Adj
H-Size	(0, 63)	Adj
Pin-Amp	(0, 63)	Adj
U-Corner-Pin	(0, 63)	Adj
L-Corner-Pin	(0, 63)	Adj
Pin Phase	(0, 63)	Adj
V-Slope	(0, 63)	35
V-Size	(0, 63)	Adj
S-Correction	(0, 63)	Adj
V-Centre	(0, 63)	Adj
V-Zoom	(0, 63)	23
Magenta	(0, 63)	40

#### IF ADJUST

AGC Adjust	(-16, +15)	+0
Automute		1
Audio Gain		0
L Gating		0

### Sub Brightness Adjustment


1. Input a Monoscope pattern.
2. Press 'TEST' 'TEST' 13 on the Remote Commander.
3. Adjust the 'Sub-Brightness' data so that there is barely a difference between the 0 IRE and 10 IRE signal levels.

### Sub Contrast Adjustment

1. Input a video signal that contains a small 100% white area on a black background.
2. Connect an digital voltmeter to Pin 10 of J701 [C Board].
3. Adjust the Sub-Contrast ['TT11'] to obtain a voltage of 105 +/- 5V.

## Sub Colour Adjustment

1. Receive a PAL colour bar signal.
2. Connect an oscilloscope to Pin 5 of CN003 [A Board].
3. Enter into the 'Service' service menu.
4. Adjust the 'Sub Colour' data so that the Cyan, Magenta and Blue colour bars are of equal levels as indicated below.

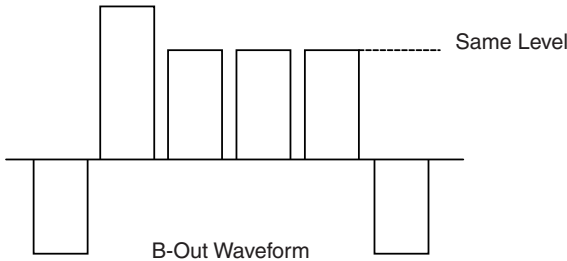


## Tuner AGC Adjustment

### Note:

There should be no need to adjust the AGC as this is pre-adjusted during manufacture of the FRONTEND. If the AGC does need adjustment then follow steps 1. to 4. below.

1. Receive a signal of 62dBuV / 75 ohm terminated via the tuner antenna socket.
2. Connect a voltmeter to pin 1 of TU101 [print side of A Board] or to the AGC pin of CN001 [mount side of A Board].
3. Confirm that the AGC voltage is 3.5volts +/- 0.3volts.
4. If adjustment is required, then re-adjust the AGC variable resistor (located at the top rear of the FRONTEND) to obtain a voltage of 3.5V +/- 0.3V.

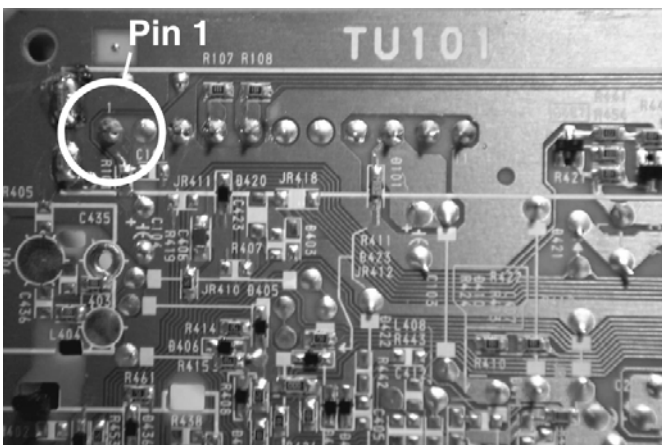


[ Print side of A board ]

## Deflection System Adjustment

1. Enter into the 'Geometry' service menu.
2. Select and adjust each item in order to obtain the optimum image.

### GEOMETRY

V-Linearity	(0, 63)	Adj
V-Scroll	(0, 63)	32
Left-HBlk	(0, 15)	8
Right-HBlk	(0, 15)	6
V-Angle	(0, 63)	Adj
V-Bow	(0, 63)	Adj
H-Centre	(0, 63)	Adj
H-Size	(0, 63)	Adj
Pin-Amp	(0, 63)	Adj
U-Corner-Pin	(0, 63)	Adj
L-Corner-Pin	(0, 63)	Adj
Pin Phase	(0, 63)	Adj
V-Slope	(0, 63)	35
V-Size	(0, 63)	Adj
S-Correction	(0, 63)	Adj
V-Centre	(0, 63)	Adj
V-Zoom	(0, 63)	23
Magenta	(0, 63)	40

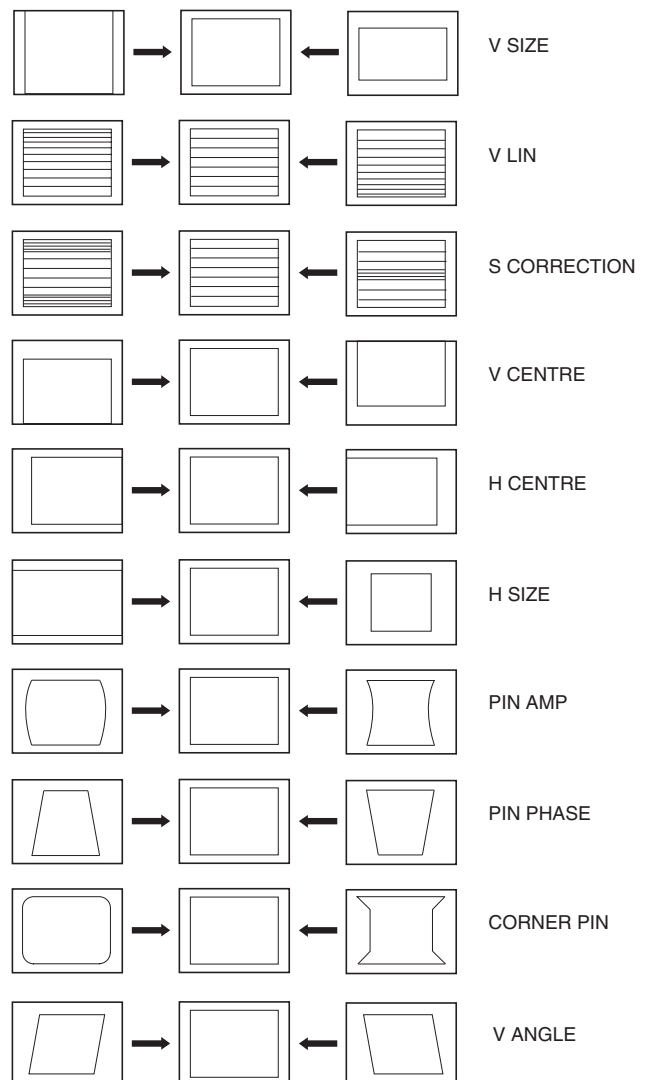

## 4-2. TEST MODE 1:

Test Mode 1 is available by pressing the 'TEST' button once, OSD 'T' appears. The functions described below are available by selecting the indicated keys. The 'T' is released automatically after each command is executed.

KEY	T-MODE FUNCTION
volume +	volume maximum
volume -	Picture minimum
picture +	Picture maximum
picture -	Picture minimum
colour up	colour maximum
colour down	colour minimum
brightness - bright	brightness maximum
brightness - dark	brightness minimum
hue - purplish	hue - purplish
hue - greenish	hue - greenish
sharpness - sharp	sharpness maximum
sharpness - soft	sharpness minimum
balance left	balance full left
balance right	balance full right
treble up	treble maximum
treble down	treble minimum
bass up	bass maximum
bass down	bass minimum


## 4-3. TEST MODE 2:

Test Mode 2 is available by pressing the 'TEST' button twice, OSD 'TT' appears. The functions described below are available by selecting the two numbers. To release the 'Test mode 2', press 00, 10, 20 ... twice or switch the TV set into Stand-by mode. In 'TT Menu' mode, it is possible to remove the Menu from the screen by pressing the Speaker Off button once. Pressing the Speaker OFF button a second time will cause the Menu to reappear. The function is kept even when the menu is not displayed on screen !!.

00	'TT' mode off
01	Picture maximum
02	Picture minimum
03	Set speaker/headphone Volume to 35%
04	Set speaker/headphone Volume to 50%
05	Set speaker/headphone Volume to 65%
06	Set speaker/headphone Volume to 80%
07	Ageing mode
08	Shipping Condition
11	Sub picture adjustment
12	Sub colour adjustment
13	Sub Brightness adjustment
14	Text H Position adjustment
15	Rotation Coil Test
16	Picture level 50%
19	Factory Mode Enable/Disable
21	Destination ADEKR
22	Destination BL
23	Destination ADEKR
24	Destination U
25	Destination ADEKR
26	Destination BL








27	Destination ADEKR
28	Destination ADEKR
31	Auto Shutoff Enable/Disable
33	Rotation ON/OFF
35	CRT 4:3 <> 16:9 ; Display TV status
36	Velocity Modulation (VM) OFF/ON test
38	G2 adjustment
41	Re-initialise NVM
43	Select Dual A sound
44	Select Dual B sound
45	Select Mono sound
46	Select Stereo sound
48	Set NVM as non virgin
49	Set NVM as virgin
51	Virtual Dolby on/off
52	Subwoofer / MPB (Bass enhancement) Enable
54	Dot structure C/M (chroma trap)ination ADEKR
55	Tuner selection (SONY//ALPS)
56	BBE enable/disable
57	BBE menu line enable/disable
61	Auto AGC Adjustment
62	AM from baseband enable/disable
63	Enable/Disable YC3 connector
64	Enable/Disable RGB priority
65	RGB auto-detect enable/disable
66	On timer enable/disable
67	Manual AGC Adjustment
68	Enable/Disable X26 countermeasure (N problem)
69	Enable/Disable ACI feature
71	Force PAL video
72	Un-force PAL (restore normal video condition)
73	Enable Zweiton D/K2 system (6.5/6.74)
74	Enable Zweiton D/K3 system (6.5/5.74)
78	Balance full left
79	Balance full right
87	Local keys test
89	Enable/Disable watchdog
91	Set 14:9 zoom mode
92	Set SMART zoom mode
93	Set 16:9 zoom mode
94	Set ZOOM mode
95	Set 4:3 zoom mode
99	Display Error and Working Time menu

# 5-1. BLOCK DIAGRAMS (1)

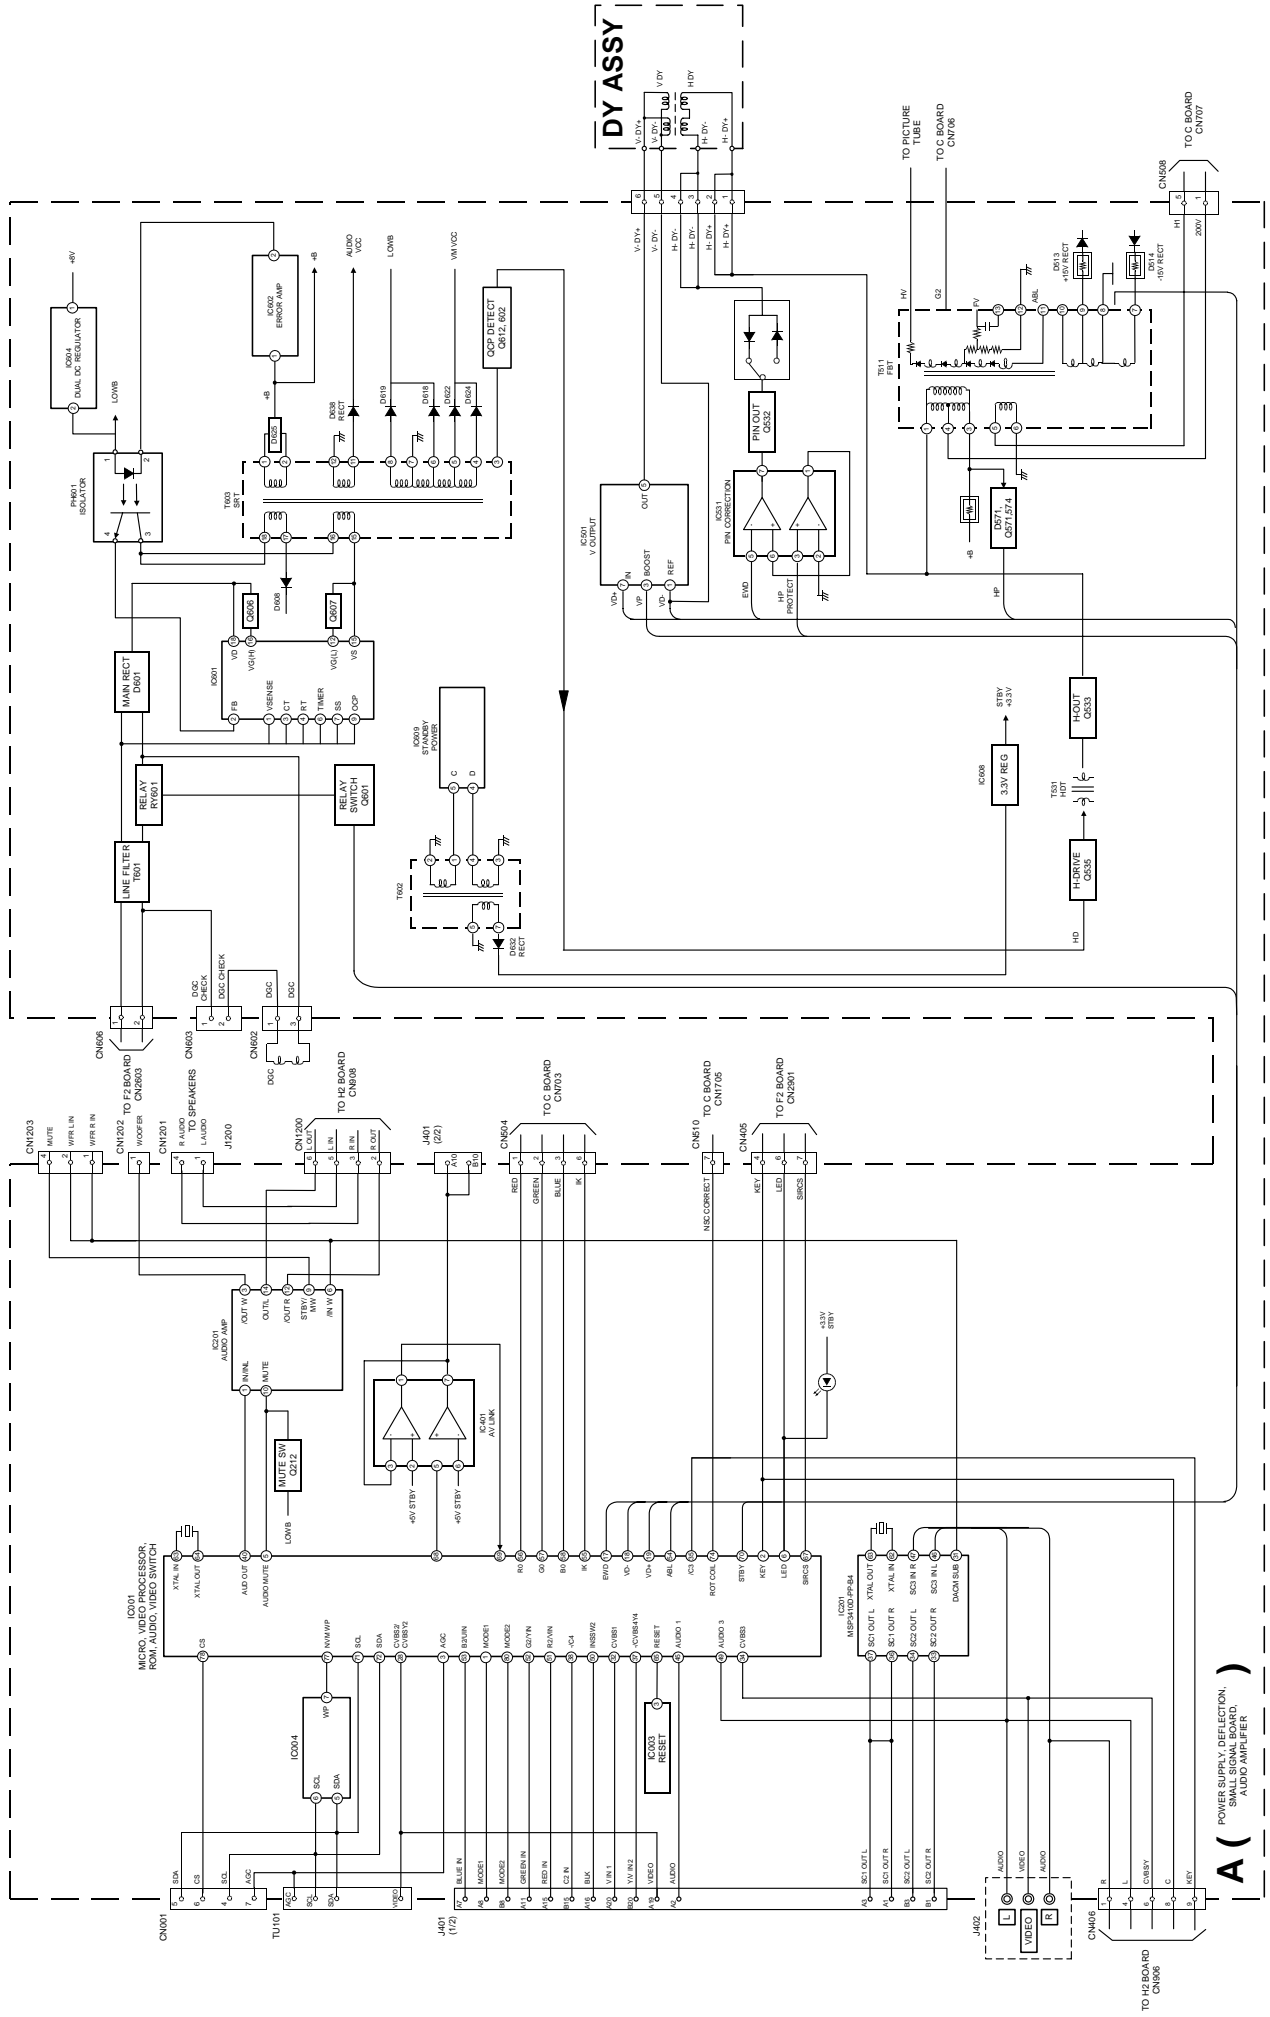


**A** ( POWER SUPPLY, DEFLECTION, SMALL SIGNAL BOARD, AUDIO AMPLIFIER )

### 5-1. BLOCK DIAGRAMS (2)

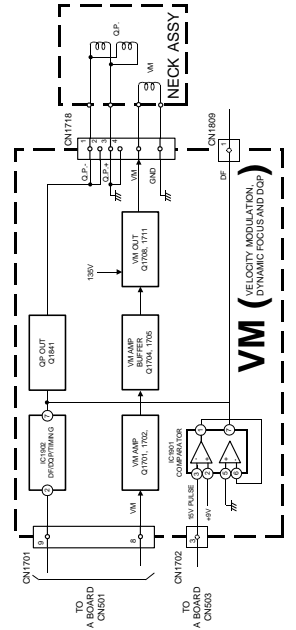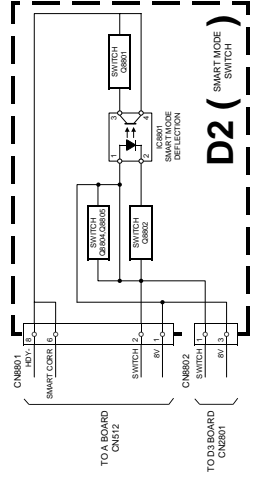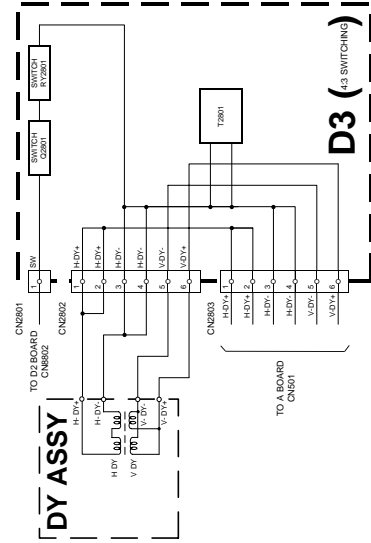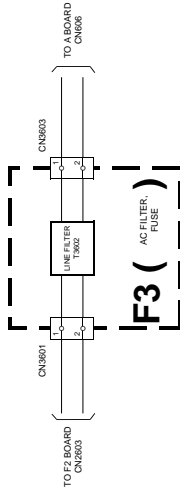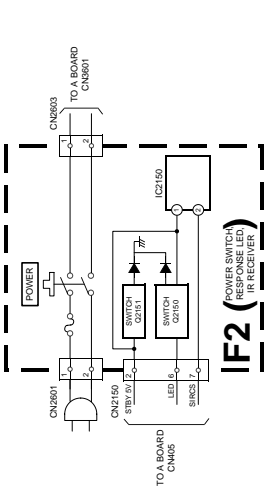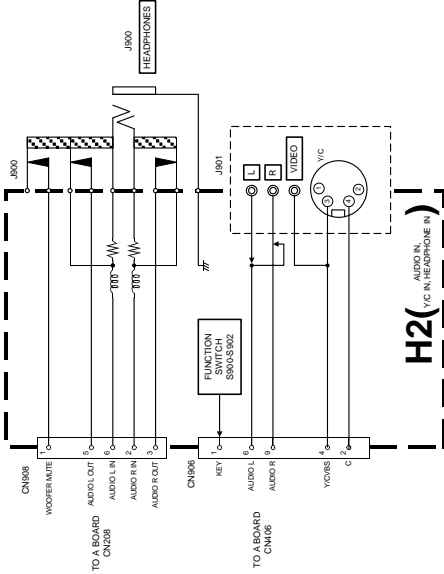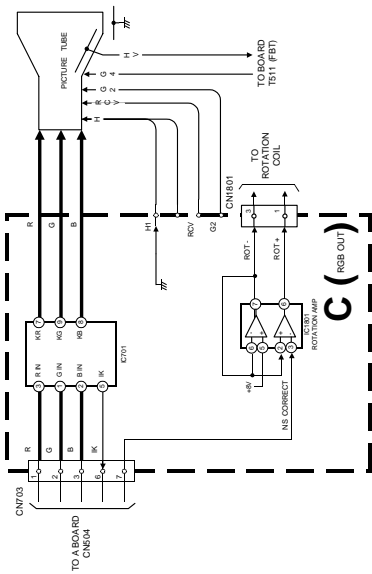

### 5-2. CIRCUIT BOARD LOCATION

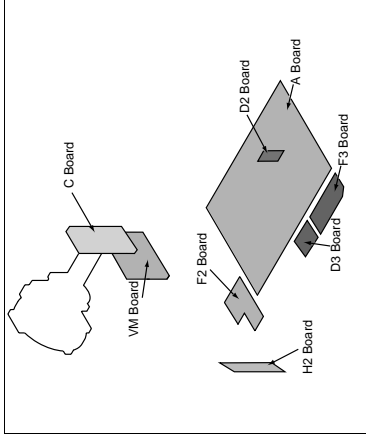

### 5-3. SCHEMATIC DIAGRAMS AND PRINTED WIRING BOARDS

- Note :
  - All capacitors are in  $\mu F$  unless otherwise noted.
  - $pF$  :  $\mu F$  50WV or less are not indicated except for electrolytic types.
  - Indication of resistance, which does not have one for rating electrical power, is as follows.

Pitch : 5mm  
Electrical power rating : 1/4W

- Chip resistors are 1/10W
- All resistors are in ohms.
- k = 1000 ohms, M = 1000,000 ohms
- : nonflammable resistor.
- : fusible resistor.
- : internal component.
- : panel designation or adjustment for repair.

- All variable and adjustable resistors have characteristic curve B, unless otherwise noted.
- All voltages are in Volts.
- Readings are taken with a 10Mohm digital multimeter.
- Readings are taken with a color bar input signal.
- Voltage variations may be noted due to normal production tolerances.



- : B + bus.
- : B - bus.
- : RF signal path.
- : earth - ground.
- : earth - chassis.

### Reference Information

RESISTOR	RN	: METAL FILM
	RC	: SOLID
	FPRD	: NON FLAMMABLE CARBON
	FUSE	: NON FLAMMABLE FUSIBLE
	RS	: NON FLAMMABLE METAL OXIDE
	RB	: NON FLAMMABLE CEMENT
	RW	: NON FLAMMABLE WIREWOUND
	$\times$	: ADJUSTMENT RESISTOR
COIL	LF-8L	: MICRO INDUCTOR
CAPACITOR	TA	: TANTALUM
	PS	: STYROL
	PT	: POLYPROPYLENE
	PP	: NYLAR
	MPS	: METALIZED POLYESTER
	MPP	: METALIZED POLYPROPYLENE
	ALB	: BIPOLAR
	ALT	: HIGH TEMPERATURE
	ALR	: HIGH RIPPLE


**Note** : The components identified by shading and marked  $\Delta$  are critical for safety. Replace only with the part numbers specified in the parts list.

**Note** : Les composants identifiés par une trame et marqués  $\Delta$  sont d'une importance critique pour la sécurité. Ne les remplacer que par des pièces de numéro spécifié.

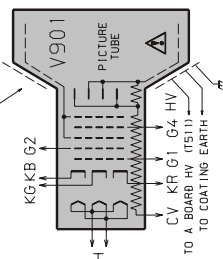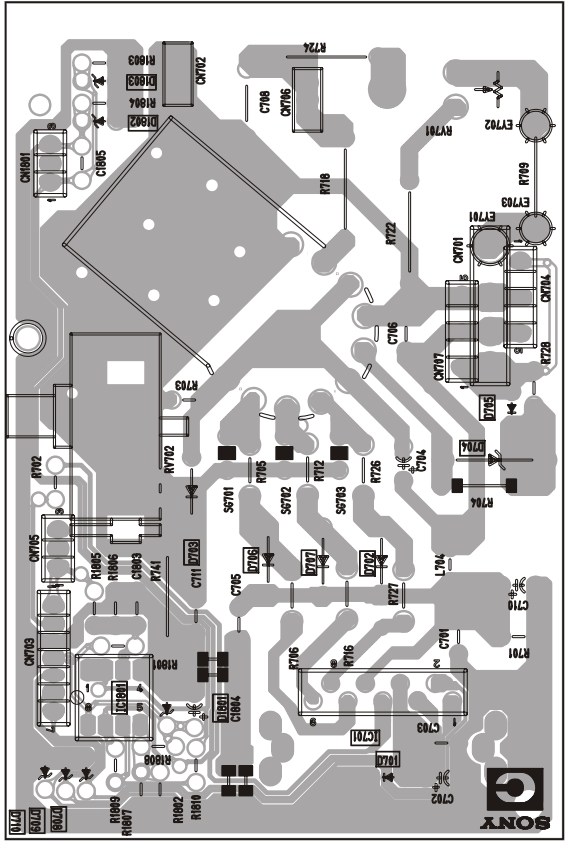


KY-28L555 - W66LLX060X  
KY-32L555 - W76LLZ060X

C Board Waveforms

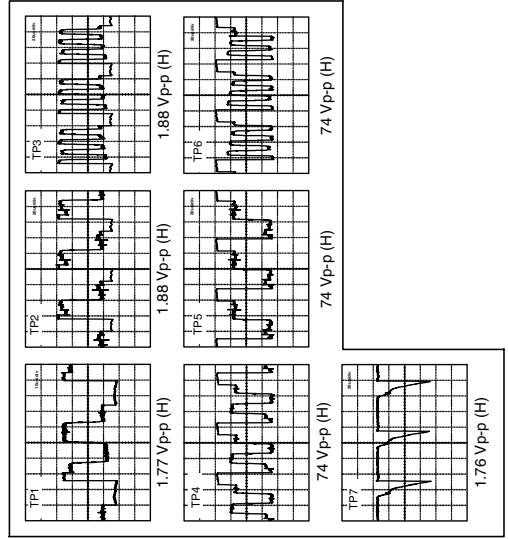

IC Voltage Table

Ref No	Pin No	Voltage (V)	Ref No	Pin No	Voltage (V)
IC1801	1	3.1	IC1801	1	1.3
	2	2.1		2	1.3
	3	3.0		3	1.4
IC1802	5	5.5	IC1802	5	4.1
	7	131		6	4.1
	8	123		7	7.0
IC1803	9	124.6	IC1803	8	8.0
				9	8.0

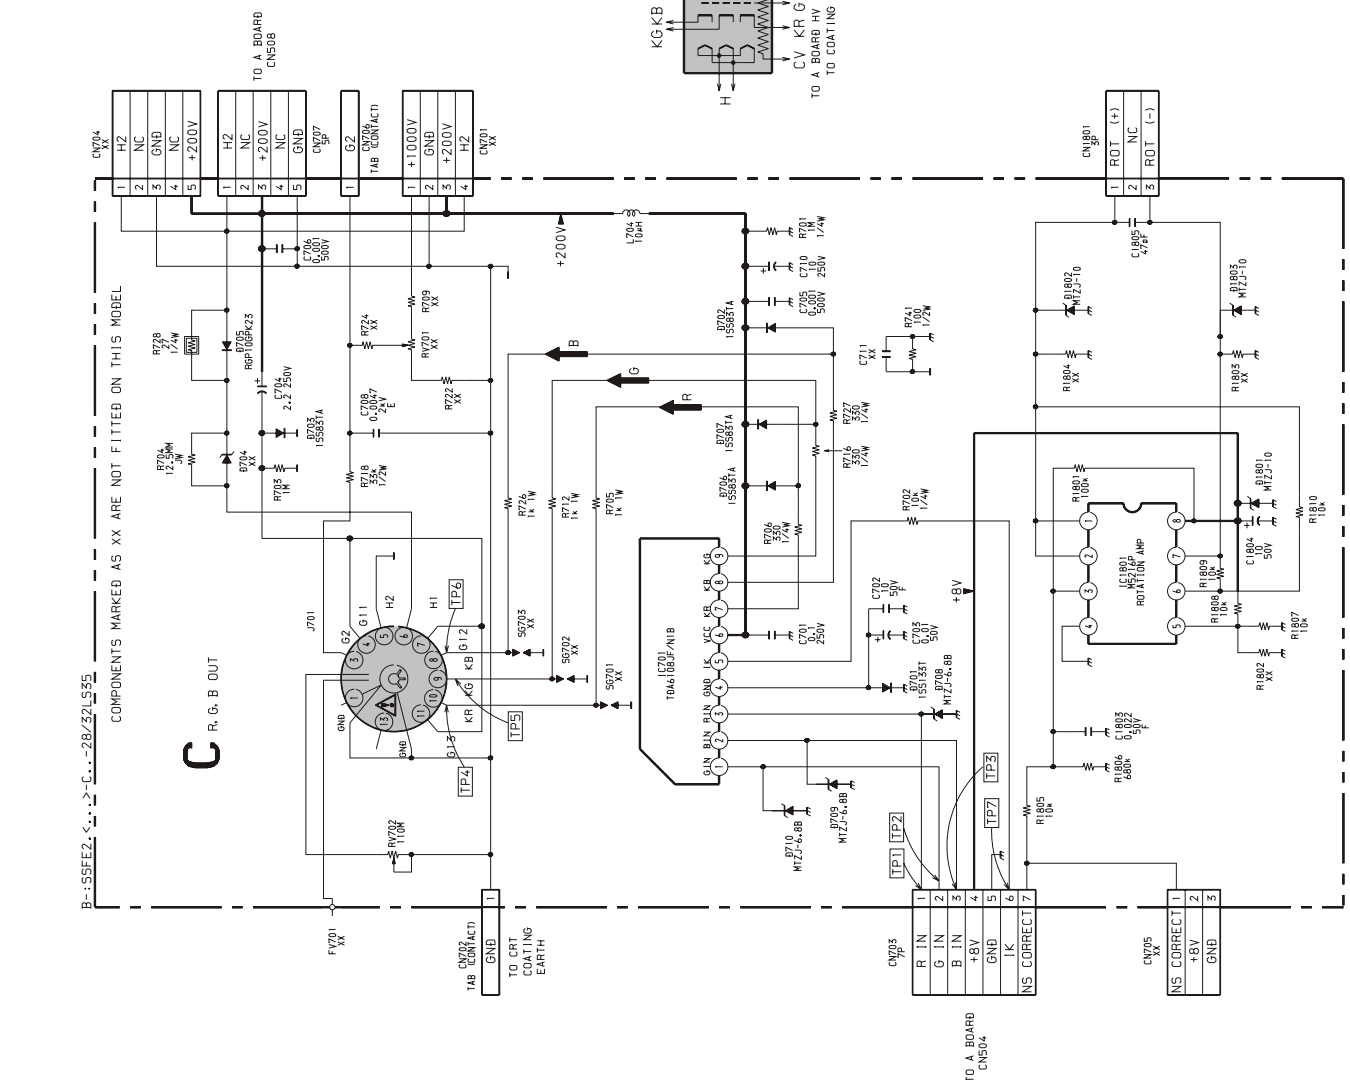

COMPONENTS MARKED AS XX ARE NOT FITTED ON THIS MODEL

C R, G, B OUT

TO A BOARD CNS06

TO CRT COATING EARTH

TO A BOARD CNS04

TO CRT COATING EARTH

TO A BOARD CNS04

TO CRT COATING EARTH

TO A BOARD CNS04

TO CRT COATING EARTH

TO A BOARD CNS04

TO CRT COATING EARTH

TO A BOARD CNS04

TO CRT COATING EARTH


TO A BOARD CNS04

TO CRT COATING EARTH

TO A BOARD CNS04














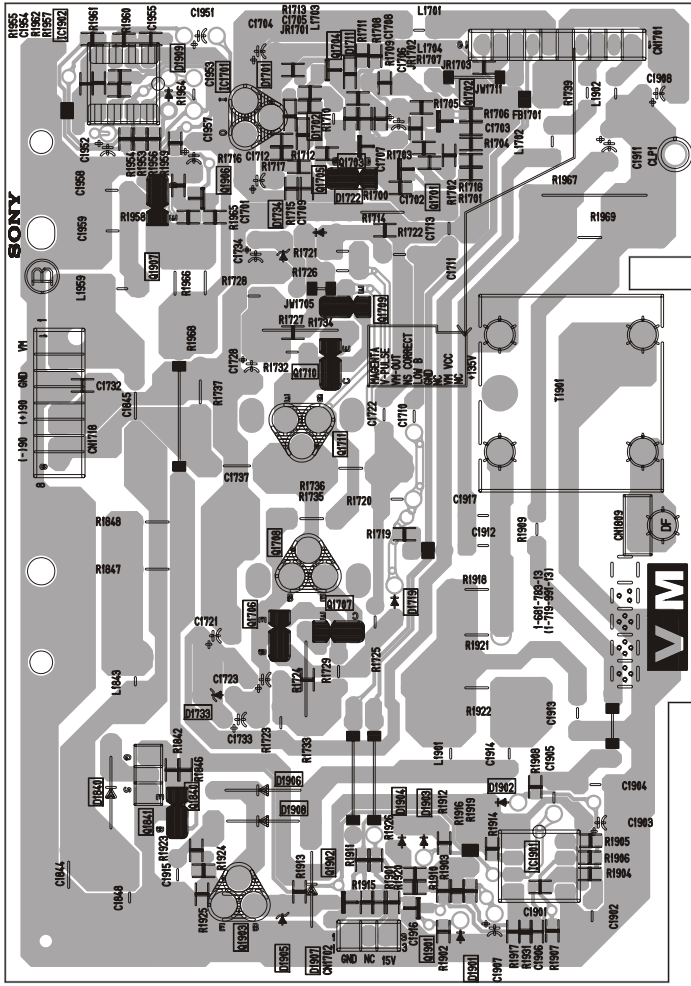



Difference table

Ref	28LS39B	28LS39E	28LS39U	30LS39B	30LS39E	30LS39U
C1803	-	-	-	0.022UF	0.022UF	30LS39U
C1804	-	-	-	10UF	10UF	0.022UF
C1805	-	-	-	47PF	47PF	10UF
C1912	100PF	100PF	100PF	0.0015UF	0.0015UF	-
C1913	0.0022UF	0.0022UF	0.0022UF	150PF	150PF	0.0015UF
C1914	330PF	330PF	330PF	150PF	150PF	150PF
CN1801	-	-	-	3P	3P	3P
D1802	-	-	-	MTZL-F77-10	MTZL-F77-10	MTZL-F77-10
D1803	-	-	-	MTZL-F77-10	MTZL-F77-10	MTZL-F77-10
L1901	10MH	10MH	10MH	15MH	15MH	15MH
L1959	22MH	22MH	22MH	10MH	10MH	10MH
R1801	-	-	-	10K	10K	100K
R1805	-	-	-	10K	10K	10K
R1806	-	-	-	680K	680K	10K
R1807	-	-	-	10K	10K	10K
R1808	-	-	-	10K	10K	10K
R1809	-	-	-	10K	10K	10K
R1810	-	-	-	10K	10K	10K
R1847	180	180	180	68	68	68
R1848	100	100	100	68	68	68
R1916	5.6K	5.6K	5.6K	3.9K	3.9K	3.9K
R1931	33K	33K	33K	39K	39K	39K
R1966	390	390	390	150	150	150

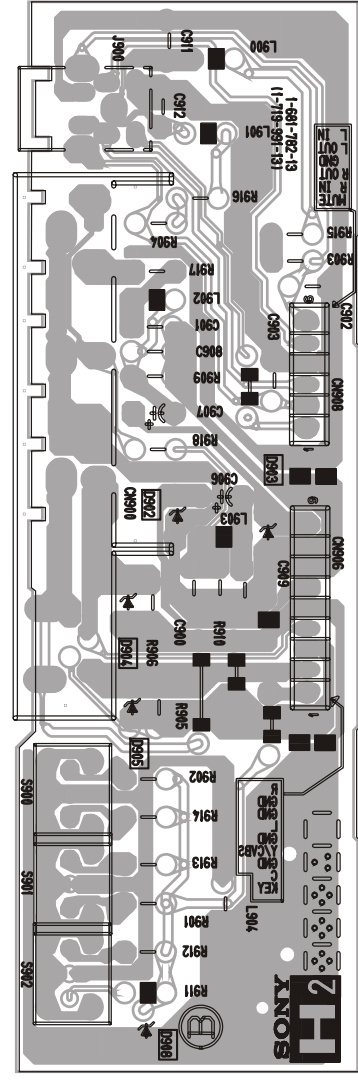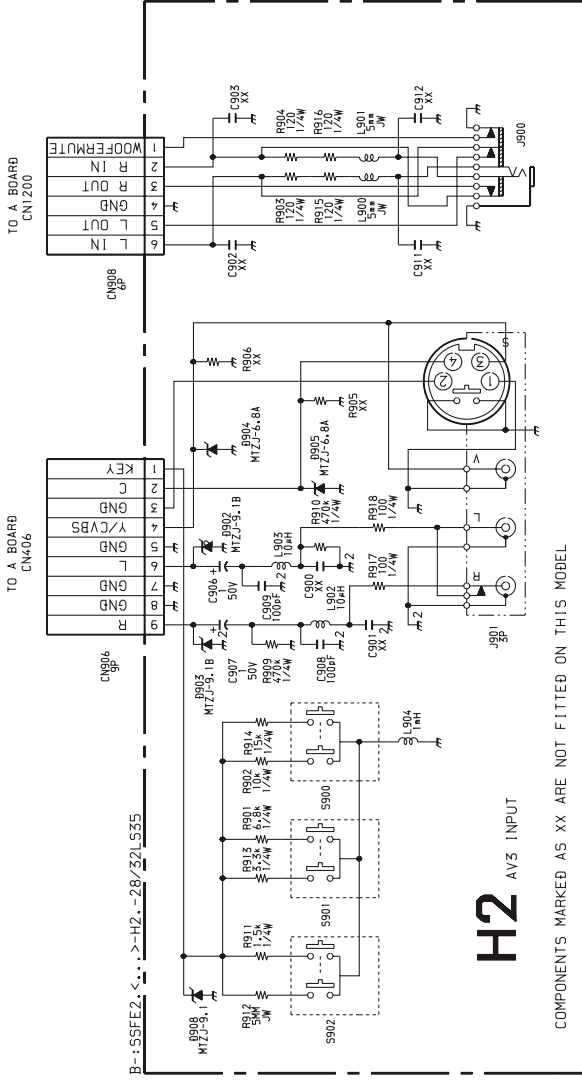

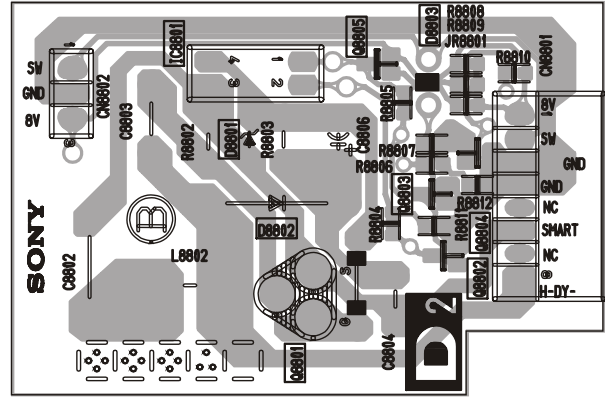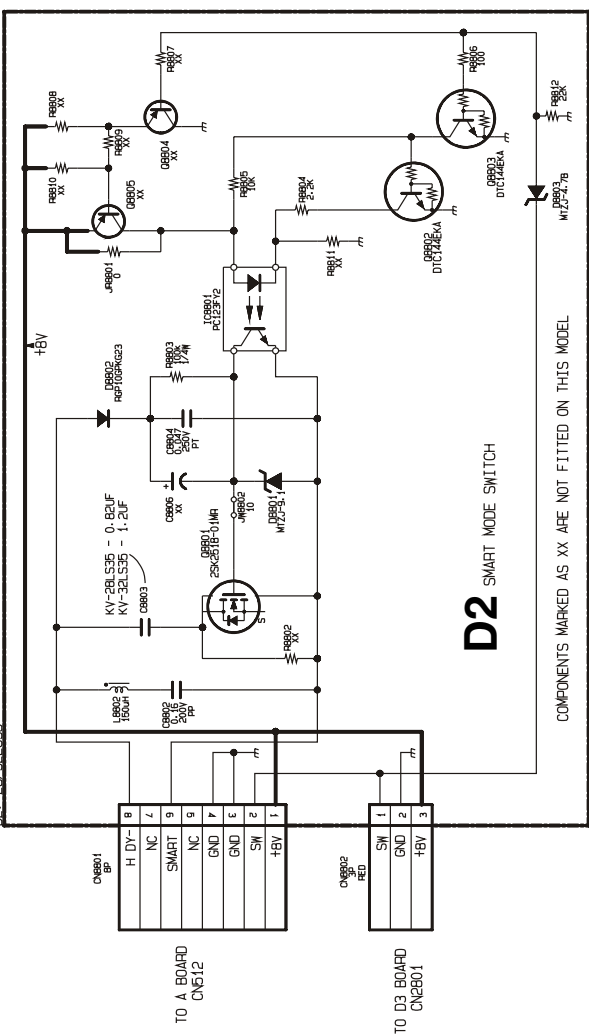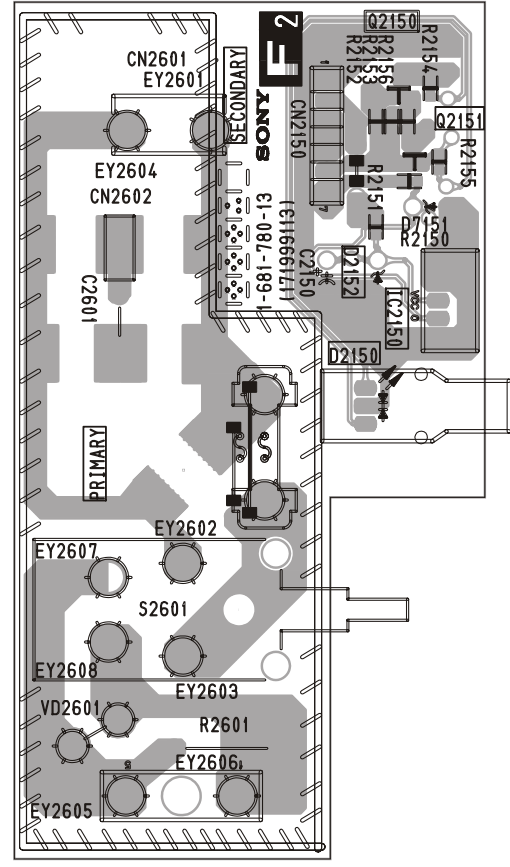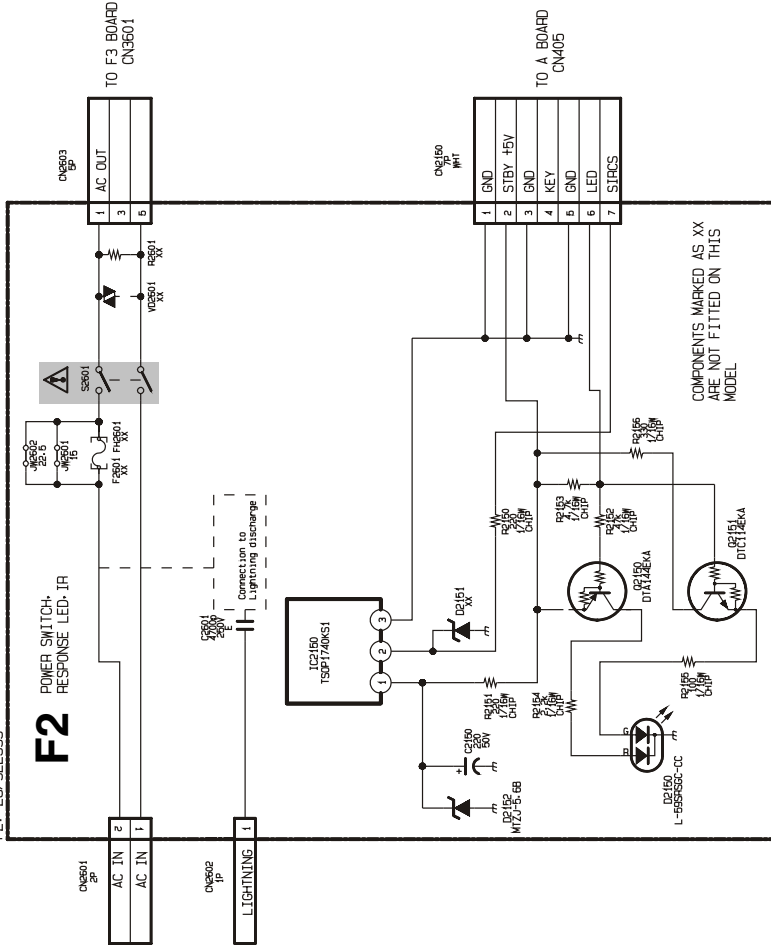

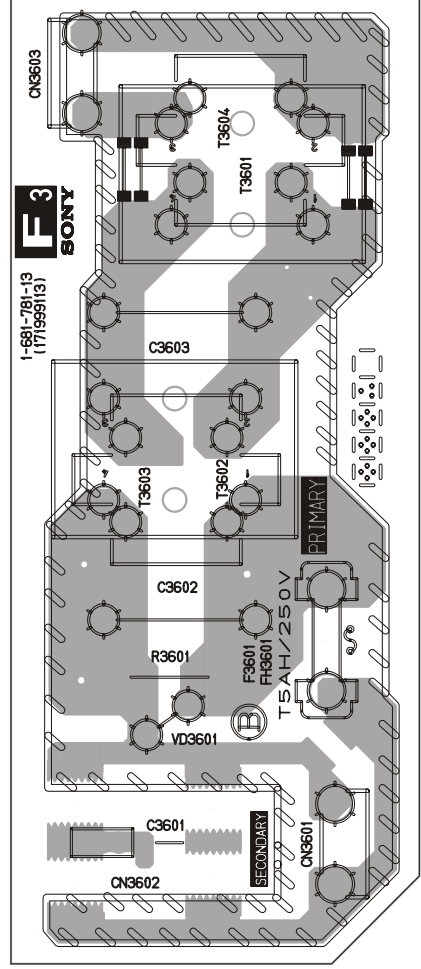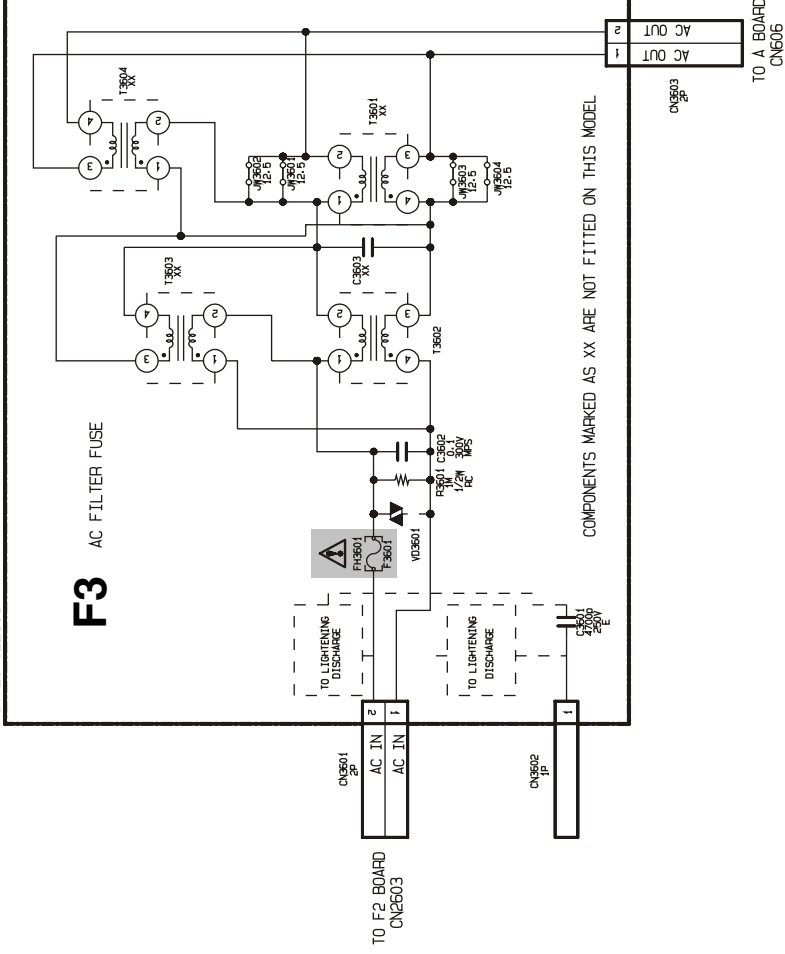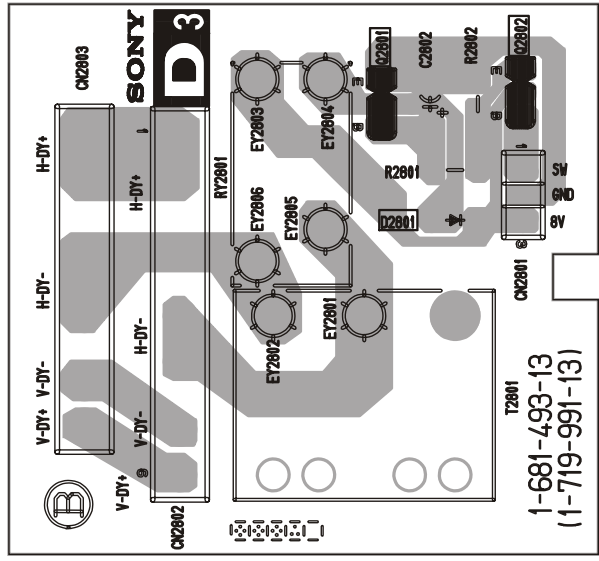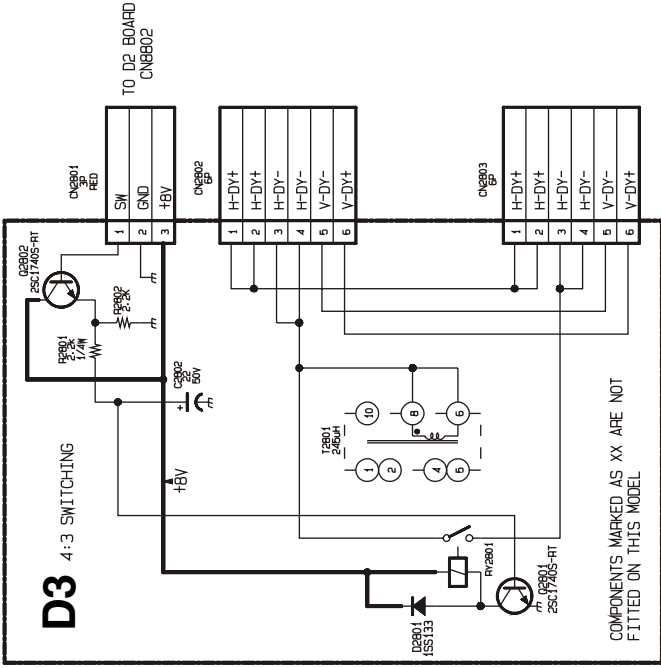

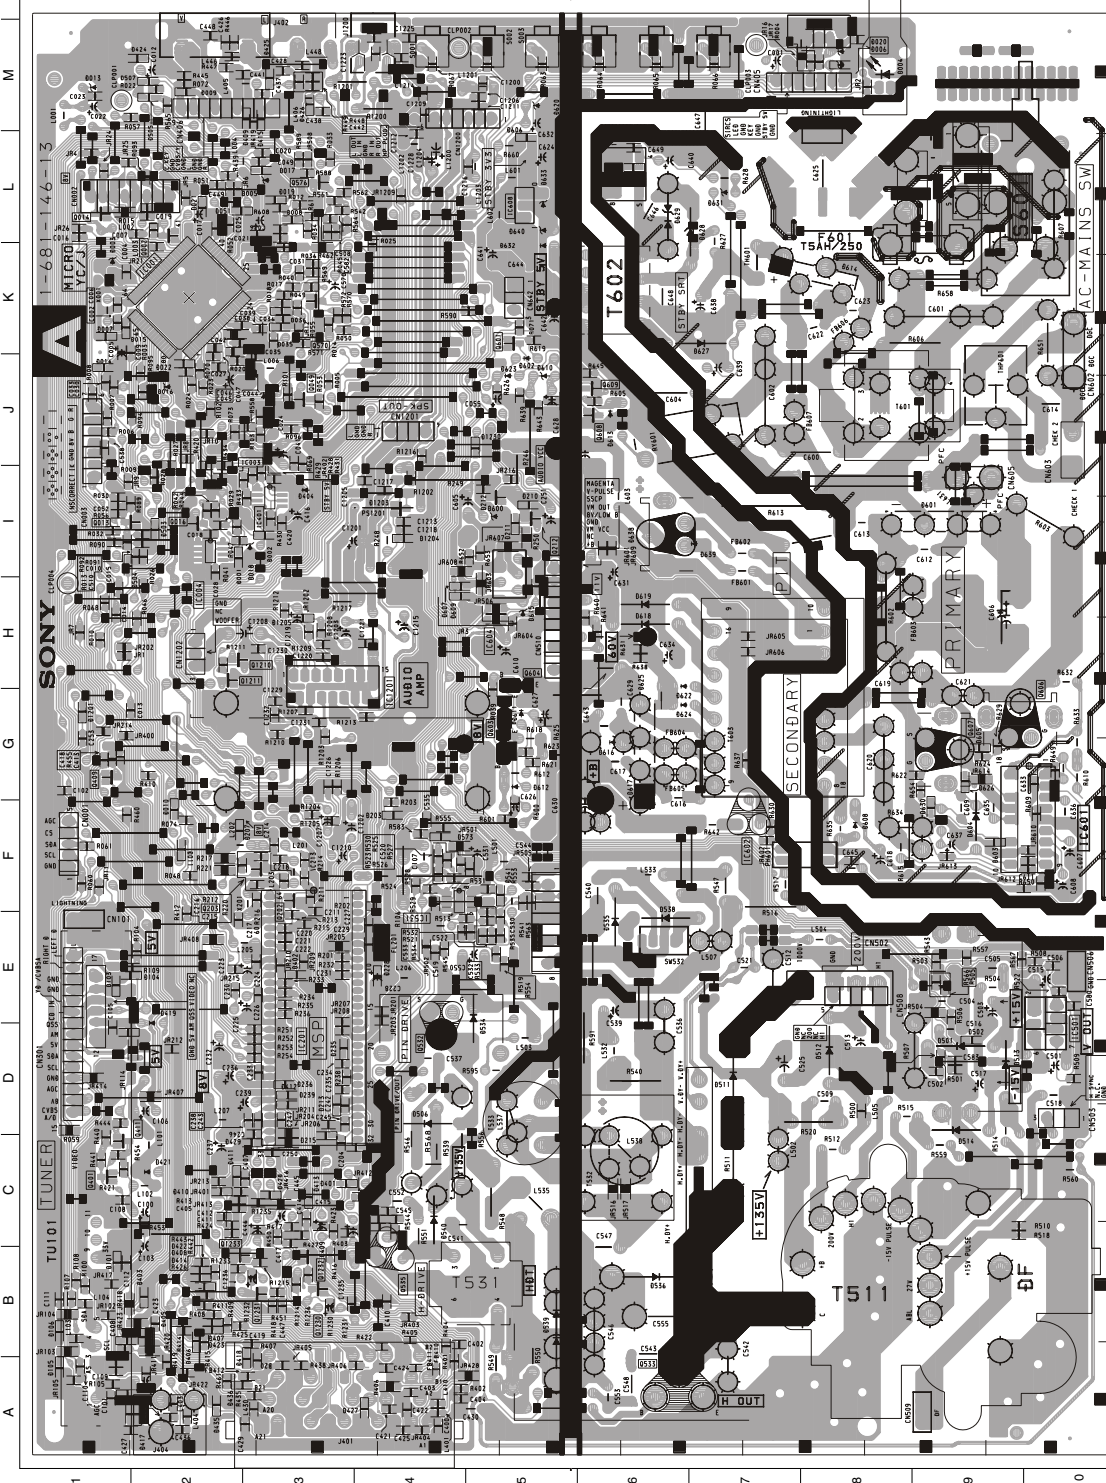

**Semiconductor Voltage Table**

Ref No	Pin No	Volts (V)	Ref No	Pin No	Volts (V)
	1	0		6	13.9
	2	3.2		7	0.3
	3	2.9		8	0.7
	4	2.5		9	0.3
	5	0		10	0
	6	2.0		11	1.4
	7	2.3		12	2.3
	8	2.3		13	1.8
	9	2.3		14	1.8
	10	5.0		15	4.2
	11	5.0		16	4.2
	12	5.0		17	5.3
	13	0		18	5.3
	14	0		19	5.3
	15	4.0		20	5.3
	16	1.4		21	5.3
	17	1.5		22	5.3
	18	0		23	5.3
	19	0		24	5.3
	20	3.8		25	5.3
	21	3.8		26	5.3
	22	5.0		27	5.3
	23	5.0		28	5.3
	24	3.8		29	5.3
	25	3.8		30	5.3
	26	3.8		31	5.3
	27	3.8		32	5.3
	28	3.8		33	5.3
	29	3.8		34	5.3
	30	3.8		35	5.3
	31	3.8		36	5.3
	32	3.8		37	5.3
	33	3.8		38	5.3
	34	3.8		39	5.3
	35	3.8		40	5.3
	36	3.8		41	5.3
	37	3.8		42	5.3
	38	3.8		43	5.3
	39	3.8		44	5.3
	40	3.8		45	5.3
	41	3.8		46	5.3
	42	3.8		47	5.3
	43	3.8		48	5.3
	44	3.8		49	5.3
	45	3.8		50	5.3

**IC Voltage Table**

Ref No	Pin No	Volts (V)	Ref No	Pin No	Volts (V)
	1	0		6	13.9
	2	3.2		7	0.3
	3	2.9		8	0.7
	4	2.5		9	0.3
	5	0		10	0
	6	2.0		11	1.4
	7	2.3		12	2.3
	8	2.3		13	1.8
	9	2.3		14	1.8
	10	5.0		15	4.2
	11	5.0		16	4.2
	12	5.0		17	5.3
	13	0		18	5.3
	14	0		19	5.3
	15	4.0		20	5.3
	16	1.4		21	5.3
	17	1.5		22	5.3
	18	0		23	5.3
	19	0		24	5.3
	20	3.8		25	5.3
	21	3.8		26	5.3
	22	5.0		27	5.3
	23	5.0		28	5.3
	24	3.8		29	5.3
	25	3.8		30	5.3
	26	3.8		31	5.3
	27	3.8		32	5.3
	28	3.8		33	5.3
	29	3.8		34	5.3
	30	3.8		35	5.3
	31	3.8		36	5.3
	32	3.8		37	5.3
	33	3.8		38	5.3
	34	3.8		39	5.3
	35	3.8		40	5.3
	36	3.8		41	5.3
	37	3.8		42	5.3
	38	3.8		43	5.3
	39	3.8		44	5.3
	40	3.8		45	5.3



**Difference Table**

Ref	28LS369	28LS369E	28LS369	32LS369	32LS369E	32LS369	32LS369E
C019	22PF	22PF	22PF	22PF	22PF	-	-
C036	0.02UF	0.02UF	0.02UF	0.02UF	0.02UF	IUF	IUF
C042	680PF	680PF	680PF	680PF	680PF	0.001UF	0.001UF
C046	0.056UF	0.056UF	0.056UF	0.056UF	0.056UF	0.051UF	0.051UF
C055	22000PF	22000PF	22000PF	22000PF	22000PF	19000PF	19000PF
C019	-	-	-	-	-	330PF	330PF
C021	-	-	-	-	-	330PF	330PF
JR21	560	560	560	560	560	-	-
JR421	SHORT 0	SHORT 0	SHORT 0	SHORT 0	SHORT 0	-	-
L002	47UH	47UH	47UH	47UH	47UH	-	-
R001	SHORT 0	SHORT 0	SHORT 0	SHORT 0	SHORT 0	-	-
R015	4.7K	4.7K	4.7K	4.7K	4.7K	0UH	0UH
R013	4.7K	4.7K	4.7K	4.7K	4.7K	22K	22K
R017	10K	10K	10K	10K	10K	22K	22K
R021	100K	100K	100K	100K	100K	220K	220K
R032	1K	1K	1K	1K	1K	4.7K	4.7K
R033	10K	10K	10K	10K	10K	15K	15K
R034	82K	82K	82K	82K	82K	SHORT 0	SHORT 0
R035	-	-	-	-	-	220K	220K
R046	820	820	820	820	820	1K	1K
R068	820	820	820	820	820	1K	1K
R083	22K	22K	22K	22K	22K	15K or 22K	15K or 22K
T511	1-453-308-31	1-453-308-31	1-453-308-31	1-453-308-31	1-453-308-31	1-453-308-41	1-453-308-41
T513	1-433-980-12	1-433-980-12	1-433-980-12	1-433-980-12	1-433-980-12	1-429-306-11	1-429-306-11
TU101	BTF-EF411	BTF-EF411	BTF-EF411	BTF-EF411	BTF-EF411	BTF-EF411	BTF-EF411

**Semiconductor Location Table**

DIODE	D001	D003	D004	D005	D006	D007	D008	D010	D011	D013	D014	D016	D017	D018	D019	D020	D021	D022	D023	D024	D025	D026	D027	D028	D029	D030	D031	D032	D033	D034	D035	D036	D037	D038	D039	D040	D041	D042	D043	D044	D045	D046	D047	D048	D049	D050	D051	D052	D053	D054	D055	D056	D057	D058	D059	D060	D061	D062	D063	D064	D065	D066	D067	D068	D069	D070	D071	D072	D073	D074	D075	D076	D077	D078	D079	D080	D081	D082	D083	D084	D085	D086	D087	D088	D089	D090	D091	D092	D093	D094	D095	D096	D097	D098	D099	D100	D101	D102	D103	D104	D105	D106	D107	D108	D109	D110	D111	D112	D113	D114	D115	D116	D117	D118	D119	D120	D121	D122	D123	D124	D125	D126	D127	D128	D129	D130	D131	D132	D133	D134	D135	D136	D137	D138	D139	D140	D141	D142	D143	D144	D145	D146	D147	D148	D149	D150	D151	D152	D153	D154	D155	D156	D157	D158	D159	D160	D161	D162	D163	D164	D165	D166	D167	D168	D169	D170	D171	D172	D173	D174	D175	D176	D177	D178	D179	D180	D181	D182	D183	D184	D185	D186	D187	D188	D189	D190	D191	D192	D193	D194	D195	D196	D197	D198	D199	D200	D201	D202	D203	D204	D205	D206	D207	D208	D209	D210	D211	D212	D213	D214	D215	D216	D217	D218	D219	D220	D221	D222	D223	D224	D225	D226	D227	D228	D229	D230	D231	D232	D233	D234	D235	D236	D237	D238	D239	D240	D241	D242	D243	D244	D245	D246	D247	D248	D249	D250	D251	D252	D253	D254	D255	D256	D257	D258	D259	D260	D261	D262	D263	D264	D265	D266	D267	D268	D269	D270	D271	D272	D273	D274	D275	D276	D277	D278	D279	D280	D281	D282	D283	D284	D285	D286	D287	D288	D289	D290	D291	D292	D293	D294	D295	D296	D297	D298	D299	D300	D301	D302	D303	D304	D305	D306	D307	D308	D309	D310	D311	D312	D313	D314	D315	D316	D317	D318	D319	D320	D321	D322	D323	D324	D325	D326	D327	D328	D329	D330	D331	D332	D333	D334	D335	D336	D337	D338	D339	D340	D341	D342	D343	D344	D345	D346	D347	D348	D349	D350	D351	D352	D353	D354	D355	D356	D357	D358	D359	D360	D361	D362	D363	D364	D365	D366	D367	D368	D369	D370	D371	D372	D373	D374	D375	D376	D377	D378	D379	D380	D381	D382	D383	D384	D385	D386	D387	D388	D389	D390	D391	D392	D393	D394	D395	D396	D397	D398	D399	D400	D401	D402	D403	D404	D405	D406	D407	D408	D409	D410	D411	D412	D413	D414	D415	D416	D417	D418	D419	D420	D421	D422	D423	D424	D425	D426	D427	D428	D429	D430	D431	D432	D433	D434	D435	D436	D437	D438	D439	D440	D441	D442	D443	D444	D445	D446	D447	D448	D449	D450	D451	D452	D453	D454	D455	D456	D457	D458	D459	D460	D461	D462	D463	D464	D465	D466	D467	D468	D469	D470	D471	D472	D473	D474	D475	D476	D477	D478	D479	D480	D481	D482	D483	D484	D485	D486	D487	D488	D489	D490	D491	D492	D493	D494	D495	D496	D497	D498	D499	D500	D501	D502	D503	D504	D505	D506	D507	D508	D509	D510	D511	D512	D513	D514	D515	D516	D517	D518	D519	D520	D521	D522	D523	D524	D525	D526	D527	D528	D529	D530	D531	D532	D533	D534	D535	D536	D537	D538	D539	D540	D541	D542	D543	D544	D545	D546	D547	D548	D549	D550	D551	D552	D553	D554	D555	D556	D557	D558	D559	D560	D561	D562	D563	D564	D565	D566	D567	D568	D569	D570	D571	D572	D573	D574	D575	D576	D577	D578	D579	D580	D581	D582	D583	D584	D585	D586	D587	D588	D589	D590	D591	D592	D593	D594	D595	D596	D597	D598	D599	D600	D601	D602	D603	D604	D605	D606	D607	D608	D609	D610	D611	D612	D613	D614	D615	D616	D617	D618	D619	D620	D621	D622	D623	D624	D625	D626	D627	D628	D629	D630	D631	D632	D633	D634	D635	D636	D637	D638	D639	D640	D641	D642	D643	D644	D645	D646	D647	D648	D649	D650	D651	D652	D653	D654	D655	D656	D657	D658	D659	D660	D661	D662	D663	D664	D665	D666	D667	D668	D669	D670	D671	D672	D673	D674	D675	D676	D677	D678	D679	D680	D681	D682	D683
-------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------




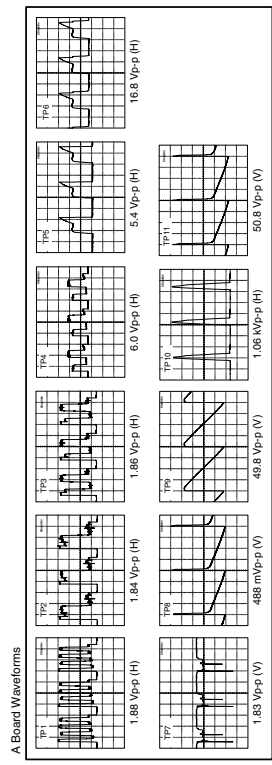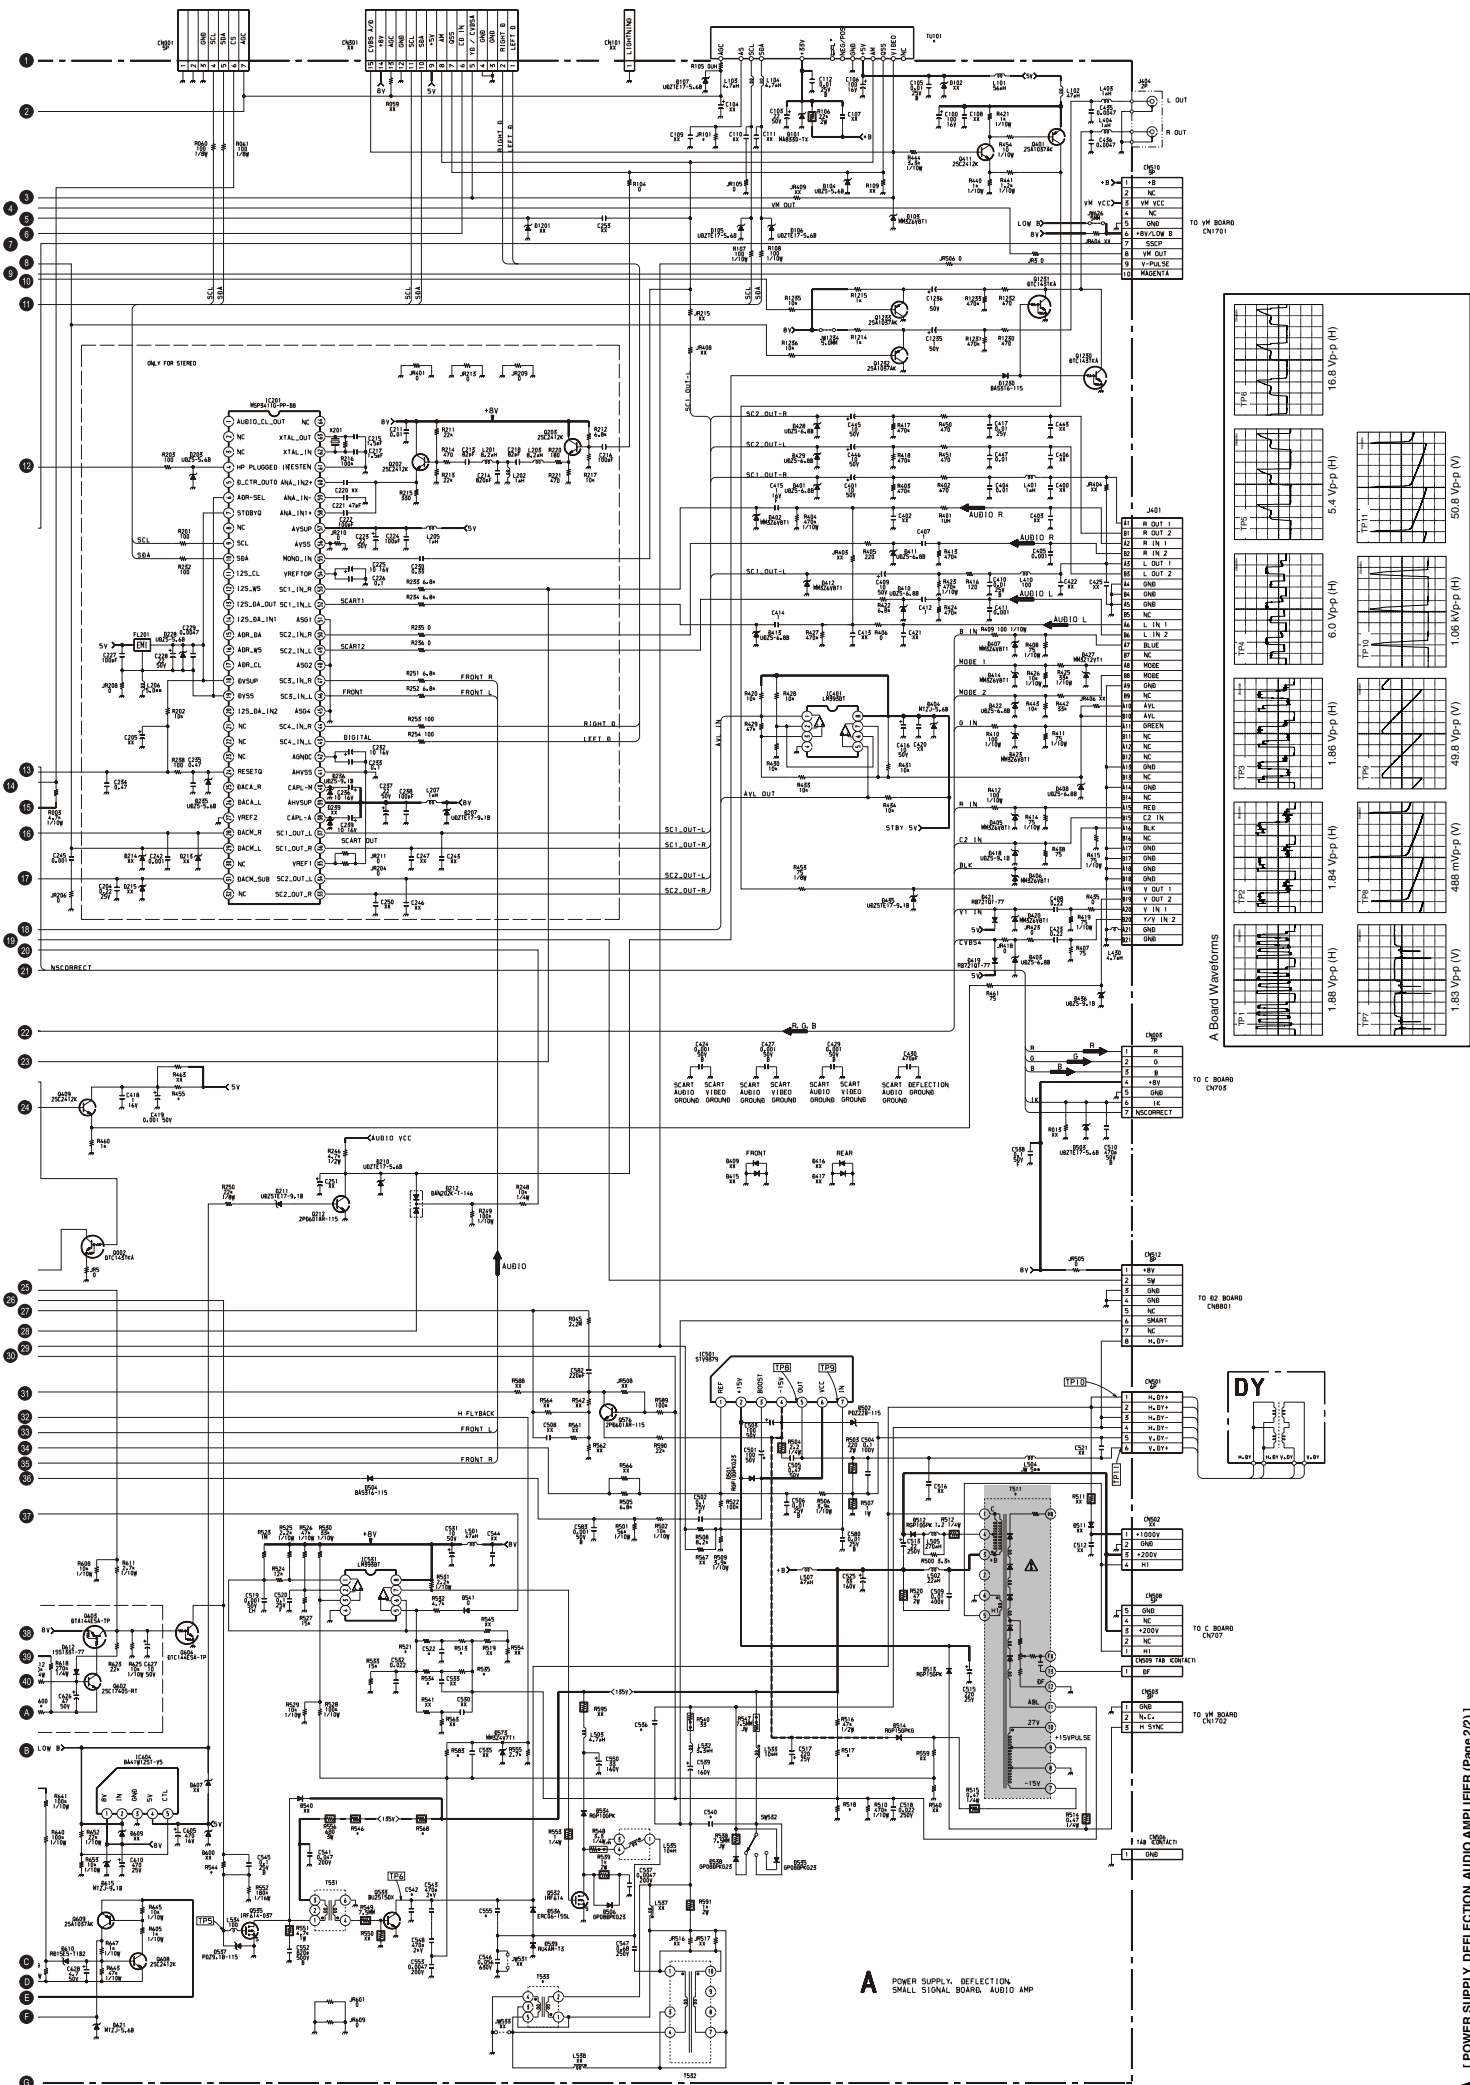


**A** POWER SUPPLY, DEFLECTION, SMALL SIGNAL BOARD, AUDIO AMP

# 5-4. SEMICONDUCTORS

LM358N  
LM393DT  
LM393N  
M5216P  
TDA2822M  
TEA2124

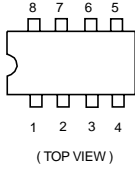

TDA9394H

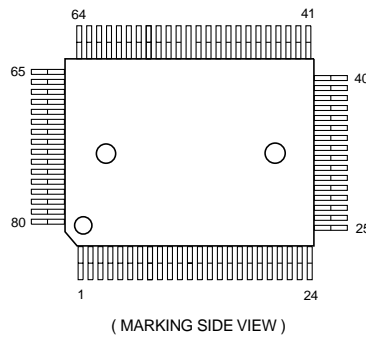


IRF614-005  
IRF614-037  
IRF620





2SA933AS-QT  
2SAG33ASQT  
2SA933AS-RT  
2SC1740S-RT  
2SC2785-HFE


MSP3411G-PP-B9

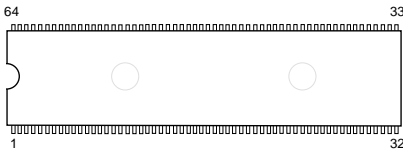


TOP209P

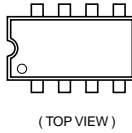


SE-135N  
SE135N-LF4

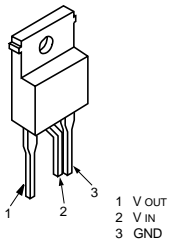


BF421-AMMO  
2SA1091-O



2SC2785-HFE





STV9379

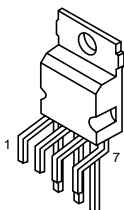

DTA144ESA  
DTA144ESA  
DTC114ESA  
DTC114EKA-T146  
DTC143TKA-T146  
DTC144EKA-T-146R  
R2SA1162-G  
2SA1037AK-T146  
2SC1623-L5L6  
2SD601A-Q-TX  
2SC1623-L5-L6  
2SC2412K-QR  
2SC2412K-T-146-QR

2SK2518-01MR  
2SK2251-01-F19  
2SK2640-01MR

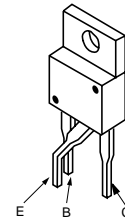





AK04-V1  
 AU-01Z-V1  
 BYD33G  
 BYD33G-AMMO  
 DINL20-TA  
 D1NL20U  
 DINL40-TA2  
 ERB44-06TP1  
 EGP20G  
 EG-1Z-V1  
 EL1Z  
 ERD28-06S


ERD28-06S  
 ERC06-15S  
 FMN-G12S  
 GP08D  
 RGP10GPKG23  
 RG15GPKG23  
 RG1CLF-B1  
 RU-3AM  
 RU3YX-LF-C4  
 RU3YX-V1  
 RU-4AM-T3  
 1SS292T-77

ERA38-06  
 ERA81-004TP1  
 ERA83-006  
 MTZJ-3.6A  
 MTZJ-T-77-2.2A  
 HZS9.1NB2  
 MTZJ-T-77-3.6B  
 MTZJ-4.7C  
 MTZJ-T-77-5.1B  
 MTZJ-T-77-5.6B  
 MTZJ-T-77-6.8A  
 MTZJ-T-77-8.2B  
 MTZJ-7.5B  
 MTZJ-T-77-9.1A  
 MTZJ-T-77-9.1B  
 MTZJ-T-77-10  
 MTZJ-T-72-10A


MTZJ-T-72-10B  
 MTZJ-T-77-15B  
 MTZJ-T-77-33A  
 MTZJ-33C  
 MTZJ-7.5B  
 P6KE200ASY  
 RD3.6ES-B2  
 RD3.9ES-B2  
 RD5.1ESB2  
 RD5.6ESB2  
 RD6.8ES-B2  
 RD7.5ESB2  
 RD9.1ES-B3  
 RD10ESB2  
 RD15ESB2  
 1SS119-25  
 1SS133T-77



DAN202K  
 DAN202K-T146  
 MA8330-TX  
 DTZ33B





SLA-570KT3F

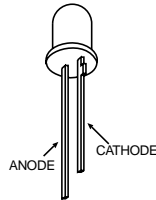


1SS355TE-17  
 DTZ-TT11-6.8B  
 RD12SB2  
 UDZS-TE-17-4.7B  
 UDZSTE-175.6B  
 UDZS-TE-17-6.8B  
 UDZSTE-179.1B  
 UDZ-TE-17-22B

D4SB60L

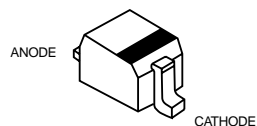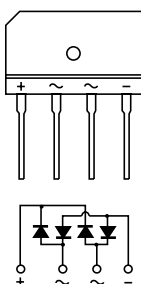


UF4005PKG23

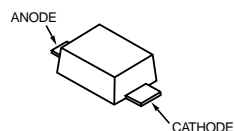


# 5-5 IC BLOCK DIAGRAMS


**A BOARD IC604 BA41W12ST-V5**

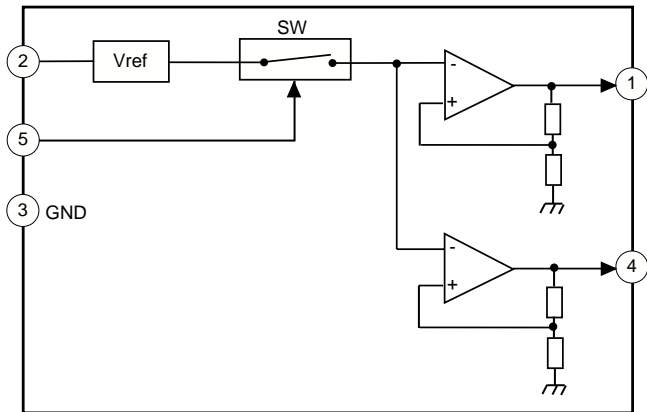


**A BOARD IC401/IC531 LM393DT**

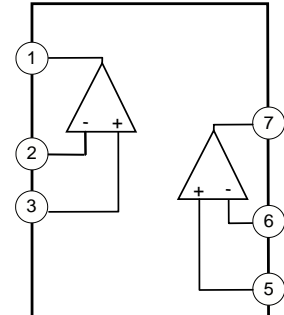

**A BOARD IC601 MCZ3001D**

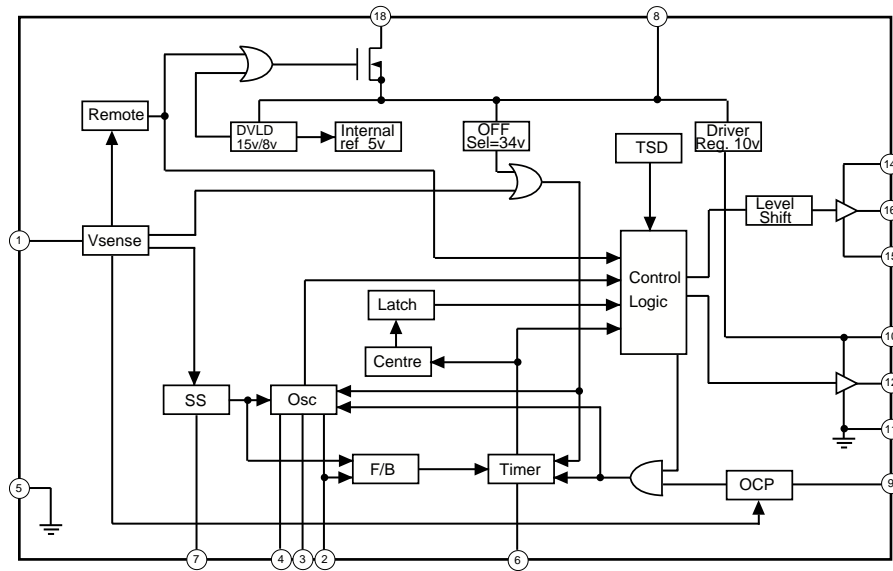

**A BOARD IC1201 TDA7497**

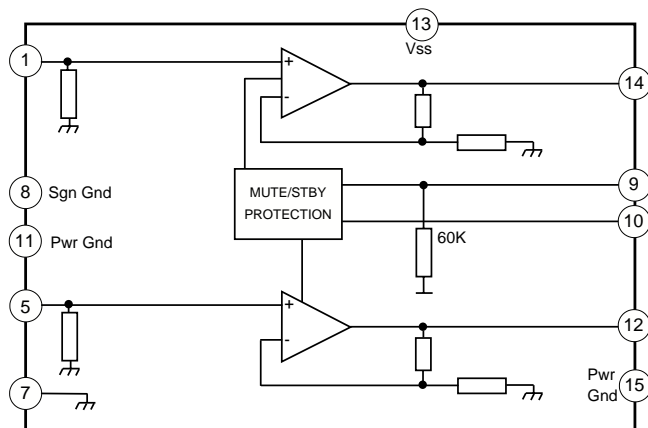

## SECTION 6 EXPLODED VIEWS


### NOTE :

- Items with no part number and no description are not stocked because they are seldom required for routine service.
- The construction parts of an assembled part are indicated with a collation number in the remarks column.
- Items marked “\*” are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

### 6-1. CHASSIS


**Note :** Les composants identifiés par une trame et par une marque  $\Delta$  sont d'une importance critique pour la sécurité. Ne les remplacer que par des pièces du numéro spécifié.

**Note :** The components identified by shading and marked  $\Delta$  are critical for safety. Replace only with the part numbers specified in the parts list.

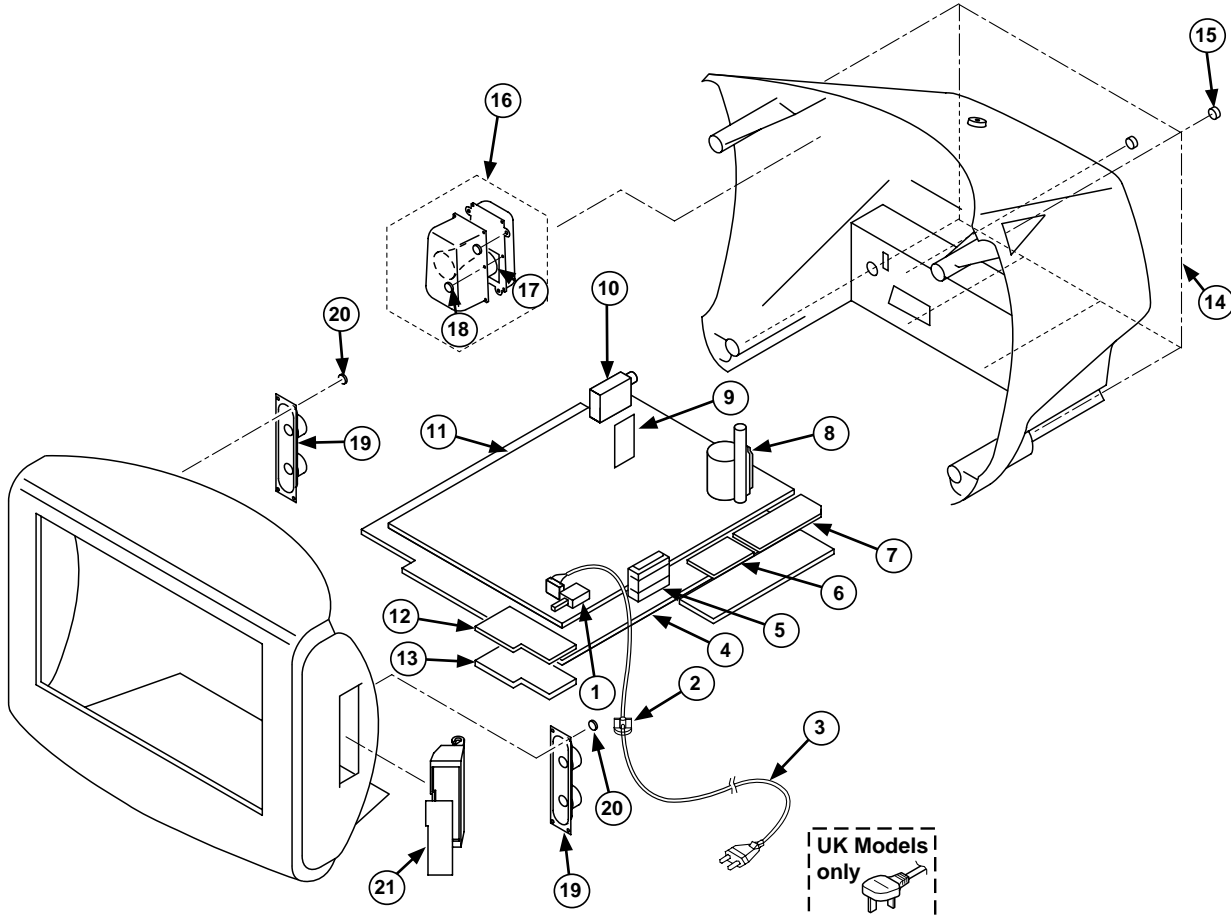

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
1	$\Delta$ 1-571-433-21	SWITCH, PUSH (AC POWER)		11	*A-1632-945-A	A BOARD, COMPLETE (KV-28LS35B)	
2	*4-202-531-01	AC CORD LOCK (SC)			*A-1632-946-A	A BOARD, COMPLETE (KV-28LS35E)	
3	$\Delta$ 1-765-286-11	CORD, POWER (KV-28LS35B/28LS35E/ KV-32LS35B/32LS35E)			*A-1632-934-A	A BOARD, COMPLETE (KV-28LS35U)	
	$\Delta$ 1-776-204-12	CORD, POWER (FILTER) (KV-28LS35U/32LS35U)			*A-1632-939-A	A BOARD, COMPLETE (KV-32LS35B)	
4	*4-206-048-01	BRACKET, MAIN (KV-28LS35)			*A-1632-940-A	A BOARD, COMPLETE (KV-32LS35E)	
	*4-206-048-11	BRACKET, MAIN (KV-32LS35)			*A-1632-931-A	A BOARD, COMPLETE (KV-32LS35U)	
5	1-424-733-11	COIL, PFC CHOKE 65MMH		12	*A-1624-099-A	F2 BOARD, COMPLETE	
6	*A-1640-431-A	D3 BOARD, COMPLETE		13	*4-206-055-01	BRACKET, F2 (KV-28LS35)	
7	*A-1624-100-A	F3 BOARD, COMPLETE			*4-206-055-11	BRACKET, F2 (KV-32LS35)	
8	$\Delta$ 1-453-308-41	TRANSFORMER ASSY, FLYBACK (NX4521//Z2B4) (KV-28LS35)		14	4-206-089-01	COVER, REAR (KV-28LS35)	
	$\Delta$ 1-453-308-31	TRANSFORMER ASSY, FLYBACK (NX4521//Z2B4) (KV-32LS35)			4-206-062-01	COVER, REAR (KV-32LS35)	
9	*A-1642-285-A	D2 BOARD, COMPLETE (KV-28LS35)		15	7-685-663-79	SCREW +BVTP 4x16 TYPE 2 IT-3 (KV-28LS35)	
	*A-1642-281-A	D2 BOARD, COMPLETE (KV-32LS35)			4-039-358-01	SCREW (4x16), (+) BV TAPPING (KV-32LS35)	
10	8-598-535-10	FRONTEND (BTF-EF411) (KV-28LS35B)		16	*A-1678-212-A	WOOFER COMPLETE ASSY (KV-28LS35) 17,18	
	8-598-533-00	FRONTEND (BTF-EC411) (KV-28LS35E)			*A-1678-205-B	WOOFER COMPLETE ASSY (KV-32LS35) 17,18	
	8-598-529-00	FRONTEND (BTF-EU611) (KV-28LS35U)		17	1-529-417-11	SPEAKER (8CM)	
	1-693-555-11	TUNER STEREO (KV-32LS35B)		18	7-685-663-71	SCREW +BVTP 4x16 TYPE 2 IT-3 (KV-28LS35)	
	1-693-556-11	TUNER STEREO (KV-32LS35E)			4-039-358-01	SCREW (4x16), (+) BV TAPPING (KV-32LS35)	
	1-693-557-11	TUNER STEREO (KV-32LS35U)		19	1-529-408-11	SPEAKER (4.2x24CM)	
				20	4-058-870-01	SCREW, (4x16) W (+) P TAPPING (KV-28LS35)	
					4-039-358-01	SCREW (4x16), (+) BV TAPPING (KV-32LS35)	
				21	*A-1646-242-A	H2 BOARD, COMPLETE	

## 6-2. PICTURE TUBE

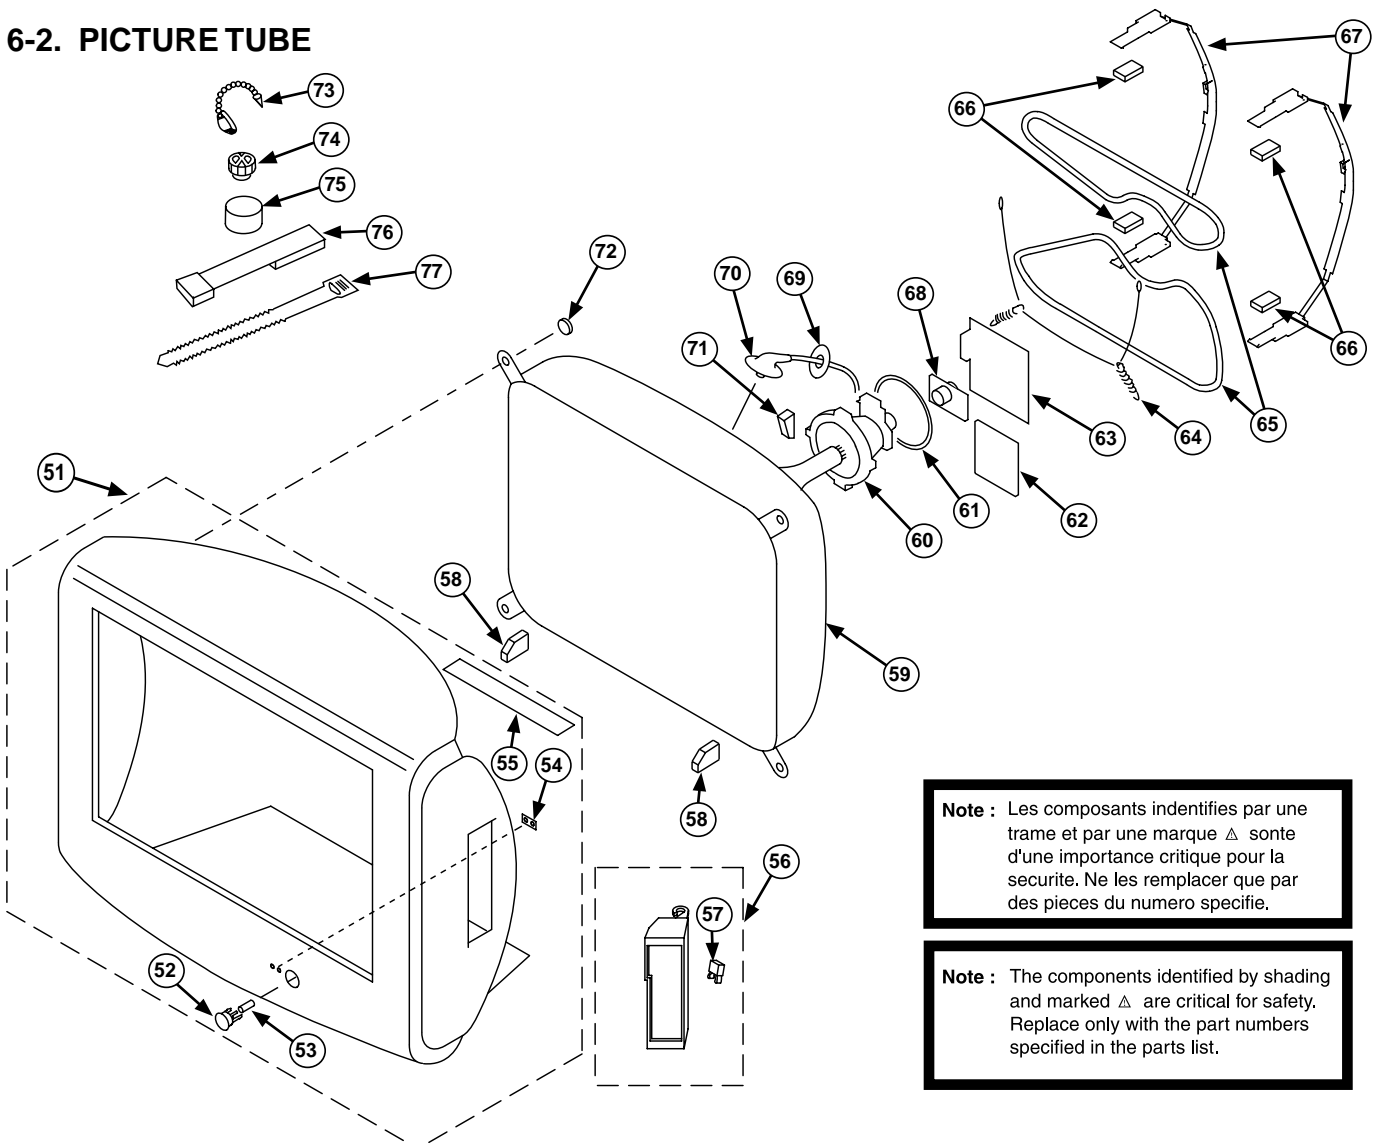

**Note :** Les composants indentifiés par une trame et par une marque Δ sont d'une importance critique pour la securite. Ne les remplacer que par des pieces du numero specifie.

**Note :** The components identified by shading and marked Δ are critical for safety. Replace only with the part numbers specified in the parts list.

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
51	X-4200-736-1	BEZNET ASSY (KV-28LS35)	52-55	64	4-369-318-21	SPRING, TENSION (KV-28LS35)	
	X-4200-724-1	BEZNET ASSY (KV-32LS35)	52-55		4-200-433-01	SPRING, EXTENSION (KV-32LS35)	
52	4-205-948-01	POWER BUTTON (KV-28LS35)		65	Δ 1-416-466-21	COIL, DEMAGNETIC (KV-28LS35)	
	4-205-948-11	POWER BUTTON (KV-32LS35)			Δ 1-416-769-11	COIL, DEMAGNETIC (KV-32LS35)	
53	4-204-426-01	SPRING (KV-28LS35)		66	*4-203-390-71	CUSHION, DGC	
	4-202-964-11	SPRING (KV-32LS35)		67	*4-202-745-01	HOLDER, DGC (KV-28LS35)	
54	4-205-375-01	GUIDE, LIGHT (KV-28LS35)			*4-059-569-01	HOLDER, DGC (KV-32LS35)	
	4-205-375-11	GUIDE, LIGHT (KV-32LS35)		68	8-453-011-11	NECK ASSY, NA299-M	
55	4-204-865-01	SHEET, BLOTTING (KV-28LS35)		69	*4-202-693-01	HOLDER, HV CABLE (KV-32LS35)	
	4-204-058-41	SHEET, BLOTTING (KV-32LS35)		70	Δ 1-251-537-22	CAP ASSY, HIGH VOLTAGE (KV-28LS35)	
56	X-4200-712-1	DOOR ASSY (KV-28LS35)	57		Δ 1-251-946-11	CAP ASSY, HIGH VOLTAGE (KV-32LS35)	
	X-4200-712-2	DOOR ASSY (KV-32LS35)	57	71	3-704-495-01	SPACER, DY (KV-28LS35)	
57	4-047-464-01	CATCHER, PUSH			4-203-658-01	SPACER, DY (KV-32LS35)	
58	4-203-098-01	SUPPORTER, CRT (KV-32LS35)		72	4-046-765-12	SCREW, TAPPING 7 + CROWN WASHER (KV-28LS35)	
59	Δ 8-737-786-05	PICTURE TUBE (W66LLX060X) (KV-28LS35)			4-204-225-01	PT-SCREW (KV-32LS35)	
	Δ 8-735-054-05	PICTURE TUBE (W76LLZ060X) (KV-32LS35)		73	4-308-870-00	CLIP, LEAD WIRE	
60	8-451-521-11	DEFLECTION YOKE (Y28RVC3-B) (KV-28LS35)		74	1-452-094-00	MAGNET, ROTATABLE DISK; 15MM Ø	
	1-451-520-11	DEFLECTION YOKE (Y32RVC3) (KV-32LS35)		75	1-452-032-00	MAGNET, DISK; 10MM Ø	
61	1-452-896-11	COIL, NA ROTATION (RT-200)		76	X-4387-214-1	PERMALLOY ASSY, CORRECTION	
62	*A-1645-050-A	VM BOARD, COMPLETE (KV-28LS35)		77	3-701-007-00	BAND, BINDING	
	*A-1645-049-A	VM BOARD, COMPLETE (KV-32LS35)					
63	*A-1638-156-A	C BOARD, COMPLETE					

# SECTION 7 ELECTRICAL PARTS LIST

## PARTS LISTING TABLE OF CONTENTS

	<b>Page</b>
<b>F2 BOARD COMPLETE Parts List :</b> .....	51
<b>F3 BOARD COMPLETE Parts List :</b> .....	51
<b>A BOARD COMMON Parts List :</b> Parts common to all models listed in this manual .....	51
<b>A BOARD VARIANT Parts List :</b> Parts that belong only to the model specified	
Model	
<u>KV-28LS35</u> .....	59
<u>KV-32LS35</u> .....	59
<b>C BOARD COMPLETE Parts List :</b> .....	59
<b>D3 BOARD COMPLETE Parts List :</b> .....	60
<b>D2 BOARD COMMON Parts List :</b> Parts common to all models listed in this manual .....	60
<b>D2 BOARD VARIANT Parts List :</b> Parts that belong only to the model specified	
Model	
<u>KV-28LS35</u> .....	61
<u>KV-32LS35</u> .....	61
<b>VM BOARD COMMON Parts List :</b> Parts common to all models listed in this manual .....	61
<b>VM BOARD VARIANT Parts List :</b> Parts that belong only to the model specified	
Model	
<u>KV-28LS35</u> .....	63
<u>KV-32LS35</u> .....	63
<b>H2 BOARD COMPLETE Parts List :</b> .....	63
<b>MISCELLANEOUS :</b> .....	64
<b>ACCESSORIES AND PACKAGING MATERIALS :</b> .....	64

**Note :** Refer to the designated variant parts list when seeking a part indicated by an asterisk (\*)  
Parts indicated (XX) on the Schematic Diagram are not used in this model and therefore do not appear in the Parts List.

**Note :** The components identified by shading and marked  $\Delta$  are critical for safety. Replace only with the part numbers specified in the parts list.

**F2** **F3** **A**

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
<b>*A-1624-099-A F2 Board, Complete</b>				< FUSE >			
	4-205-711-01	HOLDER, LED		F3601	$\Delta$ 1-576-232-21	FUSE (H.B.C.) 5A/250V	
		< CAPACITOR >			*1-533-725-11	HOLDER, FUSE (F3601)	
		< RESISTOR >				< TRANSFORMER >	
C2150	1-126-969-11	ELECT	220UF 20.00% 50V	R3601	1-202-719-00	SOLID 1M 10% 1/2W	
C2601	1-113-924-11	CERAMIC	0.0047UF 20.00% 250V			< TRANSFORMER >	
		< CONNECTOR >				< TRANSFORMER >	
CN2150	*1-564-510-11	PLUG, CONNECTOR 7P		T3602	1-433-488-11	TRANSFORMER, LINE FILTER	
CN2601	*1-580-844-11	PIN, CONNECTOR (POWER)				< VARISTOR >	
CN2602	1-695-915-11	TAB (CONTACT)				< VARISTOR >	
CN2603	*1-691-291-11	PIN, CONNECTOR (PC BOARD) 5P		VD3601	1-803-830-31	VARISTOR (ERZV14D621)	
		< DIODE >					
D2150	8-719-081-56	DIODE L-59SRSGC-CC					
D2152	8-719-109-89	DIODE RD5.6ESB2					
		< IC >					
IC2150	8-749-014-59	IC TSOP1740KS1					
		< TRANSISTOR >					
Q2150	8-729-027-38	TRANSISTOR DTA144EKA-T146					
Q2151	8-729-027-43	TRANSISTOR DTC114EKA-T146					
		< RESISTOR >					
R2150	1-216-813-91	RES CHIP	220 5% 1/16W				
R2151	1-216-813-91	RES CHIP	220 5% 1/16W				
R2152	1-216-841-91	RES CHIP	47K 5% 1/16W				
R2153	1-216-829-91	RES CHIP	4.7K 5% 1/16W				
R2154	1-216-825-91	RES CHIP	2.2K 5% 1/16W				
R2155	1-216-809-91	RES CHIP	100 5% 1/16W				
R2156	1-216-815-91	RES CHIP	330 5% 1/16W				
		< SWITCH >					
S2601	$\Delta$ 1-571-433-21	SWITCH, PUSH (AC POWER)					
<b>*A-1624-100-A F3 Board, Complete</b>							
	*4-374-846-01	COVER, CAPACITOR, CAP TYPE					
		< CAPACITOR >					
C3601	1-113-924-11	CERAMIC	0.0047UF 20.00% 250V				
C3602	1-136-212-12	FILM	0.1UF 20.00% 300V				
		< CONNECTOR >					
CN3601	1-580-843-11	PIN, CONNECTOR (POWER)					
CN3602	1-695-915-11	TAB (CONTACT)					
CN3603	1-580-843-11	PIN, CONNECTOR (POWER)					
		< DIODE >					
		< IC >					
		< TRANSISTOR >					
		< RESISTOR >					
		< SWITCH >					
		< CAPACITOR >					
		< CONNECTOR >					
		< DIODE >					
		< IC >					
		< TRANSISTOR >					
		< RESISTOR >					
		< SWITCH >					
		< CAPACITOR >					
		< CONNECTOR >					
		< DIODE >					
		< IC >					
		< TRANSISTOR >					
		< RESISTOR >					
		< SWITCH >					
		< CAPACITOR >					
		< CONNECTOR >					
		< DIODE >					
		< IC >					
		< TRANSISTOR >					
		< RESISTOR >					
		< SWITCH >					
		< CAPACITOR >					
		< CONNECTOR >					
		< DIODE >					
		< IC >					
		< TRANSISTOR >					
		< RESISTOR >					
		< SWITCH >					
		< CAPACITOR >					
		< CONNECTOR >					
		< DIODE >					
		< IC >					
		< TRANSISTOR >					
		< RESISTOR >					
		< SWITCH >					
		< CAPACITOR >					
		< CONNECTOR >					
		< DIODE >					
		< IC >					
		< TRANSISTOR >					
		< RESISTOR >					
		< SWITCH >					
		< CAPACITOR >					
		< CONNECTOR >					
		< DIODE >					
		< IC >					
		< TRANSISTOR >					
		< RESISTOR >					
		< SWITCH >					
		< CAPACITOR >					
		< CONNECTOR >					
		< DIODE >					
		< IC >					
		< TRANSISTOR >					
		< RESISTOR >					
		< SWITCH >					
		< CAPACITOR >					
		< CONNECTOR >					
		< DIODE >					
		< IC >					
		< TRANSISTOR >					
		< RESISTOR >					
		< SWITCH >					
		< CAPACITOR >					
		< CONNECTOR >					
		< DIODE >					
		< IC >					
		< TRANSISTOR >					
		< RESISTOR >					
		< SWITCH >					
		< CAPACITOR >					
		< CONNECTOR >					
		< DIODE >					
		< IC >					
		< TRANSISTOR >					
		< RESISTOR >					
		< SWITCH >					
		< CAPACITOR >					
		< CONNECTOR >					
		< DIODE >					
		< IC >					
		< TRANSISTOR >					
		< RESISTOR >					
		< SWITCH >					
		< CAPACITOR >					
		< CONNECTOR >					
		< DIODE >					
		< IC >					
		< TRANSISTOR >					
		< RESISTOR >					
		< SWITCH >					
		< CAPACITOR >					
		< CONNECTOR >					
		< DIODE >					
		< IC >					
		< TRANSISTOR >					
		< RESISTOR >					
		< SWITCH >					
		< CAPACITOR >					
		< CONNECTOR >					
		< DIODE >					
		< IC >					
		< TRANSISTOR >					
		< RESISTOR >					
		< SWITCH >					
		< CAPACITOR >					
		< CONNECTOR >					
		< DIODE >					
		< IC >					
		< TRANSISTOR >					
		< RESISTOR >					
		< SWITCH >					
		< CAPACITOR >					
		< CONNECTOR >					
		< DIODE >					
		< IC >					
		< TRANSISTOR >					
		< RESISTOR >					
		< SWITCH >					
		< CAPACITOR >					
		< CONNECTOR >					
		< DIODE >					
		< IC >					
		< TRANSISTOR >					
		< RESISTOR >					
		< SWITCH >					
		< CAPACITOR >					
		< CONNECTOR >					
		< DIODE >					
		< IC >					
		< TRANSISTOR >					
		< RESISTOR >					
		< SWITCH >					
		< CAPACITOR >					
		< CONNECTOR >					
		< DIODE >					
		< IC >					
		< TRANSISTOR >					
		< RESISTOR >					
		< SWITCH >					
		< CAPACITOR >					
		< CONNECTOR >					
		< DIODE >					
		< IC >					
		< TRANSISTOR >					
		< RESISTOR >					
		< SWITCH >					
		< CAPACITOR >					
		< CONNECTOR >					
		< DIODE >					
		< IC >					
		< TRANSISTOR >					
		< RESISTOR >					
		< SWITCH >					
		< CAPACITOR >					
		< CONNECTOR >					
		< DIODE >					
		< IC >					
		< TRANSISTOR >					
		< RESISTOR >					
		< SWITCH >					
		< CAPACITOR >					
		< CONNECTOR >					
		< DIODE >					
		< IC >					
		< TRANSISTOR >					
		&					

**A**

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
C035	1-163-009-91	CERAMIC CHIP 0.001UF	10.00% 50V	C407	1-164-346-11	CERAMIC CHIP 1UF	16V
C036	1-163-009-91	CERAMIC CHIP 0.001UF	10.00% 50V	C408	1-127-715-91	CERAMIC CHIP 0.22UF	10% 16V
C037	1-136-244-11	FILM 0.1UF	2.00% 50V	C409	1-126-964-11	ELECT 10UF	20.00% 50V
C038	1-163-038-91	CERAMIC CHIP 0.1UF	25V	C410	1-162-970-11	CERAMIC CHIP 0.01UF	10.00% 25V
C039	1-164-505-11	CERAMIC CHIP 2.2UF	16V	C411	1-163-009-91	CERAMIC CHIP 0.001UF	10.00% 50V
C040	1-163-017-00	CERAMIC CHIP 0.0047UF	10.00% 50V	C412	1-164-346-11	CERAMIC CHIP 1UF	16V
C042	1-162-625-11	CERAMIC CHIP 0.0047UF	5.00% 50V	C414	1-164-346-11	CERAMIC CHIP 1UF	16V
C043	1-163-037-11	CERAMIC CHIP 0.022UF	10.00% 50V	C415	1-164-346-11	CERAMIC CHIP 1UF	16V
C044	1-164-346-11	CERAMIC CHIP 1UF	16V	C416	1-126-964-11	ELECT 10UF	20.00% 50V
C045	1-164-489-11	CERAMIC CHIP 0.22UF	10.00% 16V	C417	1-162-970-11	CERAMIC CHIP 0.01UF	10.00% 25V
C046	1-163-037-11	CERAMIC CHIP 0.022UF	10.00% 50V	C418	1-164-346-91	CERAMIC CHIP 1UF	16V
C047	1-126-935-11	ELECT 470UF	20.00% 16V	C419	1-162-964-11	CERAMIC CHIP 0.001UF	10.00% 50V
C053	1-164-004-11	CERAMIC CHIP 0.1UF	10.00% 25V	C423	1-127-715-91	CERAMIC CHIP 0.22UF	10% 16V
C055	1-126-960-11	ELECT 1UF	20.00% 50V	C424	1-163-009-91	CERAMIC CHIP 0.001UF	10.00% 50V
C100	1-126-933-11	ELECT 100UF	20.00% 16V	C426	1-163-009-91	CERAMIC CHIP 0.001UF	10.00% 50V
C103	1-126-965-91	ELECT 22UF	20.00% 50V	C427	1-163-009-91	CERAMIC CHIP 0.001UF	10.00% 50V
C105	1-162-970-11	CERAMIC CHIP 0.01UF	10.00% 25V	C428	1-163-009-91	CERAMIC CHIP 0.001UF	10.00% 50V
C106	1-126-933-11	ELECT 100UF	20.00% 16V	C429	1-163-009-91	CERAMIC CHIP 0.001UF	10.00% 50V
C112	1-162-970-11	CERAMIC CHIP 0.01UF	10.00% 25V	C430	1-102-114-00	CERAMIC 470PF	10.00% 50V
C204	1-115-340-11	CERAMIC CHIP 0.22UF	10.00% 25V	C435	1-163-017-00	CERAMIC CHIP 0.0047UF	10.00% 50V
C211	1-162-970-91	CERAMIC CHIP 10000PF	10.00% 25V	C436	1-163-017-00	CERAMIC CHIP 0.0047UF	10.00% 50V
C213	1-163-249-11	CERAMIC CHIP 82PF	5.00% 50V	C437	1-164-346-11	CERAMIC CHIP 1UF	16V
C214	1-163-139-00	CERAMIC CHIP 820PF	5.00% 50V	C438	1-164-346-11	CERAMIC CHIP 1UF	16V
C215	1-163-084-00	CERAMIC CHIP 1.5PF	0.25PF 50V	C445	1-126-964-11	ELECT 10UF	20.00% 50V
C216	1-163-117-00	CERAMIC CHIP 100PF	5.00% 50V	C446	1-126-964-11	ELECT 10UF	20.00% 50V
C217	1-163-084-00	CERAMIC CHIP 1.5PF	0.25PF 50V	C447	1-162-970-11	CERAMIC CHIP 0.01UF	10.00% 25V
C218	1-163-249-11	CERAMIC CHIP 82PF	5.00% 50V	C449	1-127-715-91	CERAMIC CHIP 0.22UF	10% 16V
C221	1-163-109-00	CERAMIC CHIP 47PF	5.00% 50V	C501	1-126-968-11	ELECT 100UF	20.00% 50V
C222	1-163-117-00	CERAMIC CHIP 100PF	5.00% 50V	C502	1-163-038-91	CERAMIC CHIP 0.1UF	25V
C223	1-126-965-91	ELECT 22UF	20.00% 50V	C503	1-115-832-91	ELECT 100UF	20.00% 50V
C224	1-163-117-91	CERAMIC CHIP 100PF	5.00% 50V	C504	1-106-220-00	MYLAR 0.1UF	10.00% 100V
C225	1-126-157-11	ELECT 10UF	20.00% 16V	C505	1-137-194-81	FILM 0.47UF	5.00% 50V
C226	1-164-004-11	CERAMIC CHIP 0.1UF	10.00% 25V	C506	1-162-970-11	CERAMIC CHIP 0.01UF	10.00% 25V
C227	1-163-117-91	CERAMIC CHIP 100PF	5.00% 50V	C509	1-107-364-11	MYLAR 0.01UF	10.00% 400V
C228	1-126-965-91	ELECT 22UF	20.00% 50V	C510	1-163-005-91	CERAMIC CHIP 470PF	10.00% 50V
C229	1-163-017-00	CERAMIC CHIP 0.0047UF	10.00% 50V	C513	1-107-662-11	ELECT 22UF	20.00% 250V
C230	1-164-336-11	CERAMIC CHIP 0.33UF	25V	C515	1-104-666-11	ELECT 220UF	20.00% 25V
C232	1-126-157-11	ELECT 10UF	20.00% 16V	C517	1-115-781-91	ELECT 220UF	20.00% 25V
C233	1-164-004-11	CERAMIC CHIP 0.1UF	10.00% 25V	C518	1-106-375-12	MYLAR 0.022UF	10.00% 250V
C234	1-107-823-11	CERAMIC CHIP 0.47UF	10.00% 16V	C519	1-163-275-11	CERAMIC CHIP 0.001UF	5.00% 50V
C235	1-164-005-11	CERAMIC CHIP 0.47UF	25V	C520	1-163-038-91	CERAMIC CHIP 0.1UF	25V
C236	1-126-157-11	ELECT 10UF	20.00% 16V	C524	1-163-037-11	CERAMIC CHIP 0.022UF	10.00% 50V
C237	1-126-965-91	ELECT 22UF	20.00% 50V	C525	1-123-024-21	ELECT 33UF	160V
C238	1-163-117-91	CERAMIC CHIP 100PF	5.00% 50V	C531	1-126-964-11	ELECT 10UF	20.00% 50V
C239	1-126-157-11	ELECT 10UF	20.00% 16V	C532	1-163-037-11	CERAMIC CHIP 0.022UF	10.00% 50V
C242	1-163-009-91	CERAMIC CHIP 0.001UF	10.00% 50V	C537	1-137-417-11	MYLAR 0.0047UF	10.00% 200V
C245	1-163-009-91	CERAMIC CHIP 0.001UF	10.00% 50V	C538	1-165-319-11	CERAMIC CHIP 0.1UF	50V
C401	1-126-964-11	ELECT 10UF	20.00% 50V	C539	1-111-230-11	ELECT 1UF	20.00% 160V
C404	1-162-970-11	CERAMIC CHIP 0.01UF	10.00% 25V	C541	1-106-383-00	MYLAR 0.047UF	10.00% 200V
C405	1-163-009-91	CERAMIC CHIP 0.001UF	10.00% 50V	C543	1-162-134-11	CERAMIC 470PF	10.00% 2KV

**Note :** The components identified by shading and marked  $\Delta$  are critical for safety. Replace only with the part numbers specified in the parts list.

**A**

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
C545	1-164-004-11	CERAMIC CHIP 0.1UF	10.00% 25V	C645	1-164-004-11	CERAMIC CHIP 0.1UF	10.00% 25V
C546	1-129-723-51	FILM 0.056UF	5.00% 630V	C648	1-125-782-91	CERAMIC 4700PF	10.00% 1KV
C547	1-109-844-11	FILM 0.68UF	5.00% 250V	C649	1-163-038-91	CERAMIC CHIP 0.1UF	25V
C548	1-162-134-11	CERAMIC 470PF	10.00% 2KV	C657	1-126-952-11	ELECT 1000UF	20.00% 35V
C550	1-107-638-11	ELECT 33UF	20.00% 160V	C1201	1-126-972-11	ELECT 1000UF	20.00% 50V
C552	1-102-212-00	CERAMIC 820PF	10.00% 500V	C1202	1-126-959-91	ELECT 0.47UF	20.00% 50V
C553	1-137-417-11	MYLAR 0.0047UF	10.00% 200V	C1203	1-535-143-61	LEAD JUMPER (5.0MM)	
C580	1-162-970-11	CERAMIC CHIP 0.01UF	10.00% 25V	C1207	1-126-960-11	ELECT 1UF	20.00% 50V
C582	1-163-259-91	CERAMIC CHIP 220PF	5.00% 50V	C1208	1-126-953-11	ELECT 2200UF	20.00% 35V
C583	1-163-009-91	CERAMIC CHIP 0.001UF	10.00% 50V	C1209	1-163-033-91	CERAMIC CHIP 0.022UF	50V
C600	1-119-888-51	CERAMIC 2200PF	20.00% 250V	C1210	1-126-960-11	ELECT 1UF	20.00% 50V
C601	$\Delta$ 1-136-516-12	FILM 0.1UF	20.00% 300V	C1211	1-163-033-91	CERAMIC CHIP 0.022UF	50V
C602	$\Delta$ 1-136-516-12	FILM 0.1UF	20.00% 300V	C1213	1-164-346-91	CERAMIC CHIP 1UF	16V
C603	$\Delta$ 1-119-899-51	CERAMIC 1000PF	10.00% 250V	C1215	1-126-952-11	ELECT 1000UF	20.00% 35V
C604	$\Delta$ 1-119-899-51	CERAMIC 1000PF	10.00% 250V	C1218	1-109-982-11	CERAMIC CHIP 1UF	10.00% 10V
C605	1-111-036-91	ELECT 470UF	20.00% 16V	C1219	1-104-666-11	ELECT 220UF	20.00% 25V
C606	1-117-751-11	ELECT (BLOCK) 220UF	20.00% 450V	C1221	1-115-339-11	CERAMIC CHIP 0.1UF	10.00% 50V
C607	1-126-964-11	ELECT 10UF	20.00% 50V	C1228	1-126-952-11	ELECT 1000UF	20.00% 35V
C608	1-126-963-11	ELECT 4.7UF	20.00% 50V	C1229	1-163-001-11	CERAMIC CHIP 220PF	10.00% 50V
C610	1-126-941-11	ELECT 470UF	20.00% 25V	C1230	1-163-001-11	CERAMIC CHIP 220PF	10.00% 50V
C611	1-163-009-91	CERAMIC CHIP 0.001UF	10.00% 50V	C1231	1-163-001-11	CERAMIC CHIP 220PF	10.00% 50V
C612	1-104-571-91	CERAMIC 0.0015UF	10.00% 2KV	C1232	1-115-339-11	CERAMIC CHIP 0.1UF	10.00% 50V
C613	1-104-571-91	CERAMIC 0.0015UF	10.00% 2KV	C1235	1-126-960-11	ELECT 1UF	20.00% 50V
C614	1-161-964-51	CERAMIC 0.0047UF	250V	C1236	1-126-960-11	ELECT 1UF	20.00% 50V
C615	1-115-339-11	CERAMIC CHIP 0.1UF	10.00% 50V	< CONNECTOR >			
C616	1-165-127-11	CERAMIC 470PF	10.00% 500V	CN001	*1-564-508-11	PLUG, CONNECTOR 5P	
C617	1-165-127-11	CERAMIC 470PF	10.00% 500V	CN003	1-564-510-51	PLUG, CONNECTOR 7P	
C618	1-126-949-11	ELECT 220UF	20.00% 35V	CN405	*1-564-510-11	PLUG, CONNECTOR 7P	
C620	1-137-990-21	FILM 33000PF	3% 800V	CN406	*1-564-512-11	PLUG, CONNECTOR 9P	
C622	1-104-571-91	CERAMIC 0.0015UF	10.00% 2KV	CN501	1-580-798-11	CONNECTOR PIN (DY)	
C623	1-104-571-91	CERAMIC 0.0015UF	10.00% 2KV	CN503	*1-564-506-11	PLUG, CONNECTOR 3P	
C624	1-126-935-11	ELECT 470UF	20.00% 16V	CN506	1-695-915-11	TAB (CONTACT)	
C626	1-126-967-11	ELECT 47UF	20.00% 50V	CN508	*1-564-508-11	PLUG, CONNECTOR 5P	
C627	1-126-964-11	ELECT 10UF	20.00% 50V	CN509	1-695-915-11	TAB (CONTACT)	
C628	1-126-963-11	ELECT 4.7UF	20.00% 50V	CN510	1-691-771-11	PLUG (MICRO CONNECTOR) 9P	
C629	1-165-127-11	CERAMIC 470PF	10.00% 500V	CN512	*1-770-723-11	CONNECTOR, BOARD TO BOARD 8P	
C630	1-107-641-11	ELECT 220UF	20.00% 160V	CN602	1-508-765-00	PIN, CONNECTOR (5MM PITCH) 3P	
C631	1-126-942-61	ELECT 1000UF	20.00% 25V	CN603	*1-508-786-00	PIN, CONNECTOR (5MM PITCH) 2P	
C632	1-126-964-11	ELECT 10UF	20.00% 50V	CN605	*1-691-960-11	PIN, CONNECTOR (PC BOARD) 3P	
C633	1-163-009-91	CERAMIC CHIP 0.001UF	10.00% 50V	CN606	*1-695-292-11	PIN, CONNECTOR (POWER)	
C634	1-128-562-11	ELECT 47UF	20.00% 100V	CN1200	*1-564-509-11	PLUG, CONNECTOR 6P	
C635	1-136-165-00	FILM 0.1UF	5.00% 50V	CN1201	*1-564-507-11	PLUG, CONNECTOR 4P	
C636	1-136-479-11	FILM 0.001UF	2.00% 50V	CN1202	*1-564-506-11	PLUG, CONNECTOR 3P	
C637	1-126-967-11	ELECT 47UF	20.00% 50V	< DIODE >			
C638	1-107-679-91	ELECT 10UF	20.00% 450V	D001	8-719-069-55	DIODE UZDSTE-175.6B	
C639	1-104-665-11	ELECT 100UF	20.00% 25V	D002	8-719-069-55	DIODE UZDSTE-175.6B	
C640	1-104-664-11	ELECT 47UF	20.00% 25V	D003	8-719-109-69	DIODE RD3.6ES-B2	
C641	1-115-785-11	ELECT 470UF	20.00% 16V	D005	8-719-929-15	DIODE HZS9.1NB2	
C642	1-104-665-11	ELECT 100UF	20.00% 25V				
C643	1-165-127-11	CERAMIC 470PF	10.00% 500V				





REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
D006	8-719-109-89	DIODE RD5.6ES-B2		D427	8-719-082-01	DIODE MM3Z12VT1	
D007	8-719-069-55	DIODE UDZSTE-175.6B		D428	8-719-069-57	DIODE UDZSTE-176.8B	
D008	8-719-074-43	DIODE BAS316-115		D429	8-719-069-57	DIODE UDZSTE-176.8B	
D010	8-719-074-43	DIODE BAS316-115		D435	8-719-069-60	DIODE UDZSTE-179.1B	
D011	8-719-074-43	DIODE BAS316-115		D436	8-719-069-60	DIODE UDZSTE-179.1B	
D012	8-719-929-15	DIODE HZS9.1NB2		D501	8-719-979-85	DIODE EGP20G	
D013	8-719-109-69	DIODE RD3.6ES-B2		D502	8-719-081-90	DIODE PDZ22B-115	
D014	1-216-295-91	SHORT 0		D503	8-719-069-55	DIODE UDZSTE-175.6B	
D016	8-719-109-89	DIODE RD5.6ES-B2		D504	8-719-074-43	DIODE BAS316-115	
D018	8-719-109-69	DIODE RD3.6ES-B2		D506	8-719-908-03	DIODE GP08D	
D019	8-719-978-33	DIODE DTZ-TT11-6.8B		D512	8-719-302-43	DIODE EL1Z	
D021	8-719-978-33	DIODE DTZ-TT11-6.8B		D513	8-719-979-85	DIODE EGP20G	
D022	8-719-069-55	DIODE UDZSTE-175.6B		D514	8-719-979-85	DIODE EGP20G	
D035	8-719-069-55	DIODE UDZSTE-175.6B		D534	8-719-302-43	DIODE EL1Z	
D036	8-719-069-55	DIODE UDZSTE-175.6B		D535	8-719-908-03	DIODE GP08D	
D051	8-719-081-98	DIODE MM3Z6V8T1		D536	8-719-945-80	DIODE ERC06-15S	
D101	8-719-977-81	DIODE DTZ33B		D537	8-719-070-62	DIODE PDZ9.1B-115	
D103	8-719-081-98	DIODE MM3Z6V8T1		D538	8-719-908-03	DIODE GP08D	
D104	8-719-069-55	DIODE UDZSTE-175.6B		D539	8-719-312-10	DIODE RU4AM-T3	
D105	8-719-069-55	DIODE UDZSTE-175.6B		D541	1-216-295-91	SHORT 0	
D106	8-719-069-55	DIODE UDZSTE-175.6B		D573	8-719-082-00	DIODE MM3Z4V7T1	
D107	8-719-069-55	DIODE UDZSTE-175.6B		D601	8-719-510-53	DIODE D4SB60L	
D203	8-719-069-55	DIODE UDZSTE-175.6B		D602	8-719-911-19	DIODE 1SS119-25	
D207	8-719-069-60	DIODE UDZSTE-179.1B		D604	8-719-083-94	DIODE FUF4005	
D210	8-719-069-55	DIODE UDZSTE-175.6B		D608	8-719-063-70	DIODE D1NL20U	
D211	8-719-069-60	DIODE UDZSTE-179.1B		D610	8-719-110-41	DIODE RD15ES-B2	
D212	8-719-914-43	DIODE DAN202K		D611	8-719-991-33	DIODE 1SS133T-77	
D228	8-719-069-55	DIODE UDZSTE-175.6B		D612	8-719-991-33	DIODE 1SS133T-77	
D235	8-719-069-55	DIODE UDZSTE-175.6B		D613	8-719-911-19	DIODE 1SS119-25	
D236	8-719-069-60	DIODE UDZSTE-179.1B		D614	8-719-077-76	DIODE D2SB60A-F04	
D401	8-719-069-57	DIODE UDZSTE-176.8B		D615	8-719-929-15	DIODE HZS9.1NB2	
D402	8-719-081-98	DIODE MM3Z6V8T1		D618	8-719-022-97	DIODE D2S4MF	
D403	8-719-978-33	DIODE DTZ-TT11-6.8B		D619	8-719-022-97	DIODE D2S4MF	
D404	8-719-109-89	DIODE RD5.6ESB2		D620	8-719-109-85	DIODE RD5.1ESB2	
D405	8-719-081-98	DIODE MM3Z6V8T1		D621	8-719-109-89	DIODE RD5.6ESB2	
D406	8-719-081-98	DIODE MM3Z6V8T1		D623	8-719-911-19	DIODE 1SS119-25	
D407	8-719-081-98	DIODE MM3Z6V8T1		D624	8-719-052-90	DIODE D1NL40-TA2	
D408	8-719-069-57	DIODE UDZSTE-176.8B		D625	8-719-062-39	DIODE D4SBL20UF1	
D410	8-719-069-57	DIODE UDZSTE-176.8B		D627	8-719-063-70	DIODE D1NL20U	
D411	8-719-069-57	DIODE UDZSTE-176.8B		D628	8-719-083-49	DIODE P6KE200ASY	
D412	8-719-081-98	DIODE MM3Z6V8T1		D629	8-719-083-94	DIODE FUF4005	
D413	8-719-069-57	DIODE UDZSTE-176.8B		D631	8-719-921-63	DIODE MTZJ-7.5B	
D414	8-719-081-98	DIODE MM3Z6V8T1		D632	8-719-063-70	DIODE D1NL20U	
D418	8-719-069-60	DIODE UDZSTE-179.1B		D633	8-719-109-69	DIODE RD3.6ES-B2	
D419	8-719-049-26	DIODE RB721Q		D638	8-719-083-92	DIODE YG802C09RF122	
D420	8-719-081-98	DIODE MM3Z6V8T1		D640	8-719-921-63	DIODE MTZJ-7.5B	
D421	8-719-049-26	DIODE RB721Q		D1203	8-719-914-43	DIODE DAN202K	
D422	8-719-069-57	DIODE UDZSTE-176.8B		D1204	8-719-069-55	DIODE UDZSTE-175.6B	
D423	8-719-081-98	DIODE MM3Z6V8T1		D1205	8-719-081-90	DIODE PDZ22B-115	
D424	8-719-069-60	DIODE UDZSTE-179.1B		D1230	8-719-074-43	DIODE BAS316-115	

**Note :** The components identified by shading and marked  $\Delta$  are critical for safety. Replace only with the part numbers specified in the parts list.

**A**

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
	< FERRITE BEAD >						
FB601	1-410-397-21	FERRITE	1.1UH	L403	1-410-993-42	INDUCTOR	1UH
FB602	1-410-397-21	FERRITE	1.1UH	L404	1-410-993-42	INDUCTOR	1UH
FB603	1-412-911-21	FERRITE	0UH	L405	1-535-143-61	LEAD, JUMPER	(5.0MM)
FB604	1-410-397-21	FERRITE	1.1UH	L406	1-535-143-61	LEAD, JUMPER	(5.0MM)
FB605	1-410-397-21	FERRITE	1.1UH	L410	1-216-025-11	RES-CHIP	100 5% 1/10W
FB606	1-412-911-21	FERRITE	0UH	L430	1-412-002-31	INDUCTOR	4.7UH
FB607	1-412-911-21	FERRITE	0UH	L446	1-216-295-91	SHORT	0
	< FILTER >			L448	1-216-295-91	SHORT	0
FL201	1-239-803-11	FILTER, EMI		L501	1-414-187-11	INDUCTOR	47UH
	< IC >			L502	1-412-529-11	INDUCTOR	22UH
IC001	6-800-338-01	IC TDA9394H/N1/4/0334		L503	1-412-521-31	INDUCTOR	4.7UH
IC004	8-759-575-72	IC M24C08-WMN6T		L504	1-535-143-61	LEAD, JUMPER	(5.0MM)
IC201	6-700-411-01	IC MSP3411G-PP-B8		L505	1-412-542-41	INDUCTOR	270UH
IC401	8-759-665-11	IC LM393DT		L507	1-412-533-21	INDUCTOR	47UH
IC501	8-759-192-71	IC STV9379		L532	1-412-553-11	INDUCTOR	3.3MH
IC531	8-759-665-11	IC LM393DT		L533	1-406-989-21	INDUCTOR	10MH
IC601	8-759-670-30	IC MC23001D		L534	1-216-025-11	RES-CHIP	100 5% 1/10W
IC602	8-749-016-19	IC SE135N-LF4		L535	1-459-111-00	INDUCTOR	10MH
IC604	8-759-668-87	IC BA41W12ST-V5		L601	1-408-603-31	INDUCTOR	10UH
IC608	8-759-591-02	IC L78L33ABZ-AP		L602	1-408-611-31	INDUCTOR	47UH
IC609	8-759-468-89	IC TOP209P		L603	1-412-523-41	INDUCTOR	6.8UH
IC1201	8-759-831-56	IC TDA7497		L1201	1-535-143-61	LEAD, JUMPER	(5.0MM)
	< JACK >			L1203	1-535-143-61	LEAD, JUMPER	(5.0MM)
J401	1-766-296-21	CONNECTOR, DUAL SCART		< PHOTO COUPLER >			
J402	1-770-329-11	JACK, PIN 3P		PH601	$\Delta$ 8-749-016-21	IC TCET1103G	
J404	1-784-632-11	JACK, PIN 2P		< IC LINK >			
	< COIL >			PS1201	1-533-597-31	LINK, IC	
L001	1-408-611-31	INDUCTOR	47UH	< TRANSISTOR >			
L002	1-414-938-21	INDUCTOR	47UH	Q002	8-729-027-56	TRANSISTOR DTC143TKA-T146	
L004	1-408-611-31	INDUCTOR	47UH	Q013	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
L006	1-408-611-31	INDUCTOR	47UH	Q014	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
L027	1-216-295-91	SHORT	0	Q049	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
L101	1-412-534-41	INDUCTOR	56UH	Q202	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
L102	1-408-611-31	INDUCTOR	47UH	Q203	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
L103	1-412-002-31	INDUCTOR	4.7UH	Q212	8-729-422-33	TRANSISTOR 2SD601A-Q-TX	
L104	1-412-002-31	INDUCTOR	4.7UH	Q401	8-729-026-49	TRANSISTOR 2SA1037AK-T146	
L201	1-408-602-31	INDUCTOR	8.2UH	Q409	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
L202	1-408-591-11	INDUCTOR	1UH	Q411	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
L203	1-408-602-31	INDUCTOR	8.2UH	Q532	8-729-053-33	TRANSISTOR IRF614-037	
L205	1-408-591-21	INDUCTOR	1UH	Q533	8-729-049-08	TRANSISTOR BU2515DX-127	
L206	1-535-143-61	LEAD, JUMPER	(5.0MM)	Q535	8-729-053-33	TRANSISTOR IRF614-037	
L207	1-408-591-21	INDUCTOR	1UH	Q576	8-729-422-33	TRANSISTOR 2SD601A-Q-TX	
L401	1-410-993-42	INDUCTOR	1UH	Q601	8-729-026-49	TRANSISTOR 2SA1037AK-T146	
				602	8-729-119-78	TRANSISTOR 2SC2785-HFE	
				Q603	8-729-029-56	TRANSISTOR DTA144ESA	
				Q604	8-729-030-02	TRANSISTOR DTC144ESA	



REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
R212	1-216-069-00	RES-CHIP	6.8K 5% 1/10W	R429	1-216-089-91	RES-CHIP	47K 5% 1/10W
R213	1-216-081-00	RES-CHIP	22K 5% 1/10W	R430	1-216-073-91	RES-CHIP	10K 5% 1/10W
R214	1-216-041-00	RES-CHIP	470 5% 1/10W	R431	1-216-073-91	RES-CHIP	10K 5% 1/10W
R215	1-216-037-00	RES-CHIP	330 5% 1/10W	R433	1-216-073-91	RES-CHIP	10K 5% 1/10W
R216	1-216-097-11	RES-CHIP	100K 5% 1/10W	R434	1-216-073-91	RES-CHIP	10K 5% 1/10W
R217	1-216-222-00	RES-CHIP	10K 5% 1/8W	R435	1-216-295-91	SHORT	0
R220	1-216-031-00	RES-CHIP	180 5% 1/10W	R438	1-216-022-00	RES-CHIP	75 5% 1/10W
R221	1-216-190-00	RES-CHIP	470 5% 1/8W	R439	1-216-022-00	RES-CHIP	75 5% 1/10W
R232	1-216-025-11	RES-CHIP	100 5% 1/10W	R440	1-216-049-11	RES-CHIP	1K 5% 1/10W
R233	1-216-069-00	RES-CHIP	6.8K 5% 1/10W	R441	1-216-051-00	RES-CHIP	1.2K 5% 1/10W
R234	1-216-069-00	RES-CHIP	6.8K 5% 1/10W	R442	1-216-085-91	RES-CHIP	33K 5% 1/10W
R235	1-216-295-91	SHORT	0	R443	1-216-073-91	RES-CHIP	10K 5% 1/10W
R236	1-216-295-91	SHORT	0	R444	1-216-061-91	RES-CHIP	3.3K 5% 1/10W
R238	1-216-025-11	RES-CHIP	100 5% 1/10W	R446	1-216-113-00	RES-CHIP	470K 5% 1/10W
R246	1-260-107-11	CARBON	4.7K 5% 1/2W	R447	1-216-295-91	SHORT	0
R248	1-249-429-11	CARBON	10K 5% 1/4W	R448	1-216-113-00	RES-CHIP	470K 5% 1/10W
R249	1-216-097-11	RES-CHIP	100K 5% 1/10W	R449	1-216-295-91	SHORT	0
R250	1-216-230-00	RES-CHIP	22K 5% 1/8W	R450	1-216-041-00	RES-CHIP	470 5% 1/10W
R251	1-216-069-00	RES-CHIP	6.8K 5% 1/10W	R451	1-216-041-00	RES-CHIP	470 5% 1/10W
R252	1-216-069-00	RES-CHIP	6.8K 5% 1/10W	R453	1-216-171-00	RES-CHIP	75 5% 1/8W
R253	1-216-025-11	RES-CHIP	100 5% 1/10W	R454	1-216-001-00	RES-CHIP	10 5% 1/10W
R254	1-216-025-11	RES-CHIP	100 5% 1/10W	R460	1-216-049-11	RES-CHIP	1K 5% 1/10W
R401	1-410-993-42	INDUCTOR	1UH	R461	1-216-022-00	RES-CHIP	75 5% 1/10W
R402	1-216-041-00	RES-CHIP	470 5% 1/10W	R462	1-216-178-91	RES-CHIP	150 5% 1/8W
R403	1-216-113-00	RES-CHIP	470K 5% 1/10W	R500	1-216-061-91	RES-CHIP	3.3K 5% 1/10W
R404	1-216-113-00	RES-CHIP	470K 5% 1/10W	R501	1-216-091-00	RES-CHIP	56K 5% 1/10W
R405	1-216-033-00	RES-CHIP	220 5% 1/10W	R502	1-216-073-91	RES-CHIP	10K 5% 1/10W
R406	1-216-296-11	SHORT	0	R503	1-215-888-00	METAL OXIDE	220 5% 2W
R407	1-216-022-00	RES-CHIP	75 5% 1/10W	R504	1-249-385-11	CARBON	2.2 5% 1/4W
R408	1-216-022-00	RES-CHIP	75 5% 1/10W	R505	1-216-671-11	METAL CHIP	6.8K 0.5% 1/10W
R409	1-216-025-11	RES-CHIP	100 5% 1/10W	R506	1-208-796-11	METAL CHIP	3.9K 0.5% 1/10W
R410	1-216-025-11	RES-CHIP	100 5% 1/10W	R507	1-216-349-00	METAL OXIDE	1 5% 1W
R411	1-216-022-00	RES-CHIP	75 5% 1/10W	R508	1-216-673-11	METAL CHIP	8.2K 0.5% 1/10W
R412	1-216-025-11	RES-CHIP	100 5% 1/10W	R509	1-208-796-11	METAL CHIP	3.9K 0.5% 1/10W
R413	1-216-113-00	RES-CHIP	470K 5% 1/10W	R510	1-216-113-00	RES-CHIP	470K 5% 1/10W
R414	1-216-022-00	RES-CHIP	75 5% 1/10W	R512	1-249-382-11	CARBON	1.2 5% 1/4W
R415	1-216-022-00	RES-CHIP	75 5% 1/10W	R514	1-249-377-11	CARBON	0.47 5% 1/4W
R416	1-216-027-00	RES-CHIP	120 5% 1/10W	R515	1-249-377-11	CARBON	0.47 5% 1/4W
R417	1-216-113-00	RES-CHIP	470K 5% 1/10W	R516	1-214-905-11	METAL	47K 1% 1/2W
R418	1-216-113-00	RES-CHIP	470K 5% 1/10W	R520	1-215-884-11	METAL OXIDE	47 5% 2W
R419	1-216-022-00	RES-CHIP	75 5% 1/10W	R522	1-216-097-11	RES-CHIP	100K 5% 1/10W
R420	1-216-073-91	RES-CHIP	10K 5% 1/10W	R523	1-216-121-11	RES-CHIP	1M 5% 1/10W
R421	1-216-049-11	RES-CHIP	1K 5% 1/10W	R524	1-216-075-00	RES-CHIP	12K 5% 1/10W
R422	1-216-831-91	RES-CHIP	6.8K 5% 1/16W	R525	1-216-057-00	RES-CHIP	2.2K 5% 1/10W
R423	1-216-113-00	RES-CHIP	470K 5% 1/10W	R526	1-216-089-91	RES-CHIP	47K 5% 1/10W
R424	1-216-113-00	RES-CHIP	470K 5% 1/10W	R527	1-216-077-91	RES-CHIP	15K 5% 1/10W
R425	1-216-085-91	RES-CHIP	33K 5% 1/10W	R528	1-216-097-11	RES-CHIP	100K 5% 1/10W
R426	1-216-073-91	RES-CHIP	10K 5% 1/10W	R529	1-216-073-91	RES-CHIP	10K 5% 1/10W
R427	1-216-113-00	RES-CHIP	470K 5% 1/10W	R530	1-216-085-91	RES-CHIP	33K 5% 1/10W
R428	1-216-073-91	RES-CHIP	10K 5% 1/10W	R531	1-216-057-00	RES-CHIP	2.2K 5% 1/10W

**A**

**Note :** The components identified by shading and marked  $\Delta$  are critical for safety. Replace only with the part numbers specified in the parts list.

REF.NO.	PART.NO	DESCRIPTION	REMARK
R532	1-216-065-91	RES-CHIP 4.7K 5%	1/10W
R533	1-216-077-91	RES-CHIP 15K 5%	1/10W
R538	1-535-143-71	LEAD, JUMPER (7.5MM)	
R539	1-215-892-81	METAL OXIDE 1K 5%	2W
R540	1-212-970-00	FUSIBLE 33 5%	1/2W
R543	1-216-065-91	RES-CHIP 4.7K 5%	1/10W
R547	1-535-143-71	LEAD, JUMPER (7.5MM)	
R548	1-249-387-11	CARBON 3.3 5%	1/4W
R549	1-535-143-71	LEAD, JUMPER (7.5MM)	
R551	1-215-873-00	METAL OXIDE 4.7K 5%	1W
R552	1-216-848-91	RES-CHIP 180K 5%	1/16W
R553	1-249-381-11	CARBON 1 5%	1/4W
R555	1-216-059-00	RES-CHIP 2.7K 5%	1/10W
R556	1-215-916-00	METAL OXIDE 680 5%	3W
R557	1-216-067-00	RES-CHIP 5.6K 5%	1/10W
R558	1-216-057-00	RES-CHIP 2.2K 5%	1/10W
R589	1-216-097-11	RES-CHIP 100K 5%	1/10W
R590	1-216-230-00	RES-CHIP 22K 5%	1/8W
R591	1-215-892-11	METAL OXIDE 1K 5%	2W
R602	1-202-968-11	CEMENTED 1.2 5%	10W
R603	1-202-933-61	FUSIBLE 0.1 10%	1/2W
R605	1-216-049-11	RES-CHIP 1K 5%	1/10W
R608	1-216-073-91	RES-CHIP 10K 5%	1/10W
R609	1-216-677-11	METAL CHIP 12K 0.5%	1/10W
R610	1-215-481-00	METAL 330K 1%	1/4W
R611	1-216-059-00	RES-CHIP 2.7K 5%	1/10W
R612	1-249-429-11	CARBON 10K 5%	1/4W
R613	$\Delta$ 1-219-720-91	METAL 10M 5%	1W
R615	1-215-385-00	METAL 33 1%	1/4W
R618	1-247-889-00	CARBON 270K 5%	1/4W
R619	1-216-065-91	RES-CHIP 4.7K 5%	1/10W
R621	1-216-113-00	RES-CHIP 470K 5%	1/10W
R622	1-216-073-91	RES-CHIP 10K 5%	1/10W
R623	1-216-081-00	RES-CHIP 22K 5%	1/10W
R624	1-216-001-00	RES-CHIP 10 5%	1/10W
R625	1-216-073-91	RES-CHIP 10K 5%	1/10W
R627	1-249-389-11	CARBON 4.7 5%	1/4W
R628	1-247-791-91	CARBON 22 5%	1/4W
R629	1-216-073-91	RES-CHIP 10K 5%	1/10W
R631	1-216-101-91	RES-CHIP 150K 5%	1/10W
R632	1-249-417-11	CARBON 1K 5%	1/4W
R633	1-215-481-00	METAL 330K 1%	1/4W
R634	1-217-625-00	METAL 0.05 10%	2W
R635	1-260-300-11	CARBON 4.7 5%	1/2W
R636	1-249-413-11	CARBON 470 5%	1/4W
R637	1-216-041-00	RES-CHIP 470 5%	1/10W
R639	1-208-814-91	METAL CHIP 22K 0.5%	1/10W
R640	1-208-830-11	METAL CHIP 100K 0.5%	1/10W
R641	1-216-097-11	RES-CHIP 100K 5%	1/10W
R642	1-249-405-11	CARBON 100 5%	1/4W

REF.NO.	PART.NO	DESCRIPTION	REMARK
R643	1-216-089-91	RES-CHIP 47K 5%	1/10W
R645	1-216-073-91	RES-CHIP 10K 5%	1/10W
R647	1-216-049-11	RES-CHIP 1K 5%	1/10W
R648	1-215-481-00	METAL 330K 1%	1/4W
R649	1-208-805-11	METAL CHIP 9.1K 0.5%	1/10W
R650	1-208-758-11	METAL CHIP 100 0.5%	1/10W
R651	1-220-926-11	FUSIBLE 0.47 10%	1/2W
R652	1-216-081-00	RES-CHIP 22K 5%	1/10W
R653	1-216-073-91	RES-CHIP 10K 5%	1/10W
R654	1-216-001-00	RES-CHIP 10 5%	1/10W
R656	1-216-365-00	METAL OXIDE 0.47 5%	2W
R658	1-202-968-11	CEMENTED 1.2 5%	10W
R660	1-247-807-31	CARBON 100 5%	1/4W
R1202	1-216-073-91	RES-CHIP 10K 5%	1/10W
R1203	1-216-049-11	RES-CHIP 1K 5%	1/10W
R1207	1-216-077-91	RES-CHIP 15K 5%	1/10W
R1208	1-216-067-00	RES-CHIP 5.6K 5%	1/10W
R1209	1-216-073-91	RES-CHIP 10K 5%	1/10W
R1210	1-216-077-91	RES-CHIP 15K 5%	1/10W
R1211	1-216-049-11	RES-CHIP 1K 5%	1/10W
R1212	1-216-057-00	RES-CHIP 2.2K 5%	1/10W
R1213	1-216-049-11	RES-CHIP 1K 5%	1/10W
R1214	1-216-049-11	RES-CHIP 1K 5%	1/10W
R1215	1-216-049-11	RES-CHIP 1K 5%	1/10W
R1216	1-216-025-11	RES-CHIP 100 5%	1/10W
R1217	1-216-341-11	METAL OXIDE 0.22 5%	1W
R1230	1-216-041-00	RES-CHIP 470 5%	1/10W
R1231	1-216-113-00	RES-CHIP 470K 5%	1/10W
R1232	1-216-041-00	RES-CHIP 470 5%	1/10W
R1233	1-216-113-00	RES-CHIP 470K 5%	1/10W
R1235	1-216-073-91	RES-CHIP 10K 5%	1/10W
R1236	1-216-073-91	RES-CHIP 10K 5%	1/10W
< RELAY >			
RY601	$\Delta$ 1-755-388-11	RELAY (AC POWER)	
< SWITCH >			
SW532	1-572-707-11	SWITCH, LEVER	
< TRANSFORMER >			
T531	1-437-210-11	TRANSFORMER, HORIZONTAL DRIVE	
T532	1-426-981-91	TRANSFORMER, FERRITE (PMT)	
T602	$\Delta$ 1-431-732-31	TRANSFORMER, CONVERTER (SRT)	
T603	$\Delta$ 1-435-976-11	TRANSFORMER, CONVERTER (PIT)	
< THERMISTOR >			
TH601	1-803-586-41	THERMISTOR	
THP601	$\Delta$ 1-803-951-11	THERMISTOR, PTC	



**Note :** The components identified by shading and marked  $\Delta$  are critical for safety. Replace only with the part numbers specified in the parts list.

REF.NO.	PART.NO	DESCRIPTION	REMARK
D703	8-719-901-83	DIODE 1SS83	
D705	8-719-302-43	DIODE ELIZ	
D706	8-719-901-83	DIODE 1SS83	
D707	8-719-901-83	DIODE 1SS83	
D708	8-719-109-97	DIODE RD6.8ES-B2	
D709	8-719-109-97	DIODE RD6.8ES-B2	
D710	8-719-109-97	DIODE RD6.8ES-B2	
D1801	8-719-110-17	DIODE RD10ESEB2	
D1802	8-719-110-17	DIODE RD10ESEB2	
D1803	8-719-110-17	DIODE RD10ESEB2	
< IC >			
IC701	8-759-562-43	IC TDA6108JF/N1B	
IC1801	8-759-603-37	IC M5216P	
< SOCKET >			
J701	$\Delta$ 1-251-732-11	SOCKET, CRT	
< COIL >			
L704	1-414-183-41	INDUCTOR 10UH	
< RESISTOR >			
R701	1-247-903-00	CARBON 1M 5% 1/4W	
R702	1-249-429-11	CARBON 10K 5% 1/4W	
R703	1-247-903-00	CARBON 1M 5% 1/4W	
R704	1-535-143-21	LEAD, JUMPER (12.5MM)	
R705	1-215-869-11	METAL OXIDE 1K 5% 1W	
R706	1-249-411-11	CARBON 330 5% 1/4W	
R712	1-215-869-11	METAL OXIDE 1K 5% 1W	
R716	1-249-411-11	CARBON 330 5% 1/4W	
R718	1-202-814-11	SOLID 33K 10% 1/2W	
R726	1-215-869-11	METAL OXIDE 1K 5% 1W	
R727	1-249-411-11	CARBON 330 5% 1/4W	
R728	1-249-398-11	CARBON 27 5% 1/4W	
R741	1-202-549-00	SOLID 100 20% 1/2W	
R1801	1-249-441-11	CARBON 100K 5% 1/4W	
R1805	1-249-429-11	CARBON 10K 5% 1/4W	
R1806	1-247-899-11	CARBON 680K 5% 1/4W	
R1807	1-249-429-11	CARBON 10K 5% 1/4W	
R1808	1-249-429-11	CARBON 10K 5% 1/4W	
R1809	1-249-429-11	CARBON 10K 5% 1/4W	
R1810	1-249-429-11	CARBON 10K 5% 1/4W	
< VARIABLE RESISTOR >			
RV702	1-241-656-21	RES, ADJ, METAL FILM 110M	

REF.NO.	PART.NO	DESCRIPTION	REMARK
<b>*A-1640-431-A D3 Board, Complete</b>			
< CAPACITOR >			
C2802	1-126-965-91	ELECT 22UF 20.00% 50V	
< CONNECTOR >			
CN2801	*1-564-506-11	PLUG, CONNECTOR 3P	
CN2802	*1-785-270-12	PIN, DY CONNECTOR (PC BOARD)	
CN2803	*1-580-798-11	CONNECTOR PIN (DY) 6P	
< DIODE >			
D2801	8-719-991-33	DIODE 1SS133T-77	
< TRANSISTOR >			
Q2801	8-729-119-78	TRANSISTOR 2SC2785-HFE	
Q2802	8-729-900-95	TRANSISTOR 2SC1740S-RT	
< RESISTOR >			
R2801	1-249-421-11	CARBON 2.2K 5% 1/4W	
R2802	1-247-839-91	CARBON 2.2K 5% 1/4W	
< RELAY >			
RY2801	1-755-172-11	RELAY	
< TRANSFORMER >			
T2801	1-411-981-11	INDUCTOR 245UH	
<b>*A-1642-285-A D2 Board, Complete (KV-28LS35)</b>			
<b>*A-1642-281-A D2 Board, Complete (KV-32LS35)</b>			
<b>D2 Board, Common Parts</b>			
< CAPACITOR >			
C8802	1-136-104-00	FILM 0.16UF 5.00% 200V	
C8804	1-136-207-11	MYLAR 0.047UF 10.00% 250V	
< CONNECTOR >			
CN8801	*1-778-770-11	CONNECTOR, BOARD TO BOARD (PLUG)	
CN8802	*1-564-506-11	PLUG, CONNECTOR 3P	
< DIODE >			
D8801	8-719-923-60	DIODE MTZJ-T-77-9.1A	
D8802	8-719-936-85	DIODE RGP10GPKG23	
D8803	8-719-921-39	DIODE MTZJ4.7B	
< IC >			
IC8801	8-749-010-64	PHOTO COUPLER PC123F2	

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
	< COIL >						
L8802	1-406-978-21	COIL CHOKE 150UH		C1845	1-129-725-00	FILM 0.082UF	5.00% 400V
	< TRANSISTOR >			C1901	1-162-927-11	CERAMIC CHIP 100PF	5.00% 50V
Q8801	8-729-034-09	TRANSISTOR 2SK2518-01MR		C1902	1-137-374-11	MYLAR 0.047UF	5.00% 50V
Q8802	8-729-027-59	TRANSISTOR DTC144EKA-T146		C1903	1-126-964-11	ELECT 10UF	20.00% 50V
Q8803	8-729-027-59	TRANSISTOR DTC144EKA-T146		C1904	1-137-366-11	MYLAR 0.0022UF	5.00% 50V
	< RESISTOR >			C1905	1-137-374-11	MYLAR 0.047UF	5.00% 50V
JR8801	1-216-864-91	SHORT 0		C1906	1-162-970-11	CERAMIC CHIP 0.01UF	10.00% 25V
R8803	1-249-441-11	CARBON 100K 5% 1/4W		C1913	1-129-898-91	FILM 0.0022UF	5.00% 630V
R8804	1-216-825-91	RES-CHIP 2.2K 5% 1/16W		C1915	1-136-205-11	MYLAR 0.022UF	10.00% 250V
R8805	1-216-825-91	RES-CHIP 10K 5% 1/16W		C1916	1-162-962-91	CERAMIC CHIP 470PF	10.00% 50V
R8806	1-216-809-91	RES-CHIP 100 5% 1/16W		C1917	1-102-228-00	CERAMIC 470PF	10.00% 500V
R8812	1-218-879-91	RES-CHIP 22K 0.5% 1/16W		C1951	1-126-964-11	ELECT 10UF	20.00% 50V
<b>D2 Board Variant Parts KV-28LS35</b>				C1952	1-126-964-11	ELECT 10UF	20.00% 50V
	< CAPACITOR >			C1953	1-137-367-11	MYLAR 0.0033UF	5.00% 50V
C8803	1-115-521-11	FILM 0.82UF 5.00% 250V		C1954	1-162-970-11	CERAMIC CHIP 0.01UF	10.00% 25V
<b>D2 Board Variant Parts KV-32LS35</b>				C1957	1-126-964-11	ELECT 10UF	20.00% 50V
	< CAPACITOR >			C1958	1-136-169-00	FILM 0.22UF	5.00% 50V
C8803	1-115-356-11	FILM 1.2UF 5.00% 250V		C1959	1-136-169-00	FILM 0.22UF	5.00% 50V
<b>*A-1645-050-A VM Board, Complete (KV-28LS35)</b>				< CONNECTOR >			
<b>*A-1645-049-A VM Board, Complete (KV-32LS35)</b>				CN1701	*1-691-771-11	PLUG, CONNECTOR 9P	
<b>VM Board, Common Parts</b>				CN1702	*1-564-506-11	PLUG, CONNECTOR 3P	
4-352-844-01	PIN, LEAD, COATING			CN1718	*1-770-723-11	CONNECTOR, BOARD TO BOARD 8P	
	< CAPACITOR >			CN1809	1-695-915-11	TAB (CONTACT)	
C1701	1-104-665-11	ELECT 100UF	20.00% 25V	< DIODE >			
C1702	1-162-970-11	CERAMIC CHIP 0.01UF	10.00% 25V	D1711	8-719-988-61	DIODE 1SS355TE-17	
C1703	1-162-955-11	CERAMIC CHIP 150PF	5.00% 50V	D1719	8-719-991-33	DIODE 1SS133T-77	
C1704	1-104-665-11	ELECT 100UF	20.00% 25V	D1722	8-719-991-33	DIODE 1SS133T-77	
C1705	1-162-919-11	CERAMIC CHIP 22PF	5.00% 50V	D1733	8-719-921-40	DIODE MTZJ-4.7C	
C1710	1-106-375-12	MYLAR 0.022UF	10.00% 250V	D1734	8-719-921-40	DIODE MTZJ-4.7C	
C1711	1-106-375-12	MYLAR 0.022UF	10.00% 250V	D1840	8-719-302-43	DIODE EL1Z	
C1713	1-106-375-12	MYLAR 0.022UF	10.00% 250V	D1901	8-719-991-33	DIODE 1SS133T-77	
C1721	1-107-655-91	ELECT 47UF	20.00% 250V	D1902	8-719-991-33	DIODE 1SS133T-77	
C1722	1-136-153-00	FILM 0.01UF	5.00% 50V	D1903	8-719-991-33	DIODE 1SS133T-77	
C1723	1-126-935-11	ELECT 470UF	20.00% 10V	D1904	8-719-991-33	DIODE 1SS133T-77	
C1728	1-126-935-11	ELECT 470UF	20.00% 10V	D1905	8-719-110-41	DIODE RD15ES-B2	
C1733	1-104-664-11	ELECT 47UF	20.00% 25V	D1906	8-719-970-87	DIODE ERA38-06	
C1734	1-104-664-11	ELECT 47UF	20.00% 25V	D1907	8-719-970-87	DIODE ERA38-06	
C1737	1-104-999-51	FILM 0.1UF	5.00% 200V	D1908	8-719-300-33	DIODE RU-3AM	
C1844	1-129-716-00	FILM 0.015UF	5.00% 630V	D1909	8-719-991-33	DIODE 1SS133T-77	
	< FERRITE BEAD >			FB1701	1-535-143-61	LEAD, JUMPER (5.0MM)	
	< IC >			< IC >			
				IC1701	8-759-394-36	IC BA09T	
				IC1901	8-759-450-95	IC LM393N	
				IC1902	8-759-008-70	IC LM358N	





REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
	< COIL >						
L1701	1-414-183-41	INDUCTOR	10UH	R1734	1-214-809-81	METAL	5.1 1% 1/2W
L1702	1-412-525-41	INDUCTOR	10UH	R1735	1-215-922-11	METAL OXIDE	6.8K 5% 3W
L1703	1-414-184-31	INDUCTOR	15UH	R1736	1-215-892-21	METAL OXIDE	1K 5% 2W
L1843	1-406-989-21	INDUCTOR	10MH	R1737	1-215-867-00	METAL OXIDE	470 5% 1W
L1901	1-406-677-21	INDUCTOR	10MMH				
	< TRANSISTOR >						
Q1701	8-729-120-28	TRANSISTOR	2SC1623-L5L6	R1739	1-535-143-61	LEAD JUMPER	(5.00MM)
Q1704	8-729-120-28	TRANSISTOR	2SC1623-L5L6	R1842	1-216-809-11	RES-CHIP	100 5% 1/16W
Q1705	8-729-119-78	TRANSISTOR	2SC2785-HFE	R1846	1-216-825-11	RES-CHIP	2.2K 5% 1/16W
Q1706	8-729-026-39	TRANSISTOR	2SA933AS-QT	R1901	1-216-841-11	RES-CHIP	47K 5% 1/16W
Q1707	8-729-049-09	TRANSISTOR	BC327-25	R1903	1-216-833-11	RES-CHIP	10K 5% 1/16W
Q1708	8-729-045-05	TRANSISTOR	2SA2005				
Q1709	8-729-119-78	TRANSISTOR	2SC2785-HFE	R1904	1-216-833-11	RES-CHIP	10K 5% 1/16W
Q1710	8-729-049-10	TRANSISTOR	BC337-25	R1905	1-216-845-11	RES-CHIP	100K 5% 1/16W
Q1711	8-729-045-04	TRANSISTOR	2SC5511	R1906	1-216-833-11	RES-CHIP	10K 5% 1/16W
Q1840	8-729-119-76	TRANSISTOR	2SA1175-HFE	R1907	1-216-845-11	RES-CHIP	100K 5% 1/16W
Q1841	8-729-039-68	TRANSISTOR	IRF620	R1908	1-216-813-11	RES-CHIP	220 5% 1/16W
Q1901	8-729-120-28	TRANSISTOR	2SC1623-L5L6	R1909	1-215-489-00	METAL	680K 1% 1/4W
Q1902	8-729-120-28	TRANSISTOR	2SC1623-L5L6	R1910	1-216-864-91	SHORT	0
Q1903	8-729-043-95	TRANSISTOR	2SC3840(3)	R1911	1-216-833-11	RES-CHIP	10K 5% 1/16W
Q1906	8-729-120-28	TRANSISTOR	2SC1623-L5L6	R1912	1-216-857-11	RES-CHIP	1M 5% 1/16W
Q1907	8-729-140-97	TRANSISTOR	2SB734-34	R1913	1-216-821-11	RES-CHIP	1K 5% 1/16W
	< RESISTOR >						
JR1702	1-216-814-11	RES-CHIP	270 5% 1/16W	R1914	1-216-825-11	RES-CHIP	2.2K 5% 1/16W
R1701	1-216-814-11	RES-CHIP	270 5% 1/16W	R1915	1-216-829-11	RES-CHIP	4.7K 5% 1/16W
R1702	1-216-814-11	RES-CHIP	270 5% 1/16W	R1917	1-216-842-11	RES-CHIP	56K 5% 1/16W
R1709	1-216-824-91	RES-CHIP	1.8K 5% 1/16W	R1918	1-215-921-11	METAL OXIDE	4.7K 5% 3W
R1710	1-216-839-11	RES-CHIP	33K 5% 1/16W	R1919	1-218-871-91	RES-CHIP	10K 5% 1/16W
R1711	1-216-823-11	RES-CHIP	1.5K 5% 1/16W	R1920	1-216-864-91	SHORT	0
R1712	1-216-824-11	RES-CHIP	1.8K 5% 1/16W	R1921	1-215-922-11	METAL OXIDE	6.8K 5% 3W
R1713	1-216-809-11	RES-CHIP	100 5% 1/16W	R1923	1-216-845-11	RES-CHIP	100K 5% 1/16W
R1714	1-260-089-11	CARBON	150 5% 1/2W	R1924	1-216-845-11	RES-CHIP	100K 5% 1/16W
R1719	1-216-822-11	RES-CHIP	1.2K 5% 1/16W	R1925	1-216-845-11	RES-CHIP	100K 5% 1/16W
R1720	1-247-863-91	CARBON	22K 5% 1/4W	R1953	1-216-850-11	RES-CHIP	270K 5% 1/16W
R1721	1-247-863-91	CARBON	22K 5% 1/4W	R1954	1-216-851-11	RES-CHIP	330K 5% 1/16W
R1722	1-216-822-11	RES-CHIP	1.2K 5% 1/16W	R1955	1-216-849-11	RES-CHIP	220K 5% 1/16W
R1723	1-249-399-11	CARBON	33 5% 1/4W	R1956	1-218-463-11	RES-CHIP	8.2M 5% 1/10W
R1724	1-216-830-91	RES-CHIP	5.6K 5% 1/16W	R1957	1-216-833-11	RES-CHIP	10K 5% 1/16W
R1725	1-247-889-91	CARBON	270K 5% 1/4W	R1958	1-216-809-11	RES-CHIP	100 5% 1/16W
R1726	1-247-889-91	CARBON	270K 5% 1/4W	R1959	1-216-828-11	RES-CHIP	3.9K 5% 1/16W
R1727	1-216-830-91	RES-CHIP	5.6K 5% 1/16W	R1962	1-216-839-11	RES-CHIP	33K 5% 1/16W
R1728	1-249-399-11	CARBON	33 5% 1/4W	R1964	1-216-809-11	RES-CHIP	100 5% 1/16W
R1729	1-249-407-11	CARBON	150 5% 1/4W	R1965	1-216-817-11	RES-CHIP	470 5% 1/16W
R1732	1-249-407-11	CARBON	150 5% 1/4W	R1967	1-216-483-11	METAL OXIDE	2.7K 5% 3W
R1733	1-214-809-81	METAL	5.1 1% 1/2W	R1968	1-215-886-11	METAL OXIDE	100 5% 2W
				R1969	1-216-483-11	METAL OXIDE	2.7K 5% 3W
					< TRANSFORMER >		
				T1901	1-424-584-11	TRANSFORMER, DYNAMIC FOCUS	

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
<b>VM Board Variant Parts KV-28LS35</b>							
< CAPACITOR >				< DIODE >			
C1848	1-136-347-91	FILM	0.0047UF 5.00% 630V	D902	8-719-929-15	DIODE HZS9.1NB2	
C1912	1-162-117-00	CERAMIC	100PF 10.00% 500V	D903	8-719-929-15	DIODE HZS9.1NB2	
C1914	1-102-030-00	CERAMIC	330PF 10.00% 500V	D904	8-719-109-97	DIODE RD6.8ES-B2	
< COIL >				D905	8-719-109-97	DIODE RD6.8ES-B2	
L1959	1-406-679-11	INDUCTOR	22MH	D908	8-719-923-60	DIODE MTZJ-T-77-9.1A	
< RESISTOR >				< JACK >			
R1847	1-216-476-11	METAL OXIDE	180 5% 3W	J900	1-750-264-11	JACK	
R1848	1-215-911-11	METAL OXIDE	100 5% 3W	J901	1-779-947-11	TERMINAL BLOCK, S	
R1916	1-216-669-11	METAL CHIP	5.6K 0.5% 1/10W	< COIL >			
R1922	1-215-919-11	METAL	2.2K 5% 3W	L900	1-535-143-61	LEAD, JUMPER (5.0MM)	
R1931	1-216-085-91	RES-CHIP	33K 5% 1/10W	L901	1-535-143-61	LEAD, JUMPER (5.0MM)	
R1960	1-216-833-91	RES-CHIP	10K 5% 1/16W	L902	1-408-603-41	INDUCTOR 10UH	
R1961	1-216-839-91	RES-CHIP	33K 5% 1/16W	L903	1-408-603-41	INDUCTOR 10UH	
R1966	1-216-454-21	METAL OXIDE	390 5% 2W	L904	1-410-119-11	INDUCTOR 1MH	
<b>VM Board Variant Parts KV-32LS35</b>							
< CAPACITOR >				< RESISTOR >			
C1848	1-130-338-51	FILM	0.01UF 5.00% 630V	R901	1-249-427-11	CARBON 6.8K 5% 1/4W	
C1914	1-102-244-91	CERAMIC	220PF 10.00% 500V	R902	1-249-429-11	CARBON 10K 5% 1/4W	
< COIL >				R903	1-249-406-11	CARBON 120 5% 1/4W	
L1959	1-406-677-21	INDUCTOR	10MH	R904	1-249-406-11	CARBON 120 5% 1/4W	
< RESISTOR >				R909	1-247-895-91	CARBON 470K 5% 1/4W	
R1847	1-216-474-21	METAL OXIDE	82 5% 3W	R910	1-247-895-91	CARBON 470K 5% 1/4W	
R1848	1-216-474-21	METAL OXIDE	82 5% 3W	R911	1-249-419-11	CARBON 1.5K 5% 1/4W	
R1916	1-216-665-91	METAL CHIP	3.9K 0.5% 1/10W	L912	1-535-143-61	LEAD, JUMPER (5.0MM)	
R1922	1-215-918-00	METAL	1.5K 5% 3W	R913	1-247-843-11	CARBON 3.3K 5% 1/4W	
R1931	1-216-689-91	RES-CHIP	39K 5% 1/10W	R914	1-249-431-11	CARBON 15K 5% 1/4W	
R1960	1-216-831-91	RES-CHIP	6.8K 5% 1/16W	R915	1-249-406-11	CARBON 120 5% 1/4W	
R1961	1-216-838-91	RES-CHIP	27K 5% 1/16W	R916	1-249-406-11	CARBON 120 5% 1/4W	
R1966	1-215-886-21	METAL FILM	100 5% 2W	R917	1-247-807-31	CARBON 100 5% 1/4W	
<b>*A-1646-242-A H2 Board, Complete</b>				R918	1-247-807-31	CARBON 100 5% 1/4W	
< CAPACITOR >				< SWITCH >			
C906	1-126-960-11	ELECT	1UF 20.00% 50V	S900	1-692-979-11	SWITCH, TACTILE	
C907	1-126-960-11	ELECT	1UF 20.00% 50V	S901	1-692-979-11	SWITCH, TACTILE	
C908	1-102-106-91	CERAMIC	100PF 10.00% 50V	S902	1-692-979-11	SWITCH, TACTILE	
C909	1-102-106-91	CERAMIC	100PF 10.00% 50V				
< CONNECTOR >							
CN906	*1-564-524-11	PLUG, CONNECTOR	9P				

**Note :** The components identified by shading and marked  $\Delta$  are critical for safety. Replace only with the part numbers specified in the parts list.

REF.NO.	PART.NO	DESCRIPTION	REMARK
<b>MISCELLANEOUS</b>			
$\Delta$	1-571-433-21	SWITCH, PUSH (AC POWER)	
$\Delta$	1-765-286-11	CORD, POWER (KV-28LS35B/28LS35E/ KV-32LS35B/32LS35E)	
$\Delta$	1-776-204-12	CORD, POWER (FILTER) (KV-28LS35U/32LS35U)	
	1-424-733-11	COIL, PFC CHOKE 65MMH	
$\Delta$	1-453-308-41	TRANSFORMER ASSY, FLYBACK (NX4521//Z2B4) (KV-28LS35)	
$\Delta$	1-453-308-31	TRANSFORMER ASSY, FLYBACK (NX4521//Z2B4) (KV-32LS35)	
	8-598-535-10	FRONTEND BTF-EF411 (KV-28LS35B)	
	8-598-533-00	FRONTEND BTF-EC411 (KV-28LS35E)	
	8-598-529-00	FRONTEND BTF-EU611 (KV-28LS35U)	
	1-693-555-11	TUNER STEREO (KV-32LS35B)	
	1-693-556-11	TUNER STEREO (KV-32LS35E)	
	1-693-557-11	TUNER STEREO (KV-32LS35U)	
	1-529-417-11	SPEAKER (8CM)	
	1-529-408-11	SPEAKER (4.2x24CM)	
$\Delta$	8-737-786-05	PICTURE TUBE (W66LLX060X) (KV-28LS35)	
$\Delta$	8-735-054-05	PICTURE TUBE (W76LLZ060X) (KV-32LS35)	
	8-451-521-11	DEFLECTION YOKE (Y28RVC3-B) (KV-28LS35)	
	1-451-520-11	DEFLECTION YOKE (Y32RVC3) (KV-32LS35)	
	1-452-896-11	COIL, NA ROTATION (RT-200)	
$\Delta$	1-416-466-21	COIL, DEMAGNETIC (KV-28LS35)	
$\Delta$	1-416-769-11	COIL, DEMAGNETIC (KV-32LS35)	
	8-453-011-11	NECK ASSY, NA299-M	
$\Delta$	1-251-537-22	CAP ASSY, HIGH VOLTAGE (KV-28LS35)	
$\Delta$	1-251-946-11	CAP ASSY, HIGH VOLTAGE (KV-32LS35)	
	1-452-094-00	MAGNET, ROTATABLE DISK; 15MM	
	1-452-032-00	MAGNET, DISK; 10MM	

### ACCESSORIES AND PACKAGING MATERIALS

*4-029-168-01	BAG, PROTECTION
*4-205-939-01	INDIVIDUAL CARTON (KV-28LS35)
*4-205-934-01	INDIVIDUAL CARTON (KV-32LS35)
4-206-161-61	INSTRUCTION MANUAL (KV-28LS35B) (ENGLISH)
4-206-161-21	INSTRUCTION MANUAL (KV-28LS35B) (GERMAN/FRENCH/ITALIAN/DUTCH)
4-206-161-11	INSTRUCTION MANUAL (KV-28LS35E) (GERMAN/GREEK)
4-206-161-41	INSTRUCTION MANUAL (KV-28LS35E) (ITALIAN)
4-206-161-51	INSTRUCTION MANUAL (KV-28LS35E) (DANISH/SPANISH/NORWEGIAN/PORTUGUESE/ SWEDISH/FINNISH)
4-206-161-31	INSTRUCTION MANUAL (KV-28LS35U) (ENGLISH)
4-206-095-61	INSTRUCTION MANUAL (KV-32LS35B) (ENGLISH)
4-206-095-21	INSTRUCTION MANUAL (KV-32LS35B)

REF.NO.	PART.NO	DESCRIPTION	REMARK
		(GERMAN/FRENCH/ITALIAN/DUTCH)	
4-206-095-11		INSTRUCTION MANUAL (KV-32LS35E)	
		(GERMAN/GREEK)	
4-206-095-41		INSTRUCTION MANUAL (KV-32LS35E)	
		(ITALIAN)	
4-206-095-51		INSTRUCTION MANUAL (KV-32LS35E)	
		(DANISH/SPANISH/NORWEGIAN/PORTUGUESE/ SWEDISH/FINNISH)	
4-206-095-31		INSTRUCTION MANUAL (KV-32LS35U)	
		(ENGLISH)	
<b>REMOTE COMMANDER</b>			
	1-476-702-11	REMOTE COMMANDER (RM-932)	

# TRACE

A new TV Repair Assistance Tool that combines ease of use and powerful PC software tools to allow you to save valuable time during many TV repairs.



The TRACE interface connects to the PC's serial port. It provides connection to the TV's I<sup>2</sup>C bus and can be provided with an InfraRed transmitter (optional).

The interface is powered by a standard 9 V PP3 battery for portable use, and can also be powered by an external 9V/25mA DC power supply.


The TRACE software that is supplied with the interface allows you to:

- Read, restore and compare NVM contents via the I<sup>2</sup>C bus
- Acknowledge check of all I<sup>2</sup>C devices in the TV set
- Read Error Codes (emulation of the Error Reader tool)

With the optional IR Add-on kit, the following features can be added:

- Remote Commander emulation
- User programmable Functional Check through Infrared
- Fast and documented Test Mode setting of all Sony TV chassis

Additional features such as Adjustments and Troubleshooting are available in chassis-dependent software modules. Please contact your local Sony Service organisation for the latest information.

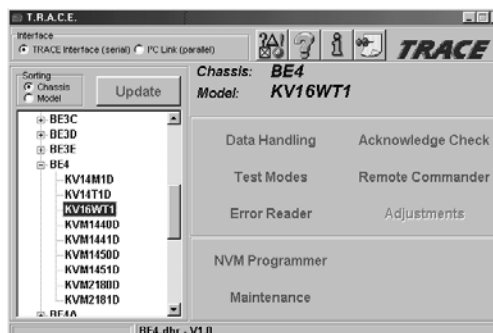

*Note: For workshops already using the existing I<sup>2</sup>C Link parallel port interface (9-948-320-30), this software can be used as well, replacing the TV Data Handling software (9-948-340-50), but Error Reader and IR functions can only be accessed with the TRACE interface.*

Partnumbers: TRACE Starter Kit (TRACE interface + software): 9-948-320-70  
TRACE Software (for users of the I<sup>2</sup>C Link interface): 9-948-340-80  
TRACE IR Add-on (IR interface + Remote Commander software): 9-948-320-80

PC requirements: IBM-compatible PC with operating system Windows95, Windows98, or WindowsNT\*.

\* WindowsNT only supported with TRACE interface

**Sony Corporation**  
**Sony UK**  
**Service Promotions Dept.**

**English**  
01EP7140-1  
Printed in U.K.  
© 2001.5