

KP-46V15 / 46V16

KP-53V15 / 53V16 / 61V15

RM-Y115


SERVICE MANUAL

US Model

KP-46V15 Chassis No. SCC-F19M-A
 KP-46V16 Chassis No. SCC-F19R-A
 KP-53V15 Chassis No. SCC-F19N-A
 KP-53V16 Chassis No. SCC-F19P-A
 KP-61V15 Chassis No. SCC-F19K-A

Canadian Model

KP-46V15 Chassis No. SCC-F23F-A
 KP-61V15 Chassis No. SCC-F23D-A

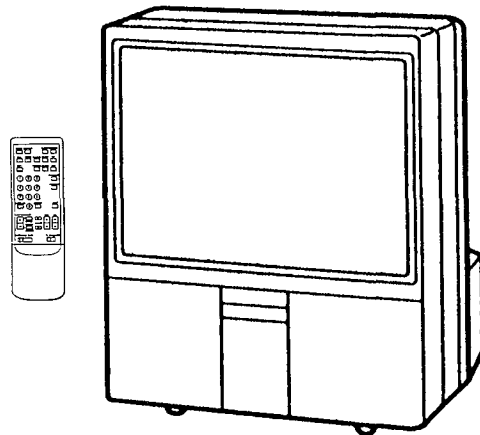

AP CHASSIS



996494401

MODELS OF THE SAME SERIES

KP-46V15/46V16	KP-41EXR96
KP-53V15/53V16/61V15	KPR-41EXR95
KP-46XBR25/53XBR25/61XBR28	KPR-46XBR15/53XBR15

SPECIFICATIONS

Structure	Screen and projector, rear projection type	Projected picture size	46 (KP-46V15/46V16)
Projection system	3 picture tubes, 3 lenses, horizontal in-line system	(in inches, measured diagonally)	53 (KP-53V15/53V16)
Picture tube	7 inch high-brightness monochrome tubes (5.5 raster size), with optical coupling and liquid cooling system	Screen brightness (cd/m ²)	61 (KP-61V15)
Projection lenses	High performance, larger-diameter hybrid lens F 1.0	Television system	1,600 (KP-46V15/46V16)
Screen material	Plastic lenticular, Plastic fresnel	Channel coverage	1,250 (KP-53V15/53V16)
		Antenna	900 (KP-61V15)
			American TV standards
			VHF: 2-13
			UHF: 14-69
			CABLE TV: 1-125
			75-ohm external antenna terminal for VHF/UHF

- Continued on next page -

COLOR REAR VIDEO PROJECTOR

SONY®



996494401

<p>Input jacks</p> <p>VIDEO IN 1 S VIDEO IN (4-pin mini DIN) Y: 1 Vp-p, 75-ohms unbalanced, sync negative C: 0.286 Vp-p (Burst signal) 75-ohms Video (phono jacks): 1 Vp-p, 75-ohms unbalanced, sync negative Audio (phono jacks): 500 mVrms (100% modulation) Impedance: 47 kilo-ohms</p> <p>VIDEO IN 2 and 3 Video (phono jacks): 1 Vp-p, 75-ohms unbalanced, sync negative Audio (phono jacks): 500 mVrms (100% modulation) Impedance: 47 kilo-ohms</p> <p>Output jacks</p> <p>MONITOR OUT S VIDEO MONITOR OUT (4-pin mini DIN) Y: 1 Vp-p, 75-ohms unbalanced, sync negative Video (phono jacks): 1Vp-p, 75-ohms unbalanced, sync negative Audio (phono jacks): 500mVrms (100% modulation) Impedance: 10 kilo-ohms</p> <p>AUDIO (VAR) OUT (phono jacks) More than 900mVrms (100% modulation) at the maximum volume setting (variable) Impedance: 5 kilo-ohms</p> <p>AUDIO OUT (phono jacks) 900mVrms (100% modulation) Impedance: 5 kilo-ohms</p>	<p>Speaker</p> <p>Two-way coaxial speaker system Woofer 130 mm (5 inches) diameter Tweeter 35 mm (1.4 inches) diameter 12W×2</p> <p>Speaker output CENTER SPEAKER input 16Ω NORM. 30W MAX 50W</p> <p>Power requirements 120 V AC, 60 Hz Power consumption 310W (max) 7W (standby mode)</p> <p>Dimensions (w/h/d) 1,029×1,287×543 mm (40⁵/₈×50³/₄×21¹/₂ inches) (KP-46V15/46V16) 1,164×1,336×651 mm (45⁷/₈×52⁵/₈×25³/₄ inches) (KP-53V15/53V16) 1,337×1,490×780 mm (52⁵/₈×58⁵/₈×30¹¹/₁₆ inches) (KP-61V15)</p> <p>Weight 90 kg (198 lb 7 oz) (KP-46V15/46V16) 92 kg (202 lb 7 oz) (KP-53V15/53V16) 130 kg (286 lb 10 oz) (KP-61V15)</p> <p>Supplied accessories Remote Commander RM-Y115 (1) with 2 size AA (R6) EVEREADY batteries</p> <p>Optional accessories U/V mixer EAC-66 Connecting cable RK-74A VMC-810S/820S YC-15V/30V VCR Tray SU-PJT1</p>
--	---

Design and specifications are subject to change without notice.

(CAUTION)

SHORT CIRCUIT THE ANODE OF THE PICTURE TUBE AND THE ANODE CAP TO THE METAL CHASSIS, CRT SHIELD, OR CARBON PAINTED ON THE CRT, AFTER REMOVING THE ANODE.

WARNING!!

AN ISOLATION TRANSFORMER SHOULD BE USED DURING ANY SERVICE TO AVOID POSSIBLE SHOCK HAZARD, BECAUSE OF LIVE CHASSIS. THE CHASSIS OF THIS RECEIVER IS DIRECTLY CONNECTED TO THE AC POWER LINE.

SAFETY-RELATED COMPONENT WARNING !!

COMPONENTS IDENTIFIED BY SHADING AND MARK Δ ON THE SCHEMATIC DIAGRAMS, EXPLODED VIEWS AND IN THE PARTS LIST ARE CRITICAL TO SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY. CIRCUIT ADJUSTMENTS THAT ARE CRITICAL TO SAFE OPERATION ARE IDENTIFIED IN THIS MANUAL. FOLLOW THESE PROCEDURES WHENEVER CRITICAL COMPONENTS ARE REPLACED OR IMPROPER OPERATION IS SUSPECTED.

(ATTENTION)

APRES AVOIR DECONNECTE LE CAP DE L'ANODE, COURT-CIRCUITER L'ANODE DU TUBE CATHODIQUE ET CELUI DE L'ANODE DU CAP AU CHASSIS METALLIQUE DE L'APPAREIL, OU AU COUCHE DE CARBONE PEINTE SUR LE TUBE CATHODIQUE OU AU BLINDAGE DU TUBE CATHODIQUE.

ATTENTION!!

AFIN D'EVITER TOUT RISQUE D'ELECTROCUTION PROVENANT D'UN CHASSIS SOUS TENSION, UN TRANSFORMATEUR D'ISOLEMENT DOIT ETRE UTILISE LORS DE TOUT DEPANNAGE. LE CHASSIS DE CE RECEPTEUR EST DIRECTEMENT RACCORDE A L'ALIMENTATION SECTEUR.


ATTENTION AUX COMPOSANTS RELATIFS A LA SECURITE!!

LES COMPOSANTS IDENTIFIES PAR UNE TRAME ET PAR UNE MAPQUE Δ SUR LES SCHEMAS DE PRINCIPE, LES VUES EXPLOSEES ET LES LISTES DE PIECES CONT D'UNE IMPORTANCE CRITIQUE POUR LA SECURITE DU FONCTIONNEMENT. NE LES REMPLACER QUE PAR DES COMPOSANTS SONY DONT LE NUMERO DE PIECE EST INDIQUE DANS LE PRESENT MANUEL OU DANS DES SUPPLEMENTS PUBLIES PAR SONY. LES REGLAGES DE CIRCUIT DONT L'IMPORTANCE EST CRITIQUE POUR LA SECURITE DU FONCTIONNEMENT SONT IDENTIFIES DANS LE PRESENT MANUEL. SUIVRE CES PROCEDURES LORS DE CHAQUE REMPLACEMENT DE COMPOSANTS CRITIQUES, OU LORSQU'UN MAUVAIS FONCTIONNEMENT EST SUSPECTE.

SAFETY CHECK-OUT (US Model Only)

After correcting the original service problem, perform the following safety checks before releasing the set to the customer

1. Check the area of your repair for unsoldered or poorly-soldered connections. Check the entire board surface for solder splashes and bridges.
2. Check the interboard wiring to ensure that no wires are "pinched" or contact high-wattage resistors.
3. Check that all control knobs, shields, covers, ground straps, and mounting hardware have been replaced. Be absolutely certain that you have replaced all the insulators.
4. Look for unauthorized replacement parts, particularly transistors, that were installed during a previous repair. Point them out to the customer and recommend their replacement.
5. Look for parts which, though functioning, show obvious signs of deterioration. Point them out to the customer and recommend their replacement.
6. Check the line cord for cracks and abrasion. Recommend the replacement of any such line cord to the customer.
7. Check the condition of the monopole antenna (if any).
 Make sure the end is not broken off, and has the plastic cap on it. Point out the danger of impalement on a broken antenna to the customer, and recommend the antenna's replacement.
8. Check the B+ and HV to see they are at the values specified. Make sure your instruments are accurate, be suspicious of your HV meter if sets always have low HV.
9. Check the antenna terminals, metal trim, "metallized" knobs, screws, and all other exposed metal parts for AC leakage. Check leakage as described below.

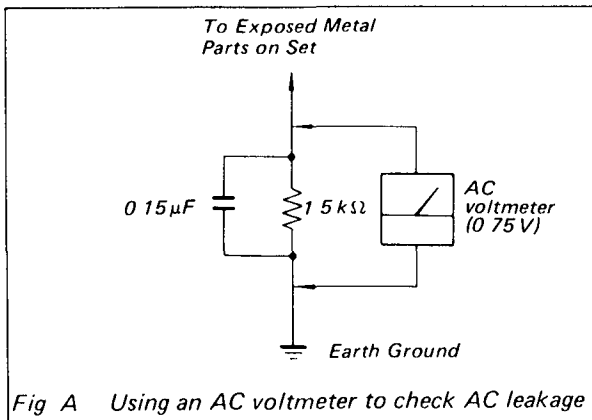

LEAKAGE TEST

The AC leakage from any exposed metal part to earth ground and from all exposed metal parts to any exposed metal part having a return to chassis, must not exceed 0.5 mA (500 microamperes). Leakage current can be measured by any one of three methods:

1. A commercial leakage tester, such as the Simpson 229 or RCA WT-540A. Follow the manufacturers' instructions to use these instruments.
2. A battery-operated AC milliammeter. The Data Precision 245 digital multimeter is suitable for this job.
3. Measuring the voltage drop across a resistor by means of a VOM or battery-operated AC voltmeter. The "limit" indication is 0.75 V, so analog meters must have an accurate low-voltage scale. The Simpson 250 and Sanwa SH-63Trd are examples of a passive VOM that is suitable. Nearly all battery operated digital multimeters that have a 2V AC range are suitable. (See Fig A)

HOW TO FIND A GOOD EARTH GROUND

A cold-water pipe is guaranteed earth ground, the cover-plate retaining screw on most AC outlet boxes is also at earth ground. If the retaining screw is to be used as your earth-ground, verify that it is at ground by measuring the resistance between it and a cold-water pipe with an ohmmeter. The reading should be zero ohms. If a cold-water pipe is not accessible, connect a 60-100 watt trouble light (not a neon lamp) between the hot side of the receptacle and the retaining screw. Try both slots, if necessary, to locate the hot side of the line, the lamp should light at normal brilliance if the screw is at ground potential. (See Fig. B)

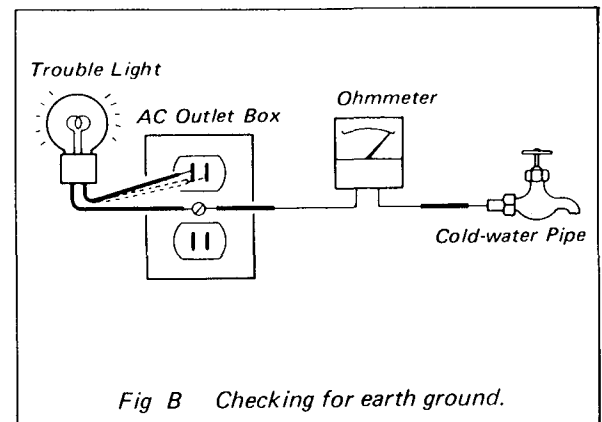


TABLE OF CONTENTS

<u>Section</u>	<u>Title</u>	<u>Page</u>	<u>Section</u>	<u>Title</u>	<u>Page</u>
1. GENERAL					
1-1	Unpacking and Viewing Area	5	3-6	Green Picture Adjustments	46
1-2	Locating Controls and Connectors	5	3-7	Green and Red Registration Adjustments	49
1-3	Using the On-Screen Menus	8	3-8	Green and Blue Registration Adjustments	50
1-4	Adjusting Color Registration (CONVERGENCE)	10	3-9	Registration Check	51
1-5	Setting CABLE ON or OFF	11	3-10	White Balance Adjustments	51
1-6	Presetting TV Channels	12	4. SAFETY RELATED ADJUSTMENTS		
1-7	Watching TV Programs	15	4-1	Safety Related Adjustments	53
1-8	Using Closed Caption	16	5. CIRCUIT ADJUSTMENTS		
1-9	Using Convenient Features	16	5-1	Electrical Adjustment by Remote Commander	57
1-10	Selecting a Picture and Sound Mode	17	5-2	A Board Adjustments	59
1-11	Watching Two Pictures at Once (PIP)	18	5-3	DS Board Adjustments	62
1-12	Adjusting the Projection TV	20	5-4	P3 Board Adjustments	63
1-13	Customizing the Screen Display	24	6. DIAGRAMS		
1-14	Using Time-Activated Functions	26	6-1	Block Diagram (1)	66
1-15	Setting FAVORITE CHANNEL	30	6-2	Block Diagram (2)	69
1-16	Using the Pre-Programmed Remoto Commander	31	6-3	Block Diagram (3)	73
1-17	Troubleshooting	34	6-4	Frame Schematic Diagram	77
2. DISASSEMBLY			6-5	Circuit Boards Location	81
2-1	H1 and H2 Boards Removal	35	6-6	Schematic Diagrams and Printed Wiring Boards	
2-2	D Board Removal	35	(1)	Schematic Diagrams of G, H1, H2, and DS Boards	82
2-3-1	Diffusion Plate Removal (KP-46V15 (US/CND)/46V16 only)	36	(2)	Schematic Diagram of A Board	91
2-3-2	Diffusion Plate Removal (KP-53V15/53V16/61V15 (US/CND) only)	36	(3)	Schematic Diagrams of U, UT Boards	95
2-4	Back Cover Removal	37	(4)	Schematic Diagrams of E1, E2 Boards	103
2-5	Main Chassis Assy Removal	37	(5)	Schematic Diagram of D Board	107
2-6	Service Positon	38	(6)	Schematic Diagrams of M, N Boards	115
2-7	P3 Board Removal	40	(7)	Schematic Diagrams of X2, Y2 Boards	119
2-8	Main Connector Panel Removal	40	(8)	Schematic Diagrams of S, V Boards	127
2-9	U Board Removal	41	(9)	Schematic Diagram of P1 Board	130
2-10	V Board Removal	41	(10)	Schematic Diagram of P3 Board	133
2-11	N Bracket Removal	41	(11)	Schematic Diagrams of CB, CG, CR, ZB, ZG and ZR Boards	136
2-12	G Board Removal	42	6-7	Semiconductors	142
2-13	High-Voltage Cable Installation and Removal	42	7. EXPLODED VIEWS		
2-14-1	Connector Cable	43	7-1-1	Screen Frame and Control Panel (KP-46V15 (US/CND)/46V16)	145
2-14-2	Connector Cable	43	7-1-2	Screen Frame and Control Panel (KP-53V15 /53V16/61V15 (US/CND))	146
2-15	Chassis Assy Removal	44	7-2	Cabinet	147
2-16	Picture Tube Removal	44	7-3	Chassis	148
3. SET-UP ADJUSTMENTS			7-4	Picture Tube	149
3-1	Focus Lens Adjustments	45	8. ELECTRICAL PARTS LIST		
3-2	Deflection Yoke Position Adjustments	45	150		
3-3	2-Pole Magnet Adjustment	46			
3-4	4-Pole Magnet Adjustment	46			
3-5	De-Focus Adjustment (Blue)	46			

The operating instructions mentioned here are partial abstracts from the Operating Instruction Manual. The page numbers of the Operating Instruction Manual remain as in the manual.

SECTION 1 GENERAL

1-1. UNPACKING AND VIEWING AREA

- 1** Carefully follow the instructions on the outside of the packing carton to unpack the projection TV.

Notes

- The supplied accessories are packed in the bottom of the carton. Be sure not to throw them away.
- Keep the original carton and packing materials to safely transport the projection TV in the future.

- 2** Check to make sure that the following is included:


Universal Remote Commander
 RM-Y112A (1) (for KP-41EXR96)
 RM-Y1115 (1) (for other models)
 with 2 size AA (R6) EVEREADY batteries

If the Remote Commander is missing, contact your dealer.

- 3** Place the projection TV in a cool, dry place where the ventilation openings at the sides are not blocked.

- 4** Plug the projection TV power cord into an AC 120 volt power outlet.


For further precautions, see p. 2.

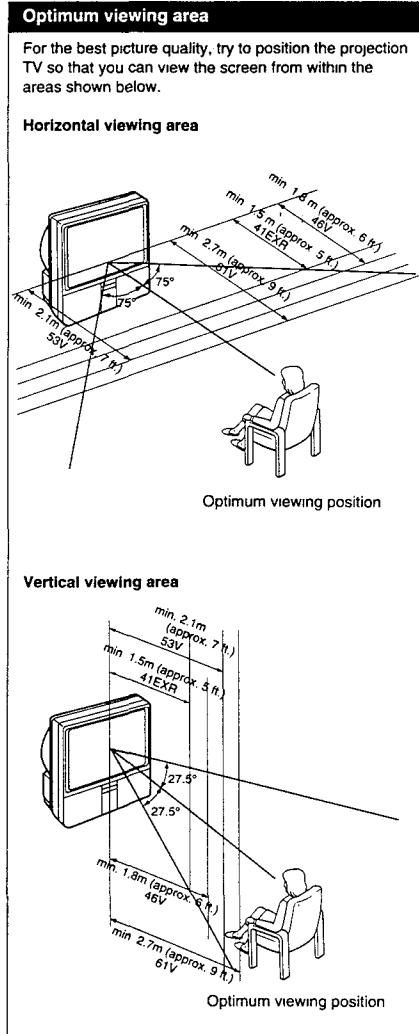

1-2. LOCATING CONTROLS AND CONNECTORS


For details, see the pages indicated by the numbered black circles ●

Front

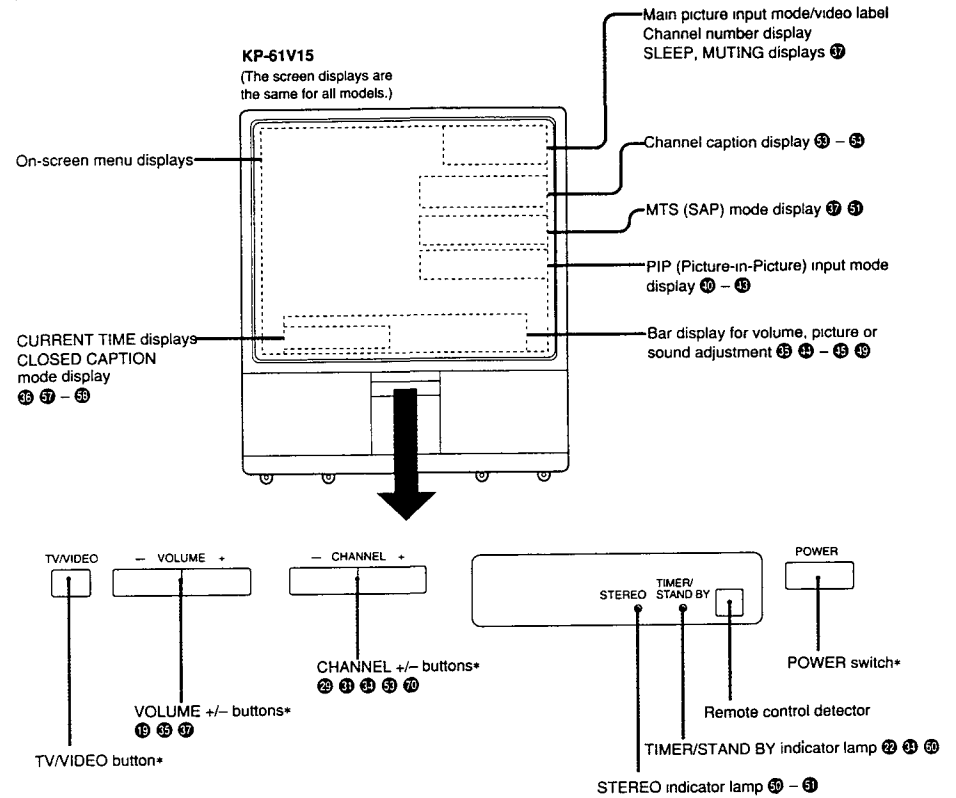


* Buttons with the same function are also located on the Remote Commander (p. 10).


Front inner panel

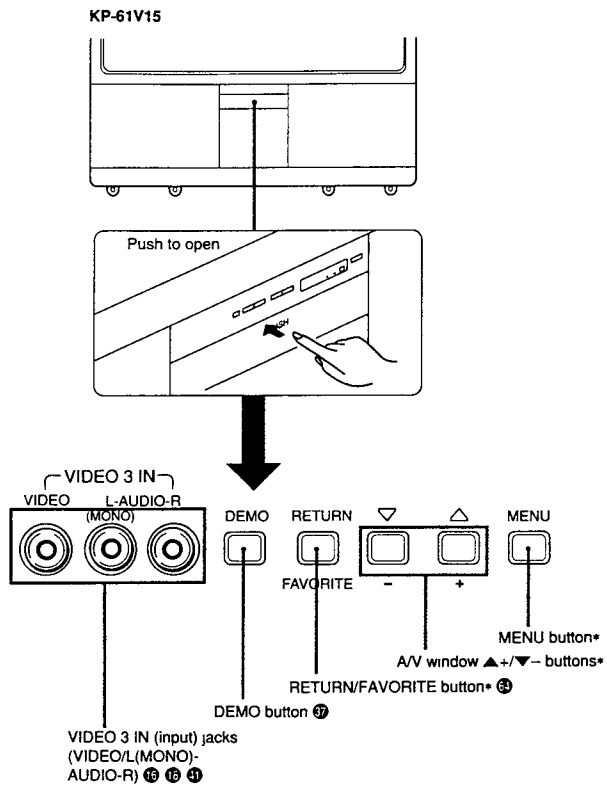

Rear

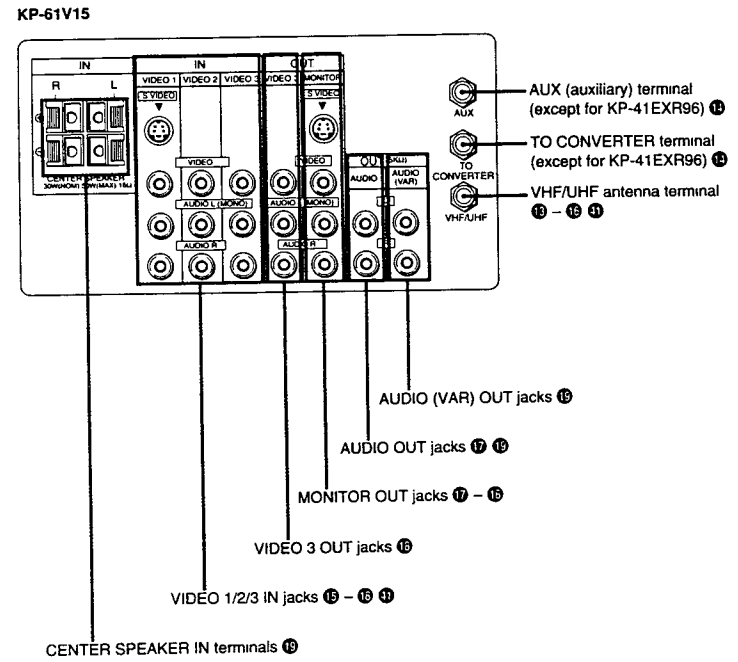

Remote Commander (with the video control cover closed)

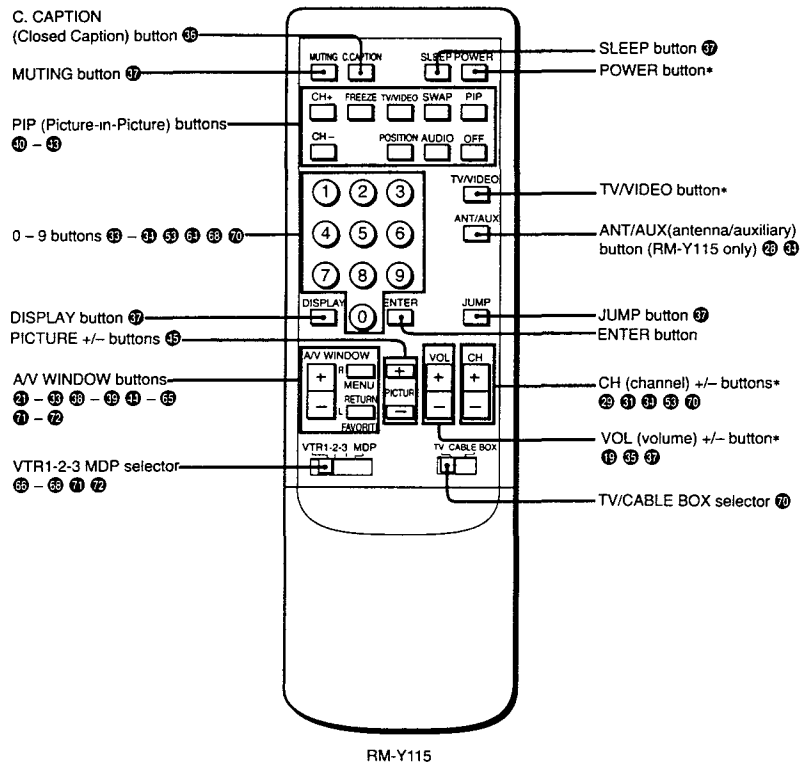



RM-Y115

RM-Y112A: KP-41EXR96
 RM-Y115: KP-46V15
 KP-46V16
 KP-53V15
 KP-53V16
 KP-61V15

* Buttons with the same function are also located on the projection TV (p. 7).

Note
 If the TV/CABLE BOX selector is set to CABLE BOX, the Remote Commander is able to control a connected cable box, not the projection TV (p. 70). Set the selector to TV to control the projection TV with the Remote Commander.

Remote Commander (with the video control cover open)

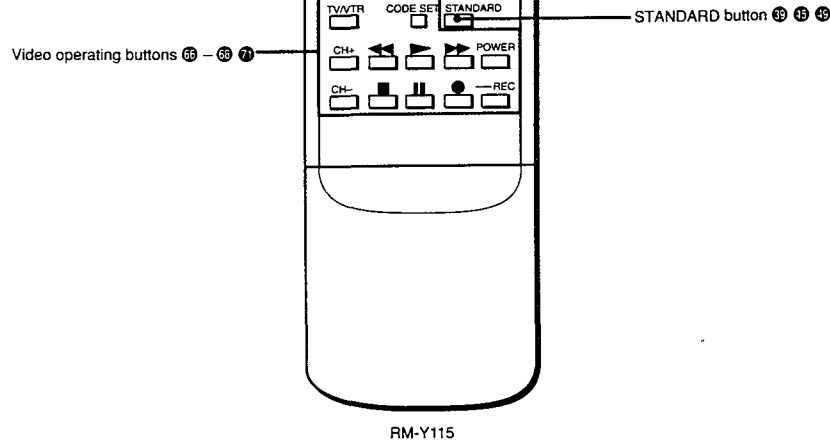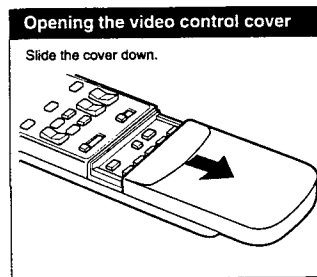


RM-Y115


1-3. USING THE ON-SCREEN MENUS

The following flow chart shows the different levels of on-screen menus that you can use to make various adjustments and settings. See the indicated pages for instructions on using each feature.


For picture and sound quality adjustment

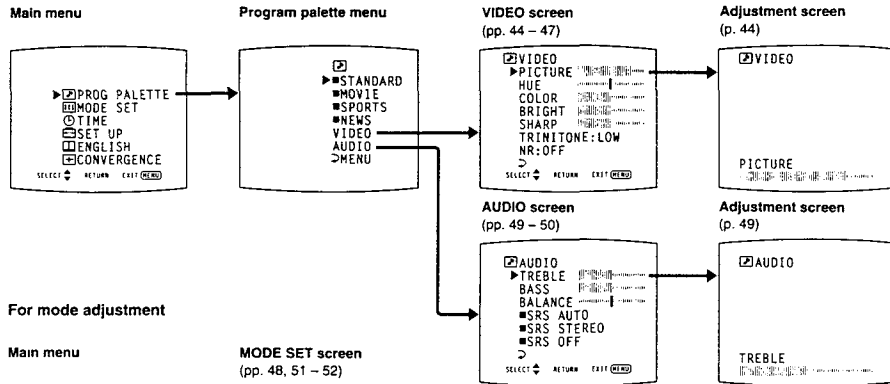

For mode adjustment

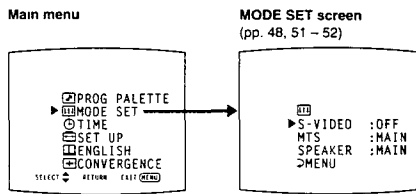


For time-related settings

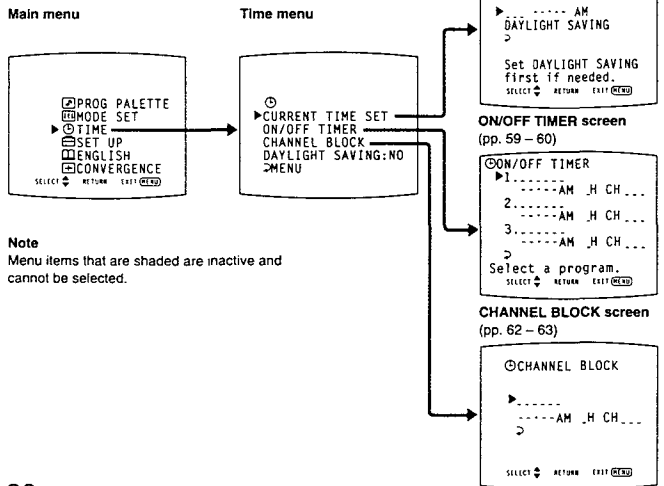


Note
 Menu items that are shaded are inactive and cannot be selected.

For presetting and other functions

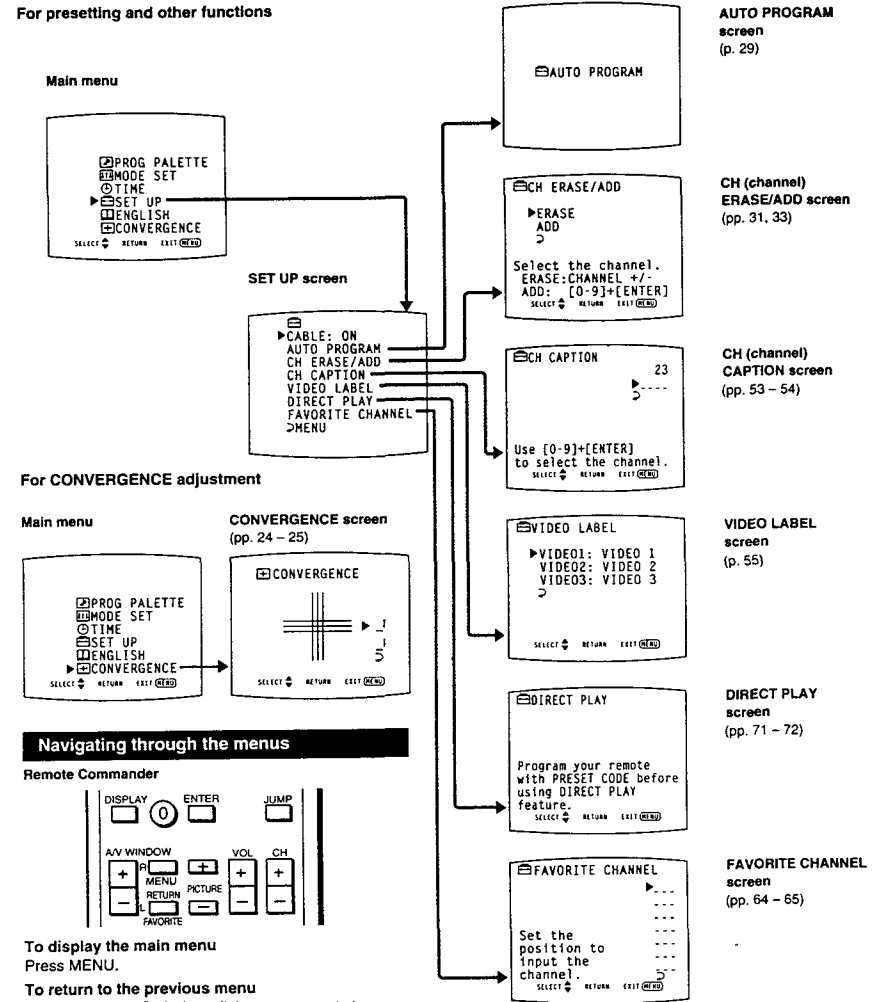


For CONVERGENCE adjustment

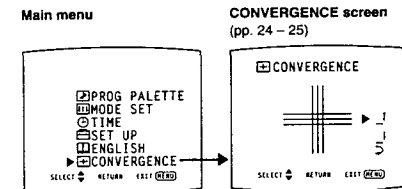

Navigating through the menus

Remote Commander

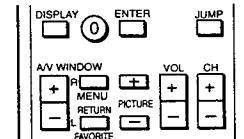


To display the main menu
 Press MENU.

To return to the previous menu
 Press A/V WINDOW +/- until the cursor points to " >MENU."
 Then press RETURN.

To return to the main menu
 Repeat the above, until you reach the main menu.

To return to the normal screen
 Press MENU.

Note
 The menus disappear automatically, if you do not press a button within 90 seconds.

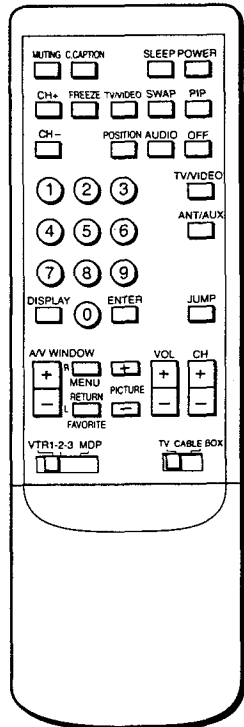


RM-Y115


Changing the menu language

The menu language is factory-set to ENGLISH. Follow these instructions to change the menu language to Spanish or French, or back to English.



- 1 Press POWER to turn on the projection TV. *TIMER/STAND BY indicator blinks until the picture appears.*

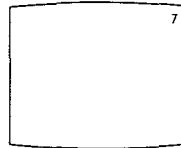


- 2 Press MENU. *The main menu appears.*

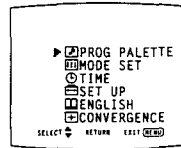

- 3 Press AV WINDOW +/- until the cursor points to "ENGLISH." Then press RETURN. *The language display turns red.*

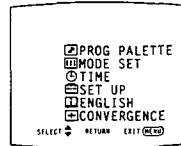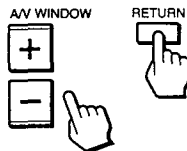


- 4 Press AV WINDOW +/- to select the language. *Each time you press AV WINDOW +/-, the "ESPAÑOL," "FRANÇAIS" and "ENGLISH" menus appear.*



Note
Certain parts of the "ESPAÑOL" and "FRANÇAIS" menus remain in English.

- 5 Press RETURN. *The language is selected.*

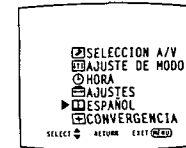


Spanish menu

To return to the normal screen. Press MENU.

Notes concerning menus

- During PIP (Picture-in-Picture) mode, the on-screen menus may overlap the window picture.
- The menus disappear automatically, if you do not press a button within 90 seconds.

1-4. ADJUSTING COLOR REGISTRATION (CONVERGENCE)

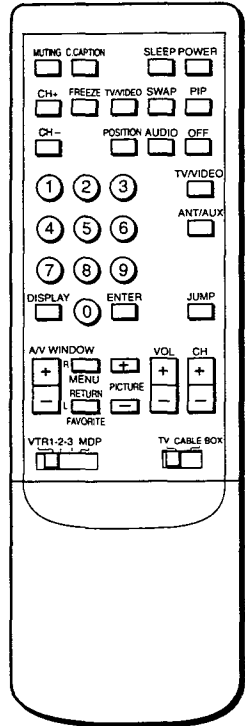



RM-Y115

In a projection TV, the projection tube image appears on the screen in three color layers (red, green and blue). If these layers are not in proper registration, the color is poor and the picture blurs. To correct this, perform the CONVERGENCE adjustment.


- 1** Press MENU.
 The main menu appears.




- 2** Press A/V WINDOW +/- until the cursor points to "CONVERGENCE."

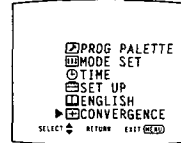

- 3** Press RETURN.
 The CONVERGENCE screen and the colored adjustment lines appear.

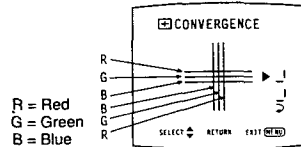


- 4** Press A/V WINDOW +/- until the cursor points to the symbol representing the line you want to adjust (see the key below).

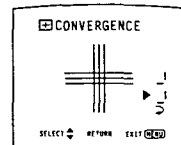



Adjustment line symbols key

- | (red vertical: left/right adjustment)
- (red horizontal: up/down adjustment)
- | (blue vertical: left/right adjustment)
- (blue horizontal: up/down adjustment)

- 5** Press RETURN.
 The adjustment line is selected.

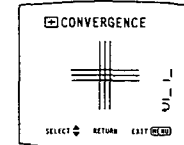


- 6** Press A/V WINDOW +/- until the line converges with the center green line.
 Then press RETURN.

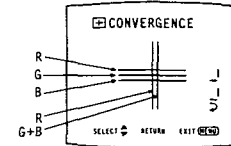

To move up	Press A/V WINDOW +.
To move right	
To move down	Press A/V WINDOW -.
To move left	

- 7** Repeat steps 4 - 6 to adjust the other lines, until all the lines have overlapped to form a white cross.

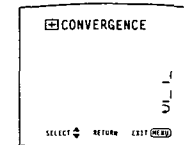


To return to the previous menu
 Press A/V WINDOW +/- until the cursor points to "MENU."
 Then press RETURN.

To return to the main menu
 Repeat the above, until you reach the main menu.

To return to the normal screen.
 Press MENU.

1-5. SETTING CABLE ON OR OFF

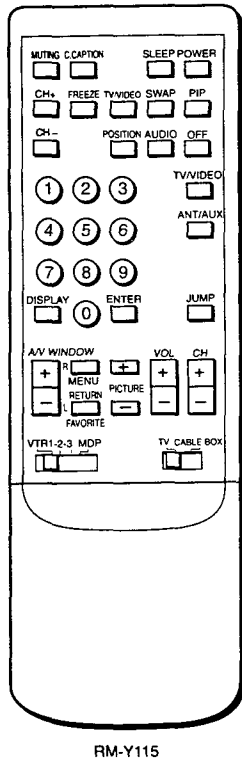


RM-Y115



If you have cable connected to the projection TV, follow the steps below to set the cable connection on or off. Set CABLE OFF to preset or watch VHF or UHF channels, and set CABLE ON to preset or watch cable TV channels.

Note
If the projection TV is in video mode, the "CABLE" display is shaded and cannot be selected. Press TV/VIDEO to change to TV mode.


1 Press MENU.
The main menu appears.

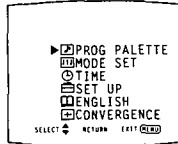


2 Press AV WINDOW +/- until the cursor points to "SET UP"

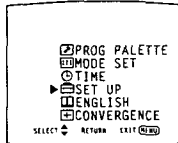


3 Press RETURN.
The set up menu appears, and the cursor points to "CABLE."

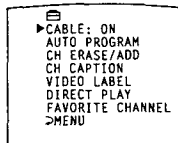


4 Press RETURN again.
The mode display turns red.

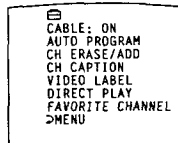

5 Press AV WINDOW +/- to select "ON" or "OFF"



6 Press RETURN.
The setting is complete.

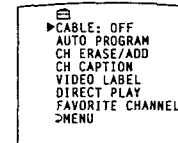

To return to the previous menu

Press AV WINDOW +/- until the cursor points to " > MENU." Then press RETURN.

To return to the main menu

Repeat the above, until you reach the main menu.

To return to the normal screen.

Press MENU.

Cable TV channel chart*

Cable TV systems use letters or numbers to designate channels. To tune in a channel, refer to the chart below.


Number on this TV	Corresponding CATV channel
1	A-8
5	A-7
6	A-6
14	A
15	B
16	C
17	D
18	E
19	F
20	G
21	H
22	I
23	J
24	K
25	L
26	M
27	N
28	O
29	P
30	Q
31	R
32	S
33	T
34	U
35	V
36	W
37	W+1
38	W+2
39	W+3
...	...
93	W+57
94	W+58
95	A-5
96	A-4
97	A-3
98	A-2
99	A-1
100	W+59
101	W+60
102	W+61
...	...
123	W+82
124	W+83
125	W+84

Check with your local cable TV company for more complete information on the available channels.

* The designation of the cable TV channels conforms to the EIA/NCTA recommendation.

1-6. PRESETTING TV CHANNELS

By presetting TV channels to the projection TV, you can select channels by pressing CH (CHANNEL) +/-
(You can select VHF channels 2 - 13 without presetting.)

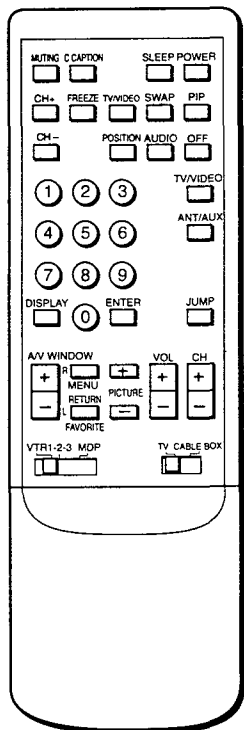

RM-Y115


Presetting all receivable channels automatically

Follow these instructions to preset all the receivable VHF, UHF or cable TV channels to the projection TV.


Notes

- If the projection TV is in video mode, the "AUTO PROGRAM" display is shaded and cannot be selected. Press TV/VIDEO to change to TV mode.
- Perform auto programming during the day rather than late at night, when some channels may not be broadcasting.

1 Set the cable connection on or off (pp. 26 - 27) to select the type of channel you want to preset, VHF/UHF or cable TV.



Press ANT/AUX to select the type of channel you want to preset, VHF/UHF/regular cable TV, or pay cable TV connected to the AUX (auxiliary) terminal (except for KP-41EXR96).



2 Press MENU.
The main menu appears.



3 Press A/V WINDOW +/- until the cursor points to "SET UP"



4 Press RETURN.
The set up menu appears.



5 Press A/V WINDOW +/- until the cursor points to "AUTO PROGRAM."



6 Press RETURN.



"AUTO PROGRAM" appears on the screen and receivable channels (other than the channels already preset) are preset in numerical sequence. The channels previously preset will not remain in the projection TV's memory. When no more channels are found, auto programming stops and the screen returns automatically to the set up menu.

7 Press CH +/- to check or view the preset channels.



Receivable channels for this projection TV


VHF: 2 - 13
UHF: 14 - 69
Cable: 1 - 125

To select TV channels without presetting
Press the 0 - 9 buttons and ENTER.

To return to the previous menu
Press A/V WINDOW +/- until the cursor points to "> MENU."
Then press RETURN.

To return to the main menu
Repeat the above, until you reach the main menu.

To return to the normal screen.
Press MENU.

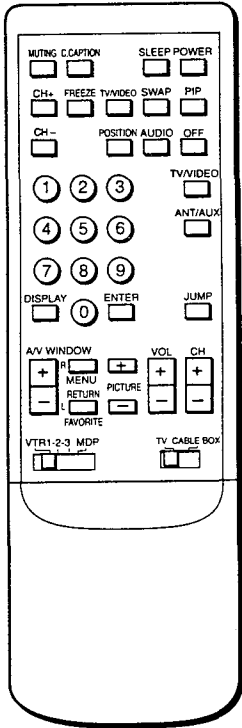


RM-Y115



Erasing TV channels

Follow these instructions to erase unnecessary TV channels, so that when you press CH +/-, the channel(s) are skipped.


- 1 Press MENU
The main menu appears.

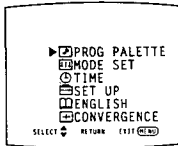



- 2 Press AV WINDOW +/- until the cursor points to "SET UP"

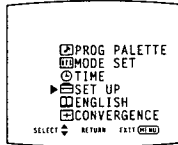


- 3 Press RETURN
The set up menu appears.

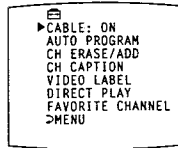



- 4 Press AV WINDOW +/- until the cursor points to "CH ERASE/ADD."

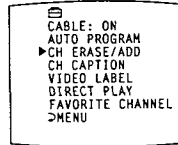


- 5 Press RETURN.
The CH ERASE/ADD screen appears, and the cursor points to "ERASE."

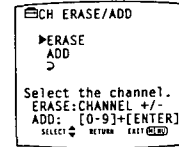

- 6 Press CH +/- to select the channel you want to erase.
The channel display appears.

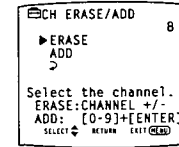

- 7 Press RETURN.
A "-" sign appears in front of the channel number display, indicating that the channel is erased; then the CH ERASE/ADD screen automatically reappears.

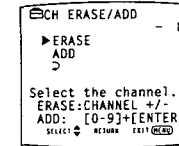


To erase another channel
Repeat steps 6 - 7.

To return to the previous menu
Press A/V WINDOW +/- until the cursor points to " > MENU." Then press RETURN.

To return to the main menu
Repeat the above, until you reach the main menu.

To return to the normal screen
Press MENU.

Note
If you erase a VHF or UHF channel, the same number cable TV channel is also erased (and vice versa).

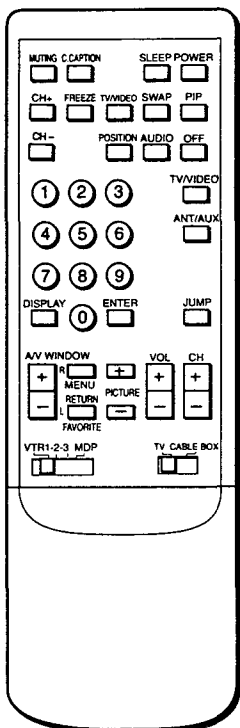


RM-Y115


Adding TV channels

Follow these instructions to add TV channels one by one to the selection memory, or to replace a TV channel you previously erased (pp. 30 - 31).


1 Press MENU
 The main menu appears.

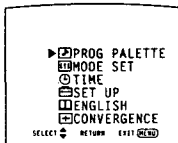



2 Press AV WINDOW +/- until the cursor points to "SET UP"



3 Press RETURN.
 The set up menu appears.

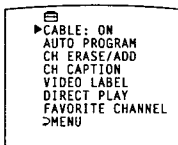



4 Press AV WINDOW +/- until the cursor points to "CH ERASE/ADD."

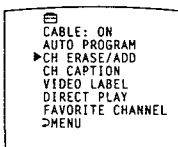



5 Press RETURN.
 The CH ERASE/ADD screen appears.




6 Press AV WINDOW +/- until the cursor points to "ADD."

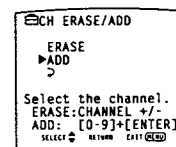

7 Press 0 - 9 and ENTER to select the channel you want to add.
 The channel display appears.

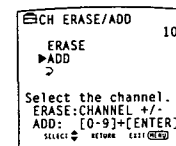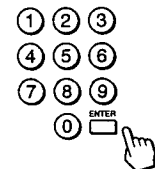

8 Press RETURN
 A "+" sign appears in front of the channel number display, indicating that the channel is added; then the CH ERASE/ADD screen automatically reappears.

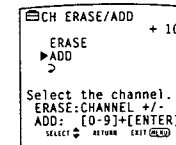

To add another channel
 Repeat steps 7 - 8.


To return to the previous menu
 Press AV WINDOW +/- until the cursor points to " > MENU." Then press RETURN.

To return to the main menu
 Repeat the above, until you reach the main menu.

To return to the normal screen
 Press MENU.

Note
 If you add a VHF or UHF channel, the same number cable TV channel is also added (and vice versa).


1-7. WATCHING TV PROGRAMS

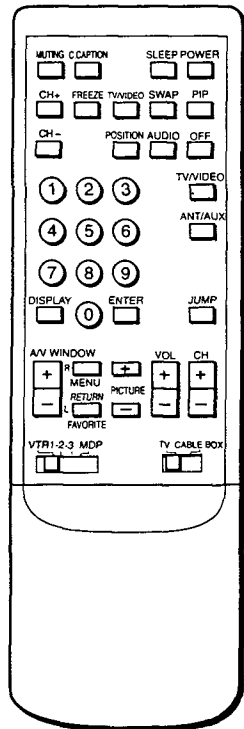

RM-Y115

Make sure that the TV/CABLE BOX selector on the Remote Commander is set to TV, in order to control the projection TV with the Remote Commander.

- 1** Press POWER to turn on the projection TV.
TIMER/STAND BY indicator blinks until the picture appears.

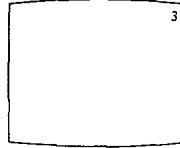

- 2** Set the cable connection on or off (pp. 26 – 27) to select the type of channel you want to watch, VHF/UHF or cable TV.




To watch VHF or UHF channels



To watch cable TV channels

Press ANT/AUX to select the type of channel you want to preset, VHF/UHF/regular cable TV, or pay cable TV connected to the AUX (auxiliary) terminal (except for KP-41EXR96).




To preset VHF, UHF or regular cable TV channels




To preset pay cable TV channels


- 3** Select a channel in one of the following two ways:
 To scan the preset channels in numerical sequence, press CH +/-



To select a channel directly, press 0 – 9 and then ENTER.
 For example, to select channel 10, press 1, 0 and ENTER.

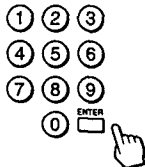

- 4** Press VOL +/- to adjust the volume.




Press + to increase the volume.
 Press - to decrease the volume.

If VIDEO 1, VIDEO 2 or VIDEO 3 appears on the screen
 Press TV/VIDEO until a TV channel number appears.

To select channels more easily
 Set FAVORITE CHANNEL (pp. 64 – 65).



To turn off the projection TV
 Press POWER.

1-8. USING CLOSED CAPTION

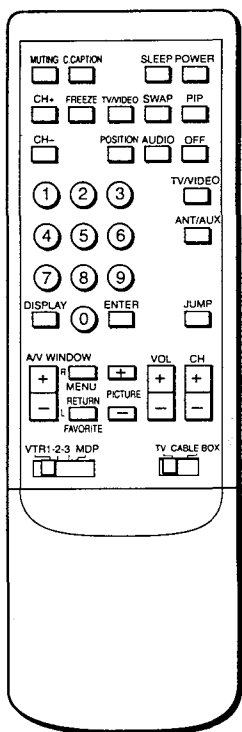

RM-Y115

- 1** Press C. CAPTION.
 The closed caption mode appears. CC1, CC2, TEXT1, TEXT2 or CC OFF appears in sequence each time you press C. CAPTION.

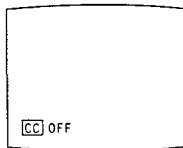


- 2** Press C. CAPTION repeatedly.




Select CC1 or CC2 to view Captions.
 A Caption is a printed version of the dialogue or sound effects of a program.
 (The mode should be set to CC1 for most programs.)




Select TEXT1 or TEXT2 to view Text.
 Text is information that is presented using the half to full television screen.
 It is usually not related to the program.

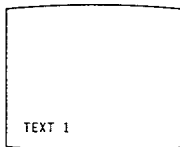


Select CC OFF if you don't want to view Closed Caption nor Text.

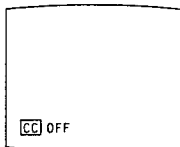

1-9. USING CONVENIENT FEATURES

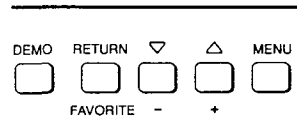

Front inner panel

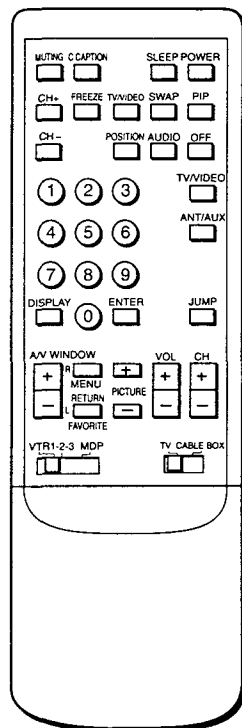

RM-Y115

Muting the sound — MUTING

Press MUTING.
 "MUTING" appears on the screen.



To restore the sound
 Press MUTING again, or press VOL +.

Keeping the displays on-screen — DISPLAY

Press DISPLAY.
 All the existing displays appear: channel number, channel caption (if set), MTS mode ("SAP" only), window picture input mode, and the current time ("AM" or "PM" disappears after about three seconds).




To turn off the displays
 Press DISPLAY again.

Setting the sleep timer — SLEEP

The sleep timer turns off the projection TV automatically after the amount of time you select.

Press SLEEP
 Each time you press SLEEP, the time increments "30," "60," "90" and "OFF" mode appear in sequence.

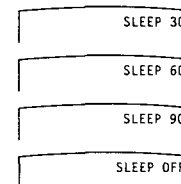

A red "SLEEP" display appears about one minute before the projection TV goes off.

To cancel the setting.
 Press SLEEP until OFF mode appears.
 A green "SLEEP OFF" display appears for about three seconds.

OR
 Turn the projection TV off.
 The sleep timer setting is cancelled.

Switching quickly between two channels — JUMP

Use this function to keep track of two programs alternately.

To recall the channel you were watching previously
 Press JUMP



To switch back to the first channel
 Press JUMP again.

Previewing the features — DEMO

Press DEMO (front inner panel).
 Functions and menus are displayed one by one.




To restart DEMO from the beginning
 Press DEMO again.

To stop DEMO
 Press any button.

1-10. SELECTING A PICTURE AND SOUND MODE


This projection TV features four modes (STANDARD, MOVIE, SPORTS, NEWS) that offer different picture and sound qualities. Choose the one that best suits the type of program that you want to watch.

Example: Select MOVIE mode for picture and sound that gives you the sense of being in a movie theater.

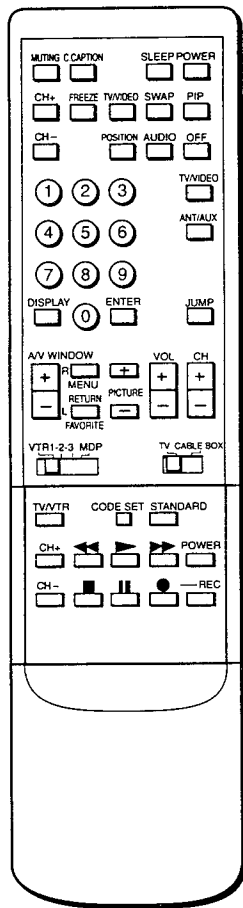

(with video control cover open)
RM-Y115



- 1** Press MENU.
The main menu appears, and the cursor points to "PROG PALETTE."

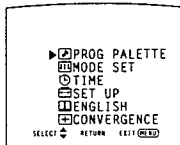


- 2** Press RETURN.
The program palette menu appears.



- 3** Press A/V WINDOW +/- until the cursor points to "MOVIE."

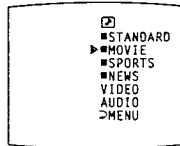

- 4** Press RETURN.
The "MOVIE" display turns green, indicating that MOVIE mode is selected.

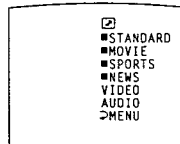

To select a different mode
Repeat steps 3 - 4.

Selecting standard mode (without using the menus)

Follow these instructions to select standard mode without using the on-screen menus.

Press STANDARD.



When you select STANDARD mode

You receive standard picture and sound quality. Any video or audio adjustments you made ("Adjusting the Projection TV," pp. 44 - 52) are cancelled and the original factory settings are restored.

When you select MOVIE mode

You receive a finely detailed picture, and a theatrical audio effect. To further adjust picture and sound qualities, follow the instructions on pp. 44 - 52.

When you select SPORTS mode

You receive a vivid, bright picture, and sound with a sports stadium effect. To further adjust picture and sound qualities, follow the instructions on pp. 44 - 52.

When you select NEWS mode

Picture noise is reduced, and you receive clear voice reproduction. To further adjust picture and sound qualities, follow the instructions on pp. 44 - 52.


To return to the previous menu
Press A/V WINDOW +/- until the cursor points to " > MENU." Then press RETURN.

To return to the main menu
Repeat the above, until you reach the main menu.

To return to the normal screen.
Press MENU.

1-11. WATCHING TWO PICTURES AT ONCE (PIP)

You can watch both the main picture and a window picture simultaneously, using the Picture-in-Picture (PIP) function. KP-41EXR96 is equipped with one-tuner PIP. To watch two TV channels simultaneously, you must first connect a VCR to the projection TV, which will enable you to watch a second TV channel through the VCR tuner. (See "Connecting Other Equipment," pp. 15 - 19.) Other models are equipped with two-tuner PIP, allowing you to watch two TV channels at once.

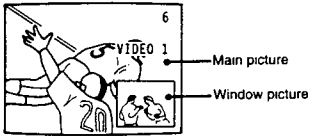

Picture-in-Picture special features


- When watching the main picture and a window picture, you can:
- Swap the main and window pictures (SWAP).
 - Change the position of the window picture (POSITION).
 - Display a still picture (FREEZE).
 - Choose the sound from the main or window picture (AUDIO).

Notes

- The window picture sound is also output from the AUDIO (VAR) OUT jacks. The AUDIO OUT and MONITOR OUT jacks output the main picture sound only.
- The video label and channel caption will not appear with the window picture even if you have set them.
- If you select a blocked channel in the window picture, the display "BLOCKED" appears with the window picture. (See "Setting CHANNEL BLOCK," pp. 62 - 63.)

Displaying a window picture

Remote Commander

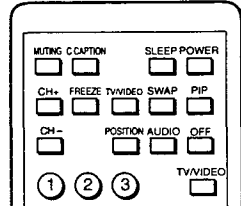


Press PIP to display a window picture



Input source mode or TV channel for the main picture



Input source mode or TV channel for the window picture

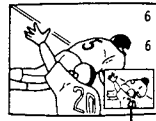

A window picture appears in the last mode you watched. Each time you press PIP, a 1/9 or 1/16 size window picture appears alternately.

To turn PIP function off

Press OFF
 The window picture disappears.

To receive the window picture sound

Press AUDIO.


The display appears for a few seconds, indicating that the window picture sound is being received.

To restore the main picture sound

Press AUDIO again.

Changing the window picture input mode


Remote Commander

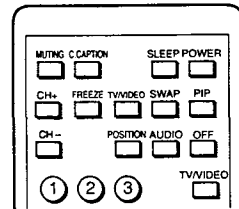

1 Press PIP to display a window picture.



2 Press TV/VIDEO in the Picture-in-Picture control area to select the input mode. Each time you press TV/VIDEO, "TV," "VIDEO 1," "VIDEO 2" and "VIDEO 3" appear in sequence.

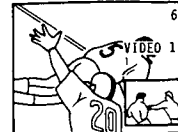


To change TV channels in the window picture
 Press CH +/- in the PIP control area.

Displaying CATV input as a window picture


To use Picture-in-Picture with pay cable TV input, make the connections to your cable converter box as shown below.

(Front inner panel)

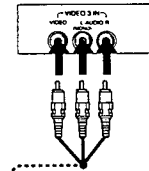

Signal flow

(Rear of projection TV)

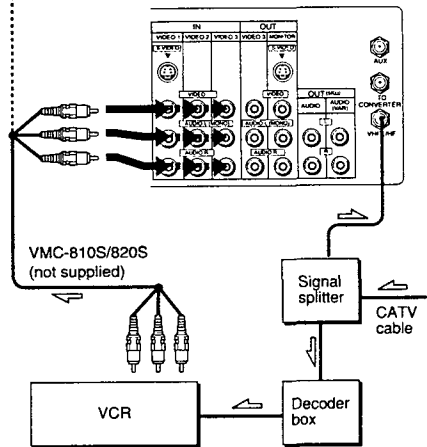

After making the above connections, turn the cable connection on by following the steps on pp. 26 - 27; then continue with the steps below.

1-2 Follow steps 1 - 2 in "Changing the window picture input mode" on this page to select the video input mode for your connected VCR.

3 Put your VCR on an inactive channel (channel 3 or 4).


4 Change pay cable TV channels with the decoder box.

To control your cable converter box with the supplied Remote Commander
 See p. 70.


Changing the position of the window picture

Follow these instructions to change the position of the window picture on the screen.


Remote Commander

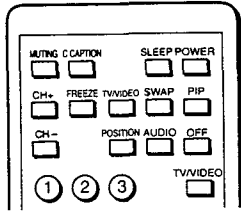

1 Press PIP to display a window picture.

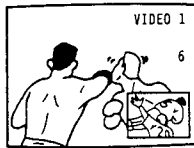


2 Press POSITION.
Each time you press POSITION, the window picture moves as illustrated.

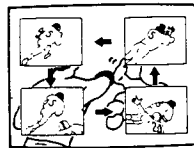



Displaying a still picture

Use the FREEZE function to display a still picture. This function is useful when you want to write down a recipe from a cooking program, a displayed address or phone number and so on.


Remote Commander

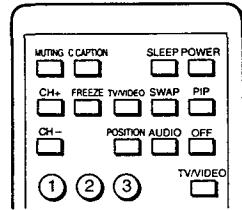

1 Press PIP to display a window picture.

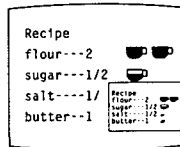

2 Press FREEZE.
The window picture image remains still on the screen.

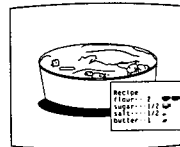


To restore the normal picture
Press FREEZE again.

Swapping the main and window pictures

Follow these instructions to swap the input signals of the main and window pictures.


Remote Commander

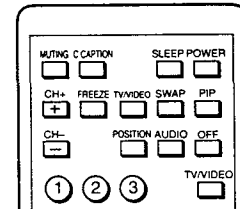

1 Press PIP to display a window picture.



2 Press SWAP.
Each time you press SWAP the images from the main and window pictures switch places.

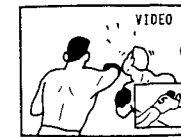


1-12. ADJUSTING THE PROJECTION TV

You can adjust the picture and sound for each input mode (TV, VIDEO 1, VIDEO 2, VIDEO 3) by pressing TV/VIDEO on the projection TV or on the Remote Commander to select the input mode, before making the adjustments. These adjustments are retained in memory even when you turn off the projection TV, but are cancelled after you change the adjustments, or select a picture and sound mode (pp. 38 – 39).


Adjusting the picture

Follow these instructions to adjust PICTURE, HUE, COLOR, BRIGHT (brightness) and SHARP (sharpness).

Remote Commander (with video control cover open)

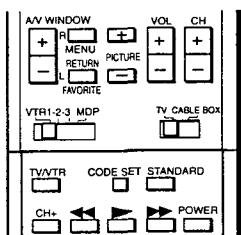

- 1** Press MENU.
 The main menu appears, and the cursor points to "PROG PALETTE."

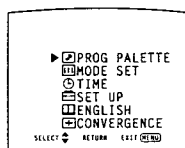


- 2** Press RETURN.
 The program palette menu appears.



- 3** Press A/V WINDOW +/- until the cursor points to "VIDEO."

- 4** Press RETURN.
 The VIDEO screen appears.

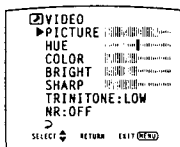

- 5** Press A/V WINDOW +/- until the cursor points to the item you want to adjust.


- 6** Press RETURN.
 The adjustment screen appears.



- 7** Press A/V WINDOW +/- to make the adjustment.

Picture quality	Press A/V WINDOW -	Press A/V WINDOW +
PICTURE	For decreased picture contrast with soft color	For increased picture contrast with vivid color
HUE	Skin tones become purplish	Skin tones become greenish
COLOR	For less color intensity	For more color intensity
BRIGHT	For less brightness	For more brightness
SHARP	For less sharpness	For more sharpness

- 8** Press RETURN.
 The adjustment is complete, and the VIDEO screen automatically reappears.

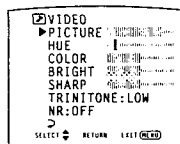

To adjust other items
 Repeat steps 5 – 8.

To restore the factory settings for all the items
 Select "STANDARD" on the program palette menu, and press RETURN;
 or, press STANDARD on the Remote Commander.
 All the items, including TRINITONE (p. 46) and NR (p. 47) return to their original factory settings.

To adjust picture contrast
 You can also adjust picture contrast with the PICTURE +/- buttons on the Remote Commander.



Press + to increase picture contrast with vivid color.
 Press - to decrease picture contrast with soft color.
 The picture adjustment screen appears.

To return to the previous menu
 Press A/V WINDOW +/- until the cursor points to " > MENU."
 Then press RETURN.


To return to the main menu
 Repeat the above, until you reach the main menu.

To return to the normal screen
 Press MENU.


Setting the TRINITONE mode

Color picture tubes are usually manufactured with a fixed color temperature (tint) that determines the "warmth" (red tint) or "coolness" (blue tint) of the picture. Use the Sony Trinitone feature to adjust the picture color to your preference.

Remote Commander

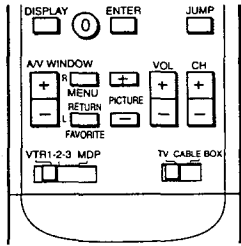

1 Press MENU.
The main menu appears, and the cursor points to "PROG PALETTE."

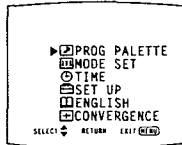

2 Press RETURN.
The program palette menu appears.



3 Press A/V WINDOW +/- until the cursor points to "VIDEO."

4 Press RETURN.
The VIDEO screen appears.



5 Press A/V WINDOW +/- until the cursor points to "TRINITONE."

6 Press RETURN.
The mode display turns red.

7 Press A/V WINDOW +/- to select "HIGH" or "LOW."
Select "HIGH" to make the picture cool (bluish).
Select "LOW" to make the picture warm (reddish).

8 Press RETURN.
The setting is complete.

To return to the previous menu

Press A/V WINDOW +/- until the cursor points to " > MENU."

Then press RETURN.

To return to the main menu

Repeat the above, until you reach the main menu.


To return to the normal screen

Press MENU.


Setting NR (picture noise reduction) ON or OFF

Follow these instructions to reduce picture noise.


Remote Commander

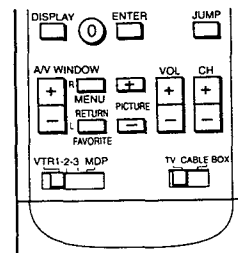

1 Press MENU.
The main menu appears, and the cursor points to "PROG PALETTE."

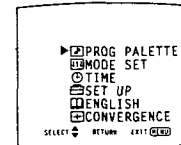


2 Press RETURN.
The program palette menu appears.

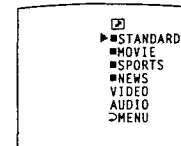

3 Press A/V WINDOW +/- until the cursor points to "VIDEO."

4 Press RETURN.
The VIDEO screen appears.

5 Press A/V WINDOW +/- until the cursor points to "NR."

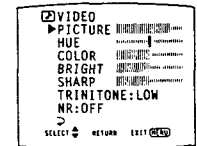

6 Press RETURN.
The mode display turns red.

7 Press A/V WINDOW +/- to select "ON" or "OFF"
Select "ON" to reduce picture noise.
Select "OFF" to restore the normal picture.

8 Press RETURN.
The setting is complete.

To return to the previous menu

Press A/V WINDOW +/- until the cursor points to " > MENU."
Then press RETURN.

To return to the main menu

Repeat the above, until you reach the main menu.

To return to the normal screen


Press MENU.

Setting S-VIDEO ON or OFF


Follow these instructions to set S-VIDEO on or off, depending on the kind of video equipment you have connected to the projection-TV. For instructions on connecting video equipment, see pp. 15 - 18.

Note
 If the projection TV is in TV, VIDEO 2 or VIDEO 3 mode, the "S-VIDEO" display is shaded and cannot be selected. Press TV/VIDEO on the projection TV or on the Remote Commander to change to VIDEO 1 mode.

Remote Commander

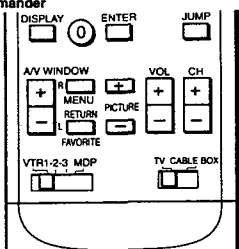


1 Press MENU.
 The main menu appears.

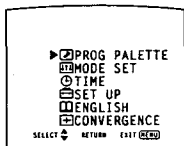

2 Press AV WINDOW +/- until the cursor points to "MODE SET."

3 Press RETURN.
 The mode set menu appears, with the cursor pointing to "S-VIDEO."

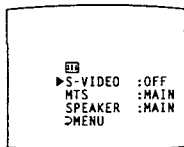

4 Press RETURN.
 The mode display turns red.

5 Press AV WINDOW +/- to select "ON" or "OFF"

6 Press RETURN.
 The setting is complete.

To return to the previous menu
 Press AV WINDOW +/- until the cursor points to " > MENU."
 Then press RETURN.


To return to the main menu
 Repeat the above, until you reach the main menu.

To return to the normal screen
 Press MENU.


Adjusting the sound

Follow these instructions to adjust the TREBLE, BASS and BALANCE.


Remote Commander (with video control cover open)

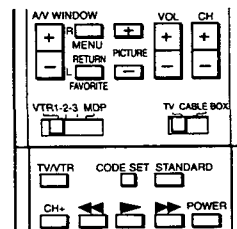

1 Press MENU.
 The main menu appears, and the cursor points to "PROG PALETTE."

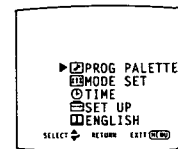


2 Press RETURN.
 The program palette menu appears.

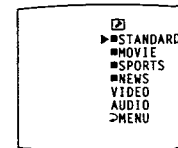


3 Press AV WINDOW +/- until the cursor points to "AUDIO."

4 Press RETURN.
 The AUDIO screen appears.

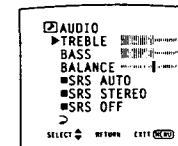

5 Press AV WINDOW +/- until the cursor points to the item you want to adjust.


6 Press RETURN.
 The adjustment screen appears.

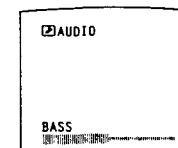

7 Press AV WINDOW +/- to make the adjustment.

Sound quality	Press AV WINDOW -	Press AV WINDOW +
TREBLE	To decrease the treble response	To increase the treble response
BASS	To decrease the bass response	To increase the bass response
BALANCE	To emphasize the left speaker's volume	To emphasize the right speaker's volume

8 Press RETURN.
 The adjustment is complete, and the AUDIO screen automatically reappears.

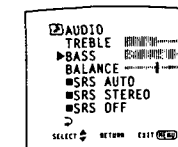

To adjust other items
 Repeat steps 5 - 9.

To restore the factory settings for all the items
 Select "STANDARD" on the program palette menu, and press RETURN; or, press STANDARD on the Remote Commander.
 All the items, including SRS mode (p. 50) return to their original factory settings.

To return to the previous menu
 Press AV WINDOW +/- until the cursor points to " > MENU."
 Then press RETURN.

To return to the main menu
 Repeat the above, until you reach the main menu.

To return to the normal screen
 Press MENU.

Selecting an SRS (Sound Retrieval System) mode

For lifelike sound reproduction, follow the instructions below to select the SRS mode you prefer.

In SRS AUTO mode, SRS functions in both monaural and stereo modes.


Monaural sound programs will have a 'simulated stereo' effect.

In SRS STEREO mode, SRS functions only when a stereo program is received.


The STEREO lamp on the TV lights up whenever a stereo broadcast is received.

Select SRS OFF mode to return to normal sound mode.

Remote Commander

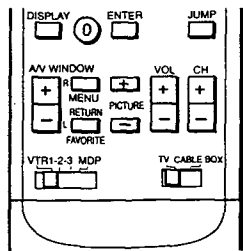

- 1 Press MENU.
The main menu appears, and the cursor points to "PROG PALETTE."

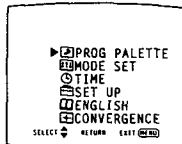


- 2 Press RETURN.
The program palette menu appears.



- 3 Press A/V WINDOW +/- until the cursor points to "AUDIO."

- 4 Press RETURN.
The AUDIO screen appears.

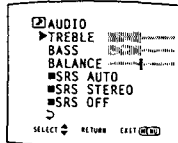

- 5 Press A/V WINDOW +/- until the cursor points to the SRS mode you want.

- 6 Press RETURN.
The mode is selected.

To change the SRS mode
Repeat steps 5 - 6.

To return to the previous menu
Press A/V WINDOW +/- until the cursor points to " > MENU."
Then press RETURN.

To return to the main menu
Repeat the above, until you reach the main menu.

To return to the normal screen
Press MENU.

Selecting an MTS (Multichannel TV Sound) mode

Follow these instructions to select an MTS mode.


Select MAIN mode to listen to stereo sound.
The STEREO lamp on the projection TV lights up whenever a stereo broadcast is received.

Select SAP mode to listen to Second Audio Programs.
Select MONO mode to eliminate excessive noise during stereo broadcasts, caused by a weak incoming signal.


Note
If the projection TV is in video mode, the "MTS" display is shaded and cannot be selected.

Press TV/VIDEO on the projection TV or on the Remote Commander to change to TV mode.

Remote Commander

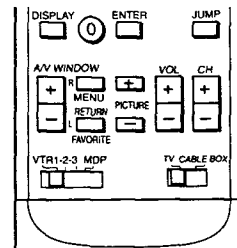


- 1 Press MENU.
The main menu appears.

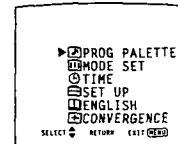

- 2 Press A/V WINDOW +/- until the cursor points to "MODE SET."

- 3 Press RETURN.
The mode set menu appears.

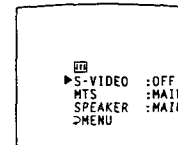

- 4 Press A/V WINDOW +/- until the cursor points to "MTS."

- 5 Press RETURN.
The mode display turns red.

- 6 Press A/V WINDOW +/- to select the mode you want.
Each time you press A/V WINDOW +/-, "MAIN," "SAP" and "MONO" appear in sequence.

- 7 Press RETURN.
The mode is selected.

To return to the previous menu
Press A/V WINDOW +/- until the cursor points to " > MENU."
Then press RETURN.


To return to the main menu
Repeat the above, until you reach the main menu.

To return to the normal screen
Press MENU.


Setting SPEAKER — MAIN or CENTER

Follow these instructions to set SPEAKER to "CENTER" when you connect an audio system (p.19), and to "MAIN" when you want to listen to the sound from the projection TV speakers.

Remote Commander

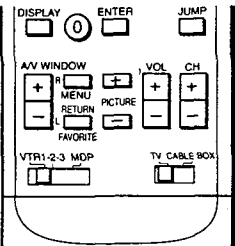


- 1 Press MENU.
The main menu appears.

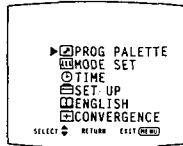

- 2 Press A/V WINDOW +/- until the cursor points to "MODE SET."

- 3 Press RETURN.
The mode set menu appears.

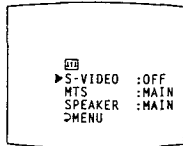

- 4 Press A/V WINDOW +/- until the cursor points to "SPEAKER."

- 5 Press RETURN.
The mode display turns red.

- 6 Press A/V WINDOW +/- to select "MAIN" or "CENTER."

- 7 Press RETURN.
The setting is complete.

To return to the previous menu

Press A/V WINDOW +/- until the cursor points to "> MENU."

Then press RETURN.

To return to the main menu

Repeat the above, until you reach the main menu.

To return to the normal screen

Press MENU.


1-13. CUSTOMIZING THE SCREEN DISPLAY

Setting channel captions — CH CAPTION


Follow these instructions to caption each channel number display with a name, for instance, the television station call letters. (You can set up to four letters or numbers.)

Example: Caption channel 15 as "NBC."

Remote Commander

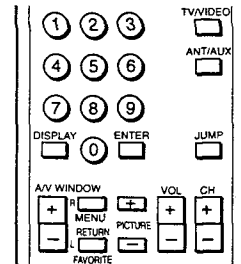


- 1 Press MENU.
The main menu appears.

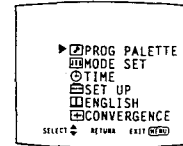


- 2 Press A/V WINDOW +/- until the cursor points to "SET UP."

- 3 Press RETURN.
The set up menu appears.

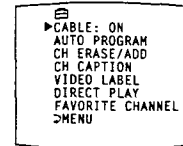


- 4 Press A/V WINDOW +/- until the cursor points to "CH CAPTION."

- 5 Press RETURN.
The CH CAPTION screen appears.

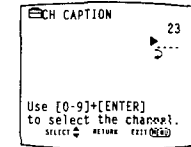


- 6 Press CH +/-, or press 1, 5 and ENTER to set channel "15."

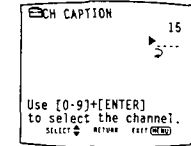

- 7 Press RETURN.
The first caption space turns red.

- 8 Press A/V WINDOW +/- to select "N."
Each time you press A/V WINDOW +/-, "0" - "9," "A" - "Z," "&," ":", ":", ":", and " " (blank space) appear in sequence.

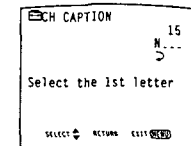


- 9 Press RETURN.
The second caption space turns red.

(Continued)


Setting channel captions – CH CAPTION

(Cont'd. from prev. page)

Remote Commander

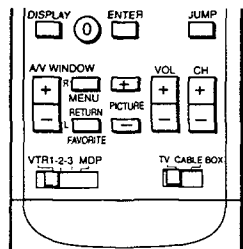


- 10** Press A/V WINDOW +/- to select "B."

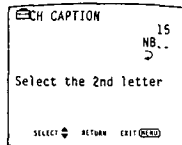


- 11** Press RETURN.
The third caption space turns red.

- 12** Press A/V WINDOW +/- to select "C."

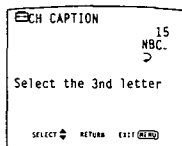

- 13** Press RETURN.
The fourth caption space turns red.

- 14** Press A/V WINDOW +/- to select a blank space.

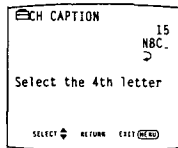

- 15** Press RETURN.
The setting is complete.
When you select or display the channel number, the channel caption also appears.

To caption more channels
Repeat steps 6 – 15.

To erase unnecessary captions
Display the CH CAPTION screen, select the channel with the caption you want to erase, and select blank spaces for the channel caption; then press RETURN.
The caption for that channel is erased.

To return to the previous menu
Press A/V WINDOW +/- until the cursor points to " > MENU."
Then press RETURN.

To return to the main menu
Repeat the above, until you reach the main menu.

To return to the normal screen
Press MENU.


Note
You can set up to 32 channel captions. If the memory is full, "The memory is full, sorry" appears on the screen. Erase any unnecessary captions, and begin again.

Setting VIDEO LABEL


Follow these instructions to label each input mode, in order to identify the equipment connected to each input terminal.

Example: Label VIDEO 1 IN as "VHS."

Remote Commander

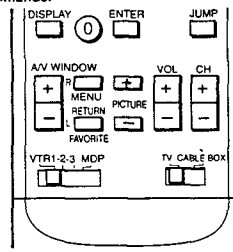


- 1** Press MENU.
The main menu appears.

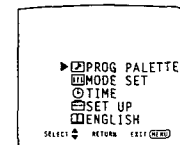

- 2** Press A/V WINDOW +/- until the cursor points to "SET UP."

- 3** Press RETURN.
The set up menu appears.

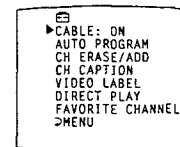

- 4** Press A/V WINDOW +/- until the cursor points to "VIDEO LABEL."

- 5** Press RETURN.
The VIDEO LABEL screen appears.




- 6** Press A/V WINDOW +/- until the cursor points to the input mode you want to label. (In this case, the cursor is already pointing to "VIDEO 1.")

- 7** Press RETURN.
The label display turns red.

- 8** Press A/V WINDOW +/- to select "VHS."



Each time you press A/V WINDOW +/-, the label changes:

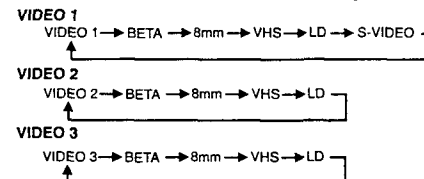

- 9** Press RETURN.
The setting is complete.
When you select or display the video mode, the video label appears.

To label other Input modes
Repeat steps 6 – 9.

To change a label
Same as above.

To return to the previous menu
Press A/V WINDOW +/- until the cursor points to " > MENU."
Then press RETURN.

To return to the main menu
Repeat the above, until you reach the main menu.

To return to the normal screen
Press MENU.

1-14. USING TIMER-ACTIVATED FUNCTIONS


Setting DAYLIGHT SAVING

If you live in an area that uses daylight savings time, set DAYLIGHT SAVING to "YES" or "NO" depending on the season, before setting the current time. At the next daylight savings date, you will be able to automatically adjust all the time-related settings (CURRENT TIME, ON/OFF TIMER and CHANNEL BLOCK) simply by changing the DAYLIGHT SAVING setting.

When setting DAYLIGHT SAVING:


- **After the first Sunday in April (spring daylight savings)**
 Set to "YES" before setting the current time.
 Then, on the last Sunday in October (fall daylight savings), set to "NO."
All the time-related settings automatically move one hour back.
- **After the last Sunday in October (fall daylight savings)**
 Set to "NO" before setting the current time.
 Then, on the first Sunday in April (spring daylight savings), set to "YES."
All the time-related settings automatically move one hour ahead.

Remote Commander

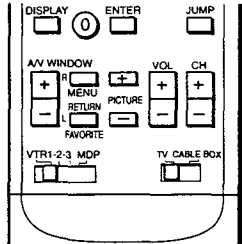


Follow these instructions to set DAYLIGHT SAVING to "YES" or "NO."

- 1 Press MENU.
 The main menu appears.

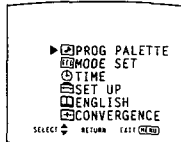

- 2 Press A/V WINDOW +/- until the cursor points to "TIME."

- 3 Press RETURN.
 The time menu appears.

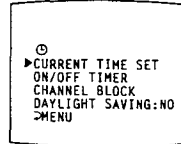

- 4 Press A/V WINDOW +/- until the cursor points to "DAYLIGHT SAVING."

- 5 Press RETURN.
 The mode display turns red.

- 6 Press A/V WINDOW +/- to select "YES" or "NO."

- 7 Press RETURN.
 The setting is complete.

To return to the previous menu
 Press A/V WINDOW +/- until the cursor points to "> MENU."
 Then press RETURN.

To return to the main menu
 Repeat the above, until you reach the main menu.


To return to the normal screen.
 Press MENU.

Setting the clock — CURRENT TIME SET


Follow these instructions to set the current time. The correct current time must be set in order to use the other time-related functions (DAYLIGHT SAVING, ON/OFF TIMER, CHANNEL BLOCK).

Example: Set the time to 3:15 PM, Monday.

Remote Commander

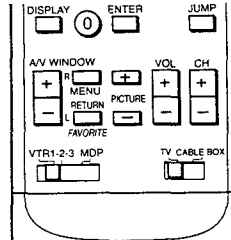


- 1 Press MENU.
 The main menu appears.

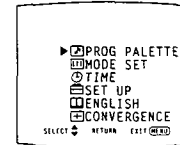

- 2 Press A/V WINDOW +/- until the cursor points to "TIME."

- 3 Press RETURN.
 The time menu appears, and the cursor points to "CURRENT TIME SET."

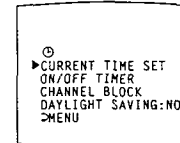

- 4 Press RETURN again.
 The CURRENT TIME SET screen appears, with a reminder to set DAYLIGHT SAVING.



If you do not need to set DAYLIGHT SAVING, press RETURN and continue from step 5.


To set daylight saving

- a Press A/V WINDOW +/- until the cursor points to "DAYLIGHT SAVING."
- b Press RETURN.
 The time menu appears, and the cursor points to "DAYLIGHT SAVING."
- c Press RETURN.
- d Press A/V WINDOW +/- to select "YES" or "NO."
- e Press RETURN.
 The setting is complete.

To set the time, press A/V WINDOW +/- until the cursor points to "CURRENT TIME SET"; press RETURN, then continue from step 5.

- 5 Press RETURN.
 The CURRENT TIME SET screen appears, and the "SUN" display appears (red).

- 6 Press A/V WINDOW +/- to select "MON."
 Each time you press A/V WINDOW +/-, the day changes consecutively.

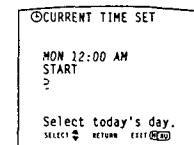


(Continued)

Setting the clock — CURRENT TIME SET


(Cont'd. from prev. page)

Remote Commander

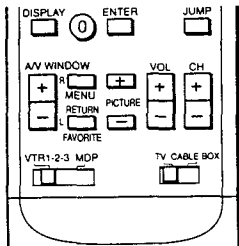


- 7** Press RETURN.
The hour and am/pm displays turn red.

- 8** Press A/V WINDOW +/- to set "3:00PM."
Each time you press A/V WINDOW +/-, the hour changes in sequence beginning with "12:00AM."

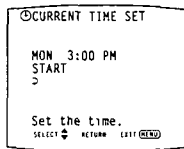

- 9** Press RETURN.
The minute display turns red.

- 10** Press A/V WINDOW +/- to select "15" (minutes).
Each time you press A/V WINDOW +/-, the minutes change in sequence.

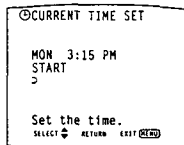

- 11** Press RETURN.
The cursor points to "START."

- 12** Check the actual time, and press RETURN to start the clock.
The setting is complete.

To reset the time
Display the CURRENT TIME SET screen and repeat steps 5 - 12.

To display the current time
Press DISPLAY.

To return to the previous menu
Press A/V WINDOW +/- until the cursor points to " > MENU." Then press RETURN.

To return to the main menu
Repeat the above, until you reach the main menu.


To return to the normal screen.
Press MENU.

Setting the ON/OFF TIMER


Follow these instructions to make the program of your choice appear on the screen at a specified time.

Example: Set the timer to turn on the projection TV every Monday through Friday at 1:30 AM for 3 hours, on channel 8, as PROGRAM 1. (You can set up to three programs.)

Remote Commander

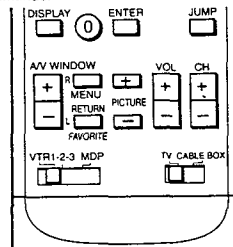

- 1** Press MENU.
The main menu appears.

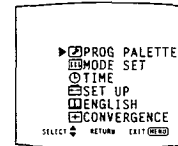


- 2** Press A/V WINDOW +/- until the cursor points to "TIME."

- 3** Press RETURN.
The time menu appears.




- 4** Press A/V WINDOW +/- until the cursor points to "ON/OFF TIMER."

- 5** Press RETURN.
The ON/OFF TIMER screen appears, and the cursor points to "1."

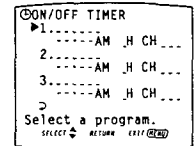


- 6** To set program 1, press RETURN.
(To set program 2 or 3, press A/V WINDOW +/- until the cursor points to that program; then press RETURN.)
The day input space turns red.

- 7** Press A/V WINDOW +/- to select "EVERY MON-FRI"; then press RETURN.
Each time you press A/V WINDOW +/-, the days of the week change as shown in Fig. 1 (p. 61).

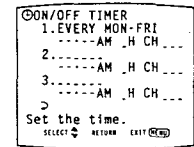


- 8** Press A/V WINDOW +/- to select "1:00AM"; then press RETURN.
Each time you press A/V WINDOW +/-, the hour changes in sequence.

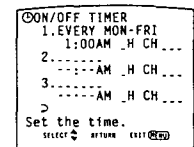


(Continued)

Setting the ON-OFF TIMER (Cont'd from prev. page)


Remote Commander

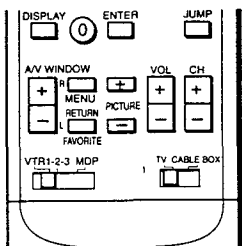


9 Press A/V WINDOW +/- to select "30" (minutes); then press RETURN.
Each time you press A/V WINDOW +/-, the minutes change in sequence.

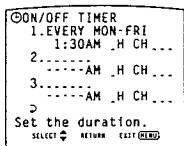

10 Press A/V WINDOW +/- to select "3" (hour duration); then press RETURN.
Each time you press A/V WINDOW +/- the duration changes from "1" - "6" in sequence.

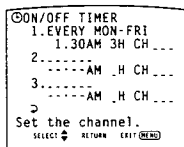

11 Press A/V WINDOW +/- to select "8" (channel); then press RETURN.
The TIMER/STAND BY lamp lights, indicating that the setting is complete.
Each time you press A/V WINDOW +/-, the channel number changes from 1 - 125 in sequence.

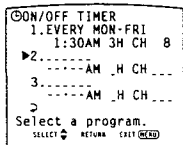

The display "TIMER WILL BE OFF" appears on the screen one minute before the timer duration ends.

To set program 2 or 3.
Press RETURN and repeat steps 6 - 11.

To erase an ON/OFF TIMER setting
Display the ON/OFF TIMER screen, select the setting you want to erase, and select a blank space for the day.
The ON/OFF TIMER setting is erased.

To enter a new ON/OFF TIMER setting
Display the ON/OFF TIMER screen and repeat steps 6 - 11.


To return to the previous menu
Press A/V WINDOW +/- until the cursor points to "> MENU."
Then press RETURN.

To return to the main menu
Repeat the above, until you reach the main menu.

To return to the normal screen.
Press MENU.

Note
If you unplug the projection TV or a power failure occurs, both the clock and timer settings will be erased. Reset the current time; then set the timer.

Fig. 1
Selecting the day(s) of the week
When you press A/V WINDOW +, the days of the week appear in the following order:

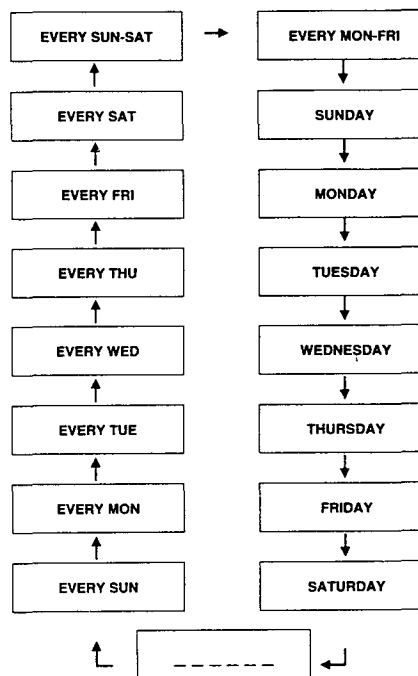


Setting CHANNEL BLOCK

Follow these instructions to prevent a channel from appearing on the screen during the time that you specify. You can use this function to prevent children from watching unsuitable programs.

Example: Set CHANNEL BLOCK every Saturday at 4:30 PM for 1 hour, on Channel 12.


Remote Commander

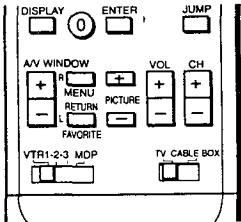

Note

If you have not set the current time, the "CHANNEL BLOCK" display is shaded and cannot be selected.

- 1** Press MENU.
The main menu appears.

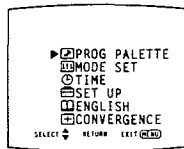


- 2** Press A/V WINDOW +/- until the cursor points to "TIME."

- 3** Press RETURN.
The time menu appears.




- 4** Press A/V WINDOW +/- until the cursor points to "CHANNEL BLOCK."

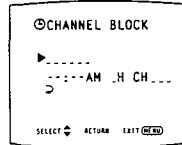


- 5** Press RETURN.
The CHANNEL BLOCK screen appears, and the cursor points to the day input space.


- 6** Press RETURN.
The day input space turns red.

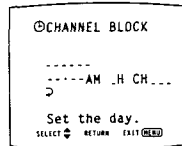


- 7** Press A/V WINDOW +/- to select "EVERY SAT"; then press RETURN.
Each time you press A/V WINDOW +/-, the days of the week change as shown in Fig. 1 (p. 61).

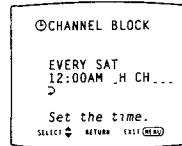


- 8** Press A/V WINDOW +/- to select "4:00PM"; then press RETURN.
Each time you press A/V WINDOW +/-, the hour changes in sequence.

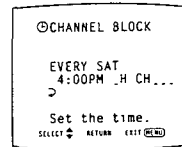


- 9** Press A/V WINDOW +/- to select "30" (minutes); then press RETURN.
Each time you press A/V WINDOW +/-, the minutes change in sequence.

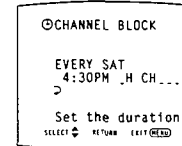


- 10** Press A/V WINDOW +/- to select "1" (hour duration); then press RETURN.
Each time you press A/V WINDOW +/-, the duration changes from "1" - "6" in sequence.

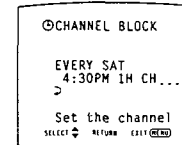

- 11** Press A/V WINDOW +/- to select "12" (channel); then press RETURN.
The setting is complete.
Each time you press A/V WINDOW +/-, the channel number changes from "1" - "125" in sequence.

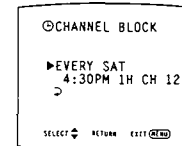

At the specified time, "BLOCKED" appears in red on the screen, and the picture of the specified channel is blocked and the sound is muted.

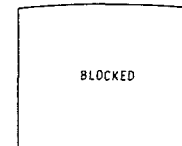

To erase a CHANNEL BLOCK setting
Display the CHANNEL BLOCK screen and select a blank space for the day.
The CHANNEL BLOCK setting is erased.

To enter a new CHANNEL BLOCK setting
Display the CHANNEL BLOCK screen and repeat steps 4 - 10. (You can only set one CHANNEL BLOCK at a time.)

To return to the previous menu
Press A/V WINDOW +/- until the cursor points to " > MENU."
Then press RETURN.

To return to the main menu
Repeat the above, until you reach the main menu.

To return to the normal screen.
Press MENU.


Note

If the ON/OFF TIMER is set for an overlapping time (pp. 59 - 61), the later time setting takes precedence. For example, if CHANNEL BLOCK is set for 2:00 PM and ON/OFF TIMER is set for 3:00 PM, ON/OFF TIMER will take effect at 3:00 PM.

1-15. SETTING FAVORITE CHANNEL

By setting FAVORITE CHANNEL, you can select the channels you use most frequently (up to seven channels) simply by pressing RETURN.

Remote Commander

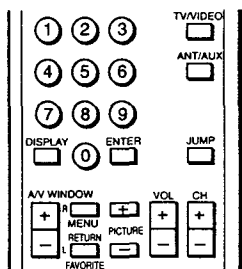


Follow these instructions to set the channels.

- 1 Press MENU.
The main menu appears.




- 2 Press AV WINDOW +/- until the cursor points to "SET UP."

- 3 Press RETURN.
The set up menu appears.

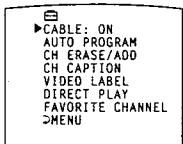


- 4 Press AV WINDOW +/- until the cursor points to "FAVORITE CHANNEL."

- 5 Press RETURN.
The FAVORITE CHANNEL screen appears, and the cursor points to the first channel position.

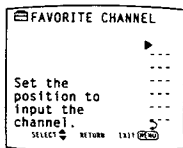

- 6 Press AV WINDOW +/- to select the channel position; then press RETURN.

- 7 Press 0 - 9 and ENTER to set the channel number.

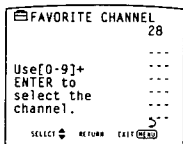

- 8 Press RETURN.
The setting is complete.

To set other channels
Repeat steps 6 - 8.

To erase a favorite channel setting
Press AV WINDOW +/- until the cursor points to the channel number you want to erase; press RETURN, then press 0 and ENTER.

To reset a favorite channel setting
Display the FAVORITE CHANNEL screen and repeat steps 6 - 8.

To return to the previous menu
Press AV WINDOW +/- until the cursor points to " > MENU."
Then press RETURN.


To return to the main menu
Repeat the above, until you reach the main menu.

To return to the normal screen.
Press MENU.

Selecting a favorite channel

After setting the channels, follow these instructions to select the channel you want to watch.


- 1 Press RETURN.
The FAVORITE CHANNEL display appears.

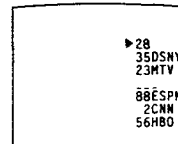

Note
If you have set channel captions (pp. 53 - 54), the captions appear with the channel numbers.

- 2 Press AV WINDOW +/- to select the channel you want to watch; then press RETURN.
The channel is selected.

If you press RETURN on the Remote Commander before setting FAVORITE CHANNEL, this screen appears.

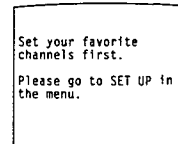

Follow steps 1 - 8 to set your favorite channels, and then make the selection.


1-16. USING THE PRE-PROGRAMMED REMOTE COMMANDER

You can operate other video equipment (such as VCRs, video disc players and cable boxes) that have an infrared remote detector with this supplied Remote Commander.

Operating Sony video equipment

Follow these instructions to operate Sony video cassette recorders (Beta, 8 mm and VHS) and video disc players (including multi-disc players).

Remote Commander
(with video control cover open)

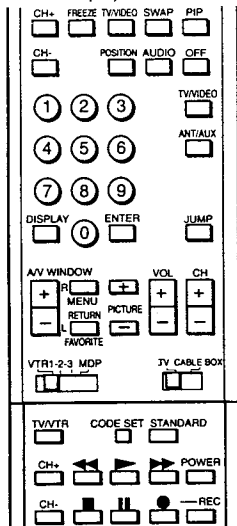

- 1 Set the VTR1-2-3 MDP selector according to the video equipment you want to operate.




Fig. 2: Video equipment settings

If you want to operate a:	set to:
Beta, ED Beta VCR	VTR 1
8 mm VCR	VTR 2
VHS VCR	VTR 3
Video disc player	MDP

- 2 Use the video operating buttons to control the connected equipment.

Fig. 3: Operating a VCR (VTR1, 2, 3)

To turn on or off	Press POWER.
To change channels (when watching TV programs through the VCR's tuner)	Press CH +/-
To record	Press ● and REC simultaneously.
To play	Press ►
To stop	Press ■.
To fast forward	Press ►►
To rewind the tape	Press ◄◄.
To pause	Press ▮. To resume normal playback, press again.
To search the picture forward and backward	Keep pressing ►► or ◄◄ during playback. To resume normal playback, release the button.
To change input mode	Press TV/VTR.

Fig. 4: Operating a Video Disc Player (MDP)

To turn on or off	Press POWER.
To play	Press ►
To stop	Press ■.
To pause	Press ▮. To resume normal playback, press again. Note This function is effective only for CAV (standard-play disc). With CLV (extended-play disc), the projection TV goes off (standby mode) if you press ▮.
To search the picture forward and backward	Keep pressing ►► or ◄◄ during playback. To resume normal playback, release the button.

Notes

- If the video equipment does not have a certain function, the corresponding button on this Remote Commander will not operate.
- If you set another manufacturer's code to a VTR1-2-3 MDP selector position (pp. 68 - 69), you must also set the Sony code to operate Sony equipment.

Caution


When you replace the batteries, do so within approximately 30 minutes. Otherwise the settings you made under the Pre-Programmed function (pp. 68 - 70) may be erased.

Operating non-Sony or Sony video equipment


Follow these instructions to set the manufacturer's code, which will enable you to operate non-Sony and Sony video equipment with the pre-programmed Remote Commander.

Example: Operate an RCA video cassette recorder connected to the VIDEO 2 IN jacks.

Remote Commander
(with video control cover open)

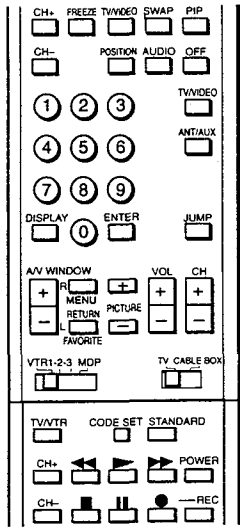


1 Set the VTR1-2-3 MDP selector to VTR2.



Note
To use another manufacturer's equipment besides a Sony VCR, set the selector to a position not being used for your Sony video equipment.

2 While pressing CODE SET, press 0, 7 and ENTER to set RCA's code number. (For manufacturer code numbers, see Figs. 5, 6 and 7 on p. 69.)



3 Use the video operating buttons to operate the connected equipment. (see Fig. 3 on p. 66 and Fig. 4 on p. 67.)

Fig. 5: VCR manufacturer code numbers

MANUFACTURER	CODE
SONY	01, 02, 03
CANON	05
EMERSON	22, 30, 33
FISHER	10, 11, 12, 15
FUNAI	29
GENERAL ELECTRIC	05, 08
GOLDSTAR	25
HITACHI	07, 08, 36
JVC	16, 35
MAGNAVOX	05, 06, 09
MITSUBISHI	18, 19, 26, 27
MULTITECH	29
NEC	16, 23, 31
PANASONIC	05, 06
PHILCO	05, 06
PHILIPS	05, 06, 09
QUASAR	05, 06
RCA	07, 08
SAMSUNG	24, 32
SANYO	11, 15
SCOTT	21
SHARP	13, 14
SHINTOM	34
SYLVANIA	05, 06, 09
SYMPHONIC	29
TEKNIKA	28, 29
TOSHIBA	20, 21
TOTE VISION	25
ZENITH	17

Fig. 6: MDP manufacturer code numbers

MANUFACTURER	CODE
SONY	04
KENWOOD	58
MAGNAVOX	52
MARANZ	54
MITSUBISHI	51
PANASONIC	55
PHILIPS	52
PIONEER	51
RCA	51
SANYO	57
SHARP	56
YAMAHA	53

Fig. 7: Sony Equipment and Code Numbers

SONY EQUIPMENT	CODE
Beta, ED Beta VCR	01
8 mm VCR	02
VHS VCR	03
Video disc player	04


Note
In some rare cases, you may not be able to operate your non-Sony video equipment with the supplied Remote Commander. This is because your equipment may use a code that is not provided with this Remote Commander. In this case, please use the equipment's own remote control unit.

Operating a cable converter box


Follow these instructions to set the manufacturer's code, which will enable you to operate a connected cable converter box with the pre-programmed Remote Commander.

Example: Operate a connected Zenith cable converter box.

Remote Commander
(with video control cover open)

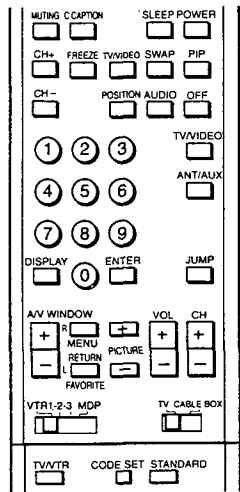

- 1 Set the TV/CABLE BOX selector to CABLE BOX.




Notes

- If more than one code number is listed, try entering them one by one, until you come to the correct code for your equipment.
- If you enter a new code number, the code number you previously entered at that setting is erased.
- In some rare cases, your equipment may use a code that is not provided with this Remote Commander and you may not be able to operate your cable converter box with the supplied Remote Commander. In this case, use the equipment's own remote control unit.

- 2 While pressing CODE SET, press 6 and 8 (Zenith's code number — see Fig. 8) and ENTER.



- 3 Use the projection TV control buttons (POWER, 0-9, ENTER and CH +/-) to operate the cable converter box.

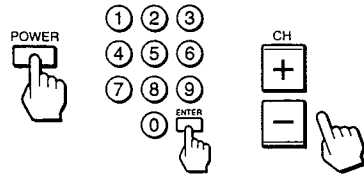

To return to the normal screen

Set the TV/CABLE BOX selector to TV; then use the projection TV control buttons to control the projection TV.

For more details on operating the cable box
Refer to the operating instructions that come with the cable box.

Fig. 8: Cable box manufacturer code numbers

MANUFACTURER	CODE
JERROLD	60, 61, 62, 63, 64, 65
PIONEER	69, 70
SCIENTIFIC ATLANTA	66, 67
TOCOM	71, 72
ZENITH	68


Selecting a VCR mode directly — DIRECT PLAY

Follow these instructions to switch from TV to VCR mode by simply pressing the ► (playback) button on the supplied Remote Commander.


Example: Connect your VCR to the VIDEO 2 IN jacks, and set the VTR1-2-3 MDP selector to VTR2. When you press ►, the input mode changes to the VCR connected to the VIDEO 2 IN jacks.

After completing the steps below, the VTR selector position is retained in the projection TV's memory.

Remote Commander (with video control cover open)

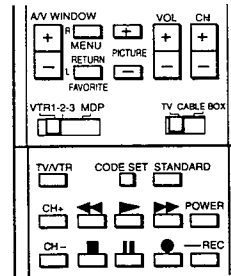


- 1 Press MENU.
The main menu appears.

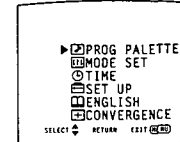


- 2 Press AV WINDOW +/- until the cursor points to "SET UP".

- 3 Press RETURN.
The set up menu appears.

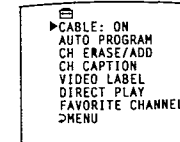

- 4 Press AV WINDOW +/- until the cursor points to "DIRECT PLAY."

- 5 Press RETURN.
A message screen appears.

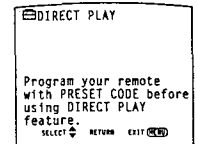

Note

This screen reminds you to set the manufacturer's code, if you have not already done so (pp. 68-69).

- 6 Press RETURN again.
The DIRECT PLAY screen appears.




- 7 Press AV WINDOW +/- until the cursor points to the video input mode. (When the video equipment is connected to VIDEO 1 IN, select "VIDEO1.")

- 8 Press RETURN.
The mode display turns red.


(Continued)

Selecting a VCR mode directly – DIRECT PLAY
(Cont'd. from prev. page)

Remote Commander

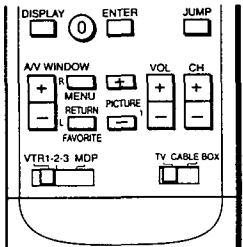

9 Press A/V WINDOW +/- to select the VTR selector mode you have set on the Remote Commander. (When the VTR1-2-3 MDP selector is set to VTR2, select "VTR 2.")
Each time you press A/V WINDOW +/-, "VTR 1," "VTR 2," "VTR 3," "MDP" and "OFF" appear in sequence.

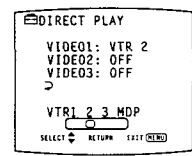

10 Press RETURN.
The direct play setting is complete.

To set direct play for other connected video equipment
Repeat steps 7 – 10.



To return to the previous menu
Press A/V WINDOW +/- until the cursor points to " > MENU."
Then press RETURN.

To return to the main menu
Repeat the above, until you reach the main menu.

To return to the normal screen.
Press MENU.


1-17. TROUBLESHOOTING

Disturbances in picture and sound can often be eliminated by checking the symptoms and following the suggestions listed here. If the problem still cannot be solved, contact your nearest service facility.


Symptom	Possible causes and remedies
No picture (screen not lit), no sound	<ul style="list-style-type: none"> • Make sure POWER is switched on. • Check the power cord connection. • Check that the TV/VIDEO and VTR1-2-3 MDP controls are set correctly. • Make sure that the TV/CABLE BOX selector is set to TV.
Poor or no picture (screen not lit), good sound	<ul style="list-style-type: none"> • Adjust the picture using the VIDEO screen (pp. 44 – 47). • Check the antenna/cable connections. • Adjust the color registration (pp. 24 – 25).
Good picture, no sound	<ul style="list-style-type: none"> • Press VOLUME + on the projection TV or VOL + on the Remote Commander. • Press MUTING on the Remote Commander. • Check the MTS setting (p. 51). • Check that the TV/VIDEO and VTR1-2-3 MDP controls are set correctly. • Make sure SPEAKER is set correctly (p. 52).
No color for color programs	<ul style="list-style-type: none"> • Check the HUE and COLOR settings (pp. 44 – 45).
Snow and noise only	<ul style="list-style-type: none"> • Check that it is an active or correct channel. • Check the cable setting. • Check antenna/cable connections.
 Dotted lines or stripes	This is often caused by local interference (for example, cars, neon signs and hairdryers). Adjust the telescopic aerial for minimum interference.
 Double images or ghosts	Reflections from nearby mountains or buildings often cause this problem. Connecting a highly directional outdoor antenna or a CATV cable may improve the picture.
Remote control does not operate	<ul style="list-style-type: none"> • Check the battery in the Remote Commander.
No picture and/or sound for the connected equipment	<ul style="list-style-type: none"> • Check that the TV/VIDEO button is set correctly. • Check that the connections are properly made. • Check that the power of the connected equipment is turned on. • Check that the connected equipment is set correctly.
Try another channel. It could be station trouble.	

SECTION 2 DISASSEMBLY


2-1. H1 AND H2 BOARDS REMOVAL

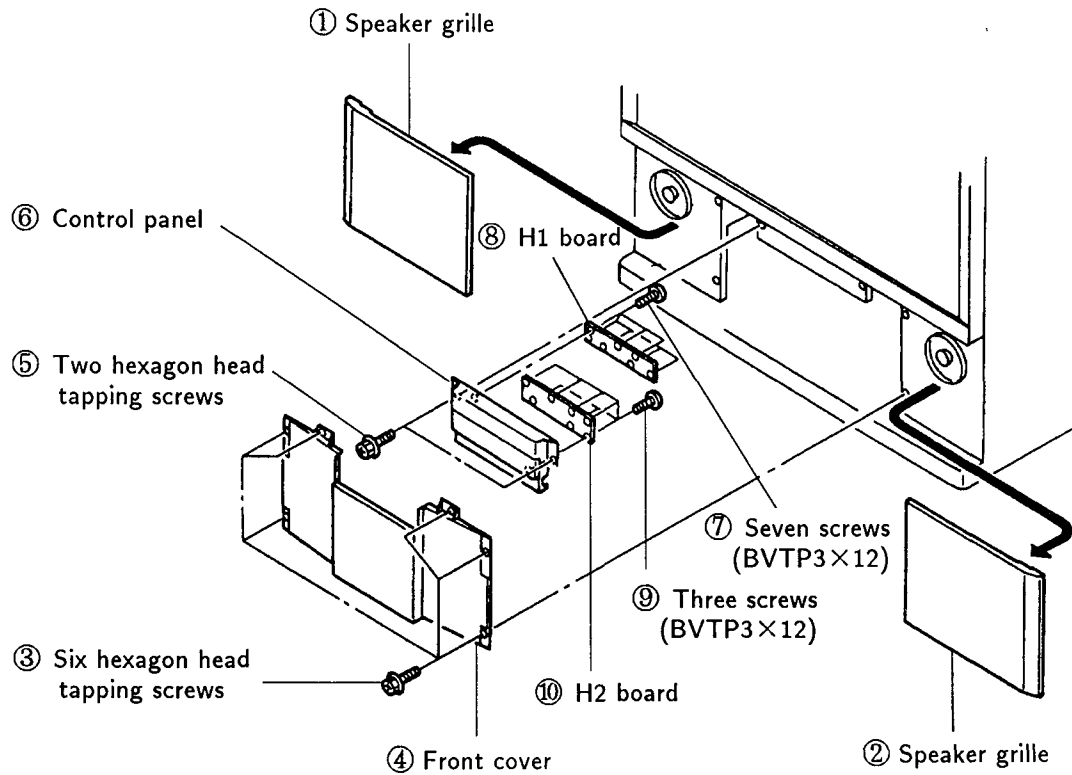


2-2. D BOARD REMOVAL

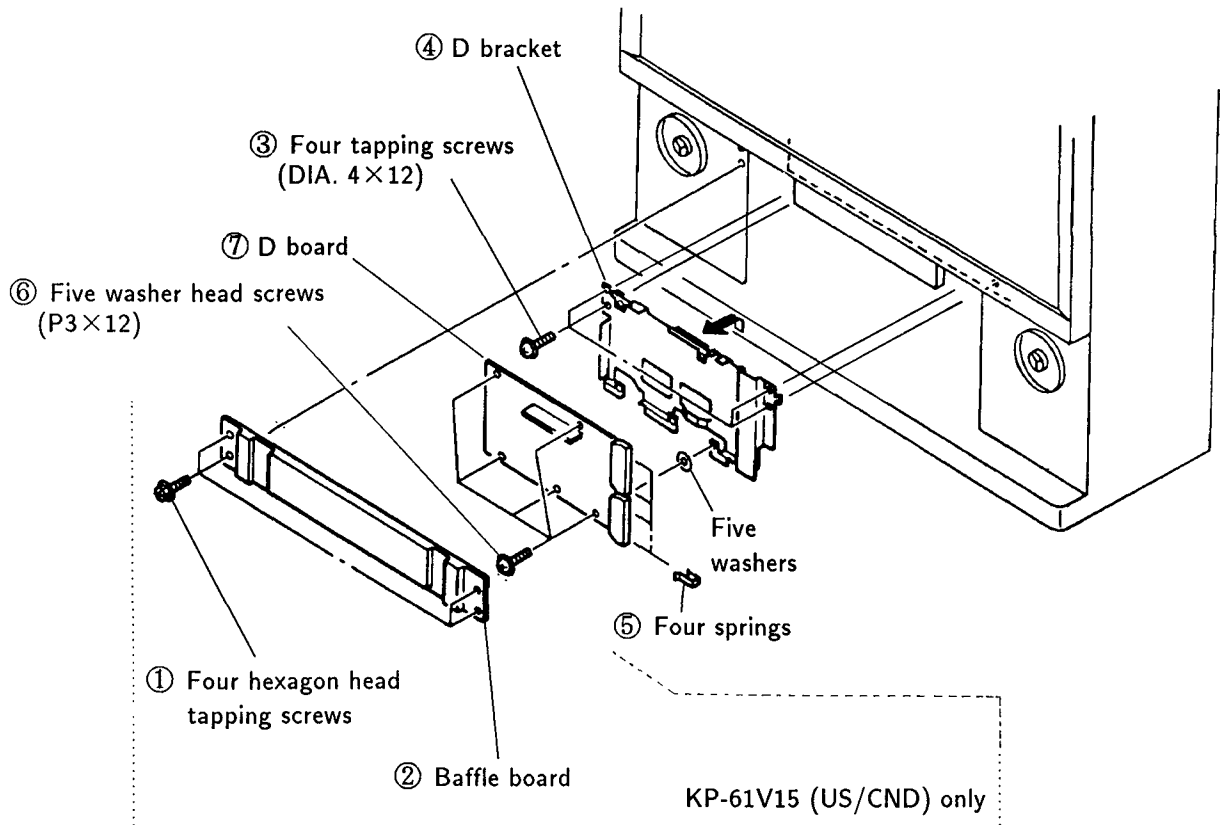


2-3-1. DIFFUSION PLATE REMOVAL (KP-46V15 (US/CND)/46V16 only)

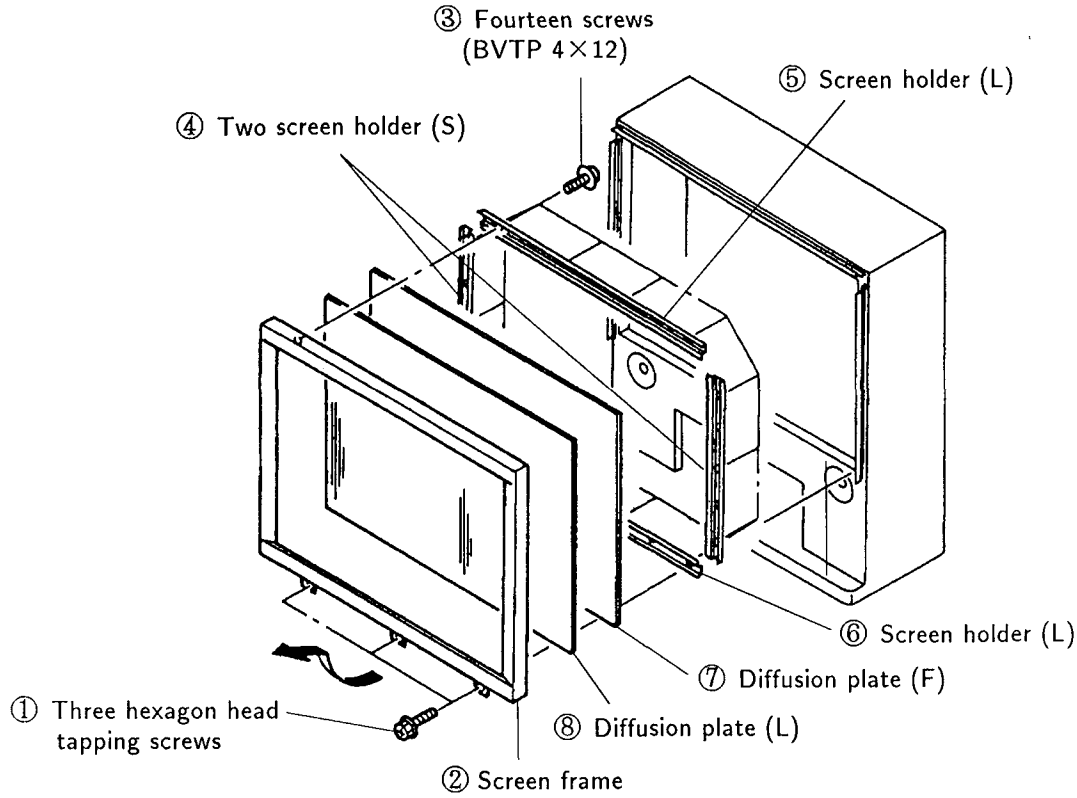


2-3-2. DIFFUSION PLATE REMOVAL (KP-53V15/53V16/61V15 (US/CND) only)

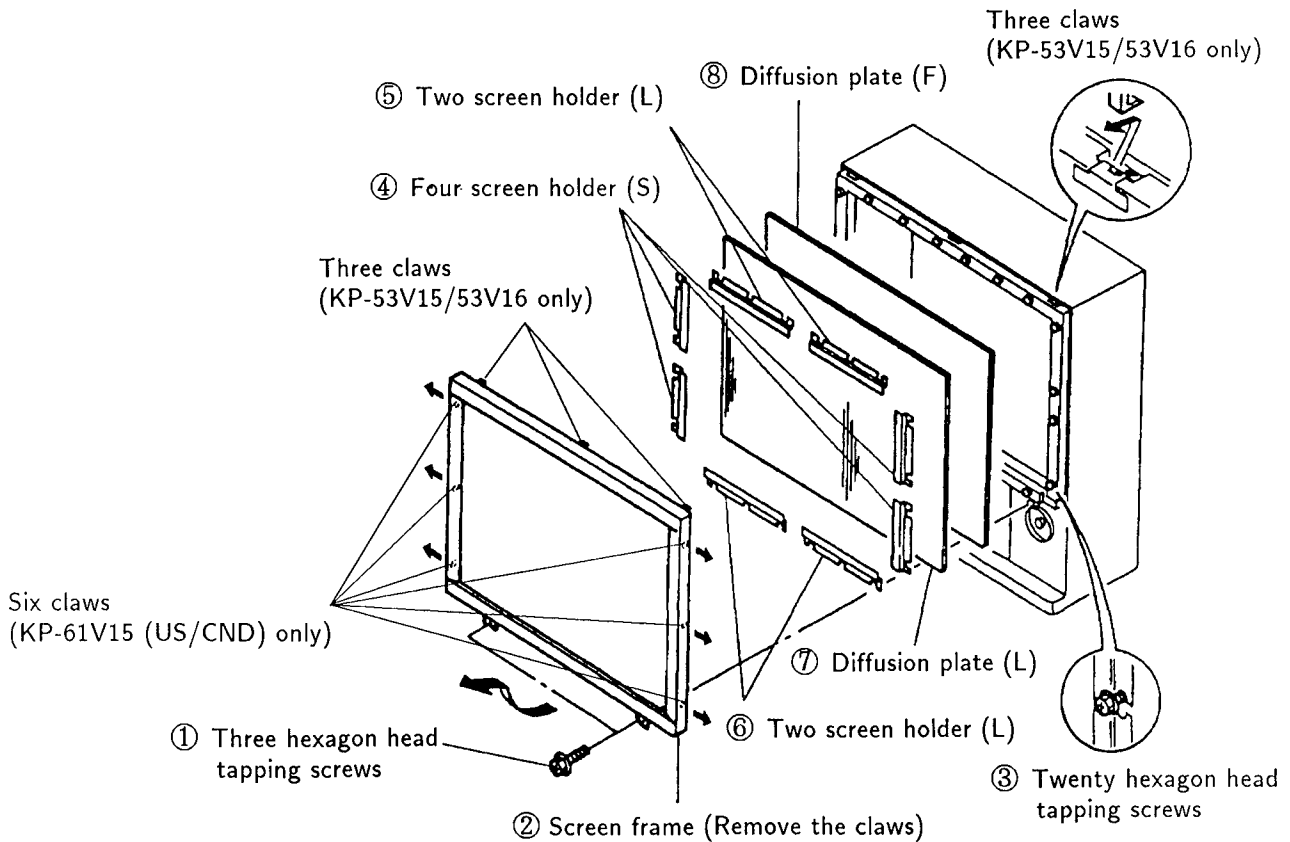


2-4. BACK COVER REMOVAL

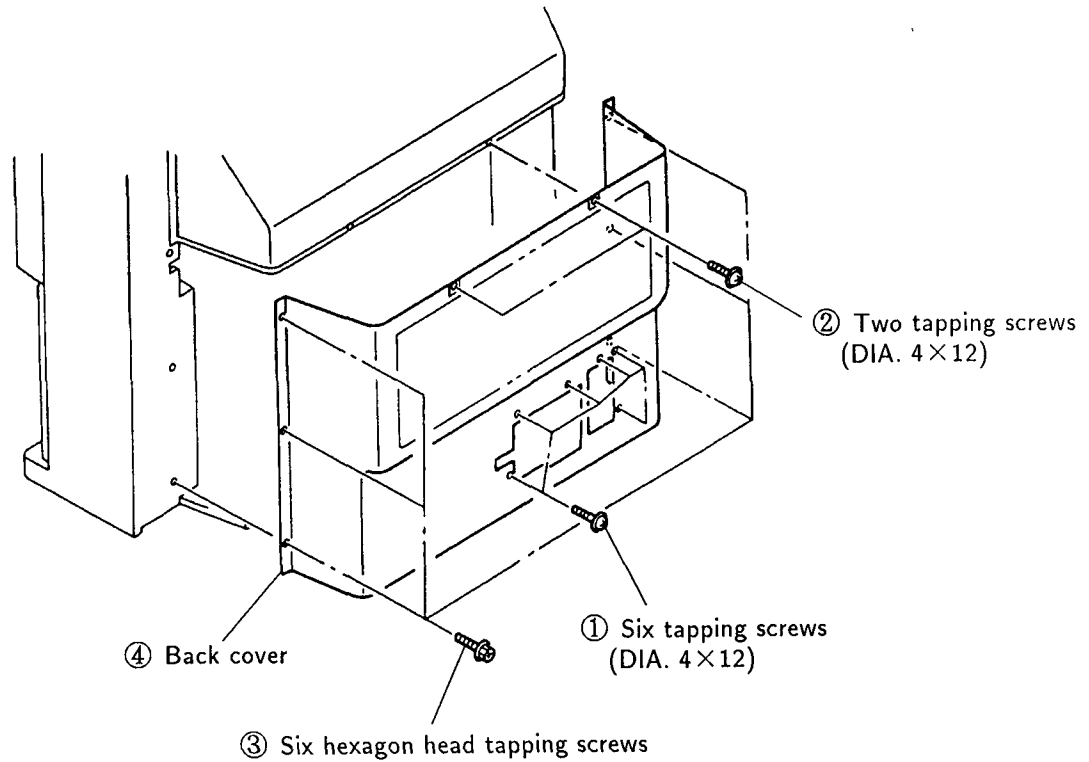

2-5. MAIN CHASSIS ASSY REMOVAL

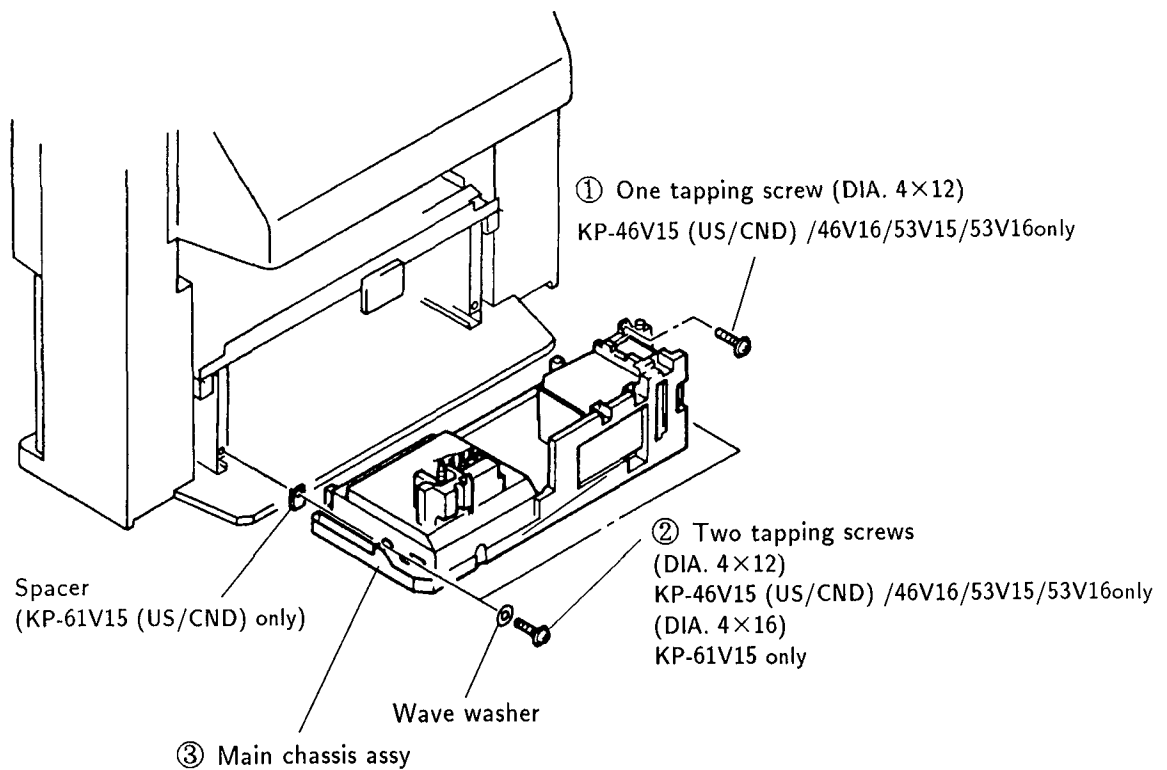

2-6. SERVICE POSITION

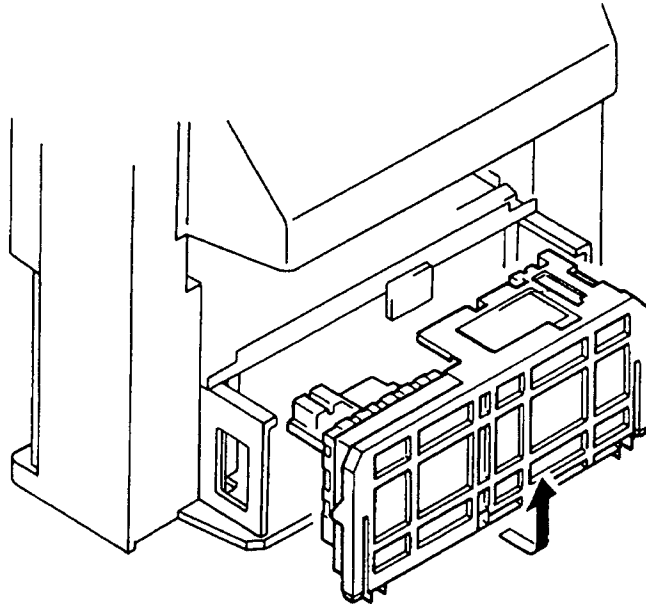

NOTES INSERTED IN SERVICE POSITION SECTION

Service Position Procedure



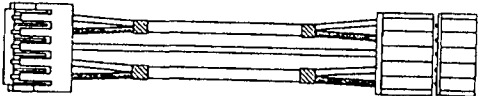
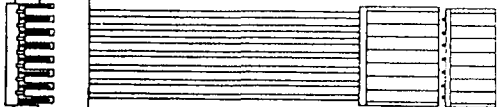
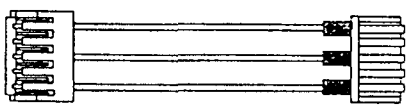
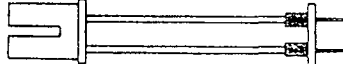
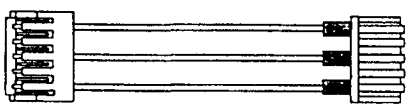
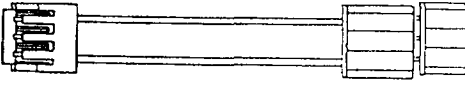
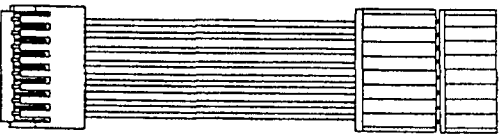
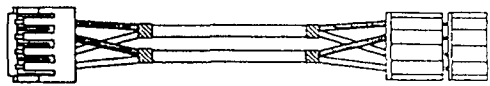
- (1) Remove the path locks where the harness comes into.
(MAIN bracket, G shield)
- (2) Remove the following connectors before removing the main bracket.
* HV grounding lead, G shield grounding lead, uT35 grounding lead (uT board), V-2 connector (V board).
- (3) Remove the main bracket. (Take care as the connector leads linking to the C and Z boards are considerably short.)
(MAIN bracket, G shield)
- (4) When pulling out the main bracket with power ON, be sure to connect the connectors removed.
* HV grounding lead, G shield grounding lead, uT35 grounding lead (uT board).

In case that grounding lead (Black) of HV Block is not connected with chassis grounding, it causes arcing of CRT and it is dangerous.


Be sure to connect grounding lead of HV Block with chassis grounding.

CONNECTOR CABLES


※ In order to put the set in the service position, use the extension connector cables below.
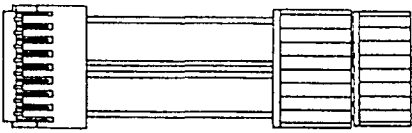
<table border="1"> <thead> <tr> <th>Parts No.</th> <th>Connection</th> </tr> </thead> <tbody> <tr> <td>1-941-897-38</td> <td>CB-4 (G-4)</td> </tr> </tbody> </table> <p>1: Brown 2: — 3: — 4: Yellow 5: Green 6: — 7: — 8: Gray</p>  <p>White L=140 White</p>	Parts No.	Connection	1-941-897-38	CB-4 (G-4)	<table border="1"> <thead> <tr> <th>Parts No.</th> <th>Connection</th> </tr> </thead> <tbody> <tr> <td>1-941-897-43</td> <td>CR-15 (A-15)</td> </tr> </tbody> </table> <p>1: White/Gray 2: Gray/Shield 3: Orange 4: Red/Gray 5: Gray/Shield</p>  <p>Red L=180 Red</p>	Parts No.	Connection	1-941-897-43	CR-15 (A-15)
Parts No.	Connection								
1-941-897-38	CB-4 (G-4)								
Parts No.	Connection								
1-941-897-43	CR-15 (A-15)								
<table border="1"> <thead> <tr> <th>Parts No.</th> <th>Connection</th> </tr> </thead> <tbody> <tr> <td>1-941-897-39</td> <td>CG-16 (A-16)</td> </tr> </tbody> </table> <p>1: White/Gray 2: Gray/Shield 3: Orange 4: Red/Gray 5: Gray/Shield</p>  <p>Yellow L=110 Yellow</p>	Parts No.	Connection	1-941-897-39	CG-16 (A-16)	<table border="1"> <thead> <tr> <th>Parts No.</th> <th>Connection</th> </tr> </thead> <tbody> <tr> <td>1-941-897-44</td> <td>ZR-1 (D-1)</td> </tr> </tbody> </table> <p>1: Brown 2: Red 3: Orange 4: Yellow 5: Green 6: Blue 7: Violet</p>  <p>White L=150 White</p>	Parts No.	Connection	1-941-897-44	ZR-1 (D-1)
Parts No.	Connection								
1-941-897-39	CG-16 (A-16)								
Parts No.	Connection								
1-941-897-44	ZR-1 (D-1)								
<table border="1"> <thead> <tr> <th>Parts No.</th> <th>Connection</th> </tr> </thead> <tbody> <tr> <td>1-941-897-40</td> <td>ZG-19 (A-19)</td> </tr> </tbody> </table> <p>1: Green 2: — 3: Black 4: — 5: Brown</p>  <p>White L=150 White</p>	Parts No.	Connection	1-941-897-40	ZG-19 (A-19)	<table border="1"> <thead> <tr> <th>Parts No.</th> <th>Connection</th> </tr> </thead> <tbody> <tr> <td>1-941-897-45</td> <td>A-21 (CRT BRACKET)</td> </tr> </tbody> </table> <p>1: Black 2: Black</p>  <p>White L=40 White</p>	Parts No.	Connection	1-941-897-45	A-21 (CRT BRACKET)
Parts No.	Connection								
1-941-897-40	ZG-19 (A-19)								
Parts No.	Connection								
1-941-897-45	A-21 (CRT BRACKET)								
<table border="1"> <thead> <tr> <th>Parts No.</th> <th>Connection</th> </tr> </thead> <tbody> <tr> <td>1-941-897-41</td> <td>ZR-18 (A-18)</td> </tr> </tbody> </table> <p>1: Red 2: — 3: Black 4: — 5: Brown</p>  <p>White L=150 White</p>	Parts No.	Connection	1-941-897-41	ZR-18 (A-18)	<table border="1"> <thead> <tr> <th>Parts No.</th> <th>Connection</th> </tr> </thead> <tbody> <tr> <td>1-941-897-46</td> <td>V-2 (ZR-3)</td> </tr> </tbody> </table> <p>1: Brown 2: — 3: Red</p>  <p>Red L=200 Red</p>	Parts No.	Connection	1-941-897-46	V-2 (ZR-3)
Parts No.	Connection								
1-941-897-41	ZR-18 (A-18)								
Parts No.	Connection								
1-941-897-46	V-2 (ZR-3)								
<table border="1"> <thead> <tr> <th>Parts No.</th> <th>Connection</th> </tr> </thead> <tbody> <tr> <td>1-941-897-42</td> <td>ZG-2 (D-2)</td> </tr> </tbody> </table> <p>1: — 2: Red 3: Orange 4: Yellow 5: Green 6: Blue 7: Violet 8: Gray</p>  <p>White L=130 White</p>	Parts No.	Connection	1-941-897-42	ZG-2 (D-2)	<table border="1"> <thead> <tr> <th>Parts No.</th> <th>Connection</th> </tr> </thead> <tbody> <tr> <td>1-941-897-47</td> <td>A-3 (YG-3)</td> </tr> </tbody> </table> <p>1: Red 2: White 3: Gray/Shield 4: Black</p>  <p>Red L=100 Red</p>	Parts No.	Connection	1-941-897-47	A-3 (YG-3)
Parts No.	Connection								
1-941-897-42	ZG-2 (D-2)								
Parts No.	Connection								
1-941-897-47	A-3 (YG-3)								


2-7. P3 BOARD REMOVAL

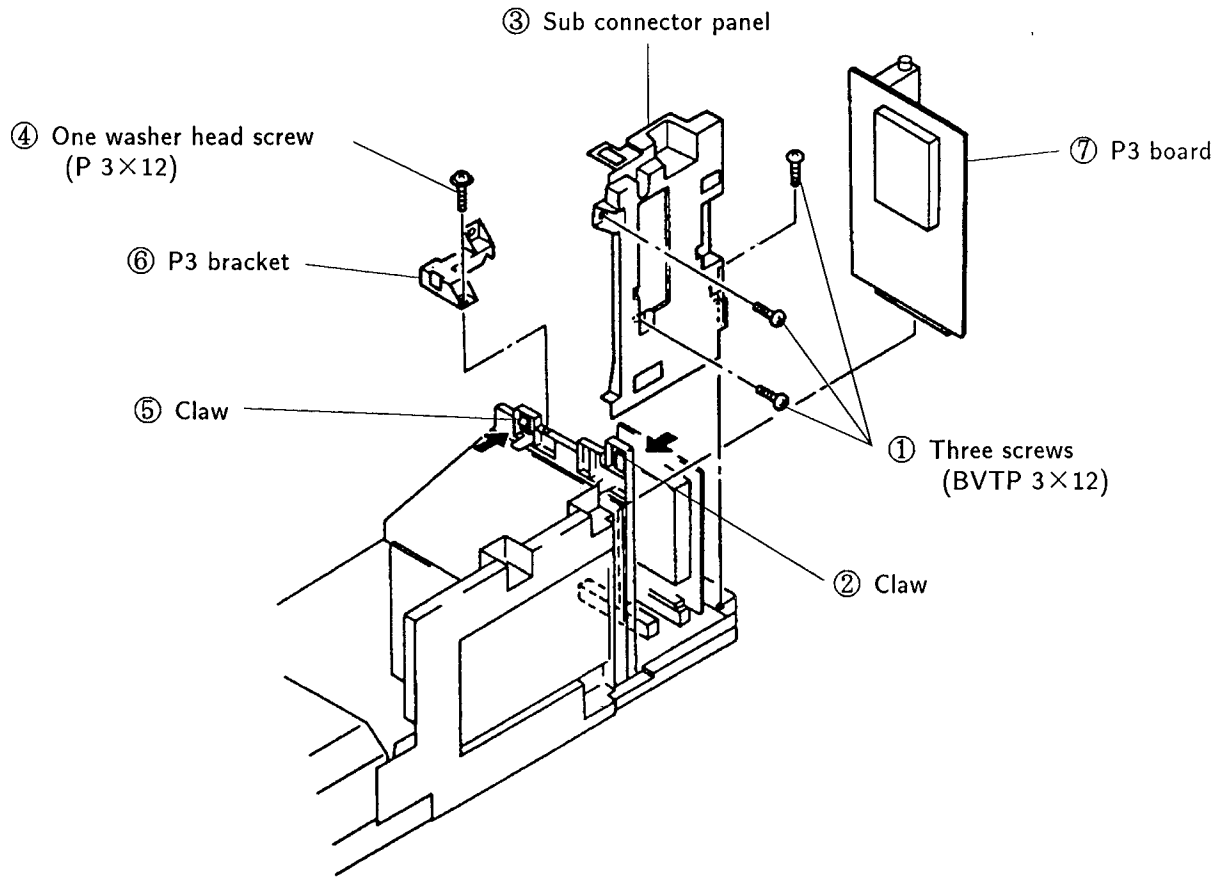


2-8. MAIN CONNECTOR PANEL REMOVAL

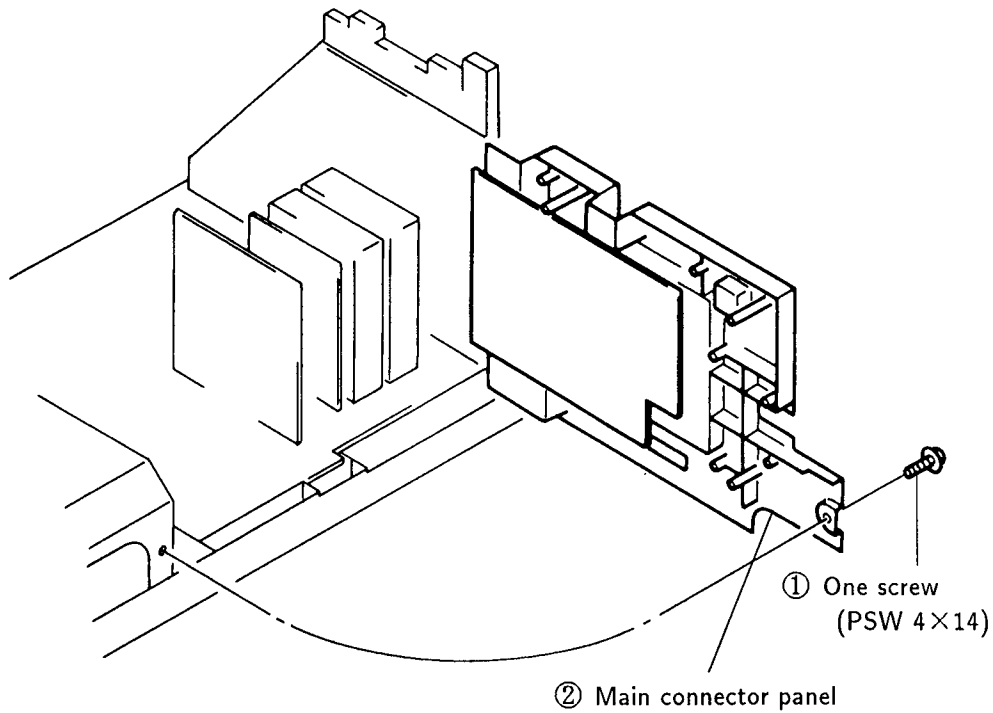


2-9. U BOARD REMOVAL

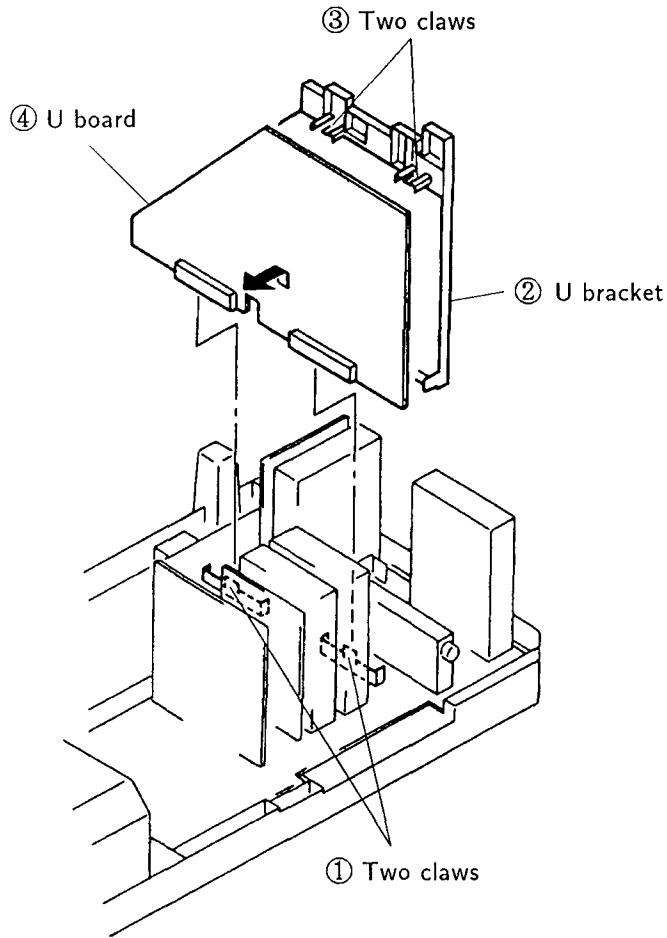


2-10. V BOARD REMOVAL

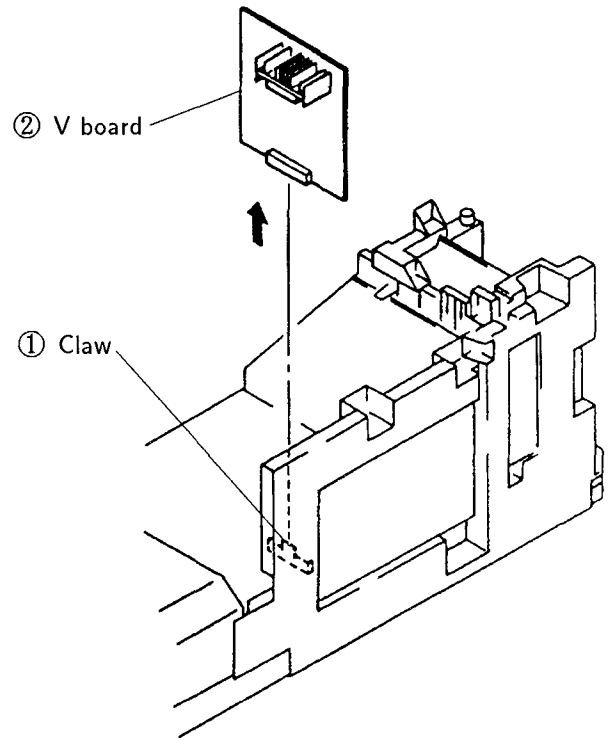

2-11. N BRACKET REMOVAL

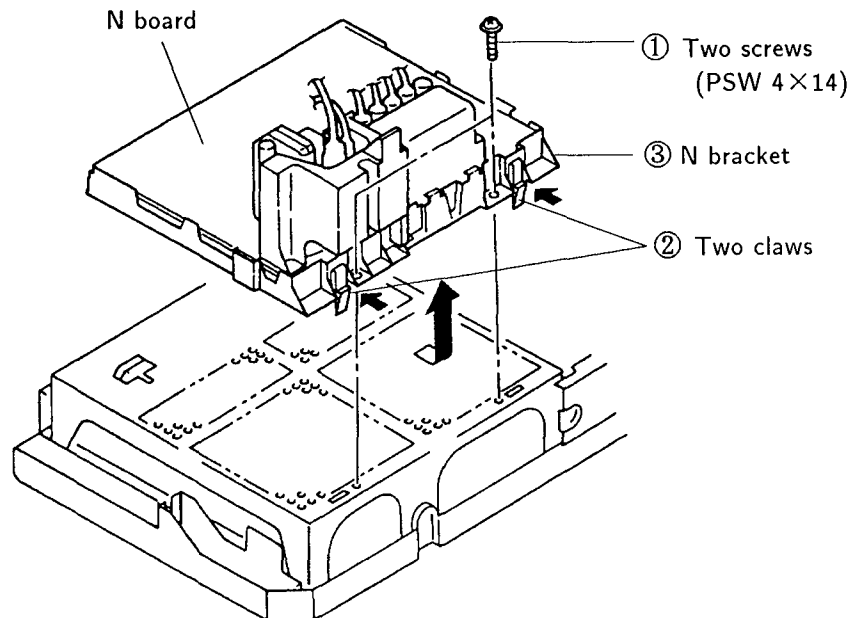


2-12. G BOARD REMOVAL

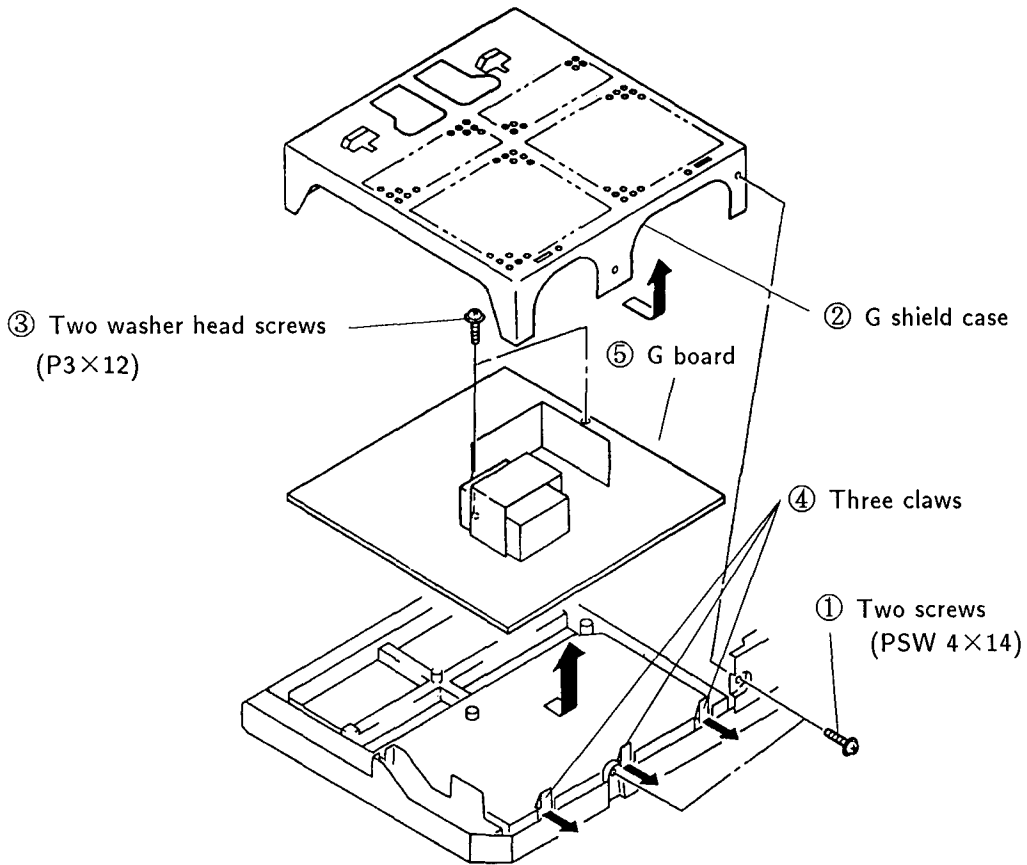


2-13. HIGH-VOLTAGE CABLE INSTALLATION AND REMOVAL


(1) Remover

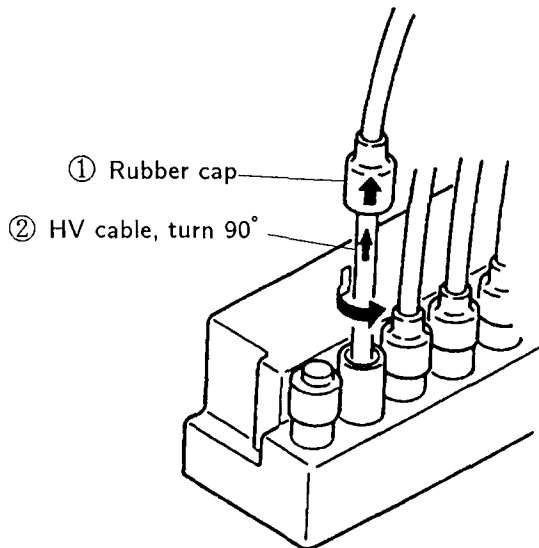

(2) Installation

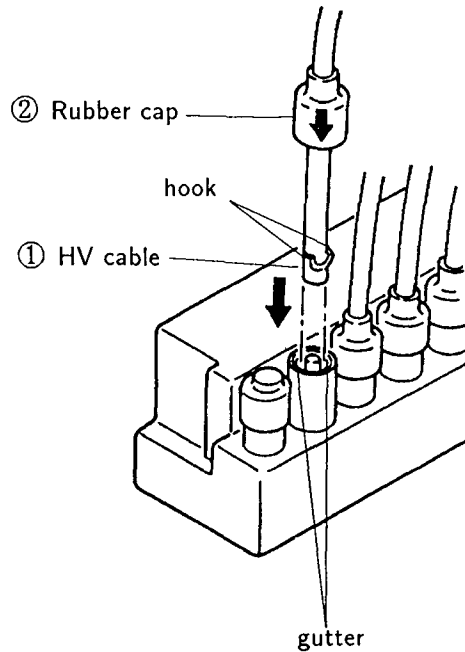


2-14-1. CONNECTOR CABLE

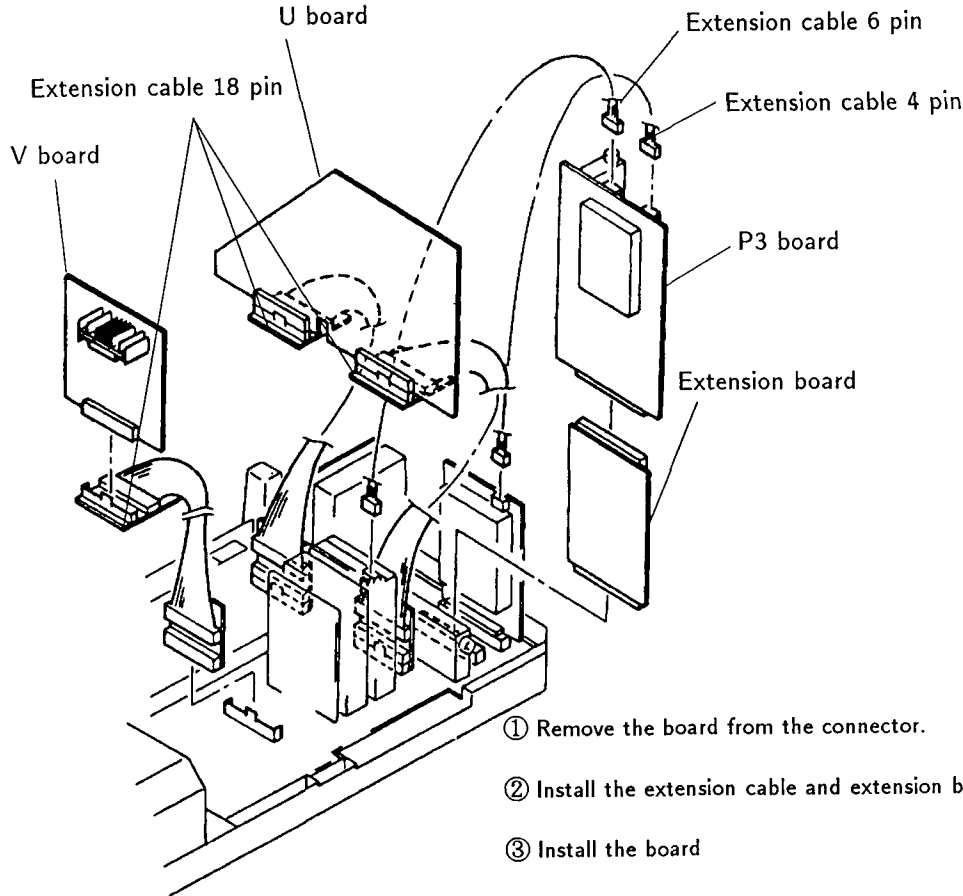


Exterior	
Extension cable	4 pin
1-941-891-33	6 pin
1-941-891-31	7 pin
1-941-891-32	18 pin
3-702-558-01	10 pin
3-702-557-01	36pin connector
3-702-561-01	50pin connector
3-702-560-01	36/50 pin
3-702-559-01	36/50 pin
36/50 pin	Extension board


2-14-2. CONNECTOR CABLE

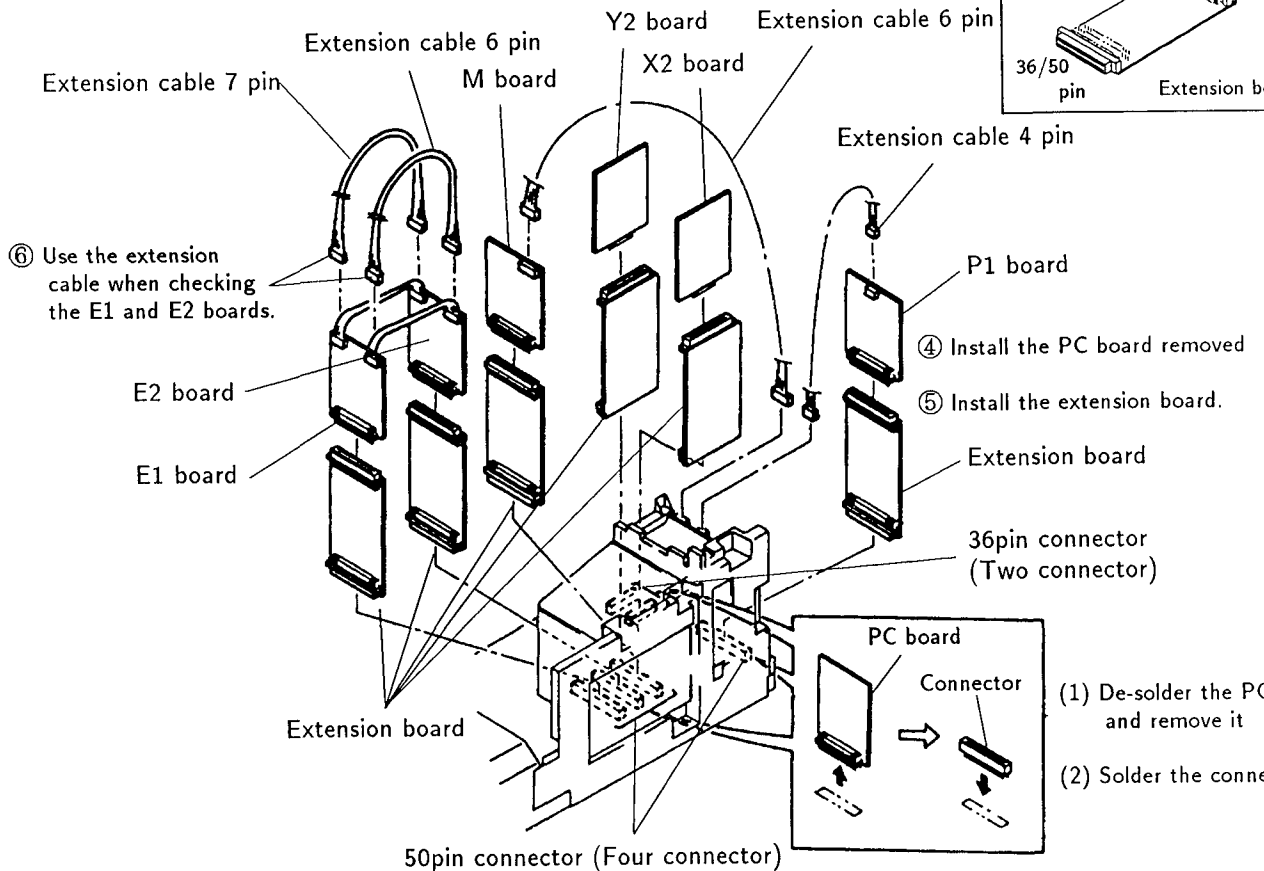

2-15. CHASSIS ASSY REMOVAL

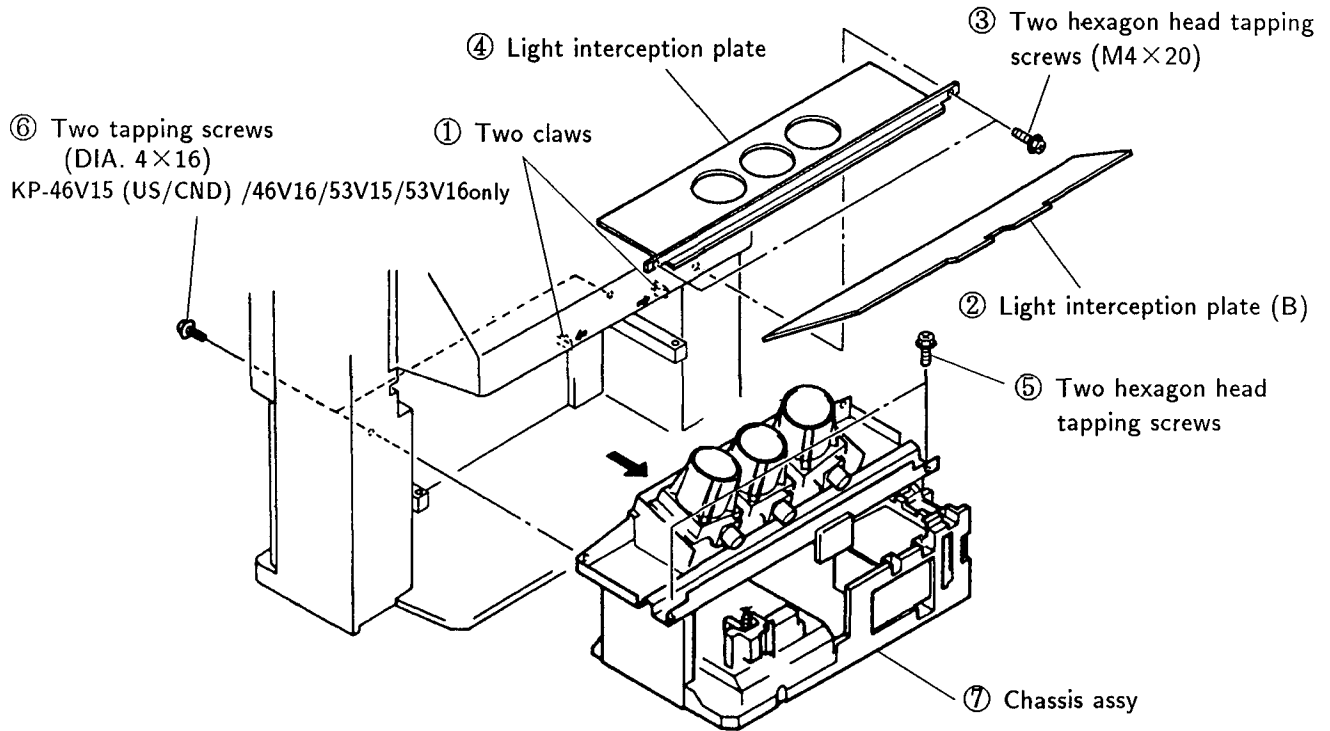



2-16. PICTURE TUBE REMOVAL

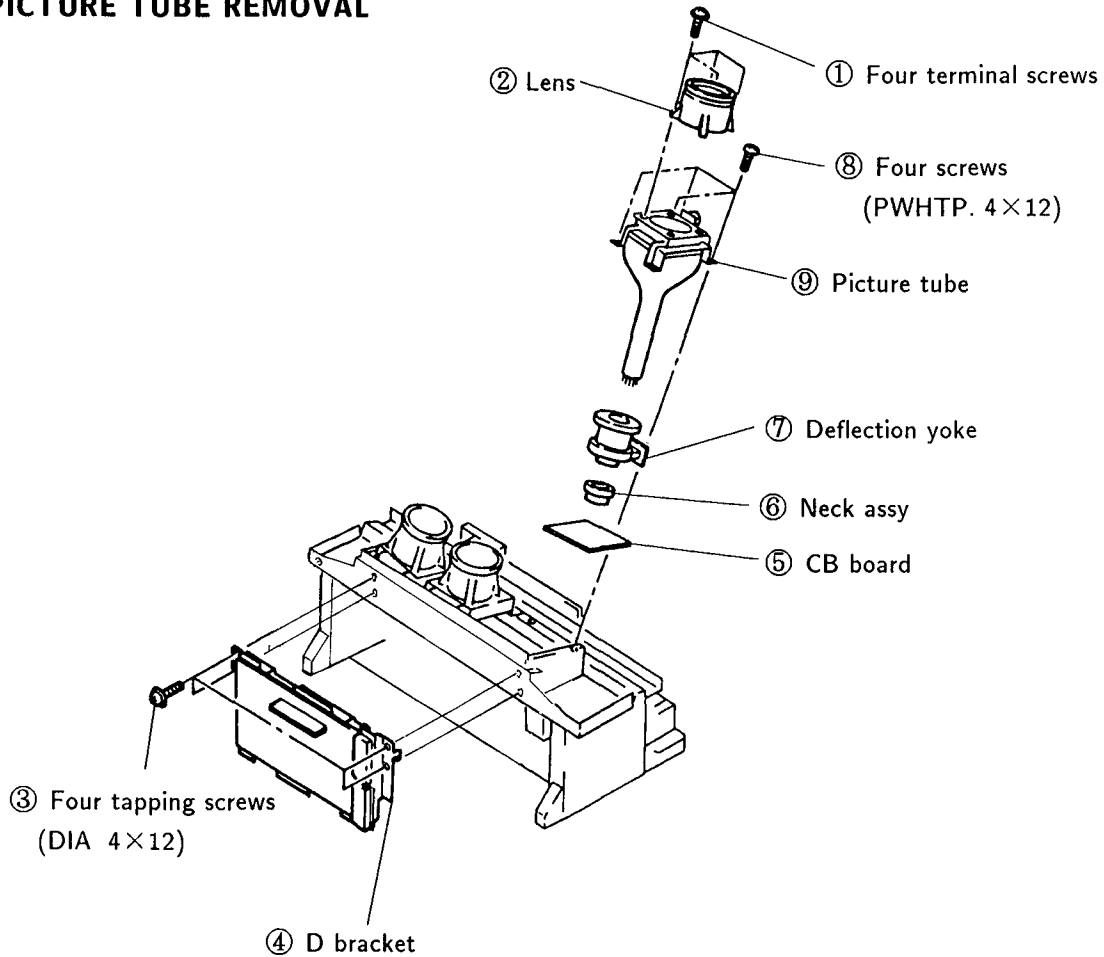


SECTION 3 SET-UP ADJUSTMENTS

3-1. FOCUS LENS ADJUSTMENTS

1. Set the D-board registration variable resistors (VR) to mechanical center.
2. Set the centering magnets (for red, green, and blue) to 0 as shown in the figure.

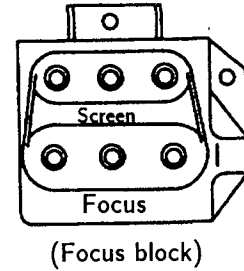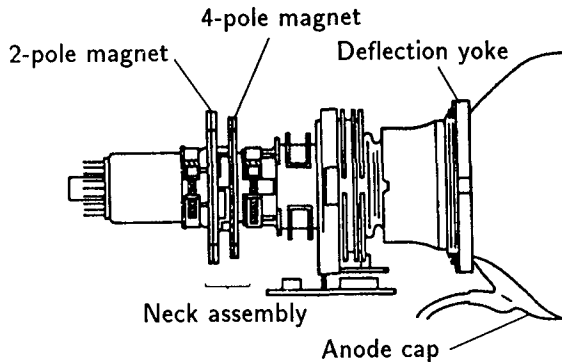


Verify that scanning lines are seen.

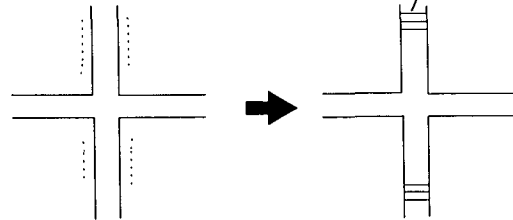


3. Input monoscope signal. Set 50% BRIGHTNESS and minimum PICTURE. Make rough adjustment so that 10IRE of the monoscope signal becomes faintly luminous using the screen VRs.
4. Set PICTURE and BRIGHTNESS maximum. Press the commander menu button. Select CONVERGENCE to display test signal.
5. Enter service mode. Select R OFF of SERVICE MODE to cut off red output. Similarly, select B OFF to cut off blue output.
6. Turn the green lens to eliminate flare of the test signal.

7. Turn the green focus VR in the focus block to adjust green focus to reduce both A and B of the test signal to minimum.

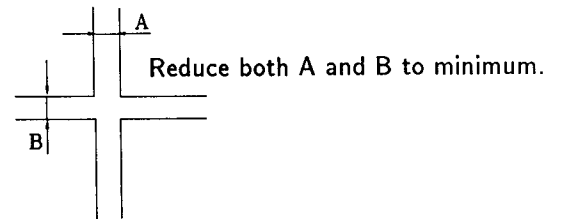

8. Repeat above 6 and 7. Couple of times to improve tracking and obtain an optimum focus. Then tighten the green lens screw.
9. Adjust the red and blue focuses similarly.

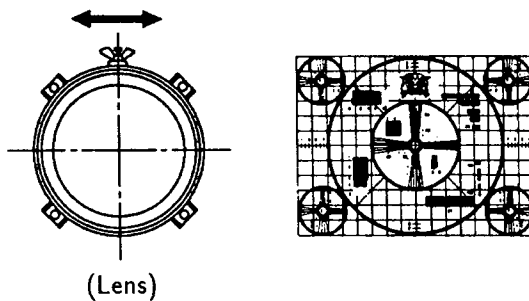


3-2. DEFLECTION YOKE POSITION ADJUSTMENTS

1. Input monoscope signal.
2. Enter service mode. Select R OFF of SERVICE MODE to cut off red output. Similarly, select B OFF to cut off blue output.
3. Loosen the deflection yoke (DY) fitting screws. Tilt the DY to obtain the best horizontal and vertical monoscope patterns.
4. After adjustment, press the DY onto the cathode ray tube (CRT) funnel and tighten the screws.
5. Also adjust DY positions for red and blue outputs in the same way.

3-3. 2-POLE MAGNET ADJUSTMENT

1. Input dot signal.
2. Enter service mode. Select R OFF of SERVICE MODE to cut off red output.
 Similarly, select B OFF to cut off blue output.
3. Set PICTURE to maximum. Turn the green focus variable resistor (VR) in the focus block counterclockwise from the just focus to brighten the point in the dot.
4. Adjust the 2-pole magnet to position the bright point at the center of the dot.
5. Adjust the red and blue dots in the same way.


* Use the center dot:red and green
 Use the vertical center and left end dot :blue

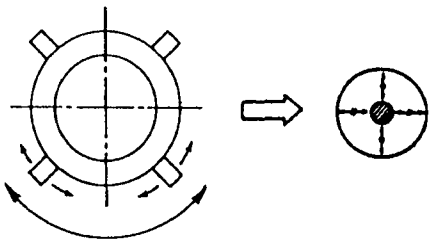

3-4. 4-POLE MAGNET ADJUSTMENT


1. Input dot signal.
2. Enter service mode. Select R OFF of SERVICE MODE to cut off red output.
 Similarly, select B OFF to cut off blue output.
3. Set PICTURE to maximum. Turn the green focus variable resistor (VR) in the focus block clockwise (count clockwise:blue) from the just focus until the dot diameter becomes as shown below.
4. Adjust the 2-pole magnet to make the dot perfectly round.
5. Turn the green focus variable resistor to the just focus.
6. Adjust the red and blue dot in the same way.

* Use the center dot : red and green
 Use the vertical center and left end dot : blue

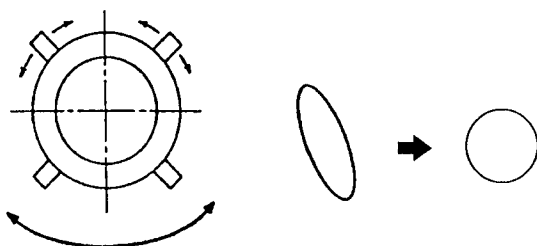

3-5. DE-FOCUS ADJUSTMENT (BLUE)

1. Input cross hatch signal.
2. Turn the blue focus variable resistor (VR) in the focus block counter clock wise so that the width of the left end vertical line becomes as shown below

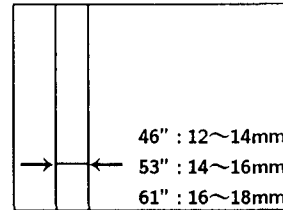



without flare


3-6. GREEN PICTURE ADJUSTMENTS


1. Input monoscope signal.
2. Enter service mode. Select R OFF of SERVICE MODE to cut off red output.
 Similarly, select B OFF to cut off blue output.
3. Turn RV913 and RV960, the vertical green linearity variable resistors (V.G LIN VRs) on the D-board, to obtain an optimum vertical linearity. Then turn RV911, the vertical green amplitude variable resistor (V.G SIZE VR) to set vertical amplitude to 11.7 frames.

Note: The vertical position indicator of the monoscope signal must be positioned at the center by adjusting RV905, the vertical green center position variable resistor (V.G CENT VR) in advance.

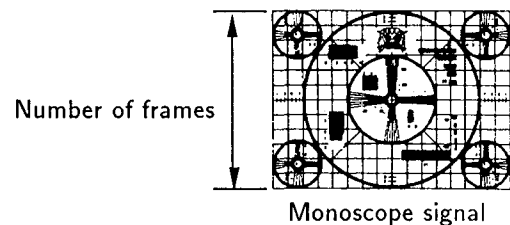


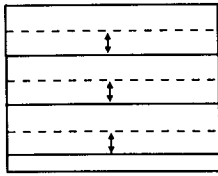


 RV905 V.G CENT
 (vertical position)

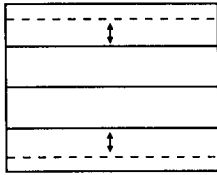



 RV911 V.G SIZE
 (vertical amplitude)

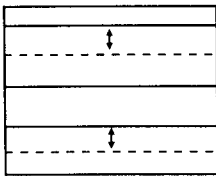


 RV913 V.G LIN
 (vertical linearity)


5. Verify that the horizontal lines on the top and bottom of cross-hatched area of the monoscope signal are horizontal and linear.

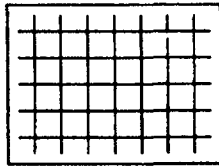


6. Turn RV916, RV964 and RV969, the horizontal green linearity variable resistors (H.G LIN VRs) on the D-board, to obtain an optimum horizontal linearity.


Then turn RV908, the horizontal green amplitude variable resistor (H.G SIZE VR) to set horizontal amplitude to 15.6 frames.


Note: The horizontal position indicator of the monoscope signal must be positioned at the center by adjusting RV902, the horizontal green center position variable resistor (V.G CENT VR) in advance.

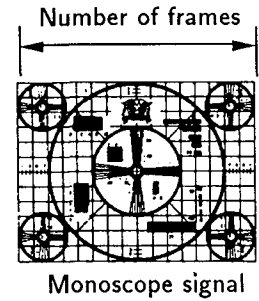

Monoscope signal

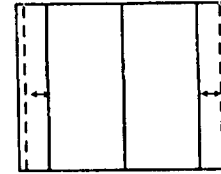


 RV908 H.G SIZE
 (horizontal position)

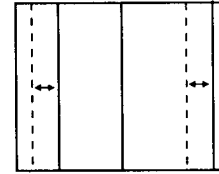


 RV916 H.G LIN
 (horizontal linearity)


7. Input cross hatch signal.

Turn vertical green (V.G) and horizontal green (H.G) variable resistors (VRs) and make adjustments according to the following steps :


(Adjustment procedure)

1. [BOW] → [SKEW] → [CENT (center position)]
2. [PIN (pin warp)] → [SUB BOW] → [BOW]
3. [KEYS (trapezoid)] → [SUB SKEW] → [SKEW]
4. [M.WAVE (middle sine wave warp)] →
 [WAVE-A (upper and lower sine wave warp)] →
 [WAVE-U (upper sine wave warp)]
 ※ For vertical (V) only.
5. [V-M.PIN (vertical middle pin warp)] →
 [V/WING (vertical wing warp)]
 ※ For vertical (V) only.
6. [H-M.PIN (horizontal middle pin warp)]
 ※ For horizontal (H) only.


(Dot motion)

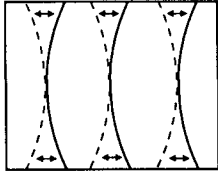



 RV932 H.G BOW
 (horizontal green bow)

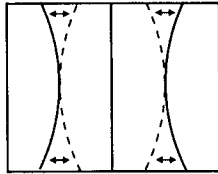



 RV941 H.G PIN
 (horizontal green pin warp)

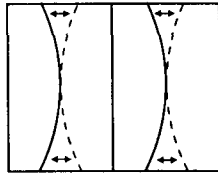


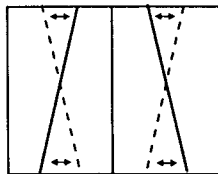

 RV950 H.G SUB BOW
 (horizontal green sub bow)

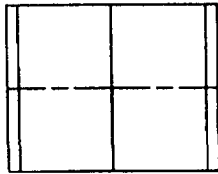


V.G BOW.....RV935
 V.G PIN.....RV938
 V.G SUB BOW.....RV953

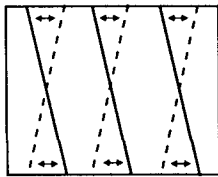


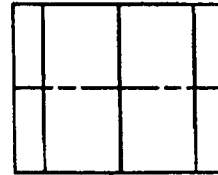

 RV920 H.G SKEW
 (horizontal green skew)





 RV925 H.G KEYS
 (horizontal green trapezoid)

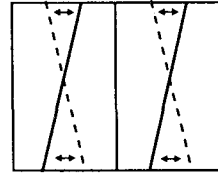


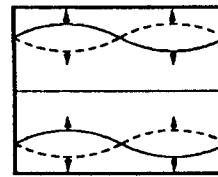

 RV944 H.G SUB SKEW
 (horizontal green sub skew)




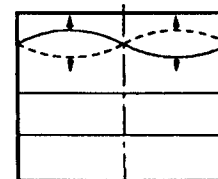
V.G SKEW.....RV923
 V.G KEYS.....RV929
 V.G SUB SKEW.....RV947

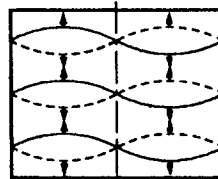


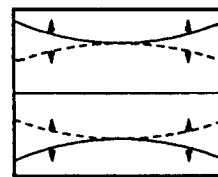

 RV962 V-M-WAVE
 (vertical middle sine wave warp)




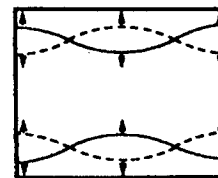

 RV975 V-WAVE-A
 (vertical upper and lower sine wave warp)




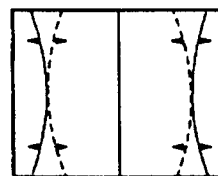

 RV978 V-WAVE-U
 (vertical upper sine wave warp)





 RV980 V-M. PIN
 (vertical middle pin warp)
 ※ Common in red, green, and blue




 RV957 V/WING
 (wing warp)
 ※ Common in red, green, and blue




 RV956 H/M. PIN
 (horizontal middle pin warp)


3-7. GREEN AND RED REGISTRATION ADJUSTMENTS

1. Input cross hatch signal.
2. Enter service mode. Select B OFF of SERVICE MODE to cut off blue output.
3. Turn the vertical red (V.R) and horizontal red (H.R) variable resistors (VRs) to adjust red picture convergence in relation to green picture according to the following steps :


(Adjustment procedure)


1. [LIN (linearity)] → [SIZE (amplitude)] → [CENT (center position)]
2. [BOW] → [SKEW] → [CENT (center position)]
3. [PIN (pin warp)] → [SUB BOW] → [BOW] [H/M. PIN (horizontal middle pin warp)]
4. [KEYS (trapezoid)] → [SUB SKEW] → [SKEW]
5. [M.WAVE (middle sine wave warp)] → [WAVE-A (upper and lower sine wave warp)] → [WAVE-U (upper sine wave warp)]


(Dot motion)

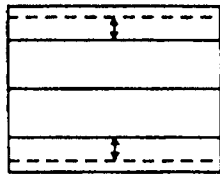


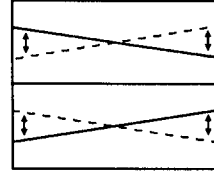

 RV912 V.B SIZE
 (vertical red amplitude)

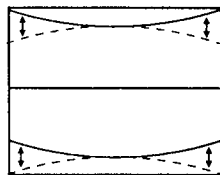



 RV952 V.R SUB BOW
 (vertical red sub bow)

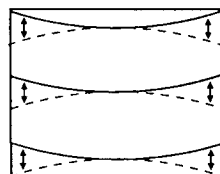


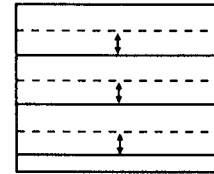

 RV943 V.R BOW
 (vertical red bow)





 RV928 V.R KEYS
 (vertical red trapezoid)

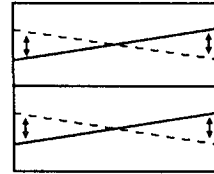



 RV946 V.R SUB SKEW
 (vertical red sub skew)




 RV904 V.R CENT
 (vertical red center position)

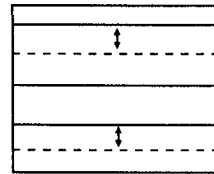


 RV917 V.R LIN
 (vertical red linearity)

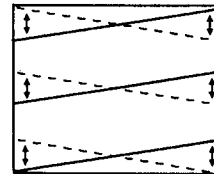


 RV922 V.R SKEW
 (vertical red skew)

H.R LIN	RV915
H.R SIZE	RV907
H.R CENT	RV901
H.R BOW	RV931
H.R SKEW	RV919
H.R PIN	RV940
H.R KEYS	RV926
H.R SUB BOW	RV949
H.R SUB SKEW	RV943
V-M-WAVE	RV973
V-WAVE-A	RV976
V-WAVE-U	RV979
V-M.PIN	RV980
V/WING	RV957
H/M.PIN	RV956


3-8. GREEN AND BLUE REGISTRATION ADJUSTMENTS

1. Input cross hatch signal.
2. Enter service mode. Select R OFF of SERVICE MODE to cut off red output.
3. Turn the vertical blue (V.B) and horizontal blue (H.B) variable resistors (VRs) to adjust blue picture convergence in relation to green picture according to the following steps :


(Adjustment procedure)

1. [LIN (linearity)] → [SIZE (amplitude)] → [CENT (center position)] →
2. [BOW] → [SKEW] → [CENT (center position)]
3. [PIN (pin warp)] → [SUB BOW] → [BOW] [H/M. PIN (horizontal middle pin warp)]
4. [KEYS (trapezoid)] → [SUB SKEW] → [SKEW]
5. [M.WAVE (middle sine wave warp)] → [WAVE-A (upper and lower sine wave warp)] → [WAVE-U (upper sine wave warp)] →


(Dot motion)

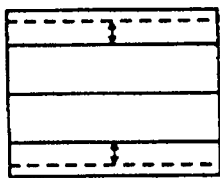


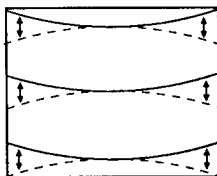
 RV912 V.B SIZE
(vertical blue amplitude)

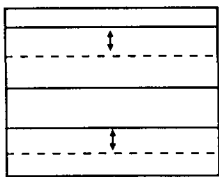


 RV918 V.B LIN
(vertical blue linearity)

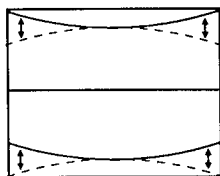


 RV954 V.B SUB BOW
(horizontal blue sub bow)




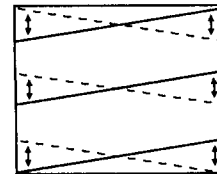
 RV936 V.B BOW
(vertical blue bow)

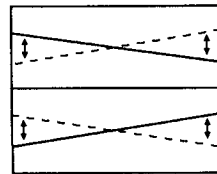


 RV930 V.B KEYS
(vertical blue trapezoid)

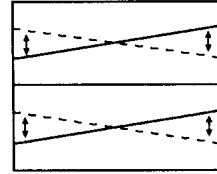


 RV948 V.B SUB SKEW
(vertical blue sub skew)




 RV924 V.B SKEW
(vertical blue skew)

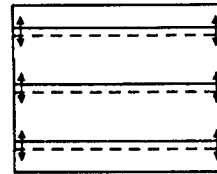


 RV906 V.B CENT
(vertical blue center position)

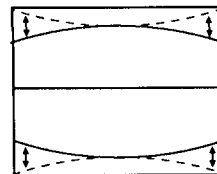


 RV939 V.B PIN
(vertical blue pin warp)

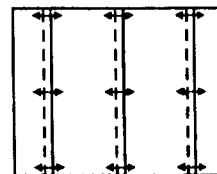


 RV903 H.B CENT
(vertical blue center position)

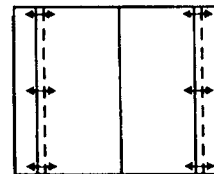


 RV909 H.B SIZE
(horizontal blue amplitude)

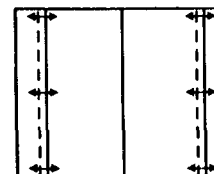


 RV914 H.B LIN
(horizontal blue linearity)

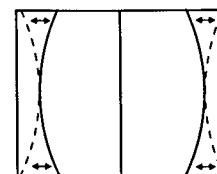


 RV942 H.B PIN
(horizontal blue pin warp)

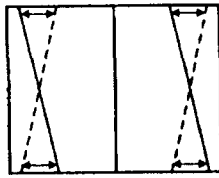


RV954 H.B SUB SKEW
 (horizontal blue sub skew)

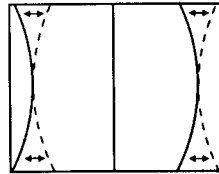


RV951 H.B SUB BOW
 (horizontal blue sub bow)

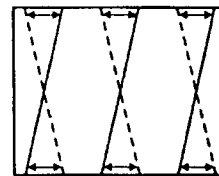


RV921 H.B SKEW
 (horizontal blue skew)

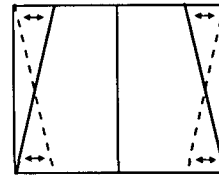


RV927 H.B KEYS
 (horizontal blue trapezoid)

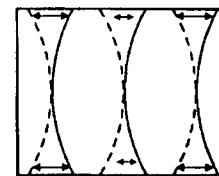

RV933 H.B BOW
 (horizontal blue bow)

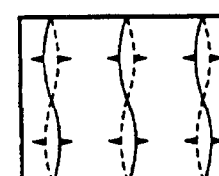

RV981
 ※ Common in red, green, and blue

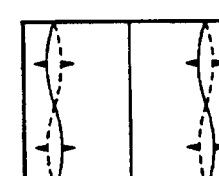

RV982
 ※ Common in red, green, and blue

- H/M PIN.....RV958
- M.WAVE.....RV961
- WAVE-A.....RV974
- WAVE-U.....RV977


3-9. REGISTRATION CHECK

1. Out put red, blue, and green.
2. Out put cross hatch and monoscope signals to check registration. Also check focus.

3-10. WHITE BALANCE ADJUSTMENTS

1) Screen adjustment

1. Input white signal.
2. Remove connectors CR-15, CG-16, and CB-17.
3. Fit jigs between the ground and R707, R737, and R767.

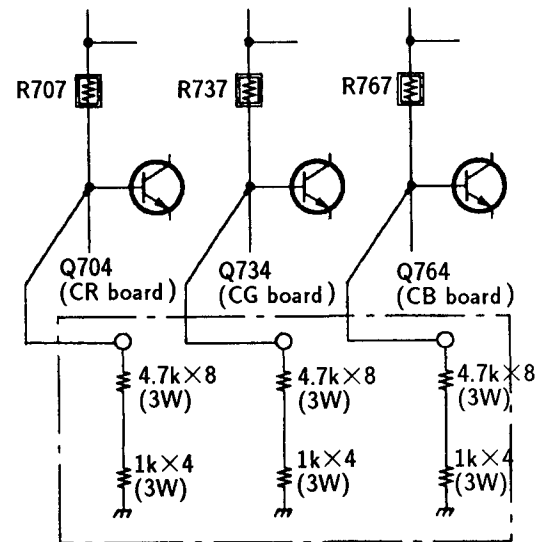

※ Resistors in each jig are connected serial.

4. Turn the RGB (red, green, and blue) screen variable resistors in the focus block to make the flyback line faint. Stop before the line completely disappears.
5. Insert connectors CR-15, CG-16, and CB-17.

2) White balance adjustments (SBRT, GAMP, BAMP, GCUT, BCUT)

1. Input monoscope signal and enter service mode.
2. Select the picture quality adjustment from the menu and set PICTURE minimum.
3. Use the commander to adjust SBRT so that 10 IRE of the monoscope pattern becomes faintly luminous.
4. Input white signal.
5. Set PICTURE minimum. Adjust item GCUT and BCUT to obtain an optimum white balance.
6. Set PICTURE maximum. Adjust GAMP and BAMP to obtain an optimum white balance.
7. Repeat white balance adjustment alternating PICTURE setting at the minimum and maximum.

SECTION 4

SAFETY RELATED ADJUSTMENTS

4-1. SAFETY RELATED ADJUSTMENTS

When replacing the following components, make the HV REGULATOR adjustments (on the N board)

-HV block, IC803, IC805, D805, D807, C817, C818, C821, C836, C837, R824, R825, R827, R828, R834, R835, R836, R864, R865, R866, R902

When replacing the following components, make the HV HOLD DOWN adjustments (on the N board)

-HV block, IC803, IC804, Q804, D806, D808, C809, C819, C820, C822, C823, C850, R807, R826, R829, R832, R833, R837, R838, R839, R840, R841, R892, R893, R900, R901

When replacing the following components, make the BEAM CURRENT PROTECTOR adjustments (on the N board)

-① IC802, Q805, Q807, D811, D812, C810, C824, C825, C826, C827, C831, R810, R843, R844, R847, R848, R849, R850, R851, R852, R853, R854, R881
- ② IC804, Q804, Q808, D808, D809, C809, C828, C829, C830, C831, R807, R839, R840, R841, R847, R848, R849, R850, R851, R852, R855, R856, R857, R881


When replacing the following components, make the OVP CIRCUIT adjustments (on the G board)

-Q618, Q621, D628, C634, R639, R649, R652, R655, R656


— Checking with static voltmeter —

HV HOLD DOWN ADJUSTMENTS (R900, R901)

1. Verify that the power switch is off.
2. Connect the HV hold down adjustment resistance jig to the N20 connector on the N board.

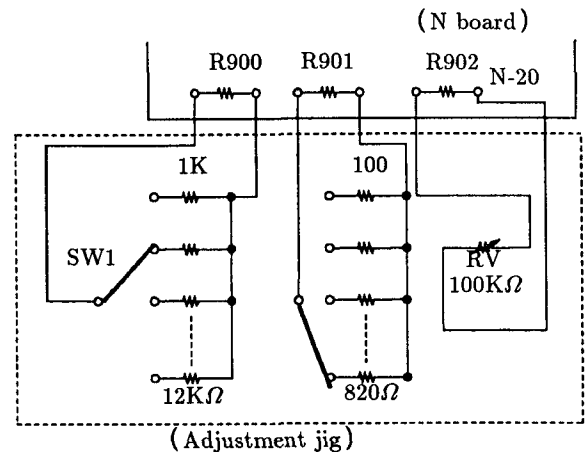

3. Connect an external variable resistor (RV) to R902 of the N board.
4. Remove the cap off from the unused terminal of the high voltage block. Connect a static voltmeter to the terminal.

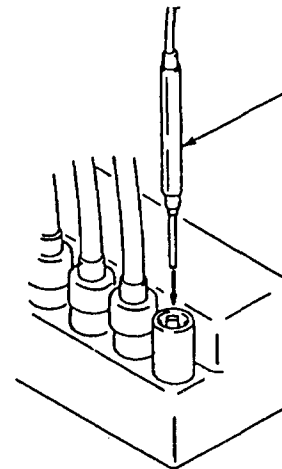


Remove high-voltage lead wire from the terminal and connect a static voltmeter there.

5. Receive 120 VAC power voltage and monoscope pattern signal. Maximize PICTURE and BRIGHTNESS.
6. Use the external variable resistor of the hold down adjustment jig to make the static voltmeter to read $33.50 \pm 0.50\text{kVDC}$.
7. Raise resistances with the jig until the HV hold down circuit is activated. Read the figures then, and mount resistance of the measured figures to R900 and R901.
R900 : Must be $1\text{k}\Omega$ to $12\text{k}\Omega$
R901 : Must be 100Ω to 820Ω
8. Turn on power again. Vary external variable resistance and confirm that the HV hold down circuit is activated at the reated value, $33.50 \pm 0.50\text{kV}$.

HV REGULATOR ADJUSTMENTS (R902)

1. Connect the HV adjustment resistance jig to R902 of the N board.

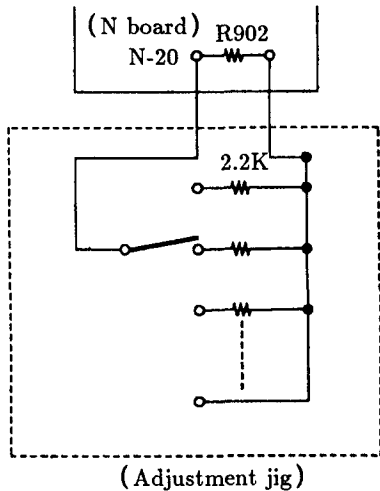

2. Remove the red anode lead wire for the CRT tube from the high-voltage block and connect the static voltmeter instead.
3. Receive 120 VAC power voltage and monoscope pattern signal. Set PICTURE and BRIGHTNESS to the standard.
4. Turn on power. To adjust the resistance of R902 with the adjustment jig to read the rated value, $31.50 \pm 0.50\text{kV}$.
5. Receive all-white signal. Set BRIGHTNESS to the standard. Maximize PICTURE. Confirm that the rated value, $31.50 \pm 0.50\text{kV}$ is read.
6. Cut off RGB by R OFF, G OFF, B OFF of the service commander. Verify that the rated value, $31.50 \pm 0.50\text{kV}$, is read.

+B VOLTAGE CONFIRMATION

1. Receive 120 ± 1 VAC power voltage and monoscope pattern signal. Set BRIGHTNESS to standard and maximize PICTURE.
2. Connect a digital multimeter between the 115V line and the ground on the G board, and confirm that the rated value, $115.0 \pm 3.0\text{V}$ is read.

CHECKING AFTER REPLACING IC601


1. When replacing IC601, check the +B voltage.

CHECKING THE OVP (overvoltage protection) CIRCUIT (R652)



1. Receive 120 VAC power voltage and monoscope pattern signal. Maximize PICTURE and BRIGHTNESS.
2. Remove R638 from the G board and connect a variable resistor (4.7 to $10\text{k}\Omega$) instead.
3. Turn the variable resistor of $10\text{k}\Omega$ and confirm that the OVP circuit is activated and luster disappears when +B voltage reads the rated value, 125.0 ± 5.0 VDC.

BEAM CURRENT PROTECTOR CHECK (R852)


1. Receive 120 VAC power voltage and monoscope pattern signal. Maximize BRIGHTNESS.
2. Connect pin ① and pin ② of the N-21 connector. (on the N board)
3. Remove the jumper connector from the N-8 connector on the N board. Then connect an ABL ammeter between pin ① and pin ④ of the N-8 connector.

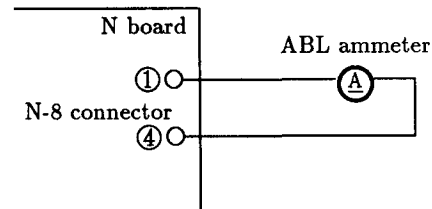

4. Raise PICTURE current gradually. Confirm that the beam current protector circuit is activated and luster disappears under the rated value, $3400 \mu\text{A}$.
5. Connect pin ③ and pin ② of the N-21 connector. Verify that the protector circuit is activated and luster disappears similarly.

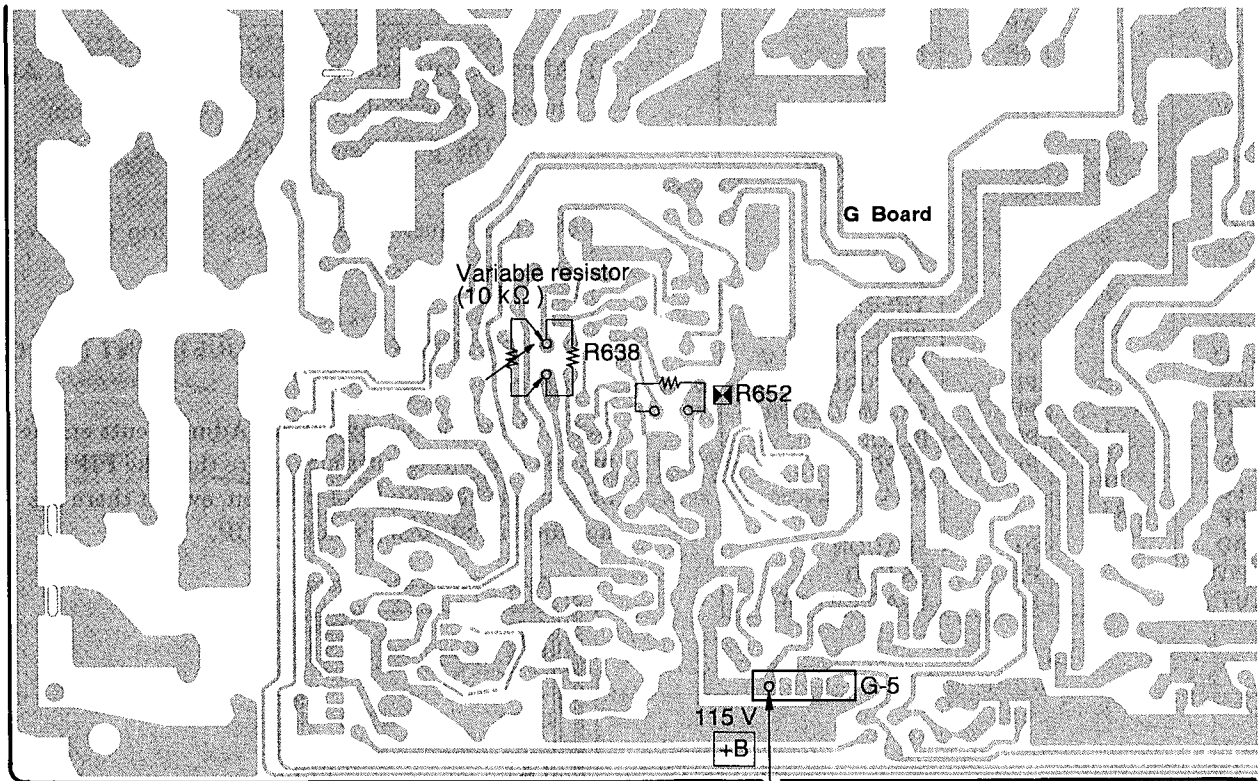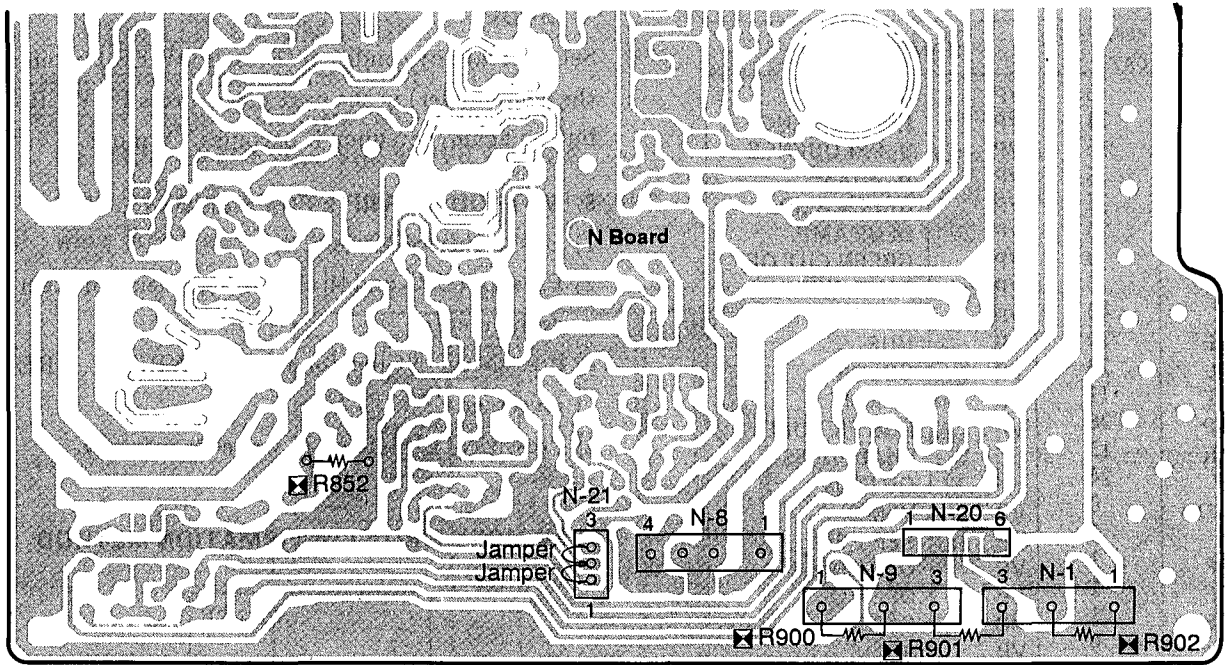

digital multimeter

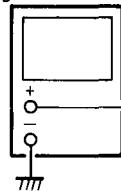

— Checking without static voltmeter —

HV HOLD DOWN ADJUSTMENT (R900, R901)

1. Receive all-white signal. Maximize PICTURE and BRIGHTNESS.
2. Remove R902 from the N board. Connect a variable resistor of $50k\Omega$ on each end, and minimize the resistance.
3. Remove R900 and R901 from the N board. Connect a variable resistor of $50k\Omega$ on each end, and minimize the resistance.
4. Connect a digital voltmeter between the D801 cathode and chassis ground of the N board.
5. Turn on the power switch. Adjust the variable resistors connected to the R902 of the N board to make the digital multimeter to read $145.0VDC$.
6. Adjust the variable resistors connected to R900 and R901 on the N board so as to activate the HV hold down circuit and turn off the display.
7. Read the variable resistors connected to R900 and R901 and mount fixed resistors of measured resistance to the terminals.

Note : Select fixed resistance from the following ranges.

R900 : $1k\Omega$ to $12k\Omega$

R901 : 100Ω to 820Ω



8. Maximize resistance of the variable resistor connected to R902 of the N board and turn on power.
9. Vary variable resistance at R902. Confirm that the HV hold down circuit is activated and the display is turned off when voltage reads $134 \pm 1.0V$.

HV REGULATOR ADJUSTMENT (R902)

1. Receive all-white signal. Maximize PICTURE and BRIGHTNESS.
2. Connect a variable resistor of $50k\Omega$ on each end of R902 of the N board. Maximize resistance.
3. Connect a digital voltmeter between the D801 cathode and the chassis of the N board.
4. Turn on power. Adjust the variable resistor so that the digital multimeter reads $135.0V \pm 1.0V$.
5. Read the variable resistance then.
6. Mount a fixed resistor of the measured resistance to R902.

Note : R902 : Must be $2.2k\Omega$ to $27k\Omega$

7. Turn on power again. Confirm that the digital multimeter reads $135.0V \pm 1.0V$.

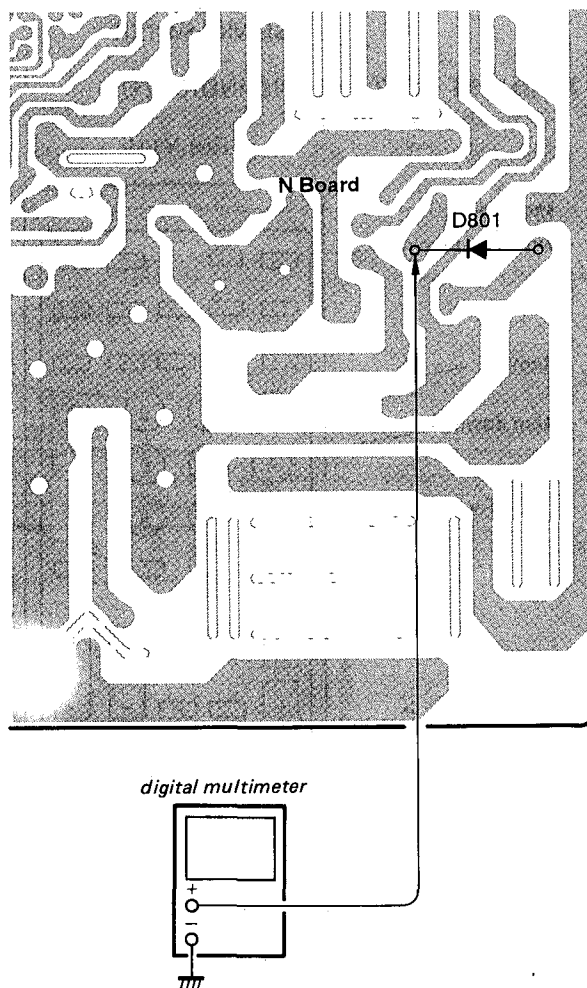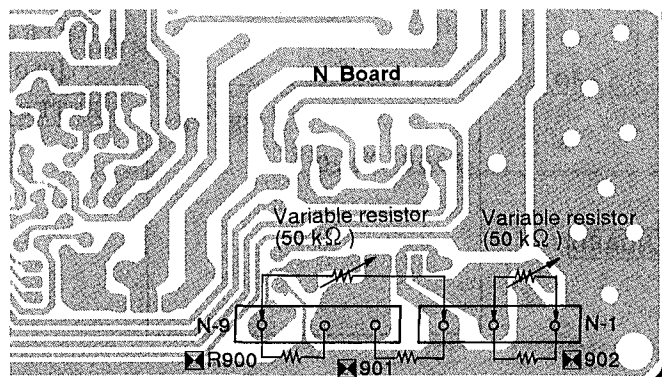

SECTION 5 CIRCUIT ADJUSTMENTS

5-1. ELECTRICAL ADJUSTMENT BY REMOTE COMMANDER


Use of Remote Commander (RM-Y115) can be performed circuit adjustments about this model.

1. METHOD OF SETTING THE SERVICE MODE


- 1) Press **POWER** button on the Remote Commander while pressing switch on the rear of the set.

NOTE : Test Equipment Required.

1. Pattern Generator
2. Frequency counter
3. Digital multimeter
4. Audio OSC

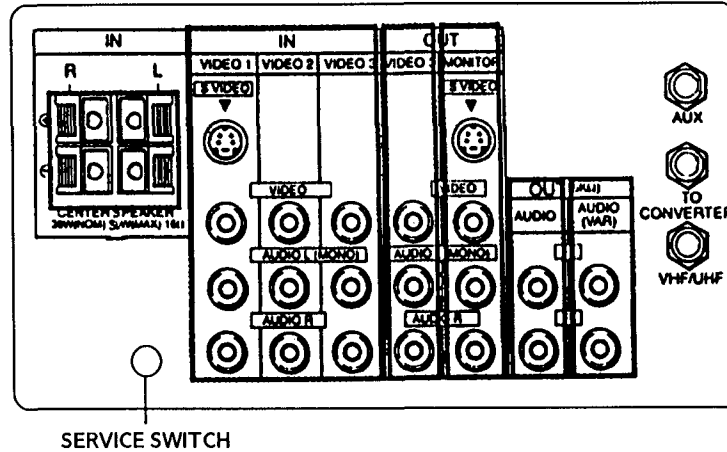

2. ADJUST BUTTONS AND INDICATOR

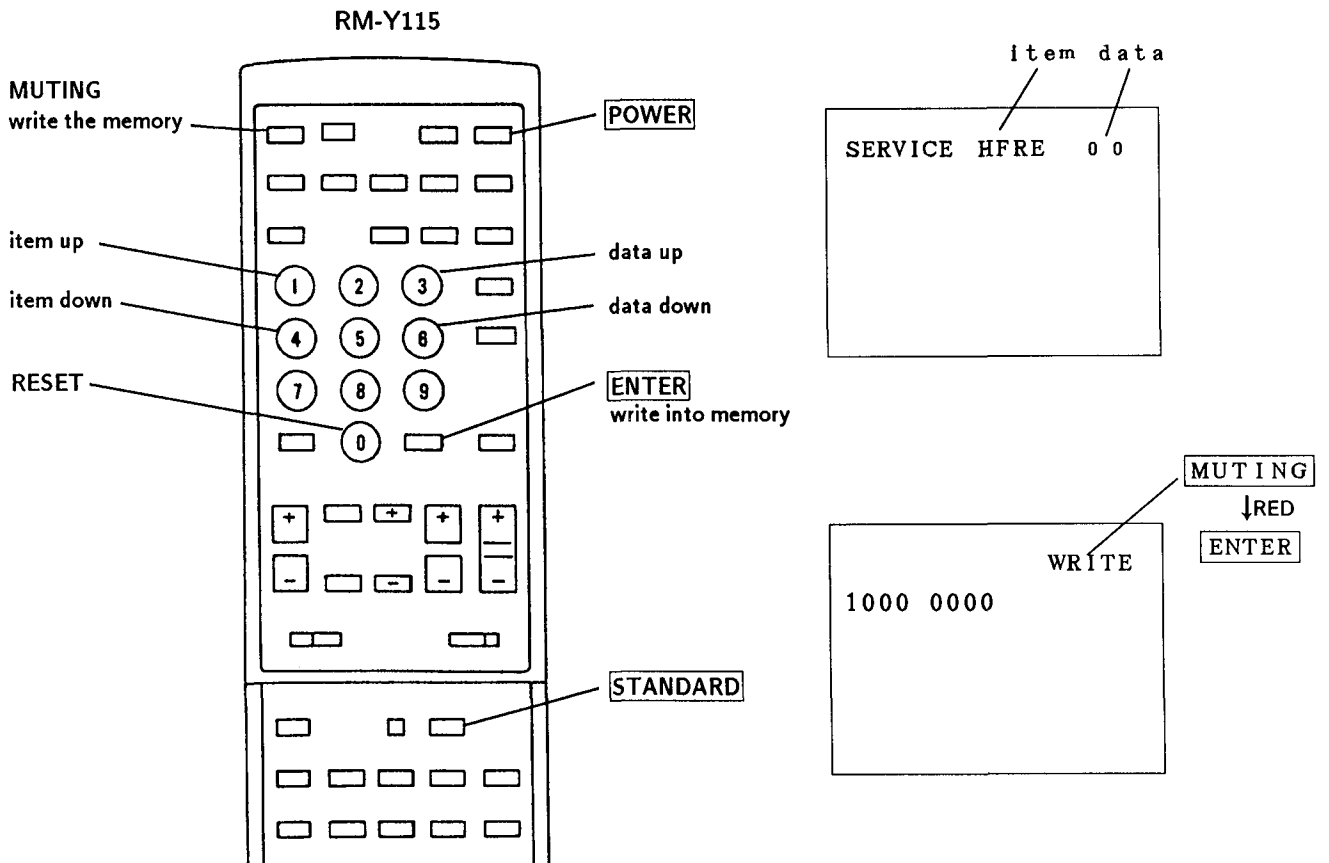

3. AN ITEM OF ADJUSTMENT

ITEM	REFERENCE DATA	NAME REGIST	
AFC	0	VP	AFC 1.0
HFRE	74	VP	H. FREQUENCE
VFRE	16	VP	V. FREQUENCE
HPOS	5	VP	H. PHASE
GAMP	25	VP	GREEN AMP.
BAMP	26	VP	BLUE AMP.
GCUT	9	VP	GREEN CUT OFF.
BCUT	6	VP	BLUE CUT OFF
SPIX	40	VP	PICTURE
SHUE	29	VP	HUE
SCOL	28	VP	COLOR
SBRT	11	VP	BRIGHT
RGBP	28	VP	RGB PICTURE
SHAR	13		SHARPNESS
DISP	24		OUTPUT
VSMO	0	VP	VSMO
REF	1	VP	REF 1.0
ROFF	1	VP	OFF NR
GOFF	1	VP	OFF NG
BOFF	1	VP	OFF NB
ABLM	0	VP	ABLM
DRGB	0	VP	D RGB
TEST	0	AP	T
MPX	7	AP	ATT
FILO	31	AP	I1
DEEM	7	AP	I2
STEV	31	AP	OSC 1
SAPV	31	AP	OSC 2
PILO	7	AP	PILOT
SEP	31	AP	WIDE BAND
VD	7	AP	SPECTRAL
LVOL	0	AP	VOLUME-L
RVOL	0	AP	VOLUME-R
BASS	8	AP	BASS
TRE	8	AP	TREBLE
PHPO	32	PI	READ DELAY H
PVPO	8	PI	READ DELAY V
PLEV	6	PI	PICTURE LEVEL
PFCO	7	PI	FRAME COLOR
PPLL	1	PI	PLLOF
PPVS	6	PI	VSPDEL
NRLE	31		NR LEVEL
DSPP	43		
SHAD	1	PJ	SHADON
VMSW	1	PJ	RS HAD
SCUT	16	PJ	SHAD CUT OFF


4. METHOD OF CANCELLATION FROM SERVICE MODE

Set the standby condition (Press **POWER** button on the commander) in the next place, press **POWER** button again, hereupon it becomes TV mode.

5. METHOD OF WRITE FOR MEMORY

- 1) Set to Service Mode.
- 2) Press **1** (UP) and **4** (DOWN), select an item of adjustments.
- 3) Press **MUTING** button indicate WRITE (RED) on screen.
- 4) Press **ENTER** button to write for memory.


6. MEMORY WRITE CONFIRMATION METHOD

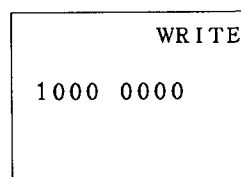

- 1) After adjustment, pull out the plug from AC outlet, and next place, plug in AC outlet again.
- 2) Turn the power switch ON and set to Service Mode.
- 3) Call the adjusted items again, confirm they were adjusted.

7. PUB PICTURE POSITION ADJUSTMENT (PHPO, PUPO)

Note : Before doing any Service Adjustments on the models above you must make sure that the PIP Screen is in the number 1 position, even if there are no adjustments being made to PIP.

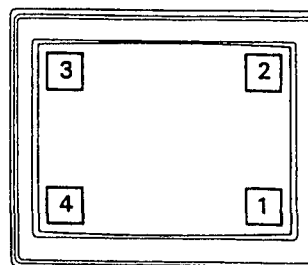

PIP Positions

After making adjustments into the PIP 1 position, write the information into the ROM.

Next, unplug the unit and recheck the other three positions. Adjustments made to the number 1 position will affect the other three positions.

5-2. A BOARD ADJUSTMENTS

RF AGC ADJUSTMENT (IF BLOCK VR)

- 1) Input a color-bar signal.
- 2) Adjust AGC VR of TU 101 so that snow noise and cross-modulation disappear from the picture.
- 3) Confirm them at every channel.

H.FREQUENCY ADJUSTMENT (HFRE)

- 1) Set to Service Mode.
- 2) Input a color-bar signal.
- 3) Connect a frequency counter to pin③ of A-10 connector.
- 4) Call the item of AFC, set to 3 level (free run).
- 5) Select HFRE with **[1]** and **[4]**.
- 6) Adjust **[3]** and **[6]** to the 15735 ± 60 Hz level.
- 7) Call the item of AFC again, adjust the level "01".
- 8) Write into the memory by pressing **[MUTING]** → then **[ENTER]**.


V.FREQUENCY ADJUSTMENT (VFRE)

- 1) Set the Service Mode.
- 2) Input an off-air signal (VIDEO IN → no signal).
- 3) Connect the frequency counter across connector ⑬pin of E 1-1 connector and ground.
- 4) Select VFRE with **[1]** and **[4]**.
- 5) Adjust **[3]** and **[6]** to the 56 ± 0.5 Hz.
- 6) Write the memory by pressing **[MUTING]** → then **[ENTER]**.

SUB CONTRAST ADJUSTMENT (SPIX)

- 1) Set to Service Mode.
- 2) Input a color-bar signal. (75 IRE)
- 3) Set the conditions as follows.

PICTURE	MAX
COLOR	MIN
BRIGHTNESS	MIN
TRINITONE	LOW
R OFF	ON
G OFF	OFF
B OFF	OFF

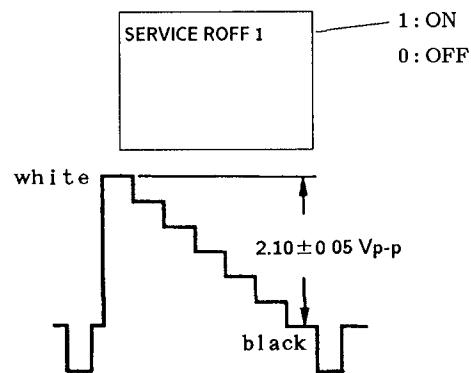


- 4) Connect an oscilloscope to ⑳pin of E1-1 connector on A board and ground.
- 5) Adjust **[3]** and **[6]** to the 2.10 ± 0.05 Vp-p level by select-ing SPIX with **[1]** and **[4]**.
- 6) Write the memory by pressing **[MUTING]** → then **[ENTER]**.
- 7) Return the following back to normal after adjustment.


G OFF	ON
B OFF	ON
COLOR	CENTER
BRIGHTNESS	CENTER
TRINITONE	HIGH
PICTURE	80%

SUB HUE, SUB COLOR ADJUSTMENT (SHUE, SCOL)

- 1) Input a color-bar signal.
- 2) Press **STANDARD** to normal.
- 3) Set to Service Mode.
- 4) Connect an oscilloscope to pin 22 of E1-1 connector on A board and ground.
- 5) Adjust 3 and 4 to the $V1=V4$ and $V2=V3$ by select to SHUE and SCOL with 1 and 4. Lower the data 4 steps from this point.

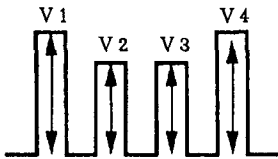

- 4) Make the data "00" by selecting FILO with 1 and 4. And then, send up the data gradually by pressing 6. Set the data to D1 before SAT3 changing to 1 from 0.
- 5) Send up the data gradually. Set data D2 when SAT3 changes 0 from 1.
- 6) Adjust the data of FILO to $\frac{D1 + D2}{2}$.
- 7) Write into the memory by pressing **MUTING** → then **ENTER**.

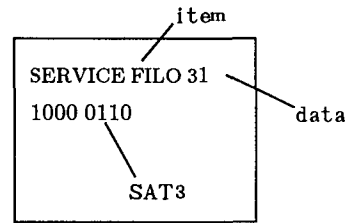


- 6) Write into the memory by pressing **MUTING** → then **ENTER**.

FILTER ADJUSTMENT (MPX, FILO)

- 1) Set to Service Mode.
- 2) Select to **TEST** with 1 and 4, set the data to "1". Then select MPX and change data to "08".
- 3) Connect an audio oscillator to R224 using a capacitor (10μF/16V), set frequency to 62.936 kHz ± 0.1 kHz.


And then, through the 10kΩ resistor, feed 9.0V into the mute of TUVIF TU 101.

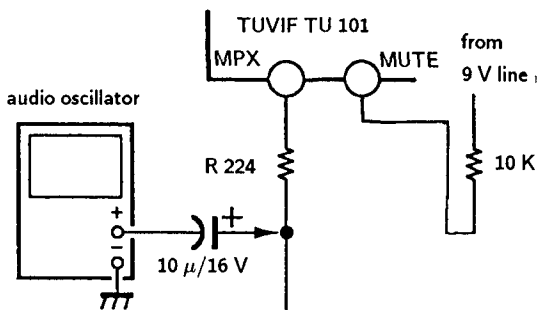

V 4 fh : SINE-WAVE 62 936 KHz ± 0.1 KHz
 LEVEL 3.0 Vp-p


ST VCO ADJUSTMENT (MPX, STEV)

- 1) Set to Service Mode.
- 2) Select **TEST** with 1 and 4, set the data to "1". And then press **MTS** to MONO.
- 3) Select MPX, set the data "8".
- 4) Connect an audio oscillator to R 224 using electrolytic capacitor (10μF/16V) and apply the frequency Vst. Then, apply DC voltage to mute of TUVIF TU 101 using 10kΩ connect to 9.0 V line.

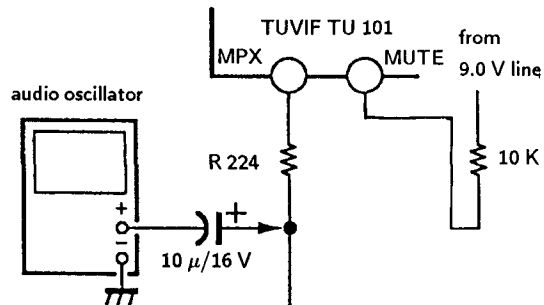

Vfh : SINE-WAVE 15.734 KHz ± 0.1 KHz
 LEVEL 0.28 Vp-p

- 5) Select STEV with [1] and [4], set the data to "00" with [6]. And then, send up the data gradually. Set the data to D1 before SAT2 changes from 0 to 1.
- 6) Send up data gradually, set the data to D2 when SAT2 changes 1 from 0.
- 7) Adjust the data of STEV to $(D1 + D2) / 2$.
- 8) Write into the memory by pressing [MUTING] → then [ENTER].

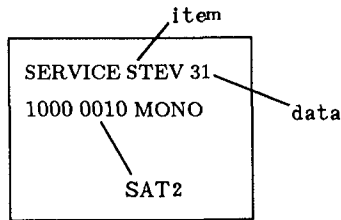

MPX IN LEVEL ADJUSTMENT (MPX)

- 1) Set to Service Mode.
- 2) Select TEST with [1] and [4], set the data to "0" with [6]. And then press [MTS] to MONO.
- 3) Select MPX with [1] and [4], set the data to "8" with [3] and [6].
- 4) Write into the memory by pressing [MUTING] → then [ENTER].

PILOT CANCEL ADJUSTMENT (PILO)

- 1) Set to the Service Mode.
- 2) Select PILO with [1] and [4], set the data to "8" with [3] and [6].
- 3) Write into the memory by pressing [MUTING] → then [ENTER].

SAP VCO f₀ ADJUSTMENT (SAPV)

- 1) Set to Service Mode.
- 2) Input a stereo broadcast signal with SAP.
- 3) Select TEST with [1] and [4], set the data to "0". And then, press [MTS] to MAIN.
- 4) Connect a digital multimeter to TP-1(DBX). This voltage reading will equal V 1.
- 5) Press MTS to SAP and this voltage will equal V 2.
- 6) Select SAPV with [1] and [4], adjust [3] and [6] so that $V2 = V1 \pm 0.03$ VDC.
- 7) Write the memory by [MUTING] → [ENTER].

SEPARATION ADJUSTMENT (SEP)


- 1) Set to Service Mode.
- 2) Press [MTS] to MAIN and receive a monoral broadcast signal.

In the next step, receive a stereo broadcast signal.


- 3) Select SEP and VD with [1] and [4], adjust [3] and [6] so that a clear stereo sound is effected.

SUB PICTURE POSITION ADJUSTMENT (PHPO, PVPO)

- 1) Input a cross hatch signal.
- 2) Set to service mode.
- 3) Press PIP to display a sub picture. (RIGHT LOWER Position)
- 4) Select PHPO, PVPO with [1] and [4].
- 5) Adjust [3] and [6] to the standard as shown below.
- 6) Write the memory by pressing [MUTING] → then [ENTER].

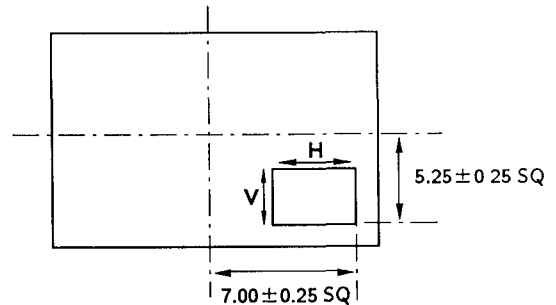

Note : Before doing any Service Adjustments on the models above you must make sure that the PIP Screen is in the number 1 position, even if there are no adjustments being made to PIP.

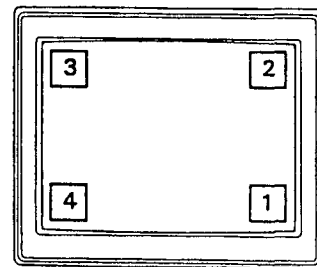


After making adjustments into the PIP 1 position, write the information into the ROM. PIP Positions Next, unplug the unit and recheck the other three positions. Adjustments made to the number 1 position will affect the other three positions.

5-3. DS BOARD ADJUSTMENTS


V. 3 WAVE ADJUSTMENT (RV983)

- 1) Input a color-bar signal.
- 2) Connect an oscilloscope IC1712 Pin⑦ of DS board ground.
- 3) Adjust RV983 as shown the following figure.

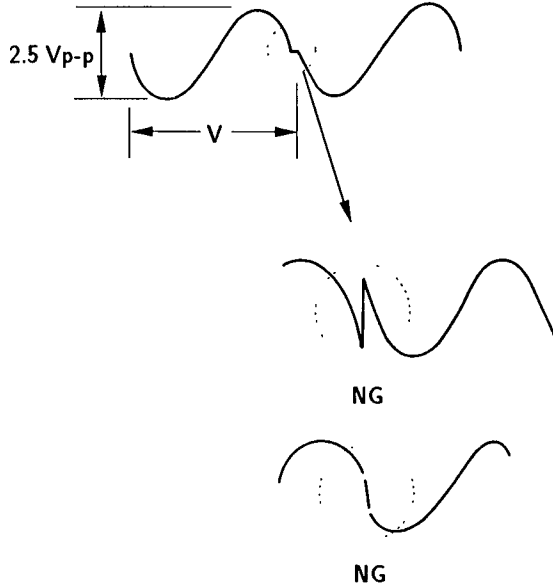


H. 3 WAVE ADJUSTMENT (RV984)

- 1) Input a color-bar signal.
- 2) Connect an oscilloscope IC1712 Pin① of DS board ground.
- 3) Adjust RV984 as shown the following figure.

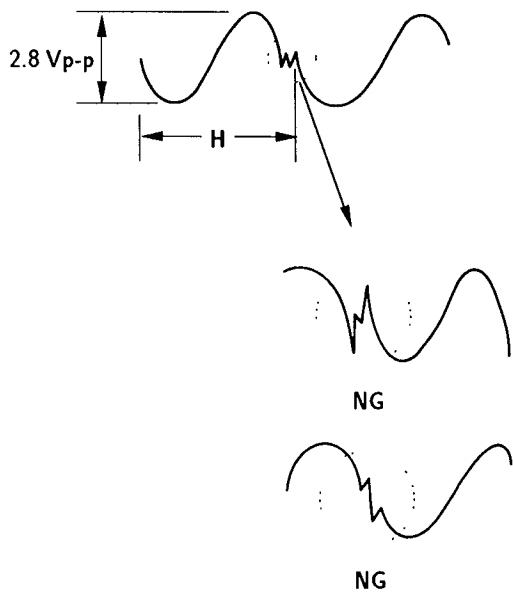

5-4. P3 BOARD ADJUSTMENTS

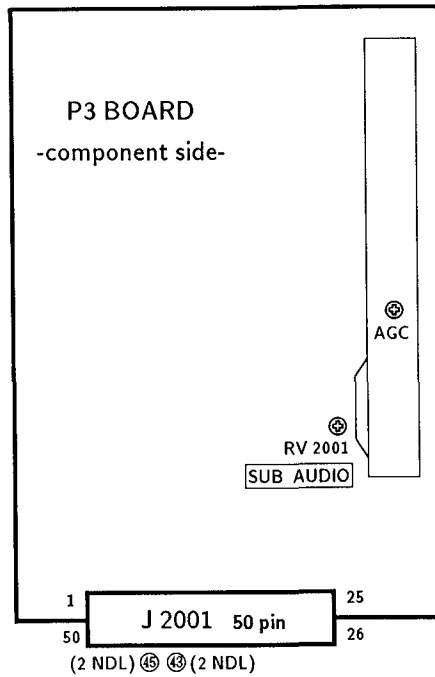


RF AGC ADJUSTMENT(IF BLOCK VR)


- 1) Input a color-bar signal.
- 2) Set to PICTURE IN PICTURE mode.
- 3) Adjust AGC VR of TU 2001 so that snow noise and cross-modulation disappear from the picture.
- 4) Confirm them at every channel.


SUB PICTURE SOUND VOLUME LEVEL (SUB AUDIO) ADJUSTMENT(RV2001)

- 1) Receive an audio signal of 400 Hz. (100% mod.)
- 2) Adjust RV 2001 for the following level at Pin 43 (2 NDR) or Pin 45 (2 NDL) of J 2001.


500 mVrms \pm 2 dB

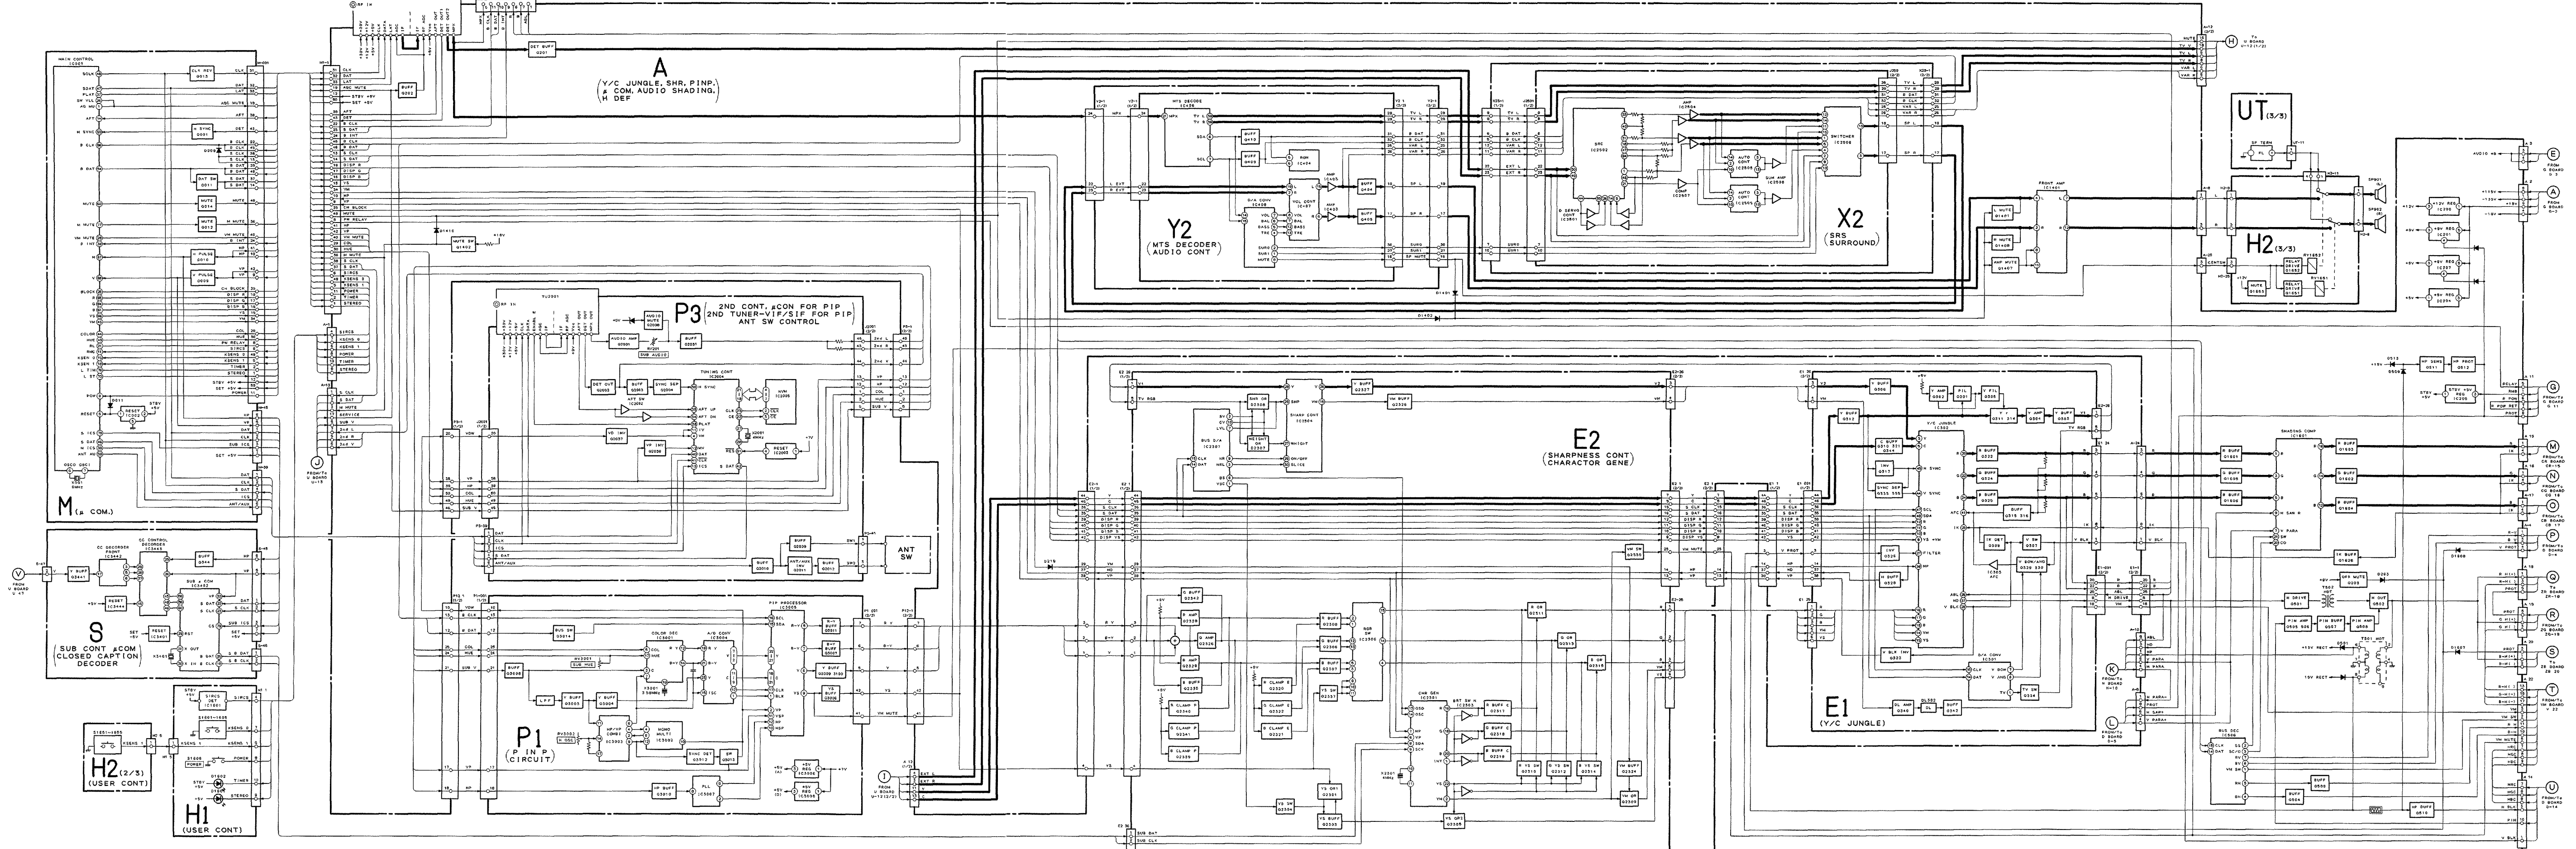

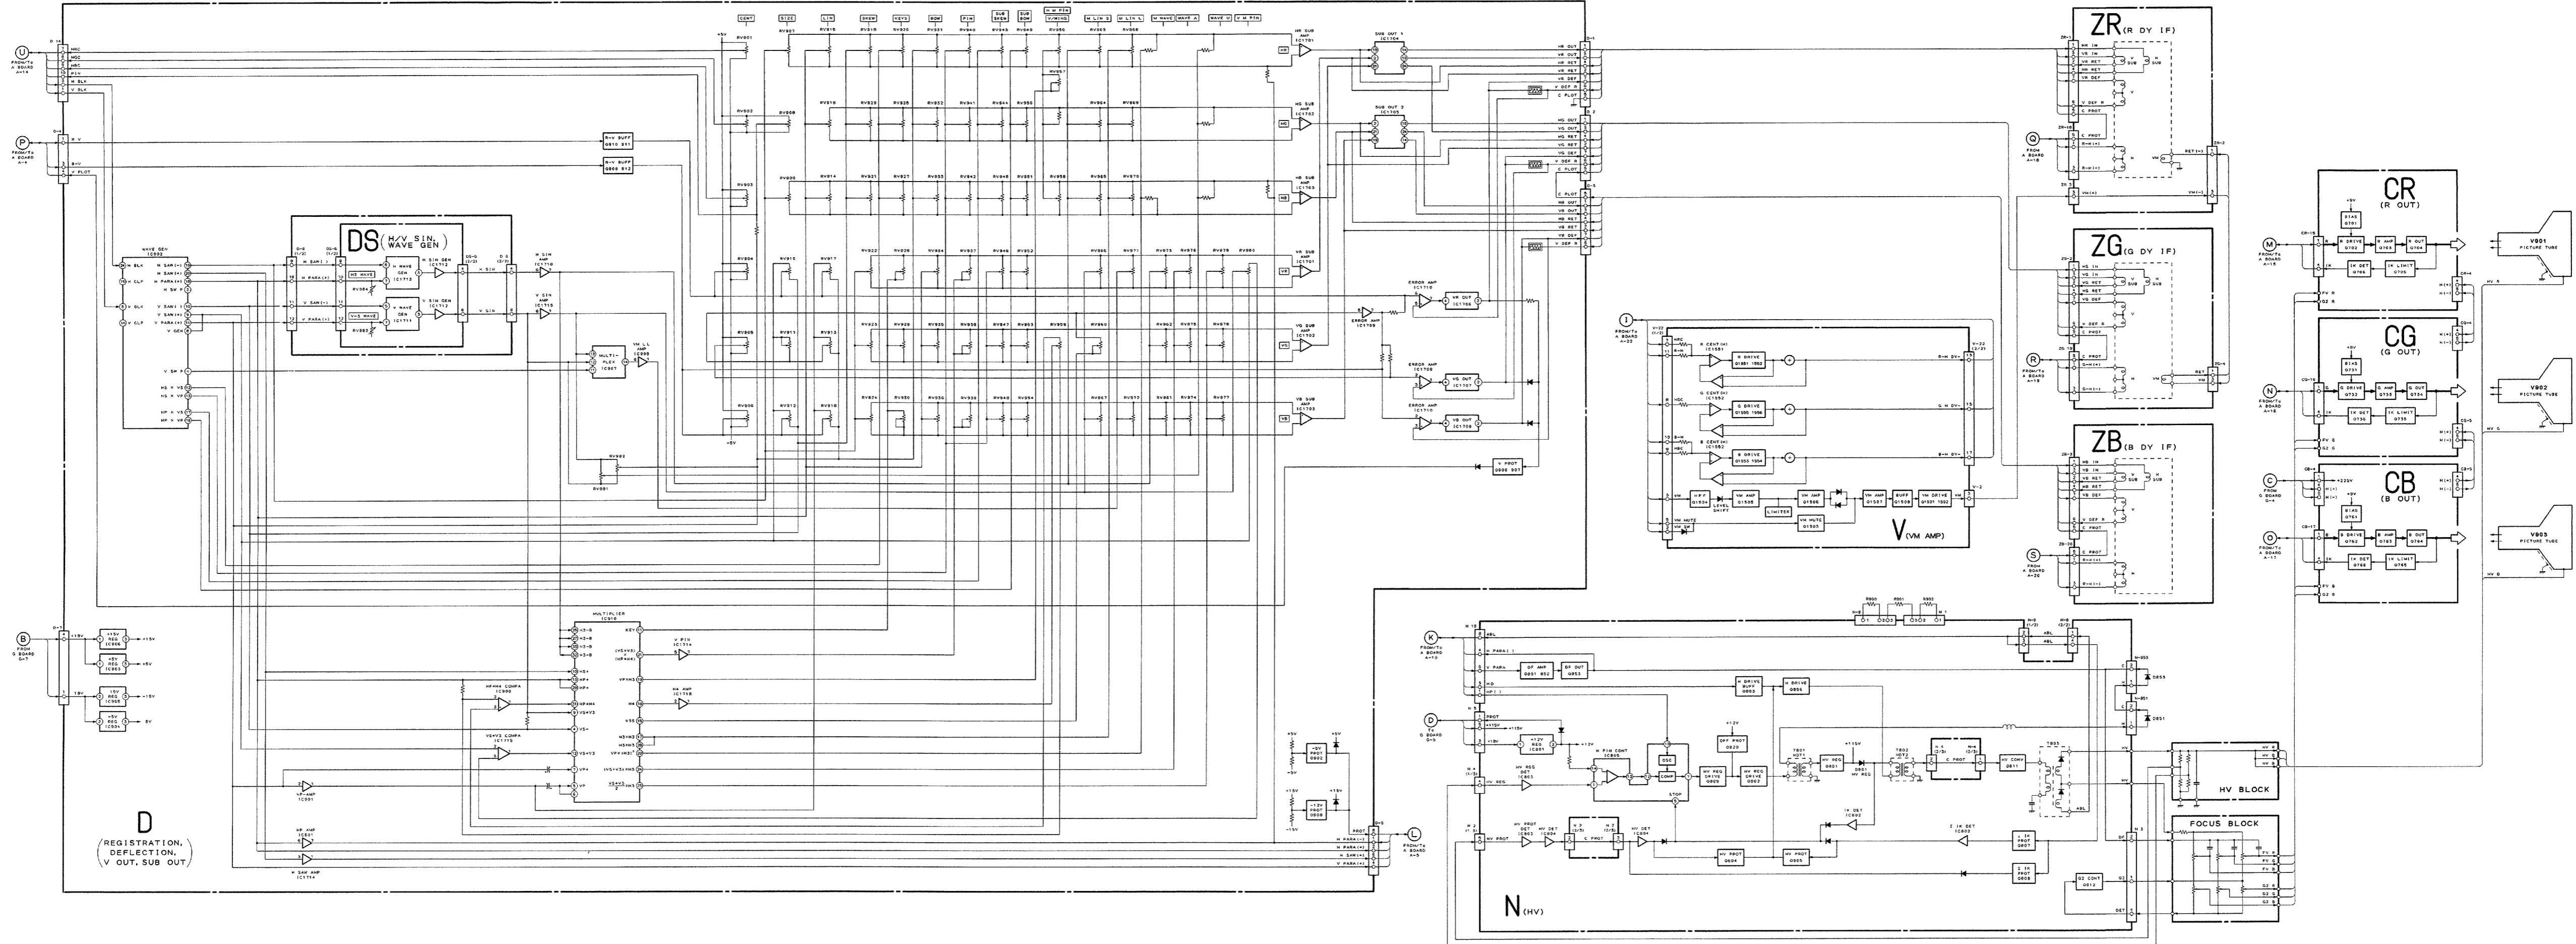

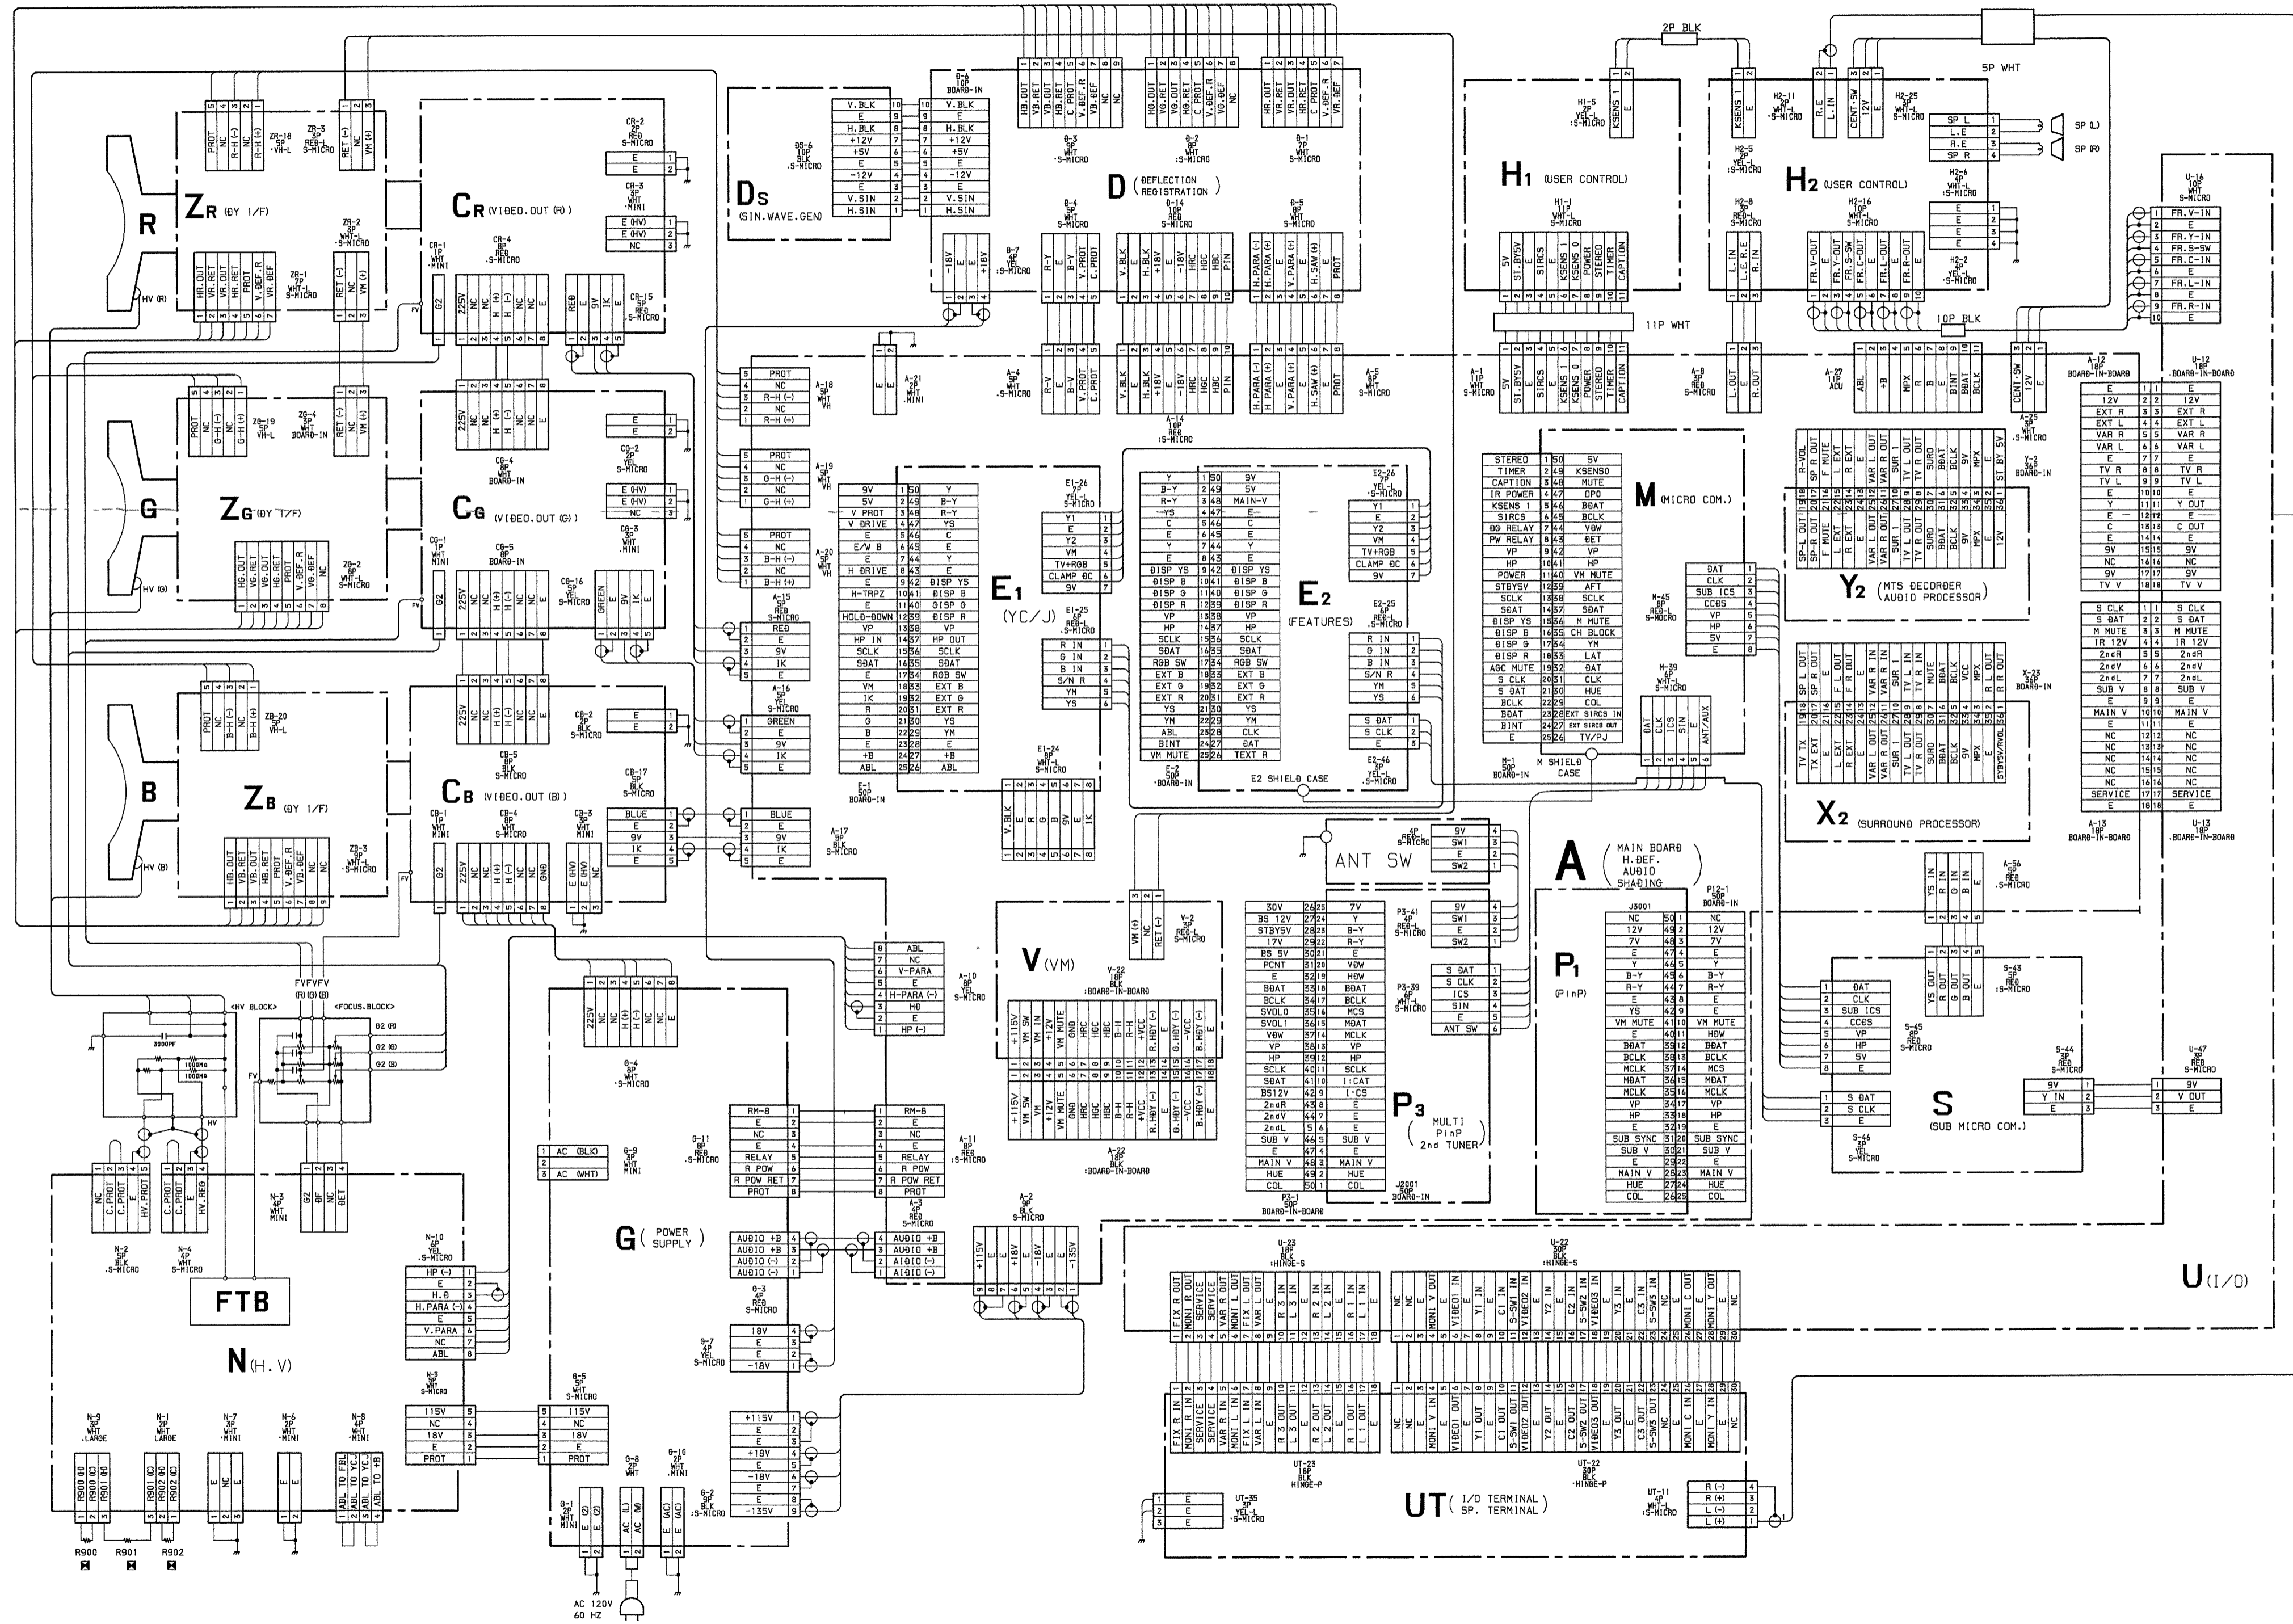

6-5. CIRCUIT BOARDS LOCATION

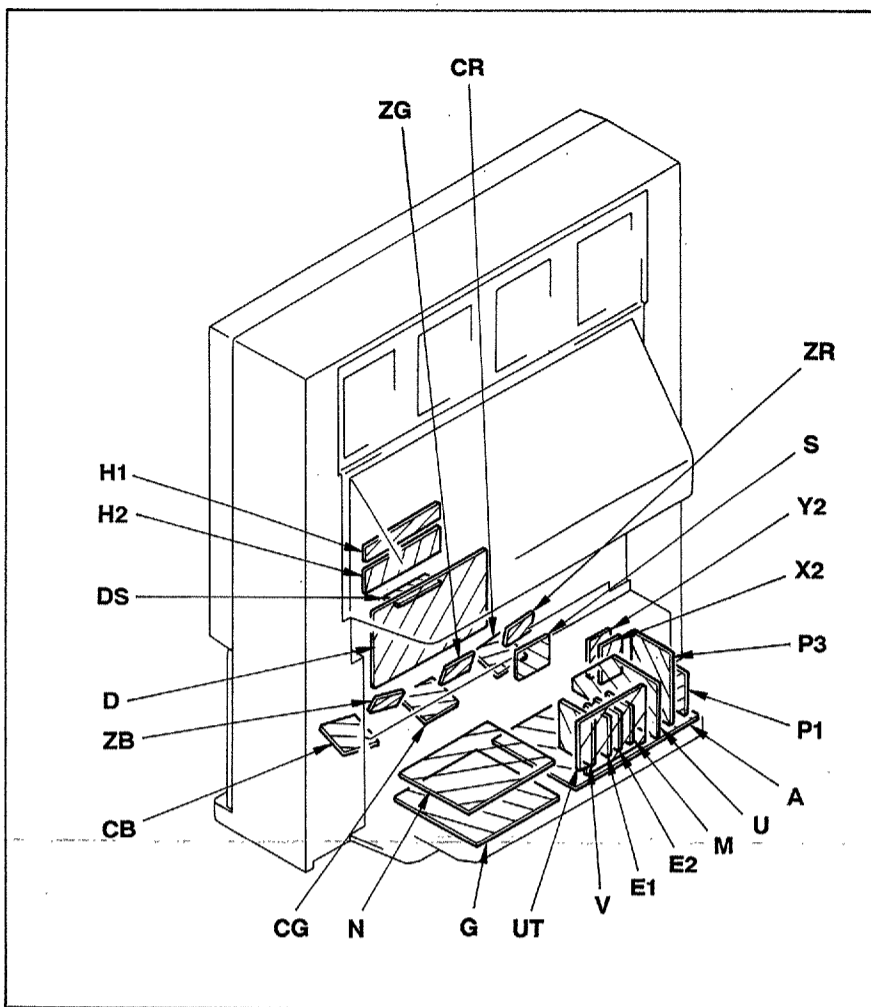

6-6. SCHEMATIC DIAGRAMS AND PRINTED WIRING BOARDS

- Note:**
- All capacitors are in μF unless otherwise noted. μF : μF
 - 50 WV or less are not indicated except for electrolytic and tantalums.
 - All resistors are in ohms.
 - $k\Omega = 1000\Omega$, $M\Omega = 1000k\Omega$
 - Indication of resistance, which does not have one for rating electrical power, is as follows.

Reference information

- RESISTOR**
- RN METAL FILM
 - RC SOLID
 - FPRD NONFLAMMABLE CARBON
 - FUSE NONFLAMMABLE FUSIBLE
 - RS NONFLAMMABLE METAL OXIDE
 - RB NONFLAMMABLE CEMENT
 - RW NONFLAMMABLE WIREWOUND
 - ※ ADJUSTMENT RESISTOR
- COIL**
- LF-8L MICRO INDUCTOR
- CAPACITOR**
- TA TANTALUM
 - PS STYROL
 - PP POLYPROPYLENE
 - PT MYLAR
 - MPS METALIZED POLYESTER
 - MPP METALIZED POLYPROPYLENE
 - ALB BIPOLAR
 - ALT HIGH TEMPERATURE
 - ALR HIGH RIPPLE

- Readings are taken with a color-bar signal input.
- Readings are taken with a 10M Ω digital multimeter.
- Voltage are dc with respect to ground unless otherwise noted.
- Voltage variations may be noted due to normal production tolerances.
- All voltages are in V.
- *: Can not be measured.
- : B+ bus.
- : B- bus.
- : signal path. (RF)

Note: The symbol \triangle display is on the component side.






The components identified by shading and mark \triangle are critical for safety. Replace only with part number specified.

The symbol \triangle indicate fast operating fuse. Replace only with fuse of same rating as marked.

Note: Les composants identifiés par un tramé et une marque \triangle sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

Le symbole \triangle indique une fusible à action rapide. Doit être remplacé par une fusible de même valeur, comme marqué.

Part replaced (\triangle)	Adjustment (E)
HV Block IC809, IC805, D805, D807, C817, C818, C821, C838, C837, R824, R825, R827, R828, R834, R835, R836, R864, R865, R866, R902	HV Regulator (R902)
HV Block IC803, IC804, Q804, D806, D808, C809, C819, C820, C822, C823, C850, R807, R826, R829, R832, R833, R837, R838, R839, R840, R841, R892, R893, R900, R901	HV Hold down (R900, R901)
Q818, Q821, D828, C834, R839, R849, R852, R855, R856	OVP (R852)
① IC802, Q805, Q807, D811, D812, C810, C824, C825, C826, C827, C831, R810, R843, R844, R847, R848, R849, R850, R851, R852, R853, R854, R881	Beam current protector ① R852 ② R852
② IC804, Q804, Q808, D808, D809, C809, C828, C829, C830, C831, R807, R839, R840, R841, R847, R848, R849, R850, R851, R852, R855, R856, R857, R881	

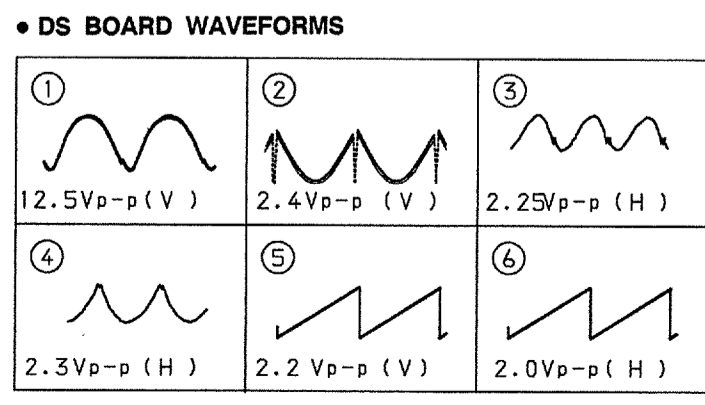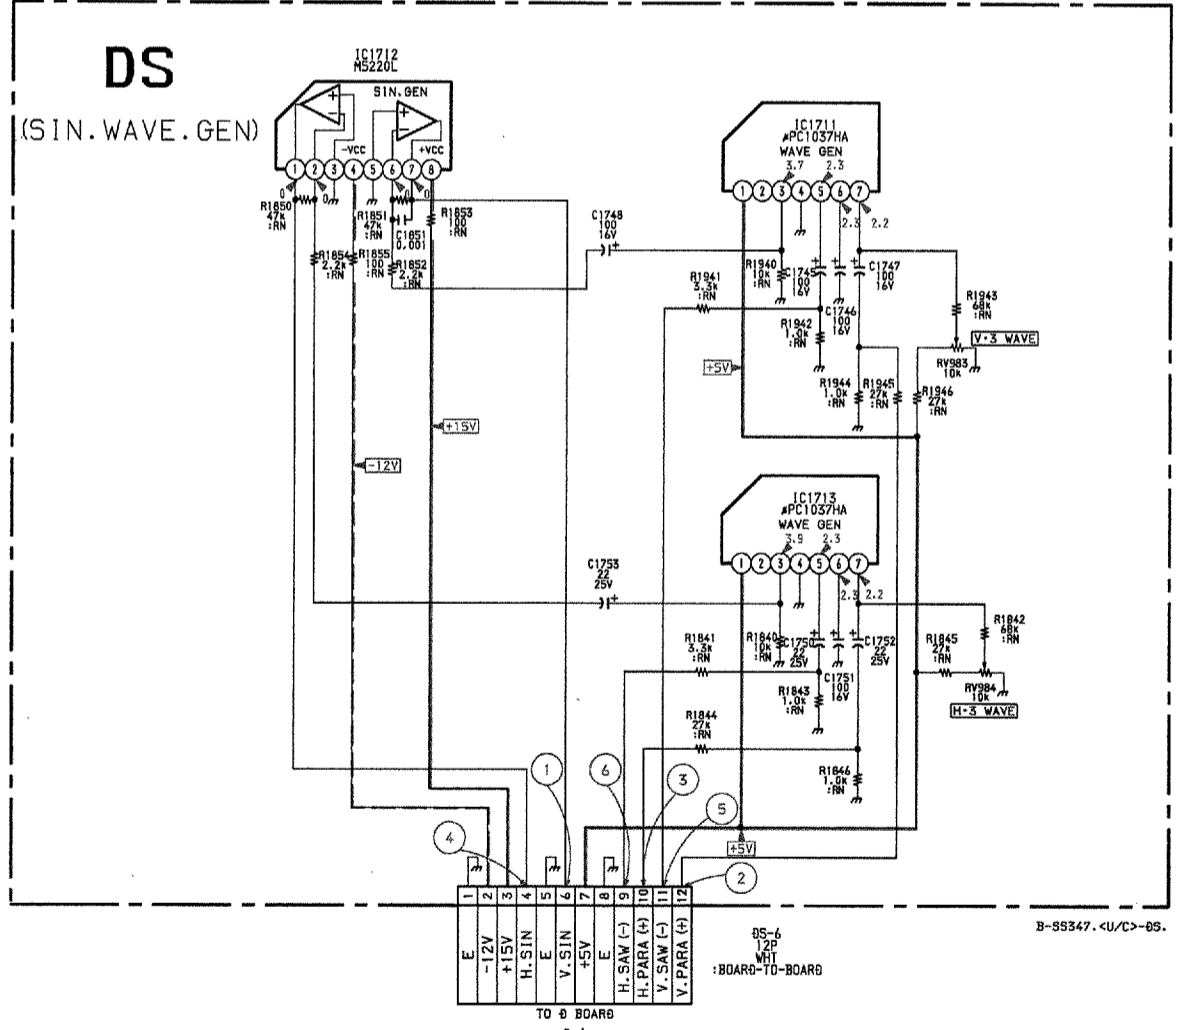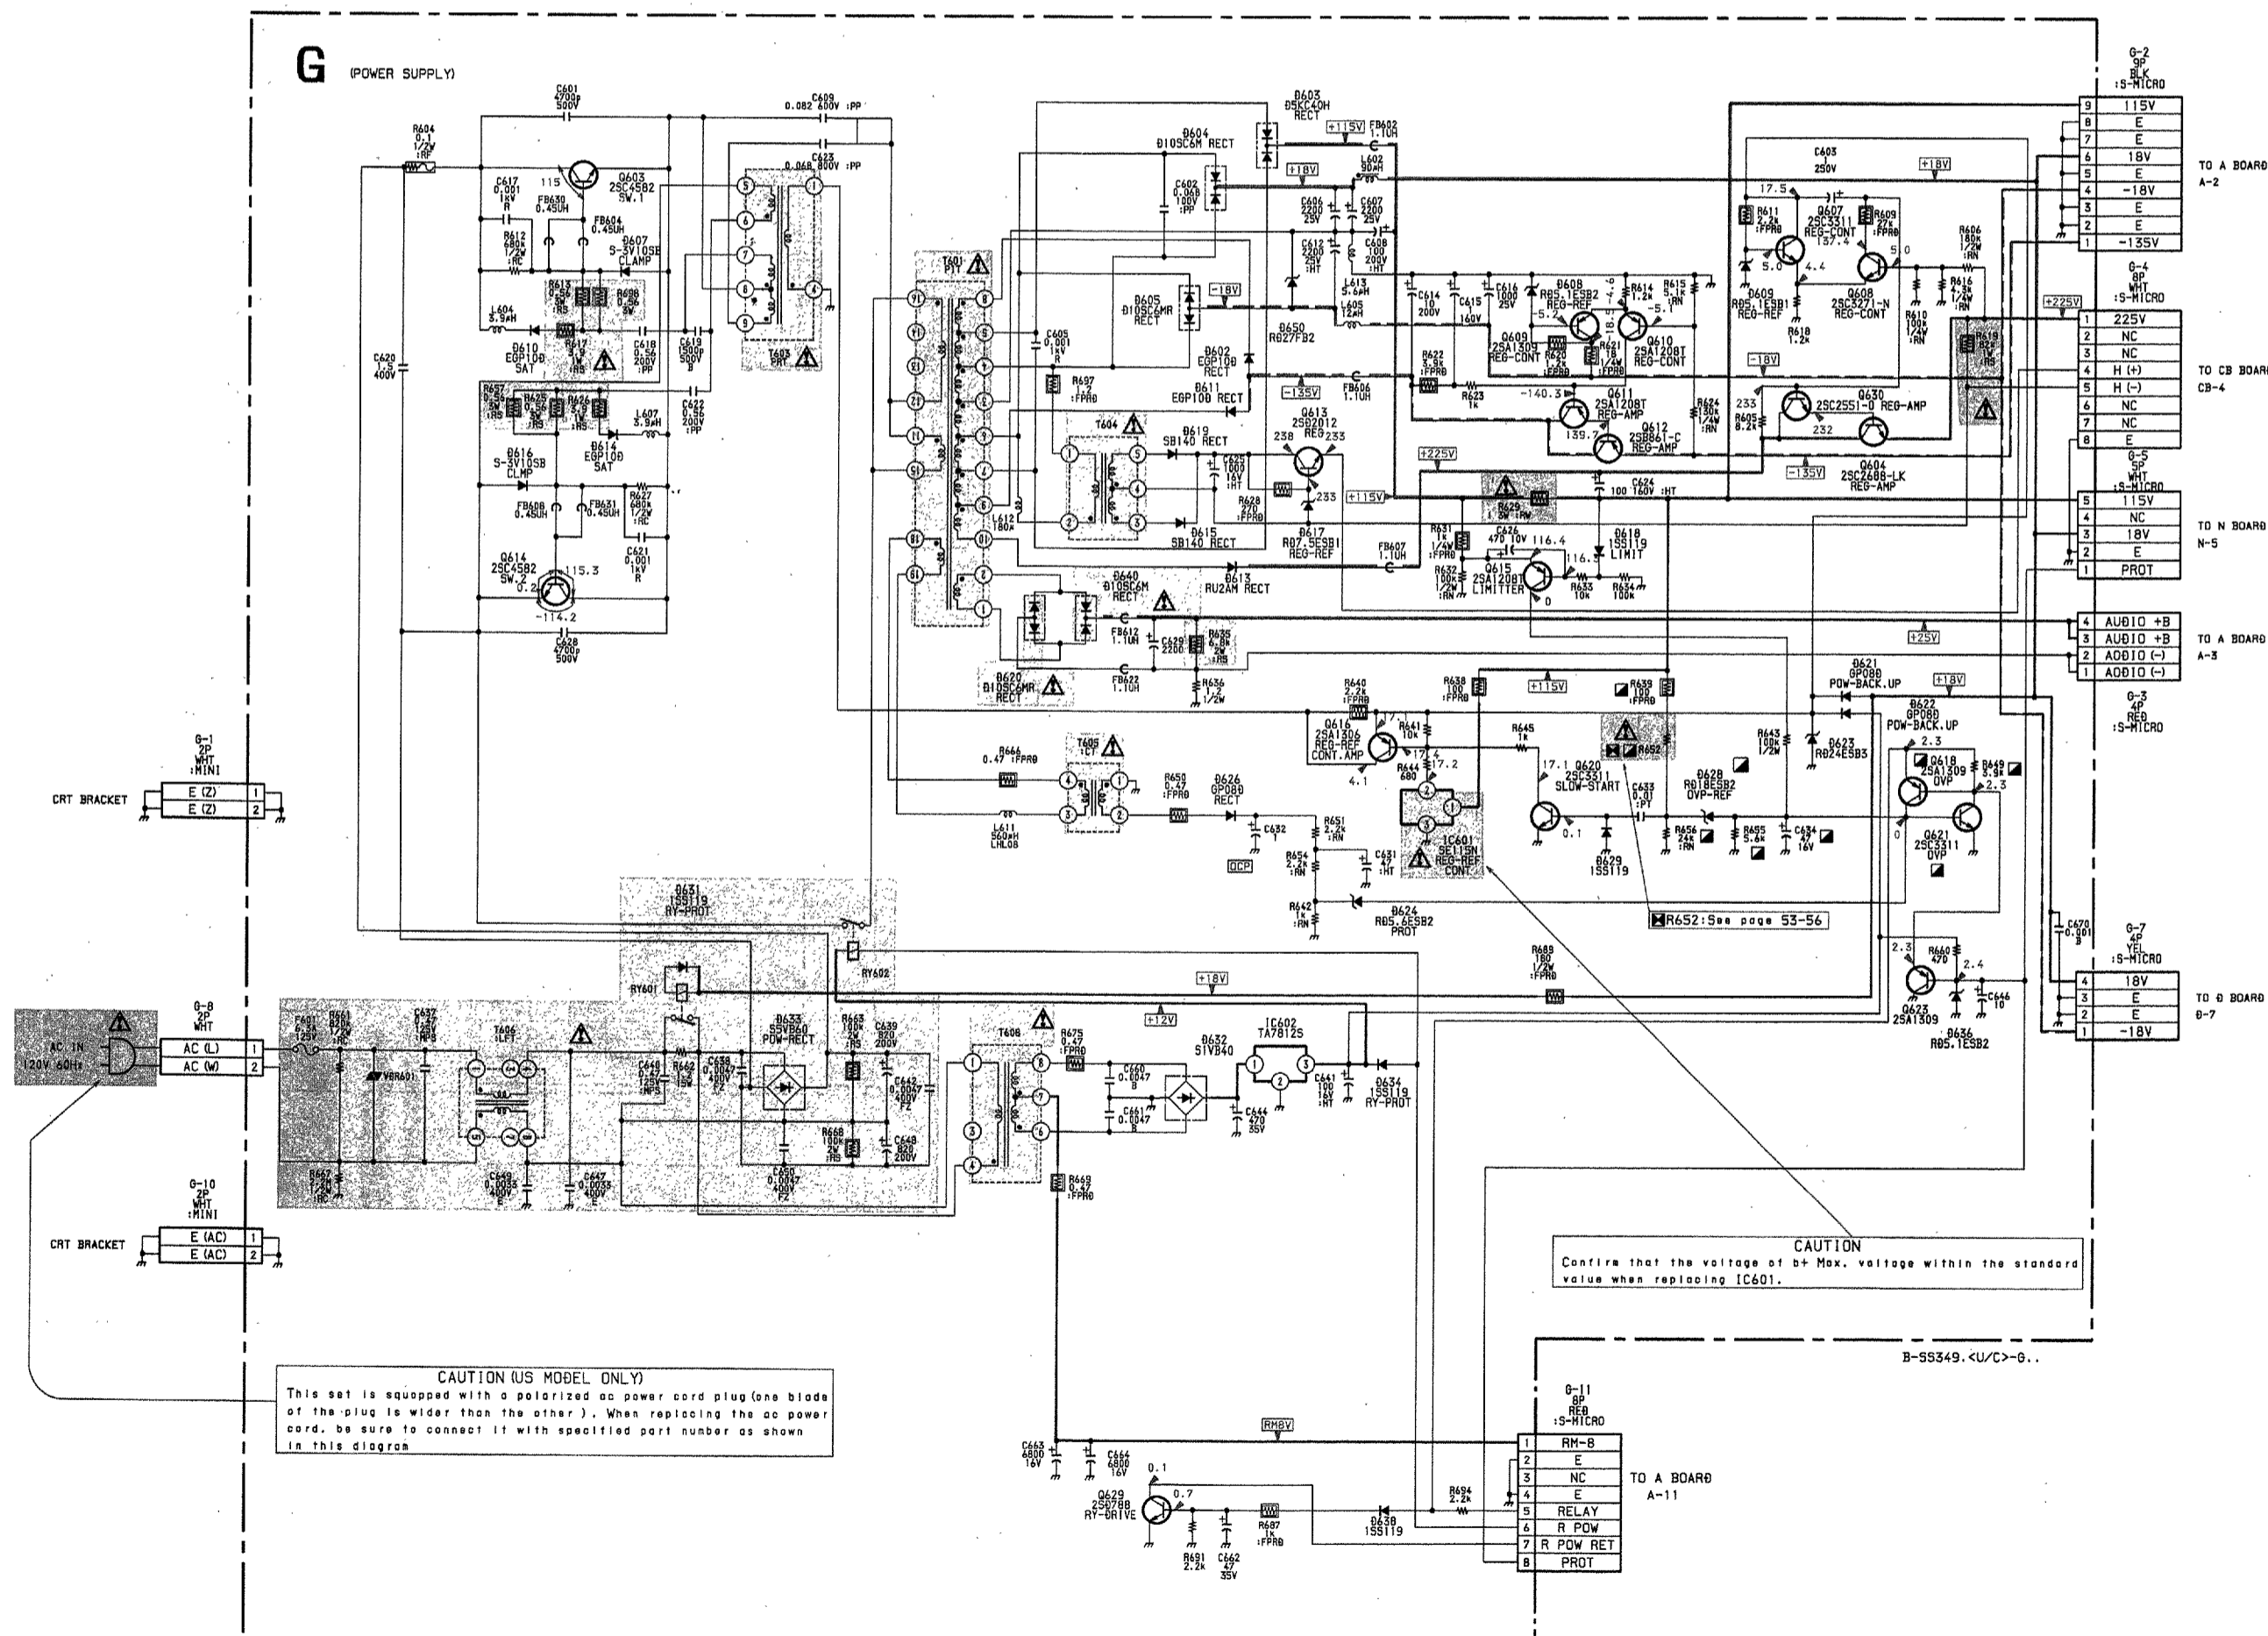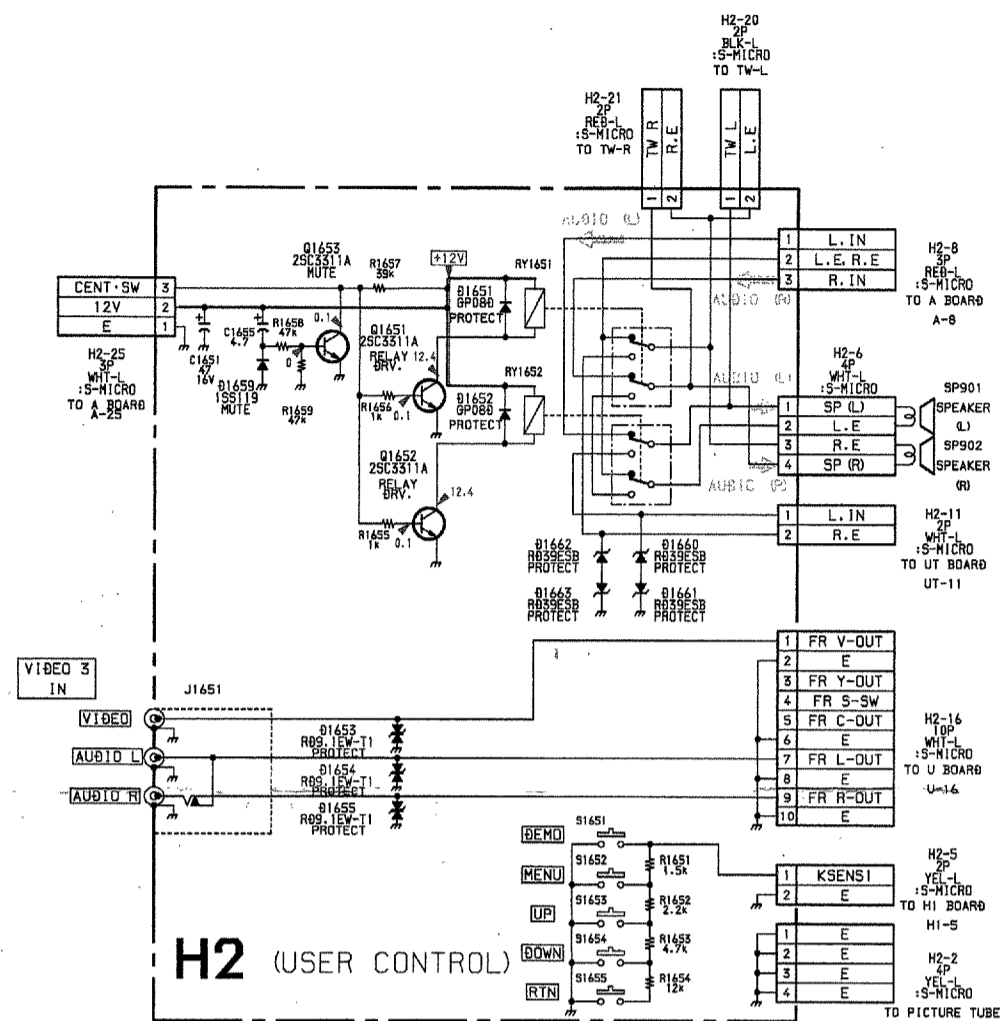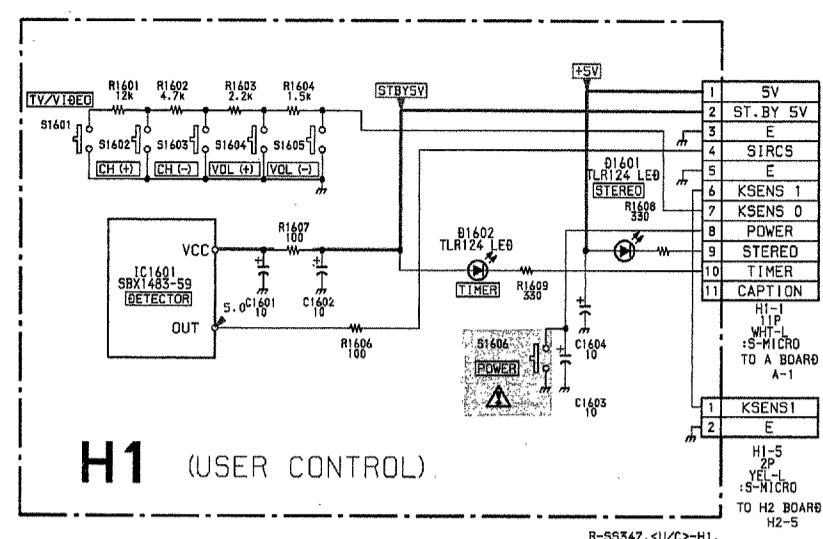


G [POWER SUPPLY]

H1 [USER CONTROL]

H2 [USER CONTROL]

DS [SIIN,WAVE, GEN]


- G Board -

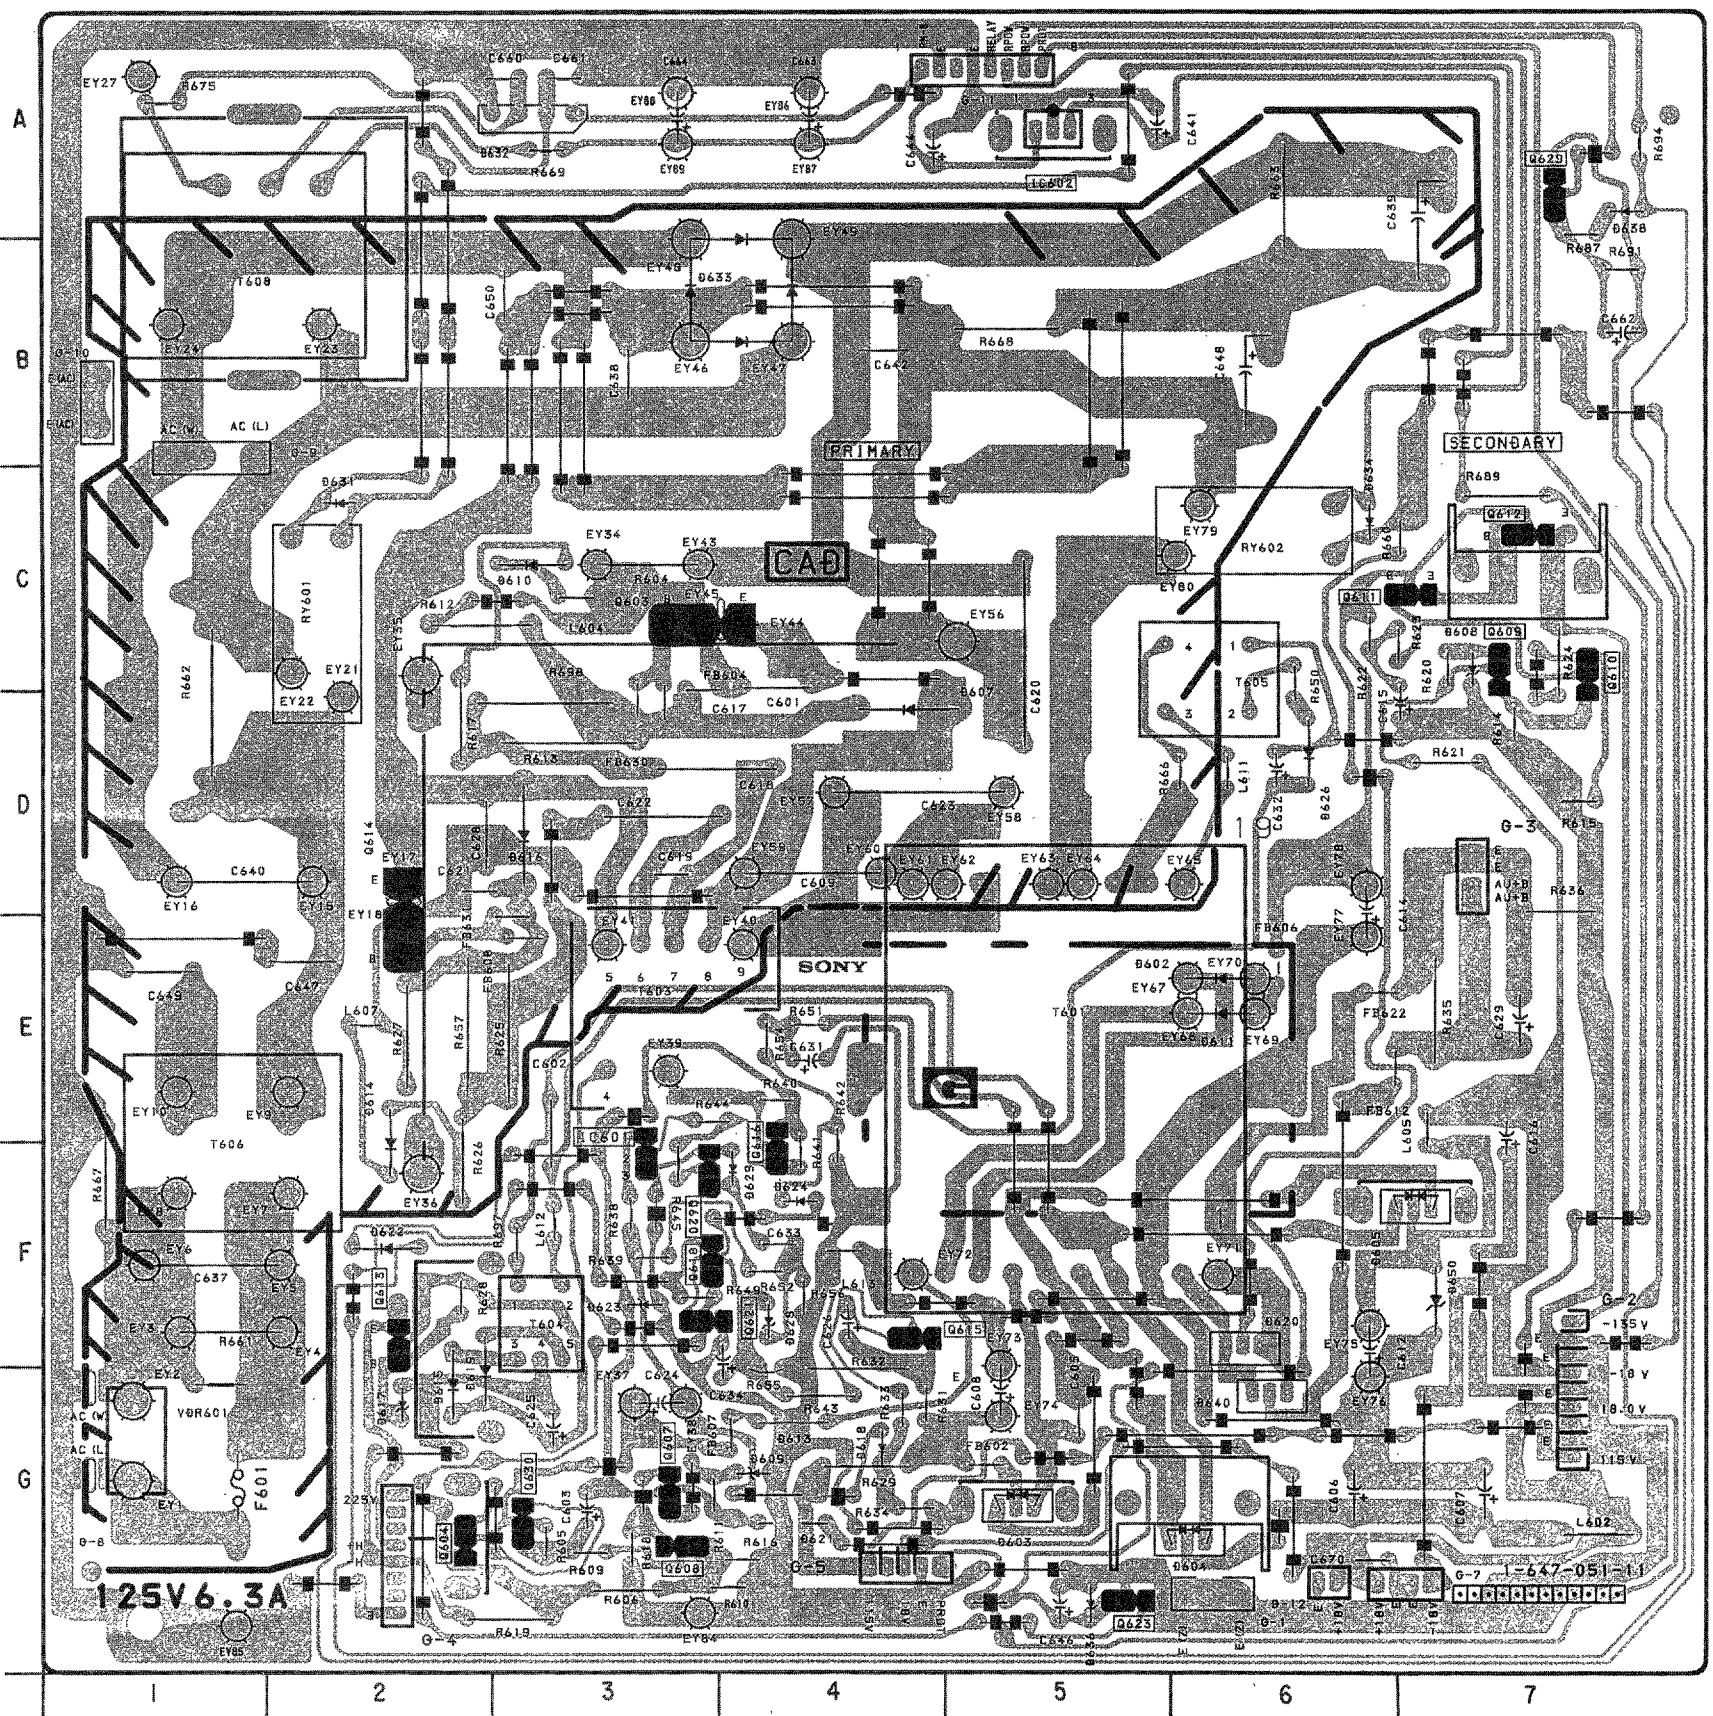


G Board

IC	
IC601	E-3
IC602	A-5
TRANSISTOR	
Q603	C-3
Q604	G-2
Q607	G-3
Q608	G-3
Q609	C-7
Q610	C-7
Q611	C-7
Q612	C-7
Q613	F-2
Q614	D-2
Q615	F-4
Q616	E-4
Q618	F-3
Q620	F-3
Q621	F-3
Q623	G-5
Q629	A-7
Q630	G-3
DIODE	
D602	E-6
D603	G-5
D604	G-6
D605	F-7
D607	D-4
D608	C-7
D609	G-4
D610	C-3
D611	E-6
D613	G-4
D614	E-2
D615	G-2
D616	D-3
D617	G-2
D618	G-4
D619	F-2
D620	F-6
D621	G-4
D622	F-2
D623	F-3
D624	F-4
D626	D-6
D628	F-4
D629	F-4
D631	C-2
D632	A-3
D633	B-4
D634	C-6
D636	G-5
D638	A-7
D640	G-6
D650	F-7


- H1 Board -

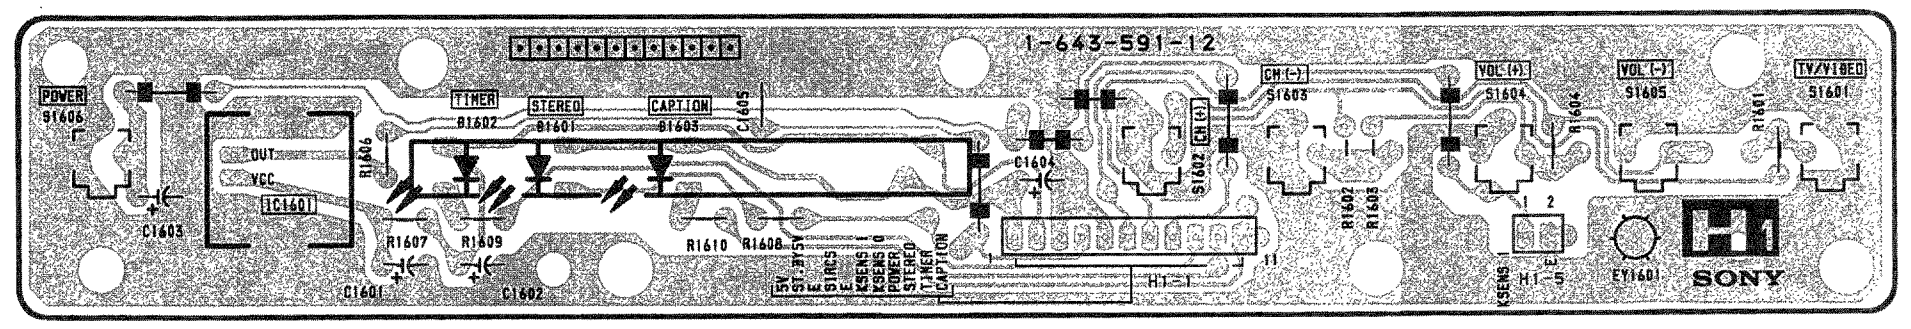

- H2 Board -

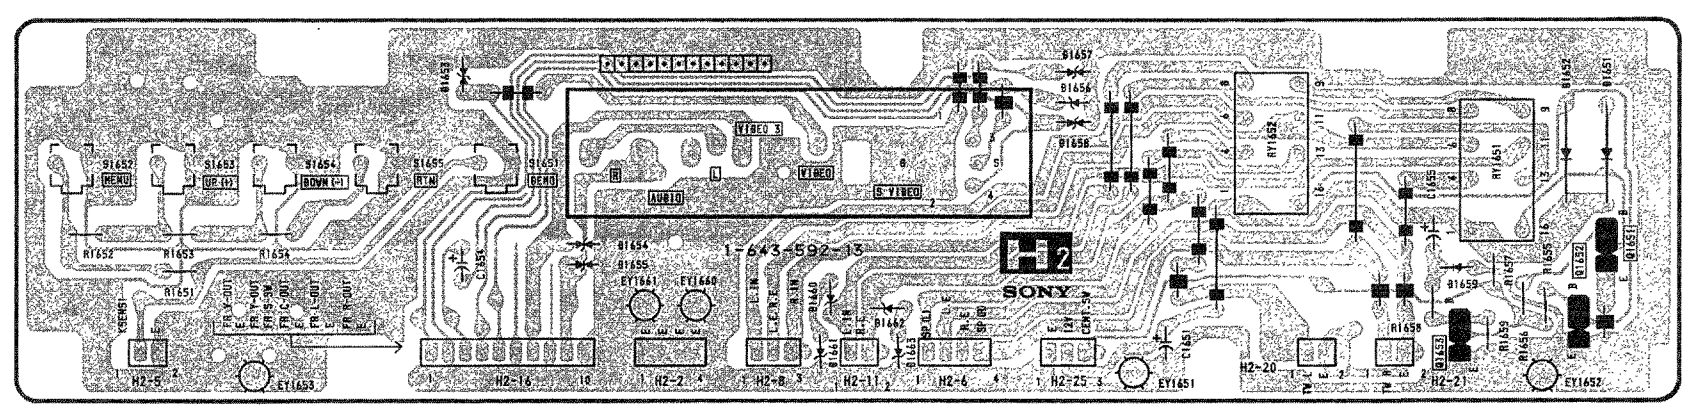


- DS Board -

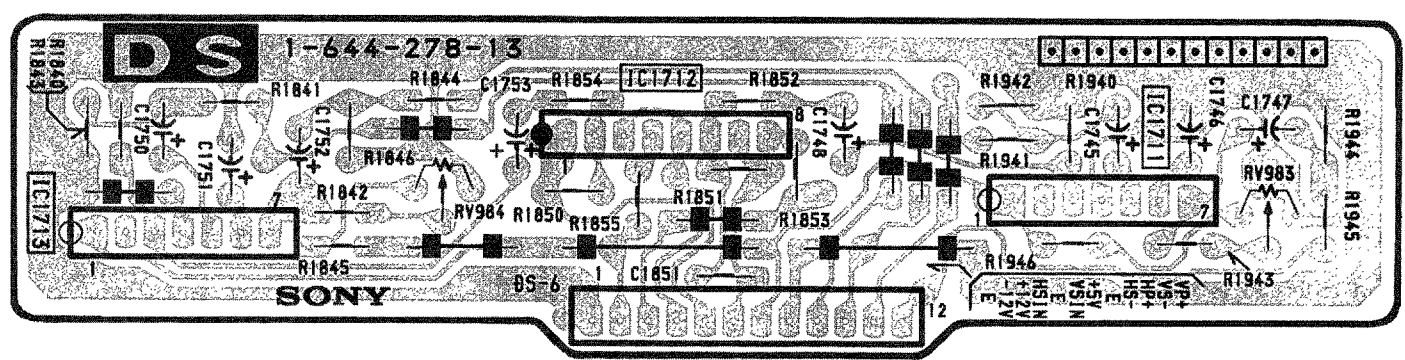


A Board

IC			
		D211	E-4
		D213	A-6
IC201	D-5	D214	A-5
IC204	D-6	D215	E-2
IC205	E-1	D216	E-1
IC206	B-6	D217	E-1
IC207	A-2	D219	G-5
IC506	G-9	D220	E-5
IC1401	C-5	D221	B-1
IC1601	F-9	D222	D-6
		D223	D-6
TRANSISTOR		D501	C-7
		D502	C-7
Q201	C-4	D503	B-9
Q202	G-3	D504	C-7
Q203	G-9	D505	F-7
Q501	C-9	D506	F-7
Q502	B-9	D507	B-8
Q504	G-7	D509	C-7
Q505	C-9	D510	A-1
Q506	C-9	D511	A-2
Q507	D-10	D512	C-9
Q508	B-10	D513	D-7
Q509	G-8	D514	G-7
Q510	C-8	D515	G-8
Q511	A-2	D1401	A-3
Q512	A-2	D1402	B-4
Q1401	B-4	D1403	C-7
Q1402	C-7	D1404	A-3
Q1407	B-5	D1405	A-3
Q1408	B-4	D1406	B-5
Q1601	E-9	D1407	A-4
Q1602	E-10	D1408	B-5
Q1603	E-10	D1409	A-4
Q1604	E-10	D1410	D-4
Q1605	E-9	D1607	G-10
Q1606	E-9	D1608	G-10
Q1620	D-8		
DIODE			
D203	G-9		
D204	B-2		
D205	E-4		
D206	D-7		
D207	D-7		
D208	E-7		
D209	B-6		

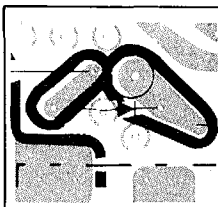

NOTE:

The circuit indicated as left contains high voltage of over 600 Vp-p. Care must be paid to prevent an electric shock in inspection or repairing.

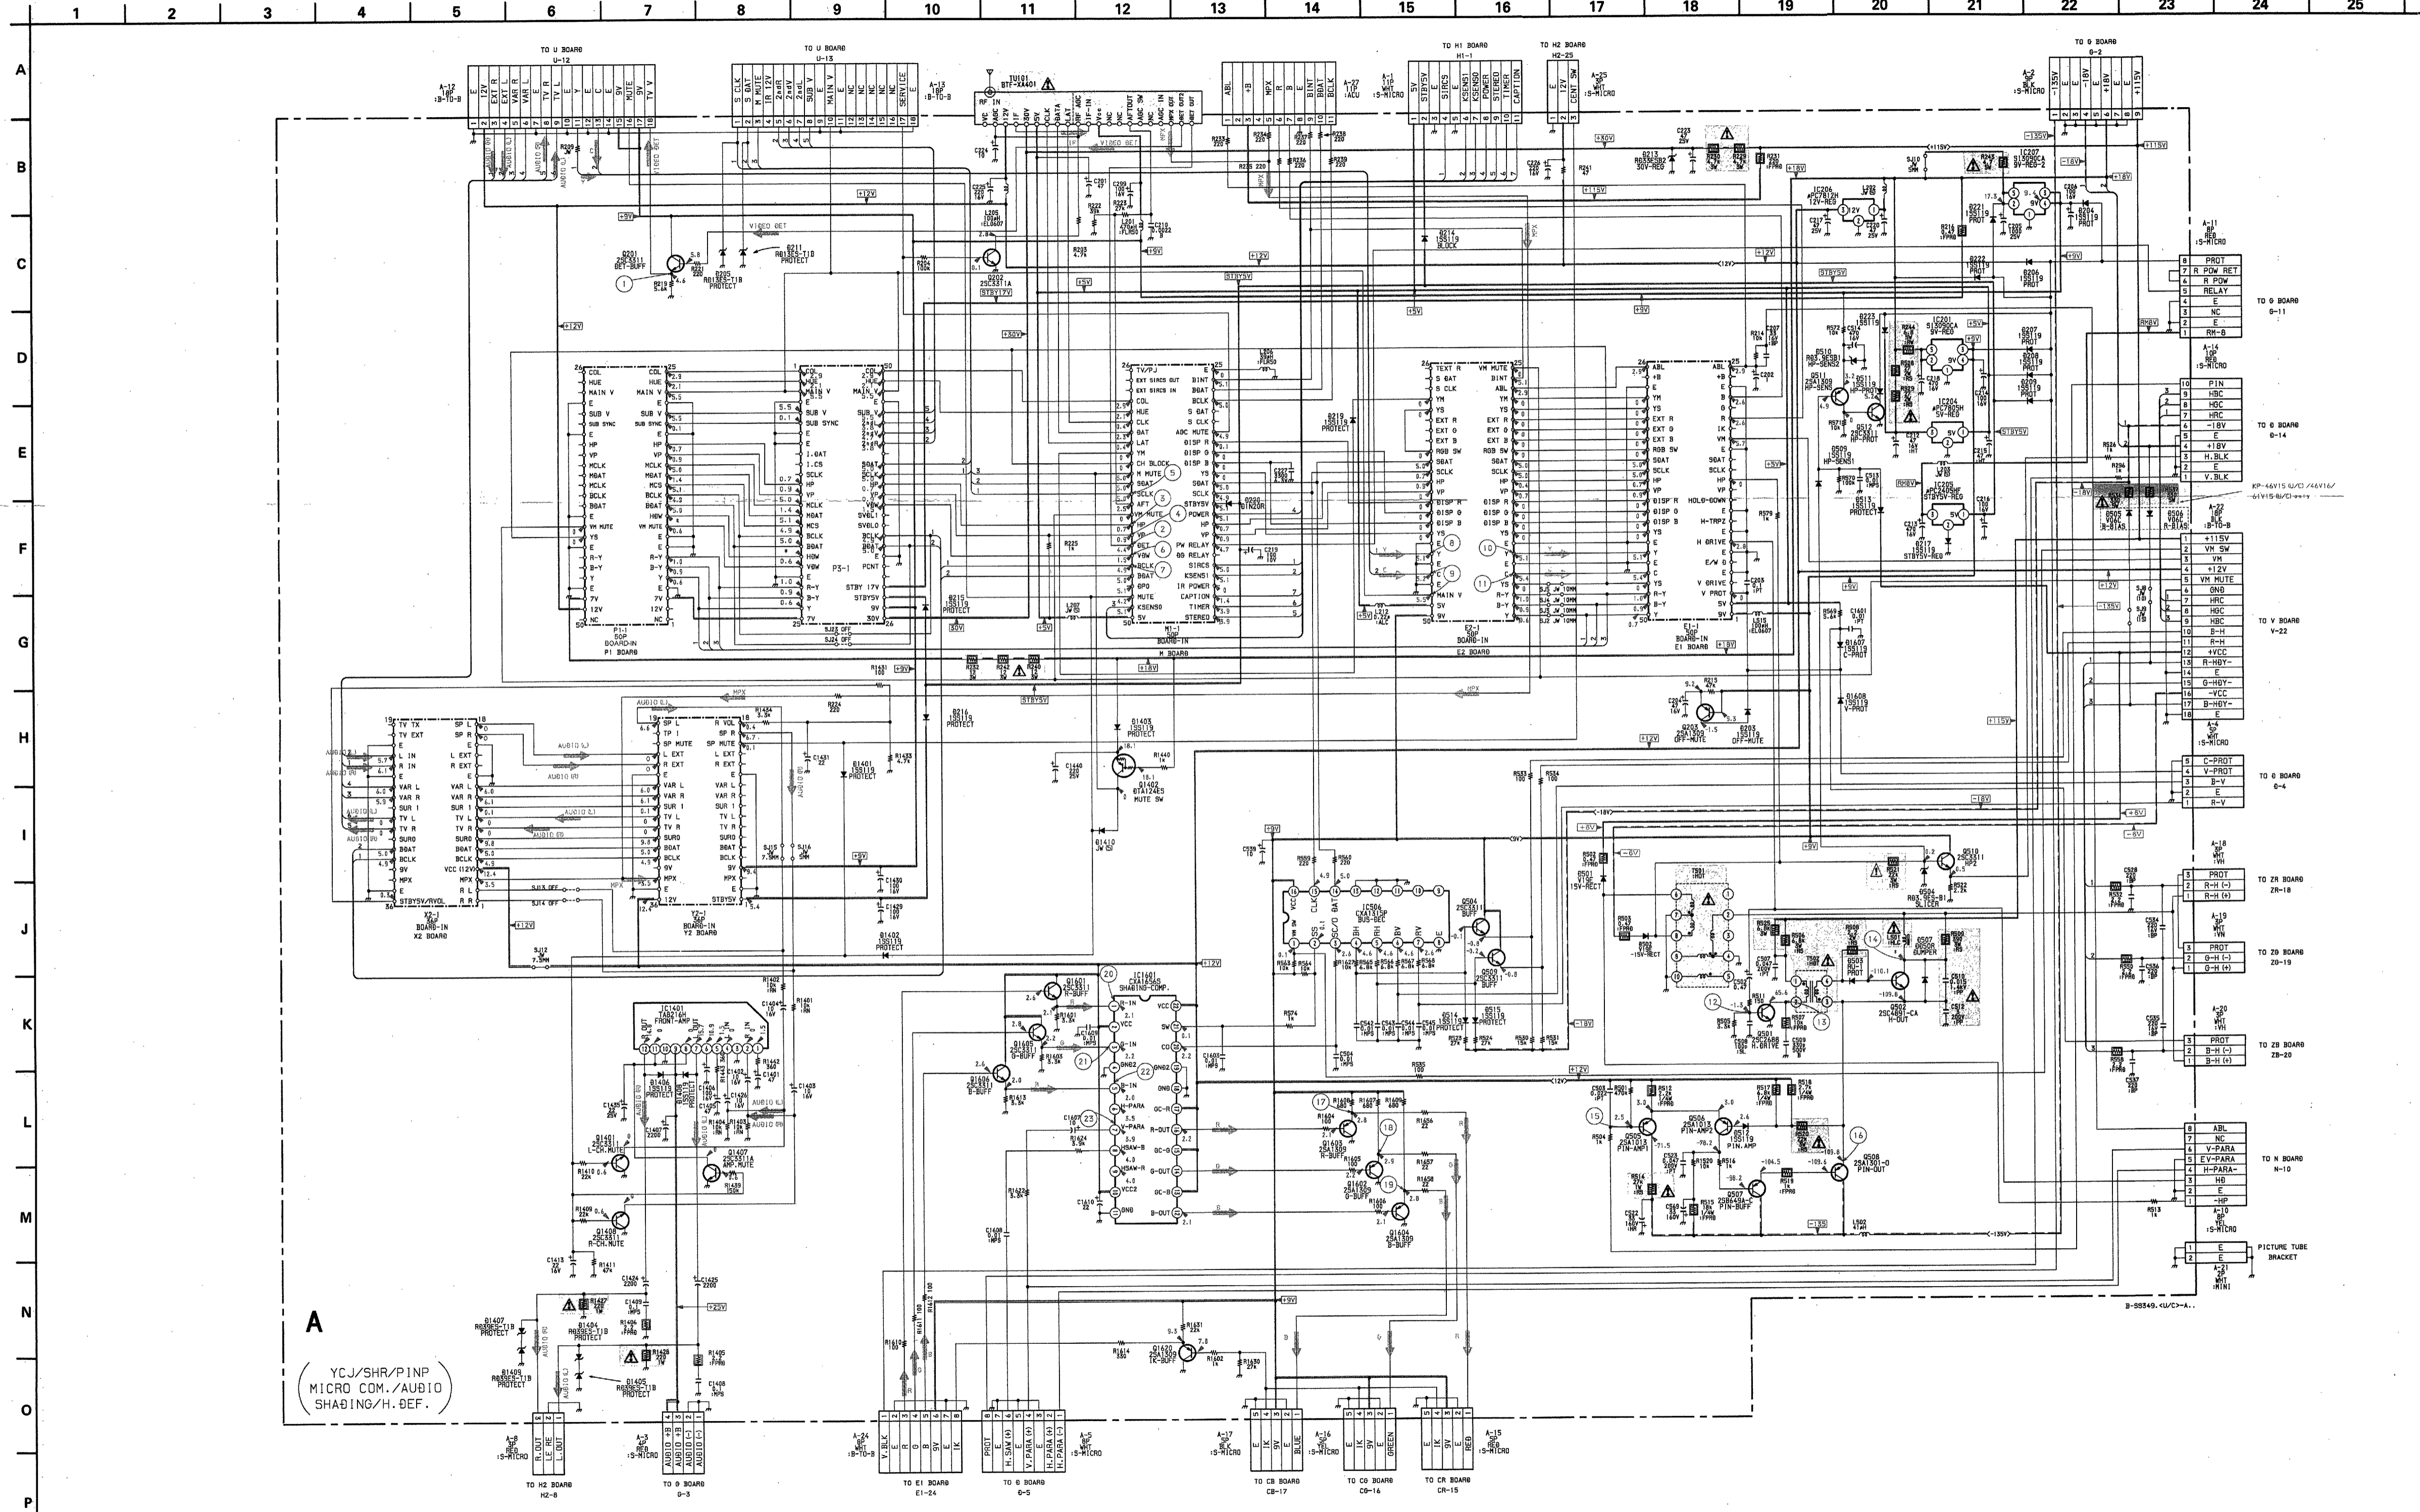


A
 YCJ/SHR/PINP
 MICRO COM./AUDIO
 SHADING/H. DEF.

A Board IC201, 207 SI-3090CA


A Board IC401 TA8216H

• A BOARD WAVEFORMS


①	②	③
1.2Vp-p (H)	1.2Vp-p (H)	2.5Vp-p (H)
④	⑤	⑥
2.0Vp-p (V)	2.0Vp-p (V)	2.0Vp-p (V)
⑦	⑧	⑨
1.8Vp-p (V)	1.0Vp-p (H)	1.2Vp-p (H)
⑩	⑪	⑫
1.0Vp-p (H)	0.8Vp-p (H)	1.4Vp-p (H)
⑬	⑭	⑮
58Vp-p (H)	450Vp-p (H)	0.7Vp-p (V)
⑯	⑰	⑱
12.0Vp-p (V)	1.5Vp-p (H)	1.5Vp-p (H)
⑲	⑳	㉑
1.4Vp-p (H)	1.6Vp-p (H)	1.6Vp-p (H)
㉒	㉓	
1.4Vp-p (H)	1.5Vp-p (V)	

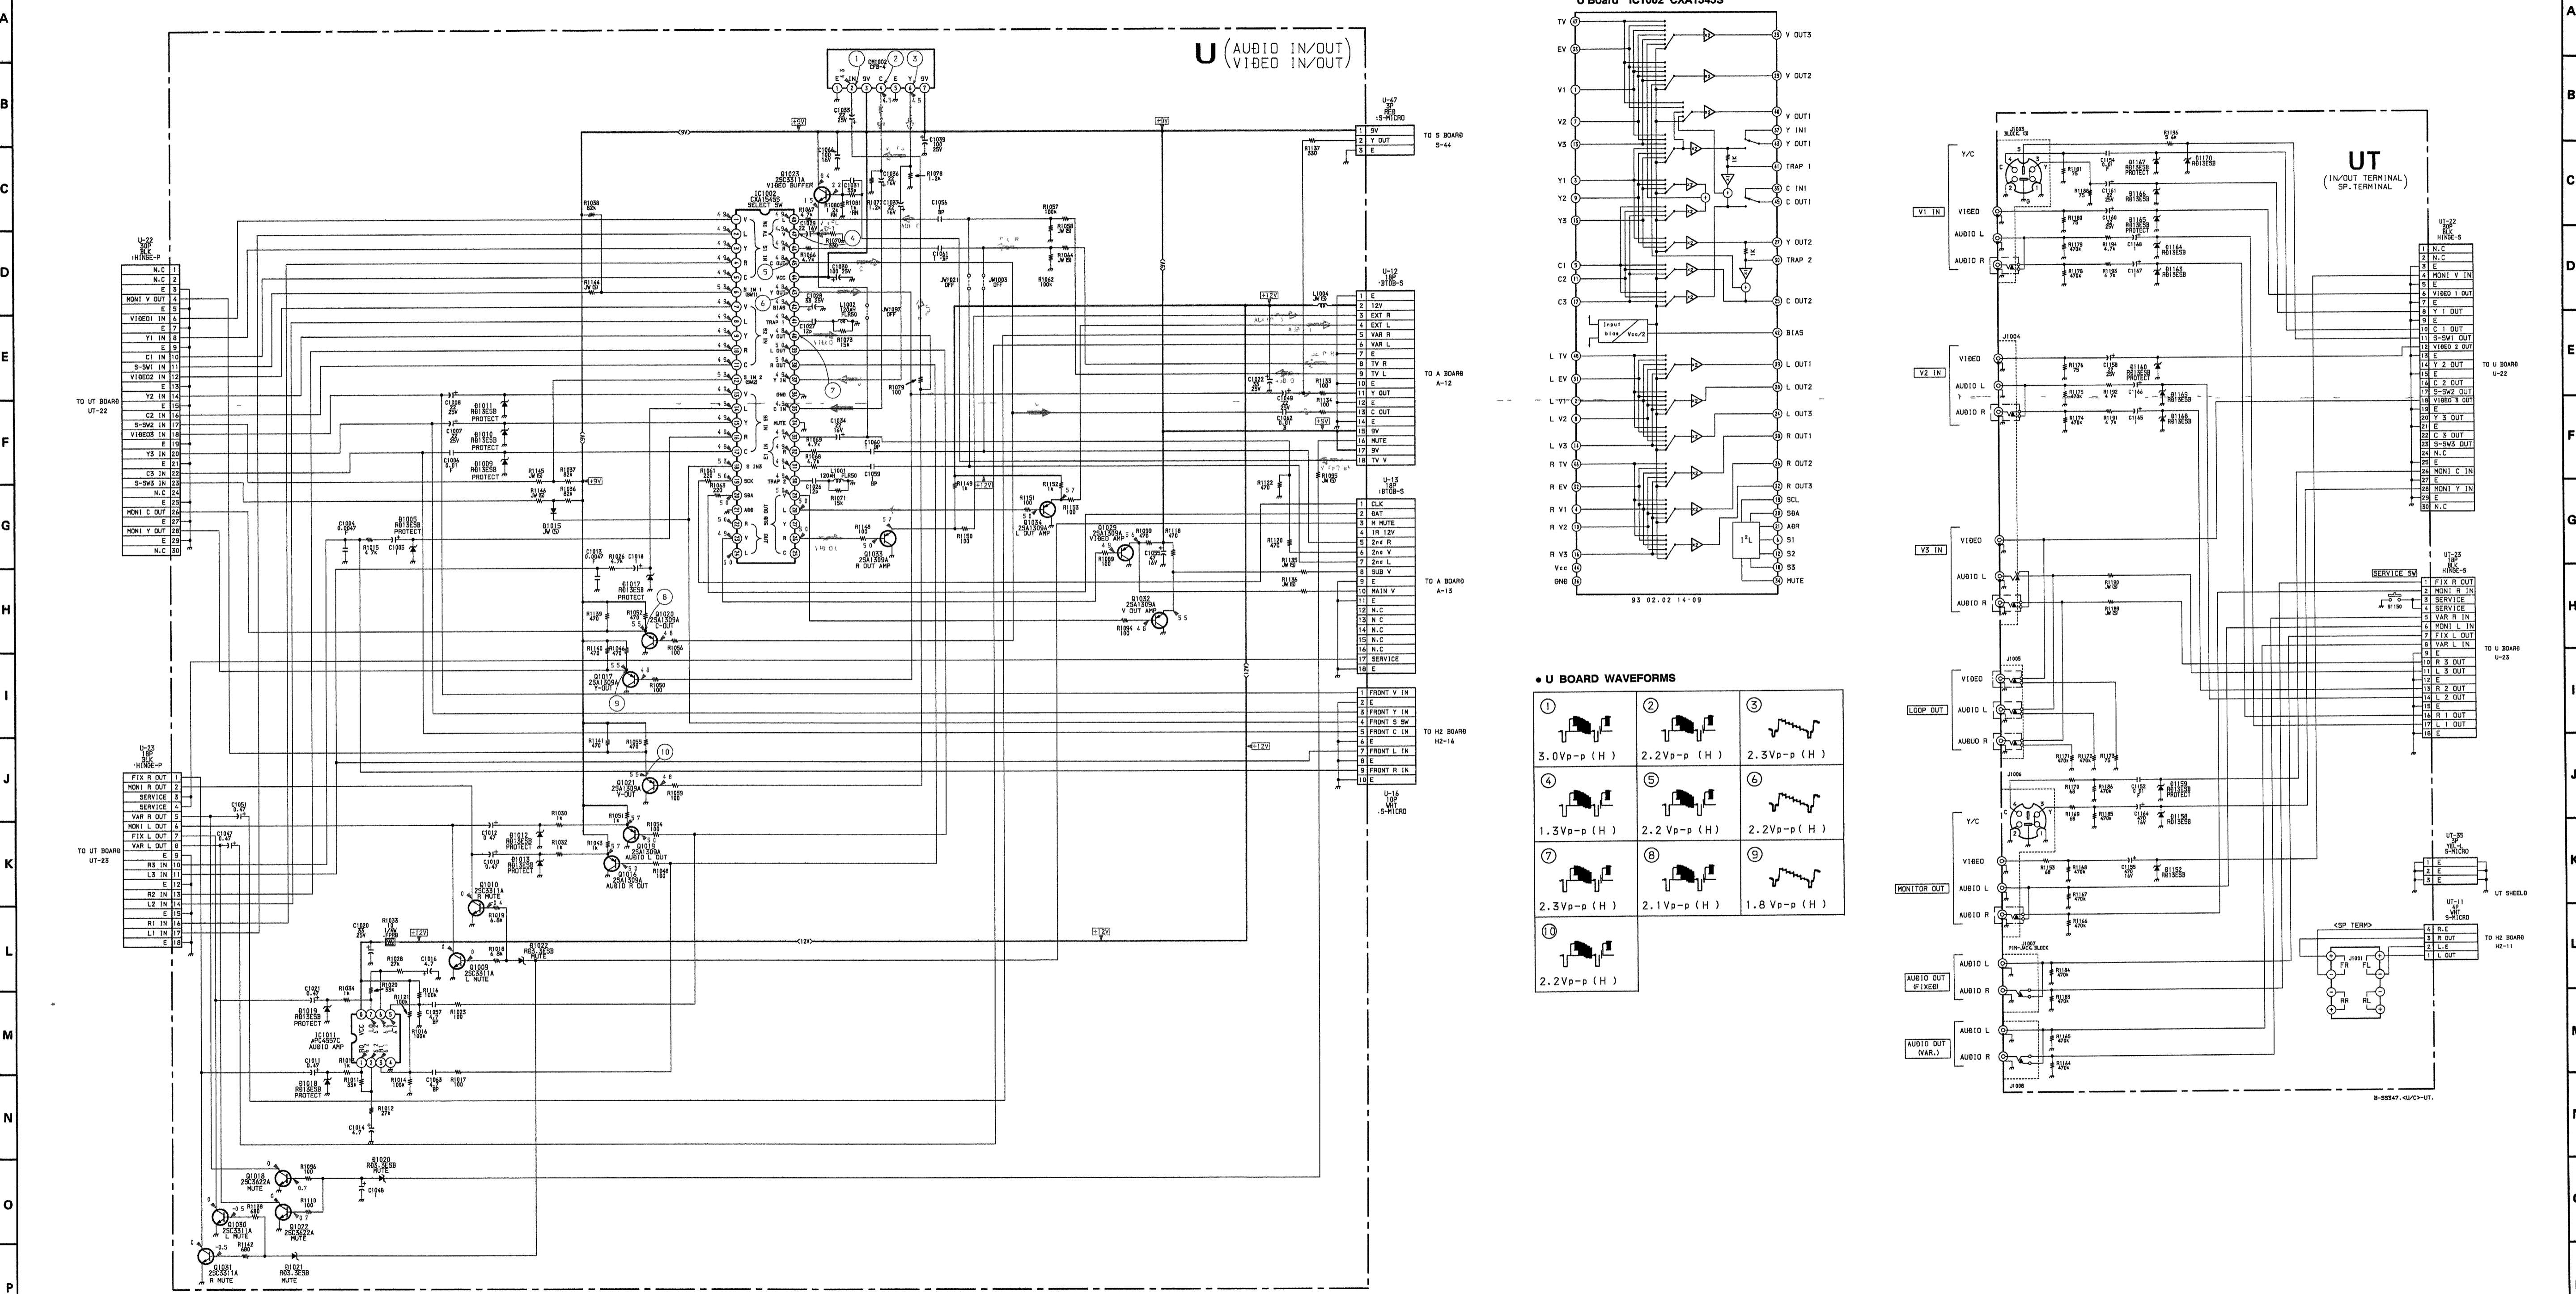

U Board IC1002 CXA1545S

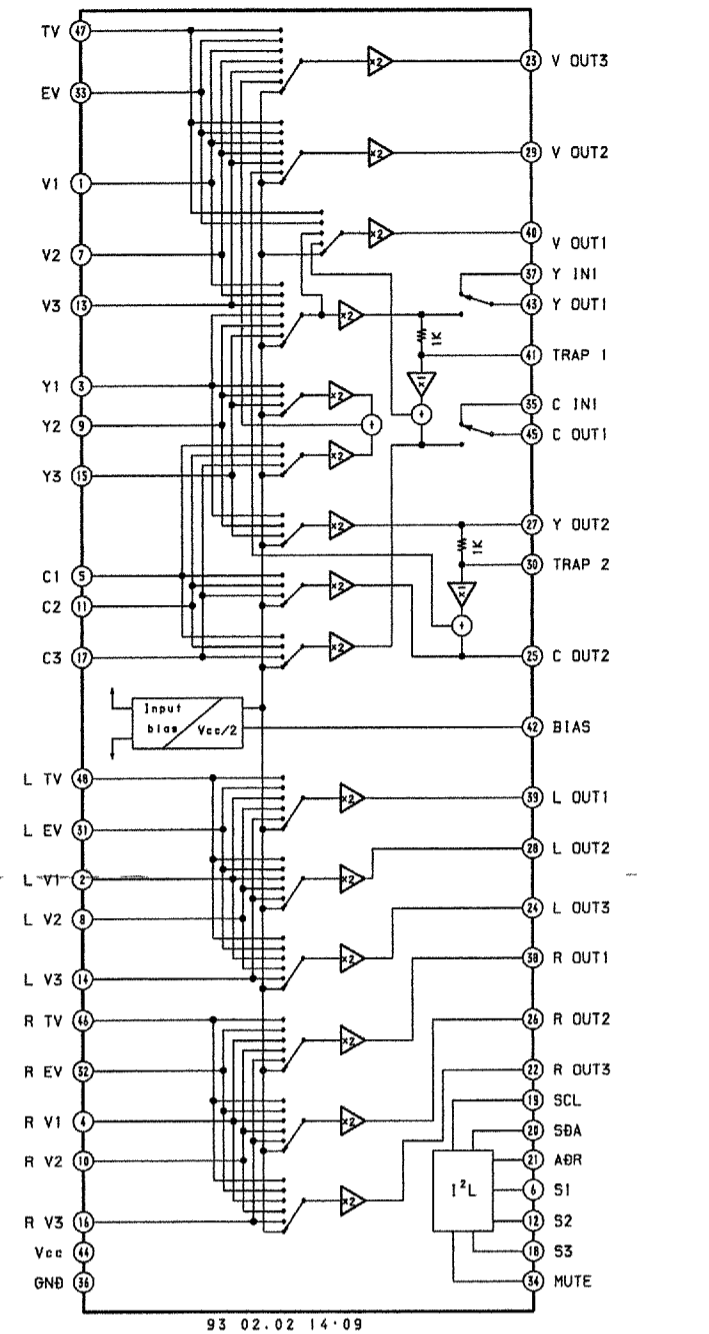

U BOARD WAVEFORMS


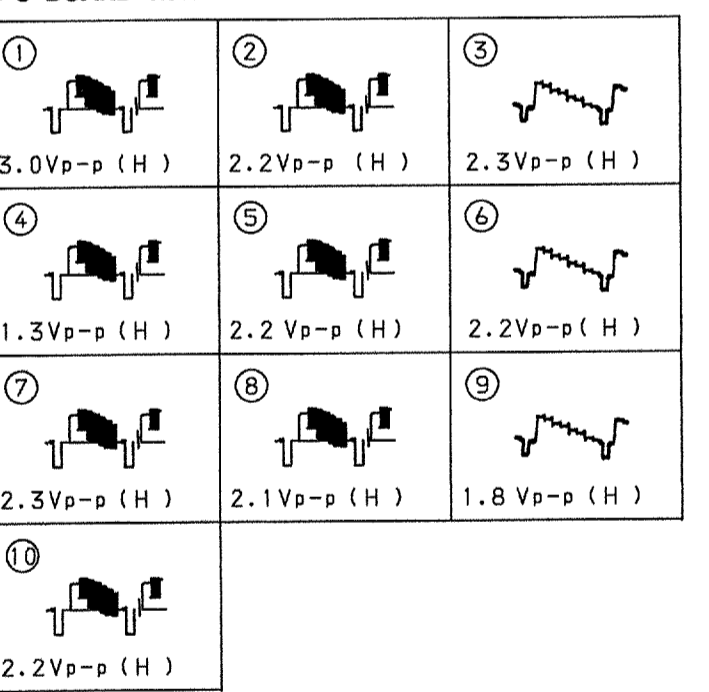


E1 [Y/C JUNGLE]

- E1 Board -

E1 Board

IC	
IC301	C-5
IC302	B-4, G-4
IC303	C-3
TRANSISTOR	
Q301	C-2
Q302	C-1
Q303	G-1
Q304	A-2
Q305	B-1
Q306	H-3
Q307	C-2
Q309	F-2
Q310	D-2
Q311	B-2
Q312	B-2
Q314	B-2
Q315	G-5
Q316	G-5
Q317	E-3
Q321	D-2
Q322	G-4
Q323	F-3
Q324	G-3
Q325	G-3
Q326	D-5
Q327	G-3
Q328	F-5
Q329	C-3
Q330	C-3
Q333	D-4
Q334	D-4
Q335	D-4
Q340	E-4
Q342	D-5
Q344	D-3
DIODE	
D301	F-1
D302	G-1
D303	G-1
D304	B-3
D305	F-3
D306	C-4
D307	G-4
D310	G-4
D312	G-4
D313	G-3
D314	G-3
D315	G-2
D316	G-3
D317	B-5
D318	F-5
D319	B-5
D320	G-5
D321	B-2

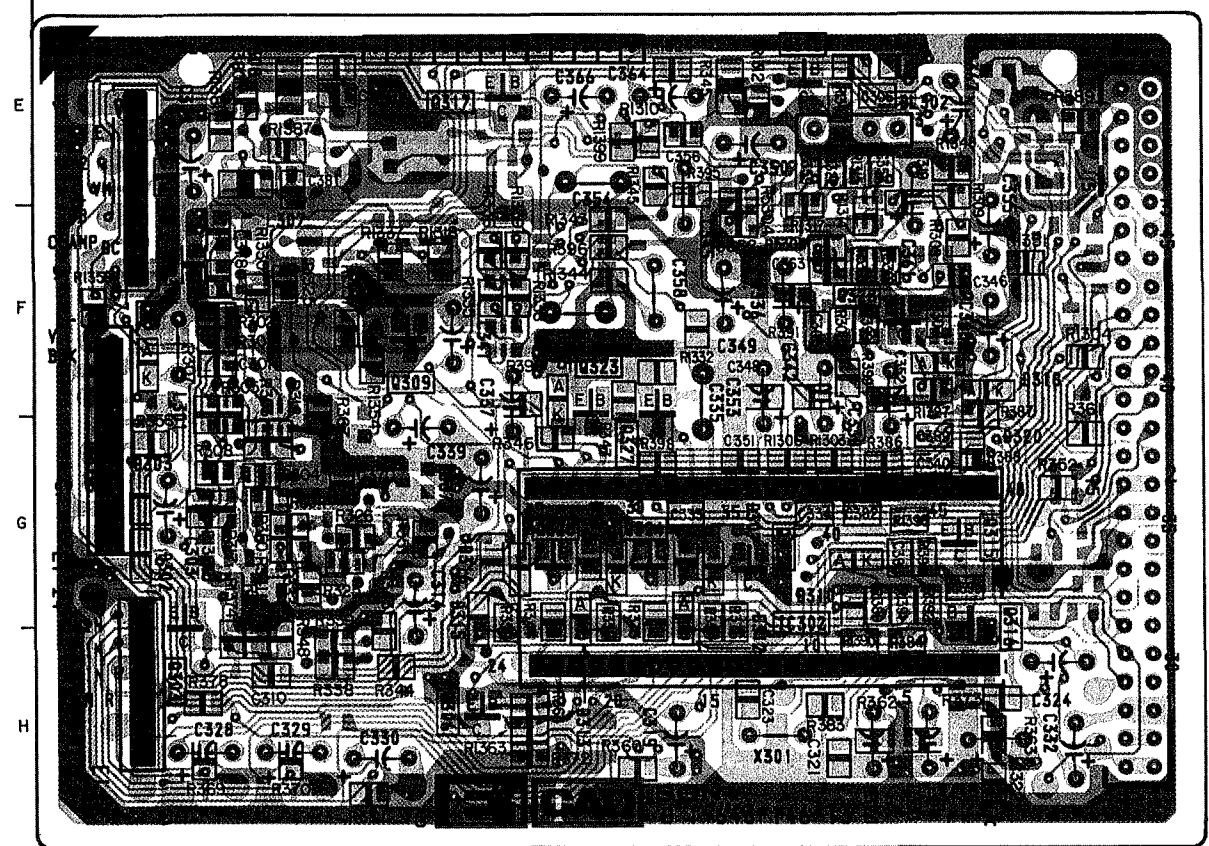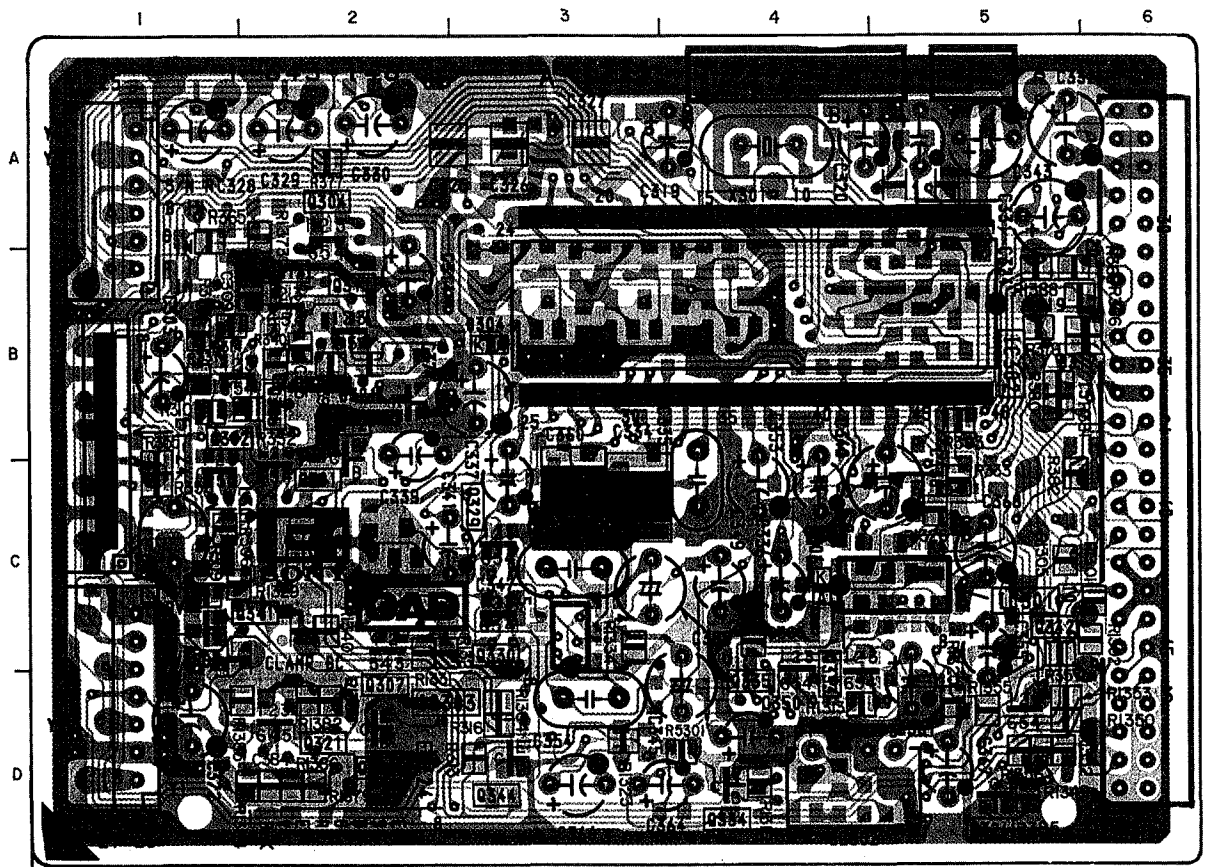


- [Pattern] : Pattern from the side which enables seeing.
- [Pattern] : Pattern of the rear side.

E2

SHRPNESS CONT.
 CHARACTOR GENERATER

- E2 Board -

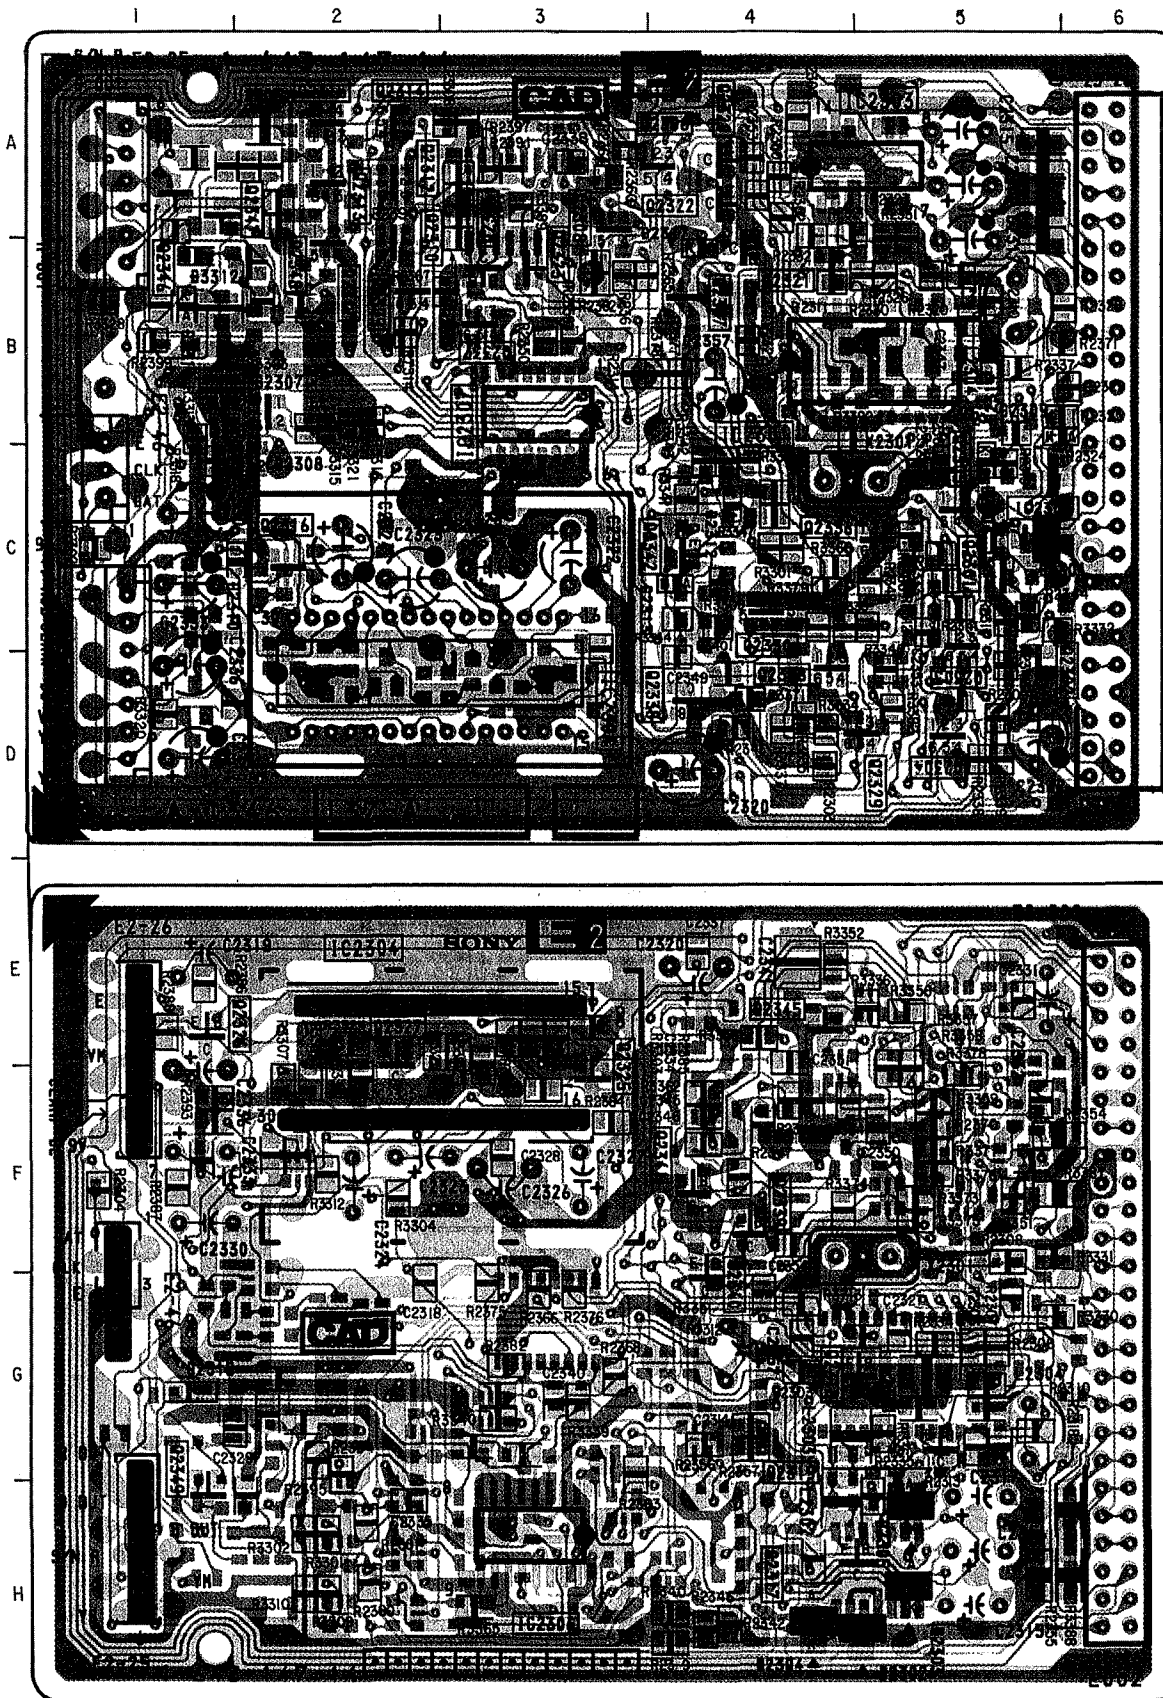

E2 Board

IC

IC2031	B-4
IC2303	A-5
IC2304	D-3, E-2
IC2306	H-3
IC2307	B-3

TRANSISTOR





Q2301	C-5
Q2303	C-5
Q2304	D-5
Q2305	C-5
Q2306	A-3
Q2307	B-4
Q2308	A-3
Q2309	B-2
Q2310	A-2
Q2311	A-2
Q2312	A-2
Q2313	A-2
Q2314	A-2
Q2315	A-2
Q2317	H-4
Q2318	G-4
Q2319	G-5
Q2320	A-4
Q2321	A-4
Q2322	A-4
Q2324	B-3
Q2326	E-1
Q2327	E-2
Q2328	D-4
Q2329	D-4
Q2330	C-4
Q2336	C-5
Q2337	B-3
Q2339	F-4
Q2340	F-4
Q2341	F-4



DIODE

D2306	C-5
D2307	B-2
D2308	B-2
D2309	B-5
D2312	C-4
D2313	C-4
D2314	B-5
D2317	A-4


- [Pattern] : Pattern from the side which enables seeing.
- [Pattern] : Pattern of the rear side.

1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30

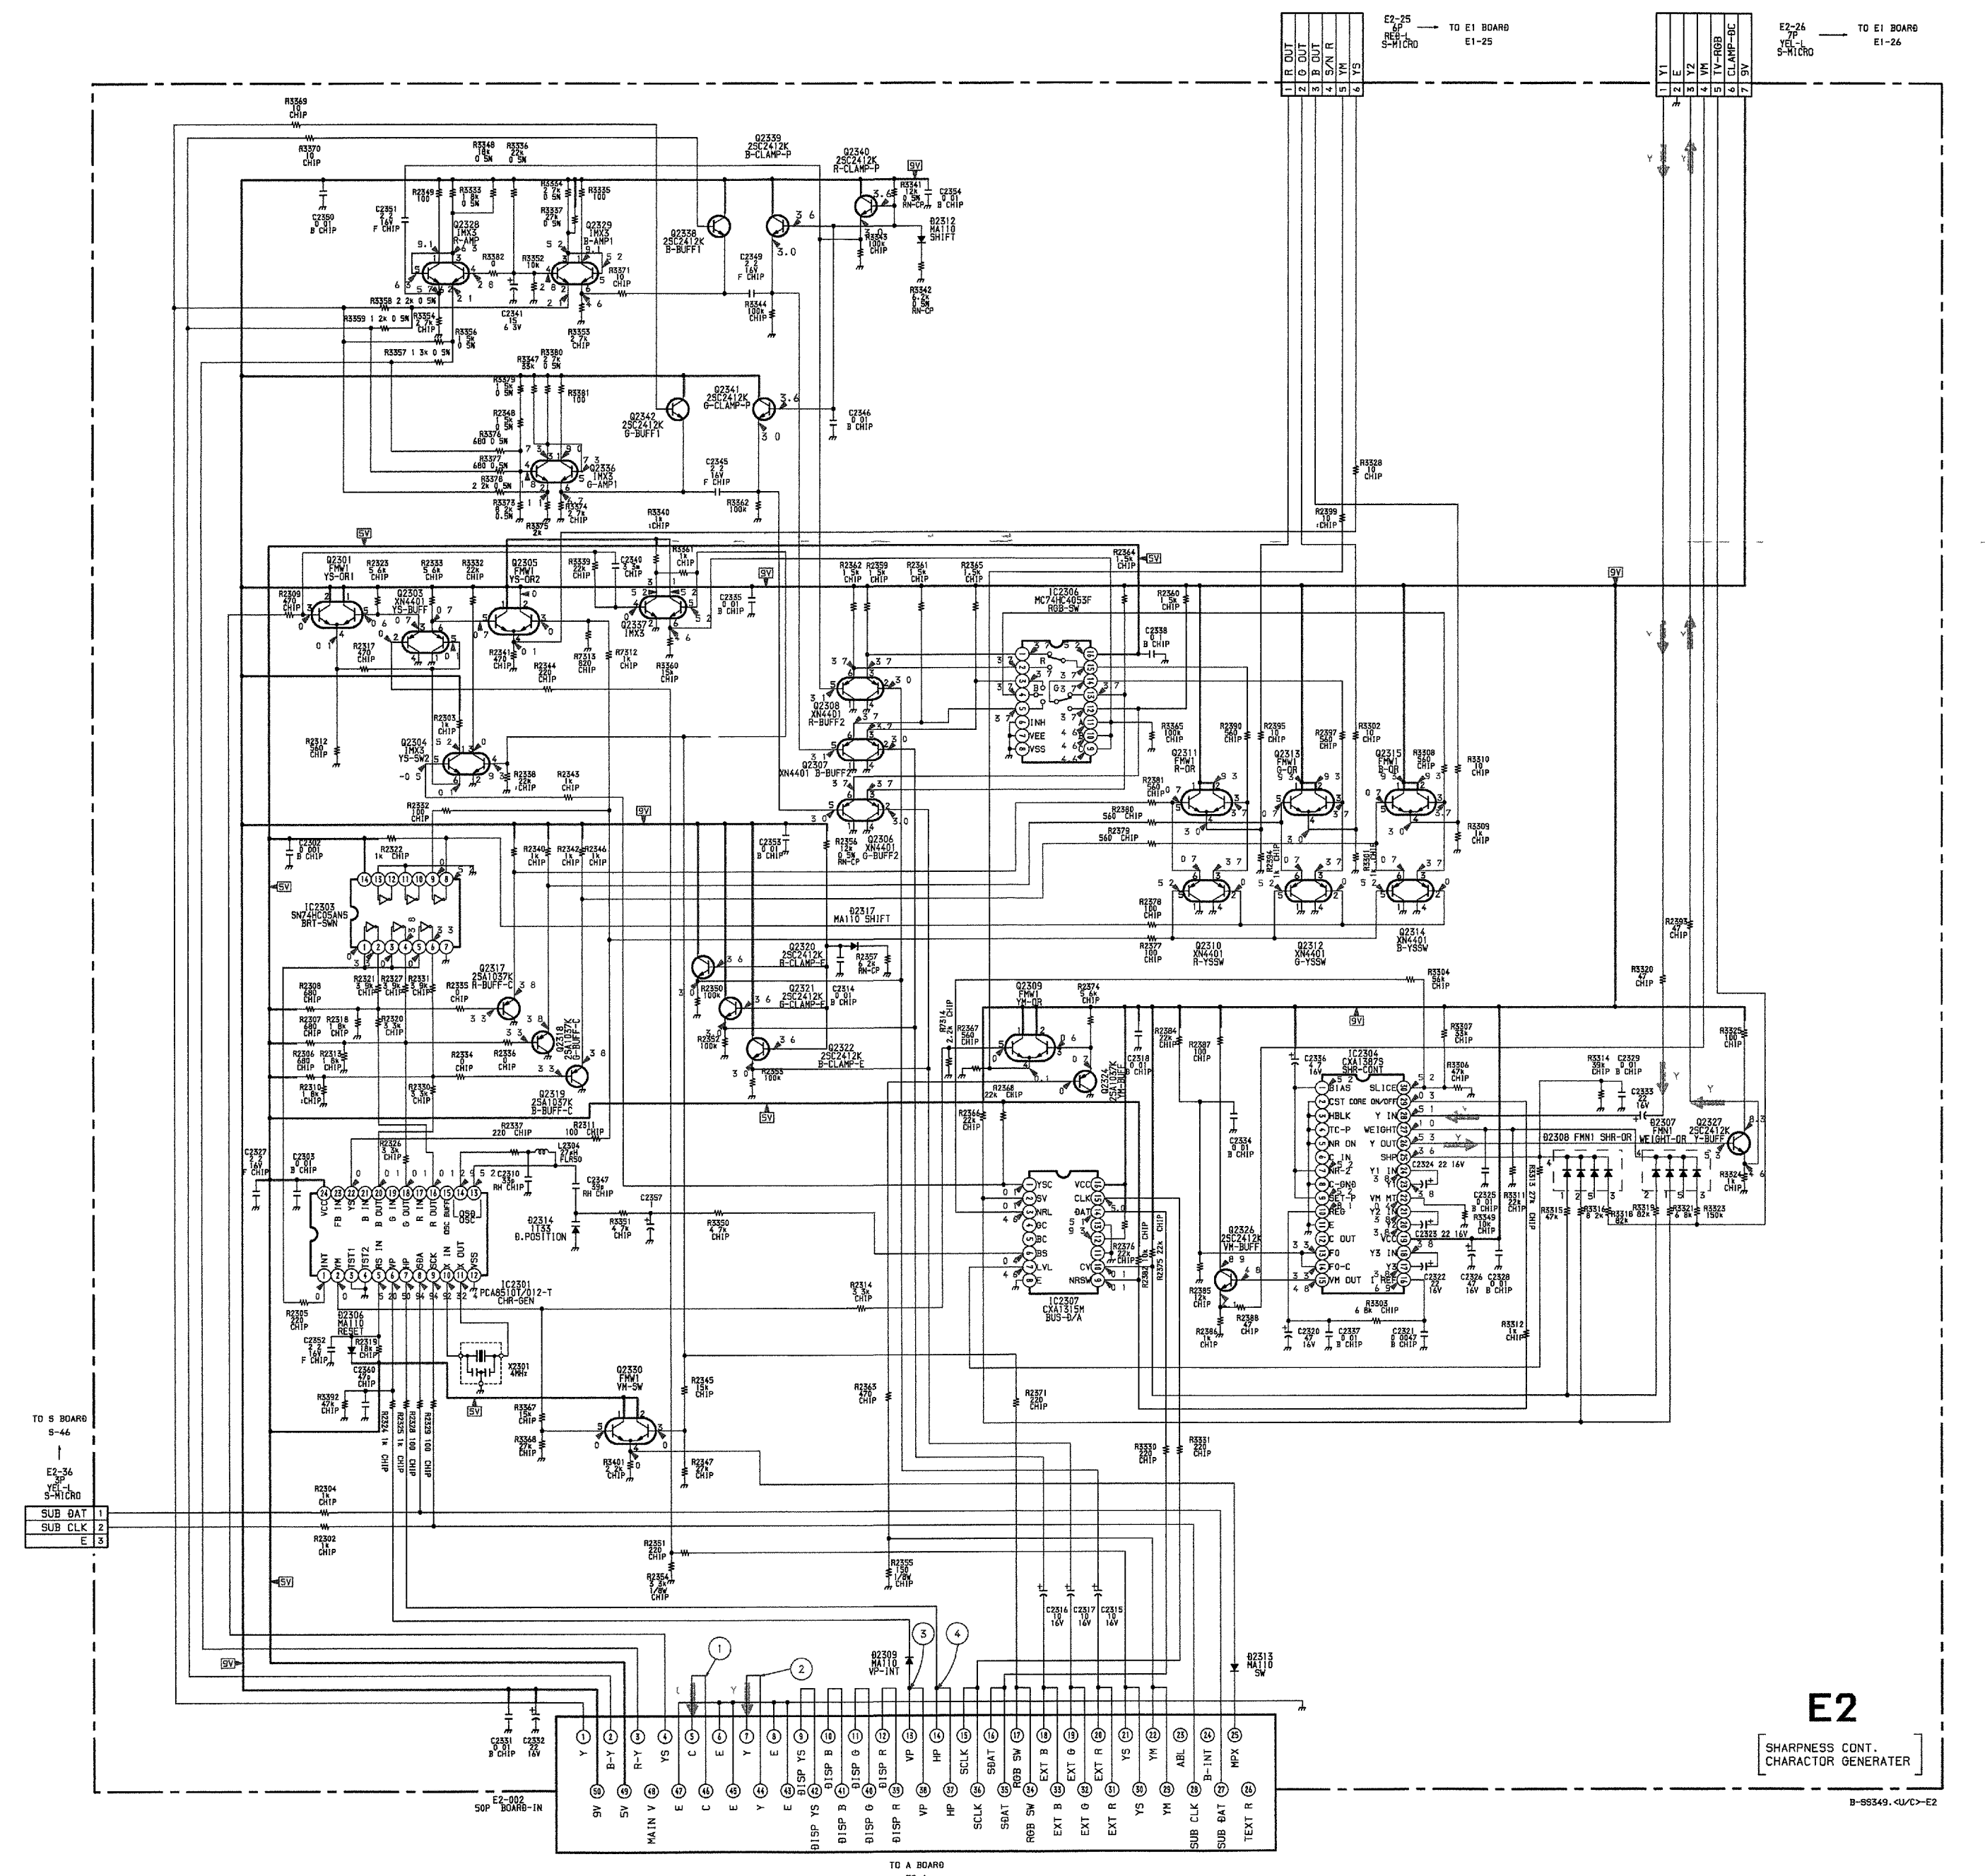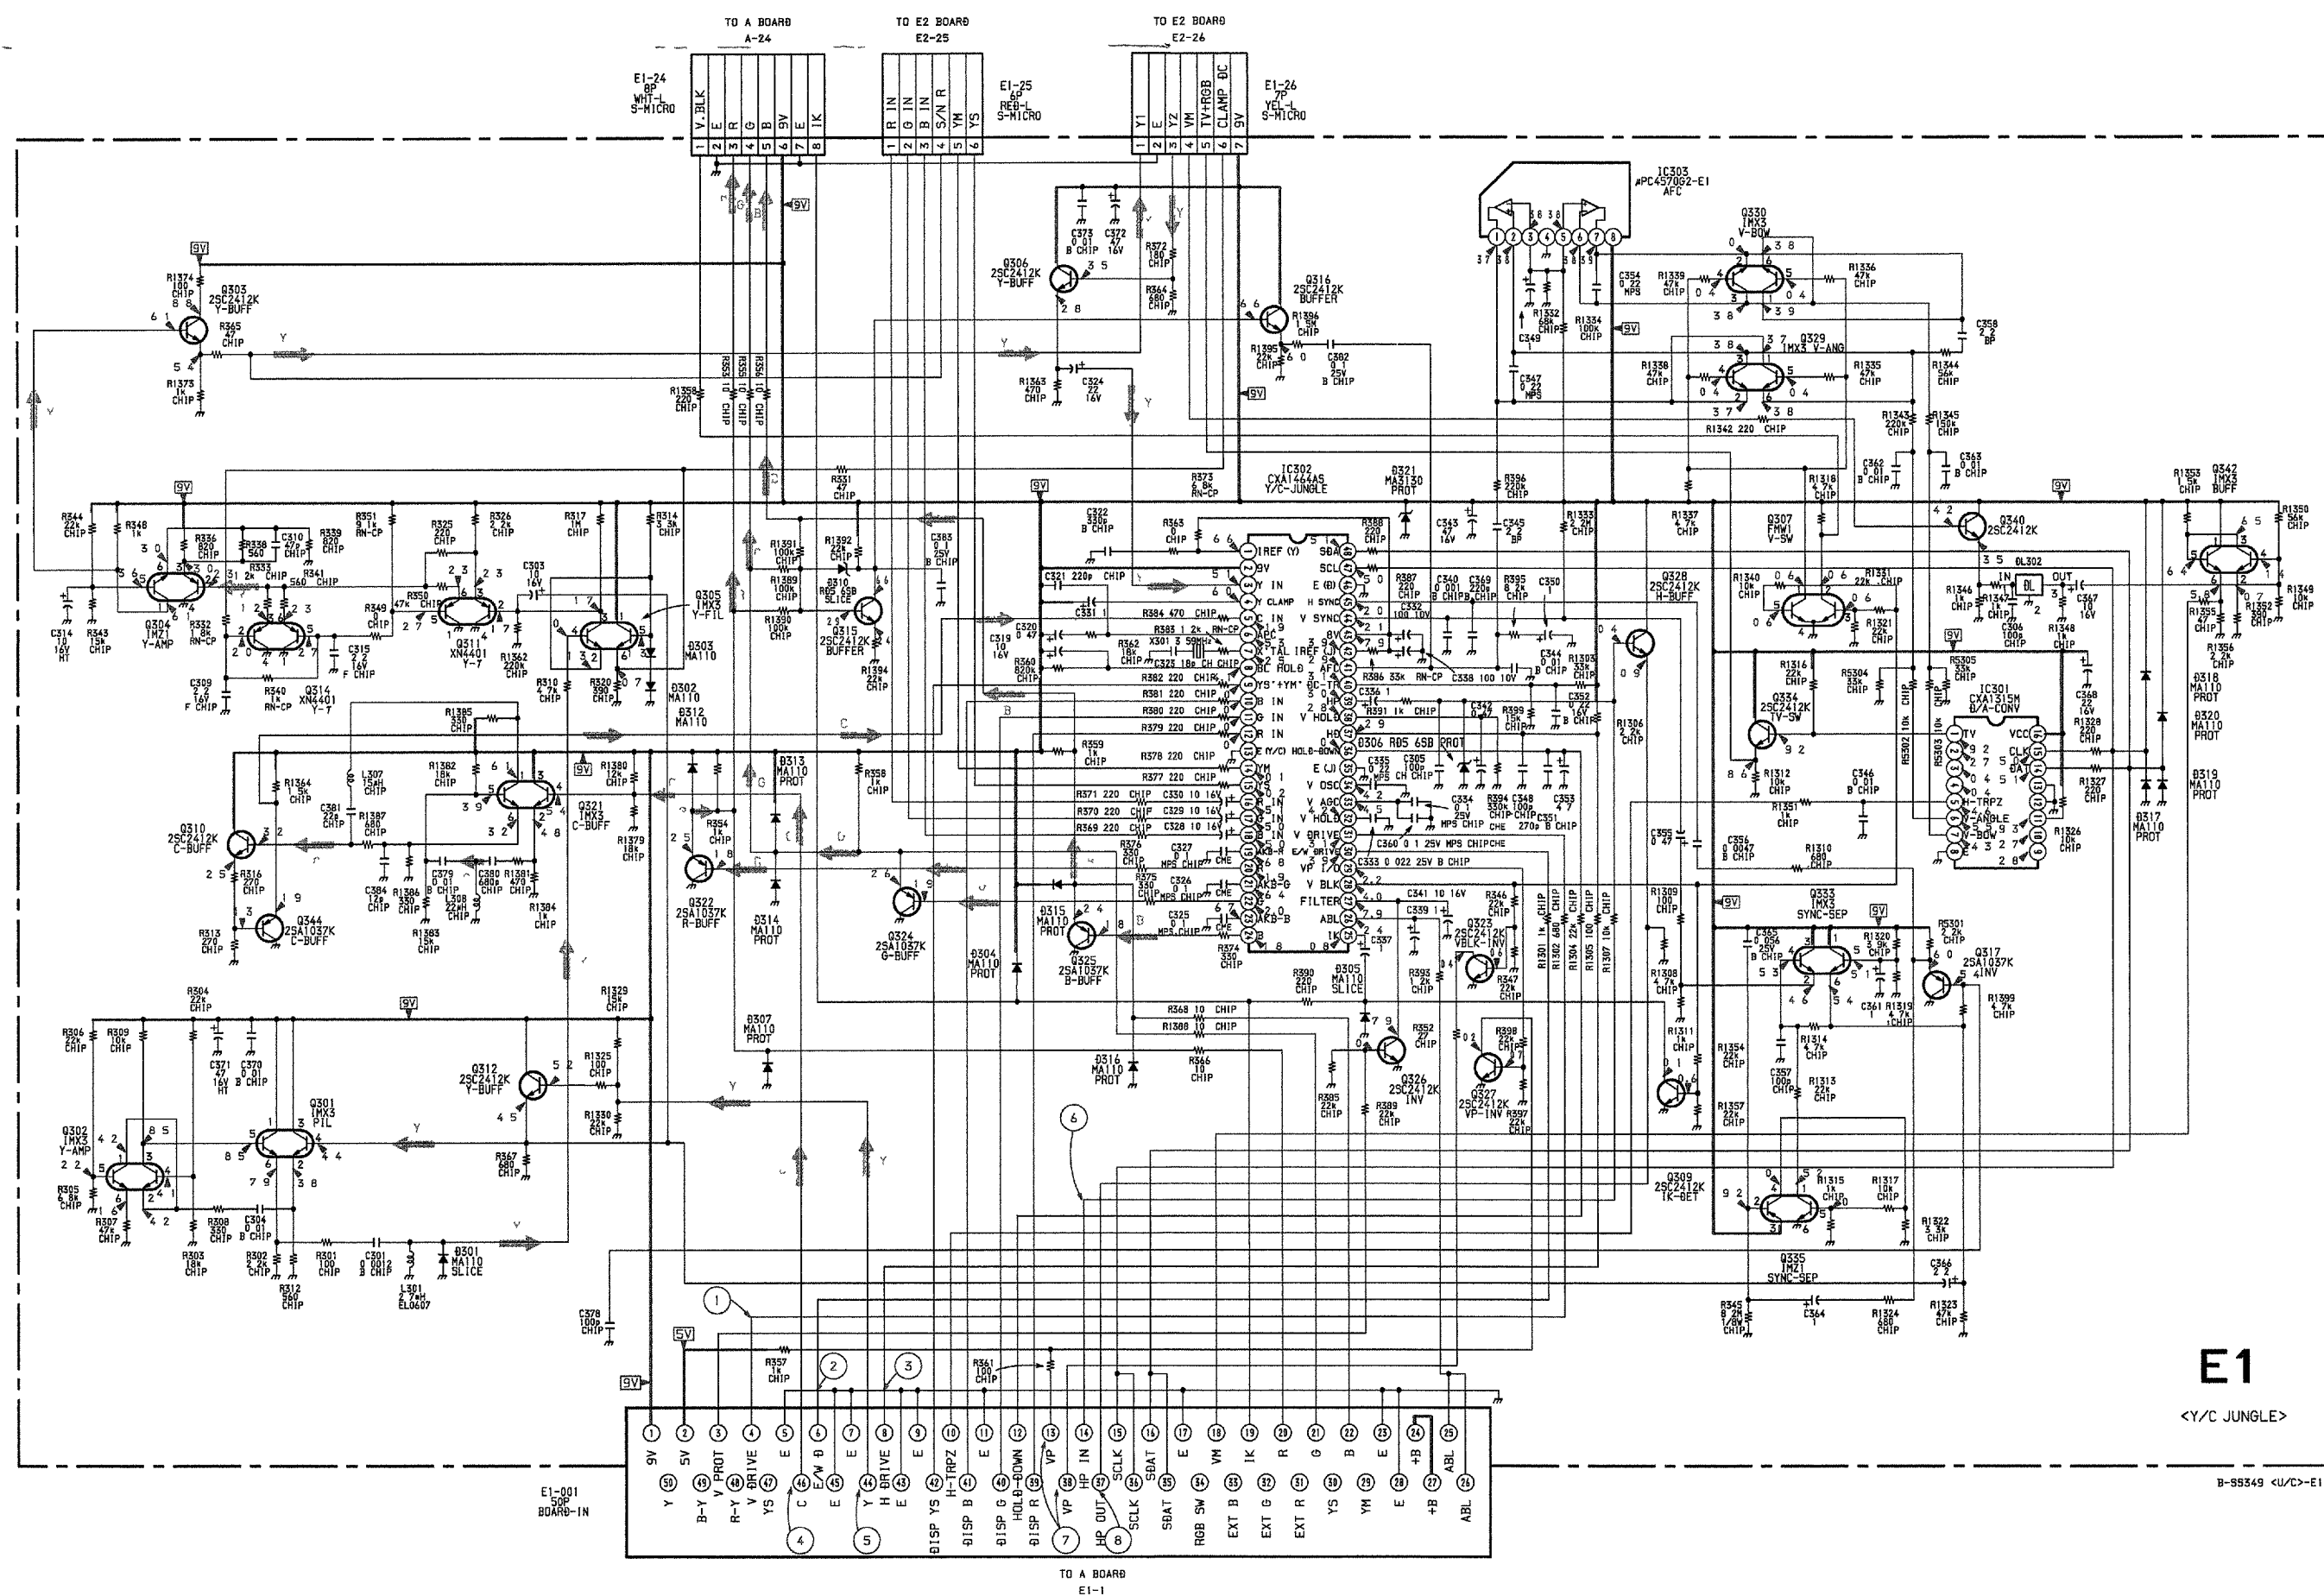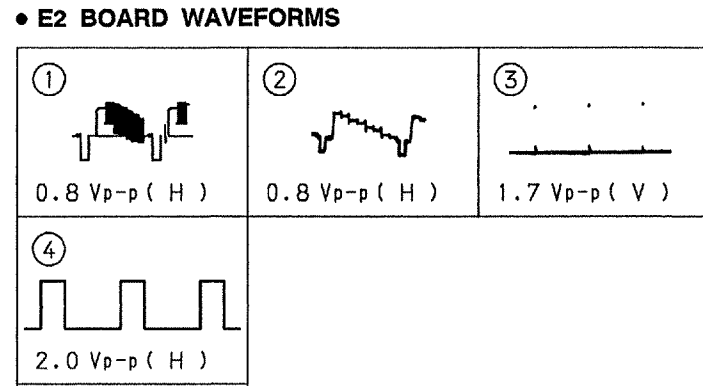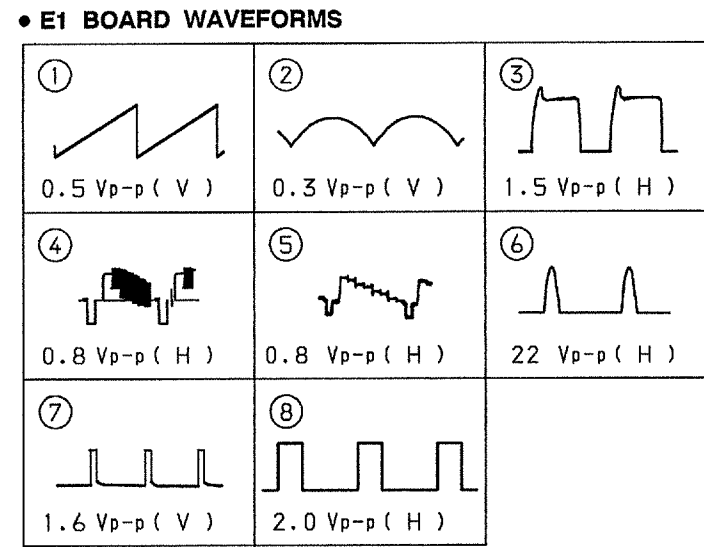

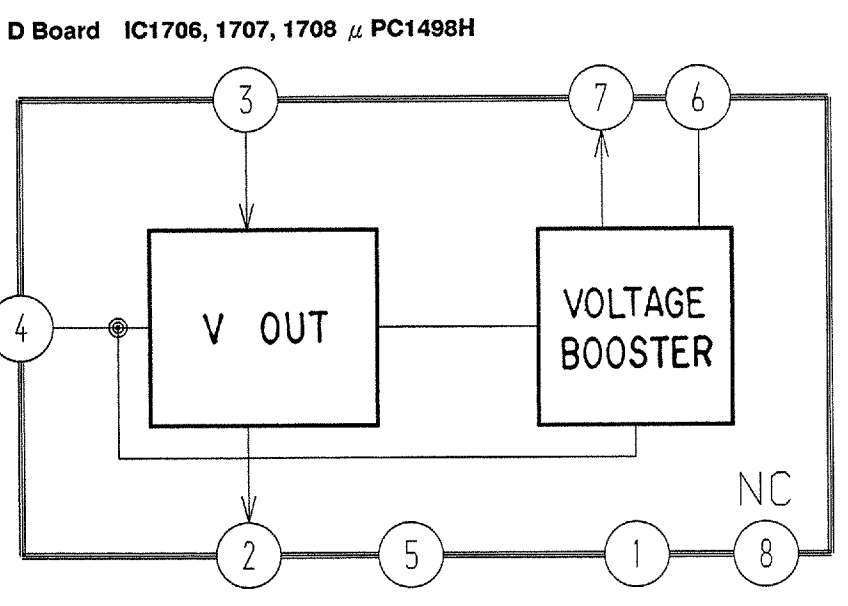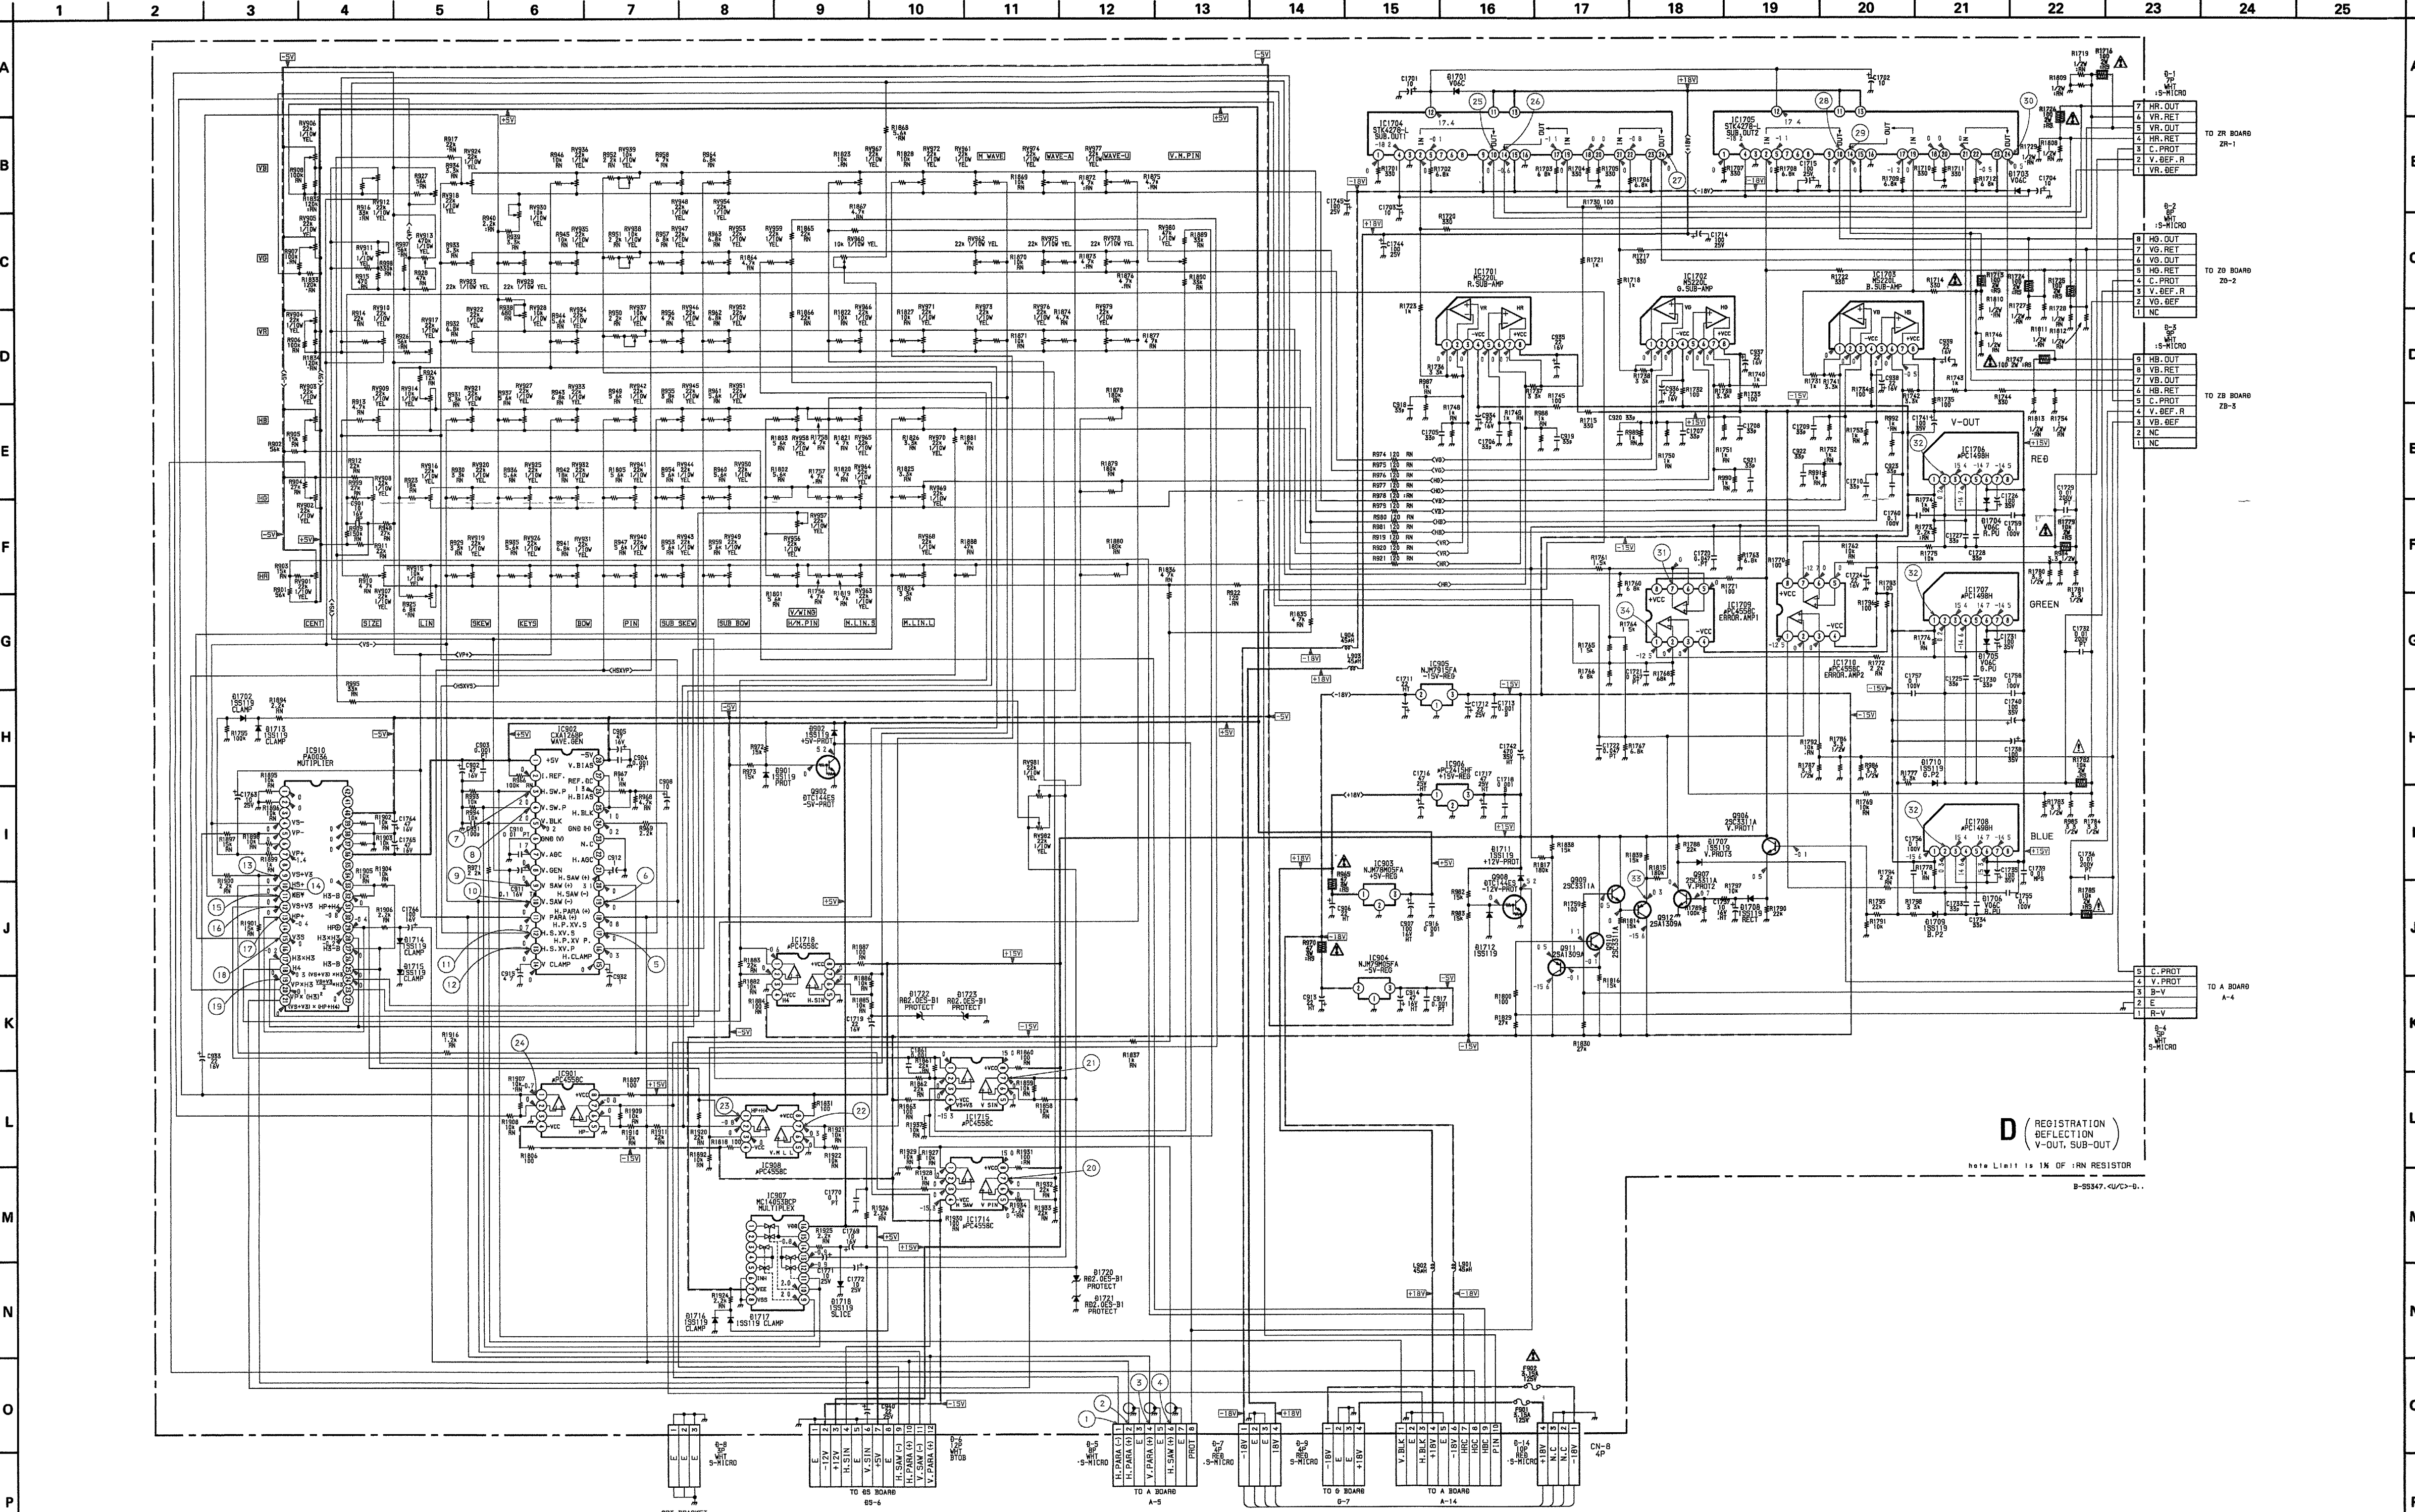

• D BOARD WAVEFORMS

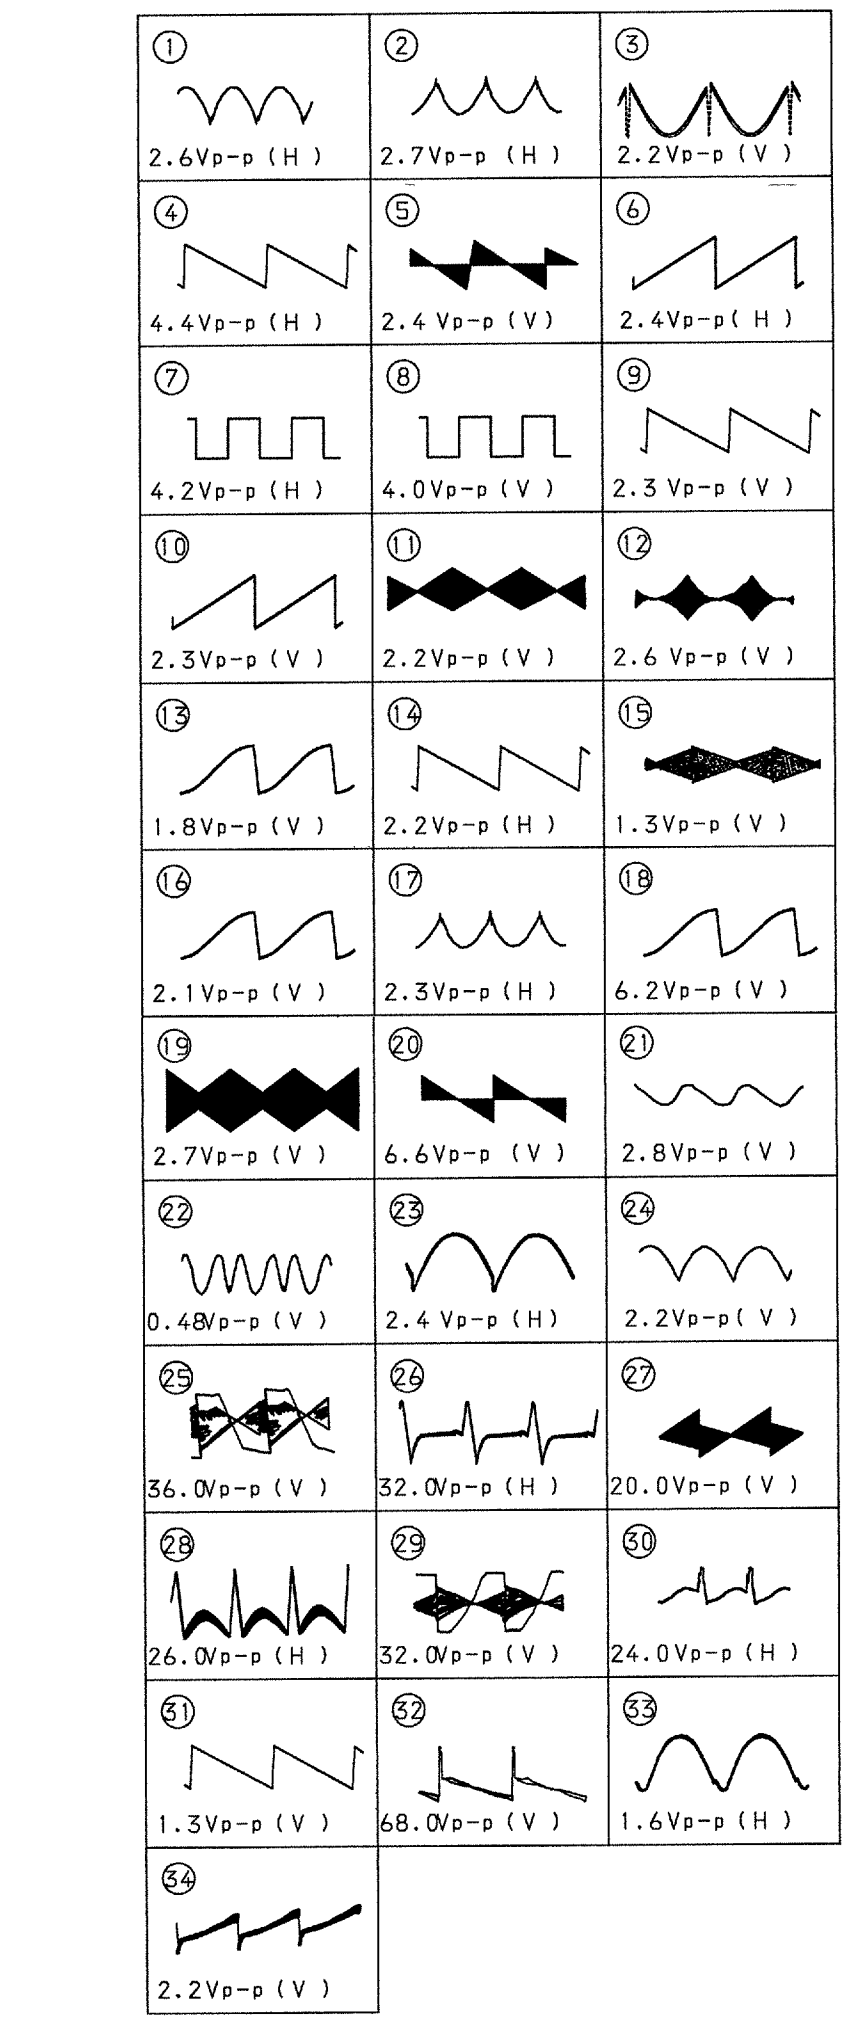

D (REGISTRATION REFLECTION V-OUT, SUB-OUT)


NOTE: L101 IS 1% OF 10M RESISTOR

B-55347-CU(2)-D.

D REGISTRATION,
DEFLECTION,
V-OUT, SUB-OUT

- D Board -

D Board

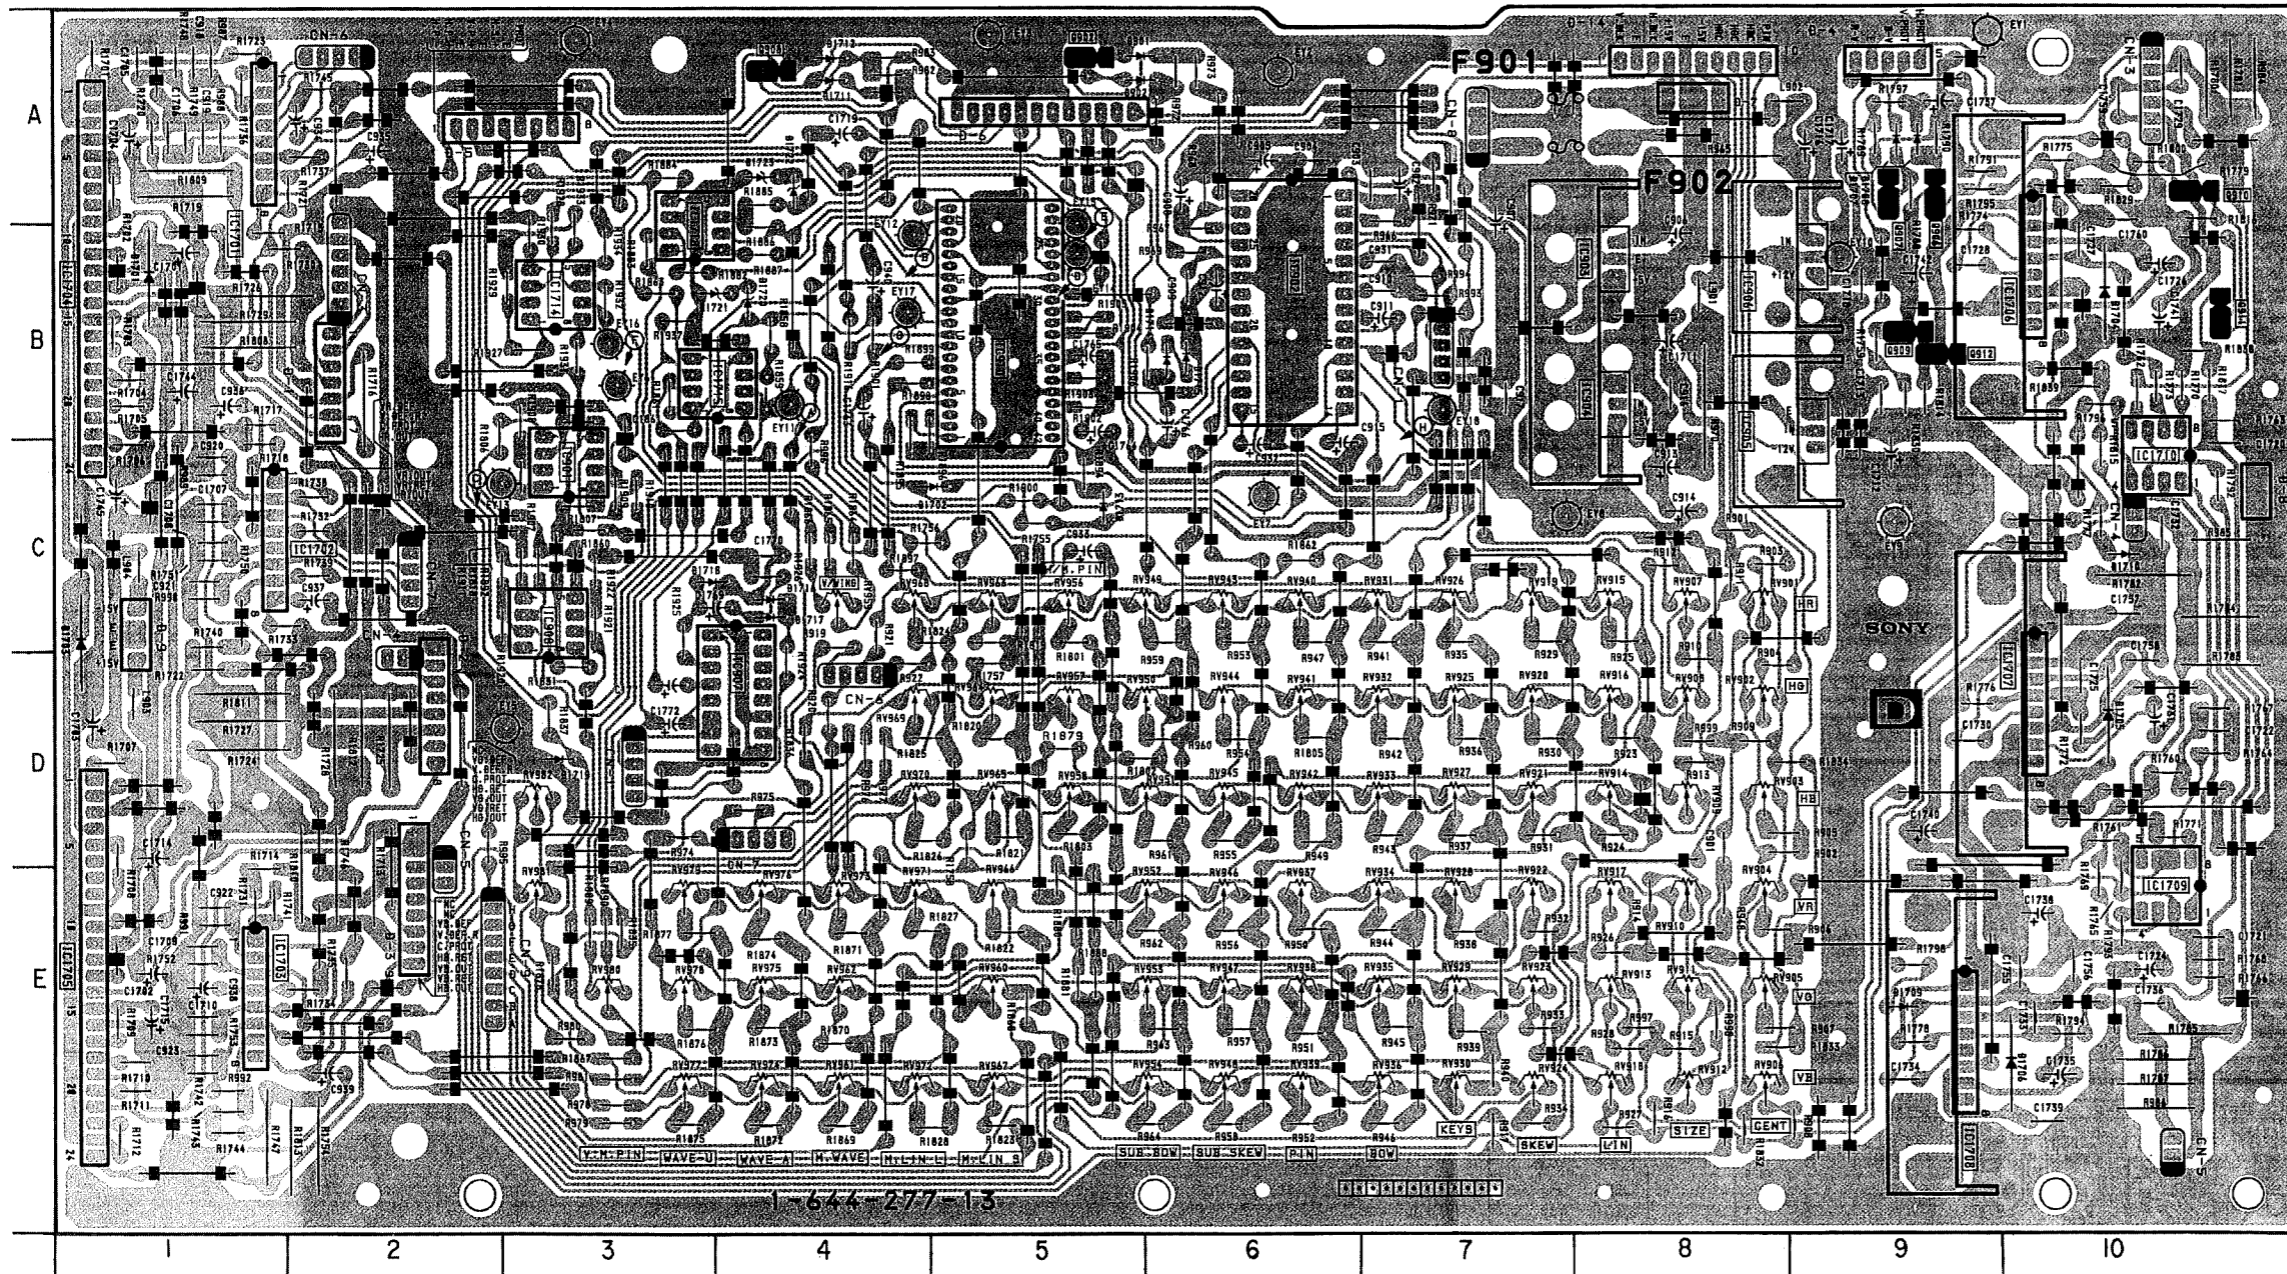


IC	VARIABLE RESISTOR	RV962	E-4
IC901	C-3	RV901	C-9
IC902	B-6	RV902	D-9
IC903	B-8	RV903	D-9
IC904	B-8	RV904	E-9
IC905	B-9	RV905	D-9
IC906	B-9	RV906	E-9
IC907	D-4	RV907	C-8
IC908	C-3	RV908	D-8
IC910	B-5	RV909	D-8
IC1701	A-1	RV910	E-8
IC1702	C-2	RV911	E-8
IC1703	E-1	RV912	E-8
IC1704	B-1	RV913	E-8
IC1705	E-1	RV914	D-8
IC1706	B-10	RV915	C-8
IC1707	D-10	RV916	D-8
IC1708	E-9	RV917	E-8
IC1709	E-10	RV918	E-8
IC1710	C-10	RV919	C-7
IC1714	B-3	RV920	D-7
IC1715	B-4	RV921	D-7
IC1718	B-4	RV922	E-7
		RV923	E-7
		RV924	E-7
		RV925	D-7
		RV926	C-7
		RV927	D-7
		RV928	E-7
		RV929	E-7
		RV930	E-7
		RV931	C-7
		RV932	D-7
		RV933	D-7
		RV934	E-7
		RV935	E-7
		RV936	E-7
		RV937	E-6
		RV938	E-6
		RV939	E-6
		RV940	C-6
		RV941	D-6
		RV942	D-6
		RV943	C-6
		RV944	D-6
		RV945	D-6
		RV946	E-6
		RV947	E-6
		RV948	E-6
		RV949	C-6
		RV950	D-6
		RV951	D-6
		RV952	E-6
		RV953	E-6
		RV954	E-6
		RV956	C-5
		RV957	D-5
		RV958	D-5
		RV959	C-4
		RV960	E-5
		RV961	E-4
		RV962	E-4
		RV963	C-5
		RV964	D-5
		RV965	D-5
		RV966	E-5
		RV967	E-5
		RV968	C-5
		RV969	D-5
		RV970	D-5
		RV971	E-5
		RV972	E-5
		RV973	E-4
		RV974	E-4
		RV975	E-4
		RV976	E-4
		RV977	E-3
		RV978	E-3
		RV979	E-3
		RV980	E-3
		RV981	E-3
		RV982	D-3

M [MAIN CONTROL, μ -CON]

N [H. V.]

— M Board —

— N Board —

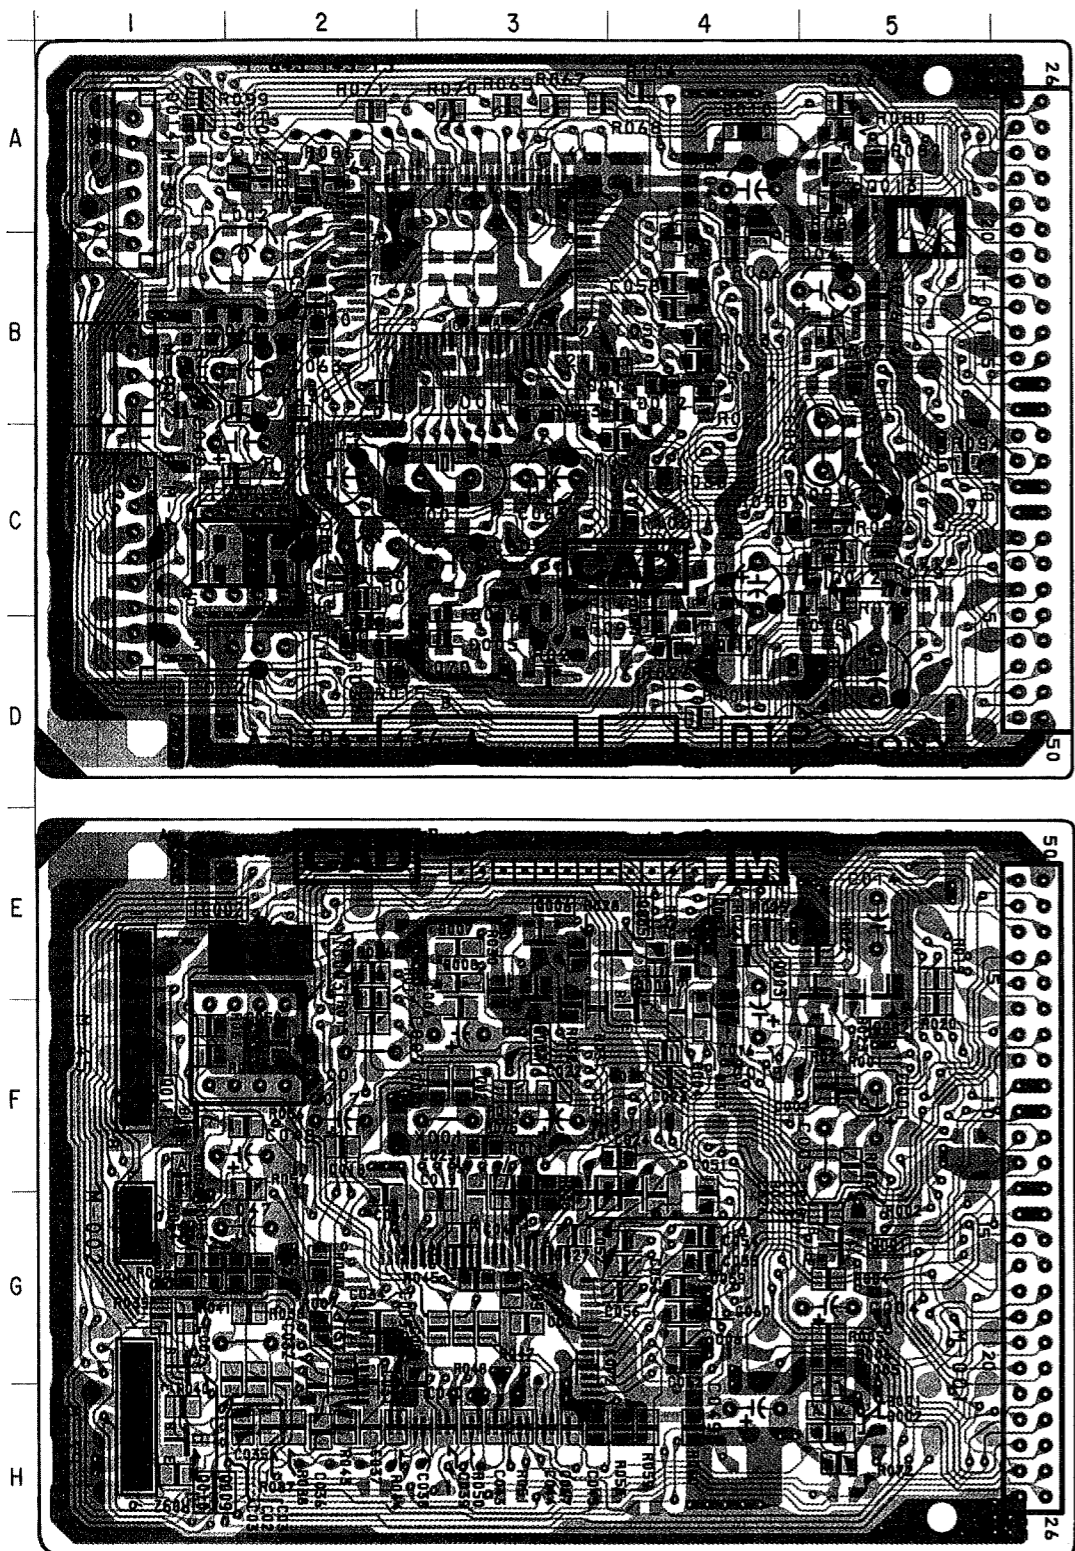


N Board


IC	
IC801	B-3
IC802	C-2
IC803	A-1
IC804	D-2
IC805	D-4
TRANSISTOR	
Q801	B-5
Q802	B-3
Q803	D-6
Q804	D-5
Q805	D-5
Q806	D-5
Q807	C-1
Q808	C-1
Q809	D-4
Q811	C-7
Q812	B-2
Q820	B-3
Q851	C-5
Q852	C-4
Q853	C-4
DIODE	
D801	A-6
D802	B-5
D803	B-2
D804	C-2
D805	B-2
D806	C-2
D807	D-4
D808	D-2
D809	D-1
D810	D-3
D811	B-1
D812	C-2
D813	C-2
D814	A-3
D815	D-3
D817	D-7
D818	B-3
D820	A-3
D850	C-4
D851	E-5
D852	C-4
D853	E-5
D891	B-2
D892	C-2

M Board

IC		DIODE	
IC001	C-1	D001	H-5
IC002	D-2, E-2	D002	H-5
		D009	F-1
		D010	A-4
		D011	D-2
		D012	B-4
		D014	A-1
		D015	B-4
TRANSISTOR			
Q001	G-5		
Q009	G-1		
Q010	H-1		
Q011	F-1		
Q012	C-5		
Q013	A-5		
Q014	C-4		

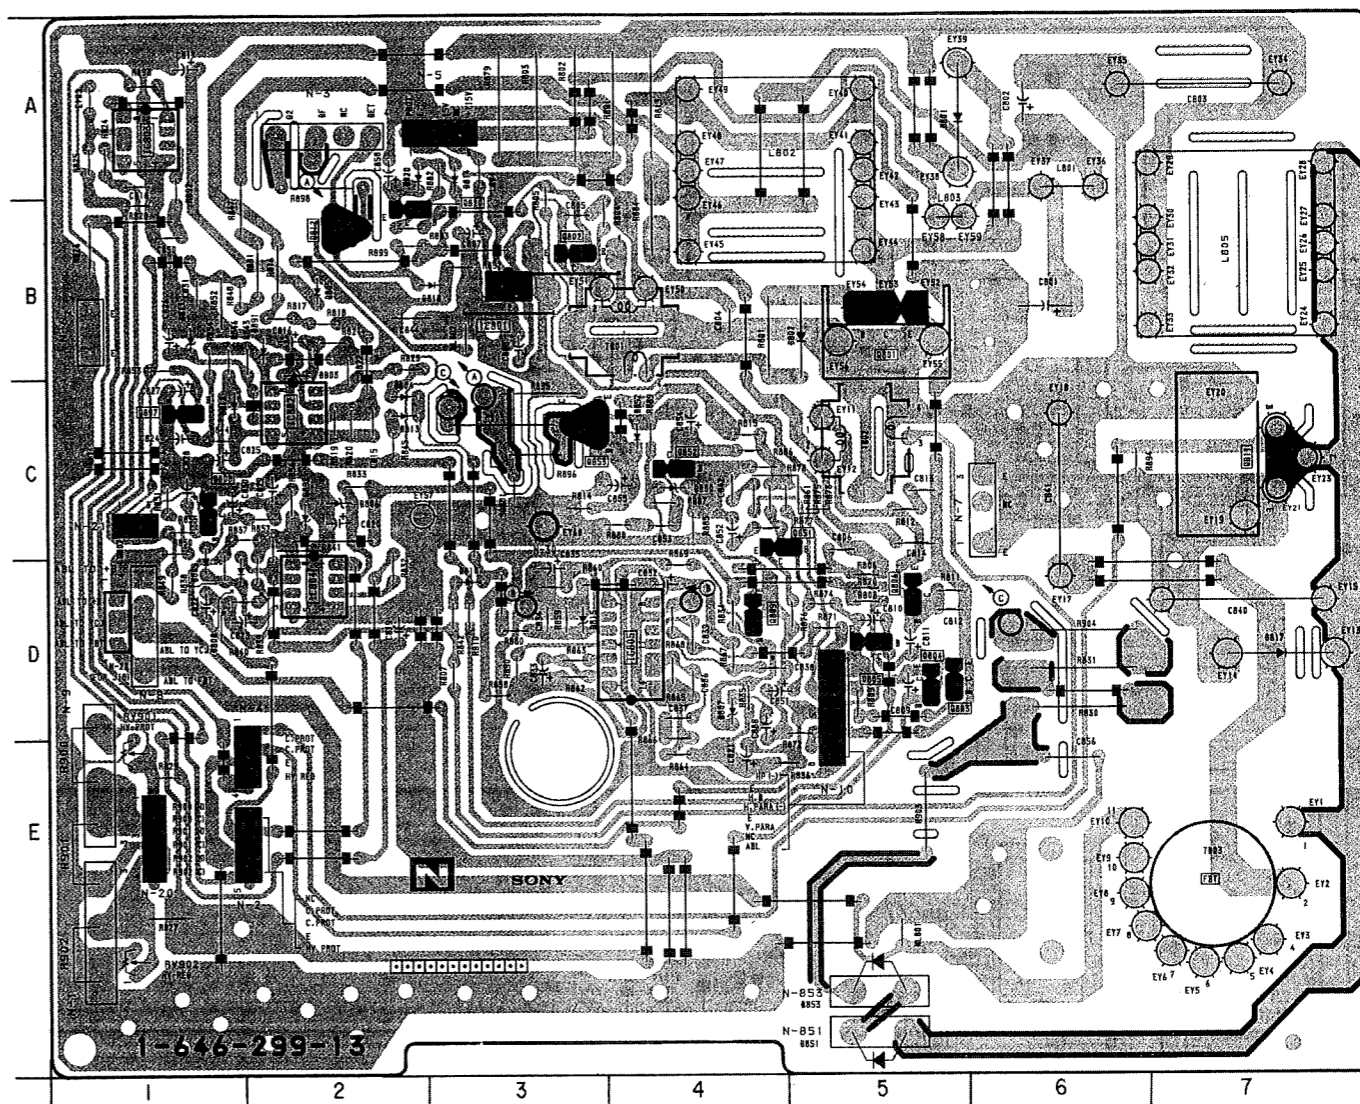


- [Pattern from the side which enables seeing.]
- [Pattern of the rear side.]

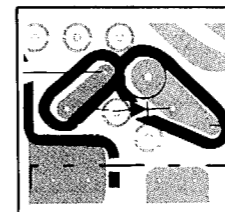




NOTE:






The circuit indicated as left contains high voltage of over 600 Vp-p. Care must be paid to prevent an electric shock in inspection or repairing.

• M BOARD WAVEFORMS

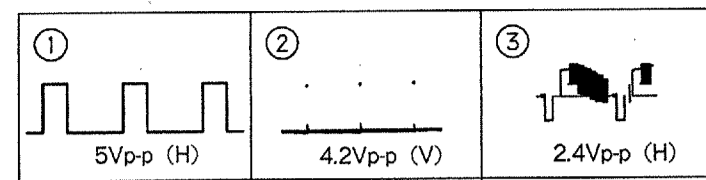


• N BOARD WAVEFORMS

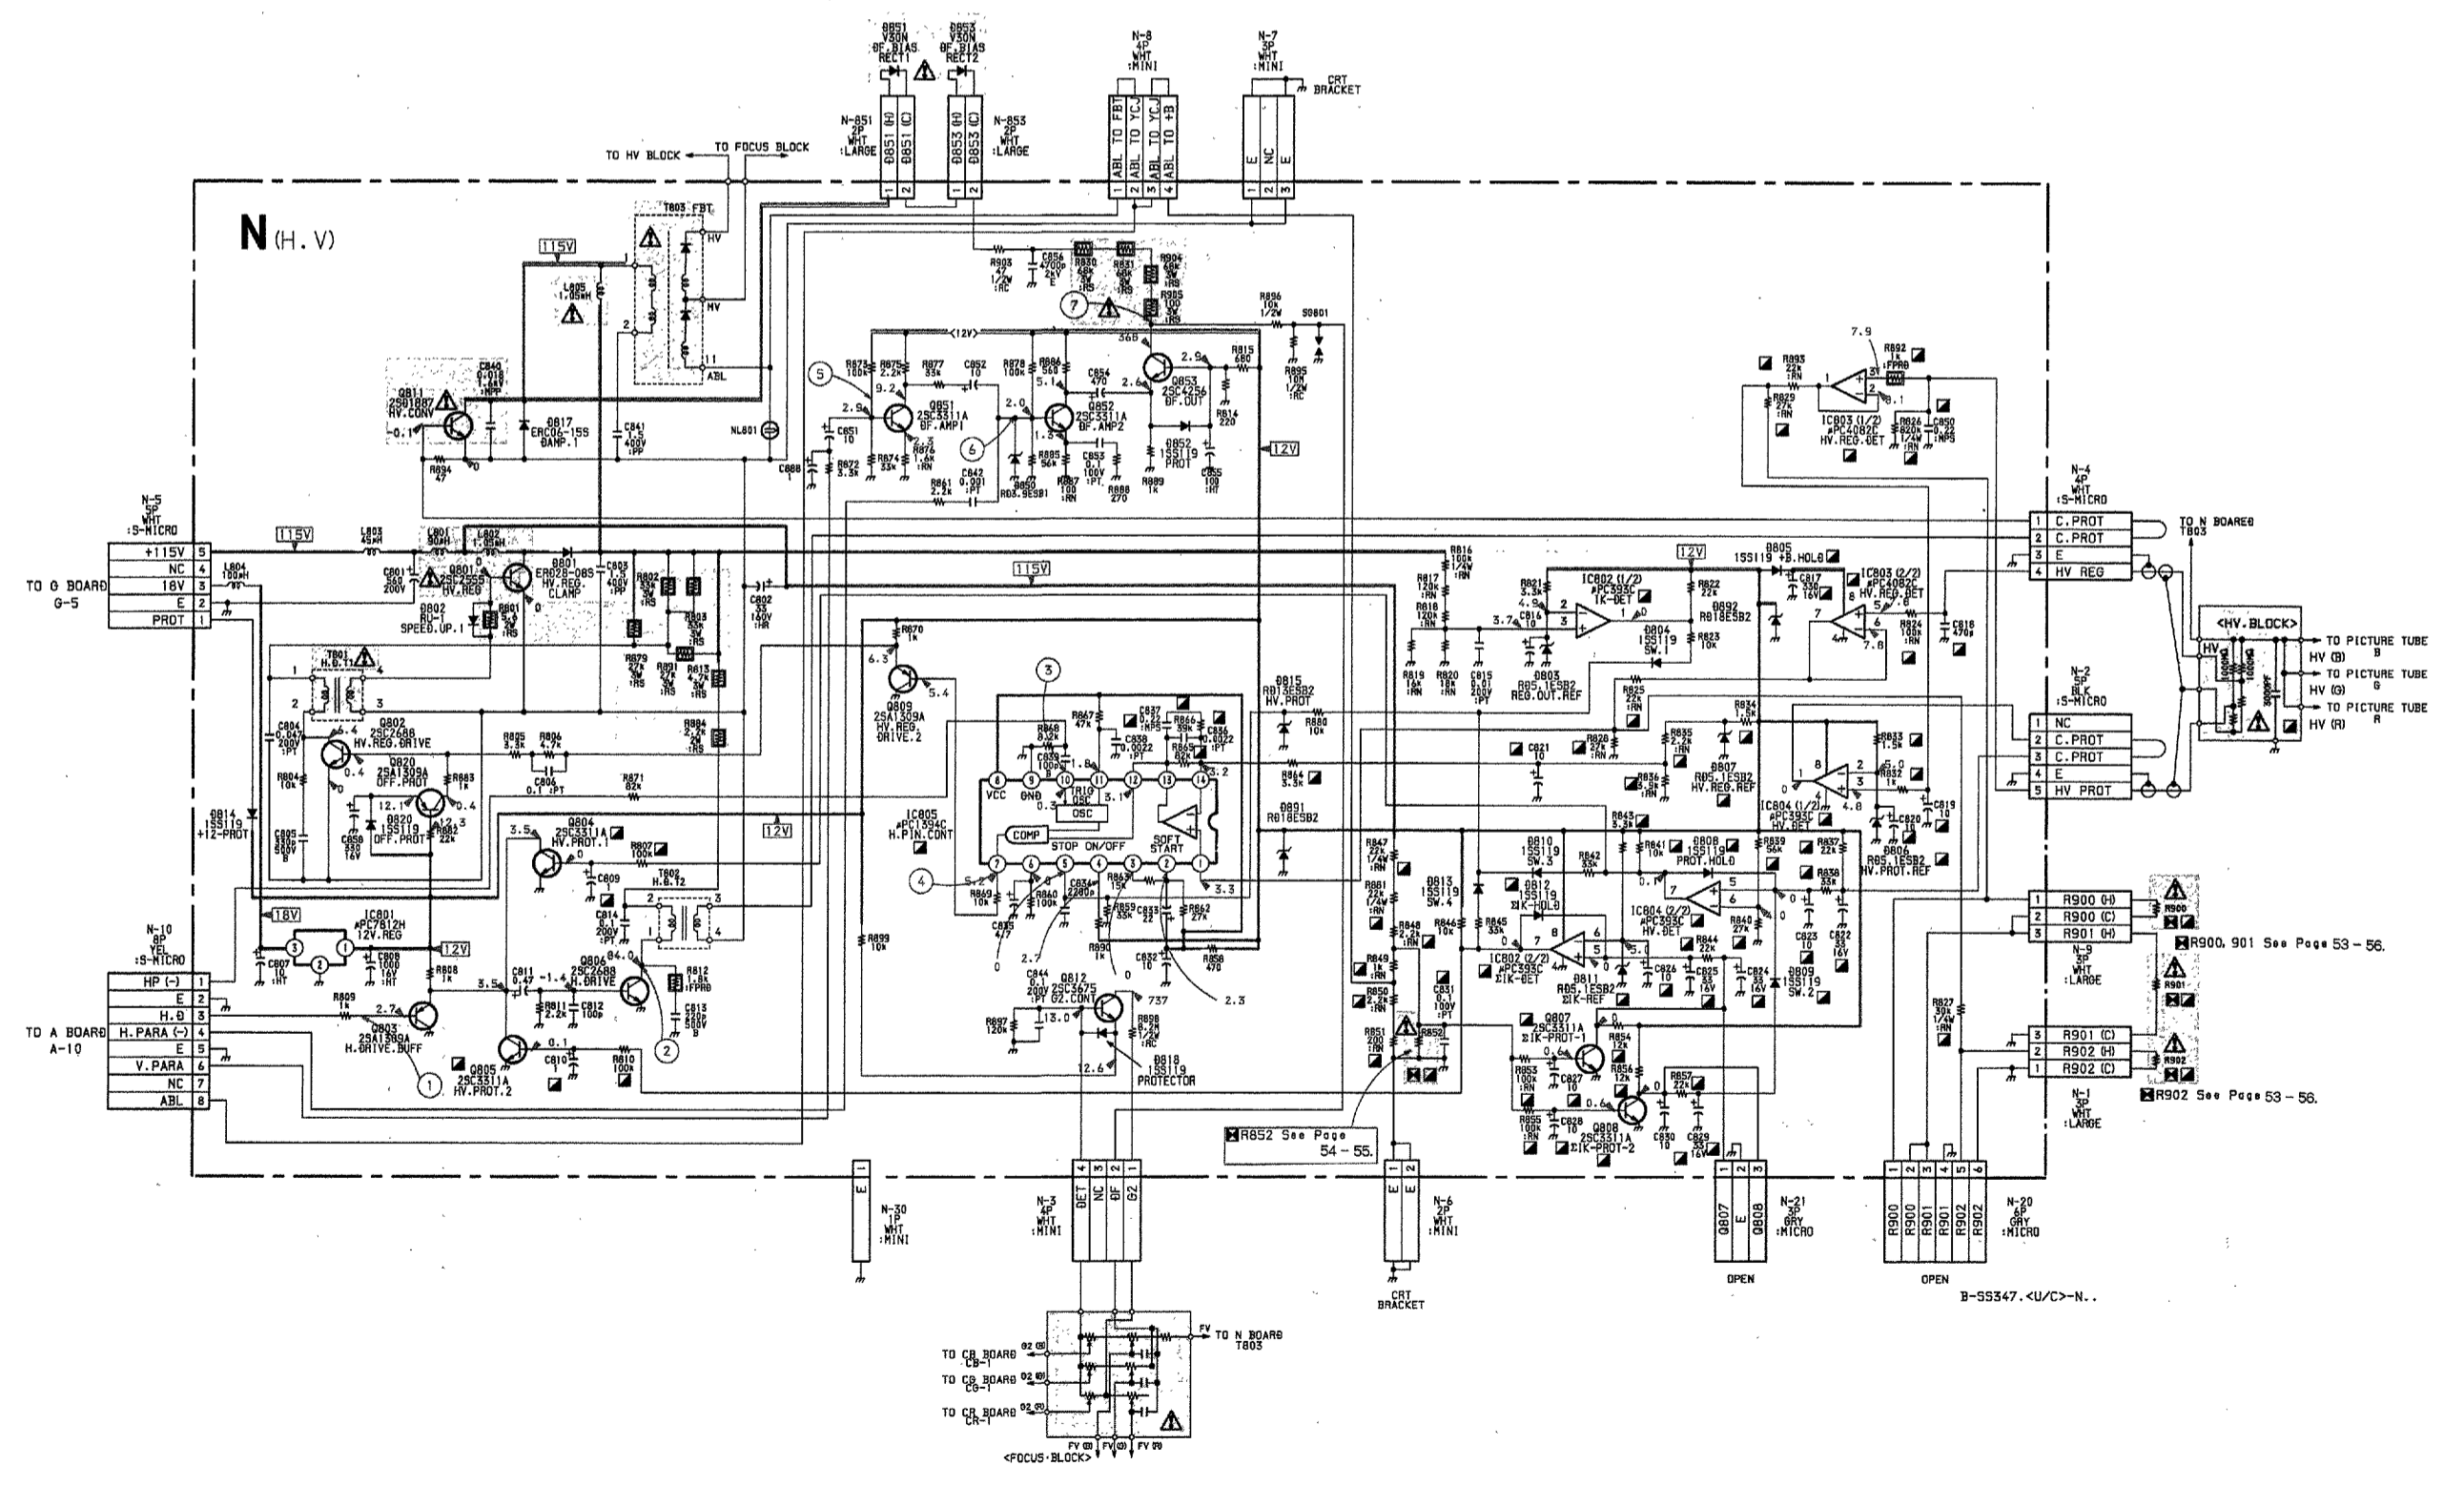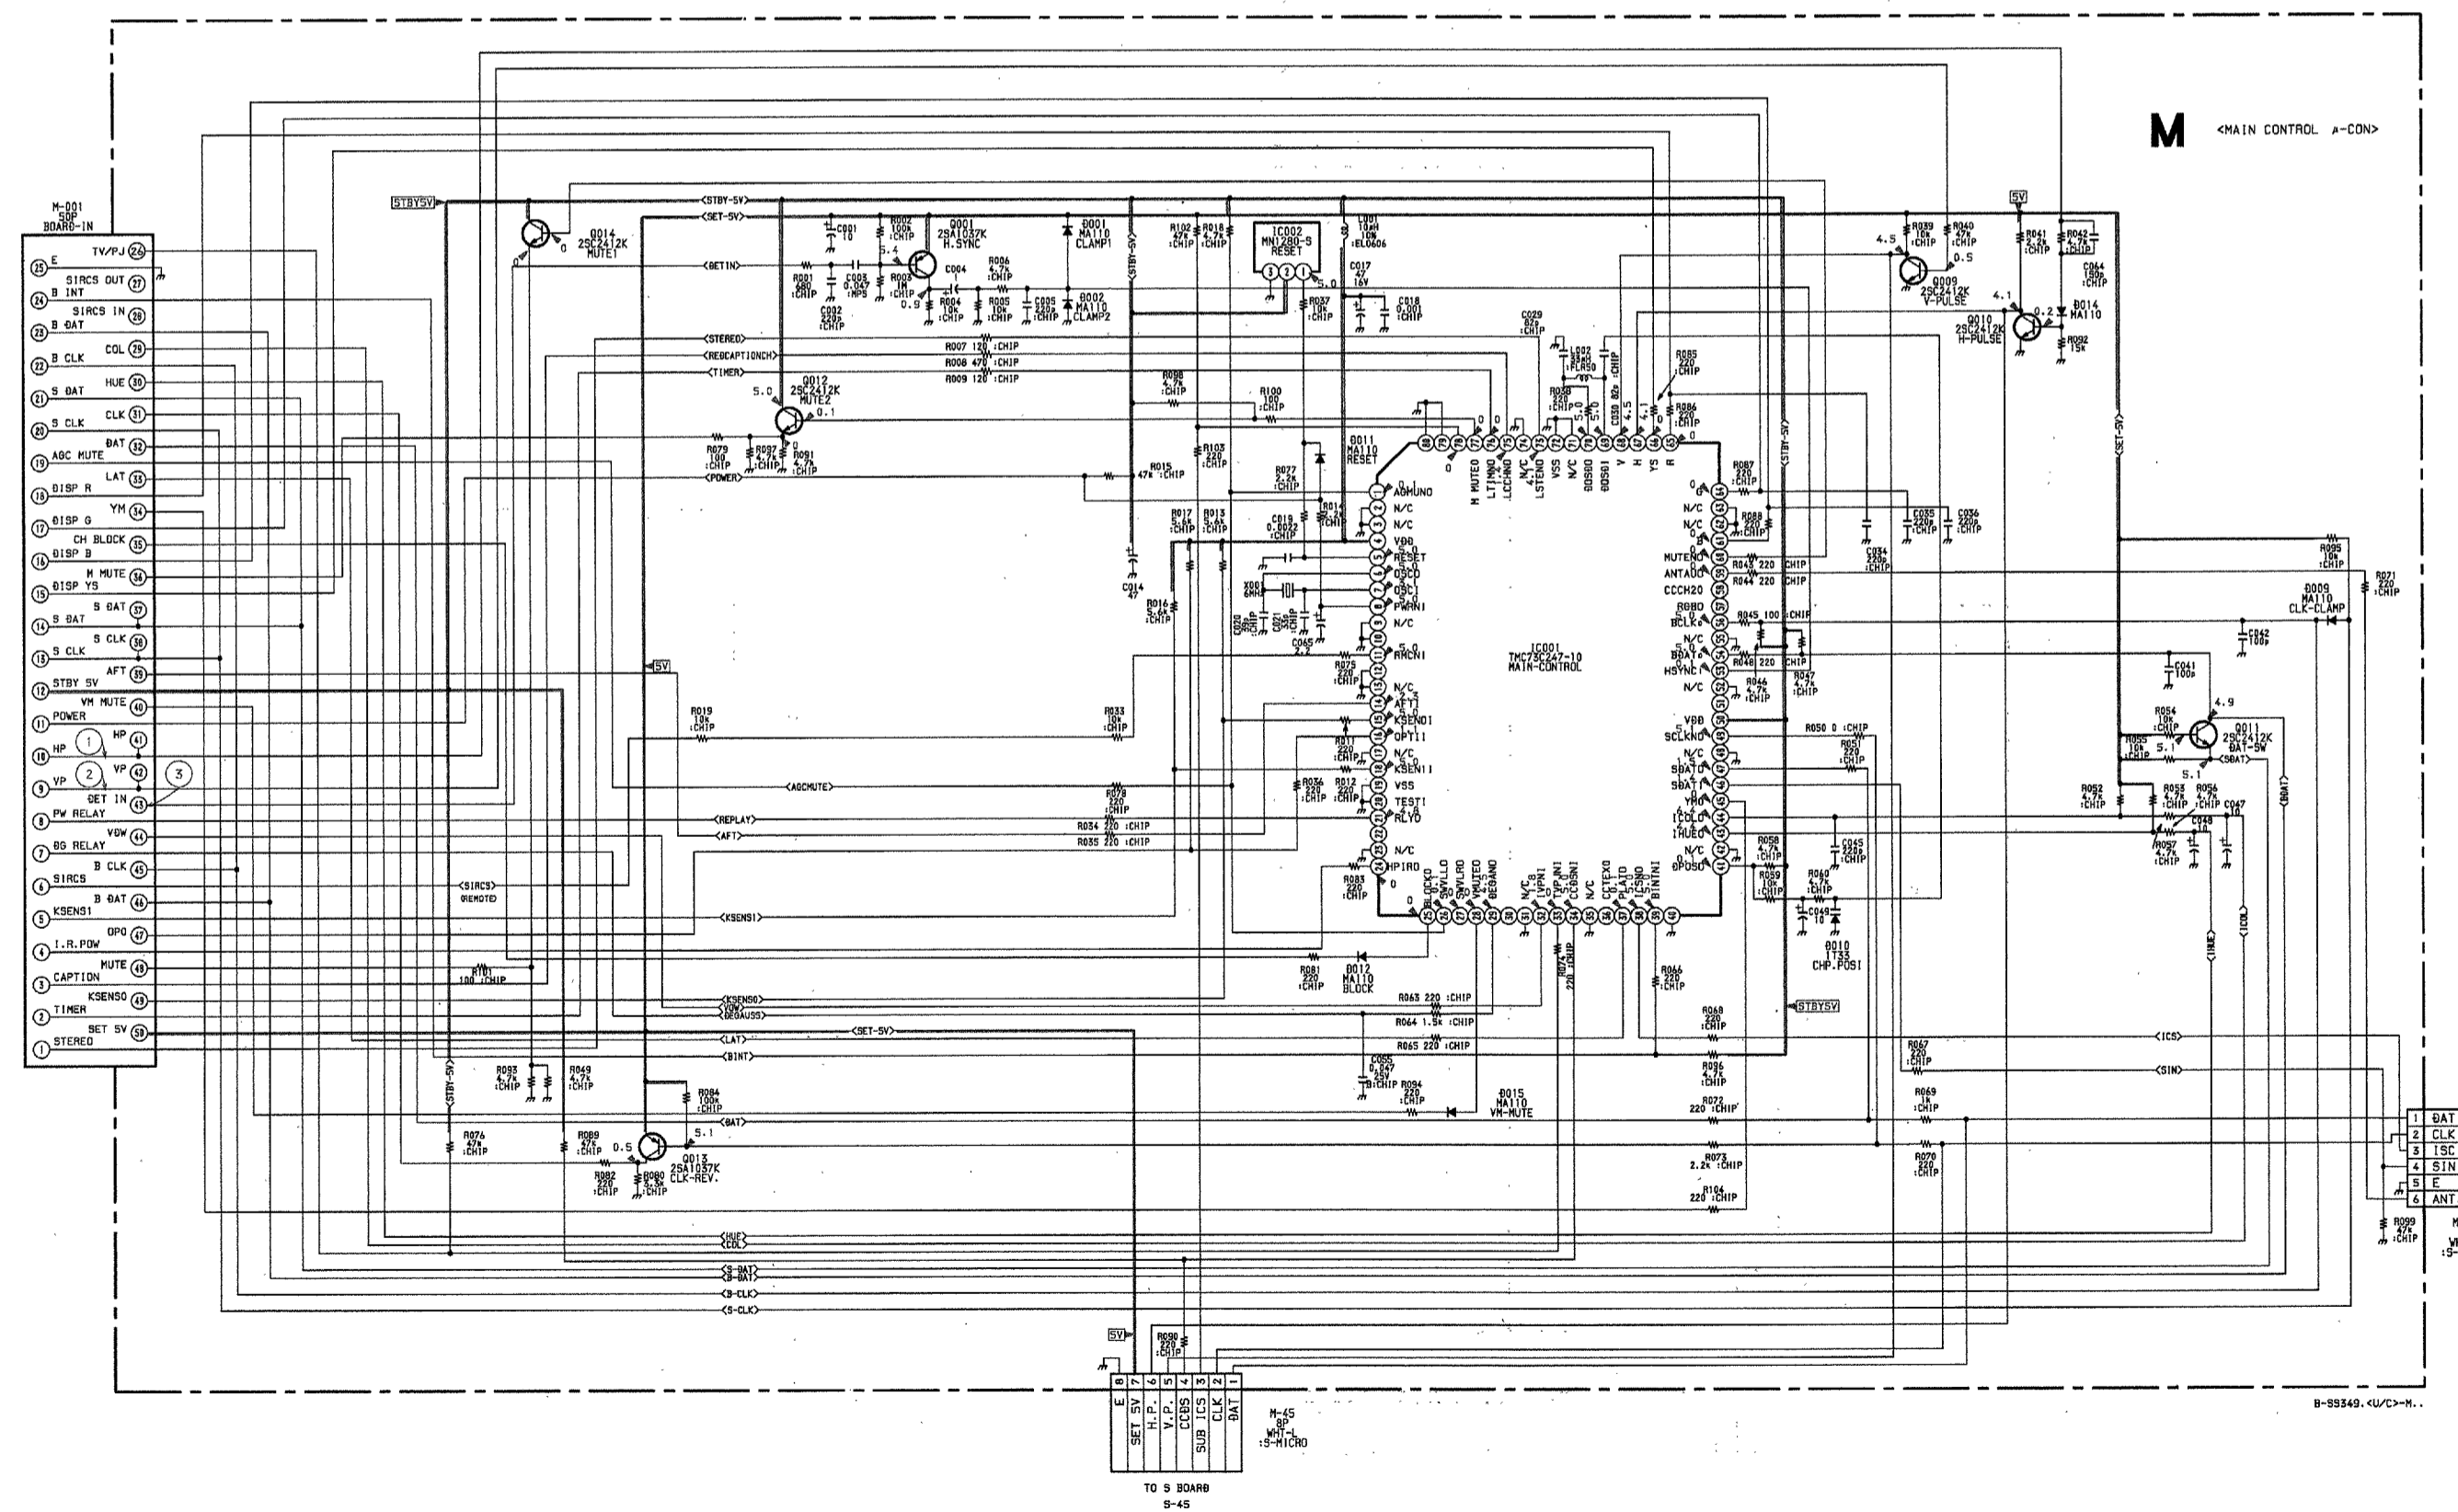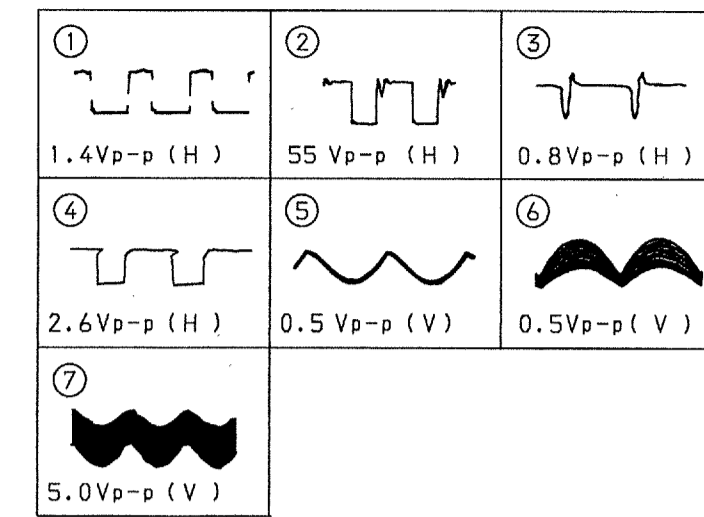

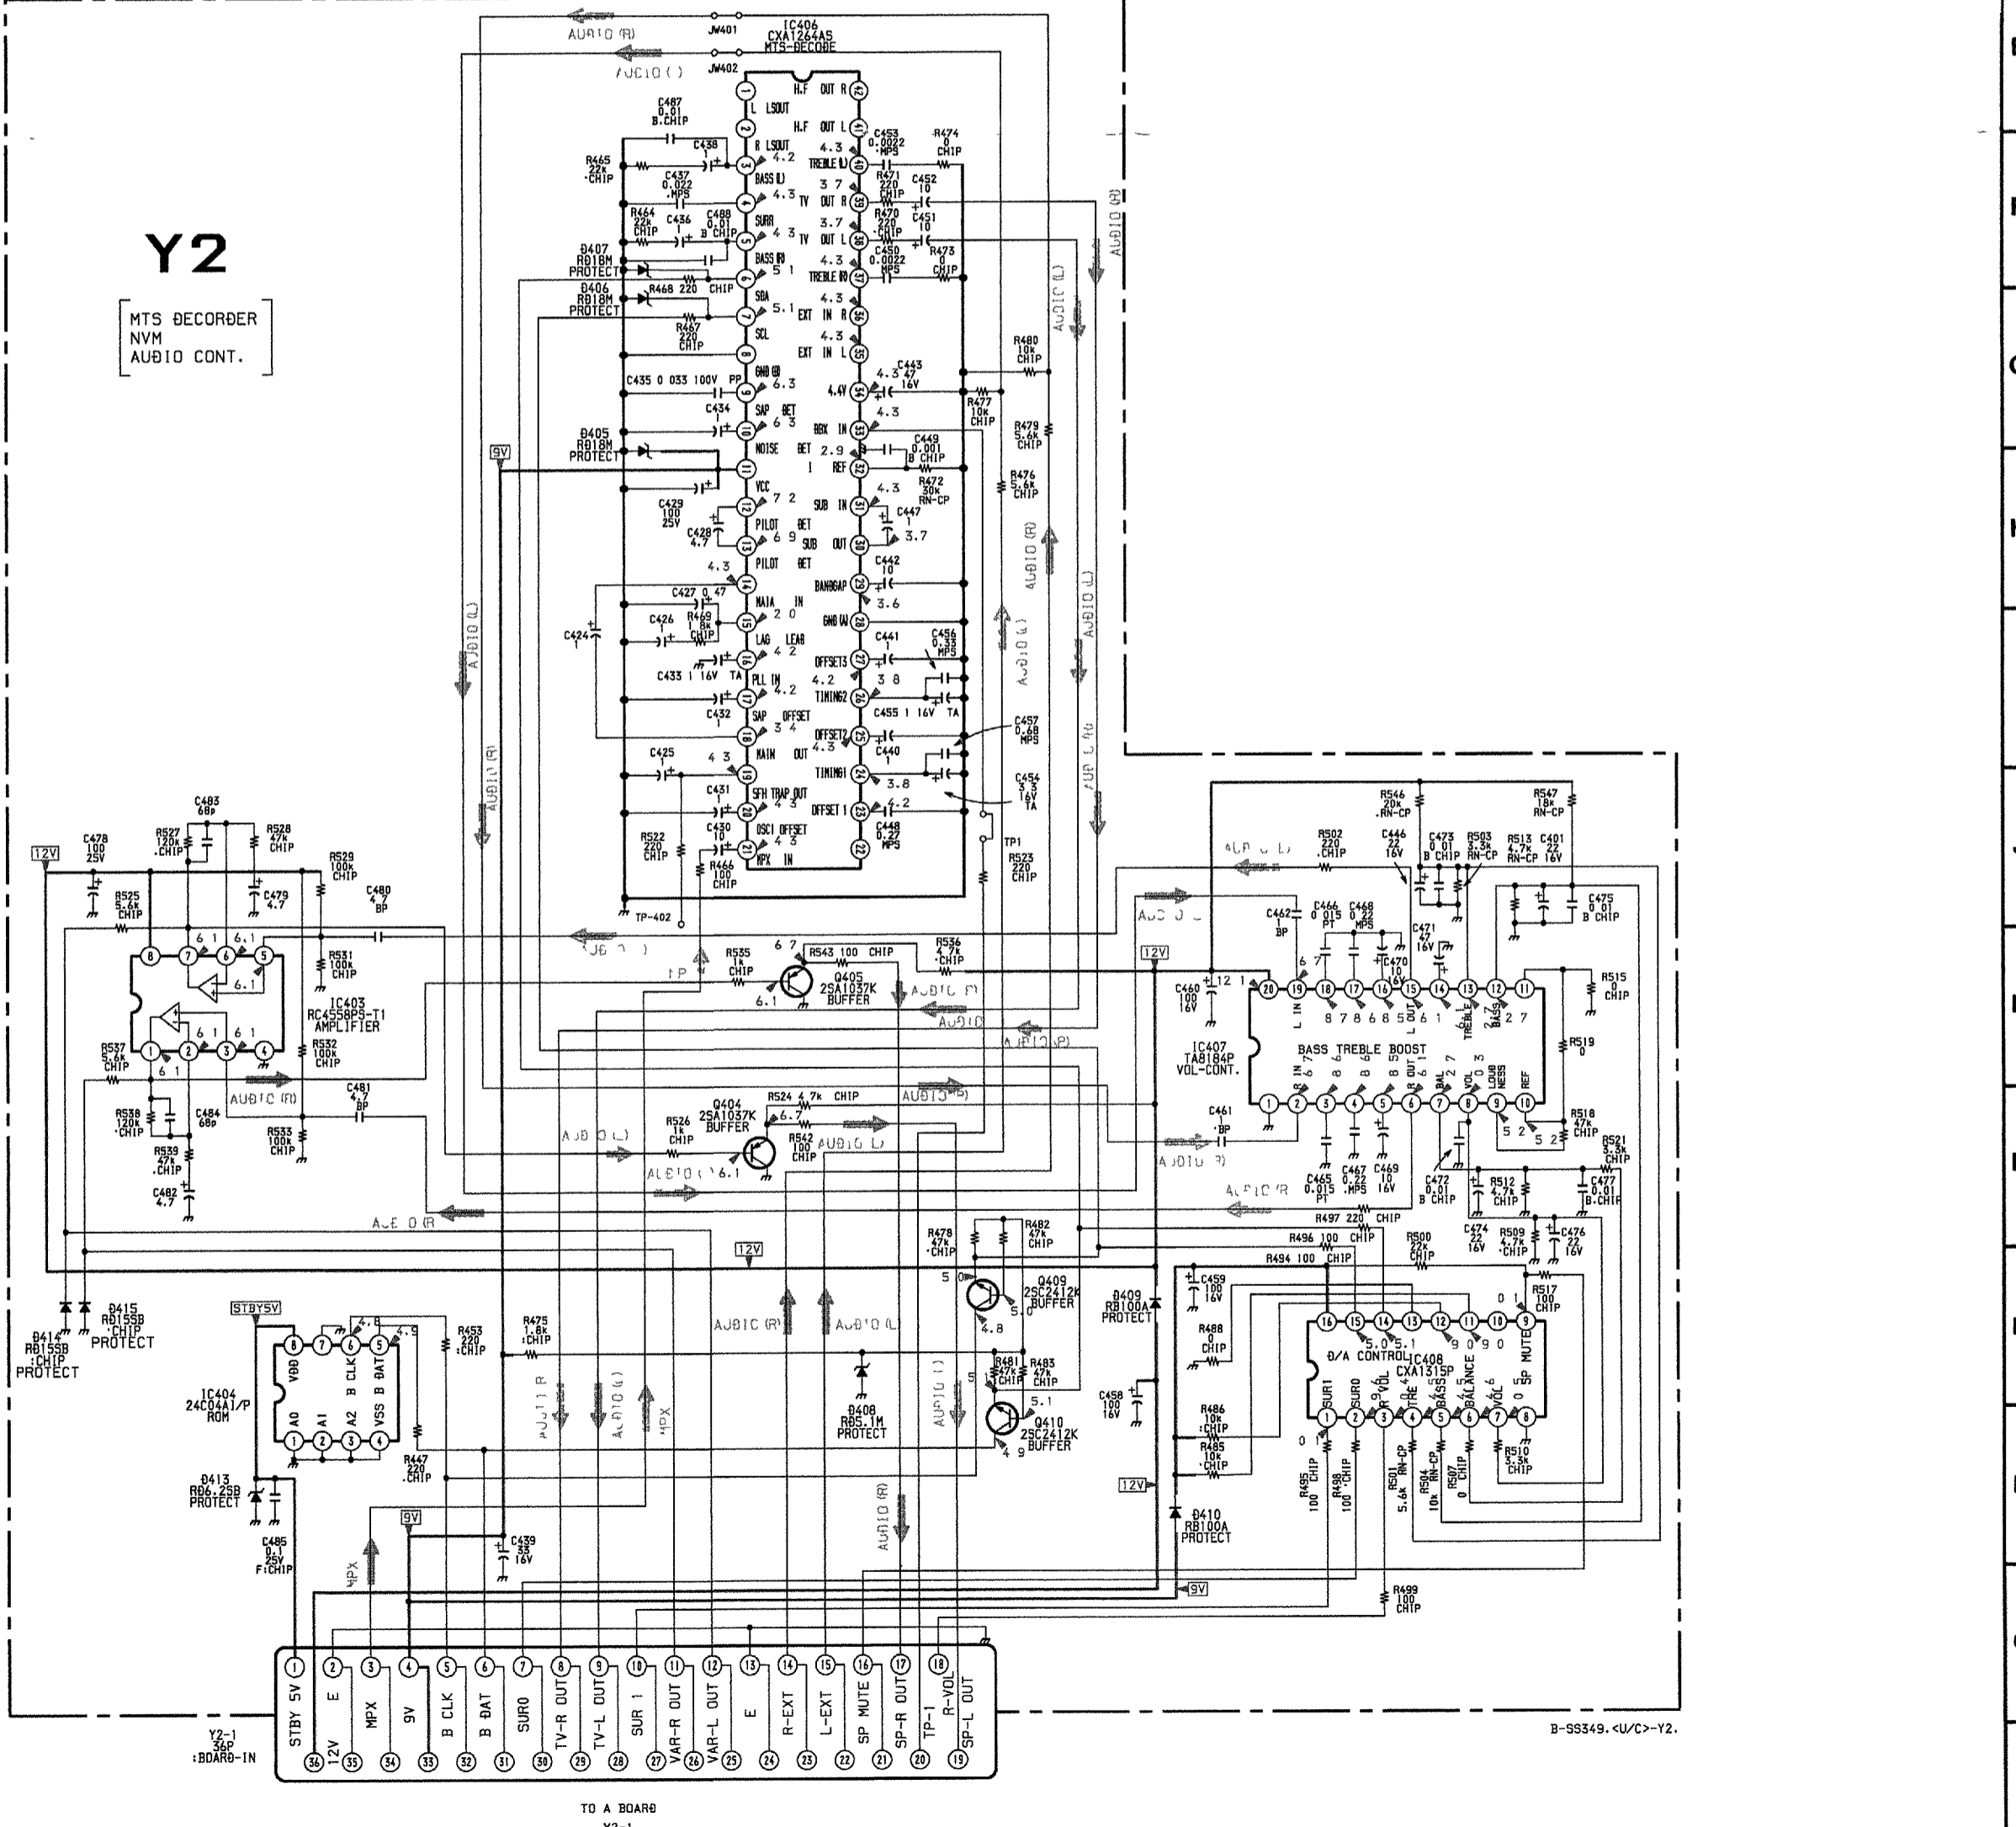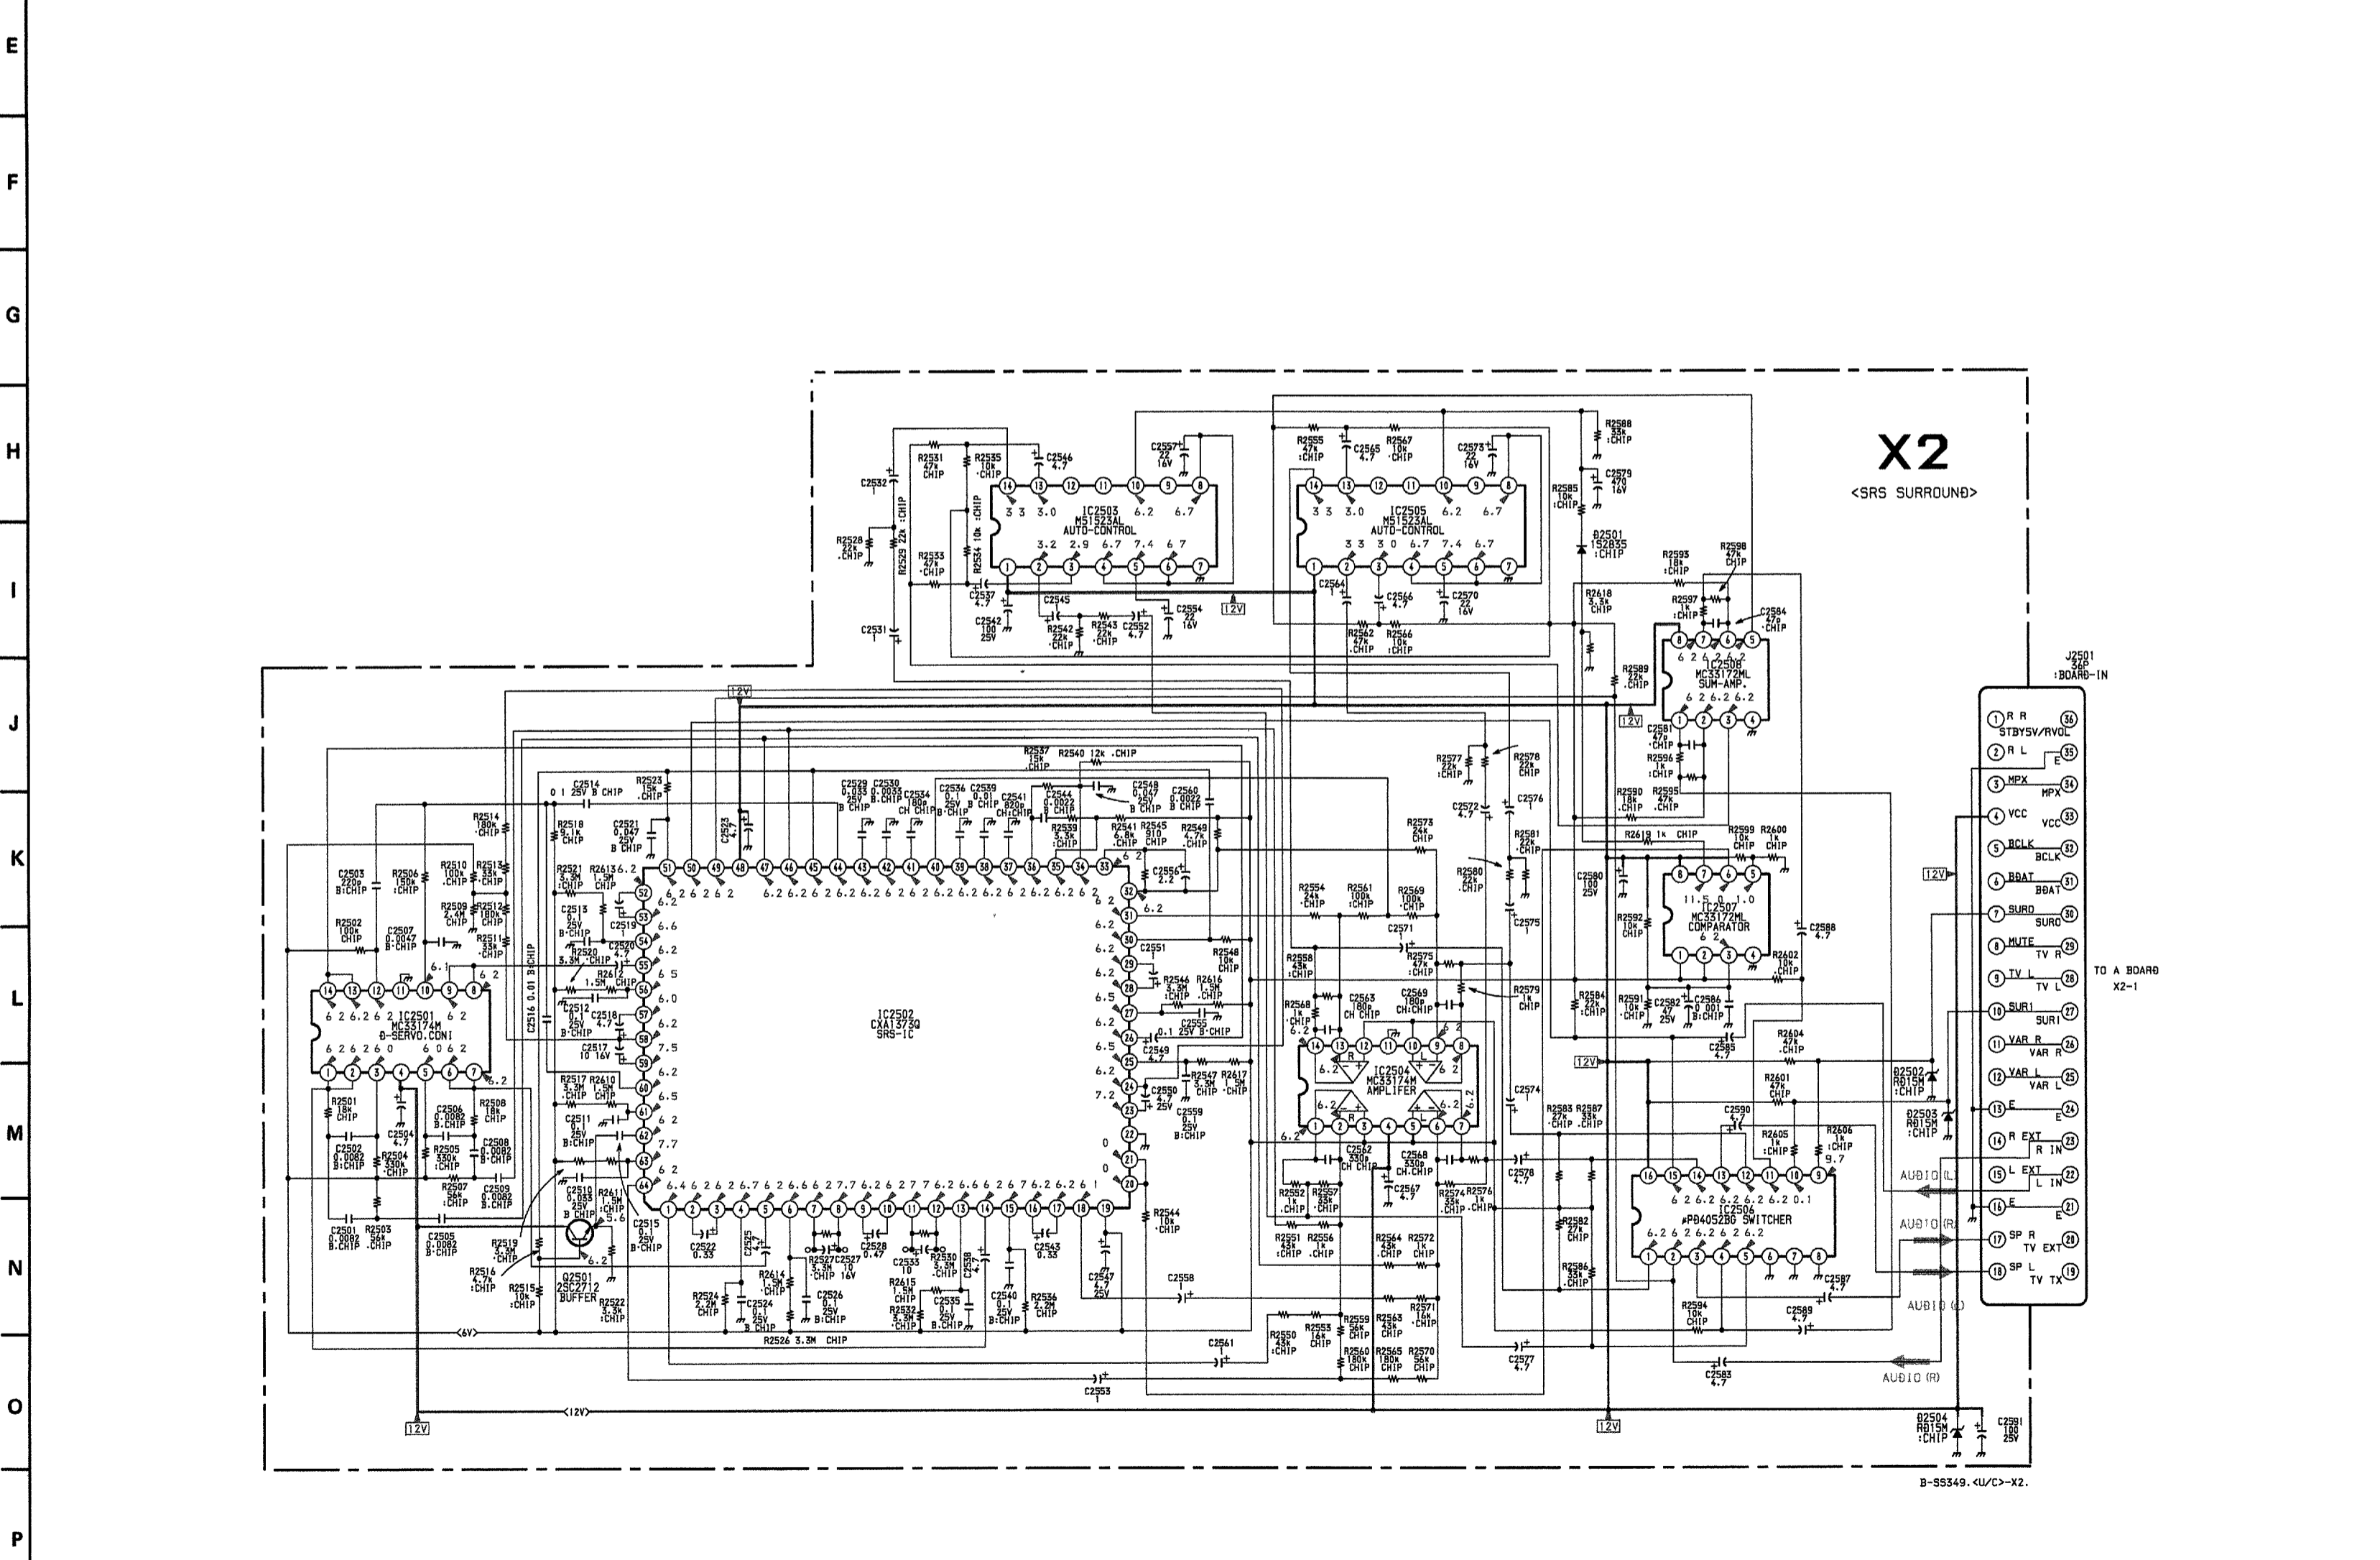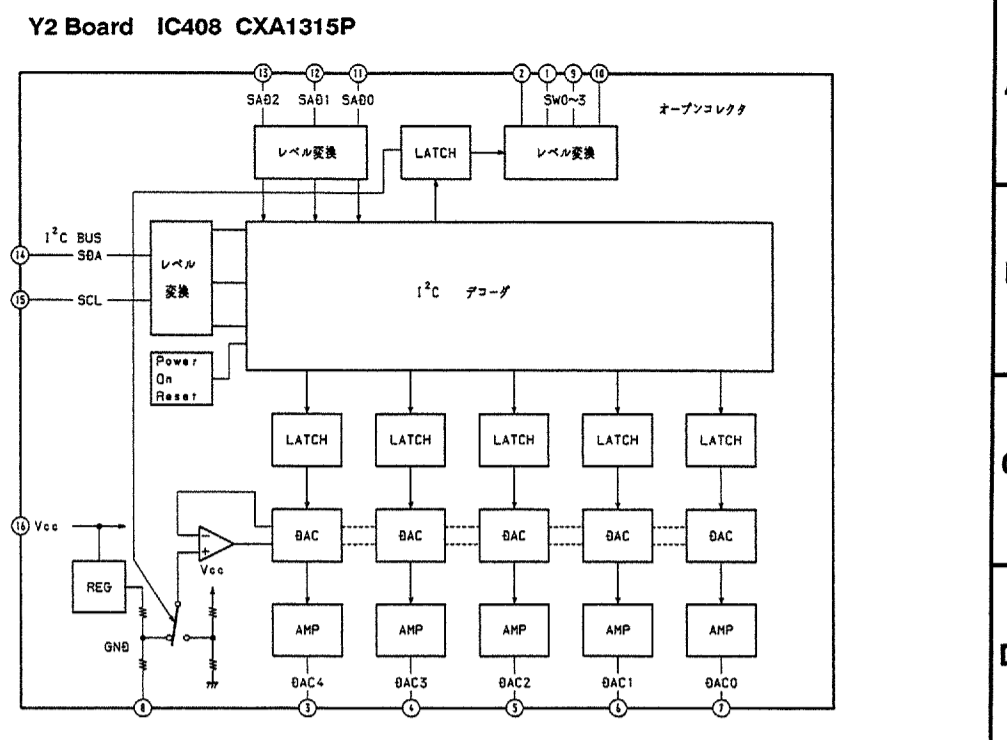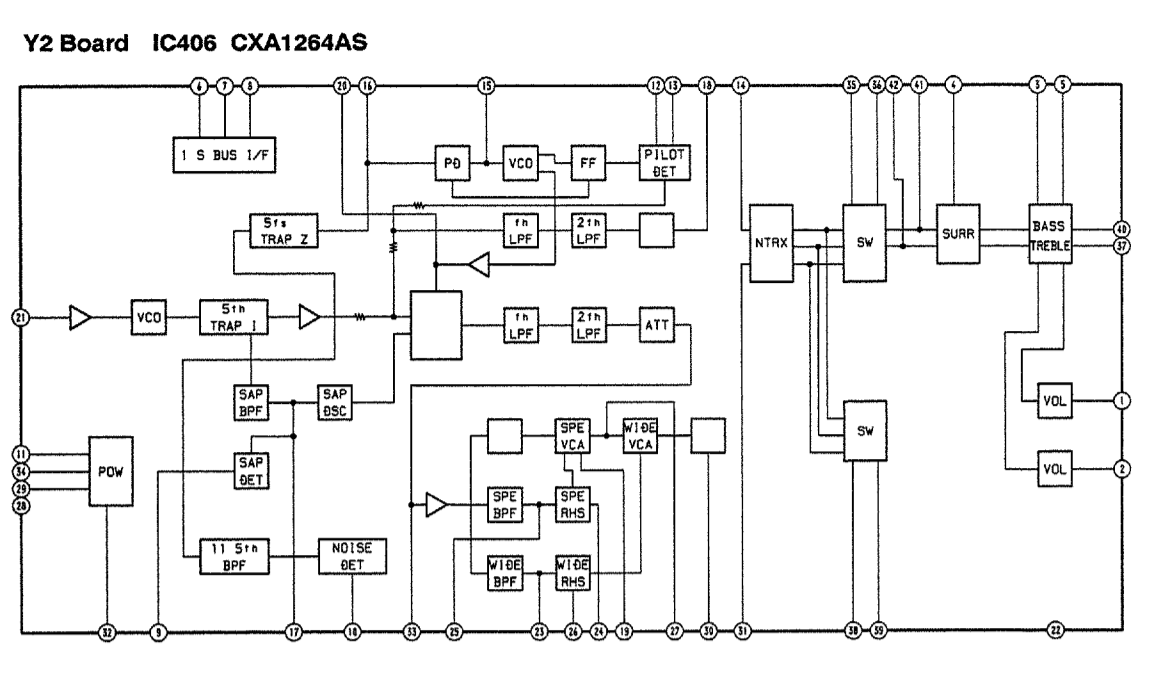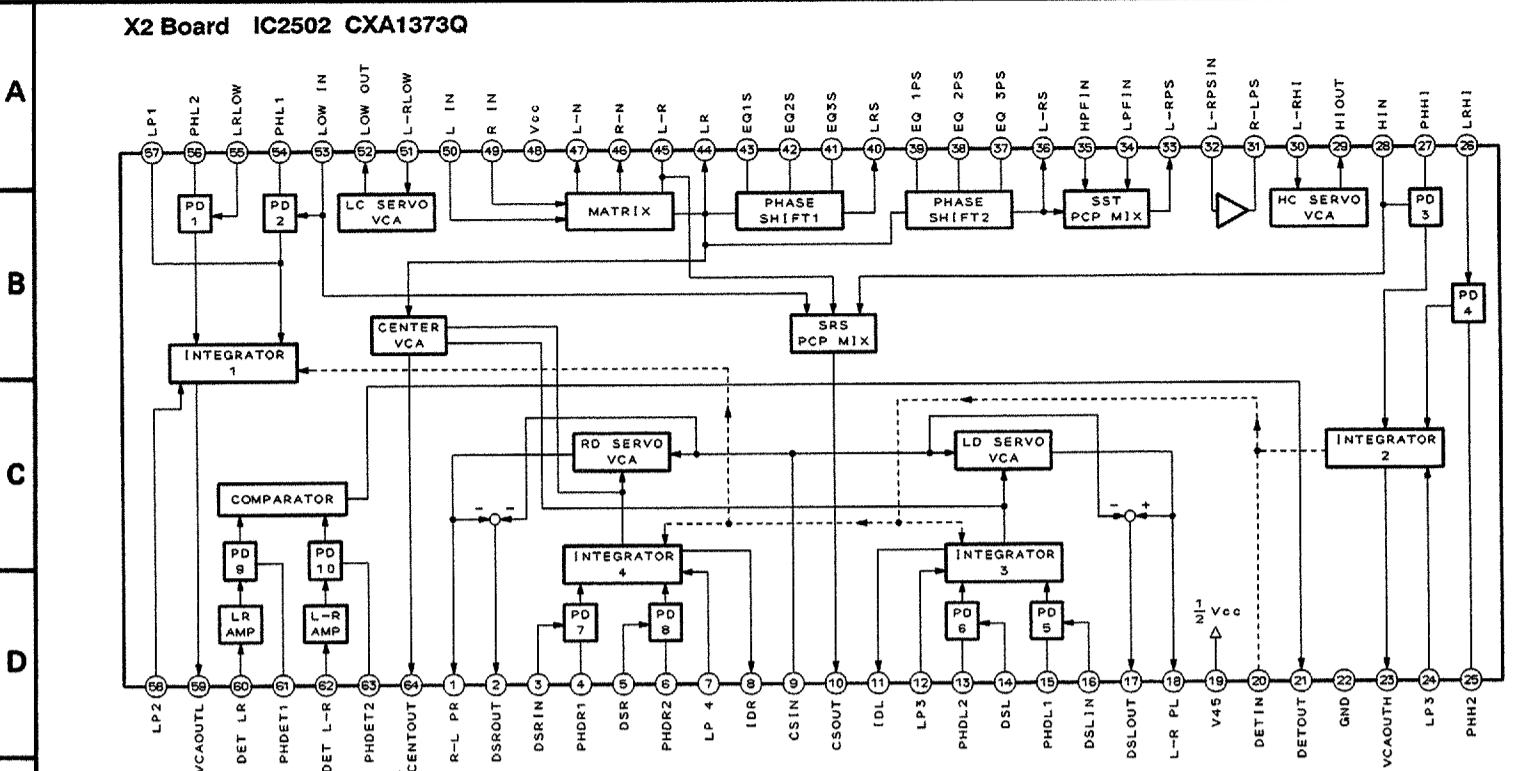


X2 [SRS SURROUND]

- X2 Board -

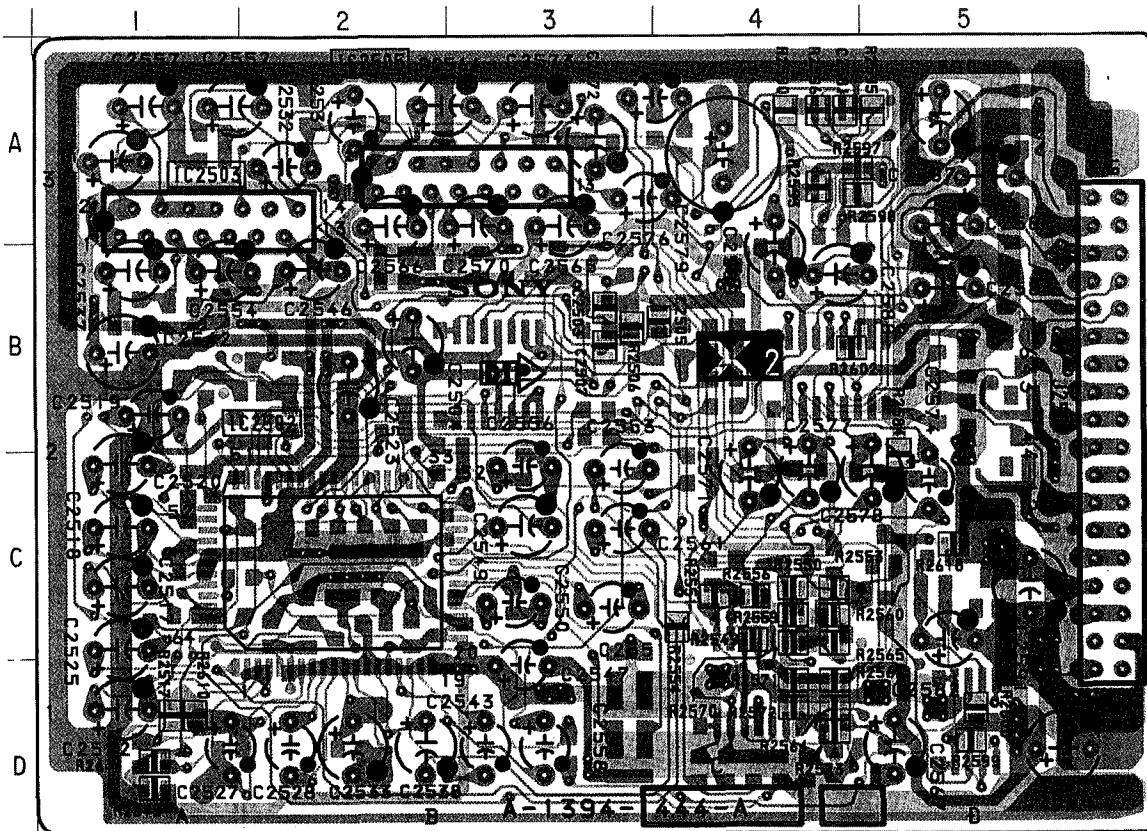

X2 Board



IC		
IC2501		G-3
IC2502	C-2	
IC2503	A-1	H-1
IC2504		E-4
IC2505	A-2	H-2
IC2506		G-4
IC2507		E-5
IC2508		H-4
TRANSISTOR		
Q2501	G-2	
DIODE		
D2501		F-5
D2502		F-5
D2503		G-5
D2504		F-5

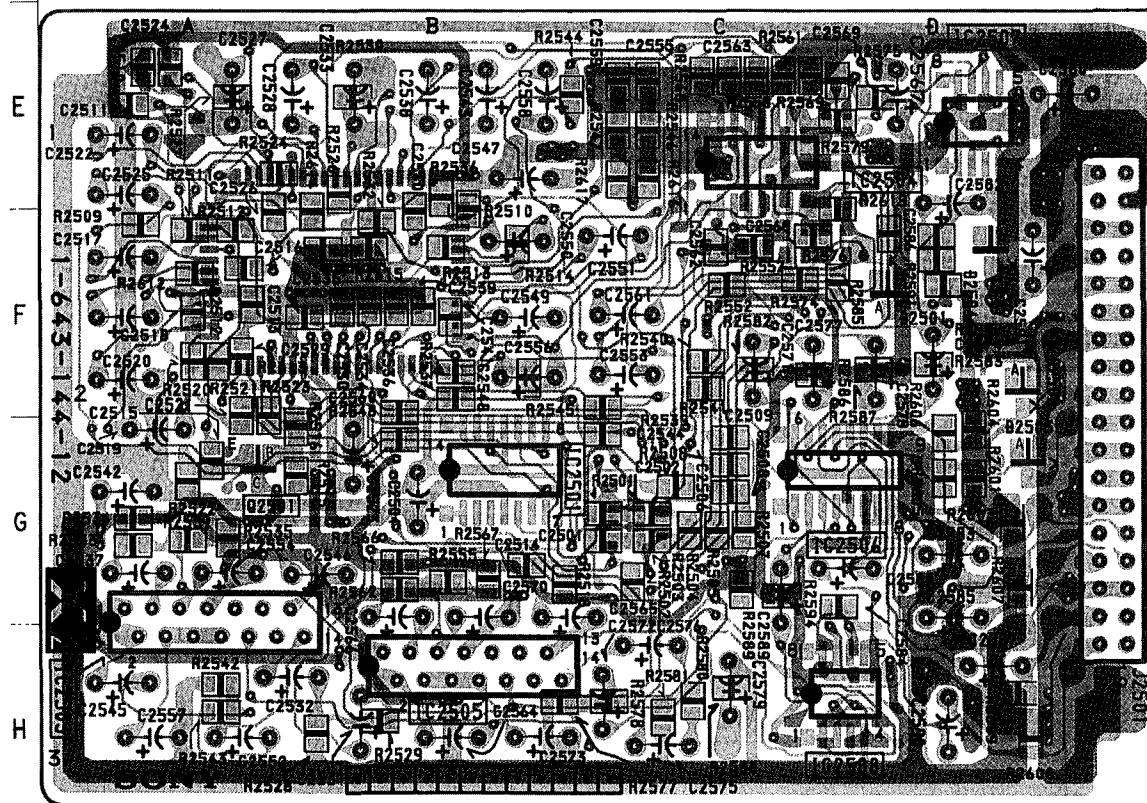

- [Pattern] : Pattern from the side which enables seeing.
- [Pattern] : Pattern of the rear side.


S [SUB-CONTROL, μ -CON,
CLOSED CAPTION DECODER]

- S Board -

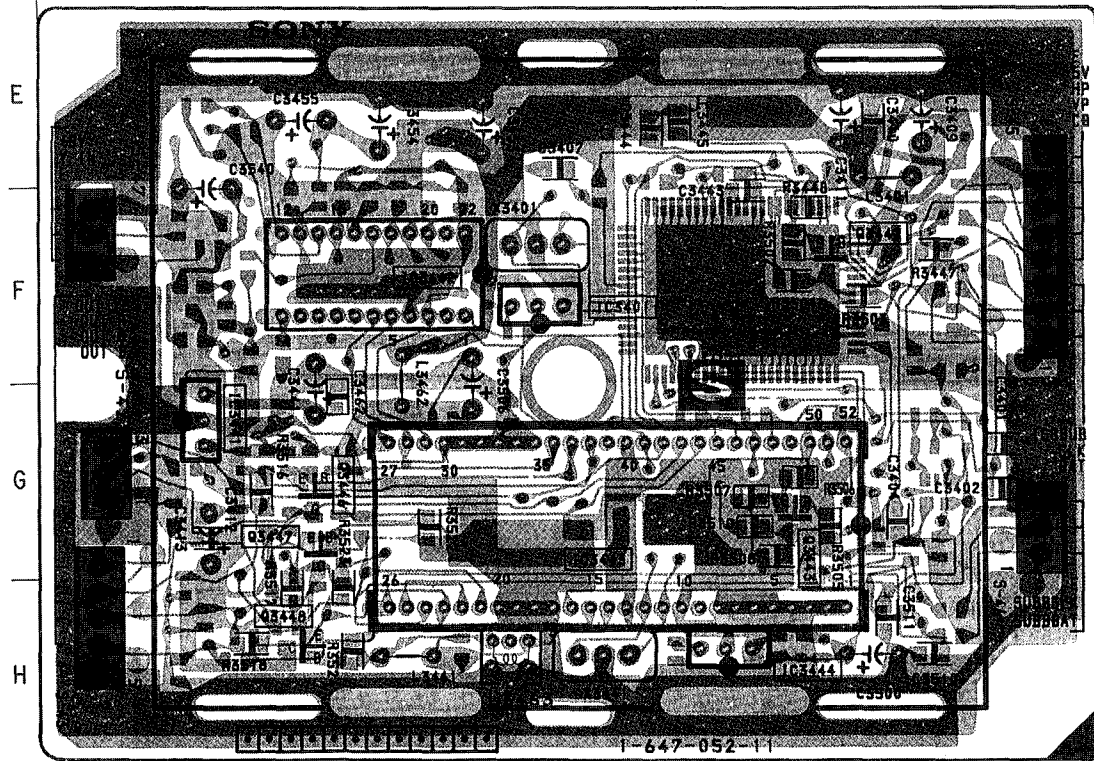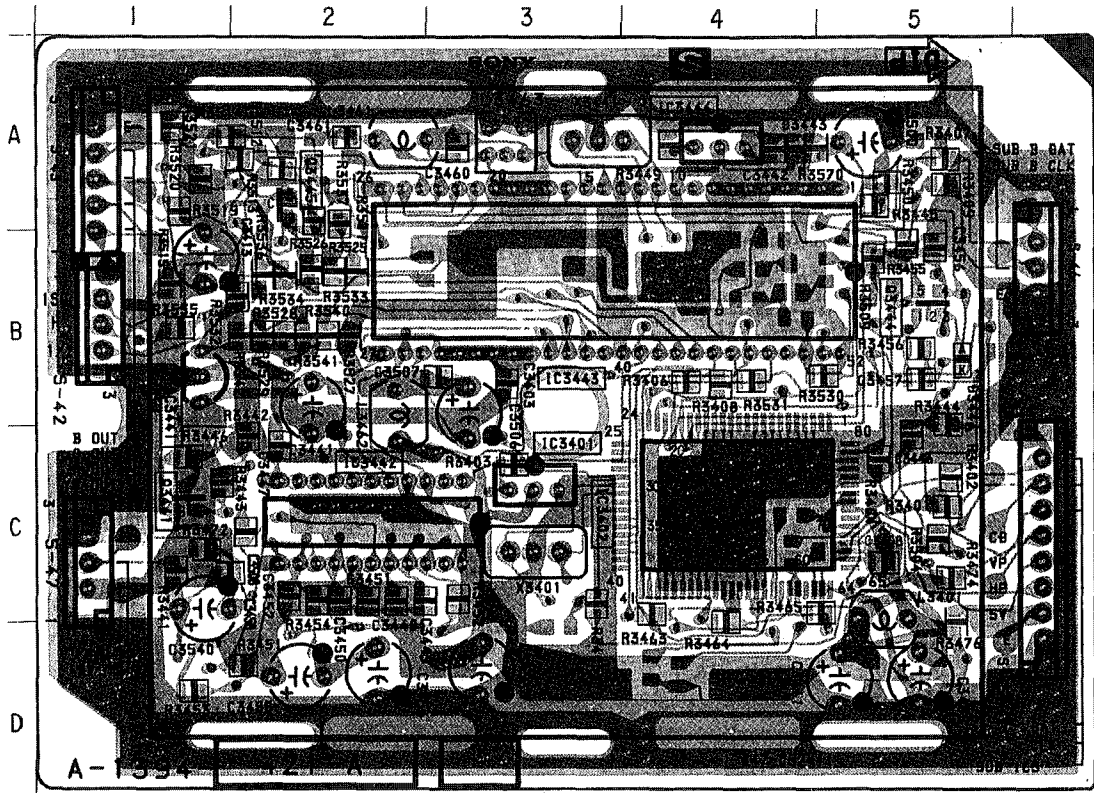



- V Board -

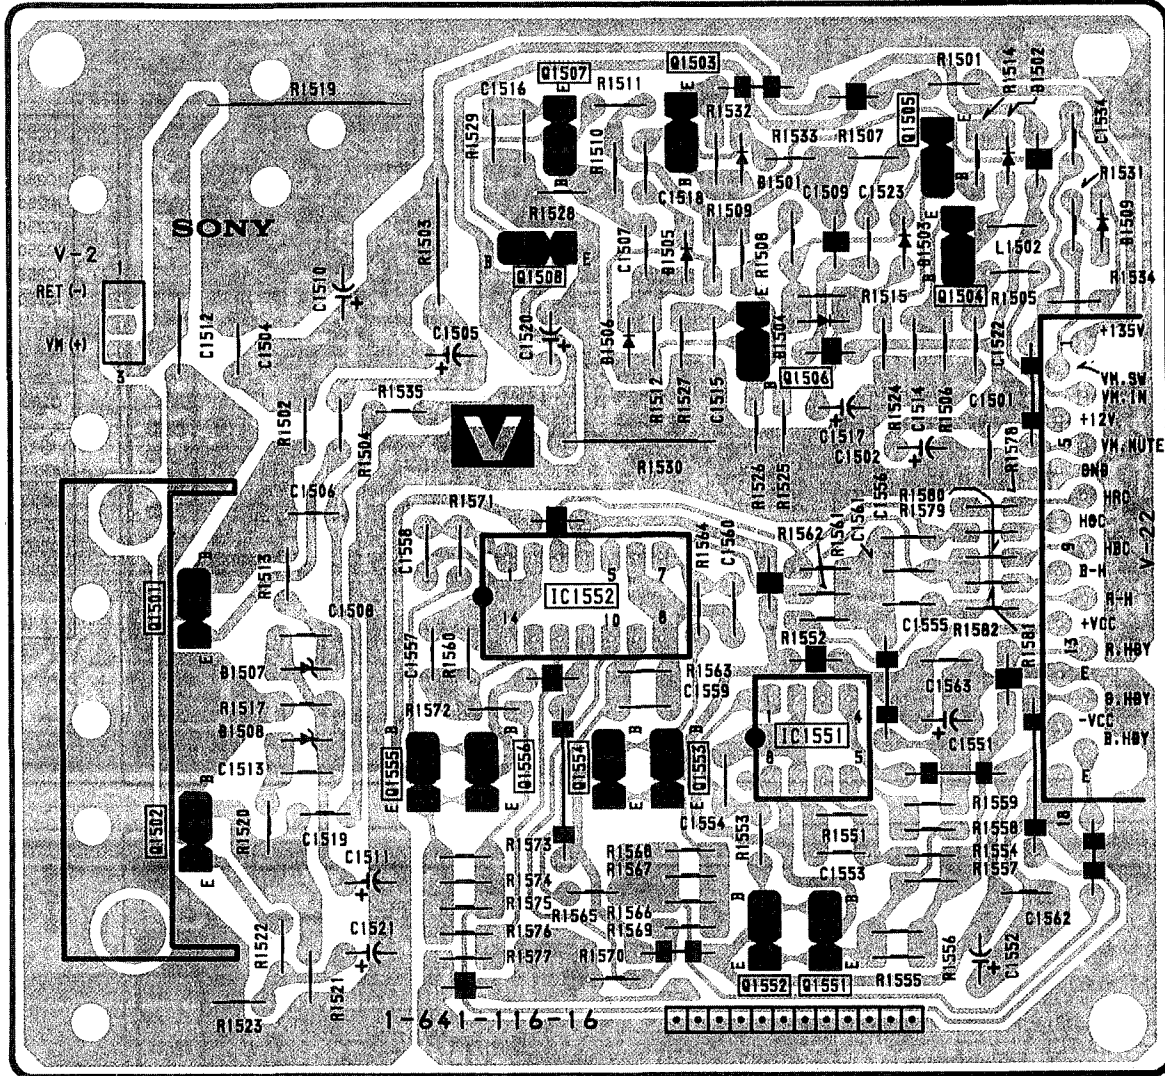

S Board

IC	TRANSISTOR
IC3401 C-3, F-1	Q3441 C-1
IC3402 C-3	Q3444 B-5
IC3441 B-1, G-1	DIODE
IC3442 C-2, F2	
IC3443 B-3, G-3	
IC3444 A-4, H-4	D3444 B-5




- [Pattern] : Pattern from the side which enables seeing.
- [Pattern] : Pattern of the rear side

1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P


A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

S Board IC3401 MN1280-S

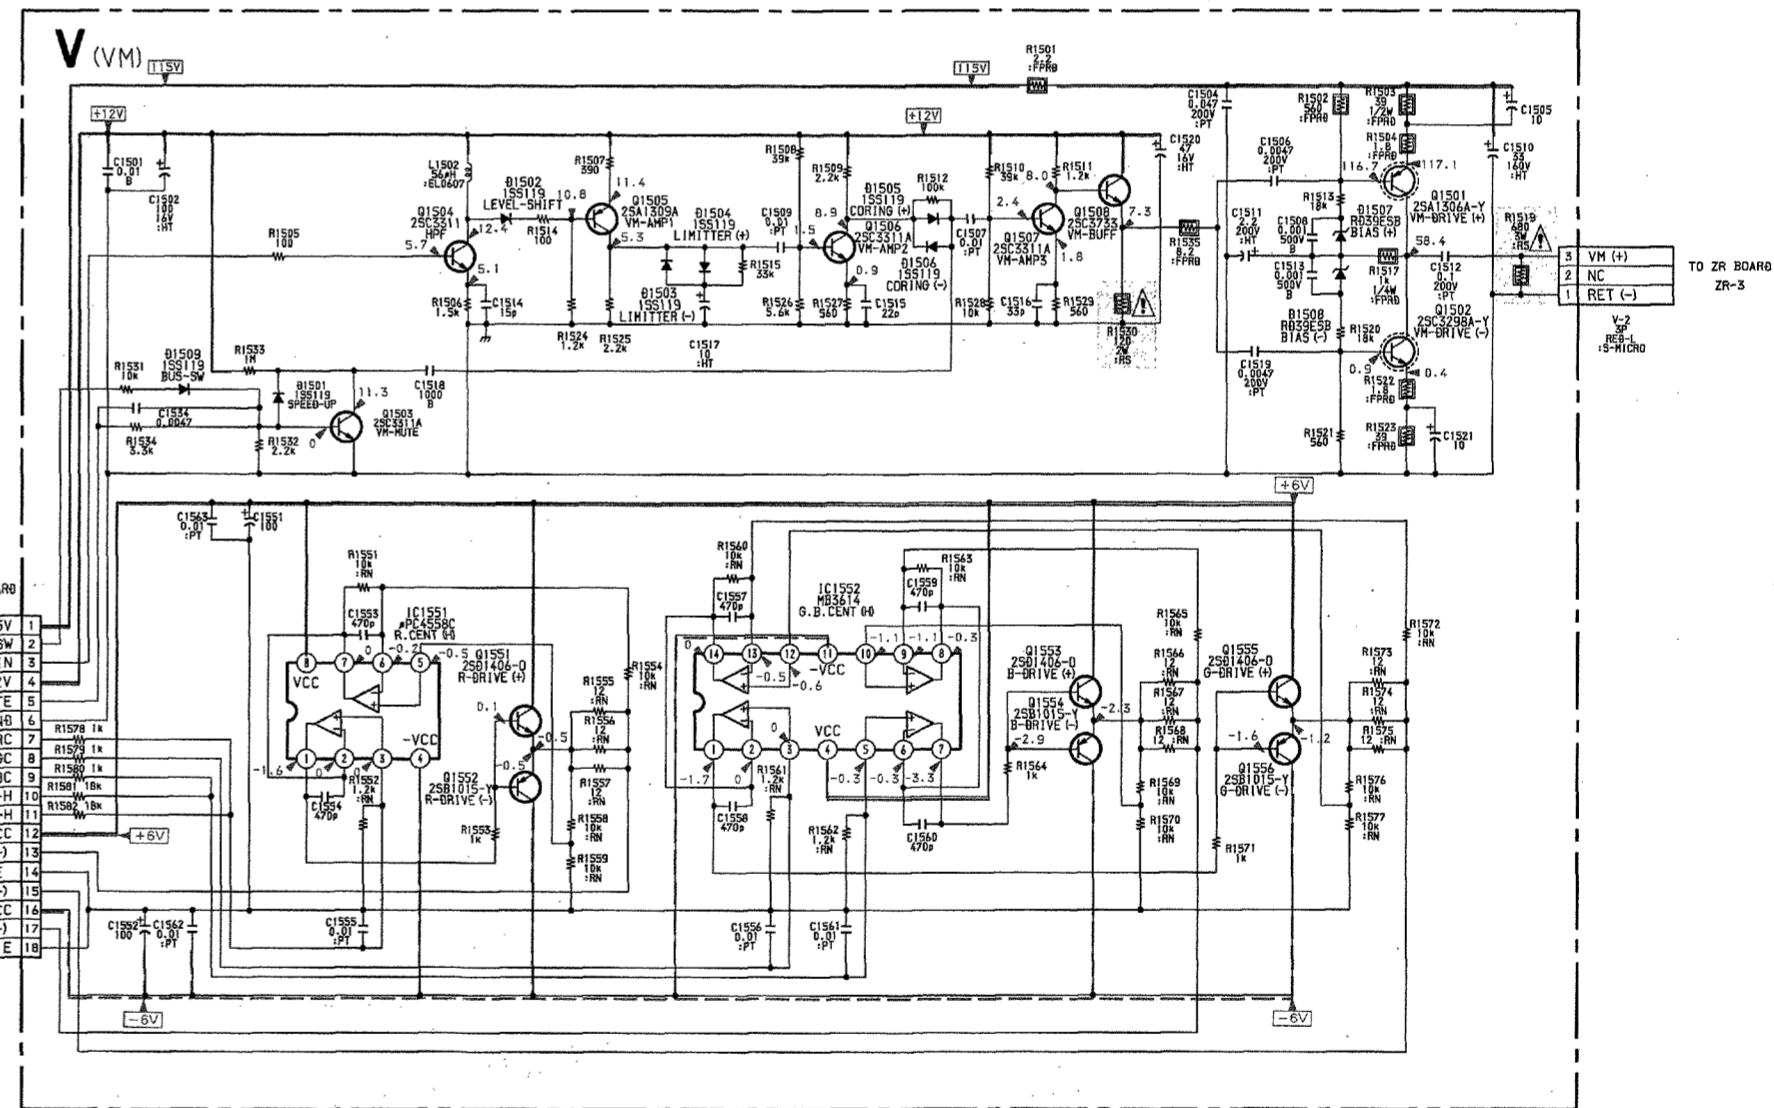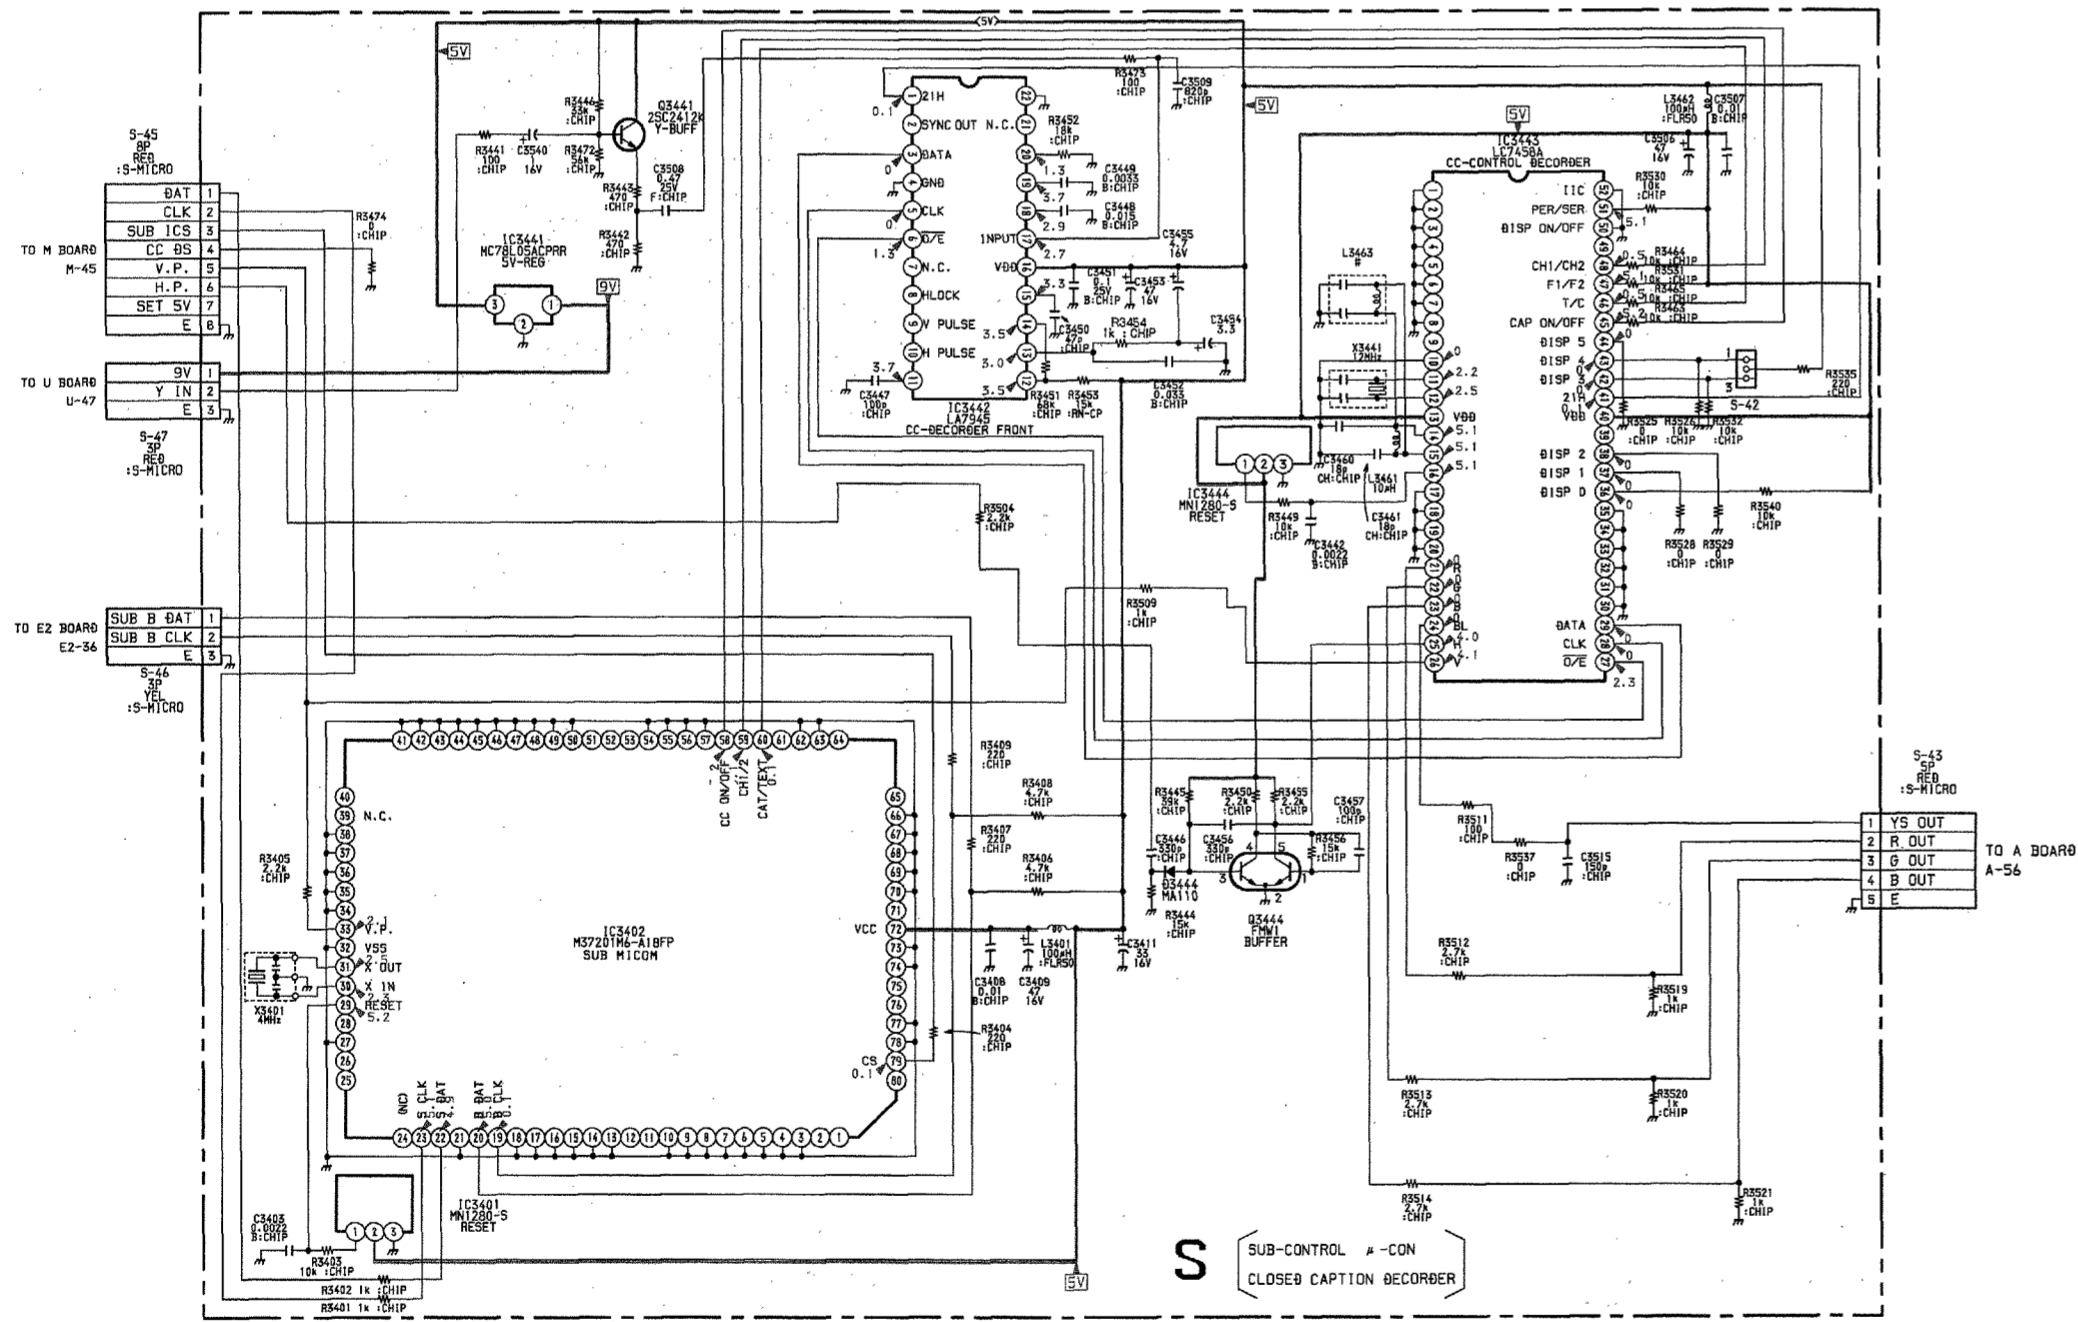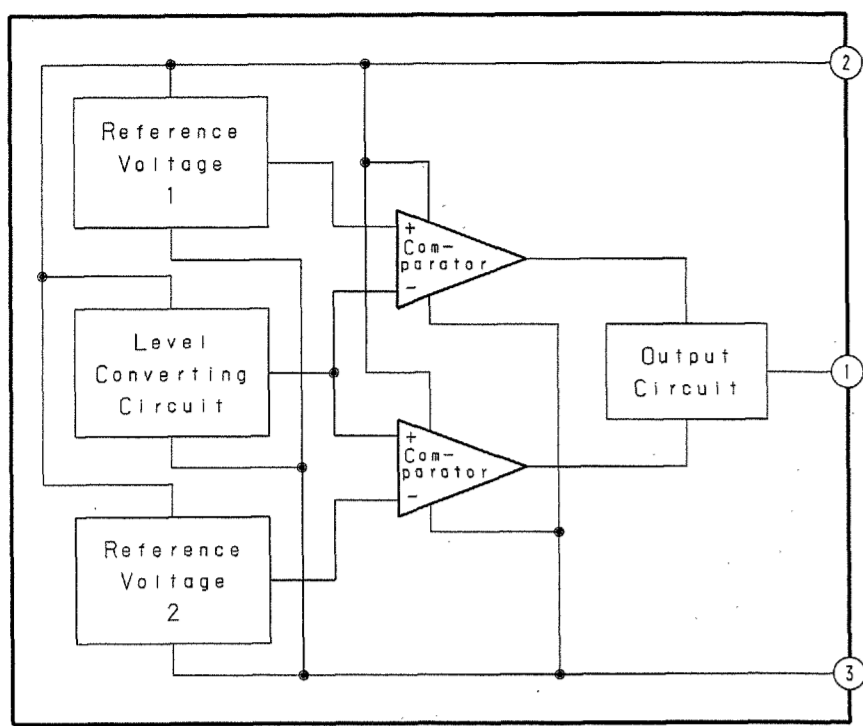


(9) SCHEMATIC DIAGRAM OF P1 BOARD

P1 BOARD IC3003 TDA2595


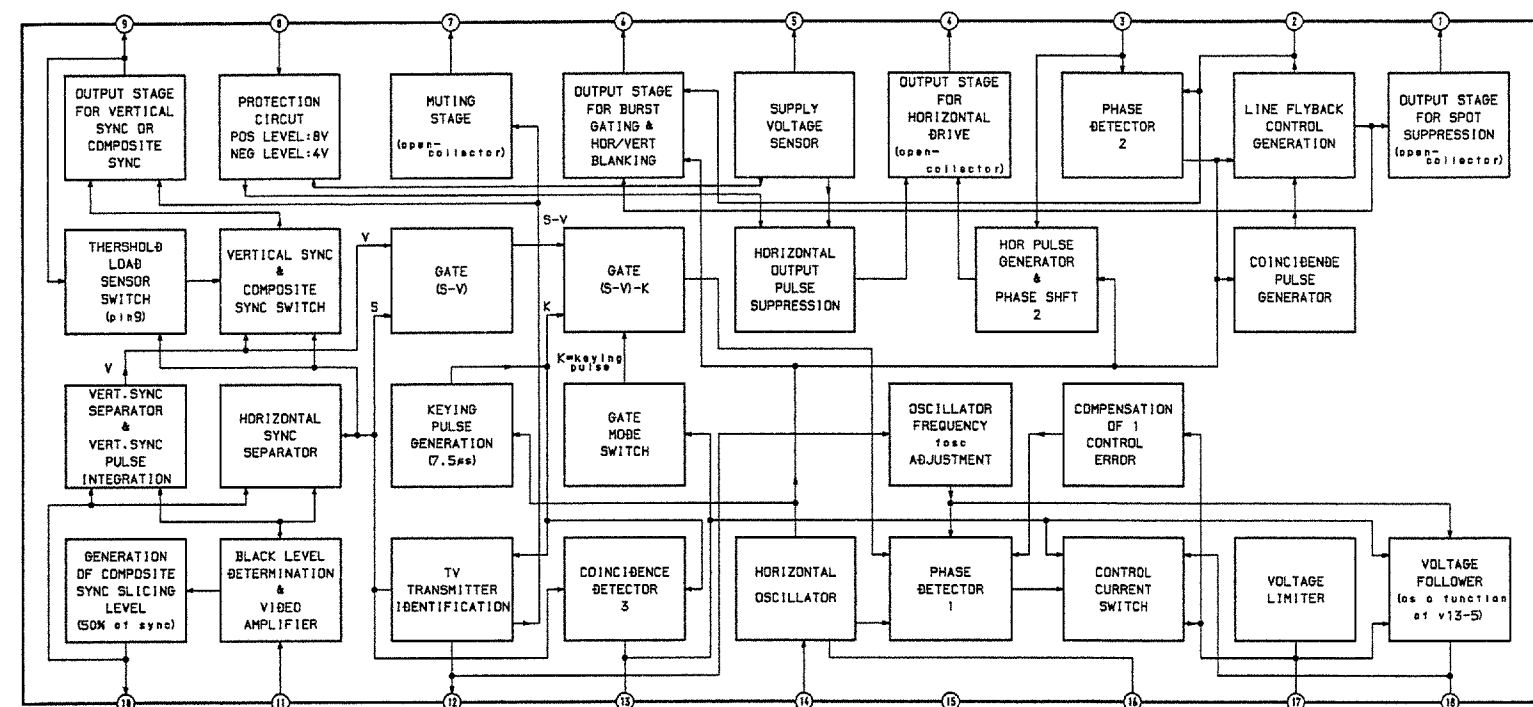


P1 BOARD IC3001 TDA3769

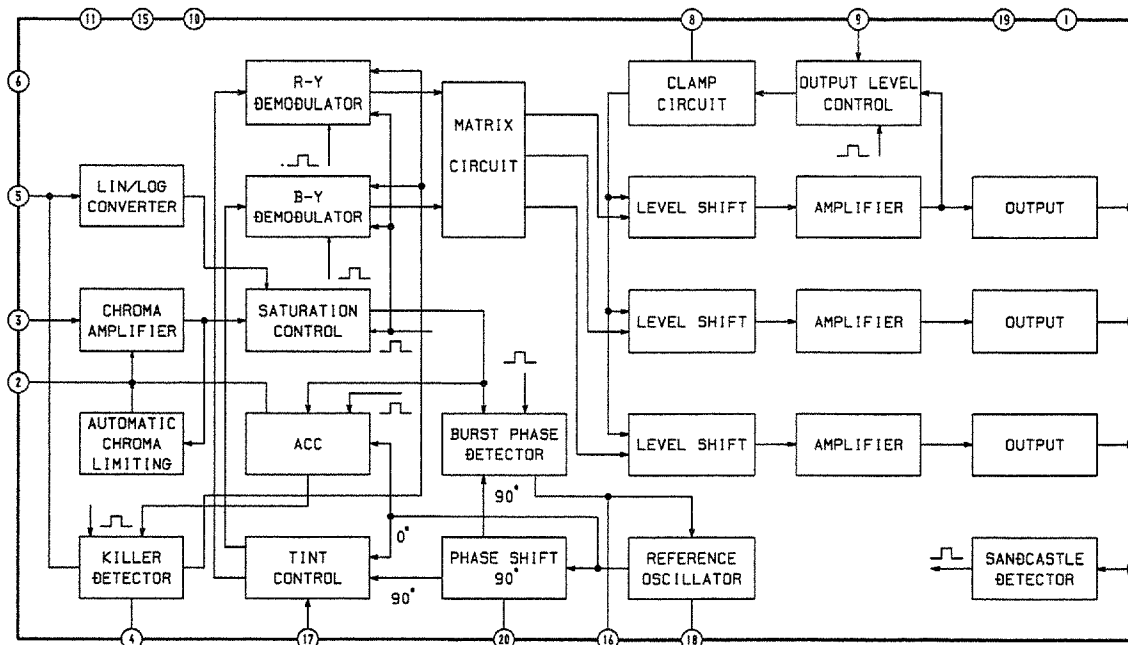

1 2 3 4 5 6 7 8 9 10 11 12 13 14 15


• P1 BOARD WAVEFORMS

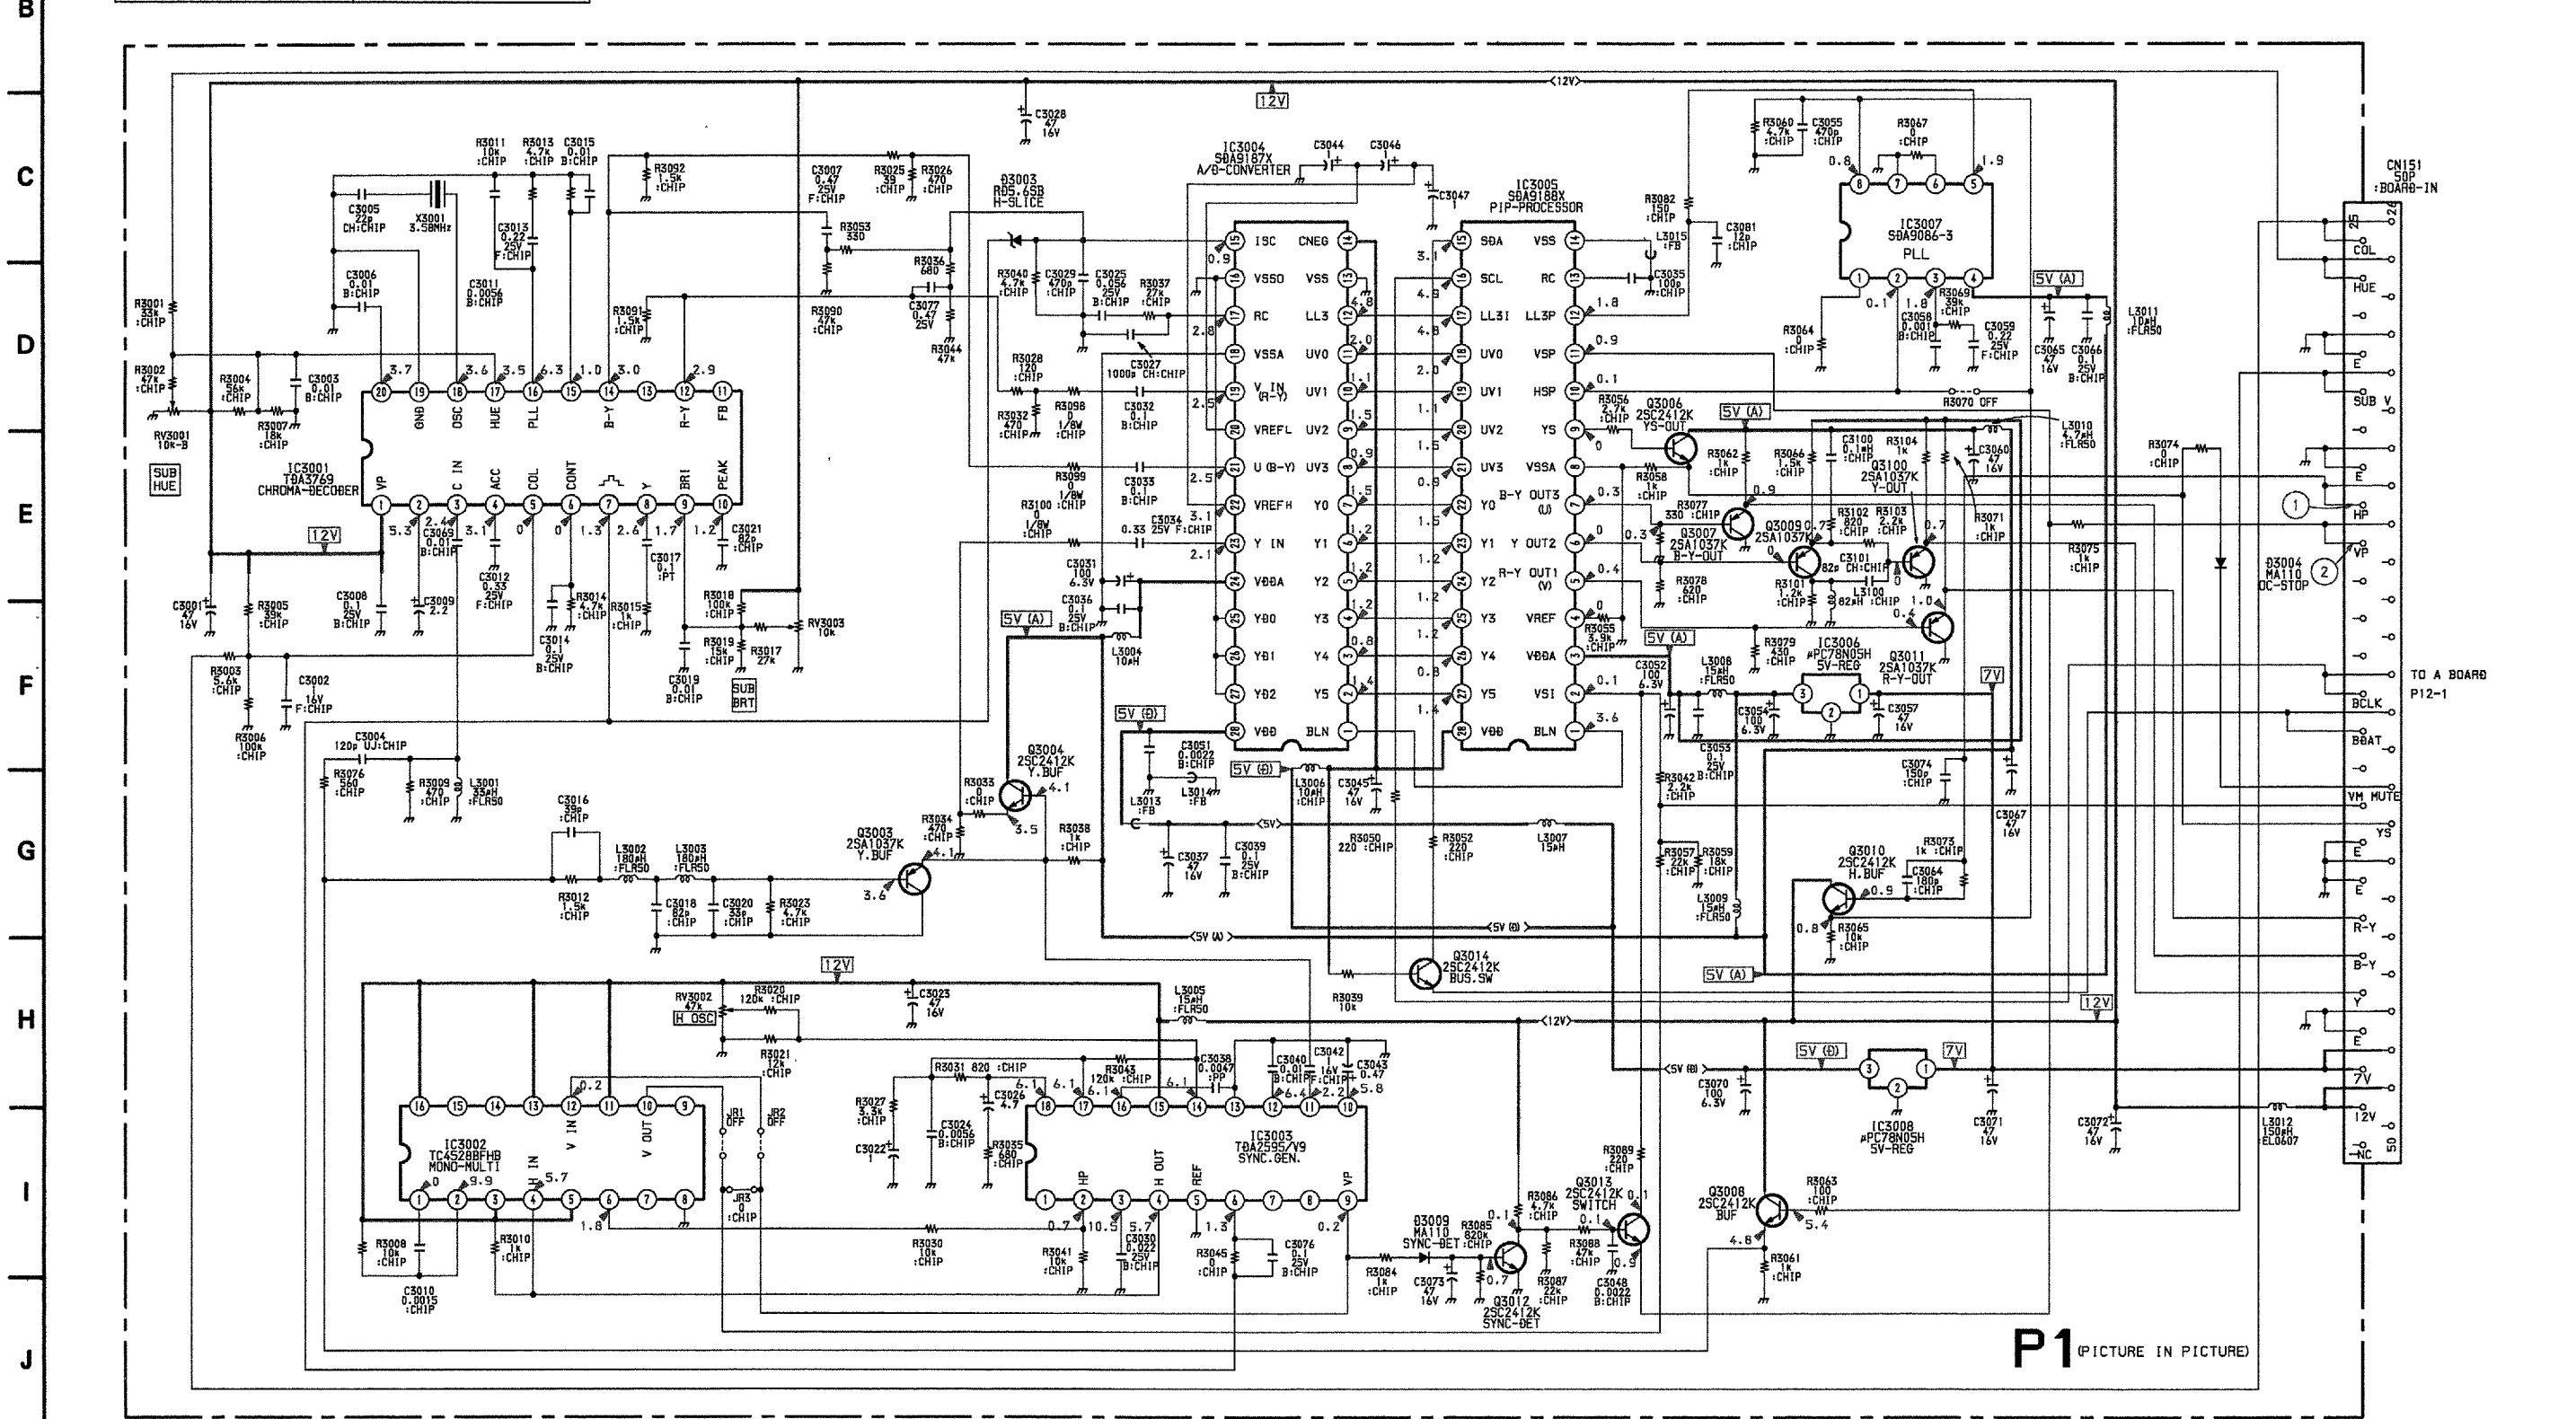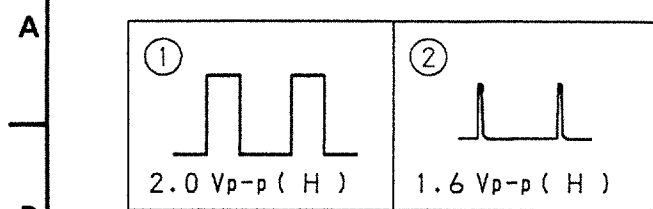

B-93349 <U/C>=P1.

P1 (PICTURE IN PICTURE)

- P1 Board -

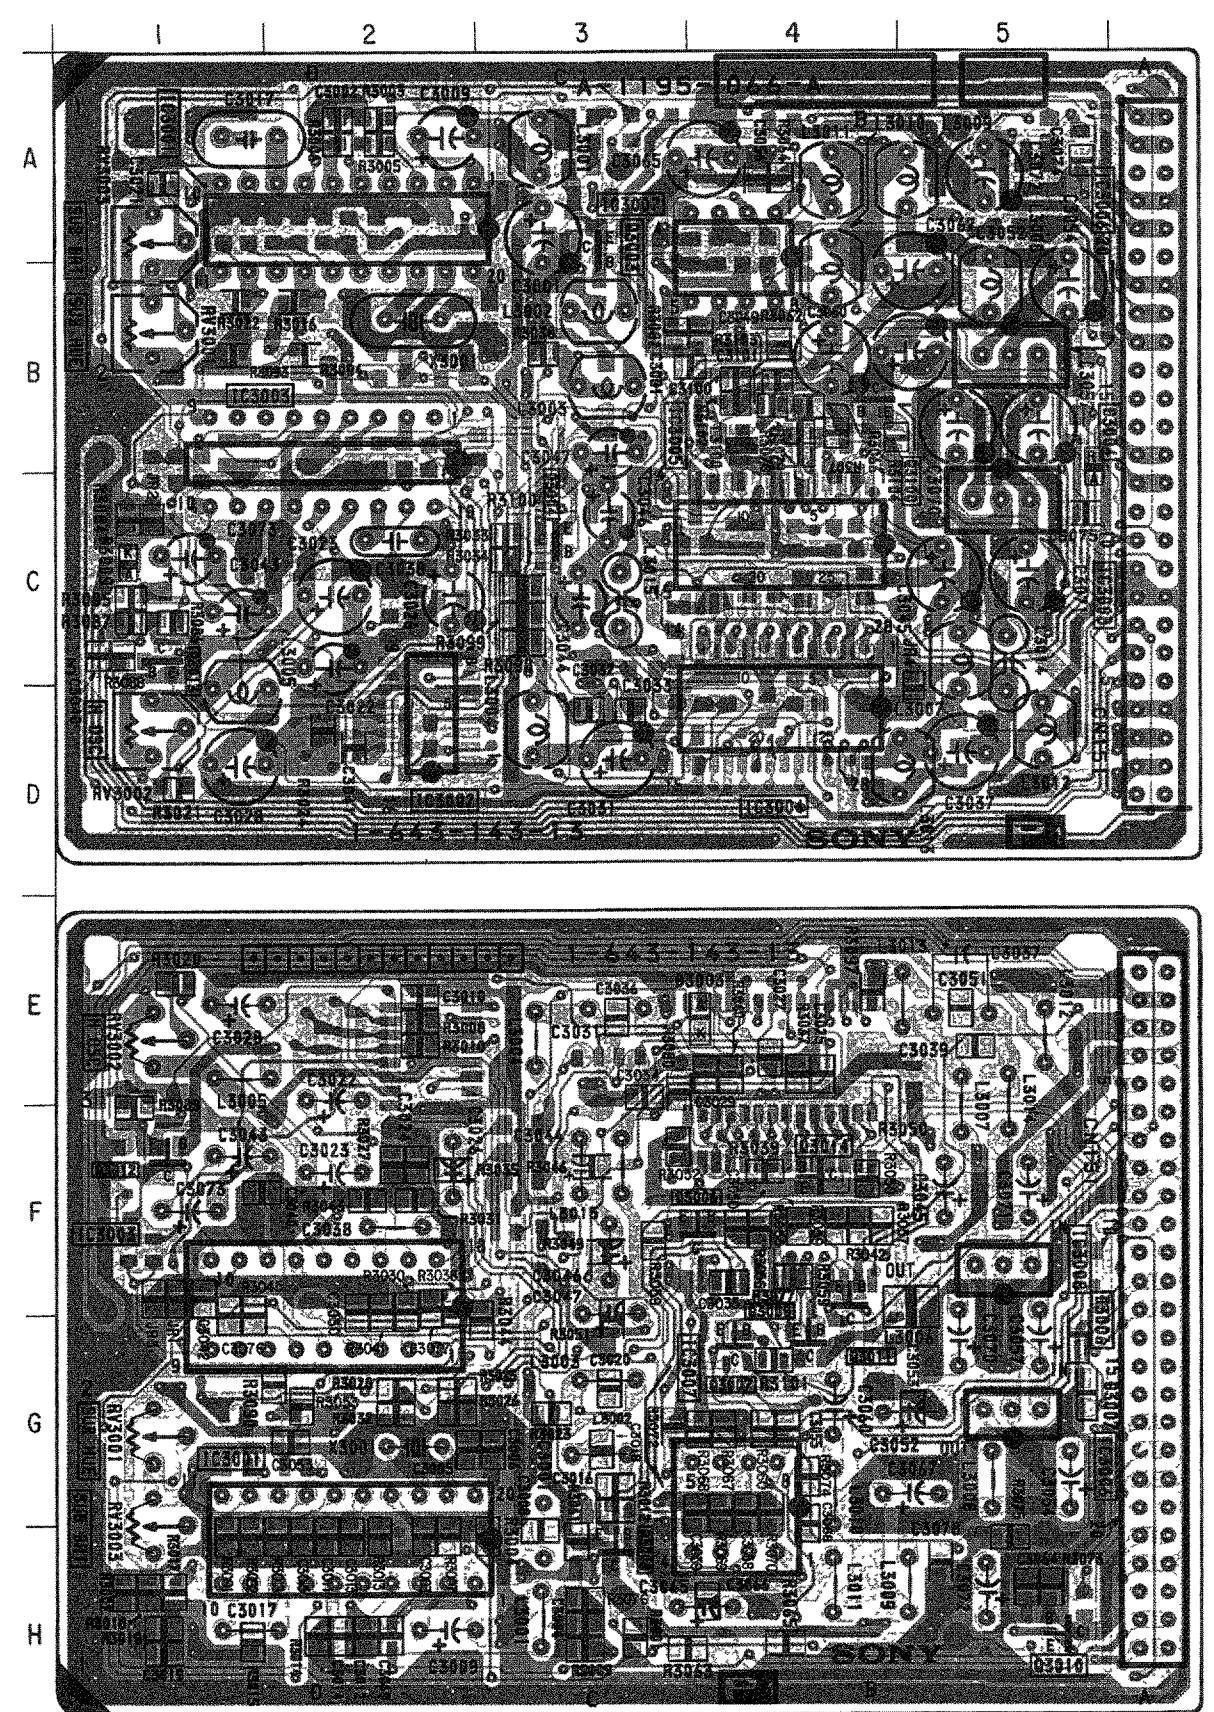



P1 Board	
IC	IC3001 A-2, G-2 IC3002 D-2 IC3003 B-2, F-2 IC3004 D-4 IC3005 C-4 IC3006 B-5, G-5 IC3007 A-4, G-4 IC3008 C-5, F-5
TRANSISTOR	Q3003 A-3 Q3004 F-4 Q3007 G-4 Q3008 H-3 Q3009 C-4 Q3010 H-5 Q3011 F-4 Q3012 F-1 Q3013 C-1 Q3014 F-4 Q3100 B-4
DIODE	D3003 E-4 D3004 B-5 D3009 C-1
VARIABLE RESISTOR	RV3001 B-1, G-1 RV3002 D-1, E-1 RV3003 A-1, G-1

• : Pattern from the side which enables seeing.
 ◻ : Pattern of the rear side.

P1

[PICTURE IN PICTURE]

— P1 Board —

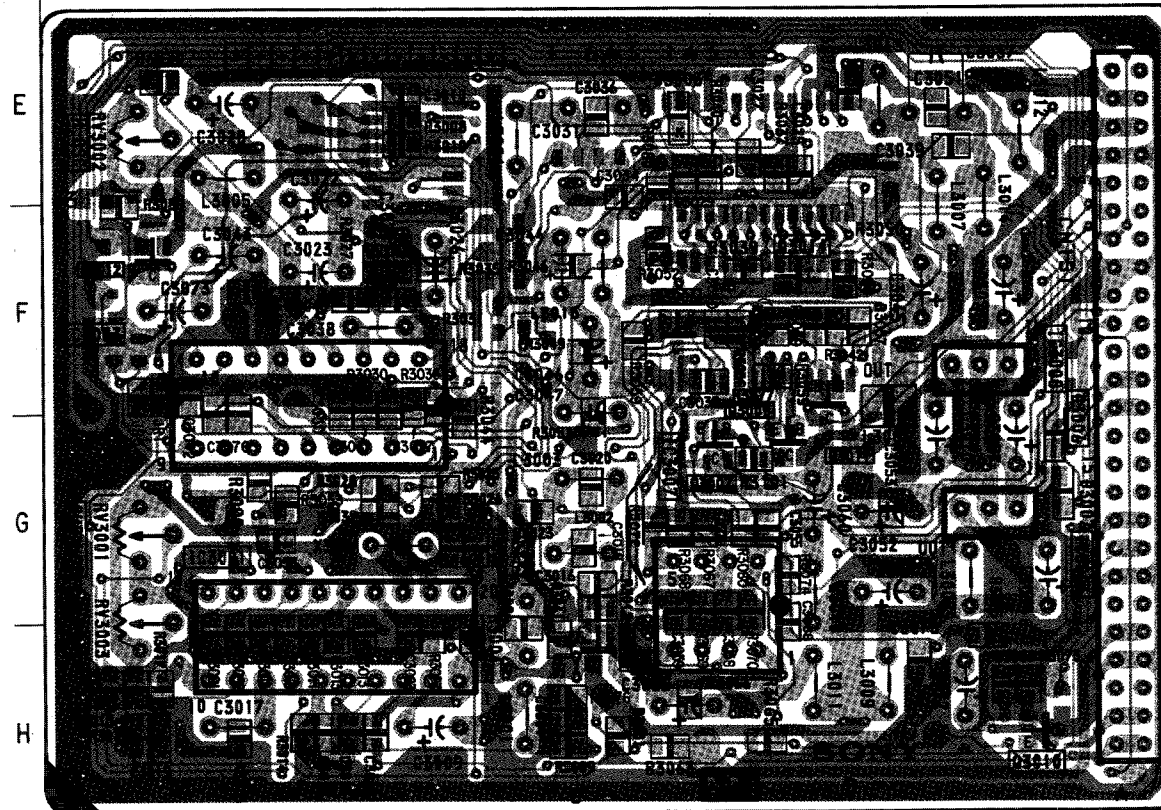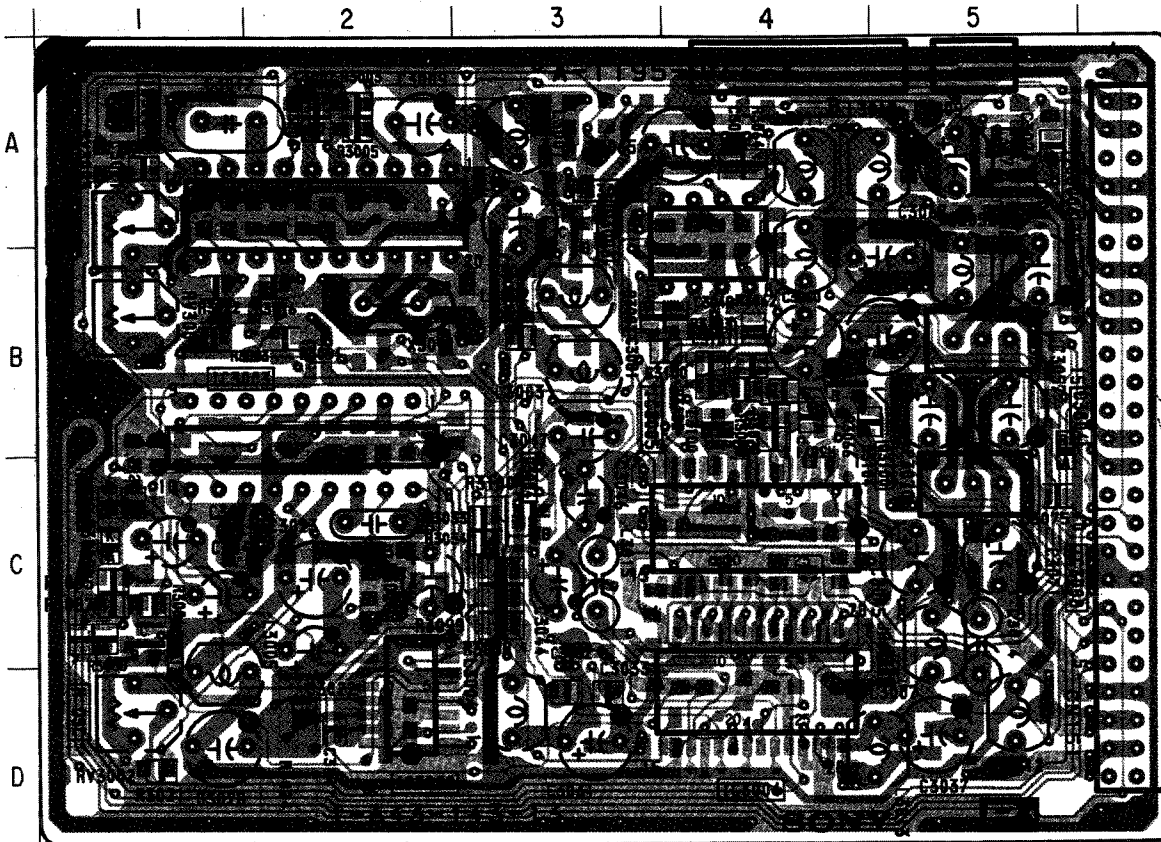

P1 Board

IC	
IC3001	A-2, G-2
IC3002	D-2
IC3003	B-2, F-2
IC3004	D-4
IC3005	C-4
IC3006	B-5, G-5
IC3007	A-4, G-4
IC3008	C-5, F-5


TRANSISTOR	
Q3003	A-3
Q3004	C-3
Q3006	F-4
Q3007	G-4
Q3008	H-3
Q3009	G-4
Q3010	H-5
Q3011	F-4
Q3012	F-1
Q3013	C-1
Q3014	F-4
Q3100	B-4

DIODE	
D3003	E-4
D3004	B-5
D3009	C-1



VARIABLE RESISTOR	
RV3001	B-1, G-1
RV3002	D-1, E-1
RV3003	A-1, G-1

- [Pattern] : Pattern from the side which enables seeing.
- [Pattern] : Pattern of the rear side.

• P3 BOARD WAVEFORMS

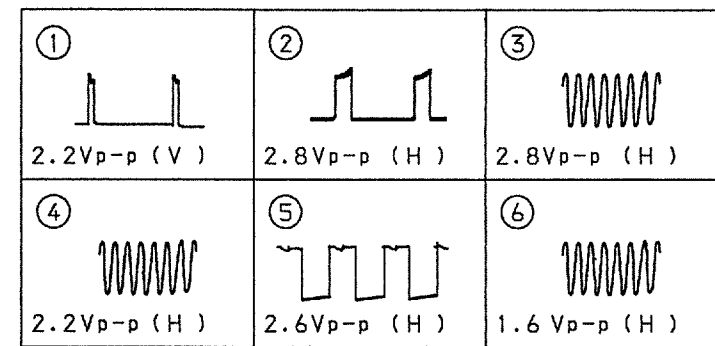


P3 Board IC2002 NJM2903S

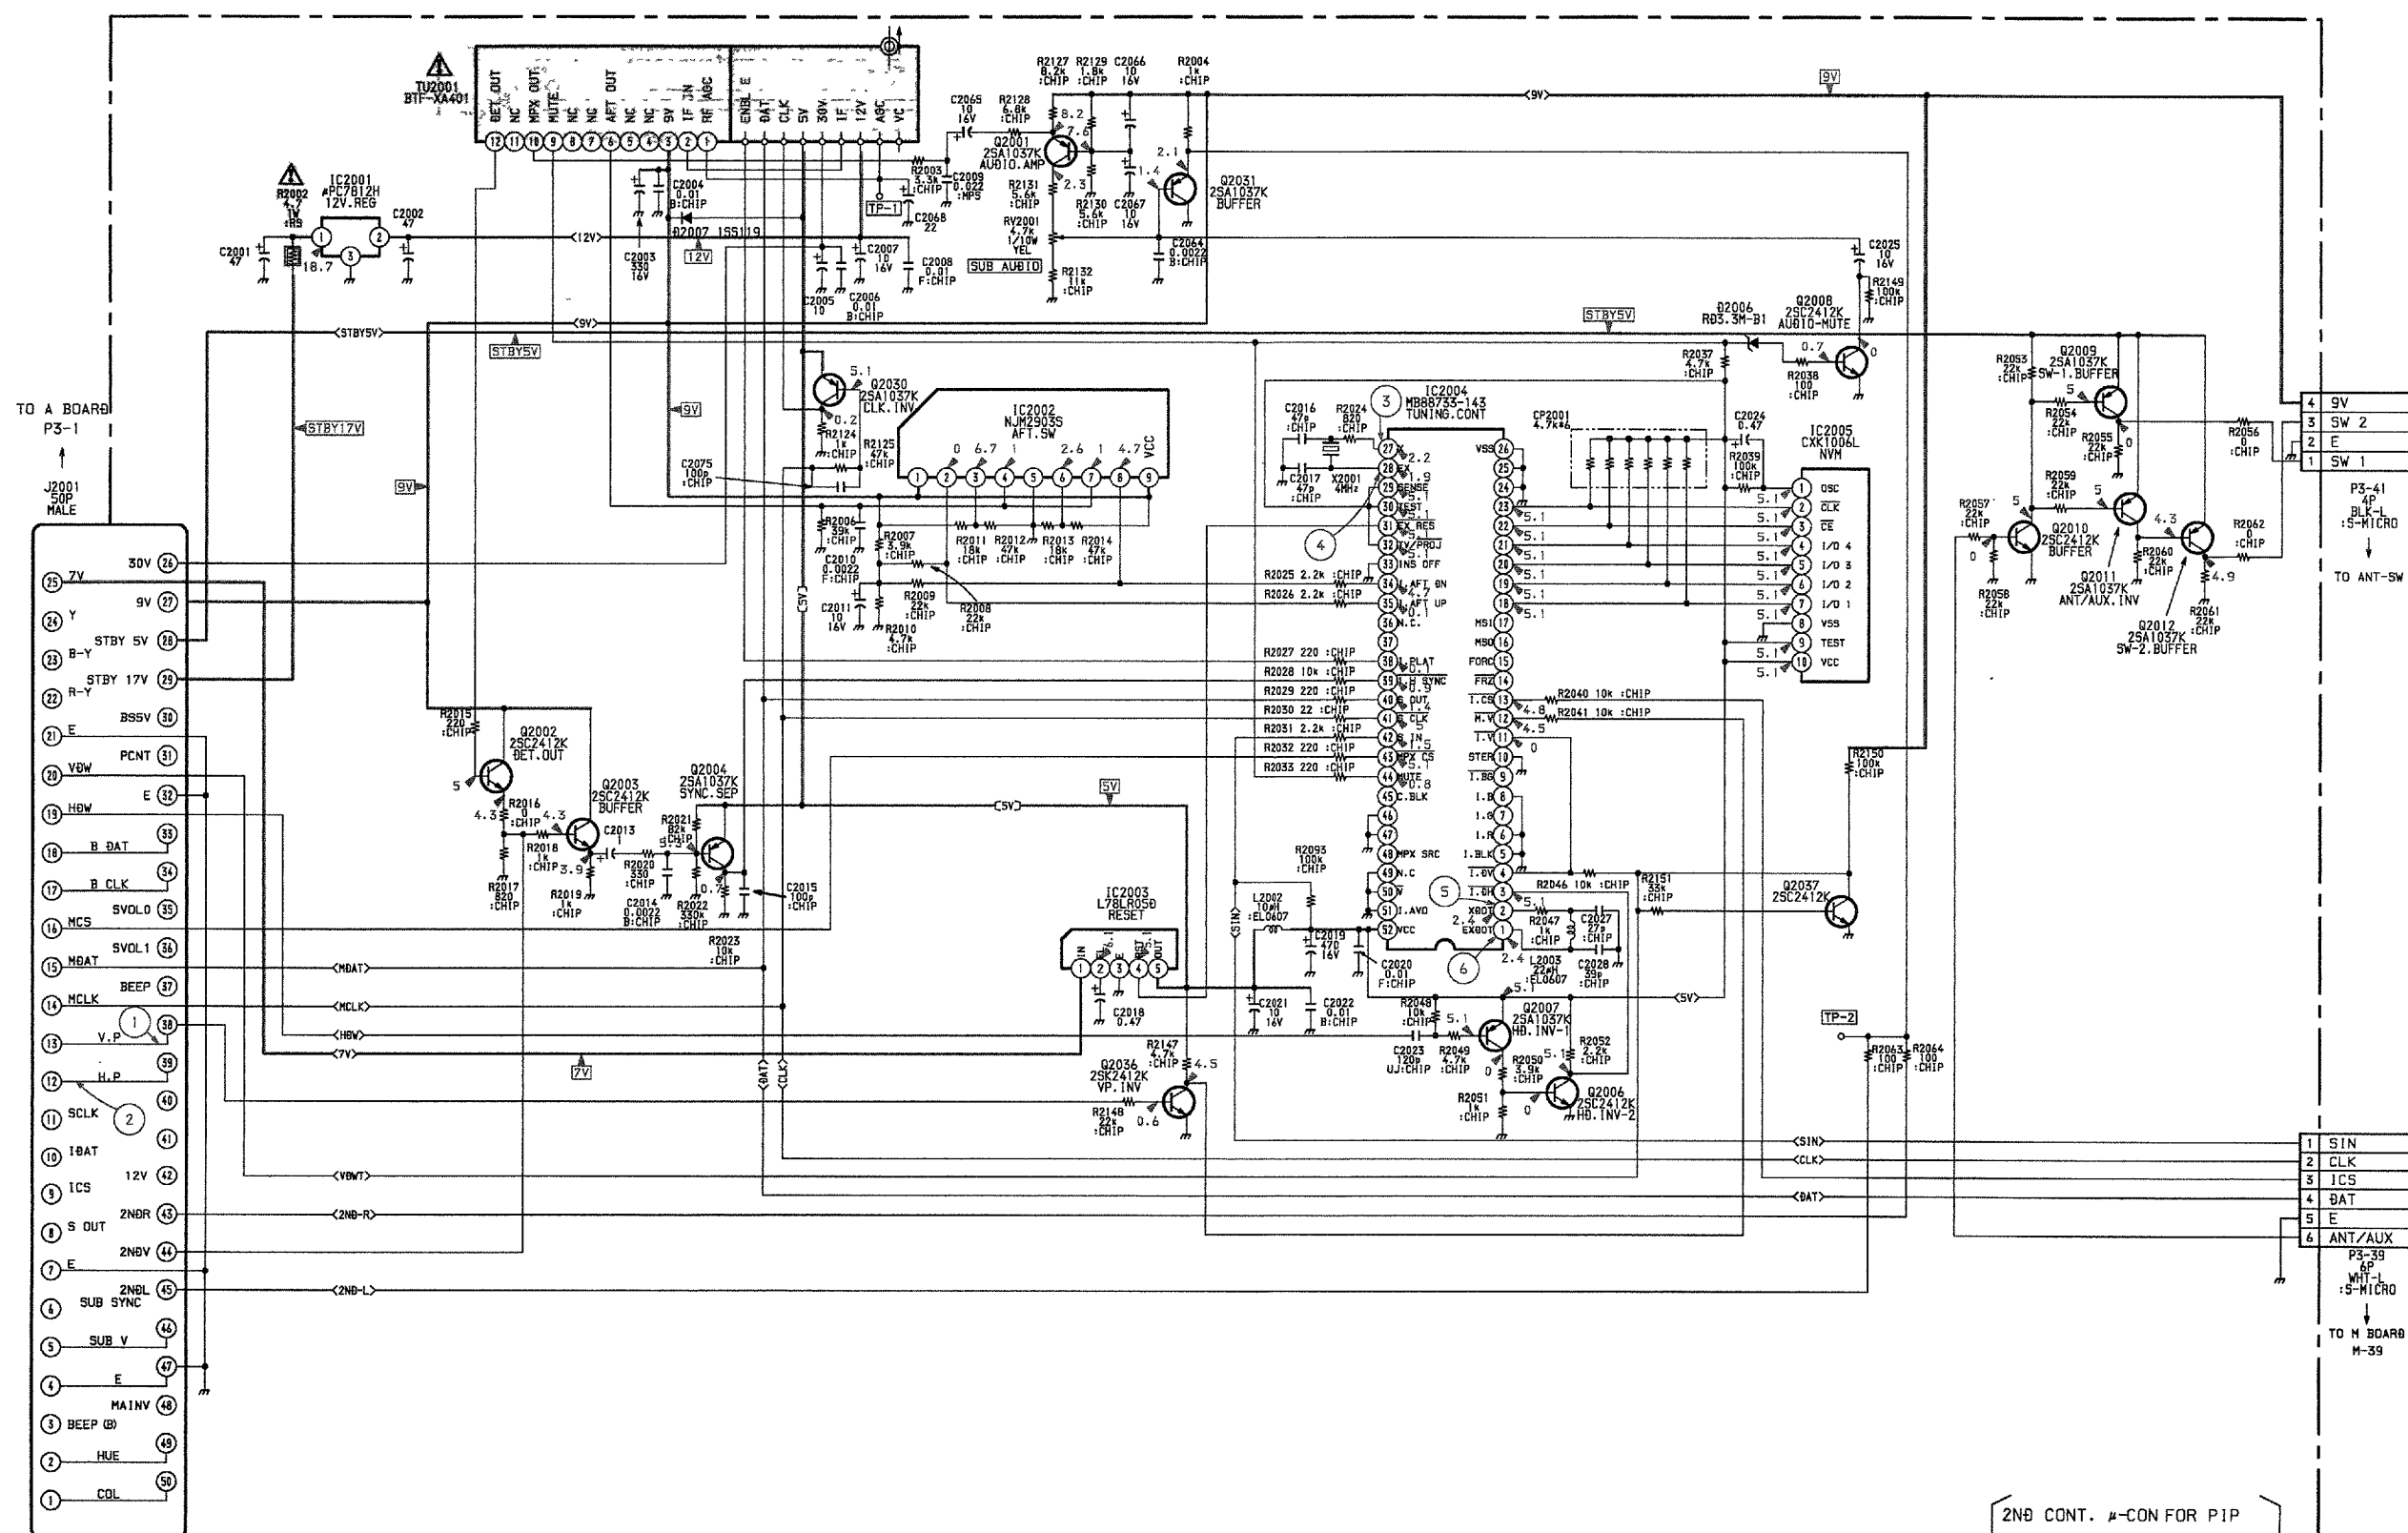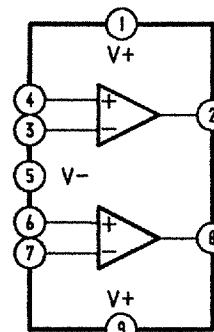

P3
 2ND CONT. μ-CON FOR PIP
 2ND TUNER-VIF/SIF FOR PIP
 Y/C JUNGLE FOR PIP
 ANT SW CONT

P3
 2ND CONT. μ-CON FOR PIP,
 2ND TUNER-VIF/SIF FOR PIP,
 Y/C JUNGLE FOR PIP,
 ANT SW CONT


- P3 Board -

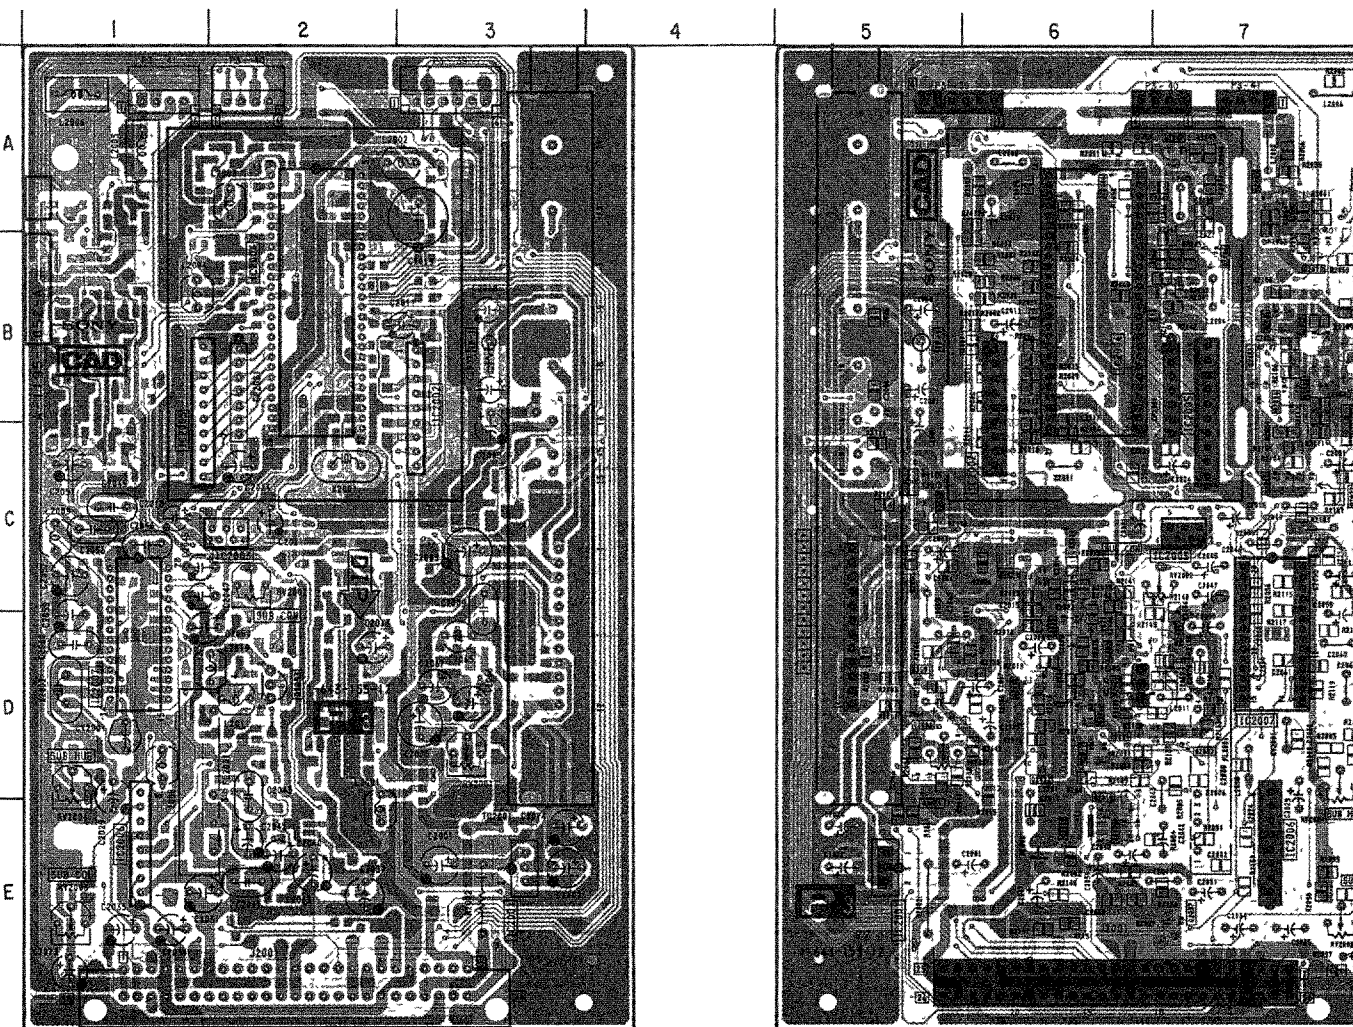



• : Pattern from the side which enables seeing.
 • : Pattern of the rear side.

P3 Board



IC	Q2006 A-6	VARIABLE RESISTOR
IC2001 E-3, E-5	Q2007 A-7	RV2001 D-3, D-5
IC2002 C-3, C-6	Q2009 A-7	TUNER
IC2003 C-2, C-7	Q2010 B-7	
IC2004 B-2, B-6	Q2011 A-7	TU2001 D-3, D-5
IC2005 C-1, C-7	Q2012 A-7	CRYSTAL
	Q2030 C-5	
TRANSISTOR	Q2031 D-5	X2001 C-2, C-6
	Q2002 D-6	
Q2003 D-6	DIODE	
Q2004 C-6		
Q2005 B-7	D2006 C-6	

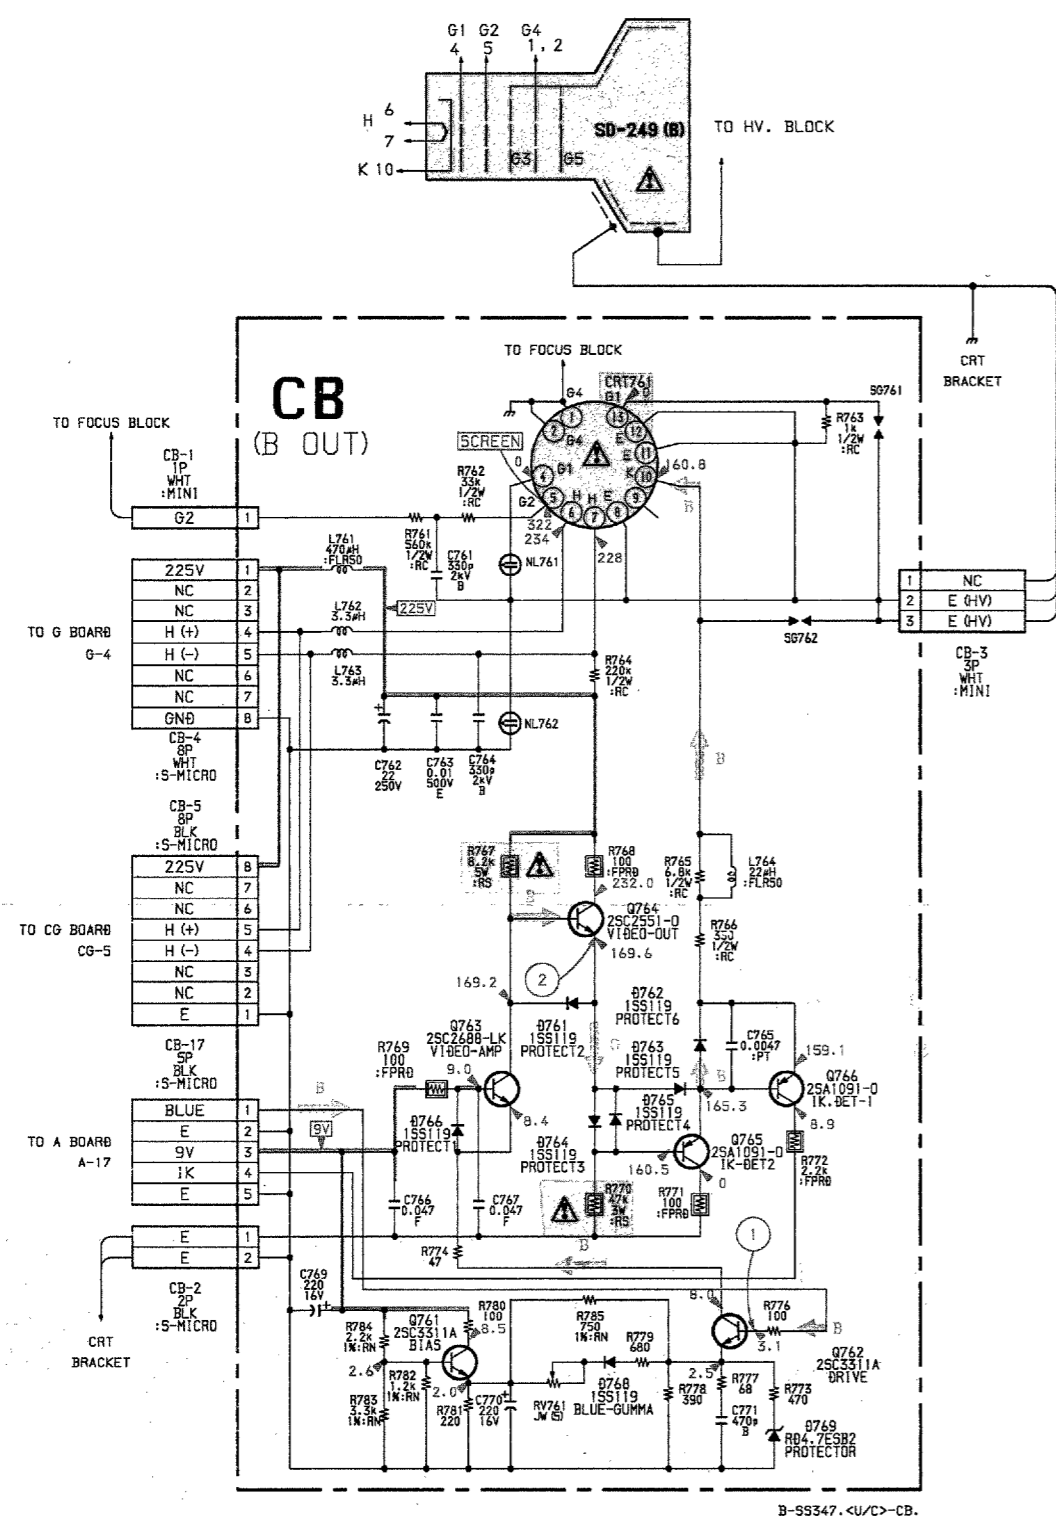





• CB BOARD WAVEFORMS

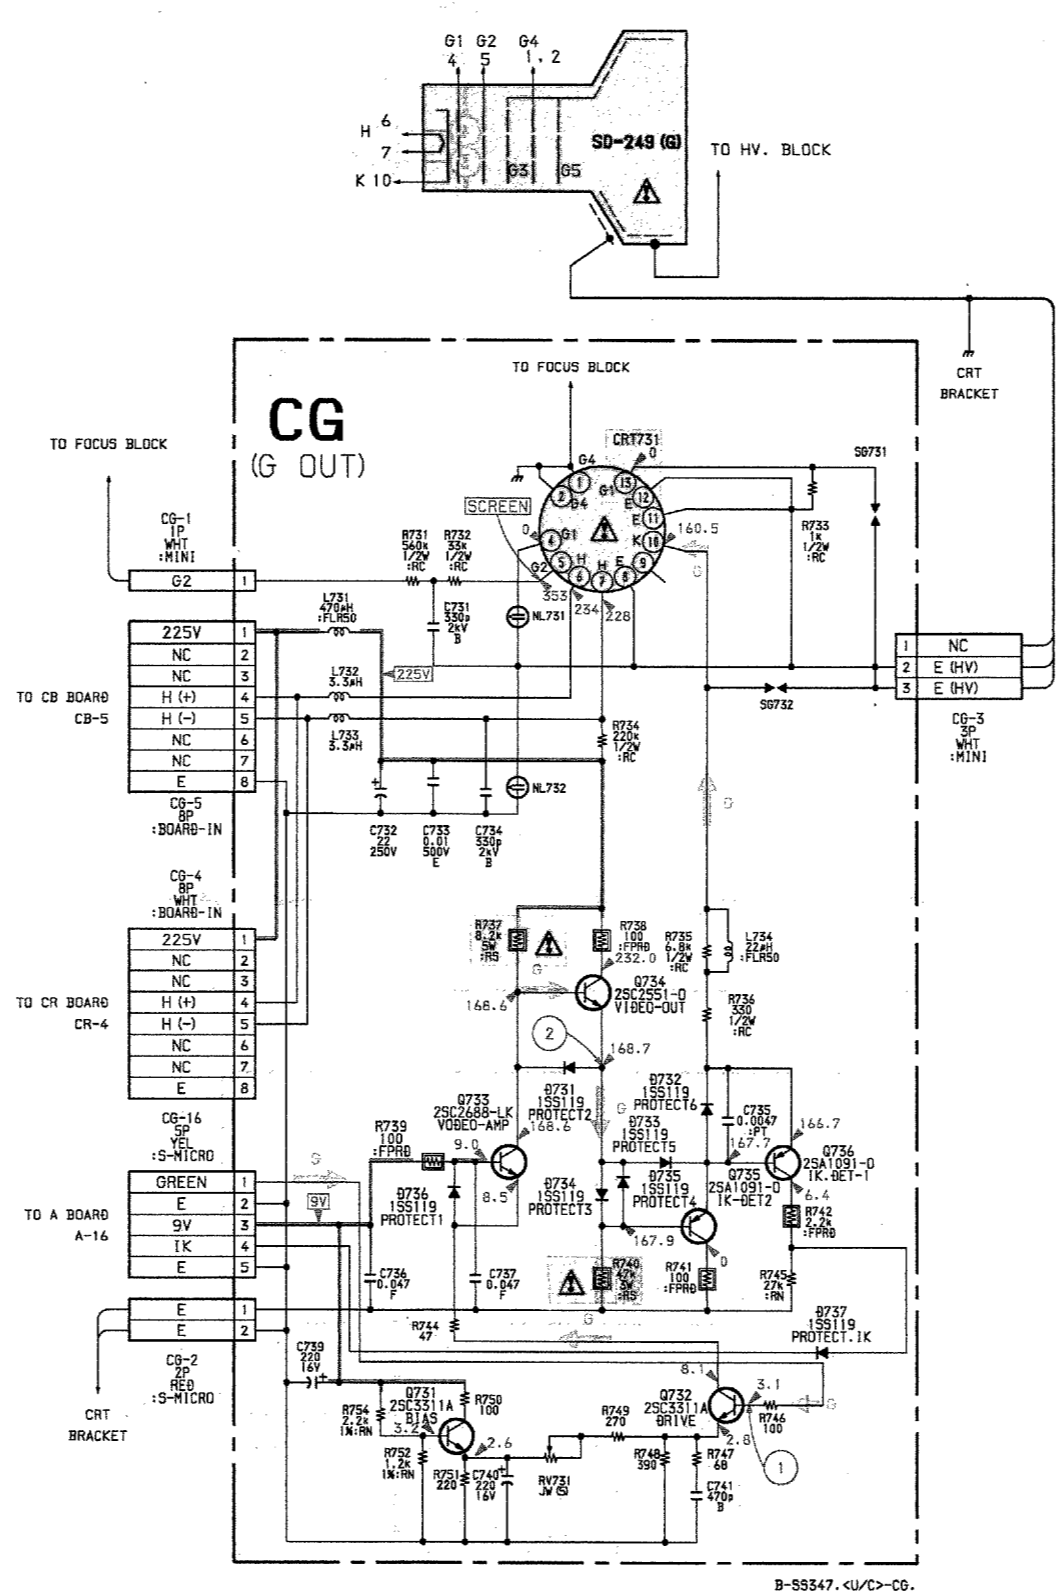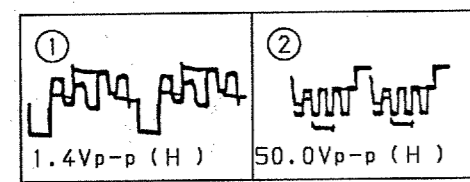

• CG BOARD WAVEFORMS

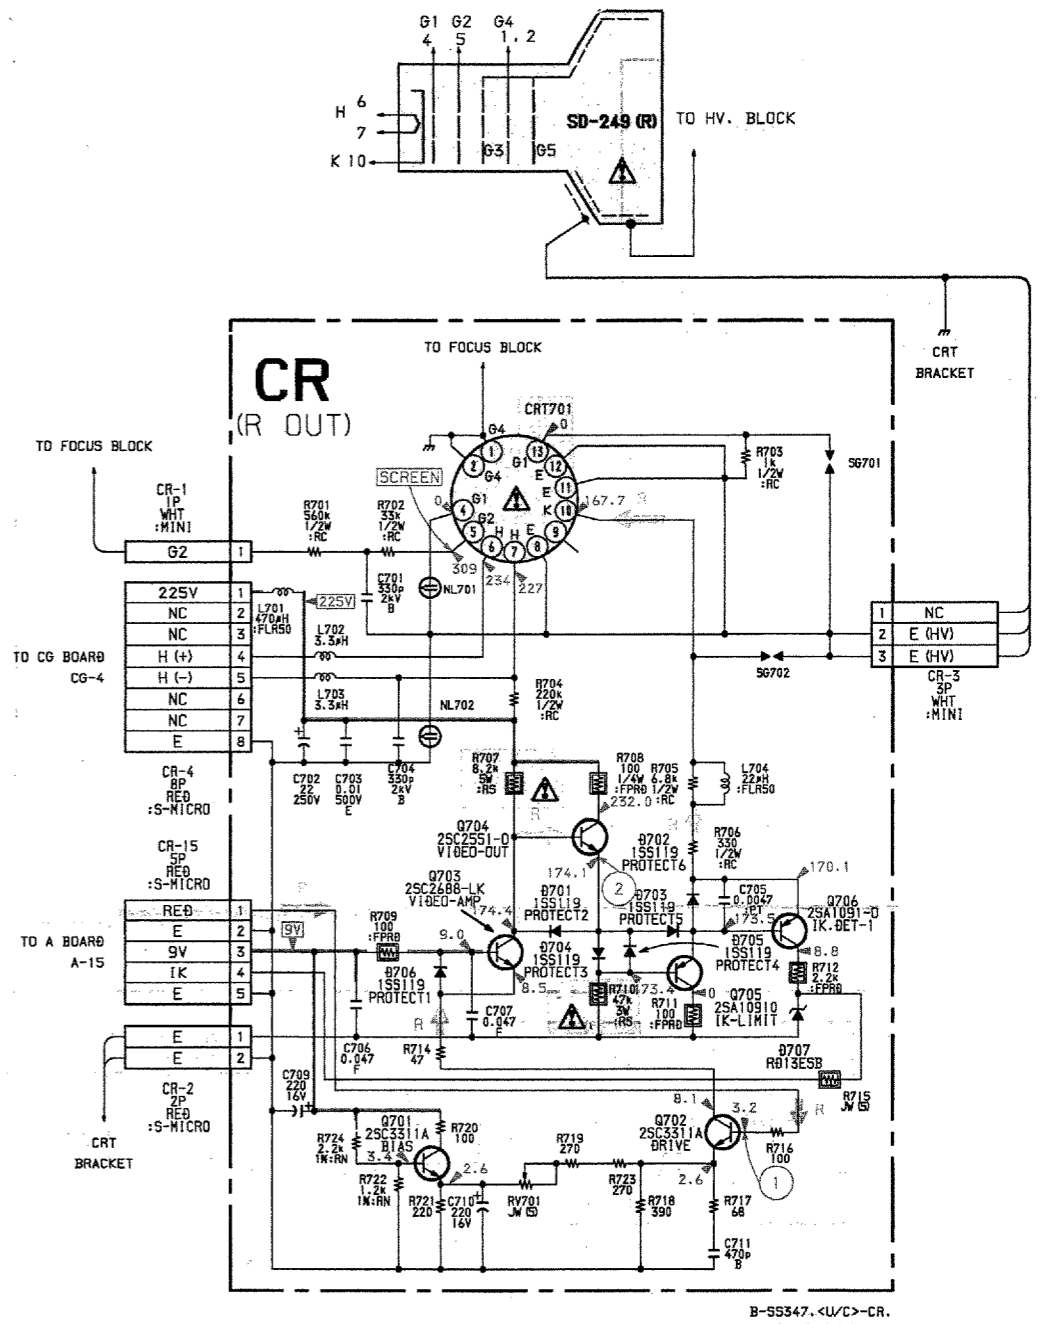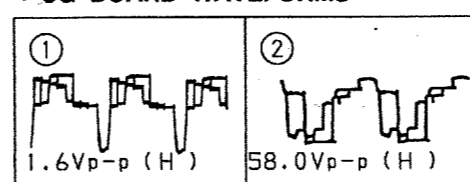

• CR BOARD WAVEFORMS

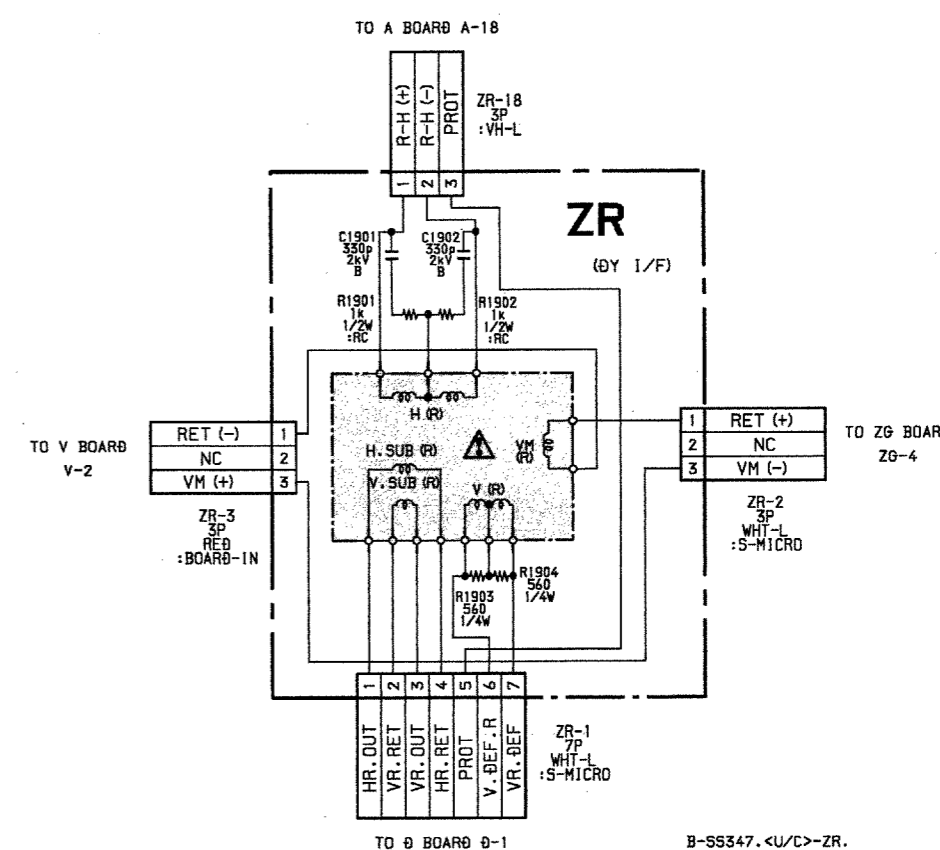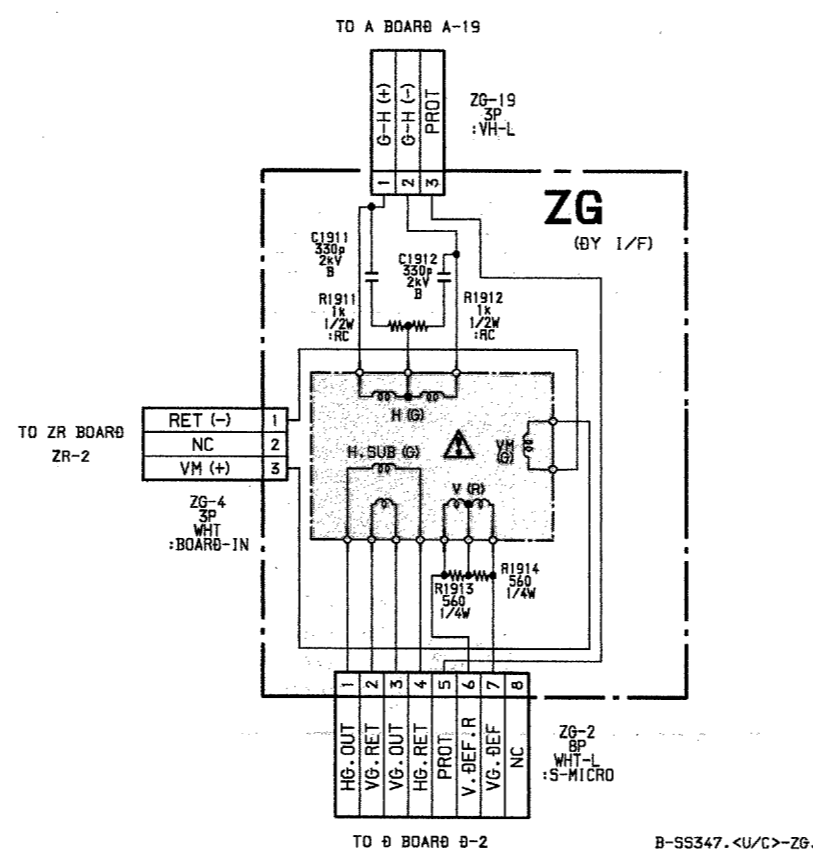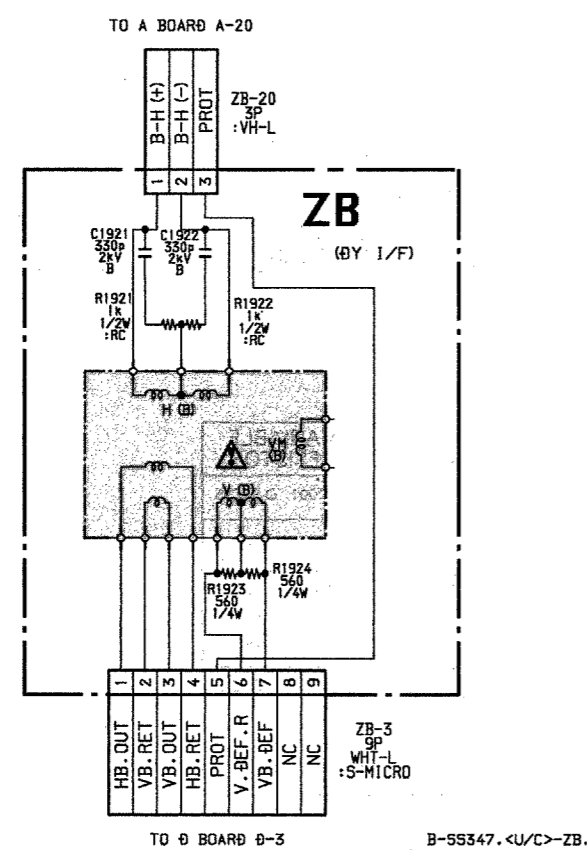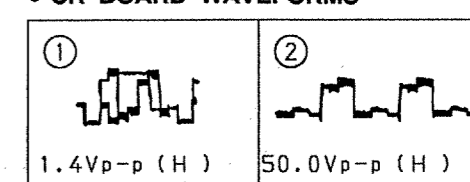

A B C D E F G H I J K L M N O P

A B C D E F G H I J K L M N O P


CB

[B OUT]


ZB

[DY I/F]

— CB Board —

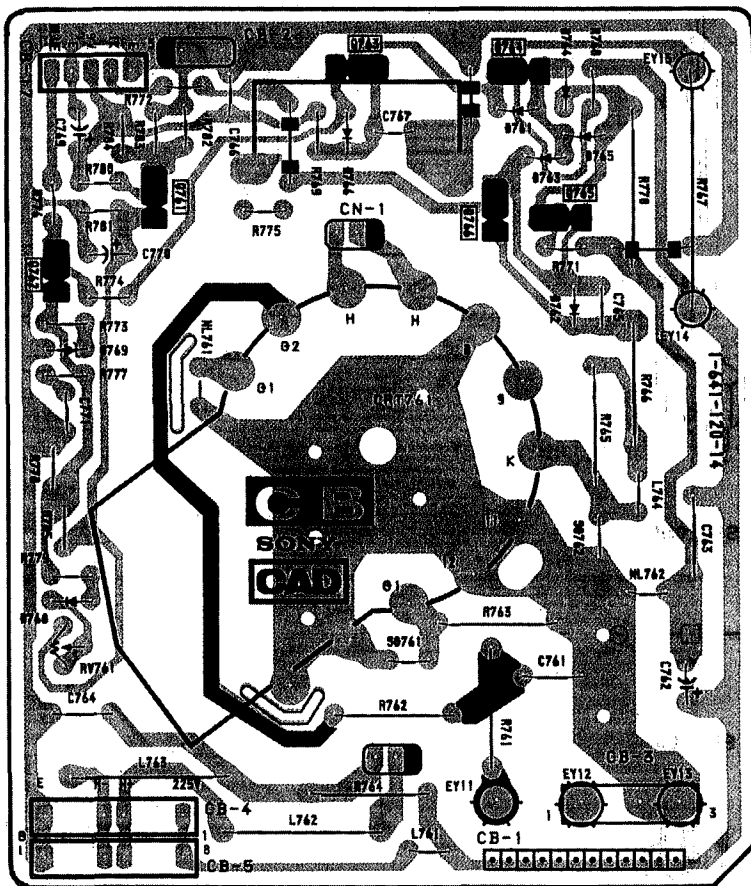


— ZB Board —

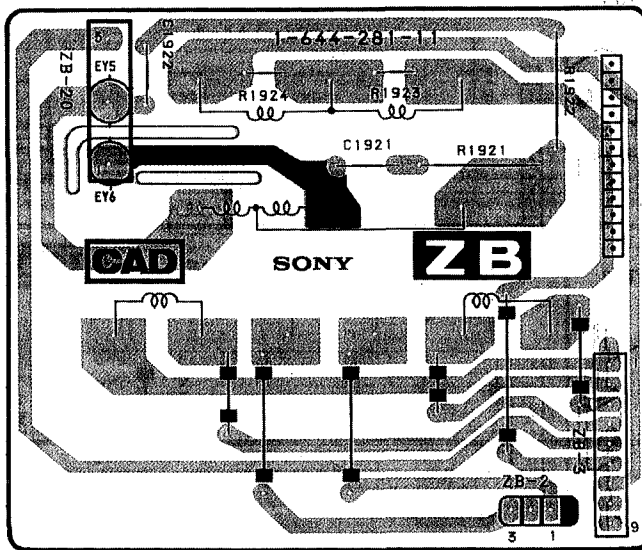


CG [G OUT] **ZG** [DY I/F]

— CG Board —

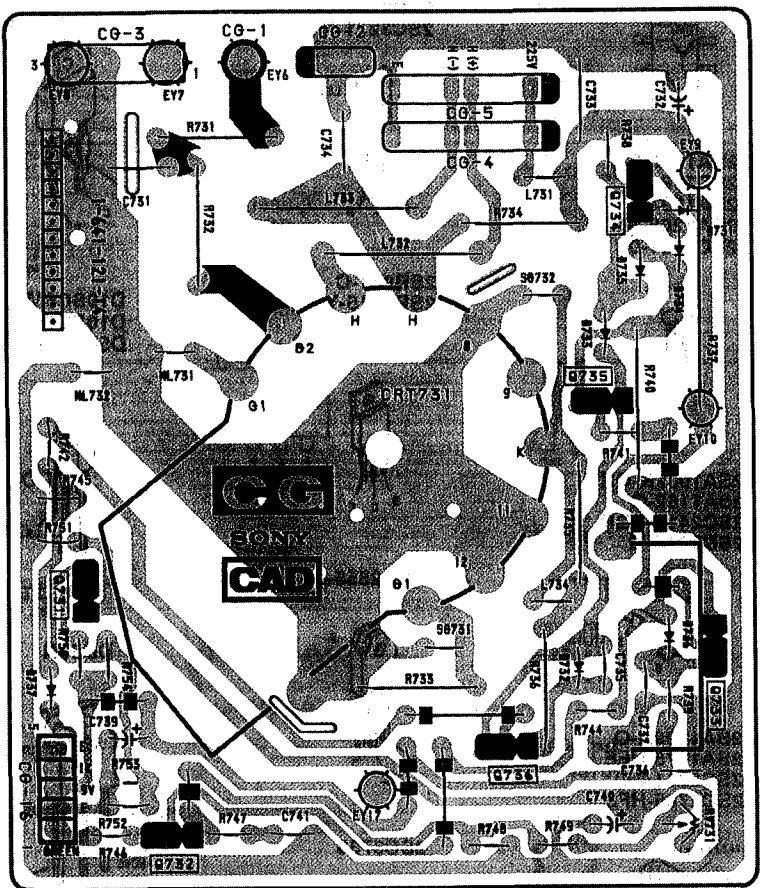


— ZG Board —

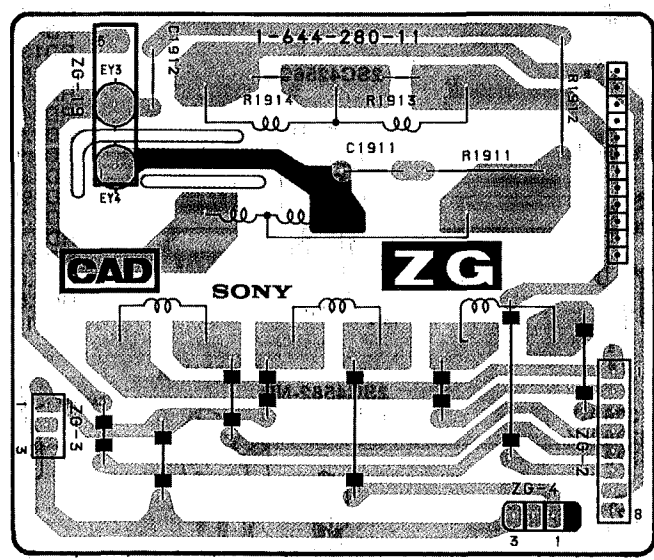


CR [R OUT] **ZR** [DY I/F]

- CR Board -

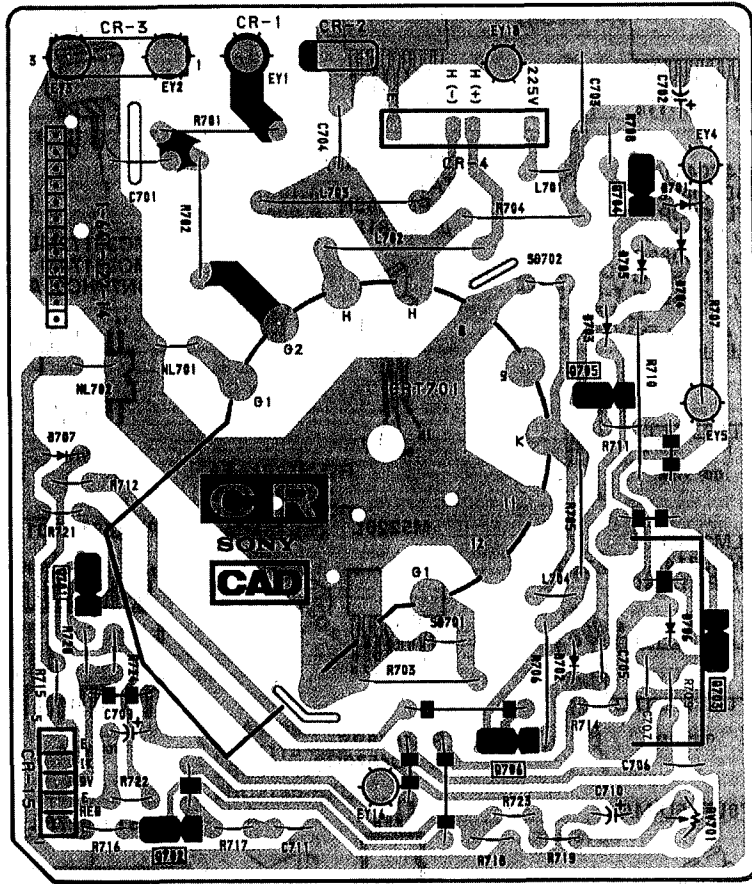


- ZR Board -

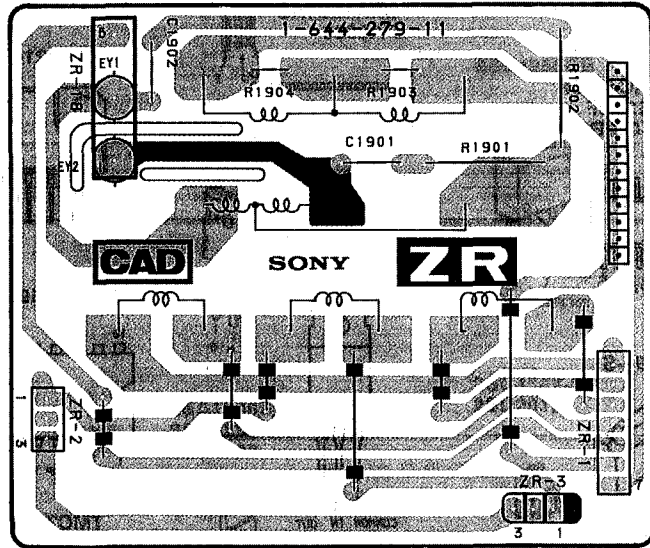


6-7. SEMICONDUCTORS


CXA1387S

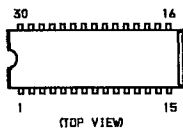


CXK1006L




NJM2903S




SI-3090CA




CXA1268P
 SDA9187X
 SDA9188X

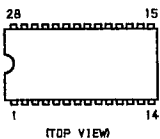


24C04AI/P
 SDA9086-3
 TL082CP
 μ PC393C
 μ PC4082C
 μ PC4557C
 μ PC4558C

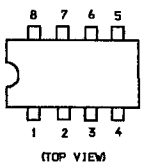


NJM78M05FA
 TA7812S
 μ PC7805H
 μ PC7812H




MC33172ML
 MC33174M
 SN74HC05ANS




CXA1315M
 CXA1315P
 μ PD4053BC

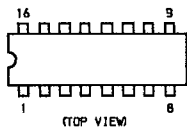


LM324N
 MB3614
 μ PC1394C

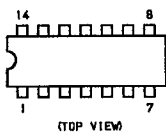


M5220L




PCA8510T/012-T

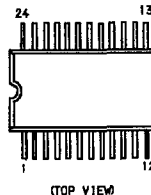

CXA1464AS

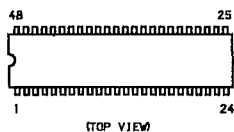


RC4558PS
 μ PC4570G2



STK-4278L




CXA1373Q
 CXA1545S

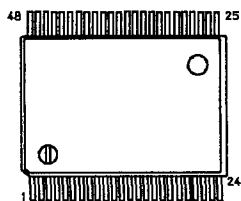


L78LR05D-MA



CXA1264AS
 PA0036




TA8216H

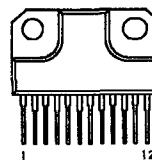


LC7458A-02




MC74HC4053F
 MC14528BF
 μ PD4052BG




NJM79M05FA
 NJM7915FA



TDA2595-V9

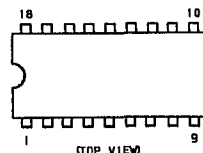


CXA1656S
 LA7945

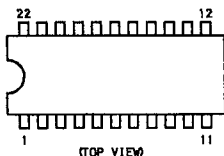


MN1280-S




M51523AL



TMC73C247-10

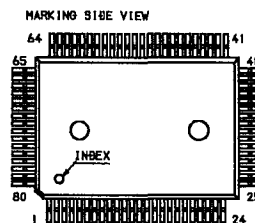


μ PC1037HA

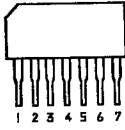


μ PC78N05H



μ PC1498H

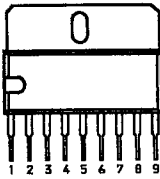

TA8184P
TDA3769

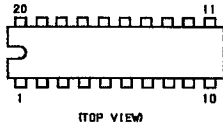



DTA124ES
DTC144ES
2SC3622A-LK



FMW1



XN4401




IMX3
IMZ1




2SA1013-0
2SD788-5
2SA1091-0
2SA1208-S
2SC2551-0



2SA1037K-QR
2SA1162-G
2SC2412K-QR
2SD601A-Q



2SA1309A-Q
2SA1175-HFE
2SC3311A-Q
2SC2785-HFE

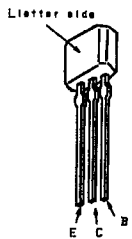


2SA1301-0



2SA1306A-Y
2SC3298A-Y
2SC4793



2SB649A-C
2SC2611
2SC2688-LK
2SC3271-N

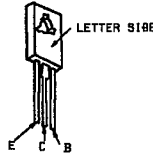

2SB861-C
2SB1015-Y
2SC3675-CB
2SD1406-YGR




2SC2555-2



2SC3733




2SC4256CB

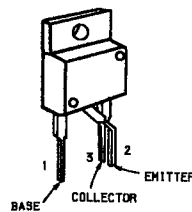

2SC4582-NP
2SD2012




2SC4891-CA
2SD1887-CA




D10SC6M
D10SC6MR
D5KC40H




DD50R

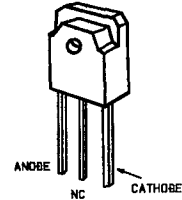

D1N20R
EGP10D
PB-100A
RD13ES-B2
RD18ES-B2
RD2.0ES-B1
RD24ES-B3
RD3.3ES-B2
RD3.9ES-B1
RD33ES-B2
RD39ES-B2
RD4.7ES-B2
RD5.1ES-B1
RD5.1ES-B2
RD5.6ES-B2
RD7.5ES-B1
1SS119

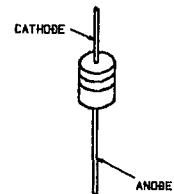


ERC06-15S
 RU-1C
 RU-2AM

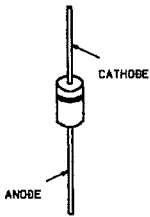


RD9.1E-W



ERC38-06
 V06C
 V09G
 V30N





S1VB40




S3V10SB


GP08D
 RD27FB2
 SB140




S5VB60




MA110
 MA3130

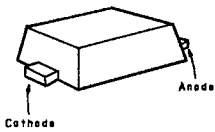


1S2836




RD15M-B1
 RD18M-B1
 RD3.3M-B1
 RD5.1M-B3




1T33



RD15S-B
 RD5.6S-B
 RD6.2S-B

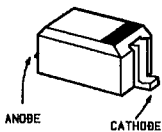

TLR124

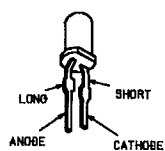

SECTION 7 EXPLODED VIEWS

NOTE:

- Items with no part number and no description are not stocked because they are seldom required for routine service.
- The construction parts of an assembled part are indicated with a collation number in the remark column.
- Items marked "★" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.


The components identified by shading and mark **▲** are critical for safety
Replace only with part number specified

Les composants identifiés par une trame et une marque **▲** sont critiques pour la sécurité
Ne les remplacer que par une pièce portant le numéro spécifié

7-1-1. SCREEN FRAME AND CONTROL PANEL (KP-46V15 (US/CND)/46V16)

●: BVTP3 × 12 7-685-648-79


□: BVTP4 × 12 7-685-661-79

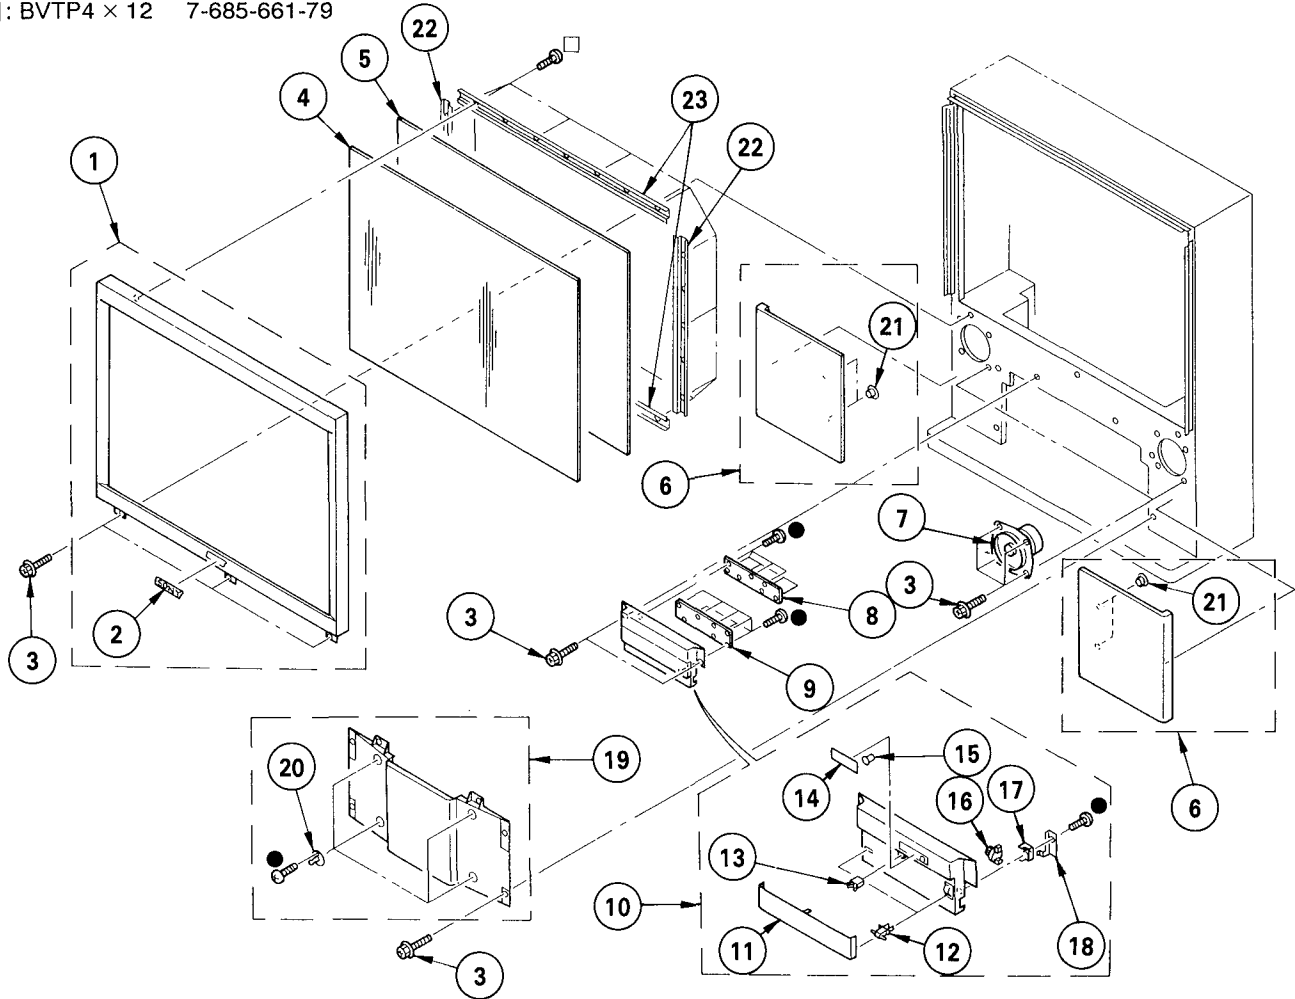

REF.NO.	PART NO.	DESCRIPTION	REMARK	REF.NO.	PART NO.	DESCRIPTION	REMARK
1	X-4030-623-1	FRAME ASSY, SCREEN	2	12	3-703-035-11	SHIRT, LID	
2	4-381-079-01	EMBLEM (NO.10), SONY		13	4-374-714-01	CATCH, PUSH	
3	4-378-522-31	SCREW, TAPPING, HEXAGON HEAD		14	4-036-510-21	PANEL, INDICATOR	
4	4-037-360-11	PLATE (L), DIFFUSION		15	*4-374-987-01	GUIDE, LIGHT	
5	4-037-359-11	PLATE (F), DIFFUSION		16	3-720-417-01	DAMPER, OIL	
6	X-4030-639-1	GRILLE ASSY, SPEAKER (KP-46V15(US/CND))	21	17	4-397-047-01	HOLDER, DAMPER	
	X-4031-106-1	GRILLE ASSY, SPEAKER (KP-46V16)	21	18	4-036-513-01	SPRING, LID	
7	1-544-768-11	SPEAKER (13CM) (COAXIAL)		19	X-4030-618-1	COVER ASSY, FRONT (KP-46V15(US/CND))	20
8	*1-643-591-11	H1 BOARD			X-4030-622-1	COVER ASSY, FRONT (KP-46V16)	20
				20	4-843-806-00	STRIKE	
9	*1-643-592-13	H2 BOARD		21	4-838-438-00	LATCH	
10	X-4031-107-1	PANEL ASSY, CONTROL (KP-46V16)	11~18	22	*4-036-092-21	HOLDER (S), SCREEN	
	X-4031-195-1	PANEL ASSY, CONTROL (KP-46V15(US/CND))	11~18	23	*4-036-091-21	HOLDER (L), SCREEN	
11	4-036-511-01	LID, CONTROL (KP-46V16)					
	4-036-511-11	LID, CONTROL (KP-46V15(US/CND))					

7-1-2. SCREEN FRAME AND CONTROL PANEL (KP-53V15/53V16/61V15 (US/CND))

●: BVTP3 × 12 7-685-648-79
 △: KTP3 × 10 7-685-247-14

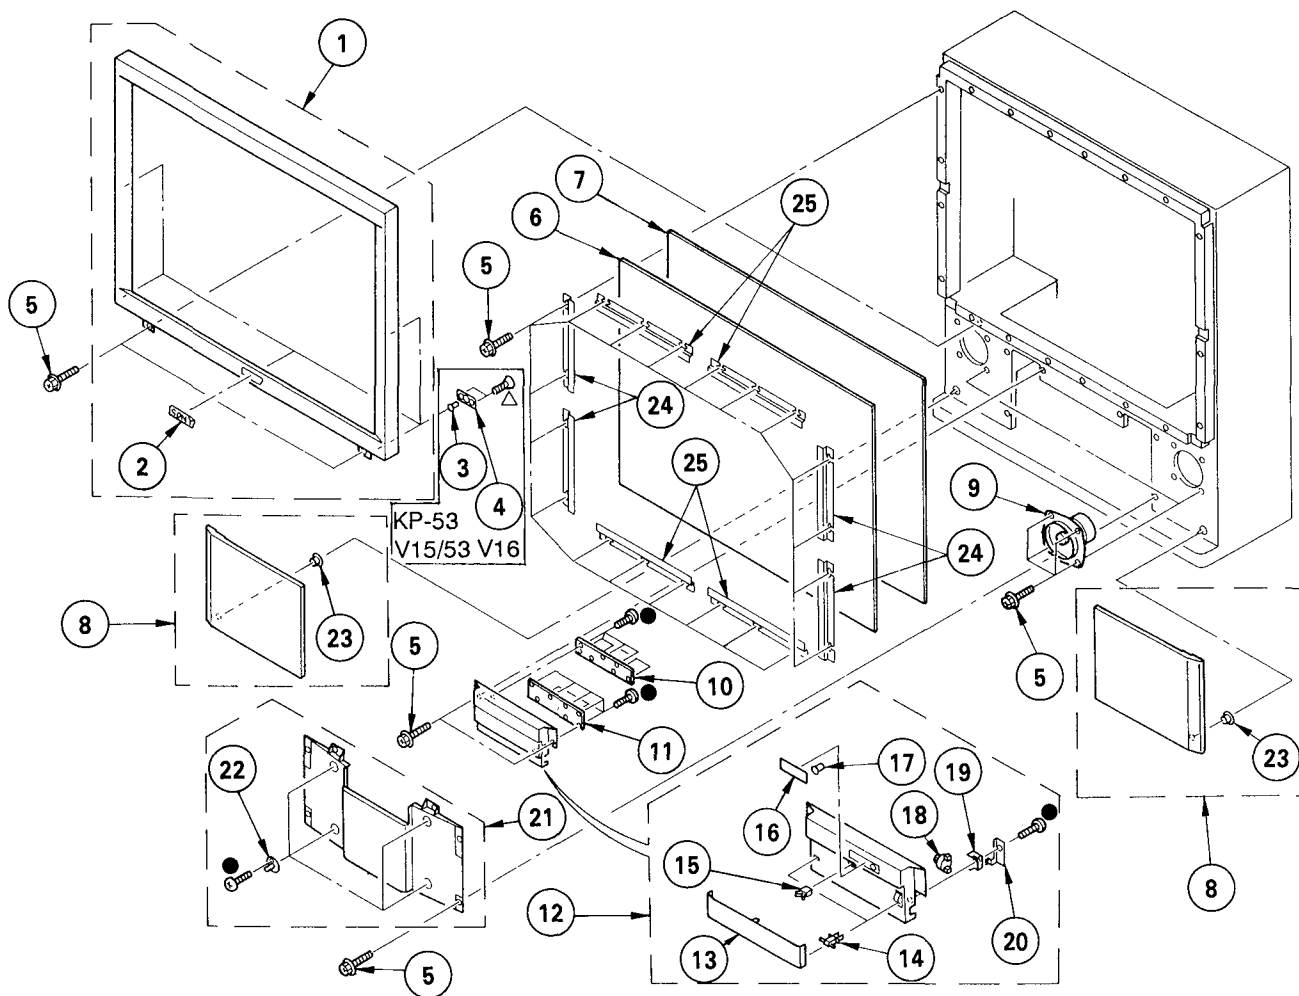


REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
1	X-4030-616-1	FRAME ASSY, SCREEN (KP-53V15/53V16)	2	13	4-036-511-01	LID, CONTROL (KP-53V16)	
	X-4031-080-1	FRAME ASSY, SCREEN (KP-61V15(US/CND))	2		4-036-511-11	LID, CONTROL (KP-53V15/61V15(US/CND))	
2	4-381-079-01	EMBLEM (NO.10), SONY (KP-61V15(US/CND))		14	3-703-035-11	SHAFT, LID	
	4-381-079-21	EMBLEM (NO.10), SONY (KP-53V15/53V16)		15	4-374-714-01	CATCH, PUSH	
3	4-838-452-00	STRIKE (KP-53V15/53V16)		16	4-036-510-21	PANEL, INDICATOR	
4	4-838-453-00	SUPPORT (KP-53V15/53V16)		17	*4-374-987-01	GUIDE, LIGHT	
5	4-378-522-31	SCREW, TAPPING, HEXAGON HEAD		18	3-720-417-01	DAMPER, OIL	
6	4-036-466-11	PLATE (L), DIFFUSION (KP-53V15/53V16)		19	4-397-047-01	HOLDER, DAMPER	
	4-040-124-11	PLATE (L), DIFFUSION (KP-61V15(US/CND))		20	4-036-513-01	SPRING, LID	
7	4-036-469-11	PLATE (R), DIFFUSION (KP-53V15/53V16)		21	X-4030-615-1	COVER ASSY, FRONT (KP-53V16)	22
	4-040-123-11	PLATE (R), DIFFUSION (KP-61V15(US/CND))			X-4030-619-1	COVER ASSY, FRONT (KP-53V15/61V15(US/CND))	22
8	X-4030-637-1	GRILLE ASSY, SPEAKER (KP-53V15)	23	22	4-843-806-00	STRIKE	
	X-4031-079-1	GRILLE ASSY, SPEAKER (KP-61V15(US/CND))	23	23	4-838-438-00	LATCH	
	X-4031-144-1	GRILLE ASSY, SPEAKER (KP-53V16)	23	24	*4-036-499-01	HOLDER (S), SCREEN (KP-53V15/53V16)	
9	1-544-768-11	SPEAKER (13CM) (COAXIAL)			*4-040-122-01	HOLDER (S), SCREEN (KP-61V15(US/CND))	
10	*1-643-591-11	H1 BOARD		25	*4-036-498-01	HOLDER (L), SCREEN (KP-53V15/53V16)	
11	*1-643-592-11	H2 BOARD			*4-040-120-01	HOLDER (L), SCREEN (KP-61V15(US/CND))	
12	X-4031-107-1	PANEL ASSY, CONTROL (KP-53V16)	13~20				
	X-4031-195-1	PANEL ASSY, CONTROL (KP-53V15)	13~20				
	X-4031-267-1	PANEL ASSY, CONTROL (KP-61V15(US/CND))	13~20				

7-2. CABINET

□: BVTP4 × 12 7-685-661-79

■: BVTP4 × 16 7-685-663-79

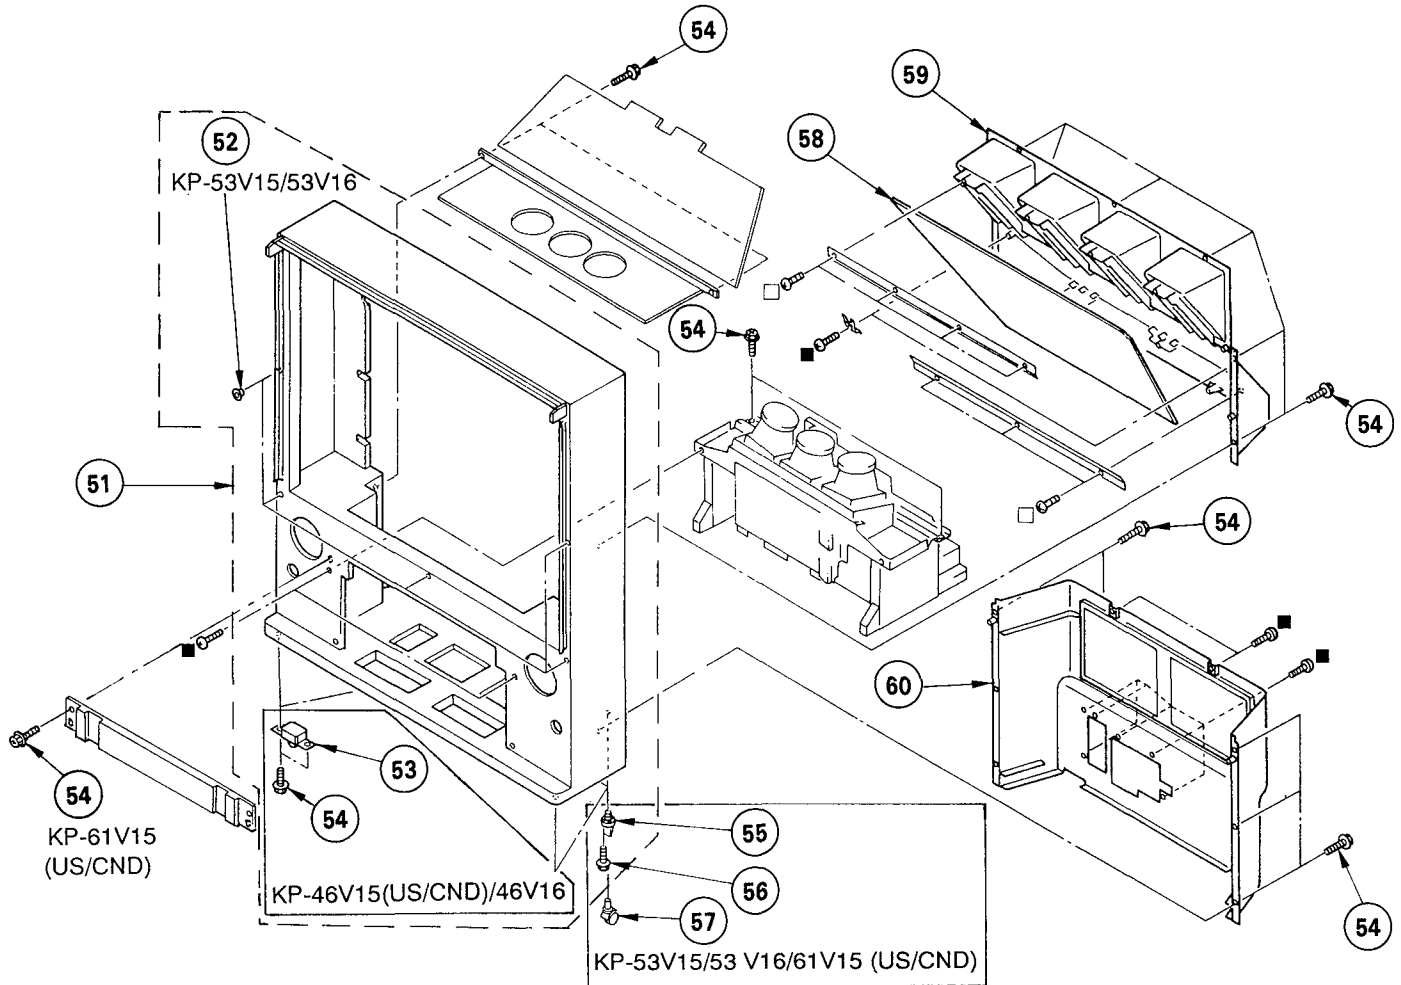


REF.NO.	PART NO.	DESCRIPTION	REMARK	REF.NO.	PART NO.	DESCRIPTION	REMARK
51	*X-4031-081-1	CABINET ASSY (KP-61V15(US/CND))	55, 56	57	4-040-508-01	CASTER (KP-61V15(US/CND))	
	*X-4031-105-1	CABINET ASSY (KP-46V16)	53, 54		4-032-343-11	CASTER (KP-53V15/53V16)	
	*X-4031-109-1	CABINET ASSY (KP-46V15(US/CND))	53, 54	58	4-037-349-01	MIRROR (53), REFLECTION (KP-53V15/53V16/61V15(US/CND))	
	*X-4031-118-1	CABINET ASSY (KP-53V16)	52, 55, 56		4-037-534-01	MIRROR (46), REFLECTION (KP-46V15(US/CND)/46V16)	
	*X-4030-636-1	CABINET ASSY (KP-53V15)	52, 55, 56	59	4-036-462-01	COVER (46"), MIRROR (KP-46V15(US/CND)/46V16)	
52	4-838-438-00	LATCH (KP-53V15/53V16)			4-036-474-01	COVER (53"), MIRROR (KP-53V15/53V16/61V15(US/CND))	
53	4-040-755-01	CASTER (DIA. 30) (KP-46V15(US/CND)/46V16)		60	X-4030-549-1	COVER ASSY, BACK	
54	4-378-522-31	SCREW, TAPPING, HEXAGON HEAD					
55	4-030-850-01	SOCKET, CASTER (KP-53V15/53V16/61V15(US/CND))					
56	4-378-522-01	SCREW, TAPPING, HEXAGON HEAD (KP-61V15(US/CND))					

Les composants identifiés par une trame et une marque Δ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

The components identified by shading and mark Δ are critical for safety. Replace only with part number specified.

7-3. CHASSIS


- : BVTP3 × 12 7-685-648-79
- : BVTP4 × 12 7-685-661-79
- : BVTP4 × 16 7-685-663-79
- : PSW4 × 14 7-682-663-09

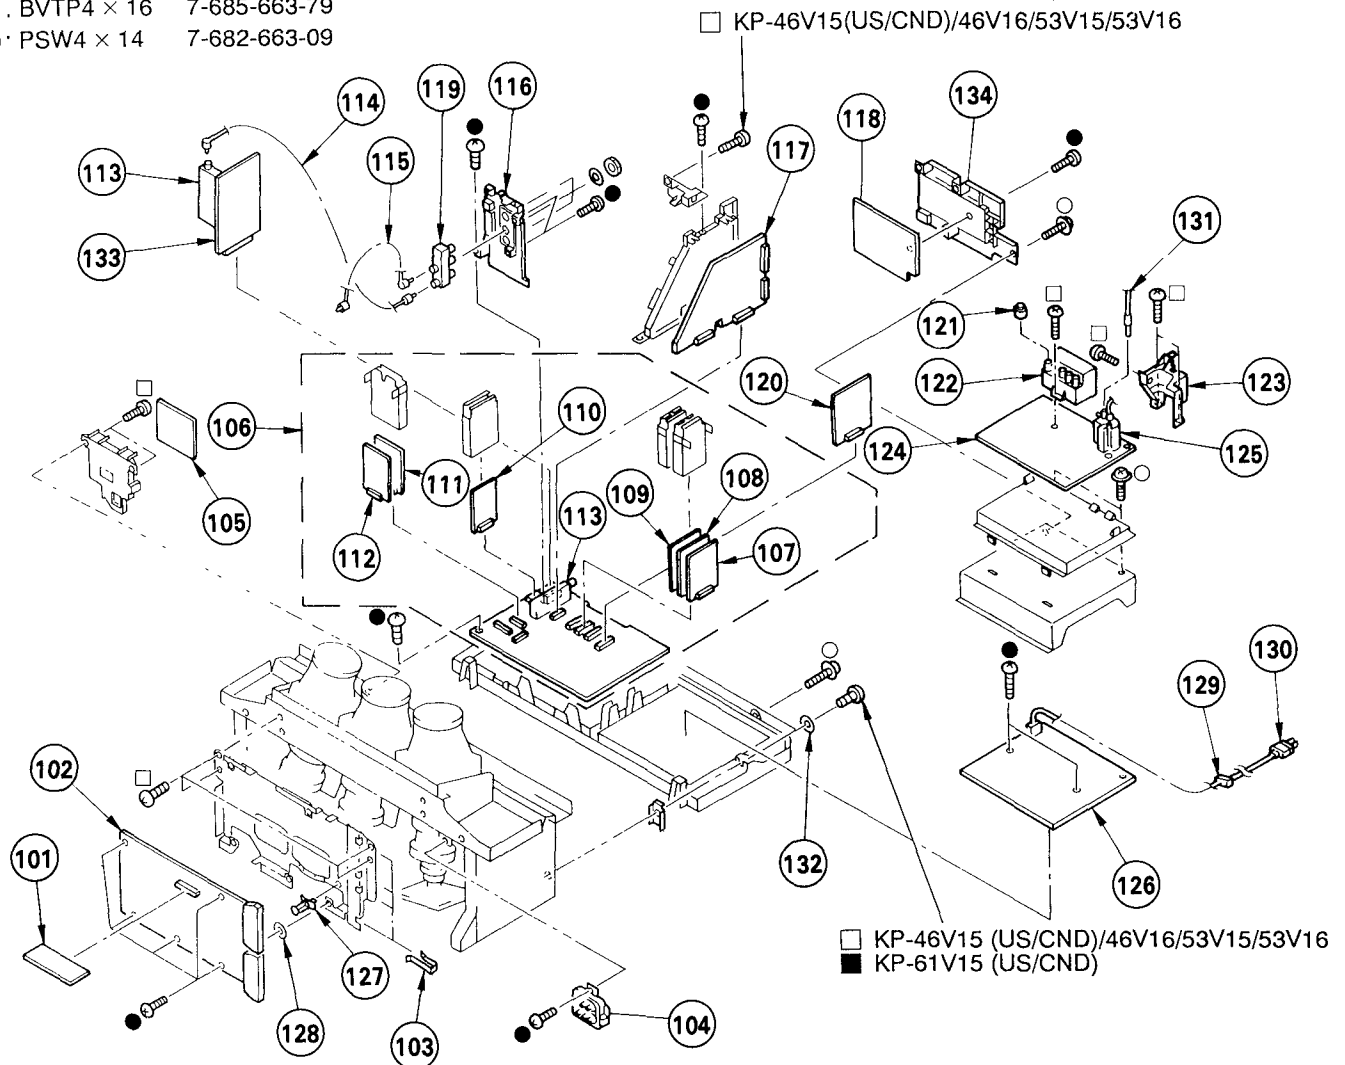

REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
101	*1-644-278-11	DS BOARD		118	*A-1394-432-A	UT BOARD, COMPLETE	
102	*A-1346-117-A	D BOARD, COMPLETE		119	1-417-178-11	SELECTOR, ANTENNA (AS-2)	
103	*4-393-401-11	SPRING, TRANSISTOR		120	*A-1342-214-A	V BOARD, COMPLETE	
104	*1-241-744-11	RESISTOR ASSY (HIGH-VOLTAGE)		121	4-373-137-01	CAP (Z), RUBBER	
105	*A-1394-421-A	S BOARD, COMPLETE		122	Δ 1-453-168-11	DC BLOCK, HIGH-VOLTAGE	
106	*A-1297-078-A	A BOARD, COMPLETE	107~112	123	4-034-482-01	COVER, FBT	
	*A-1297-108-A	A BOARD, COMPLETE (KP-53V15/53V16)		124	*A-1390-351-A	N BOARD, COMPLETE	
107	*A-1346-138-A	E1 BOARD, COMPLETE	107~112	125	*1-453-121-11	TRANSFORMER ASSY FLYBACK (BX-263084)	
108	*A-1346-137-A	E2 BOARD, COMPLETE		126	*A-1316-149-A	G BOARD, COMPLETE	
109	*A-1306-436-A	M BOARD, COMPLETE		127	*3-670-570-21	SPACER, SUPPORT	
110	*A-1195-066-A	P1 BOARD, COMPLETE		128	4-866-147-00	WASHER	
111	*A-1394-444-A	X2 BOARD, COMPLETE		129	4-388-328-11	GROMMET, AC CORD	
112	*A-1394-443-A	Y2 BOARD, COMPLETE		130	*1-696-882-12	CORD, POWER (WITH NOISE FILTER)	
113	*1-693-102-22	TUNER (BT? X4401)		131	1-574-590-31	LEAD ASSY, HIGH-VOLTAGE	
114	*1-557-056-31	CABLE, P-P		132	4-039-112-01	WASHER, WAVE	
115	*1-555-400-00	CABLE, PIN		133	*A-1195-068-A	P3 BOARD, COMPLETE	
116	4-036-137-03	PANEL, SUB CONNECTOR		134	4-036-138-01	PANEL, MAIN CONNECTOR	
117	*A-1394-420-A	U BOARD, COMPLETE					

7-4. PICTURE TUBE

■: BVTP4 × 16 7-685-663-79

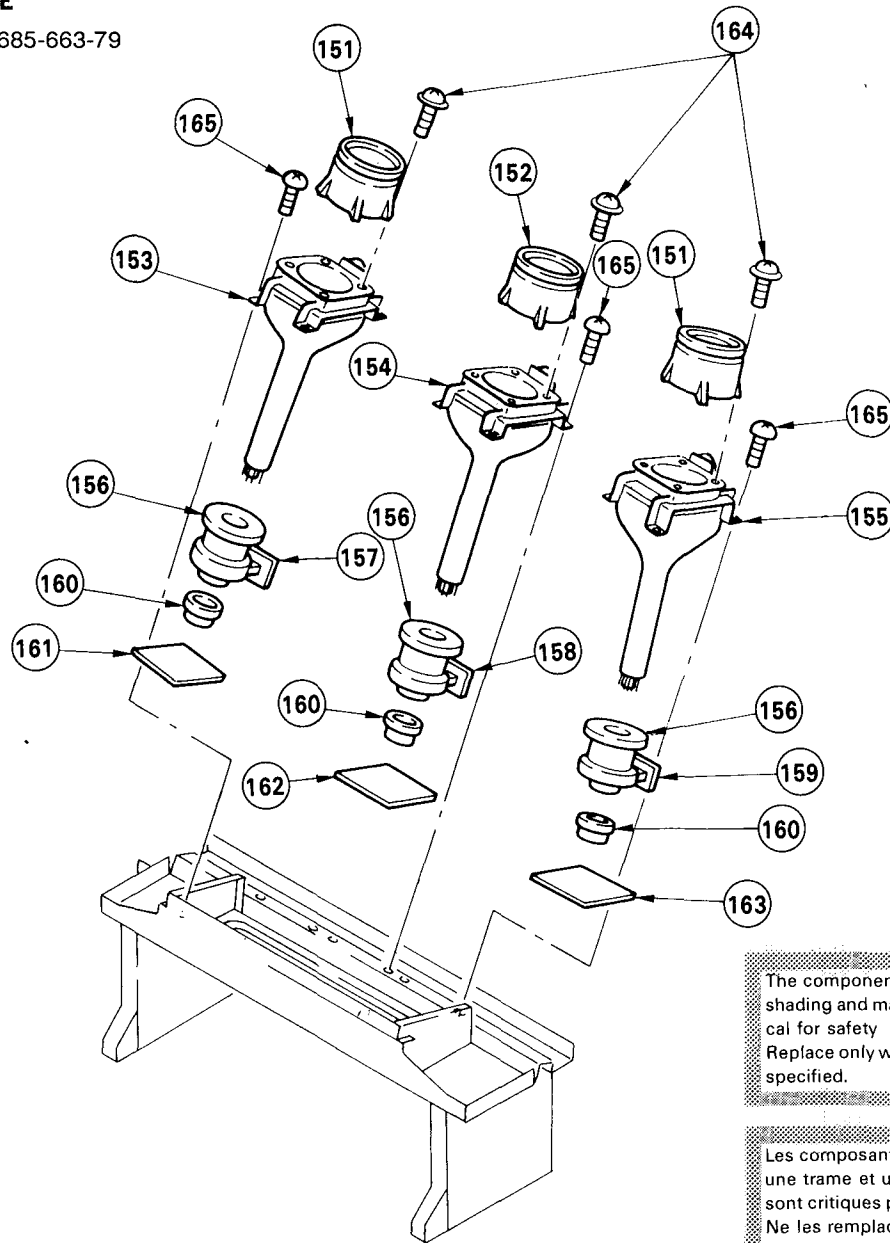

The components identified by shading and mark ▲ are critical for safety. Replace only with part number specified.

Les composants identifiés par une trame et une marque ▲ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

REF.NO.	PART NO.	DESCRIPTION	REMARK	REF.NO.	PART NO.	DESCRIPTION	REMARK
151	4-034-057-01	LENS (LINNIT) (KP-46V15(US/CND)/46V16/53V15/53V16)		155	▲ 8-736-633-05	PICTURE TUBE 07MK(2) (SD-249) (KP-46V15(US/CND)/46V16/53V15/53V16)	
	4-040-131-01	LENS (LINNIT POINT 6) (KP-61V15(US/CND))			▲ 8-736-640-05	PICTURE TUBE 07MK2(R) (SD-249) (KP-61V15(US/CND))	
152	4-034-057-11	LENS (LINNIT) (KP-46V15(US/CND)/46V16/53V15/53V16)		156	▲ 1-451-396-21	DEFLECTION YOKE (Y936PA)	
	4-040-131-11	LENS (LINNIT POINT 6) (KP-61V15(US/CND))		157	*A-1390-340-A	ZR BOARD, COMPLETE	
153	▲ 8-736-633-05	PICTURE TUBE 07MK(R) (SD-249) (KP-46V15(US/CND)/46V16/53V15/53V16)		158	*A-1390-346-A	ZG BOARD, COMPLETE	
	▲ 8-736-641-05	PICTURE TUBE 07MK2(R) (SD-249) (KP-61V15(US/CND))		159	*A-1390-347-A	ZB BOARD, COMPLETE	
154	▲ 8-736-631-05	PICTURE TUBE 07MK(G) (SD-249) (KP-46V15(US/CND)/46V16/53V15/53V16)		160	▲ 1-452-443-13	NECK ASSY, PICTURE TUBE (NA367)	
	▲ 8-736-634-05	PICTURE TUBE 07MK3(G) (SD-249) (KP-61V15(US/CND))		161	*A-1331-259-A	CR BOARD, COMPLETE	
				162	*A-1331-260-A	CG BOARD, COMPLETE	
				163	*A-1331-261-A	CB BOARD, COMPLETE	
				164	3-701-810-91	SCREW, TERMINAL	
				165	7-685-661-79	SCREW (DIA. 4X12), TAPPING	

SECTION 8 ELECTRICAL PARTS LIST

NOTE:

The components identified by shading and mark Δ are critical for safety
 Replace only with part number specified

Les composants identifiés par une trame et une marque Δ sont critiques pour la sécurité
 Ne les remplacer que par une pièce portant le numéro spécifié.

• Items marked " * " are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

• All variable and adjustable resistors have characteristic curve B, unless otherwise noted.

RESISTORS

• All resistors are in ohms
 • F : nonflammable

When indicating parts by reference number, please include the board name.

CAPACITORS

• MF : μ F, PF : μ PF

COILS

• MMH : mH, UH : μ H

• The components identified by \boxtimes in this manual have been carefully factory-selected for each set in order to satisfy regulations regarding X-ray radiation
 Should replacement be required, replace only with the value originally used

REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
*A-1195-068-A		P3 BOARD, COMPLETE *****		IC2003	8-759-805-37	IC L78LR05D-MA	
				IC2004	8-759-066-51	IC MB88733-143	
				IC2005	8-759-803-25	IC CXK1006L	
		<CAPACITOR>				<JACK>	
C2001	1-124-910-11	ELECT 47MF	20% 50V	J2001	*1-573-962-11	CONNECTOR (MALE) 50P	
C2002	1-124-910-11	ELECT 47MF	20% 50V			<COIL>	
C2003	1-124-119-00	ELECT 330MF	20% 16V	L2002	1-410-663-31	INDUCTOR 10UH	
C2004	1-164-232-11	CERAMIC CHIP 0.01MF	10% 50V	L2003	1-410-667-31	INDUCTOR 22UH	
C2005	1-124-261-00	ELECT 10MF	20% 50V			<CONNECTOR>	
C2006	1-164-232-11	CERAMIC CHIP 0.01MF	10% 50V	P3-39	*1-564-521-11	PLUG, CONNECTOR 6P	
C2007	1-126-157-11	ELECT 10MF	20% 16V	P3-41	*1-564-519-11	PLUG, CONNECTOR 4P	
C2008	1-163-031-11	CERAMIC CHIP 0.01MF	5% 50V			<TRANSISTOR>	
C2009	1-163-157-00	FILM 0.022MF	5% 50V	Q2001	8-729-216-22	TRANSISTOR 2SA1162-G	
C2010	1-164-161-11	CERAMIC CHIP 0.0022MF	50V	Q2002	8-729-422-27	TRANSISTOR 2SD601A-Q	
C2011	1-126-157-11	ELECT 10MF	20% 16V	Q2003	8-729-422-27	TRANSISTOR 2SD601A-Q	
C2013	1-126-301-11	ELECT 1MF	20% 50V	Q2004	8-729-216-22	TRANSISTOR 2SA1162-G	
C2014	1-164-161-11	CERAMIC CHIP 0.0022MF	10% 50V	Q2005	8-729-422-27	TRANSISTOR 2SD601A-Q	
C2015	1-163-117-00	CERAMIC CHIP 100PF	5% 50V	Q2006	8-729-422-27	TRANSISTOR 2SD601A-Q	
C2016	1-163-109-00	CERAMIC CHIP 47PF	5% 50V	Q2007	8-729-216-22	TRANSISTOR 2SA1162-G	
C2017	1-163-109-00	CERAMIC CHIP 47PF	5% 50V	Q2008	8-729-901-81	TRANSISTOR 2SC2412K-T-146-R	
C2018	1-124-465-00	ELECT 0.47MF	20% 50V	Q2009	8-729-216-22	TRANSISTOR 2SA1162-G	
C2019	1-126-103-11	ELECT 470MF	20% 16V	Q2010	8-729-422-27	TRANSISTOR 2SD601A-Q	
C2020	1-163-031-11	CERAMIC CHIP 0.01MF	50V	Q2011	8-729-216-22	TRANSISTOR 2SA1162-G	
C2021	1-126-157-11	ELECT 10MF	20% 16V	Q2012	8-729-216-22	TRANSISTOR 2SA1162-G	
C2022	1-164-232-11	CERAMIC CHIP 0.01MF	10% 50V	Q2030	8-729-216-22	TRANSISTOR 2SA1162-G	
C2023	1-163-119-00	CERAMIC CHIP 120PF	5% 50V	Q2031	8-729-216-22	TRANSISTOR 2SA1162-G	
C2024	1-124-465-00	ELECT 0.47MF	20% 50V	Q2036	8-729-422-27	TRANSISTOR 2SD601A-Q	
C2025	1-126-157-11	ELECT 10MF	20% 16V	Q2037	8-729-422-27	TRANSISTOR 2SD601A-Q	
C2027	1-163-103-00	CERAMIC CHIP 27PF	5% 50V			<RESISTOR>	
C2028	1-163-107-00	CERAMIC CHIP 39PF	5% 50V	R2002	*1-216-357-91	METAL OXIDE 4.7 5% 1/10W	
C2064	1-164-161-11	CERAMIC CHIP 0.0022MF	10% 50V	R2003	1-216-061-00	METAL GLAZE 3.3K 5% 1/10W	
C2065	1-126-320-11	ELECT 10MF	20% 16V	R2004	1-216-049-00	METAL GLAZE 1K 5% 1/10W	
C2066	1-126-157-11	ELECT 10MF	20% 16V	R2006	1-216-689-11	METAL GLAZE 39K 5% 1/10W	
C2067	1-126-157-11	ELECT 10MF	20% 16V	R2007	1-216-063-00	METAL GLAZE 3.9K 5% 1/10W	
C2068	1-124-916-11	ELECT 22MF	20% 50V	R2008	1-216-081-00	METAL GLAZE 22K 5% 1/10W	
C2075	1-163-117-00	CERAMIC CHIP 100PF	5% 50V	R2009	1-216-081-00	METAL GLAZE 22K 5% 1/10W	
		<COMPOSITION CIRCUIT BLOCK>		R2010	1-216-065-00	METAL GLAZE 4.7K 5% 1/10W	
CP2001	1-236-472-11	NETWORK, RES, THICK FILM		R2011	1-216-079-00	METAL GLAZE 18K 5% 1/10W	
		<DIODE>		R2012	1-216-089-00	METAL GLAZE 47K 5% 1/10W	
D2006	8-719-105-45	DIODE RD3.3M-B1		R2013	1-216-079-00	METAL GLAZE 18K 5% 1/10W	
D2007	8-719-911-19	DIODE 1SS119		R2014	1-216-089-00	METAL GLAZE 47K 5% 1/10W	
		<IC>					
IC2001	8-759-231-58	IC TA7812S					
IC2002	8-759-700-48	IC NJM2903S					

The components identified by shading and mark Δ are critical for safety
Replace only with part number specified

Les composants identifiés par une trame et une marque Δ sont critiques pour la sécurité
Ne les remplacer que par une pièce portant le numéro spécifique.

KP-46V15/46V16
KP-53V15/53V16/61V15
RM-Y115

P₃

A

REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
R2015	1-216-033-00	METAL GLAZE	220 5%	1/10W			
R2016	1-216-295-00	METAL GLAZE	0 5%	1/10W			
R2017	1-216-047-00	METAL GLAZE	820 5%	1/10W			
R2018	1-216-049-00	METAL GLAZE	1K 5%	1/10W			
R2019	1-216-049-00	METAL GLAZE	1K 5%	1/10W			
R2020	1-216-037-00	METAL GLAZE	330 5%	1/10W			
R2021	1-216-095-00	METAL GLAZE	82K 5%	1/10W			
R2022	1-216-109-00	METAL GLAZE	330K 5%	1/10W			
R2023	1-216-073-00	METAL GLAZE	10K 5%	1/10W			
R2024	1-216-047-00	METAL GLAZE	820 5%	1/10W			
R2025	1-216-057-00	METAL GLAZE	2.2K 5%	1/10W			
R2026	1-216-057-00	METAL GLAZE	2.2K 5%	1/10W			
R2027	1-216-033-00	METAL GLAZE	220 5%	1/10W			
R2028	1-216-073-00	METAL GLAZE	10K 5%	1/10W			
R2029	1-216-033-00	METAL GLAZE	220 5%	1/10W			
R2030	1-216-009-00	METAL GLAZE	22 5%	1/10W			
R2031	1-216-057-00	METAL GLAZE	2.2K 5%	1/10W			
R2032	1-216-033-00	METAL GLAZE	220 5%	1/10W			
R2033	1-216-033-00	METAL GLAZE	220 5%	1/10W			
R2037	1-216-065-00	METAL GLAZE	4.7K 5%	1/10W			
R2038	1-216-025-00	METAL GLAZE	100 5%	1/10W			
R2039	1-216-097-00	METAL GLAZE	100K 5%	1/10W			
R2040	1-216-073-00	METAL GLAZE	10K 5%	1/10W			
R2041	1-216-073-00	METAL GLAZE	10K 5%	1/10W			
R2046	1-216-073-00	METAL GLAZE	10K 5%	1/10W			
R2047	1-216-049-00	METAL GLAZE	1K 5%	1/10W			
R2048	1-216-073-00	METAL GLAZE	10K 5%	1/10W			
R2049	1-216-065-00	METAL GLAZE	4.7K 5%	1/10W			
R2050	1-216-063-00	METAL GLAZE	3.9K 5%	1/10W			
R2051	1-216-049-00	METAL GLAZE	1K 5%	1/10W			
R2052	1-216-057-00	METAL GLAZE	2.2K 5%	1/10W			
R2053	1-216-081-00	METAL GLAZE	22K 5%	1/10W			
R2054	1-216-081-00	METAL GLAZE	22K 5%	1/10W			
R2055	1-216-081-00	METAL GLAZE	22K 5%	1/10W			
R2056	1-216-295-00	METAL GLAZE	0 5%	1/10W			
R2057	1-216-081-00	METAL GLAZE	22K 5%	1/10W			
R2058	1-216-081-00	METAL GLAZE	22K 5%	1/10W			
R2059	1-216-081-00	METAL GLAZE	22K 5%	1/10W			
R2060	1-216-081-00	METAL GLAZE	22K 5%	1/10W			
R2061	1-216-081-00	METAL GLAZE	22K 5%	1/10W			
R2062	1-216-295-00	METAL GLAZE	0 5%	1/10W			
R2063	1-216-025-00	METAL GLAZE	100 5%	1/10W			
R2064	1-216-025-00	METAL GLAZE	100 5%	1/10W			
R2093	1-216-097-00	METAL GLAZE	100K 5%	1/10W			
R2124	1-216-049-00	METAL GLAZE	1K 5%	1/10W			
R2125	1-216-089-00	METAL GLAZE	47K 5%	1/10W			
R2127	1-216-071-00	METAL GLAZE	8.2K 5%	1/10W			
R2128	1-216-069-00	METAL GLAZE	6.8K 5%	1/10W			
R2129	1-216-055-00	METAL GLAZE	1.8K 5%	1/10W			
R2130	1-216-067-00	METAL GLAZE	5.6K 5%	1/10W			
R2131	1-216-067-00	METAL GLAZE	5.6K 5%	1/10W			
R2132	1-216-676-11	METAL CHIP	11K 0.50%	1/10W			
R2147	1-216-065-00	METAL GLAZE	4.7K 5%	1/10W			
R2148	1-216-081-00	METAL GLAZE	22K 5%	1/10W			
R2149	1-216-097-00	METAL GLAZE	100K 5%	1/10W			
R2150	1-216-097-00	METAL GLAZE	100K 5%	1/10W			
R2151	1-216-085-00	METAL GLAZE	33K 5%	1/10W			
<VARIABLE RESISTOR>							
RV2001	1-238-015-11	RES, ADJ, CARBON 4.7K					
				<TUNER>			
				TU2001 1-238-015-11 TUNER (RTP-XA01)			
				<CRYSTAL>			
X2001	1-567-192-11	OSCILLATOR, CERAMIC					

	*A-1297-078-A	A BOARD, COMPLETE					

	*A-1297-108-A	A BOARD, COMPLETE (KP-46V15(US/CND)/46V16/61V15(US/CND))					

				<CONNECTOR>			
A-1	*1-564-514-11	PLUG, CONNECTOR 11P					
A-2	*1-564-512-11	PLUG, CONNECTOR 9P					
A-3	*1-564-507-11	PLUG, CONNECTOR 4P					
A-4	*1-564-508-11	PLUG, CONNECTOR 5P					
A-5	*1-564-511-51	PLUG, CONNECTOR 8P					
A-8	*1-564-506-11	PLUG, CONNECTOR 3P					
A-10	*1-564-511-81	PLUG, CONNECTOR 8P					
A-11	*1-564-511-71	PLUG, CONNECTOR 8P					
A-12	1-573-297-11	CONNECTOR, BOARD TO BOARD 18P					
A-13	1-573-297-11	CONNECTOR, BOARD TO BOARD 18P					
A-14	*1-564-513-11	PLUG, CONNECTOR 10P					
A-15	*1-564-508-11	PLUG, CONNECTOR 5P					
A-16	*1-564-508-11	PLUG, CONNECTOR 5P					
A-17	*1-564-508-11	PLUG, CONNECTOR 5P					
A-18	*1-691-291-11	PIN, CONNECTOR (PC BOARD) 5P					
A-19	*1-691-291-11	PIN, CONNECTOR (PC BOARD) 5P					
A-20	*1-691-291-11	PIN, CONNECTOR (PC BOARD) 5P					
A-21	*1-508-786-00	PIN, CONNECTOR (5MM PITCH) 2P					
A-22	1-573-297-11	CONNECTOR, BOARD TO BOARD 18P					
A-25	*1-564-506-11	PLUG, CONNECTOR 3P					
A-27	*1-573-979-11	CONNECTOR, BOARD TO BOARD 11P					
A-56	*1-564-508-11	PLUG, CONNECTOR 5P					
P3-1	*1-573-960-11	CONNECTOR (FEMALE) 50P					
				<CAPACITOR>			
C201	1-124-910-11	ELECT	47MF	20%	50V		
C202	1-124-903-11	ELECT	1MF	20%	50V		
C203	1-130-495-00	MYLAR	0.1MF	5%	50V		
C204	1-124-477-11	ELECT	47MF	20%	16V		
C205	1-124-557-11	ELECT	1000MF	20%	25V		
C206	1-126-101-11	ELECT	100MF	20%	16V		
C207	1-124-242-00	ELECT	33MF	20%	16V		
C210	1-102-121-00	CERAMIC	0.0022MF	10%	50V		
C212	1-126-803-11	ELECT	47MF	20%	16V		
C213	1-126-103-11	ELECT	470MF	20%	16V		
C214	1-126-101-11	ELECT	100MF	20%	16V		
C215	1-126-803-11	ELECT	47MF	20%	50V		
C216	1-126-101-11	ELECT	100MF	20%	16V		
C217	1-126-803-11	ELECT	47MF	20%	25V		
C218	1-126-103-11	ELECT	470MF	20%	16V		
C219	1-124-443-00	ELECT	100MF	20%	10V		
C220	1-126-803-11	ELECT	47MF	20%	25V		
C223	1-126-803-11	ELECT	47MF	20%	25V		
C224	1-124-261-00	ELECT	10MF	20%	50V		
C225	1-124-120-11	ELECT	220MF	20%	16V		
C226	1-124-120-11	ELECT	220MF	20%	16V		
C227	1-124-621-11	ELECT	3300MF	20%	6.3V		

A

Les composants identifiés par
 une trame et une marque Δ
 sont critiques pour la sécurité.
 Ne les remplacer que par une
 pièce portant le numéro spécifique.

The components identified by
 shading and mark Δ are critical
 for safety
 Replace only with part number
 specified.

REF. NO.	PART NO.	DESCRIPTION	REMARK
C299	1-126-101-11	ELECT 100MF	20% 16V
C502	1-126-182-11	ELECT 0.47MF	20% 50V
C503	1-130-487-00	MYLAR 0.022MF	5% 50V
C504	1-136-153-00	FILM 0.01MF	5% 50V
C507	1-106-383-00	MYLAR 0.047MF	200V
C508	1-102-973-00	CERAMIC 100PF	5% 50V
C509	1-102-030-00	CERAMIC 330PF	10% 500V
C510	1-136-585-11	FILM 0.015MF	5% 50V
C512	1-136-528-11	FILM 3MF	5% 200V
C513	1-136-153-00	FILM 0.01MF	5% 50V
C514	1-124-477-11	ELECT 47MF	20% 16V
C522	1-123-024-21	ELECT 33MF	160V
C523	1-106-383-00	MYLAR 0.047MF	200V
C528	1-124-662-11	ELECT 220MF	20% 50V
C534	1-124-011-00	ELECT 220MF	20% 16V
C535	1-124-011-00	ELECT 220MF	20% 16V
C536	1-124-662-11	ELECT 220MF	20% 50V
C537	1-124-662-11	ELECT 220MF	20% 50V
C539	1-124-907-11	ELECT 10MF	20% 50V
C542	1-136-153-00	FILM 0.01MF	5% 50V
C543	1-136-153-00	FILM 0.01MF	5% 50V
C544	1-136-153-00	FILM 0.01MF	5% 50V
C545	1-136-153-00	FILM 0.01MF	5% 50V
C569	1-126-355-11	ELECT 33MF	20% 160V
C1401	1-124-910-11	ELECT 47MF	20% 50V
C1402	1-126-157-11	ELECT 10MF	20% 16V
C1403	1-126-157-11	ELECT 10MF	20% 16V
C1404	1-126-157-11	ELECT 10MF	20% 16V
C1405	1-124-910-11	ELECT 47MF	20% 50V
C1406	1-126-101-11	ELECT 100MF	20% 16V
C1407	1-126-057-11	ELECT 2200MF	20% 50V
C1408	1-136-165-00	FILM 0.1MF	5% 50V
C1409	1-136-165-00	FILM 0.1MF	5% 50V
C1413	1-124-234-00	ELECT 22MF	20% 16V
C1424	1-126-057-11	ELECT 2200MF	20% 50V
C1425	1-126-057-11	ELECT 2200MF	20% 50V
C1426	1-126-157-11	ELECT 10MF	20% 16V
C1429	1-126-101-11	ELECT 100MF	20% 16V
C1430	1-126-101-11	ELECT 100MF	20% 16V
C1431	1-124-916-11	ELECT 22MF	20% 50V
C1435	1-124-916-11	ELECT 22MF	20% 25V
C1440	1-126-336-11	ELECT 220MF	20% 25V
C1601	1-130-483-00	MYLAR 0.01MF	5% 50V
C1603	1-136-153-00	FILM 0.01MF	5% 50V
C1607	1-124-907-11	ELECT 10MF	20% 50V
C1608	1-136-153-00	FILM 0.01MF	5% 50V
C1609	1-136-153-00	FILM 0.01MF	5% 50V
C1610	1-124-916-11	ELECT 22MF	20% 50V
<DIODE>			
D203	8-719-911-19	DIODE 1SS119	
D204	8-719-911-19	DIODE 1SS119	
D205	8-719-110-36	DIODE RD13ESB2	
D206	8-719-911-19	DIODE 1SS119	
D207	8-719-911-19	DIODE 1SS119	
D208	8-719-911-19	DIODE 1SS119	
D209	8-719-911-19	DIODE 1SS119	
D211	8-719-110-36	DIODE RD13ESB2	
D213	8-719-110-78	DIODE RD33ESB2	
D214	8-719-911-19	DIODE 1SS119	
D215	8-719-911-19	DIODE 1SS119	
D216	8-719-911-19	DIODE 1SS119	
D217	8-719-911-19	DIODE 1SS119	

REF. NO.	PART NO.	DESCRIPTION	REMARK
D219	8-719-911-19	DIODE 1SS119	
D220	8-719-510-48	DIODE DIN20R	
D221	8-719-911-19	DIODE 1SS119	
D222	8-719-911-19	DIODE 1SS119	
D223	8-719-911-19	DIODE 1SS119	
D501	8-719-971-20	DIODE ERC38-06	
D502	8-719-971-20	DIODE ERC38-06	
D503	8-719-300-80	DIODE RU-1C	
D504	8-719-109-88	DIODE RD5.6ESB1	
D505	8-719-900-63	DIODE V09C	(KP-46V15 (US/CND) 46V16/61V15 (US/CND))
D506	8-719-900-63	DIODE V09C	(KP-46V15 (US/CND) 46V16/61V15 (US/CND))
D507	8-719-970-89	DIODE DD50R	
D509	8-719-911-19	DIODE 1SS119	
D510	8-719-109-71	DIODE RD3.9ESB1	
D511	8-719-911-19	DIODE 1SS119	
D512	8-719-911-19	DIODE 1SS119	
D513	8-719-911-19	DIODE 1SS119	
D514	8-719-911-19	DIODE 1SS119	
D515	8-719-911-19	DIODE 1SS119	
D1401	8-719-911-19	DIODE 1SS119	
D1402	8-719-911-19	DIODE 1SS119	
D1403	8-719-911-19	DIODE 1SS119	
D1404	8-719-110-88	DIODE RD39ESB2	
D1405	8-719-110-88	DIODE RD39ESB2	
D1406	8-719-911-19	DIODE 1SS119	
D1407	8-719-110-88	DIODE RD39ESB2	
D1408	8-719-911-19	DIODE 1SS119	
D1409	8-719-110-88	DIODE RD39ESB2	
D1410	8-719-911-19	DIODE 1SS119	
D1607	8-719-911-19	DIODE 1SS119	
D1608	8-719-911-19	DIODE 1SS119	
JW266	8-719-911-19	DIODE 1SS119	
<IC>			
IC201	8-749-920-58	IC SI-3090CA	
IC204	4-382-854-11	SCREW (M3X10), P, SW (+); IC201	
IC204	8-759-171-05	IC UPC7805H	
IC204	4-382-854-11	SCREW (M3X10), P, SW (+); IC204	
IC205	8-759-144-82	IC UPC2405HF	
IC206	8-759-231-58	IC TA7812S	
IC206	4-382-854-11	SCREW (M3X10), P, SW (+); IC206	
IC207	8-749-920-58	IC SI-3090CA	
IC207	4-382-854-11	SCREW (M3X10), P, SW (+); IC207	
IC506	8-752-057-18	IC CXA1315P	
IC1401	8-759-168-24	IC TA8216H	
IC1401	4-382-854-11	SCREW (M3X10), P, SW (+); IC1401	
IC1601	8-752-058-71	IC CXA1656S	
<COIL>			
L201	1-408-429-00	INDUCTOR 470UH	
L205	1-410-645-31	INDUCTOR 100UH	
L206	1-408-416-00	INDUCTOR 39UH	
L212	1-410-312-11	INDUCTOR 0.22UH	
L502	1-459-313-00	COIL WITH CORE (HWC)	
L515	1-410-645-31	INDUCTOR 100UH	

The components identified by shading and mark Δ are critical for safety
Replace only with part number specified.

Les composants identifiés par une trame et une marque Δ sont critiques pour la sécurité
Ne les remplacer que par une pièce portant le numéro spécifié



REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
<TRANSISTOR>							
Q201	8-729-119-78	TRANSISTOR 2SC2785-HFE		R507	1-249-429-11	CARBON 10K 5% 1/4W	F
Q202	8-729-119-78	TRANSISTOR 2SC2785-HFE		R508	1-215-373-91	METAL OXIDE 2.2 5% 2W	F
Q203	8-729-119-76	TRANSISTOR 2SA1175-HFE		R509	1-215-478-91	METAL OXIDE 390 5% 3W	F
Q501	8-729-119-80	TRANSISTOR 2SC2688-LK		R511	1-249-407-11	CARBON 150 5% 1/4W	
Q502	8-729-014-88	TRANSISTOR 2SC4891-CA		R512	1-249-421-11	CARBON 2.2K 5% 1/4W	F
	4-382-854-11	SCREW (M3X10), P, SW (+); Q502					
Q504	8-729-119-78	TRANSISTOR 2SC2785-HFE		R513	1-249-417-11	CARBON 1K 5% 1/4W	
Q505	8-729-201-32	TRANSISTOR 2SA1013-0		R514	1-215-441-91	METAL OXIDE 27K 5% 3W	F
Q506	8-729-201-32	TRANSISTOR 2SA1013-0		R515	1-249-432-11	CARBON 18K 5% 1/4W	F
Q507	8-729-304-92	TRANSISTOR 2SB649A-C		R516	1-249-417-11	CARBON 1K 5% 1/4W	
Q508	8-729-204-16	TRANSISTOR 2SA1301-0		R517	1-249-427-11	CARBON 6.8K 5% 1/4W	F
	4-382-854-11	SCREW (M3X10), P, SW (+); Q508					
Q509	8-729-119-78	TRANSISTOR 2SC2785-HFE		R518	1-249-422-11	CARBON 2.7K 5% 1/4W	F
Q510	8-729-119-78	TRANSISTOR 2SC2785-HFE		R519	1-249-417-11	CARBON 1K 5% 1/4W	F
Q511	8-729-119-76	TRANSISTOR 2SA1175-HFE		R520	1-215-925-91	METAL OXIDE 22K 5% 3W	F
Q512	8-729-119-78	TRANSISTOR 2SC2785-HFE		R521	1-215-925-91	METAL OXIDE 22K 5% 3W	F
Q1401	8-729-119-78	TRANSISTOR 2SC2785-HFE		R522	1-249-421-11	CARBON 2.2K 5% 1/4W	
Q1402	8-729-900-63	TRANSISTOR DTA124BS		R523	1-249-434-11	CARBON 27K 5% 1/4W	
Q1407	8-729-119-78	TRANSISTOR 2SC2785-HFE		R524	1-249-434-11	CARBON 27K 5% 1/4W	
Q1408	8-729-119-78	TRANSISTOR 2SC2785-HFE		R525	1-215-922-91	METAL OXIDE 6.8K 5% 3W	F
Q1601	8-729-119-78	TRANSISTOR 2SC2785-HFE		R526	1-249-417-11	CARBON 1K 5% 1/4W	
Q1602	8-729-119-76	TRANSISTOR 2SA1175-HFE		R528	1-215-447-91	METAL OXIDE 27 5% 2W	F
Q1603	8-729-119-76	TRANSISTOR 2SA1175-HFE		R529	1-216-447-91	METAL OXIDE 27 5% 2W	F
Q1604	8-729-119-76	TRANSISTOR 2SA1175-HFE		R530	1-249-431-11	CARBON 15K 5% 1/4W	
Q1605	8-729-119-78	TRANSISTOR 2SC2785-HFE		R531	1-249-431-11	CARBON 15K 5% 1/4W	
Q1606	8-729-119-78	TRANSISTOR 2SC2785-HFE		R532	1-249-385-11	CARBON 2.2 5% 1/4W	F
Q1620	8-729-119-76	TRANSISTOR 2SA1175-HFE		R533	1-249-405-11	CARBON 100 5% 1/4W	
<RESISTOR>							
R203	1-249-425-11	CARBON 4.7K 5% 1/4W		R558	1-249-385-11	CARBON 2.2 5% 1/4W	F
R204	1-249-441-11	CARBON 100K 5% 1/4W		R559	1-249-409-11	CARBON 220 5% 1/4W	
R214	1-249-429-11	CARBON 10K 5% 1/4W		R560	1-249-409-11	CARBON 220 5% 1/4W	
R215	1-249-437-11	CARBON 47K 5% 1/4W		R563	1-249-429-11	CARBON 10K 5% 1/4W	
R216	1-249-377-11	CARBON 0.47 5% 1/4W	F	R564	1-249-429-11	CARBON 10K 5% 1/4W	
R219	1-249-426-11	CARBON 5.6K 5% 1/4W		R565	1-249-427-11	CARBON 6.8K 5% 1/4W	
R221	1-249-409-11	CARBON 220 5% 1/4W		R566	1-249-427-11	CARBON 6.8K 5% 1/4W	
R222	1-249-436-11	CARBON 39K 5% 1/4W		R567	1-249-427-11	CARBON 6.8K 5% 1/4W	
R223	1-249-434-11	CARBON 27K 5% 1/4W		R568	1-249-427-11	CARBON 6.8K 5% 1/4W	
R224	1-249-409-11	CARBON 220 5% 1/4W		R569	1-249-426-11	CARBON 5.6K 5% 1/4W	
R225	1-249-417-11	CARBON 1K 5% 1/4W		R570	1-249-441-11	CARBON 100K 5% 1/4W	
R226	1-249-419-11	CARBON 1.5K 5% 1/4W		R571	1-249-429-11	CARBON 10K 5% 1/4W	
R229	1-215-921-91	METAL OXIDE 4.7K 5% 3W	F	R572	1-249-429-11	CARBON 10K 5% 1/4W	
R230	1-215-921-91	METAL OXIDE 4.7K 5% 3W	F	R574	1-249-417-11	CARBON 1K 5% 1/4W	
R231	1-249-409-11	CARBON 220 5% 1/4W	F	R579	1-249-417-11	CARBON 1K 5% 1/4W	
R232	1-216-469-91	METAL OXIDE 12 5% 3W	F	R1401	1-215-445-00	METAL 10K 1% 1/4W	
R233	1-249-409-11	CARBON 220 5% 1/4W		R1402	1-215-445-00	METAL 10K 1% 1/4W	
R234	1-249-409-11	CARBON 220 5% 1/4W		R1403	1-215-445-00	METAL 10K 1% 1/4W	
R235	1-249-409-11	CARBON 220 5% 1/4W		R1404	1-215-445-00	METAL 10K 1% 1/4W	
R236	1-249-409-11	CARBON 220 5% 1/4W		R1405	1-249-385-11	CARBON 2.2 5% 1/4W	
R237	1-249-409-11	CARBON 220 5% 1/4W		R1406	1-249-385-11	CARBON 2.2 5% 1/4W	
R238	1-249-409-11	CARBON 220 5% 1/4W		R1409	1-249-433-11	CARBON 22K 5% 1/4W	
R239	1-249-409-11	CARBON 220 5% 1/4W		R1410	1-249-433-11	CARBON 22K 5% 1/4W	
R240	1-216-469-91	METAL OXIDE 12 5% 3W	F	R1411	1-249-437-11	CARBON 47K 5% 1/4W	
R241	1-249-401-11	CARBON 47 5% 1/4W		R1427	1-215-865-91	METAL OXIDE 220 5% 3W	F
R242	1-216-469-91	METAL OXIDE 12 5% 3W	F	R1428	1-215-865-91	METAL OXIDE 220 5% 3W	F
R243	1-217-294-11	WIREWOUND 4.7 10% 5W	F	R1431	1-249-405-11	CARBON 100 5% 1/4W	
R244	1-217-296-11	WIREWOUND 6.8 10% 5W	F	R1433	1-249-425-11	CARBON 4.7K 5% 1/4W	
R296	1-249-417-11	CARBON 1K 5% 1/4W		R1434	1-249-423-11	CARBON 3.3K 5% 1/4W	
R501	1-247-895-00	CARBON 470K 5% 1/4W		R1439	1-247-883-00	CARBON 150K 5% 1/4W	
R502	1-249-377-11	CARBON 0.47 5% 1/4W	F	R1440	1-249-417-11	CARBON 1K 5% 1/4W	
R503	1-249-377-11	CARBON 0.47 5% 1/4W	F	R1442	1-215-410-00	METAL 360 1% 1/4W	
R504	1-249-417-11	CARBON 1K 5% 1/4W		R1443	1-215-410-00	METAL 360 1% 1/4W	
R505	1-249-423-11	CARBON 3.3K 5% 1/4W					
R506	1-215-922-91	METAL OXIDE 6.8K 5% 3W	F				

Les composants identifiés par
 une trame et une marque Δ
 sont critiques pour la sécurité
 Ne les remplacer que par une
 pièce portant le numéro spécifié

The components identified by
 shading and mark Δ are critical
 for safety
 Replace only with part number
 specified.

A **E1**

REF.NO.	PART NO.	DESCRIPTION	REMARK	REF.NO.	PART NO.	DESCRIPTION	REMARK
R1520	1-249-429-11	CARBON	10K 5% 1/4W	C335	1-136-169-00	FILM 0.22MF 5% 50V	
R1601	1-249-423-11	CARBON	3.3K 5% 1/4W	C336	1-126-301-11	ELECT 1MF 20% 50V	
R1602	1-249-417-11	CARBON	1K 5% 1/4W	C337	1-126-301-11	ELECT 1MF 20% 50V	
R1603	1-249-423-11	CARBON	3.3K 5% 1/4W	C338	1-124-584-00	ELECT 100MF 20% 10V	
R1604	1-249-405-11	CARBON	100 5% 1/4W	C339	1-124-791-11	ELECT 1MF 20% 50V	
R1605	1-249-405-11	CARBON	100 5% 1/4W	C340	1-163-009-11	CERAMIC CHIP 0.001MF 10% 50V	
R1606	1-249-405-11	CARBON	100 5% 1/4W	C341	1-126-157-11	ELECT 10MF 20% 16V	
R1607	1-249-415-11	CARBON	680 5% 1/4W	C342	1-124-465-00	ELECT 0.47MF 20% 50V	
R1608	1-249-415-11	CARBON	680 5% 1/4W	C343	1-124-589-11	ELECT 47MF 20% 16V	
R1609	1-249-415-11	CARBON	680 5% 1/4W	C344	1-164-232-11	CERAMIC CHIP 0.01MF 10% 50V	
R1610	1-249-405-11	CARBON	100 5% 1/4W	C345	1-124-767-00	ELECT 2.2MF 20% 50V	
R1611	1-249-405-11	CARBON	100 5% 1/4W	C346	1-164-232-11	CERAMIC CHIP 0.01MF 10% 50V	
R1612	1-249-405-11	CARBON	100 5% 1/4W	C347	1-136-169-00	FILM 0.22MF 5% 50V	
R1613	1-249-423-11	CARBON	3.3K 5% 1/4W	C348	1-163-117-00	CERAMIC CHIP 100PF 5% 50V	
R1614	1-249-411-11	CARBON	330 5% 1/4W	C349	1-126-301-11	ELECT 1MF 20% 50V	
R1622	1-249-423-11	CARBON	3.3K 5% 1/4W	C350	1-126-301-11	ELECT 1MF 20% 50V	
R1624	1-249-424-11	CARBON	3.9K 5% 1/4W	C351	1-163-002-11	CERAMIC CHIP 270PF 10% 50V	
R1627	1-249-429-11	CARBON	10K 5% 1/4W	C352	1-164-489-11	CERAMIC CHIP 0.22MF 10% 16V	
R1630	1-249-434-11	CARBON	27K 5% 1/4W	C353	1-126-163-11	ELECT 4.7MF 20% 50V	
R1631	1-249-433-11	CARBON	22K 5% 1/4W	C354	1-136-169-00	FILM 0.22MF 5% 50V	
R1656	1-249-397-11	CARBON	22 5% 1/4W	C355	1-124-465-00	ELECT 0.47MF 20% 50V	
R1657	1-249-397-11	CARBON	22 5% 1/4W	C356	1-163-017-00	CERAMIC CHIP 0.0047MF 10% 50V	
R1658	1-249-397-11	CARBON	22 5% 1/4W	C357	1-163-117-00	CERAMIC CHIP 100PF 5% 50V	
<TRANSFORMER>				C358	1-124-767-00	ELECT 2.2MF 20% 50V	
T501 Δ 1-439-545-11 TRANSFORMER, PEBBITE T502 Δ 1-437-378-11 TRANSFORMER, HORIZONTAL DRIVE				C360	1-137-491-11	FILM CHIP 0.1MF 5% 25V	
<TUNER>				C361	1-126-301-11	ELECT 1MF 20% 50V	
T0101A Δ 1-693-102-22 TUNER (RTF-24401)				C362	1-164-232-11	CERAMIC CHIP 0.01MF 10% 50V	
*****				C363	1-164-232-11	CERAMIC CHIP 0.01MF 10% 50V	
*A-1346-138-A E1 BOARD, COMPLETE				C364	1-126-301-11	ELECT 1MF 20% 50V	
*****				C365	1-164-343-11	CERAMIC CHIP 0.056MF 10% 25V	
<CAPACITOR>				C366	1-124-257-00	ELECT 2.2MF 20% 50V	
C301	1-163-010-11	CERAMIC CHIP 0.0012MF	10% 50V	C367	1-126-157-11	ELECT 10MF 20% 16V	
C303	1-126-157-11	ELECT 10MF	20% 16V	C368	1-124-234-00	ELECT 22MF 20% 16V	
C304	1-164-232-11	CERAMIC CHIP 0.01MF	10% 50V	C369	1-163-001-11	CERAMIC CHIP 220PF 10% 50V	
C305	1-163-251-11	CERAMIC CHIP 100PF	5% 50V	C370	1-164-232-11	CERAMIC CHIP 0.01MF 10% 50V	
C306	1-163-117-00	CERAMIC CHIP 100PF	5% 50V	C371	1-124-126-00	ELECT 47MF 20% 16V	
C309	1-164-505-11	CERAMIC CHIP 2.2MF	16V	C372	1-124-589-11	ELECT 47MF 20% 16V	
C310	1-163-109-00	CERAMIC CHIP 47PF	5% 50V	C373	1-164-232-11	CERAMIC CHIP 0.01MF 10% 50V	
C314	1-124-915-11	ELECT 10MF	20% 16V	C378	1-163-117-00	CERAMIC CHIP 100PF 5% 50V	
C315	1-164-505-11	CERAMIC CHIP 2.2MF	16V	C379	1-164-232-11	CERAMIC CHIP 0.01MF 10% 50V	
C319	1-126-157-11	ELECT 10MF	20% 16V	C380	1-163-137-00	CERAMIC CHIP 680PF 5% 50V	
C320	1-124-465-00	ELECT 0.47MF	20% 50V	C381	1-163-101-00	CERAMIC CHIP 22PF 5% 50V	
C321	1-163-125-00	CERAMIC CHIP 220PF	5% 50V	C382	1-164-004-11	CERAMIC CHIP 0.1MF 10% 25V	
C322	1-163-003-11	CERAMIC CHIP 330PF	10% 50V	C383	1-164-004-11	CERAMIC CHIP 0.1MF 10% 25V	
C323	1-163-099-00	CERAMIC CHIP 18PF	5% 50V	C384	1-163-095-00	CERAMIC CHIP 12PF 5% 50V	
C324	1-124-234-00	ELECT 22MF	20% 16V	<DIODE>			
C325	1-104-563-11	FILM CHIP 0.1MF	5% 16V	D301	8-719-404-46	DIODE MA110	
C326	1-104-563-11	FILM CHIP 0.1MF	5% 16V	D302	8-719-404-46	DIODE MA110	
C327	1-104-563-11	FILM CHIP 0.1MF	5% 16V	D303	8-719-404-46	DIODE MA110	
C328	1-126-157-11	ELECT 10MF	20% 16V	D304	8-719-404-46	DIODE MA110	
C329	1-126-157-11	ELECT 10MF	20% 16V	D305	8-719-404-46	DIODE MA110	
C330	1-126-157-11	ELECT 10MF	20% 16V	D306	8-719-158-15	DIODE RD5.6SB	
C331	1-126-301-11	ELECT 1MF	20% 50V	D307	8-719-404-46	DIODE MA110	
C332	1-124-584-00	ELECT 100MF	20% 10V	D310	8-719-158-15	DIODE RD5.6SB	
C333	1-163-037-11	CERAMIC CHIP 0.022MF	10% 25V	D312	8-719-404-46	DIODE MA110	
C334	1-137-491-11	FILM CHIP 0.1MF	5% 25V	D313	8-719-404-46	DIODE MA110	
				D314	8-719-404-46	DIODE MA110	
				D315	8-719-404-46	DIODE MA110	
				D316	8-719-404-46	DIODE MA110	
				D317	8-719-404-46	DIODE MA110	
				D318	8-719-404-46	DIODE MA110	

REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
D319	8-719-404-46	DIODE MA110		R302	1-216-057-00	METAL GLAZE 2.2K 5%	1/10W
D320	8-719-404-46	DIODE MA110		R303	1-216-079-00	METAL GLAZE 18K 5%	1/10W
D321	8-719-400-94	DIODE MA3130		R304	1-216-081-00	METAL GLAZE 22K 5%	1/10W
		<DELAY LINE>		R305	1-216-069-00	METAL GLAZE 6.8K 5%	1/10W
DL302	1-415-817-11	DELAY LINE		R306	1-216-081-00	METAL GLAZE 22K 5%	1/10W
		<CONNECTOR>		R307	1-216-089-00	METAL GLAZE 47K 5%	1/10W
E1-24	*1-564-523-11	PLUG, CONNECTOR 8P		R308	1-216-037-00	METAL GLAZE 330 5%	1/10W
E1-25	*1-564-521-11	PLUG, CONNECTOR 6P		R309	1-216-073-00	METAL GLAZE 10K 5%	1/10W
E1-26	*1-564-522-11	PLUG, CONNECTOR 7P		R310	1-216-065-00	METAL GLAZE 4.7K 5%	1/10W
E1-001	1-573-965-21	PIN, CONNECTOR (PC BOARD) 50P		R312	1-216-043-00	METAL GLAZE 560 5%	1/10W
		<IC>		R313	1-216-035-00	METAL GLAZE 270 5%	1/10W
IC301	8-752-058-68	IC CXA1315M		R314	1-216-061-00	METAL GLAZE 3.3K 5%	1/10W
IC302	8-752-057-68	IC CXA1464AS		R316	1-216-035-00	METAL GLAZE 270 5%	1/10W
IC303	8-759-106-02	IC UPC4570G2		R317	1-216-121-00	METAL GLAZE 1M 5%	1/10W
		<COIL>		R320	1-216-039-00	METAL GLAZE 390 5%	1/10W
L301	1-410-064-11	INDUCTOR 2.7MMH		R325	1-216-033-00	METAL GLAZE 220 5%	1/10W
L307	1-410-944-31	INDUCTOR CHIP 15UH		R326	1-216-057-00	METAL GLAZE 2.2K 5%	1/10W
L308	1-410-946-31	INDUCTOR CHIP 22UH		R331	1-216-017-00	METAL GLAZE 47 5%	1/10W
		<TRANSISTOR>		R332	1-216-657-11	METAL CHIP 1.8K 0.50%	1/10W
Q301	8-729-925-79	TRANSISTOR 1MX3		R333	1-216-051-00	METAL GLAZE 1.2K 5%	1/10W
Q302	8-729-925-79	TRANSISTOR 1MX3		R336	1-216-047-00	METAL GLAZE 820 5%	1/10W
Q303	8-729-422-27	TRANSISTOR 2SD601A-Q		R338	1-216-043-00	METAL GLAZE 560 5%	1/10W
Q304	8-729-907-46	TRANSISTOR 1MZ1		R339	1-216-047-00	METAL GLAZE 820 5%	1/10W
Q305	8-729-925-79	TRANSISTOR 1MX3		R340	1-216-651-11	METAL CHIP 1K 0.50%	1/10W
Q306	8-729-422-27	TRANSISTOR 2SD601A-Q		R341	1-216-043-00	METAL GLAZE 560 5%	1/10W
Q307	8-729-903-10	TRANSISTOR FMW1		R343	1-216-077-00	METAL GLAZE 15K 5%	1/10W
Q309	8-729-422-27	TRANSISTOR 2SD601A-Q		R344	1-216-081-00	METAL GLAZE 22K 5%	1/10W
Q310	8-729-422-27	TRANSISTOR 2SD601A-Q		R345	1-216-292-11	METAL GLAZE 8.2M 5%	1/8W
Q311	8-729-403-27	TRANSISTOR XN4401		R346	1-216-081-00	METAL GLAZE 22K 5%	1/10W
Q312	8-729-422-27	TRANSISTOR 2SD601A-Q		R347	1-216-081-00	METAL GLAZE 22K 5%	1/10W
Q314	8-729-403-27	TRANSISTOR XN4401		R348	1-216-049-00	METAL GLAZE 1K 5%	1/10W
Q315	8-729-422-27	TRANSISTOR 2SD601A-Q		R349	1-216-295-00	METAL GLAZE 0 5%	1/10W
Q316	8-729-422-27	TRANSISTOR 2SD601A-Q		R350	1-216-089-00	METAL GLAZE 47K 5%	1/10W
Q317	8-729-216-22	TRANSISTOR 2SA1162-G		R351	1-216-674-11	METAL CHIP 9.1K 0.50%	1/10W
Q321	8-729-925-79	TRANSISTOR 1MX3		R352	1-216-011-00	METAL GLAZE 27 5%	1/10W
Q322	8-729-216-22	TRANSISTOR 2SA1162-G		R353	1-216-001-00	METAL GLAZE 10 5%	1/10W
Q323	8-729-422-27	TRANSISTOR 2SD601A-Q		R354	1-216-049-00	METAL GLAZE 1K 5%	1/10W
Q324	8-729-216-22	TRANSISTOR 2SA1162-G		R355	1-216-001-00	METAL GLAZE 10 5%	1/10W
Q325	8-729-216-22	TRANSISTOR 2SA1162-G		R356	1-216-001-00	METAL GLAZE 10 5%	1/10W
Q326	8-729-422-27	TRANSISTOR 2SD601A-Q		R357	1-216-049-00	METAL GLAZE 1K 5%	1/10W
Q327	8-729-422-27	TRANSISTOR 2SD601A-Q		R358	1-216-049-00	METAL GLAZE 1K 5%	1/10W
Q328	8-729-422-27	TRANSISTOR 2SD601A-Q		R359	1-216-049-00	METAL GLAZE 1K 5%	1/10W
Q329	8-729-925-79	TRANSISTOR 1MX3		R360	1-216-119-00	METAL GLAZE 820K 5%	1/10W
Q330	8-729-925-79	TRANSISTOR 1MX3		R361	1-216-025-00	METAL GLAZE 100 5%	1/10W
Q333	8-729-925-79	TRANSISTOR 1MX3		R362	1-216-079-00	METAL GLAZE 18K 5%	1/10W
Q334	8-729-422-27	TRANSISTOR 2SD601A-Q		R363	1-216-295-00	METAL GLAZE 0 5%	1/10W
Q335	8-729-907-46	TRANSISTOR 1MZ1		R364	1-216-045-00	METAL GLAZE 680 5%	1/10W
Q340	8-729-422-27	TRANSISTOR 2SD601A-Q		R365	1-216-017-00	METAL GLAZE 47 5%	1/10W
Q342	8-729-925-79	TRANSISTOR 1MX3		R366	1-216-001-00	METAL GLAZE 10 5%	1/10W
Q344	8-729-216-22	TRANSISTOR 2SA1162-G		R367	1-216-045-00	METAL GLAZE 680 5%	1/10W
		<RESISTOR>		R368	1-216-001-00	METAL GLAZE 10 5%	1/10W
R301	1-216-025-00	METAL GLAZE 100 5%	1/10W	R369	1-216-033-00	METAL GLAZE 220 5%	1/10W
				R370	1-216-033-00	METAL GLAZE 220 5%	1/10W
				R371	1-216-033-00	METAL GLAZE 220 5%	1/10W
				R372	1-216-031-00	METAL GLAZE 180 5%	1/10W
				R373	1-216-671-11	METAL CHIP 6.8K 0.50%	1/10W
				R374	1-216-037-00	METAL GLAZE 330 5%	1/10W
				R375	1-216-037-00	METAL GLAZE 330 5%	1/10W
				R376	1-216-037-00	METAL GLAZE 330 5%	1/10W
				R377	1-216-033-00	METAL GLAZE 220 5%	1/10W
				R378	1-216-033-00	METAL GLAZE 220 5%	1/10W
				R379	1-216-033-00	METAL GLAZE 220 5%	1/10W
				R380	1-216-033-00	METAL GLAZE 220 5%	1/10W
				R381	1-216-033-00	METAL GLAZE 220 5%	1/10W

E1

E2

REF. NO.	PART NO.	DESCRIPTION	REMARK
R382	1-216-033-00	METAL GLAZE	220 5% 1/10W
R383	1-216-653-11	METAL CHIP	1.2K 0.50% 1/10W
R384	1-216-041-00	METAL GLAZE	470 5% 1/10W
R385	1-216-081-00	METAL GLAZE	22K 5% 1/10W
R386	1-216-687-11	METAL CHIP	33K 0.50% 1/10W
R387	1-216-033-00	METAL GLAZE	220 5% 1/10W
R388	1-216-033-00	METAL GLAZE	220 5% 1/10W
R389	1-216-081-00	METAL GLAZE	22K 5% 1/10W
R390	1-216-033-00	METAL GLAZE	220 5% 1/10W
R391	1-216-049-00	METAL GLAZE	1K 5% 1/10W
R393	1-216-051-00	METAL GLAZE	1.2K 5% 1/10W
R394	1-216-109-00	METAL GLAZE	330K 5% 1/10W
R395	1-216-071-00	METAL GLAZE	8.2K 5% 1/10W
R396	1-216-105-00	METAL GLAZE	220K 5% 1/10W
R397	1-216-081-00	METAL GLAZE	22K 5% 1/10W
R398	1-216-081-00	METAL GLAZE	22K 5% 1/10W
R399	1-216-077-00	METAL GLAZE	15K 5% 1/10W
R1301	1-216-049-00	METAL GLAZE	1K 5% 1/10W
R1302	1-216-045-00	METAL GLAZE	680 5% 1/10W
R1303	1-216-085-00	METAL GLAZE	33K 5% 1/10W
R1304	1-216-081-00	METAL GLAZE	22K 5% 1/10W
R1305	1-216-025-00	METAL GLAZE	100 5% 1/10W
R1306	1-216-057-00	METAL GLAZE	2.2K 5% 1/10W
R1307	1-216-073-00	METAL GLAZE	10K 5% 1/10W
R1308	1-216-065-00	METAL GLAZE	4.7K 5% 1/10W
R1309	1-216-025-00	METAL GLAZE	100 5% 1/10W
R1310	1-216-045-00	METAL GLAZE	680 5% 1/10W
R1311	1-216-049-00	METAL GLAZE	1K 5% 1/10W
R1312	1-216-073-00	METAL GLAZE	10K 5% 1/10W
R1313	1-216-081-00	METAL GLAZE	22K 5% 1/10W
R1314	1-216-065-00	METAL GLAZE	4.7K 5% 1/10W
R1315	1-216-049-00	METAL GLAZE	1K 5% 1/10W
R1316	1-216-081-00	METAL GLAZE	22K 5% 1/10W
R1317	1-216-073-00	METAL GLAZE	10K 5% 1/10W
R1318	1-216-065-00	METAL GLAZE	4.7K 5% 1/10W
R1319	1-216-065-00	METAL GLAZE	4.7K 5% 1/10W
R1320	1-216-063-00	METAL GLAZE	3.9K 5% 1/10W
R1321	1-216-081-00	METAL GLAZE	22K 5% 1/10W
R1322	1-216-061-00	METAL GLAZE	3.3K 5% 1/10W
R1323	1-216-089-00	METAL GLAZE	47K 5% 1/10W
R1324	1-216-045-00	METAL GLAZE	680 5% 1/10W
R1325	1-216-025-00	METAL GLAZE	100 5% 1/10W
R1326	1-216-073-00	METAL GLAZE	10K 5% 1/10W
R1327	1-216-033-00	METAL GLAZE	220 5% 1/10W
R1328	1-216-033-00	METAL GLAZE	220 5% 1/10W
R1329	1-216-077-00	METAL GLAZE	15K 5% 1/10W
R1330	1-216-081-00	METAL GLAZE	22K 5% 1/10W
R1331	1-216-081-00	METAL GLAZE	22K 5% 1/10W
R1332	1-216-093-00	METAL GLAZE	68K 5% 1/10W
R1333	1-216-129-00	METAL GLAZE	2.2M 5% 1/10W
R1334	1-216-097-00	METAL GLAZE	100K 5% 1/10W
R1335	1-216-089-00	METAL GLAZE	47K 5% 1/10W
R1336	1-216-089-00	METAL GLAZE	47K 5% 1/10W
R1337	1-216-065-00	METAL GLAZE	4.7K 5% 1/10W
R1338	1-216-089-00	METAL GLAZE	47K 5% 1/10W
R1339	1-216-089-00	METAL GLAZE	47K 5% 1/10W
R1340	1-216-073-00	METAL GLAZE	10K 5% 1/10W
R1342	1-216-033-00	METAL GLAZE	220 5% 1/10W
R1343	1-216-105-00	METAL GLAZE	220K 5% 1/10W
R1344	1-216-091-00	METAL GLAZE	56K 5% 1/10W
R1345	1-216-101-00	METAL GLAZE	150K 5% 1/10W
R1346	1-216-049-00	METAL GLAZE	1K 5% 1/10W
R1347	1-216-049-00	METAL GLAZE	1K 5% 1/10W
R1348	1-216-049-00	METAL GLAZE	1K 5% 1/10W

REF. NO.	PART NO.	DESCRIPTION	REMARK
R1349	1-216-073-00	METAL GLAZE	10K 5% 1/10W
R1350	1-216-091-00	METAL GLAZE	56K 5% 1/10W
R1351	1-216-049-00	METAL GLAZE	1K 5% 1/10W
R1352	1-216-039-00	METAL GLAZE	390 5% 1/10W
R1353	1-216-053-00	METAL GLAZE	1.5K 5% 1/10W
R1354	1-216-081-00	METAL GLAZE	22K 5% 1/10W
R1355	1-216-017-00	METAL GLAZE	47 5% 1/10W
R1356	1-216-057-00	METAL GLAZE	2.2K 5% 1/10W
R1357	1-216-081-00	METAL GLAZE	22K 5% 1/10W
R1358	1-216-033-00	METAL GLAZE	220 5% 1/10W
R1362	1-216-105-00	METAL GLAZE	220K 5% 1/10W
R1363	1-216-041-00	METAL GLAZE	470 5% 1/10W
R1364	1-216-053-00	METAL GLAZE	1.5K 5% 1/10W
R1373	1-216-049-00	METAL GLAZE	1K 5% 1/10W
R1374	1-216-025-00	METAL GLAZE	100 5% 1/10W
R1379	1-216-079-00	METAL GLAZE	18K 5% 1/10W
R1380	1-216-075-00	METAL GLAZE	12K 5% 1/10W
R1381	1-216-041-00	METAL GLAZE	470 5% 1/10W
R1382	1-216-079-00	METAL GLAZE	18K 5% 1/10W
R1383	1-216-077-00	METAL GLAZE	15K 5% 1/10W
R1384	1-216-049-00	METAL GLAZE	1K 5% 1/10W
R1385	1-216-037-00	METAL GLAZE	330 5% 1/10W
R1386	1-216-037-00	METAL GLAZE	330 5% 1/10W
R1387	1-216-045-00	METAL GLAZE	680 5% 1/10W
R1388	1-216-001-00	METAL GLAZE	10 5% 1/10W
R1389	1-216-097-00	METAL GLAZE	100K 5% 1/10W
R1390	1-216-097-00	METAL GLAZE	100K 5% 1/10W
R1391	1-216-097-00	METAL GLAZE	100K 5% 1/10W
R1392	1-216-081-00	METAL GLAZE	22K 5% 1/10W
R1394	1-216-081-00	METAL GLAZE	22K 5% 1/10W
R1395	1-216-081-00	METAL GLAZE	22K 5% 1/10W
R1396	1-216-125-00	METAL GLAZE	1.5M 5% 1/10W
R1399	1-216-065-00	METAL GLAZE	4.7K 5% 1/10W
R5301	1-216-057-00	METAL GLAZE	2.2K 5% 1/10W
R5302	1-216-073-00	METAL GLAZE	10K 5% 1/10W
R5303	1-216-073-00	METAL GLAZE	10K 5% 1/10W
R5304	1-216-085-00	METAL GLAZE	33K 5% 1/10W
R5305	1-216-085-00	METAL GLAZE	33K 5% 1/10W
<CRYSTAL>			
X301	1-567-505-11	OSCILLATOR, CRYSTAL	


*A-1346-137-A E2 BOARD, COMPLETE			

<CAPACITOR>			
C2302	1-163-009-11	CERAMIC CHIP	0.001MF 10% 50V
C2303	1-164-232-11	CERAMIC CHIP	0.01MF 10% 50V
C2310	1-163-105-00	CERAMIC CHIP	33PF 5% 50V
C2314	1-164-232-11	CERAMIC CHIP	0.01MF 10% 50V
C2315	1-126-157-11	ELECT	10MF 20% 16V
C2316	1-126-157-11	ELECT	10MF 20% 16V
C2317	1-126-157-11	ELECT	10MF 20% 16V
C2318	1-164-232-11	CERAMIC CHIP	0.01MF 10% 50V
C2320	1-124-589-11	ELECT	47MF 20% 16V
C2321	1-163-017-00	CERAMIC CHIP	0.0047MF 10% 50V
C2322	1-124-234-00	ELECT	22MF 20% 16V
C2323	1-124-234-00	ELECT	22MF 20% 16V
C2324	1-124-234-00	ELECT	22MF 20% 16V
C2325	1-164-232-11	CERAMIC CHIP	0.01MF 10% 50V

REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
C2326	1-124-589-11	ELECT 47MF	20%	16V	Q2309	8-729-903-10	TRANSISTOR FMW1
C2327	1-164-505-11	CERAMIC CHIP 2.2MF		16V	Q2310	8-729-403-27	TRANSISTOR XN4401
C2328	1-164-232-11	CERAMIC CHIP 0.01MF	10%	50V	Q2311	8-729-903-10	TRANSISTOR FMW1
C2329	1-164-232-11	CERAMIC CHIP 0.01MF	10%	50V	Q2312	8-729-403-27	TRANSISTOR XN4401
C2331	1-164-232-11	CERAMIC CHIP 0.01MF	10%	50V	Q2313	8-729-903-10	TRANSISTOR FMW1
C2332	1-124-234-00	ELECT 22MF	20%	16V	Q2314	8-729-403-27	TRANSISTOR XN4401
C2333	1-124-234-00	ELECT 22MF	20%	16V	Q2315	8-729-903-10	TRANSISTOR FMW1
C2334	1-164-232-11	CERAMIC CHIP 0.01MF	10%	50V	Q2317	8-729-216-22	TRANSISTOR 2SA1162-G
C2335	1-164-232-11	CERAMIC CHIP 0.01MF	10%	50V	Q2318	8-729-216-22	TRANSISTOR 2SA1162-G
C2336	1-126-163-11	ELECT 4.7MF	20%	16V	Q2319	8-729-216-22	TRANSISTOR 2SA1162-G
C2337	1-164-232-11	CERAMIC CHIP 0.01MF	10%	50V	Q2320	8-729-422-27	TRANSISTOR 2SD601A-Q
C2338	1-163-038-00	CERAMIC CHIP 0.1MF		25V	Q2321	8-729-422-27	TRANSISTOR 2SD601A-Q
C2341	1-135-217-21	TANTAL. CHIP 15MF	20%	6.3V	Q2322	8-729-422-27	TRANSISTOR 2SD601A-Q
C2345	1-164-505-11	CERAMIC CHIP 2.2MF		16V	Q2324	8-729-216-22	TRANSISTOR 2SA1162-G
C2346	1-164-232-11	CERAMIC CHIP 0.01MF	10%	50V	Q2326	8-729-422-27	TRANSISTOR 2SD601A-Q
C2347	1-163-367-11	CERAMIC CHIP 39PF	5%	50V	Q2327	8-729-422-27	TRANSISTOR 2SD601A-Q
C2349	1-164-505-11	CERAMIC CHIP 2.2MF		16V	Q2328	8-729-925-79	TRANSISTOR 1MX3
C2350	1-164-232-11	CERAMIC CHIP 0.01MF	10%	50V	Q2329	8-729-925-79	TRANSISTOR 1MX3
C2351	1-164-505-11	CERAMIC CHIP 2.2MF		16V	Q2330	8-729-903-10	TRANSISTOR FMW1
C2352	1-164-505-11	CERAMIC CHIP 2.2MF		16V	Q2336	8-729-925-79	TRANSISTOR 1MX3
C2353	1-164-232-11	CERAMIC CHIP 0.01MF	10%	50V	Q2337	8-729-925-79	TRANSISTOR 1MX3
C2354	1-164-232-11	CERAMIC CHIP 0.01MF	10%	50V	Q2339	8-729-422-27	TRANSISTOR 2SD601A-Q
C2357	1-126-301-11	ELECT 1MF	20%	50V	Q2340	8-729-422-27	TRANSISTOR 2SD601A-Q
C2360	1-163-109-00	CERAMIC CHIP 47PF	5%	50V	Q2341	8-729-422-27	TRANSISTOR 2SD601A-Q
<DIODE>				<RESISTOR>			
D2306	8-719-404-46	DIODE MA110		R2302	1-216-049-00	METAL GLAZE 1K 5%	1/10W
D2307	8-719-946-98	DIODE FMN1		R2303	1-216-049-00	METAL GLAZE 1K 5%	1/10W
D2308	8-719-946-98	DIODE FMN1		R2304	1-216-049-00	METAL GLAZE 1K 5%	1/10W
D2309	8-719-404-46	DIODE MA110		R2305	1-216-033-00	METAL GLAZE 220 5%	1/10W
D2312	8-719-404-46	DIODE MA110		R2306	1-216-045-00	METAL GLAZE 680 5%	1/10W
D2313	8-719-404-46	DIODE MA110		R2307	1-216-045-00	METAL GLAZE 680 5%	1/10W
D2314	8-713-300-57	DIODE 1T33		R2308	1-216-045-00	METAL GLAZE 680 5%	1/10W
D2317	8-719-404-46	DIODE MA110		R2309	1-216-041-00	METAL GLAZE 470 5%	1/10W
<CONNECTOR>				R2310	1-216-055-00	METAL GLAZE 1.8K 5%	1/10W
E2-25	*1-564-521-11	PLUG, CONNECTOR 6P		R2311	1-216-025-00	METAL GLAZE 100 5%	1/10W
E2-26	*1-564-522-11	PLUG, CONNECTOR 7P		R2312	1-216-043-00	METAL GLAZE 560 5%	1/10W
E2-46	*1-564-518-11	PLUG, CONNECTOR 3P		R2313	1-216-055-00	METAL GLAZE 1.8K 5%	1/10W
E2-002	1-573-965-21	PIN, CONNECTOR (PC BOARD) 50P		R2314	1-216-061-00	METAL GLAZE 3.3K 5%	1/10W
<IC>				R2315	1-216-081-00	METAL GLAZE 22K 5%	1/10W
IC2301	8-759-066-52	IC PCA8510T/012-T		R2317	1-216-041-00	METAL GLAZE 470 5%	1/10W
IC2303	8-759-925-75	IC SN74HC05ANS		R2318	1-216-055-00	METAL GLAZE 1.8K 5%	1/10W
IC2304	8-752-037-15	IC CXA1387S		R2319	1-216-079-00	METAL GLAZE 18K 5%	1/10W
IC2306	8-759-011-65	IC MC74HC4053F		R2320	1-216-061-00	METAL GLAZE 3.3K 5%	1/10W
IC2307	8-752-058-68	IC CXA1315M		R2321	1-216-063-00	METAL GLAZE 3.9K 5%	1/10W
<COIL>				R2322	1-216-049-00	METAL GLAZE 1K 5%	1/10W
L2304	1-408-414-00	INDUCTOR 27UH		R2323	1-216-067-00	METAL GLAZE 5.6K 5%	1/10W
<TRANSISTOR>				R2324	1-216-049-00	METAL GLAZE 1K 5%	1/10W
Q2301	8-729-903-10	TRANSISTOR FMW1		R2325	1-216-049-00	METAL GLAZE 1K 5%	1/10W
Q2303	8-729-403-27	TRANSISTOR XN4401		R2326	1-216-061-00	METAL GLAZE 3.3K 5%	1/10W
Q2304	8-729-925-79	TRANSISTOR 1MX3		R2327	1-216-063-00	METAL GLAZE 3.9K 5%	1/10W
Q2305	8-729-903-10	TRANSISTOR FMW1		R2328	1-216-025-00	METAL GLAZE 100 5%	1/10W
Q2306	8-729-403-27	TRANSISTOR XN4401		R2329	1-216-025-00	METAL GLAZE 100 5%	1/10W
Q2307	8-729-403-27	TRANSISTOR XN4401		R2330	1-216-061-00	METAL GLAZE 3.3K 5%	1/10W
Q2308	8-729-403-27	TRANSISTOR XN4401		R2331	1-216-063-00	METAL GLAZE 3.9K 5%	1/10W
				R2332	1-216-025-00	METAL GLAZE 100 5%	1/10W
				R2333	1-216-067-00	METAL GLAZE 5.6K 5%	1/10W
				R2334	1-216-295-00	METAL GLAZE 0 5%	1/10W
				R2335	1-216-295-00	METAL GLAZE 0 5%	1/10W
				R2336	1-216-295-00	METAL GLAZE 0 5%	1/10W
				R2337	1-216-033-00	METAL GLAZE 220 5%	1/10W
				R2338	1-216-081-00	METAL GLAZE 22K 5%	1/10W

E2

REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
R2340	1-216-049-00	METAL GLAZE 1K 5%	1/10W	R3314	1-216-689-11	METAL GLAZE 39K 5%	1/10W
R2341	1-216-041-00	METAL GLAZE 470 5%	1/10W	R3315	1-216-089-00	METAL GLAZE 47K 5%	1/10W
R2342	1-216-049-00	METAL GLAZE 1K 5%	1/10W	R3316	1-216-071-00	METAL GLAZE 8.2K 5%	1/10W
R2343	1-216-049-00	METAL GLAZE 1K 5%	1/10W	R3318	1-216-095-00	METAL GLAZE 82K 5%	1/10W
R2344	1-216-033-00	METAL GLAZE 220 5%	1/10W	R3319	1-216-095-00	METAL GLAZE 82K 5%	1/10W
R2345	1-216-077-00	METAL GLAZE 15K 5%	1/10W	R3320	1-216-017-00	METAL GLAZE 47 5%	1/10W
R2346	1-216-049-00	METAL GLAZE 1K 5%	1/10W	R3321	1-216-069-00	METAL GLAZE 6.8K 5%	1/10W
R2347	1-216-083-00	METAL GLAZE 27K 5%	1/10W	R3323	1-216-101-00	METAL GLAZE 150K 5%	1/10W
R2348	1-216-655-11	METAL CHIP 1.5K 0.50%	1/10W	R3324	1-216-049-00	METAL GLAZE 1K 5%	1/10W
R2349	1-216-025-00	METAL GLAZE 100 5%	1/10W	R3325	1-216-025-00	METAL GLAZE 100 5%	1/10W
R2350	1-216-097-00	METAL GLAZE 100K 5%	1/10W	R3328	1-216-001-00	METAL GLAZE 10 5%	1/10W
R2351	1-216-033-00	METAL GLAZE 220 5%	1/10W	R3330	1-216-033-00	METAL GLAZE 220 5%	1/10W
R2352	1-216-097-00	METAL GLAZE 100K 5%	1/10W	R3331	1-216-033-00	METAL GLAZE 220 5%	1/10W
R2353	1-216-097-00	METAL GLAZE 100K 5%	1/10W	R3332	1-216-081-00	METAL GLAZE 22K 5%	1/10W
R2354	1-216-210-00	METAL GLAZE 3.3K 5%	1/8W	R3333	1-216-657-11	METAL CHIP 1.8K 0.50%	1/10W
R2355	1-216-178-00	METAL GLAZE 150 5%	1/8W	R3334	1-216-661-11	METAL CHIP 2.7K 0.50%	1/10W
R2356	1-216-677-11	METAL CHIP 12K 0.50%	1/10W	R3335	1-216-025-00	METAL GLAZE 100 5%	1/10W
R2357	1-216-670-11	METAL CHIP 6.2K 0.50%	1/10W	R3336	1-216-683-11	METAL CHIP 22K 0.50%	1/10W
R2359	1-216-053-00	METAL GLAZE 1.5K 5%	1/10W	R3337	1-216-685-11	METAL CHIP 27K 0.50%	1/10W
R2360	1-216-053-00	METAL GLAZE 1.5K 5%	1/10W	R3339	1-216-081-00	METAL GLAZE 22K 5%	1/10W
R2361	1-216-053-00	METAL GLAZE 1.5K 5%	1/10W	R3340	1-216-049-00	METAL GLAZE 1K 5%	1/10W
R2362	1-216-053-00	METAL GLAZE 1.5K 5%	1/10W	R3341	1-216-677-11	METAL CHIP 12K 0.50%	1/10W
R2363	1-216-041-00	METAL GLAZE 470 5%	1/10W	R3342	1-216-670-11	METAL CHIP 6.2K 0.50%	1/10W
R2364	1-216-053-00	METAL GLAZE 1.5K 5%	1/10W	R3343	1-216-097-00	METAL GLAZE 100K 5%	1/10W
R2365	1-216-053-00	METAL GLAZE 1.5K 5%	1/10W	R3344	1-216-097-00	METAL GLAZE 100K 5%	1/10W
R2366	1-216-081-00	METAL GLAZE 22K 5%	1/10W	R3347	1-216-687-11	METAL CHIP 33K 0.50%	1/10W
R2367	1-216-043-00	METAL GLAZE 560 5%	1/10W	R3348	1-216-681-11	METAL CHIP 18K 0.50%	1/10W
R2368	1-216-081-00	METAL GLAZE 22K 5%	1/10W	R3349	1-216-073-00	METAL GLAZE 10K 5%	1/10W
R2371	1-216-033-00	METAL GLAZE 220 5%	1/10W	R3350	1-216-065-00	METAL GLAZE 4.7K 5%	1/10W
R2374	1-216-067-00	METAL GLAZE 5.6K 5%	1/10W	R3351	1-216-065-00	METAL GLAZE 4.7K 5%	1/10W
R2375	1-216-081-00	METAL GLAZE 22K 5%	1/10W	R3352	1-216-073-00	METAL GLAZE 10K 5%	1/10W
R2376	1-216-081-00	METAL GLAZE 22K 5%	1/10W	R3353	1-216-059-00	METAL GLAZE 2.7K 5%	1/10W
R2377	1-216-025-00	METAL GLAZE 100 5%	1/10W	R3354	1-216-059-00	METAL GLAZE 2.7K 5%	1/10W
R2378	1-216-025-00	METAL GLAZE 100 5%	1/10W	R3356	1-216-655-11	METAL CHIP 1.5K 0.50%	1/10W
R2379	1-216-043-00	METAL GLAZE 560 5%	1/10W	R3357	1-216-654-11	METAL CHIP 1.3K 0.50%	1/10W
R2380	1-216-043-00	METAL GLAZE 560 5%	1/10W	R3358	1-216-659-11	METAL CHIP 2.2K 0.50%	1/10W
R2381	1-216-043-00	METAL GLAZE 560 5%	1/10W	R3359	1-216-653-11	METAL CHIP 1.2K 0.50%	1/10W
R2382	1-216-073-00	METAL GLAZE 10K 5%	1/10W	R3360	1-216-077-00	METAL GLAZE 15K 5%	1/10W
R2384	1-216-081-00	METAL GLAZE 22K 5%	1/10W	R3361	1-216-049-00	METAL GLAZE 1K 5%	1/10W
R2385	1-216-075-00	METAL GLAZE 12K 5%	1/10W	R3362	1-216-097-00	METAL GLAZE 100K 5%	1/10W
R2386	1-216-049-00	METAL GLAZE 1K 5%	1/10W	R3364	1-216-295-00	METAL GLAZE 0 5%	1/10W
R2387	1-216-025-00	METAL GLAZE 100 5%	1/10W	R3365	1-216-097-00	METAL GLAZE 100K 5%	1/10W
R2388	1-216-017-00	METAL GLAZE 47 5%	1/10W	R3367	1-216-077-00	METAL GLAZE 15K 5%	1/10W
R2389	1-216-206-00	METAL GLAZE 2.2K 5%	1/8W	R3368	1-216-083-00	METAL GLAZE 27K 5%	1/10W
R2390	1-216-043-00	METAL GLAZE 560 5%	1/10W	R3369	1-216-001-00	METAL GLAZE 10 5%	1/10W
R2392	1-216-206-00	METAL GLAZE 2.2K 5%	1/8W	R3370	1-216-001-00	METAL GLAZE 10 5%	1/10W
R2393	1-216-017-00	METAL GLAZE 47 5%	1/10W	R3371	1-216-001-00	METAL GLAZE 10 5%	1/10W
R2394	1-216-049-00	METAL GLAZE 1K 5%	1/10W	R3373	1-216-673-11	METAL CHIP 8.2K 0.50%	1/10W
R2395	1-216-001-00	METAL GLAZE 10 5%	1/10W	R3374	1-216-059-00	METAL GLAZE 2.7K 5%	1/10W
R2396	1-216-206-00	METAL GLAZE 2.2K 5%	1/8W	R3375	1-216-658-11	METAL CHIP 2K 0.50%	1/10W
R2397	1-216-043-00	METAL GLAZE 560 5%	1/10W	R3376	1-216-647-11	METAL CHIP 680 0.50%	1/10W
R2399	1-216-001-00	METAL GLAZE 10 5%	1/10W	R3377	1-216-647-11	METAL CHIP 680 0.50%	1/10W
R3301	1-216-049-00	METAL GLAZE 1K 5%	1/10W	R3378	1-216-659-11	METAL CHIP 2.2K 0.50%	1/10W
R3302	1-216-001-00	METAL GLAZE 10 5%	1/10W	R3379	1-216-655-11	METAL CHIP 1.5K 0.50%	1/10W
R3303	1-216-069-00	METAL GLAZE 6.8K 5%	1/10W	R3380	1-216-661-11	METAL CHIP 2.7K 0.50%	1/10W
R3304	1-216-091-00	METAL GLAZE 56K 5%	1/10W	R3381	1-216-025-00	METAL GLAZE 100 5%	1/10W
R3306	1-216-089-00	METAL GLAZE 47K 5%	1/10W	R3382	1-216-295-00	METAL GLAZE 0 5%	1/10W
R3307	1-216-085-00	METAL GLAZE 33K 5%	1/10W	R3392	1-216-089-00	METAL GLAZE 47K 5%	1/10W
R3308	1-216-043-00	METAL GLAZE 560 5%	1/10W	R3401	1-216-057-00	METAL GLAZE 2.2K 5%	1/10W
R3309	1-216-049-00	METAL GLAZE 1K 5%	1/10W	R7312	1-216-049-00	METAL GLAZE 1K 5%	1/10W
R3310	1-216-001-00	METAL GLAZE 10 5%	1/10W	R7313	1-216-047-00	METAL GLAZE 820 5%	1/10W
R3311	1-216-081-00	METAL GLAZE 22K 5%	1/10W	R7314	1-216-057-00	METAL GLAZE 2.2K 5%	1/10W
R3312	1-216-049-00	METAL GLAZE 1K 5%	1/10W				
R3313	1-216-083-00	METAL GLAZE 27K 5%	1/10W				



REF.NO.	PART NO.	DESCRIPTION	REMARK	REF.NO.	PART NO.	DESCRIPTION	REMARK
<CRYSTAL>				<TRANSISTOR>			
X2301	1-577-071-11	VIBRATOR, CERAMIC		Q001	8-729-216-22	TRANSISTOR 2SA1162-G	
*****				Q009	8-729-422-27	TRANSISTOR 2SD601A-Q	
	*A-1306-436-A	M BOARD, COMPLETE		Q010	8-729-422-27	TRANSISTOR 2SD601A-Q	
*****				Q011	8-729-422-27	TRANSISTOR 2SD601A-Q	
*****				Q012	8-729-422-27	TRANSISTOR 2SD601A-Q	
<CAPACITOR>				<RESISTOR>			
C001	1-124-261-00	ELECT 10MF	20% 50V	R001	1-216-045-00	METAL GLAZE 680 5%	1/10W
C002	1-163-125-00	CERAMIC CHIP 220PF	5% 50V	R002	1-216-097-00	METAL GLAZE 100K 5%	1/10W
C003	1-136-161-00	FILM 0.047MF	5% 50V	R003	1-216-121-00	METAL GLAZE 1M 5%	1/10W
C004	1-126-301-11	ELECT 1MF	20% 50V	R004	1-216-073-00	METAL GLAZE 10K 5%	1/10W
C005	1-163-125-00	CERAMIC CHIP 220PF	5% 50V	R005	1-216-073-00	METAL GLAZE 10K 5%	1/10W
C014	1-124-910-11	ELECT 47MF	20% 50V	R006	1-216-065-00	METAL GLAZE 4.7K 5%	1/10W
C017	1-124-589-11	ELECT 47MF	20% 16V	R007	1-216-027-00	METAL GLAZE 120 5%	1/10W
C018	1-163-141-00	CERAMIC CHIP 0.001MF	5% 50V	R008	1-216-041-00	METAL GLAZE 470 5%	1/10W
C019	1-164-695-11	CERAMIC CHIP 0.0022MF	5% 50V	R009	1-216-027-00	METAL GLAZE 120 5%	1/10W
C020	1-163-241-11	CERAMIC CHIP 39PF	5% 50V	R011	1-216-033-00	METAL GLAZE 220 5%	1/10W
C021	1-163-239-11	CERAMIC CHIP 33PF	5% 50V	R012	1-216-033-00	METAL GLAZE 220 5%	1/10W
C029	1-163-115-00	CERAMIC CHIP 82PF	5% 50V	R013	1-216-067-00	METAL GLAZE 5.6K 5%	1/10W
C030	1-163-115-00	CERAMIC CHIP 82PF	5% 50V	R014	1-216-057-00	METAL GLAZE 2.2K 5%	1/10W
C034	1-163-125-00	CERAMIC CHIP 220PF	5% 50V	R015	1-216-089-00	METAL GLAZE 47K 5%	1/10W
C035	1-163-125-00	CERAMIC CHIP 220PF	5% 50V	R016	1-216-067-00	METAL GLAZE 5.6K 5%	1/10W
C036	1-163-125-00	CERAMIC CHIP 220PF	5% 50V	R017	1-216-067-00	METAL GLAZE 5.6K 5%	1/10W
C041	1-163-117-00	CERAMIC CHIP 100PF	5% 50V	R018	1-216-065-00	METAL GLAZE 4.7K 5%	1/10W
C042	1-163-117-00	CERAMIC CHIP 100PF	5% 50V	R019	1-216-073-00	METAL GLAZE 10K 5%	1/10W
C045	1-163-125-00	CERAMIC CHIP 220PF	5% 50V	R033	1-216-073-00	METAL GLAZE 10K 5%	1/10W
C047	1-124-261-00	ELECT 10MF	20% 50V	R034	1-216-033-00	METAL GLAZE 220 5%	1/10W
C048	1-124-261-00	ELECT 10MF	20% 50V	R035	1-216-033-00	METAL GLAZE 220 5%	1/10W
C049	1-124-261-00	ELECT 10MF	20% 50V	R036	1-216-033-00	METAL GLAZE 220 5%	1/10W
C055	1-163-809-11	CERAMIC CHIP 0.047MF	10% 25V	R037	1-216-073-00	METAL GLAZE 10K 5%	1/10W
C064	1-163-121-00	CERAMIC CHIP 150PF	5% 50V	R038	1-216-033-00	METAL GLAZE 220 5%	1/10W
C065	1-124-257-00	ELECT 2.2MF	20% 50V	R039	1-216-073-00	METAL GLAZE 10K 5%	1/10W
<DIODE>				R040	1-216-089-00	METAL GLAZE 47K 5%	1/10W
D001	8-719-404-46	DIODE MA110		R041	1-216-057-00	METAL GLAZE 2.2K 5%	1/10W
D002	8-719-404-46	DIODE MA110		R042	1-216-065-00	METAL GLAZE 4.7K 5%	1/10W
D009	8-719-404-46	DIODE MA110		R043	1-216-033-00	METAL GLAZE 220 5%	1/10W
D010	8-713-300-57	DIODE 1T33		R044	1-216-033-00	METAL GLAZE 220 5%	1/10W
D011	8-719-404-46	DIODE MA110		R045	1-216-025-00	METAL GLAZE 100 5%	1/10W
D012	8-719-404-46	DIODE MA110		R046	1-216-065-00	METAL GLAZE 4.7K 5%	1/10W
D014	8-719-404-46	DIODE MA110		R047	1-216-065-00	METAL GLAZE 4.7K 5%	1/10W
D015	8-719-404-46	DIODE MA110		R048	1-216-033-00	METAL GLAZE 220 5%	1/10W
<IC>				R049	1-216-065-00	METAL GLAZE 4.7K 5%	1/10W
IC001	8-759-169-06	IC TMC73C247-10		R050	1-216-295-00	METAL GLAZE 0 5%	1/10W
IC002	8-759-403-44	IC MN1280-S		R051	1-216-033-00	METAL GLAZE 220 5%	1/10W
<COIL>				R052	1-216-065-00	METAL GLAZE 4.7K 5%	1/10W
L001	1-408-409-00	INDUCTOR 10UH		R053	1-216-065-00	METAL GLAZE 4.7K 5%	1/10W
L002	1-410-476-11	INDUCTOR 33UH		R054	1-216-073-00	METAL GLAZE 10K 5%	1/10W
<CONNECTOR>				R055	1-216-073-00	METAL GLAZE 10K 5%	1/10W
M-39	*1-564-521-11	PLUG, CONNECTOR 6P		R056	1-216-065-00	METAL GLAZE 4.7K 5%	1/10W
M-45	*1-564-523-11	PLUG, CONNECTOR 8P		R057	1-216-065-00	METAL GLAZE 4.7K 5%	1/10W
M-001	1-573-965-21	PIN, CONNECTOR (PC BOARD) 50P		R058	1-216-065-00	METAL GLAZE 4.7K 5%	1/10W
				R059	1-216-073-00	METAL GLAZE 10K 5%	1/10W
				R060	1-216-065-00	METAL GLAZE 4.7K 5%	1/10W
				R063	1-216-033-00	METAL GLAZE 220 5%	1/10W
				R064	1-216-053-00	METAL GLAZE 1.5K 5%	1/10W
				R065	1-216-033-00	METAL GLAZE 220 5%	1/10W
				R066	1-216-033-00	METAL GLAZE 220 5%	1/10W
				R067	1-216-033-00	METAL GLAZE 220 5%	1/10W
				R068	1-216-033-00	METAL GLAZE 220 5%	1/10W

M P1

REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
R069	1-216-049-00	METAL GLAZE 1K 5%	1/10W	C3017	1-130-495-00	MYLAR 0.1MF	5% 50V
R070	1-216-033-00	METAL GLAZE 220 5%	1/10W	C3018	1-163-115-00	CERAMIC CHIP 82PF	5% 50V
R071	1-216-033-00	METAL GLAZE 220 5%	1/10W	C3019	1-164-232-11	CERAMIC CHIP 0.01MF	10% 50V
R072	1-216-033-00	METAL GLAZE 220 5%	1/10W	C3020	1-163-105-00	CERAMIC CHIP 33PF	5% 50V
R073	1-216-057-00	METAL GLAZE 2.2K 5%	1/10W	C3021	1-163-115-00	CERAMIC CHIP 82PF	5% 50V
R074	1-216-033-00	METAL GLAZE 220 5%	1/10W	C3022	1-126-301-11	ELECT 1MF	20% 50V
R075	1-216-033-00	METAL GLAZE 220 5%	1/10W	C3023	1-124-589-11	ELECT 47MF	20% 16V
R076	1-216-089-00	METAL GLAZE 47K 5%	1/10W	C3024	1-163-018-00	CERAMIC CHIP 0.0056MF	10% 50V
R077	1-216-057-00	METAL GLAZE 2.2K 5%	1/10W	C3025	1-164-343-11	CERAMIC CHIP 0.056MF	10% 25V
R078	1-216-033-00	METAL GLAZE 220 5%	1/10W	C3026	1-126-163-11	ELECT 4.7MF	20% 50V
R079	1-216-025-00	METAL GLAZE 100 5%	1/10W	C3027	1-163-275-11	CERAMIC CHIP 0.001MF	5% 50V
R080	1-216-061-00	METAL GLAZE 3.3K 5%	1/10W	C3028	1-124-589-11	ELECT 47MF	20% 16V
R081	1-216-033-00	METAL GLAZE 220 5%	1/10W	C3029	1-163-133-00	CERAMIC CHIP 470PF	5% 50V
R082	1-216-033-00	METAL GLAZE 220 5%	1/10W	C3030	1-163-037-11	CERAMIC CHIP 0.022MF	10% 25V
R083	1-216-033-00	METAL GLAZE 220 5%	1/10W	C3031	1-126-177-11	ELECT 100MF	20% 6.3V
R084	1-216-097-00	METAL GLAZE 100K 5%	1/10W	C3032	1-164-004-11	CERAMIC CHIP 0.1MF	10% 25V
R085	1-216-033-00	METAL GLAZE 220 5%	1/10W	C3033	1-164-004-11	CERAMIC CHIP 0.1MF	10% 25V
R086	1-216-033-00	METAL GLAZE 220 5%	1/10W	C3034	1-164-336-11	CERAMIC CHIP 0.33MF	25V
R087	1-216-033-00	METAL GLAZE 220 5%	1/10W	C3035	1-163-117-00	CERAMIC CHIP 100PF	5% 50V
R088	1-216-033-00	METAL GLAZE 220 5%	1/10W	C3036	1-164-004-11	CERAMIC CHIP 0.1MF	10% 25V
R089	1-216-089-00	METAL GLAZE 47K 5%	1/10W	C3037	1-124-589-11	ELECT 47MF	20% 16V
R090	1-216-033-00	METAL GLAZE 220 5%	1/10W	C3038	1-136-287-11	FILM 0.0047MF	5% 50V
R091	1-216-065-00	METAL GLAZE 4.7K 5%	1/10W	C3039	1-164-004-11	CERAMIC CHIP 0.1MF	10% 25V
R092	1-216-077-00	METAL GLAZE 15K 5%	1/10W	C3040	1-164-232-11	CERAMIC CHIP 0.01MF	10% 50V
R093	1-216-065-00	METAL GLAZE 4.7K 5%	1/10W	C3042	1-164-346-11	CERAMIC CHIP 1MF	16V
R094	1-216-033-00	METAL GLAZE 220 5%	1/10W	C3043	1-124-465-00	ELECT 0.47MF	20% 50V
R095	1-216-073-00	METAL GLAZE 10K 5%	1/10W	C3044	1-126-301-11	ELECT 1MF	20% 50V
R096	1-216-065-00	METAL GLAZE 4.7K 5%	1/10W	C3045	1-124-589-11	ELECT 47MF	20% 16V
R097	1-216-065-00	METAL GLAZE 4.7K 5%	1/10W	C3046	1-126-301-11	ELECT 1MF	20% 50V
R098	1-216-065-00	METAL GLAZE 4.7K 5%	1/10W	C3047	1-126-301-11	ELECT 1MF	20% 50V
R099	1-216-089-00	METAL GLAZE 47K 5%	1/10W	C3048	1-164-161-11	CERAMIC CHIP 0.0022MF	10% 50V
R100	1-216-025-00	METAL GLAZE 100 5%	1/10W	C3051	1-164-161-11	CERAMIC CHIP 0.0022MF	10% 50V
R101	1-216-025-00	METAL GLAZE 100 5%	1/10W	C3052	1-126-177-11	ELECT 100MF	20% 6.3V
R102	1-216-089-00	METAL GLAZE 47K 5%	1/10W	C3053	1-164-004-11	CERAMIC CHIP 0.1MF	10% 25V
R103	1-216-033-00	METAL GLAZE 220 5%	1/10W	C3054	1-126-177-11	ELECT 100MF	20% 6.3V
R104	1-216-033-00	METAL GLAZE 220 5%	1/10W	C3055	1-163-133-00	CERAMIC CHIP 470PF	5% 50V
<CRYSTAL>				C3057	1-124-589-11	ELECT 47MF	20% 16V
X001	1-579-743-11	VIBRATOR, CRYSTAL		C3058	1-163-009-11	CERAMIC CHIP 0.001MF	10% 50V
*****				C3059	1-164-222-11	CERAMIC CHIP 0.22MF	25V
*A-1195-066-A	P1 BOARD, COMPLETE			C3060	1-124-589-11	ELECT 47MF	20% 16V
*****				C3064	1-163-123-00	CERAMIC CHIP 180PF	5% 50V
<CAPACITOR>				C3065	1-124-589-11	ELECT 47MF	20% 16V
C3001	1-124-589-11	ELECT 47MF	20% 16V	C3066	1-164-004-11	CERAMIC CHIP 0.1MF	10% 25V
C3002	1-164-346-11	CERAMIC CHIP 1MF	16V	C3067	1-124-589-11	ELECT 47MF	20% 16V
C3003	1-164-232-11	CERAMIC CHIP 0.01MF	10% 50V	C3069	1-164-232-11	CERAMIC CHIP 0.01MF	10% 50V
C3004	1-163-119-00	CERAMIC CHIP 120PF	5% 50V	C3070	1-126-177-11	ELECT 100MF	20% 6.3V
C3005	1-163-235-11	CERAMIC CHIP 22PF	5% 50V	C3071	1-124-589-11	ELECT 47MF	20% 16V
C3006	1-164-232-11	CERAMIC CHIP 0.01MF	10% 50V	C3072	1-124-589-11	ELECT 47MF	20% 16V
C3007	1-164-005-11	CERAMIC CHIP 0.47MF	25V	C3073	1-124-589-11	ELECT 47MF	20% 16V
C3008	1-164-004-11	CERAMIC CHIP 0.1MF	10% 25V	C3074	1-163-121-00	CERAMIC CHIP 150PF	5% 50V
C3009	1-124-925-11	ELECT 2.2MF	20% 50V	C3076	1-164-004-11	CERAMIC CHIP 0.1MF	10% 25V
C3010	1-163-145-00	CERAMIC CHIP 0.0015MF	5% 50V	C3077	1-164-005-11	CERAMIC CHIP 0.47MF	25V
C3011	1-163-018-00	CERAMIC CHIP 0.0056MF	10% 50V	C3081	1-163-095-00	CERAMIC CHIP 12PF	5% 50V
C3012	1-164-336-11	CERAMIC CHIP 0.33MF	25V	C3100	1-164-004-11	CERAMIC CHIP 0.1MF	10% 25V
C3013	1-164-222-11	CERAMIC CHIP 0.22MF	25V	C3101	1-163-115-00	CERAMIC CHIP 82PF	5% 50V
C3014	1-164-004-11	CERAMIC CHIP 0.1MF	10% 25V	<CONNECTOR>			
C3015	1-164-232-11	CERAMIC CHIP 0.01MF	10% 50V	CN151	1-573-965-21	PIN, CONNECTOR (PC BOARD)	50P
C3016	1-163-107-00	CERAMIC CHIP 39PF	5% 50V	<DIODE>			
				D3003	8-719-158-15	DIODE RD5.6SB	

REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
D3004	8-719-404-46	DIODE MA110		R3014	1-216-065-00	METAL GLAZE 4.7K 5%	1/10W
D3009	8-719-404-46	DIODE MA110		R3015	1-216-049-00	METAL GLAZE 1K 5%	1/10W
	<IC>			R3017	1-216-083-00	METAL GLAZE 27K 5%	1/10W
IC3001	8-759-046-25	IC TDA3769		R3018	1-216-097-00	METAL GLAZE 100K 5%	1/10W
IC3002	8-759-009-46	IC MC14528BF		R3019	1-216-077-00	METAL GLAZE 15K 5%	1/10W
IC3003	8-759-513-48	IC TDA2595/V9		R3020	1-216-099-00	METAL GLAZE 120K 5%	1/10W
IC3004	8-759-088-90	IC SDA9187X		R3021	1-216-075-00	METAL GLAZE 12K 5%	1/10W
IC3005	8-759-088-91	IC SDA9188X		R3023	1-216-065-00	METAL GLAZE 4.7K 5%	1/10W
IC3006	8-759-112-06	IC UPC78N05H		R3025	1-216-015-00	METAL GLAZE 39 5%	1/10W
IC3007	8-759-046-27	IC SDA9086-3		R3026	1-216-041-00	METAL GLAZE 470 5%	1/10W
IC3008	8-759-112-06	IC UPC78N05H		R3027	1-216-061-00	METAL GLAZE 3.3K 5%	1/10W
	<COIL>			R3028	1-216-027-00	METAL GLAZE 120 5%	1/10W
L3001	1-410-476-11	INDUCTOR 33UH		R3030	1-216-073-00	METAL GLAZE 10K 5%	1/10W
L3002	1-408-424-00	INDUCTOR 180UH		R3031	1-216-047-00	METAL GLAZE 820 5%	1/10W
L3003	1-408-424-00	INDUCTOR 180UH		R3032	1-216-041-00	METAL GLAZE 470 5%	1/10W
L3004	1-410-470-11	INDUCTOR 10UH		R3033	1-216-295-00	METAL GLAZE 0 5%	1/10W
L3005	1-410-472-41	INDUCTOR 15UH		R3034	1-216-041-00	METAL GLAZE 470 5%	1/10W
L3006	1-412-788-41	INDUCTOR 10UH		R3035	1-216-045-00	METAL GLAZE 680 5%	1/10W
L3007	1-410-472-41	INDUCTOR 15UH		R3036	1-216-045-00	METAL GLAZE 680 5%	1/10W
L3008	1-410-472-41	INDUCTOR 15UH		R3037	1-216-083-00	METAL GLAZE 27K 5%	1/10W
L3009	1-410-472-41	INDUCTOR 15UH		R3038	1-216-049-00	METAL GLAZE 1K 5%	1/10W
L3010	1-410-466-41	INDUCTOR 4.7UH		R3039	1-216-073-00	METAL GLAZE 10K 5%	1/10W
L3011	1-410-470-11	INDUCTOR 10UH		R3040	1-216-065-00	METAL GLAZE 4.7K 5%	1/10W
L3012	1-410-676-31	INDUCTOR 150UH		R3041	1-216-073-00	METAL GLAZE 10K 5%	1/10W
L3013	1-412-911-11	INDUCTOR, FERRITE BEAD		R3042	1-216-057-00	METAL GLAZE 2.2K 5%	1/10W
L3014	1-412-911-11	INDUCTOR, FERRITE BEAD		R3043	1-216-099-00	METAL GLAZE 120K 5%	1/10W
L3015	1-412-911-11	INDUCTOR, FERRITE BEAD		R3044	1-216-089-00	METAL GLAZE 47K 5%	1/10W
L3100	1-412-799-41	INDUCTOR 82UH		R3045	1-216-295-00	METAL GLAZE 0 5%	1/10W
	<TRANSISTOR>			R3050	1-216-033-00	METAL GLAZE 220 5%	1/10W
Q3003	8-729-216-22	TRANSISTOR 2SA1162-G		R3052	1-216-033-00	METAL GLAZE 220 5%	1/10W
Q3004	8-729-422-27	TRANSISTOR 2SD601A-Q		R3053	1-216-037-00	METAL GLAZE 330 5%	1/10W
Q3006	8-729-422-27	TRANSISTOR 2SD601A-Q		R3055	1-216-063-00	METAL GLAZE 3.9K 5%	1/10W
Q3007	8-729-216-22	TRANSISTOR 2SA1162-G		R3056	1-216-059-00	METAL GLAZE 2.7K 5%	1/10W
Q3008	8-729-422-27	TRANSISTOR 2SD601A-Q		R3057	1-216-081-00	METAL GLAZE 22K 5%	1/10W
Q3009	8-729-216-22	TRANSISTOR 2SA1162-G		R3058	1-216-049-00	METAL GLAZE 1K 5%	1/10W
Q3010	8-729-422-27	TRANSISTOR 2SD601A-Q		R3059	1-216-079-00	METAL GLAZE 18K 5%	1/10W
Q3011	8-729-216-22	TRANSISTOR 2SA1162-G		R3060	1-216-065-00	METAL GLAZE 4.7K 5%	1/10W
Q3012	8-729-422-27	TRANSISTOR 2SD601A-Q		R3061	1-216-049-00	METAL GLAZE 1K 5%	1/10W
Q3013	8-729-422-27	TRANSISTOR 2SD601A-Q		R3062	1-216-049-00	METAL GLAZE 1K 5%	1/10W
Q3014	8-729-422-27	TRANSISTOR 2SD601A-Q		R3063	1-216-025-00	METAL GLAZE 100 5%	1/10W
Q3100	8-729-216-22	TRANSISTOR 2SA1162-G		R3064	1-216-295-00	METAL GLAZE 0 5%	1/10W
	<RESISTOR>			R3065	1-216-073-00	METAL GLAZE 10K 5%	1/10W
JR3	1-216-295-00	METAL GLAZE 0 5%	1/10W	R3066	1-216-053-00	METAL GLAZE 1.5K 5%	1/10W
R3001	1-216-085-00	METAL GLAZE 33K 5%	1/10W	R3067	1-216-295-00	METAL GLAZE 0 5%	1/10W
R3002	1-216-089-00	METAL GLAZE 47K 5%	1/10W	R3069	1-216-689-11	METAL GLAZE 39K 5%	1/10W
R3003	1-216-067-00	METAL GLAZE 5.6K 5%	1/10W	R3071	1-216-049-00	METAL GLAZE 1K 5%	1/10W
R3004	1-216-091-00	METAL GLAZE 56K 5%	1/10W	R3073	1-216-049-00	METAL GLAZE 1K 5%	1/10W
R3005	1-216-689-11	METAL GLAZE 39K 5%	1/10W	R3074	1-216-295-00	METAL GLAZE 0 5%	1/10W
R3006	1-216-097-00	METAL GLAZE 100K 5%	1/10W	R3075	1-216-049-00	METAL GLAZE 1K 5%	1/10W
R3007	1-216-079-00	METAL GLAZE 18K 5%	1/10W	R3076	1-216-043-00	METAL GLAZE 560 5%	1/10W
R3008	1-216-073-00	METAL GLAZE 10K 5%	1/10W	R3077	1-216-037-00	METAL GLAZE 330 5%	1/10W
R3009	1-216-041-00	METAL GLAZE 470 5%	1/10W	R3078	1-216-044-00	METAL GLAZE 620 5%	1/10W
R3010	1-216-049-00	METAL GLAZE 1K 5%	1/10W	R3079	1-216-040-00	METAL GLAZE 430 5%	1/10W
R3011	1-216-073-00	METAL GLAZE 10K 5%	1/10W	R3082	1-216-029-00	METAL GLAZE 150 5%	1/10W
R3012	1-216-053-00	METAL GLAZE 1.5K 5%	1/10W	R3084	1-216-049-00	METAL GLAZE 1K 5%	1/10W
R3013	1-216-065-00	METAL GLAZE 4.7K 5%	1/10W	R3085	1-216-119-00	METAL GLAZE 820K 5%	1/10W
				R3086	1-216-065-00	METAL GLAZE 4.7K 5%	1/10W
				R3087	1-216-081-00	METAL GLAZE 22K 5%	1/10W
				R3088	1-216-089-00	METAL GLAZE 47K 5%	1/10W
				R3089	1-216-033-00	METAL GLAZE 220 5%	1/10W
				R3090	1-216-089-00	METAL GLAZE 47K 5%	1/10W
				R3091	1-216-053-00	METAL GLAZE 1.5K 5%	1/10W
				R3092	1-216-053-00	METAL GLAZE 1.5K 5%	1/10W

P1 X2

REF.NO.	PART NO.	DESCRIPTION	REMARK	REF.NO.	PART NO.	DESCRIPTION	REMARK
R3098	1-216-296-00	METAL GLAZE 0 5%	1/8W	C2541	1-163-139-00	CERAMIC CHIP 820PF	5% 50V
R3099	1-216-296-00	METAL GLAZE 0 5%	1/8W	C2542	1-124-478-11	ELECT 100MF	20% 25V
R3100	1-216-296-00	METAL GLAZE 0 5%	1/8W	C2543	1-124-252-00	ELECT 0.33MF	20% 50V
R3101	1-216-051-00	METAL GLAZE 1.2K 5%	1/10W	C2544	1-164-161-11	CERAMIC CHIP 0.0022MF	10% 50V
R3102	1-216-047-00	METAL GLAZE 820 5%	1/10W	C2545	1-126-301-11	ELECT 1MF	20% 50V
R3103	1-216-057-00	METAL GLAZE 2.2K 5%	1/10W	C2546	1-126-163-11	ELECT 4.7MF	20% 50V
R3104	1-216-049-00	METAL GLAZE 1K 5%	1/10W	C2547	1-126-163-11	ELECT 4.7MF	20% 25V
<VARIABLE RESISTOR>				C2548	1-163-809-11	CERAMIC CHIP 0.047MF	10% 25V
RV3001	1-241-630-11	RES, ADJ, CARBON 10K		C2549	1-126-163-11	ELECT 4.7MF	20% 50V
RV3002	1-238-019-11	RES, ADJ, CARBON 47K		C2550	1-126-163-11	ELECT 4.7MF	20% 25V
RV3003	1-241-630-11	RES, ADJ, CARBON 10K		C2551	1-126-301-11	ELECT 1MF	20% 50V
<CRYSTAL>				C2552	1-126-163-11	ELECT 4.7MF	20% 50V
X3001	1-567-505-11	OSCILLATOR, CRYSTAL		C2553	1-126-301-11	ELECT 1MF	20% 50V
*****				C2554	1-124-234-00	ELECT 22MF	20% 16V
*A-1394-444-A	X2 BOARD, COMPLETE			C2555	1-164-004-11	CERAMIC CHIP 0.1MF	10% 25V
*****				C2556	1-124-257-00	ELECT 2.2MF	20% 50V
<CAPACITOR>				C2557	1-124-234-00	ELECT 22MF	20% 16V
C2501	1-163-020-00	CERAMIC CHIP 0.0082MF	10% 50V	C2558	1-126-301-11	ELECT 1MF	20% 50V
C2502	1-163-020-00	CERAMIC CHIP 0.0082MF	10% 50V	C2559	1-164-004-11	CERAMIC CHIP 0.1MF	10% 25V
C2503	1-163-001-11	CERAMIC CHIP 220PF	10% 50V	C2560	1-164-161-11	CERAMIC CHIP 0.0022MF	10% 50V
C2504	1-126-163-11	ELECT 4.7MF	20% 50V	C2561	1-126-301-11	ELECT 1MF	20% 50V
C2505	1-163-020-00	CERAMIC CHIP 0.0082MF	10% 50V	C2562	1-163-263-11	CERAMIC CHIP 330PF	5% 50V
C2506	1-163-020-00	CERAMIC CHIP 0.0082MF	10% 50V	C2563	1-163-257-11	CERAMIC CHIP 180PF	5% 50V
C2507	1-163-017-00	CERAMIC CHIP 0.0047MF	10% 50V	C2564	1-126-301-11	ELECT 1MF	20% 50V
C2508	1-163-020-00	CERAMIC CHIP 0.0082MF	10% 50V	C2565	1-126-163-11	ELECT 4.7MF	20% 50V
C2509	1-163-020-00	CERAMIC CHIP 0.0082MF	10% 50V	C2566	1-126-163-11	ELECT 4.7MF	20% 50V
C2510	1-163-989-11	CERAMIC CHIP 0.033MF	10% 25V	C2567	1-126-163-11	ELECT 4.7MF	20% 50V
C2511	1-164-004-11	CERAMIC CHIP 0.1MF	10% 25V	C2568	1-163-263-11	CERAMIC CHIP 330PF	5% 50V
C2512	1-164-004-11	CERAMIC CHIP 0.1MF	10% 25V	C2569	1-163-257-11	CERAMIC CHIP 180PF	5% 50V
C2513	1-164-004-11	CERAMIC CHIP 0.1MF	10% 25V	C2570	1-124-234-00	ELECT 22MF	20% 16V
C2514	1-164-004-11	CERAMIC CHIP 0.1MF	10% 25V	C2571	1-126-301-11	ELECT 1MF	20% 50V
C2515	1-164-004-11	CERAMIC CHIP 0.1MF	10% 25V	C2572	1-126-163-11	ELECT 4.7MF	20% 50V
C2516	1-164-232-11	CERAMIC CHIP 0.01MF	10% 50V	C2573	1-124-234-00	ELECT 22MF	20% 16V
C2517	1-126-157-11	ELECT 10MF	20% 16V	C2574	1-126-301-11	ELECT 1MF	20% 50V
C2518	1-126-163-11	ELECT 4.7MF	20% 50V	C2575	1-126-301-11	ELECT 1MF	20% 50V
C2519	1-126-301-11	ELECT 1MF	20% 50V	C2576	1-126-301-11	ELECT 1MF	20% 50V
C2520	1-126-163-11	ELECT 4.7MF	20% 50V	C2577	1-126-163-11	ELECT 4.7MF	20% 50V
C2521	1-163-809-11	CERAMIC CHIP 0.047MF	10% 25V	C2578	1-126-163-11	ELECT 4.7MF	20% 50V
C2522	1-124-252-00	ELECT 0.33MF	20% 50V	C2579	1-126-103-11	ELECT 470MF	20% 16V
C2523	1-126-163-11	ELECT 4.7MF	20% 50V	C2580	1-124-478-11	ELECT 100MF	20% 25V
C2524	1-164-004-11	CERAMIC CHIP 0.1MF	10% 25V	C2581	1-163-109-00	CERAMIC CHIP 47PF	5% 50V
C2525	1-126-163-11	ELECT 4.7MF	20% 50V	C2582	1-124-477-11	ELECT 47MF	20% 25V
C2526	1-164-004-11	CERAMIC CHIP 0.1MF	10% 25V	C2583	1-126-163-11	ELECT 4.7MF	20% 50V
C2527	1-126-157-11	ELECT 10MF	20% 16V	C2584	1-163-109-00	CERAMIC CHIP 47PF	5% 50V
C2528	1-124-465-00	ELECT 0.47MF	20% 50V	C2585	1-126-163-11	ELECT 4.7MF	20% 50V
C2529	1-163-989-11	CERAMIC CHIP 0.033MF	10% 25V	C2586	1-163-009-11	CERAMIC CHIP 0.001MF	10% 50V
C2530	1-164-182-11	CERAMIC CHIP 0.0033MF	10% 50V	C2587	1-126-163-11	ELECT 4.7MF	20% 50V
C2531	1-126-301-11	ELECT 1MF	20% 50V	C2588	1-126-163-11	ELECT 4.7MF	20% 50V
C2532	1-126-301-11	ELECT 1MF	20% 50V	C2589	1-126-163-11	ELECT 4.7MF	20% 50V
C2533	1-124-261-00	ELECT 10MF	20% 50V	C2590	1-126-163-11	ELECT 4.7MF	20% 50V
C2534	1-163-257-11	CERAMIC CHIP 180PF	5% 50V	C2591	1-124-478-11	ELECT 100MF	20% 25V
C2535	1-164-004-11	CERAMIC CHIP 0.1MF	10% 25V	<DIODE>			
C2536	1-164-004-11	CERAMIC CHIP 0.1MF	10% 25V	D2501	8-719-104-34	DIODE 1S2836	
C2537	1-126-163-11	ELECT 4.7MF	20% 50V	D2502	8-719-106-88	DIODE RD15M-B1	
C2538	1-126-163-11	ELECT 4.7MF	20% 50V	D2503	8-719-106-88	DIODE RD15M-B1	
C2539	1-164-232-11	CERAMIC CHIP 0.01MF	10% 50V	D2504	8-719-106-88	DIODE RD15M-B1	
C2540	1-164-004-11	CERAMIC CHIP 0.1MF	10% 25V	<IC>			
				IC2501	8-759-031-31	IC MC33174M	
				IC2502	8-752-050-75	IC CXA1373Q	

X2

REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
IC2503	8-759-604-70	IC M51523AL		R2549	1-216-065-00	METAL GLAZE 4.7K 5%	1/10W
IC2504	8-759-031-31	IC MC33174M		R2550	1-216-088-00	METAL GLAZE 43K 5%	1/10W
IC2505	8-759-604-70	IC M51523AL		R2551	1-216-088-00	METAL GLAZE 43K 5%	1/10W
IC2506	8-759-106-22	IC UPD4052BG		R2552	1-216-049-00	METAL GLAZE 1K 5%	1/10W
IC2507	8-759-038-68	IC MC33172ML					
IC2508	8-759-038-68	IC MC33172ML		R2553	1-216-078-00	METAL GLAZE 16K 5%	1/10W
		<JACK>		R2554	1-216-082-00	METAL GLAZE 24K 5%	1/10W
J2501	1-573-966-11	PIN, CONNECTOR (PC BOARD) 36P		R2555	1-216-089-00	METAL GLAZE 47K 5%	1/10W
		<TRANSISTOR>		R2556	1-216-049-00	METAL GLAZE 1K 5%	1/10W
Q2501	8-729-230-49	TRANSISTOR 2SC2712-YG		R2557	1-216-085-00	METAL GLAZE 33K 5%	1/10W
		<RESISTOR>					
R2501	1-216-079-00	METAL GLAZE 18K 5%	1/10W	R2558	1-216-088-00	METAL GLAZE 43K 5%	1/10W
R2502	1-216-097-00	METAL GLAZE 100K 5%	1/10W	R2559	1-216-091-00	METAL GLAZE 56K 5%	1/10W
R2503	1-216-091-00	METAL GLAZE 56K 5%	1/10W	R2560	1-216-103-00	METAL GLAZE 180K 5%	1/10W
R2504	1-216-109-00	METAL GLAZE 330K 5%	1/10W	R2561	1-216-097-00	METAL GLAZE 100K 5%	1/10W
R2505	1-216-109-00	METAL GLAZE 330K 5%	1/10W	R2562	1-216-089-00	METAL GLAZE 47K 5%	1/10W
R2506	1-216-101-00	METAL GLAZE 150K 5%	1/10W				
R2507	1-216-091-00	METAL GLAZE 56K 5%	1/10W	R2563	1-216-088-00	METAL GLAZE 43K 5%	1/10W
R2508	1-216-079-00	METAL GLAZE 18K 5%	1/10W	R2564	1-216-088-00	METAL GLAZE 43K 5%	1/10W
R2509	1-216-130-11	METAL GLAZE 2.4M 5%	1/10W	R2565	1-216-103-00	METAL GLAZE 180K 5%	1/10W
R2510	1-216-097-00	METAL GLAZE 100K 5%	1/10W	R2566	1-216-073-00	METAL GLAZE 10K 5%	1/10W
R2511	1-216-085-00	METAL GLAZE 33K 5%	1/10W	R2567	1-216-073-00	METAL GLAZE 10K 5%	1/10W
R2512	1-216-103-00	METAL GLAZE 180K 5%	1/10W				
R2513	1-216-085-00	METAL GLAZE 33K 5%	1/10W	R2568	1-216-049-00	METAL GLAZE 1K 5%	1/10W
R2514	1-216-103-00	METAL GLAZE 180K 5%	1/10W	R2569	1-216-097-00	METAL GLAZE 100K 5%	1/10W
R2515	1-216-073-00	METAL GLAZE 10K 5%	1/10W	R2570	1-216-091-00	METAL GLAZE 56K 5%	1/10W
R2516	1-216-065-00	METAL GLAZE 4.7K 5%	1/10W	R2571	1-216-078-00	METAL GLAZE 16K 5%	1/10W
R2517	1-216-133-00	METAL GLAZE 3.3M 5%	1/10W	R2572	1-216-049-00	METAL GLAZE 1K 5%	1/10W
R2518	1-216-072-00	METAL GLAZE 9.1K 5%	1/10W				
R2519	1-216-133-00	METAL GLAZE 3.3M 5%	1/10W	R2573	1-216-082-00	METAL GLAZE 24K 5%	1/10W
R2520	1-216-133-00	METAL GLAZE 3.3M 5%	1/10W	R2574	1-216-085-00	METAL GLAZE 33K 5%	1/10W
R2521	1-216-133-00	METAL GLAZE 3.3M 5%	1/10W	R2575	1-216-089-00	METAL GLAZE 47K 5%	1/10W
R2522	1-216-061-00	METAL GLAZE 3.3K 5%	1/10W	R2576	1-216-049-00	METAL GLAZE 1K 5%	1/10W
R2523	1-216-077-00	METAL GLAZE 15K 5%	1/10W	R2577	1-216-081-00	METAL GLAZE 22K 5%	1/10W
R2524	1-216-129-00	METAL GLAZE 2.2M 5%	1/10W				
R2526	1-216-133-00	METAL GLAZE 3.3M 5%	1/10W	R2578	1-216-081-00	METAL GLAZE 22K 5%	1/10W
R2527	1-216-133-00	METAL GLAZE 3.3M 5%	1/10W	R2579	1-216-049-00	METAL GLAZE 1K 5%	1/10W
R2528	1-216-081-00	METAL GLAZE 22K 5%	1/10W	R2580	1-216-081-00	METAL GLAZE 22K 5%	1/10W
R2529	1-216-081-00	METAL GLAZE 22K 5%	1/10W	R2581	1-216-081-00	METAL GLAZE 22K 5%	1/10W
R2530	1-216-133-00	METAL GLAZE 3.3M 5%	1/10W	R2582	1-216-083-00	METAL GLAZE 27K 5%	1/10W
R2531	1-216-089-00	METAL GLAZE 47K 5%	1/10W				
R2532	1-216-133-00	METAL GLAZE 3.3M 5%	1/10W	R2583	1-216-083-00	METAL GLAZE 27K 5%	1/10W
R2533	1-216-089-00	METAL GLAZE 47K 5%	1/10W	R2584	1-216-081-00	METAL GLAZE 22K 5%	1/10W
R2534	1-216-073-00	METAL GLAZE 10K 5%	1/10W	R2585	1-216-073-00	METAL GLAZE 10K 5%	1/10W
R2535	1-216-073-00	METAL GLAZE 10K 5%	1/10W	R2586	1-216-085-00	METAL GLAZE 33K 5%	1/10W
R2536	1-216-129-00	METAL GLAZE 2.2M 5%	1/10W	R2587	1-216-085-00	METAL GLAZE 33K 5%	1/10W
R2537	1-216-077-00	METAL GLAZE 15K 5%	1/10W				
R2539	1-216-061-00	METAL GLAZE 3.3K 5%	1/10W	R2588	1-216-085-00	METAL GLAZE 33K 5%	1/10W
R2540	1-216-075-00	METAL GLAZE 12K 5%	1/10W	R2589	1-216-081-00	METAL GLAZE 22K 5%	1/10W
R2541	1-216-069-00	METAL GLAZE 6.8K 5%	1/10W	R2590	1-216-079-00	METAL GLAZE 18K 5%	1/10W
R2542	1-216-081-00	METAL GLAZE 22K 5%	1/10W	R2591	1-216-073-00	METAL GLAZE 10K 5%	1/10W
R2543	1-216-081-00	METAL GLAZE 22K 5%	1/10W	R2592	1-216-073-00	METAL GLAZE 10K 5%	1/10W
R2544	1-216-073-00	METAL GLAZE 10K 5%	1/10W				
R2545	1-216-048-00	METAL GLAZE 910 5%	1/10W	R2593	1-216-079-00	METAL GLAZE 18K 5%	1/10W
R2546	1-216-133-00	METAL GLAZE 3.3M 5%	1/10W	R2594	1-216-073-00	METAL GLAZE 10K 5%	1/10W
R2547	1-216-133-00	METAL GLAZE 3.3M 5%	1/10W	R2595	1-216-089-00	METAL GLAZE 47K 5%	1/10W
R2548	1-216-073-00	METAL GLAZE 10K 5%	1/10W	R2596	1-216-049-00	METAL GLAZE 1K 5%	1/10W
				R2597	1-216-049-00	METAL GLAZE 1K 5%	1/10W
				R2598	1-216-089-00	METAL GLAZE 47K 5%	1/10W
				R2599	1-216-073-00	METAL GLAZE 10K 5%	1/10W
				R2600	1-216-049-00	METAL GLAZE 1K 5%	1/10W
				R2601	1-216-089-00	METAL GLAZE 47K 5%	1/10W
				R2602	1-216-073-00	METAL GLAZE 10K 5%	1/10W
				R2604	1-216-089-00	METAL GLAZE 47K 5%	1/10W
				R2605	1-216-049-00	METAL GLAZE 1K 5%	1/10W
				R2606	1-216-049-00	METAL GLAZE 1K 5%	1/10W
				R2610	1-216-125-00	METAL GLAZE 1.5M 5%	1/10W
				R2611	1-216-125-00	METAL GLAZE 1.5M 5%	1/10W
				R2612	1-216-125-00	METAL GLAZE 1.5M 5%	1/10W
				R2613	1-216-125-00	METAL GLAZE 1.5M 5%	1/10W
				R2614	1-216-125-00	METAL GLAZE 1.5M 5%	1/10W
				R2615	1-216-125-00	METAL GLAZE 1.5M 5%	1/10W
				R2616	1-216-125-00	METAL GLAZE 1.5M 5%	1/10W

X2 Y2


REF.NO.	PART NO.	DESCRIPTION	REMARK	REF.NO.	PART NO.	DESCRIPTION	REMARK
R2617	1-216-125-00	METAL GLAZE 1.5M 5%	1/10W	C481	1-124-768-11	ELECT 4.7MF	20% 50V
R2618	1-216-061-00	METAL GLAZE 3.3K 5%	1/10W	C482	1-126-163-11	ELECT 4.7MF	20% 50V
R2619	1-216-049-00	METAL GLAZE 1K 5%	1/10W	C483	1-163-113-00	CERAMIC CHIP 68PF	5% 50V

*A-1394-443-A	Y2 BOARD, COMPLETE			C484	1-163-113-00	CERAMIC CHIP 68PF	5% 50V

<CAPACITOR>				<DIODE>			
C401	1-124-234-00	ELECT 22MF	20% 16V	D405	8-719-107-13	DIODE RD18M-B1	
C424	1-126-301-11	ELECT 1MF	20% 50V	D406	8-719-107-13	DIODE RD18M-B1	
C425	1-126-301-11	ELECT 1MF	20% 50V	D407	8-719-107-13	DIODE RD18M-B1	
C426	1-126-301-11	ELECT 1MF	20% 50V	D408	8-719-105-83	DIODE RD5.1M-B3	
C427	1-124-465-00	ELECT 0.47MF	20% 50V	D409	8-719-981-50	DIODE RB100A	
C428	1-126-163-11	ELECT 4.7MF	20% 50V	D410	8-719-981-50	DIODE RB100A	
C429	1-124-478-11	ELECT 100MF	20% 25V	D413	8-719-158-19	DIODE RD6.25B	
C430	1-124-261-00	ELECT 10MF	20% 50V	D414	8-719-158-55	DIODE RD155B	
C431	1-126-301-11	ELECT 1MF	20% 50V	D415	8-719-158-55	DIODE RD155B	
C432	1-126-301-11	ELECT 1MF	20% 50V	<IC>			
C433	1-131-347-00	TANTALUM 1MF	20% 16V	IC403	8-759-996-43	IC RC4558PS	
C434	1-126-301-11	ELECT 1MF	20% 50V	IC404	8-759-067-24	IC 24CO4A1/P	
C435	1-130-309-00	FILM 0.033MF	5% 100V	IC406	8-752-037-24	IC CXA1264AS	
C436	1-126-301-11	ELECT 1MF	20% 50V	IC407	8-759-245-75	IC TA8184P	
C437	1-130-487-00	MYLAR 0.022MF	5% 50V	IC408	8-752-057-18	IC CXA1315P	
C438	1-126-301-11	ELECT 1MF	20% 50V	<TRANSISTOR>			
C439	1-124-034-51	ELECT 33MF	20% 16V	Q404	8-729-216-22	TRANSISTOR 2SA1162-G	
C440	1-126-301-11	ELECT 1MF	20% 50V	Q405	8-729-216-22	TRANSISTOR 2SA1162-G	
C441	1-126-301-11	ELECT 1MF	20% 50V	Q409	8-729-422-27	TRANSISTOR 2SD601A-Q	
C442	1-124-261-00	ELECT 10MF	20% 50V	Q410	8-729-422-27	TRANSISTOR 2SD601A-Q	
C443	1-124-589-11	ELECT 47MF	20% 16V	<RESISTOR>			
C446	1-124-234-00	ELECT 22MF	20% 16V	R447	1-216-033-00	METAL GLAZE 220 5%	1/10W
C447	1-126-301-11	ELECT 1MF	20% 50V	R453	1-216-033-00	METAL GLAZE 220 5%	1/10W
C448	1-136-170-00	FILM 0.27MF	5% 50V	R464	1-216-081-00	METAL GLAZE 22K 5%	1/10W
C449	1-163-009-11	CERAMIC CHIP 0.001MF	10% 50V	R465	1-216-081-00	METAL GLAZE 22K 5%	1/10W
C450	1-130-475-00	MYLAR 0.0022MF	5% 50V	R466	1-216-025-00	METAL GLAZE 100 5%	1/10W
C451	1-124-261-00	ELECT 10MF	20% 50V	R467	1-216-033-00	METAL GLAZE 220 5%	1/10W
C452	1-124-261-00	ELECT 10MF	20% 50V	R468	1-216-033-00	METAL GLAZE 220 5%	1/10W
C453	1-130-475-00	MYLAR 0.0022MF	5% 50V	R469	1-216-055-00	METAL GLAZE 1.8K 5%	1/10W
C454	1-131-368-00	TANTALUM 3.3MF	10% 16V	R470	1-216-033-00	METAL GLAZE 220 5%	1/10W
C455	1-131-347-00	TANTALUM 1MF	20% 16V	R471	1-216-033-00	METAL GLAZE 220 5%	1/10W
C456	1-136-171-00	FILM 0.33MF	5% 50V	R472	1-216-686-11	METAL CHIP 30K 0.50%	1/10W
C457	1-136-175-00	FILM 0.68MF	5% 50V	R473	1-216-295-00	METAL GLAZE 0 5%	1/10W
C458	1-126-101-11	ELECT 100MF	20% 16V	R474	1-216-295-00	METAL GLAZE 0 5%	1/10W
C459	1-126-101-11	ELECT 100MF	20% 16V	R475	1-216-055-00	METAL GLAZE 1.8K 5%	1/10W
C460	1-126-101-11	ELECT 100MF	20% 16V	R476	1-216-669-11	METAL CHIP 5.6K 0.50%	1/10W
C461	1-124-499-11	ELECT 1MF	20% 50V	R477	1-216-675-11	METAL CHIP 10K 0.50%	1/10W
C462	1-124-499-11	ELECT 1MF	20% 50V	R478	1-216-089-00	METAL GLAZE 47K 5%	1/10W
C465	1-130-485-00	MYLAR 0.015MF	5% 50V	R479	1-216-669-11	METAL CHIP 5.6K 0.50%	1/10W
C466	1-130-485-00	MYLAR 0.015MF	5% 50V	R480	1-216-675-11	METAL CHIP 10K 0.50%	1/10W
C467	1-136-169-00	FILM 0.22MF	5% 50V	R481	1-216-089-00	METAL GLAZE 47K 5%	1/10W
C468	1-136-169-00	FILM 0.22MF	5% 50V	R482	1-216-089-00	METAL GLAZE 47K 5%	1/10W
C469	1-126-157-11	ELECT 10MF	20% 16V	R483	1-216-089-00	METAL GLAZE 47K 5%	1/10W
C470	1-126-157-11	ELECT 10MF	20% 16V	R485	1-216-073-00	METAL GLAZE 10K 5%	1/10W
C471	1-124-589-11	ELECT 47MF	20% 16V	R486	1-216-073-00	METAL GLAZE 10K 5%	1/10W
C472	1-164-232-11	CERAMIC CHIP 0.01MF	10% 50V	R488	1-216-295-00	METAL GLAZE 0 5%	1/10W
C473	1-164-232-11	CERAMIC CHIP 0.01MF	10% 50V	R494	1-216-025-00	METAL GLAZE 100 5%	1/10W
C474	1-124-234-00	ELECT 22MF	20% 16V	R495	1-216-025-00	METAL GLAZE 100 5%	1/10W
C475	1-164-232-11	CERAMIC CHIP 0.01MF	10% 50V				
C476	1-124-234-00	ELECT 22MF	20% 16V				
C477	1-164-232-11	CERAMIC CHIP 0.01MF	10% 50V				
C478	1-124-478-11	ELECT 100MF	20% 25V				
C479	1-126-163-11	ELECT 4.7MF	20% 50V				
C480	1-124-768-11	ELECT 4.7MF	20% 50V				

The components identified by shading and mark Δ are critical for safety. Replace only with part number specified.

Les composants identifiés par une trame et une marque Δ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifique.



REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
R496	1-216-025-00	METAL GLAZE	100 5% 1/10W	C619	1-164-735-11	CAP, CERAMIC 1500PF	
R497	1-216-033-00	METAL GLAZE	220 5% 1/10W	C620	1-136-721-21	FILM 1.5MF	10% 400V
R498	1-216-025-00	METAL GLAZE	100 5% 1/10W	C621	1-164-143-11	CERAMIC 0.001MF	10% 1KV
R499	1-216-025-00	METAL GLAZE	100 5% 1/10W	C622	1-136-853-11	FILM 0.56MF	5% 200V
R500	1-216-081-00	METAL GLAZE	22K 5% 1/10W	C623	1-137-087-11	FILM 0.068MF	3% 0
R501	1-216-669-11	METAL CHIP	5.6K 0.50% 1/10W	C624	1-126-771-11	ELECT 100MF	20% 160V
R502	1-216-033-00	METAL GLAZE	220 5% 1/10W	C625	1-126-183-11	ELECT 1000MF	20% 16V
R503	1-216-663-11	METAL CHIP	3.3K 0.50% 1/10W	C626	1-126-373-11	ELECT 470MF	20% 10V
R504	1-216-675-11	METAL CHIP	10K 0.50% 1/10W	C628	1-161-830-00	CERAMIC 4700PF	10% 500V
R507	1-216-295-00	METAL GLAZE	0 5% 1/10W	C629	1-124-607-11	ELECT 2200MF	20% 50V
R509	1-216-065-00	METAL GLAZE	4.7K 5% 1/10W	C631	1-126-803-11	ELECT 47MF	20% 50V
R510	1-216-061-00	METAL GLAZE	3.3K 5% 1/10W	C632	1-124-903-11	ELECT 1MF	20% 50V
R512	1-216-065-00	METAL GLAZE	4.7K 5% 1/10W	C633	1-130-483-00	MYLAR 0.01MF	5% 50V
R513	1-216-667-11	METAL CHIP	4.7K 0.50% 1/10W	C634	1-126-803-11	ELECT 47MF	20% 16V
R515	1-216-295-00	METAL GLAZE	0 5% 1/10W	C637	1-136-311-51	FILM 0.47MF	20% 125V
R517	1-216-025-00	METAL GLAZE	100 5% 1/10W	C638	1-161-743-12	CERAMIC 0.0047MF	400V
R518	1-216-089-00	METAL GLAZE	47K 5% 1/10W	C639	1-125-692-11	ELECT (BLOCK) 820MF	20% 200V
R519	1-216-295-00	METAL GLAZE	0 5% 1/10W	C640	1-136-311-51	FILM 0.47MF	20% 125V
R521	1-216-061-00	METAL GLAZE	3.3K 5% 1/10W	C641	1-126-101-11	ELECT 100MF	20% 16V
R522	1-216-033-00	METAL GLAZE	220 5% 1/10W	C642	1-161-743-12	CERAMIC 0.0047MF	400V
R523	1-216-033-00	METAL GLAZE	220 5% 1/10W	C644	1-126-104-11	ELECT 470MF	20% 35V
R524	1-216-065-00	METAL GLAZE	4.7K 5% 1/10W	C646	1-124-907-11	ELECT 10MF	20% 50V
R525	1-216-067-00	METAL GLAZE	5.6K 5% 1/10W	C647	1-164-486-51	CERAMIC 0.0033MF	20% 400V
R526	1-216-049-00	METAL GLAZE	1K 5% 1/10W	C648	1-125-692-11	ELECT (BLOCK) 820MF	20% 200V
R527	1-218-754-11	METAL CHIP	120K 0.50% 1/10W	C649	1-164-486-51	CERAMIC 0.0033MF	20% 400V
R528	1-216-691-11	METAL CHIP	47K 0.50% 1/10W	C650	1-161-743-12	CERAMIC 0.0047MF	400V
R529	1-216-097-00	METAL GLAZE	100K 5% 1/10W	C660	1-102-125-00	CERAMIC 0.0047MF	10% 50V
R531	1-216-097-00	METAL GLAZE	100K 5% 1/10W	C661	1-102-125-00	CERAMIC 0.0047MF	10% 50V
R532	1-216-097-00	METAL GLAZE	100K 5% 1/10W	C662	1-124-910-11	ELECT 47MF	20% 35V
R533	1-216-097-00	METAL GLAZE	100K 5% 1/10W	C663	1-126-017-11	ELECT 6800MF	20% 16V
R535	1-216-049-00	METAL GLAZE	1K 5% 1/10W	C664	1-126-017-11	ELECT 6800MF	20% 16V
R536	1-216-065-00	METAL GLAZE	4.7K 5% 1/10W	C670	1-102-074-00	CERAMIC 0.001MF	10% 50V
R537	1-216-067-00	METAL GLAZE	5.6K 5% 1/10W				
R538	1-218-754-11	METAL CHIP	120K 0.50% 1/10W				
R539	1-216-691-11	METAL CHIP	47K 0.50% 1/10W				
R542	1-216-025-00	METAL GLAZE	100 5% 1/10W				
R543	1-216-025-00	METAL GLAZE	100 5% 1/10W				
R546	1-216-682-11	METAL CHIP	20K 0.50% 1/10W				
R547	1-216-681-11	METAL CHIP	18K 0.50% 1/10W				
<CONNECTOR>							
Y2-401	1-573-966-11	PIN, CONNECTOR (PC BOARD) 36P					

*A-1316-149-A	G BOARD, COMPLETE						

<CAPACITOR>							
C601	1-161-830-00	CERAMIC	4700PF	10%	500V		
C602	1-130-317-00	FILM	0.068MF	5%	100V		
C603	1-124-634-11	ELECT	1MF	20%	250V		
C605	1-164-143-11	CERAMIC	0.001MF	10%	1KV		
C606	1-124-563-11	ELECT	2200MF	20%	25V		
C607	1-124-563-11	ELECT	2200MF	20%	25V		
C608	1-128-484-11	ELECT	100MF	20%	200V		
C609	1-137-141-11	FILM	0.082MF	3%	600V		
C612	1-124-962-11	ELECT	2200MF	20%	25V		
C614	1-126-326-51	ELECT	10MF	20%	200V		
C615	1-124-798-11	ELECT	1MF	20%	160V		
C616	1-124-557-11	ELECT	1000MF	20%	25V		
C617	1-164-143-11	CERAMIC	0.001MF	10%	1KV		
C618	1-136-853-11	FILM	0.56MF	5%	200V		
<DIODE>							
D602	8-719-979-58	DIODE EGP10D					
D603	8-719-500-67	DIODE D5KC40H					
	4-382-854-11	SCREW (M3X10), P, SW (+); D603					
D604	8-719-510-09	DIODE D1QSC6M					
	4-382-854-11	SCREW (M3X10), P, SW (+); D604					
D605	8-719-988-31	DIODE D1QSC6MR					
	4-382-854-11	SCREW (M3X10), P, SW (+); D605					
D607	8-719-025-81	DIODE S3V10SB					
D608	8-719-109-85	DIODE RD5.1ESB2					
D609	8-719-109-84	DIODE RD5.1ESB1					
D610	8-719-979-58	DIODE EGP10D					
D611	8-719-979-58	DIODE EGP10D					
D613	8-719-303-57	DIODE RU2AM					
D614	8-719-979-58	DIODE EGP10D					
D615	8-719-975-76	DIODE SB140					
D616	8-719-025-81	DIODE S3V10SB					
D617	8-719-110-02	DIODE RD7.5ES-B1					
D618	8-719-911-19	DIODE 1SS119					
D619	8-719-975-76	DIODE SB140					
D620	8-719-988-31	DIODE D1QSC6MR					
D621	8-719-908-03	DIODE GP08D					
D622	8-719-908-03	DIODE GP08D					
D623	8-719-110-63	DIODE RD24ESB3					
D624	8-719-109-89	DIODE RD5.6ESB2					
D626	8-719-908-03	DIODE GP08D					
D628	8-719-110-49	DIODE RD18ESB2					
D629	8-719-911-19	DIODE 1SS119					
D631	8-719-911-19	DIODE 1SS119					



Les composants identifiés par
 une trame et une marque Δ
 sont critiques pour la sécurité.
 Ne les remplacer que par une
 pièce portant le numéro spécifique

The components identified by
 shading and mark Δ are critical
 for safety
 Replace only with part number
 specified.

REF. NO.	PART NO.	DESCRIPTION	REMARK
D632	8-719-511-40	DIODE S1VB40	
D633	8-719-505-60	DIODE S5VB60	
D634	8-719-911-19	DIODE 1SS119	
D636	8-719-109-85	DIODE RD5.1ESB2	
D638	8-719-911-19	DIODE 1SS119	
D640	8-719-510-09	DIODE D10SC5M	
D650	8-719-160-81	DIODE RD27PB2	
<FUSE>			
F601	Δ 1-532-748-11	FUSE, GLASS TUBE 6.3A/125V	
	1-533-223-11	CLIP, FUSE; F601	
<FERRITE BEAD>			
FB602	1-410-397-21	FERRITE BEAD INDUCTOR 1.1UH	
FB604	1-410-396-41	FERRITE BEAD INDUCTOR 0.45UH	
FB606	1-410-397-21	FERRITE BEAD INDUCTOR 1.1UH	
FB607	1-410-397-21	FERRITE BEAD INDUCTOR 1.1UH	
FB608	1-410-396-41	FERRITE BEAD INDUCTOR 0.45UH	
FB612	1-410-397-21	FERRITE BEAD INDUCTOR 1.1UH	
FB622	1-410-397-21	FERRITE BEAD INDUCTOR 1.1UH	
FB630	1-410-396-41	FERRITE BEAD INDUCTOR 0.45UH	
FB631	1-410-396-41	FERRITE BEAD INDUCTOR 0.45UH	
<CONNECTOR>			
G-1	*1-508-786-00	PIN, CONNECTOR (5MM PITCH) 2P	
G-2	*1-564-512-11	PLUG, CONNECTOR 9P	
G-3	*1-564-507-11	PLUG, CONNECTOR 4P	
G-4	*1-564-511-51	PLUG, CONNECTOR 8P	
G-5	*1-564-508-11	PLUG, CONNECTOR 5P	
G-7	*1-564-507-11	PLUG, CONNECTOR 4P	
G-8	*1-580-843-11	PIN, CONNECTOR (POWER)	
G-9	*1-508-765-00	PIN, CONNECTOR (5MM PITCH) 3P	
G-10	*1-508-786-00	PIN, CONNECTOR (5MM PITCH) 2P	
G-11	*1-564-511-71	PLUG, CONNECTOR 8P	
G-12	*1-564-505-11	PLUG, CONNECTOR 2P	
<IC>			
IC601A	8-749-321-89	IC S8115M	
IC602	8-759-231-58	IC TA7812S	
	4-382-854-11	SCREW (M3X10), P, SW (+); IC602	
<JUMPER>			
JW76	1-408-421-00	INDUCTOR 100UH	
<COIL>			
L602	1-459-862-11	COIL, CHOKE 90UH	
L604	1-408-404-00	INDUCTOR 3.9UH	
L605	1-412-526-11	INDUCTOR 12UH	
L607	1-408-404-00	INDUCTOR 3.9UH	
L611	1-412-546-41	INDUCTOR 560UH	
L612	1-412-540-31	INDUCTOR 180UH	
L613	1-412-522-41	INDUCTOR 5.6UH	
<TRANSISTOR>			
Q603	8-729-011-15	TRANSISTOR 2SC4582NP	
Q604	4-382-854-11	SCREW (M3X10), P, SW (+); Q603	
Q604	8-729-119-80	TRANSISTOR 2SC2688-LK	

REF. NO.	PART NO.	DESCRIPTION	REMARK
	3-701-754-00	PLATE INSULATING; Q604	
	4-382-854-11	SCREW (M3X10), P, SW (+); Q604	
Q607	8-729-119-78	TRANSISTOR 2SC2785-HFE	
Q608	8-729-326-11	TRANSISTOR 2SC2611	
Q609	8-729-119-76	TRANSISTOR 2SA1175-HFE	
Q610	8-729-820-82	TRANSISTOR 2SA1208-S	
Q611	8-729-820-82	TRANSISTOR 2SA1208-S	
Q612	8-729-386-12	TRANSISTOR 2SB861-C	
	4-382-854-11	SCREW (M3X10), P, SW (+); Q612	
Q613	8-729-209-15	TRANSISTOR 2SD2012	
	4-382-854-11	SCREW (M3X10), P, SW (+); Q613	
Q614	8-729-011-15	TRANSISTOR 2SC4582NP	
	4-382-854-11	SCREW (M3X10), P, SW (+); Q614	
Q615	8-729-820-82	TRANSISTOR 2SA1208-S	
Q616	8-729-208-39	TRANSISTOR 2SA1306A-Y	
Q618	8-729-119-76	TRANSISTOR 2SA1175-HFE	
Q620	8-729-119-78	TRANSISTOR 2SC2785-HFE	
Q621	8-729-119-78	TRANSISTOR 2SC2785-HFE	
Q623	8-729-119-76	TRANSISTOR 2SA1175-HFE	
Q629	8-729-378-84	TRANSISTOR 2SD788-5	
Q630	8-729-255-12	TRANSISTOR 2SC2551-0	
<RESISTOR>			
R604	1-202-933-11	FUSIBLE 0.1 10% 1/2W F	
R605	1-249-428-11	CARBON 8.2K 5% 1/4W	
R606	1-214-919-00	METAL 180K 1% 1/2W	
R609	1-249-434-11	CARBON 27K 5% 1/4W F	
R610	1-215-469-00	METAL 100K 1% 1/4W	
R611	1-249-421-11	CARBON 2.2K 5% 1/4W F	
R612	1-202-883-11	SOLID 680K 20% 1/2W	
R613	*1-216-388-01	METAL OXIDE 0.56 5% 3W F	
R614	1-249-418-11	CARBON 1.2K 5% 1/4W	
R615	1-215-438-00	METAL 5.1K 1% 1/4W	
R616	1-215-436-00	METAL 4.3K 1% 1/4W	
R617	*1-216-388-01	METAL OXIDE 3.9 5% 3W F	
R618	1-249-418-11	CARBON 1.2K 5% 1/4W	
R619	*1-216-444-01	METAL OXIDE 8.2K 5% 3W F	
R620	1-249-418-11	CARBON 1.2K 5% 1/4W F	
R621	1-247-691-11	CARBON 18 5% 1/4W F	
R622	1-249-424-11	CARBON 3.9K 5% 1/4W F	
R623	1-249-417-11	CARBON 1K 5% 1/4W	
R624	1-214-780-00	METAL 130K 1% 1/4W	
R625	*1-216-388-01	METAL OXIDE 0.56 5% 3W F	
R626	*1-216-356-01	METAL OXIDE 3.9 5% 3W F	
R627	1-202-883-11	SOLID 680K 20% 1/2W	
R628	1-249-410-11	CARBON 270 5% 1/4W F	
R629	*1-217-249-11	WIREBOUND 1 10% 3W F	
R631	1-249-417-11	CARBON 1K 5% 1/4W F	
R632	1-214-913-00	METAL 100K 1% 1/2W	
R633	1-249-429-11	CARBON 10K 5% 1/4W	
R634	1-249-441-11	CARBON 100K 5% 1/4W	
R635	*1-216-388-01	METAL OXIDE 0.56 5% 3W F	
R636	1-260-065-11	CARBON 1.2 5% 1/2W	
R638	1-249-405-11	CARBON 100 5% 1/4W F	
R639	1-249-405-11	CARBON 100 5% 1/4W F	
R640	1-249-421-11	CARBON 2.2K 5% 1/4W F	
R641	1-249-429-11	CARBON 10K 5% 1/4W	
R642	1-215-421-00	METAL 1K 1% 1/4W	
R643	1-260-123-11	CARBON 100K 5% 1/2W	
R644	1-249-415-11	CARBON 680 5% 1/4W	
R645	1-249-417-11	CARBON 1K 5% 1/4W	
R649	1-249-424-11	CARBON 3.9K 5% 1/4W	
R650	1-249-377-11	CARBON 0.47 5% 1/4W F	

The components identified by shading and mark Δ are critical for safety
Replace only with part number specified.

Les composants identifiés par une trame et une marque Δ sont critiques pour la sécurité.
Ne les remplacer que par une pièce portant le numéro spécifié.

KP-46V15/46V16
KP-53V15/53V16/61V15
RM-Y115



REF. NO.	PART NO.	DESCRIPTION	REMARK
R651	1-215-429-00	METAL	2.2K 1% 1/4W
R652	1-215-429-00	METAL	2.2K 1% 1/4W
R654	1-215-429-00	METAL	2.2K 1% 1/4W
R655	1-249-426-11	CARBON	5.6K 5% 1/4W
R656	1-215-454-00	METAL	24K 1% 1/4W
R657	1-216-388-91	METAL OXIDE	0.56 5% 3W F
R660	1-249-413-11	CARBON	470 5% 1/4W
R661	1-232-884-91	SOLID	820K 20% 1/2W
R662	1-205-930-11	WIREWOUND	1.2 5% 15W
R663	1-215-904-91	METAL OXIDE	100K 5% 2W F
R666	1-249-377-11	CARBON	0.47 5% 1/4W F
R667	1-232-888-91	SOLID	2.2K 20% 1/2W
R668	1-215-388-91	METAL OXIDE	180K 5% 2W F
R669	1-249-377-11	CARBON	0.47 5% 1/4W F
R675	1-249-377-11	CARBON	0.47 5% 1/4W F
R687	1-249-417-11	CARBON	1K 5% 1/4W F
R689	1-247-742-11	CARBON	180 5% 1/2W F
R691	1-249-421-11	CARBON	2.2K 5% 1/4W
R694	1-249-421-11	CARBON	2.2K 5% 1/4W
R697	1-249-382-11	CARBON	1.2 5% 1/4W F
R698	1-236-386-91	METAL OXIDE	0.56 5% 3W F
<RELAY>			
R661A	1-515-805-11	RELAY, POWER	
R662A	1-515-805-11	RELAY, POWER	
<TRANSFORMER>			
T601	1-450-791-12	TRANSFORMER, PULSE ISOLATION	
T603	1-424-020-11	PT	
T604	1-450-149-11	TRANSFORMER, HEATER	
T605	1-424-023-12	TRANSFORMER, LINE FILTER	
T606	1-421-372-21	TRANSFORMER, FERRITE (LFT)	
T608	1-423-665-11	TRANSFORMER, POWER	
<VARISTOR>			
V6601A	1-809-786-11	VARISTOR	

*A-1331-259-A	CR BOARD, COMPLETE	*****	
<CAPACITOR>			
C701	1-162-115-00	CERAMIC	330PF 10% 2KV
C702	1-123-948-00	BLECT	22MF 20% 250V
C703	1-102-050-00	CERAMIC	0.01MF 500V
C704	1-162-115-00	CERAMIC	330PF 10% 2KV
C705	1-130-479-00	MYLAR	0.0047MF 5% 50V
C706	1-101-006-00	CERAMIC	0.047MF 50V
C707	1-101-006-00	CERAMIC	0.047MF 50V
C709	1-124-120-11	BLECT	220MF 20% 16V
C710	1-124-120-11	BLECT	220MF 20% 16V
C711	1-102-114-00	CERAMIC	470PF 10% 50V
<CONNECTOR>			
CR1	*1-508-784-00	PIN, CONNECTOR (5MM PITCH)	1P
CR3	*1-508-765-00	PIN, CONNECTOR (5MM PITCH)	3P
CR4	*1-564-511-11	PLUG, CONNECTOR	8P
CR15	*1-564-508-11	PLUG, CONNECTOR	5P

REF. NO.	PART NO.	DESCRIPTION	REMARK
<PICTURE TUBE SOCKET>			
82701A	1-251-826-11	SOCKET, PICTURE TUBE	
<DIODE>			
D701	8-719-911-19	DIODE 1SS119	
D702	8-719-911-19	DIODE 1SS119	
D703	8-719-911-19	DIODE 1SS119	
D704	8-719-911-19	DIODE 1SS119	
D705	8-719-911-19	DIODE 1SS119	
D706	8-719-911-19	DIODE 1SS119	
D707	8-719-110-36	DIODE RD13ESB2	
<COIL>			
L701	1-408-429-00	INDUCTOR	470UH
L702	1-408-159-00	COIL, SPOOK CHOKE	3.3UH
L703	1-408-159-00	COIL, SPOOK CHOKE	3.3UH
L704	1-408-413-00	INDUCTOR	22UH
<NEON LAMP>			
NL701	1-519-108-XX	LAMP, NEON	
NL702	1-519-108-XX	LAMP, NEON	
<TRANSISTOR>			
Q701	8-729-119-78	TRANSISTOR 2SC2785-HFE	
Q702	8-729-119-78	TRANSISTOR 2SC2785-HFE	
Q703	8-729-119-80	TRANSISTOR 2SC2688-LK	
	4-373-933-01	SHEET (TRANSISTOR), BN;	Q703
	4-382-854-11	SCREW (M3X10), P, SW (+);	Q703
Q704	8-729-255-12	TRANSISTOR 2SC2551-0	
Q705	8-729-200-17	TRANSISTOR 2SA1091-0	
Q706	8-729-200-17	TRANSISTOR 2SA1091-0	
<RESISTOR>			
R701	1-202-847-00	SOLID	560K 20% 1/2W
R702	1-202-814-11	SOLID	33K 20% 1/2W
R703	1-202-818-00	SOLID	1K 20% 1/2W
R704	1-202-842-11	SOLID	220K 20% 1/2W
R705	1-202-828-11	SOLID	6.8K 20% 1/2W
R706	1-202-561-00	SOLID	330 20% 1/2W
R707	1-218-518-51	METAL OXIDE	8.2K 5% 5W F
R708	1-249-405-11	CARBON	100 5% 1/4W F
R709	1-249-405-11	CARBON	100 5% 1/4W F
R710	1-215-927-91	METAL OXIDE	47K 5% 3W F
R711	1-249-405-11	CARBON	100 5% 1/4W F
R712	1-249-421-11	CARBON	2.2K 5% 1/4W F
R714	1-249-401-11	CARBON	47 5% 1/4W
R716	1-249-405-11	CARBON	100 5% 1/4W
R717	1-249-403-11	CARBON	68 5% 1/4W
R718	1-249-412-11	CARBON	390 5% 1/4W
R719	1-249-410-11	CARBON	270 5% 1/4W
R720	1-249-405-11	CARBON	100 5% 1/4W
R721	1-249-409-11	CARBON	220 5% 1/4W
R722	1-215-423-00	METAL	1.2K 1% 1/4W
R723	1-249-410-11	CARBON	270 5% 1/4W
R724	1-215-429-00	METAL	2.2K 1% 1/4W
<SPARK GAP>			

• The components identified by Δ in this manual have been carefully factory-selected for each set in order to satisfy regulations regarding X-ray radiation. Should replacement be required, replace only with the value originally used.

Les composants identifiés par
 une trame et une marque Δ
 sont critiques pour la sécurité.
 Ne les remplacer que par une
 pièce portant le numéro spécifié.

The components identified by
 shading and mark Δ are critical
 for safety
 Replace only with part number
 specified.

CR

CG

CB

REF. NO. PART NO. DESCRIPTION REMARK

SG701 1-519-422-11 GAP, SPARK
 SG702 1-519-422-11 GAP, SPARK

*A-1331-260-A CG BOARD, COMPLETE

<CAPACITOR>

C731	1-162-115-00	CERAMIC	330PF	10%	2KV
C732	1-123-948-00	ELECT	22MF	20%	250V
C733	1-102-050-00	CERAMIC	0.01MF		500V
C734	1-162-115-00	CERAMIC	330PF	10%	2KV
C735	1-130-479-00	MYLAR	0.0047MF	5%	50V
C736	1-101-006-00	CERAMIC	0.047MF		50V
C737	1-101-006-00	CERAMIC	0.047MF		50V
C739	1-124-120-11	ELECT	220MF	20%	16V
C740	1-124-120-11	ELECT	220MF	20%	16V
C741	1-102-114-00	CERAMIC	470PF	10%	50V

<CONNECTOR>

CG1 *1-508-784-00 PIN, CONNECTOR (5MM PITCH) 1P
 CG3 *1-508-765-00 PIN, CONNECTOR (5MM PITCH) 3P
 CG16 *1-564-508-11 PLUG, CONNECTOR 5P

<PICTURE TUBE SOCKET>

~~CR733 1-251-026-11 SOCKET, PICTURE TUBE~~

<DIODE>

D731	8-719-911-19	DIODE	1SS119
D732	8-719-911-19	DIODE	1SS119
D733	8-719-911-19	DIODE	1SS119
D734	8-719-911-19	DIODE	1SS119
D735	8-719-911-19	DIODE	1SS119
D736	8-719-911-19	DIODE	1SS119
D737	8-719-911-19	DIODE	1SS119

<COIL>

L731	1-408-429-00	INDUCTOR	470UH
L732	1-408-159-00	COIL, SPOOK CHOKE	3.3UH
L733	1-408-159-00	COIL, SPOOK CHOKE	3.3UH
L734	1-408-413-00	INDUCTOR	22UH

<NEON LAMP>

NL731 1-519-108-XX LAMP, NEON
 NL732 1-519-108-XX LAMP, NEON

<TRANSISTOR>

Q731	8-729-119-78	TRANSISTOR	2SC2785-HFE
Q732	8-729-119-78	TRANSISTOR	2SC2785-HFE
Q733	8-729-119-80	TRANSISTOR	2SC2688-LK
	4-373-933-01	SHEET (TRANSISTOR), BN;	Q733
	4-382-854-11	SCREW (M3X10), P, SW (+);	Q733
Q734	8-729-255-12	TRANSISTOR	2SC2551-0
Q735	8-729-200-17	TRANSISTOR	2SA1091-0
Q736	8-729-200-17	TRANSISTOR	2SA1091-0

REF. NO. PART NO. DESCRIPTION REMARK

<RESISTOR>

R731	1-202-847-00	SOLID	560K	20%	1/2W
R732	1-202-814-11	SOLID	33K	20%	1/2W
R733	1-202-818-00	SOLID	1K	20%	1/2W
R734	1-202-842-11	SOLID	220K	20%	1/2W
R735	1-202-828-11	SOLID	6.8K	20%	1/2W

R736	1-202-561-00	SOLID	330	20%	1/2W
R737	1-215-927-01	METAL OXIDE	8.2K	5%	3W
R738	1-249-405-11	CARBON	100	5%	1/4W
R739	1-249-405-11	CARBON	100	5%	1/4W
R740	1-215-927-01	METAL OXIDE	47K	5%	3W

R741	1-249-405-11	CARBON	100	5%	1/4W
R742	1-249-421-11	CARBON	2.2K	5%	1/4W
R744	1-249-401-11	CARBON	47	5%	1/4W
R745	1-215-455-00	METAL	27K	1%	1/4W
R746	1-249-405-11	CARBON	100	5%	1/4W

R747	1-249-403-11	CARBON	68	5%	1/4W
R748	1-249-412-11	CARBON	390	5%	1/4W
R749	1-249-410-11	CARBON	270	5%	1/4W
R750	1-249-405-11	CARBON	100	5%	1/4W
R751	1-249-409-11	CARBON	220	5%	1/4W

R752	1-215-423-00	METAL	1.2K	1%	1/4W
R754	1-215-429-00	METAL	2.2K	1%	1/4W

<SPARK GAP>

SG731 1-519-422-11 GAP, SPARK
 SG732 1-519-422-11 GAP, SPARK

*A-1331-261-A CB BOARD, COMPLETE

<CAPACITOR>

C761	1-162-115-00	CERAMIC	330PF	10%	2KV
C762	1-123-948-00	ELECT	22MF	20%	250V
C763	1-102-050-00	CERAMIC	0.01MF		500V
C764	1-162-115-00	CERAMIC	330PF	10%	2KV
C765	1-130-479-00	MYLAR	0.0047MF	5%	50V

C766	1-101-006-00	CERAMIC	0.047MF		50V
C767	1-101-006-00	CERAMIC	0.047MF		50V
C769	1-124-120-11	ELECT	220MF	20%	16V
C770	1-124-120-11	ELECT	220MF	20%	16V
C771	1-102-114-00	CERAMIC	470PF	10%	50V

<CONNECTOR>

CB1 *1-508-784-00 PIN, CONNECTOR (5MM PITCH) 1P
 CB3 *1-508-765-00 PIN, CONNECTOR (5MM PITCH) 3P
 CB4 *1-564-511-11 PLUG, CONNECTOR 8P
 CB5 *1-564-511-11 PLUG, CONNECTOR 8P
 CB17 *1-564-508-11 PLUG, CONNECTOR 5P

<PICTURE TUBE SOCKET>

~~CR776 1-251-026-11 SOCKET, PICTURE TUBE~~

<DIODE>

D761	8-719-911-19	DIODE	1SS119
D762	8-719-911-19	DIODE	1SS119
D763	8-719-911-19	DIODE	1SS119
D764	8-719-911-19	DIODE	1SS119

The components identified by shading and mark Δ are critical for safety
Replace only with part number specified.

Les composants identifiés par une trame et une marque Δ sont critiques pour la sécurité.
Ne les remplacer que par une pièce portant le numéro spécifié.

CB

V

REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
D765	8-719-911-19	DIODE ISS119					
D766	8-719-911-19	DIODE ISS119					
D768	8-719-911-19	DIODE ISS119					
D769	8-719-109-81	DIODE RD4.7ESB2					
		<COIL>					
L761	1-408-429-00	INDUCTOR 470UH					
L762	1-408-159-00	COIL, SPOOK CHOKE 3.3UH					
L763	1-408-159-00	COIL, SPOOK CHOKE 3.3UH					
L764	1-408-413-00	INDUCTOR 22UH					
		<NEON LAMP>					
NL761	1-519-108-XX	LAMP, NEON					
NL762	1-519-108-XX	LAMP, NEON					
		<TRANSISTOR>					
Q761	8-729-119-78	TRANSISTOR 2SC2785-HFE					
Q762	8-729-119-78	TRANSISTOR 2SC2785-HFE					
Q763	8-729-119-80	TRANSISTOR 2SC2688-LK					
	4-373-933-01	SHRET (TRANSISTOR), BN; Q763					
	4-382-854-11	SCREW (M3X10), P, SW (+); Q763					
Q764	8-729-255-12	TRANSISTOR 2SC2551-0					
Q765	8-729-200-17	TRANSISTOR 2SA1091-0					
Q766	8-729-200-17	TRANSISTOR 2SA1091-0					
		<RESISTOR>					
R761	1-202-847-00	SOLID 560K 20% 1/2W					
R762	1-202-814-11	SOLID 33K 20% 1/2W					
R763	1-202-818-00	SOLID 1K 20% 1/2W					
R764	1-202-842-11	SOLID 220K 20% 1/2W					
R765	1-202-828-11	SOLID 6.8K 20% 1/2W					
R766	1-202-561-00	SOLID 330 20% 1/2W					
R767	1-218-510-31	METAL OXIDE 8.2K 5% 5W F					
R768	1-249-405-11	CARBON 100 5% 1/4W F					
R769	1-249-405-11	CARBON 100 5% 1/4W F					
R770	1-215-527-91	METAL OXIDE 47K 5% 3W F					
R771	1-249-405-11	CARBON 100 5% 1/4W F					
R772	1-249-421-11	CARBON 2.2K 5% 1/4W F					
R773	1-249-413-11	CARBON 470 5% 1/4W					
R774	1-249-401-11	CARBON 47 5% 1/4W					
R776	1-249-405-11	CARBON 100 5% 1/4W					
R777	1-249-403-11	CARBON 68 5% 1/4W					
R778	1-249-412-11	CARBON 390 5% 1/4W					
R779	1-249-415-11	CARBON 680 5% 1/4W					
R780	1-249-405-11	CARBON 100 5% 1/4W					
R781	1-249-409-11	CARBON 220 5% 1/4W					
R782	1-215-423-00	METAL 1.2K 1% 1/4W					
R783	1-215-433-00	METAL 3.3K 1% 1/4W					
R784	1-215-429-00	METAL 2.2K 1% 1/4W					
R785	1-215-418-00	METAL 750 1% 1/4W					
		<SPARK GAP>					
SG761	1-519-422-11	GAP, SPARK					
SG762	1-519-422-11	GAP, SPARK					

*A-1342-214-A	V BOARD, COMPLETE						

*4-395-527-01	HOLDER (B), TR; Q1501-Q1502						
		<CAPACITOR>					
C1501	1-102-129-00	CERAMIC 0.01MF 10% 50V					
C1502	1-126-101-11	ELECT 100MF 20% 16V					
C1504	1-106-383-00	MYLAR 0.047MF 200V					
C1505	1-124-907-11	ELECT 10MF 20% 50V					
C1506	1-106-359-00	MYLAR 0.0047MF 10% 200V					
C1507	1-106-367-00	MYLAR 0.01MF 10% 100V					
C1508	1-162-318-11	CERAMIC 0.001MF 10% 500V					
C1509	1-106-367-00	MYLAR 0.01MF 10% 100V					
C1510	1-126-355-11	ELECT 33MF 20% 160V					
C1511	1-124-668-11	ELECT 2.2MF 20% 200V					
C1512	1-106-391-12	MYLAR 0.1MF 10% 200V					
C1513	1-162-318-11	CERAMIC 0.001MF 10% 500V					
C1514	1-102-951-00	CERAMIC 15PF 5% 50V					
C1515	1-102-959-00	CERAMIC 22PF 5% 50V					
C1516	1-102-963-00	CERAMIC 33PF 5% 50V					
C1517	1-123-875-11	ELECT 10MF 20% 50V					
C1518	1-102-074-00	CERAMIC 0.001MF 10% 50V					
C1519	1-106-359-00	MYLAR 0.0047MF 10% 200V					
C1520	1-126-803-11	ELECT 47MF 20% 16V					
C1521	1-124-907-11	ELECT 10MF 20% 50V					
C1534	1-101-003-00	CERAMIC 0.0047MF 50V					
C1551	1-124-122-11	ELECT 100MF 20% 50V					
C1552	1-124-122-11	ELECT 100MF 20% 50V					
C1553	1-102-824-00	CERAMIC 470PF 5% 50V					
C1554	1-102-824-00	CERAMIC 470PF 5% 50V					
C1555	1-130-483-00	MYLAR 0.01MF 5% 50V					
C1556	1-130-483-00	MYLAR 0.01MF 5% 50V					
C1557	1-102-824-00	CERAMIC 470PF 5% 50V					
C1558	1-102-824-00	CERAMIC 470PF 5% 50V					
C1559	1-102-824-00	CERAMIC 470PF 5% 50V					
C1560	1-102-824-00	CERAMIC 470PF 5% 50V					
C1561	1-130-483-00	MYLAR 0.01MF 5% 50V					
C1562	1-130-483-00	MYLAR 0.01MF 5% 50V					
C1563	1-130-483-00	MYLAR 0.01MF 5% 50V					
		<DIODE>					
D1501	8-719-911-19	DIODE ISS119					
D1502	8-719-911-19	DIODE ISS119					
D1503	8-719-911-19	DIODE ISS119					
D1504	8-719-911-19	DIODE ISS119					
D1505	8-719-911-19	DIODE ISS119					
D1506	8-719-911-19	DIODE ISS119					
D1507	8-719-110-88	DIODE RD39ESB2					
D1508	8-719-110-88	DIODE RD39ESB2					
D1509	8-719-911-19	DIODE ISS119					
		<IC>					
IC1551	8-759-145-58	IC UPC4558C					
IC1552	8-759-912-77	IC LM324N					
		<COIL>					
L1502	1-408-418-00	INDUCTOR 56UH					
		<TRANSISTOR>					
Q1501	8-729-208-39	TRANSISTOR 2SA1306A-Y					
Q1502	8-729-017-06	TRANSISTOR 2SC4793					
Q1503	8-729-119-78	TRANSISTOR 2SC2785-HFE					



Les composants identifiés par
 une trame et une marque Δ
 sont critiques pour la sécurité
 Ne les remplacer que par une
 pièce portant le numéro spécifique

The components identified by
 shading and mark Δ are critical
 for safety
 Replace only with part number
 specified.

REF. NO.	PART NO.	DESCRIPTION	REMARK
Q1504	8-729-119-78	TRANSISTOR 2SC2785-HFE	
Q1505	8-729-119-76	TRANSISTOR 2SA1175-HFE	
Q1506	8-729-119-78	TRANSISTOR 2SC2785-HFE	
Q1507	8-729-119-78	TRANSISTOR 2SC2785-HFE	
Q1508	8-729-142-86	TRANSISTOR 2SC3733	
Q1551	8-729-231-60	TRANSISTOR 2SD1406-YGR	
Q1552	8-729-202-02	TRANSISTOR 2SB1015-Y	
Q1553	8-729-231-60	TRANSISTOR 2SD1406-YGR	
Q1554	8-729-202-02	TRANSISTOR 2SB1015-Y	
Q1555	8-729-231-60	TRANSISTOR 2SD1406-YGR	
Q1556	8-729-202-02	TRANSISTOR 2SB1015-Y	
<RESISTOR>			
R1501	1-249-451-11	CARBON 2.2 5% 1/4W	F
R1502	1-249-414-11	CARBON 560 5% 1/4W	F
R1503	1-247-734-11	CARBON 39 5% 1/2W	F
R1504	1-249-384-11	CARBON 1.8 5% 1/4W	F
R1505	1-249-405-11	CARBON 100 5% 1/4W	F
R1506	1-249-419-11	CARBON 1.5K 5% 1/4W	
R1507	1-249-412-11	CARBON 390 5% 1/4W	
R1508	1-249-436-11	CARBON 39K 5% 1/4W	
R1509	1-249-421-11	CARBON 2.2K 5% 1/4W	
R1510	1-249-436-11	CARBON 39K 5% 1/4W	
R1511	1-249-418-11	CARBON 1.2K 5% 1/4W	
R1512	1-249-441-11	CARBON 100K 5% 1/4W	
R1513	1-249-432-11	CARBON 18K 5% 1/4W	
R1514	1-249-405-11	CARBON 100 5% 1/4W	
R1515	1-249-435-11	CARBON 33K 5% 1/4W	
R1517	1-247-713-11	CARBON 1K 5% 1/4W	F
R1518	1-249-416-31	METAL 680 5% 3/4W	F
R1520	1-249-432-11	CARBON 18K 5% 1/4W	
R1521	1-249-414-11	CARBON 560 5% 1/4W	
R1522	1-249-384-11	CARBON 1.8 5% 1/4W	F
R1523	1-249-400-11	CARBON 39 5% 1/4W	F
R1524	1-249-418-11	CARBON 1.2K 5% 1/4W	
R1525	1-249-421-11	CARBON 2.2K 5% 1/4W	
R1526	1-249-426-11	CARBON 5.6K 5% 1/4W	
R1527	1-249-414-11	CARBON 560 5% 1/4W	
R1528	1-249-429-11	CARBON 10K 5% 1/4W	
R1529	1-249-414-11	CARBON 560 5% 1/4W	
R1530	1-249-431-31	METAL 220 5% 3/4W	F
R1531	1-249-429-11	CARBON 10K 5% 1/4W	
R1532	1-249-421-11	CARBON 2.2K 5% 1/4W	
R1533	1-247-903-00	CARBON 1M 5% 1/4W	
R1534	1-249-423-11	CARBON 3.3K 5% 1/4W	
R1535	1-249-392-11	CARBON 8.2 5% 1/4W	F
R1540	1-215-445-00	METAL 10K 1% 1/4W	
R1541	1-215-445-00	METAL 10K 1% 1/4W	
R1542	1-215-445-00	METAL 10K 1% 1/4W	
R1551	1-215-445-00	METAL 10K 1% 1/4W	
R1552	1-215-423-00	METAL 1.2K 1% 1/4W	
R1553	1-249-417-11	CARBON 1K 5% 1/4W	
R1554	1-215-445-00	METAL 10K 1% 1/4W	
R1555	1-215-375-00	METAL 12 1% 1/4W	
R1556	1-215-375-00	METAL 12 1% 1/4W	
R1557	1-215-375-00	METAL 12 1% 1/4W	
R1558	1-215-445-00	METAL 10K 1% 1/4W	
R1559	1-215-445-00	METAL 10K 1% 1/4W	
R1560	1-215-445-00	METAL 10K 1% 1/4W	
R1561	1-215-423-00	METAL 1.2K 1% 1/4W	
R1562	1-215-423-00	METAL 1.2K 1% 1/4W	
R1563	1-215-445-00	METAL 10K 1% 1/4W	
R1564	1-249-417-11	CARBON 1K 5% 1/4W	

REF. NO.	PART NO.	DESCRIPTION	REMARK
R1565	1-215-445-00	METAL 10K 1% 1/4W	
R1566	1-215-375-00	METAL 12 1% 1/4W	
R1567	1-215-375-00	METAL 12 1% 1/4W	
R1568	1-215-375-00	METAL 12 1% 1/4W	
R1569	1-215-445-00	METAL 10K 1% 1/4W	
R1570	1-215-445-00	METAL 10K 1% 1/4W	
R1571	1-249-417-11	CARBON 1K 5% 1/4W	
R1572	1-215-445-00	METAL 10K 1% 1/4W	
R1573	1-215-375-00	METAL 12 1% 1/4W	
R1574	1-215-375-00	METAL 12 1% 1/4W	
R1575	1-215-375-00	METAL 12 1% 1/4W	
R1576	1-215-445-00	METAL 10K 1% 1/4W	
R1577	1-215-445-00	METAL 10K 1% 1/4W	
R1578	1-249-417-11	CARBON 1K 5% 1/4W	
R1579	1-249-417-11	CARBON 1K 5% 1/4W	
R1580	1-249-417-11	CARBON 1K 5% 1/4W	
R1581	1-249-432-11	CARBON 18K 5% 1/4W	
R1582	1-249-432-11	CARBON 18K 5% 1/4W	
<CONNECTOR>			
V2	*1-564-518-11	PLUG, CONNECTOR 3P	
V22	1-573-300-11	CONNECTOR, BOARD TO BOARD 18P	

*A-1346-117-A D BOARD, COMPLETE			

<CAPACITOR>			
C901	1-126-320-11	ELECT 10MF 20% 16V	
C902	1-124-477-11	ELECT 47MF 20% 16V	
C903	1-130-471-00	MYLAR 0.001MF 5% 50V	
C904	1-130-471-00	MYLAR 0.001MF 5% 50V	
C905	1-124-477-11	ELECT 47MF 20% 16V	
C906	1-126-233-11	ELECT 22MF 20% 50V	
C907	1-126-101-11	ELECT 100MF 20% 16V	
C908	1-124-907-11	ELECT 10MF 20% 50V	
C910	1-130-483-00	MYLAR 0.01MF 5% 50V	
C911	1-131-341-00	TANTALUM 0.1MF 20% 16V	
C912	1-124-903-11	ELECT 1MF 20% 50V	
C913	1-126-233-11	ELECT 22MF 20% 50V	
C914	1-126-803-11	ELECT 47MF 20% 16V	
C915	1-124-927-11	ELECT 4.7MF 20% 50V	
C916	1-102-074-00	CERAMIC 0.001MF 10% 50V	
C917	1-130-471-00	MYLAR 0.001MF 5% 50V	
C918	1-102-963-00	CERAMIC 33PF 5% 50V	
C919	1-102-963-00	CERAMIC 33PF 5% 50V	
C920	1-102-963-00	CERAMIC 33PF 5% 50V	
C921	1-102-963-00	CERAMIC 33PF 5% 50V	
C922	1-102-963-00	CERAMIC 33PF 5% 50V	
C923	1-102-963-00	CERAMIC 33PF 5% 50V	
C931	1-102-973-00	CERAMIC 100PF 5% 50V	
C932	1-124-903-11	ELECT 1MF 20% 50V	
C933	1-124-234-00	ELECT 22MF 20% 16V	
C934	1-124-234-00	ELECT 22MF 20% 16V	
C935	1-124-234-00	ELECT 22MF 20% 16V	
C936	1-124-234-00	ELECT 22MF 20% 16V	
C937	1-124-234-00	ELECT 22MF 20% 16V	
C938	1-124-234-00	ELECT 22MF 20% 16V	
C939	1-124-234-00	ELECT 22MF 20% 16V	
C940	1-124-916-11	ELECT 22MF 20% 25V	
C941	1-102-123-00	CERAMIC 0.0033MF 10% 50V	

The components identified by shading and mark Δ are critical for safety
Replace only with part number specified

Les composants identifiés par une trame et une marque Δ sont critiques pour la sécurité.
Ne les remplacer que par une pièce portant le numéro spécifié.

KP-46V15/46V16
KP-53V15/53V16/61V15
RM-Y115

D

REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
C942	1-102-123-00	CERAMIC	0.0033MF 10%	50V	D2	*1-564-511-51	PLUG, CONNECTOR 8P
C943	1-102-123-00	CERAMIC	0.0033MF 10%	50V	D3	*1-564-512-11	PLUG, CONNECTOR 9P
C1701	1-124-907-11	ELECT	10MF 20%	50V	D4	*1-564-508-11	PLUG, CONNECTOR 5P
C1702	1-124-907-11	ELECT	10MF 20%	50V	D5	*1-564-511-51	PLUG, CONNECTOR 8P
C1703	1-124-907-11	ELECT	10MF 20%	50V			
C1704	1-123-875-11	ELECT	10MF 20%	50V	D6	1-691-169-11	PIN, CONNECTOR 12P
C1705	1-102-963-00	CERAMIC	33PF 5%	50V	D7	*1-564-507-11	PLUG, CONNECTOR 4P
C1706	1-102-963-00	CERAMIC	33PF 5%	50V	D8	*1-564-506-11	PLUG, CONNECTOR 3P
C1707	1-102-963-00	CERAMIC	33PF 5%	50V	D9	*1-564-507-11	PLUG, CONNECTOR 4P
C1708	1-102-963-00	CERAMIC	33PF 5%	50V	D14	*1-564-513-11	PLUG, CONNECTOR 10P
C1709	1-102-963-00	CERAMIC	33PF 5%	50V		<DIODE>	
C1710	1-102-963-00	CERAMIC	33PF 5%	50V	D901	8-719-911-19	DIODE 1SS119
C1711	1-126-233-11	ELECT	22MF 20%	50V	D902	8-719-911-19	DIODE 1SS119
C1712	1-124-916-11	ELECT	22MF 20%	25V	D1701	8-719-900-95	DIODE V09G
C1713	1-102-074-00	CERAMIC	0.001MF 10%	50V	D1702	8-719-911-19	DIODE 1SS119
C1714	1-124-478-11	ELECT	100MF 20%	25V	D1703	8-719-900-95	DIODE V09G
C1715	1-124-478-11	ELECT	100MF 20%	25V	D1704	8-719-900-95	DIODE V09G
C1716	1-126-803-11	ELECT	47MF 20%	25V	D1705	8-719-900-95	DIODE V09G
C1717	1-126-803-11	ELECT	47MF 20%	25V	D1706	8-719-900-95	DIODE V09G
C1718	1-102-074-00	CERAMIC	0.001MF 10%	50V	D1707	8-719-911-19	DIODE 1SS119
C1719	1-124-234-00	ELECT	22MF 20%	16V	D1708	8-719-911-19	DIODE 1SS119
C1720	1-130-491-00	MYLAR	0.047MF 5%	50V	D1709	8-719-911-19	DIODE 1SS119
C1721	1-130-491-00	MYLAR	0.047MF 5%	50V	D1710	8-719-911-19	DIODE 1SS119
C1722	1-130-491-00	MYLAR	0.047MF 5%	50V	D1711	8-719-911-19	DIODE 1SS119
C1724	1-124-234-00	ELECT	22MF 20%	16V	D1712	8-719-911-19	DIODE 1SS119
C1725	1-102-963-00	CERAMIC	33PF 5%	50V	D1713	8-719-911-19	DIODE 1SS119
C1726	1-124-122-11	ELECT	100MF 20%	35V	D1714	8-719-911-19	DIODE 1SS119
C1727	1-102-963-00	CERAMIC	33PF 5%	50V	D1715	8-719-911-19	DIODE 1SS119
C1728	1-102-963-00	CERAMIC	33PF 5%	50V	D1716	8-719-911-19	DIODE 1SS119
C1729	1-108-426-91	MYLAR	0.027MF	200V	D1717	8-719-911-19	DIODE 1SS119
C1730	1-102-963-00	CERAMIC	33PF 5%	50V	D1718	8-719-911-19	DIODE 1SS119
C1731	1-124-122-11	ELECT	100MF 20%	35V	D1720	8-719-109-50	DIODE RD2.0ESB1
C1732	1-108-426-91	MYLAR	0.027MF	200V	D1721	8-719-109-50	DIODE RD2.0ESB1
C1733	1-102-963-00	CERAMIC	33PF 5%	50V	D1722	8-719-109-50	DIODE RD2.0ESB1
C1734	1-102-963-00	CERAMIC	33PF 5%	50V	D1723	8-719-109-50	DIODE RD2.0ESB1
C1735	1-124-122-11	ELECT	100MF 20%	35V		<FUSE>	
C1736	1-108-426-91	MYLAR	0.027MF	200V	F901 Δ	1-533-745-11	FUSE, CLASS TUBE 3.15A/125V
C1737	1-124-937-11	ELECT	10MF 20%	16V		1-533-223-11	CLIP, FUSE; F901
C1738	1-124-122-11	ELECT	100MF 20%	35V	F902 Δ	1-533-745-11	FUSE, CLASS TUBE 3.15A/125V
C1739	1-136-153-00	FILM	0.01MF 5%	50V		1-533-223-11	CLIP, FUSE; F902
C1740	1-124-122-11	ELECT	100MF 20%	35V		<IC>	
C1741	1-124-122-11	ELECT	100MF 20%	35V	IC901	8-759-145-58	IC UPC4558C
C1742	1-126-104-11	ELECT	470MF 20%	35V	IC902	8-752-033-68	IC CXA1268P
C1744	1-124-478-11	ELECT	100MF 20%	25V	IC903	8-759-701-56	IC NJM78M05FA
C1745	1-126-375-11	ELECT	100MF 20%	25V	IC904	8-759-701-65	IC NJM79M05FA
C1755	1-106-220-00	MYLAR	0.1MF 10%	100V	IC905	8-759-701-89	IC NJM7915FA
C1756	1-106-220-00	MYLAR	0.1MF 10%	100V		4-382-854-11	SCREW (M3X10), P, SW (+); IC905
C1757	1-106-220-00	MYLAR	0.1MF 10%	100V	IC906	8-759-148-84	IC UPC2415HF
C1758	1-106-220-00	MYLAR	0.1MF 10%	100V		4-382-854-11	SCREW (M3X10), P, SW (+); IC906
C1759	1-106-220-00	MYLAR	0.1MF 10%	100V	IC907	8-759-140-53	IC UPD4053BC
C1760	1-106-220-00	MYLAR	0.1MF 10%	100V	IC908	8-759-145-58	IC UPC4558C
C1763	1-126-096-11	ELECT	10MF 20%	25V	IC910	8-759-054-40	IC PA0036
C1764	1-124-477-11	ELECT	47MF 20%	16V	IC1701	8-759-602-19	IC M5220L
C1765	1-124-477-11	ELECT	47MF 20%	16V	IC1702	8-759-602-19	IC M5220L
C1766	1-126-101-11	ELECT	100MF 20%	16V	IC1703	8-759-602-19	IC M5220L
C1769	1-126-157-11	ELECT	10MF 20%	16V	IC1704	8-749-923-16	IC STR4278-L
C1770	1-130-495-00	MYLAR	0.1MF 5%	50V	IC1705	8-749-923-16	IC STR4278-L
C1771	1-126-096-11	ELECT	10MF 20%	25V	IC1706	8-759-113-13	IC UPC1498H
C1772	1-126-096-11	ELECT	10MF 20%	25V		*4-395-527-01	HOLDER (B), TR; IC1706
IC1861	1-102-074-00	CERAMIC	0.001MF 10%	50V	IC1707	8-759-113-13	IC UPC1498H
		<CONNECTOR>					
D1	*1-564-510-11	PLUG, CONNECTOR 7P					

D

Les composants identifiés par
 une trame et une marque Δ
 sont critiques pour la sécurité
 Ne les remplacer que par une
 pièce portant le numéro spécifique.

The components identified by
 shading and mark Δ are critical
 for safety
 Replace only with part number
 specified

REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK	
IC1708	8-759-113-13	IC UPC1498H		R939	1-215-433-00	METAL	3.3K 1% 1/4W	
IC1709	8-759-145-58	IC UPC4558C		R940	1-215-429-00	METAL	2.2K 1% 1/4W	
IC1710	8-759-145-58	IC UPC4558C		R941	1-215-441-00	METAL	6.8K 1% 1/4W	
IC1714	8-759-145-58	IC UPC4558C		R942	1-215-451-00	METAL	18K 1% 1/4W	
IC1715	8-759-145-58	IC UPC4558C		R943	1-215-441-00	METAL	6.8K 1% 1/4W	
IC1718	8-759-145-58	IC UPC4558C		R944	1-215-439-00	METAL	5.6K 1% 1/4W	
<COIL>				R945	1-215-445-00	METAL	10K 1% 1/4W	
L901	1-459-313-00	COIL WITH CORE (HWC)		R946	1-215-445-00	METAL	10K 1% 1/4W	
L902	1-459-313-00	COIL WITH CORE (HWC)		R947	1-215-439-00	METAL	5.6K 1% 1/4W	
L903	1-459-313-00	COIL WITH CORE (HWC)		R948	1-215-447-00	METAL	12K 1% 1/4W	
L904	1-459-313-00	COIL WITH CORE (HWC)		R949	1-215-439-00	METAL	5.6K 1% 1/4W	
<TRANSISTOR>				R950	1-215-429-00	METAL	2.2K 1% 1/4W	
Q902	8-729-900-89	TRANSISTOR DTC144ES		R951	1-215-429-00	METAL	2.2K 1% 1/4W	
Q906	8-729-119-78	TRANSISTOR 2SC2785-HFE		R952	1-215-429-00	METAL	2.2K 1% 1/4W	
Q907	8-729-119-78	TRANSISTOR 2SC2785-HFE		R953	1-215-439-00	METAL	5.6K 1% 1/4W	
Q908	8-729-900-89	TRANSISTOR DTC144ES		R954	1-215-439-00	METAL	5.6K 1% 1/4W	
Q909	8-729-119-78	TRANSISTOR 2SC2785-HFE		R955	1-215-435-00	METAL	3.9K 1% 1/4W	
Q910	8-729-119-78	TRANSISTOR 2SC2785-HFE		R956	1-215-437-00	METAL	4.7K 1% 1/4W	
Q911	8-729-119-76	TRANSISTOR 2SA1175-HFE		R957	1-215-441-00	METAL	6.8K 1% 1/4W	
Q912	8-729-119-76	TRANSISTOR 2SA1175-HFE		R958	1-215-437-00	METAL	4.7K 1% 1/4W	
<RESISTOR>				R959	1-215-439-00	METAL	5.6K 1% 1/4W	
R901	1-215-463-00	METAL	56K 1% 1/4W	R960	1-215-439-00	METAL	5.6K 1% 1/4W	
R902	1-215-463-00	METAL	56K 1% 1/4W	R961	1-215-439-00	METAL	5.6K 1% 1/4W	
R903	1-215-449-00	METAL	15K 1% 1/4W	R962	1-215-441-00	METAL	6.8K 1% 1/4W	
R904	1-215-455-00	METAL	27K 1% 1/4W	R963	1-215-441-00	METAL	6.8K 1% 1/4W	
R905	1-215-449-00	METAL	15K 1% 1/4W	R964	1-215-441-00	METAL	6.8K 1% 1/4W	
R906	1-215-469-00	METAL	100K 1% 1/4W	R965 1-215-469-00 METAL 100K 1% 1/4W	R966	1-215-469-00	METAL	100K 1% 1/4W
R907	1-215-469-00	METAL	100K 1% 1/4W	R967	1-215-421-00	METAL	1K 1% 1/4W	
R908	1-215-469-00	METAL	100K 1% 1/4W	R968	1-215-437-00	METAL	4.7K 1% 1/4W	
R909	1-215-473-00	METAL	150K 1% 1/4W	R969	1-249-421-11	CARBON	2.2K 5% 1/4W	
R910	1-215-437-00	METAL	4.7K 1% 1/4W	R970 1-215-437-00 METAL 4.7K 1% 1/4W	R971	1-249-421-11	CARBON	2.2K 5% 1/4W
R911	1-215-453-00	METAL	22K 1% 1/4W	R972	1-249-431-11	CARBON	15K 5% 1/4W	
R912	1-215-453-00	METAL	22K 1% 1/4W	R973	1-249-431-11	CARBON	15K 5% 1/4W	
R913	1-215-437-00	METAL	4.7K 1% 1/4W	R974	1-215-399-00	METAL	120 1% 1/4W	
R914	1-215-453-00	METAL	22K 1% 1/4W	R975	1-215-399-00	METAL	120 1% 1/4W	
R915	1-215-413-00	METAL	470 1% 1/4W	R976	1-215-399-00	METAL	120 1% 1/4W	
R916	1-215-457-00	METAL	33K 1% 1/4W	R977	1-215-399-00	METAL	120 1% 1/4W	
R917	1-215-453-00	METAL	22K 1% 1/4W	R978	1-215-399-00	METAL	120 1% 1/4W	
R919	1-215-399-00	METAL	120 1% 1/4W	R979	1-215-399-00	METAL	120 1% 1/4W	
R920	1-215-399-00	METAL	120 1% 1/4W	R980	1-215-399-00	METAL	120 1% 1/4W	
R921	1-215-399-00	METAL	120 1% 1/4W	R981	1-215-399-00	METAL	120 1% 1/4W	
R922	1-215-399-00	METAL	120 1% 1/4W	R982	1-249-431-11	CARBON	15K 5% 1/4W	
R923	1-215-441-00	METAL	6.8K 1% 1/4W	R983	1-249-431-11	CARBON	15K 5% 1/4W	
R924	1-215-441-00	METAL	6.8K 1% 1/4W	R984	1-214-804-11	METAL	3.3 1% 1/2W	
R925	1-215-441-00	METAL	6.8K 1% 1/4W	R985	1-214-804-11	METAL	3.3 1% 1/2W	
R926	1-215-463-00	METAL	56K 1% 1/4W	R986	1-214-804-11	METAL	3.3 1% 1/2W	
R927	1-215-463-00	METAL	56K 1% 1/4W	R987	1-215-421-00	METAL	1K 1% 1/4W	
R928	1-215-461-00	METAL	47K 1% 1/4W	R988	1-215-421-00	METAL	1K 1% 1/4W	
R929	1-215-433-00	METAL	3.3K 1% 1/4W	R989	1-215-421-00	METAL	1K 1% 1/4W	
R930	1-215-433-00	METAL	3.3K 1% 1/4W	R990	1-215-421-00	METAL	1K 1% 1/4W	
R931	1-215-433-00	METAL	3.3K 1% 1/4W	R991	1-215-421-00	METAL	1K 1% 1/4W	
R932	1-215-433-00	METAL	3.3K 1% 1/4W	R992	1-215-421-00	METAL	1K 1% 1/4W	
R933	1-215-433-00	METAL	3.3K 1% 1/4W	R993	1-249-429-11	CARBON	10K 5% 1/4W	
R934	1-215-433-00	METAL	3.3K 1% 1/4W	R994	1-249-429-11	CARBON	10K 5% 1/4W	
R935	1-215-439-00	METAL	5.6K 1% 1/4W	R995	1-215-457-00	METAL	33K 1% 1/4W	
R936	1-215-439-00	METAL	5.6K 1% 1/4W	R997	1-215-463-00	METAL	56K 1% 1/4W	
R937	1-215-439-00	METAL	5.6K 1% 1/4W	R998	1-215-409-00	METAL	330 1% 1/4W	
R938	1-215-417-00	METAL	680 1% 1/4W	R999	1-215-455-00	METAL	27K 1% 1/4W	
				R1701	1-249-411-11	CARBON	330 5% 1/4W	
				R1702	1-249-427-11	CARBON	6.8K 5% 1/4W	
				R1703	1-249-427-11	CARBON	6.8K 5% 1/4W	

The components identified by shading and mark Δ are critical for safety
Replace only with part number specified

Les composants identifiés par une trame et une marque Δ sont critiques pour la sécurité
Ne les remplacer que par une pièce portant le numéro spécifié

D

REF. NO.	PART NO.	DESCRIPTION			REMARK	REF. NO.	PART NO.	DESCRIPTION			REMARK	
R1704	1-249-411-11	CARBON	330	5%	1/4W	R1768	1-249-439-11	CARBON	68K	5%	1/4W	
R1705	1-249-411-11	CARBON	330	5%	1/4W	R1769	1-215-445-00	METAL	10K	1%	1/4W	
R1706	1-249-427-11	CARBON	6.8K	5%	1/4W	R1770	1-249-405-11	CARBON	100	5%	1/4W	
R1707	1-249-411-11	CARBON	330	5%	1/4W	R1771	1-249-405-11	CARBON	100	5%	1/4W	
R1708	1-249-427-11	CARBON	6.8K	5%	1/4W	R1772	1-215-429-00	METAL	2.2K	1%	1/4W	
R1709	1-249-427-11	CARBON	6.8K	5%	1/4W	R1773	1-215-429-00	METAL	2.2K	1%	1/4W	
R1710	1-249-411-11	CARBON	330	5%	1/4W	R1774	1-215-421-00	METAL	1K	1%	1/4W	
R1711	1-249-411-11	CARBON	330	5%	1/4W	R1775	1-249-429-11	CARBON	10K	5%	1/4W	
R1712	1-249-427-11	CARBON	6.8K	5%	1/4W	R1776	1-215-421-00	METAL	1K	1%	1/4W	
R1713	1-215-888-01	METAL OXIDE	100	5%	2W	R1777	1-249-423-11	CARBON	3.3K	5%	1/4W	
R1714	1-249-411-11	CARBON	330	5%	1/4W	R1778	1-215-421-00	METAL	1K	1%	1/4W	
R1715	1-249-411-11	CARBON	330	5%	1/4W	R1779	1-215-888-01	METAL OXIDE	100	5%	2W	F
R1716	1-215-888-01	METAL OXIDE	100	5%	2W	R1780	1-214-804-11	METAL	3.3	1%	1/2W	
R1717	1-249-411-11	CARBON	330	5%	1/4W	R1781	1-214-804-11	METAL	3.3	1%	1/2W	
R1718	1-249-417-11	CARBON	1K	5%	1/4W	R1782	1-215-888-01	METAL OXIDE	100	5%	2W	F
R1719	1-214-792-00	METAL	1	1%	1/2W	R1783	1-214-804-11	METAL	3.3	1%	1/2W	
R1720	1-249-411-11	CARBON	330	5%	1/4W	R1784	1-214-804-11	METAL	3.3	1%	1/2W	
R1721	1-249-417-11	CARBON	1K	5%	1/4W	R1785	1-215-888-01	METAL OXIDE	100	5%	2W	F
R1722	1-249-411-11	CARBON	330	5%	1/4W	R1786	1-214-804-11	METAL	3.3	1%	1/2W	
R1723	1-249-417-11	CARBON	1K	5%	1/4W	R1787	1-214-804-11	METAL	3.3	1%	1/2W	
R1724	1-215-888-01	METAL OXIDE	100	5%	2W	R1788	1-249-433-11	CARBON	22K	5%	1/4W	
R1725	1-215-888-01	METAL OXIDE	100	5%	2W	R1789	1-249-441-11	CARBON	100K	5%	1/4W	
R1726	1-215-888-01	METAL OXIDE	100	5%	2W	R1790	1-249-433-11	CARBON	22K	5%	1/4W	
R1727	1-214-792-00	METAL	1	1%	1/2W	R1791	1-249-429-11	CARBON	10K	5%	1/4W	
R1728	1-214-792-00	METAL	1	1%	1/2W	R1792	1-215-445-00	METAL	10K	1%	1/4W	
R1729	1-214-792-00	METAL	1	1%	1/2W	R1793	1-249-405-11	CARBON	100	5%	1/4W	
R1730	1-249-405-11	CARBON	100	5%	1/4W	R1794	1-215-429-00	METAL	2.2K	1%	1/4W	
R1731	1-249-417-11	CARBON	1K	5%	1/4W	R1795	1-249-433-11	CARBON	22K	5%	1/4W	
R1732	1-249-405-11	CARBON	100	5%	1/4W	R1796	1-249-405-11	CARBON	100	5%	1/4W	
R1733	1-249-405-11	CARBON	100	5%	1/4W	R1797	1-249-429-11	CARBON	10K	5%	1/4W	
R1734	1-249-405-11	CARBON	100	5%	1/4W	R1798	1-249-423-11	CARBON	3.3K	5%	1/4W	
R1735	1-249-405-11	CARBON	100	5%	1/4W	R1800	1-249-405-11	CARBON	100	5%	1/4W	
R1736	1-249-423-11	CARBON	3.3K	5%	1/4W	R1801	1-215-439-00	METAL	5.6K	1%	1/4W	
R1737	1-249-423-11	CARBON	3.3K	5%	1/4W	R1802	1-215-439-00	METAL	5.6K	1%	1/4W	
R1738	1-249-423-11	CARBON	3.3K	5%	1/4W	R1803	1-215-439-00	METAL	5.6K	1%	1/4W	
R1739	1-249-423-11	CARBON	3.3K	5%	1/4W	R1805	1-215-439-00	METAL	5.6K	1%	1/4W	
R1740	1-249-417-11	CARBON	1K	5%	1/4W	R1806	1-249-405-11	CARBON	100	5%	1/4W	
R1741	1-249-423-11	CARBON	3.3K	5%	1/4W	R1807	1-249-405-11	CARBON	100	5%	1/4W	
R1742	1-249-423-11	CARBON	3.3K	5%	1/4W	R1808	1-214-792-00	METAL	1	1%	1/2W	
R1743	1-249-417-11	CARBON	1K	5%	1/4W	R1809	1-214-792-00	METAL	1	1%	1/2W	
R1744	1-249-411-11	CARBON	330	5%	1/4W	R1810	1-214-792-00	METAL	1	1%	1/2W	
R1745	1-249-405-11	CARBON	100	5%	1/4W	R1811	1-214-792-00	METAL	1	1%	1/2W	
R1746	1-214-792-00	METAL	1	1%	1/2W	R1812	1-214-792-00	METAL	1	1%	1/2W	
R1747	1-215-888-01	METAL OXIDE	100	5%	2W	R1813	1-214-792-00	METAL	1	1%	1/2W	
R1748	1-215-421-00	METAL	1K	1%	1/4W	R1814	1-249-431-11	CARBON	15K	5%	1/4W	
R1749	1-215-421-00	METAL	1K	1%	1/4W	R1815	1-247-885-00	CARBON	180K	5%	1/4W	
R1750	1-215-421-00	METAL	1K	1%	1/4W	R1816	1-249-431-11	CARBON	15K	5%	1/4W	
R1751	1-215-421-00	METAL	1K	1%	1/4W	R1817	1-247-885-00	CARBON	180K	5%	1/4W	
R1752	1-215-421-00	METAL	1K	1%	1/4W	R1818	1-249-405-11	CARBON	100	5%	1/4W	
R1753	1-215-421-00	METAL	1K	1%	1/4W	R1819	1-215-437-00	METAL	4.7K	1%	1/4W	
R1754	1-214-792-00	METAL	1	1%	1/2W	R1820	1-215-437-00	METAL	4.7K	1%	1/4W	
R1755	1-215-469-00	METAL	100K	1%	1/4W	R1821	1-215-437-00	METAL	4.7K	1%	1/4W	
R1756	1-215-437-00	METAL	4.7K	1%	1/4W	R1822	1-215-445-00	METAL	10K	1%	1/4W	
R1757	1-215-437-00	METAL	4.7K	1%	1/4W	R1823	1-215-445-00	METAL	10K	1%	1/4W	
R1758	1-215-437-00	METAL	4.7K	1%	1/4W	R1824	1-215-433-00	METAL	3.3K	1%	1/4W	
R1759	1-249-405-11	CARBON	100	5%	1/4W	R1825	1-215-433-00	METAL	3.3K	1%	1/4W	
R1760	1-249-427-11	CARBON	6.8K	5%	1/4W	R1826	1-215-433-00	METAL	3.3K	1%	1/4W	
R1761	1-249-419-11	CARBON	1.5K	5%	1/4W	R1827	1-215-445-00	METAL	10K	1%	1/4W	
R1762	1-215-445-00	METAL	10K	1%	1/4W	R1828	1-215-445-00	METAL	10K	1%	1/4W	
R1763	1-249-427-11	CARBON	6.8K	5%	1/4W	R1829	1-249-434-11	CARBON	27K	5%	1/4W	
R1764	1-249-419-11	CARBON	1.5K	5%	1/4W	R1830	1-249-434-11	CARBON	27K	5%	1/4W	
R1765	1-249-419-11	CARBON	1.5K	5%	1/4W	R1831	1-249-405-11	CARBON	100	5%	1/4W	
R1766	1-249-427-11	CARBON	6.8K	5%	1/4W	R1832	1-215-471-00	METAL	120K	1%	1/4W	
R1767	1-249-427-11	CARBON	6.8K	5%	1/4W							

Les composants identifiés par
 une trame et une marque Δ
 sont critiques pour la sécurité
 Ne les remplacer que par une
 pièce portant le numéro spécifique

The components identified by
 shading and mark Δ are critical
 for safety
 Replace only with part number
 specified

H1
H2
ZR
ZG
ZB

REF.NO.	PART NO.	DESCRIPTION	REMARK	REF.NO.	PART NO.	DESCRIPTION	REMARK
<SWITCH>							
S1601	1-554-303-21	SWITCH, TACTIL		RY1651	1-515-586-11	RELAY (DS-2)	
S1602	1-554-303-21	SWITCH, TACTIL		RY1652	1-515-586-11	RELAY (DS-2)	
S1603	1-554-303-21	SWITCH, TACTIL		<SWITCH>			
S1604	1-554-303-21	SWITCH, TACTIL		S1651	1-554-303-21	SWITCH, TACTIL	
S1605	1-554-303-21	SWITCH, TACTIL		S1652	1-554-303-21	SWITCH, TACTIL	
S1606	1-571-731-21	SWITCH, TACTIL		S1653	1-554-303-21	SWITCH, TACTIL	
*****				S1654	1-554-303-21	SWITCH, TACTIL	
	*1-643-592-11	H2 BOARD		S1655	1-554-303-21	SWITCH, TACTIL	
		*****		*****			
<CAPACITOR>					*A-1390-340-A	ZR BOARD, COMPLETE	
C1651	1-124-477-11	ELECT	47MF 20% 16V	*****			
C1655	1-124-927-11	ELECT	4.7MF 20% 50V	<CAPACITOR>			
<DIODE>				C1901	1-162-115-00	CERAMIC	330PF 10% 2KV
D1651	8-719-908-03	DIODE GPO8D		C1902	1-162-115-00	CERAMIC	330PF 10% 2KV
D1652	8-719-908-03	DIODE GPO8D		<RESISTOR>			
D1653	8-719-108-12	DIODE RD9.1EW		R1901	1-202-818-00	SOLID	1K 20% 1/2W
D1654	8-719-108-12	DIODE RD9.1EW		R1902	1-202-818-00	SOLID	1K 20% 1/2W
D1655	8-719-108-12	DIODE RD9.1EW		R1903	1-249-414-11	CARBON	560 5% 1/4W
D1659	8-719-911-19	DIODE 1SS119		R1904	1-249-414-11	CARBON	560 5% 1/4W
D1660	8-719-110-88	DIODE RD39ESB2		<CONNECTOR>			
D1661	8-719-110-88	DIODE RD39ESB2		ZR2	*1-564-518-11	PLUG, CONNECTOR 3P	
D1662	8-719-110-88	DIODE RD39ESB2		ZR18	*1-691-292-11	PIN, CONNECTOR (PC BOARD) 3P	
D1663	8-719-110-88	DIODE RD39ESB2		ZR-1	*1-564-522-11	PLUG, CONNECTOR 7P	
<CONNECTOR>				*****			
H22	*1-564-519-11	PLUG, CONNECTOR 4P			*A-1390-346-A	ZG BOARD, COMPLETE	
H25	*1-564-517-11	PLUG, CONNECTOR 2P		*****			
H26	*1-564-519-11	PLUG, CONNECTOR 4P		<CAPACITOR>			
H28	*1-564-518-11	PLUG, CONNECTOR 3P		C1911	1-162-115-00	CERAMIC	330PF 10% 2KV
H211	*1-564-517-11	PLUG, CONNECTOR 2P		C1912	1-162-115-00	CERAMIC	330PF 10% 2KV
H216	*1-564-525-11	PLUG, CONNECTOR 10P		<RESISTOR>			
H225	*1-564-518-11	PLUG, CONNECTOR 3P		R1911	1-202-818-00	SOLID	1K 20% 1/2W
<JACK>				R1912	1-202-818-00	SOLID	1K 20% 1/2W
J1651	1-695-817-11	JACK BLOCK, PIN 3P		R1913	1-249-414-11	CARBON	560 5% 1/4W
<TRANSISTOR>				R1914	1-249-414-11	CARBON	560 5% 1/4W
Q1651	8-729-119-78	TRANSISTOR 2SC2785-HFE		<CONNECTOR>			
Q1652	8-729-119-78	TRANSISTOR 2SC2785-HFE		ZG19	*1-691-292-11	PIN, CONNECTOR (PC BOARD) 3P	
Q1653	8-729-119-78	TRANSISTOR 2SC2785-HFE		ZG-2	*1-564-523-11	PLUG, CONNECTOR 8P	
<RESISTOR>				*****			
R1651	1-249-419-11	CARBON	1.5K 5% 1/4W		*A-1390-347-A	ZB BOARD, COMPLETE	
R1652	1-249-421-11	CARBON	2.2K 5% 1/4W	*****			
R1653	1-249-425-11	CARBON	4.7K 5% 1/4W	<CAPACITOR>			
R1654	1-249-430-11	CARBON	12K 5% 1/4W	C1921	1-162-115-00	CERAMIC	330PF 10% 2KV
R1655	1-249-417-11	CARBON	1K 5% 1/4W	C1922	1-162-115-00	CERAMIC	330PF 10% 2KV
R1656	1-249-417-11	CARBON	1K 5% 1/4W				
R1657	1-249-436-11	CARBON	39K 5% 1/4W				
R1658	1-249-437-11	CARBON	47K 5% 1/4W				
R1659	1-249-437-11	CARBON	47K 5% 1/4W				
<RELAY>							

The components identified by shading and mark Δ are critical for safety
Replace only with part number specified

Les composants identifiés par une trame et une marque Δ sont critiques pour la sécurité
Ne les remplacer que par une pièce portant le numéro spécifié

KP-46V15/46V16
KP-53V15/53V16/61V15
RM-Y115

ZB

N

REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
<RESISTOR>							
R1921	1-202-818-00	SOLID 1K 20% 1/2W		C853	1-106-220-00	MYLAR 0.1MF 10% 100V	
R1922	1-202-818-00	SOLID 1K 20% 1/2W		C854	1-126-329-11	ELECT 470MF 20% 50V	
R1923	1-249-414-11	CARBON 560 5% 1/4W		C855	1-124-514-11	ELECT 100MF 20% 50V	
R1924	1-249-414-11	CARBON 560 5% 1/4W		C856	1-162-114-00	CERAMIC 0.0047MF 2KV	
<CONNECTOR>				<DIODE>			
ZB20	*1-691-292-11	PIN, CONNECTOR (PC BOARD) 3P		D801	8-719-928-08	DIODE ERD28-08S	
ZB-3	*1-564-524-11	PLUG, CONNECTOR 9P		D802	8-719-300-80	DIODE RU-1C	
*****				D803	8-719-109-85	DIODE RD5.1ESB2	
*A-1390-351-A	N BOARD, COMPLETE			D804	8-719-911-19	DIODE 1SS119	
*****				D805	8-719-911-19	DIODE 1SS119	
<CAPACITOR>				D806	8-719-109-85	DIODE RD5.1ESB2	
C801	1-125-489-00	ELECT (BLOCK) 560MF 20% 200V		D807	8-719-109-85	DIODE RD5.1ESB2	
C802	1-123-024-21	ELECT 33MF 160V		D808	8-719-911-19	DIODE 1SS119	
C803	1-136-729-11	FILM 1.5MF 5% 400V		D809	8-719-911-19	DIODE 1SS119	
C804	1-106-383-00	MYLAR 0.047MF 200V		D810	8-719-911-19	DIODE 1SS119	
C805	1-102-030-00	CERAMIC 330PF 10% 500V		D811	8-719-109-85	DIODE RD5.1ESB2	
C806	1-130-495-00	MYLAR 0.1MF 5% 50V		D812	8-719-911-19	DIODE 1SS119	
C807	1-123-875-11	ELECT 10MF 20% 50V		D813	8-719-911-19	DIODE 1SS119	
C808	1-126-183-11	ELECT 1000MF 20% 16V		D814	8-719-911-19	DIODE 1SS119	
C809	1-124-903-11	ELECT 1MF 20% 50V		D815	8-719-110-36	DIODE RD13ESB2	
C810	1-124-903-11	ELECT 1MF 20% 50V		D817	8-719-945-80	DIODE ERC06-15S	
C811	1-124-902-00	ELECT 0.47MF 20% 50V		D818	8-719-911-19	DIODE 1SS119	
C812	1-102-973-00	CERAMIC 100PF 5% 50V		D820	8-719-911-19	DIODE 1SS119	
C813	1-102-244-00	CERAMIC 220PF 10% 500V		D850	8-719-109-71	DIODE RD3.9ESB1	
C814	1-106-391-12	MYLAR 0.1MF 10% 200V		D851 8-719-911-19 DIODE 1SS119			
C815	1-106-367-00	MYLAR 0.01MF 10% 200V		D852 8-719-911-19 DIODE 1SS119			
C816	1-124-907-11	ELECT 10MF 20% 50V		D853 8-719-911-19 DIODE 1SS119			
C817	1-124-119-00	ELECT 330MF 20% 16V		D891 8-719-110-49 DIODE RD18ESB2			
C818	1-102-824-00	CERAMIC 470PF 5% 50V		D892	8-719-110-49	DIODE RD18ESB2	
C819	1-124-907-11	ELECT 10MF 20% 50V		<IC>			
C820	1-124-907-11	ELECT 10MF 20% 50V		IC801	8-759-231-58	IC TA7812S	
C821	1-124-907-11	ELECT 10MF 20% 50V		IC802	8-759-103-93	IC UPC393C	
C822	1-124-034-51	ELECT 33MF 20% 16V		IC803	8-759-100-82	IC UPC4082C	
C823	1-124-907-11	ELECT 10MF 20% 50V		IC804	8-759-103-93	IC UPC393C	
C824	1-124-034-51	ELECT 33MF 20% 16V		IC805	8-759-100-75	IC UPC1394C	
C825	1-124-034-51	ELECT 33MF 20% 16V		<COIL>			
C826	1-124-907-11	ELECT 10MF 20% 50V		L801	1-459-862-11	COIL, CHOKE 90UH	
C827	1-124-907-11	ELECT 10MF 20% 50V		L802	1-424-603-11	COIL, CHOKE 1.05MMH	
C828	1-124-907-11	ELECT 10MF 20% 50V		L803	1-459-313-00	COIL WITH CORE (HWC)	
C829	1-124-034-51	ELECT 33MF 20% 16V		L804	1-410-482-31	INDUCTOR 100UH	
C830	1-124-907-11	ELECT 10MF 20% 50V		L805 1-424-603-11 COIL, CHOKE 1.05MMH			
C831	1-106-220-00	MYLAR 0.1MF 10% 100V		<CONNECTOR>			
C832	1-124-907-11	ELECT 10MF 20% 50V		N-1	1-506-348-XX	PIN, CONNECTOR 3P	
C833	1-124-916-11	ELECT 22MF 20% 50V		N-2	*1-564-508-11	PLUG, CONNECTOR 5P	
C834	1-102-121-00	CERAMIC 0.0022MF 10% 50V		N-3	*1-508-766-00	PIN, CONNECTOR (5MM PITCH) 4P	
C835	1-124-927-11	ELECT 4.7MF 20% 50V		N-4	*1-564-507-11	PLUG, CONNECTOR 4P	
C836	1-130-475-00	MYLAR 0.0022MF 5% 50V		N-5	*1-564-508-11	PLUG, CONNECTOR 5P	
C837	1-136-169-00	FILM 0.22MF 5% 50V		N-6	*1-508-786-00	PIN, CONNECTOR (5MM PITCH) 2P	
C838	1-130-475-00	MYLAR 0.0022MF 5% 50V		N-7	*1-508-765-00	PIN, CONNECTOR (5MM PITCH) 3P	
C839	1-102-106-00	CERAMIC 100PF 10% 50V		N-8	*1-508-766-00	PIN, CONNECTOR (5MM PITCH) 4P	
C840 1-136-877-11 FILM 0.33MF 3% 1.6KV				N-9	1-506-348-XX	PIN, CONNECTOR 3P	
C841	1-136-729-11	FILM 1.5MF 5% 400V		N-10	*1-564-511-11	PLUG, CONNECTOR 8P	
C842	1-130-471-00	MYLAR 0.001MF 5% 50V		N-20	*1-560-126-00	PLUG, CONNECTOR (2.5MM) 6P	
C844	1-106-391-12	MYLAR 0.1MF 10% 200V		N-21	*1-560-123-00	PLUG, CONNECTOR (2.5MM) 3P	
C850	1-136-169-00	FILM 0.22MF 5% 50V		N-30	*1-508-784-00	PIN, CONNECTOR (5MM PITCH) 1P	
C851	1-124-907-11	ELECT 10MF 20% 50V					
C852	1-124-907-11	ELECT 10MF 20% 50V					

N

• The components identified by \blacksquare in this manual have been carefully factory-selected for each set in order to satisfy regulations regarding X-ray radiation. Should replacement be required, replace only with the value originally used.

Les composants identifiés par une trame et une marque Δ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifique.

The components identified by shading and mark Δ are critical for safety. Replace only with part number specified.

REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
N-851	*1-506-371-00	PIN, CONNECTOR 2P		R833	1-249-419-11	CARBON	1.5K 5% 1/4W
N-853	*1-506-371-00	PIN, CONNECTOR 2P		R834	1-249-419-11	CARBON	1.5K 5% 1/4W
				R835	1-215-429-00	METAL	2.2K 1% 1/4W
		<NEON LAMP>		R836	1-215-435-00	METAL	3.9K 1% 1/4W
NL801	1-519-108-XX	LAMP, NEON		R837	1-249-433-11	CARBON	22K 5% 1/4W
				R838	1-249-435-11	CARBON	33K 5% 1/4W
				R839	1-249-438-11	CARBON	56K 5% 1/4W
				R840	1-249-434-11	CARBON	27K 5% 1/4W
		<TRANSISTOR>		R841	1-249-429-11	CARBON	10K 5% 1/4W
Q801	8-729-331-61	TRANSISTOR 2SC2555-1		R842	1-249-435-11	CARBON	33K 5% 1/4W
	4-382-854-11	SCREW (M3X10), P, SW (+); Q801		R843	1-249-423-11	CARBON	3.3K 5% 1/4W
	4-383-023-01	SPACER, MICA; Q801		R844	1-249-433-11	CARBON	22K 5% 1/4W
Q802	8-729-119-80	TRANSISTOR 2SC2688-LK		R845	1-249-435-11	CARBON	33K 5% 1/4W
	4-039-042-01	SPACER, INSULATING; Q802		R846	1-249-429-11	CARBON	10K 5% 1/4W
	4-382-854-11	SCREW (M3X10), P, SW (+); Q802		R847	1-214-761-00	METAL	22K 1% 1/4W
Q803	8-729-119-76	TRANSISTOR 2SA1175-HFE		R848	1-215-429-00	METAL	2.2K 1% 1/4W
Q804	8-729-119-78	TRANSISTOR 2SC2785-HFE		R849	1-215-421-00	METAL	1K 1% 1/4W
Q805	8-729-119-78	TRANSISTOR 2SC2785-HFE		R850	1-215-429-00	METAL	2.2K 1% 1/4W
Q806	8-729-119-80	TRANSISTOR 2SC2688-LK		R851	1-215-404-00	METAL	200 1% 1/4W
Q807	8-729-119-78	TRANSISTOR 2SC2785-HFE		R852	1-215-469-00	METAL	100K 1% 1/4W
Q808	8-729-119-78	TRANSISTOR 2SC2785-HFE		R853	1-215-469-00	METAL	100K 1% 1/4W
Q809	8-729-119-76	TRANSISTOR 2SA1175-HFE		R854	1-249-430-11	CARBON	12K 5% 1/4W
Q811	8-729-805-07	TRANSISTOR 2SB1887-C		R855	1-215-469-00	METAL	100K 1% 1/4W
	4-382-854-11	SCREW (M3X10), P, SW (+); Q811		R856	1-249-430-11	CARBON	12K 5% 1/4W
Q812	8-729-804-48	TRANSISTOR 2SC3675-CB		R857	1-249-433-11	CARBON	22K 5% 1/4W
Q820	8-729-119-76	TRANSISTOR 2SA1175-HFE		R858	1-249-413-11	CARBON	470 5% 1/4W
Q851	8-729-119-78	TRANSISTOR 2SC2785-HFE		R859	1-249-435-11	CARBON	33K 5% 1/4W
Q852	8-729-119-78	TRANSISTOR 2SC2785-HFE		R860	1-249-441-11	CARBON	100K 5% 1/4W
Q853	8-729-820-98	TRANSISTOR 2SC4256CB		R861	1-249-421-11	CARBON	2.2K 5% 1/4W
		<RESISTOR>		R862	1-249-434-11	CARBON	27K 5% 1/4W
R801	1-215-378-01	METAL OXIDE	5.6 5% 2W F	R863	1-249-431-11	CARBON	15K 5% 1/4W
R802	1-215-928-01	METAL OXIDE	33K 5% 3W F	R864	1-249-423-11	CARBON	3.3K 5% 1/4W
R803	1-215-928-01	METAL OXIDE	33K 5% 3W F	R865	1-249-440-11	CARBON	82K 5% 1/4W
R804	1-249-429-11	CARBON	10K 5% 1/4W	R866	1-249-436-11	CARBON	39K 5% 1/4W
R805	1-249-423-11	CARBON	3.3K 5% 1/4W	R867	1-249-437-11	CARBON	47K 5% 1/4W
R806	1-249-425-11	CARBON	4.7K 5% 1/4W	R868	1-249-428-11	CARBON	8.2K 5% 1/4W
R807	1-249-441-11	CARBON	100K 5% 1/4W	R869	1-249-429-11	CARBON	10K 5% 1/4W
R808	1-249-417-11	CARBON	1K 5% 1/4W	R870	1-249-417-11	CARBON	1K 5% 1/4W
R809	1-249-417-11	CARBON	1K 5% 1/4W	R871	1-249-440-11	CARBON	82K 5% 1/4W
R810	1-249-441-11	CARBON	100K 5% 1/4W	R872	1-249-423-11	CARBON	3.3K 5% 1/4W
R811	1-249-421-11	CARBON	2.2K 5% 1/4W	R873	1-249-441-11	CARBON	100K 5% 1/4W
R812	1-249-420-11	CARBON	1.8K 5% 1/4W F	R874	1-249-435-11	CARBON	33K 5% 1/4W
R813	1-215-928-01	METAL OXIDE	4.7K 5% 3W F	R875	1-249-421-11	CARBON	2.2K 5% 1/4W
R814	1-249-409-11	CARBON	220 5% 1/4W	R876	1-215-426-00	METAL	1.6K 1% 1/4W
R815	1-249-415-11	CARBON	680 5% 1/4W	R877	1-249-435-11	CARBON	33K 5% 1/4W
R816	1-214-777-00	METAL	100K 1% 1/4W	R878	1-249-441-11	CARBON	100K 5% 1/4W
R817	1-215-471-00	METAL	120K 1% 1/4W	R879	1-215-489-01	METAL OXIDE	27K 5% 3W F
R818	1-215-471-00	METAL	120K 1% 1/4W	R880	1-249-429-11	CARBON	10K 5% 1/4W
R819	1-215-450-00	METAL	16K 1% 1/4W	R881	1-214-761-00	METAL	22K 1% 1/4W
R820	1-215-451-00	METAL	18K 1% 1/4W	R882	1-249-433-11	CARBON	22K 5% 1/4W
R821	1-249-423-11	CARBON	3.3K 5% 1/4W	R883	1-249-417-11	CARBON	1K 5% 1/4W
R822	1-249-433-11	CARBON	22K 5% 1/4W	R884	1-215-894-01	METAL OXIDE	2.2K 5% 3W F
R823	1-249-429-11	CARBON	10K 5% 1/4W	R885	1-249-438-11	CARBON	56K 5% 1/4W
R824	1-215-469-00	METAL	100K 1% 1/4W	R886	1-249-414-11	CARBON	560 5% 1/4W
R825	1-215-453-00	METAL	22K 1% 1/4W	R887	1-215-397-00	METAL	100 1% 1/4W
R826	1-214-962-00	METAL	820K 1% 1/4W	R888	1-249-410-11	CARBON	270 5% 1/4W
R827	1-214-764-00	METAL	30K 1% 1/4W	R889	1-249-417-11	CARBON	1K 5% 1/4W
R828	1-215-455-00	METAL	27K 1% 1/4W	R890	1-249-417-11	CARBON	1K 5% 1/4W
R829	1-215-455-00	METAL	27K 1% 1/4W	R891	1-215-489-01	METAL OXIDE	27K 5% 3W F
R830	1-215-928-01	METAL OXIDE	68K 5% 3W F	R892	1-249-417-11	CARBON	1K 5% 1/4W F
R831	1-215-928-01	METAL OXIDE	68K 5% 3W F	R893	1-215-453-00	METAL	22K 1% 1/4W
R832	1-249-417-11	CARBON	1K 5% 1/4W	R894	1-249-401-11	CARBON	47 5% 1/4W
				R895	1-202-731-00	SOLID	10M 20% 1/2W

The components identified by shading and mark Δ are critical for safety
Replace only with part number specified

Les composants identifiés par une trame et une marque Δ sont critiques pour la sécurité
Ne les remplacer que par une pièce portant le numéro spécifié.

KP-46V15/46V16
KP-53V15/53V16/61V15
RM-Y115

N U

REF.NO.	PART NO.	DESCRIPTION	REMARK
R896	1-260-111-11	CARBON	10K 5% 1/2W
R897	1-247-881-00	CARBON	120K 5% 1/4W
R898	1-202-730-00	SOLID	8.2M 20% 1/2W
R899	1-249-429-11	CARBON	10K 5% 1/4W
R903	1-247-735-11	SOLID	47 20% 1/2W
R904	1-215-828-11	METAL OXIDE	68K 5% 3W
R905	1-215-811-11	METAL OXIDE	100 5% 3W
<SPARK GAP>			
SG801	1-519-422-11	GAP, SPARK	
<TRANSFORMER>			
T801	1-437-078-11	TRANSFORMER, MOTOCONTROL DRIVE	
T802	1-437-090-00	HDT	
T803	1-453-121-11	TRANSFORMER ASSY, FLYBACK (EX-263064)	

*A-1394-420-A U BOARD, COMPLETE			

<CAPACITOR>			
C1004	1-102-125-00	CERAMIC	0.0047MF 10% 50V
C1005	1-126-301-11	ELECT	1MF 20% 50V
C1006	1-164-096-11	CERAMIC	0.01MF 50V
C1007	1-124-598-11	ELECT	22MF 20% 25V
C1008	1-124-598-11	ELECT	22MF 20% 25V
C1010	1-124-465-00	ELECT	0.47MF 20% 50V
C1011	1-124-465-00	ELECT	0.47MF 20% 50V
C1012	1-124-465-00	ELECT	0.47MF 20% 50V
C1013	1-124-125-00	CERAMIC	0.0047MF 10% 50V
C1014	1-126-163-11	ELECT	4.7MF 20% 50V
C1016	1-126-163-11	ELECT	4.7MF 20% 50V
C1018	1-126-301-11	ELECT	1MF 20% 50V
C1020	1-124-242-00	ELECT	33MF 20% 25V
C1021	1-124-465-00	ELECT	0.47MF 20% 50V
C1022	1-124-242-00	ELECT	33MF 20% 25V
C1026	1-102-949-00	CERAMIC	12PF 5% 50V
C1027	1-102-949-00	CERAMIC	12PF 5% 50V
C1028	1-124-242-00	ELECT	33MF 20% 25V
C1029	1-124-282-00	ELECT	22MF 20% 16V
C1030	1-124-478-11	ELECT	100MF 20% 25V
C1031	1-102-963-00	CERAMIC	33PF 5% 50V
C1033	1-124-598-11	ELECT	22MF 20% 25V
C1034	1-124-282-00	ELECT	22MF 20% 16V
C1036	1-124-282-00	ELECT	22MF 20% 16V
C1037	1-124-282-00	ELECT	22MF 20% 16V
C1039	1-124-478-11	ELECT	100MF 20% 25V
C1047	1-124-465-00	ELECT	0.47MF 20% 50V
C1048	1-126-301-11	ELECT	1MF 20% 50V
C1049	1-124-598-11	ELECT	22MF 20% 25V
C1051	1-124-465-00	ELECT	0.47MF 20% 50V
C1055	1-124-589-11	ELECT	47MF 20% 16V
C1056	1-124-499-11	ELECT	1MF 20% 50V
C1057	1-124-768-11	ELECT	4.7MF 20% 50V
C1059	1-124-499-11	ELECT	1MF 20% 50V
C1060	1-124-499-11	ELECT	1MF 20% 50V
C1061	1-124-499-11	ELECT	1MF 20% 50V
C1062	1-102-129-00	CERAMIC	0.01MF 10% 50V
C1063	1-124-768-11	ELECT	4.7MF 20% 50V
C1066	1-126-101-11	ELECT	100MF 20% 16V

REF.NO.	PART NO.	DESCRIPTION	REMARK
<FILTER BLOCK>			
CM1002	1-466-162-31	BLOCK, COM FILTER (CFB-4)	
<DIODE>			
D1005	8-719-110-36	DIODE RD13ESB2	
D1009	8-719-110-36	DIODE RD13ESB2	
D1010	8-719-110-36	DIODE RD13ESB2	
D1011	8-719-110-36	DIODE RD13ESB2	
D1012	8-719-110-36	DIODE RD13ESB2	
D1013	8-719-110-36	DIODE RD13ESB2	
D1017	8-719-110-36	DIODE RD13ESB2	
D1018	8-719-110-36	DIODE RD13ESB2	
D1019	8-719-110-36	DIODE RD13ESB2	
D1020	8-719-109-66	DIODE RD3.3ESB2	
D1021	8-719-109-66	DIODE RD3.3ESB2	
D1022	8-719-109-66	DIODE RD3.3ESB2	
<IC>			
IC1002	8-752-056-50	IC CXA1545S	
IC1011	8-759-145-57	IC UPC4557C	
<COIL>			
L1001	1-408-422-00	INDUCTOR	120UH
L1002	1-408-422-00	INDUCTOR	120UH
<TRANSISTOR>			
Q1009	8-729-119-78	TRANSISTOR 2SC2785-HFE	
Q1010	8-729-119-78	TRANSISTOR 2SC2785-HFE	
Q1016	8-729-119-76	TRANSISTOR 2SA1175-HFE	
Q1017	8-729-119-76	TRANSISTOR 2SA1175-HFE	
Q1018	8-729-141-26	TRANSISTOR 2SC3622A-LK	
Q1019	8-729-119-76	TRANSISTOR 2SA1175-HFE	
Q1020	8-729-119-76	TRANSISTOR 2SA1175-HFE	
Q1021	8-729-119-76	TRANSISTOR 2SA1175-HFE	
Q1022	8-729-141-26	TRANSISTOR 2SC3622A-LK	
Q1023	8-729-119-78	TRANSISTOR 2SC2785-HFE	
Q1029	8-729-119-76	TRANSISTOR 2SA1175-HFE	
Q1030	8-729-119-78	TRANSISTOR 2SC2785-HFE	
Q1031	8-729-119-78	TRANSISTOR 2SC2785-HFE	
Q1032	8-729-119-76	TRANSISTOR 2SA1175-HFE	
Q1033	8-729-119-76	TRANSISTOR 2SA1175-HFE	
Q1034	8-729-119-76	TRANSISTOR 2SA1175-HFE	
<RESISTOR>			
R1011	1-249-435-11	CARBON	33K 5% 1/4W
R1012	1-249-434-11	CARBON	27K 5% 1/4W
R1013	1-249-417-11	CARBON	1K 5% 1/4W
R1014	1-249-441-11	CARBON	100K 5% 1/4W
R1015	1-249-425-11	CARBON	4.7K 5% 1/4W
R1016	1-249-441-11	CARBON	100K 5% 1/4W
R1017	1-249-405-11	CARBON	100 5% 1/4W
R1018	1-249-427-11	CARBON	6.8K 5% 1/4W
R1019	1-249-427-11	CARBON	6.8K 5% 1/4W
R1023	1-249-405-11	CARBON	100 5% 1/4W
R1026	1-249-425-11	CARBON	4.7K 5% 1/4W
R1028	1-249-434-11	CARBON	27K 5% 1/4W
R1029	1-249-435-11	CARBON	33K 5% 1/4W

U S

REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
R1030	1-249-417-11	CARBON	1K 5% 1/4W	U-23	*1-566-367-11	CONNECTOR, HINGE (RECEPTACLE)	
R1032	1-249-417-11	CARBON	1K 5% 1/4W	U-47	*1-564-506-11	PLUG, CONNECTOR 3P	
R1033	1-249-393-11	CARBON	10 5% 1/4W	*****			
R1034	1-249-417-11	CARBON	1K 5% 1/4W	*A-1394-421-A	S BOARD, COMPLETE		
R1036	1-247-883-00	CARBON	150K 5% 1/4W		*****		
R1037	1-247-883-00	CARBON	150K 5% 1/4W	*1-565-514-11	SOCKET, CONNECTOR 2P		
R1038	1-247-883-00	CARBON	150K 5% 1/4W	<CAPACITOR>			
R1043	1-249-417-11	CARBON	1K 5% 1/4W	C3403	1-164-161-11	CERAMIC CHIP 0.0022MF	10% 50V
R1046	1-249-413-11	CARBON	470 5% 1/4W	C3408	1-164-232-11	CERAMIC CHIP 0.01MF	10% 50V
R1048	1-249-405-11	CARBON	100 5% 1/4W	C3409	1-124-477-11	ELECT 47MF	20% 16V
R1050	1-249-405-11	CARBON	100 5% 1/4W	C3411	1-124-034-51	ELECT 33MF	20% 16V
R1051	1-249-417-11	CARBON	1K 5% 1/4W	C3442	1-164-161-11	CERAMIC CHIP 0.0022MF	10% 50V
R1052	1-249-413-11	CARBON	470 5% 1/4W	C3446	1-163-129-00	CERAMIC CHIP 330PF	5% 50V
R1054	1-249-405-11	CARBON	100 5% 1/4W	C3447	1-163-117-00	CERAMIC CHIP 100PF	5% 50V
R1055	1-249-413-11	CARBON	470 5% 1/4W	C3448	1-163-023-00	CERAMIC CHIP 0.015MF	10% 50V
R1056	1-249-405-11	CARBON	100 5% 1/4W	C3449	1-164-182-11	CERAMIC CHIP 0.0033MF	10% 50V
R1057	1-249-441-11	CARBON	100K 5% 1/4W	C3450	1-163-109-00	CERAMIC CHIP 47PF	5% 50V
R1059	1-249-405-11	CARBON	100 5% 1/4W	C3451	1-164-004-11	CERAMIC CHIP 0.1MF	10% 25V
R1061	1-249-409-11	CARBON	220 5% 1/4W	C3452	1-163-989-11	CERAMIC CHIP 0.033MF	10% 25V
R1062	1-249-441-11	CARBON	100K 5% 1/4W	C3453	1-124-477-11	ELECT 47MF	20% 16V
R1063	1-249-409-11	CARBON	220 5% 1/4W	C3454	1-126-162-11	ELECT 3.3MF	20% 50V
R1066	1-215-437-00	METAL	4.7K 1% 1/4W	C3455	1-126-163-11	ELECT 4.7MF	20% 16V
R1067	1-215-437-00	METAL	4.7K 1% 1/4W	C3456	1-163-129-00	CERAMIC CHIP 330PF	5% 50V
R1068	1-215-437-00	METAL	4.7K 1% 1/4W	C3457	1-163-117-00	CERAMIC CHIP 100PF	5% 50V
R1069	1-215-437-00	METAL	4.7K 1% 1/4W	C3459	1-124-477-11	ELECT 47MF	20% 16V
R1070	1-249-411-11	CARBON	330 5% 1/4W	C3460	1-163-099-00	CERAMIC CHIP 18PF	5% 50V
R1071	1-249-431-11	CARBON	15K 5% 1/4W	C3461	1-163-099-00	CERAMIC CHIP 18PF	5% 50V
R1073	1-249-431-11	CARBON	15K 5% 1/4W	C3507	1-164-232-11	CERAMIC CHIP 0.01MF	10% 50V
R1077	1-249-418-11	CARBON	1.2K 5% 1/4W	C3508	1-164-005-11	CERAMIC CHIP 0.47MF	25V
R1078	1-249-418-11	CARBON	1.2K 5% 1/4W	C3509	1-163-139-00	CERAMIC CHIP 820PF	5% 50V
R1079	1-249-405-11	CARBON	100 5% 1/4W	C3515	1-163-121-00	CERAMIC CHIP 150PF	5% 50V
R1080	1-215-423-00	METAL	1.2K 1% 1/4W	C3540	1-126-157-11	ELECT 10MF	20% 16V
R1081	1-215-421-00	METAL	1K 1% 1/4W	<DIODE>			
R1089	1-249-405-11	CARBON	100 5% 1/4W	D3444	8-719-404-46	DIODE MA110	
R1094	1-249-405-11	CARBON	100 5% 1/4W	<IC>			
R1096	1-249-405-11	CARBON	100 5% 1/4W	IC3401	8-759-403-44	IC MN1280-S	
R1099	1-249-413-11	CARBON	470 5% 1/4W	IC3402	8-759-070-42	IC M37201M6-A18FP	
R1110	1-249-405-11	CARBON	100 5% 1/4W	IC3441	8-759-081-30	IC MC78L05ACPRP	
R1116	1-249-441-11	CARBON	100K 5% 1/4W	IC3442	8-759-084-12	IC LA7945	
R1118	1-249-413-11	CARBON	470 5% 1/4W	IC3443	8-759-158-03	IC LC7458A-02	
R1120	1-249-413-11	CARBON	470 5% 1/4W	IC3444	8-759-403-44	IC MN1280-S	
R1121	1-249-441-11	CARBON	100K 5% 1/4W	<COIL>			
R1122	1-249-413-11	CARBON	470 5% 1/4W	L3401	1-408-421-00	INDUCTOR 100UH	
R1133	1-249-405-11	CARBON	100 5% 1/4W	L3461	1-408-409-00	INDUCTOR 10UH	
R1134	1-249-405-11	CARBON	100 5% 1/4W	L3462	1-408-421-00	INDUCTOR 100UH	
R1137	1-249-411-11	CARBON	330 5% 1/4W	<TRANSISTOR>			
R1138	1-249-415-11	CARBON	680 5% 1/4W	Q3441	8-729-422-27	TRANSISTOR 2SD601A-Q	
R1139	1-249-413-11	CARBON	470 5% 1/4W	Q3444	8-729-903-10	TRANSISTOR FMWI	
R1140	1-249-413-11	CARBON	470 5% 1/4W	<CONNECTOR>			
R1141	1-249-413-11	CARBON	470 5% 1/4W	U-12	1-573-300-11	CONNECTOR, BOARD TO BOARD 18P	
R1142	1-249-415-11	CARBON	680 5% 1/4W	U-13	1-573-300-11	CONNECTOR, BOARD TO BOARD 18P	
R1147	1-249-405-11	CARBON	100 5% 1/4W	U-16	*1-564-513-11	PLUG, CONNECTOR 10P	
R1148	1-249-405-11	CARBON	100 5% 1/4W	U-22	1-566-942-11	CONNECTOR, HINGE (RECEPTACLE) 30P	
R1149	1-249-417-11	CARBON	1K 5% 1/4W				
R1150	1-249-405-11	CARBON	100 5% 1/4W				
R1151	1-249-405-11	CARBON	100 5% 1/4W				
R1152	1-249-417-11	CARBON	1K 5% 1/4W				



REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
<RESISTOR>							
R3401	1-216-049-00	METAL GLAZE	1K 5% 1/10W	*A-1394-432-A UT BOARD, COMPLETE *****			
R3402	1-216-049-00	METAL GLAZE	1K 5% 1/10W	<CAPACITOR>			
R3403	1-216-073-00	METAL GLAZE	10K 5% 1/10W	C1152	1-102-074-00	CERAMIC	0.001MF 10% 50V
R3404	1-216-033-00	METAL GLAZE	220 5% 1/10W	C1154	1-164-096-11	CERAMIC	0.01MF 50V
R3405	1-216-057-00	METAL GLAZE	2.2K 5% 1/10W	C1155	1-126-103-11	ELECT	470MF 20% 16V
R3406	1-216-065-00	METAL GLAZE	4.7K 5% 1/10W	C1158	1-124-598-11	ELECT	22MF 20% 25V
R3407	1-216-033-00	METAL GLAZE	220 5% 1/10W	C1160	1-124-598-11	ELECT	22MF 20% 25V
R3408	1-216-065-00	METAL GLAZE	4.7K 5% 1/10W	C1161	1-124-598-11	ELECT	22MF 20% 25V
R3409	1-216-033-00	METAL GLAZE	220 5% 1/10W	C1164	1-126-103-11	ELECT	470MF 20% 16V
R3441	1-216-025-00	METAL GLAZE	100 5% 1/10W	C1165	1-126-301-11	ELECT	1MF 20% 50V
R3442	1-216-041-00	METAL GLAZE	470 5% 1/10W	C1166	1-126-301-11	ELECT	1MF 20% 50V
R3443	1-216-041-00	METAL GLAZE	470 5% 1/10W	C1167	1-126-301-11	ELECT	1MF 20% 50V
R3444	1-216-077-00	METAL GLAZE	15K 5% 1/10W	C1168	1-126-301-11	ELECT	1MF 20% 50V
R3445	1-216-689-11	METAL GLAZE	39K 5% 1/10W	C1199	1-102-129-00	CERAMIC	0.01MF 10% 50V
R3446	1-216-085-00	METAL GLAZE	33K 5% 1/10W	C1200	1-102-129-00	CERAMIC	0.01MF 10% 50V
R3449	1-216-073-00	METAL GLAZE	10K 5% 1/10W	<DIODE>			
R3450	1-216-057-00	METAL GLAZE	2.2K 5% 1/10W	D1152	8-719-110-36	DIODE RD13ESB2	
R3451	1-216-093-00	METAL GLAZE	68K 5% 1/10W	D1158	8-719-110-36	DIODE RD13ESB2	
R3452	1-216-079-00	METAL GLAZE	18K 5% 1/10W	D1159	8-719-110-36	DIODE RD13ESB2	
R3453	1-216-679-11	METAL CHIP	15K 0.50% 1/10W	D1160	8-719-110-36	DIODE RD13ESB2	
R3454	1-216-049-00	METAL GLAZE	1K 5% 1/10W	D1163	8-719-110-36	DIODE RD13ESB2	
R3455	1-216-057-00	METAL GLAZE	2.2K 5% 1/10W	D1164	8-719-110-36	DIODE RD13ESB2	
R3456	1-216-077-00	METAL GLAZE	15K 5% 1/10W	D1165	8-719-110-36	DIODE RD13ESB2	
R3463	1-216-073-00	METAL GLAZE	10K 5% 1/10W	D1166	8-719-110-36	DIODE RD13ESB2	
R3464	1-216-073-00	METAL GLAZE	10K 5% 1/10W	D1167	8-719-110-36	DIODE RD13ESB2	
R3465	1-216-073-00	METAL GLAZE	10K 5% 1/10W	D1168	8-719-110-36	DIODE RD13ESB2	
R3472	1-216-091-00	METAL GLAZE	56K 5% 1/10W	D1169	8-719-110-36	DIODE RD13ESB2	
R3473	1-216-025-00	METAL GLAZE	100 5% 1/10W	D1170	8-719-110-36	DIODE RD13ESB2	
R3474	1-216-295-00	METAL GLAZE	0 5% 1/10W	<JACK>			
R3504	1-216-057-00	METAL GLAZE	2.2K 5% 1/10W	J1001	1-537-187-11	TERMINAL, PUSH (4P)	
R3509	1-216-049-00	METAL GLAZE	1K 5% 1/10W	J1003	1-573-970-11	BLOCK, (S) TERMINAL	
R3511	1-216-025-00	METAL GLAZE	100 5% 1/10W	J1004	1-695-049-11	BLOCK, (S) TERMINAL	
R3512	1-216-059-00	METAL GLAZE	2.7K 5% 1/10W	J1005	1-695-054-11	JACK BLOCK, PIN	
R3513	1-216-059-00	METAL GLAZE	2.7K 5% 1/10W	J1006	1-573-970-11	BLOCK, (S) TERMINAL	
R3514	1-216-059-00	METAL GLAZE	2.7K 5% 1/10W	J1007	1-573-969-11	JACK BLOCK, PIN	
R3519	1-216-049-00	METAL GLAZE	1K 5% 1/10W	J1008	1-573-969-11	JACK BLOCK, PIN	
R3520	1-216-049-00	METAL GLAZE	1K 5% 1/10W	<RESISTOR>			
R3521	1-216-049-00	METAL GLAZE	1K 5% 1/10W	R1153	1-249-403-11	CARBON	68 5% 1/4W
R3525	1-216-295-00	METAL GLAZE	0 5% 1/10W	R1164	1-247-895-00	CARBON	470K 5% 1/4W
R3526	1-216-073-00	METAL GLAZE	10K 5% 1/10W	R1165	1-247-895-00	CARBON	470K 5% 1/4W
R3528	1-216-295-00	METAL GLAZE	0 5% 1/10W	R1166	1-247-895-00	CARBON	470K 5% 1/4W
R3529	1-216-295-00	METAL GLAZE	0 5% 1/10W	R1167	1-247-895-00	CARBON	470K 5% 1/4W
R3530	1-216-073-00	METAL GLAZE	10K 5% 1/10W	R1168	1-247-895-00	CARBON	470K 5% 1/4W
R3531	1-216-073-00	METAL GLAZE	10K 5% 1/10W	R1169	1-249-403-11	CARBON	68 5% 1/4W
R3532	1-216-073-00	METAL GLAZE	10K 5% 1/10W	R1170	1-249-403-11	CARBON	68 5% 1/4W
R3535	1-216-033-00	METAL GLAZE	220 5% 1/10W	R1171	1-247-895-00	CARBON	470K 5% 1/4W
R3537	1-216-295-00	METAL GLAZE	0 5% 1/10W	R1172	1-247-895-00	CARBON	470K 5% 1/4W
R3540	1-216-073-00	METAL GLAZE	10K 5% 1/10W	R1173	1-247-804-11	CARBON	75 5% 1/4W
<CONNECTOR>				R1174	1-247-895-00	CARBON	470K 5% 1/4W
S-42	*1-568-378-21	PIN, CONNECTOR 3P		R1175	1-247-895-00	CARBON	470K 5% 1/4W
S-43	*1-564-508-11	PLUG, CONNECTOR 5P		R1176	1-247-804-11	CARBON	75 5% 1/4W
S-45	*1-564-511-71	PLUG, CONNECTOR 8P		R1178	1-247-895-00	CARBON	470K 5% 1/4W
S-47	*1-564-506-11	PLUG, CONNECTOR 3P		R1179	1-247-895-00	CARBON	470K 5% 1/4W
S-46	*1-564-506-11	PLUG, CONNECTOR 3P		R1180	1-247-804-11	CARBON	75 5% 1/4W
<CRYSTAL>				R1181	1-247-804-11	CARBON	75 5% 1/4W
X3401	1-577-358-21	VIBRATOR, CERAMIC		R1183	1-247-895-00	CARBON	470K 5% 1/4W
X3441	1-577-364-11	VIBRATOR, CERAMIC		*****			



• The components identified by in this manual have been carefully factory-selected for each set in order to satisfy regulations regarding X-ray radiation. Should replacement be required, replace only with the value originally used

Les composants identifiés par une trame et une marque sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifique.

The components identified by shading and mark are critical for safety. Replace only with part number specified.

REF. NO.	PART NO.	DESCRIPTION	REMARK
R1184	1-247-895-00	CARBON 470K 5% 1/4W	
R1185	1-247-895-00	CARBON 470K 5% 1/4W	
R1186	1-247-895-00	CARBON 470K 5% 1/4W	
R1188	1-247-804-11	CARBON 75 5% 1/4W	
R1191	1-249-425-11	CARBON 4.7K 5% 1/4W	
R1192	1-249-425-11	CARBON 4.7K 5% 1/4W	
R1193	1-249-425-11	CARBON 4.7K 5% 1/4W	
R1194	1-249-425-11	CARBON 4.7K 5% 1/4W	
R1196	1-249-429-11	CARBON 10K 5% 1/4W	

<SWITCH>

S1150 1-572-198-11 SWITCH, KEYBOARD

<CONNECTOR>

UT11 *1-564-519-11 PLUG, CONNECTOR 4P
 UT22 *1-566-941-11 CONNECTOR, HINGE (TAB) 30P
 UT23 *1-566-641-11 CONNECTOR, HINGE (TAB) 18P
 UT35 *1-564-518-11 PLUG, CONNECTOR 3P

MISCELLANEOUS

1-241-744-11 RESISTOR ASSY (HIGH-VOLTAGE)
 1-417-178-11 SELECTOR, ANTENNA (AS-2)
 1-451-396-21 DEFLECTION YOKE (Y936FA)
 1-452-443-13 NECK ASSY, PICTURE TUBE (R8367)
 1-453-108-11 DC BLOCK, HIGH-VOLTAGE
 1-544-768-11 SPEAKER (13CM) (COAXIAL)
 *1-555-400-00 CABLE, PIN
 *1-557-056-31 CABLE, P-P
 1-559-865-41 LEAD ASSY, HIGH-VOLTAGE
 1-574-590-31 LEAD ASSY, HIGH-VOLTAGE (KP-46V15(US/CND)/46V16/53V15/53V16)

1-696-002-12 COIL, POWER(WITH NOISE FILTER)
 9903 RES, METAL FILM 1/4W
 9901 RES, METAL FILM 1/4W
 9902 RES, METAL FILM 1/4W

Y901 8-736-633-05 PICTURE TUBE 07MK(8) (SD-249) (KP-46V15(US/CND)/46V16/53V15/53V16)
 8-736-641-05 PICTURE TUBE 07MK2(8) (SD-249) (KP-61V15(US/CND))

Y902 8-736-631-05 PICTURE TUBE 07MK(G) (SD-249) (KP-46V15(US/CND)/46V16/53V15/53V16)
 8-736-634-05 PICTURE TUBE 07MK3(G) (SD-249) (KP-61V15(US/CND))

Y903 8-736-632-05 PICTURE TUBE 07MK(B) (SD-249) (KP-46V15(US/CND)/46V16/53V15/53V16)
 8-736-640-05 PICTURE TUBE 07MK2(B) (SD-249) (KP-61V15(US/CND))

ACCESSORIES AND PACKING MATERIALS

*3-704-356-01 SHEET (STANDARD), PROTECTION (KP-46V15(US/CND))
 3-756-987-21 MANUAL, INSTRUCTION (ENGLISH)
 3-756-987-31 MANUAL, INSTRUCTION (FRENCH) (KP-46V15(CND)/61V15(CND))
 3-756-987-41 MANUAL, INSTRUCTION (SPANISH) (KP-46V15(US)/46V16/53V15/53V16/61V15(US))
 *4-030-895-01 JOINT

REF. NO.	PART NO.	DESCRIPTION	REMARK
*4-037-126-01		INDIVIDUAL CARTON (KP-46V15(US/CND)/46V16)	
*4-037-127-01		TRAY (KP-46V15(US/CND)/46V16)	
*4-037-128-01		CUSHION (UPPER) (ASSY) (KP-46V15(US/CND)/46V16)	
*4-037-129-01		CUSHION (LOWER) (ASSY) (KP-46V15(US/CND)/46V16)	
*4-037-165-01		INDIVIDUAL CARTON (KP-53V15/53V16)	
*4-037-166-01		TRAY (KP-53V15/53V16)	
*4-037-167-01		CUSHION (UPPER) (ASSY) (KP-53V15/53V16)	
*4-037-168-01		CUSHION (LOWER) (ASSY) (KP-53V15/53V16)	
*4-037-328-01		PLATE, TOP (KP-53V15/53V16)	
*4-037-674-01		PLATE, TOP (KP-46V15(US/CND)/46V16)	
*4-037-918-01		PLATE, BOTTOM (KP-46V15(US/CND)/46V16)	
*4-038-043-01		PLATE, BOTTOM (KP-53V15/53V16)	
*4-388-954-01		BAG, PROTECTION (KP-53V15/53V16)	
*4-395-902-01		BAG, PROTECTION (KP-46V15(US/CND)/46V16)	
*4-040-108-01		CUSHION (UPPER) (ASSY) (KP-61V15(US/CND))	
*4-040-109-01		CUSHION (LOWER) (ASSY) (KP-61V15(US/CND))	
*4-040-110-01		TRAY (KP-61V15(US/CND))	
*4-040-111-01		PLATE, TOP (KP-61V15(US/CND))	
*4-040-112-01		PLATE, BOTTOM (KP-61V15(US/CND))	
*4-040-117-01		INDIVIDUAL CARTON (KP-61V15(US/CND))	
*4-040-535-01		BAG, POLYETHYLENE (KP-61V15(US/CND))	

REMOTE COMMANDER

1-467-125-11 REMOTE COMMANDER (RM-Y115)
 9-902-719-01 COVER (FOR RM-Y115)
 9-998-214-01 COVER, BATTERY (FOR RM-Y115)