


KV-32XBR76

RM-Y115

SERVICE MANUAL

US Model
Chassis No. SCC-F16P-A

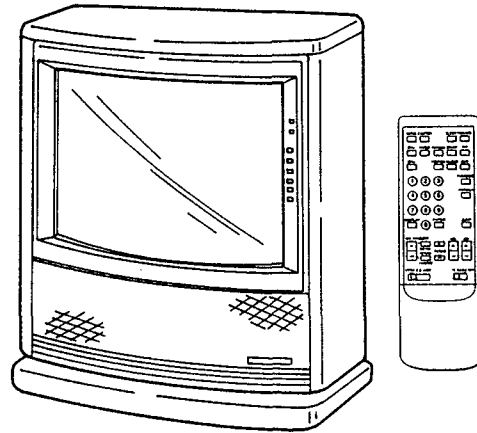

FN CHASSIS

MODELS OF THE SAME SERIES	
KV-32XBR76	KV-27XBR96S/32XBR96S
KV-27XBR35/32XBR35	KV-32XBR26/32XBR36
KV-27XBR95S/32XBR95S	KV-32XBR91S

SPECIFICATIONS

Television system	American TV standards	Output jacks	MONITOR OUT
Channel coverage	VHF: 2-13 UHF: 14-69 CABLE TV: 1-125		S VIDEO MONITOR OUT (4-pin mini DIN) Y: 1 Vp-p, 75-ohms unbalanced, sync negative
Picture tube	Microblack™ Trinitron® tube 32-inch picture measured diagonally 34-inch picture tube measured diagonally		Video (phono jacks): 1 Vp-p, 75-ohms unbalanced, sync negative
Antenna	75-ohms external antenna terminal for VHF/UHF		Audio (phono jacks): 500 mVrms (100% modulation) Impedance: 10 kilo-ohms
Input jacks	VIDEO IN 1, 2 and 3 S VIDEO IN (4-pin mini DIN) Y: 1 Vp-p, 75-ohms unbalanced, sync negative C: 0.286 Vp-p (Burst signal) 75-ohms Video (phono jacks): 1 Vp-p, 75-ohms unbalanced, sync negative Audio (phono jacks): 500 mVrms (100% modulation) Impedance: 47 kilo-ohms		AUDIO OUTPUT (VARIABLE) (phono jacks) More than 900 mVrms (100% modulation) at the maximum volume setting (variable) Impedance: 5 kilo-ohms
			AUDIO LINE OUT (phono jacks) 900 mVrms (100% modulation) Impedance: 5 kilo-ohms

- Continued on next page -

TRINITRON® COLOR TV
SONY®



Speaker output	13W×2 (8 ohms)
Speaker size	Tweeter 50 mm (2 in.)×2 units Woofer 100 mm (4 in.)×2 units
Audio frequency response	Tweeter 8 kHz-20 kHz Woofer 50 Hz-8 kHz
Power requirements	120 V AC, 60 Hz
Power consumption	225W
Dimensions (w/h/d)	Approx. 992×1,079×677 mm (W/H/D) (36 ³ / ₈ ×42 ¹ / ₂ ×26 ⁵ / ₈ inches)
Weight	Approx. 135.8kg (299 lb 7 oz)
Supplied accessories	Remote Commander RM-Y115 (1) with 2 size AA (R6) EVEREADY batteries U/V mixer EAC-66 Connecting cable RK-74A VMC-810S/820S YC-15V/30V

Design and specifications are subject to change without notice.

(CAUTION)

SHORT CIRCUIT THE ANODE OF THE PICTURE TUBE AND THE ANODE CAP TO THE METAL CHASSIS, CRT SHIELD, OR CARBON PAINTED ON THE CRT, AFTER REMOVING THE ANODE.

WARNING!!

AN ISOLATION TRANSFORMER SHOULD BE USED DURING ANY SERVICE TO AVOID POSSIBLE SHOCK HAZARD, BECAUSE OF LIVE CHASSIS.
THE CHASSIS OF THIS RECEIVER IS DIRECTLY CONNECTED TO THE AC POWER LINE.

SAFETY-RELATED COMPONENT WARNING !!

COMPONENTS IDENTIFIED BY SHADING AND MARK Δ ON THE SCHEMATIC DIAGRAMS, EXPLODED VIEWS AND IN THE PARTS LIST ARE CRITICAL TO SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY. CIRCUIT ADJUSTMENTS THAT ARE CRITICAL TO SAFE OPERATION ARE IDENTIFIED IN THIS MANUAL. FOLLOW THESE PROCEDURES WHENEVER CRITICAL COMPONENTS ARE REPLACED OR IMPROPER OPERATION IS SUSPECTED.

TABLE OF CONTENTS

<u>Section</u>	<u>Title</u>	<u>Page</u>	<u>Section</u>	<u>Title</u>	<u>Page</u>
1. GENERAL			6. DIAGRAMS		
	Locating Controls and Connectors	5	6-1. Block Diagram (1)		57
	Using the On-Screen Menus	7	Block Diagram (2)		59
	Setting CABLE ON or OFF	9	Block Diagram (3)		61
	Presetting TV Channels	10	Block Diagram (4)		65
	Watching TV Programs	13	6-2. Frame Schematic Diagram		69
	Using Convenient Features	14	6-3. Circuit Boards Location		72
	Using Closed Caption	15	6-4. Schematic Diagrams and Printed Wiring Boards		72
	Selecting a Picture and Sound Mode	16	• UT Board		73
	Watching Two Pictures at Once (PIP)	17	• U Board		74
	Adjusting the TV	19	• A Board		83
	Customizing the Screen Display	23	• D Board		87
	Using Timer-Activated Functions	25	• E1 Board		88
	Setting FAVORITE CHANNEL	29	• E2 Board		97
	Using the Pre-Programmed Remote Commander	30	• G Board		99
	Troubleshooting	33	• M Board		103
			• HS3 Board		105
2. DISASSEMBLY			• V Board		105
2-1. Rear Cover Removal		34	• N Board		106
2-2. Chassis Assy Removal		34	• P1 Board		113
2-3. Service Position		34	• P3 Board		115
2-4. Antenna Terminal Board Removal		35	• S Board		117
2-5. UT Bracket Removal		35	• X2 Board		117
2-6. G Bracket Removal		36	• Y2 Board		118
2-7. D Board Removal		36	• C Board		120
2-8. U Bracket Removal		37	6-5. Semiconductors		125
2-9. Connector Cable		38			
2-10. Picture Tube Removal		39	7. EXPLODED VIEWS		
3. SET-UP ADJUSTMENTS			7-1. Chassis		128
3-1. Beam Landing		40	7-2. Picture Tube		129
3-2. Convergence		41			
3-3. Focus Adjustment		44	8. ELECTRICAL PARTS LIST		130
3-4. G2 (Screen) and White Balance Adjustments		45			
4. SAFETY RELATED ADJUSTMENTS		46			
5. CIRCUIT ADJUSTMENTS					
5-1. Electrical Adjustment by Remote Commander		49			
5-2. A Board Adjustments		51			
5-3. P1 Board Adjustments		55			
5-4. P3 Board Adjustments		55			

SAFETY CHECK-OUT

After correcting the original service problem, perform the following safety checks before releasing the set to the customer :

1. Check the area of your repair for unsoldered or poorly-soldered connections. Check the entire board surface for solder splashes and bridges
2. Check the interboard wiring to ensure that no wires are "pinched" or contact high-wattage resistors.
3. Check that all control knobs, shields, covers, ground straps, and mounting hardware have been replaced. Be absolutely certain that you have replaced all the insulators.
4. Look for unauthorized replacement parts, particularly transistors, that were installed during a previous repair. Point them out to the customer and recommend their replacement.
5. Look for parts which, though functioning, show obvious signs of deterioration. Point them out to the customer and recommend their replacement
6. Check the line cord for cracks and abrasion. Recommend the replacement of any such line cord to the customer
7. Check the condition of the monopole antenna (if any).
Make sure the end is not broken off, and has the plastic cap on it. Point out the danger of impalement on a broken antenna to the customer, and recommend the antenna's replacement.
8. Check the B+ and HV to see they are at the values specified. Make sure your instruments are accurate; be suspicious of your HV meter if sets always have low HV.
9. Check the antenna terminals, metal trim, "metallized" knobs, screws, and all other exposed metal parts for AC leakage. Check leakage as described below.



LEAKAGE TEST

The AC leakage from any exposed metal part to earth ground and from all exposed metal parts to any exposed metal part having a return to chassis, must not exceed 0.5mA (500 microamperes). Leakage current can be measured by any one of three methods.

1. A commercial leakage tester, such as the Simpson 229 or RCA WT-540A. Follow the manufacturers' instructions to use these instruments.
2. A battery-operated AC milliammeter. The Data Precision 245 digital multimeter is suitable for this job.
3. Measuring the voltage drop across a resistor by means of a VOM or battery-operated AC voltmeter. The "limit" indication is 0.75V, so analog meters must have an accurate low-voltage scale. The Simpson 250 and Sanwa SH-63Trd are examples of a passive VOM that is suitable. Nearly all battery operated digital multimeters that have a 2V AC range are suitable. (See Fig. A)

HOW TO FIND A GOOD EARTH GROUND

A cold-water pipe is guaranteed earth ground; the cover-plate retaining screw on most AC outlet boxes is also at earth ground. If the retaining screw is to be used as your earth-ground, verify that it is at ground by measuring the resistance between it and a cold-water pipe with an ohmmeter. The reading should be zero ohms. If a cold-water pipe is not accessible, connect a 60-100 watt trouble light (not a neon lamp) between the hot side of the receptacle and the retaining screw. Try both slots, if necessary, to locate the hot side of the line, the lamp should light at normal brilliance if the screw is at ground potential. (See Fig. B)

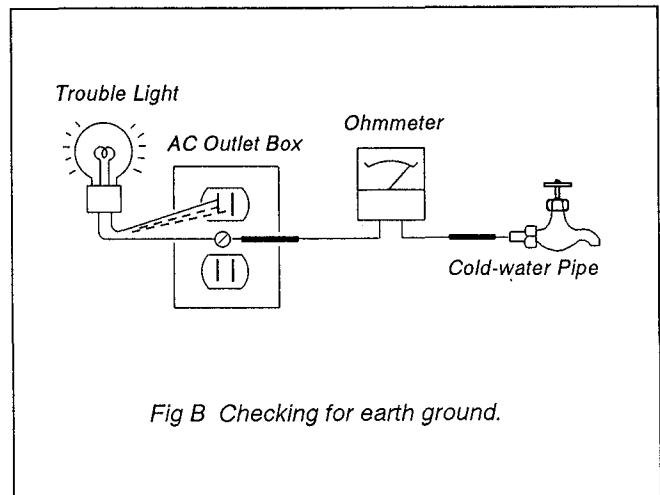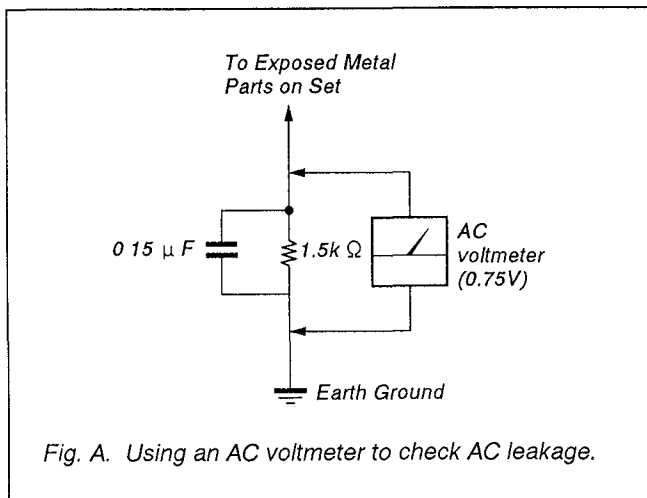


SECTION 1 GENERAL

Locating Controls and Connectors


The operating instructions mentioned here are partial abstracts from the Operating Instruction Manual. The page numbers of the Operating Instruction Manual remain as in the manual.

For details, see the pages indicated by the numbered black circles ●.


Front

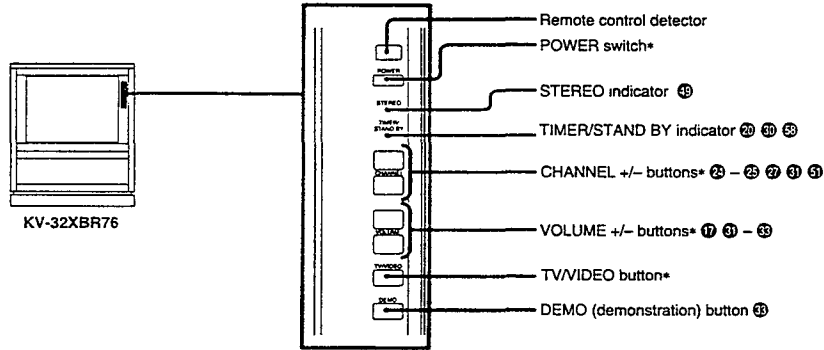

Rear

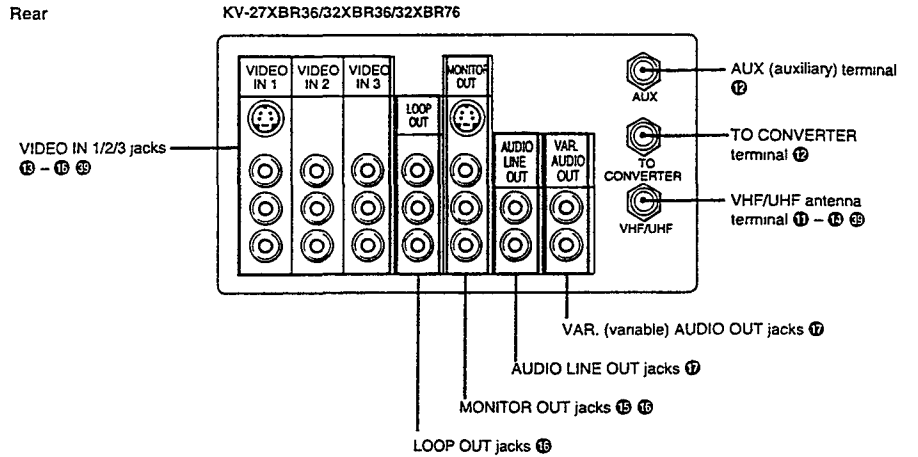


Screen Displays

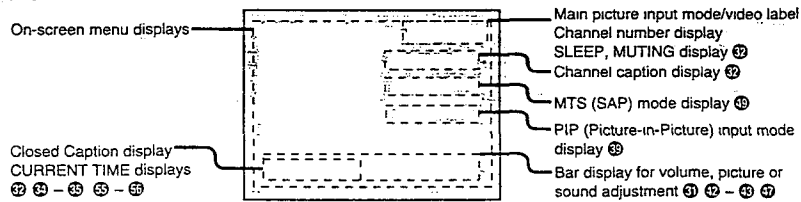


* Buttons with the same function are also located on the Remote Commander (p. 8).

Locating Controls and Connectors

Remote Commander (with the video control cover closed)

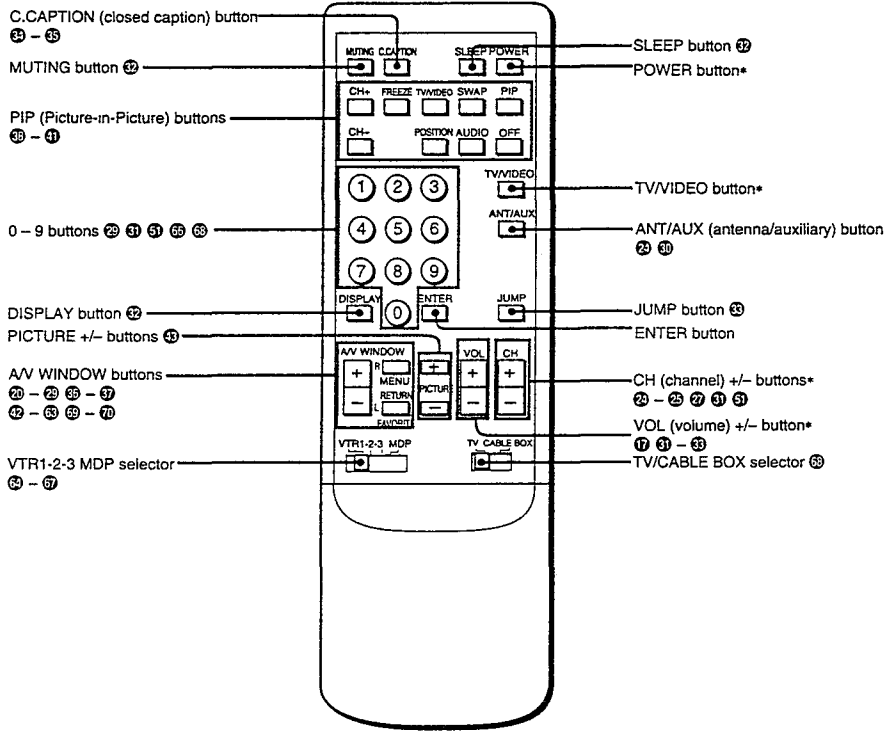

Remote Commander (with the video control cover open)

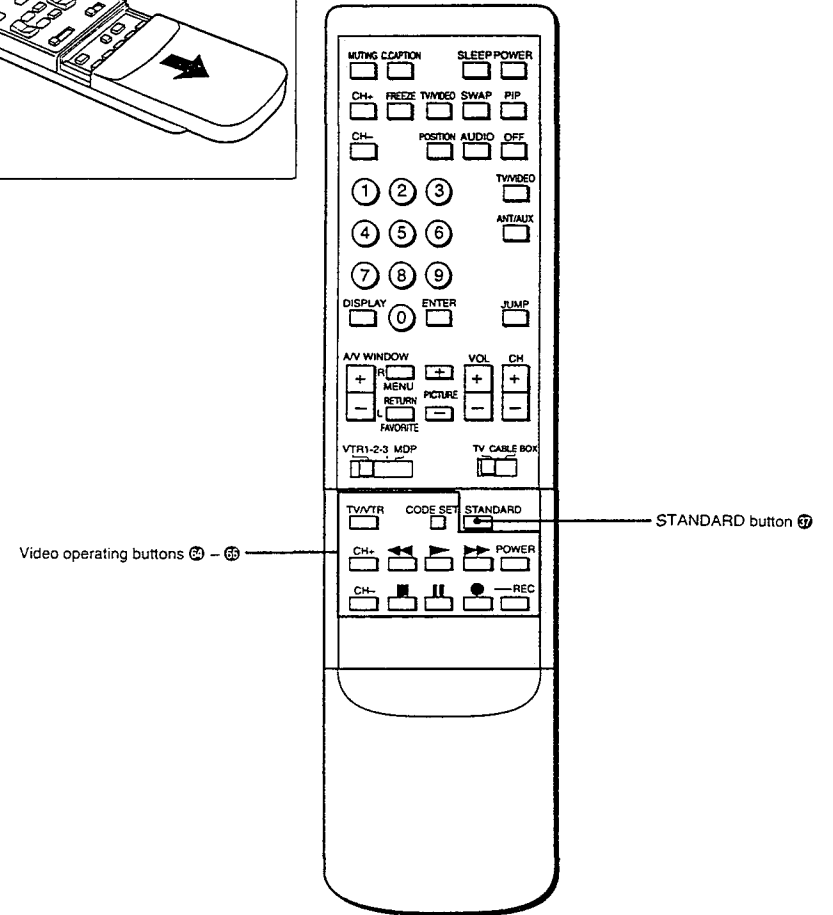


* Buttons with the same function are also located on the TV (p. 6).

Note
 If the TV/CABLE BOX selector is set to CABLE BOX, the Remote Commander is able to control a connected cable box, not the TV (p. 68). Set the selector to TV to control the TV with the Remote Commander.


Using the On-Screen Menus

The following flow chart shows the different levels of on-screen menus that you can use to make various adjustments and settings. See the indicated pages for instructions on using each feature.


For picture and sound quality adjustment

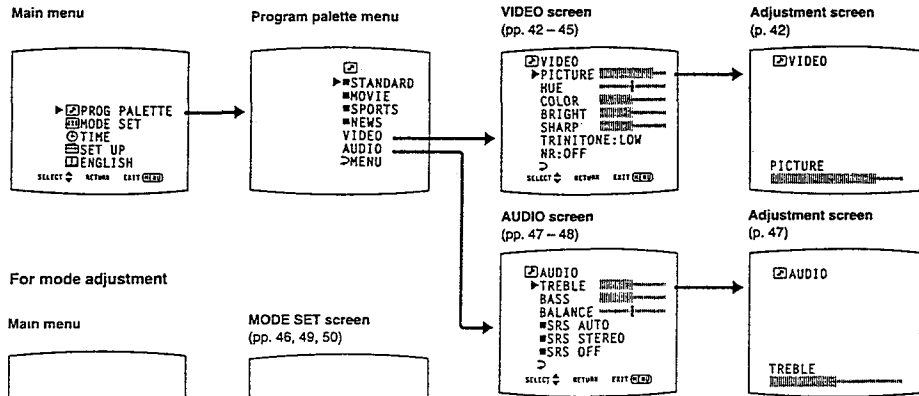


For mode adjustment

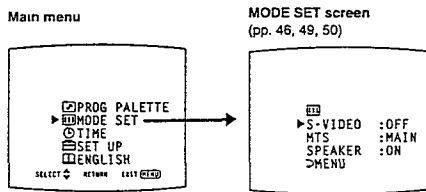

For time-related settings

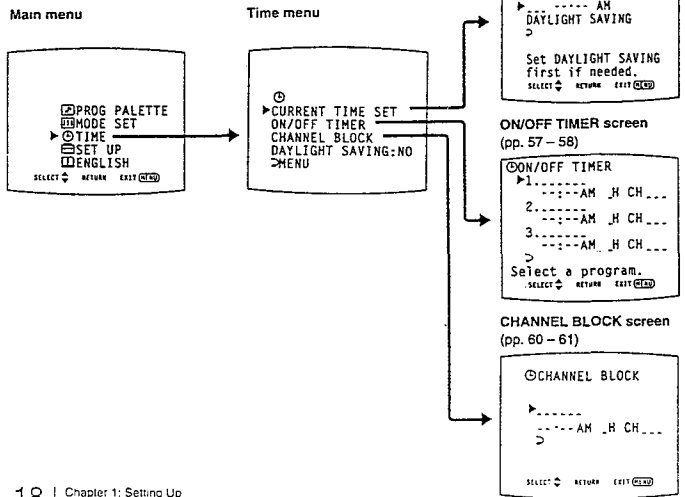


For presetting and other functions

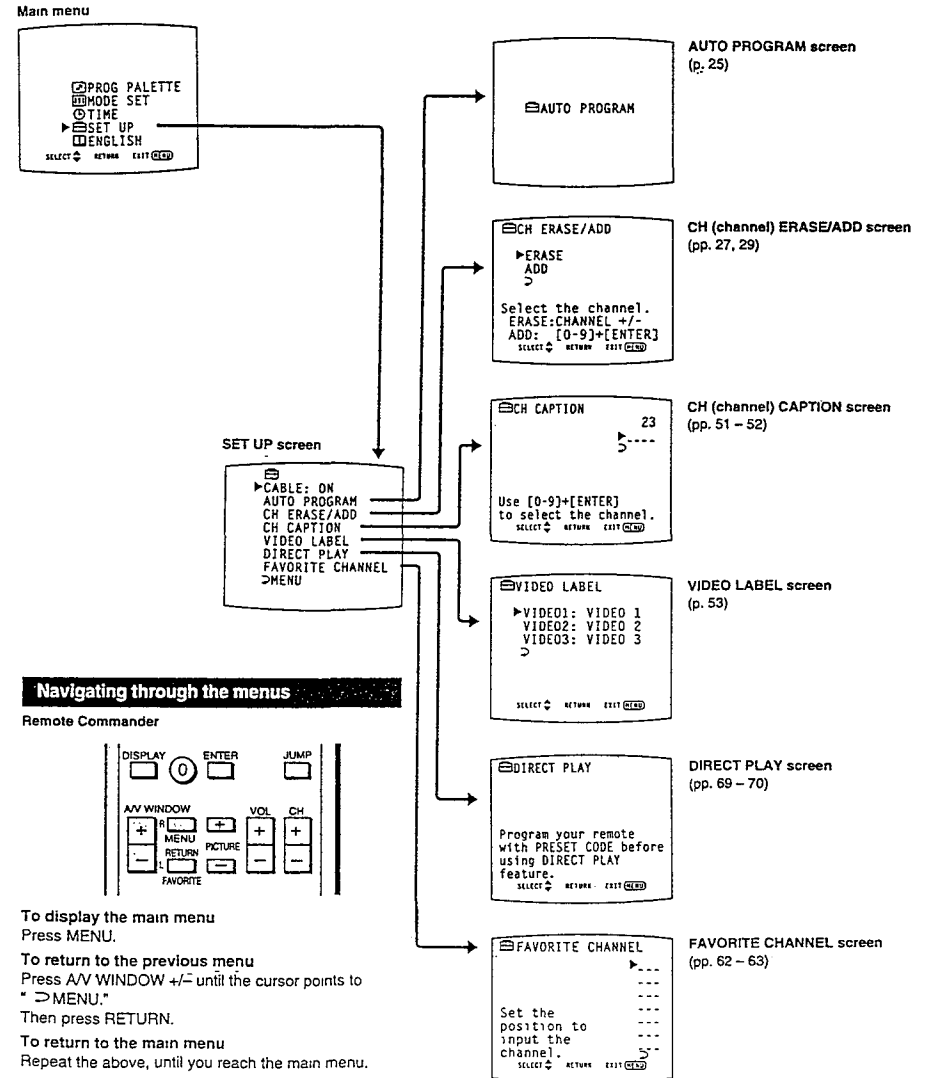


Navigating through the menus

Remote Commander

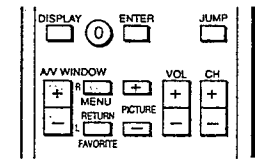

- To display the main menu
Press MENU.
 - To return to the previous menu
Press AV WINDOW +/- until the cursor points to " >MENU." Then press RETURN.
 - To return to the main menu
Repeat the above, until you reach the main menu.
 - To return to the normal screen
Press MENU on the Remote Commander.
- Note**
The menus disappear automatically, if you do not press a button within 90 seconds.

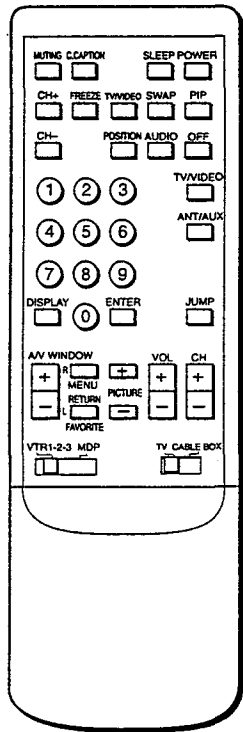


Changing the menu language

The menu language is factory-set to ENGLISH. Follow these instructions to change the menu language to Spanish or French, or back to English.



- 1 Press POWER on the TV or on the Remote Commander to turn on the TV. The TIMER/STAND BY indicator flashes until the picture appears.




- 2 Press MENU. The main menu appears.

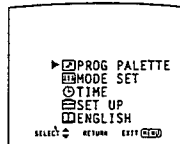

- 3 Press AV WINDOW +/- until the cursor points to "ENGLISH." Then press RETURN. The language display turns red.

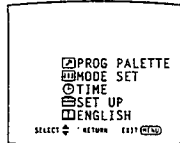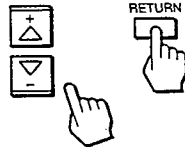


- 4 Press AV WINDOW +/- to select the language. Each time you press AV WINDOW +/-, the "ESPAÑOL," "FRANÇAIS" and "ENGLISH" menus appear.

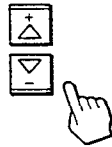

Note
Certain parts of the "ESPAÑOL" and "FRANÇAIS" menus remain in English.

- 5 Press RETURN. The language is selected.

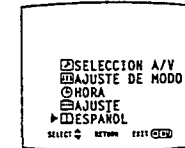

Spanish menu


To return to the normal screen Press MENU on the Remote Commander.

- Notes concerning menus**
- During PIP (Picture-in-Picture) mode, the on-screen menus may overlap the window picture.
 - Screen displays (VOLUME, MUTING, CHANNEL, etc.) may overlap the on-screen menus.
 - The menus disappear automatically, if you do not press a button within 90 seconds.


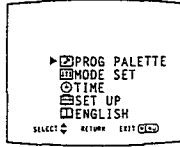
Setting CABLE ON or OFF



If you have cable connected to the TV, follow the steps below to set the cable connection on or off. Set CABLE OFF to preset or watch VHF or UHF channels, and set CABLE ON to preset or watch cable TV channels.


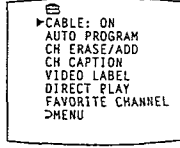
Note
If the TV is in video mode, the "CABLE" display is shaded and cannot be selected. Press TV/VIDEO on the TV or on the Remote Commander to change to TV mode.

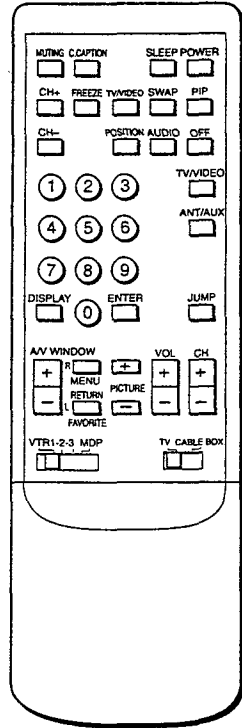
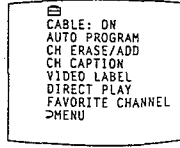


- 1** Press MENU.
The main menu appears.


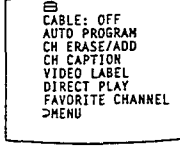


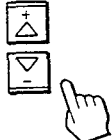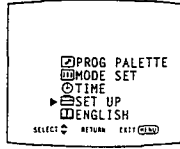- 2** Press A/V WINDOW +/- until the cursor points to "SET UP".


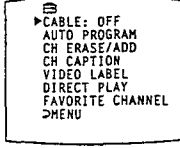


- 3** Press RETURN.
The set up menu appears, and the cursor points to "CABLE."



- 4** Press RETURN again.
The mode display turns red.

- 5** Press A/V WINDOW +/- to select "ON" or "OFF".



- 6** Press RETURN.
The setting is complete.

To return to the previous menu
Press A/V WINDOW +/- until the cursor points to " > MENU." Then press RETURN.

To return to the main menu
Repeat the above, until you reach the main menu.

To return to the normal screen
Press MENU on the Remote Commander.

Cable TV channel chart*
Cable TV systems use letters or numbers to designate channels. To tune in a channel, refer to the chart below.

Number on this TV	Corresponding CATV channel
1	A-8
5	A-7
6	A-6
14	A
15	B
16	C
17	D
18	E
19	F
20	G
21	H
22	I
23	J
24	K
25	L
26	M
27	N
28	O
29	P
30	Q
31	R
32	S
33	T
34	U
35	V
36	W
37	W+1
38	W+2
39	W+3
.	.
.	.
.	.
.	.
93	W+57
94	W+58
95	A-5
96	A-4
97	A-3
98	A-2
99	A-1
100	W+59
101	W+60
102	W+61
.	.
.	.
.	.
123	W+82
124	W+83
125	W+84

Check with your local cable TV company for more complete information on the available channels.
* The designation of the cable TV channels conforms to the EIA/NCTA recommendation.

Presetting TV Channels


By presetting TV channels to the TV, you can select channels by pressing CHANNEL +/- on the TV or CH +/- on the Remote Commander.

Presetting all receivable channels automatically


Follow these instructions to preset all the receivable VHF, UHF or cable TV channels to the TV.

Notes


- If the TV is in video mode, the "AUTO PROGRAM" display is shaded and cannot be selected. Press TV/VIDEO on the TV or on the Remote Commander to change to TV mode.
- Perform auto programming during the day rather than late at night, when some channels may not be broadcasting.

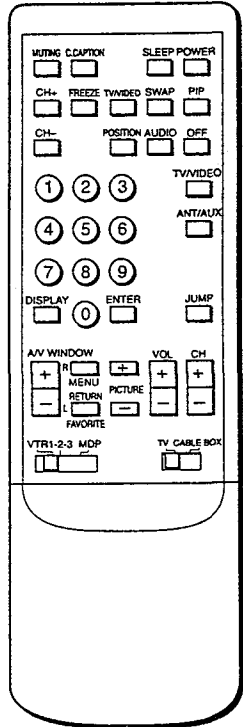

- 1 Set the cable connection on or off (pp. 22 – 23) to select the type of channel you want to preset, VHF/UHF or cable TV.

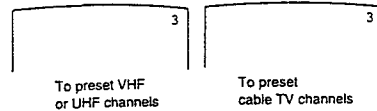

Press ANT/AUX to select the type of channel you want to preset, VHF/UHF/regular cable TV or pay cable TV.

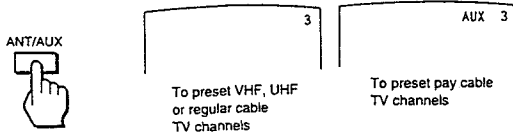


- 2 Press MENU. The main menu appears.





- 3 Press A/V WINDOW +/- until the cursor points to "SET UP."



- 4 Press RETURN. The set up menu appears.

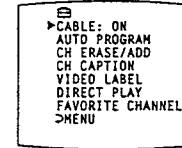

- 5 Press A/V WINDOW +/- until the cursor points to "AUTO PROGRAM."

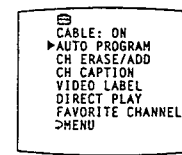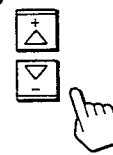


- 6 Press RETURN.



"AUTO PROGRAM" appears on the screen and receivable channels (other than the channels already preset) are preset in numerical sequence. The channels previously preset will not remain in the TV's memory. When no more channels are found, auto programming stops and the screen returns automatically to the set up menu.

- 7 Press CH +/- to check or view the preset channels.

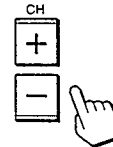


Receivable channels for this TV
VHF: 2 – 13
UHF: 14 – 69
Cable: 1 – 125

To select TV channels without presetting
Press the 0 – 9 buttons and ENTER.

To return to the previous menu
Press A/V WINDOW +/- until the cursor points to "> MENU."
Then press RETURN.

To return to the main menu
Repeat the above, until you reach the main menu.

To return to the normal screen
Press MENU on the Remote Commander.

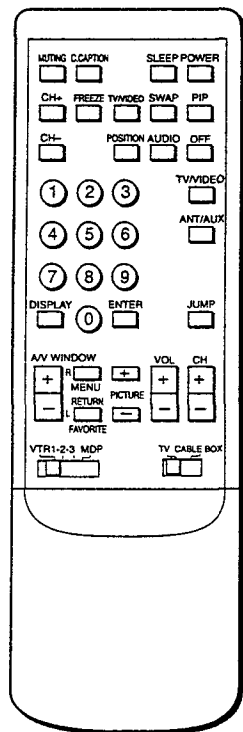



Erasing TV channels

Follow these instructions to erase unnecessary TV channels, so that when you press CH +/-, the channel(s) are skipped.


1 Press MENU
The main menu appears.





2 Press AV WINDOW +/- until the cursor points to "SET UP."

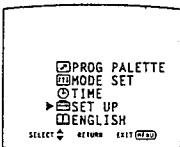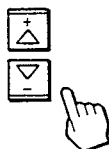

3 Press RETURN
The set up menu appears.

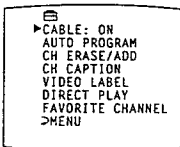



4 Press AV WINDOW +/- until the cursor points to "CH ERASE/ADD."

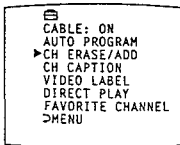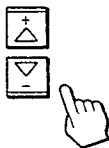


5 Press RETURN.
The CH ERASE/ADD screen appears, and the cursor points to "ERASE."



6 Press CHANNEL +/- on the TV or CH +/- on the Remote Commander to select the channel you want to erase.
The channel display appears.

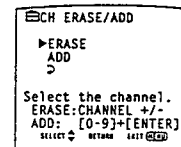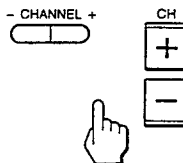

7 Press RETURN.
A "-" sign appears in front of the channel number display, indicating that the channel is erased; then the CH ERASE/ADD screen automatically reappears.

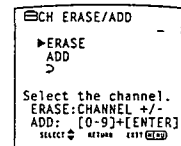


To erase another channel
Repeat steps 6 - 7.

To return to the previous menu
Press AV WINDOW +/- until the cursor points to "> MENU." Then press RETURN.

To return to the main menu
Repeat the above, until you reach the main menu.

To return to the normal screen
Press MENU on the Remote Commander.

Note
If you erase a VHF or UHF channel, the same number cable TV channel is also erased (and vice versa).

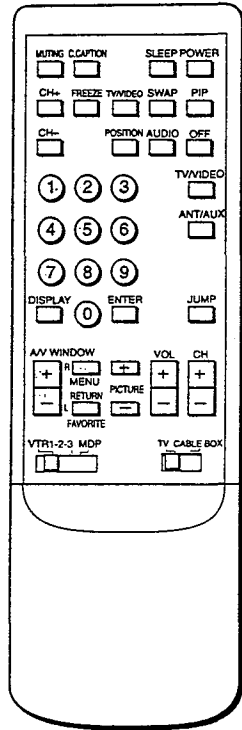



Adding TV channels

Follow these instructions to add TV channels one by one to the selection memory, or to replace a TV channel you previously erased (pp. 26 – 27).


- 1** Press MENU
The main menu appears.





- 2** Press AV WINDOW +/- until the cursor points to "SET UP"

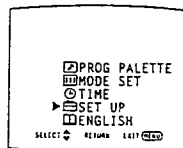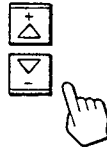


- 3** Press RETURN.
The set up menu appears.

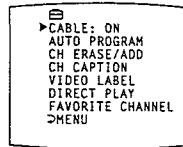



- 4** Press AV WINDOW +/- until the cursor points to "CH ERASE/ADD."

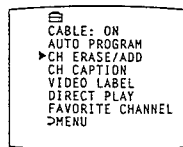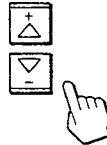



- 5** Press RETURN.
The CH ERASE/ADD screen appears.

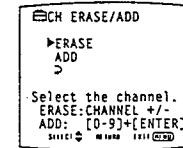


- 6** Press AV WINDOW +/- until the cursor points to "ADD."

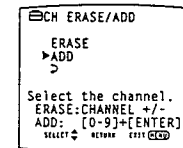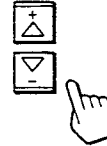

- 7** Press 0 – 9 and ENTER on the Remote Commander to select the channel you want to add.
The channel display appears.

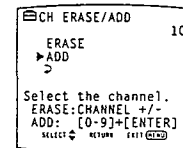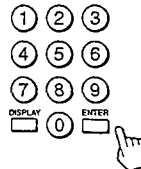

- 8** Press RETURN
A "+" sign appears in front of the channel number display, indicating that the channel is added; then the CH ERASE/ADD screen automatically reappears.

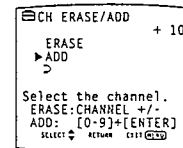

To add another channel Repeat steps 7 – 8.

To return to the previous menu Press AV WINDOW +/- until the cursor points to "MENU." Then press RETURN.


To return to the main menu Repeat the above, until you reach the main menu.

To return to the normal screen Press MENU on the Remote Commander.

Note
If you add a VHF or UHF channel, the same number cable TV channel is also added (and vice versa).

Chapter 2: Using Basic Features

Watching TV Programs

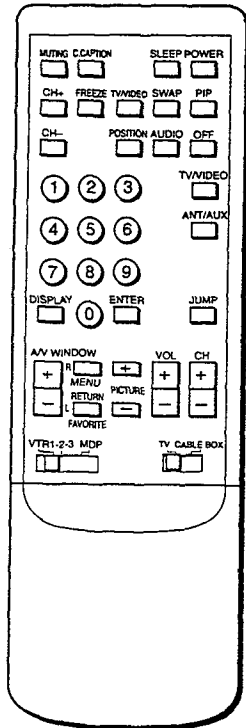


Make sure that the TV/CABLE BOX selector on the Remote Commander is set to TV, in order to control the TV with the Remote Commander.


- 1 Press POWER on the TV or on the Remote Commander to turn on the TV. The TIMER/STAND BY indicator flashes until the picture appears.



- 2 Set the cable connection on or off (pp. 22 – 23) to select the type of channel you want to watch, VHF/UHF or cable TV.

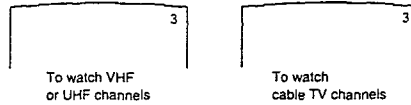


Press ANTI/AUX to select the type of channel you want to watch, VHF/UHF/regular cable TV or pay cable TV.

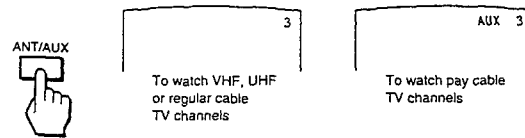


- 3 Select a channel in one of the following two ways:

To scan the preset channels in numerical sequence, press CH +/-.

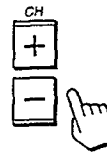

To select a channel directly, press 0 – 9 and then ENTER. For example, to select channel 10, press 1, 0 and ENTER.

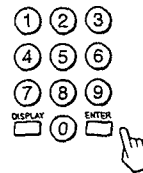

- 4 Press VOL +/- to adjust the volume.




Press + to increase the volume.
Press - to decrease the volume.

If VIDEO 1, VIDEO 2 or VIDEO 3 appears on the screen Press TV/VIDEO on the TV or on the Remote Commander until a TV channel number appears.

To select channels more easily Set FAVORITE CHANNEL (pp. 62 – 63).

To turn off the TV Press POWER on the TV or on the Remote Commander.

Using Convenient Features

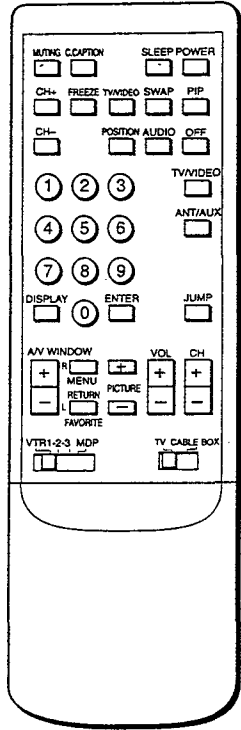

Muting the sound — MUTING

Press **MUTING**.
"MUTING" appears on the screen.

To restore the sound
 Press **MUTING** again, or press **VOL +**.



Keeping the displays on-screen — DISPLAY

Press **DISPLAY**.
All the existing displays appear: channel number, channel caption (if set), MTS mode ("SAP" only), window picture input mode, and the current time ("AM" or "PM" disappears after about three seconds).


To turn off the displays
 Press **DISPLAY** again.



Setting the sleep timer — SLEEP

The sleep timer turns off the TV automatically after the amount of time you select.


Press **SLEEP**
Each time you press SLEEP, the time increments "30," "60," "90" and "OFF" mode appear in sequence.

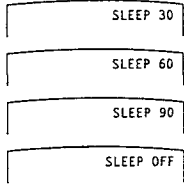



A red "SLEEP" display appears about one minute before the TV goes off.

To cancel the setting.
 Press **SLEEP** until **OFF** mode appears.
A green "SLEEP OFF" display appears for about three seconds.
 OR
 Turn the TV off.
The sleep timer setting is cancelled.

Using Closed Caption

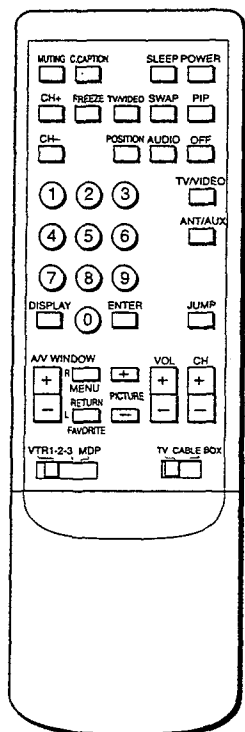


- 1** Press C.CAPTION.
The closed caption mode appears. CC1, CC2, TEXT1, TEXT2 or CC OFF appears in sequence each time you press C.CAPTION.

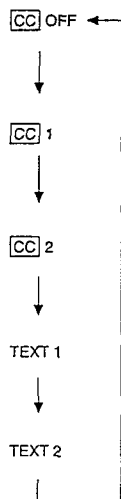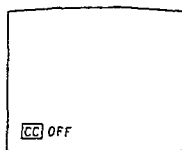


- 2** Press C.CAPTION repeatedly.




Select CC1 or CC2 to view Captions.
A Caption is a printed version of the dialogue or sound effects of a program. (The mode should be set to CC1 for most programs.)

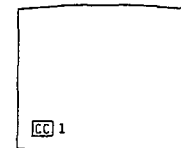

Select TEXT1 or TEXT2 to view Text.
Text is information that is presented using the half to full television screen. It is usually not related to the program.

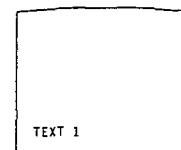


Select CC OFF if you don't want to view Closed Caption nor Text.

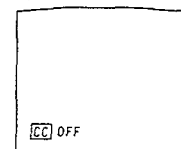

Selecting a Picture and Sound Mode

This TV features four modes (STANDARD, MOVIE, SPORTS, NEWS) that offer different picture and sound qualities. Choose the one that best suits the type of program that you want to watch.

Example: Select MOVIE mode for picture and sound that gives you the sense of being in a movie theater.

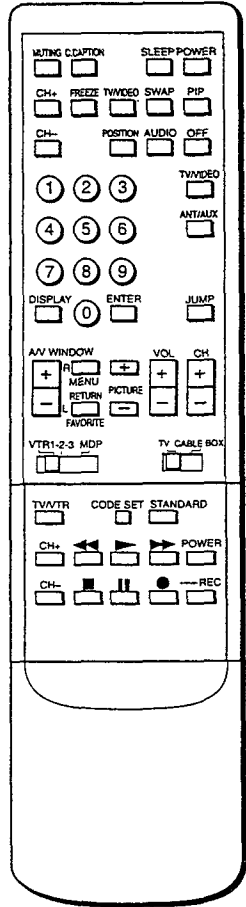

1 Press MENU.
The main menu appears, and the cursor points to "PROG PALETTE."

2 Press RETURN.
The program palette menu appears.

3 Press A/V WINDOW +/- until the cursor points to "MOVIE."

4 Press RETURN.
The "MOVIE" display turns green, indicating that MOVIE mode is selected.

To select a different mode
Repeat steps 3 – 4.

Selecting standard mode (without using the menus)

Follow these instructions to select standard mode without using the on-screen menus.

Press STANDARD.



When you select STANDARD mode

You receive standard picture and sound quality. Any video or audio adjustments you made ("Adjusting the TV," pp. 42 – 50) are cancelled and the original factory settings are restored.

When you select MOVIE mode

You receive a finely detailed picture, and a theatrical audio effect. To further adjust picture and sound qualities, follow the instructions on pp. 42 – 50.

When you select SPORTS mode

You receive a vivid, bright picture, and sound with a sports stadium effect. To further adjust picture and sound qualities, follow the instructions on pp. 42 – 50.

When you select NEWS mode

Picture noise is reduced, and you receive clear voice reproduction. To further adjust picture and sound qualities, follow the instructions on pp. 42 – 50.


To return to the previous menu
Press A/V WINDOW +/- until the cursor points to "MENU."
Then press RETURN.

To return to the main menu
Repeat the above, until you reach the main menu.

To return to the normal screen
Press MENU on the Remote Commander.

Watching Two Pictures at Once (PIP)

You can watch both the main picture and a window picture simultaneously, using the Picture-in-Picture (PIP) function. Model KV-32XBR76 is equipped with two-tuner PIP, allowing you to watch two TV channels at once.

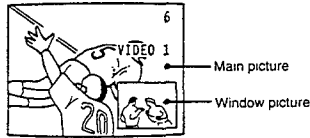


Picture-in-Picture special features

When watching the main picture and a window picture, you can:



- Swap the main and window pictures (SWAP).
- Change the position of the window picture (POSITION).
- Display a still picture (FREEZE).
- Choose the sound from the main or window picture (AUDIO).

Displaying a window picture

Remote Commander

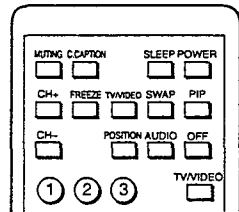

Press PIP to display a window picture

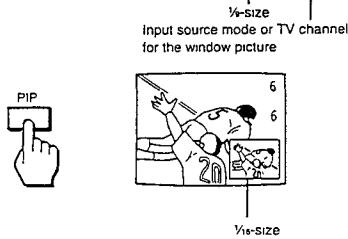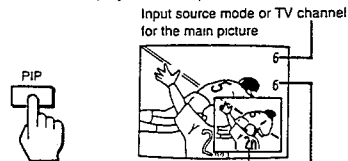

A window picture appears in the last mode you watched. Each time you press PIP, a 1/9 or 1/16 size window picture appears alternately.

To turn PIP function off
Press OFF

The window picture disappears.


To receive the window picture sound
Press AUDIO.

The display appears for a few seconds, indicating that the window picture sound is being received.


To restore the main picture sound
Press AUDIO again.

Changing the window picture input mode

Remote Commander

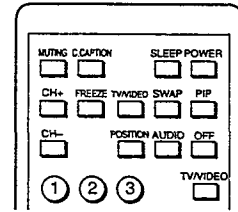

1 Press PIP to display a window picture.

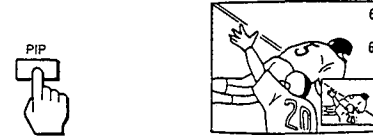


2 Press TV/VIDEO in the Picture-in-Picture control area to select the input mode. Each time you press TV/VIDEO, "TV," "VIDEO 1," "VIDEO 2" and "VIDEO 3" appear in sequence.



To change TV channels in the window picture
Press CH +/- in the PIP control area.

Displaying CATV input as a window picture

To use Picture-in-Picture with pay cable TV input, make the connections to your cable converter box as shown below.

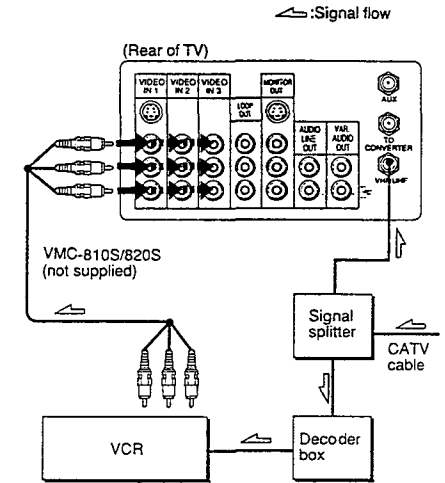

After making the above connections, turn the cable connection on by following the steps on pp. 22 – 23; then continue with the steps below.

1-2 Follow steps 1 – 2 in "Changing the window picture input mode" on this page to select the video input mode for your connected VCR.

3 Put your VCR on an inactive channel (channel 3 or 4).

4 Change pay cable TV channels with the decoder box.


To control your cable converter box with the supplied Remote Commander
See p. 68.

Watching Two Pictures at Once (PIP)


Changing the position of the window picture

Follow these instructions to change the position of the window picture on the screen.


Remote Commander

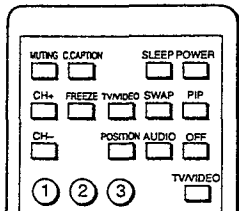

- 1 Press PIP to display a window picture.

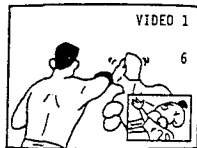


- 2 Press POSITION.
Each time you press POSITION, the window picture moves as illustrated.

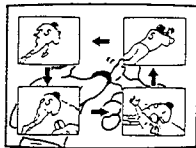


Displaying a still picture

Use the FREEZE function to display a still picture. This function is useful when you want to write down a recipe from a cooking program, a displayed address or phone number and so on.


Remote Commander

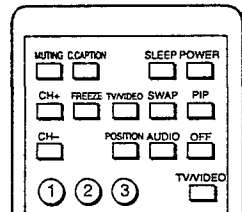

- 1 Press PIP to display a window picture.

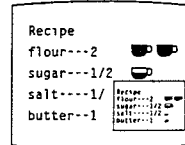

- 2 Press FREEZE.
The window picture image remains still on the screen.

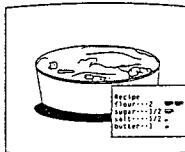


To restore the normal picture
Press FREEZE again.

Swapping the main and window pictures

Follow these instructions to swap the input signals of the main and window pictures.


Remote Commander

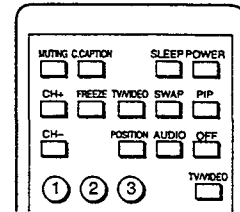

- 1 Press PIP to display a window picture.



- 2 Press SWAP.
Each time you press SWAP, the images from the main and window pictures switch places.

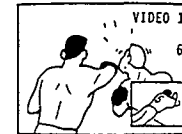


Adjusting the TV

You can adjust the picture and sound for each input mode (TV, VIDEO-1, VIDEO 2, VIDEO 3) by pressing TV/VIDEO on the TV or on the Remote Commander to select the input mode, before making the adjustments. These adjustments are retained in memory even when you turn off the TV, but are cancelled after you change the adjustments, or select a picture and sound mode (pp. 36 – 37).


Adjusting the picture

Follow these instructions to adjust PICTURE, HUE, COLOR, BRIGHT (brightness) and SHARP (sharpness).


Remote Commander (with video control cover open)

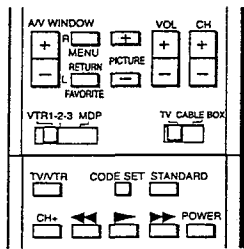

1 Press MENU.
The main menu appears, and the cursor points to "PROG PALETTE."

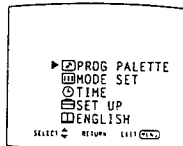


2 Press RETURN.
The program palette menu appears.

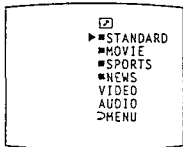

3 Press AV WINDOW +/- until the cursor points to "VIDEO."

4 Press RETURN.
The VIDEO screen appears.

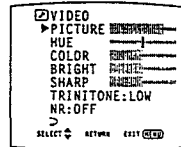

5 Press AV WINDOW +/- until the cursor points to the item you want to adjust.


6 Press RETURN.
The adjustment screen appears.



7 Press AV WINDOW +/- to make the adjustment.

Picture quality	Press AV WINDOW -	Press AV WINDOW +
PICTURE	For decreased picture contrast with soft color	For increased picture with vivid color
HUE	Skin tones become purplish	Skin tones become greenish
COLOR	For less color intensity	For more color intensity
BRIGHT	For less brightness	For more brightness
SHARP	For less sharpness	For more sharpness

8 Press RETURN.
The adjustment is complete, and the VIDEO screen automatically reappears.

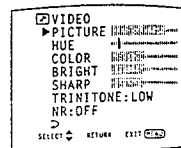

To adjust other items
Repeat steps 5 – 8.

To restore the factory settings for all the items
Select "STANDARD" on the program palette menu, and press RETURN;
or, press STANDARD on the Remote Commander.
All the items, including TRINITONE (p. 44) and NR (p. 45) return to their original factory settings.

To adjust picture contrast
You can also adjust picture contrast with the PICTURE +/- buttons on the Remote Commander.



Press + to increase picture contrast with vivid color.
Press - to decrease picture contrast with soft color.
The picture adjustment screen appears.

To return to the previous menu
Press AV WINDOW +/- until the cursor points to "MENU."
Then press RETURN.


To return to the main menu
Repeat the above, until you reach the main menu.

To return to the normal screen
Press MENU on the Remote Commander.


Setting the TRINITONE mode

Color picture tubes are usually manufactured with a fixed color temperature (tint) that determines the "warmth" (red tint) or "coolness" (blue tint) of the picture. Use the Sony Trinitone feature to adjust the picture color to your preference.


Remote Commander

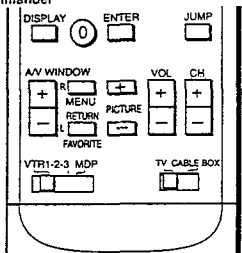

1 Press MENU.
The main menu appears, and the cursor points to "PROG PALETTE."

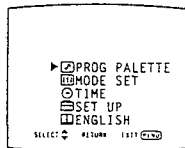


2 Press RETURN.
The program palette menu appears.

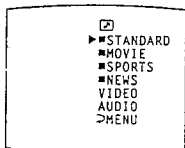

3 Press AV WINDOW +/- until the cursor points to "VIDEO."

4 Press RETURN.
The VIDEO screen appears.

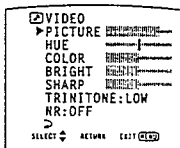

5 Press AV WINDOW +/- until the cursor points to "TRINITONE."

6 Press RETURN.
The mode display turns red.

7 Press AV WINDOW +/- to select "HIGH" or "LOW."

Select "HIGH" to make the picture cool (bluish).
Select "LOW" to make the picture warm (reddish).

8 Press RETURN.
The setting is complete.

To return to the previous menu
Press AV WINDOW +/- until the cursor points to "> MENU."
Then press RETURN.


To return to the main menu
Repeat the above, until you reach the main menu.

To return to the normal screen
Press MENU on the Remote Commander.


Setting NR (picture noise reduction) ON or OFF

Follow these instructions to reduce picture noise.


Remote Commander

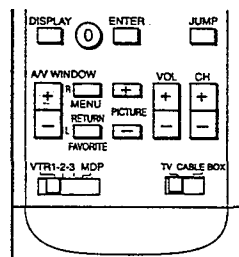

1 Press MENU.
The main menu appears, and the cursor points to "PROG PALETTE."

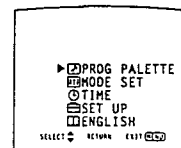


2 Press RETURN.
The program palette menu appears.

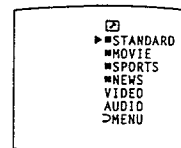


3 Press AV WINDOW +/- until the cursor points to "VIDEO."

4 Press RETURN.
The VIDEO screen appears.

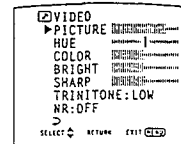

5 Press AV WINDOW +/- until the cursor points to "NR."

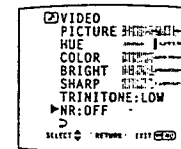

6 Press RETURN.
The mode display turns red.

7 Press AV WINDOW +/- to select "ON" or "OFF."
Select "ON" to reduce picture noise.
Select "OFF" to restore the normal picture.

8 Press RETURN.
The setting is complete.

To return to the previous menu
Press AV WINDOW +/- until the cursor points to "> MENU."
Then press RETURN.

To return to the main menu
Repeat the above, until you reach the main menu.

To return to the normal screen
Press MENU on the Remote Commander.


Adjusting the TV

Setting S-VIDEO ON or OFF


Follow these instructions to set S-VIDEO on or off, depending on the kind of video equipment you have connected to the TV. For instructions on connecting video equipment, see pp. 13 – 16.

Note
If the TV is in TV, VIDEO 2 or VIDEO 3 mode, the "S-VIDEO" display is shaded and cannot be selected. Press TV/VIDEO on the TV or on the Remote Commander to change to VIDEO 1 mode.

Remote Commander

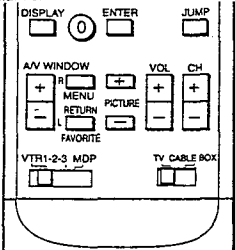


1 Press MENU.
The main menu appears.

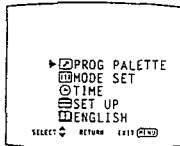

2 Press A/V WINDOW +/- until the cursor points to "MODE SET."

3 Press RETURN.
The mode set menu appears, with the cursor pointing to "S-VIDEO."

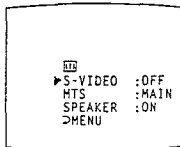

4 Press RETURN.
The mode display turns red.

5 Press A/V WINDOW +/- to select "ON" or "OFF"

6 Press RETURN.
The setting is complete.

To return to the previous menu
Press A/V WINDOW +/- until the cursor points to " > MENU."
Then press RETURN.


To return to the main menu
Repeat the above, until you reach the main menu.

To return to the normal screen
Press MENU on the Remote Commander.


Adjusting the sound

Follow these instructions to adjust the TREBLE, BASS and BALANCE.


Remote Commander (with video control cover open)

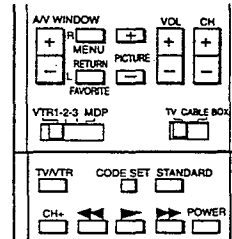

1 Press MENU.
The main menu appears, and the cursor points to "PROG PALETTE."

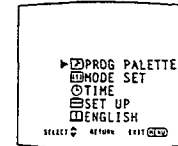


2 Press RETURN.
The program palette menu appears.

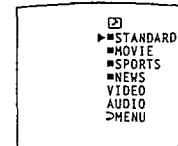

3 Press A/V WINDOW +/- until the cursor points to "AUDIO."

4 Press RETURN.
The AUDIO screen appears.

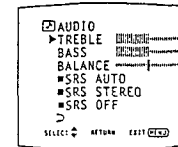

5 Press A/V WINDOW +/- until the cursor points to the item you want to adjust.


6 Press RETURN.
The adjustment screen appears.



7 Press A/V WINDOW +/- to make the adjustment.

Sound quality	Press A/V WINDOW -	Press A/V WINDOW +
TREBLE	To decrease the treble response	To increase the treble response
BASS	To decrease the bass response	To increase the bass response
BALANCE	To emphasize the left speaker's volume	To emphasize the right speaker's volume

8 Press RETURN.
The adjustment is complete, and the AUDIO screen automatically reappears.

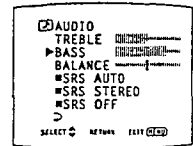

To adjust other items
Repeat steps 5 – 9.

To restore the factory settings for all the items
Select "STANDARD" on the program palette menu, and press RETURN; or, press STANDARD on the Remote Commander.

All the items, including SRS mode (p. 48) return to their original factory settings.

To return to the previous menu
Press A/V WINDOW +/- until the cursor points to " > MENU."
Then press RETURN.

To return to the main menu
Repeat the above, until you reach the main menu.

To return to the normal screen
Press MENU on the Remote Commander.

Selecting an SRS (Sound Retrieval System) mode

For lifelike sound reproduction, follow the instructions below to select the SRS mode you prefer.

In SRS AUTO mode, SRS functions in both monaural and stereo modes.


Monaural sound programs will have a 'simulated stereo' effect.

In SRS STEREO mode, SRS functions only when a stereo program is received.


The STEREO indicator on the TV lights up whenever a stereo broadcast is received.

Select SRS OFF mode to return to normal sound mode.


Remote Commander

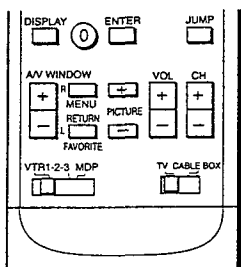

- 1 Press MENU.
The main menu appears, and the cursor points to "PROG PALETTE."

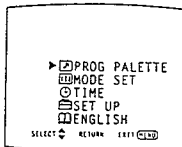


- 2 Press RETURN.
The program palette menu appears.

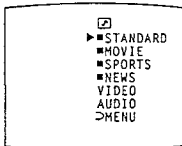

- 3 Press AV WINDOW +/- until the cursor points to "AUDIO."

- 4 Press RETURN.
The AUDIO screen appears.

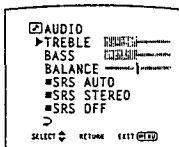

- 5 Press AV WINDOW +/- until the cursor points to the SRS mode you want.

- 6 Press RETURN.
The mode is selected.

To change the SRS mode
Repeat steps 5 - 6.

To return to the previous menu
Press AV WINDOW +/- until the cursor points to " > MENU."
Then press RETURN.

To return to the main menu
Repeat the above, until you reach the main menu.

To return to the normal screen
Press MENU on the Remote Commander.

Selecting an MTS (Multichannel TV Sound) mode

Follow these instructions to select an MTS mode.

Select MAIN mode to listen to stereo sound.

The STEREO indicator on the TV lights up whenever a stereo broadcast is received.

Select SAP mode to listen to Second Audio Programs.


Select MONO mode to eliminate excessive noise during stereo broadcasts, caused by a weak incoming signal.

Note

If the TV is in video mode, the "MTS" display is shaded and cannot be selected.

Press TV/VIDEO on the TV or on the Remote Commander to change to TV mode.

Remote Commander

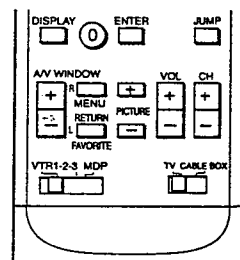


- 1 Press MENU.
The main menu appears.



- 2 Press AV WINDOW +/- until the cursor points to "MODE SET."

- 3 Press RETURN.
The mode set menu appears.

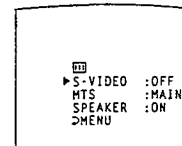

- 4 Press AV WINDOW +/- until the cursor points to "MTS."

- 5 Press RETURN.
The mode display turns red.

- 6 Press AV WINDOW +/- to select the mode you want.
Each time you press AV WINDOW +/-, "MAIN," "SAP" and "MONO" appear in sequence.

- 7 Press RETURN.
The mode is selected.

To return to the previous menu

Press AV WINDOW +/- until the cursor points to " > MENU."

Then press RETURN.

To return to the main menu

Repeat the above, until you reach the main menu.


To return to the normal screen

Press MENU on the Remote Commander.


Setting SPEAKER ON or OFF

Follow these instructions to turn the TV speakers off when you connect an audio system (p.17), and on when you want to listen to the sound from the TV speakers.

Remote Commander

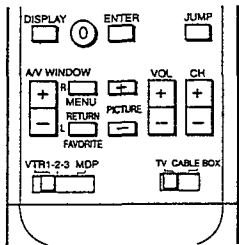


1 Press MENU.
The main menu appears.

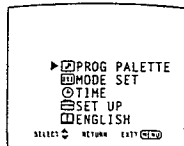

2 Press A/V WINDOW +/- until the cursor points to "MODE SET."

3 Press RETURN.
The mode set menu appears.

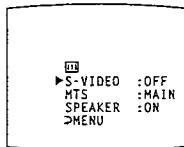

4 Press A/V WINDOW +/- until the cursor points to "SPEAKER."

5 Press RETURN.
The mode display turns red.

6 Press A/V WINDOW +/- to select "ON" or "OFF."

7 Press RETURN.
The setting is complete.

To return to the previous menu
Press A/V WINDOW +/- until the cursor points to "> MENU."
Then press RETURN.

To return to the main menu
Repeat the above, until you reach the main menu.


To return to the normal screen
Press MENU on the Remote Commander.

Setting channel captions — CH CAPTION


Follow these instructions to caption each channel number display with a name, for instance, the television station call letters. (You can set up to four letters or numbers).

Example: Caption channel 15 as "NBC."

Remote Commander (RM-Y113A)

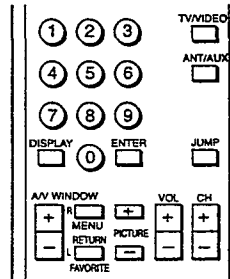


1 Press MENU.
The main menu appears.

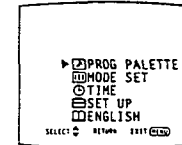


2 Press A/V WINDOW +/- until the cursor points to "SET UP"

3 Press RETURN.
The set up menu appears.

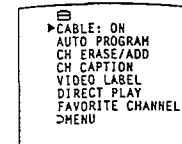


4 Press A/V WINDOW +/- until the cursor points to "CH CAPTION."

5 Press RETURN.
The CH CAPTION screen appears.

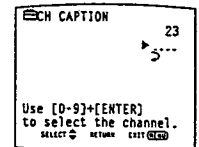


6 Press CH +/-, or press 1, 5 and ENTER to set channel "15."

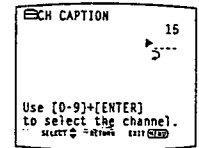

7 Press RETURN.
The first caption space turns red.

8 Press A/V WINDOW +/- to select "N."
Each time you press A/V WINDOW +/-, "0" - "9," "A" - "Z," "&," "," "-" and "." (blank space) appear in sequence.

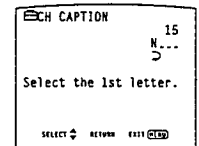


9 Press RETURN.
The second caption space turns red.


(Continued)

Setting channel captions – CH CAPTION
(Cont'd. from prev. page)

Remote Commander

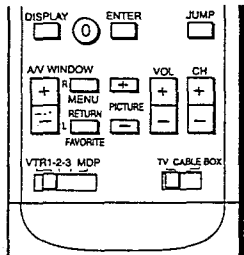


10 Press AV WINDOW +/- to select "B."

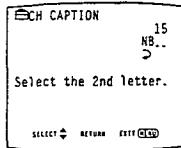


11 Press RETURN.
The third caption space turns red.

12 Press AV WINDOW +/- to select "C."

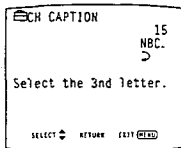

13 Press RETURN.
The fourth caption space turns red.

14 Press AV WINDOW +/- to select a blank space.

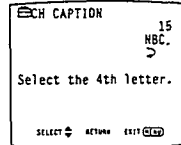

15 Press RETURN.
The setting is complete.
When you select or display the channel number, the channel caption also appears.

To caption more channels
Repeat steps 6 – 15.

To erase unnecessary captions
Display the CH CAPTION screen, select the channel with the caption you want to erase, and select blank spaces for the channel caption; then press RETURN.
The caption for that channel is erased.

To return to the previous menu
Press AV WINDOW +/- until the cursor points to " > MENU."
Then press RETURN.

To return to the main menu
Repeat the above, until you reach the main menu.

To return to the normal screen
Press MENU on the Remote Commander.


Note
You can set up to 32 channel captions. If the memory is full, "The memory is full, sorry" appears on the screen. Erase any unnecessary captions, and begin again.

Setting VIDEO LABEL

Follow these instructions to label each input mode, in order to identify the equipment connected to each input terminal.

Example: Label VIDEO IN 1 as "VHS."

Remote Commander

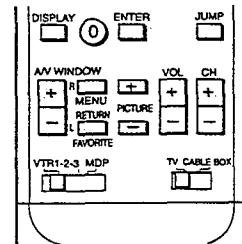


1 Press MENU.
The main menu appears.



2 Press AV WINDOW +/- until the cursor points to "SET UP"

3 Press RETURN.
The set up menu appears.

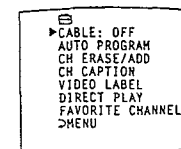

4 Press AV WINDOW +/- until the cursor points to "VIDEO LABEL."

5 Press RETURN.
The VIDEO LABEL screen appears.




6 Press AV WINDOW +/- until the cursor points to the input mode you want to label. (In this case, the cursor is already pointing to "VIDEO 1.")

7 Press RETURN.
The label display turns red.

8 Press AV WINDOW +/- to select "VHS."



Each time you press AV WINDOW +/-, the label changes:

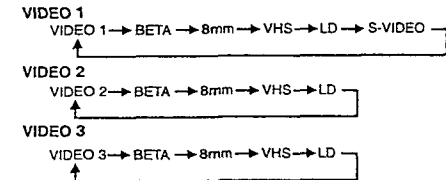

9 Press RETURN.
The setting is complete.
When you select or display the video mode, the video label appears.

To label other input modes
Repeat steps 6 – 9.

To change a label
Same as above.

To return to the previous menu
Press AV WINDOW +/- until the cursor points to " > MENU."
Then press RETURN.

To return to the main menu
Repeat the above, until you reach the main menu.

To return to the normal screen
Press MENU on the Remote Commander.

Using Timer-Activated Functions




Setting DAYLIGHT SAVING

If you live in an area that uses daylight savings time, set DAYLIGHT SAVING to "YES" or "NO" depending on the season, before setting the current time. At the next daylight savings date, you will be able to automatically adjust all the time-related settings (CURRENT TIME, ON/OFF TIMER and CHANNEL BLOCK) simply by changing the DAYLIGHT SAVING setting.

When setting DAYLIGHT SAVING:


- After the first Sunday in April (spring daylight savings) Set to "YES" before setting the current time. Then, on the last Sunday in October (fall daylight savings), set to "NO."
All the time-related settings automatically move one hour back.
- After the last Sunday in October (fall daylight savings) Set to "NO" before setting the current time. Then, on the first Sunday in April (spring daylight savings), set to "YES."
All the time-related settings automatically move one hour ahead.

Remote Commander

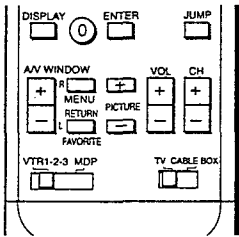


Follow these instructions to set DAYLIGHT SAVING to "YES" or "NO."

- 1 Press MENU.
The main menu appears.

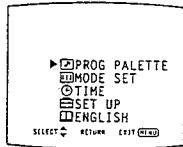

- 2 Press AV WINDOW +/- until the cursor points to "TIME."

- 3 Press RETURN.
The time menu appears.

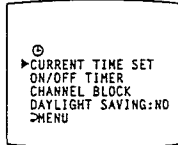

- 4 Press AV WINDOW +/- until the cursor points to "DAYLIGHT SAVING."

- 5 Press RETURN.
The mode display turns red.

- 6 Press AV WINDOW +/- to select "YES" or "NO."

- 7 Press RETURN.
The setting is complete.

To return to the previous menu
Press AV WINDOW +/- until the cursor points to "> MENU."
Then press RETURN.

To return to the main menu
Repeat the above, until you reach the main menu.


To return to the normal screen
Press MENU on the Remote Commander.

Setting the clock — CURRENT TIME SET


Follow these instructions to set the current time. The correct current time must be set in order to use the other time-related functions (DAYLIGHT SAVING, ON/OFF TIMER, CHANNEL BLOCK).

Example: Set the time to 3:15 PM, Monday.

Remote Commander

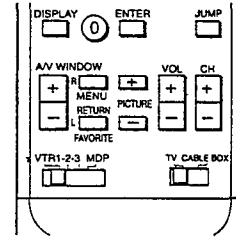


- 1 Press MENU.
The main menu appears.

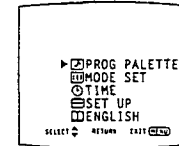

- 2 Press AV WINDOW +/- until the cursor points to "TIME."

- 3 Press RETURN.
The time menu appears, and the cursor points to "CURRENT TIME SET."

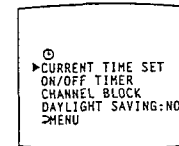

- 4 Press RETURN again.
The CURRENT TIME SET screen appears, with a reminder to set DAYLIGHT SAVING.



If you do not need to set DAYLIGHT SAVING, press RETURN and continue from step 5.


To set daylight saving

- a Press AV WINDOW +/- until the cursor points to "DAYLIGHT SAVING."
- b Press RETURN.
The time menu appears, and the cursor points to "DAYLIGHT SAVING."
- c Press RETURN.
- d Press AV WINDOW +/- to select "YES" or "NO."
- e Press RETURN.
The setting is complete.

To set the time, press AV WINDOW +/- until the cursor points to "CURRENT TIME SET"; press RETURN, then continue from step 5.

- 5 Press RETURN.
The CURRENT TIME SET screen appears, and the "SUN" display appears (red).

- 6 Press AV WINDOW +/- to select "MON."
Each time you press AV WINDOW +/-, the day changes consecutively.

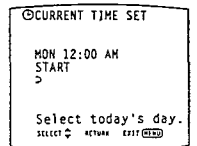


(Continued)



Setting the clock — CURRENT TIME SET


(Cont'd. from prev. page)

Remote Commander

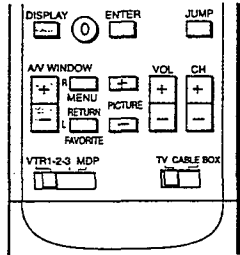


7 Press RETURN.
The hour and am/pm displays turn red.

8 Press AV WINDOW +/- to set "3:00PM."
Each time you press AV WINDOW +/-, the hour changes in sequence beginning with "12:00AM."

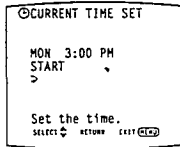

9 Press RETURN.
The minute display turns red.

10 Press AV WINDOW +/- to select "15" (minutes).
Each time you press AV WINDOW +/-, the minutes change in sequence.

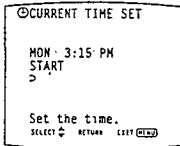

11 Press RETURN.
The cursor points to "START."

12 Check the actual time, and press RETURN to start the clock.
The setting is complete.

To reset the time
Display the CURRENT TIME SET screen and repeat steps 5 - 12.

To display the current time
Press DISPLAY.

To return to the previous menu
Press AV WINDOW +/- until the cursor points to " > MENU."
Then press RETURN.

To return to the main menu
Repeat the above, until you reach the main menu.


To return to the normal screen
Press MENU on the Remote Commander.

Setting the ON/OFF TIMER


Follow these instructions to make the program of your choice appear on the screen at a specified time.

Example: Set the timer to turn on the TV every Monday through Friday at 1:30 AM for 3 hours, on channel 8, as PROGRAM 1. (You can set up to three programs.)

Remote Commander

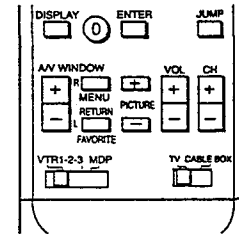


1 Press MENU.
The main menu appears.

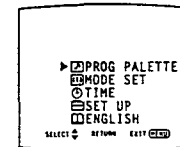


2 Press AV WINDOW +/- until the cursor points to "TIME."

3 Press RETURN.
The time menu appears.

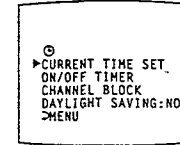


4 Press AV WINDOW +/- until the cursor points to "ON/OFF TIMER."

5 Press RETURN.
The ON/OFF TIMER screen appears, and the cursor points to "1."

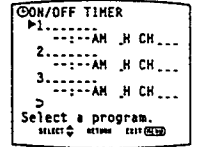


6 To set program 1, press RETURN.
(To set program 2 or 3, press AV WINDOW +/- until the cursor points to that program; then press RETURN.)
The day input space turns red.

7 Press AV WINDOW +/- to select "EVERY MON-FRI"; then press RETURN.
Each time you press AV WINDOW +/-, the days of the week change as shown in Fig. 1 (p. 59).

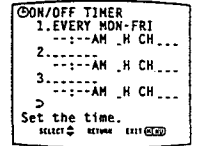


8 Press AV WINDOW +/- to select "1:00AM"; then press RETURN.
Each time you press AV WINDOW +/-, the hour changes in sequence.

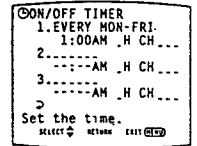


(Continued)

Setting the ON-OFF TIMER (Cont'd from prev. page)


Remote Commander

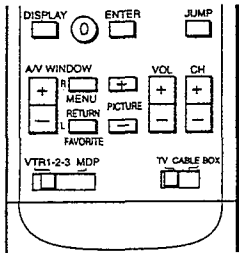


9 Press AV WINDOW +/- to select "30" (minutes); then press RETURN.
Each time you press AV WINDOW +/-, the minutes change in sequence.

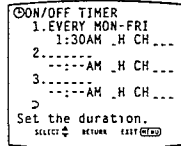

10 Press AV WINDOW +/- to select "3" (hour duration); then press RETURN.
Each time you press AV WINDOW +/-, the duration changes from "1" - "6" in sequence.

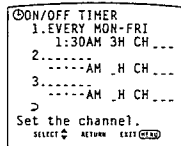

11 Press AV WINDOW +/- to select "8" (channel); then press RETURN.
The TIMER/STAND BY indicator lights, indicating that the setting is complete.
Each time you press AV WINDOW +/-, the channel number changes from 1 - 125 in sequence.

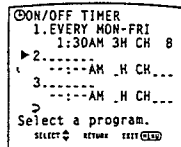

The display "TV WILL TURN OFF" appears on the screen one minute before the timer duration ends.

To set program 2 or 3. Press RETURN and repeat steps 6 - 11.

To erase an ON/OFF TIMER setting Display the ON/OFF TIMER screen, select the setting you want to erase, and select a blank space for the day. The ON/OFF TIMER setting is erased.

To enter a new ON/OFF TIMER setting Display the ON/OFF TIMER screen and repeat steps 6 - 11.


To return to the previous menu Press AV WINDOW +/- until the cursor points to "> MENU." Then press RETURN.

To return to the main menu Repeat the above, until you reach the main menu.

To return to the normal screen Press MENU on the Remote Commander.

Note If you unplug the TV or a power failure occurs, both the clock and timer settings will be erased. Reset the current time; then set the timer.

Fig. 1 Selecting the day(s) of the week When you press AV WINDOW +, the days of the week appear in the following order:

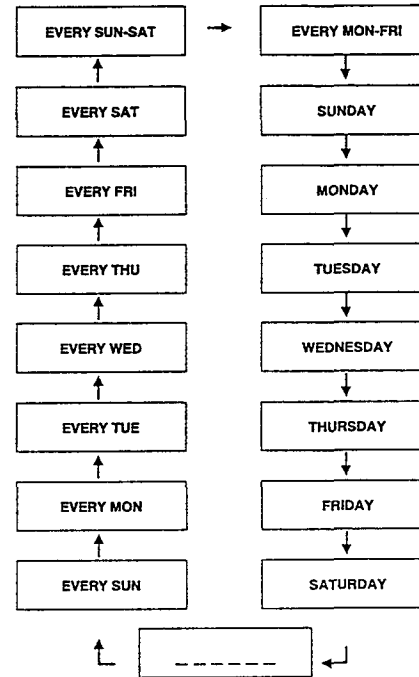


Setting CHANNEL BLOCK

Follow these instructions to prevent a channel from appearing on the screen during the time that you specify. You can use this function to prevent children from watching unsuitable programs.


Example: Set CHANNEL BLOCK every Saturday at 4:30 PM for 1 hour, on Channel 12.

Remote Commander

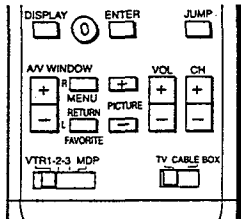


Note
If you have not set the current time, the "CHANNEL BLOCK" display is shaded and cannot be selected.

1 Press MENU.
The main menu appears.

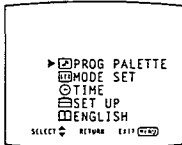


2 Press AV WINDOW +/- until the cursor points to "TIME."

3 Press RETURN.
The time menu appears.

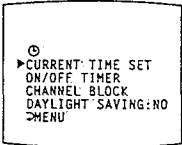


4 Press AV WINDOW +/- until the cursor points to "CHANNEL BLOCK."

5 Press RETURN.
The CHANNEL BLOCK screen appears, and the cursor points to the day input space.

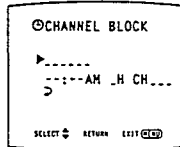


6 Press RETURN.
The day input space turns red.


7 Press AV WINDOW +/- to select "EVERY SAT"; then press RETURN.
Each time you press AV WINDOW +/-, the days of the week change as shown in Fig. 1 (p. 59).

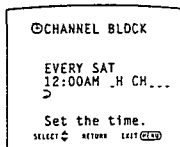


8 Press AV WINDOW +/- to select "4:00PM"; then press RETURN.
Each time you press AV WINDOW +/-, the hour changes in sequence.

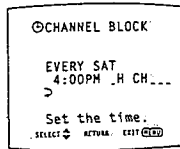


9 Press AV WINDOW +/- to select "30" (minutes); then press RETURN.
Each time you press AV WINDOW +/-, the minutes change in sequence.

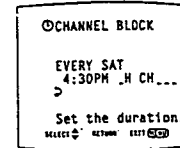


10 Press AV WINDOW +/- to select "1" (hour duration); then press RETURN.
Each time you press AV WINDOW +/-, the duration changes from "1" - "6" in sequence.

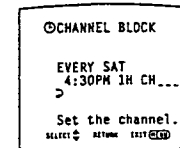

11 Press AV WINDOW +/- to select "12" (channel); then press RETURN.
The setting is complete.
Each time you press AV WINDOW +/-, the channel number changes from "1" - "125" in sequence.

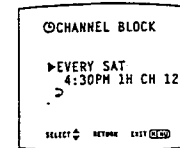

At the specified time, "BLOCKED" appears in red on the screen, and the picture of the specified channel is blocked and the sound is muted.

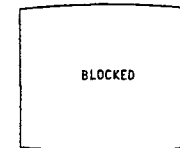

To erase a CHANNEL BLOCK setting
Display the CHANNEL BLOCK screen, select the setting you want to erase, and select a blank space for the day. The CHANNEL BLOCK setting is erased.

To enter a new CHANNEL BLOCK setting
Display the CHANNEL BLOCK screen and repeat steps 4 - 10. (You can only set one CHANNEL BLOCK at a time.)

To return to the previous menu
Press AV WINDOW +/- until the cursor points to "> MENU."
Then press RETURN.

To return to the main menu
Repeat the above, until you reach the main menu.


To return to the normal screen
Press MENU on the Remote Commander.

Note
If the ON/OFF TIMER is set for an overlapping time (pp. 57 - 59), the later time setting takes precedence. For example, if CHANNEL BLOCK is set for 2:00 PM and ON/OFF TIMER is set for 3:00 PM, ON/OFF TIMER will take effect at 3:00 PM.

Setting FAVORITE CHANNEL


By setting FAVORITE CHANNEL, you can select the channels you use most frequently (up to seven channels) simply by pressing RETURN on the Remote Commander.

Remote Commander

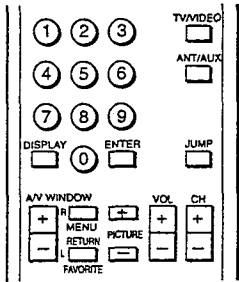


Follow these instructions to set the channels.

- 1 Press MENU.
The main menu appears.

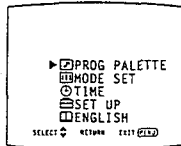


- 2 Press A/V WINDOW +/- until the cursor points to "SET UP."

- 3 Press RETURN.
The set up menu appears.

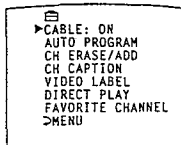


- 4 Press A/V WINDOW +/- until the cursor points to "FAVORITE CHANNEL."

- 5 Press RETURN.
The FAVORITE CHANNEL screen appears, and the cursor points to the first channel position.

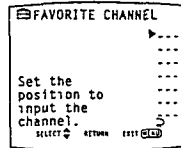

- 6 Press A/V WINDOW +/- to select the channel position; then press RETURN.

- 7 Press 0 - 9 and ENTER to set the channel number.

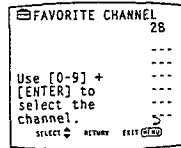

- 8 Press RETURN.
The setting is complete.

To set other channels
Repeat steps 6 - 8.

To erase a favorite channel setting
Press A/V WINDOW +/- until the cursor points to the channel number you want to erase; press RETURN, then press 0 and ENTER.

To reset a favorite channel setting
Display the FAVORITE CHANNEL screen and repeat steps 6 - 8.

To return to the previous menu
Press A/V WINDOW +/- until the cursor points to " > MENU."
Then press RETURN.


To return to the main menu
Repeat the above, until you reach the main menu.

To return to the normal screen
Press MENU on the Remote Commander.

Selecting a favorite channel

After setting the channels, follow these instructions to select the channel you want to watch.


- 1 Press RETURN.
The FAVORITE CHANNEL display appears.

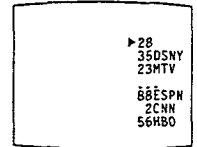

Note
If you have set channel captions (pp. 51 - 52), the captions appear with the channel numbers.

- 2 Press A/V WINDOW +/- to select the channel you want to watch; then press RETURN.
The channel is selected.

If you press RETURN on the Remote Commander before setting FAVORITE CHANNEL, this screen appears.

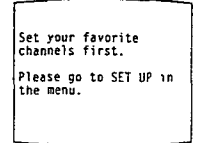

Follow steps 1 - 8 to set your favorite channels, and then make the selection.


Using the Pre-Programmed Remote Commander

You can operate other video equipment (such as VCRs, video disc players and cable boxes) that have an infrared remote detector with this supplied Remote Commander.

Operating Sony video equipment

Follow these instructions to operate Sony video cassette recorders (Beta, 8 mm and VHS) and video disc players (including multi-disc players).

Remote Commander
(with video control cover open)

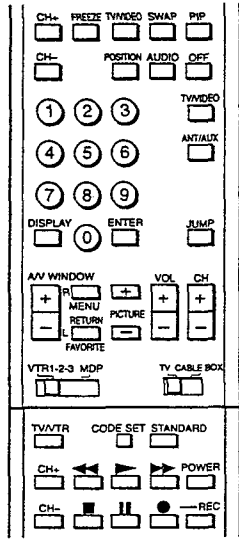

1 Set the VTR1-2-3 MDP selector according to the video equipment you want to operate.

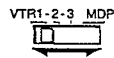


Fig. 2: Video equipment settings

If you want to operate a:	set to:
Beta, ED Beta VCR	VTR 1
8 mm VCR	VTR 2
VHS VCR	VTR 3
Video disc player	MDP

2 Use the video operating buttons to control the connected equipment.

Fig. 3: Operating a VCR (VTR1, 2, 3)

To turn on or off	Press POWER.
To change channels (when watching TV programs through the VCR's tuner)	Press CH +/-
To record	Press ● and REC simultaneously.
To play	Press ►
To stop	Press ■.
To fast forward	Press ►►
To rewind the tape	Press ◄◄.
To pause	Press II. To resume normal playback, press again.
To search the picture forward and backward	Keep pressing ►► or ◄◄ during playback. To resume normal playback, release the button.
To change input mode	Press TV/VTR.

Fig. 4: Operating a Video Disc Player (MDP)

To turn on or off	Press POWER.
To play	Press ►
To stop	Press ■.
To pause	Press II. To resume normal playback, press again. Note This function is effective only for CAV (standard-play disc). With CLV (extended-play disc), the TV goes off (standby mode) if you press II.
To search the picture forward and backward	Keep pressing ►► or ◄◄ during playback. To resume normal playback, release the button.

Notes

- If the video equipment does not have a certain function, the corresponding button on this Remote Commander will not operate.
- If you set another manufacturer's code to a VTR1-2-3 MDP selector position (pp. 66 – 67), you must also set the Sony code to operate Sony equipment.

Caution

When you replace the batteries, do it within approximately 30 minutes. Otherwise the settings you made under the Pre-Programmed function (pp. 66 – 68) may be erased.


Using the Pre-Programmed Remote Commander

Operating non-Sony or Sony video equipment


Follow these instructions to set the manufacturer's code, which will enable you to operate non-Sony and Sony video equipment with the pre-programmed Remote Commander.

Example: Operate an RCA video cassette recorder connected to the VIDEO IN 2 jacks.

Remote Commander
(with video control cover open)

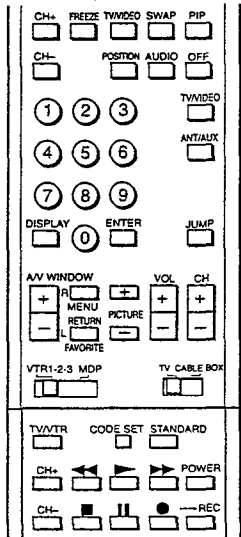


1 Set the VTR1-2-3 MDP selector to VTR2.

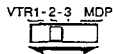

Note
To use another manufacturer's equipment besides a Sony VCR, set the selector to a position not being used for your Sony video equipment.

2 While pressing CODE SET, press 0, 7 and ENTER to set RCA's code number. (For manufacturer code numbers, see Figs. 5, 6 and 7 on p. 67.)

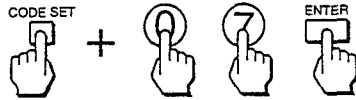

3 Use the video operating buttons to operate the connected equipment. (see Fig. 3 on p. 64 and Fig. 4 on p. 65.)

Fig. 5: VCR manufacturer code numbers

MANUFACTURER	CODE
SONY	01, 02, 03
CANON	05
EMERSON	22, 30, 33
FISHER	10, 11, 12, 15
FUNAI	29
GENERAL ELECTRIC	05, 08
GOLDSTAR	25
HITACHI	07, 08, 36
JVC	16, 35
MAGNAVOX	05, 06, 09
MITSUBISHI	18, 19, 26, 27
MULTITECH	29
NEC	16, 23, 31
PANASONIC	05, 06
PHILCO	05, 06
PHILIPS	05, 06, 09
QUASAR	05, 06
RCA	07, 08
SAMSUNG	24, 32
SANYO	11, 15
SCOTT	21
SHARP	13, 14
SHINTOM	34
SYLVANIA	05, 06, 09
SYMPHONIC	29
TEKNIKA	28, 29
TOSHIBA	20, 21
TOTE VISION	25
ZENITH	17

Fig. 6: MDP manufacturer code numbers

MANUFACTURER	CODE
SONY	04
KENWOOD	58
MAGNAVOX	52
MARANZ	54
MITSUBISHI	51
PANASONIC	55
PHILIPS	52
PIONEER	51
RCA	51
SANYO	57
SHARP	56
YAMAHA	53

Fig. 7: Sony Equipment and Code Numbers

SONY EQUIPMENT	CODE
Beta, ED Beta VCR	01
8 mm VCR	02
VHS VCR	03
Video disc player	04

Note
In some rare cases, you may not be able to operate your non-Sony video equipment with the supplied Remote Commander. This is because your equipment may use a code that is not provided with this Remote Commander. In this case, please use the equipment's own remote control unit.




Operating a cable converter box

Follow these instructions to set the manufacturer's code, which will enable you to operate a connected cable converter box with the pre-programmed Remote Commander.

Example: Operate a connected Zenith cable converter box.

Remote Commander (with video control cover open)

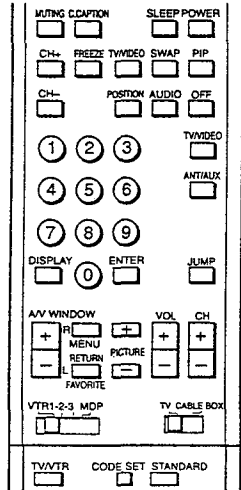

1 Set the TV/CABLE BOX selector to CABLE BOX.




Notes

- If more than one code number is listed, try entering them one by one, until you come to the correct code for your equipment.
- If you enter a new code number, the code number you previously entered at that setting is erased.
- In some rare cases, your equipment may use a code that is not provided with this Remote Commander and you may not be able to operate your cable converter box with the supplied Remote Commander. In this case, use the equipment's own remote control unit.

2 While pressing CODE SET, press 6 and 8 (Zenith's code number — see Fig. 8) and ENTER.



3 Use the TV control buttons (POWER, 0-9, ENTER and CH +/-) to operate the cable converter box.

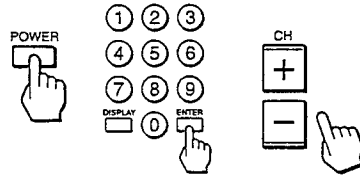

To return to the normal screen Set the TV/CABLE BOX selector to TV; then use the TV control buttons to control the TV.

For more details on operating the cable box Refer to the operating instructions that come with the cable box.

Fig. 8: Cable box manufacturer code numbers

MANUFACTURER	CODE
JERROLD	60, 61, 62, 63, 64, 65
PIONEER	69, 70
SCIENTIFIC ATLANTA	66, 67
TOCOM	71, 72
ZENITH	68


Selecting a VCR mode directly — DIRECT PLAY

Follow these instructions to switch from TV to VCR mode by simply pressing the (playback) button on the supplied Remote Commander.


Example: Connect your VCR to the VIDEO IN 1 jacks, and set the VTR1-2-3 MDP selector to VTR2. When you press , the input mode changes to the VCR connected to the VIDEO IN 1 jacks.

After completing the steps below, the VTR selector position is retained in the TV's memory.

Remote Commander (with video control cover open)

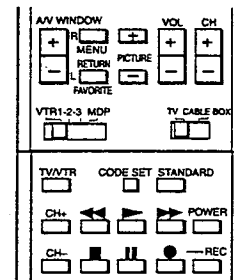


1 Press MENU. The main menu appears.

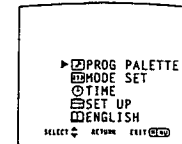


2 Press AV WINDOW +/- until the cursor points to "SET UP."

3 Press RETURN. The set up menu appears.

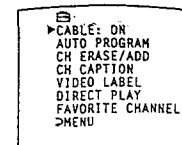


4 Press AV WINDOW +/- until the cursor points to "DIRECT PLAY."

5 Press RETURN. A message screen appears.

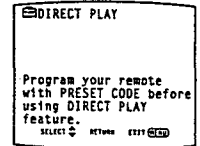

Note This screen reminds you to set the manufacturer's code, if you have not already done so (pp. 66-67).

6 Press RETURN again. The DIRECT PLAY screen appears.

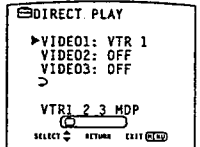

7 Press AV WINDOW +/- until the cursor points to the video input mode. (When the video equipment is connected to VIDEO IN 1, select "VIDEO1.")


8 Press RETURN. The mode display turns red.

(Continued)

Using the Pre-Programmed Remote Commander

Selecting a VCR mode directly – DIRECT PLAY (Cont'd. from prev. page)

Remote Commander

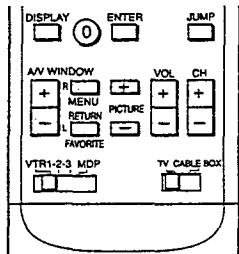

- 9** Press A/V WINDOW +/- to select the VTR selector mode you have set on the Remote Commander. (When the VTR1-2-3 MDP selector is set to VTR2, select "VTR 2.")
Each time you press A/V WINDOW +/-, "VTR 1," "VTR 2," "VTR 3," "MDP" and "OFF" appear in sequence.



- 10** Press RETURN.
The direct play setting is complete.

To set direct play for other connected video equipment
Repeat steps 7 – 10.



To return to the previous menu
Press A/V WINDOW +/- until the cursor points to
" > MENU."
Then press RETURN.

To return to the main menu
Repeat the above, until you reach the main menu.

To return to the normal screen
Press MENU on the Remote Commander.


Appendix Troubleshooting

Disturbances in picture and sound can often be eliminated by checking the symptoms and following the suggestions listed here. If the problem still cannot be solved, contact your nearest service facility.


Symptom	Possible causes and remedies
No picture (screen not lit), no sound	<ul style="list-style-type: none"> • Make sure POWER is switched on. • Check the power cord connection. • Check that the TV/VIDEO and VTR1-2-3 MDP controls are set correctly. • Make sure that the TV/CABLE BOX selector is set to TV.
Poor or no picture (screen not lit), good sound	<ul style="list-style-type: none"> • Adjust the picture using the VIDEO screen (pp. 42 – 45). • Check the antenna/cable connections.
Good picture, no sound	<ul style="list-style-type: none"> • Press VOLUME + on the TV or VOL + on the Remote Commander. • Press MUTING on the Remote Commander. • Check the MTS setting (p. 49). • Check that the TV/VIDEO and VTR1-2-3 MDP controls are set correctly. • Make sure SPEAKER is set to ON (p. 50).
No color for color programs	<ul style="list-style-type: none"> • Check the HUE and COLOR settings (pp. 42 – 43).
Snow and noise only	<ul style="list-style-type: none"> • Check that it is an active or correct channel. • Check the cable setting. • Check the ANT/AUX button setting (KV-27XBR36/32XBR36/32XBR76 only). • Check antenna/cable connections.
 Dotted lines or stripes	This is often caused by local interference (for example, cars, neon signs and hairdryers). Adjust the telescopic aenal for minimum interference.
 Double images or ghosts	Reflections from nearby mountains or buildings often cause this problem. Connecting a highly directional outdoor antenna or a CATV cable may improve the picture.
Try another channel. It could be station trouble.	

SECTION 2 DISASSEMBLY


2-1. REAR BOARD REMOVAL

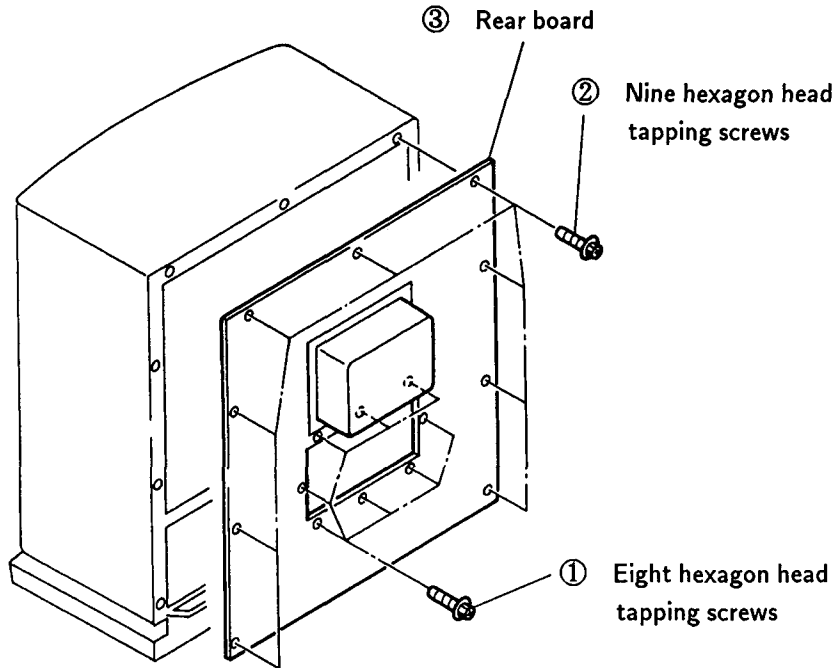


2-2. CHASSIS ASSY REMOVAL

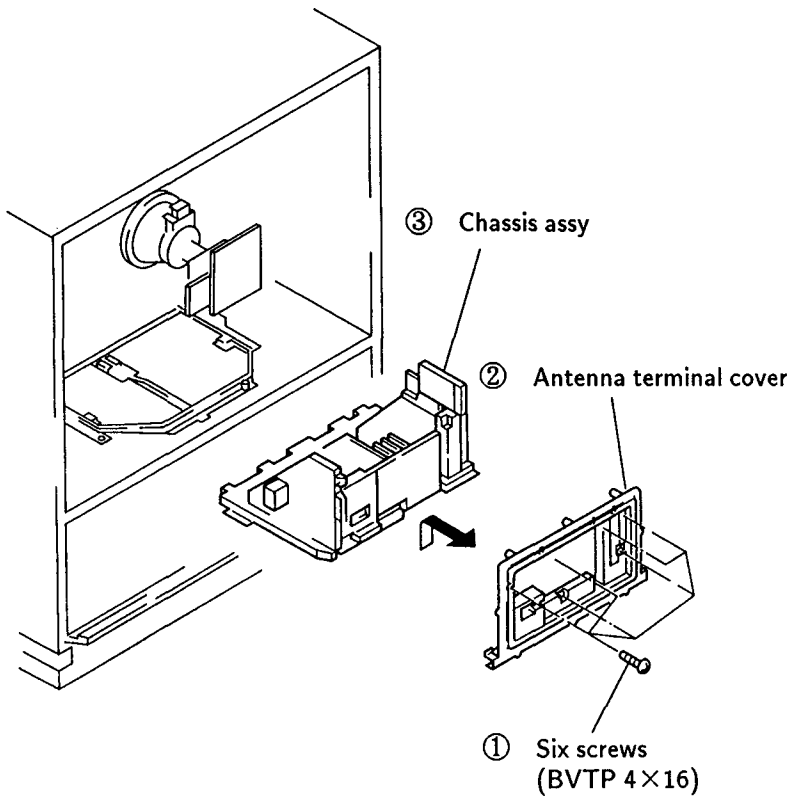


2-3. SERVICE POSITION

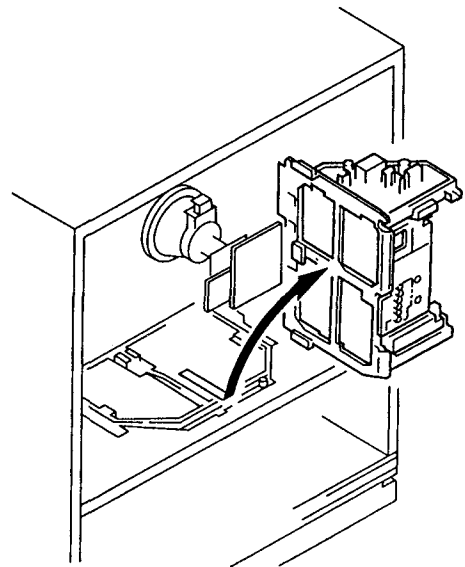


2-4. ANTENNA TERMINAL BOARD REMOVAL

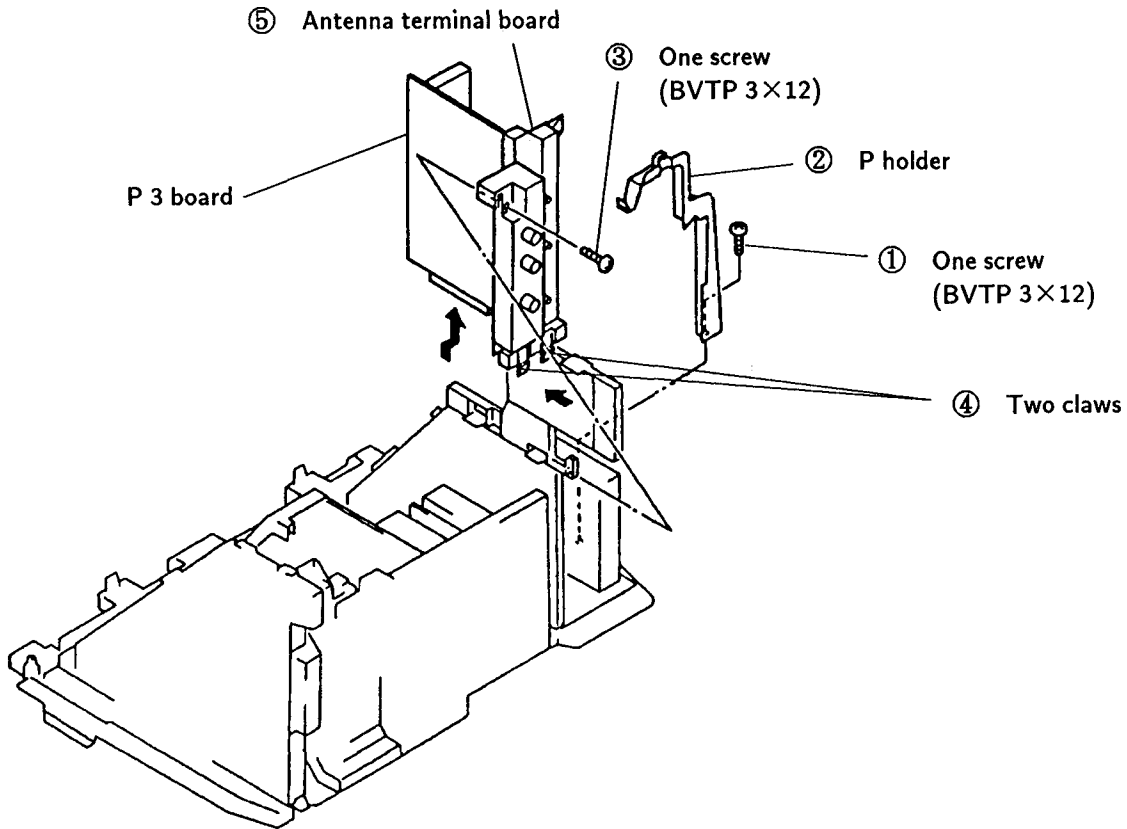


2-5. UT BRACKET REMOVAL

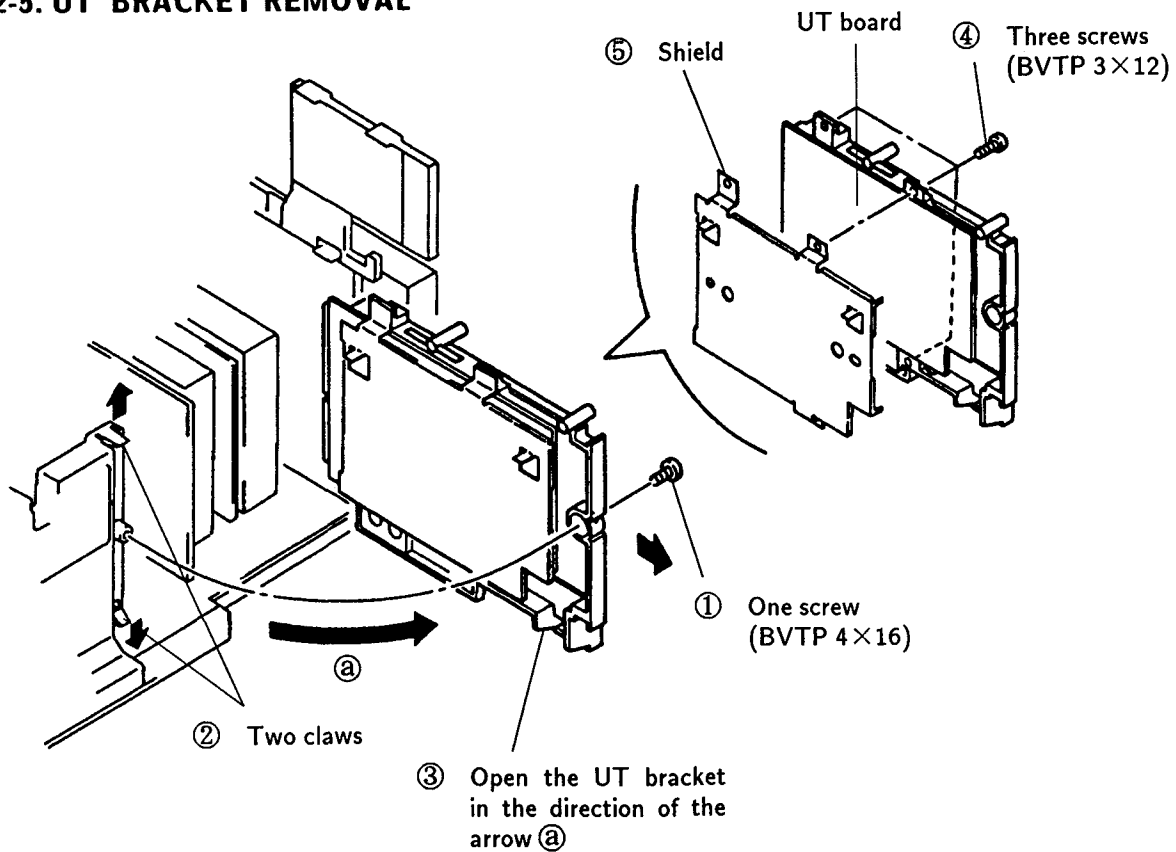


2-6. G BRACKET REMOVAL

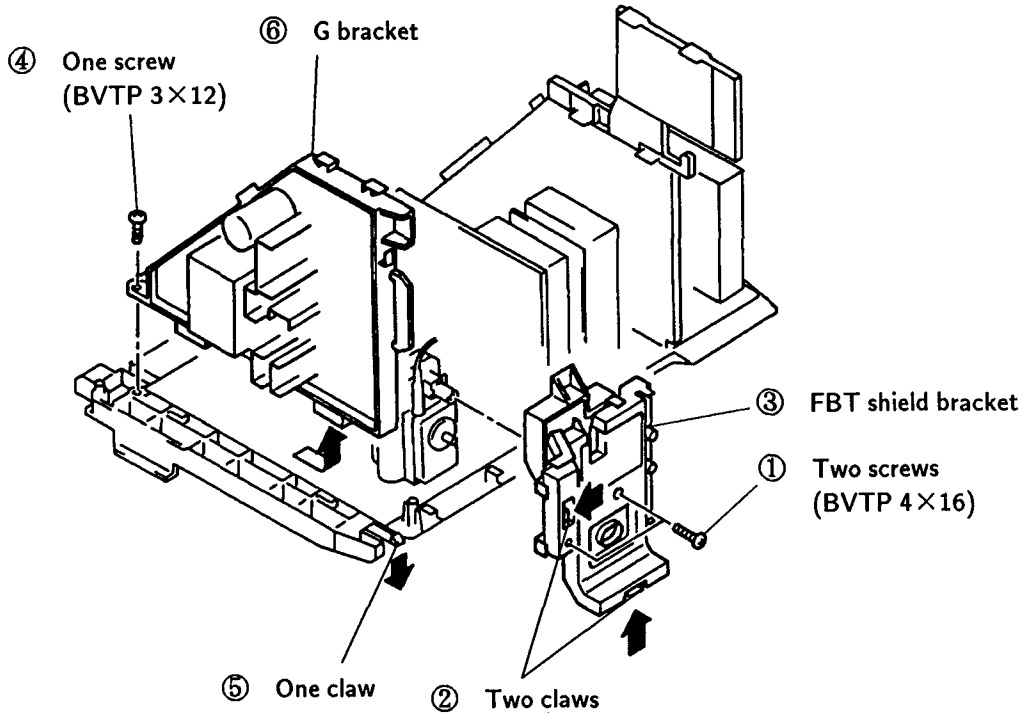


2-7. D BOARD REMOVAL

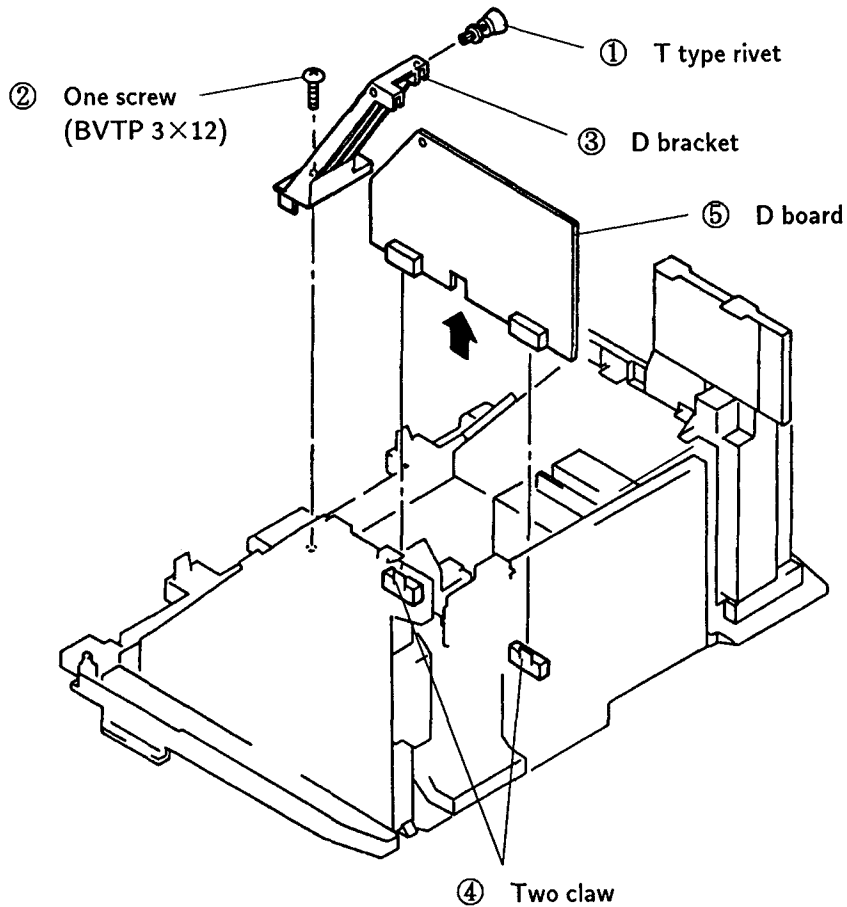


2-9. CONNECTOR CABLE

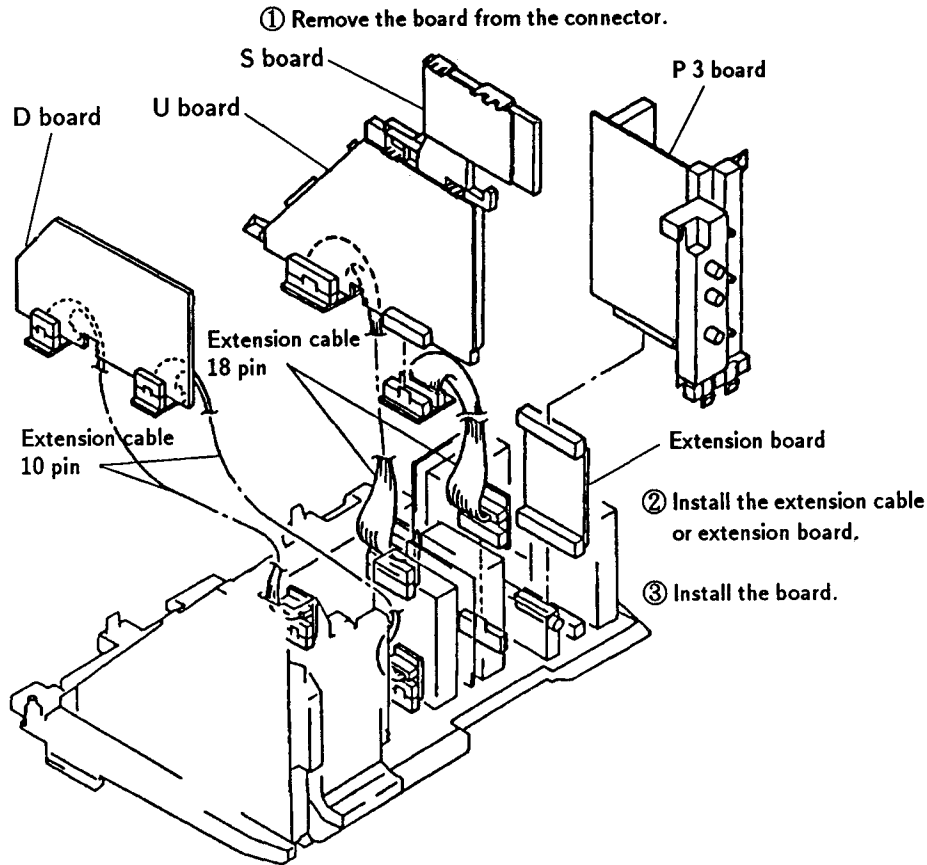

Exterior	
Extension cable	
	4 pin
1-941-891-33	
	6 pin
1-941-891-31	
	7 pin
1-941-891-32	
	18 pin
3-702-558-01	
	10 pin
3-702-557-01	
3-702-561-01	
	36 pin connector
3-702-560-01	
	50 pin connector
3-702-559-01	
	36/50 pin
36/50 pin	Extension board

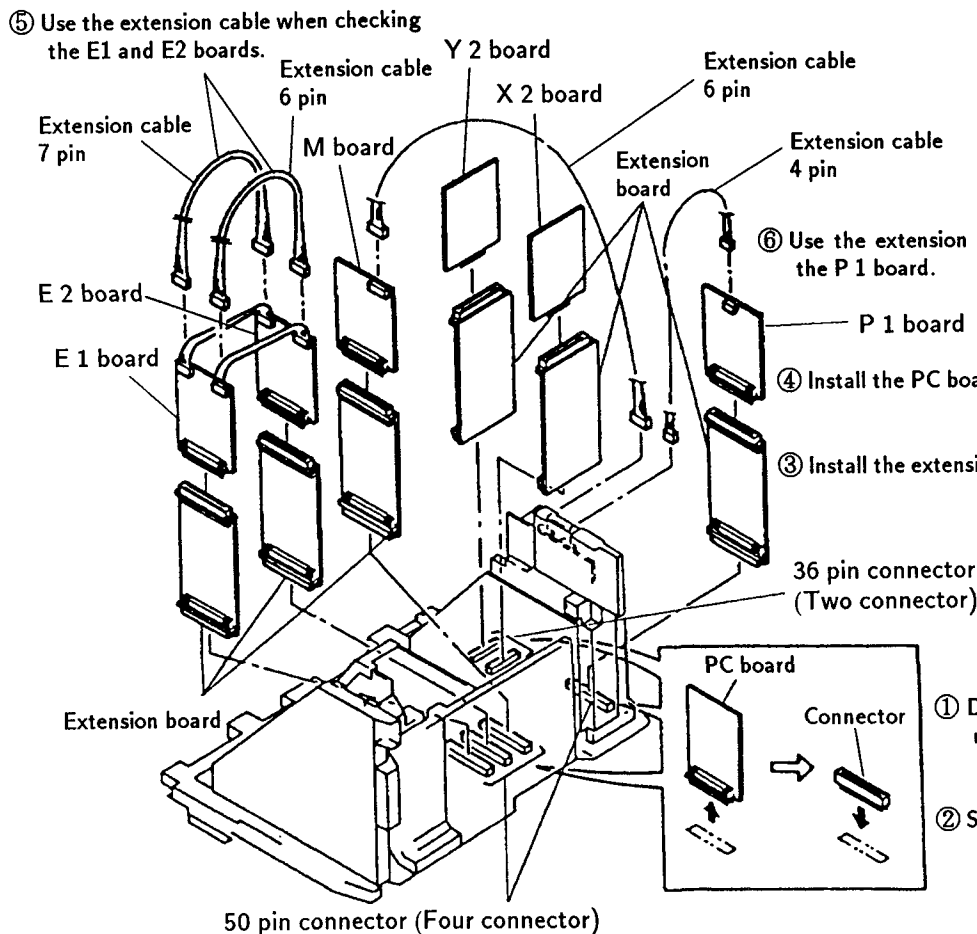


2-10. PICTURE TUBE REMOVAL

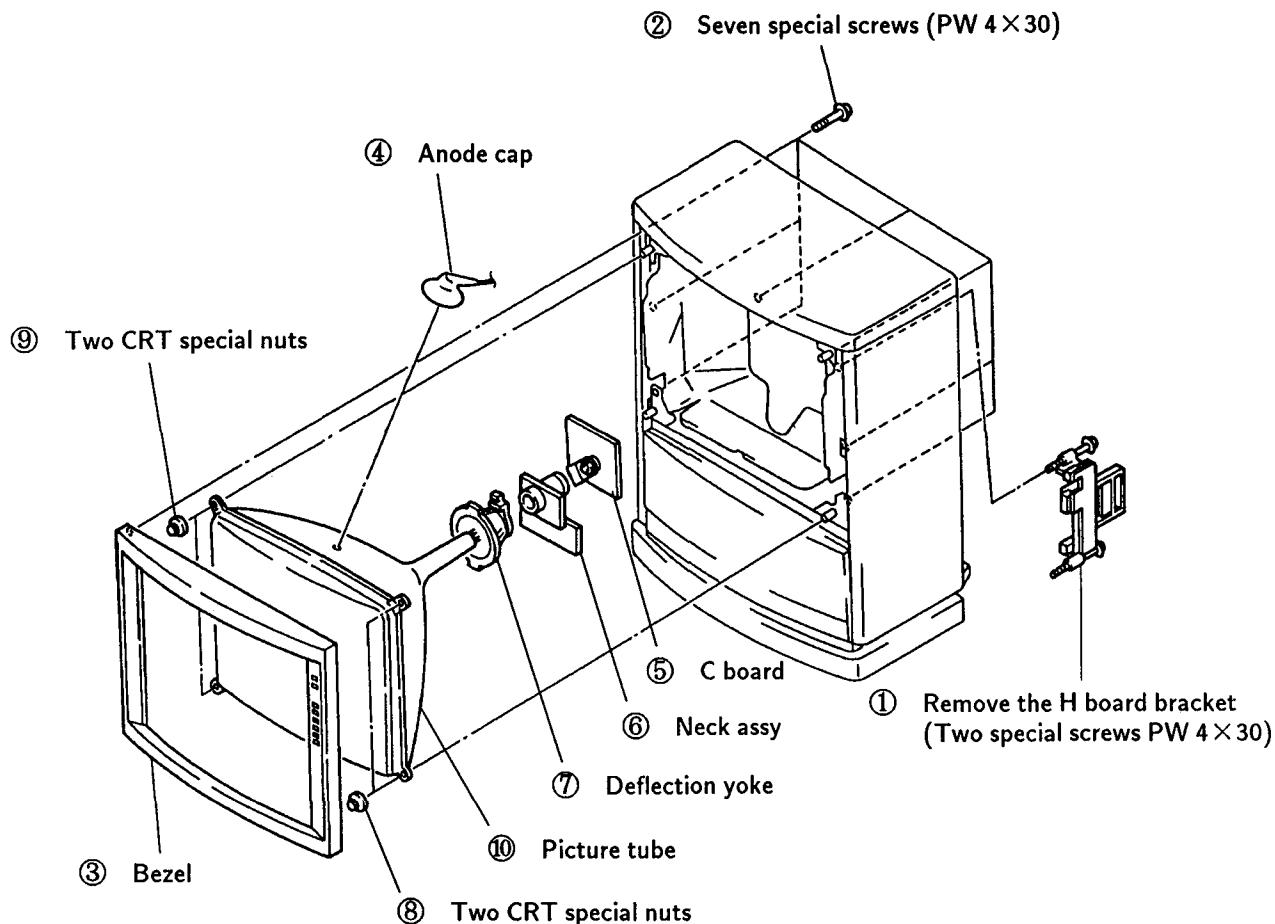

• REMOVAL OF ANODE-CAP


NOTE : Short circuit the anode of the picture tube and the anode cap to the metal chassis, CRT shield or carbon paint on the CRT, after removing the anode.

• REMOVING PROCEDURES

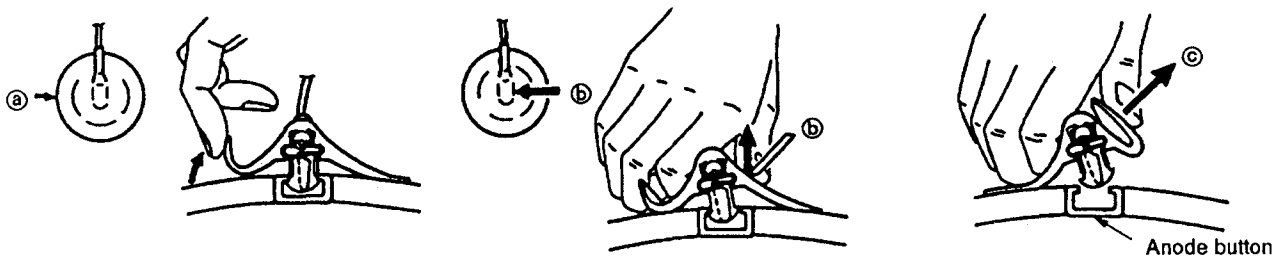

• HOW TO HANDLE AN ANODE-CAP

- ① Don't hurt the surface of anode-caps with sharp shaped material!
- ② Don't press the rubber hardly not to hurt inside of anode-caps!
A material fitting called as shatter-hook terminal is built in the rubber.
- ③ Don't turn the foot of rubber over hardly!
The shatter-hook terminal will stick out or hurt the rubber.

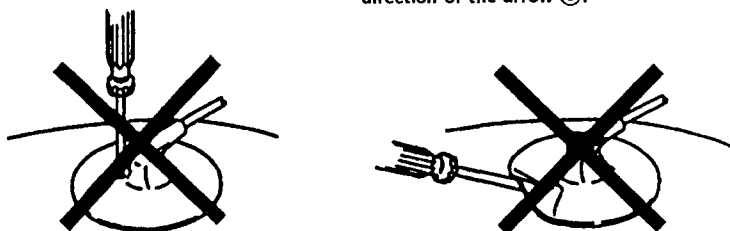

SECTION 3

SET-UP ADJUSTMENTS

- The following adjustments should be made when a complete realignment is required or a new picture tube is installed.
- These adjustments should be performed with rated power supply voltage unless otherwise noted.

Perform the adjustments in order as follows :

1. Beam Landing
2. Convergence
3. Focus
4. White Balance

Controls and switch should be set as follows unless otherwise noted :

PICTURE control RESET
BRIGHTNESS control center

Note : Test Equipment Required.

1. Color-bar/Pattern Generator
2. Degausser
3. Oscilloscope

Preparations :

- In order to reduce the influence of geomagnetism on the set's picture tube face it east or west.
- Switch on the set's power and degauss with the degausser.

3-1. BEAM LANDING

1. Input the white signal with the pattern generator.

Contrast	}	normal
Brightness		
2. Position neck ass'y as shown in Fig 3-2.
3. Set the pattern generator raster signal to red.
4. Move the deflection yoke to the rear and adjust with the purity control so that the red is at the center and the blue and the green take up equally sized areas on each side.
(See Figures 3-1 through 3-3.)
5. Move the deflection yoke forward and adjust so that entire screen is red. (See Figure 3-1.)
6. Switch the raster signal to blue, then to green and verify the condition.
7. When the position of the deflection yoke has been decided, fasten the deflection yoke with the screws.
8. If the beam does not land correctly in all the corners, use a magnet to adjust it.
(See Figure 3-4.)

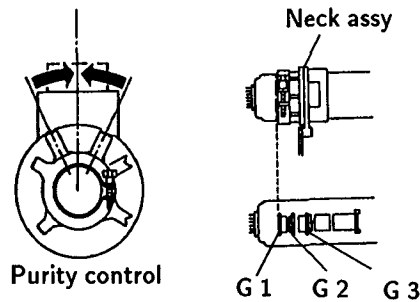


Fig.3-2

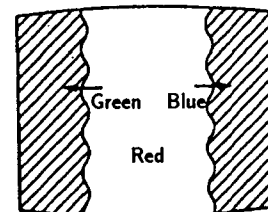


Fig.3-3

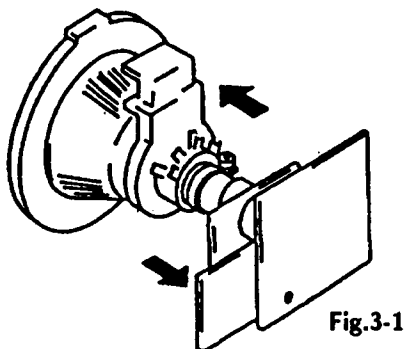


Fig.3-1

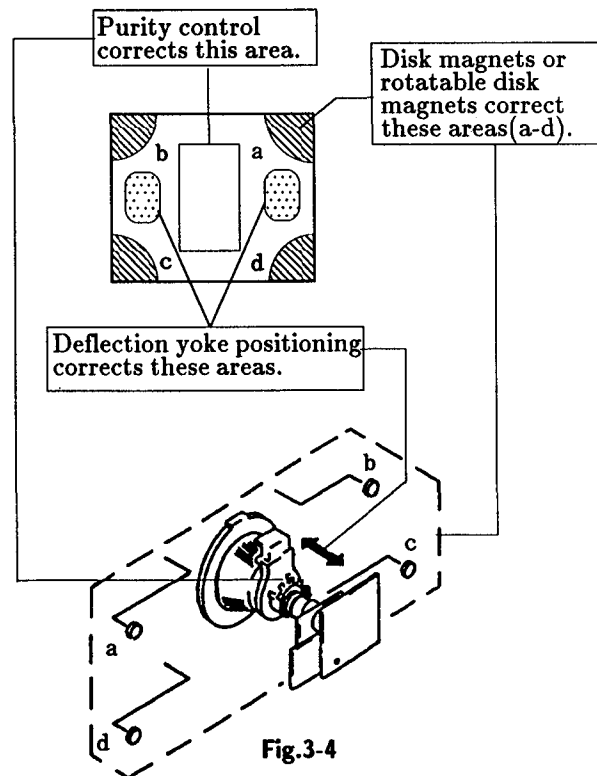



Fig.3-4

3-2. CONVERGENCE

Preparation :


- Before starting this adjustment, adjust the focus, horizontal size, and vertical size.
- Minimize the brightness setting.
- Provide dot pattern.

(1) Horizontal and Vertical Static Convergence

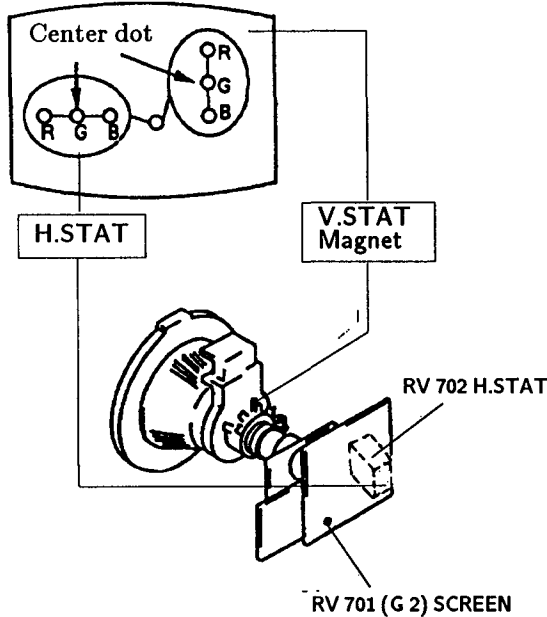


1. (Moving horizontally), adjust the H.STAT control so that the red, green, and blue points are on top of each other at the center of the screen.
2. (Moving vertically), adjust the V.STAT magnet so that the red, green, and blue points are on top of each other at the center of the screen.
3. If the H.STAT variable resistor cannot bring the red, green, and blue points together at the center of the screen, adjust the horizontal convergence with the H.STAT variable resistor and the V. STAT magnet in the manner given below.
(In this case, the H.STAT variable resistor and the V. STAT magnet influence each other)


- Tilt the V.STAT magnet and adjust the static convergence by opening or closing the V.STAT magnet.

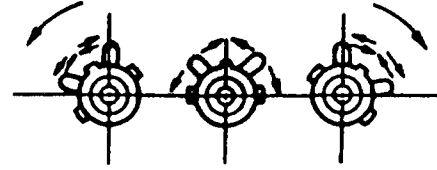

4. If the V.STAT magnet is moved in the direction of the ② and ③ arrows, the red, green, and blue points move as shown below.

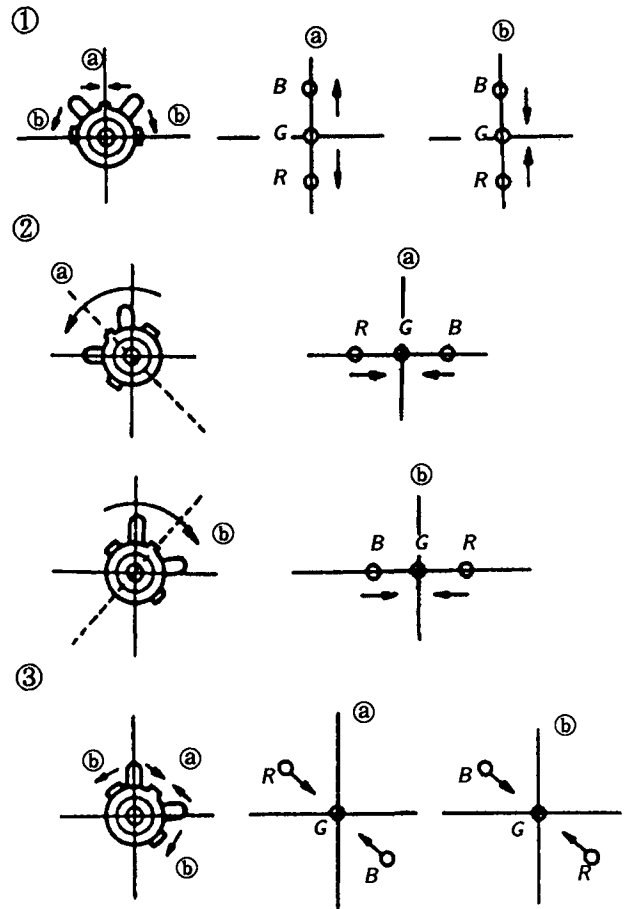

● Operation of BMC (Hexapole) Magnet

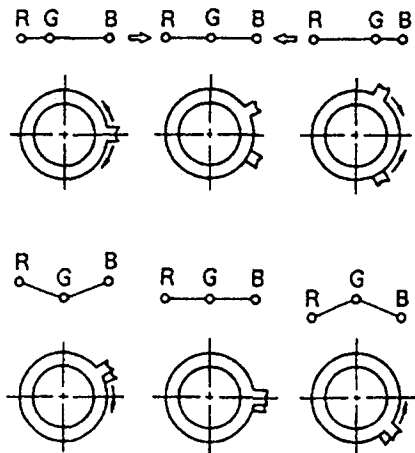


- The respective dot positions resulting from moving each magnet interact, so be sure to perform adjustment while tracking. Use the H.STAT VR to adjust the red, green, and blue dots so they coincide at the center of screen (by moving the dots in the horizontal direction).

(2) Dynamic Convergence Adjustment

Preparations :


- Before starting this adjustment, adjust the horizontal static convergence and the vertical static convergence.
1. Slightly loosen the deflection yoke screws.
 2. Remove the deflection yoke spacer.

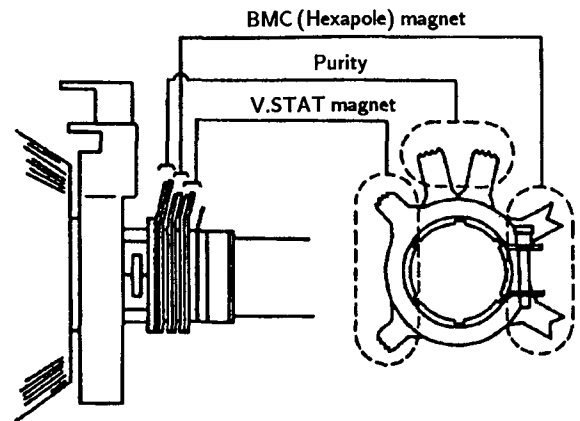

● Y separation axis correction magnet adjustment

1. Receive the cross-hatch signal, and adjust [PIX] to "MIN" and [BRT] to "standard".
2. Adjust the deflection yoke to the upright condition when it hits the CRT.
3. Adjust so that the Y separation axis correction magnet on the neck assembly is symmetrical at the top and bottom (open state).
4. Return the deflection yoke to its original position.

3. Move the deflection yoke as shown in the figure below and optimize the convergence.
4. Tighten the deflection yoke screws.
5. Install the deflection yoke spacer.

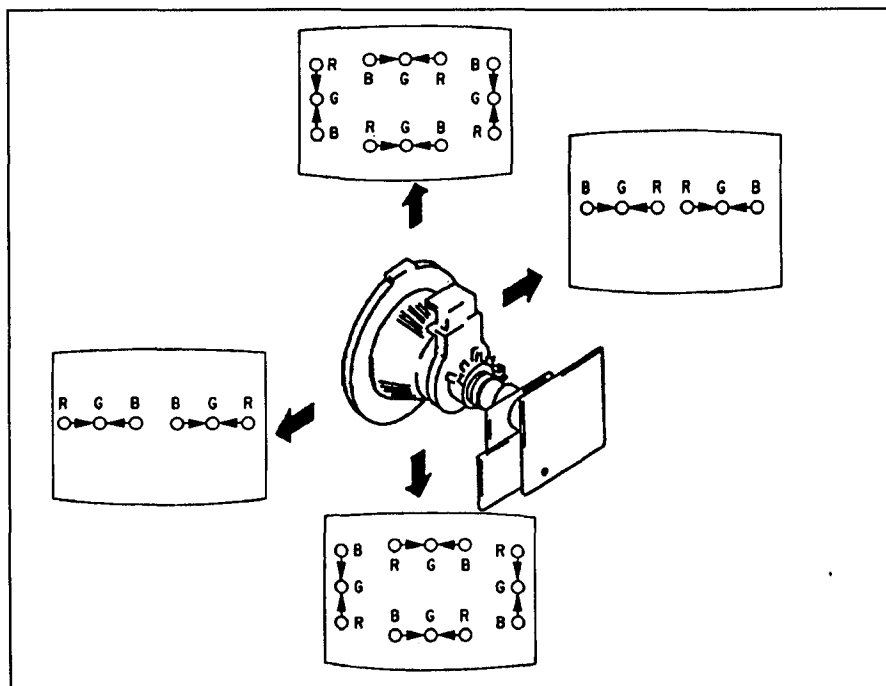


(3) Dynamic Convergence Circuit Adjustment

- Set to Service Mode.
- Input a cross-hatch signal.
- Press **1** and **4** select an item of adjustments.
- Adjust **3** and **6** to the best picture.

ITEM	REFERENCE DATA	NAME REGISTER	
UYBO	39	VP	U. Y. BOW
LYBO	39	VP	L. Y. BOW
HAMP	26	VP	H. AMP
HTILT	36	VP	H. TILT
UCBO	20	VP	U. C. BOW
UTIL	44	VP	U. TILT
LCBO	31	VP	L. C. BOW
LTIL	63	VP	L. TILT
DCSH	19	VP	DC. SHIFT


U. YBOW

Select UYBO with **1** and **4**

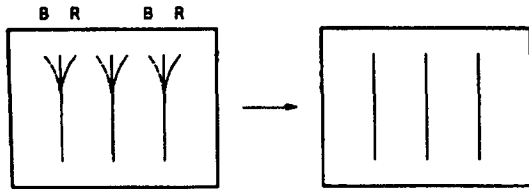


L. YBOW

Select LYBO with **1** and **4**

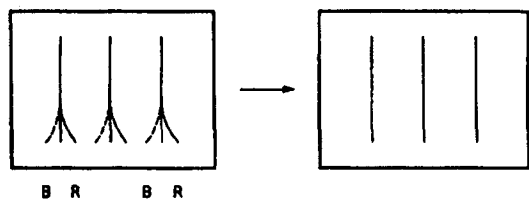


H. AMP

Select HAMP with **1** and **4**

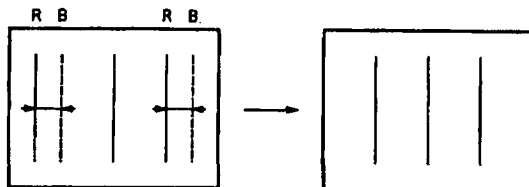


H. TILT

Select HTILT with **1** and **4**

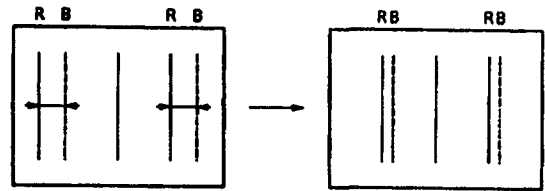


U. CBOW

Select UCBO with **1** and **4**

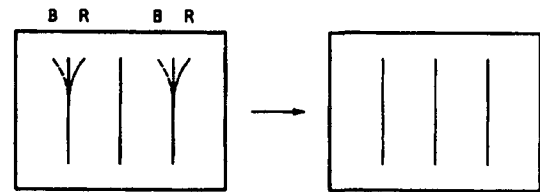


U. TILT

Select UTIL with **1** and **4**

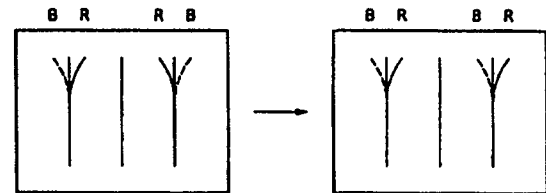


L. CBOW

Select LCBO with **1** and **4**


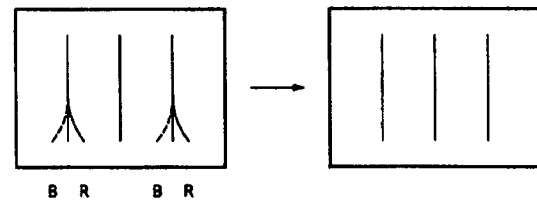


L. TILT

Select L. TIL with **1** and **4**

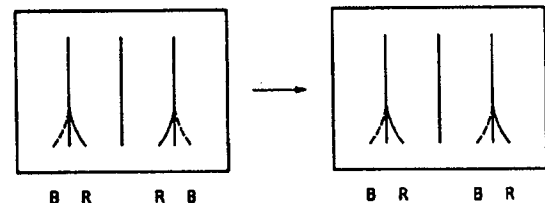


(4) Screen-corner Convergence

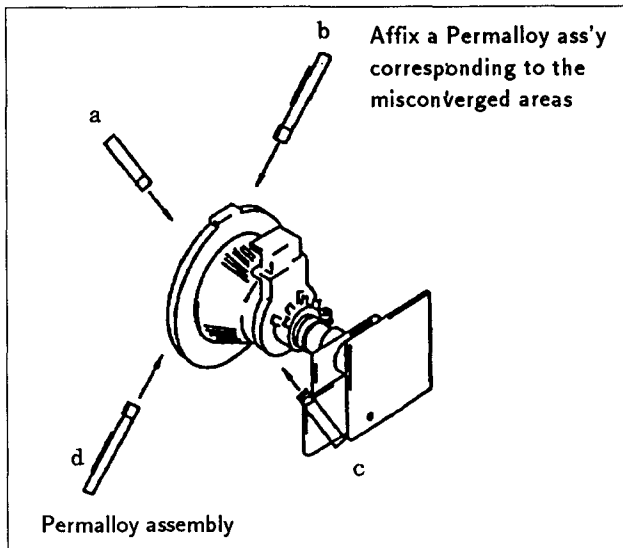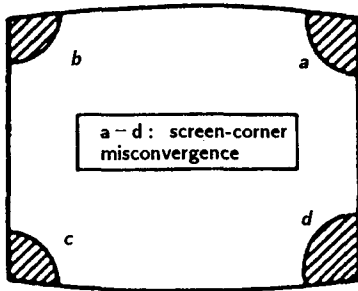

3-3. FOCUS ADJUSTMENT

Adjust FOCUS control on the flyback transformer for a best focus.

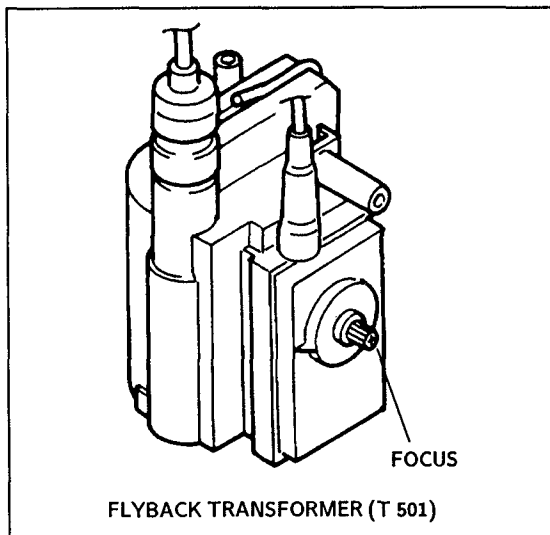

a . AN ITEM OF ADJUSTMENT

ITEM	REFERENCE DATA	NAME REGISTER	
		VP	NAME REGISTER
GAMP	19	VP	GREEN AMP.
BAMP	9	VP	BLUE AMP.
GCUT	8	VP	GREEN CUT OFF.
BCUT	6	VP	BLUE CUT OFF
SBRT	40	VP	BRIGHT

b . METHOD OF CANCELLATION FROM SERVICE MODE


Set the standby condition (Press **POWER** button on the commander) in the next place, press **POWER** button again, hereupon it becomes TV mode.

c . METHOD OF WRITE FOR MEMORY

- 1) Set to Service Mode.
- 2) Press **1** (UP) and **4** (DOWN), select an item of adjustments.
- 3) Press **MUTING** button indicate WRITE (RED) on screen.
- 4) Press **ENTER** button to write for memory.

d . MEMORY WRITE CONFIRMATION METHOD

- 1) After adjustment, pull out the plug from AC outlet, and next place, plug in AC outlet again.
- 2) Turn the power switch ON and set to Service Mode.
- 3) Call the adjusted items again, confirm they were adjusted.

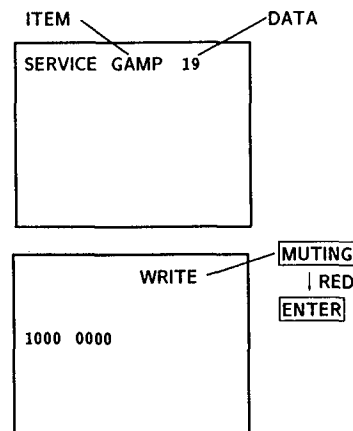

3-4. G2 (SCREEN) AND WHITE BALANCE ADJUSTMENTS

1. G 2 (SCREEN) ADJUSTMENT(RV 701)

- 1) Set the PICTURE and BRIGHTNESS to normal.
- 2) Confirm G 1 voltage is within 30.0 ± 5 V.
- 3) Apply DC voltage of 180 V to the cathodes of R,G and B from DC stabilized power source.
- 4) While watching the picture, adjust the G2 control (RV 701) to the just the retrace line disappears.

(Using the Remote Commander)

2. WHITE BALANCE ADJUSTMENTS


- 1) Set to service mode.
- 2) Press **STANDARD** to normal and if necessary "TRINITONE" set to "LOW" by **+** or **-**.
- 3) Input an entire-white signal.
- 4) Set the PICTURE to minimum.
- 5) Select S BRT with **1** and **4**, and then set the level to minimum with **3** and **6**.
- 6) Select G CUT and B CUT with **1** and **4**.
And adjust the level with **3** and **6** for the best white balance.
- 7) Set the PICTURE to maximum.
- 8) Select G AMP and B AMP with **1** and **4**, and adjust the level with **3** and **6** for the best white balance.
- 9) Write into the memory by pressing **MUTING** → then **ENTER**.

3. WHITE BALANCE ADJUSTMENT OF THE WINDOW PICTURE

- 1) Press P/P to display a window picture.
- 2) Input an entire-white signal.
- 3) Adjust RV3003 (SUB BRT) on P1 board to control the window as similar to the white pattern as possible.

4. SUB BRIGHT ADJUSTMENT

- 1) Set to service mode.
- 2) Input a staircase signal of black and white from the pattern generator.
- 3) BRIGHTNESS ... RESET
PICTURE minimum
- 4) Select SBRT with **1** and **4**, and adjust SUB BRIGHT level with **3** and **6** so that the stripe second from the right is dimly lit.

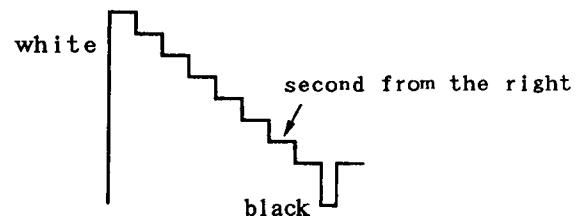

SECTION 4 SAFETY RELATED ADJUSTMENTS

A BOARD

☒ R565 CONFIRMATION METHOD (HOLD-DOWN CONFIRMATION) AND READJUSTMENTS

The following adjustments should always be performed when replacing the following components (marked with ☒ on the schematic diagram).

IC502, Q509, Q510, R565, R567, R568, R569

①

1. Preparation before confirmation

- 1) Remove R651 on the G board and connect a variable resistor (RV1: about $10k\Omega$) between pin ① of IC651 and B+ line.
- 2) Supply $120 \pm 2.0V$ AC to with variable auto-transformer.

2. Hold-down operation confirmation

- 1) Turn the POWER switch ON, and input an entirely white signals and adjust ABL current to $1640 \pm 20\mu A$ with PICTURE and BRIGHT etc controls.
- 2) Increase B+ line voltage gradually by adjusting the resistor of RV1. Confirm that the minimum voltage is less than $152.0V$ DC whereby the raster disappears during operation of hold-down circuit.


NOTE: When the hold-down circuit starts operating, switch OFF the POWER of the set immediately.

- 3) Turn the POWER switch ON, and input a dot signals and adjust ABL current to $140 \pm 20\mu A$ with PICTURE and BRIGHT etc controls.
- 4) Increase B+ line voltage gradually by adjusting the resistor of RV1. Confirm that the minimum voltage is lower than $154.5V$ DC whereby the raster disappears during operation of hold-down circuit.

NOTE: When the Hold-down circuit starts operating, switch OFF the POWER of the set immediately.

3. Hold-down readjustment

When step 2 is not satisfied, readjustment should be performed by altering the resistance value of R565 (a component marked with ☒).

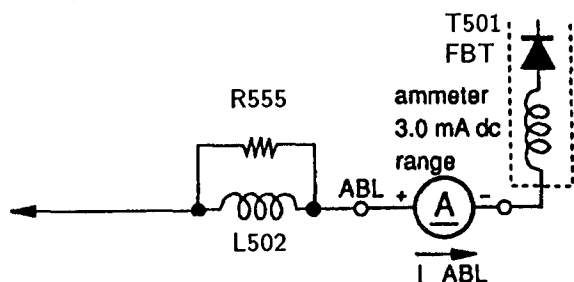

A BOARD

☒ R566 CONFIRMATION METHOD (HOLD-DOWN CONFIRMATION) AND READJUSTMENTS

The following adjustments should always be performed when replacing the following components (marked with ☒ on the schematic diagram).

IC502, IC651, Q509, Q510, D502, C531, R554, R566, R567, R568, R569, R651, R1506, T501

②

1. Preparation before confirmation

- 1) Turn the POWER switch ON, and input an entirely white signals and set the PICTURE and BRIGHT controls to maximum.
- 2) Confirm that voltage of the check terminal of pin ② of A-0 connector is more than $100.0V$ DC when the set is operating normally with $120.0 \pm 2.0V$ AC supply.

2. Hold-down operation confirmation

- 1) Turn the POWER switch ON, and input an entirely white signals and set the PICTURE and BRIGHT controls to maximum.
- 2) Apply DC voltage of over $130 \pm 2.0V$ DC gradually to the check terminal of pin ② of A-0 connector via 1SS119 from the DC stabilized power source.

Confirm that the minimum voltage is lower than $120.5V$ DC whereby the raster disappears during operation of hold-down circuit.

NOTE: When the hold-down circuit starts operating, switch OFF the POWER of the set immediately.

3. Hold-down readjustment


When step 2 is not satisfied, readjustment should be performed by altering the resistance value of R566 CARBON 1/4W (a component marked with ☒).


G BOARD

B+ VOLTAGE CONFIRMATION

The following adjustments should always be performed when replacing IC651 and R651.

- 1) Supply $130 \pm 2\%$ V AC to with variable autotransformer.
- 2) Input an entirely monoscope signal.
- 3) Set the PICTURE control and the BRIGHT controls in to initial reset.
- 4) Confirm the voltage of A BOARD ① pin A-3 connector is less than 136.5V DC.
- 5) If step 4) is not satisfied, replace IC651 and R651 repeat above steps.

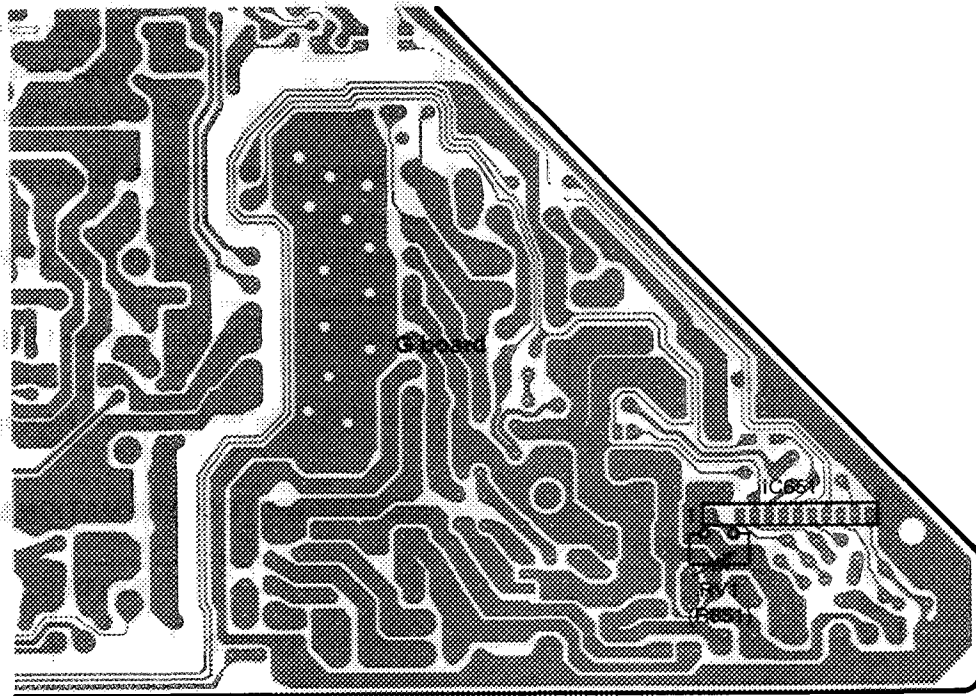

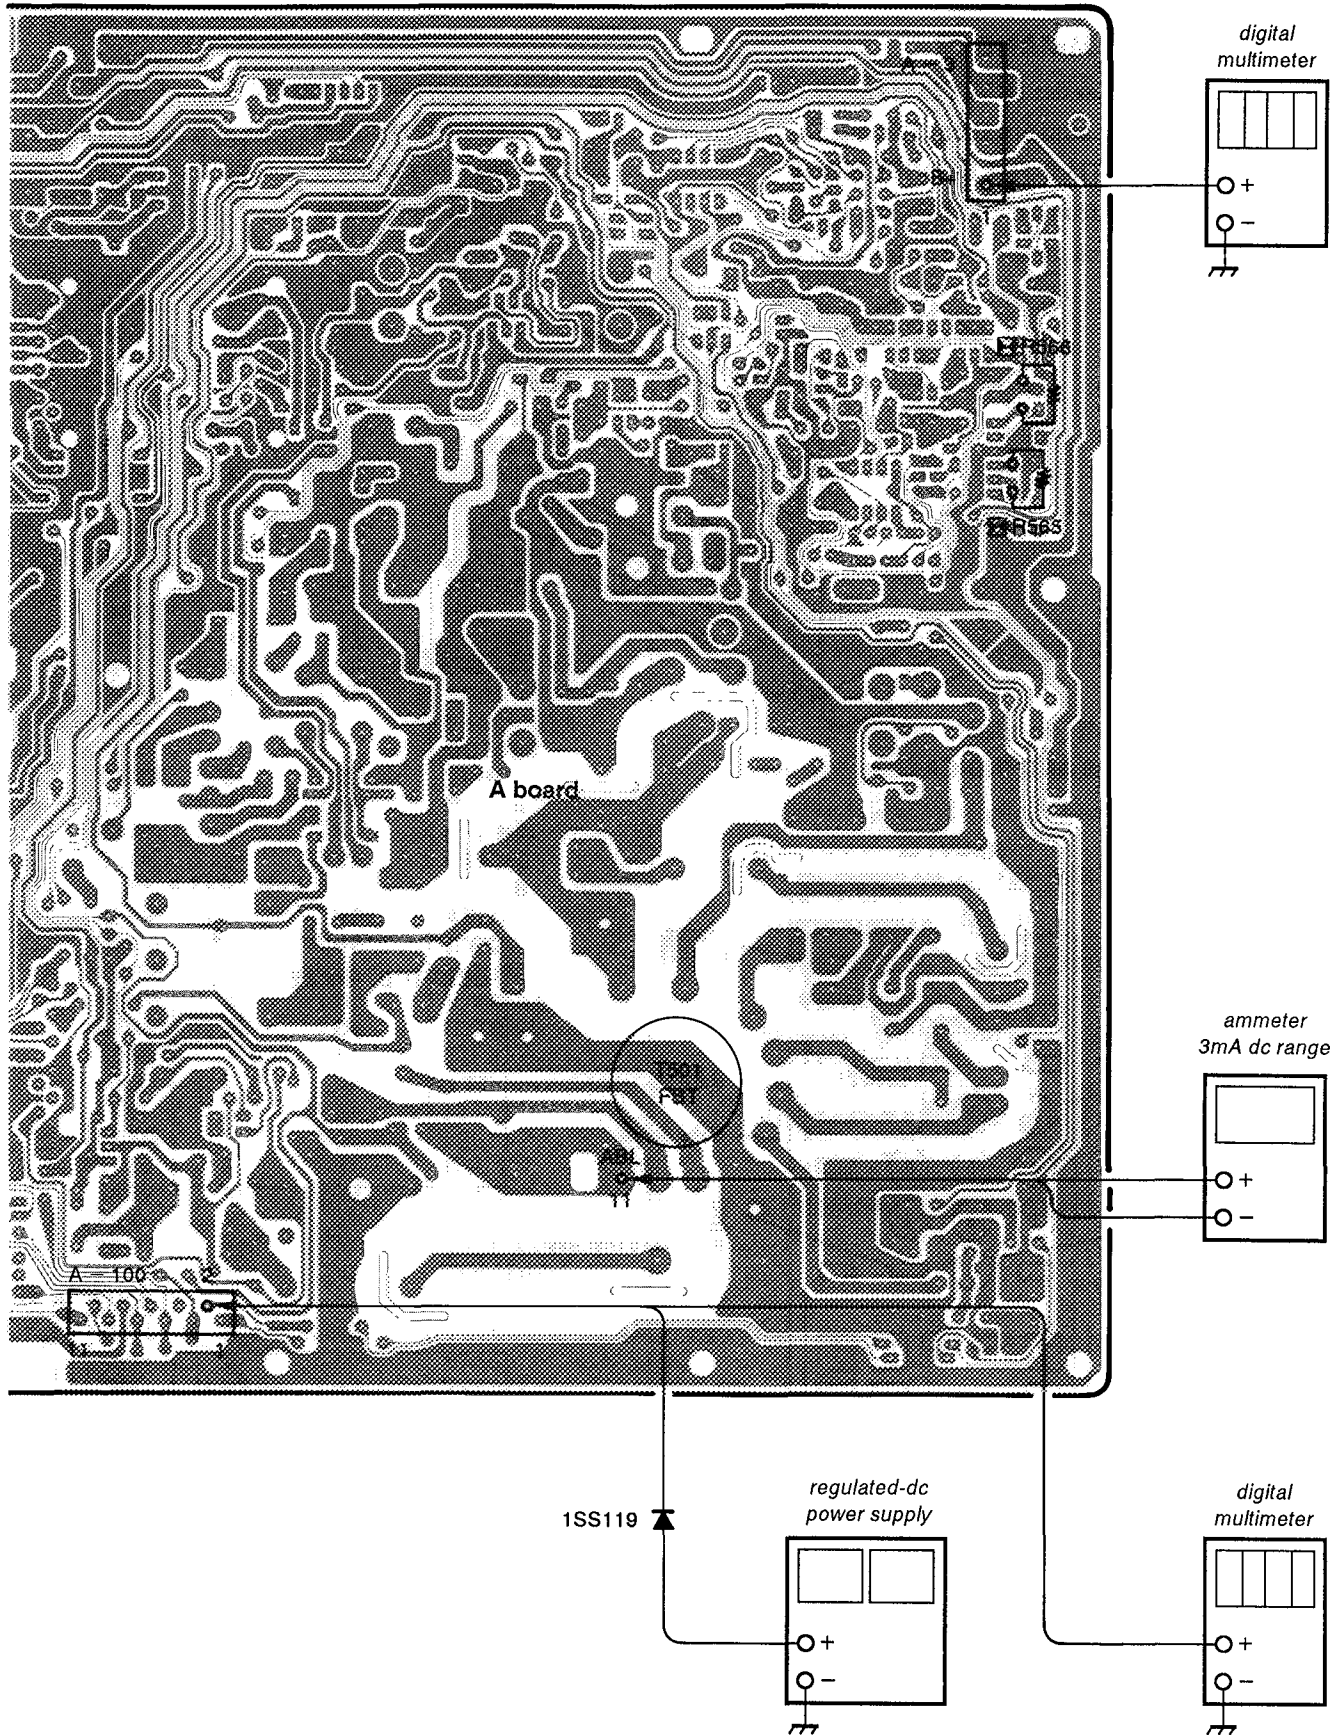

SECTION 5 CIRCUIT ADJUSTMENTS

5-1. ELECTRICAL ADJUSTMENT BY REMOTE COMMANDER


Use of Remote Commander (RM-Y115) can be performed circuit adjustments about this model.

1. METHOD OF SETTING THE SERVICE MODE


- 1) Press **POWER** button on the Remote Commander while pressing switch on the rear of the set.

NOTE : Test Equipment Required.

1. Pattern Generator
2. Frequency counter
3. Digital multimeter
4. Audio OSC

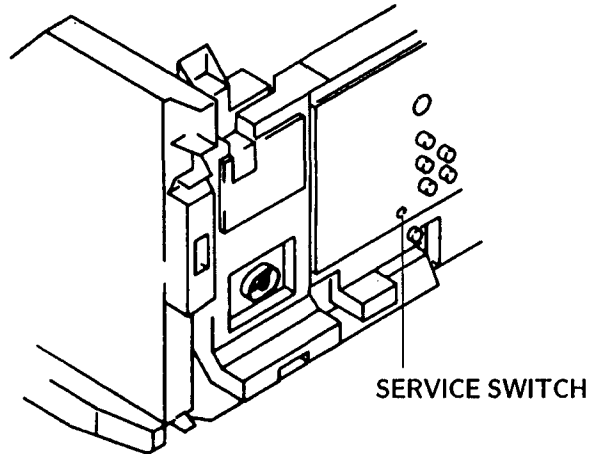

2. ADJUST BUTTONS AND INDICATOR

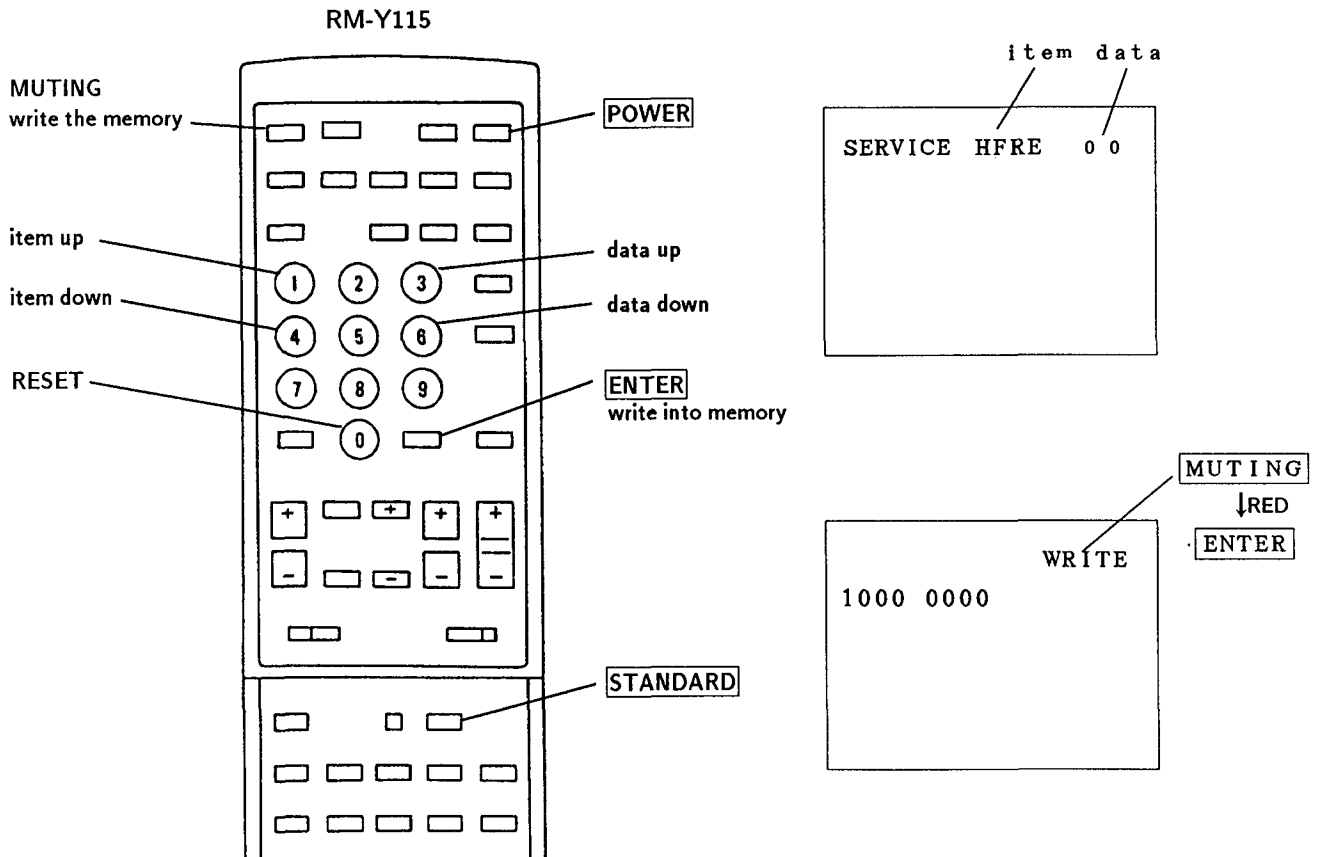

3. AN ITEM OF ADJUSTMENT

ITEM	REFERENCE DATA		NAME REGIST
AFC	1	VP	AFC 1.0
HFRE	93	VP	H. FREQUENCE
VFRE	15	VP	V. FREQUENCE
VPOS	19	VP	V. SHIFT
VSIZ	32	VP	V. SIZE
VLIN	2	VP	V. LINEARITY
VSCO	3	VP	VS. CORRECTION
HPOS	9	VP	H. PHASE
HSIZ	25	VP	H. SIZE
PAMP	17	VP	PIN. AMP.
CPIN	4	VP	CORNER PIN
PPHA	8	VP	PIN. PHASE
VCOM	2	VP	V. COMP
GAMP	19	VP	GREEN AMP.
BAMP	9	VP	BLUE AMP.
GCUT	8	VP	GREEN CUT OFF.
BCUT	6	VP	BLUE CUT OFF
SPIX	40	VP	PICTURE
SHUE	29	VP	HUE
SCOL	30	VP	COLOR
SBRT	40	VP	BRIGHT
RGBP	28	VP	RGB PICTURE
SHAP	7		SHARPNESS
DISP	35		OUTPUT
VSMO	0	VP	VSMO
REF	2	VP	REF 1.0
ROFF	1	VP	OFF NR
GOFF	1	VP	OFF NG
BOFF	1	VP	OFF NB
ABLM	0	VP	ABLM
DRGB	1	VP	D RGB
YBOW	31	DE	Y BOW
VANG	35	DE	V. ANGLE
HTAP	31	DE	H. TRAP
TEST	0	AP	T
MPX	7	AP	ATT
FILO	31	AP	I1
DEEM	7	AP	I2
STEV	31	AP	OSC 1
SAPV	31	AP	OSC 2
PILO	7	AP	PILOT
SEP	31	AP	WIDE BAND
VD	7	AP	SPECTRAL
LVOL	0	AP	VOLUME-L
RVOL	0	AP	VOLUME-R
BASS	7	AP	BASS
TRE	7	AP	TREBLE

UYBO	39	DC	U.Y. BOW
LYBO	39	DC	L.Y. BOW
HAMP	26	DC	H.AMP
HTIL	36	DC	H TILT
UCBO	20	DC	U.C. BOW
UTIL	44	DC	U.TILT
LCBO	31	DC	L.C. BOW
LTIL	63	DC	L.TILT
DCSH	19	DC	DC. SHIFT
PHPO	34	PI	READ DELAY H
PVPO	8	PI	READ DELAY V
PLEV	14	PI	PICTURE LEVEL
PFCO	11	PI	FRAME COLOR
NRLE	30		NR LEVEL
DSPP	31		


4. METHOD OF CANCELLATION FROM SERVICE MODE

Set the standby condition (Press **POWER** button on the commander) in the next place, press **POWER** button again, hereupon it becomes TV mode.

5. METHOD OF WRITE FOR MEMORY


- 1) Set to Service Mode.
- 2) Press **1** (UP) and **4** (DOWN), select an item of adjustments.
- 3) Press **MUTING** button indicate WRITE (RED) on screen.
- 4) Press **ENTER** button to write for memory.

6. MEMORY WRITE CONFIRMATION METHOD

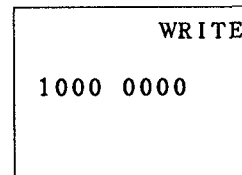

- 1) After adjustment, pull out the plug from AC outlet, and next place, plug in AC outlet again.
- 2) Turn the power switch ON and set to Service Mode.
- 3) Call the adjusted items again, confirm they were adjusted.

5-2. A BOARD ADJUSTMENTS

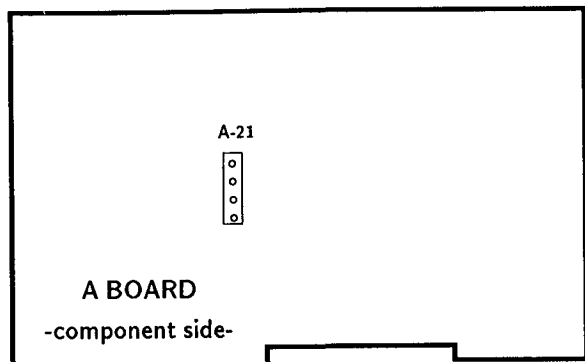

RF AGC ADJUSTMENT (IF BLOCK VR)

- 1) Input a color-bar signal.
- 2) Adjust AGC VR of TU 101 so that snow noise and cross-modulation disappear from the picture.
- 3) Confirm them at every channel.

H.FREQUENCY ADJUSTMENT (HFRE)

- 1) Set to Service Mode.
- 2) Input a color-bar signal.
- 3) Connect a frequency counter to base of Q 507.
- 4) Call the item of AFC, set to 3 level (free run).
- 5) Select HFRE with **[1]** and **[4]**.
- 6) Adjust **[3]** and **[6]** to the 15735 ± 60 Hz level.
- 7) Call the item of AFC again, adjust the level "01".
- 8) Write into the memory by pressing **[MUTING]** → then **[ENTER]**.

V.FREQUENCY ADJUSTMENT (VFRE)


- 1) Set the Service Mode.
- 2) Input an off-air signal (VIDEO IN → no signal).
- 3) Connect the frequency counter across connector VDY - ⊕ of DY-1 connector and ground.
- 4) Select VFRE with **[1]** and **[4]**.
- 5) Adjust **[3]** and **[6]** to the 56 ± 0.5 Hz.
- 6) Write the memory by pressing **[MUTING]** → then **[ENTER]**.

SUB CONTRAST ADJUSTMENT (SPIX)

- 1) Set to Service Mode.
- 2) Input a color-bar signal. (75 IRE)
- 3) Set the conditions as follows.

PICTURE MAX
 COLOR MIN
 BRIGHT MIN
 R OFF ON
 G OFF OFF
 B OFF OFF

Press **[MENU]** and select VIDEO MENU → **[]** (L)
 (It becomes minimum).
 Select **[3]** (ON) and **[6]** (OFF) with **[1]** and **[4]**.

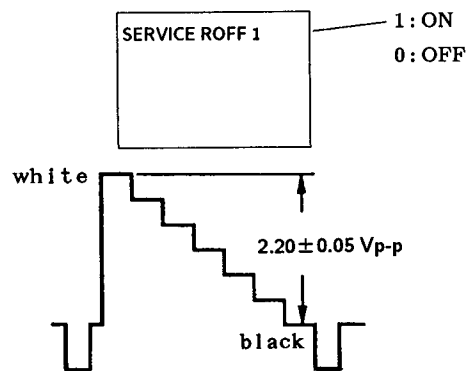


- 4) Connect an oscilloscope to TP49B of C board and ground.
- 5) Adjust **[3]** and **[6]** to the 2.20 ± 0.05 Vp-p level by selecting SPIX with **[1]** and **[4]**.
- 6) Write the memory by pressing **[MUTING]** → then **[ENTER]**.
- 7) Return the following back to normal after adjustment.

G OFF ON
 B OFF ON
 COLOR CENTER
 BRIGHT CENTER
 PICTURE 80%

SUB HUE, SUB COLOR ADJUSTMENT (SHUE, SCOL)


- 1) Input a color-bar signal.
- 2) Press **STANDARD** to normal.
- 3) Set to Service Mode.
- 4) Connect an oscilloscope to TR 49 R of C board and ground.
- 5) Adjust **3** and **4** to the $V1=V4$ and $V2=V3$ by select to SHUE and SCOL with **1** and **4**.

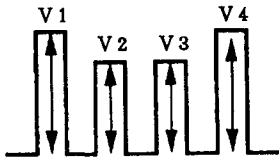

- 6) Write into the memory by pressing **MUTING** → then **ENTER**.


V.SIZE ADJUSTMENT (VSIZ)

- 1) Set to Service Mode.
- 2) Press **STANDARD** to normal.
- 3) Input a cross-hatch signal.
- 4) Adjust **3** and **6** to the best vertical size by selecting VSIZ with **1** and **4**.
- 5) Write into the memory by pressing **MUTING** → then **ENTER**.

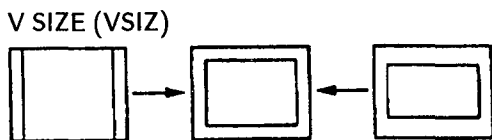

H.SIZE ADJUSTMENT (HSIZ)

- 1) Input a cross-hatch signal.
- 2) Press **STANDARD** to normal.
- 3) Set to Service Mode.
- 4) Adjust **3** and **6** to best horizontal size by selecting HSIZ with **1** and **4**.
- 5) Write into the memory by pressing **MUTING** → then **ENTER**.

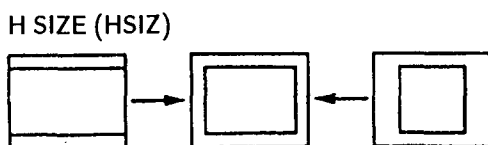

H.CENTER ADJUSTMENT (H POS)

Note: Perform this adjustment after H.FREQUENCY ADJUSTMENT (HFRE).


- 1) Input a color bar signal.
- 2) Set the Service mode.
- 3) Select HSIZ with **1** and **4**.
- 4) Press **6** so that the Horizontal size set to min.
- 5) Adjust A-21 conector position so that both-size blanking width of the Raster should be same on the Scrnne.
- 6) Unplug Set then plug in Set.
- 7) Set to Service mode.
- 8) Select HPOS with **1** and **4**.
- 9) Adjust **3** and **6** so that the color bars center should be set to the CRT Screen center position.
- 10) White into the memory by the pressing **MUTING** → then **ENTER**.




PIN AMP (PAMP) , CORNER PIN (CPIN) PIN PHASE (PPHA), H TRAPIZOID (HTRA) V LINEARITY (VLIN), V ANGLE (VANG), VS CORRECTION (VSCO), Y BOW (YBOW), V SHIFT (VPOS), AND V COM (VCOM) ADJUSTMENTS

- 1) Input a cross-hatch signal.
- 2) Press **STANDARD** to normal.
- 3) Set to Service Mode.
- 4) Select PAMP, CPIN, PPHA, H TRA, VPOS, VCOM, LVIN, VANG, VSCO and YBOW with **1** and **4**.
- 5) Adjust **3** and **6** to the best picture.
- 6) Write the memory by **MUTING** → **ENTER**.

PIN AMP (PAMP)

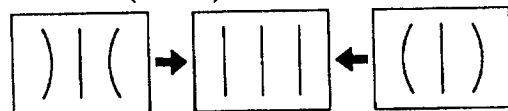


CORNER PIN (CPIN)

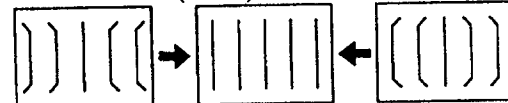


PIN PHASE (PPHA)



H TRAPIZOIDO (HTRA)

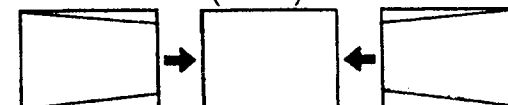

V-SHIFT (VPOS)

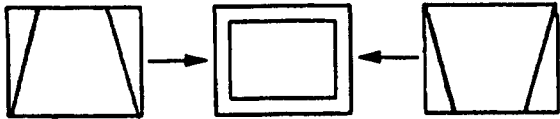


V COMP (VCOM)



V LINEARITY (VLIN)




V ANGLE (VANG)

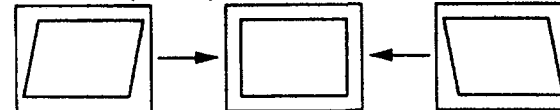

VS CORRECTION (VSCO)




Y BOW (Y BOW)

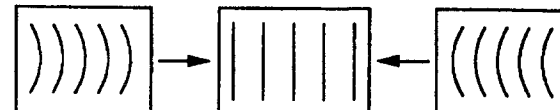


FILTER ADJUSTMENT (MPX, FILO)

- 1) Set to Service Mode.
- 2) Select to **TEST** with **1** and **4**, set the data to "1".
Then select MPX and change data to "08".
- 3) Connect an audio oscillator to R224 using a capacitor (10μ F/16V), set frequency to 62.936 kHz ± 0.1 kHz.
And then, through the 10kΩ resistor, feed 9.0V into the mute of TUVIF TU 101.

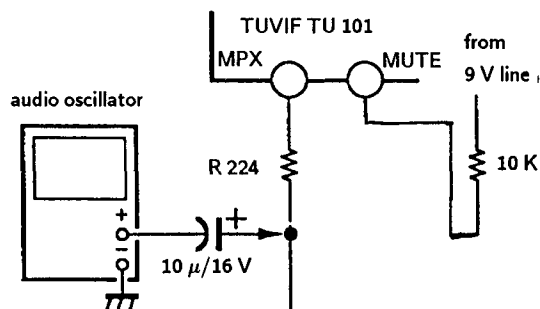


V 4 fh : SINE-WAVE 62.936 KHz ± 0.1 KHz
LEVEL 3.0 Vp-p

- 4) Make the data "00" by selecting FILO with **1** and **4**. And then, send up the data gradually by pressing **6**. Set the data to D1 before SAT3 changing to 1 from 0.
- 5) Send up the data gradually. Set data D2 when SAT3 changes 0 from 1.
- 6) Adjust the data of FILO to $\frac{D1 + D2}{2}$.
- 7) Write into the memory by pressing **MUTING** → then **ENTER**.

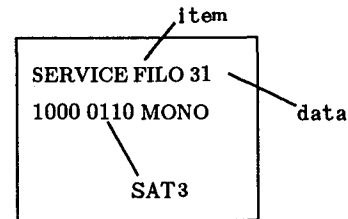


ST VCO ADJUSTMENT (MPX, STEV)

- 1) Set to Service Mode.
- 2) Select TEST with **1** and **4**, set the data to "1".
And then press **MTS** to MONO.
- 3) Select MPX, set the data "8".
- 4) Connect an audio oscillator to R224 using electrolytic capacitor (10μ F/16V) and apply the frequency Vst. Then, apply DC voltage to mute of TUVIF TU 101 using 10kΩ connect to 9.0 V line.

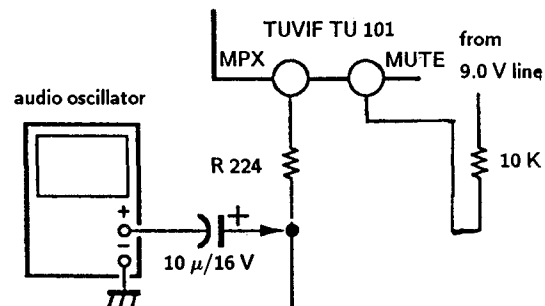

Vfh : SINE-WAVE 15.734 KHz ± 0.1 KHz
LEVEL 0.28 Vp-p

- 5) Select STEV with **1** and **4**, set the data to "00" with **6**. And then, send up the data gradually. Set the data to D1 before SAT2 changes from 0 to 1.
- 6) Send up data gradually, set the data to D2 when SAT2 changes 1 from 0.
- 7) Adjust the data of STEV to
- 8) Write into the memory by pressing **MUTING** → then **ENTER**.

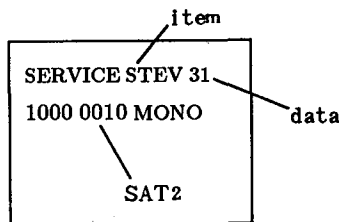

MPX IN LEVEL ADJUSTMENT (MPX)

- 1) Set to Service Mode.
- 2) Select TEST with [1] and [4], set the data to "0" with [6]. And then press [MTS] to MONO.
- 3) Select MPX with [1] and [4], set the data to "08" with [3] and [6].
- 4) Write into the memory by pressing [MUTING] → then [ENTER].

PILOT CANCEL ADJUSTMENT (PILO)

- 1) Set to the Service Mode.
- 2) Select PILO with [1] and [4], set the data to "08" with [3] and [6].
- 3) Write into the memory by pressing [MUTING] → then [ENTER].

SAP VCO f₀ ADJUSTMENT (SAPV)


- 1) Set to Service Mode.
- 2) Input a stereo broadcast signal with SAP.
- 3) Select TEST with [1] and [4], set the data to "0". And then, press [MTS] to MAIN.
- 4) Connect a digital multimeter to TP-1(DBX). This voltage reading will equal V 1.
- 5) Press MTS to SAP and this voltage will equal V 2.
- 6) Select SAPV with [1] and [4], adjust [3] and [6] so that $V 2 = V 1 \pm 0.03$ VDC.
- 7) Write the memory by [MUTING] → [ENTER].

SEPARATION ADJUSTMENT (SEP)


- 1) Set to Service Mode.
- 2) Press [MTS] to MAIN and receive a monoral broadcast signal.
In the next step, receive a stereo broadcast signal.
- 3) Select SEP and VD with [1] and [4], adjust [3] and [6] so that a clear stereo sound is effected.

READ DELAY H/V (PHPO, PVPO)

- 1) Input a cross hatch signal.
- 2) Set to service mode.
- 3) Press P/P a display a window picture.
(RIGHT LOWER Position)
- 4) Select PHPO, PVPO with [1] and [4]
- 5) Adjust [3] and [6] to the READ DELAY H/V.
- 6) Write the memory by pressing [MUTING] → then [ENTER].

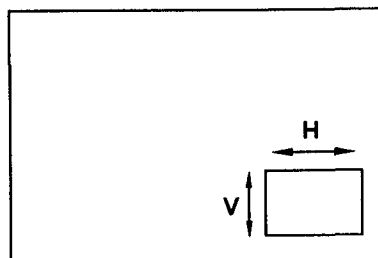


Note : Before doing any Service Adjustments on the models above you must make sure that the PIP Screen is in the number 1 position, even if there are no adjustments being made to PIP.

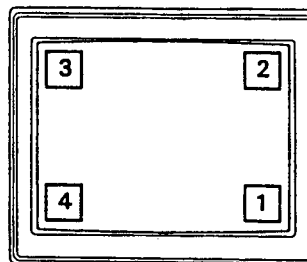

PIP Positions


After making adjustments into the PIP 1 position, write the information into the ROM.
Next, unplug the unit and recheck the other three positions. Adjustments made to the number 1 position will affect the other three positions.

5-3. P1 BOARD ADJUSTMENTS

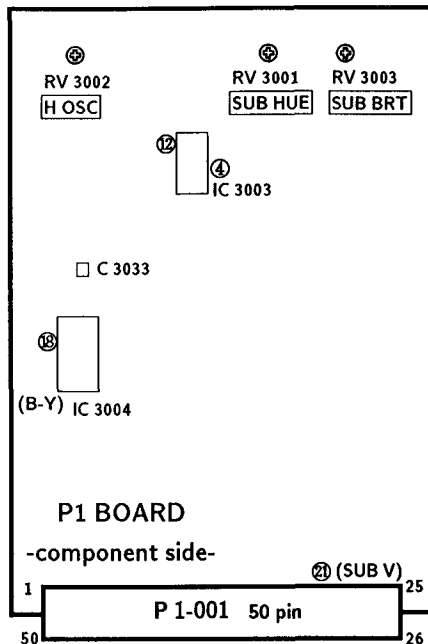

SUB HUE ADJUSTMENT (RV 3001)


- 1) Set HUE and COLOR to the standard condition.
- 2) Make adjustment so that B-Y signal as shown to the right is obtained at the crossing point of R 3009 (0Ω) and C 3033.
- 3) Supply the color bar signal of 75 IRE (white) at 2 Vpp to Pin 21 (SUB V) of P 1-001 and make adjustment by turning RV 3001.

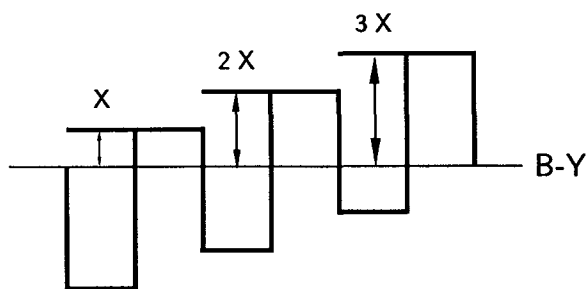

H. FREQUENCY (H OSC) ADJUSTMENT (RV-3002)

- 1) Connect a frequency counter to Pin ④ (H OUT) of IC 3003.
- 2) Connect Pin ⑫ of IC 3003 to ground.
- 3) Adjust RV3002 for a frequency of $15.734 \text{ kHz} \pm 50 \text{ Hz}$ at Pin ④ of IC 3003.
(or until the frequency comes to a standstill.)

5-4. P3 BOARD ADJUSTMENTS

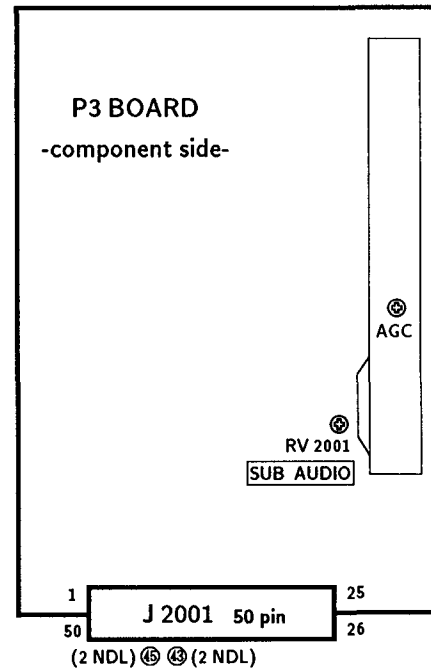

RF AGC ADJUSTMENT (IF BLOCK VR)

- 1) Input a color-bar signal.
- 2) Set to PICTURE IN PICTURE mode.
- 3) Adjust AGC VR of TU 2001 so that snow noise and cross-modulation disappear from the picture.
- 4) Confirm them at every channel.


SUB PICTURE SOUND VOLUME LEVEL (SUB AUDIO) ADJUSTMENT (RV2001)

- 1) Receive an audio signal of 400 Hz. (100% mod.)
- 2) Adjust RV 2001 for the following level at Pin ④ (2 NDR) or Pin ⑤ (2 NDL) of J 2001.





$500 \text{ mVrms} \pm 2 \text{ dB}$



SECTION 6
DIAGRAMS








6-1. BLOCK DIAGRAM (1)

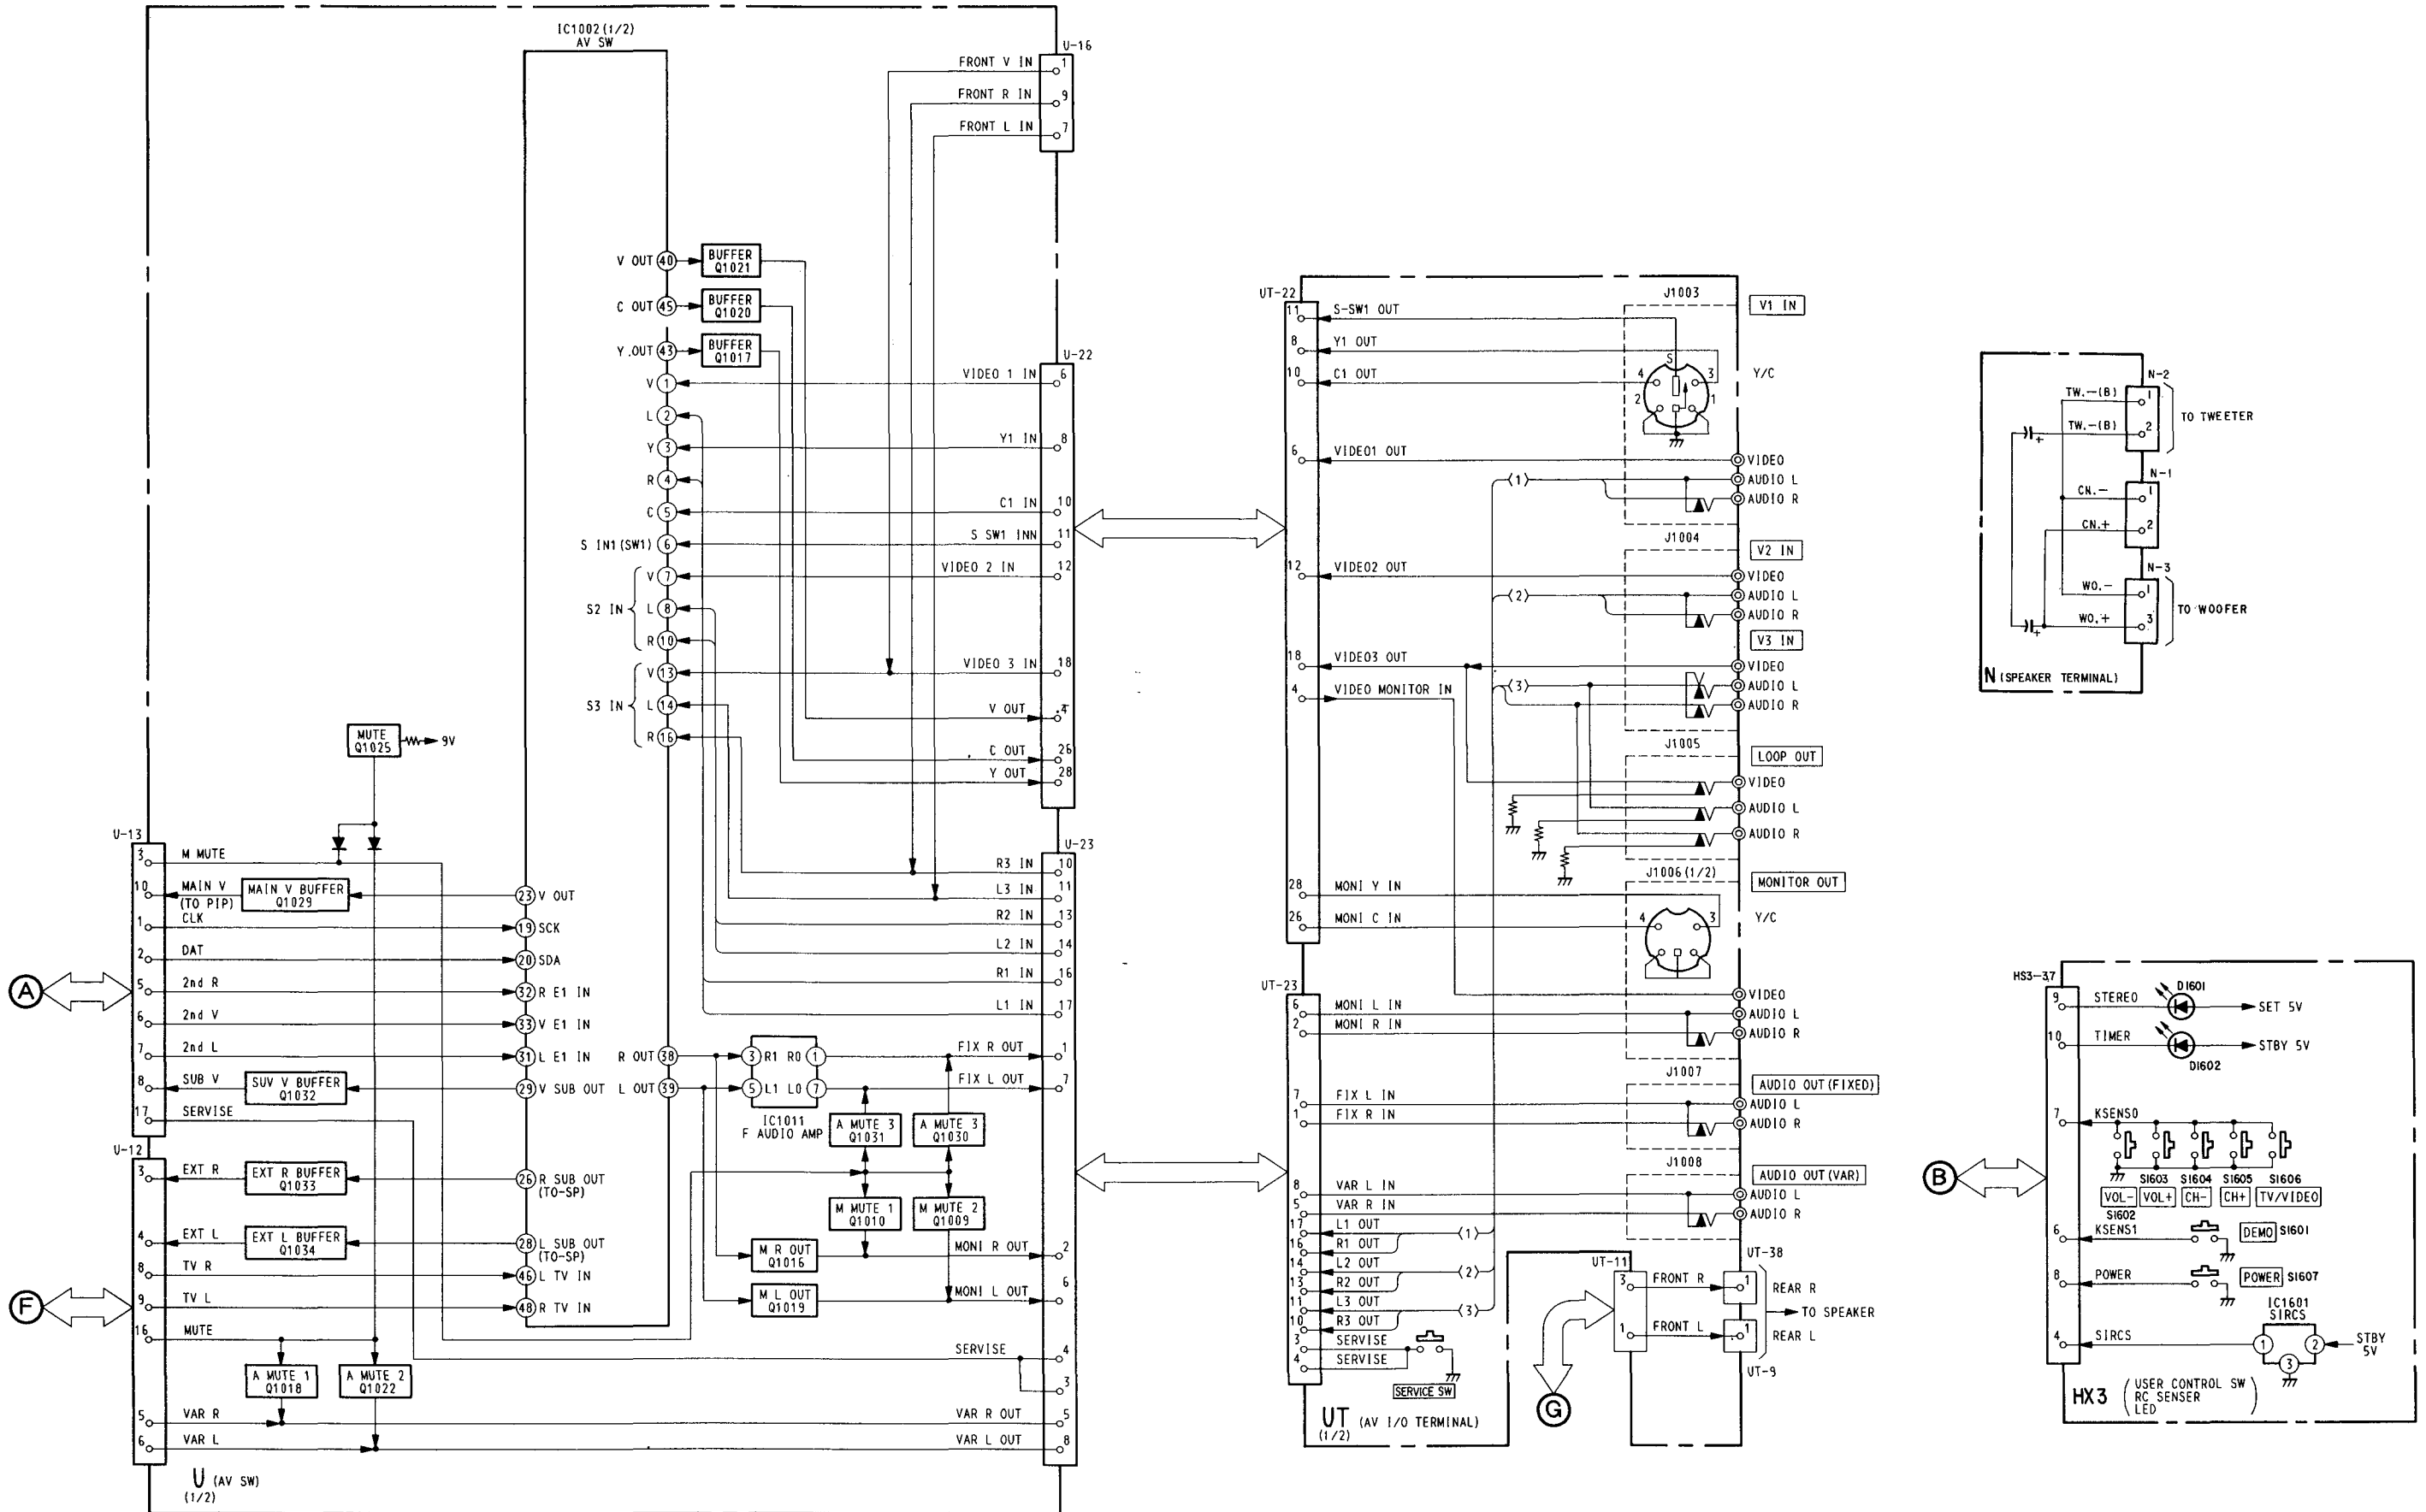


BLOCK DIAGRAM (2)

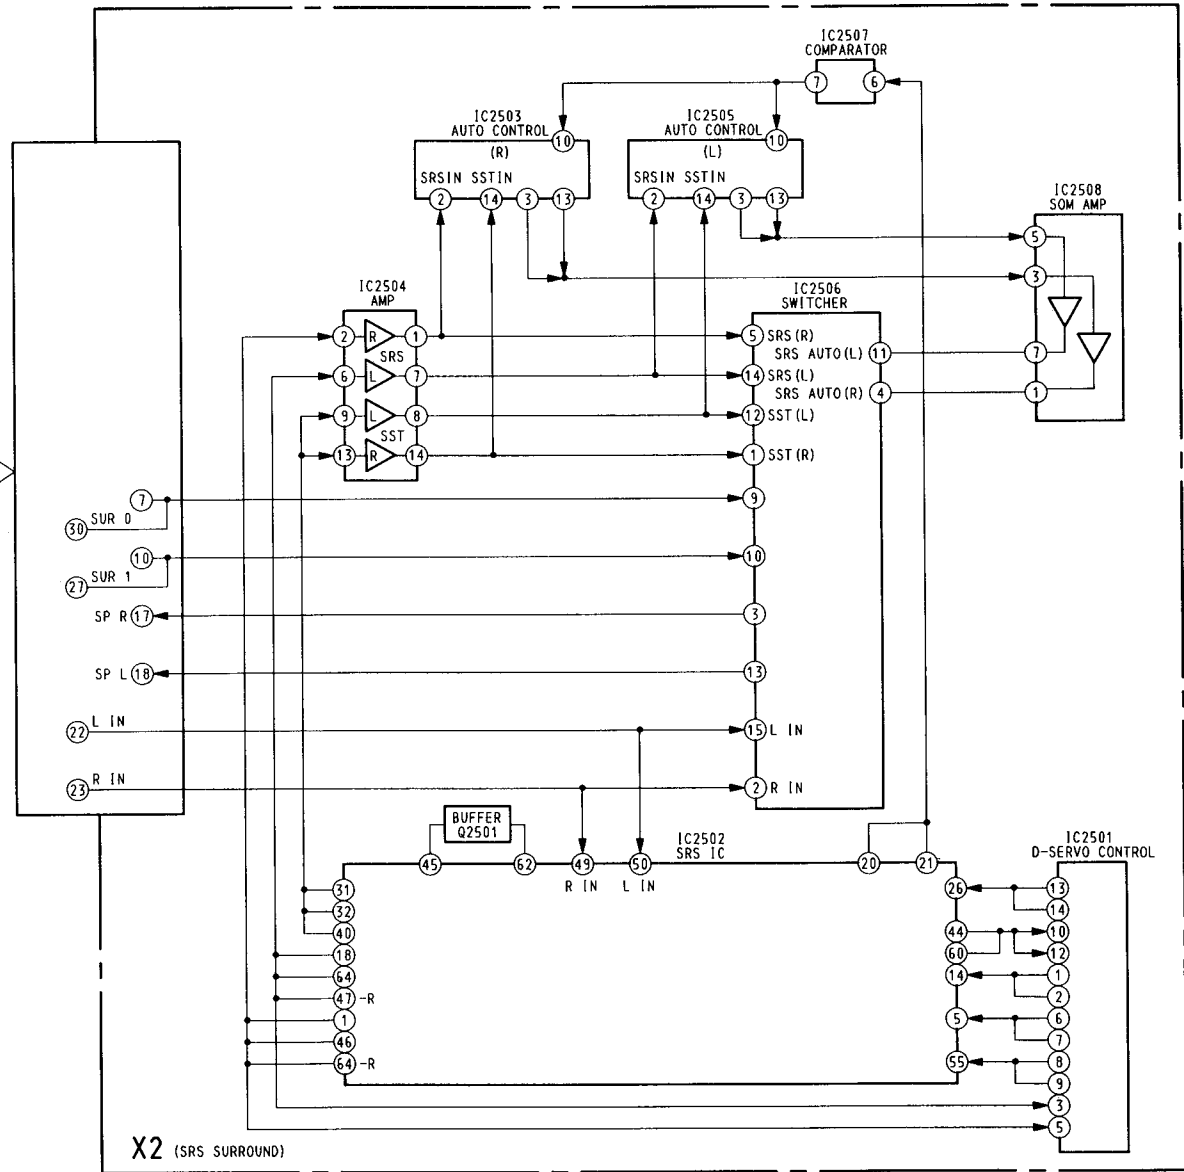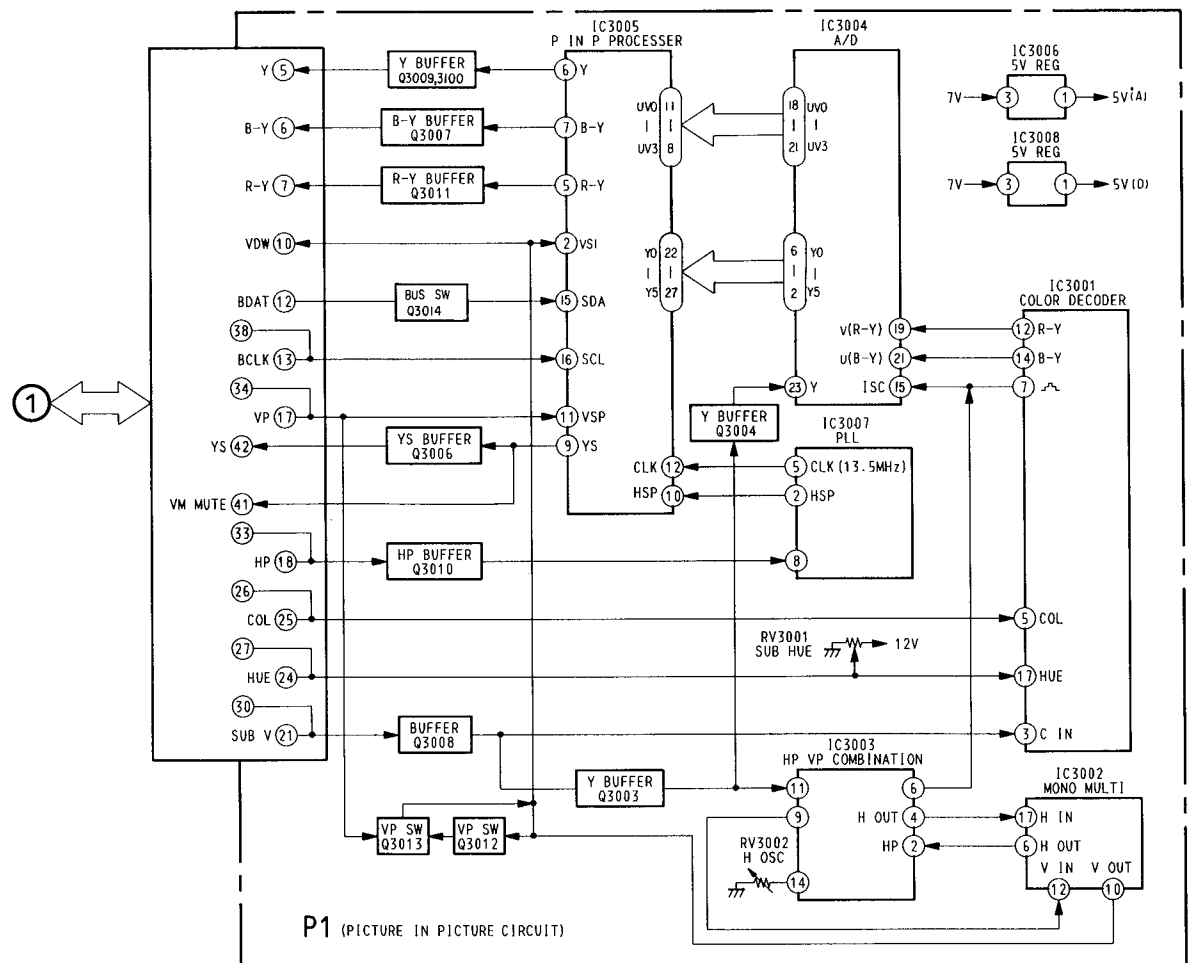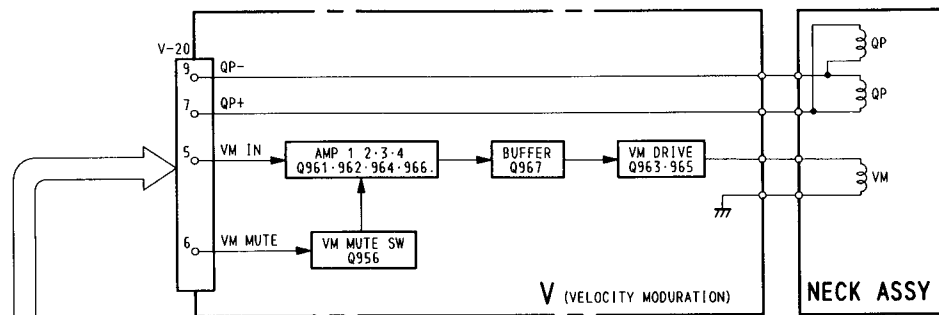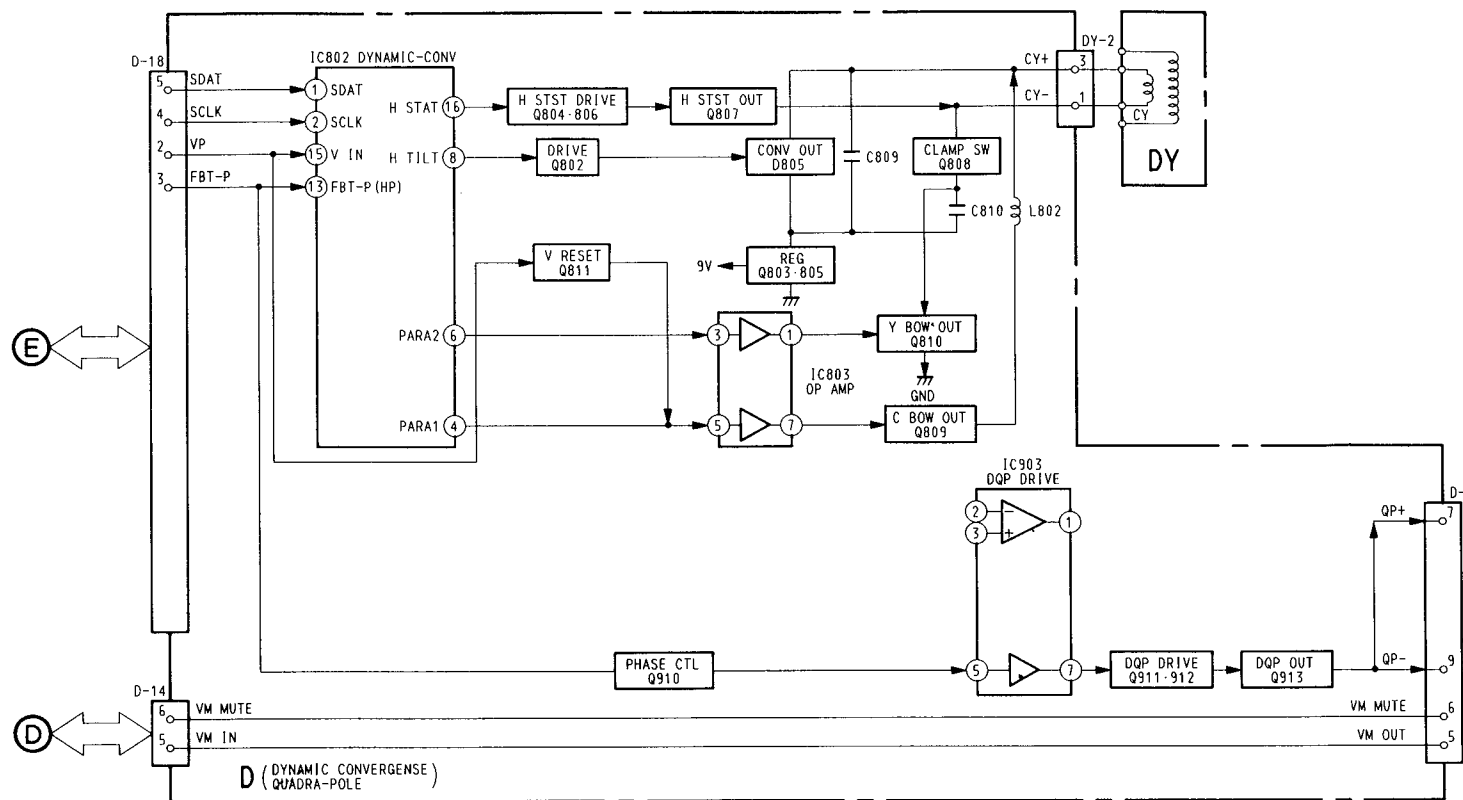


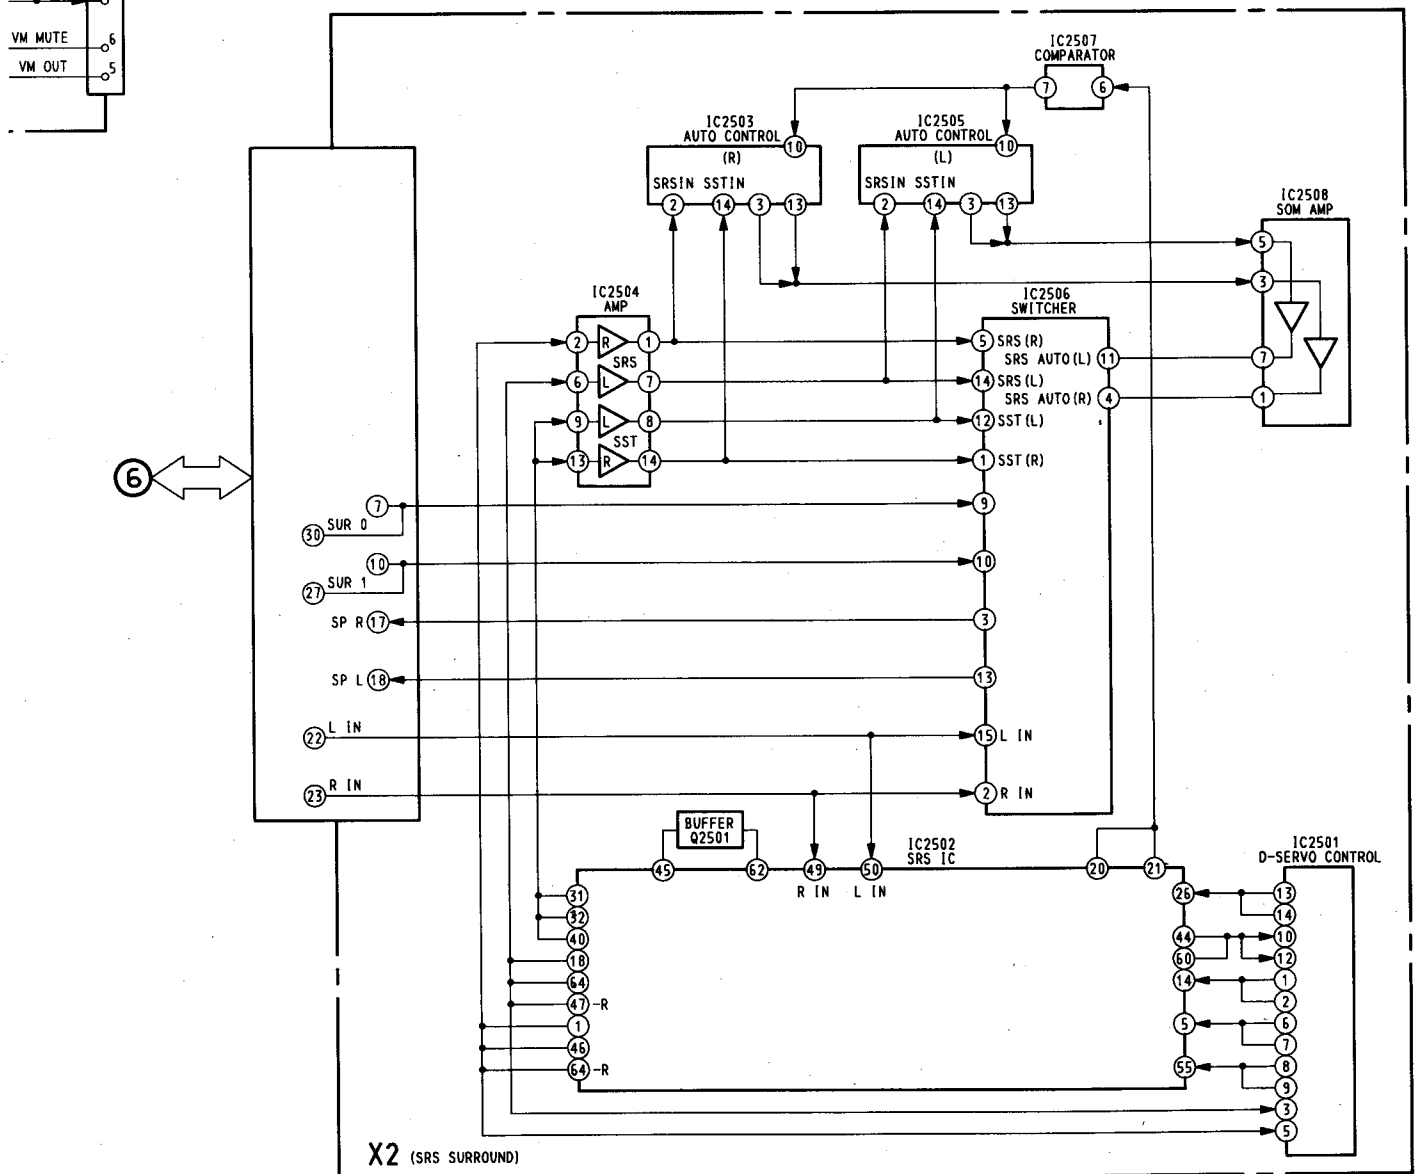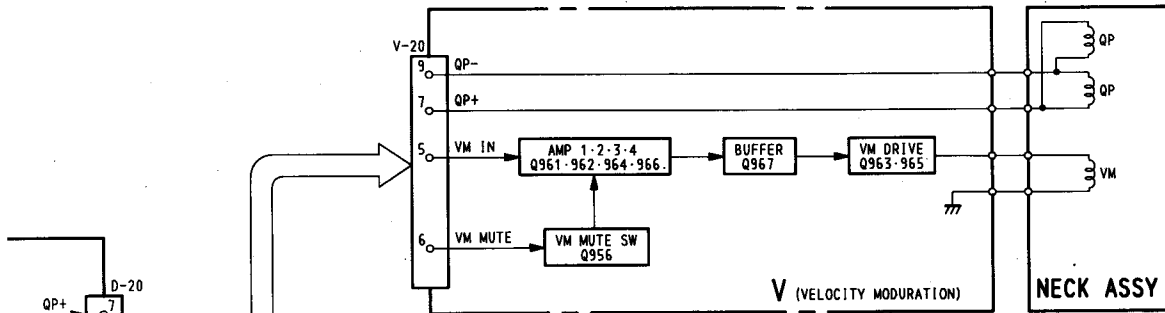

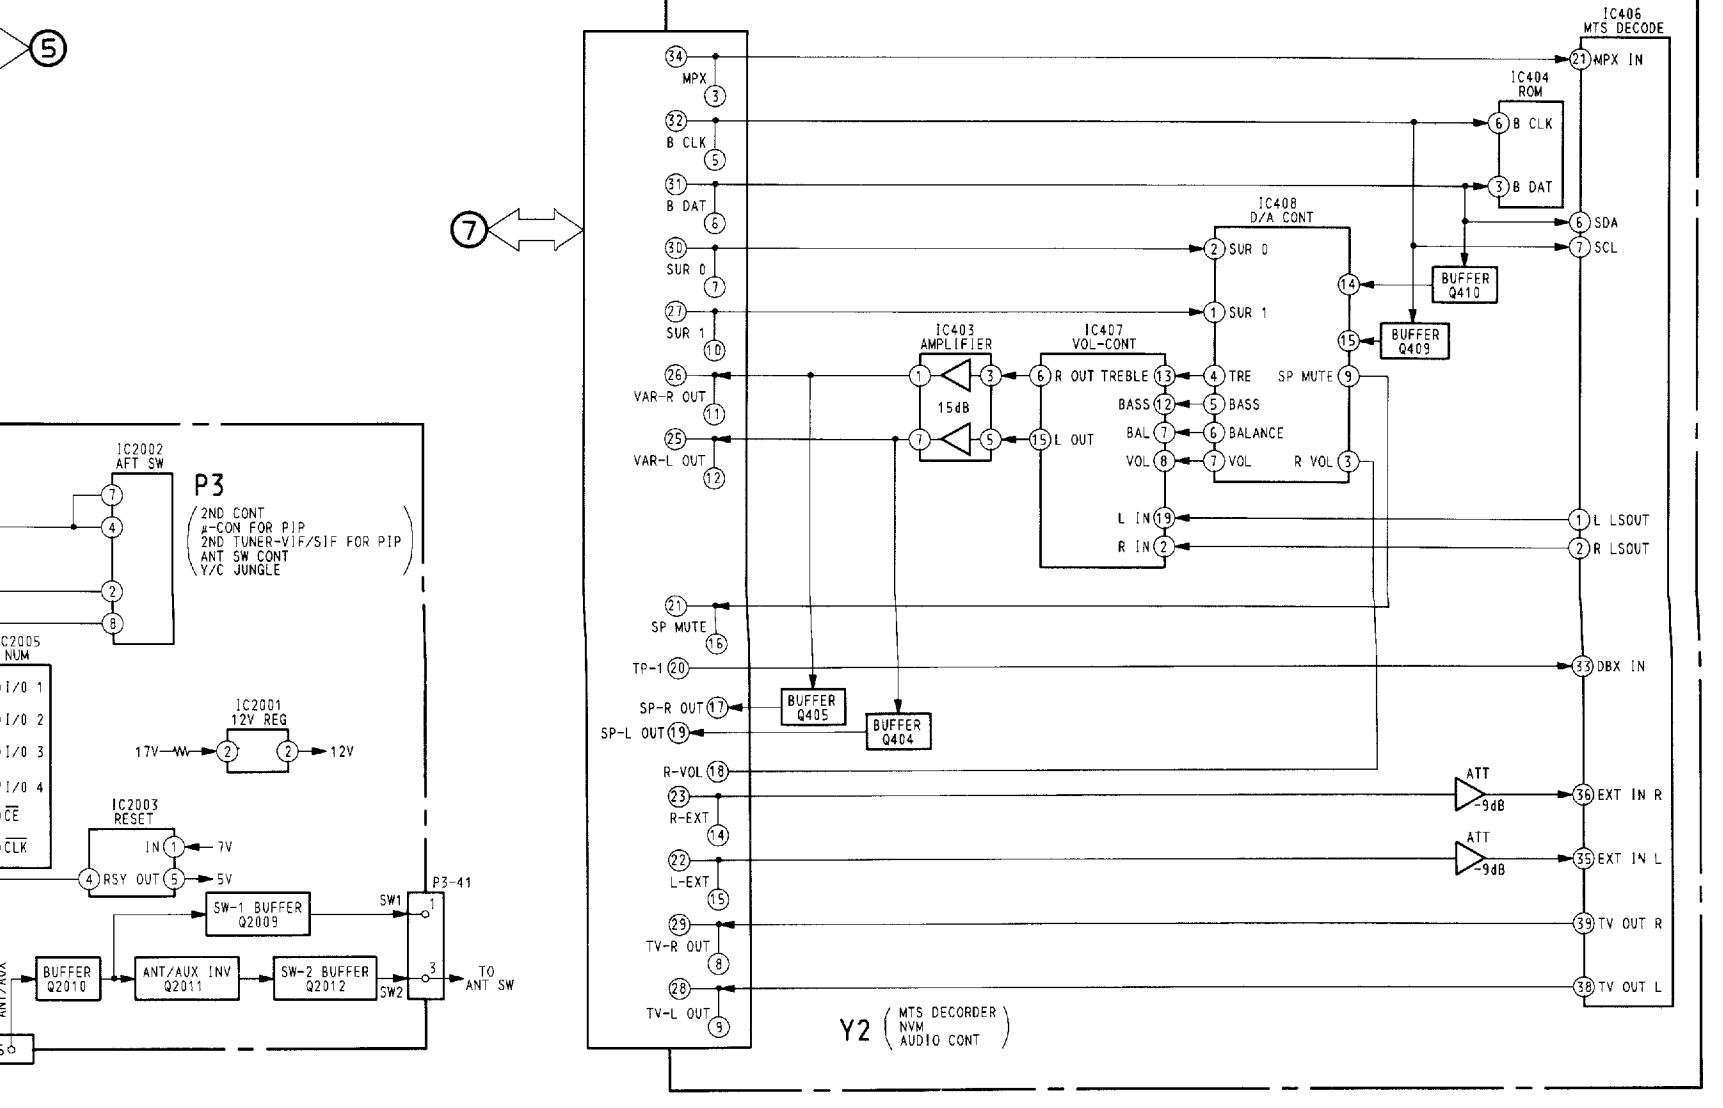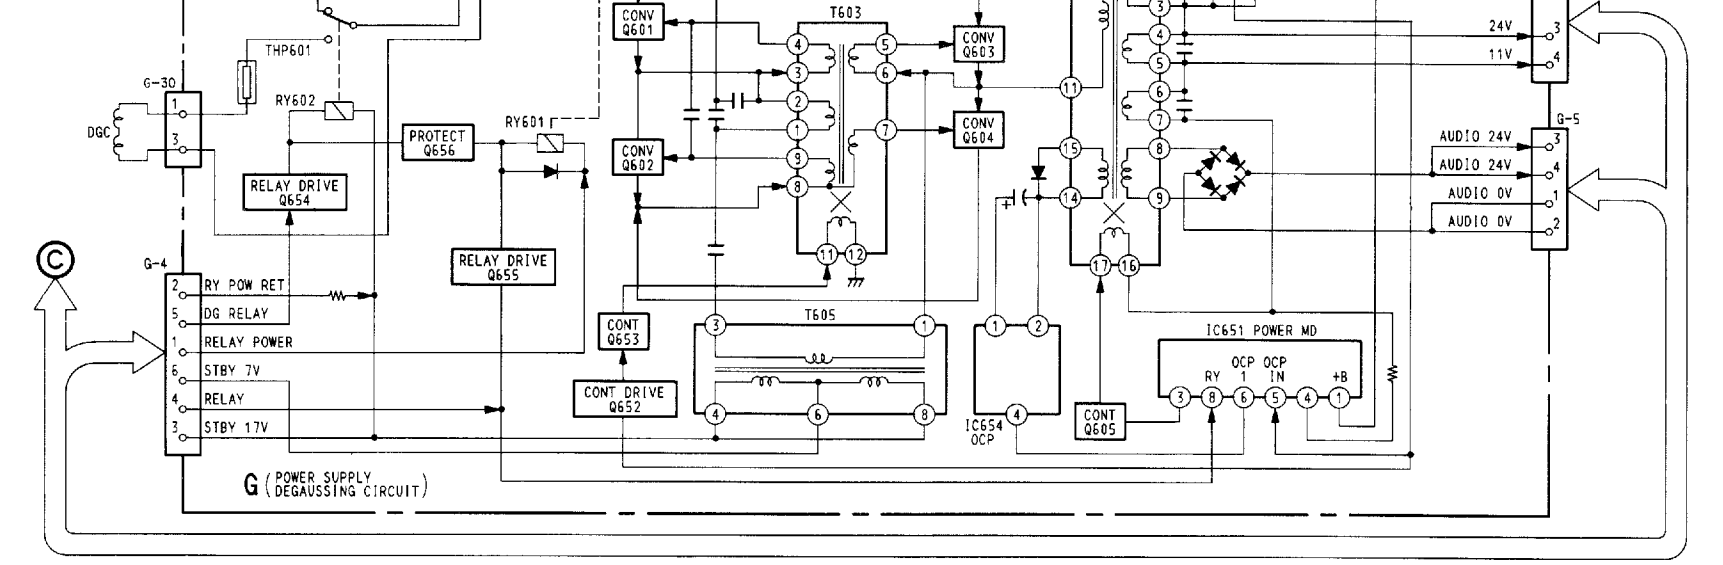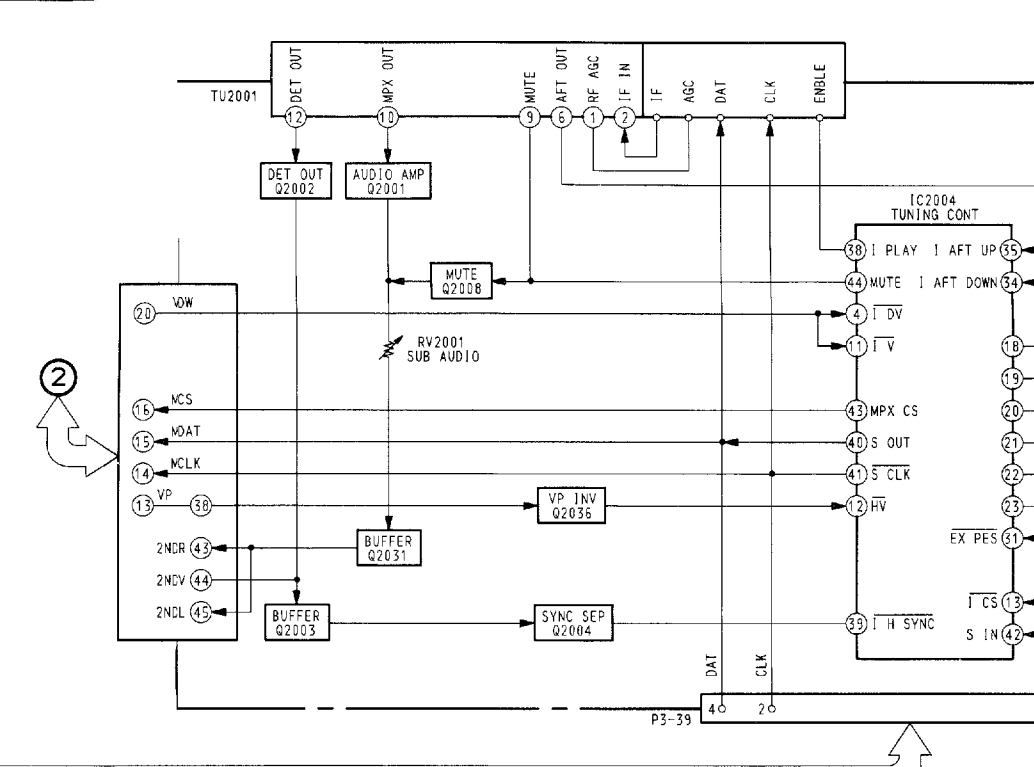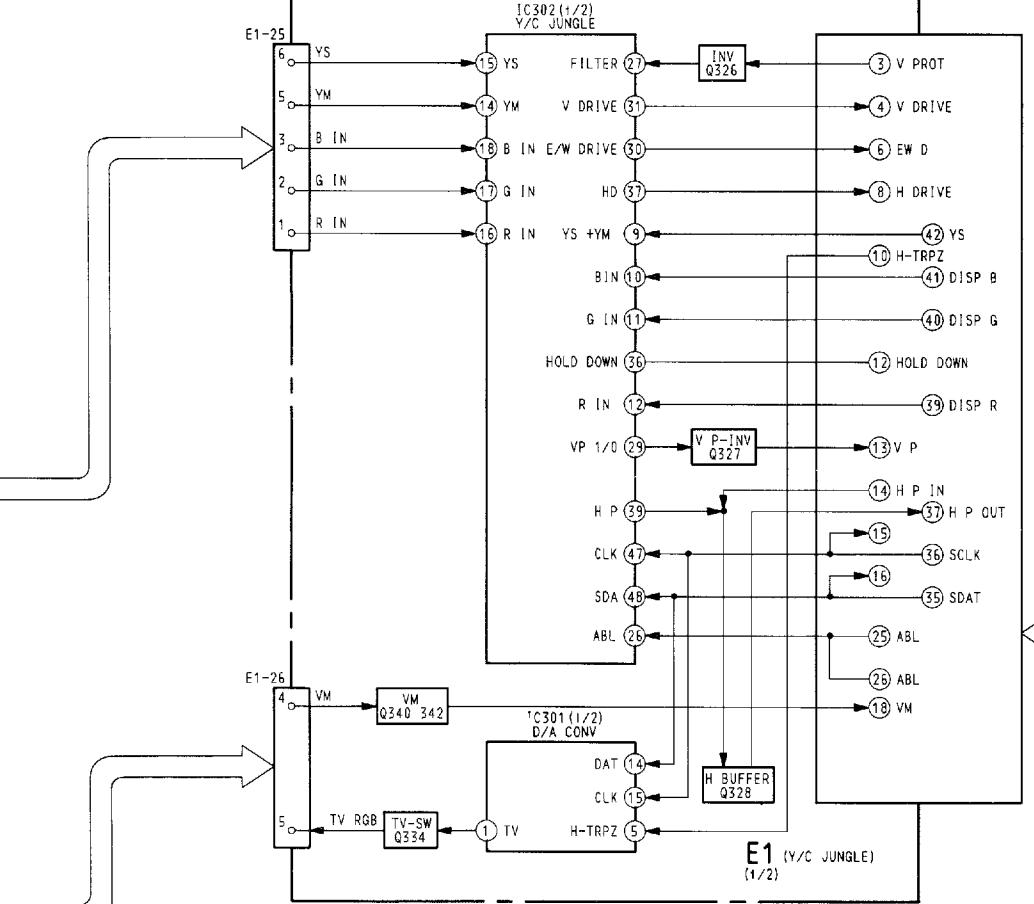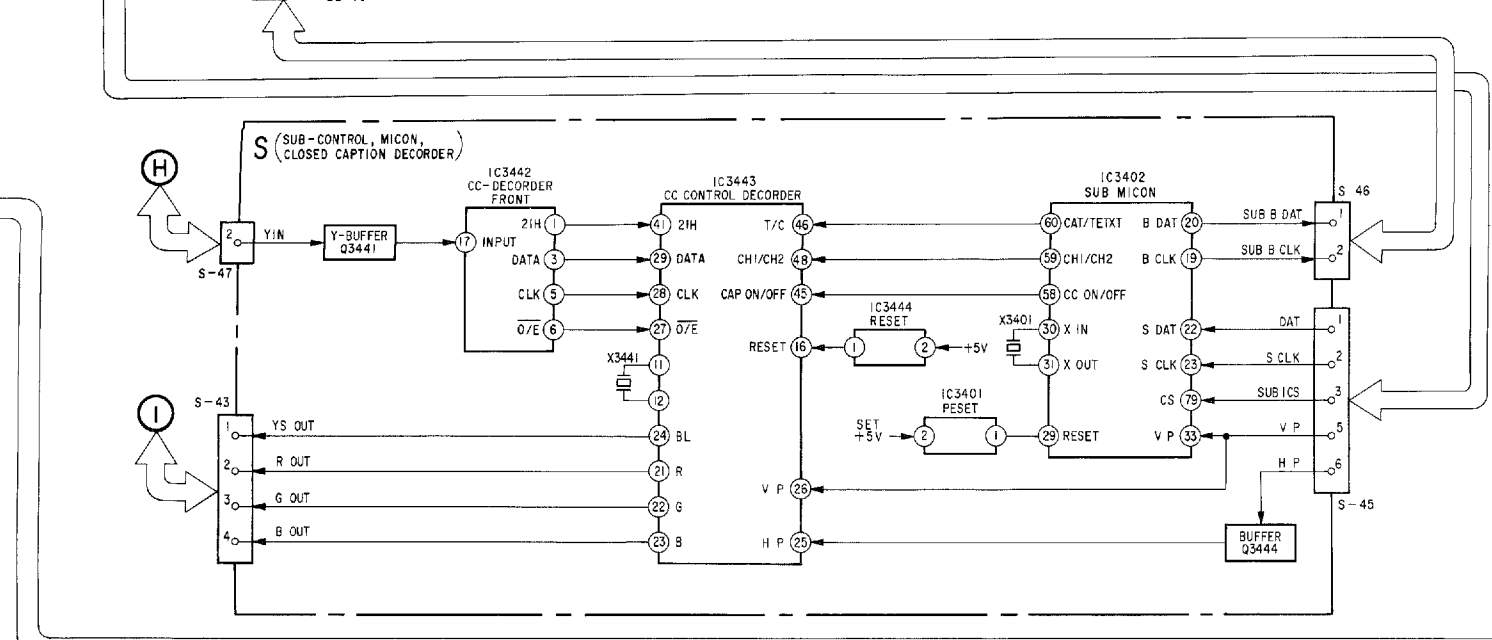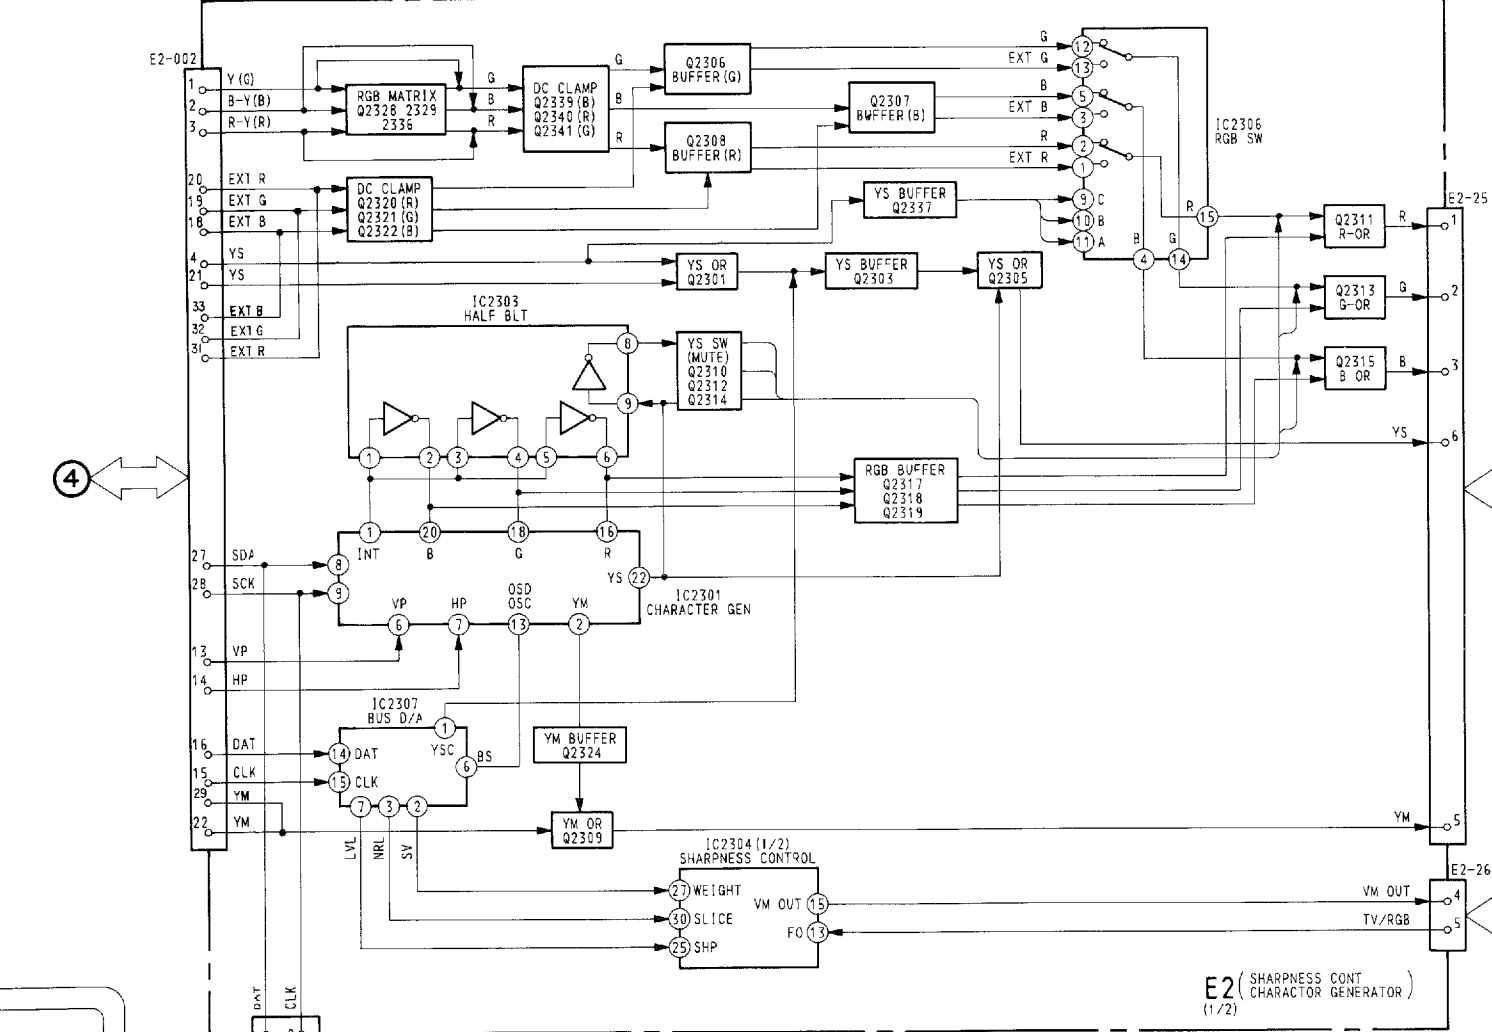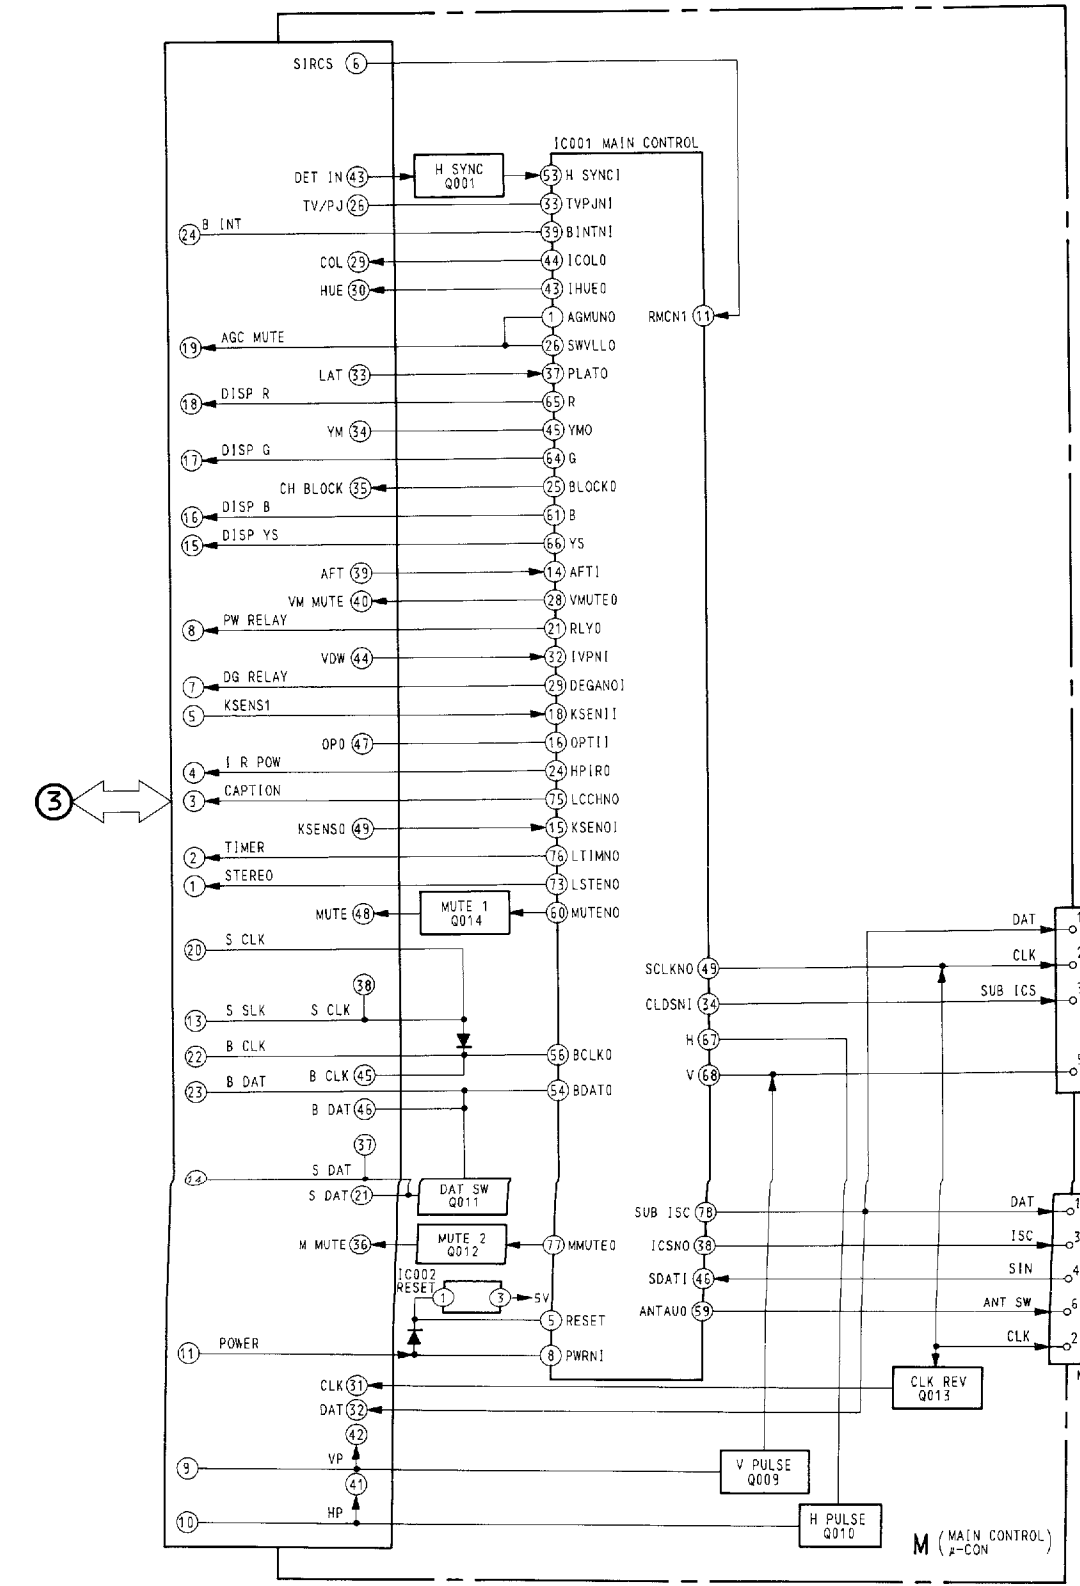

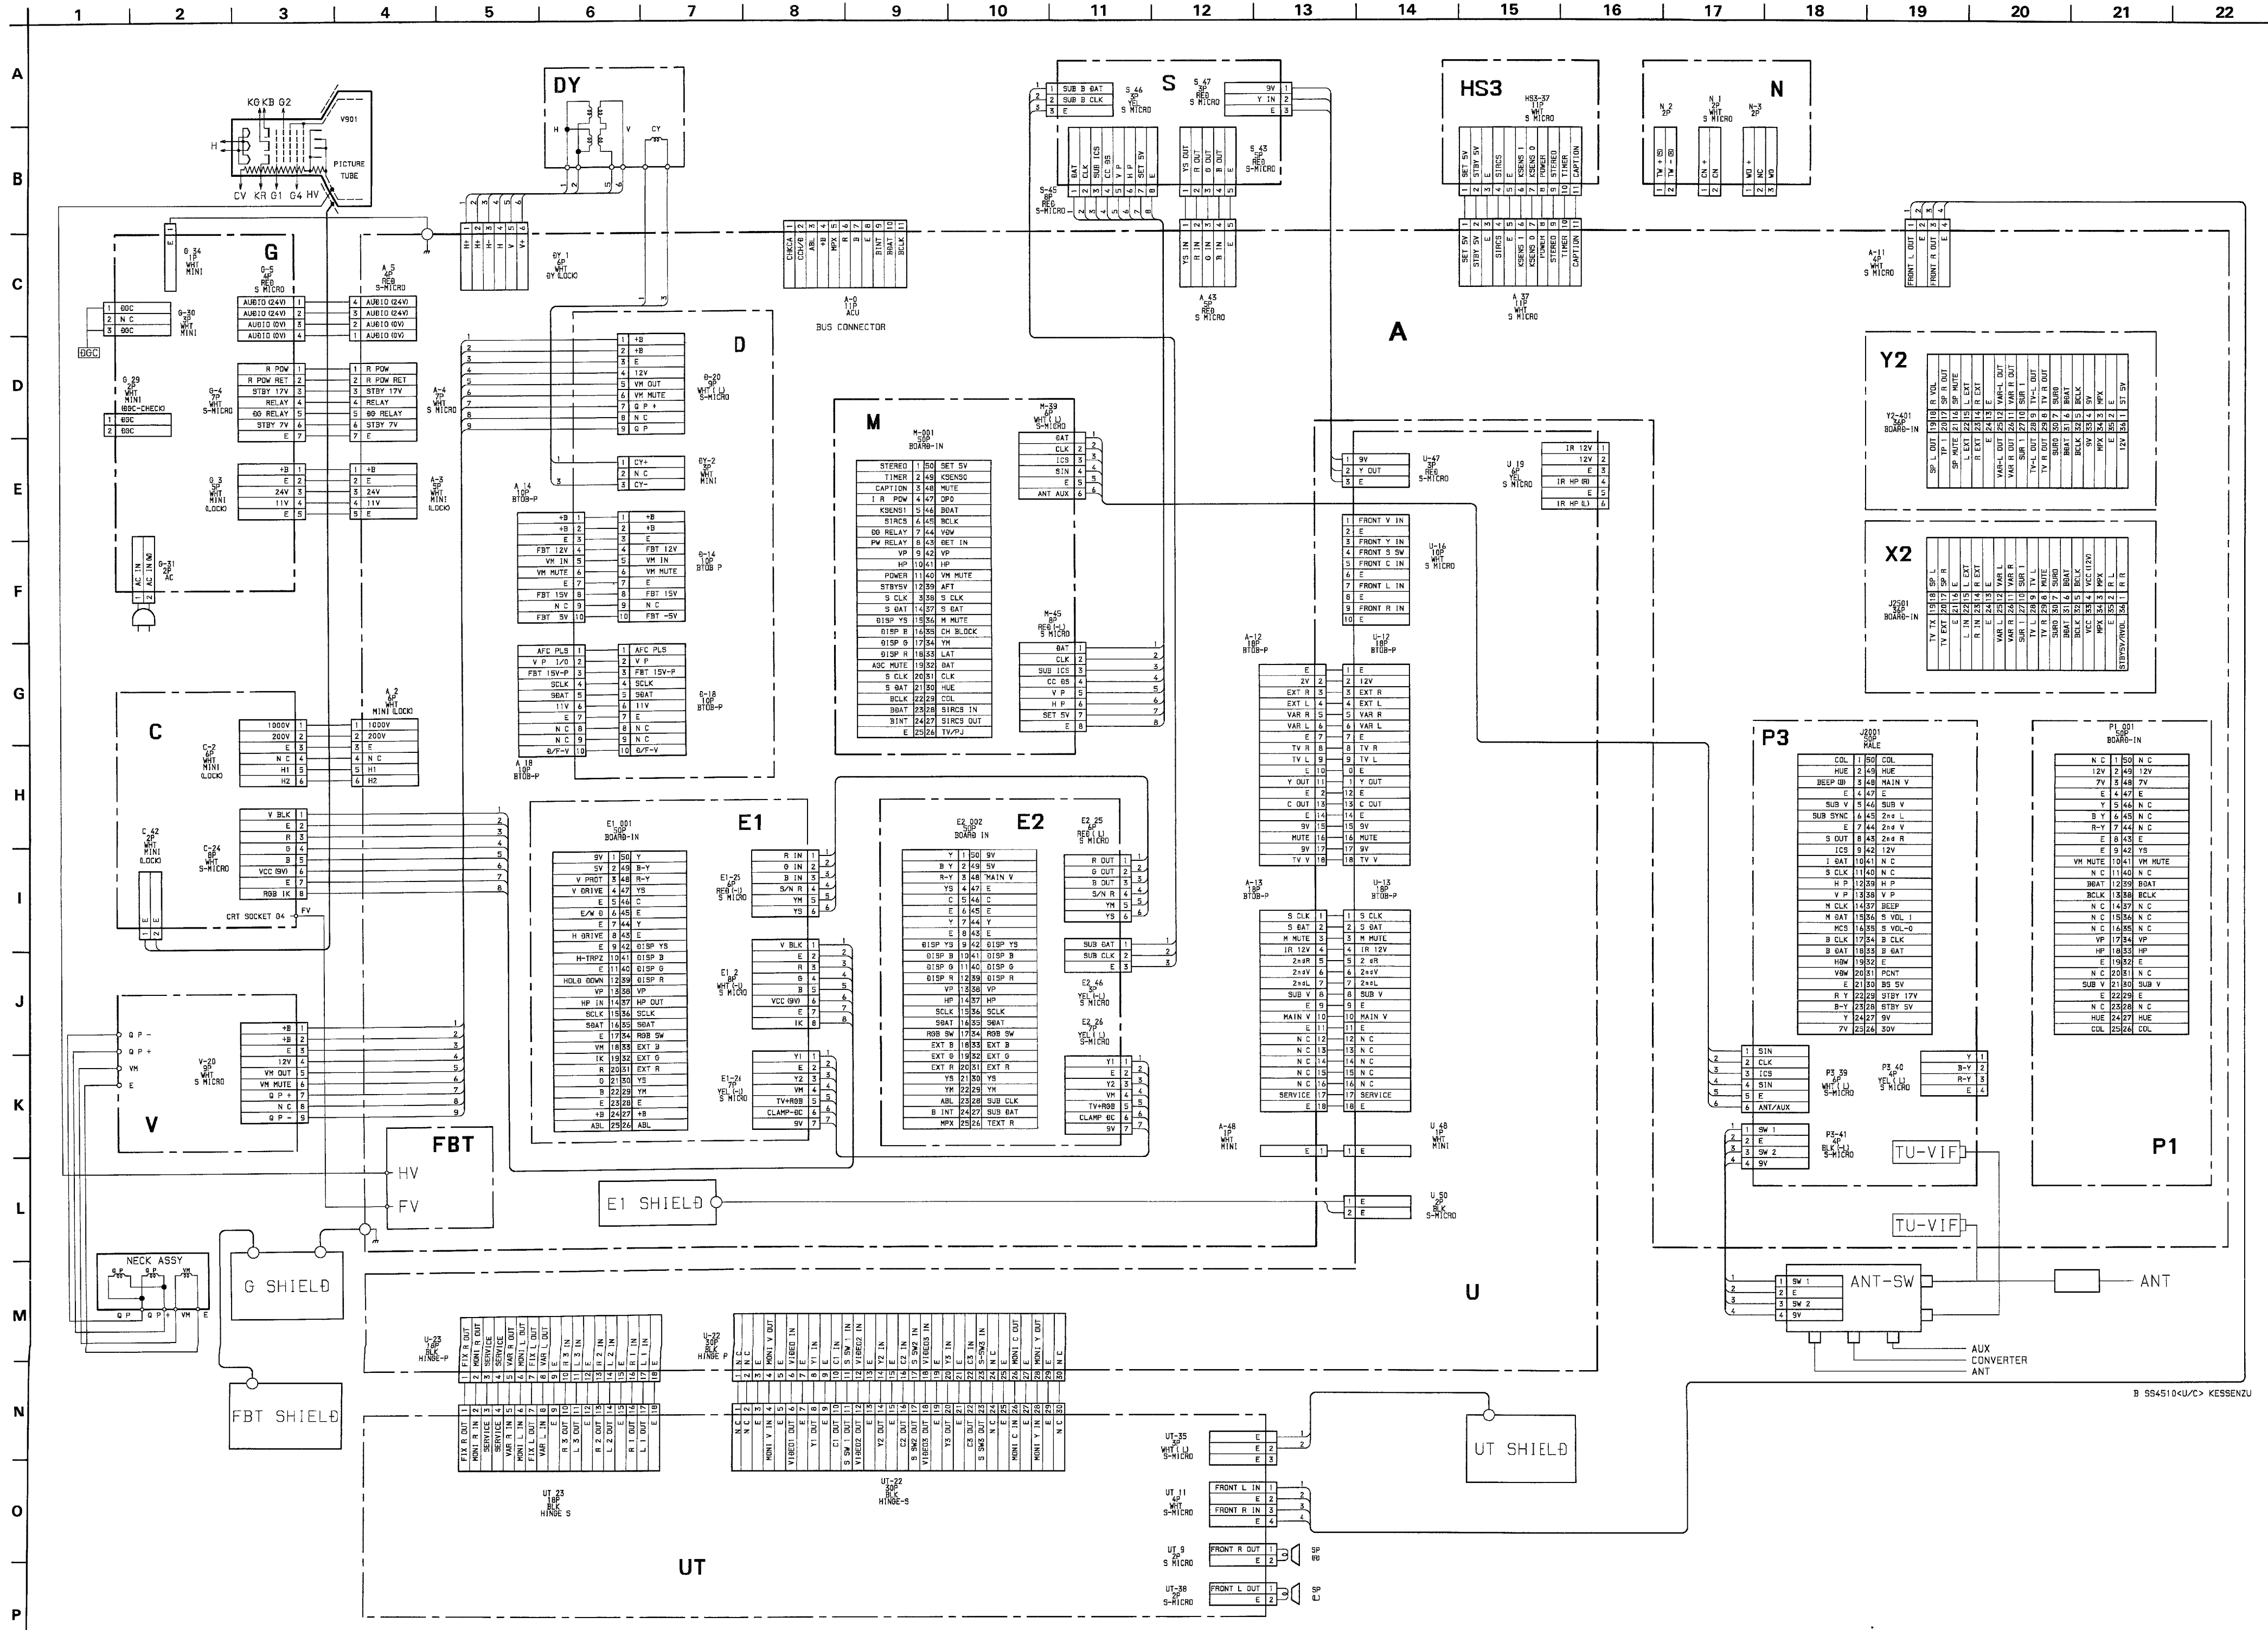

6-3.CIRCUIT BOARDS LOCATION

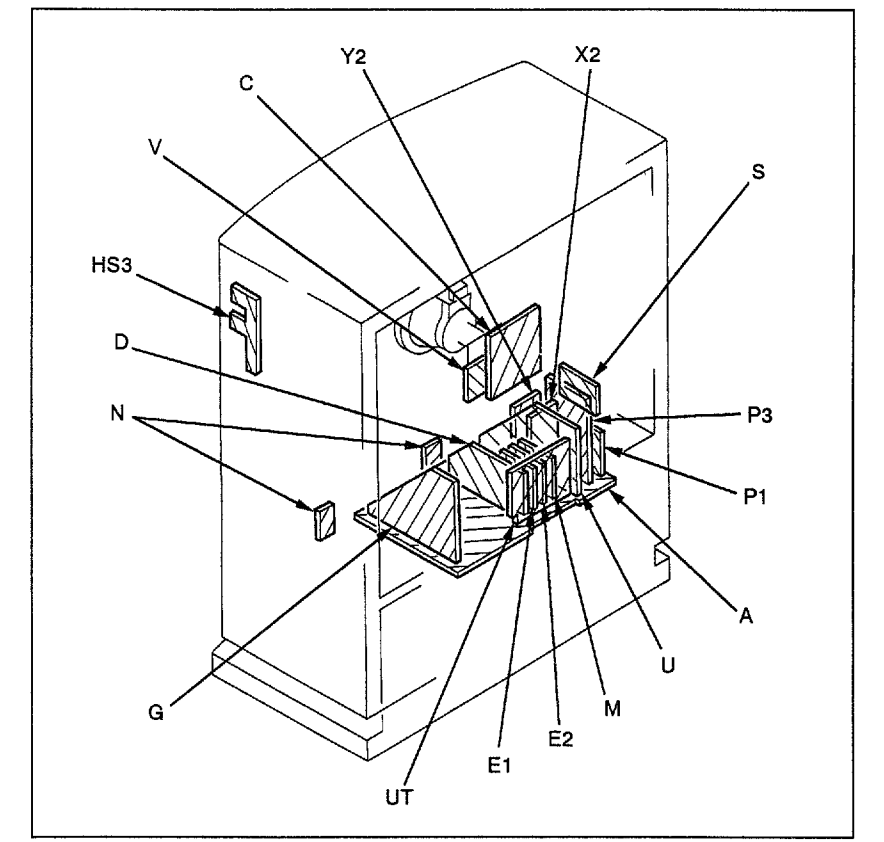

6-4.SCHEMATIC DIAGRAMS AND PRINTED WIRING BOARDS

Note:

- All capacitors are in μF unless otherwise noted
- Readings are taken with a color-bar signal input
- Readings are taken with a 10 M Ω digital multimeter
- Voltage are dc with respect to ground unless otherwise noted
- All electrolytics are in 50V unless otherwise specified
- All resistors are in ohms
- $K\Omega = 1000\Omega$, $M\Omega = 1000K\Omega$
- Indication of resistance, which does not have one for rating electrical power, is as follows:
 - B+ bus
 - B-bus
 - signal path

Pitch 5 mm
Rating electrical power 1/4W

Reference Information

RESISTOR	RN	METAL FILM
	RC	SOLID
	FPRD	NONFLAMMABLE CARBON
	FUSE	NONFLAMMABLE FUSIBLE
	RW	NONFLAMMABLE WIREWOUND
	RS	NONFLAMMABLE METAL OXIDE
	RB	NONFLAMMABLE CEMENT
	*	ADJUSTMENT RESISTOR
COIL	LF-8L	MICRO INDUCTOR
CAPACITOR	TA	TANTALUM
	PS	STYROL
	PP	POLYPROPYLENE
	PT	MYLAR
	MPS	METALIZED POLYESTER
	MPP	METALIZED POLYPROPYLENE
	ALB	BIPOLAR
	ALT	HIGH TEMPERATURE
	ALR	HIGH RIPPLE


Note The symbol display is on the component side

The components identified by shading and mark Δ are critical for safety. Replace only with part number specified.

The symbol indicate fast operating fuse. Replace only with fuse of same rating as marked.

Part replaced (▣)	Adjustment (⊠)
IC502, Q509, Q510, R565, R567, R568, R569 A BOARD	R565 (HOLD-DOWN)
IC502, Q509, Q510, D502, C531, R554, R566, R567, R568, R569, R1506, T501 A BOARD	R566 (HOLD-DOWN)
IC651, R651 G BOARD	

- U BOARD -

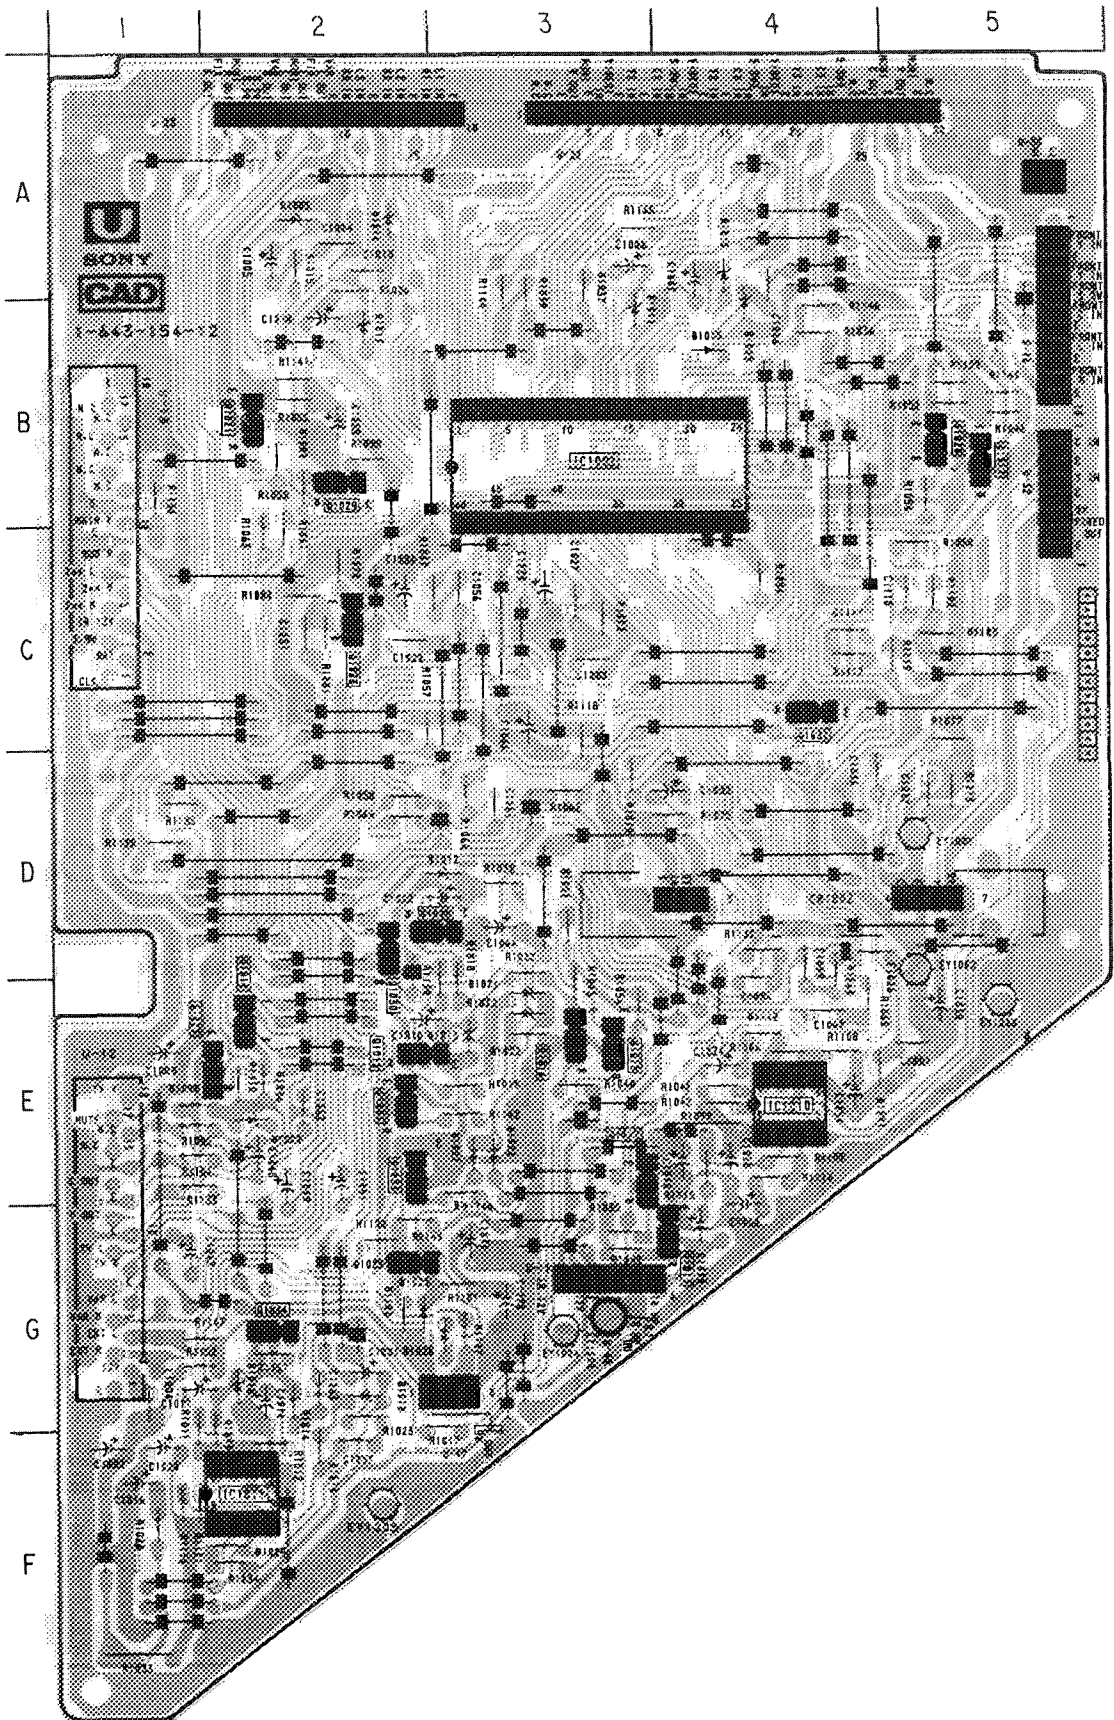

IC	
IC1002	B-3
IC1010	E-4
IC1011	F-2


TRANSISTOR	
Q1009	D-2
Q1010	E-2
Q1012	G-3
Q1013	G-4
Q1016	E-3
Q1017	B-5
Q1018	E-2
Q1019	E-3
Q1020	B-5
Q1021	B-2
Q1022	E-1
Q1023	C-2
Q1025	G-2
Q1029	B-2
Q1030	D-2
Q1031	E-2
Q1032	C-4
Q1033	E-2
Q1034	G-2

DIODE	
D1005	A-2
D1009	B-4
D1010	A-4
D1011	B-3
D1012	D-3
D1013	E-3
D1014	A-2
D1015	B-4
D1017	B-2
D1018	G-2
D1019	G-2
D1020	E-2
D1021	E-3
D1022	E-3
D1023	E-3
D1025	G-2
D1026	G-2
D1027	E-3


A TUNER - VIF/SIF, HIGH VOLTAGE CIRCUIT,
H/V DEFLECTION, X-RAYS. PROT. H. PIN
CORR. AUDIO POWER AMP.


- A BOARD -

IC		D207	A-5
IC201	D-5	D208	E-2
IC202	D-1	D209	E-1
IC204	D-6	D213	A-6
IC205	D-1	D501	E-10
IC206	B-7	D502	G-11
IC501	A-10	D503	G-8
IC502	C-12	D504	A-11
IC503	C-11	D506	A-11
IC504	B-6	D508	C-11
IC1401	C-5	D509	A-8
IC1501	B-9	D510	F-7
TRANSISTOR		D511	D-11
Q201	C-4	D512	E-8
Q202	G-2	D513	E-8
Q501	D-10	D514	F-9
Q502	A-11	D515	F-11
Q503	G-7	D516	G-12
Q504	A-11	D517	F-7
Q505	B-11	D518	B-11
Q506	D-12	D521	B-11
Q507	C-10	D522	B-10
Q508	C-11	D524	B-11
Q509	B-12	D525	B-12
Q510	B-12	D527	B-12
Q511	C-11	D529	B-11
Q512	B-10	D1407	B-3
Q513	A-11	D1408	C-1
Q515	C-11	D1409	A-4
Q1401	B-4	D1410	B-5
Q1407	B-5	D1411	B-5
Q1408	B-4	D1412	C-1
Q1501	B-8	D1413	C-1
Q1502	A-9	Q1414	C-1
DIODE		D1503	B-10
D205	G-5	D4001	B-3
D206	E-1		

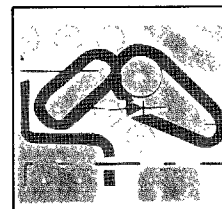


NOTE:
The circuit indicated as left contains high voltage of over 600 Vp-p. Care must be paid to prevent an electric shock in inspection or repairing.

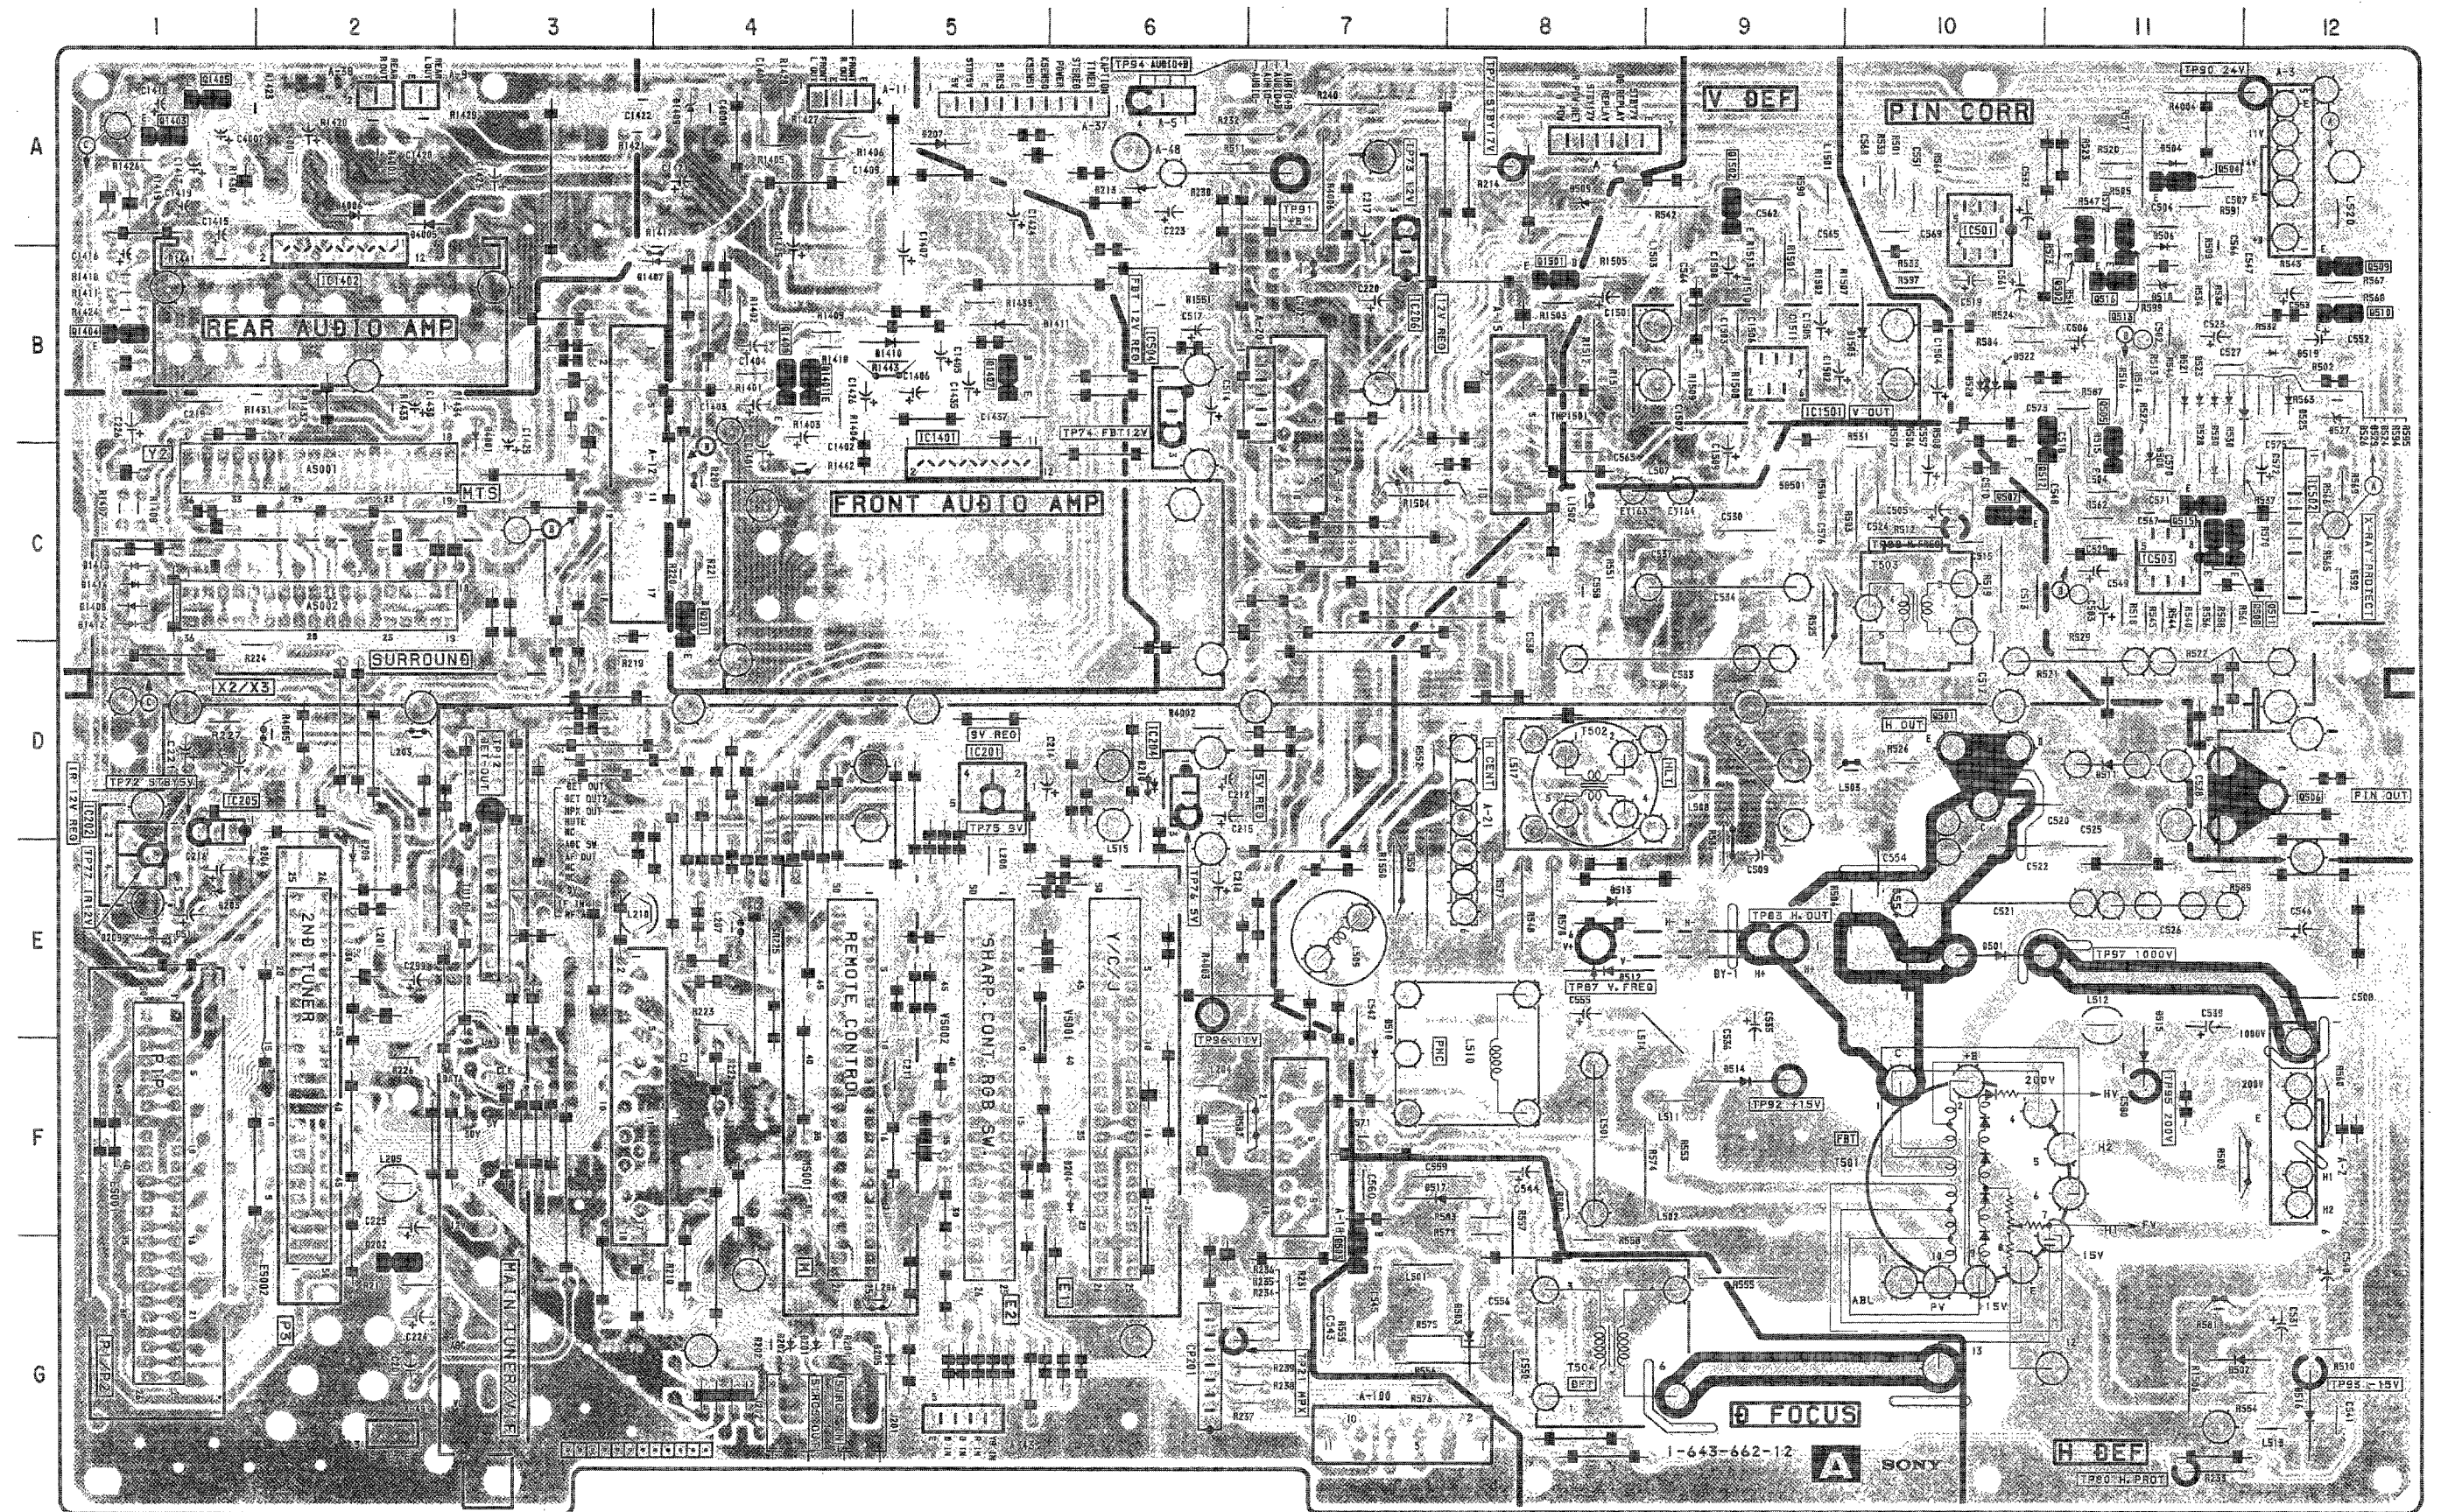





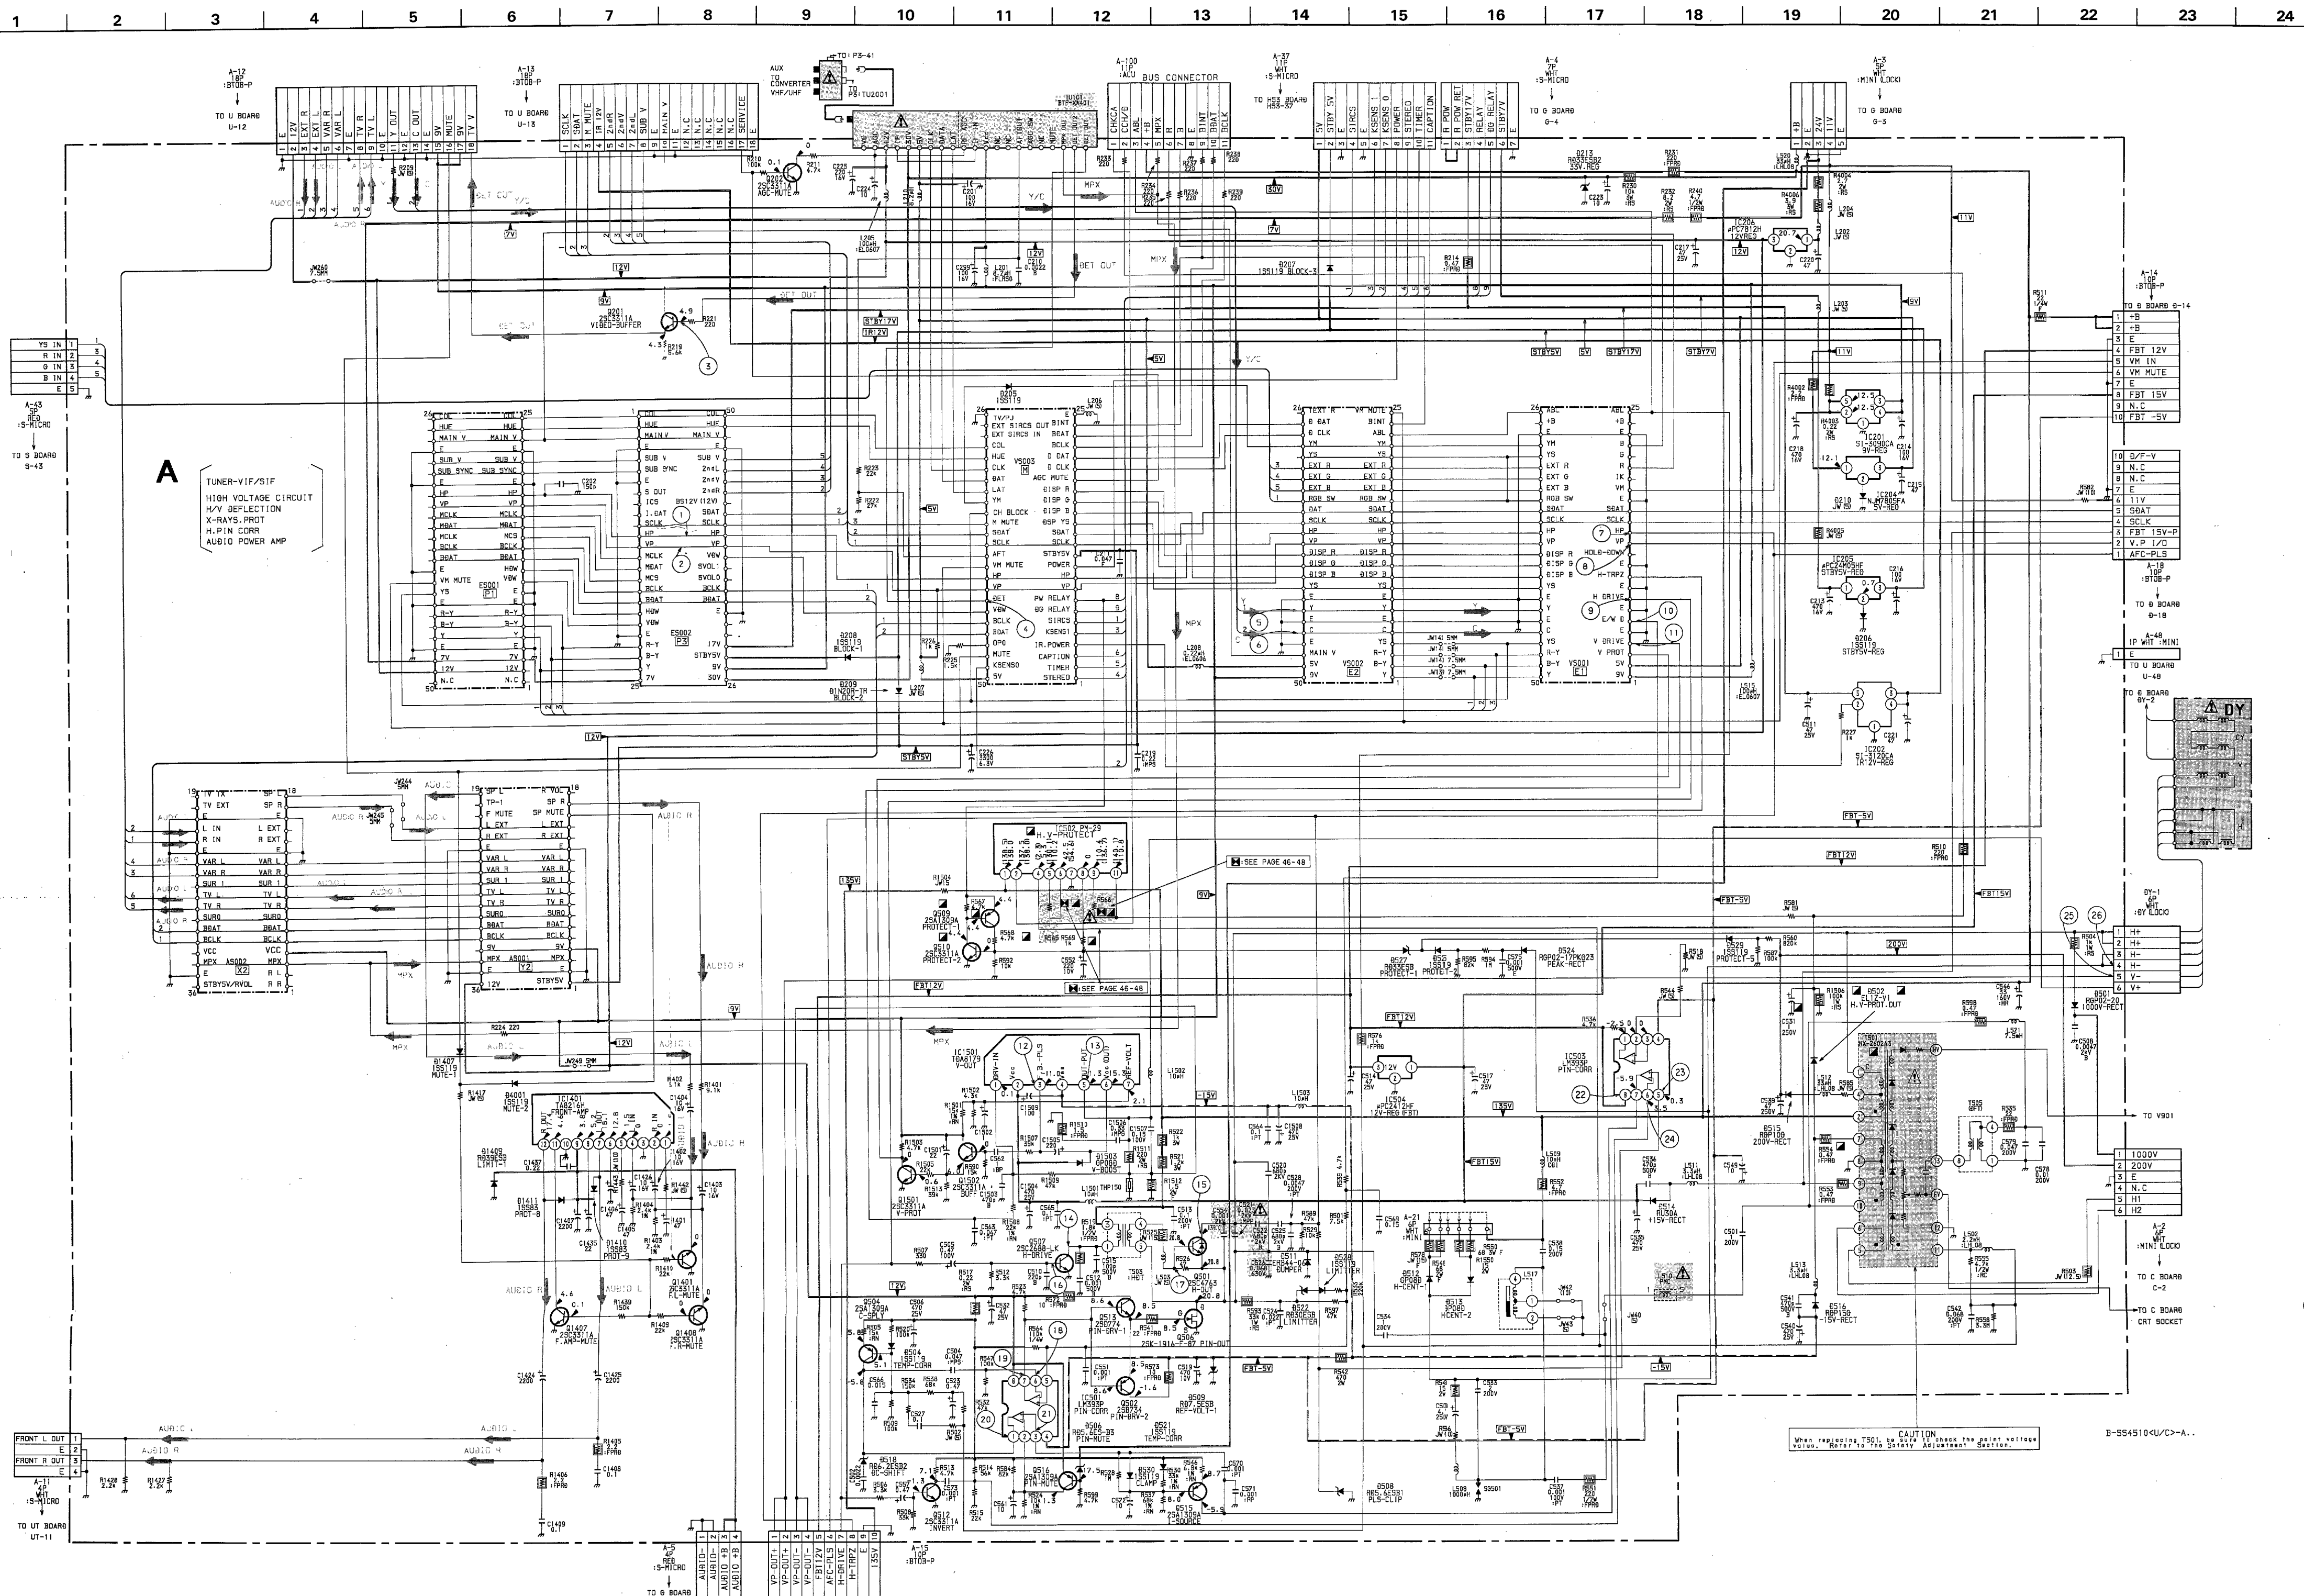


• A BOARD WAVEFORMS


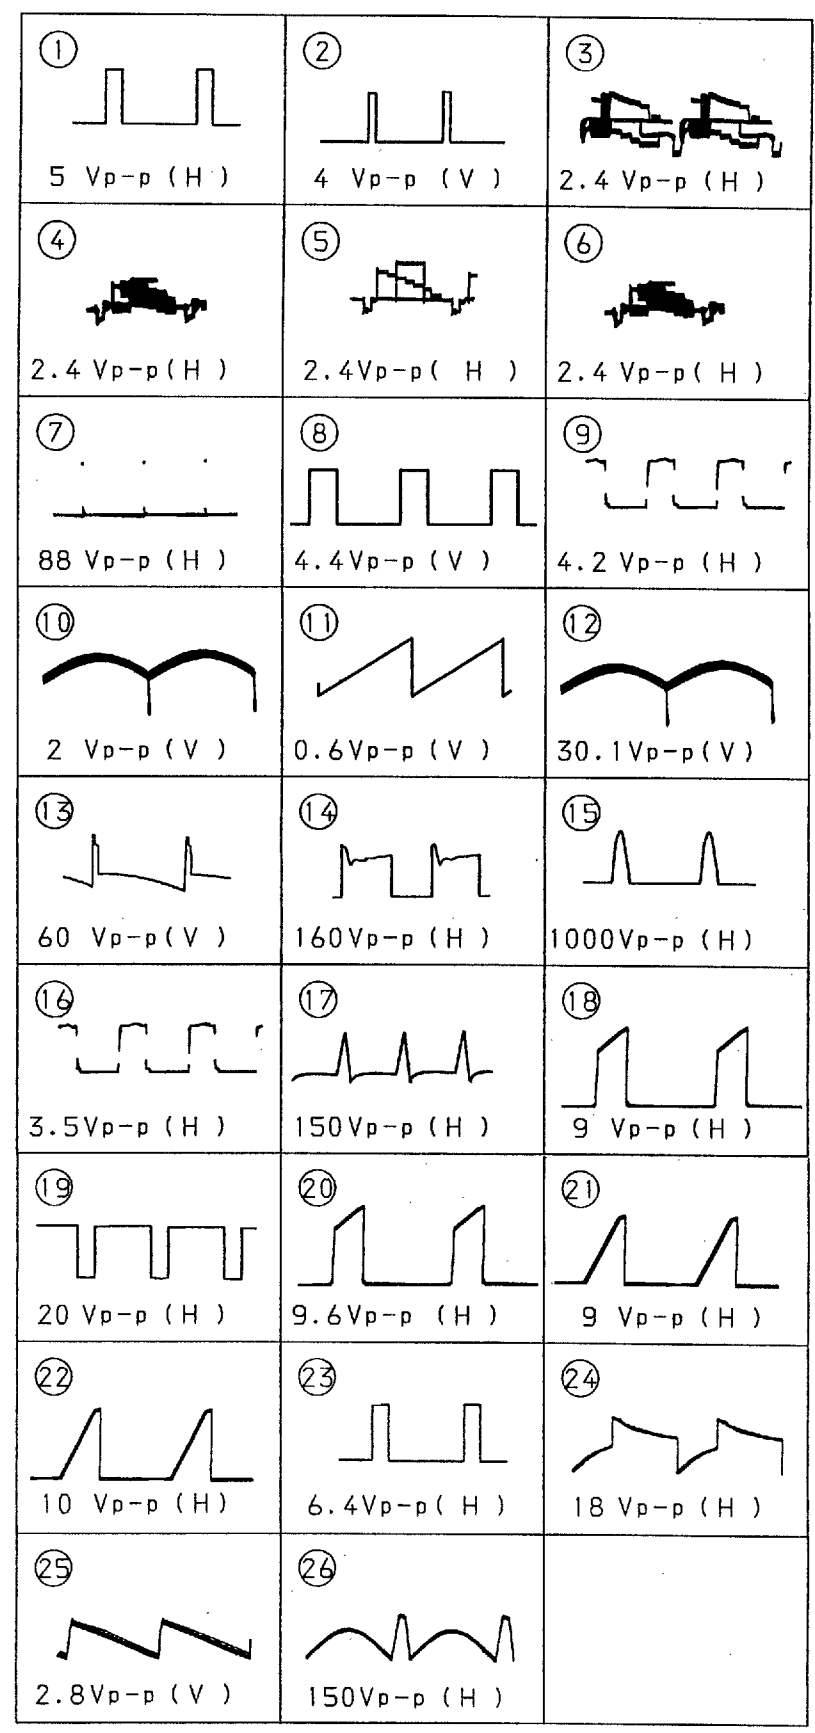


• A BOARD IC1501 TDA8179

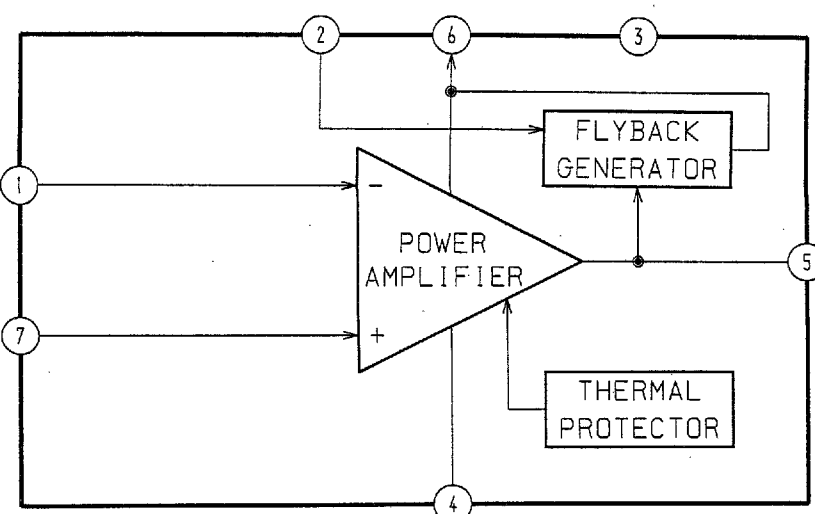

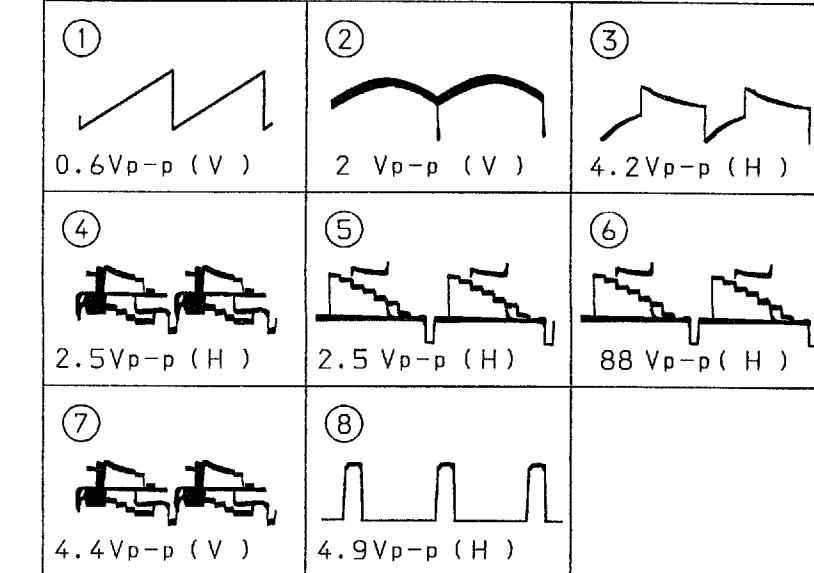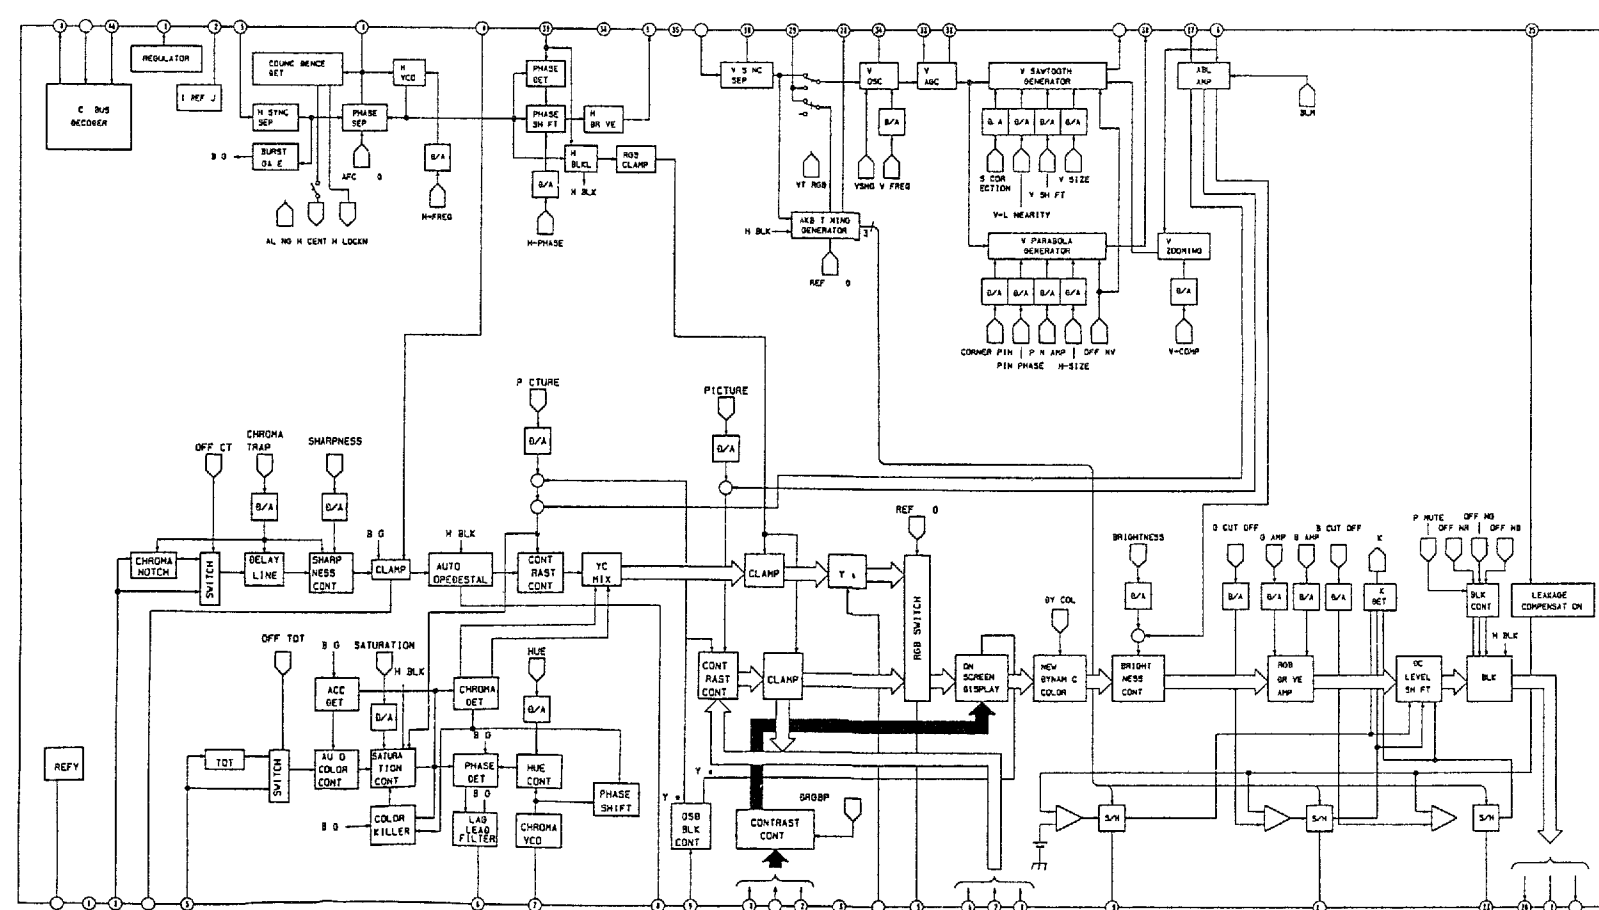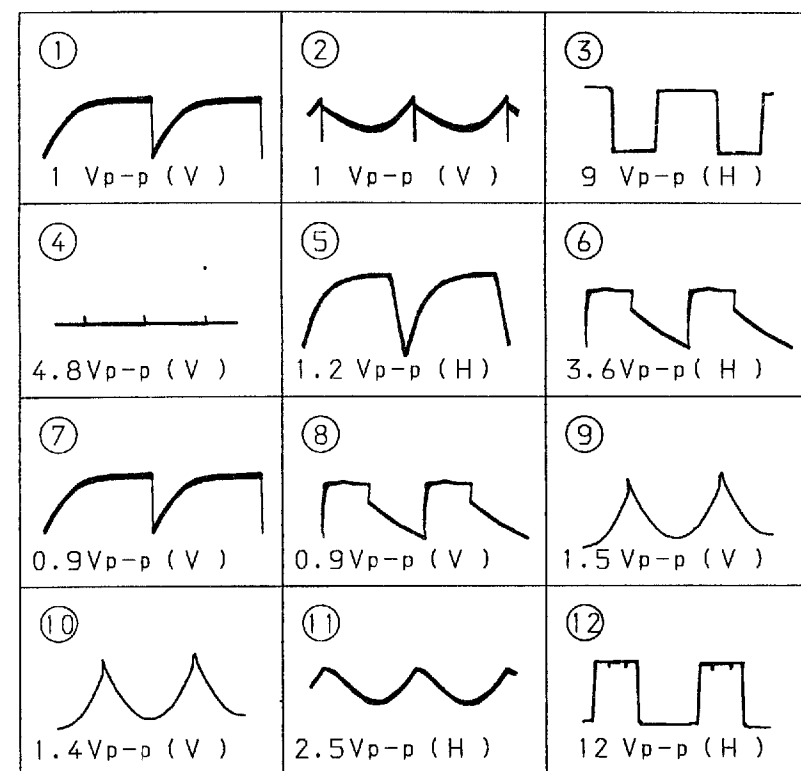
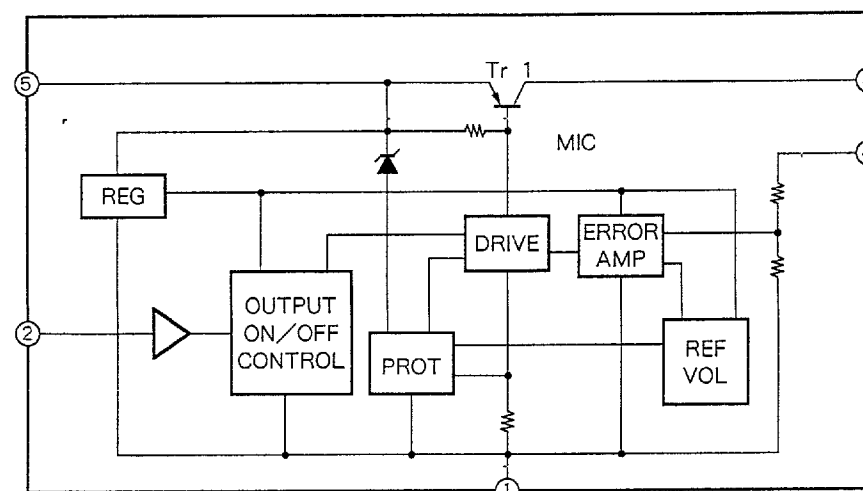


1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30

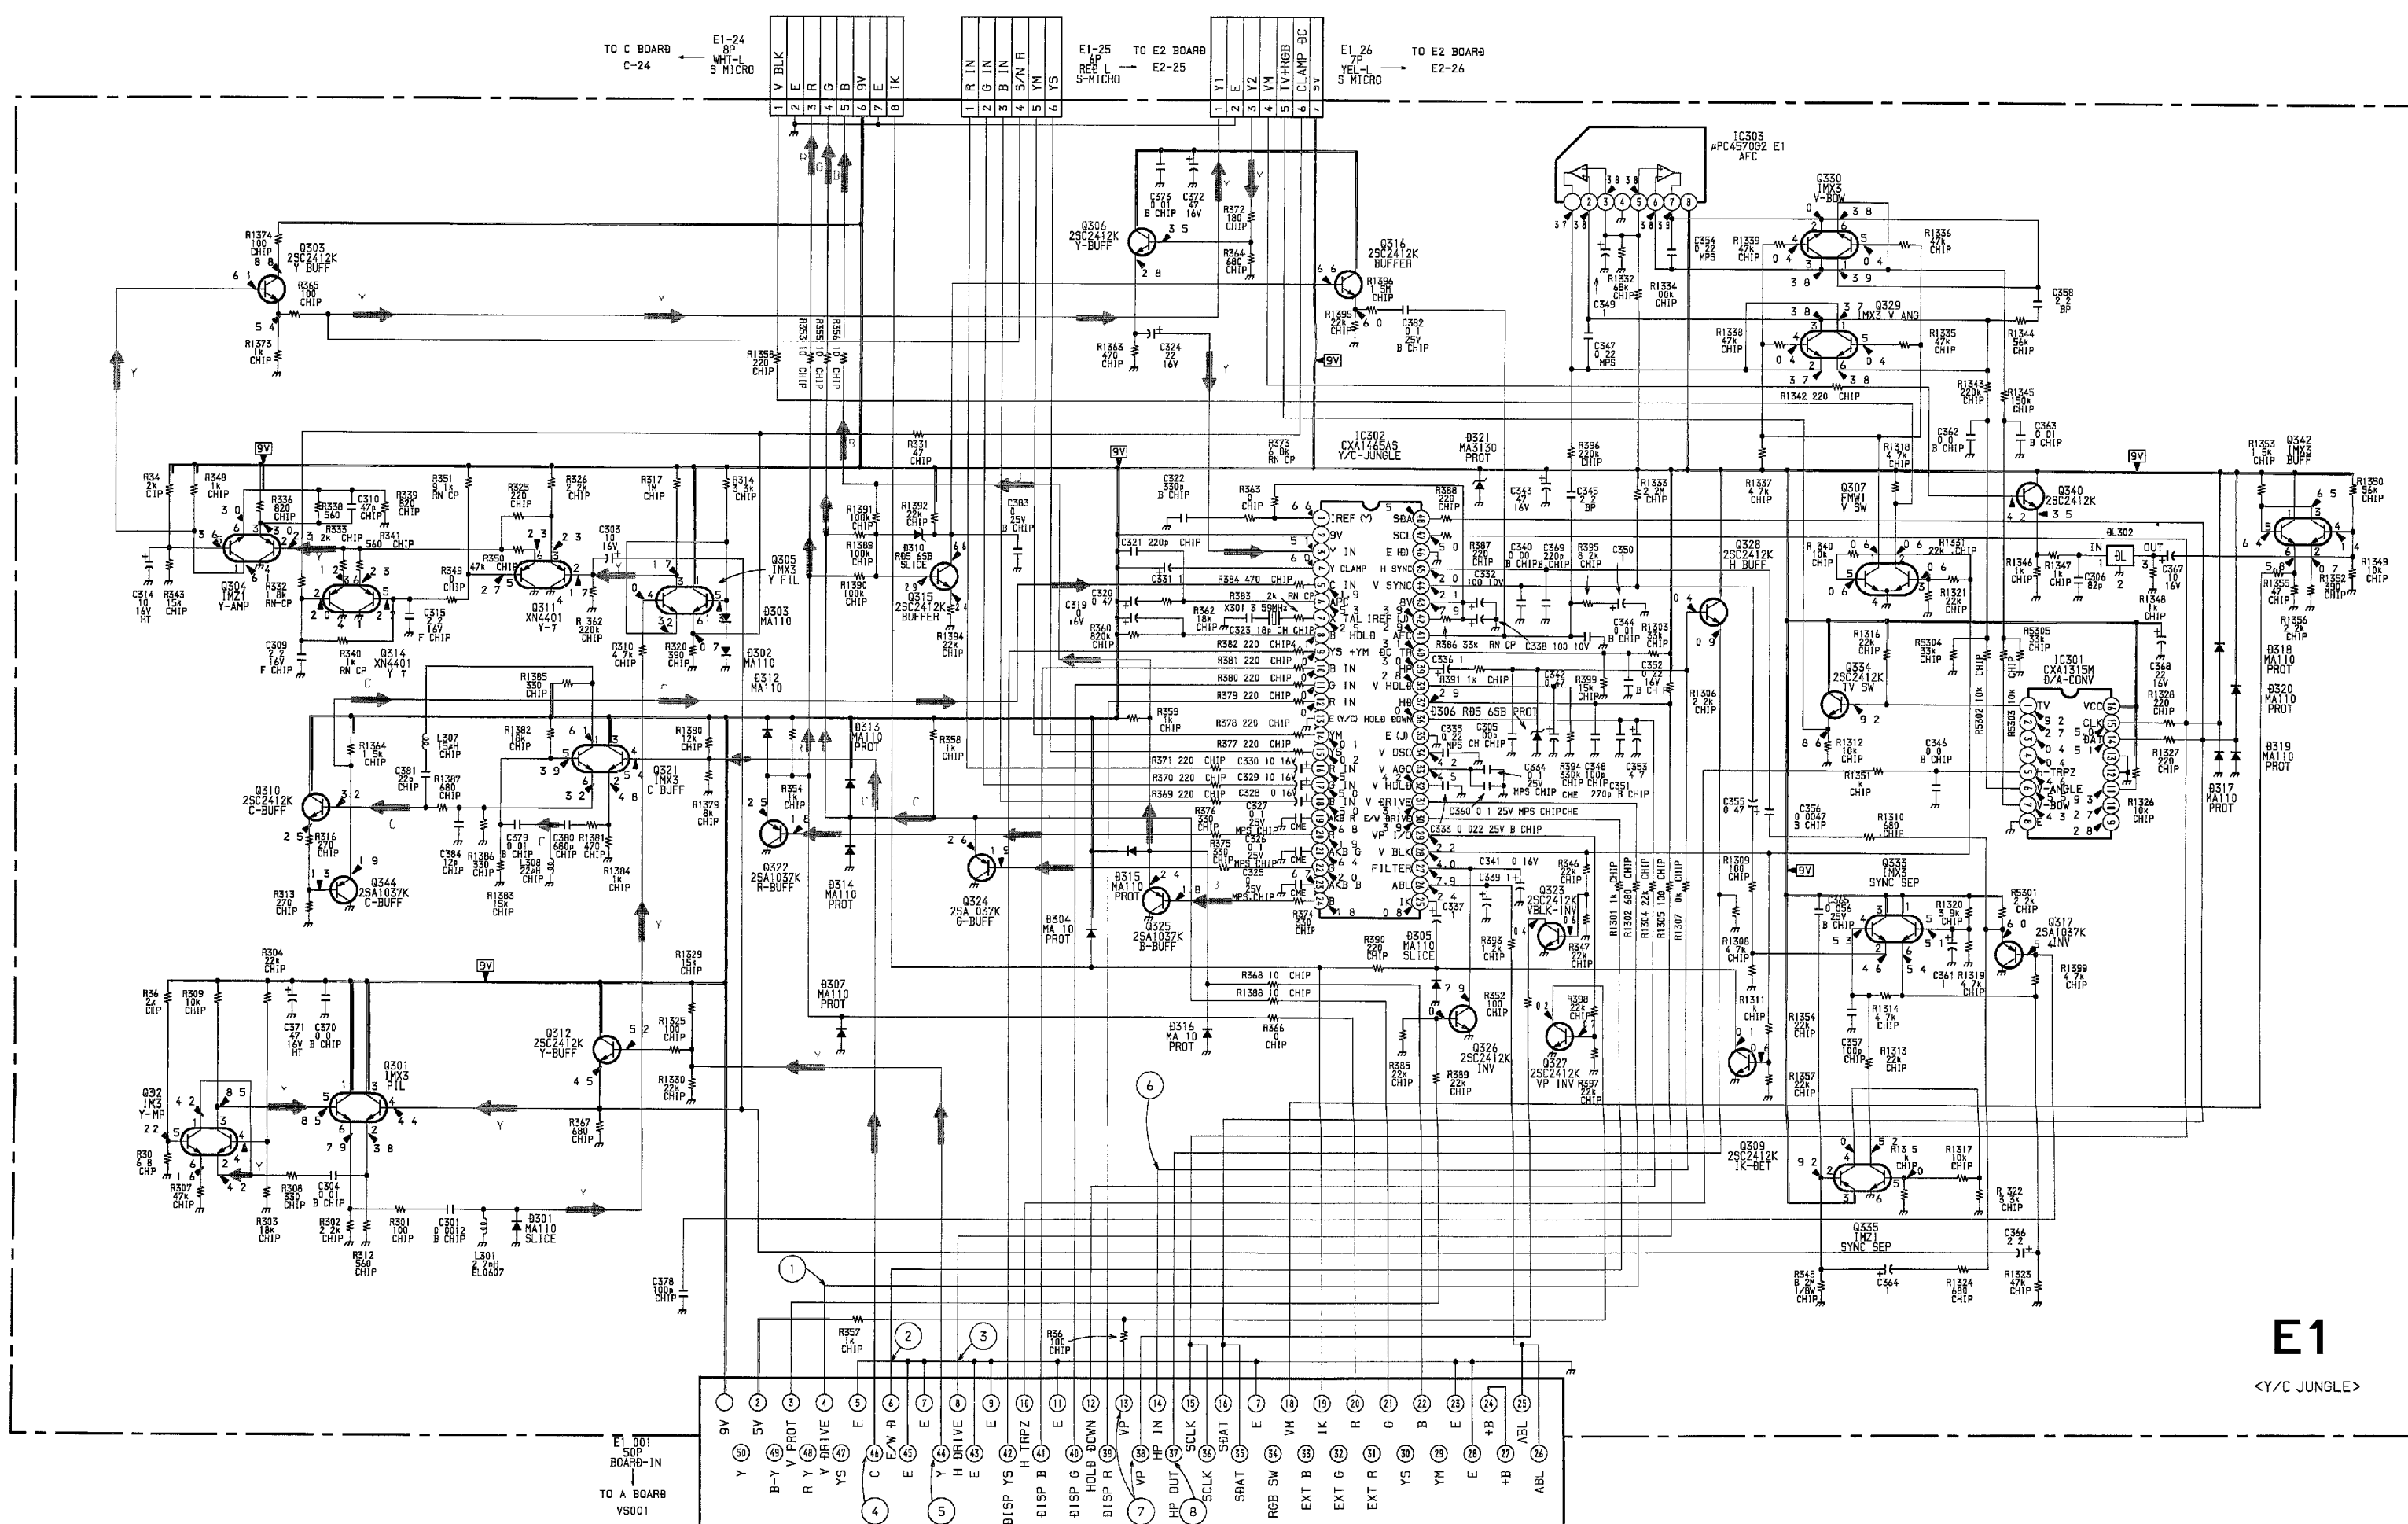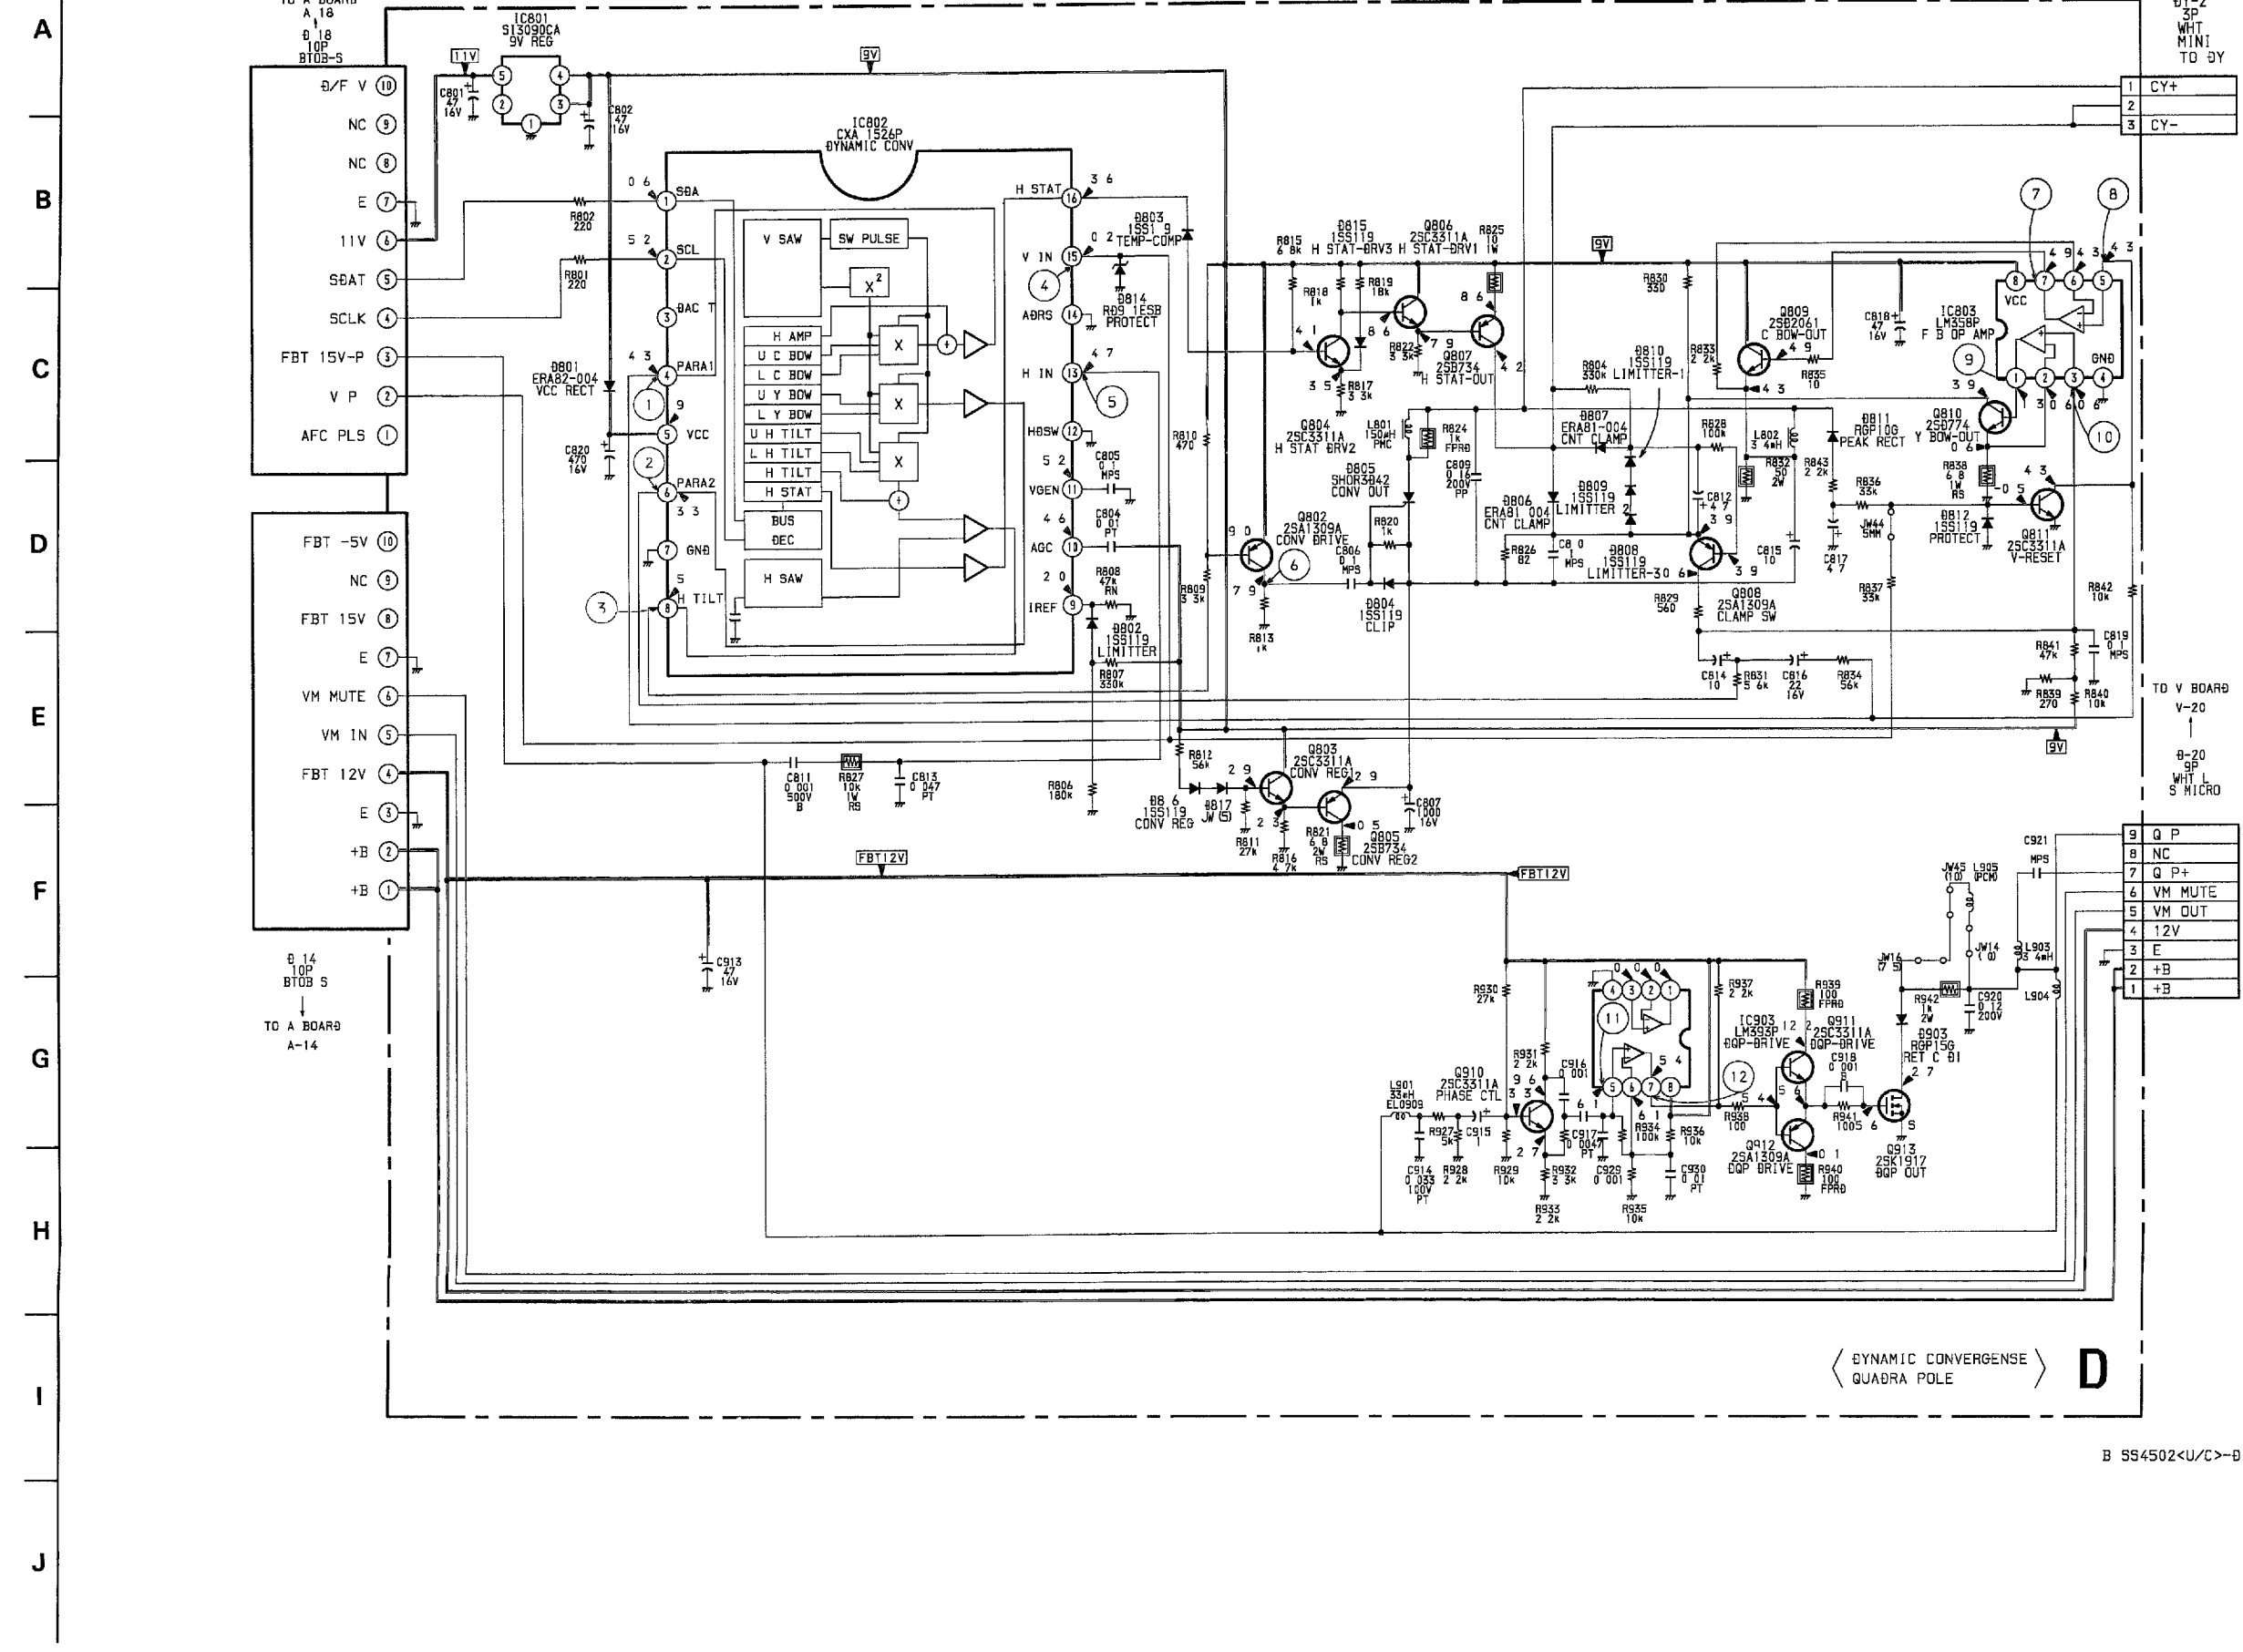

E1 [Y/C JUNGLE] **D** [DYNAMIC CONVERGENCE
QUADRA - POLE]

- E1 BOARD -

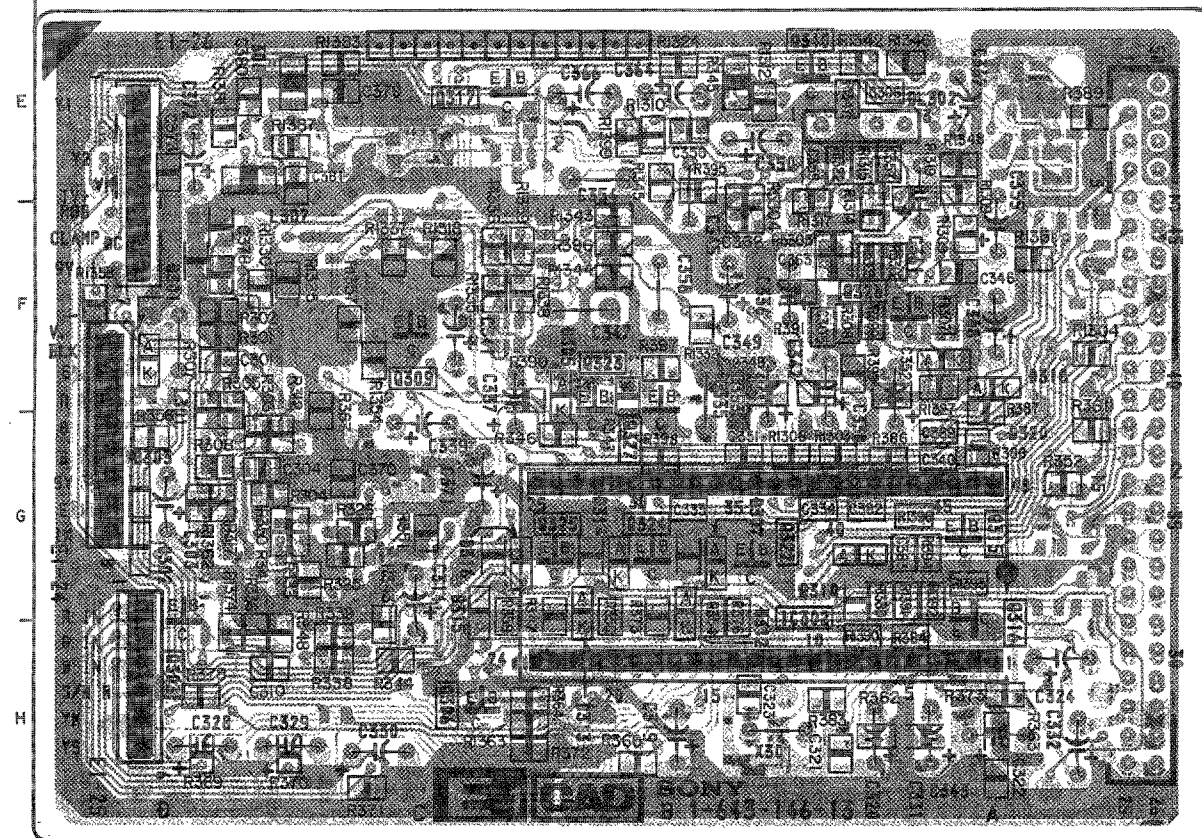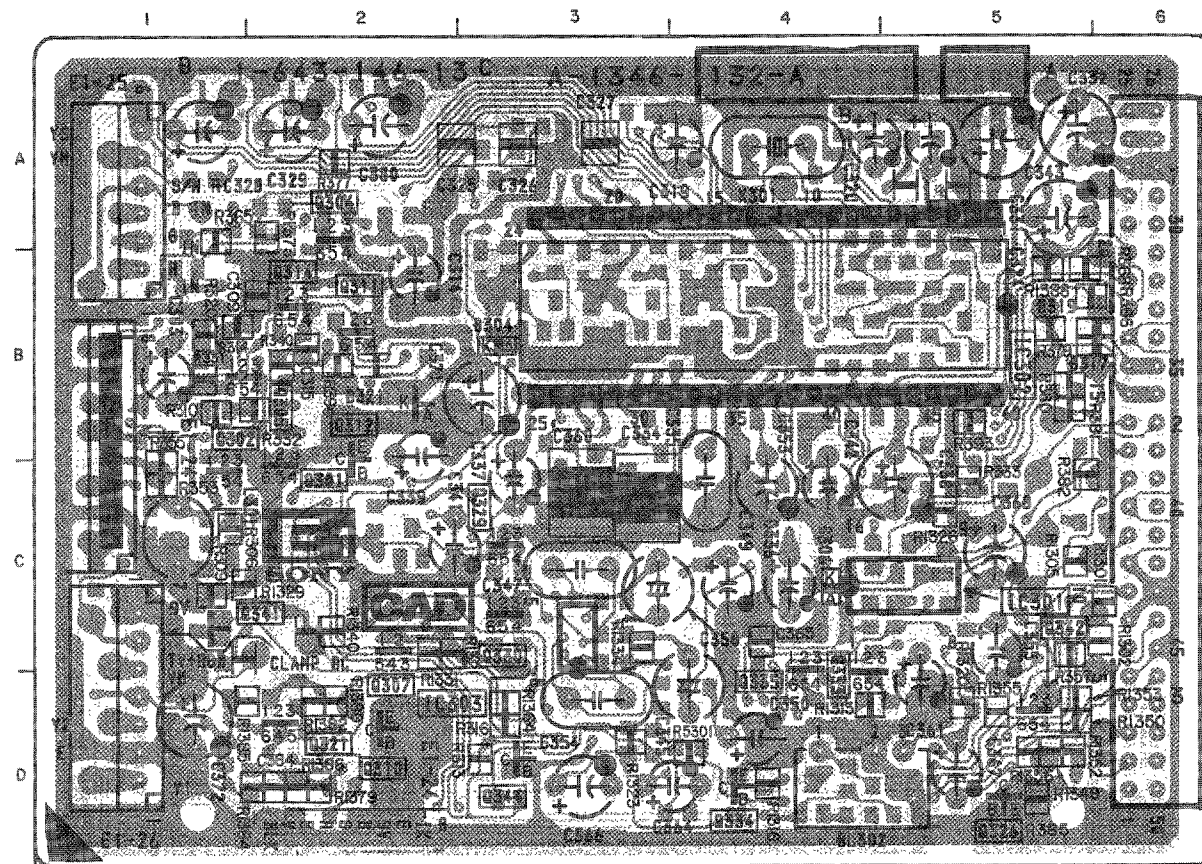


IC		DIODE	
IC301	C-5	D301	F-1
IC302	B-4, G-4	D302	G-1
IC303	C-3	D303	G-1
TRANSISTOR		D304	B-3
Q301	C-2	D305	F-3
Q302	C-1	D306	C-4
Q303	G-1	D307	G-4
Q304	A-2	D310	G-4
Q305	B-1	D312	G-4
Q306	H-3	D313	G-3
Q307	C-2	D314	G-3
Q309	F-2	D315	G-2
Q310	D-2	D316	G-3
Q311	B-2	D317	B-5
Q312	B-2	D318	F-5
Q314	B-2	D319	B-5
Q315	G-5	D320	G-5
Q316	G-5	D321	B-2
Q317	E-3		
Q321	D-2		
Q322	G-4		
Q323	F-3		
Q324	G-3		
Q325	G-3		
Q326	D-5		
Q327	G-3		
Q328	F-5		
Q329	C-3		
Q330	C-3		
Q333	D-4		
Q334	D-4		
Q335	D-4		
Q340	E-4		
Q342	D-5		
Q344	D-3		

Note :

- [Pattern] : Pattern from the side which enables seeing.
- [Pattern] : Pattern of the rear side.

- D BOARD -

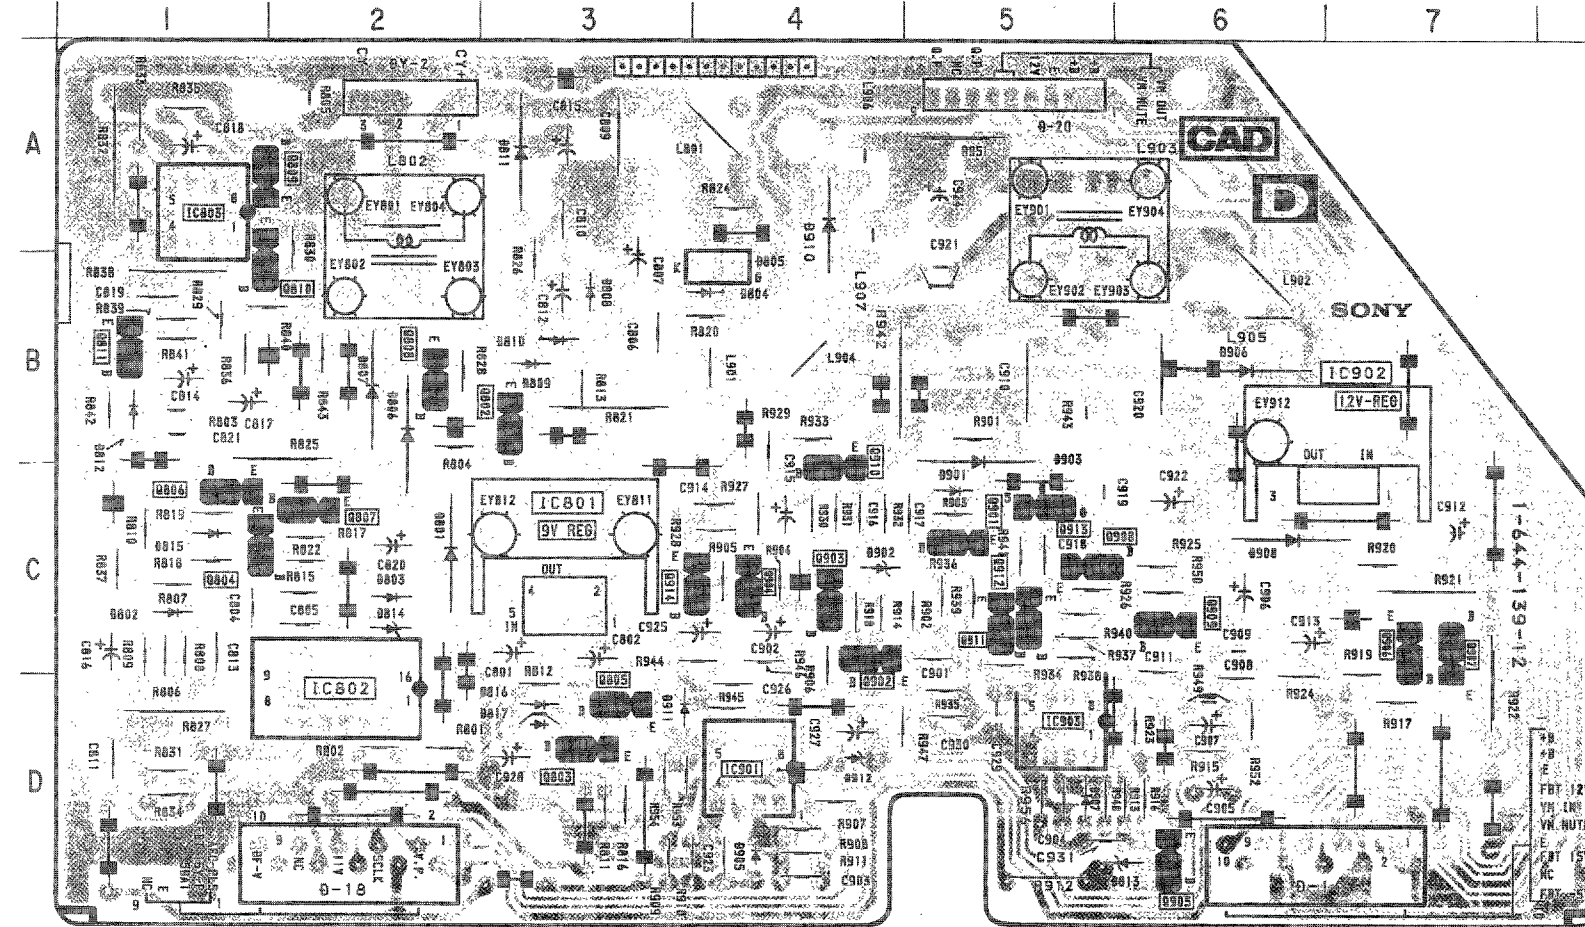


IC		DIODE	
IC802	D-2	D801	C-2
IC803	A-1	D802	C-1
IC903	D-5	D803	C-2
TRANSISTOR		D804	B-4
Q802	B-3	D805	B-4
Q803	D-4	D806	B-2
Q804	C-1	D807	B-2
Q805	D-3	D808	B-3
Q806	C-1	D809	B-3
Q807	C-2	D810	B-3
Q808	B-2	D811	A-3
Q809	A-1	D812	B-1
Q810	B-2	D813	D-6
Q811	B-1	D814	C-2
Q910	B-4	D815	C-1
Q911	C-5	D816	D-3
Q912	C-5	D903	B-5
Q913	C-5		

G [POWER SUPPLY, DEGAUSSING CIRCUIT] **E2** [SHARPNESS CONT. CHARACTER GENERATOR]

- G BOARD -



IC	D613 D-5	D651 E-7
IC651 G-9	D652 D-7	D653 E-7
IC654 D-6	D654 F-7	D655 H-7
TRANSISTOR	D656 H-8	D657 F-7
Q601 E-5	D658 H-6	D659 G-5
Q602 E-3	D660 G-5	D661 H-6
Q603 G-5	D662 G-1	D663 G-2
Q604 G-4	D664 F-1	D665 F-2
Q605 F-8	D666 F-2	D667 D-1
Q652 F-1	D668 D-1	D669 F-2
Q653 F-1	D670 E-2	D671 E-2
Q654 D-1	D672 D-2	
Q655 F-2		
Q656 F-2		
DIODE		
D601 C-4		
D602 E-4		
D603 E-3		
D604 G-4		
D605 G-3		
D606 F-1		
D607 D-2		
D608 E-4		
D609 E-3		
D610 G-4		
D611 H-3		
D612 D-5		




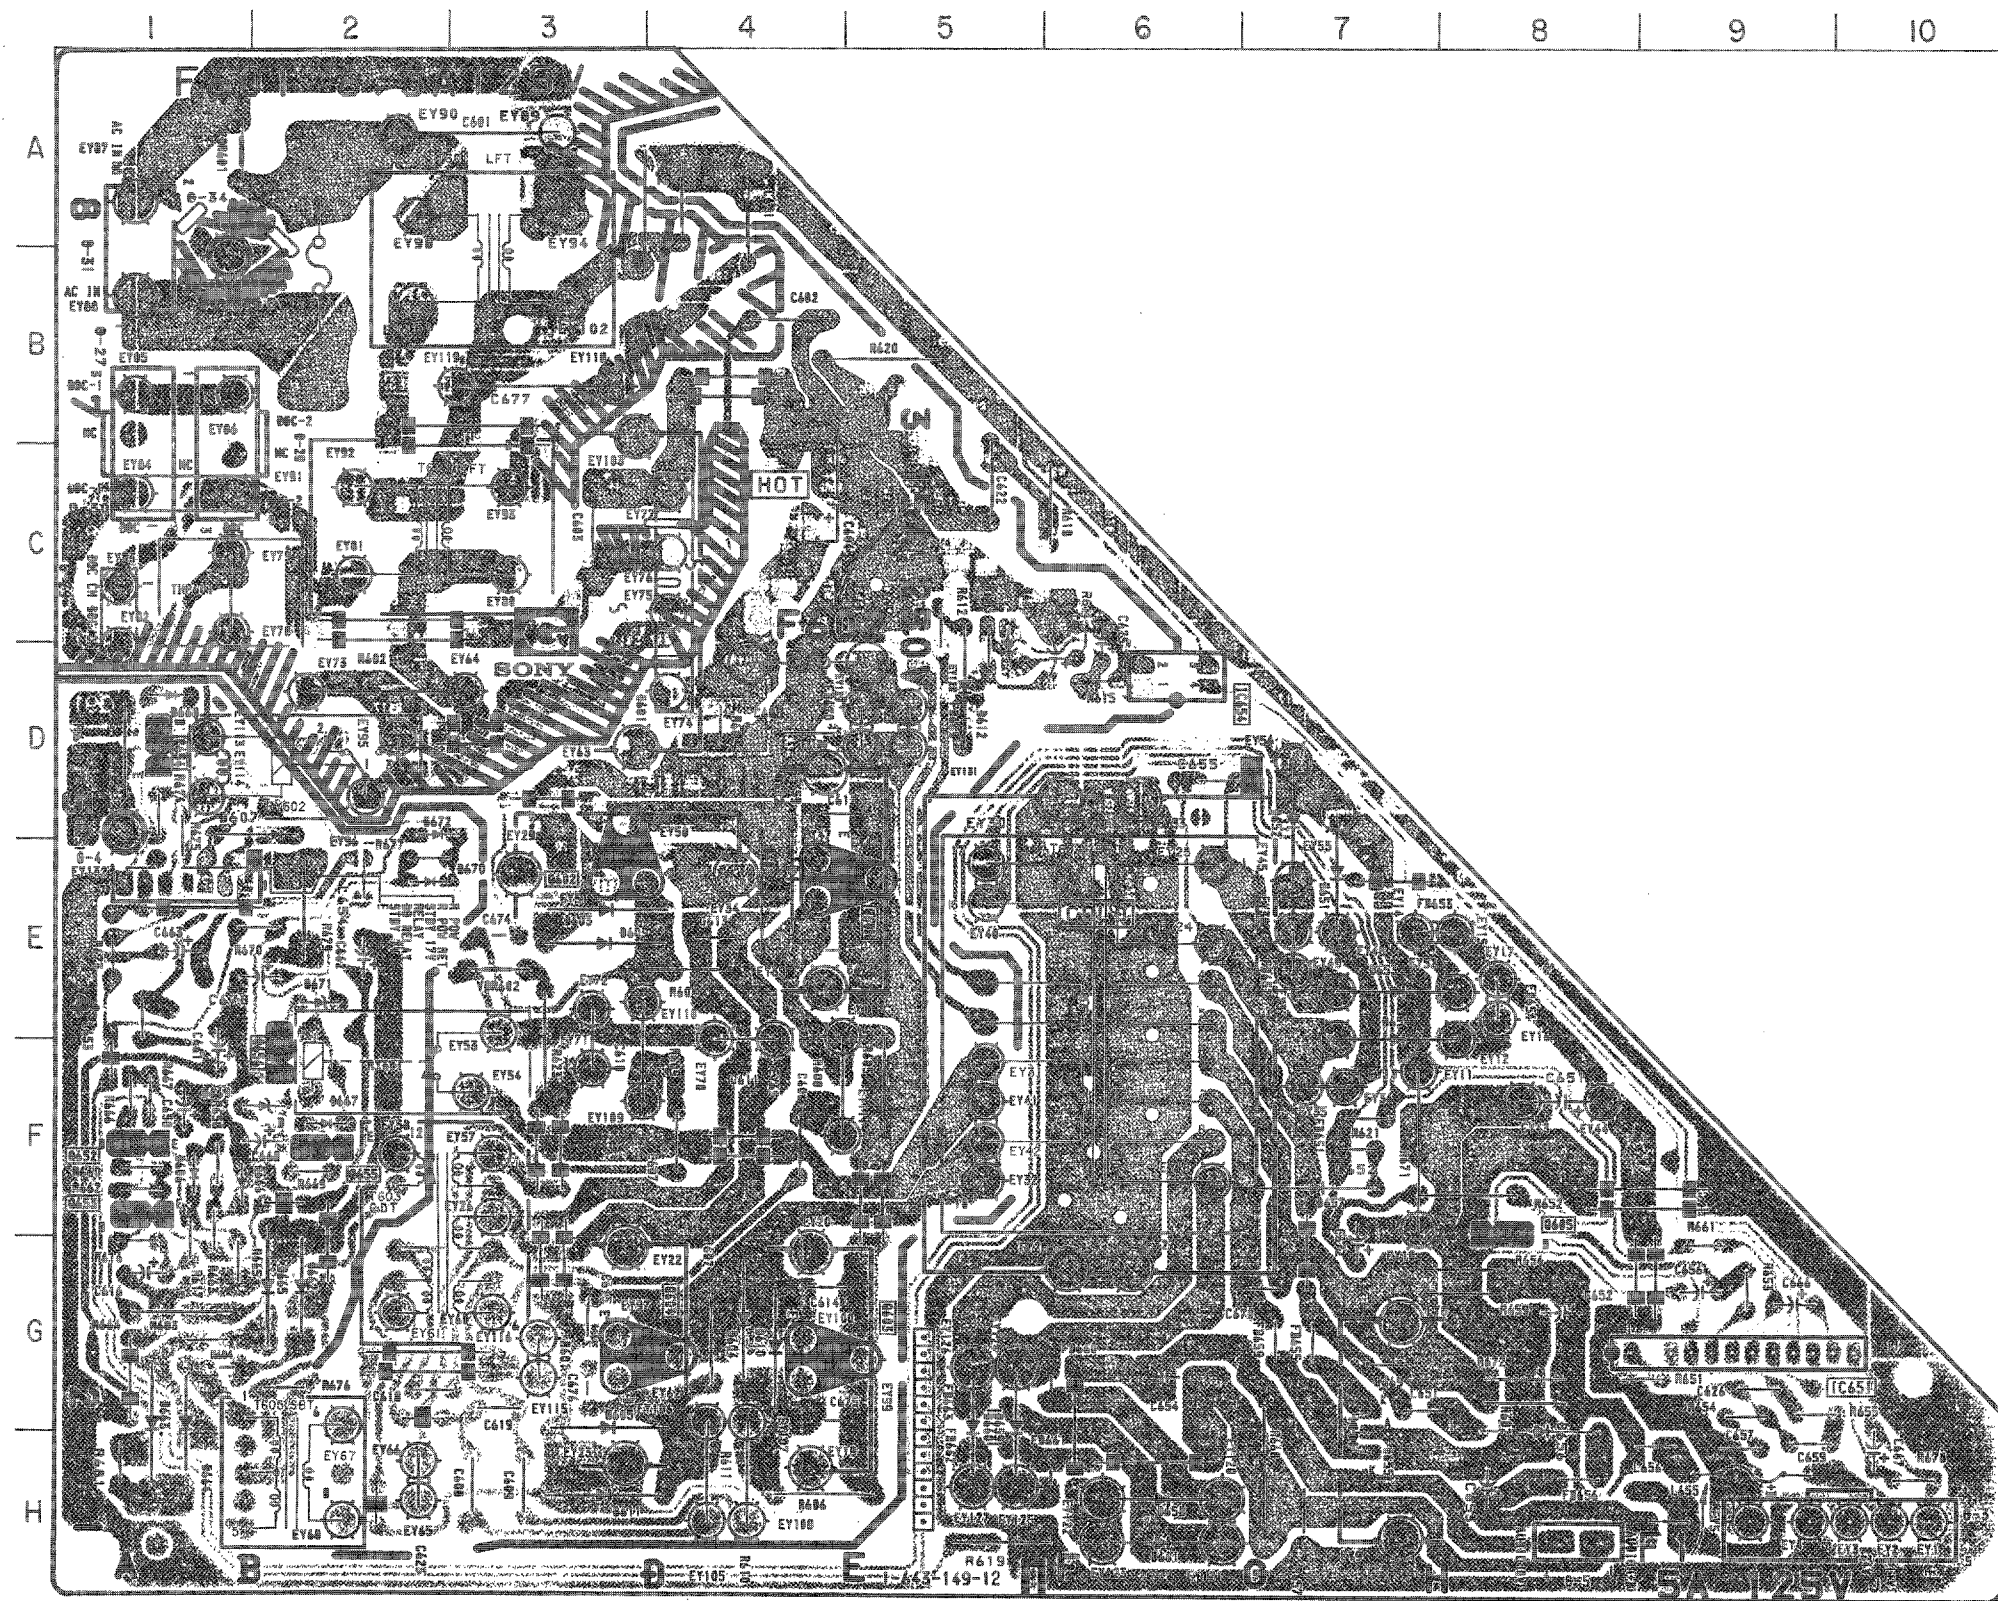


Note:
 • [Pattern] : Pattern from the side which enables seeing.
 • [Pattern] : Pattern of the rear side.

- E2 BOARD -

IC	IC2031 B-4
IC2303 A-5	IC2304 D-3, E-2
IC2306 H-3	IC2307 B-3
TRANSISTOR	
Q2301 C-5	Q2303 C-5
Q2304 D-5	Q2305 C-5
Q2306 A-3	Q2307 B-4
Q2308 A-3	Q2309 B-2
Q2310 A-2	Q2311 A-2
Q2312 A-2	Q2313 A-2
Q2314 A-2	Q2315 A-2
Q2317 H-4	Q2318 G-4
Q2319 G-5	Q2320 A-4
Q2321 A-4	Q2322 A-4
Q2324 B-3	Q2326 E-1
Q2327 E-2	Q2328 D-4
Q2329 D-4	Q2330 C-4
Q2336 C-5	Q2337 B-3
Q2339 F-4	Q2340 F-4
Q2341 F-4	
DIODE	
D2306 C-5	D2307 B-2
D2308 B-2	D2309 B-2
D2312 C-4	D2313 C-4
D2314 B-5	D2317 A-4

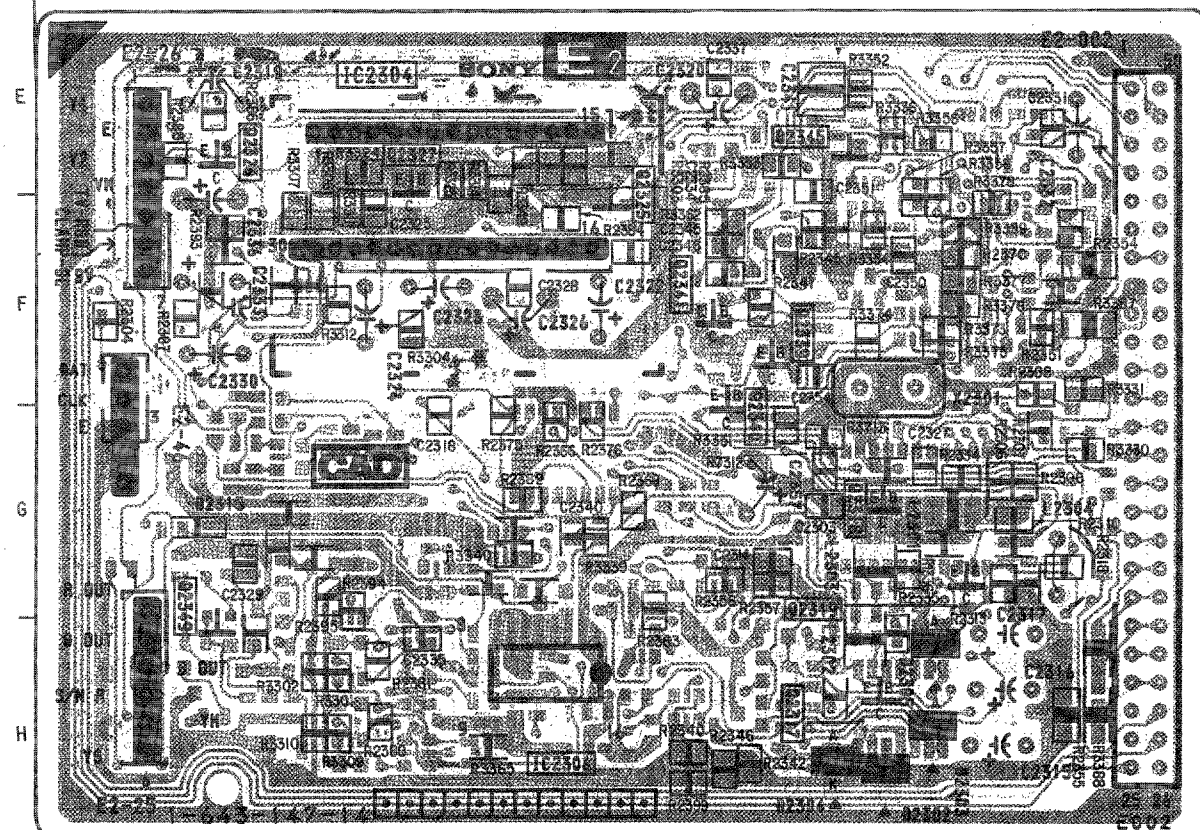
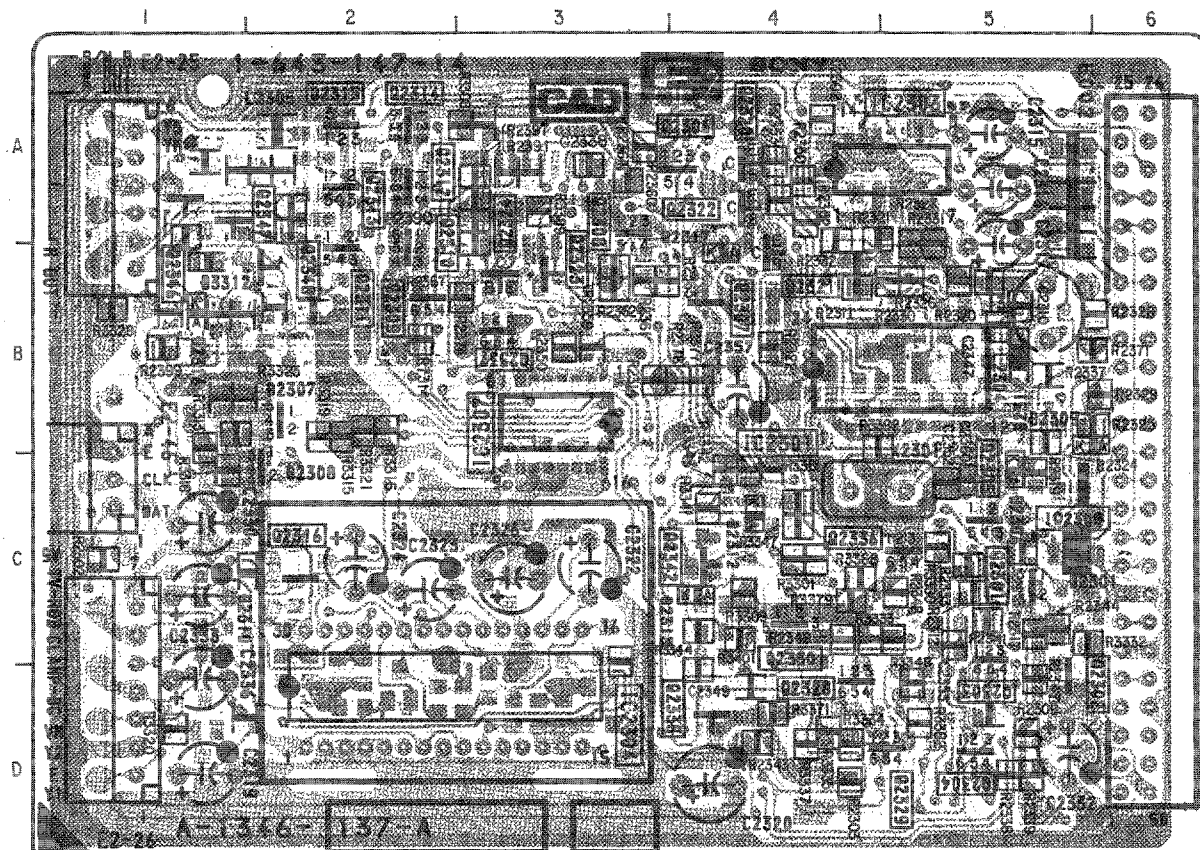


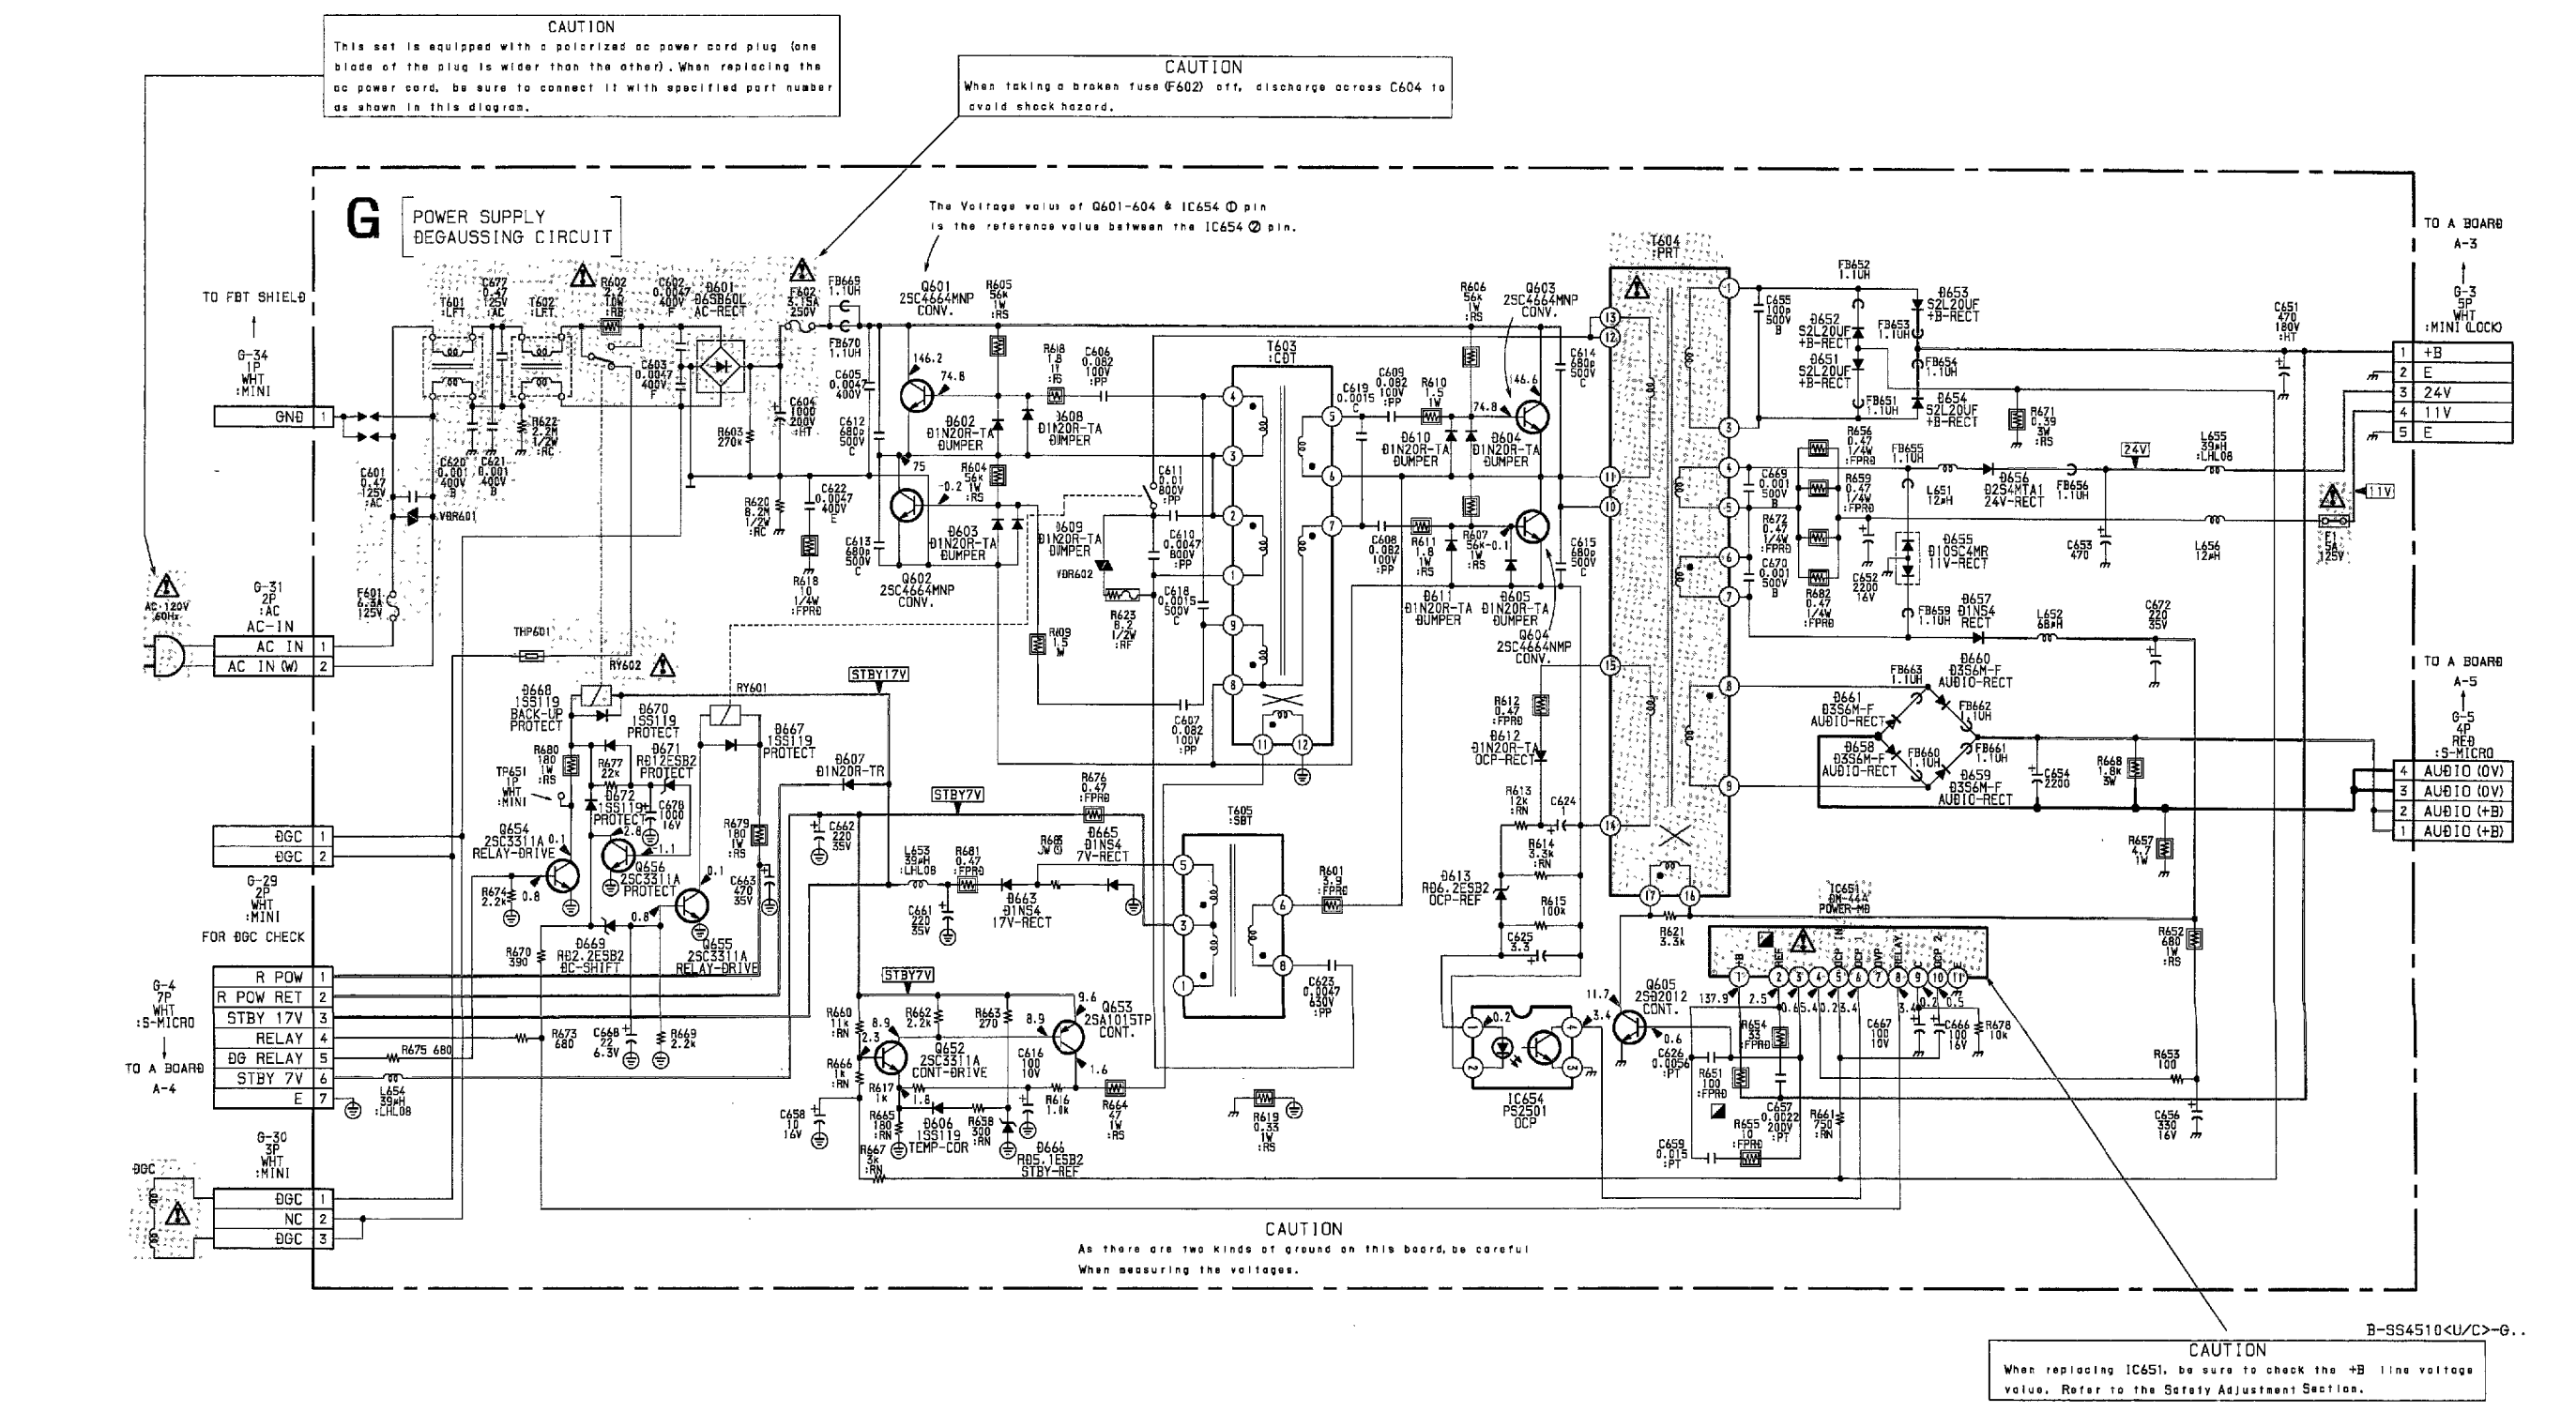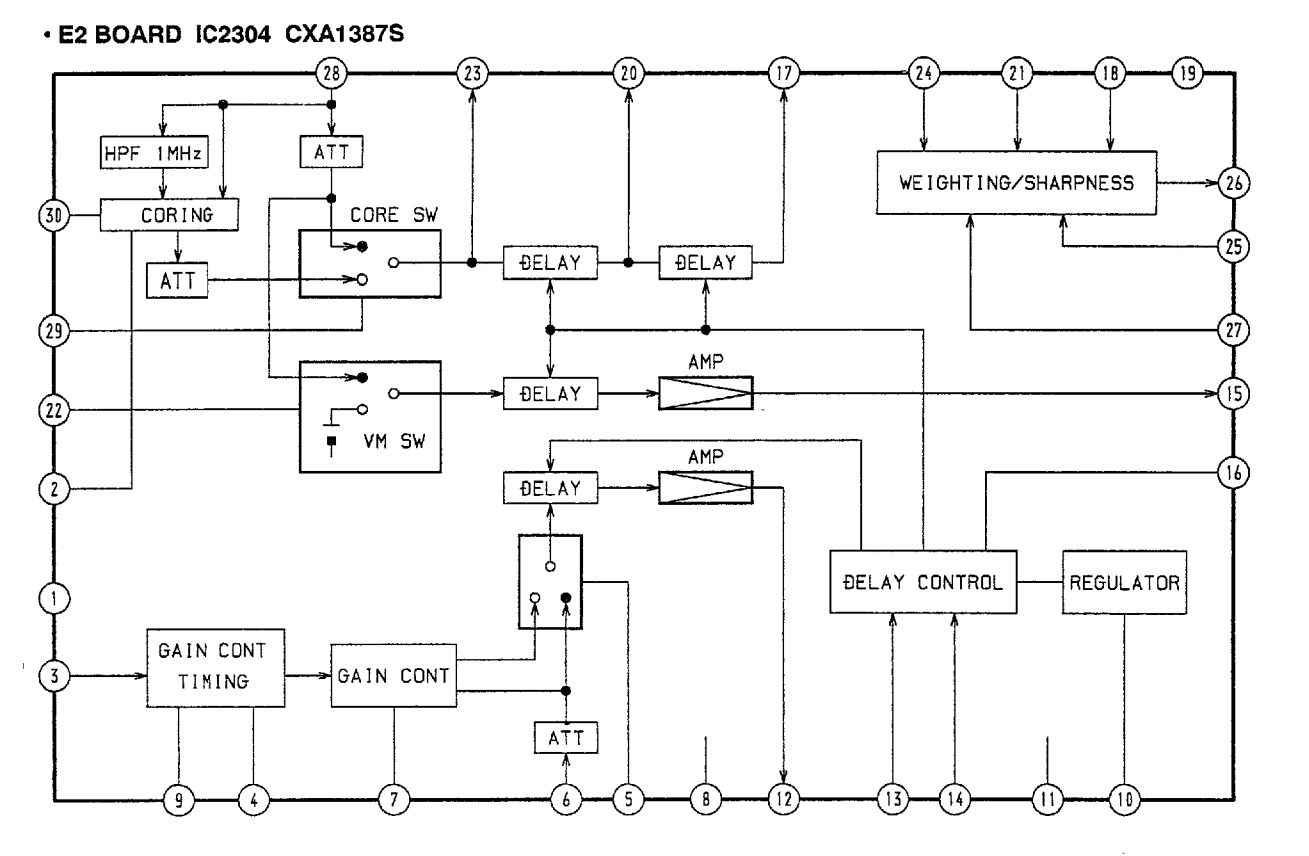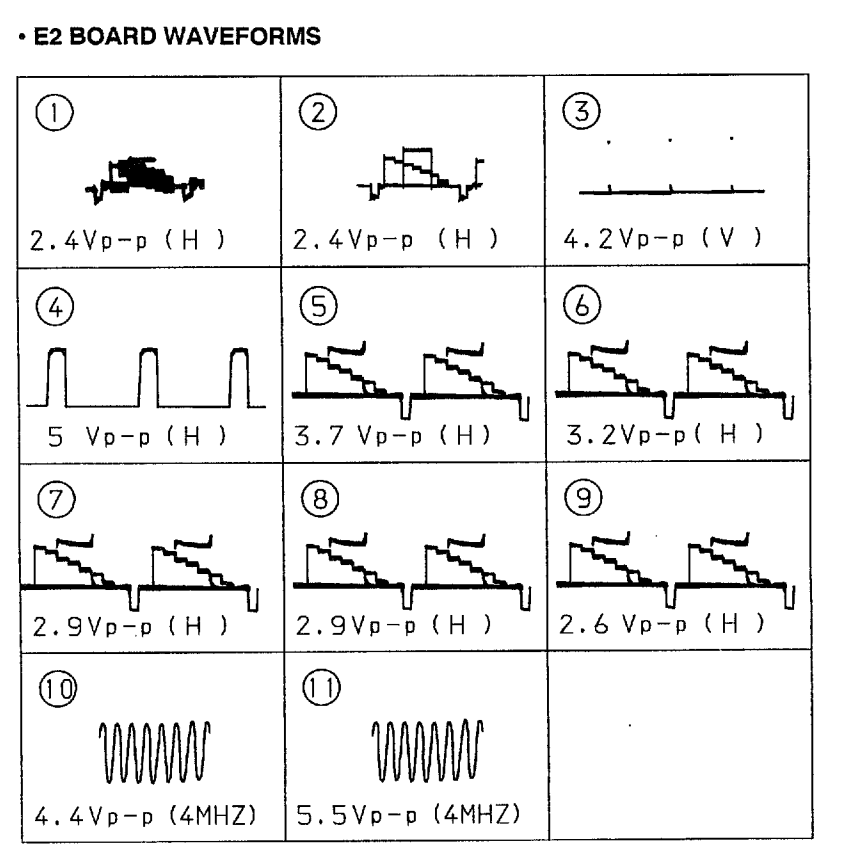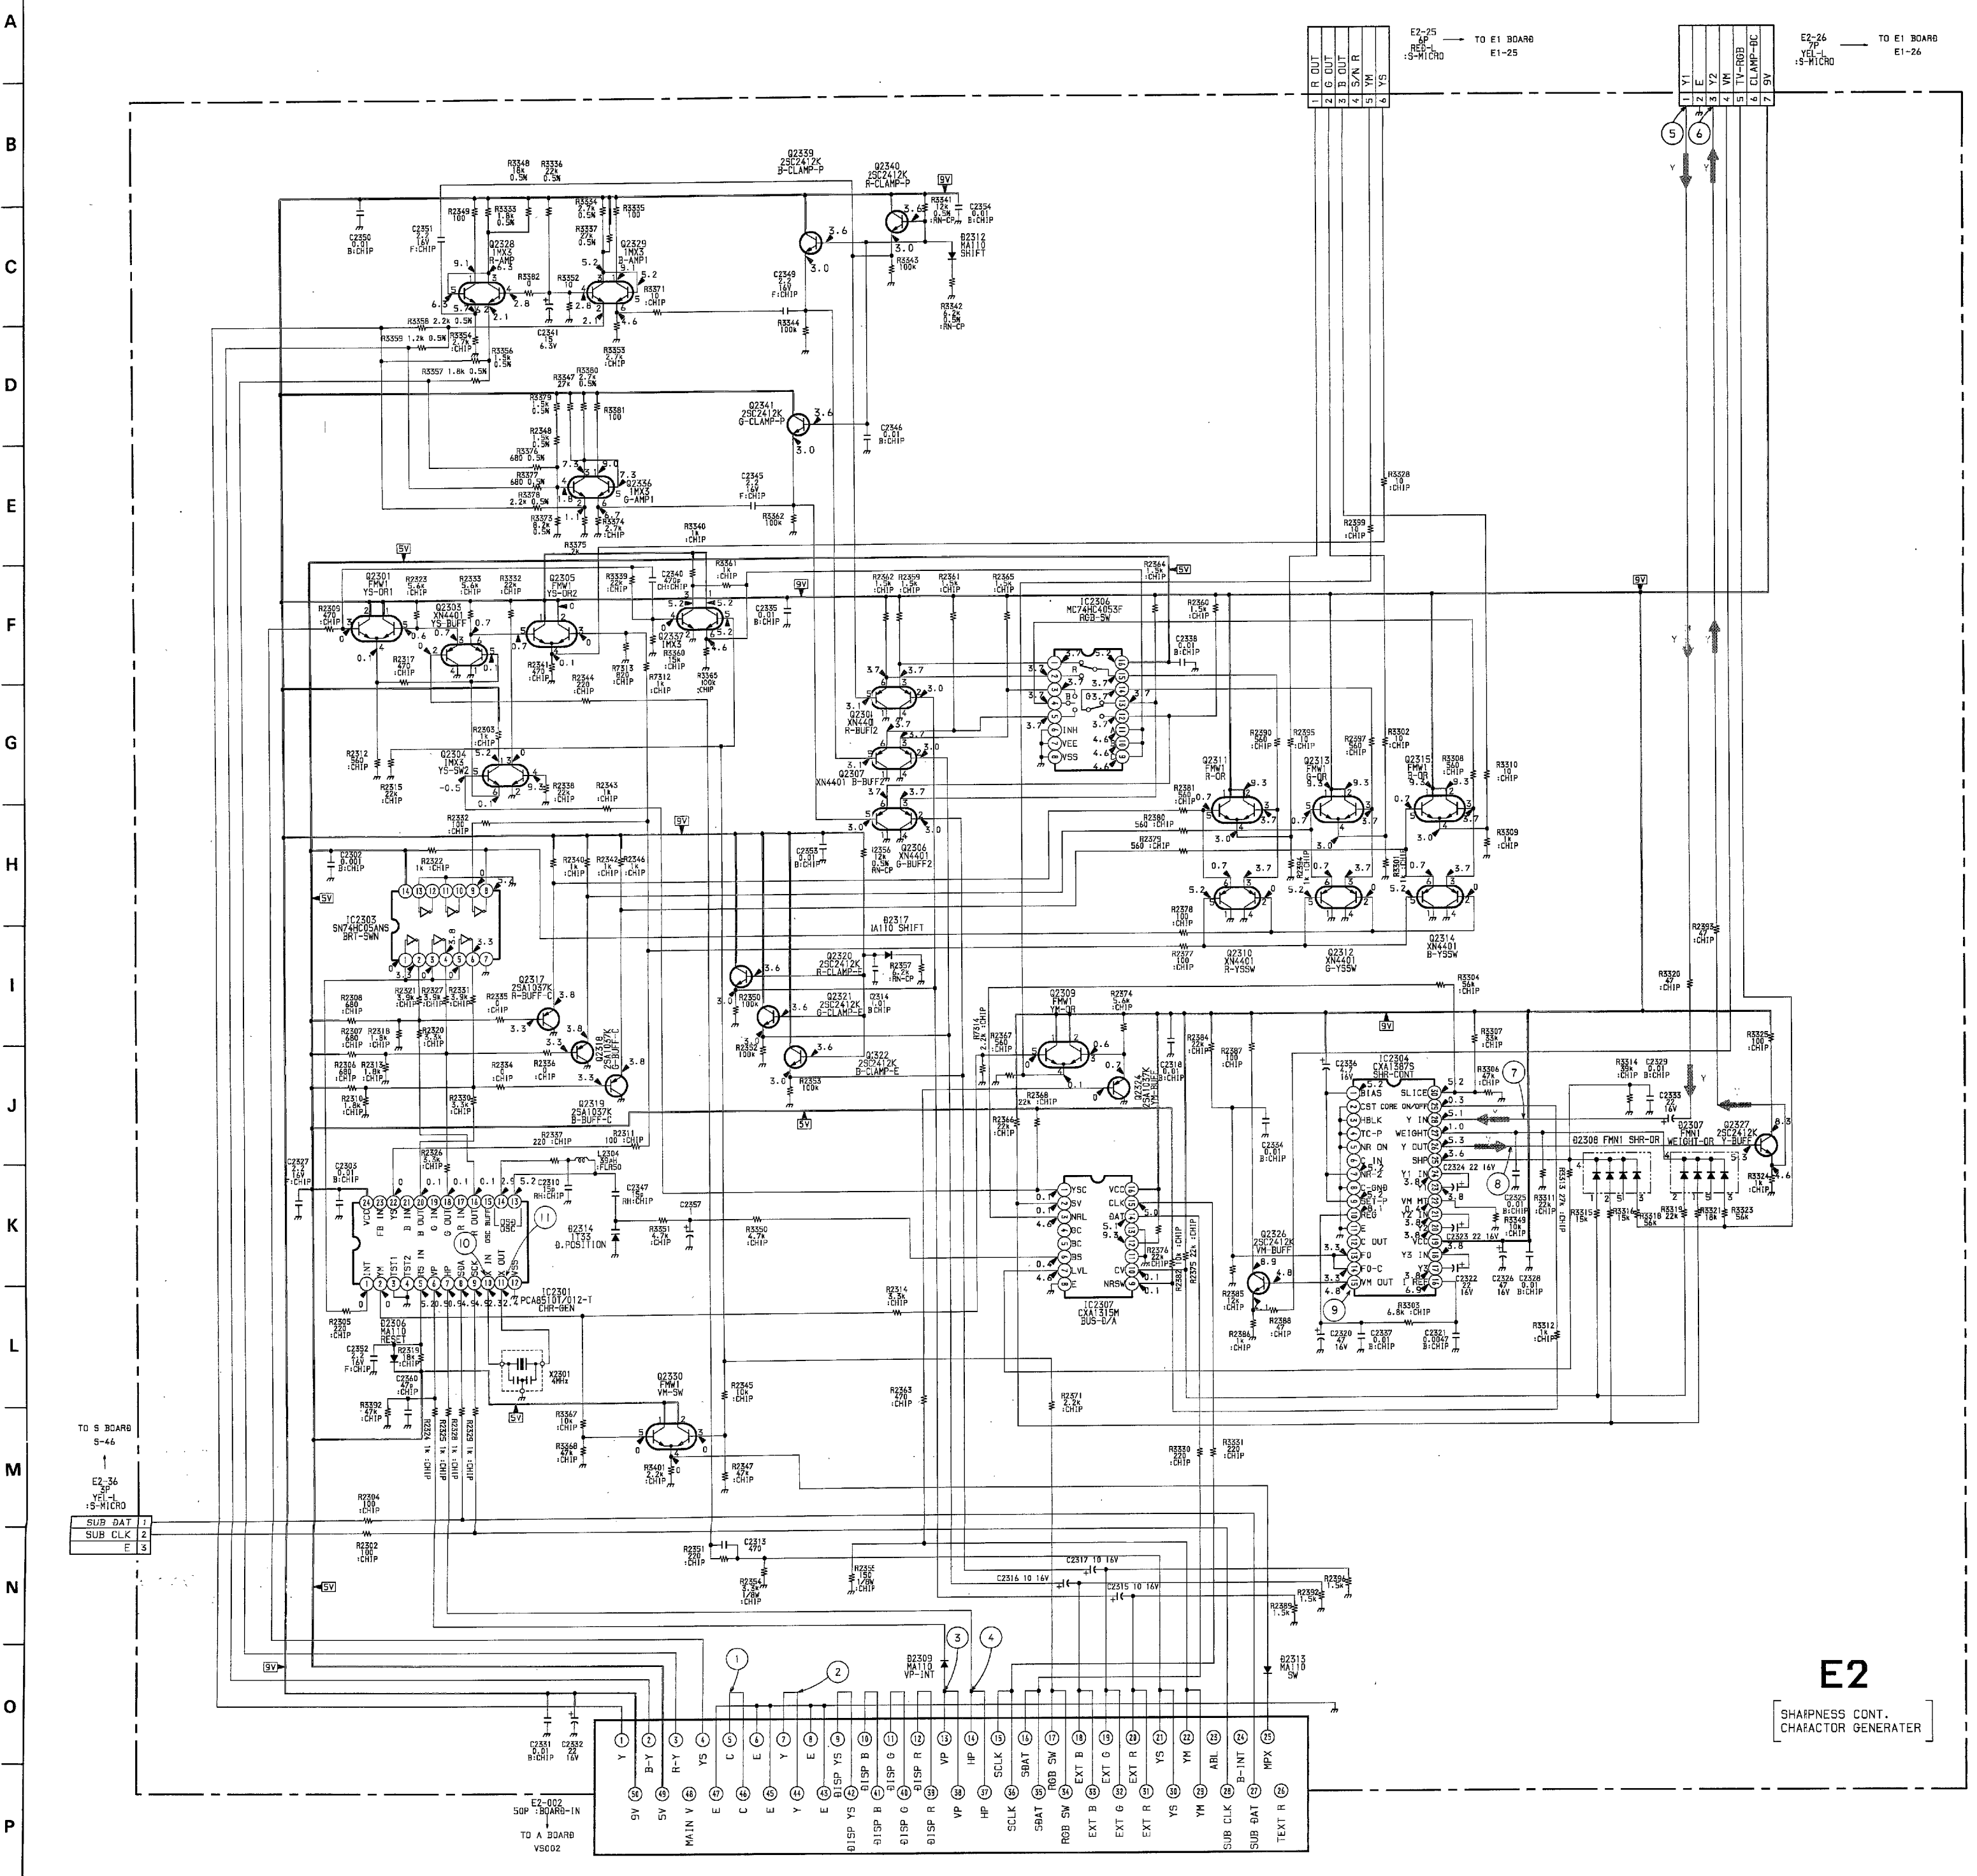

E2
SHARPNESS CONT. CHAFACTOR GENERATOR

M [MAIN CONTROL
μ - CON] **HS3** [USER CONTROL SW,
RC SENSE, LED] **V** [VELOCITY
MODURATION] **N**

- M BOARD -

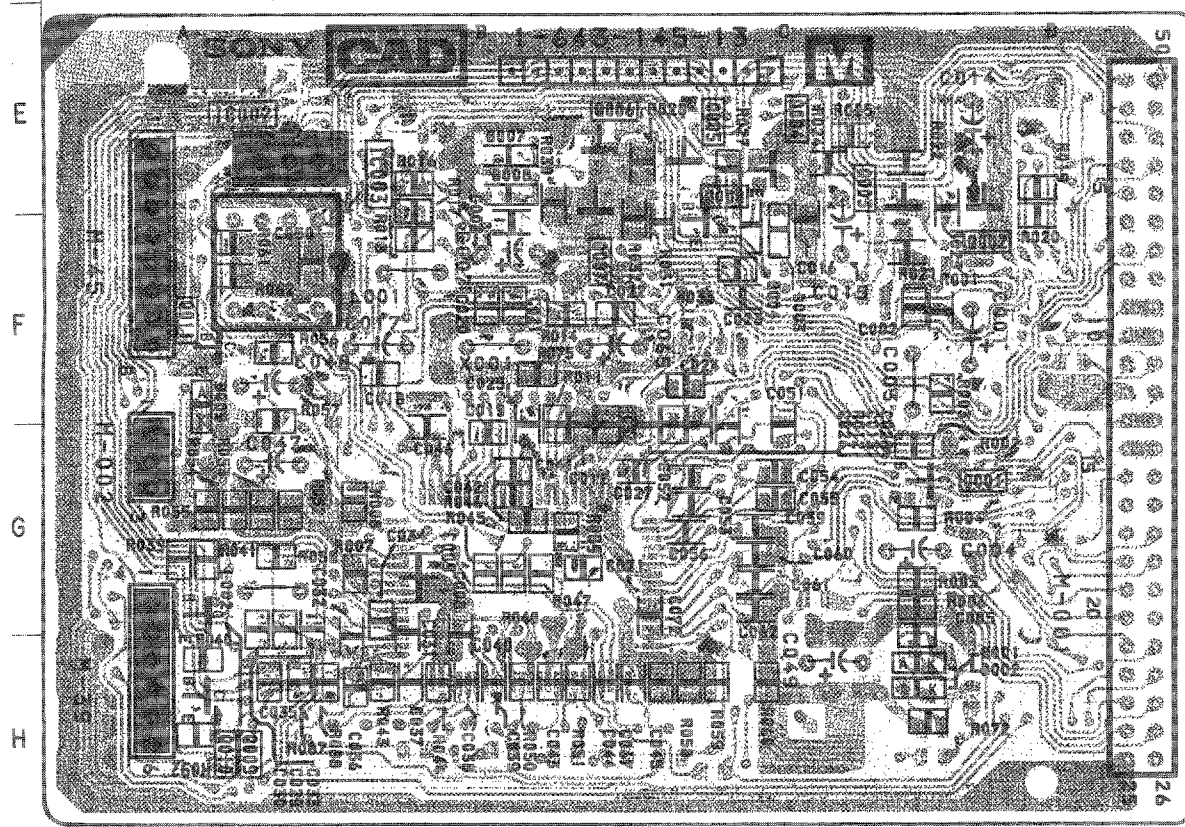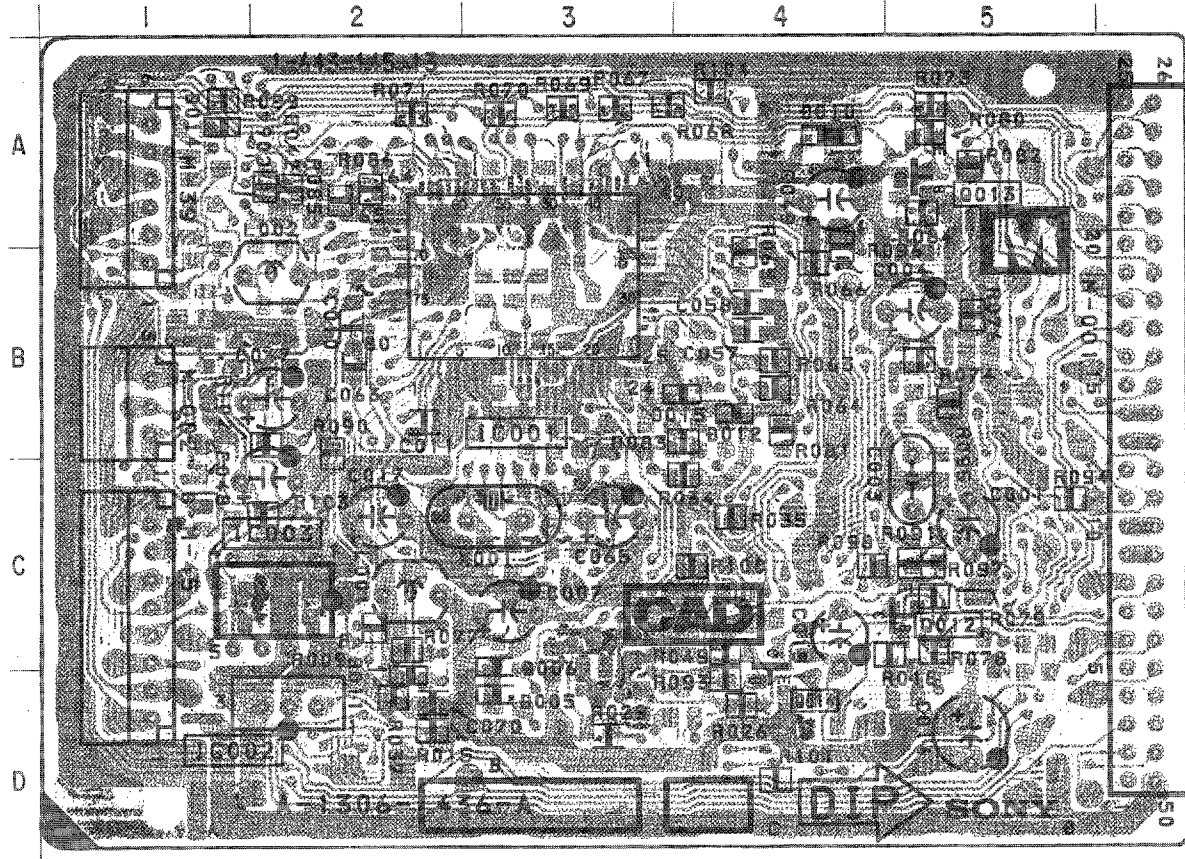


IC	
IC001	C-1
IC002	D-2, E-2


TRANSISTOR	
Q001	G-5
Q009	G-1
Q010	H-1
Q011	F-1
Q012	C-5
Q013	A-5
Q014	C-4

DIODE	
D001	H-5
D002	H-5
D009	F-1
D010	A-4
D011	D-2
D012	B-4
D014	A-1
D015	B-4


- HS3 BOARD -

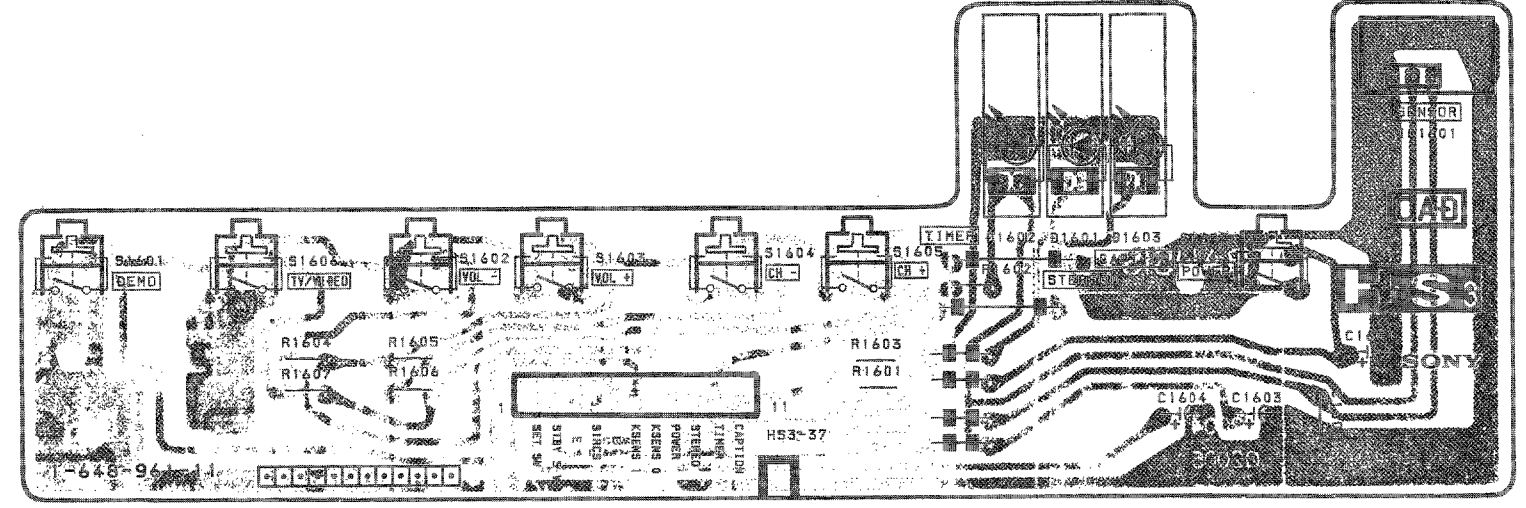

- V BOARD -

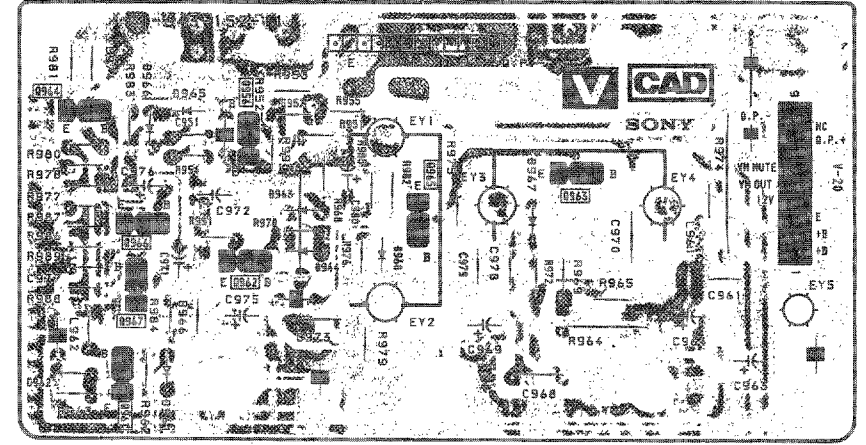

- N BOARD -

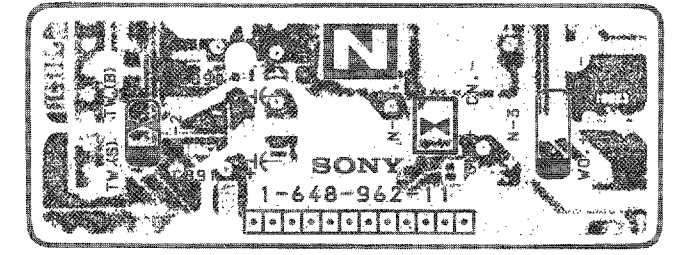

Note:
 • [Pattern] : Pattern from the side which enables seeing.
 • [Pattern] : Pattern of the rear side.

P3


2ND CONT, μ - CON FOR PIP,
2ND TUNER - VIF/SIF FOR PIP,
Y/C JUNGLE FOR PIP, ANT SW CONT

P1

[PICTURE IN PICTURE]

- P3 BOARD -

IC	
IC2001	F-1
IC2002	C-2
IC2003	D-3
IC2004	C-2
IC2005	C-3
TRANSISTOR	
Q2001	E-1
Q2002	F-2
Q2003	E-3
Q2004	D-3
Q2005	B-3
Q2006	A-3
Q2007	A-3
Q2008	E-1
Q2009	A-9
Q2010	B-4
Q2011	B-4
Q2012	B-4
Q2030	D-1
Q2031	F-1
Q2036	C-4
Q2037	G-3
DIODE	
D2006	D-2
D2007	D-1
VARIABLE RESISTOR	
RV2001	F-1

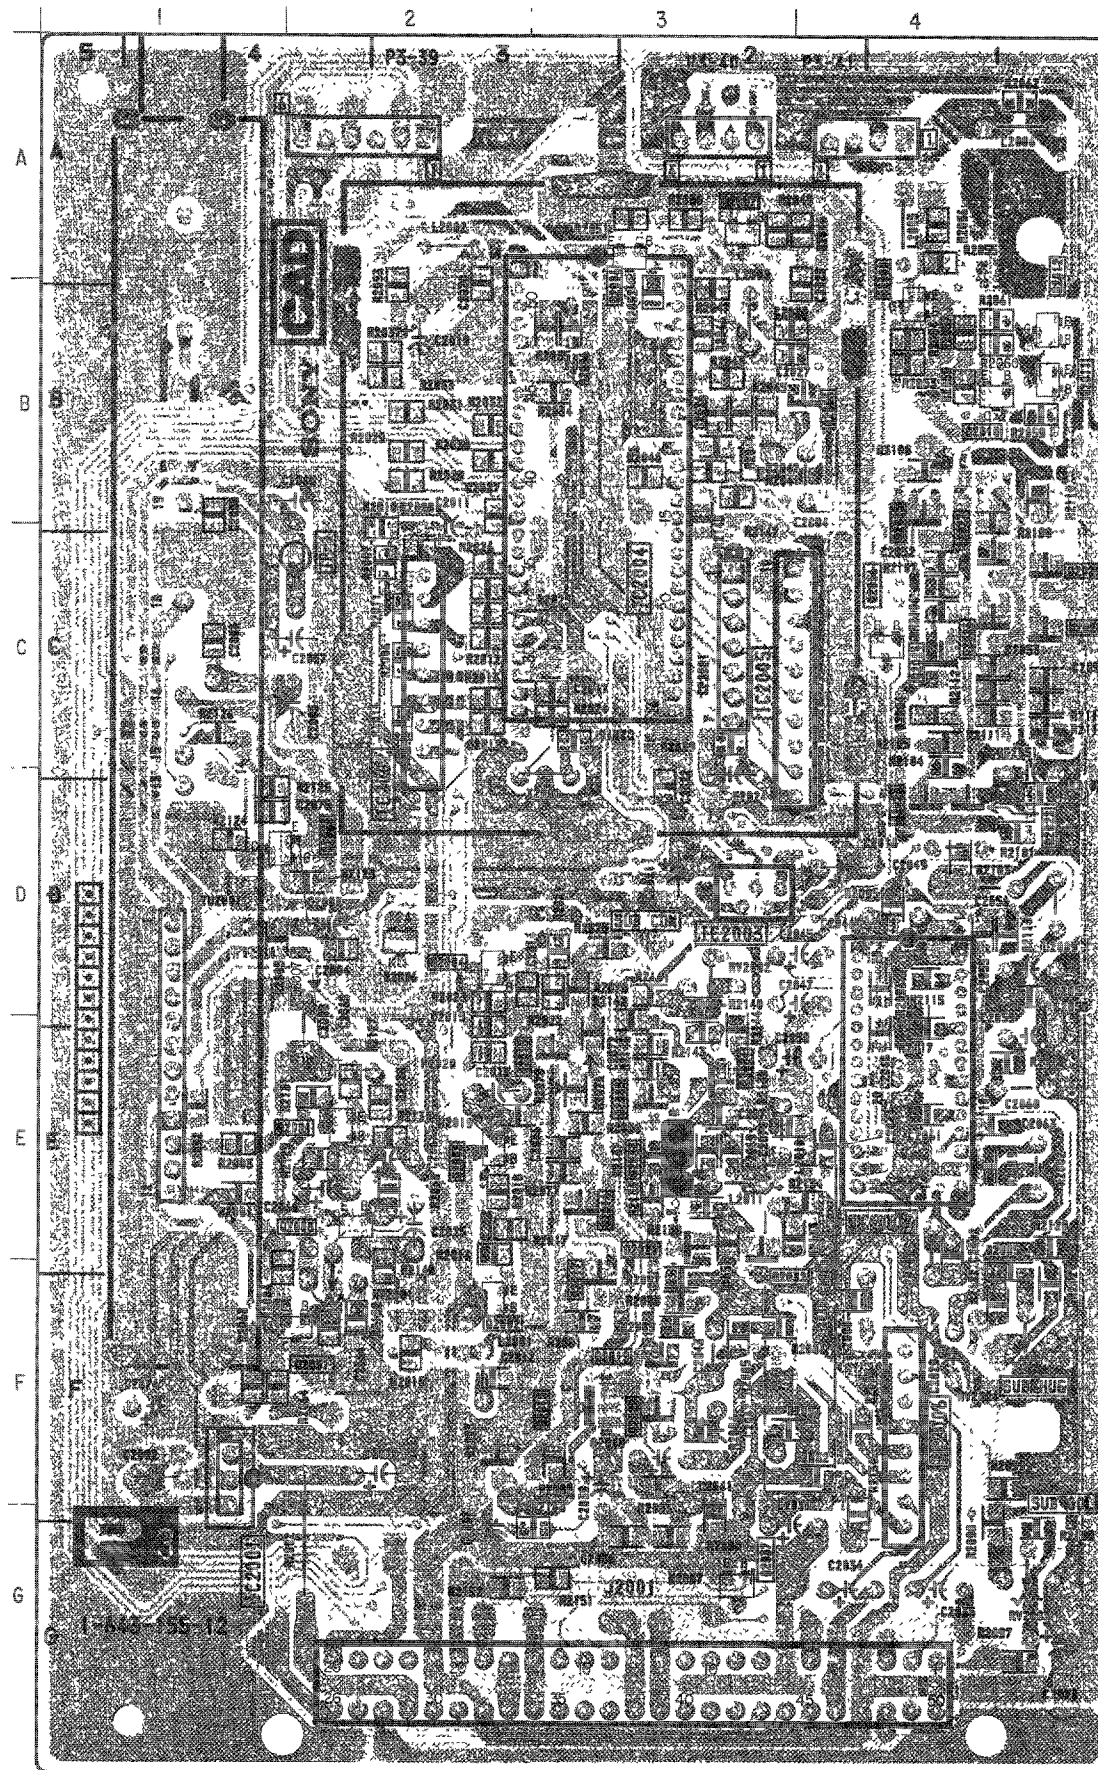


Note :

- [Pattern from the side which enables seeing.]
- [Pattern of the rear side.]




IC	
IC3001	A-2, G-2
IC3002	D-2
IC3003	B-2, F-2
IC3004	D-4
IC3005	C-4
IC3006	B-5, G-5
IC3007	A-4, G-4
IC3008	C-5, F-5
TRANSISTOR	
Q3003	A-3
Q3004	C-3
Q3006	F-4
Q3007	G-4
Q3008	H-3
Q3009	G-4
Q3010	H-5
Q3011	F-4
Q3012	F-1
Q3013	C-1
Q3014	F-4
Q3100	B-4
DIODE	
D3003	E-4
D3004	B-5
D3009	C-1
VARIABLE RESISTOR	
RV3001	B-1, G-1
RV3002	D-1, E-1
RV3003	A-1, G-1

- P1 BOARD -

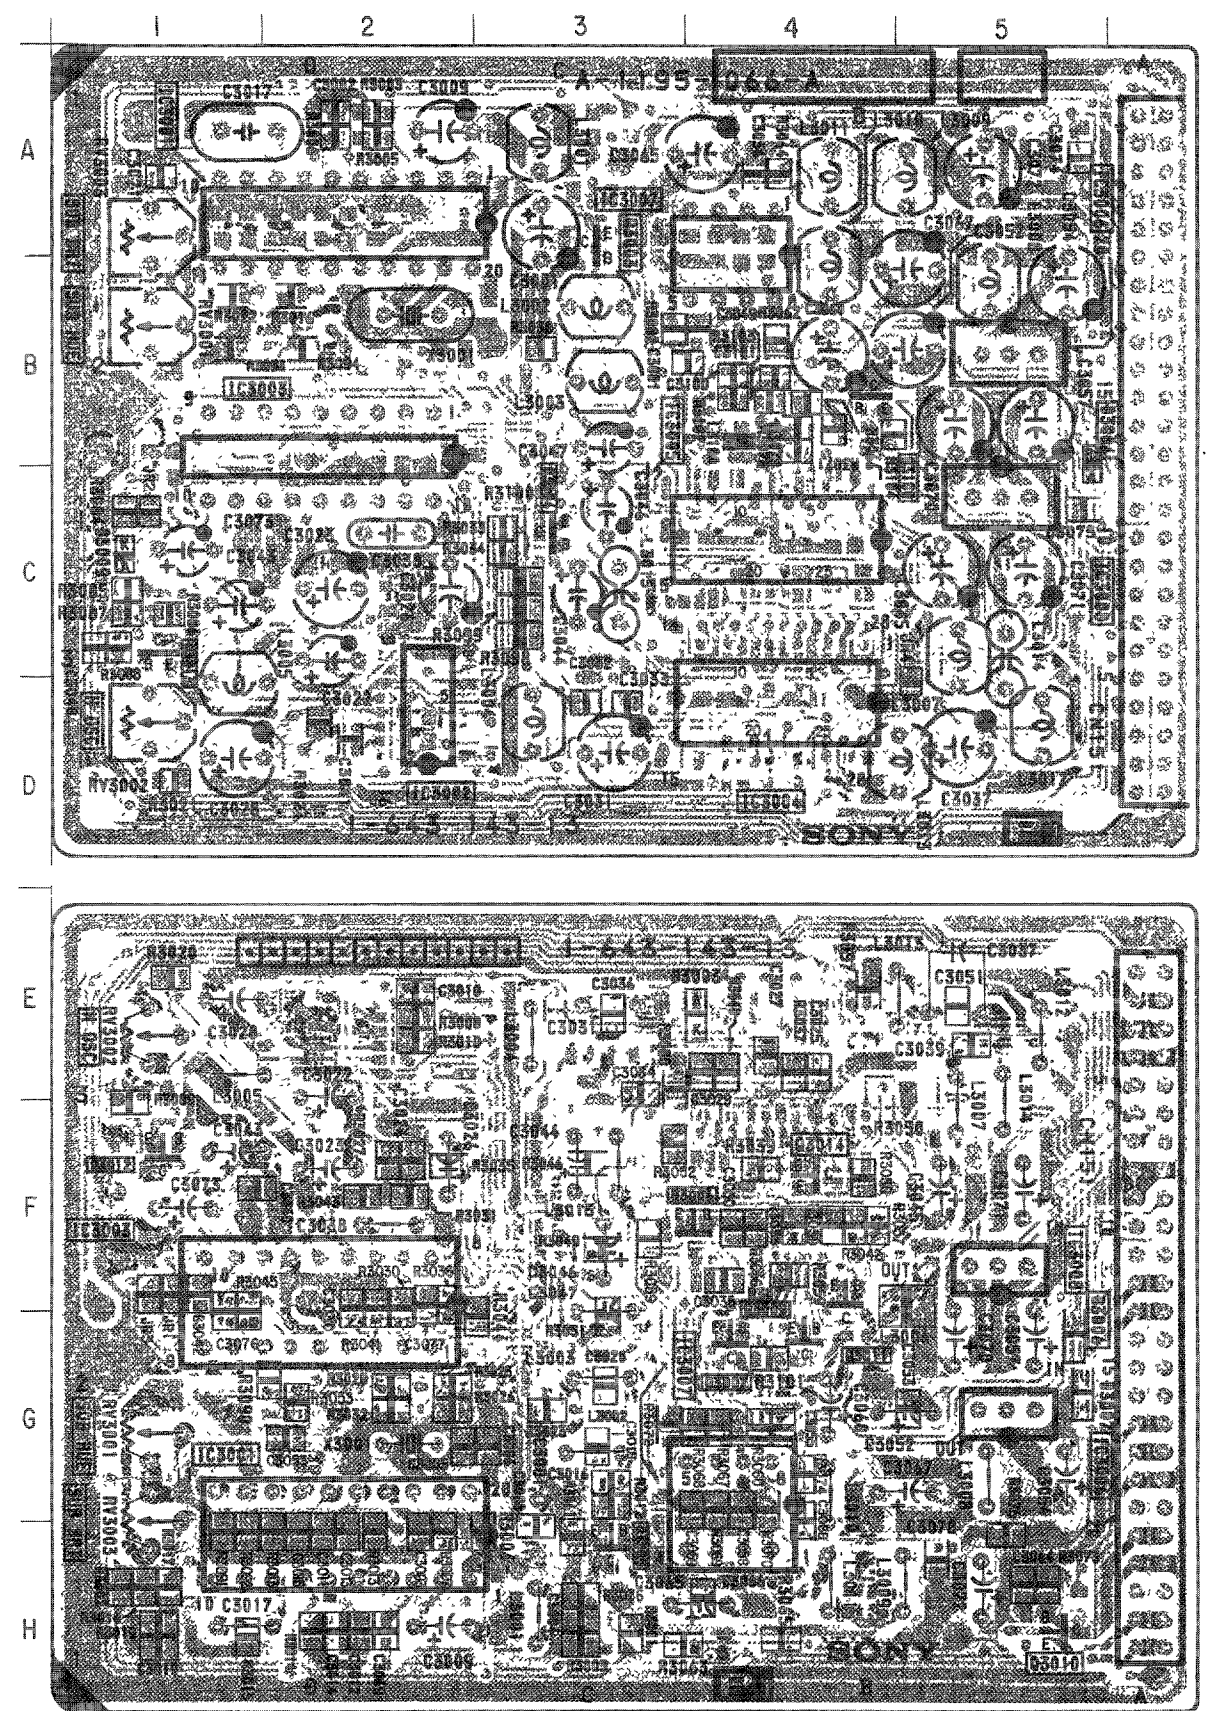


Note :


- [Pattern from the side which enables seeing.]
- [Pattern of the rear side.]

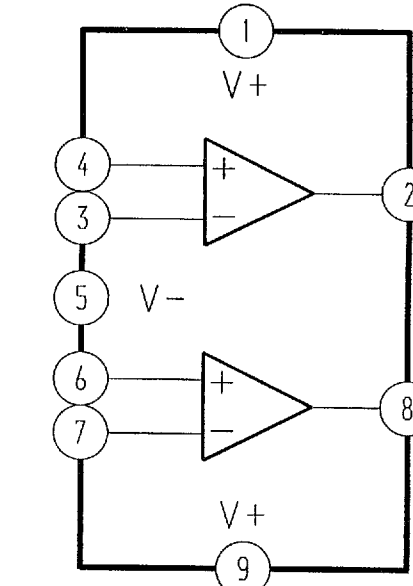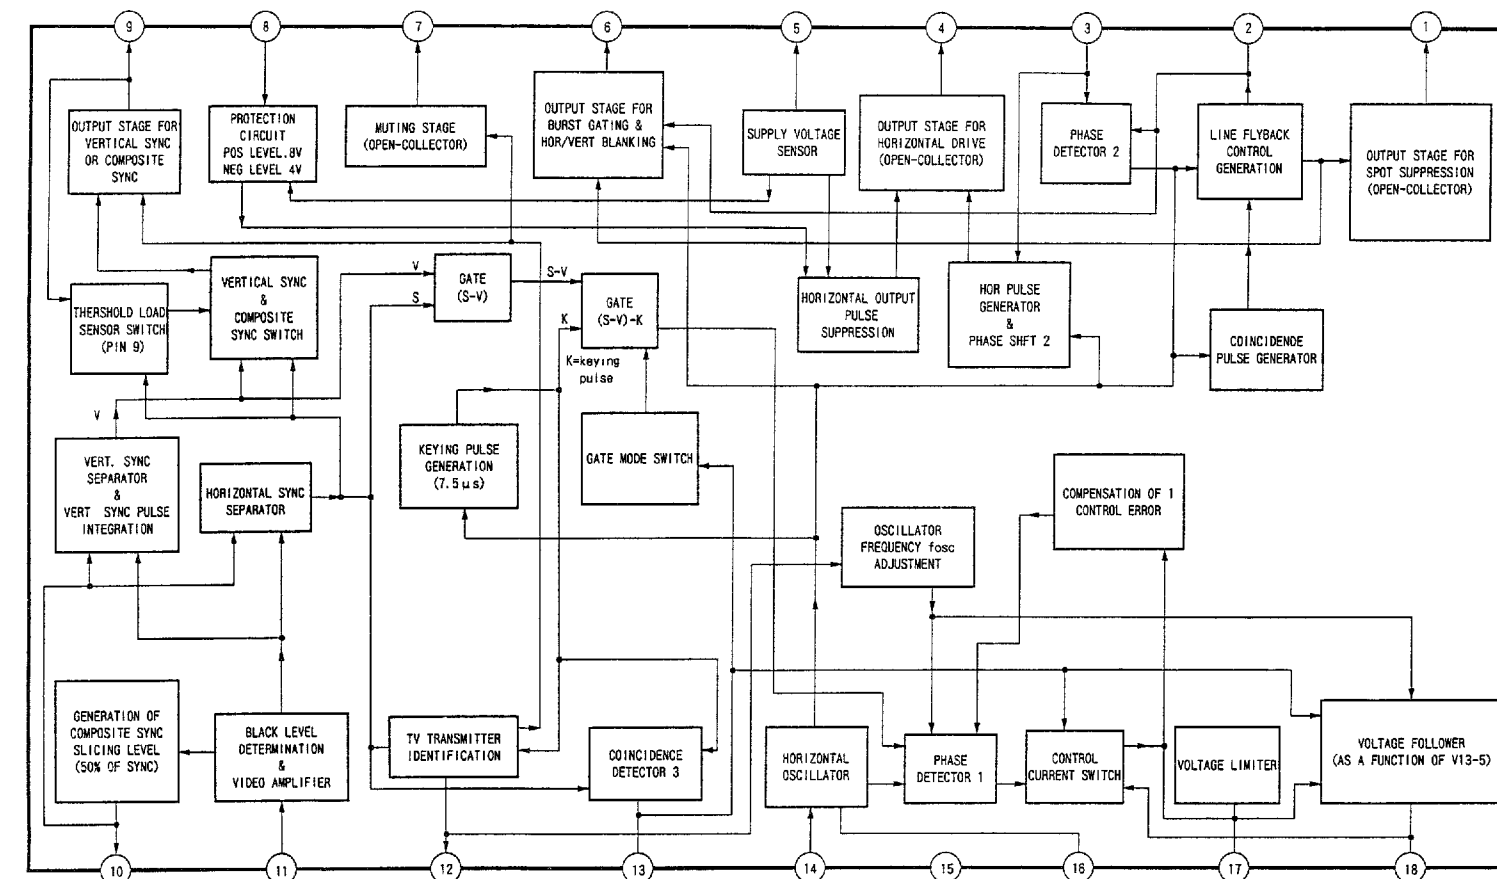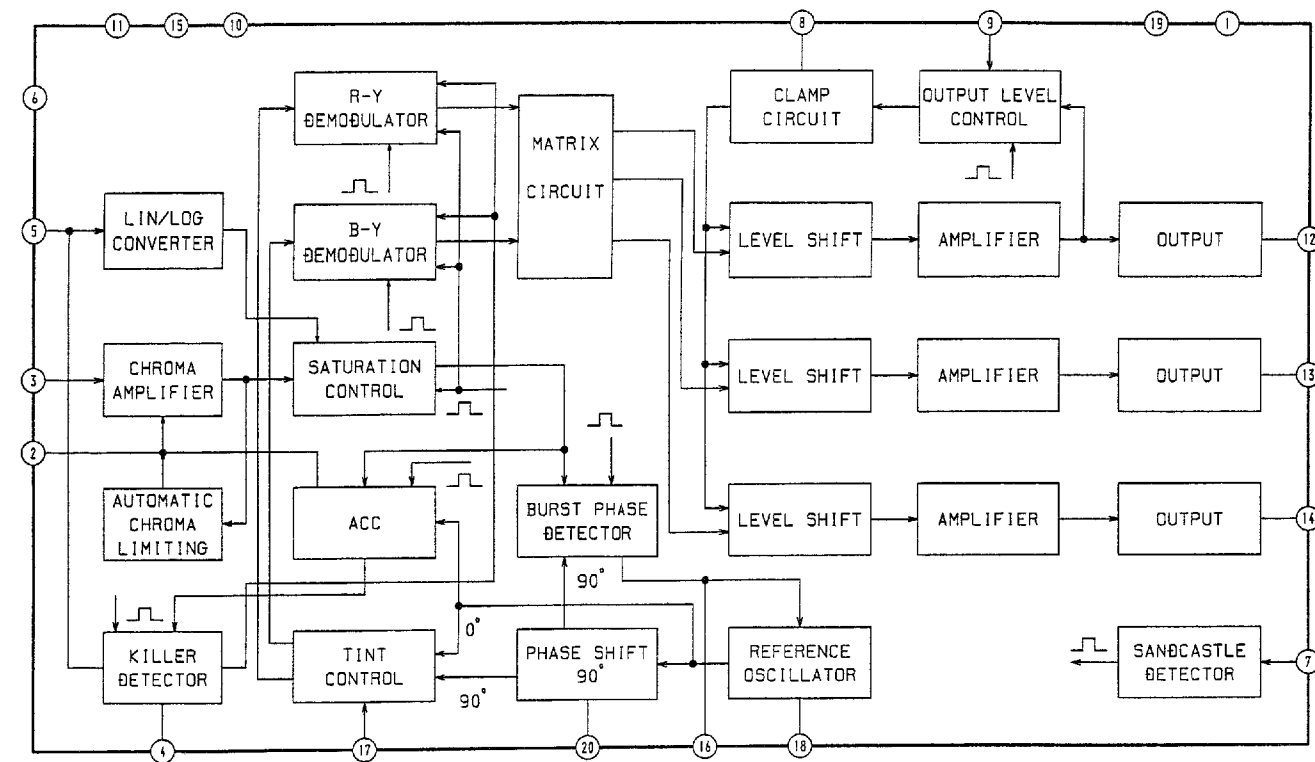



• P1 BOARD WAVEFORMS

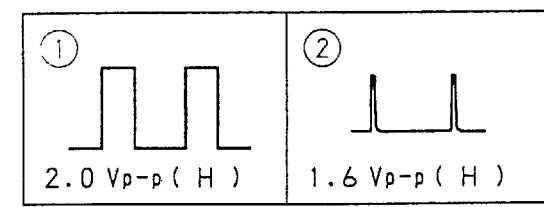

• P3 BOARD WAVEFORMS

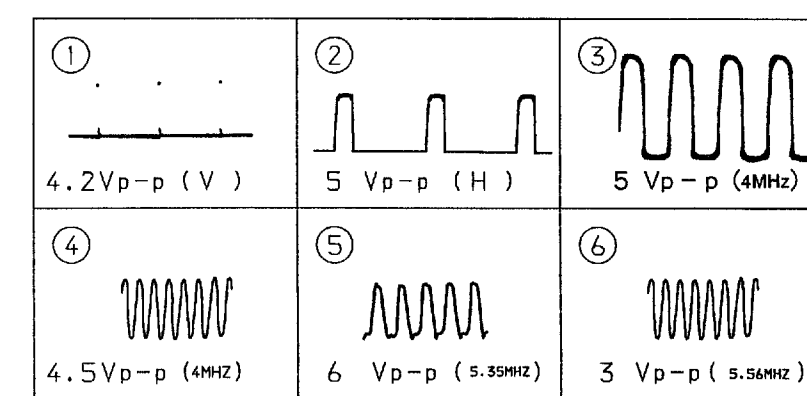


1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30

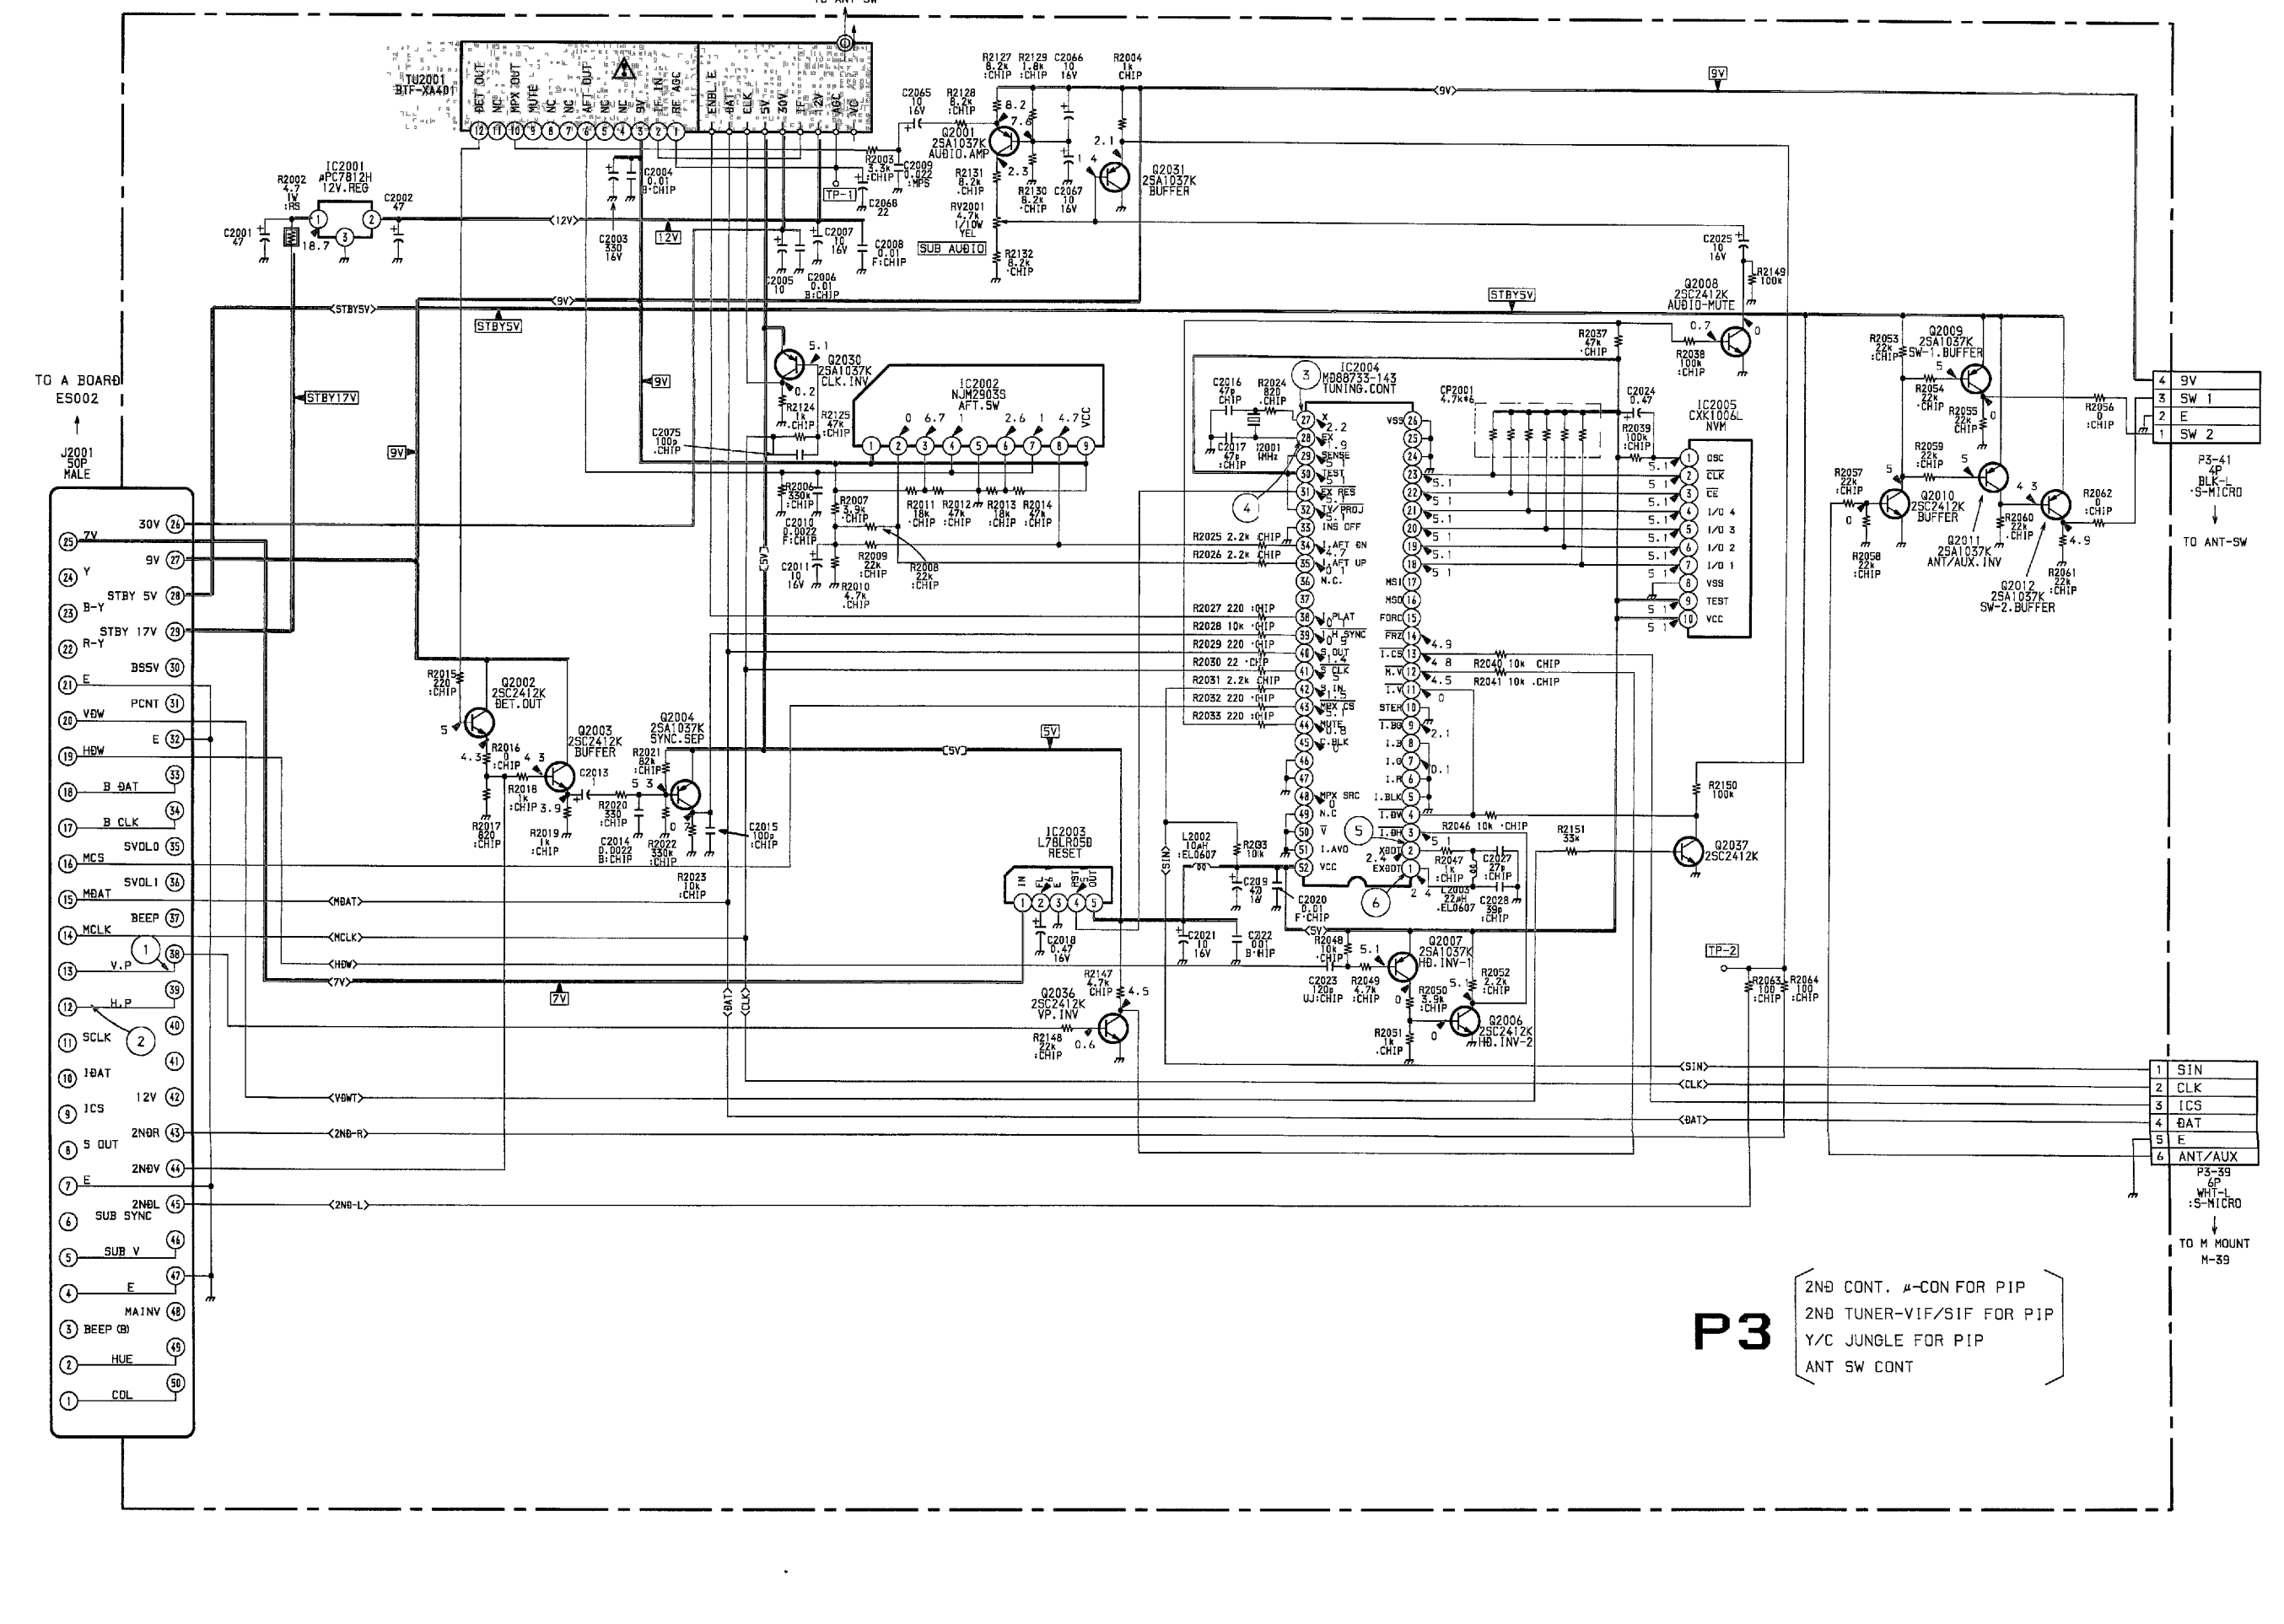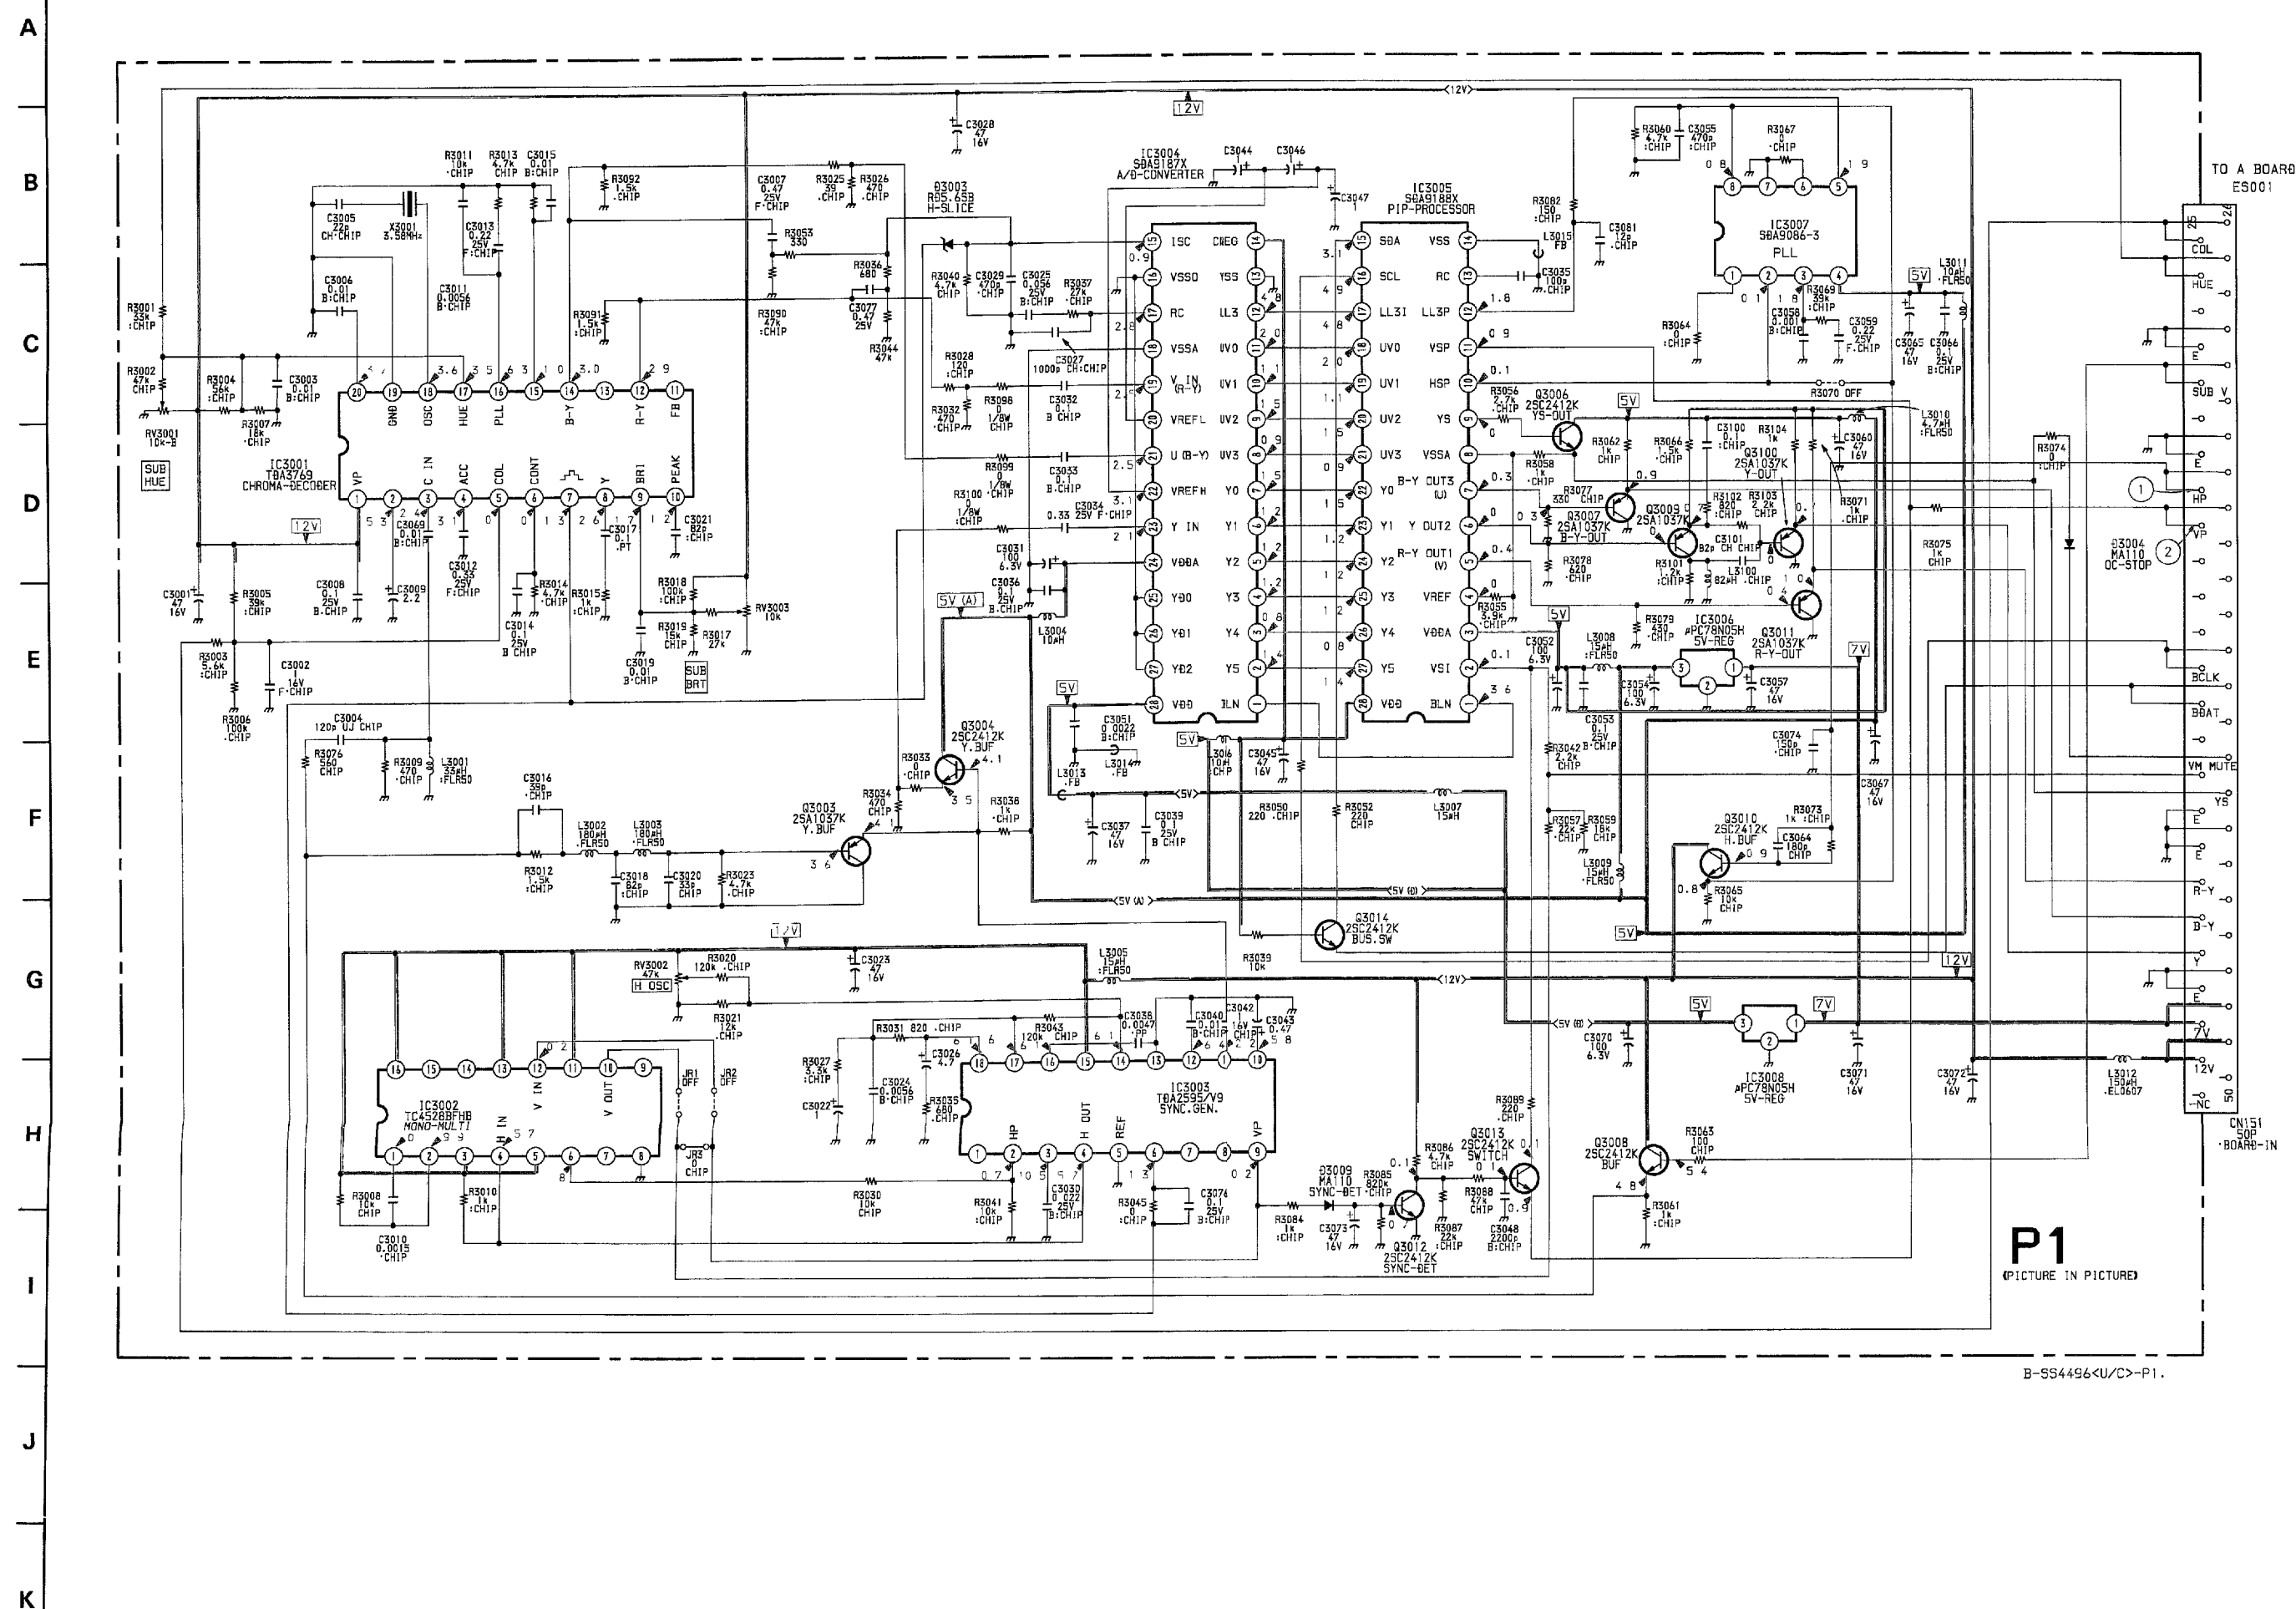

S [SUB - CONTROL, μ - CON, CLOSED CAPTION DECODER] **X2** [SRS SURROUND] **Y2** [MTS DECODER, LNMV, AUDIO CONT.] **C** [R G B OUT]


- S BOARD -

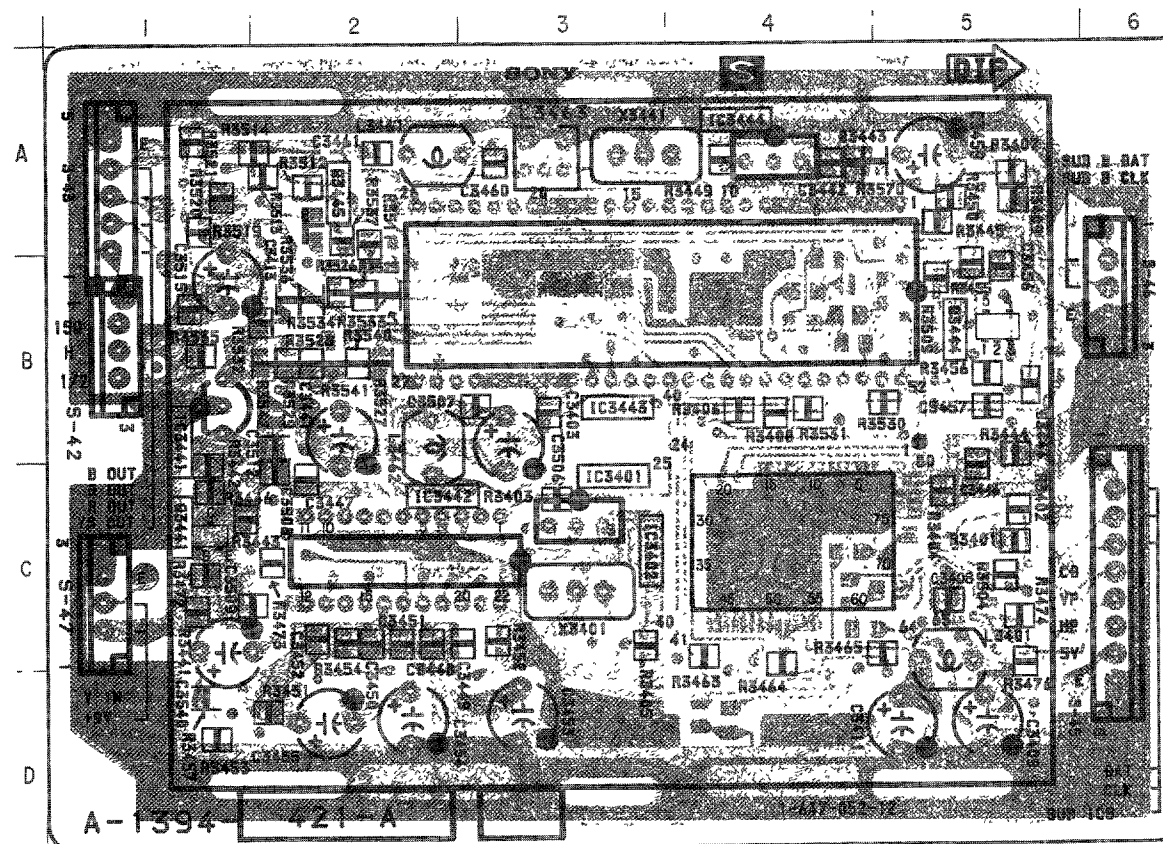

IC	
IC3401	C-3, F-3
IC3402	C-4
IC3441	B-1, G-1
IC3442	C-2, F-2
IC3443	B-3, G-3
IC3444	A-4, H-4


TRANSISTOR	
C3441	C-1
C3444	B-5

DIODE	
D3444	B-5

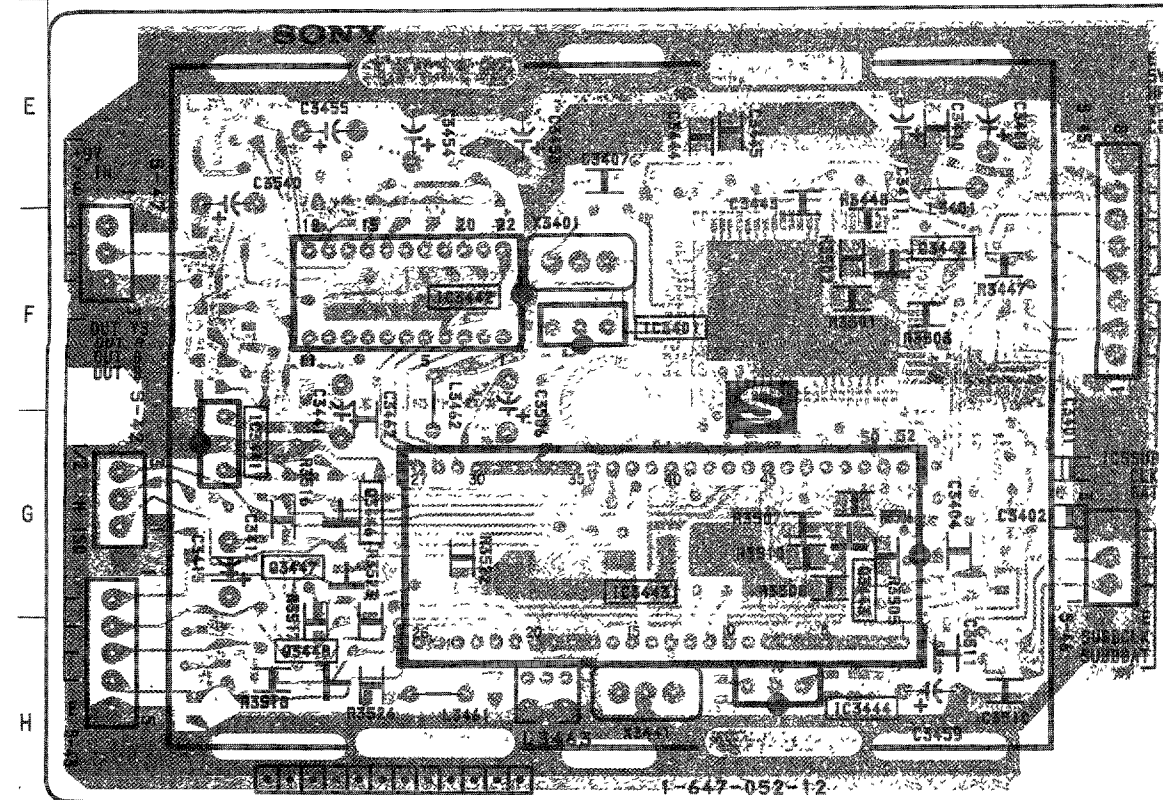

Note:
 • : Pattern from the side which enables seeing.
 • : Pattern of the rear side.


- X2 BOARD -

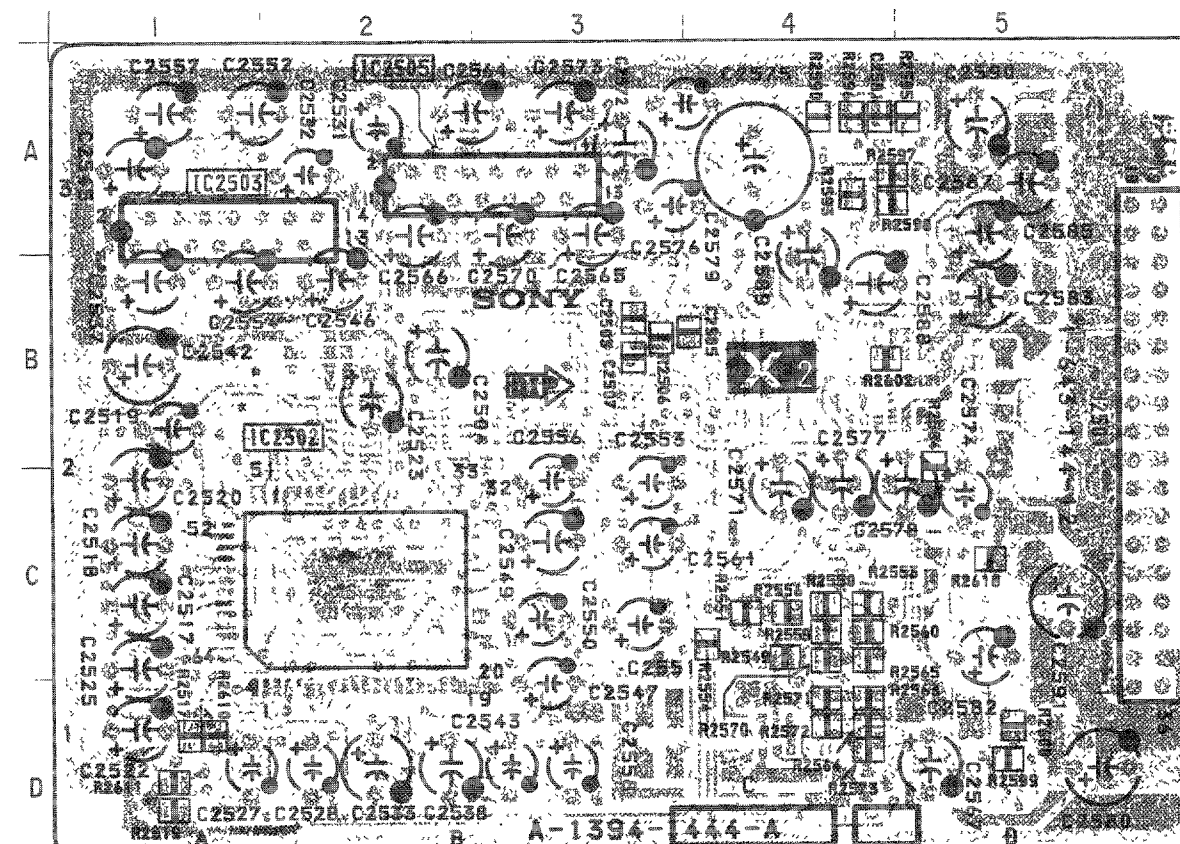

IC	
IC2501	G-3
IC2502	C-2
IC2503	A-1 H-1
IC2504	E-4
IC2505	A-2 H-2
IC2506	G-4
IC2507	E-5
IC2508	H-4


TRANSISTOR	
Q2501	G-2

DIODE	
D2501	F-5
D2502	F-5
D2503	G-5
D2504	F-5

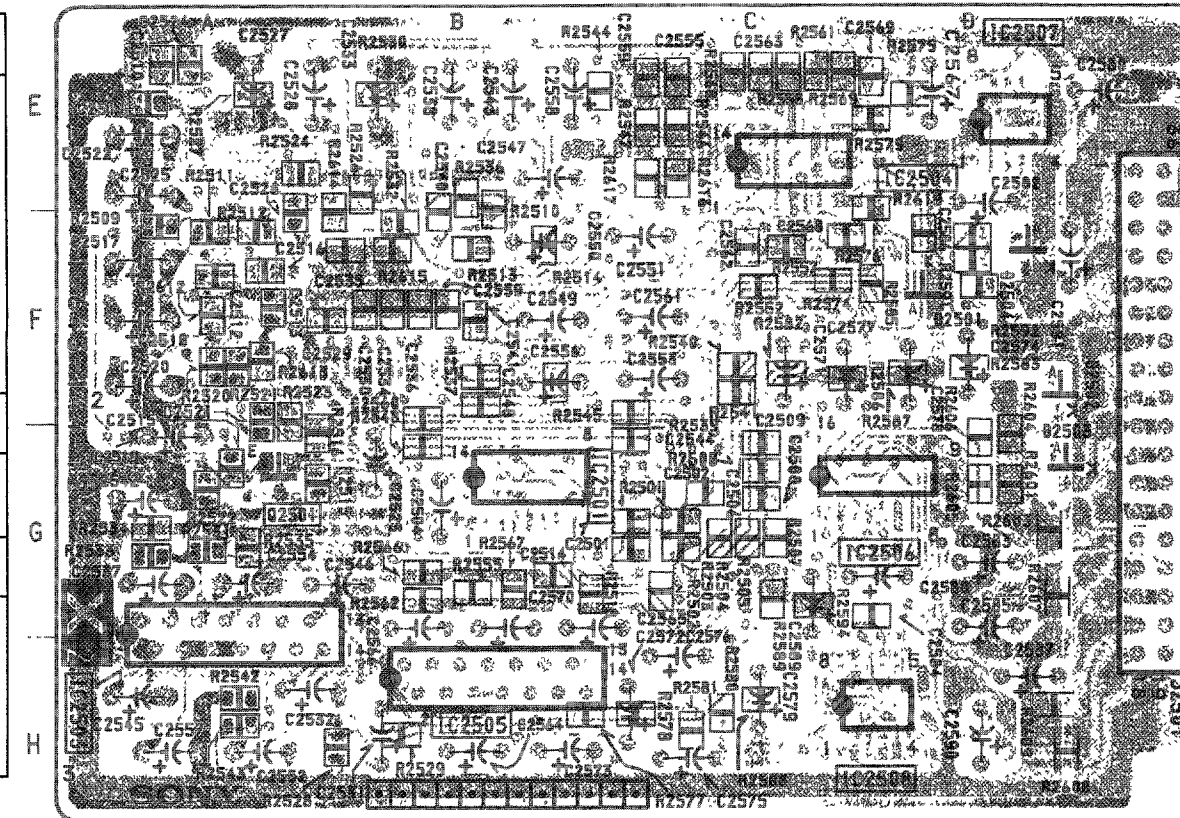

Note:
 • : Pattern from the side which enables seeing.
 • : Pattern of the rear side.


- Y2 BOARD -

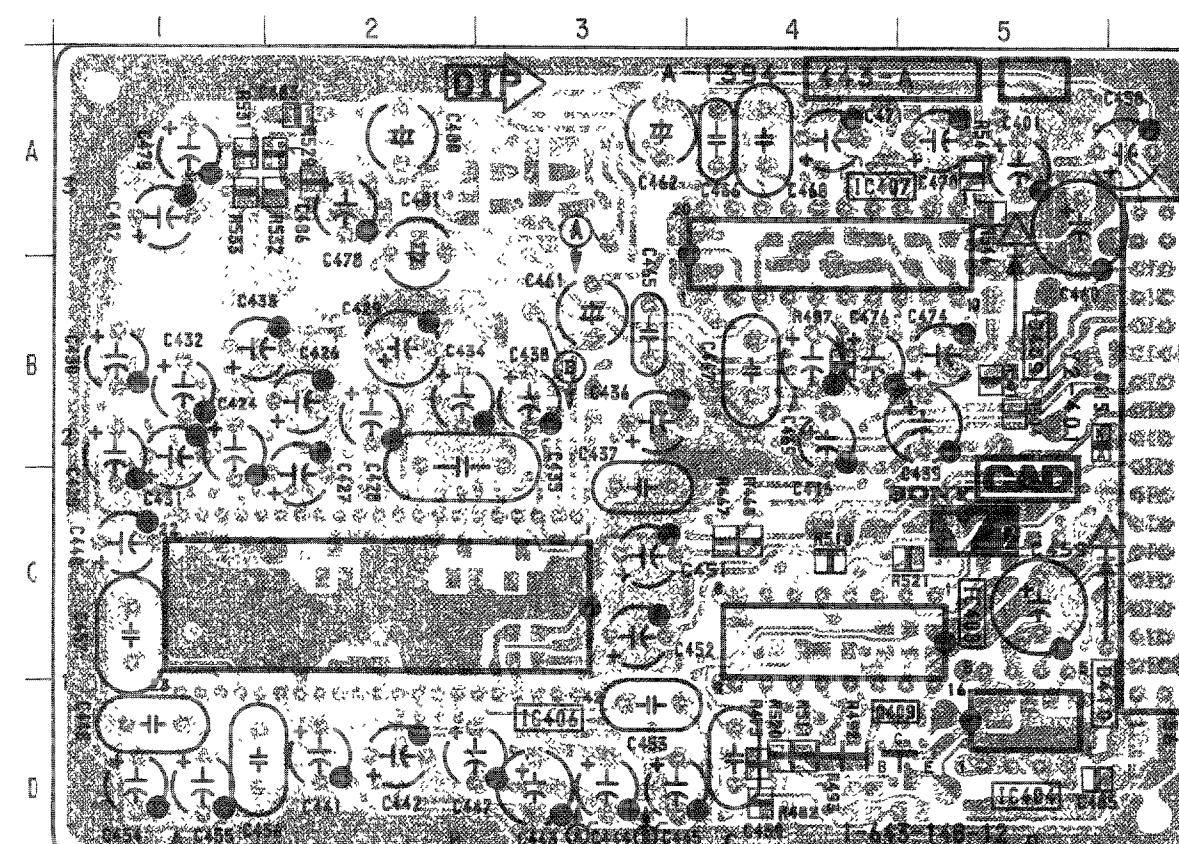

IC	
IC403	H-1
IC404	D-5, E-5
IC406	C-2, F-2
IC407	A-4, G-4
IC408	C-4, F-4


TRANSISTOR	
Q404	H-3
Q405	H-3
Q409	D-5
Q410	E-5

DIODE	
D405	F-2
D406	F-2
D407	F-3
D408	E-4
D409	A-5
D410	C-5, F-5
D413	E-6
D141	F-4
D415	B-5

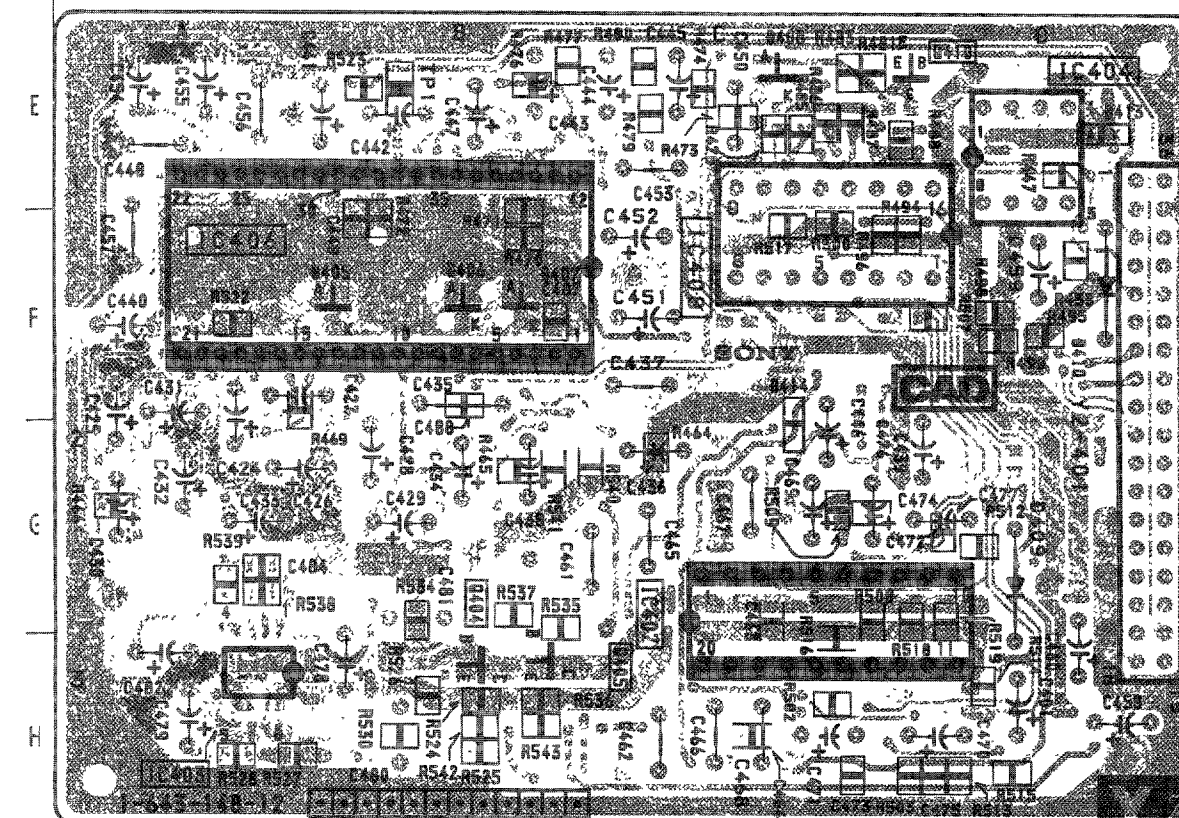

Note:
 • : Pattern from the side which enables seeing.
 • : Pattern of the rear side.

- C BOARD -

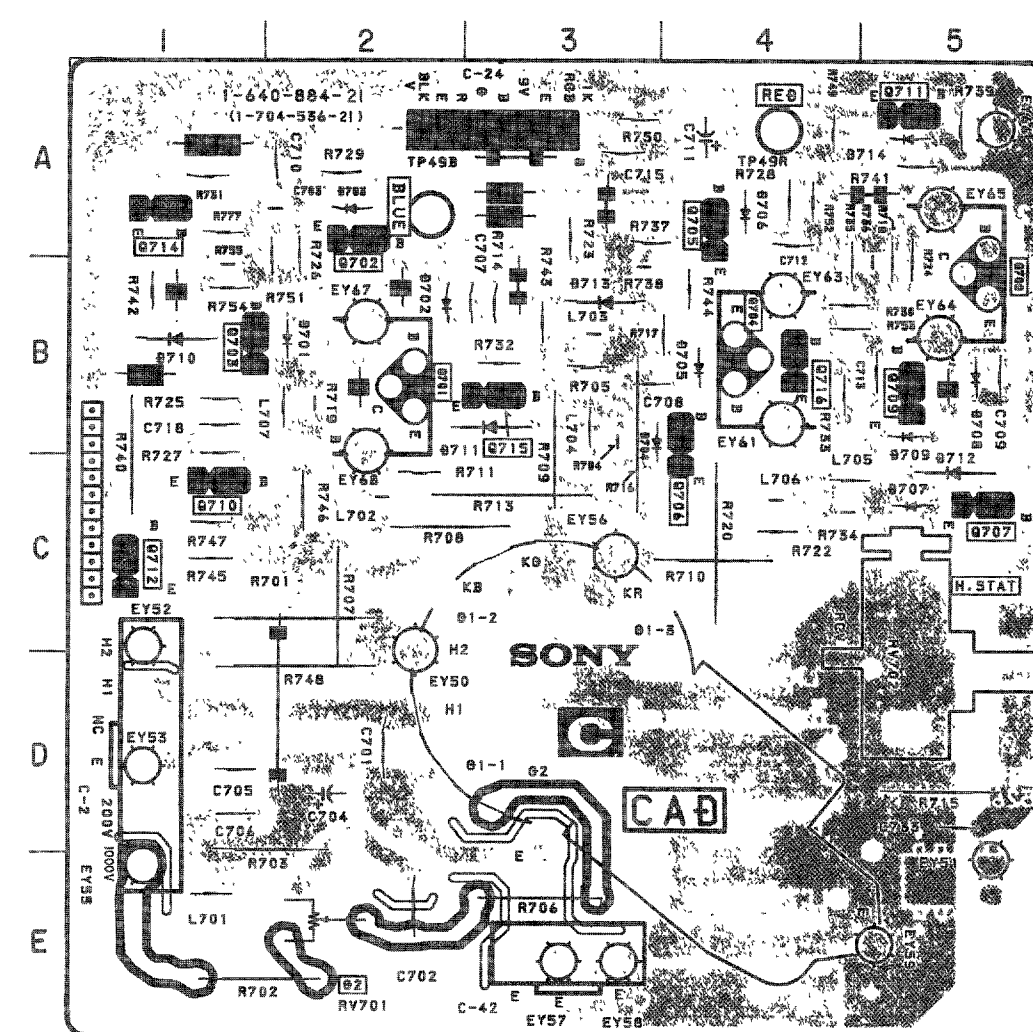


TRANSISTOR	
Q701	B-2
Q702	A-2
Q703	B-1
Q704	B-4
Q705	A-4
Q706	B-4
Q707	C-5
Q708	B-5
Q709	B-5
Q710	C-1
Q711	A-5
Q712	C-1
Q714	A-1
Q715	B-3
Q716	B-4

DIODE	
D701	B-2
D702	B-2
D703	A-2
D704	B-3
D705	B-4
D706	A-4
D707	C-5
D708	B-5
D709	C-5
D710	B-1
D711	B-3
D712	C-5
D713	B-3
D714	A-5

VARIABLE RESISTOR	
RV701	E-2
RV702	D-5

- C BOARD -

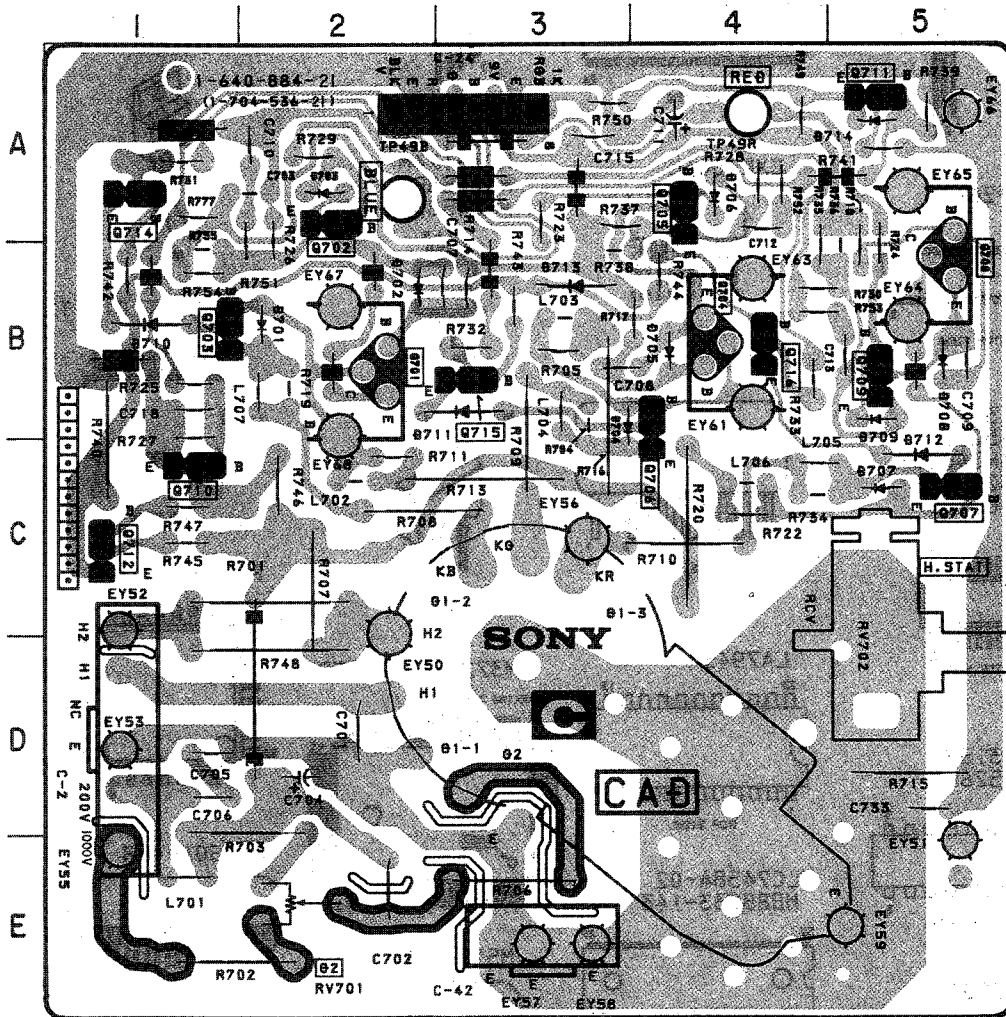


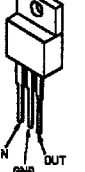
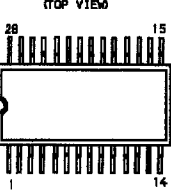
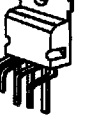

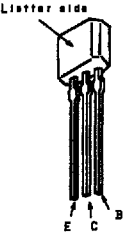

















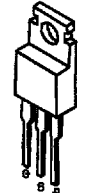



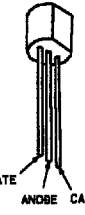
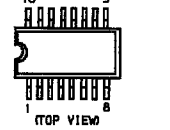
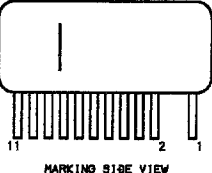
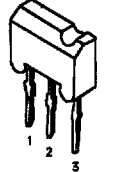
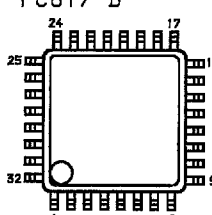
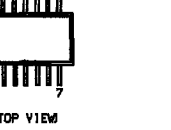



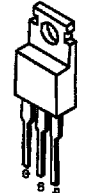

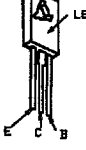
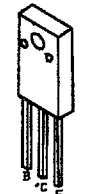

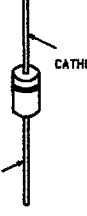
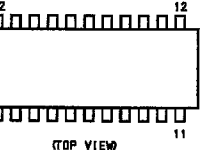
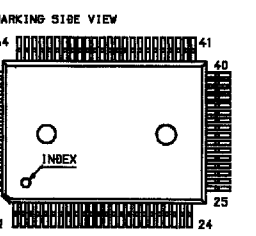
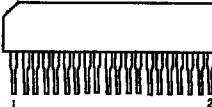
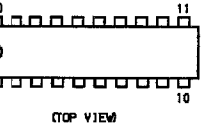
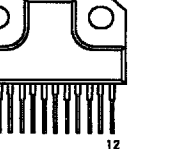
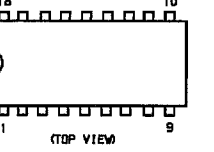
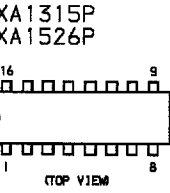

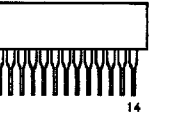


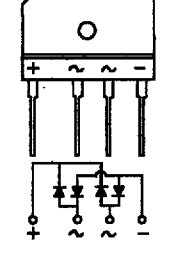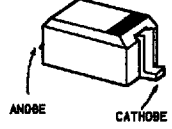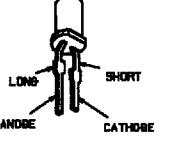
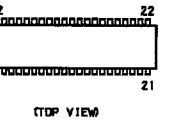
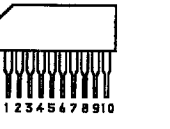
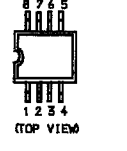
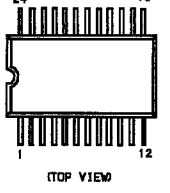
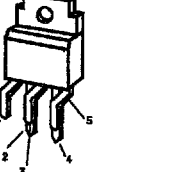
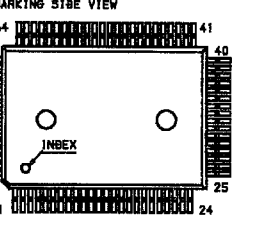
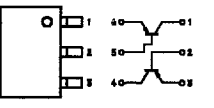



TRANSISTOR	
Q701	B-2
Q702	A-2
Q703	B-1
Q704	B-4
Q705	A-4
Q706	B-4
Q707	C-5
Q708	B-5
Q709	B-5
Q710	C-1
Q711	A-5
Q712	C-1
Q714	A-1
Q715	B-3
Q716	B-4


DIODE	
D701	B-2
D702	B-2
D703	A-2
D704	B-3
D705	B-4
D706	A-4
D707	C-5
D708	B-5
D709	C-5
D710	B-1
D711	B-3
D712	C-5
D713	B-3
D714	A-5

VARIABLE RESISTOR	
RV701	E-2
RV702	D-5


6-5.SEMICONDUCTORS

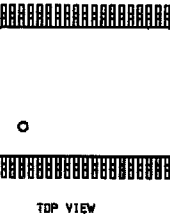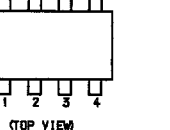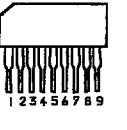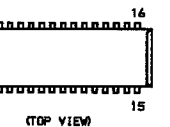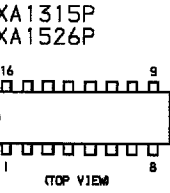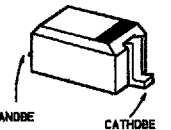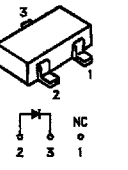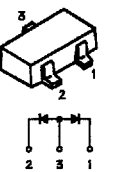AN78N05A #PC78N05H 	CXA1465AS CXA1545S 	L78LR05D-MA 	NJM7805FA NJM7812FA RC7812FA TA7805S TA7812S #PC7812H 	S9A9187X S9A9188X 	T9A8179S 	FMW1 XN1501 	2SA1175-HFE 2SA1309A 2SC2785-HFE 2SC3311A 	2SC4763 (LB SONY) 2SK1916-53-F87 	91NS4 91N20R ERA85-009 RB-100A R912ES-B2 R913ES-B2 R92.2ES-B2 R930ES-B2 R93.3ES-B2 R933ES-B2 R939ES-B2 R939ES-B3 R939ES-B4 R95.1ES-B2 R95.6ES-B1 R95.6ES-B3 R96.2ES-B2 R97.5ES-B2 R99.1ES-L 1SS119 	96SB60L 	R915SB R95.6SB R96.2SB 1SS352 	TLR124 							
CXA1264AS 	CXK1006L 	MC33172ML MC33174M RC4558PS #PC4580G2-E1 	PCA8510T-012-T 	SI-3090CA SI-3120CA 	TMC73C247-10 	IMNT1US XN4401 XN5501 	2SA1837 2SC4793 2S91585-LK 2S92012 	2S92061-E, F 	IMZ1 IMX3 	2SA1015-GR 2SA1091-0 2SA733K 2SC2551-0 	2SB734-34 2SC3733 2S9774-34 	2SK1917 	910SC4MR 	EGP20G EL1Z GPO8D RGP10GPKG3 RGP15GPKG23 RU30A 1SS83 	RGP02-17EL-6433 	SH0R3942 			
CXA1315M MC14528BF MC74HC4053F TC4528BFHB #PB4052B9 	DM-44 	M1V1280-S 	PC817-B 	SN74HC05ANS 	#PC24M05HF #PC2412HF 	2SA1015-GR 2SA1091-0 2SA733K 2SC2551-0 	2SB734-34 2SC3733 2S9774-34 	2SK1917 	2SA1037K 2SA1162-G 2SB709A-Q 2SC1623-L5L6 2SC2412K 2SC2712-YG 2S9601A-Q 	2SC2611 2SC2688-LK 	2SC4664NPR-F 	92S4MF 	93S6M-F RGP02-20EL-6394 RU3AM S2L20UF 	LA7945 	M37201M6-A18FP 	PS2501-1LB 	TA8184P T9A3769 	TA8216H 	TA82595V9 
CXA1315P CXA1526P 	LC7458A-02 MB88733-143 	M51523AL 	RC78L05A 	SBX1618-59 	CXA1373Q 	LM358P LM393P S9A9086-3 #PC358-C #PC393C #PC4557C 24C04A1/P 	NJM2903S 	CXA1387S 	CXA1526P 	MA110 	MA3130 R915M-B1 R918M-B1 R93.3M-B1 R95.1M-B3 	1S2835 1S2836 	1T33 						

SBA9187X
SBA9188X

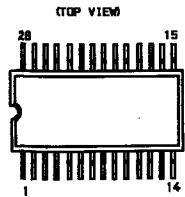


TDA8179S

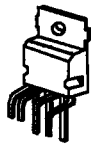

FMW1
XN1501



2SA1175-HFE
2SA1309A
2SC2785-HFE
2SC3311A

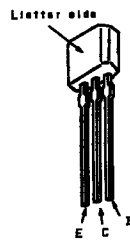


2SC4763 (LB SONY)
2SK1916-53-F87




Ø1NS4
Ø1N20R
Ø1A85-01
RB-100A
RØ12ES-1
RØ13ES-1
RØ2.2ES-1
RØ30ES-1
RØ3.3ES-1
RØ33ES-1
RØ39ES-1
RØ39ES-1
RØ39ES-1
RØ5.1ES-1
RØ5.6ES-1
RØ5.6ES-1
RØ6.2ES-1
RØ7.5ES-1
RØ9.1ES-1
1SS119


S1-3090CA
S1-3120CA

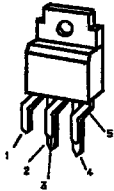

TMC73C247-10

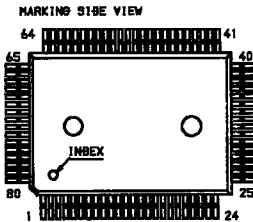

IMNT1US
XN4401
XN5501

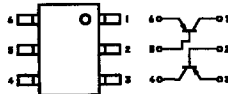


2SA1837
2SC4793
2SD1585-LK
2SD2012

2SD2061-E, F




SN74HC05ANS

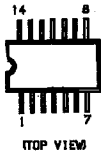

#PC24M05HF
#PC2412HF



IMZ1
IMX3

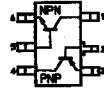


2SK1917



Ø10SC4M



TAB184P
TDA3769

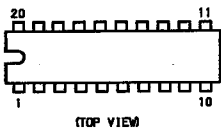

2SA1015-GR
2SA1091-0
2SA733K
2SC2551-0




2SB734-34
2SC3733
2SB774-34




Ø2S4MF




TAB216H

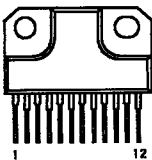

2SA1037K
2SA1162-G
2SB709A-Q
2SC1623-L5L6
2SC2412K
2SC2712-YG
2SD601A-Q

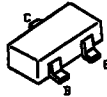


2SC2611
2SC2688-LK

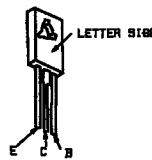

CATHODE

Ø3S6M-F
RGP02-1
RU3AM
S2L20UF

TDA2595V9

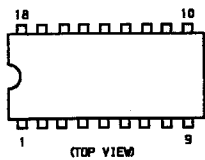


2SC4664NPR-F




ANODE

Ø1N54
Ø1N20R
ERA85-009
RB-100A
RØ12ES-B2
RØ13ES-B2
RØ2.2ES-B2
RØ30ES-B2
RØ3.3ES-B2
RØ33ES-B2
RØ39ES-B2
RØ39ES-B3
RØ39ES-B4
RØ5.1ES-B2
RØ5.6ES-B1
RØ5.6ES-B3
RØ6.2ES-B2
RØ7.5ES-B2
RØ9.1ES-L
1S5119


Ø6SB60L

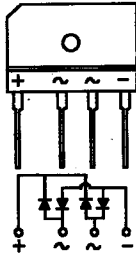

RØ15SB
RØ5.6SB
RØ6.2SB
1S5352

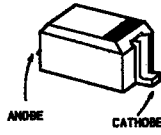


TLR124

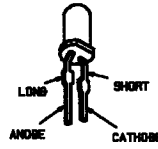

EGP20G
EL1Z
GPØ8Ø
RGP1ØGPKG3
RGP15GPKG23
RU3ØA
1S583

RGPØ2-17EL-6433

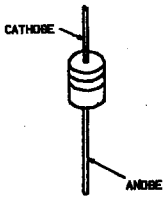


Ø1ØSC4MR




Ø2S4MF




Ø3S6M-F
RGPØ2-2ØEL-6394
RU3AM
S2L2ØUF

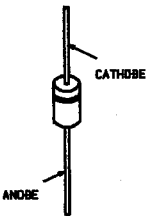


FMN1

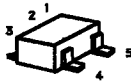


MA11Ø

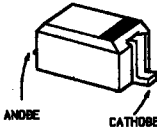


MA313Ø
RØ15M-B1
RØ18M-B1
RØ3.3M-B1
RØ5.1M-B3

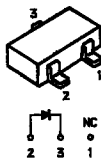


SHØR3Ø42

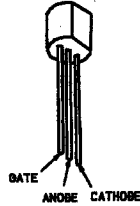

1S2835
1S2836

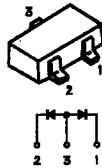

1T33

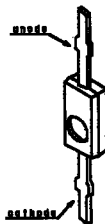

SECTION 7
EXPLODED VIEWS


NOTE:

- Items with no part number and no description are not stocked because they are seldom required for routine service.
- The construction parts of an assembled part are indicated with a collation number in the remark column.
- Items marked " * " are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

The components identified by shading and mark **△** are critical for safety. Replace only with part number specified.

7-1. CHASSIS


- : BVTP 3 × 12 7-685-648-79
- : BVTP 4 × 16 7-685-663-79

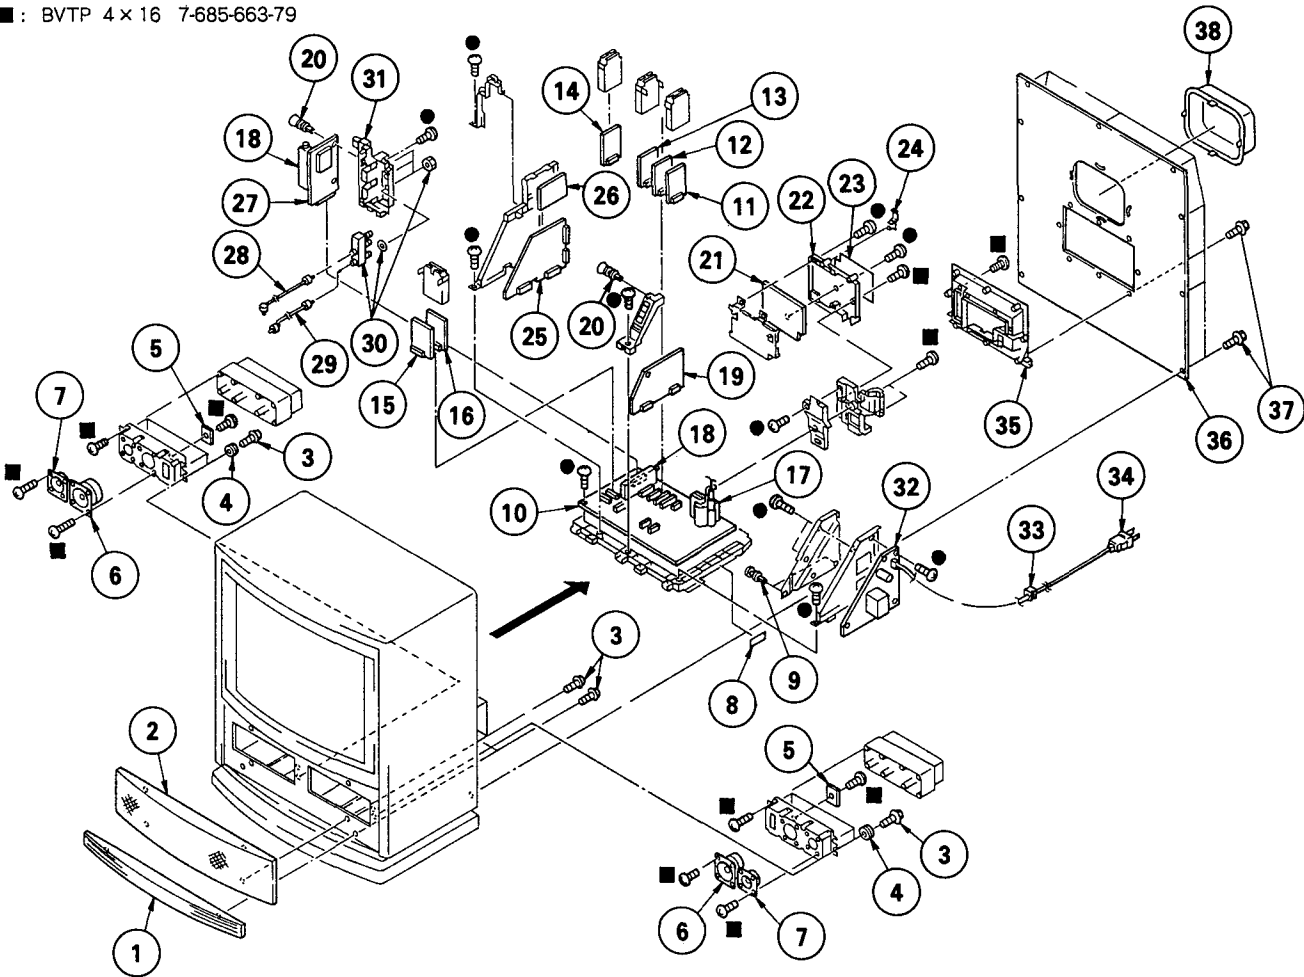

REF.NO.	PART NO.	DESCRIPTION	REMARK	REF.NO.	PART NO.	DESCRIPTION	REMARK
1	4-389-992-01	ORNAMENT, SP		20	*4-397-418-01	RIVET, T TYPE	
2	X-4388-457-1	GRILLE ASSY, SP		21	*A-1373-414-A	UT BOARD, COMPLETE	
3	4-384-096-01	SCREW (4X16), TAPPING, +P		22	4-035-204-01	BRACKET, UT	
4	4-374-745-11	CUSHION (A)		23	4-035-982-11	LABEL, UT	
5	*1-648-962-11	N BOARD		24	4-329-127-00	CLAMP, CORD	
6	1-503-917-11	SPEAKER		25	*A-1373-412-A	U BOARD, COMPLETE	
7	1-544-095-11	SPEAKER		26	*A-1394-421-A	S BOARD, COMPLETE	
8	3-703-044-26	LABEL, CAUTION		27	*A-1195-068-A	P3 BOARD, COMPLETE	
9	4-374-303-01	RIVET, NYLON		28	*1-555-400-00	CABLE, PIN	
10	*A-1297-138-A	A BOARD, COMPLETE	11~16	29	*1-557-056-31	CABLE, P-P	
11	*A-1346-132-A	E1 BOARD, COMPLETE		30	△ 1-417-178-11	SELECTOR, ANTENNA (AS-2)	
12	*A-1346-137-A	E2 BOARD, COMPLETE		31	4-035-203-01	TERMINAL BOARD, ANTENNA	
13	*A-1306-436-A	M BOARD, COMPLETE		32	*A-1316-161-A	G BOARD, COMPLETE	
14	*A-1195-066-A	P1 BOARD, COMPLETE		33	△ 4-334-223-03	GROMMET, AC CORD	
15	*A-1394-443-A	Y2 BOARD, COMPLETE		34	△ 1-696-002-12	CORD, POWER (WITH NOISE FILTER) 7A/125V	
16	*A-1394-444-A	X2 BOARD, COMPLETE		35	4-040-917-01	COVER, ANTENNA TERMINAL	
17	△ 1-439-513-11	TRANSFORMER ASSY, FLYBACK (NY-260243)		36	*4-040-916-01	BOARD, REAR	
18	△ 1-693-102-22	TUNER (BTR-XA401)		37	4-378-522-01	SCREW, TAPPING, HEXAGON HEAD	
19	*A-1341-665-A	D BOARD, COMPLETE		38	*4-032-338-11	COVER, NECK	

7-2. PICTURE TUBE

- : BVTP 3 × 12 7-685-648-79
- : BVTP 4 × 16 7-685-663-79
- : BOLT HEXAGON 5 × 20 7-685-663-79

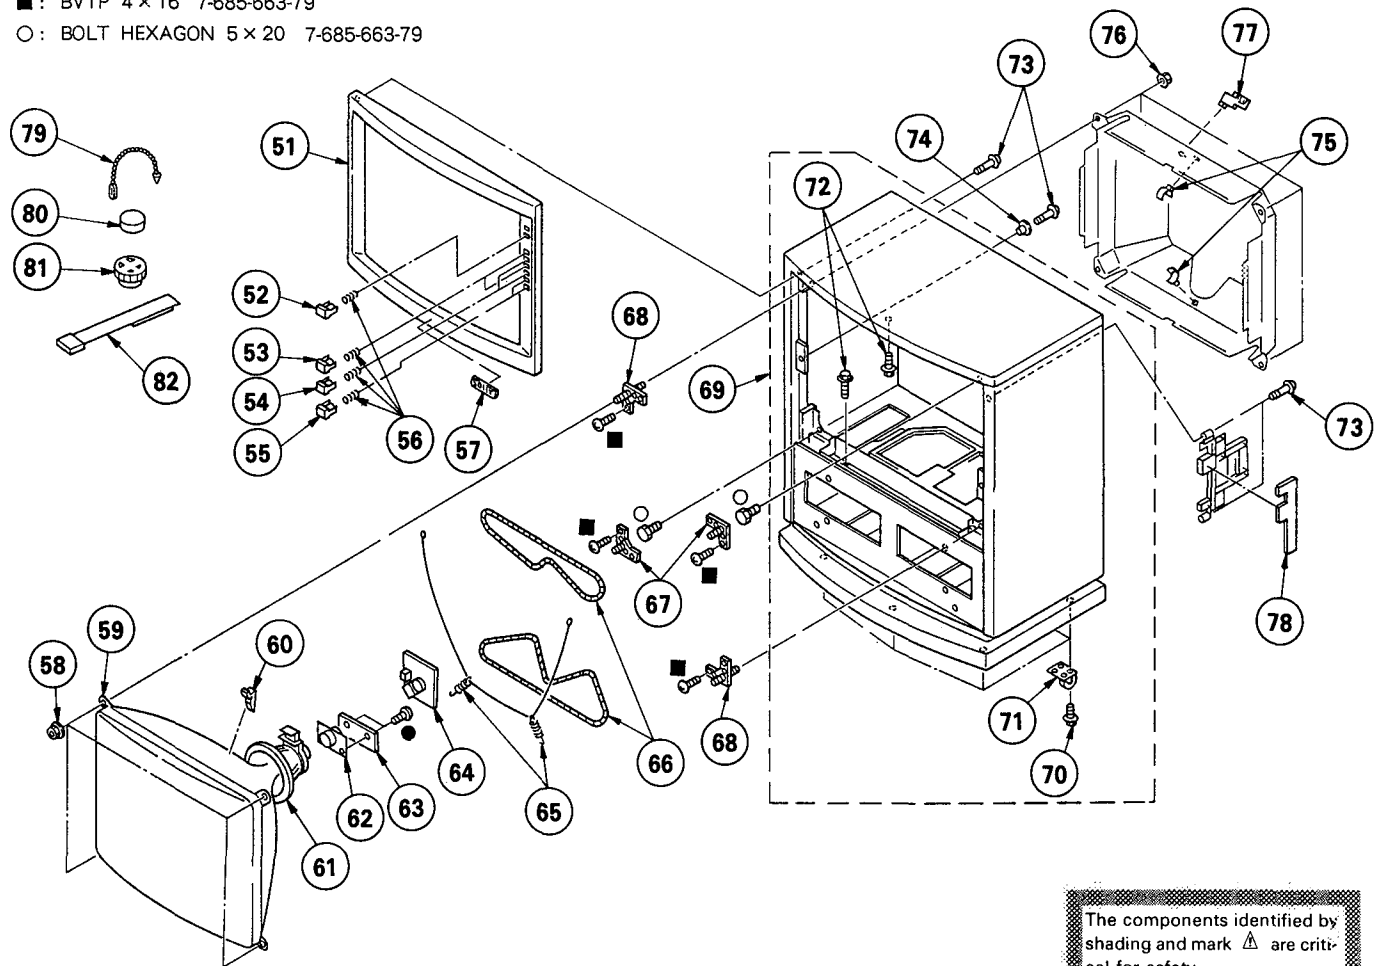

The components identified by shading and mark Δ are critical for safety. Replace only with part number specified.

REF.NO.	PART NO.	DESCRIPTION	REMARK	REF.NO.	PART NO.	DESCRIPTION	REMARK
51	4-040-914-01	BEZEL		67	4-383-180-11	BRACKET (A), PICTURE TUBE	
52	4-388-327-01	BUTTON, POWER		68	4-383-181-11	BRACKET (B), PICTURE TUBE	
53	4-383-185-01	BUTTON, PLUS		69	*X-4031-229-1	CABINET ASSY	70~72
54	4-383-186-01	BUTTON, MINUS		70	3-703-805-01	SCREW, TP, HEXAGON HEAD, WASHER	
55	4-383-187-01	BUTTON, SELECTION		71	4-395-013-01	CASTER, SWIVEL	
56	3-571-850-11	SPRING, COMPRESSION		72	3-703-805-21	SCREW, TP, HEXAGON HEAD, WASHER	
57	3-704-179-12	EMBLEM (NO.9), SONY		73	4-319-520-11	SCREW, SPECIAL (+PW4X30)	
58	4-387-204-01	NUT, SPECIAL, PICTURE TUBE		74	*4-349-110-00	HOLDER, SCREW	
59	Δ 3-733-723-05	PICTURE TUBE (A803YV50X)		75	*4-371-629-01	STOPPER, WIRE	
60	3-704-495-01	SPACER, DY		76	4-306-034-00	NUT, (B) (M5), FLANGE	
61	Δ 4-451-315-11	DEFLECTION YOKE (Y34F1A)		77	4-033-681-01	HOLDER, LEAD	
62	Δ 1-452-579-11	NECK ASSY, PICTURE TUBE (MA322)		78	*1-648-961-11	HS3 BOARD	
63	*A-1342-223-A	V BOARD, COMPLETE		79	4-308-870-00	CLIP, LEAD WIRE	
64	*A-1331-272-A	C BOARD, COMPLETE		80	1-452-032-00	MAGNET, DISK; 10MM φ	
65	4-036-329-01	SPRING (B), TENSION		81	1-452-094-00	MAGNET, ROTATABLE DISK; 15MM φ	
66	Δ 1-402-952-11	COIL, DEMAGNETIZATION		82	X-4306-312-0	PERMALLOY ASSY, CONVERGENCE	

P1

REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
C3059	1-164-222-11	CERAMIC CHIP 0.22MF	25V				
C3060	1-124-589-11	ELECT 47MF	20% 16V				
C3064	1-163-123-00	CERAMIC CHIP 180PF	5% 50V				
C3065	1-124-589-11	ELECT 47MF	20% 16V				
C3066	1-164-004-11	CERAMIC CHIP 0.1MF	10% 25V				
C3067	1-124-589-11	ELECT 47MF	20% 16V				
C3069	1-164-232-11	CERAMIC CHIP 0.01MF	10% 50V				
C3070	1-126-177-11	ELECT 100MF	20% 6.3V				
C3071	1-124-589-11	ELECT 47MF	20% 16V				
C3072	1-124-589-11	ELECT 47MF	20% 16V				
C3073	1-124-589-11	ELECT 47MF	20% 16V				
C3074	1-163-121-00	CERAMIC CHIP 150PF	5% 50V				
C3076	1-164-004-11	CERAMIC CHIP 0.1MF	10% 25V				
C3077	1-164-005-11	CERAMIC CHIP 0.47MF	25V				
C3081	1-163-095-00	CERAMIC CHIP 12PF	5% 50V				
C3100	1-164-004-11	CERAMIC CHIP 0.1MF	10% 25V				
C3101	1-163-115-00	CERAMIC CHIP 82PF	5% 50V				
<CONNECTOR>							
CN151	1-573-965-21	PIN, CONNECTOR (PC BOARD) 50P					
<DIODE>							
D3003	8-719-158-15	DIODE RD5.6SB					
D3004	8-719-404-46	DIODE MA110					
D3009	8-719-404-46	DIODE MA110					
<IC>							
IC3001	8-759-046-25	IC TDA3769					
IC3002	8-759-009-46	IC MC145288BF					
IC3003	8-759-513-48	IC TDA2595/V9					
IC3004	8-759-088-90	IC SDA9187X					
IC3005	8-759-088-91	IC SDA9188X					
IC3006	8-759-112-06	IC UPC78N05H					
IC3007	8-759-046-27	IC SDA9086-3					
IC3008	8-759-112-06	IC UPC78N05H					
<COIL>							
L3001	1-410-476-11	INDUCTOR 33UH					
L3002	1-408-424-00	INDUCTOR 180UH					
L3003	1-408-424-00	INDUCTOR 180UH					
L3004	1-410-470-11	INDUCTOR 10UH					
L3005	1-410-472-41	INDUCTOR 15UH					
L3006	1-412-788-31	INDUCTOR 10UH					
L3007	1-410-472-41	INDUCTOR 15UH					
L3008	1-410-472-41	INDUCTOR 15UH					
L3009	1-410-472-41	INDUCTOR 15UH					
L3010	1-410-466-41	INDUCTOR 4.7UH					
L3011	1-410-470-11	INDUCTOR 10UH					
L3012	1-410-676-31	INDUCTOR 150UH					
L3013	1-412-911-11	INDUCTOR, FERRITE BEAD					
L3014	1-412-911-11	INDUCTOR, FERRITE BEAD					
L3015	1-412-911-11	INDUCTOR, FERRITE BEAD					
L3100	1-410-392-11	INDUCTOR 82UH					
				<TRANSISTOR>			
				Q3003	8-729-216-22	TRANSISTOR 2SA1162-G	
				Q3004	8-729-422-27	TRANSISTOR 2SD601A-Q	
				Q3006	8-729-422-27	TRANSISTOR 2SD601A-Q	
				Q3007	8-729-216-22	TRANSISTOR 2SA1162-G	
				Q3008	8-729-422-27	TRANSISTOR 2SD601A-Q	
				Q3009	8-729-216-22	TRANSISTOR 2SA1162-G	
				Q3010	8-729-422-27	TRANSISTOR 2SD601A-Q	
				Q3011	8-729-216-22	TRANSISTOR 2SA1162-G	
				Q3012	8-729-422-27	TRANSISTOR 2SD601A-Q	
				Q3013	8-729-422-27	TRANSISTOR 2SD601A-Q	
				Q3014	8-729-422-27	TRANSISTOR 2SD601A-Q	
				Q3100	8-729-216-22	TRANSISTOR 2SA1162-G	
				<RESISTOR>			
				JR1	1-216-295-00	METAL GLAZE 0 5%	1/10W
				JR2	1-216-295-00	METAL GLAZE 0 5%	1/10W
				R3001	1-216-085-00	METAL GLAZE 33K 5%	1/10W
				R3002	1-216-089-91	METAL GLAZE 47K 5%	1/10W
				R3003	1-216-067-00	METAL GLAZE 5.6K 5%	1/10W
				R3004	1-216-091-00	METAL GLAZE 56K 5%	1/10W
				R3005	1-216-689-11	METAL GLAZE 39K 5%	1/10W
				R3006	1-216-097-00	METAL GLAZE 100K 5%	1/10W
				R3007	1-216-079-00	METAL GLAZE 18K 5%	1/10W
				R3008	1-216-073-00	METAL GLAZE 10K 5%	1/10W
				R3009	1-216-041-00	METAL GLAZE 470 5%	1/10W
				R3010	1-216-049-00	METAL GLAZE 1K 5%	1/10W
				R3011	1-216-073-00	METAL GLAZE 10K 5%	1/10W
				R3012	1-216-053-00	METAL GLAZE 1.5K 5%	1/10W
				R3013	1-216-065-00	METAL GLAZE 4.7K 5%	1/10W
				R3014	1-216-065-00	METAL GLAZE 4.7K 5%	1/10W
				R3015	1-216-049-00	METAL GLAZE 1K 5%	1/10W
				R3017	1-216-083-00	METAL GLAZE 27K 5%	1/10W
				R3018	1-216-097-00	METAL GLAZE 100K 5%	1/10W
				R3019	1-216-077-00	METAL GLAZE 15K 5%	1/10W
				R3020	1-216-099-00	METAL GLAZE 120K 5%	1/10W
				R3021	1-216-075-00	METAL GLAZE 12K 5%	1/10W
				R3023	1-216-065-00	METAL GLAZE 4.7K 5%	1/10W
				R3024	1-216-077-00	METAL GLAZE 15K 5%	1/10W
				R3025	1-216-015-00	METAL GLAZE 39 5%	1/10W
				R3026	1-216-041-00	METAL GLAZE 470 5%	1/10W
				R3027	1-216-061-00	METAL GLAZE 3.3K 5%	1/10W
				R3028	1-216-027-00	METAL GLAZE 120 5%	1/10W
				R3030	1-216-073-00	METAL GLAZE 10K 5%	1/10W
				R3031	1-216-047-00	METAL GLAZE 820 5%	1/10W
				R3032	1-216-041-00	METAL GLAZE 470 5%	1/10W
				R3033	1-216-295-00	METAL GLAZE 0 5%	1/10W
				R3034	1-216-041-00	METAL GLAZE 470 5%	1/10W
				R3035	1-216-045-00	METAL GLAZE 680 5%	1/10W
				R3036	1-216-045-00	METAL GLAZE 680 5%	1/10W
				R3037	1-216-083-00	METAL GLAZE 27K 5%	1/10W
				R3038	1-216-049-00	METAL GLAZE 1K 5%	1/10W
				R3039	1-216-073-00	METAL GLAZE 10K 5%	1/10W
				R3040	1-216-065-00	METAL GLAZE 4.7K 5%	1/10W
				R3041	1-216-073-00	METAL GLAZE 10K 5%	1/10W
				R3042	1-216-057-00	METAL GLAZE 2.2K 5%	1/10W
				R3043	1-216-099-00	METAL GLAZE 120K 5%	1/10W
				R3044	1-216-089-91	METAL GLAZE 47K 5%	1/10W
				R3045	1-216-295-00	METAL GLAZE 0 5%	1/10W
				R3050	1-216-033-00	METAL GLAZE 220 5%	1/10W
				R3052	1-216-033-00	METAL GLAZE 220 5%	1/10W
				R3053	1-216-037-00	METAL GLAZE 330 5%	1/10W
				R3055	1-216-063-00	METAL GLAZE 3.9K 5%	1/10W
				R3056	1-216-059-00	METAL GLAZE 2.7K 5%	1/10W

The components identified by shading and mark Δ are critical for safety
 Replace only with part number specified

P1 A

REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
R3057	1-216-081-00	METAL GLAZE 22K 5%	1/10W	C213	1-126-103-11	ELECT 470MF 20%	16V
R3058	1-216-049-00	METAL GLAZE 1K 5%	1/10W	C214	1-126-101-11	ELECT 100MF 20%	16V
R3059	1-216-079-00	METAL GLAZE 18K 5%	1/10W	C215	1-124-910-11	ELECT 47MF 20%	50V
R3060	1-216-065-00	METAL GLAZE 4.7K 5%	1/10W	C216	1-126-101-11	ELECT 100MF 20%	16V
R3061	1-216-049-00	METAL GLAZE 1K 5%	1/10W	C217	1-124-126-00	ELECT 47MF 20%	25V
R3062	1-216-049-00	METAL GLAZE 1K 5%	1/10W	C218	1-126-103-11	ELECT 470MF 20%	16V
R3063	1-216-025-00	METAL GLAZE 100 5%	1/10W	C219	1-136-169-00	FILM 0.22MF 5%	50V
R3064	1-216-295-00	METAL GLAZE 0 5%	1/10W	C220	1-124-910-11	ELECT 47MF 20%	50V
R3065	1-216-073-00	METAL GLAZE 10K 5%	1/10W	C221	1-124-910-11	ELECT 47MF 20%	50V
R3066	1-216-053-00	METAL GLAZE 1.5K 5%	1/10W	C222	1-123-875-11	ELECT 10MF 20%	50V
R3067	1-216-295-00	METAL GLAZE 0 5%	1/10W	C223	1-124-261-00	ELECT 10MF 20%	50V
R3069	1-216-689-11	METAL GLAZE 39K 5%	1/10W	C224	1-124-261-00	ELECT 10MF 20%	50V
R3071	1-216-049-00	METAL GLAZE 1K 5%	1/10W	C225	1-124-120-11	ELECT 220MF 20%	16V
R3073	1-216-049-00	METAL GLAZE 1K 5%	1/10W	C226	1-124-621-11	ELECT 3300MF 20%	6.3V
R3074	1-216-295-00	METAL GLAZE 0 5%	1/10W	C299	1-126-101-11	ELECT 100MF 20%	16V
R3075	1-216-049-00	METAL GLAZE 1K 5%	1/10W	C501	1-137-116-11	FILM 1MF 5%	200V
R3076	1-216-043-00	METAL GLAZE 560 5%	1/10W	C502	1-130-728-00	FILM 0.0022MF 5%	50V
R3077	1-216-037-00	METAL GLAZE 330 5%	1/10W	C504	1-136-161-00	FILM 0.047MF 5%	50V
R3078	1-216-044-00	METAL GLAZE 620 5%	1/10W	C505	1-124-790-11	ELECT 0.47MF 20%	100V
R3079	1-216-040-00	METAL GLAZE 430 5%	1/10W	C506	1-124-480-11	ELECT 470MF 20%	25V
R3082	1-216-029-00	METAL GLAZE 150 5%	1/10W	C508	1-162-114-00	CERAMIC 0.0047MF 2KV	
R3084	1-216-049-00	METAL GLAZE 1K 5%	1/10W	C509	1-123-946-00	ELECT 4.7MF 20%	250V
R3085	1-216-119-00	METAL GLAZE 820K 5%	1/10W	C510	1-102-110-00	CERAMIC 220PF 10%	50V
R3086	1-216-065-00	METAL GLAZE 4.7K 5%	1/10W	C511	1-124-477-11	ELECT 47MF 20%	25V
R3087	1-216-081-00	METAL GLAZE 22K 5%	1/10W	C512	1-162-318-11	CERAMIC 0.001MF 10%	500V
R3088	1-216-089-91	METAL GLAZE 47K 5%	1/10W	C513	1-106-391-12	MYLAR 0.1MF 10%	200V
R3089	1-216-033-00	METAL GLAZE 220 5%	1/10W	C514	1-124-477-11	ELECT 47MF 20%	25V
R3090	1-216-089-91	METAL GLAZE 47K 5%	1/10W	C515	1-162-117-00	CERAMIC 100PF 10%	500V
R3091	1-216-053-00	METAL GLAZE 1.5K 5%	1/10W	C517	1-124-477-11	ELECT 47MF 20%	25V
R3092	1-216-053-00	METAL GLAZE 1.5K 5%	1/10W	C519	1-124-472-11	ELECT 470MF 20%	10V
R3098	1-216-296-91	METAL GLAZE 0 5%	1/8W	C520	1-162-116-00	CERAMIC 680PF 10%	2KV
R3099	1-216-296-91	METAL GLAZE 0 5%	1/8W	C521 Δ 1-137-636-21	FILM 0.023MF	3%	2KV
R3100	1-216-296-91	METAL GLAZE 0 5%	1/8W	C522	1-162-116-00	CERAMIC 680PF 10%	2KV
R3101	1-216-051-00	METAL GLAZE 1.2K 5%	1/10W	C523	1-124-465-00	ELECT 0.47MF 20%	50V
R3102	1-216-047-00	METAL GLAZE 820 5%	1/10W	C524	1-130-487-00	MYLAR 0.022MF 5%	50V
R3103	1-216-057-00	METAL GLAZE 2.2K 5%	1/10W	C525	1-162-116-00	CERAMIC 680PF 10%	2KV
R3104	1-216-049-00	METAL GLAZE 1K 5%	1/10W	C526 Δ 1-136-895-53	FILM 0.068MF	5%	630V
<VARIABLE RESISTOR>				C527	1-130-495-00	MYLAR 0.1MF 5%	50V
RV3001	1-241-630-11	RES, ADJ, CARBON 10K		C528	1-106-359-00	MYLAR 0.0047MF 10%	200V
RV3002	1-238-019-11	RES, ADJ, CARBON 47K		C531	1-124-634-11	ELECT 1MF 20%	250V
RV3003	1-241-630-11	RES, ADJ, CARBON 10K		C532	1-124-477-11	ELECT 47MF 20%	25V
<CRYSTAL>				C533	1-137-119-11	FILM 2MF 5%	200V
X3001	1-567-505-11	OSCILLATOR, CRYSTAL		C534	1-137-116-11	FILM 1MF 5%	200V
*****				C535	1-124-480-11	ELECT 470MF 20%	25V
*A-1297-138-A	A BOARD, COMPLETE *****			C536	1-102-228-00	CERAMIC 470PF 10%	500V
4-382-854-11	SCREW (M3X10), P, SW (+)			C537	1-106-343-00	MYLAR 0.001MF 10%	100V
<CAPACITOR>				C538	1-106-395-00	MYLAR 0.15MF 10%	200V
C201	1-126-101-11	ELECT 100MF 20%	16V	C539	1-123-950-00	ELECT 47MF 20%	250V
C202	1-102-108-00	CERAMIC 150PF 10%	50V	C540	1-124-480-11	ELECT 470MF 20%	25V
C210	1-102-121-00	CERAMIC 0.0022MF 10%	50V	C541	1-102-228-00	CERAMIC 470PF 10%	500V
C211	1-101-006-00	CERAMIC 0.047MF	50V	C542	1-106-387-00	MYLAR 0.068MF 10%	200V
				C546	1-123-024-21	ELECT 33MF	160V
				C549	1-124-261-00	ELECT 10MF 20%	50V
				C551	1-130-471-00	MYLAR 0.001MF 5%	50V
				C552	1-126-176-11	ELECT 220MF 20%	10V
				C554 Δ 1-181-731-51	CERAMIC 0.001MF	10%	2KV
				C557	1-124-465-00	ELECT 0.47MF 20%	50V
				C561	1-124-261-00	ELECT 10MF 20%	50V
				C562	1-124-499-11	ELECT 1MF 20%	50V
				C563	1-130-491-00	MYLAR 0.047MF 5%	50V
				C564	1-130-495-00	MYLAR 0.1MF 5%	50V
				C565	1-130-495-00	MYLAR 0.1MF 5%	50V
				C566	1-130-485-00	MYLAR 0.015MF 5%	50V
				C569	1-136-167-00	FILM 0.15MF 5%	50V

The components identified by shading and mark Δ are critical for safety
 Replace only with part number specified.

• The components identified by \square in this manual have been carefully factory-selected for each set in order to satisfy regulations regarding X-ray radiation. Should replacement be required, replace only with the value originally used

A

REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
Q202	8-729-119-78	TRANSISTOR 2SC2785-HFE		R529	1-249-429-11	CARBON 10K 5% 1/4W	
Q501	8-729-011-07	TRANSISTOR 2SC4763(LBSONY)		R530	1-215-457-00	METAL 33K 1% 1/4W	
Q502	8-729-140-97	TRANSISTOR 2S8734-34		R532	1-249-437-11	CARBON 47K 5% 1/4W	
Q504	8-729-119-76	TRANSISTOR 2SA1175-HFE		R533	1-247-887-00	CARBON 220K 5% 1/4W	
Q506	8-729-011-00	TRANSISTOR 2SK1916-53-F87		R534	1-247-883-00	CARBON 150K 5% 1/4W	
Q507	8-729-119-80	TRANSISTOR 2SC2688-LK		R535	1-249-397-11	CARBON 22 5% 1/4W	F
Q509	8-729-119-76	TRANSISTOR 2SA1175-HFE		R537	1-215-465-00	METAL 68K 1% 1/4W	
Q510	8-729-119-78	TRANSISTOR 2SC2785-HFE		R538	1-249-439-11	CARBON 68K 5% 1/4W	
Q512	8-729-119-78	TRANSISTOR 2SC2785-HFE		R539	1-215-437-00	METAL 4.7K 1% 1/4W	
Q513	8-729-140-96	TRANSISTOR 2SD774-34		R541	1-249-397-11	CARBON 22 5% 1/4W	F
Q515	8-729-119-76	TRANSISTOR 2SA1175-HFE		R542	1-215-890-11	METAL OXIDE 470 5% 2W	F
Q516	8-729-119-76	TRANSISTOR 2SA1175-HFE		R546	1-215-441-00	METAL 6.8K 1% 1/4W	
Q1401	8-729-119-78	TRANSISTOR 2SC2785-HFE		R547	1-249-441-11	CARBON 100K 5% 1/4W	
Q1407	8-729-119-78	TRANSISTOR 2SC2785-HFE		R548	1-215-885-00	METAL OXIDE 68 5% 2W	F
Q1408	8-729-119-78	TRANSISTOR 2SC2785-HFE		R549	1-215-881-11	METAL OXIDE 15 5% 2W	F
Q1501	8-729-119-78	TRANSISTOR 2SC2785-HFE		R550	1-215-910-00	METAL OXIDE 68 5% 3W	F
Q1502	8-729-119-78	TRANSISTOR 2SC2785-HFE		R551	1-247-743-11	CARBON 220 5% 1/2W	F
		<RESISTOR>		R552	1-249-389-11	CARBON 4.7 5% 1/4W	F
R210	1-249-441-11	CARBON 100K 5% 1/4W		R553	1-249-377-11	CARBON 0.47 5% 1/4W	F
R211	1-249-425-11	CARBON 4.7K 5% 1/4W		R554	1-249-377-11	CARBON 0.47 5% 1/4W	F
R214	1-249-377-11	CARBON 0.47 5% 1/4W	F	R555	1-202-826-00	SOLID 4.7K 20% 1/2W	
R219	1-249-426-11	CARBON 5.6K 5% 1/4W		R558	1-259-882-11	CARBON 3.3M 5% 1/4W	
R221	1-249-409-11	CARBON 220 5% 1/4W		R560	1-247-901-11	CARBON 820K 5% 1/4W	
R222	1-249-434-11	CARBON 27K 5% 1/4W		R564	1-215-470-00	METAL 110K 1% 1/4W	
R223	1-249-433-11	CARBON 22K 5% 1/4W		R565 Δ	METAL 1.2K 1% 1/4W		
R224	1-249-409-11	CARBON 220 5% 1/4W		R566 Δ	METAL 1.2K 1% 1/4W		
R225	1-249-419-11	CARBON 1.5K 5% 1/4W		R567	1-249-425-11	CARBON 4.7K 5% 1/4W	
R226	1-249-417-11	CARBON 1K 5% 1/4W		R568	1-249-425-11	CARBON 4.7K 5% 1/4W	
R227	1-249-417-11	CARBON 1K 5% 1/4W		R569	1-249-417-11	CARBON 1K 5% 1/4W	
R230	1-215-923-00	METAL OXIDE 10K 5% 3W	F	R572	1-249-393-11	CARBON 10 5% 1/4W	F
R231	1-249-409-11	CARBON 220 5% 1/4W	F	R573	1-249-393-11	CARBON 10 5% 1/4W	F
R232	1-216-380-11	METAL OXIDE 8.2 5% 2W	F	R576	1-249-417-11	CARBON 1K 5% 1/4W	F
R233	1-249-409-11	CARBON 220 5% 1/4W		R584	1-215-467-00	METAL 82K 1% 1/4W	
R234	1-249-409-11	CARBON 220 5% 1/4W		R587	1-249-441-11	CARBON 100K 5% 1/4W	
R235	1-249-409-11	CARBON 220 5% 1/4W		R589	1-249-437-11	CARBON 47K 5% 1/4W	
R236	1-249-409-11	CARBON 220 5% 1/4W		R590	1-249-431-11	CARBON 15K 5% 1/4W	
R237	1-249-409-11	CARBON 220 5% 1/4W		R592	1-249-429-11	CARBON 10K 5% 1/4W	
R238	1-249-409-11	CARBON 220 5% 1/4W		R593	1-215-878-00	METAL OXIDE 33K 5% 1W	F
R239	1-249-409-11	CARBON 220 5% 1/4W		R594	1-247-903-00	CARBON 1M 5% 1/4W	
R240	1-249-482-11	CARBON 4.7 5% 1/2W	F	R595	1-249-440-11	CARBON 82K 5% 1/4W	
R501	1-215-442-00	METAL 7.5K 1% 1/4W		R597	1-249-437-11	CARBON 47K 5% 1/4W	
R504	1-215-869-11	METAL OXIDE 1K 5% 1W	F	R598	1-249-377-11	CARBON 0.47 5% 1/4W	F
R505	1-215-449-00	METAL 15K 1% 1/4W		R599	1-249-425-11	CARBON 4.7K 5% 1/4W	
R506	1-249-423-11	CARBON 3.3K 5% 1/4W		R1401	1-215-444-00	METAL 9.1K 1% 1/4W	
R507	1-249-411-11	CARBON 330 5% 1/4W		R1402	1-215-444-00	METAL 9.1K 1% 1/4W	
R508	1-249-435-11	CARBON 33K 5% 1/4W		R1403	1-215-430-00	METAL 2.4K 1% 1/4W	
R509	1-249-441-11	CARBON 100K 5% 1/4W		R1404	1-215-430-00	METAL 2.4K 1% 1/4W	
R510	1-249-409-11	CARBON 220 5% 1/4W	F	R1405	1-249-385-11	CARBON 2.2 5% 1/4W	F
R511	1-249-397-11	CARBON 22 5% 1/4W	F	R1406	1-249-385-11	CARBON 2.2 5% 1/4W	F
R512	1-249-423-11	CARBON 3.3K 5% 1/4W		R1409	1-249-433-11	CARBON 22K 5% 1/4W	
R513	1-249-425-11	CARBON 4.7K 5% 1/4W		R1410	1-249-433-11	CARBON 22K 5% 1/4W	
R514	1-249-438-11	CARBON 56K 5% 1/4W		R1427	1-249-421-11	CARBON 2.2K 5% 1/4W	
R515	1-249-433-11	CARBON 22K 5% 1/4W		R1428	1-249-421-11	CARBON 2.2K 5% 1/4W	
R517	1-216-361-00	METAL OXIDE 0.22 5% 2W	F	R1439	1-247-883-00	CARBON 150K 5% 1/4W	
R519	1-247-755-11	CARBON 1.8K 5% 1/2W	F	R1501	1-215-449-00	METAL 15K 1% 1/4W	
R520	1-249-441-11	CARBON 100K 5% 1/4W		R1502	1-215-436-00	METAL 4.3K 1% 1/4W	
R521	1-216-481-11	METAL OXIDE 1.2K 5% 3W	F	R1503	1-249-425-11	CARBON 4.7K 5% 1/4W	
R522	1-215-917-11	METAL OXIDE 1K 5% 3W	F	R1505	1-249-433-11	CARBON 22K 5% 1/4W	
R523	1-249-425-11	CARBON 4.7K 5% 1/4W		R1506	1-218-642-11	METAL OXIDE 100K 5% 1W	F
R524	1-215-445-00	METAL 10K 1% 1/4W		R1507	1-249-436-11	CARBON 39K 5% 1/4W	
R526	1-249-401-11	CARBON 47 5% 1/4W		R1508	1-215-453-00	METAL 22K 1% 1/4W	
R528	1-247-903-00	CARBON 1M 5% 1/4W		R1509	1-215-461-00	METAL 47K 1% 1/4W	
				R1510	1-249-383-11	CARBON 1.5 5% 1/4W	F

The components identified by shading and mark Δ are critical for safety. Replace only with part number specified.



REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
R1511	1-215-888-00	METAL OXIDE	220 5% 2W F				
R1512	1-216-371-00	METAL OXIDE	1.5 5% 2W F			<DIODE>	
R1513	1-249-436-11	CARBON	39K 5% 1/4W F				
R1550	1-215-881-11	METAL OXIDE	15 5% 2W F	D001	8-719-404-46	DIODE MA110	
R4002	1-249-385-11	CARBON	2.2 5% 1/4W F	D002	8-719-404-46	DIODE MA110	
R4003	1-216-361-00	METAL OXIDE	0.22 5% 2W F	D009	8-719-404-46	DIODE MA110	
R4004	1-216-374-00	METAL OXIDE	2.7 5% 2W F	D010	8-713-300-57	DIODE 1T33	
R4006	1-216-396-11	METAL OXIDE	3.9 5% 3W F	D011	8-719-404-46	DIODE MA110	
	<SPARK GAP>			D012	8-719-404-46	DIODE MA110	
SG501	1-519-422-11	GAP, SPARK		D014	8-719-404-46	DIODE MA110	
	<TRANSFORMER>			D015	8-719-404-46	DIODE MA110	
T501	1-436-213-11	TRANSFORMER ASSY FLYBACK (NY-2602A3)				<IC>	
T503	1-437-217-11	TRANSFORMER, HORIZONTAL DRIVE		IC001	8-759-169-06	IC TMC73C247-10	
T505	1-413-059-00	TRANSFORMER, FERRITE (DFT)		IC002	8-759-403-44	IC MNI280-S	
	<THERMISTOR>					<COIL>	
THP150	1-807-970-11	THERMISTOR		L001	1-408-409-00	INDUCTOR 10UH	
	<TUNER>			L002	1-410-476-11	INDUCTOR 33UH	
TU101A	1-695-102-22	TUNER (8TF KA401)				<TRANSISTOR>	
*****				Q001	8-729-216-22	TRANSISTOR 2SA1162-G	
*A-1306-436-A	M BOARD, COMPLETE			Q009	8-729-422-27	TRANSISTOR 2SD601A-Q	
*****				Q010	8-729-422-27	TRANSISTOR 2SD601A-Q	
	<CAPACITOR>			Q011	8-729-422-27	TRANSISTOR 2SD601A-Q	
C001	1-124-261-00	ELECT	10MF 20% 50V	Q012	8-729-422-27	TRANSISTOR 2SD601A-Q	
C002	1-163-125-00	CERAMIC CHIP	220PF 5% 50V	Q013	8-729-216-22	TRANSISTOR 2SA1162-G	
C003	1-136-161-00	FILM	0.047MF 5% 50V	Q014	8-729-422-27	TRANSISTOR 2SD601A-Q	
C004	1-126-301-11	ELECT	1MF 20% 50V			<RESISTOR>	
C005	1-163-125-00	CERAMIC CHIP	220PF 5% 50V	R001	1-216-045-00	METAL GLAZE 680 5% 1/10W	
C014	1-124-910-11	ELECT	47MF 20% 50V	R002	1-216-097-00	METAL GLAZE 100K 5% 1/10W	
C017	1-124-589-11	ELECT	47MF 20% 16V	R003	1-216-121-00	METAL GLAZE 1M 5% 1/10W	
C018	1-163-141-00	CERAMIC CHIP	0.001MF 5% 50V	R004	1-216-073-00	METAL GLAZE 10K 5% 1/10W	
C019	1-164-695-11	CERAMIC CHIP	0.0022MF 5% 50V	R005	1-216-073-00	METAL GLAZE 10K 5% 1/10W	
C020	1-163-241-11	CERAMIC CHIP	39PF 5% 50V	R006	1-216-065-00	METAL GLAZE 4.7K 5% 1/10W	
C029	1-163-115-00	CERAMIC CHIP	82PF 5% 50V	R007	1-216-027-00	METAL GLAZE 120 5% 1/10W	
C030	1-163-115-00	CERAMIC CHIP	82PF 5% 50V	R008	1-216-041-00	METAL GLAZE 470 5% 1/10W	
C034	1-163-125-00	CERAMIC CHIP	220PF 5% 50V	R009	1-216-027-00	METAL GLAZE 120 5% 1/10W	
C035	1-163-125-00	CERAMIC CHIP	220PF 5% 50V	R011	1-216-033-00	METAL GLAZE 220 5% 1/10W	
C036	1-163-125-00	CERAMIC CHIP	220PF 5% 50V	R012	1-216-033-00	METAL GLAZE 220 5% 1/10W	
C041	1-163-117-00	CERAMIC CHIP	100PF 5% 50V	R013	1-216-067-00	METAL GLAZE 5.6K 5% 1/10W	
C042	1-163-117-00	CERAMIC CHIP	100PF 5% 50V	R014	1-216-057-00	METAL GLAZE 2.2K 5% 1/10W	
C045	1-163-125-00	CERAMIC CHIP	220PF 5% 50V	R015	1-216-089-91	METAL GLAZE 47K 5% 1/10W	
C047	1-124-261-00	ELECT	10MF 20% 50V	R016	1-216-067-00	METAL GLAZE 5.6K 5% 1/10W	
C048	1-124-261-00	ELECT	10MF 20% 50V	R017	1-216-067-00	METAL GLAZE 5.6K 5% 1/10W	
C049	1-124-261-00	ELECT	10MF 20% 50V	R018	1-216-065-00	METAL GLAZE 4.7K 5% 1/10W	
C055	1-163-809-11	CERAMIC CHIP	0.047MF 10% 25V	R019	1-216-073-00	METAL GLAZE 10K 5% 1/10W	
C064	1-163-121-00	CERAMIC CHIP	150PF 5% 50V	R033	1-216-073-00	METAL GLAZE 10K 5% 1/10W	
C065	1-124-257-00	ELECT	2.2MF 20% 50V	R034	1-216-033-00	METAL GLAZE 220 5% 1/10W	
	<CONNECTOR>			R035	1-216-033-00	METAL GLAZE 220 5% 1/10W	
M39	*1-564-521-11	PLUG, CONNECTOR 6P		R036	1-216-033-00	METAL GLAZE 220 5% 1/10W	
M45	*1-564-523-11	PLUG, CONNECTOR 8P		R037	1-216-073-00	METAL GLAZE 10K 5% 1/10W	
M001	1-573-965-21	PIN, CONNECTOR (PC BOARD) 50P		R038	1-216-033-00	METAL GLAZE 220 5% 1/10W	
				R039	1-216-073-00	METAL GLAZE 10K 5% 1/10W	
				R040	1-216-089-91	METAL GLAZE 47K 5% 1/10W	
				R041	1-216-057-00	METAL GLAZE 2.2K 5% 1/10W	
				R042	1-216-065-00	METAL GLAZE 4.7K 5% 1/10W	
				R043	1-216-033-00	METAL GLAZE 220 5% 1/10W	
				R044	1-216-033-00	METAL GLAZE 220 5% 1/10W	



REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
R045	1-216-025-00	METAL GLAZE	100 5% 1/10W				
R046	1-216-065-00	METAL GLAZE	4.7K 5% 1/10W				
R047	1-216-065-00	METAL GLAZE	4.7K 5% 1/10W				
R048	1-216-033-00	METAL GLAZE	220 5% 1/10W				
R049	1-216-065-00	METAL GLAZE	4.7K 5% 1/10W				
R050	1-216-295-00	METAL GLAZE	0 5% 1/10W				
R051	1-216-033-00	METAL GLAZE	220 5% 1/10W				
R052	1-216-065-00	METAL GLAZE	4.7K 5% 1/10W				
R053	1-216-065-00	METAL GLAZE	4.7K 5% 1/10W				
R054	1-216-073-00	METAL GLAZE	10K 5% 1/10W				
R055	1-216-073-00	METAL GLAZE	10K 5% 1/10W				
R056	1-216-065-00	METAL GLAZE	4.7K 5% 1/10W				
R057	1-216-065-00	METAL GLAZE	4.7K 5% 1/10W				
R058	1-216-065-00	METAL GLAZE	4.7K 5% 1/10W				
R059	1-216-073-00	METAL GLAZE	10K 5% 1/10W				
R060	1-216-065-00	METAL GLAZE	4.7K 5% 1/10W				
R063	1-216-033-00	METAL GLAZE	220 5% 1/10W				
R064	1-216-053-00	METAL GLAZE	1.5K 5% 1/10W				
R065	1-216-033-00	METAL GLAZE	220 5% 1/10W				
R066	1-216-033-00	METAL GLAZE	220 5% 1/10W				
R067	1-216-033-00	METAL GLAZE	220 5% 1/10W				
R068	1-216-033-00	METAL GLAZE	220 5% 1/10W				
R069	1-216-049-00	METAL GLAZE	1K 5% 1/10W				
R070	1-216-033-00	METAL GLAZE	220 5% 1/10W				
R071	1-216-033-00	METAL GLAZE	220 5% 1/10W				
R072	1-216-033-00	METAL GLAZE	220 5% 1/10W				
R073	1-216-057-00	METAL GLAZE	2.2K 5% 1/10W				
R074	1-216-033-00	METAL GLAZE	220 5% 1/10W				
R075	1-216-033-00	METAL GLAZE	220 5% 1/10W				
R076	1-216-089-91	METAL GLAZE	47K 5% 1/10W				
R077	1-216-057-00	METAL GLAZE	2.2K 5% 1/10W				
R078	1-216-033-00	METAL GLAZE	220 5% 1/10W				
R079	1-216-025-00	METAL GLAZE	100 5% 1/10W				
R080	1-216-061-00	METAL GLAZE	3.3K 5% 1/10W				
R081	1-216-033-00	METAL GLAZE	220 5% 1/10W				
R082	1-216-033-00	METAL GLAZE	220 5% 1/10W				
R083	1-216-033-00	METAL GLAZE	220 5% 1/10W				
R084	1-216-097-00	METAL GLAZE	100K 5% 1/10W				
R085	1-216-033-00	METAL GLAZE	220 5% 1/10W				
R086	1-216-033-00	METAL GLAZE	220 5% 1/10W				
R087	1-216-033-00	METAL GLAZE	220 5% 1/10W				
R088	1-216-033-00	METAL GLAZE	220 5% 1/10W				
R089	1-216-089-91	METAL GLAZE	47K 5% 1/10W				
R090	1-216-033-00	METAL GLAZE	220 5% 1/10W				
R091	1-216-065-00	METAL GLAZE	4.7K 5% 1/10W				
R092	1-216-077-00	METAL GLAZE	15K 5% 1/10W				
R093	1-216-065-00	METAL GLAZE	4.7K 5% 1/10W				
R094	1-216-033-00	METAL GLAZE	220 5% 1/10W				
R095	1-216-073-00	METAL GLAZE	10K 5% 1/10W				
R096	1-216-065-00	METAL GLAZE	4.7K 5% 1/10W				
R097	1-216-065-00	METAL GLAZE	4.7K 5% 1/10W				
R098	1-216-065-00	METAL GLAZE	4.7K 5% 1/10W				
R099	1-216-089-91	METAL GLAZE	47K 5% 1/10W				
R100	1-216-025-00	METAL GLAZE	100 5% 1/10W				
R101	1-216-025-00	METAL GLAZE	100 5% 1/10W				
R102	1-216-089-91	METAL GLAZE	47K 5% 1/10W				
R103	1-216-033-00	METAL GLAZE	220 5% 1/10W				
R104	1-216-033-00	METAL GLAZE	220 5% 1/10W				
<CRYSTAL>							
X001	1-579-743-11	VIBRATOR, CRYSTAL					

				*A-1346-132-A	E1 BOARD, COMPLETE		

				<CAPACITOR>			
				C301	1-163-010-11	CERAMIC CHIP 0.0012MF	10% 50V
				C303	1-126-157-11	ELECT 10MF	20% 16V
				C304	1-164-232-11	CERAMIC CHIP 0.01MF	10% 50V
				C305	1-163-251-11	CERAMIC CHIP 100PF	5% 50V
				C306	1-163-117-00	CERAMIC CHIP 100PF	5% 50V
				C309	1-164-505-11	CERAMIC CHIP 2.2MF	16V
				C310	1-163-109-00	CERAMIC CHIP 47PF	5% 50V
				C314	1-124-915-11	ELECT 10MF	20% 16V
				C315	1-164-505-11	CERAMIC CHIP 2.2MF	16V
				C319	1-126-157-11	ELECT 10MF	20% 16V
				C320	1-124-465-00	ELECT 0.47MF	20% 50V
				C321	1-163-125-00	CERAMIC CHIP 220PF	5% 50V
				C322	1-163-003-11	CERAMIC CHIP 330PF	10% 50V
				C323	1-163-099-00	CERAMIC CHIP 18PF	5% 50V
				C324	1-124-234-00	ELECT 22MF	20% 16V
				C325	1-104-563-11	FILM CHIP 0.1MF	5% 16V
				C326	1-104-563-11	FILM CHIP 0.1MF	5% 16V
				C327	1-104-563-11	FILM CHIP 0.1MF	5% 16V
				C328	1-126-157-11	ELECT 10MF	20% 16V
				C329	1-126-157-11	ELECT 10MF	20% 16V
				C330	1-126-157-11	ELECT 10MF	20% 16V
				C331	1-126-301-11	ELECT 1MF	20% 50V
				C332	1-124-584-00	ELECT 100MF	20% 10V
				C333	1-163-037-11	CERAMIC CHIP 0.022MF	10% 25V
				C334	1-137-491-11	FILM CHIP 0.1MF	5% 25V
				C335	1-136-169-00	FILM 0.22MF	5% 50V
				C336	1-126-301-11	ELECT 1MF	20% 50V
				C337	1-126-301-11	ELECT 1MF	20% 50V
				C338	1-124-584-00	ELECT 100MF	20% 10V
				C339	1-124-791-11	ELECT 1MF	20% 50V
				C340	1-163-009-11	CERAMIC CHIP 0.001MF	10% 50V
				C341	1-126-157-11	ELECT 10MF	20% 16V
				C342	1-124-465-00	ELECT 0.47MF	20% 50V
				C343	1-124-589-11	ELECT 47MF	20% 16V
				C344	1-164-232-11	CERAMIC CHIP 0.01MF	10% 50V
				C345	1-124-767-00	ELECT 2.2MF	20% 50V
				C346	1-164-232-11	CERAMIC CHIP 0.01MF	10% 50V
				C347	1-136-169-00	FILM 0.22MF	5% 50V
				C348	1-163-117-00	CERAMIC CHIP 100PF	5% 50V
				C349	1-126-301-11	ELECT 1MF	20% 50V
				C350	1-126-301-11	ELECT 1MF	20% 50V
				C351	1-163-002-11	CERAMIC CHIP 270PF	10% 50V
				C352	1-164-489-11	CERAMIC CHIP 0.22MF	10% 16V
				C353	1-126-163-11	ELECT 4.7MF	20% 50V
				C354	1-136-169-00	FILM 0.22MF	5% 50V
				C355	1-124-465-00	ELECT 0.47MF	20% 50V
				C356	1-163-017-00	CERAMIC CHIP 0.0047MF	10% 50V
				C357	1-163-117-00	CERAMIC CHIP 100PF	5% 50V
				C358	1-124-767-00	ELECT 2.2MF	20% 50V
				C360	1-137-491-11	FILM CHIP 0.1MF	5% 25V
				C361	1-126-301-11	ELECT 1MF	20% 50V
				C362	1-164-232-11	CERAMIC CHIP 0.01MF	10% 50V
				C363	1-164-232-11	CERAMIC CHIP 0.01MF	10% 50V
				C364	1-126-301-11	ELECT 1MF	20% 50V
				C365	1-164-343-11	CERAMIC CHIP 0.056MF	10% 25V
				C366	1-124-257-00	ELECT 2.2MF	20% 50V
				C367	1-126-157-11	ELECT 10MF	20% 16V
				C368	1-124-234-00	ELECT 22MF	20% 16V

E1

REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
C369	1-163-001-11	CERAMIC CHIP 220PF	10% 50V	Q306	8-729-422-27	TRANSISTOR 2SD601A-Q	
C370	1-164-232-11	CERAMIC CHIP 0.01MF	10% 50V	Q307	8-729-903-10	TRANSISTOR FMW1	
C371	1-124-126-00	ELECT 47MF	20% 16V	Q309	8-729-422-27	TRANSISTOR 2SD601A-Q	
C372	1-124-589-11	ELECT 47MF	20% 16V	Q310	8-729-422-27	TRANSISTOR 2SD601A-Q	
C373	1-164-232-11	CERAMIC CHIP 0.01MF	10% 50V	Q311	8-729-403-27	TRANSISTOR XN4401	
C378	1-163-117-00	CERAMIC CHIP 100PF	5% 50V	Q312	8-729-422-27	TRANSISTOR 2SD601A-Q	
C379	1-164-232-11	CERAMIC CHIP 0.01MF	10% 50V	Q314	8-729-403-27	TRANSISTOR XN4401	
C380	1-163-137-00	CERAMIC CHIP 680PF	5% 50V	Q315	8-729-422-27	TRANSISTOR 2SD601A-Q	
C381	1-163-101-00	CERAMIC CHIP 22PF	5% 50V	Q316	8-729-422-27	TRANSISTOR 2SD601A-Q	
C382	1-164-004-11	CERAMIC CHIP 0.1MF	10% 25V	Q317	8-729-216-22	TRANSISTOR 2SA1162-G	
C383	1-164-004-11	CERAMIC CHIP 0.1MF	10% 25V	Q321	8-729-925-79	TRANSISTOR 1MX3	
C384	1-163-095-00	CERAMIC CHIP 12PF	5% 50V	Q322	8-729-216-22	TRANSISTOR 2SA1162-G	
<CONNECTOR>				Q323	8-729-422-27	TRANSISTOR 2SD601A-Q	
E1-24	1-564-523-11	PLUG, CONNECTOR 8P		Q324	8-729-216-22	TRANSISTOR 2SA1162-G	
E1-25	*1-564-521-11	PLUG, CONNECTOR 6P		Q325	8-729-216-22	TRANSISTOR 2SA1162-G	
E1-26	*1-564-522-11	PLUG, CONNECTOR 7P		Q326	8-729-422-27	TRANSISTOR 2SD601A-Q	
E1-001	1-573-965-21	PIN, CONNECTOR (PC BOARD) 50P		Q327	8-729-422-27	TRANSISTOR 2SD601A-Q	
<DIODE>				Q328	8-729-422-27	TRANSISTOR 2SD601A-Q	
D301	8-719-404-46	DIODE MA110		Q329	8-729-925-79	TRANSISTOR 1MX3	
D302	8-719-404-46	DIODE MA110		Q330	8-729-925-79	TRANSISTOR 1MX3	
D303	8-719-404-46	DIODE MA110		Q333	8-729-925-79	TRANSISTOR 1MX3	
D304	8-719-404-46	DIODE MA110		Q334	8-729-422-27	TRANSISTOR 2SD601A-Q	
D305	8-719-404-46	DIODE MA110		Q335	8-729-907-46	TRANSISTOR 1MZ1	
D306	8-719-158-15	DIODE RD5.6SB		Q340	8-729-422-27	TRANSISTOR 2SD601A-Q	
D307	8-719-404-46	DIODE MA110		Q342	8-729-925-79	TRANSISTOR 1MX3	
D310	8-719-158-15	DIODE RD5.6SB		Q344	8-729-216-22	TRANSISTOR 2SA1162-G	
D312	8-719-404-46	DIODE MA110		<RESISTOR>			
D313	8-719-404-46	DIODE MA110		R301	1-216-025-00	METAL GLAZE 100 5%	1/10W
D314	8-719-404-46	DIODE MA110		R302	1-216-057-00	METAL GLAZE 2.2K 5%	1/10W
D315	8-719-404-46	DIODE MA110		R303	1-216-079-00	METAL GLAZE 18K 5%	1/10W
D316	8-719-404-46	DIODE MA110		R304	1-216-081-00	METAL GLAZE 22K 5%	1/10W
D317	8-719-404-46	DIODE MA110		R305	1-216-069-00	METAL GLAZE 6.8K 5%	1/10W
D318	8-719-404-46	DIODE MA110		R306	1-216-081-00	METAL GLAZE 22K 5%	1/10W
D319	8-719-404-46	DIODE MA110		R307	1-216-089-91	METAL GLAZE 47K 5%	1/10W
D320	8-719-404-46	DIODE MA110		R308	1-216-037-00	METAL GLAZE 330 5%	1/10W
D321	8-719-400-94	DIODE MA3130		R309	1-216-073-00	METAL GLAZE 10K 5%	1/10W
<DELAY LINE>				R310	1-216-065-00	METAL GLAZE 4.7K 5%	1/10W
DL302	1-415-817-11	DELAY LINE		R312	1-216-043-00	METAL GLAZE 560 5%	1/10W
<IC>				R313	1-216-035-00	METAL GLAZE 270 5%	1/10W
IC301	8-752-058-68	IC CXA1315M		R314	1-216-061-00	METAL GLAZE 3.3K 5%	1/10W
IC302	8-752-059-67	IC CXA1465AS		R316	1-216-035-00	METAL GLAZE 270 5%	1/10W
IC303	8-759-106-02	IC UPC4570G2		R317	1-216-121-00	METAL GLAZE 1M 5%	1/10W
<COIL>				R320	1-216-039-00	METAL GLAZE 390 5%	1/10W
L301	1-410-064-11	INDUCTOR 2.7MMH		R325	1-216-033-00	METAL GLAZE 220 5%	1/10W
L307	1-410-944-31	INDUCTOR CHIP 15UH		R326	1-216-057-00	METAL GLAZE 2.2K 5%	1/10W
L308	1-410-946-31	INDUCTOR CHIP 22UH		R331	1-216-017-00	METAL GLAZE 47 5%	1/10W
<TRANSISTOR>				R332	1-216-657-11	METAL CHIP 1.8K 0.50%	1/10W
Q301	8-729-925-79	TRANSISTOR 1MX3		R333	1-216-051-00	METAL GLAZE 1.2K 5%	1/10W
Q302	8-729-925-79	TRANSISTOR 1MX3		R336	1-216-047-00	METAL GLAZE 820 5%	1/10W
Q303	8-729-422-27	TRANSISTOR 2SD601A-Q		R338	1-216-043-00	METAL GLAZE 560 5%	1/10W
Q304	8-729-907-46	TRANSISTOR 1MZ1		R339	1-216-047-00	METAL GLAZE 820 5%	1/10W
Q305	8-729-925-79	TRANSISTOR 1MX3		R340	1-216-651-11	METAL CHIP 1K 0.50%	1/10W
				R341	1-216-043-00	METAL GLAZE 560 5%	1/10W
				R343	1-216-077-00	METAL GLAZE 15K 5%	1/10W
				R344	1-216-081-00	METAL GLAZE 22K 5%	1/10W
				R345	1-216-292-11	METAL GLAZE 8.2M 5%	1/8W
				R346	1-216-081-00	METAL GLAZE 22K 5%	1/10W
				R347	1-216-081-00	METAL GLAZE 22K 5%	1/10W
				R348	1-216-049-00	METAL GLAZE 1K 5%	1/10W
				R349	1-216-295-00	METAL GLAZE 0 5%	1/10W
				R350	1-216-089-91	METAL GLAZE 47K 5%	1/10W
				R351	1-216-674-11	METAL CHIP 9.1K 0.50%	1/10W

E1

REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
R352	1-216-011-00	METAL GLAZE	27 5% 1/10W	R1318	1-216-065-00	METAL GLAZE	4.7K 5% 1/10W
R353	1-216-001-00	METAL GLAZE	10 5% 1/10W	R1319	1-216-065-00	METAL GLAZE	4.7K 5% 1/10W
R354	1-216-049-00	METAL GLAZE	1K 5% 1/10W	R1320	1-216-063-00	METAL GLAZE	3.9K 5% 1/10W
R355	1-216-001-00	METAL GLAZE	10 5% 1/10W	R1321	1-216-081-00	METAL GLAZE	22K 5% 1/10W
R356	1-216-001-00	METAL GLAZE	10 5% 1/10W	R1322	1-216-061-00	METAL GLAZE	3.3K 5% 1/10W
R357	1-216-049-00	METAL GLAZE	1K 5% 1/10W	R1323	1-216-089-91	METAL GLAZE	47K 5% 1/10W
R358	1-216-049-00	METAL GLAZE	1K 5% 1/10W	R1324	1-216-045-00	METAL GLAZE	680 5% 1/10W
R359	1-216-049-00	METAL GLAZE	1K 5% 1/10W	R1325	1-216-025-00	METAL GLAZE	100 5% 1/10W
R360	1-216-119-00	METAL GLAZE	820K 5% 1/10W	R1326	1-216-073-00	METAL GLAZE	10K 5% 1/10W
R361	1-216-025-00	METAL GLAZE	100 5% 1/10W	R1327	1-216-033-00	METAL GLAZE	220 5% 1/10W
R362	1-216-079-00	METAL GLAZE	18K 5% 1/10W	R1328	1-216-033-00	METAL GLAZE	220 5% 1/10W
R363	1-216-295-00	METAL GLAZE	0 5% 1/10W	R1329	1-216-077-00	METAL GLAZE	15K 5% 1/10W
R364	1-216-045-00	METAL GLAZE	680 5% 1/10W	R1330	1-216-081-00	METAL GLAZE	22K 5% 1/10W
R365	1-216-017-00	METAL GLAZE	47 5% 1/10W	R1331	1-216-081-00	METAL GLAZE	22K 5% 1/10W
R366	1-216-001-00	METAL GLAZE	10 5% 1/10W	R1332	1-216-093-00	METAL GLAZE	68K 5% 1/10W
R367	1-216-045-00	METAL GLAZE	680 5% 1/10W	R1333	1-216-129-00	METAL GLAZE	2.2M 5% 1/10W
R368	1-216-001-00	METAL GLAZE	10 5% 1/10W	R1334	1-216-097-00	METAL GLAZE	100K 5% 1/10W
R369	1-216-033-00	METAL GLAZE	220 5% 1/10W	R1335	1-216-089-91	METAL GLAZE	47K 5% 1/10W
R370	1-216-033-00	METAL GLAZE	220 5% 1/10W	R1336	1-216-089-91	METAL GLAZE	47K 5% 1/10W
R371	1-216-033-00	METAL GLAZE	220 5% 1/10W	R1337	1-216-065-00	METAL GLAZE	4.7K 5% 1/10W
R372	1-216-031-00	METAL GLAZE	180 5% 1/10W	R1338	1-216-089-91	METAL GLAZE	47K 5% 1/10W
R373	1-216-671-11	METAL CHIP	6.8K 0.50% 1/10W	R1339	1-216-089-91	METAL GLAZE	47K 5% 1/10W
R374	1-216-037-00	METAL GLAZE	330 5% 1/10W	R1340	1-216-073-00	METAL GLAZE	10K 5% 1/10W
R375	1-216-037-00	METAL GLAZE	330 5% 1/10W	R1342	1-216-033-00	METAL GLAZE	220 5% 1/10W
R376	1-216-037-00	METAL GLAZE	330 5% 1/10W	R1343	1-216-105-00	METAL GLAZE	220K 5% 1/10W
R377	1-216-033-00	METAL GLAZE	220 5% 1/10W	R1344	1-216-091-00	METAL GLAZE	56K 5% 1/10W
R378	1-216-033-00	METAL GLAZE	220 5% 1/10W	R1345	1-216-101-00	METAL GLAZE	150K 5% 1/10W
R379	1-216-033-00	METAL GLAZE	220 5% 1/10W	R1346	1-216-049-00	METAL GLAZE	1K 5% 1/10W
R380	1-216-033-00	METAL GLAZE	220 5% 1/10W	R1347	1-216-049-00	METAL GLAZE	1K 5% 1/10W
R381	1-216-033-00	METAL GLAZE	220 5% 1/10W	R1348	1-216-049-00	METAL GLAZE	1K 5% 1/10W
R382	1-216-033-00	METAL GLAZE	220 5% 1/10W	R1349	1-216-073-00	METAL GLAZE	10K 5% 1/10W
R383	1-216-653-11	METAL CHIP	1.2K 0.50% 1/10W	R1350	1-216-091-00	METAL GLAZE	56K 5% 1/10W
R384	1-216-041-00	METAL GLAZE	470 5% 1/10W	R1351	1-216-049-00	METAL GLAZE	1K 5% 1/10W
R385	1-216-081-00	METAL GLAZE	22K 5% 1/10W	R1352	1-216-039-00	METAL GLAZE	390 5% 1/10W
R386	1-216-687-11	METAL CHIP	33K 0.50% 1/10W	R1353	1-216-053-00	METAL GLAZE	1.5K 5% 1/10W
R387	1-216-033-00	METAL GLAZE	220 5% 1/10W	R1354	1-216-081-00	METAL GLAZE	22K 5% 1/10W
R388	1-216-033-00	METAL GLAZE	220 5% 1/10W	R1355	1-216-017-00	METAL GLAZE	47 5% 1/10W
R389	1-216-081-00	METAL GLAZE	22K 5% 1/10W	R1356	1-216-057-00	METAL GLAZE	2.2K 5% 1/10W
R390	1-216-033-00	METAL GLAZE	220 5% 1/10W	R1357	1-216-081-00	METAL GLAZE	22K 5% 1/10W
R391	1-216-049-00	METAL GLAZE	1K 5% 1/10W	R1358	1-216-033-00	METAL GLAZE	220 5% 1/10W
R393	1-216-051-00	METAL GLAZE	1.2K 5% 1/10W	R1362	1-216-105-00	METAL GLAZE	220K 5% 1/10W
R394	1-216-109-00	METAL GLAZE	330K 5% 1/10W	R1363	1-216-041-00	METAL GLAZE	470 5% 1/10W
R395	1-216-071-00	METAL GLAZE	8.2K 5% 1/10W	R1364	1-216-053-00	METAL GLAZE	1.5K 5% 1/10W
R396	1-216-105-00	METAL GLAZE	220K 5% 1/10W	R1373	1-216-049-00	METAL GLAZE	1K 5% 1/10W
R397	1-216-081-00	METAL GLAZE	22K 5% 1/10W	R1374	1-216-025-00	METAL GLAZE	100 5% 1/10W
R398	1-216-081-00	METAL GLAZE	22K 5% 1/10W	R1379	1-216-079-00	METAL GLAZE	18K 5% 1/10W
R399	1-216-077-00	METAL GLAZE	15K 5% 1/10W	R1380	1-216-075-00	METAL GLAZE	12K 5% 1/10W
R1301	1-216-049-00	METAL GLAZE	1K 5% 1/10W	R1381	1-216-041-00	METAL GLAZE	470 5% 1/10W
R1302	1-216-045-00	METAL GLAZE	680 5% 1/10W	R1382	1-216-079-00	METAL GLAZE	18K 5% 1/10W
R1303	1-216-085-00	METAL GLAZE	33K 5% 1/10W	R1383	1-216-077-00	METAL GLAZE	15K 5% 1/10W
R1304	1-216-081-00	METAL GLAZE	22K 5% 1/10W	R1384	1-216-049-00	METAL GLAZE	1K 5% 1/10W
R1305	1-216-025-00	METAL GLAZE	100 5% 1/10W	R1385	1-216-037-00	METAL GLAZE	330 5% 1/10W
R1306	1-216-057-00	METAL GLAZE	2.2K 5% 1/10W	R1386	1-216-037-00	METAL GLAZE	330 5% 1/10W
R1307	1-216-073-00	METAL GLAZE	10K 5% 1/10W	R1387	1-216-045-00	METAL GLAZE	680 5% 1/10W
R1308	1-216-065-00	METAL GLAZE	4.7K 5% 1/10W	R1388	1-216-001-00	METAL GLAZE	10 5% 1/10W
R1309	1-216-025-00	METAL GLAZE	100 5% 1/10W	R1389	1-216-097-00	METAL GLAZE	100K 5% 1/10W
R1310	1-216-045-00	METAL GLAZE	680 5% 1/10W	R1390	1-216-097-00	METAL GLAZE	100K 5% 1/10W
R1311	1-216-049-00	METAL GLAZE	1K 5% 1/10W	R1391	1-216-097-00	METAL GLAZE	100K 5% 1/10W
R1312	1-216-073-00	METAL GLAZE	10K 5% 1/10W	R1392	1-216-081-00	METAL GLAZE	22K 5% 1/10W
R1313	1-216-081-00	METAL GLAZE	22K 5% 1/10W	R1394	1-216-081-00	METAL GLAZE	22K 5% 1/10W
R1314	1-216-065-00	METAL GLAZE	4.7K 5% 1/10W	R1395	1-216-081-00	METAL GLAZE	22K 5% 1/10W
R1315	1-216-049-00	METAL GLAZE	1K 5% 1/10W	R1396	1-216-125-00	METAL GLAZE	1.5M 5% 1/10W
R1316	1-216-081-00	METAL GLAZE	22K 5% 1/10W	R1399	1-216-065-00	METAL GLAZE	4.7K 5% 1/10W
R1317	1-216-073-00	METAL GLAZE	10K 5% 1/10W				

E1 **E2**

REF. NO.	PART NO.	DESCRIPTION	REMARK
R5301	1-216-057-00	METAL GLAZE 2.2K 5%	1/10W
R5302	1-216-073-00	METAL GLAZE 10K 5%	1/10W
R5303	1-216-073-00	METAL GLAZE 10K 5%	1/10W
R5304	1-216-085-00	METAL GLAZE 33K 5%	1/10W
R5305	1-216-085-00	METAL GLAZE 33K 5%	1/10W
<CRYSTAL>			
X301	1-567-505-11	OSCILLATOR, CRYSTAL	

*A-1346-137-A	E2 BOARD, COMPLETE		

<CAPACITOR>			
C2302	1-163-009-11	CERAMIC CHIP 0.001MF	10% 50V
C2303	1-164-232-11	CERAMIC CHIP 0.01MF	10% 50V
C2310	1-163-105-00	CERAMIC CHIP 33PF	5% 50V
C2314	1-164-232-11	CERAMIC CHIP 0.01MF	10% 50V
C2315	1-126-157-11	ELECT 10MF	20% 16V
C2316	1-126-157-11	ELECT 10MF	20% 16V
C2317	1-126-157-11	ELECT 10MF	20% 16V
C2318	1-164-232-11	CERAMIC CHIP 0.01MF	10% 50V
C2320	1-124-589-11	ELECT 47MF	20% 16V
C2321	1-163-017-00	CERAMIC CHIP 0.0047MF	10% 50V
C2322	1-124-234-00	ELECT 22MF	20% 16V
C2323	1-124-234-00	ELECT 22MF	20% 16V
C2324	1-124-234-00	ELECT 22MF	20% 16V
C2325	1-164-232-11	CERAMIC CHIP 0.01MF	10% 50V
C2326	1-124-589-11	ELECT 47MF	20% 16V
C2327	1-164-505-11	CERAMIC CHIP 2.2MF	10% 50V
C2328	1-164-232-11	CERAMIC CHIP 0.01MF	10% 50V
C2329	1-164-232-11	CERAMIC CHIP 0.01MF	10% 50V
C2331	1-164-232-11	CERAMIC CHIP 0.01MF	10% 50V
C2332	1-124-234-00	ELECT 22MF	20% 16V
C2333	1-124-234-00	ELECT 22MF	20% 16V
C2334	1-164-232-11	CERAMIC CHIP 0.01MF	10% 50V
C2335	1-164-232-11	CERAMIC CHIP 0.01MF	10% 50V
C2336	1-126-163-11	ELECT 4.7MF	20% 16V
C2337	1-164-232-11	CERAMIC CHIP 0.01MF	10% 50V
C2338	1-163-038-00	CERAMIC CHIP 0.1MF	10% 25V
C2340	1-216-133-00	METAL GLAZE 3.3M 5%	1/10W
C2341	1-135-217-21	TANTAL. CHIP 15MF	20% 6.3V
C2345	1-164-505-11	CERAMIC CHIP 2.2MF	10% 50V
C2346	1-164-232-11	CERAMIC CHIP 0.01MF	10% 50V
C2347	1-163-367-11	CERAMIC CHIP 39PF	5% 50V
C2349	1-164-505-11	CERAMIC CHIP 2.2MF	10% 50V
C2350	1-164-232-11	CERAMIC CHIP 0.01MF	10% 50V
C2351	1-164-505-11	CERAMIC CHIP 2.2MF	10% 50V
C2352	1-164-505-11	CERAMIC CHIP 2.2MF	10% 50V
C2353	1-164-232-11	CERAMIC CHIP 0.01MF	10% 50V
C2354	1-164-232-11	CERAMIC CHIP 0.01MF	10% 50V
C2357	1-126-301-11	ELECT 1MF	20% 50V
C2360	1-163-109-00	CERAMIC CHIP 47PF	5% 50V
<CONNECTOR>			
E2-25	*1-564-521-11	PLUG, CONNECTOR 6P	
E2-26	*1-564-522-11	PLUG, CONNECTOR 7P	
E2-46	*1-564-518-11	PLUG, CONNECTOR 3P	
E2-002	1-573-965-21	PIN, CONNECTOR (PC BOARD) 50P	

REF. NO.	PART NO.	DESCRIPTION	REMARK
<DIODE>			
D2306	8-719-404-46	DIODE MA110	
D2307	8-719-946-98	DIODE FMN1	
D2308	8-719-946-98	DIODE FMN1	
D2309	8-719-404-46	DIODE MA110	
D2312	8-719-404-46	DIODE MA110	
D2313	8-719-404-46	DIODE MA110	
D2314	8-713-300-57	DIODE 1T33	
D2317	8-719-404-46	DIODE MA110	
<IC>			
IC2301	8-759-066-52	IC PCA8510T/012-T	
IC2303	8-759-925-75	IC SN74HC05ANS	
IC2304	8-752-037-15	IC CXAI387S	
IC2306	8-759-011-65	IC MC74HC4053F	
IC2307	8-752-058-68	IC CXAI315M	
<COIL>			
L2304	1-408-414-00	INDUCTOR 27UH	
<TRANSISTOR>			
Q2301	8-729-903-10	TRANSISTOR FMW1	
Q2303	8-729-403-27	TRANSISTOR XN4401	
Q2304	8-729-925-79	TRANSISTOR IMX3	
Q2305	8-729-903-10	TRANSISTOR FMW1	
Q2306	8-729-403-27	TRANSISTOR XN4401	
Q2307	8-729-403-27	TRANSISTOR XN4401	
Q2308	8-729-403-27	TRANSISTOR XN4401	
Q2309	8-729-903-10	TRANSISTOR FMW1	
Q2310	8-729-403-27	TRANSISTOR XN4401	
Q2311	8-729-903-10	TRANSISTOR FMW1	
Q2312	8-729-403-27	TRANSISTOR XN4401	
Q2313	8-729-903-10	TRANSISTOR FMW1	
Q2314	8-729-403-27	TRANSISTOR XN4401	
Q2315	8-729-903-10	TRANSISTOR FMW1	
Q2317	8-729-216-22	TRANSISTOR 2SA1162-G	
Q2318	8-729-216-22	TRANSISTOR 2SA1162-G	
Q2319	8-729-216-22	TRANSISTOR 2SA1162-G	
Q2320	8-729-422-27	TRANSISTOR 2SD601A-Q	
Q2321	8-729-422-27	TRANSISTOR 2SD601A-Q	
Q2322	8-729-422-27	TRANSISTOR 2SD601A-Q	
Q2324	8-729-216-22	TRANSISTOR 2SA1162-G	
Q2326	8-729-422-27	TRANSISTOR 2SD601A-Q	
Q2327	8-729-422-27	TRANSISTOR 2SD601A-Q	
Q2328	8-729-925-79	TRANSISTOR IMX3	
Q2329	8-729-925-79	TRANSISTOR IMX3	
Q2330	8-729-903-10	TRANSISTOR FMW1	
Q2336	8-729-925-79	TRANSISTOR IMX3	
Q2337	8-729-925-79	TRANSISTOR IMX3	
Q2339	8-729-422-27	TRANSISTOR 2SD601A-Q	
Q2340	8-729-422-27	TRANSISTOR 2SD601A-Q	
Q2341	8-729-422-27	TRANSISTOR 2SD601A-Q	
<RESISTOR>			
R2302	1-216-049-00	METAL GLAZE 1K 5%	1/10W
R2303	1-216-049-00	METAL GLAZE 1K 5%	1/10W
R2304	1-216-049-00	METAL GLAZE 1K 5%	1/10W
R2305	1-216-033-00	METAL GLAZE 220 5%	1/10W
R2306	1-216-045-00	METAL GLAZE 680 5%	1/10W
R2307	1-216-045-00	METAL GLAZE 680 5%	1/10W

REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
R2308	1-216-045-00	METAL GLAZE	680 5% 1/10W	R2379	1-216-043-00	METAL GLAZE	560 5% 1/10W
R2309	1-216-041-00	METAL GLAZE	470 5% 1/10W	R2380	1-216-043-00	METAL GLAZE	560 5% 1/10W
R2310	1-216-055-00	METAL GLAZE	1.8K 5% 1/10W	R2381	1-216-043-00	METAL GLAZE	560 5% 1/10W
R2311	1-216-025-00	METAL GLAZE	100 5% 1/10W	R2382	1-216-073-00	METAL GLAZE	10K 5% 1/10W
R2312	1-216-043-00	METAL GLAZE	560 5% 1/10W	R2384	1-216-081-00	METAL GLAZE	22K 5% 1/10W
R2313	1-216-055-00	METAL GLAZE	1.8K 5% 1/10W	R2385	1-216-075-00	METAL GLAZE	12K 5% 1/10W
R2314	1-216-061-00	METAL GLAZE	3.3K 5% 1/10W	R2386	1-216-049-00	METAL GLAZE	1K 5% 1/10W
R2315	1-216-081-00	METAL GLAZE	22K 5% 1/10W	R2387	1-216-025-00	METAL GLAZE	100 5% 1/10W
R2317	1-216-041-00	METAL GLAZE	470 5% 1/10W	R2388	1-216-017-00	METAL GLAZE	47 5% 1/10W
R2318	1-216-055-00	METAL GLAZE	1.8K 5% 1/10W	R2389	1-216-206-00	METAL GLAZE	2.2K 5% 1/8W
R2319	1-216-079-00	METAL GLAZE	18K 5% 1/10W	R2390	1-216-043-00	METAL GLAZE	560 5% 1/10W
R2320	1-216-061-00	METAL GLAZE	3.3K 5% 1/10W	R2392	1-216-206-00	METAL GLAZE	2.2K 5% 1/8W
R2321	1-216-063-00	METAL GLAZE	3.9K 5% 1/10W	R2393	1-216-017-00	METAL GLAZE	47 5% 1/10W
R2322	1-216-049-00	METAL GLAZE	1K 5% 1/10W	R2394	1-216-049-00	METAL GLAZE	1K 5% 1/10W
R2323	1-216-067-00	METAL GLAZE	5.6K 5% 1/10W	R2395	1-216-001-00	METAL GLAZE	10 5% 1/10W
R2324	1-216-049-00	METAL GLAZE	1K 5% 1/10W	R2396	1-216-206-00	METAL GLAZE	2.2K 5% 1/8W
R2325	1-216-049-00	METAL GLAZE	1K 5% 1/10W	R2397	1-216-043-00	METAL GLAZE	560 5% 1/10W
R2326	1-216-061-00	METAL GLAZE	3.3K 5% 1/10W	R2399	1-216-001-00	METAL GLAZE	10 5% 1/10W
R2327	1-216-063-00	METAL GLAZE	3.9K 5% 1/10W	R3301	1-216-049-00	METAL GLAZE	1K 5% 1/10W
R2328	1-216-025-00	METAL GLAZE	100 5% 1/10W	R3302	1-216-001-00	METAL GLAZE	10 5% 1/10W
R2329	1-216-025-00	METAL GLAZE	100 5% 1/10W	R3303	1-216-069-00	METAL GLAZE	6.8K 5% 1/10W
R2330	1-216-061-00	METAL GLAZE	3.3K 5% 1/10W	R3304	1-216-091-00	METAL GLAZE	56K 5% 1/10W
R2331	1-216-063-00	METAL GLAZE	3.9K 5% 1/10W	R3306	1-216-089-91	METAL GLAZE	47K 5% 1/10W
R2332	1-216-025-00	METAL GLAZE	100 5% 1/10W	R3307	1-216-085-00	METAL GLAZE	33K 5% 1/10W
R2333	1-216-067-00	METAL GLAZE	5.6K 5% 1/10W	R3308	1-216-043-00	METAL GLAZE	560 5% 1/10W
R2334	1-216-295-00	METAL GLAZE	0 5% 1/10W	R3309	1-216-049-00	METAL GLAZE	1K 5% 1/10W
R2335	1-216-295-00	METAL GLAZE	0 5% 1/10W	R3310	1-216-001-00	METAL GLAZE	10 5% 1/10W
R2336	1-216-295-00	METAL GLAZE	0 5% 1/10W	R3311	1-216-081-00	METAL GLAZE	22K 5% 1/10W
R2337	1-216-033-00	METAL GLAZE	220 5% 1/10W	R3312	1-216-049-00	METAL GLAZE	1K 5% 1/10W
R2338	1-216-081-00	METAL GLAZE	22K 5% 1/10W	R3313	1-216-083-00	METAL GLAZE	27K 5% 1/10W
R2340	1-216-049-00	METAL GLAZE	1K 5% 1/10W	R3314	1-216-689-11	METAL GLAZE	39K 5% 1/10W
R2341	1-216-041-00	METAL GLAZE	470 5% 1/10W	R3315	1-216-089-91	METAL GLAZE	47K 5% 1/10W
R2342	1-216-049-00	METAL GLAZE	1K 5% 1/10W	R3316	1-216-071-00	METAL GLAZE	8.2K 5% 1/10W
R2343	1-216-049-00	METAL GLAZE	1K 5% 1/10W	R3318	1-216-095-00	METAL GLAZE	82K 5% 1/10W
R2344	1-216-033-00	METAL GLAZE	220 5% 1/10W	R3319	1-216-095-00	METAL GLAZE	82K 5% 1/10W
R2345	1-216-077-00	METAL GLAZE	15K 5% 1/10W	R3320	1-216-017-00	METAL GLAZE	47 5% 1/10W
R2346	1-216-049-00	METAL GLAZE	1K 5% 1/10W	R3321	1-216-069-00	METAL GLAZE	6.8K 5% 1/10W
R2347	1-216-083-00	METAL GLAZE	27K 5% 1/10W	R3323	1-216-101-00	METAL GLAZE	150K 5% 1/10W
R2348	1-216-655-11	METAL CHIP	1.5K 0.50% 1/10W	R3324	1-216-049-00	METAL GLAZE	1K 5% 1/10W
R2349	1-216-025-00	METAL GLAZE	100 5% 1/10W	R3325	1-216-025-00	METAL GLAZE	100 5% 1/10W
R2350	1-216-097-00	METAL GLAZE	100K 5% 1/10W	R3328	1-216-001-00	METAL GLAZE	10 5% 1/10W
R2351	1-216-033-00	METAL GLAZE	220 5% 1/10W	R3330	1-216-033-00	METAL GLAZE	220 5% 1/10W
R2352	1-216-097-00	METAL GLAZE	100K 5% 1/10W	R3331	1-216-033-00	METAL GLAZE	220 5% 1/10W
R2353	1-216-097-00	METAL GLAZE	100K 5% 1/10W	R3332	1-216-081-00	METAL GLAZE	22K 5% 1/10W
R2354	1-216-210-00	METAL GLAZE	3.3K 5% 1/8W	R3333	1-216-657-11	METAL CHIP	1.8K 0.50% 1/10W
R2355	1-216-178-00	METAL GLAZE	150 5% 1/8W	R3334	1-216-661-11	METAL CHIP	2.7K 0.50% 1/10W
R2356	1-216-677-11	METAL CHIP	12K 0.50% 1/10W	R3335	1-216-025-00	METAL GLAZE	100 5% 1/10W
R2357	1-216-670-11	METAL CHIP	6.2K 0.50% 1/10W	R3336	1-216-683-11	METAL CHIP	22K 0.50% 1/10W
R2359	1-216-053-00	METAL GLAZE	1.5K 5% 1/10W	R3337	1-216-685-11	METAL CHIP	27K 0.50% 1/10W
R2360	1-216-053-00	METAL GLAZE	1.5K 5% 1/10W	R3339	1-216-081-00	METAL GLAZE	22K 5% 1/10W
R2361	1-216-053-00	METAL GLAZE	1.5K 5% 1/10W	R3340	1-216-049-00	METAL GLAZE	1K 5% 1/10W
R2362	1-216-053-00	METAL GLAZE	1.5K 5% 1/10W	R3341	1-216-677-11	METAL CHIP	12K 0.50% 1/10W
R2363	1-216-041-00	METAL GLAZE	470 5% 1/10W	R3342	1-216-670-11	METAL CHIP	6.2K 0.50% 1/10W
R2364	1-216-053-00	METAL GLAZE	1.5K 5% 1/10W	R3343	1-216-097-00	METAL GLAZE	100K 5% 1/10W
R2365	1-216-053-00	METAL GLAZE	1.5K 5% 1/10W	R3344	1-216-097-00	METAL GLAZE	100K 5% 1/10W
R2366	1-216-081-00	METAL GLAZE	22K 5% 1/10W	R3347	1-216-687-11	METAL CHIP	33K 0.50% 1/10W
R2367	1-216-043-00	METAL GLAZE	560 5% 1/10W	R3348	1-216-681-11	METAL CHIP	18K 0.50% 1/10W
R2368	1-216-081-00	METAL GLAZE	22K 5% 1/10W	R3349	1-216-073-00	METAL GLAZE	10K 5% 1/10W
R2371	1-216-033-00	METAL GLAZE	220 5% 1/10W	R3350	1-216-065-00	METAL GLAZE	4.7K 5% 1/10W
R2374	1-216-067-00	METAL GLAZE	5.6K 5% 1/10W	R3351	1-216-065-00	METAL GLAZE	4.7K 5% 1/10W
R2375	1-216-081-00	METAL GLAZE	22K 5% 1/10W	R3352	1-216-073-00	METAL GLAZE	10K 5% 1/10W
R2376	1-216-081-00	METAL GLAZE	22K 5% 1/10W	R3353	1-216-059-00	METAL GLAZE	2.7K 5% 1/10W
R2377	1-216-025-00	METAL GLAZE	100 5% 1/10W	R3354	1-216-059-00	METAL GLAZE	2.7K 5% 1/10W
R2378	1-216-025-00	METAL GLAZE	100 5% 1/10W				

E2 **Y2**

REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
R3356	1-216-655-11	METAL CHIP	1.5K 0.50% 1/10W	C449	1-163-009-11	CERAMIC CHIP 0.001MF	10% 50V
R3357	1-216-654-11	METAL CHIP	1.3K 0.50% 1/10W	C450	1-137-366-11	FILM 0.0022MF	5% 50V
R3358	1-216-659-11	METAL CHIP	2.2K 0.50% 1/10W	C451	1-124-261-00	ELECT 10MF	20% 50V
R3359	1-216-653-11	METAL CHIP	1.2K 0.50% 1/10W	C452	1-124-261-00	ELECT 10MF	20% 50V
R3360	1-216-077-00	METAL GLAZE	15K 5% 1/10W	C453	1-137-366-11	FILM 0.0022MF	5% 50V
R3361	1-216-049-00	METAL GLAZE	1K 5% 1/10W	C454	1-131-368-00	TANTALUM 3.3MF	10% 16V
R3362	1-216-097-00	METAL GLAZE	100K 5% 1/10W	C455	1-131-347-00	TANTALUM 1MF	20% 16V
R3364	1-216-295-00	METAL GLAZE	0 5% 1/10W	C456	1-136-171-00	FILM 0.33MF	5% 50V
R3365	1-216-097-00	METAL GLAZE	100K 5% 1/10W	C457	1-136-175-00	FILM 0.68MF	5% 50V
R3367	1-216-077-00	METAL GLAZE	15K 5% 1/10W	C458	1-126-101-11	ELECT 100MF	20% 16V
R3368	1-216-083-00	METAL GLAZE	27K 5% 1/10W	C459	1-126-101-11	ELECT 100MF	20% 16V
R3369	1-216-001-00	METAL GLAZE	10 5% 1/10W	C460	1-126-101-11	ELECT 100MF	20% 16V
R3370	1-216-001-00	METAL GLAZE	10 5% 1/10W	C461	1-124-499-11	ELECT 1MF	20% 50V
R3371	1-216-001-00	METAL GLAZE	10 5% 1/10W	C462	1-124-499-11	ELECT 1MF	20% 50V
R3373	1-216-673-11	METAL CHIP	8.2K 0.50% 1/10W	C465	1-130-485-00	MYLAR 0.015MF	5% 50V
R3374	1-216-059-00	METAL GLAZE	2.7K 5% 1/10W	C466	1-130-485-00	MYLAR 0.015MF	5% 50V
R3375	1-216-658-11	METAL CHIP	2K 0.50% 1/10W	C467	1-136-169-00	FILM 0.22MF	5% 50V
R3376	1-216-647-11	METAL CHIP	680 0.50% 1/10W	C468	1-136-169-00	FILM 0.22MF	5% 50V
R3377	1-216-647-11	METAL CHIP	680 0.50% 1/10W	C469	1-126-157-11	ELECT 10MF	20% 16V
R3378	1-216-659-11	METAL CHIP	2.2K 0.50% 1/10W	C470	1-126-157-11	ELECT 10MF	20% 16V
R3379	1-216-655-11	METAL CHIP	1.5K 0.50% 1/10W	C471	1-124-589-11	ELECT 47MF	20% 16V
R3380	1-216-661-11	METAL CHIP	2.7K 0.50% 1/10W	C472	1-164-232-11	CERAMIC CHIP 0.01MF	10% 50V
R3381	1-216-025-00	METAL GLAZE	100 5% 1/10W	C473	1-164-232-11	CERAMIC CHIP 0.01MF	10% 50V
R3382	1-216-295-00	METAL GLAZE	0 5% 1/10W	C474	1-124-234-00	ELECT 22MF	20% 16V
R3392	1-216-089-91	METAL GLAZE	47K 5% 1/10W	C475	1-164-232-11	CERAMIC CHIP 0.01MF	10% 50V
R3401	1-216-057-00	METAL GLAZE	2.2K 5% 1/10W	C476	1-124-234-00	ELECT 22MF	20% 16V
R7312	1-216-049-00	METAL GLAZE	1K 5% 1/10W	C477	1-164-232-11	CERAMIC CHIP 0.01MF	10% 50V
R7313	1-216-047-00	METAL GLAZE	820 5% 1/10W	C478	1-124-478-11	ELECT 100MF	20% 25V
R7314	1-216-057-00	METAL GLAZE	2.2K 5% 1/10W	C479	1-126-163-11	ELECT 4.7MF	20% 50V
<CRYSTAL>				C480	1-124-768-11	ELECT 4.7MF	20% 50V
X2301	1-577-071-11	VIBRATOR, CERAMIC		C481	1-124-768-11	ELECT 4.7MF	20% 50V
*****				C482	1-126-163-11	ELECT 4.7MF	20% 50V
*A-1394-443-A Y2 BOARD, COMPLETE				C483	1-163-113-00	CERAMIC CHIP 68PF	5% 50V
*****				C484	1-163-113-00	CERAMIC CHIP 68PF	5% 50V
				C485	1-163-038-00	CERAMIC CHIP 0.1MF	25V
				C487	1-164-232-11	CERAMIC CHIP 0.01MF	10% 50V
<CAPACITOR>				C488	1-164-232-11	CERAMIC CHIP 0.01MF	10% 50V
C401	1-124-234-00	ELECT	22MF 20% 16V	<CONNECTOR>			
C424	1-126-301-11	ELECT	1MF 20% 50V	Y2-401	1-573-966-11	PIN, CONNECTOR (PC BOARD) 36P	
C425	1-126-301-11	ELECT	1MF 20% 50V	<DIODE>			
C426	1-126-301-11	ELECT	1MF 20% 50V	D405	8-719-107-13	DIODE RD18M-B1	
C427	1-124-465-00	ELECT	0.47MF 20% 50V	D406	8-719-107-13	DIODE RD18M-B1	
C428	1-126-163-11	ELECT	4.7MF 20% 50V	D407	8-719-107-13	DIODE RD18M-B1	
C429	1-124-478-11	ELECT	100MF 20% 25V	D408	8-719-105-83	DIODE RD5.1M-B3	
C430	1-124-261-00	ELECT	10MF 20% 50V	D409	8-719-981-50	DIODE RB-100A	
C431	1-126-301-11	ELECT	1MF 20% 50V	D410	8-719-981-50	DIODE RB-100A	
C432	1-126-301-11	ELECT	1MF 20% 50V	D413	8-719-158-19	DIODE RD6.2SB	
C433	1-131-347-00	TANTALUM	1MF 20% 16V	D414	8-719-158-55	DIODE RD15SB	
C434	1-126-301-11	ELECT	1MF 20% 50V	D415	8-719-158-55	DIODE RD15SB	
C435	1-130-994-11	FILM	0.033MF 5% 50V	<IC>			
C436	1-126-301-11	ELECT	1MF 20% 50V	IC403	8-759-996-43	IC RC4558PS	
C437	1-130-487-00	MYLAR	0.022MF 5% 50V	IC404	8-759-067-24	IC 24C04A1/P	
C438	1-126-301-11	ELECT	1MF 20% 50V	IC406	8-752-037-24	IC CXA1264AS	
C439	1-124-034-51	ELECT	33MF 20% 16V	IC407	8-759-245-75	IC TA8184P	
C440	1-126-301-11	ELECT	1MF 20% 50V	IC408	8-752-057-18	IC CXA1315P	
C441	1-126-301-11	ELECT	1MF 20% 50V				
C442	1-124-261-00	ELECT	10MF 20% 50V				
C443	1-124-589-11	ELECT	47MF 20% 16V				
C446	1-124-234-00	ELECT	22MF 20% 16V				
C447	1-126-301-11	ELECT	1MF 20% 50V				
C448	1-136-170-00	FILM	0.27MF 5% 50V				

Y2 X2

REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
<TRANSISTOR>							
Q404	8-729-216-22	TRANSISTOR 2SA1162-G		R533	1-216-097-00	METAL GLAZE 100K 5% 1/10W	
Q405	8-729-216-22	TRANSISTOR 2SA1162-G		R535	1-216-049-00	METAL GLAZE 1K 5% 1/10W	
Q409	8-729-422-27	TRANSISTOR 2SD601A-Q		R536	1-216-065-00	METAL GLAZE 4.7K 5% 1/10W	
Q410	8-729-422-27	TRANSISTOR 2SD601A-Q		R537	1-216-067-00	METAL GLAZE 5.6K 5% 1/10W	
<RESISTOR>							
R447	1-216-033-00	METAL GLAZE 220 5% 1/10W		R538	1-218-754-11	METAL CHIP 120K 0.50% 1/10W	
R453	1-216-033-00	METAL GLAZE 220 5% 1/10W		R539	1-216-691-11	METAL CHIP 47K 0.50% 1/10W	
R464	1-216-081-00	METAL GLAZE 22K 5% 1/10W		R542	1-216-025-00	METAL GLAZE 100 5% 1/10W	
R465	1-216-081-00	METAL GLAZE 22K 5% 1/10W		R543	1-216-025-00	METAL GLAZE 100 5% 1/10W	
R466	1-216-025-00	METAL GLAZE 100 5% 1/10W		R546	1-216-682-11	METAL CHIP 20K 0.50% 1/10W	
R467	1-216-033-00	METAL GLAZE 220 5% 1/10W		R547	1-216-681-11	METAL CHIP 18K 0.50% 1/10W	
R468	1-216-033-00	METAL GLAZE 220 5% 1/10W		*****			
R469	1-216-055-00	METAL GLAZE 1.8K 5% 1/10W		*A-1394-444-A X2 BOARD, COMPLETE			
R470	1-216-033-00	METAL GLAZE 220 5% 1/10W		*****			
R471	1-216-033-00	METAL GLAZE 220 5% 1/10W		<CAPACITOR>			
R472	1-216-686-11	METAL CHIP 30K 0.50% 1/10W		C2501	1-163-020-00	CERAMIC CHIP 0.0082MF 10% 50V	
R473	1-216-295-00	METAL GLAZE 0 5% 1/10W		C2502	1-163-020-00	CERAMIC CHIP 0.0082MF 10% 50V	
R474	1-216-295-00	METAL GLAZE 0 5% 1/10W		C2503	1-163-001-11	CERAMIC CHIP 220PF 10% 50V	
R475	1-216-055-00	METAL GLAZE 1.8K 5% 1/10W		C2504	1-126-163-11	ELECT 4.7MF 20% 50V	
R476	1-216-669-11	METAL CHIP 5.6K 0.50% 1/10W		C2505	1-163-020-00	CERAMIC CHIP 0.0082MF 10% 50V	
R477	1-216-675-11	METAL CHIP 10K 0.50% 1/10W		C2506	1-163-020-00	CERAMIC CHIP 0.0082MF 10% 50V	
R478	1-216-089-91	METAL GLAZE 47K 5% 1/10W		C2507	1-163-017-00	CERAMIC CHIP 0.0047MF 10% 50V	
R479	1-216-669-11	METAL CHIP 5.6K 0.50% 1/10W		C2508	1-163-020-00	CERAMIC CHIP 0.0082MF 10% 50V	
R480	1-216-675-11	METAL CHIP 10K 0.50% 1/10W		C2509	1-163-020-00	CERAMIC CHIP 0.0082MF 10% 50V	
R481	1-216-089-91	METAL GLAZE 47K 5% 1/10W		C2510	1-163-989-11	CERAMIC CHIP 0.033MF 10% 25V	
R482	1-216-089-91	METAL GLAZE 47K 5% 1/10W		C2511	1-164-004-11	CERAMIC CHIP 0.1MF 10% 25V	
R483	1-216-089-91	METAL GLAZE 47K 5% 1/10W		C2512	1-164-004-11	CERAMIC CHIP 0.1MF 10% 25V	
R485	1-216-073-00	METAL GLAZE 10K 5% 1/10W		C2513	1-164-004-11	CERAMIC CHIP 0.1MF 10% 25V	
R486	1-216-073-00	METAL GLAZE 10K 5% 1/10W		C2514	1-164-004-11	CERAMIC CHIP 0.1MF 10% 25V	
R488	1-216-295-00	METAL GLAZE 0 5% 1/10W		C2515	1-164-004-11	CERAMIC CHIP 0.1MF 10% 25V	
R494	1-216-025-00	METAL GLAZE 100 5% 1/10W		C2516	1-164-232-11	CERAMIC CHIP 0.01MF 10% 50V	
R495	1-216-025-00	METAL GLAZE 100 5% 1/10W		C2517	1-126-157-11	ELECT 10MF 20% 16V	
R496	1-216-025-00	METAL GLAZE 100 5% 1/10W		C2518	1-126-163-11	ELECT 4.7MF 20% 50V	
R497	1-216-033-00	METAL GLAZE 220 5% 1/10W		C2519	1-126-301-11	ELECT 1MF 20% 50V	
R498	1-216-025-00	METAL GLAZE 100 5% 1/10W		C2520	1-126-163-11	ELECT 4.7MF 20% 50V	
R499	1-216-025-00	METAL GLAZE 100 5% 1/10W		C2521	1-163-809-11	CERAMIC CHIP 0.047MF 10% 25V	
R500	1-216-081-00	METAL GLAZE 22K 5% 1/10W		C2522	1-124-252-00	ELECT 0.33MF 20% 50V	
R501	1-216-669-11	METAL CHIP 5.6K 0.50% 1/10W		C2523	1-126-163-11	ELECT 4.7MF 20% 50V	
R502	1-216-033-00	METAL GLAZE 220 5% 1/10W		C2524	1-164-004-11	CERAMIC CHIP 0.1MF 10% 25V	
R503	1-216-663-11	METAL CHIP 3.3K 0.50% 1/10W		C2525	1-126-163-11	ELECT 4.7MF 20% 50V	
R504	1-216-675-11	METAL CHIP 10K 0.50% 1/10W		C2526	1-164-004-11	CERAMIC CHIP 0.1MF 10% 25V	
R507	1-216-295-00	METAL GLAZE 0 5% 1/10W		C2527	1-126-157-11	ELECT 10MF 20% 16V	
R509	1-216-065-00	METAL GLAZE 4.7K 5% 1/10W		C2528	1-124-465-00	ELECT 0.47MF 20% 50V	
R510	1-216-061-00	METAL GLAZE 3.3K 5% 1/10W		C2529	1-163-989-11	CERAMIC CHIP 0.033MF 10% 25V	
R512	1-216-065-00	METAL GLAZE 4.7K 5% 1/10W		C2530	1-164-182-11	CERAMIC CHIP 0.0033MF 10% 50V	
R513	1-216-667-11	METAL CHIP 4.7K 0.50% 1/10W		C2531	1-126-301-11	ELECT 1MF 20% 50V	
R515	1-216-295-00	METAL GLAZE 0 5% 1/10W		C2532	1-126-301-11	ELECT 1MF 20% 50V	
R517	1-216-025-00	METAL GLAZE 100 5% 1/10W		C2533	1-124-261-00	ELECT 10MF 20% 50V	
R518	1-216-089-91	METAL GLAZE 47K 5% 1/10W		C2534	1-163-257-11	CERAMIC CHIP 180PF 5% 50V	
R519	1-216-295-00	METAL GLAZE 0 5% 1/10W		C2535	1-164-004-11	CERAMIC CHIP 0.1MF 10% 25V	
R521	1-216-061-00	METAL GLAZE 3.3K 5% 1/10W		C2536	1-164-004-11	CERAMIC CHIP 0.1MF 10% 25V	
R522	1-216-033-00	METAL GLAZE 220 5% 1/10W		C2537	1-126-163-11	ELECT 4.7MF 20% 50V	
R523	1-216-033-00	METAL GLAZE 220 5% 1/10W		C2538	1-126-163-11	ELECT 4.7MF 20% 50V	
R524	1-216-065-00	METAL GLAZE 4.7K 5% 1/10W		C2539	1-164-232-11	CERAMIC CHIP 0.01MF 10% 50V	
R525	1-216-067-00	METAL GLAZE 5.6K 5% 1/10W		C2540	1-164-004-11	CERAMIC CHIP 0.1MF 10% 25V	
R526	1-216-049-00	METAL GLAZE 1K 5% 1/10W		C2541	1-163-139-00	CERAMIC CHIP 820PF 5% 50V	
R527	1-218-754-11	METAL CHIP 120K 0.50% 1/10W		C2542	1-124-478-11	ELECT 100MF 20% 25V	
R528	1-216-691-11	METAL CHIP 47K 0.50% 1/10W		C2543	1-124-252-00	ELECT 0.33MF 20% 50V	
R529	1-216-097-00	METAL GLAZE 100K 5% 1/10W		C2544	1-164-161-11	CERAMIC CHIP 0.0022MF 10% 50V	
R531	1-216-097-00	METAL GLAZE 100K 5% 1/10W		C2545	1-126-301-11	ELECT 1MF 20% 50V	
R532	1-216-097-00	METAL GLAZE 100K 5% 1/10W		C2546	1-126-163-11	ELECT 4.7MF 20% 50V	

X2

REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
C2547	1-126-163-11	ELECT 4.7MF	20% 25V			<JACK>	
C2548	1-163-809-11	CERAMIC CHIP 0.047MF	10% 25V				
C2549	1-126-163-11	ELECT 4.7MF	20% 50V	J2501	1-573-966-11	PIN, CONNECTOR (PC BOARD) 36P	
C2550	1-126-163-11	ELECT 4.7MF	20% 25V			<TRANSISTOR>	
C2551	1-126-301-11	ELECT 1MF	20% 50V				
C2552	1-126-163-11	ELECT 4.7MF	20% 50V				
C2553	1-126-301-11	ELECT 1MF	20% 50V	Q2501	8-729-230-49	TRANSISTOR 2SC2712-YG	
C2554	1-124-234-00	ELECT 22MF	20% 16V			<RESISTOR>	
C2555	1-164-004-11	CERAMIC CHIP 0.1MF	10% 25V	R2501	1-216-079-00	METAL GLAZE 18K 5%	1/10W
C2556	1-124-257-00	ELECT 2.2MF	20% 50V	R2502	1-216-097-00	METAL GLAZE 100K 5%	1/10W
C2557	1-124-234-00	ELECT 22MF	20% 16V	R2503	1-216-091-00	METAL GLAZE 56K 5%	1/10W
C2558	1-126-301-11	ELECT 1MF	20% 50V	R2504	1-216-109-00	METAL GLAZE 330K 5%	1/10W
C2559	1-164-004-11	CERAMIC CHIP 0.1MF	10% 25V	R2505	1-216-109-00	METAL GLAZE 330K 5%	1/10W
C2560	1-164-161-11	CERAMIC CHIP 0.0022MF	10% 50V				
C2561	1-126-301-11	ELECT 1MF	20% 50V	R2506	1-216-101-00	METAL GLAZE 150K 5%	1/10W
C2562	1-163-263-11	CERAMIC CHIP 330PF	5% 50V	R2507	1-216-091-00	METAL GLAZE 56K 5%	1/10W
C2563	1-163-257-11	CERAMIC CHIP 180PF	5% 50V	R2508	1-216-079-00	METAL GLAZE 18K 5%	1/10W
C2564	1-126-301-11	ELECT 1MF	20% 50V	R2509	1-216-130-11	METAL GLAZE 2.4M 5%	1/10W
C2565	1-126-163-11	ELECT 4.7MF	20% 50V	R2510	1-216-097-00	METAL GLAZE 100K 5%	1/10W
C2566	1-126-163-11	ELECT 4.7MF	20% 50V				
C2567	1-126-163-11	ELECT 4.7MF	20% 50V	R2511	1-216-085-00	METAL GLAZE 33K 5%	1/10W
C2568	1-163-263-11	CERAMIC CHIP 330PF	5% 50V	R2512	1-216-103-00	METAL GLAZE 180K 5%	1/10W
C2569	1-163-257-11	CERAMIC CHIP 180PF	5% 50V	R2513	1-216-085-00	METAL GLAZE 33K 5%	1/10W
C2570	1-124-234-00	ELECT 22MF	20% 16V	R2514	1-216-103-00	METAL GLAZE 180K 5%	1/10W
C2571	1-126-301-11	ELECT 1MF	20% 50V	R2515	1-216-073-00	METAL GLAZE 10K 5%	1/10W
C2572	1-126-163-11	ELECT 4.7MF	20% 50V	R2516	1-216-065-00	METAL GLAZE 4.7K 5%	1/10W
C2573	1-124-234-00	ELECT 22MF	20% 16V	R2517	1-216-133-00	METAL GLAZE 3.3M 5%	1/10W
C2574	1-126-301-11	ELECT 1MF	20% 50V	R2518	1-216-072-00	METAL GLAZE 9.1K 5%	1/10W
C2575	1-126-301-11	ELECT 1MF	20% 50V	R2519	1-216-133-00	METAL GLAZE 3.3M 5%	1/10W
C2576	1-126-301-11	ELECT 1MF	20% 50V	R2520	1-216-133-00	METAL GLAZE 3.3M 5%	1/10W
C2577	1-126-163-11	ELECT 4.7MF	20% 50V	R2521	1-216-133-00	METAL GLAZE 3.3M 5%	1/10W
C2578	1-126-163-11	ELECT 4.7MF	20% 50V	R2522	1-216-061-00	METAL GLAZE 3.3K 5%	1/10W
C2579	1-126-103-11	ELECT 470MF	20% 16V	R2523	1-216-077-00	METAL GLAZE 15K 5%	1/10W
C2580	1-124-478-11	ELECT 100MF	20% 25V	R2524	1-216-129-00	METAL GLAZE 2.2M 5%	1/10W
C2581	1-163-109-00	CERAMIC CHIP 47PF	5% 50V	R2526	1-216-133-00	METAL GLAZE 3.3M 5%	1/10W
C2582	1-124-477-11	ELECT 47MF	20% 25V	R2527	1-216-133-00	METAL GLAZE 3.3M 5%	1/10W
C2583	1-126-163-11	ELECT 4.7MF	20% 50V	R2528	1-216-081-00	METAL GLAZE 22K 5%	1/10W
C2584	1-163-109-00	CERAMIC CHIP 47PF	5% 50V	R2529	1-216-081-00	METAL GLAZE 22K 5%	1/10W
C2585	1-126-163-11	ELECT 4.7MF	20% 50V	R2530	1-216-133-00	METAL GLAZE 3.3M 5%	1/10W
C2586	1-163-009-11	CERAMIC CHIP 0.001MF	10% 50V	R2531	1-216-089-91	METAL GLAZE 47K 5%	1/10W
C2587	1-126-163-11	ELECT 4.7MF	20% 50V	R2532	1-216-133-00	METAL GLAZE 3.3M 5%	1/10W
C2588	1-126-163-11	ELECT 4.7MF	20% 50V	R2533	1-216-089-91	METAL GLAZE 47K 5%	1/10W
C2589	1-126-163-11	ELECT 4.7MF	20% 50V	R2534	1-216-073-00	METAL GLAZE 10K 5%	1/10W
C2590	1-126-163-11	ELECT 4.7MF	20% 50V	R2535	1-216-073-00	METAL GLAZE 10K 5%	1/10W
C2591	1-124-478-11	ELECT 100MF	20% 25V	R2536	1-216-129-00	METAL GLAZE 2.2M 5%	1/10W
		<DIODE>		R2537	1-216-077-00	METAL GLAZE 15K 5%	1/10W
D2501	8-719-104-34	DIODE 1S2836		R2539	1-216-061-00	METAL GLAZE 3.3K 5%	1/10W
D2502	8-719-106-88	DIODE RD15M-B1		R2540	1-216-075-00	METAL GLAZE 12K 5%	1/10W
D2503	8-719-106-88	DIODE RD15M-B1		R2541	1-216-069-00	METAL GLAZE 6.8K 5%	1/10W
D2504	8-719-106-88	DIODE RD15M-B1		R2542	1-216-081-00	METAL GLAZE 22K 5%	1/10W
		<IC>		R2543	1-216-081-00	METAL GLAZE 22K 5%	1/10W
IC2501	8-759-031-31	IC MC33174M		R2544	1-216-073-00	METAL GLAZE 10K 5%	1/10W
IC2502	8-752-050-75	IC CXA1373Q		R2545	1-216-048-00	METAL GLAZE 910 5%	1/10W
IC2503	8-759-604-70	IC M51523AL		R2546	1-216-133-00	METAL GLAZE 3.3M 5%	1/10W
IC2504	8-759-031-31	IC MC33174M		R2547	1-216-133-00	METAL GLAZE 3.3M 5%	1/10W
IC2505	8-759-604-70	IC M51523AL					
IC2506	8-759-106-22	IC UPD4052BG		R2548	1-216-073-00	METAL GLAZE 10K 5%	1/10W
IC2507	8-759-038-68	IC MC33172ML		R2549	1-216-065-00	METAL GLAZE 4.7K 5%	1/10W
IC2508	8-759-038-68	IC MC33172ML		R2550	1-216-088-00	METAL GLAZE 43K 5%	1/10W
				R2551	1-216-088-00	METAL GLAZE 43K 5%	1/10W
				R2552	1-216-049-00	METAL GLAZE 1K 5%	1/10W
				R2553	1-216-078-00	METAL GLAZE 16K 5%	1/10W
				R2554	1-216-082-00	METAL GLAZE 24K 5%	1/10W
				R2555	1-216-089-91	METAL GLAZE 47K 5%	1/10W
				R2556	1-216-049-00	METAL GLAZE 1K 5%	1/10W

The components identified by shading and mark Δ are critical for safety
 Replace only with part number specified.

KV-32XBR76
 RM-Y115

X2 G

REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
R2557	1-216-085-00	METAL GLAZE	33K 5% 1/10W	<CAPACITOR>			
R2558	1-216-088-00	METAL GLAZE	43K 5% 1/10W	C601	Δ 1-136-311-51	FILM	0.47MF 20% 125V
R2559	1-216-091-00	METAL GLAZE	56K 5% 1/10W	C602	Δ 1-162-599-01	CERAMIC	0.0047MF 20% 400V
R2560	1-216-103-00	METAL GLAZE	180K 5% 1/10W	C603	Δ 1-162-599-01	CERAMIC	0.0047MF 20% 400V
R2561	1-216-097-00	METAL GLAZE	100K 5% 1/10W	C604	Δ 1-128-588-11	ELECT	1000MF 20% 200V
R2562	1-216-089-91	METAL GLAZE	47K 5% 1/10W	C605	1-162-599-12	CERAMIC	0.0047MF 20% 400V
R2563	1-216-088-00	METAL GLAZE	43K 5% 1/10W	C606	1-130-851-00	FILM	0.082MF 5% 100V
R2564	1-216-088-00	METAL GLAZE	43K 5% 1/10W	C606	1-137-580-11	FILM	0.082MF 5% 100V
R2565	1-216-103-00	METAL GLAZE	180K 5% 1/10W	C607	1-130-851-00	FILM	0.082MF 5% 100V
R2566	1-216-073-00	METAL GLAZE	10K 5% 1/10W	C607	1-137-580-11	FILM	0.082MF 5% 100V
R2567	1-216-073-00	METAL GLAZE	10K 5% 1/10W	C608	1-130-851-00	FILM	0.082MF 5% 100V
R2568	1-216-049-00	METAL GLAZE	1K 5% 1/10W	C608	1-137-580-11	FILM	0.082MF 5% 100V
R2569	1-216-097-00	METAL GLAZE	100K 5% 1/10W	C609	1-130-851-00	FILM	0.082MF 5% 100V
R2570	1-216-091-00	METAL GLAZE	56K 5% 1/10W	C609	1-137-580-11	FILM	0.082MF 5% 100V
R2571	1-216-078-00	METAL GLAZE	16K 5% 1/10W	C610	1-137-588-11	FILM	0.0047MF 5% 800V
R2572	1-216-049-00	METAL GLAZE	1K 5% 1/10W	C611	1-137-592-11	FILM	0.01MF 5% 800V
R2573	1-216-082-00	METAL GLAZE	24K 5% 1/10W	C612	1-164-625-11	CERAMIC	680PF 10% 500V
R2574	1-216-085-00	METAL GLAZE	33K 5% 1/10W	C613	1-164-625-11	CERAMIC	680PF 10% 500V
R2575	1-216-089-91	METAL GLAZE	47K 5% 1/10W	C614	1-164-625-11	CERAMIC	680PF 10% 500V
R2576	1-216-049-00	METAL GLAZE	1K 5% 1/10W	C615	1-164-625-11	CERAMIC	680PF 10% 500V
R2577	1-216-081-00	METAL GLAZE	22K 5% 1/10W	C616	1-124-443-00	ELECT	100MF 20% 10V
R2578	1-216-081-00	METAL GLAZE	22K 5% 1/10W	C618	1-164-735-11	CAP, CERAMIC	1500PF
R2579	1-216-049-00	METAL GLAZE	1K 5% 1/10W	C619	1-164-735-11	CAP, CERAMIC	1500PF
R2580	1-216-081-00	METAL GLAZE	22K 5% 1/10W	C620	Δ 1-161-741-51	CERAMIC	0.001MF 10% 400V
R2581	1-216-081-00	METAL GLAZE	22K 5% 1/10W	C621	Δ 1-161-741-51	CERAMIC	0.001MF 10% 400V
R2582	1-216-083-00	METAL GLAZE	27K 5% 1/10W	C622	1-162-599-12	CERAMIC	0.0047MF 20% 400V
R2583	1-216-083-00	METAL GLAZE	27K 5% 1/10W	C623	1-137-493-11	FILM	0.0047MF 5% 630V
R2584	1-216-081-00	METAL GLAZE	22K 5% 1/10W	C624	1-126-301-11	ELECT	1MF 20% 50V
R2585	1-216-073-00	METAL GLAZE	10K 5% 1/10W	C625	1-126-162-11	ELECT	3.3MF 20% 50V
R2586	1-216-085-00	METAL GLAZE	33K 5% 1/10W	C626	1-130-480-00	MYLAR	0.0056MF 5% 50V
R2587	1-216-085-00	METAL GLAZE	33K 5% 1/10W	C651	1-104-702-11	ELECT	470MF 20% 180V
R2588	1-216-085-00	METAL GLAZE	33K 5% 1/10W	C652	1-124-960-11	ELECT	470MF 20% 180V
R2589	1-216-081-00	METAL GLAZE	22K 5% 1/10W	C653	1-124-556-11	ELECT	2200MF 20% 16V
R2590	1-216-079-00	METAL GLAZE	18K 5% 1/10W	C654	1-124-913-11	ELECT	470MF 20% 50V
R2591	1-216-073-00	METAL GLAZE	10K 5% 1/10W	C654	1-124-607-11	ELECT	2200MF 20% 50V
R2592	1-216-073-00	METAL GLAZE	10K 5% 1/10W	C655	1-162-117-00	CERAMIC	100PF 10% 500V
R2593	1-216-079-00	METAL GLAZE	18K 5% 1/10W	C656	1-124-119-00	ELECT	330MF 20% 16V
R2594	1-216-073-00	METAL GLAZE	10K 5% 1/10W	C657	1-106-351-00	MYLAR	0.0022MF 20% 200V
R2595	1-216-089-91	METAL GLAZE	47K 5% 1/10W	C658	1-126-157-11	ELECT	10MF 20% 16V
R2596	1-216-049-00	METAL GLAZE	1K 5% 1/10W	C659	1-130-485-00	MYLAR	0.015MF 5% 50V
R2597	1-216-049-00	METAL GLAZE	1K 5% 1/10W	C661	1-124-484-11	ELECT	220MF 20% 35V
R2598	1-216-089-91	METAL GLAZE	47K 5% 1/10W	C662	1-124-484-11	ELECT	220MF 20% 35V
R2599	1-216-073-00	METAL GLAZE	10K 5% 1/10W	C663	1-126-104-11	ELECT	470MF 20% 35V
R2600	1-216-049-00	METAL GLAZE	1K 5% 1/10W	C666	1-126-101-11	ELECT	100MF 20% 16V
R2601	1-216-089-91	METAL GLAZE	47K 5% 1/10W	C667	1-124-443-00	ELECT	100MF 20% 10V
R2602	1-216-073-00	METAL GLAZE	10K 5% 1/10W	C668	1-124-638-11	ELECT	22MF 20% 6.3V
R2604	1-216-089-91	METAL GLAZE	47K 5% 1/10W	C669	1-162-318-11	CERAMIC	0.001MF 10% 500V
R2605	1-216-049-00	METAL GLAZE	1K 5% 1/10W	C670	1-162-318-11	CERAMIC	0.001MF 10% 500V
R2606	1-216-049-00	METAL GLAZE	1K 5% 1/10W	C672	1-124-484-11	ELECT	220MF 20% 35V
R2610	1-216-125-00	METAL GLAZE	1.5M 5% 1/10W	C677	Δ 1-136-311-51	FILM	0.47MF 20% 125V
R2611	1-216-125-00	METAL GLAZE	1.5M 5% 1/10W	C678	1-124-360-00	ELECT	1000MF 20% 16V
R2612	1-216-125-00	METAL GLAZE	1.5M 5% 1/10W	<CONNECTOR>			
R2613	1-216-125-00	METAL GLAZE	1.5M 5% 1/10W	G3	*1-573-986-11	PIN, CONNECTOR (PC BOARD)	5P
R2614	1-216-125-00	METAL GLAZE	1.5M 5% 1/10W	G4	*1-564-510-11	PLUG, CONNECTOR	7P
R2615	1-216-125-00	METAL GLAZE	1.5M 5% 1/10W	G5	*1-564-507-11	PLUG, CONNECTOR	4P
R2616	1-216-125-00	METAL GLAZE	1.5M 5% 1/10W	G29	*1-508-786-00	PIN, CONNECTOR (5MM PITCH)	2P
R2617	1-216-125-00	METAL GLAZE	1.5M 5% 1/10W	G30	*1-508-765-00	PIN, CONNECTOR (5MM PITCH)	3P
R2618	1-216-061-00	METAL GLAZE	3.3K 5% 1/10W	G31	*1-580-843-11	PIN, CONNECTOR (POWER)	
R2619	1-216-049-00	METAL GLAZE	1K 5% 1/10W	TP651	1-508-784-00	PIN, CONNECTOR (5MM PITCH)	1P

*A-1316-161-A G BOARD, COMPLETE

4-382-854-11 SCREW (M3X10), P, SW (+)

The components identified by shading and mark Δ are critical for safety
Replace only with part number specified

G

REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
<DIODE>				IC654 8-719-156-73 PHOTO COUPLER PS2501-1LB			
D601	8-719-322-99	DIODE D6S860L		<COIL>			
D602	8-719-510-48	DIODE DIN20R		L651	1-412-526-11	INDUCTOR 12UH	
D603	8-719-510-48	DIODE DIN20R		L652	1-410-673-31	INDUCTOR 68UH	
D604	8-719-510-48	DIODE DIN20R		L653	1-412-532-11	INDUCTOR 39UH	
D605	8-719-510-48	DIODE DIN20R		L654	1-412-532-11	INDUCTOR 39UH	
				L655	1-412-532-11	INDUCTOR 39UH	
D606	8-719-911-19	DIODE ISS119		L656	1-412-526-11	INDUCTOR 12UH	
D607	8-719-510-48	DIODE DIN20R		<TRANSISTOR>			
D608	8-719-510-48	DIODE DIN20R		Q601	8-729-927-22	TRANSISTOR 2SC4664MNP-F	
D609	8-719-510-48	DIODE DIN20R		Q602	8-729-927-22	TRANSISTOR 2SC4664MNP-F	
D610	8-719-510-48	DIODE DIN20R		Q603	8-729-927-22	TRANSISTOR 2SC4664MNP-F	
D611	8-719-510-48	DIODE DIN20R		Q604	8-729-927-22	TRANSISTOR 2SC4664MNP-F	
D612	8-719-510-48	DIODE DIN20R		Q605	8-729-209-15	TRANSISTOR 2SD2012	
D613	8-719-109-93	DIODE RD6.2ESB2		Q652	8-729-119-78	TRANSISTOR 2SC2785-HFE	
D651	8-719-027-43	DIODE S2L20UF		Q653	8-729-201-53	TRANSISTOR 2SA1015-GR	
D652	8-719-027-43	DIODE S2L20UF		Q654	8-729-119-78	TRANSISTOR 2SC2785-HFE	
D653	8-719-027-43	DIODE S2L20UF		Q655	8-729-119-78	TRANSISTOR 2SC2785-HFE	
D654	8-719-027-43	DIODE S2L20UF		Q656	8-729-119-78	TRANSISTOR 2SC2785-HFE	
D655	8-719-510-13	DIODE DIOSC4MR		<RESISTOR>			
D656	8-719-022-97	DIODE D2S4MF		R601	1-249-388-11	CARBON 3.9 5% 1/4W F	
D657	8-719-510-02	DIODE D1NS4		R602	1-205-707-12	WIREWOUND 2.2 5% 10W	
D658	8-719-027-22	DIODE D3S6M-F		R603	1-247-889-00	CARBON 270K 5% 1/4W	
D659	8-719-027-22	DIODE D3S6M-F		R604	1-216-443-11	METAL OXIDE 56K 5% 1W F	
D660	8-719-027-22	DIODE D3S6M-F		R605	1-216-443-11	METAL OXIDE 56K 5% 1W F	
D661	8-719-027-22	DIODE D3S6M-F		R606	1-216-443-11	METAL OXIDE 56K 5% 1W F	
D663	8-719-510-02	DIODE D1NS4		R607	1-216-443-11	METAL OXIDE 56K 5% 1W F	
D665	8-719-510-02	DIODE D1NS4		R608	1-216-352-11	METAL OXIDE 1.8 5% 1W F	
D666	8-719-109-85	DIODE RD5.1ESB2		R609	1-216-351-00	METAL OXIDE 1.5 5% 1W F	
D667	8-719-911-19	DIODE ISS119		R610	1-216-351-00	METAL OXIDE 1.5 5% 1W F	
D668	8-719-911-19	DIODE ISS119		R611	1-216-352-11	METAL OXIDE 1.8 5% 1W F	
D669	8-719-109-54	DIODE RD2.2ESB2		R612	1-249-377-11	CARBON 0.47 5% 1/4W F	
D670	8-719-911-19	DIODE ISS119		R613	1-215-447-00	METAL 12K 1% 1/4W	
D671	8-719-110-31	DIODE RD12ESB2		R614	1-215-433-00	METAL 3.3K 1% 1/4W	
D672	8-719-911-19	DIODE ISS119		R615	1-249-441-11	CARBON 100K 5% 1/4W	
				R616	1-249-417-11	CARBON 1K 5% 1/4W	
				R617	1-249-417-11	CARBON 1K 5% 1/4W	
<FUSE>				R618	1-247-688-11	CARBON 10 5% 1/4W F	
F1	1-532-783-21	FUSE, MTC30 (SECONDARY) 5A/125V		R619	1-216-343-00	METAL OXIDE 0.33 5% 1W F	
F601	1-578-222-11	FUSE 6.3A/125V		R620	1-202-730-00	SOLID 8.2M 20% 1/2W	
	1-533-190-11	CLIP, FUSE; F601		R621	1-249-423-11	CARBON 3.3K 5% 1/4W	
F602	1-578-107-22	FUSE 3.15A/250V		R622	1-202-888-01	SOLID 2.2M 20% 1/2W	
	1-533-223-11	CLIP, FUSE; F602		R623	1-212-956-00	FUSIBLE 8.2 5% 1/2W F	
<FERRITE BEAD>				R651	1-249-405-11	CARBON 100 5% 1/4W F	
FB651	1-410-397-21	FERRITE BEAD INDUCTOR 1.1UH		R652	1-215-868-00	METAL OXIDE 680 5% 1W F	
FB652	1-410-397-21	FERRITE BEAD INDUCTOR 1.1UH		R653	1-249-405-11	CARBON 100 5% 1/4W	
FB653	1-410-397-21	FERRITE BEAD INDUCTOR 1.1UH		R654	1-249-399-11	CARBON 33 5% 1/4W F	
FB654	1-410-397-21	FERRITE BEAD INDUCTOR 1.1UH		R655	1-249-393-11	CARBON 10 5% 1/4W F	
FB655	1-412-911-11	INDUCTOR, FERRITE BEAD		R656	1-249-443-11	CARBON 0.47 5% 1/4W F	
FB656	1-410-397-21	FERRITE BEAD INDUCTOR 1.1UH		R657	1-216-357-00	METAL OXIDE 4.7 5% 1W F	
FB659	1-412-911-11	INDUCTOR, FERRITE BEAD		R658	1-215-408-00	METAL 300 1% 1/4W	
FB660	1-412-911-11	INDUCTOR, FERRITE BEAD		R659	1-249-443-11	CARBON 0.47 5% 1/4W F	
FB661	1-412-911-11	INDUCTOR, FERRITE BEAD		R660	1-215-446-00	METAL 11K 1% 1/4W	
FB662	1-412-911-11	INDUCTOR, FERRITE BEAD		R661	1-215-418-00	METAL 750 1% 1/4W	
FB663	1-412-911-11	INDUCTOR, FERRITE BEAD		R662	1-249-421-11	CARBON 2.2K 5% 1/4W	
FB669	1-410-397-21	FERRITE BEAD INDUCTOR 1.1UH		R663	1-249-410-11	CARBON 270 5% 1/4W	
FB670	1-410-397-21	FERRITE BEAD INDUCTOR 1.1UH		R664	1-215-861-00	METAL OXIDE 47 5% 1W F	
				R665	1-215-403-00	METAL 180 1% 1/4W	
<IC>							
CS51	1-809-528-12	POWER MODULE OM-448					

The components identified by shading and mark Δ are critical for safety
Replace only with part number specified.



REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
R666	1-215-421-00	METAL	1K 1% 1/4W	C24	*1-564-511-51	PLUG, CONNECTOR 8P	
R667	1-215-432-00	METAL	3K 1% 1/4W	C42	*1-691-134-11	PIN, CONNECTOR (PC BOARD) 2P	
R668	1-216-482-11	METAL OXIDE	1.8K 5% 3W F			<DIODE>	
R669	1-249-421-11	CARBON	2.2K 5% 1/4W	D701	8-719-911-19	DIODE 1SS119	
R670	1-249-412-11	CARBON	390 5% 1/4W	D702	8-719-911-19	DIODE 1SS119	
R671	1-216-384-11	METAL OXIDE	0.39 5% 3W F	D703	8-719-911-19	DIODE 1SS119	
R672	1-249-443-11	CARBON	0.47 5% 1/4W F	D704	8-719-911-19	DIODE 1SS119	
R673	1-249-415-11	CARBON	680 5% 1/4W	D705	8-719-911-19	DIODE 1SS119	
R674	1-249-421-11	CARBON	2.2K 5% 1/4W	D706	8-719-911-19	DIODE 1SS119	
R675	1-249-415-11	CARBON	680 5% 1/4W	D707	8-719-911-19	DIODE 1SS119	
R676	1-249-377-11	CARBON	0.47 5% 1/4W F	D708	8-719-911-19	DIODE 1SS119	
R677	1-249-433-11	CARBON	22K 5% 1/4W	D709	8-719-911-19	DIODE 1SS119	
R678	1-249-429-11	CARBON	10K 5% 1/4W	D710	8-719-901-83	DIODE 1SS83	
R679	1-216-428-00	METAL OXIDE	180 5% 1W F	D711	8-719-901-83	DIODE 1SS83	
R680	1-216-428-00	METAL OXIDE	180 5% 1W F	D712	8-719-901-83	DIODE 1SS83	
R681	1-249-377-11	CARBON	0.47 5% 1/4W F	D713	8-719-901-83	DIODE 1SS83	
R682	1-249-443-11	CARBON	0.47 5% 1/4W F	D714	8-719-911-19	DIODE 1SS119	
		<RELAY>				<JACK>	
RY601	1-515-516-00	RELAY		J701	*1-540-124-11	SOCKET, PICTURE TUBE	
RY602	*1-535-669-21	RELAY				<COIL>	
		<TRANSFORMER>		L701	1-410-671-31	INDUCTOR 47UH	
T601	Δ 1-424-585-11	TRANSFORMER, LINE FILTER				<TRANSISTOR>	
T602	Δ 1-424-585-11	TRANSFORMER, LINE FILTER		Q701	8-729-326-11	TRANSISTOR 2SC2611	
T603	1-450-300-31	TRANSFORMER, CONVERTER DRIVE		Q702	8-729-119-78	TRANSISTOR 2SC2785-HFE	
T604	Δ 1-450-958-12	TRANSFORMER, CONVERTER (P&T)		Q703	8-729-200-17	TRANSISTOR 2SA1091-0	
T605	1-424-663-11	TRANSFORMER, FERRITE (SBT)		Q704	8-729-326-11	TRANSISTOR 2SC2611	
		<THERMISTOR>		Q705	8-729-119-78	TRANSISTOR 2SC2785-HFE	
TRP601	Δ 1-800-686-43	THERMISTOR (POSITIVE)		Q706	8-729-200-17	TRANSISTOR 2SA1091-0	
		<VARISTOR>		Q707	8-729-200-17	TRANSISTOR 2SA1091-0	
VR601	Δ 1-809-786-11	VARISTOR		Q708	8-729-326-11	TRANSISTOR 2SC2611	
VR602	1-809-264-71	VARISTOR		Q709	8-729-119-78	TRANSISTOR 2SC2785-HFE	
		*****		Q710	8-729-255-12	TRANSISTOR 2SC2551-0	
*A-1331-272-A		C BOARD, COMPLETE		Q711	8-729-119-76	TRANSISTOR 2SA1175-HFE	
		*****		Q712	8-729-255-12	TRANSISTOR 2SC2551-0	
		<CAPACITOR>		Q714	8-729-200-17	TRANSISTOR 2SA1091-0	
C701	1-162-116-00	CERAMIC	680PF 10% 2KV	Q715	8-729-200-17	TRANSISTOR 2SA1091-0	
C702	1-137-490-11	FILM	0.01MF 10% 1KV	Q716	8-729-200-17	TRANSISTOR 2SA1091-0	
C704	1-123-946-00	ELECT	4.7MF 20% 250V			<RESISTOR>	
C705	1-106-375-12	MYLAR	0.022MF 200V	R701	1-216-398-11	METAL OXIDE 5.6 5% 3W F	
C706	1-106-375-12	MYLAR	0.022MF 200V	R702	1-202-883-11	SOLID 680K 20% 1/2W	
C707	1-164-083-11	CERAMIC	680PF 10% 50V	R703	1-202-838-00	SOLID 100K 20% 1/2W	
C708	1-164-083-11	CERAMIC	680PF 10% 50V	R706	1-202-838-00	SOLID 100K 20% 1/2W	
C709	1-164-083-11	CERAMIC	680PF 10% 50V	R707	1-202-842-11	SOLID 220K 20% 1/2W	
C710	1-164-082-11	CERAMIC	560PF 10% 50V	R708	1-202-818-00	SOLID 1K 20% 1/2W	
C711	1-124-120-11	ELECT	220MF 20% 16V	R709	1-202-818-00	SOLID 1K 20% 1/2W	
C712	1-164-082-11	CERAMIC	560PF 10% 50V	R710	1-202-818-00	SOLID 1K 20% 1/2W	
C713	1-164-082-11	CERAMIC	560PF 10% 50V	R713	1-216-486-00	METAL OXIDE 8.2K 5% 3W F	
C715	1-102-129-00	CERAMIC	0.01MF 10% 50V	R715	1-202-549-00	SOLID 100 10% 1/2W	
C718	1-102-129-00	CERAMIC	0.01MF 10% 50V	R716	1-216-486-00	METAL OXIDE 8.2K 5% 3W F	
C733	1-102-074-00	CERAMIC	0.001MF 10% 50V	R720	1-216-486-00	METAL OXIDE 8.2K 5% 3W F	
		<CONNECTOR>		R723	1-249-405-11	CARBON 100 5% 1/4W	
C2	*1-573-964-11	PIN, CONNECTOR (PC BOARD) 6P		R724	1-249-405-11	CARBON 100 5% 1/4W	
				R725	1-249-429-11	CARBON 10K 5% 1/4W	

The components identified by shading and mark Δ are critical for safety
Replace only with part number specified



REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
R726	1-249-408-11	CARBON	180 5% 1/4W	C918	1-102-074-00	CERAMIC	0.001MF 10% 50V
R727	1-249-429-11	CARBON	10K 5% 1/4W	C920	1-136-946-11	FILM	0.12MF 5% 200V
R728	1-249-408-11	CARBON	180 5% 1/4W	C921	1-136-177-00	FILM	1MF 5% 50V
R729	1-249-405-11	CARBON	100 5% 1/4W	C929	1-130-471-00	MYLAR	0.001MF 5% 50V
R730	1-249-408-11	CARBON	180 5% 1/4W	C930	1-130-483-00	MYLAR	0.01MF 5% 50V
R731	1-249-409-11	CARBON	220 5% 1/4W	<CONNECTOR>			
R732	1-249-409-11	CARBON	220 5% 1/4W	D14	1-573-299-21	CONNECTOR, BOARD TO BOARD 10P	
R733	1-249-409-11	CARBON	220 5% 1/4W	D18	1-573-299-21	CONNECTOR, BOARD TO BOARD 10P	
R735	1-249-418-11	CARBON	1.2K 5% 1/4W	D20	1-564-524-11	PLUG, CONNECTOR 9P	
R737	1-249-418-11	CARBON	1.2K 5% 1/4W	DY-2	*1-508-765-00	PIN, CONNECTOR (5MM PITCH) 3P	
R739	1-249-433-11	CARBON	22K 5% 1/4W	<DIODE>			
R740	1-215-902-11	METAL OXIDE	47K 5% 2W	D801	8-719-987-87	DIODE ERA85-009	
R741	1-249-417-11	CARBON	1K 5% 1/4W	D802	8-719-911-19	DIODE ISS119	
R742	1-249-423-11	CARBON	3.3K 5% 1/4W	D803	8-719-911-19	DIODE ISS119	
R743	1-249-423-11	CARBON	3.3K 5% 1/4W	D804	8-719-911-19	DIODE ISS119	
R744	1-249-423-11	CARBON	3.3K 5% 1/4W	D805	8-719-801-35	THYRISTOR SHOR3D42	
R745	1-249-417-11	CARBON	1K 5% 1/4W	D806	8-719-980-78	DIODE ERA83-006	
R746	1-215-902-11	METAL OXIDE	47K 5% 1W	D807	8-719-980-78	DIODE ERA83-006	
R747	1-249-429-11	CARBON	10K 5% 1/4W	D808	8-719-911-19	DIODE ISS119	
R748	1-216-398-11	METAL OXIDE	5.6 5% 3W	D809	8-719-911-19	DIODE ISS119	
R749	1-249-437-11	CARBON	47K 5% 1/4W	D810	8-719-911-19	DIODE ISS119	
R750	1-249-409-11	CARBON	220 5% 1/4W	D811	8-719-302-43	DIODE EL1Z	
R751	1-249-395-11	CARBON	15 5% 1/4W	D812	8-719-911-19	DIODE ISS119	
R752	1-249-393-11	CARBON	10 5% 1/4W	D814	8-719-121-24	DIODE RD9.1ESL	
R753	1-249-392-11	CARBON	8.2 5% 1/4W	D815	8-719-911-19	DIODE ISS119	
R754	1-249-418-11	CARBON	1.2K 5% 1/4W	D816	8-719-911-19	DIODE ISS119	
R777	1-249-441-11	CARBON	100K 5% 1/4W	D903	8-719-979-85	DIODE EGP20G	
<VARIABLE RESISTOR>				<IC>			
RV701	1-230-641-11	RES. ADJ. METAL GLAZE 2.2K		IC801	8-749-920-58	IC SI-3090CA	
R7702	1-241-656-21	RES. ADJ. METAL FILM 100K		IC802	8-752-052-88	IC CXA1526P	
*****				IC803	8-759-135-80	IC UPC358C	
*A-1341-665-A	D BOARD, COMPLETE			IC903	8-759-103-93	IC UPC393C	
*****				<COIL>			
4-382-854-11	SCREW (M3X10), P, SW (+)			L801	1-459-592-11	COIL (WITH CORE) (PMC)	
<CAPACITOR>				L802	1-459-941-12	COIL, CHOKE 3.4MMH	
C801	1-124-589-11	ELECT	47MF 20% 16V	L901	1-410-093-11	INDUCTOR 33MMH	
C802	1-124-589-11	ELECT	47MF 20% 16V	L903	1-459-941-12	COIL, CHOKE 3.4MMH	
C804	1-130-483-00	MYLAR	0.01MF 5% 50V	L904	1-459-148-00	COIL	
C805	1-136-165-00	FILM	0.1MF 5% 50V	L905	1-459-592-11	COIL (WITH CORE) (PMC)	
C806	1-136-165-00	FILM	0.1MF 5% 50V	<TRANSISTOR>			
C807	1-124-360-00	ELECT	1000MF 20% 16V	Q802	8-729-119-76	TRANSISTOR 2SA1175-HFE	
C809	1-136-104-00	FILM	0.16MF 5% 200V	Q803	8-729-119-78	TRANSISTOR 2SC2785-HFE	
C810	1-136-177-00	FILM	1MF 5% 50V	Q804	8-729-119-78	TRANSISTOR 2SC2785-HFE	
C811	1-162-318-11	CERAMIC	0.001MF 10% 500V	Q805	8-729-140-97	TRANSISTOR 2SB734-34	
C812	1-126-163-11	ELECT	4.7MF 20% 50V	Q806	8-729-119-78	TRANSISTOR 2SC2785-HFE	
C813	1-130-491-00	MYLAR	0.047MF 5% 50V	Q807	8-729-140-97	TRANSISTOR 2SB734-34	
C814	1-124-261-00	ELECT	10MF 20% 50V	Q808	8-729-119-76	TRANSISTOR 2SA1175-HFE	
C815	1-124-261-00	ELECT	10MF 20% 50V	Q809	8-729-209-15	TRANSISTOR 2SD2012	
C816	1-124-234-00	ELECT	22MF 20% 16V	Q810	8-729-140-96	TRANSISTOR 2SD774-34	
C817	1-126-163-11	ELECT	4.7MF 20% 50V	Q811	8-729-119-78	TRANSISTOR 2SC2785-HFE	
C818	1-124-589-11	ELECT	47MF 20% 16V	Q910	8-729-119-78	TRANSISTOR 2SC2785-HFE	
C819	1-136-165-00	FILM	0.1MF 5% 50V	Q911	8-729-119-78	TRANSISTOR 2SC2785-HFE	
C820	1-126-103-11	ELECT	470MF 20% 16V	Q912	8-729-119-76	TRANSISTOR 2SA1175-HFE	
C913	1-124-589-11	ELECT	47MF 20% 16V				
C914	1-106-379-12	MYLAR	0.039MF 10% 100V				
C915	1-126-301-11	ELECT	1MF 20% 50V				
C916	1-130-471-00	MYLAR	0.001MF 5% 50V				
C917	1-130-479-00	MYLAR	0.0047MF 5% 50V				



REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
Q913	8-729-011-02	TRANSISTOR 2SK1917				<CAPACITOR>	
		<RESISTOR>					
R801	1-249-409-11	CARBON	220 5% 1/4W	C951	1-102-074-00	CERAMIC	0.001MF 10% 50V
R802	1-249-409-11	CARBON	220 5% 1/4W	C952	1-102-125-00	CERAMIC	0.0047MF 10% 50V
R804	1-247-891-00	CARBON	330K 5% 1/4W	C961	1-161-830-00	CERAMIC	0.0047MF 500V
R806	1-247-885-00	CARBON	180K 5% 1/4W	C962	1-101-880-00	CERAMIC	47PF 5% 50V
R807	1-247-891-00	CARBON	330K 5% 1/4W	C963	1-123-935-00	ELECT	33MF 20% 160V
R808	1-215-461-00	METAL	47K 1% 1/4W	C964	1-126-101-11	ELECT	100MF 20% 16V
R809	1-249-423-11	CARBON	3.3K 5% 1/4W	C968	1-106-383-00	MYLAR	0.047MF 200V
R810	1-249-413-11	CARBON	470 5% 1/4W	C969	1-124-799-11	ELECT	2.2MF 20% 160V
R811	1-249-434-11	CARBON	27K 5% 1/4W	C970	1-106-391-12	MYLAR	0.1MF 10% 200V
R812	1-249-438-11	CARBON	56K 5% 1/4W	C971	1-126-157-11	ELECT	10MF 20% 16V
R813	1-249-417-11	CARBON	1K 5% 1/4W	C972	1-126-541-11	ELECT	330MF 20% 16V
R815	1-249-427-11	CARBON	6.8K 5% 1/4W	C973	1-106-383-00	MYLAR	0.047MF 200V
R816	1-249-425-11	CARBON	4.7K 5% 1/4W	C975	1-126-101-11	ELECT	100MF 20% 16V
R817	1-249-423-11	CARBON	3.3K 5% 1/4W	C976	1-126-157-11	ELECT	10MF 20% 16V
R818	1-249-417-11	CARBON	1K 5% 1/4W	C977	1-102-963-00	CERAMIC	33PF 5% 50V
R819	1-249-432-11	CARBON	18K 5% 1/4W	C978	1-130-471-00	MYLAR	0.001MF 5% 50V
R820	1-249-417-11	CARBON	1K 5% 1/4W	C979	1-130-471-00	MYLAR	0.001MF 5% 50V
R821	1-216-379-11	METAL OXIDE	6.8 5% 2W	C980	1-124-915-11	ELECT	10MF 20% 16V
R822	1-249-423-11	CARBON	3.3K 5% 1/4W			<CONNECTOR>	
R824	1-249-417-11	CARBON	1K 5% 1/4W	V20	*1-564-512-11	PLUG, CONNECTOR 9P	
R825	1-215-857-11	METAL OXIDE	10 5% 1W			<DIODE>	
R826	1-249-404-00	CARBON	82 5% 1/4W	D961	8-719-911-19	DIODE 1SS119	
R827	1-215-875-11	METAL OXIDE	10K 5% 1W	D963	8-719-911-19	DIODE 1SS119	
R828	1-249-441-11	CARBON	100K 5% 1/4W	D964	8-719-911-19	DIODE 1SS119	
R829	1-249-414-11	CARBON	560 5% 1/4W	D965	8-719-911-19	DIODE 1SS119	
R830	1-249-411-11	CARBON	330 5% 1/4W	D966	8-719-911-19	DIODE 1SS119	
R831	1-249-426-11	CARBON	5.6K 5% 1/4W	D967	8-719-110-88	DIODE RD39ESB2	
R832	1-215-887-00	METAL OXIDE	150 5% 2W	D968	8-719-110-88	DIODE RD39ESB2	
R833	1-249-421-11	CARBON	2.2K 5% 1/4W			<COIL>	
R834	1-249-438-11	CARBON	56K 5% 1/4W	L962	1-408-416-00	INDUCTOR	39UH
R835	1-249-393-11	CARBON	10 5% 1/4W			<TRANSISTOR>	
R836	1-249-435-11	CARBON	33K 5% 1/4W	Q956	8-729-119-78	TRANSISTOR 2SC2785-HFE	
R837	1-249-435-11	CARBON	33K 5% 1/4W	Q961	8-729-119-78	TRANSISTOR 2SC2785-HFE	
R838	1-216-359-00	METAL OXIDE	6.8 5% 1W	Q962	8-729-119-76	TRANSISTOR 2SA1175-HFE	
R839	1-249-410-11	CARBON	270 5% 1/4W	Q963	8-729-017-05	TRANSISTOR 2SA1837	
R840	1-249-429-11	CARBON	10K 5% 1/4W	Q964	8-729-119-78	TRANSISTOR 2SC2785-HFE	
R841	1-249-437-11	CARBON	47K 5% 1/4W	Q965	8-729-017-06	TRANSISTOR 2SC4793	
R842	1-249-429-11	CARBON	10K 5% 1/4W	Q966	8-729-119-78	TRANSISTOR 2SC2785-HFE	
R843	1-249-421-11	CARBON	2.2K 5% 1/4W	Q967	8-729-142-86	TRANSISTOR 2SC3733	
R927	1-249-419-11	CARBON	1.5K 5% 1/4W			<RESISTOR>	
R928	1-249-421-11	CARBON	2.2K 5% 1/4W	R951	1-249-434-11	CARBON	27K 5% 1/4W
R929	1-249-429-11	CARBON	10K 5% 1/4W	R952	1-249-423-11	CARBON	3.3K 5% 1/4W
R930	1-249-434-11	CARBON	27K 5% 1/4W	R953	1-249-423-11	CARBON	3.3K 5% 1/4W
R931	1-249-421-11	CARBON	2.2K 5% 1/4W	R954	1-247-903-00	CARBON	1M 5% 1/4W
R932	1-249-423-11	CARBON	3.3K 5% 1/4W	R955	1-249-421-11	CARBON	2.2K 5% 1/4W
R933	1-249-421-11	CARBON	2.2K 5% 1/4W	R962	1-249-409-11	CARBON	220 5% 1/4W
R934	1-249-441-11	CARBON	100K 5% 1/4W	R963	1-249-419-11	CARBON	1.5K 5% 1/4W
R935	1-249-429-11	CARBON	10K 5% 1/4W	R964	1-247-734-11	CARBON	39 5% 1/2W F
R936	1-249-429-11	CARBON	10K 5% 1/4W	R965	1-249-414-11	CARBON	560 5% 1/4W F
R937	1-249-421-11	CARBON	2.2K 5% 1/4W	R966	1-249-418-11	CARBON	1.2K 5% 1/4W
R938	1-249-405-11	CARBON	100 5% 1/4W				
R939	1-249-405-11	CARBON	100 5% 1/4W				
R940	1-249-405-11	CARBON	100 5% 1/4W				
R941	1-249-405-11	CARBON	100 5% 1/4W				
R942	1-215-892-11	METAL OXIDE	1K 5% 2W				

*A-1342-223-A V BOARD, COMPLETE

4-382-854-11 SCREW (M3X10), P, SW (+)

V HS3 U

REF. NO.	PART NO.	DESCRIPTION	REMARK
R968	1-249-418-11	CARBON 1.2K 5% 1/4W	
R969	1-249-384-11	CARBON 1.8 5% 1/4W	F
R970	1-249-435-11	CARBON 33K 5% 1/4W	
R972	1-249-432-11	CARBON 18K 5% 1/4W	
R974	1-216-476-11	METAL OXIDE 180 5% 3W	F
R975	1-249-417-11	CARBON 1K 5% 1/4W	F
R976	1-249-432-11	CARBON 18K 5% 1/4W	
R977	1-249-438-11	CARBON 56K 5% 1/4W	
R978	1-249-430-11	CARBON 12K 5% 1/4W	
R979	1-249-414-11	CARBON 560 5% 1/4W	
R980	1-249-420-11	CARBON 1.8K 5% 1/4W	
R981	1-249-412-11	CARBON 390 5% 1/4W	
R982	1-249-384-11	CARBON 1.8 5% 1/4W	F
R983	1-249-441-11	CARBON 100K 5% 1/4W	
R984	1-249-405-11	CARBON 100 5% 1/4W	
R985	1-249-400-11	CARBON 39 5% 1/4W	F
R986	1-249-435-11	CARBON 33K 5% 1/4W	
R987	1-249-428-11	CARBON 8.2K 5% 1/4W	
R988	1-249-418-11	CARBON 1.2K 5% 1/4W	
R989	1-249-413-11	CARBON 470 5% 1/4W	
R990	1-216-451-11	METAL OXIDE 120 5% 2W	F
R991	1-249-409-11	CARBON 220 5% 1/4W	

*1-648-961-11	HS3 BOARD	*****	
<CAPACITOR>			
C1603	1-124-589-11	ELBCT 47MF 20% 16V	
C1604	1-124-589-11	ELECT 47MF 20% 16V	
<CONNECTOR>			
HS3-37*1-564-526-11	PLUG, CONNECTOR 11P		
<DIODE>			
D1601	8-719-812-41	DIODE TLR124	
	*4-374-906-01	HOLDER (TV/V), LED; D1601	
D1602	8-719-812-41	DIODE TLR124	
	*4-374-906-01	HOLDER (TV/V), LED; D1602	
<IC>			
IC1601	8-746-185-11	IC SBX1618-51	
<RESISTOR>			
R1601	1-249-405-11	CARBON 100 5% 1/4W	
R1602	1-249-407-11	CARBON 150 5% 1/4W	
R1604	1-249-419-11	CARBON 1.5K 5% 1/4W	
R1605	1-249-421-11	CARBON 2.2K 5% 1/4W	
R1606	1-249-425-11	CARBON 4.7K 5% 1/4W	
R1607	1-249-430-11	CARBON 12K 5% 1/4W	
<SWITCH>			
S1601	1-571-532-21	SWITCH, TACTIL	
S1602	1-571-532-21	SWITCH, TACTIL	
S1603	1-571-532-21	SWITCH, TACTIL	
S1604	1-571-532-21	SWITCH, TACTIL	
S1605	1-571-532-21	SWITCH, TACTIL	

REF. NO.	PART NO.	DESCRIPTION	REMARK
S1606	1-571-532-21	SWITCH, TACTIL	
S1607	1-571-532-21	SWITCH, TACTIL	

*A-1373-412-A	U BOARD, COMPLETE	*****	
<CAPACITOR>			
C1004	1-102-125-00	CERAMIC 0.0047MF 10% 50V	
C1005	1-126-301-11	ELECT 1MF 20% 50V	
C1006	1-164-096-11	CERAMIC 0.01MF 50V	
C1007	1-124-598-11	ELECT 22MF 20% 25V	
C1008	1-124-598-11	ELECT 22MF 20% 25V	
C1010	1-124-465-00	ELECT 0.47MF 20% 50V	
C1011	1-124-465-00	ELECT 0.47MF 20% 50V	
C1012	1-124-465-00	ELECT 0.47MF 20% 50V	
C1013	1-102-125-00	CERAMIC 0.0047MF 10% 50V	
C1014	1-126-163-11	ELECT 4.7MF 20% 50V	
C1016	1-126-163-11	ELECT 4.7MF 20% 50V	
C1018	1-126-301-11	ELECT 1MF 20% 50V	
C1020	1-124-242-00	ELECT 33MF 20% 25V	
C1021	1-124-465-00	ELECT 0.47MF 20% 50V	
C1022	1-124-242-00	ELECT 33MF 20% 25V	
C1023	1-126-163-11	ELECT 4.7MF 20% 50V	
C1024	1-126-163-11	ELECT 4.7MF 20% 50V	
C1026	1-164-048-11	CERAMIC 12PF 5% 50V	
C1027	1-164-048-11	CERAMIC 12PF 5% 50V	
C1028	1-124-242-00	ELECT 33MF 20% 25V	
C1029	1-124-282-00	ELECT 22MF 20% 16V	
C1030	1-124-478-11	ELECT 100MF 20% 25V	
C1031	1-102-963-00	CERAMIC 33PF 5% 50V	
C1033	1-124-598-11	ELECT 22MF 20% 25V	
C1034	1-124-282-00	ELECT 22MF 20% 16V	
C1036	1-124-282-00	ELECT 22MF 20% 16V	
C1037	1-124-282-00	ELECT 22MF 20% 16V	
C1039	1-124-478-11	ELECT 100MF 20% 25V	
C1046	1-124-242-00	ELECT 33MF 20% 25V	
C1047	1-124-465-00	ELECT 0.47MF 20% 50V	
C1048	1-126-301-11	ELECT 1MF 20% 50V	
C1049	1-124-598-11	ELECT 22MF 20% 25V	
C1050	1-124-242-00	ELECT 33MF 20% 25V	
C1051	1-124-465-00	ELECT 0.47MF 20% 50V	
C1054	1-126-163-11	ELECT 4.7MF 20% 50V	
C1055	1-124-589-11	ELECT 47MF 20% 16V	
C1056	1-124-499-11	ELECT 1MF 20% 50V	
C1057	1-124-768-11	ELECT 4.7MF 20% 50V	
C1058	1-126-163-11	ELECT 4.7MF 20% 50V	
C1059	1-124-499-11	ELECT 1MF 20% 50V	
C1060	1-124-499-11	ELECT 1MF 20% 50V	
C1061	1-124-499-11	ELECT 1MF 20% 50V	
C1062	1-102-129-00	CERAMIC 0.01MF 10% 50V	
C1063	1-124-768-11	ELECT 4.7MF 20% 50V	
C1066	1-126-101-11	ELECT 100MF 20% 16V	
C1070	1-126-103-11	ELECT 470MF 20% 16V	
C1110	1-124-768-11	ELECT 4.7MF 20% 50V	
C1111	1-124-768-11	ELECT 4.7MF 20% 50V	
<CONNECTOR>			
U12	1-573-300-21	CONNECTOR, BOARD TO BOARD 18P	
U13	1-573-300-21	CONNECTOR, BOARD TO BOARD 18P	
U16	*1-564-513-11	PLUG, CONNECTOR 10P	
U19	*1-564-509-11	PLUG, CONNECTOR 6P	

U

REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
U22	1-566-942-11	CONNECTOR, HINGE (RECEPTACLE) 30P					
U23	*1-566-367-11	CONNECTOR, HINGE (RECEPTACLE)					
U47	*1-564-506-11	PLUG, CONNECTOR 3P					
U48	1-508-784-00	PIN, CONNECTOR (5MM PITCH) 1P					
U50	*1-564-505-11	PLUG, CONNECTOR 2P					
		<FILTER>					
CM1002	1-466-162-31	BLOCK, COM FILTER (CFB-4)					
		<DIODE>					
D1005	8-719-110-36	DIODE RD13ESB2		R1011	1-249-435-11	CARBON 33K 5% 1/4W	
D1009	8-719-110-36	DIODE RD13ESB2		R1012	1-249-434-11	CARBON 27K 5% 1/4W	
D1010	8-719-110-36	DIODE RD13ESB2		R1013	1-249-417-11	CARBON 1K 5% 1/4W	
D1011	8-719-110-36	DIODE RD13ESB2		R1014	1-249-441-11	CARBON 100K 5% 1/4W	
D1012	8-719-110-36	DIODE RD13ESB2		R1015	1-215-437-00	METAL 4.7K 1% 1/4W	
D1013	8-719-110-36	DIODE RD13ESB2		R1016	1-249-441-11	CARBON 100K 5% 1/4W	
D1014	8-719-110-36	DIODE RD13ESB2		R1017	1-249-405-11	CARBON 100 5% 1/4W	
D1017	8-719-110-36	DIODE RD13ESB2		R1018	1-249-427-11	CARBON 6.8K 5% 1/4W	
D1018	8-719-110-36	DIODE RD13ESB2		R1019	1-249-427-11	CARBON 6.8K 5% 1/4W	
D1019	8-719-110-36	DIODE RD13ESB2		R1023	1-249-405-11	CARBON 100 5% 1/4W	
D1020	8-719-109-66	DIODE RD3.3ESB2		R1026	1-215-437-00	METAL 4.7K 1% 1/4W	
D1021	8-719-109-66	DIODE RD3.3ESB2		R1028	1-249-434-11	CARBON 27K 5% 1/4W	
D1022	8-719-109-66	DIODE RD3.3ESB2		R1029	1-249-435-11	CARBON 33K 5% 1/4W	
D1023	8-719-109-66	DIODE RD3.3ESB2		R1030	1-249-417-11	CARBON 1K 5% 1/4W	
D1025	8-719-911-19	DIODE ISS119		R1032	1-249-417-11	CARBON 1K 5% 1/4W	
D1026	8-719-911-19	DIODE ISS119		R1033	1-249-393-11	CARBON 10 5% 1/4W	F
D1027	8-719-911-19	DIODE ISS119		R1034	1-249-417-11	CARBON 1K 5% 1/4W	
		<IC>		R1035	1-249-427-11	CARBON 6.8K 5% 1/4W	
IC1002	8-752-056-50	IC CXA1545S		R1036	1-249-440-11	CARBON 82K 5% 1/4W	
IC1010	8-759-145-57	IC UPC4557C		R1037	1-249-440-11	CARBON 82K 5% 1/4W	
IC1011	8-759-145-57	IC UPC4557C		R1038	1-249-440-11	CARBON 82K 5% 1/4W	
		<COIL>		R1040	1-249-427-11	CARBON 6.8K 5% 1/4W	
L1001	1-408-422-00	INDUCTOR 120UH		R1041	1-249-441-11	CARBON 100K 5% 1/4W	
L1002	1-408-422-00	INDUCTOR 120UH		R1042	1-249-441-11	CARBON 100K 5% 1/4W	
		<TRANSISTOR>		R1043	1-249-417-11	CARBON 1K 5% 1/4W	
Q1009	8-729-119-78	TRANSISTOR 2SC2785-HFE		R1046	1-249-413-11	CARBON 470 5% 1/4W	
Q1010	8-729-119-78	TRANSISTOR 2SC2785-HFE		R1048	1-249-405-11	CARBON 100 5% 1/4W	
Q1012	8-729-119-78	TRANSISTOR 2SC2785-HFE		R1050	1-249-405-11	CARBON 100 5% 1/4W	
Q1013	8-729-119-78	TRANSISTOR 2SC2785-HFE		R1051	1-249-417-11	CARBON 1K 5% 1/4W	
Q1016	8-729-119-76	TRANSISTOR 2SA1175-HFE		R1052	1-249-413-11	CARBON 470 5% 1/4W	
Q1017	8-729-119-76	TRANSISTOR 2SA1175-HFE		R1054	1-249-405-11	CARBON 100 5% 1/4W	
Q1018	8-729-119-78	TRANSISTOR 2SC2785-HFE		R1055	1-249-413-11	CARBON 470 5% 1/4W	
Q1019	8-729-119-76	TRANSISTOR 2SA1175-HFE		R1056	1-249-405-11	CARBON 100 5% 1/4W	
Q1020	8-729-119-76	TRANSISTOR 2SA1175-HFE		R1057	1-249-441-11	CARBON 100K 5% 1/4W	
Q1021	8-729-119-76	TRANSISTOR 2SA1175-HFE		R1059	1-249-405-11	CARBON 100 5% 1/4W	
Q1022	8-729-119-78	TRANSISTOR 2SC2785-HFE		R1061	1-249-409-11	CARBON 220 5% 1/4W	
Q1023	8-729-119-78	TRANSISTOR 2SC2785-HFE		R1062	1-249-441-11	CARBON 100K 5% 1/4W	
Q1025	8-729-119-76	TRANSISTOR 2SA1175-HFE		R1063	1-249-409-11	CARBON 220 5% 1/4W	
Q1029	8-729-119-76	TRANSISTOR 2SA1175-HFE		R1066	1-215-437-00	METAL 4.7K 1% 1/4W	
Q1030	8-729-119-78	TRANSISTOR 2SC2785-HFE		R1067	1-215-437-00	METAL 4.7K 1% 1/4W	
Q1031	8-729-119-78	TRANSISTOR 2SC2785-HFE		R1068	1-215-437-00	METAL 4.7K 1% 1/4W	
Q1032	8-729-119-76	TRANSISTOR 2SA1175-HFE		R1069	1-215-437-00	METAL 4.7K 1% 1/4W	
Q1033	8-729-119-76	TRANSISTOR 2SA1175-HFE		R1070	1-249-411-11	CARBON 330 5% 1/4W	
Q1034	8-729-119-76	TRANSISTOR 2SA1175-HFE		R1071	1-249-431-11	CARBON 15K 5% 1/4W	
				R1073	1-249-431-11	CARBON 15K 5% 1/4W	
				R1077	1-249-418-11	CARBON 1.2K 5% 1/4W	
				R1078	1-249-418-11	CARBON 1.2K 5% 1/4W	
				R1079	1-249-405-11	CARBON 100 5% 1/4W	
				R1080	1-215-423-00	METAL 1.2K 1% 1/4W	
				R1081	1-215-421-00	METAL 1K 1% 1/4W	
				R1089	1-249-405-11	CARBON 100 5% 1/4W	
				R1092	1-247-688-11	CARBON 10 5% 1/4W	F
				R1094	1-249-405-11	CARBON 100 5% 1/4W	
				R1096	1-249-405-11	CARBON 100 5% 1/4W	
				R1099	1-249-413-11	CARBON 470 5% 1/4W	
				R1100	1-249-429-11	CARBON 10K 5% 1/4W	
				R1101	1-249-405-11	CARBON 100 5% 1/4W	
				R1102	1-249-393-11	CARBON 10 5% 1/4W	
				R1103	1-249-441-11	CARBON 100K 5% 1/4W	
				R1106	1-249-435-11	CARBON 33K 5% 1/4W	
				R1108	1-249-434-11	CARBON 27K 5% 1/4W	
				R1109	1-249-435-11	CARBON 33K 5% 1/4W	
				R1110	1-249-405-11	CARBON 100 5% 1/4W	

U UT N

REF. NO.	PART NO.	DESCRIPTION	REMARK
R1112	1-249-409-11	CARBON 220 5%	1/4W
R1114	1-249-434-11	CARBON 27K 5%	1/4W
R1115	1-249-409-11	CARBON 220 5%	1/4W
R1116	1-249-441-11	CARBON 100K 5%	1/4W
R1117	1-249-393-11	CARBON 10 5%	1/4W
R1118	1-249-413-11	CARBON 470 5%	1/4W
R1119	1-249-441-11	CARBON 100K 5%	1/4W
R1120	1-249-413-11	CARBON 470 5%	1/4W
R1121	1-249-441-11	CARBON 100K 5%	1/4W
R1122	1-249-413-11	CARBON 470 5%	1/4W
R1133	1-249-405-11	CARBON 100 5%	1/4W
R1134	1-249-405-11	CARBON 100 5%	1/4W
R1137	1-249-411-11	CARBON 330 5%	1/4W
R1138	1-249-415-11	CARBON 680 5%	1/4W
R1139	1-249-413-11	CARBON 470 5%	1/4W
R1140	1-249-413-11	CARBON 470 5%	1/4W
R1141	1-249-413-11	CARBON 470 5%	1/4W
R1142	1-249-415-11	CARBON 680 5%	1/4W
R1147	1-249-405-11	CARBON 100 5%	1/4W
R1148	1-249-405-11	CARBON 100 5%	1/4W
R1149	1-249-417-11	CARBON 1K 5%	1/4W
R1150	1-249-405-11	CARBON 100 5%	1/4W
R1151	1-249-405-11	CARBON 100 5%	1/4W
R1152	1-249-417-11	CARBON 1K 5%	1/4W

*A-1373-414-A UT BOARD, COMPLETE

<CAPACITOR>

C1152	1-102-074-00	CERAMIC 0.001MF	10%	50V
C1154	1-164-096-11	CERAMIC 0.01MF		50V
C1155	1-126-103-11	ELECT 470MF	20%	16V
C1158	1-124-598-11	ELECT 22MF	20%	25V
C1160	1-124-598-11	ELECT 22MF	20%	25V
C1161	1-124-598-11	ELECT 22MF	20%	25V
C1164	1-126-103-11	ELECT 470MF	20%	16V
C1165	1-126-301-11	ELECT 1MF	20%	50V
C1166	1-126-301-11	ELECT 1MF	20%	50V
C1167	1-126-301-11	ELECT 1MF	20%	50V
C1168	1-126-301-11	ELECT 1MF	20%	50V

<CONNECTOR>

UT9	*1-564-517-11	PLUG, CONNECTOR 2P
UT11	*1-564-519-11	PLUG, CONNECTOR 4P
UT22	*1-566-941-11	CONNECTOR, HINGE (TAB) 30P
UT23	*1-566-641-11	CONNECTOR, HINGE (TAB) 18P
UT35	*1-564-518-11	PLUG, CONNECTOR 3P
UT38	1-564-517-11	PLUG, CONNECTOR 2P

<DIODE>

D1152	8-719-110-36	DIODE RD13ESB2
D1158	8-719-110-36	DIODE RD13ESB2
D1159	8-719-110-36	DIODE RD13ESB2
D1160	8-719-110-36	DIODE RD13ESB2
D1163	8-719-110-36	DIODE RD13ESB2
D1164	8-719-110-36	DIODE RD13ESB2
D1165	8-719-110-36	DIODE RD13ESB2
D1166	8-719-110-36	DIODE RD13ESB2
D1167	8-719-110-36	DIODE RD13ESB2
D1168	8-719-110-36	DIODE RD13ESB2

REF. NO.	PART NO.	DESCRIPTION	REMARK
D1169	8-719-110-36	DIODE RD13ESB2	
D1170	8-719-110-36	DIODE RD13ESB2	

<JACK>

J1003	1-573-970-11	BLOCK, (S) TERMINAL
J1004	1-695-049-11	BLOCK, (S) TERMINAL
J1005	1-695-054-11	JACK BLOCK, PIN
J1006	1-573-970-11	BLOCK, (S) TERMINAL
J1007	1-573-969-11	JACK BLOCK, PIN

J1008	1-573-969-11	JACK BLOCK, PIN
-------	--------------	-----------------

<RESISTOR>

R1153	1-249-403-11	CARBON 68 5%	1/4W
R1155	1-249-417-11	CARBON 1K 5%	1/4W
R1164	1-247-895-00	CARBON 470K 5%	1/4W
R1165	1-247-895-00	CARBON 470K 5%	1/4W
R1166	1-247-895-00	CARBON 470K 5%	1/4W
R1167	1-247-895-00	CARBON 470K 5%	1/4W
R1168	1-247-895-00	CARBON 470K 5%	1/4W
R1169	1-249-403-11	CARBON 68 5%	1/4W
R1170	1-249-403-11	CARBON 68 5%	1/4W
R1171	1-247-895-00	CARBON 470K 5%	1/4W
R1172	1-247-895-00	CARBON 470K 5%	1/4W
R1173	1-247-804-11	CARBON 75 5%	1/4W
R1174	1-247-895-00	CARBON 470K 5%	1/4W
R1175	1-247-895-00	CARBON 470K 5%	1/4W
R1176	1-247-804-11	CARBON 75 5%	1/4W

R1178	1-247-895-00	CARBON 470K 5%	1/4W
R1179	1-247-895-00	CARBON 470K 5%	1/4W
R1180	1-247-804-11	CARBON 75 5%	1/4W
R1181	1-247-804-11	CARBON 75 5%	1/4W
R1183	1-247-895-00	CARBON 470K 5%	1/4W
R1184	1-247-895-00	CARBON 470K 5%	1/4W
R1185	1-247-895-00	CARBON 470K 5%	1/4W
R1186	1-247-895-00	CARBON 470K 5%	1/4W
R1188	1-247-804-11	CARBON 75 5%	1/4W
R1191	1-215-437-00	METAL 4.7K 1%	1/4W
R1192	1-215-437-00	METAL 4.7K 1%	1/4W
R1193	1-215-437-00	METAL 4.7K 1%	1/4W
R1194	1-215-437-00	METAL 4.7K 1%	1/4W
R1196	1-249-426-11	CARBON 5.6K 5%	1/4W

<SWITCH>

S1150	1-572-198-11	SWITCH, KEYBOARD
-------	--------------	------------------

*1-648-962-11 N BOARD, COMPLETE

<CAPACITOR>

C890	1-124-925-11	ELECT 2.2MF	20%	50V
C891	1-124-925-11	ELECT 2.2MF	20%	50V

<CONNECTOR>

N1	1-564-505-11	PLUG, CONNECTOR 2P
----	--------------	--------------------

The components identified by shading and mark Δ are critical for safety
Replace only with part number specified.

S

REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
*A-1394-421-A S BOARD, COMPLETE *****				<RESISTOR>			
<CAPACITOR>				R3401	1-216-049-00	METAL GLAZE 1K 5%	1/10W
C3403	1-164-161-11	CERAMIC CHIP 0.0022MF	10% 50V	R3402	1-216-049-00	METAL GLAZE 1K 5%	1/10W
C3408	1-164-232-11	CERAMIC CHIP 0.01MF	10% 50V	R3403	1-216-073-00	METAL GLAZE 10K 5%	1/10W
C3409	1-124-589-11	ELECT 47MF	20% 16V	R3404	1-216-033-00	METAL GLAZE 220 5%	1/10W
C3411	1-124-034-51	ELECT 33MF	20% 16V	R3405	1-216-057-00	METAL GLAZE 2.2K 5%	1/10W
C3442	1-164-161-11	CERAMIC CHIP 0.0022MF	10% 50V	R3406	1-216-065-00	METAL GLAZE 4.7K 5%	1/10W
C3446	1-163-129-00	CERAMIC CHIP 330PF	5% 50V	R3407	1-216-033-00	METAL GLAZE 220 5%	1/10W
C3447	1-163-117-00	CERAMIC CHIP 100PF	5% 50V	R3408	1-216-065-00	METAL GLAZE 4.7K 5%	1/10W
C3448	1-164-232-11	CERAMIC CHIP 0.01MF	10% 50V	R3409	1-216-033-00	METAL GLAZE 220 5%	1/10W
C3449	1-164-182-11	CERAMIC CHIP 0.0033MF	10% 50V	R3441	1-216-025-00	METAL GLAZE 100 5%	1/10W
C3451	1-164-004-11	CERAMIC CHIP 0.1MF	10% 25V	R3442	1-216-041-00	METAL GLAZE 470 5%	1/10W
C3452	1-163-989-11	CERAMIC CHIP 0.033MF	10% 25V	R3443	1-216-041-00	METAL GLAZE 470 5%	1/10W
C3453	1-124-589-11	ELECT 47MF	20% 16V	R3444	1-216-077-00	METAL GLAZE 15K 5%	1/10W
C3454	1-126-162-11	ELECT 3.3MF	20% 50V	R3445	1-216-689-11	METAL GLAZE 39K 5%	1/10W
C3455	1-126-163-11	ELECT 4.7MF	20% 16V	R3446	1-216-085-00	METAL GLAZE 33K 5%	1/10W
C3456	1-163-129-00	CERAMIC CHIP 330PF	5% 50V	R3449	1-216-073-00	METAL GLAZE 10K 5%	1/10W
C3457	1-163-117-00	CERAMIC CHIP 100PF	5% 50V	R3450	1-216-057-00	METAL GLAZE 2.2K 5%	1/10W
C3459	1-124-589-11	ELECT 47MF	20% 16V	R3451	1-216-093-00	METAL GLAZE 68K 5%	1/10W
C3460	1-163-099-00	CERAMIC CHIP 18PF	5% 50V	R3452	1-216-079-00	METAL GLAZE 18K 5%	1/10W
C3461	1-163-099-00	CERAMIC CHIP 18PF	5% 50V	R3453	1-216-679-11	METAL CHIP 15K 0.50%	1/10W
C3507	1-164-232-11	CERAMIC CHIP 0.01MF	10% 50V	R3454	1-216-049-00	METAL GLAZE 1K 5%	1/10W
C3508	1-164-005-11	CERAMIC CHIP 0.47MF	25V	R3455	1-216-057-00	METAL GLAZE 2.2K 5%	1/10W
C3509	1-163-139-00	CERAMIC CHIP 820PF	5% 50V	R3456	1-216-077-00	METAL GLAZE 15K 5%	1/10W
C3515	1-163-121-00	CERAMIC CHIP 150PF	5% 50V	R3463	1-216-073-00	METAL GLAZE 10K 5%	1/10W
C3540	1-126-157-11	ELECT 10MF	20% 16V	R3464	1-216-073-00	METAL GLAZE 10K 5%	1/10W
<CONNECTOR>				R3465	1-216-073-00	METAL GLAZE 10K 5%	1/10W
S42	*1-565-514-11	SOCKET, CONNECTOR 2P		R3472	1-216-091-00	METAL GLAZE 56K 5%	1/10W
S42	*1-568-378-21	PIN, CONNECTOR 3P		R3473	1-216-025-00	METAL GLAZE 100 5%	1/10W
S43	*1-564-508-11	PLUG, CONNECTOR 5P		R3474	1-216-295-00	METAL GLAZE 0 5%	1/10W
S45	*1-564-511-71	PLUG, CONNECTOR 8P		R3504	1-216-057-00	METAL GLAZE 2.2K 5%	1/10W
S46	*1-564-506-11	PLUG, CONNECTOR 3P		R3509	1-216-049-00	METAL GLAZE 1K 5%	1/10W
S47	*1-564-506-11	PLUG, CONNECTOR 3P		R3511	1-216-025-00	METAL GLAZE 100 5%	1/10W
<DIODE>				R3512	1-216-059-00	METAL GLAZE 2.7K 5%	1/10W
D3444	8-719-404-46	DIODE MA110		R3513	1-216-059-00	METAL GLAZE 2.7K 5%	1/10W
<IC>				R3514	1-216-059-00	METAL GLAZE 2.7K 5%	1/10W
IC3401	8-759-403-44	IC MN1280-S		R3519	1-216-049-00	METAL GLAZE 1K 5%	1/10W
IC3402	8-759-070-42	IC M37201M6-A18PF		R3520	1-216-049-00	METAL GLAZE 1K 5%	1/10W
IC3441	8-759-708-05	IC NJM78L05A		R3521	1-216-049-00	METAL GLAZE 1K 5%	1/10W
IC3442	8-759-084-12	IC LA7945		R3525	1-216-295-00	METAL GLAZE 0 5%	1/10W
IC3443	8-759-187-22	IC LC7458B-03		R3526	1-216-073-00	METAL GLAZE 10K 5%	1/10W
IC3444	8-759-403-44	IC MN1280-S		R3528	1-216-295-00	METAL GLAZE 0 5%	1/10W
<COIL>				R3529	1-216-295-00	METAL GLAZE 0 5%	1/10W
L3401	1-408-421-00	INDUCTOR 100UH		R3530	1-216-073-00	METAL GLAZE 10K 5%	1/10W
L3461	1-408-409-00	INDUCTOR 10UH		R3531	1-216-073-00	METAL GLAZE 10K 5%	1/10W
L3462	1-408-421-00	INDUCTOR 100UH		R3532	1-216-073-00	METAL GLAZE 10K 5%	1/10W
<TRANSISTOR>				R3535	1-216-033-00	METAL GLAZE 220 5%	1/10W
Q3441	8-729-422-27	TRANSISTOR 2SD601A-Q		R3537	1-216-295-00	METAL GLAZE 0 5%	1/10W
Q3444	8-729-903-10	TRANSISTOR FMW1		R3540	1-216-073-00	METAL GLAZE 10K 5%	1/10W
				<CRYSTAL>			
				X3401	1-577-358-21	VIBRATOR, CERAMIC	
				X3441	1-577-364-11	VIBRATOR, CERAMIC	

				MISCELLANEOUS *****			
				Δ 1-402-952-13 COIL, DEMAGNETIZATION Δ 1-417-178-13 SELECTOR, ANTENNA (AS-2) Δ 1-451-315-11 REFLECTION Yoke (Y34FA) Δ 1-452-579-11 NECK ASSY, PICTURE TUBE (NA322) 1-503-917-11 SPEAKER			

The components identified by shading and mark Δ are critical for safety
 Replace only with part number specified.

REF. NO.	PART NO.	DESCRIPTION	REMARK
	1-544-095-11	SPEAKER	
	*1-555-400-00	CABLE, PIN	
	*1-557-056-31	CABLE, P-P	
	Δ 1-696-002-12	CORD, POWER (WITH NOISE FILTER) 7A/125V	
Y901	Δ 8-733-723-05	PICTURE TUBE (A80J1V50X)	

ACCESSORIES AND PACKING MATERIALS

- 3-757-071-22 MANUAL, INSTRUCTION (ENGLISH)
- 3-757-071-42 MANUAL, INSTRUCTION (SPANISH)
- *3-704-319-01 BAG (STANDARD), PROTECTION
- *3-704-356-01 SHEET (STANDARD), PROTECTION
- *4-040-930-01 INDIVIDUAL CARTON

- *4-390-653-01 BAND
- *4-393-639-01 TRAY
- *4-393-640-01 CUSHION (UPPER) (ASSY)
- *4-393-641-01 CUSHION (LOWER) (ASSY)
- *4-393-643-01 PALLET

- *4-603-966-01 STOPPER (LARGE), SPEED

REMOTE COMMANDER

- 1-467-125-11 REMOTE COMMANDER (RM-Y115)
- 9-998-214-01 COVER, BATTERY (FOR RM-Y115)
- 9-902-719-01 COVER (FOR RM-Y115)