


KV-32XBR90S

RM-AV1100

SERVICE MANUAL

US Model
Chassis No. SCC-F16F-A

Canadian Model
Chassis No. SCC-F17E-A

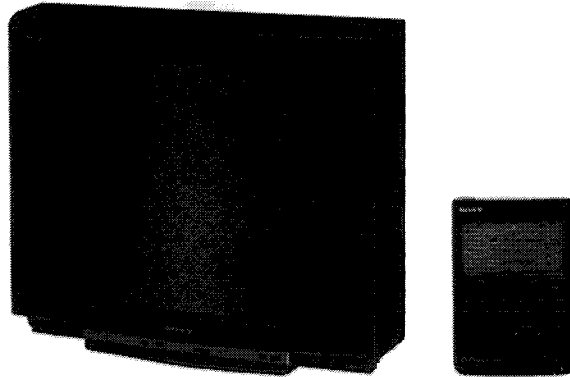

FN CHASSIS

MODELS OF THE SAME SERIES

KV-32XBR90S	KV-27XBR35/32XBR35
KV-27XBR95S/32XBR95S	
KV-27XBR25/32XBR25	

SPECIFICATIONS

Television system American TV standards
Channel coverage VHF: 2-13
UHF: 14-69
CABLE TV: 1-125

Picture tube Microblack™ Trinitron® tube
32-inch picture measured diagonally
34-inch picture tube measured diagonally

Antenna 75 ohm external antenna
terminal for VHF/UHF

Input jacks VIDEO IN 1, 2 and 3
S VIDEO IN (4-pin mini DIN)
Y: 1 Vp-p, 75-ohms unbalanced,
sync negative
C: 0.286 Vp-p (Burst signal)
75-ohms
Video (phono jacks): 1 Vp-p, 75-ohms
unbalanced, sync negative
Audio (phono jacks):
500 mVrms (100% modulation)
Impedance: 47 kilohms
CONTROLS (mini jack) 5Vp-p

Output jacks

MONITOR OUT

S VIDEO MONITOR OUT
(4-pin mini DIN)

Y: 1 Vp-p, 75-ohms

unbalanced, sync negative

Video (phono jacks): 1 Vp-p, 75-ohms

unbalanced, sync negative

Audio (phono jacks): 500 mVrms
(100% modulation)

Impedance: 10 kilohms

CONTROLS (mini jack) 5Vp-p

AUDIO OUT

(phono jacks)

900 mVrms (100% modulation)

Impedance: 5 kilohms

- Continued on next page -



TRINITRON® COLOR TV
SONY®

Power requirements	120 V AC, 60 Hz
Power consumption	180W
Dimensions (w/h/d)	794×663.5×586 mm (31 ³ / ₈ ×26 ¹ / ₈ ×23 ¹ / ₈ inches)
Weight	75.1 kg (165 lb 10 oz)
Supplied accessories	Remote Commander RM-AV1100 (1) with 6 size AA (R6) EVEREADY batteries
Optional accessories	U/V mixer EAC-66 Connecting cable RK-74A VMC-810S/820S YC-15V/30V

Design and specifications are subject to change without notice.

(CAUTION)

SHORT CIRCUIT THE ANODE OF THE PICTURE TUBE AND THE ANODE CAP TO THE METAL CHASSIS, CRT SHIELD, OR CARBON PAINTED ON THE CRT, AFTER REMOVING THE ANODE.

WARNING!!

AN ISOLATION TRANSFORMER SHOULD BE USED DURING ANY SERVICE TO AVOID POSSIBLE SHOCK HAZARD, BECAUSE OF LIVE CHASSIS.
THE CHASSIS OF THIS RECEIVER IS DIRECTLY CONNECTED TO THE AC POWER LINE.

SAFETY-RELATED COMPONENT WARNING !!

COMPONENTS IDENTIFIED BY SHADING AND MARK Δ ON THE SCHEMATIC DIAGRAMS, EXPLODED VIEWS AND IN THE PARTS LIST ARE CRITICAL TO SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY. CIRCUIT ADJUSTMENTS THAT ARE CRITICAL TO SAFE OPERATION ARE IDENTIFIED IN THIS MANUAL. FOLLOW THESE PROCEDURES WHENEVER CRITICAL COMPONENTS ARE REPLACED OR IMPROPER OPERATION IS SUSPECTED.

(ATTENTION)

APRES AVOIR DECONNECTE LE CAP DE L'ANODE, COURTCIRCUITER L'ANODE DU TUBE CATHODIQUE ET CELUI DE L'ANODE DU CAP AU CHASSIS METALLIQUE DE L'APPAREIL, OU AU COUCHE DE CARBONE PEINTE SUR LE TUBE CATHODIQUE OU AU BLINDAGE DU TUBE CATHODIQUE.

ATTENTION!!

AFIN D'EVITER TOUT RISQUE D'ELECTROCUTION PROVENANT D'UN CHÂSSIS SOUS TENSION, UN TRANSFORMATEUR D'ISOLEMENT DOIT ETRE UTILISÉ LORS DE TOUT DÉPANNAGE. LE CHÂSSIS DE CE RÉCEPTEUR EST DIRECTEMENT RACCORDÉ À L'ALIMENTATION SECTEUR.

ATTENTION AUX COMPOSANTS RELATIFS À LA SÉCURITÉ!!

LES COMPOSANTS IDENTIFIÉS PAR UNE TRAME ET PAR UNE MAPQUE Δ SUR LES SCHÉMAS DE PRINCIPE, LES VUES EXPLOSÉES ET LES LISTES DE PIÉCES CONT D'UNE IMPORTANCE CRITIQUE POUR LA SÉCURITÉ DU FONCTIONNEMENT. NE LES REMPLACER QUE PAR DES COMPOSANTS SONY DONT LE NUMÉRO DE PIÉCE EST INDIQUÉ DANS LE PRÉSENT MANUEL OU DANS DES SUPPLÉMENTS PUBLIÉS PAR SONY. LES RÉGLAGES DE CIRCUIT DONT L'IMPORTANCE EST CRITIQUE POUR LA SÉCURITÉ DU FONCTIONNEMENT SONT IDENTIFIÉS DANS LE PRÉSENT MANUEL. SUIVRE CES PROCEDURES LORS DE CHAQUE REMPLACEMENT DE COMPOSANTS CRITIQUES, OU LORSQU'UN MAUVAIS FONCTIONNEMENT EST SUSPECTÉ.

TABLE OF CONTENTS

<u>Section</u>	<u>Title</u>	<u>Page</u>	<u>Section</u>	<u>Title</u>	<u>Page</u>
1.	GENERAL		4.	SAFETY RELATED ADJUSTMENTS	51
1-1.	Locating Controls and Connectors	5	5.	CIRCUIT ADJUSTMENTS	
1-2.	Using the ON-Screen Menus	7	5-1.	Electrical Adjustment by Remote Commander	54
1-3.	Setting CABLE ON or OFF	9	5-2.	A Board Adjustments	56
1-4.	Presetting TV Channels	10	5-3.	VC Board Adjustment	59
1-5.	Watching TV Programs	13	6.	DIAGRAMS	
1-6.	Using Convenient Features	14	6-1.	Block Diagrams (1)	61
1-7.	Selecting a Picture Mode	16	6-2.	Block Diagrams (2)	65
1-8.	Adjusting the Picture	17	6-3.	Block Diagrams (3)	69
1-9.	Customizing the Screen Display	19	6-4.	Frame Schamatic Diagram	73
1-10.	Using Timer-Activated Functions	21	6-5.	Circuit Boards Location	76
1-11.	Setting FAVORITE CHANNEL	25	6-6.	Printed Wiring Boards and Schematic Diagrams	76
1-12.	Using the Integrated Remote Commander	26	•	UT, U Boards	77
1-13.	LCD Key Display Quick Reference	31	•	A Board	84
1-14.	Troubleshooting	32	•	G, E1 Boards	91
2.	DISASSEMBLY		•	HX1, C, E2 Boards	98
2-1.	Rear Cover Removal	33	•	M, D Boards	105
2-2.	Chassis Assy and Front Block Assy Removal	33	•	V, S, P4 Boards	112
2-3.	K Board and Antenna Terminal Board Removal	34	•	VC, HX2, K, Y2 Boards	120
2-4.	UT Bracket Removal	34	6-8.	Semiconductors	126
2-5.	G Bracket Removal	35	7.	EXPLODED VIEWS	
2-6.	D and VC Boards Removal	35	7-1.	Chassis	128
2-7.	U Bracket Removal	36	7-2.	Picture Tube	129
2-8.	Connector Cable	37	8.	ELECTRICAL PARTS LIST	130
2-9.	Service Position	38			
2-10.	Degaussing Coil Removal	38			
2-11.	Picture Tube Removal	39			
2-12.	Repair of Chip Component Circuit Board	40			
3.	SET-UP ADJUSTMENTS				
3-1.	Beam Landing	45			
3-2.	Convergence	46			
3-3.	Focus Adjustment	49			
3-4.	G2 (Screen) and White Balance Adjustmens	50			

SAFETY CHECK-OUT

(US Model only)

After correcting the original service problem, perform the following safety checks before releasing the set to the customer:

1. Check the area of your repair for unsoldered or poorly-soldered connections. Check the entire board surface for solder splashes and bridges.
2. Check the interboard wiring to ensure that no wires are "pinched" or contact high-wattage resistors.
3. Check that all control knobs, shields, covers, ground straps, and mounting hardware have been replaced. Be absolutely certain that you have replaced all the insulators.
4. Look for unauthorized replacement parts, particularly transistors, that were installed during a previous repair. Point them out to the customer and recommend their replacement.
5. Look for parts which, though functioning, show obvious signs of deterioration. Point them out to the customer and recommend their replacement.
6. Check the line cord for cracks and abrasion. Recommend the replacement of any such line cord to the customer.
7. Check the condition of the monopole antenna (if any). Make sure the end is not broken off, and has the plastic cap on it. Point out the danger of impalement on a broken antenna to the customer, and recommend the antenna's replacement.
8. Check the B+ and HV to see they are at the values specified. Make sure your instruments are accurate; be suspicious of your HV meter if sets always have low HV.
9. Check the antenna terminals, metal trim, "metallized" knobs, screws, and all other exposed metal parts for AC leakage. Check leakage as described below.



LEAKAGE

The AC leakage from any exposed metal part to earth ground and from all exposed metal parts to any exposed metal part having a return to chassis, must not exceed 0.5 mA (500 microamperes). Leakage current can be measured by any one of three methods.

1. A commercial leakage tester, such as the Simpson 229 or RCA WT-540A. Follow the manufacturers' instructions to use these instruments.
2. A battery-operated AC milliammeter. The Data Precision 245 digital multimeter is suitable for this job.
3. Measuring the voltage drop across a resistor by means of a VOM or battery-operated AC voltmeter. The "limit" indication is 0.75 V, so analog meters must have an accurate low-voltage scale. The Simpson 250 and Sanwa SH-63Trd are examples of a passive VOM that is suitable. Nearly all battery operated digital multimeters that have a 2V AC range are suitable. (See Fig. A)

HOW TO FIND A GOOD EARTH GROUND

A cold-water pipe is guaranteed earth ground; the cover-plate retaining screw on most AC outlet boxes is also at earth ground. If the retaining screw is to be used as your earth-ground, verify that it is at ground by measuring the resistance between it and a coldwater pipe with an ohmmeter. The reading should be zero ohms. If a cold-water pipe is not accessible, connect a 60-100 watts trouble light (not a neon lamp) between the hot side of the receptacle and the retaining screw. Try both slots, if necessary, to locate the hot side of the line, the lamp should light at normal brilliance if the screw is at ground potential. (See Fig. B)

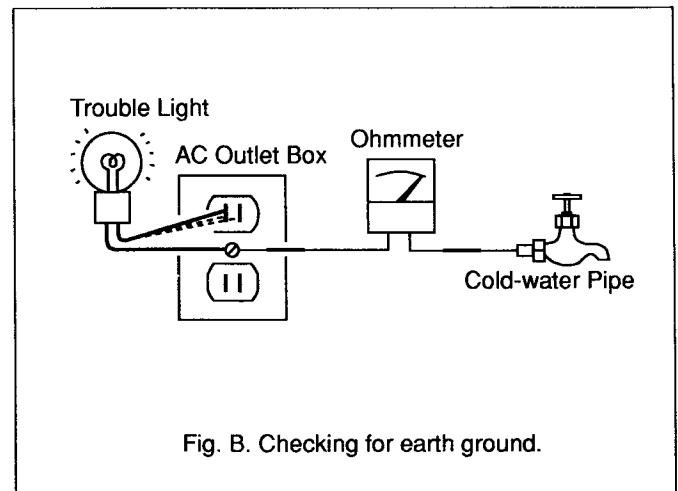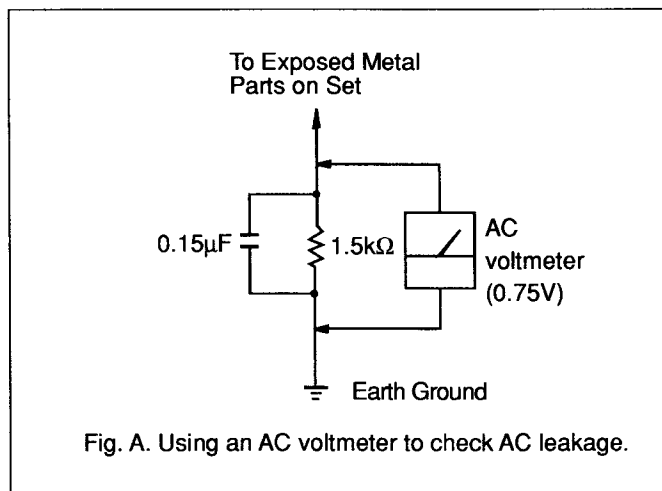




SECTION 1 GENERAL

This section is extracted from instruction manual.


1-1. LOCATING CONTROLS AND CONNECTORS

For details, see the pages indicated by the numbered black circles ●.

Front

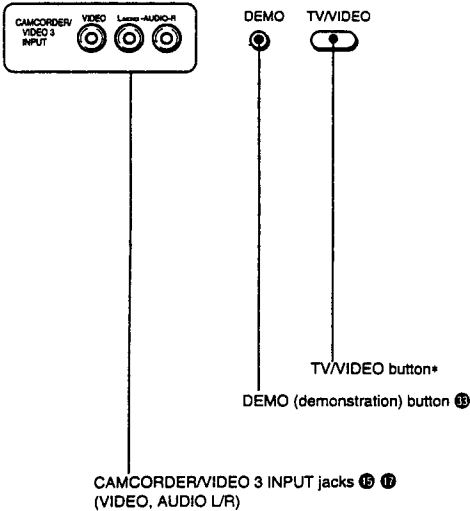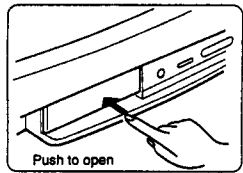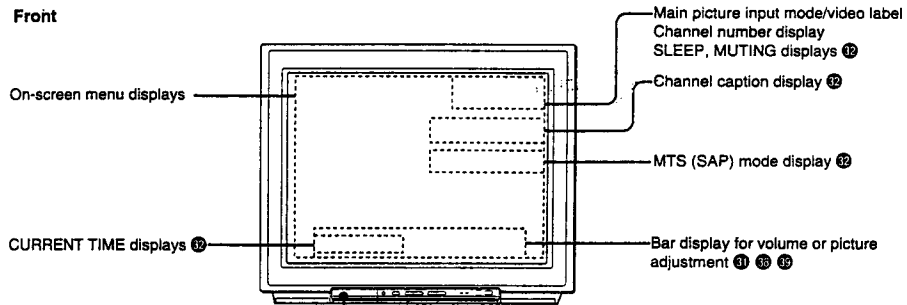


Rear

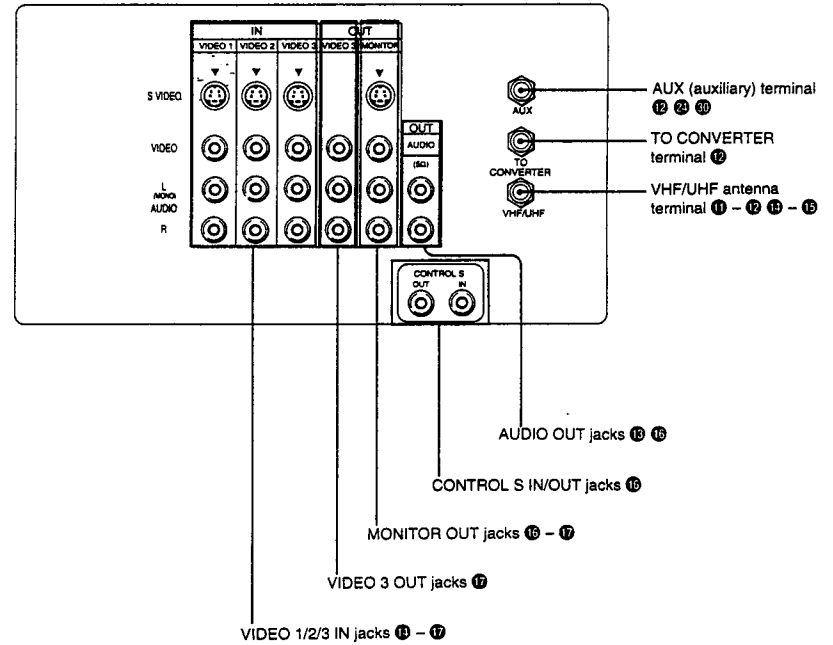

* Buttons or keys with the same function are also located on the Remote Commander (pp. 8-9)

Note
The instructions in this manual are based for the most part on operating the TV with the Remote Commander. You can also use the buttons on the TV that have the same function.

Integrated Remote Commander RM-AV1100

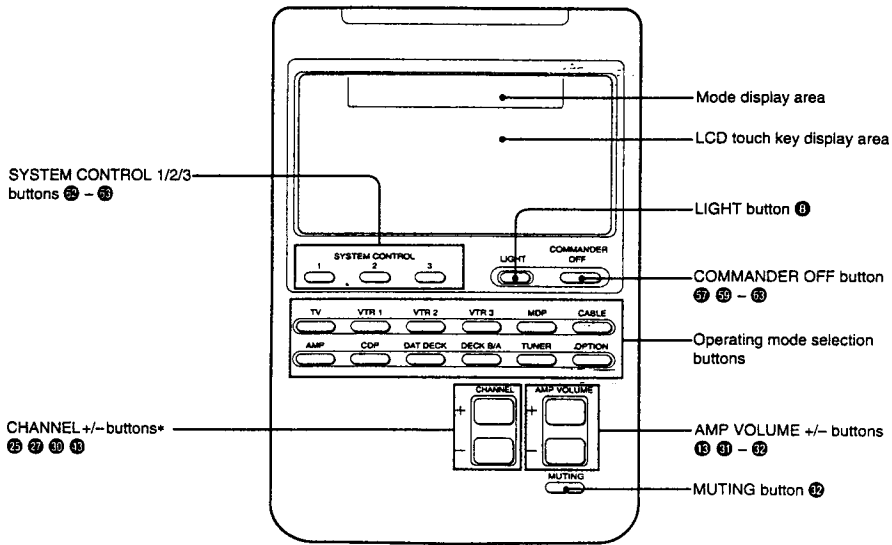

* Buttons with the same function are also located on the TV (p. 6).

Using the Remote Commander

To display the equipment operating keys

Press the button of the connected equipment you want to operate.

To operate non-Sony equipment

Set the manufacturer code (pp. 57 - 58), or perform Learning (pp. 59 - 60).

To control the volume

Connect an amplifier (p. 13), and then control the volume with the AMP VOLUME +/- and MUTING buttons.

For a complete view of the LCD key displays, see "LCD Key Display Quick Reference," pp. 66 - 67.

To light the LCD touch key display area

Press LIGHT.
Press LIGHT again to turn off the light.
The light goes off automatically in 20 seconds if you do not touch any keys.

To turn off the touch key confirmation beep


Touch \mathcal{J} (key signal on/off key) in any equipment operating key display.
When you touch the keys, there will be no confirming beep.
Touch \mathcal{J} again to restore the beep.

Displaying the TV operating keys

Most of the functions in this manual use controls found among the TV operating keys.

To display the TV operating keys

Press TV.

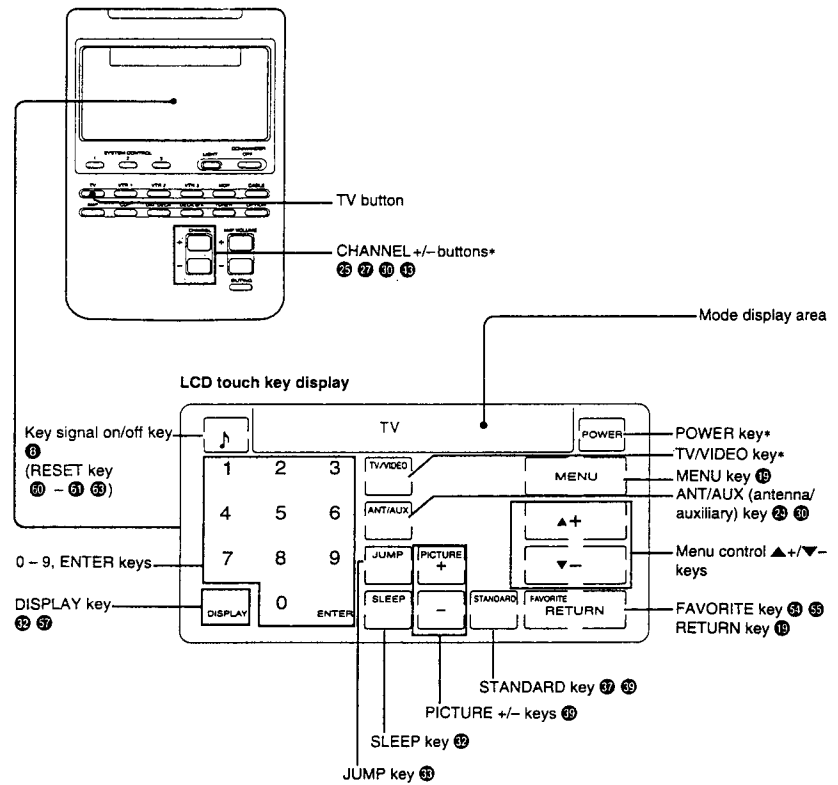


* Buttons with the same function are also located on the TV (p. 6).


1-2. USING THE ON-SCREEN MENUS

The following flow chart shows the different levels of on-screen menus that you can use to make various adjustments and settings. See the indicated pages for instructions on using each feature.


For picture and sound quality adjustment

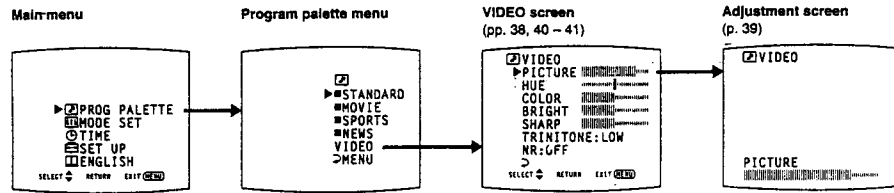


For mode adjustment

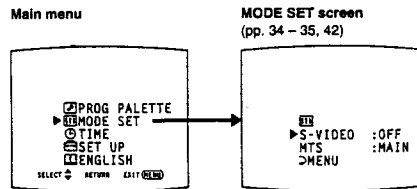

For time-related settings

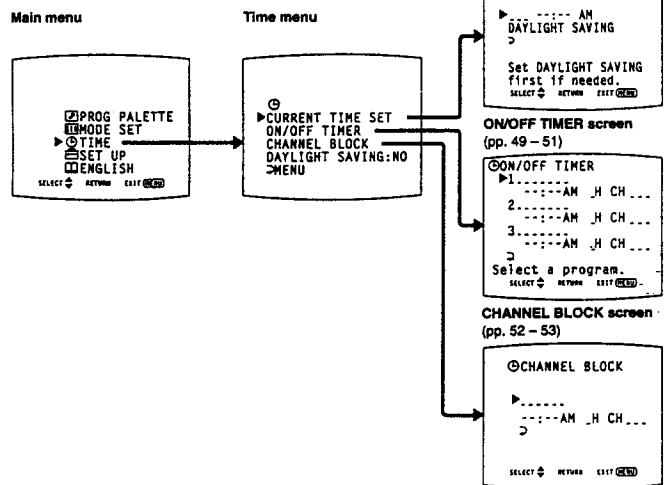


For presetting and other functions

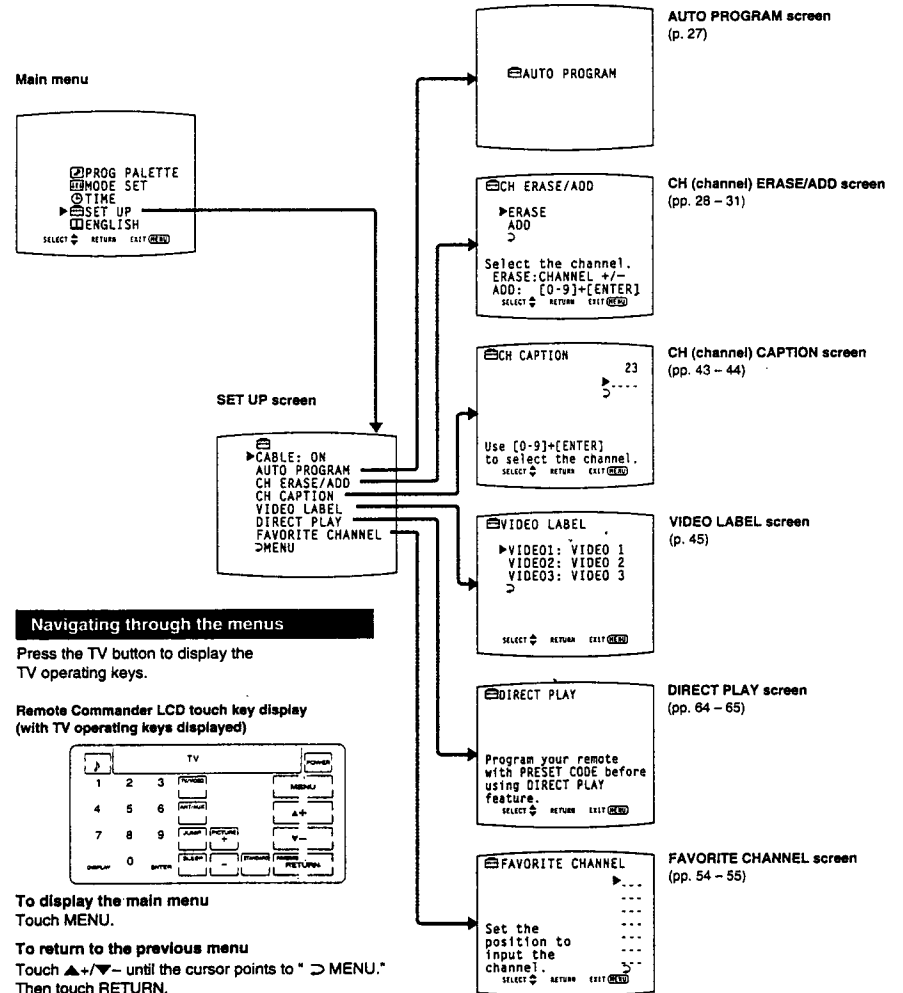

Navigating through the menus

Press the TV button to display the TV operating keys.

Remote Commander LCD touch key display (with TV operating keys displayed)

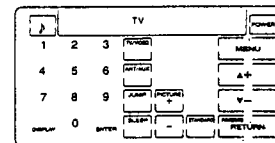


To display the main menu
Touch MENU.

To return to the previous menu
Touch ▲/▼ until the cursor points to " > MENU." Then touch RETURN.

To return to the main menu
Repeat the above, until you reach the main menu.

To return to the normal screen
Touch MENU.


Remote Commander
(Press the TV button to display
the TV operating keys.)

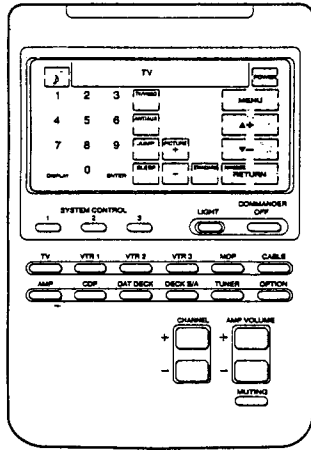


Changing the menu language

The menu language is factory-set to ENGLISH. Follow these instructions to change the menu language to Spanish or French, or back to English.



1 Touch POWER to turn on the TV.

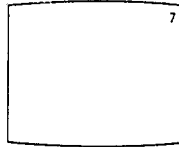


2 Touch MENU.
The main menu appears.



3 Touch ▲+ / ▼- until the cursor points to "ENGLISH."
Then touch RETURN.
The language display turns red.

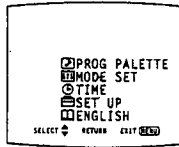

4 Touch ▲+ / ▼- to select the language.
Each time you touch ▲+ / ▼-, the "ESPAÑOL," "FRANÇAIS" and "ENGLISH" menus appear.



Note
Certain parts of the "ESPAÑOL" and "FRANÇAIS" menus remain in English.

5 Touch RETURN.
The language is selected.




To return to the normal screen.
Touch MENU.

Note concerning menus
The menus disappear automatically, if you do not press a button or touch a key within 90 seconds.

1-3. SETTING CABLE ON OR OFF



Remote Commander
(Press the TV button to display
the TV operating keys.)

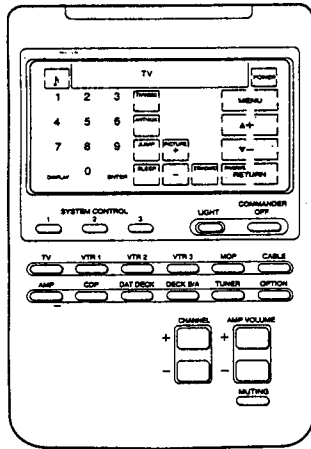



If you have cable connected to the TV, follow the steps below to set the cable connection on or off. Set CABLE OFF to preset or watch VHF or UHF channels, and set CABLE ON to preset or watch cable TV channels.

Note
If the TV is in video mode, the "CABLE" display is shaded and cannot be selected. Touch TV/VIDEO to change to TV mode.


1 Touch MENU.
The main menu appears.

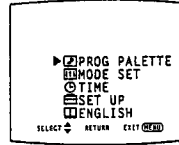


2 Touch ▲+ / ▼- until the cursor points to "SET UP."

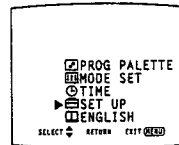



3 Touch RETURN.
The set up menu appears, and the cursor points to "CABLE."

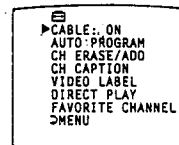


4 Touch RETURN again.
The mode display turns red.

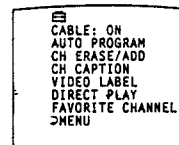

5 Touch ▲+ / ▼- to select "ON" or "OFF."

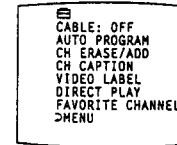

6 Touch RETURN.
The setting is complete.

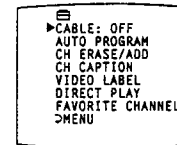

To return to the previous menu

Touch ▲+ / ▼- until the cursor points to "➤ MENU."
Then touch RETURN.

To return to the main menu
Repeat the above, until you reach the main menu.

To return to the normal screen.
Touch MENU.

Cable TV channel chart*
Cable TV systems use letters or numbers to designate channels. To tune in a channel, refer to the chart below.

Number on this TV	Corresponding CATV channel
1	A-8
5	A-7
6	A-6
14	A
15	B
16	C
17	D
18	E
19	F
20	G
21	H
22	I
23	J
24	K
25	L
26	M
27	N
28	O
29	P
30	Q
31	R
32	S
33	T
34	U
35	V
36	W
37	W+1
38	W+2
39	W+3
•	•
•	•
•	•
•	•
93	W+57
94	W+58
95	A-5
96	A-4
97	A-3
98	A-2
99	A-1
100	W+59
101	W+60
102	W+61
•	•
•	•
•	•
•	•
123	W+82
124	W+83
125	W+84

Check with your local cable TV company for more complete information on the available channels.


* The designation of the cable TV channels conforms to the EIA/NCTA recommendation.

Setting CABLE ON or OFF

1-4. PRESETTING TV CHANNELS

By presetting TV channels to the TV, you can select channels by pressing CHANNEL +/-.
(You can select VHF channel 2 – 13 without presetting.)

Remote Commander
(Press the TV button to display the TV operating keys.)

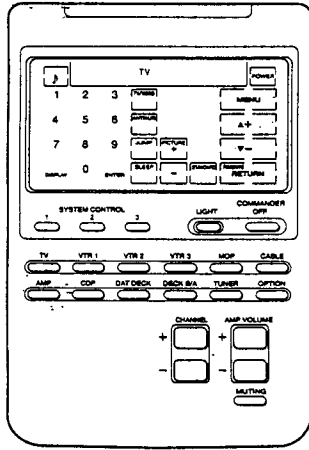


Presetting all receivable channels automatically

Follow these instructions to preset all the receivable VHF, UHF or cable TV channels to the TV.


Notes

- If the TV is in video mode, the "AUTO PROGRAM" display is shaded and cannot be selected. Touch TV/VIDEO to change to TV mode.
- Perform auto programming during the day rather than late at night, when some channels may not be broadcasting.

1 Set the cable connection on or off (pp. 22 – 23) to select the type of channel you want to preset, VHF/UHF or cable TV.



Touch ANT/AUX to select the type of channel you want to preset, VHF/UHF/regular cable TV, or pay cable TV connected to the AUX (auxiliary) terminal.

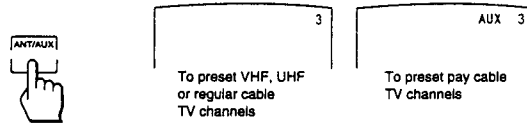

2 Touch MENU.
The main menu appears.



3 Touch ▲+/- until the cursor points to "SET UP."



4 Touch RETURN.
The set up menu appears.



5 Touch ▲+/- until the cursor points to "AUTO PROGRAM."



6 Touch RETURN.



"AUTO PROGRAM" appears on the screen and receivable channels (other than the channels already preset) are preset in numerical sequence. The channels previously preset will not remain in the TV's memory. When no more channels are found, auto programming stops and the screen returns automatically to the set up menu.

7 Press CHANNEL +/- to check or view the preset channels.



Receivable channels for this TV

- VHF: 2 – 13
- UHF: 14 – 69
- Cable: 1 – 125


To select TV channels without presetting
Touch the 0 – 9 keys and ENTER.

To return to the previous menu
Touch ▲+/- until the cursor points to " >MENU." Then touch RETURN.

To return to the main menu
Repeat the above, until you reach the main menu.

To return to the normal screen.
Touch MENU.



Remote Commander
(Press the TV button to display
the TV operating keys.)

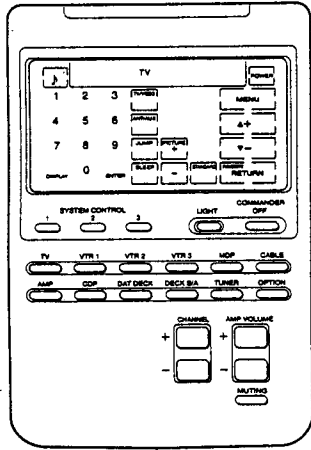



Erasing TV channels

Follow these instructions to erase unnecessary TV channels, so that when you press CHANNEL +/-, the channel(s) are skipped.


- 1** Touch MENU.
The main menu appears.

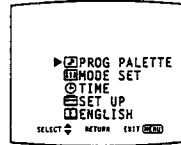



- 2** Touch ▲+/- until the cursor points to "SET UP."

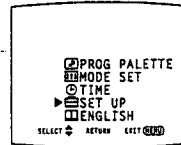


- 3** Touch RETURN.
The set up menu appears.

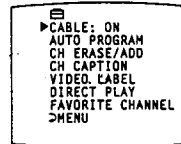


- 4** Touch ▲+/- until the cursor points to "CH ERASE/ADD."

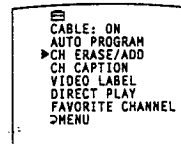

- 5** Touch RETURN.
The CH ERASE/ADD screen appears, and the cursor points to "ERASE."

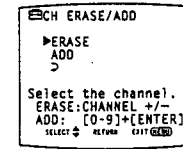

- 6** Press CHANNEL +/- to select the channel you want to erase.
The channel display appears.

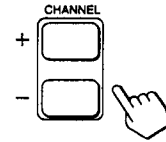

- 7** Touch RETURN.
A "-" sign appears in front of the channel number display, indicating that the channel is erased; then the CH ERASE/ADD screen automatically reappears.



To erase another channel
Repeat steps 6 - 7.


To return to the previous menu
Touch ▲+/- until the cursor points to
"MENU."
Then touch RETURN.

To return to the main menu
Repeat the above, until you reach the
main menu.

To return to the normal screen
Touch MENU.

Note
If you erase a VHF or UHF channel, the same
number cable TV channel is also erased (and
vice versa).



Remote Commander
(Press the TV button to display
the TV operating keys.)

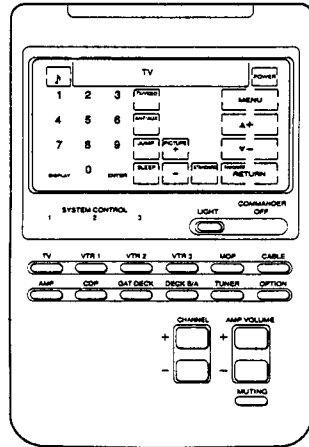



Adding TV channels

Follow these instructions to add TV channels one by one to the selection memory, or to replace a TV channel you previously erased (pp. 26 – 27).


1 Touch MENU.
The main menu appears.

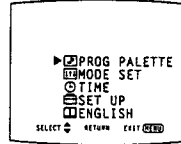



2 Touch ▲+ / ▼- until the cursor points to "SET UP."

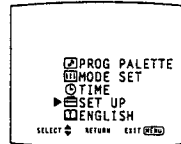


3 Touch RETURN.
The set up menu appears.

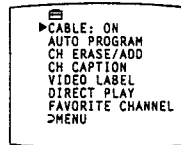



4 Touch ▲+ / ▼- until the cursor points to "CH ERASE/ADD."

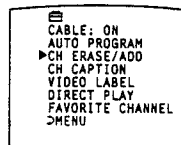



5 Touch RETURN.
The CH ERASE/ADD screen appears.

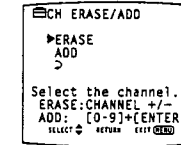


6 Touch ▲+ / ▼- down until the cursor points to "ADD."

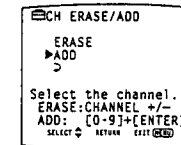

7 Touch 0 – 9 and ENTER on the Remote Commander to select the channel you want to add.
The channel display appears.

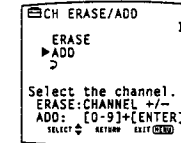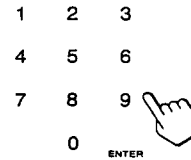

8 Touch RETURN.
A "+" sign appears in front of the channel number display, indicating that the channel is added; then the CH ERASE/ADD screen automatically reappears.

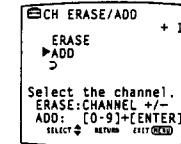

To add another channel
Repeat steps 7 – 8.

To return to the previous menu
Touch ▲+ / ▼- until the cursor points to
"MENU."
Then touch RETURN.


To return to the main menu
Repeat the above, until you reach the
main menu.

To return to the normal screen
Touch MENU.


Note
If you add a VHF or UHF channel, the same
number cable TV channel is also added
(and vice versa).

1-5. WATCHING TV PROGRAMS


Remote Commander
(Press the TV button to display the TV operating keys.)

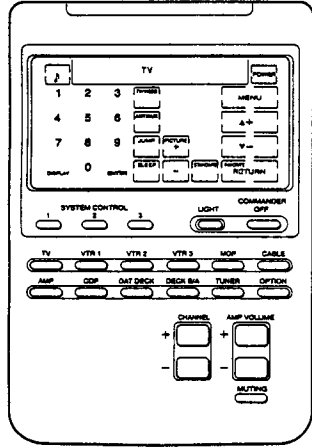

1 Set the cable connection on or off (pp. 22 – 23) to select the type of channel you want to watch, VHF/UHF or cable TV.




Touch ANT/AUX to select the type of channel you want to watch, VHF/UHF/regular cable TV, or pay cable TV connected to the AUX (auxiliary) terminal.




2 Select a channel in one of the following two ways:


To scan the preset channels in numerical sequence, press CHANNEL +/-.

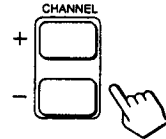

To select a channel directly, touch 0 – 9 and then ENTER.
For example, to select channel 10, touch 1, 0 and ENTER.

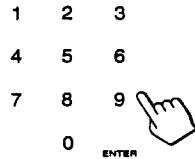

3 Make sure an audio system is connected to the TV (p. 13). Then press AMP VOLUME +/- to adjust the volume.

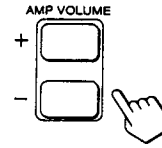


Press + to increase the volume.
Press – to decrease the volume.

If VIDEO 1, VIDEO 2 or VIDEO 3 appears on the screen
Touch TV/VIDEO to change to TV mode.


To select channels more easily
Set FAVORITE CHANNEL (pp. 54 – 55).

To turn off the TV
Touch POWER.

1-6. USING CONVENIENT FEATURES



Remote Commander
(Press the TV button to display the TV operating keys.)

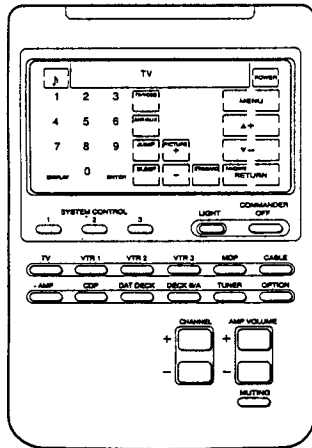

Muting the sound — MUTING

Press MUTING.
"MUTING" appears on the screen.


To restore the sound
Press MUTING again, or press AMP VOLUME +.



Keeping the displays on-screen — DISPLAY

Touch DISPLAY.
All the existing displays appear: channel number, channel caption (if set), MTS mode ("SAP" only), and the current time ("AM" or "PM" disappears after about three seconds).


To turn off the displays
Touch DISPLAY again.

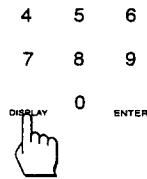

Setting the sleep timer — SLEEP

The sleep timer turns off the TV automatically after the amount of time you select.

Touch SLEEP.
Each time you touch SLEEP, the time increments "30," "60," "90" and "OFF" mode appear in sequence.

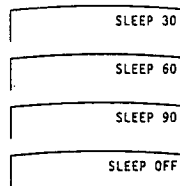

A red "SLEEP" display appears about one minute before the TV goes off.

To cancel the setting.
Touch SLEEP until OFF mode appears.
A green "SLEEP OFF" display appears for about three seconds.

OR
Turn the TV off.
The sleep timer setting is cancelled.

Switching quickly between two channels — JUMP

Use this function to keep track of two programs alternately.

To recall the channel you were watching previously
Touch JUMP.



To switch back to the first channel
Touch JUMP again.

Note
The JUMP function also changes the mode to ANT (antenna) or AUX (auxiliary), depending on the mode of the channel you were watching previously.

Previewing the features — DEMO

Press DEMO on the TV.
Functions and menus are displayed one by one.

To restart DEMO from the beginning.
Press DEMO again.

To stop DEMO
Press any button.



Selecting an MTS (Multichannel TV Sound) mode

Follow these instructions to select an MTS mode.

Select MAIN mode to listen to stereo sound.

The STEREO lamp on the TV lights up whenever a stereo broadcast is received.

Select SAP mode to listen to Second Audio Programs.


Select MONO mode to eliminate excessive noise during stereo broadcasts, caused by a weak incoming signal.

Note



If the TV is in video mode, the "MTS" display is shaded and cannot be selected.

Touch TV/VIDEO to change to TV mode.



Remote Commander
(Press the TV button to display the TV operating keys.)

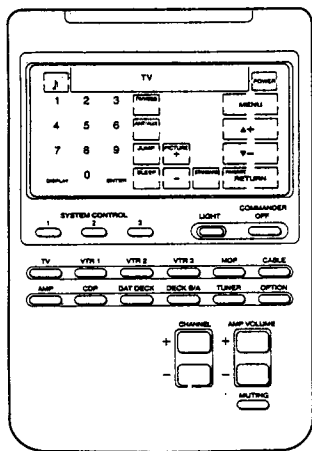


- 1** Touch MENU.
The main menu appears.

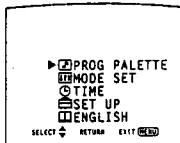



- 2** Touch ▲+ / ▼- until the cursor points to "MODE SET."

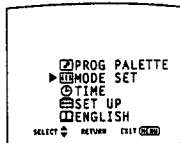


- 3** Touch RETURN.
The mode set menu appears.

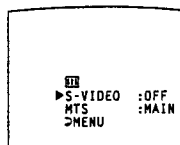



- 4** Touch ▲+ / ▼- until the cursor points to "MTS."

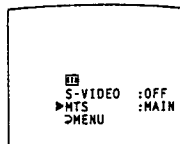


- 5** Touch RETURN.
The mode display turns red.

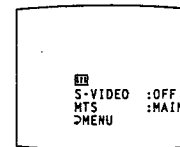

- 6** Touch ▲+ / ▼- to select the mode you want.
Each time you touch ▲+ / ▼-, "MAIN," "SAP" and "MONO" appear in sequence.

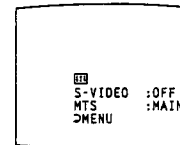

- 7** Touch RETURN.
The mode is selected.

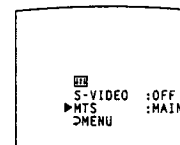

To return to the previous menu

Touch ▲+ / ▼- until the cursor points to "MENU." Then touch RETURN.

To return to the main menu

Repeat the above, until you reach the main menu.

To return to the normal screen


Touch MENU.

1-7. SELECTING A PICTURE MODE



This TV features four modes (STANDARD, MOVIE, SPORTS, NEWS) that offer different picture qualities. Choose the one that best suits the type of program that you want to watch.

Example: Select MOVIE mode for a picture that lets you view a long movie feature without tiring your eyes.


Remote Commander
(Press the TV button to display the TV operating keys.)

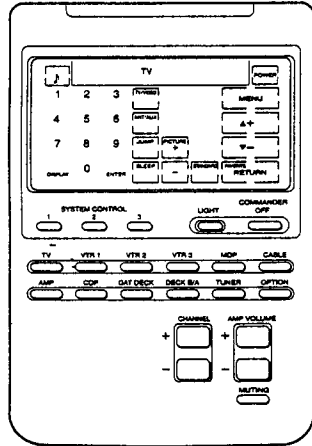


- 1 Touch MENU.
The main menu appears, and the cursor points to "PROG PALETTE."

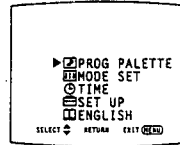

- 2 Touch RETURN.
The program palette menu appears.

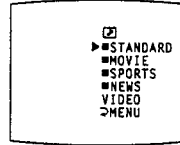

- 3 Touch ▲+ / ▼- until the cursor points to "MOVIE."



- 4 Touch RETURN.
The "MOVIE" display turns green, indicating that MOVIE mode is selected.



To select a different mode
Repeat steps 3 - 4.

Selecting standard mode (without using the menus)

Follow these instructions to select standard mode without using the on-screen menus.

Touch STANDARD.



When you select STANDARD mode

You receive standard picture quality. Any video adjustments you made ("Adjusting the Picture" pp. 38 - 41) are cancelled and the original factory settings are restored.

When you select MOVIE mode

You receive finely detailed picture quality. To further adjust picture qualities, follow the instructions on pp. 38 - 41.

When you select SPORTS mode

You receive a vivid, bright picture, with an exciting sports stadium effect. To further adjust picture qualities, follow the instructions on pp. 38 - 41.

When you select NEWS mode

You receive a clear picture, with any original picture noise reduced. To further adjust picture qualities, follow the instructions on pp. 38 - 41.

To return to the previous menu

Touch ▲+ / ▼- until the cursor points to "➤ MENU." Then touch RETURN.

To return to the main menu

Repeat the above, until you reach the main menu.

To return to the normal screen.

Touch MENU.


1-8. ADJUSTING THE PICTURE

You can adjust the picture for each input mode (TV, VIDEO 1, VIDEO 2, VIDEO 3) by pressing TV/VIDEO on the TV or by touching TV/VIDEO in the TV operating key display on the Remote Commander to select the input mode, before making the adjustments. These adjustments are retained in memory even when you turn off the TV, but are cancelled after you change the adjustments, or select a picture-mode (pp. 36 – 37).

Adjusting picture quality

Follow these instructions to adjust PICTURE, HUE, COLOR, BRIGHT (brightness) and SHARP (sharpness).

Remote Commander LCD touch key display
(Press the TV button to display the TV operating keys.)

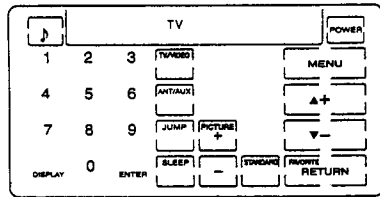

1 Touch MENU.
The main menu appears, and the cursor points to "PROG PALETTE."




2 Touch RETURN.
The program palette menu appears.



3 Touch ▲+ / ▼- until the cursor points to "VIDEO."

4 Touch RETURN.
The VIDEO screen appears.

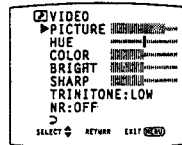

5 Touch ▲+ / ▼- until the cursor points to the item you want to adjust.


6 Touch RETURN.
The adjustment screen appears.



7 Touch ▲+ / ▼- to make the adjustment.

Picture quality	Touch ▼-	Touch ▲+
PICTURE	For decreased picture contrast with soft color	For increased picture with vivid color
HUE	Skin tones become purplish	Skin tones become greenish
COLOR	For less color intensity	For more color intensity
BRIGHT	For less brightness	For more brightness
SHARP	For less sharpness	For more sharpness

8 Touch RETURN.
The adjustment is complete, and the VIDEO screen automatically reappears.

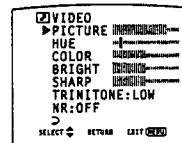

To adjust other items
Repeat steps 5 – 8.

To restore the factory settings for all the items
Select "STANDARD" on the program palette menu, and touch RETURN;
or, touch STANDARD.
All the items, including TRINITONE (p. 40) and NR (p. 41) return to their original factory settings.

To adjust picture contrast
You can also adjust picture contrast with the PICTURE +/- keys on the Remote Commander.



Touch + to increase picture contrast with vivid color.
Touch - to decrease picture contrast with soft color.
The picture adjustment screen appears.

To return to the previous menu
Touch ▲+ / ▼- until the cursor points to "MENU."
Then touch RETURN.


To return to the main menu-
Repeat the above, until you reach the main menu.

To return to the normal screen
Touch MENU.

Setting the TRINITONE mode

Color picture tubes are usually manufactured with a fixed color temperature (tint) that determines the "warmth" (red tint) or "coolness" (blue tint) of the picture. Use the Sony Trinitone feature to adjust the picture color to your preference.

Remote Commander LCD touch key display
(Press the TV button to display the TV operating keys.)

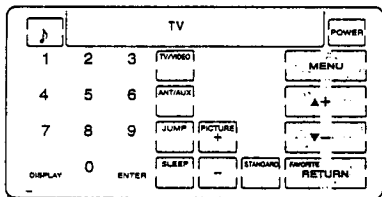

1 Touch MENU.
The main menu appears, and the cursor points to "PROG PALETTE."




2 Touch RETURN.
The program palette menu appears.



3 Touch ▲+ / ▼- until the cursor points to "VIDEO."

4 Touch RETURN.
The VIDEO screen appears.

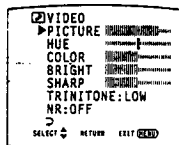

5 Touch ▲+ / ▼- until the cursor points to "TRINITONE."

6 Touch RETURN.
The mode display turns red.

7 Touch ▲+ / ▼- to select "HIGH" or "LOW."
Select "HIGH" to make the picture cool (bluish).
Select "LOW" to make the picture warm (reddish).

8 Touch RETURN.
The setting is complete.

To return to the previous menu
Touch ▲+ / ▼- until the cursor points to " > MENU."

Then touch RETURN.


To return to the main menu
Repeat the above, until you reach the main menu.

To return to the normal screen
Touch MENU.


Setting NR (picture noise reduction) ON or OFF

Follow these instructions to reduce picture noise.

Remote Commander LCD touch key display
(Press the TV button to display the TV operating keys.)

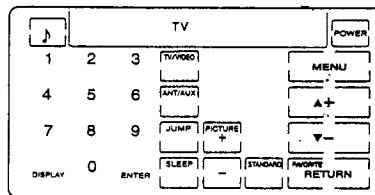

1 Touch MENU.
The main menu appears, and the cursor points to "PROG PALETTE."

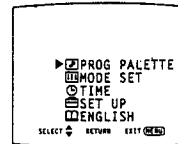


2 Touch RETURN.
The program palette menu appears.




3 Touch ▲+ / ▼- until the cursor points to "VIDEO."

4 Touch RETURN.
The VIDEO screen appears.

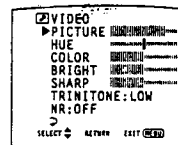

5 Touch ▲+ / ▼- until the cursor points to "NR."

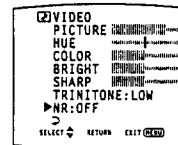

6 Touch RETURN.
The mode display turns red.

7 Touch ▲+ / ▼- to select "ON" or "OFF."
Select "ON" to reduce picture noise.
Select "OFF" to restore the normal picture.

8 Touch RETURN.
The setting is complete.

To return to the previous menu
Touch ▲+ / ▼- until the cursor points to " > MENU."
Then touch RETURN.


To return to the main menu
Repeat the above, until you reach the main menu.

To return to the normal screen
Touch MENU.


Setting S-VIDEO ON or OFF

Follow these instructions to set S-VIDEO on or off, depending on the kind of video equipment you have connected to the TV. For instructions on connecting video equipment, see pp. 14 – 17.

Remote Commander LCD touch key display
(Press the TV button to display the TV operating keys.)

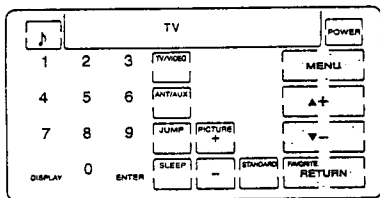


1 Touch MENU.
The main menu appears.

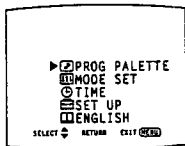

2 Touch ▲+▼- until the cursor points to "MODE SET."

3 Touch RETURN.
The mode set menu appears, with the cursor pointing to "S-VIDEO."

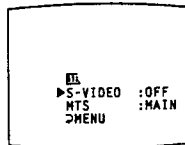

4 Touch RETURN.
The mode display turns red.

5 Touch ▲+▼- to select "ON" or "OFF."

6 Touch RETURN.
The setting is complete.

To return to the previous menu
Touch ▲+▼- until the cursor points to "MENU."
Then touch RETURN.

To return to the main menu
Repeat the above, until you reach the main menu.

To return to the normal screen
Touch MENU.


1-9. CUSTOMIZING THE SCREEN DISPLAY

Setting channel captions — CH CAPTION


Follow these instructions to caption each channel number display with a name, for instance, the television station call letters. (You can set up to four letters or numbers).

Example: Caption channel 15 as "NBC."

Remote Commander
(Press the TV button to display the TV operating keys.)

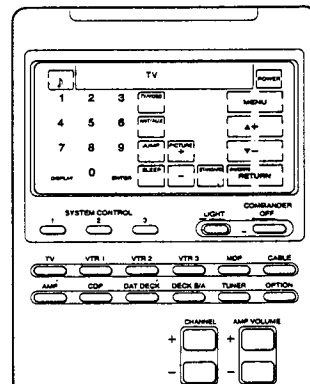


1 Touch MENU.
The main menu appears.

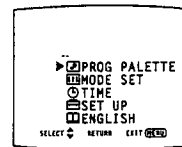


2 Touch ▲+▼- until the cursor points to "SET UP."

3 Touch RETURN.
The set up menu appears.

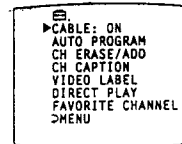


4 Touch ▲+▼- until the cursor points to "CH CAPTION."

5 Touch RETURN.
The CH CAPTION screen appears.

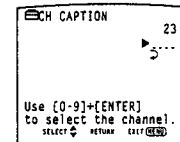


6 Press CHANNEL +/-, or touch 1, 5 and ENTER to set channel "15."

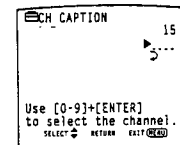

7 Touch RETURN.
The first caption space turns red.

8 Touch ▲+▼- to select "N."
Each time you touch ▲+▼-, "0" – "9," "A" – "Z," "g," "y," "." and "_" (blank space) appear in sequence.

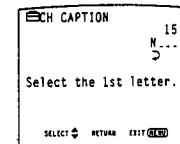


9 Touch RETURN.
The second caption space turns red.


(Continued)

Setting channel captions – CH CAPTION
(Cont'd. from prev. page)

Remote Commander LCD touch key display
(Press the TV button to display the TV operating keys.)

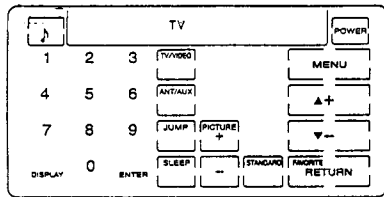


10 Touch ▲+ / ▼- to select "B."

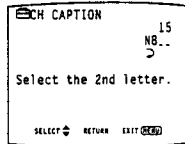


11 Touch RETURN.
The third caption space turns red.

12 Touch ▲+ / ▼- to select "C."

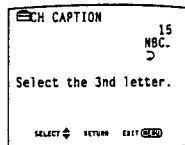

13 Touch RETURN.
The fourth caption space turns red.

14 Touch ▲+ / ▼- to select a blank space.

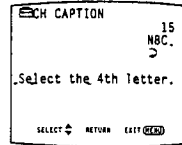

15 Touch RETURN.
The setting is complete.
When you select or display the channel number, the channel caption also appears.

To caption more channels
Repeat steps 6 – 15.

To erase unnecessary captions
Display the CH CAPTION screen, select the channel with the caption you want to erase, and select blank spaces for the channel caption; then touch RETURN.
The caption for that channel is erased.

To return to the previous menu
Touch ▲+ / ▼- until the cursor points to "➤ MENU."
Then touch RETURN.

To return to the main menu
Repeat the above, until you reach the main menu.

To return to the normal screen
Touch MENU.


Note
You can set up to 32 channel captions. If the memory is full, "The memory is full, sorry" appears on the screen. Erase any unnecessary captions, and begin again.

Setting VIDEO LABEL


Follow these instructions to label each input mode, in order to identify the equipment connected to each input terminal.

Example: Label VIDEO 1 IN as "VHS."

Remote Commander LCD touch key display
(Press the TV button to display the TV operating keys.)

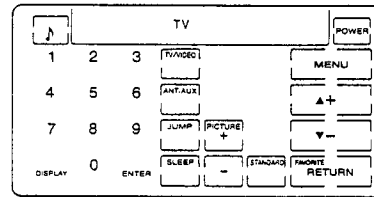


1 Touch MENU.
The main menu appears.

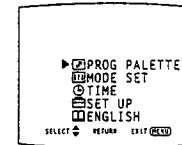

2 Touch ▲+ / ▼- until the cursor points to "SET UP."

3 Touch RETURN.
The set up menu appears.

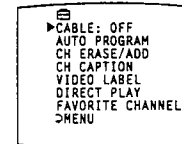

4 Touch ▲+ / ▼- until the cursor points to "VIDEO LABEL."

5 Touch RETURN.
The VIDEO LABEL screen appears.




6 Touch ▲+ / ▼- until the cursor points to the input mode you want to label. (In this case, the cursor is already pointing to "VIDEO 1.")

7 Touch RETURN.
The label display turns red.

8 Touch ▲+ / ▼- to select "VHS."



Each time you touch ▲+ / ▼-, the label changes:



9 Touch RETURN.
The setting is complete.
When you select or display the video mode, the video label appears.

To label other input modes
Repeat steps 6 – 9.

To change a label
Same as above.

To return to the previous menu
Touch ▲+ / ▼- until the cursor points to "➤ MENU." Then touch RETURN.

To return to the main menu
Repeat the above, until you reach the main menu.

To return to the normal screen
Touch MENU.

1-10. USING TIMER-ACTIVATED FUNCTIONS


Setting DAYLIGHT SAVING

If you live in an area that uses daylight savings time, set DAYLIGHT SAVING to "YES" or "NO" depending on the season, before setting the current time. At the next daylight savings date, you will be able to automatically adjust all the time-related settings (CURRENT TIME, ON/OFF TIMER and CHANNEL BLOCK) simply by changing the DAYLIGHT SAVING setting.

When setting DAYLIGHT SAVING:


- **After the first Sunday in April (spring daylight savings)**
Set to "YES" before setting the current time. Then, on the last Sunday in October (fall daylight savings), set to "NO."
All the time-related settings automatically move one hour back.
- **After the last Sunday in October (fall daylight savings)**
Set to "NO" before setting the current time. Then, on the first Sunday in April (spring daylight savings), set to "YES."
All the time-related settings automatically move one hour ahead.

Remote Commander LCD touch key display
(Press the TV button to display the TV operating keys.)

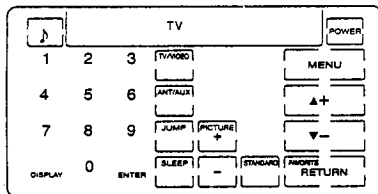


Follow these instructions to set DAYLIGHT SAVING to "YES" or "NO."

- 1 Touch MENU.
The main menu appears.

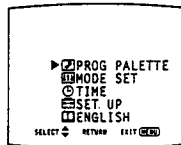

- 2 Touch ▲+ / ▼- until the cursor points to "TIME."

- 3 Touch RETURN.
The time menu appears.

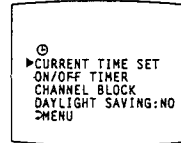

- 4 Touch ▲+ / ▼- until the cursor points to "DAYLIGHT SAVING."

- 5 Touch RETURN.
The mode display turns red.

- 6 Touch ▲+ / ▼- to select "YES" or "NO."
The setting is complete.

- 7 Touch RETURN.

To return to the previous menu
Touch ▲+ / ▼- until the cursor points to "MENU."
Then touch RETURN.

To return to the main menu
Repeat the above, until you reach the main menu.


To return to the normal screen.
Touch MENU.

Setting the clock — CURRENT TIME SET


Follow these instructions to set the current time. The correct current time must be set in order to use the other time-related functions (DAYLIGHT SAVING, ON/OFF TIMER, CHANNEL BLOCK).

Example: Set the time to 3:15 PM, Monday.

Remote Commander LCD touch key display
(Press the TV button to display the TV operating keys.)

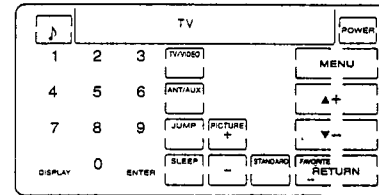

- 1 Touch MENU.
The main menu appears.

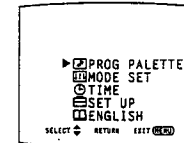

- 2 Touch ▲+ / ▼- until the cursor points to "TIME."

- 3 Touch RETURN.
The time menu appears, and the cursor points to "CURRENT TIME SET."



- 4 Touch RETURN again.
The CURRENT TIME SET screen appears, with a reminder to set DAYLIGHT SAVING.



If you do not need to set DAYLIGHT SAVING, touch RETURN and continue from step 5.

To set daylight saving


- a Touch ▲+ / ▼- until the cursor points to "DAYLIGHT SAVING."
- b Touch RETURN.
The time menu appears, and the cursor points to "DAYLIGHT SAVING."
- c Touch RETURN.
- d Touch ▲+ / ▼- to select "YES" or "NO."
- e Touch RETURN.
The setting is complete.

To set the time

Touch ▲+ / ▼- until the cursor points to "CURRENT TIME SET"; touch RETURN, then continue from step 5.

- 5 Touch RETURN.
The CURRENT TIME SET screen appears, and the "SUN" display appears (red).


- 6 Touch ▲+ / ▼- to select "MON."
Each time you touch ▲+ / ▼-, the day changes consecutively.

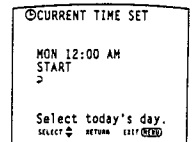

(Continued)


Setting the clock — CURRENT TIME SET
(Cont'd. from prev. page)

Remote Commander LCD touch key display
(Press the TV button to display the TV operating keys.)

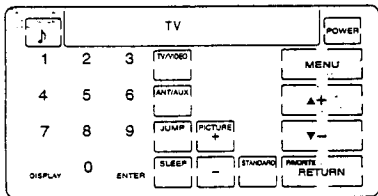


7 Touch RETURN.
The hour and am/pm displays turn red.

8 Touch ▲+ / ▼- to set "3:00PM."
Each time you touch ▲+ / ▼-, the hour changes in sequence beginning with "12:00AM."

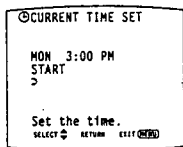

9 Touch RETURN.
The minute display turns red.

10 Touch ▲+ / ▼- to select "15" (minutes).
Each time you touch ▲+ / ▼-, the minutes change in sequence.

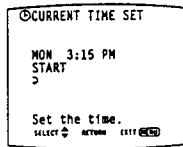

11 Touch RETURN.
The cursor points to "START."

12 Check the actual time, and touch RETURN to start the clock.
The setting is complete.

To reset the time
Display the CURRENT TIME SET screen and repeat steps 5 – 12.

To display the current time
Press DISPLAY.

To return to the previous menu
Touch ▲+ / ▼- until the cursor points to " > MENU." Then touch RETURN.

To return to the main menu
Repeat the above, until you reach the main menu.


To return to the normal screen.
Touch MENU.

Setting the ON/OFF TIMER


Follow these instructions to make the program of your choice appear on the screen at a specified time.

Example: Set the timer to turn on the TV every Monday through Friday at 1:30 AM for 3-hours, on channel 8, as PROGRAM 1. (You can set up to three programs.)

Remote Commander LCD touch key display
(Press the TV button to display the TV operating keys.)

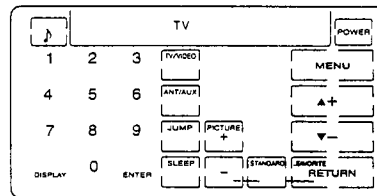


1 Touch MENU.
The main menu appears.

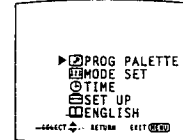


2 Touch ▲+ / ▼- until the cursor points to "TIME."

3 Touch RETURN.
The time menu appears.

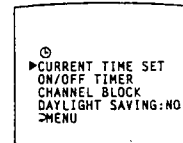


4 Touch ▲+ / ▼- until the cursor points to "ON/OFF TIMER."

5 Touch RETURN.
The ON/OFF TIMER screen appears, and the cursor points to "1."

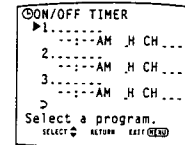


6 To set program 1, touch RETURN.
(To set program 2 or 3, touch ▲+ / ▼- until the cursor points to that program; then touch RETURN.)
The day input space turns red.

7 Touch ▲+ / ▼- to select "EVERY MON-FRI"; then touch RETURN.
Each time you touch ▲+, the days of the week change as shown in Fig. 1 (p. 51).

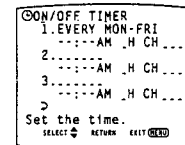


8 Touch ▲+ / ▼- to select "1:00AM"; then touch RETURN.
Each time you touch ▲+ / ▼-, the hour changes in sequence.

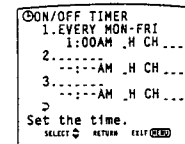


(Continued)

Setting the ON-OFF TIMER (Cont'd from prev. page)


Remote Commander LCD touch key display
(Press the TV button to display the TV operating keys.)

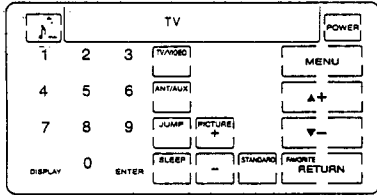


9 Touch ▲+ / ▼- to select "30" (minutes);
Then touch RETURN.
Each time you touch ▲+ / ▼-, the minutes change in sequence.

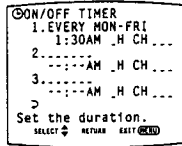

10 Touch ▲+ / ▼- to select "3" (hour duration); then touch RETURN.
Each time you touch ▲+ / ▼-, the duration changes from "1" - "6" in sequence.

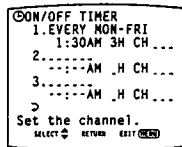

11 Touch ▲+ / ▼- to select "8" (channel); then touch RETURN.
The TIMER indicator lights, indicating that the setting is complete.
Each time you touch ▲+ / ▼-, the channel number changes from 1 - 125 in sequence.

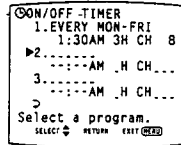

The display "TIMER WILL BE OFF" appears on the screen one minute before the timer duration ends.

To set program 2 or 3.
Touch RETURN and repeat steps 6 - 11.

To erase an ON/OFF TIMER setting
Display the ON/OFF TIMER screen, select the setting you want to erase, and select the underlined spaces for the day setting.
The ON/OFF TIMER setting is erased.

To enter a new ON/OFF TIMER setting
Display the ON/OFF TIMER screen and repeat steps 6 - 11.


To return to the previous menu
Touch ▲+ / ▼- until the cursor points to " > MENU." Then touch RETURN.

To return to the main menu
Repeat the above, until you reach the main menu.

To return to the normal screen.
Touch MENU.

Note
If you unplug the TV or a power failure occurs, both the clock and timer settings will be erased. Reset the current time; then set the timer.

Fig. 1
Selecting the day(s) of the week
When you touch ▲+, the days of the week appear in the following order:

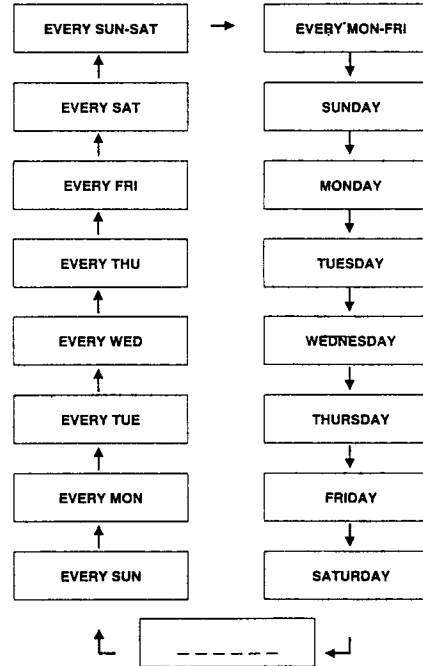


Setting CHANNEL BLOCK

Follow these instructions to prevent a channel from appearing on the screen during the time that you specify. You can use this function to prevent children from watching unsuitable programs.


Example: Set CHANNEL BLOCK every Saturday at 4:30 PM for 1 hour, on Channel 12.

Remote Commander LCD touch key display
(Press the TV button to display the TV operating keys.)

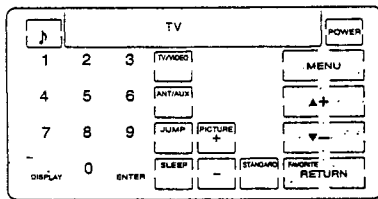

Note
If you have not set the current time, the "CHANNEL BLOCK" display is shaded and cannot be selected.

1 Touch MENU.
The main menu appears.

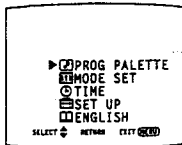


2 Touch ▲+/- until the cursor points to "TIME."

3 Touch RETURN.
The time menu appears.




4 Touch ▲+/- until the cursor points to "CHANNEL BLOCK."


5 Touch RETURN.
The CHANNEL BLOCK screen appears, and the cursor points to the day input space.

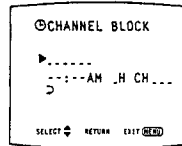


6 Touch RETURN.
The day input space turns red.

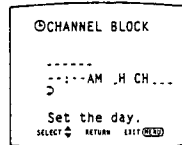


7 Touch ▲+/- to select "EVERY SAT"; then touch RETURN.
Each time you touch ▲+/-, the days of the week change as shown in Fig. 1 (p. 51).

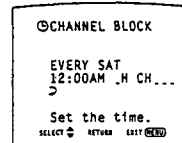


8 Touch ▲+/- to select "4:00PM"; then touch RETURN.
Each time you touch ▲+/-, the hour changes in sequence.

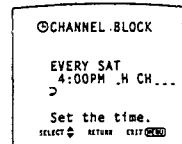


9 Touch ▲+/- to select "30" (minutes); then touch RETURN.
Each time you touch ▲+/-, the minutes change in sequence.

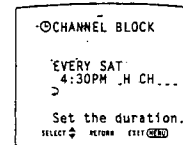


10 Touch ▲+/- to select "1" (hour duration); then touch RETURN.
Each time you touch ▲+/-, the duration changes from "1" - "6" in sequence.

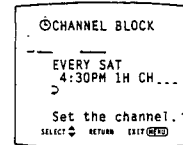

11 Touch ▲+/- to select "12" (channel); then touch RETURN.
The setting is complete.
Each time you touch ▲+/-, the channel number changes from "1" - "125" in sequence.

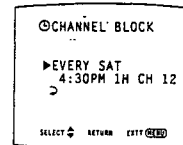

At the specified time, "BLOCKED" appears in red on the screen, and the picture of the specified channel is blocked and the sound is muted.

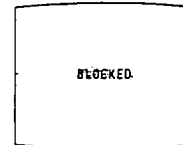

To erase a CHANNEL BLOCK setting
Display the CHANNEL BLOCK screen and select the underlined spaces for the day setting.
The CHANNEL BLOCK setting is erased.

To enter a new CHANNEL BLOCK setting
Display the CHANNEL BLOCK screen and repeat steps 4 - 10. (You can only set one CHANNEL BLOCK at a time.)

To return to the previous menu
Touch ▲+/- until the cursor points to "MENU." Then touch RETURN.

To return to the main menu
Repeat the above, until you reach the main menu.


To return to the normal screen.
Touch MENU.

Note
If the ON/OFF TIMER is set for an overlapping time (pp. 49 - 51), the later time setting takes precedence. For example, if CHANNEL BLOCK is set for 2:00 PM and ON/OFF TIMER is set for 3:00 PM, ON/OFF TIMER will take effect at 3:00 PM.

1-11.SETTING FAVORITE CHANNEL


By setting FAVORITE CHANNEL, you can select the channels you use most frequently (up to seven channels) simply by touching FAVORITE (same as the RETURN key) on the Remote Commander.

Remote Commander LCD touch key display
(Press the TV button to display the TV operating keys.)

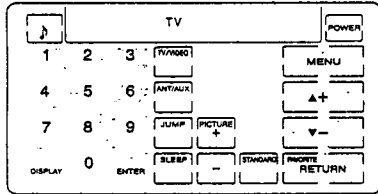


Follow these instructions to set the channels.

1 Touch MENU.
The main menu appears.

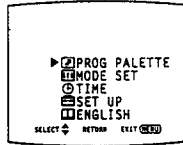


2 Touch ▲+/- until the cursor points to "SET UP."

3 Touch RETURN.
The set up menu appears.

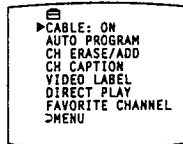


4 Touch ▲+/- until the cursor points to "FAVORITE CHANNEL."

5 Touch RETURN.
The FAVORITE CHANNEL screen appears, and the cursor points to the first channel position.

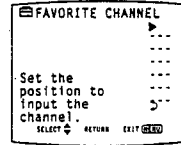

6 Touch ▲+/- to select the channel position; then touch RETURN.

7 Touch 0 - 9 and ENTER to set the channel number.

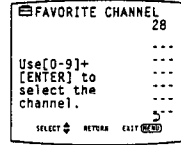

8 Touch RETURN.
The setting is complete.

To set other channels
Repeat steps 6 - 8.

To erase a favorite channel setting
Touch ▲+/- until the cursor points to the channel number you want to erase; then touch 0 and ENTER.

To reset a favorite channel setting
Display the FAVORITE CHANNEL screen and repeat steps 6 - 8.

To return to the previous menu
Touch ▲+/- until the cursor points to " > MENU." Then touch RETURN.


To return to the main menu
Repeat the above, until you reach the main menu.

To return to the normal screen.
Touch MENU.

Selecting a favorite channel

After setting the channels, follow these instructions to select the channel you want to watch.

1 Touch FAVORITE (same as the RETURN key).
The FAVORITE CHANNEL display appears.

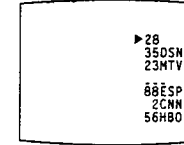

Note
If you have set channel captions (pp. 43 - 44), the captions appear with the channel numbers.

2 Touch ▲+/- to select the channel you want to watch; then touch RETURN (same as the FAVORITE key).
The channel is selected.

If you touch FAVORITE (same as the RETURN key) before setting FAVORITE CHANNEL, this screen appears.



Follow steps 1 - 8 to set your favorite channels, and then make the selection.

1-12. USING THE INTEGRATED REMOTE COMMANDER


You can operate other video equipment (such as VCRs, video disc players and cable boxes) that have an infrared remote detector with this supplied Remote Commander.

Operating Sony video equipment


Follow these instructions to operate Sony video cassette recorders (Beta, 8 mm and VHS) and video disc players (including multi-disc players).

Example: Operate a Sony VCR connected to the VIDEO 2 IN jacks.

Remote Commander

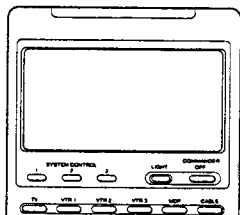

Remote Commander LCD display panel (with VTR 3 operating keys displayed)

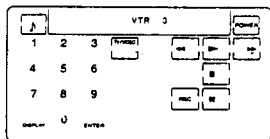

1 Press VTR 3 to operate a VCR (see Fig. 2). The VTR 3 operating keys appear.



Fig. 2: Video equipment settings

If you want to operate a:	set to:
Beta, ED Beta VCR	VTR 1
8 mm VCR	VTR 2
VHS VCR	VTR 3
Video disc player	MDP

2 Use the video operating keys to control the connected equipment.

Fig. 3: Operating a VCR (VTR 1/ 2/ 3)

To turn on/off	Touch POWER.
To change channels (when watching TV programs through the VCR's tuner)	Press CHANNEL +/-.
To record	Touch REC and ► simultaneously.
To play	Touch ►.
To stop	Touch ■.
To fast forward	Touch ►►.
To rewind the tape	Touch ◄◄.
To pause	Touch .
	To resume normal playback, touch again.
To search the picture forward and backward	Keep touching ►► or ◄◄ during playback. To resume normal playback, release the key.
To change input mode	Touch TV/VIDEO.

For a complete view of other equipments' operating keys, see "LCD Key Display Quick Reference," pp. 66 – 67.

Note

If the video equipment does not have a certain function, the corresponding button on this Remote Commander will not operate.

Caution

When you replace the batteries, do it within approximately 30 minutes. Otherwise the settings you made under the Pre-Programmed function (pp. 57 – 58) and Learning function (pp. 59 – 60) may be erased.


Operating non-Sony or Sony video equipment

Follow these instructions to set the manufacturer code, which will enable you to operate non-Sony video equipment with the Integrated Remote Commander.

If you set a non-Sony manufacturer code to an equipment button and later switch to Sony equipment, set the Sony equipment code (Fig. 6, p. 58) to operate the equipment.

Example: Operate an RCA multi-disc player (MDP).

Remote Commander (with MDP operating keys displayed)

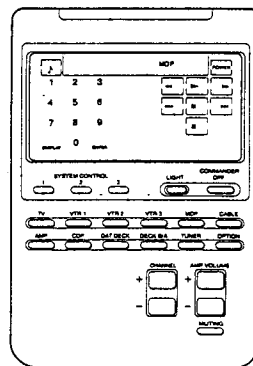

3 Touch 5, 1 and ENTER to set the RCA code number. (For manufacturer code numbers, see Figs. 4 – 7 on p. 58.)

A beep sounds, and the code numbers and ENTER appear twice.



4 Press COMMANDER OFF. The display disappears and the setting is complete.



5 To operate the equipment, press MDP. The MDP operating keys appear. (You can also use the CHANNEL +/- buttons to control the equipment.) (The controls function as shown in Fig. 3: "Operating a VCR," p. 58.)

To check which manufacturer code is set


Touch DISPLAY.

The code number and ENTER appear twice.

Notes

- If more than one code number is listed, try entering them one by one, until you come to the correct code for your equipment.
- If you enter a new code number, the code number previously set to that button is erased.
- Some equipment of the same manufacturer may have a different remote control signal. If you cannot operate the equipment after setting the manufacturer code, use Learning to input the signal to this Remote Commander (pp. 59 – 60).
- If you do not touch a key within two minutes in step 1, equipment selection mode ends. To begin again, repeat step 1.

1 While pressing COMMANDER OFF, press MUTING. The equipment name display blinks, indicating that you are in equipment selection mode.



Note

All the equipment names are displayed, but you can only select VTR 1/2/3, MDP and CABLE buttons.

2 Press MDP. "MDP" remains displayed, and the 0 – 9/ENTER/DISPLAY keys blink.



Fig. 4: VCR manufacturer code numbers

MANUFACTURER	CODE
SONY	01, 02, 03
CANON	05
EMERSON	22, 30, 33
FISHER	10, 11, 12, 15
FUNAI	29
GENERAL ELECTRIC	05, 08
GOLDSTAR	25
HITACHI	07, 08, 36
JVC	16, 35
MAGNAVOX	05, 06, 09
MITSUBISHI	18, 19, 26, 27
MULTITECH	29
NEC	16, 23, 31
PANASONIC	05, 06
PHILCO	05, 06
PHILIPS	05, 06, 09
QUASAR	05, 06
RCA	07, 08
SAMSUNG	24, 32
SANYO	11, 15
SCOTT	21
SHARP	13, 14
SHINTOM	34
SYLVANIA	05, 06, 09
SYMPHONIC	29
TEKNIKA	28, 29
TOSHIBA	20, 21
TOTE VISION	25
ZENITH	17

Fig. 5: MDP manufacturer code numbers

MANUFACTURER	CODE
SONY	04
KENWOOD	58
MAGNAVOX	52
MARANZ	54
MITSUBISHI	51
PANASONIC	55
PHILIPS	52
PIONEER	51
RCA	51
SANYO	57
SHARP	56
YAMAHA	53

Fig. 6: Sony Equipment and Code Numbers

SONY EQUIPMENT	CODE
Beta, ED Beta VCR	01
8 mm VCR	02
VHS VCR	03
Video disc player	04

Fig. 7: Cable box manufacturer code numbers

MANUFACTURER	CODE
JERROLD	60, 61, 62, 63, 64, 65
PIONEER	69, 70
SCIENTIFIC ATLANTA	68, 67
TOCOM	71, 72
ZENITH	68

Note
In some rare cases, you may not be able to operate your non-Sony video equipment with the supplied Remote Commander. This is because your equipment may use a code that is not provided with this Remote Commander. In this case, please use the equipment's own remote control unit.

For your convenience
Write the manufacturer name and code number for your equipment onto one of the supplied self-adhesive labels and affix the label to the Remote Commander for easy reference.

	BRAND	CODE
1		
2		
3		

Recalling the manufacturer code without referring to the code number charts

- 1 While pressing COMMANDER OFF, press MUTING.
 - 2 Press the button (VTR 1/2/3, MDP, CABLE) of the equipment for which you need the code number.
 - 3 Press CHANNEL +.
- The power on signal for video equipment is activated, in numerical sequence from code number 01.
- 4 When your video equipment's power is turned on, touch DISPLAY.
- The code number and ENTER appear twice.


Operating non-Sony or Sony audio and video equipment (Learning function)

Follow these instructions to "teach" any of the programmable buttons to operate the function of another Remote Commander. Use Learning in order to operate non-Sony and Sony audio equipment, a remote controlled cable converter box or video equipment for which the manufacturer code is not listed (Figs. 4 - 7, p. 58). You can also use Learning to change the function of individual buttons after setting the manufacturer code.


Note
If you set the manufacturer code after performing Learning the learned input is erased, so always perform Learning last.

Example: Record the ► (play) signal of the other remote commander onto the VTR 1 ► key of the supplied Remote Commander.


Remote Commander (with VTR 1 operating keys displayed)

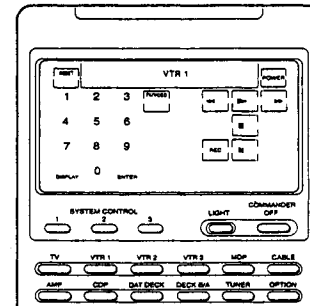

- 1 Place the supplied Remote Commander head to head with the other equipment's remote commander, approximately 5 cm (2 inches) apart.

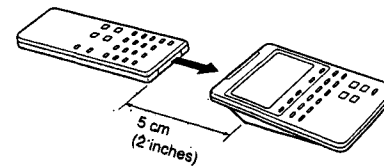

- 2 While pressing COMMANDER OFF, press VTR 1. All the learning-able keys blink. The C+C-V+V-MU display indicates that CHANNEL +/-, AMP VOLUME +/- and MUTING buttons are also learning-able.



- 3 Touch ►. The key remains displayed, and "LEARN" blinks for about 10 seconds, indicating that you are in learning mode.



- 4 Press and hold down the ► button of the other remote commander. The "LEARN" display and the ► key freeze. When a beep sounds, release the key.



- 5 Repeat steps 3 and 4 to teach functions to other buttons. The keys that have "learned" do not blink.

- 6 Press COMMANDER OFF. Learning is complete.



(Continued)

Operating non-Sony or Sony audio and video equipment (Learning function)
(Cont'd. from prev. page)

To learn another equipment's remote commander signal
After positioning the two remote commanders as in step 1 on p. 59, press the key on the supplied Remote Commander corresponding to the equipment of the other remote commander. Then follow steps 3 and 4 on p. 59 to perform learning.

For accurate learning

- Do not move the remote commanders during the learning process.
- Use as new batteries as possible in both remote commanders.
- The remote control detector area may differ depending on each remote commander. If learning is not completed, try changing the positions of the two remote commanders.

If you touch a key by mistake

While touching RESET, touch the mistaken key. Repeat from step 2 to continue learning.

If you do not perform learning within two minutes

Learning mode ends.
While pressing COMMANDER OFF, press the equipment button again to enter learning mode.

If [NG] appears during learning

The memory is full.
To free memory, clear the learned functions from keys that you do not use often. Then continue learning.

When using a double cassette deck

Press DECK B/A to display the keys for the deck that you want to use for learning.

When teaching the REC (record) signal to VTR 1/2/3

Touch REC and ► simultaneously; then perform Learning. You cannot learn on the REC key alone.

When teaching the REC (record) signal to DECK B/A, or DAT DECK

When you perform Learning, match the recording method of your equipment.

For DECK B/A, you can touch REC alone, or touch REC and ► or REC and ◀ simultaneously.

For DAT DECK, you can touch REC and ► simultaneously.

To turn off the LEARN blinking display

Touch the key that was learning again.

To change the function of a learned key

After positioning the two remote commanders as in step 1 on p. 59, while touching RESET touch the learned key (not blinking).

The key blinks, indicating that the function is cleared.
Repeat steps 2 – 4 on p. 59 to perform Learning.

To clear all the learned functions for one equipment

1 While pressing COMMANDER OFF, press the equipment button to enter learning mode.

2 While touching RESET, press the equipment button again.

A beep sounds, indicating that all the learned functions for that equipment are cleared.

Note


The remote commander signals of certain equipment such as air-conditioners may not be learned.

Operating two of the same equipment — OPTION button


Follow these instructions to operate two of the same kind of equipment with the Remote Commander. Set the operating keys of the equipment to the OPTION button, and operate the second equipment with those keys, displayed by pressing OPTION.

Example: Connect and operate a second CD player (CDP).

Remote Commander (with CDP operating keys displayed)

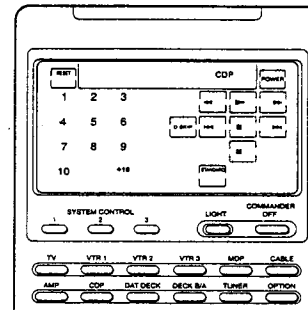

1 While pressing COMMANDER OFF, press OPTION.
The equipment name display blinks.



2 Press CDP.
The CDP operating keys blink and a beep sounds, indicating that the operating keys are set. You are also in learning mode; to perform learning, follow steps 2 – 4 on p. 59).



3 Press COMMANDER OFF.
The setting is complete.



To enter a new setting
Repeat steps 2 and 3.

To change the setting

1 While pressing COMMANDER OFF, press OPTION.
The operating keys blink, indicating that you are in learning mode.

2 While touching RESET, press OPTION.

3 While touching RESET, press OPTION again.
A beep sounds, the keys disappear and the equipment name display blinks, indicating that you are in equipment selection mode.

Executing a series of commands — SYSTEM CONTROL buttons

The SYSTEM CONTROL buttons are preset with the following commands:

SYSTEM CONTROL 1: All systems power on.

SYSTEM CONTROL 2: No setting


SYSTEM CONTROL 3: All systems power off.

Follow these instructions to apply a series of operating commands, and execute the commands simply by pressing one button.

Example: Connect a VCR to the the VIDEO 1 IN jacks on the TV, and program SYSTEM CONTROL 1 to execute the following series of commands:


1. Turn on the power of the VCR (VTR 1).
2. Turn on the amplifier power and set the selector to VTR.
3. Turn on the TV and set the input mode to VTR 1.
4. Begin VCR playback.

Remote Commander

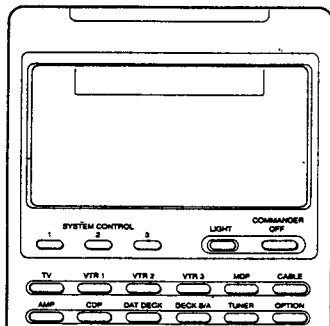


- 1 While pressing COMMANDER OFF, press SYSTEM CONTROL 1.

All the equipment names blink, indicating that you are in equipment selection mode.




If the original SYSTEM 1 command setting remains, while touching RESET press SYSTEM CONTROL 1 to reset the input and display the equipment names.


- 2 Press VTR 1, then touch POWER. When you press the equipment button the key display blinks, indicating that you are in operating key selection mode.



- 3 Press AMP, then touch POWER and VIDEO 1. The remote control signal for that function is sent, so you can confirm that the command is input.



- 4 Press TV, touch POWER, and touch TV/VIDEO to select VTR 1.



- 5 Press VTR 1, then touch ►.



- 6 Press COMMANDER OFF. The setting is complete.



To execute the commands

Press SYSTEM CONTROL 1.

The operating-keys appear as the commands are executed in order.


Notes

- If you interrupt the setting at any point for over two minutes, setting mode ends. Reset the SYSTEM CONTROL button (see p. 63) and begin again from step 1. You cannot continue from where you left off.
- When there are many steps, or if the equipments' remote control detectors are too far apart, some commands may not be executed. If this happens, adjust the Remote Commander or equipment position. If you do not correct the position or if objects block the space between the Remote Commander and the equipment, a mistaken command may be executed.


Changing the SYSTEM CONTROL commands

Follow these instructions to change the commands input to a SYSTEM CONTROL button.


Remote Commander

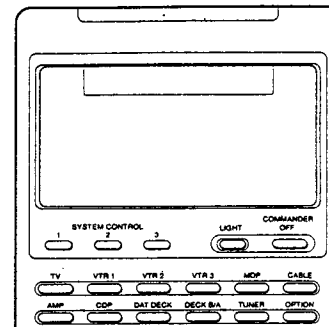

- 1 While pressing COMMANDER OFF, press the SYSTEM CONTROL button (1/2/3) you want to clear. The command operating keys appear in order.



- 2 While touching RESET, press the SYSTEM CONTROL button (1/2/3) you want to clear. The commands are cleared, and you are in equipment selection mode.



To enter new commands, Repeat steps 2 – 4 on p. 62.

Convenient uses for SYSTEM CONTROL

The SYSTEM CONTROL buttons operate independently from the other Remote Commander functions. By making use of the unique characteristics of these buttons, you can for instance:

- Input an often-used command, such as TV power on/off, so that you can execute this command regardless of the current equipment operating mode.
- When the series of input commands is executed, the Remote Commander remains set to the equipment operating mode of the final step. By making an often-used equipment's command the final step, you can then use the displayed keys to operate the equipment.

Note

Some equipment cannot be turned off using SYSTEM CONTROL.

Restoring the original SYSTEM CONTROL functions

Follow these instructions to clear the input commands and restore the original preset functions to SYSTEM CONTROL 1 or 3.


Example: Restore the power off function to SYSTEM CONTROL 3.

- 1 While pressing COMMANDER OFF, press SYSTEM CONTROL 3.


The memorized commands' operating keys appear in order.



- 2 While touching RESET (same as J key), press SYSTEM CONTROL 3.
- The memorized commands are cleared, and equipment selection mode begins.



- 3 While touching RESET (same as J key), press SYSTEM CONTROL 3 again. The original Sony AV system power off function is restored, and the keys appear in order.




Selecting a VCR mode directly — DIRECT PLAY


Follow these instructions to switch from TV to your connected VCR mode by simply touching the ► (playback) operating key of the VTR (1/2/3) mode that you choose.

Example: Connect your VCR to the VIDEO 2 IN jacks, and press VTR 2 to display the VTR 2 operating keys. When you touch ►, the input mode changes to the VCR connected to the VIDEO 2 IN jacks.

Remote Commander LCD touch key display
(Press the TV button to display the TV operating keys.)

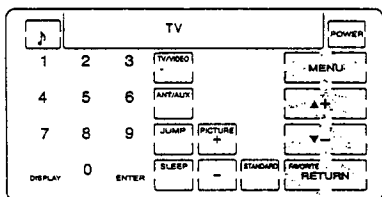


1 Touch MENU.
The main menu appears.

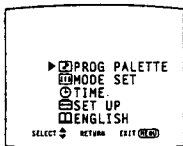


2 Touch ▲+▼— until the cursor points to "SET UP."

3 Touch RETURN.
The set up menu appears.

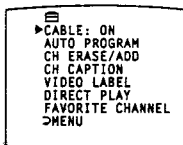

4 Touch ▲+▼— until the cursor points to "DIRECT PLAY."

5 Touch RETURN.
A message screen appears.

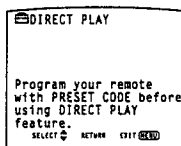

Note
This screen reminds you to set the manufacturer's code, if you have not already done so (pp. 57 – 58).

6 Touch RETURN again.
The DIRECT PLAY screen appears.



7 Touch ▲+▼— until the cursor points to the video input mode. (When the video equipment is connected to VIDEO 2 IN, select "VIDEO2.")

8 Touch RETURN.
The mode display turns red.

9 Touch ▲+▼— to select the VTR mode you want to use. (To use VTR 2 mode, select "VTR 2.")
Each time you touch ▲+▼—, "VTR 1," "VTR 2," "VTR 3," "MDP" and "OFF" appear in sequence.



10 Touch RETURN.
The direct play setting is complete.

To set direct play for other connected video equipment
Repeat steps 7 – 10.













To return to the previous menu
Touch ▲+▼— until the cursor points to " > MENU." Then touch RETURN.

To return to the main menu
Repeat the above, until you reach the main menu.

To return to the normal screen.
Touch MENU.

1-13. LCD KEY DISPLAY QUICK REFERENCE

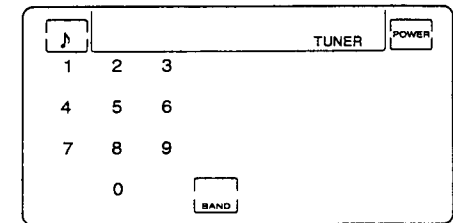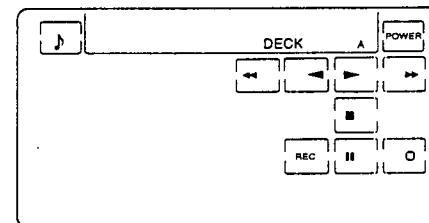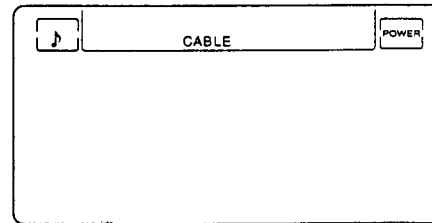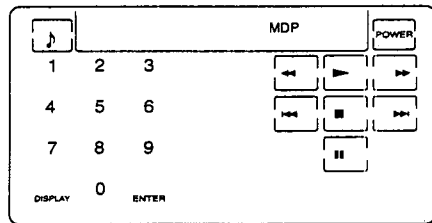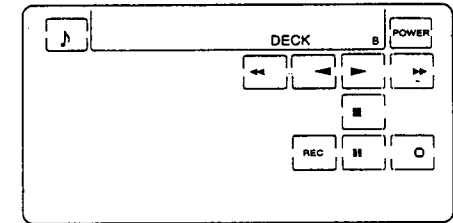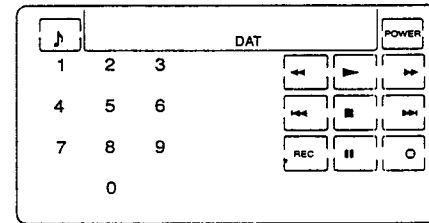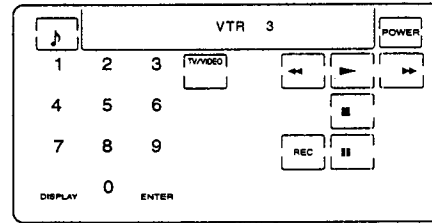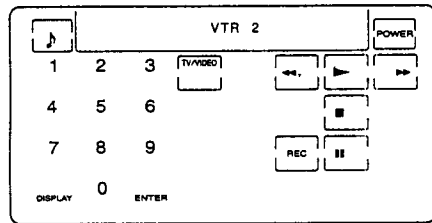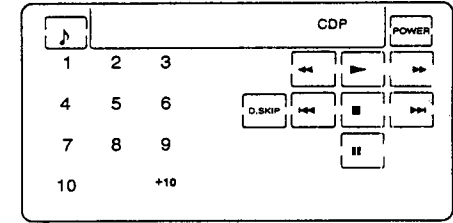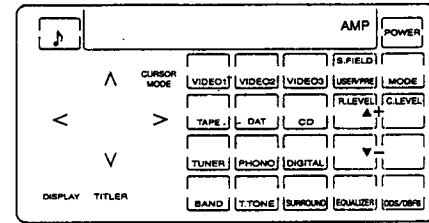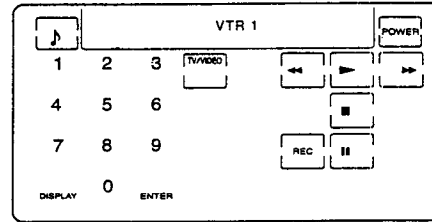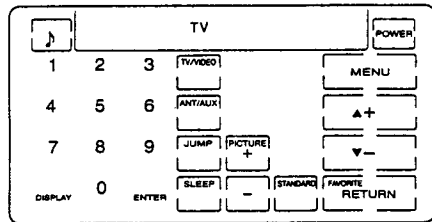

The following quick reference shows the operating keys that appear in the Remote Commander's LCD touch display area, when you press the corresponding operating mode selection button.



Note
When you press the CABLE button, no display appears until you set the pre-programmed cable box manufacturer code (pp. 57 – 58).


1-14. TROUBLESHOOTING

Disturbances in picture and sound can often be eliminated by checking the symptoms and following the suggestions listed here. If the problem still cannot be solved, contact your nearest service facility.


Symptom	Possible causes and remedies
No picture (screen not lit), no sound	<ul style="list-style-type: none"> • Make sure POWER is switched on. • Check the power cord connection. • Check that the input mode is set correctly.
Poor or no picture (screen not lit), good sound	<ul style="list-style-type: none"> • Adjust the picture using the VIDEO screen (pp. 38 – 41). • Check the antenna/cable connections.
Good picture, no sound	<ul style="list-style-type: none"> • Make sure an audio system is connected correctly. • Press VOLUME + on the TV or AMP VOLUME + on the Remote Commander. • Press MUTING on the Remote Commander. • Check the MTS setting (pp. 34 – 35). • Check that the input mode is set correctly.
No color for color programs	<ul style="list-style-type: none"> • Check the HUE and COLOR settings (pp. 38 – 39).
Snow and noise only	<ul style="list-style-type: none"> • Check that it is an active or correct channel. • Check the cable setting. • Check the ANT/AUX key setting. • Check antenna/cable connections.
 Dotted lines or stripes	This is often caused by local interference (for example, cars, neon signs and hairdryers). Adjust the telescopic aerial for minimum interference.
 Double images or ghosts	Reflections from nearby mountains or buildings often cause this problem. Connecting a highly directional outdoor antenna or a CATV cable may improve the picture.
Try another channel. It could be station trouble.	

SECTION 2 DISASSEMBLY


2-1. REAR COVER REMOVAL

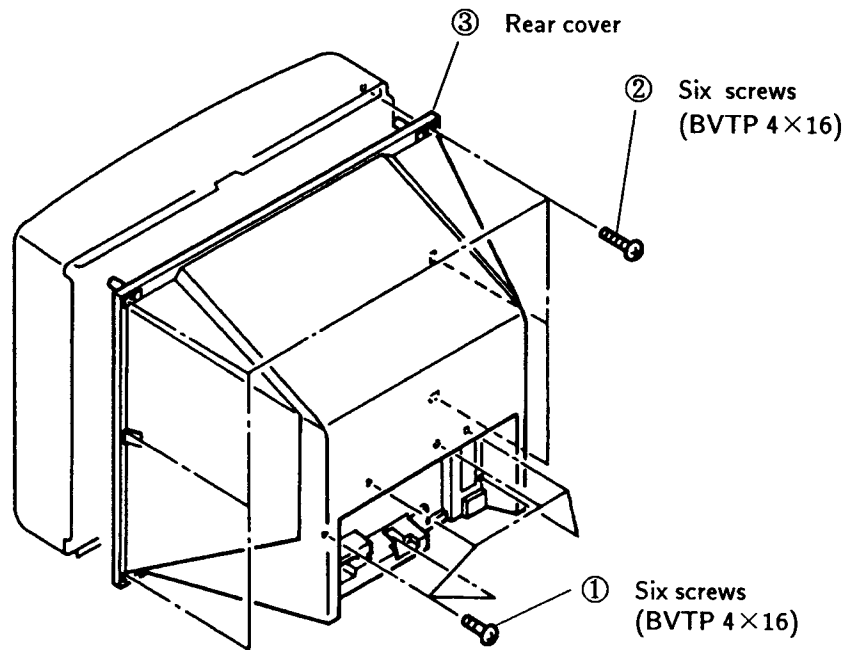


2-2. CHASSIS ASSY AND FRONT BLOCK ASSY REMOVAL

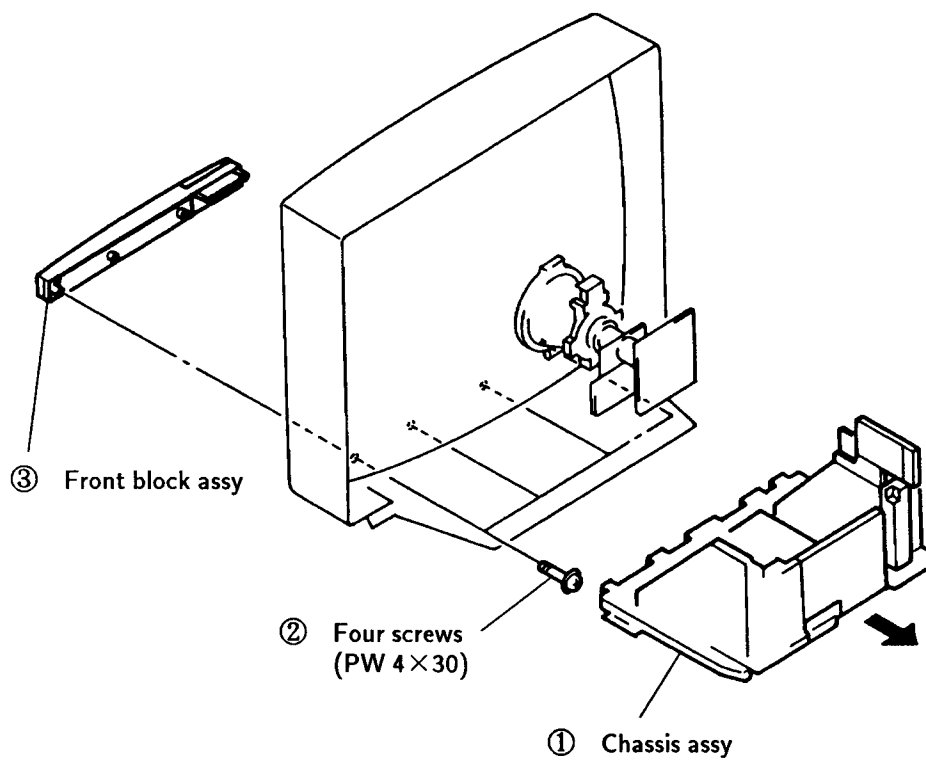


2-3. K BOARD AND ANTENNA TERMINAL BOARD REMOVAL

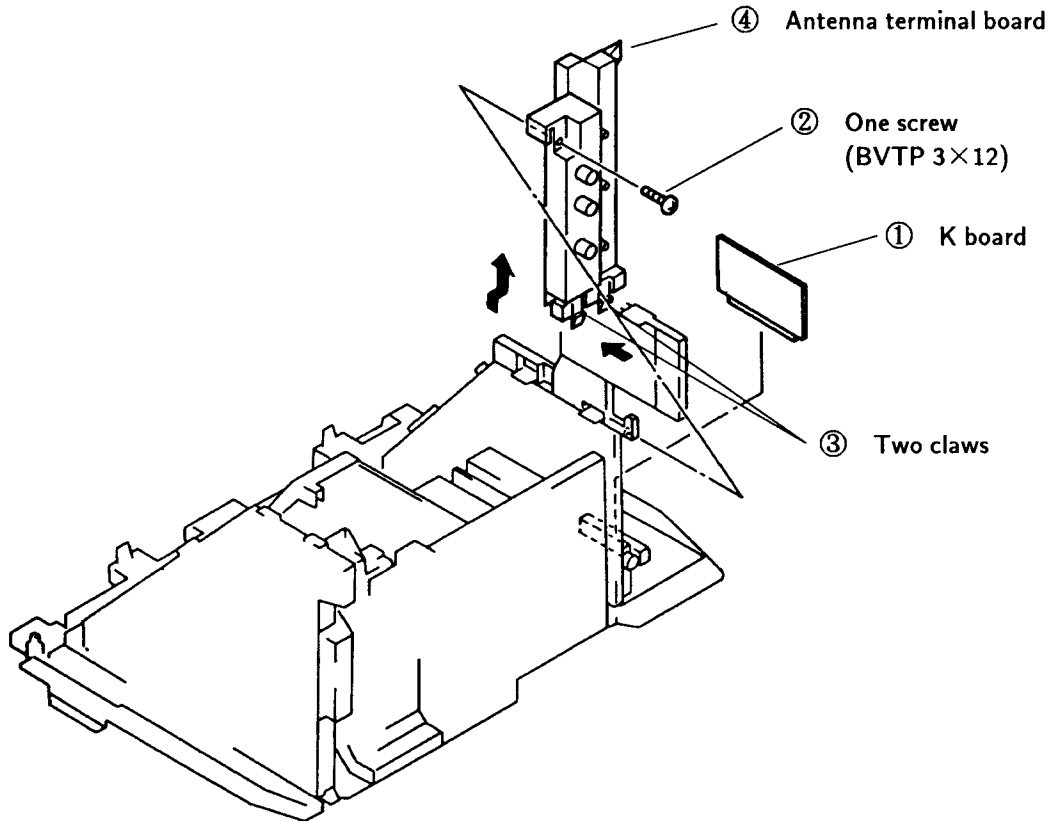


2-4. UT BRACKET REMOVAL

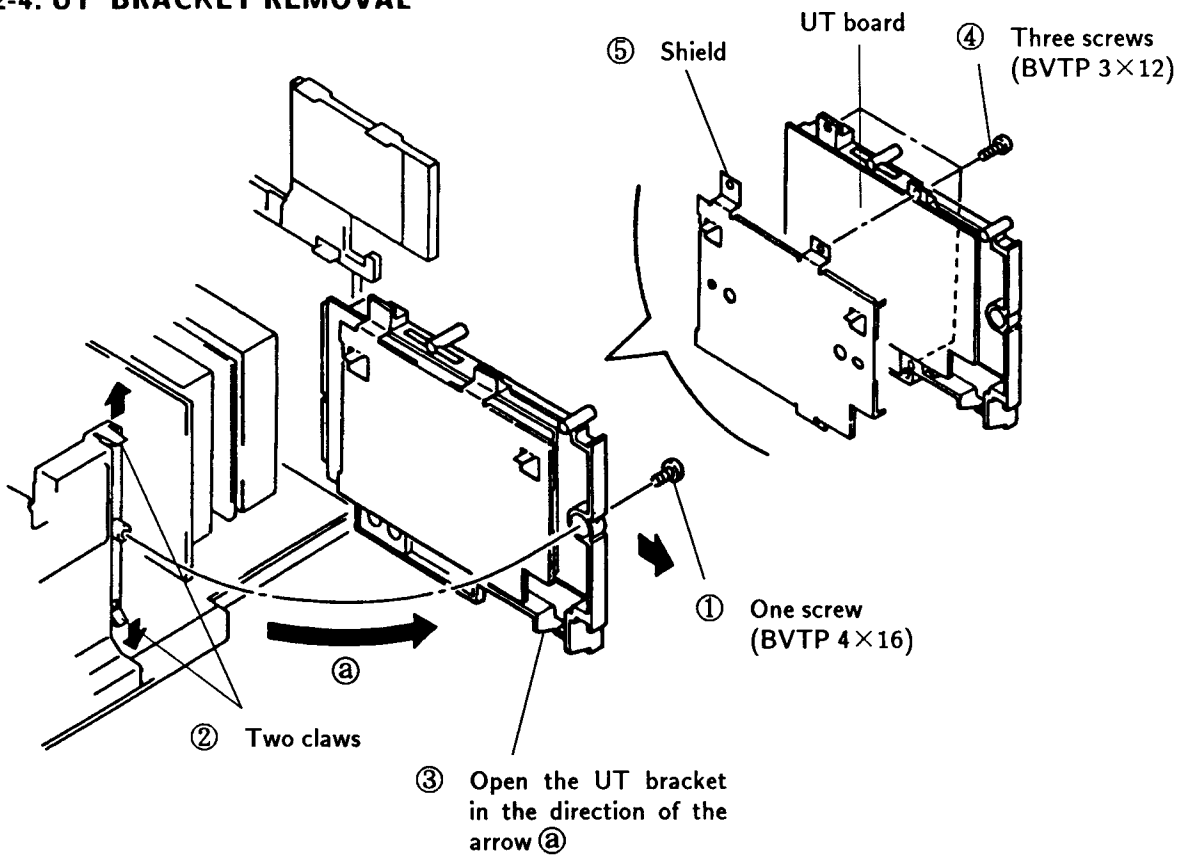


2-5. G BRACKET REMOVAL

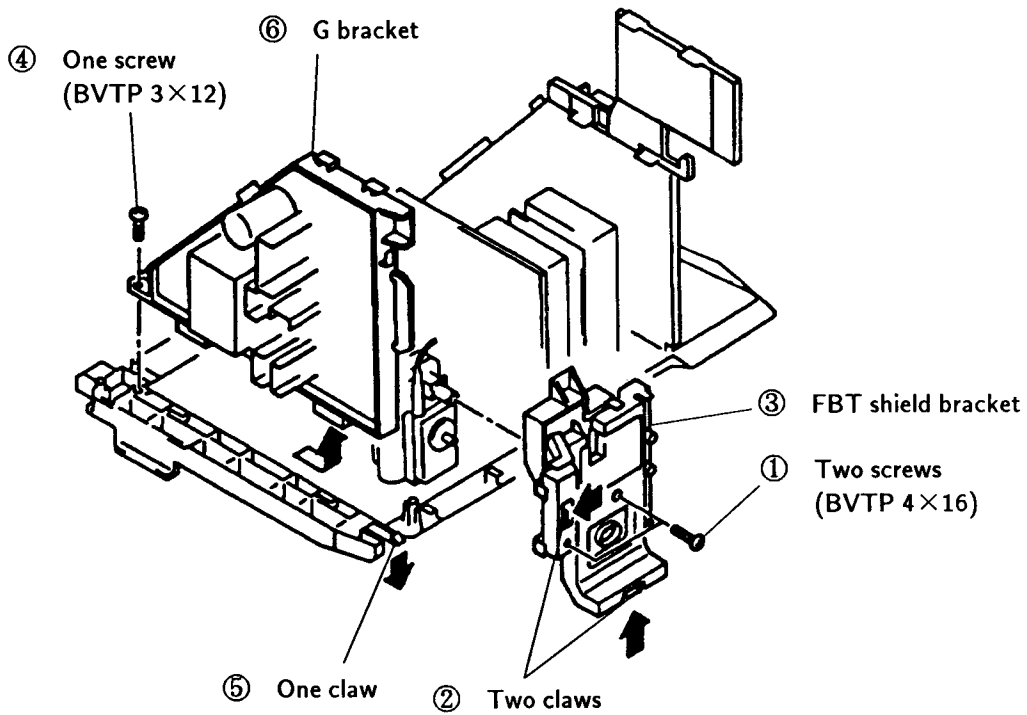


2-6. D AND VC BOARDS REMOVAL

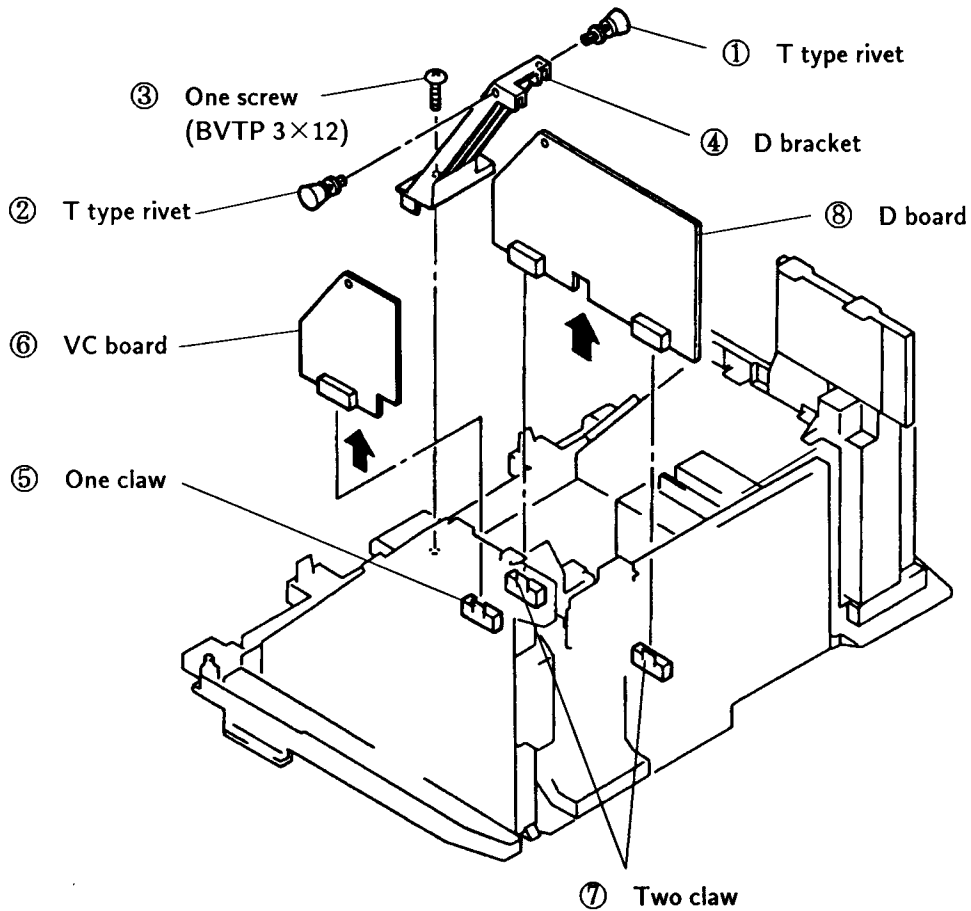

2-7. U BRACKET REMOVAL

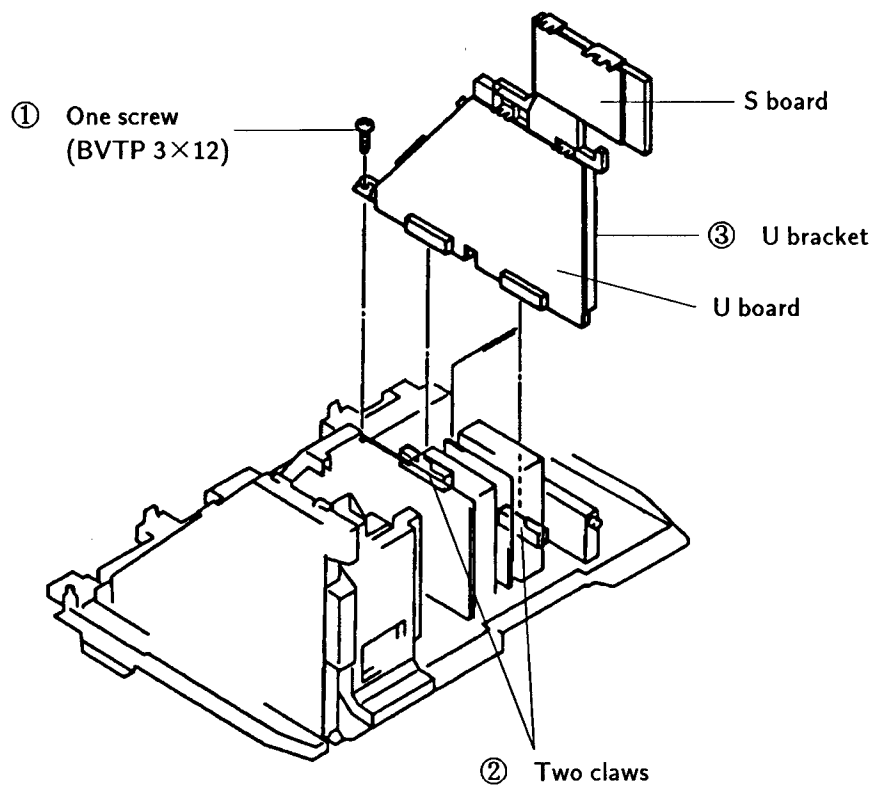


2-8. CONNECTOR CABLE

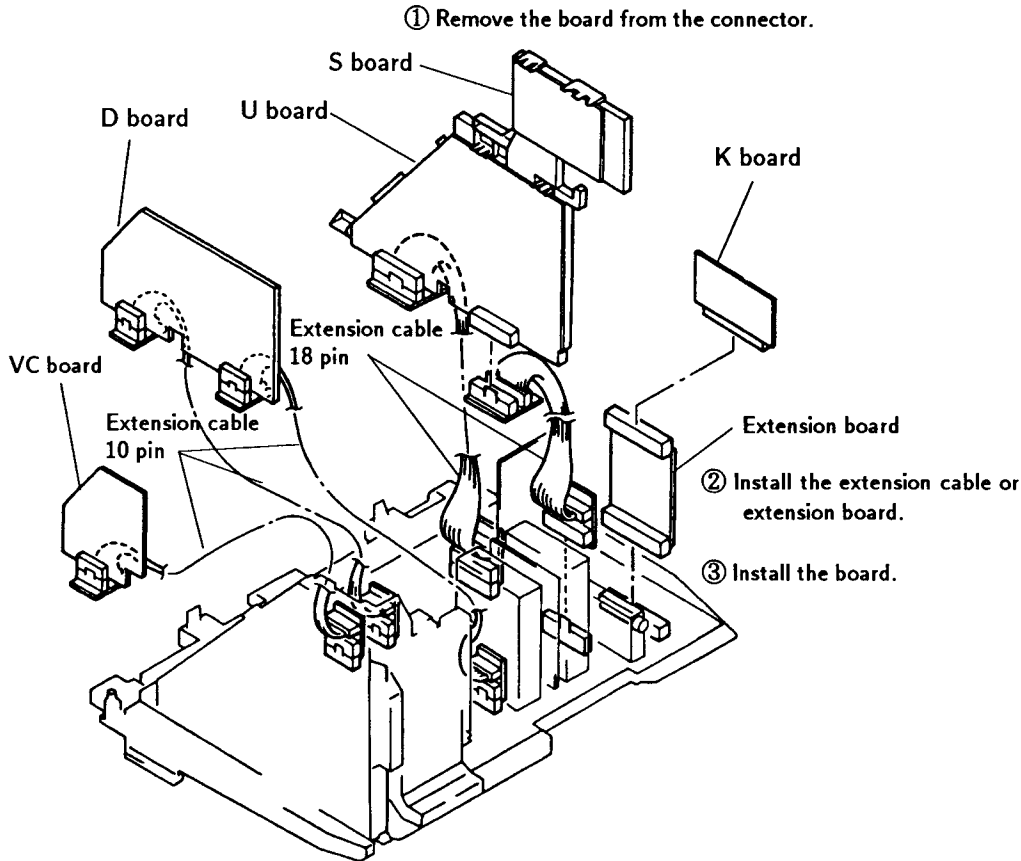


Exterior	
Extension cable	
	4 pin
1-941-891-33	
	6 pin
1-941-891-31	
	7 pin
1-941-891-32	
	18 pin
3-702-558-01	
	10 pin
3-702-557-01	
3-702-561-01	
	36 pin connector
3-702-560-01	
	50 pin connector
3-702-559-01	
	Extension board


⑤ Use the extension cable when checking the E1 and E2 boards.

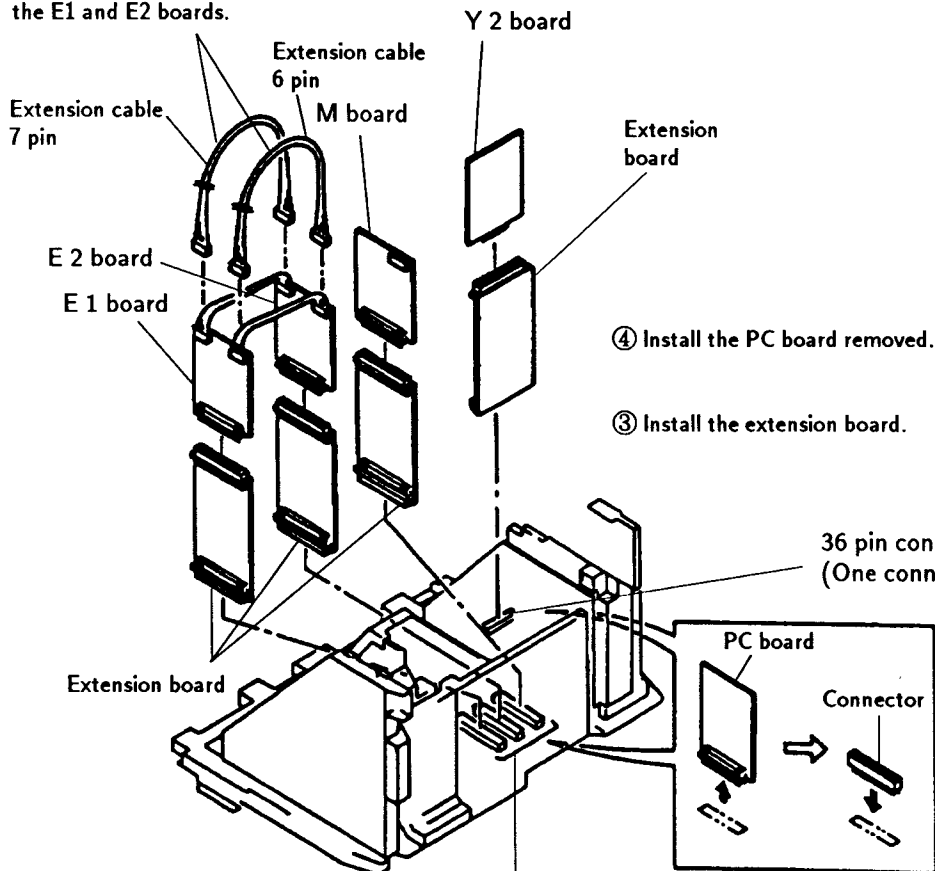


2-9. SERVICE POSITION

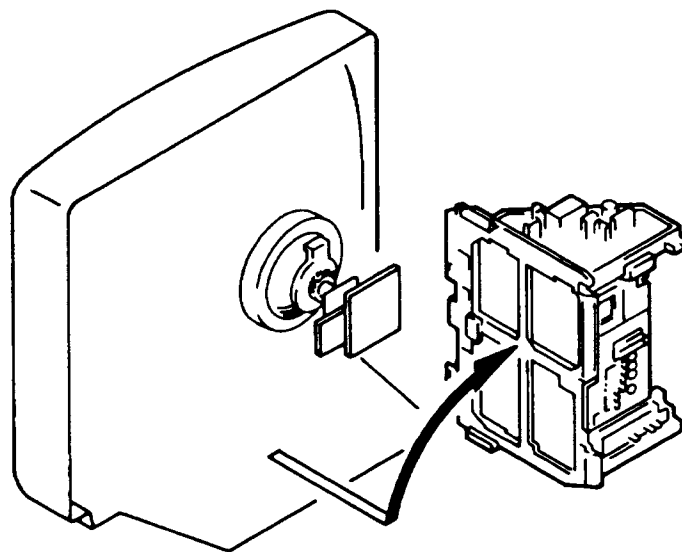

2-10. DEGAUSSING COIL REMOVAL

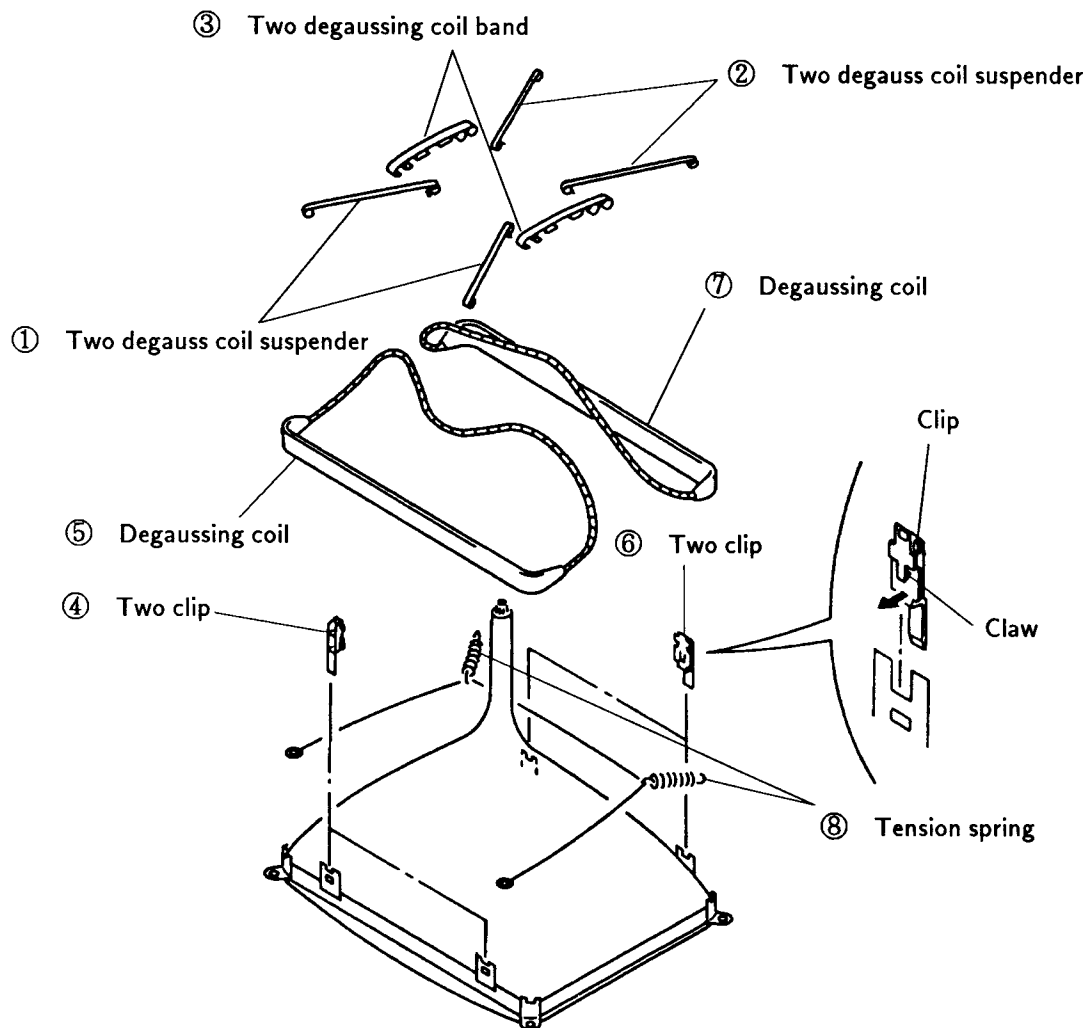


2-11. PICTURE TUBE REMOVAL

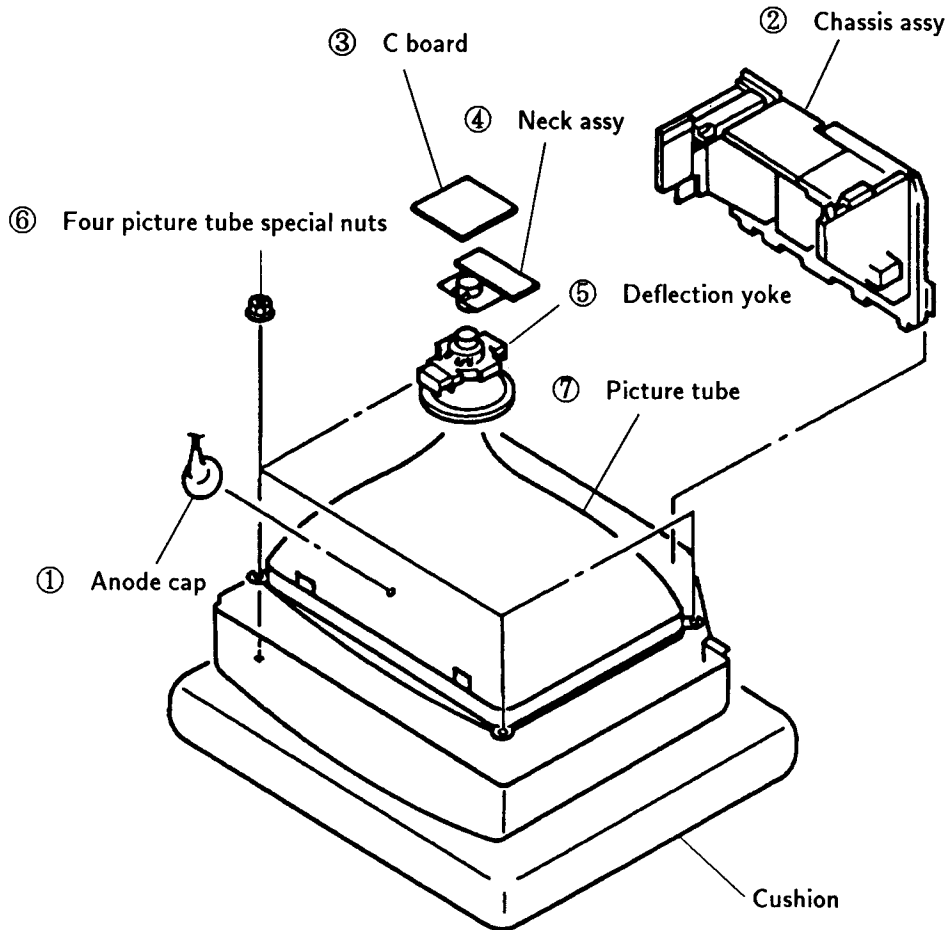

• REMOVAL OF ANODE-CAP

NOTE : Short circuit the anode of the picture tube and the anode cap to the metal chassis, CRT shield or carbon paint on the CRT, after removing the anode.

• REMOVING PROCEDURES

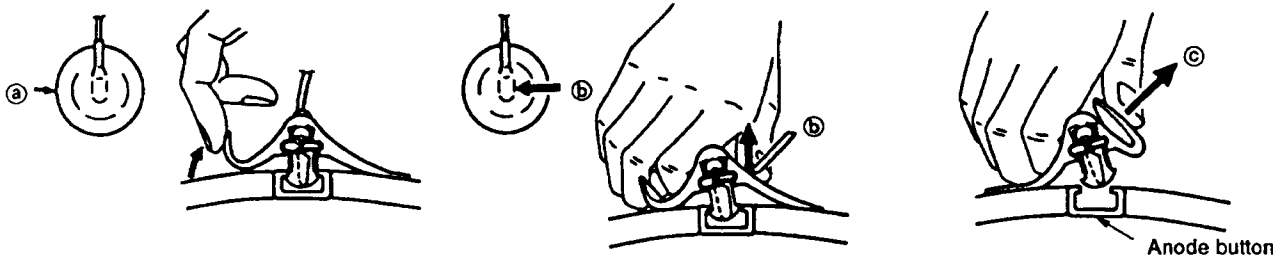



① Turn up one side of the rubber cap in the direction indicated by the arrow ②.

② Using a thumb pull up the rubber cap firmly in the direction indicated by the arrow ③.

③ When one side of the rubber cap is separated from the anode button, the anode-cap can be removed by turning up the rubber cap and pulling up it in the direction of the arrow ④.

• HOW TO HANDLE AN ANODE-CAP

- ① Don't hurt the surface of anode-caps with sharp shaped material!
- ② Don't press the rubber hardy not to hurt inside of anode-caps!
A material fitting called as shatter-hook terminal is built in the rubber.
- ③ Don't turn the foot of rubber over hardy!
The shatter-hook terminal will stick out or hurt the rubber.

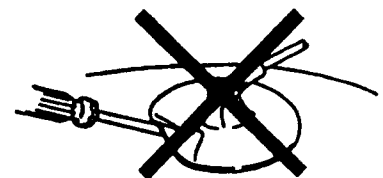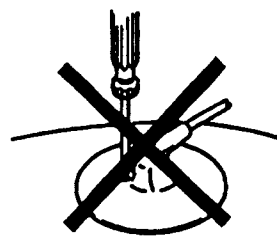

2-12. REPAIR OF CHIP COMPONENT CIRCUIT BOARD

2-12-1. POINTS OF COMPONENT REMOVAL

Handing of blower type soldering iron

If hot blast is too strong or applied from a slanting direction, small components and solder near the component being removed can be blown off. Do not use blower type without temperature control.

2-12-2. NOTES ON SOLDERING FOR CHIP COMPONENTS

- 1) During soldering a chip component, if a soldering iron is applied for a long time, the heat may damage the component or cause pattern peeling.
- 2) Do not reuse a removed component. The characteristics of such a component may deteriorate.
- 3) Use wire solder containing silver ($\phi 0.3$ or $\phi 0.6$). (The pin electrodes of the laminated chip capacitor are silver +palladium, so if wire solder which does not contain silver is used, the silver of the pin electrode will be sucked into the solder.)

2-12-3. REMOVAL AND MOUNTING OF COMPONENTS


Chip resistor and chip capacitor

REMOVAL


- Using two soldering irons
- 1) Mounted state



- 2) Melt the solder.

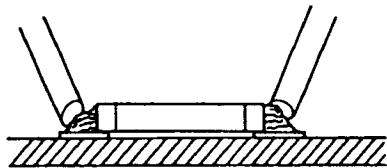


- 3) Remove the component.

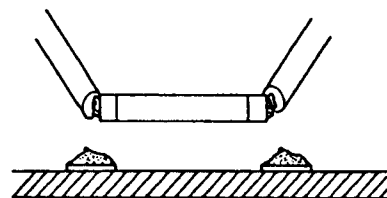


SOLDERING

- 1) Preparation

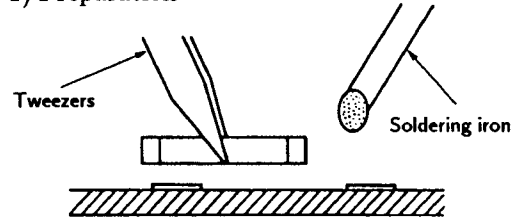


- 2) Location

Be careful not to misposition.

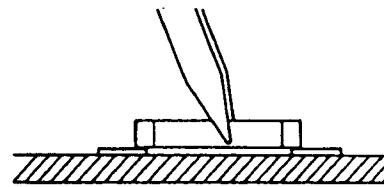


- 3) Tack soldering and flux application

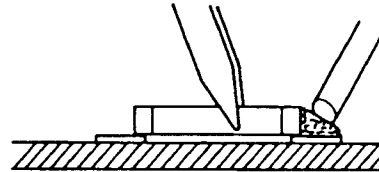


- 4) Soldering

Apply the soldering iron to the chip component and land to heat them and apply solder.

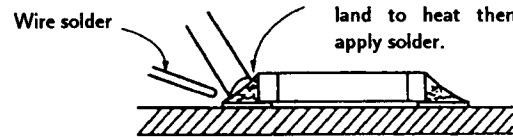

- 5) Soldering (Fix the fillet.)

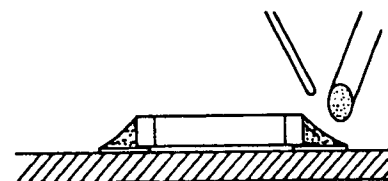

- 6) Visual inspection

Check for the following defects :


- No-soldered part
- Bridge (to other components or lands)
- Mispositioning
- Other defects

2-12-4. MINI-TRANSISTOR


REMOVAL

- Using two soldering irons

1) Put a little solder on the tip of two soldering irons.

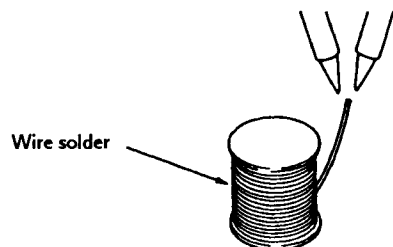


2) Apply the tip of one soldering iron to the point "a" and the other to the points "b" → "c" (or "b" → "d" → "c") and move the component in the directions indicated by arrows in the figure to remove it.

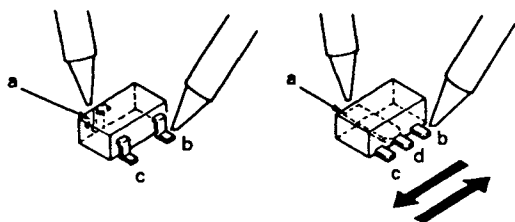


MOUNTING


1) Apply a little flux to the land with a brush.

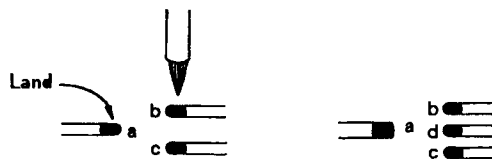


2) Place the component in position using tweezers.

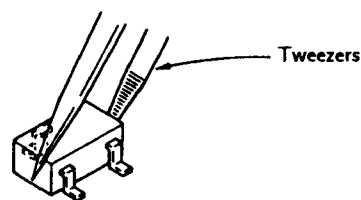

3) Put a little solder on the tip of the soldering iron and solder the point "a" to fix the component.

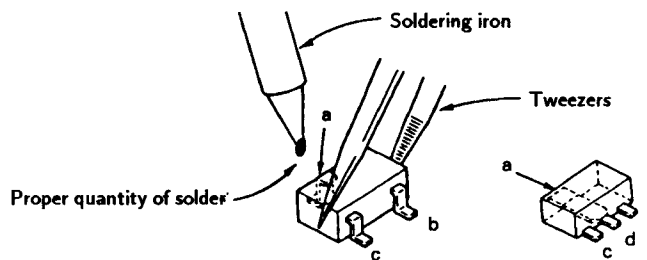

4) Bring the tip of the soldering iron and the wire solder close to the point to be soldered. Solder the points "b" → "c" (or "b" → "d" → "c") in order.

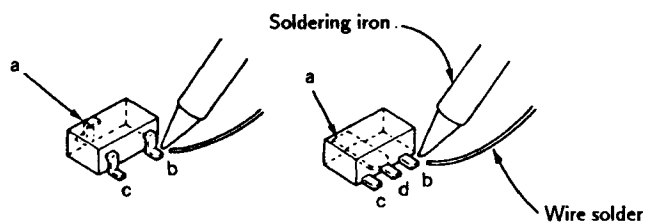

G



Les composants identifiés par une
trame et une marque Δ sont
critiques pour la sécurité.
Ne les remplacer que par une pièce
portant le numéro spécifié.

The components identified by
shading and mark Δ are critical
for safety.
Replace only with part number
specified.

REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
C612	1-164-625-11	CERAMIC	680PF 10% 500V	D672	8-719-911-19	DIODE 1SS119	
C613	1-164-625-11	CERAMIC	680PF 10% 500V			<FUSE>	
C614	1-164-625-11	CERAMIC	680PF 10% 500V	F1 Δ	1-532-783-21	FUSE, MICRO (SECONDARY) 5A/125V	
C615	1-164-625-11	CERAMIC	680PF 10% 500V	F601 Δ	1-576-222-11	FUSE 6.3A/125V	
C616	1-124-443-00	ELECT	100MF 20% 10V		1-533-190-11	CLIP, FUSE; F601	
C618	1-164-735-11	CAP. CERAMIC	1500PF	F602 Δ	1-576-107-22	FUSE 3.15A/250V	
C619	1-164-735-11	CAP. CERAMIC	1500PF		1-533-223-11	CLIP, FUSE; F602	
C620 Δ	1-161-741-51	CERAMIC	0.001MF 10% 400V			<FERRITE BEAD>	
C621 Δ	1-161-741-51	CERAMIC	0.001MF 10% 400V	FB651	1-410-397-21	FERRITE BEAD INDUCTOR	
C622	1-162-599-12	CERAMIC	0.0047MF 20% 400V	FB652	1-410-397-21	FERRITE BEAD INDUCTOR	
C623	1-137-493-11	FILM	0.0047MF 5% 630V	FB653	1-410-397-21	FERRITE BEAD INDUCTOR	
C624	1-126-301-11	ELECT	1MF 20% 50V	FB654	1-410-397-21	FERRITE BEAD INDUCTOR	
C625	1-126-162-11	ELECT	3.3MF 20% 50V	FB655	1-412-911-11	INDUCTOR, FERRITE BEAD	
C626	1-130-480-00	MYLAR	0.0056MF 5% 50V	FB656	1-410-397-21	FERRITE BEAD INDUCTOR	
C651	1-124-960-11	ELECT	470MF 20% 180V	FB659	1-412-911-11	INDUCTOR, FERRITE BEAD	
C652	1-124-556-11	ELECT	2200MF 20% 16V	FB669	1-410-397-21	FERRITE BEAD INDUCTOR	
C653	1-124-913-11	ELECT	470MF 20% 50V	FB670	1-410-397-21	FERRITE BEAD INDUCTOR	
C655	1-162-117-00	CERAMIC	100PF 10% 500V			<CONNECTOR>	
C656	1-124-119-00	ELECT	330MF 20% 16V	G3	*1-573-986-11	PIN, CONNECTOR (PC BOARD) 5P	
C657	1-106-351-00	MYLAR	0.0022MF 200V	G4	*1-564-510-11	PLUG, CONNECTOR 7P	
C658	1-126-157-11	ELECT	10MF 20% 16V	G27	*1-573-963-11	PIN, CONNECTOR (PC BOARD) 3P	
C659	1-130-485-00	MYLAR	0.015MF 5% 50V	G28	*1-573-963-11	PIN, CONNECTOR (PC BOARD) 3P	
C661	1-124-484-11	ELECT	220MF 20% 35V	G29	*1-508-786-00	PIN, CONNECTOR (5MM PITCH) 2P	
C662	1-124-484-11	ELECT	220MF 20% 35V	G31	*1-580-843-11	PIN, CONNECTOR (POWER)	
C663	1-126-104-11	ELECT	470MF 20% 35V	G34	*1-508-784-00	PIN, CONNECTOR (5MM PITCH) 1P	
C666	1-126-101-11	ELECT	100MF 20% 16V	TP651	*1-508-784-00	PIN, CONNECTOR (5MM PITCH) 1P	
C667	1-124-443-00	ELECT	100MF 20% 10V			<IC>	
C668	1-124-638-11	ELECT	22MF 20% 6.3V	IC651 Δ	1-809-524-11	MODULE, POWER DM-44	
C669	1-162-318-11	CERAMIC	0.001MF 10% 500V	IC654	8-719-156-73	PHOTO COUPLER PS2501 1LB	
C670	1-162-318-11	CERAMIC	0.001MF 10% 500V			<COIL>	
C672	1-124-484-11	ELECT	220MF 20% 35V	L651	1-412-526-11	INDUCTOR 12UH	
C677 Δ	1-136-311-51	FILM	0.47MF 20% 125V	L652	1-410-673-31	INDUCTOR 68UH	
C678	1-124-360-00	ELECT	1000MF 20% 16V	L653	1-412-532-11	INDUCTOR 39UH	
		<DIODE>		L654	1-412-532-11	INDUCTOR 39UH	
D601 Δ	8-719-022-99	DIODE D6SB60L		L655	1-412-532-11	INDUCTOR 39UH	
D602	8-719-510-48	DIODE D1N20R		L656	1-412-526-11	INDUCTOR 12UH	
D603	8-719-510-48	DIODE D1N20R				<TRANSISTOR>	
D604	8-719-510-48	DIODE D1N20R		Q601	8-729-927-23	TRANSISTOR 2SC4664NPR-F	
D605	8-719-510-48	DIODE D1N20R		Q602	8-729-927-23	TRANSISTOR 2SC4664NPR-F	
D606	8-719-911-19	DIODE 1SS119		Q603	8-729-927-23	TRANSISTOR 2SC4664NPR-F	
D607	8-719-510-48	DIODE D1N20R		Q604	8-729-927-23	TRANSISTOR 2SC4664NPR-F	
D608	8-719-510-48	DIODE D1N20R		Q605	8-729-209-15	TRANSISTOR 2SD2012	
D609	8-719-510-48	DIODE D1N20R		Q652	8-729-119-78	TRANSISTOR 2SC2785-HFE	
D610	8-719-510-48	DIODE D1N20R		Q653	8-729-201-53	TRANSISTOR 2SA1015-GR	
D611	8-719-510-48	DIODE D1N20R		Q654	8-729-119-78	TRANSISTOR 2SC2785-HFE	
D612	8-719-510-48	DIODE D1N20R		Q655	8-729-119-78	TRANSISTOR 2SC2785-HFE	
D613	8-719-109-93	DIODE RD6.2ES-B2		Q656	8-729-119-78	TRANSISTOR 2SC2785-HFE	
D651	8-719-027-43	DIODE S2L20UF				<RESISTOR>	
D652	8-719-027-43	DIODE S2L20UF		R601	1-249-388-11	CARBON 3.9 5% 1/4W F	
D653	8-719-027-43	DIODE S2L20UF		R602 Δ	1-205-707-12	WIREWOUND 2.2 5% 10W F	
D654	8-719-027-43	DIODE S2L20UF		R603	1-247-889-00	CARBON 270K 5% 1/4W	
D655	8-719-510-13	DIODE D10SC4MR					
D656	8-719-022-97	DIODE D2S4MF					
D657	8-719-510-02	DIODE D1NS4					
D663	8-719-510-02	DIODE D1NS4					
D665	8-719-510-02	DIODE D1NS4					
D666	8-719-109-85	DIODE RD5.1ES-B2					
D667	8-719-911-19	DIODE 1SS119					
D668	8-719-911-19	DIODE 1SS119					
D669	8-719-109-54	DIODE RD2.2ES-B2					
D670	8-719-911-19	DIODE 1SS119					
D671	8-719-110-31	DIODE RD12ES-B2					


2-12-6. FOUR-DIRECTIONAL FLAT PACKAGE IC

MOUNT CONDITION

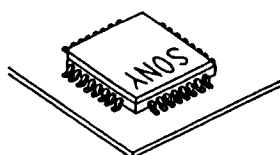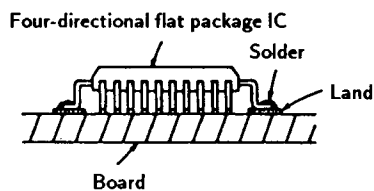


REMOVAL

- 1) Apply solder on the tip of the iron tip jig.

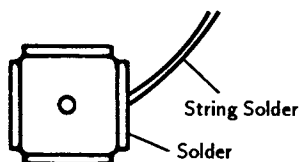

- 2) Place the iron tip jig over the IC, wait about two to three seconds, rotate the iron slightly and lift it up.

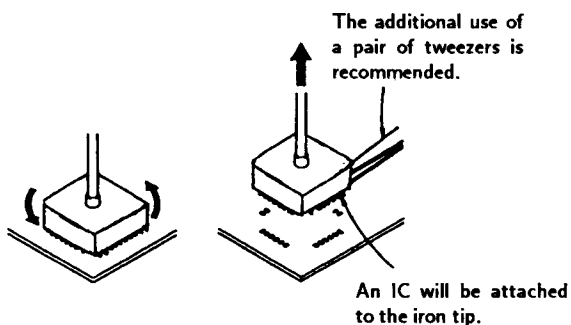


Note: For flat ICs of above 52 P, the IC may not be completely attracted when the iron tip jig is lifted up. In these cases, use a pair of tweezers to remove.

INSTALLATION


- 1) Place the four-directional flat package IC at the appointed position.




- 2) Apply a slight amount of solder on the iron tip, and solder the three sections in the order of a → b → c, and fix.

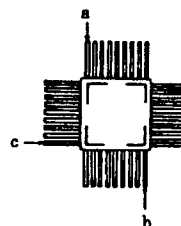


- 3) Apply a slight amount of flux with a pen on all four directions.

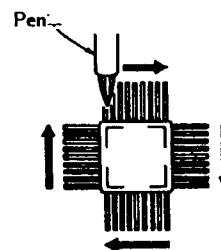

- 4) Apply solder on the iron tip and the string solder, and slide and solder in the directions of the arrows.

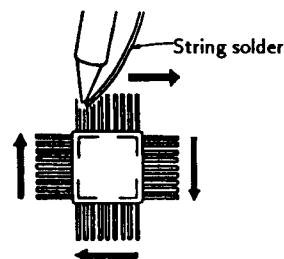

Note: 1) After soldering, if there are bridged sections, correct by sliding the soldering iron in the direction of the arrow.

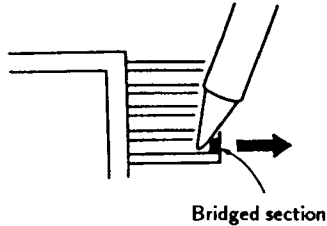

Bridged section

If the bridges cannot be corrected using the above method, apply some flux with a pen and try again.

2) Soldering can be carried out more easily by sliding the iron tip near the tip of the IC leg. (Fig. A)

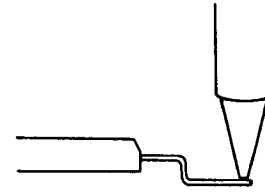


Fig. A

Be careful not to slide the bent sections of the leg as shown in Fig. B as soldering bridges will be formed.

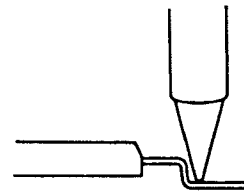


Fig. B

Exterior	Description	Part No.	Measure (mm)			
			A	B	C	D
	jig for removing 4-sided flat package IC	3-702-554-01	12.5	9.5	12.5	9.5
		" 11	15.5	12.5	15.5	12.5
		" 21	16.3	13.3	16.3	13.3
		" 31	17.0	14.0	17.0	14.0
		" 41	23.0	20.0	17.0	14.0
		" 51	20.0	17.0	20.0	17.0
	jig for removing 2-sided flat package IC	3-702-555-01	6.0	5.0	/	
		" 11	6.0	10.0		
		" 21	7.0	12.5		
		" 31	9.0	15.2		
		" 41	9.0	18.0		
	soldering iron	3-702-552-01	55 W 60 g length 210 mm			
	soldering holder	3-702-553-01	/			

SECTION 3 SET-UP ADJUSTMENTS

- The following adjustments should be made when a complete realignment is required or a new picture tube is installed.
- These adjustments should be performed with rated power supply voltage unless otherwise noted.

Controls and switch should be set as follows unless otherwise noted :

PICTURE control RESET
BRIGHTNESS control center

Perform the adjustments in order as follows :

1. Beam Landing
2. Convergence
3. Focus
4. White Balance

Note : Test Equipment Required.

1. Color-bar/Pattern Generator
2. Degausser
3. Oscilloscope

Preparations :

- In order to reduce the influence of geomagnetism on the set's picture tube face it east or west.
- Switch on the set's power and degauss with the degausser.

3-1. BEAM LANDING

1. Input the white signal with the pattern generator.
 Contrast } normal
 Brightness }
2. Position neck ass'y as shown in Fig 3-2.
3. Set the pattern generator raster signal to red.
4. Move the deflection yoke to the rear and adjust with the purity control so that the red is at the center and the blue and the green take up equally sized areas on each side.
 (See Figures 3-1 through 3-3.)
5. Move the deflection yoke forward and adjust so that entire screen is red. (See Figure 3-1.)
6. Switch the raster signal to blue, then to green and verify the condition.
7. When the position of the deflection yoke has been decided, fasten the deflection yoke with the screws.
8. If the beam does not land correctly in all the corners, use a magnet to adjust it.
 (See Figure 3-4.)

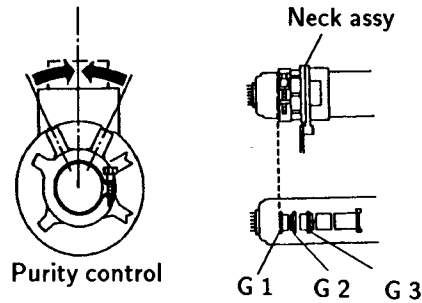


Fig.3-2

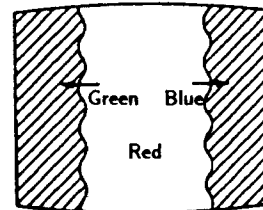


Fig.3-3

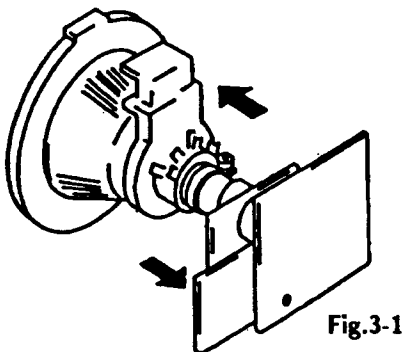


Fig.3-1

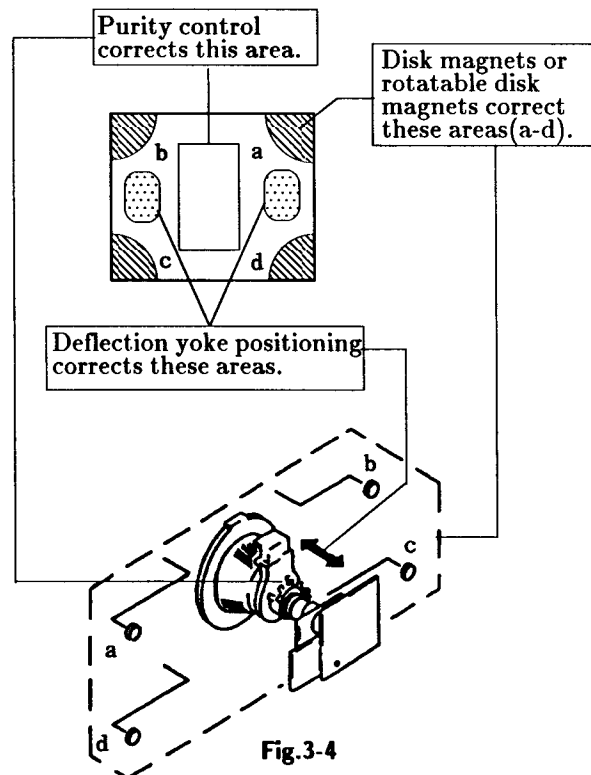



Fig.3-4

3-2. CONVERGENCE

Preparation :


- Before starting this adjustment, adjust the focus, horizontal size, and vertical size.
- Minimize the brightness setting.
- Provide dot pattern.

(1) **Horizontal and Vertical Static Convergence**

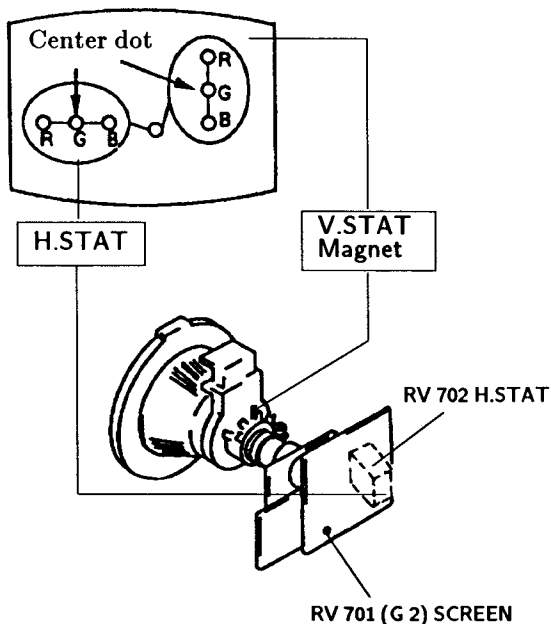


1. (Moving horizontally), adjust the H.STAT control so that the red, green, and blue points are on top of each other at the center of the screen.
2. (Moving vertically), adjust the V.STAT magnet so that the red, green, and blue points are on top of each other at the center of the screen.
3. If the H.STAT variable resistor cannot bring the red, green, and blue points together at the center of the screen, adjust the horizontal convergence with the H.STAT variable resistor and the V. STAT magnet in the manner given below.
(In this case, the H.STAT variable resistor and the V. STAT magnet influence each other)



- Tilt the V.STAT magnet and adjust the static convergence by opening or closing the V.STAT magnet.

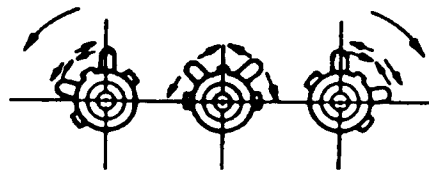

4. If the V.STAT magnet is moved in the direction of the (a) and (b) arrows, the red, green, and blue points move as shown below.

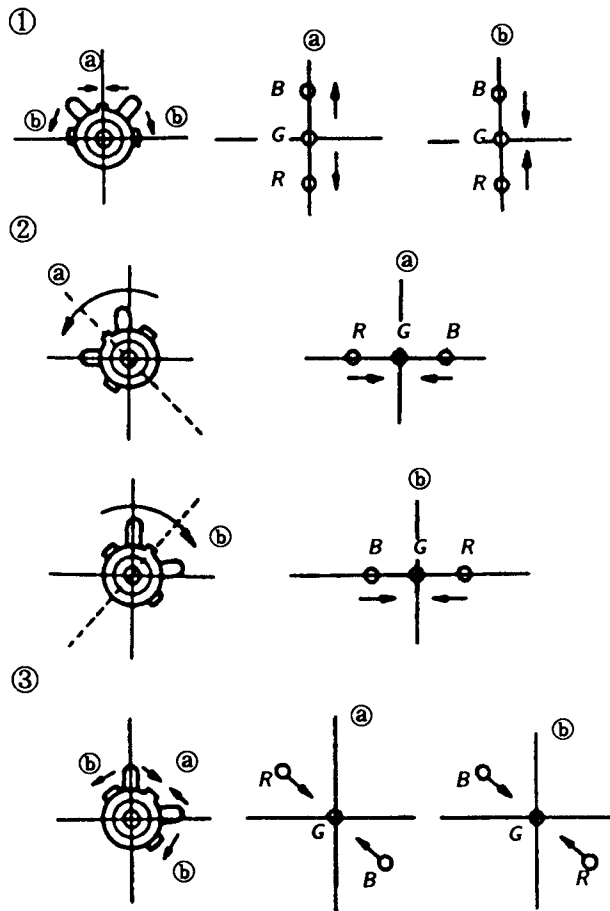

● Operation of BMC (Hexapole) Magnet

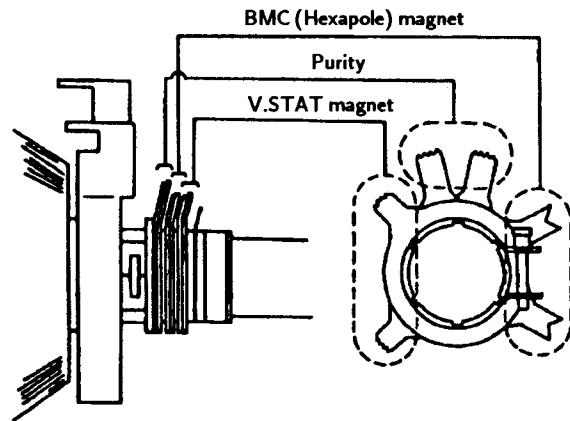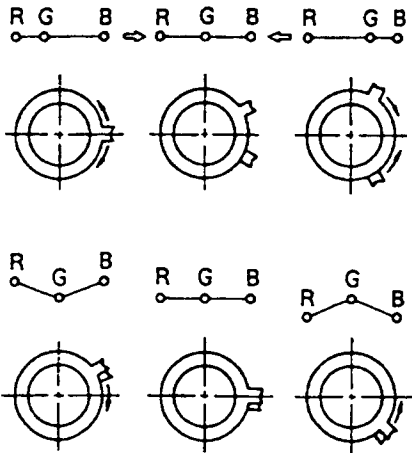


- The respective dot positions resulting from moving each magnet interact, so be sure to perform adjustment while tracking. Use the H.STAT VR to adjust the red, green, and blue dots so they coincide at the center of screen (by moving the dots in the horizontal direction).

(2) Dynamic Convergence Adjustment

Preparations :

- Before starting this adjustment, adjust the horizontal static convergence and the vertical static convergence.
1. Slightly loosen the deflection yoke screws.
 2. Remove the deflection yoke spacer.
 3. Move the deflection yoke as shown in the figure below and optimize the convergence.
 4. Tighten the deflection yoke screws.
 5. Install the deflection yoke spacer.

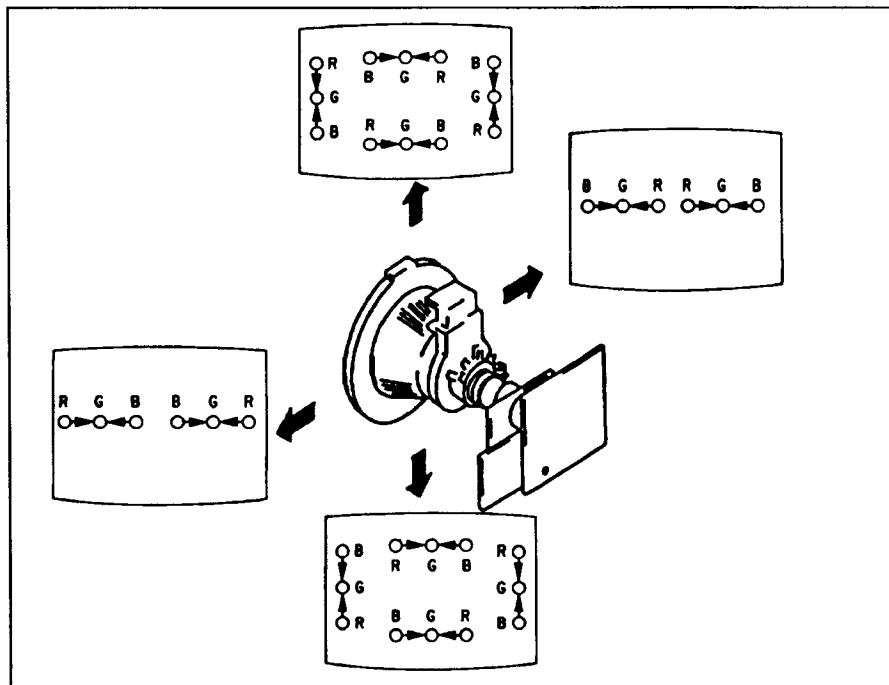


(3) Dynamic Convergence Circuit Adjustment

- Set to Service Mode.
- Input a cross-hatch signal.
- Press **1** and **4** select an item of adjustments.
- Adjust **3** and **6** to the best picture.

ITEM	REFERENCE DATA	NAME REGISTER	
UYBO	39	VP	U. Y. BOW
LYBO	39	VP	L. Y. BOW
HAMP	26	VP	H. AMP
HTILT	36	VP	H. TILT
UCBO	20	VP	U. C. BOW
UTIL	44	VP	U. TILT
LCBO	31	VP	L. C. BOW
LTIL	63	VP	L. TILT
DCSH	19	VP	DC. SHIFT


U. YBOW

Select UYBO with **1** and **4**

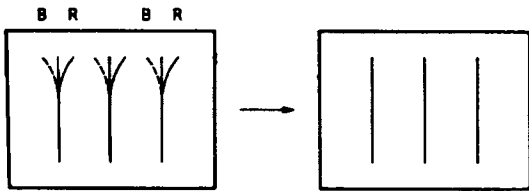


L. YBOW

Select LYBO with **1** and **4**

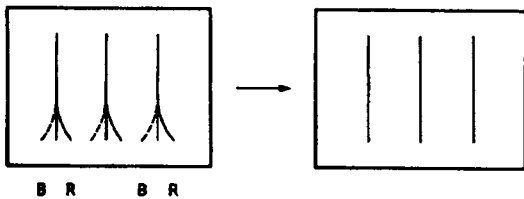


H. AMP

Select HAMP with **1** and **4**

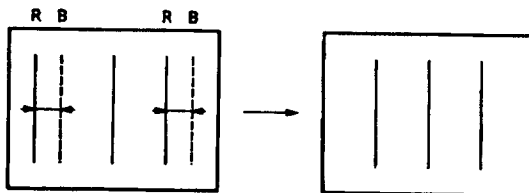


H. TILT

Select HTILT with **1** and **4**

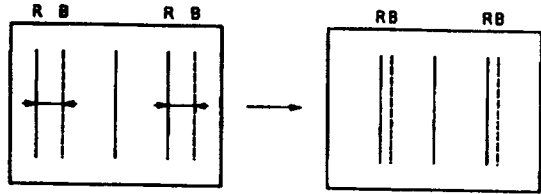


U. CBOW

Select UCBO with **1** and **4**

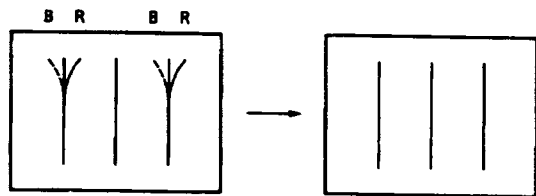


U. TILT

Select UTIL with **1** and **4**

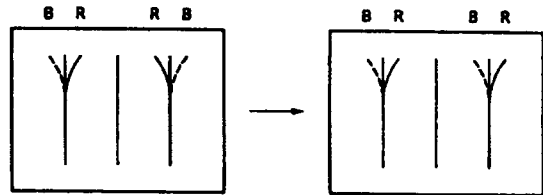


L. CBOW

Select LCBO with **1** and **4**

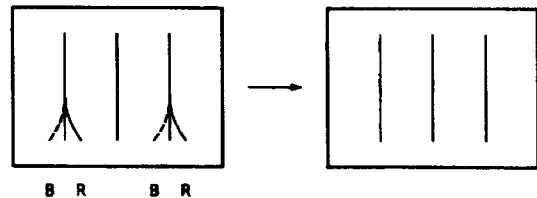


L. TILT

Select L. TIL with **1** and **4**


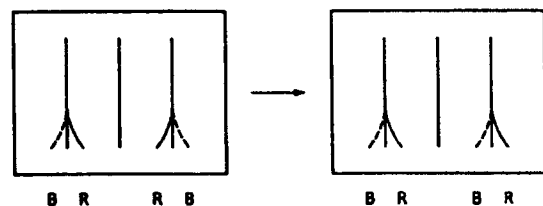


(4) Screen-corner Convergence

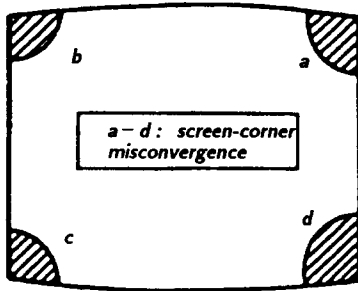

3-3. FOCUS ADJUSTMENT

Adjust FOCUS control on the flyback transformer for a best focus.

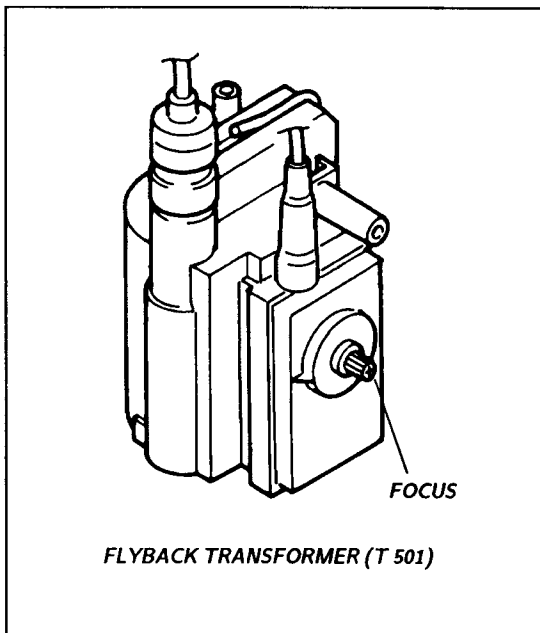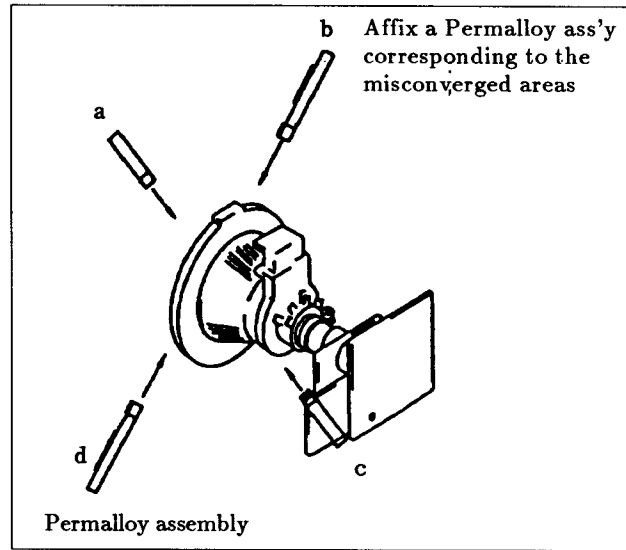

a . AN ITEM OF ADJUSTMENT

ITEM	REFERENCE DATA	NAME REGISTER	
GAMP	19	VP	GREEN AMP.
BAMP	9	VP	BLUE AMP.
GCUT	8	VP	GREEN CUT OFF.
BCUT	6	VP	BLUE CUT OFF
SBRT	40	VP	BRIGHT

b . METHOD OF CANCELLATION FROM SERVICE MODE


Set the standby condition (Press **POWER** button on the commander) in the next place, press **POWER** button again, hereupon it becomes TV mode.

c . METHOD OF WRITE FOR MEMORY

- 1) Set to Service Mode.
- 2) Press **1** (UP) and **4** (DOWN), select an item of adjustments.
- 3) Press **MUTING** button indicate WRITE (RED) on screen.
- 4) Press **ENTER** button to write for memory.

d . MEMORY WRITE CONFIRMATION METHOD

- 1) After adjustment, pull out the plug from AC outlet, and next place, plug in AC outlet again.
- 2) Turn the power switch ON and set to Service Mode.
- 3) Call the adjusted items again, confirm they were adjusted.

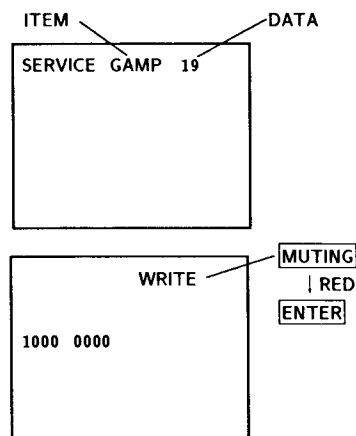

3-4. G2 (SCREEN) AND WHITE BALANCE ADJUSTMENTS

1. G 2 (SCREEN) ADJUSTMENT(RV 701)

- 1) Set the PICTURE and BRIGHTNESS to normal.
- 2) Confirm G 1 voltage is within 30.0 ± 5 V.
- 3) Apply DC voltage of 180 V to the cathodes of R,G and B from DC stabilized power source.
- 4) While watching the picture, adjust the G2 control (RV 701) to the just the retrace line disappears.


(Using the Remote Commander)

2. WHITE BALANCE ADJUSTMENTS

- 1) Set to service mode.
- 2) Press **STANDARD** to normal and if necessaryes "TRINITONE" set to "LOW" by **+** or **-**.
- 3) Input an entire white signal.
- 4) Set the PICTURE to minimum.
- 5) Select S BRT with **1** and **4**, and then set the level to minimum with **3** and **6**
- 6) Select G CUT and B CUT with **1** and **4**. And adjust the level with **3** and **6** for the best white balance.
- 7) Set the PICTURE to maximum.
- 8) Select G AMP and B AMP with **1** and **4**, and adjust the level with **3** and **6** for the best white balance.
- 9) Write into the memory by pressing **MUTING** → then **ENTER**.

3. SUB BRIGHT ADJUSTMENT

- 1) Set to service mode.
- 2) Input a staircase signal of black and white from the pattern generator.
- 3) BRIGHTNESS ... RESET
PICTURE minimum
- 4) Select SBRT with **1** and **4**, and adjust SUB BRIGHT level with **3** and **6** so that the stripe second from the right is dimly lit.

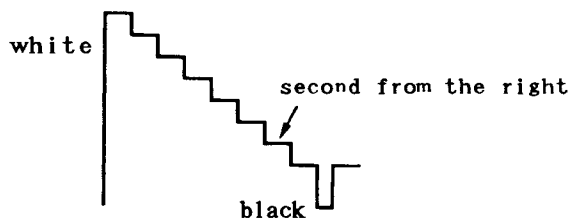

SECTION 4 SAFETY RELATED ADJUSTMENTS

A BOARD

☒ R565 CONFIRMATION METHOD (HOLD-DOWN CONFIRMATION) AND READJUSTMENTS

The following adjustments should always be performed when replacing the following components (marked with ☒ on the schematic diagram).

IC502, Q509, Q510, R565, R567, R568, R569

①

1. Preparation before confirmation

- 1) Remove R651 on the G board and connect a variable resistor (RV1: about $10k\Omega$) between pin ① of IC651 and B+ line.
- 2) Supply $120 \pm 2.0V$ AC to with variable auto-transformer.

2. Hold-down operation confirmation

- 1) Turn the POWER switch ON, and input an entirely white signals and adjust ABL current to $1910 \pm 50\mu A$ with PICTURE and BRIGHT etc controls.
- 2) Increase B+ line voltage gradually by adjusting the resistor of RV1. Confirm that the minimum voltage is less than $147.0V$ DC whereby the raster disappears during operation of hold-down circuit.


NOTE: When the hold-down circuit starts operating, switch OFF the POWER of the set immediately.

- 3) Turn the POWER switch ON, and input a dot signals and adjust ABL current to $110 \pm 30\mu A$ with PICTURE and BRIGHT etc controls.
- 4) Increase B+ line voltage gradually by adjusting the resistor of RV1. Confirm that the minimum voltage is lower than $148.5V$ DC whereby the raster disappears during operation of hold-down circuit.

NOTE: When the Hold-down circuit starts operating, switch OFF the POWER of the set immediately.

3. Hold-down readjustment

When step 2 is not satisfied, readjustment should be performed by altering the resistance value of R565 (a component marked with ☒).

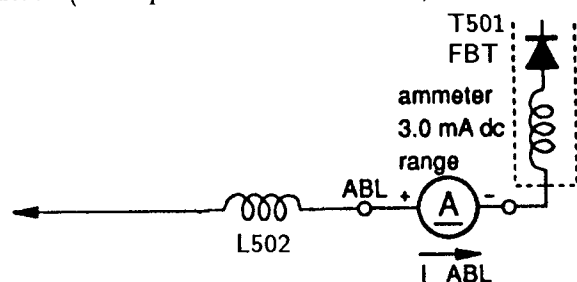

A BOARD

☒ R566 CONFIRMATION METHOD (HOLD-DOWN CONFIRMATION) AND READJUSTMENTS

The following adjustments should always be performed when replacing the following components (marked with ☒ on the schematic diagram).

IC502, IC651, Q509, Q510, D502, C531, R554, R566, R567, R568, R569, R651, R1506, T501

②

1. Preparation before confirmation

- 1) Turn the POWER switch ON, and input an entirely white signals and set the PICTURE and BRIGHT controls to maximum.
- 2) Confirm that voltage of the check terminal of pin ② of A-100 connector is more than $127.0 V$ DC when the set is operating normally with $120.0 \pm 2.0V$ AC supply.

2. Hold-down operation confirmation

- 1) Turn the POWER switch ON, and input an entirely white signals and set the PICTURE and BRIGHT controls to maximum.
- 2) Apply DC voltage of over $130 \pm 2.0V$ DC gradually to the check terminal of pin ② of A-100 connector via 1SS119 from the DC stabilized power source.

Confirm that the minimum voltage is lower than $149.0V$ DC whereby the raster disappears during operation of hold-down circuit.

NOTE: When the hold-down circuit starts operating, switch OFF the POWER of the set immediately.

3. Hold-down readjustment


When step 2 is not satisfied, readjustment should be performed by altering the resistance value of R566 CARBON 1/4W (a component marked with ☒).

G BOARD

B+ VOLTAGE CONFIRMATION

The following adjustments should always be performed when replacing IC651 and R651.

- 1) Supply 130 ± 2^0V AC to with variable autotransformer.
- 2) Input an entirely monoscope signal.
- 3) Set the PICTURE control and the BRIGHT controls in to initial reset.
- 4) Confirm the voltage of A BOARD ① pin A-3 connector is less than 136.5V DC.
- 5) If step 4) is not satisfied, replace IC651 and R651 repeat above steps.

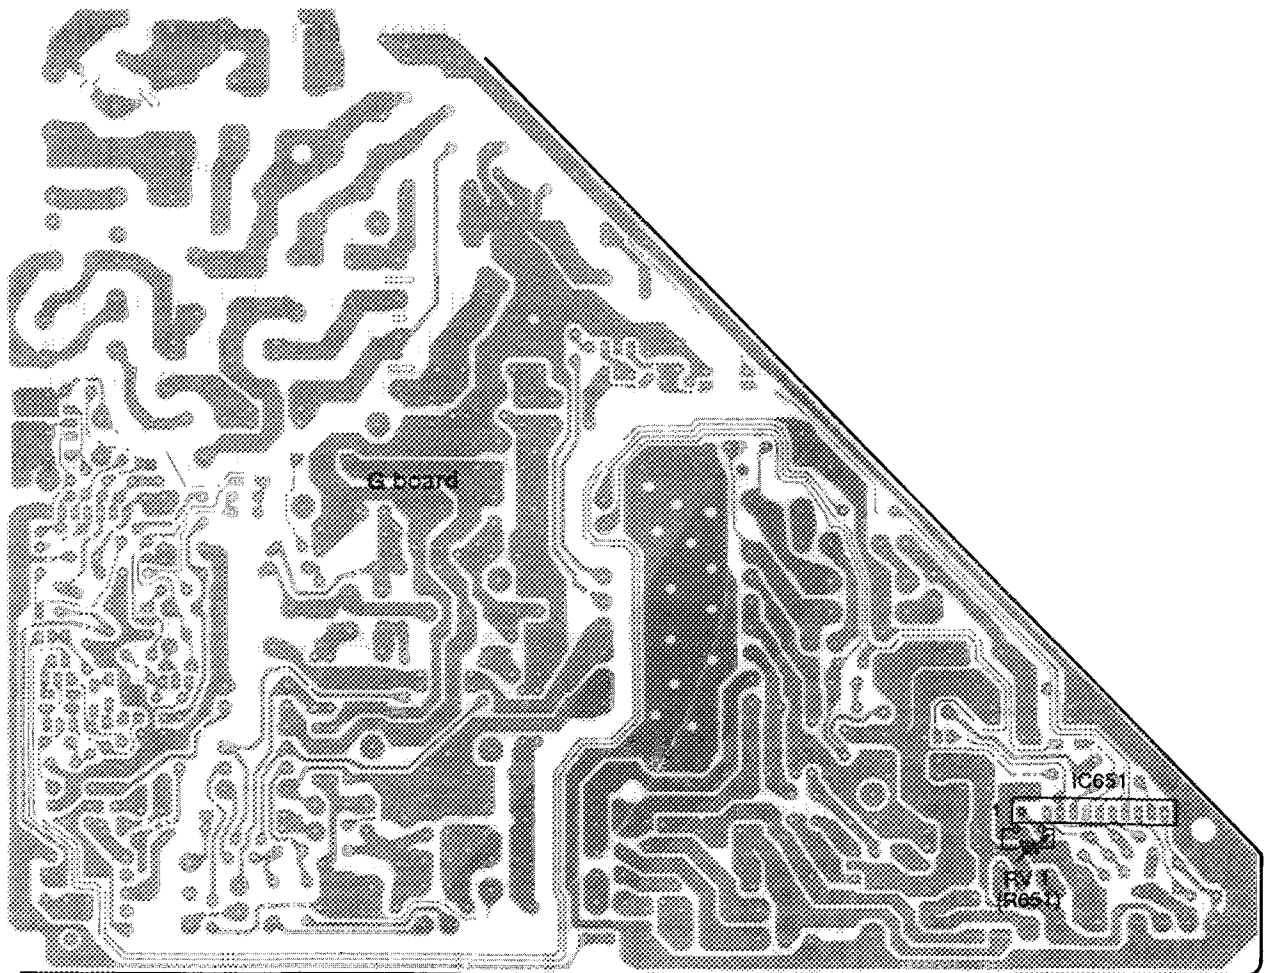

SECTION 5 CIRCUIT ADJUSTMENTS

5-1. ELECTRICAL ADJUSTMENT BY REMOTE COMMANDER


Use of Remote Commander (RM-AV1100) can be performed circuit adjustments about this model.

1. METHOD OF SETTING THE SERVICE MODE


- 1) Press **POWER** button on the Remote Commander while pressing switch on the rear of the set.

NOTE : Test Equipment Required.

1. Pattern Generator
2. Frequency counter
3. Digital multimeter
4. Audio OSC

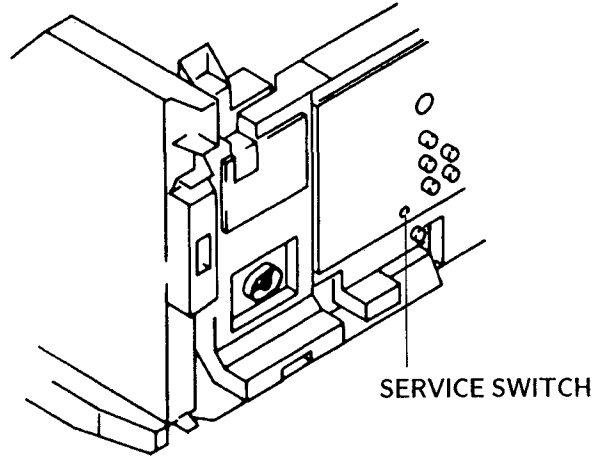

2. ADJUST BUTTONS AND INDICATOR

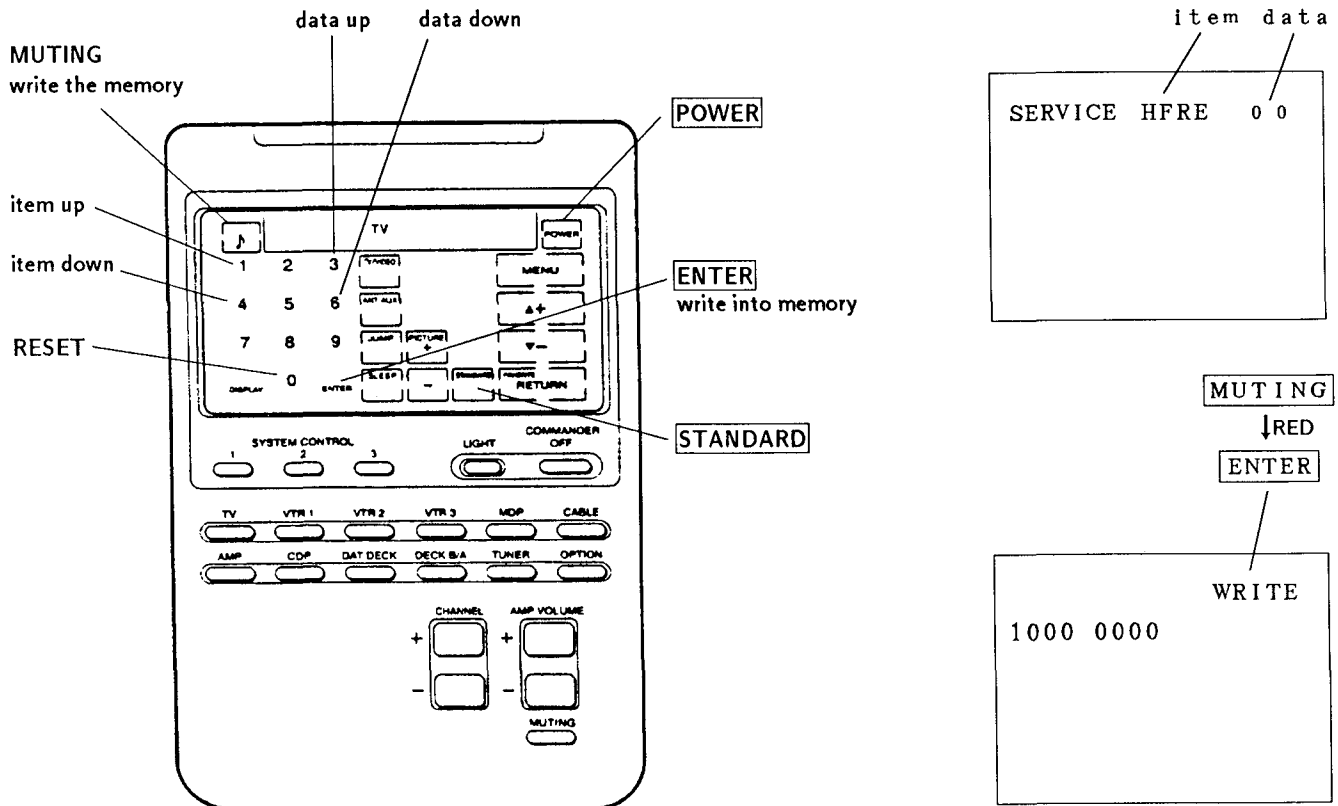

3. AN ITEM OF ADJUSTMENT

ITEM	REFERENCE DATA	NAME REGIST	
AFC	1	VP	AFC 1.0
HFRE	93	VP	H. FREQUENCE
VFRE	15	VP	V. FREQUENCE
VPOS	19	VP	V. SHIFT
VSIZ	32	VP	V. SIZE
VLIN	2	VP	V. LINEARITY
VSCO	3	VP	VS. CORRECTION
HPOS	9	VP	H. PHASE
HSIZ	25	VP	H. SIZE
PAMP	17	VP	PIN. AMP.
CPIN	4	VP	CORNER PIN
PPHA	8	VP	PIN. PHASE
VCOM	2	VP	V. COMP
GAMP	19	VP	GREEN AMP.
BAMP	9	VP	BLUE AMP.
GCUT	8	VP	GREEN CUT OFF.
BCUT	6	VP	BLUE CUT OFF
SPIX	40	VP	PICTURE
SHUE	29	VP	HUE
SCOL	30	VP	COLOR
SBRT	40	VP	BRIGHT
RGBP	28	VP	RGB PICTURE
SHAP	7		SHARPNESS
DISP	35		OUTPUT
VSMO	0	VP	VSMO
REF	2	VP	REF 1.0
ROFF	1	VP	OFF NR
GOFF	1	VP	OFF NG
BOFF	1	VP	OFF NB
ABLM	0	VP	ABLM
DRGB	1	VP	D RGB
YBOW	31	DE	Y BOW
VANG	35	DE	V. ANGLE
HTAP	31	DE	H. TRAP
TEST	0	AP	T
MPX	7	AP	ATT
FILO	31	AP	I1
DEEM	7	AP	I2
STEV	31	AP	OSC 1
SAPV	31	AP	OSC 2
PILO	7	AP	PILOT
SEP	31	AP	WIDE BAND
VD	7	AP	SPECTRAL
LVOL	0	AP	VOLUME-L
RVOL	0	AP	VOLUME-R
BASS	7	AP	BASS
TRE	7	AP	TREBLE
UYBO	39	DC	U.Y. BOW
LYBO	39	DC	L.Y. BOW
HAMP	26	DC	H.AMP
HTIL	36	DC	H TILT
UCBO	20	DC	U.C. BOW
UTIL	44	DC	U.TILT
LCBO	31	DC	L.C. BOW
LTIL	63	DC	L.TILT
DCSH	19	DC	DC. SHIFT
NRLE	30		NR LEVEL
DSPP	31		

PHPO, PVPO, PLEV, PFCO
Nothing change for KV-32XBR90S


4. METHOD OF CANCELLATION FROM SERVICE MODE

Set the standby condition (Press **POWER** button on the commander) in the next place, press **POWER** button again, hereupon it becomes TV mode.

5. METHOD OF WRITE FOR MEMORY


- 1) Set to Service Mode.
- 2) Press **1** (UP) and **4** (DOWN), select an item of adjustments.
- 3) Press **MUTING** button indicate WRITE (RED) on screen.
- 4) Press **ENTER** button to write for memory.

6. MEMORY WRITE CONFIRMATION METHOD

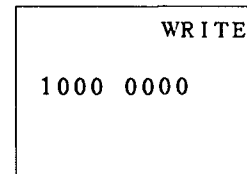

- 1) After adjustment, pull out the plug from AC outlet, and next place, plug in AC outlet again.
- 2) Turn the power switch ON and set to Service Mode.
- 3) Call the adjusted items again, confirm they were adjusted.

5-2. A BOARD ADJUSTMENTS

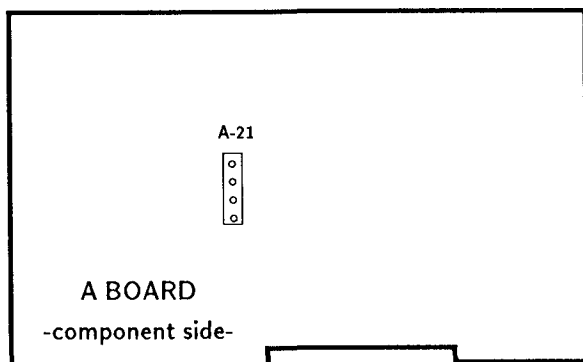

RF AGC ADJUSTMENT (IF BLOCK VR)

- 1) Input a color-bar signal.
- 2) Adjust AGC VR of TU 101 so that snow noise and cross-modulation disappear from the picture.
- 3) Confirm them at every channel.

H.FREQUENCY ADJUSTMENT (HFRE)

- 1) Set to Service Mode.
- 2) Input a color-bar signal.
- 3) Connect a frequency counter to base of Q 507.
- 4) Call the item of AFC, set to 3 level (free run).
- 5) Select HFRE with **[1]** and **[4]**.
- 6) Adjust **[3]** and **[6]** to the 15735 ± 60 Hz level.
- 7) Call the item of AFC again, adjust the level "01".
- 8) Write into the memory by pressing **[MUTING]** → then **[ENTER]**.

V.FREQUENCY ADJUSTMENT (VFRE)

- 1) Set the Service Mode.
- 2) Input an off-air signal (VIDEO IN → no signal).
- 3) Connect the frequency counter across connector VDY - ⊕ of DY-1 connector and ground.
- 4) Select VFRE with **[1]** and **[4]**.
- 5) Adjust **[3]** and **[6]** to the 55 ± 0.5 Hz.
- 6) Write the memory by pressing **[MUTING]** → then **[ENTER]**.

SUB CONTRAST ADJUSTMENT (SPIX)


- 1) Set to Service Mode.
- 2) Input a color-bar signal. (75 IRE)
- 3) Set the conditions as follows.

PICTURE MAX
 COLOR MIN
 BRIGHT MIN
 R OFF ON
 G OFF OFF
 B OFF OFF

Press **[MENU]** and select VIDEO MENU → **[]** (L)

(It becomes minimum).

Select **[3]** (ON) and **[6]** (OFF) with **[1]** and **[4]**.

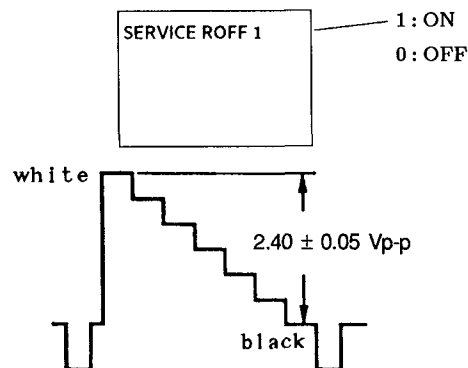


- 4) Connect an oscilloscope to TP 49 B of C board and ground.
- 5) Adjust **[3]** and **[6]** to the 2.40 ± 0.05 Vp-p level by selecting SPIX with **[1]** and **[4]**.
- 6) Write the memory by pressing **[MUTING]** → then **[ENTER]**.
- 7) Return the following back to normal after adjustment.

G OFF ON
 B OFF ON
 COLOR CENTER
 BRIGHT CENTER
 PICTURE 80%

SUB HUE, SUB COLOR ADJUSTMENT (SHUE, SCOL)


- 1) Input a color-bar signal.
- 2) Press **STANDARD** to normal.
- 3) Set to Service Mode.
- 4) Connect an oscilloscope to TR 49 R of C board and ground.
- 5) Adjust **3** and **4** to the V1=V4 and V2=V3 by select to SHUE and SCOL with **1** and **4**.

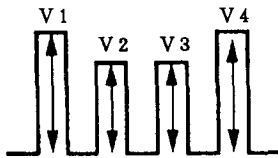

- 6) Write into the memory by pressing **MUTING** → then **ENTER**.


V.SIZE ADJUSTMENT (VSIZ)

- 1) Set to Service Mode.
- 2) Press **STANDARD** to normal.
- 3) Input a cross-hatch signal.
- 4) Adjust **3** and **6** to the best vertical size by selecting VSIZ with **1** and **4**.
- 5) Write into the memory by pressing **MUTING** → then **ENTER**.

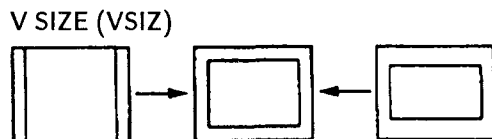

H.SIZE ADJUSTMENT (HSIZ)


- 1) Input a cross-hatch signal.
- 2) Press **STANDARD** to normal.
- 3) Set to Service Mode.
- 4) Adjust **3** and **6** to best horizontal size by selecting HSIZ with **1** and **4**.
- 5) Write into the memory by pressing **MUTING** → then **ENTER**.

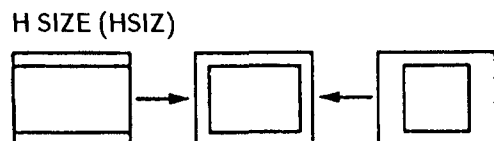

H.CENTER ADJUSTMENT (H POS)

Note: Perform this adjustment after H.FREQUENCY ADJUSTMENT (HFRE).


- 1) Input a color bar signal.
- 2) Set the Service mode.
- 3) Select HSIZ with **1** and **4**.
- 4) Press **6** so that the Horizontal size set to min.
- 5) Adjust A-21 conector position so that both-size blanking width of the Raster should be same on the Scrnee.
- 6) Unplug Set then plug in Set.
- 7) Set to Service mode.
- 8) Select HPOS with **1** and **4**.
- 9) Adjust **3** and **6** so that the color bars center should be set to the CRT Screen center position.
- 10) White into the memory by the pressing **MUTING** → then **ENTER**.




PIN AMP (PAMP), CORNER PIN (CPIN) PIN PHASE (PPHA), H TRAPIZOID (HTRA) V LINEARITY (VLIN), V ANGLE (VANG), VS CORRECTION (VSCO), Y BOW (YBOW), V SHIFT (VPOS), AND V COMP (VCOM) ADJUSTMENTS

- 1) Input a cross-hatch signal.
- 2) Press **STANDARD** to normal.
- 3) Set to Service Mode.
- 4) Select PAMP, CPIN, PPHA, H TRA, VPOS, VCOM, LVIN, VANG, VSCO and YBOW with **1** and **4**.
- 5) Adjust **3** and **6** to the best picture.
- 6) Write the memory by **MUTING** → **ENTER**.

PIN AMP (PAMP)



CORNER PIN (CPIN)




PIN PHASE (PPHA)



H TRAPIZOIDO (HTRA)




V-SHIFT (VPOS)




V COMP (VCOM)




V LINEARITY (VLIN)




V ANGLE (VANG)



VS CORRECTION (VSCO)




Y BOW (Y BOW)




FILTER ADJUSTMENT (MPX, FILO)

- 1) Set to Service Mode.
- 2) Select to **TEST** with **1** and **4**, set the data to "1".
Then select MPX and change data to "08".
- 3) Connect an audio oscillator to R224 using a capacitor (10μ F/16V), set frequency to 62.936 kHz ± 0.1 kHz.
And then, through the 10kΩ resistor, feed 9.0V into the mute of TUVIF TU 101.

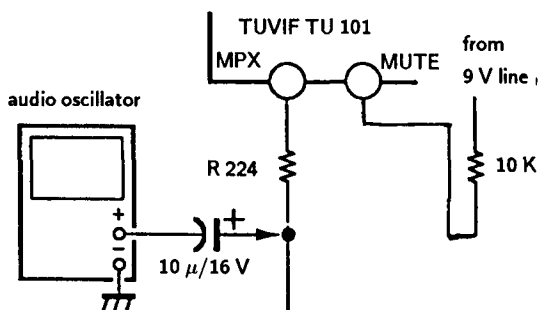


V 4 fh : SINE-WAVE 62.936 KHz ± 0.1 KHz
LEVEL 3.0 Vp-p

- 4) Make the data "00" by selecting FILO with **1** and **4**. And then, send up the data gradually by pressing **6**. Set the data to D1 before SAT3 changing to 1 from 0.
- 5) Send up the data gradually. Set data D2 when SAT3 changes 0 from 1.
- 6) Adjust the data of FILO to $\frac{D1 + D2}{2}$.
- 7) Write into the memory by pressing **MUTING** → then **ENTER**.

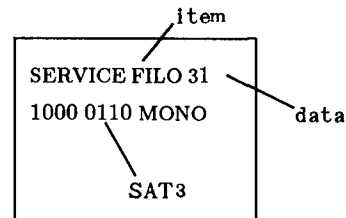


ST VCO ADJUSTMENT (MPX, STEV)

- 1) Set to Service Mode.
- 2) Select TEST with **1** and **4**, set the data to "1".
And then press **MTS** to MONO.
- 3) Select MPX, set the data "8".
- 4) Connect an audio oscillator to R224 using electrolytic capacitor (10μ F/16V) and apply the frequency Vsr. Then, apply DC voltage to mute of TUVIF TU 101 using 10kΩ connect to 9.0 V line.

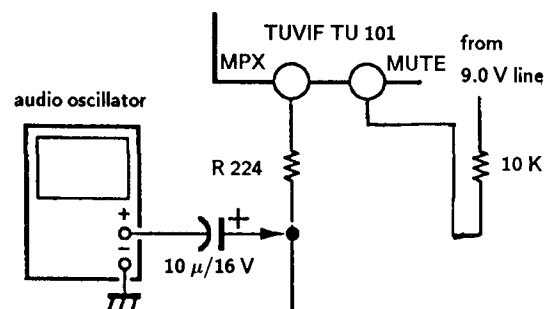

Vfh : SINE-WAVE 15.734 KHz ± 0.1 KHz
LEVEL 0.28 Vp-p

- 5) Select STEV with **1** and **4**, set the data to "00" with **6**. And then, send up the data gradually. Set the data to D1 before SAT2 changes from 0 to 1.
- 6) Send up data gradually, set the data to D2 when SAT2 changes 1 from 0.
- 7) Adjust the data of STEV to
- 8) Write into the memory by pressing **MUTING** → then **ENTER**.

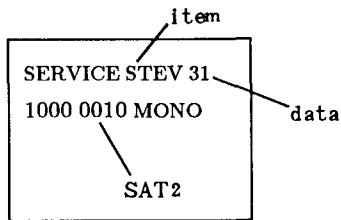

MPX IN LEVEL ADJUSTMENT (MPX)

- 1) Set to Service Mode.
- 2) Select TEST with [1] and [4], set the data to "0" with [6]. And then press **MTS** to MONO.
- 3) Select MPX with [1] and [4], set the data to "08" with [3] and [6].
- 4) Write into the memory by pressing **MUTING** → then **ENTER**.

PILOT CANCEL ADJUSTMENT (PILO)

- 1) Set to the Service Mode.
- 2) Select PILO with [1] and [4], set the data to "08" with [3] and [6].
- 3) Write into the memory by pressing **MUTING** → then **ENTER**.


SAP VCO f₀ ADJUSTMENT (SAPV)

- 1) Set to Service Mode.
- 2) Input a stereo broadcast signal with SAP.
- 3) Select TEST with [1] and [4], set the data to "0". And then, press **MTS** to MAIN.
- 4) Connect a digital multimeter to TP-1(DBX). This voltage reading will equal V 1.
- 5) Press MTS to SAP and this voltage will equal V 2.
- 6) Select SAPV with [1] and [4], adjust [3] and [6] so that $V 2 = V 1 \pm 0.03 \text{ VDC}$.
- 7) Write the memory by **MUTING** → **ENTER**.

SEPARATION ADJUSTMENT (SEP)


- 1) Set to Service Mode.
- 2) Press **MTS** to MAIN and receive a monoral broadcast signal.
In the next step, receive a stereo broadcast signal.
- 3) Select SEP and VD with [1] and [4], adjust [3] and [6] so that a clear stereo sound is effected.

5-3. VC BOARD ADJUSTMENT

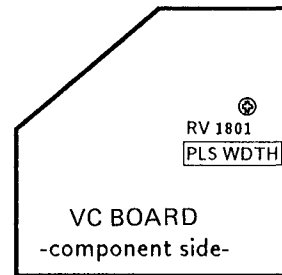

DRIVE PULSE PHASE ADJUSTMENT (RV 1801)

- 1) While measuring the voltage V 1 at both edges of C 1809, rotate RV 1801 so that it becomes minimum. The adjusting range is from (the voltage at which V 1 becomes minimum) V 1 MIN to 3 V, which means, adjust to between V 1 MIN to V 1 MIN + 3 V.

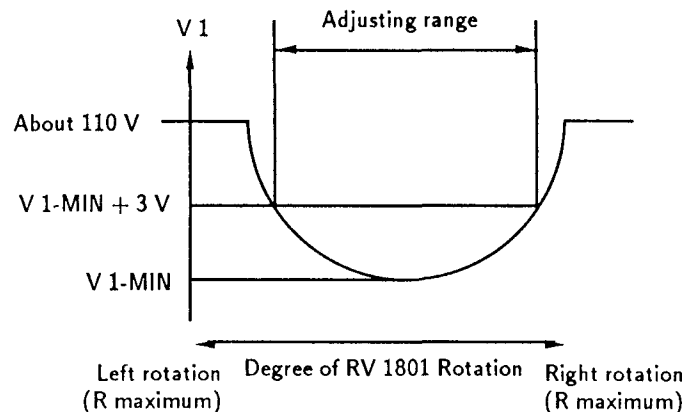

MEMO

6-1. BLOCK DIAGRAMS (1)


SECTION 6
DIAGRAMS

KV-32XBR90S
RM-AV1100

KV-32XBR90S
RM-AV1100

KV-32XBR90S
RM-AV1100

KV-32XBR90S
RM-AV1100

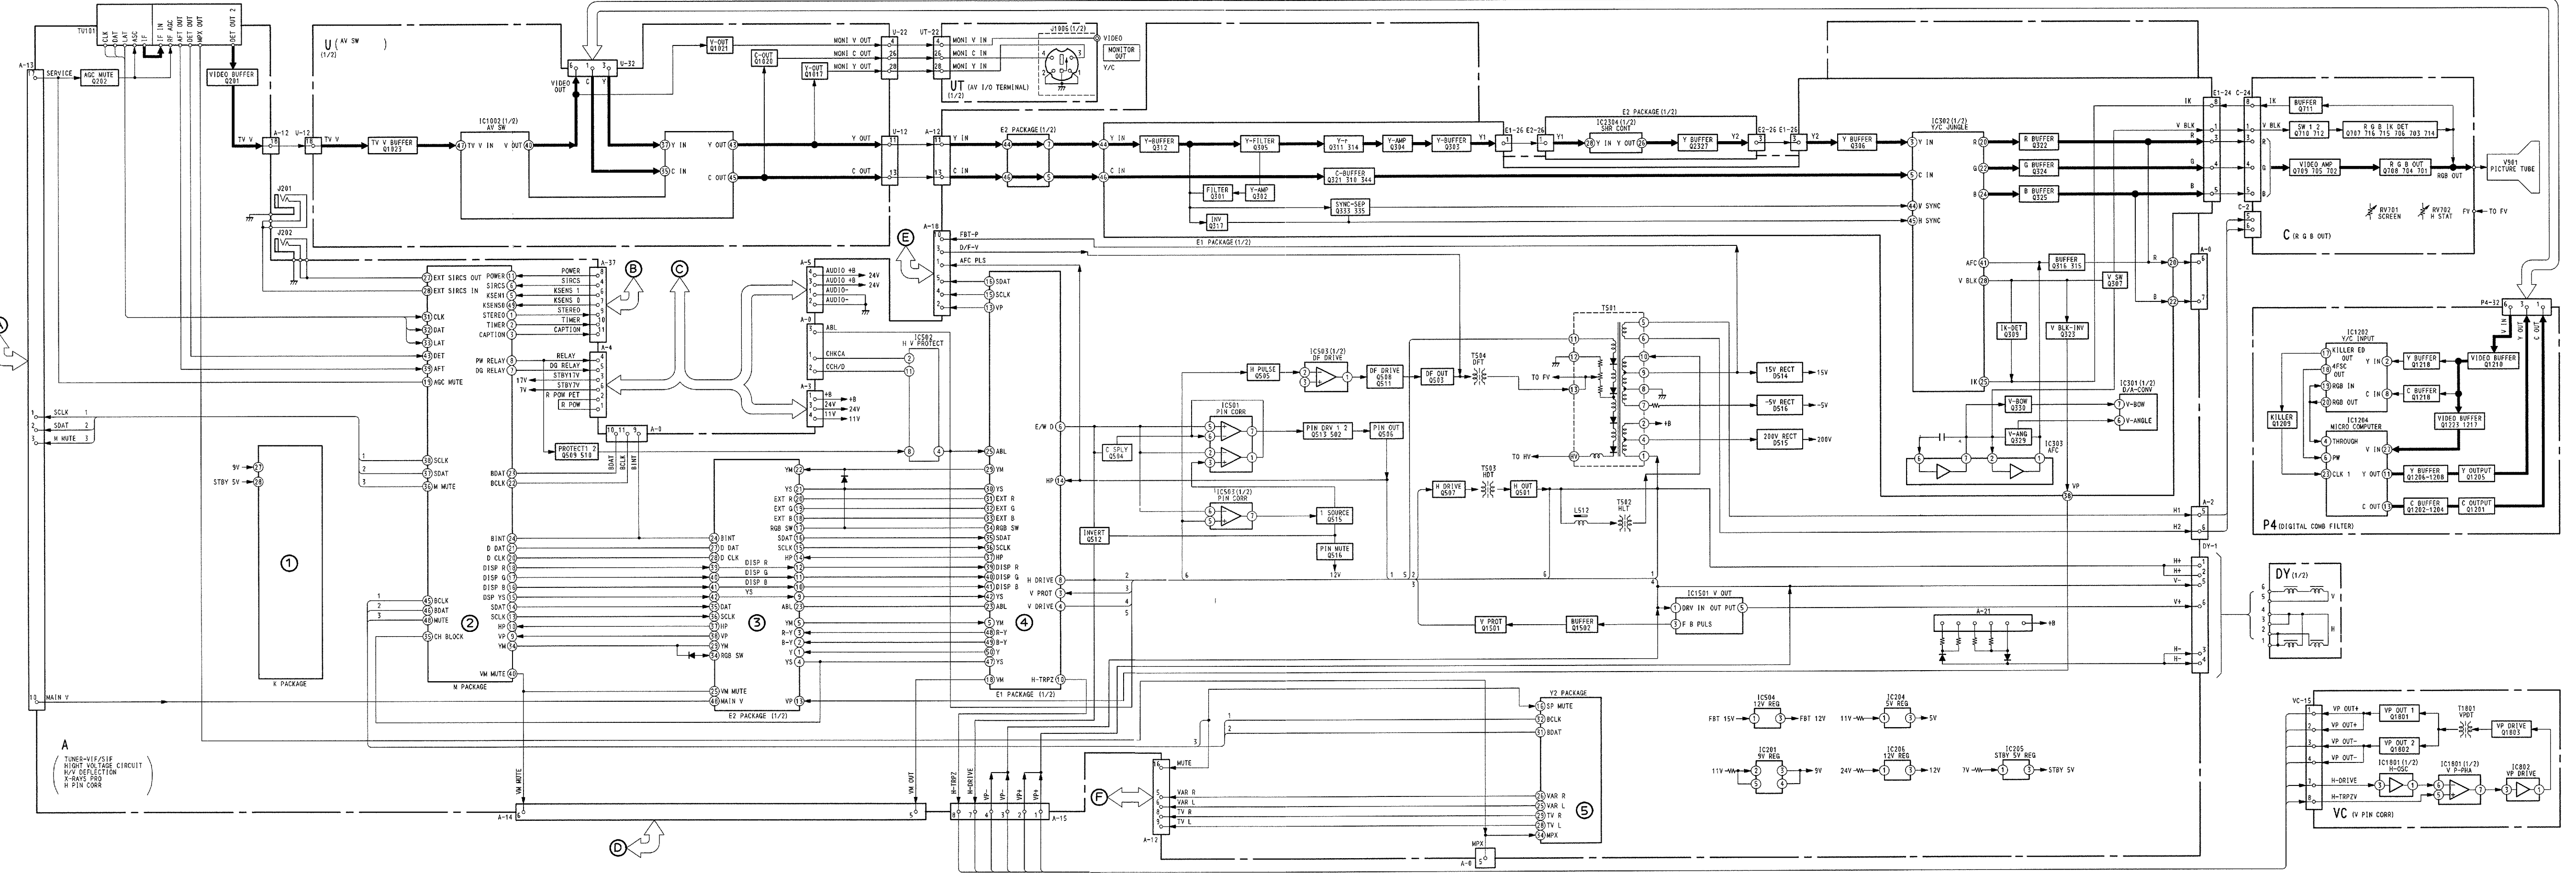

A

B

C

D

E








P4

DY

VC

A
TUNER-VIF/SIF
HIGH VOLTAGE CIRCUIT
H/V DEFLECTION
X-RAYS PRO
H PIN CORR

6-2. BLOCK DIAGRAMS (2)

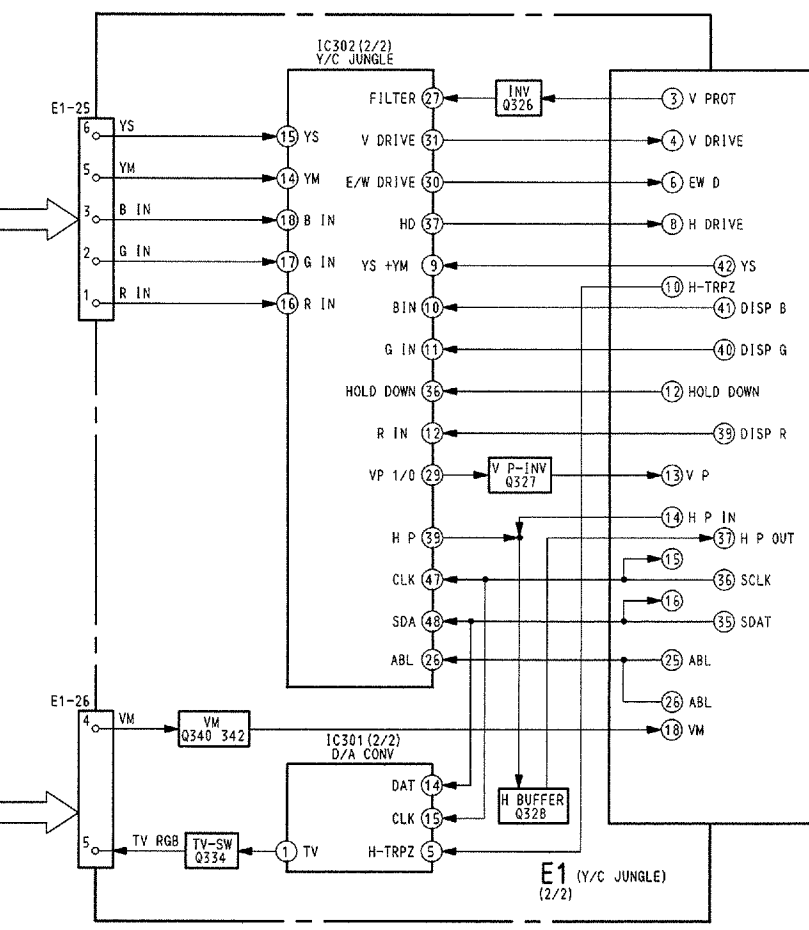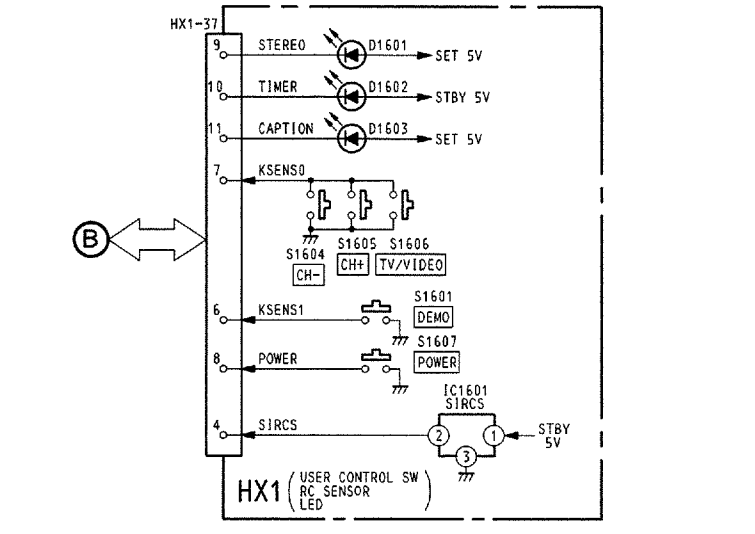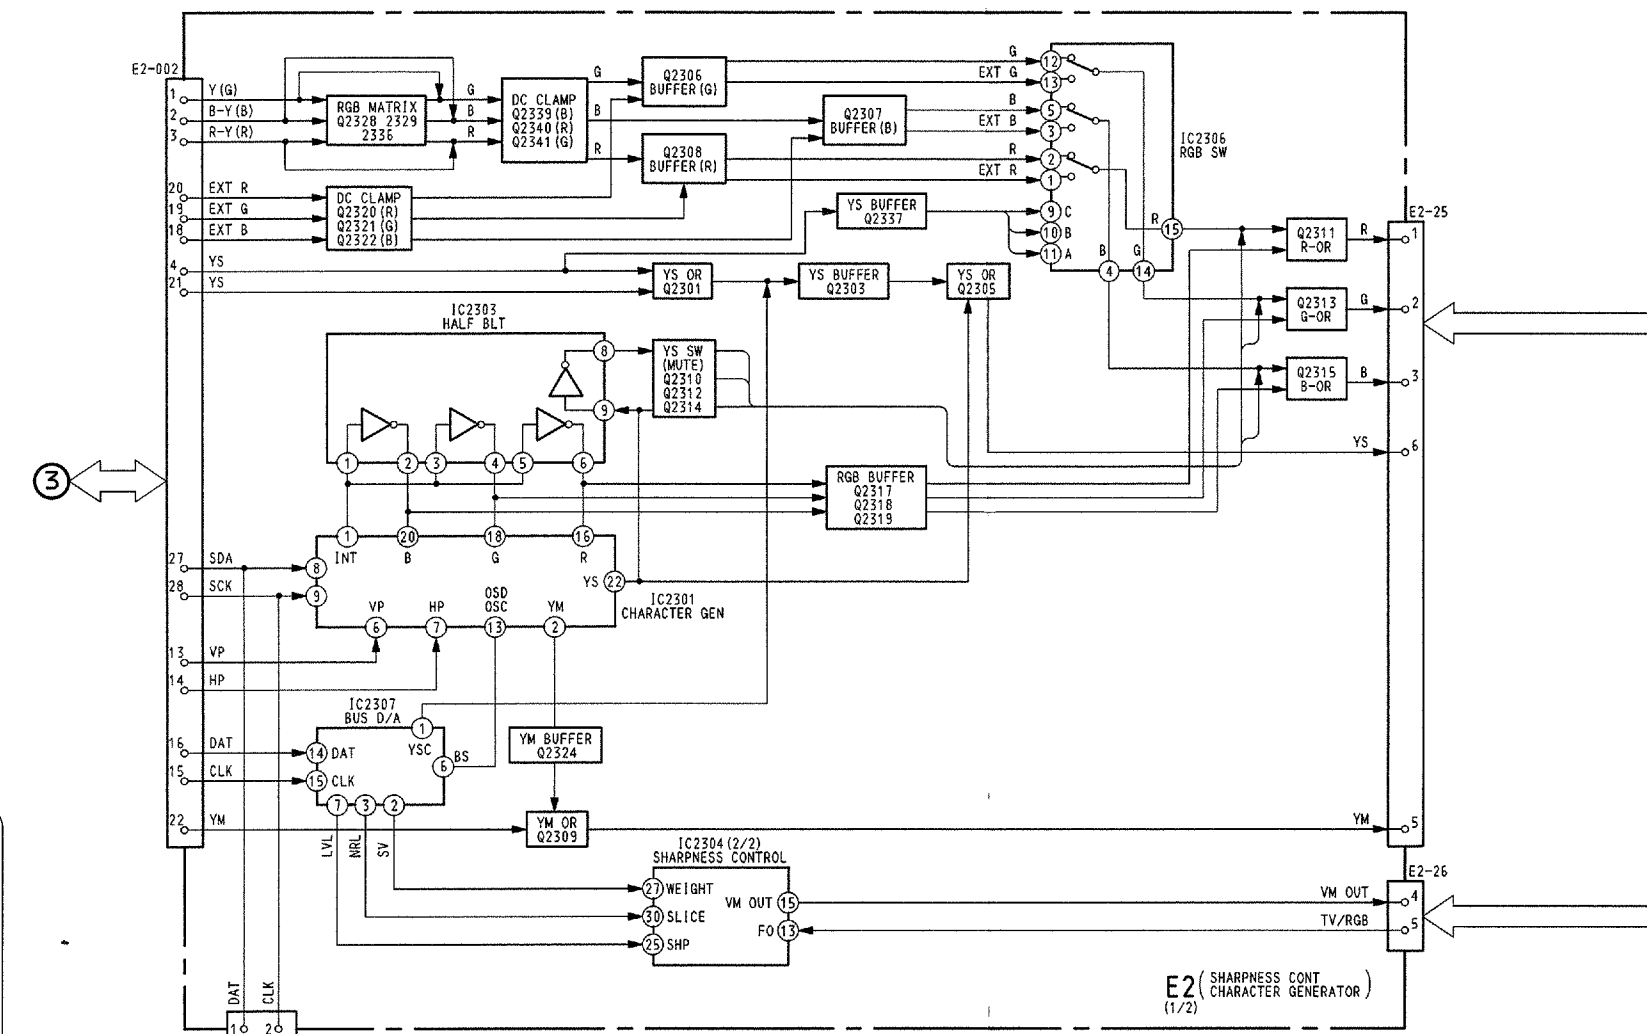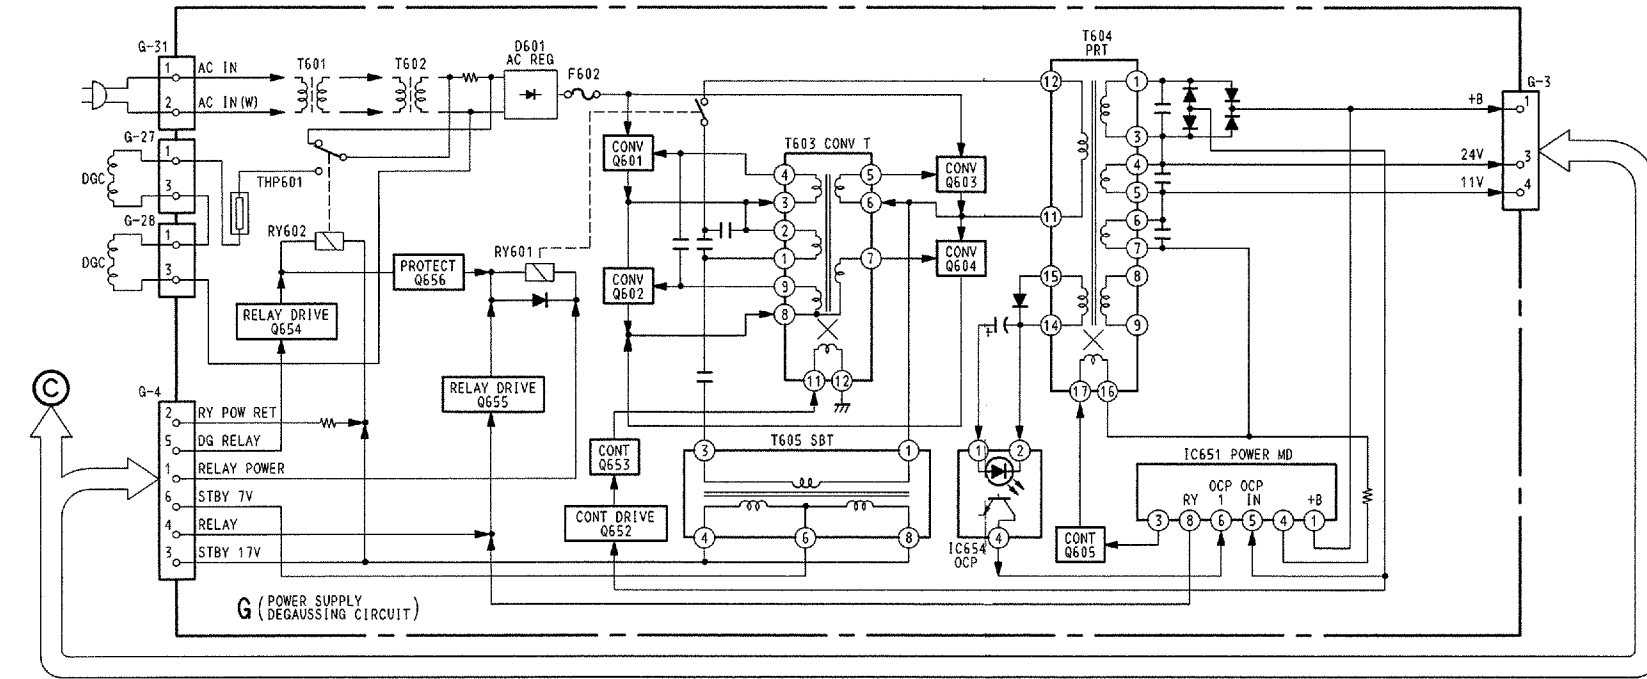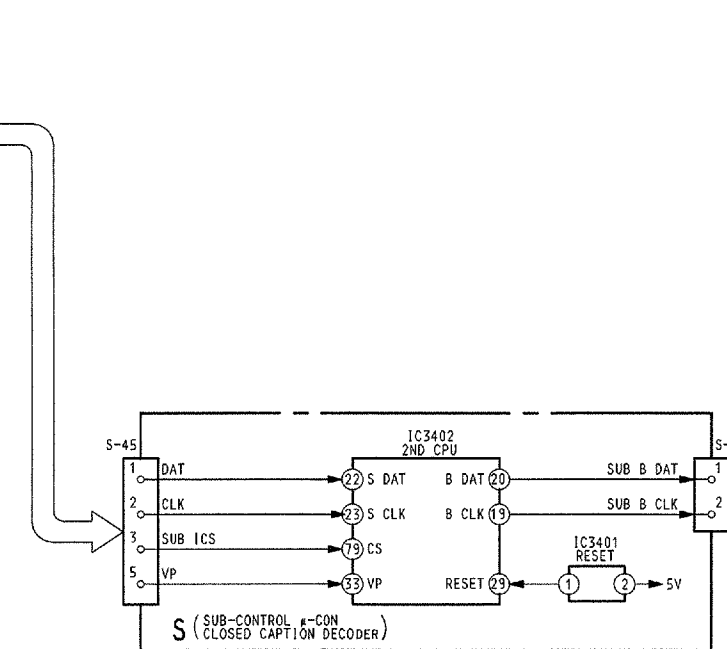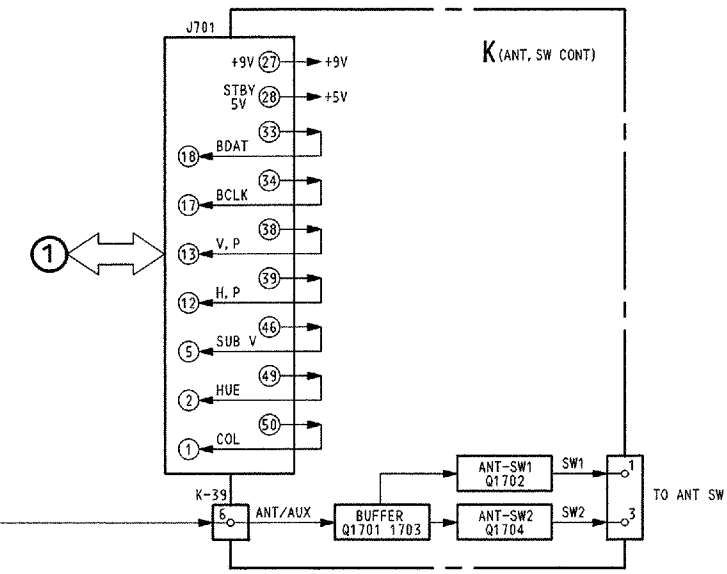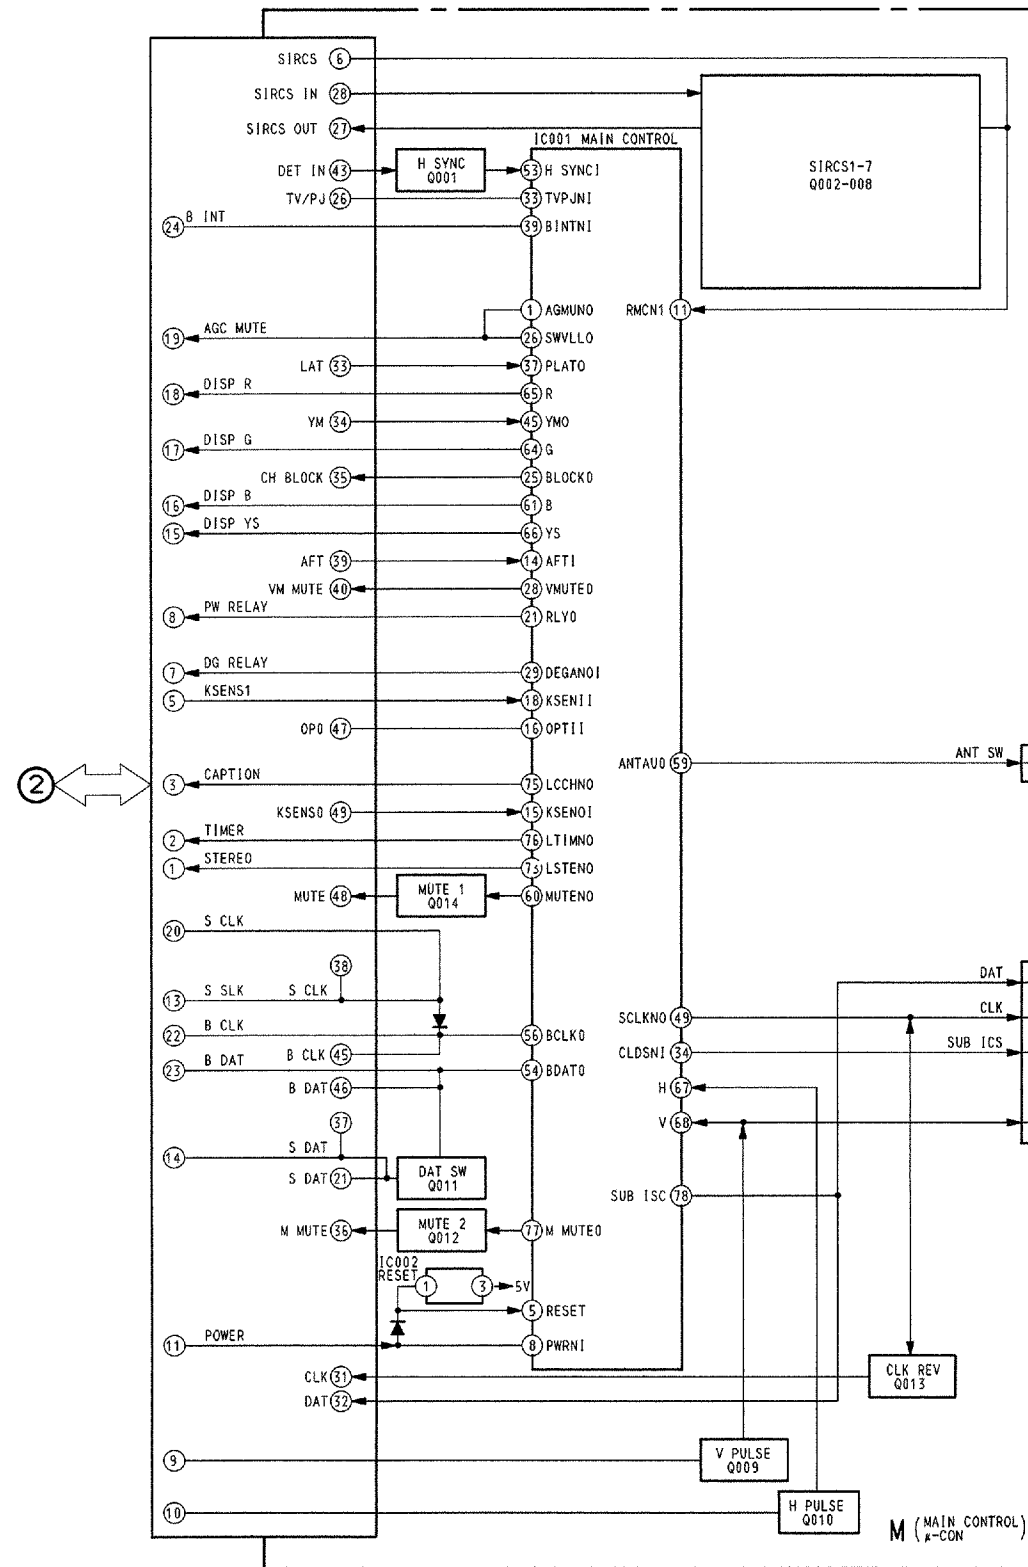





6-3. BLOCK DIAGRAMS (3)


KV-32XBR90S
RM-AV1100

KV-32XBR90S
RM-AV1100


KV-32XBR90S
RM-AV1100

KV-32XBR90S
RM-AV1100

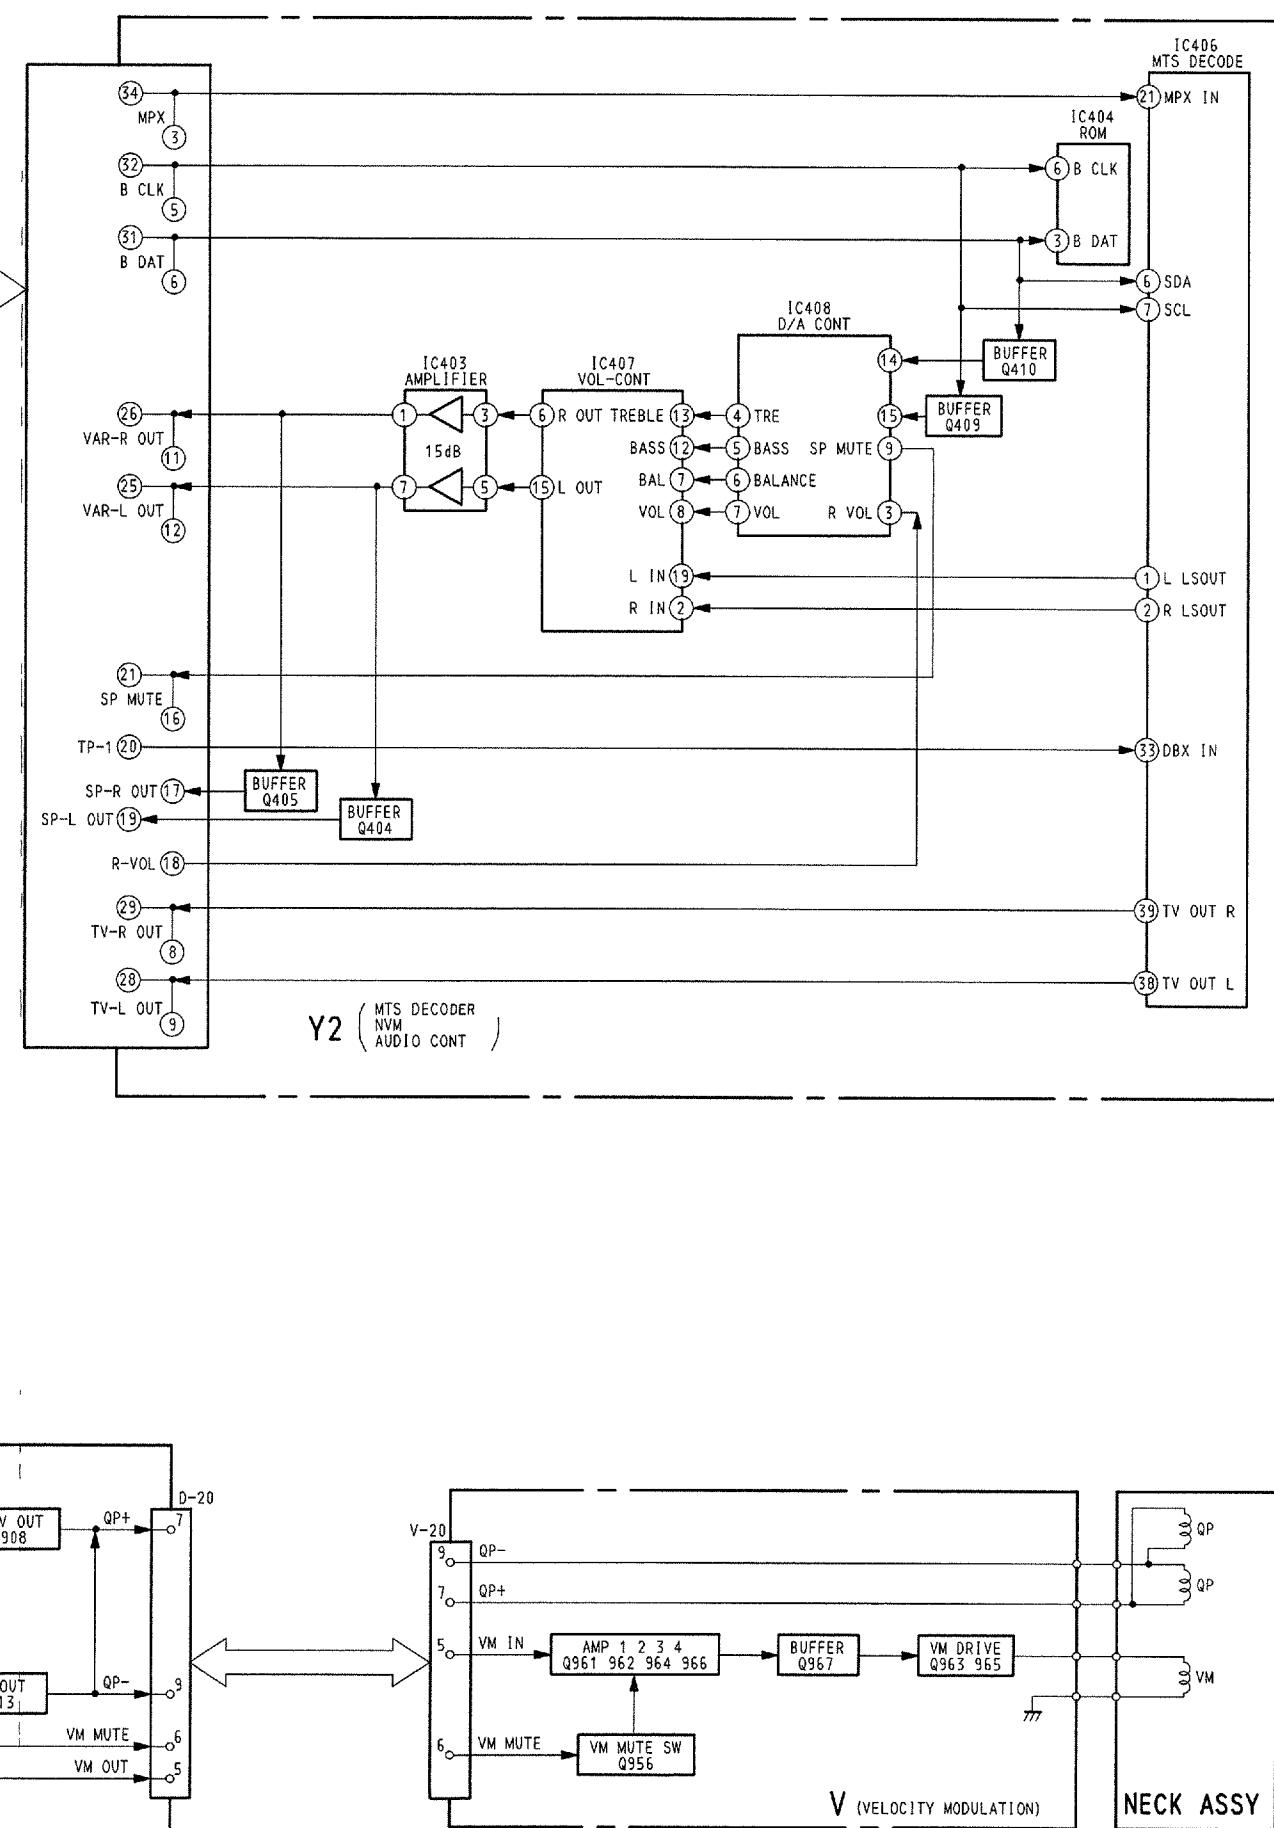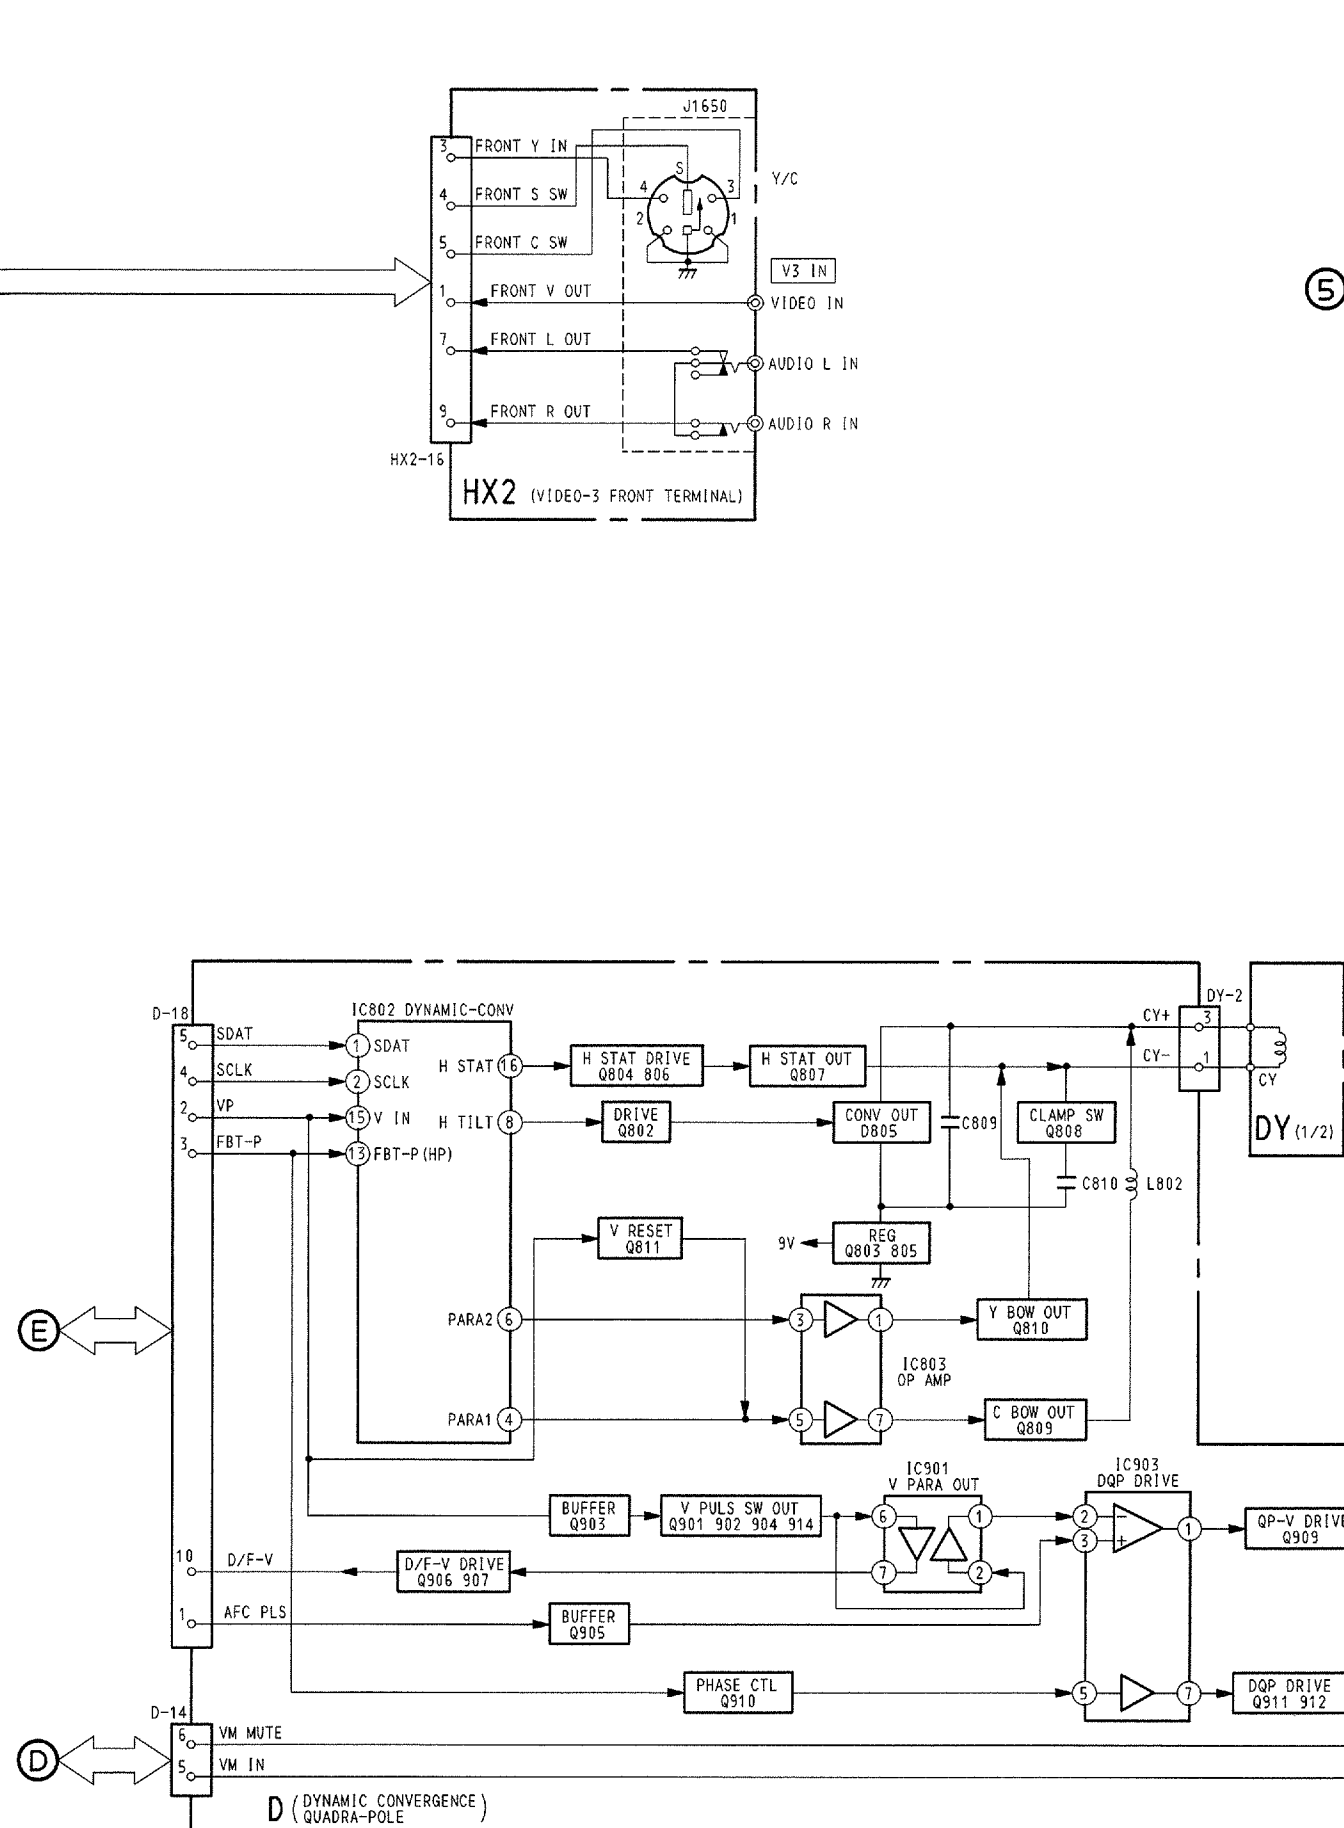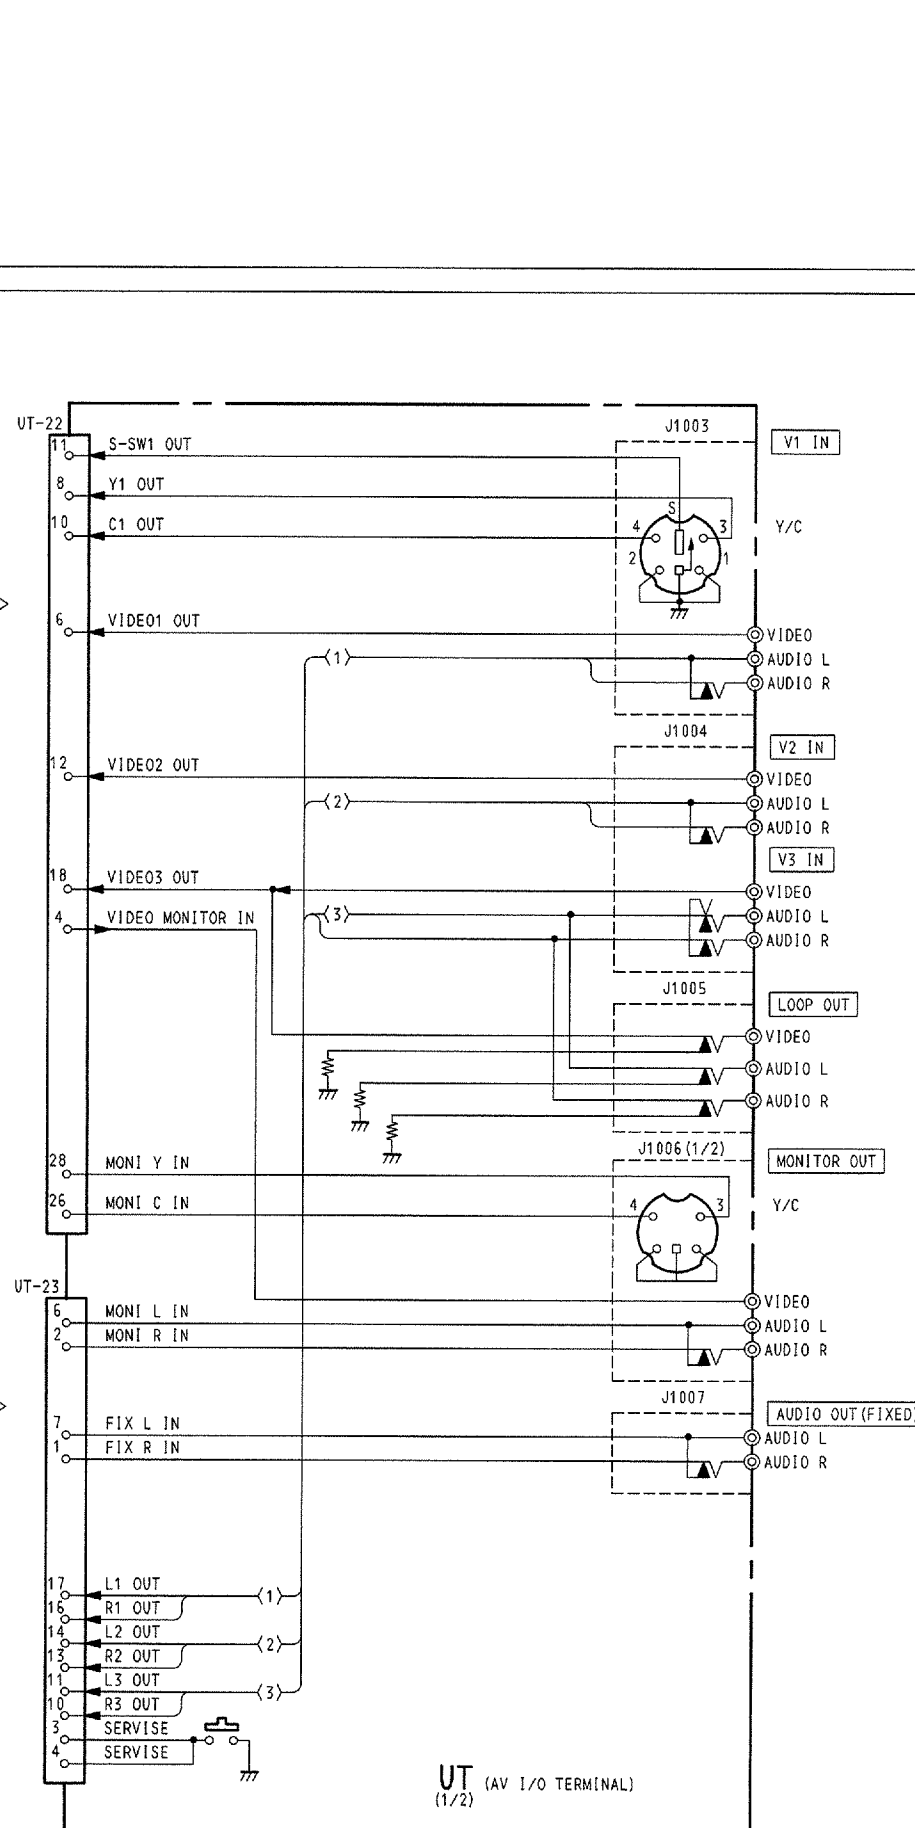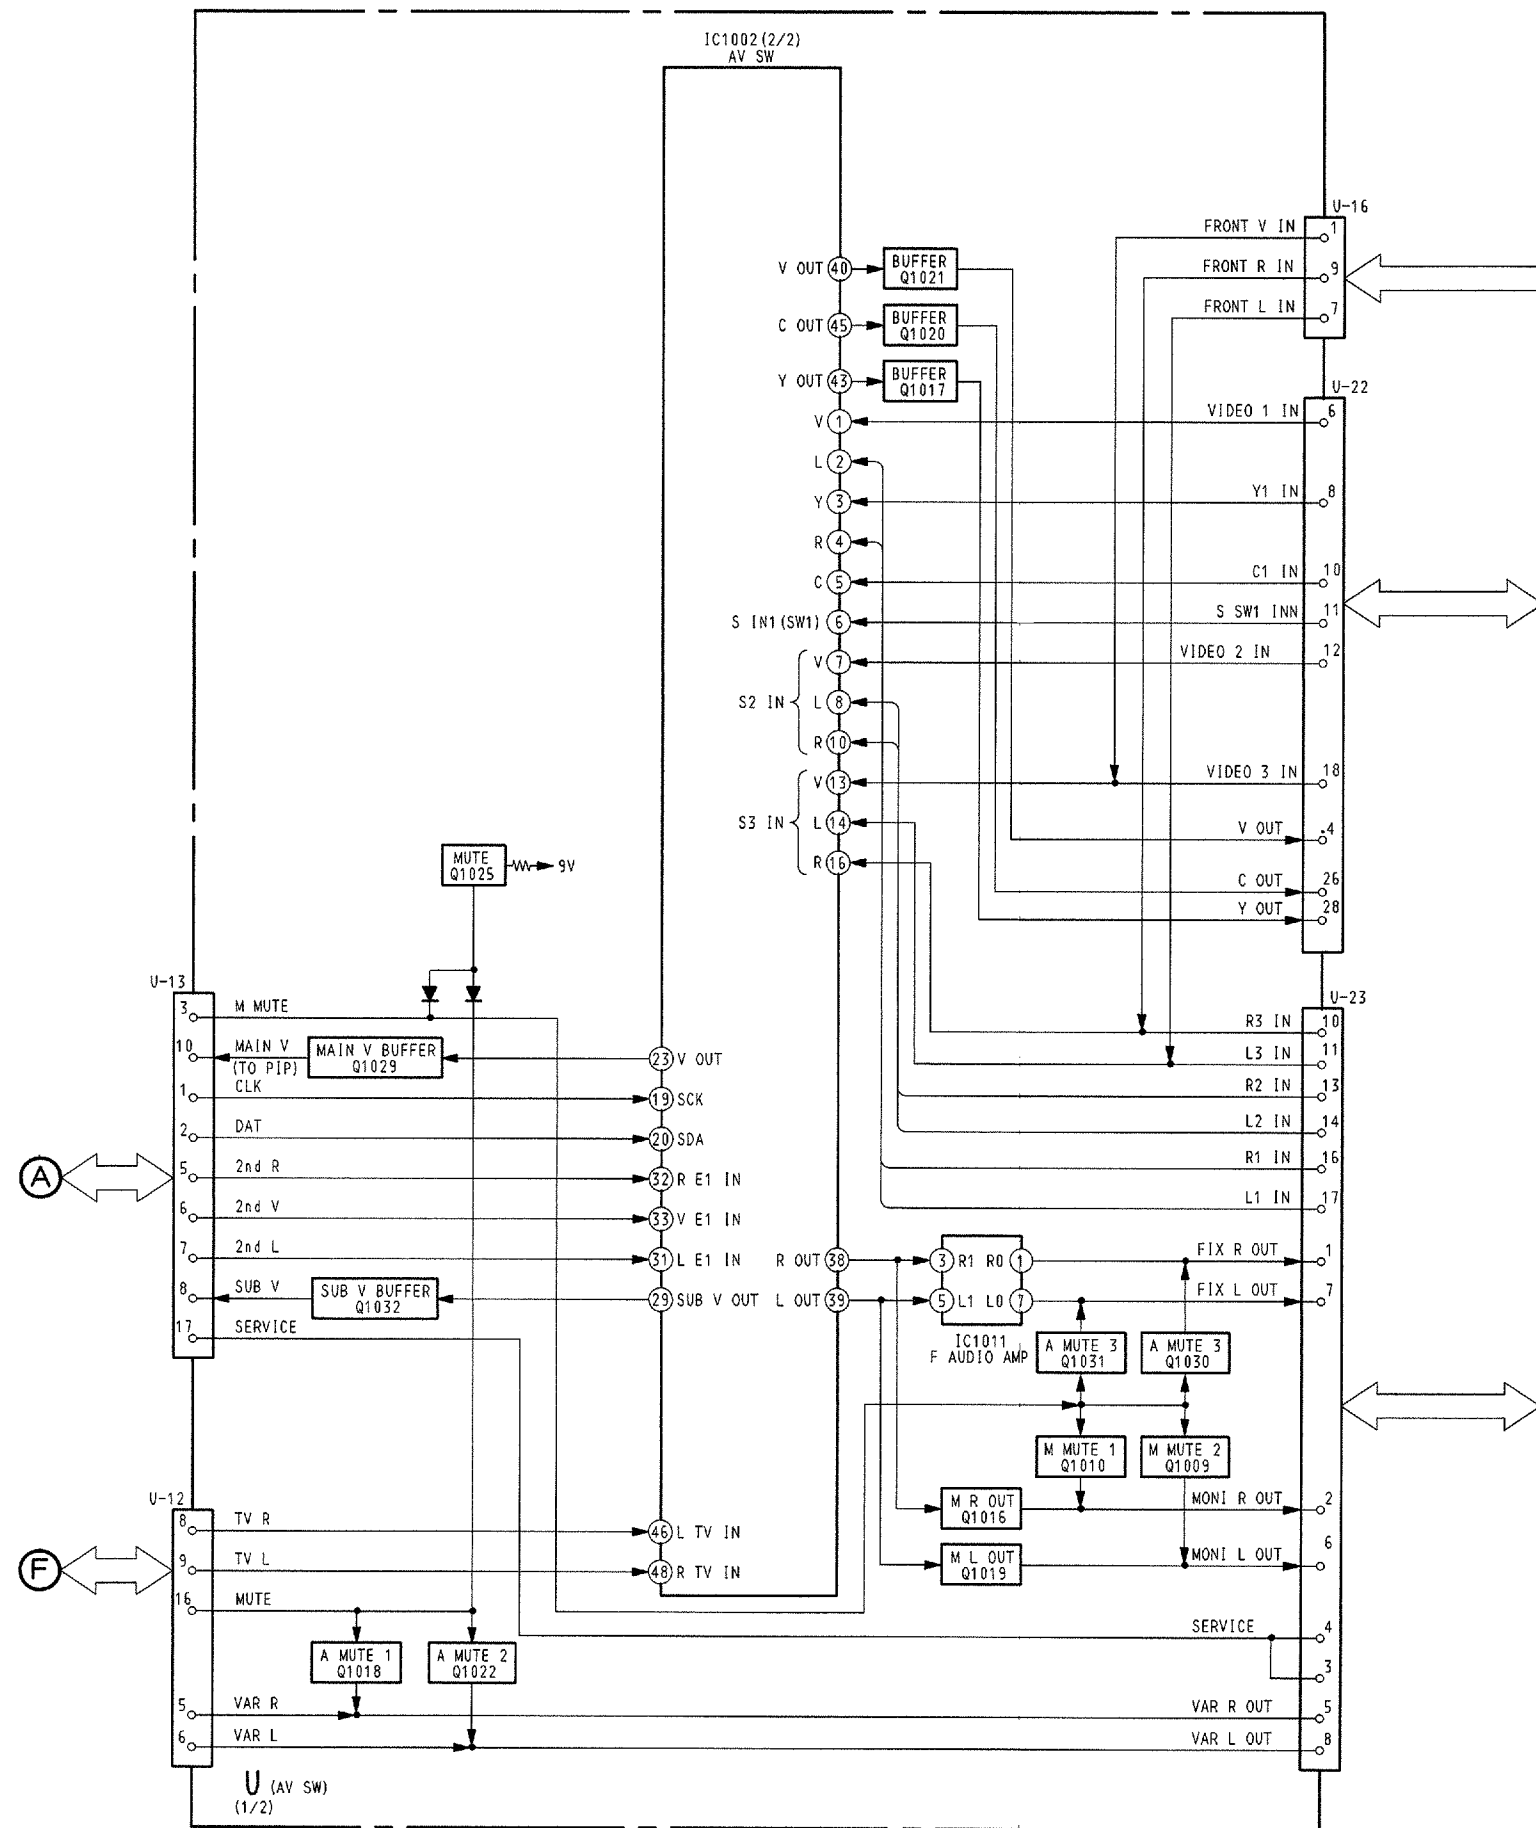



— UT Board —

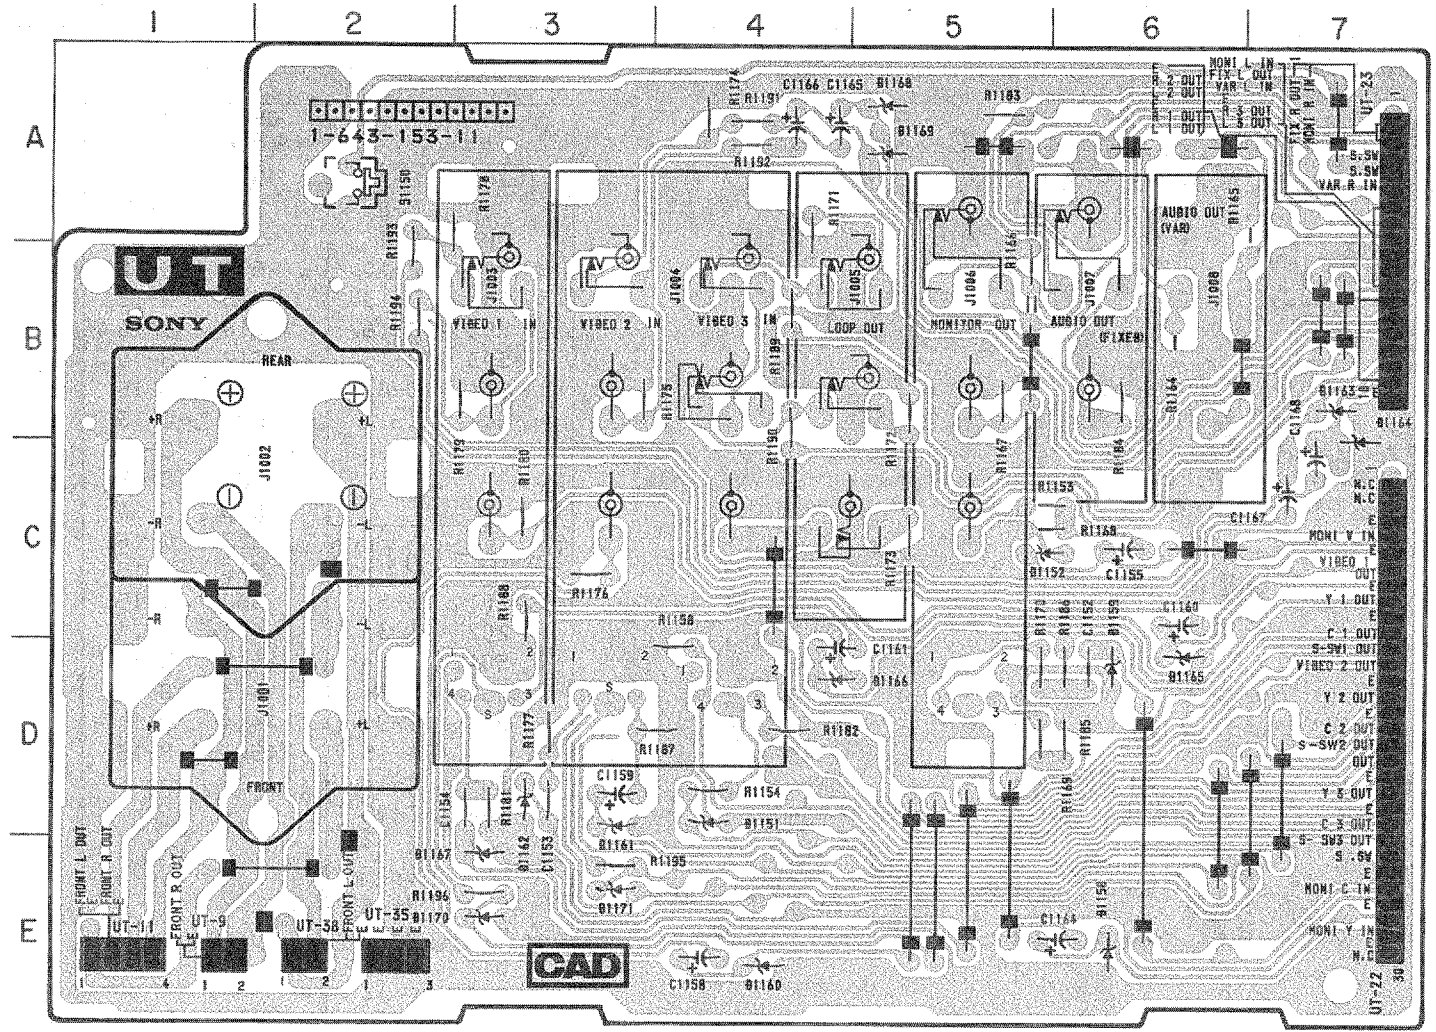


— UT Board —

DIODE	
Ø1151	Ø-4
1152	E-5
1158	E-6
1159	Ø-6
1160	E-4
1161	Ø-3
1162	Ø-3
1163	B-7
1164	B-7
1165	Ø-6
1166	Ø-4
1167	E-3
1168	A-5
1169	A-5
1170	E-3
1171	E-3



— U Board —

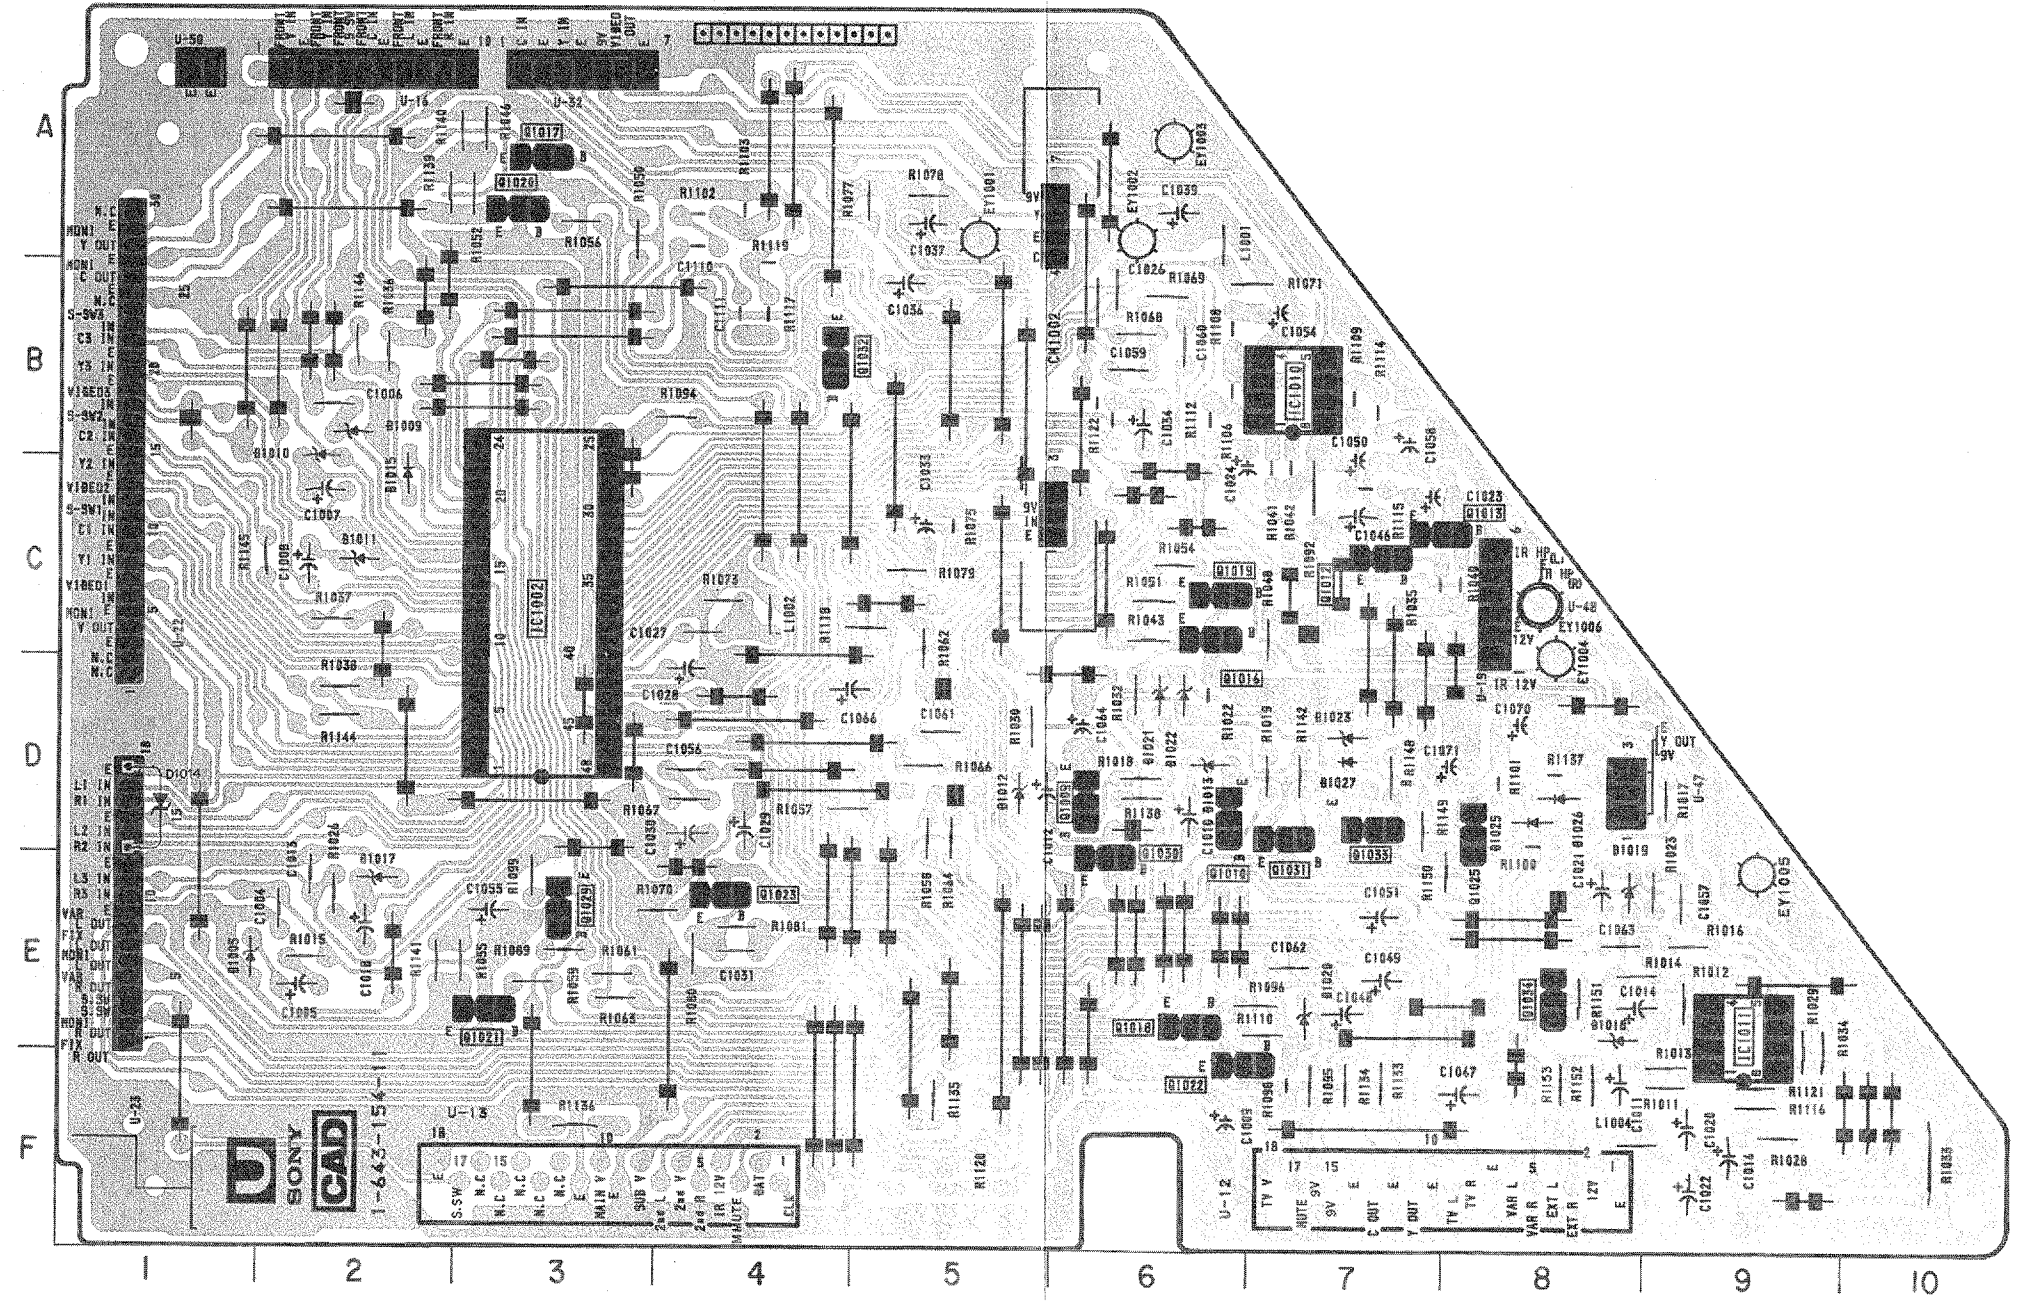


— U Board —


IC	
IC1002	C-3
1011	E-9
TRANSISTOR	
Q1009	D-6
1010	D-6
1016	C-6
1017	A-3
1018	E-6
1019	C-6
1020	A-3
1021	E-3
1022	F-6
1023	E-4
1025	D-8
1029	E-3
1030	D-6
1031	D-7
1032	B-4
1033	D-7
1034	D-7
DIODE	
Ø1005	E-1
1009	B-2
1010	B-2
1011	C-2
1012	D-5
1013	D-6
1014	D-1
1017	E-2
1018	E-8
1019	E-8
1020	E-7
1021	D-6
1022	D-6
1025	D-8
1026	D-8
1027	D-7

A TUNER-VIF/SIF, HIGH VOLTAGE CIRCUIT
H/V DEFLECTION, X-RAYS.PROT
H.PIN CORR

— A Board —

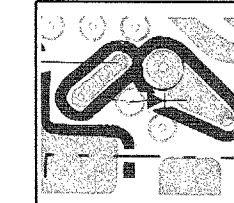


NOTE:
The circuit indicated as left contains high voltage of over 600 Vp-p. Care must be paid to prevent an electric shock in inspection or repairing.

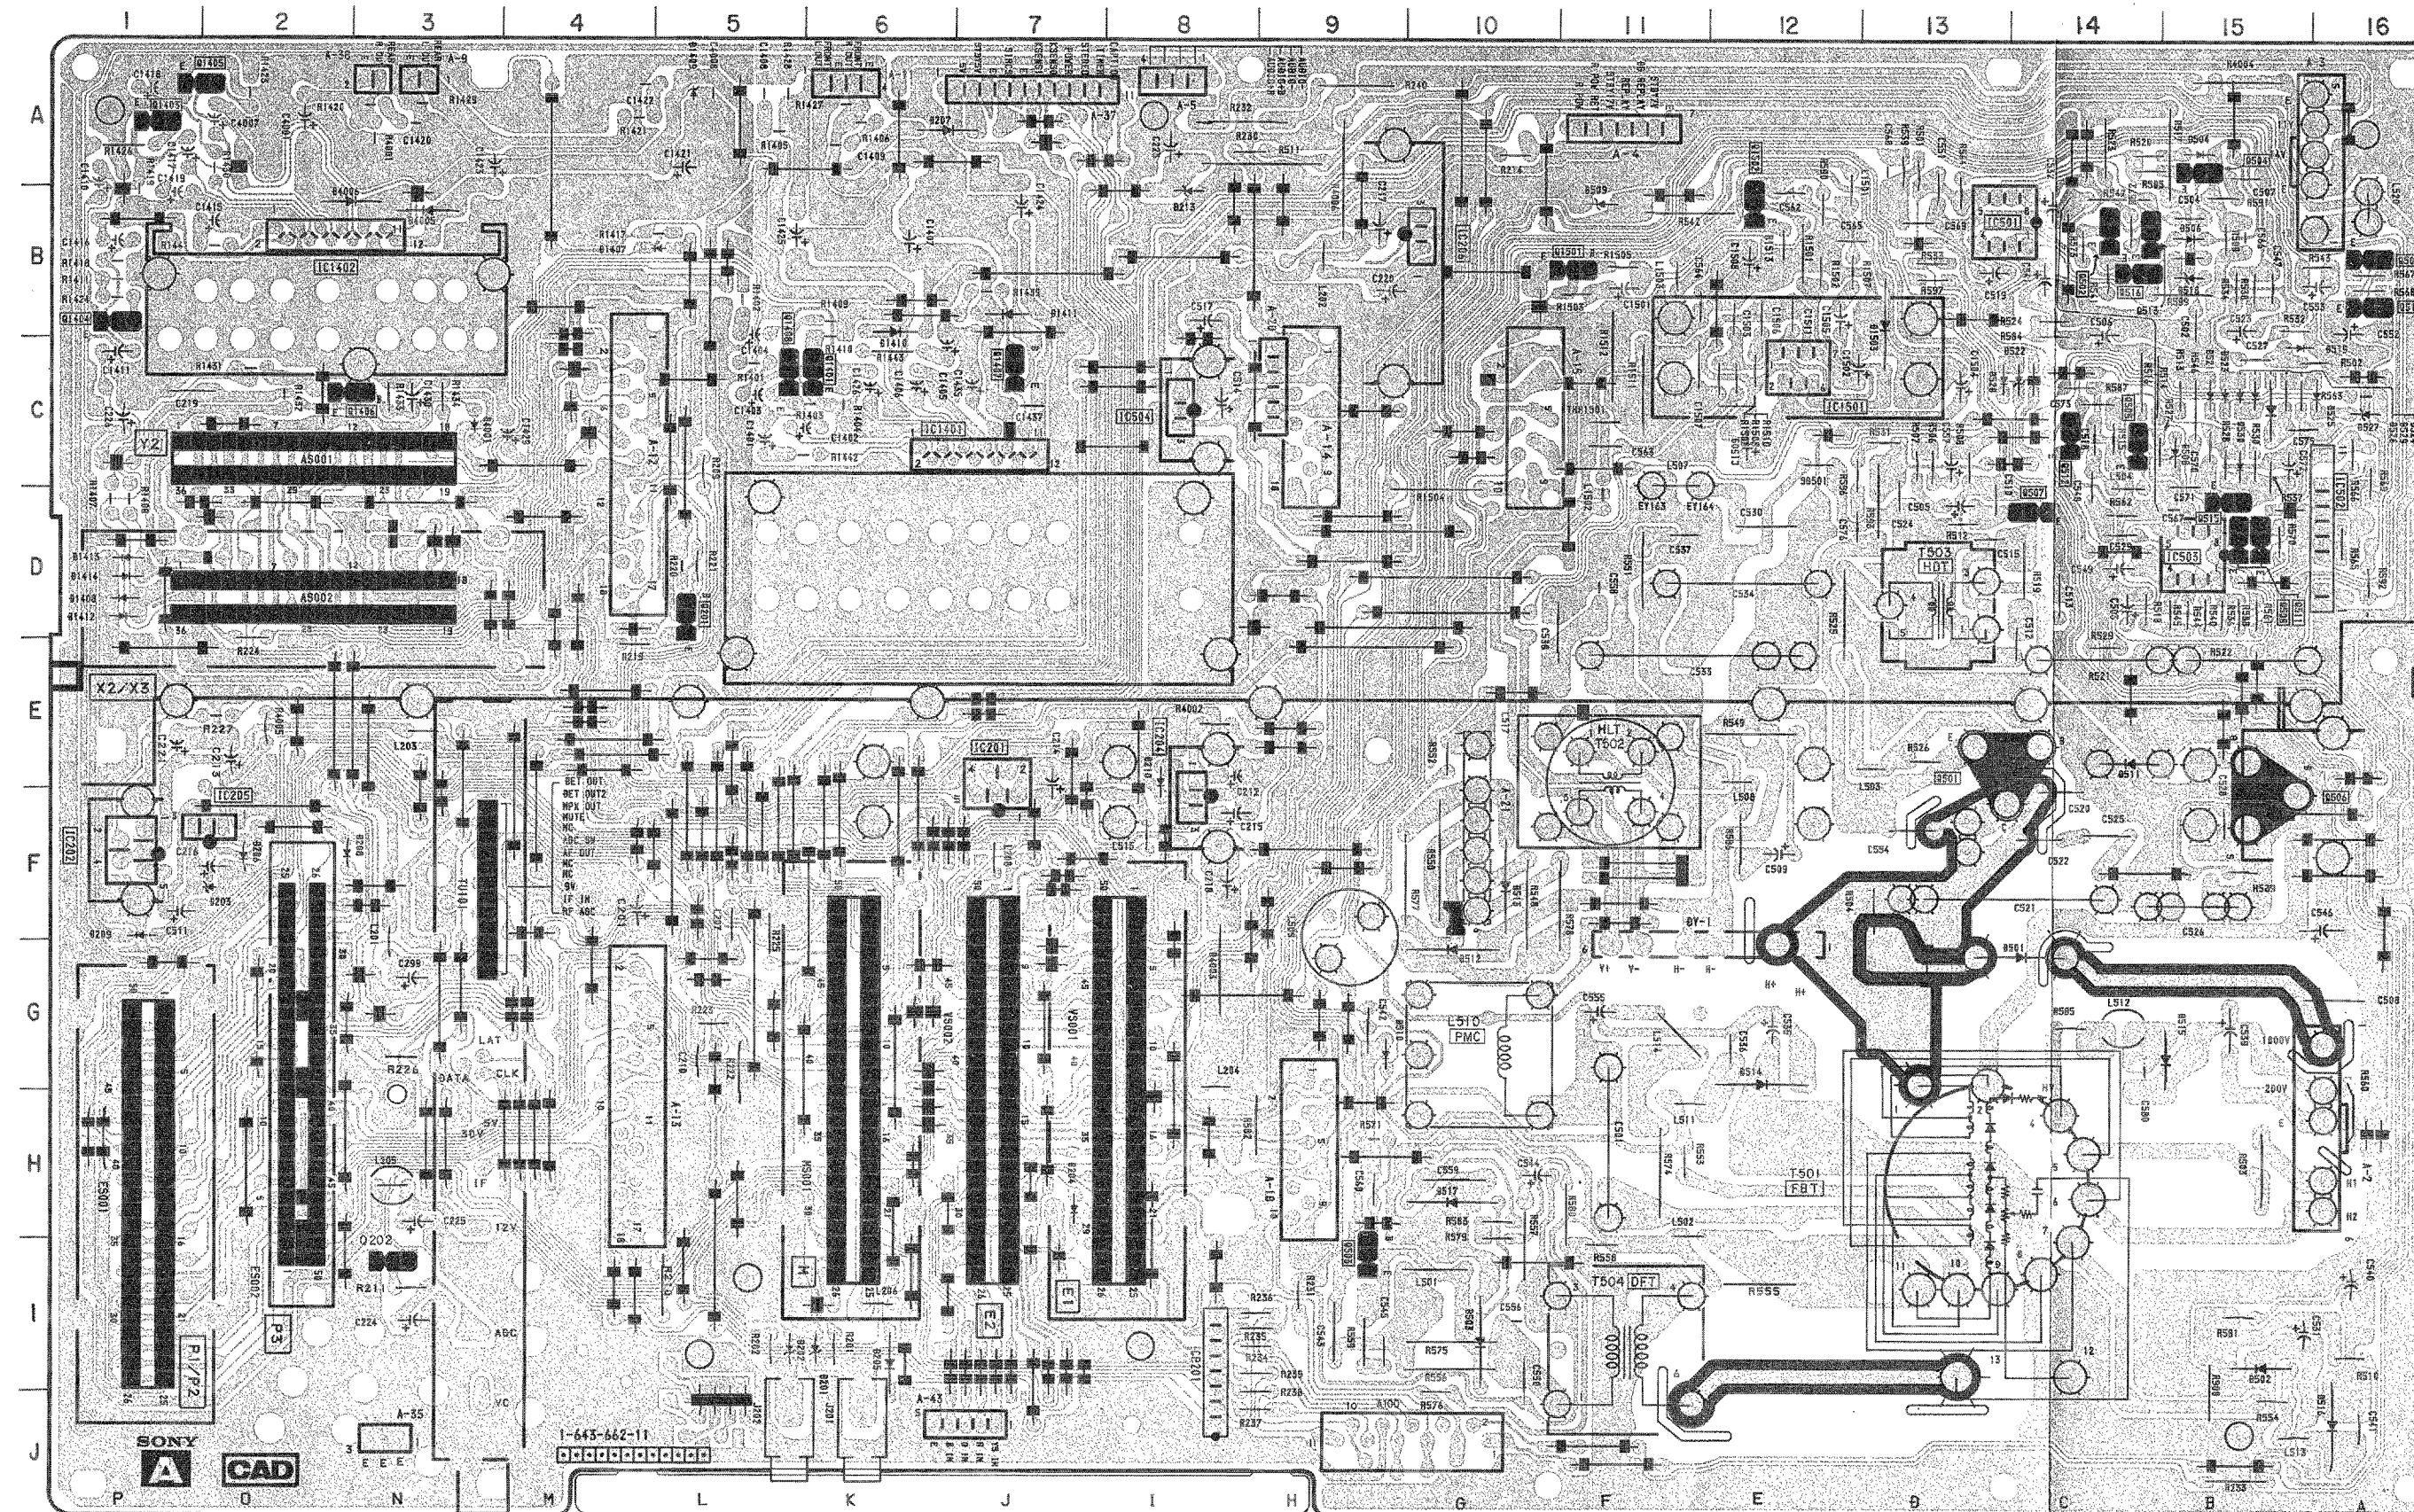


— A Board —


IC		Q509	B-11
IC201	E-7	510	G-9
204	F-8	511	E-14
205	F-2	512	G-10
206	B-10	513	F-10
501	B-13	514	G-12
502	Ø-16	515	G-15
503	Ø-15	516	J-16
504	C-8	517	H-10
1501	C-12	518	B-15
		521	C-15
		522	C-14
		524	C-15
		525	C-16
		527	C-16
		529	C-15
		530	C-15
		1408	Ø-1
		1412	Ø-1
		1413	Ø-1
		1414	Ø-1
		1503	B-13
TRANSISTOR			
Q201	Ø-5		
202	I-3		
501	E-13		
502	B-14		
503	I-9		
504	A-15		
505	C-14		
506	E-15		
507	Ø-14		
508	Ø-15		
509	B-16		
510	B-16		
511	Ø-15		
512	C-14		
513	B-14		
515	Ø-15		
516	B-14		
1501	B-11		
1502	B-12		
DIODE			
D201	I-6		
202	I-5		
204	H-7		
205	I-6		
206	A-2		
207	F-6		
208	F-2		
209	F-1		
213	A-8		
501	G-14		
502	I-5		
503	I-10		
504	A-15		
506	B-15		
508	C-15		

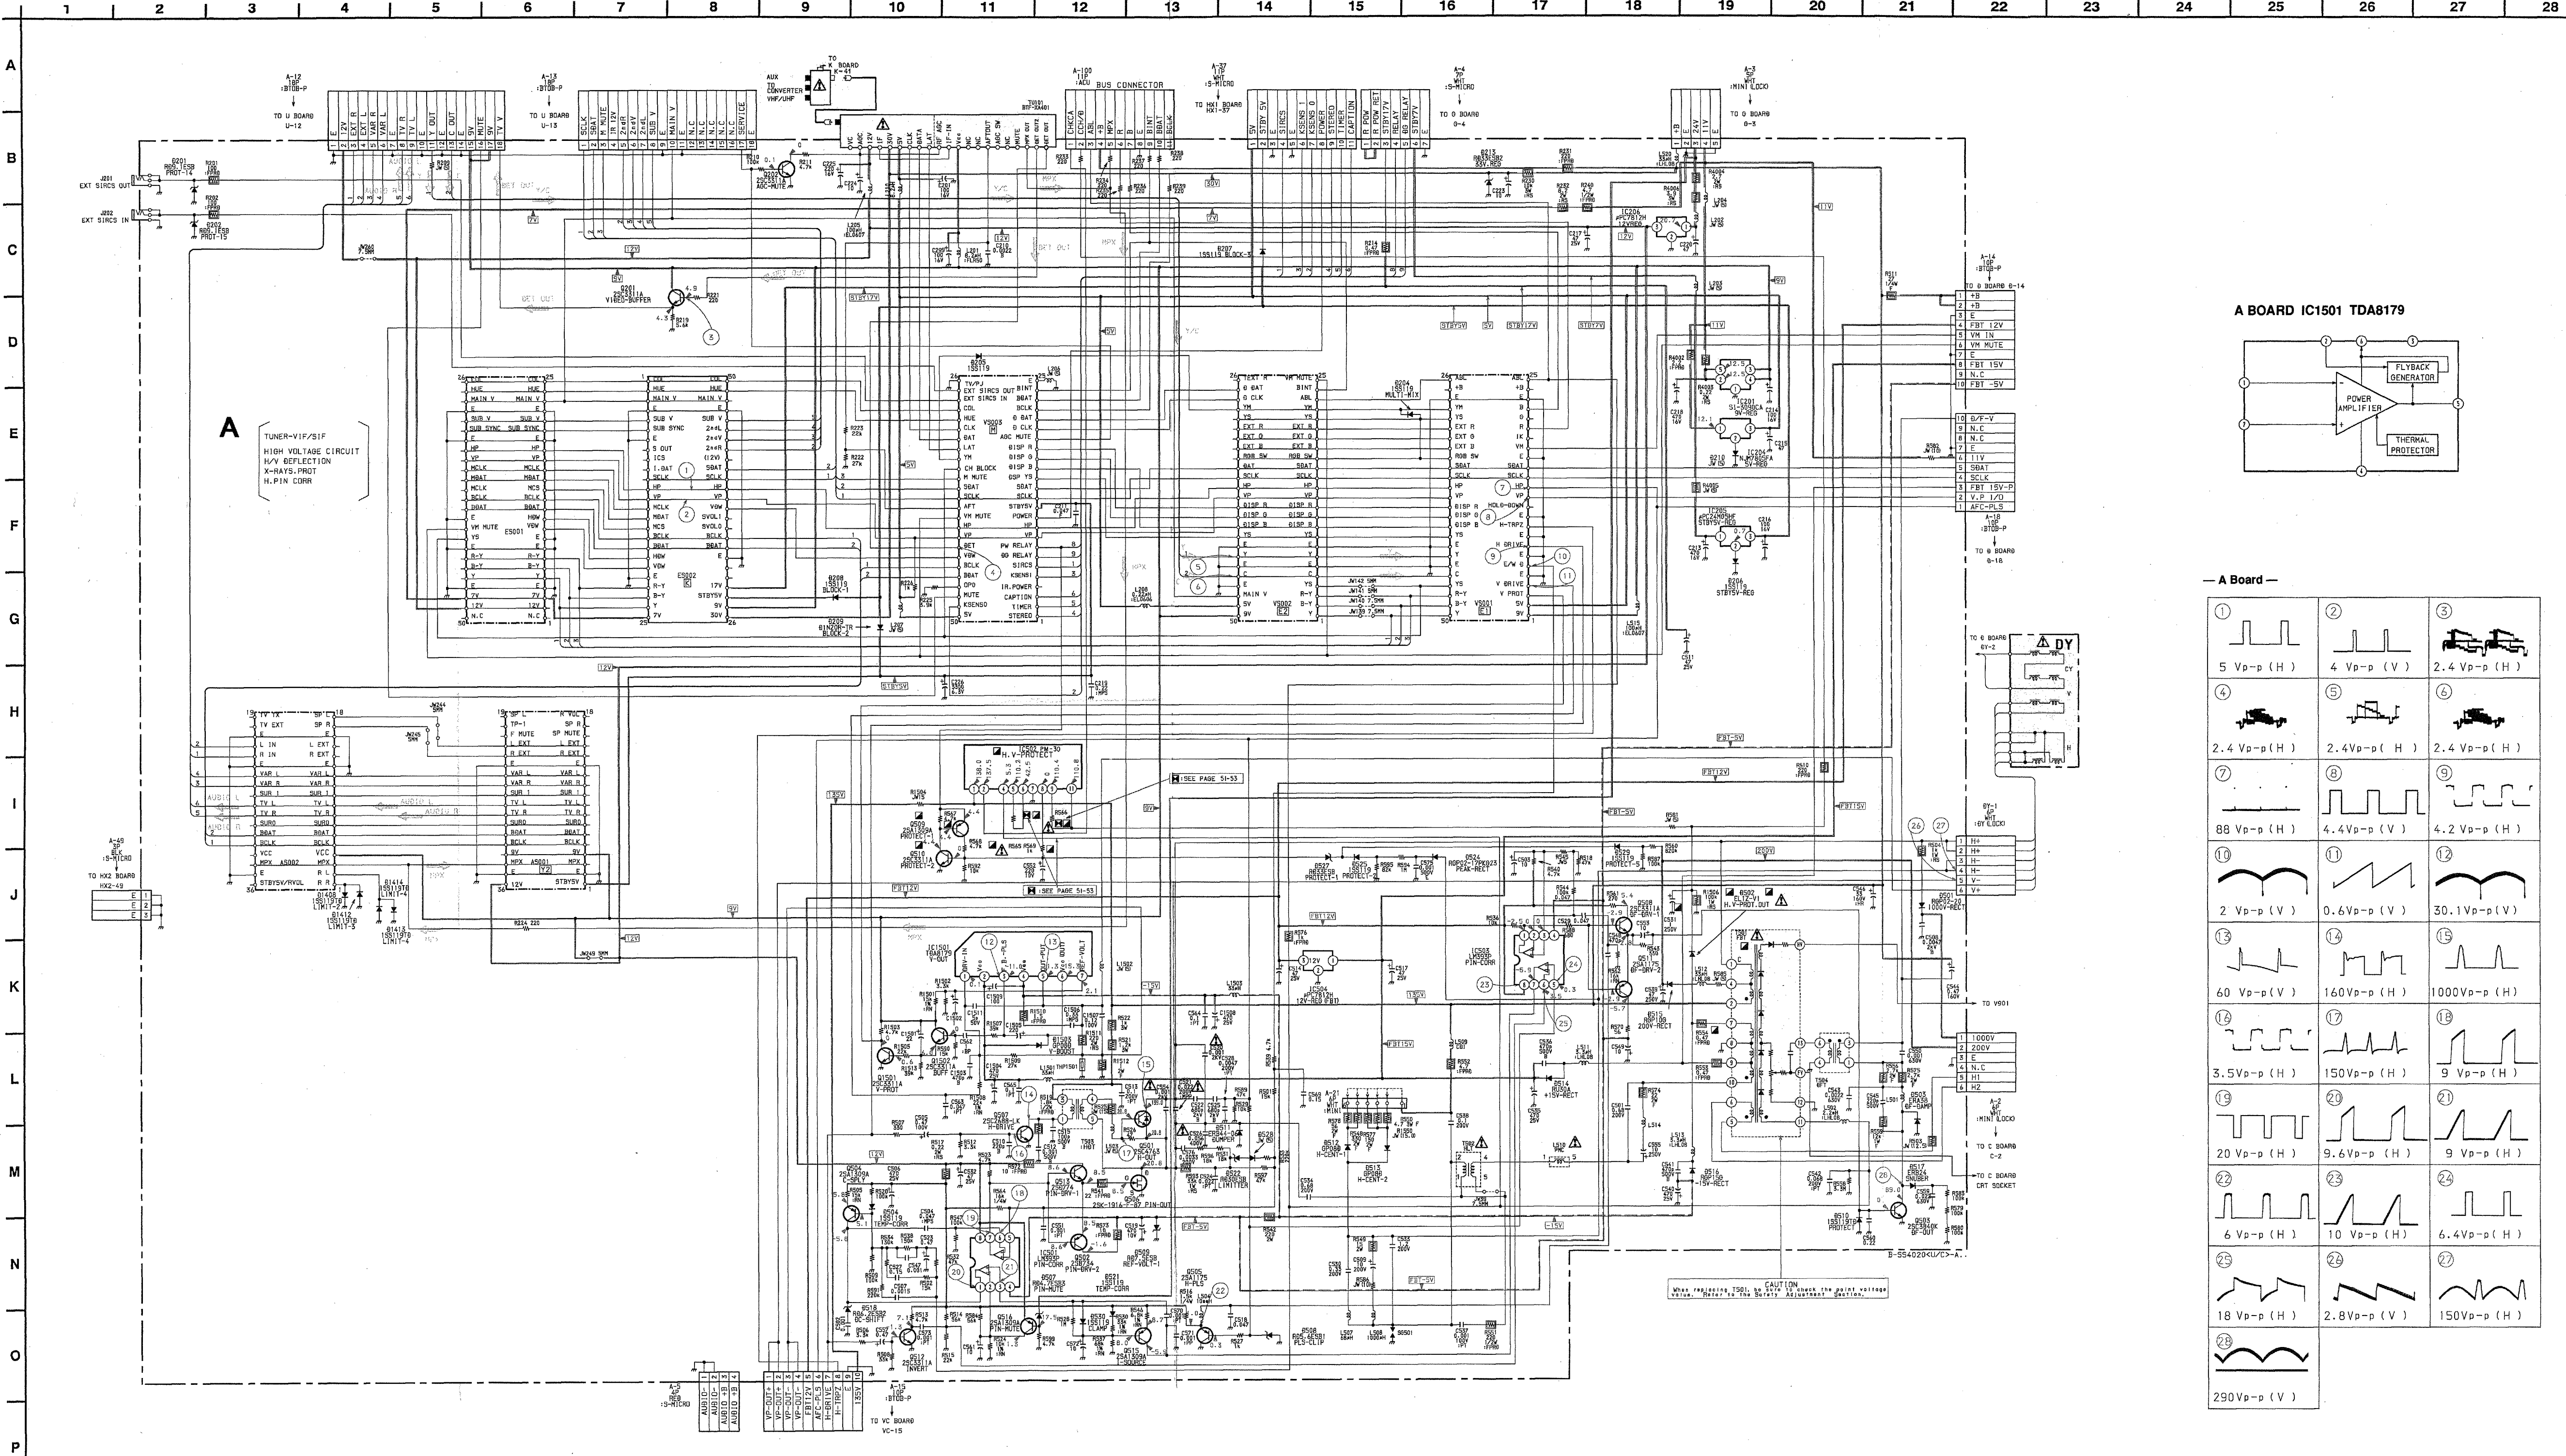

A BOARD IC1501 TDA8179

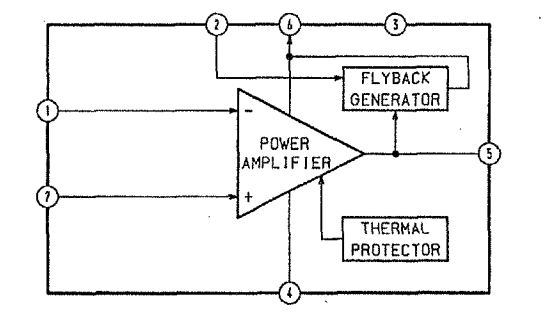


- A Board -

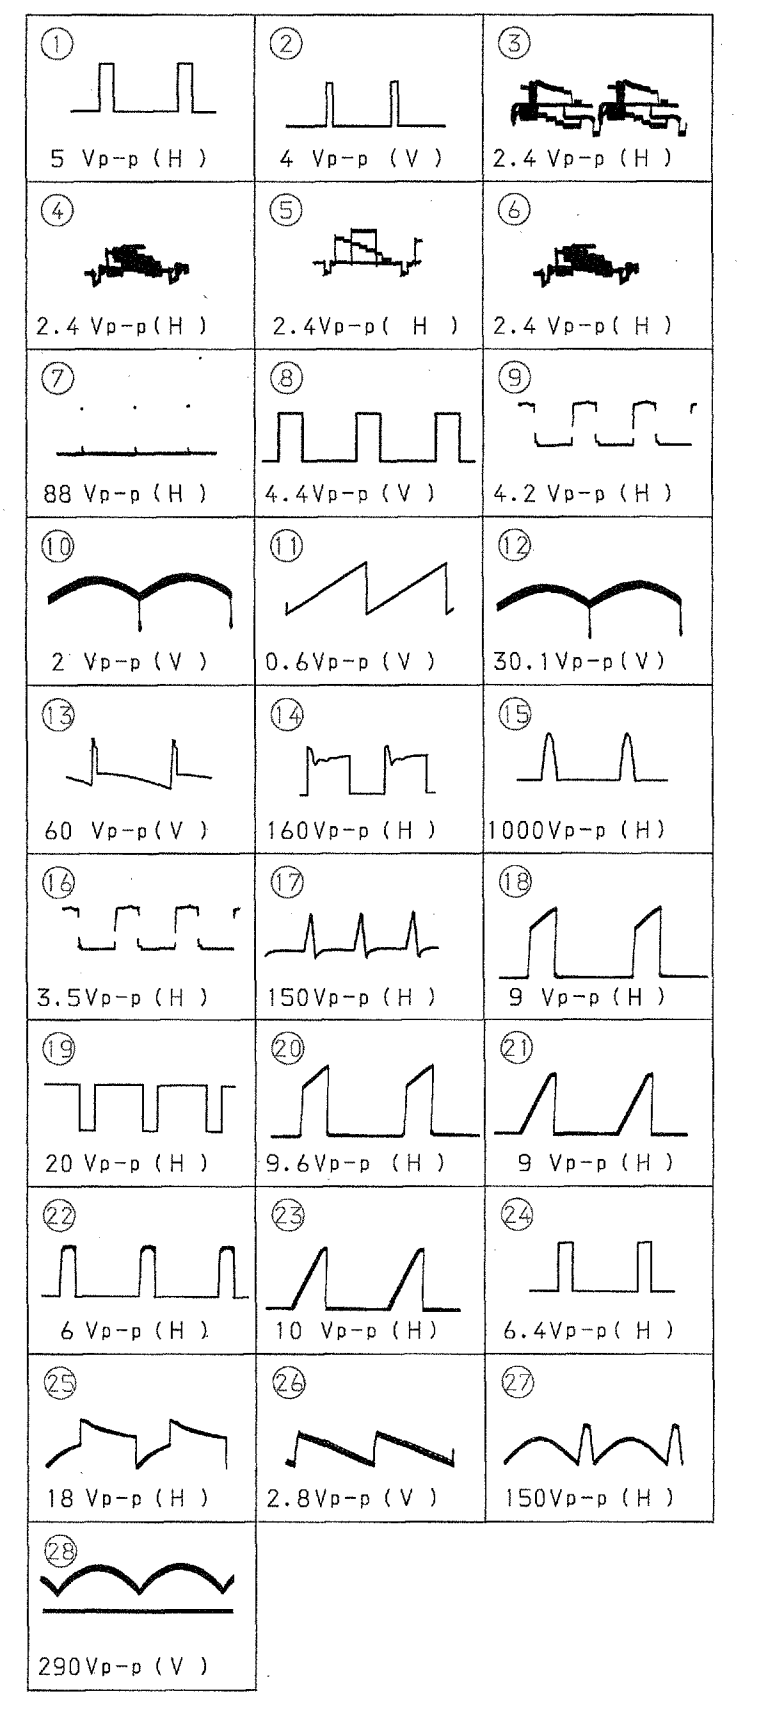


A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

E1 BOARD IC302 CXA1465AS

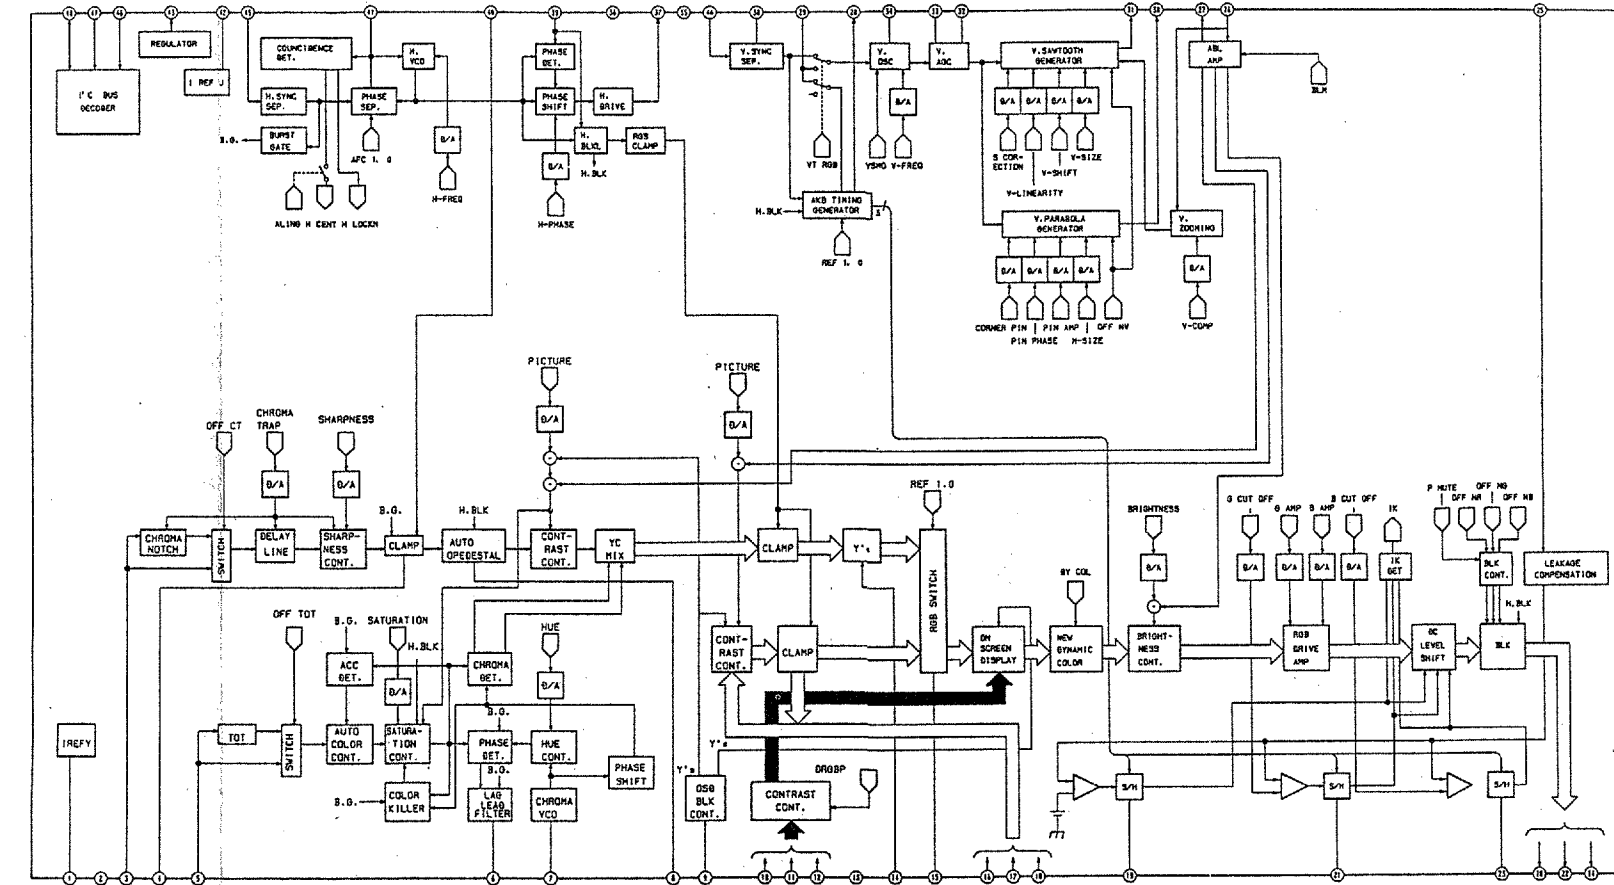


- E1 Board -

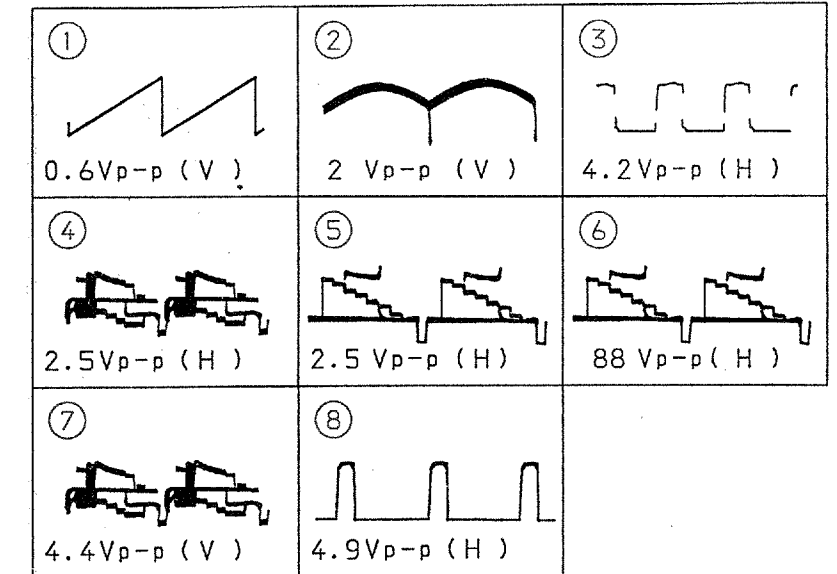

CAUTION (US MODEL ONLY)
This set is equipped with a polarized ac power cord plug (one blade of the plug is wider than the other). When replacing the ac power cord, be sure to connect it with specified part number as shown in this diagram.

CAUTION
When taking a broken fuse F602 off, discharge 500MA C604 to avoid shock hazard.


The Voltage value of 0601-504 & IC654 @ pin is the reference value between the IC654 @ pin.

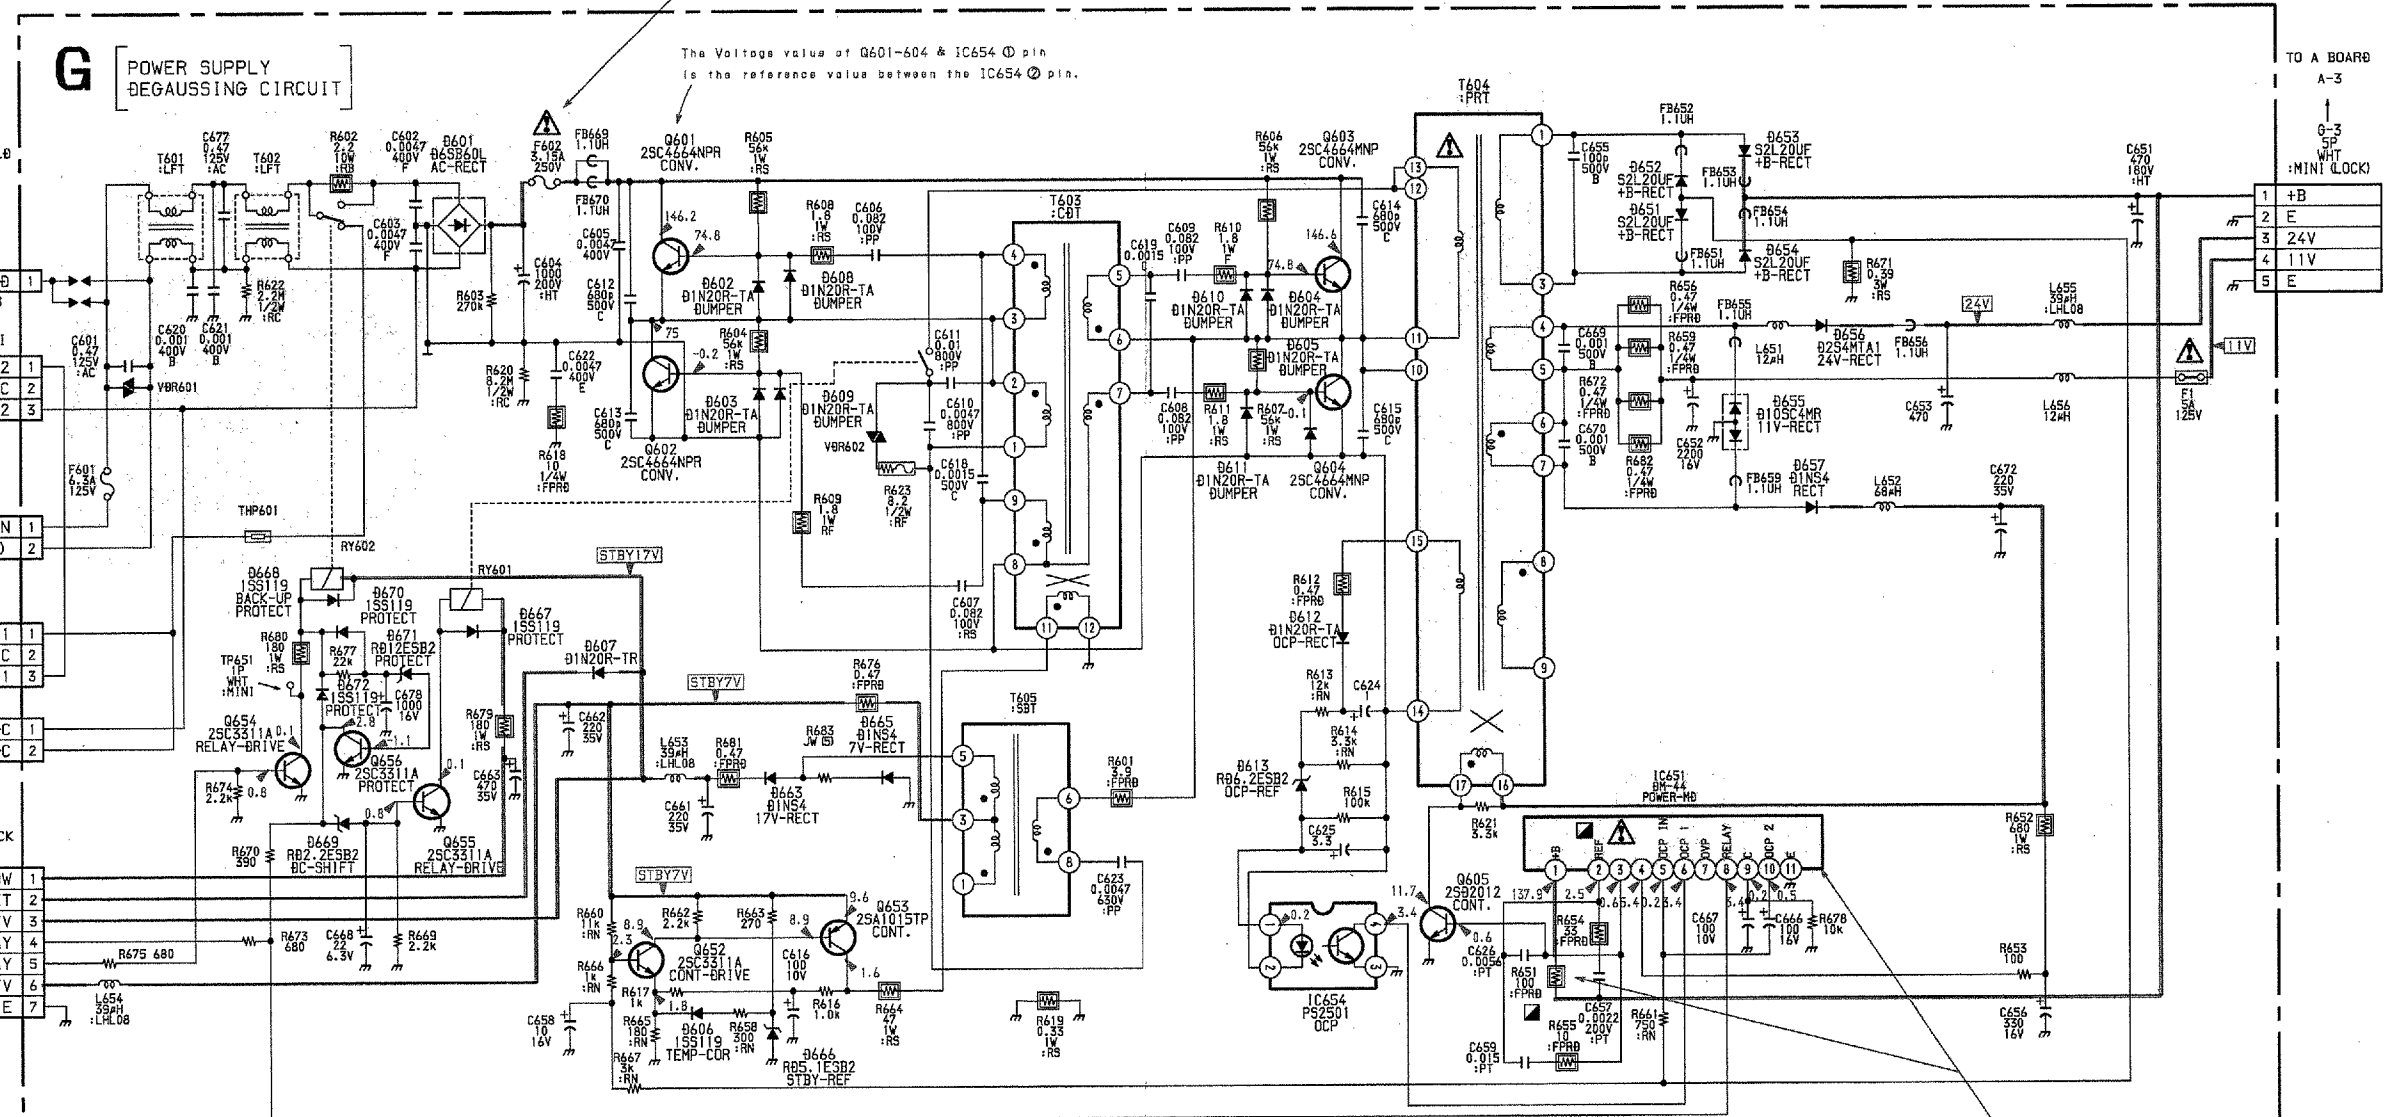

CAUTION
As there are two kinds of ground on this board, be careful when measuring the voltages.

CAUTION
When replacing IC651 and R651, be sure to check the 04 line voltage value. Refer to the Safety Adjustment Section. SEE PAGE 51-53

B-554020-4/C-0-1

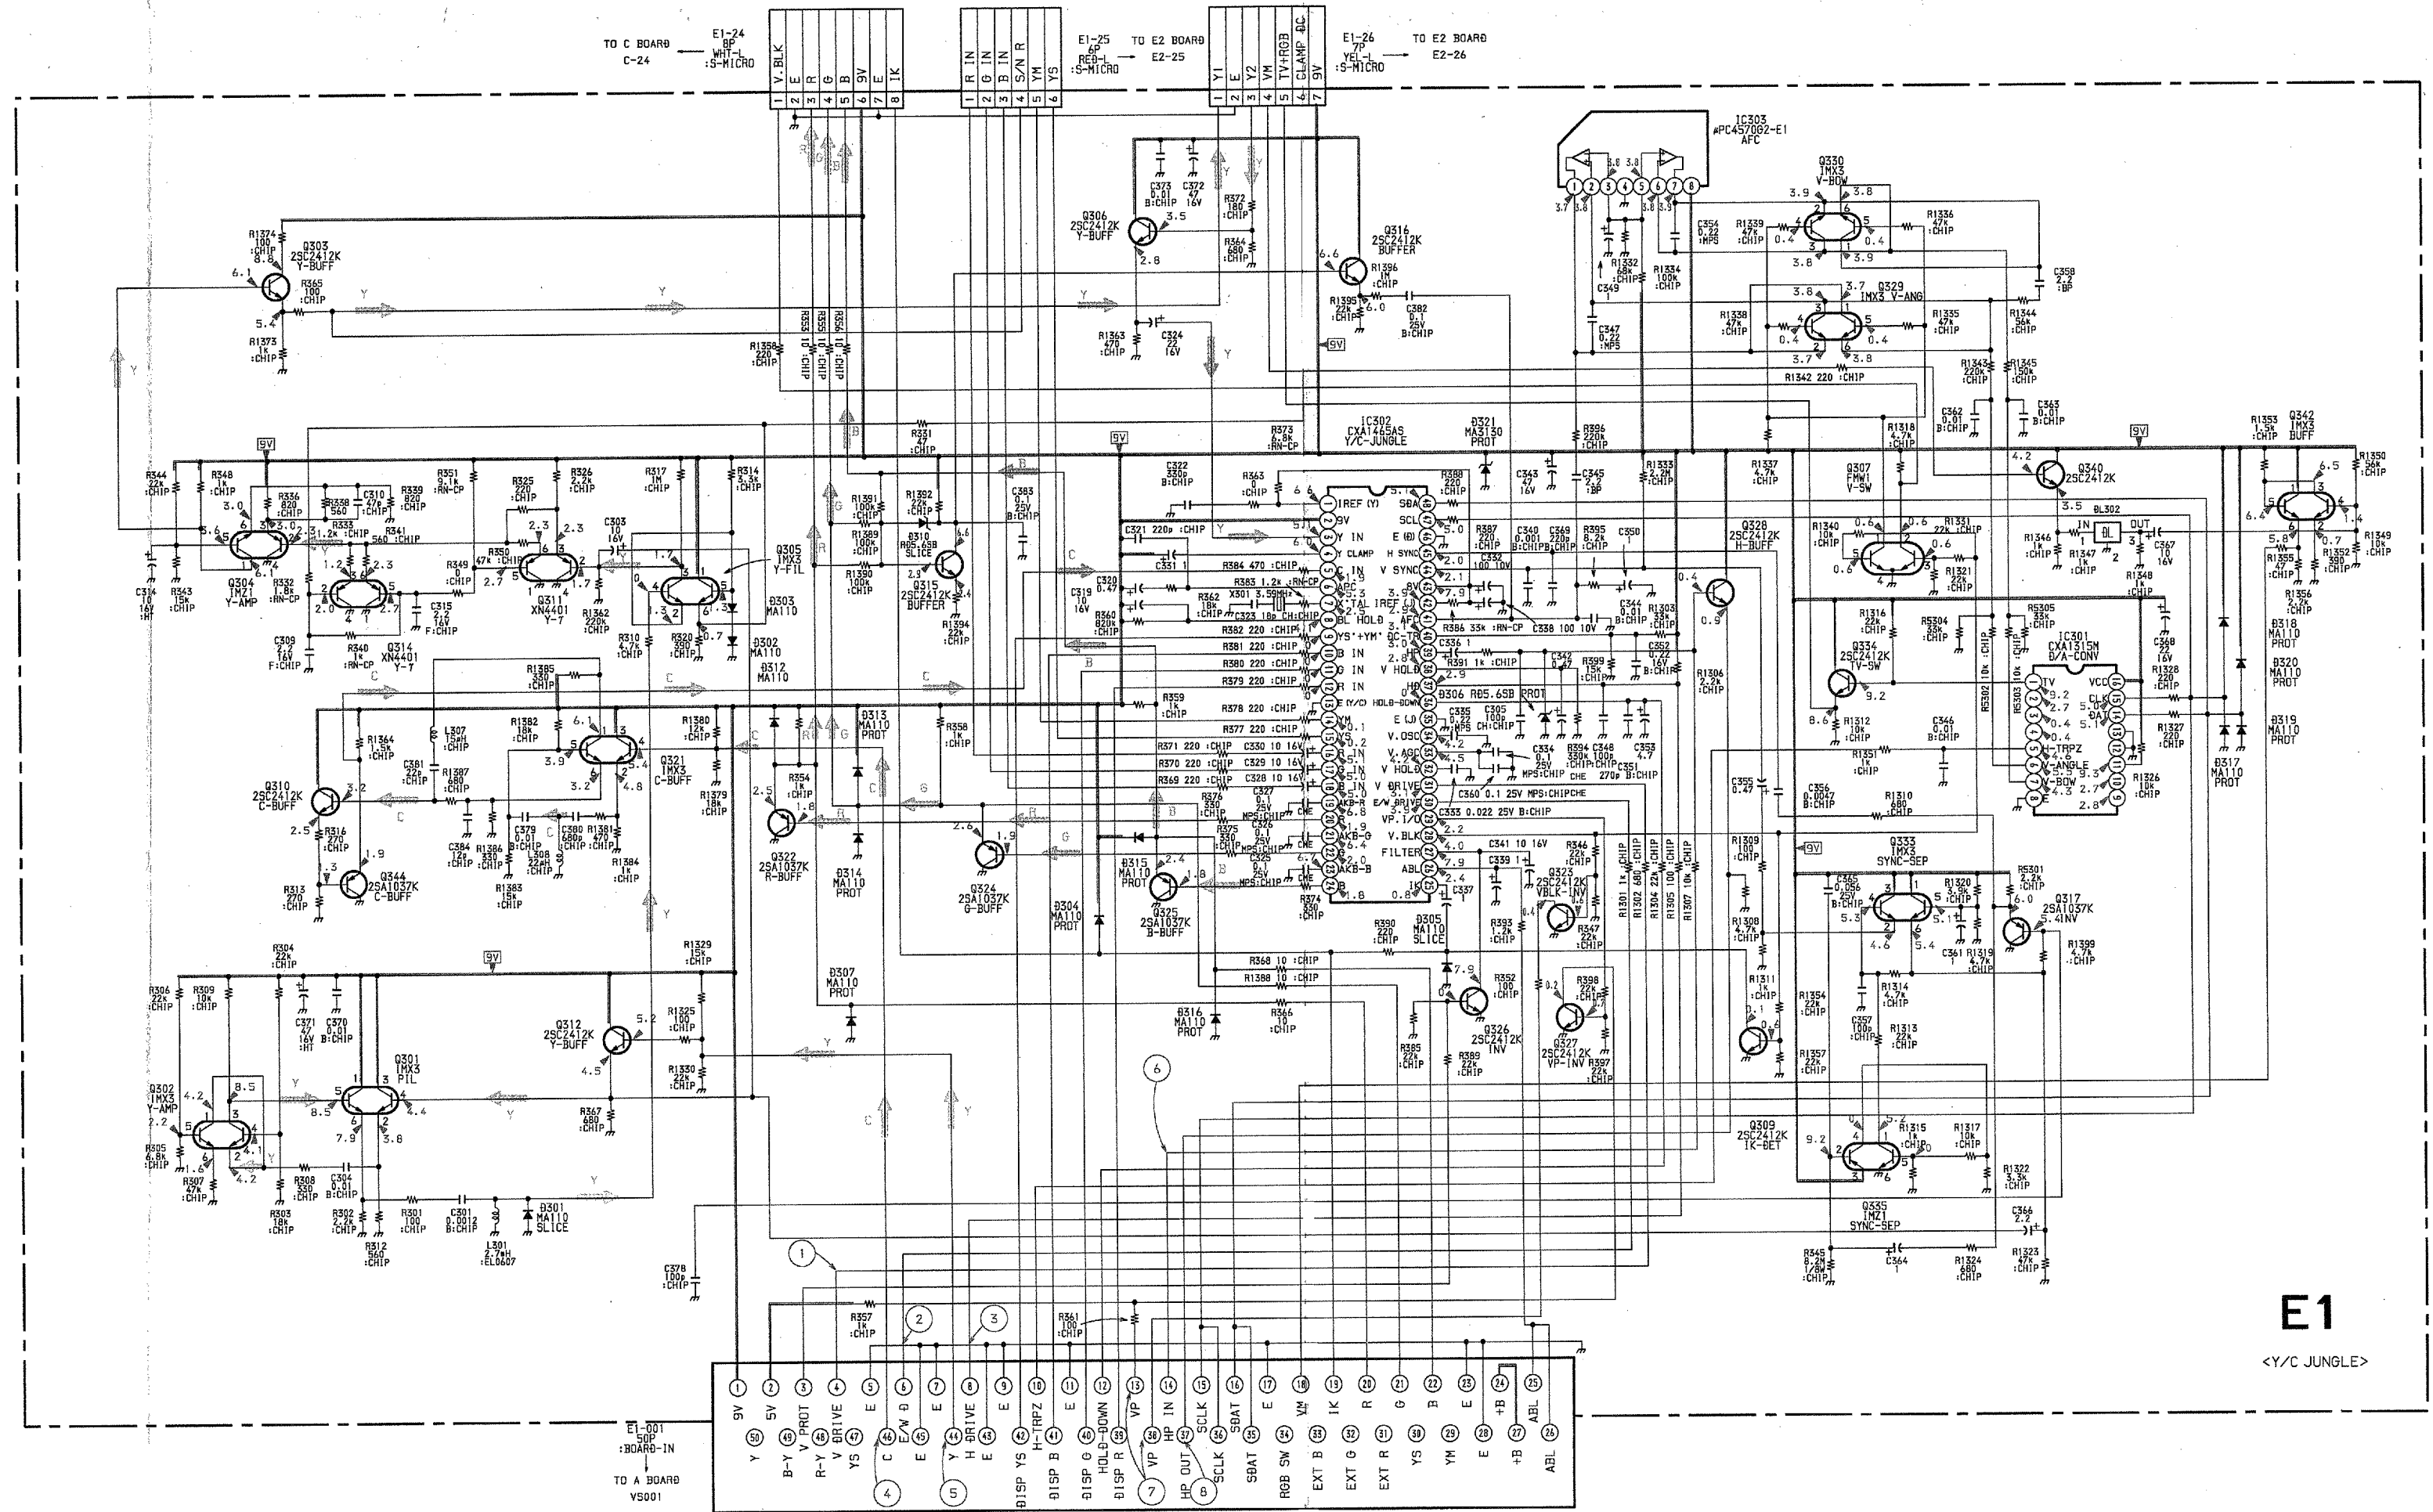

E1



<Y/C JUNGLE>

B-554020-4/C-0-E1

E1 [Y/C JUNGLE]


• : Pattern from the side which enables seeing.
• : Pattern of the rear side.

— E1 Board —

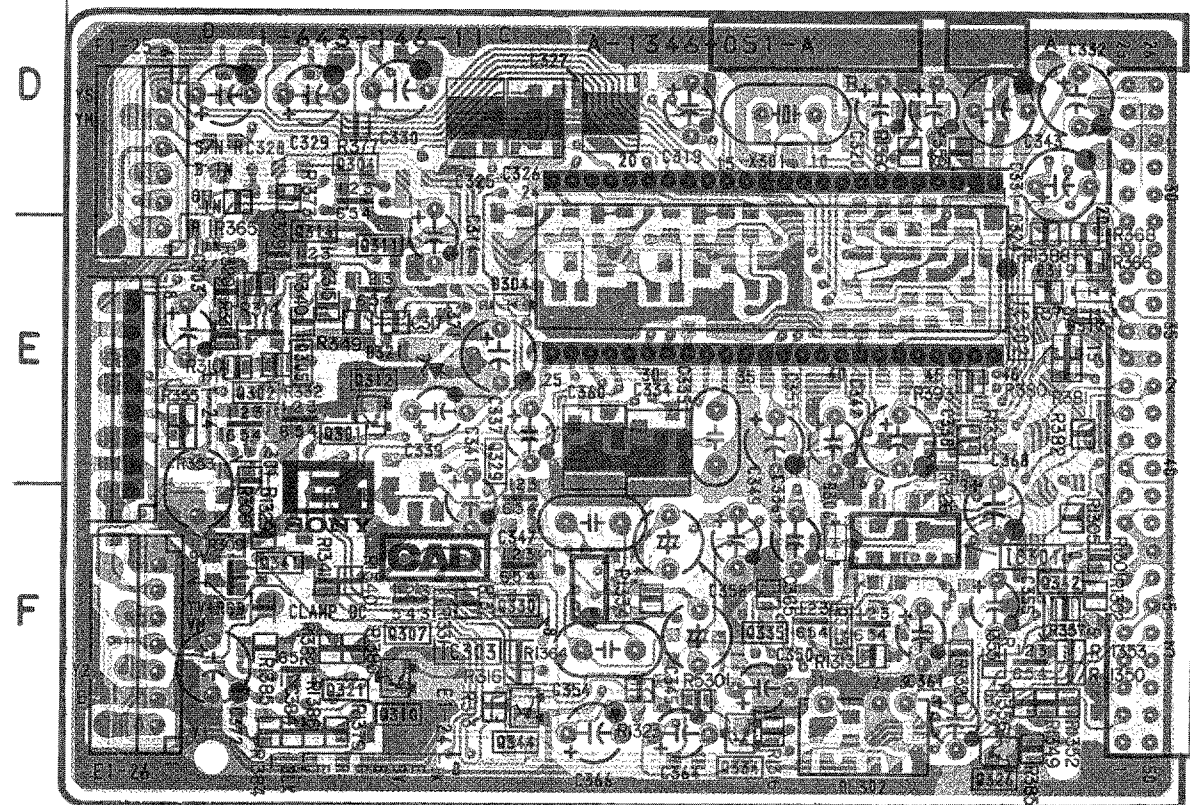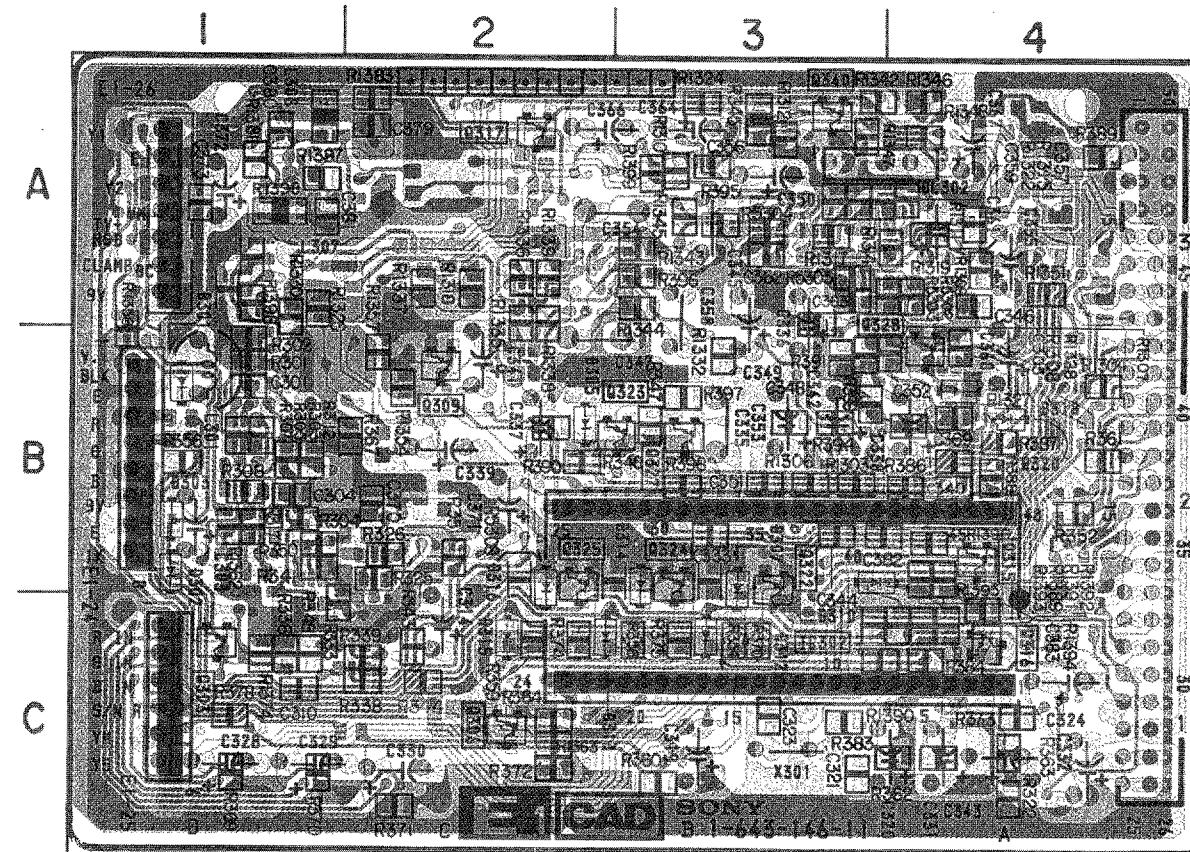

G [POWER SUPPLY, DEGAUSSING CIRCUIT]

— G Board —

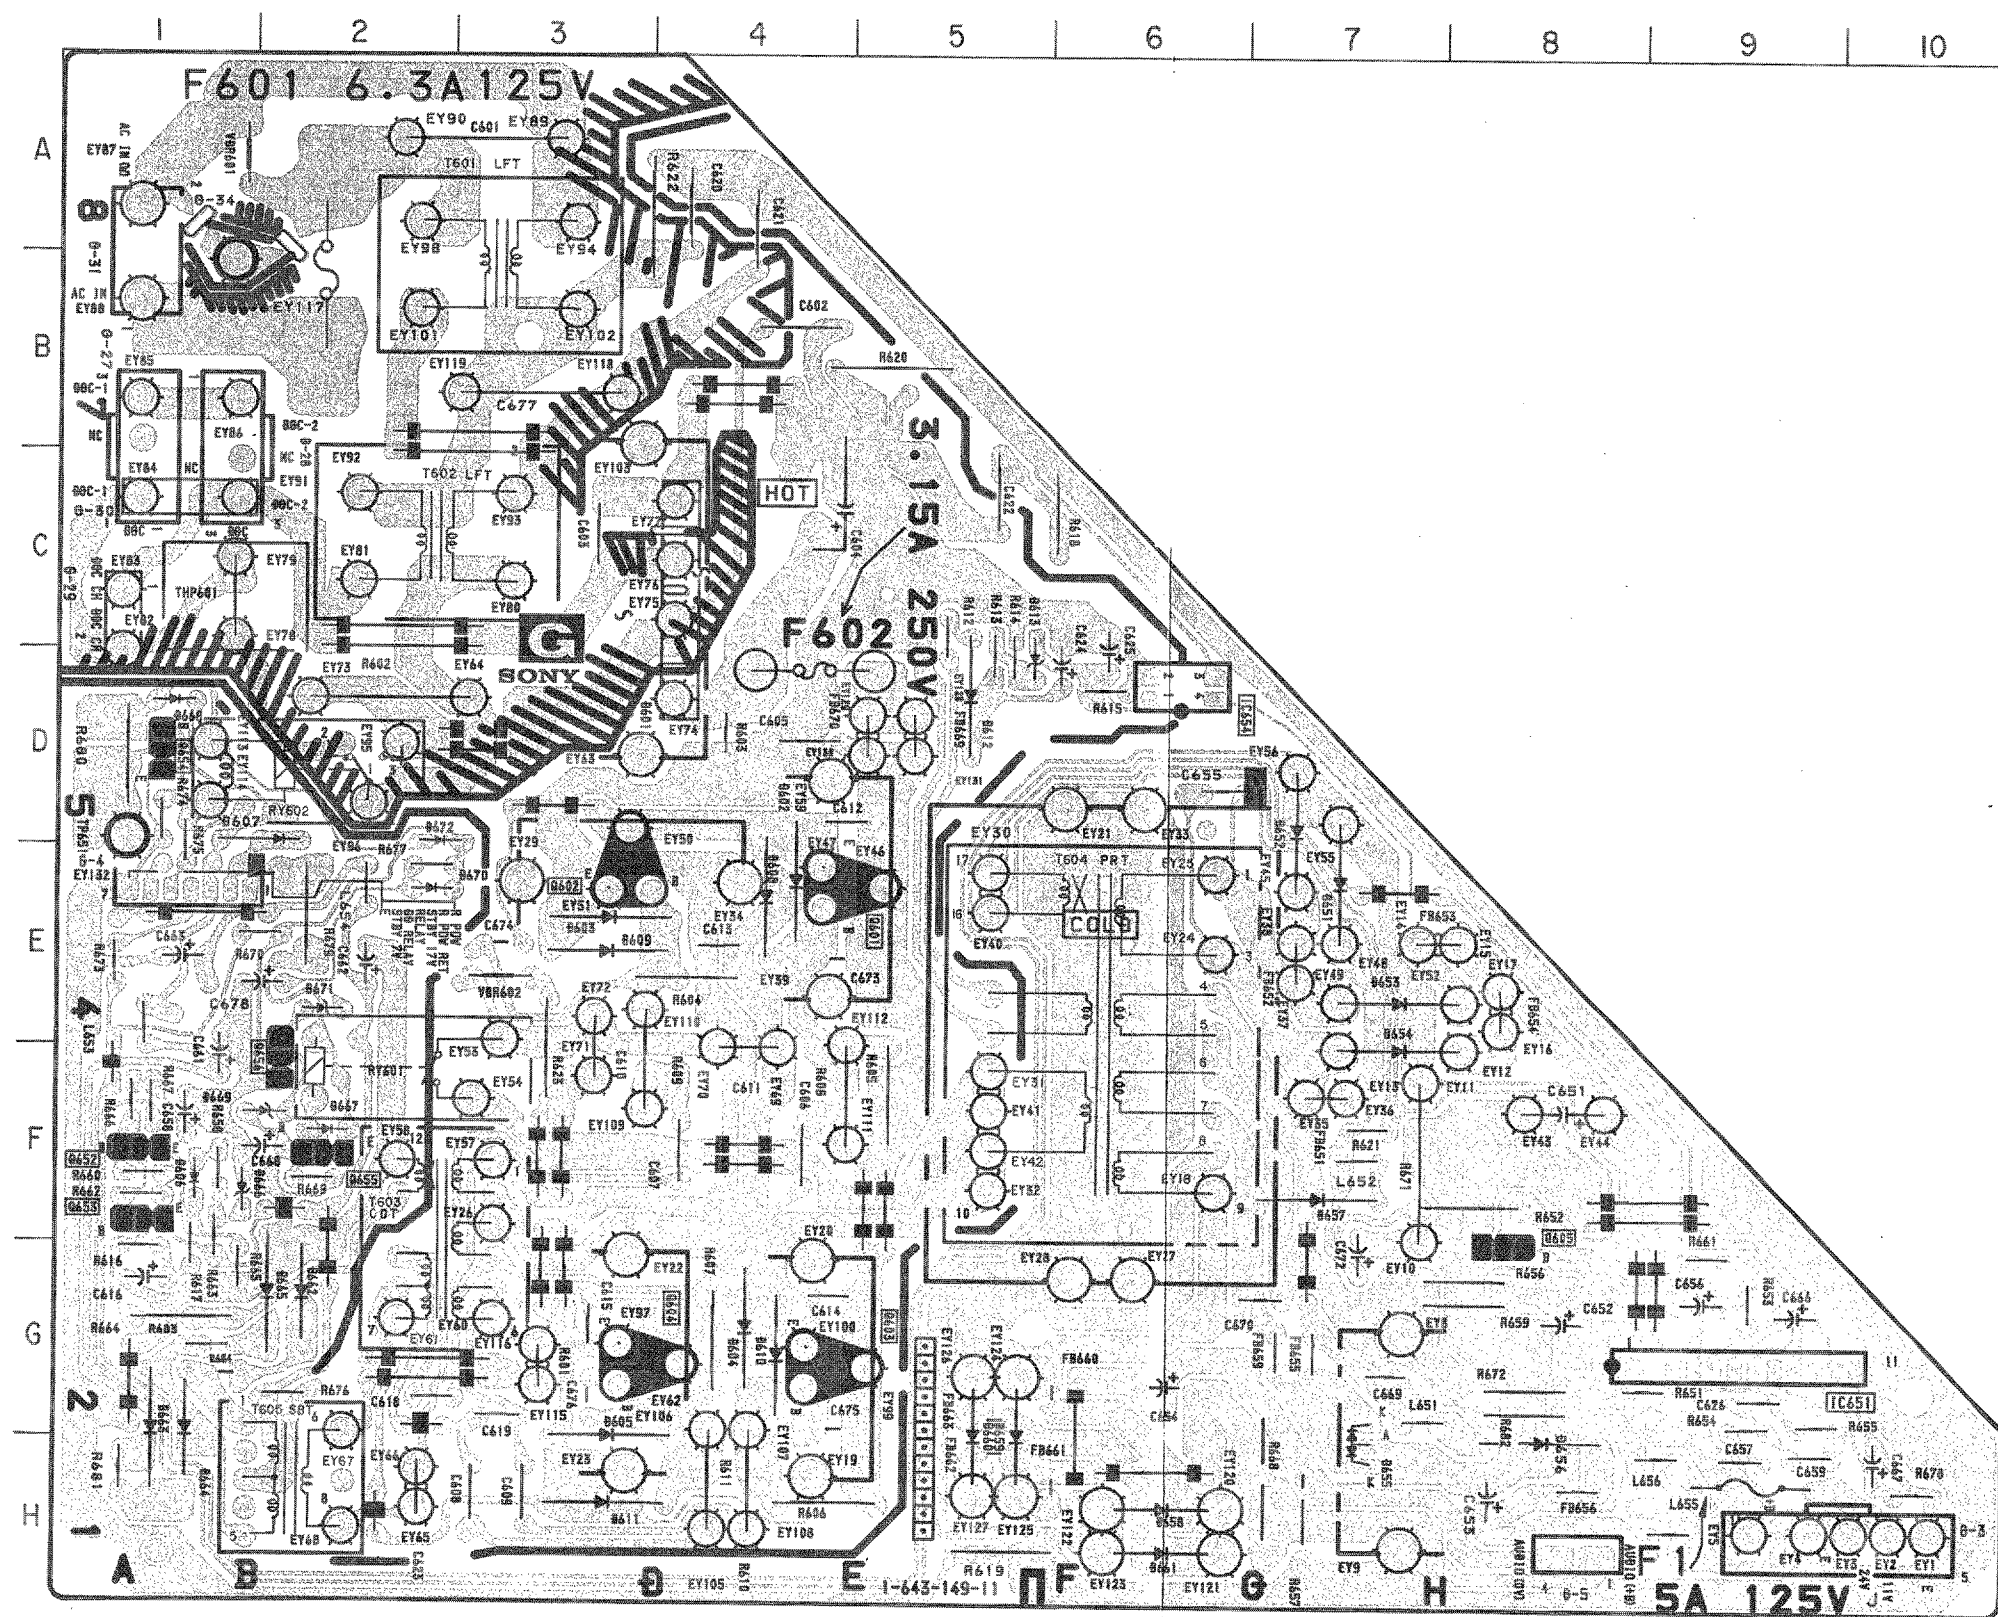

— E1 Board —


IC		D319	E-4
IC301	F-4	320	B-4
302	B-3	321	E-2
303	F-2		
TRANSISTOR			
Q301	E-2		
302	E-1		
303	C-1		
304	D-2		
305	E-1		
306	C-2		
307	F-2		
309	B-2		
310	F-2		
311	E-2		
312	E-2		
314	E-1		
315	B-4		
316	C-4		
317	A-2		
321	F-1		
322	B-3		
323	B-3		
324	B-3		
325	B-2		
326	F-4		
327	B-3		
328	B-4		
329	F-2		
330	F-2		
333	F-4		
334	F-3		
335	F-3		
340	A-3		
342	F-4		
344	F-2		
DIODE			
D301	B-1		
302	B-1		
303	B-1		
304	E-2		
305	B-2		
306	F-3		
307	B-3		
310	B-3		
312	C-3		
313	C-2		
314	B-3		
315	C-2		
316	B-2		
317	E-4		
318	B-4		

— G Board —

IC		TEST POINT
IC651	G-9	TP651 B-1
654	D-6	
TRANSISTOR		
Q601	E-4	
602	E-3	
603	G-4	
604	G-3	
605	F-8	
652	F-1	
653	F-1	
654	D-1	
655	F-2	
656	F-2	
DIODE		
D601	C-4	
602	E-4	
603	E-3	
604	G-4	
605	G-3	
606	F-1	
607	D-2	
608	E-4	
609	E-3	
610	G-4	
611	H-3	
612	D-5	
613	D-5	
651	E-7	
652	D-7	
653	E-7	
654	E-7	
655	G-7	
656	G-8	
657	F-7	
663	G-1	
665	G-2	
666	F-1	
667	F-2	
668	D-1	
669	F-2	
670	E-2	
671	E-2	
672	D-2	

HX1 [USER CONT. SW, RC SENSOR, LED]

C [R.G.B. OUT]
— C Board —

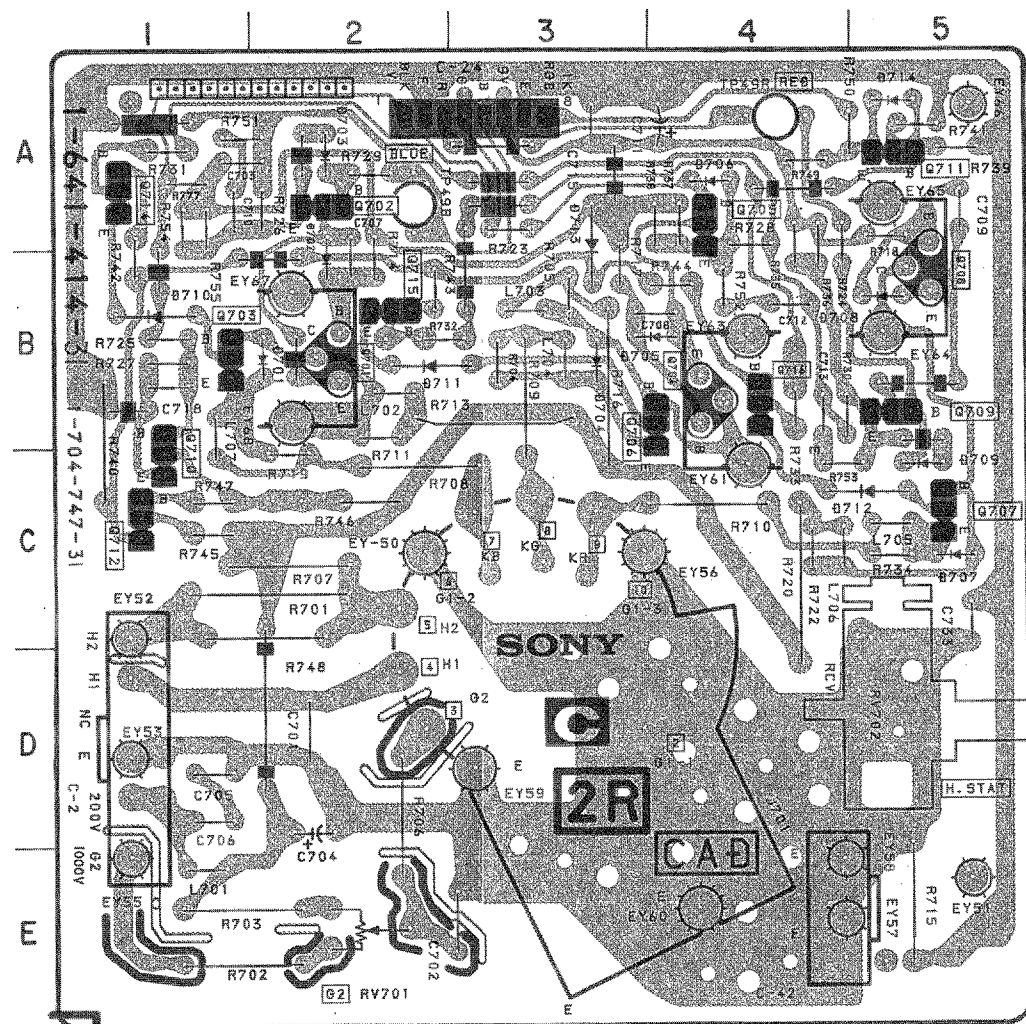

— C Board —



TRANSISTOR		VAL IABLE RESISTOR	
Q701	B-2	RV701	E-2
702	A-2	702	C-5
703	B-1	TEST POINT	
704	B-4		
705	A-4	TP49B	A-2
706	B-4	49R	A-4
707	C-5		
708	B-5		
709	B-5		
710	C-1		
711	A-5		
712	C-1		
714	A-1		
715	B-3		
716	B-4		

DIODE	
Ø701	B-2
702	B-2
703	A-2
704	B-3
705	B-4
706	A-4
707	C-5
708	B-5
709	B-5
710	B-1
711	B-3
712	C-5
713	B-3
714	A-5

E2 [SHARPNESS CONT., CHARACTER GENERATOR]

• : Pattern from the side which enables seeing.
• : Pattern of the rear side.

— E2 Board —

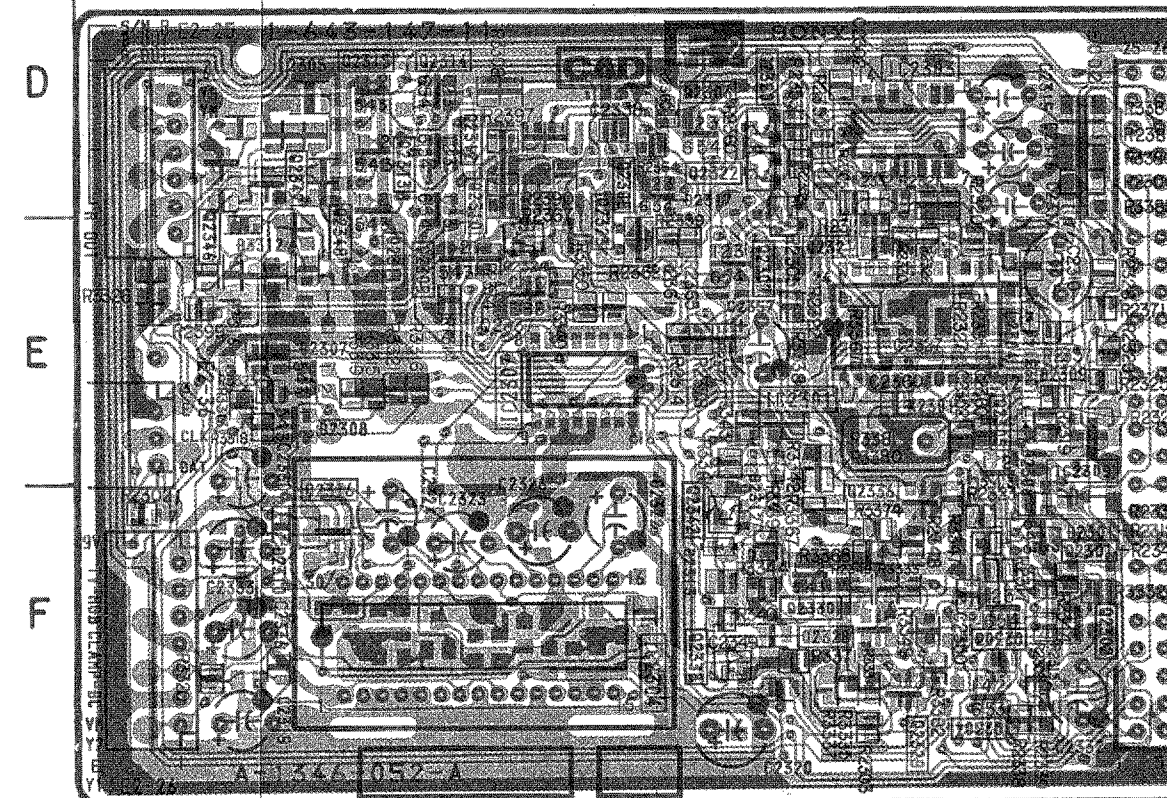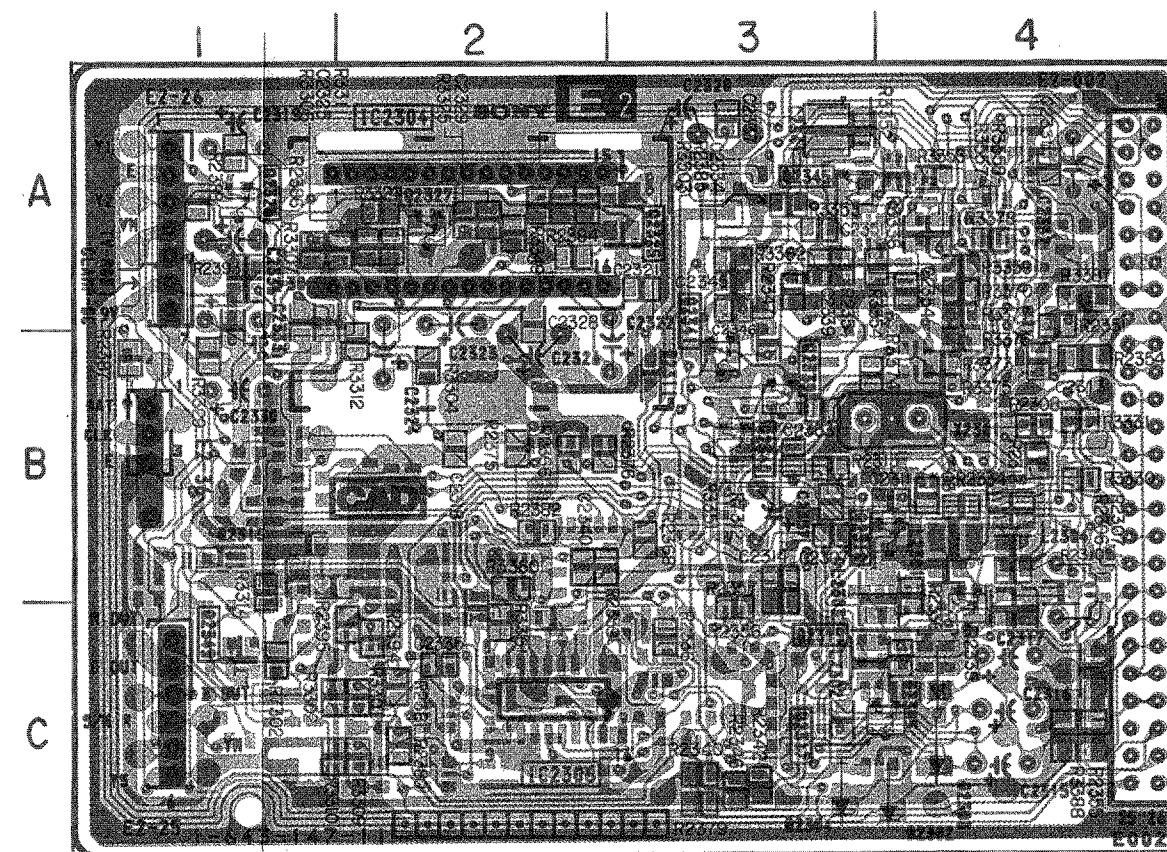


— E2 Board —

IC	
IC2301	E-4
2303	Ø-4
2304	A-2
2306	C-2
2307	E-2


TRANSISTOR	
Q2301	F-4
2303	F-4
2304	F-4
2305	E-4
2306	Ø-3
2307	E-3
2308	Ø-3
2309	E-2
2310	Ø-2
2311	Ø-2
2312	Ø-2
2313	Ø-2
2314	Ø-2
2315	Ø-2
2317	C-4
2318	B-4
2319	C-4
2320	Ø-3
2321	Ø-3
2322	Ø-3
2324	E-2
2326	A-1
2327	A-2
2330	F-3
2337	E-2
2338	F-3
2339	B-3
2340	B-3
2341	B-3
2342	F-3
2345	A-3

DIODE	
Ø2301	F-4
2302	C-4
2303	C-4
2304	C-3
2305	C-4
2306	F-4
2307	E-1
2308	E-1
2309	E-4
2312	E-3
2313	F-3
2314	E-4
2317	Ø-3


— HX1 Board —

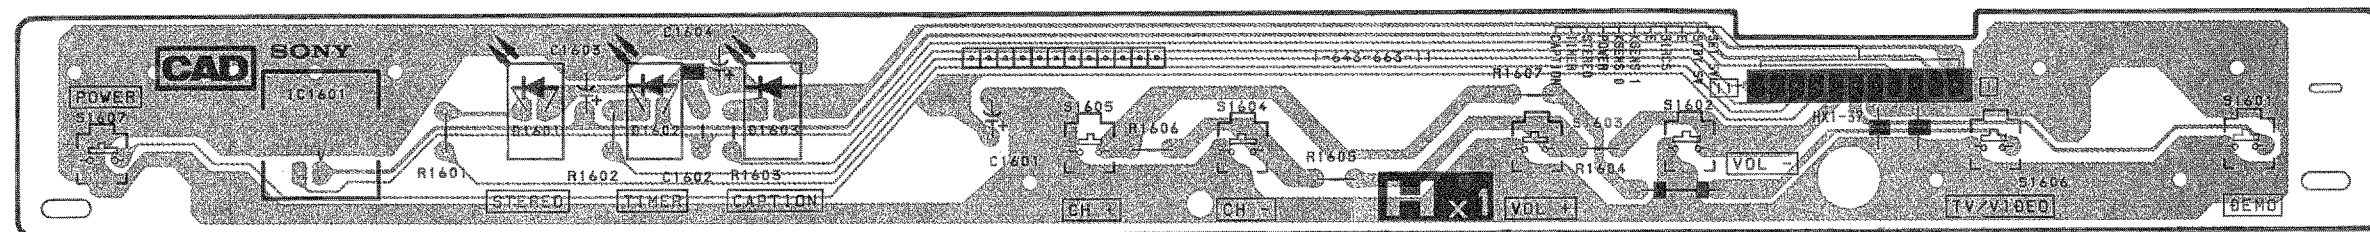


M BOARD IC002 MN1280-S

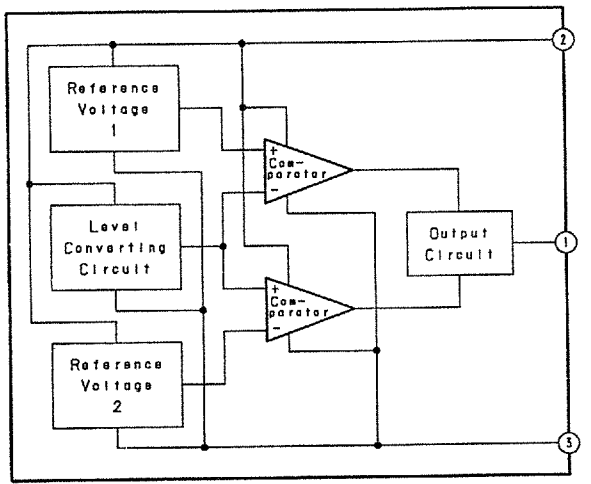



- M Board -

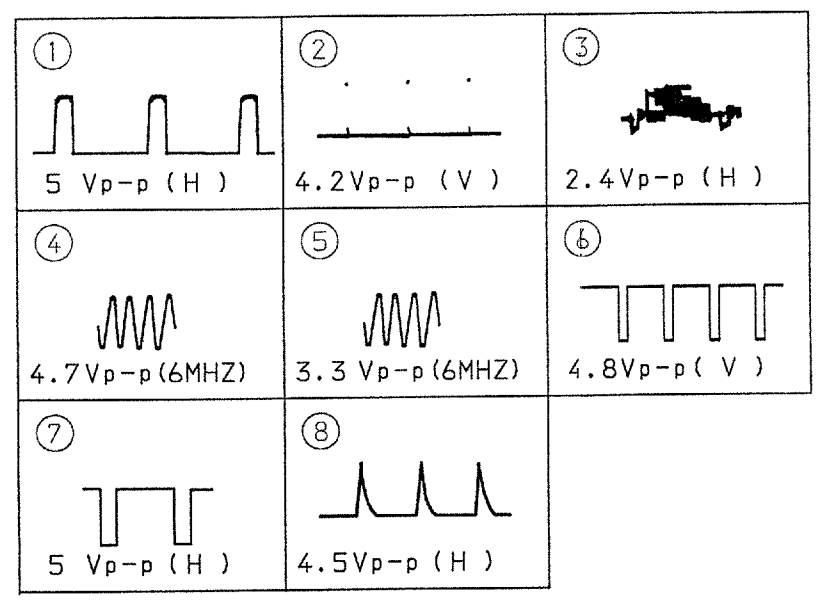


D BOARD IC801 SI-3090CA

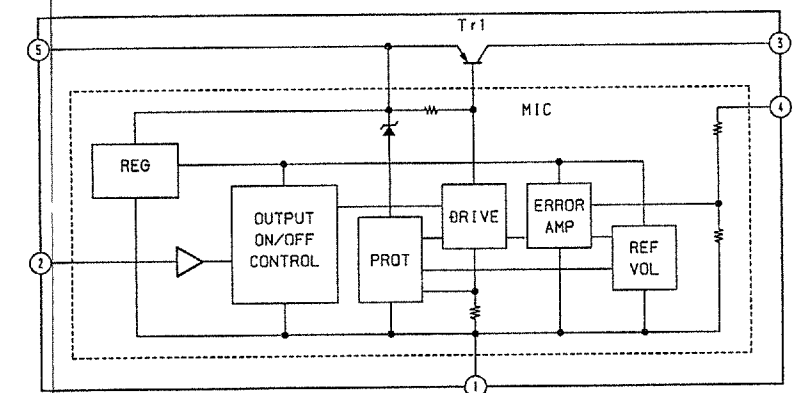

D Board -

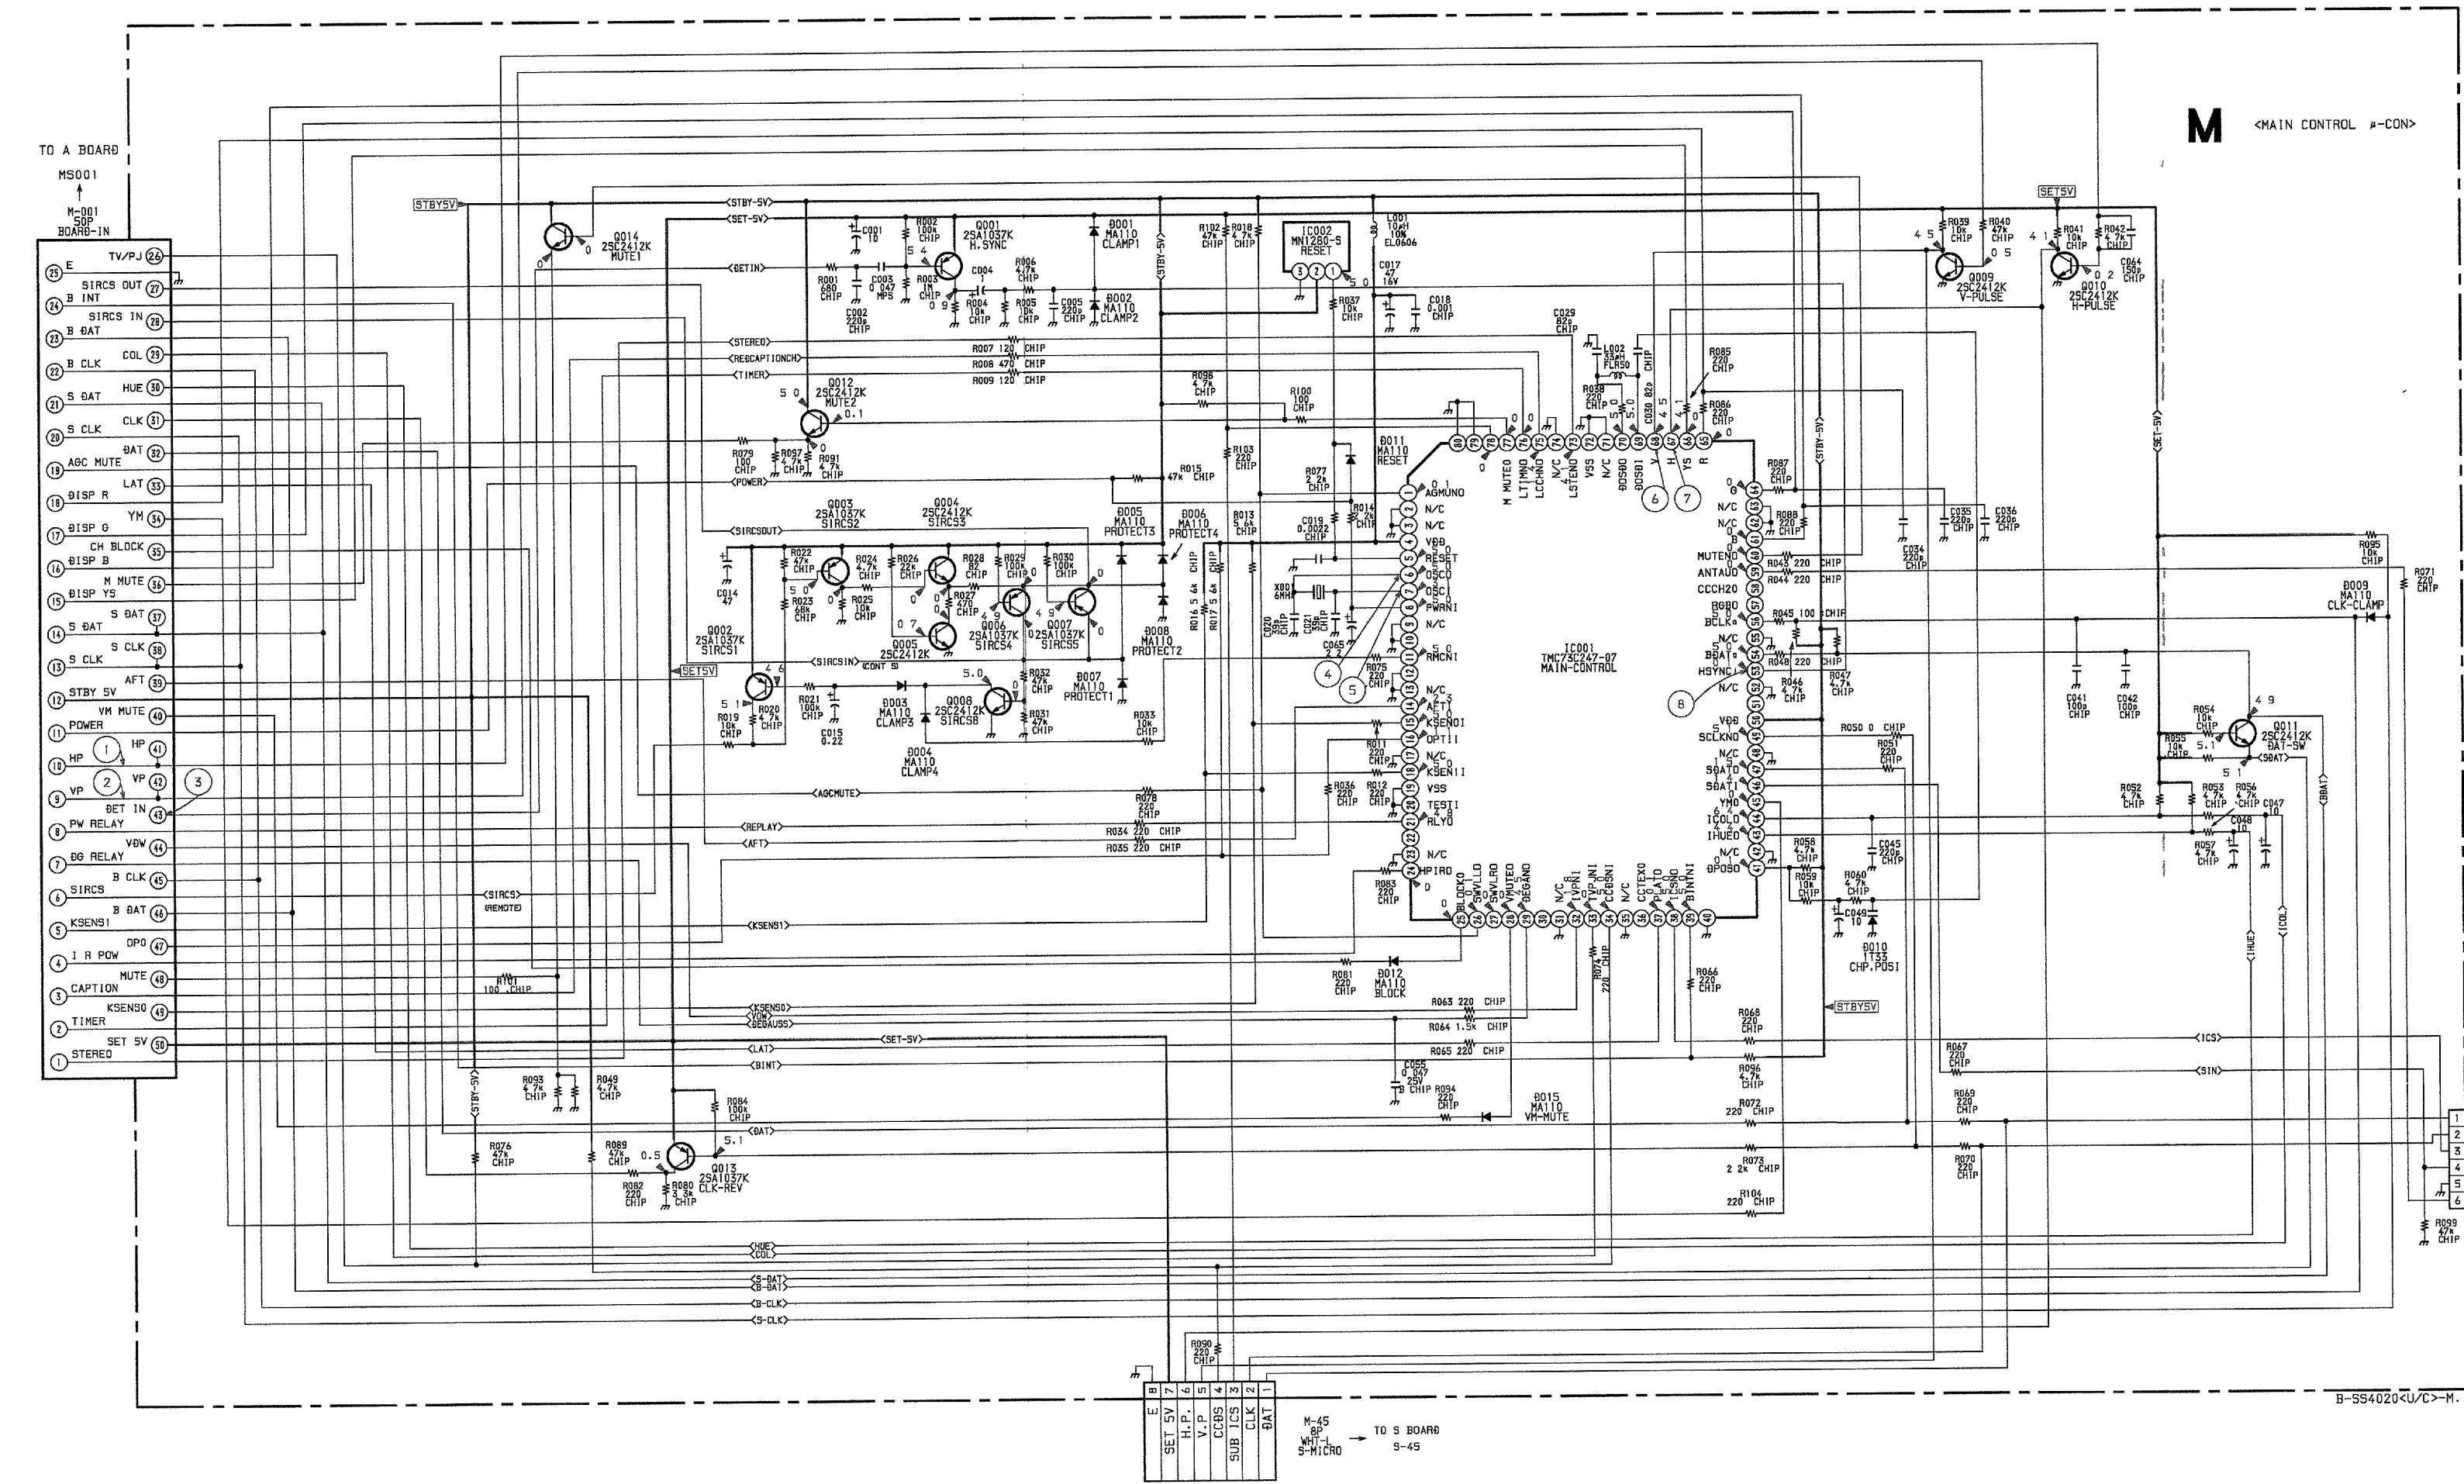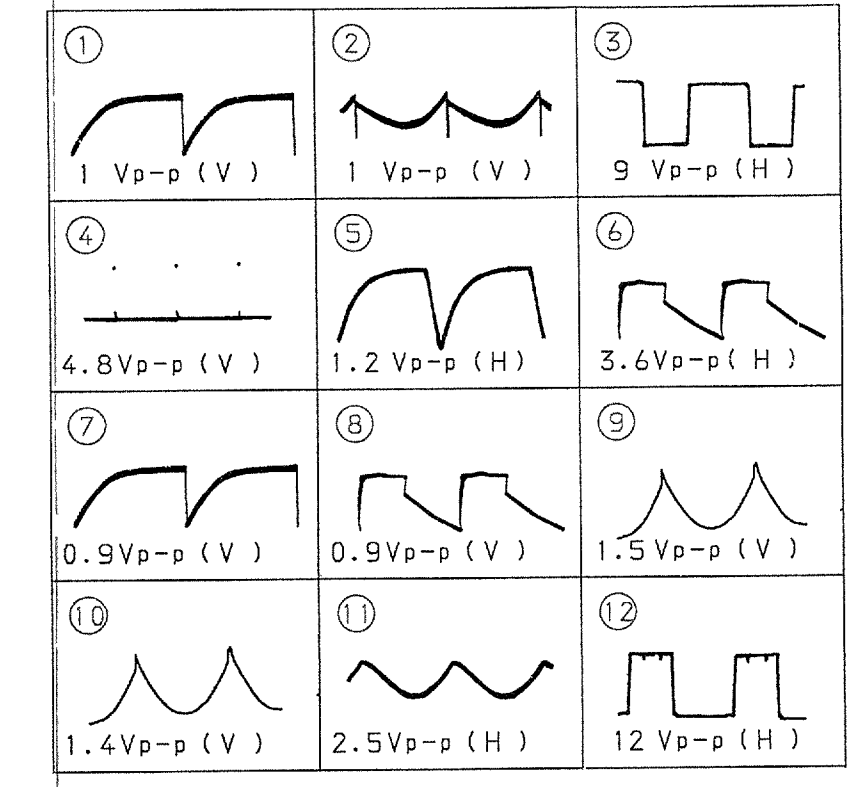

M CHAIN CONTROL a-CON


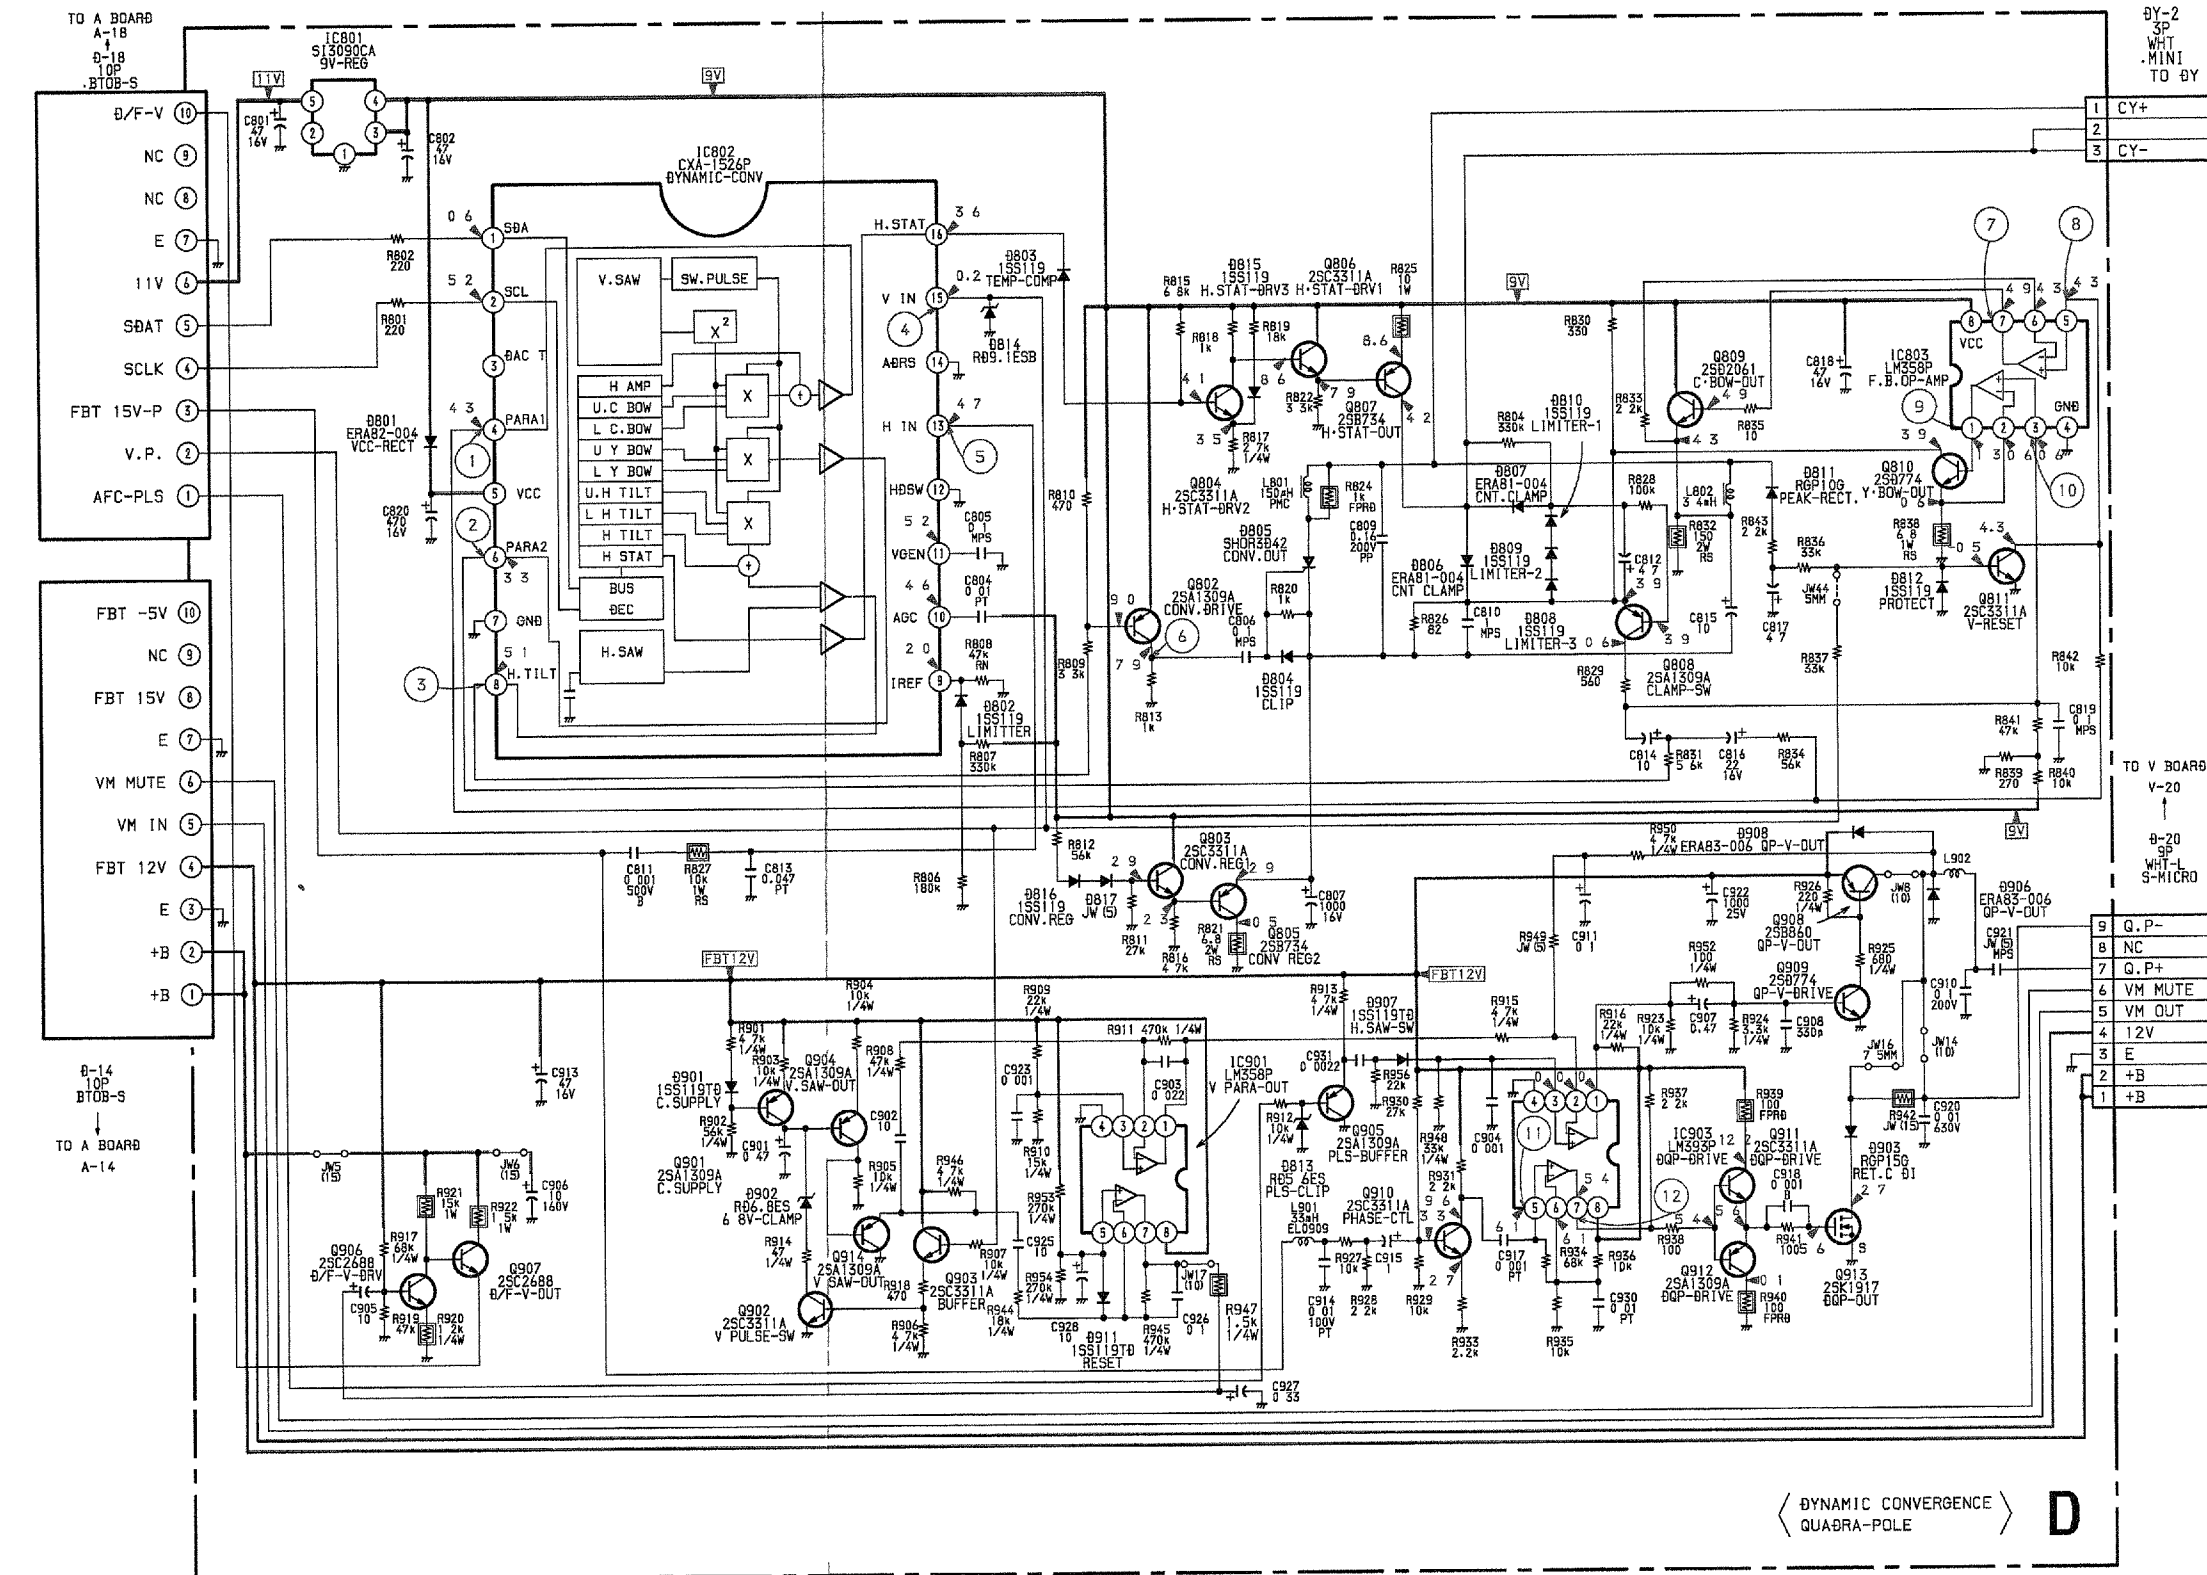


D DYNAMIC CONVERGENCE QUADRA-POLE

M [MAIN CONTROL μ-CON]

— M Board —


- : Pattern from the side which enables seeing.
- : Pattern of the rear side.

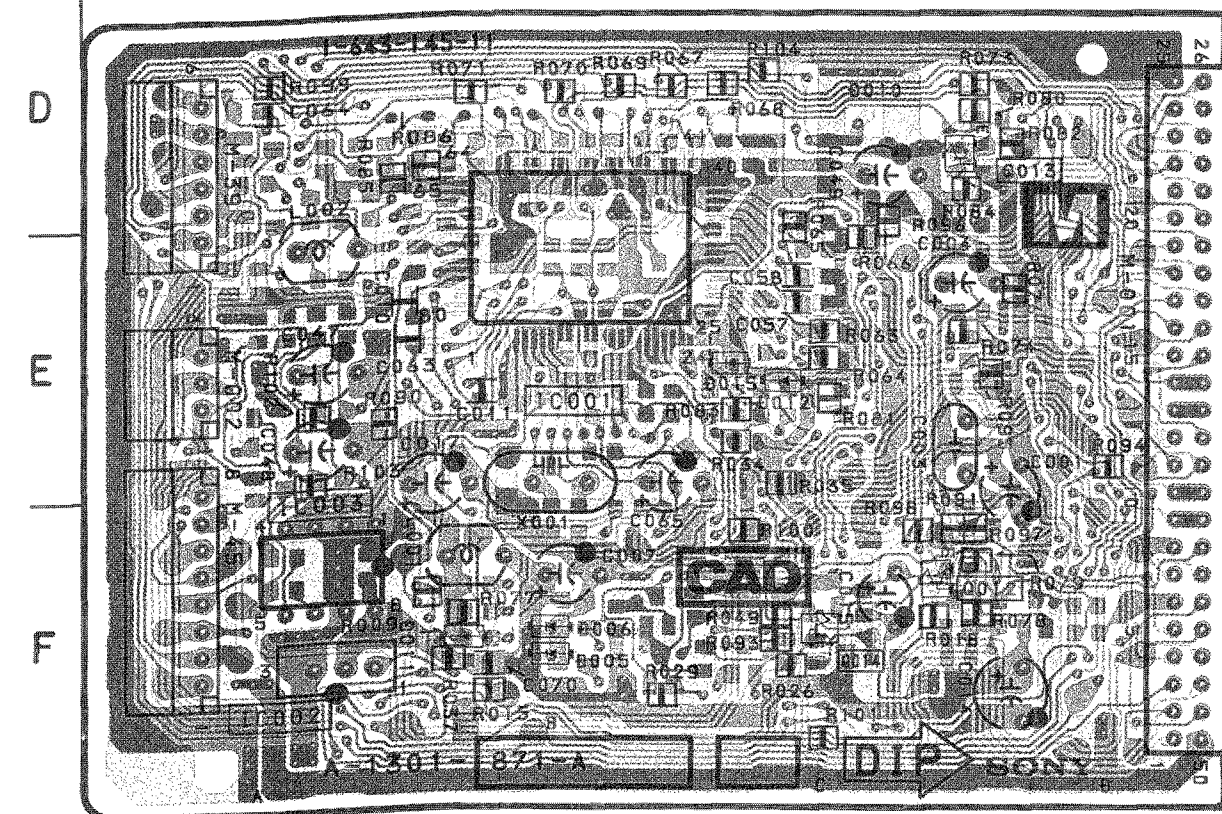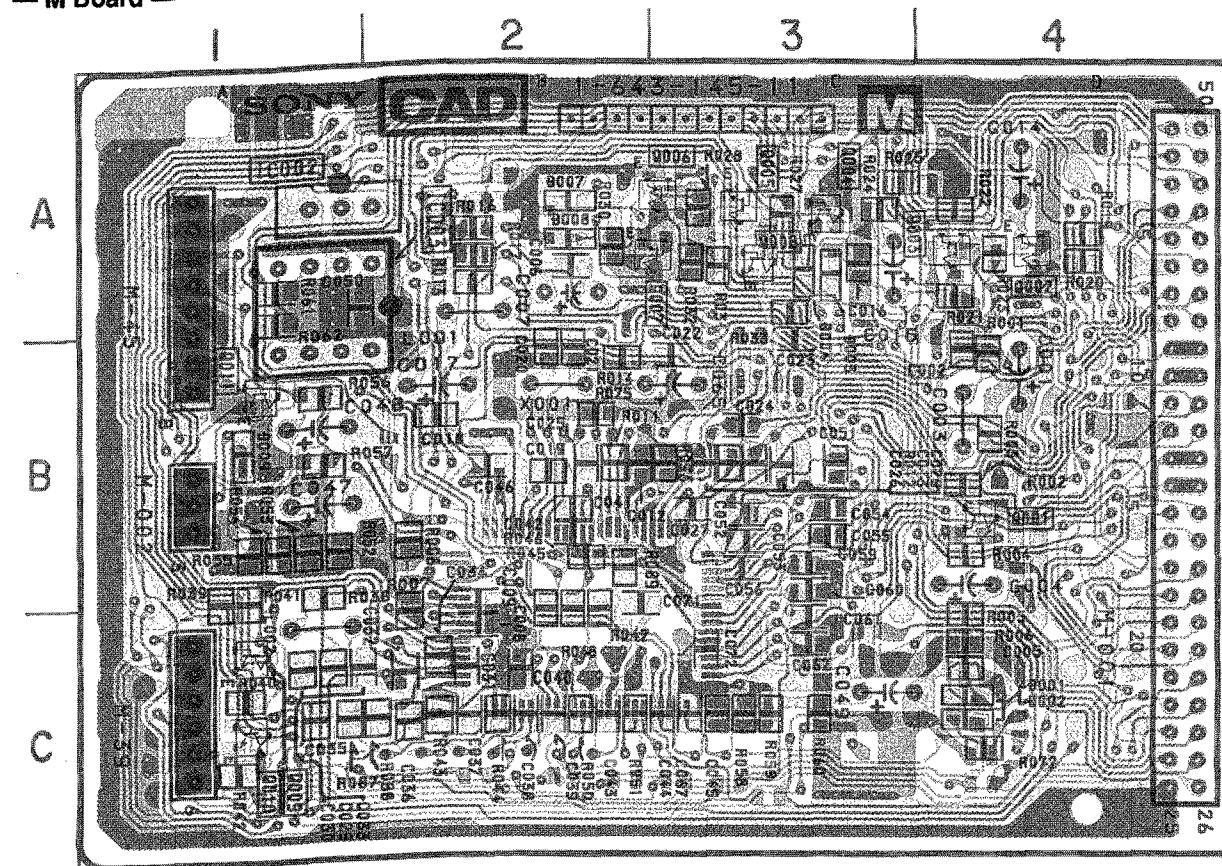

IC	
IC001	E-2
002	A-1
TRANSISTOR	
Q001	B-4
002	A-4
003	A-4
004	A-3
005	A-3
006	A-3
007	A-3
008	A-3
009	C-1
010	C-1
011	B-1
012	F-4
013	D-4
014	F-3
DIODE	
D001	C-4
002	C-4
003	A-3
004	A-3
005	F-2
006	F-2
007	A-2
008	A-2
009	B-1
010	D-3
011	F-2
012	E-3
015	E-3

D [DYNAMIC CONVERGENCE, QUADRA-POLE]


— D Board —

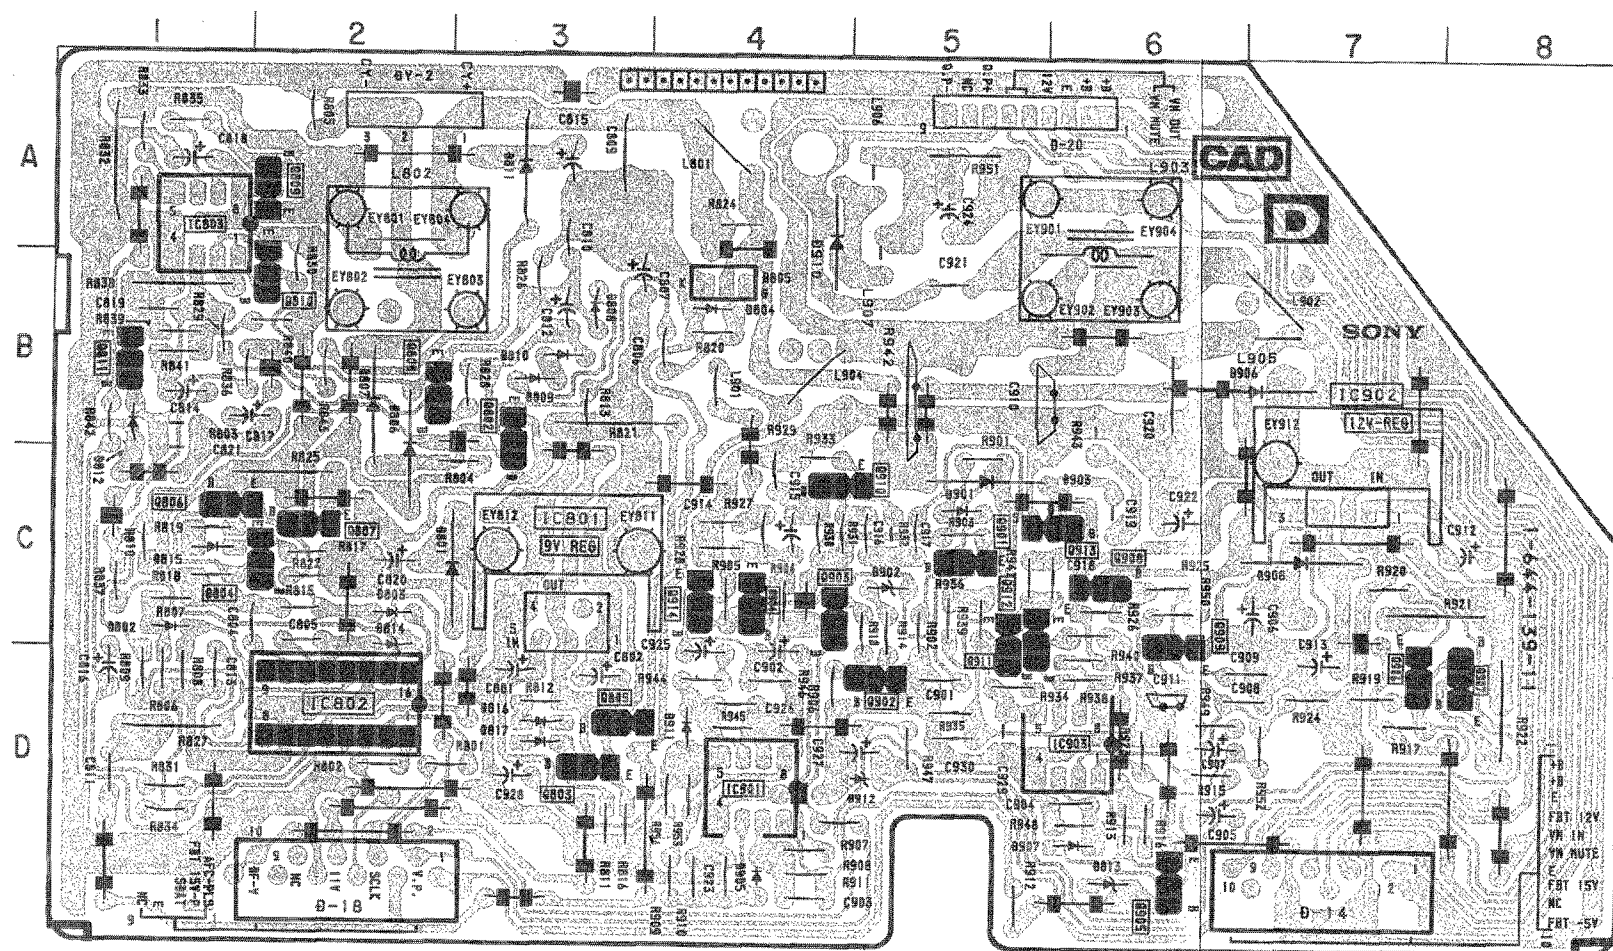

IC		D907	D-6
IC801	C-3	908	C-7
802	D-2	911	D-4
803	A-1		
901	D-4		
903	D-6		
TRANSISTOR			
Q802	B-3		
803	D-3		
804	C-2		
805	D-3		
806	C-1		
807	C-2		
808	B-2		
810	B-2		
811	B-1		
901	C-5		
902	D-5		
903	C-4		
904	C-4		
905	D-6		
906	D-7		
907	D-8		
908	C-6		
909	C-6		
910	C-4		
911	C-5		
912	C-5		
913	C-6		
914	C-4		
DIODE			
D801	C-3		
802	C-1		
803	C-2		
804	B-4		
805	B-4		
806	B-2		
807	B-2		
808	B-3		
809	B-3		
810	B-3		
811	A-3		
812	B-1		
813	D-6		
814	C-2		
815	C-1		
816	D-3		
901	C-5		
902	C-5		
903	C-5		
906	B-7		



V [VELOCITY MODULATION]

— V Board —

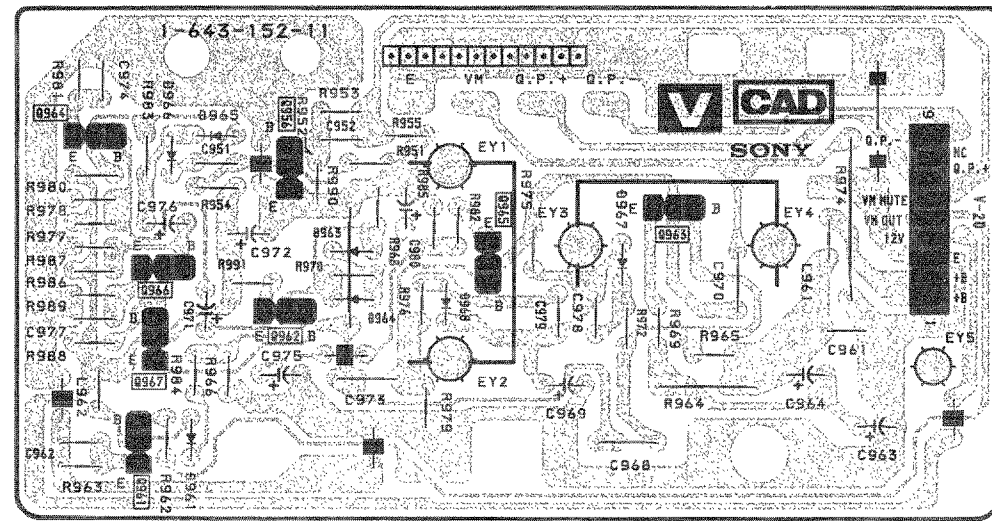



S [SUB-CONTROL μ-CON, CLOSED CAPTION DECODER]

— S Board —

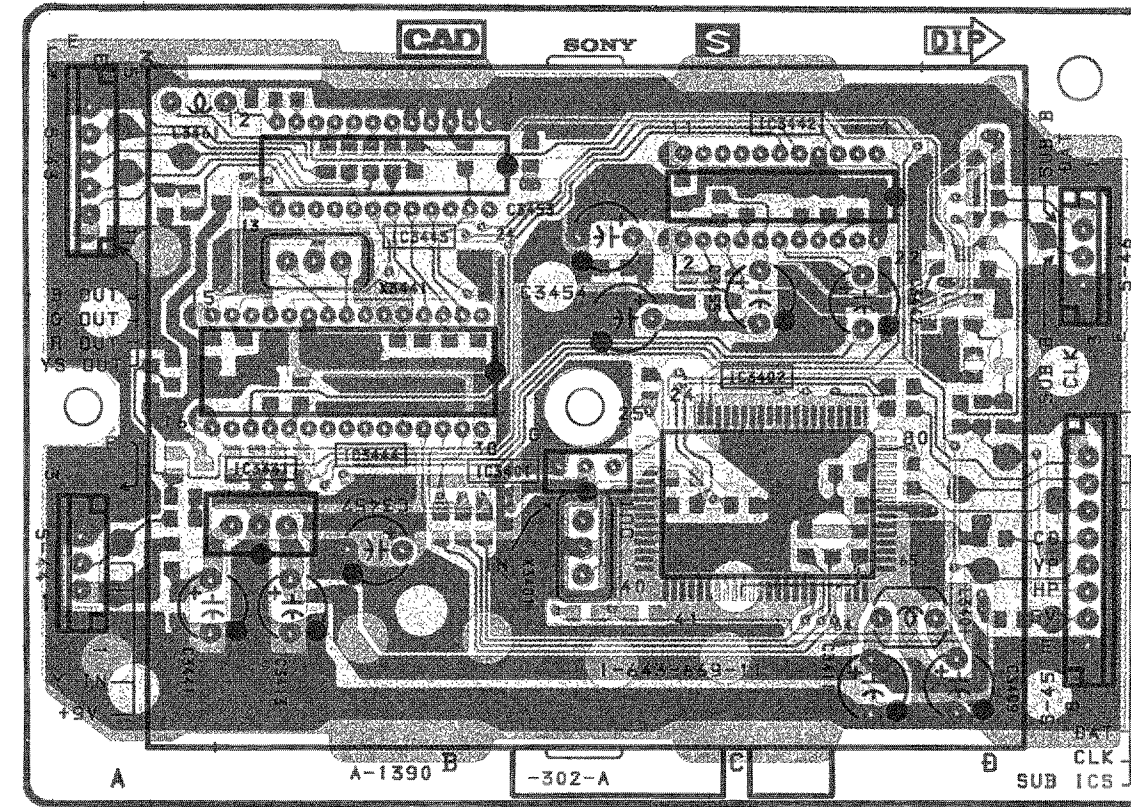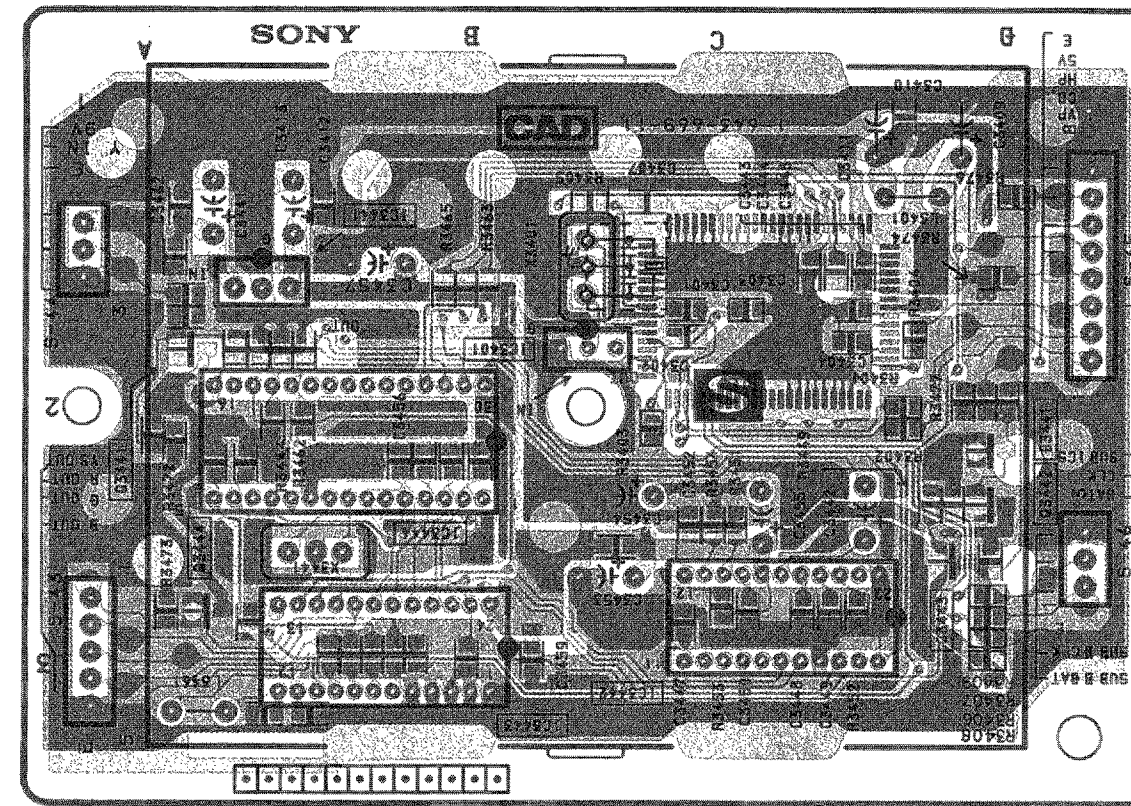

P4 [DIGITAL COMB FILTER]

— P4 Board —

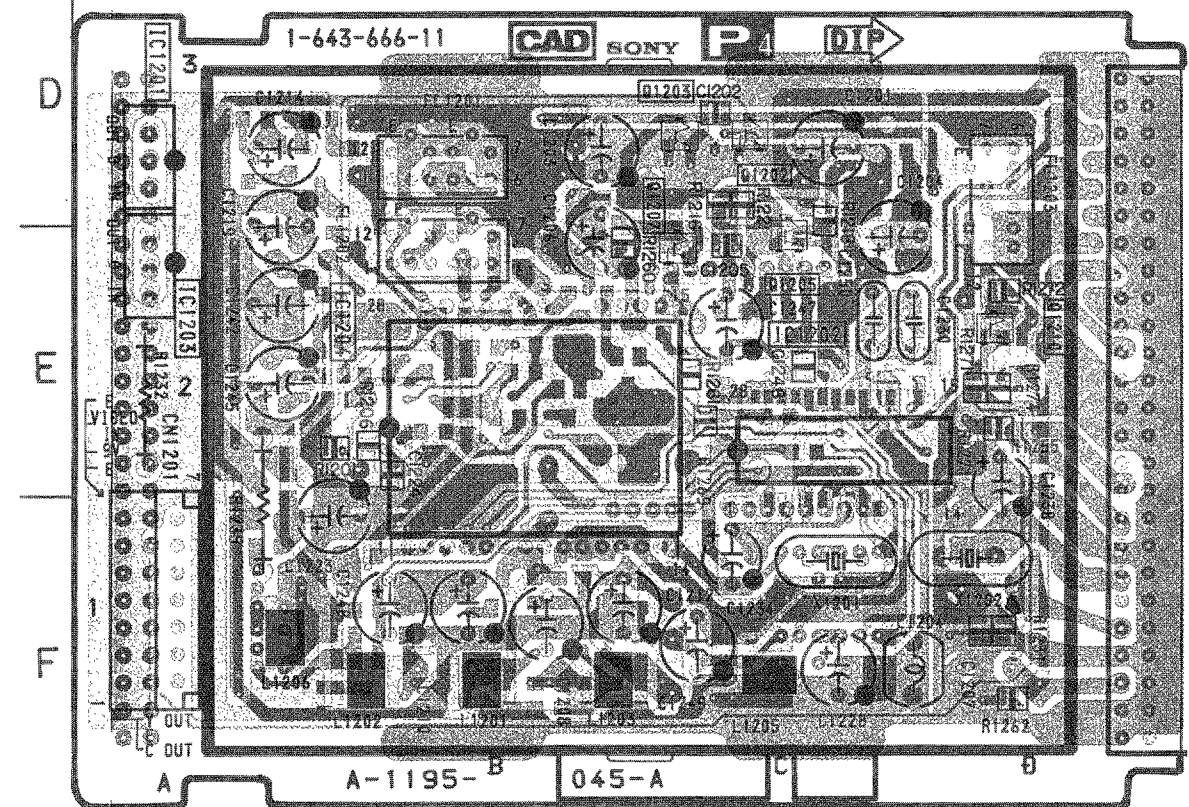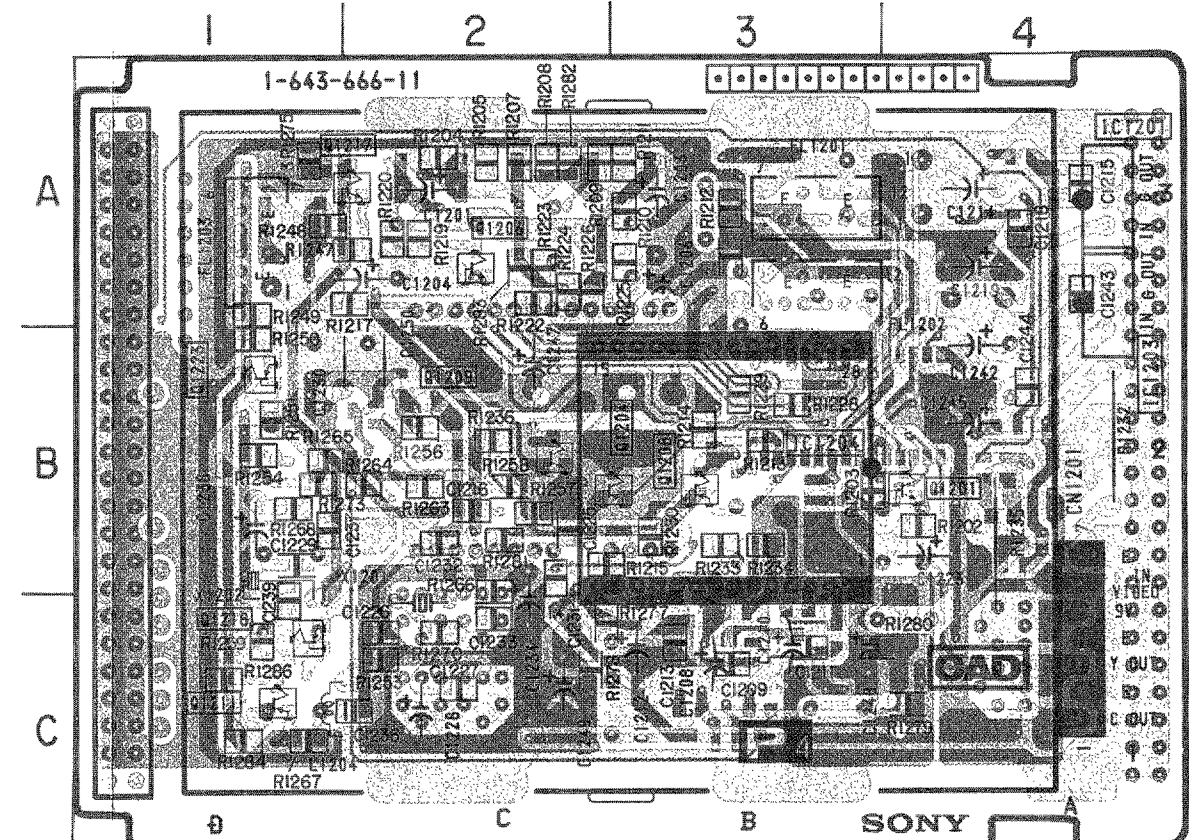


• [Pattern from the side which enables seeing.]
• [Pattern of the rear side.]

— P4 Board —




IC	
IC1201	A-4
1202	E-3
1203	A-4
1204	B-3
TRANSISTOR	
Q1201	B-4
1202	D-3
1203	D-3
1204	B-3
1205	E-3
1206	A-2
1207	E-3
1208	B-8
1209	B-2
1210	E-4
1211	C-1
1217	A-2
1218	C-1
1223	B-1

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P



- P4 Board -

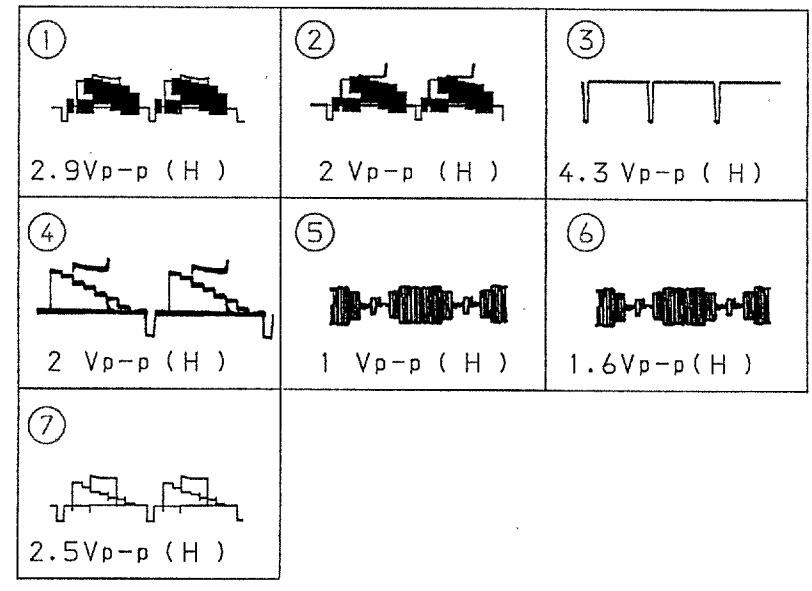







- V Board -

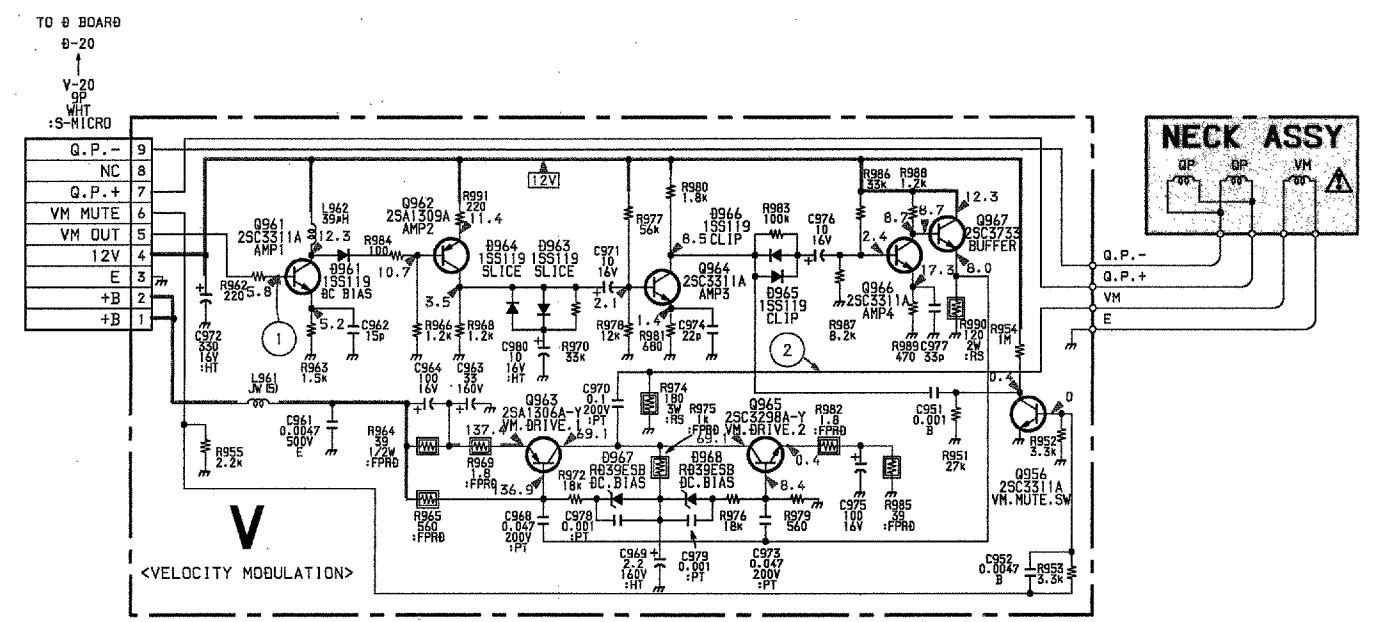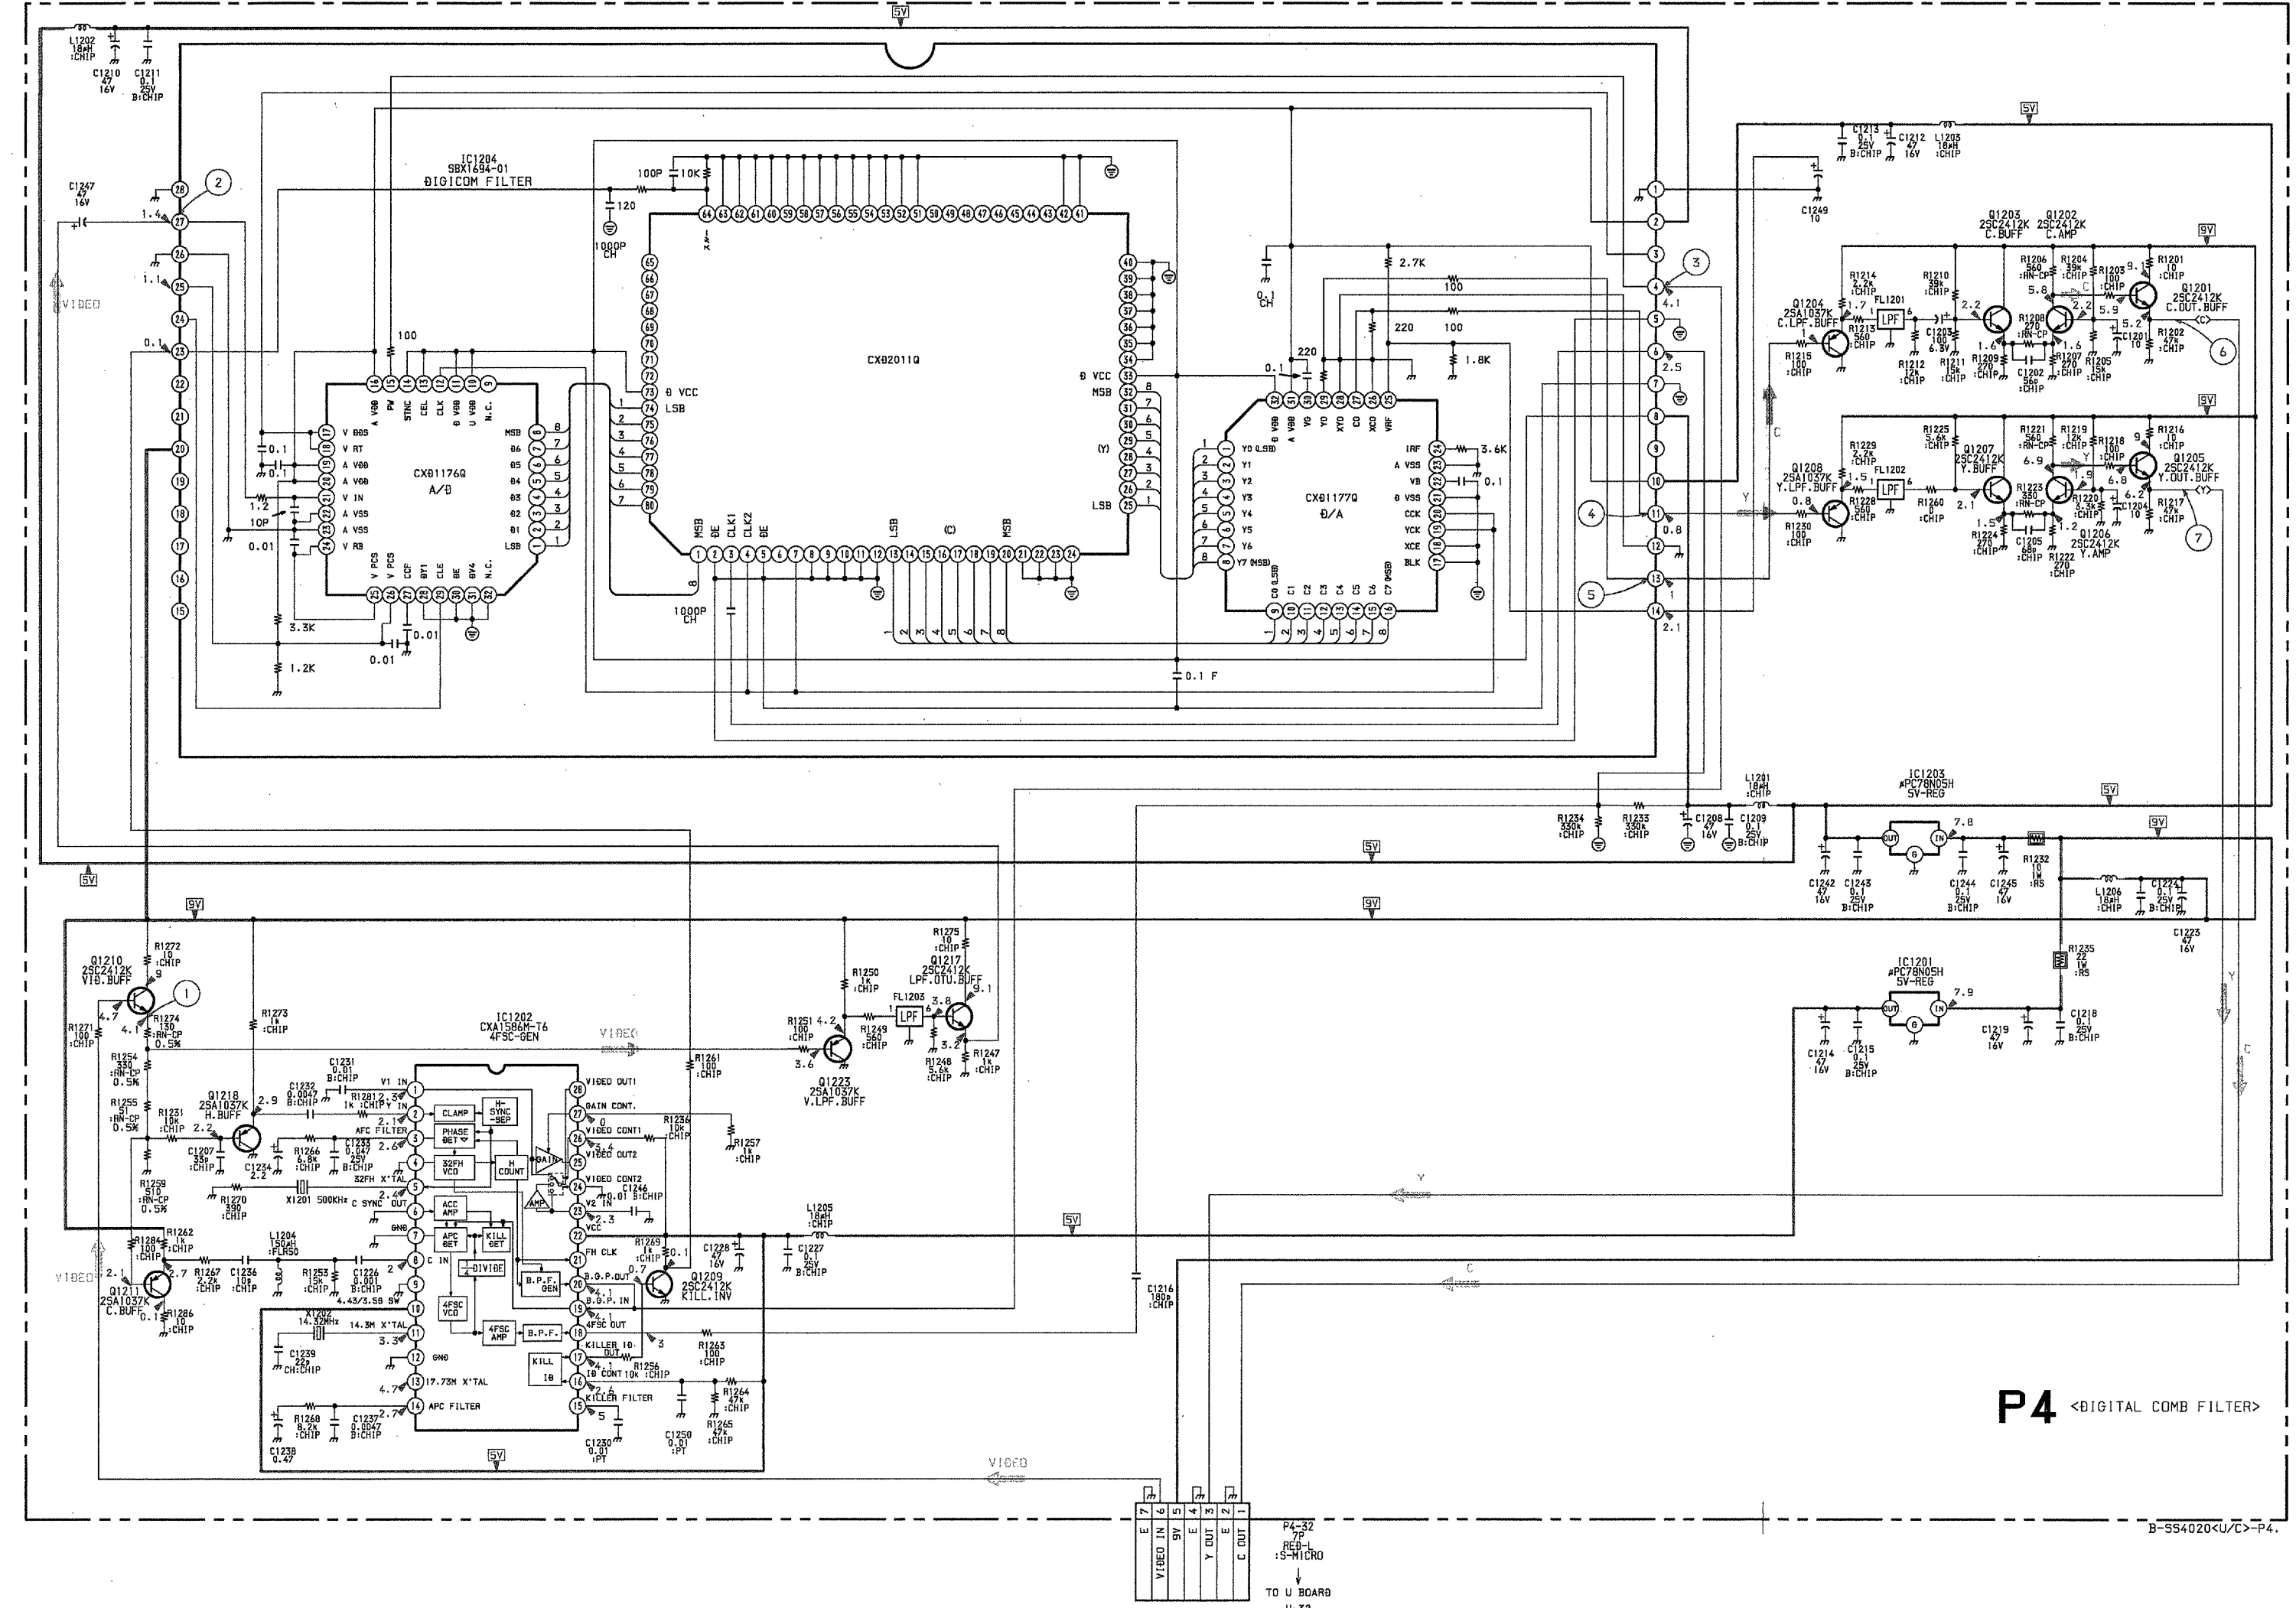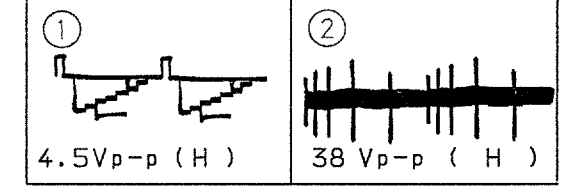

- S Board -

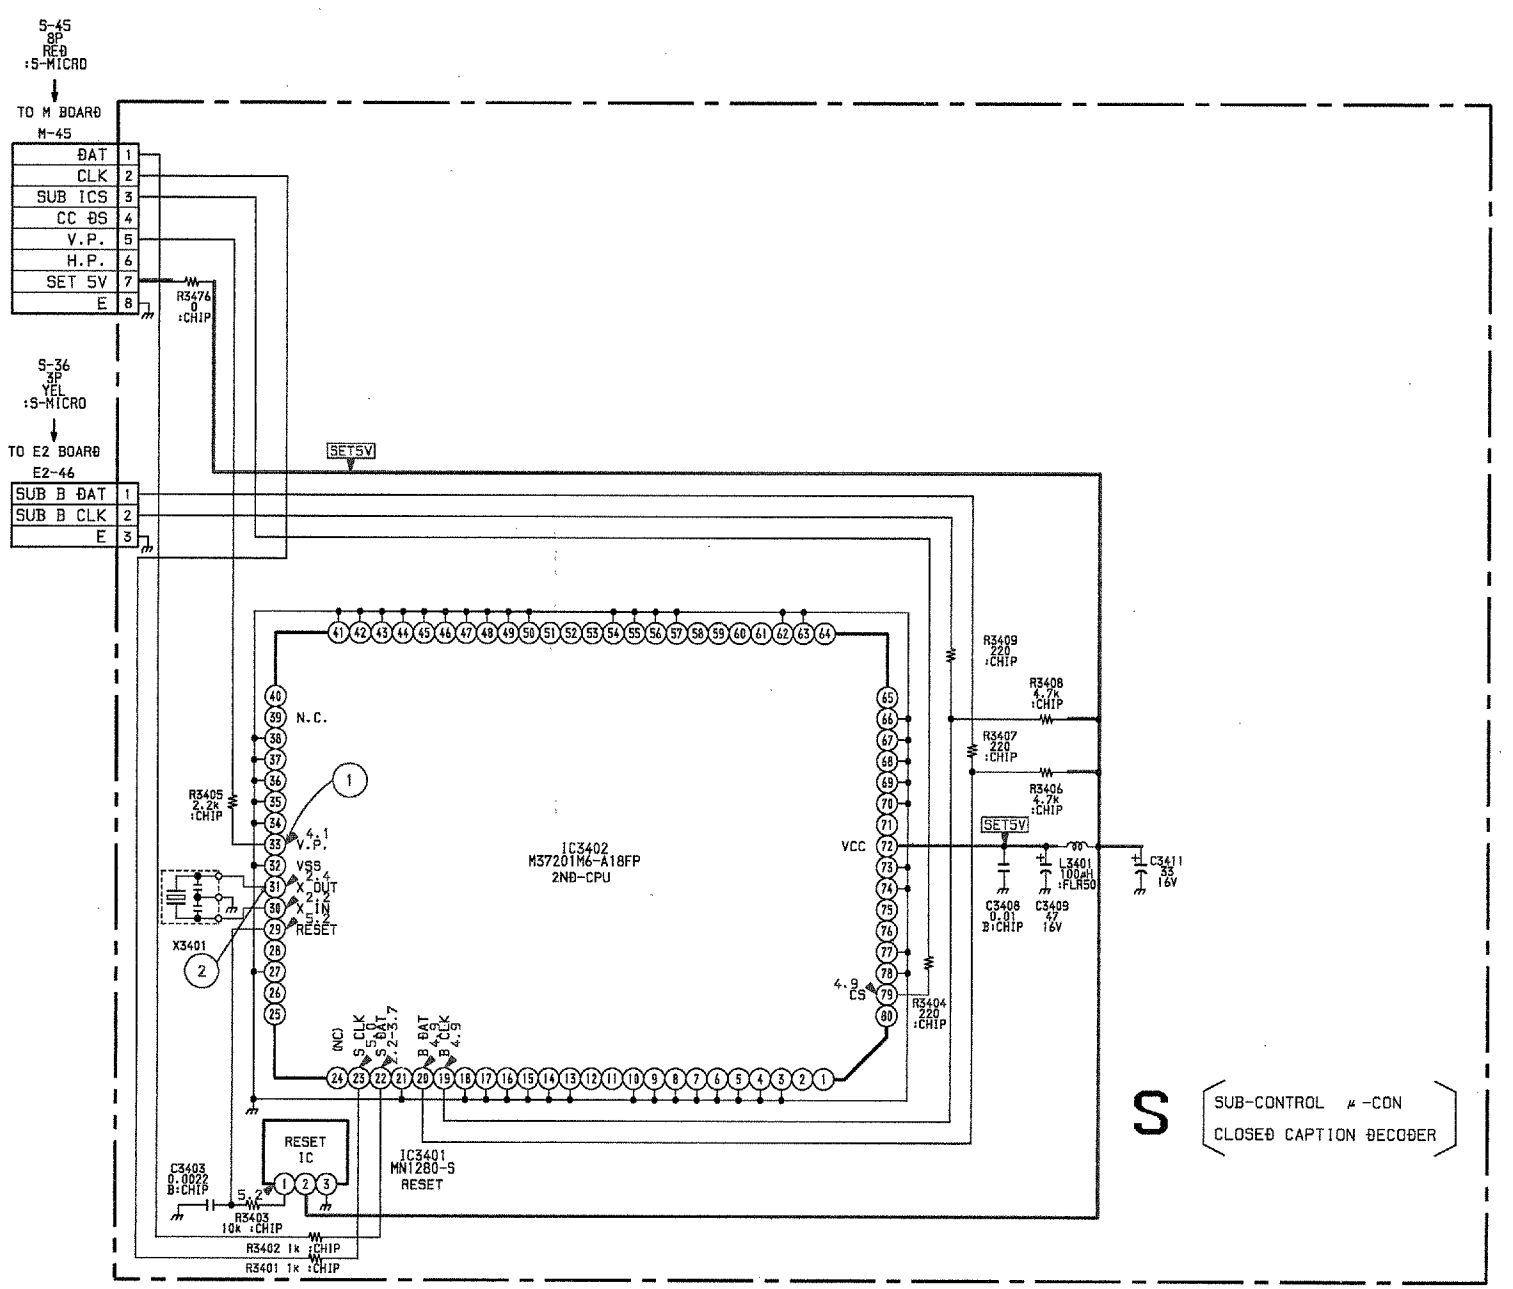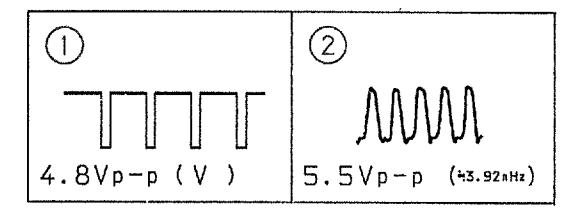

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

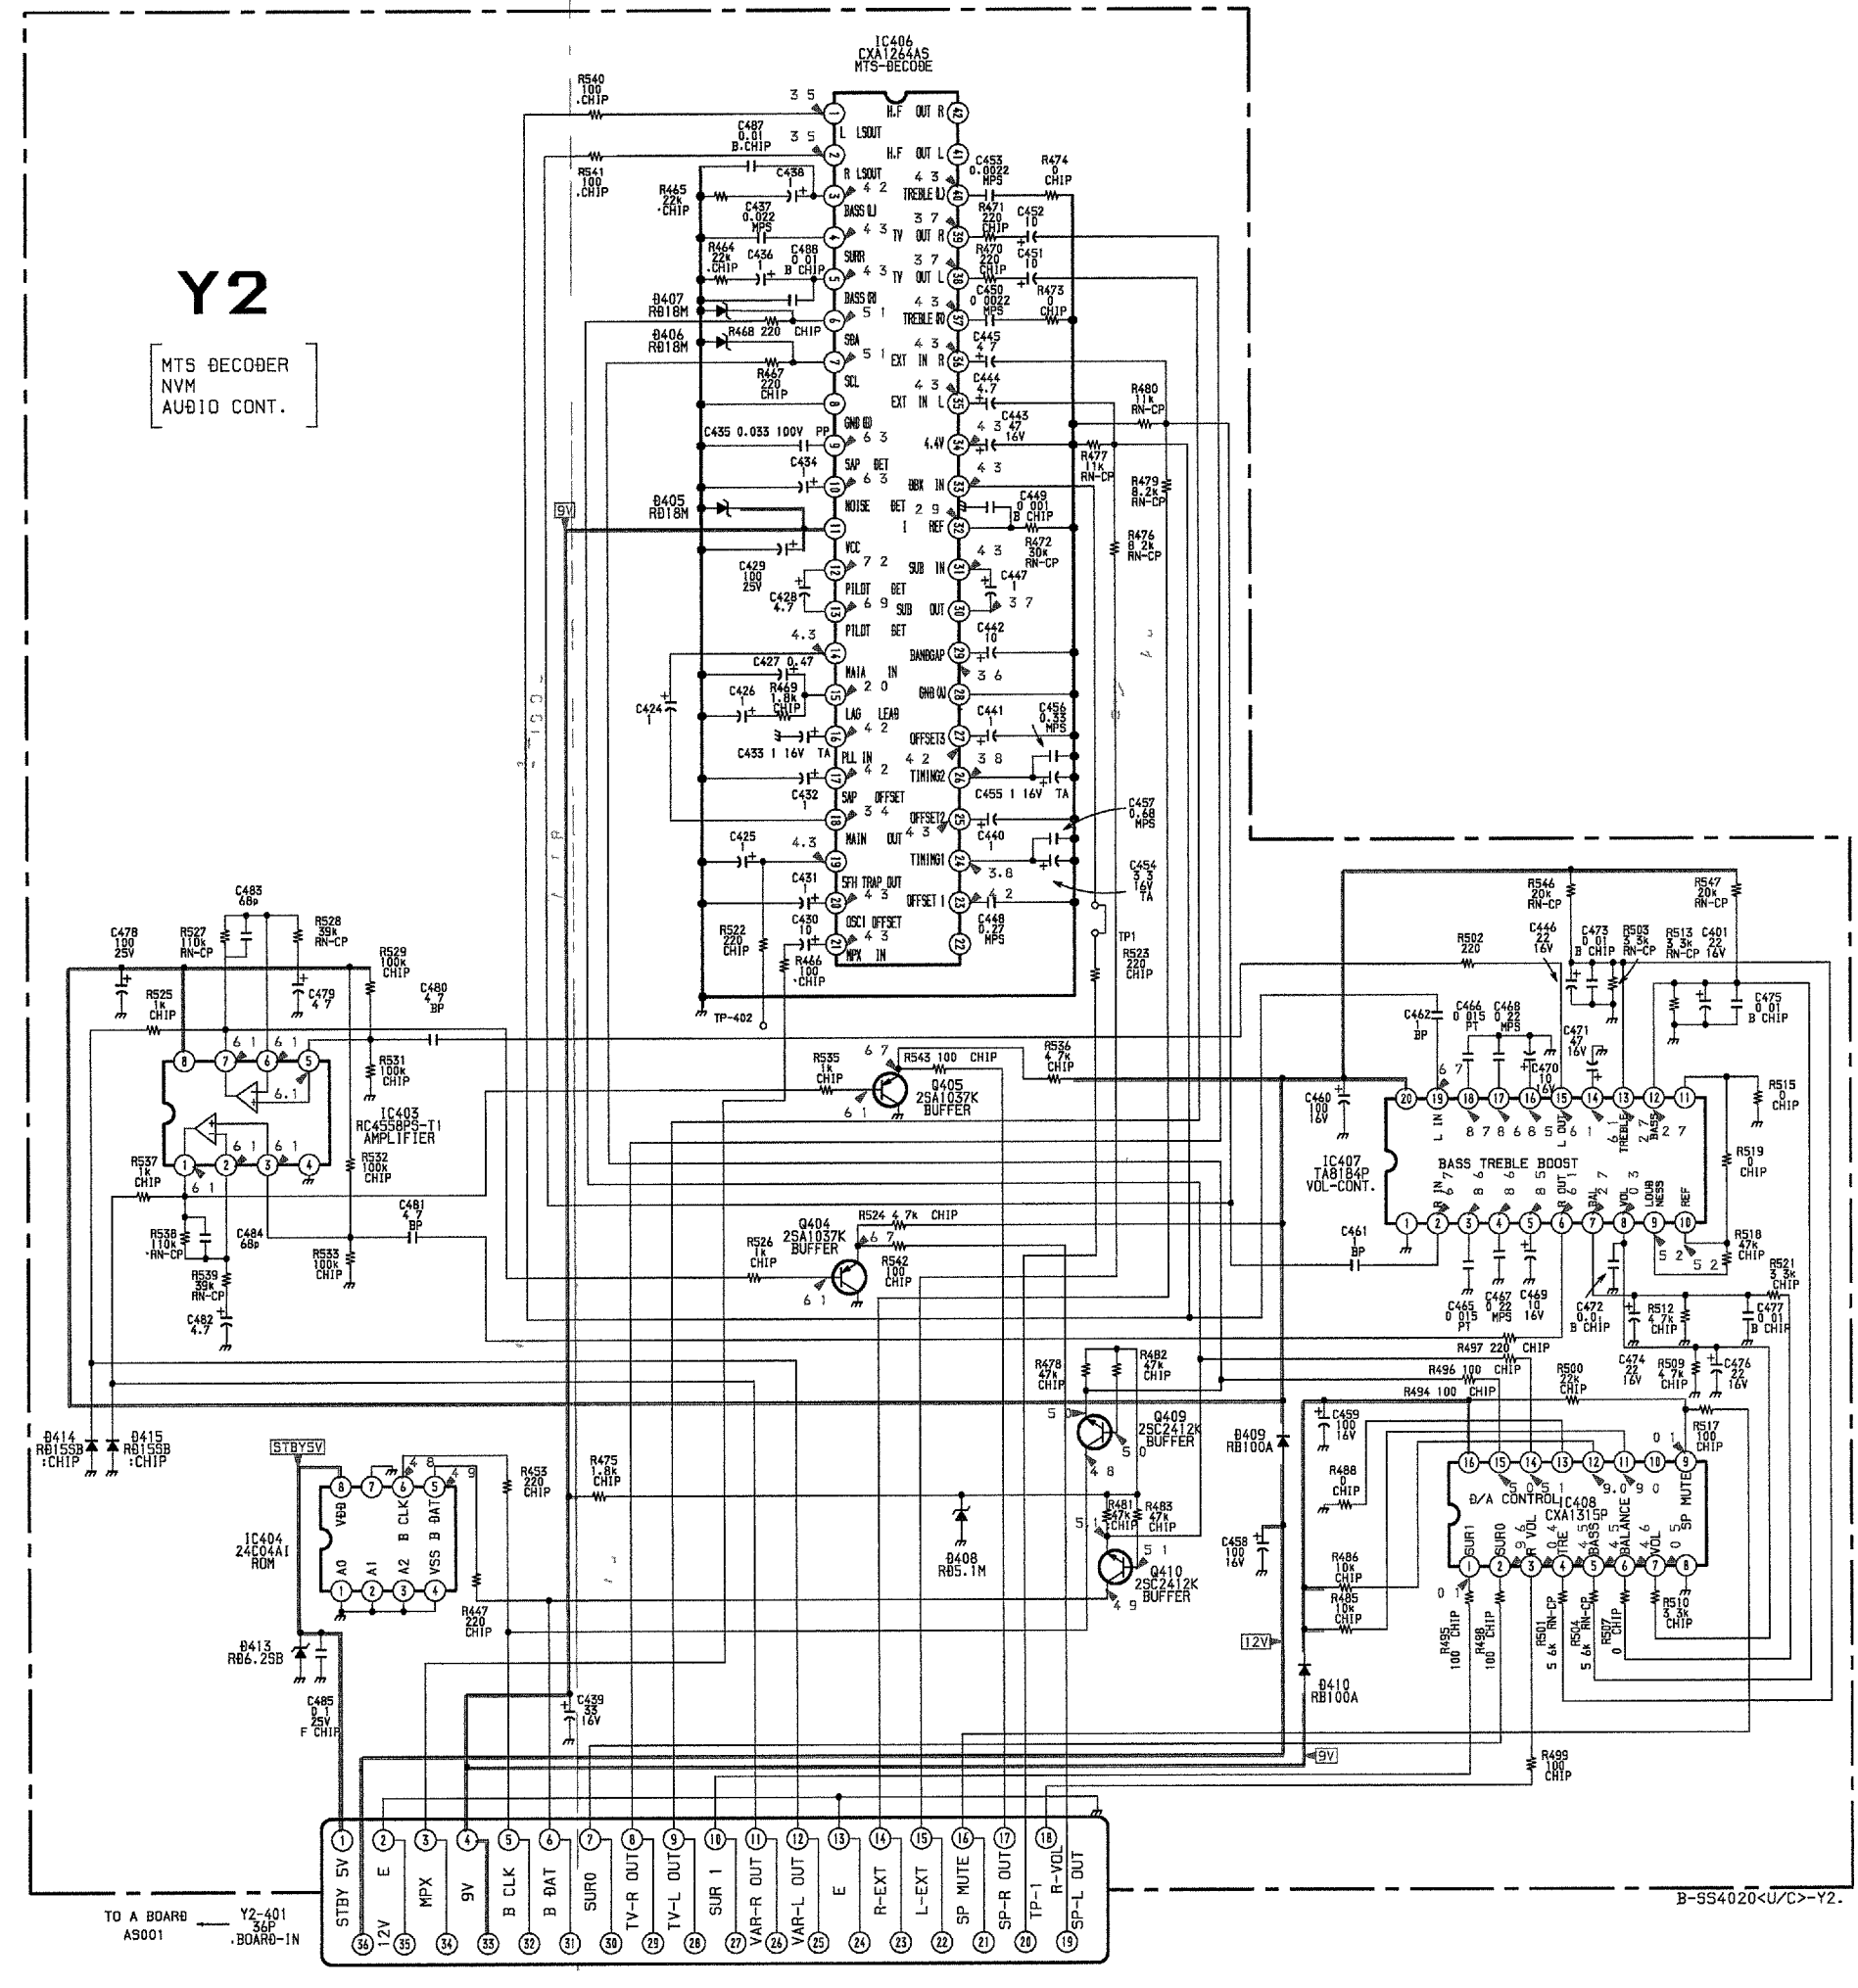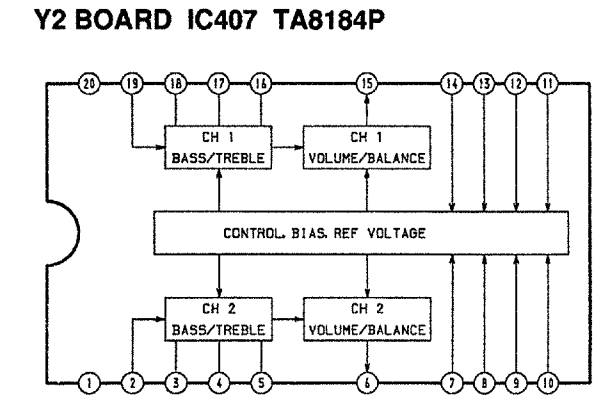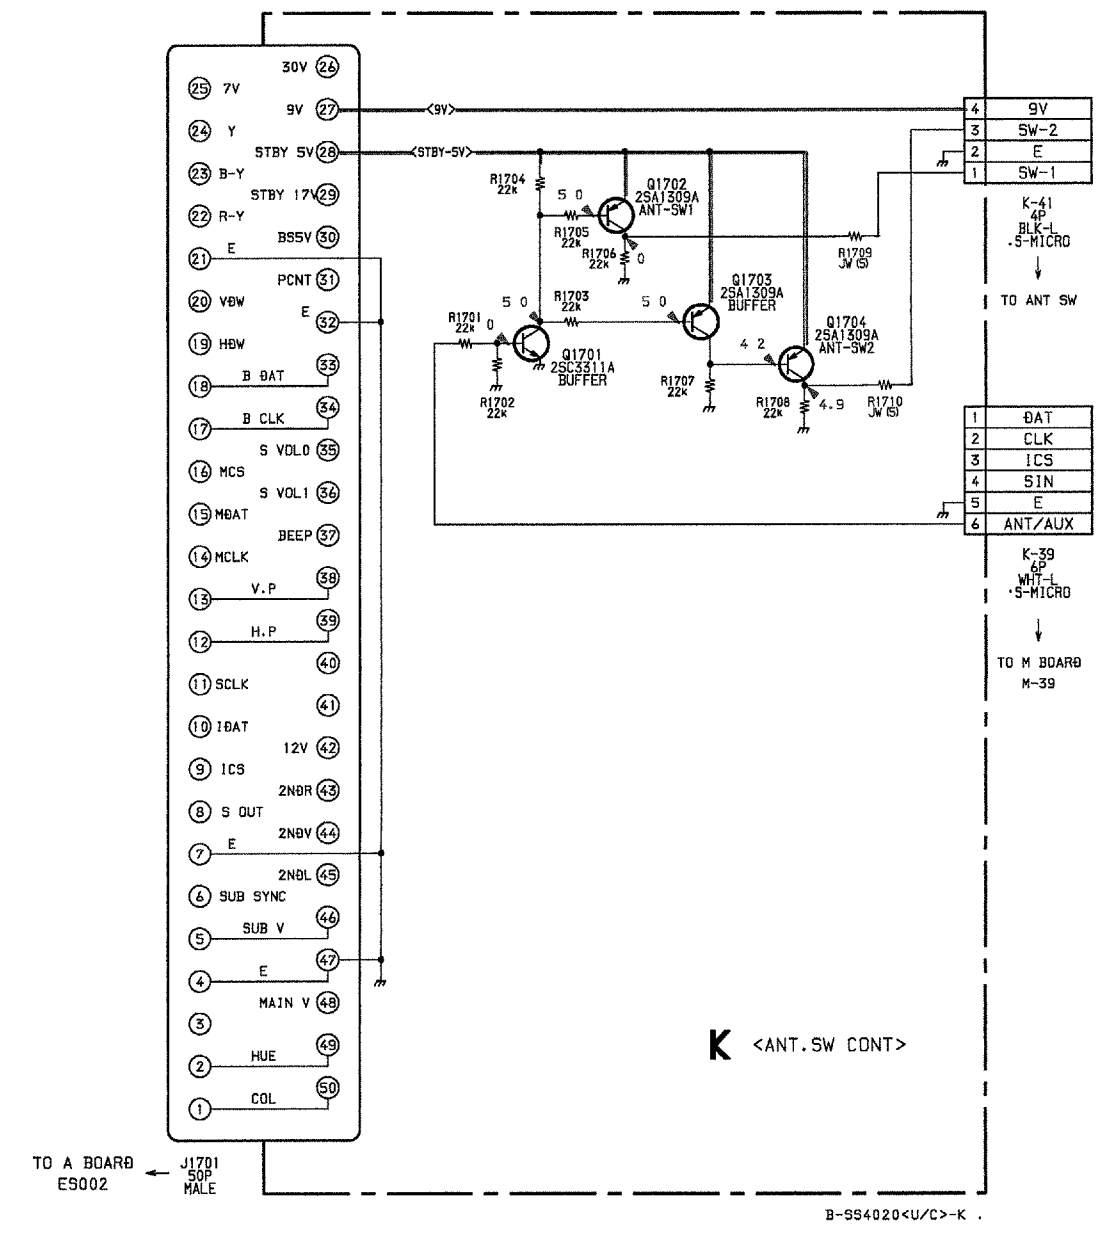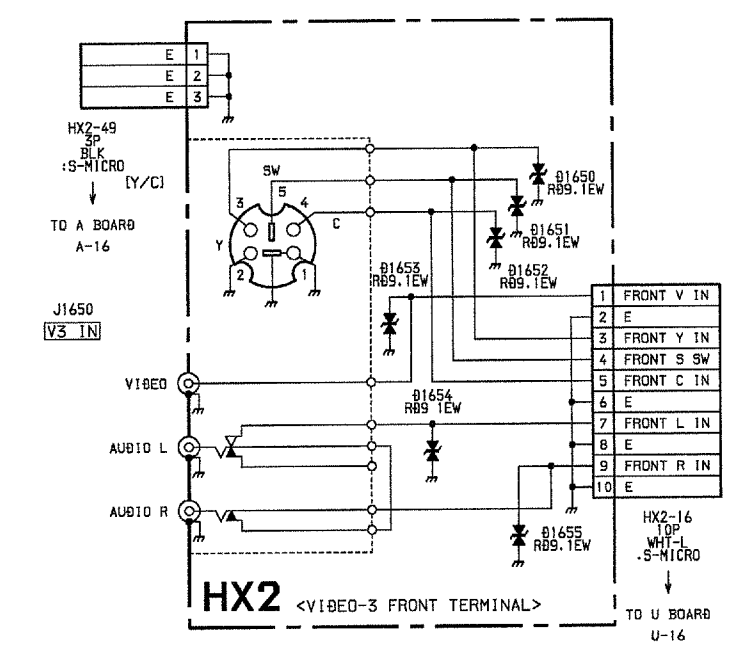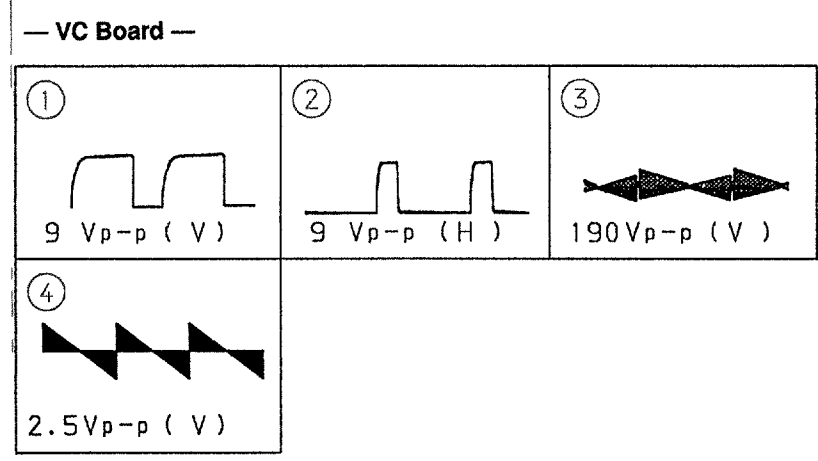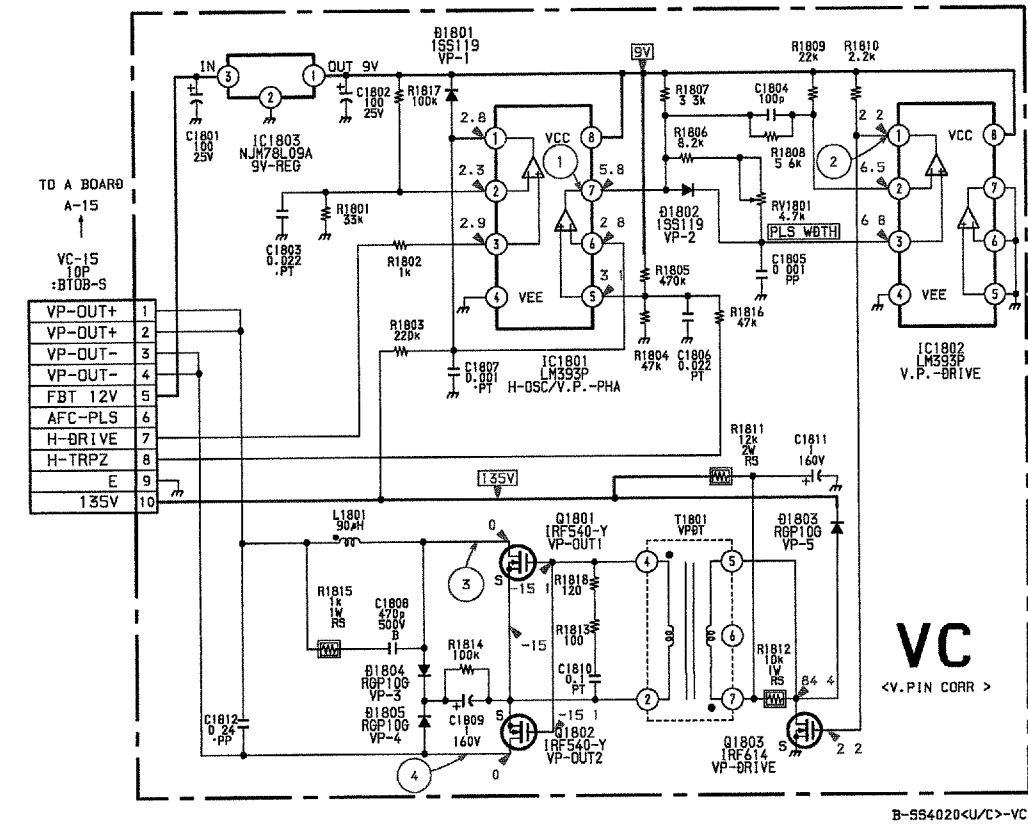

VC [V.PIN CORR.] **HX2** [VIDEO-3 FRONT TERMINAL]

KV-32XBR90S RM-AV1100 **KV-32XBR90S** RM-AV1100

KV-32XBR90S RM-AV1100

K [ANT. SW CONT]

Y2 [MTS DECODER, NVM, AUDIO CONT.]




• : Pattern from the side which enables seeing.
• : Pattern of the rear side.

— Y2 Board —

— VC Board —



— K Board —

— Y2 Board —

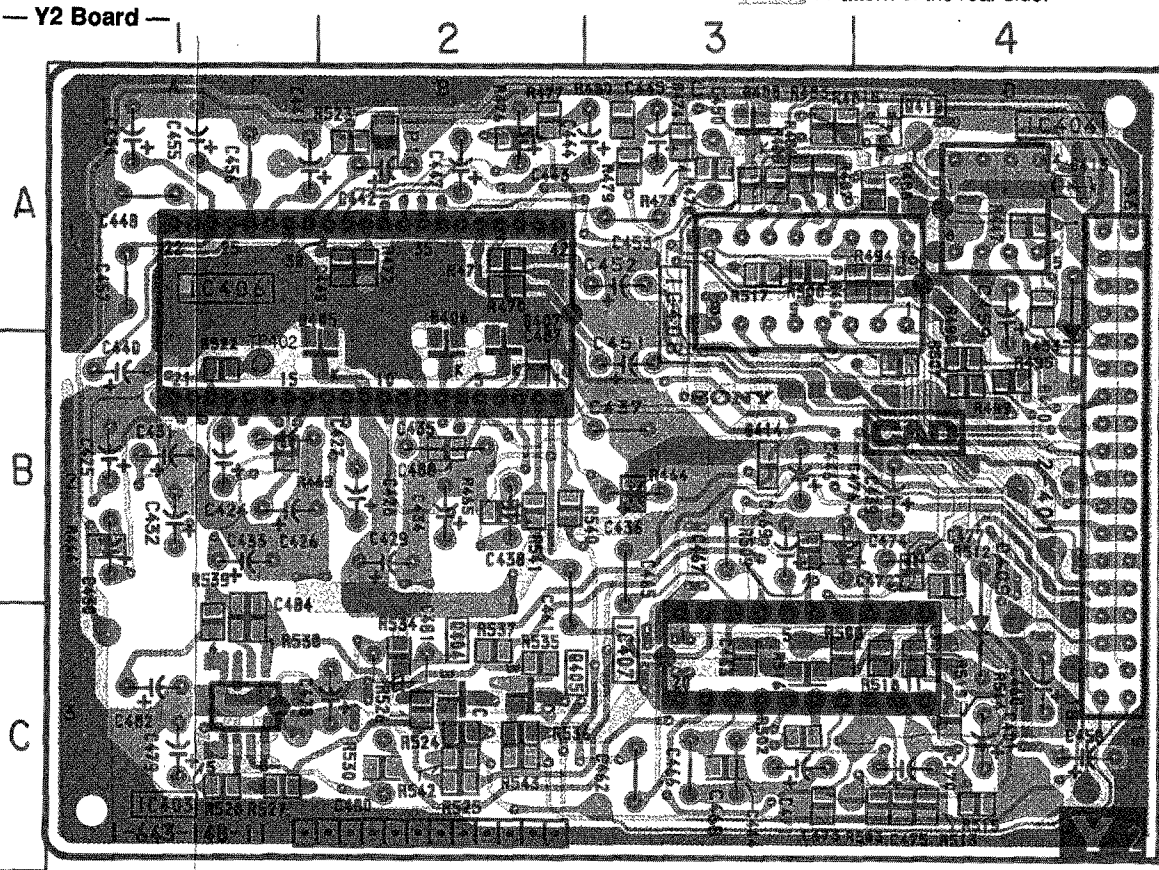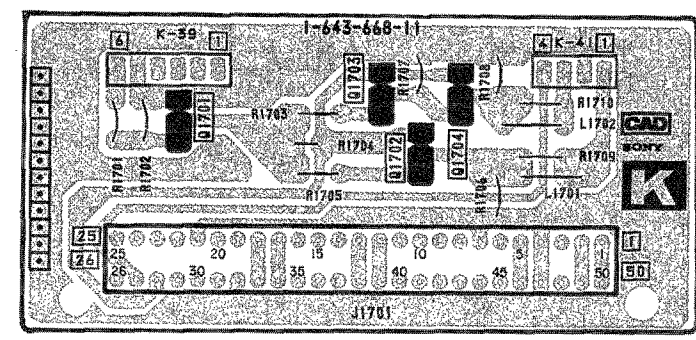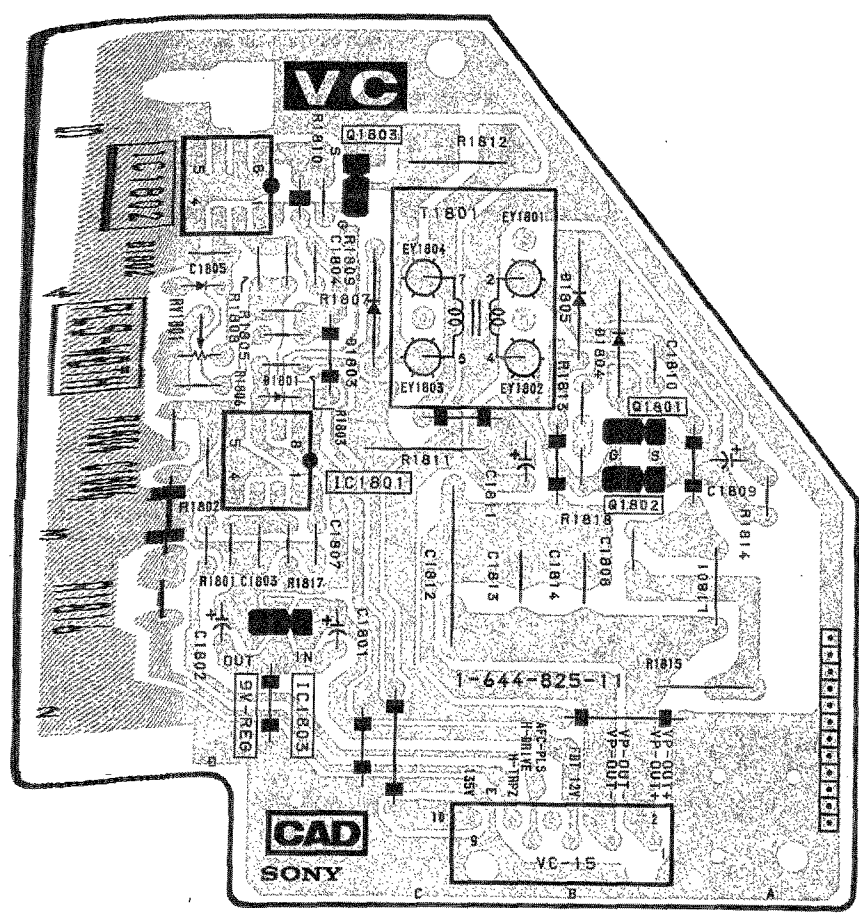

IC	
IC403	C-1
404	A-4
406	A-2
407	C-3
408	A-3
TRANSISTOR	
Q404	C-2
405	C-2
409	F-4
410	A-4
DIODE	
D405	B-2
406	B-2
407	B-2
408	A-3
409	C-4
410	A-4
413	A-4
414	B-3
415	E-4
TEST POINT	
TP1	A-2

— HX2 Board —

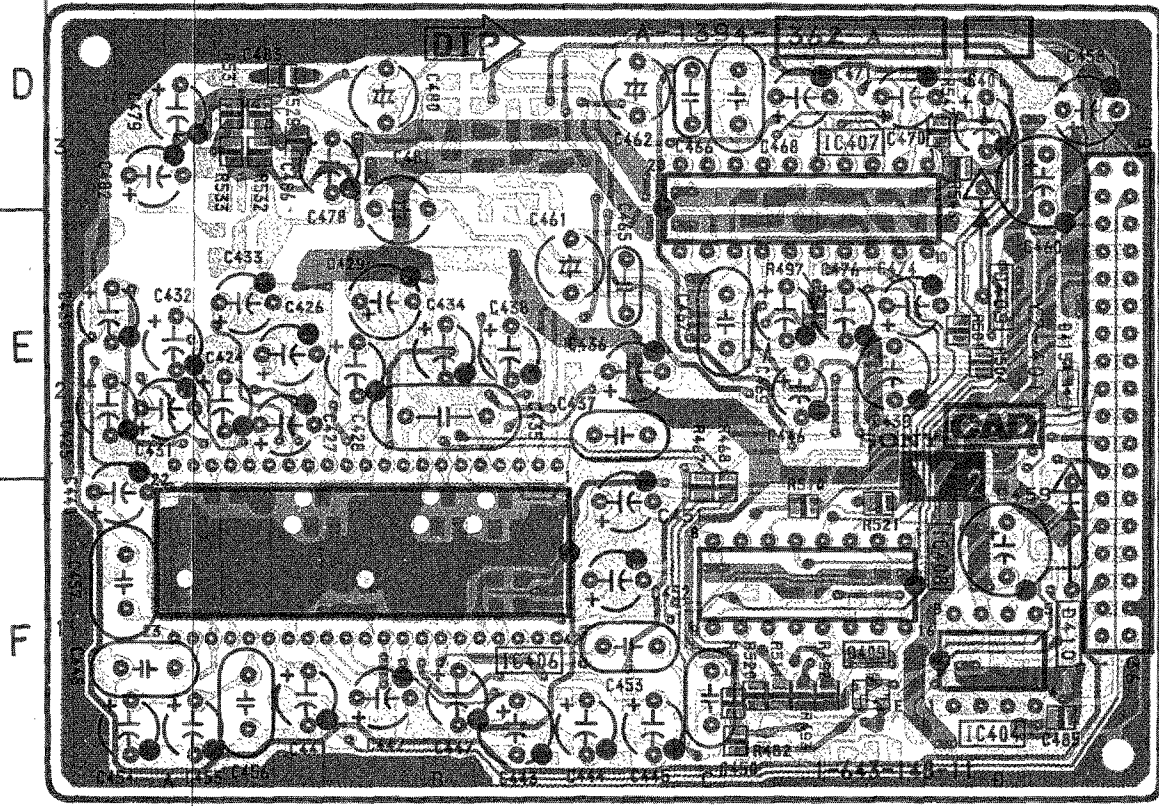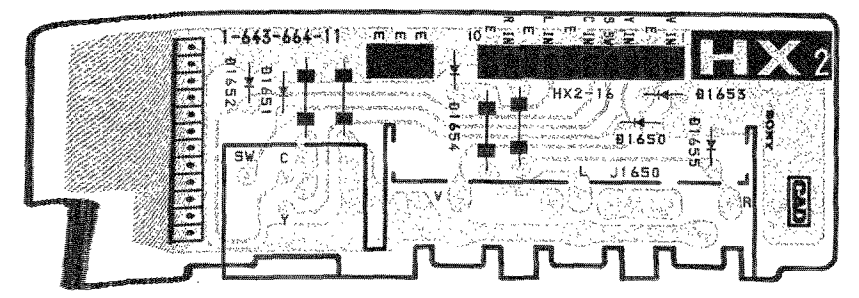


6-7. SEMICONDUCTORS


AN78N05A
#PC78N05H




CXA1387S

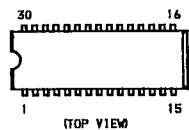


DM44

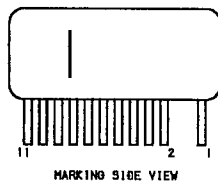

M37201M6-A18FP
TMC73C247-07

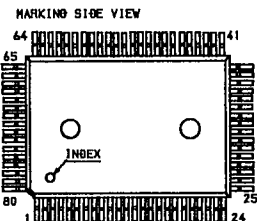


SI-3090CA
SI-3120CA



IMZ1
IMX3




2SA1175
2SA1309A
2SA933S
2SC2785
2SC3311A

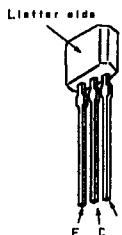


2SB860
2SD1585-LK
2SD2012




D6SB60L

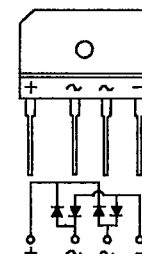

PC817
PS2501




1T33

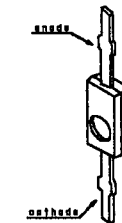


AN7812
M5F7805L
NJM7805FA
RC7805FA
RC7812FA
TA78012AP
TA7805S
#PC7812H




CXA1465AS
CXA1545S

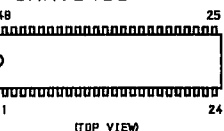


L78LR05D-MA



M5M4C500L-10



SN74HC05ANS




IRF540Y
IRF610
IRF614
2SK1916




2SA1306A-Y
2SC3298A-Y
2SC3298B-Y
2SD2061




2SD874A




EGP20G
ERA81-004
ERB44-06
GP08D
RGP02-17
RGP10G
RGP15G
RGP15GPKG23
RU30A
1SS83




PC817-B




LM358P
LM393P
#PC358C
#PC393C
#PC4557C
24C04A1

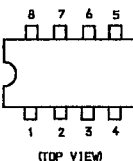


NJM2903S



TAB128P

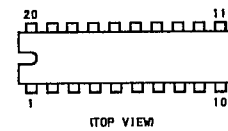

XN5501




2SB734
2SC3733
2SD774




D1N54
D1N20R
D2S4M
EGP20G
ERA38-06
ERB2-004
RB-100A
R012ES-B2
R013ES-B2
R02.2ES-B2
R030ES-B2
R03.3ES-B2
R033ES-B2
R039ES-B2
R04.3ES-B2
R04.7ES-B3
R05.1ES-B3
R05.6ES-B1
R06.2ES-B2
R06.8ES-B1
R07.5ES-B2
R09.1ES-B
R09.1ES-L
RGP02-20EL
1SS119
WG713A


ERB24-06D
RGP10GPKG23
RU3AM
S2L20UF




R05.6SB-T2
R06.2B-T2
1SS352

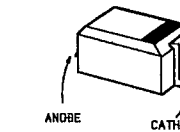


CXA1228S
SBX1694-01

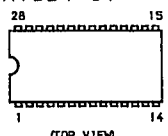

CXK1006L




MB81256-12PSZ



NJM78L09A
RC78L09A




T0A8179S

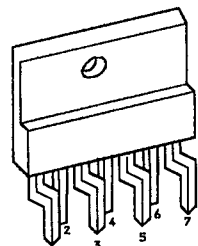


2SA1015
2SA10910
2SA1091R
2SA1091-0
2SA733K
2SC25510
2SC2551-0




2SC2611
2SC2688
2SC3840K




2SC4664NPR

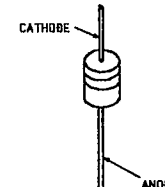


FMN1




R09.1EW

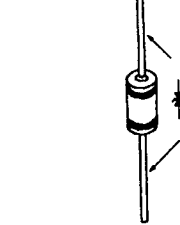


CXA1264AS

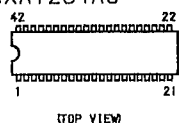


CXP5068H-081Q
RC4558PS
#PC4570G2

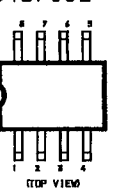

MB88733-143

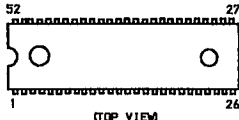

PCA8510T-012

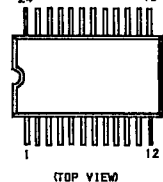

#PC24M05HF




2SA1037K
2SA1162
2SB709A
2SC2412K
2SD601A




2SC4664NPR




MA110
MA5091

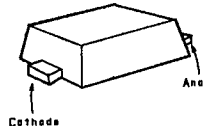


SHOR3D42

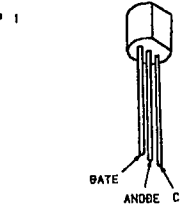


CXA1315P
CXA1526P
RC78M05FA

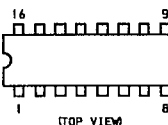


CX20061




MN1280-5




SBX1483-59




FMW1
XN1501




2SC4763

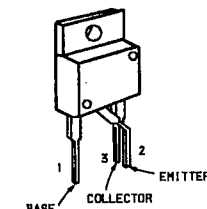


D10SC4MR




MA3130
R018M-B1
R05.1M-B3




TLR124

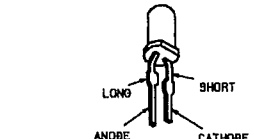


U05G

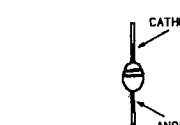


IMZ1
IMX3



IRF540Y
IRF610
IRF614
25K1916




XN5501

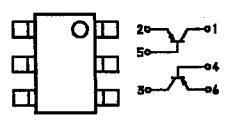


25A1015
25A10910
25A1091R
25A1091-0
25A733K
25C25510
25C2551-0



25A1037K
25A1162
25B709A
25C2412K
25B601A




25A1175
25A1309A
25A9335
25C2785
25C3311A

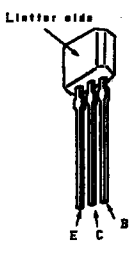

25A1306A-Y
25C3298A-Y
25C3298B-Y
25B2061



25B734
25C3733
25B774




25C2611
25C2688
25C3840K



25C4664NPR




25C4763

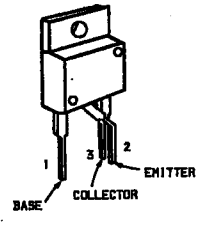


25B860
25B1585-LK
25B2012




25B874A

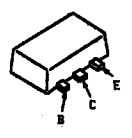

25K1917

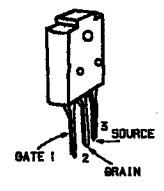


Ø1N54
Ø1N20R
Ø254M
EGP20G
ERA38-06
ERA82-004
RB-100A
RØ12ES-B2
RØ13ES-B2
RØ2.2ES-B2
RØ30ES-B2
RØ3.3ES-B2
RØ33ES-B2
RØ39ES-B2
RØ4.3ES-B2
RØ4.7ES-B3
RØ5.1ES-B3
RØ5.6ES-B1
RØ6.2ES-B2
RØ6.8ES-B1
RØ7.5ES-B2
RØ9.1ES-B
RØ9.1ES-L
RGP02-20EL
15S119
WG713A

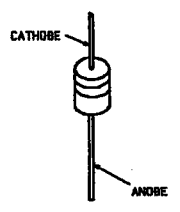


Ø10SC4MR




Ø6SB60L

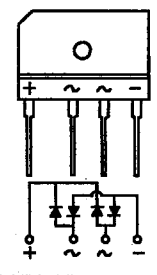


EGP20G
ERA81-004
ERB44-06
GP08Ø
RGP02-17
RGP10G
RGP15G
RGP15GPKG23
RU30A
15S83

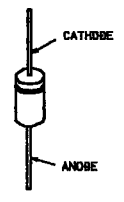


ERB24-06Ø
RGP10GPKG23
RU3AM
S2L20UF

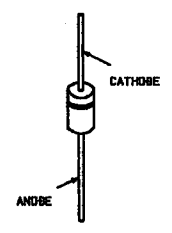


FMN1




MA110
MA5091

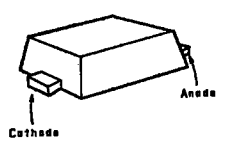


MA3130
RØ18M-B1
RØ5.1M-B3

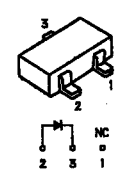


PC817
PS2501




RØ15M-B1
RØ18M-B1
RØ5.1M-B3

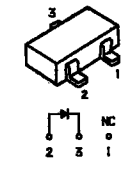


PC817-B




RØ5.6SB-T2
RØ6.2B-T2
15S352

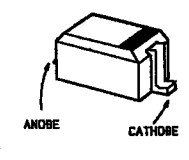


RØ9.1EW




SHOR3Ø42

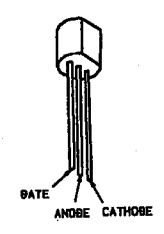


TLR124

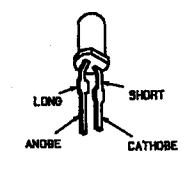

U05G

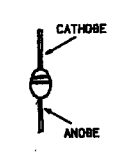

IT33

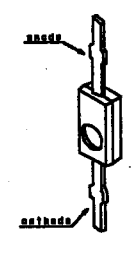

SECTION 7 EXPLODED VIEWS

NOTE:

- Items with no part number and no description are not stocked because they are seldom required for routine service
- The construction parts of an assembled part are indicated with a collation number in the remark column


- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items

The components identified by shading and mark **▲** are critical for safety. Replace only with part number specified.

Les composants identifiés par une trame et une marque **▲** sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

7-1. CHASSIS


- : BVTP3x12 7-685-648-79
- : BVTP4x16 7-685-663-79

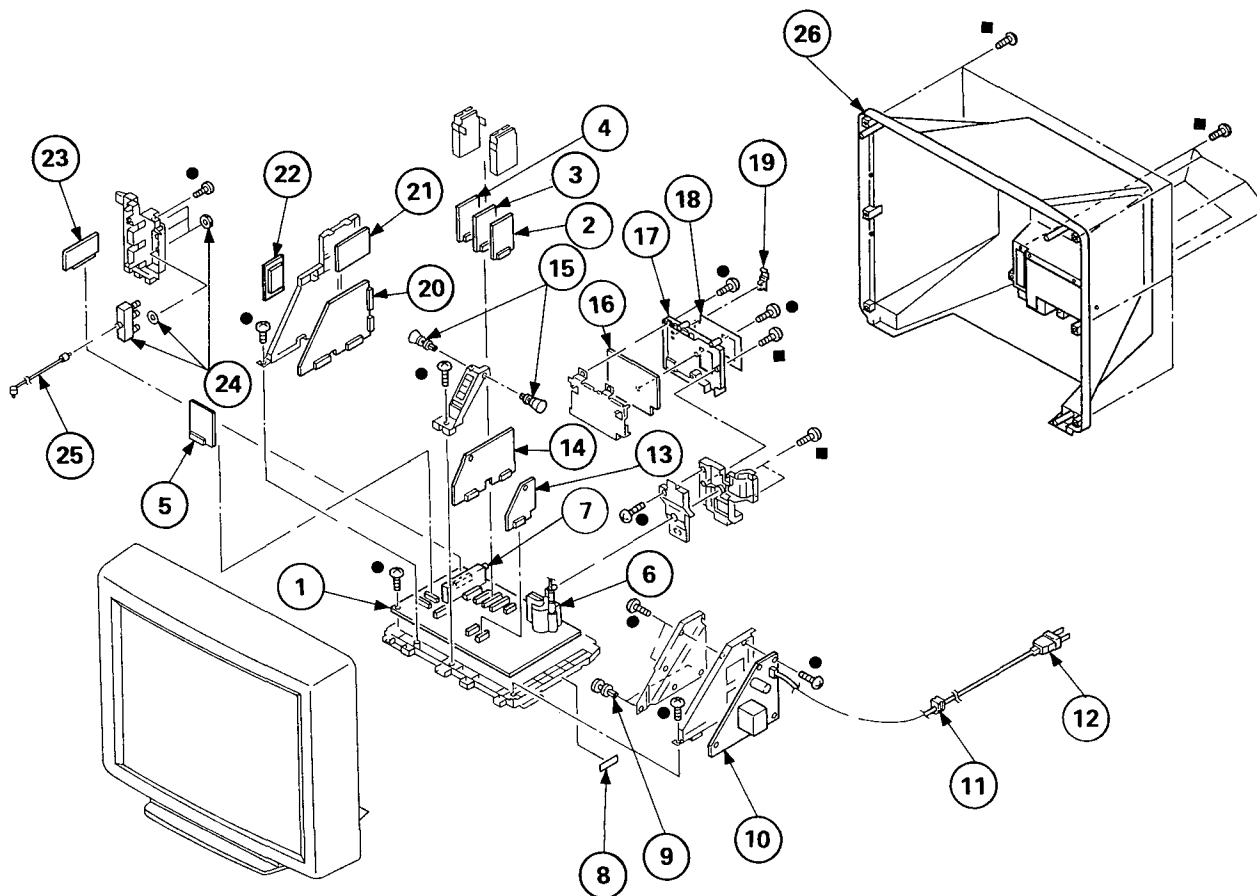

REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
1	*A-1296-948-A	A BOARD, COMPLETE	2~5	14	*A-1341-550-A	D BOARD, COMPLETE	
2	*A-1346-059-A	E1 BOARD, COMPLETE		15	*4-397-418-01	RIVET, T TYPE	
3	*A-1346-060-A	E2 BOARD, COMPLETE		16	*A-1373-330-A	UT BOARD, COMPLETE	
4	*A-1306-417-A	M BOARD, COMPLETE		17	4-035-204-21	BRACKET, UT	
5	*A-1394-366-A	Y2 BOARD, COMPLETE		18	4-035-982-21	LABEL, UT	
6	▲ 1-453-126-11	TRANSFORMER ASSY, FLYBACK (NX-100043)		19	4-329-127-00	CLAMP, CORD	
7	▲ 1-693-102-11	TUNER (8TF-XA401)		20	*A-1373-326-A	U BOARD, COMPLETE	
8	*3-703-044-26	LABEL, CAUTION		21	*1-643-669-11	S BOARD	
9	4-374-303-01	RIVET, NYLON		22	*A-1195-054-A	P4 BOARD, COMPLETE	
10	*A-1316-143-A	G BOARD, COMPLETE		23	*1-643-668-11	K BOARD	
11	▲ 4-334-223-03	GROMMET, AC CORD		24	▲ 1-417-177-11	SELECTOR, ANTENNA (AS-1)	
12	▲ 1-696-002-12	CORD, POWER (WITH NOISE FILTER)		25	*1-555-400-00	CABLE, PIN	
13	*A-1347-067-A	VC BOARD, COMPLETE		26	4-035-007-01	COVER, REAR	

7-2. PICTURE TUBE

- : BVTP3x12 7-685-648-79
- : BVTP4x16 7-685-650-79

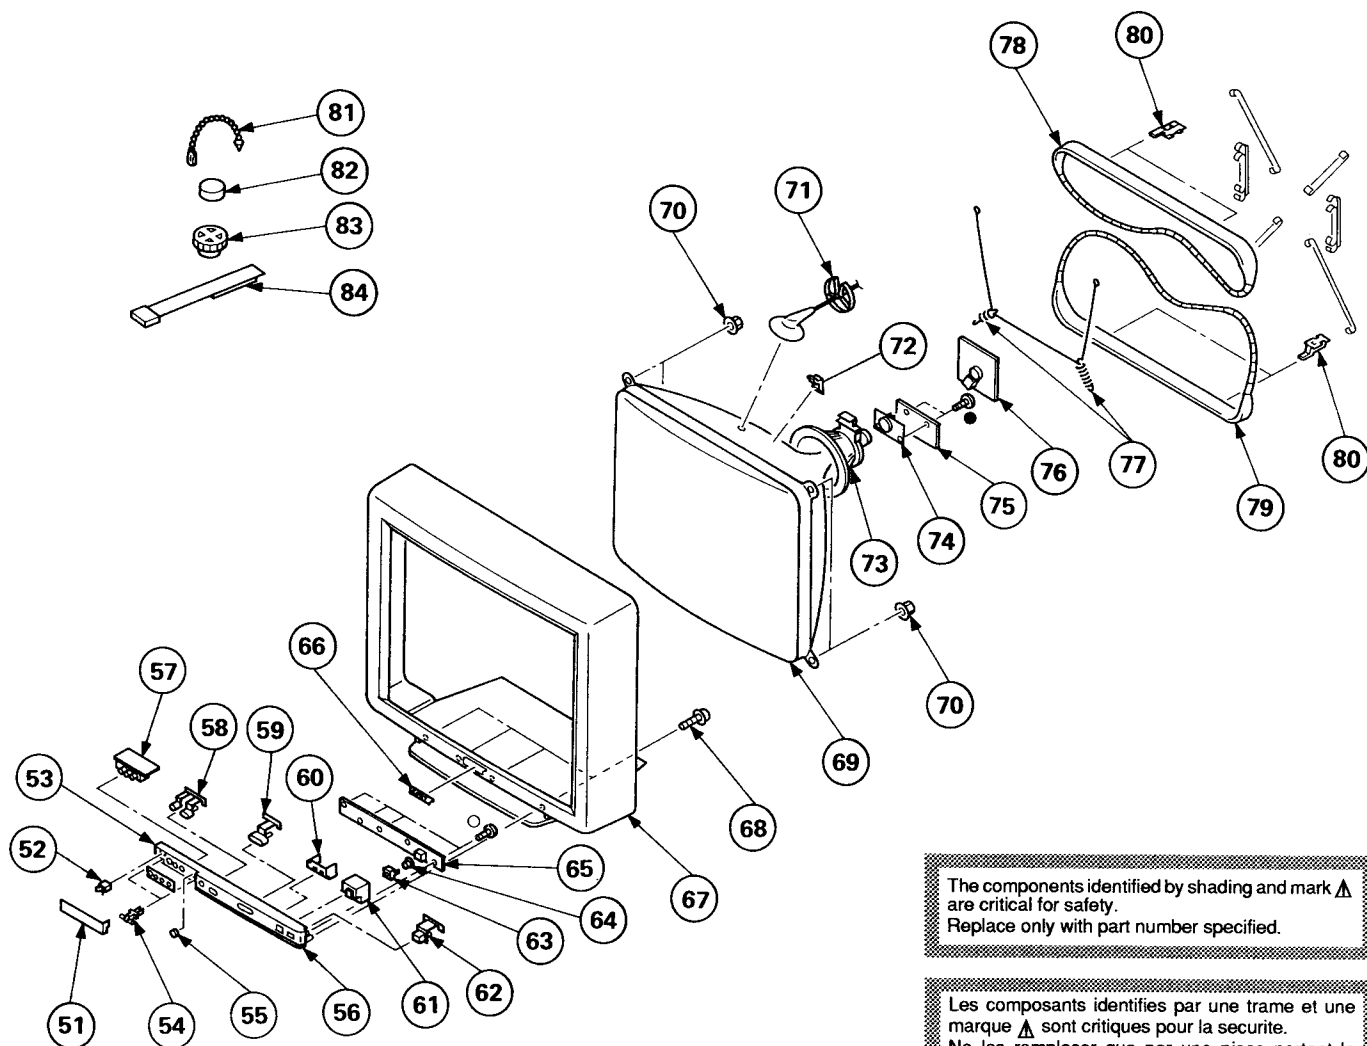

The components identified by shading and mark **▲** are critical for safety. Replace only with part number specified.

Les composants identifiés par une trame et une marque **▲** sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
51	4-035-199-11	DOOR, FRONT PANEL		68	4-319-520-11	SCREW, SPECIAL (+PW4X30)	
52	4-392-036-01	CATCHER, PUSH		69	▲ 8-733-731-05	PICTURE TUBE (MBIKVA10X)	
53	4-036-727-01	LABEL, JACK		70	4-387-204-01	NUT, SPECIAL, PICTURE TUBE	
54	3-703-035-11	SHAFT, LID		71	*3-704-372-01	HOLDER, HV CABLE	
55	4-314-871-00	CUSHION		72	3-704-495-01	SPACER, DY	
56	4-035-057-11	PANEL, FRONT		73	▲ 1-451-393-11	DEFLECTION YOKE (Y34EXA)	
57	*1-643-664-11	HX2 BOARD		74	▲ 1-452-616-12	NECK ASSY, PICTURE TUBE (NA323)	
58	4-035-179-01	BUTTON (A), MULTI		75	*A-1342-182-A	V BOARD, COMPLETE	
59	4-035-154-01	BUTTON (B), MULTI		76	*A-1331-209-A	C BOARD, COMPLETE	
60	4-035-120-01	GUIDE, LIGHT, LED		77	4-036-329-01	SPRING (B), TENSION	
61	4-035-119-01	FILTER (REMOTE CONTROL)		78	▲ 1-426-575-11	COIL, DEGAUSSING	
62	4-035-153-01	BUTTON, POWER		79	▲ 1-426-576-11	COIL, DEGAUSSING	
63	*4-381-686-01	BRACKET (B), LIGHT GUIDE		80	4-033-744-01	CLIP	
64	*4-388-603-01	GUIDE, LIGHT		81	4-308-870-00	CLIP, LEAD WIRE	
65	*1-643-663-11	HX1 BOARD		82	1-452-032-00	MAGNET, DISK: 10MM ϕ	
66	3-704-179-01	EMBLEM (NO.9), SONY		83	1-452-094-00	MAGNET, ROTATABLE DISK: 15MM ϕ	
67	4-035-034-01	CABINET (WITH BEZEL)		84	X-4306-312-0	PERMALLOY ASSY, CONVERGENCE	

P4

SECTION 8
ELECTRICAL PARTS LIST

NOTE:

The components identified by shading and mark **Δ** are critical for safety.
Replace only with part number specified.

Les composants identifiés par une trame et une marque **Δ** sont critiques pour la sécurité.
Ne les remplacer que par une pièce portant le numéro spécifié.

• Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

• All variable and adjustable resistors have characteristic curve B, unless otherwise noted.

RESISTORS
• All resistors are in ohms
• F: nonflammable

When indicating parts by reference number, please include the board name.

CAPACITORS
• MF: μ F, PF: μ μ F
• The components identified by **Δ** in this manual have been carefully factory-selected for each set in order to satisfy regulations regarding X-ray radiation.
Should replacement be required, replace only with the value originally used.

COILS
• MMH: mH, UH: μ H

REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
*A-1195-054-A	P4 BOARD, COMPLETE	*****				<IC>	
		<CAPACITOR>					
C1201	1-124-261-00	ELECT 10MF	20% 50V	IC1201	8-759-112-06	IC UPC78N05H	
C1202	1-163-111-00	CERAMIC CHIP 56PF	5% 50V	IC1202	8-752-055-90	IC CXA1586M	
C1203	1-126-177-11	ELECT 100MF	20% 6.3V	IC1203	8-759-112-06	IC UPC78N05H	
C1204	1-124-261-00	ELECT 10MF	20% 50V	IC1204	8-741-694-01	IC SBX1694-01	
C1205	1-163-113-00	CERAMIC CHIP 68PF	5% 50V			<COIL>	
C1207	1-163-105-00	CERAMIC CHIP 33PF	5% 50V	L1201	1-414-042-21	INDUCTOR 18UH	
C1208	1-124-589-11	ELECT 47MF	20% 16V	L1202	1-414-042-21	INDUCTOR 18UH	
C1209	1-164-004-11	CERAMIC CHIP 0.1MF	10% 25V	L1203	1-414-042-21	INDUCTOR 18UH	
C1210	1-124-589-11	ELECT 47MF	20% 16V	L1204	1-410-484-11	INDUCTOR 150UH	
C1211	1-164-004-11	CERAMIC CHIP 0.1MF	10% 25V	L1205	1-414-042-21	INDUCTOR 18UH	
C1212	1-124-589-11	ELECT 47MF	20% 16V	L1206	1-414-042-21	INDUCTOR 18UH	
C1213	1-164-004-11	CERAMIC CHIP 0.1MF	10% 25V			<CONNECTOR>	
C1214	1-124-589-11	ELECT 47MF	20% 16V	P432	*1-564-522-11	PLUG, CONNECTOR 7P	
C1215	1-164-004-11	CERAMIC CHIP 0.1MF	10% 25V			<TRANSISTOR>	
C1216	1-163-123-00	CERAMIC CHIP 180PF	5% 50V	Q1201	8-729-920-74	TRANSISTOR 2SC2412K-QR	
C1218	1-164-004-11	CERAMIC CHIP 0.1MF	10% 25V	Q1202	8-729-920-74	TRANSISTOR 2SC2412K-QR	
C1219	1-124-589-11	ELECT 47MF	20% 16V	Q1203	8-729-920-74	TRANSISTOR 2SC2412K-QR	
C1223	1-124-589-11	ELECT 47MF	20% 16V	Q1204	8-729-216-22	TRANSISTOR 2SA1162-G	
C1224	1-164-004-11	CERAMIC CHIP 0.1MF	10% 25V	Q1205	8-729-920-74	TRANSISTOR 2SC2412K-QR	
C1226	1-163-009-11	CERAMIC CHIP 0.001MF	10% 50V	Q1206	8-729-920-74	TRANSISTOR 2SC2412K-QR	
C1227	1-164-004-11	CERAMIC CHIP 0.1MF	10% 25V	Q1207	8-729-920-74	TRANSISTOR 2SC2412K-QR	
C1228	1-124-589-11	ELECT 47MF	20% 16V	Q1208	8-729-216-22	TRANSISTOR 2SA1162-G	
C1230	1-130-483-00	MYLAR 0.01MF	5% 50V	Q1209	8-729-920-74	TRANSISTOR 2SC2412K-QR	
C1231	1-164-232-11	CERAMIC CHIP 0.01MF	10% 50V	Q1210	8-729-920-74	TRANSISTOR 2SC2412K-QR	
C1232	1-163-017-00	CERAMIC CHIP 0.0047MF	10% 50V	Q1211	8-729-216-22	TRANSISTOR 2SA1162-G	
C1233	1-163-809-11	CERAMIC CHIP 0.047MF	10% 25V	Q1217	8-729-920-74	TRANSISTOR 2SC2412K-QR	
C1234	1-124-257-00	ELECT 2.2MF	20% 50V	Q1218	8-729-216-22	TRANSISTOR 2SA1162-G	
C1236	1-163-093-00	CERAMIC CHIP 10PF	5% 50V	Q1223	8-729-216-22	TRANSISTOR 2SA1162-G	
C1237	1-163-017-00	CERAMIC CHIP 0.0047MF	10% 50V			<RESISTOR>	
C1238	1-124-465-00	ELECT 0.47MF	20% 50V	R1201	1-216-001-00	METAL GLAZE 10 5% 1/10W	
C1239	1-163-235-11	CERAMIC CHIP 22PF	5% 50V	R1202	1-216-089-00	METAL GLAZE 47K 5% 1/10W	
C1242	1-124-589-11	ELECT 47MF	20% 16V	R1203	1-216-025-00	METAL GLAZE 100 5% 1/10W	
C1243	1-164-004-11	CERAMIC CHIP 0.1MF	10% 25V	R1204	1-216-689-11	METAL GLAZE 39K 5% 1/10W	
C1244	1-164-004-11	CERAMIC CHIP 0.1MF	10% 25V	R1205	1-216-077-00	METAL GLAZE 15K 5% 1/10W	
C1245	1-124-589-11	ELECT 47MF	20% 16V	R1206	1-216-645-11	METAL CHIP 560 0.50% 1/10W	
C1246	1-164-232-11	CERAMIC CHIP 0.01MF	10% 50V	R1207	1-216-035-00	METAL GLAZE 270 5% 1/10W	
C1247	1-124-589-11	ELECT 47MF	20% 16V	R1208	1-216-637-11	METAL CHIP 270 0.50% 1/10W	
C1249	1-124-261-00	ELECT 10MF	20% 50V	R1209	1-216-035-00	METAL GLAZE 270 5% 1/10W	
C1250	1-130-483-00	MYLAR 0.01MF	5% 50V	R1210	1-216-689-11	METAL GLAZE 39K 5% 1/10W	
		<FILTER>		R1211	1-216-077-00	METAL GLAZE 15K 5% 1/10W	
FL1201	1-236-620-11	FILTER, LOW PASS		R1212	1-216-075-00	METAL GLAZE 12K 5% 1/10W	
FL1202	1-236-620-11	FILTER, LOW PASS		R1213	1-216-043-00	METAL GLAZE 560 5% 1/10W	
FL1203	1-236-620-11	FILTER, LOW PASS					

The components identified by shading and mark Δ are critical for safety. Replace only with part number specified.

Les composants identifiés par une trame et une marque Δ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

P4 A

REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
R1214	1-216-057-00	METAL GLAZE 2.2K 5% 1/10W					
R1215	1-216-025-00	METAL GLAZE 100 5% 1/10W					
R1216	1-216-001-00	METAL GLAZE 10 5% 1/10W					
R1217	1-216-089-00	METAL GLAZE 47K 5% 1/10W					
R1218	1-216-025-00	METAL GLAZE 100 5% 1/10W					
R1219	1-216-075-00	METAL GLAZE 12K 5% 1/10W					
R1220	1-216-061-00	METAL GLAZE 3.3K 5% 1/10W					
R1221	1-216-645-11	METAL CHIP 560 0.50% 1/10W					
R1222	1-216-035-00	METAL GLAZE 270 5% 1/10W					
R1223	1-216-639-11	METAL CHIP 330 0.50% 1/10W					
R1224	1-216-035-00	METAL GLAZE 270 5% 1/10W					
R1225	1-216-067-00	METAL GLAZE 5.6K 5% 1/10W					
R1228	1-216-043-00	METAL GLAZE 560 5% 1/10W					
R1229	1-216-057-00	METAL GLAZE 2.2K 5% 1/10W					
R1230	1-216-025-00	METAL GLAZE 100 5% 1/10W					
R1231	1-216-073-00	METAL GLAZE 10K 5% 1/10W					
R1232	1-215-857-11	METAL OXIDE 10 5% 1W	F				
R1233	1-216-109-00	METAL GLAZE 330K 5% 1/10W					
R1234	1-216-109-00	METAL GLAZE 330K 5% 1/10W					
R1235	1-215-859-00	METAL OXIDE 22 5% 1W	F				
R1236	1-216-073-00	METAL GLAZE 10K 5% 1/10W					
R1247	1-216-049-00	METAL GLAZE 1K 5% 1/10W					
R1248	1-216-067-00	METAL GLAZE 5.6K 5% 1/10W					
R1249	1-216-043-00	METAL GLAZE 560 5% 1/10W					
R1250	1-216-049-00	METAL GLAZE 1K 5% 1/10W					
R1251	1-216-025-00	METAL GLAZE 100 5% 1/10W					
R1253	1-216-077-00	METAL GLAZE 15K 5% 1/10W					
R1254	1-216-639-11	METAL CHIP 330 0.50% 1/10W					
R1255	1-216-620-11	METAL CHIP 51 0.50% 1/10W					
R1256	1-216-073-00	METAL GLAZE 10K 5% 1/10W					
R1257	1-216-049-00	METAL GLAZE 1K 5% 1/10W					
R1259	1-216-644-11	METAL CHIP 510 0.50% 1/10W					
R1260	1-216-295-00	METAL GLAZE 0 5% 1/10W					
R1261	1-216-025-00	METAL GLAZE 100 5% 1/10W					
R1262	1-216-049-00	METAL GLAZE 1K 5% 1/10W					
R1263	1-216-025-00	METAL GLAZE 100 5% 1/10W					
R1264	1-216-089-00	METAL GLAZE 47K 5% 1/10W					
R1265	1-216-089-00	METAL GLAZE 47K 5% 1/10W					
R1266	1-216-069-00	METAL GLAZE 6.8K 5% 1/10W					
R1267	1-216-057-00	METAL GLAZE 2.2K 5% 1/10W					
R1268	1-216-071-00	METAL GLAZE 8.2K 5% 1/10W					
R1269	1-216-049-00	METAL GLAZE 1K 5% 1/10W					
R1270	1-216-039-00	METAL GLAZE 390 5% 1/10W					
R1271	1-216-025-00	METAL GLAZE 100 5% 1/10W					
R1272	1-216-001-00	METAL GLAZE 10 5% 1/10W					
R1273	1-216-049-00	METAL GLAZE 1K 5% 1/10W					
R1274	1-216-630-11	METAL CHIP 130 0.50% 1/10W					
R1275	1-216-001-00	METAL GLAZE 10 5% 1/10W					
R1281	1-216-049-00	METAL GLAZE 1K 5% 1/10W					
R1284	1-216-025-00	METAL GLAZE 100 5% 1/10W					
R1286	1-216-001-00	METAL GLAZE 10 5% 1/10W					
<CRYSTAL>							
X1201	1-577-611-11	OSCILATOR, CERAMIC					
X1202	1-567-878-11	VIBRATOR, CRYSTAL					

*A-1296-948-A	A BOARD, COMPLETE						

*4-341-751-01	EYELET (EY101~EY172)						
*4-341-752-01	EYELET (EY2~EY55)						
4-382-854-11	SCREW (M3X10), P, SW (+)						
				<CONNECTOR>			
A2	*1-573-964-11	PIN, CONNECTOR (PC BOARD) 6P					
A3	*1-573-986-11	PIN, CONNECTOR (PC BOARD) 5P					
A4	*1-564-510-11	PLUG, CONNECTOR 7P					
A5	*1-564-507-11	PLUG, CONNECTOR 4P					
A12	1-573-297-11	CONNECTOR, BOARD TO BOARD 18P					
A13	1-573-297-11	CONNECTOR, BOARD TO BOARD 18P					
A14	1-573-296-11	CONNECTOR, BOARD TO BOARD 10P					
A15	1-573-296-11	CONNECTOR, BOARD TO BOARD 10P					
A18	1-573-296-11	CONNECTOR, BOARD TO BOARD 10P					
A21	*1-508-768-00	PIN, CONNECTOR (5MM PITCH) 6P					
A37	*1-564-514-11	PLUG, CONNECTOR 11P					
A49	*1-564-506-11	PLUG, CONNECTOR 3P					
A100	*1-573-979-11	CONNECTOR, BOARD TO BOARD 11P					
DY1	*1-580-798-11	CONNECTOR PIN (DY) 6P					
ES002	*1-573-960-11	CONNECTOR (FEMALE) 50P					
				<CAPACITOR>			
C201	1-126-101-11	ELECT 100MF 20% 16V					
C210	1-102-121-00	CERAMIC 0.0022MF 10% 50V					
C211	1-101-006-00	CERAMIC 0.047MF 50V					
C213	1-126-103-11	ELECT 470MF 20% 16V					
C214	1-126-101-11	ELECT 100MF 20% 16V					
C215	1-124-910-11	ELECT 47MF 20% 50V					
C216	1-126-101-11	ELECT 100MF 20% 16V					
C217	1-124-126-00	ELECT 47MF 20% 25V					
C218	1-126-103-11	ELECT 470MF 20% 16V					
C219	1-136-169-00	FILM 0.22MF 5% 50V					
C220	1-124-910-11	ELECT 47MF 20% 50V					
C223	1-123-875-11	ELECT 10MF 20% 50V					
C224	1-124-261-00	ELECT 10MF 20% 50V					
C225	1-124-120-11	ELECT 220MF 20% 16V					
C226	1-124-621-11	ELECT 3300MF 20% 6.3V					
C299	1-126-101-11	ELECT 100MF 20% 16V					
C501	1-137-114-11	FILM 0.68MF 5% 200V					
C502	1-130-471-00	FILM 0.001MF 5% 50V					
C503	1-124-261-00	ELECT 10MF 20% 50V					
C504	1-136-161-00	FILM 0.047MF 5% 50V					
C505	1-124-790-11	ELECT 0.47MF 20% 100V					
C506	1-124-480-11	ELECT 470MF 20% 25V					
C507	1-130-473-00	MYLAR 0.0015MF 5% 50V					
C508	1-162-114-00	CERAMIC 0.0047MF 2KV					
C509	1-124-808-51	ELECT 10MF 20% 200V					
C510	1-102-110-00	CERAMIC 220PF 10% 50V					
C511	1-124-477-11	ELECT 47MF 20% 25V					
C512	1-162-318-11	CERAMIC 0.001MF 10% 500V					
C513	1-106-391-12	MYLAR 0.1MF 10% 200V					
C514	1-124-477-11	ELECT 47MF 20% 25V					
C515	1-162-117-00	CERAMIC 100PF 10% 500V					
C517	1-124-477-11	ELECT 47MF 20% 25V					
C518	1-136-161-00	FILM 0.047MF 5% 50V					
C519	1-124-472-11	ELECT 470MF 20% 10V					
C520 Δ	1-161-731-51	CERAMIC 0.001MF 10% 2KV					
C521 Δ	1-137-604-21	FILM 0.022MF 2% 200V					
C522	1-162-116-00	CERAMIC 680PF 10% 2KV					
C523	1-124-465-00	ELECT 0.47MF 20% 50V					
C524	1-130-487-00	MYLAR 0.022MF 5% 50V					
C525	1-162-116-00	CERAMIC 680PF 10% 2KV					
C526 Δ	1-137-515-91	FILM 0.050MF 3% 400V					
C527	1-136-167-00	FILM 0.15MF 5% 50V					
C528	1-106-359-00	MYLAR 0.0047MF 10% 200V					



Les composants identifiés par une
trame et une marque **Δ** sont
critiques pour la sécurité.
Ne les remplacer que par une pièce
portant le numéro spécifique.

The components identified by
shading and mark **Δ** are critical
for safety.
Replace only with part number
specified.

REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
C529	1-136-161-00	FILM 0.047MF 5%	50V	D501	8-719-018-82	DIODE RGPO2-20EL-6394	
C530	1-136-105-00	FILM 0.33MF 5%	200V	D502 Δ 8-719-302-43	DIODE EL1Z		
C531	1-124-634-11	ELECT 1MF 20%	250V	D503	8-719-970-87	DIODE ERA38-06	
C532	1-124-477-11	ELECT 47MF 20%	25V	D504	8-719-911-19	DIODE 1SS119	
C533	1-137-516-11	FILM 1.2MF 5%	200V	D506	8-719-109-90	DIODE RD5.6ES-B3	
C534	1-137-114-11	FILM 0.68MF 5%	200V	D508	8-719-109-88	DIODE RD5.6B3S-B1	
C535	1-124-480-11	ELECT 470MF 20%	25V	D509	8-719-110-03	DIODE RD7.5ES-B2	
C536	1-102-228-00	CERAMIC 470PF 10%	500V	D510	8-719-911-19	DIODE 1SS119	
C537	1-106-343-00	MYLAR 0.001MF 10%	100V	D511	8-719-300-33	DIODE RU-3AM	
C538	1-106-391-12	MYLAR 0.1MF 10%	200V	D512	8-719-911-55	DIODE U05G	
C539	1-123-950-00	ELECT 47MF 20%	250V	D513	8-719-911-55	DIODE U05G	
C540	1-124-480-11	ELECT 470MF 20%	25V	D514	8-719-312-72	DIODE RU30A	
C541	1-102-228-00	CERAMIC 470PF 10%	500V	D515	8-719-300-33	DIODE RU-3AM	
C542	1-106-387-00	MYLAR 0.068MF 10%	200V	D516	8-719-979-85	DIODE EGP20G	
C543	1-129-898-00	FILM 0.0022MF 5%	630V	D517	8-719-943-06	DIODE ERB24-06D	
C544	1-124-797-11	ELECT 0.47MF 20%	160V	D518	8-719-109-93	DIODE RD6.2ES-B2	
C545	1-102-244-00	CERAMIC 220PF 10%	500V	D521	8-719-911-19	DIODE 1SS119	
C546	1-123-024-21	ELECT 33MF 10%	160V	D522	8-719-110-72	DIODE RD30ES-B2	
C547	1-130-471-00	MYLAR 0.001MF 5%	50V	D524	8-719-976-64	DIODE RGPO2-17	
C548	1-130-467-00	MYLAR 470PF 5%	50V	D525	8-719-911-19	DIODE 1SS119	
C549	1-124-261-00	ELECT 10MF 20%	50V	D527	8-719-110-78	DIODE RD33ES-B2	
C550	1-129-702-00	FILM 0.001MF 10%	630V	D529	8-719-911-19	DIODE 1SS119	
C551	1-130-471-00	MYLAR 0.001MF 5%	50V	D530	8-719-911-19	DIODE 1SS119	
C552	1-126-176-11	ELECT 220MF 20%	10V	D1408	8-719-911-19	DIODE 1SS119	
C553	1-124-261-00	ELECT 10MF 20%	50V	D1412	8-719-911-19	DIODE 1SS119	
C554 Δ 1-161-731-51	CERAMIC 0.001MF 10%	2KV		D1413	8-719-911-19	DIODE 1SS119	
C555	1-123-947-00	ELECT 10MF 20%	250V	D1414	8-719-911-19	DIODE 1SS119	
C557	1-124-465-00	ELECT 0.47MF 20%	50V	D1503	8-719-911-55	DIODE U05G	
C559	1-129-718-00	FILM 0.022MF 5%	630V				
C560	1-136-169-00	FILM 0.22MF 5%	50V				
C561	1-124-261-00	ELECT 10MF 20%	50V				
C562	1-124-499-11	ELECT 1MF 20%	50V				
C563	1-130-491-00	MYLAR 0.047MF 5%	50V				
C564	1-130-495-00	MYLAR 0.1MF 5%	50V				
C565	1-130-495-00	MYLAR 0.1MF 5%	50V				
C569	1-130-497-00	MYLAR 0.15MF 5%	50V				
C570	1-130-471-00	MYLAR 0.001MF 5%	50V				
C571	1-130-651-00	FILM 0.001MF 2%	100V				
C572	1-124-907-11	ELECT 10MF 20%	50V				
C573	1-130-471-00	MYLAR 0.001MF 5%	50V				
C575	1-102-038-00	CERAMIC 0.001MF	500V				
C576	1-106-355-12	MYLAR 0.0033MF	200V				
C1501	1-126-233-11	ELECT 22MF 20%	50V				
C1502	1-126-301-11	ELECT 1MF 20%	50V				
C1503	1-102-114-00	CERAMIC 470PF 10%	50V				
C1504	1-124-480-11	ELECT 470MF 20%	25V				
C1505	1-124-911-11	ELECT 220MF 20%	50V				
C1506	1-136-171-00	FILM 0.33MF 5%	50V				
C1507	1-106-222-00	MYLAR 0.12MF 10%	100V				
C1508	1-124-480-11	ELECT 470MF 20%	25V				
C1509	1-124-122-11	ELECT 100MF 20%	50V				
C1511	1-164-014-11	CERAMIC 5PF 0.25PF	50V				
<DIODE>				<IC>			
D201	8-719-110-13	DIODE RD9.1ES-B2		IC201	8-749-920-58	IC SI-3090CA	
D202	8-719-110-13	DIODE RD9.1ES-B2		IC204	8-759-231-53	IC TA7805S	
D204	8-719-911-19	DIODE 1SS119		IC205	8-759-144-84	IC UPC24M05HF	
D205	8-719-911-19	DIODE 1SS119		IC206	8-759-982-13	IC RC7812FA	
D206	8-719-911-19	DIODE 1SS119		IC501	8-759-987-16	IC LM393P	
D207	8-719-911-19	DIODE 1SS119		IC502	1-809-845-11	MODULE, PROTECTOR PM-30	
D208	8-719-911-19	DIODE 1SS119		IC503	8-759-987-16	IC LM393P	
D209	8-719-510-48	DIODE D1N20R		IC504	8-759-982-13	IC RC7812FA	
D213	8-719-110-78	DIODE RD33ES-B2		IC1501	8-759-506-46	IC TDA8179S	
<DIODE>				<JACK>			
				J201	1-507-562-00	JACK	
				J202	1-507-562-00	JACK	
<COIL>				<COIL>			
				L201	1-408-408-00	INDUCTOR 8.2UH	
				L205	1-408-421-00	INDUCTOR 100UH	
				L208	1-410-785-31	INDUCTOR 0.22UH	
				L210	1-408-408-00	INDUCTOR 8.2UH	
				L501	1-459-104-00	COIL, WITH CORE	
				L502	1-412-552-31	INDUCTOR 2.2MMH	
				L504	1-410-455-11	INDUCTOR 10MMH	
				L507	1-459-483-00	COIL (WITH CORE)	
				L508	1-421-541-00	COIL, CHOKE 1000UH	
				L509	1-459-104-00	COIL, WITH CORE	
				L510 Δ 1-460-197-11	COIL, FERRITE (PMC)		
				L511	1-412-519-11	INDUCTOR 3.3UH	
				L512	1-412-531-31	INDUCTOR 33UH	
				L513	1-412-519-11	INDUCTOR 3.3UH	
				L514	1-459-123-00	COIL, DUST CORE (PAC)	

The components identified by shading and mark **Δ** are critical for safety. Replace only with part number specified.

Les composants identifiés par une trame et une marque **Δ** sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

The components identified by **Δ** in this manual have been carefully factory-selected for each set in order to satisfy regulations regarding X-ray radiation. Should replacement be required, replace only with the value originally used.



REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
L515	1-410-645-31	INDUCTOR 100UH		R514	1-249-438-11	CARBON 56K 5%	1/4W
L520	1-412-531-31	INDUCTOR 33UH		R515	1-249-433-11	CARBON 22K 5%	1/4W
L1501	1-412-531-31	INDUCTOR 33UH		R516	1-249-419-11	CARBON 1.5K 5%	1/4W
L1503	1-412-531-31	INDUCTOR 33UH		R517	1-216-361-00	METAL OXIDE 0.22 5%	2W F
<TRANSISTOR>				R518	1-249-437-11	CARBON 47K 5%	1/4W
Q201	8-729-119-78	TRANSISTOR 2SC2785-HFE		R519	1-247-755-11	CARBON 1.8K 5%	1/2W F
Q202	8-729-119-78	TRANSISTOR 2SC2785-HFE		R520	1-249-441-11	CARBON 100K 5%	1/4W
Q501	8-729-011-07	TRANSISTOR 2SC4763(LBSONY)		R521	1-216-481-11	METAL OXIDE 1.2K 5%	3W F
Q502	8-729-140-97	TRANSISTOR 2SB734-34		R522	1-215-917-11	METAL OXIDE 1K 5%	3W F
Q503	8-729-011-06	TRANSISTOR 2SC3840K		R523	1-249-425-11	CARBON 4.7K 5%	1/4W
Q504	8-729-119-76	TRANSISTOR 2SA1175-HFE		R524	1-215-445-00	METAL 10K 1%	1/4W
Q505	8-729-119-76	TRANSISTOR 2SA1175-HFE		R526	1-249-401-11	CARBON 47 5%	1/4W
Q506	8-729-011-00	TRANSISTOR 2SK1916-53P87		R527	1-249-417-11	CARBON 1K 5%	1/4W
Q507	8-729-119-80	TRANSISTOR 2SC2688-LK		R528	1-247-903-00	CARBON 1M 5%	1/4W
Q508	8-729-119-78	TRANSISTOR 2SC2785-HFE		R529	1-249-429-11	CARBON 10K 5%	1/4W
Q509	8-729-119-76	TRANSISTOR 2SA1175-HFE		R530	1-215-457-00	METAL 33K 1%	1/4W
Q510	8-729-119-78	TRANSISTOR 2SC2785-HFE		R531	1-249-432-11	CARBON 18K 5%	1/4W
Q511	8-729-119-76	TRANSISTOR 2SA1175-HFE		R532	1-249-437-11	CARBON 47K 5%	1/4W
Q512	8-729-119-78	TRANSISTOR 2SC2785-HFE		R533	1-247-887-00	CARBON 220K 5%	1/4W
Q513	8-729-140-96	TRANSISTOR 2SD774-34		R534	1-215-472-00	METAL 130K 1%	1/4W
Q515	8-729-119-76	TRANSISTOR 2SA1175-HFE		R536	1-249-429-11	CARBON 10K 5%	1/4W
Q516	8-729-119-76	TRANSISTOR 2SA1175-HFE		R537	1-215-465-00	METAL 68K 1%	1/4W
Q1501	8-729-119-78	TRANSISTOR 2SC2785-HFE		R538	1-247-883-00	CARBON 150K 5%	1/4W
Q1502	8-729-119-78	TRANSISTOR 2SC2785-HFE		R539	1-249-425-11	CARBON 4.7K 5%	1/4W
<RESISTOR>				R540	1-249-437-11	CARBON 47K 5%	1/4W
R201	1-249-405-11	CARBON 100 5%	1/4W F	R541	1-249-397-11	CARBON 22 5%	1/4W F
R202	1-249-405-11	CARBON 100 5%	1/4W F	R542	1-215-888-00	METAL OXIDE 220 5%	2W F
R210	1-249-441-11	CARBON 100K 5%	1/4W	R543	1-249-411-11	CARBON 330 5%	1/4W
R211	1-249-425-11	CARBON 4.7K 5%	1/4W	R544	1-249-441-11	CARBON 100K 5%	1/4W
R214	1-249-377-11	CARBON 0.47 5%	1/4W F	R546	1-215-441-00	METAL 6.8K 1%	1/4W
R219	1-249-426-11	CARBON 5.6K 5%	1/4W	R547	1-249-441-11	CARBON 100K 5%	1/4W
R221	1-249-409-11	CARBON 220 5%	1/4W	R548	1-215-889-00	METAL OXIDE 330 5%	2W F
R222	1-249-434-11	CARBON 27K 5%	1/4W	R549	1-215-881-11	METAL OXIDE 15 5%	2W F
R223	1-249-433-11	CARBON 22K 5%	1/4W	R550	1-215-909-11	METAL OXIDE 47 5%	3W F
R224	1-249-409-11	CARBON 220 5%	1/4W	R551	1-247-743-11	CARBON 220 5%	1/2W F
R225	1-249-424-11	CARBON 3.9K 5%	1/4W	R552	1-249-389-11	CARBON 4.7 5%	1/4W F
R226	1-249-417-11	CARBON 1K 5%	1/4W	R553	1-249-377-11	CARBON 0.47 5%	1/4W F
R230	1-215-923-00	METAL OXIDE 10K 5%	3W F	R554	1-249-377-11	CARBON 0.47 5%	1/4W F
R231	1-249-409-11	CARBON 220 5%	1/4W F	R556	1-216-459-00	METAL OXIDE 2.7K 5%	2W F
R232	1-216-380-11	METAL OXIDE 8.2 5%	2W F	R558	1-259-882-11	CARBON 3.3M 5%	1/4W
R233	1-249-409-11	CARBON 220 5%	1/4W	R559	1-216-439-00	METAL OXIDE 12K 5%	1W F
R234	1-249-409-11	CARBON 220 5%	1/4W	R560	1-247-901-11	CARBON 820K 5%	1/4W
R235	1-249-409-11	CARBON 220 5%	1/4W	R561	1-249-410-11	CARBON 270 5%	1/4W
R236	1-249-409-11	CARBON 220 5%	1/4W	R562	1-215-450-00	METAL 16K 1%	1/4W
R237	1-249-409-11	CARBON 220 5%	1/4W	R564	1-215-475-00	METAL 180K 1%	1/4W
R238	1-249-409-11	CARBON 220 5%	1/4W	Δ R565		CARBON	1/4W
R239	1-249-409-11	CARBON 220 5%	1/4W	Δ R566		CARBON	1/4W
R240	1-249-482-11	CARBON 4.7 5%	1/2W F	R567	1-249-425-11	CARBON 4.7K 5%	1/4W
R501	1-249-431-11	CARBON 15K 5%	1/4W	R568	1-249-425-11	CARBON 4.7K 5%	1/4W
R502	1-249-431-11	CARBON 15K 5%	1/4W	R569	1-249-417-11	CARBON 1K 5%	1/4W
R504	1-215-869-11	METAL OXIDE 1K 5%	1W F	R570	1-249-402-11	CARBON 56 5%	1/4W
R505	1-215-449-00	METAL 15K 1%	1/4W	R572	1-249-393-11	CARBON 10 5%	1/4W F
R506	1-249-423-11	CARBON 3.3K 5%	1/4W	R573	1-249-393-11	CARBON 10 5%	1/4W F
R507	1-249-411-11	CARBON 330 5%	1/4W	R574	1-215-882-00	METAL OXIDE 22 5%	2W F
R508	1-249-435-11	CARBON 33K 5%	1/4W	R575	1-216-459-00	METAL OXIDE 2.7K 5%	2W F
R509	1-249-441-11	CARBON 100K 5%	1/4W	R576	1-249-417-11	CARBON 1K 5%	1/4W F
R510	1-249-409-11	CARBON 220 5%	1/4W F	R577	1-215-887-00	METAL OXIDE 150 5%	2W F
R511	1-249-398-11	CARBON 27 5%	1/4W F	R578	1-216-449-11	METAL OXIDE 56 5%	2W F
R512	1-249-423-11	CARBON 3.3K 5%	1/4W	R579	1-249-441-11	CARBON 100K 5%	1/4W
R513	1-249-425-11	CARBON 4.7K 5%	1/4W	R580	1-249-441-11	CARBON 100K 5%	1/4W
R583	1-249-441-11	CARBON 100K 5%	1/4W	R584	1-215-463-00	METAL 56K 1%	1/4W
R587	1-249-441-11	CARBON 100K 5%	1/4W	R587	1-249-441-11	CARBON 100K 5%	1/4W
R588	1-249-415-11	CARBON 680 5%	1/4W	R588	1-249-415-11	CARBON 680 5%	1/4W



Les composants identifiés par une trame et une marque **Δ** sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.


The components identified by shading and mark **Δ** are critical for safety. Replace only with part number specified.

REF.NO.	PART NO.	DESCRIPTION	REMARK	REF.NO.	PART NO.	DESCRIPTION	REMARK
R589	1-249-437-11	CARBON 47K 5%	1/4W	C021	1-163-239-11	CERAMIC CHIP 33PF	5% 50V
R590	1-249-431-11	CARBON 15K 5%	1/4W	C029	1-163-115-00	CERAMIC CHIP 82PF	5% 50V
R591	1-247-887-00	CARBON 220K 5%	1/4W	C030	1-163-115-00	CERAMIC CHIP 82PF	5% 50V
R592	1-249-429-11	CARBON 10K 5%	1/4W	C034	1-163-125-00	CERAMIC CHIP 220PF	5% 50V
R593	1-215-878-00	METAL OXIDE 33K 5%	1W F	C035	1-163-125-00	CERAMIC CHIP 220PF	5% 50V
R594	1-247-903-00	CARBON 1M 5%	1/4W	C036	1-163-125-00	CERAMIC CHIP 220PF	5% 50V
R595	1-249-440-11	CARBON 82K 5%	1/4W	C041	1-163-117-00	CERAMIC CHIP 100PF	5% 50V
R596	1-249-432-11	CARBON 18K 5%	1/4W	C042	1-163-117-00	CERAMIC CHIP 100PF	5% 50V
R597	1-249-437-11	CARBON 47K 5%	1/4W	C045	1-163-125-00	CERAMIC CHIP 220PF	5% 50V
R599	1-249-425-11	CARBON 4.7K 5%	1/4W	C047	1-124-261-00	ELECT 10MF	20% 50V
R1501	1-215-449-00	METAL 15K 1%	1/4W	C048	1-124-261-00	ELECT 10MF	20% 50V
R1502	1-215-433-00	METAL 3.3K 1%	1/4W	C049	1-124-261-00	ELECT 10MF	20% 50V
R1503	1-249-425-11	CARBON 4.7K 5%	1/4W	C055	1-163-809-11	CERAMIC CHIP 0.047MF	10% 25V
R1505	1-249-433-11	CARBON 22K 5%	1/4W	C064	1-163-121-00	CERAMIC CHIP 150PF	5% 50V
R1506	1-218-642-91	METAL OXIDE 100K 5%	1W F	C065	1-124-257-00	ELECT 2.2MF	20% 50V
R1507	1-249-436-11	CARBON 39K 5%	1/4W	<DIODE>			
R1508	1-215-453-00	METAL 22K 1%	1/4W	D001	8-719-404-46	DIODE MA110	
R1509	1-215-455-00	METAL 27K 1%	1/4W	D002	8-719-404-46	DIODE MA110	
R1510	1-249-383-11	CARBON 1.5 5%	1/4W F	D003	8-719-404-46	DIODE MA110	
R1511	1-215-888-00	METAL OXIDE 220 5%	2W F	D004	8-719-404-46	DIODE MA110	
R1512	1-216-369-00	METAL OXIDE 1 5%	2W F	D005	8-719-404-46	DIODE MA110	
R1513	1-249-436-11	CARBON 39K 5%	1/4W	D006	8-719-404-46	DIODE MA110	
R4002	1-249-385-11	CARBON 2.2 5%	1/4W F	D007	8-719-404-46	DIODE MA110	
R4003	1-216-361-00	METAL OXIDE 0.22 5%	2W F	D008	8-719-404-46	DIODE MA110	
R4004	1-216-374-00	METAL OXIDE 2.7 5%	2W F	D009	8-719-404-46	DIODE MA110	
R4006	1-216-396-11	METAL OXIDE 3.9 5%	3W F	D010	8-713-300-57	DIODE 1T33	
<SPARK GAP>				D011	8-719-404-46	DIODE MA110	
SG501	1-519-422-11	GAP, SPARK		D012	8-719-404-46	DIODE MA110	
<TRANSFORMER>				D015	8-719-404-46	DIODE MA110	
T501	Δ 1-453-126-11	TRANSFORMER ASSY, FLYBACK (NX-3000A3)		<IC>			
T502	Δ 1-460-199-11	TRANSFORMER (HLT)		IC001	8-759-095-47	IC TMC73C247-08	
T503	1-437-195-11	TRANSFORMER, HORIZONTAL DRIVE		IC002	8-759-403-44	IC MN1280-S	
T504	1-424-584-11	TRANSFORMER, DYNAMIC FOCUS		<COIL>			
<THERMISTOR>				L001	1-408-409-00	INDUCTOR 10UH	
THP150	1-807-925-11	THERMISTOR		L002	1-410-476-11	INDUCTOR 33UH	
<TUNER>				<CONNECTOR>			
TU101	Δ 1-693-102-11	TUNER (BTF-XA401)		M001	*1-573-965-11	PIN, CONNECTOR (PC BOARD) 50P	
*****				M39	*1-564-521-11	PLUG, CONNECTOR 6P	
*A-1306-417-A	M BOARD, COMPLETE	*****		M45	*1-564-523-11	PLUG, CONNECTOR 8P	
<CAPACITOR>				<TRANSISTOR>			
C001	1-124-261-00	ELECT 10MF	20% 50V	Q001	8-729-216-22	TRANSISTOR 2SA1162-G	
C002	1-163-125-00	CERAMIC CHIP 220PF	5% 50V	Q002	8-729-216-22	TRANSISTOR 2SA1162-G	
C003	1-136-161-00	FILM 0.047MF	5% 50V	Q003	8-729-216-22	TRANSISTOR 2SA1162-G	
C004	1-126-301-11	ELECT 1MF	20% 50V	Q004	8-729-920-74	TRANSISTOR 2SC2412K-QR	
C005	1-163-125-00	CERAMIC CHIP 220PF	5% 50V	Q005	8-729-920-74	TRANSISTOR 2SC2412K-QR	
C014	1-124-910-11	ELECT 47MF	20% 50V	Q006	8-729-216-22	TRANSISTOR 2SA1162-G	
C015	1-124-464-11	ELECT 0.22MF	20% 50V	Q007	8-729-216-22	TRANSISTOR 2SA1162-G	
C017	1-124-589-11	ELECT 47MF	20% 16V	Q008	8-729-920-74	TRANSISTOR 2SC2412K-QR	
C018	1-163-141-00	CERAMIC CHIP 0.001MF	5% 50V	Q009	8-729-920-74	TRANSISTOR 2SC2412K-QR	
C019	1-164-695-11	CERAMIC CHIP 0.0022MF	5% 50V	Q010	8-729-920-74	TRANSISTOR 2SC2412K-QR	
C020	1-163-241-11	CERAMIC CHIP 39PF	5% 50V	Q011	8-729-920-74	TRANSISTOR 2SC2412K-QR	
				Q012	8-729-920-74	TRANSISTOR 2SC2412K-QR	
				Q013	8-729-216-22	TRANSISTOR 2SA1162-G	
				Q014	8-729-920-74	TRANSISTOR 2SC2412K-QR	



REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
<RESISTOR>				R064	1-216-053-00	METAL GLAZE 1.5K 5%	1/10W
R001	1-216-045-00	METAL GLAZE 680 5%	1/10W	R065	1-216-033-00	METAL GLAZE 220 5%	1/10W
R002	1-216-097-00	METAL GLAZE 100K 5%	1/10W	R066	1-216-033-00	METAL GLAZE 220 5%	1/10W
R003	1-216-121-00	METAL GLAZE 1M 5%	1/10W	R067	1-216-033-00	METAL GLAZE 220 5%	1/10W
R004	1-216-073-00	METAL GLAZE 10K 5%	1/10W	R068	1-216-033-00	METAL GLAZE 220 5%	1/10W
R005	1-216-073-00	METAL GLAZE 10K 5%	1/10W	R069	1-216-049-00	METAL GLAZE 1K 5%	1/10W
R006	1-216-065-00	METAL GLAZE 4.7K 5%	1/10W	R070	1-216-033-00	METAL GLAZE 220 5%	1/10W
R007	1-216-027-00	METAL GLAZE 120 5%	1/10W	R071	1-216-033-00	METAL GLAZE 220 5%	1/10W
R008	1-216-041-00	METAL GLAZE 470 5%	1/10W	R072	1-216-033-00	METAL GLAZE 220 5%	1/10W
R009	1-216-027-00	METAL GLAZE 120 5%	1/10W	R073	1-216-057-00	METAL GLAZE 2.2K 5%	1/10W
R010	1-216-033-00	METAL GLAZE 220 5%	1/10W	R074	1-216-033-00	METAL GLAZE 220 5%	1/10W
R011	1-216-033-00	METAL GLAZE 220 5%	1/10W	R075	1-216-033-00	METAL GLAZE 220 5%	1/10W
R012	1-216-033-00	METAL GLAZE 220 5%	1/10W	R076	1-216-089-00	METAL GLAZE 47K 5%	1/10W
R013	1-216-067-00	METAL GLAZE 5.6K 5%	1/10W	R077	1-216-057-00	METAL GLAZE 2.2K 5%	1/10W
R014	1-216-057-00	METAL GLAZE 2.2K 5%	1/10W	R078	1-216-033-00	METAL GLAZE 220 5%	1/10W
R015	1-216-089-00	METAL GLAZE 47K 5%	1/10W	R079	1-216-025-00	METAL GLAZE 100 5%	1/10W
R016	1-216-067-00	METAL GLAZE 5.6K 5%	1/10W	R080	1-216-061-00	METAL GLAZE 3.3K 5%	1/10W
R017	1-216-067-00	METAL GLAZE 5.6K 5%	1/10W	R081	1-216-033-00	METAL GLAZE 220 5%	1/10W
R018	1-216-065-00	METAL GLAZE 4.7K 5%	1/10W	R082	1-216-033-00	METAL GLAZE 220 5%	1/10W
R019	1-216-073-00	METAL GLAZE 10K 5%	1/10W	R083	1-216-033-00	METAL GLAZE 220 5%	1/10W
R020	1-216-065-00	METAL GLAZE 4.7K 5%	1/10W	R084	1-216-097-00	METAL GLAZE 100K 5%	1/10W
R021	1-216-097-00	METAL GLAZE 100K 5%	1/10W	R085	1-216-033-00	METAL GLAZE 220 5%	1/10W
R022	1-216-089-00	METAL GLAZE 47K 5%	1/10W	R086	1-216-033-00	METAL GLAZE 220 5%	1/10W
R023	1-216-093-00	METAL GLAZE 68K 5%	1/10W	R087	1-216-033-00	METAL GLAZE 220 5%	1/10W
R024	1-216-065-00	METAL GLAZE 4.7K 5%	1/10W	R088	1-216-033-00	METAL GLAZE 220 5%	1/10W
R025	1-216-073-00	METAL GLAZE 10K 5%	1/10W	R089	1-216-089-00	METAL GLAZE 47K 5%	1/10W
R026	1-216-081-00	METAL GLAZE 22K 5%	1/10W	R090	1-216-033-00	METAL GLAZE 220 5%	1/10W
R027	1-216-041-00	METAL GLAZE 470 5%	1/10W	R091	1-216-065-00	METAL GLAZE 4.7K 5%	1/10W
R028	1-216-023-00	METAL GLAZE 82 5%	1/10W	R093	1-216-065-00	METAL GLAZE 4.7K 5%	1/10W
R029	1-216-097-00	METAL GLAZE 100K 5%	1/10W	R094	1-216-033-00	METAL GLAZE 220 5%	1/10W
R030	1-216-097-00	METAL GLAZE 100K 5%	1/10W	R095	1-216-073-00	METAL GLAZE 10K 5%	1/10W
R031	1-216-089-00	METAL GLAZE 47K 5%	1/10W	R096	1-216-065-00	METAL GLAZE 4.7K 5%	1/10W
R032	1-216-089-00	METAL GLAZE 47K 5%	1/10W	R097	1-216-065-00	METAL GLAZE 4.7K 5%	1/10W
R033	1-216-073-00	METAL GLAZE 10K 5%	1/10W	R098	1-216-065-00	METAL GLAZE 4.7K 5%	1/10W
R034	1-216-033-00	METAL GLAZE 220 5%	1/10W	R099	1-216-089-00	METAL GLAZE 47K 5%	1/10W
R035	1-216-033-00	METAL GLAZE 220 5%	1/10W	R100	1-216-025-00	METAL GLAZE 100 5%	1/10W
R036	1-216-033-00	METAL GLAZE 220 5%	1/10W	R101	1-216-025-00	METAL GLAZE 100 5%	1/10W
R037	1-216-073-00	METAL GLAZE 10K 5%	1/10W	R102	1-216-089-00	METAL GLAZE 47K 5%	1/10W
R038	1-216-033-00	METAL GLAZE 220 5%	1/10W	R103	1-216-033-00	METAL GLAZE 220 5%	1/10W
R039	1-216-073-00	METAL GLAZE 10K 5%	1/10W	R104	1-216-033-00	METAL GLAZE 220 5%	1/10W
R040	1-216-089-00	METAL GLAZE 47K 5%	1/10W	<CRYSTAL>			
R041	1-216-073-00	METAL GLAZE 10K 5%	1/10W	X001	1-579-743-11	VIBRATOR, CRYSTAL	
R042	1-216-065-00	METAL GLAZE 4.7K 5%	1/10W	*****			
R043	1-216-033-00	METAL GLAZE 220 5%	1/10W	*A-1346-059-A	E1 BOARD, COMPLETE	*****	
R044	1-216-033-00	METAL GLAZE 220 5%	1/10W	<CAPACITOR>			
R045	1-216-025-00	METAL GLAZE 100 5%	1/10W	C301	1-163-010-11	CERAMIC CHIP 0.0012MF	10% 50V
R046	1-216-065-00	METAL GLAZE 4.7K 5%	1/10W	C303	1-126-157-11	ELECT 10MF	20% 16V
R047	1-216-065-00	METAL GLAZE 4.7K 5%	1/10W	C304	1-164-232-11	CERAMIC CHIP 0.01MF	10% 50V
R048	1-216-033-00	METAL GLAZE 220 5%	1/10W	C305	1-163-251-11	CERAMIC CHIP 100PF	5% 50V
R049	1-216-065-00	METAL GLAZE 4.7K 5%	1/10W	C306	1-102-971-00	CERAMIC 82PF	5% 50V
R050	1-216-295-00	METAL GLAZE 0 5%	1/10W	C309	1-164-505-11	CERAMIC CHIP 2.2MF	16V
R051	1-216-033-00	METAL GLAZE 220 5%	1/10W	C310	1-163-109-00	CERAMIC CHIP 47PF	5% 50V
R052	1-216-065-00	METAL GLAZE 4.7K 5%	1/10W	C314	1-124-915-11	ELECT 10MF	20% 16V
R053	1-216-065-00	METAL GLAZE 4.7K 5%	1/10W	C315	1-164-505-11	CERAMIC CHIP 2.2MF	16V
R054	1-216-073-00	METAL GLAZE 10K 5%	1/10W	C319	1-126-157-11	ELECT 10MF	20% 16V
R055	1-216-073-00	METAL GLAZE 10K 5%	1/10W	C320	1-124-465-00	ELECT 0.47MF	20% 50V
R056	1-216-065-00	METAL GLAZE 4.7K 5%	1/10W	C321	1-163-125-00	CERAMIC CHIP 220PF	5% 50V
R057	1-216-065-00	METAL GLAZE 4.7K 5%	1/10W	C322	1-163-003-11	CERAMIC CHIP 330PF	10% 50V
R058	1-216-065-00	METAL GLAZE 4.7K 5%	1/10W				
R059	1-216-073-00	METAL GLAZE 10K 5%	1/10W				
R060	1-216-065-00	METAL GLAZE 4.7K 5%	1/10W				
R063	1-216-033-00	METAL GLAZE 220 5%	1/10W				

REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
Q330	8-729-925-79	TRANSISTOR IMX3		R371	1-216-033-00	METAL GLAZE 220 5%	1/10W
Q333	8-729-925-79	TRANSISTOR IMX3		R372	1-216-031-00	METAL GLAZE 180 5%	1/10W
Q334	8-729-920-74	TRANSISTOR 2SC2412K-QR		R373	1-216-671-11	METAL CHIP 6.8K 0.50%	1/10W
Q335	8-729-907-46	TRANSISTOR IMZ1		R374	1-216-037-00	METAL GLAZE 330 5%	1/10W
Q340	8-729-920-74	TRANSISTOR 2SC2412K-QR		R375	1-216-037-00	METAL GLAZE 330 5%	1/10W
Q342	8-729-925-79	TRANSISTOR IMX3		R376	1-216-037-00	METAL GLAZE 330 5%	1/10W
Q344	8-729-216-22	TRANSISTOR 2SA1162-G		R377	1-216-033-00	METAL GLAZE 220 5%	1/10W
		<RESISTOR>		R378	1-216-033-00	METAL GLAZE 220 5%	1/10W
R301	1-216-025-00	METAL GLAZE 100 5%	1/10W	R379	1-216-033-00	METAL GLAZE 220 5%	1/10W
R302	1-216-057-00	METAL GLAZE 2.2K 5%	1/10W	R380	1-216-033-00	METAL GLAZE 220 5%	1/10W
R303	1-216-079-00	METAL GLAZE 18K 5%	1/10W	R381	1-216-033-00	METAL GLAZE 220 5%	1/10W
R304	1-216-081-00	METAL GLAZE 22K 5%	1/10W	R382	1-216-033-00	METAL GLAZE 220 5%	1/10W
R305	1-216-069-00	METAL GLAZE 6.8K 5%	1/10W	R383	1-216-653-11	METAL CHIP 1.2K 0.50%	1/10W
R306	1-216-081-00	METAL GLAZE 22K 5%	1/10W	R384	1-216-041-00	METAL GLAZE 470 5%	1/10W
R307	1-216-089-00	METAL GLAZE 47K 5%	1/10W	R385	1-216-081-00	METAL GLAZE 22K 5%	1/10W
R308	1-216-037-00	METAL GLAZE 330 5%	1/10W	R386	1-216-687-11	METAL CHIP 33K 0.50%	1/10W
R309	1-216-073-00	METAL GLAZE 10K 5%	1/10W	R387	1-216-033-00	METAL GLAZE 220 5%	1/10W
R310	1-216-065-00	METAL GLAZE 4.7K 5%	1/10W	R388	1-216-033-00	METAL GLAZE 220 5%	1/10W
R312	1-216-043-00	METAL GLAZE 560 5%	1/10W	R389	1-216-081-00	METAL GLAZE 22K 5%	1/10W
R313	1-216-035-00	METAL GLAZE 270 5%	1/10W	R390	1-216-033-00	METAL GLAZE 220 5%	1/10W
R314	1-216-061-00	METAL GLAZE 3.3K 5%	1/10W	R391	1-216-049-00	METAL GLAZE 1K 5%	1/10W
R316	1-216-035-00	METAL GLAZE 270 5%	1/10W	R393	1-216-051-00	METAL GLAZE 1.2K 5%	1/10W
R317	1-216-121-00	METAL GLAZE 1M 5%	1/10W	R394	1-216-109-00	METAL GLAZE 330K 5%	1/10W
R320	1-216-039-00	METAL GLAZE 390 5%	1/10W	R395	1-216-071-00	METAL GLAZE 8.2K 5%	1/10W
R325	1-216-033-00	METAL GLAZE 220 5%	1/10W	R396	1-216-105-00	METAL GLAZE 220K 5%	1/10W
R326	1-216-057-00	METAL GLAZE 2.2K 5%	1/10W	R397	1-216-081-00	METAL GLAZE 22K 5%	1/10W
R331	1-216-017-00	METAL GLAZE 47 5%	1/10W	R398	1-216-081-00	METAL GLAZE 22K 5%	1/10W
R332	1-216-657-11	METAL CHIP 1.8K 0.50%	1/10W	R399	1-216-077-00	METAL GLAZE 15K 5%	1/10W
R333	1-216-051-00	METAL GLAZE 1.2K 5%	1/10W	R1301	1-216-049-00	METAL GLAZE 1K 5%	1/10W
R336	1-216-047-00	METAL GLAZE 820 5%	1/10W	R1302	1-216-045-00	METAL GLAZE 680 5%	1/10W
R338	1-216-043-00	METAL GLAZE 560 5%	1/10W	R1303	1-216-085-00	METAL GLAZE 33K 5%	1/10W
R339	1-216-047-00	METAL GLAZE 820 5%	1/10W	R1304	1-216-081-00	METAL GLAZE 22K 5%	1/10W
R340	1-216-651-11	METAL CHIP 1K 0.50%	1/10W	R1305	1-216-025-00	METAL GLAZE 100 5%	1/10W
R341	1-216-043-00	METAL GLAZE 560 5%	1/10W	R1306	1-216-057-00	METAL GLAZE 2.2K 5%	1/10W
R343	1-216-077-00	METAL GLAZE 15K 5%	1/10W	R1307	1-216-073-00	METAL GLAZE 10K 5%	1/10W
R344	1-216-081-00	METAL GLAZE 22K 5%	1/10W	R1308	1-216-065-00	METAL GLAZE 4.7K 5%	1/10W
R345	1-216-292-11	METAL GLAZE 8.2M 5%	1/8W	R1309	1-216-025-00	METAL GLAZE 100 5%	1/10W
R346	1-216-081-00	METAL GLAZE 22K 5%	1/10W	R1310	1-216-045-00	METAL GLAZE 680 5%	1/10W
R347	1-216-081-00	METAL GLAZE 22K 5%	1/10W	R1311	1-216-049-00	METAL GLAZE 1K 5%	1/10W
R348	1-216-049-00	METAL GLAZE 1K 5%	1/10W	R1312	1-216-073-00	METAL GLAZE 10K 5%	1/10W
R349	1-216-295-00	METAL GLAZE 0 5%	1/10W	R1313	1-216-081-00	METAL GLAZE 22K 5%	1/10W
R350	1-216-089-00	METAL GLAZE 47K 5%	1/10W	R1314	1-216-065-00	METAL GLAZE 4.7K 5%	1/10W
R351	1-216-674-11	METAL CHIP 9.1K 0.50%	1/10W	R1315	1-216-049-00	METAL GLAZE 1K 5%	1/10W
R352	1-216-011-00	METAL GLAZE 27 5%	1/10W	R1316	1-216-081-00	METAL GLAZE 22K 5%	1/10W
R353	1-216-001-00	METAL GLAZE 10 5%	1/10W	R1317	1-216-073-00	METAL GLAZE 10K 5%	1/10W
R354	1-216-049-00	METAL GLAZE 1K 5%	1/10W	R1318	1-216-065-00	METAL GLAZE 4.7K 5%	1/10W
R355	1-216-001-00	METAL GLAZE 10 5%	1/10W	R1319	1-216-065-00	METAL GLAZE 4.7K 5%	1/10W
R356	1-216-001-00	METAL GLAZE 10 5%	1/10W	R1320	1-216-063-00	METAL GLAZE 3.9K 5%	1/10W
R357	1-216-049-00	METAL GLAZE 1K 5%	1/10W	R1321	1-216-081-00	METAL GLAZE 22K 5%	1/10W
R358	1-216-049-00	METAL GLAZE 1K 5%	1/10W	R1322	1-216-061-00	METAL GLAZE 3.3K 5%	1/10W
R359	1-216-049-00	METAL GLAZE 1K 5%	1/10W	R1323	1-216-089-00	METAL GLAZE 47K 5%	1/10W
R360	1-216-119-00	METAL GLAZE 820K 5%	1/10W	R1324	1-216-045-00	METAL GLAZE 680 5%	1/10W
R361	1-216-025-00	METAL GLAZE 100 5%	1/10W	R1325	1-216-025-00	METAL GLAZE 100 5%	1/10W
R362	1-216-079-00	METAL GLAZE 18K 5%	1/10W	R1326	1-216-073-00	METAL GLAZE 10K 5%	1/10W
R363	1-216-295-00	METAL GLAZE 0 5%	1/10W	R1327	1-216-033-00	METAL GLAZE 220 5%	1/10W
R364	1-216-045-00	METAL GLAZE 680 5%	1/10W	R1328	1-216-033-00	METAL GLAZE 220 5%	1/10W
R365	1-216-025-00	METAL GLAZE 100 5%	1/10W	R1329	1-216-077-00	METAL GLAZE 15K 5%	1/10W
R366	1-216-001-00	METAL GLAZE 10 5%	1/10W	R1330	1-216-081-00	METAL GLAZE 22K 5%	1/10W
R367	1-216-045-00	METAL GLAZE 680 5%	1/10W	R1331	1-216-081-00	METAL GLAZE 22K 5%	1/10W
R368	1-216-001-00	METAL GLAZE 10 5%	1/10W	R1332	1-216-093-00	METAL GLAZE 68K 5%	1/10W
R369	1-216-033-00	METAL GLAZE 220 5%	1/10W	R1333	1-216-129-00	METAL GLAZE 2.2M 5%	1/10W
R370	1-216-033-00	METAL GLAZE 220 5%	1/10W	R1334	1-216-097-00	METAL GLAZE 100K 5%	1/10W
				R1335	1-216-089-00	METAL GLAZE 47K 5%	1/10W



REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
R1336	1-216-089-00	METAL GLAZE 47K 5%	1/10W	C2313	1-163-133-00	CERAMIC CHIP 470PF	5% 50V
R1337	1-216-065-00	METAL GLAZE 4.7K 5%	1/10W	C2314	1-164-232-11	CERAMIC CHIP 0.01MF	10% 50V
R1338	1-216-089-00	METAL GLAZE 47K 5%	1/10W				
R1339	1-216-089-00	METAL GLAZE 47K 5%	1/10W	C2318	1-164-232-11	CERAMIC CHIP 0.01MF	10% 50V
R1340	1-216-073-00	METAL GLAZE 10K 5%	1/10W	C2320	1-124-589-11	ELECT 47MF	20% 16V
				C2321	1-163-017-00	CERAMIC CHIP 0.0047MF	10% 50V
R1342	1-216-033-00	METAL GLAZE 220 5%	1/10W	C2322	1-124-234-00	ELECT 22MF	20% 16V
R1343	1-216-105-00	METAL GLAZE 220K 5%	1/10W	C2323	1-124-234-00	ELECT 22MF	20% 16V
R1344	1-216-091-00	METAL GLAZE 56K 5%	1/10W				
R1345	1-216-101-00	METAL GLAZE 150K 5%	1/10W	C2324	1-124-234-00	ELECT 22MF	20% 16V
R1346	1-216-049-00	METAL GLAZE 1K 5%	1/10W	C2325	1-164-232-11	CERAMIC CHIP 0.01MF	10% 50V
				C2326	1-124-589-11	ELECT 47MF	20% 16V
R1347	1-216-049-00	METAL GLAZE 1K 5%	1/10W	C2327	1-164-505-11	CERAMIC CHIP 2.2MF	16V
R1348	1-216-049-00	METAL GLAZE 1K 5%	1/10W	C2328	1-164-232-11	CERAMIC CHIP 0.01MF	10% 50V
R1349	1-216-073-00	METAL GLAZE 10K 5%	1/10W				
R1350	1-216-091-00	METAL GLAZE 56K 5%	1/10W	C2329	1-164-232-11	CERAMIC CHIP 0.01MF	10% 50V
R1351	1-216-049-00	METAL GLAZE 1K 5%	1/10W	C2331	1-164-232-11	CERAMIC CHIP 0.01MF	10% 50V
				C2332	1-124-234-00	ELECT 22MF	20% 16V
R1352	1-216-039-00	METAL GLAZE 390 5%	1/10W	C2333	1-124-234-00	ELECT 22MF	20% 16V
R1353	1-216-053-00	METAL GLAZE 1.5K 5%	1/10W	C2334	1-164-232-11	CERAMIC CHIP 0.01MF	10% 50V
R1354	1-216-081-00	METAL GLAZE 22K 5%	1/10W				
R1355	1-216-017-00	METAL GLAZE 47 5%	1/10W	C2335	1-164-232-11	CERAMIC CHIP 0.01MF	10% 50V
R1356	1-216-057-00	METAL GLAZE 2.2K 5%	1/10W	C2336	1-126-163-11	ELECT 4.7MF	20% 16V
				C2337	1-164-232-11	CERAMIC CHIP 0.01MF	10% 50V
R1357	1-216-081-00	METAL GLAZE 22K 5%	1/10W	C2338	1-164-232-11	CERAMIC CHIP 0.01MF	10% 50V
R1358	1-216-033-00	METAL GLAZE 220 5%	1/10W	C2340	1-163-251-11	CERAMIC CHIP 100PF	5% 50V
R1362	1-216-105-00	METAL GLAZE 220K 5%	1/10W				
R1363	1-216-041-00	METAL GLAZE 470 5%	1/10W	C2345	1-164-505-11	CERAMIC CHIP 2.2MF	16V
R1364	1-216-053-00	METAL GLAZE 1.5K 5%	1/10W	C2346	1-164-232-11	CERAMIC CHIP 0.01MF	10% 50V
				C2347	1-163-367-11	CERAMIC CHIP 39PF	5% 50V
R1373	1-216-049-00	METAL GLAZE 1K 5%	1/10W	C2349	1-164-505-11	CERAMIC CHIP 2.2MF	16V
R1374	1-216-025-00	METAL GLAZE 100 5%	1/10W	C2350	1-164-232-11	CERAMIC CHIP 0.01MF	10% 50V
R1379	1-216-079-00	METAL GLAZE 18K 5%	1/10W				
R1380	1-216-075-00	METAL GLAZE 12K 5%	1/10W	C2351	1-164-505-11	CERAMIC CHIP 2.2MF	16V
R1381	1-216-041-00	METAL GLAZE 470 5%	1/10W	C2352	1-164-505-11	CERAMIC CHIP 2.2MF	16V
				C2353	1-164-232-11	CERAMIC CHIP 0.01MF	10% 50V
R1382	1-216-079-00	METAL GLAZE 18K 5%	1/10W	C2354	1-164-232-11	CERAMIC CHIP 0.01MF	10% 50V
R1383	1-216-077-00	METAL GLAZE 15K 5%	1/10W	C2357	1-126-301-11	ELECT 1MF	20% 50V
R1384	1-216-049-00	METAL GLAZE 1K 5%	1/10W				
R1385	1-216-037-00	METAL GLAZE 330 5%	1/10W	C2360	1-163-109-00	CERAMIC CHIP 47PF	5% 50V
R1386	1-216-037-00	METAL GLAZE 330 5%	1/10W				
						<DIODE>	
R1387	1-216-045-00	METAL GLAZE 680 5%	1/10W	D2301	8-719-018-27	DIODE MA5091	
R1388	1-216-001-00	METAL GLAZE 10 5%	1/10W	D2302	8-719-018-27	DIODE MA5091	
R1389	1-216-097-00	METAL GLAZE 100K 5%	1/10W	D2303	8-719-018-27	DIODE MA5091	
R1390	1-216-097-00	METAL GLAZE 100K 5%	1/10W	D2304	8-719-018-27	DIODE MA5091	
R1391	1-216-097-00	METAL GLAZE 100K 5%	1/10W	D2305	8-719-018-27	DIODE MA5091	
R1392	1-216-081-00	METAL GLAZE 22K 5%	1/10W	D2306	8-719-404-46	DIODE MA110	
R1394	1-216-081-00	METAL GLAZE 22K 5%	1/10W	D2307	8-719-946-98	DIODE FMN1	
R1395	1-216-081-00	METAL GLAZE 22K 5%	1/10W	D2308	8-719-946-98	DIODE FMN1	
R1396	1-216-121-00	METAL GLAZE 1M 5%	1/10W	D2309	8-719-404-46	DIODE MA110	
R1399	1-216-065-00	METAL GLAZE 4.7K 5%	1/10W	D2312	8-719-404-46	DIODE MA110	
R5301	1-216-057-00	METAL GLAZE 2.2K 5%	1/10W	D2313	8-719-404-46	DIODE MA110	
R5302	1-216-073-00	METAL GLAZE 10K 5%	1/10W	D2314	8-713-300-57	DIODE 1T33	
R5303	1-216-073-00	METAL GLAZE 10K 5%	1/10W	D2317	8-719-404-46	DIODE MA110	
R5304	1-216-085-00	METAL GLAZE 33K 5%	1/10W				
R5305	1-216-085-00	METAL GLAZE 33K 5%	1/10W				
						<CONNECTOR>	
		<CRYSTAL>		E2-002*1-573-965-11		PIN, CONNECTOR (PC BOARD) 50P	
X301	1-567-505-11	OSCILLATOR, CRYSTAL		E2-25 *1-564-521-11		PLUG, CONNECTOR 6P	
		*****		E2-26 *1-564-522-11		PLUG, CONNECTOR 7P	
		*A-1346-060-A E2 BOARD, COMPLETE		E2-46 *1-564-518-11		PLUG, CONNECTOR 3P	

		<CAPACITOR>				<IC>	
C2302	1-163-009-11	CERAMIC CHIP 0.001MF	10% 50V	IC2301	8-759-066-52	IC PCA8510T/012-T	
C2303	1-164-232-11	CERAMIC CHIP 0.01MF	10% 50V	IC2303	8-759-925-75	IC SN74HC05ANS	
C2310	1-163-105-00	CERAMIC CHIP 33PF	5% 50V	IC2304	8-752-037-15	IC CXA1387S	
				IC2306	8-759-011-65	IC MC74HC4053F	
				IC2307	8-752-058-68	IC CXA1315M	

a . AN ITEM OF ADJUSTMENT

ITEM	REFERENCE DATA	NAME REGISTER	
		VP	
GAMP	19	VP	GREEN AMP.
BAMP	9	VP	BLUE AMP.
GCUT	8	VP	GREEN CUT OFF.
BCUT	6	VP	BLUE CUT OFF
SBRT	40	VP	BRIGHT

b . METHOD OF CANCELLATION FROM SERVICE MODE


Set the standby condition (Press **POWER** button on the commander) in the next place, press **POWER** button again, hereupon it becomes TV mode.

c . METHOD OF WRITE FOR MEMORY

- 1) Set to Service Mode.
- 2) Press **1** (UP) and **4** (DOWN), select an item of adjustments.
- 3) Press **MUTING** button indicate WRITE (RED) on screen.
- 4) Press **ENTER** button to write for memory.

d . MEMORY WRITE CONFIRMATION METHOD

- 1) After adjustment, pull out the plug from AC outlet, and next place, plug in AC outlet again.
- 2) Turn the power switch ON and set to Service Mode.
- 3) Call the adjusted items again, confirm they were adjusted.

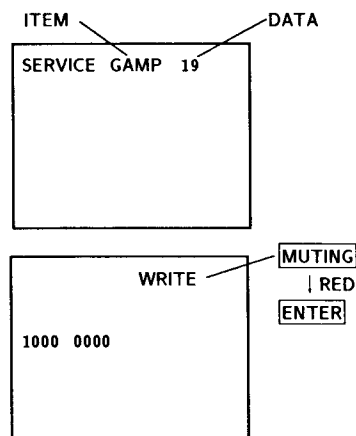

3-4. G2 (SCREEN) AND WHITE BALANCE ADJUSTMENTS

1. G 2 (SCREEN) ADJUSTMENT(RV 701)

- 1) Set the PICTURE and BRIGHTNESS to normal.
- 2) Confirm G 1 voltage is within 30.0 ± 5 V.
- 3) Apply DC voltage of 180 V to the cathodes of R,G and B from DC stabilized power source.
- 4) While watching the picture, adjust the G2 control (RV 701) to the just the retrace line disappears.


(Using the Remote Commander)

2. WHITE BALANCE ADJUSTMENTS

- 1) Set to service mode.
- 2) Press **STANDARD** to normal and if necessaryes "TRINITONE" set to "LOW" by **+** or **-**.
- 3) Input an entire white signal.
- 4) Set the PICTURE to minimum.
- 5) Select S BRT with **1** and **4**, and then set the level to minimum with **3** and **6**
- 6) Select G CUT and B CUT with **1** and **4**.
And adjust the level with **3** and **6** for the best white balance.
- 7) Set the PICTURE to maximum.
- 8) Select G AMP and B AMP with **1** and **4**, and adjust the level with **3** and **6** for the best white balance.
- 9) Write into the memory by pressing **MUTING** → then **ENTER**.

3. SUB BRIGHT ADJUSTMENT

- 1) Set to service mode.
- 2) Input a staircase signal of black and white from the pattern generator.
- 3) BRIGHTNESS ... RESET
PICTURE minimum
- 4) Select SBRT with **1** and **4**, and adjust SUB BRIGHT level with **3** and **6** so that the stripe second from the right is dimly lit.

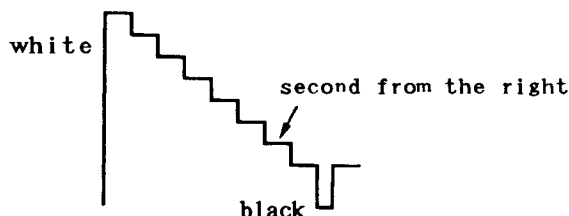

SECTION 4 SAFETY RELATED ADJUSTMENTS

A BOARD

☒ R565 CONFIRMATION METHOD (HOLD-DOWN CONFIRMATION) AND READJUSTMENTS

The following adjustments should always be performed when replacing the following components (marked with ☒ on the schematic diagram).

IC502, Q509, Q510, R565, R567, R568, R569

①

1. Preparation before confirmation

- 1) Remove R651 on the G board and connect a variable resistor (RV1: about $10k\Omega$) between pin ① of IC651 and B+ line.
- 2) Supply $120 \pm 2.0V$ AC to with variable auto-transformer.

2. Hold-down operation confirmation

- 1) Turn the POWER switch ON, and input an entirely white signals and adjust ABL current to $1910 \pm 50\mu A$ with PICTURE and BRIGHT etc controls.
- 2) Increase B+ line voltage gradually by adjusting the resistor of RV1. Confirm that the minimum voltage is less than $147.0V$ DC whereby the raster disappears during operation of hold-down circuit.


NOTE: When the hold-down circuit starts operating, switch OFF the POWER of the set immediately.

- 3) Turn the POWER switch ON, and input a dot signals and adjust ABL current to $110 \pm 30\mu A$ with PICTURE and BRIGHT etc controls.
- 4) Increase B+ line voltage gradually by adjusting the resistor of RV1. Confirm that the minimum voltage is lower than $148.5V$ DC whereby the raster disappears during operation of hold-down circuit.

NOTE: When the Hold-down circuit starts operating, switch OFF the POWER of the set immediately.

3. Hold-down readjustment

When step 2 is not satisfied, readjustment should be performed by altering the resistance value of R565 (a component marked with ☒).

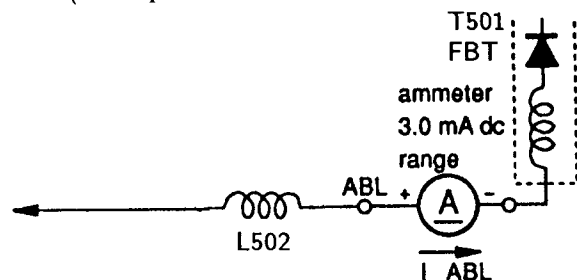

A BOARD

☒ R566 CONFIRMATION METHOD (HOLD-DOWN CONFIRMATION) AND READJUSTMENTS

The following adjustments should always be performed when replacing the following components (marked with ☒ on the schematic diagram).

IC502, IC651, Q509, Q510, D502, C531, R554, R566, R567, R568, R569, R651, R1506, T501

②

1. Preparation before confirmation

- 1) Turn the POWER switch ON, and input an entirely white signals and set the PICTURE and BRIGHT controls to maximum.
- 2) Confirm that voltage of the check terminal of pin ② of A-100 connector is more than $127.0V$ DC when the set is operating normally with $120.0 \pm 2.0V$ AC supply.

2. Hold-down operation confirmation

- 1) Turn the POWER switch ON, and input an entirely white signals and set the PICTURE and BRIGHT controls to maximum.
- 2) Apply DC voltage of over $130 \pm 2.0V$ DC gradually to the check terminal of pin ② of A-100 connector via 1SS119 from the DC stabilized power source.

Confirm that the minimum voltage is lower than $149.0V$ DC whereby the raster disappears during operation of hold-down circuit.

NOTE: When the hold-down circuit starts operating, switch OFF the POWER of the set immediately.

3. Hold-down readjustment


When step 2 is not satisfied, readjustment should be performed by altering the resistance value of R566 CARBON 1/4W (a component marked with ☒).


G BOARD

B+ VOLTAGE CONFIRMATION

The following adjustments should always be performed when replacing IC651 and R651.

- 1) Supply 130 ± 2^0V AC to with variable autotransformer.
- 2) Input an entirely monoscope signal.
- 3) Set the PICTURE control and the BRIGHT controls in to initial reset.
- 4) Confirm the voltage of A BOARD ① pin A-3 connector is less than 136.5V DC.
- 5) If step 4) is not satisfied, replace IC651 and R651 repeat above steps.

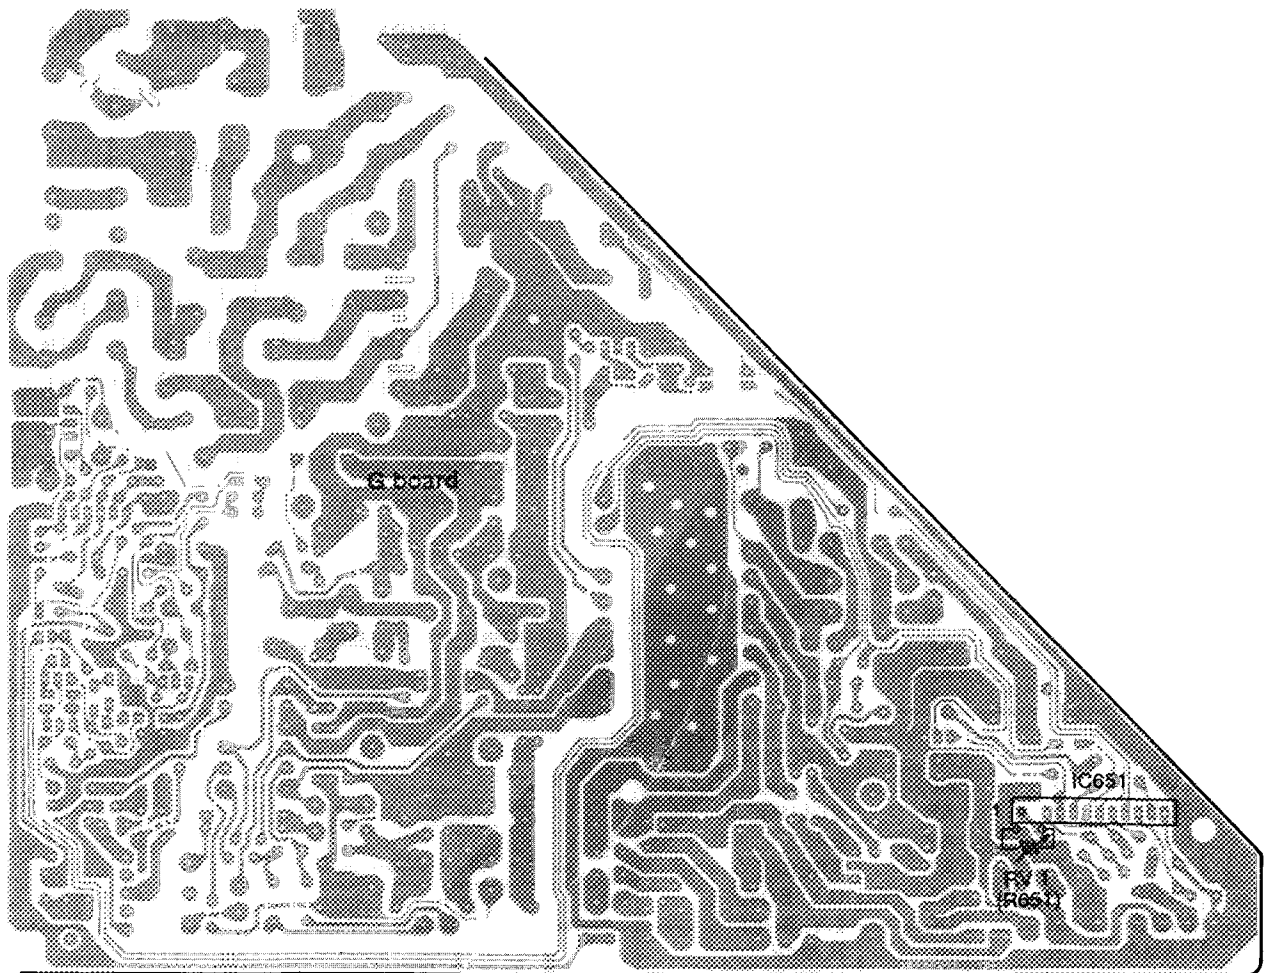

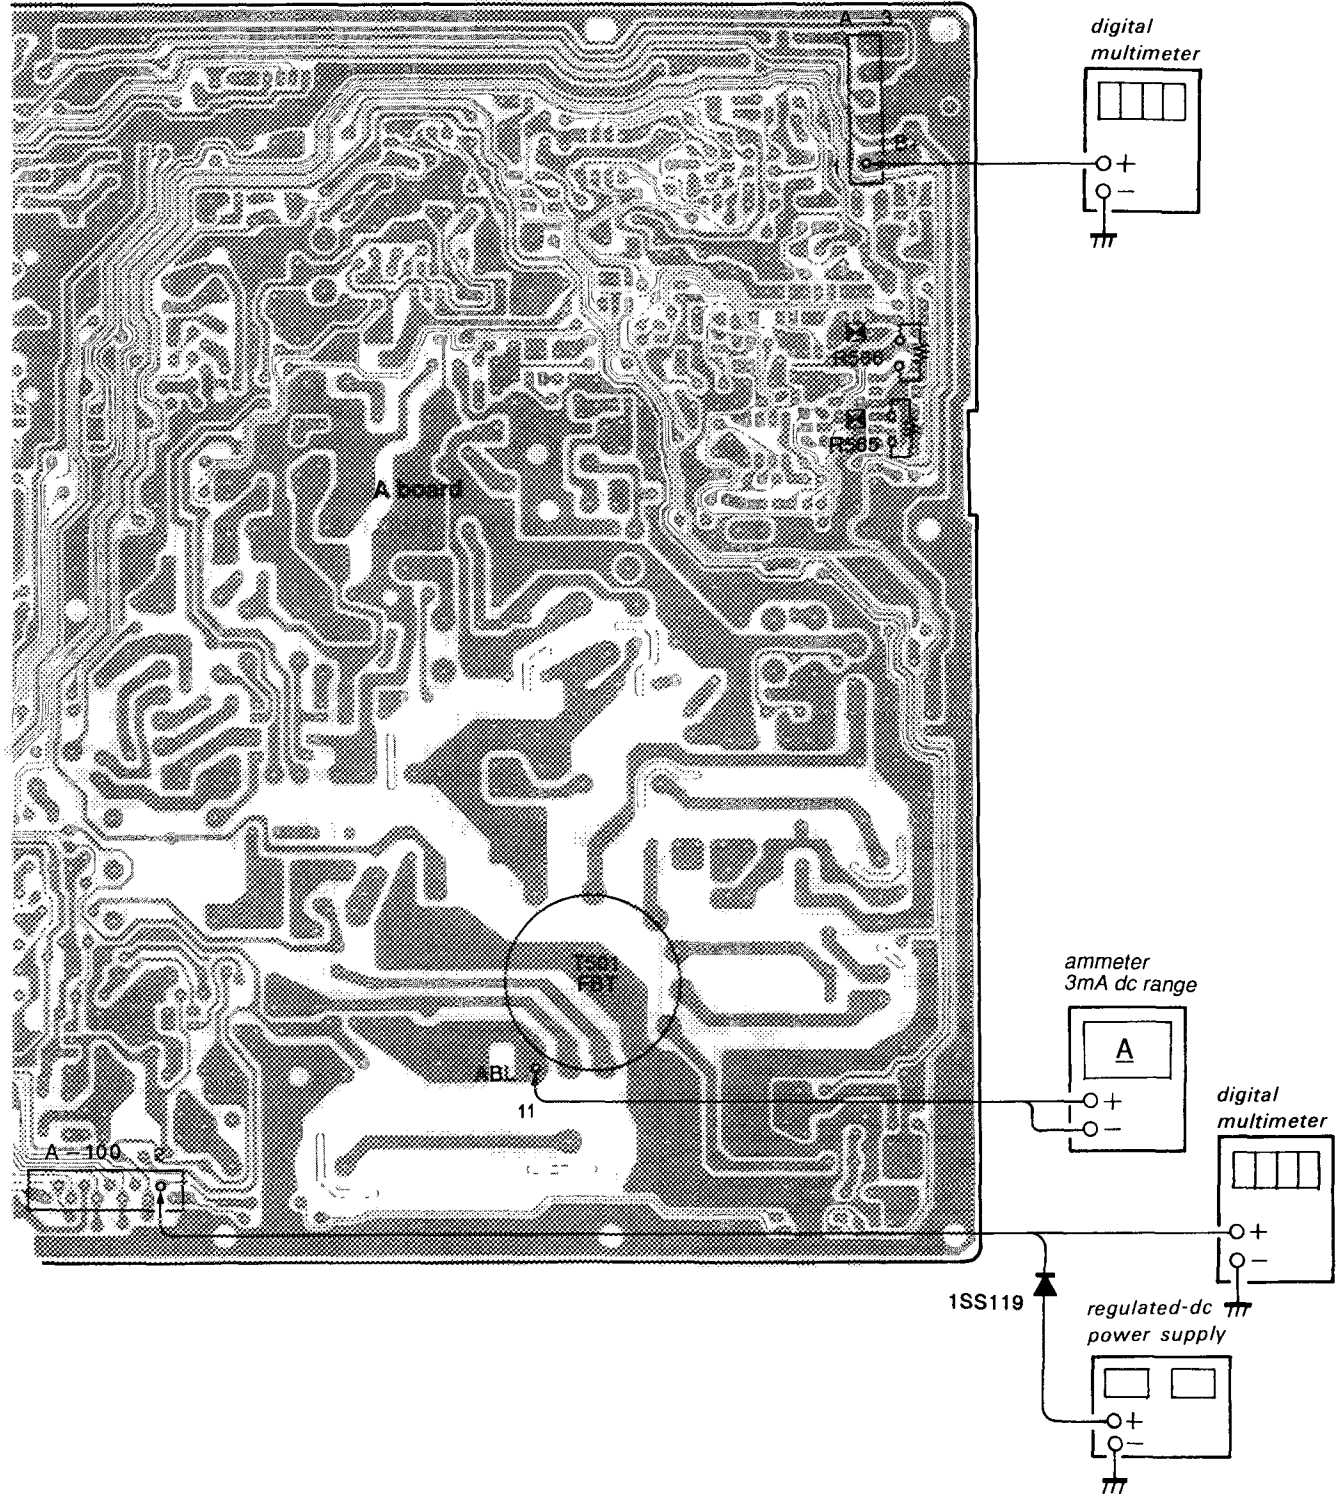

SECTION 5 CIRCUIT ADJUSTMENTS

5-1. ELECTRICAL ADJUSTMENT BY REMOTE COMMANDER


Use of Remote Commander (RM-AV1100) can be performed circuit adjustments about this model.

1. METHOD OF SETTING THE SERVICE MODE

- 1) Press **POWER** button on the Remote Commander while pressing switch on the rear of the set.

NOTE : Test Equipment Required.

1. Pattern Generator
2. Frequency counter
3. Digital multimeter
4. Audio OSC

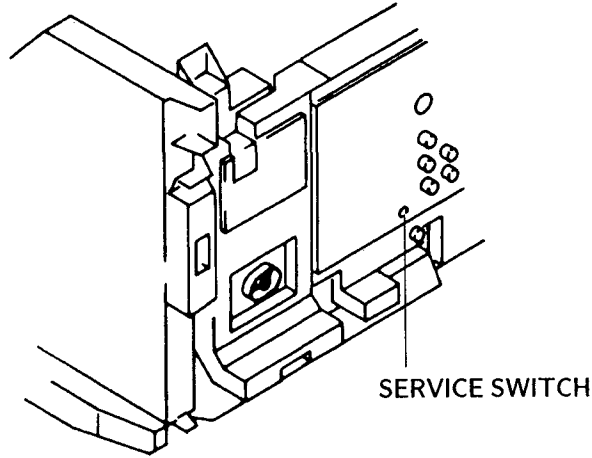

2. ADJUST BUTTONS AND INDICATOR

MUTING
write the memory

item up

item down

RESET

data up

data down

POWER

ENTER
write into memory

STANDARD

item data

SERVICE HFRE 00

MUTING
↓
ENTER

WRITE
1000 0000

3. AN ITEM OF ADJUSTMENT

ITEM	REFERENCE DATA	NAME REGIST	
AFC	1	VP	AFC 1.0
HFRE	93	VP	H. FREQUENCE
VFRE	15	VP	V. FREQUENCE
VPOS	19	VP	V. SHIFT
VSIZ	32	VP	V. SIZE
VLIN	2	VP	V. LINEARITY
VSCO	3	VP	VS. CORRECTION
HPOS	9	VP	H. PHASE
HSIZ	25	VP	H. SIZE
PAMP	17	VP	PIN. AMP.
CPIN	4	VP	CORNER PIN
PPHA	8	VP	PIN. PHASE
VCOM	2	VP	V. COMP
GAMP	19	VP	GREEN AMP.
BAMP	9	VP	BLUE AMP.
GCUT	8	VP	GREEN CUT OFF.
BCUT	6	VP	BLUE CUT OFF
SPIX	40	VP	PICTURE
SHUE	29	VP	HUE
SCOL	30	VP	COLOR
SBRT	40	VP	BRIGHT
RGBP	28	VP	RGB PICTURE
SHAP	7		SHARPNESS
DISP	35		OUTPUT
VSMO	0	VP	VSMO
REF	2	VP	REF 1.0
ROFF	1	VP	OFF NR
GOFF	1	VP	OFF NG
BOFF	1	VP	OFF NB
ABLM	0	VP	ABLM
DRGB	1	VP	D RGB
YBOW	31	DE	Y BOW
VANG	35	DE	V. ANGLE
HTAP	31	DE	H. TRAP
TEST	0	AP	T
MPX	7	AP	ATT
FILO	31	AP	I1
DEEM	7	AP	I2
STEV	31	AP	OSC 1
SAPV	31	AP	OSC 2
PILO	7	AP	PILOT
SEP	31	AP	WIDE BAND
VD	7	AP	SPECTRAL
LVOL	0	AP	VOLUME-L
RVOL	0	AP	VOLUME-R
BASS	7	AP	BASS
TRE	7	AP	TREBLE
UYBO	39	DC	U.Y. BOW
LYBO	39	DC	L.Y. BOW
HAMP	26	DC	H.AMP
HTIL	36	DC	H TILT
UCBO	20	DC	U.C. BOW
UTIL	44	DC	U.TILT
LCBO	31	DC	L.C. BOW
LTIL	63	DC	L.TILT
DCSH	19	DC	DC. SHIFT
NRLE	30		NR LEVEL
DSPP	31		

PHPO, PVPO, PLEV, PFCO
Nothing change for KV-32XBR90S


4. METHOD OF CANCELLATION FROM SERVICE MODE

Set the standby condition (Press **POWER** button on the commander) in the next place, press **POWER** button again, hereupon it becomes TV mode.

5. METHOD OF WRITE FOR MEMORY


- 1) Set to Service Mode.
- 2) Press **1** (UP) and **4** (DOWN), select an item of adjustments.
- 3) Press **MUTING** button indicate WRITE (RED) on screen.
- 4) Press **ENTER** button to write for memory.

6. MEMORY WRITE CONFIRMATION METHOD

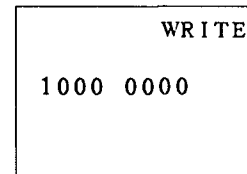

- 1) After adjustment, pull out the plug from AC outlet, and next place, plug in AC outlet again.
- 2) Turn the power switch ON and set to Service Mode.
- 3) Call the adjusted items again, confirm they were adjusted.

5-2. A BOARD ADJUSTMENTS

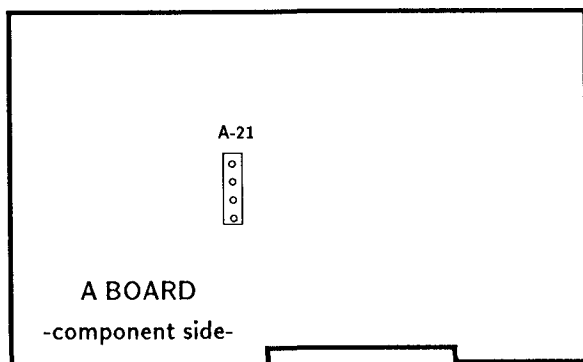

RF AGC ADJUSTMENT (IF BLOCK VR)

- 1) Input a color-bar signal.
- 2) Adjust AGC VR of TU 101 so that snow noise and cross-modulation disappear from the picture.
- 3) Confirm them at every channel.

H.FREQUENCY ADJUSTMENT (HFRE)

- 1) Set to Service Mode.
- 2) Input a color-bar signal.
- 3) Connect a frequency counter to base of Q 507.
- 4) Call the item of AFC, set to 3 level (free run).
- 5) Select HFRE with **[1]** and **[4]**.
- 6) Adjust **[3]** and **[6]** to the 15735 ± 60 Hz level.
- 7) Call the item of AFC again, adjust the level "01".
- 8) Write into the memory by pressing **[MUTING]** → then **[ENTER]**.

V.FREQUENCY ADJUSTMENT (VFRE)

- 1) Set the Service Mode.
- 2) Input an off-air signal (VIDEO IN → no signal).
- 3) Connect the frequency counter across connector VDY - ⊕ of DY-1 connector and ground.
- 4) Select VFRE with **[1]** and **[4]**.
- 5) Adjust **[3]** and **[6]** to the 55 ± 0.5 Hz.
- 6) Write the memory by pressing **[MUTING]** → then **[ENTER]**.

SUB CONTRAST ADJUSTMENT (SPIX)


- 1) Set to Service Mode.
- 2) Input a color-bar signal. (75 IRE)
- 3) Set the conditions as follows.

PICTURE MAX
 COLOR MIN
 BRIGHT MIN
 R OFF ON
 G OFF OFF
 B OFF OFF

Press **[MENU]** and select VIDEO MENU → **[]** (L)

(It becomes minimum).

Select **[3]** (ON) and **[6]** (OFF) with **[1]** and **[4]**.

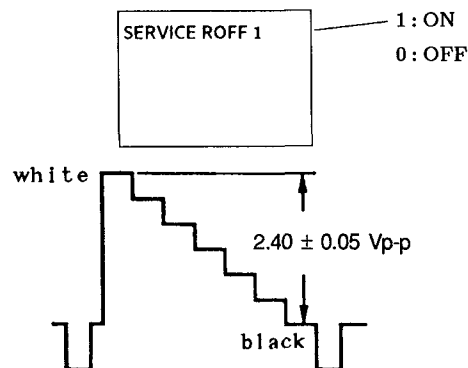


- 4) Connect an oscilloscope to TP 49 B of C board and ground.
- 5) Adjust **[3]** and **[6]** to the 2.40 ± 0.05 Vp-p level by selecting SPIX with **[1]** and **[4]**.
- 6) Write the memory by pressing **[MUTING]** → then **[ENTER]**.
- 7) Return the following back to normal after adjustment.

G OFF ON
 B OFF ON
 COLOR CENTER
 BRIGHT CENTER
 PICTURE 80%

SUB HUE, SUB COLOR ADJUSTMENT (SHUE, SCOL)


- 1) Input a color-bar signal.
- 2) Press **STANDARD** to normal.
- 3) Set to Service Mode.
- 4) Connect an oscilloscope to TR 49 R of C board and ground.
- 5) Adjust **3** and **4** to the V1=V4 and V2=V3 by select to SHUE and SCOL with **1** and **4**.

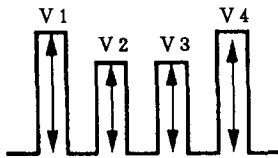

- 6) Write into the memory by pressing **MUTING** → then **ENTER**.


V.SIZE ADJUSTMENT (VSIZ)

- 1) Set to Service Mode.
- 2) Press **STANDARD** to normal.
- 3) Input a cross-hatch signal.
- 4) Adjust **3** and **6** to the best vertical size by selecting VSIZ with **1** and **4**.
- 5) Write into the memory by pressing **MUTING** → then **ENTER**.

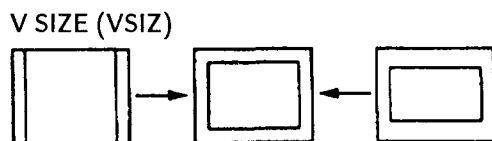

H.SIZE ADJUSTMENT (HSIZ)


- 1) Input a cross-hatch signal.
- 2) Press **STANDARD** to normal.
- 3) Set to Service Mode.
- 4) Adjust **3** and **6** to best horizontal size by selecting HSIZ with **1** and **4**.
- 5) Write into the memory by pressing **MUTING** → then **ENTER**.

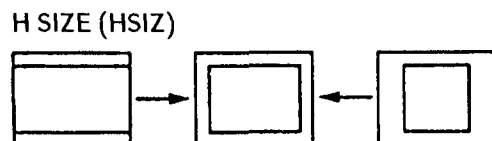

H.CENTER ADJUSTMENT (H POS)

Note: Perform this adjustment after H.FREQUENCY ADJUSTMENT (HFRE).


- 1) Input a color bar signal.
- 2) Set the Service mode.
- 3) Select HSIZ with **1** and **4**.
- 4) Press **6** so that the Horizontal size set to min.
- 5) Adjust A-21 conector position so that both-size blanking width of the Raster should be same on the Scrnee.
- 6) Unplug Set then plug in Set.
- 7) Set to Service mode.
- 8) Select HPOS with **1** and **4**.
- 9) Adjust **3** and **6** so that the color bars center should be set to the CRT Screen center position.
- 10) White into the memory by the pressing **MUTING** → then **ENTER**.




PIN AMP (PAMP), CORNER PIN (CPIN) PIN PHASE (PPHA), H TRAPIZOID (HTRA) V LINEARITY (VLIN), V ANGLE (VANG), VS CORRECTION (VSCO), Y BOW (YBOW), V SHIFT (VPOS), AND V COMP (VCOM) ADJUSTMENTS

- 1) Input a cross-hatch signal.
- 2) Press **STANDARD** to normal.
- 3) Set to Service Mode.
- 4) Select PAMP, CPIN, PPHA, H TRA, VPOS, VCOM, LVIN, VANG, VSCO and YBOW with **1** and **4**.
- 5) Adjust **3** and **6** to the best picture.
- 6) Write the memory by **MUTING** → **ENTER**.

PIN AMP (PAMP)



CORNER PIN (CPIN)




PIN PHASE (PPHA)



H TRAPIZOIDO (HTRA)




V-SHIFT (VPOS)




V COMP (VCOM)




V LINEARITY (VLIN)




V ANGLE (VANG)



VS CORRECTION (VSCO)




Y BOW (Y BOW)




FILTER ADJUSTMENT (MPX, FILO)

- 1) Set to Service Mode.
- 2) Select to **TEST** with **1** and **4**, set the data to "1".
Then select MPX and change data to "08".
- 3) Connect an audio oscillator to R224 using a capacitor (10μ F/16V), set frequency to 62.936 kHz ± 0.1 kHz.
And then, through the 10kΩ resistor, feed 9.0V into the mute of TUVIF TU 101.

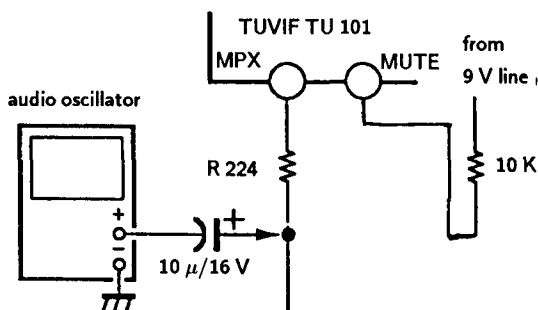


V 4 fh : SINE-WAVE 62.936 KHz ± 0.1 KHz
LEVEL 3.0 Vp-p

- 4) Make the data "00" by selecting FILO with **1** and **4**. And then, send up the data gradually by pressing **6**. Set the data to D1 before SAT3 changing to 1 from 0.
- 5) Send up the data gradually. Set data D2 when SAT3 changes 0 from 1.
- 6) Adjust the data of FILO to $\frac{D1 + D2}{2}$.
- 7) Write into the memory by pressing **MUTING** → then **ENTER**.

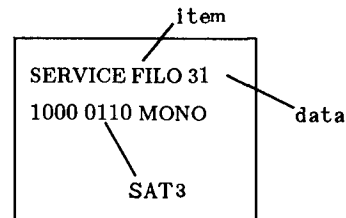


ST VCO ADJUSTMENT (MPX, STEV)

- 1) Set to Service Mode.
- 2) Select TEST with **1** and **4**, set the data to "1".
And then press **MTS** to MONO.
- 3) Select MPX, set the data "8".
- 4) Connect an audio oscillator to R224 using electrolytic capacitor (10μ F/16V) and apply the frequency Vsr. Then, apply DC voltage to mute of TUVIF TU 101 using 10kΩ connect to 9.0 V line.

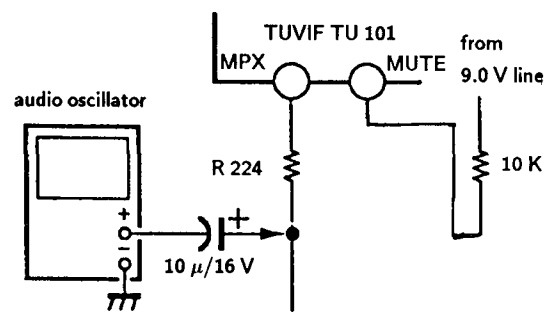

Vfh : SINE-WAVE 15.734 KHz ± 0.1 KHz
LEVEL 0.28 Vp-p

- 5) Select STEV with **1** and **4**, set the data to "00" with **6**. And then, send up the data gradually. Set the data to D1 before SAT2 changes from 0 to 1.
- 6) Send up data gradually, set the data to D2 when SAT2 changes 1 from 0.
- 7) Adjust the data of STEV to
- 8) Write into the memory by pressing **MUTING** → then **ENTER**.

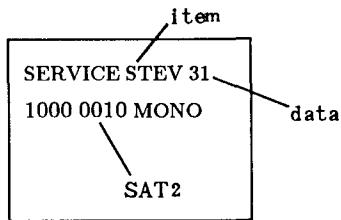

MPX IN LEVEL ADJUSTMENT (MPX)

- 1) Set to Service Mode.
- 2) Select TEST with [1] and [4], set the data to "0" with [6]. And then press **MTS** to MONO.
- 3) Select MPX with [1] and [4], set the data to "08" with [3] and [6].
- 4) Write into the memory by pressing **MUTING** → then **ENTER**.

PILOT CANCEL ADJUSTMENT (PILO)

- 1) Set to the Service Mode.
- 2) Select PILO with [1] and [4], set the data to "08" with [3] and [6].
- 3) Write into the memory by pressing **MUTING** → then **ENTER**.


SAP VCO f₀ ADJUSTMENT (SAPV)

- 1) Set to Service Mode.
- 2) Input a stereo broadcast signal with SAP.
- 3) Select TEST with [1] and [4], set the data to "0". And then, press **MTS** to MAIN.
- 4) Connect a digital multimeter to TP-1(DBX). This voltage reading will equal V 1.
- 5) Press MTS to SAP and this voltage will equal V 2.
- 6) Select SAPV with [1] and [4], adjust [3] and [6] so that $V 2 = V 1 \pm 0.03 \text{ VDC}$.
- 7) Write the memory by **MUTING** → **ENTER**.

SEPARATION ADJUSTMENT (SEP)


- 1) Set to Service Mode.
- 2) Press **MTS** to MAIN and receive a monoral broadcast signal.
In the next step, receive a stereo broadcast signal.
- 3) Select SEP and VD with [1] and [4], adjust [3] and [6] so that a clear stereo sound is effected.

5-3. VC BOARD ADJUSTMENT

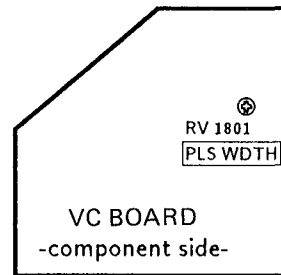








DRIVE PULSE PHASE ADJUSTMENT (RV 1801)

- 1) While measuring the voltage V 1 at both edges of C 1809, rotate RV 1801 so that it becomes minimum. The adjusting range is from (the voltage at which V 1 becomes minimum) V 1 MIN to 3 V, which means, adjust to between V 1 MIN to V 1 MIN + 3 V.

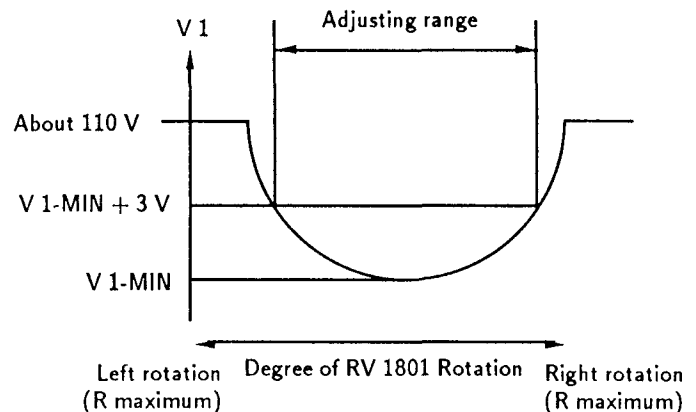


MEMO

6-2. BLOCK DIAGRAMS (2)

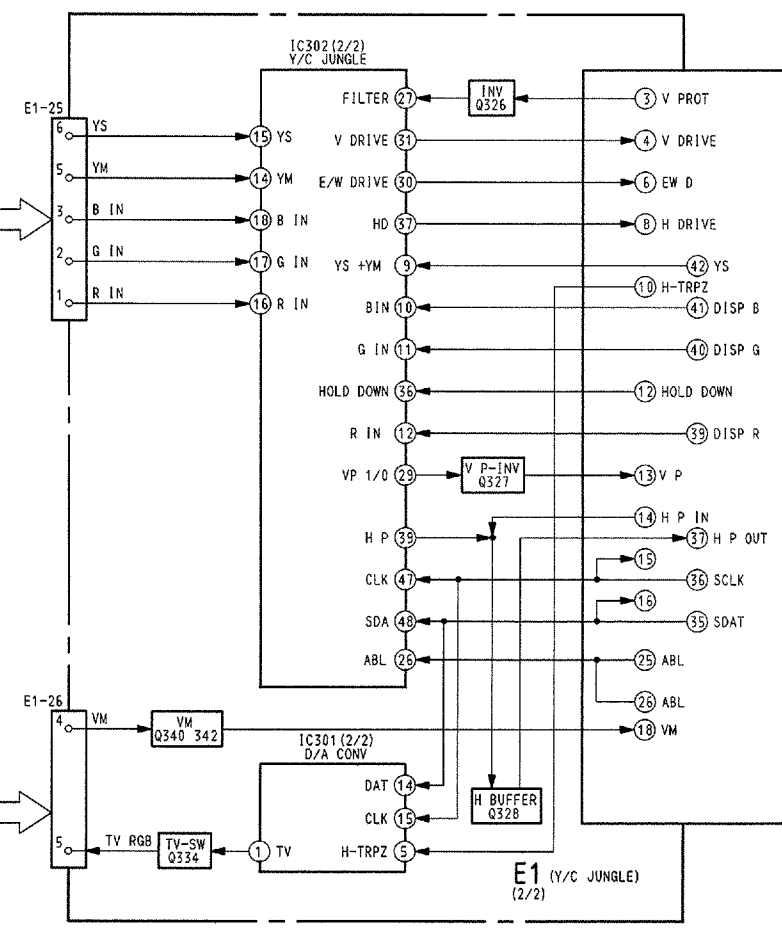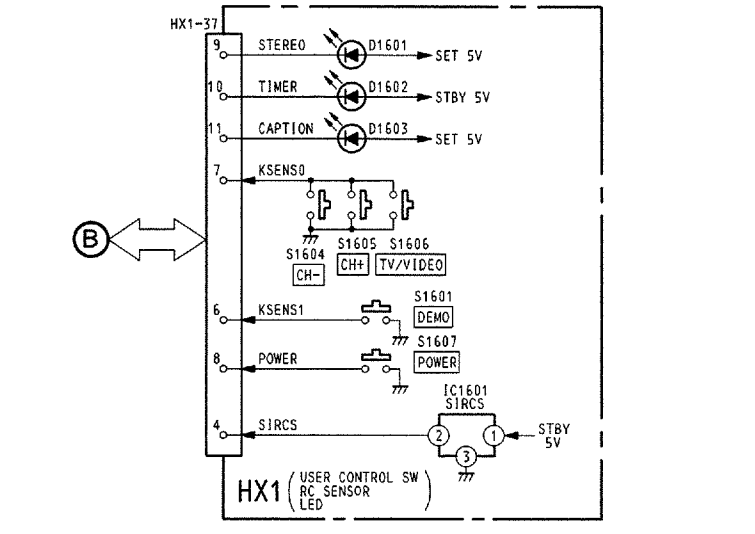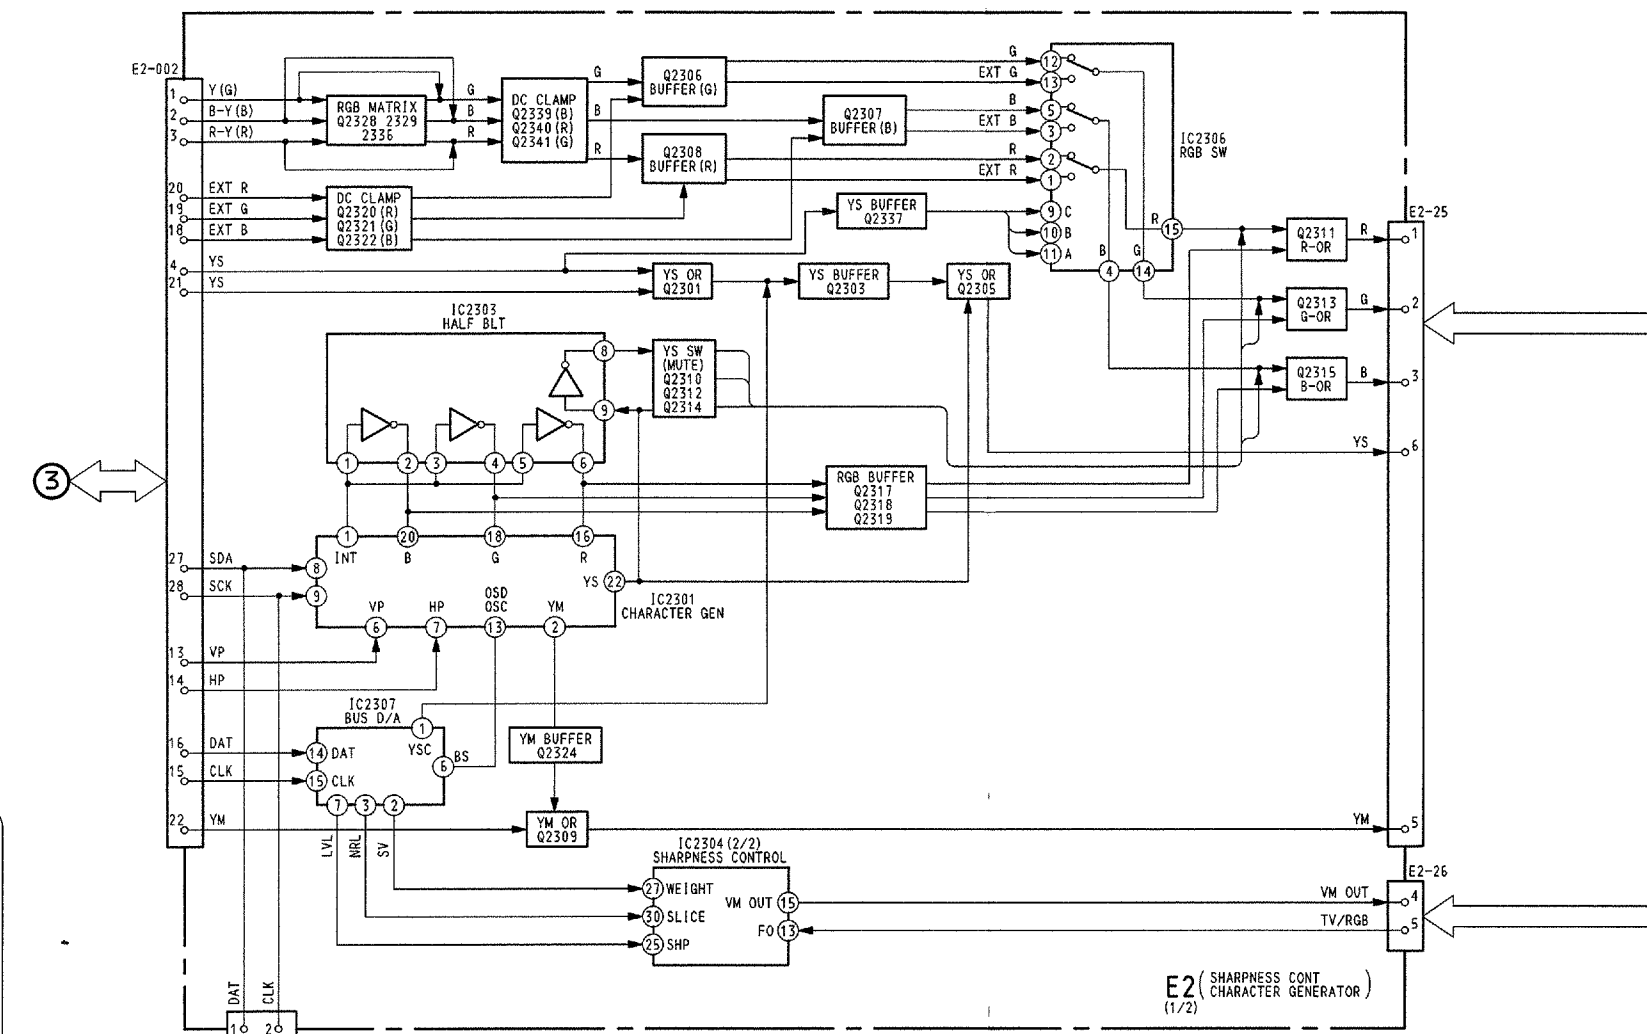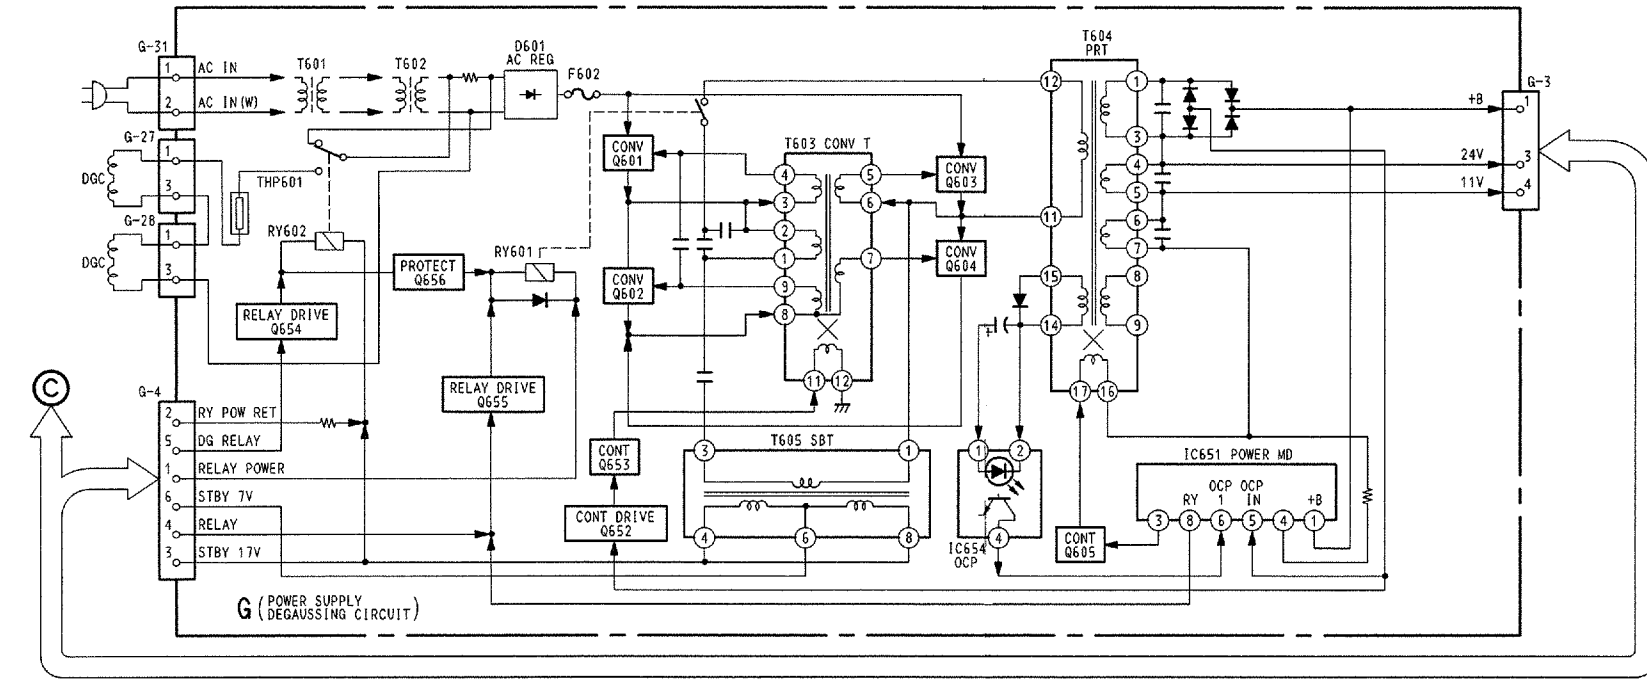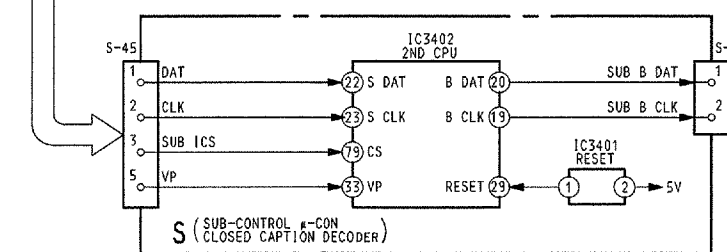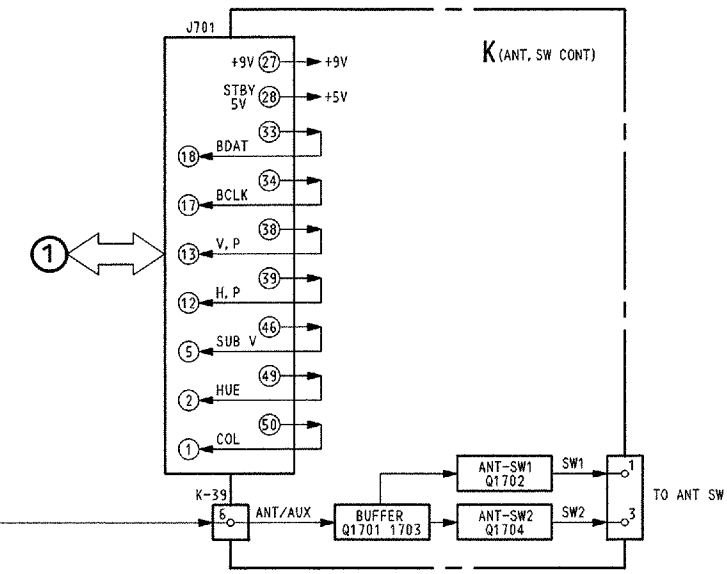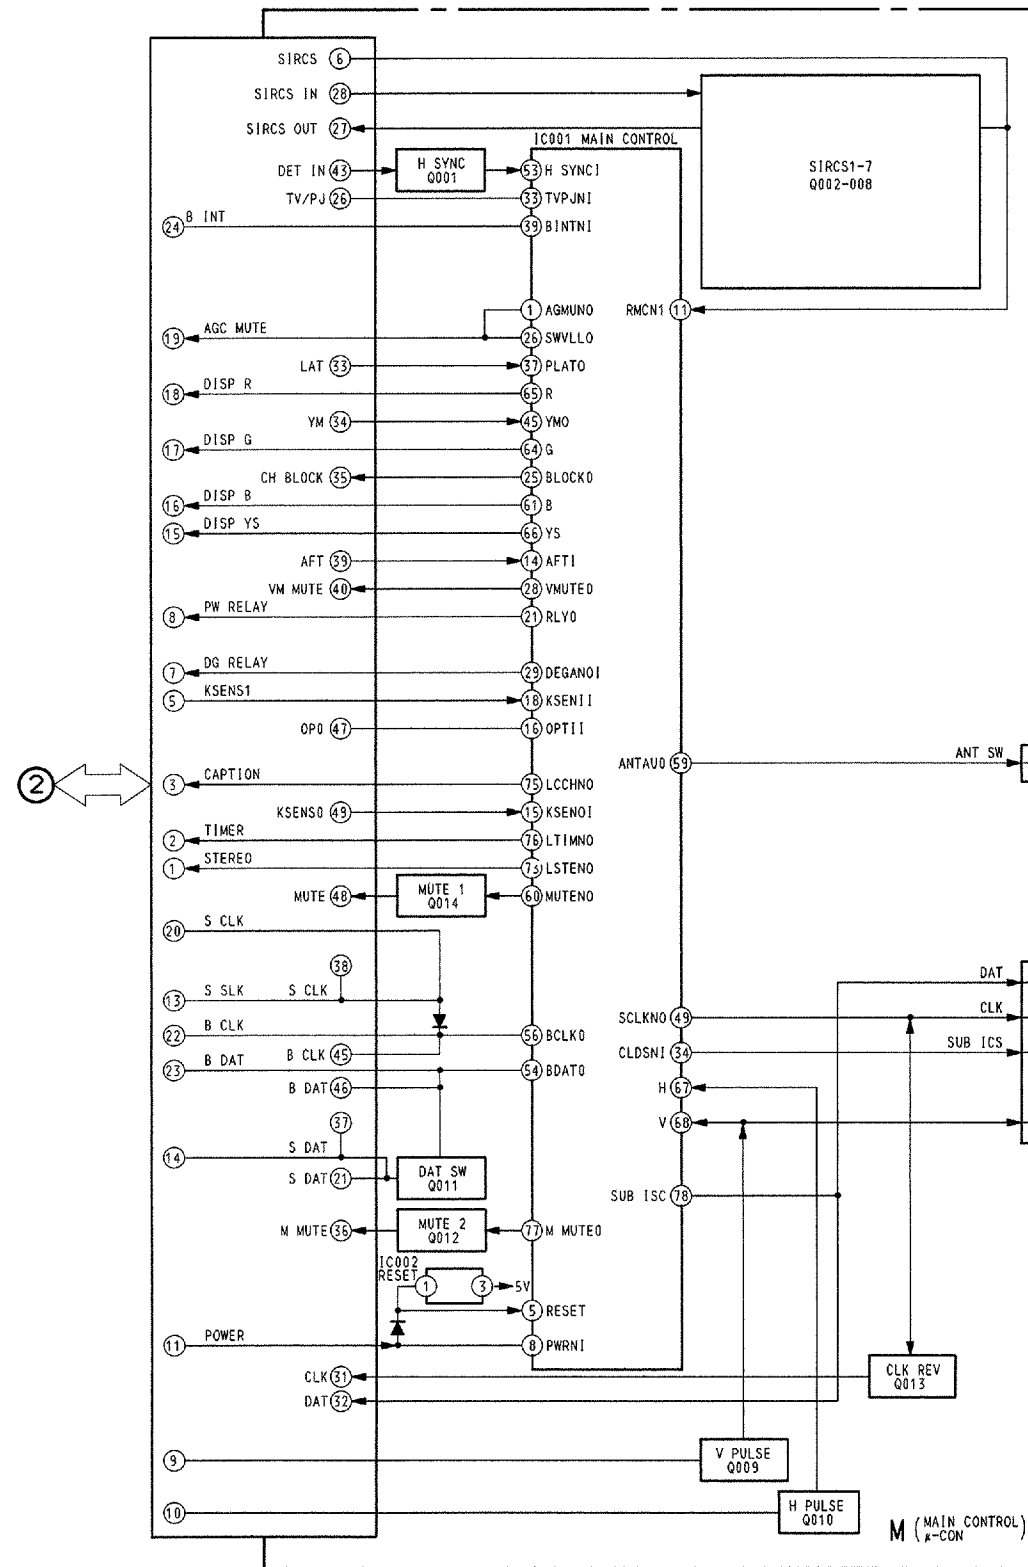

UT [AV I/O TERMINAL]

— UT Board —

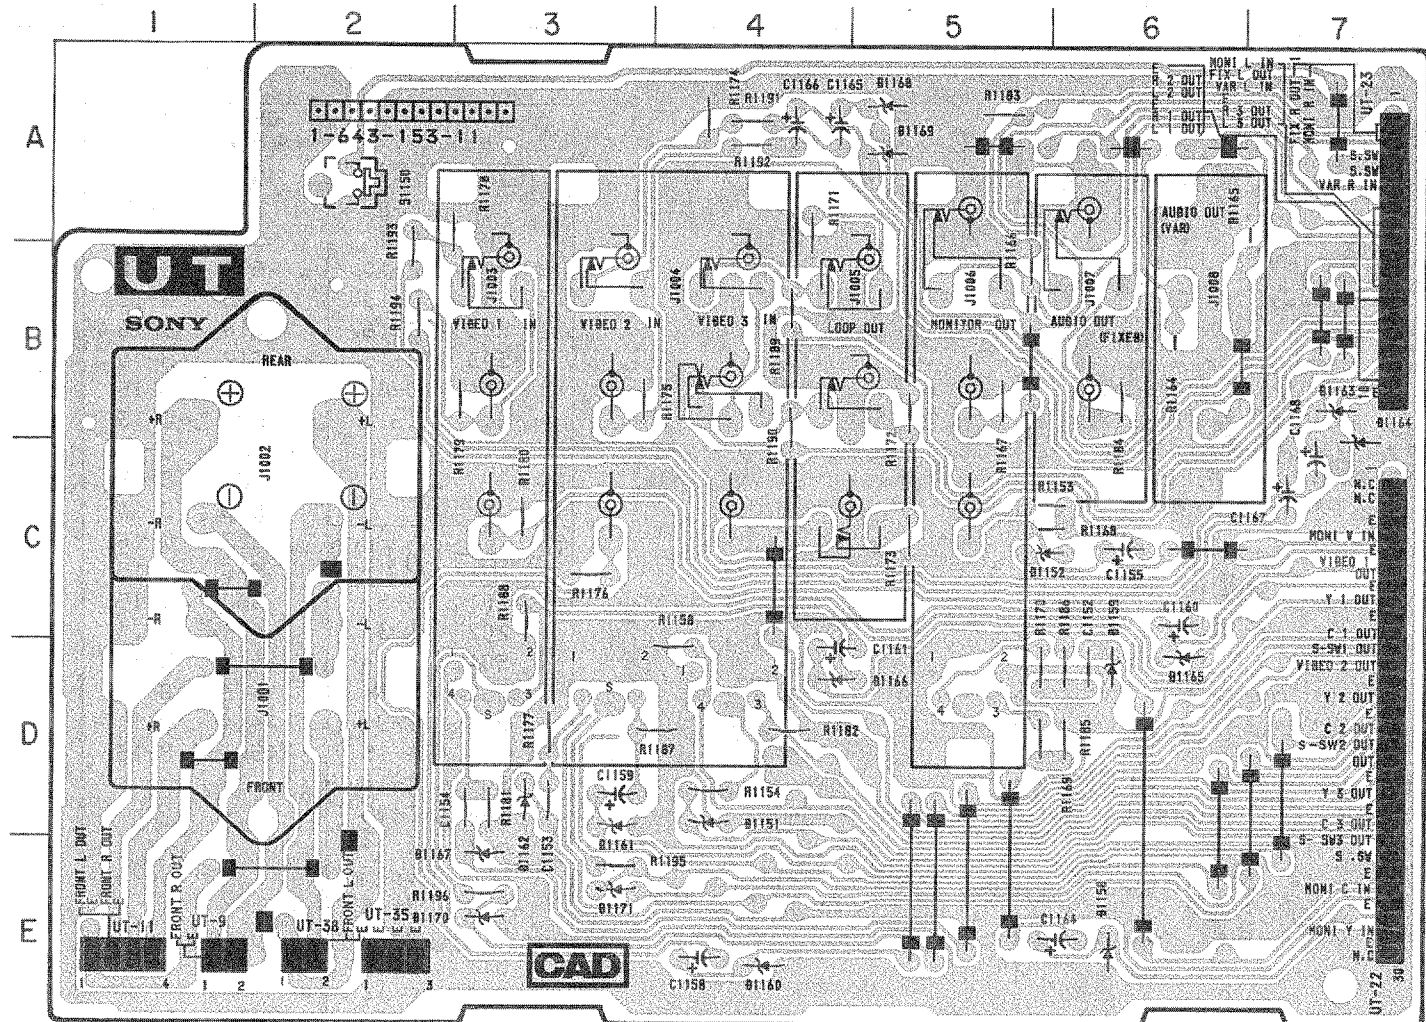


— UT Board —

DIODE	
Ø1151	Ø-4
1152	E-5
1158	C-6
1159	Ø-6
1160	E-4
1161	Ø-3
1162	Ø-3
1163	B-7
1164	B-7
1165	Ø-6
1166	Ø-4
1167	E-3
1168	A-5
1169	A-5
1170	E-3
1171	E-3

U [AV SW]

— U Board —

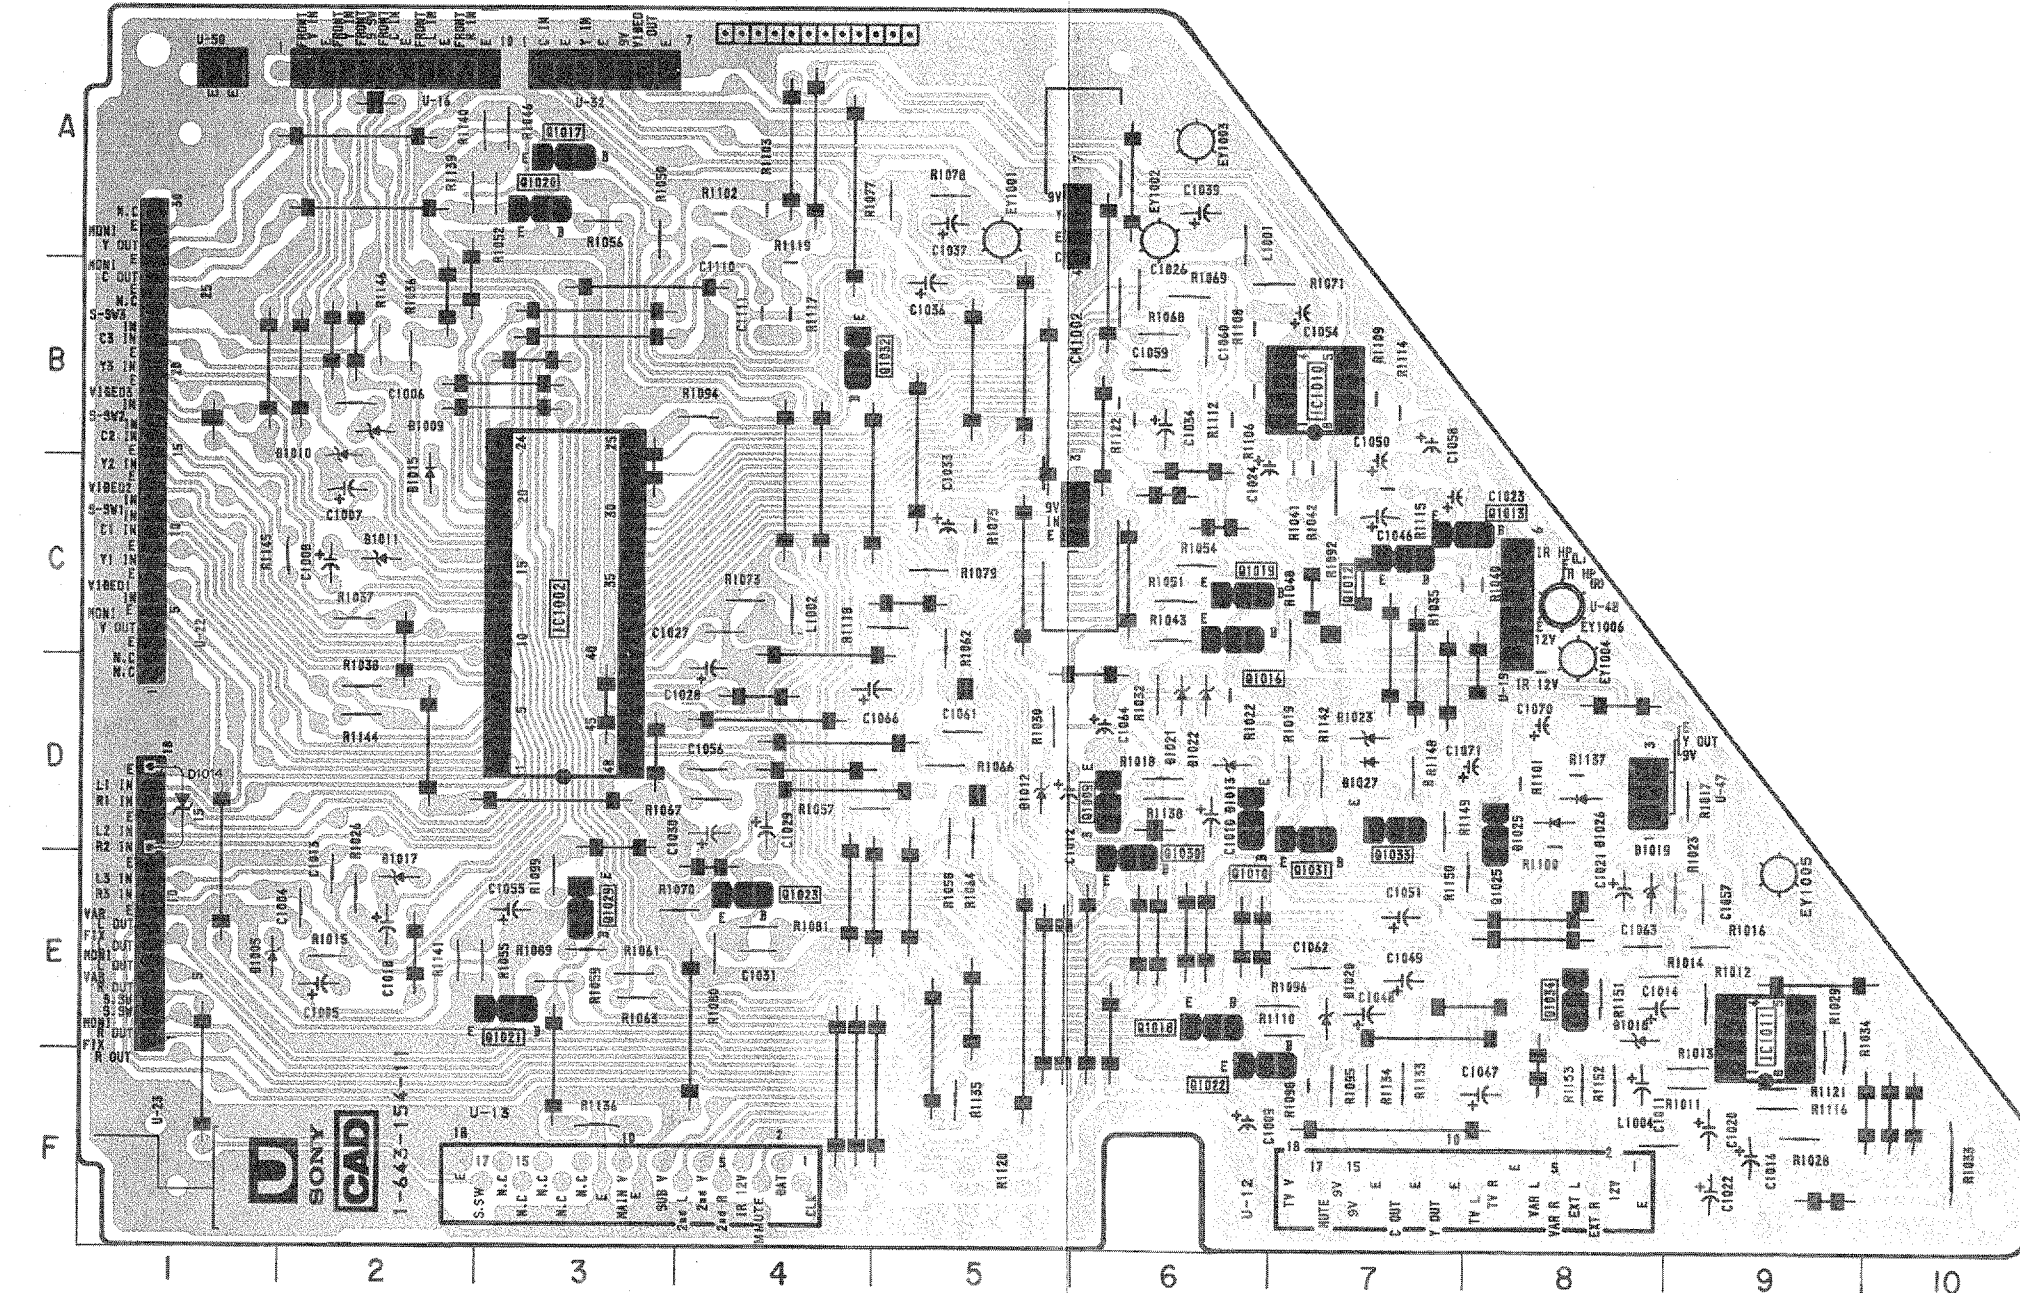


— U Board —


IC	
IC1002	C-3
1011	E-9
TRANSISTOR	
Q1009	D-6
1010	D-6
1016	C-6
1017	A-3
1018	E-6
1019	C-6
1020	A-3
1021	E-3
1022	F-6
1023	E-4
1025	D-8
1029	E-3
1030	D-6
1031	D-7
1032	B-4
1033	D-7
1034	D-7
DIODE	
Ø1005	E-1
1009	B-2
1010	B-2
1011	C-2
1012	D-5
1013	D-6
1014	D-1
1017	E-2
1018	E-8
1019	E-8
1020	E-7
1021	D-6
1022	D-6
1025	D-8
1026	D-8
1027	D-7

A TUNER-VIF/SIF, HIGH VOLTAGE CIRCUIT
H/V DEFLECTION, X-RAYS.PROT
H.PIN CORR

— A Board —

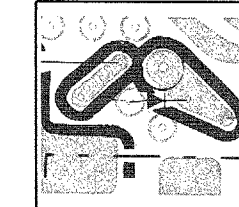


NOTE:
The circuit indicated as left contains high voltage of over 600 Vp-p. Care must be paid to prevent an electric shock in inspection or repairing.

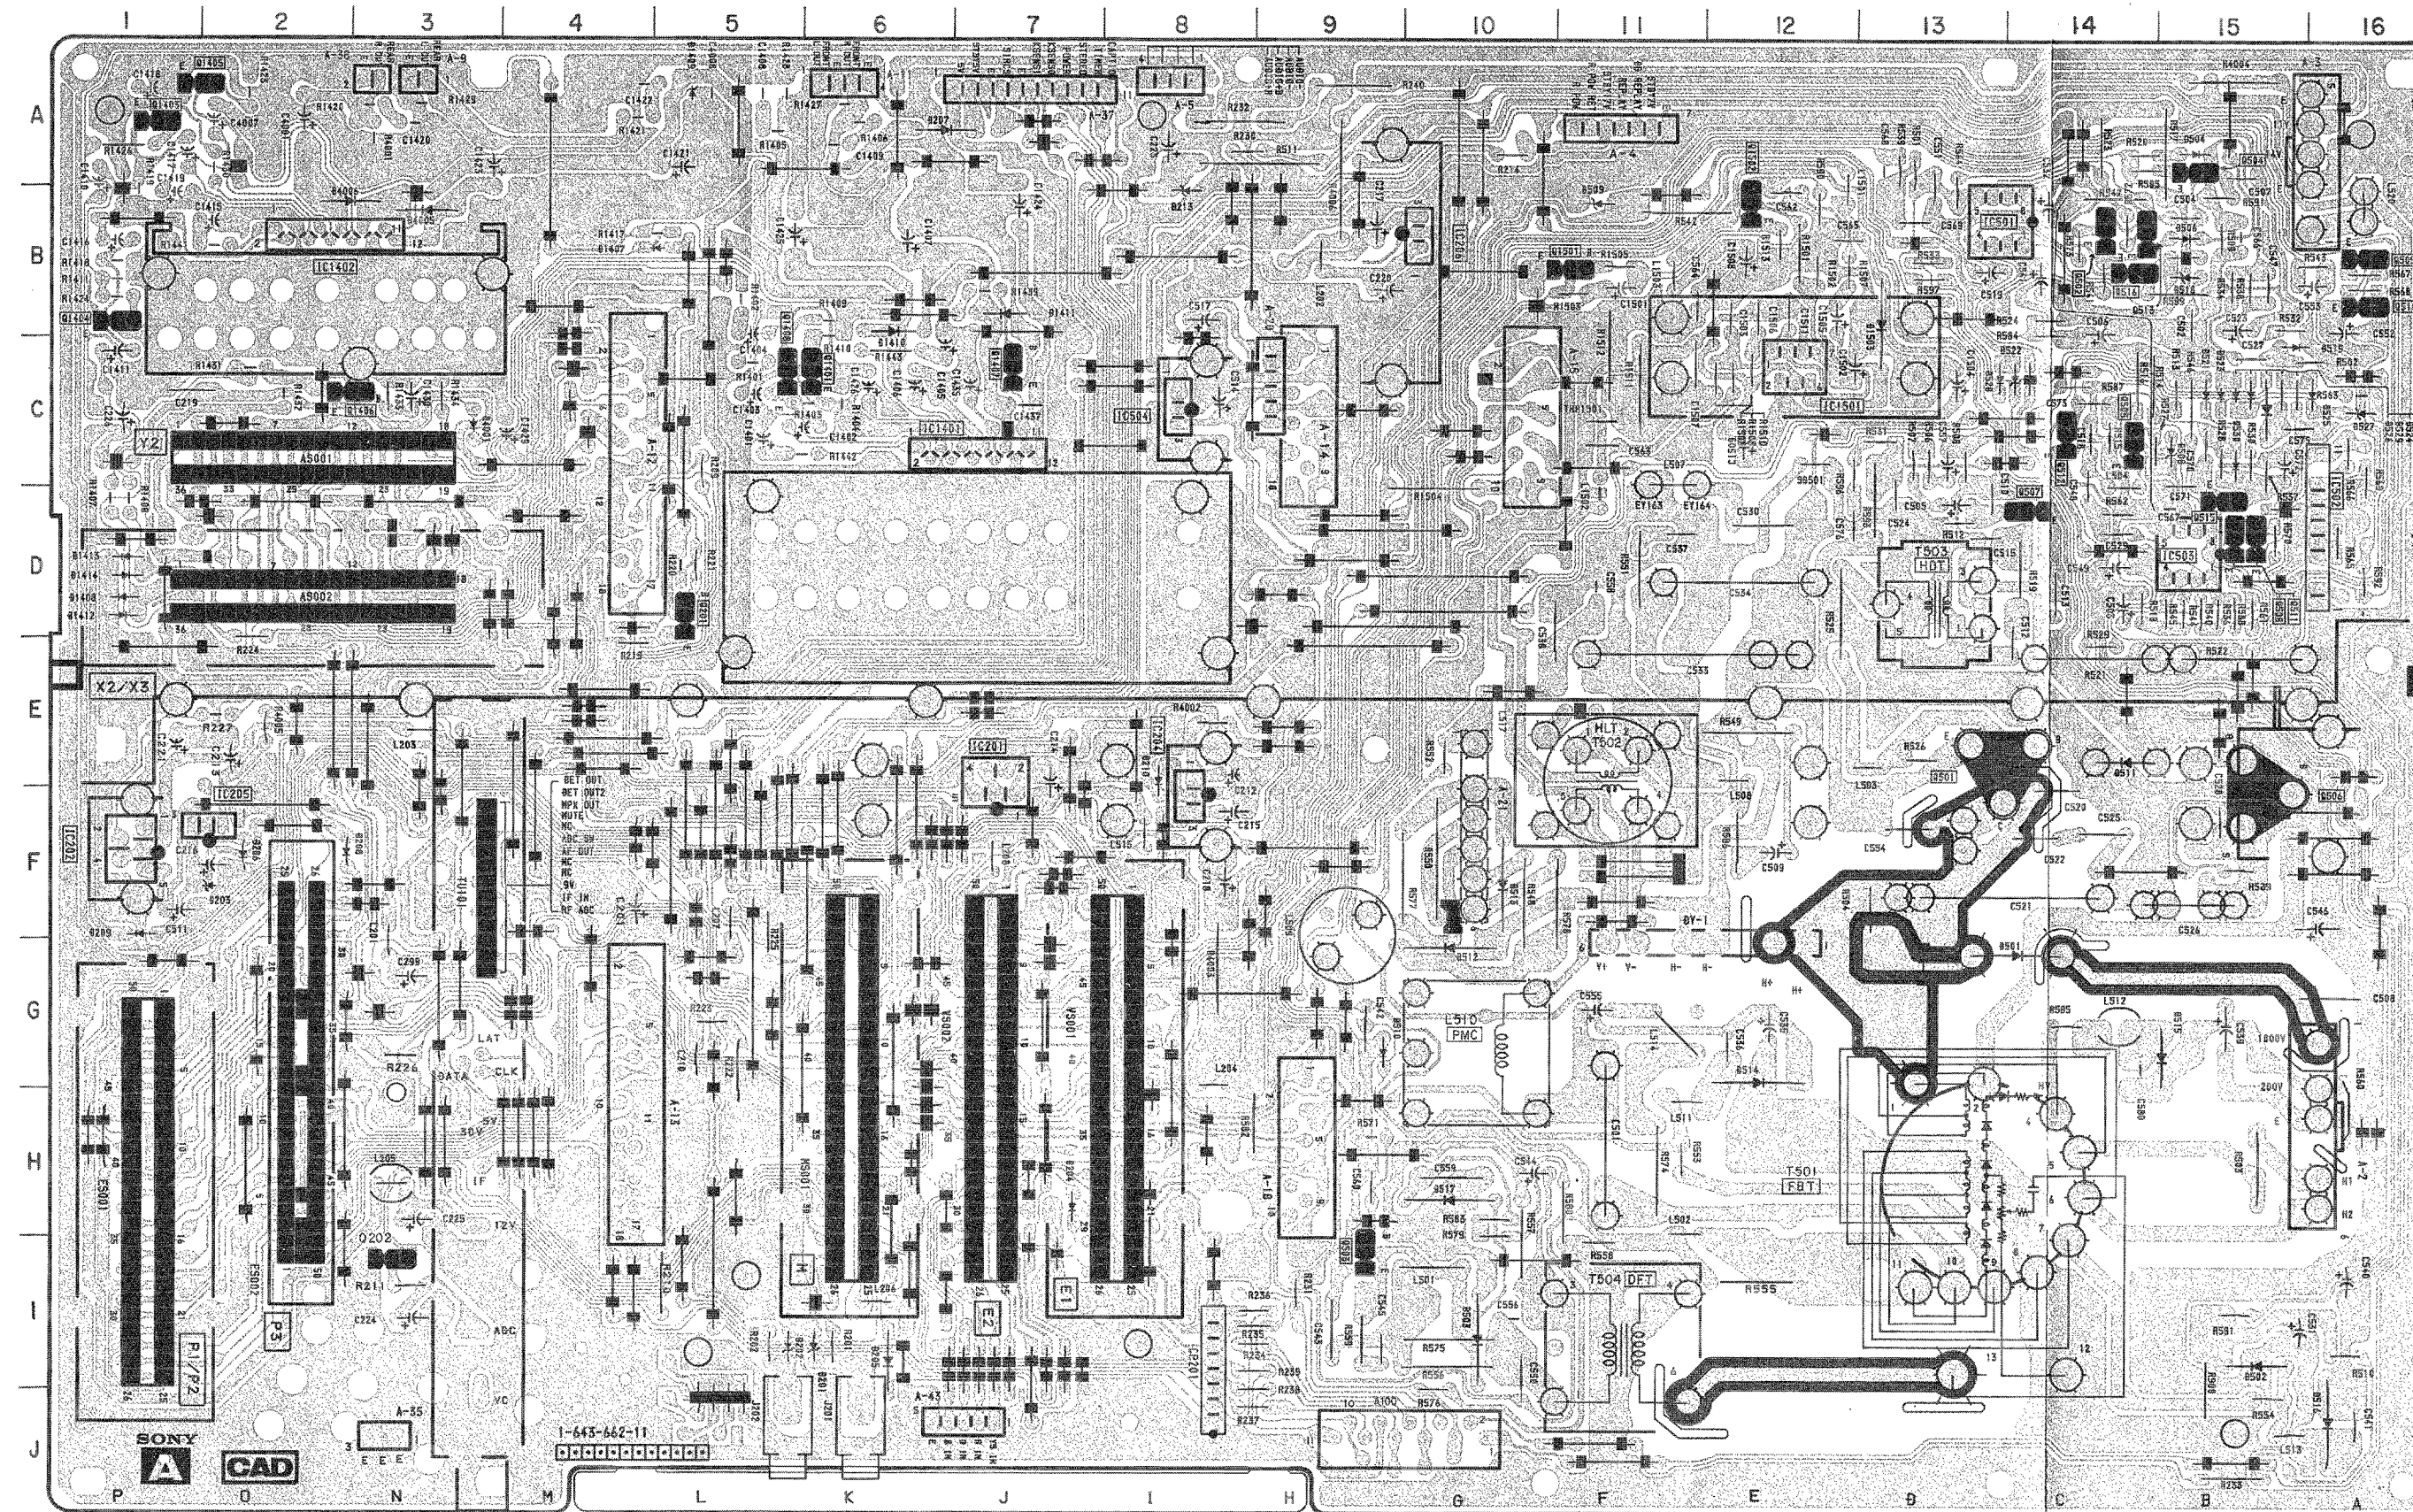


— A Board —

IC		Q509	B-11
IC201	E-7	510	G-9
204	F-8	511	E-14
205	F-2	512	G-10
206	B-10	513	F-10
501	B-13	514	G-12
502	Ø-16	515	G-15
503	Ø-15	516	J-16
504	C-8	517	H-10
1501	C-12	518	B-15
		521	C-15
		522	C-14
		524	C-15
		525	C-16
		527	C-16
		529	C-15
		530	C-15
		1408	Ø-1
		1412	Ø-1
		1413	Ø-1
		1414	Ø-1
		1503	B-13
TRANSISTOR			
Q201	Ø-5		
202	I-3		
501	E-13		
502	B-14		
503	I-9		
504	A-15		
505	C-14		
506	E-15		
507	Ø-14		
508	Ø-15		
509	B-16		
510	B-16		
511	Ø-15		
512	C-14		
513	B-14		
515	Ø-15		
516	B-14		
1501	B-11		
1502	B-12		
DIODE			
D201	I-6		
202	I-5		
204	H-7		
205	I-6		
206	A-2		
207	F-6		
208	F-2		
209	F-1		
213	A-8		
501	G-14		
502	I-5		
503	I-10		
504	A-15		
506	B-15		
508	C-15		

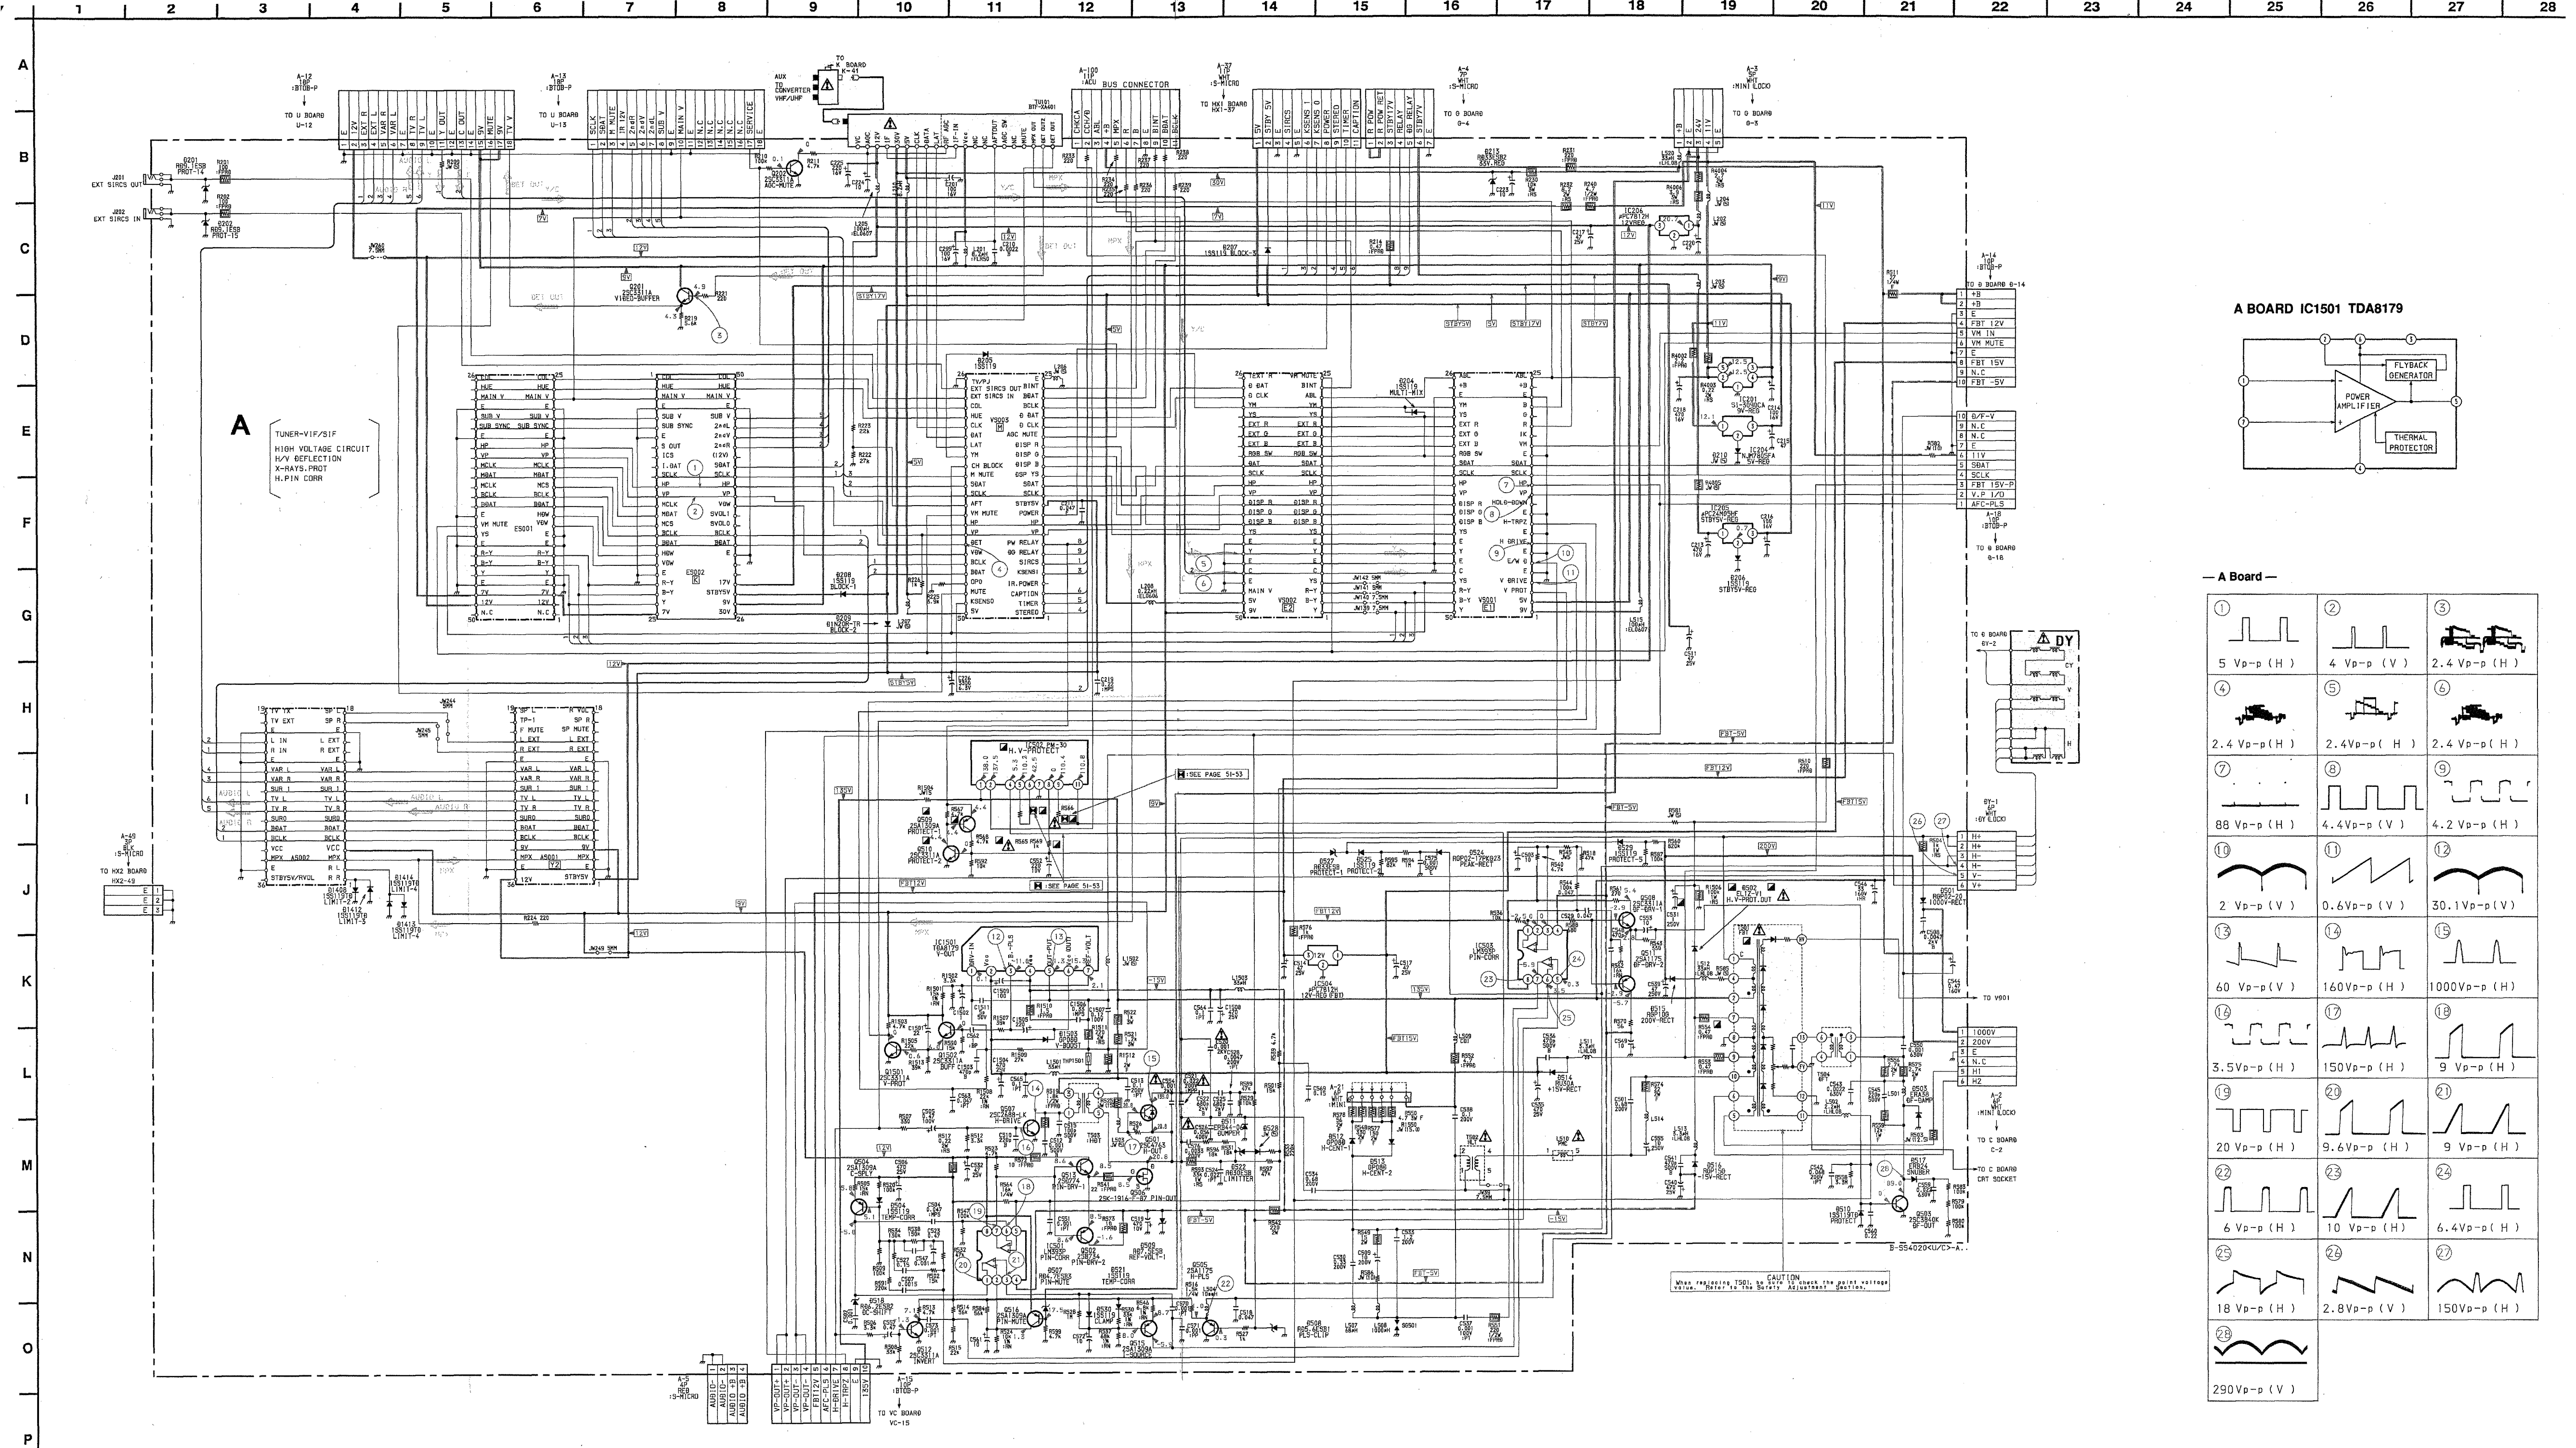

A BOARD IC1501 TDA8179

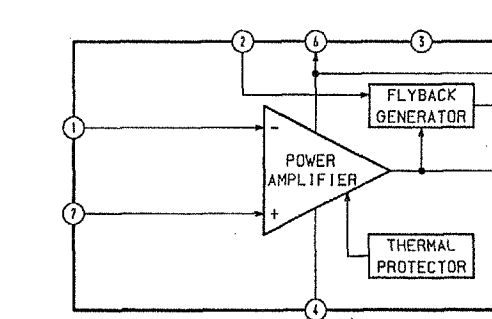


- A Board -


①	②	③
5 Vp-p (H)	4 Vp-p (V)	2.4 Vp-p (H)
④	⑤	⑥
2.4 Vp-p (H)	2.4 Vp-p (H)	2.4 Vp-p (H)
⑦	⑧	⑨
88 Vp-p (H)	4.4 Vp-p (V)	4.2 Vp-p (H)
⑩	⑪	⑫
2 Vp-p (V)	0.6 Vp-p (V)	30.1 Vp-p (V)
⑬	⑭	⑮
60 Vp-p (V)	160 Vp-p (H)	1000 Vp-p (H)
⑯	⑰	⑱
3.5 Vp-p (H)	150 Vp-p (H)	9 Vp-p (H)
⑲	⑳	㉑
20 Vp-p (H)	9.6 Vp-p (H)	9 Vp-p (H)
㉒	㉓	㉔
6 Vp-p (H)	10 Vp-p (H)	6.4 Vp-p (H)
㉕	㉖	㉗
18 Vp-p (H)	2.8 Vp-p (V)	150 Vp-p (H)
㉘		
290 Vp-p (V)		

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

E1 BOARD IC302 CXA1465AS

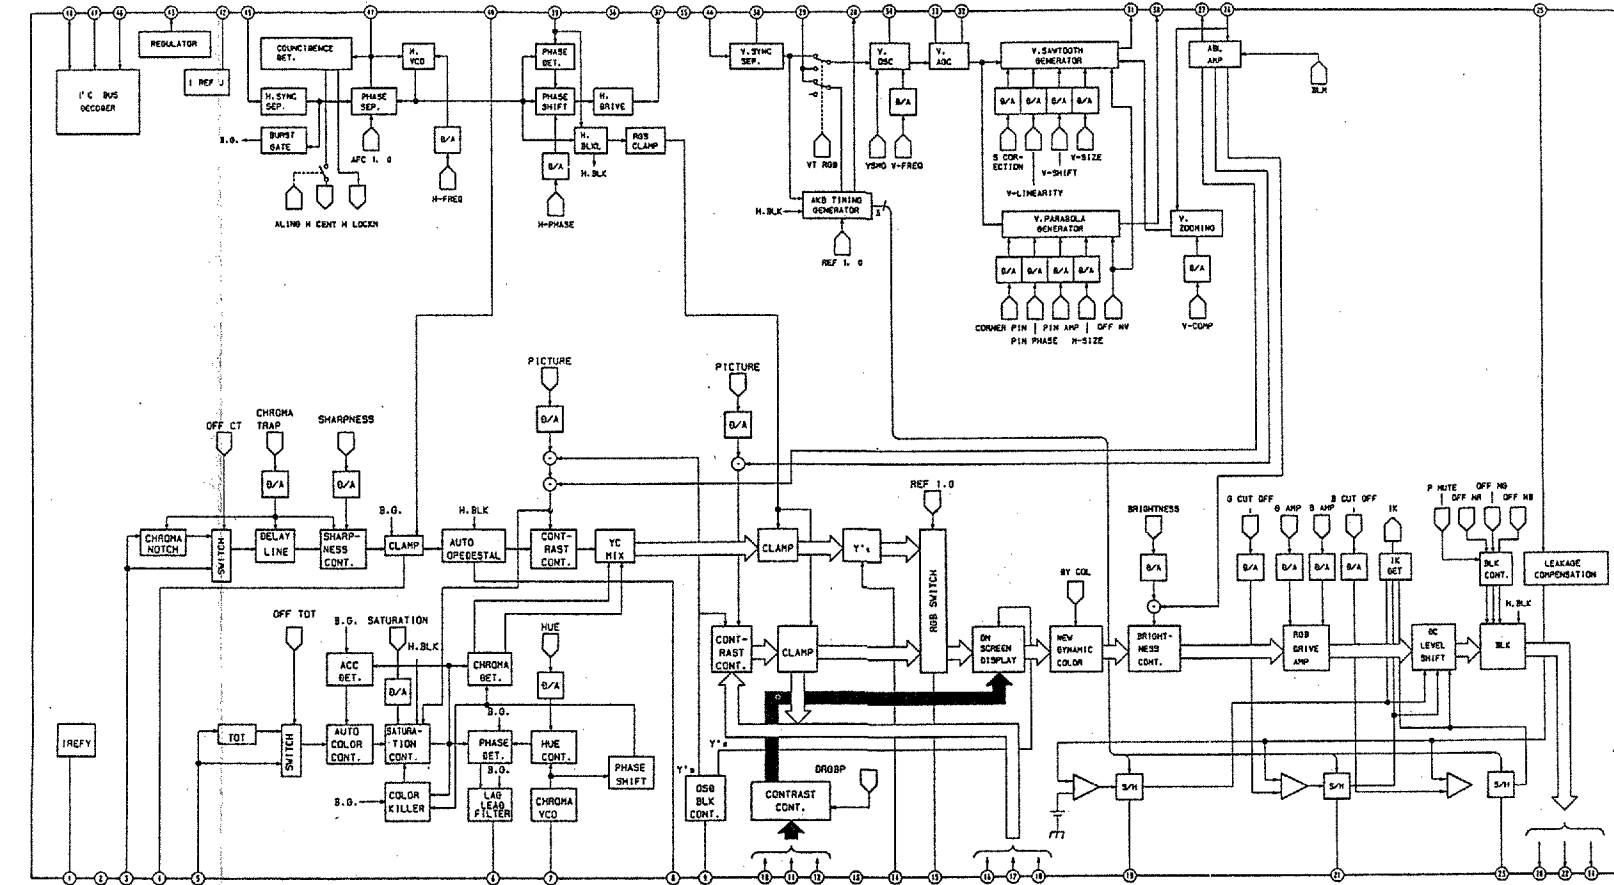


- E1 Board -

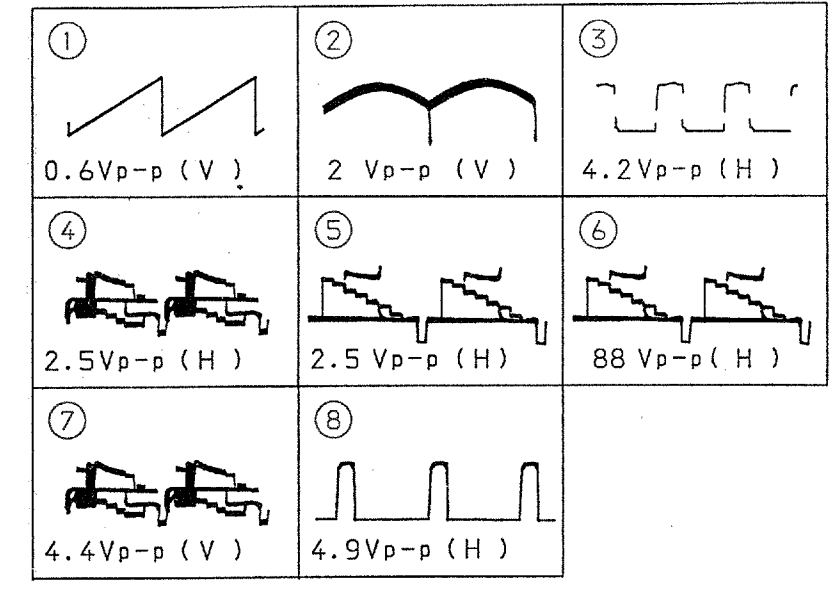

CAUTION (US MODEL ONLY)
This set is equipped with a polarized ac power cord plug (one blade of the plug is wider than the other). When replacing the ac power cord, be sure to connect it with specified part number as shown in this diagram.

CAUTION
When taking a broken fuse F602 off, discharge 500MA C604 to avoid shock hazard.


The Voltage value of 0601-504 A IC654 @ pin is the reference value between the IC654 @ pin.

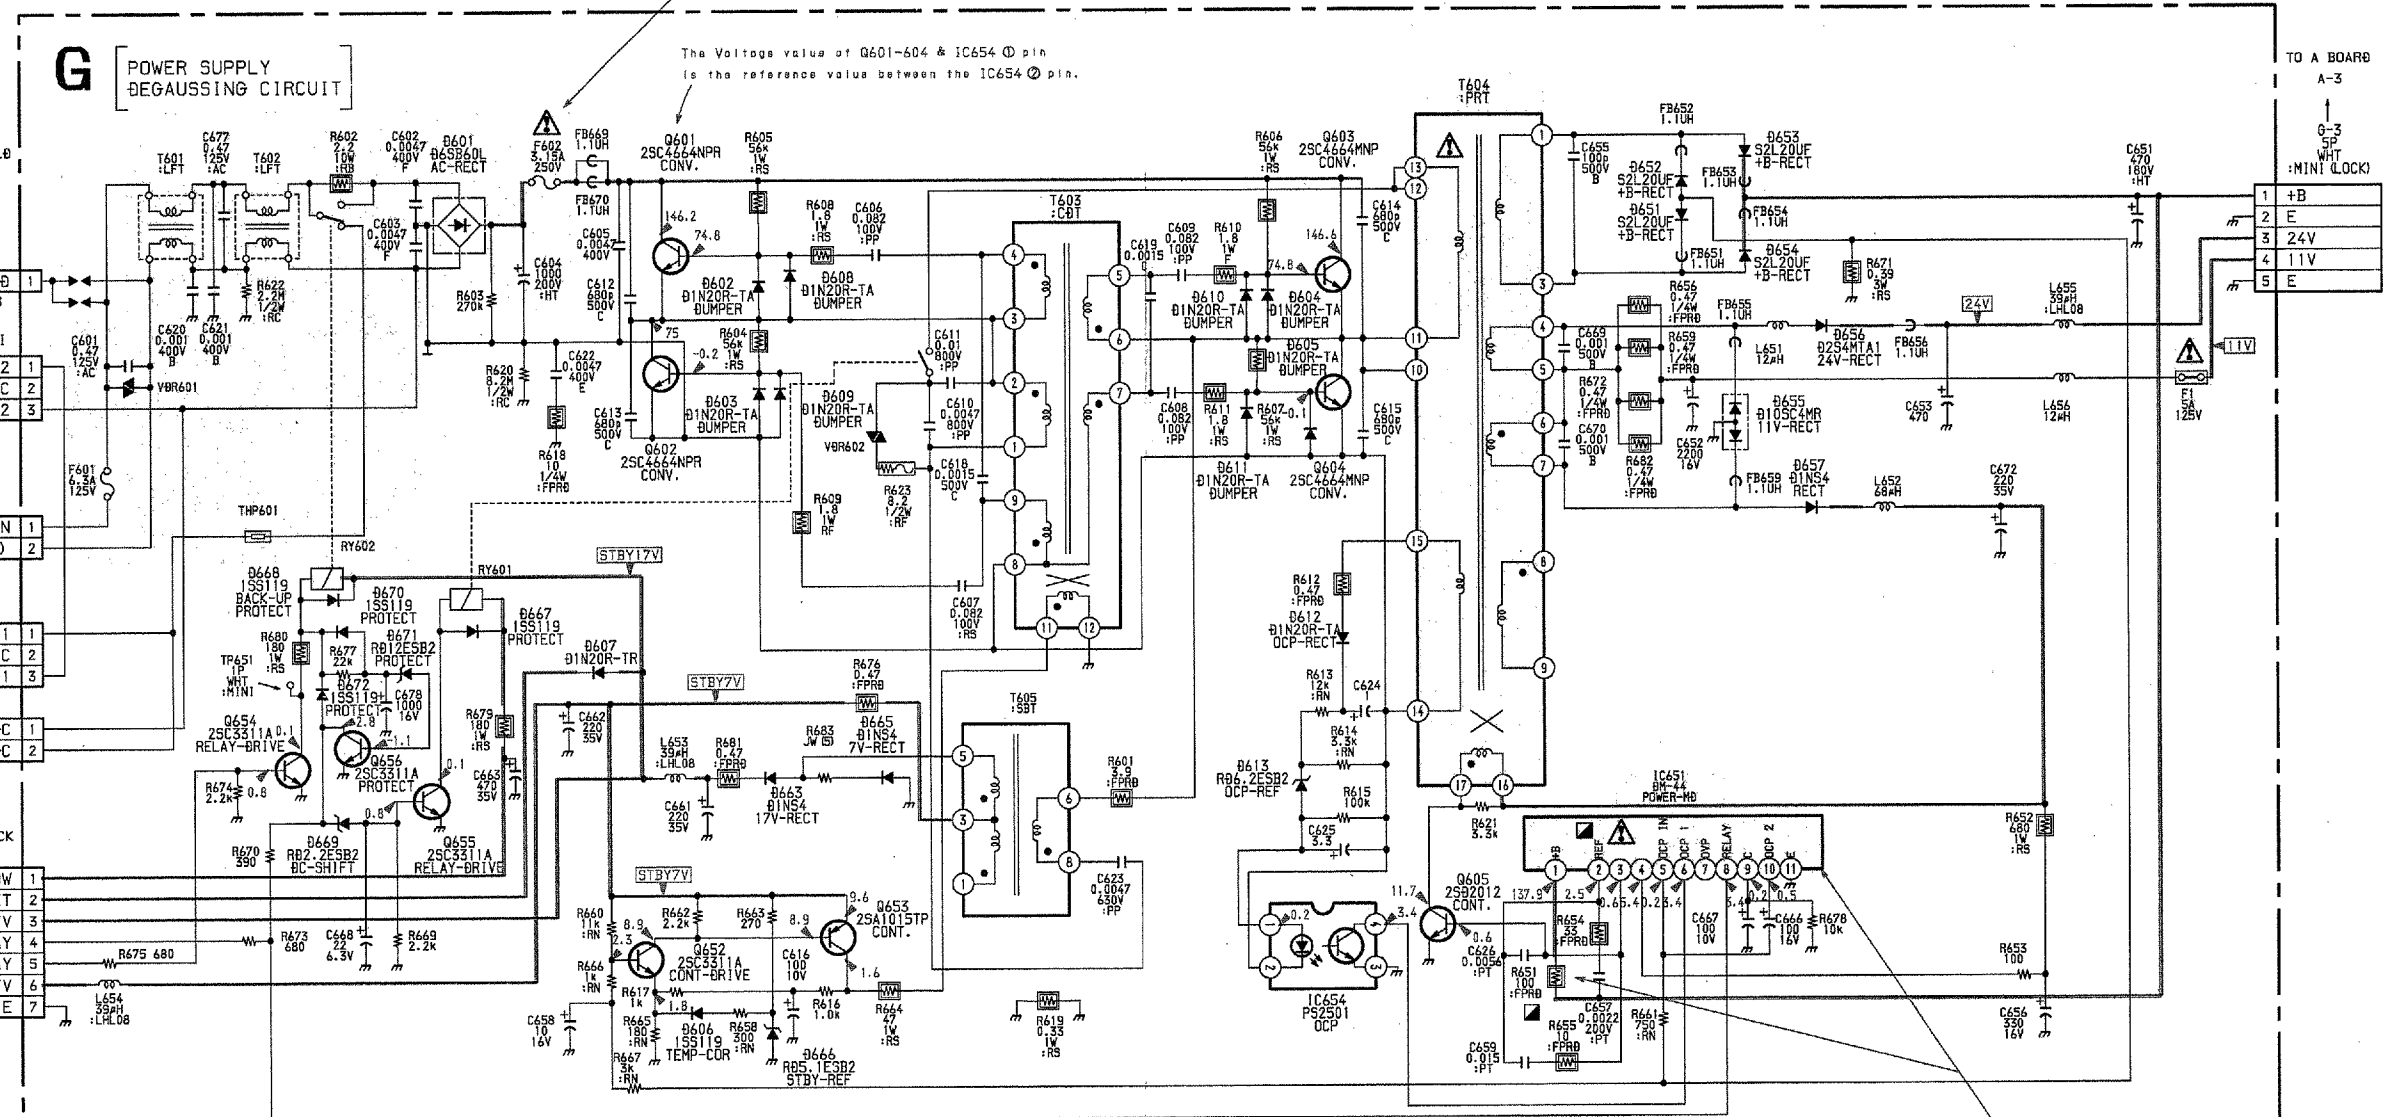

CAUTION
As there are two kinds of ground on this board, be careful when measuring the voltages.

CAUTION
When replacing IC651 and R651, be sure to check the 04 line voltage value. Refer to the Safety Adjustment Section. SEE PAGE 51-53

B-554020-4/C-0-1

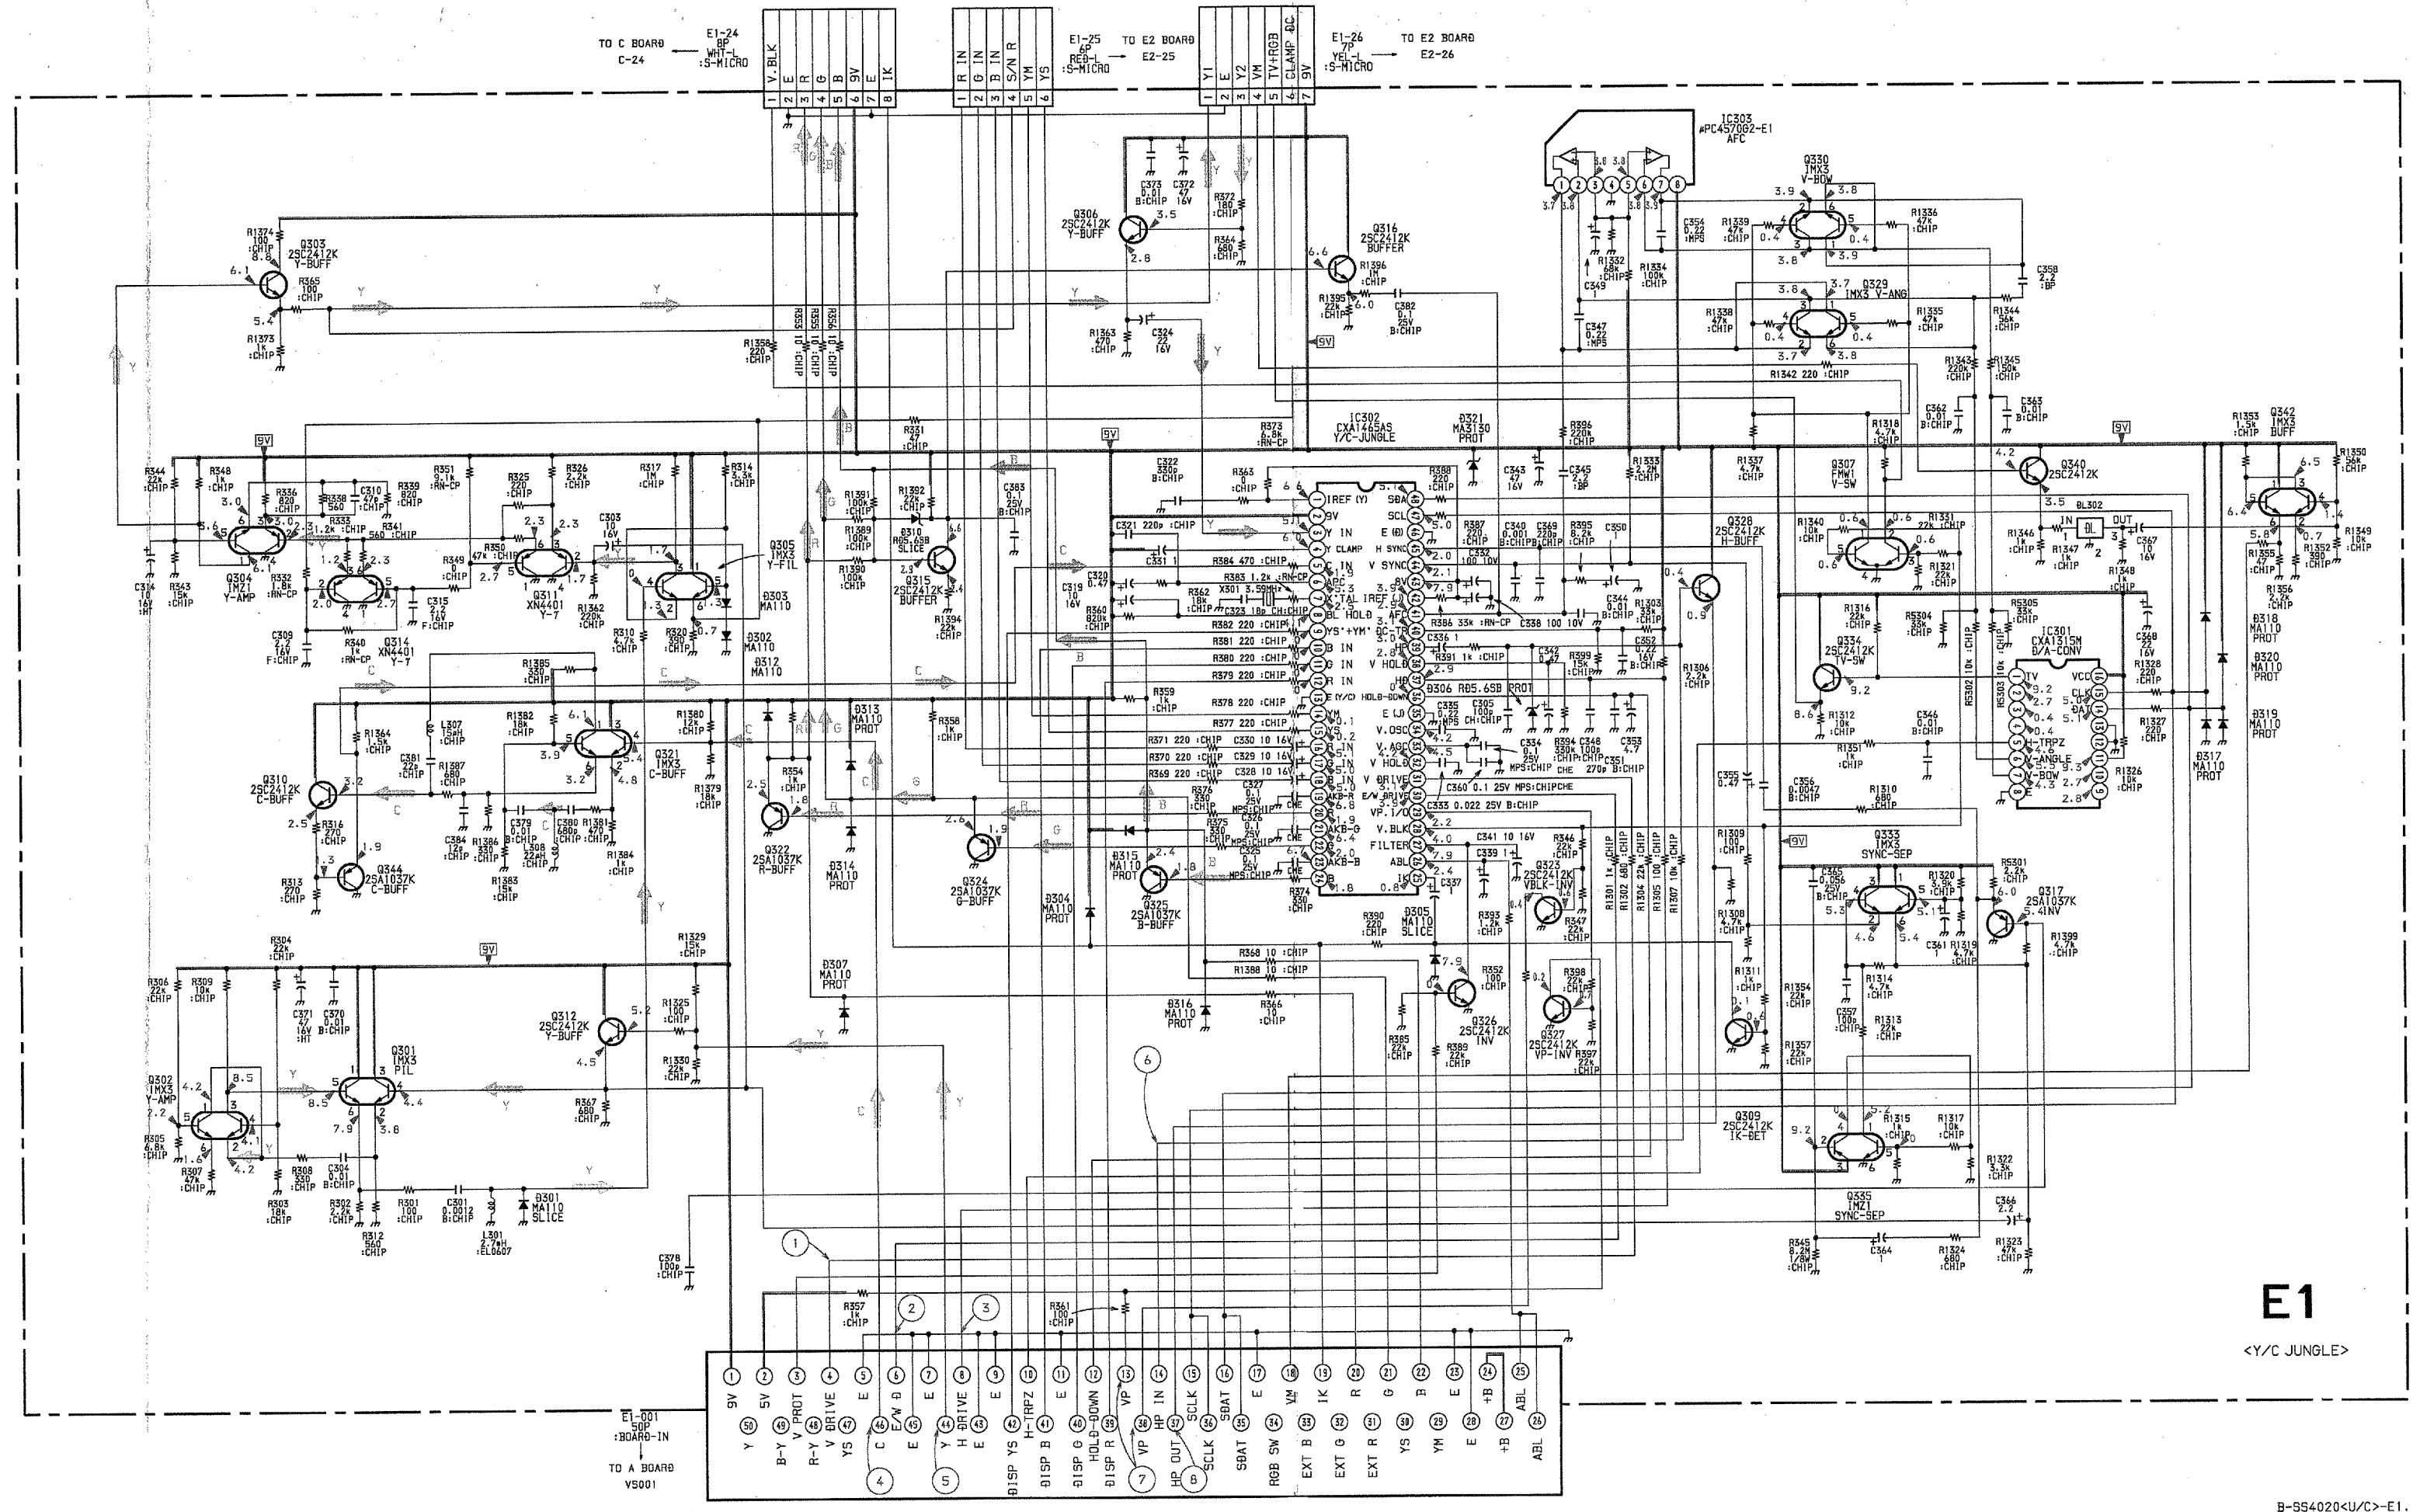



E1



<Y/C JUNGLE>

B-554020-4/C-0-E1

E1 [Y/C JUNGLE]


•  : Pattern from the side which enables seeing.
•  : Pattern of the rear side.

— E1 Board —

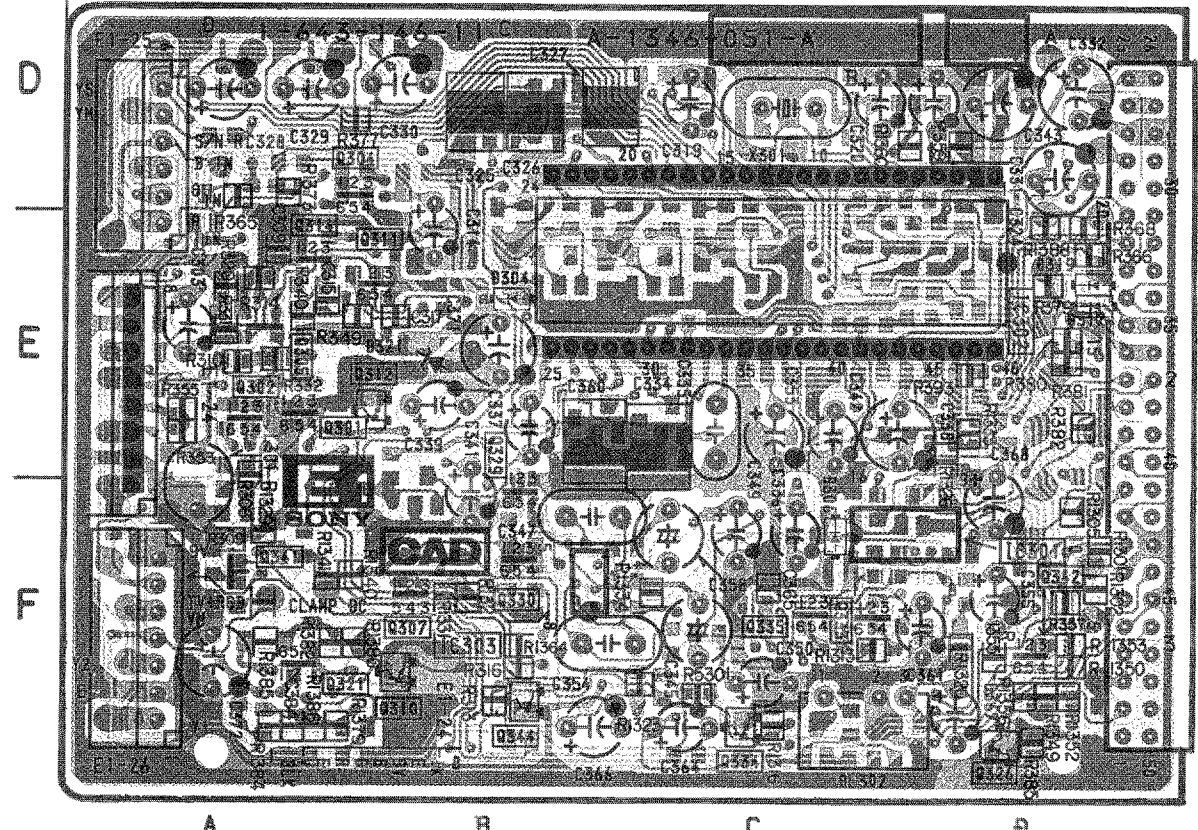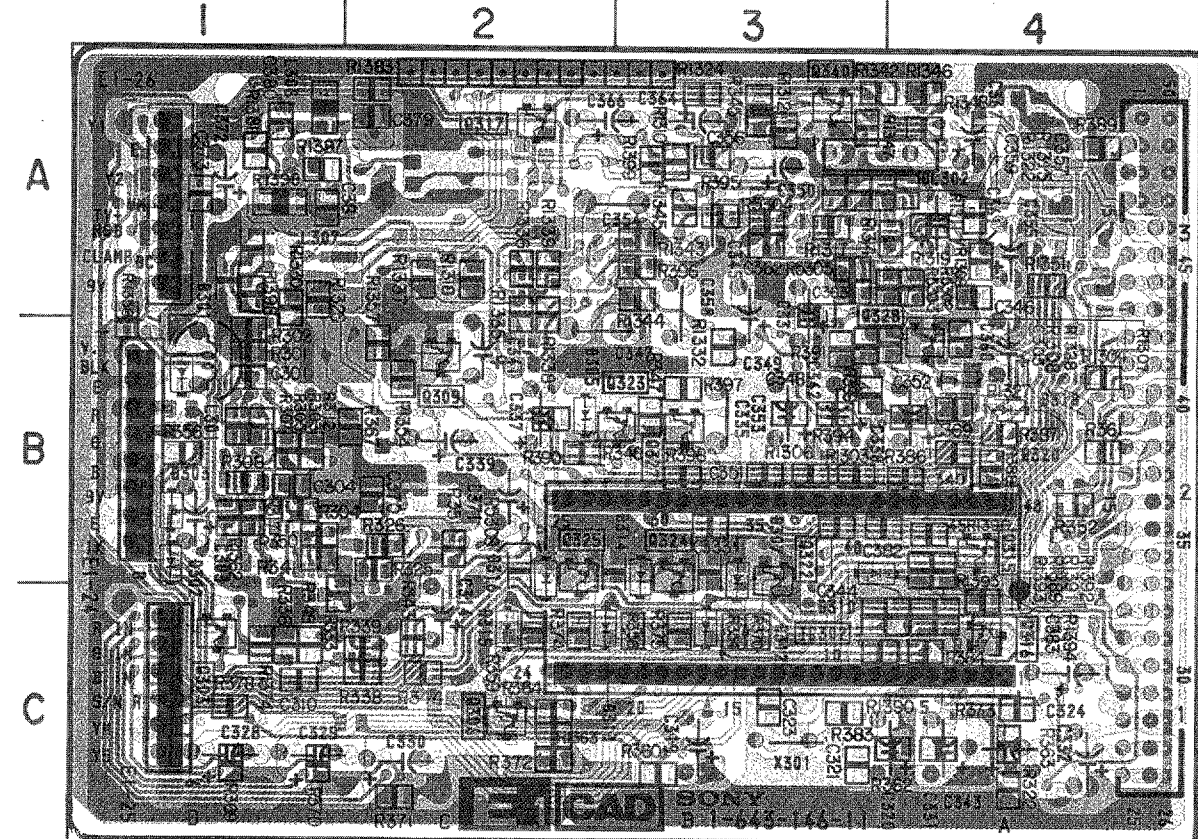

G [POWER SUPPLY, DEGAUSSING CIRCUIT]

— G Board —

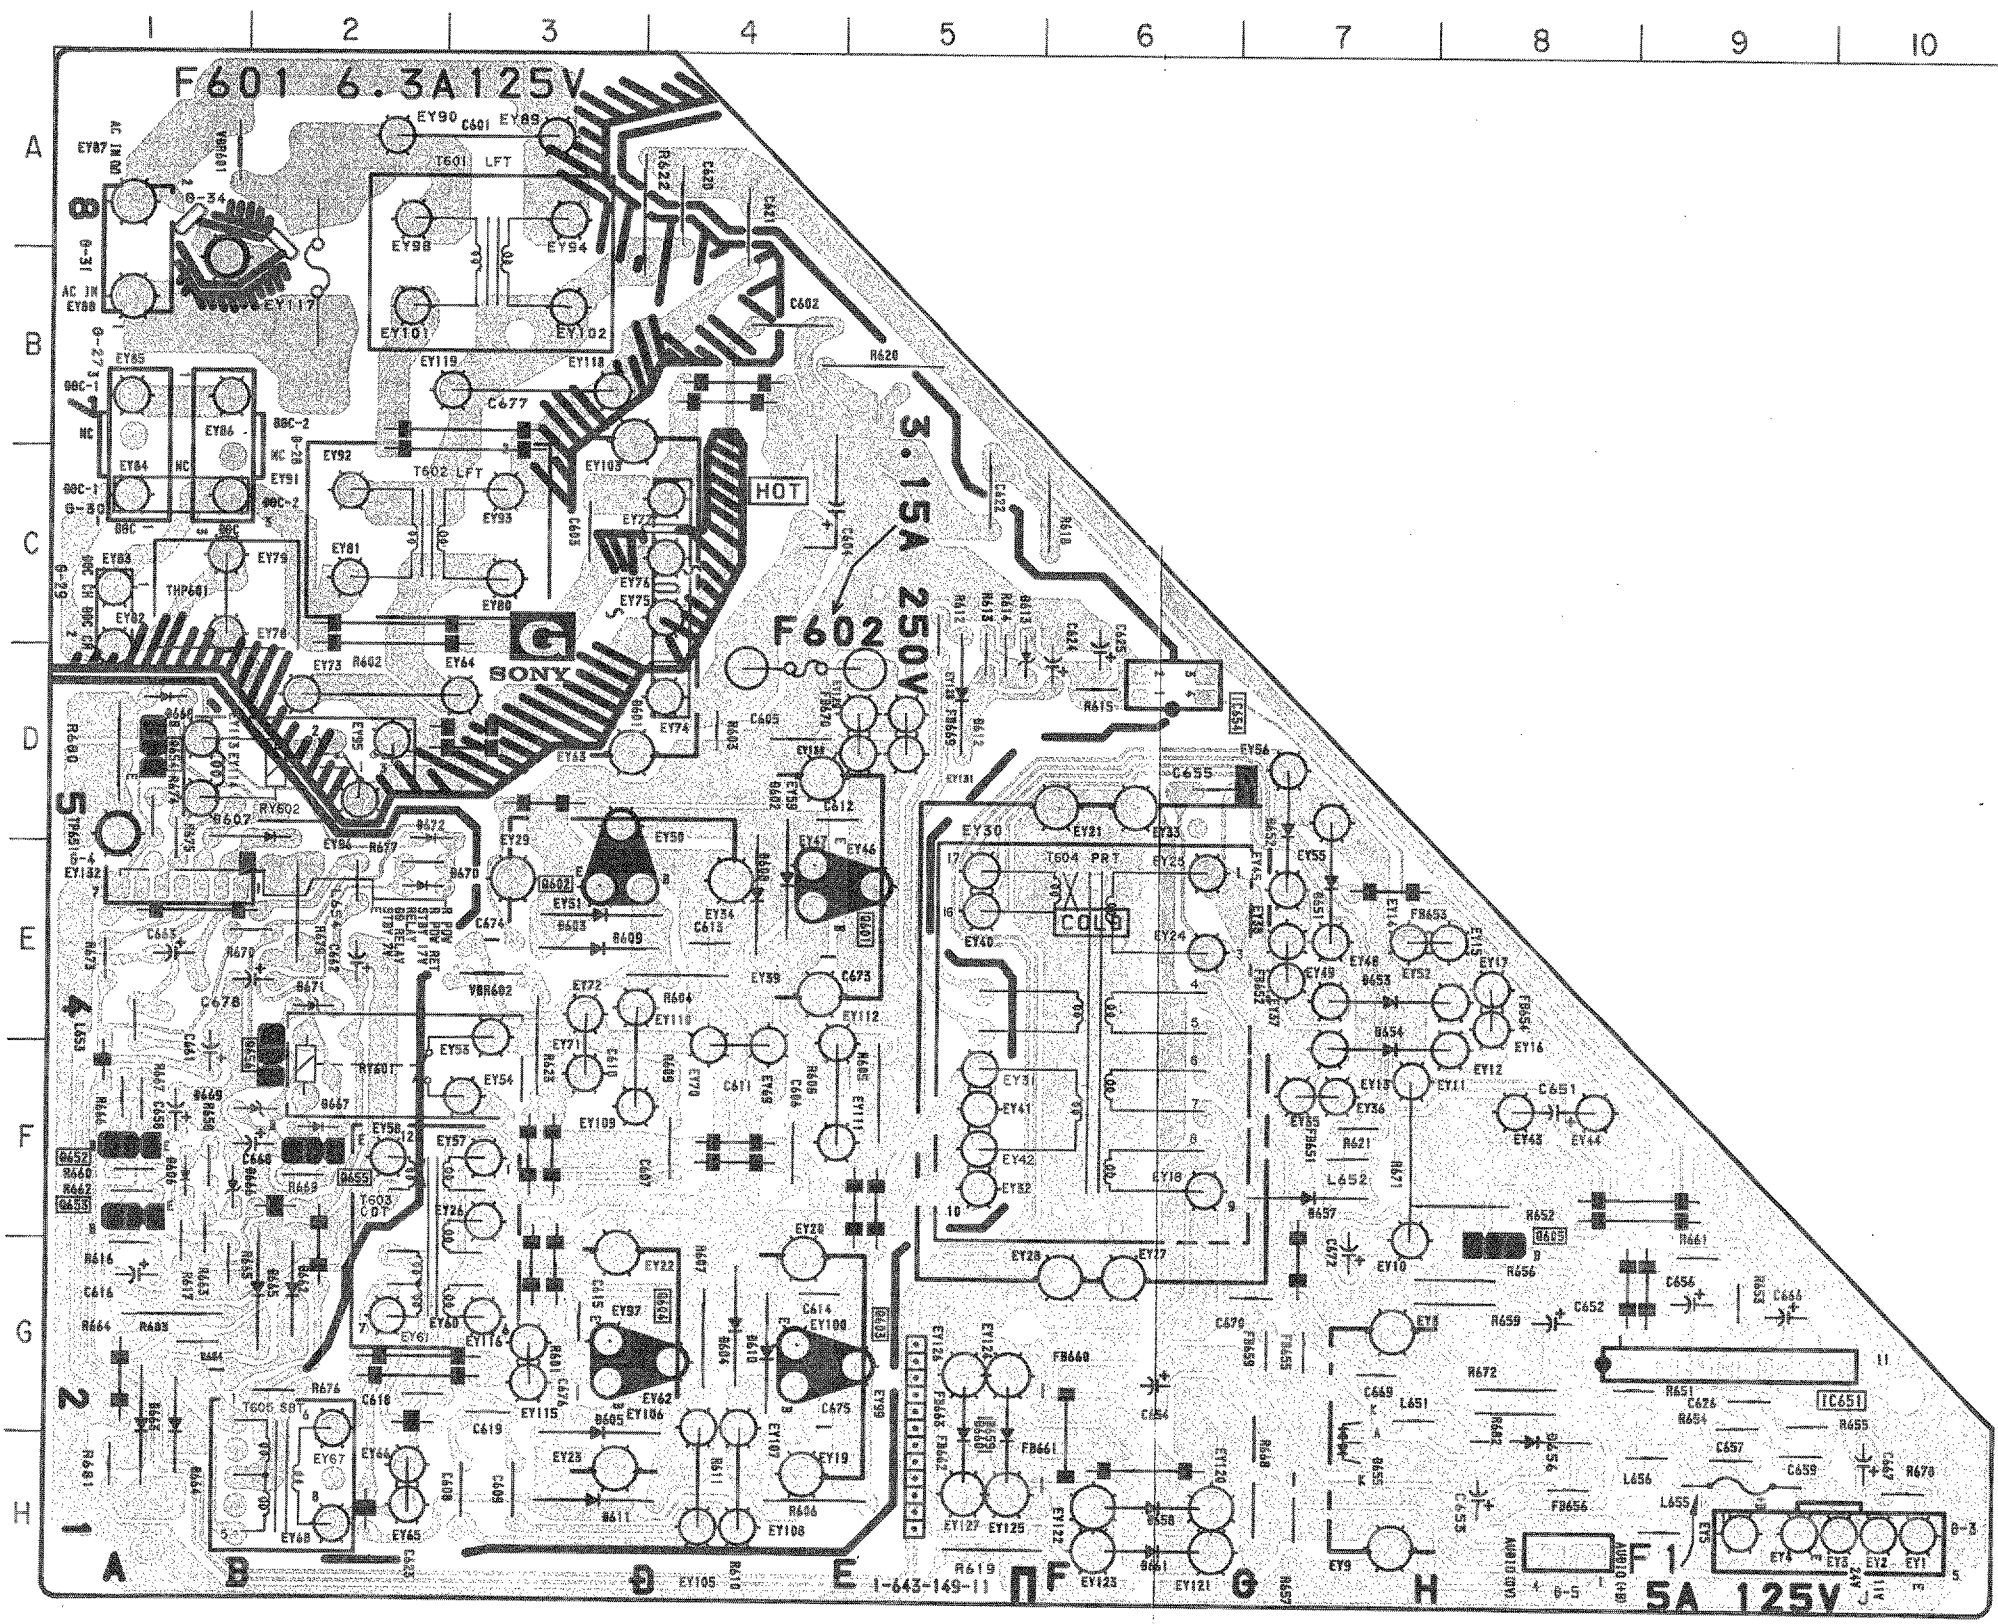

— E1 Board —


IC		D319	E-4
IC301	F-4	320	B-4
302	B-3	321	E-2
303	F-2		
TRANSISTOR			
Q301	E-2		
302	E-1		
303	C-1		
304	D-2		
305	E-1		
306	C-2		
307	F-2		
309	B-2		
310	F-2		
311	E-2		
312	E-2		
314	E-1		
315	B-4		
316	C-4		
317	A-2		
321	F-1		
322	B-3		
323	B-3		
324	B-3		
325	B-2		
326	F-4		
327	B-3		
328	B-4		
329	F-2		
330	F-2		
333	F-4		
334	F-3		
335	F-3		
340	A-3		
342	F-4		
344	F-2		
DIODE			
D301	B-1		
302	B-1		
303	B-1		
304	E-2		
305	B-2		
306	F-3		
307	B-3		
310	B-3		
312	C-3		
313	C-2		
314	B-3		
315	C-2		
316	B-2		
317	E-4		
318	B-4		

— G Board —

IC		TEST POINT
IC651	G-9	TP651
654	D-6	D-1
TRANSISTOR		
Q601	E-4	
602	E-3	
603	G-4	
604	G-3	
605	F-8	
652	F-1	
653	F-1	
654	D-1	
655	F-2	
656	F-2	
DIODE		
D601	C-4	
602	E-4	
603	E-3	
604	G-4	
605	G-3	
606	F-1	
607	D-2	
608	E-4	
609	E-3	
610	G-4	
611	H-3	
612	D-5	
613	D-5	
651	E-7	
652	D-7	
653	E-7	
654	E-7	
655	G-7	
656	G-8	
657	F-7	
663	G-1	
665	G-2	
666	F-1	
667	F-2	
668	D-1	
669	F-2	
670	E-2	
671	E-2	
672	D-2	

HX1 [USER CONT. SW, RC SENSOR, LED]

C [R.G.B. OUT]
— C Board —

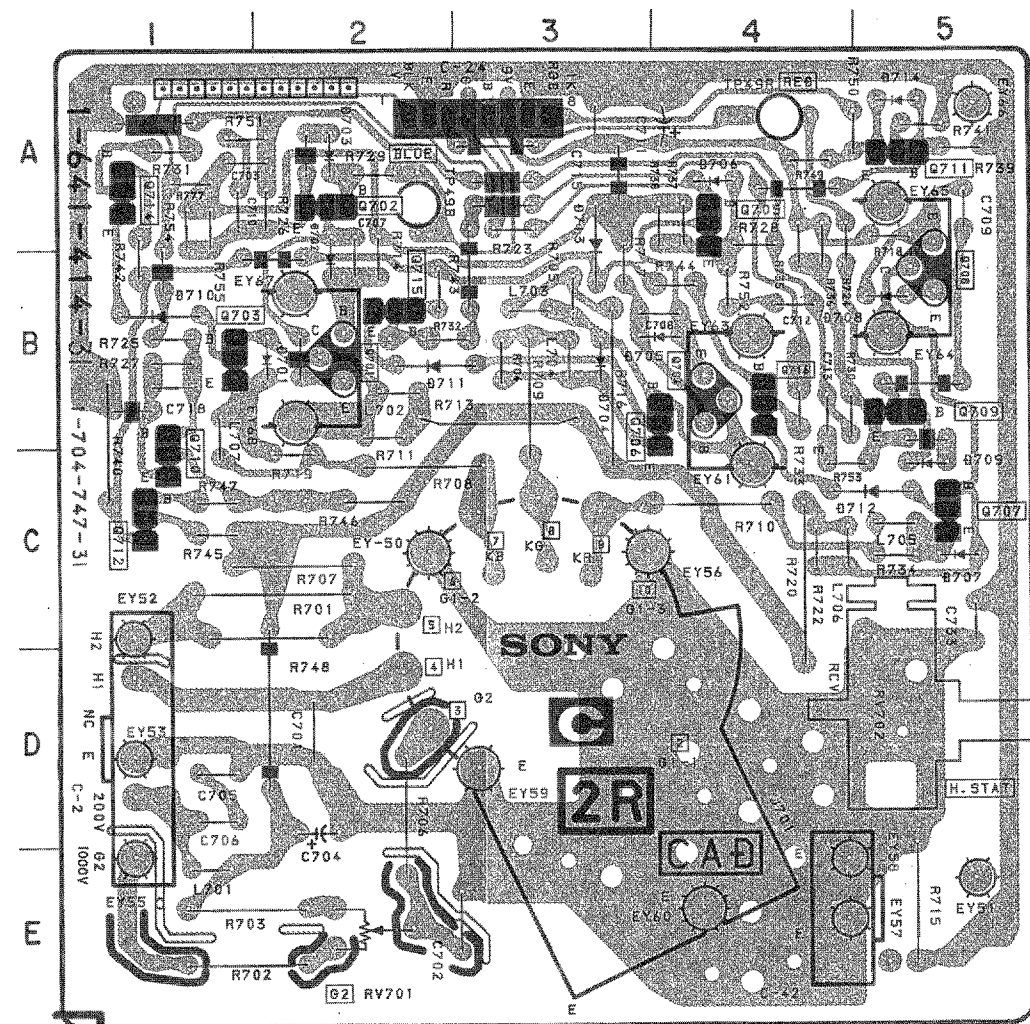


— C Board —

TRANSISTOR		RESISTOR	
Q701	B-2	RV701	E-2
702	A-2	702	C-5
703	B-1	TEST POINT	
704	B-4		
705	A-4	TP49B	A-2
706	B-4	49R	A-4
707	C-5		
708	B-5		
709	B-5		
710	C-1		
711	A-5		
712	C-1		
714	A-1		
715	B-3		
716	B-4		
DIODE			
D701	B-2		
702	B-2		
703	A-2		
704	B-3		
705	B-4		
706	A-4		
707	C-5		
708	B-5		
709	B-5		
710	B-1		
711	B-3		
712	C-5		
713	B-3		
714	A-5		

E2 [SHARPNESS CONT., CHARACTER GENERATOR]

• : Pattern from the side which enables seeing.
• : Pattern of the rear side.


— E2 Board —

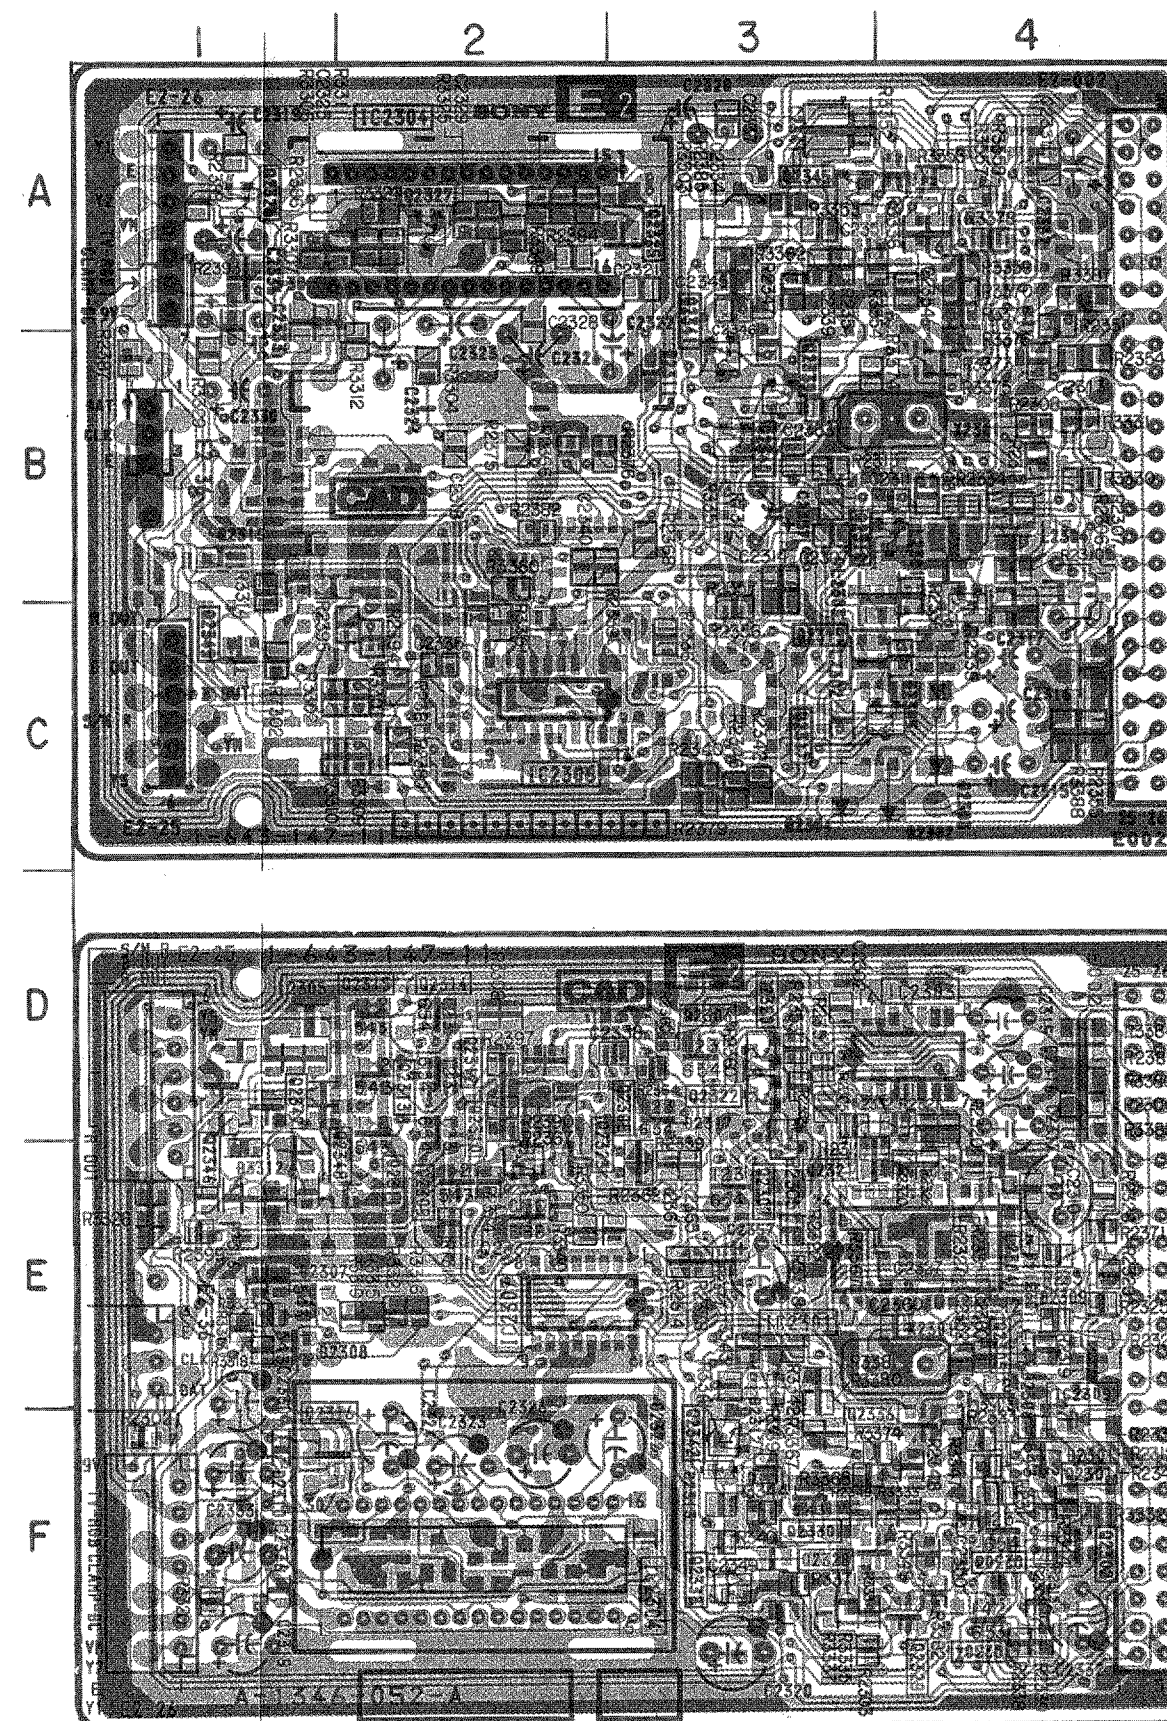


— E2 Board —

IC	
IC2301	E-4
2303	D-4
2304	A-2
2306	C-2
2307	E-2
TRANSISTOR	
Q2301	F-4
2303	F-4
2304	F-4
2305	E-4
2306	D-3
2307	E-3
2308	D-3
2309	E-2
2310	D-2
2311	D-2
2312	D-2
2313	D-2
2314	D-2
2315	D-2
2317	C-4
2318	B-4
2319	C-4
2320	D-3
2321	D-3
2322	D-3
2324	E-2
2326	A-1
2327	A-2
2330	F-3
2337	E-2
2338	F-3
2339	B-3
2340	B-3
2341	B-3
2342	F-3
2345	A-3
DIODE	
D2301	F-4
2302	C-4
2303	C-4
2304	C-3
2305	C-4
2306	F-4
2307	E-1
2308	E-1
2309	E-4
2312	E-3
2313	F-3
2314	E-4
2317	D-3


— HX1 Board —

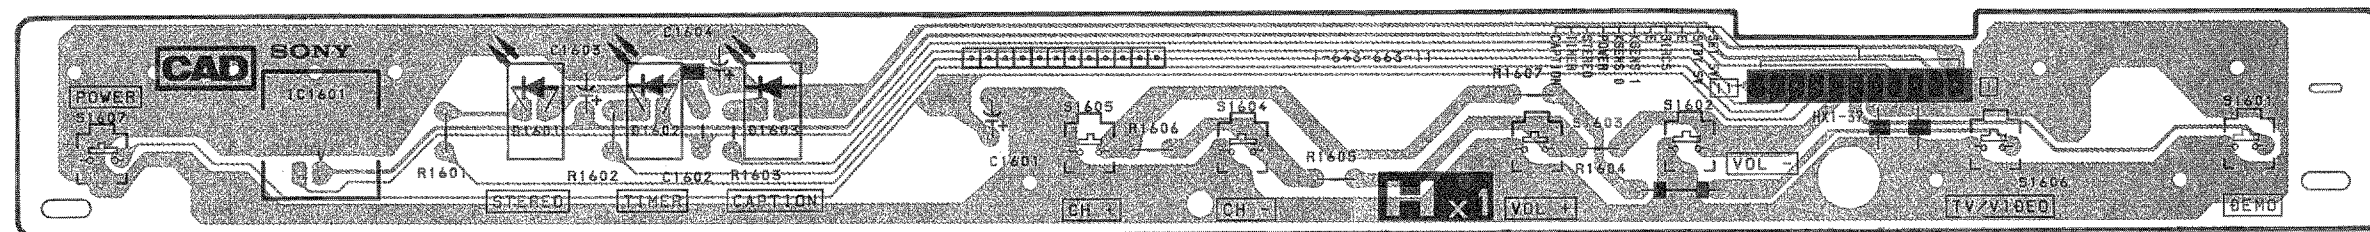


M BOARD IC002 MN1280-S

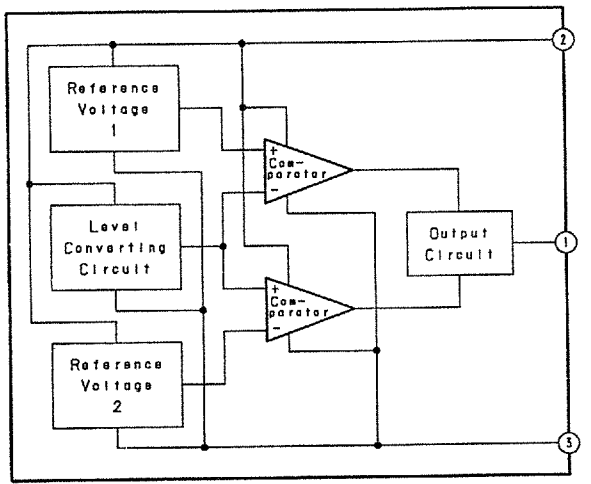




- M Board -

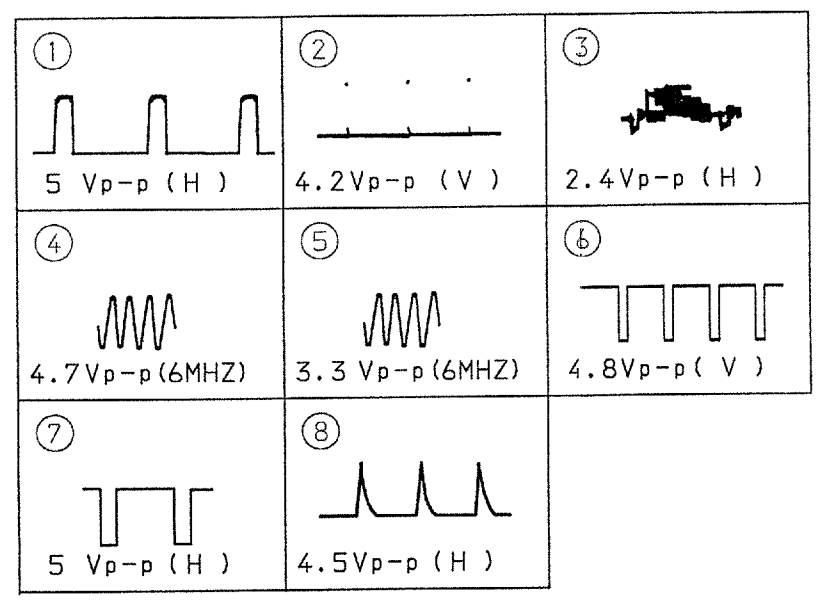

D BOARD IC801 SI-3090CA

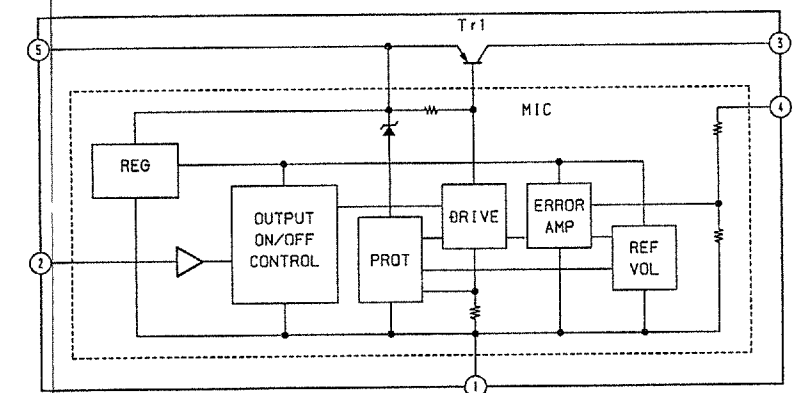





D Board -

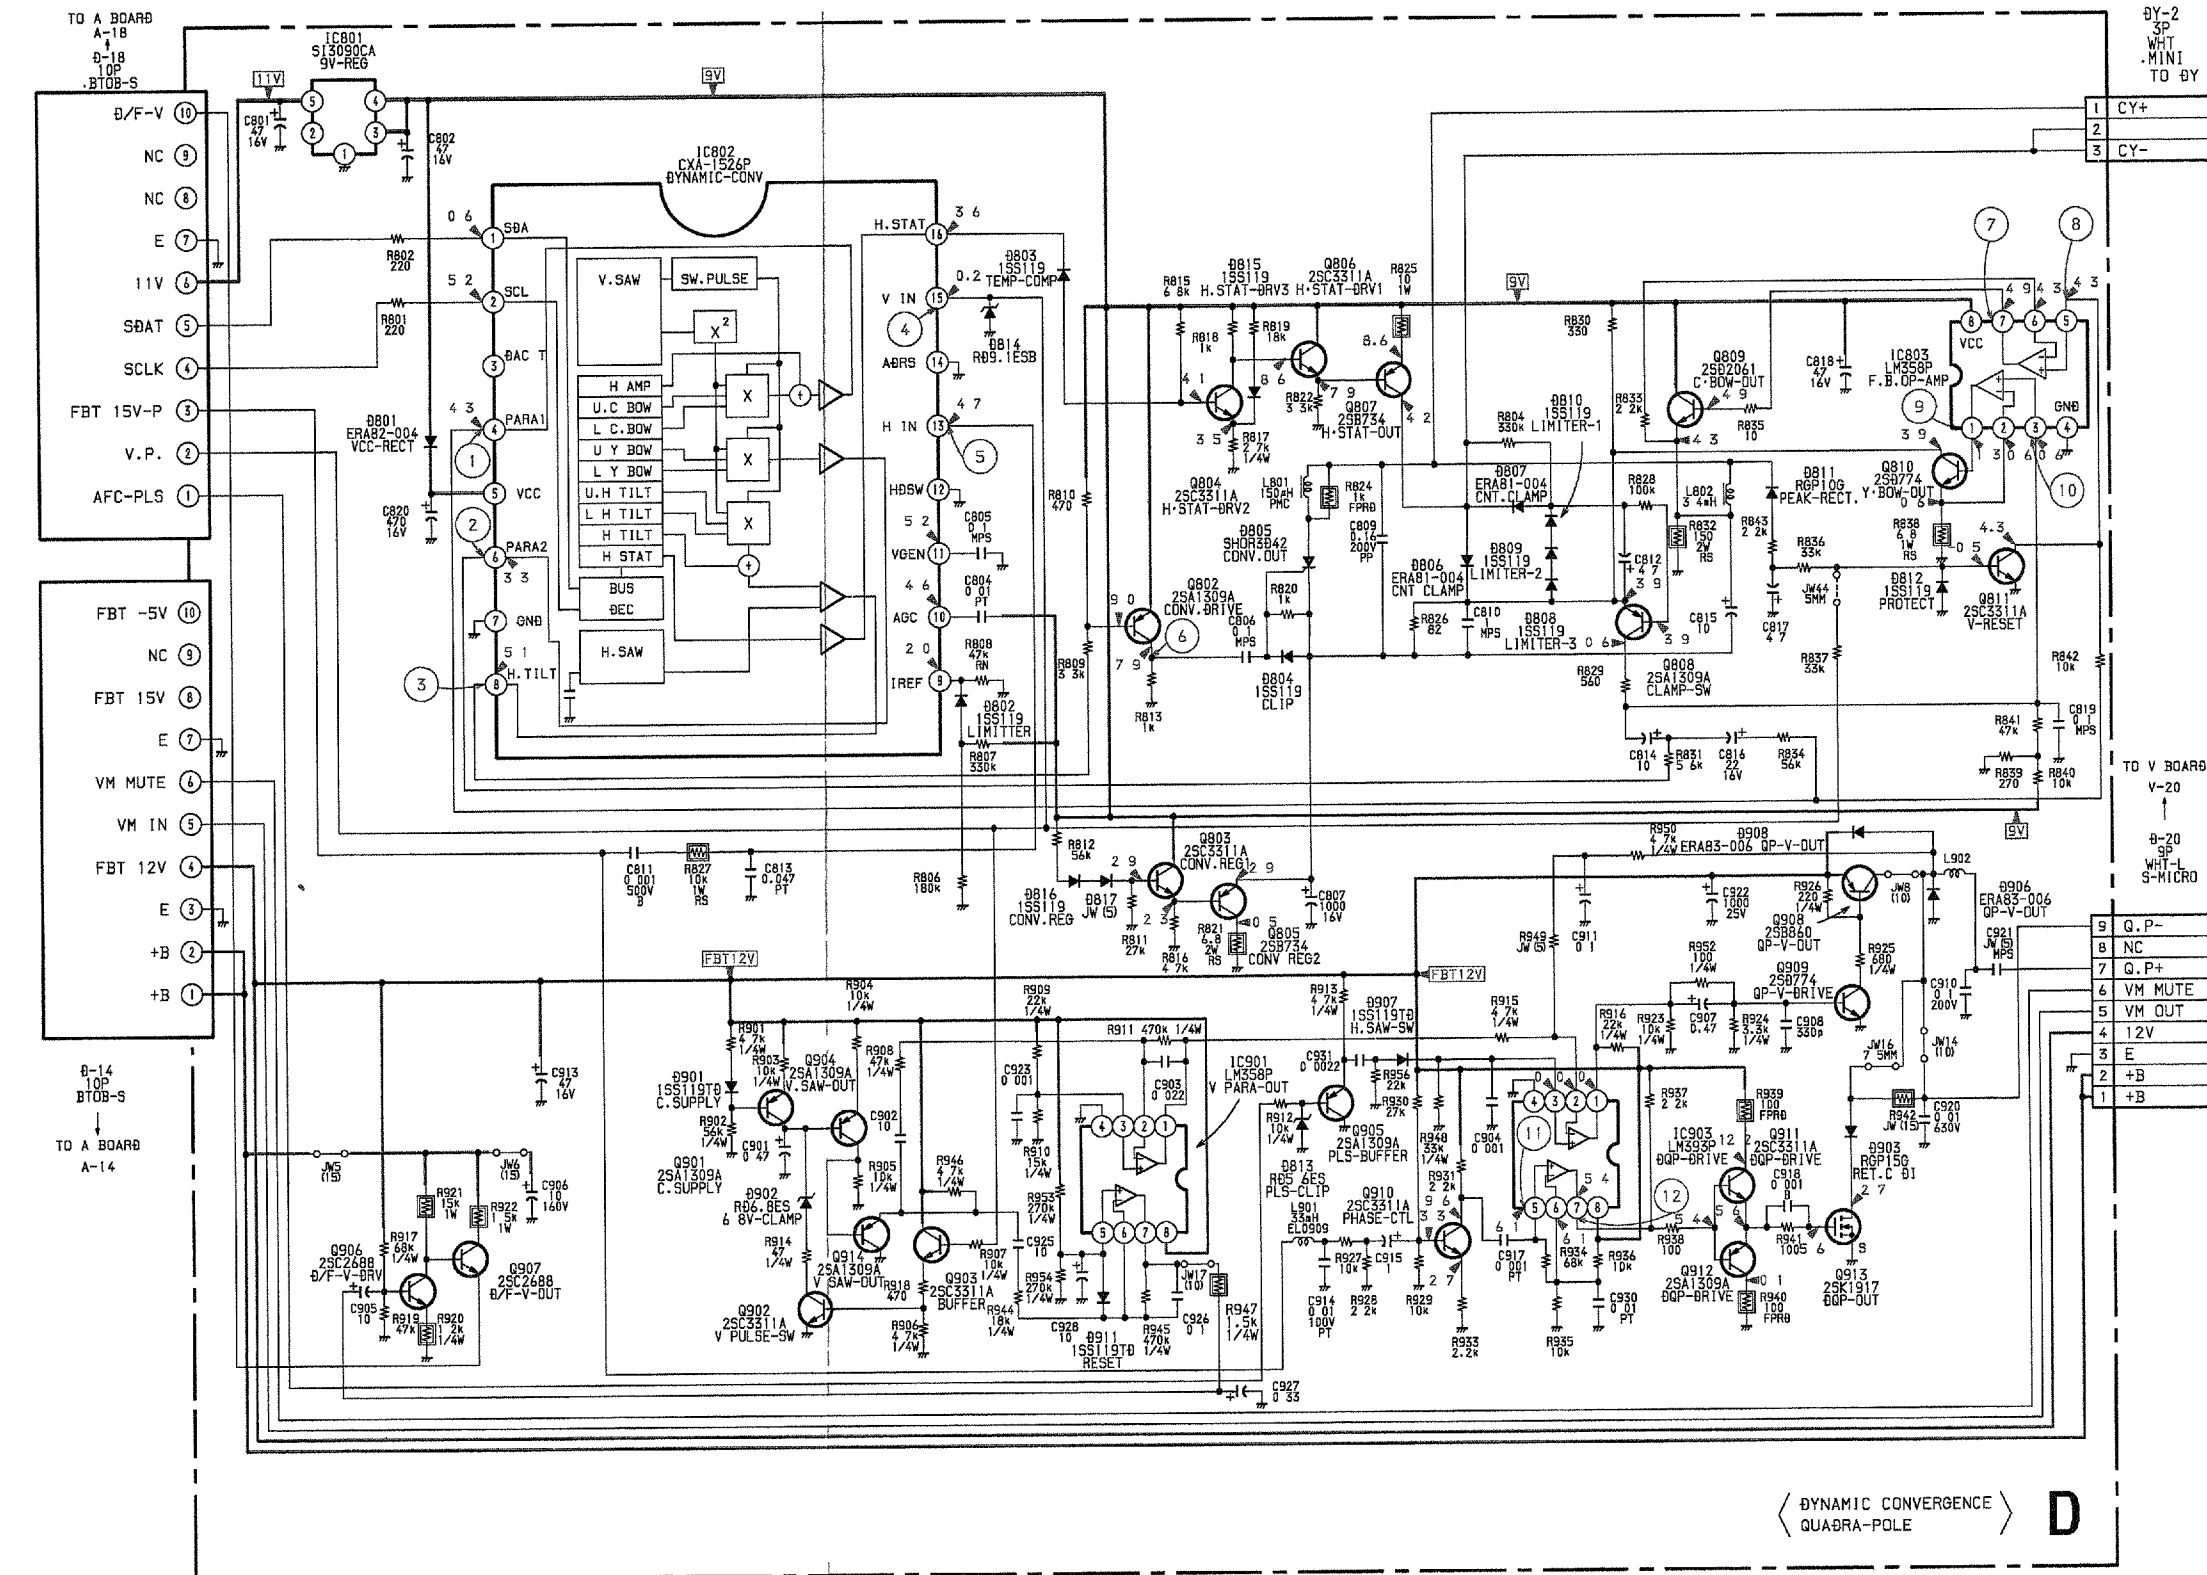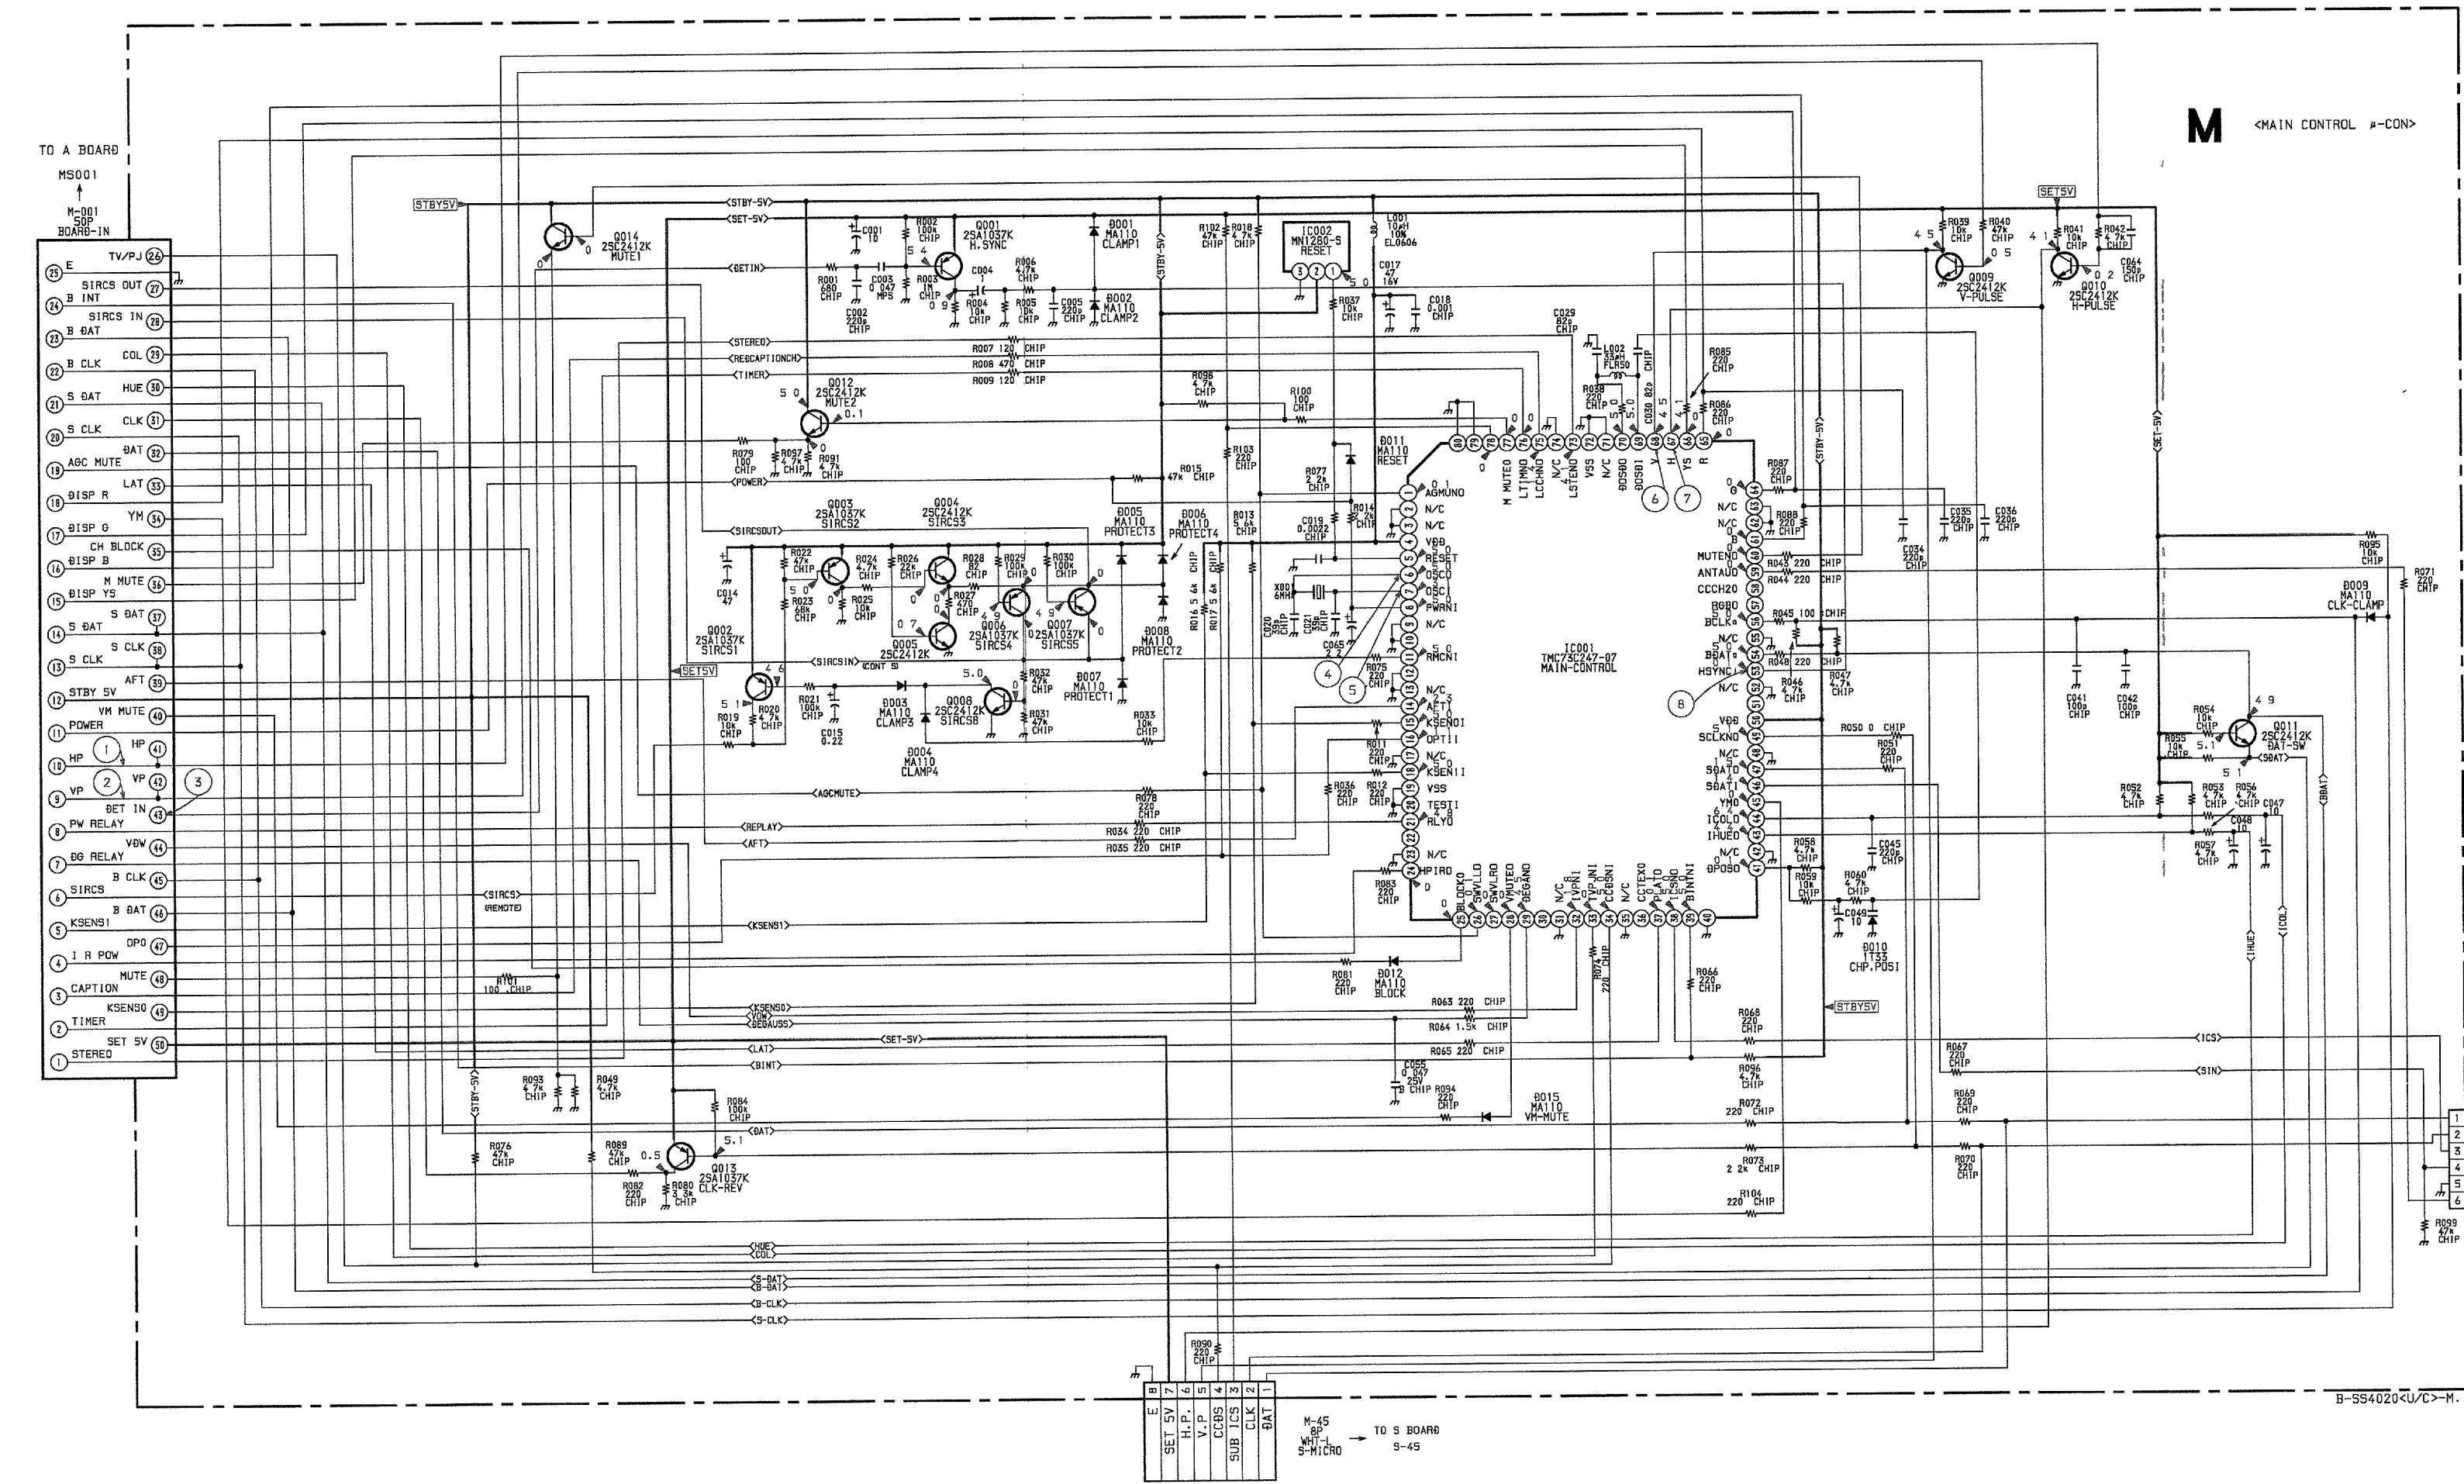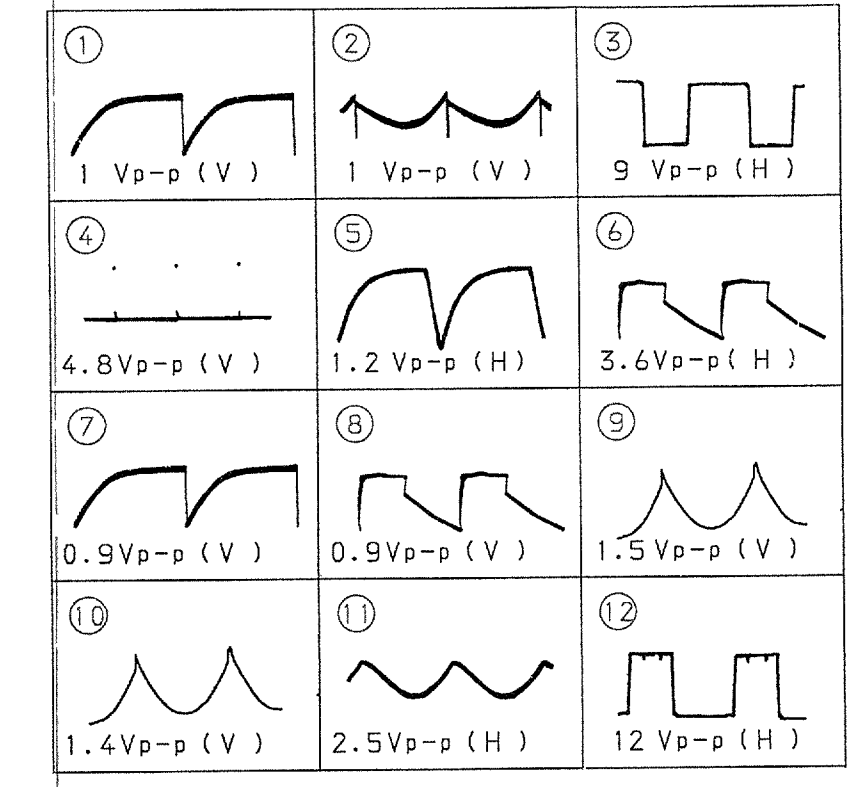

M [MAIN CONTROL μ-CON]

— M Board —


-  : Pattern from the side which enables seeing.
-  : Pattern of the rear side.

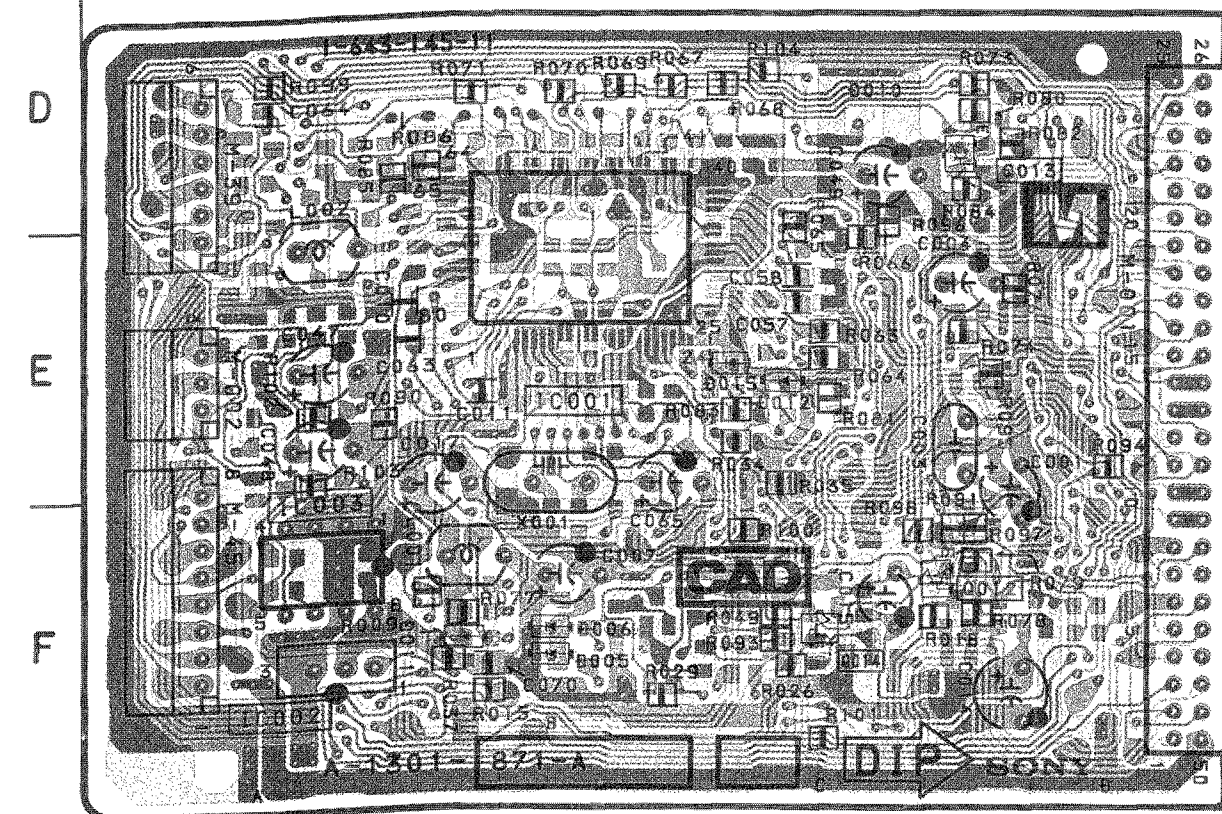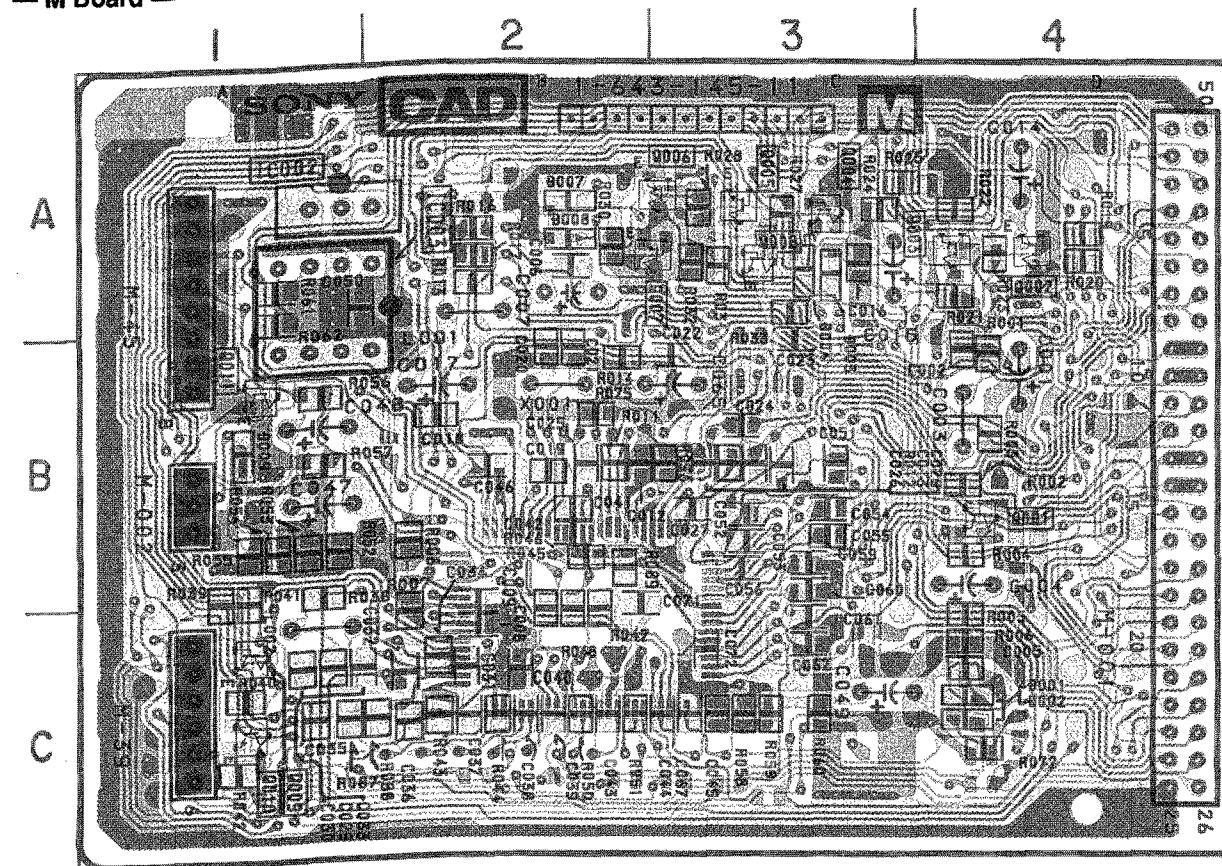

IC	
IC001	E-2
002	A-1
TRANSISTOR	
Q001	B-4
002	A-4
003	A-4
004	A-3
005	A-3
006	A-3
007	A-3
008	A-3
009	C-1
010	C-1
011	B-1
012	F-4
013	D-4
014	F-3
DIODE	
D001	C-4
002	C-4
003	A-3
004	A-3
005	F-2
006	F-2
007	A-2
008	A-2
009	B-1
010	D-3
011	F-2
012	E-3
015	E-3

D [DYNAMIC CONVERGENCE, QUADRA-POLE]


— D Board —

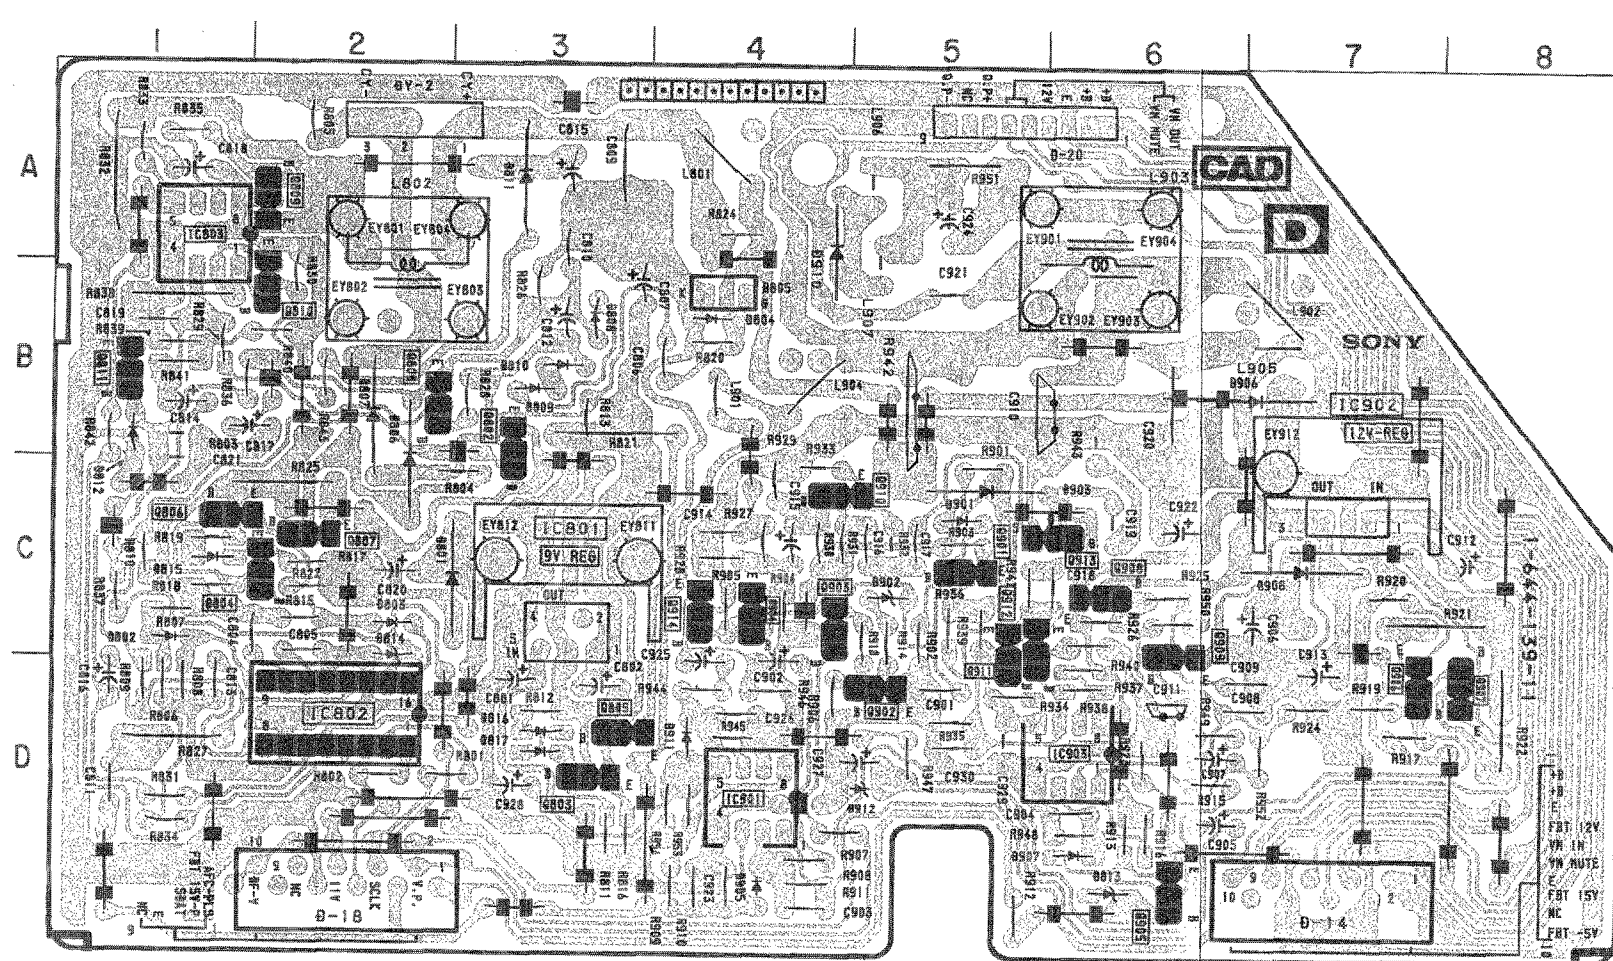

IC		D907	D-6
IC801	C-3	908	C-7
802	D-2	911	D-4
803	A-1		
901	D-4		
903	D-6		
TRANSISTOR			
Q802	B-3		
803	D-3		
804	C-2		
805	D-3		
806	C-1		
807	C-2		
808	B-2		
810	B-2		
811	B-1		
901	C-5		
902	D-5		
903	C-4		
904	C-4		
905	D-6		
906	D-7		
907	D-8		
908	C-6		
909	C-6		
910	C-4		
911	C-5		
912	C-5		
913	C-6		
914	C-4		
DIODE			
D801	C-3		
802	C-1		
803	C-2		
804	B-4		
805	B-4		
806	B-2		
807	B-2		
808	B-3		
809	B-3		
810	B-3		
811	A-3		
812	B-1		
813	D-6		
814	C-2		
815	C-1		
816	D-3		
901	C-5		
902	C-5		
903	C-5		
906	B-7		



V [VELOCITY MODULATION]

— V Board —

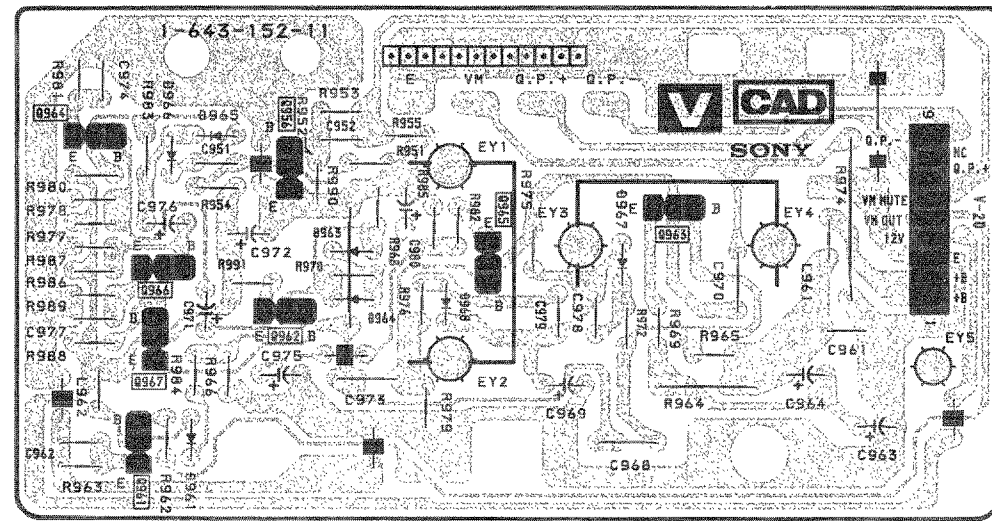



S [SUB-CONTROL μ-CON, CLOSED CAPTION DECODER]

— S Board —

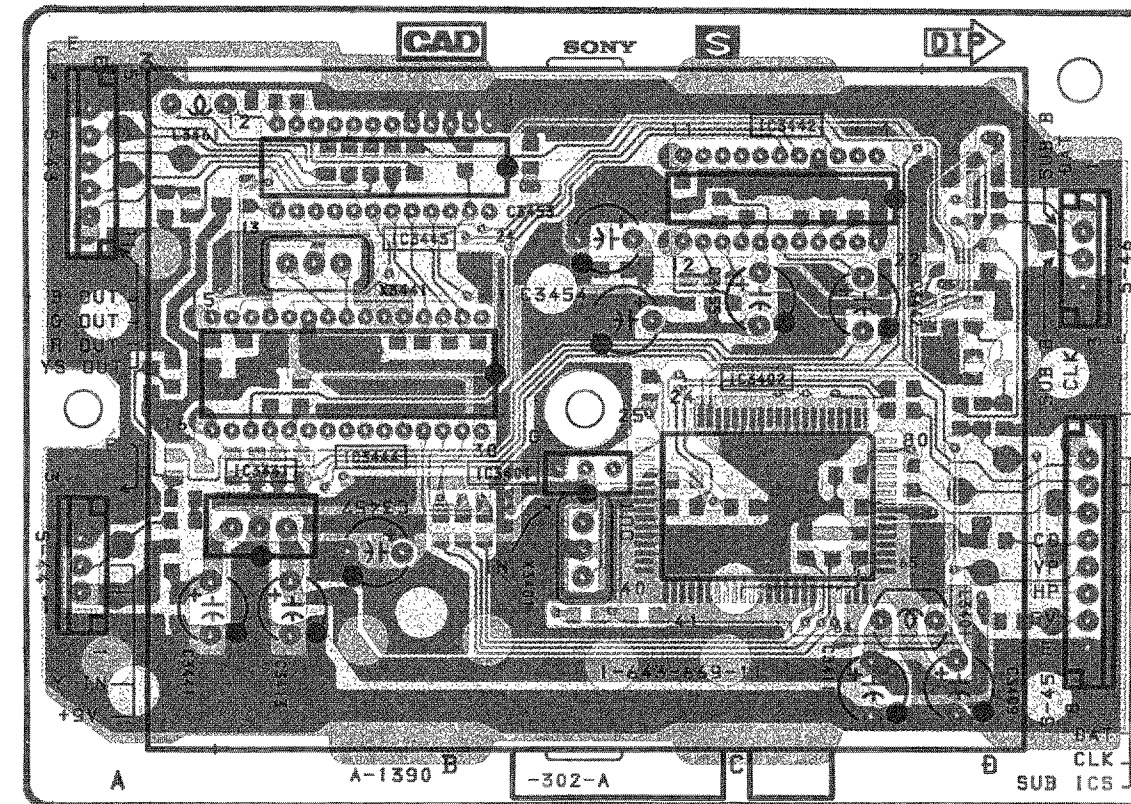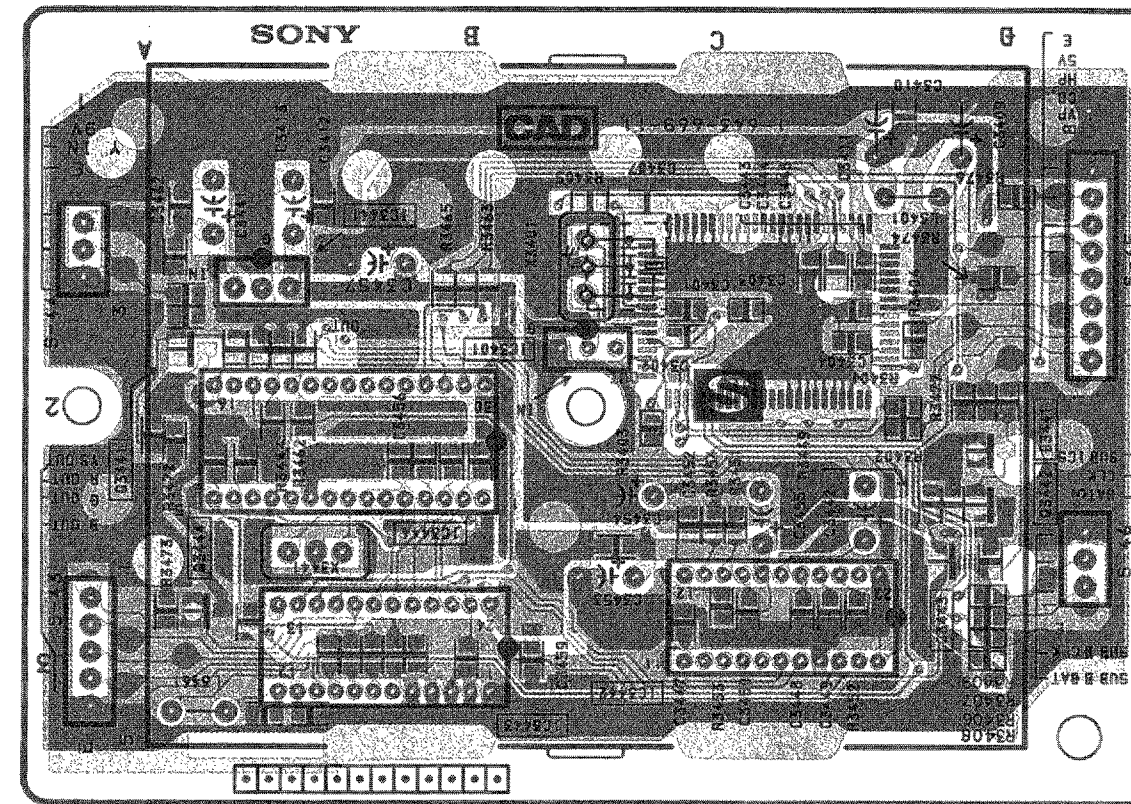

P4 [DIGITAL COMB FILTER]

— P4 Board —

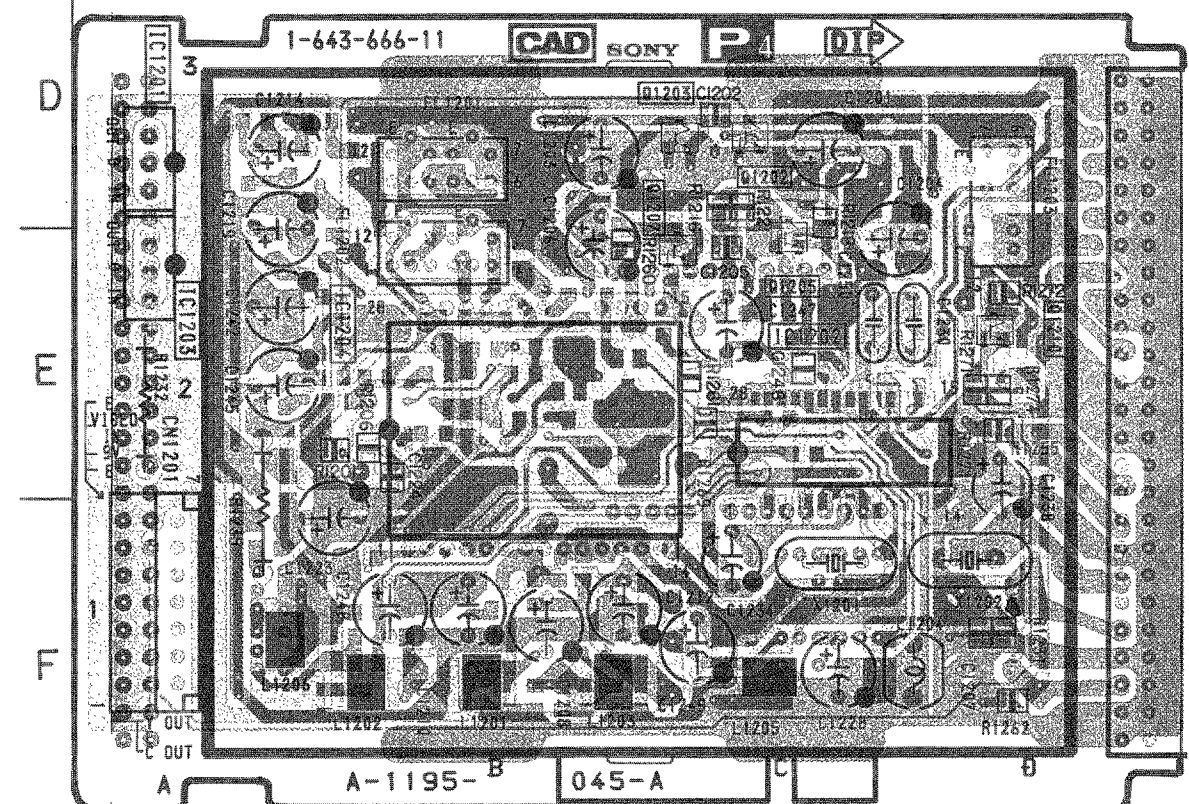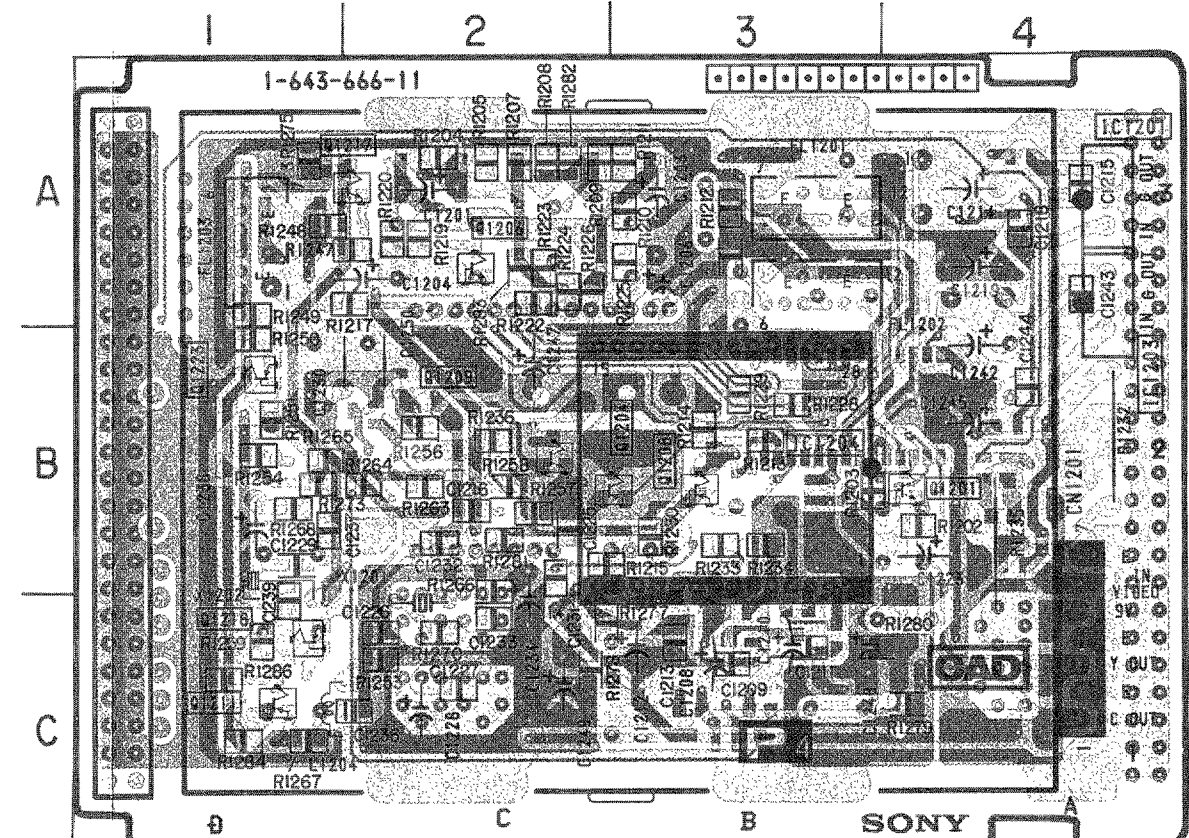


• [Pattern from the side which enables seeing.]
• [Pattern of the rear side.]

— P4 Board —




IC	
IC1201	A-4
1202	E-3
1203	A-4
1204	B-3
TRANSISTOR	
Q1201	B-4
1202	D-3
1203	D-3
1204	B-3
1205	E-3
1206	A-2
1207	E-3
1208	B-8
1209	B-2
1210	E-4
1211	C-1
1217	A-2
1218	C-1
1223	B-1

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P



- P4 Board -

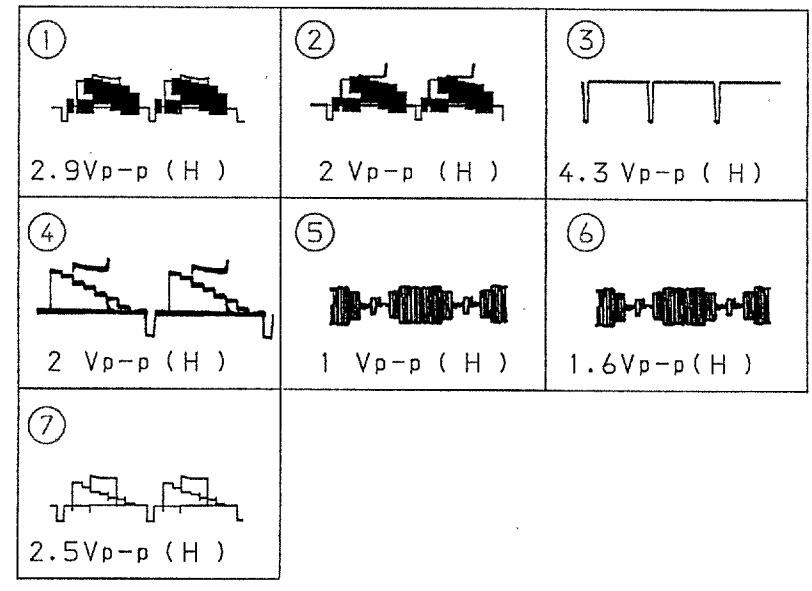



- V Board -

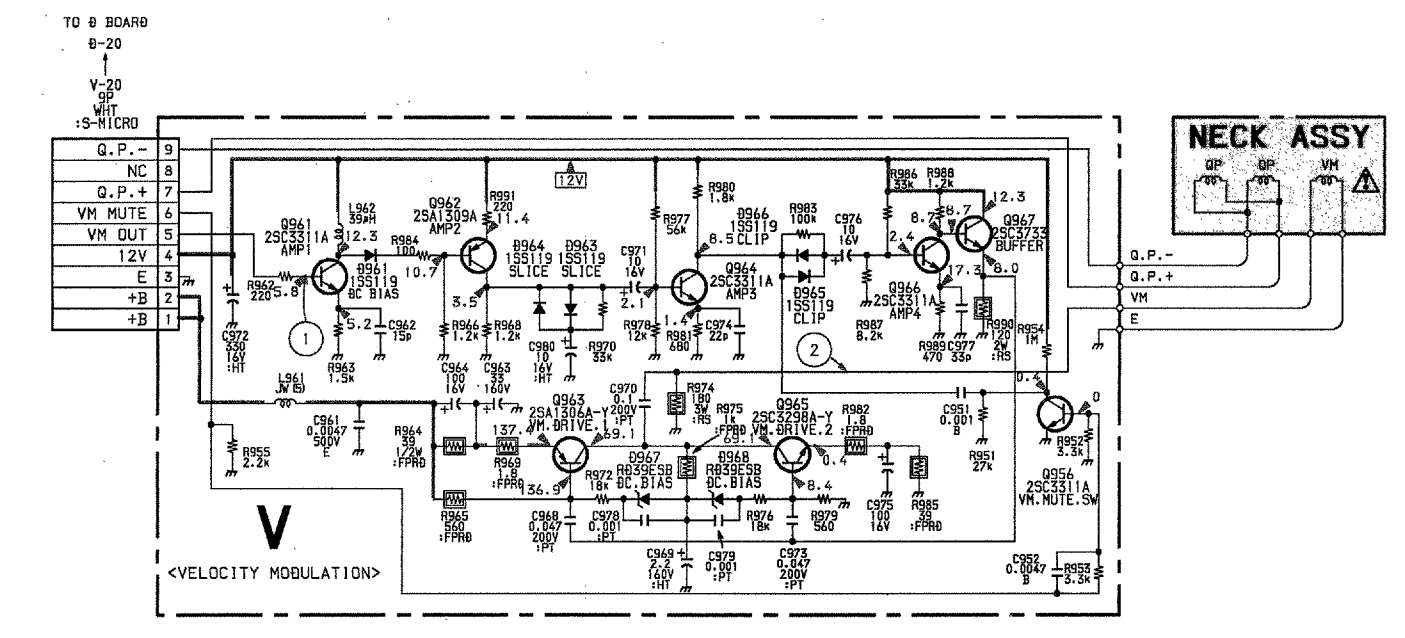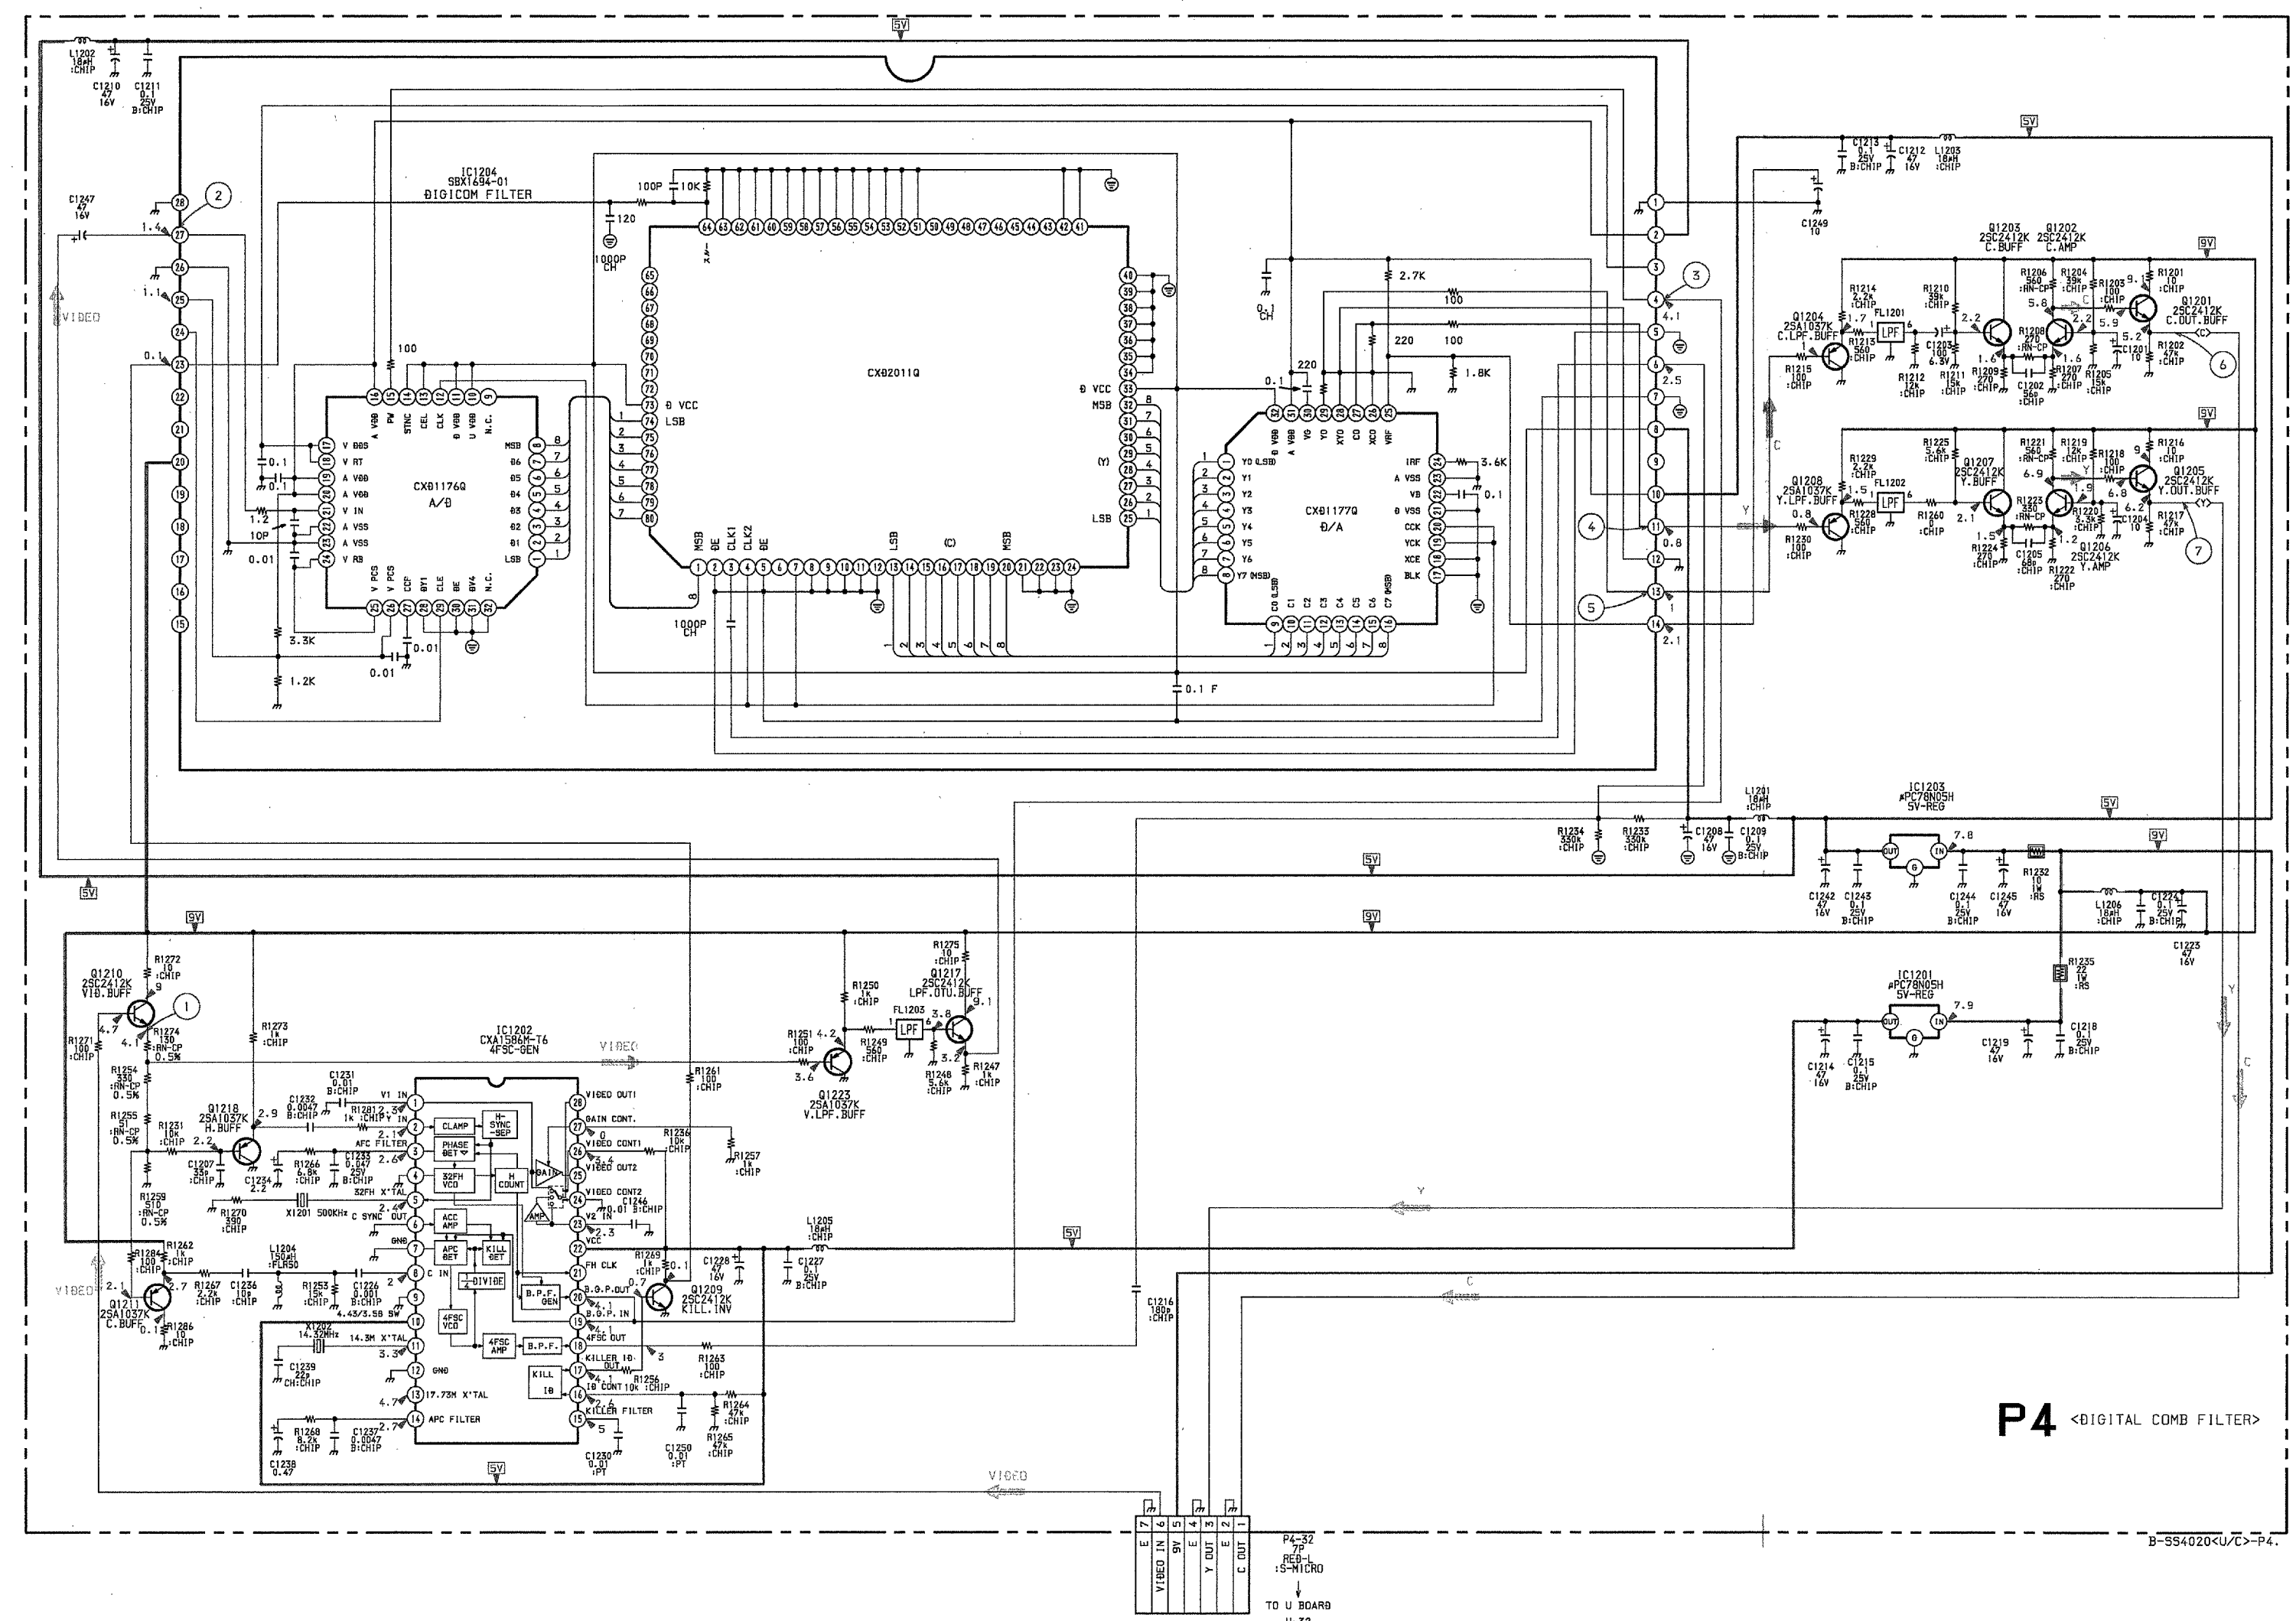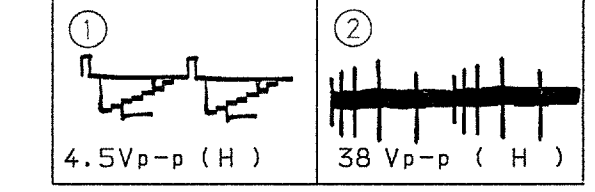

- S Board -

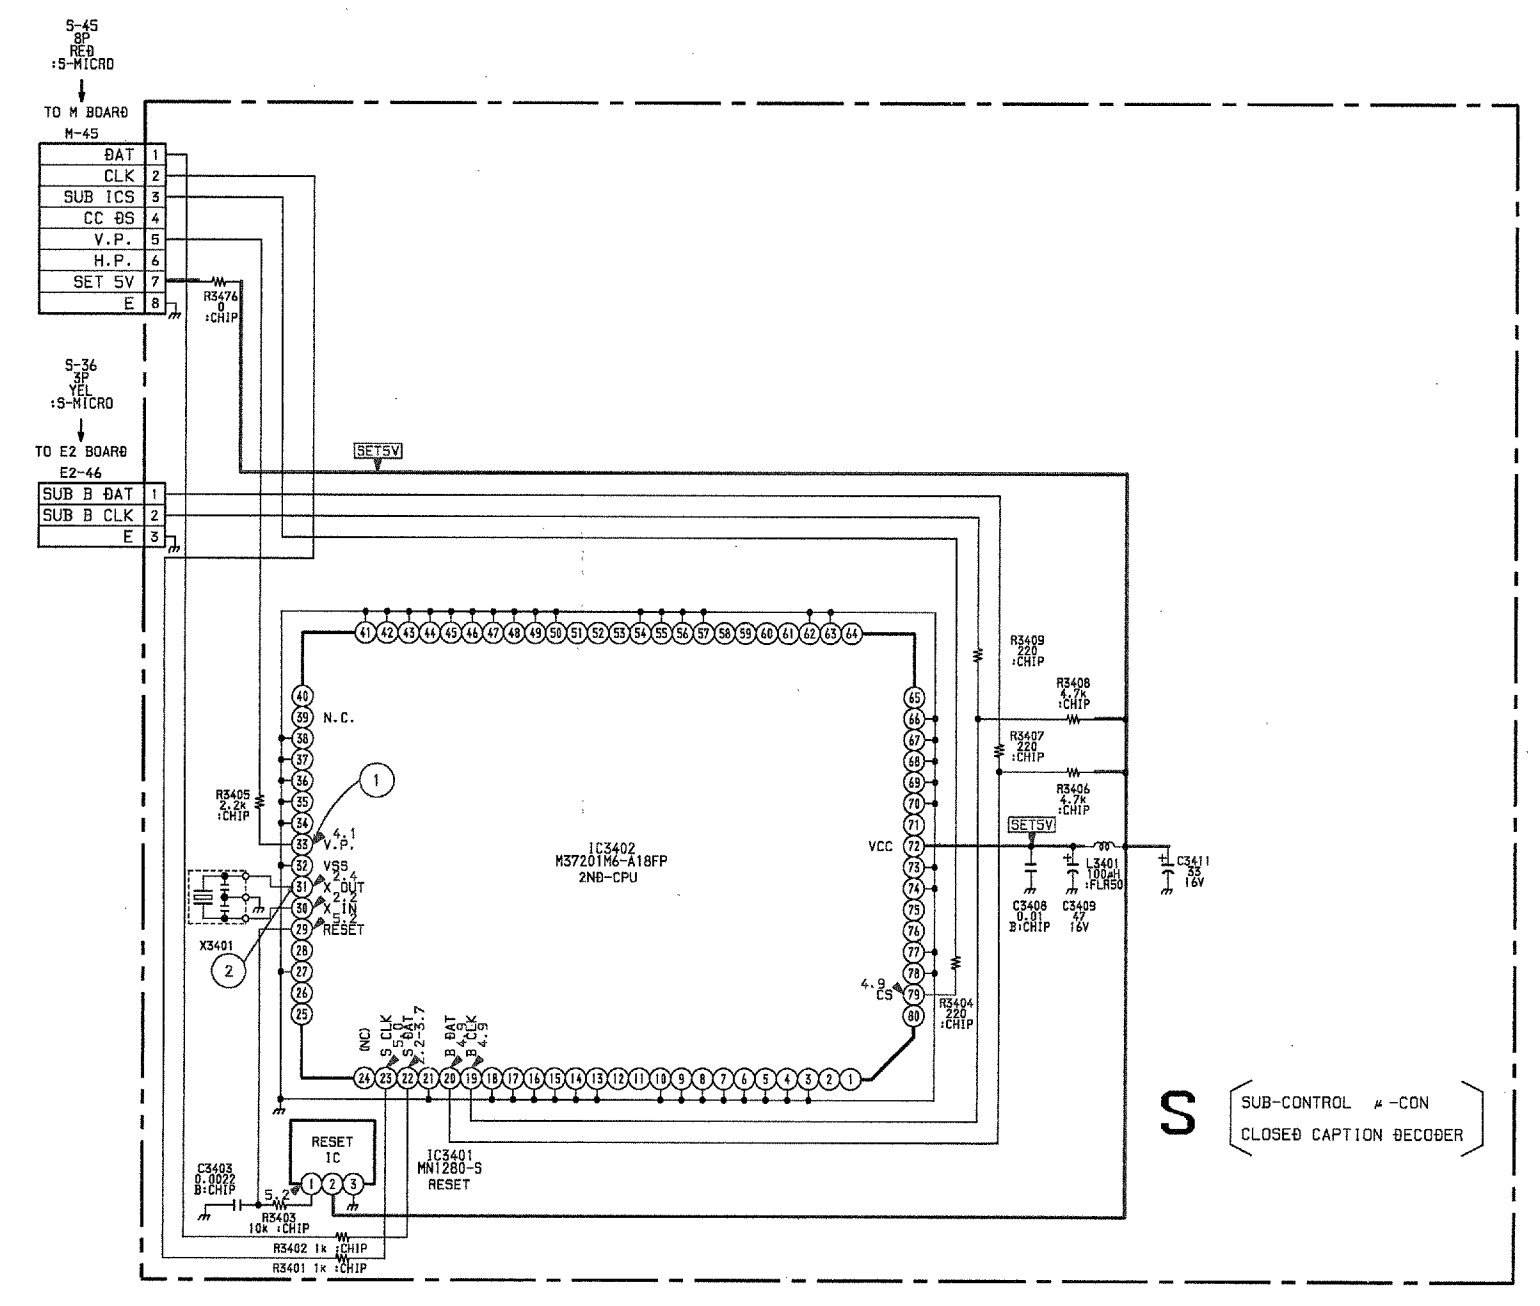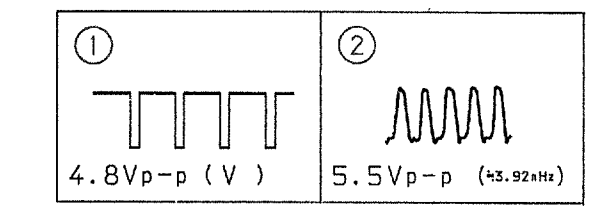


VC [V.PIN CORR.] **HX2** [VIDEO-3 FRONT TERMINAL]
VC Board

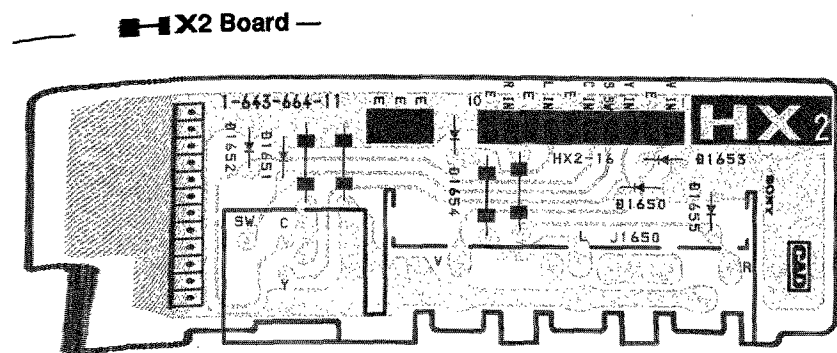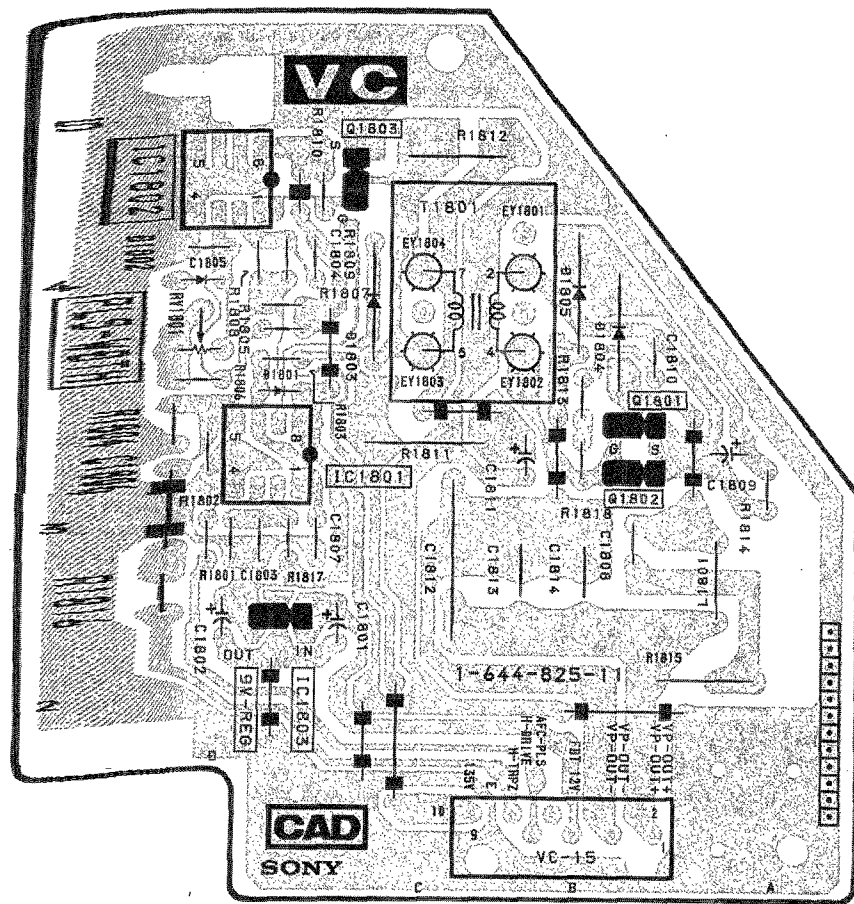


KV-32XBR90S RM-AV1100 **KV-32XBR90S** RM-AV1100

K [ANT. SW CONT]
K Board

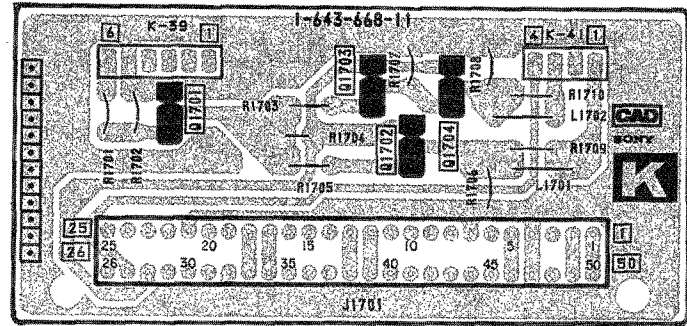

Y2 [MTS DECODER, NVM, AUDIO CONT.]
Y2 Board

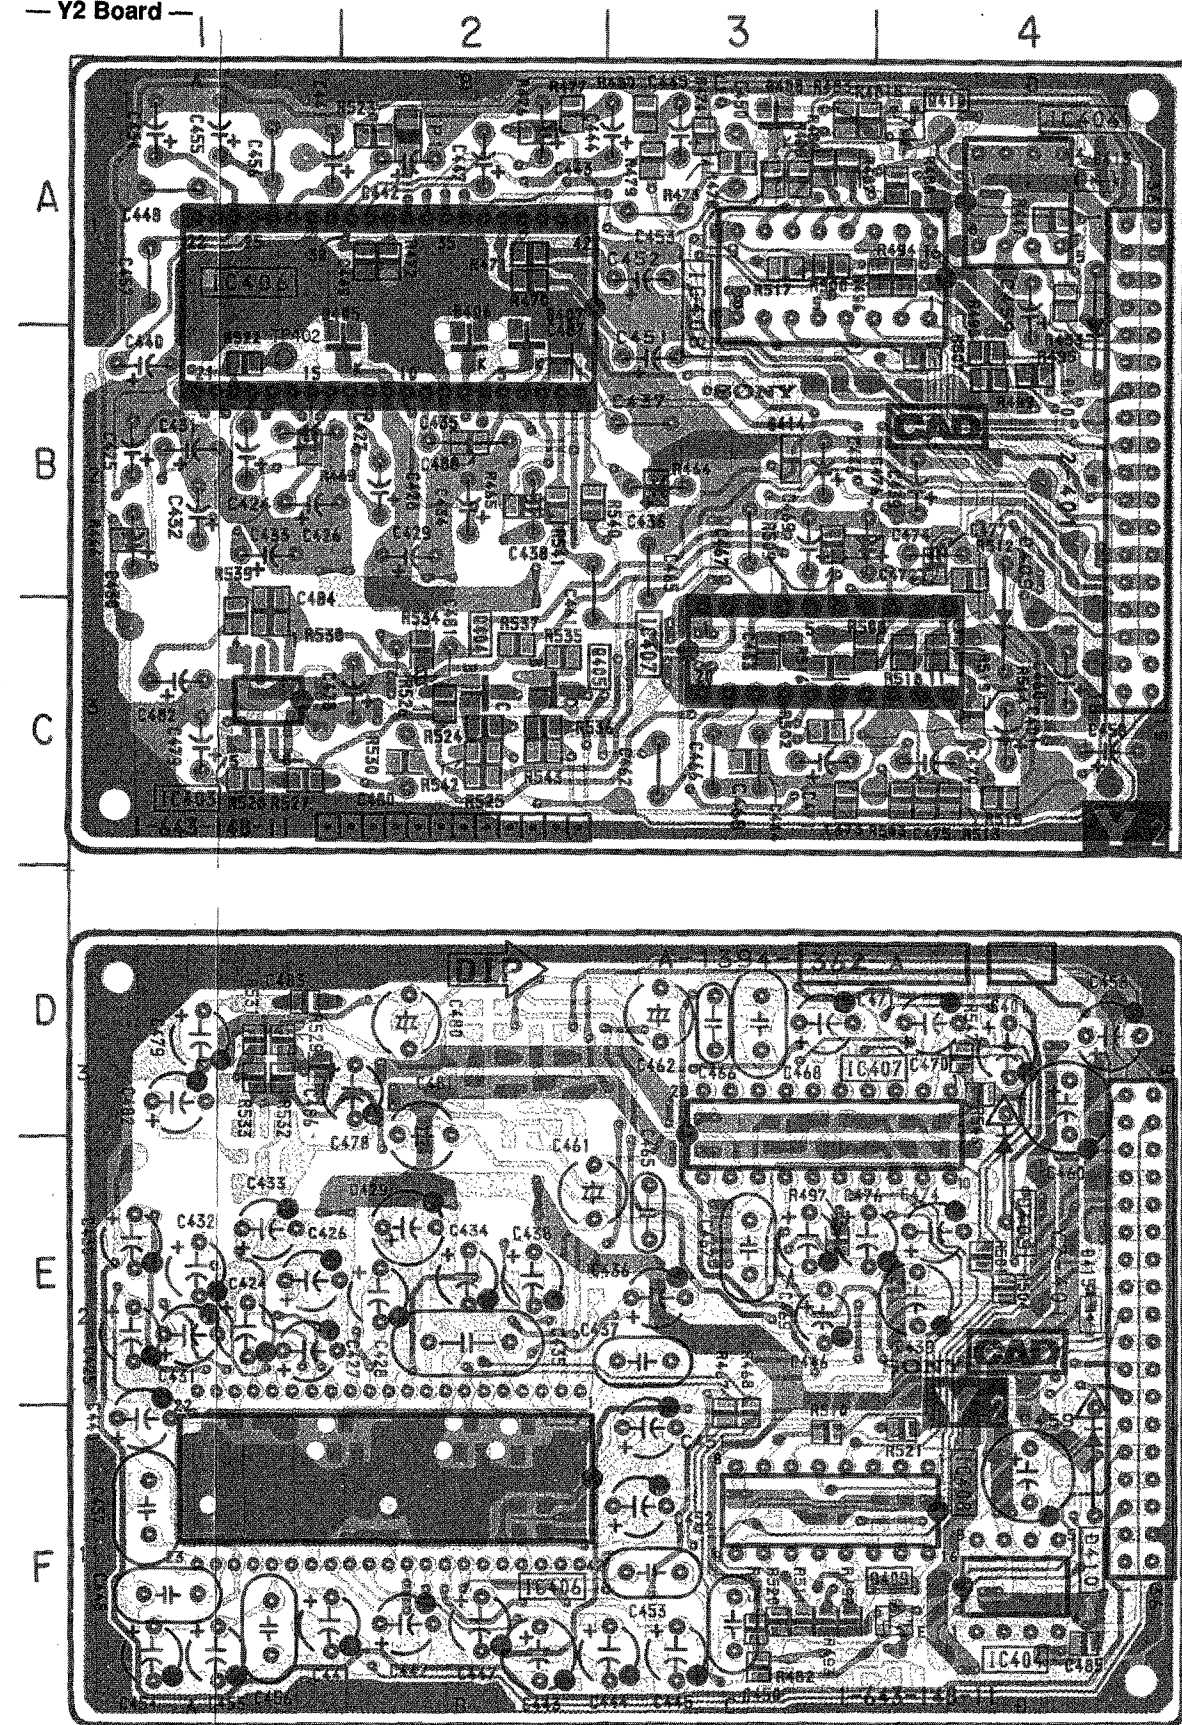

• [Shaded Area] : Pattern from the side which enables seeing.
 • [Dotted Area] : Pattern of the rear side.

KV-32XBR90S RM-AV1100

Y2 Board


IC	
IC403	C-1
404	A-4
406	A-2
407	C-3
408	A-3
TRANSISTOR	
Q404	C-2
405	C-2
409	F-4
410	A-4
DIODE	
D405	B-2
406	B-2
407	B-2
408	A-3
409	C-4
410	A-4
413	A-4
414	B-3
415	E-4
TEST POINT	
TP1	A-2

6-7. SEMICONDUCTORS


AN78N05A
#PC78N05H




CXA1387S

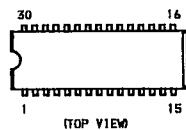


DM44

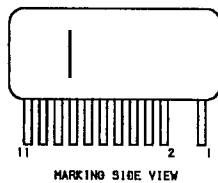

M37201M6-A18FP
TMC73C247-07

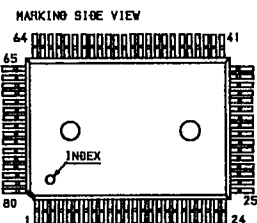


SI-3090CA
SI-3120CA




IMZ1
IMX3




2SA1175
2SA1309A
2SA933S
2SC2785
2SC3311A

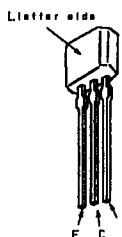


2SB860
2SD1585-LK
2SD2012




D6SB60L

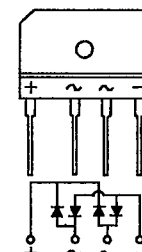

PC817
PS2501




1T33

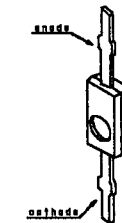


AN7812
M5F7805L
NJM7805FA
RC7805FA
RC7812FA
TA78012AP
TA7805S
#PC7812H




CXA1465AS
CXA1545S

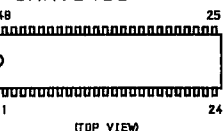


L78LR05D-MA



M5M4C500L-10



SN74HC05ANS




IRF540Y
IRF610
IRF614
2SK1916




2SA1306A-Y
2SC3298A-Y
2SC3298B-Y
2SD2061




2SD874A




EGP20G
ERA81-004
ERB44-06
GP08D
RGP02-17
RGP10G
RGP15G
RGP15GPKG23
RU30A
1SS83




PC817-B




LM358P
LM393P
#PC358C
#PC393C
#PC4557C
24C04A1

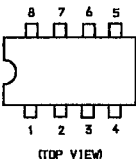


NJM2903S



TAB128P

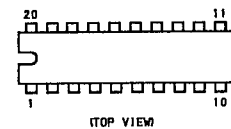

XN5501




2SB734
2SC3733
2SD774




D1N54
D1N20R
D2S4M
EGP20G
ERA38-06
ERB2-004
RB-100A
R012ES-B2
R013ES-B2
R02.2ES-B2
R030ES-B2
R03.3ES-B2
R033ES-B2
R039ES-B2
R04.3ES-B2
R04.7ES-B3
R05.1ES-B3
R05.6ES-B1
R06.2ES-B2
R06.8ES-B1
R07.5ES-B2
R09.1ES-B
R09.1ES-L
RGP02-20EL
1SS119
WG713A


ERB24-06D
RGP10GPKG23
RU3AM
S2L20UF




R05.6SB-T2
R06.2B-T2
1SS352

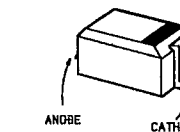


CXA1228S
SBX1694-01

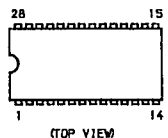

CXK1006L




MB81256-12PSZ



NJM78L09A
RC78L09A



T0A8179S

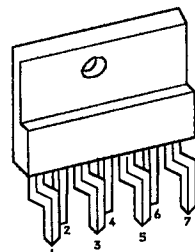


2SA1015
2SA10910
2SA1091R
2SA1091-0
2SA733K
2SC25510
2SC2551-0




2SC2611
2SC2688
2SC3840K




2SC4664NPR

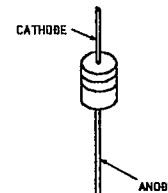


FMN1




R09.1EW

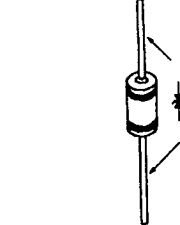


CXA1264AS




CXP5068H-081Q
RC4558PS
#PC4570G2

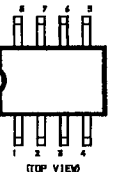

MB88733-143

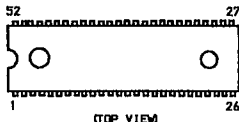

PCA8510T-012

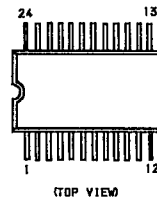


#PC24M05HF




2SA1037K
2SA1162
2SB709A
2SC2412K
2SD601A




2SC4763




D10SC4MR




MA110
MA5091

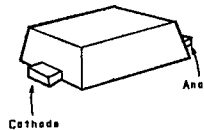


SHOR3D42

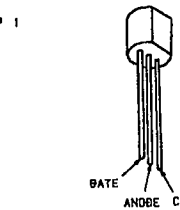


CXA1315P
CXA1526P
RC78M05FA

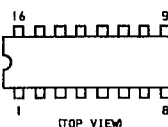


CX20061



MN1280-5




SBX1483-59




FMW1
XN1501




IMNT1US
XN4401




2SC4763

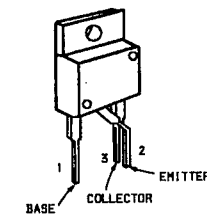


MA3130
R018M-B1
R05.1M-B3




TLR124

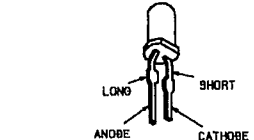


U05G

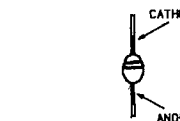


IMZ1
IMX3



IRF540Y
IRF610
IRF614
25K1916




XN5501

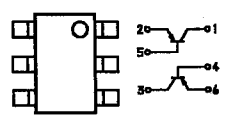


25A1015
25A10910
25A1091R
25A1091-0
25A733K
25C25510
25C2551-0



25A1037K
25A1162
25B709A
25C2412K
25B601A



25A1175
25A1309A
25A9335
25C2785
25C3311A

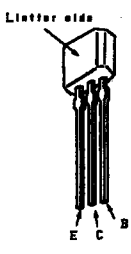

25A1306A-Y
25C3298A-Y
25C3298B-Y
25B2061



25B734
25C3733
25B774




25C2611
25C2688
25C3840K



25C4664NPR




25C4763

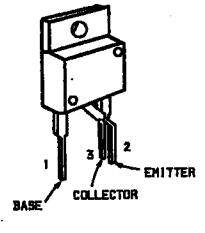


25B860
25B1585-LK
25B2012




25B874A

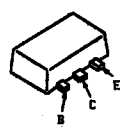


25K1917

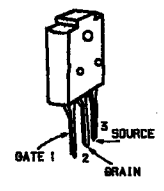


Ø1N54
Ø1N20R
Ø254M
EGP20G
ERA38-06
ERA82-004
RB-100A
RØ12ES-B2
RØ13ES-B2
RØ2.2ES-B2
RØ30ES-B2
RØ3.3ES-B2
RØ33ES-B2
RØ39ES-B2
RØ4.3ES-B2
RØ4.7ES-B3
RØ5.1ES-B3
RØ5.6ES-B1
RØ6.2ES-B2
RØ6.8ES-B1
RØ7.5ES-B2
RØ9.1ES-B
RØ9.1ES-L
RGP02-20EL
15S119
WG713A

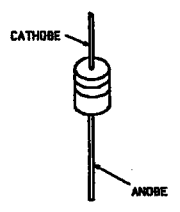


Ø10SC4MR




Ø6SB60L

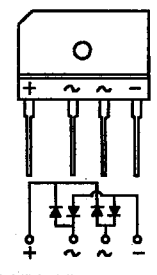


EGP20G
ERA81-004
ERB44-06
GP08Ø
RGP02-17
RGP10G
RGP15G
RGP15GPKG23
RU30A
15S83

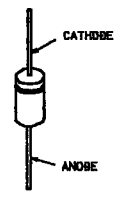


ERB24-06Ø
RGP10GPKG23
RU3AM
S2L20UF

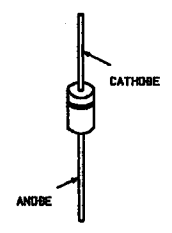


FMN1




MA110
MA5091

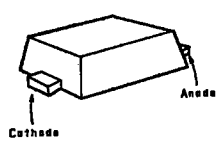


MA3130
RØ18M-B1
RØ5.1M-B3

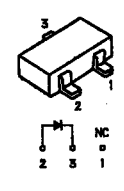


PC817
PS2501




RØ15M-B1
RØ18M-B1
RØ5.1M-B3

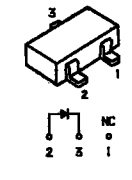


PC817-B




RØ5.6SB-T2
RØ6.2B-T2
15S352

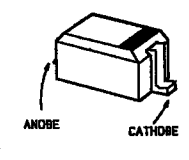


RØ9.1EW




SHOR3Ø42

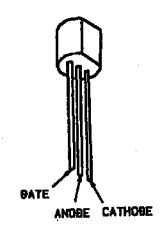


TLR124

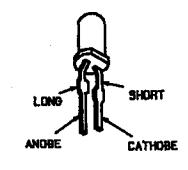

U05G



IT33

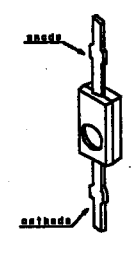

SECTION 7 EXPLODED VIEWS

NOTE:

- Items with no part number and no description are not stocked because they are seldom required for routine service
- The construction parts of an assembled part are indicated with a collation number in the remark column


- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items

The components identified by shading and mark **▲** are critical for safety
Replace only with part number specified

Les composants identifiés par une trame et une marque **▲** sont critiques pour la sécurité
Ne les remplacer que par une pièce portant le numéro spécifié

7-1. CHASSIS


- : BVTP3x12 7-685-648-79
- : BVTP4x16 7-685-663-79

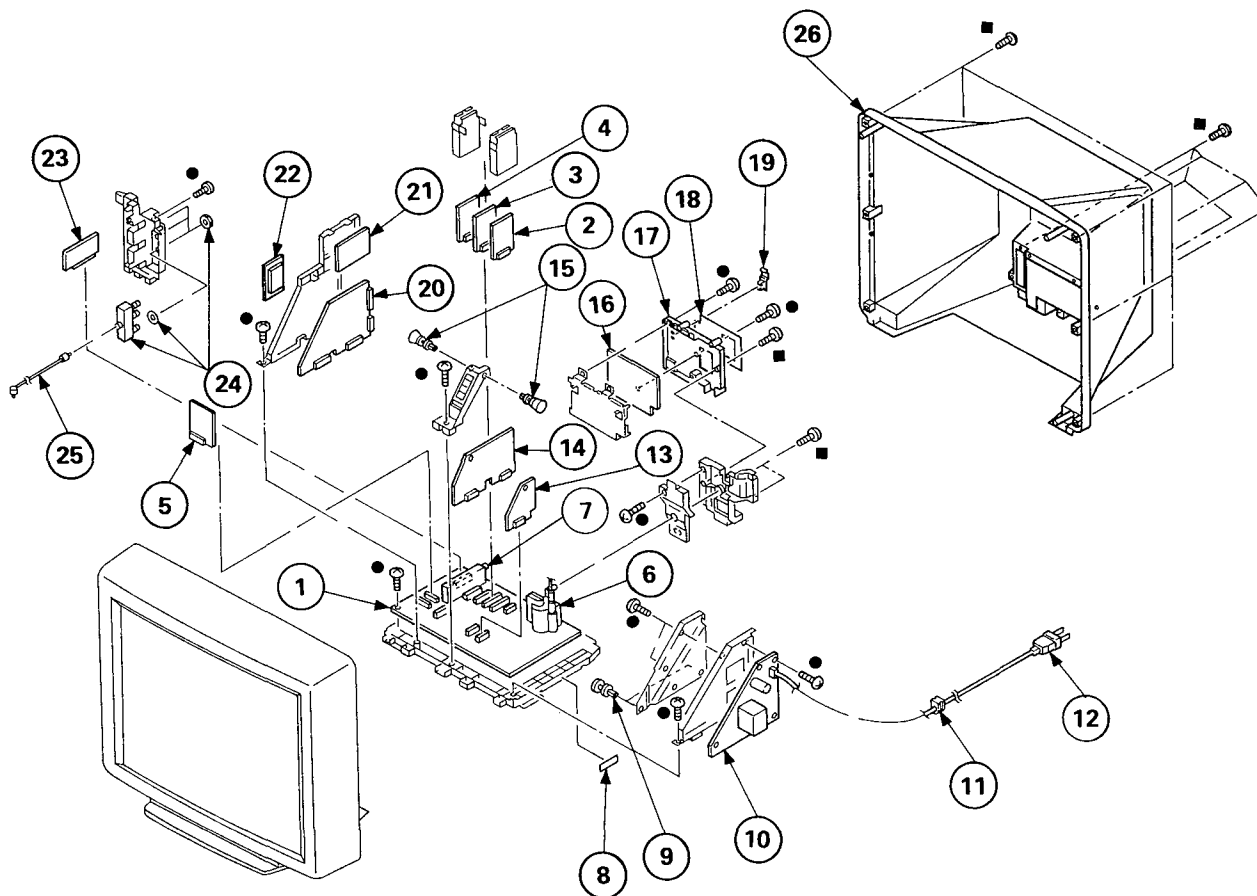

REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
1	*A-1296-948-A	A BOARD, COMPLETE	2~5	14	*A-1341-550-A	D BOARD, COMPLETE	
2	*A-1346-059-A	E1 BOARD, COMPLETE		15	*4-397-418-01	RIVET, T TYPE	
3	*A-1346-060-A	E2 BOARD, COMPLETE		16	*A-1373-330-A	UT BOARD, COMPLETE	
4	*A-1306-417-A	M BOARD, COMPLETE		17	4-035-204-21	BRACKET, UT	
5	*A-1394-366-A	Y2 BOARD, COMPLETE		18	4-035-982-21	LABEL, UT	
6	▲ 1-453-126-11	TRANSFORMER ASSY, FLYBACK (NX-100043)		19	4-329-127-00	CLAMP, CORD	
7	▲ 1-693-102-11	TUNER (8TF-XA401)		20	*A-1373-326-A	U BOARD, COMPLETE	
8	*3-703-044-26	LABEL, CAUTION		21	*1-643-669-11	S BOARD	
9	4-374-303-01	RIVET, NYLON		22	*A-1195-054-A	P4 BOARD, COMPLETE	
10	*A-1316-143-A	G BOARD, COMPLETE		23	*1-643-668-11	K BOARD	
11	▲ 4-334-223-03	GROMMET, AC CORD		24	▲ 1-417-177-11	SELECTOR, ANTENNA (AS-1)	
12	▲ 1-696-002-12	CORD, POWER (WITH NOISE FILTER)		25	*1-555-400-00	CABLE, PIN	
13	*A-1347-067-A	VC BOARD, COMPLETE		26	4-035-007-01	COVER, REAR	

7-2. PICTURE TUBE

- : BVTP3x12 7-685-648-79
- : BVTP4x16 7-685-650-79

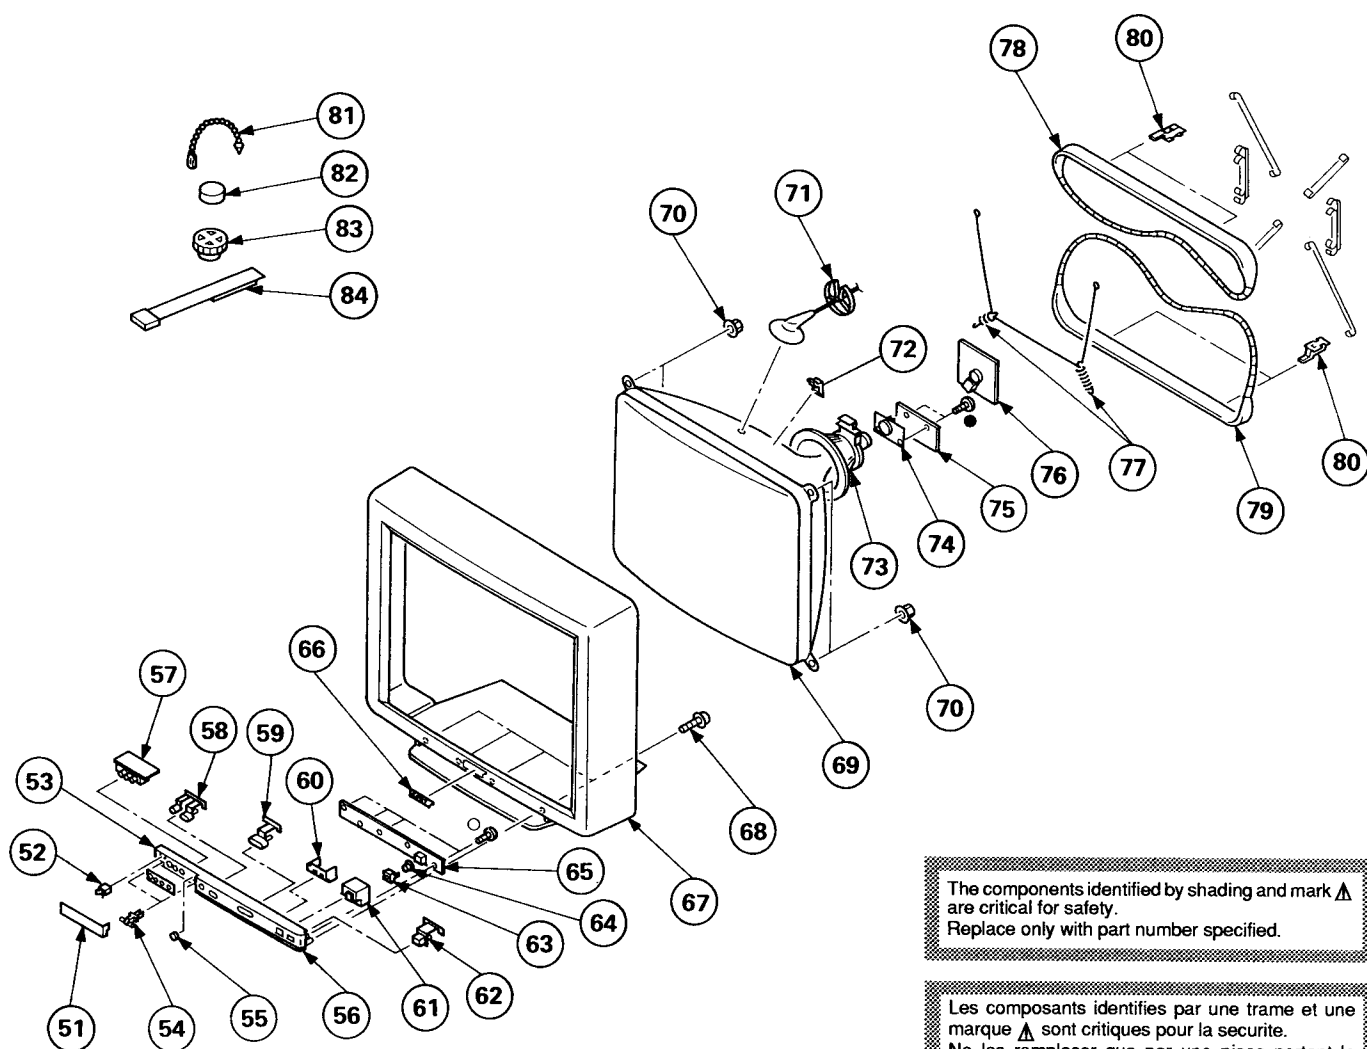

The components identified by shading and mark Δ are critical for safety.
Replace only with part number specified.

Les composants identifiés par une trame et une marque Δ sont critiques pour la sécurité.
Ne les remplacer que par une pièce portant le numéro spécifié.

REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
51	4-035-199-11	DOOR, FRONT PANEL		68	4-319-520-11	SCREW, SPECIAL (+PW4X30)	
52	4-392-036-01	CATCHER, PUSH		69	Δ 8-733-731-05	PICTURE TUBE (MBIKVA10X)	
53	4-036-727-01	LABEL, JACK		70	4-387-204-01	NUT, SPECIAL, PICTURE TUBE	
54	3-703-035-11	SHAFT, LID		71	*3-704-372-01	HOLDER, HV CABLE	
55	4-314-871-00	CUSHION		72	3-704-495-01	SPACER, DY	
56	4-035-057-11	PANEL, FRONT		73	Δ 1-451-393-11	DEFLECTION YOKE (Y34EXA)	
57	*1-643-664-11	HX2 BOARD		74	Δ 1-452-616-12	NECK ASSY, PICTURE TUBE (NA323)	
58	4-035-179-01	BUTTON (A), MULTI		75	*A-1342-182-A	V BOARD, COMPLETE	
59	4-035-154-01	BUTTON (B), MULTI		76	*A-1331-209-A	C BOARD, COMPLETE	
60	4-035-120-01	GUIDE, LIGHT, LED		77	4-036-329-01	SPRING (B), TENSION	
61	4-035-119-01	FILTER (REMOTE CONTROL)		78	Δ 1-426-575-11	COIL, DEGAUSSING	
62	4-035-153-01	BUTTON, POWER		79	Δ 1-426-576-11	COIL, DEGAUSSING	
63	*4-381-686-01	BRACKET (B), LIGHT GUIDE		80	4-033-744-01	CLIP	
64	*4-388-603-01	GUIDE, LIGHT		81	4-308-870-00	CLIP, LEAD WIRE	
65	*1-643-663-11	HX1 BOARD		82	1-452-032-00	MAGNET, DISK: 10MM ϕ	
66	3-704-179-01	EMBLEM (NO.9), SONY		83	1-452-094-00	MAGNET, ROTATABLE DISK: 15MM ϕ	
67	4-035-034-01	CABINET (WITH BEZEL)		84	X-4306-312-0	PERMALLOY ASSY, CONVERGENCE	

P4

SECTION 8
ELECTRICAL PARTS LIST

NOTE:

The components identified by shading and mark **Δ** are critical for safety. Replace only with part number specified.

Les composants identifiés par une trame et une marque **Δ** sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- All variable and adjustable resistors have characteristic curve B, unless otherwise noted.

When indicating parts by reference number, please include the board name.

- RESISTORS**
- All resistors are in ohms
 - F: nonflammable

- CAPACITORS**
- MF: μF , PF: $\mu\mu\text{F}$
- COILS**
- MMH: mH, UH: μH
 - The components identified by **☒** in this manual have been carefully factory-selected for each set in order to satisfy regulations regarding X-ray radiation. Should replacement be required, replace only with the value originally used.

REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
*A-1195-054-A	P4 BOARD, COMPLETE	*****				<IC>	
		<CAPACITOR>					
C1201	1-124-261-00	ELECT 10MF	20% 50V	IC1201	8-759-112-06	IC UPC78N05H	
C1202	1-163-111-00	CERAMIC CHIP 56PF	5% 50V	IC1202	8-752-055-90	IC CXA1586M	
C1203	1-126-177-11	ELECT 100MF	20% 6.3V	IC1203	8-759-112-06	IC UPC78N05H	
C1204	1-124-261-00	ELECT 10MF	20% 50V	IC1204	8-741-694-01	IC SBX1694-01	
C1205	1-163-113-00	CERAMIC CHIP 68PF	5% 50V			<COIL>	
C1207	1-163-105-00	CERAMIC CHIP 33PF	5% 50V	L1201	1-414-042-21	INDUCTOR 18UH	
C1208	1-124-589-11	ELECT 47MF	20% 16V	L1202	1-414-042-21	INDUCTOR 18UH	
C1209	1-164-004-11	CERAMIC CHIP 0.1MF	10% 25V	L1203	1-414-042-21	INDUCTOR 18UH	
C1210	1-124-589-11	ELECT 47MF	20% 16V	L1204	1-410-484-11	INDUCTOR 150UH	
C1211	1-164-004-11	CERAMIC CHIP 0.1MF	10% 25V	L1205	1-414-042-21	INDUCTOR 18UH	
C1212	1-124-589-11	ELECT 47MF	20% 16V	L1206	1-414-042-21	INDUCTOR 18UH	
C1213	1-164-004-11	CERAMIC CHIP 0.1MF	10% 25V			<CONNECTOR>	
C1214	1-124-589-11	ELECT 47MF	20% 16V	P432	*1-564-522-11	PLUG, CONNECTOR 7P	
C1215	1-164-004-11	CERAMIC CHIP 0.1MF	10% 25V			<TRANSISTOR>	
C1216	1-163-123-00	CERAMIC CHIP 180PF	5% 50V	Q1201	8-729-920-74	TRANSISTOR 2SC2412K-QR	
C1218	1-164-004-11	CERAMIC CHIP 0.1MF	10% 25V	Q1202	8-729-920-74	TRANSISTOR 2SC2412K-QR	
C1219	1-124-589-11	ELECT 47MF	20% 16V	Q1203	8-729-920-74	TRANSISTOR 2SC2412K-QR	
C1223	1-124-589-11	ELECT 47MF	20% 16V	Q1204	8-729-216-22	TRANSISTOR 2SA1162-G	
C1224	1-164-004-11	CERAMIC CHIP 0.1MF	10% 25V	Q1205	8-729-920-74	TRANSISTOR 2SC2412K-QR	
C1226	1-163-009-11	CERAMIC CHIP 0.001MF	10% 50V	Q1206	8-729-920-74	TRANSISTOR 2SC2412K-QR	
C1227	1-164-004-11	CERAMIC CHIP 0.1MF	10% 25V	Q1207	8-729-920-74	TRANSISTOR 2SC2412K-QR	
C1228	1-124-589-11	ELECT 47MF	20% 16V	Q1208	8-729-216-22	TRANSISTOR 2SA1162-G	
C1230	1-130-483-00	MYLAR 0.01MF	5% 50V	Q1209	8-729-920-74	TRANSISTOR 2SC2412K-QR	
C1231	1-164-232-11	CERAMIC CHIP 0.01MF	10% 50V	Q1210	8-729-920-74	TRANSISTOR 2SC2412K-QR	
C1232	1-163-017-00	CERAMIC CHIP 0.0047MF	10% 50V	Q1211	8-729-216-22	TRANSISTOR 2SA1162-G	
C1233	1-163-809-11	CERAMIC CHIP 0.047MF	10% 25V	Q1217	8-729-920-74	TRANSISTOR 2SC2412K-QR	
C1234	1-124-257-00	ELECT 2.2MF	20% 50V	Q1218	8-729-216-22	TRANSISTOR 2SA1162-G	
C1236	1-163-093-00	CERAMIC CHIP 10PF	5% 50V	Q1223	8-729-216-22	TRANSISTOR 2SA1162-G	
C1237	1-163-017-00	CERAMIC CHIP 0.0047MF	10% 50V			<RESISTOR>	
C1238	1-124-465-00	ELECT 0.47MF	20% 50V	R1201	1-216-001-00	METAL GLAZE 10 5% 1/10W	
C1239	1-163-235-11	CERAMIC CHIP 22PF	5% 50V	R1202	1-216-089-00	METAL GLAZE 47K 5% 1/10W	
C1242	1-124-589-11	ELECT 47MF	20% 16V	R1203	1-216-025-00	METAL GLAZE 100 5% 1/10W	
C1243	1-164-004-11	CERAMIC CHIP 0.1MF	10% 25V	R1204	1-216-689-11	METAL GLAZE 39K 5% 1/10W	
C1244	1-164-004-11	CERAMIC CHIP 0.1MF	10% 25V	R1205	1-216-077-00	METAL GLAZE 15K 5% 1/10W	
C1245	1-124-589-11	ELECT 47MF	20% 16V	R1206	1-216-645-11	METAL CHIP 560 0.50% 1/10W	
C1246	1-164-232-11	CERAMIC CHIP 0.01MF	10% 50V	R1207	1-216-035-00	METAL GLAZE 270 5% 1/10W	
C1247	1-124-589-11	ELECT 47MF	20% 16V	R1208	1-216-637-11	METAL CHIP 270 0.50% 1/10W	
C1249	1-124-261-00	ELECT 10MF	20% 50V	R1209	1-216-035-00	METAL GLAZE 270 5% 1/10W	
C1250	1-130-483-00	MYLAR 0.01MF	5% 50V	R1210	1-216-689-11	METAL GLAZE 39K 5% 1/10W	
		<FILTER>		R1211	1-216-077-00	METAL GLAZE 15K 5% 1/10W	
FL1201	1-236-620-11	FILTER, LOW PASS		R1212	1-216-075-00	METAL GLAZE 12K 5% 1/10W	
FL1202	1-236-620-11	FILTER, LOW PASS		R1213	1-216-043-00	METAL GLAZE 560 5% 1/10W	
FL1203	1-236-620-11	FILTER, LOW PASS					

The components identified by shading and mark Δ are critical for safety. Replace only with part number specified.

Les composants identifiés par une trame et une marque Δ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

P4 A

REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
R1214	1-216-057-00	METAL GLAZE 2.2K 5% 1/10W					
R1215	1-216-025-00	METAL GLAZE 100 5% 1/10W					
R1216	1-216-001-00	METAL GLAZE 10 5% 1/10W					
R1217	1-216-089-00	METAL GLAZE 47K 5% 1/10W					
R1218	1-216-025-00	METAL GLAZE 100 5% 1/10W					
R1219	1-216-075-00	METAL GLAZE 12K 5% 1/10W					
R1220	1-216-061-00	METAL GLAZE 3.3K 5% 1/10W					
R1221	1-216-645-11	METAL CHIP 560 0.50% 1/10W					
R1222	1-216-035-00	METAL GLAZE 270 5% 1/10W					
R1223	1-216-639-11	METAL CHIP 330 0.50% 1/10W					
R1224	1-216-035-00	METAL GLAZE 270 5% 1/10W					
R1225	1-216-067-00	METAL GLAZE 5.6K 5% 1/10W					
R1228	1-216-043-00	METAL GLAZE 560 5% 1/10W					
R1229	1-216-057-00	METAL GLAZE 2.2K 5% 1/10W					
R1230	1-216-025-00	METAL GLAZE 100 5% 1/10W					
R1231	1-216-073-00	METAL GLAZE 10K 5% 1/10W					
R1232	1-215-857-11	METAL OXIDE 10 5% 1W	F				
R1233	1-216-109-00	METAL GLAZE 330K 5% 1/10W					
R1234	1-216-109-00	METAL GLAZE 330K 5% 1/10W					
R1235	1-215-859-00	METAL OXIDE 22 5% 1W	F				
R1236	1-216-073-00	METAL GLAZE 10K 5% 1/10W					
R1247	1-216-049-00	METAL GLAZE 1K 5% 1/10W					
R1248	1-216-067-00	METAL GLAZE 5.6K 5% 1/10W					
R1249	1-216-043-00	METAL GLAZE 560 5% 1/10W					
R1250	1-216-049-00	METAL GLAZE 1K 5% 1/10W					
R1251	1-216-025-00	METAL GLAZE 100 5% 1/10W					
R1253	1-216-077-00	METAL GLAZE 15K 5% 1/10W					
R1254	1-216-639-11	METAL CHIP 330 0.50% 1/10W					
R1255	1-216-620-11	METAL CHIP 51 0.50% 1/10W					
R1256	1-216-073-00	METAL GLAZE 10K 5% 1/10W					
R1257	1-216-049-00	METAL GLAZE 1K 5% 1/10W					
R1259	1-216-644-11	METAL CHIP 510 0.50% 1/10W					
R1260	1-216-295-00	METAL GLAZE 0 5% 1/10W					
R1261	1-216-025-00	METAL GLAZE 100 5% 1/10W					
R1262	1-216-049-00	METAL GLAZE 1K 5% 1/10W					
R1263	1-216-025-00	METAL GLAZE 100 5% 1/10W					
R1264	1-216-089-00	METAL GLAZE 47K 5% 1/10W					
R1265	1-216-089-00	METAL GLAZE 47K 5% 1/10W					
R1266	1-216-069-00	METAL GLAZE 6.8K 5% 1/10W					
R1267	1-216-057-00	METAL GLAZE 2.2K 5% 1/10W					
R1268	1-216-071-00	METAL GLAZE 8.2K 5% 1/10W					
R1269	1-216-049-00	METAL GLAZE 1K 5% 1/10W					
R1270	1-216-039-00	METAL GLAZE 390 5% 1/10W					
R1271	1-216-025-00	METAL GLAZE 100 5% 1/10W					
R1272	1-216-001-00	METAL GLAZE 10 5% 1/10W					
R1273	1-216-049-00	METAL GLAZE 1K 5% 1/10W					
R1274	1-216-630-11	METAL CHIP 130 0.50% 1/10W					
R1275	1-216-001-00	METAL GLAZE 10 5% 1/10W					
R1281	1-216-049-00	METAL GLAZE 1K 5% 1/10W					
R1284	1-216-025-00	METAL GLAZE 100 5% 1/10W					
R1286	1-216-001-00	METAL GLAZE 10 5% 1/10W					
<CRYSTAL>							
X1201	1-577-611-11	OSCILATOR, CERAMIC					
X1202	1-567-878-11	VIBRATOR, CRYSTAL					

*A-1296-948-A	A BOARD, COMPLETE						

*4-341-751-01	EYELET (EY101~EY172)						
*4-341-752-01	EYELET (EY2~EY55)						
4-382-854-11	SCREW (M3X10), P, SW (+)						
				<CONNECTOR>			
A2	*1-573-964-11	PIN, CONNECTOR (PC BOARD) 6P					
A3	*1-573-986-11	PIN, CONNECTOR (PC BOARD) 5P					
A4	*1-564-510-11	PLUG, CONNECTOR 7P					
A5	*1-564-507-11	PLUG, CONNECTOR 4P					
A12	1-573-297-11	CONNECTOR, BOARD TO BOARD 18P					
A13	1-573-297-11	CONNECTOR, BOARD TO BOARD 18P					
A14	1-573-296-11	CONNECTOR, BOARD TO BOARD 10P					
A15	1-573-296-11	CONNECTOR, BOARD TO BOARD 10P					
A18	1-573-296-11	CONNECTOR, BOARD TO BOARD 10P					
A21	*1-508-768-00	PIN, CONNECTOR (5MM PITCH) 6P					
A37	*1-564-514-11	PLUG, CONNECTOR 11P					
A49	*1-564-506-11	PLUG, CONNECTOR 3P					
A100	*1-573-979-11	CONNECTOR, BOARD TO BOARD 11P					
DY1	*1-580-798-11	CONNECTOR PIN (DY) 6P					
ES002	*1-573-960-11	CONNECTOR (FEMALE) 50P					
				<CAPACITOR>			
C201	1-126-101-11	ELECT 100MF 20% 16V					
C210	1-102-121-00	CERAMIC 0.0022MF 10% 50V					
C211	1-101-006-00	CERAMIC 0.047MF 50V					
C213	1-126-103-11	ELECT 470MF 20% 16V					
C214	1-126-101-11	ELECT 100MF 20% 16V					
C215	1-124-910-11	ELECT 47MF 20% 50V					
C216	1-126-101-11	ELECT 100MF 20% 16V					
C217	1-124-126-00	ELECT 47MF 20% 25V					
C218	1-126-103-11	ELECT 470MF 20% 16V					
C219	1-136-169-00	FILM 0.22MF 5% 50V					
C220	1-124-910-11	ELECT 47MF 20% 50V					
C223	1-123-875-11	ELECT 10MF 20% 50V					
C224	1-124-261-00	ELECT 10MF 20% 50V					
C225	1-124-120-11	ELECT 220MF 20% 16V					
C226	1-124-621-11	ELECT 3300MF 20% 6.3V					
C299	1-126-101-11	ELECT 100MF 20% 16V					
C501	1-137-114-11	FILM 0.68MF 5% 200V					
C502	1-130-471-00	FILM 0.001MF 5% 50V					
C503	1-124-261-00	ELECT 10MF 20% 50V					
C504	1-136-161-00	FILM 0.047MF 5% 50V					
C505	1-124-790-11	ELECT 0.47MF 20% 100V					
C506	1-124-480-11	ELECT 470MF 20% 25V					
C507	1-130-473-00	MYLAR 0.0015MF 5% 50V					
C508	1-162-114-00	CERAMIC 0.0047MF 2KV					
C509	1-124-808-51	ELECT 10MF 20% 200V					
C510	1-102-110-00	CERAMIC 220PF 10% 50V					
C511	1-124-477-11	ELECT 47MF 20% 25V					
C512	1-162-318-11	CERAMIC 0.001MF 10% 500V					
C513	1-106-391-12	MYLAR 0.1MF 10% 200V					
C514	1-124-477-11	ELECT 47MF 20% 25V					
C515	1-162-117-00	CERAMIC 100PF 10% 500V					
C517	1-124-477-11	ELECT 47MF 20% 25V					
C518	1-136-161-00	FILM 0.047MF 5% 50V					
C519	1-124-472-11	ELECT 470MF 20% 10V					
C520 Δ	1-161-731-51	CERAMIC 0.001MF 10% 2KV					
C521 Δ	1-137-604-21	FILM 0.022MF 2% 200V					
C522	1-162-116-00	CERAMIC 680PF 10% 2KV					
C523	1-124-465-00	ELECT 0.47MF 20% 50V					
C524	1-130-487-00	MYLAR 0.022MF 5% 50V					
C525	1-162-116-00	CERAMIC 680PF 10% 2KV					
C526 Δ	1-137-515-91	FILM 0.050MF 3% 400V					
C527	1-136-167-00	FILM 0.15MF 5% 50V					
C528	1-106-359-00	MYLAR 0.0047MF 10% 200V					



Les composants identifiés par une
trame et une marque Δ sont
critiques pour la sécurité.
Ne les remplacer que par une pièce
portant le numéro spécifique.

The components identified by
shading and mark Δ are critical
for safety.
Replace only with part number
specified.

REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
C529	1-136-161-00	FILM 0.047MF 5%	50V	D501	8-719-018-82	DIODE RGPO2-20EL-6394	
C530	1-136-105-00	FILM 0.33MF 5%	200V	D502 Δ 8-719-302-43	DIODE EL1Z		
C531	1-124-634-11	ELECT 1MF 20%	250V	D503	8-719-970-87	DIODE ERA38-06	
C532	1-124-477-11	ELECT 47MF 20%	25V	D504	8-719-911-19	DIODE 1SS119	
C533	1-137-516-11	FILM 1.2MF 5%	200V	D506	8-719-109-90	DIODE RD5.6ES-B3	
C534	1-137-114-11	FILM 0.68MF 5%	200V	D508	8-719-109-88	DIODE RD5.6B3S-B1	
C535	1-124-480-11	ELECT 470MF 20%	25V	D509	8-719-110-03	DIODE RD7.5ES-B2	
C536	1-102-228-00	CERAMIC 470PF 10%	500V	D510	8-719-911-19	DIODE 1SS119	
C537	1-106-343-00	MYLAR 0.001MF 10%	100V	D511	8-719-300-33	DIODE RU-3AM	
C538	1-106-391-12	MYLAR 0.1MF 10%	200V	D512	8-719-911-55	DIODE U05G	
C539	1-123-950-00	ELECT 47MF 20%	250V	D513	8-719-911-55	DIODE U05G	
C540	1-124-480-11	ELECT 470MF 20%	25V	D514	8-719-312-72	DIODE RU30A	
C541	1-102-228-00	CERAMIC 470PF 10%	500V	D515	8-719-300-33	DIODE RU-3AM	
C542	1-106-387-00	MYLAR 0.068MF 10%	200V	D516	8-719-979-85	DIODE EGP20G	
C543	1-129-898-00	FILM 0.0022MF 5%	630V	D517	8-719-943-06	DIODE ERB24-06D	
C544	1-124-797-11	ELECT 0.47MF 20%	160V	D518	8-719-109-93	DIODE RD6.2ES-B2	
C545	1-102-244-00	CERAMIC 220PF 10%	500V	D521	8-719-911-19	DIODE 1SS119	
C546	1-123-024-21	ELECT 33MF 10%	160V	D522	8-719-110-72	DIODE RD30ES-B2	
C547	1-130-471-00	MYLAR 0.001MF 5%	50V	D524	8-719-976-64	DIODE RGPO2-17	
C548	1-130-467-00	MYLAR 470PF 5%	50V	D525	8-719-911-19	DIODE 1SS119	
C549	1-124-261-00	ELECT 10MF 20%	50V	D527	8-719-110-78	DIODE RD33ES-B2	
C550	1-129-702-00	FILM 0.001MF 10%	630V	D529	8-719-911-19	DIODE 1SS119	
C551	1-130-471-00	MYLAR 0.001MF 5%	50V	D530	8-719-911-19	DIODE 1SS119	
C552	1-126-176-11	ELECT 220MF 20%	10V	D1408	8-719-911-19	DIODE 1SS119	
C553	1-124-261-00	ELECT 10MF 20%	50V	D1412	8-719-911-19	DIODE 1SS119	
C554 Δ 1-161-731-51	CERAMIC 0.001MF 10%	2KV		D1413	8-719-911-19	DIODE 1SS119	
C555	1-123-947-00	ELECT 10MF 20%	250V	D1414	8-719-911-19	DIODE 1SS119	
C557	1-124-465-00	ELECT 0.47MF 20%	50V	D1503	8-719-911-55	DIODE U05G	
C559	1-129-718-00	FILM 0.022MF 5%	630V				
C560	1-136-169-00	FILM 0.22MF 5%	50V				
C561	1-124-261-00	ELECT 10MF 20%	50V				<IC>
C562	1-124-499-11	ELECT 1MF 20%	50V	IC201	8-749-920-58	IC SI-3090CA	
C563	1-130-491-00	MYLAR 0.047MF 5%	50V	IC204	8-759-231-53	IC TA7805S	
C564	1-130-495-00	MYLAR 0.1MF 5%	50V	IC205	8-759-144-84	IC UPC24M05HF	
C565	1-130-495-00	MYLAR 0.1MF 5%	50V	IC206	8-759-982-13	IC RC7812FA	
C569	1-130-497-00	MYLAR 0.15MF 5%	50V	IC501	8-759-987-16	IC LM393P	
C570	1-130-471-00	MYLAR 0.001MF 5%	50V	IC502	1-809-845-11	MODULE, PROTECTOR PM-30	
C571	1-130-651-00	FILM 0.001MF 2%	100V	IC503	8-759-987-16	IC LM393P	
C572	1-124-907-11	ELECT 10MF 20%	50V	IC504	8-759-982-13	IC RC7812FA	
C573	1-130-471-00	MYLAR 0.001MF 5%	50V	IC1501	8-759-506-46	IC TDA8179S	
C575	1-102-038-00	CERAMIC 0.001MF	500V				
C576	1-106-355-12	MYLAR 0.0033MF	200V				<JACK>
C1501	1-126-233-11	ELECT 22MF 20%	50V	J201	1-507-562-00	JACK	
C1502	1-126-301-11	ELECT 1MF 20%	50V	J202	1-507-562-00	JACK	
C1503	1-102-114-00	CERAMIC 470PF 10%	50V				<COIL>
C1504	1-124-480-11	ELECT 470MF 20%	25V	L201	1-408-408-00	INDUCTOR 8.2UH	
C1505	1-124-911-11	ELECT 220MF 20%	50V	L205	1-408-421-00	INDUCTOR 100UH	
C1506	1-136-171-00	FILM 0.33MF 5%	50V	L208	1-410-785-31	INDUCTOR 0.22UH	
C1507	1-106-222-00	MYLAR 0.12MF 10%	100V	L210	1-408-408-00	INDUCTOR 8.2UH	
C1508	1-124-480-11	ELECT 470MF 20%	25V	L501	1-459-104-00	COIL, WITH CORE	
C1509	1-124-122-11	ELECT 100MF 20%	50V	L502	1-412-552-31	INDUCTOR 2.2MMH	
C1511	1-164-014-11	CERAMIC 5PF 0.25PF	50V	L504	1-410-455-11	INDUCTOR 10MMH	
		<DIODE>		L507	1-459-483-00	COIL (WITH CORE)	
D201	8-719-110-13	DIODE RD9.1ES-B2		L508	1-421-541-00	COIL, CHOKE 1000UH	
D202	8-719-110-13	DIODE RD9.1ES-B2		L509	1-459-104-00	COIL, WITH CORE	
D204	8-719-911-19	DIODE 1SS119		L510 Δ 1-460-197-11	COIL, FERRITE (PMC)		
D205	8-719-911-19	DIODE 1SS119		L511	1-412-519-11	INDUCTOR 3.3UH	
D206	8-719-911-19	DIODE 1SS119		L512	1-412-531-31	INDUCTOR 33UH	
D207	8-719-911-19	DIODE 1SS119		L513	1-412-519-11	INDUCTOR 3.3UH	
D208	8-719-911-19	DIODE 1SS119		L514	1-459-123-00	COIL, DUST CORE (PAC)	
D209	8-719-510-48	DIODE D1N20R					
D213	8-719-110-78	DIODE RD33ES-B2					

The components identified by shading and mark **Δ** are critical for safety. Replace only with part number specified.

Les composants identifiés par une trame et une marque **Δ** sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

The components identified by **Δ** in this manual have been carefully factory-selected for each set in order to satisfy regulations regarding X-ray radiation. Should replacement be required, replace only with the value originally used.



REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
L515	1-410-645-31	INDUCTOR 100UH		R514	1-249-438-11	CARBON 56K 5%	1/4W
L520	1-412-531-31	INDUCTOR 33UH		R515	1-249-433-11	CARBON 22K 5%	1/4W
L1501	1-412-531-31	INDUCTOR 33UH		R516	1-249-419-11	CARBON 1.5K 5%	1/4W
L1503	1-412-531-31	INDUCTOR 33UH		R517	1-216-361-00	METAL OXIDE 0.22 5%	2W F
<TRANSISTOR>				R518	1-249-437-11	CARBON 47K 5%	1/4W
Q201	8-729-119-78	TRANSISTOR 2SC2785-HFE		R519	1-247-755-11	CARBON 1.8K 5%	1/2W F
Q202	8-729-119-78	TRANSISTOR 2SC2785-HFE		R520	1-249-441-11	CARBON 100K 5%	1/4W
Q501	8-729-011-07	TRANSISTOR 2SC4763(LBSONY)		R521	1-216-481-11	METAL OXIDE 1.2K 5%	3W F
Q502	8-729-140-97	TRANSISTOR 2SB734-34		R522	1-215-917-11	METAL OXIDE 1K 5%	3W F
Q503	8-729-011-06	TRANSISTOR 2SC3840K		R523	1-249-425-11	CARBON 4.7K 5%	1/4W
Q504	8-729-119-76	TRANSISTOR 2SA1175-HFE		R524	1-215-445-00	METAL 10K 1%	1/4W
Q505	8-729-119-76	TRANSISTOR 2SA1175-HFE		R526	1-249-401-11	CARBON 47 5%	1/4W
Q506	8-729-011-00	TRANSISTOR 2SK1916-53P87		R527	1-249-417-11	CARBON 1K 5%	1/4W
Q507	8-729-119-80	TRANSISTOR 2SC2688-LK		R528	1-247-903-00	CARBON 1M 5%	1/4W
Q508	8-729-119-78	TRANSISTOR 2SC2785-HFE		R529	1-249-429-11	CARBON 10K 5%	1/4W
Q509	8-729-119-76	TRANSISTOR 2SA1175-HFE		R530	1-215-457-00	METAL 33K 1%	1/4W
Q510	8-729-119-78	TRANSISTOR 2SC2785-HFE		R531	1-249-432-11	CARBON 18K 5%	1/4W
Q511	8-729-119-76	TRANSISTOR 2SA1175-HFE		R532	1-249-437-11	CARBON 47K 5%	1/4W
Q512	8-729-119-78	TRANSISTOR 2SC2785-HFE		R533	1-247-887-00	CARBON 220K 5%	1/4W
Q513	8-729-140-96	TRANSISTOR 2SD774-34		R534	1-215-472-00	METAL 130K 1%	1/4W
Q515	8-729-119-76	TRANSISTOR 2SA1175-HFE		R536	1-249-429-11	CARBON 10K 5%	1/4W
Q516	8-729-119-76	TRANSISTOR 2SA1175-HFE		R537	1-215-465-00	METAL 68K 1%	1/4W
Q1501	8-729-119-78	TRANSISTOR 2SC2785-HFE		R538	1-247-883-00	CARBON 150K 5%	1/4W
Q1502	8-729-119-78	TRANSISTOR 2SC2785-HFE		R539	1-249-425-11	CARBON 4.7K 5%	1/4W
<RESISTOR>				R540	1-249-437-11	CARBON 47K 5%	1/4W
R201	1-249-405-11	CARBON 100 5%	1/4W F	R541	1-249-397-11	CARBON 22 5%	1/4W F
R202	1-249-405-11	CARBON 100 5%	1/4W F	R542	1-215-888-00	METAL OXIDE 220 5%	2W F
R210	1-249-441-11	CARBON 100K 5%	1/4W	R543	1-249-411-11	CARBON 330 5%	1/4W
R211	1-249-425-11	CARBON 4.7K 5%	1/4W	R544	1-249-441-11	CARBON 100K 5%	1/4W
R214	1-249-377-11	CARBON 0.47 5%	1/4W F	R546	1-215-441-00	METAL 6.8K 1%	1/4W
R219	1-249-426-11	CARBON 5.6K 5%	1/4W	R547	1-249-441-11	CARBON 100K 5%	1/4W
R221	1-249-409-11	CARBON 220 5%	1/4W	R548	1-215-889-00	METAL OXIDE 330 5%	2W F
R222	1-249-434-11	CARBON 27K 5%	1/4W	R549	1-215-881-11	METAL OXIDE 15 5%	2W F
R223	1-249-433-11	CARBON 22K 5%	1/4W	R550	1-215-909-11	METAL OXIDE 47 5%	3W F
R224	1-249-409-11	CARBON 220 5%	1/4W	R551	1-247-743-11	CARBON 220 5%	1/2W F
R225	1-249-424-11	CARBON 3.9K 5%	1/4W	R552	1-249-389-11	CARBON 4.7 5%	1/4W F
R226	1-249-417-11	CARBON 1K 5%	1/4W	R553	1-249-377-11	CARBON 0.47 5%	1/4W F
R230	1-215-923-00	METAL OXIDE 10K 5%	3W F	R554	1-249-377-11	CARBON 0.47 5%	1/4W F
R231	1-249-409-11	CARBON 220 5%	1/4W F	R556	1-216-459-00	METAL OXIDE 2.7K 5%	2W F
R232	1-216-380-11	METAL OXIDE 8.2 5%	2W F	R558	1-259-882-11	CARBON 3.3M 5%	1/4W
R233	1-249-409-11	CARBON 220 5%	1/4W	R559	1-216-439-00	METAL OXIDE 12K 5%	1W F
R234	1-249-409-11	CARBON 220 5%	1/4W	R560	1-247-901-11	CARBON 820K 5%	1/4W
R235	1-249-409-11	CARBON 220 5%	1/4W	R561	1-249-410-11	CARBON 270 5%	1/4W
R236	1-249-409-11	CARBON 220 5%	1/4W	R562	1-215-450-00	METAL 16K 1%	1/4W
R237	1-249-409-11	CARBON 220 5%	1/4W	R564	1-215-475-00	METAL 180K 1%	1/4W
R238	1-249-409-11	CARBON 220 5%	1/4W	Δ R565		CARBON	1/4W
R239	1-249-409-11	CARBON 220 5%	1/4W	Δ R566		CARBON	1/4W
R240	1-249-482-11	CARBON 4.7 5%	1/2W F	R567	1-249-425-11	CARBON 4.7K 5%	1/4W
R501	1-249-431-11	CARBON 15K 5%	1/4W	R568	1-249-425-11	CARBON 4.7K 5%	1/4W
R502	1-249-431-11	CARBON 15K 5%	1/4W	R569	1-249-417-11	CARBON 1K 5%	1/4W
R504	1-215-869-11	METAL OXIDE 1K 5%	1W F	R570	1-249-402-11	CARBON 56 5%	1/4W
R505	1-215-449-00	METAL 15K 1%	1/4W	R572	1-249-393-11	CARBON 10 5%	1/4W F
R506	1-249-423-11	CARBON 3.3K 5%	1/4W	R573	1-249-393-11	CARBON 10 5%	1/4W F
R507	1-249-411-11	CARBON 330 5%	1/4W	R574	1-215-882-00	METAL OXIDE 22 5%	2W F
R508	1-249-435-11	CARBON 33K 5%	1/4W	R575	1-216-459-00	METAL OXIDE 2.7K 5%	2W F
R509	1-249-441-11	CARBON 100K 5%	1/4W	R576	1-249-417-11	CARBON 1K 5%	1/4W F
R510	1-249-409-11	CARBON 220 5%	1/4W F	R577	1-215-887-00	METAL OXIDE 150 5%	2W F
R511	1-249-398-11	CARBON 27 5%	1/4W F	R578	1-216-449-11	METAL OXIDE 56 5%	2W F
R512	1-249-423-11	CARBON 3.3K 5%	1/4W	R579	1-249-441-11	CARBON 100K 5%	1/4W
R513	1-249-425-11	CARBON 4.7K 5%	1/4W	R580	1-249-441-11	CARBON 100K 5%	1/4W
R583	1-249-441-11	CARBON 100K 5%	1/4W	R588	1-249-415-11	CARBON 680 5%	1/4W
R584	1-215-463-00	METAL 56K 1%	1/4W				
R587	1-249-441-11	CARBON 100K 5%	1/4W				
R588	1-249-415-11	CARBON 680 5%	1/4W				



Les composants identifiés par une trame et une marque **Δ** sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.


The components identified by shading and mark **Δ** are critical for safety. Replace only with part number specified.

REF.NO.	PART NO.	DESCRIPTION	REMARK	REF.NO.	PART NO.	DESCRIPTION	REMARK
R589	1-249-437-11	CARBON 47K 5%	1/4W	C021	1-163-239-11	CERAMIC CHIP 33PF	5% 50V
R590	1-249-431-11	CARBON 15K 5%	1/4W	C029	1-163-115-00	CERAMIC CHIP 82PF	5% 50V
R591	1-247-887-00	CARBON 220K 5%	1/4W	C030	1-163-115-00	CERAMIC CHIP 82PF	5% 50V
R592	1-249-429-11	CARBON 10K 5%	1/4W	C034	1-163-125-00	CERAMIC CHIP 220PF	5% 50V
R593	1-215-878-00	METAL OXIDE 33K 5%	1W F	C035	1-163-125-00	CERAMIC CHIP 220PF	5% 50V
R594	1-247-903-00	CARBON 1M 5%	1/4W	C036	1-163-125-00	CERAMIC CHIP 220PF	5% 50V
R595	1-249-440-11	CARBON 82K 5%	1/4W	C041	1-163-117-00	CERAMIC CHIP 100PF	5% 50V
R596	1-249-432-11	CARBON 18K 5%	1/4W	C042	1-163-117-00	CERAMIC CHIP 100PF	5% 50V
R597	1-249-437-11	CARBON 47K 5%	1/4W	C045	1-163-125-00	CERAMIC CHIP 220PF	5% 50V
R599	1-249-425-11	CARBON 4.7K 5%	1/4W	C047	1-124-261-00	ELECT 10MF	20% 50V
R1501	1-215-449-00	METAL 15K 1%	1/4W	C048	1-124-261-00	ELECT 10MF	20% 50V
R1502	1-215-433-00	METAL 3.3K 1%	1/4W	C049	1-124-261-00	ELECT 10MF	20% 50V
R1503	1-249-425-11	CARBON 4.7K 5%	1/4W	C055	1-163-809-11	CERAMIC CHIP 0.047MF	10% 25V
R1505	1-249-433-11	CARBON 22K 5%	1/4W	C064	1-163-121-00	CERAMIC CHIP 150PF	5% 50V
R1506	1-218-642-91	METAL OXIDE 100K 5%	1W F	C065	1-124-257-00	ELECT 2.2MF	20% 50V
R1507	1-249-436-11	CARBON 39K 5%	1/4W	<DIODE>			
R1508	1-215-453-00	METAL 22K 1%	1/4W	D001	8-719-404-46	DIODE MA110	
R1509	1-215-455-00	METAL 27K 1%	1/4W	D002	8-719-404-46	DIODE MA110	
R1510	1-249-383-11	CARBON 1.5 5%	1/4W F	D003	8-719-404-46	DIODE MA110	
R1511	1-215-888-00	METAL OXIDE 220 5%	2W F	D004	8-719-404-46	DIODE MA110	
R1512	1-216-369-00	METAL OXIDE 1 5%	2W F	D005	8-719-404-46	DIODE MA110	
R1513	1-249-436-11	CARBON 39K 5%	1/4W	D006	8-719-404-46	DIODE MA110	
R4002	1-249-385-11	CARBON 2.2 5%	1/4W F	D007	8-719-404-46	DIODE MA110	
R4003	1-216-361-00	METAL OXIDE 0.22 5%	2W F	D008	8-719-404-46	DIODE MA110	
R4004	1-216-374-00	METAL OXIDE 2.7 5%	2W F	D009	8-719-404-46	DIODE MA110	
R4006	1-216-396-11	METAL OXIDE 3.9 5%	3W F	D010	8-713-300-57	DIODE 1T33	
<SPARK GAP>				D011	8-719-404-46	DIODE MA110	
SG501	1-519-422-11	GAP, SPARK		D012	8-719-404-46	DIODE MA110	
<TRANSFORMER>				D015	8-719-404-46	DIODE MA110	
T501	Δ 1-453-126-11	TRANSFORMER ASSY, FLYBACK (NX-3000A3)		<IC>			
T502	Δ 1-460-199-11	TRANSFORMER (HLT)		IC001	8-759-095-47	IC TMC73C247-08	
T503	1-437-195-11	TRANSFORMER, HORIZONTAL DRIVE		IC002	8-759-403-44	IC MN1280-S	
T504	1-424-584-11	TRANSFORMER, DYNAMIC FOCUS		<COIL>			
<THERMISTOR>				L001	1-408-409-00	INDUCTOR 10UH	
THP150	1-807-925-11	THERMISTOR		L002	1-410-476-11	INDUCTOR 33UH	
<TUNER>				<CONNECTOR>			
TU101	Δ 1-693-102-11	TUNER (BTF-XA401)		M001	*1-573-965-11	PIN, CONNECTOR (PC BOARD) 50P	
*****				M39	*1-564-521-11	PLUG, CONNECTOR 6P	
*A-1306-417-A	M BOARD, COMPLETE	*****		M45	*1-564-523-11	PLUG, CONNECTOR 8P	
<CAPACITOR>				<TRANSISTOR>			
C001	1-124-261-00	ELECT 10MF	20% 50V	Q001	8-729-216-22	TRANSISTOR 2SA1162-G	
C002	1-163-125-00	CERAMIC CHIP 220PF	5% 50V	Q002	8-729-216-22	TRANSISTOR 2SA1162-G	
C003	1-136-161-00	FILM 0.047MF	5% 50V	Q003	8-729-216-22	TRANSISTOR 2SA1162-G	
C004	1-126-301-11	ELECT 1MF	20% 50V	Q004	8-729-920-74	TRANSISTOR 2SC2412K-QR	
C005	1-163-125-00	CERAMIC CHIP 220PF	5% 50V	Q005	8-729-920-74	TRANSISTOR 2SC2412K-QR	
C014	1-124-910-11	ELECT 47MF	20% 50V	Q006	8-729-216-22	TRANSISTOR 2SA1162-G	
C015	1-124-464-11	ELECT 0.22MF	20% 50V	Q007	8-729-216-22	TRANSISTOR 2SA1162-G	
C017	1-124-589-11	ELECT 47MF	20% 16V	Q008	8-729-920-74	TRANSISTOR 2SC2412K-QR	
C018	1-163-141-00	CERAMIC CHIP 0.001MF	5% 50V	Q009	8-729-920-74	TRANSISTOR 2SC2412K-QR	
C019	1-164-695-11	CERAMIC CHIP 0.0022MF	5% 50V	Q010	8-729-920-74	TRANSISTOR 2SC2412K-QR	
C020	1-163-241-11	CERAMIC CHIP 39PF	5% 50V	Q011	8-729-920-74	TRANSISTOR 2SC2412K-QR	
				Q012	8-729-920-74	TRANSISTOR 2SC2412K-QR	
				Q013	8-729-216-22	TRANSISTOR 2SA1162-G	
				Q014	8-729-920-74	TRANSISTOR 2SC2412K-QR	



REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
		<RESISTOR>					
R001	1-216-045-00	METAL GLAZE	680 5% 1/10W	R064	1-216-053-00	METAL GLAZE	1.5K 5% 1/10W
R002	1-216-097-00	METAL GLAZE	100K 5% 1/10W	R065	1-216-033-00	METAL GLAZE	220 5% 1/10W
R003	1-216-121-00	METAL GLAZE	1M 5% 1/10W	R066	1-216-033-00	METAL GLAZE	220 5% 1/10W
R004	1-216-073-00	METAL GLAZE	10K 5% 1/10W	R067	1-216-033-00	METAL GLAZE	220 5% 1/10W
R005	1-216-073-00	METAL GLAZE	10K 5% 1/10W	R068	1-216-033-00	METAL GLAZE	220 5% 1/10W
R006	1-216-065-00	METAL GLAZE	4.7K 5% 1/10W	R069	1-216-049-00	METAL GLAZE	1K 5% 1/10W
R007	1-216-027-00	METAL GLAZE	120 5% 1/10W	R070	1-216-033-00	METAL GLAZE	220 5% 1/10W
R008	1-216-041-00	METAL GLAZE	470 5% 1/10W	R071	1-216-033-00	METAL GLAZE	220 5% 1/10W
R009	1-216-027-00	METAL GLAZE	120 5% 1/10W	R072	1-216-033-00	METAL GLAZE	220 5% 1/10W
R011	1-216-033-00	METAL GLAZE	220 5% 1/10W	R073	1-216-057-00	METAL GLAZE	2.2K 5% 1/10W
R012	1-216-033-00	METAL GLAZE	220 5% 1/10W	R074	1-216-033-00	METAL GLAZE	220 5% 1/10W
R013	1-216-067-00	METAL GLAZE	5.6K 5% 1/10W	R075	1-216-033-00	METAL GLAZE	220 5% 1/10W
R014	1-216-057-00	METAL GLAZE	2.2K 5% 1/10W	R076	1-216-089-00	METAL GLAZE	47K 5% 1/10W
R015	1-216-089-00	METAL GLAZE	47K 5% 1/10W	R077	1-216-057-00	METAL GLAZE	2.2K 5% 1/10W
R016	1-216-067-00	METAL GLAZE	5.6K 5% 1/10W	R078	1-216-033-00	METAL GLAZE	220 5% 1/10W
R017	1-216-067-00	METAL GLAZE	5.6K 5% 1/10W	R079	1-216-025-00	METAL GLAZE	100 5% 1/10W
R018	1-216-065-00	METAL GLAZE	4.7K 5% 1/10W	R080	1-216-061-00	METAL GLAZE	3.3K 5% 1/10W
R019	1-216-073-00	METAL GLAZE	10K 5% 1/10W	R081	1-216-033-00	METAL GLAZE	220 5% 1/10W
R020	1-216-065-00	METAL GLAZE	4.7K 5% 1/10W	R082	1-216-033-00	METAL GLAZE	220 5% 1/10W
R021	1-216-097-00	METAL GLAZE	100K 5% 1/10W	R083	1-216-033-00	METAL GLAZE	220 5% 1/10W
R022	1-216-089-00	METAL GLAZE	47K 5% 1/10W	R084	1-216-097-00	METAL GLAZE	100K 5% 1/10W
R023	1-216-093-00	METAL GLAZE	68K 5% 1/10W	R085	1-216-033-00	METAL GLAZE	220 5% 1/10W
R024	1-216-065-00	METAL GLAZE	4.7K 5% 1/10W	R086	1-216-033-00	METAL GLAZE	220 5% 1/10W
R025	1-216-073-00	METAL GLAZE	10K 5% 1/10W	R087	1-216-033-00	METAL GLAZE	220 5% 1/10W
R026	1-216-081-00	METAL GLAZE	22K 5% 1/10W	R088	1-216-033-00	METAL GLAZE	220 5% 1/10W
R027	1-216-041-00	METAL GLAZE	470 5% 1/10W	R089	1-216-089-00	METAL GLAZE	47K 5% 1/10W
R028	1-216-023-00	METAL GLAZE	82 5% 1/10W	R090	1-216-033-00	METAL GLAZE	220 5% 1/10W
R029	1-216-097-00	METAL GLAZE	100K 5% 1/10W	R091	1-216-065-00	METAL GLAZE	4.7K 5% 1/10W
R030	1-216-097-00	METAL GLAZE	100K 5% 1/10W	R093	1-216-065-00	METAL GLAZE	4.7K 5% 1/10W
R031	1-216-089-00	METAL GLAZE	47K 5% 1/10W	R094	1-216-033-00	METAL GLAZE	220 5% 1/10W
R032	1-216-089-00	METAL GLAZE	47K 5% 1/10W	R095	1-216-073-00	METAL GLAZE	10K 5% 1/10W
R033	1-216-073-00	METAL GLAZE	10K 5% 1/10W	R096	1-216-065-00	METAL GLAZE	4.7K 5% 1/10W
R034	1-216-033-00	METAL GLAZE	220 5% 1/10W	R097	1-216-065-00	METAL GLAZE	4.7K 5% 1/10W
R035	1-216-033-00	METAL GLAZE	220 5% 1/10W	R098	1-216-065-00	METAL GLAZE	4.7K 5% 1/10W
R036	1-216-033-00	METAL GLAZE	220 5% 1/10W	R099	1-216-089-00	METAL GLAZE	47K 5% 1/10W
R037	1-216-073-00	METAL GLAZE	10K 5% 1/10W	R100	1-216-025-00	METAL GLAZE	100 5% 1/10W
R038	1-216-033-00	METAL GLAZE	220 5% 1/10W	R101	1-216-025-00	METAL GLAZE	100 5% 1/10W
R039	1-216-073-00	METAL GLAZE	10K 5% 1/10W	R102	1-216-089-00	METAL GLAZE	47K 5% 1/10W
R040	1-216-089-00	METAL GLAZE	47K 5% 1/10W	R103	1-216-033-00	METAL GLAZE	220 5% 1/10W
R041	1-216-073-00	METAL GLAZE	10K 5% 1/10W	R104	1-216-033-00	METAL GLAZE	220 5% 1/10W
R042	1-216-065-00	METAL GLAZE	4.7K 5% 1/10W			<CRYSTAL>	
R043	1-216-033-00	METAL GLAZE	220 5% 1/10W	X001	1-579-743-11	VIBRATOR, CRYSTAL	
R044	1-216-033-00	METAL GLAZE	220 5% 1/10W			*****	
R045	1-216-025-00	METAL GLAZE	100 5% 1/10W			*A-1346-059-A E1 BOARD, COMPLETE	
R046	1-216-065-00	METAL GLAZE	4.7K 5% 1/10W			*****	
R047	1-216-065-00	METAL GLAZE	4.7K 5% 1/10W			<CAPACITOR>	
R048	1-216-033-00	METAL GLAZE	220 5% 1/10W	C301	1-163-010-11	CERAMIC CHIP	0.0012MF 10% 50V
R049	1-216-065-00	METAL GLAZE	4.7K 5% 1/10W	C303	1-126-157-11	ELECT	10MF 20% 16V
R050	1-216-295-00	METAL GLAZE	0 5% 1/10W	C304	1-164-232-11	CERAMIC CHIP	0.01MF 10% 50V
R051	1-216-033-00	METAL GLAZE	220 5% 1/10W	C305	1-163-251-11	CERAMIC CHIP	100PF 5% 50V
R052	1-216-065-00	METAL GLAZE	4.7K 5% 1/10W	C306	1-102-971-00	CERAMIC	82PF 5% 50V
R053	1-216-065-00	METAL GLAZE	4.7K 5% 1/10W	C309	1-164-505-11	CERAMIC CHIP	2.2MF 16V
R054	1-216-073-00	METAL GLAZE	10K 5% 1/10W	C310	1-163-109-00	CERAMIC CHIP	47PF 5% 50V
R055	1-216-073-00	METAL GLAZE	10K 5% 1/10W	C314	1-124-915-11	ELECT	10MF 20% 16V
R056	1-216-065-00	METAL GLAZE	4.7K 5% 1/10W	C315	1-164-505-11	CERAMIC CHIP	2.2MF 16V
R057	1-216-065-00	METAL GLAZE	4.7K 5% 1/10W	C319	1-126-157-11	ELECT	10MF 20% 16V
R058	1-216-065-00	METAL GLAZE	4.7K 5% 1/10W	C320	1-124-465-00	ELECT	0.47MF 20% 50V
R059	1-216-073-00	METAL GLAZE	10K 5% 1/10W	C321	1-163-125-00	CERAMIC CHIP	220PF 5% 50V
R060	1-216-065-00	METAL GLAZE	4.7K 5% 1/10W	C322	1-163-003-11	CERAMIC CHIP	330PF 10% 50V
R063	1-216-033-00	METAL GLAZE	220 5% 1/10W				

REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
Q330	8-729-925-79	TRANSISTOR 1MX3		R371	1-216-033-00	METAL GLAZE 220 5%	1/10W
Q333	8-729-925-79	TRANSISTOR 1MX3		R372	1-216-031-00	METAL GLAZE 180 5%	1/10W
Q334	8-729-920-74	TRANSISTOR 2SC2412K-QR		R373	1-216-671-11	METAL CHIP 6.8K 0.50%	1/10W
Q335	8-729-907-46	TRANSISTOR 1MZ1		R374	1-216-037-00	METAL GLAZE 330 5%	1/10W
Q340	8-729-920-74	TRANSISTOR 2SC2412K-QR		R375	1-216-037-00	METAL GLAZE 330 5%	1/10W
Q342	8-729-925-79	TRANSISTOR 1MX3		R376	1-216-037-00	METAL GLAZE 330 5%	1/10W
Q344	8-729-216-22	TRANSISTOR 2SA1162-G		R377	1-216-033-00	METAL GLAZE 220 5%	1/10W
<RESISTOR>				R378	1-216-033-00	METAL GLAZE 220 5%	1/10W
R301	1-216-025-00	METAL GLAZE 100 5%	1/10W	R379	1-216-033-00	METAL GLAZE 220 5%	1/10W
R302	1-216-057-00	METAL GLAZE 2.2K 5%	1/10W	R380	1-216-033-00	METAL GLAZE 220 5%	1/10W
R303	1-216-079-00	METAL GLAZE 18K 5%	1/10W	R381	1-216-033-00	METAL GLAZE 220 5%	1/10W
R304	1-216-081-00	METAL GLAZE 22K 5%	1/10W	R382	1-216-033-00	METAL GLAZE 220 5%	1/10W
R305	1-216-069-00	METAL GLAZE 6.8K 5%	1/10W	R383	1-216-653-11	METAL CHIP 1.2K 0.50%	1/10W
R306	1-216-081-00	METAL GLAZE 22K 5%	1/10W	R384	1-216-041-00	METAL GLAZE 470 5%	1/10W
R307	1-216-089-00	METAL GLAZE 47K 5%	1/10W	R385	1-216-081-00	METAL GLAZE 22K 5%	1/10W
R308	1-216-037-00	METAL GLAZE 330 5%	1/10W	R386	1-216-687-11	METAL CHIP 33K 0.50%	1/10W
R309	1-216-073-00	METAL GLAZE 10K 5%	1/10W	R387	1-216-033-00	METAL GLAZE 220 5%	1/10W
R310	1-216-065-00	METAL GLAZE 4.7K 5%	1/10W	R388	1-216-033-00	METAL GLAZE 220 5%	1/10W
R312	1-216-043-00	METAL GLAZE 560 5%	1/10W	R389	1-216-081-00	METAL GLAZE 22K 5%	1/10W
R313	1-216-035-00	METAL GLAZE 270 5%	1/10W	R390	1-216-033-00	METAL GLAZE 220 5%	1/10W
R314	1-216-061-00	METAL GLAZE 3.3K 5%	1/10W	R391	1-216-049-00	METAL GLAZE 1K 5%	1/10W
R316	1-216-035-00	METAL GLAZE 270 5%	1/10W	R393	1-216-051-00	METAL GLAZE 1.2K 5%	1/10W
R317	1-216-121-00	METAL GLAZE 1M 5%	1/10W	R394	1-216-109-00	METAL GLAZE 330K 5%	1/10W
R320	1-216-039-00	METAL GLAZE 390 5%	1/10W	R395	1-216-071-00	METAL GLAZE 8.2K 5%	1/10W
R325	1-216-033-00	METAL GLAZE 220 5%	1/10W	R396	1-216-105-00	METAL GLAZE 220K 5%	1/10W
R326	1-216-057-00	METAL GLAZE 2.2K 5%	1/10W	R397	1-216-081-00	METAL GLAZE 22K 5%	1/10W
R331	1-216-017-00	METAL GLAZE 47 5%	1/10W	R398	1-216-081-00	METAL GLAZE 22K 5%	1/10W
R332	1-216-657-11	METAL CHIP 1.8K 0.50%	1/10W	R399	1-216-077-00	METAL GLAZE 15K 5%	1/10W
R333	1-216-051-00	METAL GLAZE 1.2K 5%	1/10W	R1301	1-216-049-00	METAL GLAZE 1K 5%	1/10W
R336	1-216-047-00	METAL GLAZE 820 5%	1/10W	R1302	1-216-045-00	METAL GLAZE 680 5%	1/10W
R338	1-216-043-00	METAL GLAZE 560 5%	1/10W	R1303	1-216-085-00	METAL GLAZE 33K 5%	1/10W
R339	1-216-047-00	METAL GLAZE 820 5%	1/10W	R1304	1-216-081-00	METAL GLAZE 22K 5%	1/10W
R340	1-216-651-11	METAL CHIP 1K 0.50%	1/10W	R1305	1-216-025-00	METAL GLAZE 100 5%	1/10W
R341	1-216-043-00	METAL GLAZE 560 5%	1/10W	R1306	1-216-057-00	METAL GLAZE 2.2K 5%	1/10W
R343	1-216-077-00	METAL GLAZE 15K 5%	1/10W	R1307	1-216-073-00	METAL GLAZE 10K 5%	1/10W
R344	1-216-081-00	METAL GLAZE 22K 5%	1/10W	R1308	1-216-065-00	METAL GLAZE 4.7K 5%	1/10W
R345	1-216-292-11	METAL GLAZE 8.2M 5%	1/8W	R1309	1-216-025-00	METAL GLAZE 100 5%	1/10W
R346	1-216-081-00	METAL GLAZE 22K 5%	1/10W	R1310	1-216-045-00	METAL GLAZE 680 5%	1/10W
R347	1-216-081-00	METAL GLAZE 22K 5%	1/10W	R1311	1-216-049-00	METAL GLAZE 1K 5%	1/10W
R348	1-216-049-00	METAL GLAZE 1K 5%	1/10W	R1312	1-216-073-00	METAL GLAZE 10K 5%	1/10W
R349	1-216-295-00	METAL GLAZE 0 5%	1/10W	R1313	1-216-081-00	METAL GLAZE 22K 5%	1/10W
R350	1-216-089-00	METAL GLAZE 47K 5%	1/10W	R1314	1-216-065-00	METAL GLAZE 4.7K 5%	1/10W
R351	1-216-674-11	METAL CHIP 9.1K 0.50%	1/10W	R1315	1-216-049-00	METAL GLAZE 1K 5%	1/10W
R352	1-216-011-00	METAL GLAZE 27 5%	1/10W	R1316	1-216-081-00	METAL GLAZE 22K 5%	1/10W
R353	1-216-001-00	METAL GLAZE 10 5%	1/10W	R1317	1-216-073-00	METAL GLAZE 10K 5%	1/10W
R354	1-216-049-00	METAL GLAZE 1K 5%	1/10W	R1318	1-216-065-00	METAL GLAZE 4.7K 5%	1/10W
R355	1-216-001-00	METAL GLAZE 10 5%	1/10W	R1319	1-216-065-00	METAL GLAZE 4.7K 5%	1/10W
R356	1-216-001-00	METAL GLAZE 10 5%	1/10W	R1320	1-216-063-00	METAL GLAZE 3.9K 5%	1/10W
R357	1-216-049-00	METAL GLAZE 1K 5%	1/10W	R1321	1-216-081-00	METAL GLAZE 22K 5%	1/10W
R358	1-216-049-00	METAL GLAZE 1K 5%	1/10W	R1322	1-216-061-00	METAL GLAZE 3.3K 5%	1/10W
R359	1-216-049-00	METAL GLAZE 1K 5%	1/10W	R1323	1-216-089-00	METAL GLAZE 47K 5%	1/10W
R360	1-216-119-00	METAL GLAZE 820K 5%	1/10W	R1324	1-216-045-00	METAL GLAZE 680 5%	1/10W
R361	1-216-025-00	METAL GLAZE 100 5%	1/10W	R1325	1-216-025-00	METAL GLAZE 100 5%	1/10W
R362	1-216-079-00	METAL GLAZE 18K 5%	1/10W	R1326	1-216-073-00	METAL GLAZE 10K 5%	1/10W
R363	1-216-295-00	METAL GLAZE 0 5%	1/10W	R1327	1-216-033-00	METAL GLAZE 220 5%	1/10W
R364	1-216-045-00	METAL GLAZE 680 5%	1/10W	R1328	1-216-033-00	METAL GLAZE 220 5%	1/10W
R365	1-216-025-00	METAL GLAZE 100 5%	1/10W	R1329	1-216-077-00	METAL GLAZE 15K 5%	1/10W
R366	1-216-001-00	METAL GLAZE 10 5%	1/10W	R1330	1-216-081-00	METAL GLAZE 22K 5%	1/10W
R367	1-216-045-00	METAL GLAZE 680 5%	1/10W	R1331	1-216-081-00	METAL GLAZE 22K 5%	1/10W
R368	1-216-001-00	METAL GLAZE 10 5%	1/10W	R1332	1-216-093-00	METAL GLAZE 68K 5%	1/10W
R369	1-216-033-00	METAL GLAZE 220 5%	1/10W	R1333	1-216-129-00	METAL GLAZE 2.2M 5%	1/10W
R370	1-216-033-00	METAL GLAZE 220 5%	1/10W	R1334	1-216-097-00	METAL GLAZE 100K 5%	1/10W
				R1335	1-216-089-00	METAL GLAZE 47K 5%	1/10W



REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
R1336	1-216-089-00	METAL GLAZE 47K 5%	1/10W	C2313	1-163-133-00	CERAMIC CHIP 470PF	5% 50V
R1337	1-216-065-00	METAL GLAZE 4.7K 5%	1/10W	C2314	1-164-232-11	CERAMIC CHIP 0.01MF	10% 50V
R1338	1-216-089-00	METAL GLAZE 47K 5%	1/10W				
R1339	1-216-089-00	METAL GLAZE 47K 5%	1/10W	C2318	1-164-232-11	CERAMIC CHIP 0.01MF	10% 50V
R1340	1-216-073-00	METAL GLAZE 10K 5%	1/10W	C2320	1-124-589-11	ELECT 47MF	20% 16V
				C2321	1-163-017-00	CERAMIC CHIP 0.0047MF	10% 50V
R1342	1-216-033-00	METAL GLAZE 220 5%	1/10W	C2322	1-124-234-00	ELECT 22MF	20% 16V
R1343	1-216-105-00	METAL GLAZE 220K 5%	1/10W	C2323	1-124-234-00	ELECT 22MF	20% 16V
R1344	1-216-091-00	METAL GLAZE 56K 5%	1/10W				
R1345	1-216-101-00	METAL GLAZE 150K 5%	1/10W	C2324	1-124-234-00	ELECT 22MF	20% 16V
R1346	1-216-049-00	METAL GLAZE 1K 5%	1/10W	C2325	1-164-232-11	CERAMIC CHIP 0.01MF	10% 50V
				C2326	1-124-589-11	ELECT 47MF	20% 16V
R1347	1-216-049-00	METAL GLAZE 1K 5%	1/10W	C2327	1-164-505-11	CERAMIC CHIP 2.2MF	16V
R1348	1-216-049-00	METAL GLAZE 1K 5%	1/10W	C2328	1-164-232-11	CERAMIC CHIP 0.01MF	10% 50V
R1349	1-216-073-00	METAL GLAZE 10K 5%	1/10W				
R1350	1-216-091-00	METAL GLAZE 56K 5%	1/10W	C2329	1-164-232-11	CERAMIC CHIP 0.01MF	10% 50V
R1351	1-216-049-00	METAL GLAZE 1K 5%	1/10W	C2331	1-164-232-11	CERAMIC CHIP 0.01MF	10% 50V
				C2332	1-124-234-00	ELECT 22MF	20% 16V
R1352	1-216-039-00	METAL GLAZE 390 5%	1/10W	C2333	1-124-234-00	ELECT 22MF	20% 16V
R1353	1-216-053-00	METAL GLAZE 1.5K 5%	1/10W	C2334	1-164-232-11	CERAMIC CHIP 0.01MF	10% 50V
R1354	1-216-081-00	METAL GLAZE 22K 5%	1/10W				
R1355	1-216-017-00	METAL GLAZE 47 5%	1/10W	C2335	1-164-232-11	CERAMIC CHIP 0.01MF	10% 50V
R1356	1-216-057-00	METAL GLAZE 2.2K 5%	1/10W	C2336	1-126-163-11	ELECT 4.7MF	20% 16V
				C2337	1-164-232-11	CERAMIC CHIP 0.01MF	10% 50V
R1357	1-216-081-00	METAL GLAZE 22K 5%	1/10W	C2338	1-164-232-11	CERAMIC CHIP 0.01MF	10% 50V
R1358	1-216-033-00	METAL GLAZE 220 5%	1/10W	C2340	1-163-251-11	CERAMIC CHIP 100PF	5% 50V
R1362	1-216-105-00	METAL GLAZE 220K 5%	1/10W				
R1363	1-216-041-00	METAL GLAZE 470 5%	1/10W	C2345	1-164-505-11	CERAMIC CHIP 2.2MF	16V
R1364	1-216-053-00	METAL GLAZE 1.5K 5%	1/10W	C2346	1-164-232-11	CERAMIC CHIP 0.01MF	10% 50V
				C2347	1-163-367-11	CERAMIC CHIP 39PF	5% 50V
R1373	1-216-049-00	METAL GLAZE 1K 5%	1/10W	C2349	1-164-505-11	CERAMIC CHIP 2.2MF	16V
R1374	1-216-025-00	METAL GLAZE 100 5%	1/10W	C2350	1-164-232-11	CERAMIC CHIP 0.01MF	10% 50V
R1379	1-216-079-00	METAL GLAZE 18K 5%	1/10W				
R1380	1-216-075-00	METAL GLAZE 12K 5%	1/10W	C2351	1-164-505-11	CERAMIC CHIP 2.2MF	16V
R1381	1-216-041-00	METAL GLAZE 470 5%	1/10W	C2352	1-164-505-11	CERAMIC CHIP 2.2MF	16V
				C2353	1-164-232-11	CERAMIC CHIP 0.01MF	10% 50V
R1382	1-216-079-00	METAL GLAZE 18K 5%	1/10W	C2354	1-164-232-11	CERAMIC CHIP 0.01MF	10% 50V
R1383	1-216-077-00	METAL GLAZE 15K 5%	1/10W	C2357	1-126-301-11	ELECT 1MF	20% 50V
R1384	1-216-049-00	METAL GLAZE 1K 5%	1/10W				
R1385	1-216-037-00	METAL GLAZE 330 5%	1/10W	C2360	1-163-109-00	CERAMIC CHIP 47PF	5% 50V
R1386	1-216-037-00	METAL GLAZE 330 5%	1/10W				
						<DIODE>	
R1387	1-216-045-00	METAL GLAZE 680 5%	1/10W	D2301	8-719-018-27	DIODE MA5091	
R1388	1-216-001-00	METAL GLAZE 10 5%	1/10W	D2302	8-719-018-27	DIODE MA5091	
R1389	1-216-097-00	METAL GLAZE 100K 5%	1/10W	D2303	8-719-018-27	DIODE MA5091	
R1390	1-216-097-00	METAL GLAZE 100K 5%	1/10W	D2304	8-719-018-27	DIODE MA5091	
R1391	1-216-097-00	METAL GLAZE 100K 5%	1/10W	D2305	8-719-018-27	DIODE MA5091	
R1392	1-216-081-00	METAL GLAZE 22K 5%	1/10W	D2306	8-719-404-46	DIODE MA110	
R1394	1-216-081-00	METAL GLAZE 22K 5%	1/10W	D2307	8-719-946-98	DIODE FMN1	
R1395	1-216-081-00	METAL GLAZE 22K 5%	1/10W	D2308	8-719-946-98	DIODE FMN1	
R1396	1-216-121-00	METAL GLAZE 1M 5%	1/10W	D2309	8-719-404-46	DIODE MA110	
R1399	1-216-065-00	METAL GLAZE 4.7K 5%	1/10W	D2312	8-719-404-46	DIODE MA110	
R5301	1-216-057-00	METAL GLAZE 2.2K 5%	1/10W	D2313	8-719-404-46	DIODE MA110	
R5302	1-216-073-00	METAL GLAZE 10K 5%	1/10W	D2314	8-713-300-57	DIODE 1T33	
R5303	1-216-073-00	METAL GLAZE 10K 5%	1/10W	D2317	8-719-404-46	DIODE MA110	
R5304	1-216-085-00	METAL GLAZE 33K 5%	1/10W				
R5305	1-216-085-00	METAL GLAZE 33K 5%	1/10W				
						<CONNECTOR>	
		<CRYSTAL>		E2-002*1-573-965-11		PIN, CONNECTOR (PC BOARD) 50P	
X301	1-567-505-11	OSCILLATOR, CRYSTAL		E2-25 *1-564-521-11		PLUG, CONNECTOR 6P	
		*****		E2-26 *1-564-522-11		PLUG, CONNECTOR 7P	
		*A-1346-060-A E2 BOARD, COMPLETE		E2-46 *1-564-518-11		PLUG, CONNECTOR 3P	

		<CAPACITOR>				<IC>	
C2302	1-163-009-11	CERAMIC CHIP 0.001MF	10% 50V	IC2301	8-759-066-52	IC PCA8510T/012-T	
C2303	1-164-232-11	CERAMIC CHIP 0.01MF	10% 50V	IC2303	8-759-925-75	IC SN74HC05ANS	
C2310	1-163-105-00	CERAMIC CHIP 33PF	5% 50V	IC2304	8-752-037-15	IC CXA1387S	
				IC2306	8-759-011-65	IC MC74HC4053F	
				IC2307	8-752-058-68	IC CXA1315M	

REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
		<COIL>		R2325	1-216-049-00	METAL GLAZE 1K 5%	1/10W
				R2326	1-216-061-00	METAL GLAZE 3.3K 5%	1/10W
				R2327	1-216-063-00	METAL GLAZE 3.9K 5%	1/10W
L2304	1-408-414-00	INDUCTOR 27UH		R2328	1-216-049-00	METAL GLAZE 1K 5%	1/10W
		<TRANSISTOR>		R2329	1-216-049-00	METAL GLAZE 1K 5%	1/10W
Q2301	8-729-903-10	TRANSISTOR FMW1		R2330	1-216-061-00	METAL GLAZE 3.3K 5%	1/10W
Q2303	8-729-403-27	TRANSISTOR XN4401		R2331	1-216-063-00	METAL GLAZE 3.9K 5%	1/10W
Q2304	8-729-925-79	TRANSISTOR IMX3		R2332	1-216-025-00	METAL GLAZE 100 5%	1/10W
Q2305	8-729-903-10	TRANSISTOR FMW1					
Q2306	8-729-403-27	TRANSISTOR XN4401		R2333	1-216-067-00	METAL GLAZE 5.6K 5%	1/10W
Q2307	8-729-403-27	TRANSISTOR XN4401		R2334	1-216-295-00	METAL GLAZE 0 5%	1/10W
Q2308	8-729-403-27	TRANSISTOR XN4401		R2335	1-216-295-00	METAL GLAZE 0 5%	1/10W
Q2309	8-729-903-10	TRANSISTOR FMW1		R2336	1-216-295-00	METAL GLAZE 0 5%	1/10W
Q2310	8-729-403-27	TRANSISTOR XN4401		R2337	1-216-033-00	METAL GLAZE 220 5%	1/10W
Q2311	8-729-903-10	TRANSISTOR FMW1					
Q2312	8-729-403-27	TRANSISTOR XN4401		R2338	1-216-081-00	METAL GLAZE 22K 5%	1/10W
Q2313	8-729-903-10	TRANSISTOR FMW1		R2339	1-216-081-00	METAL GLAZE 22K 5%	1/10W
Q2314	8-729-403-27	TRANSISTOR XN4401		R2340	1-216-049-00	METAL GLAZE 1K 5%	1/10W
Q2315	8-729-903-10	TRANSISTOR FMW1		R2341	1-216-041-00	METAL GLAZE 470 5%	1/10W
Q2317	8-729-216-22	TRANSISTOR 2SA1162-G		R2342	1-216-049-00	METAL GLAZE 1K 5%	1/10W
Q2318	8-729-216-22	TRANSISTOR 2SA1162-G					
Q2319	8-729-216-22	TRANSISTOR 2SA1162-G		R2343	1-216-049-00	METAL GLAZE 1K 5%	1/10W
Q2320	8-729-920-74	TRANSISTOR 2SC2412K-QR		R2344	1-216-033-00	METAL GLAZE 220 5%	1/10W
Q2321	8-729-920-74	TRANSISTOR 2SC2412K-QR		R2345	1-216-073-00	METAL GLAZE 10K 5%	1/10W
Q2322	8-729-920-74	TRANSISTOR 2SC2412K-QR		R2346	1-216-049-00	METAL GLAZE 1K 5%	1/10W
Q2324	8-729-216-22	TRANSISTOR 2SA1162-G		R2347	1-216-089-00	METAL GLAZE 47K 5%	1/10W
Q2326	8-729-920-74	TRANSISTOR 2SC2412K-QR					
Q2327	8-729-920-74	TRANSISTOR 2SC2412K-QR		R2350	1-216-073-00	METAL GLAZE 10K 5%	1/10W
Q2330	8-729-903-10	TRANSISTOR FMW1		R2351	1-216-033-00	METAL GLAZE 220 5%	1/10W
Q2337	8-729-925-79	TRANSISTOR IMX3		R2352	1-216-073-00	METAL GLAZE 10K 5%	1/10W
Q2338	8-729-920-74	TRANSISTOR 2SC2412K-QR		R2353	1-216-073-00	METAL GLAZE 10K 5%	1/10W
Q2339	8-729-920-74	TRANSISTOR 2SC2412K-QR		R2354	1-216-178-00	METAL GLAZE 150 5%	1/8W
Q2340	8-729-920-74	TRANSISTOR 2SC2412K-QR					
Q2341	8-729-920-74	TRANSISTOR 2SC2412K-QR		R2355	1-216-178-00	METAL GLAZE 150 5%	1/8W
Q2342	8-729-920-74	TRANSISTOR 2SC2412K-QR		R2356	1-216-677-11	METAL CHIP 12K 0.50%	1/10W
Q2345	8-729-920-74	TRANSISTOR 2SC2412K-QR		R2357	1-216-670-11	METAL CHIP 6.2K 0.50%	1/10W
		<RESISTOR>		R2359	1-216-053-00	METAL GLAZE 1.5K 5%	1/10W
R2302	1-216-025-00	METAL GLAZE 100 5%	1/10W	R2360	1-216-053-00	METAL GLAZE 1.5K 5%	1/10W
R2303	1-216-049-00	METAL GLAZE 1K 5%	1/10W				
R2304	1-216-025-00	METAL GLAZE 100 5%	1/10W	R2361	1-216-053-00	METAL GLAZE 1.5K 5%	1/10W
R2305	1-216-033-00	METAL GLAZE 220 5%	1/10W	R2362	1-216-053-00	METAL GLAZE 1.5K 5%	1/10W
R2306	1-216-045-00	METAL GLAZE 680 5%	1/10W	R2363	1-216-041-00	METAL GLAZE 470 5%	1/10W
R2307	1-216-045-00	METAL GLAZE 680 5%	1/10W	R2364	1-216-053-00	METAL GLAZE 1.5K 5%	1/10W
R2308	1-216-045-00	METAL GLAZE 680 5%	1/10W	R2365	1-216-053-00	METAL GLAZE 1.5K 5%	1/10W
R2309	1-216-041-00	METAL GLAZE 470 5%	1/10W				
R2310	1-216-055-00	METAL GLAZE 1.8K 5%	1/10W	R2366	1-216-081-00	METAL GLAZE 22K 5%	1/10W
R2311	1-216-025-00	METAL GLAZE 100 5%	1/10W	R2367	1-216-043-00	METAL GLAZE 560 5%	1/10W
R2312	1-216-043-00	METAL GLAZE 560 5%	1/10W	R2368	1-216-081-00	METAL GLAZE 22K 5%	1/10W
R2313	1-216-055-00	METAL GLAZE 1.8K 5%	1/10W	R2371	1-216-057-00	METAL GLAZE 2.2K 5%	1/10W
R2314	1-216-061-00	METAL GLAZE 3.3K 5%	1/10W	R2374	1-216-067-00	METAL GLAZE 5.6K 5%	1/10W
R2315	1-216-081-00	METAL GLAZE 22K 5%	1/10W				
R2317	1-216-041-00	METAL GLAZE 470 5%	1/10W	R2375	1-216-081-00	METAL GLAZE 22K 5%	1/10W
R2318	1-216-055-00	METAL GLAZE 1.8K 5%	1/10W	R2376	1-216-081-00	METAL GLAZE 22K 5%	1/10W
R2319	1-216-079-00	METAL GLAZE 18K 5%	1/10W	R2377	1-216-025-00	METAL GLAZE 100 5%	1/10W
R2320	1-216-061-00	METAL GLAZE 3.3K 5%	1/10W	R2378	1-216-025-00	METAL GLAZE 100 5%	1/10W
R2321	1-216-063-00	METAL GLAZE 3.9K 5%	1/10W	R2379	1-216-043-00	METAL GLAZE 560 5%	1/10W
R2322	1-216-049-00	METAL GLAZE 1K 5%	1/10W				
R2323	1-216-067-00	METAL GLAZE 5.6K 5%	1/10W	R2380	1-216-043-00	METAL GLAZE 560 5%	1/10W
R2324	1-216-049-00	METAL GLAZE 1K 5%	1/10W	R2381	1-216-043-00	METAL GLAZE 560 5%	1/10W
				R2382	1-216-073-00	METAL GLAZE 10K 5%	1/10W
				R2384	1-216-081-00	METAL GLAZE 22K 5%	1/10W
				R2385	1-216-075-00	METAL GLAZE 12K 5%	1/10W
				R2386	1-216-049-00	METAL GLAZE 1K 5%	1/10W
				R2387	1-216-025-00	METAL GLAZE 100 5%	1/10W
				R2388	1-216-017-00	METAL GLAZE 47 5%	1/10W
				R2390	1-216-043-00	METAL GLAZE 560 5%	1/10W
				R2393	1-216-017-00	METAL GLAZE 47 5%	1/10W
				R2394	1-216-049-00	METAL GLAZE 1K 5%	1/10W
				R2395	1-216-001-00	METAL GLAZE 10 5%	1/10W
				R2397	1-216-043-00	METAL GLAZE 560 5%	1/10W
				R2399	1-216-001-00	METAL GLAZE 10 5%	1/10W
				R3301	1-216-049-00	METAL GLAZE 1K 5%	1/10W

E2 Y2

REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
R3302	1-216-001-00	METAL GLAZE 10 5%	1/10W	C401	1-124-234-00	ELECT 22MF	20% 16V
R3303	1-216-069-00	METAL GLAZE 6.8K 5%	1/10W	C424	1-126-301-11	ELECT 1MF	20% 50V
R3304	1-216-091-00	METAL GLAZE 56K 5%	1/10W	C425	1-126-301-11	ELECT 1MF	20% 50V
R3306	1-216-089-00	METAL GLAZE 47K 5%	1/10W	C426	1-126-301-11	ELECT 1MF	20% 50V
R3307	1-216-085-00	METAL GLAZE 33K 5%	1/10W	C427	1-124-465-00	ELECT 0.47MF	20% 50V
R3308	1-216-043-00	METAL GLAZE 560 5%	1/10W	C428	1-126-163-11	ELECT 4.7MF	20% 50V
R3309	1-216-049-00	METAL GLAZE 1K 5%	1/10W	C429	1-124-478-11	ELECT 100MF	20% 25V
R3310	1-216-001-00	METAL GLAZE 10 5%	1/10W	C430	1-124-261-00	ELECT 10MF	20% 50V
R3311	1-216-081-00	METAL GLAZE 22K 5%	1/10W	C431	1-126-301-11	ELECT 1MF	20% 50V
R3312	1-216-049-00	METAL GLAZE 1K 5%	1/10W	C432	1-126-301-11	ELECT 1MF	20% 50V
R3313	1-216-083-00	METAL GLAZE 27K 5%	1/10W	C433	1-131-347-00	TANTALUM 1MF	20% 16V
R3314	1-216-689-11	METAL GLAZE 39K 5%	1/10W	C434	1-126-301-11	ELECT 1MF	20% 50V
R3315	1-216-077-00	METAL GLAZE 15K 5%	1/10W	C435	1-130-309-00	FILM 0.033MF	5% 100V
R3316	1-216-077-00	METAL GLAZE 15K 5%	1/10W	C436	1-126-301-11	ELECT 1MF	20% 50V
R3318	1-216-091-00	METAL GLAZE 56K 5%	1/10W	C437	1-130-487-00	MYLAR 0.022MF	5% 50V
R3319	1-216-081-00	METAL GLAZE 22K 5%	1/10W	C438	1-126-301-11	ELECT 1MF	20% 50V
R3320	1-216-017-00	METAL GLAZE 47 5%	1/10W	C439	1-124-034-51	ELECT 33MF	20% 16V
R3321	1-216-079-00	METAL GLAZE 18K 5%	1/10W	C440	1-126-301-11	ELECT 1MF	20% 50V
R3323	1-216-091-00	METAL GLAZE 56K 5%	1/10W	C441	1-126-301-11	ELECT 1MF	20% 50V
R3324	1-216-049-00	METAL GLAZE 1K 5%	1/10W	C442	1-124-261-00	ELECT 10MF	20% 50V
R3325	1-216-025-00	METAL GLAZE 100 5%	1/10W	C443	1-124-589-11	ELECT 47MF	20% 16V
R3328	1-216-001-00	METAL GLAZE 10 5%	1/10W	C444	1-126-163-11	ELECT 4.7MF	20% 50V
R3330	1-216-033-00	METAL GLAZE 220 5%	1/10W	C445	1-126-163-11	ELECT 4.7MF	20% 50V
R3331	1-216-033-00	METAL GLAZE 220 5%	1/10W	C446	1-124-234-00	ELECT 22MF	20% 16V
R3332	1-216-081-00	METAL GLAZE 22K 5%	1/10W	C447	1-126-301-11	ELECT 1MF	20% 50V
R3339	1-216-081-00	METAL GLAZE 22K 5%	1/10W	C448	1-136-170-00	FILM 0.27MF	5% 50V
R3340	1-216-049-00	METAL GLAZE 1K 5%	1/10W	C449	1-163-009-11	CERAMIC CHIP 0.001MF	10% 50V
R3341	1-216-677-11	METAL CHIP 12K 0.50%	1/10W	C450	1-130-475-00	MYLAR 0.0022MF	5% 50V
R3342	1-216-670-11	METAL CHIP 6.2K 0.50%	1/10W	C451	1-124-261-00	ELECT 10MF	20% 50V
R3343	1-216-073-00	METAL GLAZE 10K 5%	1/10W	C452	1-124-261-00	ELECT 10MF	20% 50V
R3344	1-216-073-00	METAL GLAZE 10K 5%	1/10W	C453	1-130-475-00	MYLAR 0.0022MF	5% 50V
R3349	1-216-073-00	METAL GLAZE 10K 5%	1/10W	C454	1-131-368-00	TANTALUM 3.3MF	10% 16V
R3350	1-216-065-00	METAL GLAZE 4.7K 5%	1/10W	C455	1-131-347-00	TANTALUM 1MF	20% 16V
R3351	1-216-065-00	METAL GLAZE 4.7K 5%	1/10W	C456	1-136-171-00	FILM 0.33MF	5% 50V
R3353	1-216-059-00	METAL GLAZE 2.7K 5%	1/10W	C457	1-136-175-00	FILM 0.68MF	5% 50V
R3354	1-216-059-00	METAL GLAZE 2.7K 5%	1/10W	C458	1-126-101-11	ELECT 100MF	20% 16V
R3360	1-216-049-00	METAL GLAZE 1K 5%	1/10W	C459	1-126-101-11	ELECT 100MF	20% 16V
R3361	1-216-049-00	METAL GLAZE 1K 5%	1/10W	C460	1-126-101-11	ELECT 100MF	20% 16V
R3362	1-216-073-00	METAL GLAZE 10K 5%	1/10W	C461	1-124-499-11	ELECT 1MF	20% 50V
R3367	1-216-073-00	METAL GLAZE 10K 5%	1/10W	C462	1-124-499-11	ELECT 1MF	20% 50V
R3368	1-216-089-00	METAL GLAZE 47K 5%	1/10W	C465	1-130-485-00	MYLAR 0.015MF	5% 50V
R3369	1-216-001-00	METAL GLAZE 10 5%	1/10W	C466	1-130-485-00	MYLAR 0.015MF	5% 50V
R3370	1-216-001-00	METAL GLAZE 10 5%	1/10W	C467	1-136-169-00	FILM 0.22MF	5% 50V
R3371	1-216-001-00	METAL GLAZE 10 5%	1/10W	C468	1-136-169-00	FILM 0.22MF	5% 50V
R3374	1-216-059-00	METAL GLAZE 2.7K 5%	1/10W	C469	1-126-157-11	ELECT 10MF	20% 16V
R3387	1-216-178-00	METAL GLAZE 150 5%	1/8W	C470	1-126-157-11	ELECT 10MF	20% 16V
R3388	1-216-178-00	METAL GLAZE 150 5%	1/8W	C471	1-124-589-11	ELECT 47MF	20% 16V
R3392	1-216-089-00	METAL GLAZE 47K 5%	1/10W	C472	1-164-232-11	CERAMIC CHIP 0.01MF	10% 50V
R3401	1-216-057-00	METAL GLAZE 2.2K 5%	1/10W	C473	1-164-232-11	CERAMIC CHIP 0.01MF	10% 50V
R7312	1-216-049-00	METAL GLAZE 1K 5%	1/10W	C474	1-124-234-00	ELECT 22MF	20% 16V
R7313	1-216-047-00	METAL GLAZE 820 5%	1/10W	C475	1-164-232-11	CERAMIC CHIP 0.01MF	10% 50V
R7314	1-216-057-00	METAL GLAZE 2.2K 5%	1/10W	C476	1-124-234-00	ELECT 22MF	20% 16V
				C477	1-164-232-11	CERAMIC CHIP 0.01MF	10% 50V
				C478	1-124-478-11	ELECT 100MF	20% 25V
				C479	1-126-163-11	ELECT 4.7MF	20% 50V
				C480	1-124-768-11	ELECT 4.7MF	20% 50V
				C481	1-124-768-11	ELECT 4.7MF	20% 50V
				C482	1-126-163-11	ELECT 4.7MF	20% 50V
				C483	1-163-113-00	CERAMIC CHIP 68PF	5% 50V
				C484	1-163-113-00	CERAMIC CHIP 68PF	5% 50V
				C485	1-163-038-00	CERAMIC CHIP 0.1MF	25V
				C487	1-164-232-11	CERAMIC CHIP 0.01MF	10% 50V
				C488	1-164-232-11	CERAMIC CHIP 0.01MF	10% 50V

<CRYSTAL>

X2301 1-577-071-11 VIBRATOR, CERAMIC

*A-1394-366-A Y2 BOARD, COMPLETE

<CAPACITOR>

Y2 G

The components identified by shading and mark **Δ** are critical for safety. Replace only with part number specified.

Les composants identifiés par une trame et une marque **Δ** sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
<DIODE>							
D405	8-719-107-13	DIODE RD18M-B1		R504	1-216-669-11	METAL CHIP 5.6K 0.50%	1/10W
D406	8-719-107-13	DIODE RD18M-B1		R507	1-216-295-00	METAL GLAZE 0 5%	1/10W
D407	8-719-107-13	DIODE RD18M-B1		R509	1-216-065-00	METAL GLAZE 4.7K 5%	1/10W
D408	8-719-105-83	DIODE RD5.1M-B3		R510	1-216-061-00	METAL GLAZE 3.3K 5%	1/10W
D409	8-719-981-50	DIODE RB100A		R512	1-216-065-00	METAL GLAZE 4.7K 5%	1/10W
D410	8-719-981-50	DIODE RB100A		R513	1-216-663-11	METAL CHIP 3.3K 0.50%	1/10W
D413	8-719-158-19	DIODE RD6.2S-B		R515	1-216-295-00	METAL GLAZE 0 5%	1/10W
D414	8-719-158-55	DIODE RD15S-B		R517	1-216-025-00	METAL GLAZE 100 5%	1/10W
D415	8-719-158-55	DIODE RD15S-B		R518	1-216-089-00	METAL GLAZE 47K 5%	1/10W
<IC>							
IC403	8-759-996-43	IC RC4558PS		R519	1-216-295-00	METAL GLAZE 0 5%	1/10W
IC404	8-759-067-24	IC 24C04A1/P		R521	1-216-061-00	METAL GLAZE 3.3K 5%	1/10W
IC406	8-752-037-24	IC CXA1264AS		R522	1-216-033-00	METAL GLAZE 220 5%	1/10W
IC407	8-759-245-75	IC TA8184P		R523	1-216-033-00	METAL GLAZE 220 5%	1/10W
IC408	8-752-057-18	IC CXA1315P		R524	1-216-065-00	METAL GLAZE 4.7K 5%	1/10W
<TRANSISTOR>							
Q404	8-729-216-22	TRANSISTOR 2SA1162-G		R525	1-216-049-00	METAL GLAZE 1K 5%	1/10W
Q405	8-729-216-22	TRANSISTOR 2SA1162-G		R526	1-216-049-00	METAL GLAZE 1K 5%	1/10W
Q409	8-729-920-74	TRANSISTOR 2SC2412K-QR		R527	1-218-753-11	METAL CHIP 110K 0.50%	1/10W
Q410	8-729-920-74	TRANSISTOR 2SC2412K-QR		R528	1-216-689-11	METAL CHIP 39K 0.50%	1/10W
<RESISTOR>							
R447	1-216-033-00	METAL GLAZE 220 5%	1/10W	R529	1-216-097-00	METAL GLAZE 100K 5%	1/10W
R453	1-216-033-00	METAL GLAZE 220 5%	1/10W	R531	1-216-097-00	METAL GLAZE 100K 5%	1/10W
R464	1-216-081-00	METAL GLAZE 22K 5%	1/10W	R532	1-216-097-00	METAL GLAZE 100K 5%	1/10W
R465	1-216-081-00	METAL GLAZE 22K 5%	1/10W	R533	1-216-097-00	METAL GLAZE 100K 5%	1/10W
R466	1-216-025-00	METAL GLAZE 100 5%	1/10W	R535	1-216-049-00	METAL GLAZE 1K 5%	1/10W
R467	1-216-033-00	METAL GLAZE 220 5%	1/10W	R536	1-216-065-00	METAL GLAZE 4.7K 5%	1/10W
R468	1-216-033-00	METAL GLAZE 220 5%	1/10W	R537	1-216-049-00	METAL GLAZE 1K 5%	1/10W
R469	1-216-055-00	METAL GLAZE 1.8K 5%	1/10W	R538	1-218-753-11	METAL CHIP 110K 0.50%	1/10W
R470	1-216-033-00	METAL GLAZE 220 5%	1/10W	R539	1-216-689-11	METAL CHIP 39K 0.50%	1/10W
R471	1-216-033-00	METAL GLAZE 220 5%	1/10W	R540	1-216-025-00	METAL GLAZE 100 5%	1/10W
R472	1-216-686-11	METAL CHIP 30K 0.50%	1/10W	R541	1-216-025-00	METAL GLAZE 100 5%	1/10W
R473	1-216-295-00	METAL GLAZE 0 5%	1/10W	R542	1-216-025-00	METAL GLAZE 100 5%	1/10W
R474	1-216-295-00	METAL GLAZE 0 5%	1/10W	R543	1-216-025-00	METAL GLAZE 100 5%	1/10W
R475	1-216-055-00	METAL GLAZE 1.8K 5%	1/10W	R546	1-216-682-11	METAL CHIP 20K 0.50%	1/10W
R476	1-216-673-11	METAL CHIP 8.2K 0.50%	1/10W	R547	1-216-682-11	METAL CHIP 20K 0.50%	1/10W
R477	1-216-676-11	METAL CHIP 11K 0.50%	1/10W	<CONNECTOR>			
R478	1-216-089-00	METAL GLAZE 47K 5%	1/10W	Y2-401*1-573-966-11 PIN, CONNECTOR (PC BOARD) 36P			
R479	1-216-673-11	METAL CHIP 8.2K 0.50%	1/10W	*****			
R480	1-216-676-11	METAL CHIP 11K 0.50%	1/10W	*A-1316-143-A G BOARD, COMPLETE			
R481	1-216-089-00	METAL GLAZE 47K 5%	1/10W	*****			
R482	1-216-089-00	METAL GLAZE 47K 5%	1/10W	*4-341-751-01 EYELET (EY1~EY5, EY10~EY18, EY24~EY26, EY30~EY32, EY35~EY38, EY40~EY58, EY60~EY62, EY64~EY86, EY89~EY102, EY105~EY116, EY118, EY119, EY128~EY131)			
R483	1-216-089-00	METAL GLAZE 47K 5%	1/10W	*4-341-752-01 EYELET (EY8, EY9, EY19~EY23, EY27~EY29, EY33, EY34, EY39, EY59, EY63, EY87, EY88, EY103, EY117, EY120~EY127, EY132)			
R485	1-216-073-00	METAL GLAZE 10K 5%	1/10W	4-382-854-11 SCREW (M3X10), P, SW (+)			
R486	1-216-073-00	METAL GLAZE 10K 5%	1/10W	<CAPACITOR>			
R488	1-216-295-00	METAL GLAZE 0 5%	1/10W	C601 Δ 1-136-311-51 FILM 0.47MF 20% 125V			
R494	1-216-025-00	METAL GLAZE 100 5%	1/10W	C602 Δ 1-162-599-81 CERAMIC 0.0047MF 20% 400V			
R495	1-216-025-00	METAL GLAZE 100 5%	1/10W	C603 Δ 1-162-599-81 CERAMIC 0.0047MF 20% 400V			
R496	1-216-025-00	METAL GLAZE 100 5%	1/10W	C604 Δ 1-104-346-11 ELCT 1000MF 200V			
R497	1-216-033-00	METAL GLAZE 220 5%	1/10W	C605 1-162-599-12 CERAMIC 0.0047MF 20% 400V			
R498	1-216-025-00	METAL GLAZE 100 5%	1/10W	C606 1-137-580-11 FILM 0.082MF 5% 100V			
R499	1-216-025-00	METAL GLAZE 100 5%	1/10W	C607 1-137-580-11 FILM 0.082MF 5% 100V			
R500	1-216-081-00	METAL GLAZE 22K 5%	1/10W	C608 1-137-580-11 FILM 0.082MF 5% 100V			
R501	1-216-669-11	METAL CHIP 5.6K 0.50%	1/10W	C609 1-137-580-11 FILM 0.082MF 5% 100V			
R502	1-216-033-00	METAL GLAZE 220 5%	1/10W	C610 1-137-588-11 FILM 0.0047MF 5% 800V			
R503	1-216-663-11	METAL CHIP 3.3K 0.50%	1/10W	C611 1-137-592-11 FILM 0.01MF 5% 800V			



Les composants identifiés par une trame et une marque **Δ** sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

The components identified by shading and mark **Δ** are critical for safety. Replace only with part number specified.

REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
C612	1-164-625-11	CERAMIC 680PF	10% 500V	D672	8-719-911-19	DIODE 1SS119	
C613	1-164-625-11	CERAMIC 680PF	10% 500V			<FUSE>	
C614	1-164-625-11	CERAMIC 680PF	10% 500V	F1	Δ 1-532-783-21	FUSE, MICRO (SECONDARY) 5A/125V	
C615	1-164-625-11	CERAMIC 680PF	10% 500V	F601	Δ 1-576-222-11	FUSE 6.3A/125V	
C616	1-124-443-00	ELECT 100MF	20% 10V		1-533-190-11	CLIP, FUSE; F601	
C618	1-164-735-11	CAP, CERAMIC 1500PF		F602	Δ 1-576-107-22	FUSE 3.15A/250V	
C619	1-164-735-11	CAP, CERAMIC 1500PF			1-533-223-11	CLIP, FUSE; F602	
C620	Δ 1-161-741-51	CERAMIC 0.001MF	10% 400V			<FERRITE BEAD>	
C621	Δ 1-161-741-51	CERAMIC 0.001MF	10% 400V	FB651	1-410-397-21	FERRITE BEAD INDUCTOR	
C622	1-162-599-12	CERAMIC 0.0047MF	20% 400V	FB652	1-410-397-21	FERRITE BEAD INDUCTOR	
C623	1-137-493-11	FILM 0.0047MF	5% 630V	FB653	1-410-397-21	FERRITE BEAD INDUCTOR	
C624	1-126-301-11	ELECT 1MF	20% 50V	FB654	1-410-397-21	FERRITE BEAD INDUCTOR	
C625	1-126-162-11	ELECT 3.3MF	20% 50V	FB655	1-412-911-11	INDUCTOR, FERRITE BEAD	
C626	1-130-480-00	MYLAR 0.0056MF	5% 50V	FB656	1-410-397-21	FERRITE BEAD INDUCTOR	
C651	1-124-960-11	ELECT 470MF	20% 180V	FB659	1-412-911-11	INDUCTOR, FERRITE BEAD	
C652	1-124-556-11	ELECT 2200MF	20% 16V	FB669	1-410-397-21	FERRITE BEAD INDUCTOR	
C653	1-124-913-11	ELECT 470MF	20% 50V	FB670	1-410-397-21	FERRITE BEAD INDUCTOR	
C655	1-162-117-00	CERAMIC 100PF	10% 500V			<CONNECTOR>	
C656	1-124-119-00	ELECT 330MF	20% 16V	G3	*1-573-986-11	PIN, CONNECTOR (PC BOARD) 5P	
C657	1-106-351-00	MYLAR 0.0022MF	200V	G4	*1-564-510-11	PLUG, CONNECTOR 7P	
C658	1-126-157-11	ELECT 10MF	20% 16V	G27	*1-573-963-11	PIN, CONNECTOR (PC BOARD) 3P	
C659	1-130-485-00	MYLAR 0.015MF	5% 50V	G28	*1-573-963-11	PIN, CONNECTOR (PC BOARD) 3P	
C661	1-124-484-11	ELECT 220MF	20% 35V	G29	*1-508-786-00	PIN, CONNECTOR (5MM PITCH) 2P	
C662	1-124-484-11	ELECT 220MF	20% 35V	G31	*1-580-843-11	PIN, CONNECTOR (POWER)	
C663	1-126-104-11	ELECT 470MF	20% 35V	G34	*1-508-784-00	PIN, CONNECTOR (5MM PITCH) 1P	
C666	1-126-101-11	ELECT 100MF	20% 16V	TP651	*1-508-784-00	PIN, CONNECTOR (5MM PITCH) 1P	
C667	1-124-443-00	ELECT 100MF	20% 10V			<IC>	
C668	1-124-638-11	ELECT 22MF	20% 6.3V	IC651	Δ 1-809-524-11	MODULE, POWER DM-44	
C669	1-162-318-11	CERAMIC 0.001MF	10% 500V	IC654	8-719-156-73	PHOTO COUPLER PS2501 1LB	
C670	1-162-318-11	CERAMIC 0.001MF	10% 500V			<COIL>	
C672	1-124-484-11	ELECT 220MF	20% 35V	L651	1-412-526-11	INDUCTOR 12UH	
C677	Δ 1-136-311-51	FILM 0.47MF	20% 125V	L652	1-410-673-31	INDUCTOR 68UH	
C678	1-124-360-00	ELECT 1000MF	20% 16V	L653	1-412-532-11	INDUCTOR 39UH	
		<DIODE>		L654	1-412-532-11	INDUCTOR 39UH	
D601	Δ 8-719-022-99	DIODE D6S860L		L655	1-412-532-11	INDUCTOR 39UH	
D602	8-719-510-48	DIODE D1N20R		L656	1-412-526-11	INDUCTOR 12UH	
D603	8-719-510-48	DIODE D1N20R				<TRANSISTOR>	
D604	8-719-510-48	DIODE D1N20R		Q601	8-729-927-23	TRANSISTOR 2SC4664NPR-F	
D605	8-719-510-48	DIODE D1N20R		Q602	8-729-927-23	TRANSISTOR 2SC4664NPR-F	
D606	8-719-911-19	DIODE 1SS119		Q603	8-729-927-23	TRANSISTOR 2SC4664NPR-F	
D607	8-719-510-48	DIODE D1N20R		Q604	8-729-927-23	TRANSISTOR 2SC4664NPR-F	
D608	8-719-510-48	DIODE D1N20R		Q605	8-729-209-15	TRANSISTOR 2SD2012	
D609	8-719-510-48	DIODE D1N20R		Q652	8-729-119-78	TRANSISTOR 2SC2785-HFE	
D610	8-719-510-48	DIODE D1N20R		Q653	8-729-201-53	TRANSISTOR 2SA1015-GR	
D611	8-719-510-48	DIODE D1N20R		Q654	8-729-119-78	TRANSISTOR 2SC2785-HFE	
D612	8-719-510-48	DIODE D1N20R		Q655	8-729-119-78	TRANSISTOR 2SC2785-HFE	
D613	8-719-109-93	DIODE RD6.2ES-B2		Q656	8-729-119-78	TRANSISTOR 2SC2785-HFE	
D651	8-719-027-43	DIODE S2L20UF				<RESISTOR>	
D652	8-719-027-43	DIODE S2L20UF		R601	1-249-388-11	CARBON 3.9 5% 1/4W F	
D653	8-719-027-43	DIODE S2L20UF		R602	Δ 1-205-707-12	WIREWOUND 2.2 5% 10W F	
D654	8-719-027-43	DIODE S2L20UF		R603	1-247-889-00	CARBON 270K 5% 1/4W	
D655	8-719-510-13	DIODE D1OSC4MR					
D656	8-719-022-97	DIODE D2S4MF					
D657	8-719-510-02	DIODE D1NS4					
D663	8-719-510-02	DIODE D1NS4					
D665	8-719-510-02	DIODE D1NS4					
D666	8-719-109-85	DIODE RD5.1ES-B2					
D667	8-719-911-19	DIODE 1SS119					
D668	8-719-911-19	DIODE 1SS119					
D669	8-719-109-54	DIODE RD2.2ES-B2					
D670	8-719-911-19	DIODE 1SS119					
D671	8-719-110-31	DIODE RD12ES-B2					

The components identified by shading and mark **▲** are critical for safety. Replace only with part number specified.

Les composants identifiés par une trame et une marque **▲** sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.



REF. NO.	PART NO.	DESCRIPTION	REMARK
R604	1-216-443-11	METAL OXIDE 56K 5% 1W	F
R605	1-216-443-11	METAL OXIDE 56K 5% 1W	F
R606	1-216-443-11	METAL OXIDE 56K 5% 1W	F
R607	1-216-443-11	METAL OXIDE 56K 5% 1W	F
R608	1-216-352-11	METAL OXIDE 1.8 5% 1W	F
R609	1-216-352-11	METAL OXIDE 1.8 5% 1W	F
R610	1-216-352-11	METAL OXIDE 1.8 5% 1W	F
R611	1-216-352-11	METAL OXIDE 1.8 5% 1W	F
R612	1-249-377-11	CARBON 0.47 5% 1/4W	F
R613	1-215-447-00	METAL 12K 1% 1/4W	
R614	1-215-433-00	METAL 3.3K 1% 1/4W	
R615	1-249-441-11	CARBON 100K 5% 1/4W	
R616	1-249-417-11	CARBON 1K 5% 1/4W	
R617	1-249-417-11	CARBON 1K 5% 1/4W	
R618	1-247-688-11	CARBON 10 5% 1/4W	F
R619	1-216-343-00	METAL OXIDE 0.33 5% 1W	F
R620	1-202-730-00	SOLID 8.2M 20% 1/2W	
R621	1-249-423-11	CARBON 3.3K 5% 1/4W	
R622 ▲	1-202-888-91	SOLID 2.2M 20% 1/2W	
R623	1-212-956-00	FUSIBLE 8.2 5% 1/2W	F
R651	1-249-405-11	CARBON 100 5% 1/4W	F
R652	1-215-868-00	METAL OXIDE 680 5% 1W	F
R653	1-249-405-11	CARBON 100 5% 1/4W	
R654	1-249-399-11	CARBON 33 5% 1/4W	F
R655	1-249-393-11	CARBON 10 5% 1/4W	F
R656	1-249-443-11	CARBON 0.47 5% 1/4W	F
R658	1-215-408-00	METAL 300 1% 1/4W	
R659	1-249-443-11	CARBON 0.47 5% 1/4W	F
R660	1-215-446-00	METAL 11K 1% 1/4W	
R661	1-215-418-00	METAL 750 1% 1/4W	
R662	1-249-421-11	CARBON 2.2K 5% 1/4W	
R663	1-249-410-11	CARBON 270 5% 1/4W	
R664	1-215-861-00	METAL OXIDE 47 5% 1W	F
R665	1-215-403-00	METAL 180 1% 1/4W	
R666	1-215-421-00	METAL 1K 1% 1/4W	
R667	1-215-432-00	METAL 3K 1% 1/4W	
R669	1-249-421-11	CARBON 2.2K 5% 1/4W	
R670	1-249-412-11	CARBON 390 5% 1/4W	
R671	1-216-384-11	METAL OXIDE 0.39 5% 3W	F
R672	1-249-443-11	CARBON 0.47 5% 1/4W	F
R673	1-249-415-11	CARBON 680 5% 1/4W	
R674	1-249-421-11	CARBON 2.2K 5% 1/4W	
R675	1-249-415-11	CARBON 680 5% 1/4W	
R676	1-249-377-11	CARBON 0.47 5% 1/4W	F
R677	1-249-433-11	CARBON 22K 5% 1/4W	
R678	1-249-429-11	CARBON 10K 5% 1/4W	
R679	1-216-428-00	METAL OXIDE 180 5% 1W	F
R680	1-216-428-00	METAL OXIDE 180 5% 1W	F
R681	1-249-377-11	CARBON 0.47 5% 1/4W	F
R682	1-249-443-11	CARBON 0.47 5% 1/4W	F
<RELAY>			
RY601	1-515-516-00	RELAY	
RY602 ▲	1-515-669-21	RELAY	
<TRANSFORMER>			
T601 ▲	1-424-585-11	TRANSFORMER, LINE FILTER	
T602 ▲	1-424-585-11	TRANSFORMER, LINE FILTER	
T603	1-450-300-31	TRANSFORMER, CONVERTER DRIVE	
T604 ▲	1-450-958-11	TRANSFORMER, CONVERTER (PRT)	
T605	1-424-663-11	TRANSFORMER, FERRITE (SBT)	

REF. NO.	PART NO.	DESCRIPTION	REMARK
<THERMISTOR>			
TNP601 ▲	1-809-539-11	THERMISTOR, POSITIVE	
<VARISTOR>			
VDR601 ▲	1-809-786-11	VARISTOR	
VDR602	1-809-264-81	VARISTOR	

*A-1331-209-A		C BOARD, COMPLETE	*****
*4-341-751-01		EYELET (EY51-EY53, EY55, EY57, EY58, EY66)	
*4-341-752-01		EYELET (EY50, EY56, EY59-EY61, EY63-EY65, EY67, EY68)	
<CONNECTOR>			
C2	*1-573-964-11	PIN, CONNECTOR (PC BOARD) 6P	
C24	*1-564-511-51	PLUG, CONNECTOR 8P	
C42	*1-691-134-11	PIN, CONNECTOR (PC BOARD) 2P	
<CAPACITOR>			
C701	1-162-116-00	CERAMIC 680PF 10% 2KV	
C702	1-137-490-11	FILM 0.01MF 10% 1KV	
C704	1-123-946-00	ELECT 4.7MF 20% 250V	
C705	1-106-375-12	MYLAR 0.022MF 200V	
C706	1-106-375-12	MYLAR 0.022MF 200V	
C707	1-164-083-11	CERAMIC 680PF 10% 50V	
C708	1-164-083-11	CERAMIC 680PF 10% 50V	
C709	1-164-083-11	CERAMIC 680PF 10% 50V	
C710	1-164-083-11	CERAMIC 680PF 10% 50V	
C711	1-124-120-11	ELECT 220MF 20% 16V	
C712	1-164-082-11	CERAMIC 560PF 10% 50V	
C713	1-164-083-11	CERAMIC 680PF 10% 50V	
C715	1-102-129-00	CERAMIC 0.01MF 10% 50V	
C718	1-102-129-00	CERAMIC 0.01MF 10% 50V	
C733	1-102-074-00	CERAMIC 0.001MF 10% 50V	
<DIODE>			
D701	8-719-911-19	DIODE 1SS119	
D702	8-719-911-19	DIODE 1SS119	
D703	8-719-911-19	DIODE 1SS119	
D704	8-719-911-19	DIODE 1SS119	
D705	8-719-911-19	DIODE 1SS119	
D706	8-719-911-19	DIODE 1SS119	
D707	8-719-911-19	DIODE 1SS119	
D708	8-719-911-19	DIODE 1SS119	
D709	8-719-911-19	DIODE 1SS119	
D710	8-719-901-83	DIODE 1SS83	
D711	8-719-901-83	DIODE 1SS83	
D712	8-719-901-83	DIODE 1SS83	
D713	8-719-901-83	DIODE 1SS83	
D714	8-719-911-19	DIODE 1SS119	
<JACK>			
J701	1-540-223-11	SOCKET, PICTURE TUBE	
<COIL>			
L701	1-410-671-31	INDUCTOR 47UH	



REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
L702	1-410-645-31	INDUCTOR 100UH		R752	1-249-393-11	CARBON 10 5% 1/4W	
L703	1-410-677-31	INDUCTOR 180UH		R753	1-249-390-11	CARBON 5.6 5% 1/4W	
L706	1-410-677-31	INDUCTOR 180UH		R754	1-249-418-11	CARBON 1.2K 5% 1/4W	
				R777	1-249-441-11	CARBON 100K 5% 1/4W	
<TRANSISTOR>				<VARIABLE RESISTOR>			
Q701	8-729-326-11	TRANSISTOR 2SC2611		RV701	1-230-641-11	RES, ADJ, METAL GLAZE 2.2M	
Q702	8-729-119-78	TRANSISTOR 2SC2785-HFE		RV702	1-241-714-11	RES, ADJ, METAL FILM 110M	
Q703	8-729-200-17	TRANSISTOR 2SA1091-0		*****			
Q704	8-729-326-11	TRANSISTOR 2SC2611		*A-1341-550-A	D BOARD, COMPLETE		
Q705	8-729-119-78	TRANSISTOR 2SC2785-HFE			*****		
Q706	8-729-200-17	TRANSISTOR 2SA1091-0		*4-341-751-01	EYELET (EY801~EY804, EY901~EY904)		
Q707	8-729-200-17	TRANSISTOR 2SA1091-0		*4-341-752-01	EYELET (EY811, EY812)		
Q708	8-729-326-11	TRANSISTOR 2SC2611		4-382-854-11	SCREW (M3X10), P, SW (+)		
Q709	8-729-119-78	TRANSISTOR 2SC2785-HFE		<CAPACITOR>			
Q710	8-729-255-12	TRANSISTOR 2SC2551-0		C801	1-124-589-11	ELECT 47MF 20% 16V	
Q711	8-729-119-76	TRANSISTOR 2SA1175-HFE		C802	1-124-589-11	ELECT 47MF 20% 16V	
Q712	8-729-255-12	TRANSISTOR 2SC2551-0		C804	1-130-483-00	MYLAR 0.01MF 5% 50V	
Q714	8-729-200-17	TRANSISTOR 2SA1091-0		C805	1-136-165-00	FILM 0.1MF 5% 50V	
Q715	8-729-200-17	TRANSISTOR 2SA1091-0		C806	1-136-165-00	FILM 0.1MF 5% 50V	
Q716	8-729-200-17	TRANSISTOR 2SA1091-0		C807	1-124-360-00	ELECT 1000MF 20% 16V	
<RESISTOR>				C809	1-136-104-00	FILM 0.16MF 5% 200V	
R702	1-202-883-11	SOLID 680K 20% 1/2W		C810	1-136-177-00	FILM 1MF 5% 50V	
R703	1-202-838-00	SOLID 100K 20% 1/2W		C811	1-162-318-11	CERAMIC 0.001MF 10% 500V	
R705	1-249-433-11	CARBON 22K 5% 1/4W		C812	1-126-163-11	ELECT 4.7MF 20% 50V	
R706	1-202-815-11	SOLID 47K 20% 1/2W		C813	1-130-491-00	MYLAR 0.047MF 5% 50V	
R707	1-202-842-11	SOLID 220K 20% 1/2W		C814	1-124-261-00	ELECT 10MF 20% 50V	
R708	1-202-818-00	SOLID 1K 20% 1/2W		C815	1-124-261-00	ELECT 10MF 20% 50V	
R709	1-202-818-00	SOLID 1K 20% 1/2W		C816	1-124-234-00	ELECT 22MF 20% 16V	
R710	1-202-818-00	SOLID 1K 20% 1/2W		C817	1-126-163-11	ELECT 4.7MF 20% 50V	
R711	1-249-433-11	CARBON 22K 5% 1/4W		C818	1-124-589-11	ELECT 47MF 20% 16V	
R713	1-216-486-00	METAL OXIDE 8.2K 5% 3W F		C819	1-136-165-00	FILM 0.1MF 5% 50V	
R715	1-202-549-00	SOLID 100 10% 1/2W		C820	1-126-103-11	ELECT 470MF 20% 16V	
R716	1-216-486-00	METAL OXIDE 8.2K 5% 3W F		C901	1-136-173-00	FILM 0.47MF 5% 50V	
R720	1-216-486-00	METAL OXIDE 8.2K 5% 3W F		C902	1-124-261-00	ELECT 10MF 20% 50V	
R722	1-249-433-11	CARBON 22K 5% 1/4W		C903	1-136-169-00	FILM 0.22MF 5% 50V	
R723	1-249-405-11	CARBON 100 5% 1/4W		C904	1-130-471-00	MYLAR 0.001MF 5% 50V	
R724	1-249-405-11	CARBON 100 5% 1/4W		C905	1-124-261-00	ELECT 10MF 20% 50V	
R725	1-249-429-11	CARBON 10K 5% 1/4W		C906	1-124-046-00	ELECT 10MF 20% 160V	
R726	1-249-408-11	CARBON 180 5% 1/4W		C907	1-124-465-00	ELECT 0.47MF 20% 50V	
R727	1-249-429-11	CARBON 10K 5% 1/4W		C908	1-102-112-00	CERAMIC 330PF 10% 50V	
R728	1-249-408-11	CARBON 180 5% 1/4W		C910	1-136-103-91	FILM 0.1MF 5% 200V	
R729	1-249-405-11	CARBON 100 5% 1/4W		C911	1-136-165-00	FILM 0.1MF 5% 50V	
R730	1-249-408-11	CARBON 180 5% 1/4W		C913	1-124-589-11	ELECT 47MF 20% 16V	
R731	1-249-409-11	CARBON 220 5% 1/4W F		C914	1-106-367-00	MYLAR 0.01MF 10% 100V	
R732	1-249-409-11	CARBON 220 5% 1/4W F		C915	1-126-301-11	ELECT 1MF 20% 50V	
R733	1-249-409-11	CARBON 220 5% 1/4W F		C917	1-130-471-00	MYLAR 0.001MF 5% 50V	
R735	1-249-418-11	CARBON 1.2K 5% 1/4W		C918	1-102-074-00	CERAMIC 0.001MF 10% 50V	
R737	1-249-418-11	CARBON 1.2K 5% 1/4W		C920	1-136-601-11	FILM 0.01MF 5% 630V	
R739	1-249-433-11	CARBON 22K 5% 1/4W		C922	1-124-557-11	ELECT 1000MF 20% 25V	
R740	1-215-902-11	METAL OXIDE 47K 5% 2W F		C923	1-130-471-00	MYLAR 0.001MF 5% 50V	
R741	1-249-417-11	CARBON 1K 5% 1/4W F		C925	1-124-261-00	ELECT 10MF 20% 50V	
R742	1-249-423-11	CARBON 3.3K 5% 1/4W F		C926	1-136-165-00	FILM 0.1MF 5% 50V	
R743	1-249-423-11	CARBON 3.3K 5% 1/4W F		C927	1-136-171-00	FILM 0.33MF 5% 50V	
R744	1-249-423-11	CARBON 3.3K 5% 1/4W F		C928	1-124-261-00	ELECT 10MF 20% 50V	
R745	1-249-417-11	CARBON 1K 5% 1/4W F		C930	1-130-483-00	MYLAR 0.01MF 5% 50V	
R746	1-215-902-11	METAL OXIDE 47K 5% 1W F		C931	1-130-475-00	MYLAR 0.0022MF 10% 50V	
R747	1-249-429-11	CARBON 10K 5% 1/4W F		<CONNECTOR>			
R748	1-216-365-00	METAL OXIDE 0.47 5% 2W F					
R749	1-249-437-11	CARBON 47K 5% 1/4W F					
R750	1-249-409-11	CARBON 220 5% 1/4W F					
R751	1-249-395-11	CARBON 15 5% 1/4W					

D

REF.NO.	PART NO.	DESCRIPTION	REMARK	REF.NO.	PART NO.	DESCRIPTION	REMARK
D14	*1-573-299-11	CONNECTOR, BOARD TO BOARD 10P		Q907	8-729-119-80	TRANSISTOR 2SC2688-LK	
D18	*1-573-299-11	CONNECTOR, BOARD TO BOARD 10P		Q908	8-729-300-80	TRANSISTOR 2SB860	
D20	*1-564-524-11	PLUG, CONNECTOR 9P		Q909	8-729-140-96	TRANSISTOR 2SD774-34	
DY2	*1-508-765-00	PIN, CONNECTOR (5MM PITCH) 3P		Q910	8-729-119-78	TRANSISTOR 2SC2785-HFE	
<DIODE>				Q911	8-729-119-78	TRANSISTOR 2SC2785-HFE	
D801	8-719-913-44	DIODE ERA82-004		Q912	8-729-119-76	TRANSISTOR 2SA1175-HFE	
D802	8-719-911-19	DIODE 1SS119		Q913	8-729-011-02	TRANSISTOR 2SK1917	
D803	8-719-911-19	DIODE 1SS119		Q914	8-729-119-76	TRANSISTOR 2SA1175-HFE	
D804	8-719-911-19	DIODE 1SS119		<RESISTOR>			
D805	8-719-801-35	THYRISTOR SHOR3D42		R801	1-249-409-11	CARBON	220 5% 1/4W
D806	8-719-980-78	DIODE ERA83-006		R802	1-249-409-11	CARBON	220 5% 1/4W
D807	8-719-980-78	DIODE ERA83-006		R804	1-247-891-00	CARBON	330K 5% 1/4W
D808	8-719-911-19	DIODE 1SS119		R806	1-247-885-00	CARBON	180K 5% 1/4W
D809	8-719-911-19	DIODE 1SS119		R807	1-247-891-00	CARBON	330K 5% 1/4W
D810	8-719-911-19	DIODE 1SS119		R808	1-215-461-00	METAL	47K 1% 1/4W
D811	8-719-300-33	DIODE RU-3AM		R809	1-249-423-11	CARBON	3.3K 5% 1/4W
D812	8-719-911-19	DIODE 1SS119		R810	1-249-413-11	CARBON	470 5% 1/4W
D813	8-719-109-88	DIODE RD5.6ES-B1		R811	1-249-434-11	CARBON	27K 5% 1/4W
D814	8-719-110-13	DIODE RD9.1ES-B2		R812	1-249-438-11	CARBON	56K 5% 1/4W
D815	8-719-911-19	DIODE 1SS119		R813	1-249-417-11	CARBON	1K 5% 1/4W
D816	8-719-911-19	DIODE 1SS119		R815	1-249-427-11	CARBON	6.8K 5% 1/4W
D901	8-719-911-19	DIODE 1SS119		R816	1-249-425-11	CARBON	4.7K 5% 1/4W
D902	8-719-109-96	DIODE RD6.8ES-B1		R817	1-249-422-11	CARBON	2.7K 5% 1/4W
D903	8-719-979-85	DIODE EGP20G		R818	1-249-417-11	CARBON	1K 5% 1/4W
D906	8-719-980-78	DIODE ERA83-006		R819	1-249-432-11	CARBON	18K 5% 1/4W
D907	8-719-911-19	DIODE 1SS119		R820	1-249-417-11	CARBON	1K 5% 1/4W
D908	8-719-980-78	DIODE ERA83-006		R821	1-216-379-11	METAL OXIDE	6.8 5% 2W F
D911	8-719-911-19	DIODE 1SS119		R822	1-249-423-11	CARBON	3.3K 5% 1/4W
<IC>				R824	1-249-417-11	CARBON	1K 5% 1/4W F
IC801	8-749-920-58	IC S1-3090CA		R825	1-215-857-11	METAL OXIDE	10 5% 1W F
IC802	8-752-052-88	IC CXA1526P		R826	1-249-404-00	CARBON	82 5% 1/4W
IC803	8-759-135-80	IC UPC358C		R827	1-215-875-11	METAL OXIDE	10K 5% 1W F
IC901	8-759-135-80	IC UPC358C		R828	1-249-441-11	CARBON	100K 5% 1/4W
IC903	8-759-987-16	IC LM393P		R829	1-249-414-11	CARBON	560 5% 1/4W
<COIL>				R830	1-249-411-11	CARBON	330 5% 1/4W
L801	1-459-592-11	COIL (WITH CORE) (PMC)		R831	1-249-426-11	CARBON	5.6K 5% 1/4W
L802	1-459-941-12	COIL, CHOKO 3.4MMH		R832	1-215-887-00	METAL OXIDE	150 5% 2W F
L901	1-410-093-11	INDUCTOR 33MMH		R833	1-249-421-11	CARBON	2.2K 5% 1/4W
L902	1-459-075-00	COIL, DYNAMIC CONVERSION CHOKO		R834	1-249-438-11	CARBON	56K 5% 1/4W
<TRANSISTOR>				R835	1-249-393-11	CARBON	10 5% 1/4W
Q802	8-729-119-76	TRANSISTOR 2SA1175-HFE		R836	1-249-435-11	CARBON	33K 5% 1/4W
Q803	8-729-119-78	TRANSISTOR 2SC2785-HFE		R837	1-249-435-11	CARBON	33K 5% 1/4W
Q804	8-729-119-78	TRANSISTOR 2SC2785-HFE		R838	1-216-359-00	METAL OXIDE	6.8 5% 1W F
Q805	8-729-140-97	TRANSISTOR 2SB734-34		R839	1-249-410-11	CARBON	270 5% 1/4W
Q806	8-729-119-78	TRANSISTOR 2SC2785-HFE		R840	1-249-429-11	CARBON	10K 5% 1/4W
Q807	8-729-140-97	TRANSISTOR 2SB734-34		R841	1-249-437-11	CARBON	47K 5% 1/4W
Q808	8-729-119-76	TRANSISTOR 2SA1175-HFE		R842	1-249-429-11	CARBON	10K 5% 1/4W
Q809	8-729-209-15	TRANSISTOR 2SD2012		R843	1-249-421-11	CARBON	2.2K 5% 1/4W
Q810	8-729-140-96	TRANSISTOR 2SD774-34		R901	1-249-425-11	CARBON	4.7K 5% 1/4W
Q811	8-729-119-78	TRANSISTOR 2SC2785-HFE		R902	1-249-438-11	CARBON	56K 5% 1/4W
Q901	8-729-119-76	TRANSISTOR 2SA1175-HFE		R903	1-249-429-11	CARBON	10K 5% 1/4W
Q902	8-729-119-78	TRANSISTOR 2SC2785-HFE		R904	1-249-429-11	CARBON	10K 5% 1/4W
Q903	8-729-119-78	TRANSISTOR 2SC2785-HFE		R905	1-249-429-11	CARBON	10K 5% 1/4W
Q904	8-729-119-76	TRANSISTOR 2SA1175-HFE		R906	1-249-425-11	CARBON	4.7K 5% 1/4W
Q905	8-729-119-76	TRANSISTOR 2SA1175-HFE		R907	1-249-429-11	CARBON	10K 5% 1/4W
Q906	8-729-119-80	TRANSISTOR 2SC2688-LK		R908	1-249-437-11	CARBON	47K 5% 1/4W
				R909	1-249-433-11	CARBON	22K 5% 1/4W
				R910	1-249-431-11	CARBON	15K 5% 1/4W
				R911	1-247-895-00	CARBON	470K 5% 1/4W
				R912	1-249-429-11	CARBON	10K 5% 1/4W
				R913	1-249-425-11	CARBON	4.7K 5% 1/4W
				R914	1-249-401-11	CARBON	47 5% 1/4W



REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
R915	1-249-425-11	CARBON 4.7K 5%	1/4W	C979	1-130-471-00	MYLAR 0.001MF	5% 50V
R916	1-249-421-11	CARBON 2.2K 5%	1/4W	C980	1-124-915-11	ELECT 10MF	20% 16V
R917	1-249-439-11	CARBON 68K 5%	1/4W			<DIODE>	
R918	1-249-413-11	CARBON 470 5%	1/4W	D961	8-719-911-19	DIODE ISS119	
R919	1-249-437-11	CARBON 47K 5%	1/4W	D963	8-719-911-19	DIODE ISS119	
R920	1-249-418-11	CARBON 1.2K 5%	1/4W F	D964	8-719-911-19	DIODE ISS119	
R921	1-215-876-00	METAL OXIDE 15K 5%	1W F	D965	8-719-911-19	DIODE ISS119	
R922	1-215-870-11	METAL OXIDE 1.5K 5%	1W F	D966	8-719-911-19	DIODE ISS119	
R923	1-249-429-11	CARBON 10K 5%	1/4W	D967	8-719-110-88	DIODE RD39ES-B2	
R924	1-249-423-11	CARBON 3.3K 5%	1/4W	D968	8-719-110-88	DIODE RD39ES-B2	
R925	1-249-415-11	CARBON 680 5%	1/4W			<COIL>	
R926	1-249-409-11	CARBON 220 5%	1/4W	L962	1-408-416-00	INDUCTOR 39UH	
R927	1-249-429-11	CARBON 10K 5%	1/4W			<TRANSISTOR>	
R928	1-249-421-11	CARBON 2.2K 5%	1/4W	Q956	8-729-119-78	TRANSISTOR 2SC2785-HFE	
R929	1-249-429-11	CARBON 10K 5%	1/4W	Q961	8-729-119-78	TRANSISTOR 2SC2785-HFE	
R930	1-249-434-11	CARBON 27K 5%	1/4W	Q962	8-729-119-76	TRANSISTOR 2SA1175-HFE	
R931	1-249-421-11	CARBON 2.2K 5%	1/4W	Q963	8-729-208-39	TRANSISTOR 2SA1306A-Y	
R933	1-249-421-11	CARBON 2.2K 5%	1/4W	Q964	8-729-119-78	TRANSISTOR 2SC2785-HFE	
R934	1-249-439-11	CARBON 68K 5%	1/4W	Q965	8-729-208-72	TRANSISTOR 2SC3298B-Y	
R935	1-249-429-11	CARBON 10K 5%	1/4W	Q966	8-729-119-78	TRANSISTOR 2SC2785-HFE	
R936	1-249-429-11	CARBON 10K 5%	1/4W	Q967	8-729-142-86	TRANSISTOR 2SC3733	
R937	1-249-421-11	CARBON 2.2K 5%	1/4W			<RESISTOR>	
R938	1-249-405-11	CARBON 100 5%	1/4W	R951	1-249-434-11	CARBON 27K 5%	1/4W
R939	1-249-405-11	CARBON 100 5%	1/4W F	R952	1-249-423-11	CARBON 3.3K 5%	1/4W
R940	1-249-405-11	CARBON 100 5%	1/4W F	R953	1-249-423-11	CARBON 3.3K 5%	1/4W
R941	1-249-405-11	CARBON 100 5%	1/4W	R954	1-247-903-00	CARBON 1M 5%	1/4W
R944	1-249-432-11	CARBON 18K 5%	1/4W	R955	1-249-421-11	CARBON 2.2K 5%	1/4W
R945	1-247-895-00	CARBON 470K 5%	1/4W	R962	1-249-409-11	CARBON 220 5%	1/4W
R946	1-249-425-11	CARBON 4.7K 5%	1/4W	R963	1-249-419-11	CARBON 1.5K 5%	1/4W
R947	1-249-419-11	CARBON 1.5K 5%	1/4W F	R964	1-247-734-11	CARBON 39 5%	1/2W F
R948	1-249-435-11	CARBON 33K 5%	1/4W	R965	1-249-414-11	CARBON 560 5%	1/4W F
R950	1-249-425-11	CARBON 4.7K 5%	1/4W	R966	1-249-418-11	CARBON 1.2K 5%	1/4W
R952	1-249-405-11	CARBON 100 5%	1/4W	R968	1-249-418-11	CARBON 1.2K 5%	1/4W
R953	1-247-889-00	CARBON 270K 5%	1/4W	R969	1-249-384-11	CARBON 1.8 5%	1/4W F
R954	1-247-889-00	CARBON 270K 5%	1/4W	R970	1-249-435-11	CARBON 33K 5%	1/4W
R956	1-249-433-11	CARBON 22K 5%	1/4W	R972	1-249-432-11	CARBON 18K 5%	1/4W
*****				R974	1-216-476-11	METAL OXIDE 180 5%	3W F
*A-1342-182-A	V BOARD, COMPLETE			R975	1-249-417-11	CARBON 1K 5%	1/4W F
*****				R976	1-249-432-11	CARBON 18K 5%	1/4W
*4-341-751-01	EYELET (EY5)			R977	1-249-438-11	CARBON 56K 5%	1/4W
*4-341-752-01	EYELET (EY1~EY4)			R978	1-249-430-11	CARBON 12K 5%	1/4W
4-382-854-11	SCREW (M3X10), P, SW (+)			R979	1-249-414-11	CARBON 560 5%	1/4W
<CAPACITOR>				R980	1-249-420-11	CARBON 1.8K 5%	1/4W
C951	1-102-074-00	CERAMIC 0.001MF	10% 50V	R981	1-249-415-11	CARBON 680 5%	1/4W
C952	1-102-125-00	CERAMIC 0.0047MF	10% 50V	R982	1-249-384-11	CARBON 1.8 5%	1/4W F
C961	1-161-830-00	CERAMIC 0.0047MF	500V	R983	1-249-441-11	CARBON 100K 5%	1/4W
C962	1-102-951-00	CERAMIC 15PF	5% 50V	R984	1-249-405-11	CARBON 100 5%	1/4W
C963	1-123-935-00	ELECT 33MF	20% 160V	R985	1-249-400-11	CARBON 39 5%	1/4W F
C964	1-126-101-11	ELECT 100MF	20% 16V	R986	1-249-435-11	CARBON 33K 5%	1/4W
C968	1-106-383-00	MYLAR 0.047MF	200V	R987	1-249-428-11	CARBON 8.2K 5%	1/4W
C969	1-124-799-11	ELECT 2.2MF	20% 160V	R988	1-249-418-11	CARBON 1.2K 5%	1/4W
C970	1-106-391-12	MYLAR 0.1MF	10% 200V	R989	1-249-413-11	CARBON 470 5%	1/4W
C971	1-126-157-11	ELECT 10MF	20% 16V	R990	1-216-451-11	METAL OXIDE 120 5%	2W F
C972	1-126-541-11	ELECT 330MF	20% 16V	R991	1-249-409-11	CARBON 220 5%	1/4W
C973	1-106-383-00	MYLAR 0.047MF	200V				
C974	1-102-959-00	CERAMIC 22PF	5% 50V				
C975	1-126-101-11	ELECT 100MF	20% 16V				
C976	1-126-157-11	ELECT 10MF	20% 16V				
C977	1-102-963-00	CERAMIC 33PF	5% 50V				
C978	1-130-471-00	MYLAR 0.001MF	5% 50V				

V VC HX1

The components identified by shading and mark **Δ** are critical for safety. Replace only with part number specified.

Les composants identifiés par une trame et une marque **Δ** sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

REF. NO.	PART NO.	DESCRIPTION	REMARK
<CONNECTOR>			
V20	*1-564-512-11	PLUG, CONNECTOR 9P	

	*A-1347-067-A	VC BOARD, COMPLETE	
	*4-341-751-01	EYELET (EY1801-EY1804)	
<CAPACITOR>			
C1801	1-124-478-11	ELECT 100MF	20% 25V
C1802	1-124-478-11	ELECT 100MF	20% 25V
C1803	1-130-487-00	MYLAR 0.022MF	5% 50V
C1804	1-102-973-00	CERAMIC 100PF	5% 50V
C1805	1-130-471-00	FILM 0.001MF	5% 50V
C1806	1-130-487-00	MYLAR 0.022MF	5% 50V
C1807	1-130-471-00	MYLAR 0.001MF	5% 50V
C1808	1-102-228-00	CERAMIC 470PF	10% 500V
C1809	1-124-798-11	ELECT 1MF	20% 160V
C1810	1-130-495-00	MYLAR 0.1MF	5% 50V
C1811	1-124-798-11	ELECT 1MF	20% 160V
C1812	1-136-756-11	FILM 0.24MF	5% 200V
<DIODE>			
D1801	8-719-911-19	DIODE ISS119	
D1802	8-719-911-19	DIODE ISS119	
D1803	8-719-300-33	DIODE RU-3AM	
D1804	8-719-300-33	DIODE RU-3AM	
D1805	8-719-300-33	DIODE RU-3AM	
<IC>			
IC1801	8-759-987-16	IC LM393P	
IC1802	8-759-987-16	IC LM393P	
IC1803	8-759-708-09	IC NJM78L09A	
<COIL>			
L1801	1-460-200-11	COIL (WITH CORE)	
<TRANSISTOR>			
Q1801	8-729-012-26	TRANSISTOR IRF540Y	
Q1802	8-729-012-26	TRANSISTOR IRF540Y	
Q1803	8-729-931-45	TRANSISTOR IRF614	
<RESISTOR>			
R1801	1-249-435-11	CARBON 33K	5% 1/4W
R1802	1-249-417-11	CARBON 1K	5% 1/4W
R1803	1-247-887-00	CARBON 220K	5% 1/4W
R1804	1-249-437-11	CARBON 47K	5% 1/4W
R1805	1-247-895-00	CARBON 470K	5% 1/4W
R1806	1-249-428-11	CARBON 8.2K	5% 1/4W
R1807	1-249-423-11	CARBON 3.3K	5% 1/4W
R1808	1-249-426-11	CARBON 5.6K	5% 1/4W
R1809	1-249-433-11	CARBON 22K	5% 1/4W
R1810	1-249-421-11	CARBON 2.2K	5% 1/4W
R1811	1-216-463-00	METAL OXIDE 12K	5% 2W F
R1812	1-215-875-11	METAL OXIDE 10K	5% 1W F
R1813	1-249-405-11	CARBON 100	5% 1/4W
R1814	1-249-441-11	CARBON 100K	5% 1/4W

REF. NO.	PART NO.	DESCRIPTION	REMARK
R1815	1-215-869-11	METAL OXIDE 1K	5% 1W F
R1816	1-249-437-11	CARBON 47K	5% 1/4W
R1817	1-249-441-11	CARBON 100K	5% 1/4W
R1818	1-249-406-11	CARBON 120	5% 1/4W
<VARIABLE RESISTOR>			
RV1801	1-228-993-00	RES, ADJ, METAL GLAZE 4.7K	
<TRANSFORMER>			
T1801	1-437-212-11	TRANSFORMER, FERRITE (VPDT)	
<CONNECTOR>			
VC15	*1-573-299-11	CONNECTOR, BOARD TO BOARD 10P	

	*1-643-663-11	HX1 BOARD	

<CAPACITOR>			
C1603	1-124-589-11	ELECT 47MF	20% 16V
C1604	1-124-589-11	ELECT 47MF	20% 16V
<DIODE>			
D1601	8-719-812-41	DIODE TLR124	
D1602	8-719-812-41	DIODE TLR124	
<CONNECTOR>			
HX137	*1-564-514-11	PLUG, CONNECTOR 11P	
<IC>			
IC1601	8-741-148-33	IC SBX1483-59	
<RESISTOR>			
R1601	1-249-408-11	CARBON 180	5% 1/4W
R1602	1-249-407-11	CARBON 150	5% 1/4W
R1604	1-249-419-11	CARBON 1.5K	5% 1/4W
R1605	1-249-421-11	CARBON 2.2K	5% 1/4W
R1606	1-249-425-11	CARBON 4.7K	5% 1/4W
R1607	1-249-430-11	CARBON 12K	5% 1/4W
<SWITCH>			
S1601	1-572-198-11	SWITCH, KEYBOARD	
S1604	1-572-198-11	SWITCH, KEYBOARD	
S1605	1-572-198-11	SWITCH, KEYBOARD	
S1606	1-572-198-11	SWITCH, KEYBOARD	
S1607	Δ 1-572-198-11	SWITCH, KEYBOARD (POWER)	

HX2 **U**

REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
*1-643-664-11	HX2 BOARD *****			C1062	1-102-129-00	CERAMIC 0.01MF	10% 50V
	<DIODE>			C1063	1-124-768-11	ELECT 4.7MF	20% 50V
D1650	8-719-108-12	DIODE RD9.1E-W		C1066	1-126-101-11	ELECT 100MF	20% 16V
D1651	8-719-108-12	DIODE RD9.1E-W		C1070	1-126-103-11	ELECT 470MF	20% 16V
D1652	8-719-108-12	DIODE RD9.1E-W			<DIODE>		
D1653	8-719-108-12	DIODE RD9.1E-W		D1005	8-719-110-36	DIODE RD13ES-B2	
D1654	8-719-108-12	DIODE RD9.1E-W		D1009	8-719-110-36	DIODE RD13ES-B2	
D1655	8-719-108-12	DIODE RD9.1E-W		D1010	8-719-110-36	DIODE RD13ES-B2	
	<CONNECTOR>			D1011	8-719-110-36	DIODE RD13ES-B2	
HX216	*1-564-525-11	PLUG, CONNECTOR 10P		D1012	8-719-110-36	DIODE RD13ES-B2	
HX2-49	*1-564-518-11	PLUG, CONNECTOR 3P		D1013	8-719-110-36	DIODE RD13ES-B2	
	<JACK>			D1014	8-719-110-36	DIODE RD13ES-B2	
J1650	1-695-307-11	TERMINAL BLOCK, S 3P		D1017	8-719-110-36	DIODE RD13ES-B2	
	*****			D1018	8-719-110-36	DIODE RD13ES-B2	
				D1019	8-719-110-36	DIODE RD13ES-B2	
*A-1373-326-A	U BOARD, COMPLETE *****			D1020	8-719-109-66	DIODE RD3.3ES-B2	
	<CAPACITOR>			D1021	8-719-109-66	DIODE RD3.3ES-B2	
*4-341-751-01	EYELET (EY1003-EY1005)			D1022	8-719-109-66	DIODE RD3.3ES-B2	
*4-341-752-01	EYELET (EY1006)			D1025	8-719-911-19	DIODE 1SS119	
				D1026	8-719-911-19	DIODE 1SS119	
				D1027	8-719-911-19	DIODE 1SS119	
					<IC>		
				IC1002	8-752-056-50	IC CXA1545S	
				IC1011	8-759-145-57	IC UPC4557C	
					<COIL>		
				L1001	1-408-422-00	INDUCTOR 120UH	
				L1002	1-408-422-00	INDUCTOR 120UH	
					<TRANSISTOR>		
C1004	1-102-125-00	CERAMIC 0.0047MF	10% 50V	Q1009	8-729-119-78	TRANSISTOR 2SC2785-HFE	
C1005	1-126-301-11	ELECT 1MF	20% 50V	Q1010	8-729-119-78	TRANSISTOR 2SC2785-HFE	
C1006	1-164-096-11	CERAMIC 0.01MF	50V	Q1016	8-729-119-76	TRANSISTOR 2SA1175-HFE	
C1007	1-124-598-11	ELECT 22MF	20% 25V	Q1017	8-729-119-76	TRANSISTOR 2SA1175-HFE	
C1008	1-124-598-11	ELECT 22MF	20% 25V	Q1018	8-729-119-78	TRANSISTOR 2SC2785-HFE	
				Q1019	8-729-119-76	TRANSISTOR 2SA1175-HFE	
C1010	1-124-465-00	ELECT 0.47MF	20% 50V	Q1020	8-729-119-76	TRANSISTOR 2SA1175-HFE	
C1011	1-124-465-00	ELECT 0.47MF	20% 50V	Q1021	8-729-119-76	TRANSISTOR 2SA1175-HFE	
C1012	1-124-465-00	ELECT 0.47MF	20% 50V	Q1022	8-729-119-78	TRANSISTOR 2SC2785-HFE	
C1013	1-102-125-00	CERAMIC 0.0047MF	10% 50V	Q1023	8-729-119-78	TRANSISTOR 2SC2785-HFE	
C1014	1-126-163-11	ELECT 4.7MF	20% 50V	Q1025	8-729-119-76	TRANSISTOR 2SA1175-HFE	
				Q1029	8-729-119-76	TRANSISTOR 2SA1175-HFE	
C1016	1-126-163-11	ELECT 4.7MF	20% 50V	Q1030	8-729-119-78	TRANSISTOR 2SC2785-HFE	
C1018	1-126-301-11	ELECT 1MF	20% 50V	Q1031	8-729-119-78	TRANSISTOR 2SC2785-HFE	
C1020	1-124-242-00	ELECT 33MF	20% 25V	Q1032	8-729-119-76	TRANSISTOR 2SA1175-HFE	
C1021	1-124-465-00	ELECT 0.47MF	20% 50V	Q1033	8-729-119-76	TRANSISTOR 2SA1175-HFE	
C1022	1-124-242-00	ELECT 33MF	20% 25V	Q1034	8-729-119-76	TRANSISTOR 2SA1175-HFE	
					<RESISTOR>		
C1026	1-164-048-11	CERAMIC 12PF	5% 50V	R1011	1-249-435-11	CARBON 33K 5% 1/4W	
C1027	1-164-048-11	CERAMIC 12PF	5% 50V	R1012	1-249-434-11	CARBON 27K 5% 1/4W	
C1028	1-124-242-00	ELECT 33MF	20% 25V	R1013	1-249-417-11	CARBON 1K 5% 1/4W	
C1029	1-124-282-00	ELECT 22MF	20% 16V	R1014	1-249-441-11	CARBON 100K 5% 1/4W	
C1030	1-124-478-11	ELECT 100MF	20% 25V	R1015	1-215-437-00	METAL 4.7K 1% 1/4W	
				R1016	1-249-441-11	CARBON 100K 5% 1/4W	
C1031	1-102-963-00	CERAMIC 33PF	5% 50V	R1017	1-249-405-11	CARBON 100 5% 1/4W	
C1034	1-124-282-00	ELECT 22MF	20% 16V	R1018	1-249-427-11	CARBON 6.8K 5% 1/4W	
C1036	1-124-282-00	ELECT 22MF	20% 16V	R1019	1-249-427-11	CARBON 6.8K 5% 1/4W	
C1037	1-124-282-00	ELECT 22MF	20% 16V	R1023	1-249-405-11	CARBON 100 5% 1/4W	
C1039	1-124-478-11	ELECT 100MF	20% 25V				
C1047	1-124-465-00	ELECT 0.47MF	20% 50V				
C1048	1-126-301-11	ELECT 1MF	20% 50V				
C1049	1-124-598-11	ELECT 22MF	20% 25V				
C1051	1-124-465-00	ELECT 0.47MF	20% 50V				
C1055	1-124-589-11	ELECT 47MF	20% 16V				
C1056	1-124-499-11	ELECT 1MF	20% 50V				
C1057	1-124-768-11	ELECT 4.7MF	20% 50V				
C1059	1-124-499-11	ELECT 1MF	20% 50V				
C1060	1-124-499-11	ELECT 1MF	20% 50V				
C1061	1-124-499-11	ELECT 1MF	20% 50V				



Les composants identifiés par une trame et une marque Δ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

The components identified by shading and mark Δ are critical for safety. Replace only with part number specified.

REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
R1173	1-247-804-11	CARBON	75 5% 1/4W	*****			
R1174	1-247-895-00	CARBON	470K 5% 1/4W	*1-643-669-11 S BOARD			
R1175	1-247-895-00	CARBON	470K 5% 1/4W	*****			
R1176	1-247-804-11	CARBON	75 5% 1/4W	<CAPACITOR>			
R1177	1-247-804-11	CARBON	75 5% 1/4W	C3403	1-164-161-11	CERAMIC CHIP 0.0022MF	10% 50V
R1178	1-247-895-00	CARBON	470K 5% 1/4W	C3408	1-164-232-11	CERAMIC CHIP 0.01MF	10% 50V
R1179	1-247-895-00	CARBON	470K 5% 1/4W	C3409	1-124-477-11	ELECT 47MF	20% 16V
R1180	1-247-804-11	CARBON	75 5% 1/4W	C3411	1-124-034-51	ELECT 33MF	20% 16V
R1181	1-247-804-11	CARBON	75 5% 1/4W	<IC>			
R1182	1-247-804-11	CARBON	75 5% 1/4W	IC3401	8-759-403-44	IC MN1280-S	
R1183	1-247-895-00	CARBON	470K 5% 1/4W	IC3402	8-759-070-42	IC M37201M6-A18FP	
R1184	1-247-895-00	CARBON	470K 5% 1/4W	<COIL>			
R1185	1-247-895-00	CARBON	470K 5% 1/4W	L3401	1-408-421-00	INDUCTOR	100UH
R1186	1-247-895-00	CARBON	470K 5% 1/4W	<RESISTOR>			
R1187	1-247-804-11	CARBON	75 5% 1/4W	R3401	1-216-049-00	METAL GLAZE 1K	5% 1/10W
R1188	1-247-804-11	CARBON	75 5% 1/4W	R3402	1-216-049-00	METAL GLAZE 1K	5% 1/10W
R1191	1-215-437-00	METAL	4.7K 1% 1/4W	R3403	1-216-073-00	METAL GLAZE 10K	5% 1/10W
R1192	1-215-437-00	METAL	4.7K 1% 1/4W	R3404	1-216-033-00	METAL GLAZE 220	5% 1/10W
R1193	1-215-437-00	METAL	4.7K 1% 1/4W	R3405	1-216-057-00	METAL GLAZE 2.2K	5% 1/10W
R1194	1-215-437-00	METAL	4.7K 1% 1/4W	R3406	1-216-065-00	METAL GLAZE 4.7K	5% 1/10W
R1195	1-249-426-11	CARBON	5.6K 5% 1/4W	R3407	1-216-033-00	METAL GLAZE 220	5% 1/10W
R1196	1-249-426-11	CARBON	5.6K 5% 1/4W	R3408	1-216-065-00	METAL GLAZE 4.7K	5% 1/10W
<SWITCH>				R3409	1-216-033-00	METAL GLAZE 220	5% 1/10W
S1150	1-572-198-11	SWITCH, KEYBOARD		R3476	1-216-295-00	METAL GLAZE 0	5% 1/10W
<CONNECTOR>				<CONNECTOR>			
UT22	*1-566-941-11	CONNECTOR, HINGE (TAB) 30P		S45	*1-564-511-71	PLUG, CONNECTOR 8P	
UT23	*1-566-641-11	CONNECTOR, HINGE (TAB) 18P		S46	*1-564-506-11	PLUG, CONNECTOR 3P	
UT35	*1-564-518-11	PLUG, CONNECTOR 3P		<CRYSTAL>			
*****				X3401	1-577-082-11	VIBRATOR, CERAMIC	
*1-643-668-11	K BOARD	*****		*****			
<JACK>				MISCELLANEOUS			
J1701	*1-573-962-11	CONNECTOR (MALE) 50P		*****			
<CONNECTOR>				Δ 1-417-177-11 SELECTOR, ANTENNA (AS-1) Δ 1-426-575-11 COIL, DEGAUSSING Δ 1-426-576-11 COIL, DEGAUSSING Δ 1-451-393-11 DEFLECTION YOKE (Y34EXA) 1-452-032-00 MAGNET, DISK: 10MM ϕ 1-452-094-00 MAGNET, ROTATABLE DISK: 15MM ϕ Δ 1-452-616-12 NECK ASSY, PICTURE TUBE (NA323) *1-555-400-00 CABLE, PIN Δ 1-696-002-12 CORD, POWER (WITH NOISE FILTER)			
K39	*1-564-521-11	PLUG, CONNECTOR 6P		V901	Δ 8-733-731-05	PICTURE TUBE (M81KV10X)	
K41	*1-564-519-11	PLUG, CONNECTOR 4P		*****			
<TRANSISTOR>				ACCESSORIES AND PACKING MATERIALS			
Q1701	8-729-119-78	TRANSISTOR 2SC2785-HFE		*****			
Q1702	8-729-119-76	TRANSISTOR 2SA1175-HFE		1-559-913-11	CABLE, ANTENNA CONNECTION		
Q1703	8-729-119-76	TRANSISTOR 2SA1175-HFE		3-755-525-21	MANUAL, INSTRUCTION (ENGLISH)		
Q1704	8-729-119-76	TRANSISTOR 2SA1175-HFE		3-755-525-31	MANUAL, INSTRUCTION (FRENCH) (CND)		
<RESISTOR>							
R1701	1-249-433-11	CARBON	22K 5% 1/4W				
R1702	1-249-433-11	CARBON	22K 5% 1/4W				
R1703	1-249-433-11	CARBON	22K 5% 1/4W				
R1704	1-249-433-11	CARBON	22K 5% 1/4W				
R1705	1-249-433-11	CARBON	22K 5% 1/4W				
R1706	1-249-433-11	CARBON	22K 5% 1/4W				
R1707	1-249-433-11	CARBON	22K 5% 1/4W				
R1708	1-249-433-11	CARBON	22K 5% 1/4W				

<u>REF.NO.</u>	<u>PART NO.</u>	<u>DESCRIPTION</u>	<u>REMARK</u>
	3-755-525-41	MANUAL, INSTRUCTION (SPANISH) (US)	
	*4-031-871-01	BAG, PROTECTION	
	*4-036-704-01	CUSHION (UPPER) (ASSY)	
	*4-036-706-01	CUSHION (LOWER) (ASSY)	
	*4-036-941-01	INDIVIDUAL CARTON	

REMOTE COMMANDER

8-917-140-90	REMOTE COMMANDER (RM-AV1100)	
9-995-517-01	COVER, BATTERY (FOR RM-AV1100)	

