


8mm Video MECHANICAL ADJUSTMENT MANUAL II

FL MECHANISM (Q MECHANISM) Video 8

File with the SERVICE MANUAL

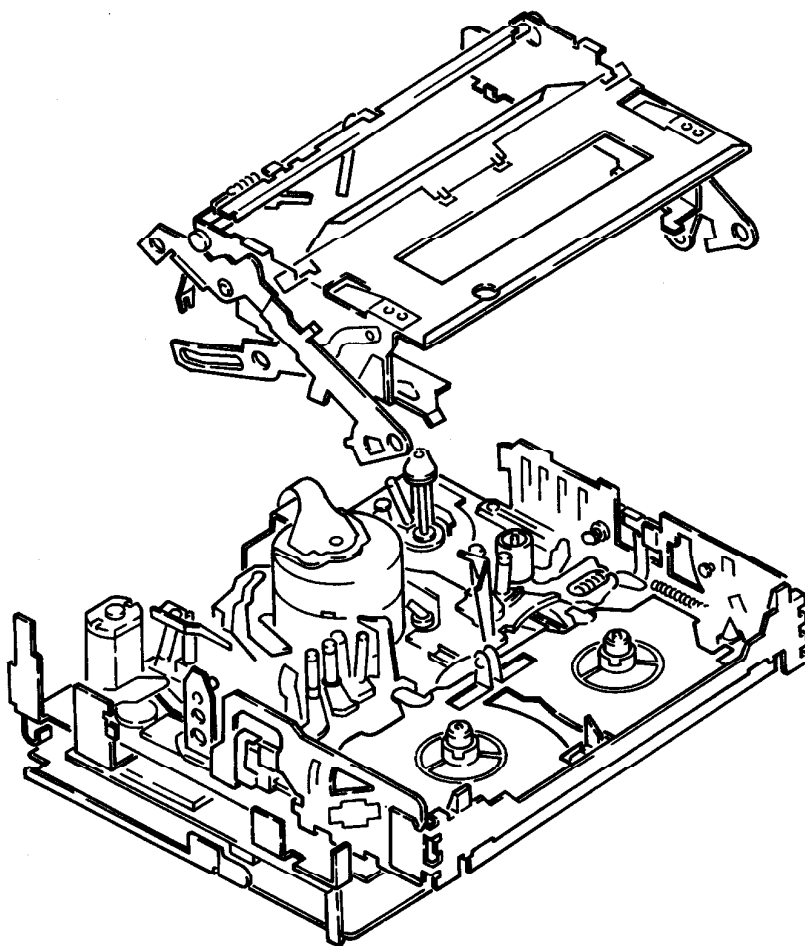

8 VIDEO RECORDER
SONY®

TABLE OF CONTENTS

| | | | |
|--|----|---|----|
| 1. PREPARATION FOR MECHANICAL CHECK, ADJUSTMENT AND REPLACEMENT | 3 | 3-10. TG-1 Arm Assembly | 21 |
| 1-1. Cassette Compartment Holder Assembly | 3 | 3-11. String Joint | 22 |
| 1-2. Cassette Compartment Look Height Adjustment .. | 4 | 3-12. Guide Arm T Assembly, Guide Arm S Assembly .. | 23 |
| 1-3. Operation with Cassette Compartment Holder Assembly Removed | 5 | 3-13. Pinch Press Arm Assembly | 25 |
| 1-4. Handing of Mode Selector | 6 | 3-14. GL Slider Assembly | 26 |
| 1-5. Mode Selector Schematic Diagram | 7 | 3-15. Phase Adjustment | 27 |
| 1-6. Mode Selector Parts List | 7 | 3-16. Gear Train Operation Check | 29 |
| 2. PERIODIC CHECK AND MAINTENANCE | | 3-17. Loading Motor Assembly | 30 |
| 2-1. Cleaning of Rotary Drum | 8 | 3-18. Guide Rail Base-1 Assembly | 31 |
| 2-2. Cleaning of Tape Path | 8 | 3-19. Guid Rail Base-2 Assembly | 32 |
| 2-3. Periodic Check Items | 9 | 3-20. Guide Rail Base-3 Assembly | 33 |
| 2-4. Service Jigs List | 10 | 3-21. Capstan Motor Assembly | 34 |
| 3. MECHANICAL CHECK,ADJUSTMENT AND REPLACEMENT | | 3-22. Drum Base Assembly | 35 |
| 3-1. LED Base | 11 | 3-23. Drum Assembly | 36 |
| 3-2. RL Base Assembly, Retainer | 12 | 3-24. Replacement of Rotary Upper Drum | 37 |
| 3-3. S Reel Table Assembly | 13 | 3-25. Reel Table Height Check | 39 |
| 3-4. T Reel Table Assembly | 14 | 3-26. FWD/RVS Torque Check | 39 |
| 3-5. Oneway Clutch Assembly | 15 | 3-27. Tension Regulator Position Adjustment | 40 |
| 3-6. S Soft Arm Assembly | 16 | 3-28. FWD Back Tension Adjustment | 41 |
| 3-7. LS Chassis Assembly | 17 | 4. TAPE PATH ADJUSTMENT | |
| 3-8. Pinch Arm Assembly | 19 | 4-1. Preparation for Adjustment | 42 |
| 3-9. TG-11 Arm Assembly | 20 | 4-2. Tracking Adjustment | 43 |
| | | 4-3. No.4 Guide (TG-4) Adjustment | 43 |
| | | 4-4. No.11 Guide (TG-11) Adjustment | 44 |
| | | 4-5. Check after Adjustment | 45 |

1. PREPARATION FOR MECHANICAL CHECK, ADJUSTMENT AND MAINTENANCE

For removal of the cabinet and boards, refer to "Disassembly" in each Service Manual.

Mechanical adjustment is done in the **USE** mode. (To select the **USE** mode, refer to "1.4 Handling of Mode Selector".)

1-1 CASSETTE COMPARTMENT HOLDER ASSEMBLY (Fig. 1)

1. Removal

- 1) Select the **USE** mode.
- 2) Remove the screw ①, and then, the LS support ②.
- 3) Remove the four screws ③, and then, the LS frame assy ④.
- 4) Remove the three lock washers ⑤, and then, the washer ⑥, bar, joint ⑦, T protector assy ⑧, and TP arm assy ⑨ in that order.
- 5) Remove the two screws ⑩, and then, the two arm shafts A ⑪.
- 6) Remove the shaft through the long hole ⑫. With the cassette compartment holder assembly ⑬ rotated in a direction of the arrow ⑭, remove the long holes ⑮ and ⑯ from the shaft in that order, and then, remove the cassette compartment holder assembly ⑬.
- 7) Slide the BS holder ⑰ in a direction of the arrow ⑱ as shown in Fig. A and remove it in a direction of the arrow ⑲.

Note : When this is done, be careful not to drop the steel ball and spring, compression out of the BS holder ⑰.

2. Mounting

- 1) Select the **USE** mode.
- 2) Mount the BS holder ⑰ in the reverse order of its removal.
Note: Refer to Fig. A.
- 3) Mount the shafts in the order of the long holes ⑮, ⑯ and ⑫ of the cassette compartment holder assembly ⑬, respectively.

Note : When this is done, rotate the cassette compartment holder assembly ⑬ in a direction of the arrow ⑭ to mount it until the long hole is aligned with the oval shape of the shaft.

- 4) Align the oval shape of the two arm shafts A ⑪ with the long holes of the LS chassis, fit them in firmly and fix with the two screws ⑩.
- 5) Mount the TP arm assy ⑨, T protector assy ⑧ and bar, joint ⑦, respectively. Then, mount the washer ⑥ and three lock washers ⑤.
- 6) Mount the LS frame assy ④ to the chassis and fix with the four screws ③.
- 7) Mount the LS support ② to the chassis and fix with the screw ①.

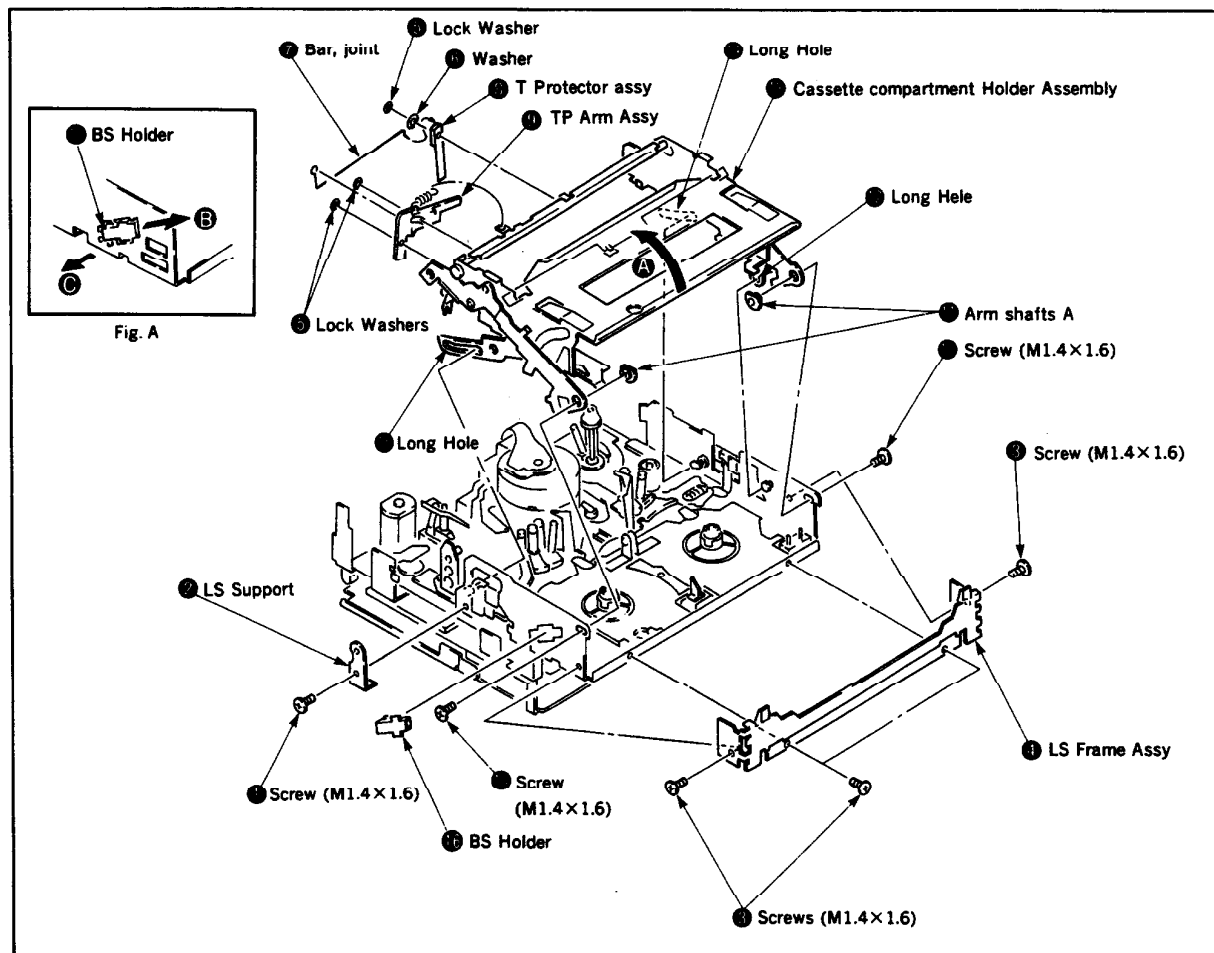


Fig. 1

1-2 CASSETTE COMPARTMENT LOCK HEIGHT ADJUSTMENT (Fig. 2)

1) Using a spacer, etc., insert a 15.3mm-thick cassette to lock the cassette compartment.

Note : As shown in Fig. A, a 15.3mm-thick portion may be under the throttle part ②.

2) Pressing the part ③, nip the F arm A ● and the first tooth of the C arm adjusting plate ● with the clip ●, and tighten the adjusting screw ● at a torque of 1kg·cm.

3) Apply Screw Lock to the adjusting screw ● after making sure of the following clearances between the throttle part ② of the cassette compartment holder and the cassette as shown in Fig. B.

- For 15mm-thick dummy cassette : 0.5 – 0.9
- For 15.2mm-thick dummy cassette : 0.3 – 0.7

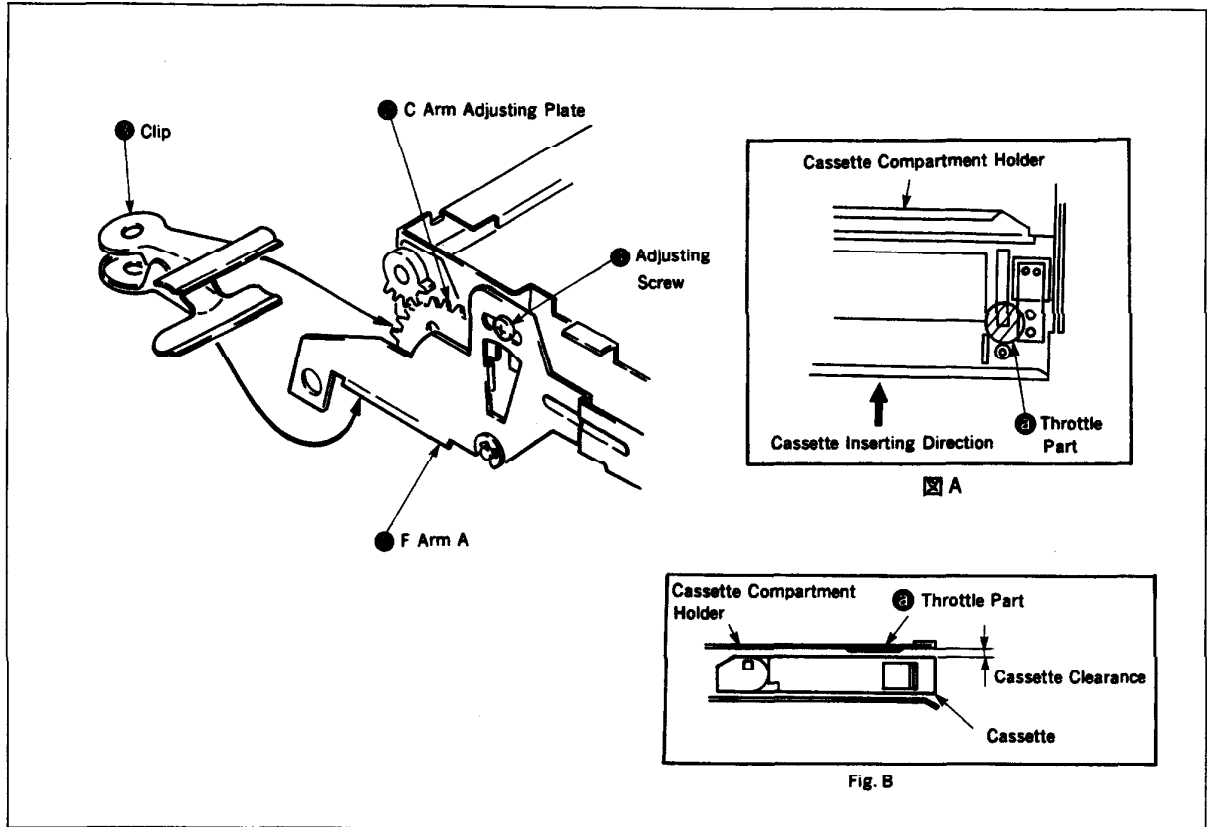


Fig. 2

1-3 OPERATION WITH CASSETTE COMPARTMENT HOLDER ASSEMBLY REMOVED

1. Putting into Loading state (Fig. 3)

- 1) Referring to the Service Manual, supply power with the cabinet and camera section removed. (Make the mechanism deck ready to operate.)
- 2) Place the cap ● on the LED assembly ●.
- 3) Press the pin of the push switch ● (ON state) and fix it with adhesive tape ● in that state.
- 4) Press the locking plate release arm ● in an arrow direction. The set is made ready for loading.

2. Putting into the REC Mode

- 1) Short the TEST pins (SS-82 board CN404 pins ● and ● for CCD-V11/V88) to place into the TEST mode.

For CCD-V11/V88 ; SS-82 board CN404
TEST pin connector

| | |
|---|-----------------------------|
| 4 | GND |
| 3 | $\overline{\text{CAM ADJ}}$ |
| 2 | $\overline{\text{TEST}}$ |
| 1 | $\overline{\text{PATH}}$ |

The set is placed into the TEST mode by shorting the pins ● and ●.

- 2) After completing the step 1), set the power switch to VTR (or CAMERA).
 - 3) Turn on the REC switch. (If the set is placed in the TEST mode, detection of S and T reel table rotation is disabled and the tape can run.)
- #### 3. Putting into EJECT
- 1) Turn on the EJECT switch.

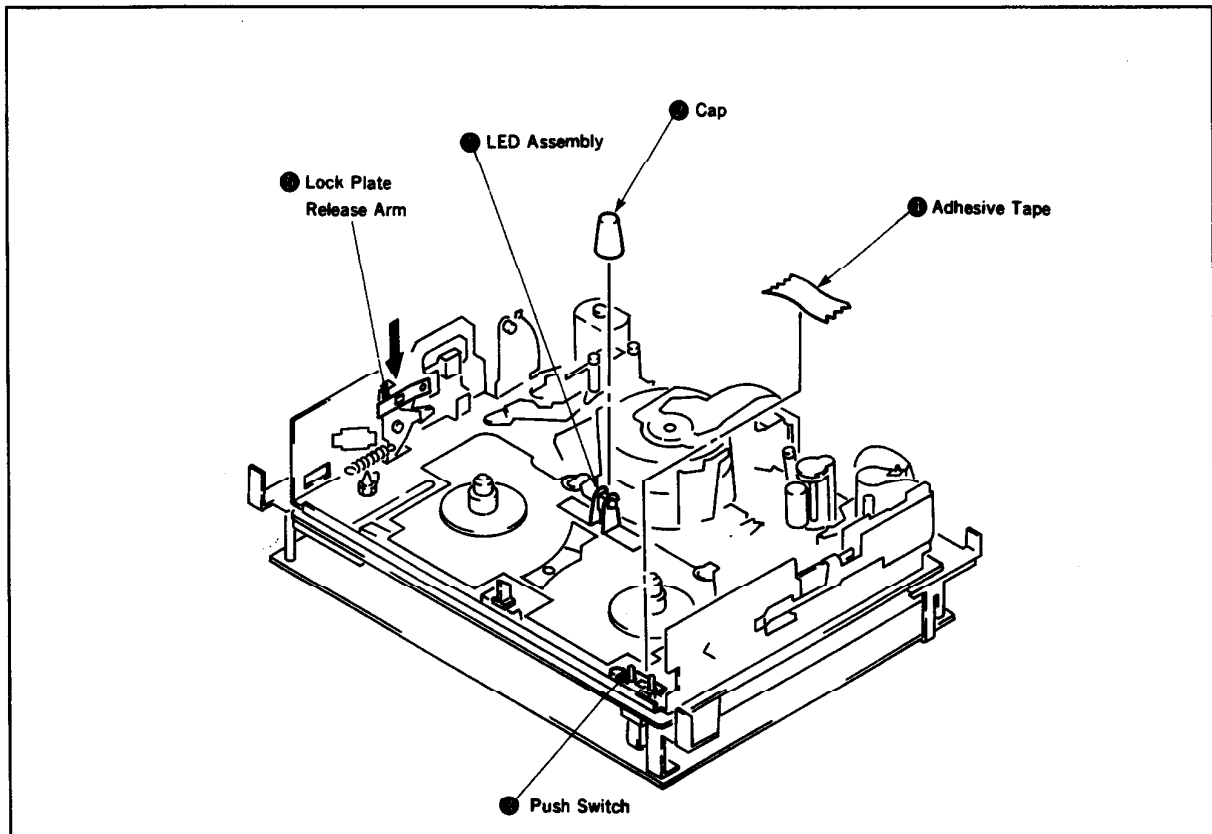


Fig. 3

1-4 HANDLING OF MODE SELECTOR

• Mount the MODE SELECTOR III panel to the mode selector.
 U, FL, O and O' mechanisms have different mode indications respectively. Select your disired type. (Fig. 4)

1. Construction (Fig. 5)

2. Connection (Fig. 6)

For CCD-VII/V88

- 1) Remove the plate, ornamental ●.
- 2) Remove the screw ●, and then, the LB-12 board ●.
- 3) Remove the FP-114 flexible connector ● and loading motor connector ●, and insert them into the MODE SELECTOR III conversion connector respectively.
- 4) Insert the M-SW connector of the mode selector into the MODE SELECTOR III conversion connector.

3. Handling

- 1) Use the M mode selector buttons only.
- 2) During mode selection, "BLANK" lights up when no mode is being selected.
- 3) If the right M mode selector button is kept pressed, EJECT, USE, GL, Q.REW, GL, REC and READY light up in that order.
- 4) When changing over from the READY mode back to the EJECT mode, press the left M mode selector button to select your desired mode.

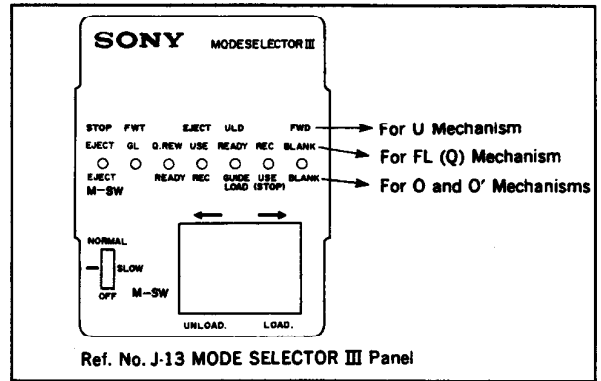


Fig. 4

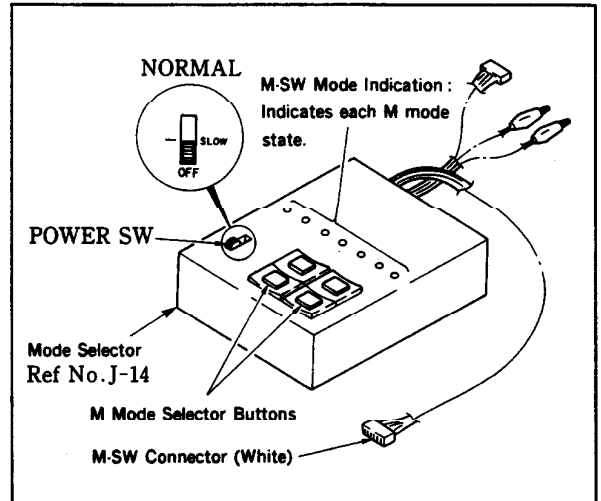


Fig. 5


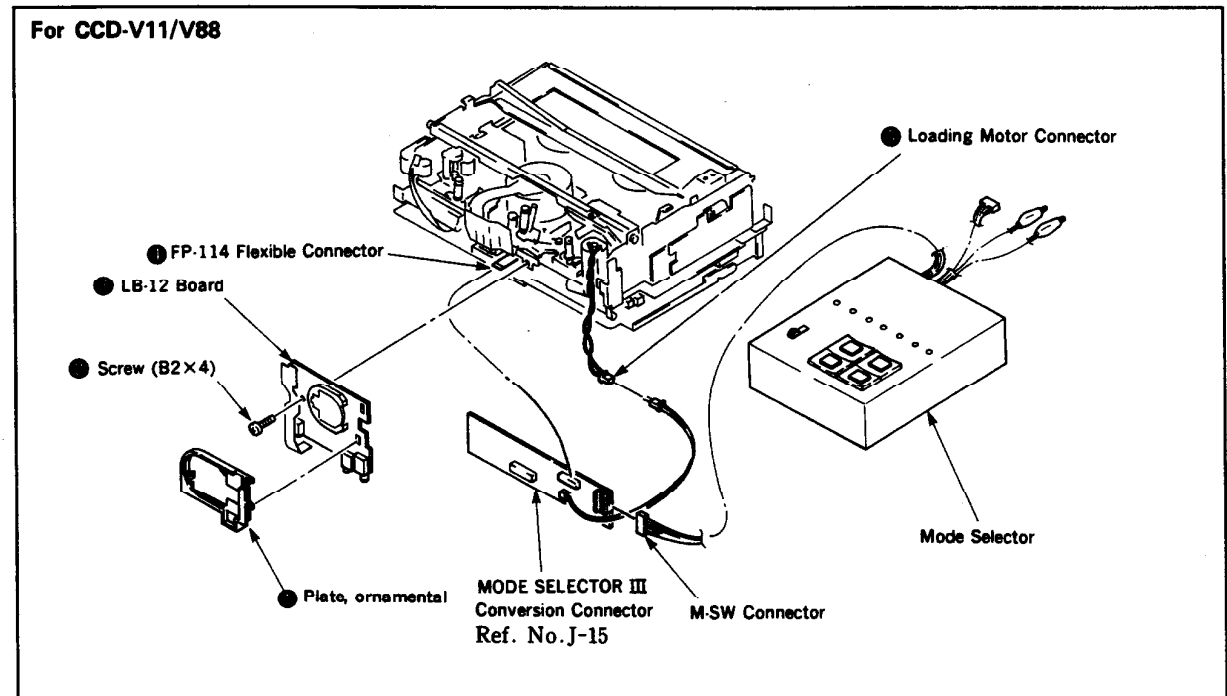


Fig. 6

1-5 MODE SELECTOR SCHEMATIC DIAGRAM

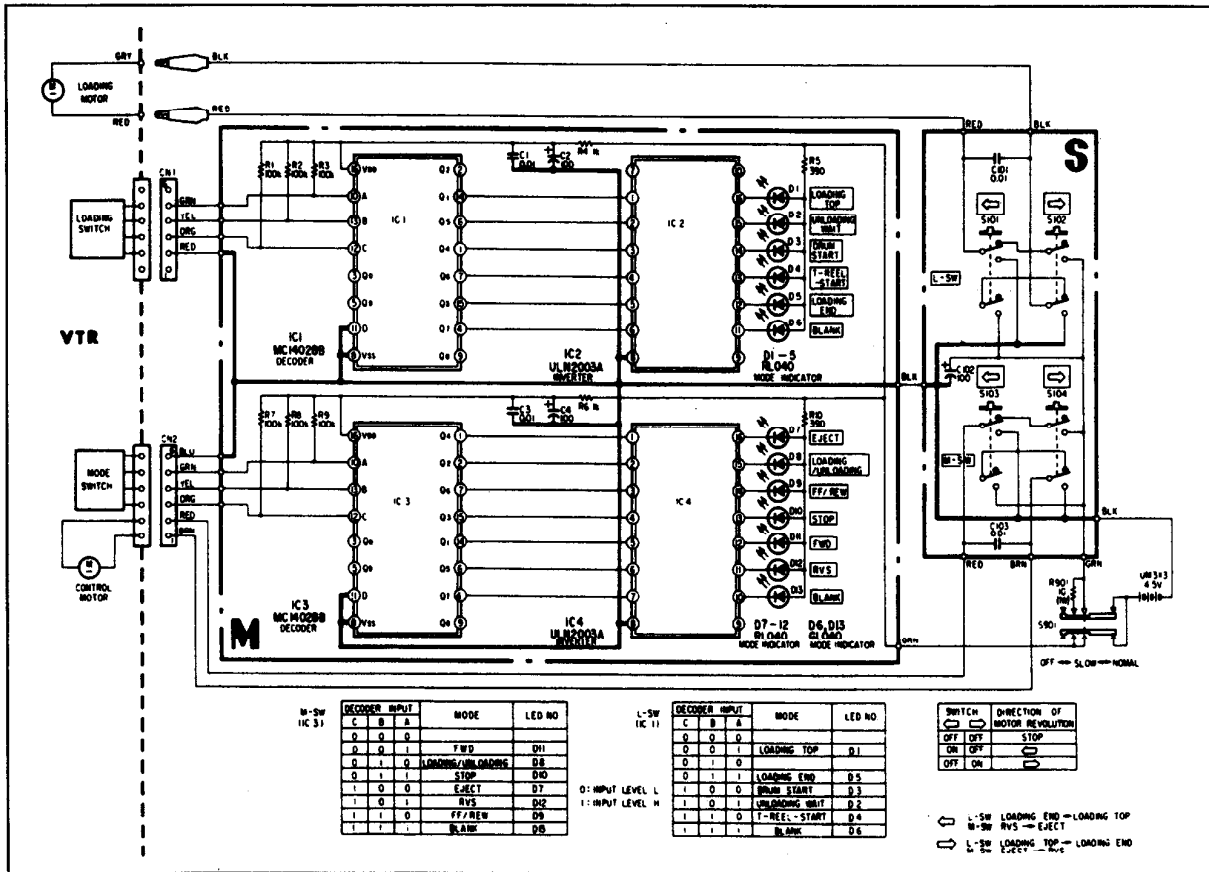

1-6 MODE SELECTOR PARTS LIST

| Ref. No | Part No. | Description | Ref. No | Part No. | Description |
|------------------|--------------|------------------|-----------------|--------------|------------------|
| CAPACITOR | | | IC | | |
| C1 | 1-108-579-00 | MILER 0.01μF 50V | IC1 | 8-752-240-28 | IC TC4028BP |
| C2 | 1-123-333-00 | ELECT 100μF 24V | IC2 | 8-752-120-03 | IC μPA2003C |
| C3 | 1-108-579-00 | MILER 0.01μF 50V | IC3 | 8-759-240-28 | IC TC4028BP |
| C4 | 1-123-333-00 | ELECT 100μF 24V | IC4 | 8-759-120-03 | IC μPA2003C |
| C101 | 1-108-579-00 | MILER 0.01μF 50V | RESISTOR | | |
| C102 | 1-123-333-00 | ELECT 100μF 24V | R1 | 1-247-179-00 | CARBON 100K 1/4W |
| C103 | 1-108-579-00 | MILER 0.01μF 50V | R2 | 1-247-179-00 | CARBON 100K 1/4W |
| DIODE | | | R3 | 1-247-179-00 | CARBON 100K 1/4W |
| D1 | 8-719-812-31 | DIODE TLR123 | R4 | 1-247-131-00 | CARBON 1K 1/4W |
| D2 | 8-719-812-31 | DIODE TLR123 | R5 | 1-247-121-00 | CARBON 390 1/4W |
| D3 | 8-719-812-31 | DIODE TLR123 | R6 | 1-247-131-00 | CARBON 1K 1/4W |
| D4 | 8-719-812-31 | DIODE TLR123 | R7 | 1-247-179-00 | CARBON 100K 1/4W |
| D5 | 8-719-812-31 | DIODE TLR123 | R8 | 1-247-179-00 | CARBON 100K 1/4W |
| D6 | 8-719-812-33 | DIODE TLG123A | R9 | 1-247-179-00 | CARBON 100K 1/4W |
| D7 | 8-719-812-31 | DIODE TLR123 | R10 | 1-247-121-00 | CARBON 390 1/4W |
| D8 | 8-719-812-31 | DIODE TLR123 | R901 | 1-214-594-00 | METAL 10 1W |
| D9 | 8-719-812-31 | DIODE TLR123 | | | |
| D10 | 8-719-812-31 | DIODE TLR123 | | | |
| D11 | 8-719-812-31 | DIODE TLR123 | | | |
| D12 | 8-719-812-31 | DIODE TLR123 | | | |
| D13 | 8-719-812-33 | DIODE TLG123A | | | |

2. PERIODIC CHECK AND MAINTENANCE

● Carry out the following maintenance and periodic checks in order not only to fully exhibit the functions and performance of the set, but also for the equipment and tape. After repairing, service the set as follows, regardless of the length of use.

2-1 CLEANING OF ROTARY DRUM ASSEMBLY

- 1) Gently apply chamois cloth (Ref. No. J-2) soaked in cleaning liquid (Ref. No. J-1) to the rotary drum assembly.
Clean it by rotating the upper rotary drum assembly slowly counterclockwise by hand.

Note : Do not rotate the motor by power or rotate the upper rotary drum assembly clockwise by hand. Also, the head tip is highly likely to be damaged if the chamois cloth is moved in a perpendicular direction to the it. Make sure to follow the instructions above for cleaning the rotary drum assembly.

2-2 CLEANING OF TAPE PATH (Fig. 7)

- 1) In the EJECT mode, clean the tape running system (TG-1, -2, -3, -4, -5, -6, -7, -8, -9, -10, -11, pinch roller, and capstan shaft) and the lower drum, using a superfine applicator (Ref. No. J-3) soaked in the cleaning liquid.

Note : Note that no oil or grease of each link mechanism adheres to the superfine applicator (Ref. No. J-3).

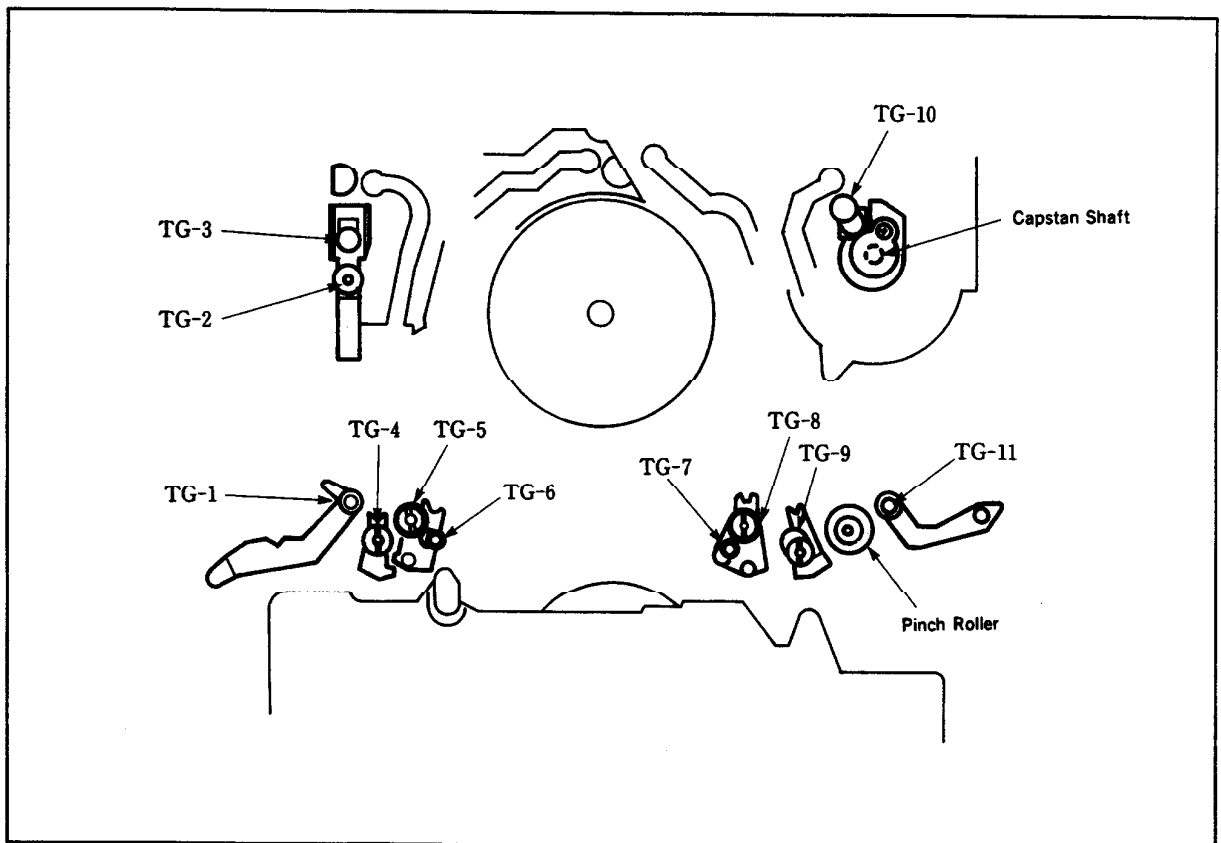


Fig. 7

2-3 PERIODIC CHECK ITEMS


| Location of Maintenance and check | | Hours of Use (H) | | | | | | | | | | Remarks |
|-----------------------------------|---|------------------|------|------|------|------|------|------|------|------|------|--|
| | | 500 | 1000 | 1500 | 2000 | 2500 | 3000 | 3500 | 4000 | 4500 | 5000 | |
| Tape trans- portion System | Cleaning of tape path surface | ○ | ○ | ○ | ○ | ○ | ○ | ○ | ○ | ○ | ○ | Be careful of oil |
| | Cleaning and degausing of rotary assembly | ○ | ○ | ○ | ○ | ○ | ○ | ○ | ○ | ○ | ○ | Be careful of oil |
| Driving System | Relay belt | — | ☆ | — | ☆ | — | ☆ | — | ☆ | — | ☆ | 3-728-212-01 |
| | Capstan shaft | — | ◎ | — | ◎ | — | ◎ | — | ◎ | — | ◎ | Be adsolutely careful not to get oil on the tape path surface. |
| | Relay pulley sheft | — | ◎ | — | ◎ | — | ◎ | — | ◎ | — | ◎ | |
| | Loading motor | — | ☆ | — | ☆ | — | ☆ | — | ☆ | — | ☆ | 1-541-607-11 |
| Performance Confirmation | Abnormal noise | ☆ | ☆ | ☆ | ☆ | ☆ | ☆ | ☆ | ☆ | ☆ | ☆ | |
| | Back tension measurement | — | ☆ | — | ☆ | — | ☆ | — | ☆ | — | ☆ | |
| | Brake system | — | ☆ | — | ☆ | — | ☆ | — | ☆ | — | ☆ | |
| | FWD. RVS torque measurement | — | ☆ | — | ☆ | — | ☆ | — | ☆ | — | ☆ | |

○ : Cleaning ◎ : Oil ☆ : Confirmation

Note : When overhauling, refer to the items above to replace parts.

Note : Concerning oil


- Be sure to use specified oil. (If you use oil with different viscosity, etc., it may cause troubles.)
Oil : Part No. 7-661-018-18 (Mitsubishi Diamond Oil Hydrofluid NT-68)
- When lubricating bearings, be sure use oil free from dust, etc. (If you use oil with dust, etc. contained, it may cause bearings to be worn out or seized.)
- A drip of oil refers to an amount attached to the tip of a ϕ 2mm stick shown in the right figure.

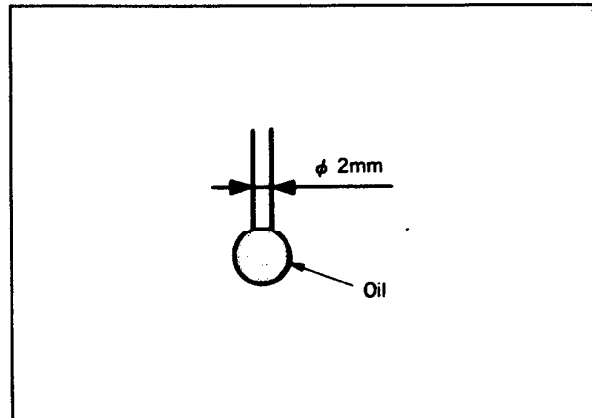

2-4 Service jigs list

| Ref. No. | Name | Part No. | Fixture No. | Usage and Others |
|----------|---|------------------------------|-------------|----------------------------|
| J-1 | Cleasing fluid | Y-2031-001-0 | — | |
| J-2 | Cleasing cloth | 2-034-697-00 | — | |
| J-3 | Super fine applicator (Made by NIPPON APPLICATOR, P752D) | | — | |
| J-4 | Head degausser | Widely available | — | |
| J-5 | Small mirror for adjustment Spare mirror | J-6080-029-A J-6080-030-1 | SL-5052 | Tape path |
| J-6 | Alignment tape NTSC (WR5-1N) PAL (WR5-1C) | 8-967-995-01 8-967-995-06 | | Tape path |
| J-7 | Dial tension gauge | J-6080-827-A | | Various torque measurement |
| J-8 | Tension measurement reel | J-6080-831-A | | With $\phi 30$ tape |
| J-9 | FWD and RVS winding torque cassette | J-6080-824-A | GD-2086 | |
| J-10 | Drum screwdriver (Hexagonal wrench screwdriver) | 7 700 766 01 | | |
| J-11 | Screwdriver for tape path | J-6082-026-A | | For tape guide adjustment |
| J-12 | Mode selector III panel | J-6082-023-A | | |
| J-13 | Mode selector | J-6080-825-A | | For all models |
| J-14 | Mode selector III conversion connector | J-6082-021-A | | |

Other equipment ● Oscilloscope
● Analog tester (20k Ω)

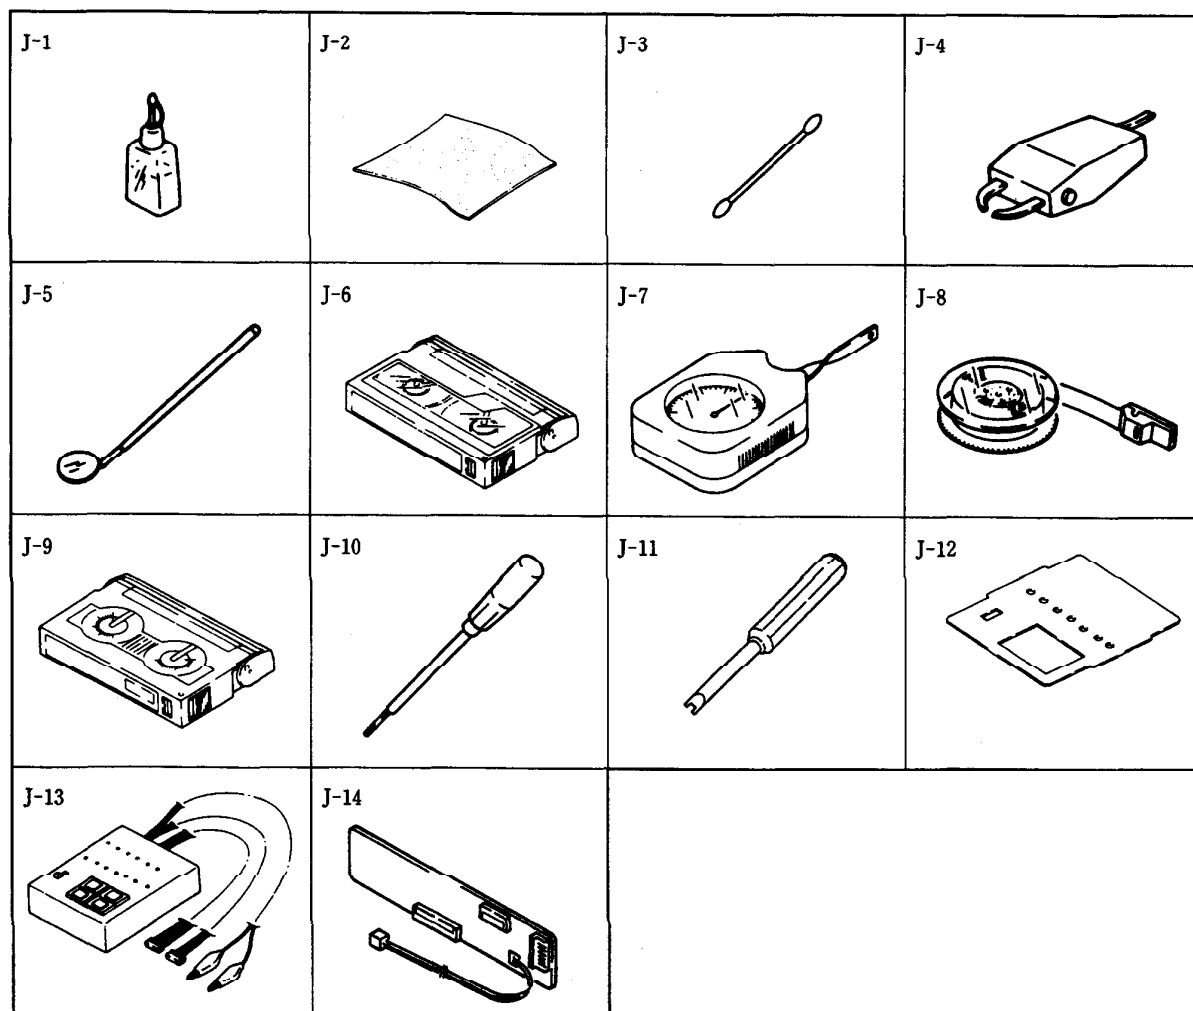

3. MECHANICAL CHECK, ADJUSTMENT AND REPLACEMENT

Note : Use the mode selector (Ref. No. J-14) for the following mechanical checks, adjustments and replacements.

Note : The modes in are those set by pressing the mode selector buttons.

3-1 LED BASE (Fig. 8)

1. Removal

- 1) Select the USE mode.
- 2) Referring to 1-1, remove the cassette compartment holder assembly.
- 3) As shown in Fig. A, rotate the LED in a direction of the arrow **A** and remove it in a direction of the arrow **B**.
- 4) Remove the three screws **1**, **2** and **3**.
- 5) Lifting the LED base **4**, remove it by pushing it in a direction of the arrow **C**.

Note : Dismount and remount the LED base carefully, because its holder is easily deformed.

2. Mounting

- 1) Select the USE mode.
- 2) Put the claw **5** of the LED base **4** in the notch **6** of the LS chassis without catching the LED in between. Next, fit to the dowels **7** at 2 places.
- 3) Mount and tighten the screws **1**, **2** and **3** in that order.
- 4) As shown in Fig. B, set the LED in a direction of the arrow **A** and rotate it in a direction of the arrow **B** to fix.
- 5) As shown in Fig. C, bend a flexible board and put it in the holder.

Note : In the step2), make sure that the barring **8** of the arm assy, gear can appears in the hole of the LED base. (Fig. D)

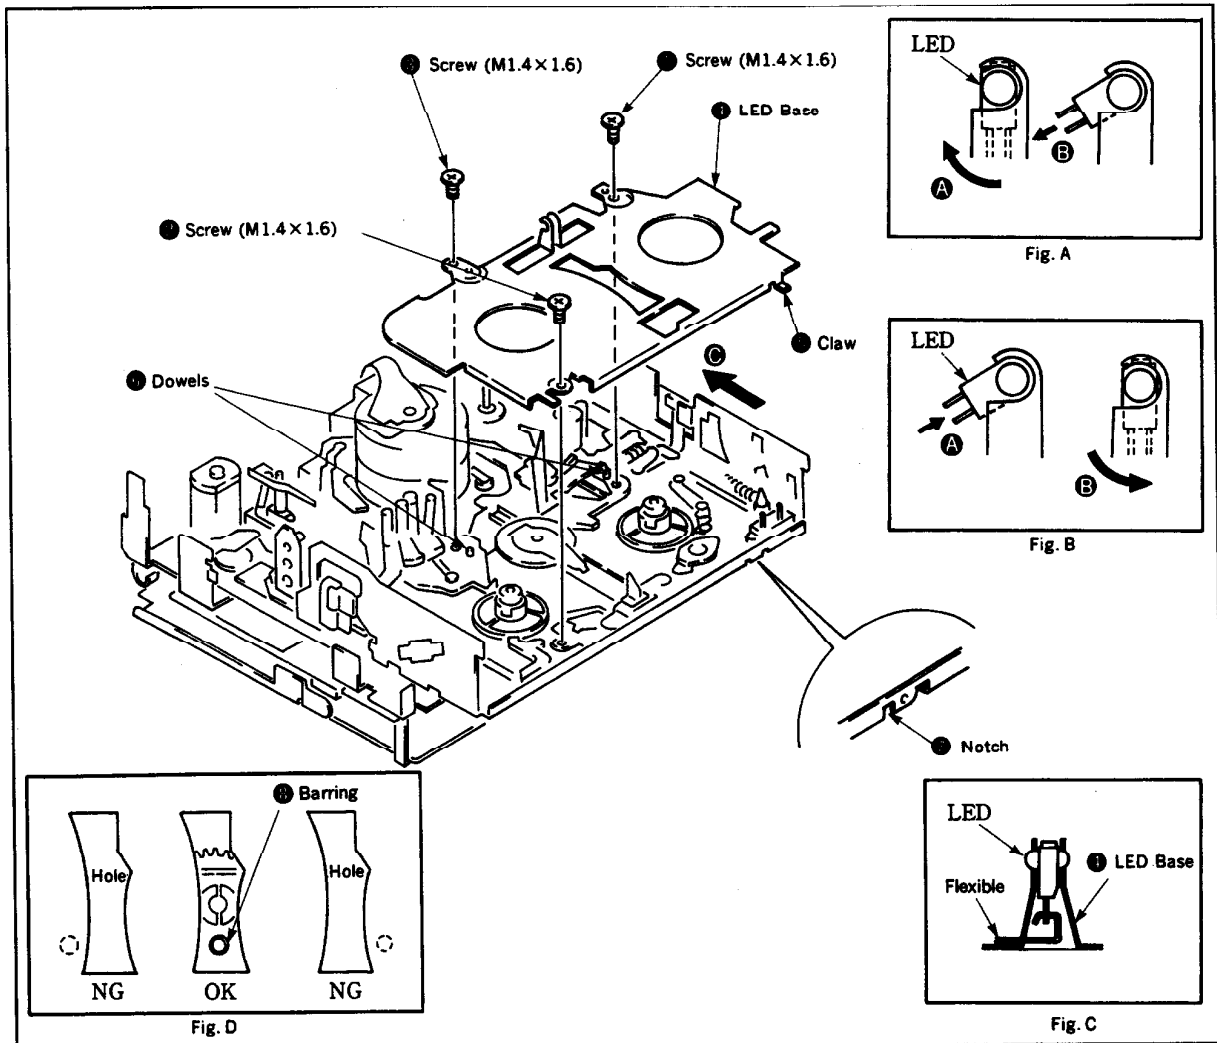


Fig. 8

3-2 RL BASE ASSEMBLY, RETAINER (Fig. 9)

1. Removal

- 1) Select the **USE** mode.
- 2) Referring to 1-1, remove the cassette compartment holder assembly.
- 3) Referring to 3-1, remove the LED base.
- 4) Remove the screw ●, and then, retainer ●.
- 5) Remove the screw ●, and then, RL base assembly ●.

2. Mounting

- 1) Select the **USE** mode.
- 2) With the screw ●, mount the RL base assembly ● to the LS chassis.
- 3) With the screw ● fix the retainer ● to the RL base assembly ●.
When this is done, align the bump part ※ of the retainer ● with the bump part ※ of the guide rail T. (Fig. A)
- 4) Referring to 3-1, mount the LED base.
- 5) Referring to 1-1, mount the cassette compartment holder assembly.

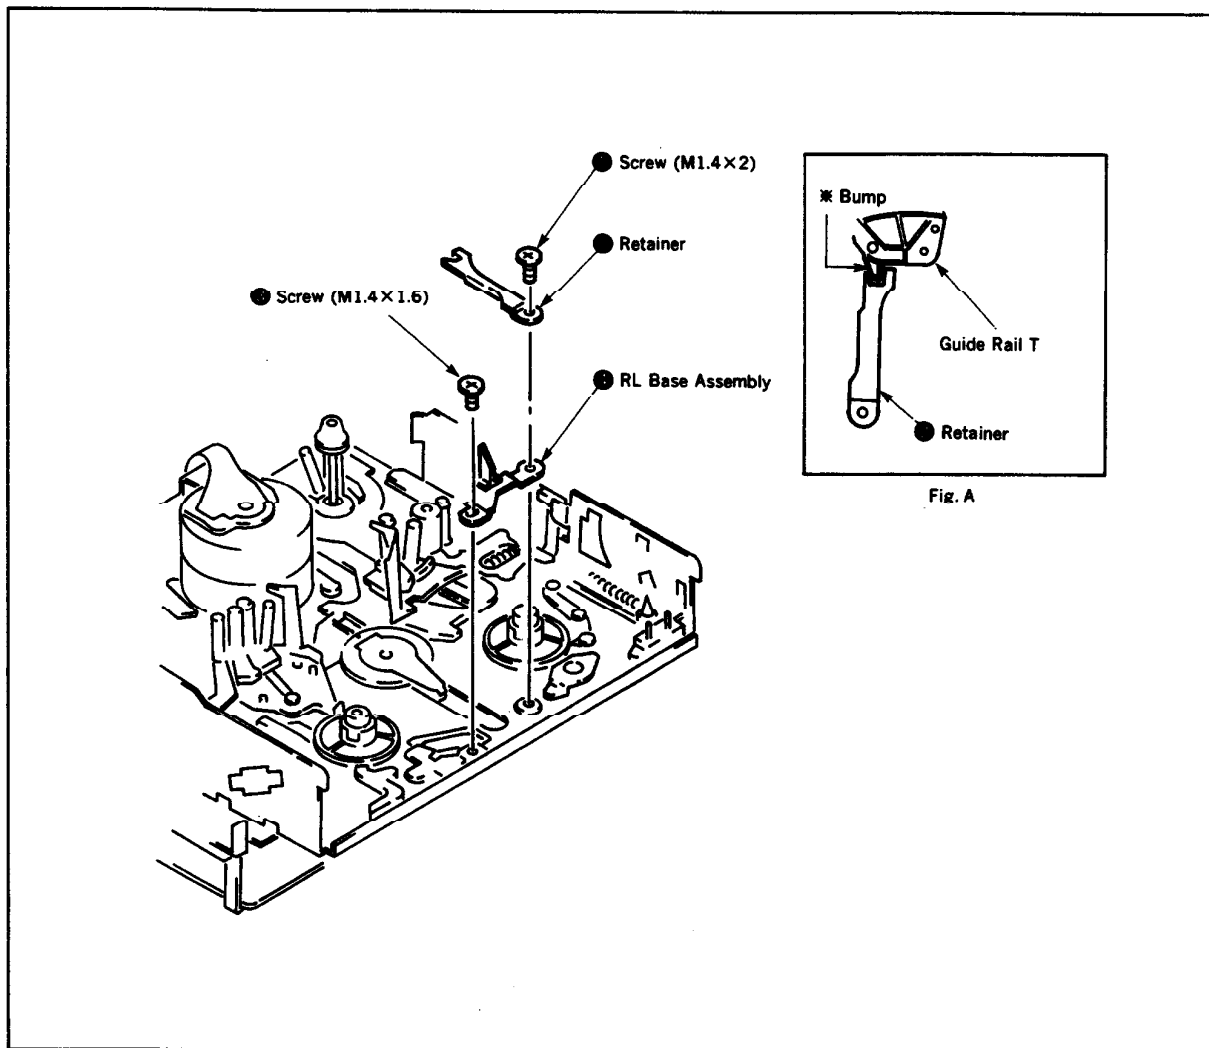


Fig. 9

3-3 TABLE ASSY, REEL, SUPPLY (Fig. 10)

1. Removal

- 1) Select the **USE** mode.
- 2) Referring to 1-1, remove the cassette compartment holder assembly.
- 3) Referring to 3-1, remove the LED base.
- 4) As shown in Fig. A, making use of slackness of the tension regulator string ● in the **USE** mode, remove the string out of the groove of the table assy, reel, supply ●. When this is done, be careful not to bend the tension regulator string ● and the S soft arm ● must be moved in a direction of the arrow ⊙.
- 5) Remove the table assy, reel, supply ●.

Note : Dismount and remount the table assy, reel, supply ●, holding the reel claw ✱.

2. Mounting

- 1) Select the **USE** mode.
- 2) As shown in Fig. B, move the S soft arm ● in a direction of the arrow ⊙.
- 3) Avoiding the tension regulator string ●, mount the table assy, reel, supply ● to the shaft ●.
- 4) Put the tension regulator string ● in the groove of the table assy, reel, supply ● and fit it properly by turning the table assy, reel, supply ●.
- 5) Referring to 3-1, mount the LED base.
- 6) Referring to 1-1, mount the cassette compartment holder assembly.

Note : Do not touch the tension regulator string ● with naked hand. Also, be careful of adhesion of grease, etc.

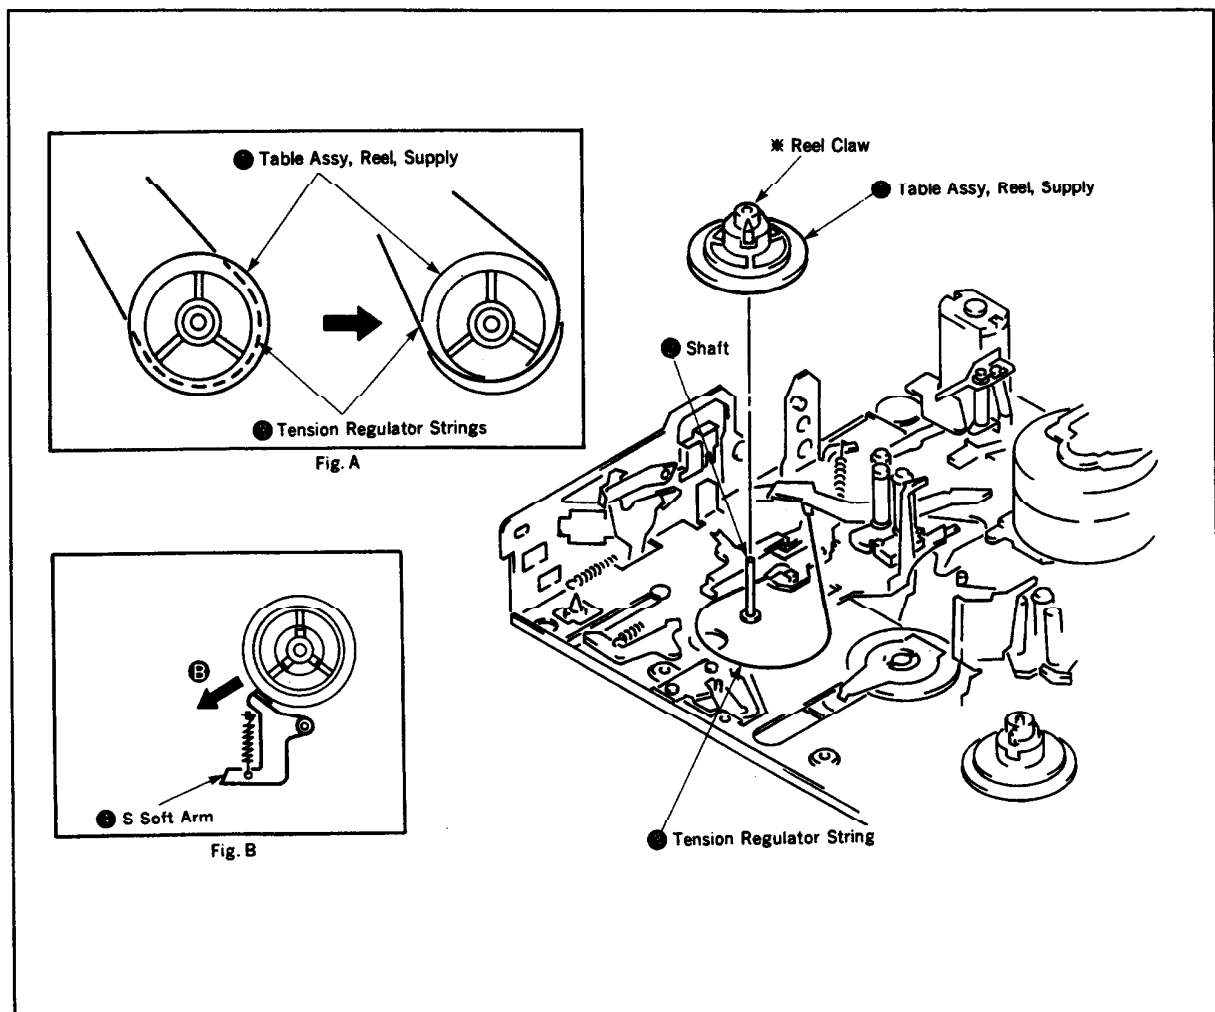


Fig. 10

3-4 TABLE ASSY, REEL, TAKE-UP (Fig. 11)

1. Removal

- 1) Select the **USE** mode.
- 2) Referring to 1-1, remove the cassette compartment holder assembly.
- 3) Referring to 3-1, remove the LED base.
- 4) Referring to 3-2, remove the retainer.
- 5) Dispace the T ratchet ● in a direction of the arrow **A**.
- 6) With the claw (T ratchet head) of the T ratchet ● moved in a direction of the arrow **B**, remove the Table assy, reel, take-up ●.

2. Mounting

- 1) Select the **USE** mode.
- 2) With the claw (T ratchet head) of the T ratchet ● moved in an arrow direction, mount the Table assy, reel, take-up ● to the shaft ●.
- 3) Referring to 3-2, mount the retainer.
- 4) Referring to 3-1, mount the LED base.
- 5) Referring to 1-1, mount the cassette compartment holder assembly.

Note : Dismount and remount the Table assy, reel, take-up ●, holding the reel claw *.

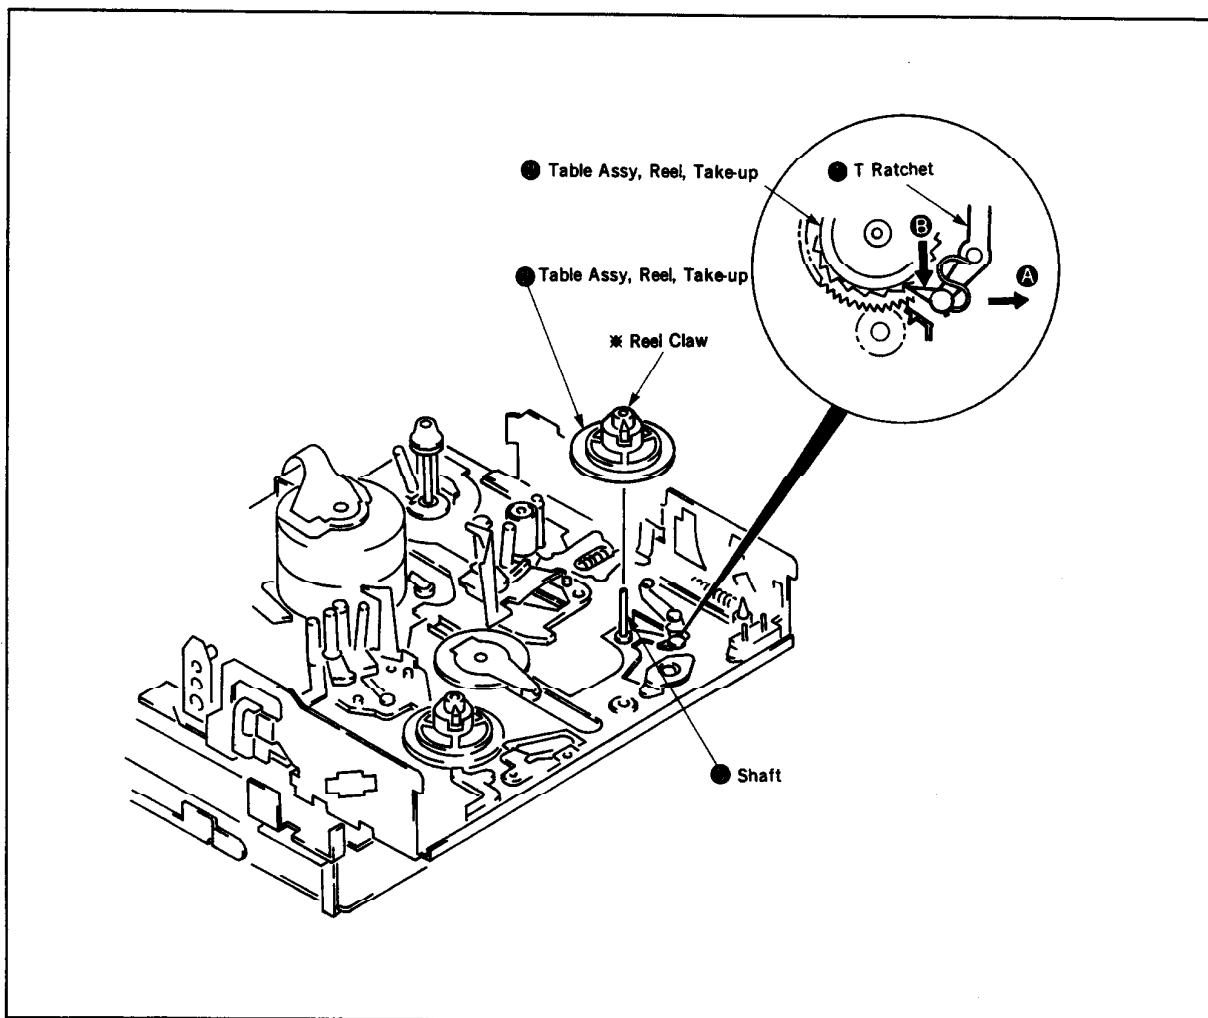


Fig. 11

3-5 ONEWAY CLUTCH ASSEMBLY (Fig. 12)

1. Removal

- 1) Select the **USE** mode.
- 2) Referring to the cassette compartment holder assembly.
- 3) Referring to 3-1, remove the LED base.
- 4) Remove the screw ●, and then, oneway clutch assembly ●.

2. Mounting

- 1) Select the **USE** mode.
- 2) Mount the oneway clutch assembly ● to the LS chassis and fix with the screw ●.
- 3) Referring 3-1, mount the LED base.
- 4) Referring to 1-1, mount the cassette compartment holder assembly.

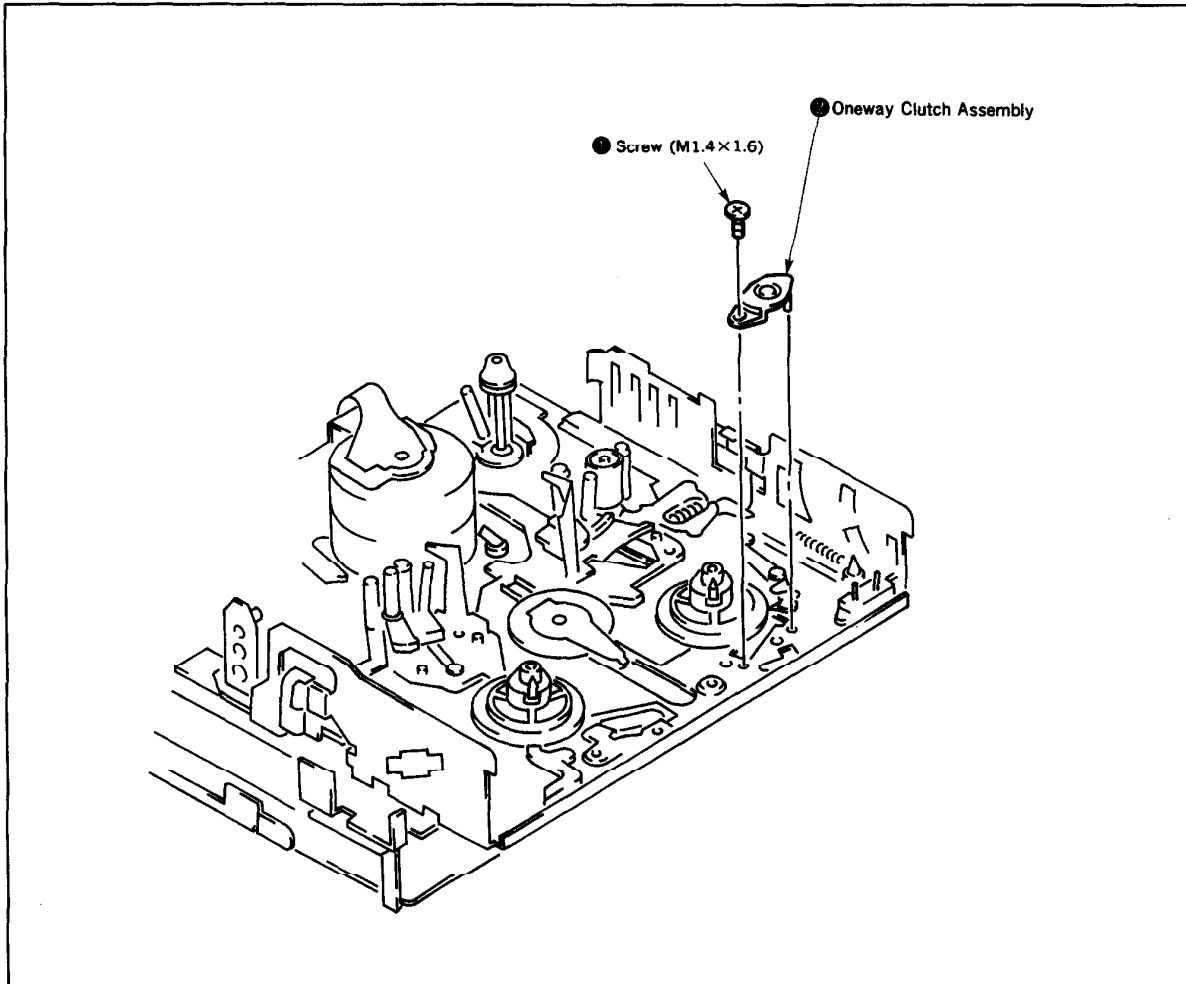


Fig. 12

3-6 S SOFT ARM ASSEMBLY (Fig. 13)

1. Removal

- 1) Select the **USE** mode.
- 2) Referring to 1-1, remove the cassette compartment holder assembly.
- 3) Referring to 3-1, remove the LED base.
- 4) Remove the lock washer ●, and then, the spring, tension ●.
- 5) Remove the S soft arm assembly ● by rotating it in an arrow direction (until the hook ● comes off the LS chassis).

2. Removal

- 1) Select the **USE** mode.
- 2) As shown in Fig. A, apply a quarter drip of oil to the arrow indicated part of the shaft ●.
- 3) Mount the S soft arm assembly ● to the shaft ●, rotating it in as arrow direction. (Be careful not to bend the hook ●.)
- 4) Hook the spring, tension 2 onto the claw and fix it with lock washer 1.
- 5) Referring to 3-1, mount the LED base.
- 6) Referring to 1-1, mount the cassette compartment holder assembly.

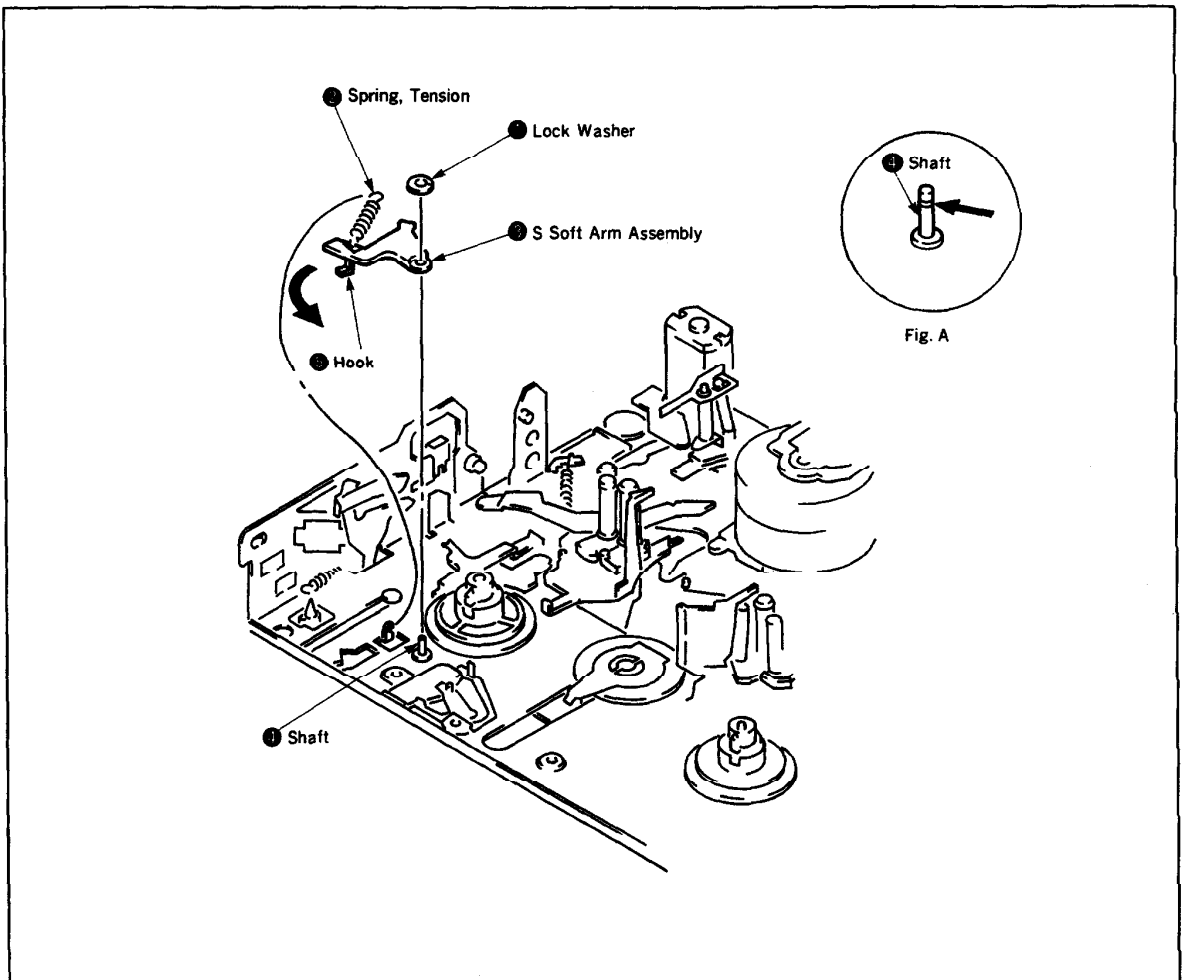


Fig. 13

3-7 LS CHASSIS ASSEMBLY (Fig. 14)

1. Removal

- 1) Select the **USE** mode.
- 2) Referring to 1-1, remove the cassette compartment holder.
- 3) Referring to 3-1, remove the LED base.
- 4) Referring to 3-2, remove the RL base assembly and retainer.
- 5) Remove the lock washer ①, and then, arm assy gear ②.
- 6) Select the **Q, REW** mode.
- 7) Remove the flexible rotary shaft ③, and then, the flexible connector ④.
- 8) Remove the E retaining ring ⑤ and three screws ⑥.
- 9) Remove the LS chassis assembly ⑦ in a direction of the arrow **D**.

2. Mounting

- 1) As shown in Fig. A, apply Molyton grease to the arrow-indicated part of the LS chassis assembly ⑦.
- 2) Unload in the RDY mode. Start docking in the **Q, REW** mode after first GL. When docking the mechanical chassis and LS chassis assembly ⑦, it is necessary to place the following parts at specified positions.
- 3) Put the pin ② of the pinch arm assembly ③ into the left side of the pinch press arm assembly ④. (Fig.19)
- 4) Move the TG-1 arm assembly ⑤ in a direction of the arrow **A** to put the pin ⑥ into the concave of the arm assembly ⑦. (Fig. 17)
- 5) put the pin ⑧ of the S ratchet ⑨ into the right side the of the arm assembly ⑦. (Fig. 17)

Simultaneously performing the operations above, push the roller of the guide lock arm ⑩ With the arm arc portion of the guide arm T assembly ⑪ (Fig. 15) to push the LS chassis assembly ⑦ in a direction of the arrow **E**, and at the same time, engage the claws of the guide rail base 1⑫, guide rail base 2⑬ and guide rail base 3⑭ with those of the guide rail S⑮ and guide rail T⑯. (Fig. 16)

Then, align the shafts ⑨ of the mechanical chassis With the four long joints of the LS chassis assembly ⑦, and put the LS pin ⑧ of the LS arm assembly ⑤ in the groove of the LS cam plate ⑩. (Fig.18)

Note : Before docking, confirm that both EJ arm and LS arm are deeply inserted into the shafts. (If not properly fit, the set does not function even if the LS chassis is docked.

- 6) Mount the E retaining ring ⑤ and three screws ⑥.
- 7) Mount the flexible rotary shaft ③ and flexible connector ④.
- 8) Select the **USE** mode.
- 9) Mount the arm assy gear ② and fix with the lock washer ①.
- 10) Referring to 3-2, mount the RL base assembly and retainer.
- 11) Referring to 3-1, mount the LED base.
- 12) Referring to 1-1, mount the cassette compartment holder assembly.

Note : Using the mode selector, confirm that loading and unloading are performed smoothly.

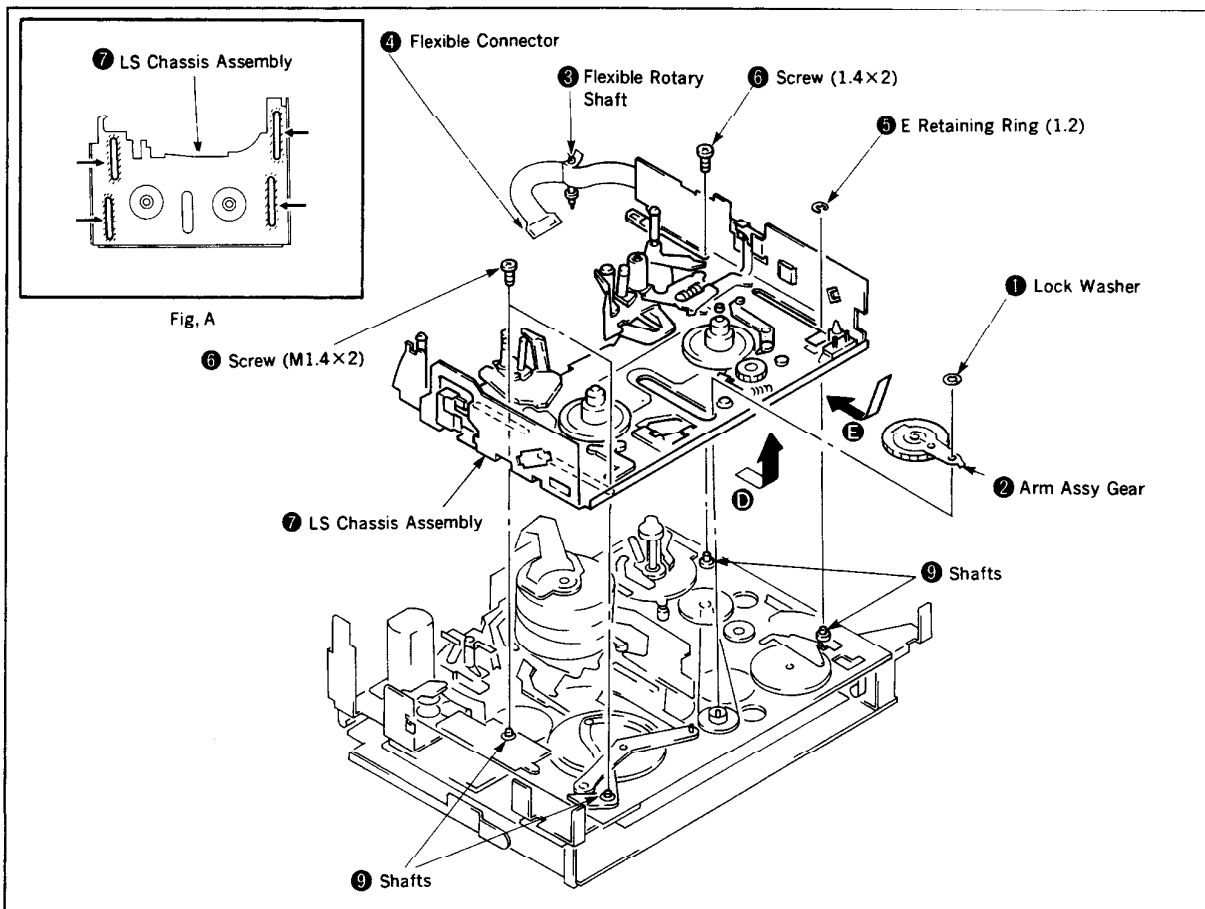


Fig. 14

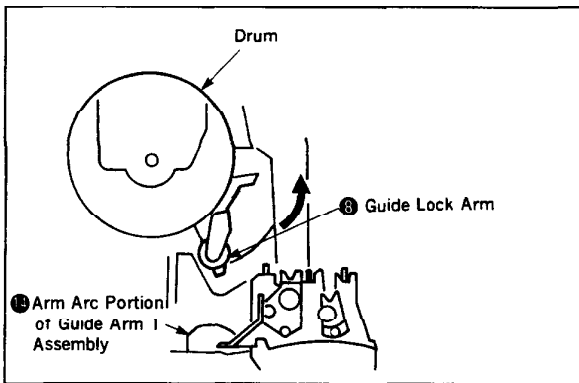


Fig. 15

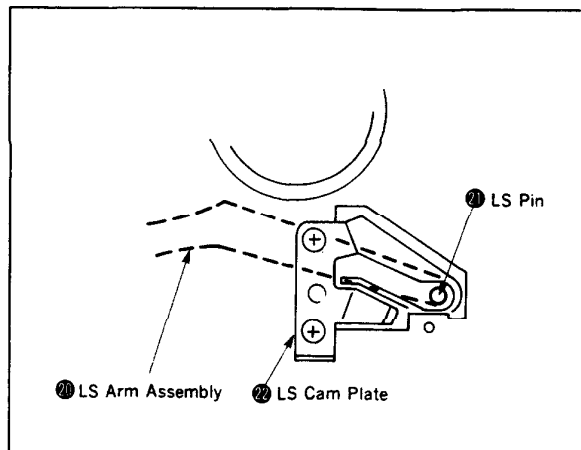


Fig. 18

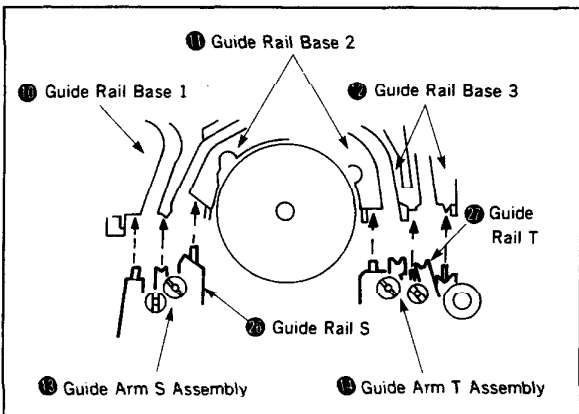


Fig. 16

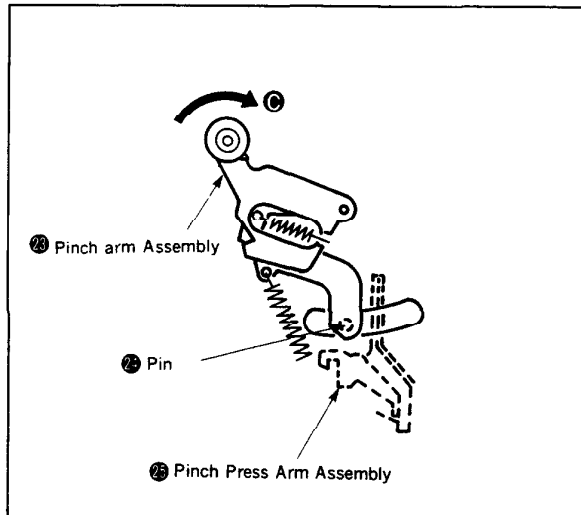


Fig. 19

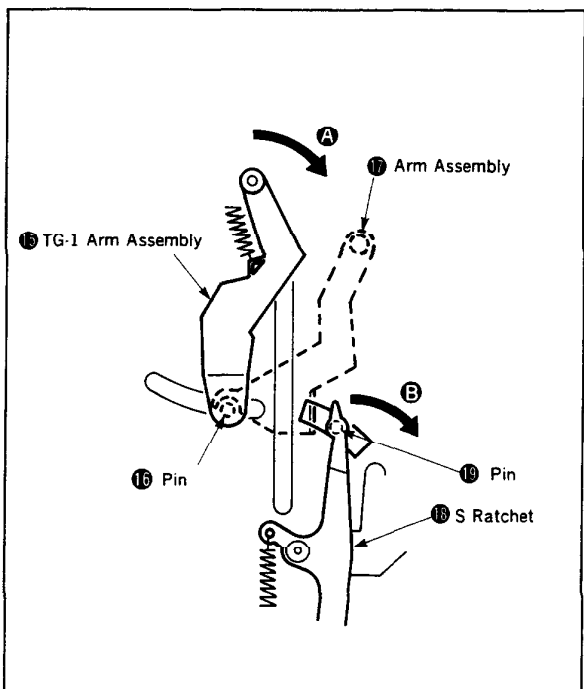


Fig. 17

3-8 PINCH ARM ASSEMBLY (Fig. 20)

1. Removal

- 1) Referring to 1-1, remove the cassette compartment holder assembly.
- 2) Referring to 3-7, remove the LS chassis assembly.
- 3) Remove the lock washer ② from the back of the LS chassis assembly ①.
- 4) Remove the spring, tension ③, and then, pinch arm assembly ④.

2. Mounting

- 1) As shown in Fig. A, apply oil to the hole of the boss ⑤ over one third of a drip up to half a drip.
- 2) put the rotation center of the pinch arm assembly in the boss ⑤ hole, and the pin ⑥ in the long hole.
- 3) Hook the spring, tension ③ onto the upper groove of the pinch return spring shaft ⑦.
- 4) Mount the lock washer ② from the back of the LS chassis assembly ①.
- 5) Referring to 3-7, mount the LS chassis assembly.
- 6) Referring to 1-1, mount the cassette compartment holder assembly.

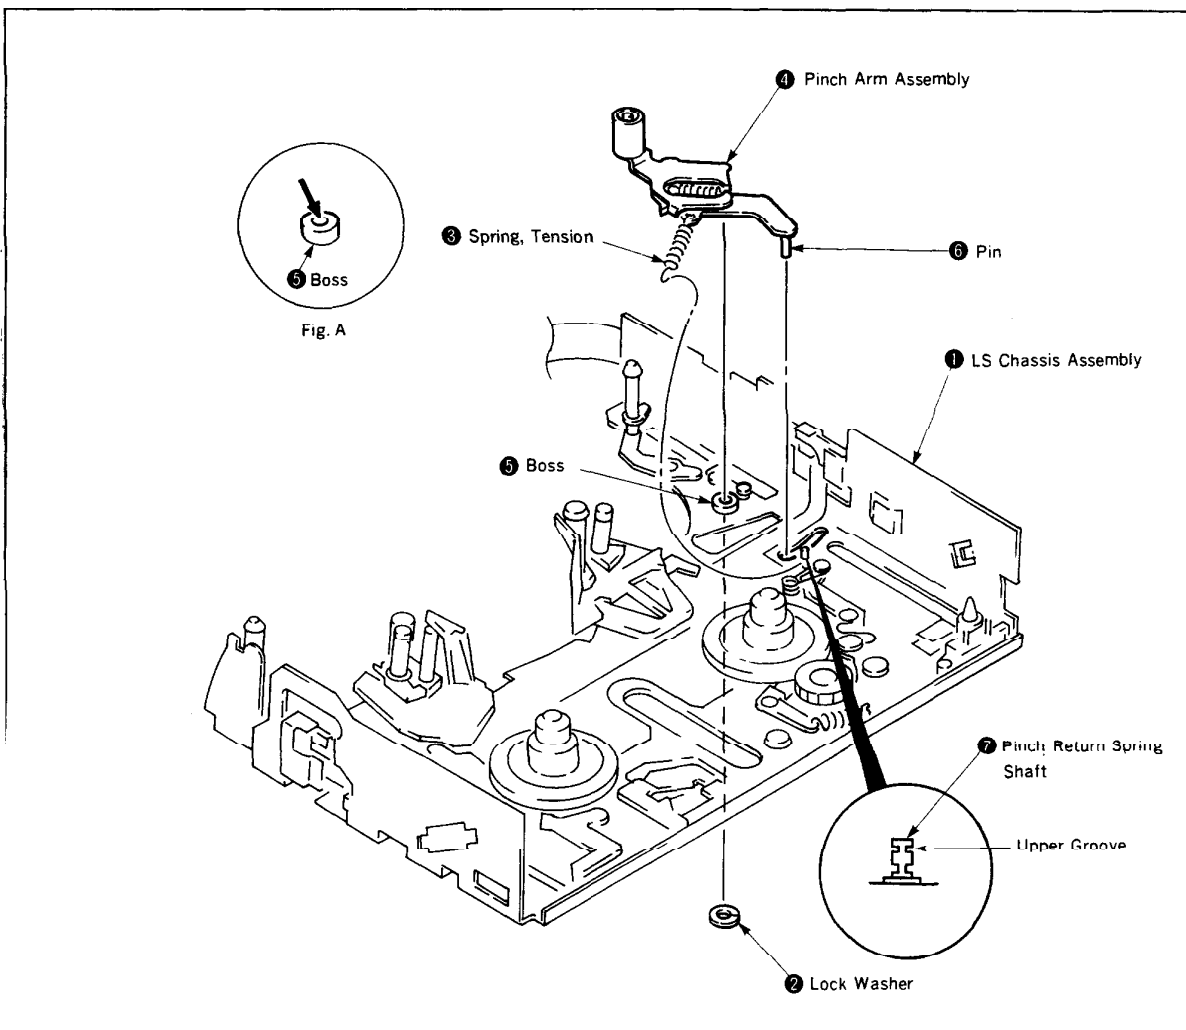


Fig. 20

3-9 TG-11 ARM ASSEMBLY (Fig. 21)

1. Removal

- 1) Referring to 1-1, remove the cassette compartment holder assembly.
- 2) Referring to 3-7, remove the LS chassis assembly.
- 3) Remove the lock washer ② from the back of the LS chassis assembly ①.
- 4) Remove the TG-11 arm assembly ③ and spring, torsion ④.

Note : Be careful not to deform the TG-11 arm.

2. Mounting

- 1) As shown in Fig. A, apply oil to a boss hole over one third of a drip up a half a drip.
- 2) As shown in Fig. B, put the longer arm of the spring, torsion ④ between the pinch arm boss ⑤ and cam slider shaft ⑧ of the LS chassis. Next, Hook the shorter arm of the spring, torsion ④ around the pin ⑥ of the TG-11 arm assembly ③, rotate the TG-11 arm assembly and fix with the lock washer ②. When this is done, see to it that the pin ⑥ of the TG-11 arm assembly ③ is located to the left side of the cam slider ⑧ as shown in Fig. C.
- 3) Referring to 3-7, mount the LS chassis.
- 4) Referring to 1-1, mount the cassette compartment holder.

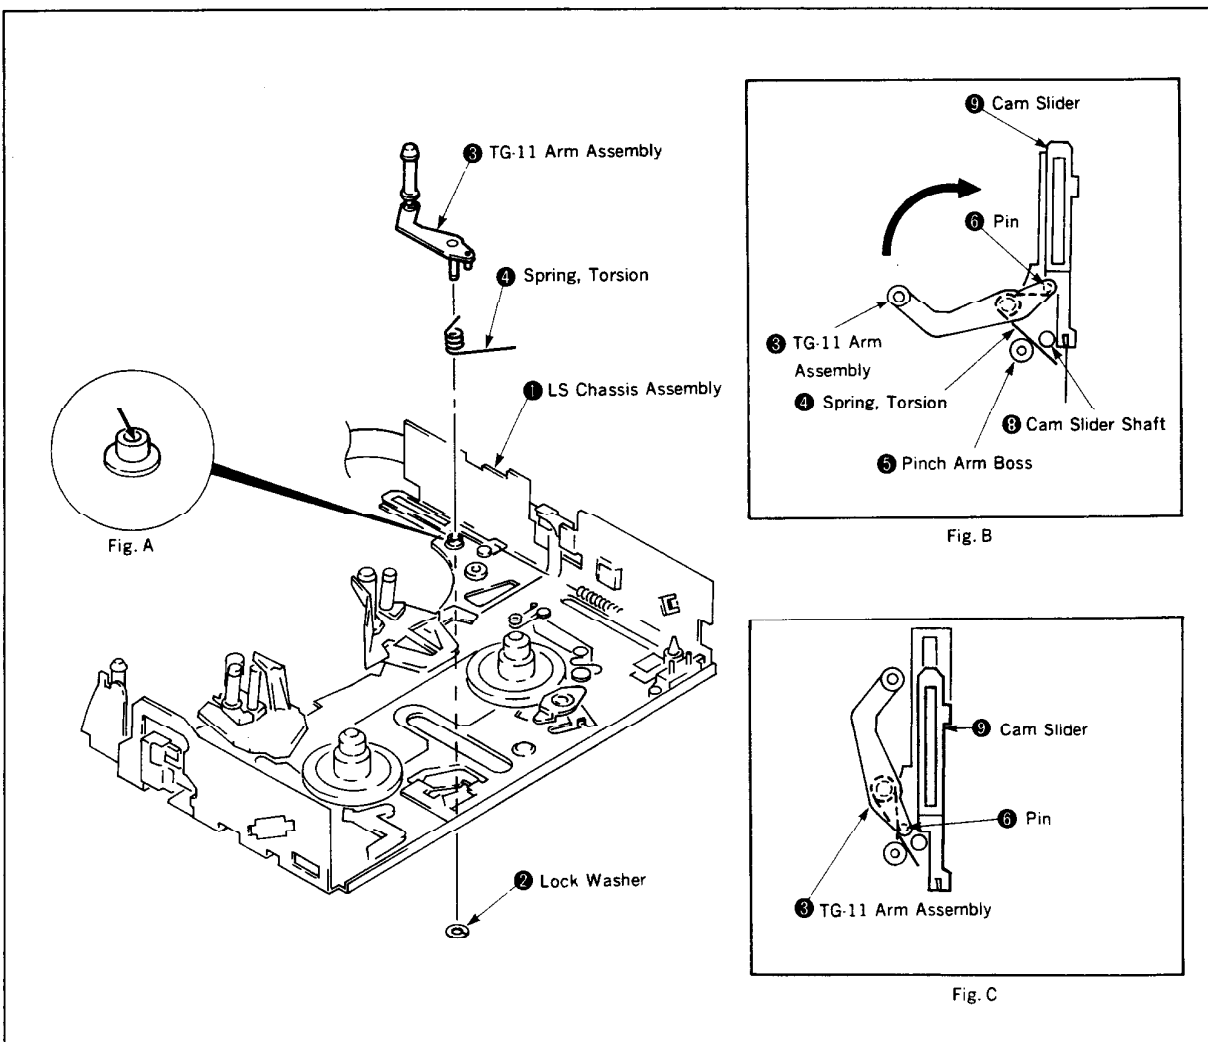


Fig. 21

3-10 TG-1 ARM ASSEMBLY (Fig. 22)

1. Removal

- 1) Referring to 1-1, remove the cassette compartment holder assembly.
- 2) Referring to 3-7, remove the LS chassis.
- 3) Referring to 3-3, remove the table assy, reel, supply.
- 4) Remove the lock washer ② from the back of the LS chassis assembly ①.
- 5) Remove the spring, tension ③. Remove the string joint ④ from the dowel ⑤ of the TG-1 adjustment block ⑥ by rotating it in a direction of the arrow A as shown in Fig. C.
- 6) Remove the TG-1 arm assembly ⑦.

Note : Dismount and remount the string joint ④ carefully not to deform it.

2. Mounting

- 1) As shown in Fig. A, apply oil to the hole of the boss ⑦ over one third of a drip up to half a drip.
- 2) As shown in Fig. C, mount the string joint ④ to the TG-1 adjustment block ⑥ in the opposite direction of the arrow A.
- 3) Mount the TG-1 arm assembly ⑦ to the boss ⑦ in such a manner not to touch the guide and insert the pin ⑧ into the long hole.
- 4) Hook the spring, tension ③ onto the position shown in Fig. B.
- 5) Mount the lock washer ② from the back of the LS chassis assembly ①.
- 6) Referring to 3-3, mount the table assy, reel, supply.
- 7) Referring to 3-7, mount the LS chassis assembly.
- 8) Referring to 1-1, mount the cassette compartment holder assembly.

Note : Referring to 3-27, adjust a tension regulator position.

Note : Referring to 3-28, adjust a FWD back tension.

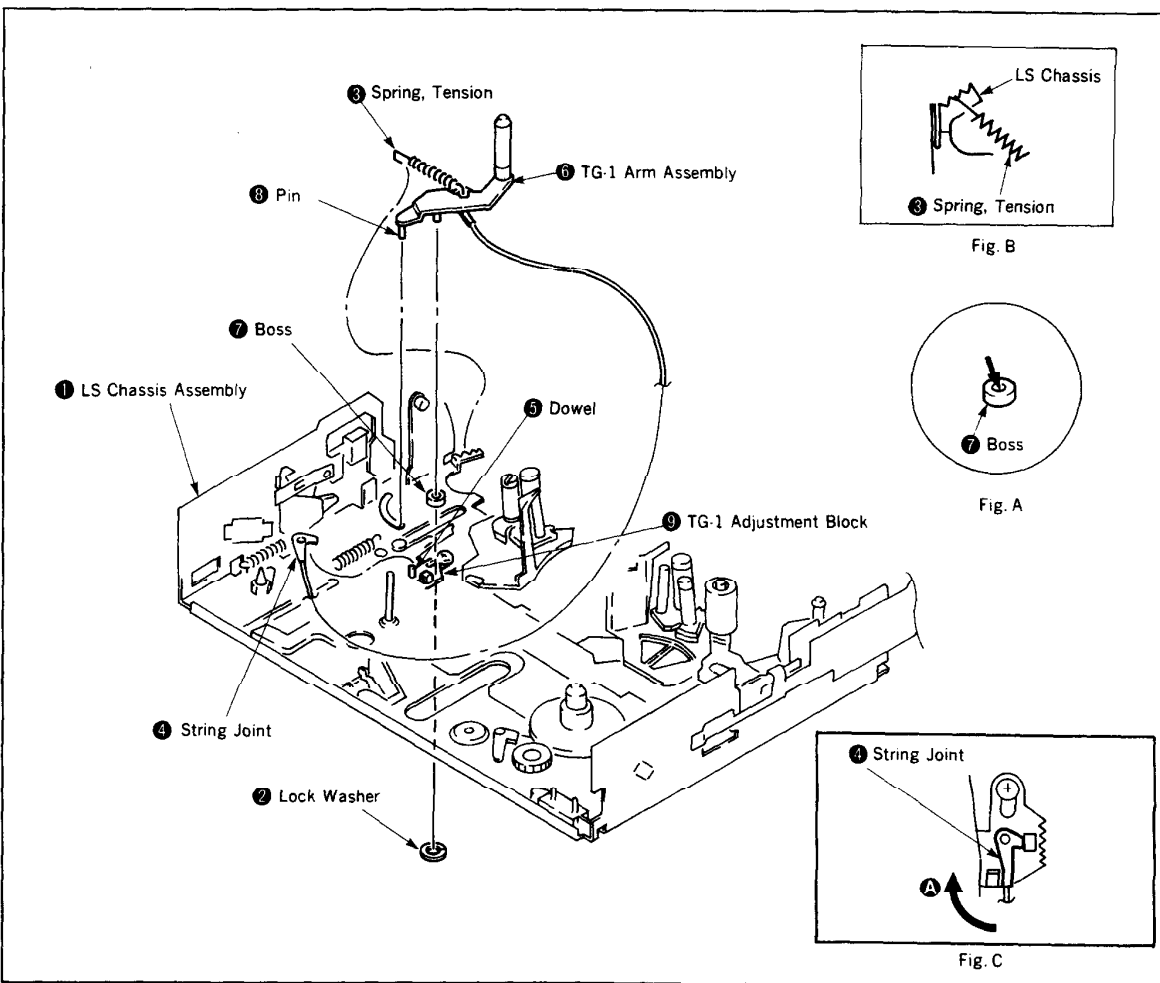


Fig. 22

3-11 STRING JOINT (Fig. 23)

1. Removal

- 1) Referring to 3-10, remove the TG-1 arm assembly ①.
- 2) Remove the joint holder ②, and then, string assembly ③.

2. Mounting

- 1) Put the dowel ④ of the TG-1 arm assembly ① into the hole of the string assembly ③ and mount the joint holder ②. (Apply screw lock between the joint holder and TG-1 arm assembly.)
- 2) Referring to 3-10, mount the TG-1 arm assembly ①.

Note : Be careful not to bend the string assembly ③.

Note : Do not touch the guide *.

Note : The joint holder ②, which was removed once, must not be used again.

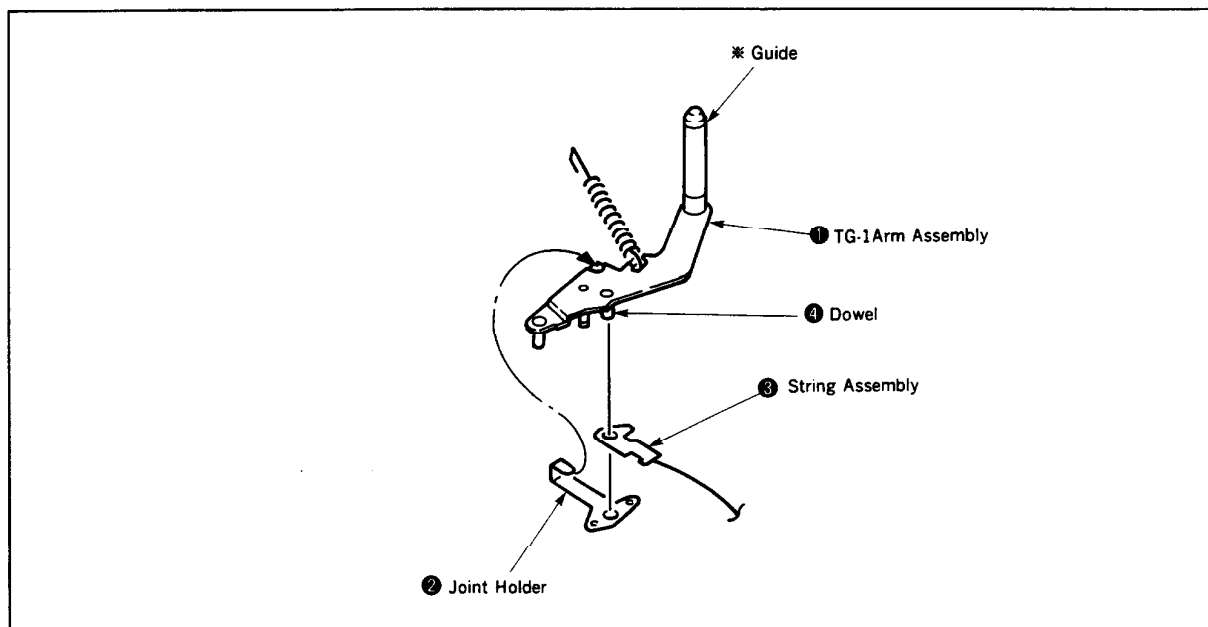


Fig. 23

3-12 GUIDE ARM T ASSEMBLY, GUIDE ARM S ASSEMBLY

1. Removal

- 1) Referring to 1-1, remove the cassette compartment holder assembly.
- 2) Referring to 3-7, remove the LS chassis assembly.
- 3) Rotate the guide arm T assembly ① and guide arm S assembly in arrow directions respectively, align their shafts ③ with the holes as shown in Fig. A, and remove them. (Fig. 24)

Note : Do not touch the guide ※. (Fig. 25 and Fig. 26)

2. Mounting

- 1) After inserting the guide arm T and S assemblies in the reverse order of removal, rotate them in the opposite directions of the arrows respectively.
- 2) Fit the TG-7 base assembly ⑤ and TG-9 base assembly ⑥ in the grooves of the guide rail T ④. (Fig. 25)
- 3) Put the shaft ③ flange in the long groove of the guide rail S ⑧, and fit the TG-4 base assembly ⑨ and TG-6 base assembly ⑩ into the right and left grooves of the guide rail S ⑧ respectively.

When this is done, see to it that the flat spring of the TG-6 base assembly ⑩ is located below the guide rail S ⑧ as shown in Fig. B. (Fig.26)

- 4) Referring to 3-7, mount the LS chassis assembly.
- 5) Referring to 1-1, mount the cassette compartment holder assembly.

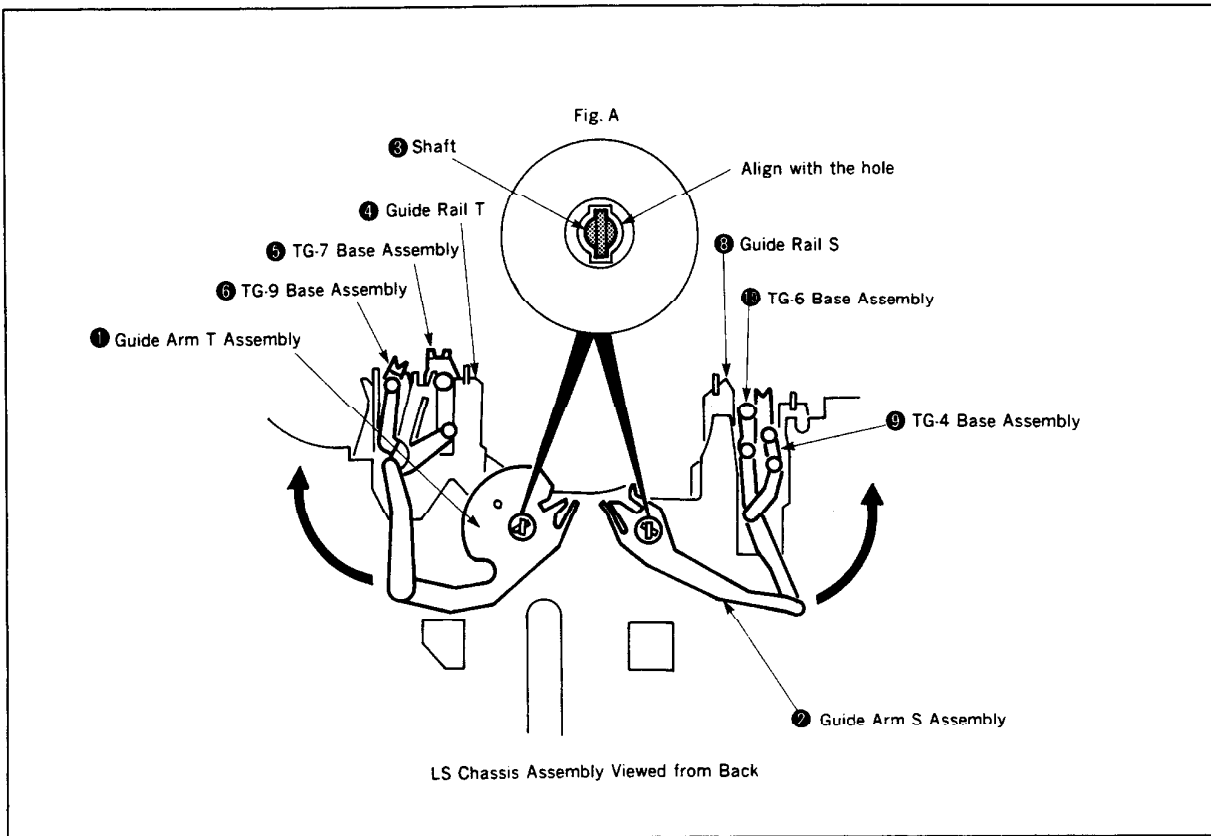


Fig. 24

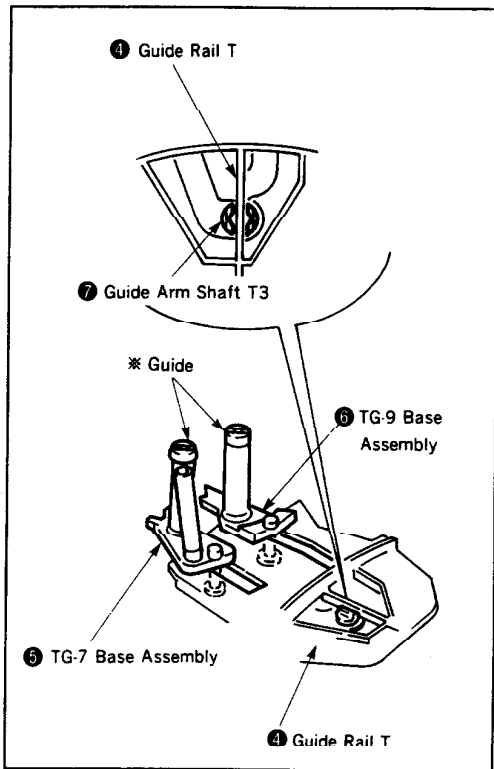


Fig. 25

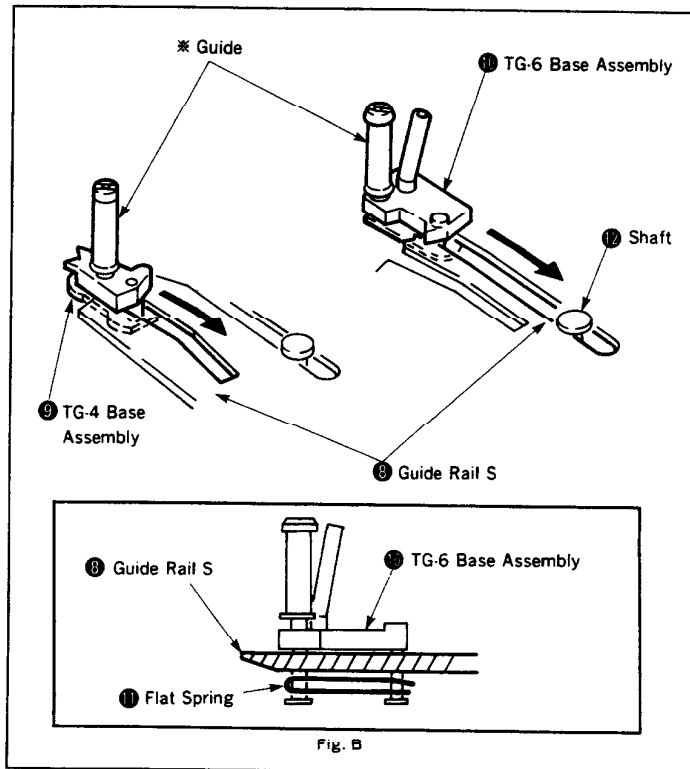


Fig. 26

3-13 PINCH PRESS ARM ASSEMBLY (Fig. 27)

1. Removal

- 1) Referring to 1-1, remove the cassette compartment holder assembly.
- 2) Referring to 3-7, remove the LS chassis.
- 3) Remove the screw ❶, and then, pinch press arm assembly ❷.

2. Mounting

- 1) As shown in A, apply half a drip of molyton grease to an arrowindicated part of a boss hole.
- 2) As shown in Fig. B, apply half a drip of molyton grease each to the pinch press arm assembly ❷ at 3 places.
- 3) Put the pin ❸ of the pinch press arm assembly ❷ in the groove of the cam B ❹.
- 4) Fix. with the screw ❶.
- 5) Referring to 3-7, mount the LS chassis assembly.
- 6) Referring to 1-1, mount the cassette compartment holder assembly.

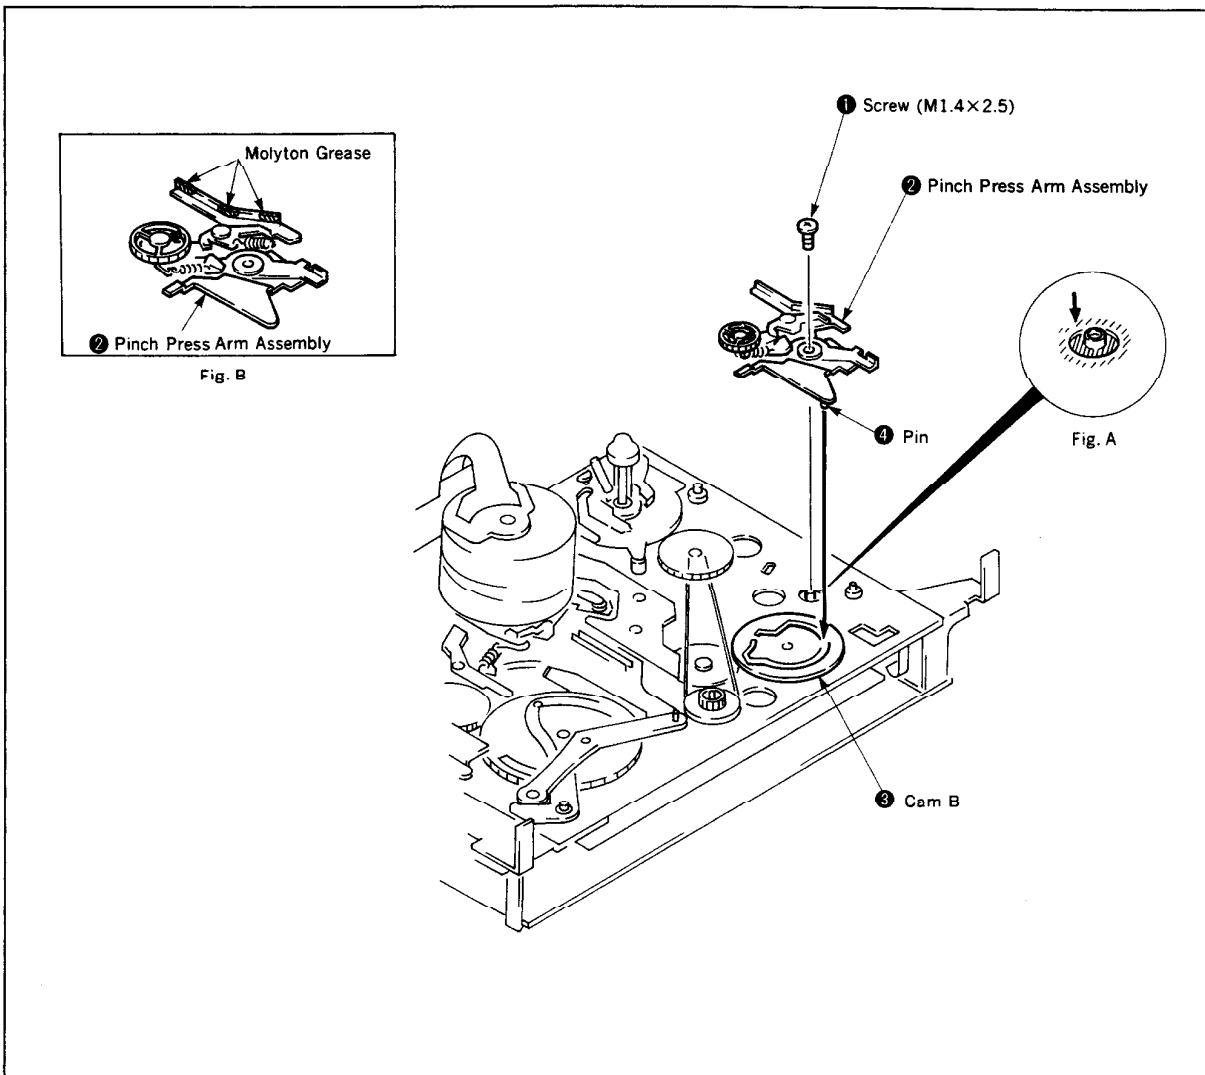


Fig. 27

3-14 GL SLIDER ASSEMBLY (Fig. 28)

1. Removal

- 1) Referring to 1-1, remove the cassette compartment holder assembly.
- 2) Referring to 3-7, remove the LS chassis assembly.
- 3) Referring to 3-15, remove the cam A.
- 4) Shift the GL slider assembly ④ in a direction of the arrow A.
- 5) Remove the screw ①, and then, GL support S ②.
- 6) Remove the lock washer ③, and then, GL slider assembly ④.

2. Mounting

- 1) Fit the claw ⑤ of the GL slider assembly ④ in the groove of the GL support T ⑦, and put the roller ⑥ in the long hole of the chassis.
- 2) Stop with the lock washer ③.
- 3) Shift the GL slider assembly ④ in a direction of the arrow A.
- 4) Fit the claw ⑧ of the GL support ② in the part of the chassis marked with * and place the dowel ⑨ in the hole of the chassis.
- 5) Fix with the screw ①.
- 6) Referring to 3-7, mount the LS chassis assembly.
- 7) Referring to 1-1, mount the cassette compartment holder assembly.

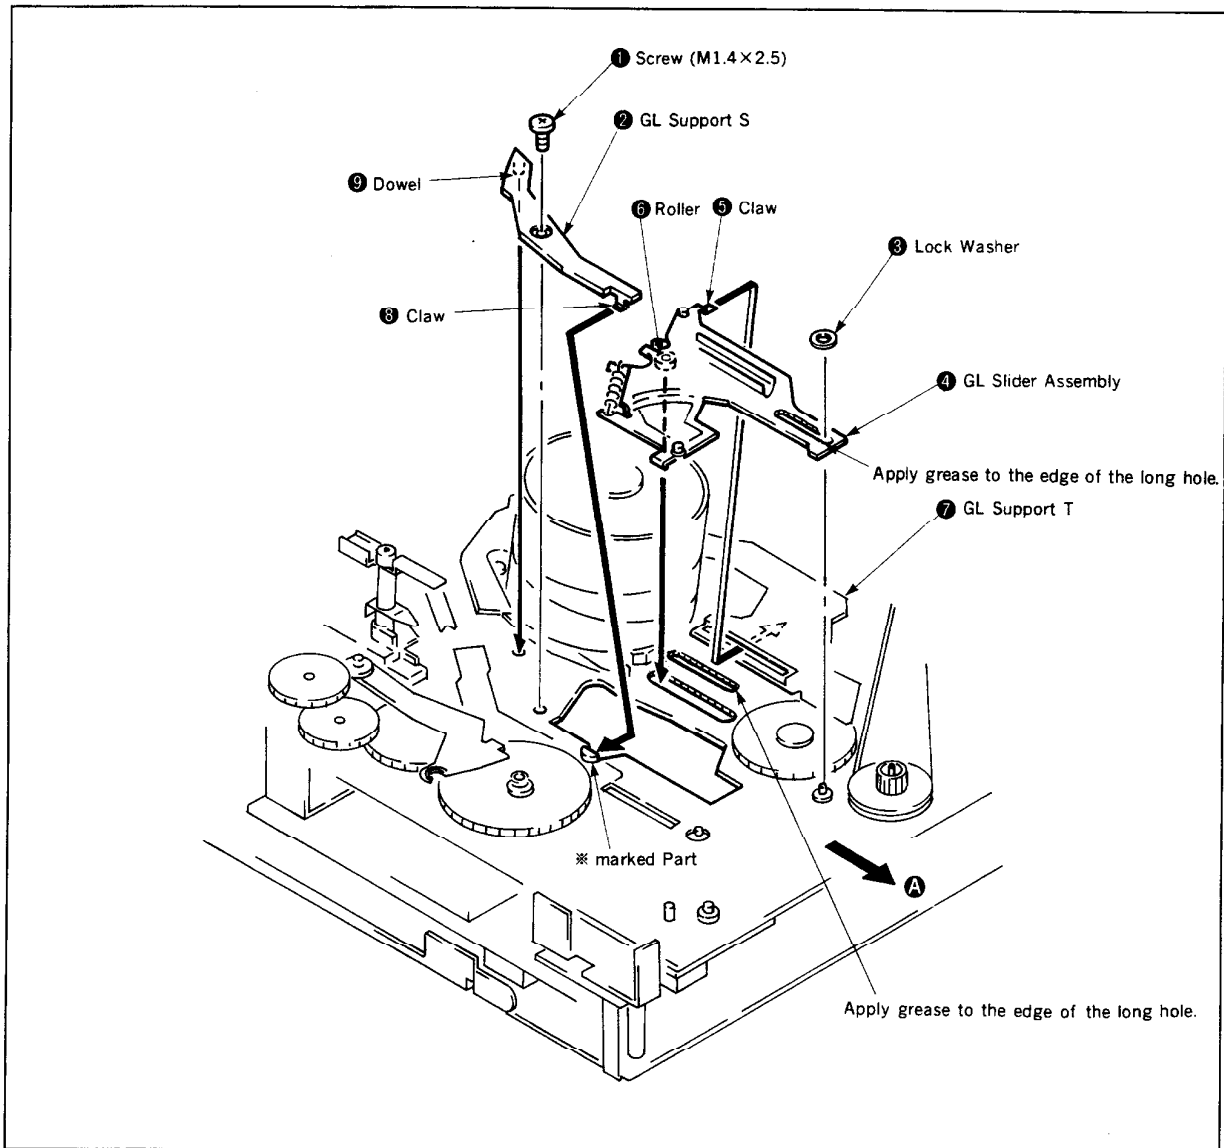


Fig. 28

3-15 PHASE ADJUSTMENT(Fig. 29)

1. Removal

- 1) Referring to 1-1, remove the cassette compartment holder assembly.
- 2) Referring to 3-7, remove the LS chassis. (When this is done, one of the BLANK, REC and READY modes must be selected.)
- 3) Remove the two screws ①, and remove the TG-1 cam base ② by moving it in a direction of the arrow A. (Remove the notch ③ from the groove of the No. 3 gear shaft.)
- 4) Remove the screw ④, and remove the gear retainer ⑤ by sliding it in a direction of the arrow B.
- 5) Remove the arm assembly ⑥, No. 0 gear ⑦, No. 1 gear assembly ⑧, No. 2 gear assembly ⑨, No. 3 gear assembly ⑩, lock washer ⑪, and then, mode gear assembly ⑫, respectively.
- 6) Being careful not to lose the LS roller ⑬ of the LS arm, remove the LS arm assembly ⑭ and EJ arm ⑮, respectively.
- 7) Remove the screw ⑯, and then, cam A ⑰.
- 8) Referring to 3-13 3), remove the pinch press arm assembly.
- 9) Remove the screw ⑱, and then, cam B ⑲.

2. Adjustment and Mounting

- 1) Face the hole ① of the mode gear assembly ⑫ to a direction of the arrow A, move the GL slider assembly ⑬ in a direction of the arrow B, apply molyton grease to the pin of the GL slider assembly ⑬, and mount the LS roller ⑬. (Fig. 30)
- 2) Set a direction of the cam A ⑰ so that the hole ② of the cam A ⑰ will be aligned with the hole of the mechanical chassis. (Fig. 31)

- 3) Move the GL slider ⑬ so that the LS roller ⑬ will be placed into the groove ④ of the cam A ⑰. At the same time, engage the mode gear assembly ⑫ with the gear of the relay gear A ⑰, and mount the cam A ⑰. Insert a stick of about $\phi 1.5\text{mm}$ in the hole ③ of the cam A ⑰. (Fig. 31)
- 4) Align the hole ⑤ of the cam B ⑲ with the hole of the mechanical chassis. At the same time, engage the relay gear B ⑲ with the gear and mount it. (Fig. 32)
- 5) Referring to 3-13, mount the pinch press arm assembly.
- 6) Align the hole ⑥ of the No. 3 gear assembly ⑩ with the hole of the mechanical chassis, and at the same time, engage the mode gear assembly ⑫ with the gear to mount. (Fig. 33)
- 7) Mount the No. 2 gear assembly ⑨, No. 1 gear assembly ⑧ and No. 0 gear ⑦ in that order. Mount the arm assembly ⑥ to the shaft and put the pin ⑦ in the groove of the No. 3 gear assembly ⑩, (Fig. 34)
- 8) Put the TG-1 cam base ② in place, fit the notch ③ to the shaft and shift it in an arrow direction, and mount the screws ① and ④ in that order. (Fig. 35)
- 9) Put the gear retainer ⑤ in place, slide it in an arrow direction and fix it with the screw ⑥. (Fig. 36)
- 10) Seeing to it that the EJ arm ⑮ and the LS roller ⑬ of the LS arm assembly ⑭ are put in the groove ③ of the cam A ⑰, mount them in that order. (Fig. 29 and Fig. 30)
- 11) Referring to 3-7, mount the LS chassis assembly.
- 12) Referring to 1-1, mount the cassette compartment holder assembly.

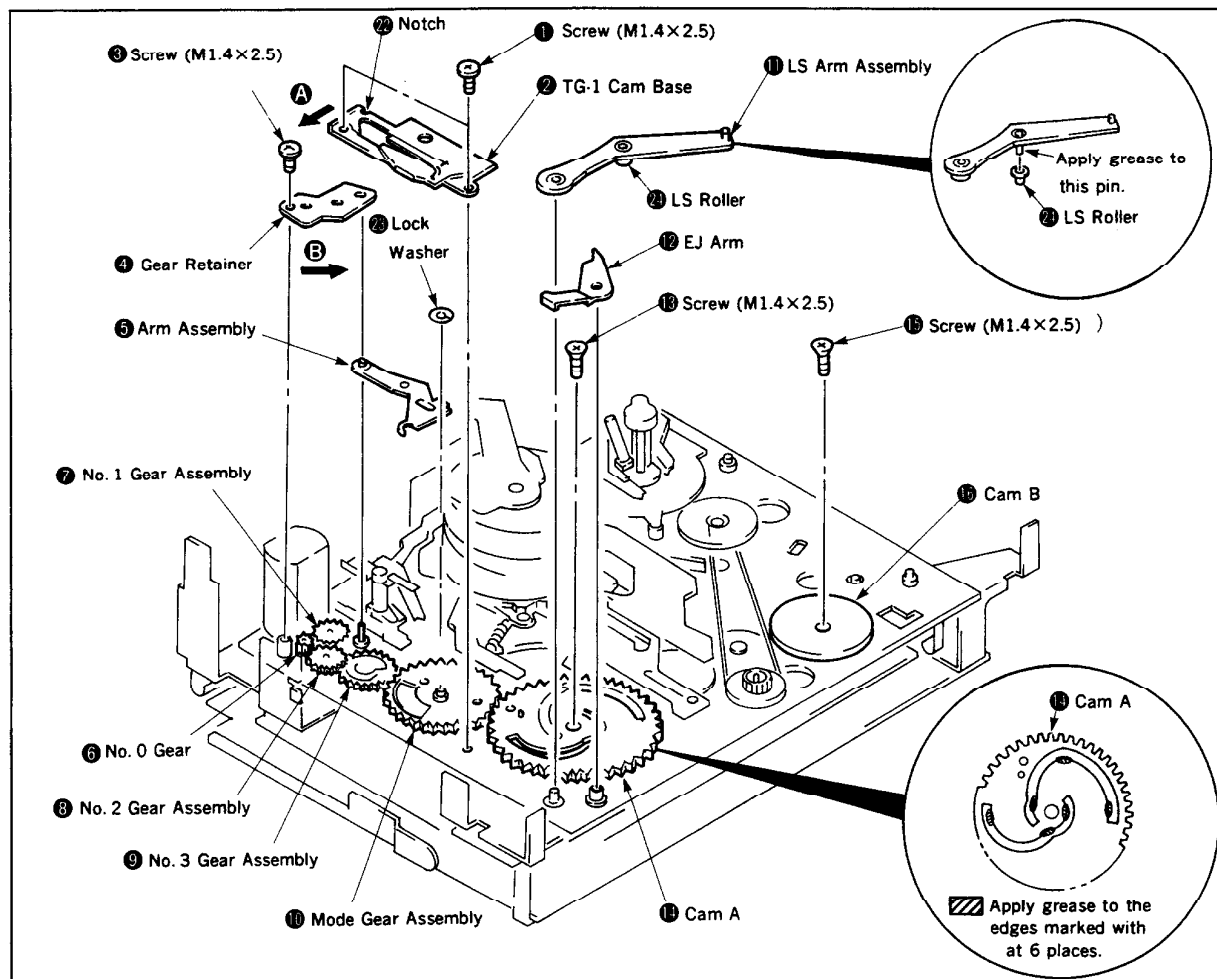


Fig. 29
-27-

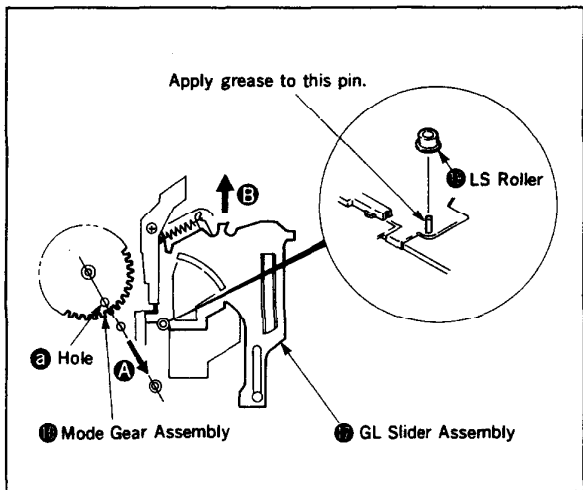


Fig. 30

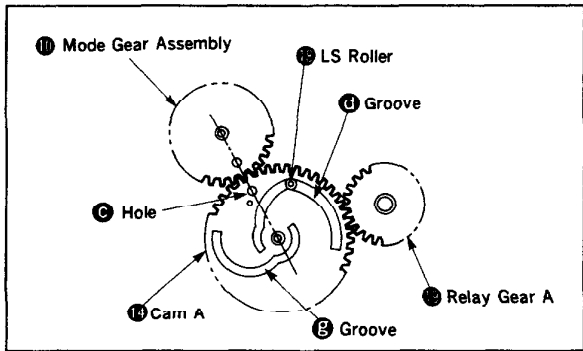


Fig. 31

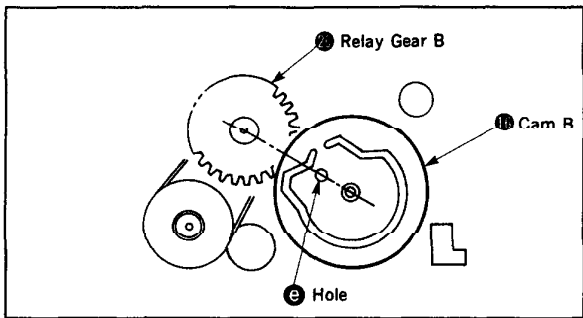


Fig. 32

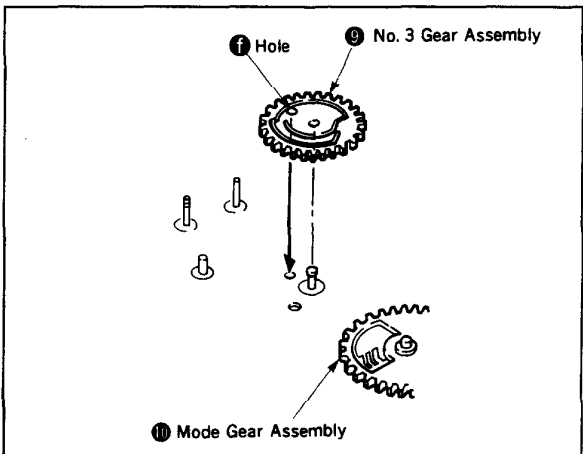


Fig. 33

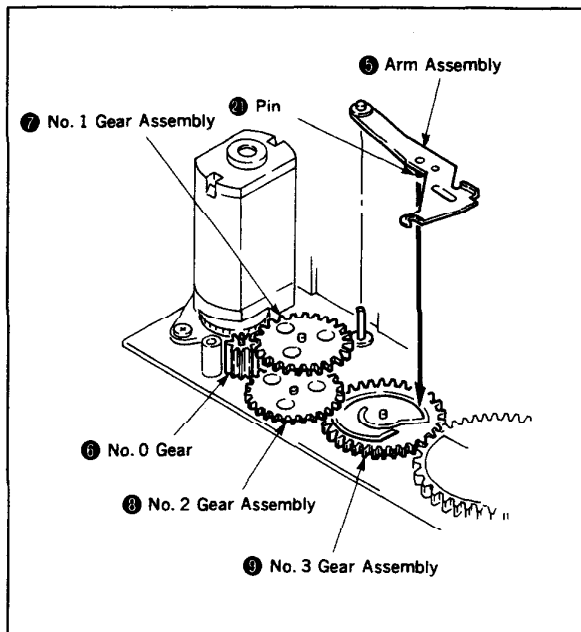


Fig. 34

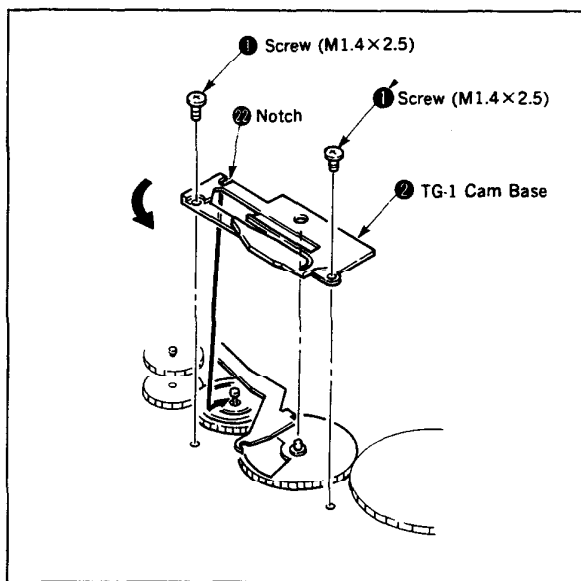


Fig. 35

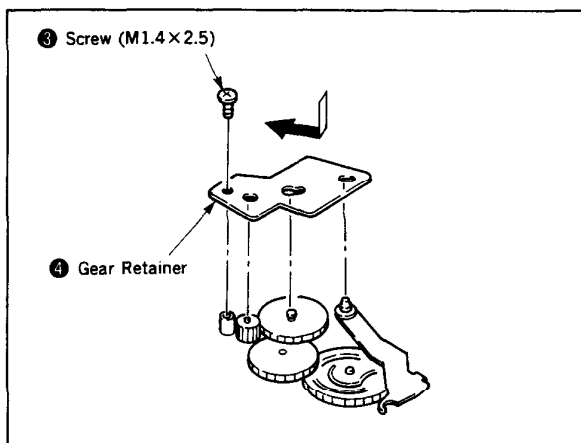


Fig. 36

3-16 GEAR TRAIN OPERATION CHECK (Fig. 37)

1. Removal

- 1) Referring to 1-1, remove the cassette compartment holder assembly.
- 2) Referring to 3-7, remove the LS chassis.
- 3) Referring to 3-17, remove the loading motor.

2. Check

- 1) Insert the tip of tweezers into the hole a of the cam A ①.
- 2) Rotate the cam A ① by about two thirds of a turn in a direction of the arrow A, and then, in a direction of the arrow B by the same amount. Repeat this 3 times.
- 3) When this is done, check that each, gear, the GL slider assembly and LS arm assembly rotate smoothly, and that no load is applied to them.

- 4) At the same time, check that the LS roller ② is located almost at the end point of the groove of the cam A ① when the gear train comes into contact with the stoppers at both ends.

Note: When rotating the cam A ① with the tip of tweezers, etc., be careful not to scratch the mechanical chassis.

3. Mounting

- 1) Referring to 3-17, mount the loading motor.
- 2) Referring to 3-7, mount the LS chassis assembly.
- 3) Referring to 1-1, mount the cassette compartment holder assembly.

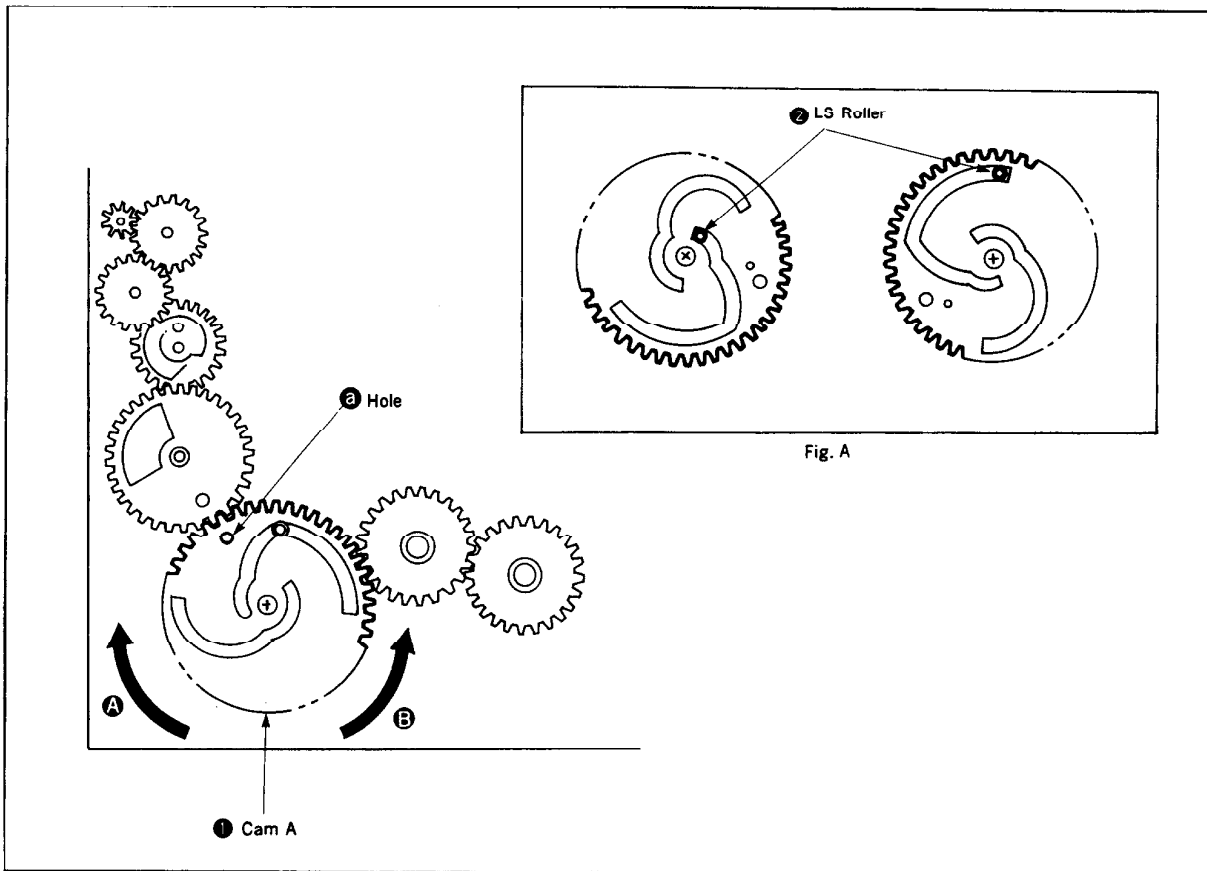


Fig. 37

3-17 LOADING MOTOR ASSEMBLY (Fig. 38)

1. Removal

- 1) Remove the LB-12 board.
- 2) Remove the connector ❶.
- 3) Remove the screws ❷ and ❸, and remove the loading motor assembly ❹ in an arrow direction.

2. Mounting

- 1) Put the pin ❺ of the loading motor assembly ❹ in the hole of the mechanical chassis, and mount it with the screws ❷ and ❸ in that order.
- 2) Mount the connector ❶.
- 3) Mount the LB-12 board.

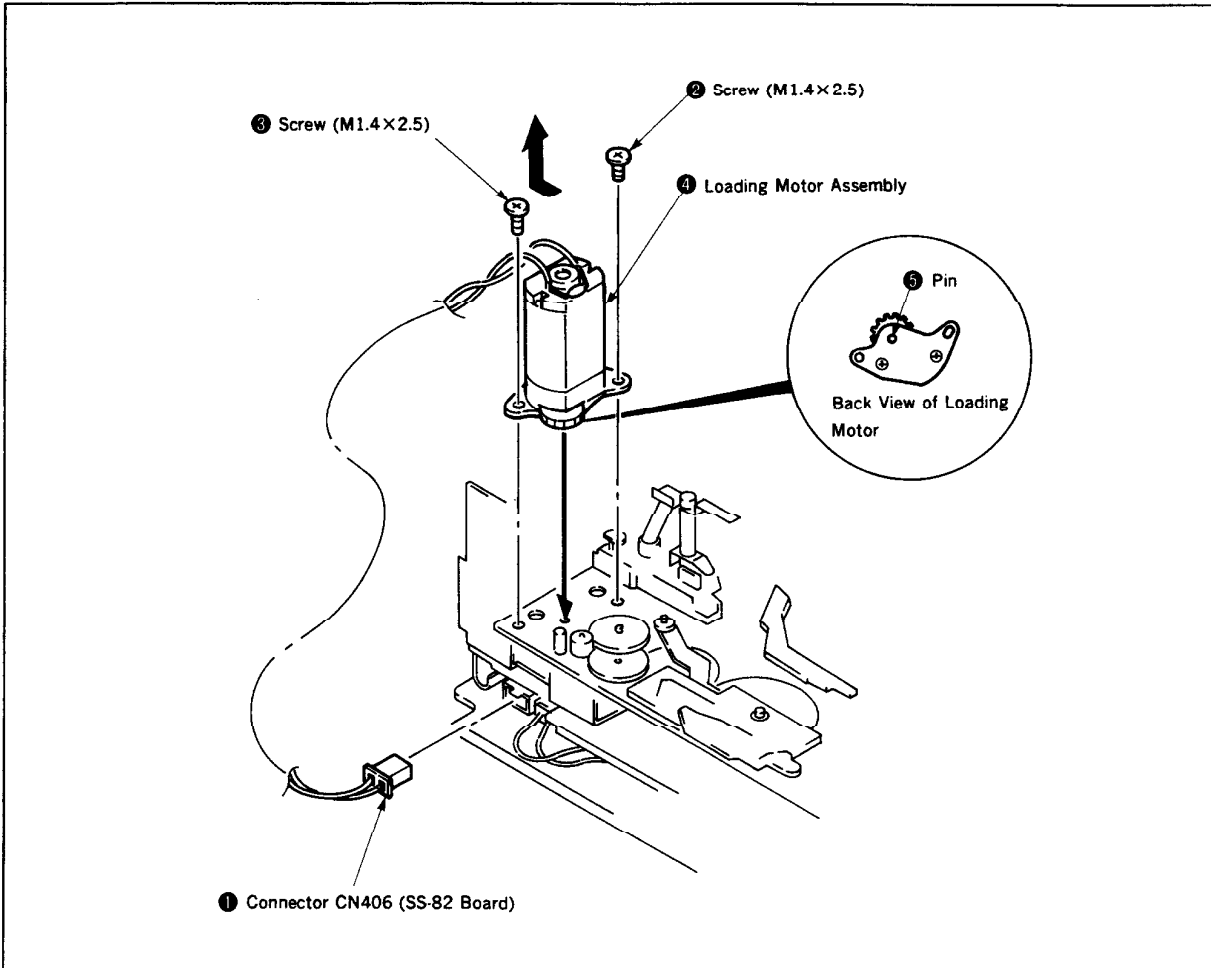


Fig. 38

3-18 GUIDE RAIL BASE 1 ASSEMBLY (Fig. 39)

1. Removal

- 1) Referring to 1-1, remove the cassette compartment holder assembly.
- 2) Unskate the LS chassis a little.
- 3) Remove the two screws ●, and then, guide rail base 1 assembly ●.

Note : Be careful not to lose the spacers inserted in the parts ④ and ⑤ of the guide rail base 1 assembly ●. (Fig. B)

2. Mounting

- 1) Apply half a drip each of molyton grease at 2 places on the back of the guide rail base 1 assembly. (Fig. A)
- 2) Put the pin ● of the guide rail base 1 assembly ● in the notch of the chassis, and tighten the two screws ● with a torque of 0.6kg·cm.
- 3) Referring to 1-1, mount the cassette compartment holder assembly.

Note1 : Mount paying attention to the number of spacers inserted and their locations.

Note2 : When tightening the screws, be careful not to bend the TG-2 upper flange ● with a screwdriver bit.

Note3 : Note that the part c of the guide rail base 1 assembly is easily broken. (Fig. B)

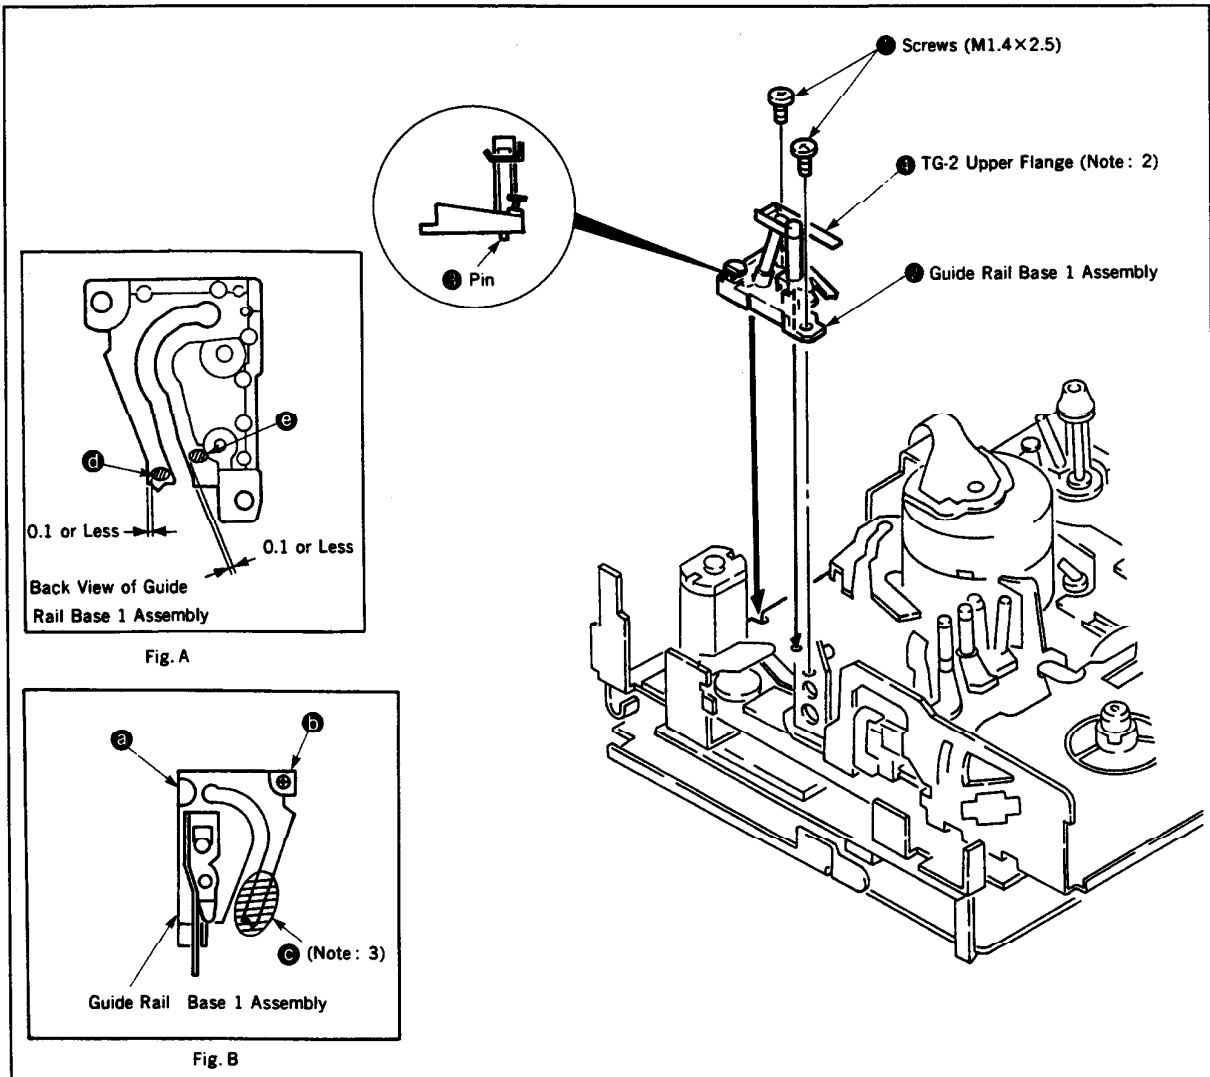


图39.

3-19 GUIDE RAIL BASE 2 ASSEMBLY (Fig. 40)

1. Removal

- 1) Referring to 1-1, remove the cassette compartment holder assembly.
- 2) Referring to the Service Manual, open the board in the back of the mechanical chassis.
- 3) Remove the four screws ●, and then, frame B assembly ● in a direction of the arrow A.
- 4) Unskate the LS chassis a little.
- 5) Remove the two screws ●, and then, guide rail base 2 assembly ● in a direction of the arrow B.

Note : Be careful not to hit the drum with a screwdriver bit because the screws are located closed to a drum lead.

2. Mounting

- 1) Apply half a drip of molyton grease each to 4 places on the back of the guide rail base 2 assembly. (Fig. A)
- 2) As shown in Fig. B, apply the striking parts of the guide rail base 2 assembly ● to the lower drum, and slide in an arrow direction to fit.
- 3) Pushing the part * of the guide rail base 2 assembly ● lightly in a direction of ● (Fig. B), tighten the two screws ● with a torque of 0.8kg·cm.

Note : Note that the part f is easily broken.

- 4) Mount the frame B assembly with the four screws ●.
- 5) Mount the opened board to the back of mechanical chassis.
- 6) Referring to 1-1, mount the cassette compartment holder assembly.

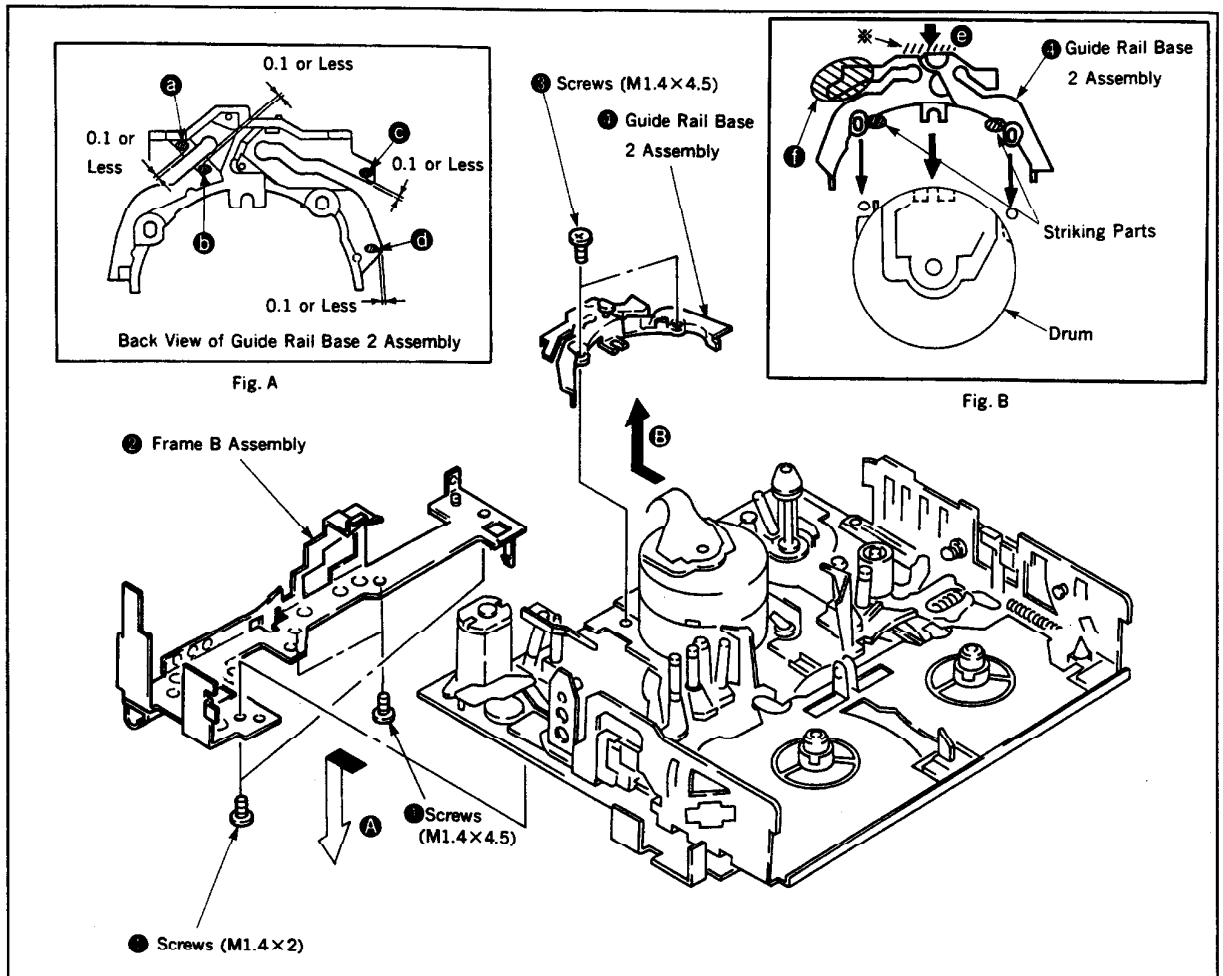


Fig. 40

3-20 GUIDE RAIL BASE 3 ASSEMBLY (Fig. 41)

1. Removal

- 1) Referring to 1-1, remove the cassette compartment holder assembly.
- 2) Remove the flexible rotary shaft ●.
- 3) Remove the two screws ●. Remove the guide rail base 3 assembly ● in an arrow direction, seeing to it that it does not hitch on the capstan housing.

Note : Handle the * marked part carefully because it is easily broken.

2. Mounting

- 1) Apply half a drip of molyton grease each to 2 places on the back of the guide rail base 3 assembly ●. (Fig. A)
- 2) Mount the guide rail base 3 assembly ●, seeing to it that it does not hitch on the capstan housing.
- 3) Tighten the two screws ● with a torque of 0.6kg·cm.
- 4) Mount the flexible rotary shaft ●.
- 5) Referring to 1-1, mount the cassette compartment holder assembly.

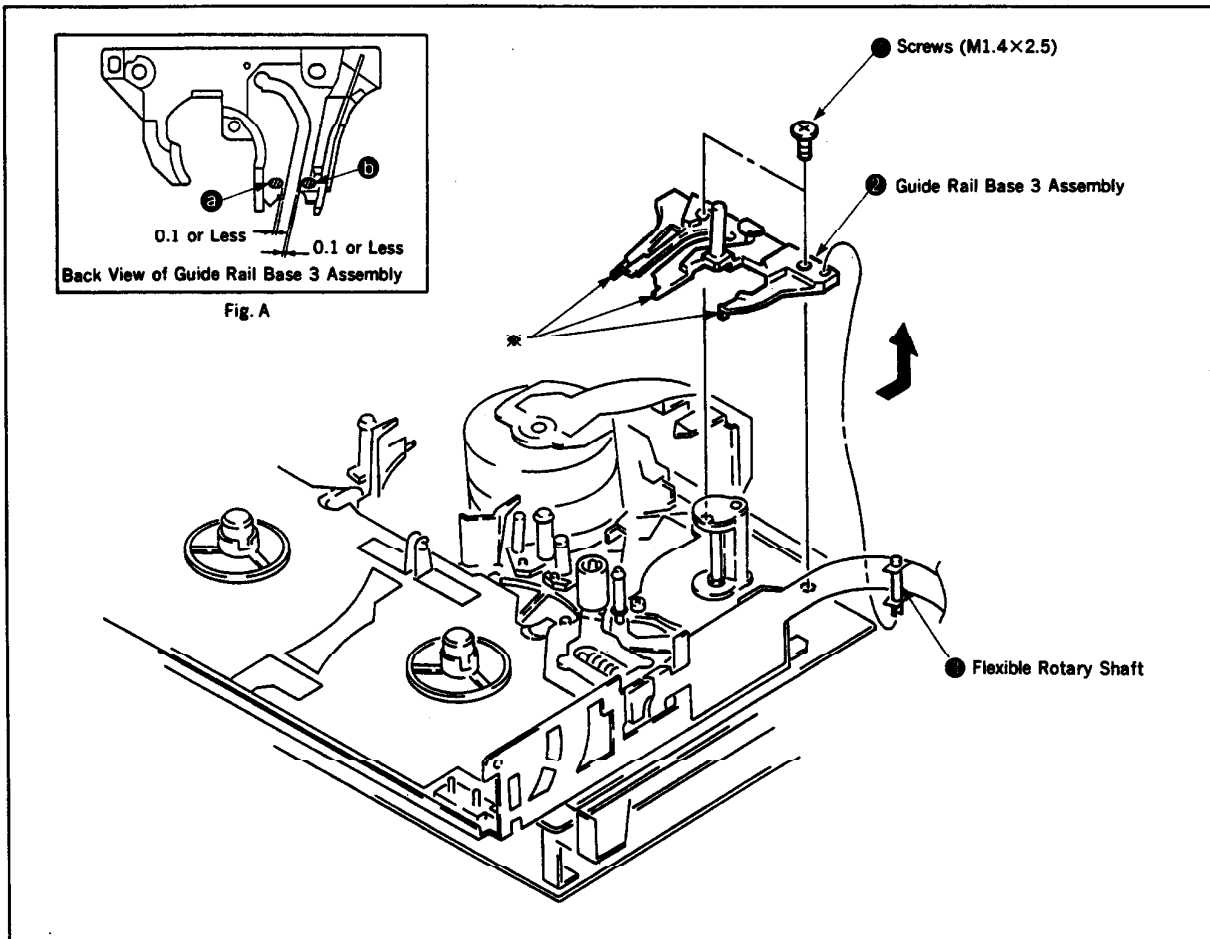


Fig. 41

3-21 CAPSTAN MOTOR ASSEMBLY (Fig. 42)

1. Removal

- 1) Referring to 1-1, remove the cassette compartment holder assembly.
- 2) Referring to 3-20, remove the guide rail base 3 assembly.
- 3) Remove the connector ● of the capstan motor assembly ●.
- 4) Remove the screw ●. Disengaging the gear of the conversion gear assembly ●, remove the capstan motor assembly ● in an arrow direction (obliquely).

2. Mounting

- 1) As shown in Fig. A, incline the capstan motor assembly ● to engage the gear of the capstan motor assembly ● with that of the conversion gear assembly ●, and tighten the screw 3 with a torque of $1\text{kg}\cdot\text{cm}$.
When this is done, be careful not to damage the gear of the conversion gear assembly ●.
- 2) Mount the connector 2 to the capstan motor assembly ●.
- 3) Referring to 3-20, mount the guide rail base 3 assembly.
- 4) Referring to 1-1, mount the cassette compartment holder assembly.

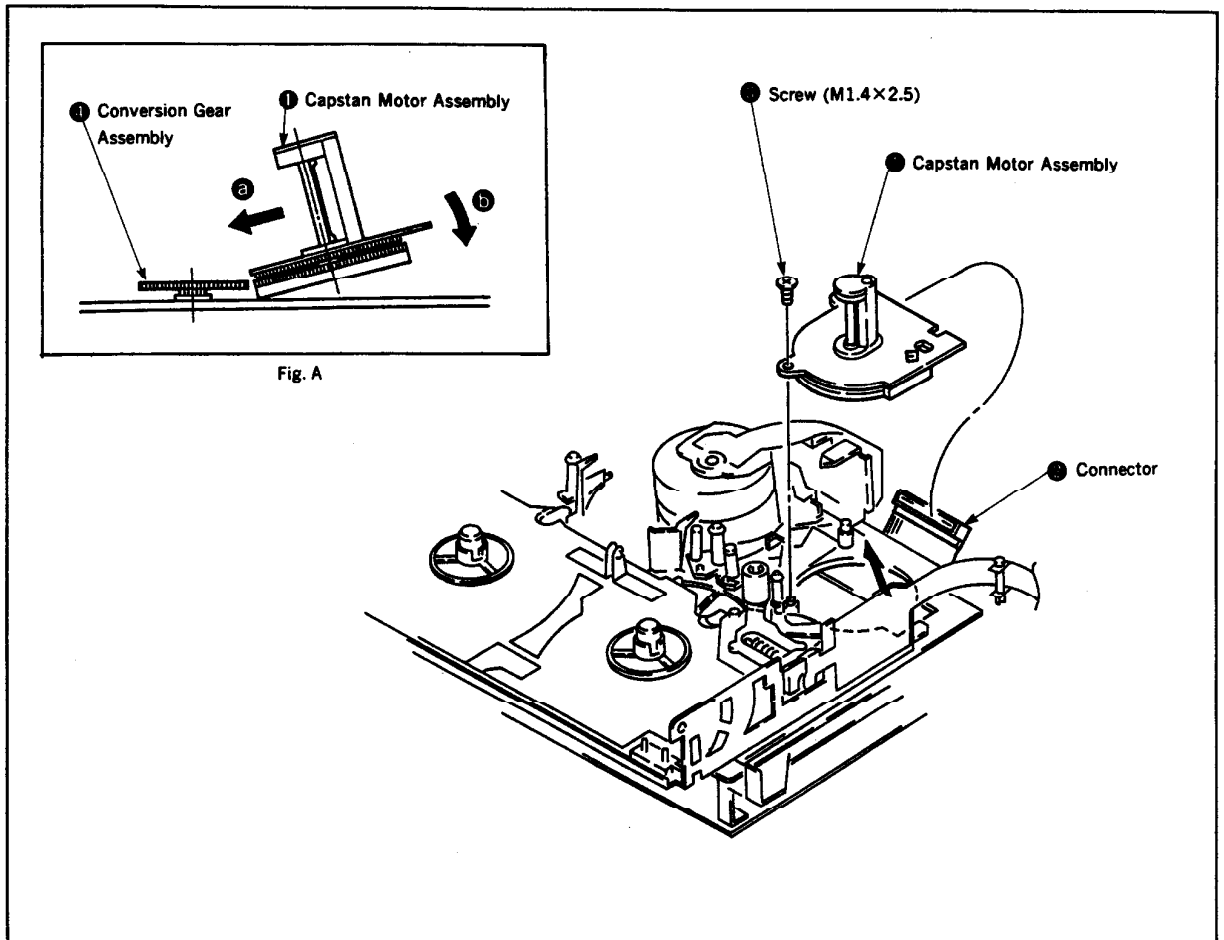


Fig. 42

3-22 DRUM BASE ASSEMBLY (Fig. 42)

1. Removal

- 1) Referring to 1-1, remove the cassette compartment holder assembly.
- 2) Remove the motor flexible board ● from the board.
- 3) Referring to 3-19, remove the guide rail base 2 assembly.
- 4) Remove the two screws ●.
- 5) Draw out the head flexible board ● carefully from the hole of the mechanical chassis not to damage it, and remove the drum base assembly.

2. Mounting

- 1) Put the head flexible board ● in the hole of the mechanical chassis and put the positioning pins ● of the drum base in the holes of the mechanical chassis.
- 2) Tighten the two screws ● with a torque of 0.8kg·cm.
- 3) Referring to 3-19, mount the guide rail base 2 assembly.
- 4) Mount the motor flexible board ● to the board.
- 5) Referring to 1-1, mount the cassette compartment holder assembly.

Note: After mounting, make tape path adjustment in Section 4.

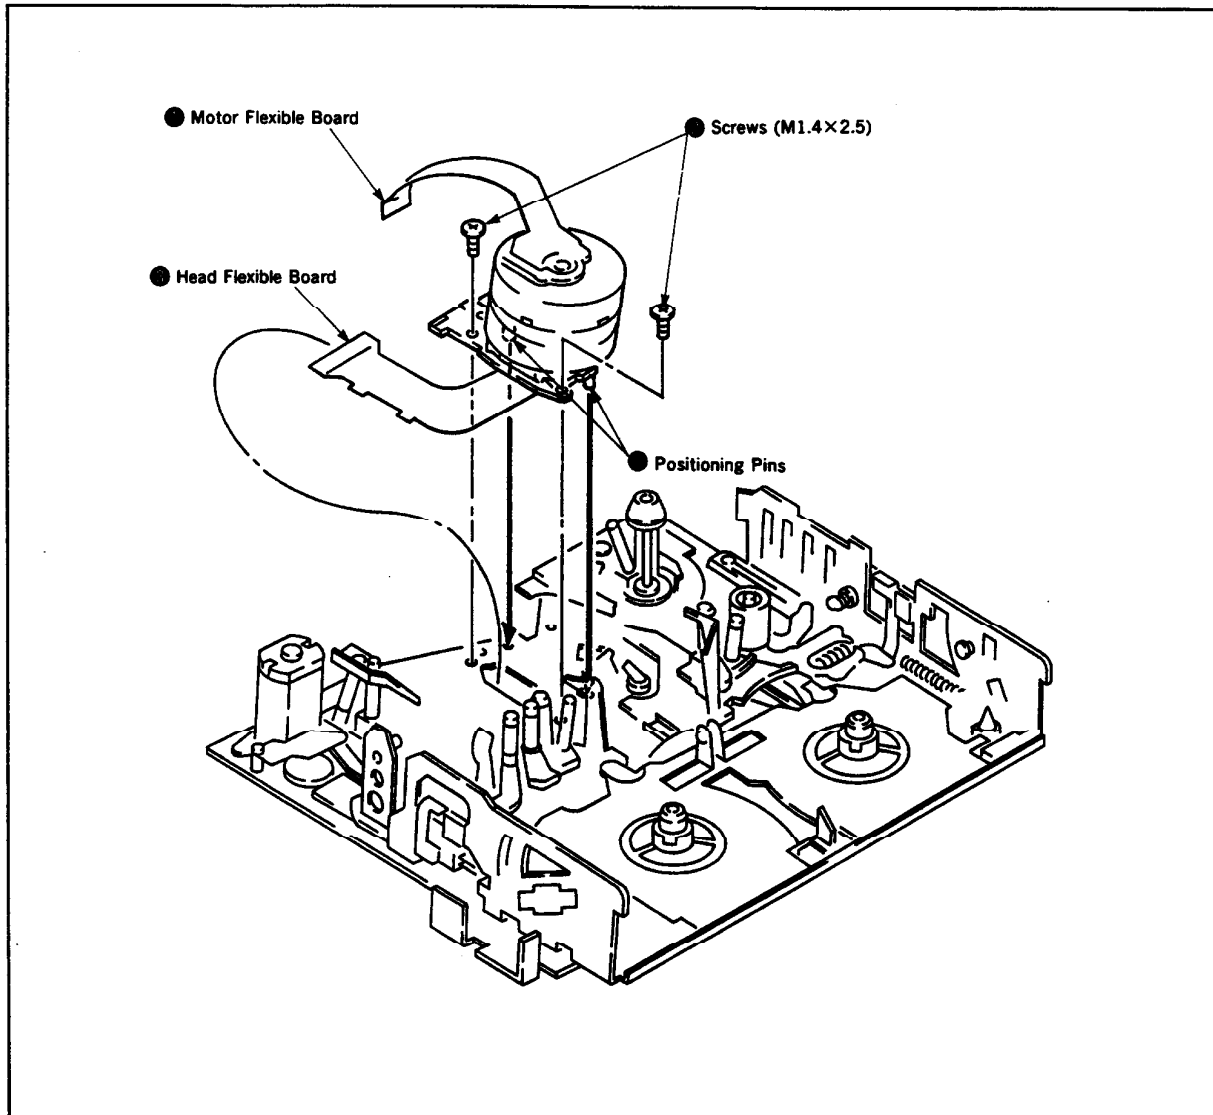


Fig. 42

3-23 DRUM ASSEMBLY (Fig. 43)

1. Removal

- 1) Referring to 1-1, remove the cassette compartment holder assembly.
- 2) Remove the motor flexible board ● from the board.
- 3) Referring to 3-19, remove the guide rail base 2 assembly.
- 4) Remove the three screws ● from the back of the mechanical chassis.
- 5) Draw out the head flexible board ● carefully from the hole of the mechanical chassis not to damage it, and remove the drum assembly ●.

2. Mounting

- 1) Put the head flexible board ● in the hole of the mechanical chassis, and mount it so that the pins ● and ● will be put in the holes ● and ● shown in Fig. A.
- 2) Tighten the three screws ● with a torque of 0.5kg·cm.
- 3) Referring to 3-19, mount the guide rail base 2 assembly.
- 4) Mount the motor flexible board ● to the board.
- 5) Referring to 1-1, mount the cassette compartment holder assembly.

Note: After mounting, make tape path adjustment in Section 4.


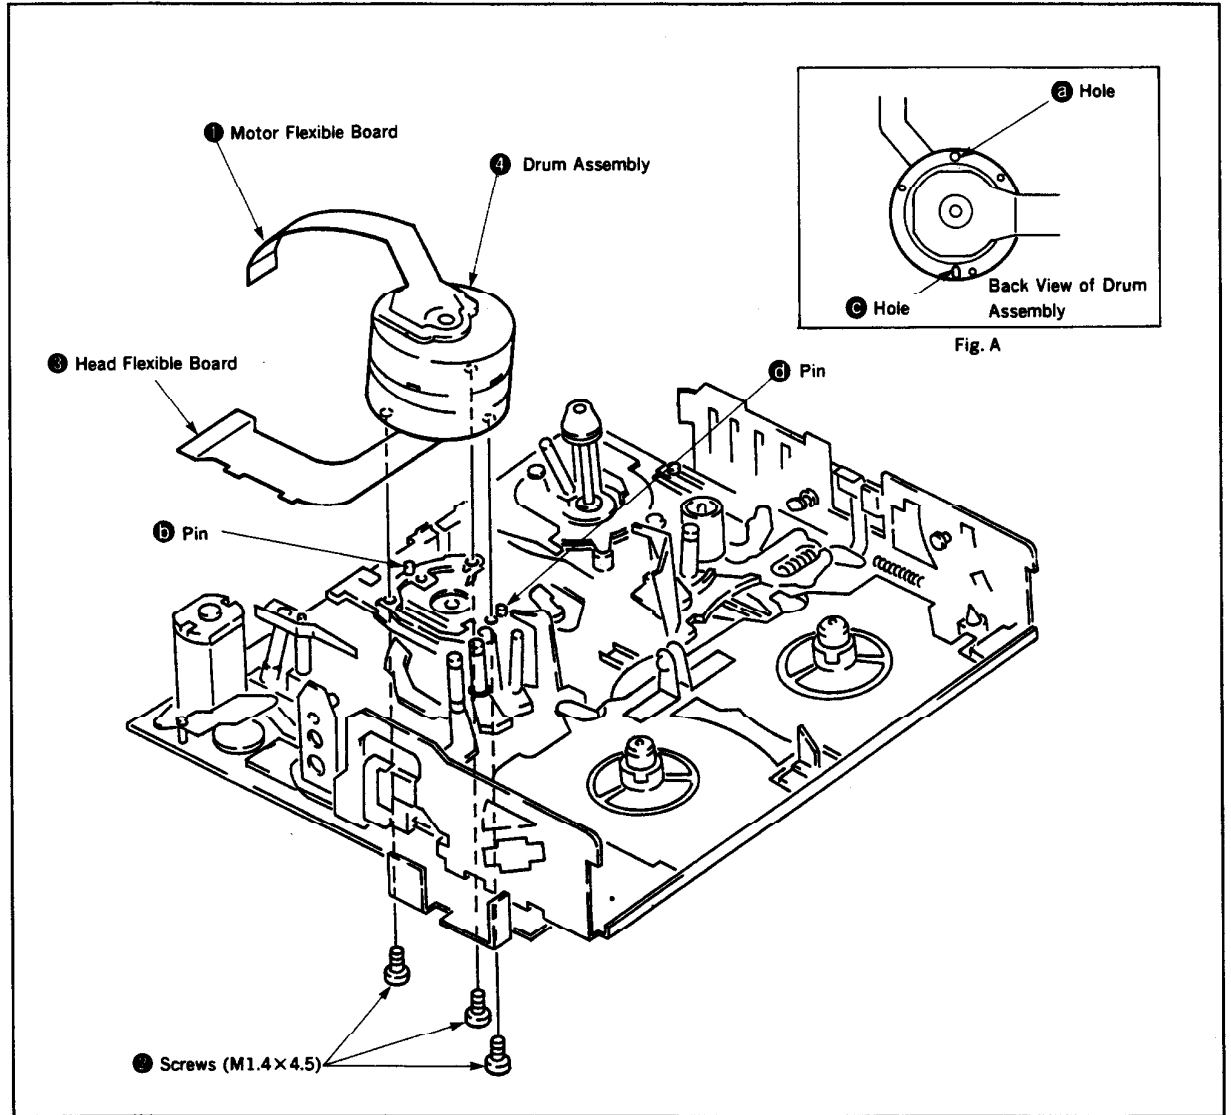


Fig. 43

3-24 Replacement of Rotary Upper Drum Assembly

There are two rotary upper drum assembly types, depending on a color mark. (Fig. A in Fig. 45)

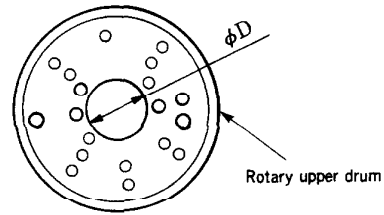

NTSC:

| | |
|--------------|---|
| A-7049-190-A | Rotary upper drum assembly DGR-32-R-(1) |
| A-7049-189-A | Rotary upper drum assembly DGR-32-R-(2) |

PAL:

| | |
|--------------|---|
| A-7049-197-A | Rotary upper drum assembly DGR-37-R-(1) |
| A-7049-198-A | Rotary upper drum assembly DGR-37-R-(2) |

Manufacturing upper drum

| RANK | φD | MARK |
|------|-----------------------------|--------------|
| A | $\phi 8^{+0.0015}_{+0.001}$ | Green |
| B | $\phi 8^{+0.001}_{+0.0005}$ | Green, Brown |
| C | $\phi 8^{+0.0005}_0$ | Black |
| D | $\phi 8^{-0.0005}_0$ | Black, Brown |
| E | $\phi 8^{-0.0005}_{-0.001}$ | Red |
| F | $\phi 8^{-0.001}_{-0.0015}$ | Red, Brown |
| G | $\phi 8^{-0.0015}_{-0.002}$ | Blue |
| H | $\phi 8^{-0.002}_{-0.0025}$ | Blue, Brown |

Repairing upper drum

| SUFFIX | φD | REMARKS | DRUM UPPER |
|--------|-----------------------------|--------------|----------------------|
| -01 | $\phi 8^{+0.001}_{+0.0005}$ | Green, Brown | NTSC DGR-32-R-(1) |
| | $\phi 8^{+0.0005}_0$ | Black | PAL DGR-37-R-(1) |
| -11 | $\phi 8^{-0.001}_{-0.0015}$ | Red, Brown | NTSC DGR-32-R-(2) |
| | $\phi 8^{-0.0015}_{-0.002}$ | Blue | PAL DGR-37-R-(2) |

1. Removal

- Referring to 3-23, remove the drum assembly.
- Remove the two screws ①. (Fig. 44)
- Hold the outlet (base) of the guide protector ②, lift it up obliquely. In that state, hold the outer figure of the back yoke ③ and remove it. (Fig. 44)

Note: Note that the flexible board and guide protector ② easily come off position because they are only pasted.

- As shown in Fig. A, set the rotor earth spring ④ around spring hook. (Fig. 44)
- Using a drum screwdriver (Ref. No. J-11), remove the two hexagon socket bolts ⑤, and then, rotary upper drum assembly ⑥. (Fig. 45)
- Using the drum screwdriver (Ref. No. J-11), remove the two hexagon socket bolts ⑦, and then, rotor ⑧. (Fig. A in Fig. 45)

2. Mounting

- Clean the flange surface ① and the surface of the rotary upper drum assembly ② which comes into contact with it, and make sure that there is no dust or scratch. (Fig. 45)
- Adjust a direction of the upper drum so that the head contact mold pin ③ will be put in the reference hole of the rotary upper drum assembly ④, and push it in lightly. (Fig. 45)

Note: Check visually that the clearance between the upper and lower drums is about 0.05mm.

- Using the drum screwdriver (Ref. No. J-11), tighten the two hexagon socket bolts ⑤ (800g·cm) and rotate it with finger to make sure that there is no abnormality. (Fig. 45)
- Put the pin ⑥ of the rotor ⑧ in the hole of the rotary upper drum assembly. Using the drum screwdriver (Ref. No. J-11), tighten the hexagon socket bolts ⑦. (800g·cm) (Fig. A in Fig. 45)
- Remove the rotor earth spring ④ from the spring hook. Using tweezers, etc., hook it onto the groove of the stator boss ⑨. (Fig. B in Fig. 45)

Note: See to it that the rotor earth spring ④ is not located in the gap between the flange and stator.

- Hold the outer figure of the back yoke ③, put it on the inner step of the upper drum and insert the other side slowly. (Fig. B in Fig. 44)
- Tighten the two screws ①. (500g·cm) (Fig. 44)
- Rotate the upper drum with finger to check that it runs smoothly.
- Referring to 3-23, mount the drum assembly.

Note: After mounting, be sure to make tape path adjustment in Section 4.

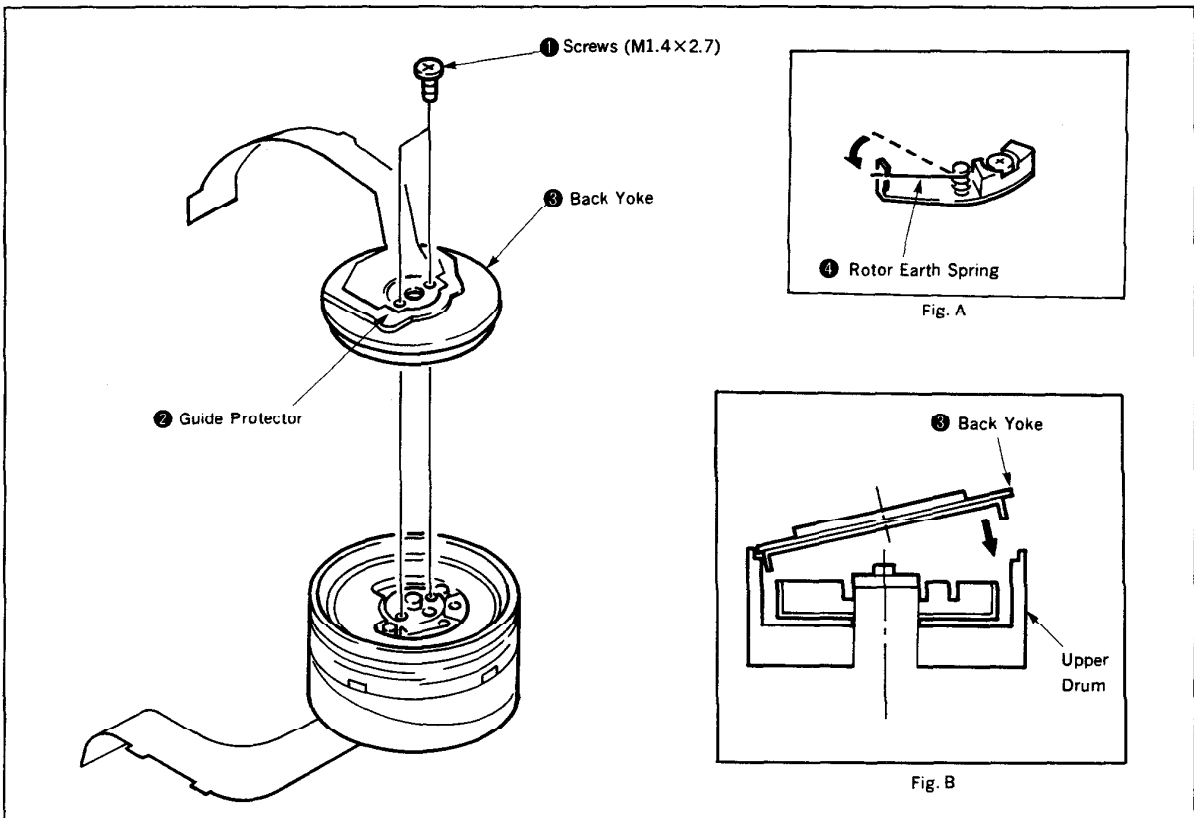


Fig. 44

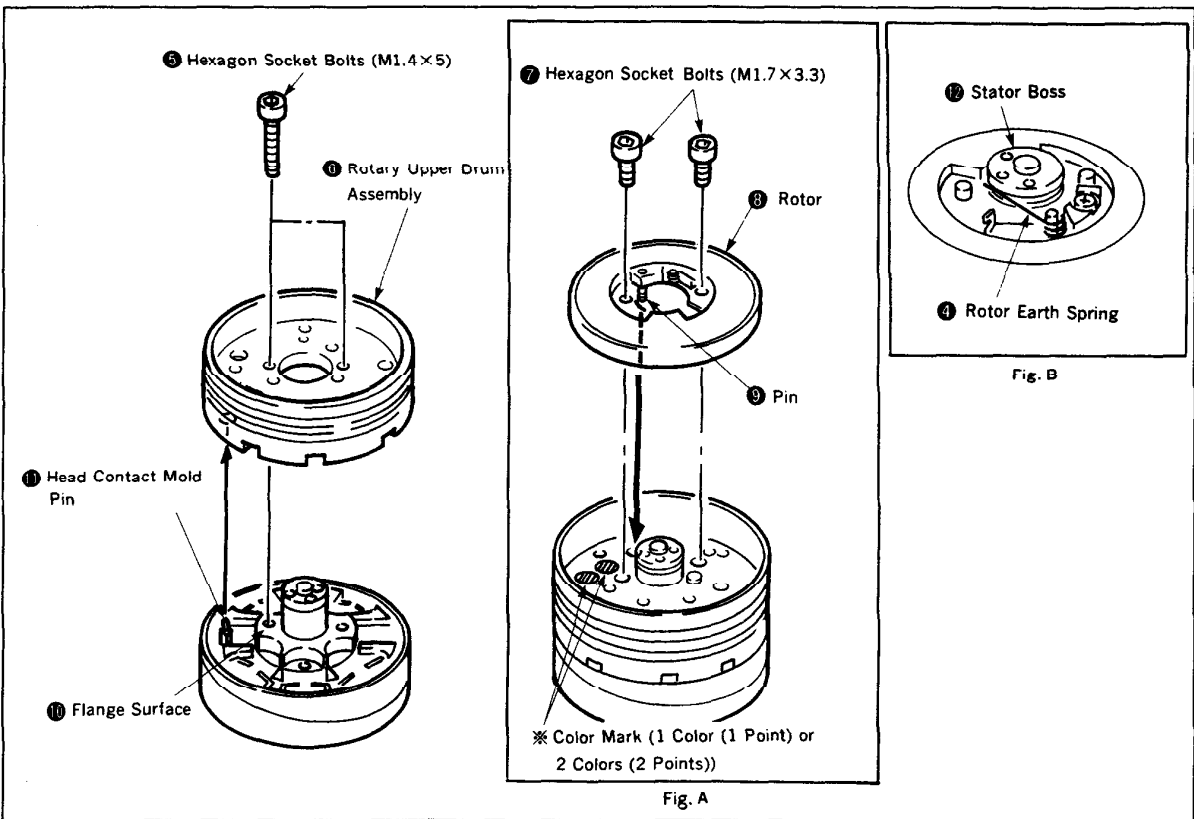


Fig. 45

3-25 REEL TABLE HEIGHT CHECK (Fig. 46)

1. Removal

- 1) Referring to 1-1, remove the cassette compartment holder assembly.
- 2) Referring to 3-1, remove the LED base.

2. Check

- 1) Using slide calipers, etc., check that distances from the LS chassis to the S reel table reel resting surface ② and T reel table reel resting surface ③ are respectively as shown in below.

3. Mounting

- 1) Referring to 3-1, mount the LED base.
- 2) Referring to 1-1, mount the cassette compartment holder assembly.

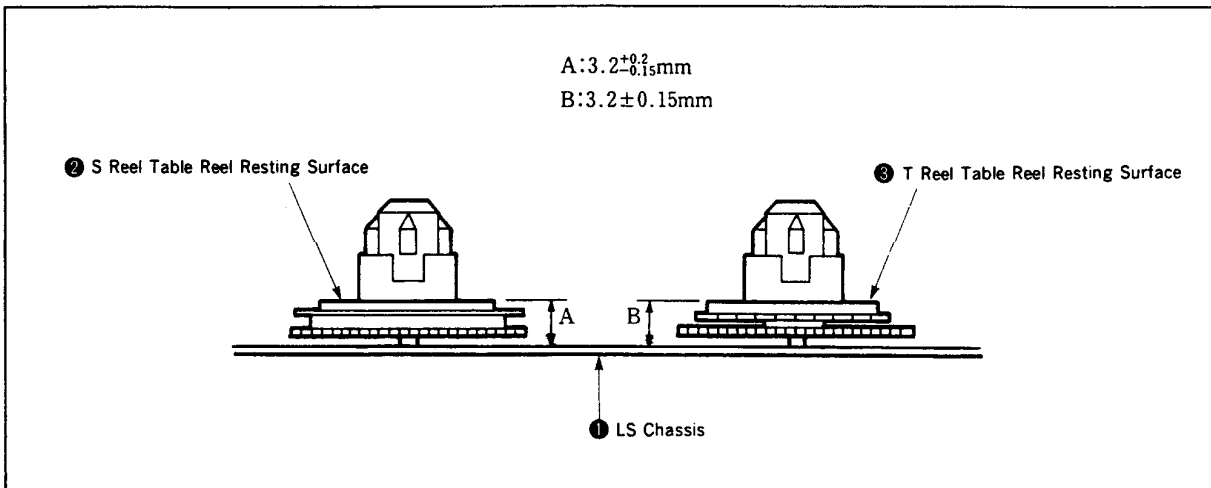


Fig. 46

3-26 FWD/RVS TORQUE CHECK

- 1) Set the FWD/RVS take-up torque cassette (Ref No. J-10)
- 2) In the FWD mode, check that a T reel torque value is $5 - 15g \cdot cm$.
- 3) Turn on the REC/REVIEW button and check that an S reel torque value is $25g \cdot cm - 45g \cdot cm$.
- 4) When the values above are not met, replace the respective reel tables.

3-27 TENSION REGULATOR POSITION ADJUSTMENT

1. Removal

- 1) Referring to 1-1, remove the cassette compartment holder.

2. Adjustment

- 1) Set a cassette tape, select the **REC** mode and run the tape. (Refer to 1-3)
- 2) With the tape running, check that the distance between TG-1 and TG-2 is 9.35 – 10.7mm. (Fig. 47)
- 3) When they are not at specified positions, remove the cassette and go through the steps 4) on.
- 4) Referring to 3-1, remove the LED base.
- 5) Loosen the screw ❶

- 6) When TG-1 is located inside (or outside) its specified position, shift the TG-1 adjustment block 2 slightly in a direction of the arrow **A** (or **B**) and fix with the screw ❶. (Fig. 48)
- 7) Referring to 3-1, mount the LED base.

Note : Use the cassette tape after feeding the tape as far as a middle point.

When taking the steps 4) and 5), remove the cassette tape first.

Check that TG1 is able to move in direction C during REC.

3. Mounting

- 1) Referring to 1-1, mount the cassette compartment holder assembly.

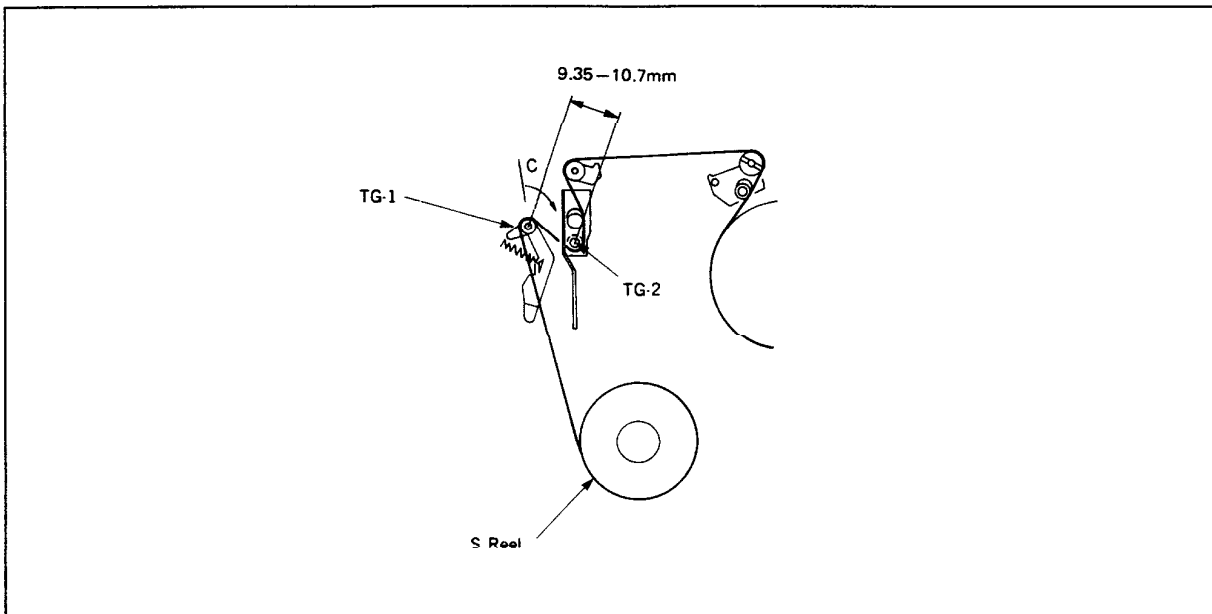


Fig. 47

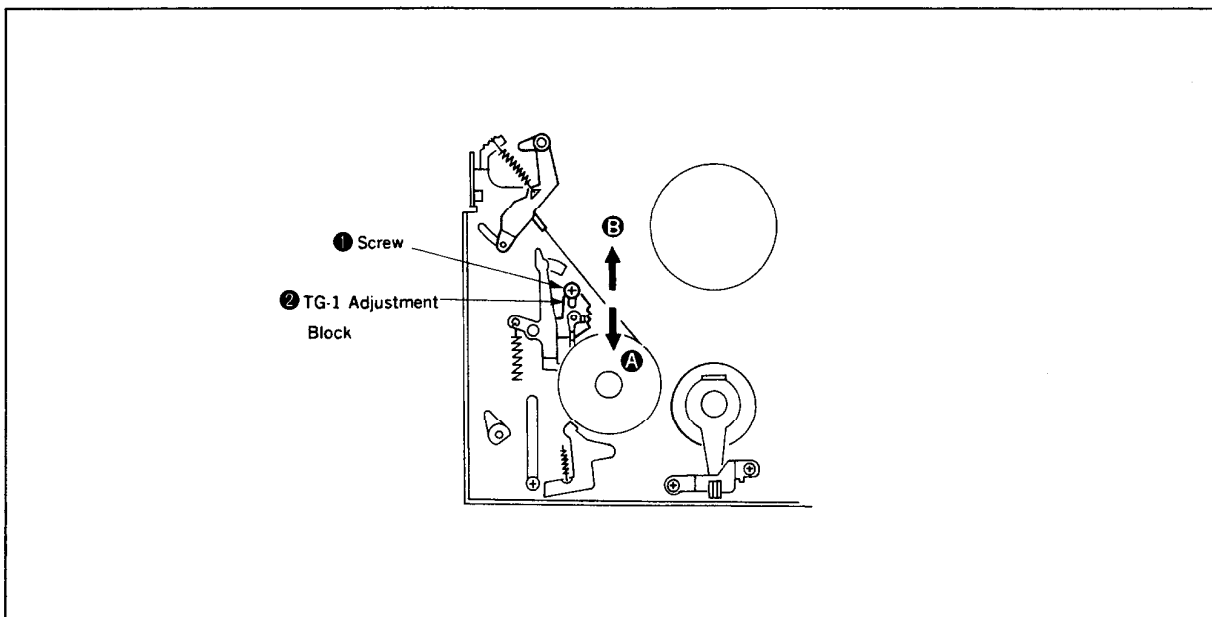


Fig. 48

3-28 FWD BACK TENSION ADJUSTMENT (Fig. 49)

1. Removal

- 1) Referring to 1-1, remove the cassette compartment assembly.
- 2) Referring to 3-7, remove the LED base.

2. Adjustment

- 1) Select the **REC** mode.
- 2) Set the tension measurement reel (Ref. No. J-8)●.
- 3) Using the dial tension gauge (Ref. No. J-7)●, measure a tape tension at the outlet of TG-2. When this is done, pull the tape at a rate of 14mm/sec.
- 4) Change the position of the tension regulator spring ● position as shown in Fig. A so that measure center value of the tention is 4-6.5g.

3. Mounting

- 1) Referring to 1-1, mount the cassette compartment holder assembly.
- 2) Referring to 3-1, mount the LED base.

Note : When this is done, see to it that the gear ● is not engaged with the S reel table.

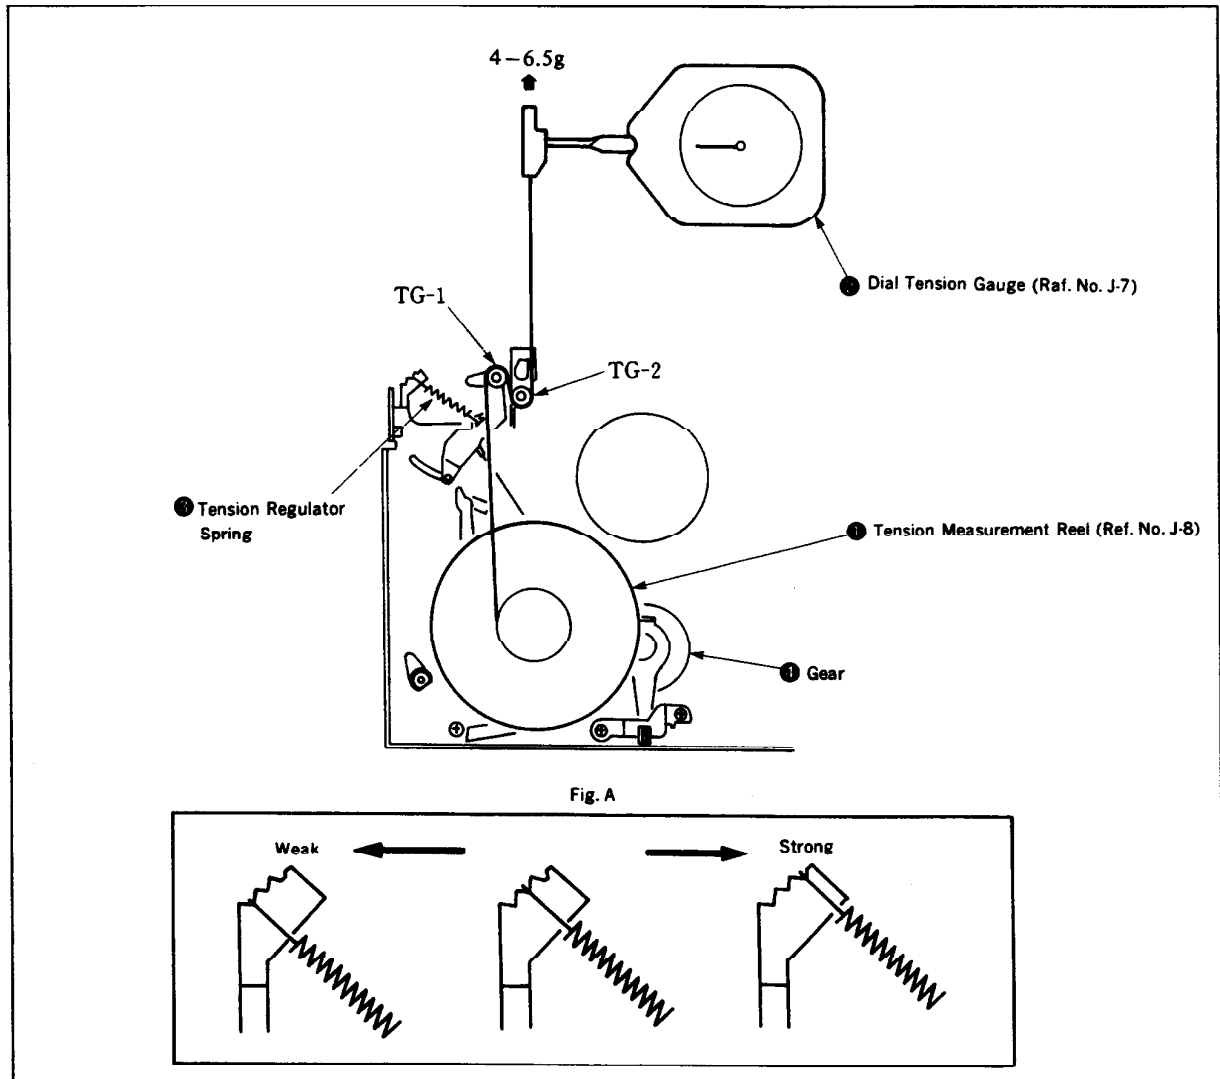


Fig. 49

4. TAPE PATH ADJUSTMENT

The 8mm video system uses ATF (Automatic Track Finding) which instantaneously controls a tape running speed based on 4 types of pilot signals and performs high-precision tracking.

This does away a tracking control knob and allows accurate track tracing.

On the other hand, however, the ATF system has a problem in adjusting the tape path system. That is, if head tracing is out of order a little, the ATF system automatically corrects it, which means that perfect adjustment cannot be done.

To avoid this problem, a track shift jig had been used to adjust the tape path system. In the FL (Q) mechanism, the ATF system is forcibly operated to shift a tracking amount constantly (approx. 1/4) by setting the PATH mode. So, fine tracking adjustment can be easily done.

No track shift jig is required any more.

Example) For CCD-V11/V88
CN404

| | |
|---|---------|
| 4 | GND |
| 3 | CAM ADJ |
| 2 | TEST |
| 1 | PATH |

The path mode is set by shorting the pins ① and ④.

4-1 PREPARATION FOR ADJUSTMENT

- 1) Clean the tape running surfaces (tape guides, drum, capstan shaft, pinch roller). (Fig. 51)
- 2) Set the PATH mode by shorting the TEST pins (CN404 pins ① and ④ for CCD-V11/V88).
- 3) Connect to an oscilloscope.
- 4) Play back a tracking alignment tape (NTSC: WR5-1N), (PAL: WR5-1C).
- 5) Check that a RF waveform is flat at the inlet and outlet of the oscilloscope. (Fig. 50 ③)

When it is not flat, make adjustment in accordance with the procedures below.

When the RF waveform is not flat at the inlet/outlet ; (Fig.50 ② and ③)

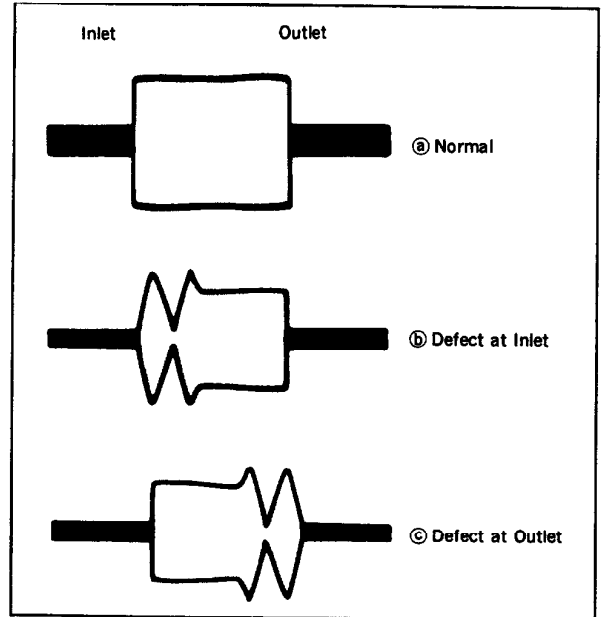


Fig. 50

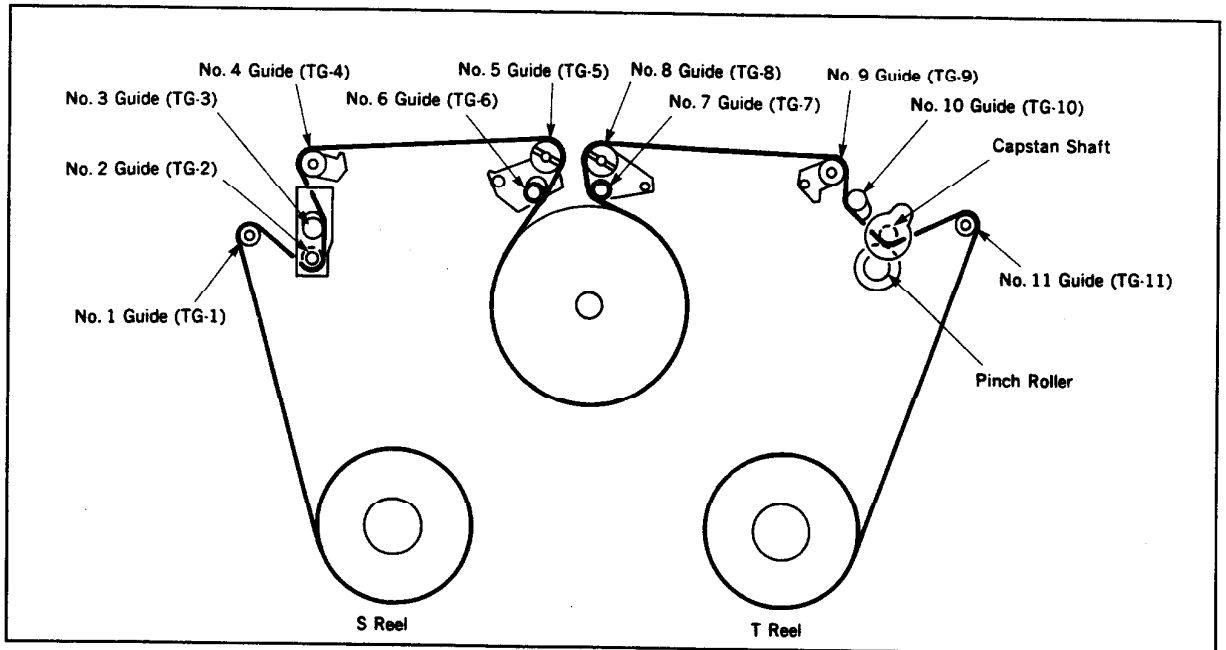


Fig. 51 Tape Guides Location

4-2 TRACKING ADJUSTMENT (Fig. 52)

- 1) Play back the tracking alignment tape.
- 2) Loosen the No. 5 guide (TG-5) lock screw ① and turn the No. 5 guide to flatten the waveform at the inlet.
- 3) Tighten the No. 5 guide (TG-5) lock screw ② to lock the No. 5 guide.
- 4) Loosen the No. 8 guide (TG-8) lock screw ③ and turn the No. 8 guide to flatten the waveform at the outlet.
- 5) Tighten the No. 8 guide (TG-8) lock screw ④ to lock the No. 8 guide. When this is done, make sure that the waveform does not change at the outlet.

Note : Be careful not to loosen the lock screw too much because the guide is easily moved.

Tape path Adjustment for "Guide Rail Base 2 with TG8 Gate Adjustment"

You do not have to adjust the TG-8 gate adjustment screw.

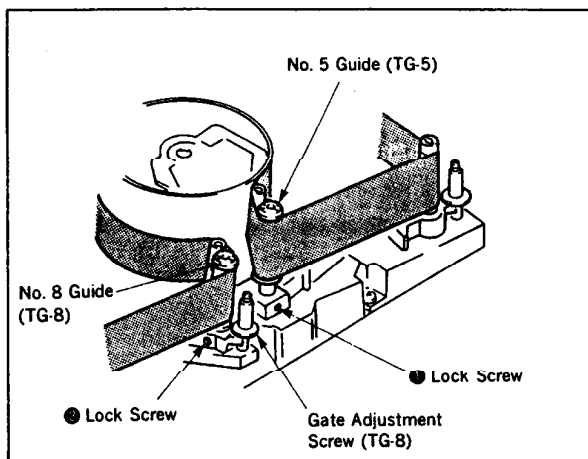


Fig. 52

4-3 NO. 4 GUIDE (TG-4) ADJUSTMENT

When an entire guide base is replaced, its height has been preste.

TG-4 Guide Height Presetting

- 1) With the top surface of the TG-4 guide leveled, rotate an upper flange by one turn. This is a preset height.

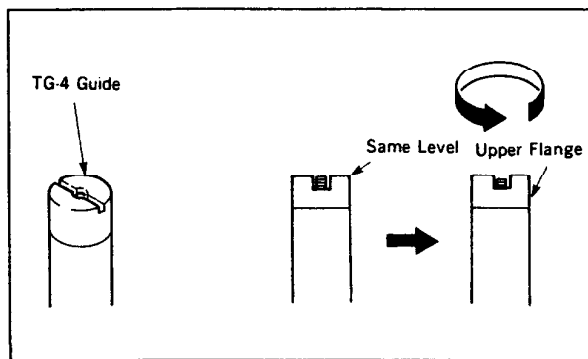


Fig. 53

No. 4 Guide (TG-4) Adjustment

- 1) Play back the tracking alignment tape.
- 2) In the FWD mode, check that the tape runs along a TG-4 lower flange. When there is a clearance, turn TG-4 counter-clockwise to put the tape along the TG-4 lower flange. turning angle must be within 180°.

When this is done, check that a tracking waveform (Fig. 54) is not changed.

When a tracking waveform inlet is downward as shown in Fig. 55, make tracking adjustment at the inlet side by raising a height of TG-4.

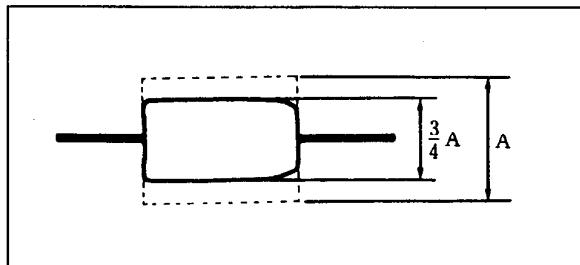


Fig. 54

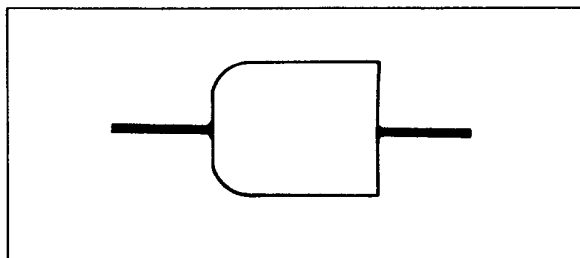


Fig. 55

Tape Path Adjustment for "Guide Rail Base 1 with TG4 Gate Adjustment" (Fig. 56)

After adjusting an inlet, when the TG-4 lower flange is curled in the REV mode, turn the TG-4 gate adjusting screw at pitches of 45° to the left to remove a curl. (A lock screw is attached to the TG-4 gate adjusting screw. First, loosen the lock screw a little, and then, turn the gate adjusting screw. After adjustment, tighten the lock screw.)

If the TG-4 gate adjusting screw is turned to the left too much, the TG-2 upper flange (arrow-indicated part in the figure above) is greatly curled. If it happens, turn the screw to the right.

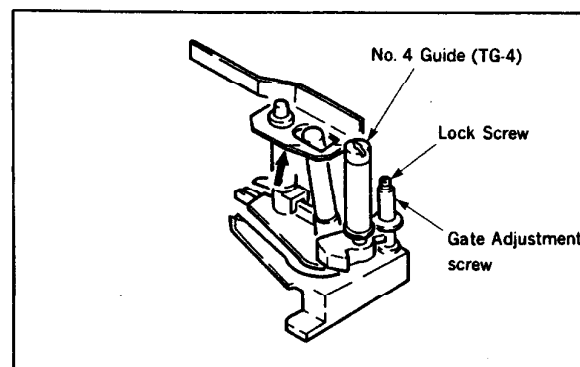


Fig. 56

4-4 NO. 11 GUIDE (TG-11) ADJUSTMENT

- 1) In the PLAY BACK mode, check that it has no deflection between the capstan and No. 11 guide (TG-11).
(Criterion : 0.5mm or less)
when the tape is deflected, turn the No. 11 guide (TG-11) to remove its deflection. (Fig. 57)
- 2) Select the REV mode and check the RF waveform at the outlet side. (Fig. 58)
- 3) If the waveform is defective, turn the TG-11 nut counterclockwise by 90° and recheck 2), 3) and 4).
- 4) Apply screw lock to the No. 11 guide (TG-11).

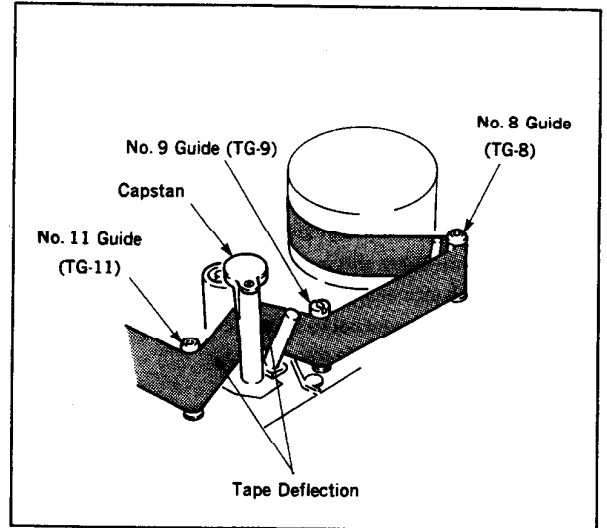


Fig. 57

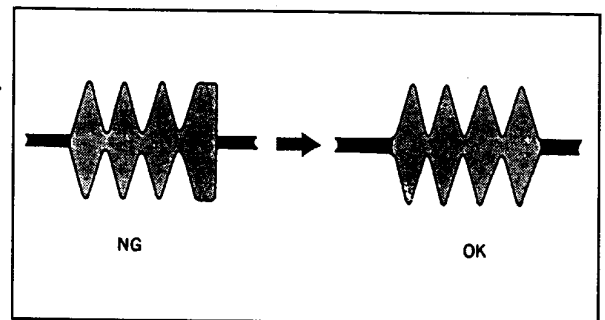


Fig. 58

4-5 CHECK AFTER ADJUSTMENT

1. Tracking Check

- 1) Play back the tracking alignment tape. In the PATH mode, shift a track. (Fig. 59)
- 2) At this time, check that a minimum amplitude value (E_{MIN}) is 67% or more of a maximum amplitude value (E_{MAX}). (Fig. 60)
- 3) Make sure that the waveform does not fluctuate greatly. (Fig. 61)

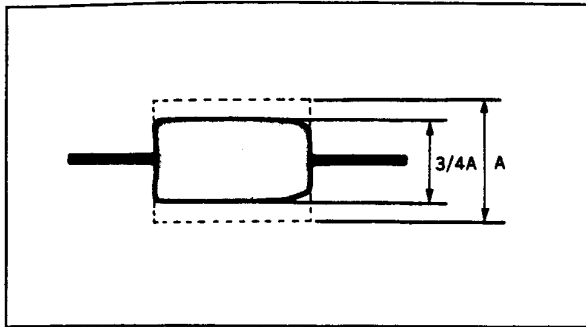


Fig. 59

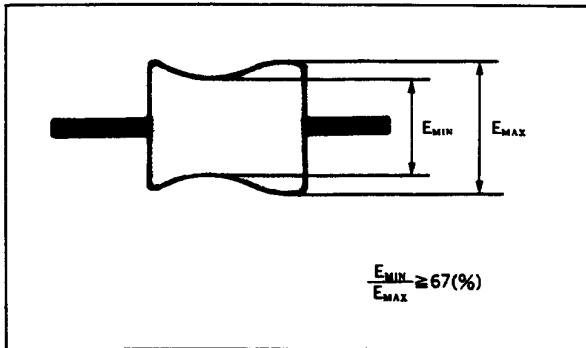


Fig. 60

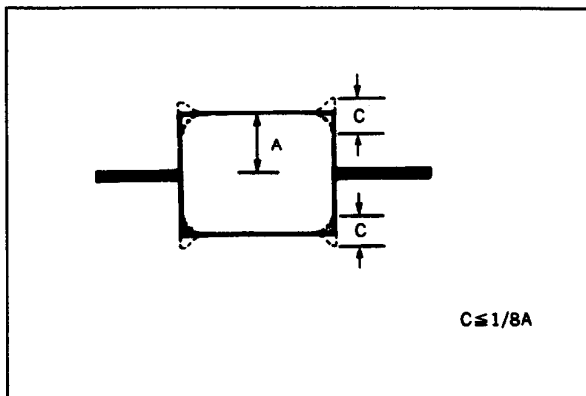


Fig. 61

2. CUE, REV Check

- 1) Play back the tracking alignment tape and select the **REV** mode. At this time, waveform peak pitches must be uniform. (Fig. 62 (a)) When they not uniform, make tracking adjustment in 4-2 and No. 11 guide (TG-11) adjustment in 4-4.
- 2) Select the **CUE** mode. At this time waveform peak pitches must be uniform. (Fig. 62 (b)) When not uniform, make tracking adjustment in 4-2.

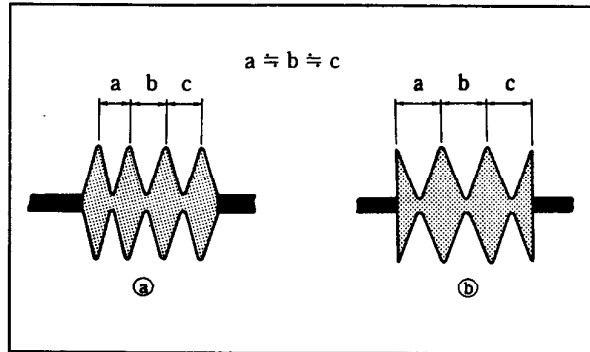


Fig. 62

3. Rise Check

- 1) Play back the tracking alignment tape.
- 2) In the PLAY BACK mode, check that the RF waveform rises horizontally within one second. At this time, check also that the tape is not deflected around the pinch roller. (Fig. 63)
- 3) Play back the tape after CUE/REV and FF/REW operation and check that the RF waveform rises horizontally within one second. At this time, check also that the tape is not deflected around the pinch roller.
- 4) Repeat the checks in 2) and 3).

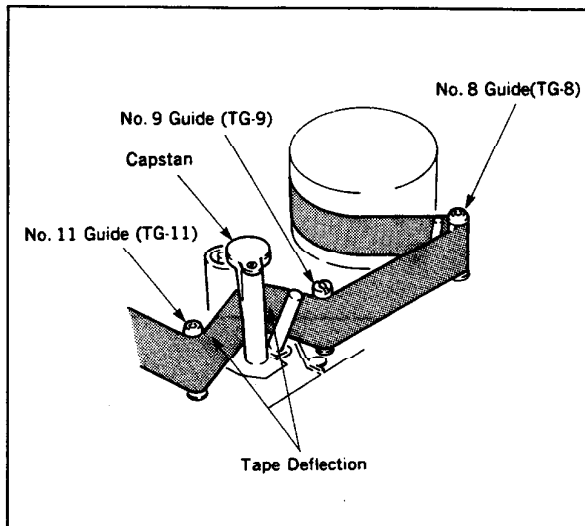


Fig. 63

4. Tape Running Check

In the **CUE** and **REV** modes, check that the TG-2 upper and lower flanges, TG-4 lower flange, TG-5 upper flange, TG-8 upper flange and TG-11 upper and lower flanges are not cued greatly. (Fig. 63)

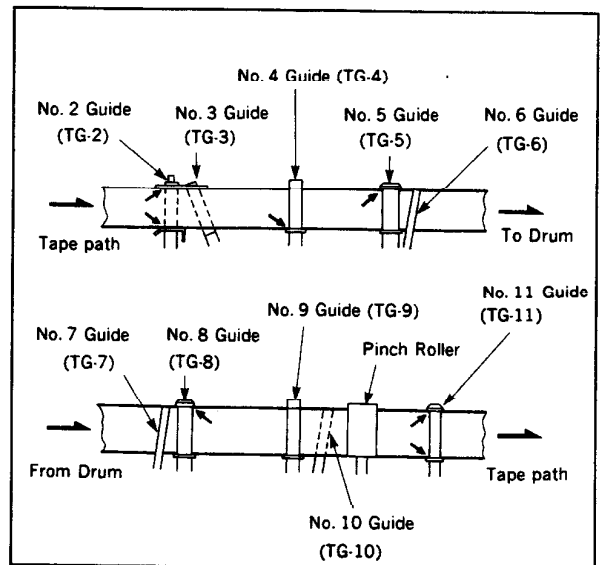
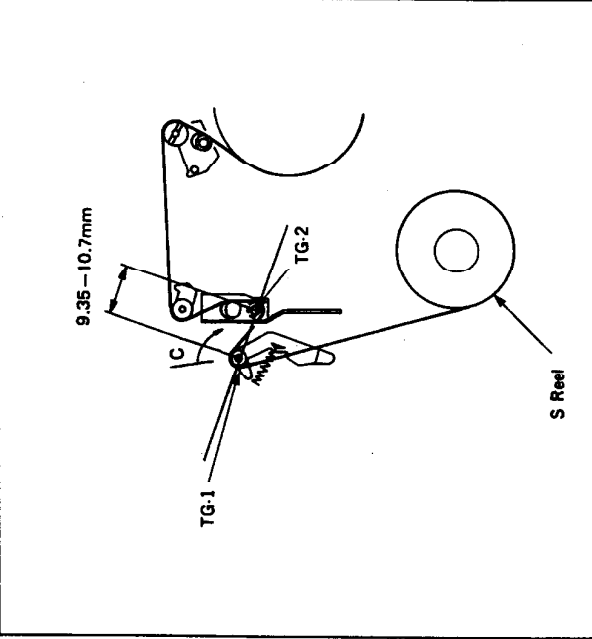
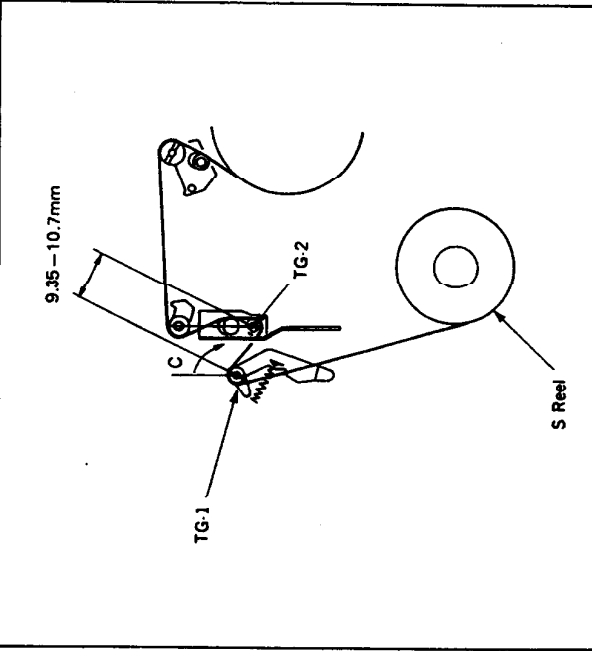


Fig. 64

8mm Video MECHANICAL ADJUSTMENT MANUAL II

Correction Table
As there is an error on page 40, please correct it.

| Incorrect | Correct |
|--|---|
|  |  |