

# SLV-GA30/GA40K/GA60/GA77K/GF90K

RMT-V254/V254A

## SERVICE MANUAL

*E Model*  
*Tourist Model*  
SLV-GA60/GA77K/GF90K  
*Philippine Model*  
SLV-GA30/GA40K

Hi-Fi

VHS

S MECHANISM



Photo: SLV-GA77K  
RMT-V254

Refer to the **SERVICE MANUAL** of VHS  
**MECHANICAL ADJUSTMENT VI** for  
**MECHANICAL ADJUSTMENTS. (9-921-647-11)**

### SPECIFICATIONS

#### System

Colour system  
PAL, MESECAM, NTSC 3.58, NTSC 4.43  
RF output signal  
UHF channels 30 to 39  
(B/G, D/K)  
Aerial out  
75-ohm asymmetrical aerial socket

#### Inputs and outputs

LINE-1 IN and LINE-2 IN  
VIDEO IN, phono jack (1 each)  
Input signal: 1 Vp-p, 75 ohms,  
unbalanced, sync negative  
AUDIO IN, phono jack (2 each)  
Input level: 327 mVrms  
Input impedance: more than 47 kilohms  
LINE-1 OUT  
VIDEO OUT, phono jack (1 each)  
Output signal: 1 Vp-p, 75 ohms,  
unbalanced, sync negative  
AUDIO OUT, phono jack (2 each)  
Standard output: 327 mVrms  
Load impedance: 47 kilohms  
Output impedance: less than 10 kilohms

#### General

Power requirements  
110 – 240 V AC, 50/60 Hz  
Power consumption  
12 W  
Operating temperature  
5°C to 40°C  
Storage temperature  
–20°C to 60°C  
Dimensions  
Approx. 355 × 102 × 284 mm (w/h/d)  
including projecting parts and controls  
Mass  
Approx. 3.8 kg

#### Supplied accessories

Remote commander (1)  
R6 (Size AA) batteries (2)  
Microphone (1)  
Aerial cable (1)  
Audio/video cable (3-phono to 3-phono) (1)  
Plug adaptor  
(SLV-GF90KMJ only) (1)

Design and specifications are subject to change  
without notice

## VIDEO CASSETTE PLAYER



# SONY®

### **SAFETY-RELATED COMPONENT WARNING!!**

**COMPONENTS IDENTIFIED BY MARK  $\triangle$  OR DOTTED LINE WITH MARK  $\triangle$  ON THE SCHEMATIC DIAGRAMS AND IN THE PARTS LIST ARE CRITICAL TO SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY.**

## **SAFETY CHECK-OUT**

After correcting the original service problem, perform the following safety checks before releasing the set to the customer.

1. Check the area of your repair for unsoldered or poorly-soldered connections. Check the entire board surface for solder splashes and bridges.
2. Check the interboard wiring to ensure that no wires are "pinched" or contact high-wattage resistors.
3. Look for unauthorized replacement parts, particularly transistors, that were installed during a previous repair. Point them out to the customer and recommend their replacement.
4. Look for parts which, through functioning, show obvious signs of deterioration. Point them out to the customer and recommend their replacement.
5. Check the B+ voltage to see it is at the values specified.
6. Flexible Circuit Board Repairing
  - Keep the temperature of the soldering iron around 270°C during repairing.
  - Do not touch the soldering iron on the same conductor of the circuit board (within 3 times).
  - Be careful not to apply force on the conductor when soldering or unsoldering.

**Abbreviation**

MJ: E, Tourist Model

PL: Philippine Model

MODEL (SLV-)		GA30	GA40K	GA60	GA77K	GF90K
FEATURES		PL	PL	MJ	MJ	MJ
NTSC 3.58 REC/PB		X/O	X/O	O/O		O/O
NTSC 4.43 REC/PB		X/X	X/X	O/O	O/O	O/O
PAL REC/PB		X/X	X/X	O/O	O/O	O/O
MESECAM REC/PB		X/X	X/X	O/O	O/O	O/O
NTSC PB ON PAL TV		X	X	O	O	O
REC MODE	NTSC	X	X	SP/EP	SP/EP	SP
	PAL	X	X	SP/LP	SP/LP	SP
PLAY MODE	NTSC	SP/LP/EP	SP/LP/EP	SP/LP/EP	SP/LP/EP	SP
	PAL	X	X	SP/LP	SP/LP	SP
AUDIO SYSTEM		MONO	MONO	MONO	MONO	Hi-Fi
KARAOKE		X	O	X	O	O
KARAOKE PON		X	X	X	O	O
SOUNDS IN STEREO		X	X	X	X	X
SURROUND		X	X	X	O	X
TAPE SPEED		O	X	O	O	X
LINE IN (RCA PINS)	FRONT	X	X	X	3	3
	REAR	X	X	2	3	3
LINE OUT(RCA PINS)	FRONT	X	X	X	3	X
	REAR	2	2	2	3	3
RF IN/OUT		USA	USA	GK	GK	GK
REMOTE COMMANDER		RMT-V254A	RMT-V254A	RMT-V254	RMT-V254	RMT-V254

## TABLE OF CONTENTS

### 1. GENERAL

Step 1 Unpacking .....	1-1
Step 2 Setting up the remote commander .....	1-1
Step 3 Connecting the unit .....	1-1
Step 4 Tuning your TV to the unit .....	1-2
Playing a tape .....	1-2
Playing/searching at various speeds .....	1-3
Karaoke sing-along .....	1-4
Adjusting the picture (Resolution Control) .....	1-5
Editing with another VCR .....	1-5
Synchronised recording .....	1-6
Troubleshooting .....	1-6
Index to parts and controls .....	1-7

### 2. DISASSEMBLY

2-1. Upper Case, Panel Block Assembly .....	2-1
2-2. FR-140, 141, 142, JK-166, MJ-91 Boards .....	2-1
2-3. Rear Panel .....	2-2
2-4. MA-336 Board .....	2-2
2-5. Mechanism Deck .....	2-3
2-6. Internal Views .....	2-4
2-7. Circuit Boards Location .....	2-5

### 3. BLOCK DIAGRAMS

3-1. Overall Block Diagram .....	3-1
3-2. Video Block Diagram .....	3-3
3-3. Servo/System Control Block Diagram .....	3-5
3-4. Audio Block Diagram .....	3-7
3-5. Karaoke Block Diagram .....	3-9
3-6. Power Supply Block Diagram .....	3-11

### 4. PRINTED WIRING BOARDS AND SCHEMATIC DIAGRAMS

4-1. Frame Schematic Diagram .....	4-3
4-2. Printed Wiring Boards and Schematic Diagrams .....	4-5
•MA-336 (Video, Audio)(1/4) Schematic Diagram .....	4-5
•MA-336 (Servo/System Control)(2/4) Schematic Diagram .....	4-7
•MA-336 (HiFi, Tuner)(3/4) Schematic Diagram .....	4-9
•MA-336 (Karaoke, Power Supply)(4/4) Schematic Diagram .....	4-11
•MA-336 (Video, Audio, Servo/System Control, Tuner, Karaoke, Power Supply) Printed Wiring Board .....	4-13
•SR-35 (Surround) Printed Wiring Board .....	4-16
•SR-35 (Surround) Schematic Diagram .....	4-17
•FR-142 (Mode Control) Printed Wiring Board .....	4-19
•FR-142 (Mode Control) Schematic Diagram .....	4-21
•FR-140 (Power, Eject Switches) Printed Wiring Board and Schematic Diagram .....	4-23
•FR-141 (Tape Operation) Printed Wiring Board and Schematic Diagram .....	4-24
•MJ-91 (MIC Jack, Amp) Printed Wiring Board and Schematic Diagram .....	4-25
•JK-166 (Line In/Out) Printed Wiring Board and Schematic Diagram .....	4-26

### 5. INTERFACE, IC PIN FUNCTION DESCRIPTION

5-1. System Control — Video Block Interface (MA-336 Board IC201) .....	5-1
5-2. System Control — Servo Peripheral Circuit Interface (MA-336 Board IC201) .....	5-1
5-3. System Control — Mechanism Interface (MA-336 Board IC201) .....	5-2
5-4. System Control — Audio Block Interface (MA-336 Board IC201) .....	5-2
5-6. Servo/System Control Microprocessor Pin Functions (MA-336 Board IC201) .....	5-3

### 6. ADJUSTMENTS

6-1. Mechanical Adjustments .....	6-1
6-2. Electrical Adjustments .....	6-1
2-1. Preparation before Adjustment .....	6-1
2-1-1. Equipment Required .....	6-1
2-1-2. Equipment Connection .....	6-1
2-1-3. Set-up of Adjustment .....	6-1
2-1-4. Alignment Tape .....	6-1
2-1-5. Input/Output Levels and Impedance .....	6-2
2-1-6. Adjustment Sequence .....	6-2
2-2. Power Supply Check .....	6-2
2-2-1. Output Voltage Check (MA-336 Board) .....	6-2
2-3. Servo System Check .....	6-3
2-3-1. RF Switching Position Adjustment (MA-336 Board) .....	6-3
2-4. Audio System Adjustment .....	6-3
2-4-1. Hi-Fi Audio System Adjustment (Hi-Fi model only) .....	6-3
1. AF Switching Position Adjustment (MA-336 Board) .....	6-4
2-4-2. Normal Audio System Adjustment .....	6-4
1. ACE Head Adjustment .....	6-4
2. E-E Output Level Check .....	6-4
3. Recording Bias Check .....	6-4
2-5. Adjusting Parts Location Diagram .....	6-6

### 7. REPAIR PARTS LIST

7-1. Exploded Views .....	7-1
7-1-1. Front Panel and Upper Case Section .....	7-1
7-1-2. Chassis Section .....	7-3
7-1-3. Mechanism Deck Section-1 .....	7-4
7-1-4. Mechanism Deck Section-2 .....	7-5
7-1-5. Mechanism Deck Section-3 .....	7-6
7-2. Electrical Parts List .....	7-7


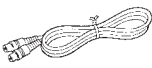
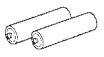
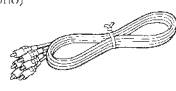
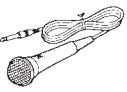
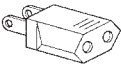
SECTION 1  
GENERAL

This section is extracted from instruction manual.(SLV-GF90K model)

Getting Started

**Step 1**  
**Unpacking**

Check that you have received the following items with the unit:

- Remote commander 
- Aerial cable 
- R6 (Size AA) batteries 
- Audio/video cable (3-phono to 3-phono) 
- Microphone 
- Plug adaptor (SLV-GF90KMJ and SLV-GF99KME only) 

**Checking your model name**

The instructions in this manual are for the 4 models: SLV-GF99KMF, GF99KPS, GF90KMJ and GF90KPS. Check your model number by looking at the rear panel of your unit. The SLV-GF99KME is the model used for illustration purposes. Any difference in operation is clearly indicated in the text, for example, "SLV-GF90KPS only."


**Step 2**

**Setting up the remote commander**

**Inserting the batteries**

Insert two R6 (size AA) batteries by matching the + and - on the batteries to the diagram inside the battery compartment.



Insert the negative (-) end first, then push in and down until the positive (+) end clicks into position.

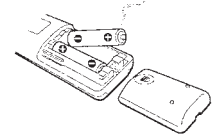

**Using the remote commander**

You can use this remote commander to operate the unit and a Sony TV. To operate this unit, point at the remote sensor on the unit. To operate the TV, point at the remote sensor on the TV. Buttons in the shaded area of the remote commander can be used to operate your Sony TV. If the TV does not have the symbol near the remote sensor, this remote commander will not operate the TV.

Remote sensor

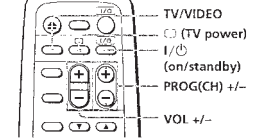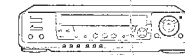


To	Press
Turn the TV to standby or active mode	I/⏻ (on/standby)
Turn on the TV power	⏻ (TV power)
Increase (+) or decrease (-) the TV volume	VOL +/-
Change the TV programme position	PROG(CH) +/-
Select an input source of the TV either from aerial in or from line in	TV/VIDEO



**Notes**

- With normal use, the batteries should last about three to six months.
- If you do not use the remote commander for an extended period of time, remove the batteries to avoid possible damage from battery leakage.
- Do not use a new battery with an old one.
- Do not use different types of batteries.

**Step 3**

**Connecting the unit**

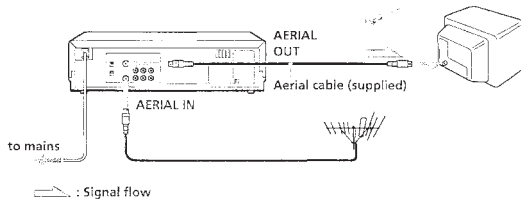

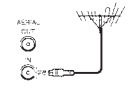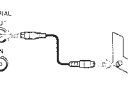
- 1 Disconnect the aerial cable from your TV and connect it to AERIAL IN on the rear panel of the unit. 
- 2 Connect AERIAL OUT of the unit and the aerial input of your TV using the supplied aerial cable. 
- 3 Connect the mains lead to the mains. Use the supplied plug adaptor, if necessary, depending on the design of the mains (SLV-GF90KMJ and SLV-GF99KME only).

**Additional connections**

**To a TV that has audio/video input jacks**


This additional connection improves picture and sound quality. Connect the TV as shown on the right.

If you want to use the Trinitron TV Synchro Play function (see page 14), this connection is necessary. (If your TV has two or more inputs, connect the audio/video cable to the VIDEO IN 1 jacks.)

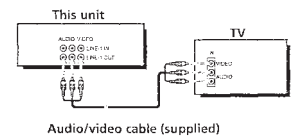

**To a stereo system**

You can improve sound quality by connecting a stereo system as shown on the right.

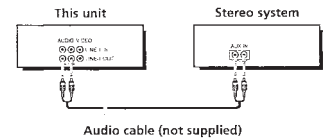

**Tip**

- (SLV-GF99KME/PS only)  
You can also use LINE-2 OUT jacks on the front of the unit.


**Note**





- To listen to playback sounds in stereo and enjoy the Virtual Surround sound (SLV-GF99KME/PS only), you must use either of the connections above.

## Step 4

### Tuning your TV to the unit

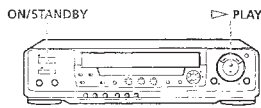
If you have connected your unit to the TV using the audio/video cable, skip this step.

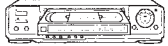

- 1  Press ON/STANDBY to turn on the unit.
- 2 Turn on your TV and select a programme position for video playback.  
Choose a channel between UHF 30 and 39 on the TV where there is no picture and no sound or only a steady rustling sound.  
This channel will now be referred to as the video channel.
- 3  Insert a tape recorded in the colour system matching your TV into the cassette compartment.  
The unit starts playing automatically if you insert a tape with its safety tab removed.
- 4  Press  PLAY on the unit.
- 5 Tune the TV until the video playback picture is clearly displayed on the TV screen.  
Refer to your TV manual for tuning instructions.  
You have now tuned your TV to the unit. From now on, whenever you want to play a tape, set the TV to the video channel.  
If the playback picture does not appear clearly, see "To obtain a clear playback picture" on page 9.


#### To obtain a clear playback picture

If the playback picture does not appear clearly in step 5 above, turn the RF CHANNEL screw on the rear panel of the unit with a screwdriver to a position where the TV clearly displays the playback picture.

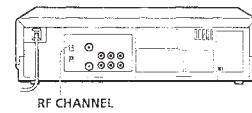


#### To select the TV system

For your TV to receive the correct signal from your unit, you must set the TV SYSTEM switch on the rear panel of the unit to either G (for system B/G) or K (for system D/K). If this switch is set to the wrong position, the sound will be distorted.

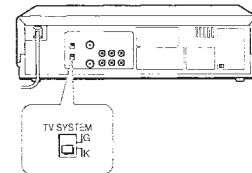


#### To obtain a clear playback picture

If the playback picture does not appear clearly in step 5 above, turn the RF CHANNEL screw on the rear panel of the unit with a screwdriver to a position where the TV clearly displays the playback picture.

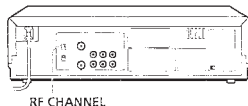

#### To select the TV system

For your TV to receive the correct signal from your unit, you must set the TV SYSTEM switch on the rear panel of the unit to either G (for system B/G) or K (for system D/K). If this switch is set to the wrong position, the sound will be distorted.

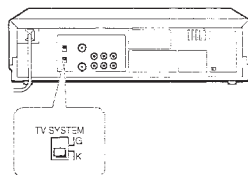

#### Additional tasks

To	Press
Stop play	■ STOP
Pause play	⏸ PAUSE
Resume play after pause	⏸ PAUSE or ▶ PLAY
Fast-forward the tape	⏩ FF (▶▶ FF on the unit) during stop
Rewind the tape	⏪ REW (◀◀ REW on the unit) during stop
Eject the tape	▲ EJECT

#### To set the colour system

If streaks appear during playback, set COLOR SYSTEM on the unit to conform to the system that the tape was recorded in. (Normally set the switch to AUTO.)

If your tape was recorded in	Set COLOR SYSTEM to
PAL	PAL/MESECAM
NTSC	NTSC
MESECAM	PAL/MESECAM

#### To play an NTSC-recorded tape


Set NTSC PB on the unit according to the colour system of your TV.

If your TV is	Set NTSC PB to
PAL	ON PAL TV
NTSC 4.43	NTSC 4.43
NTSC 3.58	NTSC 3.58

## Playing a tape (continued)

To view the tape status on the screen

Press ON SCREEN DISPLAY on the unit. The following information appears on the TV screen.

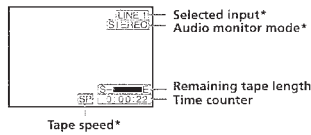

\* Appears for a few seconds when the ON SCREEN DISPLAY is pressed and when the mode is changed.


To turn the display off, press ON SCREEN DISPLAY again.

### Notes

- You can eject a tape even when the power is off. When you press **EJECT**, the unit turns on automatically. After ejecting the tape, the unit turns off again.
- When the pause mode lasts for more than approximately five minutes, the unit will automatically enter the playback mode.
- You can play back tapes recorded in the SP mode only.
- The counter resets to "0:00:00" whenever a tape is inserted.
- The counter stops counting when it comes to a portion with no recording.
- If a tape has portions recorded in both PAL and NTSC systems, the time counter reading will not be correct. This is due to the difference between the counting cycles of the two colour systems.
- Depending on your TV, the following may occur while playing an NTSC-recorded tape:
  - the picture is black and white,
  - the picture shakes,
  - no picture appears on the TV screen,
  - black streaks appear horizontally on the TV screen, and
  - the colour density increases or decreases.

## Selecting the sound during playback

Press AUDIO MONITOR to select the sound you want. Each press of the button changes the indicator in the display window. When you play a tape recorded in stereo or with a bilingual sound track, the Hi-Fi indicator in the display window lights up.

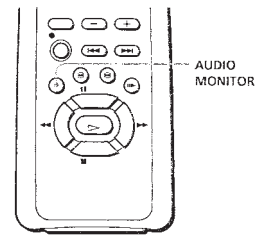


To listen to a	Bilingual tape's	Press AUDIO MONITOR until the display window indicator shows
Stereo tape's	Main and sub sounds	L/R
Left channel	Main sound	L
Right channel	Sub sound	R
Standard sound*1	Standard sound*2	No indication

\*1 Usually the mixed sound of left and right channels (monaural)

\*2 Usually the main sound (monaural)

## How sound is recorded on a video tape

The unit records sound onto two separate tracks. Hi-fi audio is recorded onto the main track along with the picture. Monaural sound is recorded onto the normal audio track along the edge of the tape.

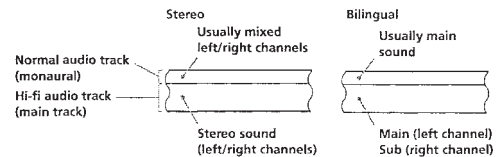

### Notes

- To listen to playback sounds in stereo, you must use the AUDIO OUT connections.
- When you play back a tape recorded in monaural, the sound is heard in monaural regardless of the AUDIO MONITOR setting.
- You cannot select the sound to listen to while recording.

## Playing a tape (continued)

### Turning on the unit and TV, and starting playback automatically (Trinitron TV Synchro Play)

You can only use this function if your TV is made by Sony (Trinitron TV).

#### How to connect to use this function

Connect the unit and TV with the audio/video cable (see "To a TV that has audio/video input jacks" on page 7.) Be sure to connect the audio/video cable to the VIDEO IN 1 jacks on the TV if the TV has two inputs or more. The TV must be placed where it will respond to the remote commander while you are pointing it at the unit.

#### Operation

Make sure that the TV's power is in standby mode.

Press TRINITRON TV SYNCHRO PLAY and hold the remote commander in place for about two seconds.


The unit and TV turn on, and the TV is set to the video channel. If there is a tape in the unit, playback starts automatically.

### Notes

- If the Trinitron TV Synchro Play function does not work properly:
  - Wait a few moments, and press the button again.
  - Replace both of the batteries in the remote commander with new ones, and press the button again.
- Note that this function may not operate some Sony TVs because of the remote commander's signal limitations.
- Do not press TRINITRON TV SYNCHRO PLAY while playing back a video tape. If you do so, the TV's input source will momentarily switch to the TV's tuner.

## Additional Operations

### Playing/searching at various speeds

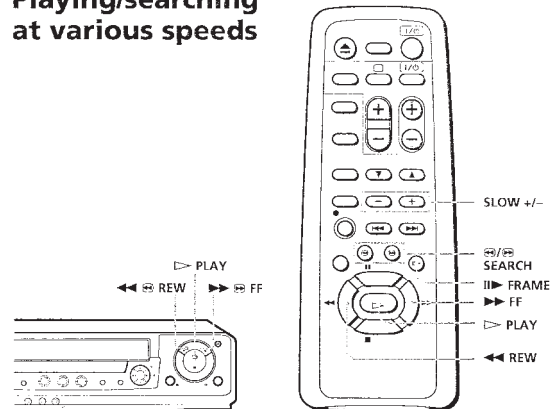

Playback options	Operation
View the picture during fast-forward or rewind	During fast-forward, hold <b>FF</b> (▶▶ FF on the unit) down. During rewind, hold <b>REW</b> (◀◀ REW on the unit) down.
Play at high speed	<ul style="list-style-type: none"> <li>During playback or pause, press <b>SEARCH</b> or <b>SEARCH</b>.</li> <li>During playback or pause, hold <b>FF</b> (▶▶ FF on the unit) or <b>REW</b> (◀◀ REW on the unit). When you release the button, normal playback resumes.</li> </ul>
Play in slow motion	During playback or pause, press <b>SLOW +/-</b> . Press the <b>SLOW +/-</b> buttons to change the speed.
Play frame by frame	During pause, press <b>FRAME</b> to advance the picture one frame. Hold the button down to play one frame each second.
Rewind and start play	During stop, hold <b>REW</b> (◀◀ REW on the unit) down and press <b>PLAY</b> (▶) on the unit.

**Playing/searching at various speeds (continued)**


To resume normal playback  
Press ▷ PLAY.

- Tips**
- You can adjust the tracking just by rotating the PICTURE CONTROL dial or pressing ▼/▲ NORMAL/SLOW/STILL ADJUST while playing a tape.
  - Adjust the picture using PICTURE CONTROL dial or ▼/▲ NORMAL/SLOW/STILL ADJUST if:
    - streaks appear while playing in slow motion
    - the picture shakes while pausing
- Notes**
- Streaks or snow cannot be eliminated completely in the various playback operations, especially in the slow motion mode.
  - The sound is muted during these operations.
  - If you press II▶ FRAME during playback, playback continues at the normal speed but the sound is muted. Press ▷ PLAY to resume normal playback.
  - On screen symbols may shake while playing or searching at various speeds.

**Karaoke sing-along**

You can sing along with a karaoke videotape played back on this unit.

You can also sing along with a TV broadcast or music played back on equipment connected to the LINE-1 IN jacks on the rear panel of the unit or LINE-2 IN jacks on the front panel of the unit. If you use an extra microphone (not supplied), you can sing duets.

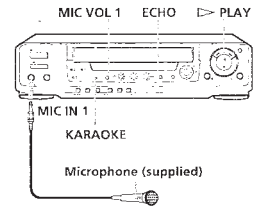

- Before you start...**
- Turn on your TV and set it to the video channel.
  - Connect the supplied microphone to the MIC IN 1 jack.
  - To sing duets, connect the optional microphone to the MIC IN 2 jack.

**Singing along with karaoke video tapes**

- Set KARAOKE to ON.
- Insert a karaoke video tape.  
The unit turns on and starts playing automatically if you insert a tape with its safety tab removed.
- Press ▷ PLAY (if playback didn't start in step 2).  
If you want to playback a specific song, see "Searching with the AMS function" on the next page.
- Set the ON/OFF switch on the microphone to ON.  
Now you can enjoy playing karaoke.

continued

**Karaoke sing-along (continued)**

**To adjust the microphone volume**

Turn the MIC VOL 1 control for the microphone connected to MIC IN 1.  
Turn the MIC VOL 2 control for the microphone connected to MIC IN 2.  
Setting the MIC VOL 1 and/or MIC VOL 2 control(s) to the centre position provides the best microphone volume.



**To control the echo effect**

Turn the ECHO control. This controls both microphones' echo effect in the same way.


To get the best effect, adjust the microphone volume to a slightly higher level than the music volume.

**Searching with the AMS function**

The AMS (Automatic Music Sensor) function is mainly for karaoke tapes. It searches for blank spaces (of at least four seconds) between recorded signals on the sound track of a tape. The unit can search up to 99 blank spaces ahead of or behind the current position.

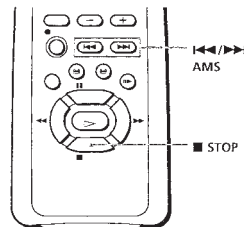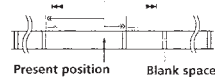

- Insert a tape into the unit.
- Press ◀▶ AMS repeatedly to specify how many blank spaces ahead or behind you want to search:
  - To search ahead, press ▶▶ AMS.
  - To search backwards, press ◀◀ AMS.

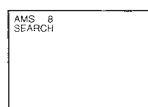

The unit starts searching, and the number of blank spaces on the TV screen counts down to zero. Playback starts automatically from that point.

**To stop searching**  
Press ■ STOP.

**Reducing the playback vocals (Karaoke Pon)**

The Karaoke Pon function lets you use ordinary vocal music sources for Karaoke. You can sing to the music while the original singer's voices are reduced by this function. Note that you need to use hi-fi stereo music sources with this function.



- Set KARAOKE to PON.  
The singer's voice will be reduced.
- To cancel Karaoke Pon**  
Set KARAOKE to ON or OFF.



- Tips**
- When you sing along with music played back on equipment connected to the LINE-1 IN or LINE-2 IN jacks on the unit, set INPUT SELECT to LINE 1 or LINE 2, play the music source and follow steps 1 and 4 on page 17.
  - If you connect your TV to the LINE-1 IN jacks, set the CONNECT LINE-1 switch on the rear of the unit to TV. (For details, see page 27)
- Notes**
- If the sound is reproduced through a stereo amplifier, turn down the volume of amplifier before operation.
  - If feedback occurs, turn down the microphone or TV volume, or move the microphone away from the speakers.
  - Karaoke Pon does not work with the following tapes:
    - tapes on which different vocal sounds are recorded on the left and right channels, such as a duet;
    - tapes recorded monaurally; or
    - tapes on which sound sources are recorded with strong echo effects and chorus effects.
  - The AMS may not work correctly when:
    - the tape quality is poor;
    - a song is very short (less than 40 seconds);
    - the interval between songs is very short (less than 6 seconds);
    - a tape has many blank spaces in a short time span such as dramas and dialogues;
    - a high level sound is recorded between songs or at the beginning of a song;
    - there are low level passages or passages without sound in a song;
    - narration is recorded at the beginning of a song;
    - fade-in or fade-out recording is made on the tape; or
    - AMS starts from the very beginning of the tape or near an interval between songs.




## Adjusting the picture (Resolution Control)

### Adjusting the tracking and sharpness


Although the unit automatically adjusts the tracking and sharpness when playing a tape, distortion or noise may occur if the tape was recorded in poor condition. If so, manually adjust the tracking or sharpness.

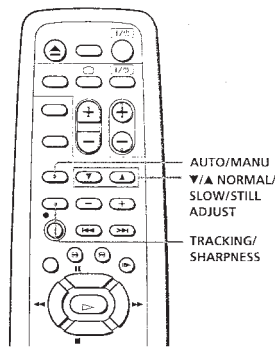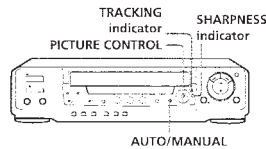

- 1 While playing a tape, press the PICTURE CONTROL dial on the unit or TRACKING/SHARPNESS on the remote commander to display the PICTURE CONTROL menu.

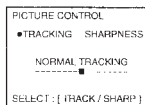

- 2 Press the PICTURE CONTROL dial on the unit or TRACKING/SHARPNESS on the remote commander to move the cursor (●) to TRACKING.  
The TRACKING indicator flashes and the SHARPNESS indicator lights up.
- 3 Rotate the PICTURE CONTROL dial to the left or right or press ▼/▲ NORMAL/SLOW/STILL ADJUST on the remote commander to reduce the distortion.
- 4 Press the PICTURE CONTROL dial on the unit or TRACKING/SHARPNESS on the remote commander to move the cursor (●) to SHARPNESS.  
The SHARPNESS indicator flashes.

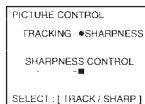

- 5 Rotate the PICTURE CONTROL dial to the left or right or press ▼/▲ NORMAL/SLOW/STILL ADJUST on the remote commander to get a clearer picture.  
Wait for several seconds until the menu disappears. The TRACKING and/or SHARPNESS indicator light(s) up to show the tracking and/or sharpness are/is manually adjusted.

#### To resume the automatic adjustment

Press AUTO/MANUAL on the unit or AUTO/MANU on the remote commander so that both of the TRACKING and SHARPNESS indicators turn off.

#### About OPC

OPC (Optimum Picture Control) automatically improves playback quality by adjusting the unit to the condition of the video heads and tape. The OPC function automatically works on all types of tapes, including rental tapes and the tapes that were not recorded with OPC.

#### Tips


- You can adjust the tracking just by rotating the PICTURE CONTROL dial or pressing ▼/▲ NORMAL/SLOW/STILL ADJUST while playing a tape.
- Adjust the picture using PICTURE CONTROL dial or ▼/▲ NORMAL/SLOW/STILL ADJUST if:
  - streaks appear while playing in slow motion
  - the picture shakes while pausing

#### Notes

- The auto tracking function works automatically when you play back a tape just after inserting it.
- Sufficient picture quality may not be obtained when playing back tapes recorded on another VCR or tapes in poor condition.
- When a tape recorded with the copyguard system is played back, intermittent distortion may appear in the upper portion of the picture. However, this is not a malfunction of the unit.

## Editing with another VCR

### How to connect to record on this unit

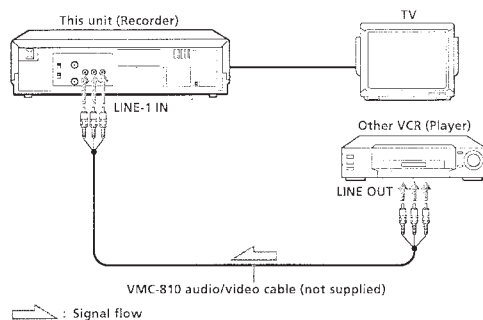

#### Tips

- If the other VCR is a monaural type and connected to the LINE-1 IN jacks on this unit, the sound is recorded only on the channel whose jack is connected to the audio plug. To record on both right and left channels, connect the audio plugs to AUDIO R/L jacks using the VMC-810MS audio/video cable (not supplied).
- You can also use the LINE-2 IN jacks on the front of the unit. If the other VCR is a monaural type, connect the audio plug to the AUDIO L (white) jack. The sound is recorded on both right and left channels. When connecting to the AUDIO R (red) jack, the sound is recorded only on the right channel.

#### Notes

- Make sure you connect the plugs to jacks of the same colour.
- If you connected this unit to both the LINE IN and LINE OUT jacks of the other VCR, select the input correctly to prevent a humming noise.
- Make sure you set the CONNECT LINE-1 switch to OTHERS.

### Operation (when recording on this unit)

You can make a copy of a tape using this unit for recording or playback. The unit cannot record TV programmes directly since it does not have a TV tuner.



#### Before you start editing

- Turn on your TV and set it to the video channel.


- 1 Set INPUT SELECT to LINE 1 or LINE 2.
- 2 Insert a source tape with its safety tab removed into the other (playback) VCR. Search for the point to start playback and set it to playback pause.
- 3 Insert a tape with its safety tab in place into this (recording) unit. Search for the point to start recording and press PAUSE.
- 4 Press REC on this unit to set it to recording pause.
- 5 To start editing, press the PAUSE buttons on both units at the same time.

#### To stop editing

Press the STOP buttons on both units.

#### To check the remaining tape length

Press ON SCREEN DISPLAY. The white bar indicates the approximate length of the tape recording.

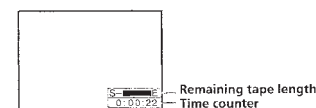

To turn the display off, press ON SCREEN DISPLAY again.

## Editing with another VCR (continued)

### To save a recording

To prevent accidental erasure, break off the safety tab as illustrated. To record on a tape again, cover the tab hole with adhesive tape.



### Tips

- To edit more precisely, press the **II PAUSE** buttons on the units to release pause.
- To cut out unwanted scenes while editing, press **II PAUSE** on this unit when an unwanted scene begins. When that scene ends, press **II PAUSE** again to resume recording.

### Note


- You can record tapes only in SP mode.

## Synchronised recording

The Synchronised Recording feature enables you to record from the connected equipment such as a satellite tuner, a cable TV decoder or a TV that has a timer function. Once you set the timer on the other equipment, the unit will start recording the programme synchronised with the timer.

### How to connect to use this function

Connect the other equipment to the LINE-1 IN or LINE-2 IN jacks of this unit.

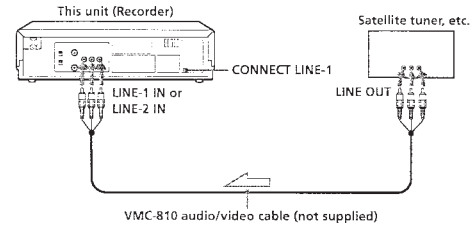

: Signal flow

### Setting the CONNECT LINE-1 switch


When you connect the other equipment to the LINE-1 IN jacks, set the CONNECT LINE-1 switch on the rear of the unit following the table below to allow better signal transmission to your TV.

If the unit is connected to	Set the CONNECT LINE-1 switch to
TV	TV
Satellite, cable TV decoder, etc.	OTHERS

continued

## Synchronised recording (continued)

### To prepare the Synchronised recording

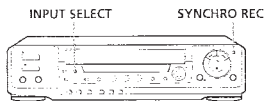

- Set the timer on the equipment to the time of the programme you want to record, then turn it off.
- Insert a tape with its safety tab in place. Make sure the tape is longer than the total recording time.
- Set INPUT SELECT to LINE 1 or LINE 2.
- Hold SYNCHRO REC down for more than two seconds. The SYNCHRO REC button lights up and the unit stands by for recording.

The unit automatically turns on and starts recording when it receives audio/video signals from the connected equipment.

### To cancel the Synchronised recording

Press SYNCHRO REC so that the button's light turns off.

### To stop recording

Press **■ STOP** while recording.

The unit automatically stops recording when the tape reaches the end or when the other equipment stops transmitting the audio/video signals.

### Notes

- Some TVs or other equipment automatically turn off in a certain time if you do not operate it after it turns on with the timer. In this case the Synchronised Recording also stops automatically.
- The Synchronised Recording starts and stops according to the signals from the connected equipment. Refer also to the instruction manual of the connected equipment for its timer function.
- You can record tapes only in SP mode.

## Additional Information

## Troubleshooting

If you have any questions or problems not covered below, please consult your nearest Sony service facility.

	Symptom	Remedy
Power	The ON/STANDBY switch does not function.	• Connect the mains lead securely.
	The power is turned on but the unit does not operate.	• Moisture condensation occurs. Turn the power off, unplug the mains lead and leave the unit to dry for over an hour.
	The unit enters standby mode or turns off automatically.	• The auto safety system is triggered to protect your tape and the unit's mechanism when there is something wrong with the tape or when the mechanism is overloaded. Press ON/STANDBY to restart the unit. If the unit does not work after pressing ON/STANDBY again, disconnect the mains lead from the mains. Wait for at least 15 seconds. Then reconnect mains, and press ON/STANDBY again. If the unit still does not work, please consult your nearest Sony service facility.
Playback	The playback picture does not appear on the TV screen.	• Make sure the TV is set to the video channel. If you are using a monitor, set it to video input.
	The picture is not clear.	• Adjust the tracking with the <b>▼/▲</b> NORMAL/SLOW/STILL ADJUST buttons.
		• Make sure the COLOR SYSTEM switch is set to the position corresponding to the colour system which the tape was recorded with.
		• The video heads are dirty (see the next page). Clean the video heads using the Sony T-25CLD, T-25CLW or E-25CLDR video head cleaning cassette. If these cleaning cassettes are not available in your area, have the heads cleaned at your nearest Sony service facility (a standard service charge will be required). Do not use a commercially available liquid type cleaning cassette, as it may damage the video heads.
		• The video heads may have to be replaced. Consult your local Sony service facility for more information.
	The picture rolls vertically during picture search.	• Adjust the vertical hold control on the TV or monitor.
	The picture has no sound.	• The tape is defective.
		• If you made A/V connections, check the audio cable connection.

continued





## Troubleshooting (continued)

Symptom	Remedy
<b>Recording</b> The tape starts playing as soon as it is inserted.	• The safety tab has been removed. To record on this tape, cover the tab hole.
The tape is ejected when you press ● REC.	• Check that the safety tab has not been removed.
Nothing happens when you press ● REC.	• Make sure the tape is not at its end. • Select the correct source with the INPUT SELECT switch, LINE 1 or LINE 2.
The microphone sound is distorted.	• The MIC VOL 1 or MIC VOL 2 control is set too high.
A tape cannot be inserted.	• Check that a tape isn't already in the tape compartment.
<b>Others</b> The remote commander does not function.	• Make sure you are pointing the remote commander at the remote sensor on the unit. • Replace all the batteries in the remote commander with new ones if they are weak.
The unit needs to be cleaned.	• Clean the cabinet, panel, and controls with a dry soft cloth, or a soft cloth slightly moistened with a mild detergent solution. Do not use any type of solvent, such as alcohol or benzene.

### Auto head cleaner

The unit incorporates an auto head cleaner which cleans the video heads when a tape is loaded or unloaded. When the heads are not sufficiently clean, even after a tape has been loaded/unloaded several times, use a video head cleaning cassette.

### Symptoms caused by contaminated video heads

Normal picture	Rough picture	Unclear picture	No picture (or black & white screen appears)
			
	initial contamination		terminal

### Sapphire tape cleaner


The unit incorporates a sapphire tape cleaner which cleans a video tape when it is loaded. This cleaner can prevent the video heads from contamination by removing dust or mold from a tape with the sapphire edge.

30 Additional Information

## Index to parts and controls

Refer to the pages indicated in parentheses ( ) for details.


### Front panel

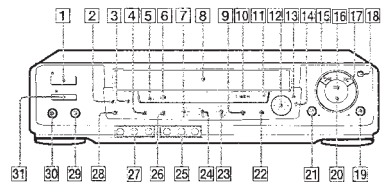

- |   |   |
|---|---|
| 1 ON/STANDBY switch/indicator (8)       | 18 SYNCHRO REC (record) button (28)                           |
| 2 COLOR SYSTEM switch (11)              | 19 ● REC (record) button (25)                                 |
| 3 INPUT SELECT switch (25)              | 20 ■ STOP button (11)   |
| 4 KARAOKE switch (17)                   | 21    PAUSE button (11)                                       |
| 5 REC (recording) indicator             | 22 AUTO/MANUAL button (23)                                    |
| 6 Tape operation indicator              | 23 FCHO control (18)  |
| 7 MIC VOL 1 control (18)                | 24 MIC VOL 2 control (18)                                     |
| 8 Tape compartment                      | 25 LINE-2 OUT VIDEO/AUDIO L/R jacks (7) (SLV-GF99KME/PS only) |
| 9 ON SCREEN DISPLAY button (12, 25)     | 26 VIRTUAL SURROUND button (20) (SLV-GF99KME/PS only)         |
| 10 HiFi/L/R indicators (13)             | 27 LINE-2 IN VIDEO/AUDIO L/R jacks (24)                       |
| 11 Remote sensor (5)                    | 28 NTSC/PB switch (11)  |
| 12 PICTURE CONTROL dial (22)            | 29 MIC IN 2 jack (18)   |
| 13 TRACKING indicator (22)              | 30 MIC IN 1 jack (18)   |
| 14 SHARPNESS indicator (22)             | 31 ▲ EJECT button (11)  |
| 15 ◀◀ REW (rewind) button (11, 15)      |   |
| 16 ▷ PLAY button (10)                   |   |
| 17 ▶▶ FF (fast-forward) button (11, 15) |   |

32 Additional Information

### Rear panel

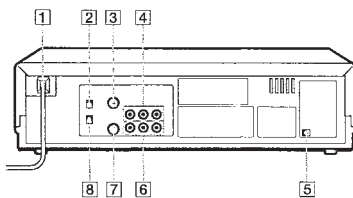


- |  |  |
|--|--|
| 1 Mains lead (6)                         | 5 CONNECT LINE-1 switch (27)           |
| 2 RF (Radio Frequency) CHANNEL screw (9) | 6 LINE-1 OUT AUDIO R/L/VIDEO jacks (7) |
| 3 AERIAL OUT connector (6)               | 7 AERIAL IN connector (6)              |
| 4 LINE-1 IN AUDIO R/L/VIDEO jacks (24)   | 8 TV SYSTEM switch (9)                 |

continued

Additional Information | 33

### Index to parts and controls (continued)

#### Remote commander

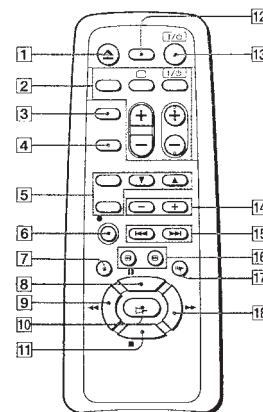

- |   |    |
|---|----|
| 1 ▲ EJECT button (11)   | 12 |
| 2 TV control buttons (Only for TV) (5)                                      | 13 |
| TV/VIDEO  |    |
| □ (TV power)  |    |
| I/O (on/standby)  |    |
| VOL (volume) +/-  |    |
| PROG (CI) +/-   |    |
| 3 TV/VIDEO button (This button doesn't work with this unit.)                | 14 |
| 4 VIRTUAL SURROUND button (This button works only for SLV-GF99KME/PS.) (20) | 15 |
| 5 PICTURE CONTROL buttons   | 16 |
| AUTO/MANU (23)  | 17 |
| TRACKING/SHARPNESS (22)   | 18 |
| ▼/▲ NORMAL/SLOW/STILL ADJUST (22)   |    |
| 6 ● REC (record) button (25)  |    |
| 7 AUDIO MONITOR button (13)   |    |
| 8    PAUSE button (11)  |    |
| 9 ◀◀ REW (rewind) button (11, 15)   |    |
| 10 ▷ PLAY button (10)   |    |
| 11 ■ STOP button (11)   |    |
| 12 TRINITRON TV SYNCHRO PLAY button (14)                                    |    |
| 13 I/O (on/standby) switch (8)  |    |
| 14 SLOW +/- buttons (15)  |    |
| 15 ◀◀/▶▶ AMS (Automatic Music Sensor) buttons (18)                          |    |
| 16 ◀◀/▶▶ SEARCH buttons (15)  |    |
| 17 ▶▶ FRAME button (15)   |    |
| 18 ▶▶ FF (fast-forward) button (11, 15)                                     |    |


34 Additional Information




**SECTION 2  
DISASSEMBLY**

**NOTE:** Follow the disassembly procedure in the numerical order given.


**2-1. UPPER CASE, PANEL BLOCK ASSEMBLY**

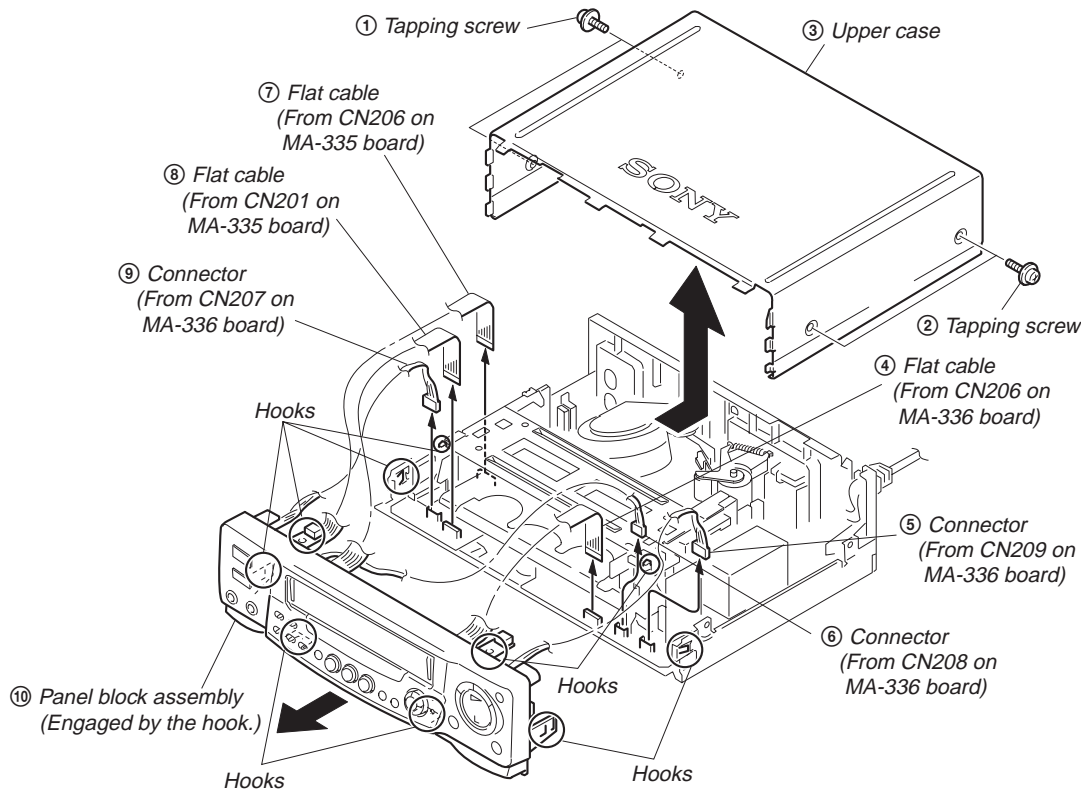


**2-2. FR-140, 141, 142, JK-166, MJ-91 BOARDS**

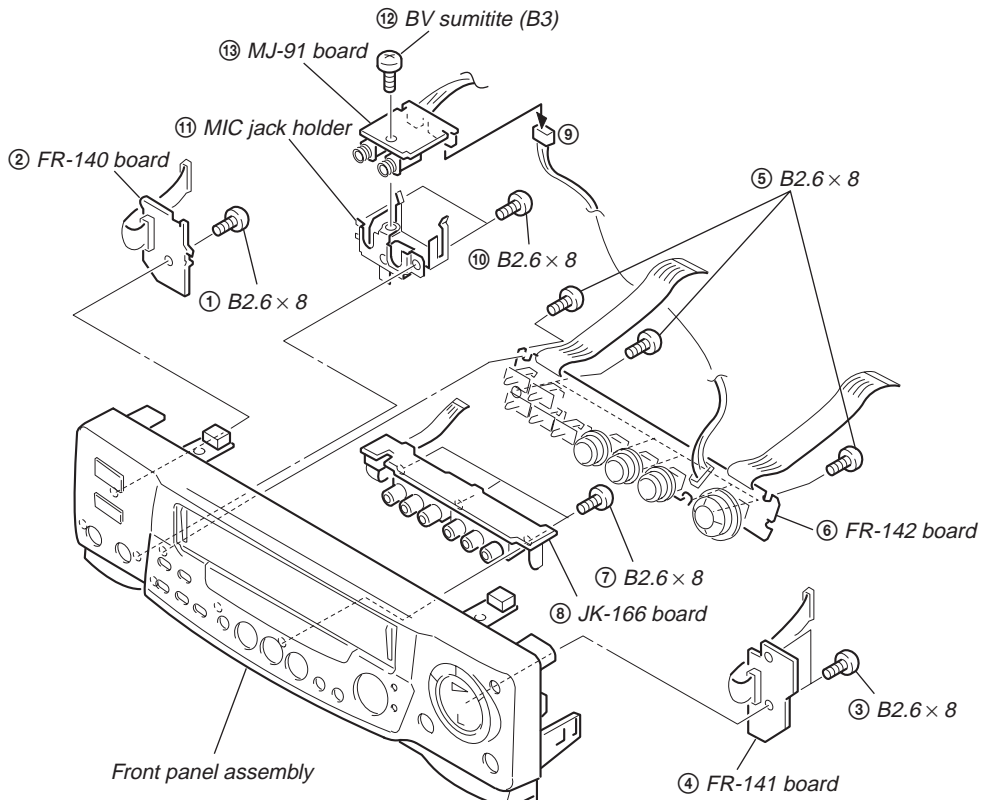


## 2-3. REAR PANEL

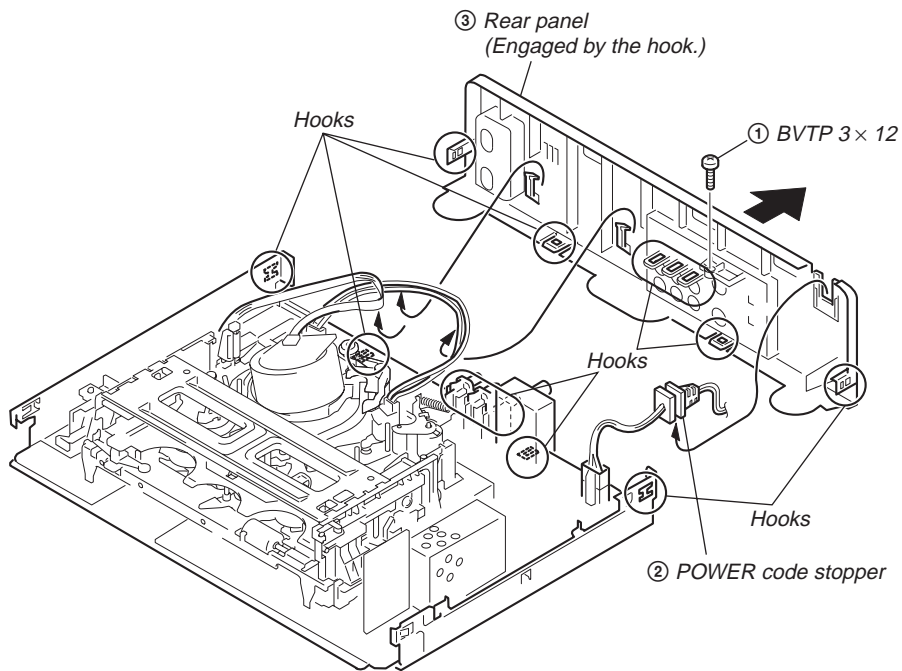

## 2-4. MA-336 BOARD

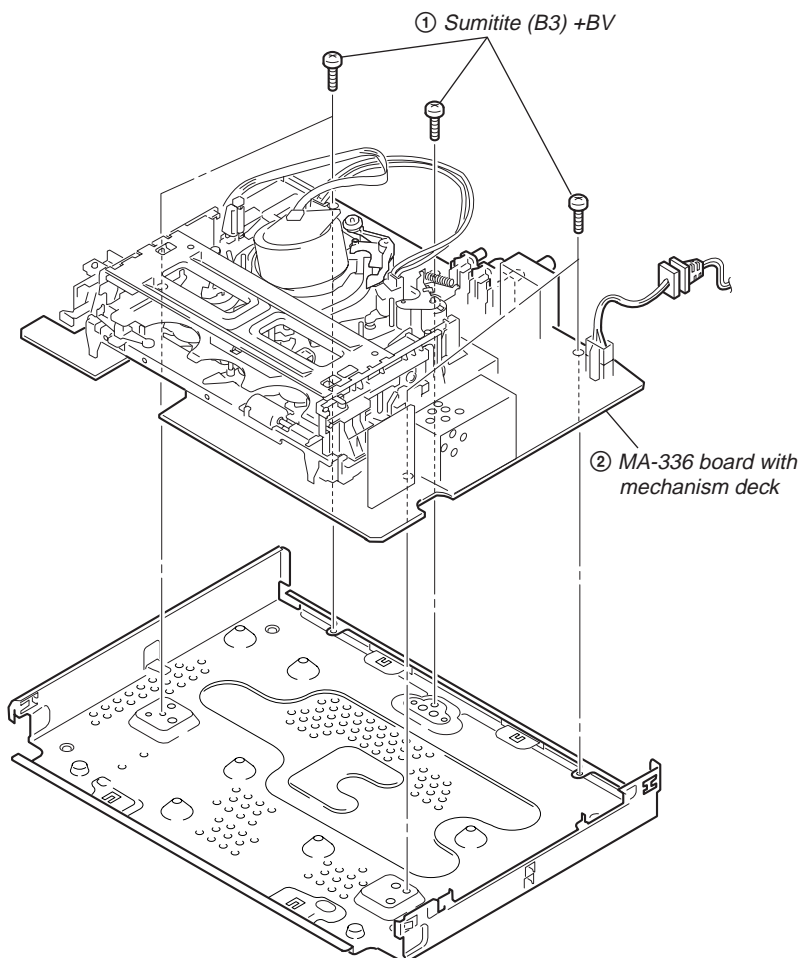


## 2-5. MECHANISM DECK

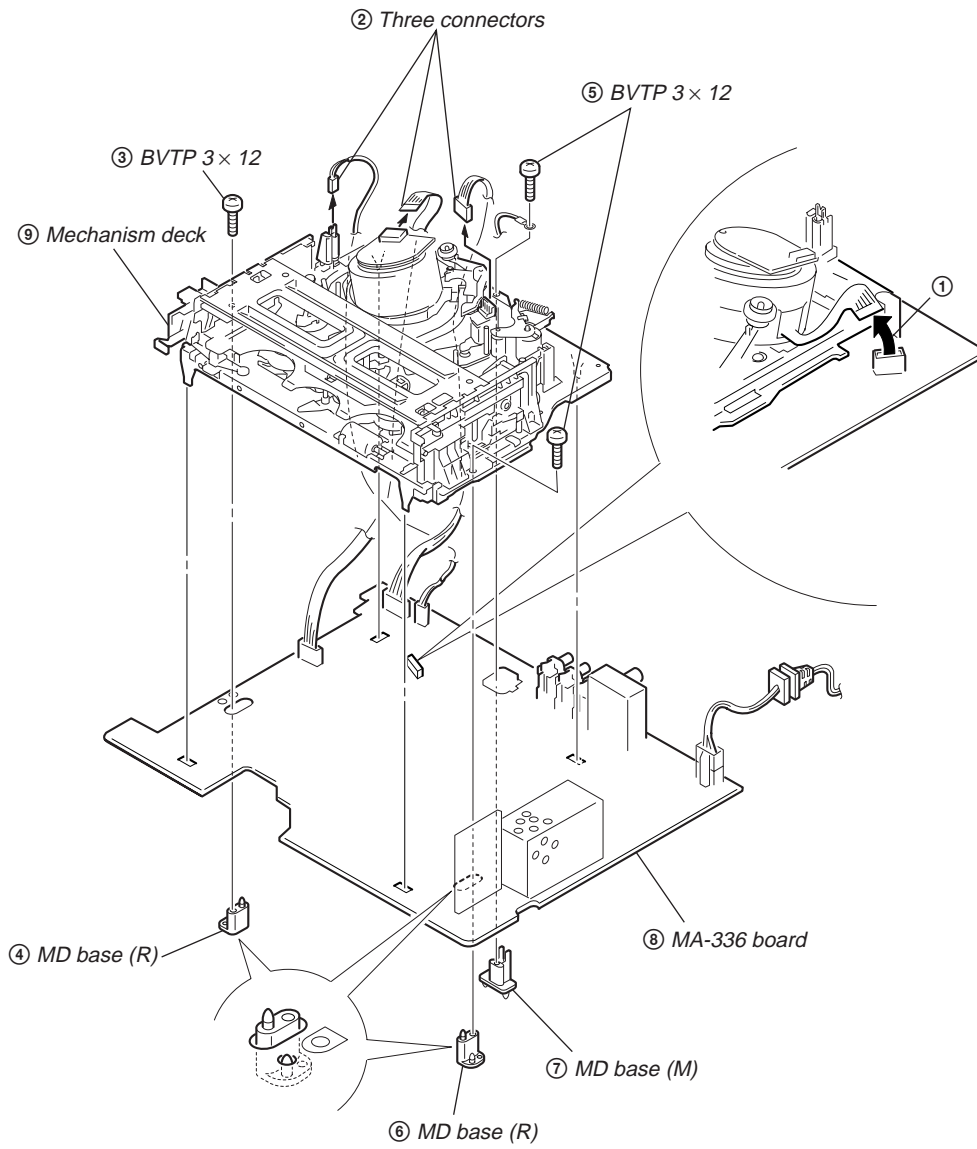


## 2-6. INTERNAL VIEWS

— Top View —

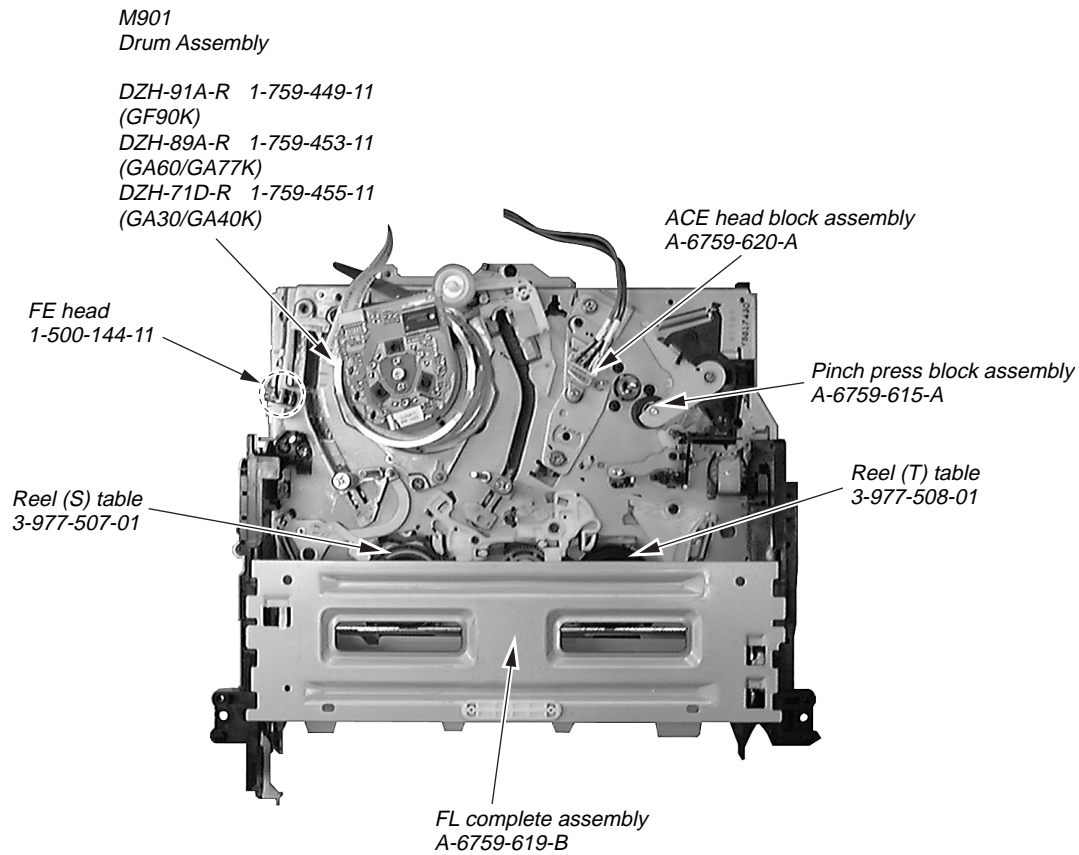


— Bottom View —

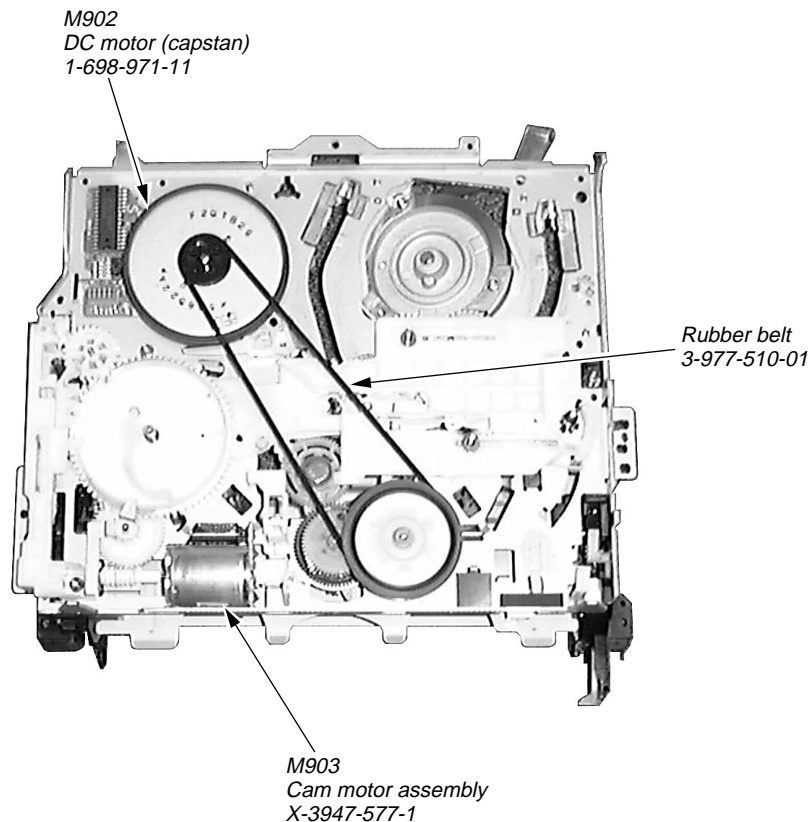




## 2-7. CIRCUIT BOARDS LOCATION

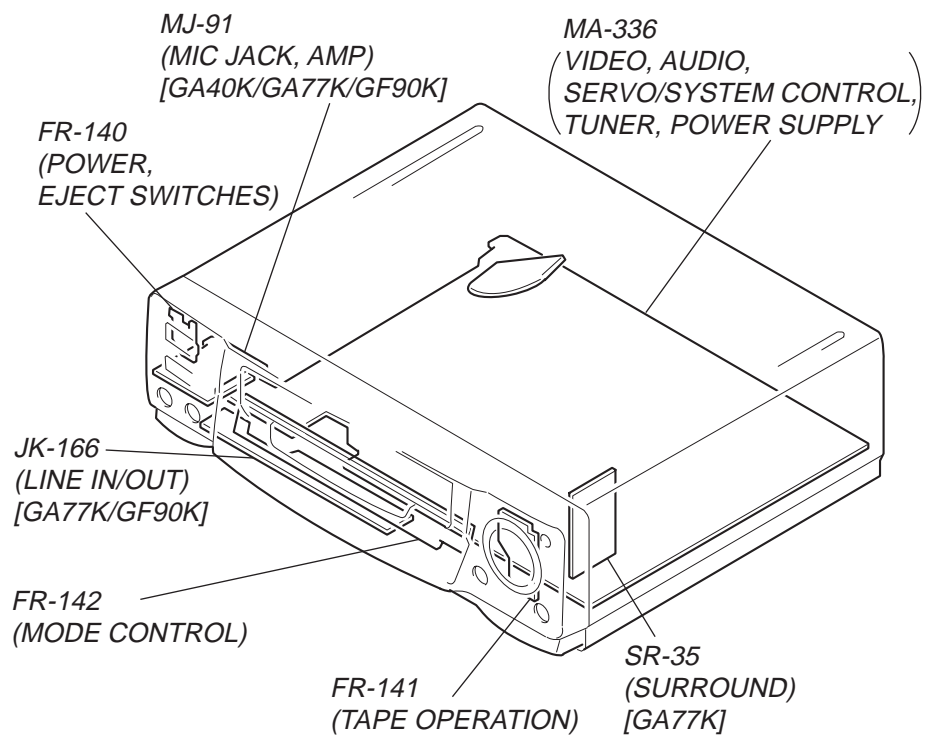




SECTION 3  
BLOCK DIAGRAMS

3-1. OVERALL BLOCK DIAGRAM

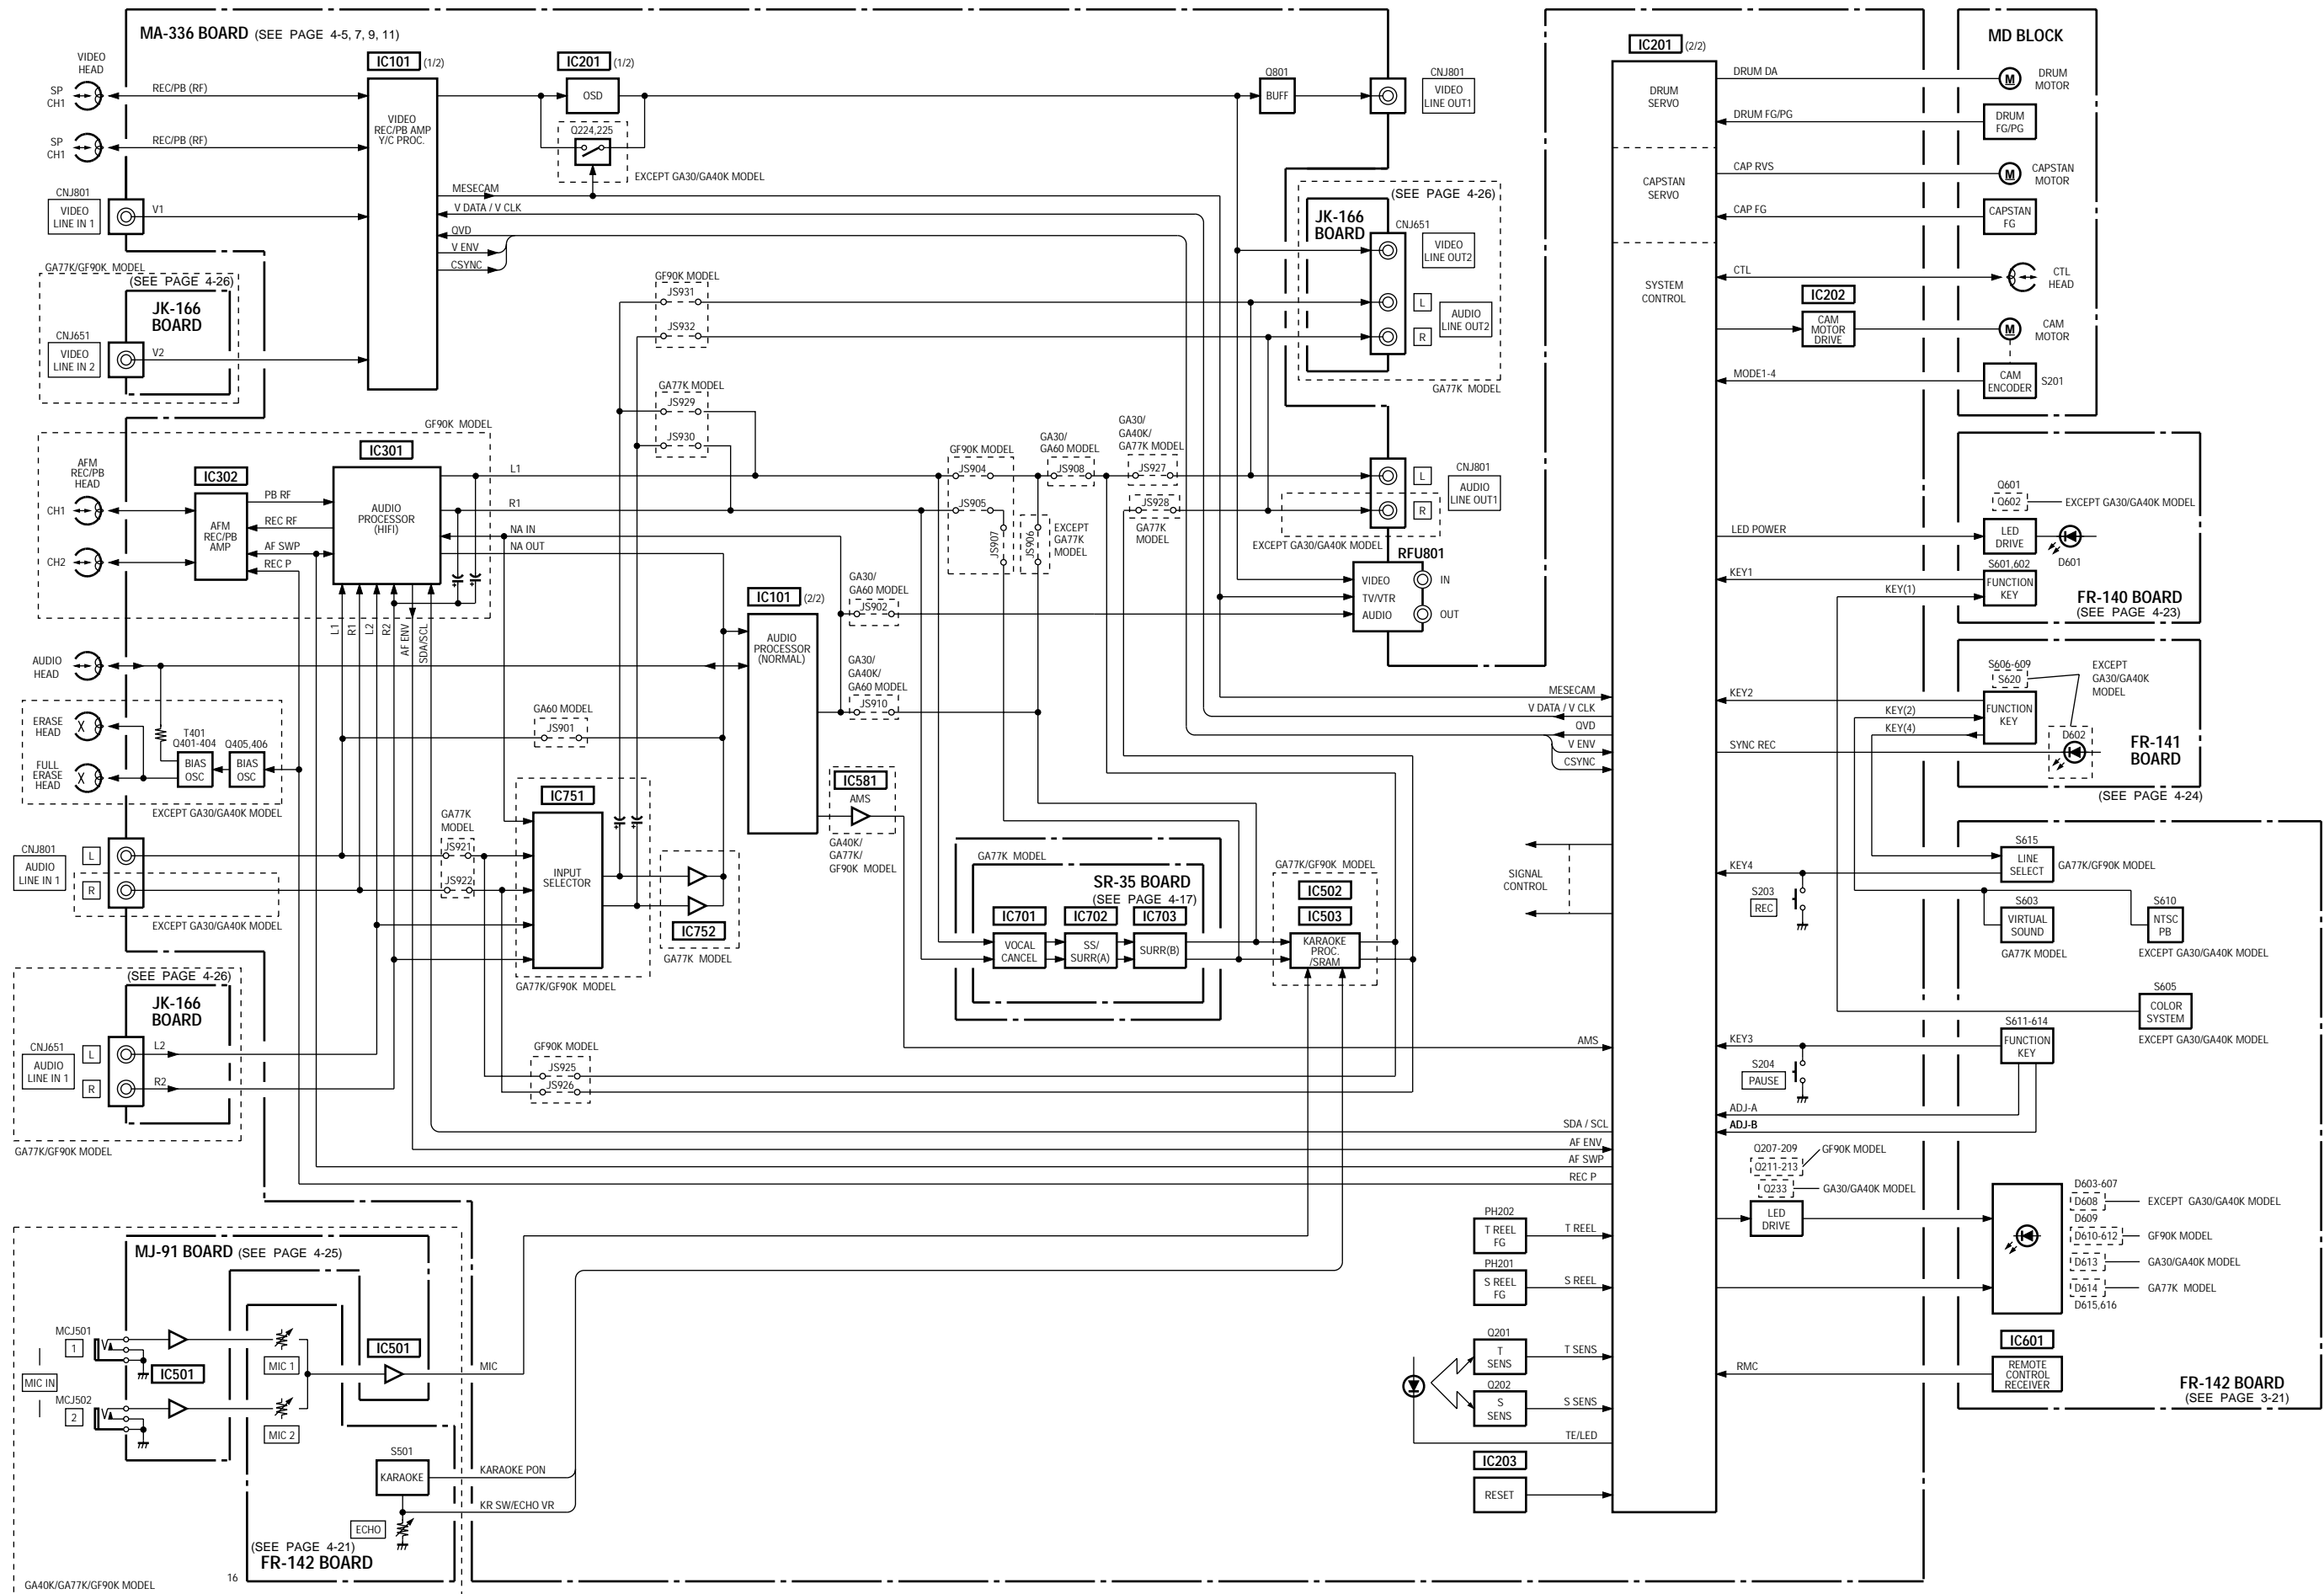





3-3. SERVO/SYSTEM CONTROL BLOCK DIAGRAM

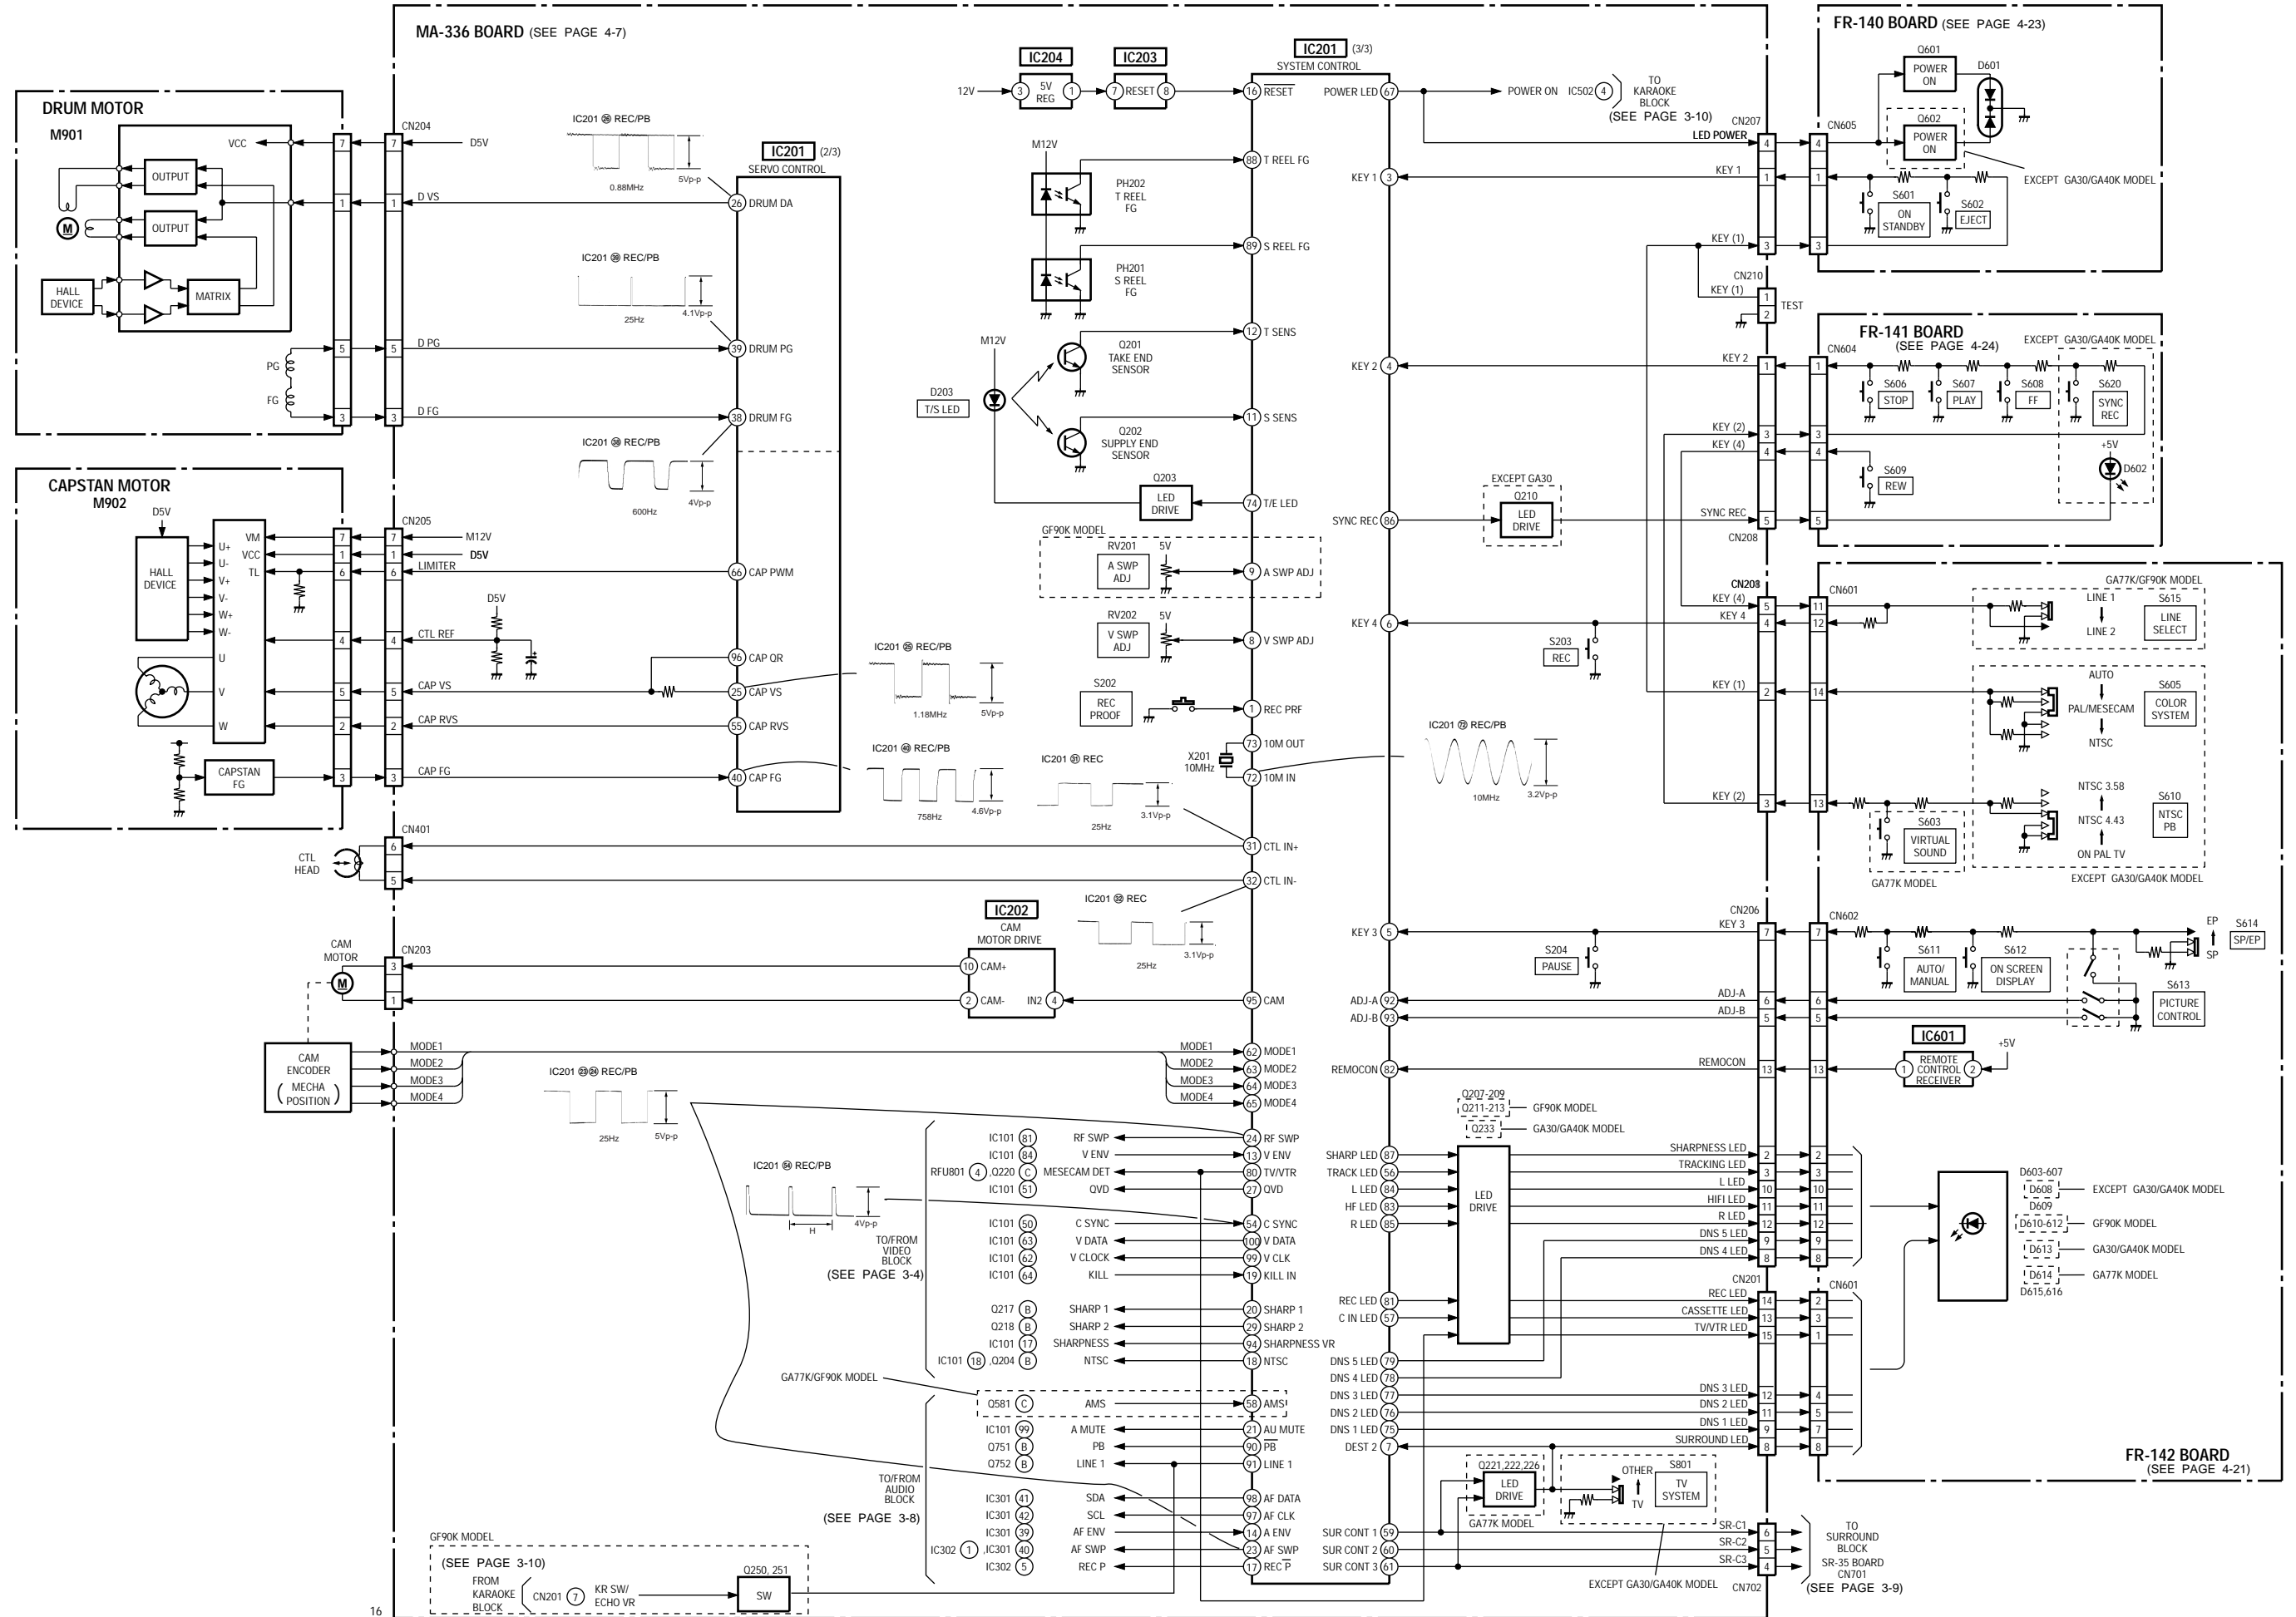


3-4. AUDIO BLOCK DIAGRAM

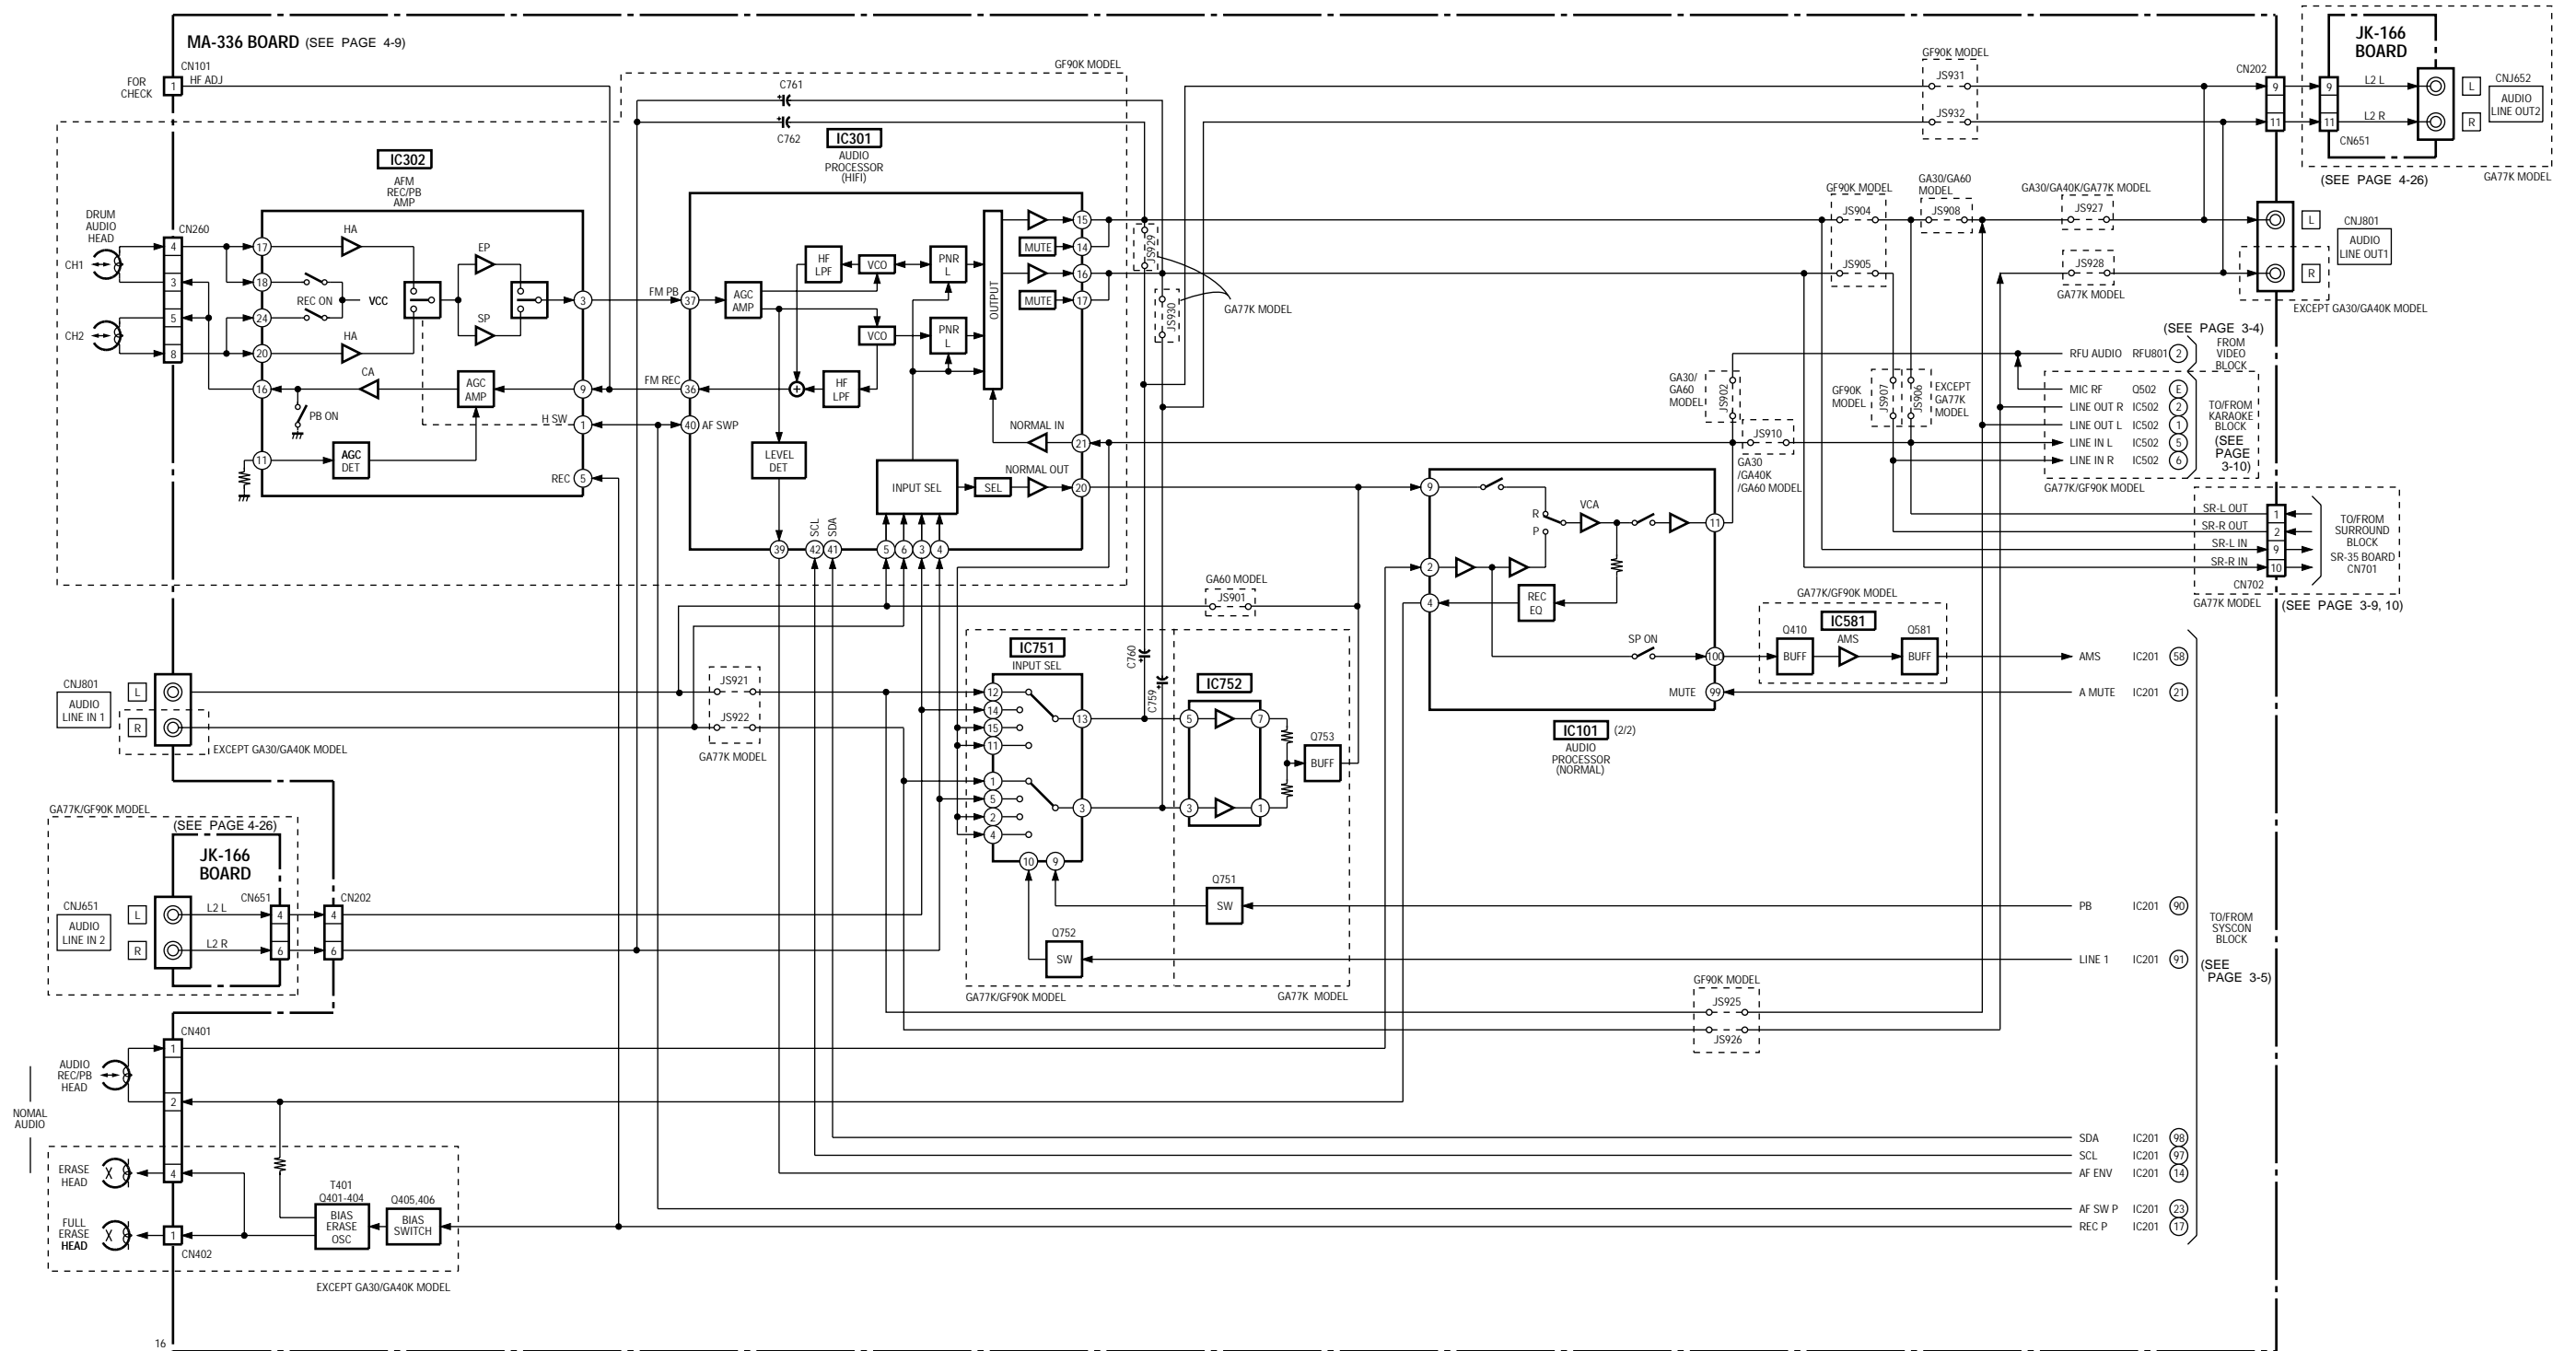

3-5. KARAOKE BLOCK DIAGRAM

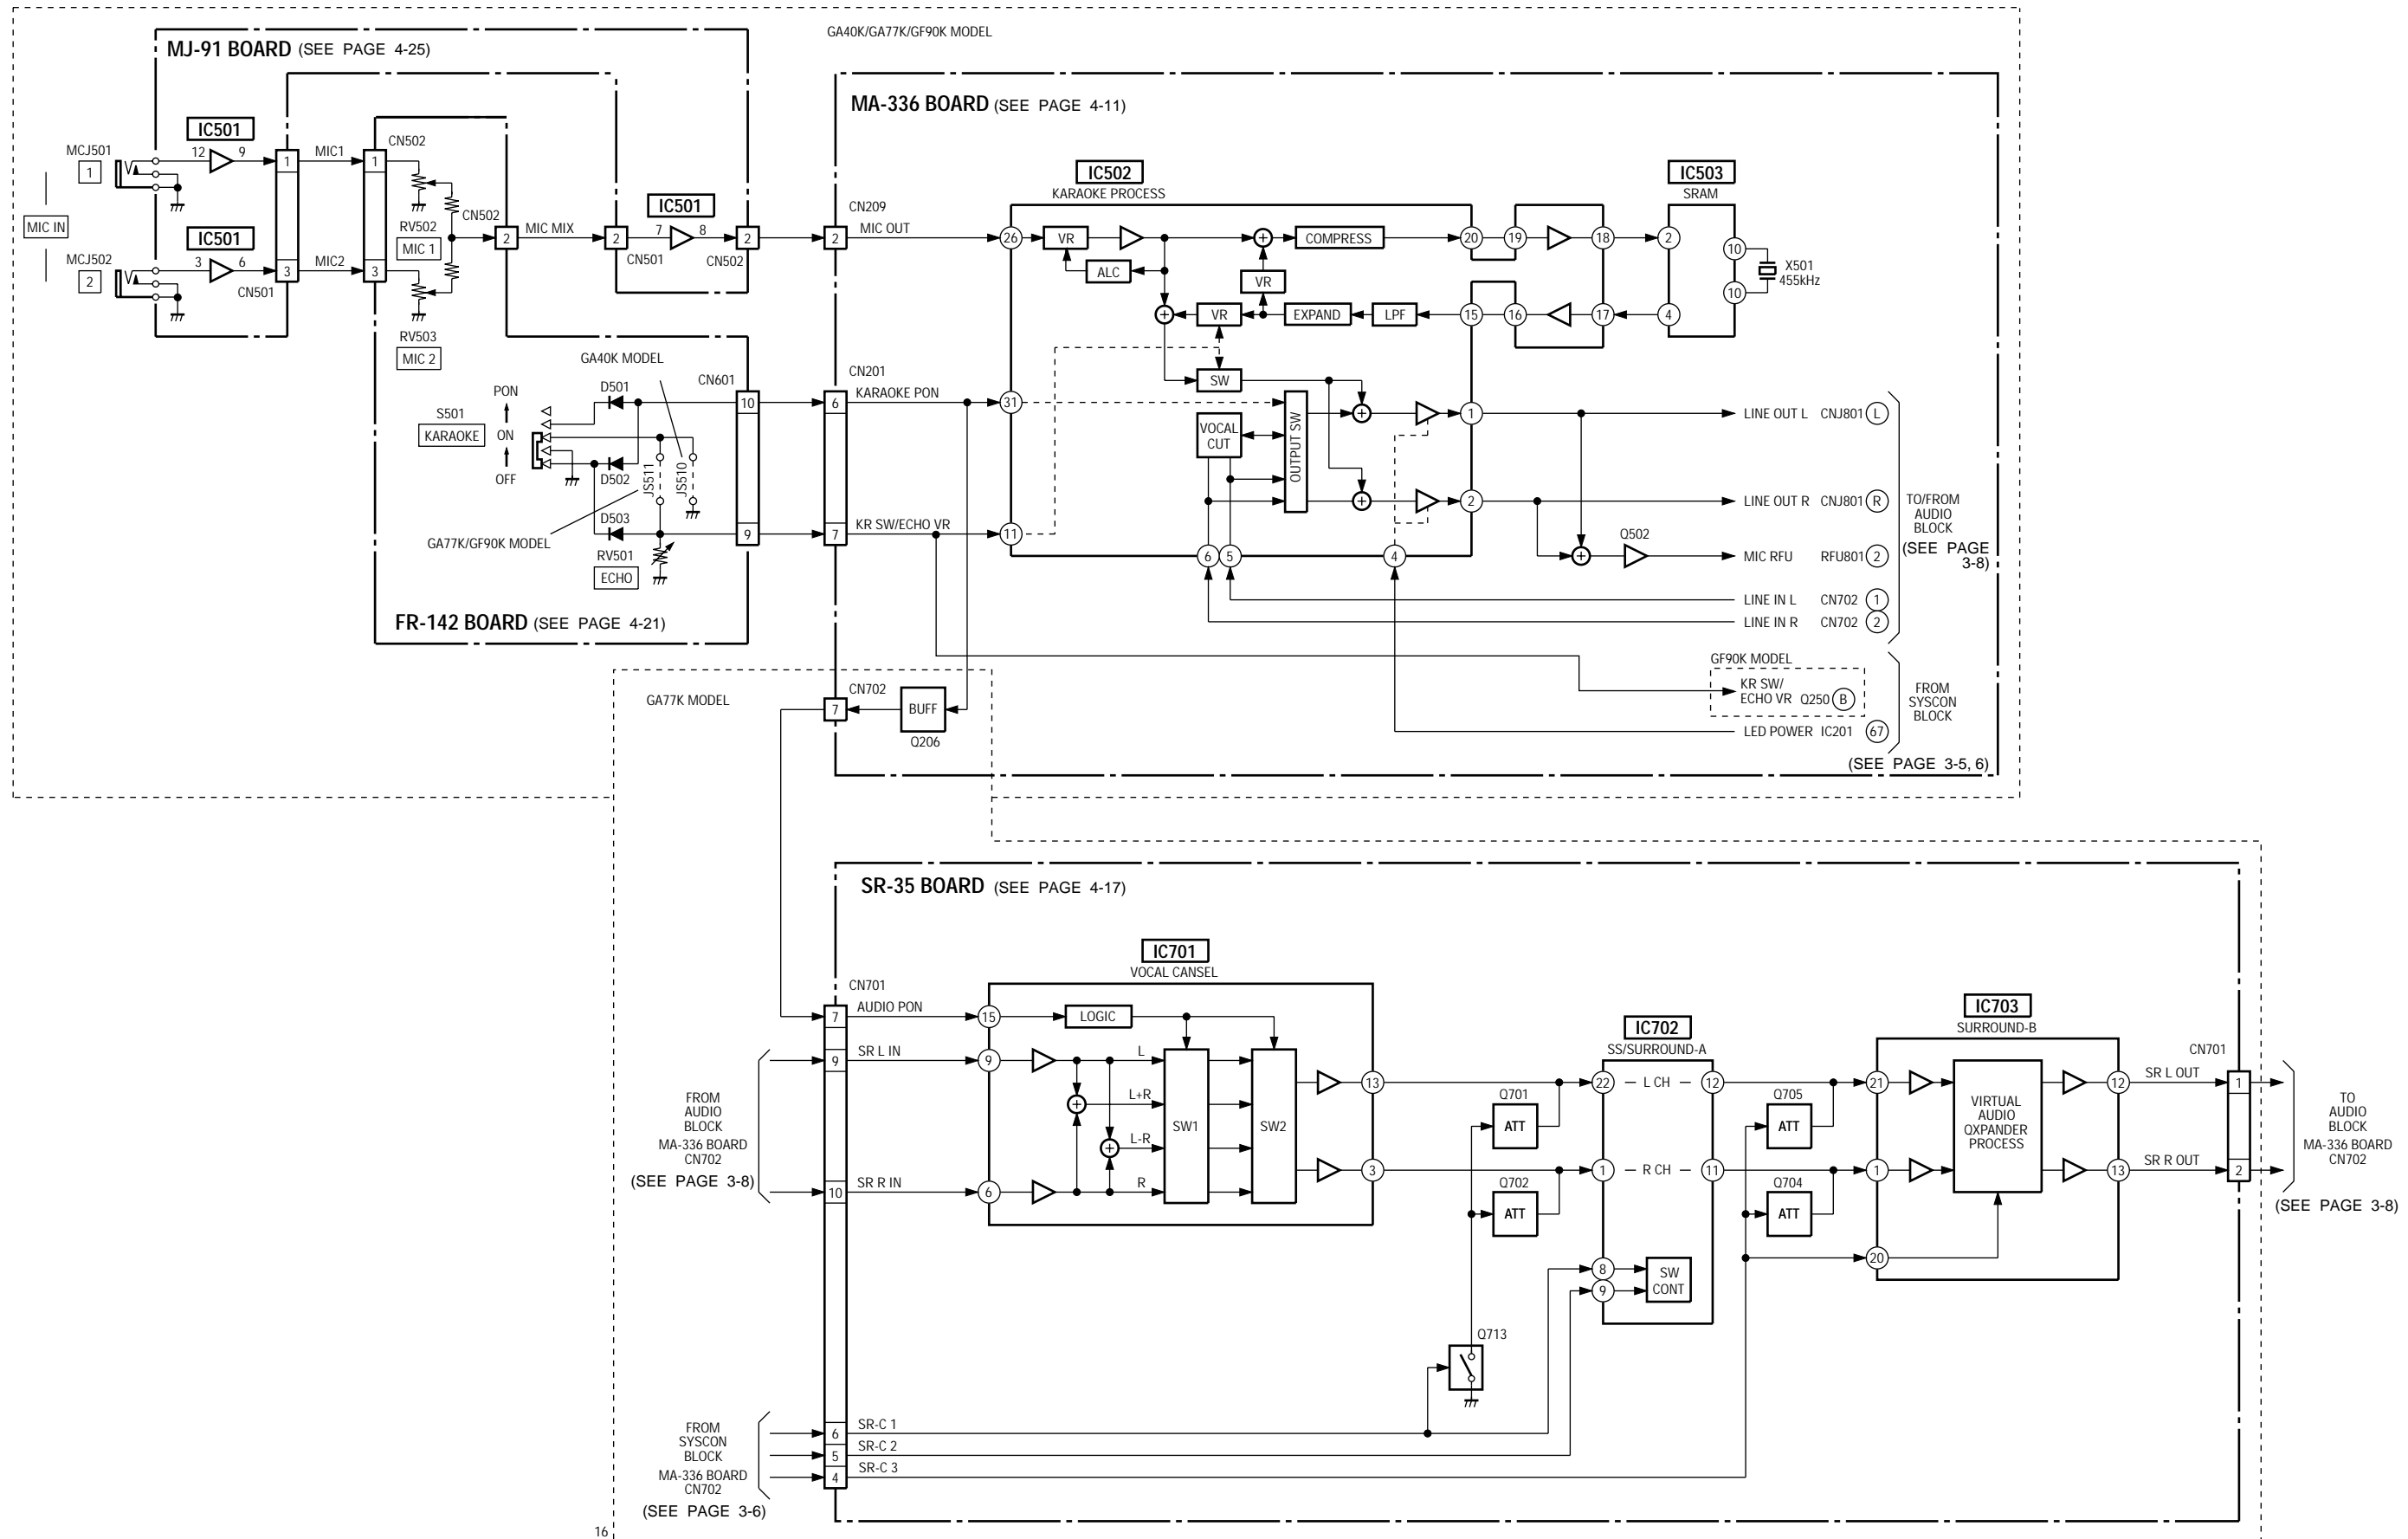

3-6. POWER SUPPLY BLOCK DIAGRAM

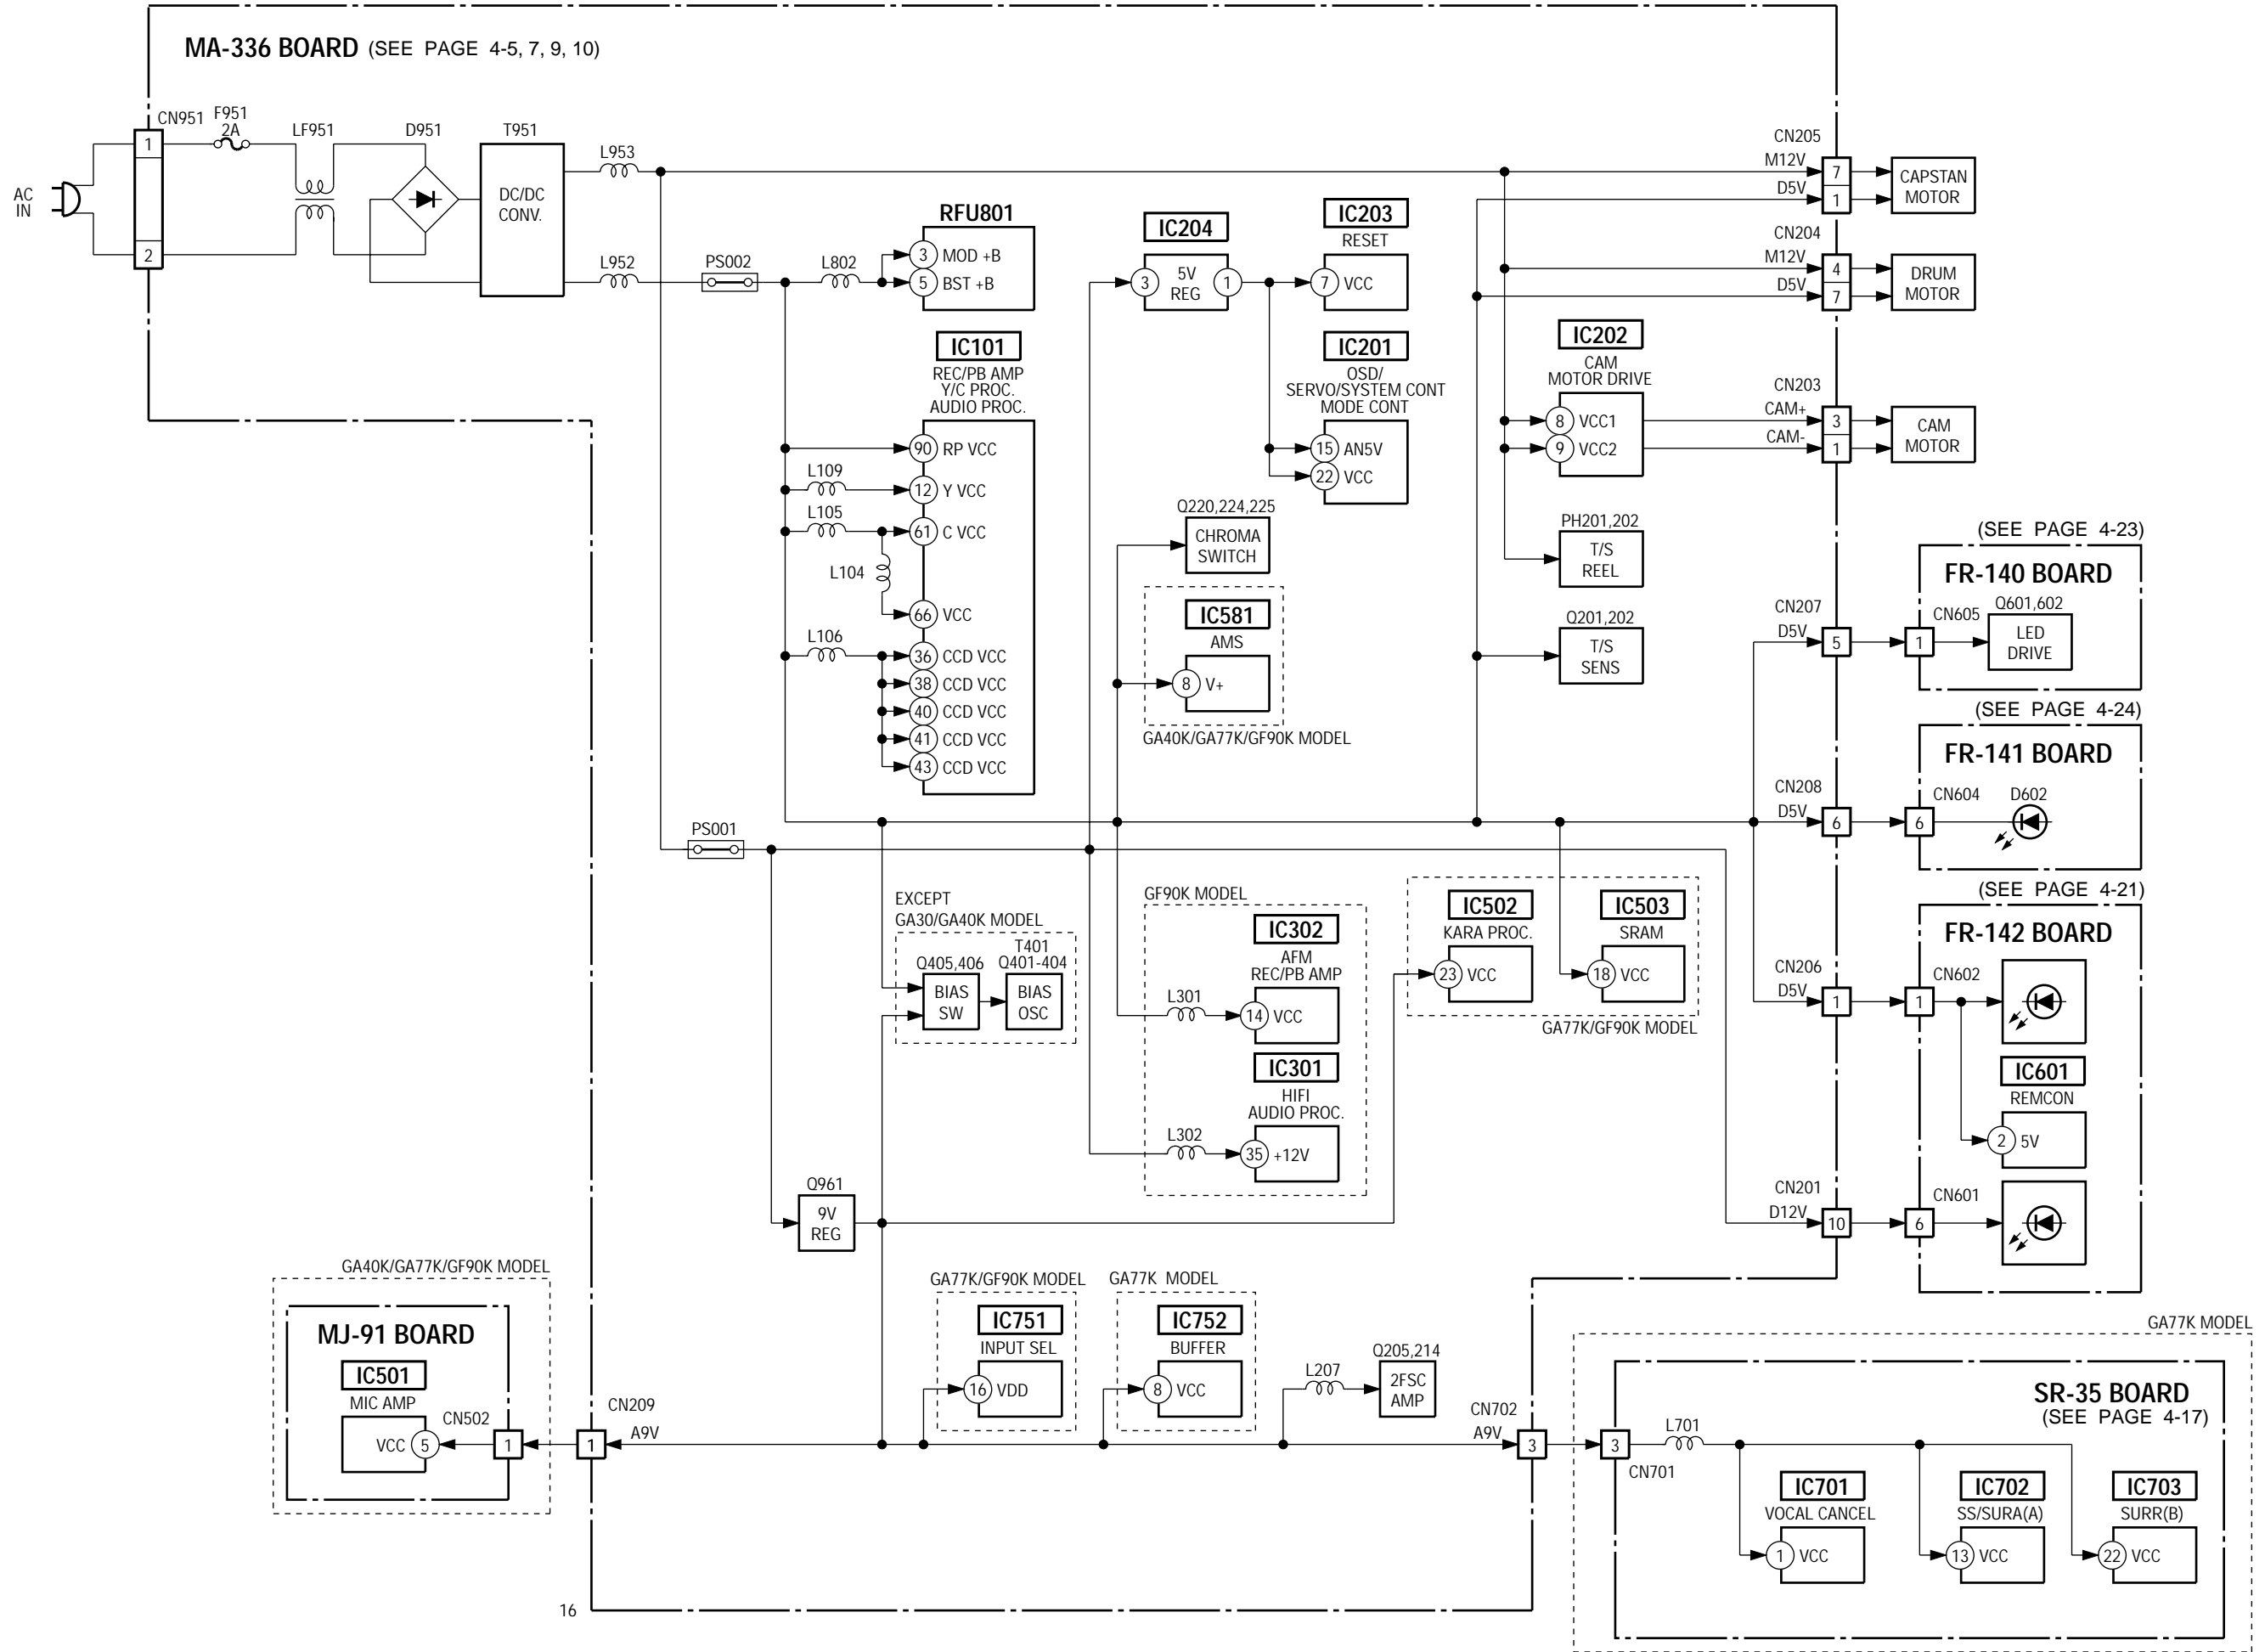




## SECTION 4 PRINTED WIRING BOARDS AND SCHEMATIC DIAGRAMS

**THIS NOTE IS COMMON FOR PRINTED WIRING BOARDS AND SCHEMATIC DIAGRAMS. (In addition to this, the necessary note is printed in each block.)**

**• For Printed Wiring Boards.**





- : Pattern from the side which enables seeing.

**Caution :**

Pattern face side: Parts on the pattern face side (Conductor Side) seen from the pattern face are indicated.


Pattern face side: parts on the parts face side seen (Component Side) from the parts face are indicated.

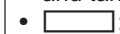**• For Schematic Diagrams.**


- Caution when replacing chip parts.  
New parts must be attached after removal of chip.  
Be careful not to heat the minus side of tantalum capacitor, because it is damaged by the heat.
- All resistor are in ohms, 1/4 W unless otherwise noted.  
Chip resistor are 1/10 W unless otherwise noted.  
k $\Omega$ : 1000  $\Omega$ , M  $\Omega$ , : 1000 k $\Omega$ .
- All capacitors are in  $\mu$ F unless otherwise noted. pF :  $\mu$   $\mu$ F. 50 V or less are not indicated except for electrolytics and tantalums.
- : panel designation.
- : internal component.
- : B+ Line.
- : B- Line.
- Circled numbers refer to waveforms.
- Readings are taken with a PAL color-bar signal input.
- Voltage are dc between ground and measurement points.
- Readings are taken with a digital multimeter (DC10M $\Omega$ ).
- Voltage variations may be noted due to normal production tolerances.

When indicating parts by reference number, please include the board name.

**MA-336 BOARD (VIDEO BLOCK)**

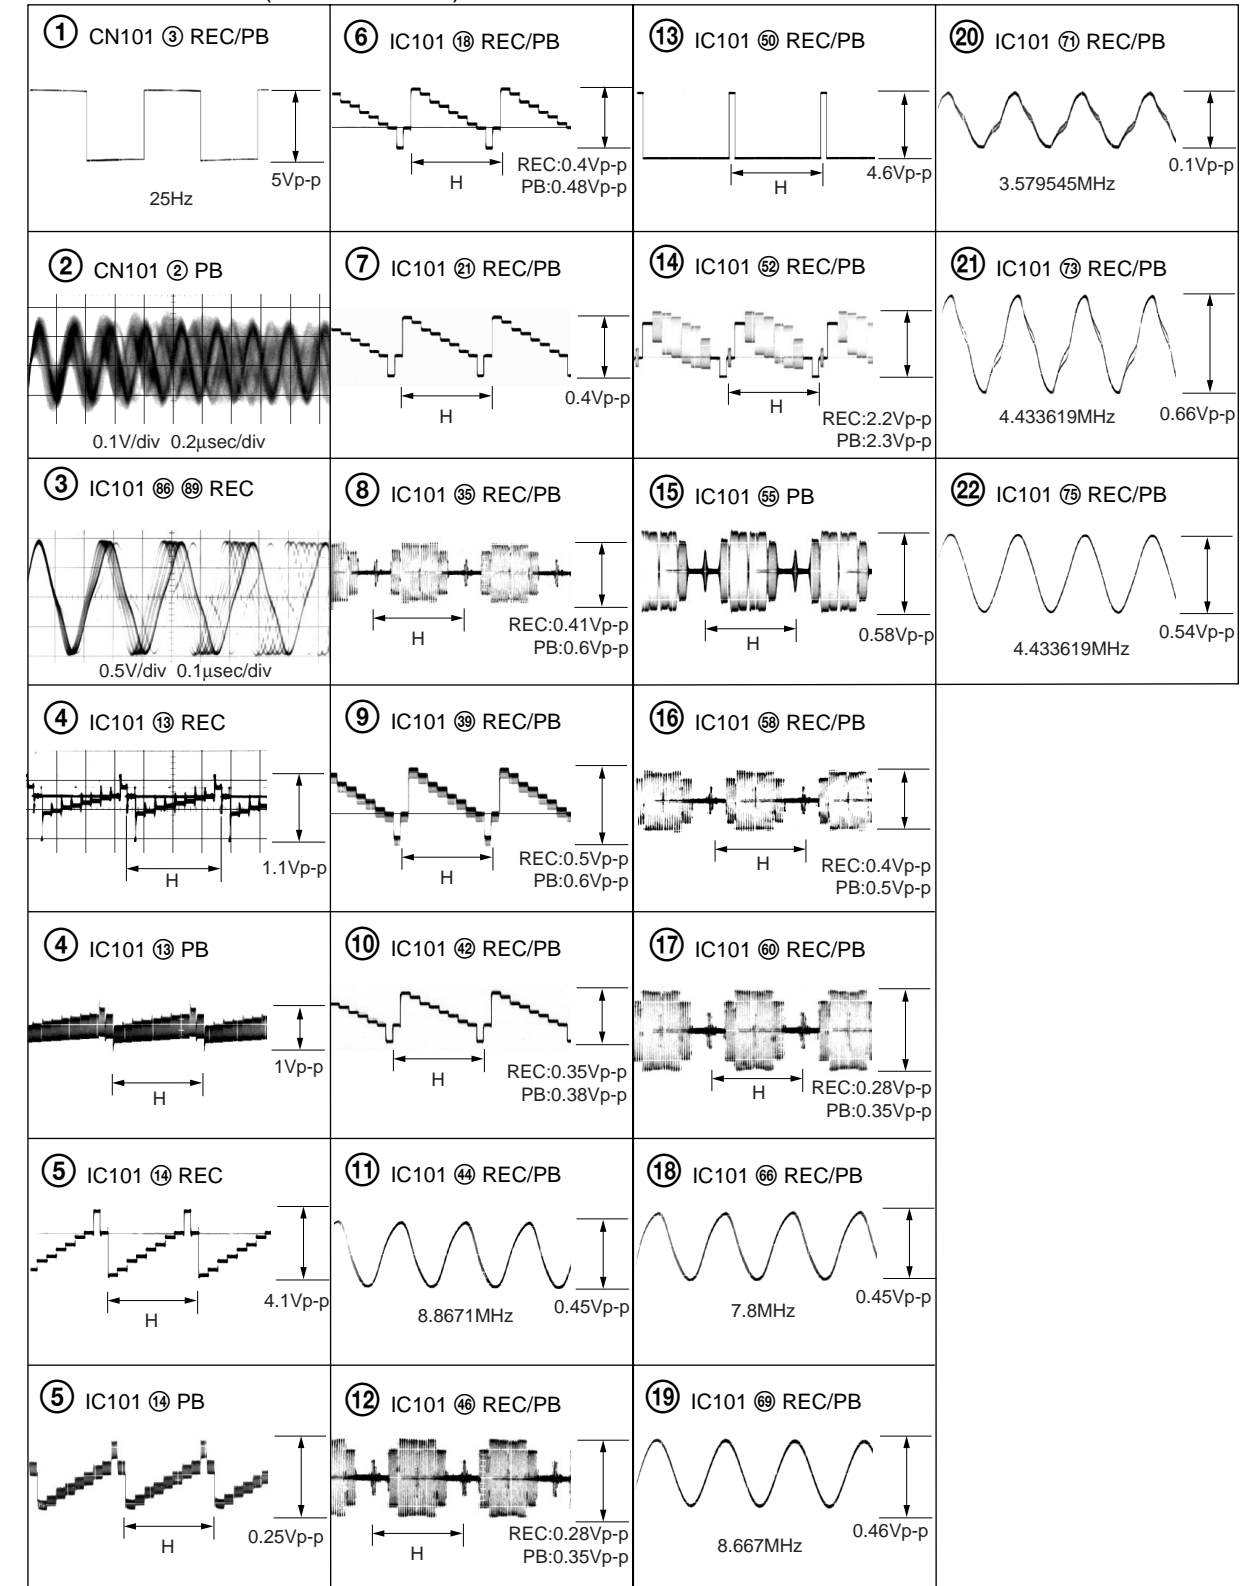


4-1. FRAME SCHEMATIC DIAGRAM

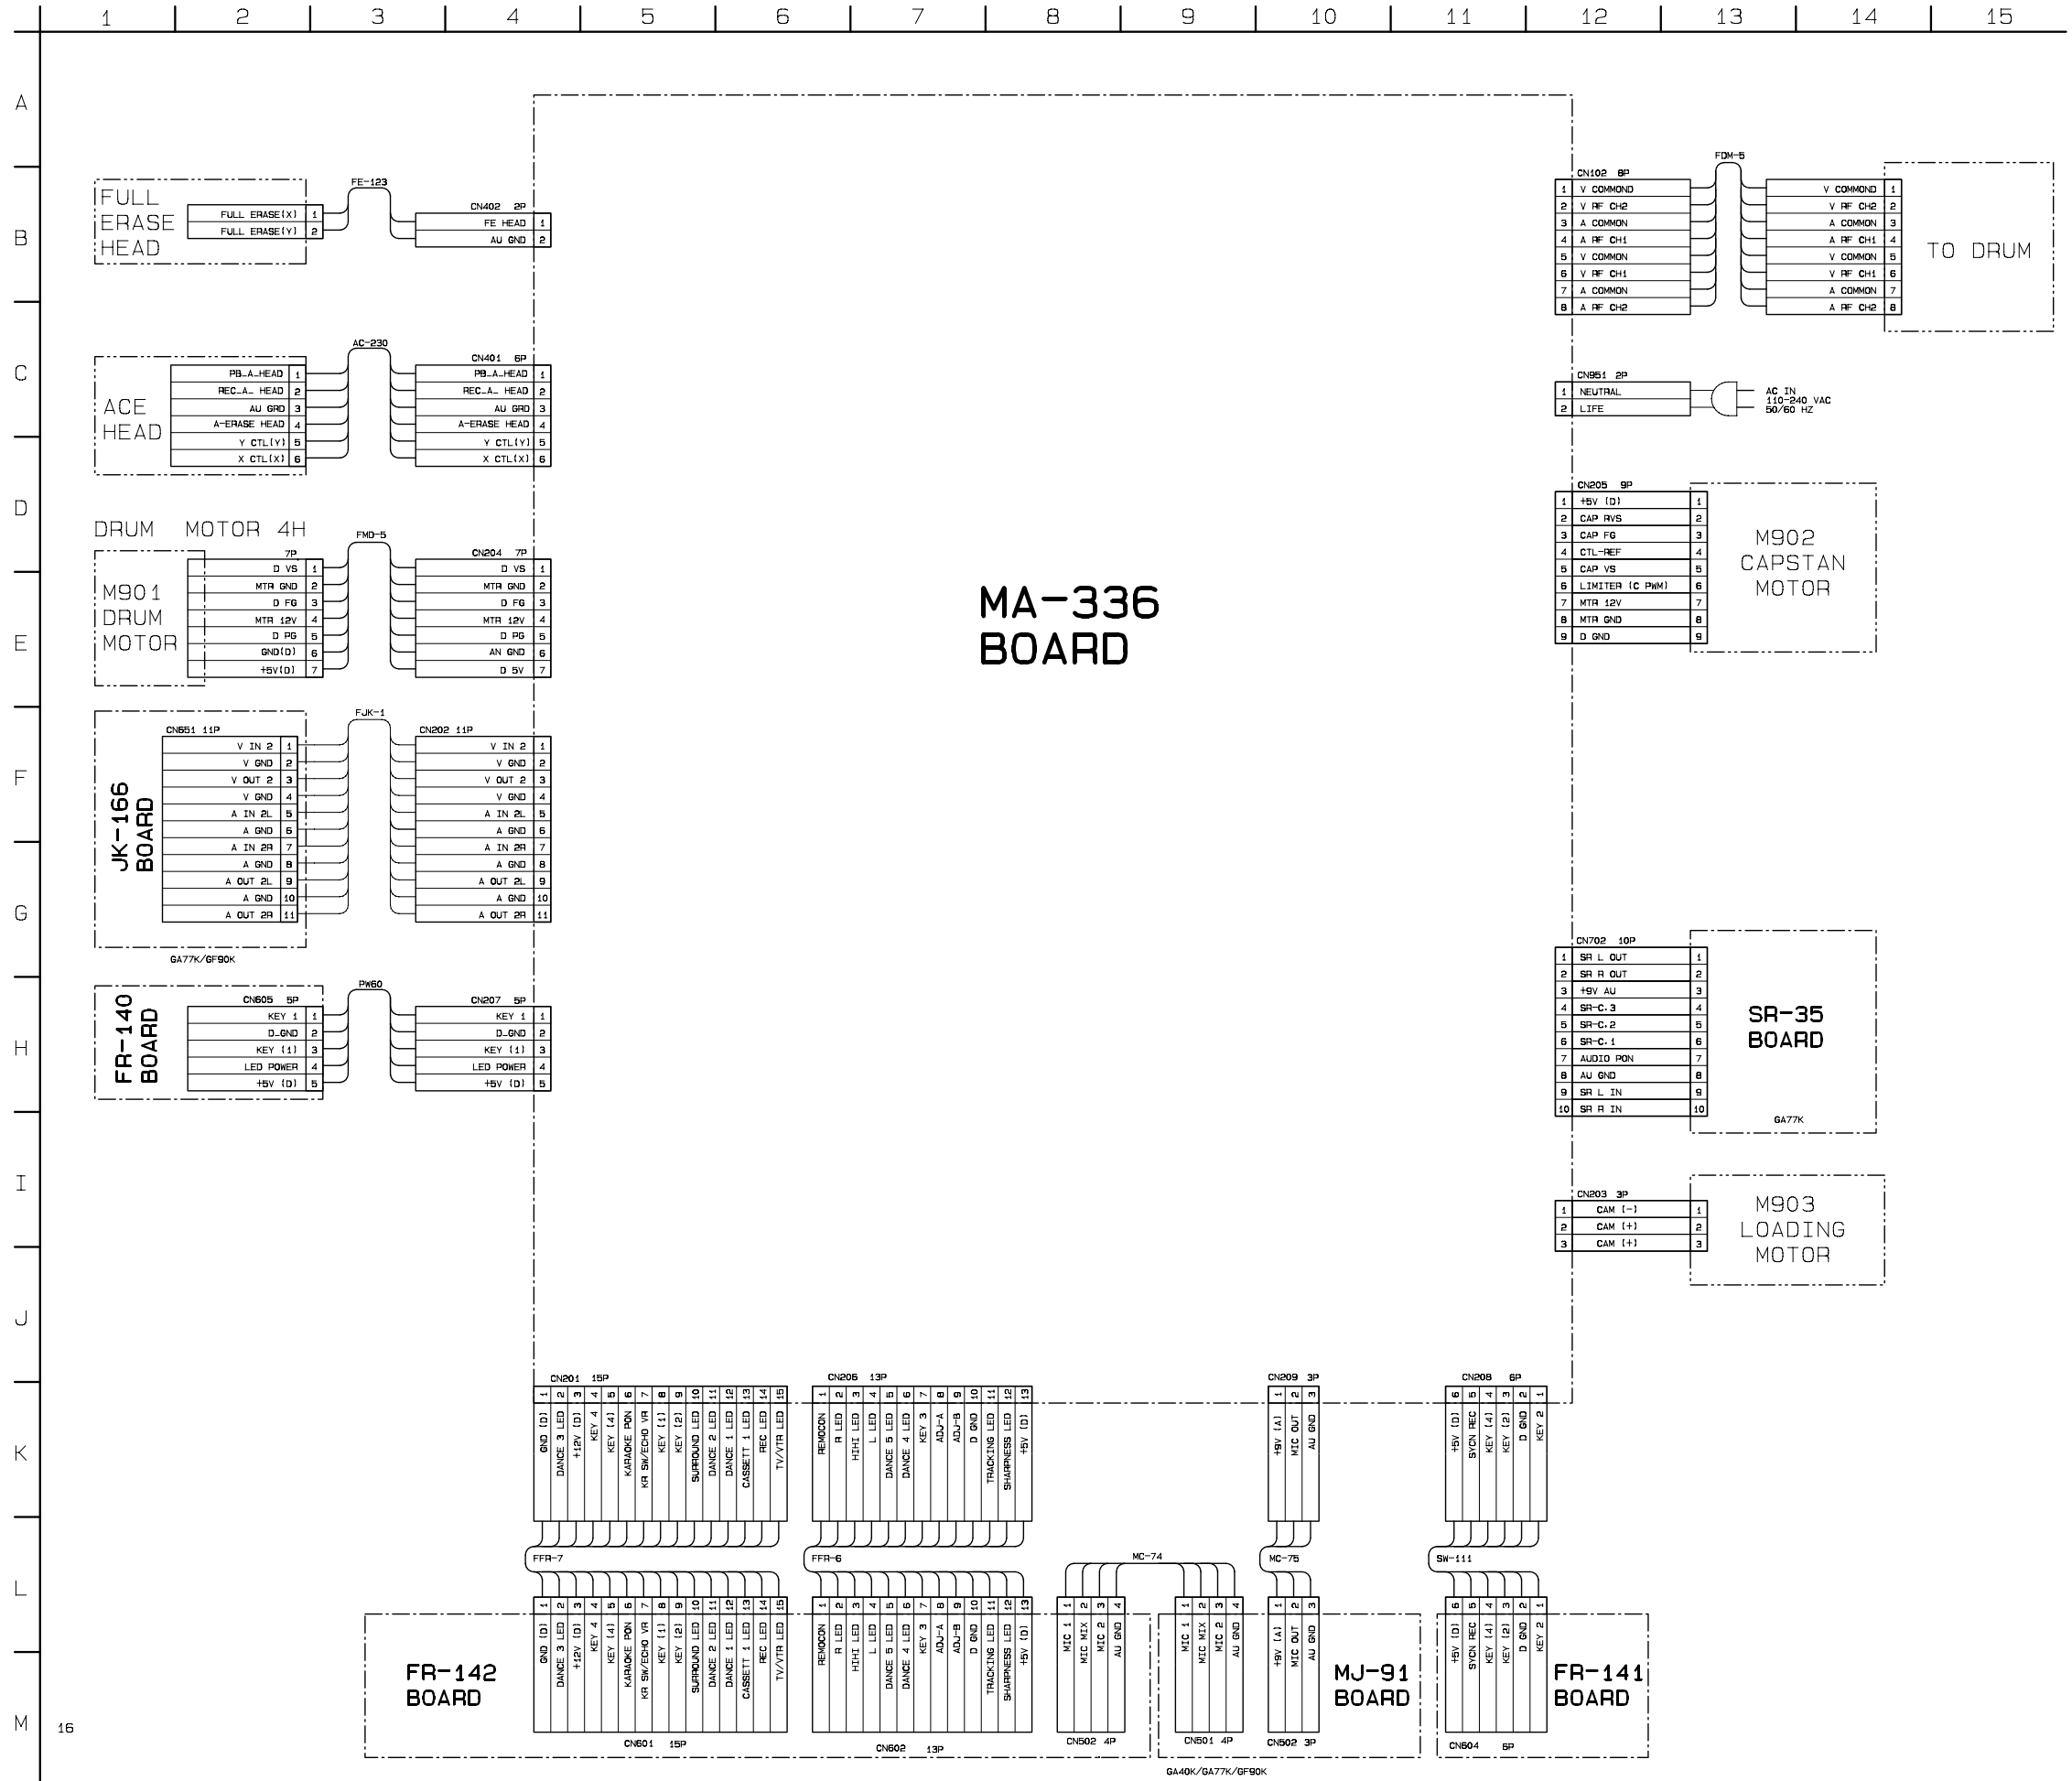

4-2. PRINTED WIRING BOARDS AND SCHEMATIC DIAGRAMS

- For schematic diagram  
 • Refer to page 4-13 for printed wiring board.  
 • Refer to page 4-2 for waveforms.

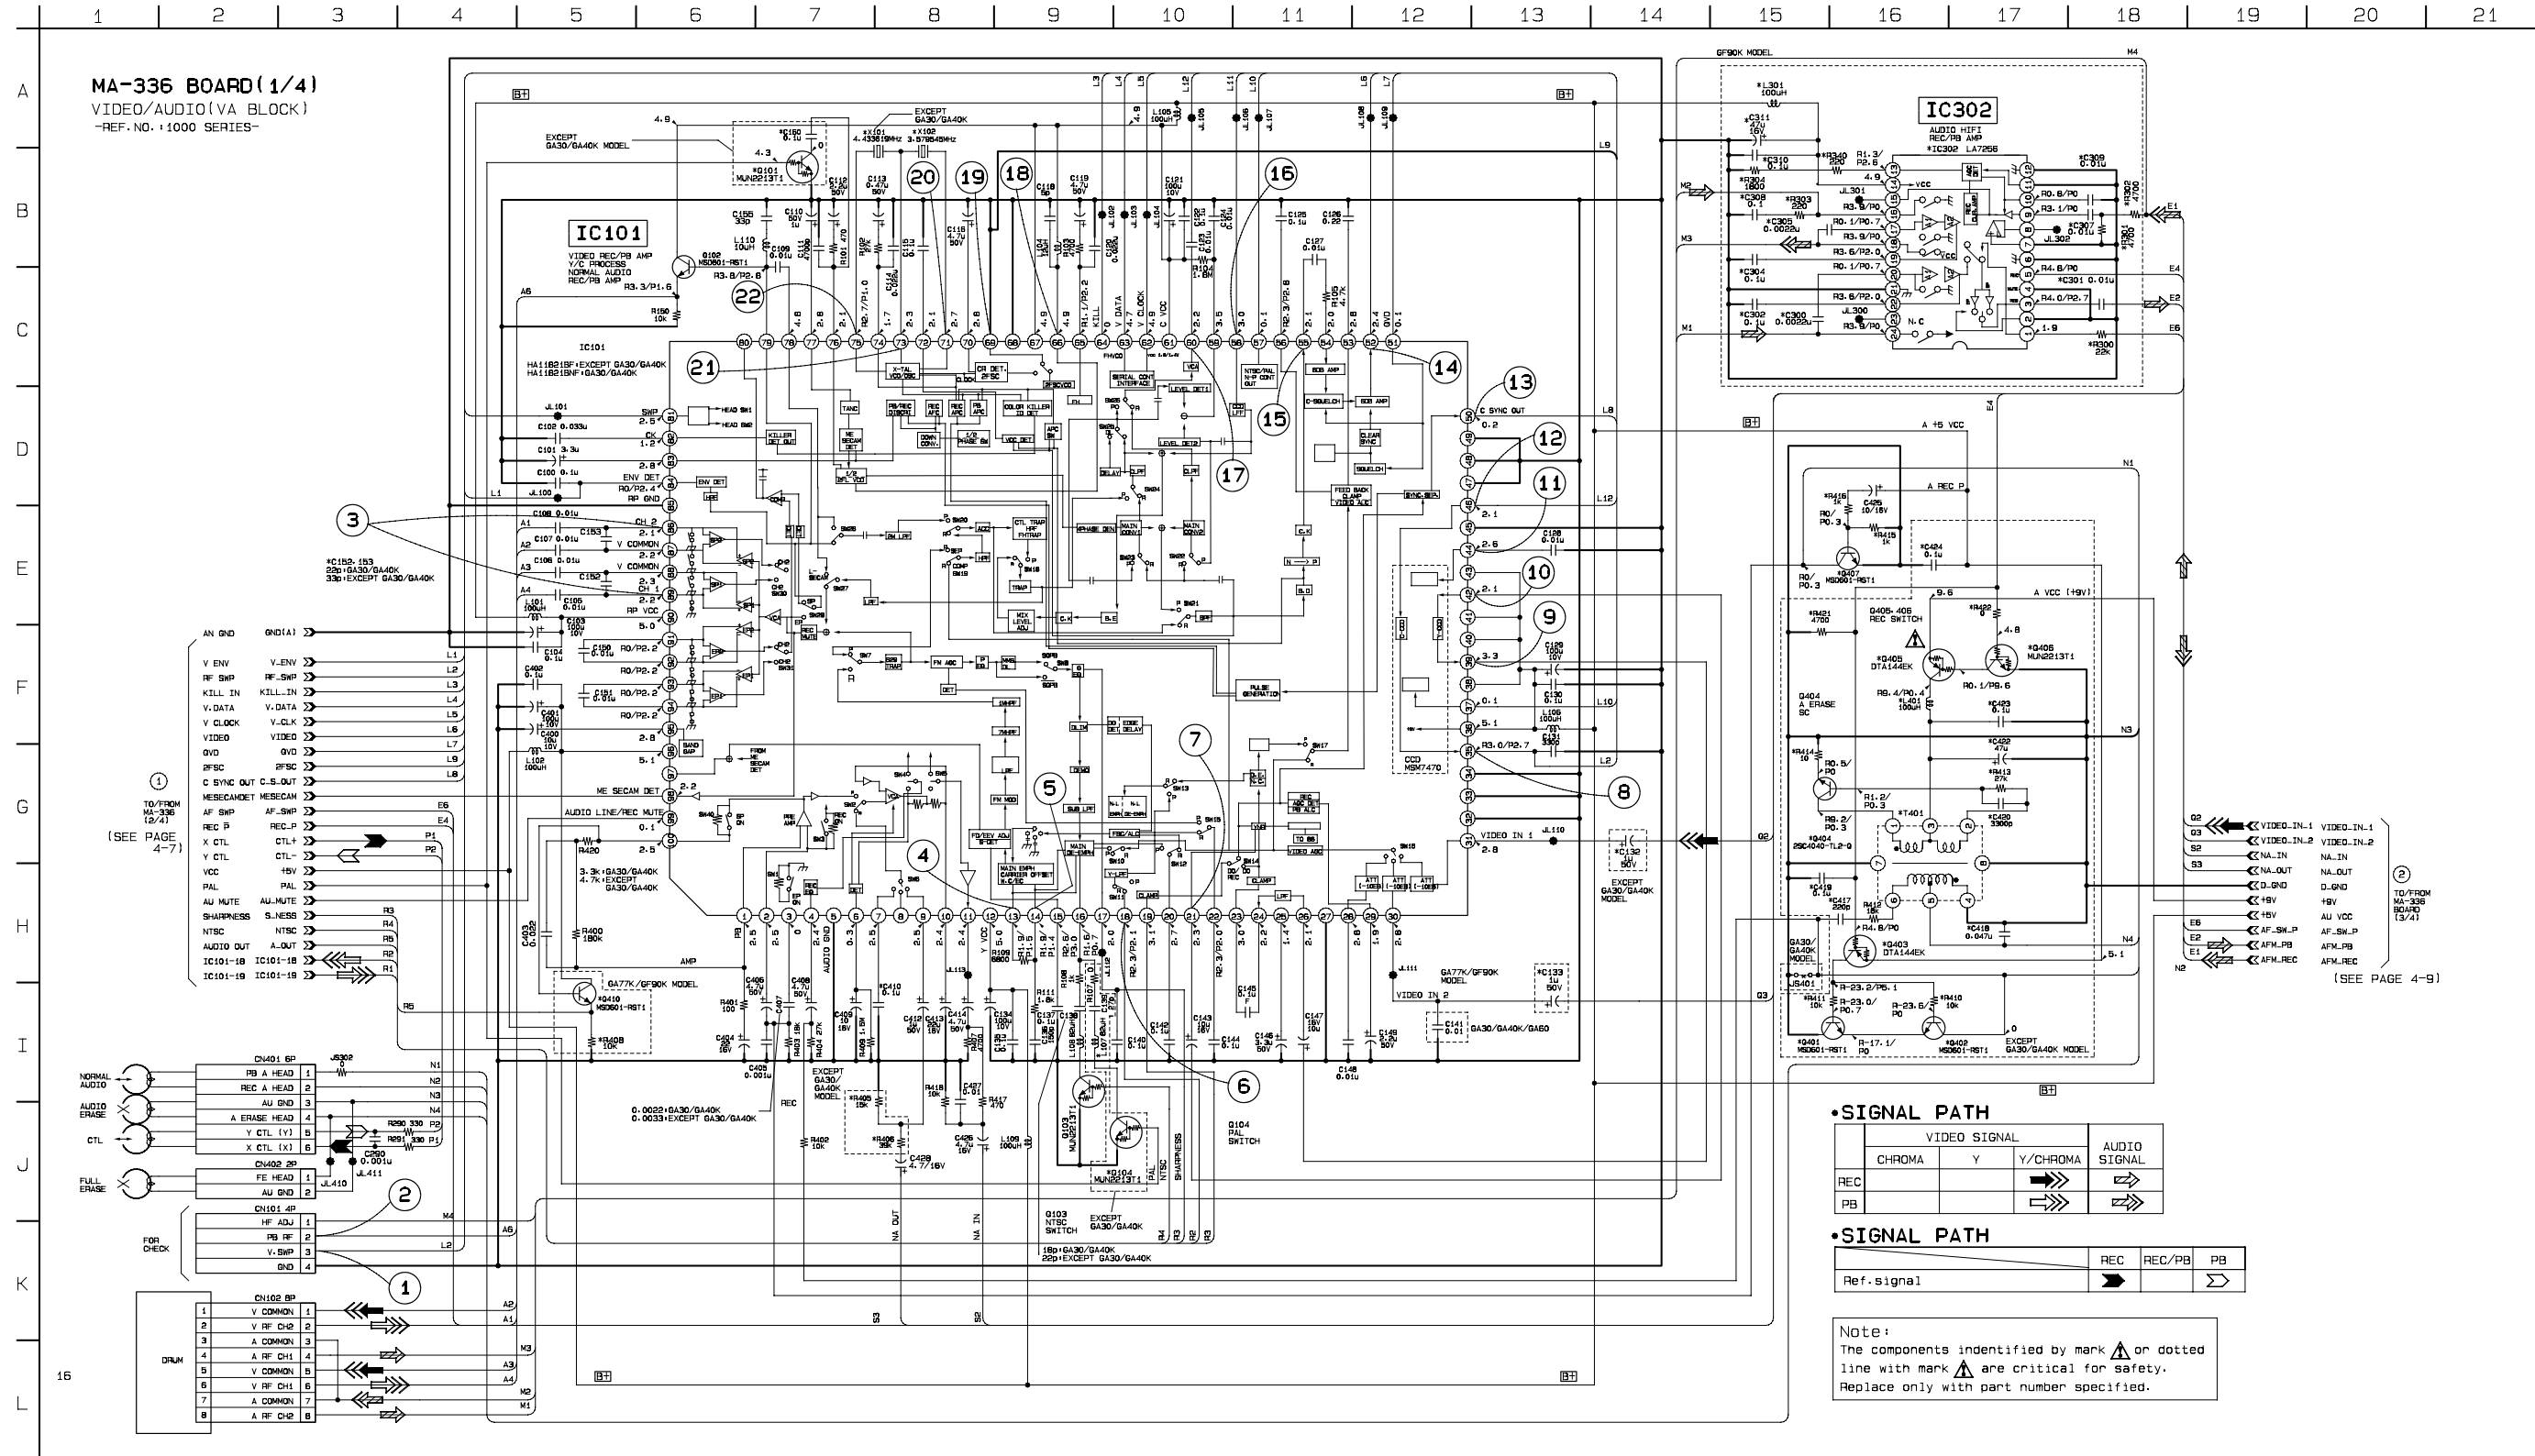

**• SIGNAL PATH**

	VIDEO SIGNAL			AUDIO SIGNAL
	CHROMA	Y	Y/CHROMA	
REC		➔➔➔	➔➔➔	➔➔➔
PB		➔➔➔	➔➔➔	➔➔➔


  

**• SIGNAL PATH**

	REC	REC/PB	PB
Ref. signal	➔➔➔	➔➔➔	➔➔➔

Note:  
 The components identified by mark **▲** or dotted line with mark **▲** are critical for safety.  
 Replace only with part number specified.

For schematic diagram  
 • Refer to page 4-13 for printed wiring board.  
 • Refer to page 4-15 for waveforms.

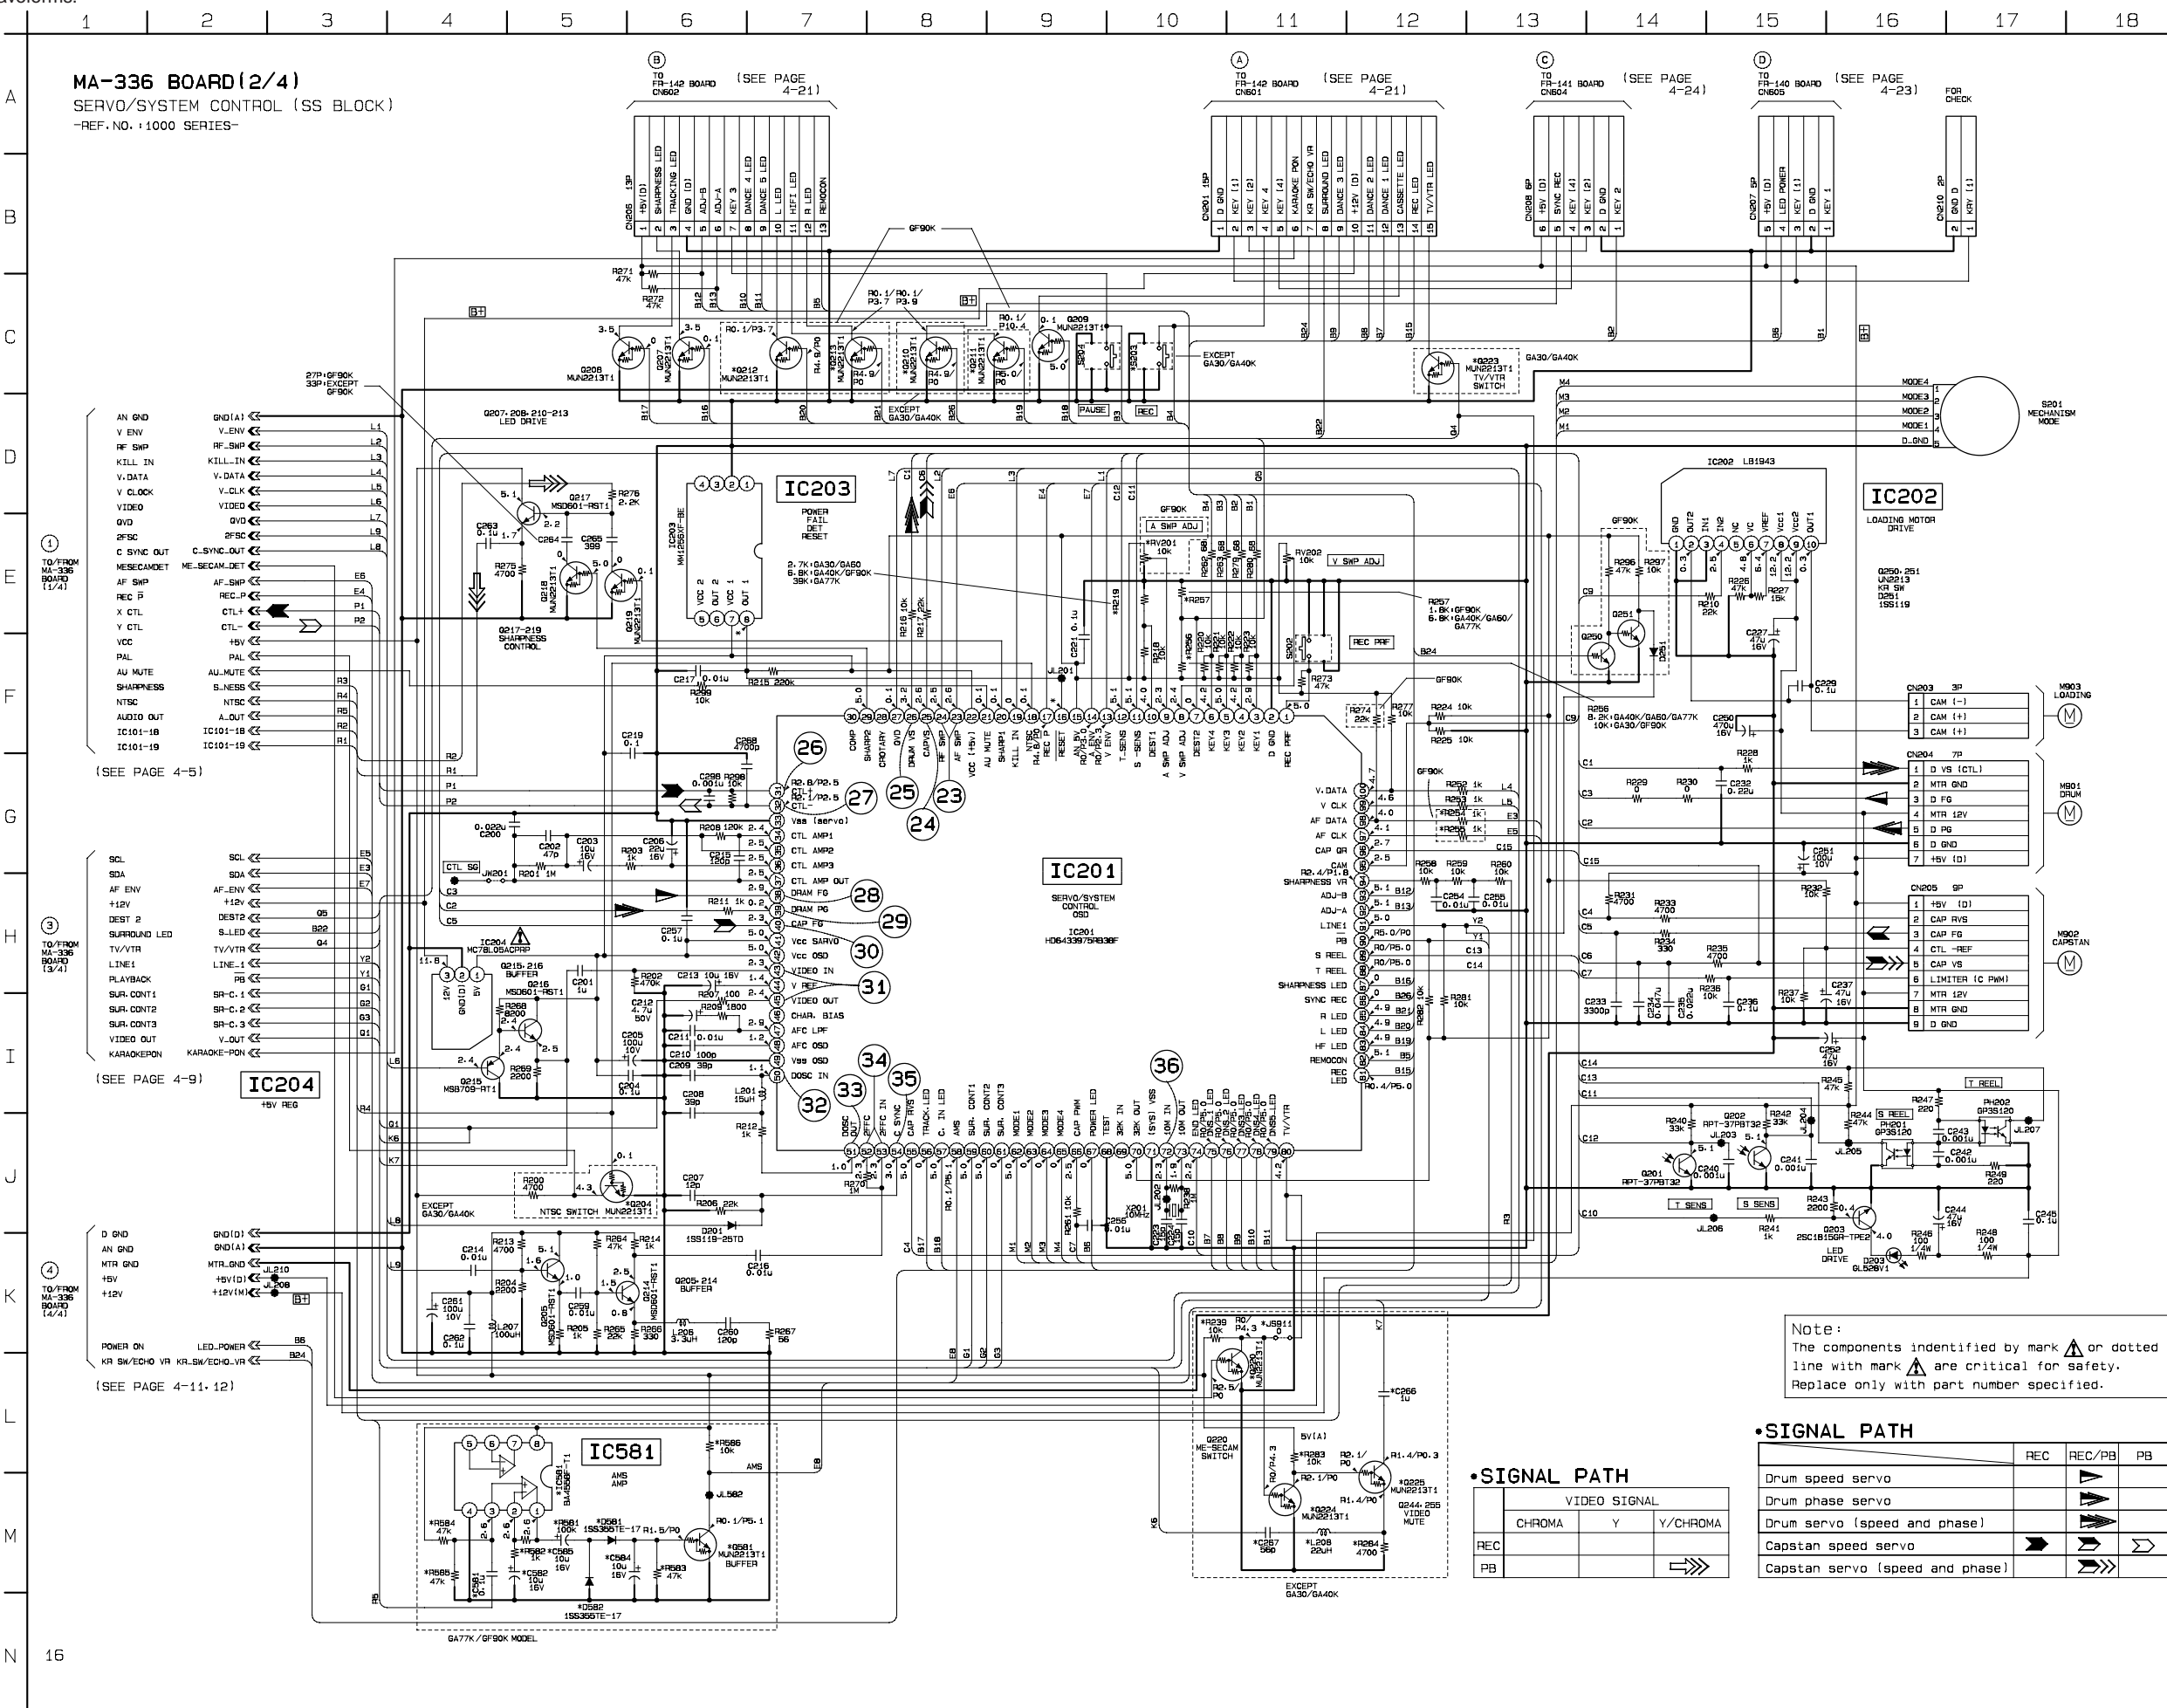

**MA-336 BOARD (2/4)**  
 SERVO/SYSTEM CONTROL (SS BLOCK)  
 -REF. NO. 1000 SERIES-

- TO/FROM MA-336 BOARD (1/4)
- AN GND
  - V-ENV
  - RF SWP
  - KILL IN
  - V-DATA
  - V-CLK
  - VIDEO
  - QVD
  - 2FSC
  - C SYNC OUT
  - ME-SECAMDET
  - AF SWP
  - REC P
  - X CTL
  - Y CTL
  - VCC
  - PAL
  - AU MUTE
  - SHARPNESS
  - NTSC
  - AUDIO OUT
  - IC101-18
  - IC101-19

- TO/FROM MA-336 BOARD (3/4)
- SCL
  - SDA
  - AF ENV
  - +12V
  - DEST 2
  - SURROUND LED
  - TV/VTR
  - LINE1
  - PLAYBACK
  - SUR-CONT1
  - SUR-CONT2
  - SUR-CONT3
  - VIDEO OUT
  - KARAOKE-ON

- TO/FROM MA-336 BOARD (4/4)
- D GND
  - AN GND
  - MTR GND
  - +5V
  - +12V

Note:  
 The components identified by mark  $\Delta$  or dotted line with mark  $\Delta$  are critical for safety.  
 Replace only with part number specified.

**• SIGNAL PATH**

	REC	REC/PB	PB
Drum speed servo		▶	
Drum phase servo		▶▶	
Drum servo (speed and phase)		▶▶▶	
Capstan speed servo	▶		▶▶
Capstan servo (speed and phase)	▶▶▶		▶▶▶▶


**• SIGNAL PATH**

	VIDEO SIGNAL		
	CHROMA	Y	Y/CHROMA
REC		▶	▶▶
PB		▶▶	▶▶▶



For schematic diagram  
 • Refer to page 4-15 for waveforms.

1 2 3 4 5 6 7 8 9 10 11 12 13 14

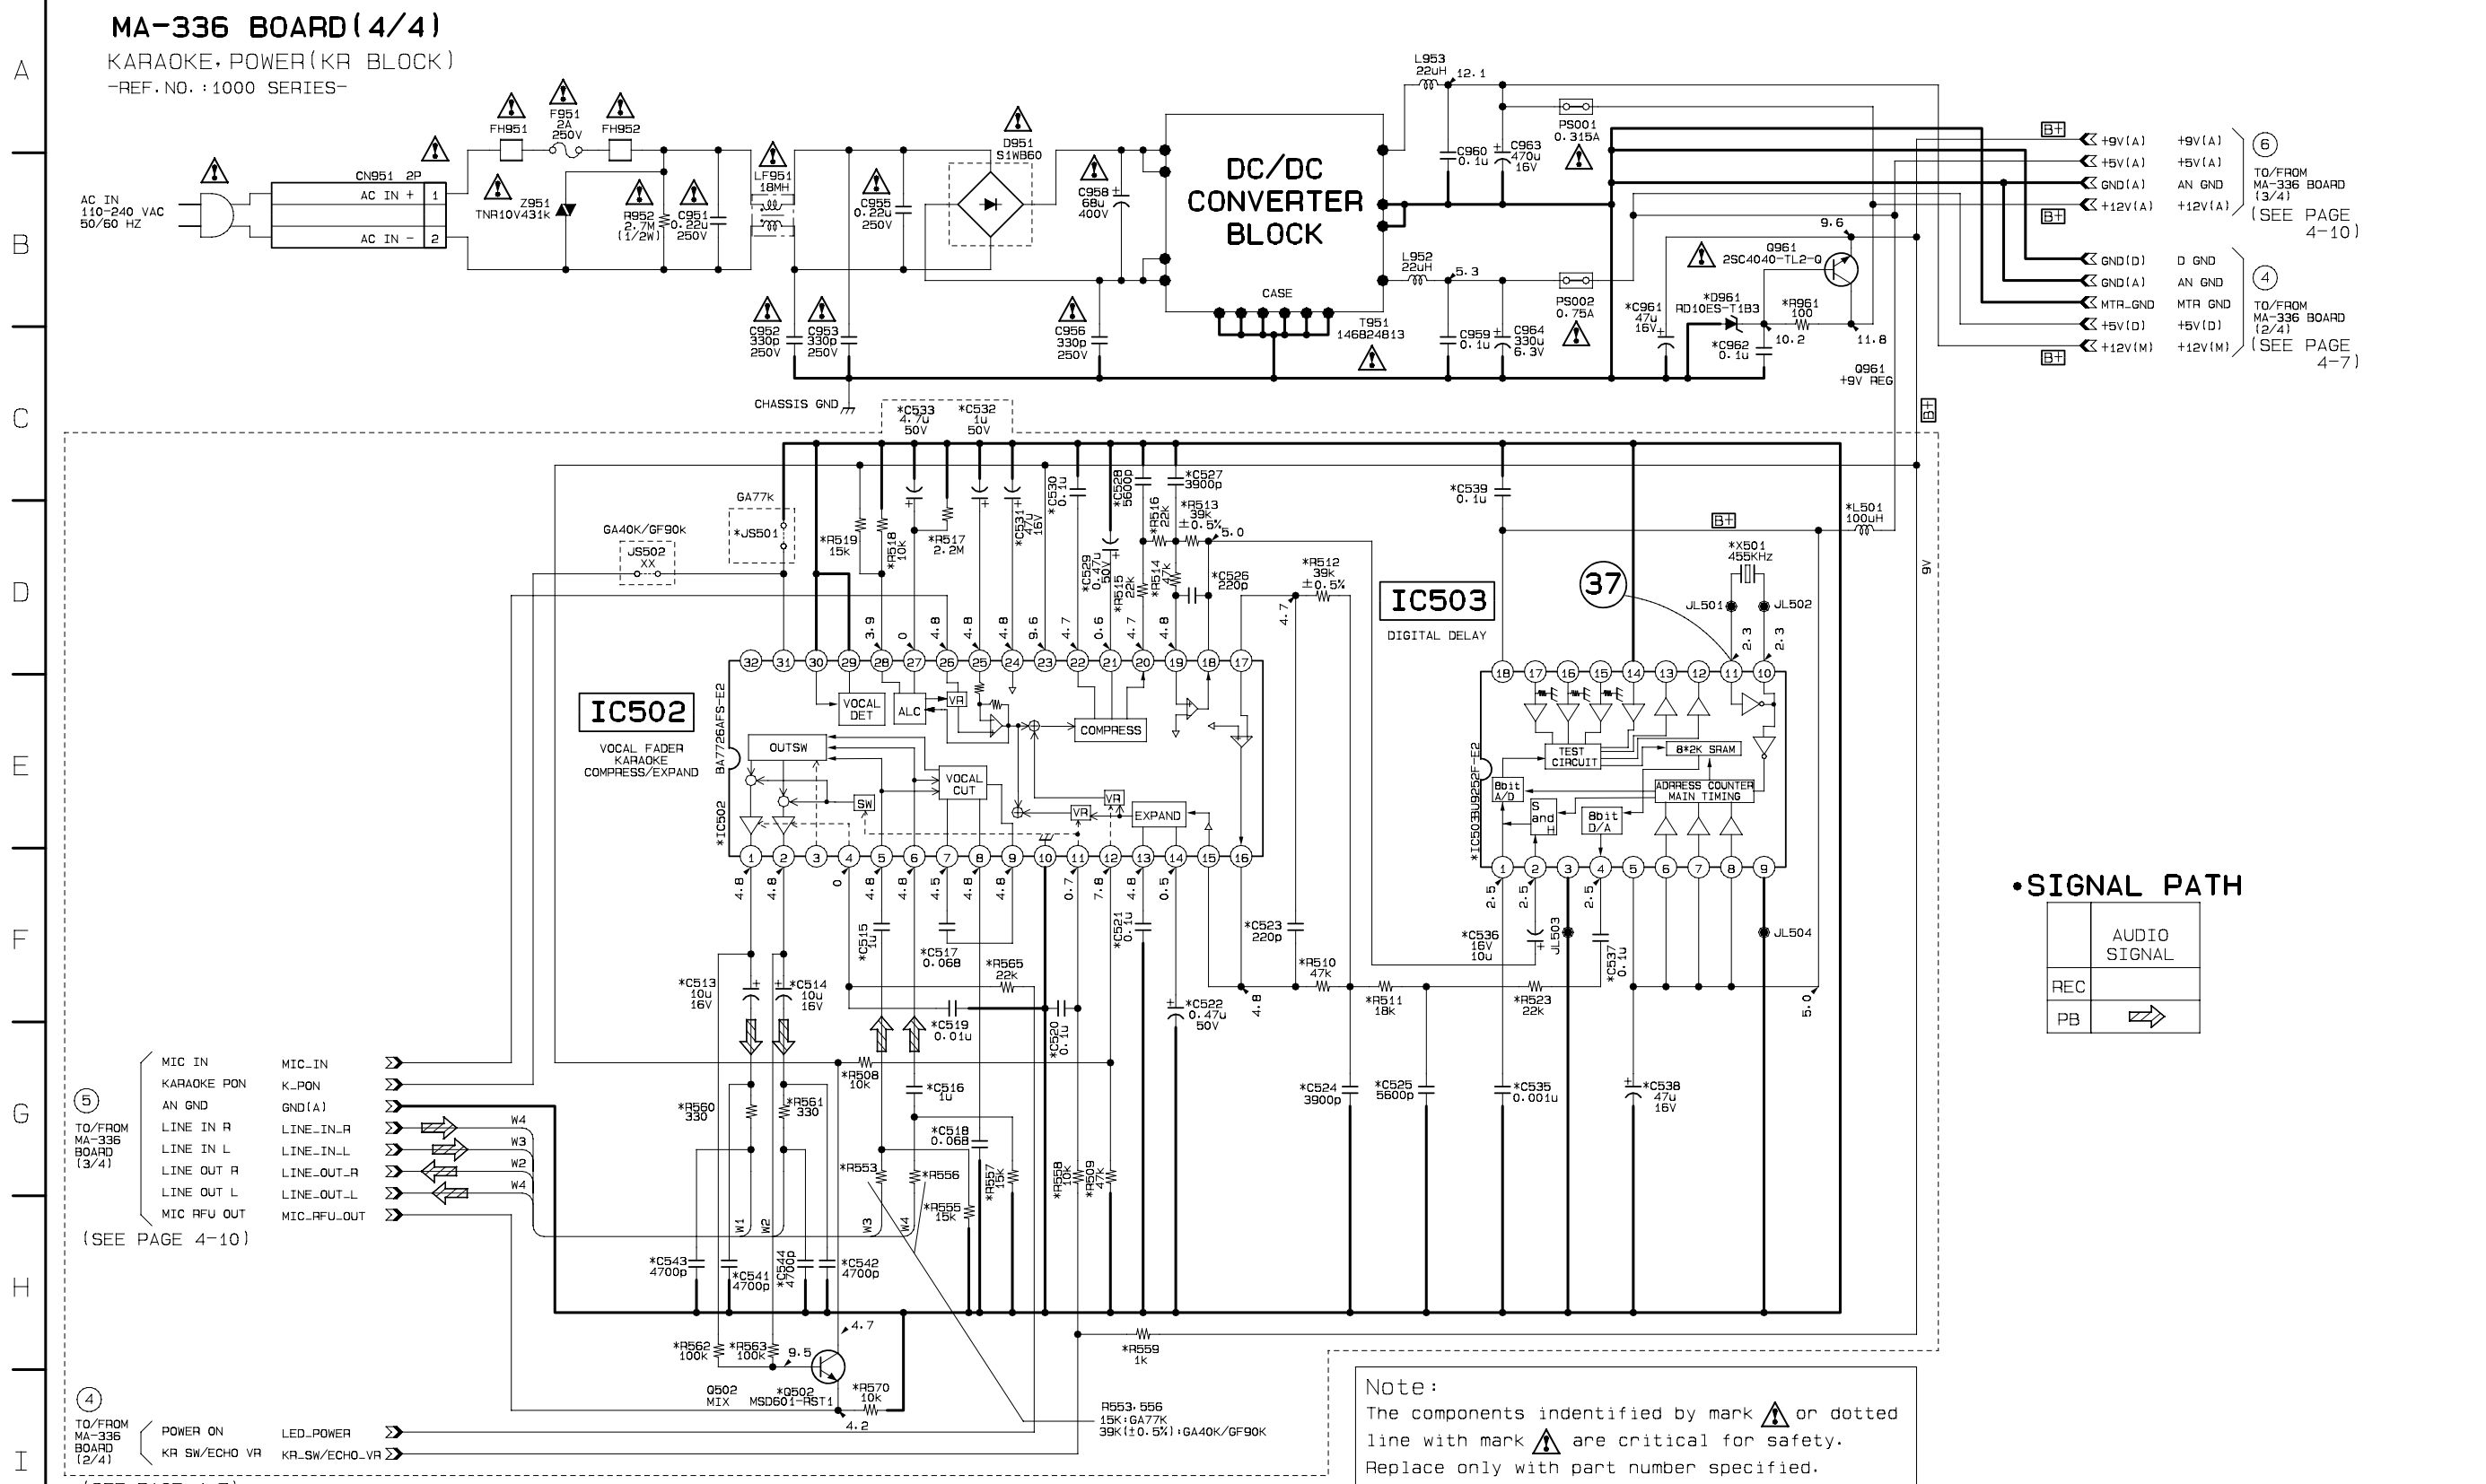

TO/FROM MA-336 BOARD (3/4)  
 (SEE PAGE 4-10)



TO/FROM MA-336 BOARD (2/4)  
 (SEE PAGE 4-7)

MA-336 (VIDEO, AUDIO, SERVO/SYSTEM CONTROL, TUNER, KARAOKE, POWER SUPPLY) PRINTED WIRING BOARD


— Ref. No. MA-336 Board; 1,000 Series —  
MA-336 BOARD (CONDUCTOR SIDE)

MA-336 BOARD

CN101	A-9	Q101	B-11
CN102	B-10	Q102	B-11
CN201	J-11	Q103	C-9
CN202	H-12	Q104	D-8
CN203	I-6	Q201	F-3
CN204	E-12	Q202	F-11
CN205	E-3	Q203	F-6
CN206	J-4	Q204	D-8
CN207	I-1	Q205	G-6
CN208	J-2	Q206	H-4
CN209	J-3	Q207	I-8
CN210	H-12	Q208	I-6
CN401	A-11	Q209	I-11
CN402	A-11	Q210	J-1
CN702	I-1	Q211	J-5
CN951	A-1	Q212	J-5
		Q213	J-5
		Q214	G-6
		Q215	F-7
		Q216	G-7
		Q217	C-9
		Q218	D-9
		Q219	D-9
		Q220	B-9
		Q221	H-1
		Q222	H-1
		Q223	I-11
		Q224	F-7
		Q225	F-7
		Q226	H-1
		Q250	H-5
		Q251	H-4
		Q401	A-12
		Q402	A-12
		Q403	C-12
		Q404	B-12
		Q405	C-12
		Q406	C-12
		Q407	A-11
		Q410	B-9
		Q502	I-3
		Q581	C-8
		Q751	D-3
		Q752	C-3
		Q753	D-4
		Q801	B-4
		Q961	I-1
CNJ801	A-5		
D201	G-6		
D203	F-7		
D251	H-5		
D581	C-8		
D582	C-8		
D807	I-12		
D808	I-12		
D809	I-12		
D810	H-12		
D951	C-1		
D961	I-1		
IC101	C-10		
IC201	H-7		
IC202	J-5		
IC203	H-10		
IC204	H-11		
IC301	D-6		
IC302	A-10		
IC502	I-3		
IC503	I-5		
IC581	B-8		
IC751	C-4		
IC752	D-4		
PH201	H-9		
PH202	H-6		

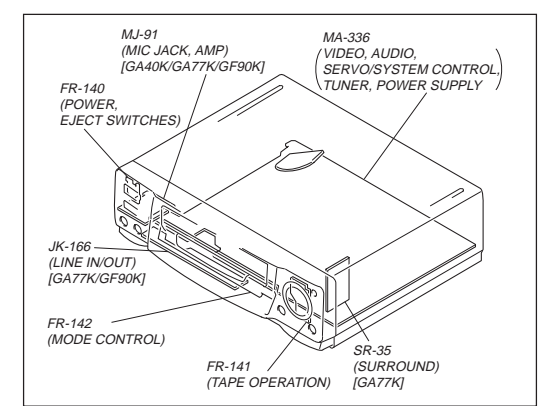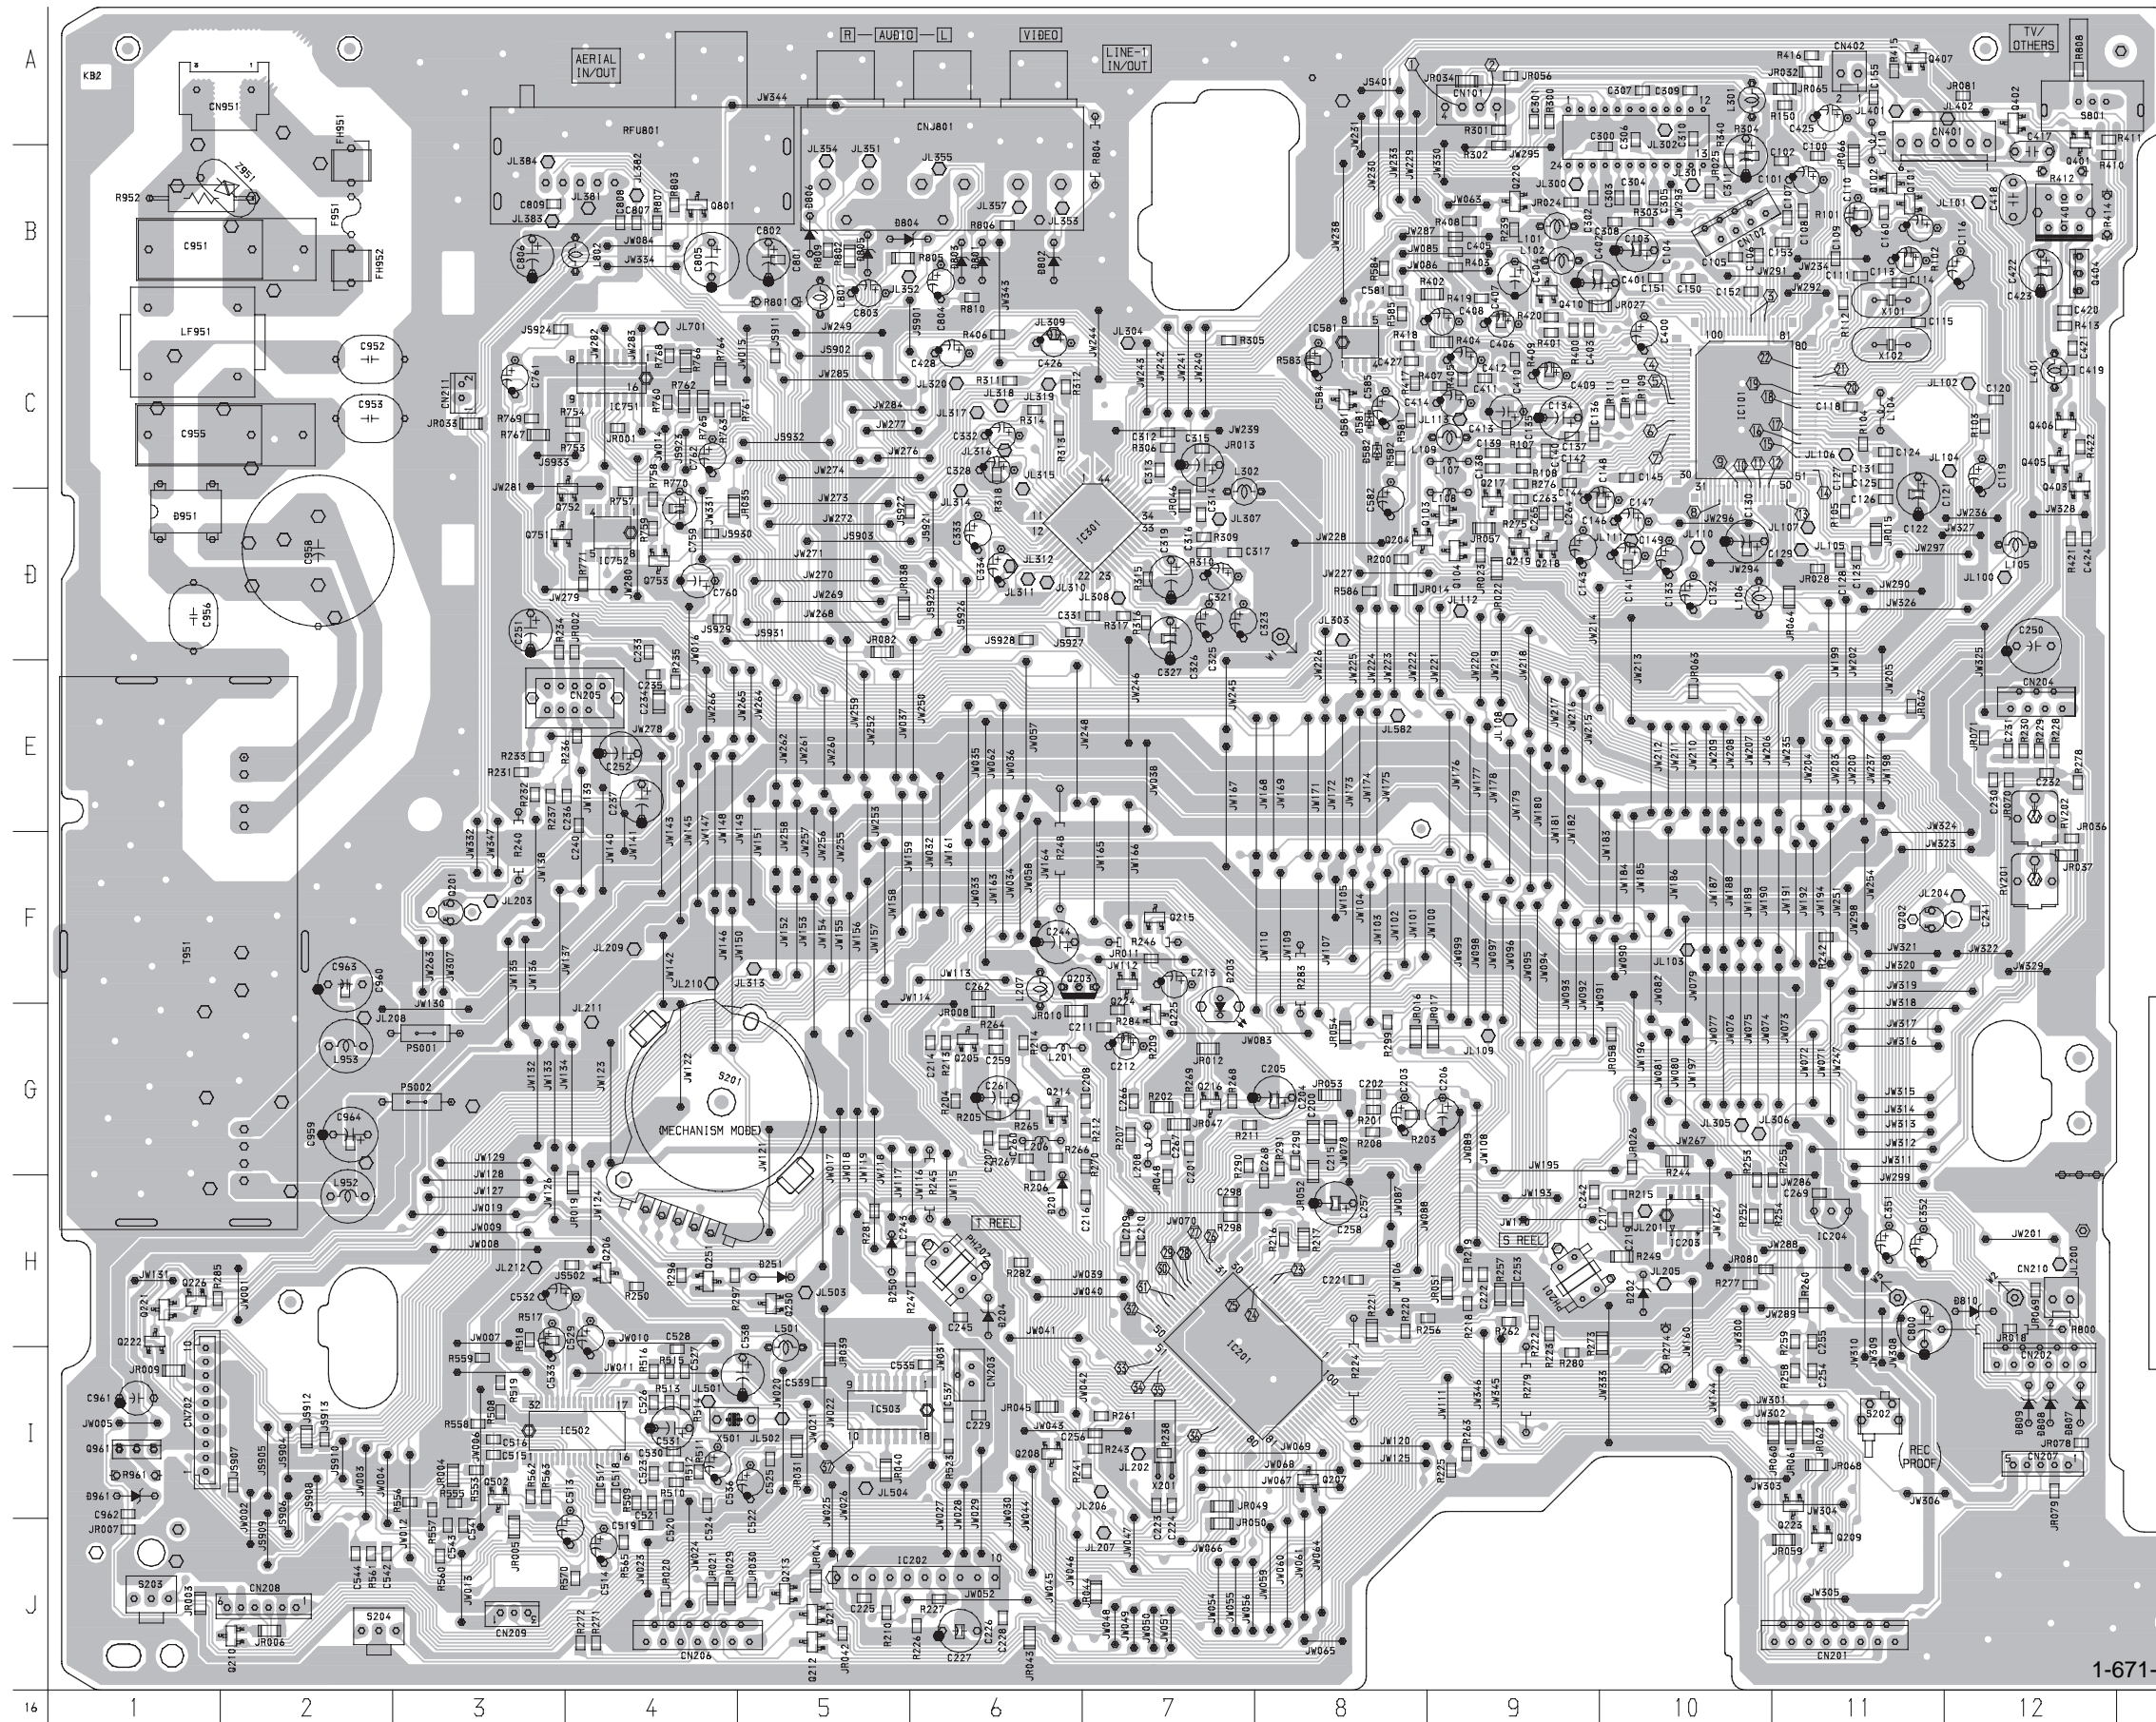



**MA-336 BOARD (SERVO/SYSTEM CONTROL, KARAOKE BLOCK)**

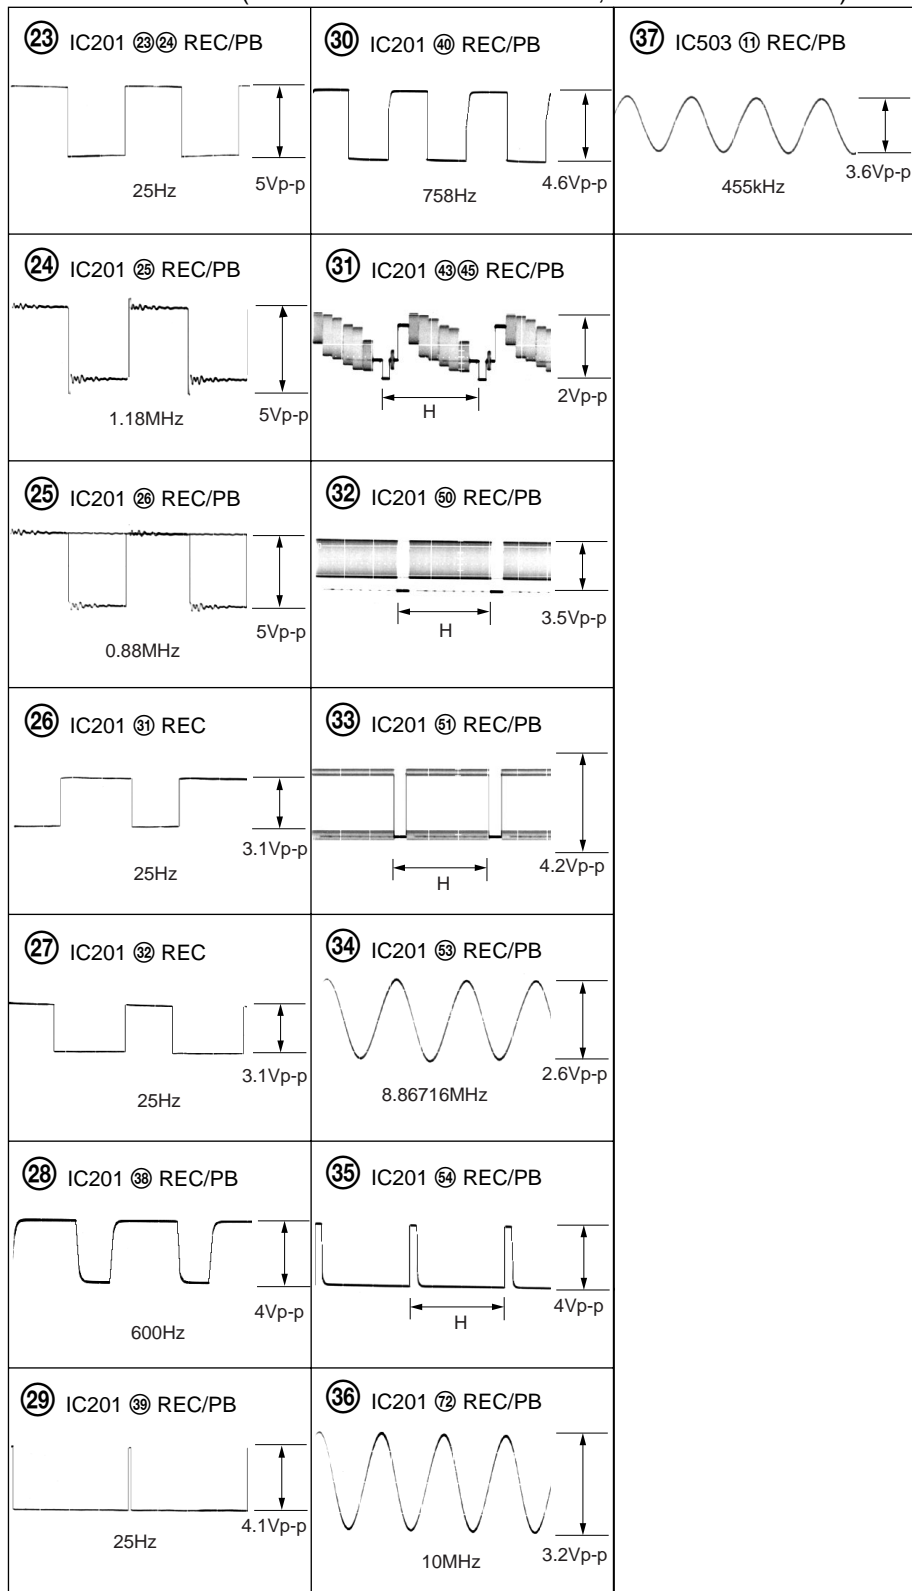

**SR-35 (SURROUND) PRINTED WIRING BOARD**

— Ref. No. SR-35 Board; 2,000 Series —

**SR-35 BOARD  
(CONDUCTOR SIDE)**

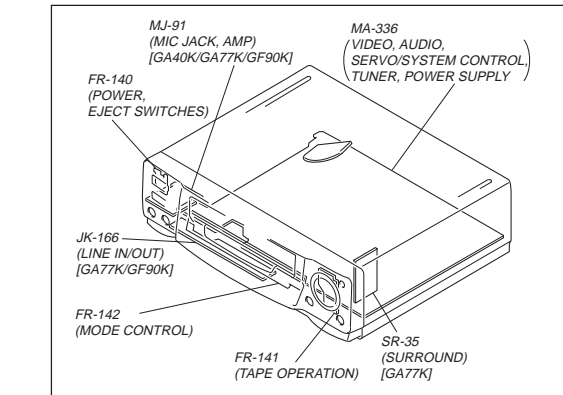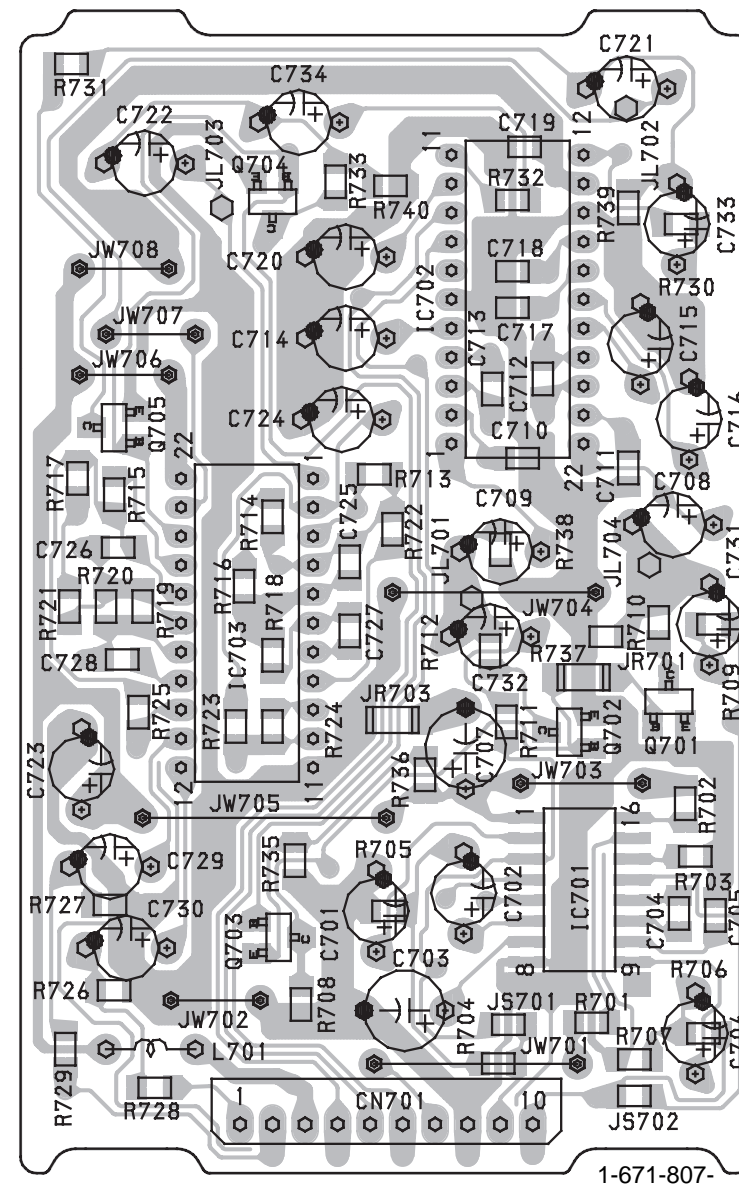

11


1-671-807-




1 2 3 4 5 6 7 8 9 10 11 12 13

A  
B  
C  
D  
E  
F  
G

**SR-35 BOARD**  
SURROUND  
-REF. NO. : 2000 SERIES-

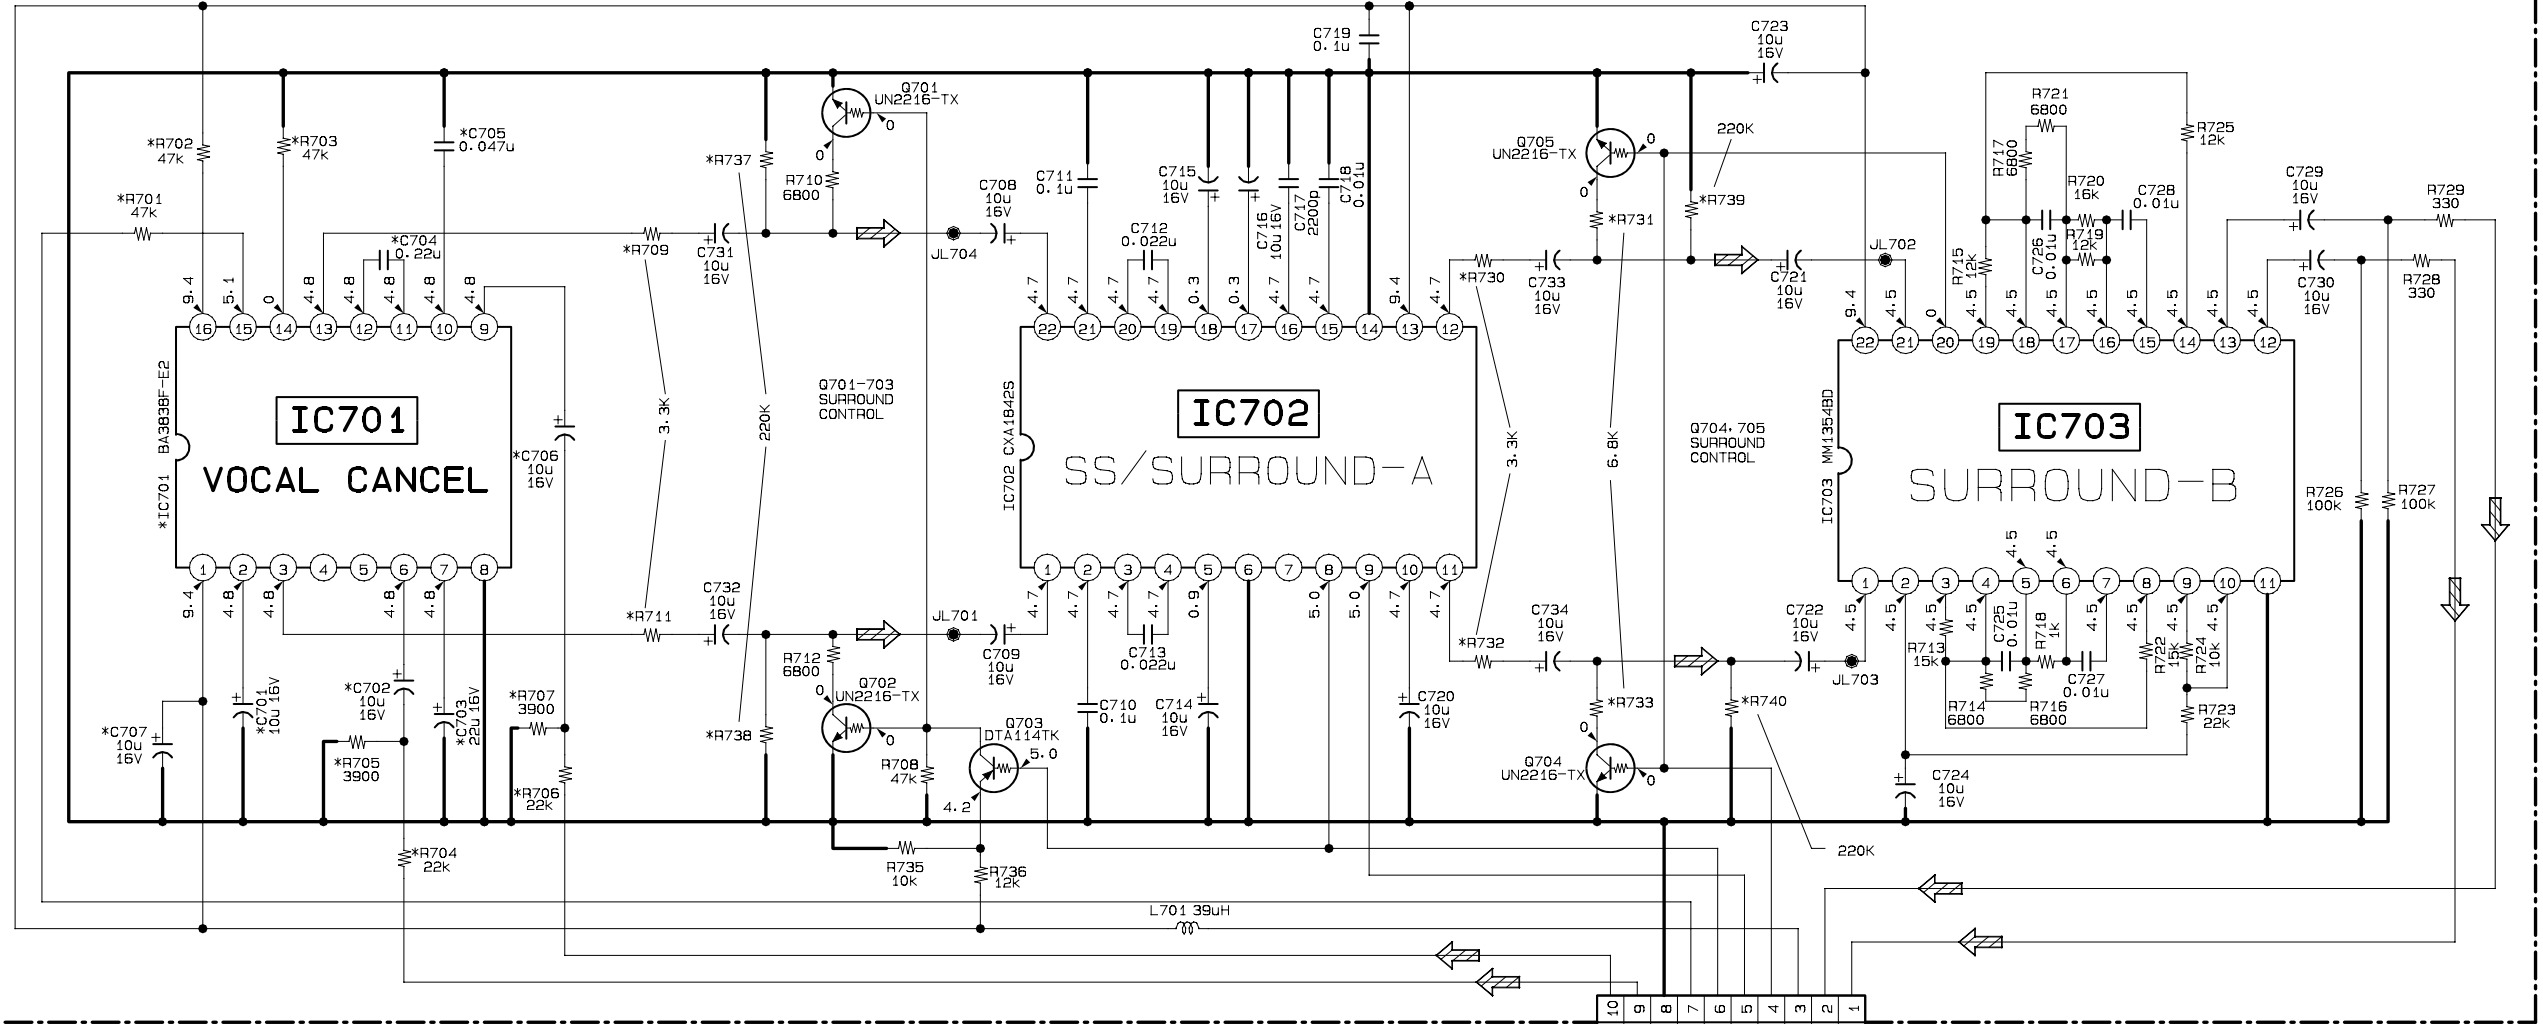

GA77K MODEL ONLY

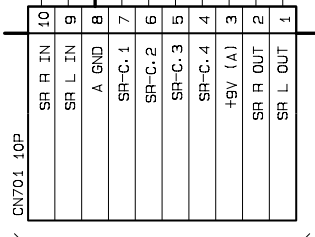

TO MA-336 BOARD  
CN702  
(SEE PAGE 4-9)



•SIGNAL PATH

	VIDEO SIGNAL			AUDIO SIGNAL
	CHROMA	Y	Y/CHROMA	
REC				
PB				➡

FR-142 (MODE CONTROL) PRINTED WIRING BOARD

— Ref. No. FR-142 Board; 1,000 Series —

FR-142 BOARD (CONDUCTOR SIDE)

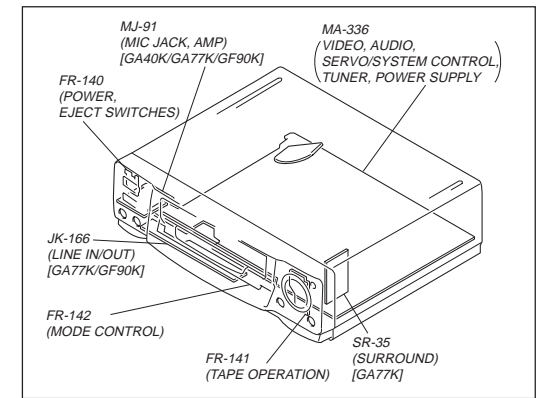
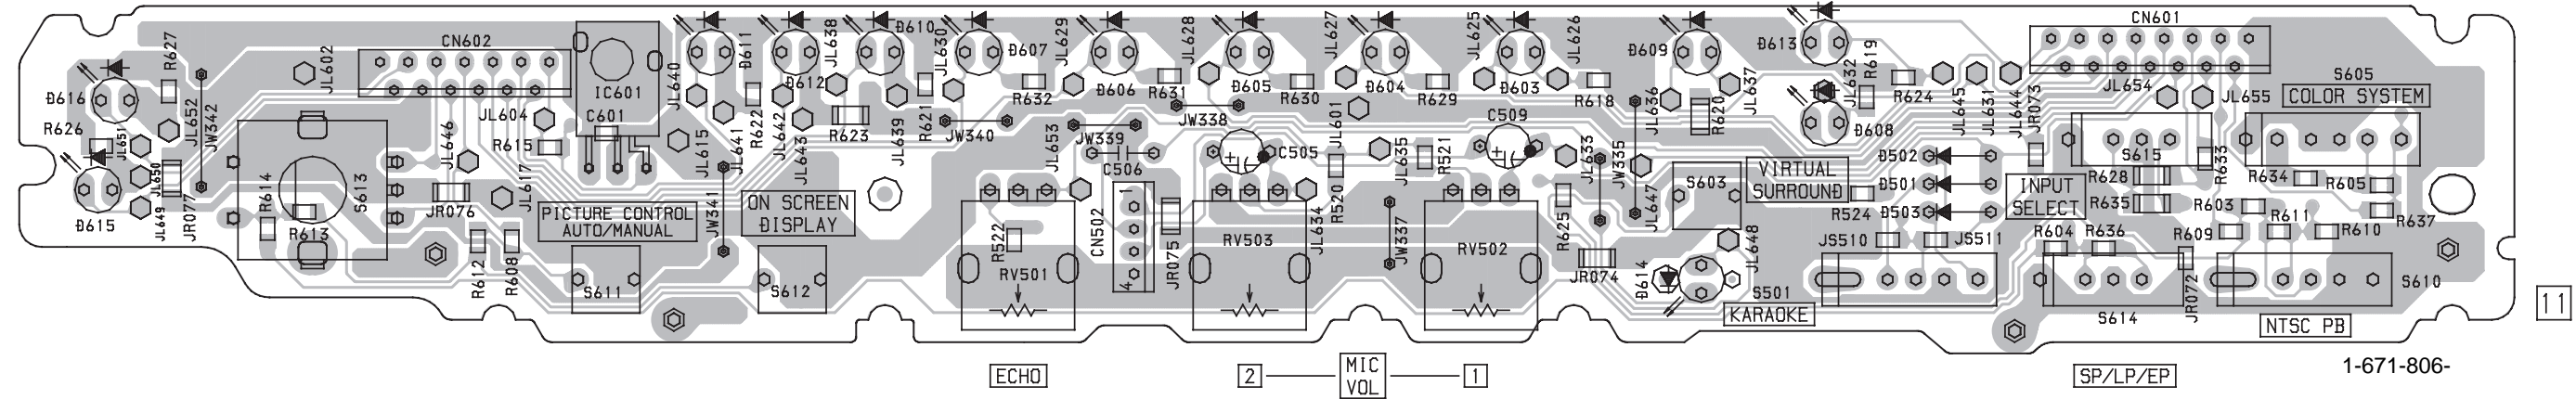




FR-140 (POWER, EJECT SWITCHES) PRINTED WIRING BOARD AND SCHEMATIC DIAGRAM

— Ref. No. FR-140 Board; 1,000 Series —





FR-140 BOARD  
(CONDUCTOR SIDE)

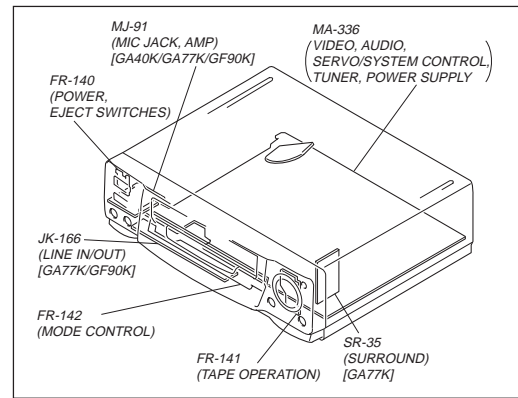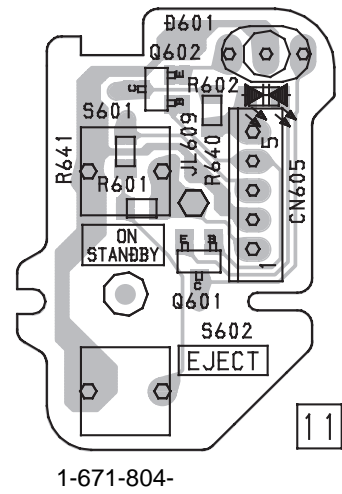

FR-141 (TAPE OPERATION) PRINTED WIRING BOARD AND SCHEMATIC DIAGRAM

— Ref. No. FR-141 Board; 1,000 Series —




FR-141 BOARD  
(CONDUCTOR SIDE)

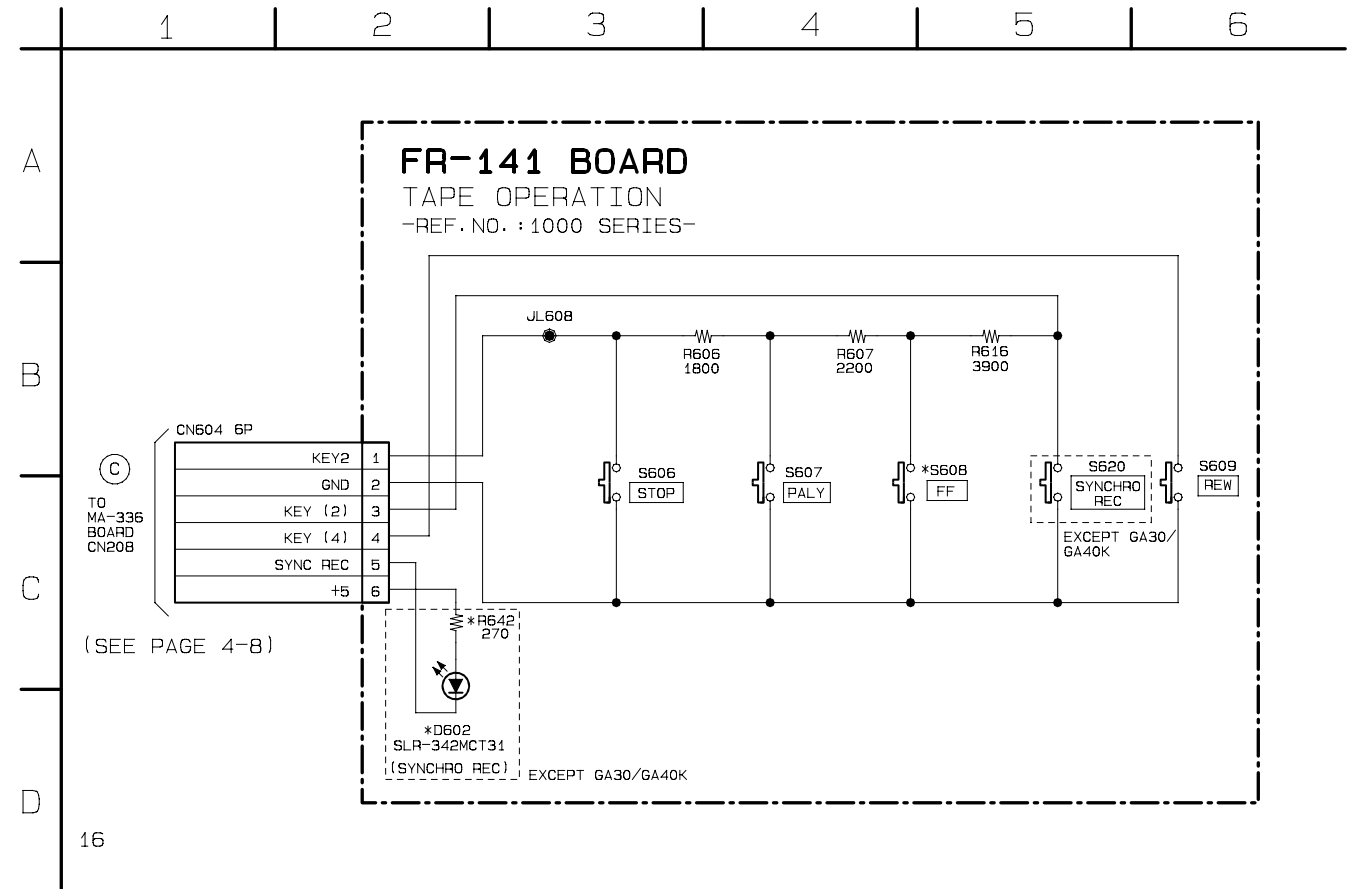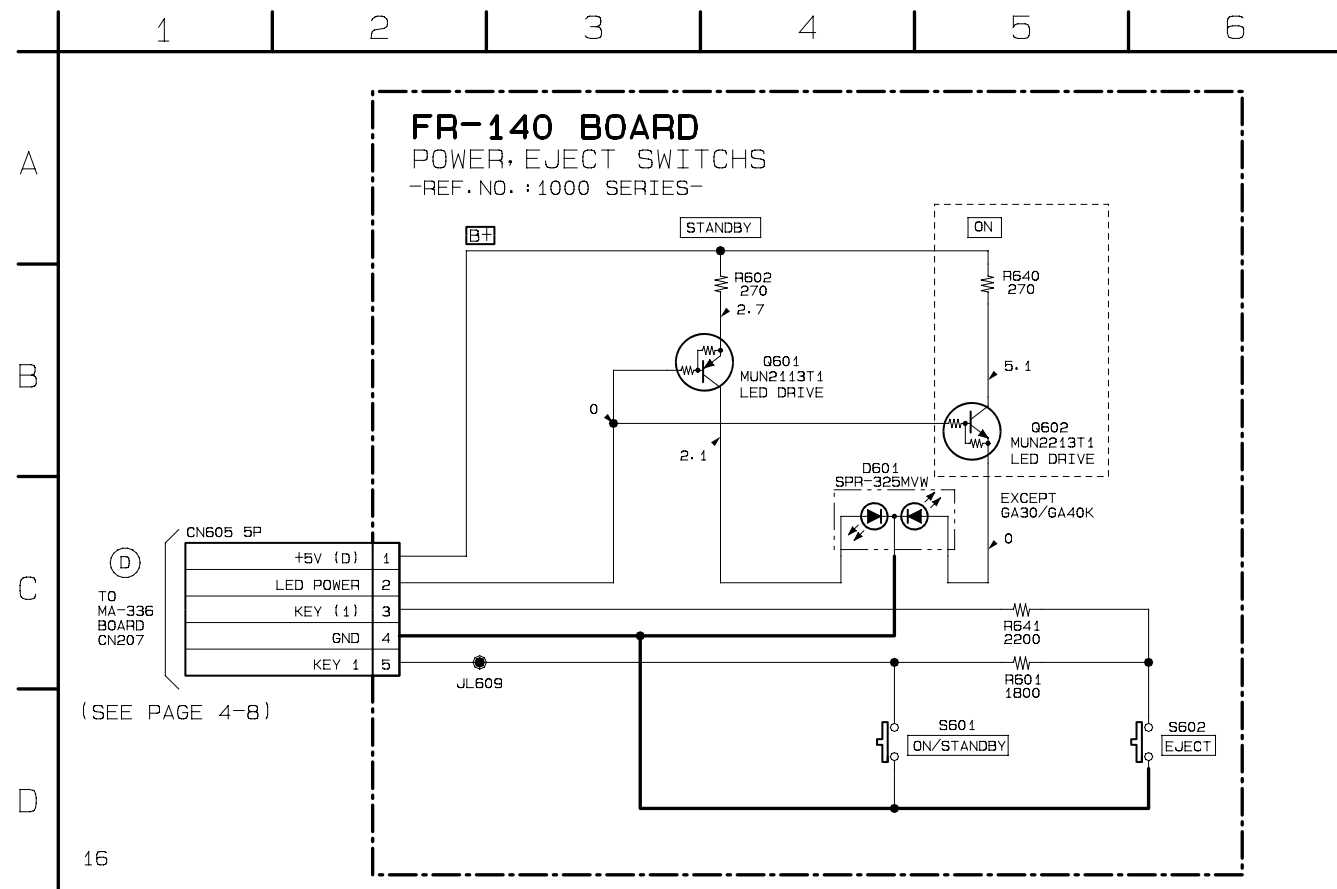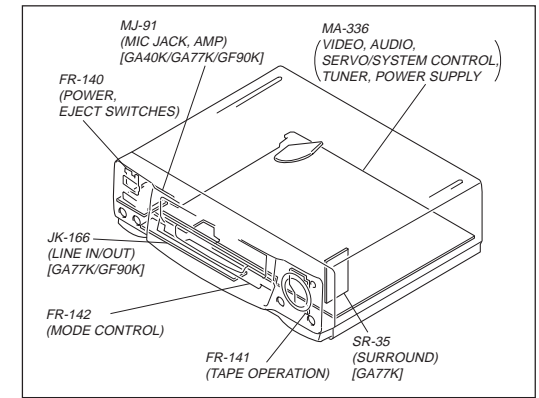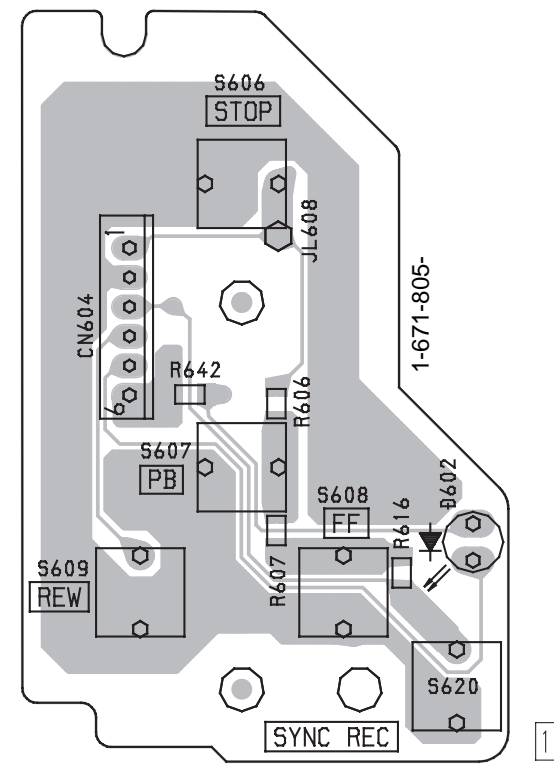

**MJ-91 (MIC JACK, AMP) PRINTED WIRING BOARD AND SCHEMATIC DIAGRAM**

— Ref. No. MJ-91 Board; 2,000 Series —


MJ-91 BOARD  
(CONDUCTOR SIDE)

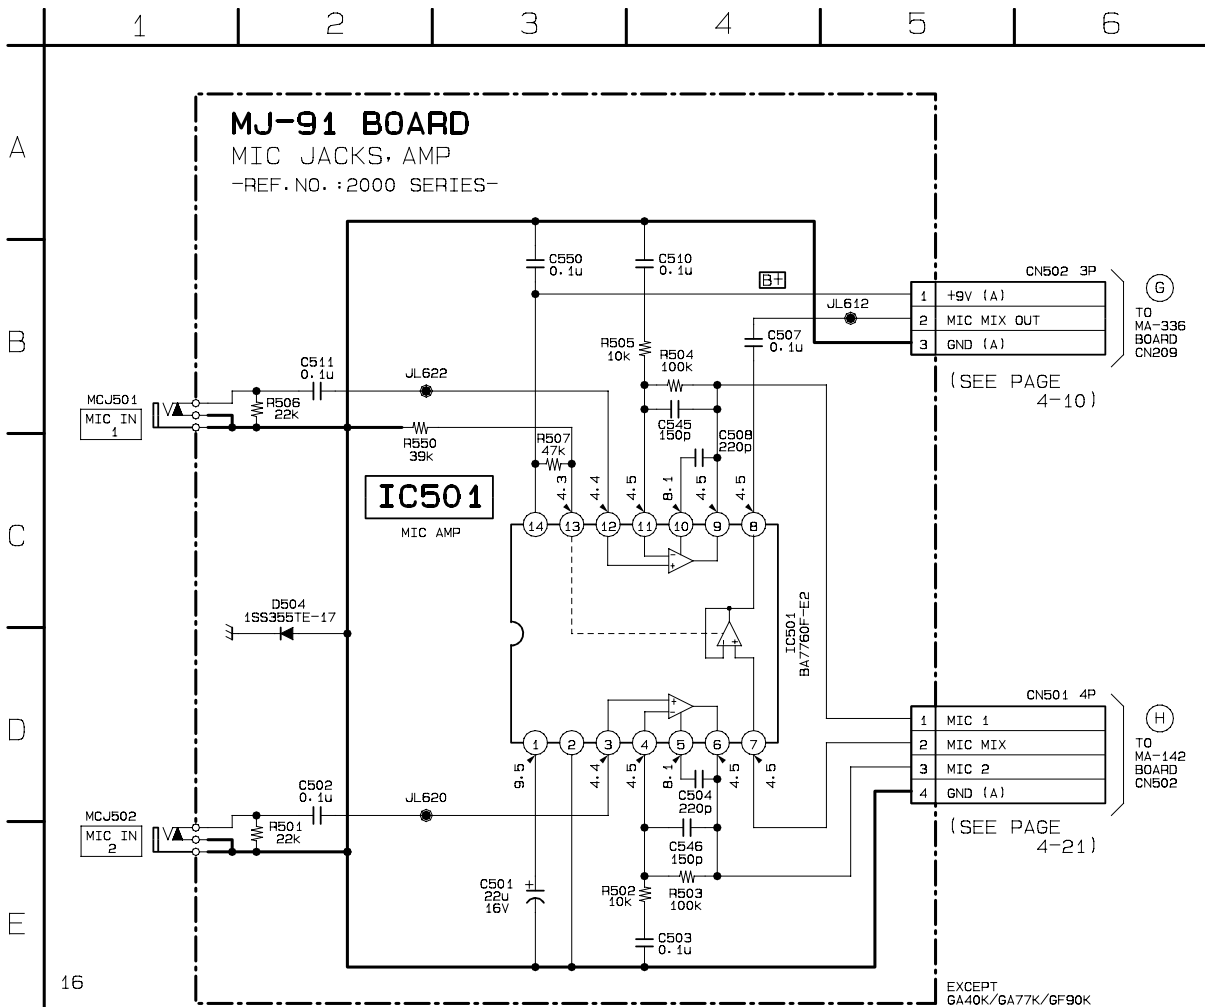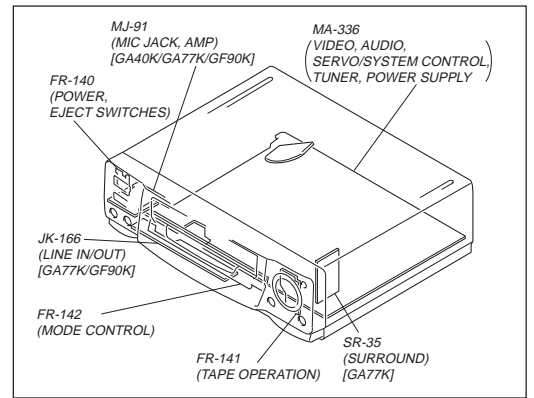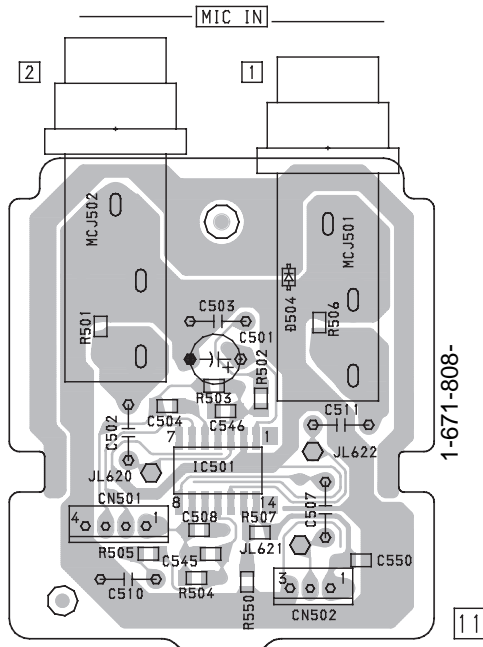



JK-166 (LINE IN/OUT) PRINTED WIRING BOARD AND SCHEMATIC DIAGRAM

— Ref. No. JK-166 Board; 2,000 Series —

JK-166 BOARD (CONDUCTOR SIDE)

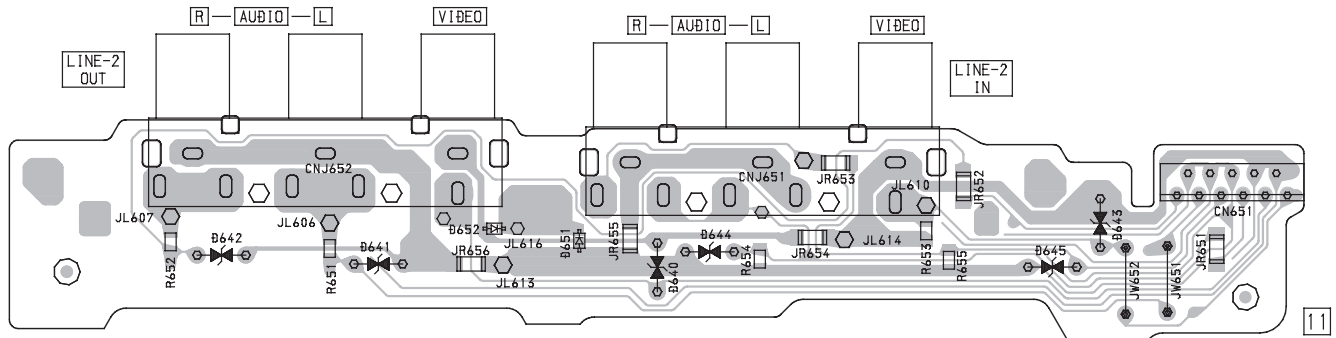

1-671-809-

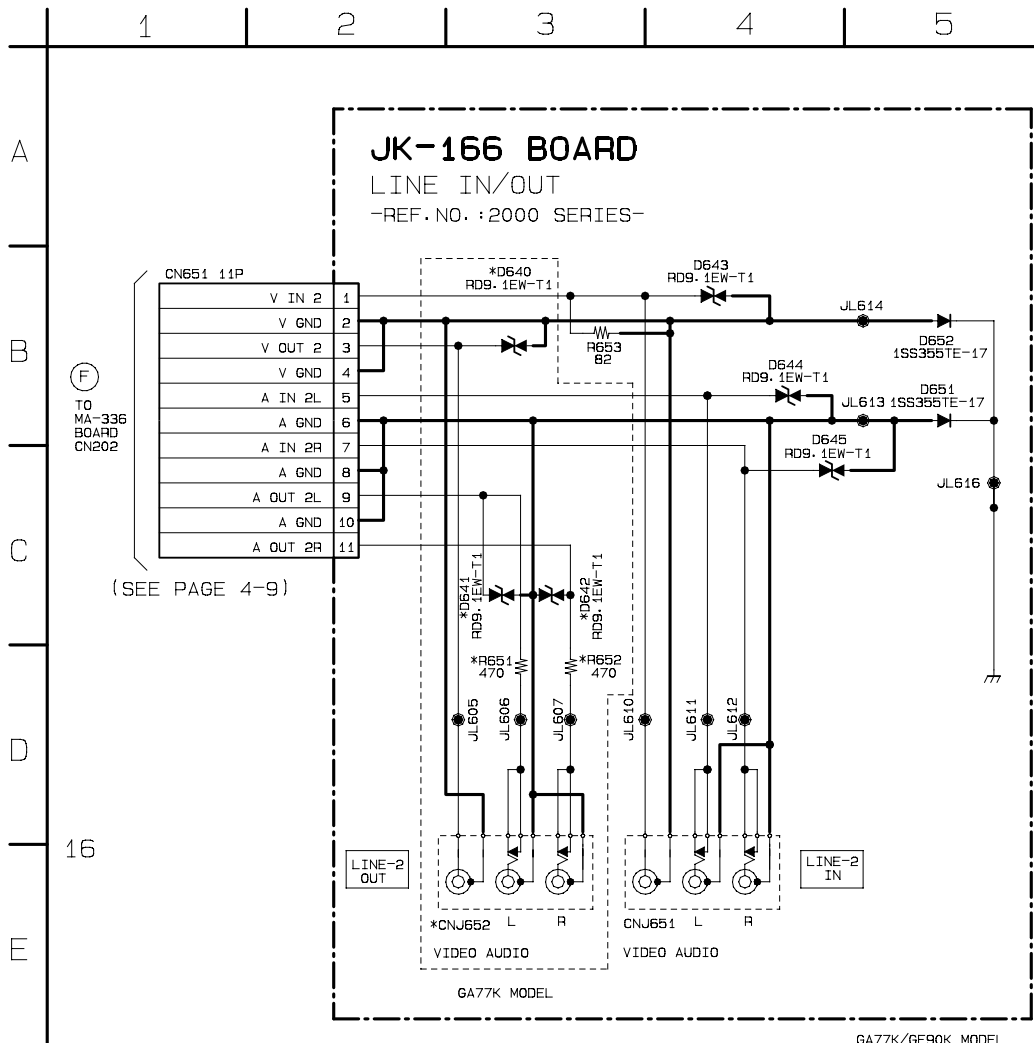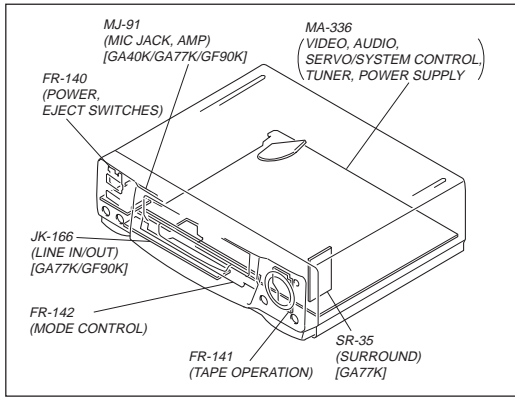

LINE IN/OUT  
JK-166

SECTION 5  
INTERFACE, IC PIN FUNCTION DESCRIPTION

5-1. SYSTEM CONTROL — VIDEO BLOCK INTERFACE (MA-336 BOARD IC201)

Signal	Pin No.	I/O	STOP FF/REW	TAPE THREADING	TAPE UNTHREADING	PB	PB PAUSE	SLOW	x 2	CUE	REVIEW	REC	REC PAUSE
RF SWP	Ⓓ	O	*1	*1	*1	*1	*1	*1	*1	*1	*1	*1	*1
QVD	Ⓔ	O	L	L	*2	*3	*3	*3	*3	*3	*3	L	L
C SYNC	Ⓖ	I	*4	*5	*5	*5	*5	*5	*5	*5	*5	*5	*5
NT JUDGE	Ⓖ	O	L	L	L	L	L	L	L	L	L	L	L

\*1 Synchronized with drum rotation. 25 Hz (PAL), 30 Hz (NTSC) 50% duty cycle.

\*2 Normally "L". "H" when CTL signal is not generated.

\*3 V period "H" pulse.

\*4 Selected by REC mode. "H" in LP mode."

\*5 Composite sync signal (positive).

5-2. SYSTEM CONTROL — SERVO PERIPHERAL CIRCUIT INTERFACE (MA-336 BOARD IC201)

Signal	Pin No.	I/O	STOP	FF	REW	TAPE		PB	PB PAUSE	SLOW	CUE	x 2	REVIEW	REC	REC PAUSE
						THREADING	UNTHREADING								
CTL (+)	Ⓓ	O	Hi-Z	Hi-Z	Hi-Z	Hi-Z	Hi-Z	Hi-Z	Hi-Z	Hi-Z	Hi-Z	Hi-Z	Hi-Z	*1	Hi-Z
CTL (-)	Ⓔ	I	H	*6	*6	*1	Hi-Z	*1	H/L	*2	*6	*6	*6	*1	H
DRM PG	Ⓔ	I	*4	*1	*1	*5	*5	*1	*1	*1	*1	*1	*1	*1	*1
DRM FG	Ⓔ	I	*4	*7	*7	*5	*5	*7	*7	*7	*7	*7	*7	*7	*7
CAP FG	Ⓔ	I	H/L	*6	*6	*5	*5	*6	H/L	*2	*6	*6	*6	*6	H/L
CAP VS	Ⓔ	O	*8	*8	*8	*8	*8	*9	*8	*8	*9	*8	*9	*9	*8
DRM VS	Ⓔ	O	*10	*10	*10	*10	*10	*10	*10	*10	*10	*10	*10	*10	*10

\*1. 25 Hz (PAL), 30 Hz (NTSC) pulse.

\*2. Pulse at tape running.

\*3. Reverse logic pulse of STEP PLS.

\*4. "L" when drum rotation stops.

\*5. Unstable period pulse.

\*6. Pulse in period in proportional to tape speed.

\*7. 300 Hz (PAL), 360 Hz (NTSC) pulse.

\*8. Pulse at tape running.

\*9. Approx. 2 msec period "H" or "L" pulse.

\*10. Approx. 1.5 msec period "H" or "L" pulse.

\*11. "L" when FWD SLOW, "H" when RVS SLOW.

### 5-3. SYSTEM CONTROL — MECHANISM INTERFACE (MA-336 BOARD IC201)

Signal	Pin No.	I/O	EJECTED	CASSETTE LOADING	CASSETTE UNLOADING	TAPE THREADING	TAPE UNTHREADING	STOP	FF	REW	PB	PB PAUSE	SLOW	x 2	CUE	REVIEW	REC	REC PAUSE
CAM2	Ⓔ	HI-Z	L	H	L	H	L	*7	*7	*7	*7	*7	*7	*7	*7	*7	*7	*7
MODE 1 (*8)	Ⓕ	I	H	L	L	*1	*1	H	H	H	H	H	H	H	H	L	H	H
MODE 2 (*8)	Ⓖ	I	H	L	L	*1	*1	H	H	H	L	L	L	L	L	L	L	L
MODE 3 (*8)	Ⓖ	I	L	L	L	*1	*1	H	L	L	L	L	L	L	L	H	L	L
MODE 4 (*8)	Ⓖ	I	L	H	H	*1	*1	L	H	H	H	L	L	L	L	L	L	L
REC PRF	Ⓙ	I	H	*2	*2	*2	*2	H/L	*2	*2	*2	*2	*2	*2	*2	*2	*2	*2
T REEL FG	Ⓙ	I	H/L	H/L	H/L	H/L	H/L	H/L	*3	*3	*3	H/L	*3	*3	*3	*3	*3	H/L
S REEL FG	Ⓙ	I	H/L	H/L	H/L	H/L	H/L	H/L	*3	*3	*3	H/L	*3	*3	*3	*3	*3	H/L
END LED	Ⓚ	O (O.D.)	*4	*4	*4	*4	*4	*4	*4	*4	*4	*4	*4	*4	*4	*4	*4	*4
CAP RVS	Ⓛ	O	H	L	L	H	H	H/L	L	H	L	L	L	L	L	H	L	L
T SENS	Ⓜ	I	*4	*4	*4	*6	*6	*6	*6	*6	*6	*6	*6	*6	*6	*6	*6	*6
S SENS	Ⓜ	I	*4	*4	*4	*6	*6	*6	*6	*6	*6	*6	*6	*6	*6	*6	*6	*6

- \*1. Uncertainly.
- \*2. "L" when erasing protection tab is bent. "H" when not bent.
- \*3. Pulse of period in proportion to reel rotating speed.
- \*4. Approx. 2 msec period "H" pulse.
- \*5. Pulse at tape running.
- \*6. Normally "L". 2 msec period "H" pulse when tape top or tape end is detected.
- \*7. When transition to UNLOADING direction : "L".  
When transition to LOADING direction : "H".  
When CAM MOTOR is stopped : HI-Z.
- \*8. When RVS slow : Mode 1="L"  
When RVS slow : Mode 2="L"  
When RVS slow : Mode 3="H"  
When RVS slow : Mode 4="L"

### 5-4. SYSTEM CONTROL — AUDIO BLOCK INTERFACE (MA-336 BOARD IC201)

Signal	Pin No.	I/O	STOPI/FF/ REW	TAPE LOADING	TAPE UNLOADING	PB	PB PAUSE	SLOW	x 2	CUE	REVIEW	REC	REC PAUSE
AF ENV	Ⓔ	I	L	L	L	*1	H	H	H	H	H	L	L
A MUTE	Ⓕ	O (O.D.)	L	L	L	*1	L	L	L	L	L	H	L
AF REC P	Ⓖ	O	L	L	L	L	L	L	L	L	L	H	L
AF SWP	Ⓖ	O	*1	*1	*1	*1	*1	*1	*1	*1	*1	*1	*1

- \*1. 30 Hz, 50 % duty pulse approx. 5 msec delayed from RF SW P.



## 5-5. SERVO/SYSTEM CONTROL MICROPROCESSOR PIN FUNCTIONS (MA-336 BOARD IC201)

Pin No.	Pin Name	I/O	Function
1	REC PRF	I	Erasing protection tab. cassette in detection.
2	AVSS		Analog circuit ground
3	KEY1	I (A/D)	Analog voltage (KEY) input 1.
4	KEY2	I (A/D)	Analog voltage (KEY) input 2.
5	KEY3	I (A/D)	Analog voltage (KEY) input 3.
6	KEY4	I (A/D)	Analog voltage (KEY) input 4.
7	DEST2	I (A/D)	Destination discrimination input 2
8	V SWP ADJ	I (A/D)	Video switching position adjustment
9	A SWP ADJ	I (A/D)	Audio switching position adjustment
10	DEST	I (A/D)	Destination discrimination input 1
11	S SENS	I (A/D)	Supply side end sensor input
12	T SENS	I (A/D)	Take-up side end sensor input
13	VIDEO RF	I (A/D)	Video RF envelope input
14	AUDIO RF	I (A/D)	HiFi audio envelope input
15	AVCC		Analog circuit power supply
16	RESET	I	Reset signal input
17	REC P	O	HiFi pre-amp, linear audio REC bias. REC PAUSE: L.
18	NTSC	O	Video IC NTSC: H, PAL: L
19	KILL IN	I	Video IC
20	SHARPCONT1	O	SHARPNESNESS control H: Active
21	AU MUTE	O	Video IC Mute on: H, Mute off: L
22	VCC		Power supply
23	AF SWP	O	AF switching pulse output
24	RF SWP	O	RF switching pulse output
25	CAP VS	O	Capstan error output
26	DRUM VS	O	Drum error output
27	QVD	O	Quasi VD pulse output
28	NC		Not connected
29	SHARPCONT2	O	SHARPNESNESS control H: Active
30	NC		Not connected
31	CTL (+)	I/O	CTL signal I/O
32	CTL (-)	I/O	CTL signal I/O
33	VSS (SERVO)		Servo circuit ground
34	CTLI-1		CTL amp control output
35	CTLI-2		CTL amp control input
36	CTLI-3		CTL amp control output
37	CTLAMP		CTL amp output
38	DRUM FG	I	Drum FG input
39	DRUM PG	I	Drum PG input
40	CAP FG	I	Capstan FG input
41	VCC (SERVO)		Servo circuit power supply
42	VCC (OSD)		OSD circuit power supply
43	CVIN	I	Video signal input for character generator
44	VREF		
45	CVOUT	O	Video signal output from character generator
46	CHAR. BIAS		External character brightness level input
47	AFC LPF		AFC LPF pin input
48	AFC OSC		AFC oscillator pin input
49	VSS(OSD)		OSD circuit ground
50	DOSC IN	I	DOSC IN

Pin No.	Pin Name	I/O	Function
51	DOSC OUT	O	DOSC OUT
52	2FSC	O	2FSC
53	2FSC IN	I	2FSC IN
54	CSYNC	I	Composite sync. signal input
55	CAP RVS	O	Capstan reverse control signal in FWD: H, REV: L
56	TRACK. LED	O	Auto tracking LED On: H, Off: L
57	C. IN LED	O	Cassette in LED On: H, Off: L
58	AMS	I	Auto music search
59	SUR. CONT1	O	Surround control signal output 1
60	SUR. CONT2	O	Surround control signal output 2
61	SUR. CONT3	O	Surround control signal output 3
62	MODE1	I	Mechanism CAM encoder input 1
63	MODE2	I	Mechanism CAM encoder input 2
64	MODE3	I	Mechanism CAM encoder input 3
65	MODE4	I	Mechanism CAM encoder input 4
66	CAP TRQ PWM	O (PWM)	Capstan torque PWM output
67	POWER LED	O	Power LED control On: H, Off: L
68	TEST		Not used. Connected to ground.
69	32 kHz (IN)	I	32 kHz clock terminal
70	32 kHz (OUT)	O	32 kHz clock terminal
71	VSS		Ground
72	10 MHz (IN)	I	10MHz clock terminal
73	10 MHz (OUT)	O	10MHz clock terminal
74	END LED	O	LED pulse drive
75	DNS 1 LED	O	LED On: L, Off: H
76	DNS 2 LED	O	LED On: L, Off: H
77	DNS 3 LED	O	LED On: L, Off: H
78	DNS 4 LED	O	LED On: L, Off: H
79	DNS 5 LED	O	LED On: L, Off: H
80	MESECAM DET, TV/VTR	I/O	SECAM IC RF converter/TV/VTR select
81	REC LED	O	REC LED On: H, Off: L
82	SIRCS	I	SIRCS signal input
83	HF LED	O	HiFi LED On: H, Off: L
84	L LED	O	L ch LED On: H, Off: L
85	R LED	O	R ch LED On: H, Off: L
86	SUR LED-SYNC REC	O	Surround/SYNC REC LED On: H, Off: L
87	SHARPNESS LED	O	SHARPNESS LED On: H, Off: L
88	T REEL	I	Take-up reel FG input
89	S REEL	I	Supply reel FG input
90	PB	O	Play mode: L
91	LINE1	O	LINE 1 select
92	ADJ-B	I	PICTURE CONTROL signal input
93	ADJ-A	I	PICTURE CONTROL signal input
94	SHARPNESS VR	O	Video IC Sharpness Voltage
95	CAM	O (3 VALUES)	CAM motor drive H: Forward, M: Brake, L: Reverse
96	CAP QR	O	Capstan motor
97	AF CLK	O	I2C-bus clock(HiFi)
98	AF DATA	O	I2C-bus data(HiFi)
99	V CLK	O	I2C-bus clock(Video)
100	V DATA	O	I2C-bus data(Video)

## SECTION 6 ADJUSTMENTS

### 6-1 MECHANICAL ADJUSTMENTS

For the mechanical adjustments, please refer to the "VHS MECHANICAL ADJUSTMENT MANUAL VI (S MECHANISM)" (9-921-647-11).

### 6-2. ELECTRICAL ADJUSTMENTS

See the adjusting part location diagram from on page 6-6 for the adjustment.

#### 2-1. PREPARATION BEFORE ADJUSTMENT

##### 2-1-1. Equipment Required

The measuring instruments used for this alignment include:

- 1) Monitor TV
- 2) Oscilloscope, dual-trace, bandwidth of 30 MHz or more, with delay mode (A probe 10:1 should be used unless otherwise specified.)
- 3) Frequency counter
- 4) NTSC Pattern generator
- 5) PAL Pattern generator
- 6) Digital voltmeter
- 7) Audio generator
- 8) Audio level meter
- 9) Audio attenuator
- 10) Alignment tapes  
 KRV-51P (PAL) Part No. : 8-192-605-36  
 KRV-51N2 (NTSC) Part No. : 8-192-605-32

##### 2-1-2. Equipment Connection

Unless otherwise specified, connect and adjust the measuring instruments as shown in the following diagram.

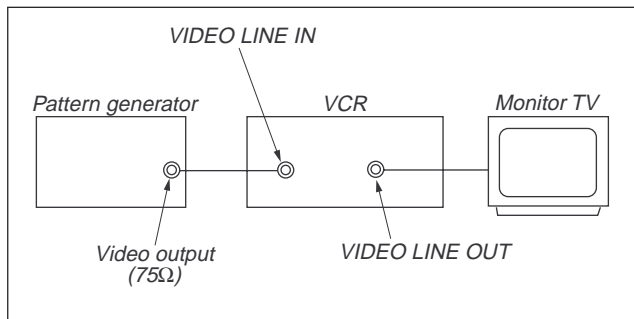


Fig. 6-2-1

##### 2-1-3. Set-up of Adjustment

In this adjustment, PAL or NTSC pattern generator is connected with LINE input terminal. When check to tuner, connected AERIAL terminal. Check that the synchronizing signal of the Y signal has an amplitude of approximately 0.7 V and that the burst signal has an amplitude of approximately 0.3 V and its waveform is flat. And check that the level ratio of burst signal to "red" signal is 0.30 : 0.66. The video signal (color bar) used for electrical aligning this unit is shown in Fig. 6-2-2.

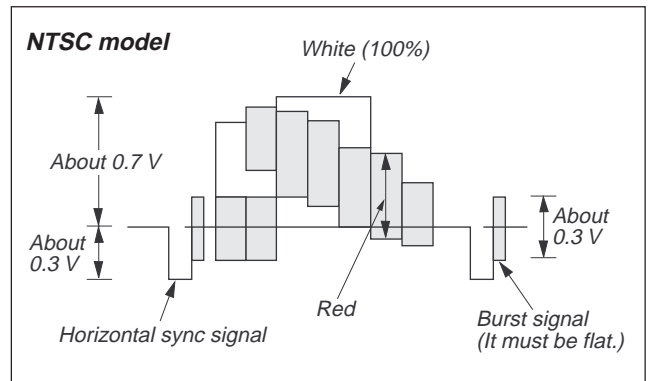
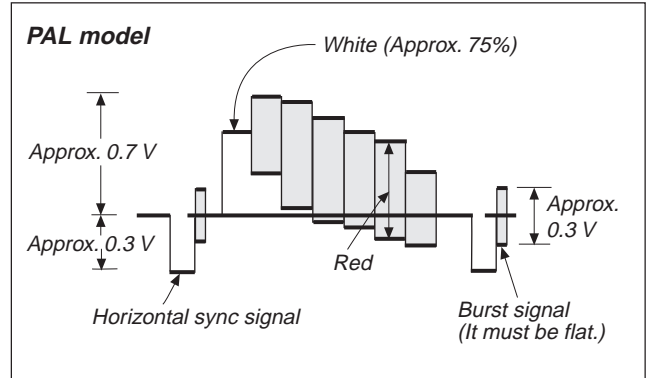


Fig. 6-2-2 Color Bar Signals of Pattern Generator

##### 2-1-4. Alignment Tape

• Contents of KRV-51N2/51P

	Mode	Period	Video signal	Audio signal	
				Hi-Fi	Normal
1	SP	7 minutes	Color bar	400Hz (L/R)	400Hz
2		3 minutes	Monoscope		
3	LP	7 minutes	Color bar		
4		3 minutes	Monoscope		

### 2-1-5. Input/Output Levels and Impedance

Video input: LINE IN

Input signal: 1 V<sub>p-p</sub>, 75 ohms, unbalanced, sync negative

Video output: LINE OUT

Output signal: 1 V<sub>p-p</sub>, 75 ohms, unbalanced, sync negative

Audio input: LINE IN

Input level: -7.5 dBs  
(0 dBs= 0.775 V<sub>rms</sub>)

Input impedance: more than 47 kilohms


Audio output: LINE OUT

Standard level: -7.5 dBs at load impedance 47 kilohms

Output impedance: less than 10 kilohms

### 2-1-6. Adjustment Sequence

The adjustments should be performed in the following sequence.

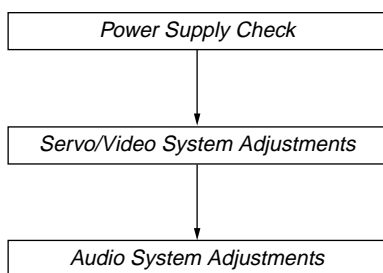

## 2-2. POWER SUPPLY CHECK

### 2-2-1. Output Voltage Check (MA-336 Board)

Mode	E-E
Measuring Instrument	Digital voltmeter
+12 V Check	
Measurement point	CN201 pin ⑩
Specified value	11.5 –13.0 V
+5 V Check	
MP	CN206 pin ⑬
SV	5.0 –5.6 V
+9 V Check	
MP	Emitter of Q961
SV	8.5 –10.0 V
MTR12 V Check	
Measurement point	CN204 pin ④
Specified value	11.5 –13.0 V

#### [Check Method]

- 1) Each of these supply voltages must meet its specified value.

## 2-3. SERVO SYSTEM CHECK

### 2-3-1. RF Switching Position Adjustment (MA-336 Board)

#### [Adjustment Purpose]

To adjust the link of the A-ch and B-ch of the tape playback outputs. To make the unit compatible with other tapes and units. If this specification is not satisfied, the link will appear on the screen and the screen will be disrupted, etc.

Mode	Playback
Signal	Alignment tape: SP color bar portion
Measurement point	CH1: Video LINE OUT (75 Ω terminated) (AF switching position) CH2: CN101 pin ③ (V SWP)
Measuring instrument	Oscilloscope
Adjusting element	RV202
Specified value	6.5 ± 1 H (413 ± 60 μsec): NTSC 6.5 ± 1 H (416 ± 32 μsec): PAL

#### [Adjustment Method]

- 1) Playback the alignment tape.
- 2) Short-circuit between pins ① and ② of CN210.
- 3) Check that "RF" is indicated on FL display.
- 4) Check that switching position is 6.5 ± 1 H.
- 5) If not meet the specified value, turn RV202 and repeat steps 1) to 3).

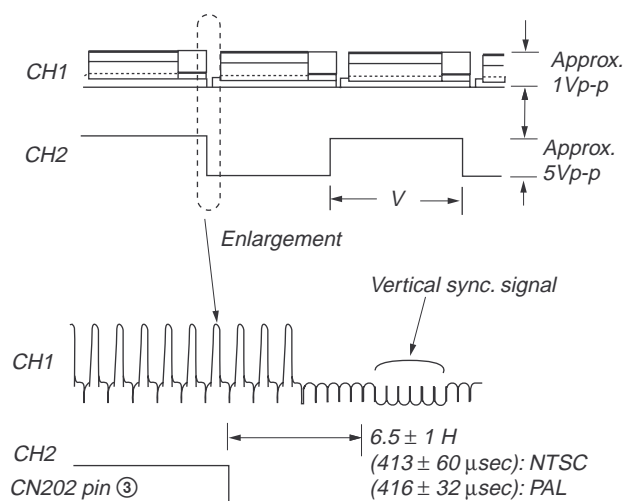


Fig. 6-2-3

## 2-4. AUDIO SYSTEM ADJUSTMENT

- Adjust both L ch and R ch.

#### [Connecting Instruments]

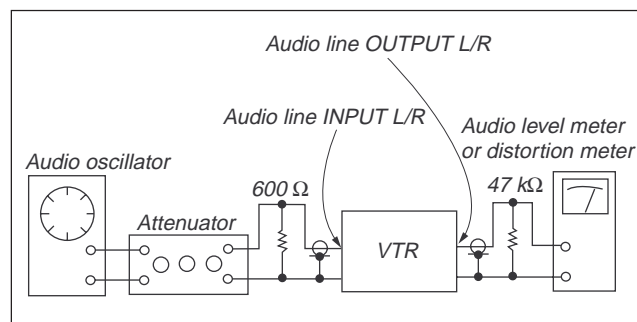


Fig. 6-2-4

### 2-4-1. Hi-Fi Audio System Adjustment (Hi-Fi model only)

- Perform the adjustment setting the switch on the following positions.
- AUDIO MONITOR ..... STEREO

#### [Adjustment Method]

1. ACE head adjustment....Refer to the VHS mechanical adjustment manual VI (S MECHANISM)(9-921-647-11).
2. E-E output level check
3. "Recording Bias Adjustment"

## 1. AF Switching Position Adjustment (MA-336 Board)

### [Adjustment Purpose]

To adjust the link of the A-ch and B-ch of the tape playback outputs. To make the unit compatible with other tapes and units. If this specification is not satisfied, the link will appear on the screen and the screen will be disrupted, etc.

Mode	Playback
Signal	Alignment tape: SP color bar portion
Measurement point	CH1: Pin ③ of CN101 CH2: Pin ① of CN101
Measuring instrument	Oscilloscope
Adjusting element	RV201
Specified value	Fig. 6-2-5

### [Adjustment Method]

- 1) Playback the alignment tape.
- 2) Short-circuit between pins ① and ② of CN210.
- 3) Adjust RV201 to minimize a chipped portion. At this time, confirm that a noisy sound is not heard.

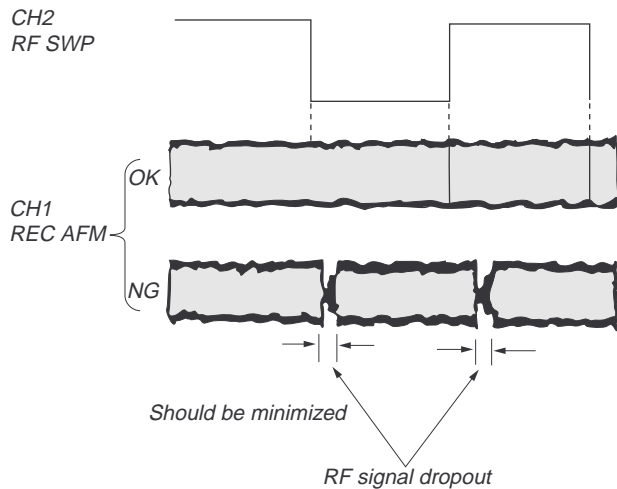


Fig. 6-2-5

## 2-4-2. Normal Audio System Adjustment

- Make adjustment in the SP mode unless otherwise specified. Use a normal VHS cassette for an adjustment tape.
- Set AUDIO MONITOR to normal.

### 1. ACE Head Adjustment

Refer to the VHS mechanical adjustment manual VI (S MECHANISM) (9-921-647-11).

### 2. E-E Output Level Check

#### [Adjustment purpose]

Confirm that the output level adjust the reference input is within the specification.

Mode	E-E
Signal	400 Hz, $-7.5$ dBs
Measurement point	CJ461 L/R
Measuring instrument	Audio level meter
Specified value	$-7.5 \pm 2$ dBs

#### [Check Method]

- 1) Input signal of 400 Hz and  $-7.5$  dBs to the CJ461 L/R.
- 2) Check that the audio output level is  $-7.5 \pm 2$  dBs.

### 3. Recording Bias Check

#### [Adjustment purpose]

Confirm that the frequency characteristic is within the specification.

Mode	REC and PB (SP mode)
Signal	400 Hz, $-27.5$ dBs 7 kHz, $-27.5$ dBs
Measurement point	Audio output terminal
Measuring instrument	Audio level meter
Specified value	$0 \pm 3$ dB


**Note:** Tape path adjustment must have been completed.

#### [Confirmation Method]

- 1) Supply a signal of 400 Hz,  $-27.5$  dBs to both L and R channels of Audio Line Input.
- 2) Connect the audio level meter to the Audio Line Output.
- 3) Adjust the attenuator so that the audio level meter will indicate  $-27.5$  dBs.
- 4) Make recording in the SP mode.
- 5) Set an audio line input signal to 7 kHz and make recording.
- 6) Playback a recorded portion, and measure output levels at 400 Hz and 7 kHz.
- 7) Confirm that the 7 kHz playback output level within a range of the 400 Hz playback output level  $0 \pm 3$  dB.

2-5. ADJUSTING PARTS LOCATION DIAGRAM

MA-336 BOARD  
(CONDUCTOR SIDE)

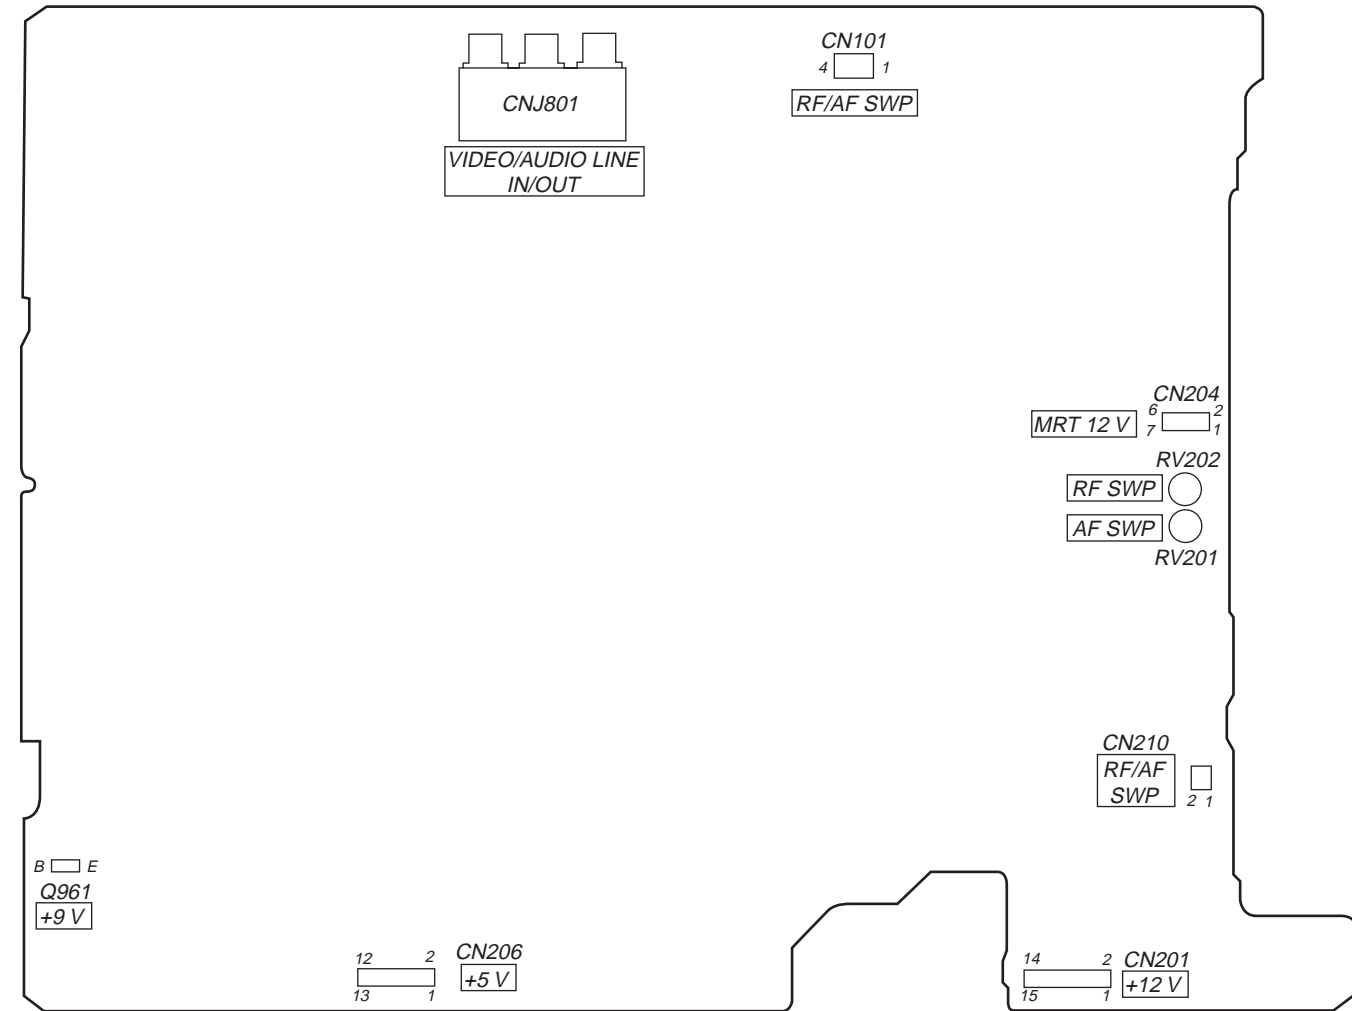





SECTION 7  
REPAIR PARTS LIST

7-1. EXPLODED VIEWS


NOTE:

- XX, -X mean standardized parts, so they may have some differences from the original one.
- Items marked "\*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

- The mechanical parts with no reference number in the exploded views are not supplied.

The components identified by mark  $\Delta$  or dotted line with mark  $\Delta$  are critical for safety. Replace only with part number specified.


7-1-1. FRONT PANEL AND UPPER CASE SECTION

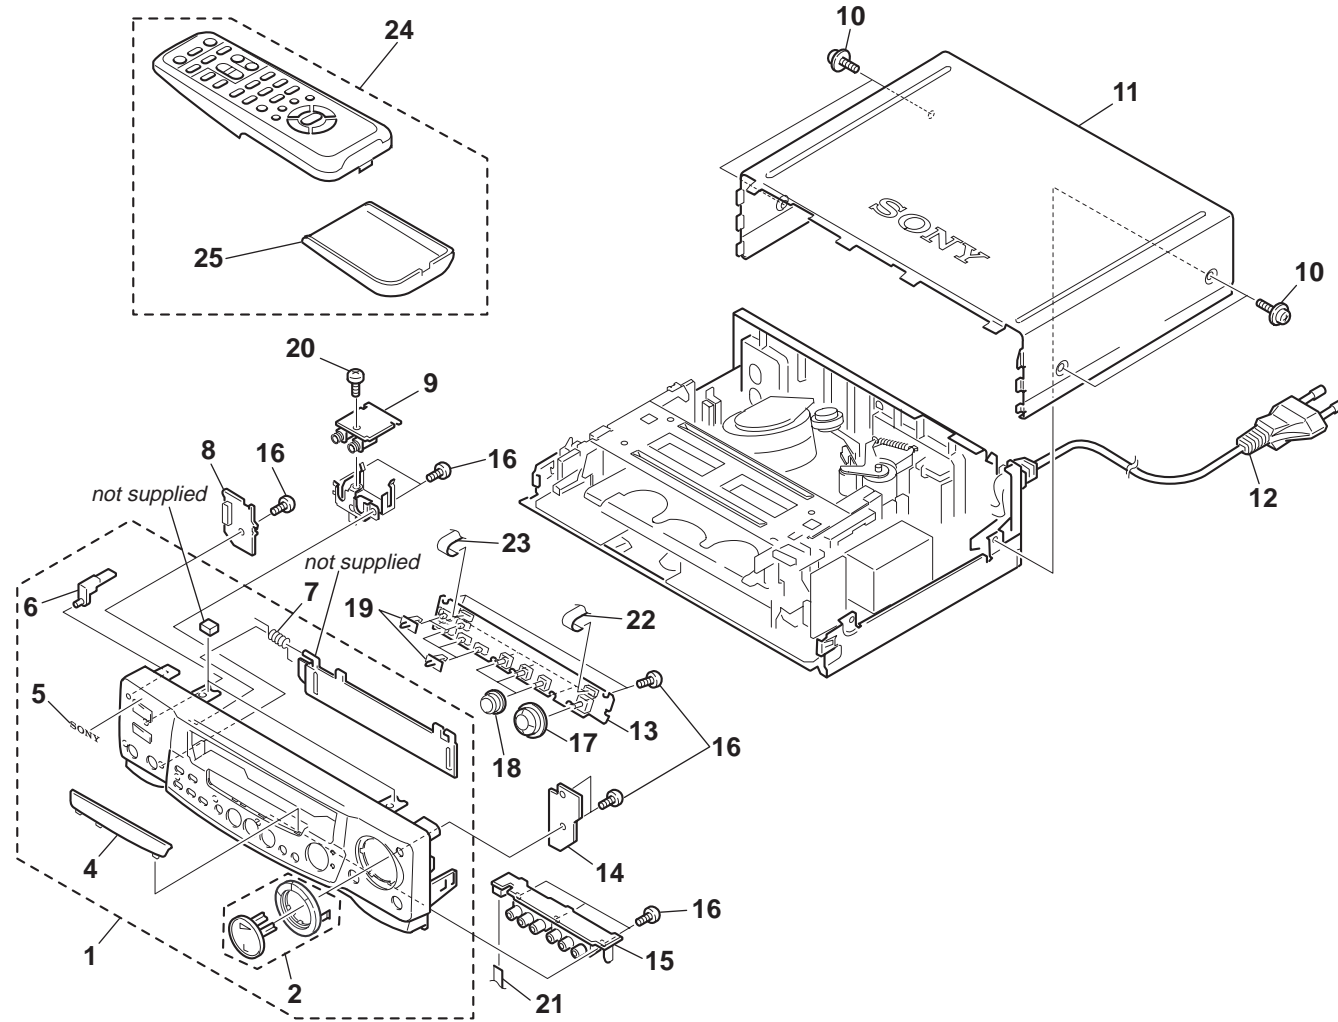

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
1	X-3949-071-2	PANEL ASSY, FRONT (GF77K)		* 13	A-6794-609-A	FR-142 BOARD, COMPLETE(GA60)	
1	X-3949-082-2	PANEL ASSY FRONT (GA60)		* 13	A-6794-637-A	FR-142 BOARD, COMPLETE(GF90K)	
1	X-3949-145-1	PANEL ASSY, FRONT (GF90K)		* 14	A-6794-615-A	FR-141 BOARD, COMPLETE(GA30/GA40K)	
1	X-3949-190-1	FRONT PANEL, ASSY (GA30)		* 14	A-6794-636-A	FR-141 BOARD, COMPLETE (GA60/GA77K/GF90K)	
1	X-3949-191-1	FRONT PANEL, ASSY (GA40K)		* 15	A-6794-639-A	JK-166 BOARD, COMPLETE (GF90K)	
2	X-3949-088-1	BUTTON ASSY, FUNCTION (GA40K/GA77K/GF90K)		* 15	A-6794-641-A	JK-166 BOARD, COMPLETE (GA77K)	
2	X-3946-598-1	BUTTON ASSY, FUNCTION (GA30/GA60)		16	4-921-277-41	SCREW (B2.6 x 8), TAPPING, BIND	
4	3-051-651-11	PLATE, FROSTED (GA40K/GA60/GA77K)		17	3-051-664-01	WHEEL, ROTARY (GA77K/GF90K)	
4	3-051-651-21	PLATE, FROSTED(GA30/GF90K)		17	3-051-664-11	WHEEL, ROTARY (GA30/GA40K/GA60)	
5	3-943-995-01	EMBLEM (NO.5), SONY		18	3-051-663-01	KNOB, ROTARY (GA77K/GF90K)	
6	3-051-653-01	LENS,POWER		18	3-051-663-11	KNOB, ROTARY (GA40K)	
7	3-953-432-01	SPRING (GE), FL		19	3-051-662-01	KNOB, SLIDE (GA77K/GF90K)	
* 8	A-6794-591-A	FR-140 BOARD, COMPLETE (GA30/GA40K)		19	3-051-662-11	KNOB, SLIDE (GA30/GA40K/GA60)	
* 8	A-6794-635-A	FR-140 BOARD, COMPLETE (GA60/GA77K/GF90K)		20	3-970-608-21	SUMITITE (B3), +BV	
* 9	A-6794-584-A	MJ-91 BOARD, COMPLETE (GA40K)		21	1-790-118-11	CABLE, FLAT (FJK-1) (GA77K/GF90K)	
* 9	A-6794-638-A	MJ-91 BOARD, COMPLETE (GA77K/GF90K)		22	1-790-119-11	CABLE, FLAT (FFR-6)	
10	3-710-901-01	SCREW, TAPPING (GA77K/GF90K)		23	1-790-120-11	CABLE, FLAT (FFR-7)	
10	3-710-901-11	SCREW, TAPPING(GA30/GA40K/GA60)		24	1-418-060-11	COMMANDER, STANDARD (RMT-V254) (GA60/GA77K/GF90K)	
11	3-053-078-31	CASE, UPPER (GA77K/GF90K)		24	1-418-060-21	COMMANDER, STANDARD(RMT-V254A) (GA30/GA40K)	
11	3-053-078-41	CASE, UPPER (GA30/GA40K/GA60)		25	3-709-269-01	LID, BATTERY CASE (FOR REMOTE COMMANDER)	
$\Delta$ 12	1-777-851-41	CORD, POWER (GA60/GA77K/GF90K)					
$\Delta$ 12	1-777-956-11	CORD, POWER (GA30/GA40K)					
* 13	A-6794-596-A	FR-142 BOARD, COMPLETE(GA77K)					
* 13	A-6794-597-A	FR-142 BOARD, COMPLETE(GA30)					
* 13	A-6794-598-A	FR-142 BOARD, COMPLETE(GA40K)					


**Note :** The components identified by mark  $\Delta$  or dotted line with mark  $\Delta$  are critical for safety. Replace only with part number specified.

7-1-2. CHASSIS SECTION

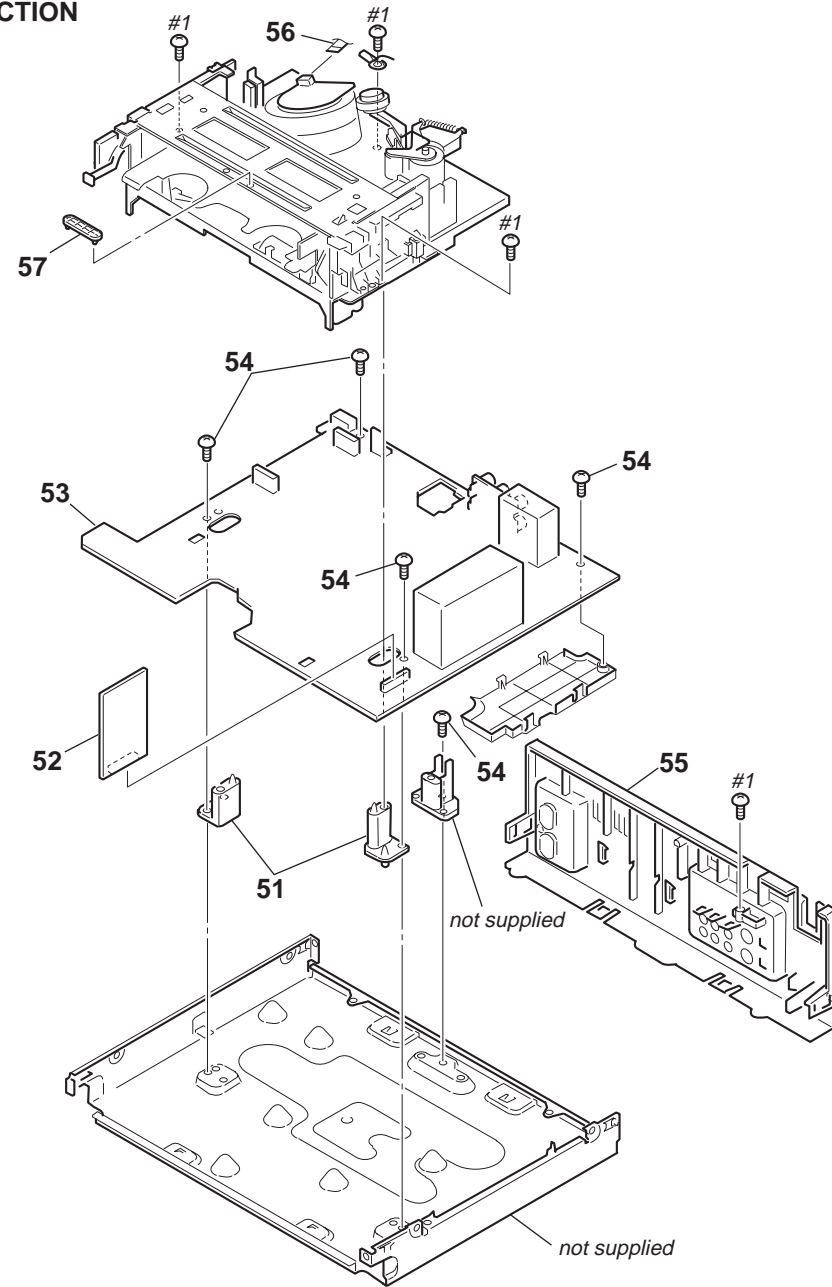


Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
* 51	3-959-383-01	BASE (R), MD		* 53	A-6791-728-A	MA-336 BOARD, COMPLETE (GF90K)	
* 52	A-6794-642-A	SR-35 BOARD, COMPLETE (GA77K)		54	3-970-608-21	SUMITITE (B3), +BV	
* 53	A-6791-708-A	MA-336 BOARD, COMPLETE (GA30)		55	3-052-070-01	PANEL (M) REAR (GA60/GA77K/GF90K)	
* 53	A-6791-709-A	MA-336 BOARD, COMPLETE (GA40K)		55	3-052-070-41	PANEL (M) REAR (GA30/GA40K)	
* 53	A-6791-714-A	MA-336 BOARD, COMPLETE (GA60)		56	1-790-117-11	CABLE, FLAT (FDM-5)	
* 53	A-6791-725-A	MA-336 BOARD, COMPLETE (GA77K)		57	3-987-560-02	PLATE, TOP, FL	

7-1-3. MECHANISM DECK SECTION-1

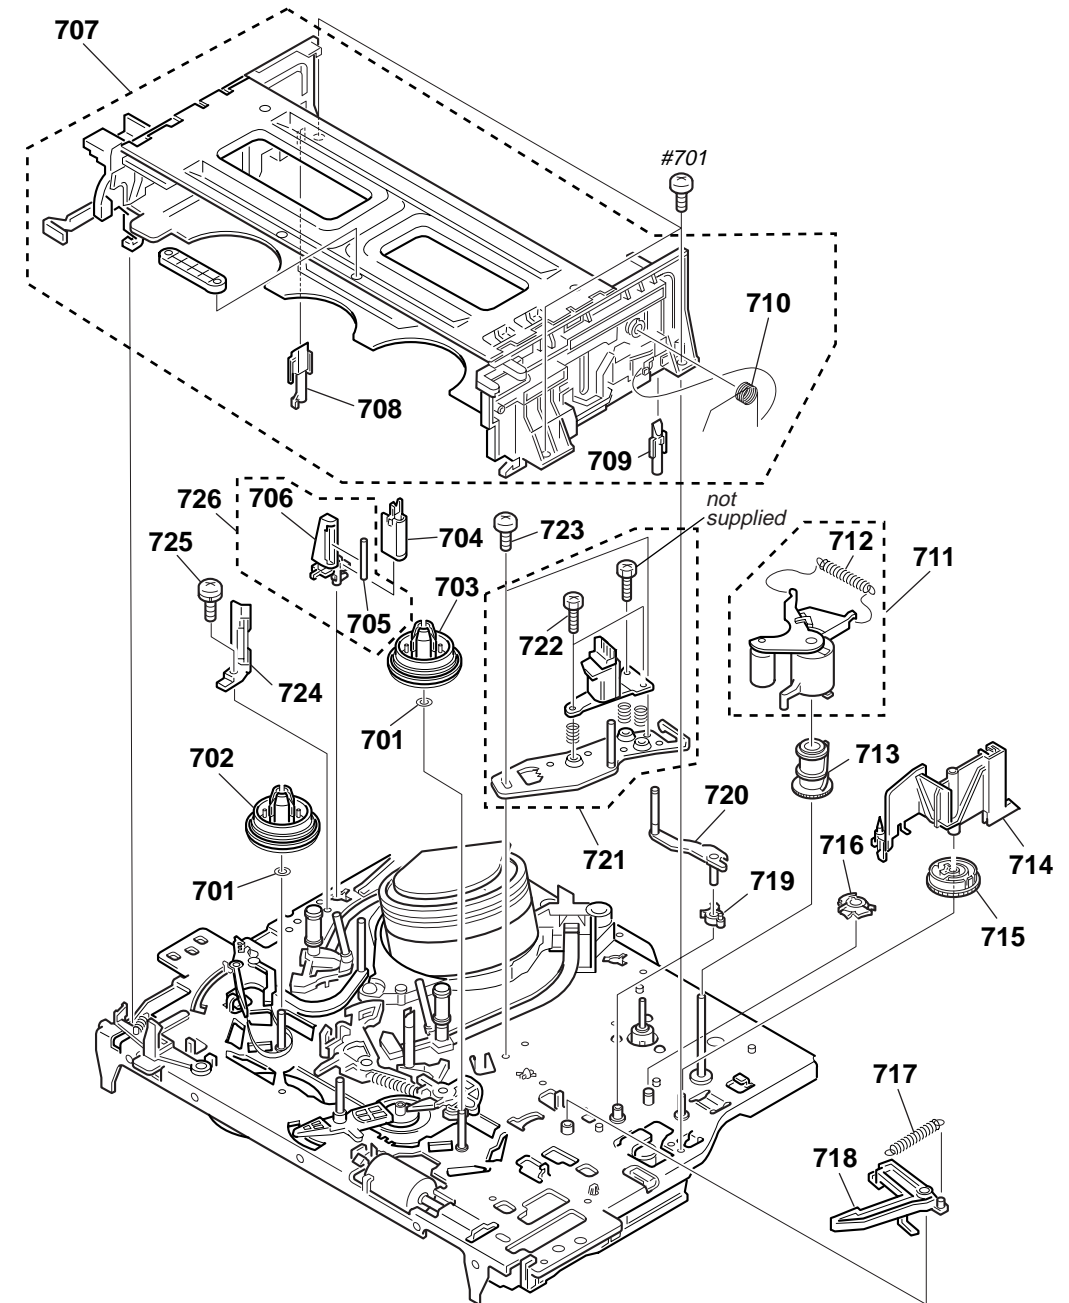


Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
701	3-977-509-01	WASHER, THRUST		714	3-977-514-01	OPENER, LID	
702	3-977-507-01	TABLE, REEL (S)		715	3-977-441-01	GEAR, PINCH PRESSING	
703	3-977-508-01	TABLE, REEL (T)		716	3-977-445-01	GEAR, TG8 ARM DRIVING	
704	1-500-144-11	HEAD, FE (GA60/GA77K/GF90K)		717	3-977-465-01	SPRING, EXTENSION (RVS BRAKE)	
705	3-977-495-01	SHAFT TG2		718	X-3947-582-1	ARM ASSY, RVS BRAKE	
706	3-977-494-01	HOLDER, FEH		719	3-977-446-01	GEAR, TG8 ARM	
707	A-6759-619-B	FLCOMPLETE ASSY		720	X-3947-590-1	TGBASSY	
708	3-977-535-01	PLATE, LUMINOUS (END SENSOR)		721	A-6759-620-A	HEAD BLOCK ASSY, ACE (TDK)	
709	3-977-536-01	PLATE, LUMINOUS (TOP SENSOR)		722	3-974-556-01	+HEXA TT 2.6 x 9 (TAPER)	
710	3-970-471-01	SPRING (DECK OPEN), TORSION		723	3-979-508-01	SCREW +HEXA TP SW 3X8	
711	A-6759-615-A	PRESS BLOCK ASSY, PINCH		724	X-3947-568-1	TC(N17S) ASSY	
712	3-958-455-01	SPRING (PINCH), TENSION		725	3-979-112-01	SCREW SW(+)BVTP 3 x 10	
713	3-977-447-01	GEAR, ELEVATOR		726	X-3947-817-1	FEH ASSY (PLAYER) (GA30/GA40K)	

### 7-1-4. MECHANISM DECK SECTION-2

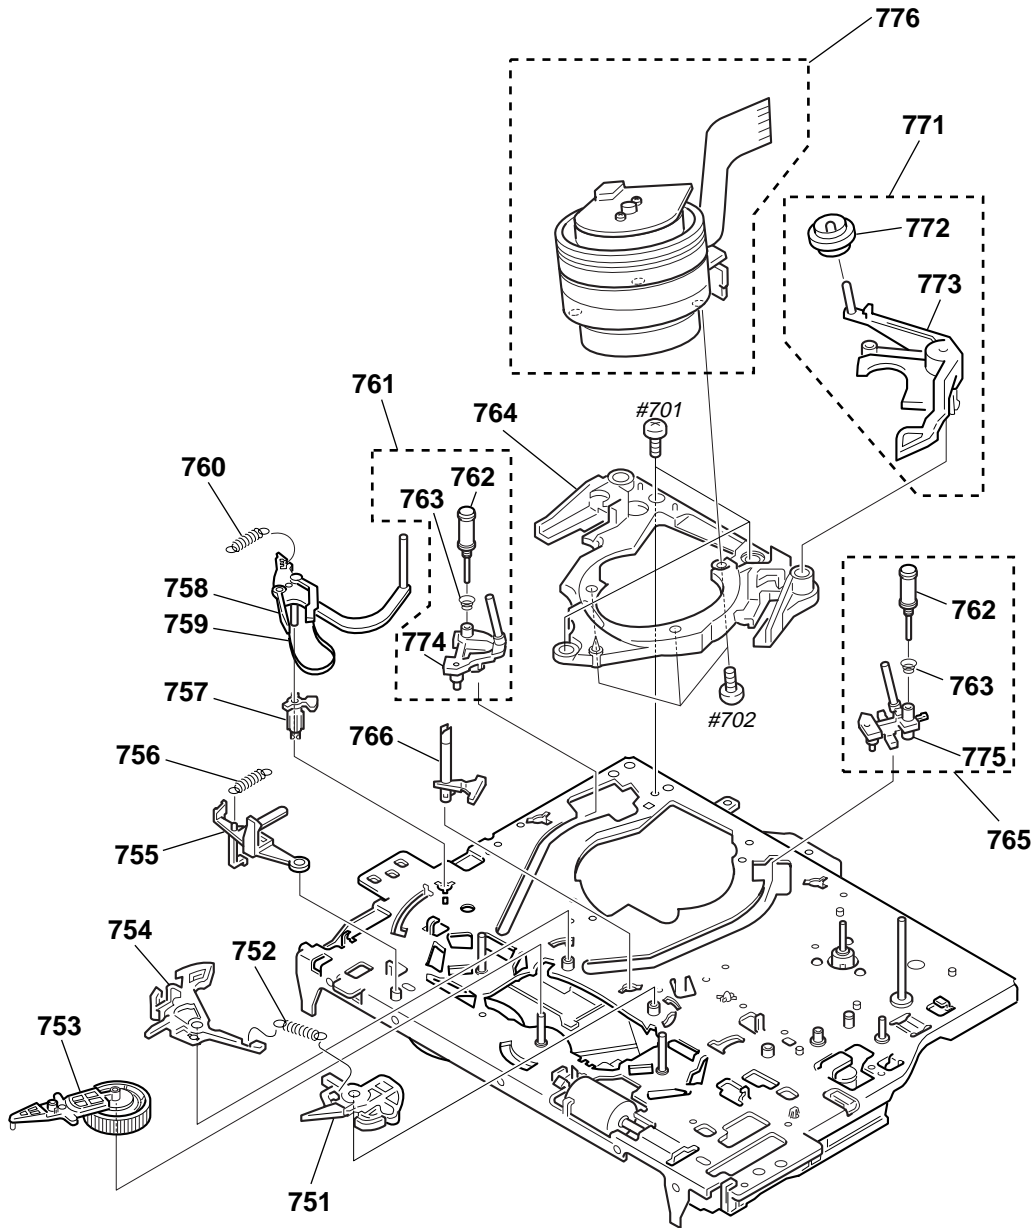

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
751	X-3947-581-1	BRAKE ASSY,MAIN(T)		763	3-965-178-01	SPRING	
752	3-977-462-01	SPRING,EXTENTION. (MAIN BRAKE)		764	3-969-632-04	BASE, DRUM	
753	X-3947-573-1	ARMASSY, PENDULUM		765	A-6750-328-E	SHUTTLE (T) BLOCK ASSY	
754	X-3947-580-2	BRAKE ASSY, MAIN(S)		766	3-977-501-01	PLATE, LUMINOUS	
755	3-977-513-02	LEVER, REC. PROOF		771	A-6746-074-G	ROLLER BLOCK ASSY, HC	
756	3-976-767-01	SPRING, TENS. (REC. PROOF)		772	X-3947-255-1	ROLLER ASSY, HC	
757	3-977-487-01	BOSS, TG1 FULCRUM		773	3-975-724-07	ARM, HC	
758	X-3947-587-1	TG1ASSY		774	X-3946-855-1	SHUTTLE (S) ASSY	
759	X-3947-589-1	BAND ASSY, TG1		775	X-3946-856-1	SHUTTLE (T) ASSY	
760	3-977-488-01	SPRING (POWER TENSION)		776	1-759-449-11	DRUM ASSY, DZH-91A-R (GF90K)	
761	A-6750-324-A	SHUTTLE (S) BLOCK ASSY		776	1-759-453-11	DRUM ASSY, DZH-89A-R (GA60/GA77K)	
762	X-3944-378-1	ROLLER ASSY, GUIDE		776	1-759-455-11	DRUM ASSY, DZH-71D-R (GA30/GA40K)	

7-1-5. MECHANISM DECK SECTION-3

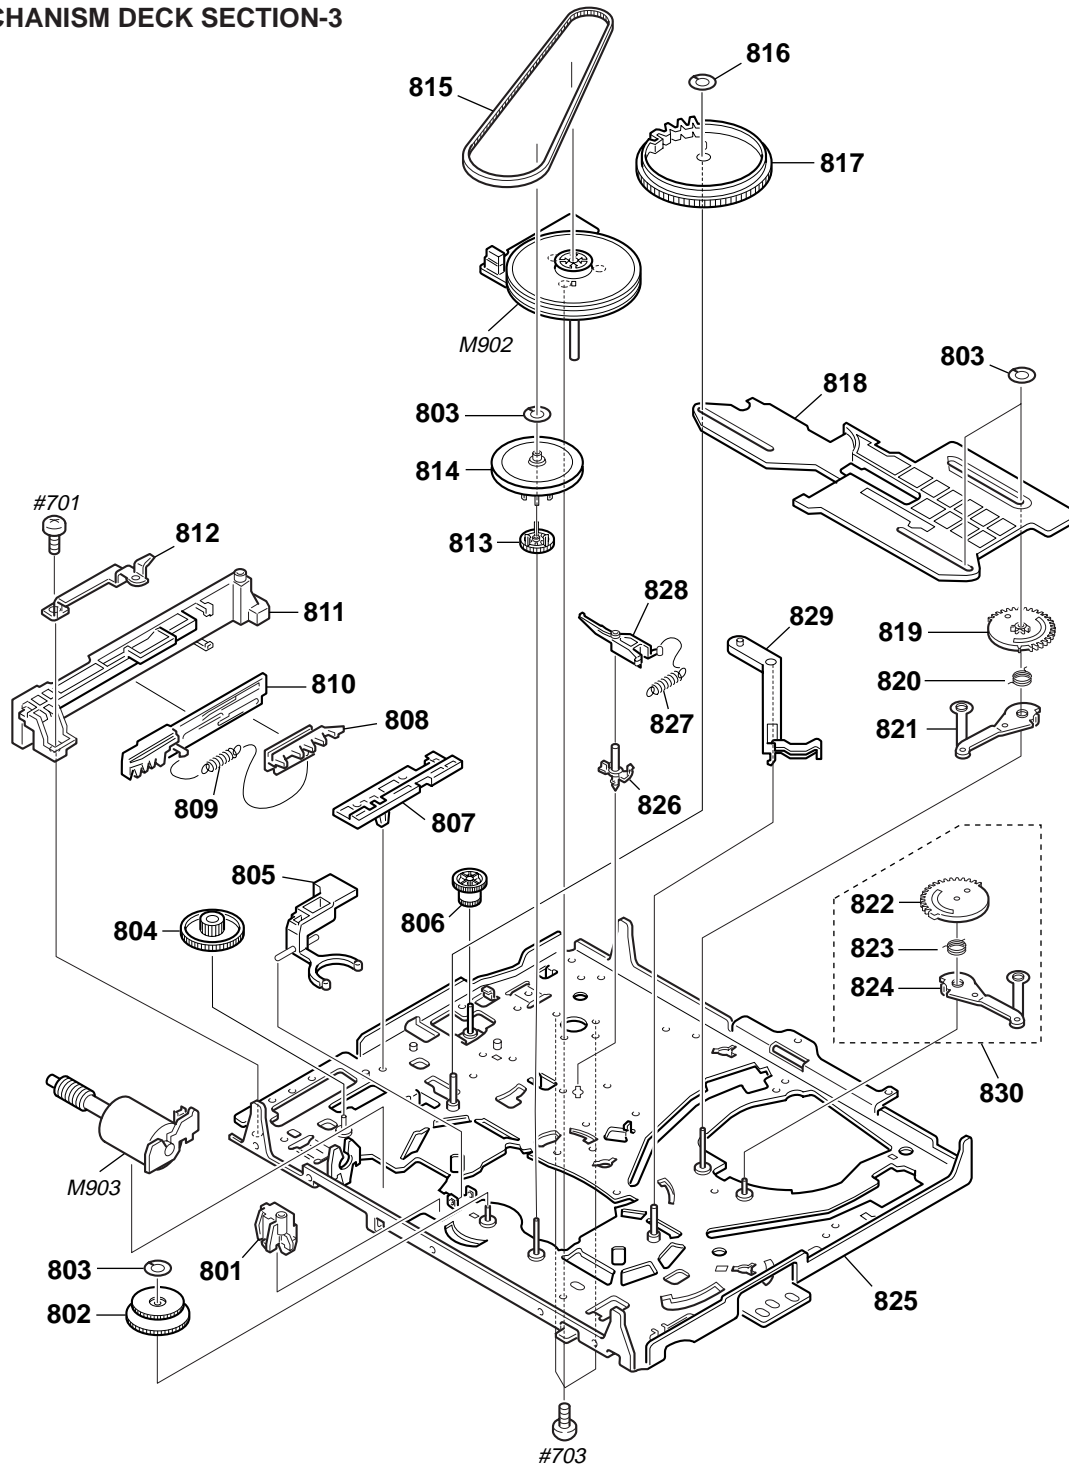

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
801	3-977-437-01	RETAINER,CAM MOTOR		817	3-977-439-01	GEAR, CAM	
802	X-3947-584-1	ASSY, REEL DIRECT		818	3-977-442-01	SLIDER	
803	3-977-443-01	WASHER, STOPPER		819	3-977-455-01	GEAR, LOADING(T)	
804	3-977-438-01	WORM - WHEEL		820	3-977-456-03	SPRING, TORSION (LOAD T)	
805	3-977-506-01	ARM, LIMITTER SELECTION		821	X-3947-579-1	LEVER ASSY, LOADING(T)	
806	3-977-444-01	GEAR, PINCH TRANSMISSION		822	3-977-451-01	GEAR, LOADING(S)	
807	3-977-515-01	GUIDE, FL SLIDER		823	3-977-452-01	SPRING, TORSION (LOAD S)	
808	3-977-517-01	PLATE, SLIDE, FL		824	X-3947-578-1	LEVER ASSY, LOADING(S)	
809	3-977-519-01	SPRING, TENS. (LIMIT, FL)		825	X-3947-576-2	CHASSIS ASSY, MECHANICAL	
810	3-977-518-02	PLATE, LIMITTER, FL		826	3-977-468-01	SHAFT, CAPSTAN BRAKE	
811	3-977-516-01	HOLDER, FL SLIDER		827	3-977-467-02	SPRING, CAP BRAKE	
812	3-977-877-01	PLATE, RETAINER		828	X-3947-583-1	BRAKE ASSY, CAPSTAN	
813	3-977-504-01	GEAR, CLUTCH		829	3-977-489-01	ARM, TG1 DRIVING	
814	X-3947-585-1	GEAR ASSY, PULLEY		830	A-6759-616-A	GEAR BLOCK ASSY, LOADING(S)	
815	3-977-510-01	BELT, RUBBER		M902	1-698-971-11	MOTOR, DC(CAPSTAN)	
816	3-977-440-01	WASHER, STOPPER		M903	X-3947-577-1	MOTOR ASSY, CAM	

## 7-2. ELECTRICAL PARTS LIST

### NOTE:

- Due to standardization, replacements in the parts list may be different from the parts specified in the diagrams or the components used on the set.
- -XX, -X mean standardized parts, so they may have some difference from the original one.
- Items marked "\*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

- CAPACITORS:  
uF:  $\mu$ F
- RESISTORS  
All resistors are in ohms.  
METAL: metal-film resistor  
METAL OXIDE: Metal Oxide-film resistor  
F: nonflammable
- COILS  
uH:  $\mu$ H

- SEMICONDUCTORS  
In each case, u:  $\mu$ , for example:  
uA...:  $\mu$ A... , uPA... ,  $\mu$ PA... ,  
uPB... ,  $\mu$ PB... , uPC... ,  $\mu$ PC... ,  
uPD... ,  $\mu$ PD...

When indicating parts by reference number, please include the board name.

The components identified by mark  $\Delta$  or dotted line with mark  $\Delta$  are critical for safety. Replace only with part number specified.

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
*	A-6794-591-A	FR-140 BOARD, COMPLETE (GA30/GA40K) *****				< RESISTOR >	
*	A-6794-635-A	FR-140 BOARD, COMPLETE ***** (GA60/GA77K/GF90K) (Ref.No.: 1,000 Series)		R606	1-216-055-00	METAL CHIP 1.8K 5% 1/10W	
				R607	1-216-057-00	METAL CHIP 2.2K 5% 1/10W	
				R616	1-216-063-91	RES,CHIP 3.9K 5% 1/10W	
				R642	1-216-035-00	METAL CHIP 270 5% 1/10W	(EXCEPT GA30/GA40K)
						< SWITCH >	
		< CONNECTOR >		S606	1-571-977-11	SWITCH, TACTIL (STOP)	
* CN605	1-564-004-11	PIN, CONNECTOR 5P		S607	1-571-977-11	SWITCH, TACTIL (PLAY)	
		< DIODE >		S608	1-571-977-11	SWITCH, TACTIL (FF)	
D601	8-719-064-11	DIODE SPR-325MVW		S609	1-571-977-11	SWITCH, TACTIL (REW)	
		< TRANSISTOR >		S620	1-571-977-11	SWITCH, TACTIL (SYNCHRO REC)	(EXCEPT GA30/GA40K)
Q601	8-729-901-06	TRANSISTOR DTA144EK					
Q602	8-729-421-19	TRANSISTOR UN2213 (EXCEPT GA30/GA40K)		*	A-6794-596-A	FR-142 BOARD, COMPLETE (GA77K) *****	
		< RESISTOR >		*	A-6794-597-A	FR-142 BOARD, COMPLETE (GA30) *****	
R601	1-216-055-00	METAL CHIP 1.8K 5% 1/10W		*	A-6794-598-A	FR-142 BOARD, COMPLETE (GA40K) *****	
R602	1-216-035-00	METAL CHIP 270 5% 1/10W		*	A-6794-609-A	FR-142 BOARD, COMPLETE (GA60) *****	
R640	1-216-035-00	METAL CHIP 270 5% 1/10W (EXCEPT GA30/GA40K)		*	A-6794-637-A	FR-142 BOARD, COMPLETE (GF90K) *****	(Ref.No.:1,000 Series)
R641	1-216-057-00	METAL CHIP 2.2K 5% 1/10W				< CAPACITOR >	
		< SWITCH >		C505	1-126-157-11	ELECT 10uF 20% 16V (GA40K/GA77K/GF90K)	
S601	1-571-977-11	SWITCH, TACTIL (ON/STANDBY)		C506	1-164-159-21	CERAMIC 0.1uF 50V (GA40K/GA77K/GF90K)	
S602	1-571-977-11	SWITCH, TACTIL (EJECT)		C509	1-126-157-11	ELECT 10uF 20% 16V (GA40K/GA77K/GF90K)	
				C601	1-163-038-00	CERAMIC CHIP 0.1uF 25V	
						< CONNECTOR >	
*	A-6794-615-A	FR-141 BOARD, COMPLETE (GA30/GA40K) *****		CN502	1-506-469-11	PIN, CONNECTOR 4P (GA40K/GA77K/GF90K)	
*	A-6794-636-A	FR-141 BOARD, COMPLETE ***** (GA60/GA77K/GF90K) (Ref.No.:1,000 Series)		CN601	1-691-047-21	HOUSING, CONNECTOR 15P	
		< DIODE >		CN602	1-569-930-11	HOUSING, CONNECTOR 13P	
D602	8-719-045-62	DIODE SLR-342VC-A-47 (EXCEPT GA30/GA40K)					
		< CONNECTOR >					
* CN604	1-564-005-11	PIN, CONNECTOR 6P					

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
		< DIODE >		R612	1-216-057-00	METAL CHIP	2.2K 5% 1/10W
D501	8-719-991-33	DIODE	1SS133T-77 (GA40K/GA77K/GF90K)	R613	1-216-063-91	RES,CHIP	3.9K 5% 1/10W
D502	8-719-991-33	DIODE	1SS133T-77 (GA40K/GA77K/GF90K)	R614	1-216-067-00	METAL CHIP	5.6K 5% 1/10W
D503	8-719-991-33	DIODE	1SS133T-77 (GA40K/GA77K/GF90K)				(GA60/GA77K)
D603	8-719-056-07	DIODE	SLR-342MC3F	R615	1-216-295-00	METAL CHIP	0 5% 1/10W
D604	8-719-056-07	DIODE	SLR-342MC3F	R618	1-216-035-00	METAL CHIP	270 5% 1/10W
D605	8-719-056-07	DIODE	SLR-342MC3F	R619	1-216-035-00	METAL CHIP	270 5% 1/10W
D606	8-719-056-07	DIODE	SLR-342MC3F				(EXCEPT GA30/GA40K)
D607	8-719-056-07	DIODE	SLR-342MC3F	R620	1-216-198-91	RES,CHIP	1K 5% 1/8W
D608	8-719-045-62	DIODE	SLR-342VC-A-47	R621	1-216-035-00	METAL CHIP	270 5% 1/10W
			(EXCEPT GA30/GA40K)				(GF90K)
D609	8-719-056-07	DIODE	SLR-342MC3F	R622	1-216-035-00	METAL CHIP	270 5% 1/10W
D610	8-719-056-07	DIODE	SLR-342MC3F (GF90K)				(GF90K)
D611	8-719-056-07	DIODE	SLR-342MC3F (GF90K)	R623	1-216-198-91	RES,CHIP	1K 5% 1/8W
D612	8-719-056-07	DIODE	SLR-342MC3F (GF90K)				(GF90K)
D613	8-719-056-07	DIODE	SLR-342MC3F (GA30/GA40K)	R624	1-216-035-00	METAL CHIP	270 5% 1/10W
D614	8-719-056-07	DIODE	SLR-342MC3F (GA77K)				(GA30/GA40K)
D615	8-719-056-07	DIODE	SLR-342MC3F	R625	1-216-035-00	METAL CHIP	270 5% 1/10W
D616	8-719-056-07	DIODE	SLR-342MC3F				(GA77K)
		< IC >		R626	1-216-035-00	METAL CHIP	270 5% 1/10W
IC601	8-749-011-03	IC	GP1U26X	R627	1-216-035-00	METAL CHIP	270 5% 1/10W
		< JUMPER RESISTOR >		R628	1-216-230-00	RES,CHIP	22K 5% 1/8W
JR072	1-216-295-00	METAL CHIP	0 5% 1/10W				(GA77K/GF90K)
JR073	1-216-295-00	METAL CHIP	0 5% 1/10W	R629	1-216-035-00	METAL CHIP	270 5% 1/10W
JR074	1-216-296-00	METAL CHIP	0 5% 1/8W	R630	1-216-035-00	METAL CHIP	270 5% 1/10W
JR075	1-216-296-00	METAL CHIP	0 5% 1/8W	R631	1-216-035-00	METAL CHIP	270 5% 1/10W
JR076	1-216-296-00	METAL CHIP	0 5% 1/8W	R632	1-216-035-00	METAL CHIP	270 5% 1/10W
JR077	1-216-296-00	METAL CHIP	0 5% 1/8W	R633	1-216-055-00	METAL CHIP	1.8K 5% 1/10W
		< JUMPER RESISTOR >		R634	1-216-085-00	METAL CHIP	33K 5% 1/10W
JS510	1-216-295-00	METAL CHIP	0 5% 1/10W				(EXCEPT GA30/GA40K)
			(GA77K/GF90K)	R635	1-216-234-00	RES,CHIP	33K 5% 1/8W
JS511	1-216-295-00	METAL CHIP	0 5% 1/10W				(GA77K/GF90K)
			(GA40K)	R636	1-216-085-00	METAL CHIP	33K 5% 1/10W
		< RESISTOR >					(GA60/GA77K)
R520	1-216-081-00	METAL CHIP	22K 5% 1/10W	R637	1-216-073-00	METAL CHIP	10K 5% 1/10W
			(GA40K/GA77K/GF90K)				(EXCEPT GA30/GA40K)
R521	1-216-081-00	METAL CHIP	22K 5% 1/10W				< VARIABLE RESISTOR >
			(GA40K/GA77K/GF90K)	RV501	1-223-914-11	RES, VAR, CARBON 10K(ECHO)	(GA40K/GA77K/GF90K)
R522	1-216-035-00	METAL CHIP	270 5% 1/10W	RV502	1-223-914-11	RES, VAR, CARBON 10K(MIC VOL 1)	(GA40K/GA77K/GF90K)
			(GA40K/GA77K/GF90K)	RV503	1-223-914-11	RES, VAR, CARBON 10K(MIC VOL 2)	(GA40K/GA77K/GF90K)
R524	1-216-073-00	METAL CHIP	10K 5% 1/10W				< SWITCH >
			(GA40K/GA77K/GF90K)	S501	1-572-907-11	SWITCH, SLIDE(KARAOKE)	(GA77K/GF90K)
R603	1-216-075-00	METAL CHIP	12K 5% 1/10W	S501	1-572-908-11	SWITCH, SLIDE(KARAOKE)	(GA40K)
			(EXCEPT GA30/GA40K)	S603	1-571-977-11	SWITCH, TACTIL (VIRTUAL SURROUND)	(GA77K)
R604	1-216-085-00	METAL CHIP	33K 5% 1/10W	S605	1-572-907-11	SWITCH, SLIDE(COLOR SYSTEM)	(EXCEPT GA30/GA40K)
			(GA60)	S610	1-572-907-11	SWITCH, SLIDE(NTSC PB)	(EXCEPT GA30/GA40K)
R605	1-216-075-00	METAL CHIP	12K 5% 1/10W				
			(EXCEPT GA30/GA40K)	S611	1-571-977-11	SWITCH, TACTIL (AUTO/MANUAL)	
R608	1-216-055-00	METAL CHIP	1.8K 5% 1/10W	S612	1-571-977-11	SWITCH, TACTIL (ON SCREEN DISPLAY)	
R609	1-216-067-00	METAL CHIP	5.6K 5% 1/10W	S613	1-418-059-11	ENCODER, ROTARY (PICTURE CONTROL)	
R611	1-216-085-00	METAL CHIP	33K 5% 1/10W	S614	1-572-908-11	SWITCH, SLIDE (TAPE SPEED)	(GA60/GA77K)
			(GA60/GA77K/GF90K)	S615	1-572-908-11	SWITCH, SLIDE (INPUT SELECT)	(GA77K/GF90K)

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
*	A-6794-639-A	JK-166 BOARD, COMPLETE (GF90K) *****				< CAPACITOR >	
*	A-6794-641-A	JK-166 BOARD, COMPLETE (GA77K) *****		C100	1-163-038-00	CERAMIC CHIP 0.1uF	25V
				C101	1-126-162-11	ELECT 3.3uF	20% 50V
				C102	1-163-989-11	CERAMIC CHIP 0.033uF	10% 25V
				C103	1-124-584-00	ELECT 100uF	20% 10V
			(Ref.No.:2,000 Series)	C104	1-163-038-00	CERAMIC CHIP 0.1uF	25V
	3-051-657-01	JACKHOLDER, PIN		C105	1-163-031-11	CERAMIC CHIP 0.01uF	50V
		< CONNECTOR >		C106	1-163-031-11	CERAMIC CHIP 0.01uF	50V
				C107	1-163-031-11	CERAMIC CHIP 0.01uF	50V
				C108	1-163-031-11	CERAMIC CHIP 0.01uF	50V
CN651	1-691-043-21	HOUSING, CONNECTOR 11P		C109	1-164-232-11	CERAMIC CHIP 0.01uF	50V
		< JACK >		C110	1-126-160-11	ELECT 1uF	20% 50V
CNJ651	1-785-606-11	JACK, PIN 3P(LINE-2 IN)		C111	1-163-017-00	CERAMIC CHIP 0.0047uF	5% 50V
CNJ652	1-785-606-11	JACK, PIN 3P(LINE-2 OUT) (GA77K)		C112	1-124-257-00	ELECT 2.2uF	20% 50V
		< DIODE >		C113	1-124-465-00	ELECT 0.47uF	20% 50V
				C114	1-163-037-11	CERAMIC CHIP 0.022uF	10% 25V
D640	8-719-108-12	DIODE RD9.1E-W (GA77K)		C115	1-163-038-00	CERAMIC CHIP 0.1uF	25V
D641	8-719-108-12	DIODE RD9.1E-W (GA77K)		C116	1-126-163-11	ELECT 4.7uF	20% 50V
D642	8-719-108-12	DIODE RD9.1E-W (GA77K)		C118	1-163-222-11	CERAMIC CHIP 5PF	0.25PF 50V
D643	8-719-108-12	DIODE RD9.1E-W		C119	1-126-163-11	ELECT 4.7uF	20% 50V
D644	8-719-108-12	DIODE RD9.1E-W		C120	1-163-037-11	CERAMIC CHIP 0.022uF	10% 25V
D645	8-719-108-12	DIODE RD9.1E-W		C121	1-124-584-00	ELECT 100uF	20% 10V
D651	8-719-988-62	DIODE 1SS355		C122	1-163-038-00	CERAMIC CHIP 0.1uF	25V
D652	8-719-988-62	DIODE 1SS355		C123	1-163-031-11	CERAMIC CHIP 0.01uF	50V
		< JUMPER RESISTOR >		C124	1-163-031-11	CERAMIC CHIP 0.01uF	50V
				C125	1-163-038-00	CERAMIC CHIP 0.1uF	25V
JR651	1-216-296-00	METAL CHIP 0 5% 1/8W		C126	1-164-489-11	CERAMIC CHIP 0.22uF	10% 16V
JR652	1-216-296-00	METAL CHIP 0 5% 1/8W		C127	1-163-031-11	CERAMIC CHIP 0.01uF	50V
JR653	1-216-296-00	METAL CHIP 0 5% 1/8W		C128	1-163-031-11	CERAMIC CHIP 0.01uF	50V
JR654	1-216-296-00	METAL CHIP 0 5% 1/8W		C129	1-124-584-00	ELECT 100uF	20% 10V
JR655	1-216-296-00	METAL CHIP 0 5% 1/8W		C130	1-163-038-00	CERAMIC CHIP 0.1uF	25V
JR656	1-216-296-00	METAL CHIP 0 5% 1/8W		C131	1-163-263-11	CERAMIC CHIP 330PF	5% 50V
		< RESISTOR >		C132	1-126-160-11	ELECT 1uF	20% 50V
R651	1-216-041-00	METAL CHIP 470 5% 1/10W (GA77K)		C133	1-126-160-11	ELECT 1uF	20% 50V
R652	1-216-041-00	METAL CHIP 470 5% 1/10W (GA77K)				(EXCEPT GA30/GA40K)	
R653	1-216-023-00	METAL CHIP 82 5% 1/10W				(GA77K/GF90K)	
*	A-6791-708-A	MA-336 BOARD, COMPLETE (GA30) *****		C134	1-124-584-00	ELECT 100uF	20% 10V
*	A-6791-709-A	MA-336 BOARD, COMPLETE (GA40K) *****		C135	1-163-038-00	CERAMIC CHIP 0.1uF	25V
*	A-6791-714-A	MA-336 BOARD, COMPLETE (GA60) *****		C136	1-163-121-00	CERAMIC CHIP 150PF	5% 50V
*	A-6791-725-A	MA-336 BOARD, COMPLETE (GA77K) *****		C137	1-163-038-00	CERAMIC CHIP 0.1uF	25V
*	A-6791-728-A	MA-336 BOARD, COMPLETE (GF90K) *****		C138	1-163-233-11	CERAMIC CHIP 18PF	5% 50V
			(Ref.No.:1,000 Series)	C138	1-163-235-11	CERAMIC CHIP 22PF	5% 50V
				C139	1-163-237-11	CERAMIC CHIP 27PF	5% 50V
						(EXCEPT GA30/GA40K)	
				C140	1-163-038-00	CERAMIC CHIP 0.1uF	25V
				C141	1-164-232-11	CERAMIC CHIP 0.01uF	50V
						(GA30/GA40K/GA60)	
				C142	1-163-038-00	CERAMIC CHIP 0.1uF	25V
				C143	1-126-157-11	ELECT 10uF	20% 16V
				C144	1-163-038-00	CERAMIC CHIP 0.1uF	25V
				C145	1-163-038-00	CERAMIC CHIP 0.1uF	25V
				C146	1-126-162-11	ELECT 3.3uF	20% 50V
				C147	1-126-157-11	ELECT 10uF	20% 16V
				C148	1-164-232-11	CERAMIC CHIP 0.01uF	50V
				C149	1-124-257-00	ELECT 2.2uF	20% 50V

**MA-336**

Ref. No.	Part No.	Description	Remarks			Ref. No.	Part No.	Description	Remarks		
C150	1-163-031-11	CERAMIC CHIP	0.01uF		50V	C263	1-163-038-00	CERAMIC CHIP	0.1uF		25V
C151	1-163-031-11	CERAMIC CHIP	0.01uF		50V	C264	1-163-237-11	CERAMIC CHIP	27PF	5%	50V
C152	1-163-235-11	CERAMIC CHIP	22PF	5%	50V						(GF90K)
					(GA30/GA40K)	C264	1-163-239-11	CERAMIC CHIP	33PF	5%	50V
C152	1-163-241-11	CERAMIC CHIP	39PF	5%	50V						(EXCEPT GF90K)
					(EXCEPT GA30/GA40K)	C265	1-163-241-11	CERAMIC CHIP	39PF	5%	50V
C153	1-163-235-11	CERAMIC CHIP	22PF	5%	50V	C266	1-164-346-11	CERAMIC CHIP	1uF		16V
					(GA30/GA40K)						(EXCEPT GA30/GA40K)
C153	1-163-241-11	CERAMIC CHIP	39PF	5%	50V	C267	1-163-245-11	CERAMIC CHIP	56PF	5%	50V
					(EXCEPT GA30/GA40K)						(EXCEPT GA30/GA40K)
C155	1-163-239-11	CERAMIC CHIP	33PF	5%	50V	C268	1-163-017-00	CERAMIC CHIP	0.0047uF	5%	50V
C160	1-163-038-00	CERAMIC CHIP	0.1uF		25V	C290	1-163-009-11	CERAMIC CHIP	0.001uF	10%	50V
					(EXCEPT GA30/GA40K)	C298	1-163-009-11	CERAMIC CHIP	0.001uF	10%	50V
C200	1-163-063-91	CERAMIC CHIP	0.022uF	10%	50V	C300	1-164-161-11	CERAMIC CHIP	0.0022uF	10%	100V
C201	1-164-346-11	CERAMIC CHIP	1uF		16V						(GF90K)
C202	1-163-243-11	CERAMIC CHIP	47PF	5%	50V	C301	1-164-232-11	CERAMIC CHIP	0.01uF		50V
C203	1-126-157-11	ELECT	10uF	20%	16V						(GF90K)
C204	1-163-038-00	CERAMIC CHIP	0.1uF		25V	C302	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V
C205	1-124-584-00	ELECT	100uF	20%	10V						(GF90K)
C206	1-124-234-00	ELECT	22uF	20%	16V	C304	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V
											(GF90K)
C207	1-163-229-11	CERAMIC CHIP	12PF	5%	50V	C305	1-164-161-11	CERAMIC CHIP	0.0022uF	10%	100V
C208	1-163-241-11	CERAMIC CHIP	39PF	5%	50V						(GF90K)
C209	1-163-241-11	CERAMIC CHIP	39PF	5%	50V	C307	1-164-232-11	CERAMIC CHIP	0.01uF		50V
C210	1-163-251-11	CERAMIC CHIP	100PF	5%	50V						(GF90K)
C211	1-163-031-11	CERAMIC CHIP	0.01uF		50V	C308	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V
											(GF90K)
C212	1-126-163-11	ELECT	4.7uF	20%	50V	C309	1-164-232-11	CERAMIC CHIP	0.01uF		50V
C213	1-126-157-11	ELECT	10uF	20%	16V						(GF90K)
C214	1-163-031-11	CERAMIC CHIP	0.01uF		50V	C310	1-163-038-00	CERAMIC CHIP	0.1uF		25V
C215	1-163-253-11	CERAMIC CHIP	120PF	5%	50V						(GF90K)
C216	1-163-031-11	CERAMIC CHIP	0.01uF		50V	C311	1-124-589-11	ELECT	47uF	20%	16V
											(GF90K)
C217	1-164-232-11	CERAMIC CHIP	0.01uF		50V	C312	1-163-037-11	CERAMIC CHIP	0.022uF	10%	25V
C219	1-163-038-00	CERAMIC CHIP	0.1uF		25V						(GF90K)
C221	1-163-038-00	CERAMIC CHIP	0.1uF		25V	C313	1-163-037-11	CERAMIC CHIP	0.022uF	10%	25V
C223	1-163-231-11	CERAMIC CHIP	15PF	5%	50V						(GF90K)
C224	1-163-231-11	CERAMIC CHIP	15PF	5%	50V	C314	1-163-038-00	CERAMIC CHIP	0.1uF		25V
											(GF90K)
C227	1-124-589-11	ELECT	47uF	20%	16V	C315	1-124-589-11	ELECT	47uF	20%	16V
C229	1-163-038-00	CERAMIC CHIP	0.1uF		25V						(GF90K)
C232	1-164-489-11	CERAMIC CHIP	0.22uF	10%	16V	C316	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V
C233	1-164-182-11	CERAMIC CHIP	0.0033uF	10%	50V						(GF90K)
C234	1-163-809-11	CERAMIC CHIP	0.047uF	10%	25V	C317	1-163-016-00	CERAMIC CHIP	0.0039uF	10%	50V
											(GF90K)
C235	1-163-037-11	CERAMIC CHIP	0.022uF	10%	25V	C319	1-124-589-11	ELECT	47uF	20%	16V
C236	1-163-038-00	CERAMIC CHIP	0.1uF		25V						(GF90K)
C237	1-124-589-11	ELECT	47uF	20%	16V	C321	1-126-157-11	ELECT	10uF	20%	16V
C240	1-163-009-11	CERAMIC CHIP	0.001uF	10%	50V						(GF90K)
C241	1-163-009-11	CERAMIC CHIP	0.001uF	10%	50V	C323	1-124-257-00	ELECT	2.2uF	20%	50V
											(GF90K)
C242	1-163-009-11	CERAMIC CHIP	0.001uF	10%	50V	C325	1-126-157-11	ELECT	10uF	20%	16V
C243	1-163-009-11	CERAMIC CHIP	0.001uF	10%	50V						(GF90K)
C244	1-124-589-11	ELECT	47uF	20%	16V	C326	1-124-589-11	ELECT	47uF	20%	16V
C245	1-163-038-00	CERAMIC CHIP	0.1uF		25V						(GF90K)
C250	1-126-935-11	ELECT	470uF	20%	16V	C327	1-163-016-00	CERAMIC CHIP	0.0039uF	10%	50V
											(GF90K)
C251	1-124-584-00	ELECT	100uF	20%	10V	C328	1-126-157-11	ELECT	10uF	20%	16V
C252	1-124-589-11	ELECT	47uF	20%	16V						(GF90K)
C254	1-163-031-11	CERAMIC CHIP	0.01uF		50V	C331	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V
C255	1-163-031-11	CERAMIC CHIP	0.01uF		50V						(GF90K)
C256	1-163-031-11	CERAMIC CHIP	0.01uF		50V	C332	1-126-160-11	ELECT	1uF	20%	50V
											(GF90K)
C257	1-163-038-00	CERAMIC CHIP	0.1uF		25V	C333	1-126-157-11	ELECT	10uF	20%	16V
C259	1-163-031-11	CERAMIC CHIP	0.01uF		50V						(GF90K)
C260	1-163-253-11	CERAMIC CHIP	120PF	5%	50V						(GF90K)
C261	1-124-584-00	ELECT	100uF	20%	10V						(GF90K)
C262	1-163-038-00	CERAMIC CHIP	0.1uF		25V						(GF90K)



Ref. No.	Part No.	Description	Remarks			Ref. No.	Part No.	Description	Remarks		
C334	1-126-157-11	ELECT	10uF	20%	16V (GF90K)	C524	1-163-016-00	CERAMIC CHIP	0.0039uF	10%	50V (GA40K/GA77K/GF90K)
C351	1-126-157-11	ELECT	10uF	20%	16V (GA77K/GF90K)	C525	1-163-018-00	CERAMIC CHIP	0.0056uF	5%	50V (GA40K/GA77K/GF90K)
C352	1-126-157-11	ELECT	10uF	20%	16V (GA77K/GF90K)	C526	1-163-259-91	CERAMIC CHIP	220PF	5%	50V (GA40K/GA77K/GF90K)
C400	1-126-157-11	ELECT	10uF	20%	16V	C527	1-163-016-00	CERAMIC CHIP	0.0039uF	10%	50V (GA40K/GA77K/GF90K)
C401	1-124-584-00	ELECT	100uF	20%	10V	C528	1-163-018-00	CERAMIC CHIP	0.0056uF	5%	50V (GA40K/GA77K/GF90K)
C402	1-163-038-00	CERAMIC CHIP	0.1uF		25V	C529	1-124-465-00	ELECT	0.47uF	20%	50V (GA40K/GA77K/GF90K)
C403	1-163-037-11	CERAMIC CHIP	0.022uF	10%	25V	C530	1-163-038-00	CERAMIC CHIP	0.1uF		25V (GA40K/GA77K/GF90K)
C404	1-124-234-00	ELECT	22uF	20%	16V	C531	1-124-589-11	ELECT	47uF	20%	16V (GA40K/GA77K/GF90K)
C405	1-163-009-11	CERAMIC CHIP	0.001uF	10%	50V	C532	1-126-160-11	ELECT	1uF	20%	50V (GA40K/GA77K/GF90K)
C406	1-126-163-11	ELECT	4.7uF	20%	50V	C533	1-126-163-11	ELECT	4.7uF	20%	50V (GA40K/GA77K/GF90K)
C407	1-164-161-11	CERAMIC CHIP	0.0022uF	10%	100V (GA30/GA40K)	C535	1-163-009-11	CERAMIC CHIP	0.001uF	10%	50V (GA40K/GA77K/GF90K)
C407	1-164-182-11	CERAMIC CHIP	0.0033uF	10%	50V (EXCEPT GA30/GA40K)	C536	1-126-157-11	ELECT	10uF	20%	16V (GA40K/GA77K/GF90K)
C408	1-126-163-11	ELECT	4.7uF	20%	50V	C537	1-163-038-00	CERAMIC CHIP	0.1uF		25V (GA40K/GA77K/GF90K)
C409	1-126-157-11	ELECT	10uF	20%	16V	C538	1-124-589-11	ELECT	47uF	20%	16V (GA40K/GA77K/GF90K)
C410	1-163-038-00	CERAMIC CHIP	0.1uF		25V	C539	1-163-077-00	CERAMIC CHIP	0.1uF	10%	25V (GA40K/GA77K/GF90K)
C412	1-126-160-11	ELECT	1uF	20%	50V (EXCEPT GA30/GA40K)	C541	1-163-017-00	CERAMIC CHIP	0.0047uF	5%	50V (GA40K/GA77K/GF90K)
C413	1-124-234-00	ELECT	22uF	20%	16V	C542	1-163-017-00	CERAMIC CHIP	0.0047uF	5%	50V (GA40K/GA77K/GF90K)
C414	1-126-163-11	ELECT	4.7uF	20%	50V	C543	1-163-017-00	CERAMIC CHIP	0.0047uF	5%	50V (GA40K/GA77K/GF90K)
C417	1-137-360-11	FILM	220PF	5%	50V (EXCEPT GA30/GA40K)	C544	1-163-017-00	CERAMIC CHIP	0.0047uF	5%	50V (GA40K/GA77K/GF90K)
C418	1-137-374-11	FILM	0.047uF	5%	50V (EXCEPT GA30/GA40K)	C581	1-163-038-00	CERAMIC CHIP	0.1uF		25V (GA40K/GA77K/GF90K)
C419	1-163-038-00	CERAMIC CHIP	0.1uF		25V (EXCEPT GA30/GA40K)	C582	1-126-157-11	ELECT	10uF	20%	16V (GA40K/GA77K/GF90K)
C420	1-164-182-11	CERAMIC CHIP	0.0033uF	10%	50V (EXCEPT GA30/GA40K)	C584	1-126-157-11	ELECT	10uF	20%	16V (GA40K/GA77K/GF90K)
C422	1-124-589-11	ELECT	47uF	20%	16V (EXCEPT GA30/GA40K)	C585	1-126-157-11	ELECT	10uF	20%	16V (GA40K/GA77K/GF90K)
C423	1-163-038-00	CERAMIC CHIP	0.1uF		25V (EXCEPT GA30/GA40K)	C753	1-163-038-91	CERAMIC CHIP	0.1uF		25V (GA77K)
C424	1-163-038-00	CERAMIC CHIP	0.1uF		25V (EXCEPT GA30/GA40K)	C754	1-163-077-00	CERAMIC CHIP	0.1uF	10%	25V (GA77K)
C425	1-126-157-11	ELECT	10uF	20%	16V	C759	1-124-259-11	ELECT	4.7uF	20%	16V (GA77K/GF90K)
C426	1-124-259-11	ELECT	4.7uF	20%	16V	C760	1-124-259-11	ELECT	4.7uF	20%	16V (GA77K/GF90K)
C427	1-164-232-11	CERAMIC CHIP	0.01uF		50V	C761	1-126-160-11	ELECT	1uF	20%	50V (GF90K)
C428	1-124-259-11	ELECT	4.7uF	20%	16V	C762	1-126-160-11	ELECT	1uF	20%	50V (GF90K)
C513	1-126-157-11	ELECT	10uF	20%	16V (GA40K/GA77K/GF90K)	C800	1-128-057-11	ELECT	330uF	20%	6.3V (GA77K)
C514	1-126-157-11	ELECT	10uF	20%	16V (GA40K/GA77K/GF90K)	C801	1-124-589-11	ELECT	47uF	20%	16V
C515	1-164-346-11	CERAMIC CHIP	1uF		16V (GA40K/GA77K/GF90K)	C802	1-163-038-00	CERAMIC CHIP	0.1uF		25V
C516	1-164-346-11	CERAMIC CHIP	1uF		16V (GA40K/GA77K/GF90K)	C803	1-126-157-11	ELECT	10uF	20%	16V (GA77K/GF90K)
C517	1-163-036-00	CERAMIC CHIP	0.068uF		50V (GA40K/GA77K/GF90K)	C804	1-126-157-11	ELECT	10uF	20%	16V (GA60/GA77K/GF90K)
C518	1-163-036-00	CERAMIC CHIP	0.068uF		50V (GA40K/GA77K/GF90K)	C805	1-128-057-11	ELECT	330uF	20%	6.3V
C519	1-163-031-11	CERAMIC CHIP	0.01uF		50V (GA40K/GA77K/GF90K)						
C520	1-163-038-00	CERAMIC CHIP	0.1uF		25V (GA40K/GA77K/GF90K)						
C521	1-163-038-00	CERAMIC CHIP	0.1uF		25V (GA40K/GA77K/GF90K)						
C522	1-124-465-00	ELECT	0.47uF	20%	50V (GA40K/GA77K/GF90K)						
C523	1-163-259-91	CERAMIC CHIP	220PF	5%	50V (GA40K/GA77K/GF90K)						

# MA-336

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
C806	1-124-584-00	ELECT	100uF 20% 10V			< IC >	
C807	1-163-017-00	CERAMIC CHIP	0.0047uF 5% 50V (GA30/GA40K)	IC101	8-759-562-59	IC	HA118211BF (EXCEPT GA30/GA40K)
C808	1-163-038-00	CERAMIC CHIP	0.1uF 25V (EXCEPT GA30/GA40K)	IC101	8-759-568-04	IC	HA118211BNF(GA30/GA40K)
C809	1-164-232-11	CERAMIC CHIP	0.01uF 50V	IC201	8-759-562-79	IC	HD6433975RB38F
△C951	1-104-706-11	FILM	0.22uF 20% 250V	IC202	8-759-481-46	IC	LB1943
△C952	1-113-898-11	CERAMIC	330PF 10% 250V	IC203	8-759-248-87	IC	MM1256XF-BE
△C953	1-113-898-11	CERAMIC	330PF 10% 250V	IC204	8-759-708-05	IC	NJM78L05A
△C955	1-104-706-11	FILM	0.22uF 20% 250V	IC301	8-759-486-64	IC	TDA9615H/N1,557 (GF90K)
△C956	1-113-898-11	CERAMIC	330PF 10% 250V	IC302	8-759-486-92	IC	LA7256 (GF90K)
△C958	1-107-405-11	ELECT(BLOCK)	68uF 20% 400V	IC502	8-759-344-05	IC	BA7726AFS-E2 (GA40K/GA77K/GF90K)
C959	1-163-038-00	CERAMIC CHIP	0.1uF 25V	IC503	8-759-344-02	IC	BU9252F-E2 (GA40K/GA77K/GF90K)
C960	1-163-038-00	CERAMIC CHIP	0.1uF 25V	IC581	8-759-909-71	IC	BA4558F (GA40K/GA77K/GF90K)
C961	1-124-589-11	ELECT	47uF 20% 16V	IC751	8-759-525-25	IC	BU4052BCF-E2 (GA77K/GF90K)
C962	1-163-038-00	CERAMIC CHIP	0.1uF 25V	IC752	8-759-909-71	IC	BA4558F (GA77K)
C963	1-126-935-11	ELECT	470uF 20% 16V			< JUMPER RESISTOR >	
C964	1-128-057-11	ELECT	330uF 20% 6.3V	JR001	1-216-295-00	METAL CHIP	0 5% 1/10W
		< CONNECTOR >		JR002	1-216-295-00	METAL CHIP	0 5% 1/10W
* CN101	1-560-892-00	PIN, CONNECTOR 4P		JR003	1-216-296-00	METAL CHIP	0 5% 1/8W
CN102	1-691-040-41	HOUSING, CONNECTOR 8P		JR004	1-216-296-00	METAL CHIP	0 5% 1/8W
CN201	1-691-047-21	HOUSING, CONNECTOR 15P		JR005	1-216-296-00	METAL CHIP	0 5% 1/8W
CN202	1-784-490-11	CONNECTOR, FFC/FPC 11P (GA77K/GF90K)		JR006	1-216-296-00	METAL CHIP	0 5% 1/8W
* CN203	1-766-716-11	CONNECTOR, BOARD TO BOARD 3P		JR007	1-216-295-00	METAL CHIP	0 5% 1/10W
CN204	1-695-330-31	HOUSING, CONNECTOR 7P		JR008	1-216-296-00	METAL CHIP	0 5% 1/8W
CN205	1-779-723-11	CONNECTOR, BOARD TO BOARD 9P		JR009	1-216-296-00	METAL CHIP	0 5% 1/8W
CN206	1-569-930-11	HOUSING, CONNECTOR 13P		JR010	1-216-296-00	METAL CHIP	0 5% 1/8W
* CN207	1-564-004-11	PIN, CONNECTOR 5P		JR011	1-216-295-00	METAL CHIP	0 5% 1/10W
* CN208	1-564-005-11	PIN, CONNECTOR 6P		JR012	1-216-296-00	METAL CHIP	0 5% 1/8W
CN209	1-564-002-11	PIN, CONNECTOR 3P (GA77K/GF90K)		JR013	1-216-295-00	METAL CHIP	0 5% 1/10W
* CN210	1-560-890-00	PIN, CONNECTOR 2P		JR014	1-216-296-00	METAL CHIP	0 5% 1/8W
* CN401	1-560-894-00	PIN, CONNECTOR 6P		JR015	1-216-296-00	METAL CHIP	0 5% 1/8W
* CN402	1-560-890-00	PIN, CONNECTOR 2P (EXCEPT GA30)		JR016	1-216-296-00	METAL CHIP	0 5% 1/8W
CN702	1-573-842-11	CONNECTOR, BOARD TO BOARD 10P (GA77K)		JR017	1-216-296-00	METAL CHIP	0 5% 1/8W
△CN951	1-580-230-11	PIN, CONNECTOR (PC BOARD) 2P		JR018	1-216-295-00	METAL CHIP	0 5% 1/10W
		< JACK >		JR019	1-216-296-00	METAL CHIP	0 5% 1/8W
CNJ801	1-779-010-21	JACK, PIN 4P (LINE-1 IN/OUT) (GA60/GA77K/GF90K)		JR020	1-216-295-00	METAL CHIP	0 5% 1/10W
* CNJ801	1-779-924-11	JACK, PIN 2P (LINE OUT) (GA30/GA40K)		JR021	1-216-296-00	METAL CHIP	0 5% 1/8W
		< DIODE >		JR022	1-216-296-00	METAL CHIP	0 5% 1/8W
D201	8-719-911-19	DIODE 1SS119		JR023	1-216-295-00	METAL CHIP	0 5% 1/10W
D203	8-719-048-26	DIODE GL528V1		JR024	1-216-295-00	METAL CHIP	0 5% 1/10W
D251	8-719-911-19	DIODE 1SS119 (GF90K)		JR025	1-216-295-00	METAL CHIP	0 5% 1/10W
D581	8-719-988-62	DIODE 1SS355 (GA40K/GA77K/GF90K)		JR026	1-216-295-00	METAL CHIP	0 5% 1/10W
D582	8-719-988-62	DIODE 1SS355 (GA40K/GA77K/GF90K)		JR027	1-216-296-00	METAL CHIP	0 5% 1/8W
D807	8-719-108-12	DIODE RD9.1E-W (GA77K/GF90K)		JR028	1-216-295-00	METAL CHIP	0 5% 1/10W
D808	8-719-108-12	DIODE RD9.1E-W (GA77K/GF90K)		JR029	1-216-296-00	METAL CHIP	0 5% 1/8W
D809	8-719-108-12	DIODE RD9.1E-W (GA77K/GF90K)		JR030	1-216-295-00	METAL CHIP	0 5% 1/10W
D810	8-719-108-12	DIODE RD9.1E-W (GA77K/GF90K)		JR031	1-216-296-00	METAL CHIP	0 5% 1/8W
△D951	8-719-510-06	DIODE S1WB60		JR032	1-216-296-00	METAL CHIP	0 5% 1/8W
D961	8-719-110-18	DIODE RD10ES-B3		JR033	1-216-296-00	METAL CHIP	0 5% 1/8W
		< FUSE >		JR034	1-216-296-00	METAL CHIP	0 5% 1/8W
△F951	1-532-388-31	FUSE 2A 250V		JR035	1-216-296-00	METAL CHIP	0 5% 1/8W
				JR036	1-216-295-00	METAL CHIP	0 5% 1/10W
				JR037	1-216-296-00	METAL CHIP	0 5% 1/8W
				JR038	1-216-296-00	METAL CHIP	0 5% 1/8W
				JR039	1-216-296-00	METAL CHIP	0 5% 1/8W
				JR040	1-216-296-00	METAL CHIP	0 5% 1/8W

**Note :** The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
JR041	1-216-296-00	METAL CHIP	0 5% 1/8W			< COIL >	
JR042	1-216-295-00	METAL CHIP	0 5% 1/10W				
JR043	1-216-296-00	METAL CHIP	0 5% 1/8W	L101	1-414-189-31	INDUCTOR	100uH
JR044	1-216-296-00	METAL CHIP	0 5% 1/8W	L102	1-414-189-31	INDUCTOR	100uH
JR045	1-216-296-00	METAL CHIP	0 5% 1/8W	L104	1-410-510-11	INDUCTOR	12uH
				L105	1-414-189-31	INDUCTOR	100uH
JR046	1-216-296-00	METAL CHIP	0 5% 1/8W	L106	1-414-189-31	INDUCTOR	100uH
JR047	1-216-296-00	METAL CHIP	0 5% 1/8W				
JR048	1-216-295-00	METAL CHIP	0 5% 1/10W	L107	1-410-520-11	INDUCTOR	82uH (EXCEPT GA30/GA40K)
JR049	1-216-296-00	METAL CHIP	0 5% 1/8W	L108	1-410-520-11	INDUCTOR	82uH
JR050	1-216-296-00	METAL CHIP	0 5% 1/8W	L109	1-414-189-31	INDUCTOR	100uH
				L110	1-410-509-11	INDUCTOR	10uH
JR051	1-216-296-00	METAL CHIP	0 5% 1/8W	L201	1-410-511-11	INDUCTOR	15uH
JR052	1-216-296-00	METAL CHIP	0 5% 1/8W	L206	1-410-503-11	INDUCTOR	3.3uH
JR053	1-216-296-00	METAL CHIP	0 5% 1/8W				
JR054	1-216-296-00	METAL CHIP	0 5% 1/8W	L207	1-414-189-31	INDUCTOR	100uH
JR055	1-216-295-00	METAL CHIP	0 5% 1/10W	L208	1-410-513-11	INDUCTOR	22uH (EXCEPT GA30/GA40K)
				L301	1-414-189-31	INDUCTOR	100uH (GF90K)
JR056	1-216-295-00	METAL CHIP	0 5% 1/10W	L302	1-414-189-31	INDUCTOR	100uH (GF90K)
JR057	1-216-296-00	METAL CHIP	0 5% 1/8W	L401	1-414-189-31	INDUCTOR	100uH
JR058	1-216-295-00	METAL CHIP	0 5% 1/10W				(EXCEPT GA30/GA40K)
JR059	1-216-296-00	METAL CHIP	0 5% 1/8W	L501	1-414-189-31	INDUCTOR	100uH
JR060	1-216-296-00	METAL CHIP	0 5% 1/8W				(GA40K/GA77K/GF90K)
				L801	1-414-189-31	INDUCTOR	100uH
JR061	1-216-296-00	METAL CHIP	0 5% 1/8W	L802	1-414-189-31	INDUCTOR	100uH
JR062	1-216-296-00	METAL CHIP	0 5% 1/8W	L952	1-403-588-11	INDUCTOR	22uH
JR063	1-216-295-00	METAL CHIP	0 5% 1/10W	L953	1-403-588-11	INDUCTOR	22uH
JR064	1-216-296-00	METAL CHIP	0 5% 1/8W				
JR065	1-216-296-00	METAL CHIP	0 5% 1/8W			< LINE FILTER >	
JR066	1-216-296-00	METAL CHIP	0 5% 1/8W	△ LF951	1-423-850-11	FILTER, LINE	
JR067	1-216-295-00	METAL CHIP	0 5% 1/10W				
JR068	1-216-296-00	METAL CHIP	0 5% 1/8W			< PHOTO INTERRUPTER >	
JR069	1-216-295-00	METAL CHIP	0 5% 1/10W	PH201	8-749-013-23	PHOTO INTERRUPTER GP3S120	
JR070	1-216-295-00	METAL CHIP	0 5% 1/10W	PH202	8-749-013-23	PHOTO INTERRUPTER GP3S120	
JR071	1-216-295-00	METAL CHIP	0 5% 1/10W				
JR078	1-216-295-00	METAL CHIP	0 5% 1/10W			< IC LINK >	
JR079	1-216-295-00	METAL CHIP	0 5% 1/10W				
JR080	1-216-295-00	METAL CHIP	0 5% 1/10W	△ PS001	1-533-586-31	LINK, IC 0.315A	
JR081	1-216-295-00	METAL CHIP	0 5% 1/10W	△ PS002	1-533-589-31	LINK, IC 0.75A	
JR082	1-216-296-00	METAL CHIP	0 5% 1/8W			< TRANSISTOR >	
		< JUMPER RESISTOR >					
JS302	1-216-295-00	METAL CHIP	0 5% 1/10W	Q101	8-729-421-19	TRANSISTOR	UN2213
JS401	1-216-295-00	METAL CHIP	0 5% 1/10W	Q102	8-729-010-29	TRANSISTOR	MSD601-RST1
			(GA30/GA40K)	Q103	8-729-421-19	TRANSISTOR	UN2213
JS502	1-216-295-00	METAL CHIP	0 5% 1/10W	Q104	8-729-421-19	TRANSISTOR	UN2213
			(GA40K/GF90K)	Q201	8-729-042-88	TRANSISTOR	RPT-37PBT32
JS907	1-216-295-00	METAL CHIP	0 5% 1/10W	Q202	8-729-042-88	TRANSISTOR	RPT-37PBT32
			(GF90K)	Q203	8-729-281-53	TRANSISTOR	2SC1815-GR
JS911	1-216-295-00	METAL CHIP	0 5% 1/10W	Q204	8-729-421-19	TRANSISTOR	UN2213
			(EXCEPT GA30/GA40K)				(EXCEPT GA30/GA40K)
JS922	1-216-295-00	METAL CHIP	0 5% 1/10W	Q205	8-729-010-29	TRANSISTOR	MSD601-RST1
			(GA77K)	Q206	8-729-421-19	TRANSISTOR	UN2213 (GA77K)
JS924	1-216-295-00	METAL CHIP	0 5% 1/10W				
			(GA77K)	Q207	8-729-421-19	TRANSISTOR	UN2213
JS927	1-216-295-00	METAL CHIP	0 5% 1/10W	Q208	8-729-421-19	TRANSISTOR	UN2213
			(EXCEPT GA60/GF90K)	Q209	8-729-421-19	TRANSISTOR	UN2213
JS928	1-216-295-00	METAL CHIP	0 5% 1/10W	Q210	8-729-421-19	TRANSISTOR	UN2213
			(GA77K)				(EXCEPT GA30/GA40K)
JS929	1-216-295-00	METAL CHIP	0 5% 1/10W	Q211	8-729-421-19	TRANSISTOR	UN2213 (GF90K)
			(GA77K)				
JS930	1-216-295-00	METAL CHIP	0 5% 1/10W				
			(GA77K)				

**Note :** The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.

**MA-336**

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
Q212	8-729-421-19	TRANSISTOR	UN2213 (GF90K)	R200	1-216-065-00	METAL CHIP	4.7K 5% 1/10W (EXCEPT GA30/GA40K)
Q213	8-729-421-19	TRANSISTOR	UN2213 (GF90K)	R201	1-216-121-91	RES,CHIP	1M 5% 1/10W
Q214	8-729-010-29	TRANSISTOR	MSD601-RST1	R202	1-216-262-00	RES,CHIP	470K 5% 1/8W
Q215	8-729-010-05	TRANSISTOR	MSB709-RT1	R203	1-216-049-00	METAL CHIP	1K 5% 1/10W
Q216	8-729-010-29	TRANSISTOR	MSD601-RST1	R204	1-216-057-00	METAL CHIP	2.2K 5% 1/10W
Q217	8-729-010-29	TRANSISTOR	MSD601-RST1	R205	1-216-049-00	METAL CHIP	1K 5% 1/10W
Q218	8-729-421-19	TRANSISTOR	UN2213	R206	1-216-081-00	METAL CHIP	22K 5% 1/10W
Q219	8-729-421-19	TRANSISTOR	UN2213	R207	1-216-025-91	RES,CHIP	100 5% 1/10W
Q220	8-729-421-19	TRANSISTOR	UN2213 (EXCEPT GA30/GA40K)	R208	1-216-099-00	METAL CHIP	120K 5% 1/10W
Q221	8-729-421-19	TRANSISTOR	UN2213 (GA77K)	R209	1-216-055-00	METAL CHIP	1.8K 5% 1/10W
Q222	8-729-421-19	TRANSISTOR	UN2213 (GA77K)	R210	1-216-081-00	METAL CHIP	22K 5% 1/10W
Q223	8-729-421-19	TRANSISTOR	UN2213 (GA30/GA40K)	R211	1-216-049-00	METAL CHIP	1K 5% 1/10W
Q224	8-729-421-19	TRANSISTOR	UN2213 (EXCEPT GA30/GA40K)	R212	1-216-049-00	METAL CHIP	1K 5% 1/10W
Q225	8-729-421-19	TRANSISTOR	UN2213 (EXCEPT GA30/GA40K)	R213	1-216-065-00	METAL CHIP	4.7K 5% 1/10W
Q226	8-729-421-19	TRANSISTOR	UN2213 (GA77K)	R214	1-216-049-00	METAL CHIP	1K 5% 1/10W
Q250	8-729-421-19	TRANSISTOR	UN2213(GF90K)	R215	1-216-105-91	RES,CHIP	220K 5% 1/10W
Q251	8-729-421-19	TRANSISTOR	UN2213(GF90K)	R216	1-216-073-00	METAL CHIP	10K 5% 1/10W
Q401	8-729-010-29	TRANSISTOR	MSD601-RST1 (EXCEPT GA30/GA40K)	R217	1-216-230-00	RES,CHIP	22K 5% 1/8W
Q402	8-729-010-29	TRANSISTOR	MSD601-RST1 (EXCEPT GA30/GA40K)	R218	1-216-073-00	METAL CHIP	10K 5% 1/10W
Q403	8-729-901-06	TRANSISTOR	DTA144EK (EXCEPT GA30/GA40K)	R219	1-216-059-00	METAL CHIP	2.7K 5% 1/10W (GA30/GA60)
Q404	8-729-012-31	TRANSISTOR	2SC4040-TL2-Q (EXCEPT GA30/GA40K)	R219	1-216-069-00	METAL CHIP	6.8K 5% 1/10W (GA40K/GF90K)
Q405	8-729-901-06	TRANSISTOR	DTA144EK (EXCEPT GA30/GA40K)	R219	1-216-689-11	METAL CHIP	39K 0.5% 1/10W (GA77K)
Q406	8-729-421-19	TRANSISTOR	UN2213 (EXCEPT GA30/GA40K)	R220	1-216-073-00	METAL CHIP	10K 5% 1/10W
Q407	8-729-010-29	TRANSISTOR	MSD601-RST1	R221	1-216-222-00	RES,CHIP	10K 5% 1/8W
Q410	8-729-010-29	TRANSISTOR	MSD601-RST1 (GA40K/GA77K/GF90K)	R222	1-216-073-00	METAL CHIP	10K 5% 1/10W
Q502	8-729-010-29	TRANSISTOR	MSD601-RST1 (GA40K/GA77K/GF90K)	R223	1-216-073-00	METAL CHIP	10K 5% 1/10W
Q581	8-729-421-19	TRANSISTOR	UN2213 (GA40K/GA77K/GF90K)	R224	1-249-429-11	CARBON	10K 5% 1/4W
Q751	8-729-421-19	TRANSISTOR	UN2213 (GA77K)	R225	1-216-073-00	METAL CHIP	10K 5% 1/10W
Q752	8-729-421-19	TRANSISTOR	UN2213 (GA77K/GF90K)	R226	1-216-073-00	METAL CHIP	10K 5% 1/10W
Q753	8-729-120-28	TRANSISTOR	2SC1623-L5L6 (GA77K)	R227	1-216-077-00	METAL CHIP	15K 5% 1/10W
Q801	8-729-026-49	TRANSISTOR	2SA1037AK-T146-R	R228	1-216-049-00	METAL CHIP	1K 5% 1/10W
△ Q961	8-729-012-31	TRANSISTOR	2SC4040-TL2-Q	R229	1-216-295-00	METAL CHIP	0 5% 1/10W
< RESISTOR >				R230	1-216-295-00	METAL CHIP	0 5% 1/10W
R101	1-216-041-00	METAL CHIP	470 5% 1/10W	R231	1-216-065-00	METAL CHIP	4.7K 5% 1/10W
R102	1-216-083-00	METAL CHIP	27K 5% 1/10W	R232	1-216-073-00	METAL CHIP	10K 5% 1/10W
R103	1-216-065-00	METAL CHIP	4.7K 5% 1/10W	R233	1-216-065-00	METAL CHIP	4.7K 5% 1/10W
R104	1-216-127-11	METAL CHIP	1.8M 5% 1/10W	R234	1-216-037-00	METAL CHIP	330 5% 1/10W
R105	1-216-065-00	METAL CHIP	4.7K 5% 1/10W	R235	1-216-065-00	METAL CHIP	4.7K 5% 1/10W
R107	1-216-295-00	METAL CHIP	0 5% 1/10W (EXCEPT GA30/GA40K)	R236	1-216-073-00	METAL CHIP	10K 5% 1/10W
R108	1-216-049-00	METAL CHIP	1K 5% 1/10W	R237	1-216-073-00	METAL CHIP	10K 5% 1/10W
R109	1-216-069-00	METAL CHIP	6.8K 5% 1/10W	R238	1-216-121-91	RES,CHIP	1M 5% 1/10W
R111	1-216-055-00	METAL CHIP	1.8K 5% 1/10W	R239	1-216-073-00	METAL CHIP	10K 5% 1/10W (EXCEPT GA30/GA40K)
R150	1-216-073-00	METAL CHIP	10K 5% 1/10W	R240	1-249-435-11	CARBON	33K 5% 1/4W
				R241	1-216-049-00	METAL CHIP	1K 5% 1/10W
				R242	1-216-085-00	METAL CHIP	33K 5% 1/10W
				R243	1-216-057-00	METAL CHIP	2.2K 5% 1/10W
				R244	1-216-238-91	RES,CHIP	47K 5% 1/8W
				R245	1-249-437-11	CARBON	47K 5% 1/4W
				R246	1-247-807-31	CARBON	100 5% 1/4W
				R247	1-216-033-00	METAL CHIP	220 5% 1/10W

**Note :** The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.

Ref. No.	Part No.	Description	Quantity	Material	Remarks	Ref. No.	Part No.	Description	Quantity	Material	Remarks
R248	1-247-807-31	CARBON	100	5%	1/4W	R301	1-216-065-00	METAL CHIP	4.7K	5%	1/10W
R249	1-216-182-00	RES,CHIP	220	5%	1/8W						(GF90K)
R250	1-216-073-00	METAL CHIP	10K	5%	1/10W	R302	1-216-065-00	METAL CHIP	4.7K	5%	1/10W
					(GA77K)						(GF90K)
R252	1-216-049-00	METAL CHIP	1K	5%	1/10W	R303	1-216-033-00	METAL CHIP	220	5%	1/10W
R253	1-216-049-00	METAL CHIP	1K	5%	1/10W						(GF90K)
R254	1-216-049-00	METAL CHIP	1K	5%	1/10W	R304	1-216-055-00	METAL CHIP	1.8K	5%	1/10W
					(GF90K)						(GF90K)
R255	1-216-049-00	METAL CHIP	1K	5%	1/10W	R305	1-216-083-00	METAL CHIP	27K	5%	1/10W
					(GF90K)						(GF90K)
R256	1-216-071-00	METAL CHIP	8.2K	5%	1/10W	R306	1-216-073-00	METAL CHIP	10K	5%	1/10W
					(GA40K/GA60/GA77K)						(GF90K)
R256	1-216-073-00	METAL CHIP	10K	5%	1/10W	R309	1-216-091-00	METAL CHIP	56K	5%	1/10W
					(GA30/GF90K)						(GF90K)
R257	1-216-055-00	METAL CHIP	1.8K	5%	1/10W	R310	1-216-065-00	METAL CHIP	4.7K	5%	1/10W
					(GF90K)						(GF90K)
R257	1-216-069-00	METAL CHIP	6.8K	5%	1/10W	R311	1-216-041-00	METAL CHIP	470	5%	1/10W
					(GA40K/GA60/GA77K)						(GF90K)
R258	1-216-073-00	METAL CHIP	10K	5%	1/10W	R312	1-216-041-00	METAL CHIP	470	5%	1/10W
R259	1-216-073-00	METAL CHIP	10K	5%	1/10W						(GF90K)
R260	1-216-073-00	METAL CHIP	10K	5%	1/10W	R313	1-216-041-00	METAL CHIP	470	5%	1/10W
R261	1-216-073-00	METAL CHIP	10K	5%	1/10W						(GF90K)
R262	1-216-021-00	METAL CHIP	68	5%	1/10W	R314	1-216-041-00	METAL CHIP	470	5%	1/10W
R263	1-216-021-00	METAL CHIP	68	5%	1/10W						(GF90K)
R264	1-216-089-00	METAL CHIP	47K	5%	1/10W	R315	1-216-689-11	METAL CHIP	39K	0.5%	1/10W
R265	1-216-081-00	METAL CHIP	22K	5%	1/10W						(GF90K)
R266	1-216-037-00	METAL CHIP	330	5%	1/10W	R316	1-216-065-00	METAL CHIP	4.7K	5%	1/10W
											(GF90K)
R267	1-216-019-00	METAL CHIP	56	5%	1/10W	R317	1-216-091-00	METAL CHIP	56K	5%	1/10W
R268	1-216-071-00	METAL CHIP	8.2K	5%	1/10W						(GF90K)
R269	1-216-057-00	METAL CHIP	2.2K	5%	1/10W	R318	1-216-133-00	METAL CHIP	3.3M	5%	1/10W
R270	1-216-121-91	RES,CHIP	1M	5%	1/10W						(GF90K)
R271	1-216-089-00	METAL CHIP	47K	5%	1/10W	R340	1-216-033-00	METAL CHIP	220	5%	1/10W
											(GF90K)
R272	1-216-089-00	METAL CHIP	47K	5%	1/10W	R400	1-216-103-00	METAL CHIP	180K	5%	1/10W
R273	1-216-089-00	METAL CHIP	47K	5%	1/10W	R401	1-216-025-91	RES,CHIP	100	5%	1/10W
R274	1-247-863-91	CARBON	22K	5%	1/4W	R402	1-216-073-00	METAL CHIP	10K	5%	1/10W
					(GF90K)						
R275	1-216-065-00	METAL CHIP	4.7K	5%	1/10W	R403	1-216-079-00	METAL CHIP	18K	5%	1/10W
R276	1-216-057-00	METAL CHIP	2.2K	5%	1/10W	R404	1-216-232-00	RES,CHIP	27K	5%	1/8W
						R405	1-216-077-00	METAL CHIP	15K	5%	1/10W
											(EXCEPT GA30/GA40K)
R277	1-216-073-00	METAL CHIP	10K	5%	1/10W	R406	1-216-689-11	METAL CHIP	39K	0.5%	1/10W
R279	1-249-403-11	CARBON	68	5%	1/4W						(EXCEPT GA30/GA40K)
R280	1-216-021-00	METAL CHIP	68	5%	1/10W	R407	1-216-065-00	METAL CHIP	4.7K	5%	1/10W
R281	1-216-073-00	METAL CHIP	10K	5%	1/10W						
R282	1-216-073-00	METAL CHIP	10K	5%	1/10W	R408	1-216-073-00	METAL CHIP	10K	5%	1/10W
											(GA77K/GF90K)
R283	1-249-429-11	CARBON	10K	5%	1/4W	R409	1-216-125-00	METAL CHIP	1.5M	5%	1/10W
					(EXCEPT GA30/GA40K)	R410	1-216-073-00	METAL CHIP	10K	5%	1/10W
R284	1-216-065-00	METAL CHIP	4.7K	5%	1/10W						(EXCEPT GA30/GA40K)
					(EXCEPT GA30/GA40K)	R411	1-216-073-00	METAL CHIP	10K	5%	1/10W
R285	1-216-073-00	METAL CHIP	10K	5%	1/10W						(EXCEPT GA30/GA40K)
					(GA77K)	R412	1-249-432-11	CARBON	18K	5%	1/4W
R290	1-216-037-00	METAL CHIP	330	5%	1/10W						(EXCEPT GA30/GA40K)
R291	1-216-037-00	METAL CHIP	330	5%	1/10W						
R296	1-216-089-00	METAL CHIP	47K	5%	1/10W	R413	1-216-083-00	METAL CHIP	27K	5%	1/10W
					(GF90K)						(EXCEPT GA30/GA40K)
R297	1-216-073-00	METAL CHIP	10K	5%	1/10W	R414	1-249-393-11	CARBON	10	5%	1/4W
					(GF90K)						(EXCEPT GA30/GA40K)
R298	1-216-073-00	METAL CHIP	10K	5%	1/10W	R415	1-216-049-00	METAL CHIP	1K	5%	1/10W
R299	1-216-073-00	METAL CHIP	10K	5%	1/10W	R416	1-216-049-00	METAL CHIP	1K	5%	1/10W
R300	1-216-081-00	METAL CHIP	22K	5%	1/10W	R417	1-216-041-00	METAL CHIP	470	5%	1/10W
					(GF90K)						

**MA-336**

Ref. No.	Part No.	Description	Quantity	Percentage	Lead Time	Remarks	Ref. No.	Part No.	Description	Quantity	Percentage	Lead Time	Remarks
R418	1-216-073-00	METAL CHIP	10K	5%	1/10W		R565	1-216-081-00	METAL CHIP	22K	5%	1/10W	
R420	1-216-061-00	METAL CHIP	3.3K	5%	1/10W	(GA30/GA40K)							(GA40K/GA77K/GF90K)
R420	1-216-065-00	METAL CHIP	4.7K	5%	1/10W	(EXCEPT GA30/GA40K)	R570	1-216-073-00	METAL CHIP	10K	5%	1/10W	
R421	1-216-065-00	METAL CHIP	4.7K	5%	1/10W	(EXCEPT GA30/GA40K)	R581	1-216-097-91	RES,CHIP	100K	5%	1/10W	
R422	1-216-295-00	METAL CHIP	0	5%	1/10W	(EXCEPT GA30/GA40K)	R582	1-216-049-00	METAL CHIP	1K	5%	1/10W	
R508	1-216-073-00	METAL CHIP	10K	5%	1/10W	(GA40K/GA77K/GF90K)	R583	1-216-089-00	METAL CHIP	47K	5%	1/10W	
R509	1-216-089-00	METAL CHIP	47K	5%	1/10W	(GA40K/GA77K/GF90K)	R584	1-216-089-00	METAL CHIP	47K	5%	1/10W	
R510	1-216-089-00	METAL CHIP	47K	5%	1/10W	(GA40K/GA77K/GF90K)	R585	1-216-089-00	METAL CHIP	47K	5%	1/10W	
R511	1-216-079-00	METAL CHIP	18K	5%	1/10W	(GA40K/GA77K/GF90K)	R586	1-216-073-00	METAL CHIP	10K	5%	1/10W	
R512	1-216-689-11	METAL CHIP	39K	0.5%	1/10W	(GA40K/GA77K/GF90K)	R751	1-216-097-91	RES,CHIP	100K	5%	1/10W	
R513	1-216-689-11	METAL CHIP	39K	0.5%	1/10W	(GA40K/GA77K/GF90K)	R752	1-216-097-91	RES,CHIP	100K	5%	1/10W	
R514	1-216-089-00	METAL CHIP	47K	5%	1/10W	(GA40K/GA77K/GF90K)	R753	1-216-073-00	METAL CHIP	10K	5%	1/10W	
R515	1-216-081-00	METAL CHIP	22K	5%	1/10W	(GA40K/GA77K/GF90K)	R754	1-216-073-00	METAL CHIP	10K	5%	1/10W	
R516	1-216-081-00	METAL CHIP	22K	5%	1/10W	(GA40K/GA77K/GF90K)	R755	1-216-097-91	RES,CHIP	100K	5%	1/10W	
R517	1-216-129-00	METAL CHIP	2.2M	5%	1/10W	(GA40K/GA77K/GF90K)	R756	1-216-097-91	RES,CHIP	100K	5%	1/10W	
R518	1-216-073-00	METAL CHIP	10K	5%	1/10W	(GA40K/GA77K/GF90K)	R757	1-216-089-00	METAL CHIP	47K	5%	1/10W	
R519	1-216-077-00	METAL CHIP	15K	5%	1/10W	(GA40K/GA77K/GF90K)	R758	1-216-089-00	METAL CHIP	47K	5%	1/10W	
R523	1-216-081-00	METAL CHIP	22K	5%	1/10W	(GA40K/GA77K/GF90K)	R759	1-216-073-00	METAL CHIP	10K	5%	1/10W	
R553	1-216-077-00	METAL CHIP	15K	5%	1/10W	(GA77K)	R760	1-216-097-91	RES,CHIP	100K	5%	1/10W	
R553	1-216-689-11	METAL CHIP	39K	0.5%	1/10W	(GA40K/GF90K)	R761	1-216-097-91	RES,CHIP	100K	5%	1/10W	
R555	1-216-077-00	METAL CHIP	15K	5%	1/10W	(GA40K/GA77K/GF90K)	R762	1-216-097-91	RES,CHIP	100K	5%	1/10W	
R556	1-216-077-00	METAL CHIP	15K	5%	1/10W	(GA77K)	R763	1-216-097-91	RES,CHIP	100K	5%	1/10W	
R556	1-216-689-11	METAL CHIP	39K	0.5%	1/10W	(GA40K/GF90K)	R764	1-216-097-91	RES,CHIP	100K	5%	1/10W	
R557	1-216-077-00	METAL CHIP	15K	5%	1/10W	(GA40K/GA77K/GF90K)	R765	1-216-097-91	RES,CHIP	100K	5%	1/10W	
R558	1-216-073-00	METAL CHIP	10K	5%	1/10W	(GA40K/GA77K/GF90K)	R766	1-216-097-91	RES,CHIP	100K	5%	1/10W	
R559	1-216-049-00	METAL CHIP	1K	5%	1/10W	(GA40K/GA77K/GF90K)	R767	1-216-097-91	RES,CHIP	100K	5%	1/10W	
R560	1-216-037-00	METAL CHIP	330	5%	1/10W	(GA40K/GA77K/GF90K)	R768	1-216-097-91	RES,CHIP	100K	5%	1/10W	
R561	1-216-037-00	METAL CHIP	330	5%	1/10W	(GA40K/GA77K/GF90K)	R769	1-216-097-91	RES,CHIP	100K	5%	1/10W	
R562	1-216-097-91	RES,CHIP	100K	5%	1/10W	(GA40K/GA77K/GF90K)	R770	1-216-097-91	RES,CHIP	100K	5%	1/10W	
R563	1-216-097-91	RES,CHIP	100K	5%	1/10W	(GA40K/GA77K/GF90K)	R771	1-216-097-91	RES,CHIP	100K	5%	1/10W	
							R800	1-216-021-00	METAL CHIP	68	5%	1/10W	

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
R801	1-249-412-11	CARBON	390 5% 1/4W F	*	A-6794-584-A	MJ-91 BOARD, COMPLETE (GA40K)	
R802	1-216-190-00	RES,CHIP	470 5% 1/8W (EXCEPT GA30/GA40K)			*****	
R803	1-216-051-00	METAL CHIP	1.2K 5% 1/10W (EXCEPT GA30/GA40K)	*	A-6794-638-A	MJ-91 BOARD, COMPLETE (GA77K/GF90K)	
R803	1-216-057-00	METAL CHIP	2.2K 5% 1/10W (GA30/GA40K)				(Ref.No.:2,000 Series)
R804	1-249-403-11	CARBON	68 5% 1/4W F			< CAPACITOR >	
R805	1-216-190-00	RES,CHIP	470 5% 1/8W	C501	1-124-234-00	ELECT	22uF 20% 16V
R806	1-216-023-00	METAL CHIP	82 5% 1/10W (EXCEPT GA30/GA40K)	C502	1-164-159-21	CERAMIC	0.1uF 50V
R807	1-216-049-00	METAL CHIP	1K 5% 1/10W	C503	1-164-159-21	CERAMIC	0.1uF 50V
R808	1-216-021-00	METAL CHIP	68 5% 1/10W (GF90K)	C504	1-163-259-91	CERAMIC CHIP	220PF 5% 50V
R808	1-216-069-00	METAL CHIP	6.8K 5% 1/10W (GA60/GA77K)	C507	1-164-159-21	CERAMIC	0.1uF 50V
R809	1-216-097-91	RES,CHIP	100K 5% 1/10W (GF90K)	C508	1-163-259-91	CERAMIC CHIP	220PF 5% 50V
R810	1-216-097-91	RES,CHIP	100K 5% 1/10W (GF90K)	C510	1-164-159-21	CERAMIC	0.1uF 50V
△ R952	1-214-947-00	METAL	2.7M 1% 1/2W	C511	1-164-159-21	CERAMIC	0.1uF 50V
R961	1-247-807-31	CARBON	100 5% 1/4W	C545	1-163-121-00	CERAMIC CHIP	150PF 5% 50V
		< MODULATOR >		C546	1-163-121-00	CERAMIC CHIP	150PF 5% 50V
RFU801	1-473-226-11	MODULATOR, RF (RFU-2043)	(EXCEPT GA30/GA40K)	C550	1-163-038-00	CERAMIC CHIP	0.1uF 25V
RFU801	1-473-240-11	MODULATOR, RF (RFU-1048)	(GA30/GA40K)			< CONNECTOR >	
		< VARIABLE RESISTOR >		CN501	1-506-469-11	PIN, CONNECTOR 4P	
RV201	1-223-239-11	RES, ADJ, CARBON 10K(AF SWP) (GF90K)		CN502	1-564-002-11	PIN, CONNECTOR 3P	
RV202	1-223-239-11	RES, ADJ, CARBON 10K(V SWP)				< DIODE >	
		< SWITCH >		D504	8-719-988-62	DIODE 1SS355	
S201	1-771-155-11	SWITCH, ROTARY(MECHANISM MODE)				< IC >	
S202	1-762-108-11	SWITCH, PUSH (1 KEY)(REC PROOF)		IC501	8-759-344-04	IC BA7760F-E2	
S203	1-771-574-21	SWITCH, TACTILE (REC)	(EXCEPT GA30/GA40K)			< JACK >	
S204	1-771-574-21	SWITCH, TACTILE (PAUSE)		MCJ501	1-750-781-11	JACK, LARGE TYPE (MIC IN 1)	
S801	1-571-588-21	SWITCH, SLIDE (TV SYSTEM)	(EXCEPT GA30/GA40K)	MCJ502	1-750-781-11	JACK, LARGE TYPE (MIC IN 2)	
		< TRANSFORMER >				< RESISTOR >	
T401	1-431-554-11	TRANSFORMER, BIAS OSCILLATION	(EXCEPT GA30/GA40K)	R501	1-216-081-00	METAL CHIP	22K 5% 1/10W
△ T951	1-468-248-12	POWER BLOCK		R502	1-216-073-00	METAL CHIP	10K 5% 1/10W
		< VIBRATOR >		R503	1-216-097-91	RES,CHIP	100K 5% 1/10W
X101	1-760-708-11	VIBRATOR, CRYSTAL 4.433619MHz	(EXCEPT GA30/GA40K)	R504	1-216-097-91	RES,CHIP	100K 5% 1/10W
* X102	1-760-709-11	VIBRATOR, CRYSTAL 3.579545MHz		R505	1-216-073-00	METAL CHIP	10K 5% 1/10W
X201	1-767-855-11	VIBRATOR, CRYSTAL 10MHz		R506	1-216-081-00	METAL CHIP	22K 5% 1/10W
X501	1-567-178-00	OSCILLATOR, CERAMIC 455kHz	(GA40K/GA77K/GF90K)	R507	1-216-089-00	METAL CHIP	47K 5% 1/10W
		< VARISTOR >		R550	1-216-689-11	METAL CHIP	39K 0.5% 1/10W
△ Z951	1-801-267-31	VARISTOR TNR10V431K660					

**Note :** The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.

**SR-35**

Ref. No.	Part No.	Description	Remarks		
*	A-6794-642-A	SR-35 BOARD, COMPLETE (GA77K)	*****		
			(Ref.No.:2,000 Series)		
		< CAPACITOR >			
C701	1-126-157-11	ELECT	10uF	20%	16V
C702	1-126-157-11	ELECT	10uF	20%	16V
C703	1-124-234-00	ELECT	22uF	20%	16V
C704	1-164-489-11	CERAMIC CHIP	0.22uF	10%	16V
C705	1-163-809-11	CERAMIC CHIP	0.047uF	10%	25V
C706	1-126-157-11	ELECT	10uF	20%	16V
C707	1-126-157-11	ELECT	10uF	20%	16V
C708	1-126-157-11	ELECT	10uF	20%	16V
C709	1-126-157-11	ELECT	10uF	20%	16V
C710	1-163-038-00	CERAMIC CHIP	0.1uF		25V
C711	1-163-038-00	CERAMIC CHIP	0.1uF		25V
C712	1-163-037-11	CERAMIC CHIP	0.022uF	10%	25V
C713	1-163-037-11	CERAMIC CHIP	0.022uF	10%	25V
C714	1-126-157-11	ELECT	10uF	20%	16V
C715	1-126-157-11	ELECT	10uF	20%	16V
C716	1-126-157-11	ELECT	10uF	20%	16V
C717	1-164-161-11	CERAMIC CHIP	0.0022uF	10%	100V
C718	1-164-232-11	CERAMIC CHIP	0.01uF		50V
C719	1-163-038-00	CERAMIC CHIP	0.1uF		25V
C720	1-126-157-11	ELECT	10uF	20%	16V
C721	1-126-157-11	ELECT	10uF	20%	16V
C722	1-126-157-11	ELECT	10uF	20%	16V
C723	1-126-157-11	ELECT	10uF	20%	16V
C724	1-126-157-11	ELECT	10uF	20%	16V
C725	1-164-232-11	CERAMIC CHIP	0.01uF		50V
C726	1-164-232-11	CERAMIC CHIP	0.01uF		50V
C727	1-164-232-11	CERAMIC CHIP	0.01uF		50V
C728	1-164-232-11	CERAMIC CHIP	0.01uF		50V
C729	1-126-157-11	ELECT	10uF	20%	16V
C730	1-126-157-11	ELECT	10uF	20%	16V
C731	1-126-157-11	ELECT	10uF	20%	16V
C732	1-126-157-11	ELECT	10uF	20%	16V
C733	1-126-157-11	ELECT	10uF	20%	16V
C734	1-126-157-11	ELECT	10uF	20%	16V
		< CONNECTOR >			
CN701	1-573-824-11	CONNECTOR, BOARD TO BOARD 10P			
		< IC >			
IC701	8-759-484-63	IC BA3838F-E2			
IC702	8-752-068-78	IC CXA1842S			
IC703	8-759-480-28	IC MM1354BD			
		< JUMPER RESISTOR >			
JR701	1-216-296-00	METAL CHIP	0	5%	1/8W
JR703	1-216-296-00	METAL CHIP	0	5%	1/8W
		< COIL >			
L701	1-410-516-11	INDUCTOR	39uH		

Ref. No.	Part No.	Description	Remarks		
		< TRANSISTOR >			
Q701	8-729-424-67	TRANSISTOR	UN2216		
Q702	8-729-424-67	TRANSISTOR	UN2216		
Q703	8-729-900-51	TRANSISTOR	DTA114TK		
Q704	8-729-424-67	TRANSISTOR	UN2216		
Q705	8-729-424-67	TRANSISTOR	UN2216		
		< RESISTOR >			
R701	1-216-089-00	METAL CHIP	47K	5%	1/10W
R702	1-216-089-00	METAL CHIP	47K	5%	1/10W
R703	1-216-089-00	METAL CHIP	47K	5%	1/10W
R704	1-216-081-00	METAL CHIP	22K	5%	1/10W
R705	1-216-063-91	RES,CHIP	3.9K	5%	1/10W
R706	1-216-081-00	METAL CHIP	22K	5%	1/10W
R707	1-216-063-91	RES,CHIP	3.9K	5%	1/10W
R708	1-216-089-00	METAL CHIP	47K	5%	1/10W
R709	1-216-061-00	METAL CHIP	3.3K	5%	1/10W
R710	1-216-069-00	METAL CHIP	6.8K	5%	1/10W
R711	1-216-061-00	METAL CHIP	3.3K	5%	1/10W
R712	1-216-069-00	METAL CHIP	6.8K	5%	1/10W
R713	1-216-077-00	METAL CHIP	15K	5%	1/10W
R714	1-216-069-00	METAL CHIP	6.8K	5%	1/10W
R715	1-216-075-00	METAL CHIP	12K	5%	1/10W
R716	1-216-069-00	METAL CHIP	6.8K	5%	1/10W
R717	1-216-069-00	METAL CHIP	6.8K	5%	1/10W
R718	1-216-049-00	METAL CHIP	1K	5%	1/10W
R719	1-216-075-00	METAL CHIP	12K	5%	1/10W
R720	1-216-078-00	RES,CHIP	16K	5%	1/10W
R721	1-216-069-00	METAL CHIP	6.8K	5%	1/10W
R722	1-216-077-00	METAL CHIP	15K	5%	1/10W
R723	1-216-081-00	METAL CHIP	22K	5%	1/10W
R724	1-216-073-00	METAL CHIP	10K	5%	1/10W
R725	1-216-075-00	METAL CHIP	12K	5%	1/10W
R726	1-216-097-91	RES,CHIP	100K	5%	1/10W
R727	1-216-097-91	RES,CHIP	100K	5%	1/10W
R728	1-216-037-00	METAL CHIP	330	5%	1/10W
R729	1-216-037-00	METAL CHIP	330	5%	1/10W
R730	1-216-061-00	METAL CHIP	3.3K	5%	1/10W
R731	1-216-069-00	METAL CHIP	6.8K	5%	1/10W
R732	1-216-061-00	METAL CHIP	3.3K	5%	1/10W
R733	1-216-069-00	METAL CHIP	6.8K	5%	1/10W
R735	1-216-073-00	METAL CHIP	10K	5%	1/10W
R736	1-216-075-00	METAL CHIP	12K	5%	1/10W
R737	1-216-105-91	RES,CHIP	220K	5%	1/10W
R738	1-216-105-91	RES,CHIP	220K	5%	1/10W
R739	1-216-105-91	RES,CHIP	220K	5%	1/10W
R740	1-216-105-91	RES,CHIP	220K	5%	1/10W



Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
		MISCELLANEOUS *****			3-864-834-11	MANUAL, INSTRUCTION (ENGLISH) (GF90K)	
△ 12	1-777-851-41	CORD, POWER			3-864-834-21	MANUAL, INSTRUCTION (ARABIC) (GF90K)	
21	1-790-118-11	CABLE, FLAT (FJK-1) (GA77K/GF90K)			3-864-836-11	MANUAL, INSTRUCTION (ENGLISH) (GA77K)	
22	1-790-119-11	CABLE, FLAT (FFR-6)			3-864-836-21	MANUAL, INSTRUCTION (ARABIC) (GA77K)	
23	1-790-120-11	CABLE, FLAT (FFR-7)			3-864-837-11	MANUAL, INSTRUCTION (ENGLISH) (GA60)	
56	1-790-117-11	CABLE, FLAT (FDM-5)			3-864-837-21	MANUAL, INSTRUCTION (ARABIC) (GA60)	
704	1-500-144-11	HEAD, FE			3-864-837-31	MANUAL, INSTRUCTION (PERSIAN) (GA60)	
721	A-6759-620-A	HEAD BLOCK ASSY, ACE (TDK)			3-864-837-41	MANUAL, INSTRUCTION (URDU) (GA60)	
776	1-759-449-11	DRUM ASSY, DZH-91A-R (GF90K)			3-865-239-11	MANUAL, INSTRUCTION (ENGLISH) (GA30/GA40K)	
776	1-759-453-11	DRUM ASSY, DZH-89A-R (GA60/GA77K)					
776	1-759-455-11	DRUM ASSY, DZH-71D-R (GA30/GA40K)		*	3-961-581-01	SHEET, PROTECTION	
M902	1-698-971-11	MOTOR, DC(CAPSTAN)					
M903	X-3947-577-1	MOTOR ASSY, CAM					
		ACCESSORIES & PACKING MATERIALS *****					
	1-542-273-11	MICROPHONE (F-VJ5301) (GA40K/GA77K/GF90K)		#1	7-685-648-79	SCREW +BVTP 3 × 12 TYPE2 IT-3	
	1-569-008-21	ADAPTOR, CONVERSION 2P (GA60/GA77K/GF90K)		#701	7-685-646-79	SCREW +BVTP 3 × 8 TYPE2 IT-3	
	1-575-334-11	CORD,CONNECTION (FOR AUDIO/VIDEO) (GA60/GA77K/GF90K)		#702	7-682-147-01	SCREW +P 3 × 6	
	1-696-592-11	CORD,CONNECTION (NTSC)(FOR RF) (GA30/GA40K)		#703	7-685-133-19	SCREW (DIA. 2.6) (IT3B)	
	1-696-593-11	CORD,CONNECTION (PAL)(FOR RF) (EXCEPT GA30/GA40K)					

**Note :** The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.



