

**DPO7000, DSA/DPO70000, and DSA/DPO70000B Series
Digital Phosphor Oscilloscopes
Specifications and Performance Verification
Technical Reference**



077-0063-01

Tektronix

DPO7000, DSA/DPO70000, and DSA/DPO70000B Series Digital Phosphor Oscilloscopes Specifications and Performance Verification Technical Reference

This document applies to firmware version 4.0.0 and above.

Warning

The servicing instructions are for use by qualified personnel only. To avoid personal injury, do not perform any servicing unless you are qualified to do so. Refer to all safety summaries prior to performing service.

www.tektronix.com

077-0063-01

Tektronix

Copyright © Tektronix. All rights reserved. Licensed software products are owned by Tektronix or its subsidiaries or suppliers, and are protected by national copyright laws and international treaty provisions.

Tektronix products are covered by U.S. and foreign patents, issued and pending. Information in this publication supersedes that in all previously published material. Specifications and price change privileges reserved.

TEKTRONIX and TEK are registered trademarks of Tektronix, Inc.

Pinpoint, TekLink, and RT-Eye are registered trademarks of Tektronix, Inc.

Contacting Tektronix

Tektronix, Inc.
14200 SW Karl Braun Drive
P.O. Box 500
Beaverton, OR 97077
USA

For product information, sales, service, and technical support:

- In North America, call 1-800-833-9200.
- Worldwide, visit www.tektronix.com to find contacts in your area.

Warranty

Tektronix warrants that this product will be free from defects in materials and workmanship for a period of one (1) year from the date of shipment. If any such product proves defective during this warranty period, Tektronix, at its option, either will repair the defective product without charge for parts and labor, or will provide a replacement in exchange for the defective product. Parts, modules and replacement products used by Tektronix for warranty work may be new or reconditioned to like new performance. All replaced parts, modules and products become the property of Tektronix.

In order to obtain service under this warranty, Customer must notify Tektronix of the defect before the expiration of the warranty period and make suitable arrangements for the performance of service. Customer shall be responsible for packaging and shipping the defective product to the service center designated by Tektronix, with shipping charges prepaid. Tektronix shall pay for the return of the product to Customer if the shipment is to a location within the country in which the Tektronix service center is located. Customer shall be responsible for paying all shipping charges, duties, taxes, and any other charges for products returned to any other locations.

This warranty shall not apply to any defect, failure or damage caused by improper use or improper or inadequate maintenance and care. Tektronix shall not be obligated to furnish service under this warranty a) to repair damage resulting from attempts by personnel other than Tektronix representatives to install, repair or service the product; b) to repair damage resulting from improper use or connection to incompatible equipment; c) to repair any damage or malfunction caused by the use of non-Tektronix supplies; or d) to service a product that has been modified or integrated with other products when the effect of such modification or integration increases the time or difficulty of servicing the product.

THIS WARRANTY IS GIVEN BY TEKTRONIX WITH RESPECT TO THE PRODUCT IN LIEU OF ANY OTHER WARRANTIES, EXPRESS OR IMPLIED. TEKTRONIX AND ITS VENDORS DISCLAIM ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. TEKTRONIX' RESPONSIBILITY TO REPAIR OR REPLACE DEFECTIVE PRODUCTS IS THE SOLE AND EXCLUSIVE REMEDY PROVIDED TO THE CUSTOMER FOR BREACH OF THIS WARRANTY. TEKTRONIX AND ITS VENDORS WILL NOT BE LIABLE FOR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES IRRESPECTIVE OF WHETHER TEKTRONIX OR THE VENDOR HAS ADVANCE NOTICE OF THE POSSIBILITY OF SUCH DAMAGES.

[W2 – 15AUG04]

Table of Contents

General Safety Summary	v
Service Safety Summary	vii

Specifications

Specifications	1-1
Specification Tables	1-1

Performance Verification

Performance Verification	2-1
Conventions	2-1
Brief Procedures	2-3
Self Tests	2-3
Functional Tests	2-4
Performance Tests	2-13
Prerequisites	2-13
Equipment Required	2-13
DPO7000 Series and DSA/DPO70000 Series Test Record	2-16
Signal Acquisition System Checks	2-39
Time Base System Checks	2-73
Trigger System Checks	2-83
Output Signal Checks	2-95
Serial Trigger Checks (Optional on Some Models)	2-100
Sine Wave Generator Leveling Procedure	2-110

List of Figures

Figure 2-1: Toolbar and menu bar (< 4 GHz models shown).....	2-2
Figure 2-2: Universal test hookup for functional tests - Ch 1 shown.....	2-5
Figure 2-3: Channel button location.....	2-6
Figure 2-4: Setup for time base test.....	2-8
Figure 2-5: Setup for trigger test.....	2-10
Figure 2-6: Setup for the file system test.....	2-12
Figure 2-7: Initial test hookup.....	2-39
Figure 2-8: Measurement of DC accuracy at maximum offset and position.....	2-43
Figure 2-9: Initial test hookup.....	2-44
Figure 2-10: Measurement of DC gain accuracy.....	2-57
Figure 2-11: Initial test hookup.....	2-58
Figure 2-12: Measurement of offset accuracy.....	2-61
Figure 2-13: Initial test hookup.....	2-63
Figure 2-14: Measurement of analog bandwidth.....	2-65
Figure 2-15: Initial test hookup.....	2-67
Figure 2-16: Measurement of analog bandwidth.....	2-71
Figure 2-17: Initial test hookup.....	2-72
Figure 2-18: Initial test hookup.....	2-74
Figure 2-19: Initial test hookup.....	2-75
Figure 2-20: Final test hookup.....	2-76
Figure 2-21: Delta time accuracy test hookup.....	2-77
Figure 2-22: Delta time accuracy test hookup.....	2-80
Figure 2-23: Initial test hookup.....	2-84
Figure 2-24: Measurement of time accuracy for pulse and glitch triggering.....	2-84
Figure 2-25: Initial test hookup.....	2-88
Figure 2-26: Measurement of trigger sensitivity - 50 MHz results shown.....	2-90
Figure 2-27: Initial test hookup.....	2-95
Figure 2-28: Measurement of trigger out limits.....	2-96
Figure 2-29: Initial test hookup.....	2-97
Figure 2-30: Measurement of probe compensator frequency.....	2-98
Figure 2-31: Subsequent test hookup.....	2-99
Figure 2-32: Measurement of probe compensator amplitude.....	2-99
Figure 2-33: Initial test hookup.....	2-101
Figure 2-34: Isolated 0 triggering.....	2-103
Figure 2-35: Isolated 1 triggering.....	2-105
Figure 2-36: Initial test hookup.....	2-106
Figure 2-37: Clock recovery.....	2-109
Figure 2-38: Sine wave generator leveling equipment setup.....	2-110

Figure 2-39: Equipment setup for maximum amplitude 2-112

List of Tables

Table 1-1: Channel input and vertical specifications	1-1
Table 1-2: Horizontal and acquisition system specifications	1-24
Table 1-3: Trigger specifications.....	1-30
Table 1-4: Serial Trigger specifications (optional on < 4 GHz models DPO7000 Series).....	1-37
Table 1-5: Input/output port specifications	1-40
Table 1-6: Data storage specifications.....	1-42
Table 1-7: Power source specifications	1-42
Table 1-8: Mechanical specifications.....	1-43
Table 1-9: Environmental specifications.....	1-44
Table 2-1: Vertical settings	2-6
Table 2-2: Test equipment.....	2-14
Table 2-3: DPO7000, DPO/DSA70000 and DPO/DSA70000B Series Test Record.....	2-17
Table 2-4: DC Voltage measurement accuracy.....	2-41
Table 2-5: Gain accuracy	2-45
Table 2-6: Offset accuracy.....	2-59
Table 2-7: Analog bandwidth, < 3.5 GHz models	2-64
Table 2-8: Analog bandwidth ≥ 4 GHz B models	2-68
Table 2-9: Analog bandwidth ≥ 4 GHz non-B models.....	2-68
Table 2-10: Analog bandwidth 3.5 GHz model.....	2-69
Table 2-11: Delta time measurement settings	2-78
Table 2-12: Delta time measurement settings	2-81
Table 2-13: Trigger settings for ≥ 4 GHz models.....	2-92
Table 2-14: Serial pattern data	2-101
Table 2-15: Word recognizer data	2-104
Table 2-16: Clock recovery input frequencies and baud rates.....	2-108

General Safety Summary

Review the following safety precautions to avoid injury and prevent damage to this product or any products connected to it.

To avoid potential hazards, use this product only as specified.

Only qualified personnel should perform service procedures.

While using this product, you may need to access other parts of a larger system. Read the safety sections of the other component manuals for warnings and cautions related to operating the system.

To Avoid Fire or Personal Injury

Use Proper Power Cord. Use only the power cord specified for this product and certified for the country of use.

Ground the Product. This product is grounded through the grounding conductor of the power cord. To avoid electric shock, the grounding conductor must be connected to earth ground. Before making connections to the input or output terminals of the product, ensure that the product is properly grounded.

Observe All Terminal Ratings. To avoid fire or shock hazard, observe all ratings and markings on the product. Consult the product manual for further ratings information before making connections to the product.

The inputs are not rated for connection to mains or Category II, III, or IV circuits.

Do not apply a potential to any terminal, including the common terminal, that exceeds the maximum rating of that terminal.

Power Disconnect. The power cord disconnects the product from the power source. Do not block the power cord; it must remain accessible to the user at all times.

Do Not Operate Without Covers. Do not operate this product with covers or panels removed.

Do Not Operate With Suspected Failures. If you suspect that there is damage to this product, have it inspected by qualified service personnel.

Avoid Exposed Circuitry. Do not touch exposed connections and components when power is present.

Wear Eye Protection. Wear eye protection if exposure to high-intensity rays or laser radiation exists.


Do Not Operate in Wet/Damp Conditions.


Do Not Operate in an Explosive Atmosphere.

Keep Product Surfaces Clean and Dry.

Provide Proper Ventilation. Refer to the manual’s installation instructions for details on installing the product so it has proper ventilation.

Terms in this Manual These terms may appear in this manual:








 **WARNING.** *Warning statements identify conditions or practices that could result in injury or loss of life.*


 **CAUTION.** *Caution statements identify conditions or practices that could result in damage to this product or other property.*

Symbols and Terms on the Product These terms may appear on the product:

- DANGER indicates an injury hazard immediately accessible as you read the marking.
- WARNING indicates an injury hazard not immediately accessible as you read the marking.
- CAUTION indicates a hazard to property including the product.

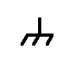The following symbol(s) may appear on the product:

						
CAUTION Refer to Manual	WARNING High Voltage	Protective Ground Earth Terminal (Earth) Terminal	Earth Terminal	Chassis Ground	Mains Disconnected OFF (Power)	Mains Connected ON (Power)


Standby

Service Safety Summary

Only qualified personnel should perform service procedures. Read this *Service Safety Summary* and the *General Safety Summary* before performing any service procedures.

Do Not Service Alone. Do not perform internal service or adjustments of this product unless another person capable of rendering first aid and resuscitation is present.

Disconnect Power. To avoid electric shock, switch off the instrument power, then disconnect the power cord from the mains power.

Use Care When Servicing With Power On. Dangerous voltages or currents may exist in this product. Disconnect power, remove battery (if applicable), and disconnect test leads before removing protective panels, soldering, or replacing components.

To avoid electric shock, do not touch exposed connections.

Specifications

Specifications

This chapter contains the specifications for the instrument. All specifications are guaranteed unless labeled "typical." Typical specifications are provided for your convenience but are not guaranteed. Specifications that are marked with the ✓ symbol are checked in this manual. All specifications apply to all models unless noted otherwise.

≥ 4 GHz models specifications apply to DPO70000, DSA70000, DPO7000B, and DSA70000B Series instruments unless noted otherwise.

To meet specifications, the following conditions must be met:

- The instrument must have been calibrated in an ambient temperature between 18 °C and 28 °C (64 °F and 82 °F).
- The instrument must be operating within the environmental limits. (See page 1-44.)
- The instrument must be powered from a source that meets the specifications.(See page 1-42.)
- The instrument must have been operating continuously for at least 20 minutes within the specified operating temperature range.
- You must perform the Signal Path Compensation procedure after the 20-minute warm-up period, and the ambient temperature must not change more than 5 °C without first repeating the procedure.

Specification Tables

Table 1-1: Channel input and vertical specifications

Characteristic	Description
Number of channels	4, all identical
Input connector	
≥ 4 GHz models	TekConnect.
< 4 GHz models	BNC and VPI probe
Input coupling	
≥ 4 GHz models	DC 50 Ω and GND. GND coupling disconnects the input connector from all channel input circuitry and connects a ground reference to the channel input circuitry.
< 4 GHz models	DC, AC, or GND. GND coupling approximates ground reference by measuring an unused preamplifier input that has been connected to ground. The signal being measured is not disconnected from the channel input load.

Specifications

Characteristic	Description
✓ Input resistance	
≥ 4 GHz B models	100 mV FS to 995 mV FS: 50 Ω ±1.5% at 25 °C (77 °F) 50 Ω ± 2% over 10 to 45 °C (50 to 113 °F) 1 V FS to 5 V FS: 50 Ω ±2.2 Ω over 10 to 45 °C (50 to 113 °F)
≥ 4 GHz non-B models	50 Ω ±1.5% at 25 °C (77 °F) 50 Ω ± 2% over 10 to 45 °C (50 to 113 °F)
Input impedance, < 4 GHz models	
1 MΩ , DC coupled	1 MΩ ± 1% in parallel with 13 pF ± 2 pF
50 Ω , DC coupled, typical	50 Ω ± 1%
Maximum RMS input voltage	
≥ 4 GHz non-B models	<1 V _{RMS} for <1.0 V/Full Scale settings and <5.5 V _{RMS} for ≥ 1.0 V/Full Scale settings
≥ 4 GHz B models	<1 V _{RMS} for <1.0 V/Full Scale settings and <5.0 V _{RMS} for ≥ 1.0 V/Full Scale settings
Maximum Input Voltage, < 4 GHz models	
1 MΩ -DC coupled, 1 MΩ -AC coupled or GND coupled	150 V. Derate at 20 dB/decade to 9 V _{rms} above 200 kHz. The maximum input voltage at the BNC, between center conductor and ground is 400 V peak. The RMS voltage is limited to <150 V for arbitrary waveshapes including DC. The maximum pulse width for impulses with peaks over 150 V is 50 μs. Example: At 0 V to 400 V peak, rectangular wave, the duty factor is 14%. The maximum transient withstand voltage is ± 800 V peak.
50Ω	5 V RMS, with peaks ≤ ± 24 V

Characteristic	Description
Input VSWR, typical	
≥ 4 GHz B models Input Frequency	VSWR < 1 V/Full Scale VSWR ≥ 1 V/Full Scale
<2.5 GHz	1.25 1.2
<6 GHz	1.5 1.2
<14 GHz	2.1 1.5
<15 GHz	2.5 1.5
<20 GHz	3.2 1.9
	Measured with a TekConnect 2.92 mm adapter
≥ 4 GHz non-B models Input Frequency	VSWR < 1 V/Full Scale VSWR ≥ 1 V/Full Scale
<2.5 GHz	1.25 1.2
<6 GHz	1.5 1.2
<14 GHz	2.1 1.5
	2.5 1.5
	Measured with a TekConnect 2.92 mm adapter
< 4 GHz models	f _{in} <3.5 GHz 3.0 f _{in} <2.5 GHz 2.0 f _{in} <2 GHz 1.5 f _{in} <1 GHz 1.2
Number of digitized bits	8 bits
Digitizer nonlinearity, typical	< 1 digitization level (DL), differential; ≤ 1 DL integral, independently based
Sensitivity range	
50 Ω , ≥ 4 GHz B models	100 mV/Full Scale to 5 V/Full Scale, in a 1-2-5 sequence. Below 100 mV/Full Scale, Full Scale (FS) is software zoom.
50 Ω , ≥ 4 GHz non-B models	100 mV/Full Scale to 10 V/Full Scale, in a 1-2-5 sequence. Below 100 mV/Full Scale, Full Scale (FS) is software zoom.
50 Ω , < 4 GHz models	1 mV/div to 1 V/division, in a 1-2-5 sequence Fine adjustment available with ≥1% resolution
1 MΩ , < 4 GHz models	1 mV/div to 10 V/division, in a 1-2-5 sequence Fine adjustment available with ≥1% resolution
✓ DC gain accuracy, sample or average acquisition mode, ≥ 4 GHz models	± 2%
DC gain accuracy, sample or average acquisition mode, < 4 GHz models	± 1.0% with 0 V offset Add 0.5% for ranges <2 mV/div Add 1.5% x Net Offset/Max Offset for ranges <5 mV/div Add 0.5% x Net Offset/Max Offset for ranges ≥ 5 mV/div Add 0.5% for ranges ≥ 1 V/div in 1 MΩ coupling and with offset >10 V

Specifications

Characteristic	Description	
✓ DC voltage measurement accuracy, ≥ 4 GHz B models	<i>Measurement type</i>	<i>DC accuracy (in volts)</i>
Average acquisition mode (≥16 averages)	100 mV/FS to 995 mV/FS	$\pm[(2\% \text{reading} - \text{net offset}) + 0.35\% \text{net offset} +1.5 \text{ mV} + 0.014 \text{ FS}]$
	1 V/FS to 5 V/FS	$\pm[(2\% \text{reading} - \text{net offset}) + 0.35\% \text{net offset} +7.5 \text{ mV} + 0.014 \text{ FS}]$
Delta voltage measurement between any two averages of ≥16 waveforms acquired under the same setup and ambient conditions	100 mV/FS to 5 V/FS	$\pm[(2\% \text{reading}) + 0.016 \text{ FS}]$
✓ DC voltage measurement accuracy ≥ 4 GHz non-B models	<i>Measurement type</i>	<i>DC accuracy (in volts)</i>
Average acquisition mode (≥16 averages)	100 mV/FS to 995 mV/FS	$\pm[(2\% \text{reading} - \text{net offset}) + 0.35\% \text{net offset} +1.5 \text{ mV} + 0.014 \text{ FS}]$
	1 V/FS to 10 V/FS	$\pm[(2\% \text{reading} - \text{net offset}) + 0.35\% \text{net offset} +15 \text{ mV} + 0.014 \text{ FS}]$
Delta voltage measurement between any two averages of ≥16 waveforms acquired under the same setup and ambient conditions	100 mV/FS to 10 V/FS	$\pm[(2\% \text{reading}) + 0.016 \text{ FS}]$
✓ DC voltage measurement accuracy, < 4 GHz models	<i>DC accuracy (in volts)</i>	
Average acquisition mode (≥16 averages)	$\pm(\text{DC Gain Accuracy} \text{reading} - (\text{offset} - \text{position}) + \text{offset accuracy} + 0.1 \text{ division})$ For <5 mV/division settings: $\pm(\text{DC Gain Accuracy} \text{reading} - (\text{offset} - \text{position}) + \text{offset accuracy} + 0.1 \text{ division})$	
Delta voltage measurement between any two averages of ≥16 waveforms acquired under the same setup and ambient conditions	$\pm(\text{DC Gain Accuracy} \text{reading} + 0.05 \text{ division})$ For <5 mV/division settings: $\pm(\text{DC Gain Accuracy} \text{reading} + 0.05 \text{ division})$	
Sample acquisition mode, typical	$\pm(\text{DC Gain Accuracy} \text{reading} - (\text{offset} - \text{position}) + \text{offset accuracy} + 0.15 \text{ division} + 0.6 \text{ mV})$	
Delta voltage measurement between any two samples acquired under the same setup and ambient conditions, typical	$\pm(\text{DC Gain Accuracy} \text{reading} + 0.15 \text{ division} + 1.2 \text{ mV})$ Convert offset, position and the constant offset term to volts by multiplying by the appropriate volts/div. Specification applies to any sample and to the High, Low, Max, Min, Mean, Cycle Mean, RMS, and Cycle RMS measurements. Delta volts specification applies to subtractive calculations involving two of these measurements. Delta volts specification applies to the Positive Overshoot, Negative Overshoot, Pk-Pk, and amplitude measurements.	

Characteristic	Description	
Position range	± 5 divisions	
Offset range		
≥ 4 GHz B models Offset is reduced to allow for position control according to the following formulas: 10 mV/div to 99.5 mV/div Offset range = ±0.500 V - (V/div setting × 5) 100 mV/div to 500 mV/div Offset range = ±2.5 V - (V/div setting × 5)	<i>SCALE range</i>	<i>Offset range</i>
	10 mV/div	±0.450 V
	12 mV/div	±0.440 V
	14 mV/div	±0.430 V
	16 mV/div	±0.420 V
	18 mV/div	±0.410 V
	19.9 mV/div	±0.4005 V
	20 mV/div	±0.400 V
	30 mV/div	±0.350 V
	40 mV/div	±0.300 V
	49.8 mV/div	±0.251 V
	50 mV/div	±0.250 V
	60 mV/div	±0.200 V
	70 mV/div	±0.150 V
	80 mV/div	±0.100 V
	90 mV/div	±0.050 V
	99.5 mV/div	±0.0025 V
	100 mV/div	±2.00 V
	120 mV/div	±1.90 V
	140 mV/div	±1.80 V
160 mV/div	±1.70 V	
180 mV/div	±1.60 V	
200 mV/div	±1.50 V	
248 mV/div	±1.260 V	
250 mV/div	±1.250 V	
300 mV/div	±1.00 V	
400 mV/div	±0.50 V	
500 mV/div	±0.00 V	
≥ 4 GHz non-B models Offset is reduced to allow for position control according to the following formulas: 10 mV/div to 99.5 mV/div Offset range = ±0.500 V - (V/div setting × 5) 100 mV/div to 1 V/div Offset range = ±0.500 V - (V/div setting × 0.5)	<i>SCALE range</i>	<i>Offset range</i>
	10 mV/div	±0.450 V
	20 mV/div	±0.400 V
	50 mV/div	±0.250 V
	100 mV/div	±4.50 V
	200 mV/div	±4.00 V
500 mV/div	±2.50 V	
1 V/div	±0.00 V	

Specifications

Characteristic	Description	
< 4 GHz models, 50 Ω coupling	<i>SCALE range</i>	<i>Offset range</i>
	1 mV/div to 50 mV/div	± 1.0 V
	50.5 mV/div to 99.5 mV/div	± 1.5 V - 10 divisions
	100 mV/div to 500 mV/div	± 10 V
	505 mV/div to 1 V/div	± 15 V - 10 divisions
< 4 GHz models, 1 M Ω coupling	<i>SCALE range</i>	<i>Offset range</i>
	1 mV/div to 50 mV/div	± 1 V
	50.5 mV/div to 99.5 mV/div	± 1.5 V - 10 divisions
	100 mV/div to 500 mV/div	± 10 V
	505 mV/div to 995 mV/div	± 15 V - 10 divisions
	1.0 V/div to 5 V/div	± 100 V
	5.05 V/div to 10 V/div	± 150 V - 10 divisions

Characteristic	Description	
Offset accuracy	<i>Net offset is the nominal voltage that must be applied to the channel to bring the trace to center screen. Net offset = offset - (position × volts/division). Offset accuracy is the accuracy of this voltage level.</i>	
✓ ≥ 4 GHz B models	SCALE range	Offset accuracy
	10 mV/div to 99.5 mV/div	$\pm(0.35\% \mid \text{net offset} \mid + 1.5 \text{ mV} + 1\% \times \text{Full Scale})$
	100 mV/div to 0.5 V/div	$\pm(0.35\% \mid \text{net offset} \mid + 7.5 \text{ mV} + 1\% \times \text{Full Scale})$
✓ ≥ 4 GHz non-B models	SCALE range	Offset accuracy
	10 mV/div to 99.5 mV/div	$\pm(0.35\% \mid \text{net offset} \mid + 1.5 \text{ mV} + 1\% \times \text{Full Scale})$
	100 mV/div to 1 V/div	$\pm(0.35\% \mid \text{net offset} \mid + 15 \text{ mV} + 1\% \times \text{Full Scale})$
< 4 GHz models	SCALE range	Offset accuracy
	1 mV/div to 9.95 mV/div	$\pm(0.2\% \mid \text{net offset} \mid + 1.5 \text{ mV} + 0.1 \text{ div V/div setting})$
	10 mV/div to 99.5 mV/div	$\pm(0.35\% \mid \text{net offset} \mid + 1.5 \text{ mV} + 0.1 \text{ div V/div setting})$
	100 mV/div to 1 V/div	$\pm(0.35\% \mid \text{net offset} \mid + 15 \text{ mV} + 0.1 \text{ div V/div setting})$
	1.01 V/div to 10 V/div	$\pm(0.25\% \mid \text{net offset} \mid + 150 \text{ mV} + 0.1 \text{ div V/div setting})$

Characteristic	Description		
✓ Analog bandwidth	DC 50 Ω coupling, Full bandwidth, TCA-292mm or TCA-N adapter		
Instrument	BW Settings ¹	Bandwidth	Temp Constraint ³
DPO72004B 20 GHz BWE	No DSP	>16 GHz, typical	<30 °C
100 mV full scale (10 mV/div)	Enhanced BW	>18 GHz	<30 °C
20 mV, 50 mV, 100 mV, and 250 mV/div	Enhanced BW	>20 GHz	<30 °C
DPO71604B	No DSP	>16 GHz, typical	<30 °C
	Enhanced BW	>16 GHz	<30 °C
DPO71254B	No DSP	>12.5 GHz	<30 °C
	Enhanced BW	>12.5 GHz	<30 °C
DPO70804B	No DSP	>8 GHz	<45 °C
	Enhanced BW	>8 GHz	<45 °C
DPO70604B	No DSP	>6 GHz	<45 °C
	Enhanced BW	>6 GHz	<45 °C
DPO70404B	No DSP	>4 GHz	<45 °C
	Enhanced BW	>4 GHz	<45 °C
	Temperature Variation Frequency	TC, (dB/ °C)	
	DC - 11 GHz	0	
	12.5 GHz	-0.02	
	16 GHz	-0.04	
	18 GHz	-0.08	
	20 GHz	-0.08	
	Enhanced bandwidth of 12.5 GHz, 16 GHz and 20 GHz is only available at 50 GS/s.		
Instrument	BW Settings ²	Bandwidth	Temp Constraint ³
DPO72004 20 GHz BWE	No DSP	>16 GHz, typical	<30 °C
100 mV and 1 V full scale (10 mv/div and 0.1 V/div)	Enhanced BW	>18 GHz	<30 °C
20 mV, 50 mV, 200 mV, and 500 mV/div	Enhanced BW	>20 GHz	<30 °C
18 GHz BWE	Enhanced BW	>18 GHz	<30 °C
DPO71604	No DSP	>16 GHz, typical	<30 °C
	Enhanced BW	>16 GHz	<30 °C
DPO71254	No DSP	>12.5 GHz	<40 °C
	Enhanced BW	>12.5 GHz	<40 °C
DPO70804	No DSP	>8 GHz	<45 °C
	Enhanced BW	>8 GHz	<45 °C

Characteristic	Description		
DPO70604	No DSP	>6 GHz	<45 °C
	Enhanced BW	>6 GHz	<45 °C
DPO70404	No DSP	>4 GHz	<45 °C
	Enhanced BW	>4 GHz	<45 °C
	Temperature Variation Frequency	TC, (dB/ °C)	
	DC - 11 GHz	0	
	12.5 GHz	-0.02	
	16 GHz	-0.04	
	18 GHz	-0.08	
	20 GHz	-0.08	
	Enhanced bandwidth of 12.5 GHz, 16 GHz and 20 GHz is only available at 50 GS/s.		
Analog bandwidth with P7313 active probe, typical	DPO72004 and	DC >12.5 GHz	
	DPO71604:	DC >11 GHz	
	DPO71254:	DC >8 GHz	
	DPO70804:	DC >6 GHz	
	DPO70604:	DC >4 GHz	
	DPO70404:		

Specifications

Characteristic	Description			
✓ Analog bandwidth	DC 50 Ω coupling, Full bandwidth, operating ambient of ≤ 30 °C (86 °F), derated by 1% for each °C above 30 °C (86 °F)			
		<i>SCALE range</i>	<i>Bandwidth</i>	
DPO7354	10 mV/div to 1 V/div	<i>BWE off</i>	<i>BWE on</i>	
	5 mV/div to 9.9 mV/div	DC to 2.5 GHz	DC to 3.5 GHz	
	2 mV/div to 4.99 mV/div	DC to 2.0 GHz		
	1 mV/div to 1.99 mV/div	DC to 500 MHz, typical		
DPO7254	10 mV/div to 1 V/div	DC to 200 MHz, typical		
	5 mV/div to 9.9 mV/div	DC to 2.5 GHz		
	2 mV/div to 4.99 mV/div	DC to 2.0 GHz		
	1 mV/div to 1.99 mV/div	DC to 500 MHz, typical		
DPO7104	5 mV/div to 1 V/div	DC to 200 MHz, typical		
	2 mV/div to 4.99 mV/div	DC to 1.0 GHz		
	1 mV/div to 1.99 mV/div	DC to 500 MHz, typical		
DPO7054	5 mV/div to 1 V/div	DC to 200 MHz, typical		
	2 mV/div to 4.99 mV/div	DC to 500 MHz		
	1 mV/div to 1.99 mV/div	DC to 400 MHz, typical		
Analog bandwidth, 1 M Ω , DC coupled, typical, < 4 GHz models	Full bandwidth, operating ambient of ≤ 30 °C (86 °F), derated by 1% for each °C above 30 °C (86 °F)			
		<i>SCALE range</i>	<i>Bandwidth</i>	
		5 mV/div to 10 V/div	DC to 500 MHz	
		2 mV/div to 4.98 mV/div	DC to 350 MHz	
Analog bandwidth with TAP2500 VPI probe, typical, DPO7254	Full bandwidth, operating ambient of ≤ 30 °C (86 °F), derated by 1% for each °C above 30 °C (86 °F)			
		<i>SCALE range</i>	<i>Bandwidth</i>	
		≥ 100 mV/div	DC to 175 MHz	
		50 mV/div to 99.58 mV/div	DC to 2.5 GHz	
		20 mV/div to 49.8 mV/div	DC to 2.0 GHz	
	10 mV/div to 19.9 mV/div	DC to 500 MHz		
		DC to 200 MHz		

Characteristic	Description	
Analog bandwidth with X10 passive probe, typical, < 4 GHz models	Full bandwidth, operating ambient of $\leq 30\text{ }^{\circ}\text{C}$ (86 $^{\circ}\text{F}$), derated by 1% for each $^{\circ}\text{C}$ above 30 $^{\circ}\text{C}$ (86 $^{\circ}\text{F}$)	
	<i>SCALE range</i>	<i>Bandwidth</i>
	5 mV/div to 10 V/div	DC to 500 MHz
	2 mV/div to 4.98 mV/div	DC to 300 MHz
	1 mV/div to 1.99 mV/div	DC to 175 MHz
Analog bandwidth selections, < 4 GHz models	20 MHz, 250 MHz and Full	
Lower frequency limit, AC coupled, < 4 GHz models	10 Hz when 1 M, AC coupled. The limit is reduced by a factor of 10 when 10X, passive probes are used.	
Upper frequency limit, 250 MHz bandwidth limited, < 4 GHz models	250 MHz	
Upper frequency limit, 20 MHz bandwidth limited, < 4 GHz models	20 MHz	

Characteristic	Description			
Calculated rise time, 50 Ω , typical ⁴	DSP On 10% - 90%	20% - 80%	DSP Off 10% - 90%	20% - 80%
DPO72004B	18.0 ps		NA	NA
DPO71604B	24.5 ps		30 ps	20 ps
DPO71254B	32.0 ps		33 ps	23 ps
DPO70804B	49 ps	34 ps	47 ps	32 ps
DPO70604B	65 ps	45 ps	62 ps	43 ps
DPO70404B	98 ps	68 ps	93 ps	65 ps
DPO72004	22.5 ps		NA	NA
DPO71604	27.5 ps		30 ps	20 ps
DPO71254	34.3 ps		33 ps	23 ps
DPO70804	47 ps	33 ps	47 ps	32 ps
DPO70604	62 ps	43 ps	62 ps	43 ps
DPO70404	93 ps	65 ps	93 ps	65 ps
DPO7354				
1 mV/div - 1.99 mV/div	1.2 ns			
2 mV/div - 4.99 mV/div	650 ps			
5 mV/div - 9.9 mV/div	180 ps			
10 mV/div - 1 V/div, BWE off	145 ps			
10 mV/div - 1 V/div, BWE on	115 ps			
DPO7254				
1 mV/div - 1.99 mV/div	1.2 ns			
2 mV/div - 4.99 mV/div	650 ps			
5 mV/div - 9.9 mV/div	180 ps			
10 mV/div - 1 V/div	160 ps			
DPO7104				
1 mV/div - 1.99 mV/div	1.2 ns			
2 mV/div - 4.99 mV/div	580 ps			
5 mV/div - 9.9 mV/div	300 ps			
10 mV/div - 1 V/div	300 ps			
DPO7054				
1 mV/div - 1.99 mV/div	1.2 ns			
2 mV/div - 4.99 mV/div	680 ps			
5 mV/div - 9.9 mV/div	460 ps			
10 mV/div - 1 V/div	460 ps			

Characteristic	Description			
Step response settling time, typical, ≥ 4 GHz B models	The time by which the step response enters and stays below the indicated % error. Step transition occurs at the 50% amplitude point of the step leading edge.			
	DSP off			
Instrument	Gain setting (FS)	\pm Step amplitude	Settling Error Amount	Time
DPO72004B	100 mV - 5 V	$\leq 100\%$ FS,	< 9%	150 ps
		no more than	< 5.5%	400 ps
		$\leq 50\%$ FS overdrive	< 2.5%	3 ns
			< 0.15%	1 ms
DPO71604B	100 mV - 5 V	$\leq 100\%$ FS,	< 9%	150 ps
		no more than	< 5.5%	400 ps
		$\leq 50\%$ FS overdrive	< 2.5%	3 ns
			< 0.15%	1 ms
DPO71254B	100 mV - 5 V	$\leq 100\%$ FS,	< 9%	150 ps
		no more than	< 5.5%	400 ps
		$\leq 50\%$ FS overdrive	< 2.5%	3 ns
			< 0.15%	1 ms
DPO70804B	100 mV - 5 V	$\leq 100\%$ FS,	< 6%	150 ps
		no more than	< 3%	600 ps
		50% FS overdrive	< 2.5%	3 ns
			< 0.15%	1 ms
DPO70604B	100 mV - 5 V	$\leq 100\%$ FS,	< 6%	200 ps
		no more than	< 3%	800 ps
		50% FS overdrive	< 2.5%	3 ns
			< 0.15%	1 ms
DPO70404B	100 mV - 5 V	$\leq 100\%$ FS,	< 6%	300 ps
		no more than	< 3%	1.2 ns
		50% FS overdrive	< 2.5%	3 ns
			< 0.15%	1 ms

Specifications

Characteristic	Description			
	DSP on			
Instrument	Gain setting (FS)	\pm Step amplitude	Settling Error Amount	Time
DPO72004B	100 mV - 5 V	$\leq 100\%$ FS,	<6%	100 ps
		no more than	<3%	400 ps
		50% FS overdrive	<2.5%	3 ns
			<0.15%	1 ms
DPO71604B	100 mV - 5 V	$\leq 100\%$ FS,	<6%	100 ps
		no more than	<3%	400 ps
		50% FS overdrive	<2.5%	3 ns
			<0.15%	1 ms
DPO71254B	100 mV - 5 V	$\leq 100\%$ FS,	<6%	100 ps
		no more than	<3%	400 ps
		50% FS overdrive	< 2.5%	3 ns
			< 0.15%	1 ms
DPO70804B	100 mV - 5 V	$\leq 100\%$ FS,	< 6%	150 ps
		no more than	< 3%	600 ps
		50% FS overdrive	< 2.5%	3 ns
			< 0.15%	1 ms
DPO70604B	100 mV - 5 V	$\leq 100\%$ FS,	< 6%	200 ps
		no more than	< 3%	800 ps
		50% FS overdrive	< 2.5%	3 ns
			< 0.15%	1 ms
DPO70404B	100 mV - 5 V	$\leq 100\%$ FS,	< 6%	300 ps
		no more than	< 3%	1.2 ns
		50% FS overdrive	< 2.5%	3 ns
			< 0.15%	1 ms

Characteristic	Description			
Step response settling time, typical, ≥ 4 GHz non-B models	The time by which the step response enters and stays below the indicated % error. Step transition occurs at the 50% amplitude point of the step leading edge.			
	DSP off			
Instrument	Gain setting (FS)	\pm Step amplitude	Settling Error Amount	Time
DPO72004	100 mV - 10 V	$\leq 100\%$ FS, no more than $\leq 50\%$ FS overdrive	$< 9\%$ $< 5.5\%$ $< 2.5\%$ $< 0.15\%$	150 ps 400 ps 3 ns 1 ms
DPO71604	100 mV - 10 V	$\leq 100\%$ FS, no more than $\leq 50\%$ FS overdrive	$< 9\%$ $< 45.5\%$ $< 2.5\%$ $< 0.15\%$	150 ps 400 ps 3 ns 1 ms
DPO71254	100 mV - 10 V	$\leq 100\%$ FS, no more than $\leq 50\%$ FS overdrive	$< 9\%$ $< 5.5\%$ $< 2.5\%$ $< 0.15\%$	150 ps 400 ps 3 ns 1 ms
DPO70804	100 mV - 10 V	$\leq 100\%$ FS, no more than 50% FS overdrive	$< 6\%$ $< 3\%$ $< 2.5\%$ $< 0.15\%$	150 ps 600 ps 3 ns 1 ms
DPO70604	100 mV - 10 V	$\leq 100\%$ FS, no more than 50% FS overdrive	$< 6\%$ $< 3\%$ $< 2.5\%$ $< 0.15\%$	200 ps 800 ps 3 ns 1 ms
DPO70404	100 mV - 10 V	$\leq 100\%$ FS, no more than 50% FS overdrive	$< 6\%$ $< 3\%$ $< 2.5\%$ $< 0.15\%$	300 ps 1.2 ns 3 ns 1 ms

Characteristic	Description			
	DSP on			
Instrument	Gain setting (FS)	± Step amplitude	Settling Error Amount	Time
DPO72004	100 mV - 10 V	No overdrive	<6%	100 ps
			<3%	400 ps
			<2.5%	3 ns
			<0.15%	1 ms
DPO71604	100 mV - 10 V	No overdrive	<6%	100 ps
			<3%	400 ps
			<2.5%	3 ns
			<0.15%	1 ms
DPO71254	100 mV - 10 V	No overdrive	<6%	100 ps
			<3%	400 ps
			< 2.5%	3 ns
			< 0.15%	1 ms
DPO70804	100 mV - 10 V	≤ 100% FS, no more than 50% FS overdrive	< 6%	150 ps
			< 3%	600 ps
			< 2.5%	3 ns
			< 0.15%	1 ms
DPO70604	100 mV - 10 V	≤ 100% FS, no more than 50% FS overdrive	< 6%	200 ps
			< 3%	800 ps
			< 2.5%	3 ns
			< 0.15%	1 ms
DPO70404	100 mV - 10 V	≤ 100% FS, no more than 50% FS overdrive	< 6%	300 ps
			< 3%	1.2 ns
			< 2.5%	3 ns
			< 0.15%	1 ms
Pulse response, peak detect, or envelope mode, typical	Sample rate setting		Minimum pulse width	
	< 4 GHz models	≤ 10 GS/s	1 ÷ (sample rate) or 100 ps	
		≥ 40 MS/s	1 ÷ (sample rate) or 25 ps	
<p>This instrument uses analog peak detection for pulse capture in Peak Detect or Envelope mode at sample rates of 125 MS per second and slower. At faster sample rates the instrument uses conventional sampling.</p> <p>The minimum single pulse widths for 50% or greater amplitude capture for pulses greater than 2 divisions in magnitude.</p>				

Effective bits, typical

≥ 4 GHz B models	Nine division sine wave input at the indicated frequency, sampled at 500 mV FS and maximum sample rate						
	Enhanced bandwidth						
Input frequency	DPO72004B 20 GHz	DPO72004B 18 GHz	DPO71604B 16 GHz	DPO71254B 12.5 GHz	DPO70804B 8 GHz	DPO70604B 6 GHz	DPO70404B 4 GHz
10 MHz	5.0 bits	5.4 bits	5.7 bits	5.9 bits	5.7 bits	5.8 bits	6.0 bits
1 GHz	5.0 bits	5.4 bits	5.6 bits	5.8 bits	5.7 bits	5.8 bits	5.9 bits
2 GHz	4.9 bits	5.4 bits	5.6 bits	5.7 bits	5.7 bits	5.7 bits	5.8 bits
3 GHz	4.9 bits	5.3 bits	5.5 bits	5.6 bits	5.5 bits	5.6 bits	5.7 bits
4 GHz	4.8 bits	5.3 bits	5.5 bits	5.6 bits	5.5 bits	5.6 bits	5.7 bits
5 GHz	4.8 bits	5.2 bits	5.4 bits	5.5 bits	5.5 bits	5.5 bits	
6 GHz	4.7 bits	5.1 bits	5.3 bits	5.4 bits	5.4 bits	5.4 bits	
7 GHz	4.5 bits	5.0 bits	5.1 bits	5.5 bits	5.4 bits		
8 GHz	3.9 bits	4.0 bits	4.4 bits	5.6 bits	5.4 bits		
9 GHz	3.4 bits	3.5 bits	5.1 bits	5.6 bits			
10 GHz	2.8 bits	4.3 bits	5.5 bits	5.6 bits			
11 GHz	4.0 bits	5.2 bits	5.4 bits	5.6 bits			
12 GHz	4.8 bits	5.2 bits	5.4 bits	5.6 bits			
13 GHz	4.5 bits	5.1 bits	5.2 bits				
14 GHz	4.4 bits	5.1 bits	5.1 bits				
15 GHz	4.5 bits	5.1 bits	5.1 bits				
16 GHz	4.5 bits	5.1 bits	5.1 bits				
17 GHz	4.4 bits	5.2 bits					
18 GHz	4.5 bits	5.1 bits					
19 GHz	4.6 bits						
20 GHz	4.8 bits						

Without enhanced bandwidth							
Input frequency	DPO72004B	DPO71604B	DPO71254B	DPO70804B	DPO70604B	DPO70404B	
10 MHz	5.4 bits	5.4 bits	5.6 bits	5.6 bits	5.7 bits	5.8 bits	
1 GHz	5.4 bits	5.4 bits	5.5 bits	5.6 bits	5.7 bits	5.8 bits	
2 GHz	5.3 bits	5.3 bits	5.4 bits	5.4 bits	5.6 bits	5.7 bits	
3 GHz	5.3 bits	5.3 bits	5.4 bits	5.4 bits	5.5 bits	5.6 bits	
4 GHz	5.2 bits	5.2 bits	5.3 bits	5.3 bits	5.4 bits	5.5 bits	
5 GHz	5.2 bits	5.2 bits	5.3 bits	5.2 bits	5.3 bits		
6 GHz	5.0 bits	5.0 bits	5.2 bits	5.2 bits	5.3 bits		
7 GHz	4.8 bits	4.8 bits	5.1 bits	5.2 bits			
8 GHz	4.4 bits	4.4 bits	5.0 bits	5.2 bits			
9 GHz	4.1 bits	4.1 bits	5.0 bits				
10 GHz	4.0 bits	4.0 bits	5.1 bits				
11 GHz	4.1 bits	4.1 bits	5.2 bits				
12 GHz	3.8 bits	3.8 bits	5.1 bits				
13 GHz	4.1 bits	4.1 bits					
14 GHz	4.7 bits	4.7 bits					
15 GHz	4.7 bits	4.7 bits					
16 GHz	4.7 bits	4.7 bits					
≥ 4 GHz non-B models	Nine division sine wave input at the indicated frequency, sampled at 500 mV FS and maximum sample rate						
Enhanced bandwidth							
Input frequency	DPO72004 20 GHz	DPO72004 18 GHz	DPO71604 16 GHz	DPO71254 12.5 GHz	DPO70804 8 GHz	DPO70604 6 GHz	DPO70404 4 GHz
10 MHz	5.0 bits	5.4 bits	5.7 bits	5.9 bits	5.7 bits	5.8 bits	6.0 bits
1 GHz	5.0 bits	5.4 bits	5.6 bits	5.8 bits	5.7 bits	5.8 bits	5.9 bits
2 GHz	4.9 bits	5.4 bits	5.6 bits	5.7 bits	5.7 bits	5.7 bits	5.8 bits
3 GHz	4.9 bits	5.3 bits	5.5 bits	5.6 bits	5.5 bits	5.6 bits	5.7 bits
4 GHz	4.8 bits	5.3 bits	5.5 bits	5.6 bits	5.5 bits	5.6 bits	5.7 bits
5 GHz	4.8 bits	5.2 bits	5.4 bits	5.5 bits	5.5 bits	5.5 bits	
6 GHz	4.7 bits	5.1 bits	5.3 bits	5.4 bits	5.4 bits	5.4 bits	
7 GHz	4.5 bits	5.0 bits	5.1 bits	5.5 bits	5.4 bits		
8 GHz	4.2 bits	4.4 bits	4.4 bits	5.6 bits	5.3 bits		
9 GHz	3.4 bits	3.5 bits	5.1 bits	5.6 bits			
10 GHz	2.8 bits	4.3 bits	5.5 bits	5.6 bits			
11 GHz	4.0 bits	5.2 bits	5.4 bits	5.6 bits			
12 GHz	4.8 bits	5.2 bits	5.4 bits	5.6 bits			
13 GHz	4.5 bits	5.1 bits	5.4 bits				
14 GHz	4.4 bits	5.1 bits	5.3 bits				

15 GHz	4.5 bits	5.1 bits	5.3 bits
16 GHz	4.5 bits	5.1 bits	5.3 bits
17 GHz	4.4 bits	5.2 bits	
18 GHz	4.5 bits	5.1 bits	
19 GHz	4.6 bits		
20 GHz	4.8 bits		

Without enhanced bandwidth

Input frequency	DPO72004	DPO71604	DPO71254	DPO70804	DPO70604	DPO70404
10 MHz	5.4 bits	5.4 bits	5.6 bits	5.6 bits	5.7 bits	5.8 bits
1 GHz	5.4 bits	5.4 bits	5.5 bits	5.6 bits	5.7 bits	5.8 bits
2 GHz	5.3 bits	5.3 bits	5.4 bits	5.4 bits	5.6 bits	5.7 bits
3 GHz	5.3 bits	5.3 bits	5.4 bits	5.4 bits	5.5 bits	5.6 bits
4 GHz	5.2 bits	5.2 bits	5.3 bits	5.3 bits	5.4 bits	5.5 bits
5 GHz	5.2 bits	5.2 bits	5.3 bits	5.2 bits	5.3 bits	
6 GHz	5 bits	5 bits	5.2 bits	5.2 bits	5.3 bits	
7 GHz	4.8 bits	4.8 bits	5.1 bits	5.2 bits		
8 GHz	4.4 bits	4.4 bits	5.0 bits	5.2 bits		
9 GHz	4.1 bits	4.1 bits	5.0 bits			
10 GHz	4.0 bits	4.0 bits	5.1 bits			
11 GHz	4.1 bits	4.1 bits	5.2 bits			
12 GHz	3.8 bits	3.8 bits	5.1 bits			
13 GHz	4.1 bits	4.1 bits				
14 GHz	4.7 bits	4.7 bits				
15 GHz	4.7 bits	4.7 bits				
16 GHz	4.7 bits	4.7 bits				

Noise, typical

Gain setting	Without enhanced bandwidth					
	DPO72004B	DPO71604B	DPO71254B	DPO70804B	DPO70604B	DPO70404B
10 mV	0.78 mV	0.78 mV	0.65 mV	0.57 mV	0.53 mV	0.50 mV
15 mV	0.82 mV	0.82 mV	0.74 mV	0.75 mV	0.73 mV	0.69 mV
20 mV	1.08 mV	1.08 mV	0.97 mV	0.90 mV	0.86 mV	0.85 mV
30 mV	1.43 mV	1.43 mV	1.34 mV	1.34 mV	1.25 mV	1.24 mV
40 mV	1.84 mV	1.84 mV	1.68 mV	1.76 mV	1.67 mV	1.67 mV
50 mV	2.45 mV	2.45 mV	2.26 mV	2.03 mV	2.02 mV	2.03 mV
60 mV	2.74 mV	2.74 mV	2.53 mV	2.52 mV	2.46 mV	2.47 mV
70 mV	3.22 mV	3.22 mV	2.99 mV	3.02 mV	2.90 mV	2.91 mV
80 mV	3.71 mV	3.71 mV	3.44 mV	3.52 mV	3.34 mV	3.35 mV
90 mV	3.97 mV	3.97 mV	3.84 mV	3.87 mV	3.78 mV	3.78 mV

Specifications

100 mV	5.36 mV	5.36 mV	4.61 mV	4.50 mV	4.28 mV	4.28 mV		
200 mV	9.24 mV	9.24 mV	8.40 mV	8.80 mV	8.36 mV	8.36 mV		
250 mV	12.42 mV	12.42 mV	11.39 mV	10.92 mV	10.47 mV	10.47 mV		
300 mV	13.61 mV	13.61 mV	12.56 mV	13.04 mV	12.58 mV	12.58 mV		
400 mV	17.99 mV	17.99 mV	16.72 mV	17.28 mV	16.80 mV	16.80 mV		
450 mV	20.17 mV	20.17 mV	18.80 mV	19.39 mV	18.92 mV	18.91 mV		
500 mV	22.46 mV	22.46 mV	20.87 mV	21.51 mV	21.03 mV	21.03 mV		
Enhanced bandwidth								
DPO72004B, DPO71604B, DPO71254B where applicable	20 GHz	19 GHz	18 GHz	17 GHz	16 GHz	15 GHz	14 GHz	13 GHz
Gain setting								
10 mV	NA	NA	0.90 mV	0.77 mV	0.63 mV	0.64 mV	0.65 mV	0.66 mV
15 mV	NA	NA	0.97 mV	0.84 mV	0.71 mV	0.73 mV	0.74 mV	0.76 mV
20 mV	2.17 mV	1.75 mV	1.34 mV	1.12 mV	0.90 mV	0.92 mV	0.94 mV	0.97 mV
30 mV	2.81 mV	2.28 mV	1.75 mV	1.50 mV	1.26 mV	1.29 mV	1.32 mV	1.35 mV
40 mV	3.53 mV	2.93 mV	2.33 mV	1.99 mV	1.66 mV	1.66 mV	1.65 mV	1.65 mV
50 mV	3.67 mV	3.14 mV	2.61 mV	2.37 mV	2.13 mV	2.18 mV	2.22 mV	2.26 mV
60 mV	4.06 mV	3.47 mV	2.88 mV	2.66 mV	2.43 mV	2.47 mV	2.250 mV	2.54 mV
70 mV	4.73 mV	4.04 mV	3.36 mV	3.13 mV	2.90 mV	2.93 mV	2.96 mV	2.99 mV
80 mV	5.41 mV	4.62 mV	3.83 mV	3.60 mV	3.38 mV	3.40 mV	3.42 mV	3.44 mV
90 mV	5.71 mV	4.96 mV	4.21 mV	3.94 mV	3.67 mV	3.74 mV	3.81 mV	3.87 mV
100 mV	10.86 mV	8.77 mV	6.68 mV	5.58 mV	4.47 mV	4.59 mV	4.71 mV	4.83 mV
200 mV	17.66 mV	14.65 mV	11.65 mV	10.07 mV	8.50 mV	8.43 mV	8.36 mV	8.30 mV
250 mV	20.74 mV	18.26 mV	14.78 mV	13.09 mV	11.40 mV	11.41 mV	11.41 mV	11.42 mV
300 mV	22.34 mV	18.95 mV	15.55 mV	14.02 mV	12.49 mV	12.56 mV	12.63 mV	12.71 mV
400 mV	27.03 mV	22.25 mV	19.46 mV	17.97 mV	16.48 mV	16.69 mV	16.90 mV	17.12 mV
450 mV	29.38 mV	25.40 mV	21.42 mV	19.95 mV	18.47 mV	18.76 mV	19.04 mV	19.32 mV
500 mV	31.72 mV	27.55 mV	23.37 mV	21.92 mV	20.47 mV	20.82 mV	21.17 mV	21.53 mV
DPO72004B, DPO71604B, DPO71254B where applicable	12.5 GHz	12 GHz	11 GHz	10 GHz	9 GHz	8 GHz	7 GHz	6 GHz
Gain setting								
10 mV	0.67 mV	0.64 mV	0.59 mV	0.54 mV	0.49 mV	0.44 mV	0.42 mV	0.40 mV
15 mV	0.84 mV	0.75 mV	0.70 mV	0.65 mV	0.60 mV	0.55 mV	0.53 mV	0.50 mV
20 mV	0.98 mV	0.94 mV	0.88 mV	0.81 mV	0.74 mV	0.67 mV	0.63 mV	0.60 mV

30 mV	1.49 mV	1.32 mV	1.22 mV	1.11 mV	1.01 mV	0.91 mV	0.87 mV	0.82 mV
40 mV	1.80 mV	1.60 mV	1.49 mV	1.38 mV	1.27 mV	1.16 mV	1.09 mV	1.01 mV
50 mV	2.29 mV	2.20 mV	2.02 mV	1.84 mV	1.66 mV	1.48 mV	1.40 mV	1.31 mV
60 mV	2.78 mV	2.46 mV	2.26 mV	2.06 mV	1.87 mV	1.67 mV	1.58 mV	1.50 mV
70 mV	3.27 mV	2.89 mV	2.66 mV	2.44 mV	2.21 mV	1.98 mV	1.88 mV	1.78 mV
80 mV	3.76 mV	3.33 mV	3.07 mV	2.81 mV	2.55 mV	2.29 mV	2.18 mV	2.07 mV
90 mV	4.25 mV	3.75 mV	3.44 mV	3.13 mV	2.83 mV	2.52 mV	2.39 mV	2.25 mV
100 mV	4.89 mV	4.68 mV	4.27 mV	3.85 mV	3.44 mV	3.02 mV	3.00 mV	2.99 mV
200 mV	8.98 mV	7.99 mV	7.45 mV	6.91 mV	6.37 mV	5.82 mV	5.45 mV	5.07 mV
250 mV	11.42 mV	11.02 mV	10.21 mV	9.41 mV	8.61 mV	7.81 mV	7.33 mV	6.86 mV
300 mV	13.85 mV	12.28 mV	11.34 mV	10.41 mV	9.48 mV	8.54 mV	8.05 mV	7.55 mV
400 mV	18.72 mV	16.56 mV	15.24 mV	13.91 mV	12.59 mV	11.26 mV	10.65 mV	10.04 mV
450 mV	21.16 mV	18.70 mV	17.18 mV	15.66 mV	14.14 mV	12.62 mV	11.95 mV	11.28 mV
500 mV	23.59 mV	20.85 mV	19.13 mV	17.41 mV	15.70 mV	13.38 mV	13.25 mV	12.52 mV
DPO72004B, DPO71604B, DPO71254B where applicable	5 GHz	4 GHz	3 GHz	2 GHz	1 GHz	500 MHz		
Gain setting								
10 mV	0.37 mV	0.34 mV	0.40 mV	0.30 mV	0.28 mV	0.26 mV		
15 mV	0.47 mV	0.44 mV	0.41 mV	0.38 mV	0.35 mV	0.34 mV		
20 mV	0.56 mV	0.53 mV	0.49 mV	0.46 mV	0.42 mV	0.40 mV		
30 mV	0.76 mV	0.71 mV	0.66 mV	0.61 mV	0.56 mV	0.53 mV		
40 mV	0.96 mV	0.90 mV	0.83 mV	0.76 mV	0.70 mV	0.66 mV		
50 mV	1.21 mV	1.10 mV	1.02 mV	0.92 mV	0.83 mV	0.78 mV		
60 mV	1.39 mV	1.28 mV	1.19 mV	1.09 mV	0.99 mV	0.94 mV		
70 mV	1.66 mV	1.54 mV	1.44 mV	1.33 mV	1.22 mV	1.16 mV		
80 mV	1.93 mV	1.80 mV	1.69 mV	1.57 mV	1.44 mV	1.38 mV		
90 mV	2.08 mV	1.92 mV	1.78 mV	1.63 mV	1.48 mV	1.40 mV		
100 mV	2.82 mV	2.65 mV	2.62 mV	2.53 mV	2.43 mV	2.39 mV		
200 mV	4.79 mV	4.51 mV	4.14 mV	3.81 mV	3.48 mV	3.32 mV		
250 mV	6.44 mV	6.01 mV	5.54 mV	5.09 mV	4.65 mV	4.42 mV		
300 mV	7.05 mV	6.55 mV	6.06 mV	5.56 mV	5.06 mV	4.81 mV		
400 mV	9.32 mV	8.60 mV	7.98 mV	7.31 mV	6.64 mV	6.31 mV		
450 mV	10.45 mV	9.62 mV	8.93 mV	8.18 mV	7.43 mV	7.06 mV		
500 mV	11.58 mV	10.64 mV	9.89 mV	9.06 mV	8.22 mV	7.81 mV		

Specifications

DPO70804B, DPO70604B, DPO70404B where applicable	8 GHz	7 GHz	6 GHz	5 GHz	4 GHz	3 GHz	2 GHz	1 GHz	500 MHz
Gain setting									
10 mV	0.54 mV	0.51 mV	0.48 mV	0.45 mV	0.43 mV	0.40 mV	0.37 mV	0.34 mV	0.33 mV
15 mV	0.73 mV	0.69 mV	0.64 mV	0.60 mV	0.55 mV	0.50 mV	0.46 mV	0.41 mV	0.39 mV
20 mV	0.85 mV	0.81 mV	0.77 mV	0.72 mV	0.68 mV	0.63 mV	0.59 mV	0.55 mV	0.53 mV
30 mV	1.34 mV	1.25 mV	1.16 mV	1.07 mV	0.98 mV	0.89 mV	0.80 mV	0.71 mV	0.67 mV
40 mV	1.67 mV	1.58 mV	1.50 mV	1.341 mV	1.32 mV	1.23 mV	1.15 mV	1.06 mV	1.02 mV
50 mV	1.94 mV	1.85 mV	1.76 mV	1.67 mV	1.58 mV	1.49 mV	1.40 mV	1.31 mV	1.27 mV
60 mV	2.41 mV	2.29 mV	2.17 mV	2.12 mV	2.08 mV	1.97 mV	1.88 mV	1.80 mV	1.76 mV
70 mV	2.88 mV	2.73 mV	2.58 mV	2.49 mV	2.40 mV	2.26 mV	2.14 mV	2.02 mV	1.96 mV
80 mV	3.35 mV	3.17 mV	2.99 mV	2.77 mV	2.55 mV	2.37 mV	2.17 mV	1.97 mV	1.87 mV
90 mV	3.70 mV	3.52 mV	3.35 mV	3.13 mV	2.90 mV	2.73 mV	2.53 mV	2.33 mV	2.23 mV
100 mV	3.96 mV	3.89 mV	3.83 mV	3.60 mV	3.37 mV	3.29 mV	3.15 mV	3.00 mV	2.93 mV
200 mV	8.36 mV	7.92 mV	7.48 mV	7.04 mV	6.60 mV	6.16 mV	5.72 mV	5.28 mV	5.06 mV
250 mV	10.39 mV	9.86 mV	9.33 mV	8.76 mV	8.19 mV	7.66 mV	7.11 mV	6.56 mV	6.28 mV
300 mV	12.41 mV	11.80 mV	11.18 mV	10.48 mV	9.78 mV	9.15 mV	8.49 mV	7.83 mV	7.50 mV
400 mV	16.47 mV	15.67 mV	14.88 mV	13.91 mV	12.95 mV	12.14 mV	11.26 mV	10.38 mV	9.94 mV
450 mV	18.50 mV	17.61 mV	16.72 mV	15.63 mV	14.54 mV	13.63 mV	12.64 mV	11.65 mV	11.16 mV
500 mV	20.53 mV	19.55 mV	18.57 mV	17.35 mV	16.13 mV	15.13 mV	14.03 mV	12.93 mV	12.38 mV
≥ 4 GHz non-B models	Without enhanced bandwidth								
Gain setting	DPO72004	DPO71604	DPO71254	DPO70804	DPO70604	DPO70404			
10 mV	940 μV	940 μV	720 μV	600 μV	550 μV	520 μV			
15 mV	1.2 mV	1.2 mV	950 μV	800 μV	780 μV	740 μV			
20 mV	1.45 mV	1.45 mV	1.17 mV	1.0 mV	950 μV	950 μV			
30 mV	2.2 mV	2.2 mV	1.8 mV	1.5 mV	1.4 mV	1.4 mV			
40 mV	2.8 mV	2.8 mV	2.2 mV	2.0 mV	1.9 mV	1.9 mV			
50 mV	3.4 mV	3.4 mV	2.8 mV	2.3 mV	2.3 mV	2.3 mV			
80 mV	5.5 mV	5.5 mV	4.6 mV	4.0 mV	3.8 mV	3.8 mV			
90 mV	6.3 mV	6.3 mV	5.2 mV	4.4 mV	4.3 mV	4.3 mV			
100 mV	9.5 mV	9.5 mV	7.2 mV	6.0 mV	5.5 mV	5.2 mV			
200 mV	14.5 mV	14.5 mV	11.7 mV	9.7 mV	9.5 mV	9.5 mV			
500 mV	34 mV	34 mV	28 mV	23 mV	23 mV	23 mV			
1 V	68 mV	68 mV	58 mV	49 mV	46 mV	46 mV			

Enhanced bandwidth							
Gain setting	DPO72004 20 GHz	DPO72004 18 GHz	DPO71604	DPO71254	DPO70804	DPO70604	DPO70404
10 mV	NA	970 μ V	660 μ V	590 μ V	560 μ V	500 μ V	440 μ V
15 mV	NA	1.2 mV	920 μ V	820 μ V	790 μ V	690 μ V	590 μ V
20 mV	2.6 mV	1.6 mV	1.15 mV	980 μ V	950 μ V	850 μ V	750 μ V
30 mV	3.7 mV	2.3 mV	1.65 mV	1.5 mV	1.5 mV	1.3 mV	1.1 mV
40 mV	4.7 mV	3.1 mV	2.2 mV	1.9 mV	1.9 mV	1.7 mV	1.5 mV
50 mV	4.5 mV	3.2 mV	2.6 mV	2.2 mV	2.2 mV	2.0 mV	1.8 mV
80 mV	7.2 mV	5.1 mV	4.2 mV	3.8 mV	3.8 mV	3.4 mV	2.9 mV
90 mV	7.6 mV	5.6 mV	4.6 mV	4.1 mV	4.2 mV	3.8 mV	3.3 mV
100 mV	NA	9.8 mV	7 mV	5.9 mV	6.0 mV	5.3 mV	4.5 mV
200 mV	24.7 mV	16 mV	11.5 mV	9.8 mV	9.4 mV	8.4 mV	7.4 mV
500 mV	44.4 mV	32 mV	25 mV	22 mV	22 mV	20 mV	18 mV
1 V	78 mV	61 mV	51 mV	45 mV	45 mV	41 mV	36 mV

Channel-to-channel crosstalk (channel isolation)		
≥ 4 GHz models, typical	Input frequency range (up to the rated bandwidth). Assumes two channels with the same scale and bandwidth settings	Isolation
	0 to 10 GHz	$\geq 120:1$
	> 10 GHz to 12 GHz	$\geq 80:1$
	> 12 GHz to 15 GHz	$\geq 50:1$
	> 15 GHz to 20 GHz	$\geq 25:1$
< 4 GHz models, typical	$\geq 100:1$ at ≤ 100 MHz and $\geq 30:1$ at > 100 MHz up to the rated bandwidth.	
Delay between channels, full bandwidth, equivalent time, typical, ≥ 4 GHz models	≤ 100 ps between any two channels with the same scale and coupling settings. ≤ 50 ps delay change when enabling and disabling Channel Equalization (DSP matching).	
Delay between channels, typical, < 4 GHz models	≤ 100 ps between any two channels with the same scale and coupling settings with input impedance set to 50 Ω , DC coupling and scale set at or above 10 mV/div.	
Internal probe power, < 4 GHz models	50 W maximum	
Probe power per probe < 4 GHz models	<i>Voltage</i>	<i>Maximum Amperage</i>
	5 V	50 mA
	12 V	2 A
		<i>Voltage Tolerance</i>
		$\pm 5\%$
		$\pm 10\%$

¹ Enhanced bandwidth only applies to full scale (FS) settings of 100 mV, 200 mV, 500 mV, 1 V, and 2.5 V. Enhanced bandwidth of 4 GHz, 6 GHz, and 8 GHz is only available at 25 GS/s and 50 GS/s.

² Enhanced bandwidth only applies to full scale (FS) settings of 100 mV, 200 mV, 500 mV, 1 V, 2 V, and 5 V. Enhanced bandwidth of 4 GHz, 6 GHz, and 8 GHz is only available at 25 GS/s and 50 GS/s.

³ Use the Temperature variation table to determine the amount of performance derating above the temperature limit.

⁴ Rise time calculation: A simple formula relating these times to bandwidth for all instruments is not available. The instruments have been characterized with the typical rise times listed.

Table 1-2: Horizontal and acquisition system specifications

Characteristic	Description		
Real-time sample rate range	<i>Number of channels acquired</i>	<i>Sample rate, maximum</i>	
		<i>(Standard)</i>	<i>(Option 2SR)</i>
DPO70804, DPO70604, and DPO70404	All channels	Up to 25 GS/s	
DPO72004, DPO71604, and DPO71254	All channels	Up to 50 GS/s	
DPO7354 and DPO7254	1	40 GS/s	
	2	20 GS/s	
	3 or 4	10 GS/s	
DPO7104	1	20 GS/s	40 GS/s
	2	10 GS/s	20 GS/s
	3 or 4	5 GS/s	10 GS/s
DPO7054	1	10 GS/s	20 GS/s
	2	5 GS/s	10 GS/s
	3 or 4	2.5 GS/s	5 GS/s
Equivalent-time sample rate or interpolated waveform rate range	Equivalent-time acquisition can be enabled or disabled. When disabled, waveforms are interpolated at the fastest time base settings.		
≥ 4 GHz models	Up to 5 TS/s and 0.2 ps trigger placement resolution		
< 4 GHz models	Up to 4 TS/s		
Maximum record length, sample mode, ≥ 4 GHz models	Depends on the number of active channels and the record length options installed. Maximum record length is less in serial trigger mode, hi-res mode or when using the FIR filter.		
Standard on DPO70000 Series	50 GS/s or less 10,000,000 points (all channels)		
Option 2XL installed, standard on DSA70000 Series	50 GS/s or less 20,000,000 points (all channels)		
Option 5XL installed	50 GS/s or less 50,000,000 points (all channels)		
Option 10XL installed	50 GS/s or less 100,000,000 points (all channels)		
Option 20XL installed	50 GS/s or less 250,000,000 points (all channels)		

Characteristic	Description
Maximum record length, sample mode, < 4 GHz models	Depends on the number of active channels and the record length options installed. Maximum record length is less in serial trigger mode, hi-res mode or when using the FIR filter.
Standard, DPO7254	10 GS/s 10,000,000 points (3 or 4 channels) 20 GS/s or less 20,000,000 points (2 channels) 40 GS/s or less 40,000,000 points (1 channel)
DPO7104	5 GS/s 10,000,000 points (3 or 4 channels) 10 GS/s or less 20,000,000 points (2 channels) 20 GS/s or less 40,000,000 points (1 channel)
DPO7054	2.5 GS/s 10,000,000 points (3 or 4 channels) 5 GS/s or less 20,000,000 points (2 channels) 10 GS/s or less 40,000,000 points (1 channel)
Option 2RL installed, DPO7254	10 GS/s 20,000,000 points (3 or 4 channels) 20 GS/s or less 40,000,000 points (2 channels only) 40 GS/s or less 80,000,000 points (1 channel only)
DPO7104	5 GS/s 20,000,000 points (3 or 4 channels) 10 GS/s or less 40,000,000 points (2 channels only) 20 GS/s or less 80,000,000 points (1 channel only)
DPO7054	2.5 GS/s 20,000,000 points (3 or 4 channels) 5 GS/s or less 40,000,000 points (2 channels only) 10 GS/s or less 80,000,000 points (1 channel only)
Option 5RL installed, DPO7254	10 GS/s 50,000,000 points (3 or 4 channels) 20 GS/s or less 100,000,000 points (2 channels only) 40 GS/s or less 200,000,000 points (1 channel only)
DPO7104	5 GS/s 50,000,000 points (3 or 4 channels) 10 GS/s or less 100,000,000 points (2 channels only) 20 GS/s or less 200,000,000 points (1 channel only)
DPO7054	2.5 GS/s 50,000,000 points (3 or 4 channels) 5 GS/s or less 100,000,000 points (2 channels only) 10 GS/s or less 200,000,000 points (1 channel only)
Option 10RL installed, DPO7254	10 GS/s 125,000,000 points (3 or 4 channels) 20 GS/s or less 200,000,000 points (2 channels only) 40 GS/s or less 500,000,000 points (1 channel only)
Maximum record length, HiRes mode	Half the record length of sample mode
Seconds/division range	< 4 GHz models Fastest sweep speed is 25 ps per division ≥ 4 GHz models Fastest sweep speed is 20 ps per division
Acquisition update rate, typical	
< 4 GHz models	Fast Acquisition on: 250,000 waveforms per second maximum
≥ 4 GHz models	Fast Acquisition on: 300,000 waveforms per second maximum
Time base delay time range	5 ns to 250 s
Internal time-base reference frequency	10 MHz

Characteristic	Description												
✓ Timebase and delay time accuracy (Long term sample rate accuracy)													
< 4 GHz models	± 2.5 ppm initial accuracy. Aging < 1ppm per year.												
≥ 4 GHz models	± 1.5 ppm initial accuracy. Aging < 1ppm per year from date of factory calibration. Applies only when using the internal reference.												
Aperture uncertainty, typical, ≥ 4 GHz models	<p>Measured at the maximum BWE enabled bandwidth.</p> <p>Total:</p> <p><250 fs rms for record durations less than 10 μs <350 fs rms for record durations less than 100 μs <650 fs rms for record durations less than 1 ms <15 parts/trillion for record durations less than 60 s</p> <p><2 ps peak-to-peak for record durations less than 10 μs <3 ps peak-to-peak for record durations less than 100 μs <4 ps peak-to-peak for record durations less than 1 ms</p> <p>This assumes either internal reference, or external reference in low (stable) mode. For external reference in high (tracking) mode, the input reference must be low noise, and the edge slew rate must exceed 1.5 V/ns to achieve the above approximate jitter results. For the general case, external reference in high (tracking) mode, the specification is:</p> <p><250 fs rms for record durations less than 2 μs</p> <p>You can approach the performance of internal reference using a clean reference signal with input slew rate exceeding 1.5 V/ns. This is most easily achieved either with a square wave meeting that slew rate or using a 100 MHz sine wave (≈2 V_{pk-pk}). This is required for the best possible performance in synchronous sampling applications.</p>												
Jitter noise floor, typical, ≥ 4 GHz models	<p>Applies to time periods as long as 10.0 μs</p> <table border="1"> <tbody> <tr> <td>DPO72004</td> <td>400 fs</td> </tr> <tr> <td>DPO71604</td> <td>300 fs</td> </tr> <tr> <td>DPO71254</td> <td>300 fs</td> </tr> <tr> <td>DPO70804</td> <td>450 fs</td> </tr> <tr> <td>DPO70604</td> <td>450 fs</td> </tr> <tr> <td>DPO70404</td> <td>450 fs</td> </tr> </tbody> </table> <p>Calculate the jitter noise floor (JNF) for a given instrument setting using the following formula:</p> <p>FS = full-scale setting (volts) A = signal amplitude as a fraction of full-scale t_{rm} = 10 - 90% displayed (or measured) rise time (sec) N = input-referred noise (volts rms) t_j = short term aperture uncertainty (sec rms)</p>	DPO72004	400 fs	DPO71604	300 fs	DPO71254	300 fs	DPO70804	450 fs	DPO70604	450 fs	DPO70404	450 fs
DPO72004	400 fs												
DPO71604	300 fs												
DPO71254	300 fs												
DPO70804	450 fs												
DPO70604	450 fs												
DPO70404	450 fs												

$$JNF = \sqrt{\left[\frac{N}{FS \times A} \times t_{rm} \right]^2 + t_j^2} \quad (\text{seconds rms})$$

Characteristic	Description
Timebase stability (sample rate jitter or jitter noise floor), typical, < 4 GHz models	Total: <1.0 ps peak for record durations less than 10 μ s <2.5 ps rms for record durations less than 30 ms <65 parts/trillion for record durations less than 10 s

✓ Delta time measurement accuracy, \geq 4 GHz B models

DPO72004B, DPO71604B and DPO71254B where applicable, at 50 GS/s

20 GHz BWE:	1.02 ps rms, <10 ns pulse width, tr/ff = 24 ps, amplitude = 80% FS
18 GHz BWE:	1.02 ps rms, <10 ns pulse width, tr/ff = 27 ps, amplitude = 80% FS
16 GHz BWE:	1.02 ps rms, <10 ns pulse width, tr/ff = 30 ps, amplitude = 80% FS
12 GHz BWE:	930 fs rms, <10 ns pulse width, tr/ff = 40 ps, amplitude = 80% FS
8 GHz BWE:	900 fs rms, <10 ns pulse width, tr/ff = 60 ps, amplitude = 80% FS
6 GHz BWE:	1.13 ps rms, <10 ns pulse width, tr/ff = 80 ps, amplitude = 80% FS
4 GHz BWE:	1.30 ps rms, <10 ns pulse width, tr/ff = 120 ps, amplitude = 80% FS

DPO70804B, DPO70604B and DPO70404B where applicable, at 25 GS/s

8 GHz BWE:	1.14 ps rms, <10 ns pulse width, tr/ff = 60 ps, amplitude = 80% FS
6 GHz BWE:	1.29 ps rms, <10 ns pulse width, tr/ff = 80 ps, amplitude = 80% FS
4 GHz BWE:	1.61 ps rms, <10 ns pulse width, tr/ff = 120 ps, amplitude = 80% FS

Delta time measurement accuracy, typical, \geq 4 GHz models

An approximate formula to calculate delta-time measurement accuracy (DTA) for a given setting and input signal is given below (assumes insignificant signal content above Nyquist and insignificant error due to aliasing):

A = input signal amplitude (volts)

t_m = 10 to 90% measured rise time (sec)

N = input-referred noise (volts rms)

t_j = short/medium term aperture uncertainty (sec rms)

TBA = timebase accuracy (2 ppm)

duration = delta-time measurement (sec)

assume edge shape that results from Gaussian filter response

$$DTA_{pk-pk} = 5 \times \sqrt{2 \times \left\{ \left[\frac{N}{A} \times t_{rm} \right]^2 + t_j^2 \right\}} + TBA \times duration$$

(seconds peak-to-peak)

For timer durations less than 100 ns, the rms jitter in DTA measurements can be estimated as:

Characteristic

Description

$$DTA_{rms} = \sqrt{2 \times \left\{ \left[\frac{N}{A} \times t_{rm} \right]^2 + t_j^2 \right\}}$$

(seconds rms)

The term under the square-root sign is the stability and is due to TIE. The errors due to this term occur throughout a single-shot measurement. The second term is due to both the absolute center-frequency accuracy and the center-frequency stability of the timebase and varies between multiple single-shot measurements over the observation interval (the amount of time from the first single-shot measurement to the final single-shot measurement). The observation interval may not exceed 1 year.

DPO72004: Enhanced bandwidth on, single shot, sample mode, assume full-scale setting of 500 mV and signal amplitude of 350 mV

DPO72004/B, DPO71604/B, and DPO71254/B where applicable	Measured Risetime	20 GHz BWE	19 GHz BWE	18 GHz BWE	17 GHz BWE	16 GHz BWE	15 GHz BWE	14 GHz BWE	13 GHz BWE
50 mV per division	24 ps	562 fs	511 fs	470 fs	446 fs	NA	NA	NA	NA
	30 ps	650 fs	581 fs	525 fs	490 fs	474 fs	463 fs	454 fs	NA
	37 ps	760 fs	669 fs	595 fs	548 fs	525 fs	511 fs	498 fs	490 fs
	56 ps	1.08 ps	930 fs	806 fs	726 fs	686 fs	661 fs	639 fs	624 fs
	74 ps	1.39 ps	1.19 ps	1.02 ps	909 fs	854 fs	819 fs	787 fs	765 fs
	112 ps	2.07 ps	1.76 ps	1.49 ps	1.32 ps	1.23 ps	1.17 ps	1.12 ps	1.09 ps
	130 ps	2.39 ps	2.03 ps	1.72 ps	1.51 ps	1.41 ps	1.34 ps	1.28 ps	1.24 ps
	150 ps	2.75 ps	2.33 ps	1.97 ps	1.73 ps	1.62 ps	1.54 ps	1.47 ps	1.42 ps
	170 ps	3.11 ps	2.63 ps	2.23 ps	1.96 ps	1.82 ps	1.73 ps	1.65 ps	1.60 ps
	200 ps	3.65 ps	3.09 ps	2.61 ps	2.29 ps	2.13 ps	2.03 ps	1.93 ps	1.87 ps
	250 ps	4.56 ps	3.85 ps	3.25 ps	2.85 ps	2.65 ps	2.52 ps	2.40 ps	2.32 ps
	300 ps	5.47 ps	4.62 ps	3.90 ps	3.41 ps	3.17 ps	3.01 ps	2.87 ps	2.77 ps
	500 ps	9.10 ps	7.69 ps	6.47 ps	5.67 ps	5.27 ps	5.00 ps	4.76 ps	4.60 ps
	750 ps	13.64 ps	11.52 ps	9.70 ps	8.49 ps	7.89 ps	7.59 ps	7.13 ps	6.89 ps
	1 ns	18.19 ps	15.36 ns	12.93 ps	1.32 ps	10.51 ps	9.99 ps	9.50 ps	9.18 ps
DPO72004/B, DPO71604/B, and DPO71254/B where applicable	Measured Risetime	12.5 GHz BWE	12 GHz BWE	11 GHz BWE	10 GHz BWE	9 GHz BWE	8 GHz BWE	7 GHz BWE	
50 mV per division	24 ps	NA	NA	NA					
	30 ps	NA	NA	NA					
	37 ps	483 fs	481 fs	474 fs					
	56 ps	611 fs	607 fs	594 fs	578 fs	560 fs	541 fs	527 fs	
	74 ps	747 fs	742 fs	723 fs	700 fs	674 fs	646 fs	627 fs	
	112 ps	1.06 ps	1.05 ps	1.03 ps	980 fs	938 fs	892 fs	859 fs	
	130 ps	1.21 ps	1.20 ps	1.16 ps	1.12 ps	1.07 ps	1.01 ps	975 fs	

	150 ps	1.38 ps	1.37 ps	1.33 ps	1.27 ps	1.22 ps	1.15 ps	1.11 ps
	170 ps	1.55 ps	1.54 ps	1.49 ps	1.43 ps	1.37 ps	1.29 ps	1.24 ps
	200 ps	1.81 ps	1.80 ps	1.74 ps	1.67 ps	1.59 ps	1.50 ps	1.44 ps
	250 ps	2.25 ps	2.23 ps	2.16 ps	2.07 ps	1.97 ps	1.86 ps	1.78 ps
	300 ps	2.69 ps	2.67 ps	2.58 ps	2.47 ps	2.35 ps	2.22 ps	2.13 ps
	500 ps	4.46 ps	4.42 ps	4.28 ps	4.10 ps	3.90 ps	3.67 ps	3.51 ps
	750 ps	6.68 ps	6.62 ps	6.40 ps	6.13 ps	5.83 ps	5.50 ps	5.25 ps
	1 ns	8.90 ps	8.82 ns	8.53 ps	8.17 ps	7.77 ps	7.32 ps	7.00 ps
DPO72004/B, DPO71604/B, and DPO71254/B where applicable	Measured Risetime	6 GHz BWE	5 GHz BWE	4 GHz BWE	3 GHz BWE	2 GHz BWE	1 GHz BWE	500 GHz BWE
50 mV per division	56 ps	NA	NA	NA	NA	NA	NA	NA
	74 ps	597 fs	NA	NA	NA	NA	NA	NA
	112 ps	810 fs	765 fs	706 fs	NA	NA	NA	NA
	130 ps	917 fs	864 fs	792 fs	NA	NA	NA	NA
	150 ps	1.04 ps	975 ps	891 fs	842 fs	NA	NA	NA
	170 ps	1.16 ps	1.09 ps	992 fs	935 fs	NA	NA	NA
	200 ps	1.35 ps	1.26 ps	1.15 ps	1.08 ps	964 fs	NA	NA
	250 ps	1.66 ps	1.56 ps	1.41 ps	1.32 ps	1.18 ps	NA	NA
	300 ps	1.98 ps	1.85 ps	1.67 ps	1.57 ps	1.39 ps	NA	NA
	500 ps	3.27 ps	3.05 ps	2.75 ps	2.57 ps	2.27 ps	1.92 ps	NA
	750 ps	4.89 ps	4.56 ps	4.11 ps	3.83 ps	3.38 ps	2.86 ps	2.56 ps
	1 ns	6.51 ps	6.07 ps	5.47 ps	5.10 ps	4.50 ps	3.79 ps	3.39 ps
DPO70804/B, DPO70604/B, and DPO70404/B where applicable	Measured Risetime	8 GHz BWE	7 GHz BWE	6 GHz BWE	5 GHz BWE	4 GHz BWE		
50 mV per division	56 ps	611 fs	592 fs	NA	NA	NA		
	74 ps	747 fs	721 fs	695 fs	NA	NA		
	112 ps	1.06 ps	1.01 ps	972 fs	930 fs	888 fs		
	130 ps	1.21 ps	1.16 ps	1.11 ps	1.06 ps	1.01 ps		
	150 ps	1.38 ps	1.32 ps	1.26 ps	1.20 ps	1.15 ps		
	170 ps	1.55 ps	1.49 ps	1.42 ps	1.35 ps	1.29 ps		
	200 ps	1.81 ps	1.73 ps	1.65 ps	1.58 ps	1.50 ps		
	250 ps	2.25 ps	2.15 ps	2.05 ps	1.97 ps	1.85 ps		
	300 ps	2.69 ps	2.57 ps	2.45 ps	2.33 ps	2.21 ps		
	500 ps	4.46 ps	4.26 ps	4.06 ps	3.85 ps	3.65 ps		
	750 ps	6.68 ps	6.37 ps	6.07 ps	5.77 ps	5.47 ps		
	1 ns	8.90 ps	8.49 ps	8.09 ps	7.69 ps	7.28 ps		
DPO70804/B, DPO70604/B, and DPO70404/B where applicable	Measured Risetime	3 GHz BWE	2 GHz BWE	1 GHz BWE	500 MHz BWE			
50 mV per division	56 ps	NA	NA	NA	NA			
	74 ps	NA	NA	NA	NA			

112 ps	NA	NA	NA	NA
130 ps	NA	NA	NA	NA
150 ps	1.03 ps	NA	NA	NA
170 ps	1.15 ps	NA	NA	NA
200 ps	1.34 ps	1.19 ps	NA	NA
250 ps	1.65 ps	1.46 ps	NA	NA
300 ps	1.97 ps	1.73 ps	NA	NA
500 ps	3.25 ps	2.85 ps	2.35 ps	NA
750 ps	4.86 ps	4.26 ps	3.50 ps	3.20 ps
1 ns	6.47 ps	5.67 ps	4.66 ps	4.26 ps

✓ Delta Time Measurement Accuracy, < 4 GHz models	For signals having amplitude greater than 5 divisions, reference level = 50%, filter set to $\sin(x)/x$, acquired at 10 mV/div or greater. The displayed risetime/sample interval must be greater than 1.4 but less than 4. Extra error will occur for two channel measurements due to channel to channel skew.			
	Single shot, sample or HiRes, full bandwidth	$(0.06/\text{sample rate} + 2.5\text{ppm} \times \text{reading})$ rms $\pm (0.30/(\text{sample rate}) + (2.5\text{ppm} \times \text{reading}))$ peak		
	Average Mode, ≥ 100 averages, full bandwidth selected.	$\pm (2.5\text{ppm} \times \text{reading} + 4\text{ps})$		

Table 1-3: Trigger specifications

Characteristic	Description		
Trigger jitter, DC coupled, A edge, random holdoff, typical	< 4 GHz models: 1.5 ps rms for low frequency, fast rise time signal		
	≥ 4 GHz models: 100 fs using enhanced trigger placement. 1 ps rms for low frequency, fast rise time signal, A edge, time holdoff = 30 μ s		
✓ Edge trigger sensitivity, DC coupled, typical	All sources, positive or negative edge, for vertical scale settings ≥ 10 mV/div and ≤ 1 V/div		
	≥ 4 GHz models	<i>Trigger Source</i>	
		A Event trigger	$\leq 4\%$ FS from DC to 50 MHz $\leq 10\%$ FS at 4 GHz $\leq 15\%$ FS at 6 GHz $\leq 20\%$ FS at 8 GHz $\leq 50\%$ FS at 11 GHz
		B Event trigger	$\leq 4\%$ FS from DC to 50 MHz $\leq 10\%$ FS at 4 GHz $\leq 15\%$ FS at 6 GHz $\leq 50\%$ FS at 9 GHz
	Auxiliary input	250 mV from DC to 50 MHz, increasing to 350 mV at 1 GHz	

Table 1-3: Trigger specifications (cont.)

Characteristic	Description	
< 4 GHz models	<i>Trigger Source</i>	
	Main and Delayed trigger	<i>Sensitivity</i> ≤ 0.7 div from DC to 50 MHz ≤ 1.2 div at 2.5 GHz ≤ 2.5 div at 3.5 GHz
	Auxiliary input	1 MΩ : 250 mV from DC to 50 MHz, increasing to 350 mV at 250 MHz 50 Ω: 150 mV from DC to 50 MHz, increasing to 200 mV at 1.8 GHz (not checked in manual)
	Video trigger, Ch1 - Ch4	0.6 to 2.5 divisions of video sync tip
Edge trigger sensitivity, not DC coupled, typical	All sources, positive or negative edge, for vertical scale settings ≥10 mV/div and ≤1 V/div	
≥ 4 GHz models	<i>Trigger Coupling</i>	
	NOISE REJ	<i>Sensitivity</i> 15%FS from DC to 50 MHz 35%FS at 3 GHz 50%FS at 5 GHz
	AC	Same as DC-coupled limits for frequencies > 100 Hz, attenuates signals <100 Hz
	HF REJ	Same as DC-coupled limits for frequencies < 20 kHz, attenuates signals > 20 kHz
	LF REJ	Same as DC-coupled limits for frequencies > 200 kHz, attenuates signals < 200 kHz
< 4 GHz models	<i>Trigger coupling</i>	
	NOISE REJ	3 the DC-coupled limits
	AC	Same as DC-coupled limits for frequencies > 100 Hz, attenuates signals <100 Hz
	HF REJ	Same as DC-coupled limits for frequencies < 20 kHz, attenuates signals > 20 kHz
	LF REJ	Same as DC-coupled limits for frequencies > 200 kHz, attenuates signals < 200 kHz

Table 1-3: Trigger specifications (cont.)

Trigger level or threshold range		
≥ 4 GHz models	<i>Trigger Source</i>	<i>Range</i>
	Any channel	±120% FS from center of screen
	Auxiliary input	±5.0 V
< 4 GHz models	<i>Trigger Source</i>	<i>Sensitivity</i>
	Any channel	±12 divisions from center of screen
	Auxiliary input	±5 V
Line		0 V, Not settable
	Edge trigger, DC coupling	
	Trigger level or threshold accuracy, typical	
≥ 4 GHz models	<i>Trigger Source</i>	<i>Accuracy</i>
	Channel 1, 2, 3, or 4	± [(2% trigger level - net offset) + (3.5% FS) + offset accuracy]
	Auxiliary	Not specified
< 4 GHz models	<i>Trigger Source</i>	<i>Accuracy</i>
	Channel 1, 2, 3, or 4	± [(2% deflection) + (0.7 divisions × volts/division) + offset accuracy]
	Auxiliary	Not specified
Edge trigger, DC coupling, for signals having a slew rate at the trigger point of ≥ 0.5 divisions/ns		
≥ 4 GHz models	<i>Acquisition mode</i>	<i>Trigger Position Error</i>
	Sample, Average	± (1 waveform interval + 50 ps)
	Peak Detect, Envelope	± (2 waveform interval + 50 ps)
< 4 GHz models	<i>Acquisition mode</i>	<i>Trigger Position Error</i>
	Sample, Average	± (1 waveform interval + 200 ps)
	Peak Detect, Envelope	± (2 waveform intervals + 200 ps)
Time range for time-qualified triggers		
< 4 GHz models	300 ps to 1 s	
≥ 4 GHz models	Setup/Hold Violation	
	Setup time:	-100 ns to +100 ns
	Hold time:	-1 ns to +100 ns
	Setup + hold time:	500 ps minimum
	Timeout	400 ps to 1 s
	Time qualified window, outside >1;	600 ps to 1 s
All other types:	300 ps to 1 s	

Table 1-3: Trigger specifications (cont.)

✓ Time-qualified trigger timer accuracy	For Glitch, Width, Time qualified runt, Transition, or Setup/hold violation types			
		<i>Time range</i>	<i>Accuracy</i>	
< 4 GHz models	<1 μ s (<2 ns typical)		\pm (20% of setting + 0.5 ns)	
	1 μ s to 1 s		\pm (0.01% of setting + 100 ns)	
\geq 4 GHz models	Glitch and width triggering (300 ps to 1.0 ns typical)			
	<300 ns to 1.01 μ s		\pm (3% of setting + 80 ps)	
	1.02 μ s to 1 s		\pm (TB accuracy + 100 ns)	
	Other time-qualified types (300 ps to 1.0 ns typical)			
	<300 ps to 1.01 μ s		\pm (5% of setting + 200 ps)	
1.02 μ s to 1 s		\pm (TB accuracy + 20 ns)		
Width and glitch trigger sensitivity, typical				
< 4 GHz models	1.0 division from DC to 1 GHz (at input connector)			
\geq 4 GHz models	15% x FS from DC to 1 GHz, not violating the minimum timing requirements for each type (for vertical settings from 10 mV/div to 1 V/div at input connector)			
Width and glitch trigger, minimum timing requirements, <4 GHz models				
	<i>Minimum pulse width</i>	<i>Minimum rearm time</i>	<i>Setup time</i>	<i>Hold time</i>
Width type	225 ps	250 ps	N.A.	N.A.
Logic qualified width type	190 ps	250 ps	40 ps	175 ps
Glitch type	170 ps	250 ps	N.A.	N.A.
Logic qualified glitch type	100 ps	250 ps	40 ps	60 ps
Width and glitch trigger, minimum timing requirements, \geq 4 GHz models				
	<i>Minimum pulse width</i>	<i>Minimum rearm time</i>	<i>Setup time</i>	<i>Hold time</i>
Width and glitch types	150 ps	300 ps	N.A.	N.A.
Logic qualified width and glitch types	150 ps	300 ps	20 ps	40 ps
Runt trigger sensitivity, typical				
<4 GHz models	1.0 division (at input connector)			
\geq 4 GHz models	15% x FS from DC to 1 GHz, not violating the minimum timing requirements for each type (for vertical settings from 10 mV/div to 1 V/div at input connector)			

Table 1-3: Trigger specifications (cont.)

Runt trigger, minimum timing requirements, < 4 GHz models	A runt event occurs at the end of the runt whether or not the runt was time qualified. Logic qualified runt triggers require that the logic condition be true during the entire duration of the runt plus some minimum amount of time after the runt event occurred.			
	<i>Minimum pulse time</i>	<i>Minimum rearm time</i>	<i>Setup time</i>	<i>Hold time</i>
Runt type	225 ps	250 ps	N.A.	N.A.
Time qualified runt type	360 ps	450 ps	N.A.	N.A.
Logic qualified runt type	Runt width + 150 ps	250 ps	160 ps	-16 ps
Time and logic qualified runt type	Runt width + 330 ps	250 ps	160 ps	175 ps
Runt trigger, minimum timing requirements, ≥4 GHz models	A runt event occurs at the end of the runt whether or not the runt was time qualified. Logic qualified runt triggers require that the logic condition be true during the entire duration of the runt plus some minimum amount of time after the runt event occurred.			
	<i>Minimum pulse time</i>	<i>Minimum rearm time</i>	<i>Setup time</i>	<i>Hold time</i>
Runt type	200 ps	300 ps	N.A.	N.A.
Logic qualified runt type	200 ps	300 ps	300 ps	300 ps
Time qualified runt type	476 ps	510 ps	N.A.	N.A.
Time and logic qualified runt type	520 ps	360 ps	160 ps	105 ps
Pattern and state trigger sensitivity, DC coupled, typical				
<4 GHz models	1.0 division from DC to 1 GHz (for vertical settings from 10 mV/div to 1 V/div at input connector)			
≥ 4 GHz models	15% x FS from DC to 1 GHz, not violating the minimum timing requirements for each type (for vertical settings from 10 mV/div to 1 V/div at input connector)			
Pattern and state trigger, minimum timing requirements, typical	Minimum duration of logic state: 100 ps (10 GB/s). The minimum duration of the logic pattern includes delay mismatch between channels.			
	<i>Minimum pulse width</i>	<i>Rearm time</i>		
Logic type	100 ps (10 GB/s)	100 ps		
State type	500 ps	500 ps		
Time qualified logic type	300 ps	500 ps		
Auxiliary trigger input characteristics and range, typical				
≥4 GHz models	50 Ω , ± 5V (DC + peak AC)			
<4 GHz models	50 Ω , ± 5%; maximum input voltage ± 5 V (DC + peak AC) 1MΩ , ±5%, 150 V CAT1. Derate at 20dB/decade to 9 V _{rms} above 200 kHz			
Video-type trigger formats and field rates, <4 GHz models	Triggers from negative sync composite video, field 1 or field 2 for interlaced systems, any field, specific line, or any line for interlaced or non-interlaced systems. Supported systems include NTSC, PAL, SECAM, and HDTV 1080/24sF, 1080p/25, 1080i/50, 1080i/60, 1080p/24, 720p/60, 480p/60.			

Table 1-3: Trigger specifications (cont.)

Timeout trigger, minimum timing requirements, <4 GHz models	Timeout event occurs after the signal has stayed in some state the minimum amount of time. Setup and hold times are how long before and after the timeout event the logic level must remain valid in order to generate a trigger.			
	<i>Maximum ignored pulse width</i>	<i>Minimum rearm time</i>	<i>Setup time</i>	<i>Hold time</i>
Timeout type	300 ps	500 ps + pulse width	N.A.	N.A.
Logic qualified timeout type	300 ps	500 ps + pulse width	200 ps	200 ps
Timeout trigger, minimum timing requirements, ≥4 GHz models	Timeout event occurs after the signal has stayed in some state the minimum amount of time. Setup and hold times are how long before and after the timeout event the logic level must remain valid in order to generate a trigger.			
	<i>Maximum ignored pulse width</i>	<i>Minimum rearm time</i>	<i>Setup time</i>	<i>Hold time</i>
Timeout type	N.A.	300 ps + pulse width	N.A.	N.A.
Logic qualified timeout type	N.A.	300 ps + pulse width	50 ps	50 ps
Window trigger, minimum timing requirements, <4 GHz models				
	<i>Minimum pulse width</i>	<i>Minimum rearm time</i>	<i>Setup time</i>	<i>Hold time</i>
Window	225 ps	300 ps	N.A.	N.A.
Logic qualified window	190 ps	300 ps	-20 ps	0 ps
Window trigger, minimum timing requirements, ≥4 GHz models				
	<i>Minimum pulse width</i>	<i>Minimum rearm time</i>	<i>Setup time</i>	<i>Hold time</i>
Window enters	150 ps	500 ps	N.A.	N.A.
Window exits	500 ps	150 ps	N.A.	N.A.
Logic qualified window enters	150 ps	500 ps	N.A.	N.A.
Logic qualified window exits	500 ps	150 ps	N.A.	N.A.
Window inside >t	N.A.	500 ps	N.A.	N.A.
Window outside >t	N.A.	150 ps	N.A.	N.A.
Transition trigger, minimum timing requirements, <4 GHz models	The transition trigger event occurs at the end of the transition. The logic condition must be valid at the moment the transition event occurs minus the setup time plus the hold time.			
	<i>Minimum pulse width</i>	<i>Minimum rearm time</i>	<i>Setup time</i>	<i>Hold time</i>
Transition type	0 ps	225 ps	N.A.	N.A.
Logic qualified transition type	330 ps	225 ps	225 ps	175 ps

Table 1-3: Trigger specifications (cont.)

Transition trigger, minimum timing requirements, ≥ 4 GHz models	The transition trigger event occurs at the end of the transition. The logic condition must be valid at the moment the transition event occurs minus the setup time plus the hold time. Rearm time is the time below the lower threshold and the time above the upper threshold. Neither time can be violated.			
	<i>Minimum pulse width</i>	<i>Minimum rearm time</i>	<i>Setup time</i>	<i>Hold time</i>
Transition type	0 ps	500 ps	N.A.	N.A.
Logic qualified transition type	0 ps	500 ps	50 ps	50 ps
Transition trigger, delta time range	1 ns to 1 s			
Setup/Hold violation trigger, setup and hold time ranges	<i>Minimum</i>	<i>Maximum</i>		
Setup time	-100 ns	100 ns		
Hold time	-1 ns	102 ns		
Setup + hold time	500 ps			
Setup/hold time violation trigger, minimum clock pulse widths, typical	Minimum time from active clock edge to inactive edge		Minimum time from inactive clock edge to active edge	
< 4 GHz models	Hold times ≥ 0 : Hold time + 500 ps Hold times < 0 : Hold time + 1.5 ns		500 ps	
≥ 4 GHz models	Hold times ≥ 0 : Hold time + 550 ps Hold times < 0 : Hold time + 1.6 ns		500 ps	
Pattern and State trigger, minimum timing requirements, ≥ 4 GHz models, typical	The transition trigger event occurs at the end of the transition. The logic condition must be valid at the moment the transition event occurs minus the setup time plus the hold time.			
	<i>Minimum pulse width</i>	<i>Minimum rearm time</i>	<i>Setup time</i>	<i>Hold time</i>
Pattern type	150 ps	200 ps	N.A.	N.A.
Time qualified pattern type	150 ps	300 ps	N.A.	N.A.
State type	1.7 GHz	N.A.	25 ps	100 ps
Period trigger sensitivity, typical, < 4 GHz models	1.0 division (at input connector)			
Period trigger sensitivity, typical, ≥ 4 GHz models	1.5 divisions (at input connector)			
B trigger after events, minimum timing requirements, typical, < 4 GHz models	<i>Minimum pulse width</i>		<i>Minimum time between channels</i>	
	200 ps		1 ns	
B trigger after events, minimum timing requirements, typical, ≥ 4 GHz models	<i>Minimum pulse width</i>	<i>Maximum counting frequency</i>	<i>Minimum time between channels</i>	
	140 ps	3.5 GHz	1.0 ns	

Table 1-3: Trigger specifications (cont.)

B trigger after events, event counter range, < 4 GHz models	1 to 10,000,000
B trigger after events, event counter range, ≥ 4 GHz models	1 to 2,000,000,000
B trigger after time, time delay range	< 4 GHz models: 5 ns to 250 s ≥ 4 GHz models: 3.2 ns to 3 Ms
Variable A event trigger holdoff range	250 ns to 12 s + random holdoff
Lowest frequency for successful Set Level to 50%, typical	50 Hz

Table 1-4: Serial Trigger specifications (optional on < 4 GHz models DPO7000 Series)

Characteristic	Description
Serial trigger number of bits	
< 4 GHz models	64 bits
≥ 4 GHz B models	64 bits for NRZ data rates ≤ 1.25 GBaud 40 bits for 8b/10b data rates between 1.25 GBaud and 5 GBaud
≥ 4 GHz non-B models	64 bits for NRZ data rates ≤ 1.25 GBaud 40 bits for 8b/10b data rates between 1.25 GBaud and 3.125 GBaud
Serial trigger decoding types	
< 4 GHz models	NRZ
≥ 4 GHz B models	≤ 1.25 GB: NRZ 1.25 GB to 5 GB: 8B10B
≥ 4 GHz non-B models	≤ 1.25 GB: NRZ 1.25 GB to 3.125 GB: 8B10B
Serial trigger baud rate limits	
< 4 GHz models	Up to 1.25 GBd (Option PTM adds protocol trigger to DPO7000 Series)
≥ 4 GHz B models	Up to 1.25 GBd NRZ 8B10B encoded data at the following bit rates, typical 1.25 GBd, 1.50 GBd, 1.57 GBd, 2.00 GBd, 2.125 GBd, 2.50 GBd, 3.00 GBd, 3.125 GBd, 4.25 GBd, 4.80 GBd, 5.00 GBd

Table 1-4: Serial Trigger specifications (optional on < 4 GHz models DPO7000 Series) (cont.)

Characteristic	Description
≥ 4 GHz non-B models	Up to 1.25 GBd Up to 3 GBd, 8B/10B encoded NRZ data
✓ Clock recovery frequency range	
< 4 GHz models	1.5 MBd to 1.25 GBd.
≥ 4 GHz models	1.5 MBd to 3.125 GBd. Above 1250 MHz the clock is only available internally as a trigger source. Below 1250 MHz the clock is also available at the BERT Clock output along with regenerated data.

Table 1-4: Serial Trigger specifications (optional on < 4 GHz models DPO7000 Series) (cont.)

Characteristic	Description																																						
Clock recovery jitter, typical																																							
≥ 4 GHz models	< 0.25% bit period + 2 ps rms for PRBS data patterns with 50% transition density. < 0.25% bit period + 1.5 ps rms for repeating 0011 data patterns.																																						
	<table border="1"> <thead> <tr> <th rowspan="2">Bit rate</th> <th rowspan="2">Pattern</th> <th colspan="2">Jitter (ps rms)</th> </tr> <tr> <th>PRBS</th> <th>0011</th> </tr> </thead> <tbody> <tr> <td>3.125 GBaud</td> <td>00110011</td> <td>2.8 ps</td> <td>2.3 ps</td> </tr> <tr> <td>2.74 GBaud</td> <td>00110011</td> <td>2.9 ps</td> <td>2.4 ps</td> </tr> <tr> <td>2.35 GBaud</td> <td>00110011</td> <td>3.1 ps</td> <td>2.6 ps</td> </tr> <tr> <td>2.34 GBaud</td> <td>00110011</td> <td>3.1 ps</td> <td>2.6 ps</td> </tr> <tr> <td>1.95 GBaud</td> <td>00110011</td> <td>3.3 ps</td> <td>2.8 ps</td> </tr> <tr> <td>1.57 GBaud</td> <td>00110011</td> <td>3.6 ps</td> <td>3.1 ps</td> </tr> <tr> <td>100 Mbaud</td> <td>00110011</td> <td>27 ps</td> <td>27 ps</td> </tr> <tr> <td>10 Mbaud</td> <td>00110011</td> <td>252 ps</td> <td>252 ps</td> </tr> </tbody> </table>	Bit rate	Pattern	Jitter (ps rms)		PRBS	0011	3.125 GBaud	00110011	2.8 ps	2.3 ps	2.74 GBaud	00110011	2.9 ps	2.4 ps	2.35 GBaud	00110011	3.1 ps	2.6 ps	2.34 GBaud	00110011	3.1 ps	2.6 ps	1.95 GBaud	00110011	3.3 ps	2.8 ps	1.57 GBaud	00110011	3.6 ps	3.1 ps	100 Mbaud	00110011	27 ps	27 ps	10 Mbaud	00110011	252 ps	252 ps
Bit rate	Pattern			Jitter (ps rms)																																			
		PRBS	0011																																				
3.125 GBaud	00110011	2.8 ps	2.3 ps																																				
2.74 GBaud	00110011	2.9 ps	2.4 ps																																				
2.35 GBaud	00110011	3.1 ps	2.6 ps																																				
2.34 GBaud	00110011	3.1 ps	2.6 ps																																				
1.95 GBaud	00110011	3.3 ps	2.8 ps																																				
1.57 GBaud	00110011	3.6 ps	3.1 ps																																				
100 Mbaud	00110011	27 ps	27 ps																																				
10 Mbaud	00110011	252 ps	252 ps																																				
< 4 GHz models	20 ps rms + 1.25% Unit interval rms for PRBS data patterns. 20 ps rms + 1.25% Unit interval rms for repeating 0011 data patterns. (Transition density of 50%). Jitter increases by 1.4 every time the transition density is reduced by half. 28 ps rms + 1.25% Unit interval rms for 25% transition density. 30 ps rms + 1.25% Unit interval rms for 12.5% transition density.																																						
Serial trigger, serial word recognizer position accuracy	± 200 ps																																						
Clock recovery tracking/acquisition range, typical																																							
≥ 4 GHz models																																							
< 4 GHz models	± 2% of requested baud ± 5% of requested baud																																						
Minimum signal amplitude needed for clock recovery, typical																																							
≥ 4 GHz models	1 division p-p up to 1.25 GBd 1.5 divisions p-p above 1.25 GBd																																						
< 4 GHz models	1 division p-p up to 1.25 GBd																																						
Serial interface triggering standards supported, < 4 GHz models	IIC, CAN, SPI, USB1.0, RS232																																						
TekLink trigger jitter																																							
≥ 4 GHz B models	RMS jitter between the master and slave instruments: <500 ps rms																																						
Teklink FastAcq acquisition update rate																																							
≥ 4 GHz B models	DPO: 150,000 waveforms per second																																						

Table 1-5: Input/output port specifications

Characteristic	Description				
Auxiliary Output logic polarity and functionality	Default output is A trigger low true (a negative edge when the A trigger event occurs). You can also program the output to A trigger high true, B trigger low or high true, disabled, force high, and force low.				
Auxiliary Output logic levels, typical	<table border="1"> <thead> <tr> <th>$V_{out\ high}$</th> <th>$V_{out\ low\ (true)}$</th> </tr> </thead> <tbody> <tr> <td>$\geq 2.5\ V$ into 1 MΩ load, $\geq 1.0\ V$ into 50 Ω load to ground</td> <td>$\leq 0.7\ V$ into 1 MΩ load, $\leq 0.25\ V$ into 50 Ω load to ground</td> </tr> </tbody> </table>	$V_{out\ high}$	$V_{out\ low\ (true)}$	$\geq 2.5\ V$ into 1 M Ω load, $\geq 1.0\ V$ into 50 Ω load to ground	$\leq 0.7\ V$ into 1 M Ω load, $\leq 0.25\ V$ into 50 Ω load to ground
$V_{out\ high}$	$V_{out\ low\ (true)}$				
$\geq 2.5\ V$ into 1 M Ω load, $\geq 1.0\ V$ into 50 Ω load to ground	$\leq 0.7\ V$ into 1 M Ω load, $\leq 0.25\ V$ into 50 Ω load to ground				
CH3 output voltage, < 4 GHz models	50 mV/div \pm 20% into a 1 M Ω load 25 mV/div \pm 20% into a 50 Ω load				
Serial data output baud rate range, \geq 4 GHz models	Fbaud < 1250 MBd. Output swing of 1010 repeating pattern at this baud will be at least 200 mV into 50 Ω .				
Serial clock output frequency range, \geq 4 GHz models	Peak-to-peak output swing at 625 MHz is at least 200 mV p-p into 50 Ω . Higher frequencies are further attenuated by approximately 6 dB per octave above 625 MHz. Use AC or DC coupled 50 Ω termination; AC coupling the clock provides about 10% more amplitude.				
Serial data and clock output voltages, typical, \geq 4 GHz models	Voh = -1.0 V Vol = -1.7 V Assumes a load impedance greater than 1 k Ω . (50 Ω source termination.) If a 50 Ω or 75 Ω load is used, either use a DC blocking capacitor in series with the signal or reference the termination to about -1.3 V. The signal amplitude will be correspondingly reduced.				
Serial data output latency, typical, \geq 4 GHz models	11 ns \pm 4 ns plus 35.5 clock cycles				
✓ Probe Compensation output step amplitude and offset					
\geq 4 GHz models	440 mV \pm 20% into a 50 Ω load (Vol = -140 mV, Voh = 0.3 V typical) 810 mV \pm 20% into a 10 k Ω load (Vol = -0.25 V, Voh = 0.56 mV typical)				
< 4 GHz models	1 V \pm 1.5% into a \geq 100 k Ω load (Vol = -1.0 V, Voh = 0 V typical) Add 0.05%/°C for temperatures greater than or less than 25 °C				
Probe Compensation output step frequency					
\geq 4 GHz models	1 kHz \pm 20%				
< 4 GHz models	1 kHz \pm 5%				

Table 1-5: Input/output port specifications (cont.)

Characteristic	Description
Probe Calibration output step rise time, typical	
< 4 GHz models	350 ps directly into an input channel. To deskew a probe, use a 50 Ω terminator in series with the deskew fixture to minimize HF aberrations.
\geq 4 GHz models	300 ps directly into an input channel. To deskew a probe, use a 50 Ω terminator in series with the deskew fixture to minimize HF aberrations.
Probe Calibration output step aberrations, typical	$\leq \pm 1\%$ after the first 500 ns following the square wave transition. To deskew a probe, use a 50 Ω terminator in series with the deskew fixture to minimize HF aberrations.
Jitter of internal Probe Calibration trigger, typical	5 ps rms
External reference, typical	Run SPC whenever the external reference is more than 0.1% (1000 ppm) different than the nominal reference or the reference at which SPC was last run. The timebase changes in correspondence to the fluctuations in the external reference.
Input frequency	< 4 GHz models: 10 MHz \geq 4 GHz models 10 MHz
Input sensitivity	< 4 GHz models: $\geq 1.5 V_{p-p}$ \geq 4 GHz models: $\geq 200 mV_{p-p}$
Input voltage, maximum	7 V_{p-p}
Input impedance	< 4 GHz models: 385 Ω , $C_{in} = 137$ pF, measured at 10 MHz \geq 4 GHz models: 1.5 kohms, $C_{in} = 40$ pF, >100 kHz
Input frequency variation tolerance	< 4 GHz models: 9.8 MHz to 10.2 MHz \geq 4GHz models: Low (stable) jitter mode: ± 100 ppm High (tracking) jitter mode: $\pm 1\%$ Running SPC is required whenever the external reference is more than 0.1% (1000 ppm) different from the nominal reference frequency or reference at which SPC was last run.
Internal reference output	
Frequency	< 4 GHz models: 10 MHz available at AUXOUT \geq 4 GHz models: 10 MHz
Output voltage, typical	$V_{out\ high}$ $V_{out\ low\ (true)}$
< 4 GHz models	≥ 2.5 V into open circuit, ≥ 1.0 V into 50 Ω load to ground ≤ 0.7 V with ≤ 4 ma sink, ≤ 0.25 V into 50 Ω load to ground
\geq 4 GHz models	> 750 mV pk-pk into 50 Ω > 1.5 V pk-pk into 1 M Ω (internally AC coupled).

Table 1-5: Input/output port specifications (cont.)

Characteristic	Description
Input and output ports	
VGA Video output port	15 pin D-Sub female connector
Parallel port (IEEE 1284)	25 pin D-Sub connector, supports the following modes: standard (output only) bidirectional (PS-2 compatible) bidirectional enhanced parallel port (IEEE 1284 standard, mode 1 or mode 2, v 1.7) bidirectional high-speed extended capabilities port (ECP)
Serial port	9 pin D-Sub COM1 port, uses NS16C550-compatible UARTS, transfer speeds up to 115.2 kb/s
Keyboard and Mouse ports	PS-2 compatible, instrument must be powered down to make connection
LAN port	RJ-45 connector, supports 10 base-T, 100 base-T, and Gigabit Ethernet
External audio ports	External audio jacks for microphone input and line output
USB ports	Four rear panel and 1 front panel USB 2.0 connectors
GPIB port	IEEE 488.2 standard interface, listener or controller

Table 1-6: Data storage specifications

Characteristic	Description
Nonvolatile memory retention time, typical	> 20 years
Hard disk	Removable hard disk drive, ≥ 80 GB capacity

Table 1-7: Power source specifications

Characteristic	Description
Power consumption	
≥ 4 GHz models	<1100 VA
< 4 GHz models	550 Watts maximum
Source voltage and frequency	
≥ 4 GHz models	100 to 240 V_{rms} , 50 Hz to 60 Hz 115 V $\pm 10\%$, 400 Hz
< 4 GHz models	100 V to 240 $V_{rms} \pm 10\%$, 47 Hz to 63 Hz 115 V $\pm 10\%$, 400 Hz
Value probe interface (VPI), < 4 GHz models	Probe interface allows installing, powering, compensating and controlling a wide range of probes offering a variety of features.

Table 1-8: Mechanical specifications

Characteristic	Description	
Weight		
< 4 GHz models Benchtop configuration	14.0 kg (31 lbs) instrument only	
	21.8 kg (48 lbs) when packaged for domestic shipment	
≥ 4 GHz models Benchtop configuration	20.0 kg (44 lbs) instrument only	
	34 kg (75 lbs) when packaged for domestic shipment	
Rackmount kit	2.04 kg (4.5 lbs) rackmount kit	
	3.4 kg (7.5 lbs) kit packaged for domestic shipment	
Dimensions		
< 4 GHz models Benchtop configuration	With front cover	Without front cover
	295.4 mm (11.6 in) height	278 mm (10.95 in) height
	468.6 mm (18.4 in) width	450.8 mm (17.75 in) width
	318 mm (12.5 in) depth	308.6 mm (12.15 in) depth
< 4 GHz models Rackmount configuration	311.15 mm (12.25 in) height	
	482.6 mm (19.0 in) width	
	520.7 mm (20.5 in) depth	
≥ 4 GHz models Benchtop configuration	With front cover	Without front cover
	278 mm (10.95 in) height	277 mm (10.9 in) height
	330 mm (13 in) with feet extended	330 mm (13 in) with feet extended
	451 mm (17.75 in) width	451 mm (17.75 in) width
	442 mm (17.4 in) depth	432 mm (17.02 in) depth
≥ 4 GHz models Rackmount configuration	With rack handles	Without rack handles
	267 mm (10.5 in) height 502 mm (19.75 in) width 489 mm (19.4 in) depth	267 mm (10.5 in) height 482 mm (19 in) width 442 mm (17.4 in) depth
Cooling	Fan-forced air circulation with no air filter	
Required clearances	Top	0 mm (0 in)
	Bottom	6.35 mm (0.25 in) minimum or 0 mm (0 in) when standing on feet, flip stands down
	Left side	76 mm (3 in)
	Right side	76 mm (3 in)
	Front	0 mm (0 in)
Construction material	Chassis parts are constructed of aluminum alloy, side and top panels are constructed of plastic laminate, circuit boards are constructed of glass laminate	

Table 1-9: Environmental specifications

Characteristic	Description
Temperature, < 4 GHz models	
operating	+5 °C to +45 °C (41 °F to +113 °F)
Nonoperating	-40 °C to +71 °C (-40 °F to +160 °F), with 15 °C/hour maximum gradient, without disk media installed in disk drives
Temperature, ≥ 4 GHz models	
operating	+5 °C to +45 °C (41 °F to +113 °F), with 11 °C per hour maximum gradient, noncondensing, derated 1 °C per 300 meters (984.25 feet) above 1500 meters (4921.25 feet) altitude.
Nonoperating	-20 °C to +60 °C (-68 °F to +140 °F), with 20 °C/hour maximum gradient, without disk media installed in disk drives
Humidity, < 4 GHz models	
operating	8% to 80% relative humidity with a maximum wet-bulb temperature of +29 °C (84 °F) at up to +45 °C (113 °F), non-condensing Upper limit derated to 30% relative humidity at +45 °C (+113 °F)
Nonoperating	5% to 90% RH (Relative Humidity) with a maximum wet-bulb temperature of +29 °C (84 °F) at or below +60 °C (140 °F), noncondensing Upper limit derated to 20% relative humidity at +60 °C (+140 °F)
Humidity, ≥ 4 GHz models	
Humidity, operating	8% to 80% relative humidity (% RH) at up to +32 °C, 5% to 45% RH above +32 °C up to +45 °C, non-condensing, and as limited by a Maximum Wet-Bulb Temperature of +29.4 °C (derates relative humidity to 32% RH at +45 °C)
Nonoperating	5% to 95% RH (Relative Humidity) at up to +30 °C, 5% to 45% RH above +30 °C up to +60 °C, non-condensing, and as limited by a Maximum Wet-Bulb Temperature of +29.4 °C (derates relative humidity to 11% RH at +60 °C)
Altitude	
< 4 GHz models: operating	Up to 3,000 meters (9,843 feet)
Nonoperating	Up to 12,192 meters (40,000 feet)
≥ 4 GHz models: operating	Up to 3,000 meters (9,843 feet), derate maximum operating temperature by 1 °C per 300 meters (984.25 feet) above 1500 meters (4921.25 feet) altitude
Nonoperating	Up to 12,000 meters (39,370 feet)

Performance Verification

Performance Verification

Two types of Performance Verification procedures can be performed on this product: *Brief Procedures* and *Performance Tests*. You may not need to perform all of these procedures, depending on what you want to accomplish.

- To rapidly confirm that the instrument functions and was adjusted properly, just do the brief procedures under *Self Tests*.

Advantages. These procedures are quick to do, require no external equipment or signal sources, and perform extensive functional and accuracy testing to provide high confidence that the instrument will perform properly. They can be used as a quick check before making a series of important measurements.

- To further check functionality, first do the *Self Tests* just mentioned; then do the brief procedures under *Functional Tests*.

Advantages. These procedures require minimal additional time to perform, require no additional equipment other than cables and adapters, and these procedures more completely test the internal hardware of the instrument. They can be used to quickly determine if the instrument is suitable for putting into service, such as when it is first received.

- If more extensive confirmation of performance is desired, do the *Performance Tests*, (See page 2-13, *Performance Tests*.), after doing the *Functional* and *Self Tests* mentioned above.

Advantages. These procedures add direct checking of the warranted specifications that are marked with the ✓ symbol. These procedures require specific test equipment. (See Table 2-2.)

If you are not familiar with operating this instrument, read the instrument user manual or explore the online help.

Conventions

Throughout these procedures the following conventions apply:

- Each test procedure uses the following general format:
 - Title of Test
 - Equipment Required
 - Prerequisites
 - Procedure
- Each procedure consists of as many steps, substeps, and subparts as required to do the test. Steps, substeps, and subparts are sequenced as follows:

1. First Step

a. First Substep

- First Subpart
- Second Subpart

b. Second Substep

2. Second Step

- In steps and substeps, the lead-in statement in italics instructs you what to do, while the instructions that follow tell you how to do it, as in the example step below:

Initialize the instrument: Push the front-panel **Default Setup** button.

STOP. The **STOP** notation at the left is accompanied by information you must read to do the procedure properly.

- The term "toolbar" refers to a row of buttons at the top of the display. The term "menu bar" refers to a row of menus at the top of the display. You can switch between toolbar and menu bar operating modes by using the menu at the top right of the toolbar or menu bar. (See Figure 2-1.)
- Item numbers in the equipment required lists refer to the equipment. (See Table 2-2 on page 2-14.)



Figure 2-1: Toolbar and menu bar (< 4 GHz models shown)

- The procedures assume you have connected a mouse to the instrument so you can click on the screen controls. If you have not connected a mouse, you can use the touch screen to operate the screen controls.

Brief Procedures

The *Self Tests* use internal routines to confirm basic functionality and proper adjustment. No test equipment is required to do these test procedures.

The *Functional Tests* utilize the probe-compensation output at the front panel as a test-signal source for further verifying that the instrument functions properly. A BNC cable and an adaptor or a probe, depending on your instrument model are required to do these test procedures.

Self Tests

This procedure uses internal routines to verify that the instrument functions and was adjusted properly. No test equipment or hookups are required.

Equipment required	Prerequisites
None	Power on the instrument and allow a 20 minute warm-up before doing this procedure.

1. *Verify that internal diagnostics pass:* Do the following substeps to verify passing of internal diagnostics.
 - a. *Display the System diagnostics menu:*

If the instrument is in toolbar mode, put the instrument into menu bar mode.

Pull down the **Utilities** menu and select **Instrument Diagnostics**. . . . This displays the diagnostics control window.
 - b. *Run the System Diagnostics:*
 - First disconnect any input signals from all four channels.
 - Click the **Run** button in the diagnostics control window.
 - c. *Wait:* The internal diagnostics do an exhaustive verification of proper instrument function. This verification may take several minutes. When the verification is finished, the resulting status will appear in the diagnostics control window.
 - d. *Verify that no failures are found and reported on-screen.* All tests should pass.
 - e. *Run the signal-path compensation routine:*

Pull down the **Utilities** menu and select **Instrument Calibration**. . . . This displays the instrument calibration control window.

If required because the instrument is in service mode, select the **Signal Path** button under Calibration Area.

Click the **Run SPC (Calibrate** on some instruments) button to start the routine.
 - f. *Wait:* Signal-path compensation may take five to fifteen minutes to run.
 - g. *Confirm signal-path compensation returns passed status:* Verify that the word **Pass** appears in the instrument calibration control window.
2. *Return to regular service:* Click the **X** (close) button to exit the instrument calibration control window.

Functional Tests

The purpose of these procedures is to confirm that the instrument functions properly. The only equipment required is a BNC or SMA cable and an adapter or the instrument probe. If you need to store settings during these procedures, access the local C: drive and store them in the TekScope > Setups directory.

STOP. These procedures verify functions; that is, they verify that the instrument features operate. They do not verify that they operate within limits.

Therefore, when the instructions in the functional tests that follow call for you to verify that a signal appears on-screen "that is about five divisions in amplitude" or "has a period of about six horizontal divisions," etc., do NOT interpret the quantities given as limits. Operation within limits is checked in Performance Tests. (See page 2-13, *Performance Tests*.)

STOP. DO NOT make changes to the front-panel settings that are not called out in the procedures. Each verification procedure will require you to set the instrument to certain default settings before verifying functions. If you make changes to these settings, other than those called out in the procedure, you may obtain invalid results. In this case, just redo the procedure from step 1.

When you are instructed to press a front-panel or screen button, the button may already be selected (its label will be highlighted). If this is the case, it is not necessary to press the button.

Verify All Input Channels

Equipment required

< 4 GHz models: One precision 50 Ω coaxial cable (Item 4)
 < 4 GHz models: One BNC to Minigrabber adapter (item 18)
 \geq 4 GHz models: One SMA cable (item 21)
 \geq 4 GHz models: One adapter (item 19)

Prerequisites

None

1. *Initialize the instrument:* Push the front-panel **Default Setup** button.
2. *Hook up the signal source:* Connect the equipment as shown in the following figure to the channel input you want to test (beginning with Ch 1).

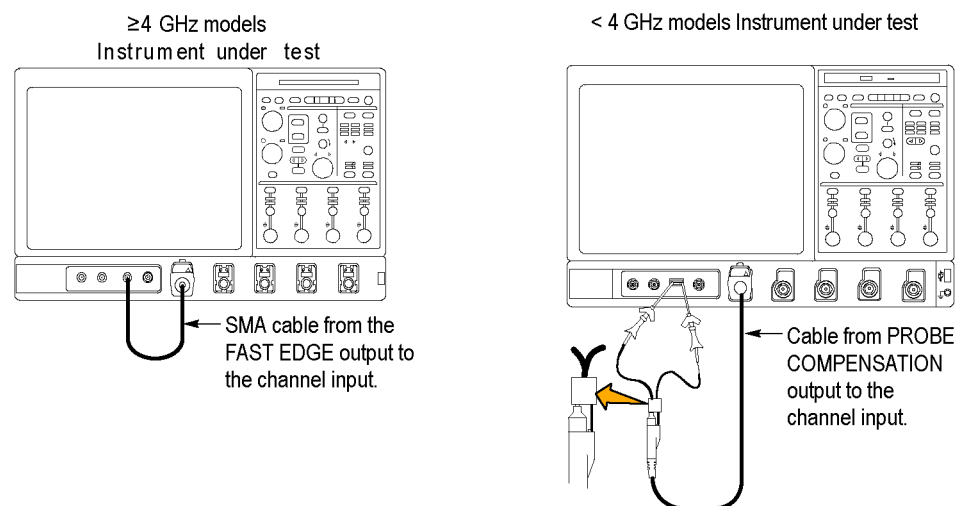


Figure 2-2: Universal test hookup for functional tests - Ch 1 shown

3. *Turn off all channels:* If any of the front-panel channel buttons are lighted, push those buttons to turn off the displayed channels as shown in the following figure.

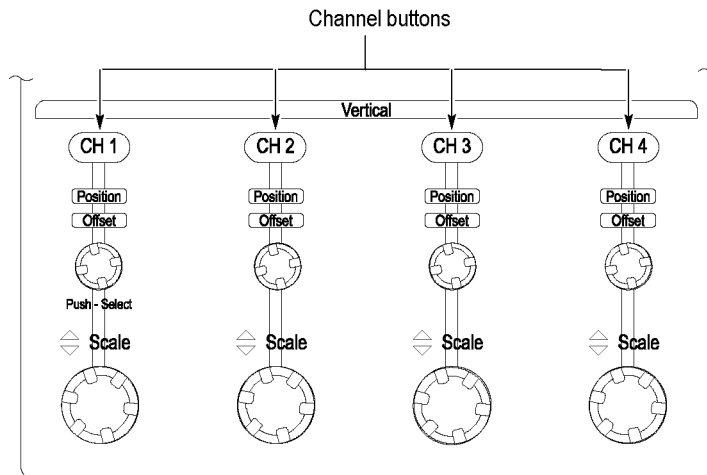


Figure 2-3: Channel button location

4. *Select the channel to test:* Push the channel button for the channel you are currently testing. The button lights and the channel display comes on.
5. *Set up the instrument:*

NOTE. *If the AutoSet Undo window appears, click the X.*

- Push the front panel **Autoset** button. This sets the horizontal and vertical scale and vertical offset for a usable display and sets the trigger source to the channel you are testing.
 - Pull down the **Vertical** menu, select Vertical Setup. Confirm that the Ch1 Offset is about **0.0 mV**.
6. *Verify that the channel is operational:* Confirm that the following statements are true.
 - Verify that the vertical scale readout and the waveform amplitude for the channel under test. (See Table 2-1.)

Table 2-1: Vertical settings

Setting	< 4 GHz models	≥ 4 GHz models
	Without probe	Without probe
Scale	500 mV	100 mV
Waveform amplitude	2 divisions	4 divisions

- The front-panel vertical **Position** knob (for the channel you are testing) moves the signal up and down the screen when rotated.
 - Turning the vertical **Scale** knob counterclockwise (for the channel you are testing) decreases the amplitude of the waveform on-screen, turning the knob clockwise increases the amplitude, and returning the knob to the original scale setting returns the original amplitude for that scale setting. (See Table 2-1.)
7. *Verify that the channel acquires in all acquisition modes:* Pull down the **Horiz/Acq** menu to select **Horizontal/Acquisition Setup**. . . . Click the **Acquisition** tab in the control window that displays. Click each of the acquisition modes and confirm that the following statements are true.
- Sample mode displays an actively acquiring waveform on-screen. (Note that there is a small amount of noise present on the square wave).
 - Peak Detect mode displays an actively acquiring waveform on-screen with the noise present in Sample mode "peak detected".
 - Hi Res mode displays an actively acquiring waveform on-screen with the noise that was present in Sample mode reduced.
 - Average mode displays an actively acquiring waveform on-screen with the noise reduced.
 - Envelope mode displays an actively acquiring waveform on-screen with the noise displayed.

NOTE. *Default setup enables enhanced triggering. Enhanced triggering can cause a slower acquisition rate that can be noticed in waveform database mode. As waveform database mode acquires 100,000 samples, the display intensity will increase, be cleared, and then the process will start over. When enhanced triggering is turned off, and with the specified settings and input signal, the display reaches full intensity right away.*

- Waveform Database mode displays an actively acquiring waveform on-screen with the noise displayed.
8. *Test all channels:* Repeat steps 2 through 7 until all four input channels are verified.
9. *Remove the test hookup:* Disconnect the equipment from the instrument.

Verify the Time Base

Equipment required	Prerequisites
< 4 GHz models: One precision 50 Ω coaxial cable (Item 4)	None
< 4 GHz models: One BNC to Minigrabber adapter (item 18)	
\geq 4 GHz models: One SMA cable (item 21)	
\geq 4 GHz models: One adapter (item 19)	

1. *Initialize the instrument:* Push the front-panel **Default Setup** button.
2. *Hook up the signal source:* Connect the probe compensation or fast edge output to the Ch 1 input as shown in the following figure.

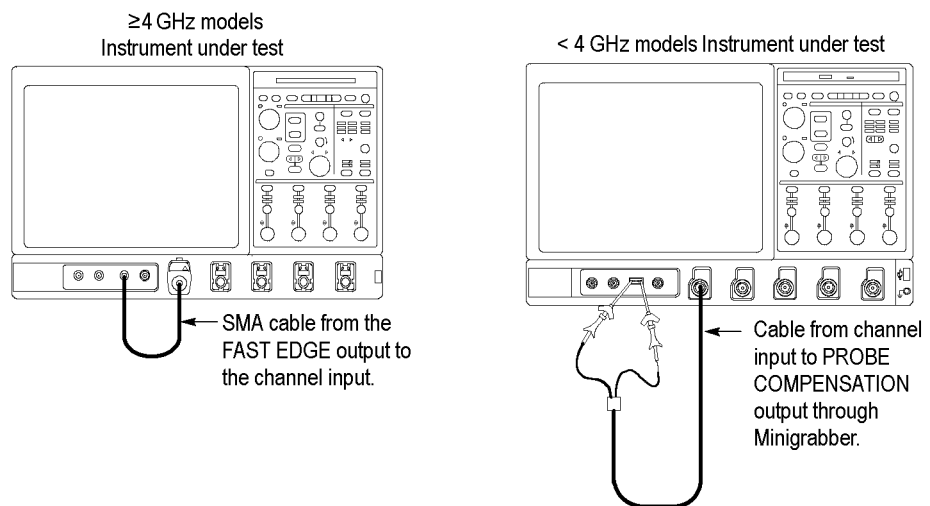


Figure 2-4: Setup for time base test

3. *Set up the instrument:* Push the front panel **Autoset** button.
4. Set the **Vertical Scale** to **200 mV** per division.
5. *Set the time base:* Set the horizontal **Scale** to **200 $\mu\text{s}/\text{div}$** . The time-base readout is displayed at the bottom of the graticule.
6. *Verify that the time base operates:* Confirm the following statements.
 - One period of the square-wave signal is about five horizontal divisions on-screen for the 200 $\mu\text{s}/\text{div}$ horizontal scale setting.
 - Rotating the horizontal **Scale** knob clockwise expands the waveform on-screen (more horizontal divisions per waveform period), counterclockwise rotation contracts it, and returning the horizontal scale to 200 $\mu\text{s}/\text{div}$ returns the period to about five divisions.
 - The horizontal **Position** knob positions the signal left and right on-screen when rotated.

7. *Verify horizontal delay:*
 - a. *Center a rising edge on screen:*
 - Set the horizontal **Position** knob so that the rising edge where the waveform is triggered is lined up with the center horizontal graticule.
 - Change the horizontal **Scale** to **20 $\mu\text{s}/\text{div}$** . The rising edge of the waveform should remain near the center graticule and the falling edge should be off screen.
 - b. *Turn on and set horizontal delay:*
 - Pull down the **Horiz/Acq** menu to select **Horizontal/Acquisition Setup** . . .
 - Click the **Horizontal** tab in the control window that displays.
 - Click the **Delay Mode** button to turn delay on.
 - Double click the **Horiz Delay** control in the control window to display the pop-up keypad. Click the keypad buttons to set the horizontal delay to **1 ms** and then click the **ENTER** key.
 - c. *Verify the waveform:* Verify that a rising edge of the waveform is within a few divisions of center screen.
 - d. *Adjust the horizontal delay:* Rotate the upper multipurpose knob to change the horizontal delay setting. Verify that the rising edge shifts horizontally. Rotate the front-panel horizontal **Position** knob. Verify that this knob has the same effect (it also adjusts delay, but only when delay mode is on).
 - e. *Verify the delay toggle function:*
 - Rotate the front-panel horizontal **Position** knob to center the rising edge horizontally on the screen.
 - Change the horizontal **Scale** to **50 ns/div** (< 4 GHz models) or **40 ns/div** (\geq 4 GHz models). The rising edge of the waveform should remain near the center graticule.
 - Readjust the delay setting to position the rising edge 2 divisions to the right of the center graticule line.
 - Push the front-panel **Delay** button several times to toggle delay off and on and back off again. Verify that the display switches quickly between two different points in time (the rising edge shifts horizontally on the display).
8. *Remove the test hookup:* Disconnect the test hookup from the instrument.

Verify the A (Main) and B (Delayed) Trigger Systems

Equipment required

- < 4 GHz models: One precision 50 Ω coaxial cable (Item 4)
- < 4 GHz models: One BNC to Minigrabber adapter (item 18)
- \geq 4 GHz models: One SMA cable (item 21)
- \geq 4 GHz models: One adapter (item 19)

Prerequisites

None

1. *Initialize the instrument:* Push the front-panel **Default Setup** button.
2. *Hook up the signal source:* Connect the probe compensation or fast edge output to the Ch 1 input as shown in the following figure.

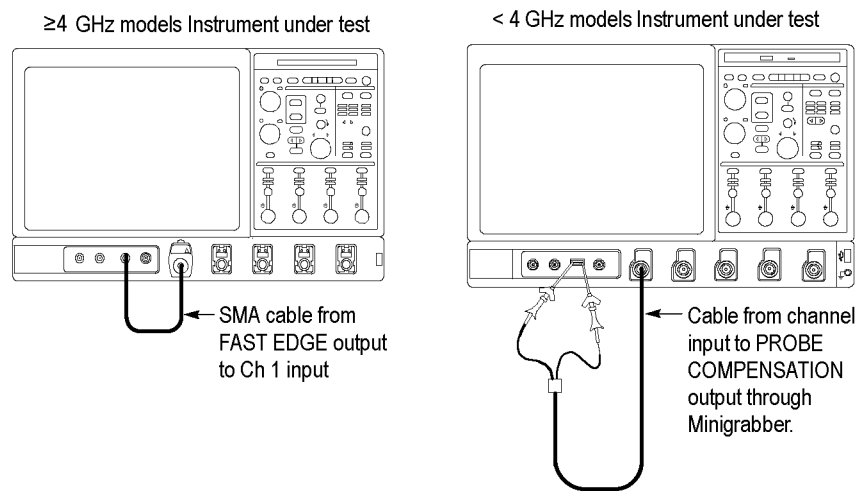


Figure 2-5: Setup for trigger test

3. *Set up the instrument:* Push the front-panel **Autoset** button.
4. Set the **Vertical Scale** to **200 mV** per division.
5. *Verify that the main trigger system operates:* Confirm that the following statements are true.
 - The trigger level readout for the A (main) trigger system changes with the trigger-**Level** knob.
 - The trigger-**Level** knob can trigger and untrigger the square-wave signal as you rotate the knob. (Leave the signal untriggered).
 - Pushing the front-panel trigger **Level** knob sets the trigger level to the 50% amplitude point of the signal and triggers the signal that you just left untriggered. (Leave the signal triggered.)

6. *Verify that the delayed trigger system operates:*
 - a. *Set up the delayed trigger:*

Pull down the **Trig** menu and select **A – B Trigger Sequence**. . . . This displays the A →B Sequence tab of the trigger setup control window.

Click the **Trig After Time** button under A Then B.

Click the **B Trig Level** control in the control window.

Set the front-panel trigger mode to **Norm**.
 - b. *Confirm that the following statements are true:*
 - The trigger-level readout for the B trigger system changes as you turn the lower multipurpose knob.
 - As you rotate the lower multipurpose knob, the square-wave signal can become triggered and untriggered. (Leave the signal triggered.)
 - c. *Verify the delayed trigger counter:*
 - Double click the **Trig Delay** control to pop up a numeric keypad for that control.
 - Click the keypad to enter a trigger delay time of **1 second** (click 1 and None) and then click **Enter**.
 - Verify that the trigger **Ready** indicator on the front panel flashes about once every second as the waveform is updated on-screen.
7. *Remove the test hookup:* Disconnect the test hookup from the instrument.

Verify the File System

Equipment required	Prerequisites
< 4 GHz models: One precision 50 Ω coaxial cable (Item 4)	None
< 4 GHz models: One BNC to Minigrabber adapter (item 18)	
≥ 4 GHz models: One SMA cable (item 21)	
≥ 4 GHz models: One adapter (item 19)	

1. *Initialize the instrument:* Push the front-panel **Default Setup** button.
2. *Hook up the signal source:* Connect the probe compensation or fast edge output to the Ch 1 input as shown in the following.

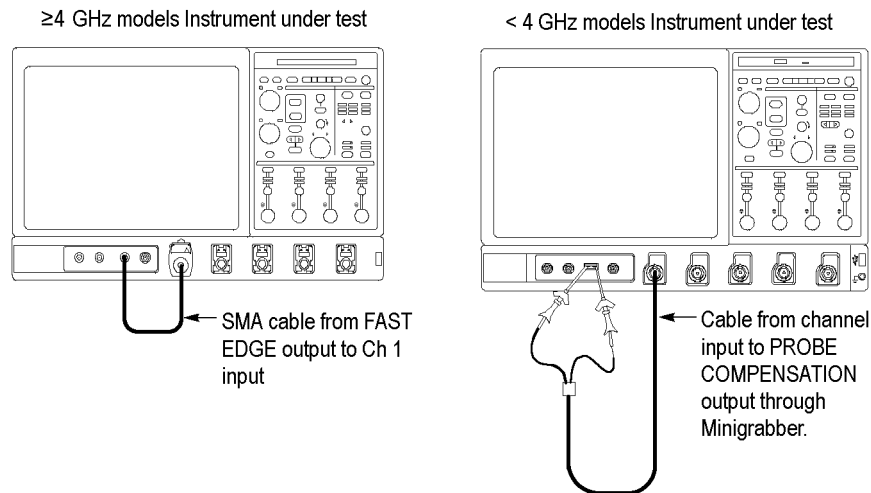


Figure 2-6: Setup for the file system test

3. *Set up the instrument:* Push the front panel **Autoset** button.
4. Set the **Vertical Scale** to **200 mV** per division.
5. *Set the time base:* Set the horizontal **Scale** to **1 ms/div**. The time-base readout is displayed at the bottom of the graticule.
6. *Save the settings:*
 - a. Pull down the **File** menu to select **Save As. . . >Setup. . .**. This displays the instrument Save As control window.
 - b. Note the default location and file name and then click the **Save** button to save the setup to the default file name and location.
7. *Change the settings again:* Set the horizontal **SCALE** to **200 μ s/div**.
8. *Verify the file system works:*
 - a. Pull down the **File** menu to select **Recall**. This displays the instrument Recall control window.
 - b. Click Recall **What > Setup**.
 - c. Locate and then double click the setup file that you previously stored.
 - d. Verify that the instrument retrieved the saved setup. Do this by noticing the horizontal **SCALE** is again 1 ms and the waveform shows ten cycles just as it did when you saved the setup.
9. *Remove the test hookup:* Disconnect the test hookup from the instrument.

Performance Tests

This section contains a collection of manual procedures for checking that the instrument performs as warranted.

The procedures are arranged in logical groupings: *Signal Acquisition System Checks*, *Time Base System Checks*, *Triggering System Checks*, *Output Ports Checks*, and *Serial Trigger Checks*. They check all the characteristics that are designated as checked in *Specifications*. (The characteristics that are checked appear with a ✓ in *Specifications*).

STOP. These procedures extend the confidence level provided by the basic procedures. The basic procedures should be done first, then these procedures performed if desired.

Prerequisites

The tests in this section comprise an extensive, valid confirmation of performance and functionality when the following requirements are met:

- The cabinet must be installed on the instrument.
- You must have performed and passed the procedures under *Self Tests*, and those under *Functional Tests*. (See page 2-4, *Functional Tests*.)
- A signal-path compensation must have been done within the recommended calibration interval and at a temperature within ± 5 °C (± 9 °F) of the present operating temperature. (If at the time you did the prerequisite *Self Tests*, the temperature was within the limits just stated, consider this prerequisite met). A signal-path compensation must have been done at an ambient humidity within 25% of the current ambient humidity and after having been at that humidity for at least 4 hours.
- The instrument must have been last adjusted at an ambient temperature between +18 °C (+64 °F) and +28 °C (+82 °F), must have been operating for a warm-up period of at least 20 minutes, and must be operating at an ambient temperature as listed in the specifications. (See Table 1-9 on page 1-44.) (The warm-up requirement is usually met in the course of meeting the Self Tests and Functional Tests prerequisites listed above).
- Support sensor, probe, and adapter setups to avoid stress or torque when connected to the device under test (DUT).

Equipment Required

Procedures starting on (See page 2-39.), use external, traceable signal sources to directly check warranted characteristics. The following table lists the required equipment.

Table 2-2: Test equipment

	Minimum requirements	Example	Purpose
1. Attenuator, 10X (two required)	Ratio: 10X; impedance 50 Ω ; connectors: female input, male output	BNC \leq 2 GHz Tektronix part number 011-0059-03 SMA \leq 18 GHz Tektronix part number 015-1003-00	Signal attenuation, bandwidth, trigger sensitivity
2. Attenuator, 5X	Ratio: 5X; impedance 50 Ω ; connectors: female input, male output	BNC \leq 2 GHz Tektronix part number 011-0060-02 SMA \leq 18 GHz Tektronix part number 015-1002-01	Signal attenuation, bandwidth, trigger sensitivity
3. Termination, 50 Ω (three required)	Impedance 50 Ω ; connectors: female BNC input, male BNC output	Tektronix part number 011-0049-02 (1 GHz)	Signal termination for channel delay test, trigger sensitivity
4. Cable, Precision 50 Ω Coaxial (three required)	50 Ω , 36 in, male-to-male BNC connectors	Tektronix part number 012-0482-00	Signal interconnection, Trigger out, time qualified trigger, timebase delay time, baud rate limit, bandwidth, input resistance, delta time, clock recovery, generator leveling
5. Connector, Dual-Banana (two required)	Female BNC-to-dual banana	Tektronix part number 103-0090-00	Various accuracy tests, input resistance
6. Generator, DC Calibration	Variable amplitude to ± 7 V; accuracy to 0.1%	Fluke 9500B ¹	Checking DC offset, gain, measurement accuracy, probe compensation out, and maximum input voltage
7. Generator, Calibration	500 mV square wave calibrator amplitude; accuracy to 0.25%	Fluke 9500B ¹	To check accuracy of signal out, trigger out
8. Timer-counter	10 MHz and 100 MHz, 1 s gate	Advantest R5360	Checking long-term sample rate and delay time accuracy
9. Generator, Sine-Wave	Instrument bandwidth ≤ 3 GHz: 5 kHz to at least the instrument bandwidth. Variable amplitude from 60 mV to 2 V _{p-p} into 50 Ω . Frequency error $< 2.0\%$	Fluke 9500B ¹	Checking analog bandwidth, trigger sensitivity, sample-rate, external clock, trigger sensitivity, time qualified trigger, baud rate limit, clock recovery, and delay-time accuracy
	Instrument bandwidth > 3 GHz: 50 MHz to at least the instrument bandwidth. Variable amplitude from 60 mV to 2.0 V _{p-p} into 50 Ω . Frequency error $< 2.0\%$	Anritsu MG3692B or MG3694B Synthesized CW Generator with options 2x (step attenuator), 3 (low noise > 2 GHz), 4 (10 MHz to 2 GHz low phase noise), 15 (high power), and 16 (high stability)	

	Minimum requirements	Example	Purpose
10. Meter, Level and Power Sensor	Frequency range: 50 MHz to the instrument bandwidth. Amplitude range: 6 mV _{p-p} to 2 V _{p-p}	Rohde & Schwarz NRVS and NRV-Z15 (40 GHz)	Checking analog bandwidth and Trigger Sensitivity
11. Splitter, Power	Instrument bandwidth ≤3 GHz: Frequency range: DC to 18 GHz. Tracking: <2.0%	Agilent part number 11667A	Checking trigger sensitivity and analog bandwidth
	Instrument bandwidth >3 GHz: Frequency range: DC to 40 GHz. Tracking: <2.0%	Anritsu K241C (40 GHz)	
12. Cable	2.92 mm male-to-female	Gore PhaseFlex cable EL0CQ0CP0360 (40 GHz)	Checking analog bandwidth
13. Adapter	K male-to-male DC to 40 GHz	Anritsu K220B	Checking analog bandwidth
14. Adapter (four required)	Male N-to-female BNC	Tektronix part number 103-0045-00	Checking analog bandwidth
15. Adapter	Female N-to-male BNC	Tektronix part number 103-0058-00 (4 GHz)	Checking analog bandwidth
16. Adapter (three required)	SMA female-to-female	Tektronix part number 015-1012-00 (18 GHz)	Checking trigger sensitivity
17. Adapter (three required)	SMA male-to-female BNC	Tektronix part number 015-1018-00	Checking the delay between channels, delta time
18. Adapter	BNC to Minigrabber	Tektronix part number 013-0342-xx	Checking probe compensation output
19. Adapter (four required)	SMA male-to-BNC female	TCA-BNC or TCA-292mm and, if required, SMA male-to-BNC female adapter (Tektronix part number 015-0554-00 (4 GHz) or 015-1018-00)	Signal interconnection, measurement accuracy, delay time, time qualified trigger, trigger sensitivity, DC gain, offset, bandwidth, input resistance, probe compensation out, baud rate limit, clock recovery
20. Pulse Generator	250 MHz, ≤ 150 ps rise time, 5 V out	Fluke 9500B ^{1, 2}	Used to test delta time measurement accuracy
21. Cable, Coaxial (three required)	50 Ω, 20 in, male-to-male SMA connectors	Tektronix part number 174-1427-00	Used to test delta time measurement accuracy, probe compensation out, trigger sensitivity
22. Adapter	SMA "T", male to 2 SMA female	Tektronix part number 015-1016-00 (18 GHz)	Used to test delta time measurement accuracy
23. Adapter	SMA female to BNC male	Tektronix part number 015-0572-00 (4 GHz)	Used to test delta time measurement accuracy and trigger sensitivity
24. Adapter	BNC male to female elbow	Tektronix part number 103-0031-00	Used to test delta time measurement accuracy

	Minimum requirements	Example	Purpose
25. Termination	Short circuit, SMA connector, female	Tektronix part number 015-1021-00 (18 GHz)	Used to test delta time measurement accuracy
26. Attenuator, 2X	Ratio: 2X; impedance 50 Ω ; connectors: female BNC input, male BNC output	Tektronix part number 011-0069-02 (2 GHz)	Used to test delta time measurement accuracy, pulse trigger accuracy, time qualified trigger, trigger sensitivity, and channel isolation
27. Digital Multimeter	Ohms: <60 Ohms	Keithley 2000	Checking input impedance
28. Cable, coaxial	50 Ω , 39.37 in (1.0 m), male-to-male SMA connectors 50 Ω , 60 in (1.5 m), male-to-male SMA connectors	Tektronix part number 174-1341-00 Tektronix part number 174-1428-00	Checking analog bandwidth and delta time measurement accuracy. Checking \geq 4 GHz models Serial Trigger Baud Rate Limits
29. Mouse or keyboard		Tektronix part numbers: 119-6298-xx (mouse) 119-6297-xx (keyboard)	Used to input test selections

¹ Fluke 9500B/1100, 9500B/3200, or 9500B/2200 and an output head (9510 or 9530) appropriate for the bandwidth of the instrument being tested.

² For Delta Time Measurement Accuracy, use a Fluke 9500B or a pulse generator with the specified rise time. (See Table 2-11 on page 2-78.)

DPO7000 Series and DSA/DPO70000 Series Test Record

Photocopy this table and use it to record the performance test results for your instrument.

Table 2-3: DPO7000, DPO/DSA70000 and DPO/DSA70000B Series Test Record

Instrument Serial Number:

Certificate Number:

Temperature:

RH %:

Date of Calibration:

Technician:

Instrument performance test	Minimum	Incoming	Outgoing	Maximum
DC voltage measurement accuracy (averaged), ≥ 4 GHz B models				
Ch1 10 mV Vert scale setting, -5 Div position setting, +0.45 V offset	+ 524.75 mV	_____	_____	+ 535.25 mV
Ch1 10 mV Vert scale setting, +5 Div position setting, -0.45 V offset	- 535.25 mV	_____	_____	- 524.75 mV
Ch1 20 mV Vert scale setting, -5 Div position setting, +0.4 V offset	+ 552.75 mV	_____	_____	+ 567.25 mV
Ch1 20 mV Vert scale setting, +5 Div position setting, -0.4 V offset	- 567.25 mV	_____	_____	- 552.75 mV
Ch1 50 mV Vert scale setting, -5 Div position setting, +0.25 V offset	+ 636.75 mV	_____	_____	+ 663.25 mV
Ch1 50 mV Vert scale setting, +5 Div position setting, -0.25 V offset	- 663.25 mV	_____	_____	- 636.75 mV
Ch1 100 mV Vert scale setting, -5 Div position setting, +2.0 V offset	+ 2.696 V	_____	_____	+ 2.904 V
Ch1 100 mV Vert scale setting, +5 Div position setting, -2.0 V offset	- 2.904 V	_____	_____	- 2.696 V
Ch1 250 mV Vert scale setting, -5 Div position setting, +1.25 V offset	+ 2.994 V	_____	_____	+ 3.256 V
Ch1 250 mV Vert scale setting, +5 Div position setting, -1.25 V offset	- 3.256 V	_____	_____	- 2.994 V
Ch1 500 mV Vert scale setting, -5 Div position setting, 0V offset	+ 3.326 V	_____	_____	+ 3.674 V
Ch1 500 mV Vert scale setting, +5 Div position setting, -0 V offset	- 3.674 V	_____	_____	- 3.326 V
Ch2 10 mV Vert scale setting, -5 Div position setting, +0.45 V offset	+ 524.75 mV	_____	_____	+ 535.25 mV
Ch2 10 mV Vert scale setting, +5 Div position setting, -0.45 V offset	- 535.25 mV	_____	_____	- 524.75 mV
Ch2 20 mV Vert scale setting, -5 Div position setting, +0.4 V offset	+ 552.75 mV	_____	_____	+ 567.25 mV
Ch2 20 mV Vert scale setting, +5 Div position setting, -0.4 V offset	- 567.25 mV	_____	_____	- 552.75 mV
Ch2 50 mV Vert scale setting, -5 Div position setting, +0.25 V offset	+ 636.75 mV	_____	_____	+ 663.25 mV
Ch2 50 mV Vert scale setting, +5 Div position setting, -0.25 V offset	- 663.25 mV	_____	_____	- 636.75 mV
Ch2 100 mV Vert scale setting, -5 Div position setting, +2.0 V offset	+ 2.696 V	_____	_____	+ 2.904 V

Table 2-3: DPO7000, DPO/DSA70000 and DPO/DSA70000B Series Test Record (cont.)

Instrument performance test	Minimum	Incoming	Outgoing	Maximum
Ch2 100 mV Vert scale setting, +5 Div position setting, -2.0 V offset	- 2.904 V	_____	_____	- 2.696 V
Ch2 250 mV Vert scale setting, -5 Div position setting, +1.25 V offset	+ 2.994 V	_____	_____	+ 3.256 V
Ch2 250 mV Vert scale setting, +5 Div position setting, -1.25 V offset	- 3.256 V	_____	_____	- 2.994 V
Ch2 500 mV Vert scale setting, -5 Div position setting, 0V offset	+ 3.326 V	_____	_____	+ 3.674 V
Ch2 500 mV Vert scale setting, +5 Div position setting, -0 V offset	- 3.674 V	_____	_____	- 3.326 V
Ch3 10 mV Vert scale setting, -5 Div position setting, +0.45 V offset	+ 524.75 mV	_____	_____	+ 535.25 mV
Ch3 10 mV Vert scale setting, +5 Div position setting, -0.45 V offset	- 535.25 mV	_____	_____	- 524.75 mV
Ch3 20 mV Vert scale setting, -5 Div position setting, +0.4 V offset	+ 552.75 mV	_____	_____	+ 567.25 mV
Ch3 20 mV Vert scale setting, +5 Div position setting, -0.4 V offset	- 567.25 mV	_____	_____	- 552.75 mV
Ch3 50 mV Vert scale setting, -5 Div position setting, +0.25 V offset	+ 636.75 mV	_____	_____	+ 663.25 mV
Ch3 50 mV Vert scale setting, +5 Div position setting, -0.25 V offset	- 663.25 mV	_____	_____	- 636.75 mV
Ch3 100 mV Vert scale setting, -5 Div position setting, +2.0 V offset	+ 2.696 V	_____	_____	+ 2.904 V
Ch3 100 mV Vert scale setting, +5 Div position setting, -2.0 V offset	- 2.904 V	_____	_____	- 2.696 V
Ch3 250 mV Vert scale setting, -5 Div position setting, +1.25 V offset	+ 2.994 V	_____	_____	+ 3.256 V
Ch3 250 mV Vert scale setting, +5 Div position setting, -1.25 V offset	- 3.256 V	_____	_____	- 2.994 V
Ch3 500 mV Vert scale setting, -5 Div position setting, 0V offset	+ 3.326 V	_____	_____	+ 3.674 V
Ch3 500 mV Vert scale setting, +5 Div position setting, -0 V offset	- 3.674 V	_____	_____	- 3.326 V
Ch4 10 mV Vert scale setting, -5 Div position setting, +0.45 V offset	+ 524.75 mV	_____	_____	+ 535.25 mV
Ch4 10 mV Vert scale setting, +5 Div position setting, -0.45 V offset	- 535.25 mV	_____	_____	- 524.75 mV
Ch4 20 mV Vert scale setting, -5 Div position setting, +0.4 V offset	+ 552.75 mV	_____	_____	+ 567.25 mV
Ch4 20 mV Vert scale setting, +5 Div position setting, -0.4 V offset	- 567.25 mV	_____	_____	- 552.75 mV

Table 2-3: DPO7000, DPO/DSA70000 and DPO/DSA70000B Series Test Record (cont.)

Instrument performance test	Minimum	Incoming	Outgoing	Maximum
Ch4 50 mV Vert scale setting, -5 Div position setting, +0.25 V offset	+ 636.75 mV	_____	_____	+ 663.25 mV
Ch4 50 mV Vert scale setting, +5 Div position setting, -0.25 V offset	- 663.25 mV	_____	_____	- 636.75 mV
Ch4 100 mV Vert scale setting, -5 Div position setting, +2.0 V offset	+ 2.696 V	_____	_____	+ 2.904 V
Ch4 100 mV Vert scale setting, +5 Div position setting, -2.0 V offset	- 2.904 V	_____	_____	- 2.696 V
Ch4 250 mV Vert scale setting, -5 Div position setting, +1.25 V offset	+ 2.994 V	_____	_____	+ 3.256 V
Ch4 250 mV Vert scale setting, +5 Div position setting, -1.25 V offset	- 3.256 V	_____	_____	- 2.994 V
Ch4 500 mV Vert scale setting, -5 Div position setting, 0V offset	+ 3.326 V	_____	_____	+ 3.674 V
Ch4 500 mV Vert scale setting, +5 Div position setting, -0 V offset	- 3.674 V	_____	_____	- 3.326 V
DC voltage measurement accuracy (averaged), ≥ 4 GHz non-B models				
Ch1 10 mV Vert scale setting, -5 Div position setting, +0.45 V offset	+ 524.75 mV	_____	_____	+ 535.25 mV
Ch1 10 mV Vert scale setting, +5 Div position setting, -0.45 V offset	- 535.25 mV	_____	_____	- 524.75 mV
Ch1 20 mV Vert scale setting, -5 Div position setting, +0.4 V offset	+ 552.75 mV	_____	_____	+ 567.25 mV
Ch1 20 mV Vert scale setting, +5 Div position setting, -0.4 V offset	- 567.25 mV	_____	_____	- 552.75 mV
Ch1 50 mV Vert scale setting, -5 Div position setting, +0.25 V offset	+ 636.75 mV	_____	_____	+ 663.25 mV
Ch1 50 mV Vert scale setting, +5 Div position setting, -0.25 V offset	- 663.25 mV	_____	_____	- 636.75 mV
Ch1 100 mV Vert scale setting, -5 Div position setting, +4.5 V offset	+ 5.248 V	_____	_____	+ 5.353 V
Ch1 100 mV Vert scale setting, +5 Div position setting, -4.5 V offset	- 5.353 V	_____	_____	- 5.248 V
Ch1 200 mV Vert scale setting, -5 Div position setting, +4 V offset	+ 5.430 V	_____	_____	+ 5.571 V
Ch1 200 mV Vert scale setting, +5 Div position setting, -4 V offset	- 5.571 V	_____	_____	- 5.430 V
Ch1 500 mV Vert scale setting, -4 Div position setting, +2.5V offset	+ 5.379 V	_____	_____	+ 5.621 V
Ch1 500 mV Vert scale setting, +4 Div position setting, -2.5 V offset	- 5.621 V	_____	_____	- 5.379 V

Table 2-3: DPO7000, DPO/DSA70000 and DPO/DSA70000B Series Test Record (cont.)

Instrument performance test	Minimum	Incoming	Outgoing	Maximum
Ch1 1.0 V Vert scale setting, -5 Div position setting, +0.0 V offset	+ 5.318 V	_____	_____	+ 5.683 V
Ch1 1.0 V Vert scale setting, +5 Div position setting, -0.0 V offset	- 5.683 V	_____	_____	- 5.318 V
Ch2 10 mV Vert scale setting, -5 Div position setting, +0.45 V offset	+ 524.75 mV	_____	_____	+ 535.25 mV
Ch2 10 mV Vert scale setting, +5 Div position setting, -0.45 V offset	- 535.25 mV	_____	_____	- 524.75 mV
Ch2 20 mV Vert scale setting, -5 Div position setting, +0.4 V offset	+ 552.75 mV	_____	_____	+ 567.25 mV
Ch2 20 mV Vert scale setting, +5 Div position setting, -0.4 V offset	- 567.25 mV	_____	_____	- 552.75 mV
Ch2 50 mV Vert scale setting, -5 Div position setting, +0.25 V offset	+ 636.75 mV	_____	_____	+ 663.25 mV
Ch2 50 mV Vert scale setting, +5 Div position setting, -0.25 V offset	- 663.25 mV	_____	_____	- 636.75 mV
Ch2 100 mV Vert scale setting, -5 Div position setting, +4.5 V offset	+ 5.248 V	_____	_____	+ 5.353 V
Ch2 100 mV Vert scale setting, +5 Div position setting, -4.5 V offset	- 5.353 V	_____	_____	- 5.248 V
Ch2 200 mV Vert scale setting, -5 Div position setting, +4 V offset	+ 5.430 V	_____	_____	+ 5.571 V
Ch2 200 mV Vert scale setting, +5 Div position setting, -4 V offset	- 5.571 V	_____	_____	- 5.430 V
Ch2 500 mV Vert scale setting, -4 Div position setting, +2.5V offset	+ 5.379 V	_____	_____	+ 5.621 V
Ch2 500 mV Vert scale setting, +4 Div position setting, -2.5 V offset	- 5.621 V	_____	_____	- 5.379 V
Ch2 1.0 V Vert scale setting, -5 Div position setting, +0.0 V offset	+ 5.318 V	_____	_____	+ 5.683 V
Ch2 1.0 V Vert scale setting, +5 Div position setting, -0.0 V offset	- 5.683 V	_____	_____	- 5.318 V
Ch3 10 mV Vert scale setting, -5 Div position setting, +0.45 V offset	+ 524.75 mV	_____	_____	+ 535.25 mV
Ch3 10 mV Vert scale setting, +5 Div position setting, -0.45 V offset	- 535.25 mV	_____	_____	- 524.75 mV
Ch3 20 mV Vert scale setting, -5 Div position setting, +0.4 V offset	+ 552.75 mV	_____	_____	+ 567.25 mV
Ch3 20 mV Vert scale setting, +5 Div position setting, -0.4 V offset	- 567.25 mV	_____	_____	- 552.75 mV
Ch3 50 mV Vert scale setting, -5 Div position setting, +0.25 V offset	+ 636.75 mV	_____	_____	+ 663.25 mV

Table 2-3: DPO7000, DPO/DSA70000 and DPO/DSA70000B Series Test Record (cont.)

Instrument performance test	Minimum	Incoming	Outgoing	Maximum
Ch3 50 mV Vert scale setting, +5 Div position setting, -0.25 V offset	- 663.25 mV	_____	_____	- 636.75 mV
Ch3 100 mV Vert scale setting, -5 Div position setting, +4.5 V offset	+ 5.248 V	_____	_____	+ 5.353 V
Ch3 100 mV Vert scale setting, +5 Div position setting, -4.5 V offset	- 5.353 V	_____	_____	- 5.248 V
Ch3 200 mV Vert scale setting, -5 Div position setting, +4 V offset	+ 5.430 V	_____	_____	+ 5.571 V
Ch3 200 mV Vert scale setting, +5 Div position setting, -4 V offset	- 5.571 V	_____	_____	- 5.430 V
Ch3 500 mV Vert scale setting, -4 Div position setting, +2.5V offset	+ 5.379 V	_____	_____	+ 5.621 V
Ch3 500 mV Vert scale setting, +4 Div position setting, -2.5 V offset	- 5.621 V	_____	_____	- 5.379 V
Ch3 1.0 V Vert scale setting, -5 Div position setting, +0.0 V offset	+ 5.318 V	_____	_____	+ 5.683 V
Ch3 1.0 V Vert scale setting, +5 Div position setting, -0.0 V offset	- 5.683 V	_____	_____	- 5.318 V
Ch4 10 mV Vert scale setting, -5 Div position setting, +0.45 V offset	+ 524.75 mV	_____	_____	+ 535.25 mV
Ch4 10 mV Vert scale setting, +5 Div position setting, -0.45 V offset	- 535.25 mV	_____	_____	- 524.75 mV
Ch4 20 mV Vert scale setting, -5 Div position setting, +0.4 V offset	+ 552.75 mV	_____	_____	+ 567.25 mV
Ch4 20 mV Vert scale setting, +5 Div position setting, -0.4 V offset	- 567.25 mV	_____	_____	- 552.75 mV
Ch4 50 mV Vert scale setting, -5 Div position setting, +0.25 V offset	+ 636.75 mV	_____	_____	+ 663.25 mV
Ch4 50 mV Vert scale setting, +5 Div position setting, -0.25 V offset	- 663.25 mV	_____	_____	- 636.75 mV
Ch4 100 mV Vert scale setting, -5 Div position setting, +4.5 V offset	+ 5.248 V	_____	_____	+ 5.353 V
Ch4 100 mV Vert scale setting, +5 Div position setting, -4.5 V offset	- 5.353 V	_____	_____	- 5.248 V
Ch4 200 mV Vert scale setting, -5 Div position setting, +4 V offset	+ 5.430 V	_____	_____	+ 5.571 V
Ch4 200 mV Vert scale setting, +5 Div position setting, -4 V offset	- 5.571 V	_____	_____	- 5.430 V
Ch4 500 mV Vert scale setting, -4 Div position setting, +2.5V offset	+ 5.379 V	_____	_____	+ 5.621 V
Ch4 500 mV Vert scale setting, +4 Div position setting, -2.5 V offset	- 5.621 V	_____	_____	- 5.379 V

Table 2-3: DPO7000, DPO/DSA70000 and DPO/DSA70000B Series Test Record (cont.)

Instrument performance test	Minimum	Incoming	Outgoing	Maximum
Ch4 1.0 V Vert scale setting, -5 Div position setting, +0.0 V offset	+ 5.318 V	_____	_____	+ 5.683 V
Ch4 1.0 V Vert scale setting, +5 Div position setting, -0.0 V offset	- 5.683 V	_____	_____	- 5.318 V
DC voltage measurement accuracy (averaged), < 4 GHz models				
Ch1 1 mV Vert scale setting, -5 Div position setting, +0.5 V offset	+ 504.25 mV	_____	_____	+ 509.76 mV
Ch1 1 mV Vert scale setting, +5 Div position setting, -0.5 V offset	- 509.76 mV	_____	_____	- 504.25 mV
Ch1 2 mV Vert scale setting, -5 Div position setting, +0.5 V offset	+ 512.98 mV	_____	_____	+ 519.03 mV
Ch1 2 mV Vert scale setting, +5 Div position setting, -0.5 V offset	- 519.03 mV	_____	_____	- 512.98 mV
Ch1 5 mV Vert scale setting, -5 Div position setting, +0.5 V offset	+ 536.26 mV	_____	_____	+ 543.74 mV
Ch1 5 mV Vert scale setting, +5 Div position setting, -0.5 V offset	- 543.74 mV	_____	_____	- 536.26 mV
Ch1 10 mV Vert scale setting, -5 Div position setting, +0.5 V offset	+ 574.20 mV	_____	_____	+ 585.80 mV
Ch1 10 mV Vert scale setting, +5 Div position setting, -0.5 V offset	- 585.80 mV	_____	_____	- 574.20 mV
Ch1 20 mV Vert scale setting, -5 Div position setting, +0.5 V offset	+ 651.65 mV	_____	_____	+ 668.35 mV
Ch1 20 mV Vert scale setting, +5 Div position setting, -0.5 V offset	- 668.35 mV	_____	_____	- 651.65 mV
Ch1 50 mV Vert scale setting, -5 Div position setting, +0.5 V offset	+ 884.00 mV	_____	_____	+ 916.00 mV
Ch1 50 mV Vert scale setting, +5 Div position setting, -0.5 V offset	- 916.00 V	_____	_____	- 884.00 mV
Ch1 90 mV Vert scale setting, -5 Div position setting, +0.5 V offset	+ 1.194 V	_____	_____	+ 1.246 V
Ch1 90 mV Vert scale setting, +5 Div position setting, -0.5 V offset	- 1.246 V	_____	_____	- 1.194 V
Ch1 100 mV Vert scale setting, 0 Div position setting, +4.5 V offset	+ 4.746 V	_____	_____	+ 4.854 V
Ch1 100 mV Vert scale setting, 0 Div position setting, -4.5 V offset	- 4.854 V	_____	_____	- 4.746 V
Ch1 200 mV Vert scale setting, -2 Div position setting, +4.6 V offset	+ 4.725 V	_____	_____	+ 4.875 V
Ch1 200 mV Vert scale setting, +2 Div position setting, -4.6 V offset	- 4.875 V	_____	_____	- 4.725 V

Table 2-3: DPO7000, DPO/DSA70000 and DPO/DSA70000B Series Test Record (cont.)

Instrument performance test	Minimum	Incoming	Outgoing	Maximum
Ch1 500 mV Vert scale setting, -2 Div position setting, +5.0 V offset	+ 4.345 V	_____	_____	+ 4.655 V
Ch1 500 mV Vert scale setting, +2 Div position setting, -5.0 V offset	- 4.655 V	_____	_____	- 4.345 V
Ch1 1.0 V Vert scale setting, 0 Div position setting, +2.0 V offset	+ 4.745 V	_____	_____	+ 5.255 V
Ch1 1.0 V Vert scale setting, 0 Div position setting, -2.0 V offset	- 5.255 V	_____	_____	- 4.745 V
Ch2 1 mV Vert scale setting, -5 Div position setting, +0.5 V offset	+ 504.25 mV	_____	_____	+ 509.76 mV
Ch2 1 mV Vert scale setting, +5 Div position setting, -0.5 V offset	- 509.76 mV	_____	_____	- 504.25 mV
Ch2 2 mV Vert scale setting, -5 Div position setting, +0.5 V offset	+ 512.98 mV	_____	_____	+ 519.03 mV
Ch2 2 mV Vert scale setting, +5 Div position setting, -0.5 V offset	- 519.03 mV	_____	_____	- 512.98 mV
Ch2 5 mV Vert scale setting, -5 Div position setting, +0.5 V offset	+ 536.26 mV	_____	_____	+ 543.74 mV
Ch2 5 mV Vert scale setting, +5 Div position setting, -0.5 V offset	- 543.74 mV	_____	_____	- 536.26 mV
Ch2 10 mV Vert scale setting, -5 Div position setting, +0.5 V offset	+ 574.20 mV	_____	_____	+ 585.80 mV
Ch2 10 mV Vert scale setting, +5 Div position setting, -0.5 V offset	- 585.80 mV	_____	_____	- 574.20 mV
Ch2 20 mV Vert scale setting, -5 Div position setting, +0.5 V offset	+ 651.65 mV	_____	_____	+ 668.35 mV
Ch2 20 mV Vert scale setting, +5 Div position setting, -0.5 V offset	- 668.35 mV	_____	_____	- 651.65 mV
Ch2 50 mV Vert scale setting, -5 Div position setting, +0.5 V offset	+ 884.00 mV	_____	_____	+ 916.00 mV
Ch2 50 mV Vert scale setting, +5 Div position setting, -0.5 V offset	- 916.00 V	_____	_____	- 884.00 mV
Ch2 90 mV Vert scale setting, -5 Div position setting, +0.5 V offset	+ 1.194 V	_____	_____	+ 1.246 V
Ch2 90 mV Vert scale setting, +5 Div position setting, -0.5 V offset	- 1.246 V	_____	_____	- 1.194 V
Ch2 100 mV Vert scale setting, 0 Div position setting, +4.5 V offset	+ 4.746 V	_____	_____	+ 4.854 V
Ch2 100 mV Vert scale setting, 0 Div position setting, -4.5 V offset	- 4.854 V	_____	_____	- 4.746 V
Ch2 200 mV Vert scale setting, -2 Div position setting, +4.6 V offset	+ 4.725 V	_____	_____	+ 4.875 V

Table 2-3: DPO7000, DPO/DSA70000 and DPO/DSA70000B Series Test Record (cont.)

Instrument performance test	Minimum	Incoming	Outgoing	Maximum
Ch2 200 mV Vert scale setting, +2 Div position setting, -4.6 V offset	- 4.875 V	_____	_____	- 4.725 V
Ch2 500 mV Vert scale setting, -2 Div position setting, +5.0 V offset	+ 4.345 V	_____	_____	+ 4.655 V
Ch2 500 mV Vert scale setting, +2 Div position setting, -5.0 V offset	- 4.655 V	_____	_____	- 4.345 V
Ch2 1.0 V Vert scale setting, 0 Div position setting, +2.0 V offset	+ 4.745 V	_____	_____	+ 5.255 V
Ch2 1.0 V Vert scale setting, 0 Div position setting, -2.0 V offset	- 5.255 V	_____	_____	- 4.745 V
Ch3 1 mV Vert scale setting, -5 Div position setting, +0.5 V offset	+ 504.25 mV	_____	_____	+ 509.76 mV
Ch3 1 mV Vert scale setting, +5 Div position setting, -0.5 V offset	- 509.76 mV	_____	_____	- 504.25 mV
Ch3 2 mV Vert scale setting, -5 Div position setting, +0.5 V offset	+ 512.98 mV	_____	_____	+ 519.03 mV
Ch3 2 mV Vert scale setting, +5 Div position setting, -0.5 V offset	- 519.03 mV	_____	_____	- 512.98 mV
Ch3 5 mV Vert scale setting, -5 Div position setting, +0.5 V offset	+ 536.26 mV	_____	_____	+ 543.74 mV
Ch3 5 mV Vert scale setting, +5 Div position setting, -0.5 V offset	- 543.74 mV	_____	_____	- 536.26 mV
Ch3 10 mV Vert scale setting, -5 Div position setting, +0.5 V offset	+ 574.20 mV	_____	_____	+ 585.80 mV
Ch3 10 mV Vert scale setting, +5 Div position setting, -0.5 V offset	- 585.80 mV	_____	_____	- 574.20 mV
Ch3 20 mV Vert scale setting, -5 Div position setting, +0.5 V offset	+ 651.65 mV	_____	_____	+ 668.35 mV
Ch3 20 mV Vert scale setting, +5 Div position setting, -0.5 V offset	- 668.35 mV	_____	_____	- 651.65 mV
Ch3 50 mV Vert scale setting, -5 Div position setting, +0.5 V offset	+ 884.00 mV	_____	_____	+ 916.00 mV
Ch3 50 mV Vert scale setting, +5 Div position setting, -0.5 V offset	- 916.00 V	_____	_____	- 884.00 mV
Ch3 90 mV Vert scale setting, -5 Div position setting, +0.5 V offset	+ 1.194 V	_____	_____	+ 1.246 V
Ch3 90 mV Vert scale setting, +5 Div position setting, -0.5 V offset	- 1.246 V	_____	_____	- 1.194 V
Ch3 100 mV Vert scale setting, 0 Div position setting, +4.5 V offset	+ 4.746 V	_____	_____	+ 4.854 V
Ch3 100 mV Vert scale setting, 0 Div position setting, -4.5 V offset	- 4.854 V	_____	_____	- 4.746 V

Table 2-3: DPO7000, DPO/DSA70000 and DPO/DSA70000B Series Test Record (cont.)

Instrument performance test	Minimum	Incoming	Outgoing	Maximum
Ch3 200 mV Vert scale setting, -2 Div position setting, +4.6 V offset	+ 4.725 V	_____	_____	+ 4.875 V
Ch3 200 mV Vert scale setting, +2 Div position setting, -4.6 V offset	- 4.875 V	_____	_____	- 4.725 V
Ch3 500 mV Vert scale setting, -2 Div position setting, +5.0 V offset	+ 4.345 V	_____	_____	+ 4.655 V
Ch3 500 mV Vert scale setting, +2 Div position setting, -5.0 V offset	- 4.655 V	_____	_____	- 4.345 V
Ch3 1.0 V Vert scale setting, 0 Div position setting, +2.0 V offset	+ 4.745 V	_____	_____	+ 5.255 V
Ch3 1.0 V Vert scale setting, 0 Div position setting, -2.0 V offset	- 5.255 V	_____	_____	- 4.745 V
Ch4 1 mV Vert scale setting, -5 Div position setting, +0.5 V offset	+ 504.25 mV	_____	_____	+ 509.76 mV
Ch4 1 mV Vert scale setting, +5 Div position setting, -0.5 V offset	- 509.76 mV	_____	_____	- 504.25 mV
Ch4 2 mV Vert scale setting, -5 Div position setting, +0.5 V offset	+ 512.98 mV	_____	_____	+ 519.03 mV
Ch4 2 mV Vert scale setting, +5 Div position setting, -0.5 V offset	- 519.03 mV	_____	_____	- 512.98 mV
Ch4 5 mV Vert scale setting, -5 Div position setting, +0.5 V offset	+ 536.26 mV	_____	_____	+ 543.74 mV
Ch4 5 mV Vert scale setting, +5 Div position setting, -0.5 V offset	- 543.74 mV	_____	_____	- 536.26 mV
Ch4 10 mV Vert scale setting, -5 Div position setting, +0.5 V offset	+ 574.20 mV	_____	_____	+ 585.80 mV
Ch4 10 mV Vert scale setting, +5 Div position setting, -0.5 V offset	- 585.80 mV	_____	_____	- 574.20 mV
Ch4 20 mV Vert scale setting, -5 Div position setting, +0.5 V offset	+ 651.65 mV	_____	_____	+ 668.35 mV
Ch4 20 mV Vert scale setting, +5 Div position setting, -0.5 V offset	- 668.35 mV	_____	_____	- 651.65 mV
Ch4 50 mV Vert scale setting, -5 Div position setting, +0.5 V offset	+ 884.00 mV	_____	_____	+ 916.00 mV
Ch4 50 mV Vert scale setting, +5 Div position setting, -0.5 V offset	- 916.00 V	_____	_____	- 884.00 mV
Ch4 90 mV Vert scale setting, -5 Div position setting, +0.5 V offset	+ 1.194 V	_____	_____	+ 1.246 V
Ch4 90 mV Vert scale setting, +5 Div position setting, -0.5 V offset	- 1.246 V	_____	_____	- 1.194 V
Ch4 100 mV Vert scale setting, 0 Div position setting, +4.5 V offset	+ 4.746 V	_____	_____	+ 4.854 V

Table 2-3: DPO7000, DPO/DSA70000 and DPO/DSA70000B Series Test Record (cont.)

Instrument performance test	Minimum	Incoming	Outgoing	Maximum
Ch4 100 mV Vert scale setting, 0 Div position setting, -4.5 V offset	- 4.854 V	_____	_____	- 4.746 V
Ch4 200 mV Vert scale setting, -2 Div position setting, +4.6 V offset	+ 4.725 V	_____	_____	+ 4.875 V
Ch4 200 mV Vert scale setting, +2 Div position setting, -4.6 V offset	- 4.875 V	_____	_____	- 4.725 V
Ch4 500 mV Vert scale setting, -2 Div position setting, +5.0 V offset	+ 4.345 V	_____	_____	+ 4.655 V
Ch4 500 mV Vert scale setting, +2 Div position setting, -5.0 V offset	- 4.655 V	_____	_____	- 4.345 V
Ch4 1.0 V Vert scale setting, 0 Div position setting, +2.0 V offset	+ 4.745 V	_____	_____	+ 5.255 V
Ch4 1.0 V Vert scale setting, 0 Div position setting, -2.0 V offset	- 5.255 V	_____	_____	- 4.745 V
DC gain accuracy (averaged), ≥ 4 GHz B models				
Ch1 10 mV Vert scale setting, 0 Div position setting, 0 V offset	+ 74.48 mV	_____	_____	+ 77.52 mV
-5 Div position setting, +0.45 V offset	+ 74.48 mV	_____	_____	+ 77.52 mV
+5 Div position setting, -0.45 V offset	+ 74.48 mV	_____	_____	+ 77.52 mV
Ch1 20 mV Vert scale setting, 0 Div position setting, 0 V offset	+ 148.96 mV	_____	_____	+ 155.04 mV
-5 Div position setting, +0.4 V offset	+ 148.96 mV	_____	_____	+ 155.04 mV
+5 Div position setting, -0.4 V offset	+ 148.96 mV	_____	_____	+ 155.04 mV
Ch1 50 mV Vert scale setting, 0 Div position setting, 0 V offset	+ 372.40 mV	_____	_____	+ 387.60 mV
-5 Div position setting, +0.25 V offset	+ 372.40 mV	_____	_____	+ 387.60 mV
+5 Div position setting, -0.25 V offset	+ 372.40 mV	_____	_____	+ 387.60 mV
Ch1 100 mV Vert scale setting, 0 Div position setting, 0 V offset	+ 744.80 mV	_____	_____	+ 775.20 mV
-5 Div position setting, +2.0 V offset	+ 744.80 mV	_____	_____	+ 775.20 mV
+5 Div position setting, -2.0 V offset	+ 744.80 mV	_____	_____	+ 775.20 mV
Ch1 250 mV Vert scale setting, 0 Div position setting, 0 V offset	+ 1.862 V	_____	_____	+ 1.938 V
-5 Div position setting, +1.25 V offset	+ 1.862 V	_____	_____	+ 1.938 V
+5 Div position setting, -1.25 V offset	+ 1.862 V	_____	_____	+ 1.938 V
Ch1 500 mV Vert scale setting, 0 Div position setting, 0 V offset	+ 3.724 V	_____	_____	+ 3.876 V
-5 Div position setting, 0 V offset	+ 3.724 V	_____	_____	+ 3.876 V
+5 Div position setting, 0 V offset	+ 3.724 V	_____	_____	+ 3.876 V
Ch2 10 mV Vert scale setting, 0 Div position setting, 0 V offset	+ 74.48 mV	_____	_____	+ 77.52 mV
-5 Div position setting, +0.45 V offset	+ 74.48 mV	_____	_____	+ 77.52 mV
+5 Div position setting, -0.45 V offset	+ 74.48 mV	_____	_____	+ 77.52 mV

Table 2-3: DPO7000, DPO/DSA70000 and DPO/DSA70000B Series Test Record (cont.)

Instrument performance test	Minimum	Incoming	Outgoing	Maximum
Ch2 20 mV Vert scale setting, 0 Div position setting, 0 V offset	+ 148.96 mV	_____	_____	+ 155.04 mV
-5 Div position setting, +0.4 V offset	+ 148.96 mV	_____	_____	+ 155.04 mV
+5 Div position setting, -0.4 V offset	+ 148.96 mV	_____	_____	+ 155.04 mV
Ch2 50 mV Vert scale setting, 0 Div position setting, 0 V offset	+ 372.40 mV	_____	_____	+ 387.60 mV
-5 Div position setting, +0.25 V offset	+ 372.40 mV	_____	_____	+ 387.60 mV
+5 Div position setting, -0.25 V offset	+ 372.40 mV	_____	_____	+ 387.60 mV
Ch2 100 mV Vert scale setting, 0 Div position setting, 0 V offset	+ 744.80 mV	_____	_____	+ 775.20 mV
-5 Div position setting, +2.0 V offset	+ 744.80 mV	_____	_____	+ 775.20 mV
+5 Div position setting, -2.0 V offset	+ 744.80 mV	_____	_____	+ 775.20 mV
Ch2 250 mV Vert scale setting, 0 Div position setting, 0 V offset	+ 1.862 V	_____	_____	+ 1.938 V
-5 Div position setting, +1.25 V offset	+ 1.862 V	_____	_____	+ 1.938 V
+5 Div position setting, -1.25 V offset	+ 1.862 V	_____	_____	+ 1.938 V
Ch2 500 mV Vert scale setting, 0 Div position setting, 0 V offset	+ 3.724 V	_____	_____	+ 3.876 V
-5 Div position setting, 0 V offset	+ 3.724 V	_____	_____	+ 3.876 V
+5 Div position setting, 0 V offset	+ 3.724 V	_____	_____	+ 3.876 V
Ch3 10 mV Vert scale setting, 0 Div position setting, 0 V offset	+ 74.48 mV	_____	_____	+ 77.52 mV
-5 Div position setting, +0.45 V offset	+ 74.48 mV	_____	_____	+ 77.52 mV
+5 Div position setting, -0.45 V offset	+ 74.48 mV	_____	_____	+ 77.52 mV
Ch3 20 mV Vert scale setting, 0 Div position setting, 0 V offset	+ 148.96 mV	_____	_____	+ 155.04 mV
-5 Div position setting, +0.4 V offset	+ 148.96 mV	_____	_____	+ 155.04 mV
+5 Div position setting, -0.4 V offset	+ 148.96 mV	_____	_____	+ 155.04 mV
Ch3 50 mV Vert scale setting, 0 Div position setting, 0 V offset	+ 372.40 mV	_____	_____	+ 387.60 mV
-5 Div position setting, +0.25 V offset	+ 372.40 mV	_____	_____	+ 387.60 mV
+5 Div position setting, -0.25 V offset	+ 372.40 mV	_____	_____	+ 387.60 mV
Ch3 100 mV Vert scale setting, 0 Div position setting, 0 V offset	+ 744.80 mV	_____	_____	+ 775.20 mV
-5 Div position setting, +2.0 V offset	+ 744.80 mV	_____	_____	+ 775.20 mV
+5 Div position setting, -2.0 V offset	+ 744.80 mV	_____	_____	+ 775.20 mV
Ch3 250 mV Vert scale setting, 0 Div position setting, 0 V offset	+ 1.862 V	_____	_____	+ 1.938 V
-5 Div position setting, +1.25 V offset	+ 1.862 V	_____	_____	+ 1.938 V
+5 Div position setting, -1.25 V offset	+ 1.862 V	_____	_____	+ 1.938 V
Ch3 500 mV Vert scale setting, 0 Div position setting, 0 V offset	+ 3.724 V	_____	_____	+ 3.876 V
-5 Div position setting, 0 V offset	+ 3.724 V	_____	_____	+ 3.876 V
+5 Div position setting, 0 V offset	+ 3.724 V	_____	_____	+ 3.876 V

Table 2-3: DPO7000, DPO/DSA70000 and DPO/DSA70000B Series Test Record (cont.)

Instrument performance test	Minimum	Incoming	Outgoing	Maximum
Ch4 10 mV Vert scale setting, 0 Div position setting, 0 V offset	+ 74.48 mV	_____	_____	+ 77.52 mV
-5 Div position setting, +0.45 V offset	+ 74.48 mV	_____	_____	+ 77.52 mV
+5 Div position setting, -0.45 V offset	+ 74.48 mV	_____	_____	+ 77.52 mV
Ch4 20 mV Vert scale setting, 0 Div position setting, 0 V offset	+ 148.96 mV	_____	_____	+ 155.04 mV
-5 Div position setting, +0.4 V offset	+ 148.96 mV	_____	_____	+ 155.04 mV
+5 Div position setting, -0.4 V offset	+ 148.96 mV	_____	_____	+ 155.04 mV
Ch4 50 mV Vert scale setting, 0 Div position setting, 0 V offset	+ 372.40 mV	_____	_____	+ 387.60 mV
-5 Div position setting, +0.25 V offset	+ 372.40 mV	_____	_____	+ 387.60 mV
+5 Div position setting, -0.25 V offset	+ 372.40 mV	_____	_____	+ 387.60 mV
Ch4 100 mV Vert scale setting, 0 Div position setting, 0 V offset	+ 744.80 mV	_____	_____	+ 775.20 mV
-5 Div position setting, +2.0 V offset	+ 744.80 mV	_____	_____	+ 775.20 mV
+5 Div position setting, -2.0 V offset	+ 744.80 mV	_____	_____	+ 775.20 mV
Ch4 250 mV Vert scale setting, 0 Div position setting, 0 V offset	+ 1.862 V	_____	_____	+ 1.938 V
-5 Div position setting, +1.25 V offset	+ 1.862 V	_____	_____	+ 1.938 V
+5 Div position setting, -1.25 V offset	+ 1.862 V	_____	_____	+ 1.938 V
Ch4 500 mV Vert scale setting, 0 Div position setting, 0 V offset	+ 3.724 V	_____	_____	+ 3.876 V
-5 Div position setting, 0 V offset	+ 3.724 V	_____	_____	+ 3.876 V
+5 Div position setting, 0 V offset	+ 3.724 V	_____	_____	+ 3.876 V
DC gain accuracy (averaged), ≥ 4 GHz non-B models				
Ch1 10 mV Vert scale setting, 0 Div position setting, 0 V offset	+ 74.48 mV	_____	_____	+ 77.52 mV
-5 Div position setting, +0.45 V offset	+ 74.48 mV	_____	_____	+ 77.52 mV
+5 Div position setting, -0.45 V offset	+ 74.48 mV	_____	_____	+ 77.52 mV
Ch1 20 mV Vert scale setting, 0 Div position setting, 0 V offset	+ 148.96 mV	_____	_____	+ 155.04 mV
-5 Div position setting, +0.4 V offset	+ 148.96 mV	_____	_____	+ 155.04 mV
+5 Div position setting, -0.4 V offset	+ 148.96 mV	_____	_____	+ 155.04 mV
Ch1 50 mV Vert scale setting, 0 Div position setting, 0 V offset	+ 372.40 mV	_____	_____	+ 387.60 mV
-5 Div position setting, +0.25 V offset	+ 372.40 mV	_____	_____	+ 387.60 mV
+5 Div position setting, -0.25 V offset	+ 372.40 mV	_____	_____	+ 387.60 mV
Ch1 100 mV Vert scale setting, 0 Div position setting, 0 V offset	+ 744.80 mV	_____	_____	+ 775.20 mV
-5 Div position setting, +4.5 V offset	+ 744.80 mV	_____	_____	+ 775.20 mV
+5 Div position setting, -4.5 V offset	+ 744.80 mV	_____	_____	+ 775.20 mV
Ch1 200 mV Vert scale setting, 0 Div position setting, 0 V offset	+ 1.49 V	_____	_____	+ 1.550 V
-5 Div position setting, +4.0 V offset	+ 1.235 V	_____	_____	+ 1.285 V
+5 Div position setting, -4.0 V offset	+ 1.235 V	_____	_____	+ 1.285 V

Table 2-3: DPO7000, DPO/DSA70000 and DPO/DSA70000B Series Test Record (cont.)

Instrument performance test	Minimum	Incoming	Outgoing	Maximum
Ch1 500 mV Vert scale setting, 0 Div position setting, 0 V offset	+ 3.724 V	_____	_____	+ 3.876 V
-5 Div position setting, +2.5 V offset	+ 2.352 V	_____	_____	+ 2.448 V
+5 Div position setting, -2.5 V offset	+ 2.352 V	_____	_____	+ 2.448 V
Ch1 1.0 V Vert scale setting, 0 Div position setting, 0 V offset	+ 7.448 V	_____	_____	+ 7.752 V
-5 Div position setting, 0 V offset	+ 3.871 V	_____	_____	+ 4.029 V
+5 Div position setting, 0 V offset	+ 3.871 V	_____	_____	+ 4.029 V
Ch2 10 mV Vert scale setting, 0 Div position setting, 0 V offset	+ 74.48 mV	_____	_____	+ 77.52 mV
-5 Div position setting, +0.45 V offset	+ 74.48 mV	_____	_____	+ 77.52 mV
+5 Div position setting, -0.45 V offset	+ 74.48 mV	_____	_____	+ 77.52 mV
Ch2 20 mV Vert scale setting, 0 Div position setting, 0 V offset	+ 148.96 mV	_____	_____	+ 155.04 mV
-5 Div position setting, +0.4 V offset	+ 148.96 mV	_____	_____	+ 155.04 mV
+5 Div position setting, -0.4 V offset	+ 148.96 mV	_____	_____	+ 155.04 mV
Ch2 50 mV Vert scale setting, 0 Div position setting, 0 V offset	+ 372.40 mV	_____	_____	+ 387.60 mV
-5 Div position setting, +0.25 V offset	+ 372.40 mV	_____	_____	+ 387.60 mV
+5 Div position setting, -0.25 V offset	+ 372.40 mV	_____	_____	+ 387.60 mV
Ch2 100 mV Vert scale setting, 0 Div position setting, 0 V offset	+ 744.80 mV	_____	_____	+ 775.20 mV
-5 Div position setting, +4.5 V offset	+ 744.80 mV	_____	_____	+ 775.20 mV
+5 Div position setting, -4.5 V offset	+ 744.80 mV	_____	_____	+ 775.20 mV
Ch2 200 mV Vert scale setting, 0 Div position setting, 0 V offset	+ 1.49 V	_____	_____	+ 1.550 V
-5 Div position setting, +4.0 V offset	+ 1.235 V	_____	_____	+ 1.285 V
+5 Div position setting, -4.0 V offset	+ 1.235 V	_____	_____	+ 1.285 V
Ch2 500 mV Vert scale setting, 0 Div position setting, 0 V offset	+ 3.724 V	_____	_____	+ 3.876 V
-5 Div position setting, +2.5 V offset	+ 2.352 V	_____	_____	+ 2.448 V
+5 Div position setting, -2.5 V offset	+ 2.352 V	_____	_____	+ 2.448 V
Ch2 1.0 V Vert scale setting, 0 Div position setting, 0 V offset	+ 7.448 V	_____	_____	+ 7.752 V
-5 Div position setting, 0 V offset	+ 3.871 V	_____	_____	+ 4.029 V
+5 Div position setting, 0 V offset	+ 3.871 V	_____	_____	+ 4.029 V
Ch3 10 mV Vert scale setting, 0 Div position setting, 0 V offset	+ 74.48 mV	_____	_____	+ 77.52 mV
-5 Div position setting, +0.45 V offset	+ 74.48 mV	_____	_____	+ 77.52 mV
+5 Div position setting, -0.45 V offset	+ 74.48 mV	_____	_____	+ 77.52 mV
Ch3 20 mV Vert scale setting, 0 Div position setting, 0 V offset	+ 148.96 mV	_____	_____	+ 155.04 mV
-5 Div position setting, +0.4 V offset	+ 148.96 mV	_____	_____	+ 155.04 mV
+5 Div position setting, -0.4 V offset	+ 148.96 mV	_____	_____	+ 155.04 mV

Table 2-3: DPO7000, DPO/DSA70000 and DPO/DSA70000B Series Test Record (cont.)

Instrument performance test	Minimum	Incoming	Outgoing	Maximum
Ch3 50 mV Vert scale setting, 0 Div position setting, 0 V offset	+ 372.40 mV	_____	_____	+ 387.60 mV
-5 Div position setting, +0.25 V offset	+ 372.40 mV	_____	_____	+ 387.60 mV
+5 Div position setting, -0.25 V offset	+ 372.40 mV	_____	_____	+ 387.60 mV
Ch3 100 mV Vert scale setting, 0 Div position setting, 0 V offset	+ 744.80 mV	_____	_____	+ 775.20 mV
-5 Div position setting, +4.5 V offset	+ 744.80 mV	_____	_____	+ 775.20 mV
+5 Div position setting, -4.5 V offset	+ 744.80 mV	_____	_____	+ 775.20 mV
Ch3 200 mV Vert scale setting, 0 Div position setting, 0 V offset	+ 1.49 V	_____	_____	+ 1.550 V
-5 Div position setting, +4.0 V offset	+ 1.235 V	_____	_____	+ 1.285 V
+5 Div position setting, -4.0 V offset	+ 1.235 V	_____	_____	+ 1.285 V
Ch3 500 mV Vert scale setting, 0 Div position setting, 0 V offset	+ 3.724 V	_____	_____	+ 3.876 V
-5 Div position setting, +2.5 V offset	+ 2.352 V	_____	_____	+ 2.448 V
+5 Div position setting, -2.5 V offset	+ 2.352 V	_____	_____	+ 2.448 V
Ch3 1.0 V Vert scale setting, 0 Div position setting, 0 V offset	+ 7.448 V	_____	_____	+ 7.752 V
-5 Div position setting, 0 V offset	+ 3.871 V	_____	_____	+ 4.029 V
+5 Div position setting, 0 V offset	+ 3.871 V	_____	_____	+ 4.029 V
Ch4 10 mV Vert scale setting, 0 Div position setting, 0 V offset	+ 74.48 mV	_____	_____	+ 77.52 mV
-5 Div position setting, +0.45 V offset	+ 74.48 mV	_____	_____	+ 77.52 mV
+5 Div position setting, -0.45 V offset	+ 74.48 mV	_____	_____	+ 77.52 mV
Ch4 20 mV Vert scale setting, 0 Div position setting, 0 V offset	+ 148.96 mV	_____	_____	+ 155.04 mV
-5 Div position setting, +0.4 V offset	+ 148.96 mV	_____	_____	+ 155.04 mV
+5 Div position setting, -0.4 V offset	+ 148.96 mV	_____	_____	+ 155.04 mV
Ch4 50 mV Vert scale setting, 0 Div position setting, 0 V offset	+ 372.40 mV	_____	_____	+ 387.60 mV
-5 Div position setting, +0.25 V offset	+ 372.40 mV	_____	_____	+ 387.60 mV
+5 Div position setting, -0.25 V offset	+ 372.40 mV	_____	_____	+ 387.60 mV
Ch4 100 mV Vert scale setting, 0 Div position setting, 0 V offset	+ 744.80 mV	_____	_____	+ 775.20 mV
-5 Div position setting, +4.5 V offset	+ 744.80 mV	_____	_____	+ 775.20 mV
+5 Div position setting, -4.5 V offset	+ 744.80 mV	_____	_____	+ 775.20 mV
Ch4 200 mV Vert scale setting, 0 Div position setting, 0 V offset	+ 1.49 V	_____	_____	+ 1.550 V
-5 Div position setting, +4.0 V offset	+ 1.235 V	_____	_____	+ 1.285 V
+5 Div position setting, -4.0 V offset	+ 1.235 V	_____	_____	+ 1.285 V
Ch4 500 mV Vert scale setting, 0 Div position setting, 0 V offset	+ 3.724 V	_____	_____	+ 3.876 V
-5 Div position setting, +2.5 V offset	+ 2.352 V	_____	_____	+ 2.448 V
+5 Div position setting, -2.5 V offset	+ 2.352 V	_____	_____	+ 2.448 V

Table 2-3: DPO7000, DPO/DSA70000 and DPO/DSA70000B Series Test Record (cont.)

Instrument performance test	Minimum	Incoming	Outgoing	Maximum
Ch4 1.0 V Vert scale setting, 0 Div position setting, 0 V offset	+ 7.448 V	_____	_____	+ 7.752 V
-5 Div position setting, 0 V offset	+ 3.871 V	_____	_____	+ 4.029 V
+5 Div position setting, 0 V offset	+ 3.871 V	_____	_____	+ 4.029 V
Offset accuracy, \geq 4 GHz B models				
Ch1 10 mV Vert scale setting, -5 Div position setting, +0.45 V offset	+ 495.75 mV	_____	_____	+ 504.25 mV
5 Div position setting, -0.45 V offset	- 504.25 mV	_____	_____	- 495.75 mV
Ch1 20 mV Vert scale setting, -5 Div position setting, +0.4 V offset	+ 494.75 mV	_____	_____	+ 505.25 mV
5 Div position setting, -0.4 V offset	- 505.25 mV	_____	_____	- 494.75 mV
Ch1 50 mV Vert scale setting, -5 Div position setting, +0.25 V offset	+ 491.75 mV	_____	_____	+ 508.25 mV
5 Div position setting, -0.25 V offset	- 508.25 mV	_____	_____	- 491.75 mV
Ch1 100 mV Vert scale setting, -5 Div position setting, +2.0 V offset	+ 2.406 V	_____	_____	+ 2.594 V
5 Div position setting, -2.0 V offset	- 2.594 V	_____	_____	- 2.406 V
Ch1 250 mV Vert scale setting, -5 Div position setting, +1.25 V offset	+ 2.391 V	_____	_____	+ 2.609 V
5 Div position setting, -1.25 V offset	- 2.609 V	_____	_____	- 2.391 V
Ch1 500 mV Vert scale setting, -5 Div position setting, 0 V offset	+ 2.366 V	_____	_____	+ 2.634 V
5 Div position setting, 0 V offset	- 2.634 V	_____	_____	- 2.366 V
Ch2 10 mV Vert scale setting, -5 Div position setting, +0.45 V offset	+ 495.75 mV	_____	_____	+ 504.25 mV
5 Div position setting, -0.45 V offset	- 504.25 mV	_____	_____	- 495.75 mV
Ch2 20 mV Vert scale setting, -5 Div position setting, +0.4 V offset	+ 494.75 mV	_____	_____	+ 505.25 mV
5 Div position setting, -0.4 V offset	- 505.25 mV	_____	_____	- 494.75 mV
Ch2 50 mV Vert scale setting, -5 Div position setting, +0.25 V offset	+ 491.75 mV	_____	_____	+ 508.25 mV
5 Div position setting, -0.25 V offset	- 508.25 mV	_____	_____	- 491.75 mV
Ch2 100 mV Vert scale setting, -5 Div position setting, +2.0 V offset	+ 2.406 V	_____	_____	+ 2.594 V
5 Div position setting, -2.0 V offset	- 2.594 V	_____	_____	- 2.406 V
Ch2 250 mV Vert scale setting, -5 Div position setting, +1.25 V offset	+ 2.391 V	_____	_____	+ 2.609 V
5 Div position setting, -1.25 V offset	- 2.609 V	_____	_____	- 2.391 V
Ch2 500 mV Vert scale setting, -5 Div position setting, 0 V offset	+ 2.366 V	_____	_____	+ 2.634 V
5 Div position setting, 0 V offset	- 2.634 V	_____	_____	- 2.366 V
Ch3 10 mV Vert scale setting, -5 Div position setting, +0.45 V offset	+ 495.75 mV	_____	_____	+ 504.25 mV
5 Div position setting, -0.45 V offset	- 504.25 mV	_____	_____	- 495.75 mV

Table 2-3: DPO7000, DPO/DSA70000 and DPO/DSA70000B Series Test Record (cont.)

Instrument performance test	Minimum	Incoming	Outgoing	Maximum
Ch3 20 mV Vert scale setting, -5 Div position setting, +0.4 V offset	+ 494.75 mV	_____	_____	+ 505.25 mV
5 Div position setting, -0.4 V offset	- 505.25 mV	_____	_____	- 494.75 mV
Ch3 50 mV Vert scale setting, -5 Div position setting, +0.25 V offset	+ 491.75 mV	_____	_____	+ 508.25 mV
5 Div position setting, -0.25 V offset	- 508.25 mV	_____	_____	- 491.75 mV
Ch3 100 mV Vert scale setting, -5 Div position setting, +2.0 V offset	+ 2.406 V	_____	_____	+ 2.594 V
5 Div position setting, -2.0 V offset	- 2.594 V	_____	_____	- 2.406 V
Ch3 250 mV Vert scale setting, -5 Div position setting, +1.25 V offset	+ 2.391 V	_____	_____	+ 2.609 V
5 Div position setting, -1.25 V offset	- 2.609 V	_____	_____	- 2.391 V
Ch3 500 mV Vert scale setting, -5 Div position setting, 0 V offset	+ 2.366 V	_____	_____	+ 2.634 V
5 Div position setting, 0 V offset	- 2.634 V	_____	_____	- 2.366 V
Ch4 10 mV Vert scale setting, -5 Div position setting, +0.45 V offset	+ 495.75 mV	_____	_____	+ 504.25 mV
5 Div position setting, -0.45 V offset	- 504.25 mV	_____	_____	- 495.75 mV
Ch4 20 mV Vert scale setting, -5 Div position setting, +0.4 V offset	+ 494.75 mV	_____	_____	+ 505.25 mV
5 Div position setting, -0.4 V offset	- 505.25 mV	_____	_____	- 494.75 mV
Ch4 50 mV Vert scale setting, -5 Div position setting, +0.25 V offset	+ 491.75 mV	_____	_____	+ 508.25 mV
5 Div position setting, -0.25 V offset	- 508.25 mV	_____	_____	- 491.75 mV
Ch4 100 mV Vert scale setting, -5 Div position setting, +2.0 V offset	+ 2.406 V	_____	_____	+ 2.594 V
5 Div position setting, -2.0 V offset	- 2.594 V	_____	_____	- 2.406 V
Ch4 250 mV Vert scale setting, -5 Div position setting, +1.25 V offset	+ 2.391 V	_____	_____	+ 2.609 V
5 Div position setting, -1.25 V offset	- 2.609 V	_____	_____	- 2.391 V
Ch4 500 mV Vert scale setting, -5 Div position setting, 0 V offset	+ 2.366 V	_____	_____	+ 2.634 V
5 Div position setting, 0 V offset	- 2.634 V	_____	_____	- 2.366 V
Offset accuracy, ≥ 4 GHz non-B models				
Ch1 10 mV Vert scale setting, -5 Div position setting, +0.45 V offset	+ 495.75 mV	_____	_____	+ 504.25 mV
5 Div position setting, -0.45 V offset	- 504.25 mV	_____	_____	- 495.75 mV
Ch1 20 mV Vert scale setting, -5 Div position setting, +0.4 V offset	+ 494.75 mV	_____	_____	+ 505.25 mV
5 Div position setting, -0.4 V offset	- 505.25 mV	_____	_____	- 494.75 mV
Ch1 50 mV Vert scale setting, -5 Div position setting, +0.25 V offset	+ 491.75 mV	_____	_____	+ 508.25 mV
5 Div position setting, -0.25 V offset	- 508.25 mV	_____	_____	- 491.75 mV

Table 2-3: DPO7000, DPO/DSA70000 and DPO/DSA70000B Series Test Record (cont.)

Instrument performance test	Minimum	Incoming	Outgoing	Maximum
Ch1 100 mV Vert scale setting, -5 Div position setting, +4.5 V offset	+ 4.958 V	_____	_____	+ 5.043 V
5 Div position setting, -4.5 V offset	- 5.043 V	_____	_____	- 4.958 V
Ch1 200 mV Vert scale setting, -5 Div position setting, +2 V offset	+ 2.955 V	_____	_____	+ 3.046 V
5 Div position setting, -2 V offset	- 3.046 V	_____	_____	- 2.955 V
Ch1 500 mV Vert scale setting, -5 Div position setting, +2.5 V offset	+ 4.918 V	_____	_____	+ 5.083 V
5 Div position setting, -2.5 V offset	- 5.083 V	_____	_____	- 4.918 V
Ch1 1.0 V Vert scale setting, -5 Div position setting, 0 V offset	+ 2.368 V	_____	_____	+ 2.633 V
5 Div position setting, 0 V offset	- 2.633 V	_____	_____	- 2.368 V
Ch2 10 mV Vert scale setting, -5 Div position setting, +0.45 V offset	+ 495.75 mV	_____	_____	+ 504.25 mV
5 Div position setting, -0.45 V offset	- 504.25 mV	_____	_____	- 495.75 mV
Ch2 20 mV Vert scale setting, -5 Div position setting, +0.4 V offset	+ 494.75 mV	_____	_____	+ 505.25 mV
5 Div position setting, -0.4 V offset	- 505.25 mV	_____	_____	- 494.75 mV
Ch2 50 mV Vert scale setting, -5 Div position setting, +0.25 V offset	+ 491.75 mV	_____	_____	+ 508.25 mV
5 Div position setting, -0.25 V offset	- 508.25 mV	_____	_____	- 491.75 mV
Ch2 100 mV Vert scale setting, -5 Div position setting, +4.5 V offset	+ 4.958 V	_____	_____	+ 5.043 V
5 Div position setting, -4.5 V offset	- 5.043 V	_____	_____	- 4.958 V
Ch2 200 mV Vert scale setting, -5 Div position setting, +2 V offset	+ 2.955 V	_____	_____	+ 3.046 V
5 Div position setting, -2 V offset	- 3.046 V	_____	_____	- 2.955 V
Ch2 500 mV Vert scale setting, -5 Div position setting, +2.5 V offset	+ 4.918 V	_____	_____	+ 5.083 V
5 Div position setting, -2.5 V offset	- 5.083 V	_____	_____	- 4.918 V
Ch2 1.0 V Vert scale setting, -5 Div position setting, 0 V offset	+ 2.368 V	_____	_____	+ 2.633 V
5 Div position setting, 0 V offset	- 2.633 V	_____	_____	- 2.368 V
Ch3 10 mV Vert scale setting, -5 Div position setting, +0.45 V offset	+ 495.75 mV	_____	_____	+ 504.25 mV
5 Div position setting, -0.45 V offset	- 504.25 mV	_____	_____	- 495.75 mV
Ch3 20 mV Vert scale setting, -5 Div position setting, +0.4 V offset	+ 494.75 mV	_____	_____	+ 505.25 mV
5 Div position setting, -0.4 V offset	- 505.25 mV	_____	_____	- 494.75 mV
Ch3 50 mV Vert scale setting, -5 Div position setting, +0.25 V offset	+ 491.75 mV	_____	_____	+ 508.25 mV
5 Div position setting, -0.25 V offset	- 508.25 mV	_____	_____	- 491.75 mV

Table 2-3: DPO7000, DPO/DSA70000 and DPO/DSA70000B Series Test Record (cont.)

Instrument performance test	Minimum	Incoming	Outgoing	Maximum
Ch3 100 mV Vert scale setting, -5 Div position setting, +4.5 V offset	+ 4.958 V	_____	_____	+ 5.043 V
5 Div position setting, -4.5 V offset	- 5.043 V	_____	_____	- 4.958 V
Ch3 200 mV Vert scale setting, -5 Div position setting, +2 V offset	+ 2.955 V	_____	_____	+ 3.046 V
5 Div position setting, -2 V offset	- 3.046 V	_____	_____	- 2.955 V
Ch3 500 mV Vert scale setting, -5 Div position setting, +2.5 V offset	+ 4.918 V	_____	_____	+ 5.083 V
5 Div position setting, -2.5 V offset	- 5.083 V	_____	_____	- 4.918 V
Ch3 1.0 V Vert scale setting, -5 Div position setting, 0 V offset	+ 2.368 V	_____	_____	+ 2.633 V
5 Div position setting, 0 V offset	- 2.633 V	_____	_____	- 2.368 V
Ch4 10 mV Vert scale setting, -5 Div position setting, +0.45 V offset	+ 495.75 mV	_____	_____	+ 504.25 mV
5 Div position setting, -0.45 V offset	- 504.25 mV	_____	_____	- 495.75 mV
Ch4 20 mV Vert scale setting, -5 Div position setting, +0.4 V offset	+ 494.75 mV	_____	_____	+ 505.25 mV
5 Div position setting, -0.4 V offset	- 505.25 mV	_____	_____	- 494.75 mV
Ch4 50 mV Vert scale setting, -5 Div position setting, +0.25 V offset	+ 491.75 mV	_____	_____	+ 508.25 mV
5 Div position setting, -0.25 V offset	- 508.25 mV	_____	_____	- 491.75 mV
Ch4 100 mV Vert scale setting, -5 Div position setting, +4.5 V offset	+ 4.958 V	_____	_____	+ 5.043 V
5 Div position setting, -4.5 V offset	- 5.043 V	_____	_____	- 4.958 V
Ch4 200 mV Vert scale setting, -5 Div position setting, +2 V offset	+ 2.955 V	_____	_____	+ 3.046 V
5 Div position setting, -2 V offset	- 3.046 V	_____	_____	- 2.955 V
Ch4 500 mV Vert scale setting, -5 Div position setting, +2.5 V offset	+ 4.918 V	_____	_____	+ 5.083 V
5 Div position setting, -2.5 V offset	- 5.083 V	_____	_____	- 4.918 V
Ch4 1.0 V Vert scale setting, -5 Div position setting, 0 V offset	+ 2.368 V	_____	_____	+ 2.633 V
5 Div position setting, 0 V offset	- 2.633 V	_____	_____	- 2.368 V

Table 2-3: DPO7000, DPO/DSA70000 and DPO/DSA70000B Series Test Record (cont.)

Instrument performance test	Minimum	Incoming	Outgoing	Maximum
Analog bandwidth				
≥ 4 GHz B models				
Ch1				
250 mV	848 mV	_____	_____	N/A
100 mV	424 mV	_____	_____	N/A
50 mV	212 mV	_____	_____	N/A
20 mV	84.8 mV	_____	_____	N/A
10 mV	42.4 mV	_____	_____	N/A
Ch2				
250 mV	848 V	_____	_____	N/A
100 mV	424 mV	_____	_____	N/A
50 mV	212 mV	_____	_____	N/A
20 mV	84.8 mV	_____	_____	N/A
10 mV	42.4 mV	_____	_____	N/A
Ch3				
250 mV	848 V	_____	_____	N/A
100 mV	424 mV	_____	_____	N/A
50 mV	212 mV	_____	_____	N/A
20 mV	84.8 mV	_____	_____	N/A
10 mV	42.4 mV	_____	_____	N/A
Ch4				
250 mV	848 V	_____	_____	N/A
100 mV	424 mV	_____	_____	N/A
50 mV	212 mV	_____	_____	N/A
20 mV	84.8 mV	_____	_____	N/A
10 mV	42.4 mV	_____	_____	N/A
Non-B models				
Ch1				
1 V	3.535 V	_____	_____	N/A
500 mV	2.12 V	_____	_____	N/A
200 mV	848 mV	_____	_____	N/A
100 mV	424 mV	_____	_____	N/A
50 mV	212 mV	_____	_____	N/A
20 mV	84.8 mV	_____	_____	N/A
10 mV	42.4 mV	_____	_____	N/A
< 4 GHz models: 5 mV	21.2 mV	_____	_____	N/A
Ch2				
1 V	3.535 V	_____	_____	N/A
500 mV	2.12 V	_____	_____	N/A
200 mV	848 V	_____	_____	N/A
100 mV	424 mV	_____	_____	N/A
50 mV	212 mV	_____	_____	N/A
20 mV	84.8 mV	_____	_____	N/A
10 mV	42.4 mV	_____	_____	N/A
< 4 GHz models: 5 mV	21.2 mV	_____	_____	N/A

Table 2-3: DPO7000, DPO/DSA70000 and DPO/DSA70000B Series Test Record (cont.)

Instrument performance test	Minimum	Incoming	Outgoing	Maximum
Ch3				
1 V	3.535 V	_____	_____	N/A
500 mV	2.12 V	_____	_____	N/A
200 mV	848 V	_____	_____	N/A
100 mV	424 mV	_____	_____	N/A
50 mV	212 mV	_____	_____	N/A
20 mV	84.8 mV	_____	_____	N/A
10 mV	42.4 mV	_____	_____	N/A
< 4 GHz models: 5 mV	21.2 mV	_____	_____	N/A
Ch4				
1 V	3.535 V	_____	_____	N/A
500 mV	2.12 V	_____	_____	N/A
200 mV	848 V	_____	_____	N/A
100 mV	424 mV	_____	_____	N/A
50 mV	212 mV	_____	_____	N/A
20 mV	84.8 mV	_____	_____	N/A
10 mV	42.4 mV	_____	_____	N/A
< 4 GHz models: 5 mV	21.2 mV	_____	_____	N/A
Input resistance, ≥ 4 GHz B models				
Ch1 10 mV	49.0 Ω	_____	_____	51.0 Ω
Ch1 100 mV	47.8 Ω	_____	_____	52.2 Ω
Ch2 10 mV	49.0 Ω	_____	_____	51.0 Ω
Ch2 100 mV	47.8 Ω	_____	_____	52.2 Ω
Ch3 10 mV	49.0 Ω	_____	_____	51.0 Ω
Ch3 100 mV	47.8 Ω	_____	_____	52.2 Ω
Ch4 10 mV	49.0 Ω	_____	_____	51.0 Ω
Ch4 100 mV	47.8 Ω	_____	_____	52.2 Ω
Input resistance, ≥ 4 GHz non-B models				
Ch1 10 mV	49.0 Ω	_____	_____	51.0 Ω
Ch1 100 mV	49.0 Ω	_____	_____	51.0 Ω
Ch2 10 mV	49.0 Ω	_____	_____	51.0 Ω
Ch2 100 mV	49.0 Ω	_____	_____	51.0 Ω
Ch3 10 mV	49.0 Ω	_____	_____	51.0 Ω
Ch3 100 mV	49.0 Ω	_____	_____	51.0 Ω
Ch4 10 mV	49.0 Ω	_____	_____	51.0 Ω
Ch4 100 mV	49.0 Ω	_____	_____	51.0 Ω

Table 2-3: DPO7000, DPO/DSA70000 and DPO/DSA70000B Series Test Record (cont.)

Instrument performance test	Minimum	Incoming	Outgoing	Maximum
Time base system				
Long term sample rate, delay time, and internal reference accuracy				
10 MHz, < 4 GHz models	9999.965 kHz	_____	_____	10000.035 kHz
10 MHz, ≥ 4 GHz models	9999.975 kHz	_____	_____	10000.025 kHz
External reference				
10 MHz	Pass/Fail	_____	_____	Pass/Fail
100 MHz, ≥ 4 GHz models	Pass/Fail	_____	_____	Pass/Fail
Delta time measurement, < 4 GHz models	N/A	_____	_____	≤ 6.0 ps
DPO7054 only:	N/A	_____	_____	≤ 12.0 ps
Delta time measurement ≥ 4 GHz B models	Pass/Fail	_____	_____	Pass/Fail
Trigger system accuracy				
Time accuracy for time qualified triggers, < 4 GHz models,				
time range < 1 ms				
Lower Limit	3.5 ns	_____	_____	6.5 ns
Upper Limit	3.5 ns	_____	_____	6.5 ns
time range ≥ 1 μs				
Lower Limit	1.9 μs	_____	_____	2.1 μs
Upper Limit	1.9 μs	_____	_____	2.1 μs
Time accuracy for time qualified triggers, ≥ 4 GHz models,				
time range < 1 ms				
Lower Limit	4.77 ns	_____	_____	5.23 ns
Upper Limit	4.77 ns	_____	_____	5.23 ns
time range ≥ 1 μs				
Lower Limit	1.9 μs	_____	_____	2.1 μs
Upper Limit	1.9 μs	_____	_____	2.1 μs
Ch1 trigger sensitivity, 50 MHz	Pass/Fail	_____	_____	Pass/Fail
Ch1 delayed trigger sensitivity ≥ 4 GHz models: 50 MHz	Pass/Fail	_____	_____	Pass/Fail
AUX trigger input sensitivity, 50 MHz	Pass/Fail	_____	_____	Pass/Fail
Ch1 trigger sensitivity				
< 4 GHz models:	Pass/Fail	_____	_____	Pass/Fail
≥ 4 GHz models: 4 GHz	Pass/Fail	_____	_____	Pass/Fail
≥ 4 GHz models: 6 GHz	Pass/Fail	_____	_____	Pass/Fail
≥ 4 GHz models: 8 GHz	Pass/Fail	_____	_____	Pass/Fail
≥ 4 GHz models: 11 GHz	Pass/Fail	_____	_____	Pass/Fail
Ch1 B trigger sensitivity				
≥ 4 GHz models: 4 GHz	Pass/Fail	_____	_____	Pass/Fail
≥ 4 GHz models: 6 GHz	Pass/Fail	_____	_____	Pass/Fail
≥ 4 GHz models: 8 GHz	Pass/Fail	_____	_____	Pass/Fail
≥ 4 GHz models: 9 GHz	Pass/Fail	_____	_____	Pass/Fail

Table 2-3: DPO7000, DPO/DSA70000 and DPO/DSA70000B Series Test Record (cont.)

Instrument performance test	Minimum	Incoming	Outgoing	Maximum
Ch1 AUX trigger input				
< 4 GHz models: 250 MHz	Pass/Fail	_____	_____	Pass/Fail
≥ 4 GHz models: 1 GHz	Pass/Fail	_____	_____	Pass/Fail
Aux trigger out				
Vout Hi	1.0 V	_____	_____	
Vout Lo		_____	_____	0.25 V
Probe compensation output signal Voltage (difference)				
< 4 GHz models	985 mV	_____	_____	1015 mV
≥ 4 GHz models	352 mV	_____	_____	528 mV
Serial trigger (≥ 4 GHz models with Option PTH or < 4 GHz models with Option PTM only)				
Baud rate limits				
Serial word recognizer				
Signal path 0, Pattern matching 1				
Trigger 1 UI before 0	Pass	_____	_____	N/A
Trigger on 0	Pass	_____	_____	N/A
Trigger 1 UI after 0	Pass	_____	_____	N/A
Signal path 1, Pattern matching 1				
Trigger 1 UI before 1	Pass	_____	_____	N/A
Trigger on 1	Pass	_____	_____	N/A
Trigger 1 UI after 1	Pass	_____	_____	N/A
Clock recovery frequency range	Pass	_____	_____	N/A

Signal Acquisition System Checks

These procedures check those characteristics that relate to the signal-acquisition system and are listed as checked under *Warranted Characteristics* in *Specifications*. (See Table 2-2.) for test equipment specifications.

Check DC Voltage Measurement Accuracy

Equipment Required

One DC calibration generator (Item 6)
One SMA male-to-BNC female adapter (Item 19)

Prerequisites

The instrument must meet the prerequisites.
(See page 2-13, *Prerequisites*.)



WARNING. The generator is capable of outputting dangerous voltages. Be sure to set the DC calibration generator to off or 0 volts before connecting, disconnecting, and/or moving the test hookup during the performance of this procedure.

1. Install the test hookup and preset the instrument controls:
 - a. Hook up the test-signal source:
 - Set the output of a DC calibration generator to off or 0 volts. Set the DC impedance of the generator to 50 Ω .
 - Connect the output of a DC calibration generator. (See Figure 2-20.)
 - b. Initialize the instrument: Press **DEFAULT SETUP**.
 - c. Modify the default settings:
 - From the button bar, touch **Horiz/Acq** and select the **Acquisition** tab.
 - Touch **Average** and set the number of averages to **16**.
 - < 4 GHz models: Touch **Vertical**, select **Vertical Setup**, and then touch Termination **50 Ω** .

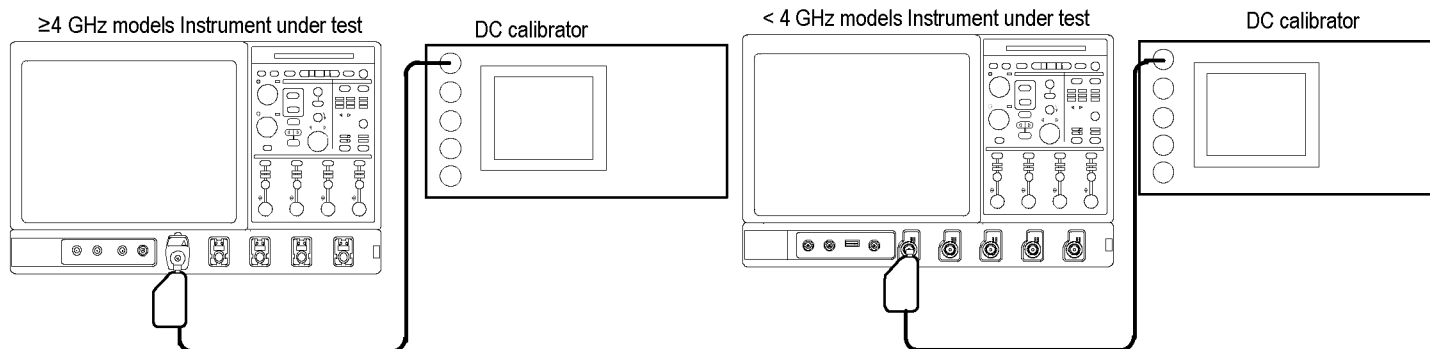


Figure 2-7: Initial test hookup

2. *Confirm input channels are within limits for DC accuracy at maximum offset and position: Do the following substeps - test Ch 1 first, skipping substep a of this step since Ch 1 is already selected from step 1.*
 - a. *Select an unchecked channel:*
 - From the button bar, touch **Measure** and then **Clear All** to remove the previous measurement.
 - Press the Vertical button of the channel just confirmed to remove the channel from the display.
 - Press the front-panel Vertical button that corresponds to the channel you are to confirm.
 - < 4 GHz models: Touch **Vertical**, select **Vertical Setup**, and then touch Termination **50 Ω**.
 - Set the generator output to 0 V.
 - Move the test hookup to the channel you selected.
 - b. *Turn on the measurement Mean for the channel:*
 - From the button bar, touch **Measure** and select the **Ampl** tab, **More**, and then touch **Mean** to measure the mean of the current channel.
 - Press the **X** (Close) button.

NOTE. *When setting the Fluke generator to output >5 V, use the following procedure:*

Press the Aux button

Press the fourth soft key down (Selects the pulse with an exclamation point)

Set the amplitude to 5.3 or 5.5 V

Press the ->| key to select the pulse energy

Set the energy to 50J, and press the Output On key

Press the Trig Pulse soft key to trigger the pulse (this will generate a pulse with 25 seconds duration).

Use the normal DC output for the 1 V, 3 V, and 5 V generator settings.

NOTE. *If any of the voltages supplied by your generator are not calibrated, verify those generator voltages using a digital multimeter, item 27.*

- c. *Set the vertical scale:* Set the vertical **Scale** to one of the settings listed in the following table that is not yet checked, starting with the first setting listed.

Table 2-4: DC Voltage measurement accuracy

Scale setting	Position setting (Divs)	Offset setting ¹	Generator setting	Accuracy limits
≥ 4 GHz B models				
10 mV	-5	+0.45 V	+530 mV	+524.75 mV to +535.25 mV
	+5	-0.45 V	-530 mV	-535.25 mV to -524.75 mV
20 mV	-5	+0.4 V	+560 mV	+552.75 mV to +567.25 mV
	+5	-0.4 V	-560 mV	-567.25 mV to -552.75 mV
50 mV	-5	+0.25 V	+650 mV	+636.75 mV to +663.25 mV
	+5	-0.25 V	-650 mV	-663.25 mV to -636.75 mV
100 mV	-5	+2.0 V	+2.8 V	+2.696 V to 2.904 V
	+5	-2.0 V	-2.8 V	-2.904 V to -2.696 V
250 mV	-5	+1.25 V	+3.13 V	+2.994 V to 3.256 V
	+5	-1.25 V	-3.13 V	-3.256 V to -2.994 V
500 mV	-5	+0 V	+3.5 V	+3.326 V to 3.674 V
	+5	-0 V	-3.5 V	-3.674 V to -3.326 V
≥ 4 GHz non-B models				
10 mV	-5	+0.45 V	+530 mV	+524.75 mV to +535.25 mV
	+5	-0.45 V	-530 mV	-535.25 mV to -524.75 mV
20 mV	-5	+0.4 V	+560 mV	+552.75 mV to +567.25 mV
	+5	-0.4 V	-560 mV	-567.25 mV to -552.75 mV
50 mV	-5	+0.25 V	+650 mV	+636.75 mV to +663.25 mV
	+5	-0.25 V	-650 mV	-663.25 mV to -636.75 mV
100 mV	-5	+4.5 V	+5.3 V	+5.248 V to 5.353 V
	+5	-4.5 V	-5.3 V	-5.353 V to -5.248 V
200 mV	-5	+4.0 V	+5.5 V	+5.430 V to 5.571 V
	+5	-4.0 V	-5.5 V	-5.571 V to -5.430 V
500 mV	-4	+2.5 V	+5.5 V	+5.379 V to 5.621 V
	+4	-2.5 V	-5.5 V	-5.621 V to -5.379 V
1 V	-5	0 V	+5.5 V	+5.318 V to 5.683 V
	+5	0 V	-5.5 V	-5.683 V to -5.318 V
< 4 GHz models				
1 mV	-5	+0.5 V	+507 mV	+504.25 mV to +509.76 mV
	+5	-0.5 V	-507 mV	-509.76 mV to -504.25 mV
2 mV	-5	+0.5 V	+516 mV	+512.98 mV to +519.03 mV
	+5	-0.5 V	-516 mV	-519.03 mV to -512.98 mV
5 mV	-5	+0.5 V	+540 mV	+536.26 mV to +543.74 mV
	+5	-0.5 V	-540 mV	-543.74 mV to -536.26 mV

Table 2-4: DC Voltage measurement accuracy (cont.)

Scale setting	Position setting (Divs)	Offset setting ¹	Generator setting	Accuracy limits
10 mV	-5	+0.5 V	+580 mV	+574.20 mV to +585.80 mV
	+5	-0.5 V	-580 mV	-585.80 mV to -574.20 mV
20 mV	-5	+0.5 V	+660 mV	+651.65 mV to +668.35 mV
	+5	-0.5 V	-660 mV	-668.35 mV to -651.65 mV
50 mV	-5	+0.5 V	+900 mV	+884.00 mV to +916.00 mV
	+5	-0.5 V	-900 mV	-916.00 mV to -884.00 mV
90 mV	-5	+0.5 V	+1.22 V	+1.194 V to +1.246 V
	+5	-0.5 V	-1.22 V	-1.246 V to -1.194 V
100 mV	0	+4.5 V	+4.8 V	+4.746 V to +4.854 V
	0	-4.5 V	-4.8 V	-4.854 V to -4.746 V
200 mV	-2	+4.6 V	+4.8 V	+4.725 V to +4.875 V
	+2	-4.6 V	-4.8 V	-4.875 V to -4.725 V
500 mV	-2	+5.0 V	+4.5 V	+4.345 V to +4.655 V
	+2	-5.0 V	-4.5 V	-4.655 V to -4.345 V
1 V	0	+2.0 V	+5.0 V	+4.745 V to +5.255 V
	0	-2.0 V	-5.0 V	-5.255 V to -4.745 V

¹ Set as precisely as the instrument's offset resolution permits.

d. Display the test signal:

- From the button bar touch **Vertical** and touch **Position**.
- Use the keypad to set vertical position to a position setting listed in the table for the current vertical scale setting. The baseline level may move off screen.
- Touch **Offset**.
- Use the keypad to set vertical offset to the positive-polarity setting listed in the table for the current vertical scale setting. The baseline level will remain off screen.
- Set the generator to the level and polarity indicated in the table for the vertical scale, position, and offset settings you have made.

e. Measure the test signal: Press the **X** (close) button. Read the measurement results at the measurement statistics **Mean** measurement readout. See the following figure.

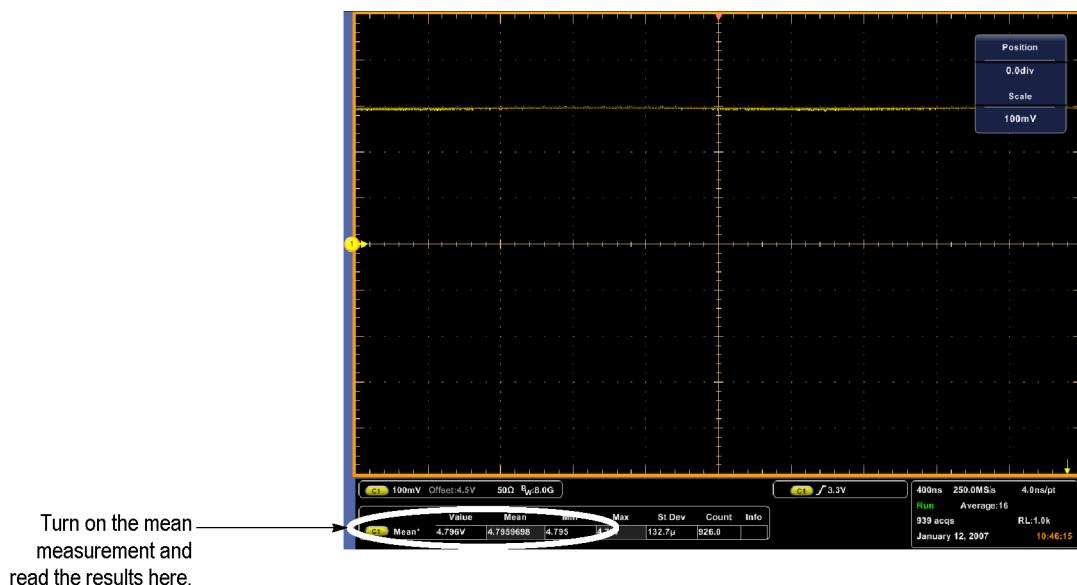


Figure 2-8: Measurement of DC accuracy at maximum offset and position

f. *Check against limits:*

- CHECK that the readout for the measurement **Mean** readout on screen is within the limits listed for the current vertical scale and position/offset/generator settings. Enter the value on test record.
- Repeat substep d, reversing the polarity of the position, offset, and generator settings as is listed in the table.
- CHECK that the **Mean** measurement readout on screen is within the limits listed for the current vertical scale setting and position/offset/generator settings. Enter the value on test record.
- Repeat substeps c through f until all vertical scale settings are checked for the channel under test. (See Table 2-5.)

g. *Test all channels:* Repeat step 2 substeps a through f for all four channels.

3. *Disconnect the hookup:*

- a. *Set the generator output to 0 V.*
- b. Disconnect the equipment from the generator output and the input connector of the channel last tested.

Check DC Gain Accuracy, ≥ 4 GHz models

Equipment required

One DC calibration generator (Item 6)
One SMA male-to-female BNC adapter (Item 19)

Prerequisites

The instrument must meet the prerequisites.
(See page 2-13, *Prerequisites*.)



WARNING. The generator is capable of outputting dangerous voltages. To avoid injury, be sure to set the DC calibration generator to off or 0 volts before connecting, disconnecting, and/or moving the test hookup during this procedure.

1. Install the test hookup and preset the instrument controls:

a. Hook up the test-signal source:

- Set the output of a DC calibration generator to off or 0 volts. Set the DC impedance of the generator to 50 Ω.
- Connect the generator to **Ch 1** through an adapter. Refer to the following figure.

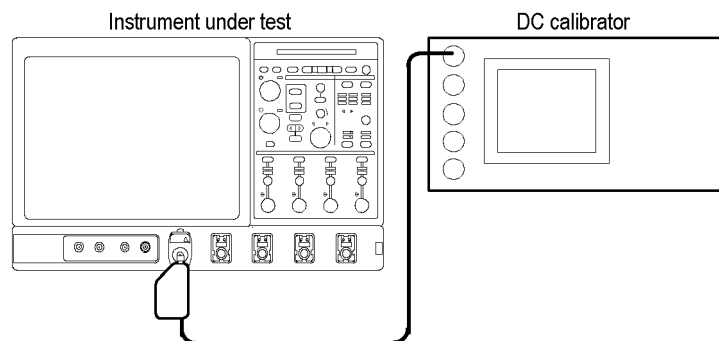


Figure 2-9: Initial test hookup

b. Initialize the instrument: Press **Default Setup**

c. Modify the default settings:

- From the tool bar, touch **Horiz/Acq** and select the **Acquisition** tab.
- Touch **Average** and set the number of averages to **16**.

2. Confirm input channels are within limits for DC gain accuracy. Do the following substeps - test Ch 1 first, *skipping substep a* of this step since Ch 1 is already selected from step 1.

a. Select an unchecked channel:

- From the tool bar, touch **Measure** and then **Clear All** to remove the previous measurement.

- Press the Vertical button of the channel just confirmed to remove the channel from the display.
 - Press the front-panel Vertical button that corresponds to the channel you are to confirm.
 - *Set the generator output to 0 V.*
 - Move the test hookup to the channel you selected.
- b. Turn on the measurement Mean for the channel:**
- From the tool bar, touch **Measure** and select the **Ampl** tab, **More**, and then touch **Mean** to measure the mean of the current channel.
 - Press the **X** (Close) button.
- c. Set the vertical scale:** Set the vertical **Scale** to one of the settings in the following table that is not yet checked, starting with the first setting.

Table 2-5: Gain accuracy

Channel	Scale setting	Position setting (Divs)	Offset setting	Generator setting	Measurement mean	Difference of measurement means	Accuracy limits
≥ 4 GHz B models							
Ch1	10 mV	0	0 V	+38.0 mV			+74.48 mV to +77.52 mV
				-38.0 mV			
		-5	+0.45 V	+538 mV			
			+462 mV				
		5	-0.45 V	-462 mV			+74.48 mV to +77.52 mV
				-538 mV			
	20 mV	0	0 V	+76.0 mV			+148.960 mV to +155.040 mV
				-76.0 mV			
		-5	+0.4 V	+576.0 mV			
			+424.0 mV				
		5	-0.4 V	-424.0 mV			+148.960 mV to +155.040 mV
				-576.0 mV			
	50 mV	0	0 V	+190 mV			+372.40 mV to +387.60 mV
				-190 mV			
		-5	+0.25 V	+690 mV			
			+310 mV				
		5	-0.25 V	-310 mV			+372.40 mV to +387.60 mV
				-690 mV			

Table 2-5: Gain accuracy (cont.)

Channel	Scale setting	Position setting (Divs)	Offset setting	Generator setting	Measurement mean	Difference of measurement means	Accuracy limits
Ch1	100 mV	0	0 V	+380 mV			+744.80 mV to +775.20 mV
				-380 mV			
		-5	+2.0 V	+2.88 V			+744.80 mV to +775.20 mV
	250 mV	0	0 V	+950 mV			+1.862 V to +1.938 V
				-950 mV			
		-5	+1.25 V	+3.45 V			+1.862 V to +1.938 V
	500 mV	0	0 V	+1.90 V			+3.724 V to +3.876 V
				-1.90 V			
		-5	+0 V	+4.40 V			+3.724 V to +3.876 V
Ch2	10 mV	0	0 V	+38.0 mV			+74.48 mV to +77.52 mV
				-38.0 mV			
		-5	+0.45 V	+538 mV			+74.48 mV to +77.52 mV
	20 mV	0	0 V	+76.0 mV			+148.960 mV to +155.040 mV
				-76.0 mV			
		-5	+0.4 V	+576.0 mV			+148.960 mV to +155.040 mV
	50 mV	0	0 V	+424.0 mV			+148.960 mV to +155.040 mV
				-424.0 mV			
		-5	-0.4 V	-424.0 mV			+148.960 mV to +155.040 mV
100 mV	0	0 V	+576.0 mV			+148.960 mV to +155.040 mV	
			-576.0 mV				
	-5	+0.4 V	+576.0 mV			+148.960 mV to +155.040 mV	

Table 2-5: Gain accuracy (cont.)

Channel	Scale setting	Position setting (Divs)	Offset setting	Generator setting	Measurement mean	Difference of measurement means	Accuracy limits
Ch2	50 mV	0	0 V	+190 mV			+372.40 mV to +387.60 mV
				-190 mV			
		-5	+0.25 V	+690 mV			+372.40 mV to +387.60 mV
	100 mV	0	0 V	+380 mV			+744.80 mV to +775.20 mV
				-380 mV			
		-5	+2.0 V	+2.88 V			+744.80 mV to +775.20 mV
	250 mV	0	0 V	+950 mV			+1.862 V to +1.938 V
				-950 mV			
		-5	+1.25 V	+3.45 V			+1.862 V to +1.938 V
500 mV	0	0 V	+1.90 V			+3.724 V to +3.876 V	
			-1.90 V				
			-5	+0 V	+4.40 V		
	10 mV	0	0 V	+38.0 mV			+74.48 mV to +77.52 mV
				-38.0 mV			
		-5	+0.45 V	+538 mV			+74.48 mV to +77.52 mV
Ch3	0	0 V	+462 mV			+74.48 mV to +77.52 mV	
			-462 mV				
	5	-0.45 V	-462 mV			+74.48 mV to +77.52 mV	
				-538 mV			

Table 2-5: Gain accuracy (cont.)

Channel	Scale setting	Position setting (Divs)	Offset setting	Generator setting	Measurement mean	Difference of measurement means	Accuracy limits
Ch3	20 mV	0	0 V	+76.0 mV			+148.960 mV to +155.040 mV
				-76.0 mV			
		-5	+0.4 V	+576.0 mV			+148.960 mV to +155.040 mV
	50 mV	0	0 V	+190 mV			+372.40 mV to +387.60 mV
				-190 mV			
		-5	+0.25 V	+690 mV			+372.40 mV to +387.60 mV
100 mV	0	0 V	0 V	+380 mV			+744.80 mV to +775.20 mV
				-380 mV			
		-5	+2.0 V	+2.88 V			+744.80 mV to +775.20 mV
	5	-0.25 V	-0.25 V	-310 mV			+372.40 mV to +387.60 mV
				-690 mV			
		-2.0 V	-2.12 V			+744.80 mV to +775.20 mV	
250 mV	0	0 V	0 V	+950 mV			+1.862 V to +1.938 V
				-950 mV			
		-5	+1.25 V	+3.45 V			+1.862 V to +1.938 V
	5	-1.25 V	-1.25 V	-1.55 V			+1.862 V to +1.938 V
				-3.45 V			
		-2.0 V	-2.12 V			+744.80 mV to +775.20 mV	
500 mV	0	0 V	0 V	+1.90 V			+3.724 V to +3.876 V
				-1.90 V			
		-5	+0 V	+4.40 V			+3.724 V to +3.876 V
	5	-0 V	-0 V	+0.60 V			+3.724 V to +3.876 V
				-0.60 V			
		-4.40 V					

Table 2-5: Gain accuracy (cont.)

Channel	Scale setting	Position setting (Divs)	Offset setting	Generator setting	Measurement mean	Difference of measurement means	Accuracy limits
Ch4	10 mV	0	0 V	+38.0 mV			+74.48 mV to +77.52 mV
				-38.0 mV			
		-5	+0.45 V	+538 mV			+74.48 mV to +77.52 mV
				+462 mV			
		5	-0.45 V	-462 mV			+74.48 mV to +77.52 mV
				-538 mV			
20 mV	20 mV	0	0 V	+76.0 mV			+148.960 mV to +155.040 mV
				-76.0 mV			
		-5	+0.4 V	+576.0 mV			+148.960 mV to +155.040 mV
				+424.0 mV			
		5	-0.4 V	-424.0 mV			+148.960 mV to +155.040 mV
				-576.0 mV			
50 mV	50 mV	0	0 V	+190 mV			+372.40 mV to +387.60 mV
				-190 mV			
		-5	+0.25 V	+690 mV			+372.40 mV to +387.60 mV
				+310 mV			
		5	-0.25 V	-310 mV			+372.40 mV to +387.60 mV
				-690 mV			
100 mV	100 mV	0	0 V	+380 mV			+744.80 mV to +775.20 mV
				-380 mV			
		-5	+2.0 V	+2.88 V			+744.80 mV to +775.20 mV
				+2.12 V			
		5	-2.0 V	-2.12 V			+744.80 mV to +775.20 mV
				-2.88 V			
250 mV	250 mV	0	0 V	+950 mV			+1.862 V to +1.938 V
				-950 mV			
		-5	+1.25 V	+3.45 V			+1.862 V to +1.938 V
				+1.55 V			
		5	-1.25 V	-1.55 V			+1.862 V to +1.938 V
				-3.45 V			

Table 2-5: Gain accuracy (cont.)

Channel	Scale setting	Position setting (Divs)	Offset setting	Generator setting	Measurement mean	Difference of measurement means	Accuracy limits
Ch4	500 mV	0	0 V	+1.90 V			+3.724 V to +3.876 V
				-1.90 V			
		-5	+0 V	+4.40 V			+3.724 V to +3.876 V
				+0.60 V			
		5	-0 V	-0.60 V			+3.724 V to +3.876 V
				-4.40 V			

Table 2-5: Gain accuracy (cont.)

Channel	Scale setting	Position setting (Divs)	Offset setting	Generator setting	Measurement mean	Difference of measurement means	Accuracy limits	
≥ 4 GHz non-B models								
Ch1	10 mV	0	0 V	+38.0 mV			+74.48 mV to +77.52 mV	
				-38.0 mV				
		-5	+0.45 V	+538 mV			+74.48 mV to +77.52 mV	
			5	-0.45 V	-462 mV			+74.48 mV to +77.52 mV
					-538 mV			
	20 mV	0	0 V	0 V	+76.0 mV			+148.960 mV to +155.040 mV
					-76.0 mV			
			-5	+0.4 V	+576.0 mV			+148.960 mV to +155.040 mV
				5	-0.4 V	-424.0 mV		
					-576.0 mV			
50 mV	0	0 V	0 V	+190 mV			+372.40 mV to +387.60 mV	
				-190 mV				
		-5	+0.25 V	+690 mV			+372.40 mV to +387.60 mV	
			5	-0.25 V	-310 mV			+372.40 mV to +387.60 mV
					-690 mV			
100 mV	0	0 V	0 V	+380 mV			+744.80 mV to +775.20 mV	
				-380 mV				
		-5	+4.5 V	+5.38 V			+744.80 mV to +775.20 mV	
			5	-4.5 V	-4.62 V			+744.80 mV to +775.20 mV
					-5.38 V			
200 mV	0	0 V	0 V	+760 mV			+1.49 V to +1.550 V	
				-760 mV				
		-5	+4.0 V	+5.50 V			+1.235 V to +1.285 V	
			5	-4.0 V	-4.24 V			+1.235 V to +1.285 V
					-5.50 V			

Table 2-5: Gain accuracy (cont.)

Channel	Scale setting	Position setting (Divs)	Offset setting	Generator setting	Measurement mean	Difference of measurement means	Accuracy limits
Ch1	500 mV	0	0 V	+1.90 V			+3.724 V to +3.876 V
				-1.90 V			
		-5	+2.5 V	+5.50 V			+2.352 V to +2.448 V
				+3.10 V			
		5	-2.5 V	-3.10 V			+2.352 V to +2.448 V
				-5.50 V			
	1 V	0	0 V	+3.80 V			+7.448 V to +7.752 V
				-3.80 V			
		-5	0 V	+5.50 V			+3.871 V to +4.029 V
				+1.55 V			
		5	0 V	-1.55 V			+3.871 V to +4.029 V
				-5.50 V			
Ch2	10 mV	0	0 V	+38.0 mV			+74.48 mV to +77.52 mV
				-38.0 mV			
		-5	+0.45 V	+538 mV			+74.48 mV to +77.52 mV
				+462 mV			
		5	-0.45 V	-462 mV			+74.48 mV to +77.52 mV
				-538 mV			
	20 mV	0	0 V	+76.0 mV			+148.960 mV to +155.040 mV
				-76.0 mV			
		-5	+0.4 V	+576.0 mV			+148.960 mV to +155.040 mV
				+424.0 mV			
		5	-0.4 V	-424.0 mV			+148.960 mV to +155.040 mV
				-576.0 mV			
	50 mV	0	0 V	+190 mV			+372.40 mV to +387.60 mV
				-190 mV			
		-5	+0.25 V	+690 mV			+372.40 mV to +387.60 mV
				+310 mV			
		5	-0.25 V	-310 mV			+372.40 mV to +387.60 mV
				-690 mV			

Table 2-5: Gain accuracy (cont.)

Channel	Scale setting	Position setting (Divs)	Offset setting	Generator setting	Measurement mean	Difference of measurement means	Accuracy limits
Ch2	100 mV	0	0 V	+380 mV			+744.80 mV to +775.20 mV
				-380 mV			
		-5	+4.5 V	+5.38 V			+744.80 mV to +775.20 mV
				+4.62 V			
		5	-4.5 V	-4.62 V			+744.80 mV to +775.20 mV
				-5.38 V			
	200 mV	0	0 V	+760 mV			+1.49 V to +1.550 V
				-760 mV			
		-5	+4.0 V	+5.50 V			+1.235 V to +1.285 V
				+4.24 V			
		5	-4.0 V	-4.24 V			+1.235 V to +1.285 V
				-5.50 V			
500 mV	0	0 V	+1.90 V			+3.724 V to +3.876 V	
			-1.90 V				
	-5	+2.5 V	+5.50 V			+2.352 V to +2.448 V	
			+3.10 V				
	5	-2.5 V	-3.10 V			+2.352 V to +2.448 V	
			-5.50 V				
1 V	0	0 V	+3.80 V			+7.448 V to +7.752 V	
			-3.80 V				
	-5	0 V	+5.50 V			+3.871 V to +4.029 V	
			+1.55 V				
	5	0 V	-1.55 V			+3.871 V to +4.029 V	
			-5.50 V				
Ch3	10 mV	0	0 V	+38.0 mV			+74.48 mV to +77.52 mV
				-38.0 mV			
		-5	+0.45 V	+538 mV			+74.48 mV to +77.52 mV
				+462 mV			
		5	-0.45 V	-462 mV			+74.48 mV to +77.52 mV
				-538 mV			

Table 2-5: Gain accuracy (cont.)

Channel	Scale setting	Position setting (Divs)	Offset setting	Generator setting	Measurement mean	Difference of measurement means	Accuracy limits
Ch3	20 mV	0	0 V	+76.0 mV			+148.960 mV to +155.040 mV
				-76.0 mV			
		-5	+0.4 V	+576.0 mV			+148.960 mV to +155.040 mV
				+424.0 mV			
		5	-0.4 V	-424.0 mV			+148.960 mV to +155.040 mV
				-576.0 mV			
50 mV	50 mV	0	0 V	+190 mV			+372.40 mV to +387.60 mV
				-190 mV			
		-5	+0.25 V	+690 mV			+372.40 mV to +387.60 mV
				+310 mV			
		5	-0.25 V	-310 mV			+372.40 mV to +387.60 mV
				-690 mV			
100 mV	100 mV	0	0 V	+380 mV			+744.80 mV to +775.20 mV
				-380 mV			
		-5	+4.5 V	+5.38 V			+744.80 mV to +775.20 mV
				+4.62 V			
		5	-4.5 V	-4.62 V			+744.80 mV to +775.20 mV
				-5.38 V			
200 mV	200 mV	0	0 V	+760 mV			+1.49 V to +1.550 V
				-760 mV			
		-5	+4.0 V	+5.50 V			+1.235 V to +1.285 V
				+4.24 V			
		5	-4.0 V	-4.24 V			+1.235 V to +1.285 V
				-5.50 V			
500 mV	500 mV	0	0 V	+1.90 V			+3.724 V to +3.876 V
				-1.90 V			
		-5	+2.5 V	+5.50 V			+2.352 V to +2.448 V
				+3.10 V			
		5	-2.5 V	-3.10 V			+2.352 V to +2.448 V
				-5.50 V			

Table 2-5: Gain accuracy (cont.)

Channel	Scale setting	Position setting (Divs)	Offset setting	Generator setting	Measurement mean	Difference of measurement means	Accuracy limits
Ch3	1 V	0	0 V	+3.80 V			+7.448 V to +7.752 V
				-3.80 V			
		-5	0 V	+5.50 V			+3.871 V to +4.029 V
				+1.55 V			
		5	0 V	-1.55 V			+3.871 V to +4.029 V
				-5.50 V			
Ch4	10 mV	0	0 V	+38.0 mV			+74.48 mV to +77.52 mV
				-38.0 mV			
		-5	+0.45 V	+538 mV			+74.48 mV to +77.52 mV
				+462 mV			
		5	-0.45 V	-462 mV			+74.48 mV to +77.52 mV
				-538 mV			
	20 mV	0	0 V	+76.0 mV			+148.960 mV to +155.040 mV
				-76.0 mV			
		-5	+0.4 V	+576.0 mV			+148.960 mV to +155.040 mV
				+424.0 mV			
		5	-0.4 V	-424.0 mV			+148.960 mV to +155.040 mV
				-576.0 mV			
	50 mV	0	0 V	+190 mV			+372.40 mV to +387.60 mV
				-190 mV			
		-5	+0.25 V	+690 mV			+372.40 mV to +387.60 mV
				+310 mV			
		5	-0.25 V	-310 mV			+372.40 mV to +387.60 mV
				-690 mV			
100 mV	0	0 V	+380 mV			+744.80 mV to +775.20 mV	
			-380 mV				
	-5	+4.5 V	+5.38 V			+744.80 mV to +775.20 mV	
			+4.62 V				
	5	-4.5 V	-4.62 V			+744.80 mV to +775.20 mV	
			-5.38 V				

Table 2-5: Gain accuracy (cont.)

Channel	Scale setting	Position setting (Divs)	Offset setting	Generator setting	Measurement mean	Difference of measurement means	Accuracy limits
Ch4	200 mV	0	0 V	+760 mV			+1.49 V to +1.550 V
				-760 mV			
		-5	+4.0 V	+5.50 V			+1.235 V to +1.285 V
	5	-4.0 V		+4.24 V			+1.235 V to +1.285 V
				-4.24 V			
				-5.50 V			
500 mV	0	0 V	0 V	+1.90 V			+3.724 V to +3.876 V
				-1.90 V			
		-5	+2.5 V	+5.50 V			+2.352 V to +2.448 V
	5	-2.5 V		+3.10 V			+2.352 V to +2.448 V
				-3.10 V			
				-5.50 V			
1 V	0	0 V	0 V	+3.80 V			+7.448 V to +7.752 V
				-3.80 V			
		-5	0 V	+5.50 V			+3.871 V to +4.029 V
	5	0 V		+1.55 V			+3.871 V to +4.029 V
				-1.55 V			
				-5.50 V			

d. *Display the test signal:*

- From the tool bar touch **Vertical** and then touch **Position**.
- Use the keypad to set vertical position to the number of divisions listed in the table for the current vertical scale setting and offset.
- Touch **Offset**.
- Use the keypad to set vertical offset to the setting listed in the table for the current vertical scale and position settings. The baseline level may move off screen.
- Set the generator to the level and polarity indicated in the table for the vertical scale, position, and offset settings you have made. The DC test level should appear on screen. (If it does not return, the accuracy check has failed for the current vertical scale, position, and offset settings of the current channel.)

e. *Measure the test signal:* Press the **Close** button.

- Read the measurement results at the measurement statistics **Mean** measurement readout. Refer to the following figure.

- Record the Mean in the Measurement Mean column. (See Table 2-5.)

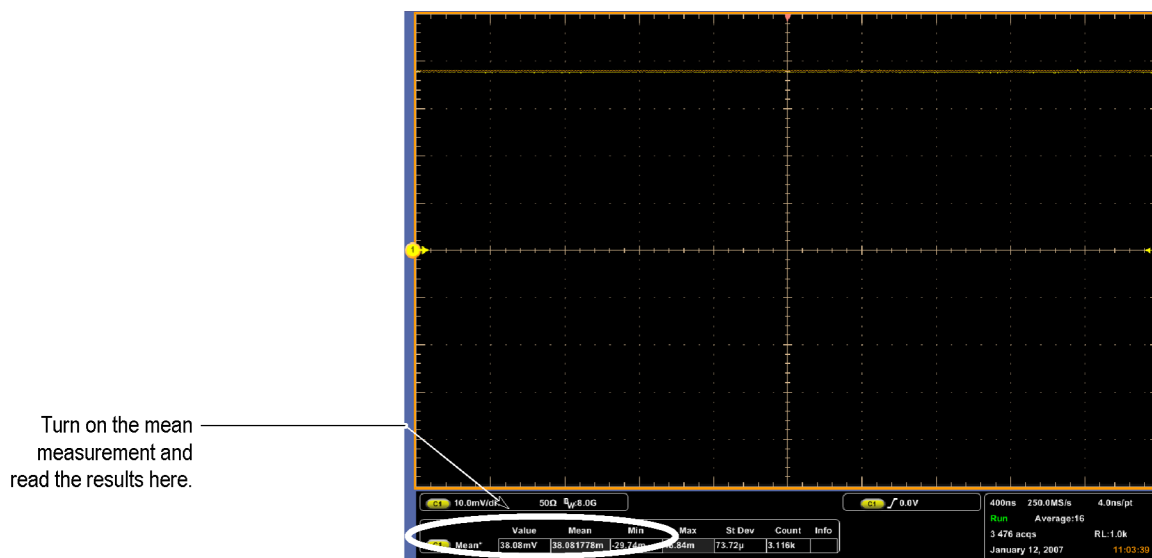


Figure 2-10: Measurement of DC gain accuracy

- f. *Measure second mean:*
 - Set the generator to the second level and polarity indicated in the table for the vertical scale, position, and offset settings you have made.
 - Repeat substep e using the current vertical scale, position, offset, and new generator setting for the second mean.
 - g. *Check against limits:*
 - Subtract the second measurement mean from the first measurement mean for the current vertical scale, position, and offset.
 - Record the difference of the two mean measurements in the Difference of Measurement Means column of the table. (See Table 2-5.)
 - CHECK that the Difference of Measurement Mean is within the limits listed for the current vertical scale/position/offset/generator settings. Enter measurement mean difference value on test record.
 - h. Repeat substeps d through g, using the next position, offset and generator settings listed in the table for the current vertical scale.
 - i. Repeat substeps c through h until all vertical scale settings, listed in the table, are checked for the channel under test. (See Table 2-5.)
 - j. *Test all channels:* Repeat substeps a through i for all four channels.
3. *Disconnect the hookup:*
 - a. *Set the generator output to 0 V.*

- b. Disconnect the generator output from the channel last tested.

**Check Offset Accuracy
≥ 4 GHz models**

Equipment Required

One DC calibration generator (Item 6)
One SMA male-to-female BNC adapter
(Item 19)

Prerequisites

The instrument must meet the prerequisites.
(See page 2-13, *Prerequisites*.)



WARNING. *The generator is capable of outputting dangerous voltages. To avoid injury, be sure to set the DC calibration generator to off or 0 volts before connecting, disconnecting, and/or moving the test hookup during this procedure.*

1. *Install the test hookup and preset the instrument controls:*

- a. *Hook up the test-signal source:*

- Set the output of a DC calibration generator to off or 0 volts. Set the DC impedance of the generator to 50 Ω.
- Connect the output of a DC calibration generator to **Ch 1** through an adapter. Refer to the following figure.

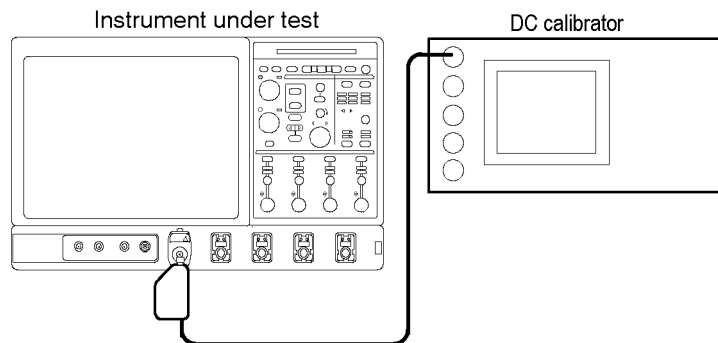


Figure 2-11: Initial test hookup

- b. *Initialize the instrument:* Press **Default Setup**.

- c. *Modify the default settings:*

- From the tool bar, touch **Horiz/Acq** and select the **Acquisition** tab.
- Touch **Average** and set the number of averages to **16**.

2. *Confirm input channels are within limits for offset accuracy.* Do the following substeps - test Ch 1 first, *skipping substep asince Ch 1 is already selected from step 1.*
 - a. *Select an unchecked channel:*
 - From the tool bar, touch **Measure** and then **Clear All** to remove the previous measurement.
 - Press the Vertical button of the channel just confirmed to remove the channel from the display.
 - Press the front-panel Vertical button that corresponds to the channel you are to confirm.
 - *Set the generator output to 0 V.*
 - Move the test hookup to the channel you selected.
 - b. *Turn on the measurement Mean for the channel:*
 - From the tool bar, touch **Measure** and select the **Ampl** tab, **More**, and then touch **Mean** to measure the mean of the current channel.
 - Press the **X** (Close) button.
 - c. *Set the vertical scale:* Set the vertical **Scale** to one of the settings in the following table that is not yet checked.

Table 2-6: Offset accuracy

Scale setting	Position setting (Divs)	Offset setting ¹	Generator setting	Accuracy limits
≥ 4 GHz B models				
10 mV	-5	+0.45 V	+500 mV	+495.75 mV to +504.25 mV
	5	-0.45 V	-500 mV	-504.25 mV to -495.75 mV
20 mV	-5	+0.4 V	+500 mV	+494.75 mV to +505.25 mV
	5	-0.4 V	-500 mV	-505.25 mV to -494.75 mV
50 mV	-5	+0.25 V	+500 mV	+491.75 mV to +508.25 mV
	5	-0.25 V	-500 mV	-508.25 mV to -491.75 mV
100 mV	-5	+2.0 V	+2.5 V	+2.406 V to +2.594 V
	5	-2.0 V	-2.5 V	-2.594 V to -2.406 V
250 mV	-5	+1.25 V	+2.5 V	+2.391 V to +2.609 V
	5	-1.25 V	-2.5 V	-2.609 V to -2.391 V
500 mV	-5	+0 V	+2.5 V	+2.366 V to +2.634 V
	5	-0 V	-2.5 V	-2.634 V to -2.366 V

Table 2-6: Offset accuracy (cont.)

Scale setting	Position setting (Divs)	Offset setting ¹	Generator setting	Accuracy limits
≥ 4 GHz non-B models				
10 mV	-5	+0.45 V	+500 mV	+495.75 mV to +504.25 mV
	5	-0.45 V	-500 mV	-504.25 mV to -495.75 mV
20 mV	-5	+0.4 V	+500 mV	+494.75 mV to +505.25 mV
	5	-0.4 V	-500 mV	-505.25 mV to -494.75 mV
50 mV	-5	+0.25 V	+500 mV	+491.75 mV to +508.25 mV
	5	-0.25 V	-500 mV	-508.25 mV to -491.75 mV
100 mV	-5	+4.5 V	+5.0 V	+4.958 V to +5.043 V
	5	-4.5 V	-5.0 V	-5.043 V to -4.958 V
200 mV	-5	+2 V	+3.0 V	+2.955 V to +3.046 V
	5	-2 V	-3.0 V	-3.046 V to -2.955 V
500 mV	-5	+2.5 V	+5.0 V	+4.918 V to +5.083 V
	5	-2.5 V	-5.0 V	-5.083 V to -4.918 V
1 V	-5	0 V	2.5 V	+2.368 V to +2.633 V
	5	0 V	-2.5 V	-2.633 V to -2.368 V

¹ Set as precisely as the instrument's offset resolution permits.

d. *Display the test signal:*

- From the tool bar touch **Vertical** and then touch **Position**.
- Use the keypad to set vertical position to the setting listed in the table.
- Touch **Offset**.
- Use the keypad to set vertical offset to the positive-polarity setting listed in the table for the current vertical scale setting. The baseline level may move off screen.
- Set the generator to the level and polarity indicated in the table for the vertical scale, position, and offset settings you have made.

e. *Measure the test signal:* Press **Close**. Read the measurement results at the **Mean** measurement readout. Refer to the following figure.

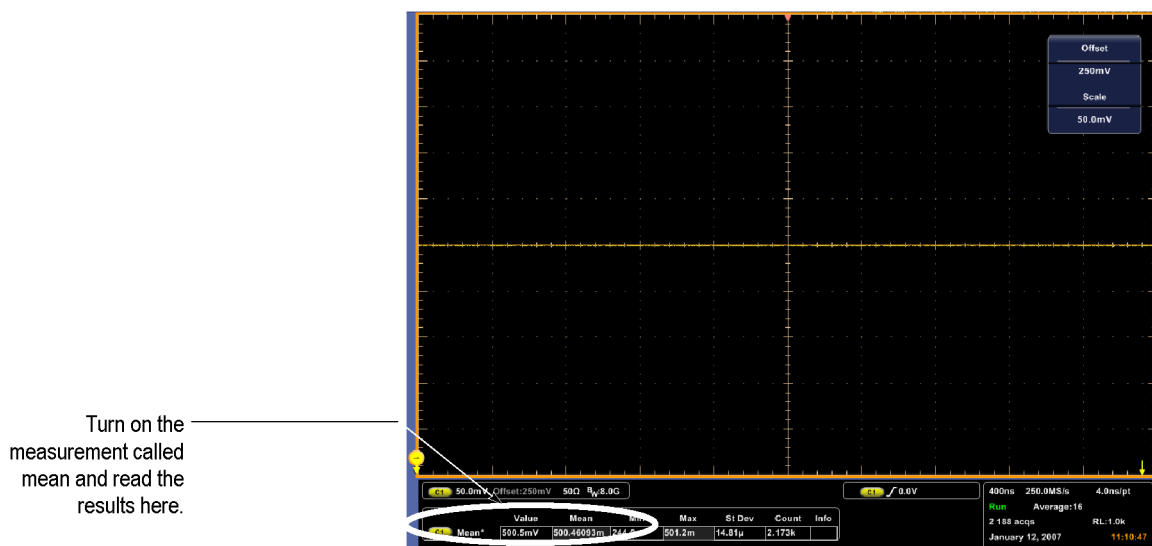


Figure 2-12: Measurement of offset accuracy

f. *Check against limits:*

- CHECK that the readout for the measurement **Mean** readout on screen is within the limits listed for the current vertical scale and position/offset/generator settings. Enter the value on the test record.
- Repeat substep d, using the offset and generator settings as is listed in the table.
- CHECK that the **Mean** measurement readout on screen is within the limits listed for the current vertical scale setting and position/offset/generator settings. Enter the value on the test record.
- Repeat substep d, using the negative-polarity offset and generator settings as is listed in the table.
- CHECK that the **Mean** measurement readout on screen is within the limits listed for the current vertical scale setting and position/offset/generator settings. Enter the value on the test record.
- Repeat substeps c through f until all vertical scale settings, are checked for the channel under test. (See Table 2-6.)

g. *Test all channels:* Repeat substeps a through f for all four channels.

3. *Disconnect the hookup:*

- a. *Set the generator output to 0 V.*
- b. *Disconnect the generator from the channel last tested.*

Check Analog Bandwidth, < 3.5 GHz models

Equipment required

One sine wave generator (Item 9)

Prerequisites

(See page 2-13, *Prerequisites.*)

NOTE. *The sine wave generator output amplitude must be leveled to within 0.35 dB of the reference frequency (50 MHz) through the bandwidth frequency. (See Table 2-7 on page 2-64.) The 0.35 dB requirement is necessary to ensure a bandwidth that meets Tektronix specifications.*

You can perform bandwidth PV using an unleveled sine wave generator (with amplitude error > 0.35 dB). Under these conditions, the bandwidth PV is subject to the flatness errors associated with the generator used.

Refer to the Sine Wave Generator Leveling Procedure if your sine wave generator does not have automatic output amplitude leveling. (See page 2-110.)

1. *Install the test hookup and preset the instrument controls:*
 - a. *Initialize the instrument:*
 - Press **Default Setup**.
 - b. *Modify the default settings:*
 - Touch **Vertical**, select **Vertical Setup**, and then touch Termination **50 Ω**.
 - From the Bandwidth drop-down list, select the maximum bandwidth for your instrument.
 - Turn the horizontal **Scale** knob to **50 ns**.
 - From the button bar, touch **Horiz/Acq** and select the **Horizontal** tab. Select Constant Sample Rate mode. Set the Sample Rate to **200 GS/s**.
 - From the button bar, touch **Horiz/Acq** and select the **Acquisition** tab. Set the acquisition mode as follows:
 - Touch **Average** and set the number of averages to **16**.
 - Set the sampling mode as follows:
 - Touch the **Equivalent ET** button.
 - From the button bar, touch **Measure**. Touch Setups **Ref Levs**; then touch the **Histogram** button.

NOTE. The sine wave generator output amplitude must be leveled to within 0.35 dB of the reference frequency (50 MHz) through the bandwidth frequency. (See Table 2-7 on page 2-64.) The 0.35 dB requirement is necessary to ensure a bandwidth that meets Tektronix specifications.

You can perform bandwidth PV using an unleveled sine wave generator (with amplitude error > 0.35 dB). Under these conditions, the bandwidth PV is subject to the flatness errors associated with the generator used.

- c. *Hook up the test-signal source:* Connect the sine wave output of a leveled sine wave generator to **Ch 1**. (See Figure 2-13.) Set the output of the generator to a reference frequency of 50 MHz or less.

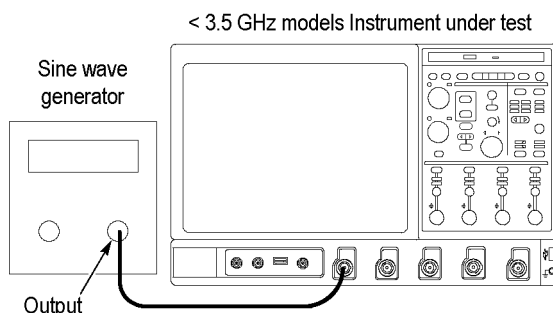


Figure 2-13: Initial test hookup

2. *Confirm the input channels are within limits for analog bandwidth:* Do the following substeps - test Ch 1 first, *skipping substeps a and b since Ch 1 is already set up for testing from step 1.*
 - a. *Select an unchecked channel:*
 - From the button bar, touch **Measure** and then **Clear All** to remove the previous measurement.
 - Press the Vertical button of the channel just confirmed to remove the channel from the display.
 - Press the front-panel Vertical button that corresponds to the channel you are to confirm.
 - Touch **Vertical**, select **Vertical Setup**, and then touch Termination **50 Ω**.
 - Move the leveled output of the sine wave generator to the channel you selected.
 - b. *Match the trigger source to the channel selected:* Press the Trigger **Source** button until the source that corresponds to the channel you are to confirm is on.

Table 2-7: Analog bandwidth, < 3.5 GHz models

Vertical scale	Reference amplitude	Horizontal scale	Test frequency			
			DPO7254	DPO7104	DPO7054	-3 dB
5 mV	30 mV	1 ns	2.0 GHz	1 GHz	500 MHz	≥21.2 mV
10 mV	60 mV	1 ns	2.501 GHz	1 GHz	500 MHz	≥42.4 mV
20 mV	120 mV	1 ns	2.501 GHz	1 GHz	500 MHz	≥84.8 mV
50 mV	300 mV	1 ns	2.501 GHz	1 GHz	500 MHz	≥212 mV
100 mV	600 mV	1 ns	2.501 GHz	1 GHz	500 MHz	≥424 mV
200 mV	1.2 V	1 ns	2.501 GHz	1 GHz	500 MHz	≥848 mV
500 mV	3 V ¹	1 ns	2.501 GHz	1 GHz	500 MHz	≥2.12 V ¹
1 V	5 V ¹	1 ns	2.501 GHz	1 GHz	500 MHz	≥3.535 V ¹

¹ If your generator cannot output the required amplitude, determine its maximum output at the Test frequency, and use this for the reference amplitude. The -3 dB limit can be calculated as: $0.707 \times \text{reference amplitude}$.

c. *Set the vertical scale:*

For the channel you are testing, set the vertical **Scale** to the next setting in the table, starting with the 100 mV setting. (See Table 2-7.)

d. *Set the triggering coupling:* From the button bar, touch **Trigger**, then select **Coupling DC**.

e. *Display the test signal:* Do the following subparts to first display the reference signal and then the test signal.

- From the button bar touch **Measure**; then select the **Time** tab.
- Touch the **Freq** button to measure the frequency of the current channel.
- Select the **Ampl** tab. Touch the **Amplitude** button.
- Touch the **Statistics** button, then touch the **Mean** button.
- Touch the **X** (Close) button.
- Set the generator output so the Chx Amplitude mean readout equals the reference amplitude in the table. This corresponds to the vertical scale set in substep c. (See Table 2-7.)
- Set the trigger as follows:

Press the front-panel **Push-Set 50%** as necessary to trigger a stable display. At full bandwidth, you may also want to make small, manual adjustments to the trigger level. You can use the **Trigger Level** knob to do this.

f. *Measure the test signal:*

Set the frequency of the generator, as shown on screen to the test frequency in the table that corresponds to the vertical scale set in substep c. (See Table 2-7.) (See Figure 2-14.)

Set the horizontal **Scale** to the horizontal scale setting that corresponds to the vertical scale set in substep c. (See Table 2-7.) Press **PUSH-SET 50%** as necessary to trigger the signal.

Read the results at the Chx Amplitude mean readout, which will automatically measure the amplitude of the test signal. Refer to the following figure.

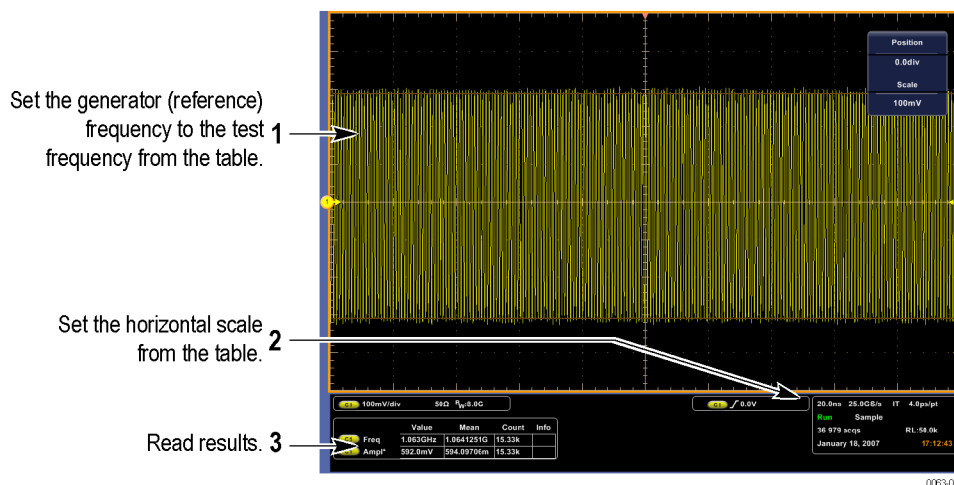


Figure 2-14: Measurement of analog bandwidth

g. Check against limits:

- CHECK that the **Amplitude** mean readout on screen is within the limits listed in the table for the current vertical scale setting. (See Table 2-7.)
- Enter the voltage on the test record.
- When finished checking, set the horizontal **Scale** back to the 20 ns.

h. Check remaining vertical scale settings against limits:

- Check the remaining vertical scale settings for the channel under test by repeating substeps c through g for each of the remaining scale settings for the channel under test.
- When doing substep f, skip the subparts that turn on the Chx Amplitude mean measurement until you check a new channel.
- Before doing substep f, touch the **Clear All** button to remove the previous channel measurements.
- Install/remove attenuators between the generator leveled output and the channel input as needed to obtain the six division reference signals listed in the table.

i. Test all channels: Repeat substeps a through g for all four channels.

3. *Disconnect the hookup:* Disconnect the test hook up from the input connector of the channel last tested.

Check Analog Bandwidth, ≥ 3.5 GHz models

Equipment Required	Prerequisites
One sine wave generator (Item 9)	(See page 2-13, <i>Prerequisites.</i>)
One level meter and power sensor (Item 10)	
One power splitter (Item 11)	
50 Ω precision cable 2.92 mm male-to-female (Item 12)	
One K male-to-male adapter (Item 13)	
SMA male-to-BNC female adapter (Item 19)	

1. *Install the test hookup and preset the instrument controls:*

- a. *Initialize the instrument:*

- Press **Default Setup**.

- b. *Modify the default settings:*

- Touch **Vertical**, select **Vertical Setup**.
- DPO7354: Touch Termination **50 Ω**.
- From the Bandwidth drop-down list, select the maximum bandwidth for your instrument.
- Turn the horizontal **Scale** knob to **40 ns** (DPO7354: **50 ns**).
- From the button bar, touch **Horiz/Acq** and select the **Horizontal** tab. Select Constant Sample Rate mode. Set the Sample Rate to **250 GS/s** (DPO7354: **200 GS/s**).
- From the button bar, touch **Horiz/Acq** and select the **Acquisition** tab. Set the acquisition mode as follows:

Touch **Sample**.

- Set the sampling mode as follows:

Touch the **Interpolate IT** button.

- From the button bar, touch **Measure**. Touch Setups **Ref Levs**; then touch the **Histogram Mode** button.
- If your instrument has enhanced bandwidth, from the toolbar, touch **Vertical** and check **Force Constant Sample Rate** (Digital filters ensured). Select **Apply to All Channels**.

- c. *Hook up the test-signal source:* Connect the sine wave output of the sine wave generator to **Ch 1** through a power splitter. Connect the power

sensor of the power meter to the power splitter. Set the output of the generator to a reference frequency of 50 MHz. (See Figure 2-15.)

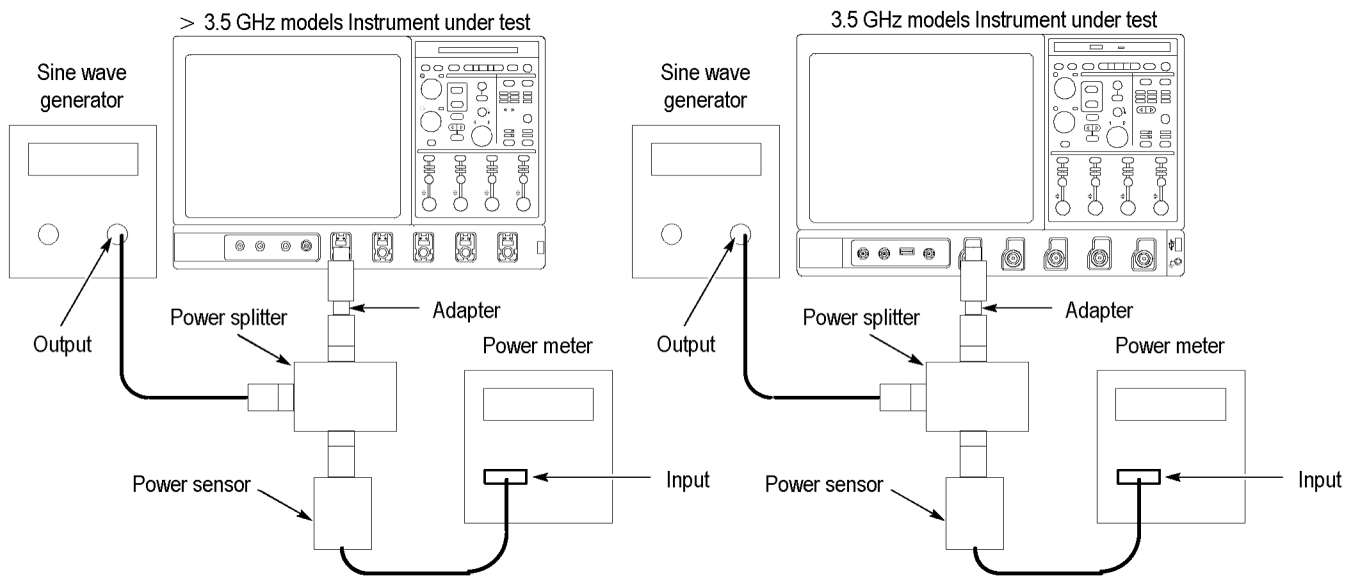


Figure 2-15: Initial test hookup

2. *Confirm the input channels are within limits for analog bandwidth: Do the following substeps - test Ch 1 first, skipping substeps a and b since Ch 1 is already set up for testing from step 1.*
 - a. *Select an unchecked channel:*
 - DPO/DSA71254/B: Press **Cursors** to remove cursors from the display.
 - From the button bar, touch **Measure** and then **Clear All** to remove the previous measurement.
 - Press the Vertical button of the channel just confirmed to remove the channel from the display.
 - Press the front-panel Vertical button that corresponds to the channel you are to confirm.
 - DPO7354: Touch **Vertical**, select **Vertical Setup**, and then touch Termination **50 Ω**.
 - Move the test setup to the channel you selected.

Table 2-8: Analog bandwidth ≥4 GHz B models

Vertical scale	Reference amplitude (6 div)	Horizontal scale	Test frequency						-3 dB limits
			DSA/DPO72004B	DSA/DPO71604B	DSA/DPO71254B	DSA/DPO70804B	DSA/DPO70604B	DSA/DPO70404B	
10 mV	60 mV	1 ns	18 GHz	16 GHz	12.5 GHz	8 GHz	6 GHz	4 GHz	≥42.4 mV
20 mV	120 mV	1 ns	20 GHz	16 GHz	12.5 GHz	8 GHz	6 GHz	4 GHz	≥84.8 mV
50 mV	300 mV	1 ns	20 GHz	16 GHz	12.5 GHz	8 GHz	6 GHz	4 GHz	≥212 mV
100 mV	600 mV	1 ns	18 GHz	16 GHz	12.5 GHz	8 GHz	6 GHz	4 GHz	≥424 mV
250 mV	1.5 V	1 ns	20 GHz	16 GHz	12.5 GHz	8 GHz	6 GHz	4 GHz	≥1.065 V

¹ If your generator cannot output the required amplitude, determine its maximum output at the Test frequency, and use this for the reference amplitude. The -3 dB limit can be calculated as: $0.707 \times \text{reference amplitude}$.

Table 2-9: Analog bandwidth ≥4 GHz non-B models

Vertical scale	Reference amplitude (6 div)	Horizontal scale	Test frequency						-3 dB limits
			DSA/DPO72004	DSA/DPO71604	DSA/DPO71254	DSA/DPO70804	DSA/DPO70604	DSA/DPO70404	
10 mV	60 mV	1 ns	18 GHz	16 GHz	12.5 GHz	8 GHz	6 GHz	4 GHz	≥42.4 mV
20 mV	120 mV	1 ns	20 GHz	16 GHz	12.5 GHz	8 GHz	6 GHz	4 GHz	≥84.8 mV
50 mV	300 mV	1 ns	20 GHz	16 GHz	12.5 GHz	8 GHz	6 GHz	4 GHz	≥212 mV
100 mV	600 mV	1 ns	18 GHz	16 GHz	12.5 GHz	8 GHz	6 GHz	4 GHz	≥424 mV
200 mV	1.2 V	1 ns	20 GHz	16 GHz	12.5 GHz	8 GHz	6 GHz	4 GHz	≥848 mV
500 mV	3 V ¹	1 ns	20 GHz	16 GHz	12.5 GHz	8 GHz	6 GHz	4 GHz	≥2.12 V ¹
1 V	5 V ¹	1 ns	NA	NA	12.5 GHz	8 GHz	6 GHz	4 GHz	≥3.535 V ¹

¹ If your generator cannot output the required amplitude, determine its maximum output at the Test frequency, and use this for the reference amplitude. The -3 dB limit can be calculated as: $0.707 \times \text{reference amplitude}$.

Table 2-10: Analog bandwidth 3.5 GHz model

Vertical scale	Reference amplitude	Horizontal scale	Test frequency	
			DPO7354	-3 dB limits
5 mV	30 mV	1 ns	2.0 GHz	≥21.2 mV
10 mV	40 mV	1 ns	3.5 GHz	≥28.3 mV
20 mV	80 mV	1 ns	3.5 GHz	≥56.6 mV
50 mV	200 mV	1 ns	3.5 GHz	≥141.4 mV
100 mV	400 mV	1 ns	3.5 GHz	≥283 mV
200 mV	800 mV	1 ns	3.5 GHz	≥566 mV
500 mV	2 V ¹	1 ns	3.5 GHz	≥1.41 V ¹
1 V	4 V ¹	1 ns	3.5 GHz	≥2.83 V ¹

¹ If your generator cannot output the required amplitude, determine its maximum output at the Test frequency, and use this for the reference amplitude. The -3 dB limit can be calculated as: $0.707 \times$ reference amplitude.

- b. *Match the trigger source to the channel selected:* Press the **Trigger Source** button until the source that corresponds to the channel you are to confirm is on.
 - ≥ 3.5 GHz models with bandwidth >9 GHz: Set the trigger Source to **Line**.
- c. DPO7354: Set the input impedance to **50 Ω**.
- d. *Set the vertical scale:*

For the channel you are testing, set the vertical **Scale** to the next setting listed in the tables, starting with the 100 mV setting. See the preceding Analog Bandwidth table that applies to your instrument.
- e. *Set the trigger coupling:* From the button bar, touch **Trigger** and select Coupling **DC**.
- f. *Display the test signal:* Do the following subparts to first display the reference signal and then the test signal.
 - DPO/DSA71254/B: From the button bar, touch **Cursors**. Touch Cursor Type **H Bars**.
 - From the button bar touch **Measure**; then select the **Time** tab.
 - Touch the **Freq** button to measure the frequency of the current channel.
 - Select the **Ampl** tab. Touch the **Amplitude** button.
 - From the Annotation drop-down list, select **None**.

- Touch the **Statistics** button, then touch the **Mean** button.
- Touch the **X** (Close) button.
- Set the generator output so the Chx Amplitude mean readout equals the reference amplitude. See the preceding Analog Bandwidth table that applies to your oscilloscope model. This corresponds to the vertical scale set in substep d.
- Record the reading on the power meter.
- Set the trigger as follows:

Press the front-panel **Push-Set 50%** button as necessary to trigger a stable display. At full bandwidth, you may also want to make small, manual adjustments to the trigger level. You can use the **Trigger Level** knob to do this.

NOTE. *If you are using Line trigger, the test signal is not shown as a stable display.*

g. *Measure the test signal:*

- DPO/DSA71254/B: Set the frequency of the generator to the test frequency in the tables that corresponds to the vertical scale set in substep d.
- All instruments except the DPO/DSA71254/B: Set the frequency of the generator, as shown on screen, to the test frequency in the tables that corresponds to the vertical scale set in substep d.
- Set the horizontal **Scale** to the horizontal scale setting in the tables that corresponds to the vertical scale set in substep d. Press **PUSH-SET 50%** as necessary to trigger the signal.
- Adjust the output of the generator until the reading on the power meter is equal to the reading recorded on the power meter in step f.
- DPO/DSA71254/B: Using the Multipurpose knobs, adjust Cursor 1 to the top of the waveform and Cursor 2 to the bottom of the waveform. Read the absolute value of the result at the ΔV readout.
- All instruments except the DPO/DSA71254/B: Read the results at the Chx Amplitude mean readout, which will automatically measure the amplitude of the test signal. (See Figure 2-16.)

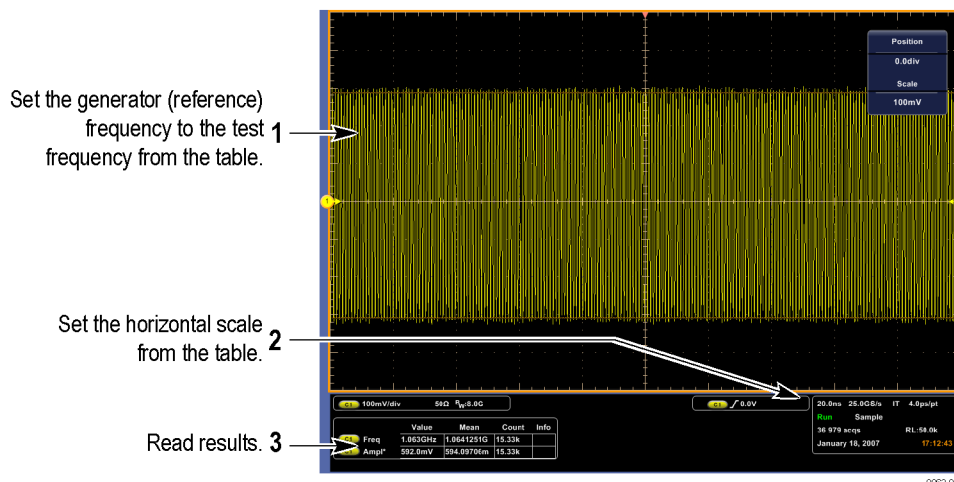


Figure 2-16: Measurement of analog bandwidth

- h. Check against limits:**
- CHECK that the measured amplitude is within the limits for the current vertical scale setting in the table.
 - Enter the voltage on the test record.
 - When finished checking, set the horizontal **Scale** back to the 20 ns.
- i. Check remaining vertical scale settings against limits:**
- Check the remaining vertical scale settings for the channel under test by repeating substeps a through h for each of the remaining scale settings for the channel under test.
 - When doing substep f, skip the subparts that turn on the Chx Amplitude mean measurement until you check a new channel.
 - When selecting a new channel and before doing substep e, touch the **Clear All** button to remove the previous channel measurements.
- j. Test all channels:** Repeat substeps a through i for all four channels.
- 3. Disconnect the hookup:** Disconnect the test hook up from the input connector of the channel last tested.

**Check Input Resistance,
≥ 4 GHz models**

Equipment Required

- One Digital Multimeter (Item 27)
- One Dual-Banana Connector, (Item 5)
- One precision 50 Ω coaxial cable (Item 4)
- One SMA male-to-female BNC adapter (Item 19)
- One SMA female-to-female adapter (Item 16)
- One SMA male short circuit adapter (Item 25)

Prerequisites

(See page 2-13, *Prerequisites.*)

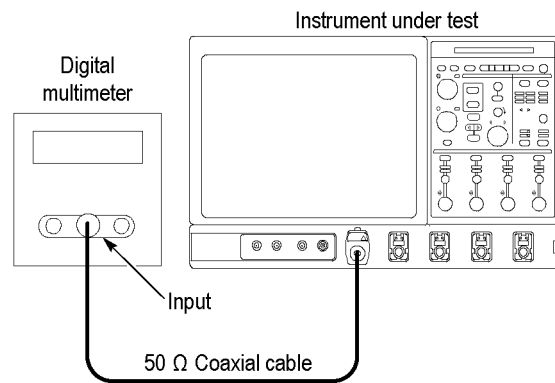


Figure 2-17: Initial test hookup

1. *Install the test hookup and preset the instrument controls:*
 - a. *Initialize the instrument:* Press the **Default Setup** button.
 - b. Short the cable from the multimeter by connecting a shorting adapter and SMA-to-SMA adapter to the BNC-to-SMA adapter.
 - c. Read and record the resistance of the multimeter leads.
 - d. *Hook up the test-signal source:* Connect, through a 50 Ω precision coaxial cable, the input of the multimeter to **Ch 1** through adapters. (See Figure 2-17.)
 - e. Set the Vertical **Scale** to **10 mV** per division
2. *Check input impedance against limits:*
 - a. *Measure the impedance:* Read and record the measured impedance.
 - b. Remove the dual banana connector from the digital multimeter (DMM), turn it 180 degrees and reinsert it in the DMM input.
 - c. *Measure the impedance:* Read and record the measured impedance.
 - d. Add the two measurements and divide the result by 2.
 - e. Subtract the resistance of the multimeter leads from the average that you calculated.
 - f. Enter the result on the test record.
 - g. Check - The measurement is within the limits specified in the test record.
3. Set the Vertical **Scale** to **100 mV** per division and repeat step 2.
4. *Repeat steps 2 through 3 for the remaining input channels:*
 - a. Move the test setup to an unchecked input channel.
 - b. Set the Vertical **Scale** of the channel to **10 mV** per division.
 - c. Repeat steps 2 through 3.
5. *Disconnect the hookup:* Disconnect the equipment from the instrument.

Time Base System Checks

These procedures check those characteristics that relate to the time base system and are listed as checked under *Warranted Characteristics* in *Specifications*.

Check Timebase and Delay Time Accuracy and Reference

Equipment Required

One timer-counter (Item 8)
 One 50 Ω , precision coaxial cable (Item 4)
 One SMA male-to-female BNC adapter (Item 19)
 One sine wave generator (Item 9)

Prerequisites

(See page 2-13, *Prerequisites*.)

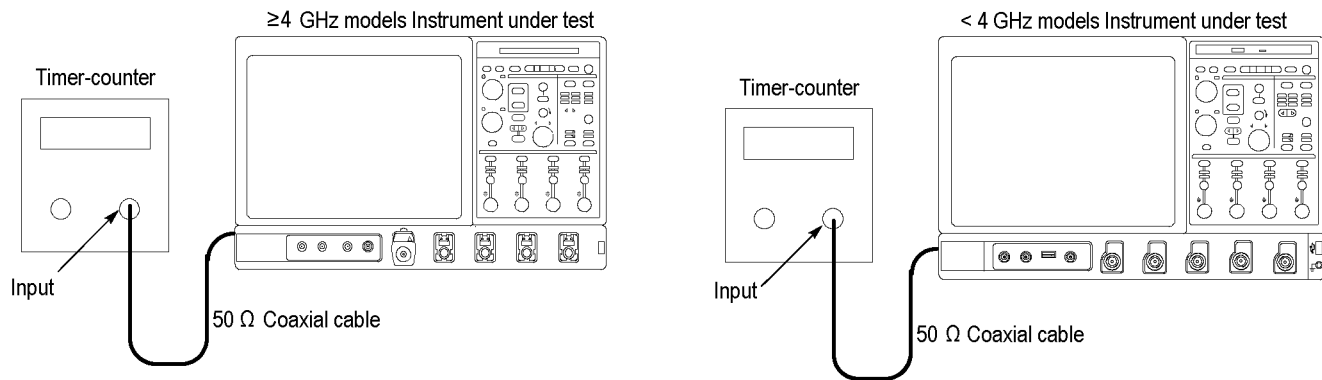


Figure 2-18: Initial test hookup

1. *Install the test hookup and preset the instrument controls:*
 - a. *Hook up the test-signal source:* Connect the input of the timer-counter to **AUX Out** (< 4 GHz models) or **REF OUT** (\geq 4 GHz models). (See Figure 2-18.)
 - Set the timer-counter gate to 1s.
 - Set the timer-counter to count the 10 MHz reference output.
 - b. *Initialize the instrument:* Press the **Default Setup** button.
 - c. < 4 GHz models: Display menu mode. Select Utilities > External Signals and press **Ref Out**.
2. *Confirm the time base is within limits for accuracies:*
 - a. *Check long-term sample rate, delay time accuracies, and reference output frequency:*
 - CHECK that the count on the timer-counter is within limits (see limits on page 2-35).
 - Enter the count on the test record.
3. *Disconnect the hookup:* Disconnect the equipment from the instrument.

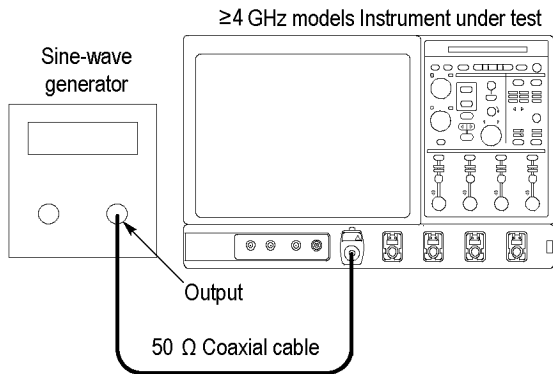


Figure 2-19: Initial test hookup

4. *Install the test hookup and preset the instrument controls:*
 - a. *Initialize the instrument:* Press the **Default Setup** button.
 - b. *Hook up the test-signal source:* Connect the output of the sine wave generator to **Ch 1** input. (See Figure 2-19.)
 - From the button bar, touch **Measure** and select the **Ampl** tab.
 - Touch the **Pk-Pk** button.
 - Touch the **X** (Close) button.
 - Set the Vertical **Scale** to 50 mV.
 - < 4 GHz models: Touch **Vertical**, select **Vertical Setup**, and then touch Termination **50 Ω** .
 - Set the generator for a 10.0 MHz sine wave.
 - Set the generator to output a 4 division signal. Adjust the output until the Pk-Pk readout displays 200 mV.
 - c. *Set the instrument controls:*
 - Move the cable from the **Ch 1** input to the rear-panel **Ext Ref** input (See Figure 2-20.)
 - From menu mode, touch **Utilities** and select **External Signals**.
 - Touch the **External** button to select the external reference.

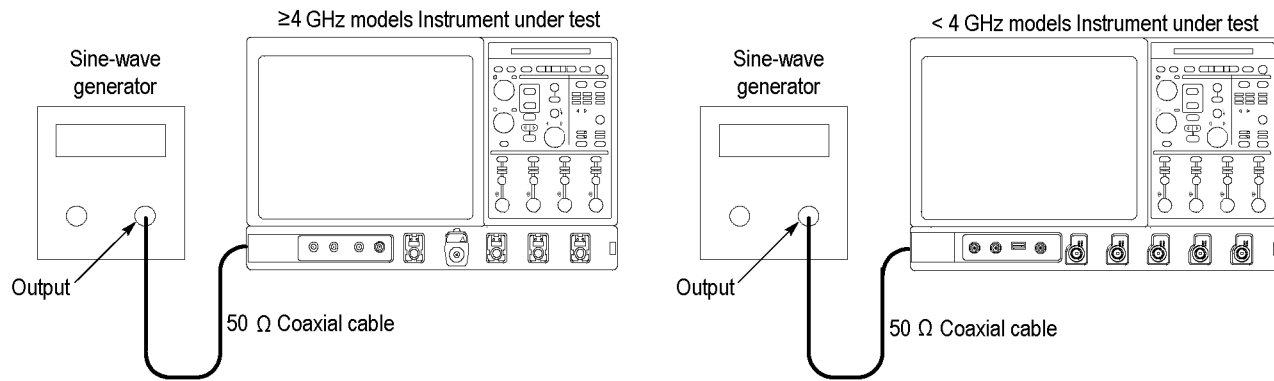


Figure 2-20: Final test hookup

5. *Confirm external reference:*
 - a. *Perform a signal path compensation:*
 - Touch **Utilities** and select **Instrument Calibration**.
 - Touch **Run SPC (Calibrate)** on some instruments) and wait for the signal path compensation to finish.
 - b. *Check the completion status:* Enter the pass/fail status in the test record. If the Status is Fail, refer the instrument to qualified service personnel.
6. *Disconnect the hookup:*
 - a. Disconnect all test equipment from the instrument.
 - b. *Set the instrument controls:*
 - From menu mode, touch **Utilities** and select **External Signals**.
 - Touch the **Internal** button to select the internal reference.
 - c. *Perform a signal path compensation:*
 - Touch **Utilities** and select **Instrument Calibration**.
 - Touch **Run SPC (Calibrate)** on some instruments) and wait for the signal path compensation to finish.

Check Delta Time Measurement Accuracy, < 4 GHz models

Equipment Required

One 50 Ω , precision coaxial cable (Item 4)
 One 50 Ω , 60 inch precision coaxial cable, male-to-male SMA connectors (Item 28)
 One Pulse Generator (Item 20)
 One BNC elbow connector (Item 24)
 One SMA "T", male to two SMA female connectors (Item 22)
 One SMA female to BNC male connector (Item 23)
 One SMA termination connector, short circuit, (Item 25)
 One SMA male-to-female BNC adapter (Item 17)

Prerequisites

(See page 2-13, *Prerequisites*.)

This procedure checks the "sample rate" portion of the Delta Time Measurement Accuracy as listed in *Specifications*. The previous procedure, that checks the reference, (See page 1-1.) verified the "PPM" portion of the delta time specification.

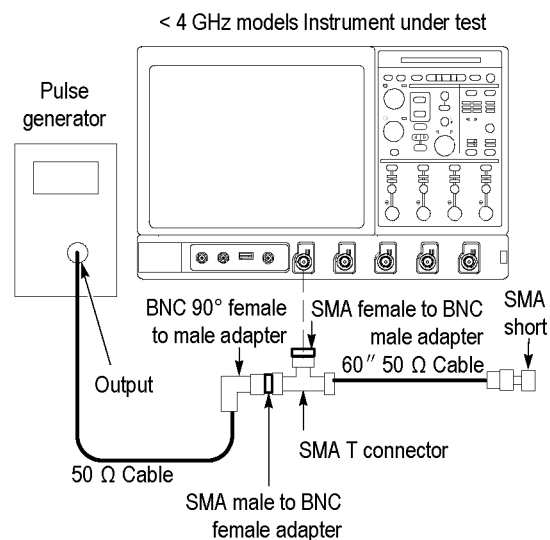


Figure 2-21: Delta time accuracy test hookup

1. *Install the test hookup and preset the instrument controls:*
 - a. *Initialize the instrument:* Press the **Default Setup** button.
 - b. *Hook up the pulse generator:*
 - < 4 GHz models: Touch **Vertical**, select **Vertical Setup**, and then touch Termination **50 Ω**.
 - Connect the pulse generator output to a **50 Ω** precision coaxial cable followed by a 90° right-angle female to male SMA adapter. The adapter is connected to one side of the female SMA T connector. The other side of the SMA T is connected to a 60 inch **50 Ω** coaxial cable. Connect the SMA short, to the remaining end of the cable. Now connect the male SMA T connector to **Ch 1** through an SMA female to BNC male adapter.
 - Set the pulse generator output for a positive-going pulse with a rise-time as shown in the table for your instrument, and for the fastest possible repetition rate (at least 1 kHz). (See Table 2-11 on page 2-78.)
 - Set the pulse generator output for about 500 mV. (This amplitude can be adjusted later to get a 5-division pulse on screen.)
 - c. *Modify the initialized front-panel control settings:*
 - Power on the pulse generator.
 - Touch **Utilities**, select **User Preferences**, select the **Units** tab, and then select the **1-2-5** button.
 - Readjust the Trigger **Level** knob so the trigger level is about 50% of the rising edge of the positive pulse.
 - Press **Autoset**. You may see both positive and negative pulses. Adjust the Trigger **Level** knob so the trigger level is about 50% of the rising edge of the positive pulse.
 - From the button bar, touch the **Horiz/Acq** button and select the **Acquisition** tab. Press the **RT** button to turn on Real Time Only.
 - < 4 GHz models: Set the horizontal **SCALE** as indicated in the following table.

Table 2-11: Delta time measurement settings

Instrument	Pulse generator rise and fall time range	Horizontal scale setting	Sample rate	Delta time accuracy limit
DPO7354	≤ 150 ps	10 ns/div	10 GS/s	≤ 6.0 ps
DPO7254	≤ 150 ps	10 ns/div	10 GS/s	≤ 6.0 ps
DPO7104	≤ 150 ps	10 ns/div	10 GS/s	≤ 6.0 ps
DPO7054	≤ 150 ps	20 ns/div	5 GS/s	≤ 12.0 ps

- Adjust the generator output or instrument vertical scale and position as necessary to obtain at least **5 divisions** of the **positive** pulse.
- d. *Set up for statistics measurements:*
- Press **Run/Stop** button to freeze the display.
 - From the button bar, touch **Measure** and select the **Time** tab to bring up the Time Measurements menu.
 - Touch the **Pos Width** button.
 - Touch Setups **Statistics** and then touch **All**. Touch **Reset** to reset the statistics.
 - Touch **Weight n=**. On the keypad press **1000**, then **Enter**. Touch **Setup**.
 - Touch Setups **Ref Levs** and then touch **Absolute**.
 - Touch **MidRef**. Using the keypad or multipurpose knobs, set the mid reference level. Set the reference level near the center of the pulse, above any noise, and below any overshoot or ringing on the pulse. Touch the **X (Close)** button.
 - Press the **Run/Stop** button to start the acquisitions.
 - Wait about 30 seconds.
 - Press **Run/Stop** button to freeze the display.
 - Read the Std Dev statistic measurement.
 - The standard deviation (St Dev) measurement must be less than or equal to the Delta-time accuracy limit for your instrument. (See Table 2-11.)
 - Enter the result for delta time on the test record.
- e. *Repeat for all other channels:*
- Note the vertical scale setting of the channel just confirmed.
 - Press the Vertical channel button for the channel just confirmed to remove the channel from display.
 - Touch **Measure** and then **Clear All** to remove the measurement.
 - Press the front-panel button that corresponds to the channel you are to confirm.
 - Set vertical scale to the setting noted in step e, first bullet.
 - Press the Trigger **Source** button to toggle the source to the channel selected.

- < 4 GHz models: Touch **Vertical**, select **Vertical Setup**, and then touch Termination **50 Ω**.
- Move the test hookup to the channel you selected.
- Press **Run/Stop** button to start the display.
- Repeat step d.
- Touch **Utilities**, select **User Preferences**, select the **Units** tab, and then select the **1-2-3** button.

2. *Disconnect all test equipment from the instrument.*

Check Delta Time Measurement Accuracy, ≥ 4 GHz B models

Equipment Required	Prerequisites
One 50 Ω, precision coaxial cable (Item 4)	(See page 2-13, <i>Prerequisites</i> .)
One sine-wave generator (Item 9)	
One adapter (Item 19)	

This procedure checks the Delta Time Measurement Accuracy as listed in *Specifications*.

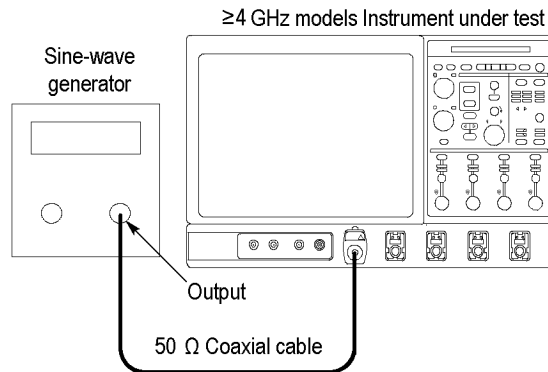


Figure 2-22: Delta time accuracy test hookup

1. *Install the test hookup and preset the instrument controls:*
 - a. *Initialize the instrument:* Press the **Default Setup** button.
 - b. *Hook up the sine-wave generator:*
 - Connect the sine-wave output of the sine-wave generator through a **50 Ω** precision coaxial cable to **Ch 1** through an adapter.
 - Power on the generator.
 - Set the sine-wave generator to output a 2.45 GHz sine wave. (See Table 2-12 on page 2-81.)
 - Set the generator output for 400 mV. (This amplitude can be adjusted later to get a 8-division pulse on screen.)
 - Set the Vertical Scale to 50 mV per division.
 - c. *Modify the initialized front-panel control settings:*
 - Readjust the Trigger **Level** knob so the trigger level is at 50% of the rising edge of the sine wave.
 - From the button bar, touch the **Horiz/Acq** button. Select the **Manual** button to turn on Manual Mode.
 - Select the **Acquisition** tab. Press the **IT** button to turn on Interpolate Time Only.
 - From the button bar, touch the **Vertical** button.
 - Select **Digital Filters (DSP) Enabled**.
 - Set the record length and sample rate as indicated in the following table.

Table 2-12: Delta time measurement settings

Bandwidth	Rise and fall time	Sine wave generator frequency	Record Length	Sample rate	Delta time accuracy limit	Burst Width
DPO72004B, DPO71604B and DPO71254B where appropriate						
20 GHz	≤ 24 ps	12.2 GHz	1500	500 GS/s	≤ 1.02 ps	2 ns
18 GHz	≤ 27 ps	10.86 GHz	1500	500 GS/s	≤ 930 fs	2 ns
16 GHz	≤ 30 ps	9.77 GHz	2500	500 GS/s	≤ 900 fs	4 ns
12 GHz	≤ 40 ps	7.33 GHz	2500	500 GS/s	≤ 940 fs	4 ns
8 GHz	≤ 60 ps	4.89 GHz	5000	500 GS/s	≤ 1.03 ps	10 ns
6 GHz	≤ 80 ps	3.67 GHz	5000	500 GS/s	≤ 1.13 ps	10 ns
4 GHz	≤ 120 ps	2.45 GHz	5000	500 GS/s	≤ 1.30 ps	10 ns
DPO70804B, DPO70604B and DPO70404B where appropriate						
8 GHz	≤ 60 ps	4.89 GHz	5000	25 GS/s	≤ 1.14 ps	10 ns

Table 2-12: Delta time measurement settings (cont.)

Bandwidth	Rise and fall time	Sine wave generator frequency	Record Length	Sample rate	Delta time accuracy limit	Burst Width
6 GHz	≤ 80 ps	3.67 GHz	5000	25 GS/s	≤ 1.29 ps	10 ns
4 GHz	≤ 120 ps	2.45 GHz	5000	25 GS/s	≤ 1.61 ps	10 ns

- Adjust the generator output as necessary to obtain **8 divisions** of displayed waveform.
- d. *Set up for statistics measurements:*
 - From the button bar, touch **Measure** and select the **More** tab to bring up the More Measurements menu.
 - Touch the **Burst Width** button.
 - Touch Setups **Gating** and then touch **Cursor**.
 - Using the multipurpose knobs, adjust the cursors so that the burst measurement is measuring a burst of about the width shown in the table. (See Table 2-12 on page 2-81.) Adjust the cursors until the annotation markers for the burst measurement are stable on the edge of the waveform, that is they must not be jumping from the rising edge to the falling edge, or vice versa.
 - Touch **Setup**.
 - Touch Setups **Statistics** and then touch **All**. Set the Weight n= to **1000**. Touch **Reset** to reset the statistics.
 - Touch **Setup**.
 - Touch Setups **Ref Levs** and then touch **Absolute**.
 - Touch **MidRef**. Using the keypad or multipurpose knobs, set the mid reference level to **0 V**. Touch the **X (Close)** button.
- e. *Read the measurement:*
 - Read the Std Dev statistic measurement.
 - The standard deviation (St Dev) measurement must be less than or equal to the Delta-time accuracy limit for your instrument and bandwidth setting. (See Table 2-12.)
- f. *Repeat for all other appropriate bandwidths:*
 - Set the sine-wave generator to output the next appropriate frequency for your instrument from the table.
 - Using the Horizontal SCALE and the Multipurpose knobs, adjust the Horizontal SCALE and cursors so that the burst measurement is measuring about a 10 ns burst.

- Repeat step e.
 - g.** *Record the result:*
 - If the measurement at each frequency passed, enter Passed in the test record. If any measurement failed, enter Failed in the test record.
- 2.** *Disconnect all test equipment from the instrument.*

Trigger System Checks

These procedures check those characteristics that relate to the trigger system and are listed as checked in *Specifications*.

Check Time Qualified Trigger Accuracy

Equipment Required	Prerequisites
One sine wave generator (Item 9)	(See page 2-13, <i>Prerequisites</i> .)
One 2X attenuator (Item 26)	
One 50 Ω , precision coaxial cable (Item 4)	
One SMA male-to-female BNC adapter (Item 19)	

- 1.** *Install the test hookup and preset the instrument controls:*
 - a.** *Initialize the instrument:* Press the **Default Setup** button.
 - b.** *Modify the default setup:*
 - < 4 GHz models: Set the horizontal **Scale** to 2.5 ns.
 - \geq 4 GHz models: Set the horizontal **Scale** to 2 ns.
 - < 4 GHz models: From the button bar, click the **Vertical** button; then click the Termination **50 Ω** button.
 - c.** *Hook up the test-signal source:* Connect the output of the sine wave generator to Ch 1 as shown in the following figure.

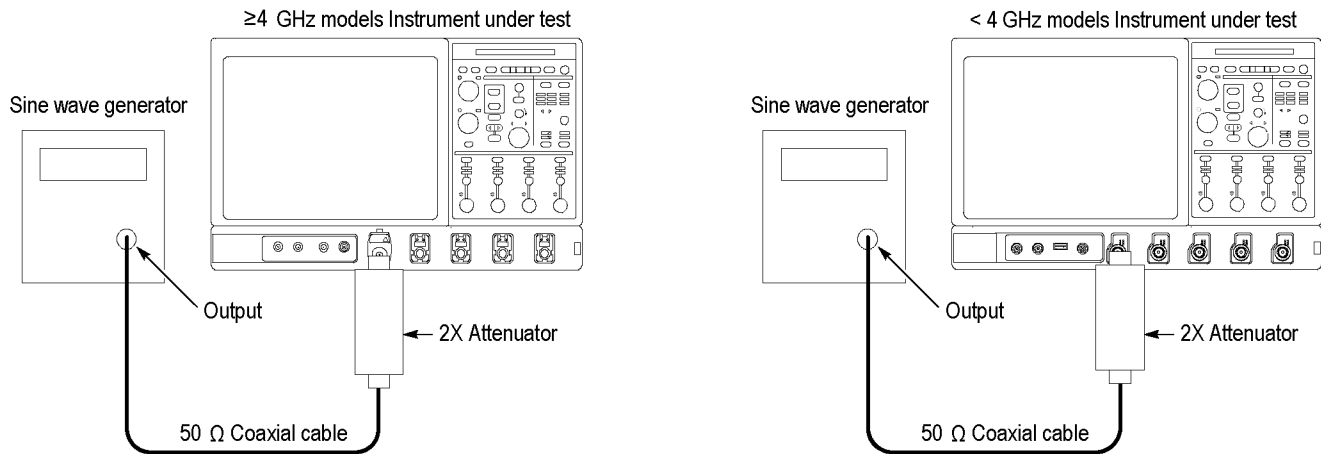


Figure 2-23: Initial test hookup

- d. *Set the trigger mode:* Press the Trigger **Mode** button to toggle it to **Normal**.

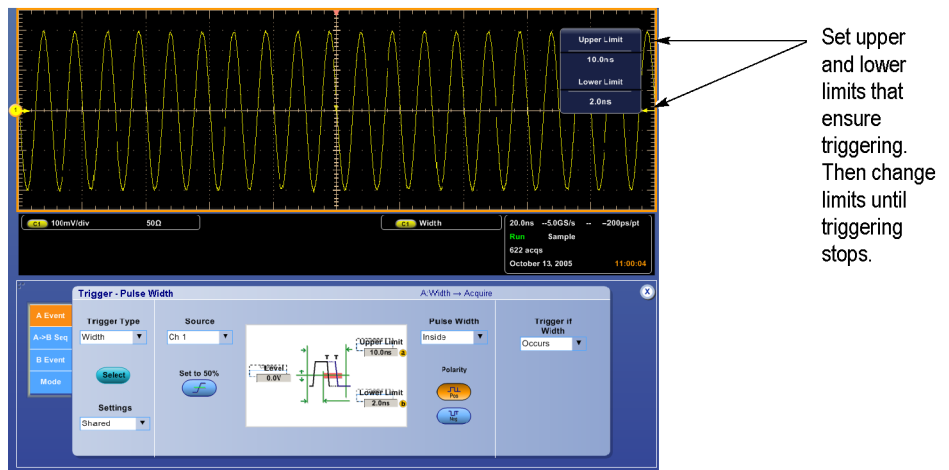


Figure 2-24: Measurement of time accuracy for pulse and glitch triggering

2. *Confirm the trigger system is within time-accuracy limits for time qualified trigger accuracy (time range <math>< 1 \mu\text{s}</math>):*
 - a. *Set upper and lower limits that ensure triggering at 100 MHz:* (See Figure 2-24.)
 - Press the front-panel **Advanced** button and select the **A Event** tab; then pull down on Trigger Type and select **Width** triggering.
 - Pull down Pulse Width and select **Inside** limits.
 - Touch **Upper Limit**. Use the keypad to set the upper limit to 10 ns.
 - Touch **Lower Limit**. Use the keypad to set the lower limit to 2 ns.

b. *Display the test signal:*

- Set the Horizontal **Scale** to 20 ns.
- Set the output of the sine wave generator for a 100 MHz, five-division sine wave on screen. Set the Vertical **Scale** to 20 mV (the waveform will overdrive the display).
- Press **PUSH-SET 50%**.

c. *Check against limits:* Do the following subparts in the order listed.

- While doing the following subparts, monitor the display (it will stop acquiring) and the front-panel light **Trig'd** (it will extinguish) to determine when triggering is lost.
- ≥ 4 GHz models: Press the multipurpose knobs until Fine is on.
- Use the multipurpose knob to *increase* the **Lower Limit** readout until triggering is lost.
- CHECK that the **Lower Limit** readout, after the instrument stops triggering, is within the following limits:

Model	Limit
< 4 GHz models	3.5 ns to 6.5 ns
≥ 4 GHz models	4.77 ns to 5.23 ns

- Enter the time on the test record.
- Use the keypad to return the **Lower Limit** to 2 ns and reestablish triggering.
- Touch **Upper Limit**; then use the multipurpose knob to slowly *decrease* the **Upper Limit** readout until triggering stops.

- CHECK that the **Upper Limit** readout, after the instrument loses triggering, is within the following limits:

Model	Limit
< 4 GHz models	3.5 ns to 6.5 ns, inclusive
≥ 4 GHz models	4.77 ns to 5.23 ns, inclusive

- Enter the time on the test record.
3. *Confirm the trigger system is within time-accuracy limits for pulse-glitch or pulse-width triggering (time range $\geq 1 \mu\text{s}$):*
 - a. *Set upper and lower limits that ensure triggering at 250 kHz:*
 - Touch **Upper Limit**. Use the keypad to set the upper limit to 4 μs .
 - Touch **Lower Limit**. Use the keypad to set the lower limit to 500 ns.
 - b. *Display the test signal:*
 - < 4 GHz models: Set the Horizontal **Scale** to 5 μs .
 - ≥ 4 GHz models: Set the Horizontal **Scale** to 4 μs .
 - Set the Vertical **Scale** to 100 mV.
 - Set the output of the sine wave generator for a 250 kHz, five-division sine wave on screen. Set the Vertical **Scale** to 20 mV (the waveform will overdrive the display).
 - Press **PUSH-SET 50%**.
 - c. *Check against limits:* Do the following subparts in the order listed.
 - ≥ 4 GHz models: Press the multipurpose knobs until Fine is on.
 - Use the multipurpose knob to *increase* the **Lower Limit** readout until triggering is lost.

- CHECK that the **Lower Limit** readout, after the instrument stops triggering, is within the following limits:

Model	Limit
< 4 GHz models	1.9 ms to 2.1 μ s, inclusive
\geq 4 GHz models	1.9 ms to 2.1 μ s, inclusive

- Enter the time on the test record.
- Use the keypad to return the **Lower Limit** to 500 ns and reestablish triggering.
- Touch **Upper Limit**; then use the multipurpose knob to slowly *decrease* the **Upper Limit** readout until triggering stops.
- CHECK that the **Upper Limit** readout, after the instrument loses triggering, is within the following limits:

Model	Limit
< 4 GHz models	1.9 ms to 2.1 μ s, inclusive
\geq 4 GHz models	1.9 ms to 2.1 μ s, inclusive

- Enter the time on the test record.

4. *Disconnect the hookup:* Disconnect the equipment from the instrument.

Check Sensitivity, Edge Trigger, DC Coupled

Equipment required	Prerequisites
One leveled sine wave generator (Item 9)	(See page 2-13, <i>Prerequisites</i> .)
Three precision 50 Ω coaxial cables (Item 21)	
Two SMA female to BNC male adapters (item 23)	
Three SMA female-to-female adapters (item 16)	
One 10X attenuator (Item 1)	
One power splitter (Item 11)	
Male N-to-BNC adapter (Item 14)	
One SMA adapter (Item 19)	
One 5X attenuator (Item 2)	
One 2X attenuator (Item 26)	
< 4 GHz models, one 50 Ω termination (item 3)	

NOTE. *The sine wave generator output amplitude must be leveled to within 0.35 dB of the reference frequency (10 MHz) through the trigger frequency being tested.*

Refer to the Sine Wave Generator Leveling Procedure if your sine wave generator does not have automatic output amplitude leveling. (See page 2-110.)

1. *Install the test hookup and preset the instrument controls:*
 - a. *Initialize the instrument:* Press the **Default Setup** button.
 - b. *Modify the initialized front-panel control settings:*
 - Set the Horizontal **Scale** to 20 ns.
 - < 4 GHz models: Touch **Vertical**, select **Vertical Setup**, and then touch Termination **50 Ω** .
 - Press the Trigger **Mode** button to toggle it to **Normal**.
 - From the button bar, touch **Horiz/Acq** and select the **Acquisition** tab.
 - Touch **Average** and set the number of averages to **16**.
 - Touch the **Equivalent ET** button.
 - c. *Hook up the test-signal source:*
 - Connect the signal output of the generator to a power splitter. Connect one output of the power splitter to **Ch 1** as shown in the following figure. Connect the other output of the power splitter to the **Aux Input** as in the following figure.

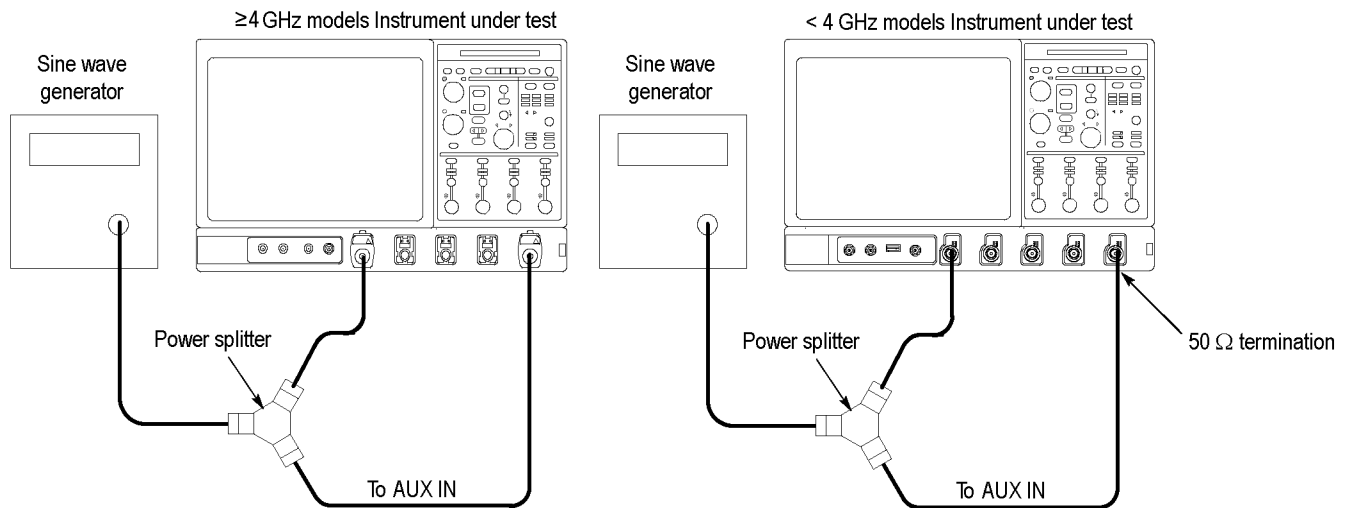


Figure 2-25: Initial test hookup

2. *Confirm the trigger system is within sensitivity limits (50 MHz):*
 - a. *Display the test signal:*
 - Set the generator frequency to 50 MHz.
 - From the button bar, touch **Measure**.
 - Touch Setup **Ref Levs**; then touch the **Min-Max** button.

- Touch the **Setup** button and select the **Ampl** tab; then touch the **Amplitude** button.
- Touch the X (close) button.
- Press **Push-Set 50%**.
- Set the generator amplitude on screen as follows:

Model	Divisions
≥ 4 GHz models	4 divisions
< 4 GHz models	7 divisions

- Now fine adjust the generator output until the **Ch 1 Amplitude** readout indicates the amplitude is as follows (Readout may fluctuate):

Model	Amplitude
≥ 4 GHz models	400 mV
< 4 GHz models	700 mV

- Disconnect the 50 Ω precision coaxial cable at **Ch 1** and reconnect it to **Ch 1** through a 10X attenuator.

b. *Check the A trigger system for stable triggering at limits:*

- Read the following definition: A stable trigger is one that is consistent; that is, one that results in a uniform, regular display triggered on the selected slope (positive or negative). This display should *not* have its trigger point switching between opposite slopes, nor should it roll across the screen. At horizontal scale settings of 2 ms/division and faster, **Trig'd** will remain constantly lighted. It will flash for slower settings.
- Press the Trigger **Slope** button to select the positive slope.
- Adjust the Trigger **Level** knob so that there is a stable trigger. CHECK that the trigger is stable for the test waveform on the positive slope.
- Press the Trigger **Slope** button to select the negative slope. Adjust the Trigger **Level** knob so that there is a stable trigger.
- CHECK that the trigger is stable for the test waveform on the negative slope.
- Enter pass or fail in the test record.
- Leave the trigger system triggered on the positive slope of the waveform before continuing to the next step.

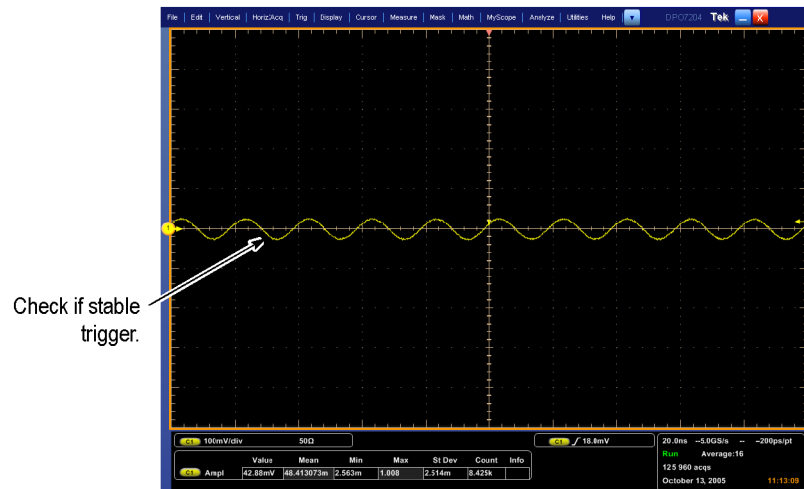


Figure 2-26: Measurement of trigger sensitivity - 50 MHz results shown

- c. ≥ 4 GHz models: *Check B trigger system for stable triggering at limits:*
Do the following subparts in the order listed.
- From the button bar touch **Trig**, select the **A Event** tab, and set the **Source** to Line.
 - Select the **A->B Seq** tab, and touch the A then B **Trig After Time** button.
 - Select the **B Event** tab, and touch the **Set To 50%** button.
 - CHECK that a stable trigger is obtained for the test waveform for both the positive and negative slopes of the waveform. Use the **Trigger Level** knob to stabilize the A trigger. Touch **Level** and use the keypad or the multipurpose knob/Fine button to stabilize the B trigger. Touch one of the Slope buttons to switch between trigger slopes. (See Figure 2-26 on page 2-90.)
 - Enter pass or fail in the test record.
 - Leave the Delayed trigger system triggered on the positive slope of the waveform before continuing to the next step. Also, return to the A trigger: select the **A->B Seq** tab and touch the A->B Sequence **A Only** button. Then select the **A Event** tab.
 - Select the **A Event** tab, and set the **Source** to CH1.
 - Press the X (Close button).
3. *Confirm the AUX Trigger input (at 50 MHz):*
- a. *Display the test signal:*
- Remove the 10X attenuator and reconnect the cable to **Ch 1**.
 - Set the signal amplitude as follows: **2.5 divisions**

- Now fine adjust the generator output until the **Ch 1 Amplitude** readout indicates the amplitude is as follows (Readout may fluctuate): **250 mV**
- b.** *Check the AUX trigger source for stable triggering at limits:* Do the following in the order listed.
- Use the definition for stable trigger from step 2 substep b.
 - Press the Trigger **Source** button to toggle it to **Aux** (Ext).
 - Press **Push-Set 50%**.
 - CHECK that a stable trigger is obtained for the test waveform on both the positive and negative slopes. Press the Trigger **Slope** button to switch between trigger slopes. Use the Trigger **Level** knob to stabilize the trigger if required.
 - Enter pass or fail in the test record.
 - Leave the trigger system triggered on the positive slope of the waveform before proceeding to the next check.
 - Press the Trigger **Source** button to toggle it to **Ch 1**.
- 4.** *Confirm that the A trigger system is within sensitivity limits (full bandwidth):*
- a.** *Set the Horizontal Scale:* Set the Horizontal **Scale** to 200 ps.
- b.** *Display the test signal:*
- Set the generator frequency to full bandwidth as follows:

Model	Generator frequency
≥ 4 GHz models	4 GHz
DPO7354	3.5 GHz
DPO7254	2.5 GHz
DPO7104	1 GHz
DPO7054	500 MHz

- Set the generator amplitude on screen as follows:

Model	Amplitude
≥ 4 GHz models	2 divisions
DPO7354	2.5 divisions
DPO7254	6 divisions
DPO7104	6 divisions
DPO7054	6 divisions

- Now fine adjust the generator output until the **Ch 1 Amplitude** readout indicates the amplitude is as follows (Readout may fluctuate):

Model	Amplitude
≥ 4 GHz models	200 mV
DPO7354	250 mV
DPO7254	600 mV
DPO7104	600 mV
DPO7054	600 mV

- Disconnect the cable at **Ch 1** and reconnect it to **Ch 1** through an attenuator:

Model	Attenuator
≥ 4 GHz models	2X
DPO7354	None
DPO7254	5X
DPO7104	5X
DPO7054	5X

- Check that a stable trigger is obtained.

c. Repeat step 2, substep b and c for the full bandwidth selected.

Table 2-13: Trigger settings for ≥ 4 GHz models

Generator amplitude	Generator frequency		
	A trigger	B trigger	Horizontal scale
	10 MHz	10 MHz	200 ns
150 mV	6 GHz	6 GHz	200 ps
200 mV	8 GHz	NA	200 ps
500 mV	11 GHz	9 GHz	200 ps

d. ≥ 4 GHz models: *Display the test signal:*

- Remove the attenuator
- Set the generator frequency to 10 MHz. Set the Horizontal SCALE as indicated in the table. (See Table 2-13.)
- Fine adjust the generator output until the **Ch 1 Amplitude** readout indicates the amplitude listed in the table for a frequency not yet checked. (See Table 2-13.)
- Set the generator frequency to the frequency in the table that corresponds to the amplitude just set. Set the Horizontal SCALE as indicated in the table. (See Table 2-13.)

- Check that a stable trigger is obtained.
 - Read the following definition: A stable trigger is one where the **Trig'd** LED will remain constantly lighted.
 - Press the Trigger **Slope** button to select the positive slope.
 - Adjust the Trigger **Level** knob so that there is a stable trigger. CHECK that the trigger is stable.
 - Press the Trigger **Slope** button to select the negative slope. Adjust the Trigger **Level** knob so that there is a stable trigger.
 - CHECK that the trigger is stable.
 - Enter pass or fail in the test record.
 - Leave the trigger system triggered on the positive slope of the waveform before continuing to the next step.
 - From the button bar touch **Trig**, select the **A Event** tab, and set the **Source** to Line.
 - If the generator frequency is different for the B trigger, set the generator frequency to the frequency in the table that corresponds to the amplitude in the table. (See Table 2-13.)
 - From the button bar touch **Trig**, select the **A->B Seq** tab, and touch the A then B **Trig After Time** button.
 - Select the **B Event** tab, and touch the **Set To 50%** button.
 - CHECK that a stable trigger is obtained for the test waveform for both the positive and negative slopes of the waveform. Use the **Trigger Level** knob to stabilize the A trigger. Touch **Level** and use the keypad or the multipurpose knob/Fine button to stabilize the B trigger. Touch one of the Slope buttons to switch between trigger slopes. (See Figure 2-26 on page 2-90.)
 - Enter pass or fail in the test record.
 - Leave the B trigger system triggered on the positive slope of the waveform before continuing to the next step. Also, return to the A trigger: select the **A->B Seq** tab and touch the A->B Sequence **A Only** button. Then select the **A Event** tab.
 - From the button bar touch **Trig**, select the **A Event** tab, and set the **Source** to CH1.
 - Press the X (Close button).
- e. ≥ 4 GHz models: Repeat step 4, substep d until each frequency in the table is checked. (See Table 2-13 on page 2-92.)

f. *Display the test signal (Aux trigger at bandwidth):*

- Set the Horizontal Scale to 1 ns.
- < 4 GHz models: Remove the attenuator and reconnect the cable to **Ch 1**.
- \geq 4 GHz models: Reconnect the cable to **Ch 1**.
- Set the generator frequency to full bandwidth as follows:

Model	Generator frequency
\geq 4 GHz models	1 GHz
< 4 GHz models	250 MHz

- Set the generator amplitude on screen as follows:

Model	Amplitude
\geq 4 GHz models	7 divisions
< 4 GHz models	7 divisions

- Now fine adjust the generator output until the **Ch 1 Amplitude** readout indicates the amplitude is as follows (Readout may fluctuate):

Model	Amplitude
\geq 4 GHz models	700 mV
< 4 GHz models	700 mV

- Disconnect the cable at **Aux In** and reconnect it to **Aux In** through an attenuator:

Model	Attenuator
\geq 4 GHz models	2X
< 4 GHz models	2X

g. Repeat step 3, substep f only, for the full bandwidth selected.

NOTE. *You just checked the trigger sensitivity. If desired, you may repeat steps 1 through step 4 substep c for the other channels (Ch 2, Ch 3, and Ch 4).*

5. *Disconnect the hookup:* Disconnect the equipment from Aux In and the channel last tested.

Output Signal Checks

The procedure that follows checks those characteristics of the output signals that are listed as checked under *Warranted Characteristics* in *Specifications*.

Check Aux Trigger Out

Equipment required

One precision 50 Ω coaxial cable (Item 4)

Prerequisites

(See page 2-13, *Prerequisites*.) Also, the instrument must have passed *Check DC Voltage Measurement Accuracy*. (See page 2-39, *Check DC Voltage Measurement Accuracy*.)

1. Install the test hookup and preset the instrument controls:

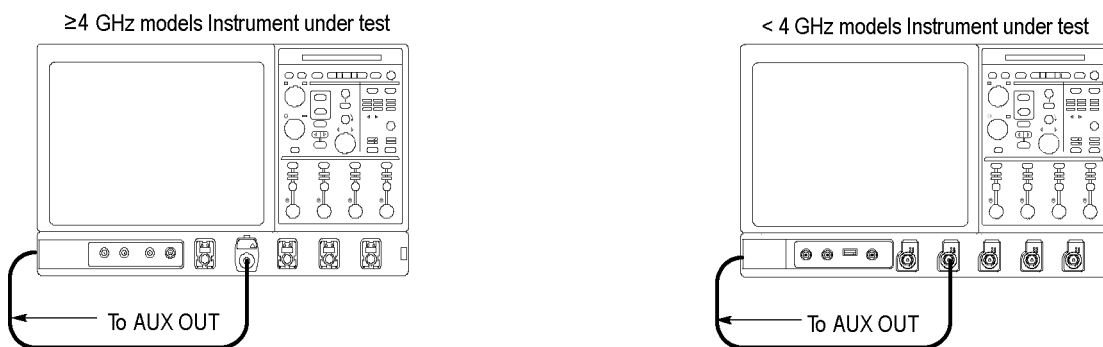


Figure 2-27: Initial test hookup

- a. *Hook up test-signal source:* Connect **Aux Out** to **Ch 2** through a 50 Ω precision cable and an adapter. (See Figure 2-27.)
 - b. *Initialize the instrument:* Press the **Default Setup** button.
 - c. *Modify the initialized front-panel control settings:*
 - Press the Vertical **Ch 1** button to toggle it off.
 - Set the Horizontal **Scale** to 200 μ s.
 - From the button bar, touch **Horiz/Acq** and select the **Acquisition** tab.
 - Touch **Average** and set the number of averages to **64**.
 - Touch the **X** (close) button.
2. *Confirm Aux Out is within limits for logic levels:*
- a. *Display the test signal:*
 - Press the Vertical **Ch 2** button to display that channel.
 - < 4 GHz models: Touch **Vertical**, select **Vertical Setup**, and then touch Termination **50 Ω** .

- Set the Vertical **Scale** to 500 mV.
 - Use the Vertical **Position** knob to center the display on screen.
- b. Measure logic levels:**
- From the button bar, touch **Measure** and select the **Ampl** tab.
 - Touch the **High** and **Low** buttons.
 - Touch the **X** (close) button.
- c. Check Aux Out output against limits:** CHECK that the **Ch 2 High** readout is ≥ 1.0 volt and that the **Ch 2 Low** readout ≤ 0.25 volts. (See Figure 2-28.)
- 3. Disconnect the hookup:** Disconnect the test setup from the inputs and outputs.

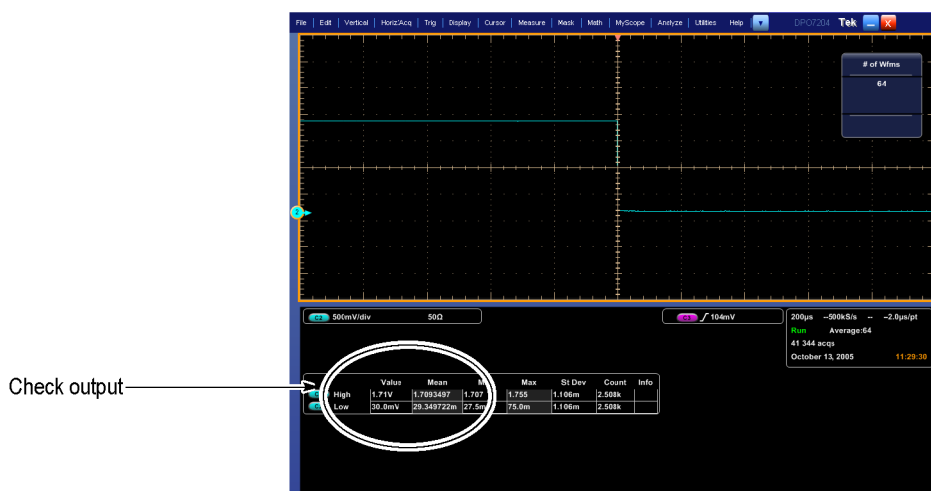


Figure 2-28: Measurement of trigger out limits

Check Probe Compensation or Fast Edge Output

Equipment required

One BNC to Minigrabber adapter (item 18)
 One precision 50 Ω coaxial cable (Item 21)
 One DC calibration generator (Item 6)
 One adapter (Item 19)

Prerequisites

(See page 2-13, *Prerequisites*.) Also, the instrument must have passed *Check Timebase and Delay Time Accuracy and Reference*. (See page 2-74.)

1. Install the test hookup and preset the instrument controls:

a. Hook up test-signal: Refer to the following figure.

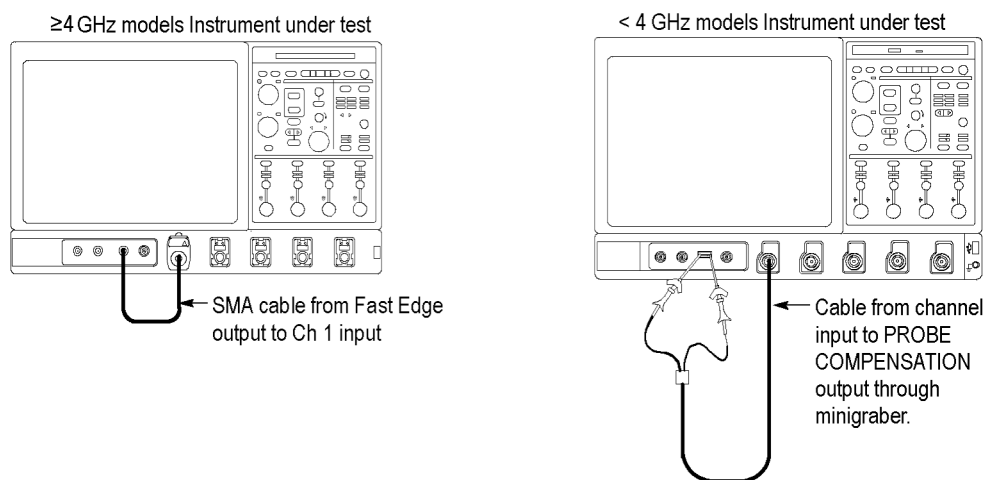


Figure 2-29: Initial test hookup

b. Initialize the instrument: Press the **Default Setup** button.

c. Modify the initialized front-panel control settings:

- Set the **Vertical Scale** to 200 mV.
- Set the **Horizontal Scale** to 200 μ s.
- Press **Push-Set 50%**.
- Use the **Vertical Position** knob to center the display on screen.
- From the button bar, touch **Horiz/Acq** and select the **Acquisition** tab.
- Touch **Average** and set the number of averages to **128**.

2. Confirm the Probe Compensator signal:



Figure 2-30: Measurement of probe compensator frequency

a. Save the probe compensation signal in reference memory:

- From the menu bar, touch **File**; **Save As . . .**, **Waveform**, and then **Ref 1**.
 - Touch the **Save** button to save the probe compensation signal in reference 1.
 - < 4 GHz models: Disconnect the signal from **Ch 1** and the probe compensation connector.
 - \geq 4 GHz models: Disconnect the signal from **Ch 1** and the Fast Edge connector.
 - Touch **File**; **Recall . . .**, **Waveform**, and then select the file name.
 - Touch the **Recall** button to recall the probe compensation signal to the display.

b. Hook up the DC standard source:

- Set the output of a DC calibration generator to off or 0 volts.
 - Connect the output of a DC calibration generator to **Ch 1**. Refer to the following figure.

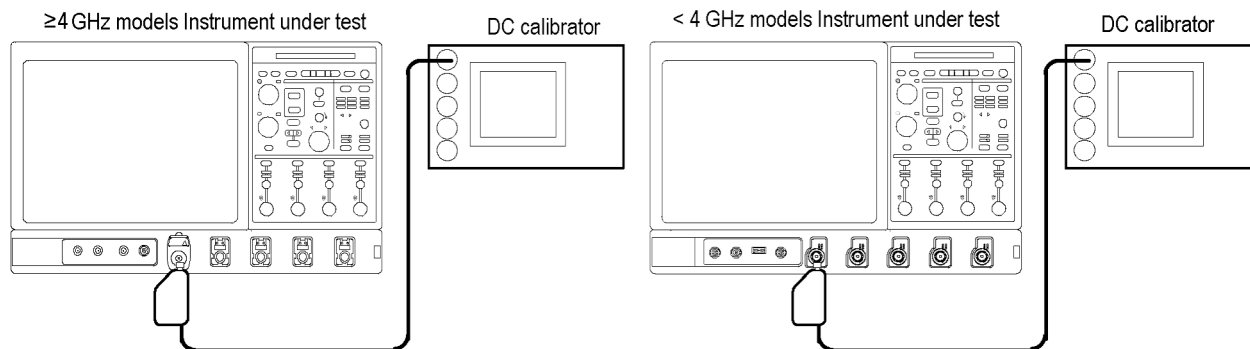


Figure 2-31: Subsequent test hookup

- c. *Measure amplitude of the probe compensation signal:*
 - From the button bar, touch **Horiz/Acq** and select the **Acquisition** tab.
 - Touch **Average** and set the number of averages to **16** using the keypad or the multipurpose knob.
 - Adjust the output of the DC calibration generator until it precisely overlaps the top (upper) level of the stored probe compensation signal.
 - Record the setting of the DC generator.
 - Adjust the output of the DC calibration generator until it precisely overlaps the base (lower) level of the stored probe compensation signal.
 - Record the setting of the DC generator.
- d. Press the **X** (close) button to remove the menus from the display. (See Figure 2-32.)

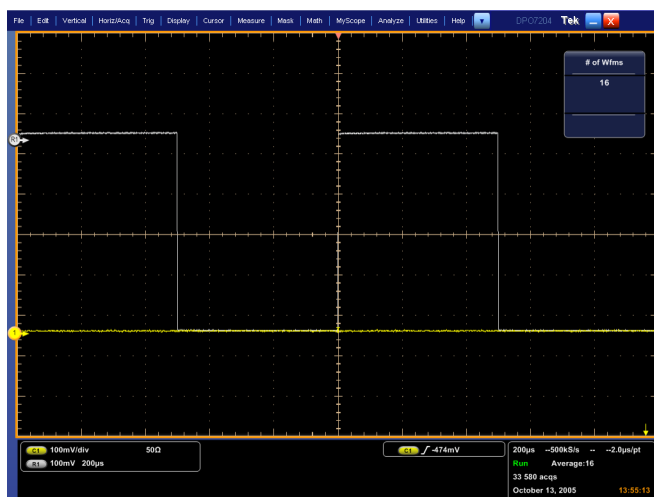


Figure 2-32: Measurement of probe compensator amplitude

e. *Check against limits:*

- Subtract the value just obtained (base level) from that obtained previously (top level).
- CHECK that the difference obtained is within limits as follows:

Model	Limits
≥ 4 GHz models	352 mV to 528 mV
< 4 GHz models	985 mV to 1015 mV

- Enter voltage difference on test record.

3. *Disconnect the hookup:* Disconnect the equipment from **Ch 1**.

Serial Trigger Checks (Optional on Some Models)

These procedures check those characteristics that relate to the serial trigger system and are listed as checked in *Specifications*.

Check Serial Trigger Baud Rate Limits

Equipment required	Prerequisites
One precision 50 Ω coaxial cable (Item 4) One sine-wave generator (Item 9) One adapter (Item 19)	(See page 2-13, <i>Prerequisites</i> .) Also, the instrument must have passed <i>Check DC Voltage Measurement Accuracy</i> . (See page 2-39, <i>Check DC Voltage Measurement Accuracy</i> .)

1. *Install the test hookup and preset the instrument controls:*

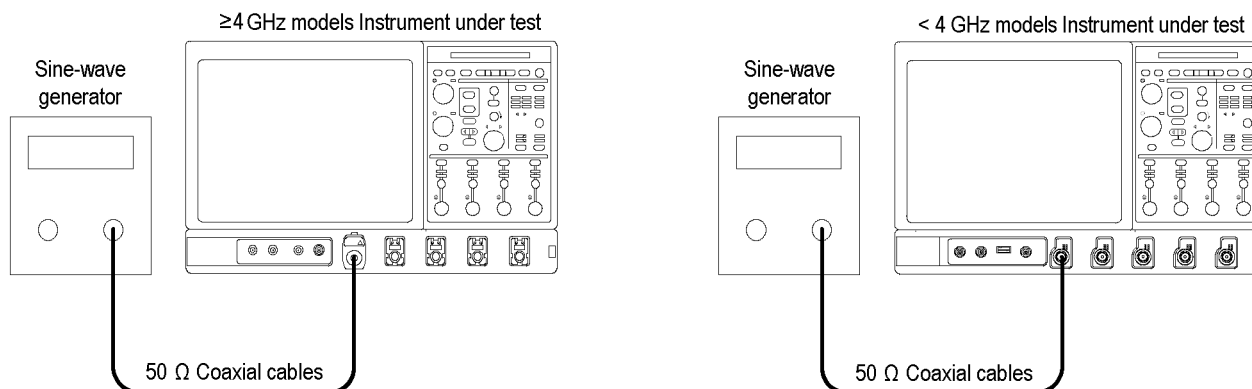


Figure 2-33: Initial test hookup

- a. *Hook Up the test-signal source:* (See Figure 2-33.)
 - Connect the sine wave output of the sine-wave generator through a 50 Ω precision coaxial cable to Ch 1 through an adapter.
 - Set the sine-wave generator to output a 416 MHz sine wave.
- b. *Initialize the instrument:* Press the **Default Setup** button.
- c. *Modify the initialized front-panel control settings:*
 - Set the vertical **Scale** to 50 mV per division.
 - < 4 GHz models: Touch **Vertical**, select **Vertical Setup**, and then touch Termination **50 Ω**.
 - Set the horizontal **Scale** to 1 ns per division.
 - Adjust the sine-wave generator output for 4 divisions of amplitude centered on the display.
 - Adjust the trigger **Level** to trigger at 25% (-1 division) on the sine wave.

Table 2-14: Serial pattern data

Serial pattern data	Trigger location
B6DB 6DB6 DB6D B6DB ₁₆	One UI before the 0
6DB6 DB6D B6DB 6DB6 ₁₆	At the 0
DB6D B6DB 6DB6 DB6D ₁₆	One UI after the 0

2. *Verify that the signal path can do isolated 0 and pattern matching circuits can do isolated 1:*
 - a. From the button bar, touch **Cursors** and then the **Setup** button. If using the menu bar, touch **Cursors** and then select **Cursor Setup**. Touch the **Cursor** button to toggle it on and display the cursors.
 - b. Set the Tracking Mode to **Tracking**.
 - c. Touch the **X** (close) button.
 - d. From the button bar, touch **Trig**, select the **A Event** tab, and touch the **Select** button.
 - e. Touch the **Serial** button, set Coding to NRZ, and then set the Standard to **GB Ethernet**.
 - f. Touch the **Edit** button.
 - g. Set the Format to **Hex** and then touch the **Clear** button.
 - h. Enter data into the Serial Pattern Data field for one of the settings in the table that is not yet checked, starting with the first setting. (See Table 2-14.)
 - i. Touch **Enter**.
 - j. Right click on the graticule, select **Cursors > Move Cursors to Center**.
 - k. Adjust the cursors until the Δt readout equals 800 ps (one unit interval).
 - l. Center Cursor 2 in the low of the waveform just to the right of the center graticule line (See Figure 2-34 on page 2-103.)
 - m. Verify that the instrument triggers one Unit Interval (UI, one baud divided by the bit period) before the 0 in the input signal. The absolute value of the T1 cursor readout must be ≤ 200 ps. Enter pass or fail in the test record.
 - n. Touch the **Edit** and then the **Clear** button.
 - o. Enter data into Serial Pattern Data field for the next setting in the table that is not yet checked. (See Table 2-14.)
 - p. Touch **Enter**.
 - q. Center the Cursor 1 in the low of the waveform nearest the center graticule line. (See Figure 2-34 on page 2-103.)

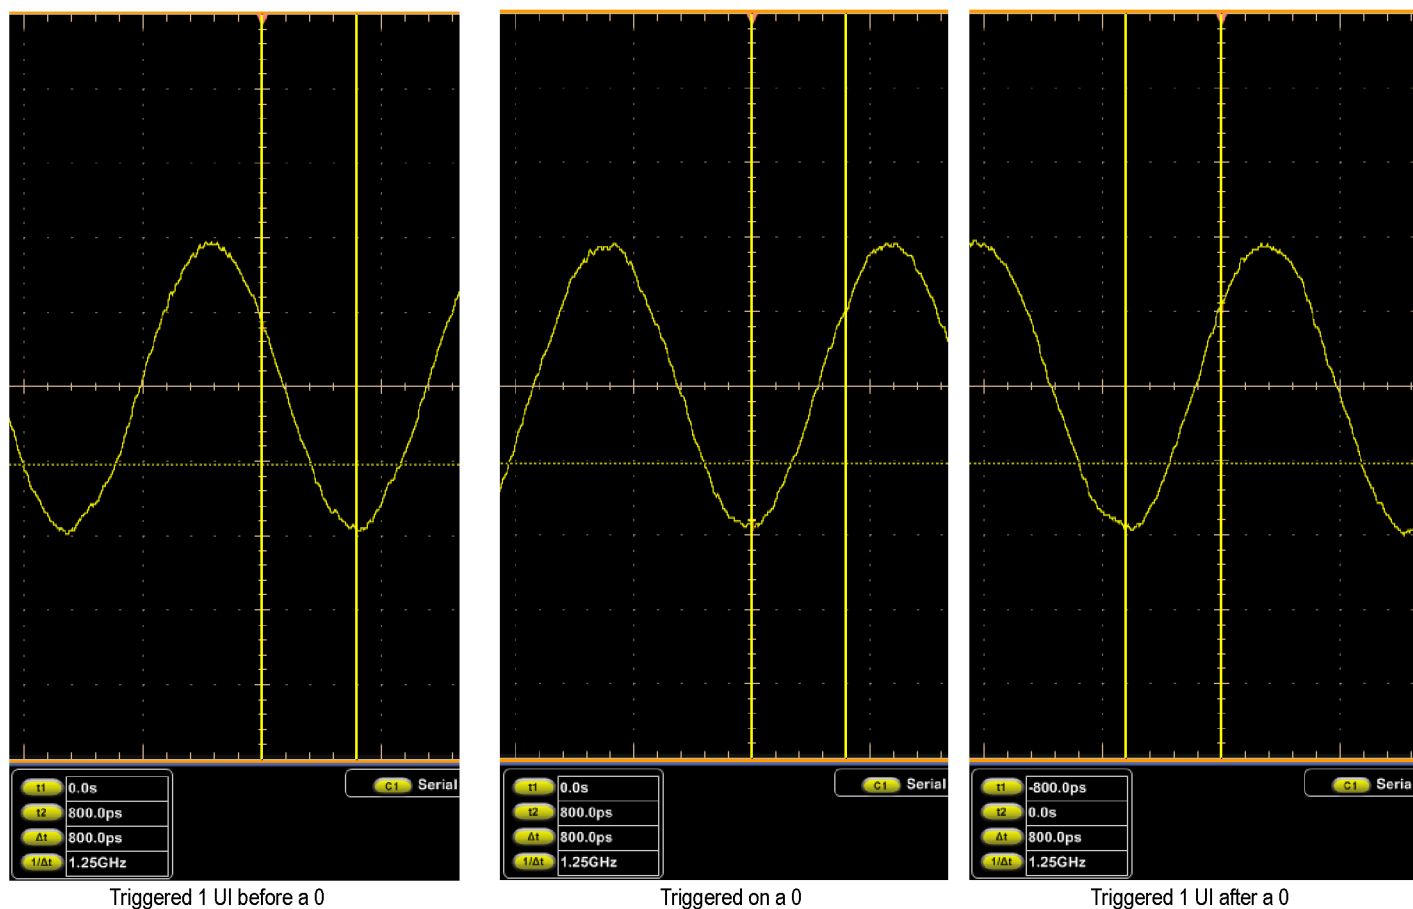


Figure 2-34: Isolated 0 triggering

- r. Verify that the instrument triggers at the 0 in the input signal. The absolute value of the T1 cursor readout must be ≤ 200 ps. Enter pass or fail in the test record.
- s. Touch the **Edit** and then the **Clear** button.
- t. Enter data into Serial Pattern Data field for the next setting in the table that is not yet checked. (See Table 2-14.)
- u. Touch **Enter**.
- v. Center Cursor 1 in the low of the waveform just to the left of the center graticule line. (See Figure 2-34 on page 2-103.)
- w. Verify that the instrument triggers one Unit Interval (UI) after the 0 in the input signal. The absolute value of the T2 cursor readout must be ≤ 200 ps. Enter pass or fail in the test record.

Table 2-15: Word recognizer data

Serial pattern data	Trigger location
4924 9249 2492 4924 ₁₆	One UI before the 1
9249 2492 4924 9249 ₁₆	At the 1
2492 4924 9249 2492 ₁₆	One UI after the 1

3. *Verify that the serial path and pattern matching circuits can do isolated Is:*
 - a. Adjust the trigger **Level** to trigger at 75% (+1 division) on the sine wave.
 - b. Touch the **Edit** and then the **Clear** button.
 - c. Enter data into the Serial Pattern Data field for one of the settings in the table that is not yet checked, starting with the first setting. (See Table 2-15.)
 - d. Touch **Enter**.
 - e. Center Cursor 2 in the high of the waveform just to the right of the center graticule line. (See Figure 2-35 on page 2-105.)
 - f. Verify that the instrument triggers one Unit Interval (UI) before the 1 in the input signal. The absolute value of the T1 cursor readout must be ≤ 200 ps. Enter pass or fail in the test record.
 - g. Touch the **Edit** and then the **Clear** button.
 - h. Enter data into the Serial Pattern Data field for the next setting that is not yet checked.
 - i. Touch **Enter**.
 - j. Center the Cursor 1 in the waveform high nearest the center graticule line. (See Figure 2-35 on page 2-105.)
 - k. Verify that the instrument triggers at the 1 in the input signal. The absolute value of the T1 cursor readout must be ≤ 200 ps. Enter pass or fail in the test record.
 - l. Touch the **Edit** and then the **Clear** button.
 - m. Enter data into the Serial Pattern Data field for the next setting in the table that is not yet checked. (See Table 2-15.)
 - n. Touch **Enter**.
 - o. Center Cursor 1 in the high of the waveform just to the left of the center graticule line. (See Figure 2-35 on page 2-105.)
 - p. Verify that the instrument triggers one Unit Interval (UI) after the 1 in the input signal. The absolute value of the T2 cursor readout must be ≤ 200 ps. Enter pass or fail in the test record.

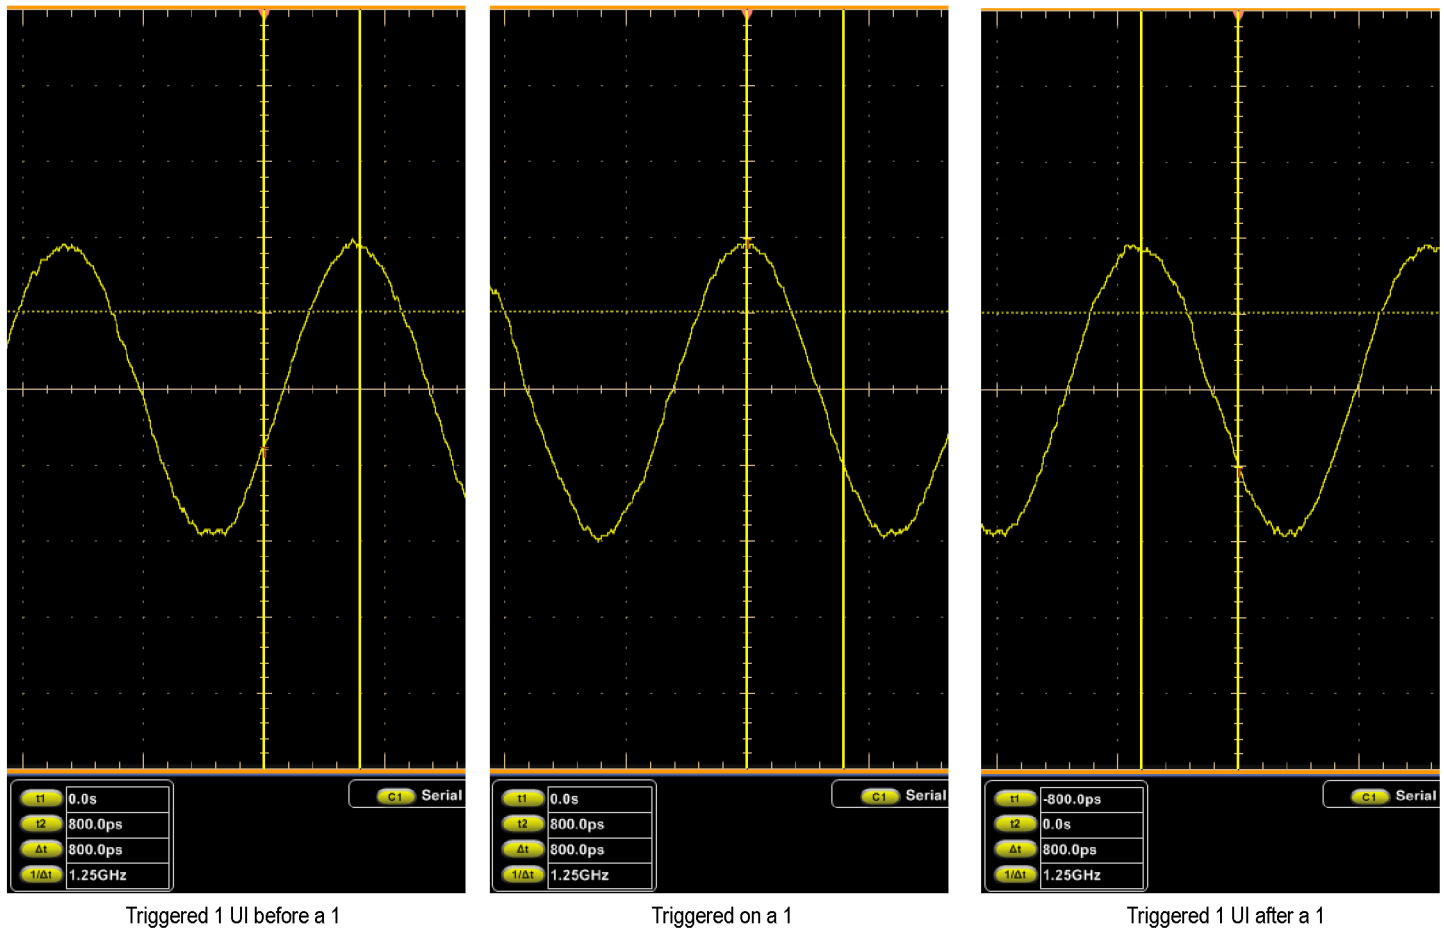


Figure 2-35: Isolated 1 triggering

Check Serial Trigger Clock Recovery Range

Equipment required

One precision 50 Ω coaxial cable (Item 4)
 One sine-wave generator (Item 9)
 One adapter (Item 19)

Equipment required

The oscilloscope must meet the prerequisites. Also, the instrument must have passed *Check DC Voltage Measurement Accuracy*. (See page 2-39, *Check DC Voltage Measurement Accuracy*.)

1. Install the test hookup and preset the instrument controls:

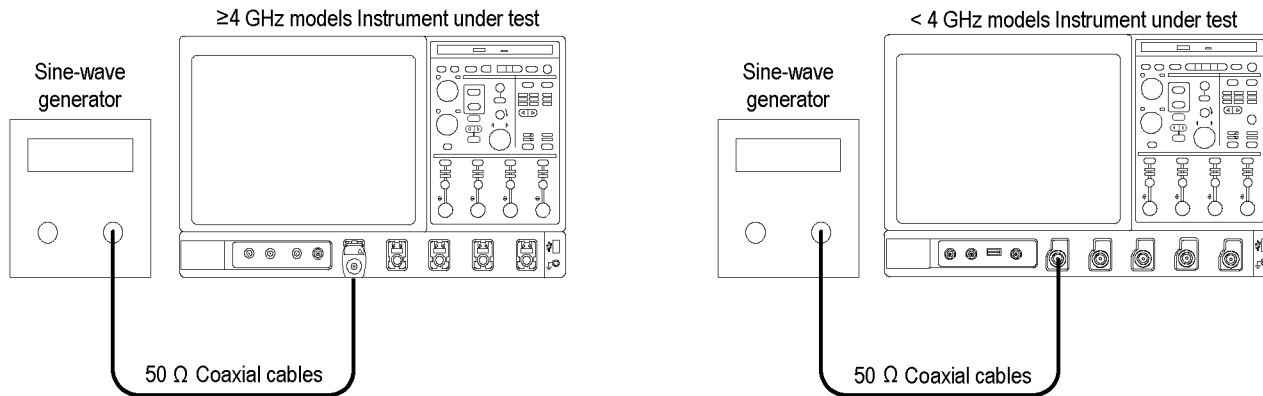


Figure 2-36: Initial test hookup

- a. *Hook up test-signal source 1:* (See Figure 2-36.)
 - Connect the sine wave output of the sine-wave generator through a 50 Ω precision coaxial cable to Ch 1 through an adapter.
 - Set the sine-wave generator to output a 1.5625 GHz sine wave.
- b. *Initialize the instrument:* Press the **Default Setup** button.
- c. *Modify the initialized front-panel control settings:*
 - Set the Vertical **Scale** to 50 mV per division.
 - < 4 GHz models: Touch **Vertical**, select **Vertical Setup**, and then touch **Termination 50 Ω** .
 - Set the horizontal **Scale** to 200 ps per division.
 - From the button bar, touch the **Display** button.
 - Set the Display Style to **Dots**.
 - Set the Display Persistence to **Variable**, and set the persist Time to **3.0 s**.
 - Touch the **X** (close) button.
 - Adjust the sine-wave generator output for 8 divisions of amplitude.
 - From the button bar, touch **Trig** and select the **A Event** tab.

- Touch the **Select** button.
 - Touch the **Comm** button. Set **Source** to Ch1, **Type** to R Clk, and **Coding** to NRZ.
2. *Verify the clock recovery at frequency:*
- a. From the button bar, touch **Trig** and select the **A Event** tab.
 - b. Set the sine-wave generator to output one of the input frequencies in the table that is not yet checked, starting with the first setting. (See Table 2-16 on page 2-108.)
 - c. Set the instrument Bit Rate to the Recovered clock Baud rate listed in the table for the current input frequency.

NOTE. *The instrument will attempt to acquire lock once. If the input data is disrupted, removed, or heavily distorted, the instrument may not acquire lock or may lose lock. If the recovered clock is not locked to the incoming data, the waveform display will not be stable. Once the input data is available, press the PUSH SET TO 50% knob to force the instrument to acquire lock again.*

- d. Press **PUSH-SET 50%**.


NOTE. *As the input frequency is lowered, adjust the Horizontal SCALE to maintain about 3 to 5 eyes across the display.*

- e. Verify that lock is acquired. (See Figure 2-37 on page 2-109.)
 - f. Repeat substeps b through d for each input frequency and Baud rate listed in the table. (See Table 2-16 on page 2-108.).
 - g. If all tests pass, enter passed in the test record.
3. *Disconnect the hookup:* Disconnect the equipment from the instrument.


Table 2-16: Clock recovery input frequencies and baud rates

Input frequency	Recovered clock Baud rate
<i>≥ 4 GHz models</i>	
1.5625 GHz	3125 Mbaud
781.25 MHz	3125 Mbaud
742.19 MHz	2968.8 Mbaud
600 MHz	2400 Mbaud
575.00 MHz	2300 Mbaud
546.25 MHz	2185 Mbaud
390.63 MHz	1.5625 Gbaud
388.13 MHz	1.5525 Gbaud
<i>< 4 GHz models</i>	
625 MHz	1.25 Gbaud
321.5 MHz	1.25 Gbaud
296.87 MHz	1.187 Gbaud
168.75 MHz	675 Mbaud
300 MHz	1200 Mbaud
156.25 MHz	625 Mbaud
78.12 MHz	312.5 Mbaud
74.21 MHz	296.48 Mbaud
31.25 MHz	125 Gbaud
15.62 MHz	62.5 Gbaud
7.81 MHz	31.25 Mbaud
3.9 MHz	15.65 Mbaud
1.95 MHz	7.81 Mbaud
976.56 kHz	3.9 Mbaud
488.28 kHz	1.95 Gbaud
380.98 kHz	1.52 Gbaud

Recovered clock locked
(1.5625 GHz)

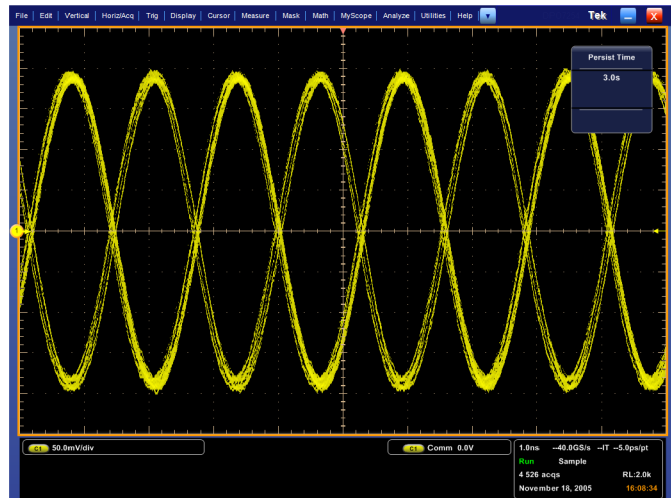

Recovered clock locked
(All frequencies except
1.5625 GHz)

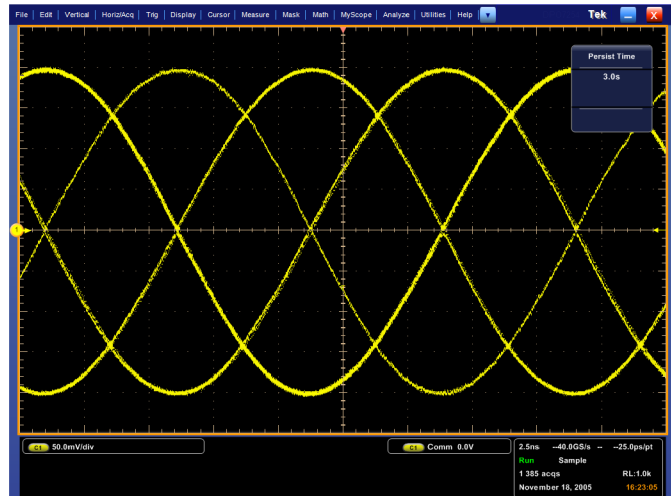

A possible display with the
recovered clock not locked

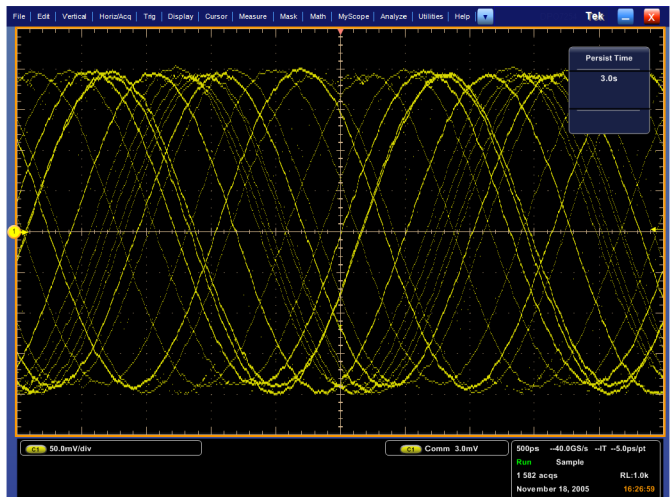


Figure 2-37: Clock recovery

Sine Wave Generator Leveling Procedure

Some procedures in this manual require a sine wave generator to produce the necessary test signals. If you do not have a leveled sine wave generator, use one of the following procedures to level the output amplitude of your sine wave generator.

Equipment required

Sine wave generator (Item 9)
 Meter, power and sensor (Item 10)
 Power splitter (Item 11)
 50 Ω precision cable 2.92 mm male-to-female (Item 12)
 One K male-to-male adapter (Item 13)

Prerequisites

(See page 2-13, *Prerequisites*.)

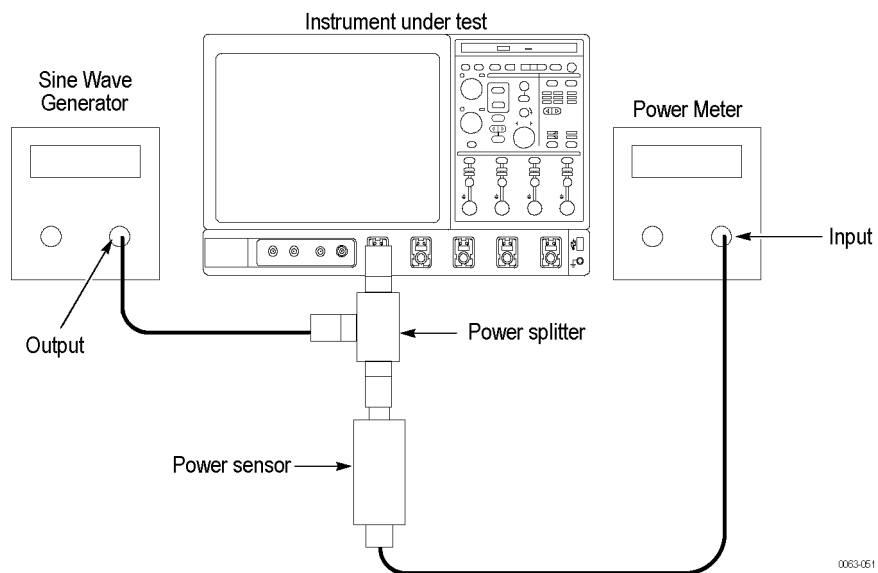


Figure 2-38: Sine wave generator leveling equipment setup

0063-051

1. *Install the test hookup:* Connect the equipment as shown in the above figure.
2. *Set the Generator:*
 - Set the sine wave generator to a reference frequency of 10 MHz.
 - Adjust the sine wave generator amplitude to the required number of divisions as measured by the instrument.
3. *Record the reference level:* Note the reading on the level meter.
4. *Set the generator to the new frequency and reference level:*
 - Change the sine wave generator to the desired new frequency.
 - Input the correction factor and/or the new frequency into the level meter.
 - Adjust the sine wave generator amplitude until the level meter again reads the value noted in step 3. The signal amplitude is now correctly set for the new frequency.

Equipment required	Prerequisites
Sine wave generator (Item 9)	(See page 2-13, <i>Prerequisites.</i>)
Level meter and power sensor (Item 10)	
Two male N to female BNC adapters (Item 14)	
Two precision coaxial cables (Item 4)	
One or two SMA male-to-female BNC adapters (Item 19)	

1. *Install the test hookup:* Connect the equipment as shown in the figure below (start with the sine wave generator connected to the instrument). (See Figure 2-39.)
2. *Set the Generator:*
 - Set the sine wave generator to a reference frequency of 10 MHz.
 - Adjust the sine wave generator amplitude to the required number of divisions as measured by the instrument.

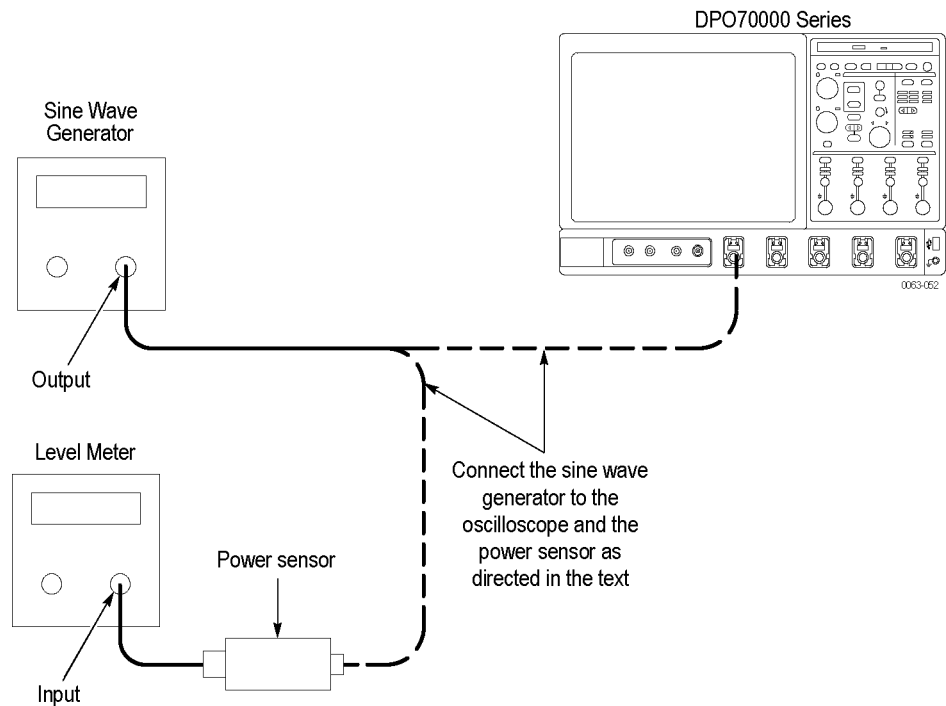


Figure 2-39: Equipment setup for maximum amplitude

3. Record the reference level:

- Disconnect the sine wave generator from the instrument.
- Connect the sine wave generator to the power sensor.
- Note the level meter reading.

4. Set the generator to the new frequency and reference level:

- Change the sine wave generator to the desired new frequency.
- Input the correction factor and/or the new frequency into the level meter.
- Adjust the sine wave generator amplitude until the level meter again reads the value noted in step 3. The signal amplitude is now correctly set for the new frequency.
- Disconnect the sine wave generator from the power sensor.
- Connect the sine wave generator to the instrument.