

2225
OSCILLOSCOPE
SERVICE

2225 OSCILLOSCOPE SERVICE


WARNING

THE FOLLOWING SERVICING INSTRUCTIONS ARE FOR USE BY QUALIFIED PERSONNEL ONLY. TO AVOID PERSONAL INJURY, DO NOT PERFORM ANY SERVICING OTHER THAN THAT CONTAINED IN OPERATING INSTRUCTIONS UNLESS YOU ARE QUALIFIED TO DO SO. REFER TO OPERATORS SAFETY SUMMARY AND SERVICE SAFETY SUMMARY PRIOR TO PERFORMING ANY SERVICE.

*Please Check for
CHANGE INFORMATION
at the Rear of This Manual*

Copyright © 1987 Tektronix, Inc. All rights reserved. Contents of this publication may not be reproduced in any form without the written permission of Tektronix, Inc.

Products of Tektronix, Inc. and its subsidiaries are covered by U.S. and foreign patents issued and pending.

TEKTRONIX, TEK, SCOPE-MOBILE, and  are registered trademarks of Tektronix, Inc.

Printed in U.S.A. Specification and price change privileges are reserved.

INSTRUMENT SERIAL NUMBERS

Each instrument has a serial number on a panel insert, tag, or stamped on the chassis. The first number or letter designates the country of manufacture. The last five digits of the serial number are assigned sequentially and are unique to each instrument. Those manufactured in the United States have six unique digits. The country of manufacture is identified as follows:

B000000 Tektronix, Inc., Beaverton, Oregon, U.S.A.

HK00001 Hong Kong

100000 Tektronix Guernsey, Ltd., Channel Islands

200000 Tektronix United Kingdom, Ltd., London

300000 Sony/Tektronix, Japan

700000 Tektronix Holland, NV, Heerenveen,
The Netherlands

Certificate of the Manufacturer/Importer

We hereby certify that the 2225 PORTABLE OSCILLOSCOPE

AND ALL INSTALLED OPTIONS

complies with the RF Interference Suppression requirements of Amtsbl.-Vfg 1046/1984.

The German Postal Service was notified that the equipment is being marketed.

The German Postal Service has the right to re-test the series and to verify that it complies.

TEKTRONIX

Bescheinigung des Herstellers/Importeurs

Hiermit wird bescheinigt, daß der/die/das 2225 PORTABLE OSCILLOSCOPE

AND ALL INSTALLED OPTIONS

in Übereinstimmung mit den Bestimmungen der Amtsblatt-Verfügung 1046/1984 funktentstört ist.

Der Deutschen Bundespost wurde das Inverkehrbringen dieses Gerätes angezeigt und die Berechtigung zur Überprüfung der Serie auf Einhalten der Bestimmungen eingeräumt.

TEKTRONIX

NOTICE to the user/operator:

The German Postal Service requires that Systems assembled by the operator/user of this instrument must also comply with Postal Regulation, Vfg. 1046/1984, Par. 2, Sect. 1.

HINWEIS für den Benutzer/Betreiber:

Die vom Betreiber zusammengestellte Anlage, innerhalb derer dies Gerät eingesetzt wird, muß ebenfalls den Voraussetzungen nach Par. 2, Ziff. 1 der Vfg. 1046/1984 genügen.

NOTICE to the user/operator:

The German Postal Service requires that this equipment, when used in a test setup, may only be operated if the requirements of Postal Regulation, Vfg. 1046/1984, Par. 2, Sect. 1.7.1 are complied with.

HINWEIS für den Benutzer/Betreiber:

Dies Gerät darf in Meßaufbauten nur betrieben werden, wenn die Voraussetzungen des Par. 2, Ziff. 1.7.1 der Vfg. 1046/1984 eingehalten werden.

TABLE OF CONTENTS

| | Page | | Page |
|---|------|--------------------------------------|------|
| LIST OF ILLUSTRATIONS | iv | TRIGGER | 2-6 |
| LIST OF TABLES | v | REAR PANEL | 2-7 |
| OPERATORS SAFETY SUMMARY | vi | OPERATING CONSIDERATIONS .. | 2-8 |
| SERVICING SAFETY SUMMARY | vii | GRATICULE | 2-8 |
| | | GROUNDING | 2-8 |
| | | SIGNAL CONNECTIONS | 2-8 |
| | | INPUT-COUPLING | |
| | | CAPACITOR PRECHARGING ... | 2-9 |
| Section 1 SPECIFICATION | | OPERATOR'S CHECKS AND | |
| INTRODUCTION | 1-1 | ADJUSTMENTS | 2-10 |
| ACCESSORIES | 1-1 | INITIAL SETUP | 2-10 |
| FOR MORE INFORMATION | 1-1 | TRACE ROTATION | |
| RECOMMENDED RECALIBRATION | | ADJUSTMENT | 2-10 |
| SCHEDULE | 1-1 | PROBE COMPENSATION | 2-10 |
| PERFORMANCE CONDITIONS .. | 1-1 | | |
| | | | |
| Section 2 OPERATING INSTRUCTIONS | | Section 3 THEORY OF OPERATION | |
| PREPARATION FOR USE | 2-1 | SECTION ORGANIZATION | 3-1 |
| SAFETY | 2-1 | INTEGRATED CIRCUIT | |
| LINE VOLTAGE SELECTION | 2-1 | DESCRIPTIONS | 3-1 |
| LINE FUSE | 2-2 | GENERAL DESCRIPTION | 3-1 |
| POWER CORD | 2-2 | DETAILED CIRCUIT | |
| INSTRUMENT COOLING | 2-2 | DESCRIPTION | 3-3 |
| INITIAL START-UP | 2-2 | VERTICAL | 3-3 |
| REPACKAGING | 2-3 | TRIGGER | 3-7 |
| CONTROLS, CONNECTORS, | | SWEEP AND SWEEP | |
| AND INDICATORS | 2-4 | GENERATOR LOGIC | 3-10 |
| POWER AND DISPLAY | 2-4 | HORIZONTAL | 3-12 |
| VERTICAL | 2-4 | FRONT PANEL | 3-14 |
| HORIZONTAL | 2-5 | Z-AXIS AMPLIFIER | 3-14 |
| | | POWER SUPPLY | 3-16 |

TABLE OF CONTENTS (cont)

| | Page | | Page |
|------------------------------------|------|-----------------------------|------|
| Section 4 | | Section 5 | |
| PERFORMANCE CHECK PROCEDURE | | ADJUSTMENT PROCEDURE | |
| INTRODUCTION | 4-1 | INTRODUCTION | 5-1 |
| PURPOSE | 4-1 | PURPOSE | 5-1 |
| PERFORMANCE CHECK | | STRUCTURE | 5-1 |
| INTERVAL | 4-1 | TEST EQUIPMENT | |
| STRUCTURE | 4-1 | REQUIRED | 5-1 |
| TEST EQUIPMENT | | LIMITS AND TOLERANCES | 5-1 |
| REQUIRED | 4-1 | ADJUSTMENTS AFFECTED BY | |
| LIMITS AND TOLERANCES | 4-1 | REPAIRS | 5-1 |
| PREPARATION FOR | | PREPARATION FOR | |
| CHECKS | 4-1 | ADJUSTMENT | 5-1 |
| INDEX TO PERFORMANCE | | INDEX TO ADJUSTMENT | |
| CHECK STEPS | 4-3 | PROCEDURE STEPS | 5-3 |
| VERTICAL | 4-4 | POWER SUPPLY AND | |
| INITIAL CONTROL | | CRT DISPLAY | 5-4 |
| SETTINGS | 4-4 | INITIAL CONTROL | |
| PROCEDURE STEPS | 4-4 | SETTINGS | 5-4 |
| HORIZONTAL | 4-8 | PROCEDURE STEPS | 5-4 |
| INITIAL CONTROL | | VERTICAL | 5-6 |
| SETTINGS | 4-8 | INITIAL CONTROL | |
| PROCEDURE STEPS | 4-8 | SETTINGS | 5-6 |
| TRIGGER | 4-12 | PROCEDURE STEPS | 5-6 |
| INITIAL CONTROL | | HORIZONTAL | 5-13 |
| SETTINGS | 4-12 | INITIAL CONTROL | |
| PROCEDURE STEPS | 4-12 | SETTINGS | 5-13 |
| EXTERNAL Z-AXIS AND | | PROCEDURE STEPS | 5-13 |
| PROBE ADJUST | 4-15 | TRIGGER | 5-18 |
| INITIAL CONTROL | | INITIAL CONTROL | |
| SETTINGS | 4-15 | SETTINGS | 5-18 |
| PROCEDURE STEPS | 4-15 | PROCEDURE STEPS | 5-18 |
| | | EXTERNAL Z-AXIS AND | |
| | | PROBE ADJUST | 5-22 |
| | | INITIAL CONTROL | |
| | | SETTINGS | 5-22 |
| | | PROCEDURE STEPS | 5-22 |

TABLE OF CONTENTS (cont)

| | Page | | Page |
|-----------------------------------|--------------------|--|-------------------------------------|
| Section 6 | MAINTENANCE | | |
| STATIC-SENSITIVE COMPONENTS | 6-1 | OBTAINING REPLACEMENT PARTS | 6-10 |
| PREVENTIVE MAINTENANCE | 6-2 | MAINTENANCE AIDS | 6-11 |
| INTRODUCTION | 6-2 | INTERCONNECTIONS | 6-11 |
| GENERAL CARE | 6-2 | TRANSISTORS AND INTEGRATED CIRCUITS | 6-11 |
| INSPECTION AND CLEANING | 6-2 | SOLDERING TECHNIQUES ... | 6-12 |
| LUBRICATION | 6-4 | REMOVAL AND REPLACEMENT INSTRUCTIONS | 6-13 |
| SEMICONDUCTOR CHECKS | 6-4 | | |
| PERIODIC READJUSTMENT | 6-4 | Section 7 | OPTIONS AND ACCESSORIES |
| TROUBLESHOOTING | 6-4 | INTRODUCTION | 7-1 |
| INTRODUCTION | 6-4 | STANDARD ACCESSORIES ... | 7-1 |
| TROUBLESHOOTING AIDS | 6-4 | OPTIONS | 7-1 |
| RIBBON-CABLE CONNECTORS | 6-6 | | |
| TROUBLESHOOTING EQUIPMENT | 6-6 | Section 8 | REPLACEABLE ELECTRICAL PARTS |
| TROUBLESHOOTING TECHNIQUES | 6-7 | Section 9 | DIAGRAMS |
| CORRECTIVE MAINTENANCE ... | 6-10 | Section 10 | REPLACEABLE MECHANICAL PARTS |
| INTRODUCTION | 6-10 | | |
| MAINTENANCE PRECAUTIONS | 6-10 | APPENDIX | |
| | | CHANGE INFORMATION | |

LIST OF ILLUSTRATIONS

| Figure | | Page |
|--------|--|------|
| | The 2225 Oscilloscope | viii |
| 1-1 | Max Input Voltage Vs Frequency Derating Curve | 1-7 |
| 1-2 | Instrument dimensional drawing | 1-8 |
| 2-1 | Voltage Selector switch, fuse, and power-cord receptacle | 2-1 |
| 2-2 | Power-cord and line-voltage data | 2-2 |
| 2-3 | Rear Panel | 2-7 |
| 2-4 | Graticule measurement markings | 2-8 |
| 2-5 | Probe compensation | 2-11 |
| 2-6 | Probe compensation locations | 2-11 |
| 3-1 | Block diagram of the Channel 1 Attenuator circuit | 3-3 |
| 3-2 | Block diagram of the Channel Switching circuit | 3-5 |
| 3-3 | Block diagram of the Sweep Generator and Logic circuit | 3-10 |
| 3-4 | Block diagram of the Horizontal Amplifier circuit | 3-13 |
| 3-5 | Simplified diagram of the DC Restorer circuitry | 3-15 |
| 5-1 | Attenuator trimmer adjustments | 5-9 |
| 6-1 | Multi-connector operation | 6-6 |

LIST OF TABLES

| Table | | Page |
|-------|--|------|
| 1-1 | Electrical Characteristics | 1-2 |
| 1-2 | Environmental Characteristics | 1-6 |
| 1-3 | Physical Characteristics | 1-7 |
| 4-1 | Test Equipment Required | 4-2 |
| 4-2 | Deflection Accuracy Limits | 4-5 |
| 4-3 | Settings for Timing Accuracy Checks | 4-9 |
| 4-4 | Switch Combinations for Triggering Checks | 4-12 |
| 5-1 | Adjustments Affected by Repairs | 5-2 |
| 5-2 | Power Supply Limits | 5-5 |
| 5-3 | Deflection Accuracy Limits | 5-8 |
| 5-4 | Settings for Timing Accuracy Checks | 5-15 |
| 5-5 | Switch Combinations for Triggering Checks | 5-19 |
| 6-1 | Relative Susceptibility to Static-Discharge Damage | 6-1 |
| 6-2 | External Inspection Checklist | 6-3 |
| 6-3 | Internal Inspection Checklist | 6-3 |
| 6-4 | Power Supply Voltage and Ripple Limits | 6-8 |
| 6-5 | Maintenance Aids | 6-12 |
| 7-1 | Power Cords and Fuses | 7-2 |
| 7-2 | Optional Accessories | 7-3 |
| A-1 | Magnified Sweep Speeds | A-1 |

LIST OF TABLES

| Table | | Page |
|-------|--|------|
| 1-1 | Electrical Characteristics | 1-2 |
| 1-2 | Environmental Characteristics | 1-6 |
| 1-3 | Physical Characteristics | 1-7 |
| 4-1 | Test Equipment Required | 4-2 |
| 4-2 | Deflection Accuracy Limits | 4-5 |
| 4-3 | Settings for Timing Accuracy Checks | 4-9 |
| 4-4 | Switch Combinations for Triggering Checks | 4-12 |
| 5-1 | Adjustments Affected by Repairs | 5-2 |
| 5-2 | Power Supply Limits | 5-5 |
| 5-3 | Deflection Accuracy Limits | 5-8 |
| 5-4 | Settings for Timing Accuracy Checks | 5-15 |
| 5-5 | Switch Combinations for Triggering Checks | 5-19 |
| 6-1 | Relative Susceptibility to Static-Discharge Damage | 6-1 |
| 6-2 | External Inspection Checklist | 6-3 |
| 6-3 | Internal Inspection Checklist | 6-3 |
| 6-4 | Power Supply Voltage and Ripple Limits | 6-8 |
| 6-5 | Maintenance Aids | 6-12 |
| 7-1 | Power Cords and Fuses | 7-2 |
| 7-2 | Optional Accessories | 7-3 |
| A-1 | Magnified Sweep Speeds | A-1 |

SERVICING SAFETY SUMMARY

FOR QUALIFIED SERVICE PERSONNEL ONLY

Refer also to the preceding Operators Safety Summary

Do Not Service Alone

Do not perform internal service or adjustment of this product unless another person capable of rendering first aid and resuscitation is present.


Use Care When Servicing With Power On

Dangerous voltages exist at several points in this product. To avoid personal injury, do not touch exposed connections or components while power is on.

Disconnect power before removing protective panels, soldering, or replacing components.

Power Source

This product is intended to operate from a power source that does not apply more than 250 volts rms between the supply conductors or between either supply conductor and ground. A protective ground connection by way of the grounding connector in the power cord is essential for safe operation.

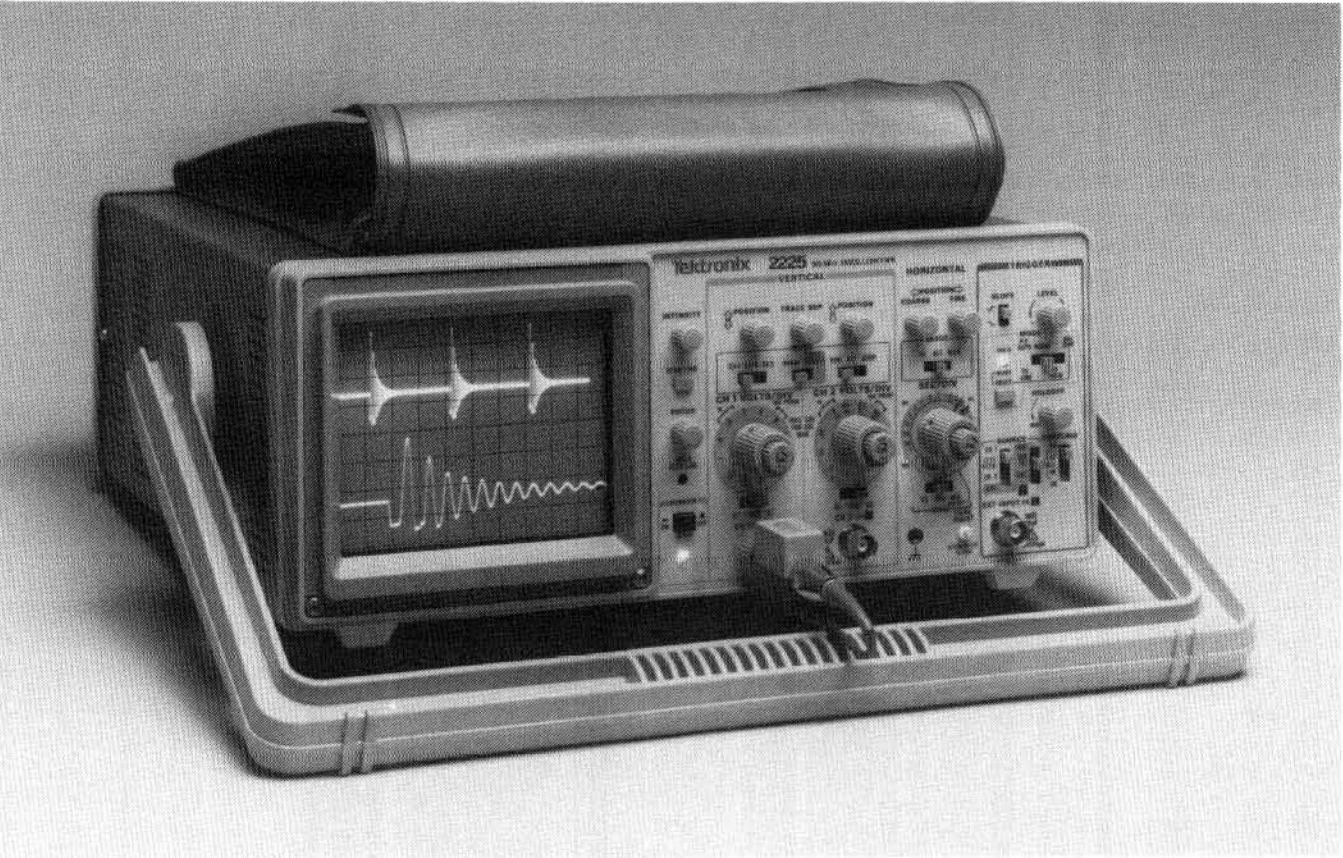

The 2225 Oscilloscope.

SPECIFICATION

INTRODUCTION

The TEKTRONIX 2225 Oscilloscope is a rugged, lightweight, dual-channel, 50 MHz instrument that features a bright, sharply defined trace on an 80 by 100-mm cathode-ray tube (crt).

The low-noise vertical system of the 2225 has calibrated deflection factors from 5 mV to 5 V per division at full bandwidth. A vertical magnification feature extends the vertical sensitivity to 500 μ V per division. This same magnification feature permits independent bandwidth limiting for each channel. With it, a user can limit the bandwidth of one channel to 5 MHz without affecting the bandwidth of the other channel.

Stable triggering is achieved over the full bandwidth of the vertical system. The very flexible trigger system of the 2225 features hands-free triggering with the peak-to-peak automatic mode, independent selection of TV Line and TV Field triggering at any sweep speed, single-sweep triggering, and a variable holdoff control to facilitate triggering on complex waveforms. Along with the standard AC and DC signal coupling methods, the 2225 provides HF REJ and LF REJ trigger coupling. These added coupling features give the user the ability to filter out the high-frequency or low-frequency components of a trigger signal that can interfere with stable triggering. An external trigger signal may be supplied to the trigger system via a front-panel connector. That front-panel connector may also be used to supply an external Z-axis signal for intensity modulation of the displayed signals.

The horizontal system provides calibrated sweep speeds from 0.5 s to 50 ns per division. For greater measurement accuracy, a horizontal magnifier circuit extends the maximum sweep speed to 5 ns per division. Magnification is selected in three levels—X5, X10, and X50—and the magnified trace can be displayed either alone or together with its associated unmagnified trace. Displaying both the magnified and unmagnified traces together—called Alternate Magnification mode—lets the user perform types of timing measurements that previously were only possible on oscilloscopes having dual time bases.

ACCESSORIES

The instrument is shipped with the following accessories: operators manual, two probe kits, a power cord, and a power-cord clamp. The probes supplied with the 2225 have sturdy replaceable tips. Probe compensation is accomplished through a closeable window on the probe body. Part numbers for the standard accessories and for the suggested optional accessories are located in Section 7, Options and Accessories.

FOR MORE INFORMATION

Should you need additional information about your 2225 Oscilloscope or about other Tektronix products, contact the nearest Tektronix Sales Office or Distributor or consult the Tektronix product catalog. In the United States you may call the Tektronix National Marketing Center toll free at 1-800-426-2200.

RECOMMENDED RECALIBRATION SCHEDULE

To ensure accurate measurements, check the performance of this instrument every 2000 hours of operation, or, if used infrequently, once each year. Replacement of components in the instrument may also necessitate readjustment of the affected circuits.

PERFORMANCE CONDITIONS

The electrical characteristics given in Table 1-1 are valid when the instrument has been adjusted at an ambient temperature between +20°C and +30°C, has had a warm-up period of at least 20 minutes, and is operating at an ambient temperature between 0°C and +40°C (unless otherwise noted).

Items listed in the Performance Requirements column are verifiable qualitative or quantitative limits that define the measurement capabilities of the instrument.

Environmental characteristics are given in Table 1-2. This instrument meets the requirements of MIL-T-28800C, paragraphs 4.5.5.1.3, 4.5.5.1.4, and 4.5.5.1.2.2 for Type III, Class 5 equipment, except where noted otherwise.

Physical characteristics of the instrument are listed in Table 1-3.

Table 1-1
Electrical Characteristics

| Characteristics | Performance Requirements |
|--|---|
| VERTICAL DEFLECTION SYSTEM | |
| Deflection Factor | |
| Range | 5 mV per division to 5 V per division in a 1-2-5 sequence of 10 steps. Sensitivity increases to 500 μ V per division with X10 vertical magnification. |
| Accuracy | |
| Without vertical magnification | $\pm 3\%$. |
| With X10 vertical magnification | $\pm 5\%$. |
| Variable Control Range | Continuously variable between settings. Increases deflection factor by at least 2.5 to 1. |
| Step Response | |
| Rise Time | Rise time is calculated from: $Tr = \frac{0.35}{BW}$ |
| +5°C to +35°C | 7 ns or less. ^a |
| 0°C to +5°C and +35°C to +40°C | 8.8 ns or less. ^a |
| Aberrations | |
| 5 mV per division | +6%, -6%, 6% p-p. |
| 10 mV per division to 0.2 V per division | +4%, -4%, 4% p-p. |
| 0.5 V per division | +6%, -6%, 6% p-p. |
| Bandwidth (-3 dB) | |
| +5°C to +35°C | 50 MHz or more. |
| 0°C to +5°C and +35°C to +40°C | 40 MHz or more. ^a |
| X10 Vertical Magnification | 5 MHz or more. |
| Ac Coupled Lower Cutoff Frequency (-3dB) | 10 Hz or less. ^a |
| CHOP Mode Switching Rate | 500 kHz $\pm 30\%$. ^a |
| Input Characteristics | |
| Resistance | 1 M Ω $\pm 2\%$. ^a |
| Capacitance | 25 pF ± 2 pF. ^a |

^aPerformance requirement not checked in manual.

Table 1-1 (cont)

| Characteristics | Performance Requirements |
|--|--|
| Maximum Safe Input Voltage (DC or AC Coupled) | 400 V (dc + peak ac) or 800 V ac p-p at 10 kHz or less. ^a (See Figure 1-1 for frequency derating curve.) |
| Common-mode Rejection Ratio (CMRR) | |
| Without Vertical Magnification | At least 10 to 1 at 10 MHz. |
| With X10 Vertical Magnification | At least 10 to 1 at 1 MHz. |
| Trace Shift with VOLTS/DIV Switch Rotation | 0.75 division or less; VOLTS/DIV Variable control in the CAL detent. ^a |
| Trace Shift as the VOLTS/DIV Variable Control is rotated. | 1 division or less. ^a |
| Trace Shift with CH 2 INVERT | 1.5 division or less. ^a |
| Trace Shift with X10 Vertical Magnification | 2.0 divisions or less. ^a |
| Channel Isolation | Greater than 100:1 at 10 MHz. |
| Position Control Range | 10.5 divisions above and below the center graticule line at 25°C with the cabinet installed. |
| Trace Separation Range | At least ± 3 divisions. |

TRIGGERING

| | | |
|---|--|---------|
| Trigger Sensitivity | | |
| P-P AUTO/TV LINE and NORM Modes | 5 MHz | 50 MHz |
| Internal Signal | 0.3 div | 1.0 div |
| External Signal | 40 mV | 200 mV |
| TV FIELD | 1 division of composite sync. ^a | |
| Lowest Usable Frequency in P-P AUTO Mode | A 1.0 division internal signal or 100 mV external signal of 20 Hz or higher frequency will trigger. | |
| External Input | | |
| Input Resistance | 1 M Ω $\pm 10\%$. ^a | |
| Input Capacitance | 25 pF ± 2.5 pF. ^a | |
| Maximum Input Voltage | 400 V (dc + peak ac) or 800 V ac p-p at 10 kHz or less. ^a (See Figure 1-1 for frequency derating curve.) | |
| AC Coupled Lower Cutoff Frequency (-3dB) | | |
| Internal Signal | 10 Hz or less. ^a | |
| External Signal | 20 Hz or less. ^a | |

^aPerformance requirement not checked in manual.

Table 1-1 (cont)

| Characteristics | Performance Requirements | | | |
|---|---|------------------------|------------------------|------------------------|
| Trigger Level Range | | | | |
| NORM Mode | Level may be set to any point of trace that can be displayed. | | | |
| EXT Source | At least ± 1.2 V, 2.4 V p-p. | | | |
| EXT/10 Source | At least ± 12 V, 24 V p-p. | | | |
| Variable Holdoff Range | Increases sweep holdoff time by at least a factor of 8 at maximum holdoff. ^a | | | |
| LF REJ Lower 3 dB point | 30 kHz $\pm 25\%$. ^a | | | |
| HF REJ 3 dB point | 30 kHz $\pm 25\%$. ^a | | | |
| HORIZONTAL DEFLECTION SYSTEM | | | | |
| Sweep Rates | | | | |
| Calibrated Range | | | | |
| Sweep | 0.5 s per division to 0.05 μ s per division in a 1–2–5 sequence of 22 steps. The X10 magnifier extends maximum sweep speed to 5 ns per division. ^a | | | |
| Accuracy | Unmagnified | Magnified | | |
| | X1 | X5 | X10 | X50 |
| +15°C to +35°C | $\pm 3\%$ | $\pm 4\%$ | $\pm 4\%$ | $\pm 5\%$ |
| 0°C to +40°C | $\pm 4\%$ ^a | $\pm 5\%$ ^a | $\pm 5\%$ ^a | $\pm 8\%$ ^a |
| | Sweep accuracy applies over the center eight divisions. Exclude the first 25 ns of the sweep for magnified sweep speeds and anything beyond the 100th magnified division. | | | |
| SEC/DIV Variable Range | Continuously variable and uncalibrated between calibrated step settings of the SEC/DIV switch. Decreases calibrated sweep speeds by at least a factor of 2.5. | | | |
| Sweep Linearity | Unmagnified | Magnified | | |
| | X1 | X5 | X10 | X50 |
| | $\pm 5\%$ | $\pm 7\%$ | $\pm 7\%$ | $\pm 9\%$ |
| POSITION Control Range | Start of sweep to 10th division in X1, to 50th division in X5, to 100th in X10, and to 500 division in X50 will position past the center vertical graticule line. | | | |
| Registration between Magnified and Unmagnified traces | 0.2 division or less (measured when switching from Magnified to Unmagnified), aligned to center vertical graticule line. ^a | | | |
| Trace Shift between ALT and MAG Modes | Less than 1 division. ^a | | | |

^aPerformance requirement not checked in manual.

Table 1-1 (cont)

| Characteristics | Performance Requirements | |
|---|--|--------------------|
| Z-AXIS | | |
| Sensitivity | 5 V causes noticeable modulation. Positive-going input decreases intensity. | |
| Usable frequency range | Dc to 5 MHz. ^a | |
| Maximum Safe Input Voltage | 400 V (dc + peak ac) or 800 V p-p ac at 10 kHz or less. ^a (See Figure 1-1 for frequency derating curve.) | |
| X-Y OPERATION (X1 MODE) | | |
| Deflection Factors | Same as vertical deflection system with variable controls in the CAL detent. ^a | |
| Accuracy | | |
| X-Axis | ±5%. | |
| Y-Axis | Same as vertical deflection system. ^a | |
| Bandwidth (-3 dB) | | |
| X-Axis | Dc to at least 2 MHz. | |
| Y-Axis | Same as vertical deflection system. ^a | |
| Phase difference between X-Axis and Y-Axis Amplifiers | ±3° from dc to 150 kHz with DC input coupling. ^a | |
| PROBE ADJUST SIGNAL OUTPUT | | |
| Voltage into 1 MΩ Load | 0.5 V ±5%. | |
| Repetition Rate | 1 kHz ±5%. ^a | |
| POWER SUPPLY | | |
| Line Voltage Ranges | | |
| 115 V Setting | 95 Vac to 128 Vac. ^a | |
| 230 V Setting | 185 Vac to 250 Vac. ^a | |
| Line Frequency | 48 Hz to 440 Hz. ^a | |
| Maximum Power Consumption | 70 watts (80 VA). ^a | |
| Line Fuse | UL 198.6 3AG (1/4 X 1 1/4 inch) | IEC127 (5 x 20 mm) |
| 115 Setting | 1.0 A, Slow. | 0.8 A, Slow. |
| 230 Setting | 0.5 A, Slow. | 0.4 A, Slow. |
| CATHODE-RAY TUBE | | |
| Display Area | 8 X 10 cm. ^a | |
| Standard Phosphor | GH (P31). ^a | |
| Nominal Accelerating Voltage | 12,600 V ±60 V. ^a | |

^aPerformance requirement not checked in manual.

Table 1-2
Environmental Characteristics

| Characteristics | Performance Requirements |
|--|--|
| Temperature | |
| Operating | 0°C to +40°C (+32°F to +104°F). ^a |
| Nonoperating | -55°C to +75°C (-67°F to +167°F). ^a |
| Altitude | |
| Operating | To 4,570 meters (15,000 feet). Maximum operating temperature decreased 1°C per 300 m (1000 feet) above 1500 m (5,000 feet). ^a |
| Nonoperating | To 15,250 meters (50,000 feet). ^a |
| Relative Humidity | |
| Operating (+30°C to +40°C) | 5 cycles (120 hours) referenced to MIL-T-28800C para 4.5.5.1.2.2 for type III, Class 5 instruments. Operating and nonoperating at 95% -5% to +0% relative humidity. |
| Nonoperating (+30°C to +60°C) | |
| Vibration | |
| Operating | 15 minutes along each of three major axes at a total displacement of 0.015 inch p-p (2.4 g at 55 Hz) with frequency varied from 10 Hz to 55 Hz to 10 Hz in one minute sweeps. Hold for 10 minutes at 55 Hz in each of three major axes. All major resonances must be above 55 Hz. ^a |
| Shock | |
| Operating and Nonoperating | 30 g, half-sine, 11-ms duration, three shocks per axis each direction, for a total of 18 shocks. ^a |
| Radiated and conducted emission requirements | Meets VDE 0871, Class B and FCC Docket 20870, part 15, subpart J. ^a |

^aPerformance requirement not checked in manual.

Table 1-3
Physical Characteristics

| Characteristics | Description |
|--------------------------|---|
| Weight | |
| With Power Cord | 6.9 kg (15.2 lbs) or less. |
| Domestic Shipping Weight | 9.0 kg (19.8 lbs) or less. |
| Height | 138 mm (5.42 in). (See Figure 1-2 for a dimensional drawing). |
| Width | |
| With Handle | 385 mm (15.2 in). |
| Without Handle | 327 mm (12.9 in). |
| Depth | |
| Without Front Cover | 443 mm (17.3 in). |
| With Handle Extended | 511 mm (20.1 in). |

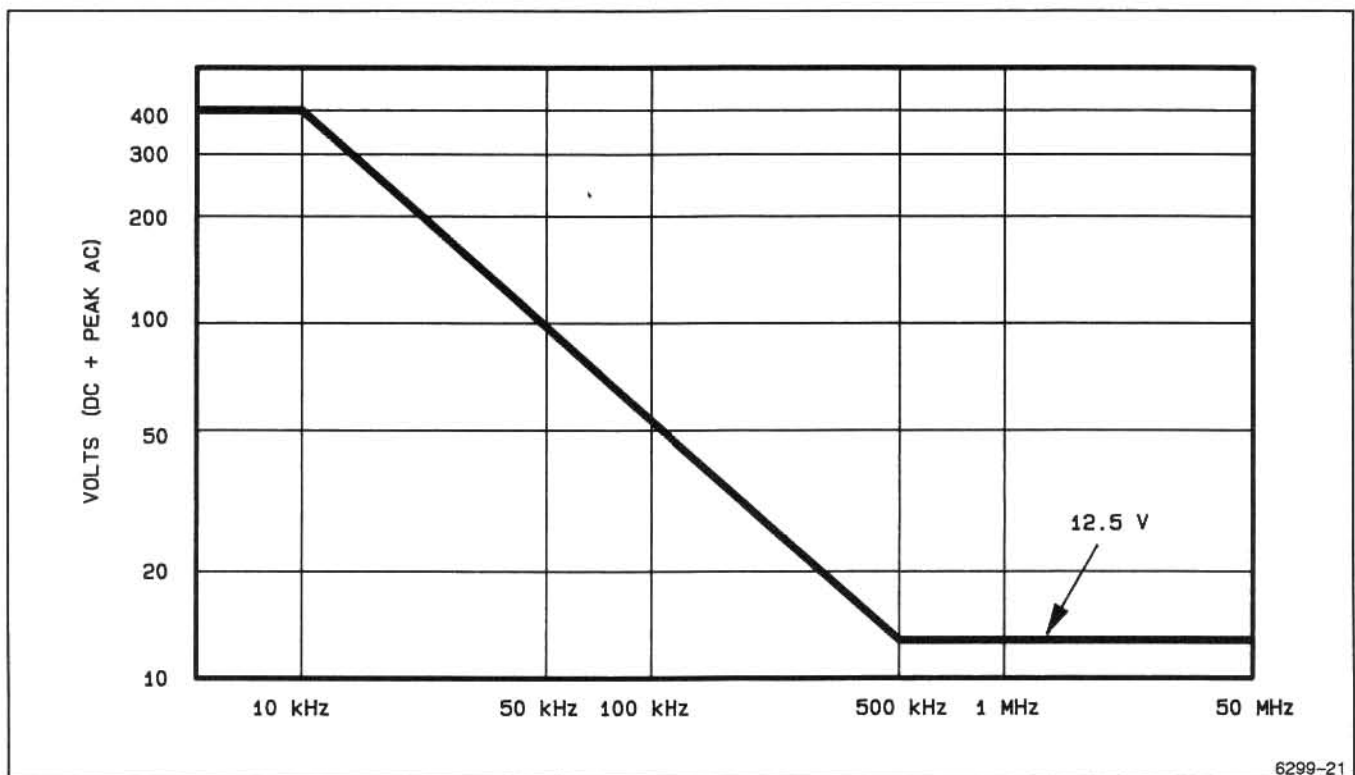


Figure 1-1. Max Input Voltage Vs Frequency Derating Curve.

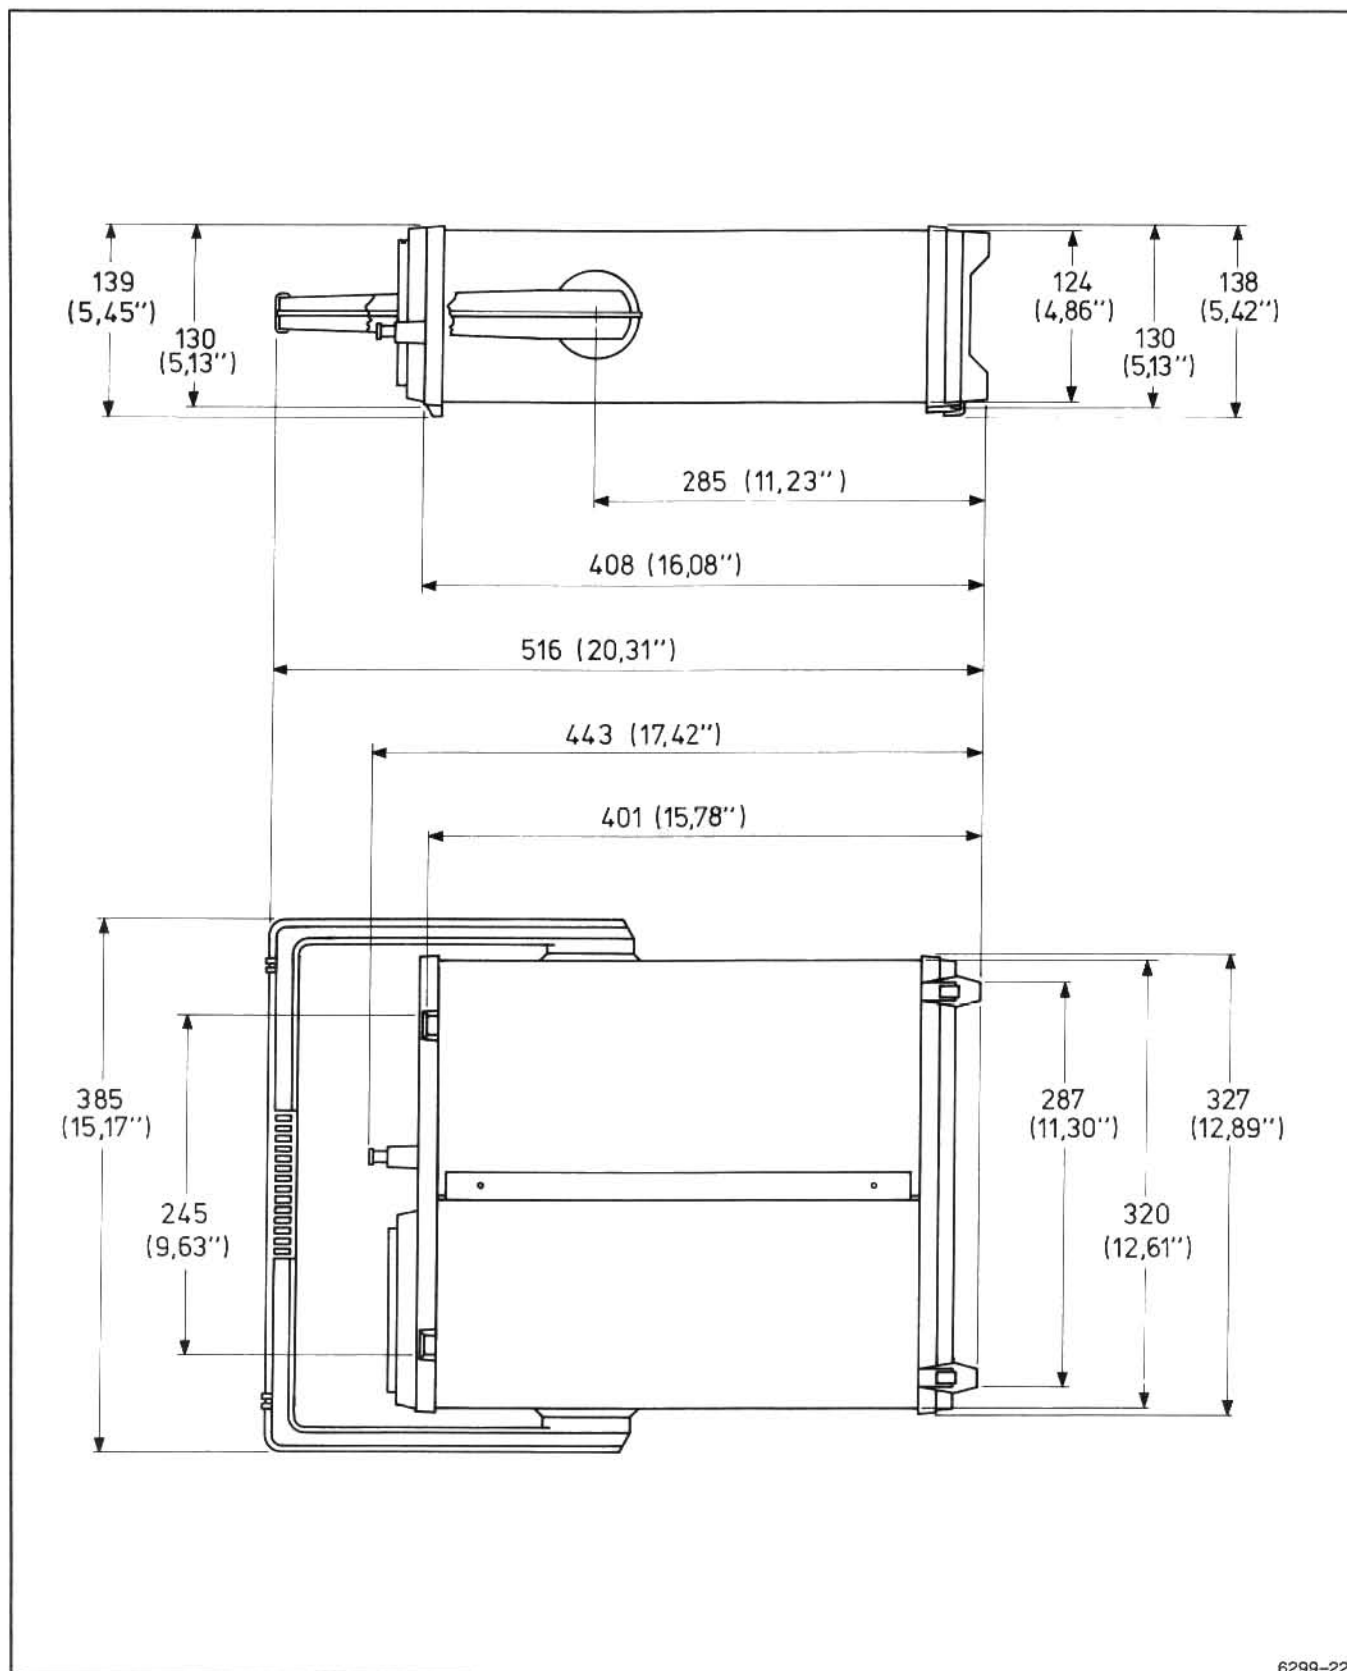


Figure 1-2. Instrument dimensional drawing.

OPERATING INSTRUCTIONS

This section is divided into four subsections. The first subsection, Preparation for Use, provides instructions for the user to follow before turning the instrument on, especially for the first time. Subsection two; Controls, Connectors, and Indicators; provides details on the operation of the front-panel

controls. Subsection three, Operating Considerations, provides the user with some of the more general information on measurement techniques. The last subsection, Operators Checks and Adjustments, provides simple checks and adjustments to be made on a routine basis by the user.

PREPARATION FOR USE

SAFETY

This subsection tells how to prepare for and to proceed with the initial start-up of the TEKTRONIX 2225 Oscilloscope.

Refer to the Safety Summary at the front of this manual for power source, grounding, and other safety considerations pertaining to the use of the instrument. Before connecting the oscilloscope to a power source, read both this subsection and the Safety Summary.



This instrument may be damaged if operated with the LINE VOLTAGE SELECTOR switch (on the rear panel) set for the wrong applied ac source voltage or if the wrong fuse is installed.

LINE VOLTAGE SELECTION

The oscilloscope operates from either a 115-V or a 230-V nominal ac power line with any frequency from 48 Hz to 440 Hz. Before connecting the power cord to a power source, verify that the LINE VOLTAGE SELECTOR switch, located on the rear panel, is set correctly and that the proper line fuse is installed. Refer to Figure 2-1 and the instrument rear panel.

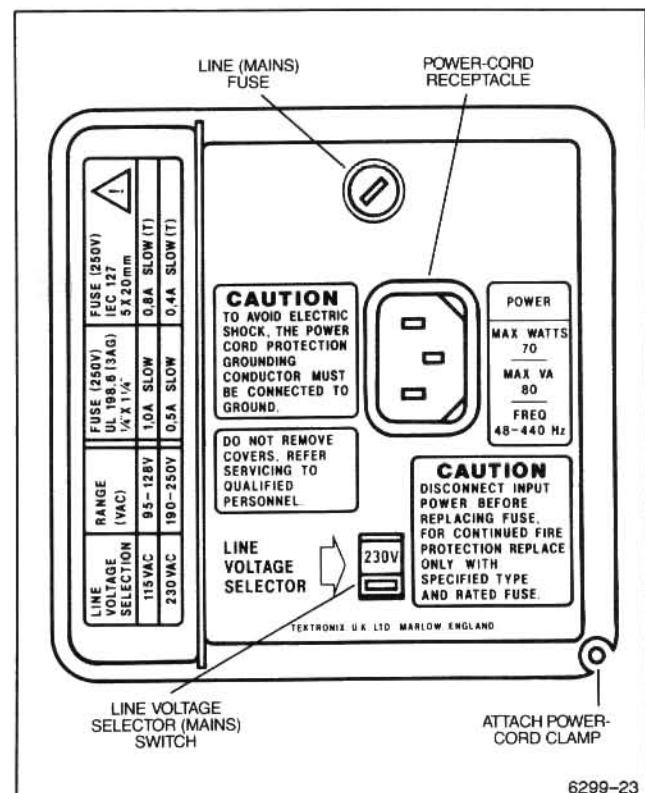


Figure 2-1. Voltage Selector switch, fuse, and power-cord receptacle.

To convert the 2225 for operation on another line voltage range, set the LINE VOLTAGE SELECTOR switch to the required position and install the appropriate fuse (listed on the rear panel). The detachable power cord may need to be replaced to match the particular power source. Power-cord option numbers are given in Figure 2-1; fuse part numbers are listed in Options and Accessories (Section 7).

LINE FUSE

The instrument fuse holder is located on the rear panel and contains the line (main) fuse. Use the following procedure to verify that the proper fuse is installed or to install a replacement fuse.

1. Unplug the power cord from the power-input source (if plugged in).
2. Press in the fuse-holder cap and release it with a slight counterclockwise rotation.
3. Pull the cap (with the attached fuse inside) out of the fuse holder.

NOTE

The two types of fuses listed on the rear panel are not directly interchangeable; they require different types of fuse caps.






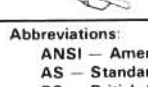
4. Verify that the fuse is the same type listed on the back of the instrument.
5. Reinstall the fuse (or replacement fuse) in the fuse-holder cap.
6. Reinstall the fuse and cap in the fuse holder by pressing in and giving a slight clockwise rotation of the cap.

POWER CORD

A detachable three-wire power cord with a three-contact plug is provided with each instrument for connecting to both the power source and protective ground. The protective-ground connector in the plug connects (through the protective-ground conductor) to the accessible metal parts of the instrument. For electrical-shock protection, insert this plug only into a power-source outlet that has a properly grounded protective-ground contact.

After plugging the power cord into its receptacle, secure it to the rear panel using the plastic clamp, screw, and washer provided.

Instruments are shipped with the power cord ordered by the customer. Available power-cord information is presented in Figure 2-2. Contact your Tektronix representative or local Tektronix Field Office for additional power-cord information.

| Plug Configuration | Usage | Line Voltage | Reference Standards | Option Number |
|--|-----------------------------------|--------------|--------------------------------------|---------------|
|  | North American 120V/ 15A | 120V | ANSI C73.11 NEMA 5-15-P IEC 83 | Standard |
|  | Universal Euro 240V/ 10-16A | 240V | CEE (7).II.IV.VII IEC 83 | A1 |
|  | UK 240V/ 13A | 240V | BS 1363 IEC 83 | A2 |
|  | Australian 240V/ 10A | 240V | AS C112 | A3 |
|  | North American 240V/ 15A | 240V | ANSI C73.20 NEMA 6-15-P IEC 83 | A4 |
|  | Switzerland 220V/ 6A | 220V | SEV | A5 |
| Abbreviations: ANSI — American National Standards Institute AS — Standards Association of Australia BS — British Standards Institution CEE — International Commission on Rules for the Approval of Electrical Equipment IEC — International Electrotechnical Commission NEMA — National Electrical Manufacturer's Association SEV — Schweizerischer Elektrotechnischer Verein | | | | |

(2931-21)6083-35

Figure 2-2. Power-cord and line-voltage data.

INSTRUMENT COOLING

To prevent instrument damage from overheated components, adequate internal airflow must be maintained at all times. Before turning on the power, verify that the air-intake holes on the sides and rear panel are free from any obstructions to airflow.

INITIAL START-UP

Up to now, you should have made the following preparations:

1. Read the safety information.
2. Verified that the LINE VOLTAGE SELECTOR switch is set for the source voltage to be used.
3. Verified the fuse for correct type and rating.
4. Attached the power cord.
5. Ensured that there is adequate ventilation around the instrument.

6. Plugged the power cord into the appropriate power-source outlet.

Now turn on your oscilloscope by pressing in the POWER button. Observe that the POWER-ON indicator, located below the button, is lit.

REPACKAGING

If this instrument is shipped by commercial transportation, use the original packaging material. Unpack the instrument carefully from the shipping container to save the carton and packaging material for this purpose.

If the original packaging is unfit for use or is not available, repackage the instrument as follows:

1. Obtain a corrugated cardboard shipping carton having inside dimensions at least six inches greater than the instrument dimensions and having a carton test strength of at least 275 pounds.
2. If the instrument is being shipped to a Tektronix Service Center for repair or calibration, attach a tag to the instrument showing the following: owner of the instrument (with address), the name of a person at your firm who may be contacted if additional information is needed, complete instrument type and serial number, and a description of the service required.
3. Wrap the instrument with polyethylene sheeting or equivalent to protect the outside finish and prevent entry of packing materials into the instrument.
4. Cushion the instrument on all sides by tightly packing dunnage or urethane foam between the carton and the instrument, allowing for three inches of padding on each side (including top and bottom).
5. Seal the carton with shipping tape or with an industrial stapler.
6. Mark the address of the Tektronix Service Center and your return address on the carton in one or more prominent locations.

CONTROLS, CONNECTORS, AND INDICATORS

The following descriptions are intended to familiarize the operator with the location and function of the instrument's controls, connectors, and indicators.

Refer to Figure 9-14 in the foldout pages for the location of all controls mentioned.

POWER AND DISPLAY

- ① **INTENSITY Control**—Adjusts the brightness of all displayed waveforms.
- ② **BEAM FIND Button**—Compresses the vertical and horizontal deflection to within the graticule area and intensifies the display to aid the user in locating traces that are overscanned or deflected outside of the crt viewing area.
- ③ **FOCUS Control**—Adjusts for optimum display definition. Once set, proper focusing is maintained over a wide range of display intensity.
- ④ **TRACE ROTATION Control**—Permits alignment of the trace with the horizontal graticule line. This control is a screwdriver adjustment that, once set, should require little attention during normal operation.
- ⑤ **POWER Switch**—Turns instrument power on or off.
- ⑥ **Power On Indicator**—Lights up while instrument is operating.

VERTICAL

- ⑦ **Channel 1 Vertical POSITION Control**—Controls the vertical display position of the Channel 1 signal. In X-Y mode the control is inactive.
- ⑧ **TRACE SEP Control**—Permits the magnified traces that appear in Horizontal MAG Mode to be positioned up to three divisions above the associated Channel 1 or Channel 2 traces.

Trace separation between the magnified and unmagnified traces is independent of the Channel POSITION control settings. In other Horizontal modes, the TRACE SEP control is inoperative.

- ⑨ **Channel 2 Vertical POSITION Control**—Controls the vertical display position of the Channel 2 signal. In X-Y mode the control vertically positions the display.
- ⑩ **Vertical MODE Switch CH 1-BOTH-CH 2**—Selects either a single channel for display or the dual-channel display mode.

CH 1—Selects only the Channel 1 input signal for display.

BOTH—Selects a combination of Channel 1 and Channel 2 input signals for display. The CH 1-BOTH-CH 2 switch must be in the BOTH position for ADD, ALT, and CHOP operation.

CH 2—Selects only the Channel 2 input signal for display.
- ⑪ **CH 2 INVERT Switch**—Inverts the Channel 2 display when in the CH 2 INVERT position. With CH 2 inverted, the oscilloscope may be operated as a differential amplifier when the BOTH-ADD vertical mode is selected.
- ⑫ **Vertical MODE Switch ADD-ALT-CHOP**—Sets the dual-channel vertical display mode.

ADD—Displays the sum of Channel 1 and Channel 2 input signals when BOTH is also selected. The difference of the Channel 1 and Channel 2 input signals is displayed when the Channel 2 signal is inverted.

ALT—Alternately displays the Channel 1 and Channel 2 input signals. The alternation occurs during retrace at the end of each sweep. ALT vertical mode is most useful for viewing both channel input signals at sweep rates of 0.5 ms per division and faster.

CHOP—Switches the display between the Channel 1 and Channel 2 vertical input signals during the sweep. The chopped switching rate (CHOP frequency) is approximately 500 kHz.

- ⑬ **CH 1 and CH 2 VOLTS/DIV Switches**—Select the vertical channel deflection factors from 5 mV to 5 V per division in a 1–2–5 sequence.

1X—Front-panel marking that indicates the deflection factor set by the VOLTS/DIV switch when a 1X probe or a coaxial cable is attached to the channel input connector.

10X PROBE—Front-panel marking that indicates the deflection factor set by the VOLTS/DIV switch when a 10X probe is attached to the channel input connector.

- ⑭ **Variable VOLTS/DIV and X10 Vertical Magnification Controls**—Provide continuously variable deflection factors between calibrated positions of the VOLTS/DIV controls and X1 or X10 vertical magnification of the displayed signal. The VOLTS/DIV sensitivity may be reduced by up to at least 2.5 times at the fully counterclockwise rotation of the variable (CAL) knob. A detent position at full clockwise rotation indicates the calibrated VOLTS/DIV position of the variable knob.

X10 vertical magnification of a displayed signal is obtained by pulling the variable (CAL) knob to the out position. A yellow ring is visible on the knob in the X10 Vertical Magnification position.

- ⑮ **AC-GND-DC (Input Coupling) Switches**—Select the method of coupling the input signal from the CH 1 OR X and CH 2 OR Y connectors to the vertical amplifiers.

AC—Capacitively couples the input signal to the vertical deflection system. The dc component of the input signal is blocked. The lower –3 dB bandpass is 10 Hz or less.

GND—Grounds the input of the vertical deflection channel; provides a zero (ground)

reference voltage display (does not ground the input signal).

DC—All frequency components of the input signal are coupled to the vertical deflection and signal acquisition systems.

- ⑯ **CH 1 OR X and CH 2 OR Y Input Connectors**—Provide for application of signals to the inputs of the deflection systems.

In X–Y mode, the signal connected to the CH 1 OR X input controls the horizontal deflection, and the signal connected to the CH 2 OR Y input controls the vertical deflection.

HORIZONTAL

- ⑰ **COARSE Horizontal POSITION Control**—Positions all the waveforms horizontally over a one-sweep-length range (for X1, X5, X10, or X50 Magnified).

- ⑱ **FINE Horizontal POSITION Control**—Allows for fine adjustment of the horizontal position of displayed waveforms.

- ⑲ **Horizontal MODE Switch**—Selects the horizontal mode of operation.

X1—This is the normal mode of operation with the waveform being unmagnified horizontally.

ALT—Displays the unmagnified waveform and the horizontally magnified waveform alternately.

MAG—Displays only the horizontally magnified waveform.

The amount of horizontal magnification is set by the Horizontal MAG switch (X5, X10, X50).

- ⑳ **SEC/DIV Switch**—Selects calibrated sweep rates from 0.5 s to 0.05 μ s per division in a 1–2–5 sequence of 22 steps. The X–Y position selects the X–Y mode; the CH 1 OR X input signal produces horizontal deflection for X–Y displays, and the CH 2 OR Y input signal produces vertical deflection.

- ②1 **Variable SEC/DIV Control**—Continuously varies the uncalibrated sweep time per division to at least 2.5 times the calibrated time per division set by the SEC/DIV switch. Full ccw rotation of the variable (CAL) knob increases the slowest sweep time per division to at least two seconds.
- ②2 **Horizontal MAG Switch**—Sets the amount of horizontal magnification to X5, X10, or X50 when the Horizontal MODE switch is set to either ALT or MAG.
- ②3 **GND Connector** (ϕ)—Provides an auxiliary ground connection directly to the instrument chassis via a banana-tip jack.
- ②4 **PROBE ADJUST Terminal**—Provides an approximately 0.5-V, negative-going, square-wave signal (at about 1 kHz) for use in compensating voltage probes and checking the vertical deflection system. The PROBE ADJUST output signal is not intended as a reference for checking either the vertical or the horizontal accuracy of the instrument.

TRIGGER

- ②5 **Trigger SLOPE Switch**—Selects either the positive (↗) or negative (↘) slope of the trigger signal to start the sweep.
- ②6 **Trigger LEVEL Control**—Selects the amplitude point on the trigger signal that produces triggering.
- ②7 **TRIG'D/READY Indicator**—A dual-function LED indicator. In P-P AUTO and NORM trigger modes, the indicator is turned on when triggering occurs. In SGL SWP trigger mode, the indicator turns on when the trigger circuit is armed, awaiting a triggering event; it turns off again as soon as the single sweep is triggered.
- ②8 **Trigger MODE Switch**—Determines the sweep triggering mode.

P-P AUTO—TV LINE—Triggering occurs on trigger signals having adequate amplitude and a repetition rate of about 20 Hz or faster. In the absence of a proper trigger

signal, an autotrigger is generated, and the sweep freeruns.

NORM—Permits triggering at all sweep rates (an autotrigger is not generated in the absence of an adequate trigger signal). NORM trigger mode is especially useful for low-frequency and low-repetition-rate signals.

TV FIELD—Permits stable triggering on a television field signal (vertical sync). In the absence of an adequate trigger signal, the sweep freeruns. The instrument otherwise behaves as in P-P AUTO.

SGL SWP—Selects single sweep-operation.

- ②9 **SGL SWP RESET Button**—Arms the trigger circuit for a single sweep. Triggering requirements are the same as in NORM trigger mode. After the completion of a triggered sweep, pressing in the SGL SWP RESET button rearms the trigger circuitry to accept the next triggering event.
- ③0 **HOLDOFF Control**—Adjusts the variable holdoff time. Variable holdoff starts at the end of the sweep.
- ③1 **Trigger SOURCE Switches**—Determine the source of the internal and external trigger signal for the trigger generator circuits.

CH 1—Trigger signal is obtained from the CH 1 OR X input connector.

VERT MODE—Trigger signals are automatically obtained alternately from the CH 1 OR X and CH 2 OR Y input signals in ALT vertical mode. In CHOP vertical mode, the trigger signal source is the sum of the Channel 1 and Channel 2 input signals.

CH 2—Trigger signal is obtained from the CH 2 OR Y input. The CH 2 INVERT switch also inverts the polarity of the internal Channel 2 trigger signal when the Channel 2 display is inverted.

EXT—Selects external trigger source. The actual form these triggers take is selected by the second SOURCE switch.

LINE—Routes a sample of the ac-power-line signal to the trigger circuit.

EXT/10—Divides the external signal applied to the EXT INPUT OR Z connector by a factor of ten before applying it to the trigger circuit.

EXT—Routes an external signal applied to the EXT INPUT OR Z connector to the trigger circuit.

EXT=Z—Routes the signal applied to the EXT INPUT OR Z connector to the z-axis amplifier rather than the trigger circuit.

- 32 **COUPLING Switch**—Determines the method of coupling the signal applied to the trigger circuit.

AC—Capacitively couples the input signal; the dc component of the signal is blocked.

HF REJ—Rejects (attenuates) the high-frequency components (above 30 kHz).

LF REJ—Rejects (attenuates) the low-frequency components (below 30 kHz).

DC—Directly couples all frequency components of the external signal to the trigger circuit.

- 33 **EXT INPUT OR Z Connector**—Provides for connection of external signals either to the trigger circuit for external triggering or to the z-axis amplifier for intensity modulation of the crt display.

REAR PANEL

- 34 **Fuse Holder**—Contains the ac-power-source fuse. See the rear-panel nomenclature for fuse rating and line-voltage range.
- 35 **Detachable Power Cord Receptacle**—Provides the connection point for the ac-power source to the instrument.
- 36 **Line Voltage Selector (Mains Switch)**—Selects the line voltage operating range of either 115 Vac or 230 Vac.

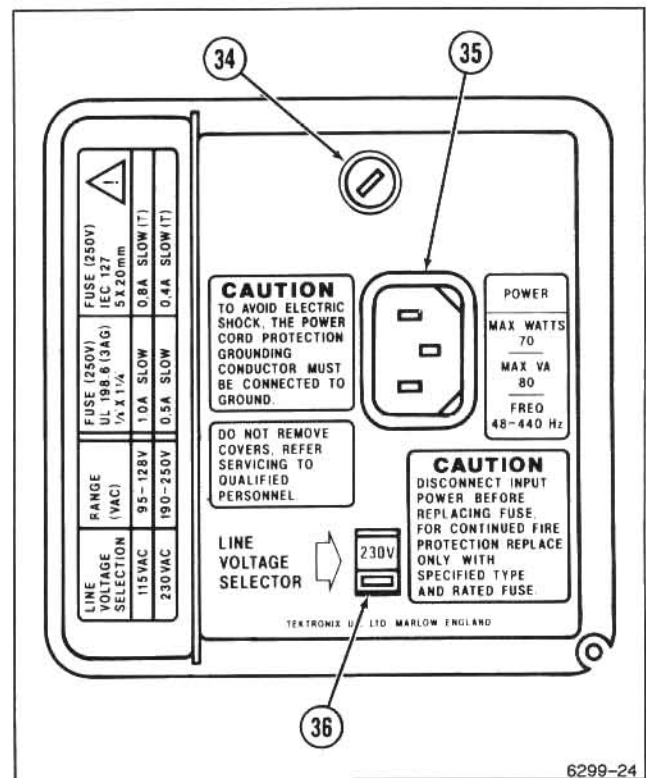


Figure 2-3. Rear Panel.

OPERATING CONSIDERATIONS

This part contains basic operating information and techniques that should be considered before attempting to make any measurements with the instrument.

GRATICULE

The graticule is internally marked on the faceplate of the crt to eliminate parallax-viewing errors and to enable measurements (see Figure 2-4). The graticule is marked with eight vertical and ten horizontal major divisions. In addition, each major division is divided into five subdivisions. The vertical deflection factors and horizontal timing are calibrated to the graticule so that accurate measurements can be made directly from the crt. Also, percentage marks for the measurement of rise and fall times are located on the left side of the graticule.

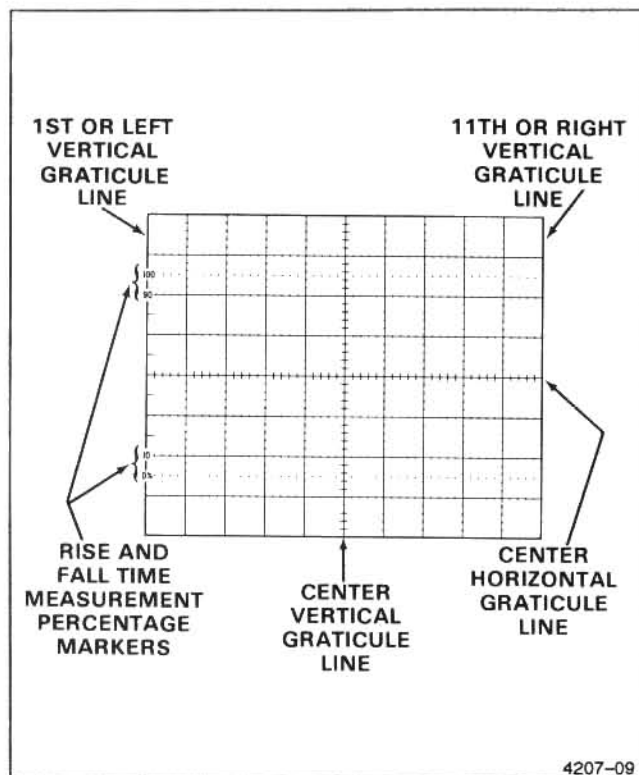


Figure 2-4. Graticule measurement markings.

GROUNDING

The most reliable signal measurements are made when the 2225 and the unit under test are connected by a common reference (ground lead) in addition to the signal lead or probe. The probe's ground lead provides the best grounding method for signal interconnection and ensures the maximum amount of signal-lead shielding in the probe cable. A separate ground lead can also be connected from the unit under test to the ground connector (⏏) located on the oscilloscope's front panel.

SIGNAL CONNECTIONS

Probes

Generally, the accessory probes supplied with the instrument provide the most convenient means of connecting a signal to the vertical inputs of the instrument. The probe and probe lead are shielded to prevent pickup of electromagnetic interference. The 10X attenuation factor of the probe offers a high input impedance that minimizes signal loading in the circuitry under test.

Both the probe itself and the probe accessories should be handled carefully at all times to prevent damage to them. Avoid dropping the probe body. Striking a hard surface can cause damage to both the probe body and the probe tip. Exercise care to prevent the cable from being crushed or kinked. Do not place excessive strain on the cable by pulling.

The standard-accessory probe is a compensated 10X voltage divider. It is a resistive voltage divider for low frequencies and a capacitive voltage divider for high-frequency signal components. Inductance introduced by either a long signal or ground lead forms a series-resonant circuit. This circuit will affect system bandwidth and will ring if driven by a signal containing significant frequency components at or near the circuit's resonant frequency. Oscillations (ringing) can then appear on the oscilloscope waveform display and distort the true signal waveshape. Always keep both the ground lead and the probe signal-input connections as short as possible to maintain the best waveform fidelity.

Misadjustment of probe compensation is a common source of measurement error. Due to variations in oscilloscope input characteristics, probe compensation should be checked and adjusted, if necessary, whenever the probe is moved from one oscilloscope to another or between channels. See the Probe Compensation procedure in Operator's Checks and Adjustments, or consult the instructions supplied with the probe.

Coaxial Cables

Coaxial cables may also be used to connect signals to the vertical input connectors, but they may have considerable effect on the accuracy of a displayed waveform. To maintain the original frequency characteristics of an applied signal, only high-quality, low-loss coaxial cables should be used. Coaxial cables should be terminated at both ends in their characteristic impedance. If this is not possible, use suitable impedance-matching devices.

INPUT-COUPLING CAPACITOR PRECHARGING

When the Input Coupling switch is set to the GND position, the input signal is connected to ground through the input-coupling capacitor and a high value resistance. This series combination forms a precharging circuit that allows the input-coupling capacitor to charge to the average dc voltage level of the signal applied to the input connector. Thus, any large voltage transients that may accidentally be generated are not applied to the vertical amplifier

when the input coupling is switched from GND to AC. The precharging network also provides a measure of protection to the external circuitry by reducing the current level that is drawn from the external circuitry while the input-coupling capacitor is charging.

If AC input coupling is in use, the following procedure should be followed whenever the probe tip is connected to a signal source having a different dc level than that previously applied. This procedure becomes especially useful if the dc-level difference is more than ten times the VOLTS/DIV switch setting.

1. Set the AC-GND-DC (input coupling) switch to GND before connecting the probe tip to a signal source.
2. Touch the probe tip to the oscilloscope ground (\hbar) connector.
3. Wait several seconds for the input-coupling capacitor to discharge.
4. Connect the probe tip to the signal source.
5. Wait several seconds for the input-coupling capacitor to charge to the dc level of the signal source.
6. Set the AC-GND-DC switch to AC. A signal with a large dc component can now be vertically positioned within the graticule area, and the ac component of the signal can be measured in the normal manner.

OPERATOR'S CHECKS AND ADJUSTMENTS

To verify the operation and basic accuracy of your instrument before making measurements, perform the following checks and adjustment procedures. If adjustments are required beyond the scope of these operator's checks and adjustments, refer the instrument to qualified service personnel.

For new equipment checks, before proceeding with these instructions, refer to Preparation for Use in this manual to prepare the instrument for the initial start-up before applying power.

INITIAL SETUP

1. Verify that the POWER switch is OFF (switch is in the out position), and the Line Voltage Selector switch is set for the correct source voltage. Then plug the power cord into the ac power outlet.
2. Press in the POWER switch (ON) and set the instrument controls to obtain a baseline trace:

Display

| | |
|-----------|----------------------|
| INTENSITY | Midrange |
| FOCUS | Best defined display |

Vertical (Both Channels)

| | |
|---------------------------|-------------------|
| VERTICAL MODE | CH 1 |
| POSITION (both) | Midrange |
| VOLTS/DIV (both) | 10 mV |
| AC-GND-DC (both) | DC |
| VOLTS/DIV Variable (both) | CAL (in detent) |
| Magnification (both) | X1 (CAL knobs in) |

Horizontal

| | |
|------------------|-----------------|
| SEC/DIV | 0.5 ms |
| SEC/DIV Variable | CAL (in detent) |
| POSITION | Midrange |
| MODE | X1 |

Trigger

| | |
|----------|-------------------------------|
| HOLD OFF | MIN (fully counter-clockwise) |
|----------|-------------------------------|

| | |
|----------|--|
| SOURCE | VERT MODE |
| MODE | P-P AUTO |
| SLOPE | Positive (↗) |
| COUPLING | AC |
| LEVEL | For a stable display (with signal applied) |

3. Adjust the INTENSITY and FOCUS controls for the desired display brightness and best focused trace.
4. Adjust the Vertical and Horizontal POSITION controls to position the trace within the graticule area.
5. Allow the instrument to warm up for 20 minutes before commencing the adjustment procedures. Reduce the INTENSITY level during the waiting time.

TRACE ROTATION ADJUSTMENT

NOTE

Normally, the trace will be parallel to the center horizontal graticule line, and TRACE ROTATION adjustment is not required.

1. Preset the instrument controls and obtain a baseline trace as described in Initial Setup.
2. Use the CH 1 POSITION control to move the baseline trace to the center horizontal graticule line.
3. If the baseline trace is not parallel to the center horizontal graticule line, use a small-bladed screwdriver or alignment tool to adjust the TRACE ROTATION control and align the trace with the graticule line.

PROBE COMPENSATION

Misadjustment of probe compensation is a source of measurement error. The attenuator probes are equipped with a compensation adjustment. To ensure optimum measurement accuracy, always check probe compensation before making

measurements. Probe compensation is accomplished by the following steps:

1. Preset the instrument controls and obtain a baseline trace as described in the Initial Setup.
2. Connect the two 10X probes (supplied with the instrument) to the CH 1 OR X and CH 2 OR Y input connectors.
3. Connect the Channel 1 probe tip to the PROBE ADJUST terminal.
4. Use the CH 1 POSITION control to vertically center the display. If necessary, adjust the Trigger LEVEL control to obtain a stable display on the positive (—) SLOPE.

NOTE

Refer to the instruction manual supplied with the probe for more complete information on the probe and probe compensation.

5. Check the waveform display for overshoot and rounding (see Figure 2-5); if necessary adjust the probe's compensation. Rotate the sleeve on the probe head to expose the adjustments (see Figure 2-6). Use a low-reactance alignment tool to adjust the LF comp capacitor for a square front corner on the waveform.

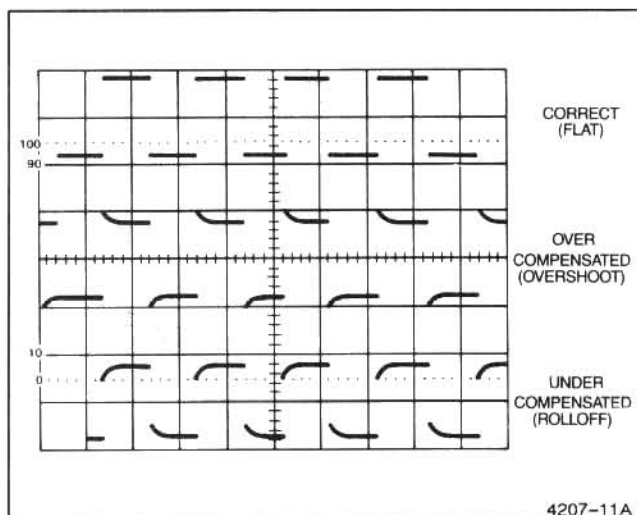


Figure 2-5. Probe compensation.

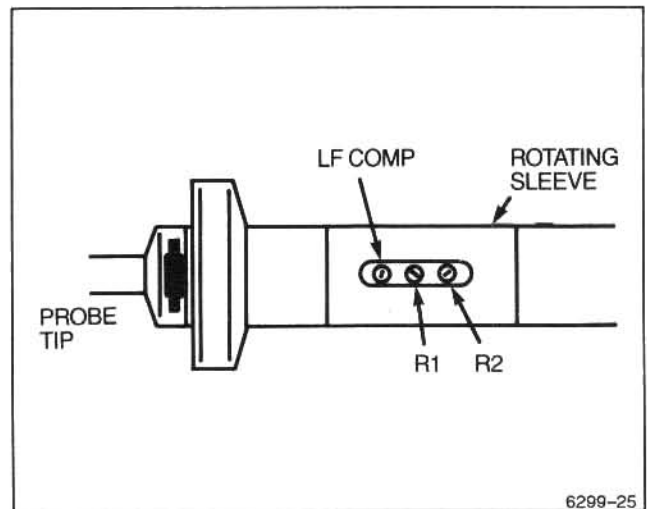


Figure 2-6. Probe compensation locations.

6. Disconnect the Channel 1 probe tip from the PROBE ADJUST terminal.
7. Connect the Channel 2 probe tip to the PROBE ADJUST terminal.
8. Set the Vertical MODE to CH 2.
9. Use the CH 2 POSITION control to vertically center the display.
10. Repeat step 5 for the Channel 2 probe.

THEORY OF OPERATION

SECTION ORGANIZATION

This section of the manual contains a general summary of instrument functions followed by a detailed description of each major circuit. A basic block diagram, (Figure 9-4), and the schematic diagrams are located in the tabbed diagrams section at the back of this manual. They are used to show the interconnections between parts of the circuitry, to indicate circuit components, and to identify interrelationships with the front-panel controls.

The schematic diagram number associated with each description is identified in the text and is shown on the block diagram. For best understanding of the circuit being described, refer to the appropriate schematic diagram and the block diagram.

INTEGRATED CIRCUIT DESCRIPTIONS

Digital Logic Conventions

Digital logic circuits perform many functions within the instrument. Functions and operation of the logic

circuits are represented by logic symbology and terminology. Most logic functions are described using the positive-logic convention. Positive logic is a system where the more positive of two levels is the TRUE (or 1) state; the more negative level is the FALSE (or 0) state. In this logic description, the TRUE state is HI, and the FALSE state is LO. The specific voltages which constitute a HI or a LO state vary between specific devices. For specific device characteristics, refer to the manufacturer's data book.

Linear Devices

The operation of individual linear integrated circuit devices in this section use waveforms or other techniques such as voltage measurement and simplified diagrams to illustrate their circuit operation.

GENERAL DESCRIPTION

In the following overall functional description of the 2225 Oscilloscope, refer to the block diagram (Figure 9-4) located in the diagrams section of this manual. In Figure 9-4 the numbered diamond symbol in each major block refers to the appropriate schematic diagram number.

Vertical

Signals to be displayed on the crt (cathode-ray tube) are applied to either or both the CH 1 OR X and the CH 2 OR Y input connectors. The signals may be coupled to the attenuator either directly (DC) or through an input-coupling capacitor (AC). The inputs may also be disconnected, and the input to the attenuators grounded, by switching to the GND position of the input coupling switch. In the GND

position, the ac-coupling capacitor is allowed to precharge to the dc level present at the input connector. This precharging prevents large trace shifts of the display when switching from GND to AC coupling. The Attenuators are switched by the front-panel VOLTS/DIV switches and scale the applied signal level to obtain the desired display amplitude.

The output signals from the Attenuators are applied to the Vertical Preamplifiers for amplification. The Channel 2 Preamplifier has additional circuitry, permitting the operator to invert the Channel 2 display on the cathode-ray tube (crt). Trigger pickoffs in each channel supply a trigger signal to the Trigger Amplifier when internal triggering is selected.

Input signals are selected for display by the Channel Switching circuit under control of the front-panel VERTICAL MODE switches. The output signal from

the Channel Switching circuit is applied to the Delay-line Driver stage. This stage converts a current input into a voltage output and provides an impedance match for the Delay Line. The Delay Line produces approximately 90 ns of delay in the vertical signal. This delay allows time for the Horizontal circuitry to start the sweep before the vertical signal is applied to the crt, so that the operator can see the signal that triggered the sweep.

Final amplification of the vertical signal is done by the Vertical Output Amplifier. This stage produces the signal levels that vertically deflect the crt electron beam. The upper frequency response of the Amplifier can be reduced by enabling the X10 Gain circuitry. For locating the position of off-screen displays, the dynamic range of the Amplifier can be limited with the Beam Find circuitry. This circuitry also intensifies the trace and limits horizontal deflection.

Triggering

The Trigger circuitry uses either the Internal Trigger signal obtained from the input signal(s), an External Trigger signal, or a Line Trigger signal derived from the ac-power-source to develop trigger signals for the Sweep Generator. The P-P Auto Trigger circuit sets the range of the Trigger Level to conform approximately to the peak-to-peak amplitude of the selected trigger signal when either Auto or TV Field Trigger mode is selected. This allows triggering on most signals without needing to adjust the TRIGGER LEVEL control. In Norm mode, the TRIGGER LEVEL control must be adjusted to the signal level before a sweep will be triggered.

The triggering circuitry contains the TV Field Sync circuit. This circuit provides stable triggering on television vertical-sync pulses when in the TV Field triggering mode. TV Line triggering is possible using P-P AUTO trigger mode.

Sweep

The Sweep Logic circuit controls the sweep generation and Z-Axis unblanking for the Sweep display. When the TRIGGER Mode switches are set to either P-P AUTO or TV FIELD and no trigger signal is

present, the Auto Baseline circuit causes the Sweep Logic circuit to produce a sweep for reference purposes. In the NORM setting, the Auto Baseline circuit is disabled and sweeps are not generated until a trigger event occurs. This is useful for triggering on low-repetition rate signals. The SGL SWP (single sweep) trigger mode allows only one sweep to be generated after being reset. Following the single sweep, the Trigger circuit is disabled until the SGL SWP RESET button is pressed again.

The Sweep Logic circuit controls the operation of the Miller Sweep Generator circuit. The Sweep circuit produces a linear sweep with a ramp time that is controlled by the SEC/DIV switch setting. The sweep signal is applied to the Horizontal Preamplifier for initial amplification and then to the Horizontal Output Amplifier to drive the crt horizontal deflection plates.

Horizontal

The Horizontal Preamplifier gain is increased by a factor of 5, 10, or 50 when the Horizontal MAG control is used. Horizontal positioning of the display is accomplished in the Horizontal Preamplifier circuit.

In the X-Y mode of operation, the Channel 1 signal from the internal Trigger circuitry passes through the X-Y Amplifier to the Horizontal Preamplifier. In this operating mode, the Channel 1 Internal Trigger signal supplies the horizontal deflection to the crt, and the Miller Sweep circuit is disabled to inhibit sweep generation.

Z-Axis

The Z-Axis drive from the Sweep Logic circuit is applied to the Z-Axis Amplifier. The output signal from the Z-Axis Amplifier circuit sets the crt intensity. When using Chop Vertical mode, a blanking signal from the Chop Oscillator circuit blanks the crt display while switching between the vertical channels.

The DC Restorer circuit applies the output voltage of the Z-Axis Amplifier between the cathode and grid of the crt. High dc potentials on these elements prohibit direct coupling to the crt.

Power Supply

The Power Supply provides the necessary operating voltages for the instrument. Operating potentials are obtained from a circuit consisting of the Power Transformer, Pre-regulator, Inverter and multi-winding transformer. The voltage produced by the Power Transformer output winding, after rectification, provides 45 Vdc minimum to the 40-kHz Preregulator circuit, which in turn, supplies a nominal 38 Vdc to the 20 kHz Inverter stage. A High Voltage Multiplier circuit produces the accelerating, focus, and cathode potentials used by the crt.

Probe Adjust

A front-panel PROBE ADJUST output is provided for use in adjusting probe compensation. The voltage at the PROBE ADJUST terminal is a negative-going square wave that has a peak-to-peak amplitude of approximately 0.5 V with a repetition rate of approximately 1 kHz.


DETAILED CIRCUIT DESCRIPTION

VERTICAL

Attenuators

The Channel 1 and Channel 2 Attenuator circuits, shown on diagram 1, are identical with the exception of the additional Invert circuitry in the Channel 2 Paraphase Amplifier. Therefore, only the Channel 1 Attenuator is described, with the Invert circuitry of Channel 2 discussed separately.

The Attenuator circuit (see Figure 3-1) provides control of the input coupling, the vertical deflection factor, and the variable volts/division gain. Vertical input signals for display on the crt may be connected to either or both the CH 1 OR X and the CH 2 OR Y input connectors. In the X-Y mode of operation, the signal applied to the CH 1 OR X connector provides horizontal (X-axis) deflection for the display, and the signal applied to the CH 2 OR Y connector provides the vertical (Y-axis) deflection for the display.

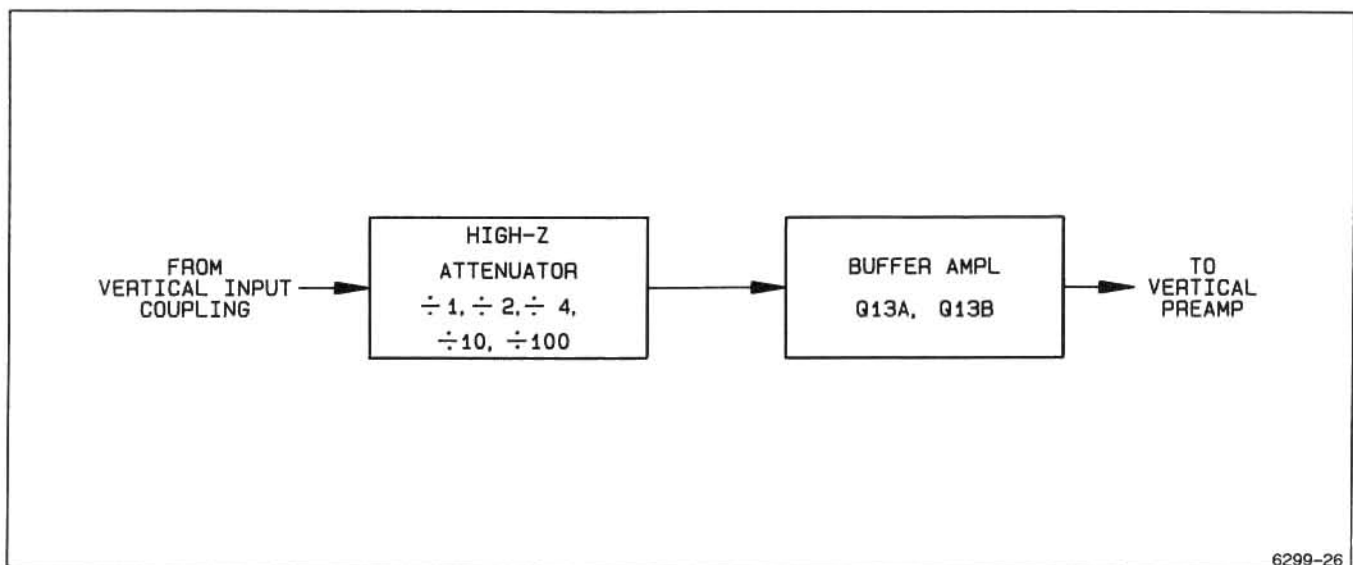

6299-26

Figure 3-1. Block diagram of the Channel 1 Attenuator circuit.

Input Coupling (AC–GND–DC)

A signal from the CH 1 OR X input connector may be ac or dc coupled to the High-Impedance Attenuator circuit or disconnected completely by the Input Coupling Switch. Signals from the CH 1 OR X input connector are routed through resistor R1 to Input Coupling switch S101. When S101 is set for dc coupling, the Channel 1 signal goes directly to the input of the High-Impedance Attenuator stage. When ac coupled, the input signal passes through dc-blocking capacitor C2. The blocking capacitor stops the dc component of the input signal from reaching the Attenuator circuit. When switched into the signal path, attenuator AT1 attenuates the input signal by factors of 100, 10, 4, or 2. When S101 is set to GND, the direct signal path is opened, and the input of the attenuator is connected to ground. This provides a ground reference without the need to remove the applied signal from the input connector. The coupling capacitor precharges through R4 to prevent large trace shifts when switching from GND to AC.

Input Attenuator

The effective overall deflection factor of each vertical channel is determined by the setting of the Channel VOLTS/DIV switch. The basic deflection factor of the Vertical system is 5 mV/DIV. For VOLT/DIV switch settings above 5 mV/DIV, frequency compensated voltage dividers (attenuators) are switched into the circuit. Each channel has 2X, 4X, 10X, and 100X attenuators that are selected in various combinations to produce the indicated deflection factor. Each attenuator contains an adjustable series capacitor to provide correct attenuation at high frequencies and an adjustable shunt capacitor to provide correct input capacitance.

Source Follower

The Channel 1 signal from the input attenuator is connected to source follower Q13A via R6 and C6. Resistor R5 provides the input resistance. FET Q13B is a constant current source for Q13A. Transistors Q13A and Q13B provide a high input impedance for the attenuator stage and the output drive current needed for Paraphase Amplifier U30 (the first stage of amplification).

In the event that excessive high-amplitude signals are applied to source follower Q13A, the signal will

be limited by CR7 and the gate-source junction of Q13A. If an excessive negative-going signal causes CR7 to become forward biased, Q13A gate is clamped to approximately -9.3 V. An excessive positive-going signal will forward bias the gate-source junction of Q13A. As soon as gate current flows, the gate voltage will stop increasing. Gate current is limited by the high resistance of R6.

Paraphase Amplifier

Paraphase Amplifier U30 converts the single-ended signal from Q13 into a differential signal for the Vertical Preamplifier. The signal from Q13B pin 2 goes to the base of one transistor in U30. The other input transistor in U30 is biased by the divider network formed by R30, R31, R32, and R33. Emitter current for the two input transistors is supplied by R22 and R23. Resistor R29 sets the gain for the stage. The network formed by C8 and R9 reduce the substrate capacitance of Q13 at high frequencies. R8 biases the diode substrate of Q13 off. The collector current of the two input transistors serves as emitter current for the differential output transistor pairs. Base bias voltages for the output pairs are developed by the divider network formed by R39, R41, R42, and Variable VOLTS/DIV potentiometer R43. The transistors of U30 have matched characteristics, so the ratio of currents in the two transistors, U83C and U83D, connected as diodes, determines the current ratios in the output transistor pairs of U30.

As Variable VOLTS/DIV potentiometer R43 is rotated from calibrated to uncalibrated, the conduction level of the transistors connected to R35 increases. Since the transistor pairs are cross connected, the increased conduction in one pair of transistors subtracts from the output current produced by the transistor pair connected to R38, and the overall gain of the amplifier decreases. Balance potentiometer R33 is adjusted to balance the amplifier for minimal dc trace shift as the CH 1 Variable VOLTS/DIV control is rotated.

Incorporated in the Channel 2 Paraphase Amplifier is circuitry that allows the user to invert the polarity of the Channel 2 signal. When CH 2 INVERT switch S90 is selected for NORM, the transistor pairs in U80 are biased as they are in U30, and the CH 2 trace is not inverted. For the CH 2 INVERT position of S90, connections to the bases of the output transistor pairs are reversed, reversing the polarity of the output signal to produce an inverted Channel 2 trace. Invert Balance potentiometer R83 is adjusted

for minimal dc trace shift in CH 2 INVERT when rotating CH 2 Variable VOLTS/DIV. Balance Potentiometer R84 is switched in with R83 when in NORM; it is adjusted for minimal dc trace shift when rotating CH 2 Variable VOLTS/DIV.

Vertical Preamplifiers

The Channel 1 and Channel 2 Vertical Preamplifiers, shown on diagram 2, are identical in operation. Operation of the Channel 1 amplifier is described. Differential signal current from the Paraphase Amplifier is amplified to produce drive current for the Delay Line Driver. Internal trigger signals for the Trigger circuitry are picked off prior to the Vertical Preamplifier. The Channel Switch circuitry controls channel selection for the crt display.

Common-base transistors Q102 and Q103, which complete the Paraphase Amplifier portion of the circuitry shown on diagram 1, convert differential current from the Paraphase Amplifier into level-shifted voltages that drive the bases of the input transistors of Vertical Preamplifier U130 and the Internal Trigger circuitry.

Common-mode components CR104, CR105, R104, and R105 provide X1 gain. X10 gain is selected by switching in CR111, CR112, R107, R110, R111, R112, and R128. X10 gain is adjusted by R112, and X10 balance is set by R107. C110 limits the bandwidth in X10 mode to about 5.2 MHz to 7.8 MHz.

Emitter current for the input transistors of U130 is supplied by Q114 and Q115. The base bias voltage to Q114 and Q115 is unbalanced through potentiometer R123 (the CH 1 POSITION control) to produce vertical positioning of the Channel 1 trace. The collector current of each input transistor of U130 is the emitter current for two of the differential output transistors. One of the collectors of each output pair is grounded, and the other provides output drive to the Delay Line Driver. The base bias voltages of the transistors with grounded collectors are held at ground potential by R136. The base voltages of the other transistors are controlled by the Channel Switch circuitry.

When Channel 1 is selected to drive the Delay Line Driver, the Q output (pin 9) of U540A is HI. The transistors with the ungrounded collectors are then forward-biased, and the Channel 1 signal is conducted through to the Delay Line Driver. If Channel 1

is not selected, then the Q output of U540A is LO. The transistors with the ungrounded collectors are then reverse-biased, and the output signals will be conducted to ground by the other transistor pair. The gain of the Preamplifier is set by adjusting R145 to control the signal current that is shunted between the two differential outputs.

Channel Switch Logic

The Channel Switch circuitry, shown on diagram 2, utilizes the front-panel Vertical MODE switches to select the crt display format. See Figure 3-2 for a block diagram of the circuit.

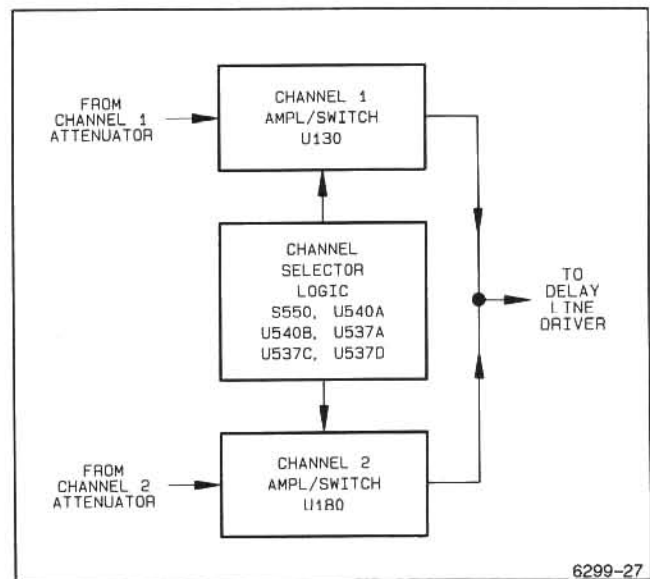


Figure 3-2. Block diagram of the Channel Switching circuit.

When any display mode other than X-Y is selected, the XY line connected to S550 is at ground potential. Vertical MODE switches S545 and S550 control the connection between the XY control line and the SET and RESET inputs of flip-flop U540A (SET and RESET are active LO) to obtain the various display formats described below.

CHANNEL 1 DISPLAY ONLY. The CH 1 position of S550 grounds the SET input of U540A while the RESET input is held HI by pull-up resistor R539. This sets U540A and produces a HI and a LO on the Q and \bar{Q} outputs respectively, and the Channel 1 Preamplifier signal then drives the Delay Line Driver (as described in the Vertical Preamplifier section). The Channel 2 Preamplifier will be disabled.

CHANNEL 2 DISPLAY ONLY. The CH 2 position of S550 holds the RESET input of U540A LO through CR538, and the SET input is held HI by pull-up resistor R538. This resets U540A, making the Q output of U540A LO and the \bar{Q} output HI. The Channel 2 Preamplifier signal is then enabled to drive the Delay Line Driver, while the CH 1 Preamplifier is disabled.

To display the ADD, ALT, or CHOP formats, S550 must be in the BOTH position to ground the A, C, and F pins of S545.

ADD DISPLAY. In the ADD position of S545, both the SET and RESET inputs of U540A are held LO by CR534 and CR537. This forces the Q and \bar{Q} outputs of U540A both HI, and signal currents from the Channel 1 and Channel 2 Preamplifiers add together to drive the Delay Line Driver.

CHOP DISPLAY. In the CHOP position, the CHOP ENABLE line is held LO, keeping the Q output of flip-flop U540B HI. This enables CHOP multivibrator U537D to begin switching. The switching rate is determined primarily by the component values of R544, R545, and C545. The output of U537C (the inverted output of the multivibrator circuit) supplies the CHOP clock to flip-flop U540A via U537A. The output of U537C also drives U537B, the CHOP Blanking Pulse Generator.

Coupling capacitor C547 and resistors R547 and R548 form a differentiating circuit that produces positive-going and negative-going short duration pulses. These pulses are inverted by U537B to generate the Chop Blank signal to the Z-Axis Amplifier. The pulses blank the crt during CHOP switching times.

The Alt Sync signal applied to one input of U537A is HI except during Holdoff. This allows the output of U537C to be inverted by U537A which drives the clock input of U540A. Since the \bar{Q} output of U540A is connected back to the D input, and both the SET and RESET inputs are HI (unasserted), the outputs of U540A toggle (change states) with each clock input. The Delay Line Driver is then driven alternately from the Channel 1 and Channel 2 Preamplifiers at the CHOP rate.

ALTERNATE DISPLAY. In ALT, the CHOP ENABLE line is held HI, disabling CHOP multivibrator U537D. The output of U537C will be HI and the CHOP BLANK signal from U537B will be LO. Input signals to U537A are the HI from U537C and the ALT SYNC signal from the Holdoff circuitry in the Sweep Generator. The output of U537A will then be the inverted ALT SYNC signal that clocks Channel Select flip-flop U540A. This causes the outputs of U540A to toggle at the end of each sweep so that the Channel 1 and Channel 2 Preamplifiers alternately drive the Delay Line Driver.

Delay Line Driver

The Delay Line Driver converts the signal current from the Vertical Preamplifiers into a signal voltage for input into the Delay Line. Transistors Q202, Q203, Q206, and Q207 form a differential shunt feedback amplifier with the gain controlled by R216 and R217. Common-mode dc stabilization of the Delay Line Drive Amplifier is provided by U225. Should the voltage at the junction of R222 and R223 deviate from zero, U225 will sink or source base current to Q202 and Q203 through R202 and R203. This will return the outputs of the Delay Line Driver to an average dc value of zero volts. Delay Line DL224 provides a vertical signal delay of approximately 90 ns so that the Sweep Generator has sufficient time to produce a sweep before the vertical signal that triggered the sweep reaches the vertical deflection plates.

Vertical Output Amplifier

The Vertical Output Amplifier drives the vertical deflection plates of the crt. Signals from the Delay Line go to a differential amplifier formed by Q230 and Q231 with low- and high-frequency compensation provided by the RC networks between the emitters. Thermal compensation is provided by thermistor RT236, and overall circuit gain is set by R233. The output stage of the amplifier is two, compound-shunt transistor pairs, Q254-Q256 and Q255-Q257, that convert the collector currents of Q230 and Q231 to proportional output voltages. Resistors R256 and R257 serve as feedback elements. High-frequency compensation is provided by C256 and C257.

Vertical Beam Find

Beam Find is used to reduce the vertical trace deflection to within the graticule area for locating off-screen and over-scanned traces. BEAM FIND switch S390 adjusts the Delay Line Driver amplifier biasing to limit the voltage swing at the crt plates. When S390 (diagram 6) is in the normal position (not pressed), the BEAM FIND voltage level on R226 is about 0.4 V. When the BEAM FIND switch is pressed, the voltage level on R226 goes to about -8.6 V. This level forces the output of U225 LO and biases Q202 and Q203 such that the amplifier dynamic range is limited.

Alternate Sweep Separation

The circuit consisting of Q283, Q284, Q285, and associated components provides a means of vertically positioning the Alternate (Magnified) sweep, with respect to the X1 mode trace during Alternate Horizontal Mode displays. During the Alternate (Magnified) sweep interval, the $\overline{\text{SEP}}$ signal from the Alternate Display switching circuit is LO, and Q283 is biased off. This allows TRACE SEP potentiometer R280 to affect the bias on one side of a differential current source composed of Q284 and Q285. The potentiometer supplies a dc offset current to the Vertical Output Amplifier that changes the position of the Alternate trace on the screen.

During the X1 Mode sweep interval the $\overline{\text{SEP}}$ signal is HI (unasserted), and Q283 is biased on. The base voltages of Q284 and Q285 are then the same, and equal current is supplied to both sides of the amplifier so that no offset of the trace occurs.

TRIGGER

The Trigger Amplifier, shown on diagram 3, provides signals to the Trigger Generator from either the Vertical Preamplifiers, the EXT INPUT connector, or the power line. The SOURCE switch selects between Channel 1, Channel 2, line, or external trigger sources. The COUPLING switch selects AC, DC, LF REJECT, or HF REJECT trigger-signal coupling.

Internal Trigger

Signals from the Vertical Preamplifiers drive the CH 1 and CH 2 Internal Trigger Amplifier with channel selection determined by the Vertical and Horizontal MODE switches. Trigger pickoff from the Preamplifiers is accomplished by U315B and U315C for Channel 1 and U325A and U325B for Channel 2. The circuitry associated with Channel 2 is the same as Channel 1 except that it does not have a trigger-offset adjustment.

Differential vertical signals from the Channel 1 Preamplifier go to U315B and U315C. These emitter-follower transistors each drive one input transistor in U335. The collectors of the U335 input transistors in turn supply emitter current to two pairs of current-steering transistors. The compensation and biasing network connected between the emitters of the input transistors in U335 is fixed for Channel 2 but not for Channel 1. Potentiometer R338 in the emitter circuit adjusts the bias levels of the two input transistors to match the dc offsets of the Channel 1 and Channel 2 Trigger Amplifiers.

One transistor in each side of the output differential amplifier pairs of U335 has its base bias set to zero volts. The bias voltage of the other transistor in each pair is controlled by the CH 1 TRIG signal from the Trigger Switch circuitry. When the CH 1 TRIG signal is LO, the transistors in each output pair with the collectors connected together are biased on, and the other transistors in the output pairs are off. The collector signal currents of the conducting transistors are equal in magnitude but of opposite polarity, so signal cancellation occurs. When the CH 1 TRIG signal is HI, the other transistors in each pair are biased on, and a differential signal is developed across output load resistors R339 and R340 to drive the Internal Trigger Amplifier.

Internal Trigger Amplifier

Internal trigger channels are chosen by the SOURCE switch being set to CH 1, VERT MODE, or CH 2. The logic function required to generate CH 1 TRIG and CH 2 TRIG is performed by U300, U304, CR300, CR301, and CR302. External Trigger is selected by the SOURCE switches being set to EXT, and EXT=Z or EXT or EXT/10. Line Trigger is selected by the SOURCE switches being set to EXT and LINE.

CHANNEL 1. When the Trigger SOURCE is set to CH 1, Channel 1 is the trigger source whether displayed or not. The Channel 1 signal is also the trigger source under other settings of the Trigger SOURCE and Vertical MODE switches that call for the Channel 1 signal to be displayed. Those conditions are:

Trigger SOURCE set to VERT MODE and the Vertical MODE is set to CH 1, or

Trigger SOURCE set to VERT MODE and the Vertical MODE is set to BOTH and ALT.

CHANNEL 2. When the Trigger SOURCE is set to CH 2, then Channel 2 provides the trigger signal whether Channel 2 is displayed or not. As with Channel 1, other Trigger SOURCE and Vertical MODE settings will call up the Channel 2 as the trigger signal when Channel 2 is displayed. Those conditions are:

Trigger SOURCE set to VERT MODE and the Vertical MODE is set to CH 2, or

Trigger SOURCE set to VERT MODE and the Vertical MODE is set to BOTH and ALT.

VERT MODE. When the SOURCE switch is set to VERT MODE the trigger source selection is determined by the Vertical MODE switch. Vertical MODEs of CH 1, CH 2, and BOTH in ALT are described above. Vertical MODEs of BOTH in ADD or CHOP result in the trigger source being the arithmetic sum of the Channel 1 and Channel 2 input signals.

EXT. When the SOURCE switches are set to EXT, and either EXT=Z or EXT, the trigger source is the signal applied to the EXT INPUT OR Z connector. With EXT and EXT/10 selected, the trigger signal is as above but attenuated by a factor of 10. With EXT and LINE selected, the line-frequency signal, generated in the power supply, is passed to the External Trigger Input Amplifier (shown on diagram 6). In each case, the buffer consisting of Q370A and Q370B, drives differential amplifier U340. This amplifier has the same form as the CH 1 and CH 2 preamplifiers. External offset adjustment is provided by R360. The LO logic signal generated by U308B, EXTEN, switches on the external trigger path.

Trigger Amplifier

The Trigger Amplifier converts the differential signals from the vertical and external preamplifiers into a single-ended analog trigger signal that drives the X-Axis amplifier (for X-Y Mode displays) and the Trigger Generator.

Transistors Q363 and Q365 act as a cascade stage to add the signals passed by the preamplifiers to the offset current provided by the coupling control amplifiers on diagram 3. The resulting differential output drives the differential pair Q366 and Q367. The collector load of transistor Q367 is R388. That load is driven via cascode transistor Q368 and "diode-connected" transistor U380D. Transistor Q366 drives current mirror U370D and U370B. Diode CR370 ensures that the collector-base voltage of U370D is not too low, and CR369 compensates for U370C, to equalize the collector potentials of U370B and U370D.

The collector current of U370C is the output of the current mirror and is equal to the collector current of Q366. R388 passes a current equal to the difference in the collectors of Q366 and Q367 (the trigger signal). Transistor U380C acts as an impedance buffer, whose voltage drop is compensated by U380D. The output from the emitter of U380C is the analog trigger signal. In X-Y mode, U380B is biased off, allowing the trigger signal to be passed to the X-Axis Amplifier. U380E is switched off when HF REJECT is selected. This allows C372 to be switched in by U380A, thereby shunting signals of frequencies about 30 kHz and above.

Peak Rectifiers

The analog trigger signal is passed to the positive and negative Peak Rectifier circuits. The Peak Rectifiers generate voltages equal to the positive and negative peaks of the analog trigger waveform in P-P AUTO and TV FIELD modes. In NORM and SGL SWP modes, the Peak Rectifier outputs assume a voltage of about the full peak-to-peak limits of the trigger signal.

The analog trigger signal is applied to the bases of U415B and U435A. In P-P AUTO, C418 charges to the positive peak of the analog trigger signal less the U415B base-emitter drop. The base-emitter drop of U415D compensates so that the output of U425B is equal to the positive peak of the analog trigger signal. In NORM Trigger mode, the base drive to U415A rises to about +3 V, which drives the output of U425A to this level.

In P-P AUTO, C431 charges to the negative peak of the analog trigger signal, and Q435 will only switch on if the base drive to U435 is less than that of U435B. If Q435 switches on, then C431 will discharge to a more negative voltage so the output of U425A will track the negative peak of the analog trigger signal. In NORM mode, U415E switches on, and C431 charges to about -3 V via CR431. Trigger LEVEL control R426 selects a trigger level voltage between the peak rectifier outputs to give trigger operation over a sufficient dynamic range.

Coupling Circuit

The Trigger Amplifier is optimized for bandwidth, not dynamic range. A current is added to the summing stage of Q363 and Q365 (via R397 and R398) to shift the desired switching point on the analog trigger signal to the threshold of the Schmitt Trigger circuit (fixed at zero volts). The selection of current drivers to feed the Trigger Amplifier is achieved by emitter switching of differential pairs U445C and U445D, U445A and U445B, and U435C and U435D. In NORMAL DC coupling, a fixed current proportional to the voltage on the LEVEL control is passed to the summing stage by U445C and U445D. This is enabled by logic signal DC from U308A being HI to bias on Q420.

In NORMAL AC coupling, the dc component of the analog trigger signal is extracted by a low-pass filter circuit R470, C471, C472, and U415C. The dc component is added to the LEVEL voltage, and the result is fed into amplifier U450A. The output of U450A controls differential pair U435C and U435D and completes the feedback loop that adjusts the offset current so that the input of U450A is held at zero volts. This forces the DC component of the analog trigger signal to be equal and opposite to the LEVEL voltage, giving AC coupling with DC shift. LF REJECT operates in exactly the same way, except that the time constant of the low-pass filter is changed by switching off U415C, allowing C473 to dominate the circuit. P-P AUTO operates by establishing a feedback loop with U450B to hold the voltage on LEVEL at zero. Note that P-P AUTO does not distinguish between DC and AC coupling.

Trigger Level Comparator

The Trigger Level Comparator compares the level of trigger signals selected by the Trigger SOURCE switch to a zero voltage level. Positive- or negative-

slope triggering is selected by the front-panel Trigger SLOPE switch.

The analog trigger signal drives the base of U460B. The transistors of U460 form a differential amplifier. With the input to U460E grounded, it is effectively a "single-ended" to differential amplifier. The cross-coupled collector outputs can reverse the direction of the signal fed to the succeeding stage depending on the selection by the SLOPE control.

Schmitt Trigger and TV Trigger Circuit

This circuitry generates a signal that drives the Trigger Logic as a function of the Trigger Level Comparator output signal and the Trigger MODE switches.

The output signals from the Trigger Level Comparator drive Q400 and Q401. These transistors are configured as a current mirror that converts the differential output to a single-ended current to drive amplifier U480C. Slope Balance potentiometer R481 corrects for dc offsets between positive and negative slopes. Shunt feedback amplifier U480C converts a current input to a voltage output to drive the input of the Schmitt Trigger, U480D, through R485. Positive feedback for the Schmitt Trigger is provided by Trigger Sensitivity potentiometer R489, and C489 reduces trigger jitter by increasing positive feedback at higher frequencies. The setting of R489 determines the circuit hysteresis.

When TV FIELD is not selected, the TVF signal connected to R487 is HI (unasserted). Transistors Q488 and Q489 are biased off, and a LO is placed on one input of U480A by R492-R493. This LO input will cause U480A to invert the output from U480D. With Q489 off, a LO will be placed on one input of U480B by R495, and U480B will also act as an inverter. The Trigger signal at the output of U480B is therefore the same as the input signal to U480A.

When TV FIELD is selected, the TVF line is LO (asserted). The outputs of U480D will determine the conduction states of Q488 and Q489, and the input of U480A connected to R492 will be HI. The output of U480A will be LO, and U480B will invert the signal at its other input. Signals at the collector of Q489 are filtered by C495, R495 and C496 to reject TV Video information and average the TV horizontal-sync pulses. Setting the trigger-level threshold near the center of the horizontal-sync-pulse swing establishes the untriggered level. When the TV vertical-sync block occurs, the output of the filter

applied to U480B pin 7 rises to a level that will cause the Trigger output gate U480B pin 3 to switch. Precise TV field synchronization is obtained as a result of this filtering action. The Trigger signal output will be the inverse of the filtered signal appearing at U480B pin 7.

SWEEP AND SWEEP GENERATOR LOGIC

The Sweep Logic circuitry and the Sweep Generator circuitry, shown on diagrams 4 and 5 respectively, produce a linear voltage ramp that drives the Horizontal Preamp. The Sweep Logic circuit also produces signals that are used to generate correct timing of the crt unblanking and intensity levels used for viewing the display. See Figure 3-3 for the block diagram of the Sweep Generator and Logic circuitry.

Miller Sweep Generator

The Miller Sweep Generator (diagram 5) produces a linear voltage ramp that drives the Horizontal Amplifier. It produces the ramp voltage by maintaining a constant current through timing capacitors, causing a linear voltage rise across them as they charge.

Field-effect transistors Q704A and Q704B are matched devices with Q704B acting as the current source for Q704A. Since the gate and source of Q704B are connected together, the source current available to Q704A is just enough so that there is no voltage drop across the gate-source junction of Q704A.

When the sweep is not running, Q701 is biased on, holding the selected timing capacitors in a discharged state. The low impedance of Q701 in the feedback path holds the Miller Sweep output near ground potential. The voltage across Q701, in addition to the base-emitter voltage of Q706, prevents Q706 from becoming saturated.

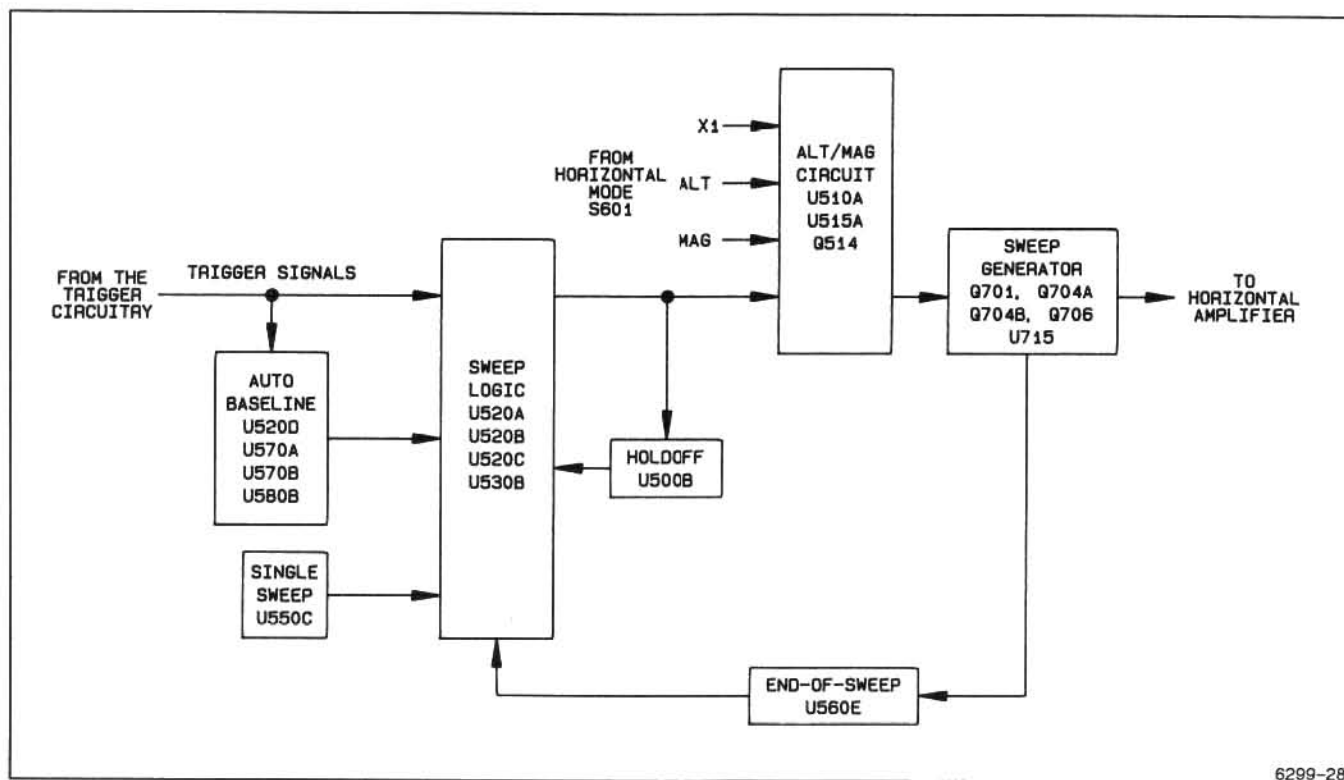


Figure 3-3. Block diagram of the Sweep Generator and Logic circuit.

The sweep ramp is initiated when Q536 (diagram 4) is biased off. The $\overline{\text{GATE}}$ signal going to the base of Q701 from the Sweep Logic circuit turns Q701 off. The timing capacitors then begin charging at a rate set by timing resistors R701, R702, and the position of the SEC/DIV switch S701. One end of timing resistor R701 is connected to the wiper of R721, and the other end is connected to the input of the Miller integrator. Due to feedback from the circuit output through the timing capacitors, the integrator input voltage at the gate of Q704A remains fixed and sets a constant voltage across the timing resistors. This constant voltage produces a constant charging current through the timing capacitors, which results in a linearly increasing voltage ramp at the output of the Miller Sweep circuit.

When the ramp reaches approximately 12 V, the Sweep Logic circuitry will initiate the holdoff period during which Q701 is turned on and the Sweep Generator is reset. This holdoff period is necessary so that the timing capacitors can be fully discharged before another sweep starts. Capacitors C704 and C703 are always in the charging circuit and are used for high sweep speeds. Capacitors C701 and C702 are used for medium sweep speeds; C701 alone is used for slow sweep speeds.

The SEC/DIV Variable circuitry utilizes an operational amplifier to maintain a constant reference voltage at one end of R721 independent of the circuit load. The voltage applied to the timing resistors varies with the setting of R721, the SEC/DIV Variable control. A fixed dc voltage is applied to the noninverting input of the operational amplifier, and feedback resistors R717 and R718 establish double that voltage at the anode of VR719. Resistor R722 is used to adjust the reference voltage when in the 0.5 ms to 10 μs SEC/DIV ranges to correct for mismatch between timing capacitors C701 and C702.

Sweep Logic

The purpose of the Sweep Logic circuit (diagram 4) is to control the sweep start dependent upon the trigger signal and Trigger MODE setting. It also provides the signal for Alternate Channel Switching and Alternate Magnification.

NORM. When NORM trigger is selected, the circuit is ready to start the sweep in response to a trigger signal. U530B has a LO on the SET, RESET, and D input. A trigger pulse received at the CLOCK pin of U530B will clock the LO on the D input to the Q output and enable the sweep to start. The output of the

sweep generator is fed back via W701-3 into the potential divider R501 and R502. This divider is arranged so that when the ramp voltage reaches approximately 12 V, U560E is turned on, producing a LO on the input of inverter U520A. The signal from U520B is inverted by U520C to give an overall OR function which is fed to the SET input of U530B. This overrides the CLOCK input and puts a HI on the Q output, resetting the sweep. The sweep reset is also fed to the input of monostable multivibrator U500B, which gives a holdoff time dependent upon the holdoff capacitor selected and the variable holdoff resistor chain. The holdoff pulse from the monostable maintains the HI on the SET input of U530B until the end of the holdoff period. At that time the SET is driven LO, allowing the next trigger pulse to start the sweep.

P-P AUTO. In the P-P AUTO mode, the sweep will free-run in the absence of a trigger signal. Should there be more than 50 ms between trigger pulses, the Auto Baseline circuit, consisting of U580B, U520D, U570A, and U570B, will initiate a sweep. The circuit of U580B is a 20-Hz clock pulse generator. The 20-Hz clock signal is passed through Schmitt trigger U520D to provide a fast rise time. This is to ensure that U570A pin D and U570B pin D switch at the same time.

With no trigger signal, the first clock pulse from U580B resets U570A, putting a HI on the D of U570B. This will then be clocked (giving a LO on TRIGGERED) when the next 50-ms pulse arrives. If the end of sweep has occurred and the holdoff period has elapsed, then the output of U520C will be LO. Because TRIGGERED and P-P AUTO are both LO, the output of U550D will put a LO on one input of U550B. As the other input is also LO, the output of U550B will put a HI on the RESET pin of U530B. That resets the flip-flop, placing a HI on the base of Q536 that turns it off and forces $\overline{\text{GATE}}$ LO at the collector of Q536 to initiate a sweep.

If a trigger occurs, the HI on the D pin of U570A is passed to the Q of U570A, to reset U570B, and put a HI on the TRIGGERED line. The output of U550B will then be LO, allowing U530B to respond to the next trigger signal. When the TRIGGERED line is HI the TRIG'D/READY light is turned on via U550A.

SINGLE SWEEP. When the SGL SWP MODE is selected, the $\overline{\text{SINGLE SWEEP}}$ line is LO, holding the D input of U570A LO. This effectively disables the

Auto Baseline Generator and also puts a LO on the TRIGGERED line. At the end of a sweep, the holdoff pulse is latched by U530A via U520B and U550C, and the D input of U530B is driven HI. Thus the sweep will not start on receipt of a trigger. This condition is cleared by a pulse from single-shot monostable U500A, that clocks the LO on the D input of U530A to the Q output, allowing the next trigger to initiate a sweep. U500A is used as a switch debounce circuit. Timing components R506 and C506 are chosen to give a pulse width of about 30 ns, a pulse that is shorter than the fastest sweep speed. U500A also sets U510B, turning the TRIG'D light on via U550A. When the holdoff period is initiated (and U500A has timed out), U500B will clock a LO back onto the Q output of U510B, allowing the TRIG'D light to be turned off.

Alternate Magnification

The ALT Magnification mode is controlled by S601. In the X1 mode, $\overline{X1}$ is LO to set flip-flop U510A. The Q output of U510A (\overline{SEP}) is therefore HI. This HI is inverted and level shifted by Q514 to drive the MAG line LO to the Horizontal Amplifier. In MAG mode, the MAG line from S601 is LO, and flip-flop U510A is reset. \overline{SEP} is therefore LO, driving the MAG line HI to the Horizontal Amplifier. The \overline{SEP} signal line controls the trace separation circuitry in the Vertical Amplifier. In the ALT mode, U510A divides the ALT SYN signal by two so that on every other sweep the \overline{SEP} and MAG lines are TRUE.

Alternate Channel Switching

The ALT SYNC signal is provided for the channel switching circuit so that when ALT Vertical MODE is selected, channel switching will be synchronized with the timebase. When ALT MAG is not selected, the alternate switching pulse (ALT SYNC from U515A, pin 3) is supplied at the end of each sweep to the channel switching logic circuit. When ALT MAG is selected, flip-flop U510A divides ALT SYN by two so that the ALT SYNC channel switching pulse is supplied after each second sweep. This produces the following sequence of displays:

CH1 MAG
CH1 X1
CH2 MAG
CH2 X1

When BEAM FIND switch S390 (diagram 6) is pressed, the emitter of Q776 (diagram 5) goes LO to about -8V. That voltage is applied to R510 and

C511. Diode CR511 clamps the cathode of CR510 to about -0.6V, so about 0 V is applied to the SET pin of U510A to set that flip-flop. The Q output of U510A is therefore HI, disabling the sweep separation and MAG circuits.

HORIZONTAL

The Horizontal Amplifier circuit, shown on diagram 5, provides the signals that drive the horizontal deflection plates of the crt. Signals applied to the Horizontal Preamplifier may come from either the Miller Sweep Generator (for sweep deflection) or from the X-Y Amplifier (when X-Y display mode is selected). See Figure 3-4 for the block diagram of the Horizontal Amplifier.

The Horizontal POSITION control, X5, X10, X50 Magnifier circuitry, and the horizontal portion of the Beam Find circuitry are also part of the Horizontal Amplifier circuitry. The Horizontal Preamplifiers amplify input signals for application to the Horizontal Output Amplifier.

X1/X5 Horizontal Preamplifier.

The X1/X5 amplifier is a differential stage consisting of Q747, Q748, and associated components. When the X5 MAG line is LO, the X1 gain is set by resistor network R775 and R753, with current supplied through Q750. When X5 MAG is selected (HI), Q750 is switched off, and current is supplied through R730. Potentiometer R730 is adjusted to balance the current through Q747 and Q748. The X5 gain is set by R753, R755, R731, and R749. When in X1 mode, CR747 and CR748 are reverse biased so that the X5 stage has no effect.

X1/X10 Horizontal Preamplifier

The X1/X10 amplifier is a cascode differential amplifier consisting of U745, U755, and associated components. Signals from the X1/X5 Preamplifier are buffered by emitter followers Q759 and Q760 before being applied to the bases of U745C and U745D. When the X10 MAG line is LO (X1 selected), U755B and U755E are biased off, and U755A and U745E are biased on. Diodes CR773 and CR774 are reverse biased. The gain will then be set by R763. When X10 MAG is HI, U755B, U755E, CR773, and CR774 are biased on, and U755A and U745E are biased off. The gain of the X10 stage is set by R763, R767, and R777. Potentiometer R782 balances the currents in the preamplifier so that there is no horizontal trace shift when switching between X1 and X10 modes. Capacitors C773 and C755 damp the high-frequency gain of the preamplifier.

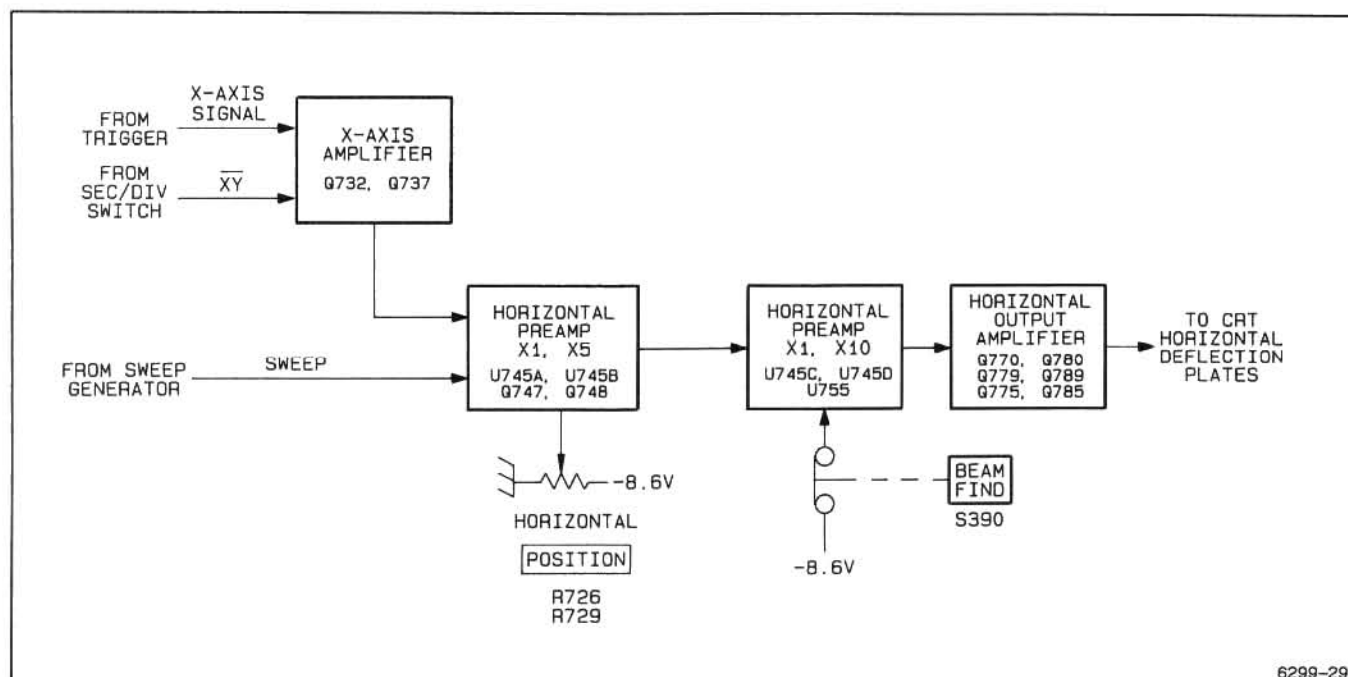


Figure 3-4. Block diagram of the Horizontal Amplifier circuit.

X-Y Amplifier

The X-Y Amplifier amplifies the Channel 1 signal (X-AXIS) from the Internal Trigger circuitry (diagram 3) and passes it to the Horizontal Preamplifier.

In the X-Y mode of operation, the \overline{XY} line is pulled LO by a switch contact on S701 (the SEC/DIV switch). This LO biases Q732 on in the linear region. The circuit of Q732 and Q737 is a transconductance amplifier that changes an input voltage to output current. The input signal is applied through X-Gain adjust potentiometer R395 (diagram 3). The X-Axis Offset adjustment is R736. The signal current out of Q737 is fed into the shunt feedback stage consisting of U745A, U745B, R741, R742, R743, R744, and R745. Resistors R741 and R742 set the gain of the stage. The network consisting of R711, R712, R713, R714, and C714 improves the power supply noise rejection. The output of the shunt feedback stage drives the preamplifiers in all horizontal modes. The sweep is held at a constant low output level when in X-Y mode.

When in the sweep mode, the \overline{XY} line is HI, and Q732 is biased off. This in turn biases Q737 off and disables the X-Y Amplifier.

The \overline{XY} line also turns U380B on (see diagram 3), thereby not allowing the X-AXIS signal to get to the X-Y amplifier. The sweep signal is applied through gain setting resistor R740 to the shunt feedback stage. The output of the shunt feedback stage drives the X1/X5 Preamplifier.

Horizontal Output Amplifier

The Horizontal Output Amplifier provides final amplification of the horizontal signal to drive the horizontal crt deflection plates.

Signals from the (+) and (-) sweep outputs of U755 drive two shunt-feedback amplifiers. Due to the feedback, the input impedance of these amplifiers is low. The base voltages of Q770 and Q780 are biased at nearly the same dc level by the forward-biased diodes (CR781 and CR791) located between the two emitters.

Transistors Q770, Q775, and Q779 form a cascode-feedback amplifier for driving the right crt horizontal deflection plate. Amplifier gain is set by R784, with C784 providing high-frequency compensation. For low-speed signals, Q779 serves as a current source for Q775. At high sweep rates, the deflection signal is coupled through C785 to the emitter of Q779 to provide added pull-up output current to drive the

crt. The amplifier formed by Q780, Q785, and Q789 drives the left crt horizontal deflection plate in the same manner as described above, with zener diode VR792 shifting the collector signal level of Q780 to the correct level to drive the emitter Q785.

Horizontal Beam Find

The BEAM FIND switch is buffered by emitter follower Q776. Diodes CR780 and CR790 are normally reverse biased by R776 when BEAM FIND is off. When BEAM FIND is active, Q776 is turned on, and its emitter is driven negative to about -8 V. The voltage on the cathode of VR776 drops to about 5 V, causing CR780 and CR790 to be forward biased. Current through CR780 and CR790 cause the output common-mode voltage of the two shunt-feedback amplifiers to be shifted negative to reduce the available voltage swing at the crt plates. This stops the trace from being deflected off-screen horizontally.

FRONT PANEL

The Front Panel circuitry is shown in diagram 6. Many of the switches and potentiometers are also shown on the other schematic diagrams adjacent to the circuitry controlled. Diagram 6 provides a diagram of the complete Front Panel to aid in servicing that circuit board. The active circuitry on the Front Panel includes the External Trigger buffer Amplifier, Q370B and Q370A, and the Horizontal Position Control current source, Q725. Operation of the FET External Trigger Buffer Amplifier is similar to the Channel 1 and Channel 2 Source Followers described previously.

All mode switching for the Vertical, Horizontal, and Trigger circuitry is done by the Front Panel switches.

Z-AXIS AMPLIFIER

The Z-Axis Amplifier, shown on diagram 7, controls the crt intensity level via several input-signal sources. The effect of these input signals is either to increase or decrease trace intensity or to completely blank portions of the display. The Z-Axis signal current as determined by the Z-Axis switching logic and the input current from the EXT INPUT OR Z connector (if in use), are summed at the emitter of common-base amplifier Q825. The summed current thereby sets the collector current of the stage. The common-base amplifier provides a low-impedance

termination for the input signals and isolates the signal sources from the rest of the Z-Axis Amplifier.

Common-base transistor Q829 passes a constant current through R832. This current is divided between Q825 and Q829, with the portion through Q829 driving the shunt-feedback output amplifier formed by Q835, Q840, and Q845. The bias level of Q825 therefore controls the emitter current available to Q829. Feedback-resistor R841 sets the transresistance gain for changing the input current to a proportional output voltage. Emitter-follower Q835 is dc coupled to Q840; and, for low-speed signals, Q845 acts as a current source. Fast transitions couple through C845, providing added current gain through Q845 for fast voltage swings at the output of the amplifier.

External Z-Axis input voltages establish proportional input currents through R823, and amplifier sensitivity is determined by the transresistance gain of the shunt-feedback amplifier. Diode CR823 protects the Z-Axis Amplifier if excessive signal levels are applied to the EXT INPUT OR Z connector.

The INTENSITY potentiometer controls the base voltage of Q804 to set the amount of emitter current that flows through that transistor and, therefore, the level of the Z-Axis signal.

When the sweep is displayed, the emitter of Q817 is LO, causing CR817 to be reverse biased. Diodes CR816, CR821, and CR820 are also reverse biased. This allows the current through R818 to flow through CR818 and turn on the Z-Axis.

When X-Y is displayed, CR817 and CR816 are forward biased, reverse biasing CR821 and CR818. Diode CR819 is reverse biased, allowing the intensity to be set by the current through R820 and CR820.

When ALT MAG is selected, diodes CR816, CR817, CR819, and CR822 are all reverse biased, allowing the intensity to be controlled by the current flowing through R818 and R821. This action therefore increases the intensity of the MAG trace.

When CHOP Vertical MODE is selected, the CHOP BLANK signal is sent to the collector of Q825 through CR824 during the display-switching time. Diode CR825 is reverse biased, and the forward bias of Q829 rises to the blanking level. When blanked, the output of the Z-Axis Amplifier drops to reduce the crt beam current below viewing intensity.

At high beam currents, the crt cathode voltage tends to drop off slightly. To compensate for this,

the 2-kV winding is referenced to the emitter of Q804, so that the output of the multiplier (12 kV) is reduced slightly at high intensity levels.

Z-Axis Beam Find

When the BEAM FIND button is pressed, the BEAM FIND line goes to about -8 V. This voltage level will shunt about 1 mA from the Z-Axis Amplifier, overriding any other current combinations to unblank the trace.

DC Restorer and Multiplier

The DC Restorer circuit sets the crt control-grid bias and couples the ac and dc components of the Z-Axis Amplifier output to the crt control grid. Direct coupling of the Z-Axis Amplifier output to the crt control grid is not employed due to the high potential differences involved. Refer to Figure 3-5 during the following discussion.

Ac drive to the DC Restorer circuit is obtained from pin 4 of T902. The drive voltage has an ac peak amplitude of about 100V, at a frequency of about 20 kHz and is coupled into the DC Restorer circuit through C853 and R853. The cathode of CR851 is biased by the wiper voltage of Grid Bias potentiometer R851, and the ac-drive voltage is clamped whenever the positive peaks reach a level that forward biases CR851.

The Z-Axis Amplifier output voltage, varying with display intensity between +10 V and +75 V, is applied to the DC Restorer at the anode of CR853. The ac-drive voltage holds CR853 reverse biased until the voltage falls below the Z-Axis Amplifier output voltage level. At that point, CR853 becomes forward biased and clamps the junction of CR851, CR853, and R854 to the Z-Axis output level. Thus, the ac-drive voltage is clamped at two levels to produce a square-wave signal with a positive dc-offset level.

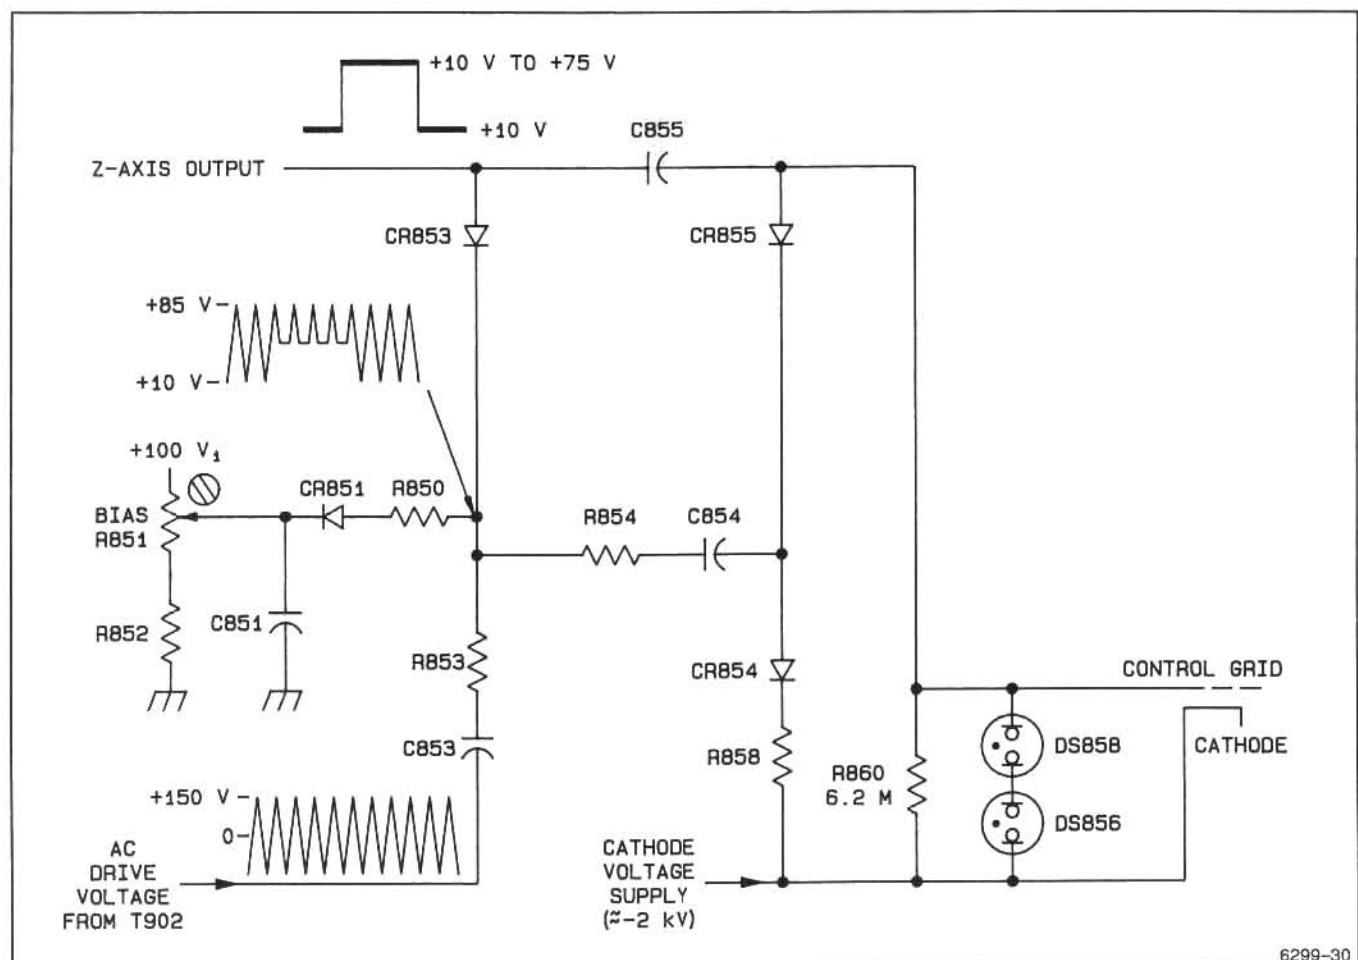


Figure 3-5. Simplified diagram of the DC Restorer circuitry.

The DC Restorer is referenced to the -2-kV crt cathode voltage through R858 and CR854. Initially, both C855 and C854 charge up to a level determined by the difference between the Z-Axis output voltage and the crt cathode voltage. Capacitor C855 charges from the Z-Axis output through R858, CR854, and CR855 to the crt cathode. Capacitor C854 charges through R858, CR854, R854, and CR853 to the crt cathode.

During the positive transitions of the ac drive, from the lower clamped level toward the higher clamped level, the charge on C854 increases due to the rising voltage. The voltage increase across C854 is equal to the amplitude of the positive transition. The negative transition is coupled through C854 to reverse bias CR854 and to forward bias CR855. The increased charge of C854 is then transferred to C855 as C854 discharges toward the Z-Axis output level. Successive cycles of the ac input to the DC Restorer charge C855 to a voltage equal to the initial level plus the amplitude of the clamped square-wave input.

The added charge held by C855 sets the control-grid bias voltage. If more charge is added to that already present on C855, the control grid becomes more negative, and less crt writing-beam current flows. Conversely, if less charge is added, the control-grid voltage level becomes closer to the cathode-voltage level, and more crt writing-beam current flows.

During periods that C854 is charging, the crt control-grid voltage is held constant by the long time-constant discharge path of C855 through R860.

Fast-rise and fast-fall transitions of the Z-Axis output signal are coupled to the crt control grid through C855 to start the crt writing-beam current toward the new intensity level. The DC Restorer output level then follows the Z-Axis output-voltage level to set the new bias voltage for the crt control grid.

Neon lamps DS858 and DS856 protect the crt from excessive grid-to-cathode voltage if the potential on either the control grid or the cathode is lost for any reason.

High-voltage multiplier U975 uses the 2-kV winding of T902 to generate 12 kV to drive the crt anode. An internal half-wave rectifier diode in the multiplier produces -2 kV for the crt cathode. The -2-kV supply is filtered by a low-pass filter formed by

R975, C975, C976, R976, R978, and C979. Neon lamp DS870 protects against excessive voltage between the crt heater and crt cathode by conducting if the voltage difference exceeds approximately 75 V.

Focus voltage is also developed from the -2-kV supply by a voltage divider formed by R894, R892, FOCUS potentiometer R893, R891, R890, R889, R888, R886, and Q885. The focus voltage tracks the intensity level through the action of Q885. The emitter voltage of Q804, set by the INTENSITY control, is applied to the emitter of Q885 through R885. When the emitter voltage of Q804 changes, the current through Q885 changes proportionally and alters the voltage at one end of the FOCUS control.

POWER SUPPLY

The Power Supply circuitry (diagram 7) converts the ac-power-line voltage into all the voltages required by the instrument. It comprises the Mains Input Board, Transformer, Preregulator, Series Pass, and Inverter circuits.

Mains Input Board

The power switch (S901) connects the ac-power line to the primary winding of the toroidal wound input transformer, T901, via fuse F901, filter components L901, L902, C903, C904, C905, and VOLTS SELECTOR switch S902. The secondary output is rectified and smoothed by CR901, CR902, CR903, CR904 and C900. With an ac-input voltage of 240 V, there is approximately 60 V between W903-pin 1 and W903-pin 2 at full load.

LINE SYNC. The additional components on the Mains Input Board produce a Line Sync signal for the Trigger circuit. Transistor Q900 is a floating differential amplifier with a dc bias network comprising R905, R904, and R902. Resistors R906 and R903 apply a small line-frequency signal from the secondary of T901 to the base-emitter junction of Q900. The resultant collector current of Q900 is a line-frequency, sine-wave signal that is fed via W903-3 to the Main board.

Preregulator

The 60-V power supply from the Mains Input board, is applied to the Preregulator circuit formed by U910, Q913, and associated components. Zener diode VR910 and R910 reduce the incoming supply

for preregulator U910. The Preregulator oscillates at a nominal 39 kHz, as determined by timing components C908 and R908. The square-wave output is level-shifted by Q911, and fed to the Darlington pair circuit formed by Q912 and power transistor Q913. When Q913 is conducting, current ramps up through L910. When Q913 is off, the current ramps down while flowing in through the flywheel diode CR912. Preregulator U910 varies the duty cycle of conduction of Q913, so that the voltage on filter capacitor C914 is a nominal 39.5 V. The network R917, R922, R932, R934, and CR915 monitors the voltage across Q923; and, if that voltage is lower than the nominal 1.4 V, U910 increases the voltage across C914 until Q923 has the correct voltage.

If Q923 is open circuited, CR915 clamps the lower supply voltage to 31 V. The ratio of R932 and R922 across R934 together with R917, is chosen so that if Q923 is short circuited, the maximum voltage across C914 is 41 V. Thus the Preregulator supplies a sensible output under all conditions of the circuitry which it drives except during an overload condition. In this case the voltage developed across the current sense resistor (R907) reaches the offset voltage of 180 mV developed by R910 and R911, and U910 current limits the output to about 900 mA.

Series Pass

The function of Series Pass transistor Q923, is to reject ripple current having a frequency of twice the power-line frequency. The nominal DC voltage across it is only 1.4 V. Base current is supplied to Q923 via R923 and CR923 in the absence of drive from Q921, when the instrument is first switched on. Transistor Q923 is driven by both halves of U920 through Q921. The output at pin 7 of U920 serves to reject hum on the 38-V supply by comparing the output of potential divider R930 and R929, with the reference diode VR931. The output at pin 1 of U920, slightly varies the value of the reference as seen at pin 6 via attenuator resistors R925 and R926. This variation maintains the -8.6-V supply at the value set by the -8.6-V Set potentiometer, R933.

Inverter

Inverter oscillator U940 is driven via Q918 and R946, at the same frequency as U910. U940 supplies two

non-overlapping complimentary square-wave outputs to Q930 and Q960. These transistors are in feedback loops, one of which is formed by the filter R953, CR953, reservoir capacitor C953, and level shifter VR939. The feedback is such that the base of Q940 is adjusted to drive Q950 sufficiently hard that the emitter swings to within 3 V of ground, but not hard enough to saturate it. The output voltages of transformer T902 secondary windings are full-wave rectified. The 100-V supply voltage is derived from an auto-transformer winding in series with the primary winding. Resistors R942 and R941 feed a sample of the 38-V supply voltage into the error amplifier connected to pins 1 and 2 of U940. If the 38-V supply should go high, U940 will shut down.

Probe Adjust

The Probe Adjust circuitry, shown on diagram 4, is a square-wave generator and diode switching network that produces a negative-going, square-wave signal at the PROBE ADJUST terminal, J590. Amplifier U580A forms a multivibrator that has an oscillation period set by the time constant of R587 and C587. When the output of the multivibrator is at the positive supply voltage, CR588 is forward biased. This reverse biases CR589, and the PROBE ADJUST signal is held at ground potential by R590. When the multivibrator output switches states, and is at the negative supply voltage level, CR588 is reverse biased. Diode CR589 becomes forward biased, and the circuit output level drops to approximately -0.5 V.

Power Distribution

Power routing from the power supply to the other circuit board is shown in diagram 8. The schematic shows jumpers that may be used to isolate suspected loads from the power supply when troubleshooting power supply problems.

Circuit Board Interconnections

The signal interconnections between circuit boards are shown in diagram 9. This diagram may be used as an aid in signal tracing between the boards. The connectors are also convenient locations to check for the signals between boards when troubleshooting.

PERFORMANCE CHECK PROCEDURE

INTRODUCTION

PURPOSE

The Performance Check Procedure is used to verify the instrument's Performance Requirements statements listed in Table 1-1 and to determine the need for calibration. The performance checks may also be used as an acceptance test or as a preliminary troubleshooting aid.

PERFORMANCE CHECK INTERVAL

To ensure instrument accuracy, check its performance after every 2000 hours of operation, or once each year if used infrequently. A more frequent interval may be necessary if the instrument is subjected to harsh environments or severe usage.

STRUCTURE

The Performance Check Procedure is structured in subsections to permit checking individual sections of the instrument whenever a complete Performance Check is not required. At the beginning of each subsection there is an equipment-required list showing only the test equipment necessary for performing the steps in that subsection. In this list, the Item number that follows each piece of equipment corresponds to the Item number listed in Table 4-1.

Also at the beginning of each subsection is a list of all the front-panel control settings required to prepare the instrument for performing Step 1 in that subsection. Each succeeding step within a particular subsection should then be performed, both in the sequence presented and in its entirety, to ensure that control-setting changes will be correct for ensuing steps.

TEST EQUIPMENT REQUIRED

The test equipment listed in Table 4-1 is a complete list of the equipment required to accomplish both

the Performance Check Procedure in this section and the Adjustment Procedure in Section 5. Test equipment specifications described in Table 4-1 are the minimum necessary to provide accurate results. Therefore, equipment used must meet or exceed the listed specifications. Detailed operating instructions for test equipment are not given in this procedure. If more operating information is required, refer to the appropriate test equipment instruction manual.

When equipment other than that recommended is used, control settings of the test setup may need to be altered. If the exact item of equipment given as an example in Table 4-1 is not available, check the Minimum Specification column to determine if any other available test equipment might suffice to perform the check or adjustment.

LIMITS AND TOLERANCES

The limits and tolerances given in this procedure are valid for an instrument that is operating in and has been previously calibrated in an ambient temperature between +20°C and +30°C. The instrument also must have had at least a 20-minute warm-up period. Refer to Table 1-1 for tolerances applicable to an instrument that is operating outside this temperature range. All tolerances specified are for the instrument only and do not include test-equipment error.

PREPARATION FOR CHECKS

It is not necessary to remove the instrument cover to accomplish any subsection in the "Performance Check Procedure," since all checks are made using operator-accessible front- and rear-panel controls and connectors.

The most accurate display adjustments are made with a stable, well-focused, low-intensity display. Unless otherwise noted, adjust the INTENSITY, FOCUS, and TRIGGER LEVEL controls as needed to view the display.

Table 4-1
Test Equipment Required

| Item and Description | Minimum Specification | Purpose | Example of Suitable Test Equipment |
|--------------------------------------|--|--|--|
| 1. Calibration Generator | Standard-amplitude signal levels: 5 mV to 50 V. Accuracy: $\pm 0.3\%$. High-amplitude signal levels: 1 V to 60 V. Repetition rate: 1 kHz. Fast-rise signal level: 1 V. Repetition rate: 1 MHz. Rise time: 1 ns or less. Flatness: $\pm 0.5\%$. | Signal source for gain and transient response checks and adjustments. | TEKTRONIX PG 506A Calibration Generator. ^a |
| 2. Leveled Sine-Wave Generator | Frequency: 250 kHz to above 50 MHz. Output amplitude: variable from 10 mV to 5 V p.p. Output impedance: 50 Ω . Reference frequency: 50 kHz. Amplitude accuracy: constant within 3% of reference frequency as output frequency changes. | Vertical, horizontal, and triggering checks and adjustments. Display adjustments and Z-Axis check. | TEKTRONIX SG 503 Leveled Sine-Wave Generator. ^a |
| 3. Time-Mark Generator | Marker outputs: 10 ns to 0.5 s. Marker accuracy: $\pm 0.1\%$. Trigger output: 1 ms to 0.1 μ s, time-coincident with markers. | Horizontal checks and adjustments. Display adjustment. | TEKTRONIX TG 501A Calibration Generator. ^a |
| 4. Low-Frequency Sine-Wave Generator | Range: 1 kHz to 500 kHz. Output amplitude: 300 mV. Output impedance: 600 Ω . Reference frequency: constant within 0.3 dB of reference frequency as output frequency changes. | Low-frequency trigger checks. | TEKTRONIX SG 502 Oscillator. ^a |
| 5. Screwdriver | Length: 3-in. shaft. Bit size: 3/32 in. | Adjust variable resistors. | Xcelite R-3323. |
| 6. Test Oscilloscope with 10X Probes | Bandwidth: dc to 100 MHz. Minimum deflection factor: 5 mV/div. Accuracy: $\pm 3\%$. | General troubleshooting, holdoff check. | TEKTRONIX 2235A Oscilloscope. |
| 7. Digital Voltmeter (DMM) | Range: 0 to 140 V. Dc voltage accuracy: $\pm 0.15\%$, 4-1/2 digit display. | Power supply checks and adjustments. | TEKTRONIX DM 504A Digital Multimeter. ^a |
| 8. Coaxial Cable | Impedance: 50 Ω . Length: 42 in. Connectors: BNC. | Signal interconnection. | Tektronix Part Number 012-0057-01. |
| 9. Dual-Input Coupler | Connectors: BNC female-to-dual-BNC male. | Signal interconnection. | Tektronix Part Number 067-0525-01. |
| 10. Termination | Impedance: 50 Ω . Connectors: BNC. | Signal termination. | Tektronix Part Number 011-0049-01. |
| 11. Termination | Impedance: 600 Ω . Connectors: BNC. | Signal termination. | Tektronix Part Number 011-0092-00. |

^aRequires a TM 500-Series Power Module.

Table 4-1, (cont)

| Item and Description | Minimum Specification | Purpose | Example of Suitable Test Equipment |
|----------------------------------|---|--|---|
| 12. 10X Attenuator | Ratio: 10X. Impedance: 50 Ω . Connectors: BNC. | Vertical compensation and triggering checks. | Tektronix Part Number 011-0059-02. |
| 13. Adapter | Connectors: BNC male-to-miniature-probe tip. | Signal interconnection. | Tektronix Part Number 013-0084-02. |
| 14. Adapter | Connectors: BNC male-to-tip plug. | Signal interconnection. | Tektronix Part Number 175-1178-00. |
| 15. Low-Reactance Alignment Tool | Length: 1-in. shaft. Bit size: 3/32 in. | Adjust variable capacitors. | J.F.D. Electronics Corp. Adjustment Tool Number 5284. |

INDEX TO PERFORMANCE CHECK STEPS

Vertical

Page

1. Check Deflection Accuracy and Variable Range 4-4
2. Check Position Range 4-5
3. Check TRACE SEP Range 4-5
4. Check High Frequency Compensation 4-5
5. Check Bandwidth 4-6
6. Check Channel Isolation 4-6
7. Check Common-Mode Rejection Ratio ... 4-6

Horizontal

1. Check Timing Accuracy and Linearity 4-8

2. Check Sweep Length 4-10
3. Check COARSE and FINE Position Range 4-10
4. Check Variable Range 4-10
5. Check X Gain 4-11
6. Check X Bandwidth 4-11

Trigger

1. Check Trigger Sensitivity 4-12
2. Check LF P-P AUTO Trigger 4-13
3. Check External Trigger Ranges 4-13
4. Check Single Sweep Operation 4-14

External Z-Axis and Probe Adjust

1. Check External Z-Axis Operation 4-15
2. Check Probe Adjust Operation 4-15

VERTICAL

Equipment Required (See Table 4-1):

| | |
|---|---|
| Calibration Generator (Item 1) | 50- Ω BNC Termination (Item 10) |
| Leveled Sine-Wave Generator (Item 2) | 10X BNC Attenuator (Item 12) |
| 50- Ω BNC Coaxial Cable (Item 8) | BNC Male-to-Miniature-Probe Tip (Item 13) |
| Dual-Input Coupler (Item 9) | |

INITIAL CONTROL SETTINGS

Vertical

| | |
|---------------------------|-------------------|
| POSITION (both) | Midrange |
| MODE | CH 1, NORM |
| VOLTS/DIV (both) | 5 mV |
| VOLTS/DIV Variable (both) | CAL detent |
| Magnification (both) | X1 (CAL knobs in) |
| AC-GND-DC | DC |

Horizontal

| | |
|----------------------------|------------|
| POSITION (COARSE and FINE) | Midrange |
| MODE | X1 |
| SEC/DIV | 0.5 ms |
| SEC/DIV Variable | CAL detent |
| MAG | X5 |

Trigger

| | |
|----------|--------------|
| SLOPE | Positive (┌) |
| LEVEL | Midrange |
| MODE | P-P AUTO |
| HOLD OFF | MIN |
| SOURCE | VERT MODE |
| COUPLING | DC |

PROCEDURE STEPS

1. Check Deflection Accuracy and Variable Range

a. Connect a 20-mV standard-amplitude signal from the calibration generator via a 50- Ω BNC coaxial cable to the CH 1 OR X input connector.

b. CHECK—Deflection accuracy is within the limits given in Table 4-2 for each CH 1 VOLTS/DIV switch setting and corresponding standard-amplitude signal. When at the 20-mV VOLTS/DIV switch setting, rotate the CH 1 VOLTS/DIV Variable control fully counterclockwise and check that the display decreases to two divisions or less. Then return the CH 1 VOLTS/DIV Variable control to the CAL detent and continue with the 50-mV check.

c. Move the cable from the CH 1 OR X input connector to the CH 2 OR Y input connector. Set the Vertical MODE switch to CH 2.

d. Set the calibration generator to output 20 mV.

e. Repeat Part b using the Channel 2 controls.

f. Set the calibration generator to 0.1 V.

Table 4-2
Deflection Accuracy Limits

| VOLTS/DIV Switch Setting | STANDARD Amplitude Signal | ACCURACY Limits (Divisions) |
|--------------------------------|---------------------------------|-----------------------------------|
| 5 mV | 20 mV | 3.88 to 4.12 |
| 10 mV | 50 mV | 4.85 to 5.15 |
| 20 mV | 0.1 V | 4.85 to 5.15 |
| 50 mV | 0.2 V | 3.88 to 4.12 |
| 0.1 V | 0.5 V | 4.85 to 5.15 |
| 0.2 V | 1 V | 4.85 to 5.15 |
| 0.5 V | 2 V | 3.88 to 4.12 |
| 1 V | 5 V | 4.85 to 5.15 |
| 2 V | 10 V | 4.85 to 5.15 |
| 5 V | 20 V | 3.88 to 4.12 |

2. Check Position Range

a. SET:

VOLTS/DIV (both) 10 mV
AC-GND-DC (both) AC
SEC/DIV 0.2 ms

b. Adjust the CH 2 VOLTS/DIV Variable control to produce a 5.25-division display.

c. Set CH 2 VOLTS/DIV to 5 mV.

d. Set the calibration generator to 0.2 V.

e. CHECK—The bottom and top of the trace may be positioned above and below the center horizontal graticule line by rotating the CH 2 POSITION control fully clockwise and counterclockwise respectively.

f. Move the cable from the CH 2 OR Y input connector to the CH 1 OR X input connector.

g. Set the Vertical MODE switch to CH 1.

h. Repeat Parts b through e using the Channel 1 controls.

i. Return both VOLTS/DIV Variable knobs to their detent positions.

j. Disconnect the test equipment from the instrument.

3. Check TRACE SEP Range

a. SET:

SEC/DIV 10 μ s
Trigger SOURCE EXT, EXT

b. Position the trace to the center horizontal graticule line using the Channel 1 POSITION control.

c. Set the Horizontal MODE to ALT.

d. CHECK—That the magnified trace can be positioned three divisions or more above the unmagnified trace.

NOTE

For instruments below serial number 202908, check that the magnified trace can also be positioned three divisions or more below the unmagnified trace.

4. Check High Frequency Compensation

a. SET:

AC-GND-DC (both) DC
SEC/DIV 0.2 μ s
Horizontal MODE X1
Trigger SOURCE VERT MODE

b. Connect the positive-going, fast-rise, square-wave output via a 50- Ω BNC coaxial cable, a 10X BNC attenuator, and a 50- Ω BNC termination to the CH 1 OR X input connector.

c. Set the generator to produce a 1-MHz, five-division display.

d. Position the bottom of the display to the bottom horizontal graticule line using the CH 1 POSITION control and position the leading edge of a pulse on the center vertical graticule line.

e. Check for aberrations at the top of the waveform of $\pm 6\%$ (0.3 division) or less.

f. Set CH 1 VOLTS/DIV to 10 mV.

g. Set the generator to produce a 1-MHz, five-division display.

h. Check for aberrations of $\pm 4\%$ (0.2 division) or less.

i. Repeat Parts g and h for each of the following CH 1 VOLTS/DIV switch settings: 20 mV through 0.2 V. Adjust the generator output and add or remove the 10X attenuator as necessary to maintain a five-division display at each VOLTS/DIV switch setting.

j. Move the cable from the CH 1 OR X input connector to the CH 2 OR Y input connector. Set the Vertical MODE switch to CH 2.

k. Repeat Parts c through i for Channel 2.

l. Disconnect the test equipment from the instrument.

5. Check Bandwidth

a. SET:

| | |
|------------------|------------|
| VOLTS/DIV (both) | 5 mV |
| Vertical MODE | CH 1 |
| SEC/DIV | 10 μ s |

b. Connect the leveled sine-wave generator output via a 50- Ω BNC coaxial cable and a 50- Ω BNC termination to the CH 1 OR X input connector.

c. Set the generator to produce a 50-kHz, six-division display.

d. Increase the signal frequency until a 4.2-division display is obtained.

e. CHECK—That the frequency is greater than 50 MHz.

f. Repeat Parts c through e for all VOLTS/DIV settings from 10 mV to 1 V.

NOTE

For the 1-V-per-division VOLTS/DIV settings, use a five-division display of the 50-kHz reference frequency; use 3.5 divisions peak-to-peak as the -3 dB reference point of the bandwidth.

g. SET:

| | |
|-----------------------------|-----------------------------|
| CH 1 VOLTS/DIV | 5 mV |
| CH 1 Vertical Magnification | X10 (pull CH1 CAL knob out) |

h. Set the generator to produce a 50-kHz, six-division display.

i. Increase the signal frequency until a 4.2-division display is obtained.

j. CHECK—That the frequency is greater than 5 MHz.

k. Repeat Parts h through j for all ranges from 10 mV to 0.2 V.

l. Set the CH 1 Vertical Magnification to X1 (push CAL knob in).

m. Set Vertical MODE to CH 2.

n. Repeat Parts b through l for CH 2 using the Channel 2 controls.

6. Check Channel Isolation

a. SET:

| | |
|----------------|--------------|
| CH 1 VOLTS/DIV | 0.5 V |
| CH 2 VOLTS/DIV | 1 V |
| CH 1 AC-GND-DC | GND |
| SEC/DIV | 0.05 μ s |

b. Set the generator to produce a 10-MHz, five-division display.

c. Set CH 2 VOLTS/DIV switch to 0.5 V for a 10-division display.

d. Set Vertical MODE to CH 1.

e. Check that the CH 1 trace amplitude is less than 0.1 division.

f. Move the test-signal cable from the CH 2 OR Y input connector to the CH 1 OR X input connector.

g. SET:

| | |
|----------------|------|
| Vertical MODE | CH 2 |
| CH 1 AC-GND-DC | DC |
| CH 2 AC-GND-DC | GND |

h. Check that the display amplitude is less than 0.1 division.

i. Disconnect the test equipment from the instrument.

7. Check Common Mode-Rejection Ratio

a. SET:

| | |
|------------------|-------|
| VOLTS/DIV (both) | 10 mV |
| AC-GND-DC (both) | DC |

b. Connect the leveled sine-wave generator output via a 50- Ω BNC coaxial cable, a 50- Ω BNC termination, and dual-input coupler to the CH1 OR X and CH 2 OR Y input connectors.

c. Set the generator to produce a 10-MHz, six-division display.

d. SET:

| | |
|---------------|---------------------------------|
| Vertical MODE | BOTH, CH2 INVERT, and ADD |
|---------------|---------------------------------|

e. CHECK—That the ADD trace is 0.6 division or less.

f. Disconnect the test equipment from the instrument.

HORIZONTAL

Equipment Required (See Table 4-1):

| | |
|--------------------------------------|--|
| Calibration Generator (Item 1) | Test Oscilloscope (Item 6) |
| Leveled Sine-Wave Generator (Item 2) | 50- Ω Coaxial Cable (Item 8) |
| Time-Mark Generator (Item 3) | 50- Ω BNC Termination (Item 10) |

INITIAL CONTROL SETTINGS
Vertical

| | |
|---------------------------|-------------------|
| POSITION (both) | Midrange |
| MODE | CH 1, NORM |
| VOLTS/DIV (both) | 0.5 V |
| VOLTS/DIV Variable (both) | CAL detent |
| Magnification (both) | X1 (CAL knobs in) |
| AC-GND-DC (both) | DC |

Horizontal

| | |
|----------------------------|--------------|
| POSITION (COARSE and FINE) | Midrange |
| MODE | X1 |
| SEC/DIV | 0.05 μ s |
| SEC/DIV Variable | CAL detent |
| MAG | X5 |

Trigger

| | |
|----------|---------------------|
| SLOPE | Positive (\neg) |
| LEVEL | Midrange |
| MODE | P-P AUTO |
| HOLD OFF | MIN |
| SOURCE | CH 1 |
| COUPLING | AC |

PROCEDURE STEPS
1. Check Timing Accuracy and Linearity

a. Connect 50-ns time markers from the time-mark generator via a 50- Ω BNC coaxial cable and a 50- Ω BNC termination to the CH 1 OR X input connector.

b. Adjust the Trigger LEVEL control for a stable, triggered display.

c. Use the Horizontal POSITION controls to align the second time marker with the second vertical graticule line.

d. CHECK—Timing accuracy is within 3% (0.24 division at the tenth vertical graticule line), and linearity is within 5% (0.10 division over any two of the center eight divisions).

NOTE

For checking the timing accuracy of the SEC/DIV switch settings from 50 ms to 0.5 s, watch the time marker tips only at the second and tenth vertical graticule lines while adjusting the COARSE and FINE Horizontal POSITION controls to line up the time markers.

e. Repeat Parts b through d for the remaining SEC/DIV and time-mark generator setting combinations shown in Table 4-3 under the Normal column.

Table 4-3
Settings for Timing Accuracy Checks

| SEC/DIV Switch Setting | Time-Mark Generator Setting | | | |
|------------------------------|-----------------------------|-------------|-------------|-------------|
| | Normal | X5 Mag | X10 Mag | X50 Mag |
| 0.05 μ s | 50 ns | 10 ns | | |
| 0.1 μ s | 0.1 μ s | 20 ns | 10 ns | |
| 0.2 μ s | 0.2 μ s | 0.1 μ s | 20 ns | 10 ns |
| 0.5 μ s | 0.5 μ s | 0.1 μ s | 50 ns | 10 ns |
| 1 μ s | 1 μ s | 0.2 μ s | 0.1 μ s | 20 ns |
| 2 μ s | 2 μ s | 1 μ s | 0.2 μ s | 0.1 μ s |
| 5 μ s | 5 μ s | 1 μ s | 0.5 μ s | 0.1 μ s |
| 10 μ s | 10 μ s | 2 μ s | 1 μ s | 0.2 μ s |
| 20 μ s | 20 μ s | 10 μ s | 2 μ s | 1 μ s |
| 50 μ s | 50 μ s | 10 μ s | 5 μ s | 1 μ s |
| 0.1 ms | 0.1 ms | 20 μ s | 10 μ s | 2 μ s |
| 0.2 ms | 0.2 ms | 0.1 ms | 20 μ s | 10 μ s |
| 0.5 ms | 0.5 ms | 0.1 ms | 50 μ s | 10 μ s |
| 1 ms | 1 ms | 0.2 ms | 0.1 ms | 20 μ s |
| 2 ms | 2 ms | 1 ms | 0.2 ms | 0.1 ms |
| 5 ms | 5 ms | 1 ms | 0.5 ms | 0.1 ms |
| 10 ms | 10 ms | 2 ms | 1 ms | 0.2 ms |
| 20 ms | 20 ms | 10 ms | 2 ms | 1 ms |
| 50 ms | 50 ms | 10 ms | 5 ms | 1 ms |
| 0.1 s | 0.1 s | 20 ms | 10 ms | 2 ms |
| 0.2 s | 0.2 s | 0.1 s | 20 ms | 10 ms |
| 0.5 s | 0.5 s | 0.1 s | 50 ms | 10 ms |

NOTE

In X5 and X50 magnification in all "2" decade switch settings, the associated time marker settings give only five markers per ten divisions instead of the customary ten. When checking these ranges, position the markers on the second and tenth vertical graticule lines.

f. SET:

| | |
|-----------------|--------------|
| SEC/DIV | 0.05 μ s |
| Horizontal MODE | MAG |
| Horizontal MAG | X5 |

g. Select 10 ns time markers from the time-mark generator.

h. Use the Horizontal POSITION controls to align the first time marker that is 50 ns beyond the start of the sweep with the second vertical graticule line.

i. CHECK—Timing accuracy is within 4% (0.32 division at the tenth vertical graticule line), and linearity is within 7% (0.14 division over any two of the center eight divisions). Exclude any portion of the sweep past the 50th magnified division.

j. Repeat Parts h and i for the remaining SEC/DIV and time-mark generator setting combinations shown in Table 4-3 under the "X5 Magnified" column.

k. SET:

| | |
|----------------|-------------|
| SEC/DIV | 0.1 μ s |
| Horizontal MAG | X10 |

l. Select 10-ns time markers from the time-mark generator.

m. Use the Horizontal POSITION controls to align the first time marker that is 50 ns beyond the start of the sweep with the second vertical graticule line.

n. CHECK—Timing accuracy is within 4% (0.32 division at the tenth vertical graticule line), and linearity is within 7% (0.14 division over any two of the center eight divisions). Exclude any portion of the sweep past the 50th magnified division.

o. Repeat Parts m and n for the remaining SEC/DIV and time-mark generator setting combinations shown in Table 4-3 under the "X10 Magnified" column.

p. SET:

| | |
|----------------|-------------|
| SEC/DIV | 0.5 μ s |
| Horizontal MAG | X50 |

q. Select 10 ns time markers from the time-mark generator.

r. Use the Horizontal POSITION controls to align the first time marker that is 100 ns beyond the start of the sweep with the second vertical graticule line.

s. CHECK—Timing accuracy is within 5% (0.40 division at the tenth vertical graticule line), and linearity is within 9% (0.18 division over any two of the center eight divisions). Exclude any portion of the sweep past the 100th magnified division.

t. Repeat Parts r and s for the remaining SEC/DIV and time-mark generator setting combinations shown in Table 4-3 under the X50 Magnified column.

2. Check Sweep Length

a. SET:

| | |
|-----------------|--------|
| SEC/DIV | 0.1 ms |
| Horizontal MODE | X1 |

b. Select 0.1 ms time markers from the time-mark generator.

c. Position the start of the sweep at the first vertical graticule line using the Horizontal POSITION controls.

d. CHECK—That the sweep length is between 10.2 and 12 divisions.

3. Check COARSE and FINE Horizontal POSITION Range

a. CHECK—That the start of the sweep can be positioned to the right of the center vertical graticule line by rotating the COARSE Horizontal POSITION control fully clockwise.

b. CHECK—That the tenth time marker can be positioned to the left of the center vertical graticule line by rotating the COARSE Horizontal POSITION control fully counterclockwise.

c. CHECK—That the FINE Horizontal POSITION control can move the trace 0.4 division or more.

4. Check SEC/DIV Variable Range

a. Select 0.5-ms time markers from the time-mark generator.

b. Set the SEC/DIV Variable control fully counterclockwise.

c. CHECK—That the spacing between time markers is two divisions or less.

d. Return the SEC/DIV Variable knob to the CAL detent position.

e. Disconnect the test equipment from the instrument.

5. Check X Gain

a. SET:

VOLTS/DIV (both)
SEC/DIV

10 mV
X-Y (fully
ccw)

b. Connect a 50-mV, standard-amplitude signal from the calibration generator via a 50- Ω BNC coaxial cable to the CH 1 OR X input connector.

c. CHECK—That the display is between 4.85 and 5.15 divisions.

d. Disconnect the test equipment from the instrument.

6. Check X Bandwidth

a. Set both channels VOLTS/DIV switches to 50 mV.

b. Connect the leveled sine-wave generator output via a 50- Ω BNC coaxial cable and a 50- Ω BNC termination to the CH 1 OR X input connector.

c. Set the generator to produce an eight-division horizontal display at an output frequency of 50 kHz.

d. Increase the output frequency until the X-Axis (horizontal) deflection amplitude is 5.7 divisions.

e. CHECK—That the frequency is 2 MHz or greater.

f. Disconnect the test equipment from the instrument.

TRIGGER

Equipment Required (See Table 4-1):

Leveled Sine-Wave Generator (Item 2)
 Low-Frequency Sine-Wave Generator (Item 4)
 50- Ω BNC Coaxial Cable (Item 8)

Dual-Input Coupler (Item 9)
 50- Ω BNC Termination (Item 10)
 600- Ω BNC Termination (Item 11)

INITIAL CONTROL SETTINGS
Vertical

| | |
|---------------------------|-------------------|
| POSITION (both) | Midrange |
| MODE | CH 1 |
| CH 1 VOLTS/DIV | 0.1 V |
| CH 2 VOLTS/DIV | 1 V |
| VOLTS/DIV Variable (both) | CAL detent |
| Magnification (both) | X1 (CAL knobs in) |
| AC-GND-DC (both) | DC |

Horizontal

| | |
|----------------------------|-------------|
| POSITION (COARSE and FINE) | Midrange |
| MODE | X1 |
| SEC/DIV | 0.2 μ s |
| SEC/DIV Variable | CAL detent |
| MAG | X5 |

Trigger

| | |
|----------|--------------|
| SLOPE | Positive (↗) |
| LEVEL | Midrange |
| MODE | P-P AUTO |
| HOLD OFF | MIN |
| SOURCE | VERT MODE |
| COUPLING | DC |

PROCEDURE STEPS
1. Check Trigger Sensitivity

a. Connect the leveled sine-wave generator output via a 50- Ω BNC coaxial cable and a 50- Ω BNC termination to the CH 1 OR X input connector.

b. Set the generator to produce a three-division display at an output frequency of 5 MHz.

c. Set channel 1 VOLTS/DIV switch to 1 V.

d. CHECK—That a stable display can be obtained by adjusting the Trigger LEVEL control for each switch combination given in Table 4-4 in both positive and negative slope. Ensure that the TRIG'D light comes on when triggered.

Table 4-4
Switch Combinations for Triggering Checks

| Trigger MODE | Trigger SLOPE |
|--------------|---------------|
| NORM | Positive ↗ |
| NORM | Negative ↘ |
| P-P AUTO | Positive ↗ |
| P-P AUTO | Negative ↘ |

e. Move the test-signal cable from the CH 1 OR X input connector to the CH 2 OR Y input connector. Set the Vertical MODE switch to CH 2.

f. Repeat Part d.

g. SET:

| | |
|-----------------|--------------|
| SEC/DIV | 0.05 μ s |
| Horizontal MODE | MAG |

h. Set the generator output to produce a 50-MHz, one-division display.

i. Repeat Part d.

j. Move the test-signal cable from the CH 2 OR X input connector to the CH 1 OR Y input connector. Set the VERTICAL MODE switch to CH 1.

k. Repeat Part d.

l. Disconnect the test equipment from the instrument.

m. SET:

| | |
|-----------------|-------------|
| CH 1 VOLTS/DIV | 20 mV |
| SEC/DIV | 0.2 μ s |
| Horizontal MODE | X1 |
| Trigger MODE | P-P AUTO |
| Trigger SOURCE | EXT, EXT |

n. Connect the leveled sine-wave generator output via a 50- Ω BNC coaxial cable, a 50- Ω BNC termination, and a dual-input coupler to the CH 1 OR X input connector and EXT INPUT OR Z input connectors.

o. Set the generator to produce a four-division (80 mV) horizontal display at an output frequency of 5 MHz.

p. Repeat Part d.

q. SET:

| | |
|-----------------|--------------|
| CH 1 VOLT/DIV | 50 mV |
| SEC/DIV | 0.05 μ s |
| Horizontal MODE | MAG |

u. Set the generator to produce a five-division (250 mV) horizontal display at an output frequency of 50 MHz.

v. Repeat Part d.

w. Disconnect the test equipment from the instrument.

2. Check LF P-P AUTO Trigger

a. SET:

| | |
|-----------------|--------------|
| CH 1 VOLTS/DIV | 0.1 V |
| SEC/DIV | 20 ms |
| Horizontal MODE | X1 |
| Trigger MODE | P-P AUTO |
| Trigger SOURCE | CH 1 |
| Trigger SLOPE | Positive (↗) |

b. Connect the low-frequency, sine-wave generator output via a 50- Ω cable and a 600- Ω termination to the CH 1 OR X input connector.

c. Set the low-frequency generator output to produce a 20-Hz, one-division display.

d. CHECK—For stable triggering in both positive and negative slopes. Ensure that the TRIG'D light comes on when triggered.

e. Disconnect the test equipment from the instrument.

3. Check External Trigger Range

a. SET:

| | |
|------------------|--------------|
| CH 1 VOLTS/DIV | 0.5 V |
| SEC/DIV | 20 μ s |
| Trigger COUPLING | AC |
| Trigger SLOPE | Positive (↗) |

b. Connect the leveled sine-wave generator output via a 50- Ω BNC coaxial cable, a 50- Ω BNC termination, and a dual-input coupler to the CH 1 OR X and the EXT INPUT OR Z input connectors.

c. Set the leveled sine-wave generator to produce a 50-kHz, five-division display.

d. Position the waveform equally about the center horizontal graticule line.

e. SET:

| | |
|----------------|----------|
| Trigger MODE | NORM |
| Trigger SOURCE | EXT, EXT |

f. CHECK—That the display is not triggered at either extreme of rotation of the Trigger LEVEL control.

g. Set the Trigger COUPLING switch to DC.

h. CHECK—That the display can be untriggered at either extreme or rotation of the Trigger LEVEL control.

i. Set the Trigger SOURCE switch to EXT/10.

j. CHECK—That the display can be triggered about the midrange of the Trigger LEVEL control.

k. Set the Trigger SLOPE switch to negative (\neg) and repeat Part j.

l. Disconnect the test equipment from the instrument.

4. Check Single Sweep Operation

a. SET:

| | |
|------------------|---------------------|
| CH 1 VOLTS/DIV | 10 mV |
| SEC/DIV | 0.5 ms |
| Trigger SOURCE | CH 1 |
| Trigger COUPLING | AC |
| Trigger SLOPE | Positive (\neg) |

b. Connect 50-mV, standard-amplitude signal from the calibration generator via a 50- Ω BNC coaxial cable to the CH 1 OR X input connector.

c. Adjust the Trigger LEVEL control to obtain a stable display.

d. SET:

| | |
|----------------|---------|
| CH 1 AC-GND-DC | GND |
| Trigger MODE | SGL SWP |

e. Press the SGL SWP RESET button. The READY light should light up and remain on.

f. Set the CH 1 AC-GND-DC switch to DC.

NOTE

The INTENSITY control may require adjustment to observe the single-sweep trace.

g. CHECK—READY light goes out and a single sweep occurs.

h. Press the SGL SWP RESET button several times.

i. CHECK—A single-sweep trace occurs, and the READY light comes on briefly every time the SGL SWP RESET button is pressed.

j. Disconnect the test equipment from the instrument.

EXTERNAL Z-AXIS AND PROBE ADJUST

Equipment Required (See Table 4-1):

Leveled Sine-Wave Generator (Item 2)
Two 50- Ω BNC Coaxial Cable (Item 8)
Dual-Input Coupler (Item 9)

50- Ω BNC Termination (Item 10)
10X Probe (provided with instrument)
Low-Reactance Alignment Tool (Item 15)

INITIAL CONTROL SETTINGS

Vertical

| | |
|-------------------------|-----------------------|
| CH 1 POSITION | Midrange |
| MODE | CH 1, NORM |
| CH 1 VOLTS/DIV | 1 V |
| CH 1 VOLTS/DIV Variable | CAL detent |
| Magnification | X1 (CH 1 CAL knob in) |
| Channel 1 AC-GND-DC | DC |

Horizontal

| | |
|----------------------------|------------|
| POSITION (COARSE and FINE) | Midrange |
| Horizontal MODE | X1 |
| SEC/DIV | 20 μ s |
| SEC/DIV Variable | CAL detent |

Trigger

| | |
|----------|---------------------|
| SLOPE | Positive (\neg) |
| LEVEL | Midrange |
| MODE | P-P AUTO |
| HOLD OFF | MIN |
| SOURCE | EXT, EXT=Z |
| COUPLING | DC |

termination, and a dual-input coupler to the CH 1 OR X and the EXT INPUT OR Z connectors.

b. Set the generator to produce a 5-V, 50-kHz signal.

NOTE

The INTENSITY level may need adjustment to view the intensity modulation on the displayed waveform.

c. CHECK—For noticeable intensity modulation. The positive part of the sine wave should be of lower intensity than the negative part.

d. Disconnect the test equipment from the instrument.

2. Check Probe Adjust Operation

a. SET:

| | |
|----------------|--------|
| CH 1 VOLTS/DIV | 10 mV |
| SEC/DIV | 0.5 ms |
| Trigger SOURCE | CH 1 |

b. Connect the 10X Probe to the CH 1 OR X input connector and clip the probe tip to the PROBE connector on the instrument front panel. If necessary, adjust the probe compensation for a flat-topped square-wave display.

c. CHECK—Display amplitude is 4.75 to 5.25 divisions.

d. Disconnect the probe from the instrument.

PROCEDURE STEPS

1. Check External Z-Axis Operation

a. Connect the leveled sine-wave generator output via a 50- Ω BNC coaxial cable, a 50- Ω BNC

ADJUSTMENT PROCEDURE

INTRODUCTION

PURPOSE

The Adjustment Procedure is used to return the instrument to conformance with the Performance Requirement statements listed in Table 1-1. Adjustments contained in this procedure should only be performed after checks from the Performance Check Procedure (Section 4) have indicated a need for readjustment or after repairs have been made to the instrument.

STRUCTURE

This procedure is structured into subsections, each of which can be performed independently to permit adjustment of individual sections of the instrument. For example, if only the Vertical section fails to meet the Performance Requirements or has been repaired, it can be readjusted with little or no effect on other sections of the instrument.

The Power Supply section, however, affects all other sections of the instrument. Therefore, if repairs or readjustments have been made that change the absolute value of any of the supply voltages, the entire Adjustment Procedure should be performed.

At the beginning of each subsection is a list of all the front-panel control settings required to prepare the instrument for performing Step 1 in that subsection. Each succeeding step within a subsection should be performed in sequence and in its entirety to ensure that control settings will be correct for ensuing steps. All steps within a subsection should be completed.

TEST EQUIPMENT REQUIRED

Table 4-1 is a complete list of the test equipment required to accomplish both the Performance Check Procedure in Section 4 and the Adjustment Procedure in this section. To assure accurate measurements, it is important that test equipment used for making these checks meet or exceed the specifications described in Table 4-1. When considering

use of equipment other than that recommended, utilize the Minimum Specification column to determine whether available test equipment will suffice.

Detailed operating instructions for test equipment are not given in this procedure. If more operating information is required, refer to the appropriate test equipment instruction manual.

LIMITS AND TOLERANCES

The limits and tolerances stated in this procedure are instrument specifications only if they are listed in the Performance Requirements column of Table 1-1. Tolerances given are applicable only to the instrument undergoing adjustment and do not include test equipment error. Adjustment of the instrument must be accomplished at an ambient temperature between +20°C and +30°C, and the instrument must have had a warm-up period of at least 20 minutes.

ADJUSTMENTS AFFECTED BY REPAIRS

Repairs to a circuit may affect one or more adjustment settings of the instrument. Table 5-1 identifies the adjustment(s) affected due to repairs or replacement of components on a circuit board. Refer to Table 5-1 if a partial procedure is performed or if a circuit requires readjustment due to repairs to a circuit. To use this table, first find, in the leftmost column, the circuit that was repaired. Then move to the right, across that row, until you come to a darkened square, move up the column and check the accuracy of the adjustment found at the heading of that column. Readjust if necessary.

PREPARATION FOR ADJUSTMENT

The instrument cabinet must be removed to perform the Adjustment Procedure. See the Cabinet remove and replace instructions located in the Maintenance section of the manual.

All test equipment items listed in Table 4-1 in the Performance Check section are required to

accomplish a complete Adjustment Procedure. At the beginning of each subsection there is an equipment-required list showing only the test equipment necessary for performing the steps in that subsection. In this list, the item number following each piece of equipment corresponds to the item number listed in Table 4-1.

Before performing this procedure, do not preset any internal adjustments and do not change the -8.6 V power-supply adjustment. Altering this adjustment may necessitate a complete readjustment of the instrument, whereas only a partial adjustment might

otherwise be required. Only change an internal adjustment setting if a Performance Characteristic cannot be met with the original setting.

Before performing any procedure in this section, set the POWER switch to ON and allow a 20-minute warm-up period.

The most accurate display adjustments are made with a stable, well-focused, low-intensity display. Unless otherwise noted, adjust the INTENSITY, FOCUS, and Trigger LEVEL controls as needed to view the display.

Table 5-1
Adjustments Affected by Repairs

| REPAIRS MADE | INTERNAL ADJUSTMENTS AFFECTED | | | | | | | | | | | | | |
|----------------------|----------------------------------|--------------------------|---------------|----------------------|------------------|----------------|-----------------|---------|-------------|----------------|------------------------|------------------------------|-------------------|---------------------|
| | -8.6 V ADJ | GRID BIAS, ASTIG. & GEOM | STEP ATTN BAL | VAR BAL & INVERT BAL | CH 1 & CH 2 GAIN | X1/X10 BALANCE | ATTENUATOR COMP | HF COMP | 1 ms TIMING | MAGNIFIER GAIN | MAGNIFIER REGISTRATION | 10 μ s, 5 μ s TIMING | HIGH SPEED TIMING | X-Y GAIN AND OFFSET |
| POWER SUPPLIES | | | | | | | | | | | | | | |
| VERTICAL ATTENUATORS | | | | | | | | | | | | | | |
| PREAMPS & CHANNEL SW | | | | | | | | | | | | | | |
| VERTICAL OUTPUT | | | | | | | | | | | | | | |
| TRIGGER CIRCUIT | | | | | | | | | | | | | | |
| SWEEP GENERATOR | | | | | | | | | | | | | | |
| HORIZONTAL AMPLIFIER | | | | | | | | | | | | | | |
| CRT | | | | | | | | | | | | | | |

INDEX TO ADJUSTMENT PROCEDURE STEPS

Power Supply and CRT Display Page

1. Check/Adjust Power Supply DC Levels ... 5-4
2. Adjust CRT Grid Bias 5-5
3. Adjust Astigmatism 5-5
4. Adjust Trace Alignment 5-5
5. Adjust Geometry 5-5

Vertical

1. Adjust Channel 1 Variable Balance 5-6
2. Adjust Channel 2 Variable Balance 5-6
3. Adjust Channel 2 Invert Balance 5-7
4. Adjust Vertical Gain 5-7
5. Check Deflection Accuracy and
VOLTS/DIV Variable Range 5-7
6. Check Input Coupling 5-8
7. Check Position Range 5-8
8. Adjust X1/X10 Balance 5-8
9. Adjust Attenuator Compensation 5-9
10. Check Vertical ALT Operation 5-10
11. Check CHOP Operation 5-10
12. Check TRACE SEP Range 5-10
13. Check ADD MODE Operation 5-10
14. Adjust High-Frequency Compensation .. 5-10
15. Check Bandwidth 5-11
16. Check Channel Isolation 5-12
17. Check Common-Mode Rejection
Ratio 5-12

Horizontal

1. Adjust 1-ms Timing 5-13
2. Adjust Magnifier Gain 5-13
3. Adjust Magnifier Registration 5-13
4. Check Sweep Length 5-14
5. Check Position Range 5-14
6. Check Variable Range 5-14
7. Adjust 10- μ s and 5- μ s Timing 5-14
8. Adjust High-Speed Timing 5-14
9. Check Timing Accuracy and Linearity .. 5-14
10. Adjust X-Y Gain and Offset 5-16
11. Check X Bandwidth 5-17
12. Check Sweep Holdoff 5-17

Trigger

1. Adjust Trigger Offset Channel Balance . 5-18
2. Adjust Trigger Sensitivity, Slope Balance,
and P-P Offset 5-18
3. Check Trigger Sensitivity 5-19
4. Check LF P-P Auto Trigger 5-20
5. Adjust External Trigger Offset
and Range 5-20
6. Check Single Sweep Operation 5-20

External Z-Axis and Probe Adjust

1. Check External Z-Axis Operation 5-22
2. Check Probe Adjust Operation 5-22

POWER SUPPLY AND CRT DISPLAY

Equipment Required (See Table 4-1):

Leveled Sine-Wave Generator (Item 2)
Time-Mark Generator (Item 3)
Screwdriver (Item 5)

Digital Voltmeter (Item 7)
50- Ω BNC Coaxial Cable (Item 8)
50- Ω BNC Termination (Item 10)

See **ADJUSTMENT LOCATIONS** at the back of this manual for adjustment locations.

INITIAL CONTROL SETTINGS

PROCEDURE STEPS

INTENSITY

Visible display

1. Check/Adjust Power Supply DC Levels (R933)

Vertical

POSITION (both)
MODE
VOLTS/DIV (both)
VOLTS/DIV Variable (both)
Magnification (both)

AC-GND-DC (both)

Midrange
CH 1, NORM
10 mV
Cal detent
X1 (CAL
knobs in)
GND

NOTE

Review the information at the beginning of the Adjustment Procedure before starting this step.

Horizontal

POSITION (COURSE and FINE)
MODE
SEC/DIV

SEC/DIV Variable
MAG

Midrange
X1
X-Y (fully
ccw)
CAL detent
X5

Trigger

SLOPE
LEVEL
MODE
HOLD OFF
SOURCE
COUPLING

Positive (\neg)
Midrange
P-P AUTO
MIN
EXT, EXT
AC

a. Connect the digital voltmeter low lead to chassis ground and connect the volts lead to the -8.6 V supply (W989).

b. CHECK—Voltmeter reading is -8.56 to -8.64 V. If the reading is within these limits, skip to part d.

c. ADJUST—The -8.6 V Adj potentiometer (R933) for a voltmeter reading of -8.60 V.

d. CHECK—Voltage levels of the remaining power supplies listed in Table 5-2 are within the specified limits.

e. Disconnect the test equipment from the instrument.

Table 5-2
Power Supply Limits

| Power Supply | Test Point | Reading (Volts) |
|--------------|------------|-----------------|
| -8.6 V | W989 | -8.56 to -8.64 |
| +5.1 V | W991 | +4.95 to +5.25 |
| +8.7 V | W987 | +8.53 to +8.87 |
| +38 V | W972 | +36.8 to +39.1 |
| +99 V | W984 | +96.0 to +101.0 |

2. Adjust CRT Grid Bias (R851)

- Adjust the front-panel FOCUS control to produce a well-defined dot.
- Rotate the INTENSITY control fully counter-clockwise.
- ADJUST—Grid Bias (R851) for a visible dot, then back off the Grid Bias potentiometer until the dot just disappears.

3. Adjust Astigmatism (R874)

a. SET:

| | |
|----------------|-----------|
| Vertical MODE | CH 1 |
| CH 1 AC-GND-DC | DC |
| SEC/DIV | 5 μ s |
| Trigger SOURCE | CH 1 |

- Connect the leveled sine-wave generator output via a 50- Ω BNC coaxial cable and a 50- Ω BNC termination to the CH 1 OR X input connector.
- Set the generator to produce a 50-kHz, four-division display.
- ADJUST—Astig (R874) and the front-panel FOCUS control for the best defined waveform.
- Disconnect the test equipment from the instrument.

4. Adjust Trace Alignment

- Position the trace to the center horizontal graticule line.
- ADJUST—The front-panel TRACE ROTATION control for optimum alignment of the trace with the center horizontal graticule line.

5. Adjust Geometry (R870)

a. SET:

| | |
|----------------|--------|
| CH 1 VOLTS/DIV | 50 mV |
| SEC/DIV | 0.1 ms |

- Connect 50- μ s time markers from the time-mark generator via a 50- Ω BNC coaxial cable and a 50- Ω BNC termination to the CH 1 OR X input connector.
- Position the baseline part of the display below the bottom horizontal graticule line using the CH 1 POSITION control.
- Adjust the SEC/DIV Variable control for five markers per division.
- ADJUST—Geom (R870) for minimum curvature of the time markers at the left and right edges of the graticule.
- Set CH 1 AC-GND-DC switch to GND.
- ADJUST—Geom (R870) for minimum curvature of the baseline trace when positioned at the top and bottom horizontal graticule lines using the CH 1 POSITION control.
- Set the CH 1 AC-GND-DC switch to DC.
- Repeat Parts e through h for optimum compromise between the vertical and horizontal displays.
- Disconnect the test equipment from the instrument.

VERTICAL

Equipment Required (See Table 4-1):

| | |
|---|---|
| Calibration Generator (Item 1) | 50- Ω BNC Termination (Item 10) |
| Leveled Sine-Wave Generator (Item 2) | 10X Attenuator (Item 12) |
| Screwdriver (Item 5) | BNC Male-to-Miniature-Probe Tip (Item 13) |
| 50- Ω BNC Coaxial Cable (Item 8) | Low-Reactance Alignment Tool (Item 15) |
| Dual-Input Coupler (Item 9) | 10X Probe (Provided with instrument) |

See **ADJUSTMENT LOCATIONS** at the back of this manual for adjustment locations.

INITIAL CONTROL SETTINGS

Vertical

| | |
|---------------------------|-------------------|
| POSITION (both) | Midrange |
| MODE | CH 1, NORM |
| VOLTS/DIV (both) | 5 mV |
| VOLTS/DIV Variable (both) | CAL detent |
| Magnification (both) | X1 (CAL knobs in) |
| AC-GND-DC (both) | GND |

Horizontal

| | |
|----------------------------|------------|
| POSITION (COARSE and FINE) | Midrange |
| MODE | X1 |
| SEC/DIV | 0.5 ms |
| SEC/DIV Variable | CAL detent |
| MAG | X5 |

Trigger

| | |
|----------|--------------|
| SLOPE | Positive (⌋) |
| LEVEL | Midrange |
| MODE | P-P AUTO |
| HOLD OFF | MIN |
| SOURCE | EXT, EXT |
| COUPLING | AC |

b. Position the trace on the center horizontal graticule line using the CH 1 POSITION control.

c. Rotate the CH 1 VOLTS/DIV Variable control clockwise to the CAL detent.

d. ADJUST—Var Bal (R33) to set the trace to the center horizontal graticule line.

e. Repeat Parts a through d until there is no trace shift between the fully clockwise and the fully counterclockwise positions of the CH 1 VOLTS/DIV Variable control.

f. Return the CH 1 VOLTS/DIV Variable control to the CAL detent.

2. Adjust Channel 2 Variable Balance (R84) (SN 202908 and above)

a. Set Vertical Mode to Ch 2.

b. Rotate the CH 2 VOLTS/DIV Variable control fully counterclockwise.

c. Position the trace on the center horizontal graticule line using the CH 2 POSITION control.

d. Rotate the CH 2 VOLTS/DIV Variable control clockwise to the CAL detent.

e. ADJUST—Var Bal (R84), on the front-panel board to set the trace to the center horizontal graticule line.

PROCEDURE STEPS

1. Adjust Channel 1 Variable Balance (R33)

a. Rotate the CH 1 VOLTS/DIV Variable control fully counterclockwise.

f. Repeat Parts b through e until there is no trace shift between the fully clockwise and the fully counterclockwise positions of the CH 2 VOLTS/DIV Variable control.

g. Return the CH 2 VOLTS/DIV Variable control to the CAL detent.

3. Adjust Channel 2 Invert Balance (R83)

a. Position the trace on the center horizontal graticule line using the Channel 2 POSITION control.

b. Set Vertical MODE switch to CH 2 INVERT.

c. ADJUST—Invert Bal (R83) to set the trace to the center horizontal graticule line.

d. Set Vertical MODE switch to NORM.

e. Repeat Parts a through d until there is no trace shift when switching from NORM to CH 2 INVERT.

4. Adjust Vertical Gain (R145, R195, R112, and R162)

a. SET:

| | |
|------------------|------------|
| Vertical MODE | CH 1, NORM |
| AC—GND—DC (both) | DC |
| Trigger SOURCE | VERT MODE |
| Trigger COUPLING | DC |

b. Connect a 20-mV, standard-amplitude signal from the calibration generator via a 50- Ω BNC cable to the CH 1 OR X input connector.

c. Center the display within the graticule using the CH 1 POSITION control.

d. ADJUST—CH 1 Gain (R145) for an exact four-division display.

e. Move the test-signal cable from the CH 1 OR X input connector to the CH 2 OR Y input connector.

f. Set the Vertical MODE switch to CH 2.

g. Center the display within the graticule using the CH 2 POSITION control.

h. ADJUST—CH 2 Gain (R195) for an exact four-division display.

i. Repeat Parts b through h until the gain of the two channels is identical. (You must switch the Vertical MODE between CH 1 and CH 2 as needed to view the display.)

j. Change the generator output to 2 mV, and set the CH 1 and CH 2 vertical magnification to X10 (pull CAL knobs out).

k. ADJUST—CH 2 X10 Gain (R162) for an exact four-division display.

l. Move the test-signal cable from the CH 2 OR Y input connector to the CH 1 OR X input connector.

m. Set the Vertical MODE switch to CH 1.

n. ADJUST—CH 1 X10 Gain (R112) for an exact four-division display.

5. Check Deflection Accuracy and VOLTS/DIV Variable Range

a. SET:

| | |
|-------------------------------|-------------------|
| VOLTS/DIV Variable (both) | CAL detent |
| Vertical Magnification (both) | X1 (CAL knobs in) |

b. CHECK—Deflection accuracy is within the limits given in Table 5-3 for each CH 1 VOLTS/DIV switch setting and corresponding standard-amplitude signal. When at the 20-mV VOLTS/DIV switch setting, rotate the CH 1 VOLTS/DIV Variable control fully counterclockwise and CHECK that the display decreases to two divisions or less. Then return the CH 1 VOLTS/DIV Variable control to the CAL detent and continue with the 50-mV check.

c. Move the cable from the CH 1 OR X input connector to the CH 2 OR Y input connector. Set the Vertical MODE switch to CH 2.

d. Repeat Part b using the Channel 2 controls.

Table 5-3
Deflection Accuracy Limits

| VOLTS/DIV Switch Setting | STANDARD Amplitude Signal | ACCURACY Limits (Divisions) |
|--------------------------------|---------------------------------|-----------------------------------|
| 5 mV | 20 mV | 3.88 to 4.12 |
| 10 mV | 50 mV | 4.85 to 5.15 |
| 20 mV | 0.1 V | 4.85 to 5.15 |
| 50 mV | 0.2 V | 3.88 to 4.12 |
| 0.1 V | 0.5 V | 4.85 to 5.15 |
| 0.2 V | 1 V | 4.85 to 5.15 |
| 0.5 V | 2 V | 3.88 to 4.12 |
| 1 V | 5 V | 4.85 to 5.15 |
| 2 V | 10 V | 4.85 to 5.15 |
| 5 V | 20 V | 3.88 to 4.12 |

6. Check Input Coupling

a. Set the AC-GND-DC switches (both channels) to GND.

b. Position the trace on the center horizontal graticule line using the CH 2 POSITION control.

c. Change the generator output to 50 mV.

d. Set the CH 2 AC-GND-DC switch to AC.

e. CHECK—That the display is centered about the center horizontal graticule line.

f. Set the CH 2 AC-GND-DC switch to DC.

g. CHECK—That the display is ground referenced on the center horizontal graticule line.

h. Move the test-signal cable from the CH 2 OR Y input connector to the CH 1 OR X input connector.

i. Set the Vertical MODE switch to CH 1.

j. Repeat Parts b through g using the Channel 1 controls.

7. Check Position Range

a. SET:

| | |
|------------------|----------------|
| VOLTS/DIV (both) | 10 mV |
| AC-GND-DC (both) | AC |
| SEC/DIV | 0.2 ms Trigger |
| Trigger COUPLING | AC |

b. Set the calibration generator for 0.1 V.

c. Adjust the CH 1 VOLTS/DIV Variable control to produce a 5.25-division display.

d. Set the CH 1 VOLTS/DIV to 5 mV.

e. Set the calibration generator to produce a 0.2 V signal.

f. CHECK—The bottom and top of the trace may be positioned above and below the center horizontal graticule line by rotating the CH 1 POSITION control fully clockwise and counterclockwise respectively.

g. Move the cable from the CH 1 OR X input connector to the CH 2 OR Y input connector.

h. Set the Vertical MODE switch to CH 2.

i. Repeat Parts b through f using the Channel 2 controls.

j. Disconnect the test equipment from the instrument.

8. Adjust X1/X10 Balance

a. SET:

| | |
|---------------------------|------------|
| Vertical MODE | CH 1 |
| AC-GND-DC (both) | GND |
| VOLTS/DIV Variable (both) | CAL detent |

b. Position the trace on the center horizontal graticule line using the CH 1 POSITION control.

c. Set CH 1 VOLTS/DIV Variable knob to X10 (pull CAL knob out).

d. ADJUST—X10 BAL (R107) to position the trace on the center horizontal graticule line.

e. Set CH 1 VOLTS/DIV Variable knob to X1 (push CAL knob in).

f. Repeat Parts b through e until there is no trace shift between X1 and X10 positions.

g. Set Vertical MODE to CH 2.

h. Repeat Parts b through f for CH 2, using the Channel 2 X10 BAL adjust (R157) instead of R107 in Part d.

i. Return both VOLTS/DIV Variable controls to their CAL and X1 positions.

9. Adjust Attenuator Compensation

a. SET:

| | |
|-------------------------------|---------------------|
| VOLTS/DIV (both) | 5 mV |
| Vertical Magnification (both) | X1 (CAL knobs in DC |
| AC-GND-DC (both) | DC |

b. Connect the high-amplitude, square-wave output from the calibration generator via a 50- Ω BNC termination, a probe-tip-to-BNC adapter, and the 10X probe to the CH 2 OR Y input connector.

c. Set the generator to produce a 1-kHz, five-division display and compensate the probe using the probe compensation adjustment (see the probe instruction manual).

d. Set the CH 2 VOLTS/DIV switch to 10 mV.

e. Replace the probe and probe-tip-to-BNC adapter with a 50- Ω BNC coaxial cable and 50- Ω BNC termination.

f. Set the generator to produce a five-division display.

g. ADJUST—Trimmer 1 for flattest response on the square wave signal. See figure 5-1 for location of the trimmers.

h. Replace the 50- Ω BNC coaxial cable and 50- Ω BNC termination with the probe and probe-tip-to-BNC adapter.

i. Set the generator to produce a five-division square wave.

j. ADJUST—Trimmer 1N for flattest response on square wave.

k. Set the CH 2 VOLTS/DIV switch to 20 mV.

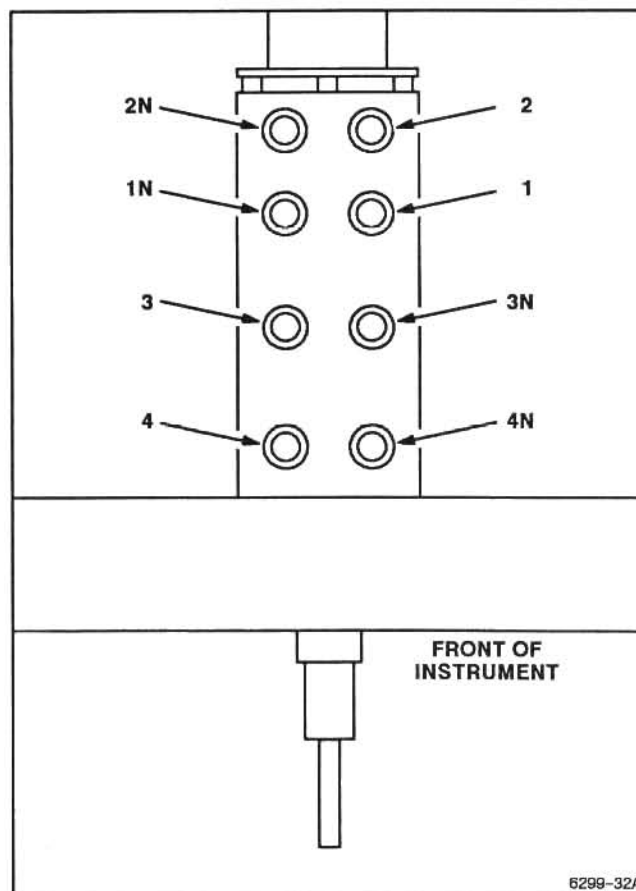


Figure 5-1. Attenuator trimmer adjustments.

l. Repeat Parts e through j except adjust the "2" and "2N" trimmers in Parts g and j respectively.

m. Set the CH 2 VOLTS/DIV switch to 50 mV.

n. Repeat Parts e through j except adjust the "3" and "3N" trimmers in Parts g and j respectively.

o. Set the CH 2 VOLTS/DIV switch to .5 V.

p. Repeat Parts e through j except adjust the "4" and "4N" trimmers in Parts g and j respectively.

q. Set the Vertical MODE switch to CH 1.

r. Repeat Parts b through p for the Channel 1 Attenuators.

s. Disconnect the test equipment from the instrument.

10. Check Vertical ALT Operation**a. SET:**

| | |
|------------------|------------------------|
| AC-GND-DC (both) | GND |
| Vertical MODE | BOTH, NORM, and ALT |
| SEC/DIV | 0.1 s |
| Trigger SOURCE | CH 1 |

b. Position the Channel 1 and Channel 2 traces about two divisions apart using the CH 1 and CH 2 POSITION controls.

c. CHECK—Channel 1 and Channel 2 traces move across the screen alternately.

11. Check CHOP Operation**NOTE**

Chop Switch Balance adjust only applies to the following range of instruments: Serial Numbers 100000 - 100809 and 202908 - 209929.

a. SET:

| | |
|----------------|-------------------------|
| Vertical MODE | BOTH, NORM, and CHOP |
| SEC/DIV | 1 μ s |
| Trigger MODE | NORM |
| Trigger SOURCE | VERT MODE |

b. ADJUST—Chop Switch Balance (R140) for no triggering on chop segments when rotating the Trigger LEVEL control.

12. Check TRACE SEP Range**a. SET:**

| | |
|------------------|------------|
| VOLTS/DIV (both) | 5 mV |
| Vertical MODE | CH 1 |
| SEC/DIV | 10 μ s |
| Horizontal MODE | ALT |
| Trigger MODE | P-P AUTO |
| Trigger SOURCE | EXT, EXT |
| TRACE SEP | Fully ccw |

b. Position the trace on the center horizontal graticule line using the CH 1 POSITION control.

c. CHECK—That the MAG trace can be positioned three divisions or more ABOVE the unmagnified trace using the TRACE SEP control. SN 202908 and above—check for positioning three divisions above and below the unmagnified trace.

13. Check ADD MODE Operation**a. SET:**

| | |
|------------------|------------------------|
| VOLTS/DIV (both) | 20 mV |
| AC-GND-DC (both) | DC |
| Vertical MODE | BOTH, NORM, and ALT |
| SEC/DIV | 0.5 ms |
| Horizontal MODE | X1 |
| Trigger SOURCE | CH 1 |

b. Position both traces on the center horizontal graticule line using the CH 1 and CH 2 POSITION controls.

c. Set the calibration generator to produce a 50-mV signal.

d. Connect the output of the calibration generator to both the CH 1 OR X input and the CH 2 OR Y input with dual-input coupler.

e. Check that both channels show a 2.5-division display.

f. SET:

| | |
|------------------|-----|
| Vertical MODE | ADD |
| AC-GND-DC (both) | DC |

g. CHECK—That the resultant display is five divisions $\pm 3\%$ (4.85 to 5.15 divisions).

h. Disconnect the test equipment from the instrument.

14. Adjust High-Frequency Compensation**a. SET:**

| | |
|------------------|----------------|
| VOLTS/DIV (both) | 10 mV Vertical |
| MODE | CH 1 |
| SEC/DIV | 0.2 μ s |

b. Connect the positive-going, fast-rise, square-wave output from the calibration generator via a 50- Ω BNC coaxial cable, a 10X BNC attenuator, and a 50- Ω BNC termination to the CH 1 OR X input connector.

c. Set the generator to produce a 1-MHz, five-division display.

d. Set the top of the display to the center horizontal graticule line using the CH 1 POSITION control.

e. ADJUST—Compensation (R241, R240, C256, C237 and C257) for flattest response. Repeat adjustments until no further improvements are noted.

NOTE

Check your instrument to see if C180 on the A1 circuit board is adjustable. If it is, perform Parts f, g, and h. If it is not, proceed with part i.

f. Move the test signal to CH 2 and set the Vertical MODE to CH 2.

g. ADJUST—CH 2 compensation capacitor C180 to match the CH 2, 10 mV compensation to the CH 1 10 mV compensation.

h. Move the test signal cable back to CH 1 and set the Vertical MODE to CH 1.

i. Set the CH 1 VOLTS/DIV switch to 5 mV.

j. Set the generator for a five-division signal.

k. Check for aberrations of $\pm 6\%$ (0.3 division) or less.

l. Set the CH 1 VOLTS/DIV switch to 10 mV.

m. Set the generator for a five-division signal.

n. Check for aberrations of $\pm 4\%$ (0.2 division) or less.

o. Repeat Part n for each CH 1 VOLTS/DIV switch settings from 20 mV through 0.2 V. Adjust the generator output and add or remove the 10X attenuator as necessary to maintain a five-division display at each VOLTS/DIV switch setting.

NOTE

Some generators do not produce enough signal amplitude to do parts p through t.

p. Set the CH 1 VOLTS/DIV switch to 0.5 V.

q. Check for aberrations of $\pm 6\%$ (0.3 division) or less.

r. Set the CH 1 VOLTS/DIV switch to 1 V.

s. Check for aberrations of $\pm 12\%$ (0.6 division) or less.

t. Repeat Part s for the 2 V and 5 V CH 1 VOLTS/DIV switch settings. Adjust the generator output and add or remove the 10X attenuator as necessary to maintain a five-division display at each VOLTS/DIV switch setting.

u. Move the cable from the CH 1 OR X input connector to the CH 2 OR Y input connector. Set the Vertical MODE switch to CH 2.

v. Repeat Parts f through t for Channel 2.

w. Disconnect the test equipment from the instrument.

15. Check Bandwidth

a. SET:

| | |
|------------------|------------|
| VOLTS/DIV (both) | 5 mV |
| Vertical MODE | CH 1 |
| SEC/DIV | 10 μ s |
| Trigger SOURCE | VERT MODE |

b. Connect the leveled sine-wave generator output via a 50- Ω BNC coaxial cable and a 50- Ω BNC termination to the CH 1 OR X input connector.

c. Set the generator to produce a 50-kHz, six-division display.

d. Increase the sine-wave frequency until a 4.2-division display is obtained.

e. CHECK—the frequency is greater than 50 MHz.

f. Repeat Parts c through e for all ranges from 10 mV to .2 V.

g. SET:

| | |
|-------------------------|--------------------|
| CH 1 VOLTS/DIV | 5 mV |
| CH 1 VOLTS/DIV Variable | X10 (CAL knob out) |

h. Set the generator to produce a 50-kHz, six-division display.

i. Increase the signal frequency until a 4.2-division display is obtained.

- j. CHECK—The frequency is greater than 5 MHz.
- k. Repeat Parts h through j for all ranges from 10 mV to 0.2 V.
- l. Set the CH 1 VOLTS/DIV Variable to X1 (push CAL knob in).
- m. Set Vertical MODE to CH 2.
- n. Repeat Parts b through l for Channel 2.

16. Check Channel Isolation

- a. SET:

| | |
|------------------|--------------|
| CH 1 VOLTS/DIV | 1 V |
| CH 2 VOLTS/DIV | 0.5 V |
| AC-GND-DC (CH 1) | DC |
| AC-GND-DC (CH 2) | GND |
| Vertical MODE | CH 1 |
| SEC/DIV | 0.05 μ s |
- b. Connect the leveled sine-wave generator output via a 50- Ω BNC coaxial cable and a 50- Ω BNC termination to the CH 1 OR X input connector.
- c. Set CH 1 VOLTS/DIV switch to 0.5 V for a 10-division display.
- d. Set the generator to produce a 10-MHz, 5 V peak-to-peak output.
- e. Set Vertical MODE to CH 2 and ALT.
- f. CHECK—That the CH 1 trace amplitude is less than 0.1 division.

- g. Move the test-signal cable from the CH 1 OR X input connector to the CH 2 OR Y input connector.

h. SET:

| | |
|----------------|------|
| Vertical MODE | CH 1 |
| CH 1 AC-GND-DC | GND |
| CH 2 AC-GND-DC | DC |

- i. CHECK—That the display amplitude is less than 0.1 division.
- j. Disconnect the test equipment from the instrument.

17. Check Common-Mode Rejection Ratio

- a. SET:

| | |
|------------------|---------------------|
| VOLTS/DIV (both) | 10 mV |
| AC-GND-DC (both) | DC |
| Vertical MODE | BOTH, NORM, and ALT |
- b. Connect the leveled sine-wave generator output via a 50- Ω BNC coaxial cable, a 50- Ω BNC termination, and a dual-input coupler to the CH 1 OR X and CH 2 OR Y input connectors.
- c. Set the generator to produce a 10-MHz, six-division display.
- d. Set Vertical MODE to INV and ADD.
- e. CHECK—That the ADD display is less than 0.6 division.
- f. Disconnect the test equipment from the instrument.

HORIZONTAL

Equipment Required (See Table 4-1):

| | |
|--------------------------------------|--|
| Calibration Generator (Item 1) | Test Oscilloscope (Item 6) |
| Leveled Sine-Wave Generator (Item 2) | 50- Ω BNC Termination (Item 10) |
| Time-Mark Generator (Item 3) | Low-Reactance Alignment tool (Item 15) |
| Screwdriver (Item 5) | 50- Ω Coaxial Cable (Item 8) |

See **ADJUSTMENT LOCATIONS** at the back of this manual for adjustment locations.

INITIAL CONTROL SETTINGS
Vertical

| | |
|---------------------------|-------------------|
| POSITION (both) | Midrange |
| MODE | CH 1 |
| VOLTS/DIV (both) | 0.5 V |
| VOLTS/DIV Variable (both) | CAL detent |
| Magnification (both) | X1 (CAL knobs in) |
| AC-GND-DC (both) | DC |

Horizontal

| | |
|------------------|------------|
| POSITION | Midrange |
| MODE | X1 |
| SEC/DIV | 1 ms |
| SEC/DIV Variable | CAL detent |

Trigger

| | |
|----------|--------------|
| SLOPE | Positive (⌋) |
| LEVEL | Midrange |
| MODE | P-P AUTO |
| HOLD OFF | MIN |
| SOURCE | CH 1 |
| COUPLING | AC |

b. Align the first time marker with the first (extreme left) vertical graticule line using the Horizontal POSITION control.

NOTE

When making timing measurements, use the tips of the time markers positioned at the center horizontal graticule line as the measurement reference points.

c. ADJUST—X1 Gain (R775) for one marker per division over the center eight divisions.

2. Adjust Magnifier Gain (R731, R777)

a. SET:

| | |
|-----------------|-----|
| Horizontal MODE | MAG |
| Horizontal MAG | X5 |

b. Align the first time marker with the first (extreme left) vertical graticule line using the Horizontal POSITION control.

c. ADJUST—X5 Mag Gain (R731) for five divisions between magnified markers.

d. Set Horizontal MAG to X10.

e. ADJUST—X10 Mag Gain (R777) for 10 divisions between magnified markers.

PROCEDURE STEPS
1. Adjust 1-ms Timing (R775)

a. Connect 1-ms time markers from the time-mark generator via a 50- Ω BNC coaxial cable and a 50- Ω BNC termination to the CH 1 OR X input connector.

3. Adjust Magnifier Registration (R782, R730)

a. Set the Horizontal MAG to X50.

b. Select 1 ms time-markers from the time-mark generator.

c. Position the first time marker to the center vertical graticule line using the Horizontal POSITION controls.

d. Set the Horizontal MAG to X10.

e. ADJUST—X50 Mag Reg (R730) to bring the first time marker to the center vertical graticule line.

f. Set the Horizontal MAG to X1.

g. ADJUST—X10 Mag Reg (R782) to overlay the first time marker to the center vertical graticule line.

4. Check Sweep Length

a. SET:

| | |
|-----------------|--------|
| SEC/DIV | 0.1 ms |
| Horizontal MODE | X1 |

b. Select .1-ms time markers from the time-mark generator.

c. Position the start of the sweep at the first vertical graticule line using the Horizontal POSITION control.

d. CHECK—That the sweep length is between 10.2 and 12 divisions.

5. Check Position Range

a. CHECK—That the start of the sweep can be positioned to the right of the center vertical graticule line by rotating the COARSE Horizontal POSITION control fully clockwise.

b. CHECK—That the tenth time marker can be positioned to the left of the center vertical graticule line by rotating the COARSE Horizontal POSITION control fully counterclockwise.

c. CHECK—That the FINE Horizontal POSITION control can move the trace more than 0.4 divisions.

6. Check Variable Range

a. Select 0.5-ms time markers from the time-mark generator.

b. Set the SEC/DIV Variable control knob fully counterclockwise

c. CHECK—That the spacing between time markers is two divisions or less.

d. Return the SEC/DIV Variable knob to the CAL detent.

7. Adjust 10- μ s and 5- μ s timing (R722, C703)

a. Set the SEC/DIV switch to 10 μ s.

b. Select 10- μ s time markers from the time-mark generator.

c. ADJUST—10- μ s Timing (R722) for one marker per division.

d. Set the SEC/DIV switch to 5 μ s.

e. Select 5- μ s time markers from the time-mark generator.

f. ADJUST—5- μ s Timing (C703) for one marker per division.

8. Adjust High-Speed Timing (C784, C794)

a. SET:

| | |
|-----------------|--------------|
| CH 1 VOLTS/DIV | 0.1 V |
| CH 1 AC-GND-DC | AC |
| SEC/DIV | 0.05 μ s |
| Horizontal MODE | MAG |
| Horizontal MAG | X10 |
| Trigger SOURCE | EXT, EXT |

b. Select 10-ns time markers from the time-mark generator.

c. Connect the time-mark generator trigger output via a 50- Ω BNC coaxial cable and a 50- Ω BNC termination to the EXT INPUT OR Z input connector.

d. Adjust the Trigger LEVEL control so that the markers are stably triggered.

e. ADJUST—5-ns Linearity (C784) and 5-ns Timing (C794) for two divisions between each marker.

9. Check Timing Accuracy and Linearity

a. SET:

| | |
|-----------------|--------------|
| CH VOLTS/DIV | 0.5 V |
| SEC/DIV | 0.05 μ s |
| Horizontal MODE | X1 |

b. Select 50-ns time markers from the time-mark generator.

c. Adjust the Trigger LEVEL control for a stable, triggered display.

d. Use the Horizontal POSITION control to align the second time marker with the second vertical graticule line.

e. CHECK—Timing accuracy is within 3% (0.24 division at the tenth vertical graticule line), and linearity is within 5% (0.10 division over any two of the center eight divisions).

NOTE

When checking the timing accuracy for SEC/DIV switch settings from 50 ms to 0.5 s, watch the time marker tips only at the second and tenth vertical graticule lines while adjusting the Horizontal POSITION control.

f. Repeat Parts c through e for the remaining SEC/DIV and time-mark-generator setting combinations shown in Table 5-4 under the Normal column.

Table 5-4
Settings for Timing Accuracy Checks

| SEC/DIV Switch Setting | Time-Mark Generator Setting | | | |
|------------------------------|-----------------------------|-------------|-------------|-------------|
| | Normal | X5 Mag | X10 Mag | X50 Mag |
| 0.05 μ s | 50 ns | 10 ns | | |
| 0.1 μ s | 0.1 μ s | 20 ns | 10 ns | |
| 0.2 μ s | 0.2 μ s | 0.1 μ s | 20 ns | 10 ns |
| 0.5 μ s | 0.5 μ s | 0.1 μ s | 50 ns | 10 ns |
| 1 μ s | 1 μ s | 0.2 μ s | 0.1 μ s | 20 ns |
| 2 μ s | 2 μ s | 1 μ s | 0.2 μ s | 0.1 μ s |
| 5 μ s | 5 μ s | 1 μ s | 0.5 μ s | 0.1 μ s |
| 10 μ s | 10 μ s | 2 μ s | 1 μ s | 0.2 μ s |
| 20 μ s | 20 μ s | 10 μ s | 2 μ s | 1 μ s |
| 50 μ s | 50 μ s | 10 μ s | 5 μ s | 1 μ s |
| 0.1 ms | 0.1 ms | 20 μ s | 10 μ s | 2 μ s |
| 0.2 ms | 0.2 ms | 0.1 ms | 20 μ s | 10 μ s |
| 0.5 ms | 0.5 ms | 0.1 ms | 50 μ s | 10 μ s |
| 1 ms | 1 ms | 0.2 ms | 0.1 ms | 20 μ s |
| 2 ms | 2 ms | 1 ms | 0.2 ms | 0.1 ms |
| 5 ms | 5 ms | 1 ms | 0.5 ms | 0.1 ms |
| 10 ms | 10 ms | 2 ms | 1 ms | 0.2 ms |
| 20 ms | 20 ms | 10 ms | 2 ms | 1 ms |
| 50 ms | 50 ms | 10 ms | 5 ms | 1 ms |
| 0.1 s | 0.1 s | 20 ms | 10 ms | 2 ms |
| 0.2 s | 0.2 s | 0.1 s | 20 ms | 10 ms |
| 0.5 s | 0.5 s | 0.1 s | 50 ms | 10 ms |

NOTE

In X5 and X50 magnification in all "2" decade switch settings, the associated time marker settings give only five markers per 10 divisions instead of the customary 10. When checking these ranges, position the markers on the second and tenth vertical graticule lines.

g. Disconnect the test signal from the EXT INPUT OR Z connector.

h. SET:

| | |
|-----------------|--------------|
| SEC/DIV | 0.05 μ s |
| Horizontal MODE | MAG |
| Horizontal MAG | X5 |
| Trigger Source | CH 1 |

i. Select 10-ns time markers from the time-mark generator. Adjust the Trigger LEVEL control to obtain a stable display.

j. Use the Horizontal POSITION control to align the first time marker that is 50 ns beyond the start of the sweep with the second vertical graticule line.

k. CHECK—Timing accuracy is within 4% (0.32 division at the tenth vertical graticule line), and linearity is within 7% (0.14 division over any two of the center eight divisions). Exclude any portion of the sweep past the 50th magnified division.

l. Repeat Parts j and k for the remaining SEC/DIV and time-mark-generator setting combinations shown in Table 5-4 under the X5 Magnified column.

m. SET:

| | |
|----------------|-------------|
| SEC/DIV | 0.1 μ s |
| Horizontal MAG | X10 |

n. Select 10-ns time markers from the time-mark generator.

o. Use the Horizontal POSITION control to align the first time marker that is 50 ns beyond the start of the sweep with the second vertical graticule line.

p. CHECK—Timing accuracy is within 4% (0.32 division at the tenth vertical graticule line), and linearity is within 7% (0.14 division over any two of the center eight divisions). Exclude any portion of the sweep past the 50th magnified division.

q. Repeat Parts o and p for the remaining SEC/DIV and time-mark generator setting combinations shown in Table 5-4 under the X10 Magnified column.

r. SET:

| | |
|----------------|-------------|
| SEC/DIV | 0.5 μ s |
| Horizontal MAG | X50 |

s. Select 10-ns time markers from the time-mark generator.

t. Use the Horizontal POSITION control to align the first time marker that is 100 ns beyond the start of the sweep with the second vertical graticule line.

u. CHECK—Timing accuracy is within 5% (0.40 division at the tenth vertical graticule line), and linearity is within 9% (0.18 division over any two of the center eight divisions). Exclude any portion of the sweep past the 100th magnified division.

v. Repeat Parts t and u for the remaining SEC/DIV and time-mark-generator setting combinations shown in Table 5-4 under the X50 Magnified column.

w. Disconnect the test equipment from the instrument.

10. Adjust X-Y Gain and Offset (R395, R736)

a. SET:

| | |
|------------------|-----------------|
| VOLTS/DIV (both) | 10 mV |
| SEC/DIV | X-Y (fully ccw) |
| Horizontal MODE | X1 |

b. Connect a 50-mV, standard-amplitude signal from the calibration generator via a 50- Ω BNC coaxial cable to the CH 1 OR X input connector.

c. ADJUST—X Gain (R395) for exactly a five-division display.

d. Center the display within the graticule using the CH 1 POSITION control.

e. SET:

| | |
|----------------|------|
| CH 1 AC-GND-DC | GND |
| SEC/DIV | 1 ms |

f. Align the start of the trace with the first (extreme left) vertical graticule line using the Horizontal POSITION control.

g. Set the SEC/DIV switch to X-Y (fully counter-clockwise).

h. ADJUST—X Centering (R736) to position the spot at the center vertical graticule line.

i. Disconnect the test equipment from the instrument.

11. Check X Bandwidth

a. SET:

| | |
|------------------|------------------------|
| VOLTS/DIV (both) | 50 mV |
| AC-GND-DC (both) | DC |
| Vertical MODE | BOTH, NORM, and ALT |
| Trigger SOURCE | CH 1 |

b. Connect the leveled sine-wave generator output via a 50- Ω BNC coaxial cable and a 50- Ω BNC termination to the CH 1 OR X input connector.

c. Set the generator to produce an eight-division horizontal display at an output frequency of 50 kHz.

d. Increase the signal frequency until the horizontal deflection (X-axis) is equal to 5.7 divisions in length.

e. CHECK—That the frequency is greater than 2 MHz.

f. Disconnect the test equipment from the instrument.

12. Check Sweep Holdoff

a. SET:

| | |
|------------------|----------|
| VOLTS/DIV (both) | 1 V |
| AC-GND-DC (both) | GND |
| Vertical MODE | CH 1 |
| SEC/DIV | 1 ms |
| Trigger SOURCE | EXT, EXT |

b. Connect the test oscilloscope's 10X probe tip to the front end of R704 (toward the front panel). R704 is on the Timing circuit board.

c. Set HOLDOFF control fully counterclockwise (MIN setting).

d. Measure the HOLDOFF time.

e. Rotate the HOLDOFF control to the fully clockwise position

f. CHECK—Sweep holdoff time has increased by at least a factor of eight.

g. Repeat Parts c through f for SEC/DIV settings of 0.5 ms and 5 μ s.

h. Disconnect the 10X probe from R704.

TRIGGER

Equipment Required (See Table 4-1):

| | |
|--|---|
| Leveled Sine-Wave Generator (Item 2) | Dual-Input Coupler (Item 9) |
| Low-Frequency Sine-Wave Generator (Item 4) | 50- Ω BNC Termination (Item 10) |
| Screwdriver (Item 5) | 600- Ω BNC Termination (Item 11) |
| 50- Ω BNC Coaxial Cable (Item 8) | |

See **ADJUSTMENT LOCATIONS** at the back of this manual for adjustment locations.

INITIAL CONTROL SETTINGS

Vertical

| | |
|---------------------------|---------------------|
| POSITION (both) | Midrange |
| MODE | BOTH, NORM, and ALT |
| VOLTS/DIV (both) | 50 mV |
| VOLTS/DIV Variable (both) | CAL detent |
| Magnification (both) | X1 (CAL knobs in) |
| AC-GND-DC (both) | DC |

Horizontal

| | |
|----------------------------|------------|
| POSITION (COARSE and FINE) | Midrange |
| MODE | X1 |
| SEC/DIV | 2 μ s |
| SEC/DIV Variable | CAL detent |

Trigger

| | |
|----------|---------------------|
| SLOPE | Positive (\neg) |
| LEVEL | Midrange |
| MODE | P-P AUTO |
| HOLDOFF | MIN |
| SOURCE | VERT MODE |
| COUPLING | DC |

b. Set the generator to produce a four-division display at an output frequency of 50 kHz.

c. Center the CH 1 and CH 2 traces vertically.

d. Adjust the SEC/DIV Variable control to give one and a half sine-wave periods across the graticule.

e. ADJUST—CH 1/CH 2 Balance (R338) (found under the attenuator board) until the sine waves coincide.

f. Return the SEC/DIV variable control to the detent (CAL) position.

2. Adjust Trigger Sensitivity, Slope Balance, and P-P Offset (R489, R481, and R478)

a. SET:

| | |
|----------------|------------|
| CH 1 VOLTS/DIV | 0.1 V |
| Vertical MODE | CH 1 |
| SEC/DIV | 20 μ s |
| Trigger SOURCE | CH 1 |

b. Connect the leveled sine-wave generator output via a 50 Ω BNC coaxial cable and a 50 Ω BNC termination to the CH 1 OR X input connector.

c. Set the generator to produce a 2.2-division display at an output frequency of 50 kHz.

d. SET:

| | |
|----------------|------|
| CH 1 VOLTS/DIV | 1 V |
| Trigger MODE | NORM |

PROCEDURE STEPS

1. Adjust Trigger Offset Channel Balance (R338)

a. Connect the leveled sine-wave generator output via a 50- Ω BNC coaxial cable, a 50- Ω BNC termination, and a dual-input coupler to the CH 1 OR X and the CH 2 OR Y input connectors.

e. ADJUST—Trigger Sensitivity (R489) and Trigger LEVEL control for minimum sensitivity with a stable trigger.

NOTE

Adjusting Trigger Sensitivity (R489) clockwise decreases trigger sensitivity.

f. ADJUST—Slope Bal (R481) and the Trigger LEVEL control so that a reliable trigger can be maintained when switching the Trigger SLOPE between positive (↗) and negative (↘).

g. Adjust the Trigger LEVEL control for a stable trigger.

h. Set the Trigger MODE to P-P AUTO.

i. ADJUST—P-P Offset (R478) until a stable trigger can be obtained when switching the Trigger SLOPE between positive (↗) and negative (↘).

3. Check Trigger Sensitivity

a. SET:

| | |
|------------------|------------------------|
| CH 1 VOLTS/DIV | 0.1 V |
| CH 2 VOLTS/DIV | 1 V |
| AC-GND-DC (both) | AC |
| Vertical MODE | BOTH, NORM, and ALT |
| SEC/DIV | 0.2 μ s |

b. Set the generator to produce a three-division display at an output frequency of 5 MHz.

c. Set the CH 1 VOLTS/DIV switch to 1 V.

d. CHECK—A stable display can be obtained by adjusting the Trigger LEVEL control for each switch combination given in Table 5-5. Ensure that the TRIG'D light comes on when triggered.

Table 5-5

Switch Combinations for Triggering Checks

| Trigger MODE | Trigger SLOPE |
|--------------|---------------|
| NORM | Positive ↗ |
| NORM | Negative ↘ |
| P-P AUTO | Positive ↗ |
| P-P AUTO | Negative ↘ |

e. Move the test-signal cable from the CH 1 OR X input connector to the CH 2 OR Y input connector. Set the Vertical MODE switch to CH 2.

f. Repeat part d.

g. SET:

| | |
|-----------------|--------------|
| SEC/DIV | 0.05 μ s |
| Horizontal MODE | MAG |
| Horizontal MAG | X5 |

h. Set the generator to produce a 50-MHz, one-division display.

i. Repeat Part d.

j. Move the test-signal cable from the CH 1 OR X input connector to the CH 2 OR Y input connector. Set the Vertical MODE switch to CH 1.

k. Repeat Part d.

l. Disconnect the test equipment from the instrument.

m. SET:

| | |
|-----------------|-------------|
| CH 1 VOLTS/DIV | 20 mV |
| Vertical MODE | CH 1 |
| SEC/DIV | 0.2 μ s |
| Horizontal MODE | X1 |
| Trigger MODE | P-P AUTO |
| Trigger SOURCE | EXT, EXT |

n. Connect the leveled sine-wave generator output via a 50- Ω BNC termination, and a dual-input coupler to the CH 1 OR X input connector and EXT INPUT OR Z input connectors.

o. Set the generator to produce a four-division (80 mV) display at an output frequency of 5 MHz.

p. Repeat Part d.

q. SET:

| | |
|-----------------|--------------|
| CH 1 VOLT/DIV | 50 mV |
| SEC/DIV | 0.05 μ s |
| Horizontal MODE | MAG |
| Horizontal MAG | X5 |

r. Set the generator to produce a five-division (250 mV) display at an output frequency of 50 MHz.

s. Repeat Part d.

t. Disconnect the test equipment from the instrument.

4. Check LF P-P AUTO Trigger

a. SET:

| | |
|----------------|---------------|
| CH 1 VOLTS/DIV | 0.1 V SEC/DIV |
| | 20 ms |
| Trigger MODE | P-P AUTO |
| Trigger SOURCE | CH 1 |
| Trigger SLOPE | Positive (↗) |

b. Connect the low-frequency sine-wave generator output via a 50- Ω BNC coaxial cable and a 600- Ω BNC termination to the CH 1 OR X input connector.

c. Set the low-frequency sine-wave generator output to produce a 20-Hz, one-division display.

d. CHECK—For stable triggering in both positive (↗) and negative (↘) slope. Ensure that the TRIG'D light comes on when triggered.

5. Adjust External Trigger Offset and Range

a. SET:

| | |
|----------------|------------|
| CH 1 VOLTS/DIV | 0.5 V |
| CH 1 AC-GND-DC | DC |
| Vertical MODE | CH 1 |
| SEC/DIV | 20 μ s |
| Trigger MODE | P-P AUTO |
| Trigger SOURCE | CH 1 |

Trigger COUPLING
Trigger SLOPE

AC
Positive (↗)

b. Connect the leveled sine-wave generator output via a 50- Ω BNC coaxial cable, a 50- Ω BNC termination, and a dual-input coupler to the CH 1 OR X and the EXT INPUT OR Z input connectors.

c. Set the leveled sine-wave generator to produce a 50-kHz, five-division display.

d. Position the waveform equally about the center horizontal graticule line.

e. SET:

| | |
|----------------|----------|
| Trigger MODE | NORM |
| Trigger SOURCE | EXT, EXT |

f. ADJUST—Ext Trig Offset (R360) so that the trace is untriggered at either end of the Trigger LEVEL control.

g. Set the Trigger COUPLING switch to DC.

h. CHECK—That the display can be untriggered at either end of the Trigger LEVEL control.

i. Set the Trigger SOURCE switch to $\frac{\text{EXT}}{10}$

j. CHECK—That the display can be triggered about the midrange of the Trigger LEVEL control.

k. Set the Trigger SLOPE switch to negative (↘) and repeat Part j.

l. Disconnect the test equipment from the instrument.

6. Check Single Sweep Operation

a. SET:

| | |
|------------------|--------------|
| CH 1 VOLTS/DIV | 10 mV |
| CH 1 AC-GND-DC | DC |
| Vertical MODE | CH 1 |
| SEC/DIV | 0.5 ms |
| Horizontal MODE | X1 |
| Trigger MODE | NORM |
| Trigger SOURCE | CH 1 |
| Trigger COUPLING | AC |
| Trigger SLOPE | Positive (↗) |

b. Connect 50-mV standard-amplitude signal from the calibration generator via a 50- Ω BNC coaxial cable to the CH 1 OR X input connector.

c. Adjust the Trigger LEVEL control to obtain a stable display.

d. SET:

| | |
|----------------|---------|
| CH 1 AC-GND-DC | GND |
| Trigger MODE | SGL SWP |

e. Press in the SGL SWP button. The READY light should turn on and remain lit.

f. Set the CH 1 AC-GND-DC switch to DC.

NOTE

The INTENSITY control may require adjustment to observe the single-sweep trace.

g. CHECK—READY light goes out and a single sweep occurs.

h. Press the SGL SWP button several times.

i. CHECK—A single-sweep trace occurs and the READY light turns on briefly each time the SGL SWP button is pressed.

j. Disconnect the test equipment from the instrument.

EXTERNAL Z-AXIS AND PROBE ADJUST

Equipment Required (See Table 4-1):

Leveled Sine-Wave Generator (Item 2)
Screwdriver (Item 5)
50- Ω BNC Coaxial Cable (Item 8)

Dual-Input Coupler (Item 9)
50- Ω BNC Termination (Item 10)
10X Probe (Provided with instrument)

INITIAL CONTROL SETTINGS

Vertical

| | |
|-------------------------|------------------|
| Channel 1 POSITION | Midrange |
| MODE | CH 1 |
| CH 1 VOLTS/DIV | 1 V |
| CH 1 VOLTS/DIV Variable | CAL detent |
| Magnification | X1 (CAL knob in) |
| CH 1 AC-GND-DC | DC |

Horizontal

| | |
|----------------------------|------------|
| POSITION (COARSE and FINE) | Midrange |
| HORIZONTAL MODE | X1 |
| SEC/DIV | 20 ms |
| SEC/DIV Variable | CAL detent |

Trigger

| | |
|----------|---------------------|
| SLOPE | Positive (\neg) |
| LEVEL | Midrange |
| MODE | P-P AUTO |
| HOLD OFF | MIN |
| SOURCE | VERT MODE |
| COUPLING | DC |

PROCEDURE STEPS

1. Check External Z-Axis Operation

a. Connect the leveled sine-wave generator output via a 50- Ω BNC coaxial cable, a 50- Ω BNC

termination, and a dual-input coupler to the CH 1 OR X and the EXT INPUT OR Z input connectors.

b. Set the generator to produce a five-division, 50-kHz signal.

c. CHECK—For noticeable intensity modulation. The positive part of the sine wave should be of lower intensity than the negative part.

d. Disconnect the test equipment from the instrument.

2. Check Probe Adjust Operation

a. SET:

| | |
|----------------|--------|
| CH 1 VOLTS/DIV | 10 mV |
| SEC/DIV | 0.5 ms |
| Trigger SOURCE | CH 1 |

b. Connect the 10X Probe to the CH 1 OR X input connector and clip the probe tip to the PROBE ADJUST terminal on the instrument front panel. If necessary, adjust the probe compensation for a flat-topped square-wave display (see Probe instruction manual).

c. CHECK—Display amplitude is 4.75 to 5.25 divisions.

d. Disconnect the probe from the instrument.


MAINTENANCE

This section contains information for conducting preventive maintenance, troubleshooting, and corrective maintenance on the instrument. Circuit

board removal procedures are included in the corrective maintenance part of this section.

STATIC-SENSITIVE COMPONENTS

The following precautions are applicable when performing any maintenance involving internal access to the instrument.



Static discharge can damage any semiconductor component in this instrument.

This instrument contains electrical components that are susceptible to damage from static discharge. Table 6-1 lists the relative susceptibility of various classes of semiconductors. Static voltages of 1 KV to 30 KV are common in unprotected environments.

When performing maintenance, observe the following precautions to avoid component damage:

1. Minimize handling of static-sensitive components.
2. Transport and store static-sensitive components or assemblies in their original containers or on a metal rail. Label any package that contains static-sensitive components or assemblies.
3. Discharge the static voltage from your body by wearing a grounded antistatic wrist strap while handling these components. Servicing static-sensitive components or assemblies should be performed only at a static-free work station by qualified service personnel.
4. Nothing capable of generating or holding a static charge should be allowed on the work station surface.

Table 6-1
Relative Susceptibility to Static-Discharge
Damage

| Semiconductor Classes | Relative Susceptibility Levels ^a |
|--|---|
| MOS or CMOS microcircuits or discretes, or linear microcircuits with MOS inputs (Most Sensitive) | 1 |
| ECL | 2 |
| Schottky signal diodes | 3 |
| Schottky TTL | 4 |
| High-frequency bipolar transistors | 5 |
| JFET | 6 |
| Linear microcircuits | 7 |
| Low-power Schottky TTL | 8 |
| TTL (Least Sensitive) | 9 |

^aVoltage equivalent for levels (voltage discharged from a 100-pF capacitor through a resistance of 100 Ω):

1 = 100 to 500 V
2 = 200 to 500 V
3 = 250 V
4 = 500 V
5 = 400 to 600 V

6 = 600 to 800 V
7 = 400 to 1000 V (est)
8 = 900 V
9 = 1200 V

5. Keep the component leads shorted together whenever possible.
6. Pick up components by their bodies, never by their leads.

7. Do not slide the components over any surface.
8. Avoid handling components in areas that have a floor or work-surface covering capable of generating a static charge.
9. Use a soldering iron that is connected to earth ground.
10. Use only approved antistatic, vacuum-type desoldering tools for component removal.

PREVENTIVE MAINTENANCE

INTRODUCTION

Preventive maintenance consists of cleaning, visual inspection, and checking instrument performance. When performed regularly, it may prevent instrument malfunction and enhance instrument reliability. The severity of the environment in which the instrument is used determines the required frequency of maintenance. An appropriate time to accomplish preventive maintenance is just before instrument adjustment.

GENERAL CARE

The cabinet minimizes accumulation of dust inside the instrument and should normally be in place when operating the oscilloscope. The optional front cover for the instrument provides both dust and damage protection for the front panel and crt. Whenever the instrument is stored or is being transported, the front cover should be used.



Do not use chemical cleaning agents that might damage the plastics used in this instrument. Use a nonresidue-type cleaner, preferably isopropyl alcohol or a solution of 1% mild detergent with 99% water. Before using any other type of cleaner, consult your Tektronix Service Center or representative.

INSPECTION AND CLEANING

The instrument should be visually inspected and cleaned as often as operating conditions require. Accumulation of dust in the instrument can cause overheating and component breakdown. Dust on components acts as an insulating blanket, preventing efficient heat dissipation. It also provides an

electrical conduction path that could result in instrument failure, especially under high-humidity conditions.

Exterior

INSPECTION. Inspect the external portions of the instrument for damage, wear, and missing parts; use Table 6-2 as a guide. Instruments that appear to have been dropped or otherwise abused should be checked thoroughly to verify correct operation and performance. Any problems found that could cause personal injury or could lead to further damage to the instrument should be repaired immediately.



Do not allow moisture to get inside the instrument during external cleaning. Use only enough liquid to dampen the cloth or applicator.

CLEANING. Loose dust on the outside of the instrument can be removed with a soft cloth or small soft-bristle brush. The brush is particularly useful for dislodging dirt on and around the controls and connectors. Dirt that remains can be removed with a soft cloth dampened in a mild detergent-and-water solution. Do not use abrasive cleaners.

A plastic light filter is provided with the oscilloscope. Clean the light filter and the crt face with a soft lint-free cloth dampened with either isopropyl alcohol or a mild detergent-and-water solution.

Interior

To gain access to internal portions of the instrument for inspection and cleaning, refer to the Removal and Replacement Instructions in the Corrective Maintenance part of this section.

Table 6-2
External Inspection Checklist

| Item | Inspect For | Repair Action |
|-------------------------|--|---|
| Cabinet and Front Panel | Cracks, scratches, deformations, and damaged hardware or gaskets. | Touch up paint scratches and replace defective parts. |
| Front-panel controls | Missing, damaged, or loose knobs, buttons, and controls. | Repair or replace missing or defective items. |
| Connectors | Broken shells, cracked insulation, and deformed contacts. Dirt in connectors. | Replace defective parts. Clean or wash out dirt. |
| Carrying Handle | Correct operation. | Replace defective parts. |
| Accessories | Missing items or parts of items, bent pins, broken or frayed cables, and damaged connectors. | Replace damaged or missing items, frayed cables, and defective parts. |


Table 6-3
Internal Inspection Checklist

| Item | Inspect For | Repair Action |
|--------------------|---|--|
| Circuit Boards | Loose, broken, or corroded solder connections. Burned circuit boards. Burned, broken, or cracked circuit-run plating. | Clean solder corrosion with an eraser and flush with isopropyl alcohol. Resolder defective connections. Determine cause of burned items and repair. Repair defective circuit runs. |
| Resistors | Burned, cracked, broken, or blistered. | Replace defective resistors. Check for cause of burned component and repair as necessary. |
| Solder Connections | Cold solder or rosin joints. | Resolder joint and clean with isopropyl alcohol. |
| Capacitors | Damaged or leaking cases. Corroded solder on leads or terminals. | Replace defective capacitors. Clean solder connections and flush with isopropyl alcohol. |
| Wiring and Cables | Loose plugs or connectors. Burned, broken, or frayed wiring. | Firmly seat connectors. Repair or replace defective wires or cables. |
| Chassis | Dents, deformations, and damaged hardware. | Straighten, repair, or replace defective hardware. |

INSPECTION. Inspect the internal portions of the instrument for damage and wear, using Table 6-3 as a guide. Deficiencies found should be repaired immediately. The corrective procedure for most visible defects is obvious; however, particular care

must be taken if heat-damaged components are found. Overheating usually indicates other trouble in the instrument; therefore, it is important that the cause of overheating be corrected to prevent recurrence of the damage.

If any electrical component is replaced, conduct a Performance Check for the affected circuit and for other closely related circuits (see Section 4). If repair or replacement work is done on any of the power supplies, conduct a complete Performance Check and, if so indicated, an instrument readjustment (see Sections 4 and 5).



To prevent damage from electrical arcing, ensure that circuit boards and components are dry before applying power to the instrument.

CLEANING. To clean the interior, blow off dust with dry, low-pressure air (approximately 9 psi). Remove any remaining dust with a soft brush or a cloth dampened with a solution of mild detergent and water. A cotton-tipped applicator is useful for cleaning in narrow spaces and on circuit boards.

VOLT/DIV And SEC/DIV SWITCHES. These are maintenance free. DO NOT CLEAN.



Most spray-type circuit coolants contain Freon 12 as a propellant. Because many Freons adversely affect switch contacts, do not use spray-type coolants on the switches or attenuators. Carbon based solvents will damage the board material.

LUBRICATION

Most of the potentiometers used in this instrument are permanently sealed and generally do not require periodic lubrication. All switches, both rotary- and lever-type, are installed with proper lubrication applied where necessary and will rarely require any additional lubrication. A regular periodic lubrication program for the instrument is, therefore, not recommended.

SEMICONDUCTOR CHECKS

Periodic checks of the transistors and other semiconductors in the oscilloscope are not recommended. The best check of semiconductor performance is actual operation in the instrument.

PERIODIC READJUSTMENT

To ensure accurate measurements, check the performance of this instrument every 2000 hours of operation, or if used infrequently, once each year. In addition, replacement of components may necessitate readjustment of the affected circuits.

Complete Performance Check and Adjustment instructions are given in Sections 4 and 5. The Performance Check Procedure can also be helpful in localizing certain troubles in the instrument. In some cases, minor problems may be revealed or corrected by readjustment. If only a partial adjustment is performed, see the interaction chart, Table 5-1, for possible adjustment interaction with other circuits.

TROUBLESHOOTING

INTRODUCTION

Preventive maintenance performed on a regular basis should reveal most potential problems before an instrument malfunctions. However, should troubleshooting be required, the following information is provided to facilitate location of a fault. In addition, the material presented in the Theory of Operation and Diagrams sections of this manual may be helpful while troubleshooting.

TROUBLESHOOTING AIDS

Schematic Diagrams

Complete schematic diagrams are located on tabbed foldout pages in the Diagrams section. Portions of circuitry mounted on each circuit board are enclosed by heavy black lines. The assembly number and name of the circuit are shown near either the top or the bottom edge of the enclosed area.

Functional blocks on schematic diagrams are outlined with a wide grey line. Components within the outlined area perform the function designated by the block label. The Theory of Operation uses these functional block names when describing circuit operation as an aid in cross-referencing between the theory and the schematic diagrams.

Component numbers and electrical values of components in this instrument are shown on the schematic diagrams. Refer to the first page of the Diagrams section for the reference designators and symbols used to identify components. Important voltages and waveform reference numbers (enclosed in hexagonal-shaped boxes) are also shown on each diagram. Waveform illustrations are located adjacent to their respective schematic diagram.

Circuit Board Illustrations

Circuit board illustrations showing the physical location of each component are provided for use in conjunction with each schematic diagram. Each board illustration is found in the Diagrams section on the back of a foldout page, preceding the first schematic diagram(s) to which it relates.

The locations of waveform test points are marked on the circuit board illustrations with hexagonal outlined numbers corresponding to the waveform numbers on both the schematic diagram and the waveform illustrations.

Also provided in the Diagrams section is an illustration of the bottom side of the Main circuit board. This illustration aids in troubleshooting by showing the connection pads for the components mounted on the top side of the circuit board. By using this illustration, circuit tracing and probing for voltages and signals that are inaccessible from the top side of the board may be achieved without dismantling portions of the instrument.

Circuit Board Locations

The placement of each circuit board in the instrument is shown in board locator illustrations. These illustrations are located on foldout pages along with the circuit board illustration.

Circuit Board Interconnections

A circuit board interconnection diagram is provided in the Diagrams section to aid in tracing a signal path or power source between boards. All wire, plug, and jack numbers are shown along with their associated wire or pin numbers.

Power Distribution

A Power Distribution diagram is provided to aid in troubleshooting power-supply problems. This diagram shows the service jumper connections used to apply power to the various circuit boards. Excessive loading on a power supply by a circuit board fault may be isolated by disconnecting the appropriate service jumpers.

Grid Coordinate System

Each schematic diagram and circuit board illustration has a grid border along its left and top edges. A table located adjacent to each diagram lists the grid coordinates of each component shown on that diagram. To aid in physically locating components on the circuit board, this table also lists the grid coordinates of each component on the circuit board illustration.

Near each circuit board illustration is an alphanumeric listing of all components mounted on that board. The second column in each listing identifies the schematic diagram in which each component can be found. These component-locator tables are especially useful when more than one schematic diagram is associated with a particular circuit board.

Component Color Coding

Information regarding color codes and markings of resistors and capacitors is located on the color-coding illustration (Figure 9-1) at the beginning of the Diagrams section.

RESISTOR COLOR CODE. Resistors used in this instrument are carbon-film, composition, or precision metal-film types. They are usually color coded with the EIA color code; however, some metal-film type resistors may have the value printed on the body. The color code is interpreted starting with the stripe nearest to one end of the resistor. Composition resistors have four stripes; these represent two

significant digits, a multiplier, and a tolerance value. Metal-film resistors have five stripes representing three significant digits, a multiplier, and a tolerance value.

CAPACITOR MARKINGS. Capacitance values of common disc capacitors and small electrolytics are marked on the side of the capacitor body. White ceramic capacitors are color coded in picofarads, using a modified EIA code.

Dipped tantalum capacitors are color coded in microfarads. The color dot indicates both the positive lead and the voltage rating. Since these capacitors are easily destroyed by reversed or excessive voltage, be careful to observe the polarity and voltage rating when replacing them.

DIODE COLOR CODE. The cathode end of each glass-encased diode is indicated by either a stripe, a series of stripes or a dot. For most diodes marked with a series of stripes, the color combination of the stripes identifies three digits of the Tektronix Part Number, using the resistor color-code system. The cathode and anode ends of a metal-encased diode may be identified by the diode symbol marked on its body.

Semiconductor Lead Configurations

Figure 9-2 in the Diagrams section shows the lead configurations for semiconductor devices used in the instrument. These lead configurations and case styles are typical of those used at completion of the instrument design. Vendor changes and performance improvement changes may result in changes of case styles or lead configurations. If the device in question does not appear to match the configuration shown in Figure 9-2, examine the associated circuitry or consult the manufacturer's data sheet.

RIBBON-CABLE CONNECTORS

The multipin connectors of the 2225 are designed to make the interboard connections directly to the ribbon cables. Insert the trimmed ribbon-cable wires into the connector slots (see Figure 6-1 A). Pressing down on the release bar (the top of the connector) with your fingertip will make it easier to push the wires into the connector (see Figure 6-1

C). The cable locks firmly into the connector (Figure 6-1 B) when the pressure is removed from the release bar. To disconnect the ribbon cable from the connector, press down on the release bar and lift the cable out of the connector (see Figure 6-1 C and D). The ribbon cable wire should be evenly trimmed to expose 5 mm of wire (about 1/4 inch) for correct insertion into the connectors.

The ribbon cables are either color coded in the standard color codes or have a striped index wire. Align the index wire with the pin 1 indicator when reinserting a cable into its connector.

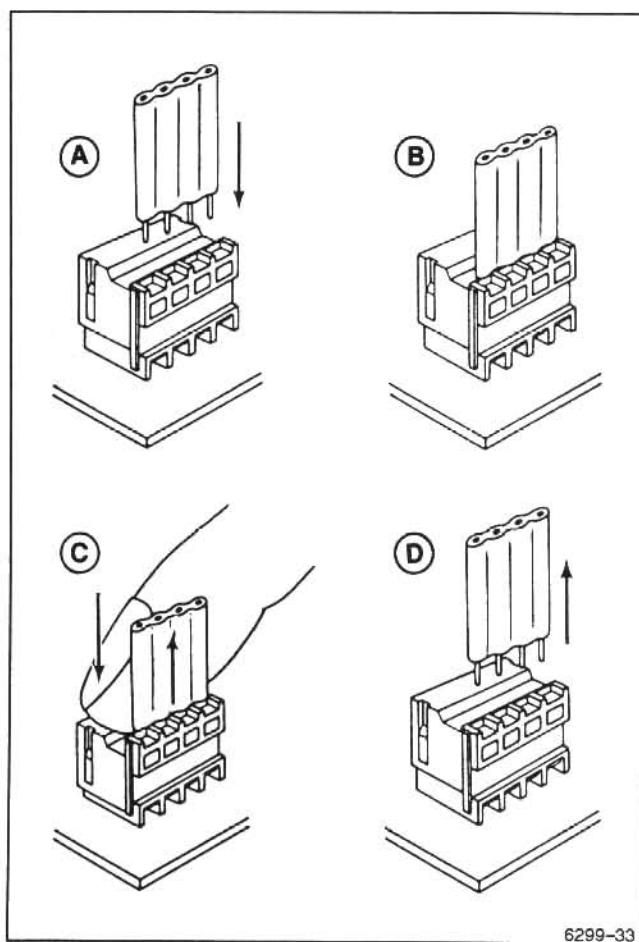


Figure 6-1. Multi-connector operation.

TROUBLESHOOTING EQUIPMENT

The equipment listed in Table 4-1 of this manual, or equivalent equipment, may be useful when troubleshooting this instrument.

TROUBLESHOOTING TECHNIQUES

The following procedure is arranged in an order that enables checking simple trouble possibilities before requiring more extensive troubleshooting. The first four steps ensure proper control settings, connections, operation, and adjustment. If the trouble is not located by these checks, the remaining steps will aid in locating the defective component. When the defective component is located, replace it using the appropriate replacement procedure given under Corrective Maintenance in this section.



Before using any test equipment to make measurements on static-sensitive, current-sensitive, or voltage-sensitive components or assemblies, ensure that any voltage or current supplied by the test equipment does not exceed the limits of the component to be tested.

1. Check Control Settings

Incorrect control settings can give a false indication of instrument malfunction. If there is any question about the correct function or operation of any control, refer to either the Operating Information in Section 2 of this manual or to the Operators Manual.

2. Check Associated Equipment

Before proceeding, ensure that any equipment used with the instrument is operating correctly. Verify that input signals are properly connected and that the interconnecting cables are not defective. Check that the ac-power-source voltage to all equipment is correct.

WARNING

To avoid electrical shock, disconnect the instrument from the ac power source before making a visual inspection of the internal circuitry.

3. Visual Check

Perform a visual inspection. This check may reveal broken connections or wires, damaged components, semiconductors not firmly mounted, damaged circuit boards, or other clues to the cause of an instrument malfunction.

WARNING

Dangerous potentials exist at several points throughout this instrument. If it is operated with the cabinet removed, do not touch exposed connections or components.

4. Check Instrument Performance and Adjustment

Check the performance of either those circuits where trouble appears to exist or the entire instrument. The apparent trouble may be the result of misadjustment. Complete performance check and adjustment instructions are given in Sections 4 and 5 of this manual.

5. Isolate Trouble to a Circuit.

To isolate problems to a particular area, use any symptoms noticed to help locate the trouble. Refer to the troubleshooting charts in the Diagrams section as an aid in locating a faulty circuit.

6. Check Power Supplies.

WARNING

For safety reasons, an isolation transformer must be connected whenever troubleshooting is done in the Preregulator and Inverter Power Supply sections of the instrument.

When trouble symptoms appear in more than one circuit, first check the power supplies; then check the affected circuits by taking voltage and waveform readings. Check first for the correct output voltage of each individual supply. These voltages are measured between the power supply test points and ground (see the associated circuit board illustration and Table 6-5).

Voltage levels may be measured either with a DMM or with an oscilloscope. Voltage ripple amplitudes must be measured using an oscilloscope. Before checking power-supply circuitry, set the INTENSITY control to normal brightness, the SEC/DIV switch to 0.1 ms, the Trigger MODE to P-P AUTO, and the Vertical MODE switch to CH 1.

When measuring ripple, use a 1X probe. The ripple values listed are based on a system limited in bandwidth to 30 kHz. Using a system with wider bandwidth will result in higher readings.

If the power-supply voltages and ripple are within the ranges listed in Table 6-4, the supply can be assumed to be working correctly. If they are outside the range, the supply may be either misadjusted or operating incorrectly. Use the Power Supply and CRT Display subsection in the Adjustment procedure to adjust the -8.6-V supply.

A defective component elsewhere in the instrument can create the appearance of a power-supply problem and may also affect the operation of other circuits.

7. Check Circuit Board Interconnections.

After the trouble has been isolated to a particular circuit, again check for loose or broken connections, improperly seated semiconductors, and heat-damaged components.

8. Check Voltages and Waveforms.

Often the defective component can be located by checking circuit voltages or waveforms. Typical voltages are listed on the schematic diagrams. Waveforms indicated on the schematic diagrams by hexagonal-outlined numbers are shown adjacent to the diagrams. Waveform test points are shown on the circuit board illustrations.

Table 6-4
Power Supply Voltage and Ripple Limits

| Power Supply | Test Point | Reading (Volts) | P-P Ripple (mV) |
|--------------|------------|------------------|-----------------|
| -8.6 V | W989 | -8.557 to -8.643 | 3 mV |
| +5.1 V | W991 | +4.95 to 5.25 | 4 mV |
| +8.6 V | W987 | +8.526 to 8.874 | 3 mV |
| +38 V | W972 | +37.24 to 39.14 | 10 mV |
| +99 V | W984 | +97.02 to 101.97 | 100 mV |

NOTE

Voltages and waveforms indicated on the schematic diagrams are not absolute and may vary slightly between instruments. To establish operating conditions similar to those used to obtain these readings, see the Voltage and Waveform Setup Conditions preceding the waveform illustrations in the Diagrams section. Note the recommended test equipment, front-panel control settings, voltage and waveform conditions, and cable-connection instructions. Any special control settings required to obtain a given waveform are noted under the waveform illustration. Changes to the control settings from the initial setup, other than those noted, are not required.

9. Check Individual Components

WARNING

To avoid electric shock, always disconnect the instrument from the ac power source before removing or replacing components.

The following procedures describe methods of checking individual components. Two-lead components that are soldered in place are most accurately checked by first disconnecting one end from the circuit board. This isolates the measurement from the effects of the surrounding circuitry. See Figure 9-1 for component value identification and Figure 9-2 for semiconductor lead configurations.

CAUTION

When checking semiconductors, observe the static-sensitivity precautions located at the beginning of this section.

TRANSISTORS. A good check of a transistor is actual performance under operating conditions. A transistor can most effectively be checked by substituting a known-good component. However, be sure that circuit conditions are not such that a replacement transistor might also be damaged. If substitute transistors are not available, use a dynamic-type transistor checker for testing. Static-type transistor checkers are not recommended, since they do not check operation under simulated operating conditions.

When troubleshooting transistors in the circuit with a voltmeter, measure both the emitter-to-base and emitter-to-collector voltages to determine whether they are consistent with normal circuit voltages. Voltages across a transistor may vary with the type of device and its circuit function.

Some of these voltages are predictable. The emitter-to-base voltage for a conducting silicon transistor will normally range from 0.6 V to 0.8 V. The emitter-to-collector voltage for a saturated transistor is about 0.2 V. Because these values are small, the best way to check them is by connecting a sensitive voltmeter across the junction rather than comparing two voltages taken with respect to ground. If the former method is used, both leads of the voltmeter must be isolated from ground.

If voltage values measured are less than those just given, either the device is shorted or no current is flowing in the external circuit. If values exceed the emitter-to-base values given, either the junction is reverse biased or the device is defective. Voltages exceeding those given for typical emitter-to-collector values could indicate either a nonsaturated device operating normally or a defective (open-circuited) transistor. If the device is conducting, voltage will be developed across the resistors in series with it; if open, no voltage will be developed across the resistors unless current is being supplied by a parallel path.

CAUTION

When checking emitter-to-base junctions, do not use an ohmmeter range that has a high internal current. High current may damage the transistor. Reverse biasing the emitter-to-base junction with a high current may degrade the current-transfer ratio (Beta) of the transistor.

A transistor emitter-to-base junction also can be checked for an open or shorted condition by measuring the resistance between terminals with an ohmmeter set to a range having a low internal source current, such as the R X 1-k Ω range. The junction resistance should be very high in one direction and much lower when the meter leads are reversed.

When troubleshooting a field-effect transistor (FET), the voltage across its elements can be checked in the same manner as previously described for other transistors. However, remember that in the normal depletion mode of operation, the gate-to-source junction is reverse biased; in the enhanced mode, the junction is forward biased.

INTEGRATED CIRCUITS. An integrated circuit (IC) can be checked with a voltmeter, test oscilloscope, or by direct substitution. A good understanding of circuit operation is essential when troubleshooting a circuit having IC components. Use care when checking voltages and waveforms around the IC so that adjacent leads are not shorted together. An IC test clip provides a convenient means of clipping a test probe to an IC.

CAUTION

When checking a diode, do not use an ohmmeter scale that has a high internal current. High current may damage a diode. Checks on diodes can be performed in much the same manner as those on transistor emitter-to-base junctions. Do not check tunnel diodes or back diodes with an ohmmeter; use a dynamic tester, such as the TEKTRONIX 576 Curve Tracer.

DIODES. A diode can be checked for either an open or a shorted condition by measuring the resistance between terminals with an ohmmeter set to a range having a low internal source current, such as the R X

1-k Ω range. The diode resistance should be very high in one direction and much lower when the meter leads are reversed.

Silicon diodes should have 0.6 V to 0.8 V across their junctions when conducting; Schottky diodes about 0.2 V to 0.4 V. Higher readings indicate that they are either reverse biased or defective, depending on polarity.

RESISTORS. Check resistors with an ohmmeter. Refer to the Replaceable Electrical Parts list for the tolerances of resistors used in this instrument. A resistor normally does not require replacement unless its measured value varies widely from its specified value and tolerance.

INDUCTORS. Check for open inductors by checking continuity with an ohmmeter. Shorted or partially shorted inductors can usually be found by checking the waveform response when high-frequency signals are passed through the circuit.

CAPACITORS. A leaky or shorted capacitor can best be detected by checking resistance with an ohmmeter set to one of the highest ranges. Do not

exceed the voltage rating of the capacitor. The resistance reading should be high after the capacitor is charged to the output voltage of the ohmmeter. An open capacitor can be detected with a capacitance meter or by checking whether the capacitor passes ac signals.

10. Repair and Adjust the Circuit

If any defective parts are located, follow the replacement procedures given under Corrective Maintenance in this section. After any electrical component has been replaced, the performance of that circuit and any other closely related circuit should be checked. Since the power supplies affect all circuits, performance of the entire instrument should be checked if work has been done on the power supplies or if the power transformer has been replaced. Readjustment of the affected circuitry may be necessary. Refer to the Performance Check and Adjustment Procedure, Sections 4 and 5 of this manual and to Table 5-1, Adjustments affected by repairs.

CORRECTIVE MAINTENANCE

INTRODUCTION

Corrective maintenance consists of component replacement and instrument repair. This part of the manual describes special techniques and procedures required to replace components in this instrument. If it is necessary to ship your instrument to a Tektronix Service Center for repair or service, refer to the Repackaging information in Section 2 of this manual.

MAINTENANCE PRECAUTIONS

To reduce the possibility of personal injury or instrument damage, observe the following precautions.

1. Disconnect the instrument from the ac-power source before removing or installing components.

2. Verify that the line-rectifier filter capacitor (C900) is discharged prior to performing any servicing.
3. When soldering on circuit boards or small insulated wires, use only a 15-watt, pencil-type soldering iron.

OBTAINING REPLACEMENT PARTS

Most electrical and mechanical parts can be obtained through your local Tektronix Field Office or representative. However, many of the standard electronic components can usually be obtained from a local commercial source. Before purchasing or ordering a part from a source other than Tektronix, Inc., please check the Replaceable Electrical Parts list for the proper value, rating, tolerance, and description.

NOTE

Physical size and shape of a component may affect instrument performance, particularly at high frequencies. Always use direct-replacement components, unless it is known that a substitute will not degrade instrument performance.

Special Parts

In addition to the standard electronic components, some special parts are used in the instrument. These components are manufactured or selected by Tektronix, Inc., to meet specific performance requirements, or are manufactured for Tektronix, Inc., in accordance with our specifications. The various manufacturers can be identified by referring to the Cross Index—Manufacturer's Code number to Manufacturer at the beginning of the Replaceable Electrical Parts list. Most of the mechanical parts used in this instrument were manufactured by Tektronix, Inc. Order all special parts directly from your local Tektronix Field Office or representative.

Ordering Parts

When ordering replacement parts from Tektronix, Inc., be sure to include all of the following information:

1. Instrument type (include all modification and option numbers).
2. Instrument serial number.
3. A description of the part (if electrical, include its full circuit component number).
4. Tektronix part number.

Selectable Components

Several components in the instrument are selectable to obtain optimum circuit operation. Value selection of these components is done during the initial factory adjustment procedure. Usually, further selection is not necessary for subsequent adjustments unless a component has been changed

that affects circuitry for which a selected component has been specifically chosen.

MAINTENANCE AIDS

The maintenance aids listed in Table 6-5 include items required for performing most of the maintenance procedures in this instrument. Equivalent products may be substituted for those given, provided their characteristics are similar.

INTERCONNECTIONS

Interconnections in this instrument are made with wire-trap connectors soldered onto the circuit boards. If any individual wire in the cable is faulty, the entire cable assembly should be replaced. To remove a cable from a wire-trap connector, press down on top of the connector and lift out cable. Reinstallation is the reverse of this procedure. To provide correct orientation of a cable, a number "1" is stamped on the circuit board. The cable is either color-coded, so the index is the brown wire, or the index wire is striped a different color than the rest of the cable. Be sure the index wire is aligned with the "1" when a cable is reinserted into the connector (see Figure 6-1, shown previously).

TRANSISTORS AND INTEGRATED CIRCUITS

Transistors and integrated circuits should not be replaced unless they are actually defective. If removed from their sockets or unsoldered from the circuit board during routine maintenance, return them to their original board locations. Unnecessary replacement or transposing of semiconductor devices may affect the adjustment of the instrument. When a semiconductor is replaced, check the performance of any circuit that may be affected.

Any replacement component should be of the original type or a direct replacement. Bend transistor leads to fit their circuit board holes, and cut the leads to the same length as the original component. See Figure 9-2 in the Diagrams section for lead-configuration illustrations.

Table 6-5
Maintenance Aids

| Description | Specification | Usage | Example |
|-----------------------------|------------------------------------|---|---|
| 1. Soldering Iron | 15 to 25 W. | General soldering and unsoldering. | Antex Precision Model C. |
| 2. Torx Screwdriver | Torx tips #T9 and #T15. | Assembly and disassembly. | Tektronix p/n #T9 003-0965-00 #T15 003-0966-00 |
| 3. Nutdrivers | 1/4 inch, 7/16 inch, and 1/2 inch. | Assembly and disassembly. | Xcelite #8, #14 and #16. |
| 4. Open-end Wrench | 5/16 inch and 1/2 inch. | Channel Input, EXT BNC connectors and Transformer. | |
| 5. Hex Wrenches | 1/16 inch. | Assembly and disassembly. | Allen wrenches. |
| 6. Long-nose Pliers | | Component removal and replacement. | |
| 7. Diagonal Cutters | | Component removal and replacement. | |
| 8. Vacuum Solder Extractor. | No Static Charge Retention. | Unsoldering components. | Pace Model PC-10. |
| 9. 1X Probe | | Power supply ripple check. | Tektronix P6101 Probe (X1), p/n 010-6101-03. |
| 10. Lubricant | No-Noise. [®] | Switch lubrication. | Tektronix p/n 006-0442-02. |
| 11. Isolation Transformer | | Isolate the instrument from the ac-power-source outlet. | Tektronix Part Number 006-5953-00 |

Power-supply transistor Q913 is insulated from the chassis by a heat-transferring pad and insulation bushing. Reinstall the pad and bushing when replacing this transistor.

NOTE

After replacing a power transistor, check that the collector is not shorted to the chassis before applying power to the instrument.

To remove socketed, dual-in-line-packaged (DIP) integrated circuits, pull slowly and evenly on both ends of the device. Avoid disengaging one end of the integrated circuit from the socket before the other, since this may damage the pins.

To remove a soldered DIP IC when it is going to be replaced, clip all the leads of the device and remove

the leads from the circuit board one at a time. If the device must be removed intact for possible reinstallation, do not heat adjacent conductors consecutively. Apply heat to pins at alternate sides and ends of the IC as solder is removed. Allow a moment for the circuit board to cool before proceeding to the next pin.

SOLDERING TECHNIQUES

The reliability and accuracy of this instrument can be maintained only if proper soldering techniques are used to remove or replace parts. General soldering techniques, which apply to maintenance of any precision electronic equipment, should be used when working on this instrument.

WARNING

To avoid an electric-shock hazard, observe the following precautions before attempting any soldering: turn the instrument off, disconnect it from the ac power source, and wait at least three minutes for the line-rectifier filter capacitors to discharge.

Use rosin-core wire solder containing 63% tin and 37% lead. Contact your local Tektronix Field Office or representative to obtain the names of approved solder types.

When soldering on circuit boards or small insulated wires, use only a 15-watt, pencil-type soldering iron. A higher wattage soldering iron may cause etched-circuit conductors to separate from the board base material and melt the insulation on small wires. Always keep the soldering-iron tip properly tinned to ensure best heat transfer from the iron tip to the solder joint. Apply only enough solder to make a firm joint. After soldering, clean the area around the solder connection with an approved flux-removing solvent (such as isopropyl alcohol) and allow it to air dry.

CAUTION

Attempts to unsolder, remove, and resolder leads from the component side of a circuit board may cause damage to the reverse side of the circuit board.

The following techniques should be used to replace a component on a circuit board:

1. Touch the vacuum desoldering tool to the lead at the solder connection. Never place the iron directly on the board; doing so may damage the board.

NOTE

Some components are difficult to remove from the circuit board due to a bend placed in the component leads during machine insertion. To make removal of machine-inserted components easier, straighten the component leads on the reverse side of the circuit board.

2. When removing a multipin component, especially an IC, do not heat adjacent pins consecutively. Apply heat to the pins at alternate sides and ends of the IC as solder is removed. Allow a moment for the circuit board to cool before proceeding to the next pin.

CAUTION

Excessive heat can cause the etched-circuit conductors to separate from the circuit board. Never allow the solder extractor tip to remain at one place on the board for more than three seconds. Damage caused by poor soldering techniques can void the instrument warranty.

3. Bend the leads of the replacement component to fit the holes in the circuit board. If the component is replaced while the board is installed in the instrument, cut the leads so they protrude only a small amount through the reverse side of the circuit board. Excess lead length may cause shorting to other conductive parts.
4. Insert the leads into the holes of the board so that the replacement component is positioned the same as the original component. Most components should be firmly seated against the circuit board.
5. Touch the soldering iron to the connection and apply enough solder to make a firm solder joint. Do not move the component while the solder hardens.
6. Cut off any excess lead protruding through the circuit board (if not clipped to the correct length in step 3).
7. Clean the area around the solder connection with an approved flux-removing solvent. Be careful not to remove any of the printed information from the circuit board.

REMOVAL AND REPLACEMENT INSTRUCTIONS

The exploded view drawings in the Replaceable Mechanical Parts list (Section 10) may be helpful during the removal and reinstallation of individual subassemblies or components. Circuit board and component locations are shown in the Diagrams section.

Cabinet

WARNING

To avoid electric shock, disconnect the instrument from the ac-power-input source before removing or replacing any component or assembly.

To remove the instrument cabinet, perform the following steps:

1. Disconnect the power cord from the instrument. For instruments with a power-cord securing clamp, remove the Phillips-head screw holding the power-cord securing clamp before disconnecting the power cord.
2. Remove two screws from the rear panel (located on each side) and remove it from the instrument.
3. Remove four screws, one from the left-rear side and three from the right-rear side of the cabinet.
4. Pull the front panel and attached chassis forward and out of the cabinet.
5. To reinstall the cabinet, perform the reverse of the preceding steps. Ensure that the cabinet is flush with the rear of the chassis and that the cabinet and rear-panel holes are aligned with the screw holes in the chassis frame.
6. Reconnect the power cord.

Cathode-Ray Tube

WARNING

Use care when handling a crt. Breakage of the crt may cause high-velocity scattering of glass fragments (implosion). Protective clothing and safety glasses should be worn. Avoid striking the crt on any object which may cause it to crack or implode. When storing a crt, either place it in a protective carton or set it face down on a smooth surface in a protected location with a soft mat under the faceplate.

The crt can be removed and reinstalled as follows:

1. Unsolder the Trace Rotation wires (J987) from the Front-Panel circuit board (note the connection locations and wire colors for reinstallation reference).

WARNING

The crt anode lead and the High-Voltage Multiplier output lead retain a high-voltage charge after the instrument is turned off. To avoid electrical shock, disconnect the crt anode lead from the High-Voltage Multiplier and ground the lead to the main instrument chassis.

2. Unplug the crt anode lead connector from the High-Voltage Multiplier located on the inner chassis. Discharge the anode lead to chassis ground.
3. Remove two front-panel screws that retain the plastic crt frame and light filter to the front panel. Remove the crt frame and light filter from the instrument.
4. Remove the grounding spring from between the top of the crt funnel and front chassis.
5. With the rear of the instrument facing you, place the fingers of both hands over the front edge of the front subpanel. Then, using both thumbs, press forward gently on the crt funnel near the front of the crt. When the crt base pins disengage from the socket, remove the crt and the crt shield through the instrument front panel. Place the crt in a safe place until it is reinstalled. If the plastic crt corner pads fall out, save them for reinstallation.

NOTE

When installing the crt into the instrument, re-install any loose plastic crt corner pads that are out of place. Ensure all crt pins are straight and that the indexing keys on the crt base, socket, and shield are aligned. Ensure that the ground clip makes contact only with the outside of the crt shield.

To reinstall the crt, perform the reverse of the preceding steps.

Power Transformer

The Power Transformer (T901) can be removed and reinstalled as follows:

1. Disconnect connector J902 from the Line Filter board. (The J902 connector is not polarized so can be fitted either way). Note the orientation of the connector for proper reinstallation.
2. Note the physical orientation of the Power Transformer. Undo the two locking nuts from the center of the Power Transformer.
3. Supporting the Transformer, withdraw the center bolt (complete with the rear stiffening plate).

To reinstall the Power Transformer, perform the reverse of the preceding steps.

Mains Input Circuit Board

The Mains Input circuit board can be removed and reinstalled as follows:

1. Disconnect connector J902 from the Mains Input board. (The J902 connector is not polarized so can be fitted either way. Note the orientation for correct reinstallation.)
2. Unsolder W903 from Mains Input board.
3. Disengage the Power switch extension shaft from the Mains Power switch (S901).
4. Remove the two screws and nuts that secure the AC Power inlet connector to the rear chassis.
5. Remove the grounding screw and nut that secures the Mains Input board to the inner chassis.

WARNING

The screw and nut which secure the Mains Input circuit board to the chassis provide safety grounding and must be properly replaced when reinstalling the Mains Input circuit board

6. Pull the Mains Input board towards the inner chassis and up out of the instrument.

To reinstall the Mains Input board, perform the reverse of the preceding steps.

Attenuator/Timebase Circuit Board

The Attenuator/Timebase circuit board can be removed and reinstalled as follows:

1. Turn the instrument over (Main circuit board up) and unsolder the two resistors from the CH 1 and CH 2 attenuator switches. Also unsolder the grounding straps connected between the Front Panel and the Attenuator/Timebase boards, noting their respective positions. Turn the instrument over again and continue with the Attenuator/Timebase circuit board procedure.
2. Use a 1/16-inch hex wrench to loosen the set screws on both the CH 1 and CH 2 VOLTS/DIV Variable knobs, and SEC/DIV Variable knob. Remove the knobs. Withdraw the CH 1 and CH 2 VOLTS/DIV knobs and SEC/DIV knob.
3. Remove the two rear screws that secure the Attenuator/Timebase board to the support pillars.
4. Remove the screw that secures the Front Panel brace to the Attenuator/Timebase board. Turn the instrument over (Main circuit board up) and remove the screw that secures the Front Panel brace pillar to the Attenuator/Timebase board.
5. Remove the Focus knob shaft by disengaging it from the Focus pot and pulling the shaft out through the front panel.
6. Disconnect the following cables from the Attenuator/Timebase circuit board, noting their locations for reinstallation reference:
 - a. J90, a six-wire cable located at the rear edge of the board.
 - b. J755, a four-wire cable located at the rear right-hand corner of the board.
 - c. J30, a four-wire cable located to the left of the CH 1 attenuator switch.
 - d. J80, a four-wire cable located between the CH 1 and CH 2 attenuator switches.
 - e. J7, a six-wire cable located between the CH 2 attenuator switch and the SEC/DIV switch.
 - f. J701, a six-wire cable located at the front right-hand corner of the board.

7. Pull the Attenuator/Timebase circuit board straight back from the front of the instrument until the attenuator switches are clear of the Front-Panel circuit board. Then lift out the entire assembly through the top of the instrument.

To reinstall the Attenuator/Timebase circuit board, perform the reverse of the preceding steps.

The Bottom Shield of the Attenuator/Timebase circuit board assembly can be removed by removing the two screws and nuts located at the front edge of the board.

Front-Panel Circuit Board

The Front-Panel circuit board can be removed and reinstalled as follows:

1. Perform the Attenuator/Timebase Circuit Board Assembly removal procedure.
2. Remove the knobs from the following control shafts by pulling them straight out from the front panel:
 - a. INTENSITY.
 - b. Channel 1 and Channel 2 POSITION.
 - c. TRACE SEP.
 - d. COARSE and FINE Horizontal POSITION controls.
 - e. LEVEL.
 - f. HOLDOFF.
3. Unsolder both the resistor (R382) to the EXT INPUT center connector and the wire strap to the EXT INPUT OR Z ground lug.
4. Remove the FOCUS control shaft by pulling it through the front panel.
5. Unsolder the resistors and wire straps to the CH 1 OR X and CH 2 OR Y input connectors.
6. Unsolder the Trace Rotation wires (J987) from the Front-Panel circuit board (note the connection locations and wire colors for reinstallation reference).

7. Remove the Power Switch extension shaft by disengaging from power switch and pulling it out through the Front Panel.
8. Disconnect the following cables from the Front Panel board (these cables also connect to the front edge of the Main circuit board): J1, J2, J3, J4, J5, and J6.
9. Disconnect J7 from the Front Panel board (cable also connects to the Attenuator).
10. Remove the five screws that secure the Front Panel board to the front chassis, noting their respective positions.
11. Withdraw the Front Panel circuit board from the front chassis taking care not to lose the slider switch covers.

To reinstall the Front-Panel circuit board, perform the reverse of the preceding steps.

Main Circuit Board

All components on the Main circuit board are accessible either directly or by removing either the crt, Power Transformer or the Attenuator/Timebase circuit board assembly. Removal of the Main circuit board is required only when it is necessary to replace the circuit board with a new one.

The Main circuit board and inner chassis can be removed and reinstalled together as follows:

WARNING

The crt anode lead and the output terminal to the High-Voltage Multiplier will retain a high-voltage charge after the instrument is turned off. To avoid electrical shock, ground the crt side of the anode lead to the main instrument chassis.

1. Remove the FOCUS control shaft by pulling it out through the front panel.
2. Unsolder W893 from the Main board. The cable is connected to the Focus pot located on the rear of the inner chassis.
3. Unsolder W903 from the rear of the Mains Input board.

4. Disengage the following cables from their respective wire-trap connectors located on the Attenuator/Timebase board:

- a. J755, four-wire cable located at rear right corner of board.
- b. J90, six-wire cable located at center rear edge of board.
- c. J30, four-wire cable located at the left hand side of the CH 1 attenuator switch.
- d. J80, four-wire cable located between the CH 1 and CH 2 attenuator switches.
- e. J701, six-wire cable located at front right corner of board.

5. Turn instrument upside down (bottom of Main board facing up) with the rear of the instrument facing you.
6. Remove the two screws that secure the heatsink for the vertical output transistors (Q256 and Q257) to the rear chassis.
7. Remove the screw that secures the heatsink for the power supply transistors (Q950, Q980, Q923 and Q913) to the rear chassis.
8. With the instrument still upside down, rotate it so that the front is facing you. Unsolder the wire connected to the Probe Adjust terminal from the Main board.
9. Disconnect the following cables from their respective wire-trap connectors located along

the front edge of the Main board: J1, J2, J3, J4, J5, and J6.

10. Remove the three screws that secure the Main board to the pillars of the Attenuator/Timebase assembly.
11. Remove the four screws that secure the inner chassis.
12. Remove the grounding nut and screw that secure the inner chassis to the Mains Input circuit board.

WARNING

The screw and nut which secure the Mains Input circuit board to the chassis provide safety grounding and must be properly replaced when reinstalling the Mains Input circuit board

13. Remove the two screws and nuts that secure the Main board to the left hand chassis member.
14. Remove the three screws and nuts that secure the Main board to the right hand chassis member.
15. Lift out Main board and inner chassis.

To reinstall the Main circuit board, perform the reverse of the preceding steps. When installing the Main circuit board, ensure that the circuit board is in the guides at the rear of the chassis.

OPTIONS AND ACCESSORIES

INTRODUCTION

This section lists the standard accessories (including Tektronix part numbers) that are shipped with each instrument. It also briefly describes the options that can be included with the original instrument order. If you wish to obtain any of these options after receiving your instrument, use the accessories lists contained in Tables 7-1 and 7-2. For additional information about instrument options and other optional accessories, consult the current Tektronix Product Catalog or contact your local Tektronix Field Office or distributor.

STANDARD ACCESSORIES

The following standard accessories are provided with each instrument:

| Qty | Description | Part Number |
|-----|---------------------------------------|--------------------------------------|
| 1 | Power Cord and Fuse | Per option ordered; see Table 7-1 |
| 1 | Operator's Manual | 070-6298-01 |
| 1 | Power-cord Clamp | 343-0003-00 |
| 1 | Washer | 210-0803-00 |
| 1 | Self-Tapping Screw | 213-0882-00 |
| 2 | Probes, 10X, 2 m, with accessories | P6103 |

OPTIONS

Option 02

This option is intended for users who need added front-panel protection and accessories-carrying ease demanded by frequent travel to remote service

sites. It includes a protective front-panel cover and an accessories pouch that attaches to the top of the instrument.

Option 1C

An oscilloscope camera is useful for capturing single events and documenting measurement results. And it helps communicate results with clarity and credibility. Option 1C provides the Tektronix C-5C Option 04 Low-cost Camera for use with your oscilloscope.

Option 1K

When this option is specified, a K212 Portable Instrument Cart is included in the shipment. The cart provides a stable yet movable platform that is well suited for on-site instrument mobility in a variety of work areas.

Option 1R

When the oscilloscope is ordered with Option 1R, it is shipped in a configuration that permits easy installation into virtually any 19-inch-wide, electronic-equipment rack. All hardware is supplied for mounting the instrument into the rack.

Complete rackmounting instructions are provided in a separate document. These instructions also contain the procedures for converting a standard instrument into the Option 1R configuration by using the separately ordered rackmounting conversion kit.

Option 23

Two P6119 1X-10X Selectable-attenuation Probes are provided in place of the standard P6103 10X Probes.

POWER CORDS

Instruments are shipped with the detachable power-cord and fuse configuration ordered by the customer.

Table 7-1 identifies the Tektronix part numbers for international power cords and associated fuses. Additional information about power-cord options is contained in Section 2, Preparation for Use.

Table 7-1
Power Cords and Fuses

| Description | Part Number |
|---|--------------------|
| Standard (United States) | |
| Power Cord, 2.5 m | 161-0104-00 |
| Fuse, 1.0 A, 250 V, 3AG, 1/4" X 1/4", Slow | 159-0019-00 |
| Option A1 (Europe) | |
| Power Cord, 2.5 m | 161-0104-06 |
| Fuse, 0.5 A, 250 V, 3AG, 1/4" X 1/4", Slow | 159-0032-00 |
| Option A2 (United Kingdom) | |
| Power Cord, 2.5 m | 161-0104-07 |
| Fuse, 0.5 A, 250 V, 3AG, 1/4" X 1/4", Slow | 159-0032-00 |
| Option A3 (Australia) | |
| Power Cord, 2.5 m | 161-0104-05 |
| Fuse, 0.5 A, 250 V, 3AG, 1/4" X 1/4", Slow | 159-0032-00 |
| Option A4 (North America) | |
| Power Cord, 2.5 m | 161-0104-08 |
| Fuse, 0.5 A, 250 V, 3AG, 1/4" X 1/4", Slow | 159-0032-00 |
| Option A5 (Switzerland) | |
| Power Cord, 2.5 m | 161-0167-00 |
| Fuse, 0.5 A, 250 V, 3AG, 1/4" X 1/4", Slow | 159-0032-00 |

Table 7-2
Optional Accessories

| Description | Part Number |
|--|--|
| Front Panel Protective Cover | 200-3397-00 |
| Accessory Pouch | 016-0677-02 |
| Front Panel Protective Cover and Accessory Pouch | 020-1514-00 |
| Hand Carrying Case | 016-0792-01 |
| CRT Light Filter, Clear | 337-2775-01 |
| Rack Mount Conversion Kit | 016-0819-00 |
| Viewing Hoods | |
| Collapsible | 016-0592-00 |
| Polarised | 016-0180-00 |
| Binocular | 016-0566-00 |
| Alternative Power Cords | |
| European | 020-0859-00 |
| United Kingdom | 020-0860-00 |
| Australian | 020-0861-00 |
| North American | 020-0862-00 |
| Swiss | 020-0863-00 |
| Attenuator Voltage Probes | |
| 10X Standard | P6103 |
| 10X Subminiature | P6130 |
| 10X Environmental | P6008 |
| 1X-10X Selectable | P6119 |
| 100X High Voltage | P6009 |
| 1000X High Voltage | P6015 |
| Current Probes | P6021, P6022, A6302/AM503, A6303/AM503 |
| Current-Probe Amplifier | 134 |
| Active Probe, 10X FET | P6202A |
| Active-probe Power Supply | 1101A |
| Ground Isolation Monitor | A6901 |
| Isolator (for multiple, independently referenced, differential measurements) | A6902B |
| DC Inverter | 1107 |
| DC Inverter Mounting Kit | 016-0785-00 |
| Portable Power Supply | 1105 |
| Battery Pack | 1106 |
| Oscilloscope Cameras | |
| Low-cost | C-5C Option 04 |
| Motorized | C-7 Option 03 and Option 30 |
| Portable Instrument Cart | K212 |
| 2225 Service Manual | 070-6299-00 |

REPLACEABLE ELECTRICAL PARTS

PARTS ORDERING INFORMATION

Replacement parts are available from or through your local Tektronix, Inc. Field Office or representative.

Changes to Tektronix instruments are sometimes made to accommodate improved components as they become available, and to give you the benefit of the latest circuit improvements developed in our engineering department. It is therefore important, when ordering parts, to include the following information in your order: Part number, instrument type or number, serial number, and modification number if applicable.

If a part you have ordered has been replaced with a new or improved part, your local Tektronix, Inc. Field Office or representative will contact you concerning any change in part number.

Change information, if any, is located at the rear of this manual.

LIST OF ASSEMBLIES

A list of assemblies can be found at the beginning of the Electrical Parts List. The assemblies are listed in numerical order. When the complete component number of a part is known, this list will identify the assembly in which the part is located.

CROSS INDEX-MFR. CODE NUMBER TO MANUFACTURER



The Mfr. Code Number to Manufacturer index for the Electrical Parts List is located immediately after this page. The Cross Index provides codes, names and addresses of manufacturers of components listed in the Electrical Parts List.

ABBREVIATIONS

Abbreviations conform to American National Standard Y1.1.

COMPONENT NUMBER (column one of the Electrical Parts List)

A numbering method has been used to identify assemblies, subassemblies and parts. Examples of this numbering method and typical expansions are illustrated by the following:

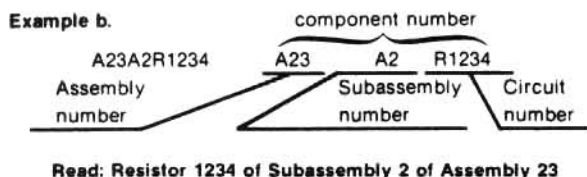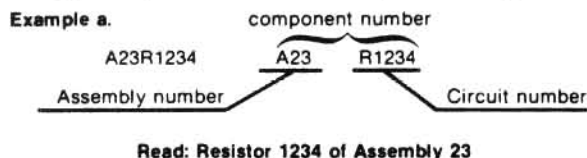

Only the circuit number will appear on the diagrams and circuit board illustrations. Each diagram and circuit board illustration is clearly marked with the assembly number. Assembly numbers are also marked on the mechanical exploded views located in the Mechanical Parts List. The component number is obtained by adding the assembly number prefix to the circuit number.

The Electrical Parts List is divided and arranged by assemblies in numerical sequence (e.g., assembly A1 with its subassemblies and parts, precedes assembly A2 with its subassemblies and parts).

Chassis-mounted parts have no assembly number prefix and are located at the end of the Electrical Parts List.

TEKTRONIX PART NO. (column two of the Electrical Parts List)

Indicates part number to be used when ordering replacement part from Tektronix.

SERIAL/MODEL NO. (columns three and four of the Electrical Parts List)

Column three (3) indicates the serial number at which the part was first used. Column four (4) indicates the serial number at which the part was removed. No serial number entered indicates part is good for all serial numbers.

NAME & DESCRIPTION (column five of the Electrical Parts List)

In the Parts List, an Item Name is separated from the description by a colon (:). Because of space limitations, an Item Name may sometimes appear as incomplete. For further Item Name identification, the U.S. Federal Cataloging Handbook H6-1 can be utilized where possible.

MFR. CODE (column six of the Electrical Parts List)

Indicates the code number of the actual manufacturer of the part. (Code to name and address cross reference can be found immediately after this page.)

MFR. PART NUMBER (column seven of the Electrical Parts List)

Indicates actual manufacturers part number.

CROSS INDEX - MFR. CODE NUMBER TO MANUFACTURER

| Mfr. Code | Manufacturer | Address | City, State, Zip Code |
|--------------|--|---|--------------------------------|
| 00853 | SANGAMO WESTON INC COMPONENTS DIV | SANGAMO RD PO BOX 128 | PICKENS SC 29671-9716 |
| 01121 | ALLEN-BRADLEY CO | 1201 S 2ND ST | MILWAUKEE WI 53204-2410 |
| 02114 | AMPEREX ELECTRONIC CORP FERROXCUBE DIV | 5083 KINGS HWY | SAUGERTIES NY 12477 |
| 02735 | RCA CORP SOLID STATE DIVISION | ROUTE 202 | SOMERVILLE NJ 08876 |
| 03508 | GENERAL ELECTRIC CO SEMI-CONDUCTOR PRODUCTS DEPT | W GENESEE ST | AUBURN NY 13021 |
| 04222 | AVX CERAMICS DIV OF AVX CORP | 19TH AVE SOUTH P O BOX 867 | MYRTLE BEACH SC 29577 |
| 04426 | ITW SWITCHES DIV OF ILLINOIS TOOL WORKS INC | 6615 W IRVING PARK RD | CHICAGO IL 60634-2410 |
| 04713 | MOTOROLA INC SEMICONDUCTOR PRODUCTS SECTOR | 5005 E MCDOWELL RD | PHOENIX AZ 85008-4229 |
| 05397 | UNION CARBIDE CORP MATERIALS SYSTEMS DIV | 11901 MADISON AVE | CLEVELAND OH 44101 |
| 05828 | GENERAL INSTRUMENT CORP GOVERNMENT SYSTEMS DIV | 600 W JOHN ST | HICKSVILLE NY 11802 |
| 07263 | FAIRCHILD SEMICONDUCTOR CORP NORTH AMERICAN SALES SUB OF SCHLUMBERGER LTD MS 118 | 10400 RIDGEVIEW CT | CUPERTINO CA 95014 |
| 07716 | TRW INC TRW IRC FIXED RESISTORS/BURLINGTON | 2850 MT PLEASANT AVE | BURLINGTON IA 52601 |
| 12954 | MICROSEMI CORP - SCOTTSDALE | 8700 E THOMAS RD P O BOX 1390 5 FORBES RD | SCOTTSDALE AZ 85252 |
| 12969 | UNITRODE CORP | | LEXINGTON MA 02173-7305 |
| 14433 | ITT SEMICONDUCTORS DIV | | WEST PALM BEACH FL |
| 14552 | MICROSEMI CORP | 2830 S FAIRVIEW ST | SANTA ANA CA 92704-5948 |
| 14752 | ELECTRO CUBE INC | 1710 S DEL MAR AVE | SAN GABRIEL CA 91776-3825 |
| 15454 | KETMA RODAN DIVISION | 2900 BLUE STAR STREET | ANAHEIM CA 92806-2591 |
| 18796 | MURATA ERIE NORTH AMERICAN INC STATE COLLEGE OPERATIONS | 1900 W COLLEGE AVE | STATE COLLEGE PA 16801-2723 |
| 19396 | ILLINOIS TOOL WORKS INC PAKTRON DIV | 1205 MCCONVILLE RD PO BOX 4539 | LYNCHBURG VA 24502-4535 |
| 19701 | MEPCO/CENTRALAB A NORTH AMERICAN PHILIPS CO MINERAL WELLS AIRPORT | PO BOX 760 | MINERAL WELLS TX 76067-0760 |
| 20932 | KYOCERA INTERNATIONAL INC | 11620 SORRENTO VALLEY RD PO BOX 81543 PLANT NO 1 | SAN DIEGO CA 92121 |
| 24546 | CORNING GLASS WORKS | 550 HIGH ST | BRADFORD PA 16701-3737 |
| 27014 | NATIONAL SEMICONDUCTOR CORP | 2900 SEMICONDUCTOR DR | SANTA CLARA CA 95051-0606 |
| 31918 | ITT SCHADOW INC | 8081 WALLACE RD | EDEN PRAIRIE MN 55344-2224 |
| 34899 | FAIR-RITE PRODUCTS CORP | 1 COMMERCIAL ROW | WALLKILL NY 12589 |
| 51406 | MURATA ERIE NORTH AMERICA INC HEADQUARTERS AND GEORGIA OPERATIONS | 2200 LAKE PARK DR | SMYRNA GA 30080 |
| 52763 | STETCO INC | 3344 SCHIERHORN | FRANKLIN PARK IL 60131 |
| 52769 | SPRAGUE-GOODMAN ELECTRONICS INC | 134 FULTON AVE | GARDEN CITY PARK NY 11040-5352 |
| 54473 | MATSUSHITA ELECTRIC CORP OF AMERICA | ONE PANASONIC WAY PO BOX 1501 | SECAUCUS NJ 07094-2917 |
| 55680 | NICHICON /AMERICA/ CORP | 927 E STATE PKY | SCHAUMBURG IL 60195-4526 |
| 56289 | SPRAGUE ELECTRIC CO WORLD HEADQUARTERS | 92 HAYDEN AVE | LEXINGTON MA 02173-7929 |
| 57668 | ROHM CORP | 8 WHATNEY PO BOX 19515 | IRVINE CA 92713 |
| 59660 | TUSONIX INC | 7741 N BUSINESS PARK DR PO BOX 37144 | TUCSON AZ 85740-7144 |
| 71400 | BUSSMANN DIV OF COOPER INDUSTRIES INC | 114 OLD STATE RD PO BOX 14460 | ST LOUIS MO 63178 |
| 75042 | IRC ELECTRONIC COMPONENTS PHILADELPHIA DIV | 401 N BROAD ST | PHILADELPHIA PA 19108-1001 |
| 80009 | TRW FIXED RESISTORS TEKTRONIX INC | 14150 SW KARL BRAUN DR PO BOX 500 | BEAVERTON OR 97077-0001 |

CROSS INDEX - MFR. CODE NUMBER TO MANUFACTURER

| Mfr. Code | Manufacturer | Address | City, State, Zip Code |
|-----------|---|--|----------------------------------|
| 91637 | DALE ELECTRONICS INC | 2064 12TH AVE PO BOX 609 | COLUMBUS NE 68601-3632 |
| D5243 | ROEDERSTEIN E SPEZIALFABRIK FUER KONDENSATOREN GMBH | LUDMILLA STRASSE 23-25 | 8300 LANDSHUT GERMANY |
| K0491 | SEAELECTRO LTD | WALTON ROAD FARLINGTON | PORTSMOUTH ENGLAND |
| K1439 | STEALITE RÖDERSTEIN LTD HAGLEY HOUSE | EDGBASTON | BIRMINGHAM 16 ENGLAND |
| K2504 | RS COMPONENTS LTD | PO BOX 99 | CORBY NORTHANTS NN17 9RS ENGLAND |
| K5545 | AVEL LINDBERG LTD | ARCANY ROAD | ESSEX ENGLAND |
| K5856 | AVELEY INDUSTRIAL EST. RCA LTD | SOUTH OCKENDON 373-399 LONDON ROAD | SURREY ENGLAND |
| K7068 | BEECH HOUSE SILICONIX LTD | CAMBERLEY | SWANSEA WALES |
| K7779 | SIEMENS LTD | MORRISTON WINDMILL ROAD | MIDDLESEX TW16 7HS ENGLAND |
| K8788 | SIEMENS HOUSE PIHER INTERNATIONAL LTD | SUNBURY-ON-THAMES HORTON ROAD | MIDDLESEX ENGLAND |
| K8996 | MULLARD LIMITED | WEST DRAYTON MULLARD HOUSE | LONDON WC1 7 HD ENGLAND |
| S4239 | TEIKOKU TSUSHIN CORP | TORRINGTON PLACE 335 KARI YADO | KAWASKI JAPAN |
| TK00A | G ENGLISH ELECTRONICS LTD | NAKAHARA-KU 34 BOWATER ROAD | LONDON SE18 5TF ENGLAND |
| TK0213 | TOPTRON CORP | | TOKYO JAPAN |
| TK0515 | ERICSSON COMPONENTS INC | 403 INTERNATIONAL PKY PO BOX 853904 | RICHARDSON TX 75085-3904 |
| TK0961 | NEC ELECTRONICS USA INC ELECTRON DIV | 401 ELLIS ST PO BOX 7241 | MOUNTAIN VIEW CA 94039 |
| TK0DY | A F BULGIN & CO LTD | BYE PASS ROAD BARKING | ESSEX ENGLAND |
| TK0DZ | ACROTRONICS | WOOD BURCOTE TRADING EST. | TOWCESTER ENGLAND |
| TK0EA | ARMON ELECTRONICS | 109 WEMBLY HILL ROAD WEMBLY | MIDDX ENGLAND |
| TK0ED | HERON HOUSE COMPONENTS BUREAU | 135 DITTON WAY | CAMBRIDGE ENGLAND |
| TK0EE | UNIT 4 EUREL LTD | 2C PRIMROSE LAND ARLESEY | BEDFORDSHIRE ENGLAND |
| TK0EF | FERRANTI ELECTRONICS | FILEDS NEW ROAD SHADDERTON - OLDHAM | LANCS ENGLAND |
| TK0EG | G B ELECTRONIC COMPS SPINNEY ESTATE | HODDESDON ROAD | STANSTEAD ABBOTTS ENGLAND |
| TK0EM | MOLEX ELECTRONICS MOLEX HOUSE | FARNHAM ROAD BORDON | HAMPSHIRE ENGLAND |
| TK0FD | GB ELECTRONICS PRODUCTS LTD | | WARE SG128EJ ENGLAND |
| TK0FV | EURAL LTD | ARLESEY | BEDS ENGLAND |
| TK1016 | TOSHIBA AMERICA INC ELECTRONIC COMPONENTS DIV BUSINESS SECTOR | 2692 DOW AVE | TUSTIN CA 92680 |
| TK1573 | WILHELM WESTERMAN | PO BOX 2345 AUGUSTA-ANLAGE 56 | 6800 MANNHEIM 1 WEST GERMANY |
| U1395 | WELWYN ELECTRIC | BEDLINGTON | NORTHUMBERLAND NE22 7AA ENGLAND |
| U3771 | STANLER COMPONENTS BUSINESS CENTRE | HEY LANE | BRAINTREE ENGLAND |
| U4144 | MURATA ELECTRONICS UK LTD | SOUTHWOOD FARNBOROUGH | HANTS ENGLAND |

Replaceable Electrical Parts - 2225 Service

| Component No. | Tektronix Part No. | Serial/Assembly No. Effective Discnt | Name & Description | Mfr. Code | Mfr. Part No. |
|---------------|-----------------------|--|--------------------|--|-------------------|
| A1 | 670-9937-00 | 200001 | 202907 | CIRCUIT BD ASSY:MAIN | 80009 670-9937-00 |
| A1 | 670-9937-05 | 202908 | | CIRCUIT BD ASSY:MAIN | 80009 670-9937-05 |
| A2 | 670-9936-00 | 200001 | 202907 | CIRCUIT BD ASSY:ATTENUATOR & TIMEBASE | 80009 670-9936-00 |
| A2 | 670-9936-05 | 202908 | | CIRCUIT BD ASSY:ATTENUATOR & T/B | 80009 670-9936-05 |
| A3 | 670-9940-00 | 200001 | 202907 | CIRCUIT BD ASSY:FRONT PANEL | 80009 670-9940-00 |
| A3 | 670-9940-05 | 202908 | | CIRCUIT BD ASSY:FRONT PANEL | 80009 670-9940-05 |
| A4 | 670-9939-00 | 200001 | 202907 | CIRCUIT BD ASSY:MAINS INPUT | 80009 670-9939-00 |
| A4 | 670-9939-05 | 202908 | | CIRCUIT BD ASSY:MAIN INLET | 80009 670-9939-05 |
| A5 | 670-9938-00 | 200001 | 202907 | CIRCUIT BD ASSY:FOCUS CONTROL MOUNTING | 80009 670-9938-00 |
| A5 | 670-9938-05 | 202908 | | CIRCUIT BD ASSY:FOCUS CONTROL | 80009 670-9938-05 |

| Component No. | Tektronix Part No. | Serial/Assembly No. Effective | Discont | Name & Description | Mfr. Code | Mfr. Part No. |
|---------------|--------------------|-------------------------------|---------|--|-----------|------------------|
| A1 | 670-9937-00 | 200001 | 202907 | CIRCUIT BD ASSY:MAIN | 80009 | 670-9937-00 |
| A1 | 670-9937-05 | 202908 | | CIRCUIT BD ASSY:MAIN | 80009 | 670-9937-05 |
| A1C106 | 281-0775-01 | | | CAP,FXD,CER DI:0.1UF,20%,50V | 04222 | SA105E104MAA |
| A1C107 | 281-0775-01 | | | CAP,FXD,CER DI:0.1UF,20%,50V | 04222 | SA105E104MAA |
| A1C110 | 281-0810-00 | | | CAP,FXD,CER DI:5.6PF,+/-0.5PF,100V | 04222 | MA101A5R6DAA |
| A1C111 | 281-0775-01 | 200360 | 201732 | CAP,FXD,CER DI:0.1UF,20%,50V | 04222 | SA105E104MAA |
| A1C111 | 281-0773-00 | 201733 | | CAP,FXD,CER DI:0.01UF,10%,100V (UNITED KINGDOM ONLY) | 04222 | MA201C103KAA |
| A1C111 | 281-0773-00 | | | CAP,FXD,CER DI:0.01UF,10%,100V (U.S.A. & GUERNSEY) | 04222 | MA201C103KAA |
| A1C112 | 281-0775-01 | 200360 | 201732 | CAP,FXD,CER DI:0.1UF,20%,50V | 04222 | SA105E104MAA |
| A1C112 | 281-0773-00 | 201733 | | CAP,FXD,CER DI:0.01UF,10%,100V (UNITED KINGDOM ONLY) | 04222 | MA201C103KAA |
| A1C112 | 281-0773-00 | | | CAP,FXD,CER DI:0.01UF,10%,100V (U.S.A. & GUERNSEY) | 04222 | MA201C103KAA |
| A1C114 | 281-0767-00 | | | CAP,FXD,CER DI:330PF,20%,100V | 04222 | MA106C331MAA |
| A1C115 | 281-0767-00 | | | CAP,FXD,CER DI:330PF,20%,100V | 04222 | MA106C331MAA |
| A1C116 | 281-0775-01 | | | CAP,FXD,CER DI:0.1UF,20%,50V | 04222 | SA105E104MAA |
| A1C124 | 281-0775-01 | | | CAP,FXD,CER DI:0.1UF,20%,50V | 04222 | SA105E104MAA |
| A1C125 | 281-0772-00 | | | CAP,FXD,CER DI:4700PF,10%,100V | 04222 | MA201C472KAA |
| A1C126 | 283-0114-02 | | | CAP,FXD,CER DI:1500PF,5%,200V | 59660 | 805-405-Y5D0152J |
| A1C130 | 283-0642-00 | | | CAP,FXD,MICA DI:33PF,+/-0.5PF,500V | 00853 | D105E330G0 |
| A1C133 | 281-0785-00 | | | CAP,FXD,CER DI:68PF,10%,100V | 04222 | MA101A680KAA |
| A1C153 | 281-0775-01 | 200360 | 201732 | CAP,FXD,CER DI:0.1UF,20%,50V | 04222 | SA105E104MAA |
| A1C153 | 281-0773-00 | 201733 | | CAP,FXD,CER DI:0.01UF,10%,100V (UNITED KINGDOM ONLY) | 04222 | MA201C103KAA |
| A1C153 | 281-0773-00 | 201733 | | CAP,FXD,CER DI:0.01UF,10%,100V (U.S.A. & GUERNSEY) | 04222 | MA201C103KAA |
| A1C156 | 281-0775-01 | | | CAP,FXD,CER DI:0.1UF,20%,50V | 04222 | SA105E104MAA |
| A1C157 | 281-0775-01 | | | CAP,FXD,CER DI:0.1UF,20%,50V | 04222 | SA105E104MAA |
| A1C160 | 281-0810-00 | | | CAP,FXD,CER DI:5.6PF,+/-0.5PF,100V | 04222 | MA101A5R6DAA |
| A1C164 | 281-0767-00 | | | CAP,FXD,CER DI:330PF,20%,100V | 04222 | MA106C331MAA |
| A1C165 | 281-0767-00 | | | CAP,FXD,CER DI:330PF,20%,100V | 04222 | MA106C331MAA |
| A1C174 | 281-0775-01 | | | CAP,FXD,CER DI:0.1UF,20%,50V | 04222 | SA105E104MAA |
| A1C175 | 281-0772-00 | | | CAP,FXD,CER DI:4700PF,10%,100V | 04222 | MA201C472KAA |
| A1C176 | 283-0114-02 | | | CAP,FXD,CER DI:1500PF,5%,200V | 59660 | 805-405-Y5D0152J |
| A1C180 | 283-0642-00 | 200001 | 208109 | CAP,FXD,MICA DI:33PF,+/-0.5PF,500V | 00853 | D105E330G0 |
| A1C180 | 281-0158-00 | 208110 | | CAP,VAR,CER DI:7-45PF,100WDC SUBMIN CER DISC TOP ADJ (UNITED KINGDOM ONLY) | 59660 | 518-006 G 7-45 |
| A1C180 | 283-0642-00 | B010100 | B010699 | CAP,FXD,MICA DI:33PF,+/-0.5PF,500V | 00853 | D105E330G0 |
| A1C180 | 281-0158-00 | B010700 | | CAP,VAR,CER DI:7-45PF,100WDC SUBMIN CER DISC TOP ADJ (U.S.A. ONLY) | 59660 | 518-006 G 7-45 |
| A1C180 | 283-0642-00 | 100001 | 100120 | CAP,FXD,MICA DI:33PF,+/-0.5PF,500V | 00853 | D105E330G0 |
| A1C180 | 281-0158-00 | 100121 | | CAP,VAR,CER DI:7-45PF,100WDC SUBMIN CER DISC TOP ADJ (GUERNSEY ONLY) | 59660 | 518-006 G 7-45 |
| A1C215 | 281-0775-01 | | | CAP,FXD,CER DI:0.1UF,20%,50V | 04222 | SA105E104MAA |
| A1C216 | 281-0756-00 | 202908 | | CAP,FXD,CER DI:2.2PF,+/-0.5PF,200V (UNITED KINGDOM ONLY) | 04222 | SA102A2R2DAA |
| A1C216 | 281-0756-00 | | | CAP,FXD,CER DI:2.2PF,+/-0.5PF,200V (U.S.A. & GUERNSEY) | 04222 | SA102A2R2DAA |
| A1C217 | 281-0756-00 | 202908 | | CAP,FXD,CER DI:2.2PF,+/-0.5PF,200V (UNITED KINGDOM ONLY) | 04222 | SA102A2R2DAA |
| A1C217 | 281-0756-00 | | | CAP,FXD,CER DI:2.2PF,+/-0.5PF,200V (U.S.A. & GUERNSEY) | 04222 | SA102A2R2DAA |
| A1C220 | 281-0775-01 | 203972 | | CAP,FXD,CER DI:0.1UF,20%,50V (UNITED KINGDOM ONLY) | 04222 | SA105E104MAA |
| A1C220 | 281-0775-01 | | | CAP,FXD,CER DI:0.1UF,20%,50V (U.S.A. & GUERNSEY) | 04222 | SA105E104MAA |

Replaceable Electrical Parts - 2225 Service

| Component No. | Tektronix Part No. | Serial/Assembly No. Effective | Discont | Name & Description | Mfr. Code | Mfr. Part No. |
|---------------|--------------------|-------------------------------|---------|---|-----------|-----------------|
| A1C225 | 281-0812-00 | 200360 | 205110 | CAP,FXD,CER DI:1000PF,10%,100V (UNITED KINGDOM ONLY) | 04222 | MA101C102KAA |
| A1C225 | 281-0865-00 | | | CAP,FXD,CER DI:1000PF,5%,100V (U.S.A. & GUERNSEY) | 04222 | SA201A102JAA |
| A1C237 | 281-0140-00 | | | CAP,VAR,CER DI:5-25PF,100V | 59660 | 518-023A 5-25 |
| A1C239 | 281-0776-00 | | | CAP,FXD,CER DI:120PF,5%,100V | 20932 | 401E0100AD121J |
| A1C240 | 283-0331-00 | | | CAP,FXD,CER DI:43PF,2%,100V | 18796 | DD106B10NP0430J |
| A1C241 | 281-0816-00 | | | CAP,FXD,CER DI:82 PF,5%,100V | 04222 | MA106A82QJAA |
| A1C242 | 281-0865-00 | | | CAP,FXD,CER DI:1000PF,5%,100V | 04222 | SA201A102JAA |
| A1C250 | 281-0768-00 | | | CAP,FXD,CER DI:470PF,20%,100V | 04222 | MA101A471MAA |
| A1C251 | 281-0768-00 | | | CAP,FXD,CER DI:470PF,20%,100V | 04222 | MA101A471MAA |
| A1C255 | 281-0812-00 | 200360 | 205110 | CAP,FXD,CER DI:1000PF,10%,100V | 04222 | MA101C102KAA |
| A1C255 | 281-0865-00 | 205111 | | CAP,FXD,CER DI:1000PF,5%,100V (UNITED KINGDOM ONLY) | 04222 | SA201A102JAA |
| A1C255 | 281-0865-00 | | | CAP,FXD,CER DI:1000PF,5%,100V (U.S.A. & GUERNSEY) | 04222 | SA201A102JAA |
| A1C256 | 281-0214-00 | | | CAP,VAR,CER DI:0.6-3PF,400V | 52763 | 313613-140 |
| A1C257 | 281-0214-00 | | | CAP,VAR,CER DI:0.6-3PF,400V | 52763 | 313613-140 |
| A1C258 | 281-0775-01 | | | CAP,FXD,CER DI:0.1UF,20%,50V | 04222 | SA105E104MAA |
| A1C262 | 281-0812-00 | | | CAP,FXD,CER DI:1000PF,10%,100V | 04222 | MA101C102KAA |
| A1C281 | 281-0775-01 | 200360 | 202907 | CAP,FXD,CER DI:0.1UF,20%,50V (UNITED KINGDOM ONLY) | 04222 | SA105E104MAA |
| A1C292 | 290-1153-00 | | | CAP,FXD,ELCTL:47UF,+50-10%,10V | K8996 | 030-24479 |
| A1C304 | 281-0768-00 | | | CAP,FXD,CER DI:470PF,20%,100V | 04222 | MA101A471MAA |
| A1C305 | 281-0768-00 | | | CAP,FXD,CER DI:470PF,20%,100V | 04222 | MA101A471MAA |
| A1C310 | 281-0762-00 | | | CAP,FXD,CER DI:27PF,20%,100V | 04222 | MA101A270MAA |
| A1C335 | 281-0762-00 | | | CAP,FXD,CER DI:27PF,20%,100V | 04222 | MA101A270MAA |
| A1C340 | 281-0762-00 | | | CAP,FXD,CER DI:27PF,20%,100V | 04222 | MA101A270MAA |
| A1C349 | 285-1385-00 | | | CAP,FXD,PLASTIC:43PF,2.5%,630V | K7779 | B31063-A6430-H6 |
| A1C351 | 281-0775-01 | | | CAP,FXD,CER DI:0.1UF,20%,50V | 04222 | SA105E104MAA |
| A1C353 | 281-0810-00 | 202908 | 204242 | CAP,FXD,CER DI:5.6PF,+/-0.5PF,100V | 04222 | MA101A5R6DAA |
| A1C353 | 281-0812-00 | 204243 | 205110 | CAP,FXD,CER DI:1000PF,10%,100V | 04222 | MA101C102KAA |
| A1C353 | 281-0865-00 | 205111 | | CAP,FXD,CER DI:1000PF,5%,100V (UNITED KINGDOM ONLY) | 04222 | SA201A102JAA |
| A1C353 | 281-0865-00 | | | CAP,FXD,CER DI:1000PF,5%,100V (U.S.A. & GUERNSEY) | 04222 | SA201A102JAA |
| A1C369 | 281-0775-01 | | | CAP,FXD,CER DI:0.1UF,20%,50V | 04222 | SA105E104MAA |
| A1C372 | 281-0815-00 | | | CAP,FXD,CER DI:0.027UF,20%,50V | 04222 | MA205C273MAA |
| A1C380 | 281-0775-01 | | | CAP,FXD,CER DI:0.1UF,20%,50V | 04222 | SA105E104MAA |
| A1C384 | 290-1159-00 | | | CAP,FXD,ELCTL:1000UF,20%,16V | TKOED | TWSS |
| A1C387 | 281-0762-00 | | | CAP,FXD,CER DI:27PF,20%,100V | 04222 | MA101A270MAA |
| A1C389 | 281-0775-01 | | | CAP,FXD,CER DI:0.1UF,20%,50V | 04222 | SA105E104MAA |
| A1C396 | 281-0814-00 | 207212 | | CAP,FXD,CER DI:100 PF,10%,100V (UNITED KINGDOM ONLY) | 04222 | MA101A101KAA |
| A1C396 | 281-0814-00 | 100041 | | CAP,FXD,CER DI:100 PF,10%,100V (GUERNSEY ONLY) | 04222 | MA101A101KAA |
| A1C396 | 281-0814-00 | B010463 | | CAP,FXD,CER DI:100 PF,10%,100V (U.S.A. ONLY) | 04222 | MA101A101KAA |
| A1C398 | 281-0773-00 | | | CAP,FXD,CER DI:0.01UF,10%,100V | 04222 | MA201C103KAA |
| A1C400 | 281-0762-00 | 200757 | | CAP,FXD,CER DI:27PF,20%,100V (UNITED KINGDOM ONLY) | 04222 | MA101A270MAA |
| A1C400 | 281-0762-00 | | | CAP,FXD,CER DI:27PF,20%,100V (U.S.A. & GUERNSEY) | 04222 | MA101A270MAA |
| A1C401 | 281-0775-01 | | | CAP,FXD,CER DI:0.1UF,20%,50V | 04222 | SA105E104MAA |
| A1C408 | 281-0775-01 | | | CAP,FXD,CER DI:0.1UF,20%,50V | 04222 | SA105E104MAA |
| A1C418 | 290-1150-00 | | | CAP,FXD,ELCTL:15UF,+50%-10%,16WVDC | K8996 | 030-25159 |
| A1C430 | 281-0775-01 | | | CAP,FXD,CER DI:0.1UF,20%,50V | 04222 | SA105E104MAA |
| A1C431 | 290-1150-00 | | | CAP,FXD,ELCTL:15UF,+50%-10%,16WVDC | K8996 | 030-25159 |

| Component No. | Tektronix Part No. | Serial/Assembly No. Effective | Discont | Name & Description | Mfr. Code | Mfr. Part No. |
|---------------|--------------------|-------------------------------|---------|--|-----------|------------------|
| A1C435 | 281-0775-01 | | | CAP, FXD, CER DI: 0.1UF, 20%, 50V | 04222 | SA105E104MAA |
| A1C439 | 281-0773-00 | | | CAP, FXD, CER DI: 0.01UF, 10%, 100V | 04222 | MA201C103KAA |
| A1C451 | 281-0773-00 | | | CAP, FXD, CER DI: 0.01UF, 10%, 100V | 04222 | MA201C103KAA |
| A1C452 | 281-0775-01 | | | CAP, FXD, CER DI: 0.1UF, 20%, 50V | 04222 | SA105E104MAA |
| A1C455 | 290-1150-00 | 202908 | | CAP, FXD, ELCTLT: 15UF, +50%-10%, 16WVDC (UNITED KINGDOM ONLY) | K8996 | 030-25159 |
| A1C455 | 290-1150-00 | | | CAP, FXD, ELCTLT: 15UF, +50%-10%, 16WVDC (U.S.A. & GUERNSEY) | K8996 | 030-25159 |
| A1C462 | 290-0743-00 | | | CAP, FXD, ELCTLT: 100UF, +50%-20%, 16WVDC | 54473 | ECE-B16V100L |
| A1C464 | 281-0775-01 | | | CAP, FXD, CER DI: 0.1UF, 20%, 50V | 04222 | SA105E104MAA |
| A1C471 | 290-1150-00 | | | CAP, FXD, ELCTLT: 15UF, +50%-10%, 16WVDC | K8996 | 030-25159 |
| A1C472 | 290-1150-00 | | | CAP, FXD, ELCTLT: 15UF, +50%-10%, 16WVDC | K8996 | 030-25159 |
| A1C473 | 281-0865-00 | | | CAP, FXD, CER DI: 1000PF, 5%, 100V | 04222 | SA201A102JAA |
| A1C480 | 281-0775-01 | | | CAP, FXD, CER DI: 0.1UF, 20%, 50V | 04222 | SA105E104MAA |
| A1C481 | 281-0775-01 | | | CAP, FXD, CER DI: 0.1UF, 20%, 50V | 04222 | SA105E104MAA |
| A1C489 | 281-0810-00 | | | CAP, FXD, CER DI: 5.6PF, +/-0.5PF, 100V | 04222 | MA101A5R6DAA |
| A1C495 | 281-0773-00 | | | CAP, FXD, CER DI: 0.01UF, 10%, 100V | 04222 | MA201C103KAA |
| A1C496 | 281-0773-00 | | | CAP, FXD, CER DI: 0.01UF, 10%, 100V | 04222 | MA201C103KAA |
| A1C500 | 281-0775-01 | | | CAP, FXD, CER DI: 0.1UF, 20%, 50V | 04222 | SA105E104MAA |
| A1C501 | 281-0810-00 | | | CAP, FXD, CER DI: 5.6PF, +/-0.5PF, 100V | 04222 | MA101A5R6DAA |
| A1C503 | 281-0772-00 | | | CAP, FXD, CER DI: 4700PF, 10%, 100V | 04222 | MA201C472KAA |
| A1C504 | 281-0775-01 | | | CAP, FXD, CER DI: 0.1UF, 20%, 50V | 04222 | SA105E104MAA |
| A1C505 | 281-0775-01 | | | CAP, FXD, CER DI: 0.1UF, 20%, 50V | 04222 | SA105E104MAA |
| A1C506 | 281-0767-00 | | | CAP, FXD, CER DI: 330PF, 20%, 100V | 04222 | MA106C331MAA |
| A1C510 | 281-0775-01 | | | CAP, FXD, CER DI: 0.1UF, 20%, 50V | 04222 | SA105E104MAA |
| A1C511 | 281-0775-01 | | | CAP, FXD, CER DI: 0.1UF, 20%, 50V | 04222 | SA105E104MAA |
| A1C513 | 281-0775-01 | | | CAP, FXD, CER DI: 0.1UF, 20%, 50V | 04222 | SA105E104MAA |
| A1C514 | 281-0775-01 | | | CAP, FXD, CER DI: 0.1UF, 20%, 50V | 04222 | SA105E104MAA |
| A1C515 | 281-0775-01 | | | CAP, FXD, CER DI: 0.1UF, 20%, 50V | 04222 | SA105E104MAA |
| A1C516 | 281-0812-00 | 200360 | 205110 | CAP, FXD, CER DI: 1000PF, 10%, 100V | 04222 | MA101C102KAA |
| A1C516 | 281-0865-00 | 205111 | | CAP, FXD, CER DI: 1000PF, 5%, 100V (UNITED KINGDOM ONLY) | 04222 | SA201A102JAA |
| A1C516 | 281-0865-00 | | | CAP, FXD, CER DI: 1000PF, 5%, 100V (U.S.A. & GUERNSEY) | 04222 | SA201A102JAA |
| A1C517 | 281-0776-00 | | | CAP, FXD, CER DI: 120PF, 5%, 100V | 20932 | 401E0100AD121J |
| A1C519 | 281-0775-01 | | | CAP, FXD, CER DI: 0.1UF, 20%, 50V | 04222 | SA105E104MAA |
| A1C520 | 281-0775-01 | | | CAP, FXD, CER DI: 0.1UF, 20%, 50V | 04222 | SA105E104MAA |
| A1C525 | 281-0758-00 | | | CAP, FXD, CER DI: 15PF, 20%, 100V | 04222 | SA102A150MAA |
| A1C530 | 281-0775-01 | | | CAP, FXD, CER DI: 0.1UF, 20%, 50V | 04222 | SA105E104MAA |
| A1C536 | 281-0814-00 | | | CAP, FXD, CER DI: 100 PF, 10%, 100V | 04222 | MA101A101KAA |
| A1C537 | 281-0775-01 | | | CAP, FXD, CER DI: 0.1UF, 20%, 50V | 04222 | SA105E104MAA |
| A1C538 | 281-0812-00 | 200360 | 205110 | CAP, FXD, CER DI: 1000PF, 10%, 100V | 04222 | MA101C102KAA |
| A1C538 | 281-0865-00 | 205111 | | CAP, FXD, CER DI: 1000PF, 5%, 100V (UNITED KINGDOM ONLY) | 04222 | SA201A102JAA |
| A1C538 | 281-0865-00 | | | CAP, FXD, CER DI: 1000PF, 5%, 100V (U.S.A. & GUERNSEY) | 04222 | SA201A102JAA |
| A1C539 | 281-0812-00 | 200360 | 205110 | CAP, FXD, CER DI: 1000PF, 10%, 100V | 04222 | MA101C102KAA |
| A1C539 | 281-0865-00 | 205111 | | CAP, FXD, CER DI: 1000PF, 5%, 100V (UNITED KINGDOM ONLY) | 04222 | SA201A102JAA |
| A1C539 | 281-0865-00 | | | CAP, FXD, CER DI: 1000PF, 5%, 100V (U.S.A. & GUERNSEY) | 04222 | SA201A102JAA |
| A1C540 | 290-1153-00 | | | CAP, FXD, ELCTLT: 47UF, +50%-10%, 10V | K8996 | 030-24479 |
| A1C545 | 283-0119-02 | | | CAP, FXD, CER DI: 2200PF, 5%, 200V | 59660 | 855-402-Y5E0222J |
| A1C547 | 281-0768-00 | | | CAP, FXD, CER DI: 470PF, 20%, 100V | 04222 | MA101A471MAA |
| A1C550 | 281-0775-01 | | | CAP, FXD, CER DI: 0.1UF, 20%, 50V | 04222 | SA105E104MAA |
| A1C554 | 281-0812-00 | 200360 | 205110 | CAP, FXD, CER DI: 1000PF, 10%, 100V | 04222 | MA101C102KAA |
| A1C554 | 281-0865-00 | 205111 | | CAP, FXD, CER DI: 1000PF, 5%, 100V (UNITED KINGDOM ONLY) | 04222 | SA201A102JAA |
| A1C554 | 281-0865-00 | | | CAP, FXD, CER DI: 1000PF, 5%, 100V (U.S.A. & GUERNSEY) | 04222 | SA201A102JAA |

Replaceable Electrical Parts - 2225 Service

| Component No. | Tektronix Part No. | Serial/Assembly No. Effective | Discont | Name & Description | Mfr. Code | Mfr. Part No. |
|---------------|--------------------|-------------------------------|---------|--|-----------|-----------------|
| A1C555 | 281-0775-01 | | | CAP, FXD, CER DI: 0.1UF, 20%, 50V | 04222 | SA105E104MAA |
| A1C560 | 281-0775-01 | | | CAP, FXD, CER DI: 0.1UF, 20%, 50V | 04222 | SA105E104MAA |
| A1C561 | 281-0812-00 | 200360 | 205110 | CAP, FXD, CER DI: 1000PF, 10%, 100V | 04222 | MA101C102KAA |
| A1C561 | 281-0865-00 | 205111 | | CAP, FXD, CER DI: 1000PF, 5%, 100V (UNITED KINGDOM ONLY) | 04222 | SA201A102JAA |
| A1C561 | 281-0865-00 | | | CAP, FXD, CER DI: 1000PF, 5%, 100V (U.S.A. & GUERNSEY) | 04222 | SA201A102JAA |
| A1C562 | 281-0775-01 | | | CAP, FXD, CER DI: 0.1UF, 20%, 50V | 04222 | SA105E104MAA |
| A1C570 | 281-0775-01 | | | CAP, FXD, CER DI: 0.1UF, 20%, 50V | 04222 | SA105E104MAA |
| A1C571 | 281-0785-00 | | | CAP, FXD, CER DI: 68PF, 10%, 100V | 04222 | MA101A680KAA |
| A1C572 | 281-0758-00 | | | CAP, FXD, CER DI: 15PF, 20%, 100V | 04222 | SA102A150MAA |
| A1C584 | 281-0775-01 | 200001 | 208549 | CAP, FXD, CER DI: 0.1UF, 20%, 50V | 04222 | SA105E104MAA |
| A1C584 | 285-1341-00 | 208550 | | CAP, FXD, PLASTIC: 0.1UF, 20%, 100V (UNITED KINGDOM ONLY) | TK1573 | MKS2 0.1/100/20 |
| A1C584 | 281-0775-01 | B010100 | B011072 | CAP, FXD, CER DI: 0.1UF, 20%, 50V | 04222 | SA105E104MAA |
| A1C584 | 285-1341-00 | B011073 | | CAP, FXD, PLASTIC: 0.1UF, 20%, 100V (U.S.A. ONLY) | TK1573 | MKS2 0.1/100/20 |
| A1C584 | 281-0775-01 | 100001 | 100227 | CAP, FXD, CER DI: 0.1UF, 20%, 50V | 04222 | SA105E104MAA |
| A1C584 | 285-1341-00 | 100228 | | CAP, FXD, PLASTIC: 0.1UF, 20%, 100V (GUERNSEY ONLY) | TK1573 | MKS2 0.1/100/20 |
| A1C587 | 281-0773-00 | | | CAP, FXD, CER DI: 0.01UF, 10%, 100V | 04222 | MA201C103KAA |
| A1C776 | 281-0773-00 | | | CAP, FXD, CER DI: 0.01UF, 10%, 100V | 04222 | MA201C103KAA |
| A1C780 | 281-0771-00 | | | CAP, FXD, CER DI: 2200PF, 20%, 200V | 04222 | SA106E222MAA |
| A1C782 | 281-0775-01 | | | CAP, FXD, CER DI: 0.1UF, 20%, 50V | 04222 | SA105E104MAA |
| A1C784 | 283-0317-00 | 200360 | 202907 | CAP, FXD, CER DI: 1PF, +/-0.1PF, 500V | 59660 | 861518COKD109B |
| A1C784 | 281-0214-00 | 202908 | | CAP, VAR, CER DI: 0.6-3PF, 400V (UNITED KINGDOM ONLY) | 52763 | 313613-140 |
| A1C784 | 281-0214-00 | | | CAP, VAR, CER DI: 0.6-3PF, 400V (U.S.A. & GUERNSEY) | 52763 | 313613-140 |
| A1C785 | 285-1101-00 | | | CAP, FXD, PLASTIC: 0.022UF, 10%, 200V | 19396 | 223K02PT485 |
| A1C789 | 281-0771-00 | | | CAP, FXD, CER DI: 2200PF, 20%, 200V | 04222 | SA106E222MAA |
| A1C794 | 281-0214-00 | | | CAP, VAR, CER DI: 0.6-3PF, 400V | 52763 | 313613-140 |
| A1C795 | 285-1101-00 | | | CAP, FXD, PLASTIC: 0.022UF, 10%, 200V | 19396 | 223K02PT485 |
| A1C799 | 281-0771-00 | | | CAP, FXD, CER DI: 2200PF, 20%, 200V | 04222 | SA106E222MAA |
| A1C805 | 290-1150-00 | | | CAP, FXD, ELCTLT: 15UF, +50%-10%, 16WVDC | K8996 | 030-25159 |
| A1C819 | 281-0775-01 | | | CAP, FXD, CER DI: 0.1UF, 20%, 50V | 04222 | SA105E104MAA |
| A1C824 | 281-0785-00 | | | CAP, FXD, CER DI: 68PF, 10%, 100V | 04222 | MA101A680KAA |
| A1C825 | 281-0767-00 | | | CAP, FXD, CER DI: 330PF, 20%, 100V | 04222 | MA106C331MAA |
| A1C828 | 281-0775-01 | | | CAP, FXD, CER DI: 0.1UF, 20%, 50V | 04222 | SA105E104MAA |
| A1C832 | 281-0775-01 | | | CAP, FXD, CER DI: 0.1UF, 20%, 50V | 04222 | SA105E104MAA |
| A1C834 | 281-0775-01 | | | CAP, FXD, CER DI: 0.1UF, 20%, 50V | 04222 | SA105E104MAA |
| A1C835 | 281-0775-01 | | | CAP, FXD, CER DI: 0.1UF, 20%, 50V | 04222 | SA105E104MAA |
| A1C845 | 281-0771-00 | | | CAP, FXD, CER DI: 2200PF, 20%, 200V | 04222 | SA106E222MAA |
| A1C847 | 283-0057-00 | 200360 | 200727 | CAP, FXD, CER DI: 0.1UF, +80-20%, 200V | 04222 | SR306E104ZAA |
| A1C847 | 285-1341-00 | 200728 | | CAP, FXD, PLASTIC: 0.1UF, 20%, 100V (UNITED KINGDOM ONLY) | TK1573 | MKS2 0.1/100/20 |
| A1C847 | 285-1341-00 | | | CAP, FXD, PLASTIC: 0.1UF, 20%, 100V (U.S.A. & GUERNSEY) | TK1573 | MKS2 0.1/100/20 |
| A1C849 | 283-0057-00 | 200360 | 200727 | CAP, FXD, CER DI: 0.1UF, +80-20%, 200V | 04222 | SR306E104ZAA |
| A1C849 | 285-1341-00 | 200728 | | CAP, FXD, PLASTIC: 0.1UF, 20%, 100V (UNITED KINGDOM ONLY) | TK1573 | MKS2 0.1/100/20 |
| A1C849 | 285-1341-00 | | | CAP, FXD, PLASTIC: 0.1UF, 20%, 100V (U.S.A. & GUERNSEY) | TK1573 | MKS2 0.1/100/20 |
| A1C851 | 283-0057-00 | 200360 | 200727 | CAP, FXD, CER DI: 0.1UF, +80-20%, 200V | 04222 | SR306E104ZAA |
| A1C851 | 285-1341-00 | 200728 | | CAP, FXD, PLASTIC: 0.1UF, 20%, 100V (UNITED KINGDOM ONLY) | TK1573 | MKS2 0.1/100/20 |
| A1C851 | 285-1341-00 | | | CAP, FXD, PLASTIC: 0.1UF, 20%, 100V (U.S.A. & GUERNSEY) | TK1573 | MKS2 0.1/100/20 |
| A1C853 | 281-0767-00 | | | CAP, FXD, CER DI: 330PF, 20%, 100V | 04222 | MA106C331MAA |
| A1C854 | 283-0279-00 | | | CAP, FXD, CER DI: 0.001UF, 20%, 3000V | 51406 | DHR12Y5S102M3KV |
| A1C855 | 285-1184-00 | | | CAP, FXD, MTLZD: 0.01 UF, 20%, 4000V | 56289 | 430P591 |

| Component No. | Tektronix Part No. | Serial/Assembly No. Effective | Discont | Name & Description | Mfr. Code | Mfr. Part No. |
|---------------|--------------------|-------------------------------|---------|---|-----------|-----------------|
| A1C871 | 283-0057-00 | 200360 | 200727 | CAP,FXD,CER DI:0.1UF,+80-20%,200V | 04222 | SR306E104ZAA |
| A1C871 | 285-1341-00 | 200728 | | CAP,FXD,PLASTIC:0.1UF,20%,100V (UNITED KINGDOM ONLY) | TK1573 | MKS2 0.1/100/20 |
| A1C871 | 285-1341-00 | | | CAP,FXD,PLASTIC:0.1UF,20%,100V (U.S.A. & GUERNSEY) | TK1573 | MKS2 0.1/100/20 |
| A1C875 | 283-0057-00 | 200360 | 200727 | CAP,FXD,CER DI:0.1UF,+80-20%,200V | 04222 | SR306E104ZAA |
| A1C875 | 285-1341-00 | 200728 | | CAP,FXD,PLASTIC:0.1UF,20%,100V (UNITED KINGDOM ONLY) | TK1573 | MKS2 0.1/100/20 |
| A1C875 | 285-1341-00 | | | CAP,FXD,PLASTIC:0.1UF,20%,100V (U.S.A. & GUERNSEY) | TK1573 | MKS2 0.1/100/20 |
| A1C893 | 283-0279-00 | | | CAP,FXD,CER DI:0.001UF,20%,3000V | 51406 | DHR12Y5S102M3KV |
| A1C901 | 281-0815-00 | | | CAP,FXD,CER DI:0.027UF,20%,50V | 04222 | MA205C273MAA |
| A1C902 | 281-0775-01 | | | CAP,FXD,CER DI:0.1UF,20%,50V | 04222 | SA105E104MAA |
| A1C908 | 281-0865-00 | | | CAP,FXD,CER DI:1000PF,5%,100V | 04222 | SA201A102JAA |
| A1C909 | 281-0767-00 | | | CAP,FXD,CER DI:330PF,20%,100V | 04222 | MA106C331MAA |
| A1C910 | 281-0775-01 | | | CAP,FXD,CER DI:0.1UF,20%,50V | 04222 | SA105E104MAA |
| A1C911 | 283-0057-00 | | | CAP,FXD,CER DI:0.1UF,+80-20%,200V | 04222 | SR306E104ZAA |
| A1C912 | 281-0775-01 | | | CAP,FXD,CER DI:0.1UF,20%,50V | 04222 | SA105E104MAA |
| A1C913 | 281-0773-00 | | | CAP,FXD,CER DI:0.01UF,10%,100V | 04222 | MA201C103KAA |
| A1C914 | 290-1160-00 | | | CAP,FXD,ELCTLT:15UF,20%,63V | K8996 | 035-58159 |
| A1C915 | 290-0768-00 | 202908 | | CAP,FXD,ELCTLT:10UF,+50-20%,100WDC (UNITED KINGDOM ONLY) | 54473 | ECE-A100V10L |
| A1C915 | 290-0768-00 | | | CAP,FXD,ELCTLT:10UF,+50-20%,100WDC (U.S.A. & GUERNSEY) | 54473 | ECE-A100V10L |
| A1C924 | 281-0775-01 | | | CAP,FXD,CER DI:0.1UF,20%,50V | 04222 | SA105E104MAA |
| A1C927 | 281-0775-01 | | | CAP,FXD,CER DI:0.1UF,20%,50V | 04222 | SA105E104MAA |
| A1C932 | 281-0775-01 | | | CAP,FXD,CER DI:0.1UF,20%,50V | 04222 | SA105E104MAA |
| A1C933 | 281-0775-01 | | | CAP,FXD,CER DI:0.1UF,20%,50V | 04222 | SA105E104MAA |
| A1C939 | 281-0767-00 | | | CAP,FXD,CER DI:330PF,20%,100V | 04222 | MA106C331MAA |
| A1C940 | 281-0865-00 | | | CAP,FXD,CER DI:1000PF,5%,100V | 04222 | SA201A102JAA |
| A1C941 | 281-0775-01 | | | CAP,FXD,CER DI:0.1UF,20%,50V | 04222 | SA105E104MAA |
| A1C942 | 281-0775-01 | | | CAP,FXD,CER DI:0.1UF,20%,50V | 04222 | SA105E104MAA |
| A1C952 | 281-0814-00 | | | CAP,FXD,CER DI:100 PF,10%,100V | 04222 | MA101A101KAA |
| A1C953 | 290-1153-00 | | | CAP,FXD,ELCTLT:47UF,+50-10%,10V | K8996 | 030-24479 |
| A1C962 | 281-0775-01 | | | CAP,FXD,CER DI:0.1UF,20%,50V | 04222 | SA105E104MAA |
| A1C963 | 281-0775-01 | | | CAP,FXD,CER DI:0.1UF,20%,50V | 04222 | SA105E104MAA |
| A1C970 | 281-0865-00 | | | CAP,FXD,CER DI:1000PF,5%,100V | 04222 | SA201A102JAA |
| A1C971 | 290-0831-00 | | | CAP,FXD,ELCTLT:470UF,+50-20%,50V | 54473 | ECE-A1HV471S |
| A1C972 | 290-0831-00 | | | CAP,FXD,ELCTLT:470UF,+50-20%,50V | 54473 | ECE-A1HV471S |
| A1C975 | 285-1184-00 | | | CAP,FXD,MTLZD:0.01 UF,20%,4000V | 56289 | 430P591 |
| A1C976 | 285-1184-00 | | | CAP,FXD,MTLZD:0.01 UF,20%,4000V | 56289 | 430P591 |
| A1C979 | 285-1184-00 | | | CAP,FXD,MTLZD:0.01 UF,20%,4000V | 56289 | 430P591 |
| A1C982 | 281-0814-00 | | | CAP,FXD,CER DI:100 PF,10%,100V | 04222 | MA101A101KAA |
| A1C983 | 290-1153-00 | | | CAP,FXD,ELCTLT:47UF,+50-10%,10V | K8996 | 030-24479 |
| A1C984 | 290-0947-00 | | | CAP,FXD,ELCTLT:33UF,+50-10%,160V W/SLEEVE | 55680 | UHC2C330TFA |
| A1C986 | 290-1159-00 | | | CAP,FXD,ELCTLT:1000UF,20%,16V | TKOED | TWSS |
| A1C987 | 290-1159-00 | | | CAP,FXD,ELCTLT:1000UF,20%,16V | TKOED | TWSS |
| A1C988 | 290-1159-00 | | | CAP,FXD,ELCTLT:1000UF,20%,16V | TKOED | TWSS |
| A1C989 | 290-1159-00 | | | CAP,FXD,ELCTLT:1000UF,20%,16V | TKOED | TWSS |
| A1C990 | 290-1159-00 | | | CAP,FXD,ELCTLT:1000UF,20%,16V | TKOED | TWSS |
| A1C991 | 290-1159-00 | | | CAP,FXD,ELCTLT:1000UF,20%,16V | TKOED | TWSS |
| A1CR104 | 152-0141-02 | 200360 | 202261 | SEMICON DVC,DI:SW,SI,30V,150MA,30V,DO-35 | 03508 | DA2527 (1N4152) |
| A1CR104 | 152-0322-00 | 202262 | | SEMICON DVC,DI:SCHOTTKY,SI,15V,1.2PF,DO-35 (UNITED KINGDOM ONLY) | TK0961 | 1SS97(2)T |
| A1CR104 | 152-0322-00 | | | SEMICON DVC,DI:SCHOTTKY,SI,15V,1.2PF,DO-35 (U.S.A. & GUERNSEY) | TK0961 | 1SS97(2)T |
| A1CR105 | 152-0141-02 | 200360 | 202261 | SEMICON DVC,DI:SW,SI,30V,150MA,30V,DO-35 | 03508 | DA2527 (1N4152) |
| A1CR105 | 152-0322-00 | 202262 | | SEMICON DVC,DI:SCHOTTKY,SI,15V,1.2PF,DO-35 (UNITED KINGDOM ONLY) | TK0961 | 1SS97(2)T |

Replaceable Electrical Parts - 2225 Service

| Component No. | Tektronix Part No. | Serial/Assembly No. Effective | Discont | Name & Description | Mfr. Code | Mfr. Part No. |
|---------------|--------------------|-------------------------------|---------|---|-----------|-----------------|
| A1CR105 | 152-0322-00 | | | SEMICON DVC,DI: SCHOTTKY,SI,15V,1.2PF,DO-35 (U.S.A. & GUERNSEY) | TK0961 | 1SS97(2)T |
| A1CR111 | 152-0141-02 | | | SEMICON DVC,DI:SW,SI,30V,150MA,30V,DO-35 | 03508 | DA2527 (1N4152) |
| A1CR112 | 152-0141-02 | | | SEMICON DVC,DI:SW,SI,30V,150MA,30V,DO-35 | 03508 | DA2527 (1N4152) |
| A1CR133 | 152-0141-02 | | | SEMICON DVC,DI:SW,SI,30V,150MA,30V,DO-35 | 03508 | DA2527 (1N4152) |
| A1CR136 | 152-0141-02 | | | SEMICON DVC,DI:SW,SI,30V,150MA,30V,DO-35 | 03508 | DA2527 (1N4152) |
| A1CR139 | 152-0141-02 | | | SEMICON DVC,DI:SW,SI,30V,150MA,30V,DO-35 | 03508 | DA2527 (1N4152) |
| A1CR154 | 152-0141-02 | 200360 | 202261 | SEMICON DVC,DI:SW,SI,30V,150MA,30V,DO-35 | 03508 | DA2527 (1N4152) |
| A1CR154 | 152-0322-00 | 202262 | | SEMICON DVC,DI: SCHOTTKY,SI,15V,1.2PF,DO-35 (UNITED KINGDOM ONLY) | TK0961 | 1SS97(2)T |
| A1CR154 | 152-0322-00 | | | SEMICON DVC,DI: SCHOTTKY,SI,15V,1.2PF,DO-35 (U.S.A. & GUERNSEY) | TK0961 | 1SS97(2)T |
| A1CR155 | 152-0141-02 | 200360 | 202261 | SEMICON DVC,DI:SW,SI,30V,150MA,30V,DO-35 | 03508 | DA2527 (1N4152) |
| A1CR155 | 152-0322-00 | 202262 | | SEMICON DVC,DI: SCHOTTKY,SI,15V,1.2PF,DO-35 (UNITED KINGDOM ONLY) | TK0961 | 1SS97(2)T |
| A1CR155 | 152-0322-00 | | | SEMICON DVC,DI: SCHOTTKY,SI,15V,1.2PF,DO-35 (U.S.A. & GUERNSEY) | TK0961 | 1SS97(2)T |
| A1CR161 | 152-0141-02 | | | SEMICON DVC,DI:SW,SI,30V,150MA,30V,DO-35 | 03508 | DA2527 (1N4152) |
| A1CR162 | 152-0141-02 | | | SEMICON DVC,DI:SW,SI,30V,150MA,30V,DO-35 | 03508 | DA2527 (1N4152) |
| A1CR183 | 152-0141-02 | | | SEMICON DVC,DI:SW,SI,30V,150MA,30V,DO-35 | 03508 | DA2527 (1N4152) |
| A1CR186 | 152-0141-02 | | | SEMICON DVC,DI:SW,SI,30V,150MA,30V,DO-35 | 03508 | DA2527 (1N4152) |
| A1CR189 | 152-0141-02 | | | SEMICON DVC,DI:SW,SI,30V,150MA,30V,DO-35 | 03508 | DA2527 (1N4152) |
| A1CR300 | 152-0141-02 | | | SEMICON DVC,DI:SW,SI,30V,150MA,30V,DO-35 | 03508 | DA2527 (1N4152) |
| A1CR301 | 152-0141-02 | | | SEMICON DVC,DI:SW,SI,30V,150MA,30V,DO-35 | 03508 | DA2527 (1N4152) |
| A1CR302 | 152-0141-02 | | | SEMICON DVC,DI:SW,SI,30V,150MA,30V,DO-35 | 03508 | DA2527 (1N4152) |
| A1CR319 | 152-0141-02 | | | SEMICON DVC,DI:SW,SI,30V,150MA,30V,DO-35 | 03508 | DA2527 (1N4152) |
| A1CR344 | 152-0141-02 | | | SEMICON DVC,DI:SW,SI,30V,150MA,30V,DO-35 | 03508 | DA2527 (1N4152) |
| A1CR347 | 152-0141-02 | | | SEMICON DVC,DI:SW,SI,30V,150MA,30V,DO-35 | 03508 | DA2527 (1N4152) |
| A1CR348 | 152-0141-02 | | | SEMICON DVC,DI:SW,SI,30V,150MA,30V,DO-35 | 03508 | DA2527 (1N4152) |
| A1CR349 | 152-0141-02 | | | SEMICON DVC,DI:SW,SI,30V,150MA,30V,DO-35 | 03508 | DA2527 (1N4152) |
| A1CR357 | 152-0141-02 | | | SEMICON DVC,DI:SW,SI,30V,150MA,30V,DO-35 | 03508 | DA2527 (1N4152) |
| A1CR369 | 152-0141-02 | | | SEMICON DVC,DI:SW,SI,30V,150MA,30V,DO-35 | 03508 | DA2527 (1N4152) |
| A1CR370 | 152-0141-02 | | | SEMICON DVC,DI:SW,SI,30V,150MA,30V,DO-35 | 03508 | DA2527 (1N4152) |
| A1CR417 | 152-0141-02 | | | SEMICON DVC,DI:SW,SI,30V,150MA,30V,DO-35 | 03508 | DA2527 (1N4152) |
| A1CR420 | 152-0141-02 | 202908 | | SEMICON DVC,DI:SW,SI,30V,150MA,30V,DO-35 (UNITED KINGDOM ONLY) | 03508 | DA2527 (1N4152) |
| A1CR420 | 152-0141-02 | | | SEMICON DVC,DI:SW,SI,30V,150MA,30V,DO-35 (U.S.A. & GUERNSEY) | 03508 | DA2527 (1N4152) |
| A1CR421 | 152-0141-02 | 202908 | | SEMICON DVC,DI:SW,SI,30V,150MA,30V,DO-35 (UNITED KINGDOM ONLY) | 03508 | DA2527 (1N4152) |
| A1CR421 | 152-0141-02 | | | SEMICON DVC,DI:SW,SI,30V,150MA,30V,DO-35 (U.S.A. & GUERNSEY) | 03508 | DA2527 (1N4152) |
| A1CR431 | 152-0141-02 | | | SEMICON DVC,DI:SW,SI,30V,150MA,30V,DO-35 | 03508 | DA2527 (1N4152) |
| A1CR432 | 152-0322-00 | 202203 | | SEMICON DVC,DI: SCHOTTKY,SI,15V,1.2PF,DO-35 (UNITED KINGDOM ONLY) | TK0961 | 1SS97(2)T |
| A1CR432 | 152-0322-00 | | | SEMICON DVC,DI: SCHOTTKY,SI,15V,1.2PF,DO-35 (U.S.A. & GUERNSEY) | TK0961 | 1SS97(2)T |
| A1CR435 | 152-0141-02 | | | SEMICON DVC,DI:SW,SI,30V,150MA,30V,DO-35 | 03508 | DA2527 (1N4152) |
| A1CR438 | 152-0141-02 | | | SEMICON DVC,DI:SW,SI,30V,150MA,30V,DO-35 | 03508 | DA2527 (1N4152) |
| A1CR440 | 152-0141-02 | | | SEMICON DVC,DI:SW,SI,30V,150MA,30V,DO-35 | 03508 | DA2527 (1N4152) |
| A1CR441 | 152-0141-02 | | | SEMICON DVC,DI:SW,SI,30V,150MA,30V,DO-35 | 03508 | DA2527 (1N4152) |
| A1CR442 | 152-0141-02 | | | SEMICON DVC,DI:SW,SI,30V,150MA,30V,DO-35 | 03508 | DA2527 (1N4152) |
| A1CR443 | 152-0141-02 | | | SEMICON DVC,DI:SW,SI,30V,150MA,30V,DO-35 | 03508 | DA2527 (1N4152) |
| A1CR444 | 152-0141-02 | | | SEMICON DVC,DI:SW,SI,30V,150MA,30V,DO-35 | 03508 | DA2527 (1N4152) |
| A1CR445 | 152-0141-02 | | | SEMICON DVC,DI:SW,SI,30V,150MA,30V,DO-35 | 03508 | DA2527 (1N4152) |
| A1CR446 | 152-0141-02 | | | SEMICON DVC,DI:SW,SI,30V,150MA,30V,DO-35 | 03508 | DA2527 (1N4152) |
| A1CR447 | 152-0141-02 | | | SEMICON DVC,DI:SW,SI,30V,150MA,30V,DO-35 | 03508 | DA2527 (1N4152) |
| A1CR510 | 152-0141-02 | | | SEMICON DVC,DI:SW,SI,30V,150MA,30V,DO-35 | 03508 | DA2527 (1N4152) |
| A1CR511 | 152-0141-02 | | | SEMICON DVC,DI:SW,SI,30V,150MA,30V,DO-35 | 03508 | DA2527 (1N4152) |
| A1CR513 | 152-0141-02 | | | SEMICON DVC,DI:SW,SI,30V,150MA,30V,DO-35 | 03508 | DA2527 (1N4152) |

| Component No. | Tektronix Part No. | Serial/Assembly No. Effective | Discont | Name & Description | Mfr. Code | Mfr. Part No. |
|---------------|--------------------|-------------------------------|---------|---|-----------|-----------------|
| A1CR521 | 152-0141-02 | 201795 | | SEMICON DVC, DI: SW, SI, 30V, 150MA, 30V, DO-35 | 03508 | DA2527 (1N4152) |
| A1CR530 | 152-0141-02 | | | SEMICON DVC, DI: SW, SI, 30V, 150MA, 30V, DO-35 (UNITED KINGDOM ONLY) | 03508 | DA2527 (1N4152) |
| A1CR530 | 152-0141-02 | | | SEMICON DVC, DI: SW, SI, 30V, 150MA, 30V, DO-35 (U.S.A. & GUERNSEY) | 03508 | DA2527 (1N4152) |
| A1CR539 | 152-0141-02 | | | SEMICON DVC, DI: SW, SI, 30V, 150MA, 30V, DO-35 | 03508 | DA2527 (1N4152) |
| A1CR540 | 152-0141-02 | | | SEMICON DVC, DI: SW, SI, 30V, 150MA, 30V, DO-35 | 03508 | DA2527 (1N4152) |
| A1CR571 | 152-0141-02 | | | SEMICON DVC, DI: SW, SI, 30V, 150MA, 30V, DO-35 | 03508 | DA2527 (1N4152) |
| A1CR584 | 152-0141-02 | | | SEMICON DVC, DI: SW, SI, 30V, 150MA, 30V, DO-35 | 03508 | DA2527 (1N4152) |
| A1CR588 | 152-0141-02 | | | SEMICON DVC, DI: SW, SI, 30V, 150MA, 30V, DO-35 | 03508 | DA2527 (1N4152) |
| A1CR589 | 152-0141-02 | | | SEMICON DVC, DI: SW, SI, 30V, 150MA, 30V, DO-35 | 03508 | DA2527 (1N4152) |
| A1CR776 | 152-0141-02 | | | SEMICON DVC, DI: SW, SI, 30V, 150MA, 30V, DO-35 | 03508 | DA2527 (1N4152) |
| A1CR780 | 152-0141-02 | | | SEMICON DVC, DI: SW, SI, 30V, 150MA, 30V, DO-35 | 03508 | DA2527 (1N4152) |
| A1CR781 | 152-0141-02 | | | SEMICON DVC, DI: SW, SI, 30V, 150MA, 30V, DO-35 | 03508 | DA2527 (1N4152) |
| A1CR790 | 152-0141-02 | | | SEMICON DVC, DI: SW, SI, 30V, 150MA, 30V, DO-35 | 03508 | DA2527 (1N4152) |
| A1CR791 | 152-0141-02 | | | SEMICON DVC, DI: SW, SI, 30V, 150MA, 30V, DO-35 | 03508 | DA2527 (1N4152) |
| A1CR816 | 152-0141-02 | | | SEMICON DVC, DI: SW, SI, 30V, 150MA, 30V, DO-35 | 03508 | DA2527 (1N4152) |
| A1CR817 | 152-0141-02 | | | SEMICON DVC, DI: SW, SI, 30V, 150MA, 30V, DO-35 | 03508 | DA2527 (1N4152) |
| A1CR818 | 152-0141-02 | | | SEMICON DVC, DI: SW, SI, 30V, 150MA, 30V, DO-35 | 03508 | DA2527 (1N4152) |
| A1CR819 | 152-0141-02 | | | SEMICON DVC, DI: SW, SI, 30V, 150MA, 30V, DO-35 | 03508 | DA2527 (1N4152) |
| A1CR821 | 152-0141-02 | | | SEMICON DVC, DI: SW, SI, 30V, 150MA, 30V, DO-35 | 03508 | DA2527 (1N4152) |
| A1CR822 | 152-0141-02 | | | SEMICON DVC, DI: SW, SI, 30V, 150MA, 30V, DO-35 | 03508 | DA2527 (1N4152) |
| A1CR823 | 152-0141-02 | | | SEMICON DVC, DI: SW, SI, 30V, 150MA, 30V, DO-35 | 03508 | DA2527 (1N4152) |
| A1CR824 | 152-0322-00 | | | SEMICON DVC, DI: SCHOTTKY, SI, 15V, 1.2PF, DO-35 | TK0961 | 1SS97(2)T |
| A1CR825 | 152-0141-02 | | | SEMICON DVC, DI: SW, SI, 30V, 150MA, 30V, DO-35 | 03508 | DA2527 (1N4152) |
| A1CR827 | 152-0141-02 | | | SEMICON DVC, DI: SW, SI, 30V, 150MA, 30V, DO-35 | 03508 | DA2527 (1N4152) |
| A1CR828 | 152-0141-02 | | | SEMICON DVC, DI: SW, SI, 30V, 150MA, 30V, DO-35 | 03508 | DA2527 (1N4152) |
| A1CR829 | 152-0141-02 | | | SEMICON DVC, DI: SW, SI, 30V, 150MA, 30V, DO-35 | 03508 | DA2527 (1N4152) |
| A1CR830 | 152-0141-02 | | | SEMICON DVC, DI: SW, SI, 30V, 150MA, 30V, DO-35 | 03508 | DA2527 (1N4152) |
| A1CR840 | 152-0141-02 | | | SEMICON DVC, DI: SW, SI, 30V, 150MA, 30V, DO-35 | 03508 | DA2527 (1N4152) |
| A1CR845 | 152-0141-02 | | | SEMICON DVC, DI: SW, SI, 30V, 150MA, 30V, DO-35 | 03508 | DA2527 (1N4152) |
| A1CR851 | 152-0242-00 | | | SEMICON DVC, DI: SIG, SI, 225V, 0.2A, DO-7 | 07263 | FDH5004 |
| A1CR853 | 152-0242-00 | | | SEMICON DVC, DI: SIG, SI, 225V, 0.2A, DO-7 | 07263 | FDH5004 |
| A1CR854 | 152-0242-00 | | | SEMICON DVC, DI: SIG, SI, 225V, 0.2A, DO-7 | 07263 | FDH5004 |
| A1CR855 | 152-0242-00 | | | SEMICON DVC, DI: SIG, SI, 225V, 0.2A, DO-7 | 07263 | FDH5004 |
| A1CR912 | 152-0808-00 | | | SEMICON DVC, DI: RECT, SI, 400V, 1.5 A, 50 NS | 80009 | 152-0808-00 |
| A1CR915 | 152-0141-02 | | | SEMICON DVC, DI: SW, SI, 30V, 150MA, 30V, DO-35 | 03508 | DA2527 (1N4152) |
| A1CR923 | 152-0141-02 | | | SEMICON DVC, DI: SW, SI, 30V, 150MA, 30V, DO-35 | 03508 | DA2527 (1N4152) |
| A1CR933 | 152-0141-02 | | | SEMICON DVC, DI: SW, SI, 30V, 150MA, 30V, DO-35 | 03508 | DA2527 (1N4152) |
| A1CR953 | 152-0141-02 | | | SEMICON DVC, DI: SW, SI, 30V, 150MA, 30V, DO-35 | 03508 | DA2527 (1N4152) |
| A1CR983 | 152-0141-02 | | | SEMICON DVC, DI: SW, SI, 30V, 150MA, 30V, DO-35 | 03508 | DA2527 (1N4152) |
| A1CR984 | 152-0413-00 | 200360 | 201732 | SEMICON DVC, DI: RECT, SI, 400V, 1.0A, A59 | 80009 | 152-0413-00 |
| A1CR984 | 152-0414-00 | 201733 | | SEMICON DVC, DI: RECT, SI, 200V, 1.0A, TEK A59 (UNITED KINGDOM ONLY) | 80009 | 152-0414-00 |
| A1CR984 | 152-0414-00 | | | SEMICON DVC, DI: RECT, SI, 200V, 1.0A, TEK A59 (U.S.A. & GUERNSEY) | 80009 | 152-0414-00 |
| A1CR985 | 152-0413-00 | 200360 | 201732 | SEMICON DVC, DI: RECT, SI, 400V, 1.0A, A59 | 80009 | 152-0413-00 |
| A1CR985 | 152-0414-00 | 201733 | | SEMICON DVC, DI: RECT, SI, 200V, 1.0A, TEK A59 (UNITED KINGDOM ONLY) | 80009 | 152-0414-00 |
| A1CR985 | 152-0414-00 | | | SEMICON DVC, DI: RECT, SI, 200V, 1.0A, TEK A59 (U.S.A. & GUERNSEY) | 80009 | 152-0414-00 |
| A1CR986 | 152-0413-00 | 200360 | 201732 | SEMICON DVC, DI: RECT, SI, 400V, 1.0A, A59 | 80009 | 152-0413-00 |
| A1CR986 | 152-0414-00 | 201733 | | SEMICON DVC, DI: RECT, SI, 200V, 1.0A, TEK A59 (UNITED KINGDOM ONLY) | 80009 | 152-0414-00 |
| A1CR986 | 152-0414-00 | | | SEMICON DVC, DI: RECT, SI, 200V, 1.0A, TEK A59 (U.S.A. & GUERNSEY) | 80009 | 152-0414-00 |
| A1CR987 | 152-0413-00 | 200360 | 201732 | SEMICON DVC, DI: RECT, SI, 400V, 1.0A, A59 | 80009 | 152-0413-00 |
| A1CR987 | 152-0414-00 | 201733 | | SEMICON DVC, DI: RECT, SI, 200V, 1.0A, TEK A59 (UNITED KINGDOM ONLY) | 80009 | 152-0414-00 |

Replaceable Electrical Parts - 2225 Service

| Component No. | Tektronix Part No. | Serial/Assembly No. Effective | Discont | Name & Description | Mfr. Code | Mfr. Part No. |
|---------------|--------------------|-------------------------------|---------|--|-----------|-----------------|
| A1CR987 | 152-0414-00 | | | SEMICON DVC,DI:RECT,SI,200V,1.0A,TEK A59 (U.S.A. & GUERNSEY) | 80009 | 152-0414-00 |
| A1CR988 | 152-0413-00 | 200360 | 201732 | SEMICON DVC,DI:RECT,SI,400V,1.0A,A59 | 80009 | 152-0413-00 |
| A1CR988 | 152-0414-00 | 201733 | | SEMICON DVC,DI:RECT,SI,200V,1.0A,TEK A59 (UNITED KINGDOM ONLY) | 80009 | 152-0414-00 |
| A1CR988 | 152-0414-00 | | | SEMICON DVC,DI:RECT,SI,200V,1.0A,TEK A59 (U.S.A. & GUERNSEY) | 80009 | 152-0414-00 |
| A1CR989 | 152-0413-00 | 200360 | 201732 | SEMICON DVC,DI:RECT,SI,400V,1.0A,A59 | 80009 | 152-0413-00 |
| A1CR989 | 152-0414-00 | 201733 | | SEMICON DVC,DI:RECT,SI,200V,1.0A,TEK A59 (UNITED KINGDOM ONLY) | 80009 | 152-0414-00 |
| A1CR989 | 152-0414-00 | | | SEMICON DVC,DI:RECT,SI,200V,1.0A,TEK A59 (U.S.A. & GUERNSEY) | 80009 | 152-0414-00 |
| A1CR990 | 152-0601-01 | | | SEMICON DVC,DI:RECTIFIER,SI,150V,1A,35NS | 04713 | MUR115RL |
| A1CR991 | 152-0601-01 | | | SEMICON DVC,DI:RECTIFIER,SI,150V,1A,35NS | 04713 | MUR115RL |
| A1DS856 | 150-0035-00 | | | LAMP,GLOW:90V MAX,0.3MA,AID-T,WIRE LD | TK0213 | JH005/3011JA |
| A1DS858 | 150-0035-00 | | | LAMP,GLOW:90V MAX,0.3MA,AID-T,WIRE LD | TK0213 | JH005/3011JA |
| A1DS870 | 150-0035-00 | | | LAMP,GLOW:90V MAX,0.3MA,AID-T,WIRE LD | TK0213 | JH005/3011JA |
| A1E102 | 276-0752-00 | 203186 | 203764 | CORE,EM:FERRITE | 34899 | 2743001111 |
| A1E102 | 276-0532-00 | 203765 | | SHLD BEAD,ELEK:FERRITE (UNITED KINGDOM ONLY) | 02114 | 56-590-65/4A6 |
| A1E102 | 276-0532-00 | | | SHLD BEAD,ELEK:FERRITE (U.S.A. & GUERNSEY) | 02114 | 56-590-65/4A6 |
| A1E103 | 276-0752-00 | 203186 | 203764 | CORE,EM:FERRITE | 34899 | 2743001111 |
| A1E103 | 276-0532-00 | 203765 | | SHLD BEAD,ELEK:FERRITE (UNITED KINGDOM ONLY) | 02114 | 56-590-65/4A6 |
| A1E103 | 276-0532-00 | | | SHLD BEAD,ELEK:FERRITE (U.S.A. & GUERNSEY) | 02114 | 56-590-65/4A6 |
| A1E152 | 276-0752-00 | 203186 | 203764 | CORE,EM:FERRITE | 34899 | 2743001111 |
| A1E152 | 276-0532-00 | 203765 | | SHLD BEAD,ELEK:FERRITE (UNITED KINGDOM ONLY) | 02114 | 56-590-65/4A6 |
| A1E152 | 276-0532-00 | | | SHLD BEAD,ELEK:FERRITE (U.S.A. & GUERNSEY) | 02114 | 56-590-65/4A6 |
| A1E153 | 276-0752-00 | 203186 | 203764 | CORE,EM:FERRITE | 34899 | 2743001111 |
| A1E153 | 276-0532-00 | 203765 | | SHLD BEAD,ELEK:FERRITE (UNITED KINGDOM ONLY) | 02114 | 56-590-65/4A6 |
| A1E153 | 276-0532-00 | | | SHLD BEAD,ELEK:FERRITE (U.S.A. & GUERNSEY) | 02114 | 56-590-65/4A6 |
| A1J1 | 204-1034-00 | | | CONN BODY,RCPT:1 X 6,WITH SOLDER TAILS | TKOEM | 52011-0610 |
| A1J2 | 204-1034-00 | | | CONN BODY,RCPT:1 X 6,WITH SOLDER TAILS | TKOEM | 52011-0610 |
| A1J3 | 204-1034-00 | | | CONN BODY,RCPT:1 X 6,WITH SOLDER TAILS | TKOEM | 52011-0610 |
| A1J4 | 204-1034-00 | | | CONN BODY,RCPT:1 X 6,WITH SOLDER TAILS | TKOEM | 52011-0610 |
| A1J5 | 204-1034-00 | | | CONN BODY,RCPT:1 X 6,WITH SOLDER TAILS | TKOEM | 52011-0610 |
| A1J6 | 204-1034-00 | | | CONN BODY,RCPT:1 X 6,WITH SOLDER TAILS | TKOEM | 52011-0610 |
| A1L910 | 108-1376-00 | | | COIL,RF:FXD,POWER INDUCTOR | TKOEG | ORDER BY DESCR |
| A1L970 | 108-1375-00 | | | COIL,RF:FXD,82UH,1A | TK00A | RL-1218-820K-1A |
| A1L986 | 108-1375-00 | | | COIL,RF:FXD,82UH,1A | TK00A | RL-1218-820K-1A |
| A1L988 | 108-1375-00 | | | COIL,RF:FXD,82UH,1A | TK00A | RL-1218-820K-1A |
| A1L990 | 108-1375-00 | | | COIL,RF:FXD,82UH,1A | TK00A | RL-1218-820K-1A |
| A1P900 | 198-5589-00 | 200001 | 208557 | WIRE SET,ELEC: | TKOEE | ORDER BY DESCR |
| A1P900 | 198-5589-01 | 208558 | | WIRE SET,ELEC: | TK0FV | ORDER BY DESCR |
| A1Q102 | 151-0712-00 | | | TRANSISTOR:PMP,SI,TO-92 | 80009 | 151-0712-00 |
| A1Q103 | 151-0712-00 | | | TRANSISTOR:PMP,SI,TO-92 | 80009 | 151-0712-00 |
| A1Q104 | 151-0190-00 | | | TRANSISTOR:NPN,SI,TO-92 | 80009 | 151-0190-00 |
| A1Q105 | 151-0190-00 | | | TRANSISTOR:NPN,SI,TO-92 | 80009 | 151-0190-00 |
| A1Q114 | 151-0190-00 | | | TRANSISTOR:NPN,SI,TO-92 | 80009 | 151-0190-00 |
| A1Q115 | 151-0190-00 | | | TRANSISTOR:NPN,SI,TO-92 | 80009 | 151-0190-00 |
| A1Q152 | 151-0712-00 | | | TRANSISTOR:PMP,SI,TO-92 | 80009 | 151-0712-00 |
| A1Q153 | 151-0712-00 | | | TRANSISTOR:PMP,SI,TO-92 | 80009 | 151-0712-00 |
| A1Q154 | 151-0190-00 | | | TRANSISTOR:NPN,SI,TO-92 | 80009 | 151-0190-00 |
| A1Q155 | 151-0190-00 | | | TRANSISTOR:NPN,SI,TO-92 | 80009 | 151-0190-00 |

| Component No. | Tektronix Part No. | Serial/Assembly No. Effective | Discont | Name & Description | Mfr. Code | Mfr. Part No. |
|---------------|--------------------|-------------------------------|---------|---|-----------|---------------|
| A1Q164 | 151-0190-00 | | | TRANSISTOR: NPN, SI, TO-92 | 80009 | 151-0190-00 |
| A1Q165 | 151-0190-00 | | | TRANSISTOR: NPN, SI, TO-92 | 80009 | 151-0190-00 |
| A1Q202 | 151-0471-00 | 200360 | 202907 | TRANSISTOR: NPN, SI, TO-92 | 04713 | SPS8619 |
| A1Q202 | 151-0711-02 | 202908 | | TRANSISTOR: NPN, SI, TO-92 (UNITED KINGDOM ONLY) | 27014 | X42094B |
| A1Q202 | 151-0711-02 | | | TRANSISTOR: NPN, SI, TO-92 (U.S.A. & GUERNSEY) | 27014 | X42094B |
| A1Q203 | 151-0471-00 | 200360 | 202907 | TRANSISTOR: NPN, SI, TO-92 | 04713 | SPS8619 |
| A1Q203 | 151-0711-02 | 202908 | | TRANSISTOR: NPN, SI, TO-92 (UNITED KINGDOM ONLY) | 27014 | X42094B |
| A1Q203 | 151-0711-02 | | | TRANSISTOR: NPN, SI, TO-92 (U.S.A. & GUERNSEY) | 27014 | X42094B |
| A1Q206 | 151-0221-00 | | | TRANSISTOR: PNP, SI, TO-92 | 80009 | 151-0221-00 |
| A1Q207 | 151-0221-00 | | | TRANSISTOR: PNP, SI, TO-92 | 80009 | 151-0221-00 |
| A1Q230 | 151-0221-00 | | | TRANSISTOR: PNP, SI, TO-92 | 80009 | 151-0221-00 |
| A1Q231 | 151-0221-00 | | | TRANSISTOR: PNP, SI, TO-92 | 80009 | 151-0221-00 |
| A1Q254 | 151-0190-00 | | | TRANSISTOR: NPN, SI, TO-92 | 80009 | 151-0190-00 |
| A1Q255 | 151-0190-00 | | | TRANSISTOR: NPN, SI, TO-92 | 80009 | 151-0190-00 |
| A1Q256 | 151-0869-00 | | | TRANSISTOR: NPN, SI, TO-39 | TK0EF | 2N3866 |
| A1Q257 | 151-0869-00 | | | TRANSISTOR: NPN, SI, TO-39 | TK0EF | 2N3866 |
| A1Q283 | 151-0736-00 | | | TRANSISTOR: NPN, SI, TO-92 | 80009 | 151-0736-00 |
| A1Q284 | 151-0712-00 | | | TRANSISTOR: PNP, SI, TO-92 | 80009 | 151-0712-00 |
| A1Q285 | 151-0712-00 | | | TRANSISTOR: PNP, SI, TO-92 | 80009 | 151-0712-00 |
| A1Q363 | 151-0711-01 | | | TRANSISTOR: NPN, SI, TO-92 | 04713 | SPS8608M |
| A1Q365 | 151-0711-01 | | | TRANSISTOR: NPN, SI, TO-92 | 04713 | SPS8608M |
| A1Q366 | 151-0712-00 | | | TRANSISTOR: PNP, SI, TO-92 | 80009 | 151-0712-00 |
| A1Q367 | 151-0712-00 | | | TRANSISTOR: PNP, SI, TO-92 | 80009 | 151-0712-00 |
| A1Q368 | 151-0712-00 | | | TRANSISTOR: PNP, SI, TO-92 | 80009 | 151-0712-00 |
| A1Q400 | 151-0712-00 | | | TRANSISTOR: PNP, SI, TO-92 | 80009 | 151-0712-00 |
| A1Q401 | 151-0712-00 | | | TRANSISTOR: PNP, SI, TO-92 | 80009 | 151-0712-00 |
| A1Q415 | 151-0188-00 | | | TRANSISTOR: PNP, SI, TO-92 | 80009 | 151-0188-00 |
| A1Q420 | 151-0190-00 | 202908 | | TRANSISTOR: NPN, SI, TO-92 (UNITED KINGDOM ONLY) | 80009 | 151-0190-00 |
| A1Q420 | 151-0190-00 | | | TRANSISTOR: NPN, SI, TO-92 (U.S.A. & GUERNSEY) | 80009 | 151-0190-00 |
| A1Q435 | 151-0188-00 | | | TRANSISTOR: PNP, SI, TO-92 | 80009 | 151-0188-00 |
| A1Q440 | 151-0188-00 | | | TRANSISTOR: PNP, SI, TO-92 | 80009 | 151-0188-00 |
| A1Q465 | 151-0188-00 | | | TRANSISTOR: PNP, SI, TO-92 | 80009 | 151-0188-00 |
| A1Q487 | 151-0188-00 | | | TRANSISTOR: PNP, SI, TO-92 | 80009 | 151-0188-00 |
| A1Q488 | 151-0188-00 | | | TRANSISTOR: PNP, SI, TO-92 | 80009 | 151-0188-00 |
| A1Q489 | 151-0188-00 | | | TRANSISTOR: PNP, SI, TO-92 | 80009 | 151-0188-00 |
| A1Q514 | 151-0188-00 | | | TRANSISTOR: PNP, SI, TO-92 | 80009 | 151-0188-00 |
| A1Q535 | 151-0188-00 | | | TRANSISTOR: PNP, SI, TO-92 | 80009 | 151-0188-00 |
| A1Q536 | 151-0188-00 | | | TRANSISTOR: PNP, SI, TO-92 | 80009 | 151-0188-00 |
| A1Q770 | 151-0188-00 | | | TRANSISTOR: PNP, SI, TO-92 | 80009 | 151-0188-00 |
| A1Q775 | 151-0347-02 | | | TRANSISTOR: NPN, SI, TO-92 | 56289 | CT7916 |
| A1Q776 | 151-0350-00 | | | TRANSISTOR: PNP, SI, TO-92 | 04713 | 2N5401 |
| A1Q779 | 151-0350-00 | | | TRANSISTOR: PNP, SI, TO-92 | 04713 | 2N5401 |
| A1Q780 | 151-0190-00 | | | TRANSISTOR: NPN, SI, TO-92 | 80009 | 151-0190-00 |
| A1Q785 | 151-0347-02 | | | TRANSISTOR: NPN, SI, TO-92 | 56289 | CT7916 |
| A1Q789 | 151-0350-00 | | | TRANSISTOR: PNP, SI, TO-92 | 04713 | 2N5401 |
| A1Q804 | 151-0188-00 | | | TRANSISTOR: PNP, SI, TO-92 | 80009 | 151-0188-00 |
| A1Q817 | 151-0190-00 | | | TRANSISTOR: NPN, SI, TO-92 | 80009 | 151-0190-00 |
| A1Q825 | 151-0424-00 | | | TRANSISTOR: NPN, SI, TO-92 | 80009 | 151-0424-00 |
| A1Q829 | 151-0199-00 | | | TRANSISTOR: PNP, SI, TO-92 | 80009 | 151-0199-00 |
| A1Q835 | 151-0199-00 | | | TRANSISTOR: PNP, SI, TO-92 | 80009 | 151-0199-00 |
| A1Q840 | 151-0347-02 | | | TRANSISTOR: NPN, SI, TO-92 | 56289 | CT7916 |
| A1Q845 | 151-0350-00 | | | TRANSISTOR: PNP, SI, TO-92 | 04713 | 2N5401 |
| A1Q885 | 151-0443-00 | | | TRANSISTOR: PNP, SI, TO-92 | 80009 | 151-0443-00 |

Replaceable Electrical Parts - 2225 Service

| Component No. | Tektronix Part No. | Serial/Assembly No. Effective | Discont | Name & Description | Mfr. Code | Mfr. Part No. |
|---------------|--------------------|-------------------------------|---------|---|-----------|------------------|
| A1Q911 | 151-0347-02 | | | TRANSISTOR: NPN, SI, TO-92 | 56289 | CT7916 |
| A1Q912 | 151-0350-00 | | | TRANSISTOR: PNP, SI, TO-92 | 04713 | 2N5401 |
| A1Q913 | 151-0462-00 | | | TRANSISTOR: PNP, SI, TO-220 | 80009 | 151-0462-00 |
| A1Q918 | 151-0188-00 | | | TRANSISTOR: PNP, SI, TO-92 | 80009 | 151-0188-00 |
| A1Q921 | 151-0276-01 | | | TRANSISTOR: PNP, SI, TO-92 | TK1016 | S1423-TPE2 |
| A1Q923 | 151-0476-02 | | | TRANSISTOR: SELECTED | 80009 | 151-0476-02 |
| A1Q930 | 151-0424-00 | | | TRANSISTOR: NPN, SI, TO-92 | 80009 | 151-0424-00 |
| A1Q940 | 151-0347-02 | | | TRANSISTOR: NPN, SI, TO-92 | 56289 | CT7916 |
| A1Q950 | 151-0462-00 | | | TRANSISTOR: PNP, SI, TO-220 | 80009 | 151-0462-00 |
| A1Q960 | 151-0424-00 | | | TRANSISTOR: NPN, SI, TO-92 | 80009 | 151-0424-00 |
| A1Q970 | 151-0347-02 | | | TRANSISTOR: NPN, SI, TO-92 | 56289 | CT7916 |
| A1Q980 | 151-0462-00 | | | TRANSISTOR: PNP, SI, TO-220 | 80009 | 151-0462-00 |
| A1R100 | 315-0510-00 | | | RES, FXD, FILM: 51 OHM, 5%, 0.25W | 19701 | 5043CX51R00J |
| A1R101 | 315-0510-00 | | | RES, FXD, FILM: 51 OHM, 5%, 0.25W | 19701 | 5043CX51R00J |
| A1R102 | 321-0155-00 | | | RES, FXD, FILM: 402 OHM, 1%, 0.125W, TC=T0 | 07716 | CEAD402R0F |
| A1R103 | 321-0155-00 | | | RES, FXD, FILM: 402 OHM, 1%, 0.125W, TC=T0 | 07716 | CEAD402R0F |
| A1R104 | 321-0089-00 | | | RES, FXD, FILM: 82.5 OHM, 1%, 0.125W, TC=T0 | 91637 | CMF55116G82R50F |
| A1R105 | 321-0089-00 | | | RES, FXD, FILM: 82.5 OHM, 1%, 0.125W, TC=T0 | 91637 | CMF55116G82R50F |
| A1R106 | 321-0163-00 | | | RES, FXD, FILM: 487 OHM, 1%, 0.125W, TC=T0 | 07716 | CEAD487R0F |
| A1R107 | 311-2355-00 | | | RES, VAR, NONWV: TRMR, 100 OHM, 20%, 0.5W | K8788 | TC10-LV10-100R/A |
| A1R108 | 321-0223-00 | | | RES, FXD, FILM: 2.05K OHM, 1%, 0.125W, TC=T0 | 19701 | 5033ED2K05F |
| A1R109 | 321-0223-00 | | | RES, FXD, FILM: 2.05K OHM, 1%, 0.125W, TC=T0 | 19701 | 5033ED2K05F |
| A1R110 | 321-0199-00 | | | RES, FXD, FILM: 1.15K OHM, 1%, 0.125W, TC=T0 | 07716 | CEAD11500F |
| A1R111 | 321-0199-00 | | | RES, FXD, FILM: 1.15K OHM, 1%, 0.125W, TC=T0 | 07716 | CEAD11500F |
| A1R112 | 311-2361-00 | | | RES, VAR, NONWV: TRMR, 10K OHM, 0.5W | K8788 | TC10-LV10-10K/A |
| A1R114 | 321-0223-00 | | | RES, FXD, FILM: 2.05K OHM, 1%, 0.125W, TC=T0 | 19701 | 5033ED2K05F |
| A1R115 | 321-0223-00 | | | RES, FXD, FILM: 2.05K OHM, 1%, 0.125W, TC=T0 | 19701 | 5033ED2K05F |
| A1R116 | 315-0101-00 | 200360 | 202907 | RES, FXD, FILM: 100 OHM, 5%, 0.25W (UNITED KINGDOM ONLY) | 57668 | NTR25J-E 100E |
| A1R117 | 315-0101-00 | 200360 | 202907 | RES, FXD, FILM: 100 OHM, 5%, 0.25W | 57668 | NTR25J-E 100E |
| A1R117 | 315-0510-00 | 202908 | | RES, FXD, FILM: 51 OHM, 5%, 0.25W (UNITED KINGDOM ONLY) | 19701 | 5043CX51R00J |
| A1R117 | 315-0510-00 | | | RES, FXD, FILM: 51 OHM, 5%, 0.25W (U.S.A. & GUERNSEY) | 19701 | 5043CX51R00J |
| A1R118 | 315-0821-00 | | | RES, FXD, FILM: 820 OHM, 5%, 0.25W | 19701 | 5043CX820R0J |
| A1R119 | 315-0821-00 | | | RES, FXD, FILM: 820 OHM, 5%, 0.25W | 19701 | 5043CX820R0J |
| A1R120 | 321-0123-00 | | | RES, FXD, FILM: 187 OHM, 1%, 0.125W, TC=T0 | 07716 | CEAD187R0F |
| A1R121 | 321-0123-00 | | | RES, FXD, FILM: 187 OHM, 1%, 0.125W, TC=T0 | 07716 | CEAD187R0F |
| A1R122 | 321-0089-00 | | | RES, FXD, FILM: 82.5 OHM, 1%, 0.125W, TC=T0 | 91637 | CMF55116G82R50F |
| A1R124 | 315-0472-00 | | | RES, FXD, FILM: 4.7K OHM, 5%, 0.25W | 57668 | NTR25J-E04K7 |
| A1R125 | 315-0392-00 | | | RES, FXD, FILM: 3.9K OHM, 5%, 0.25W | 57668 | NTR25J-E03K9 |
| A1R126 | 315-0162-00 | | | RES, FXD, FILM: 1.6K OHM, 5%, 0.25W | 19701 | 5043CX1K600J |
| A1R127 | 321-0068-00 | | | RES, FXD, FILM: 49.9 OHM, 0.1%, 0.125W, TC=T0 | 91637 | CMF55116G49R90F |
| A1R128 | 315-0752-00 | | | RES, FXD, FILM: 7.5K OHM, 5%, 0.25W | 57668 | NTR25J-E07K5 |
| A1R130 | 315-0510-00 | | | RES, FXD, FILM: 51 OHM, 5%, 0.25W | 19701 | 5043CX51R00J |
| A1R131 | 315-0510-00 | | | RES, FXD, FILM: 51 OHM, 5%, 0.25W | 19701 | 5043CX51R00J |
| A1R132 | 315-0511-00 | | | RES, FXD, FILM: 510 OHM, 5%, 0.25W | 19701 | 5043CX510R0J |
| A1R133 | 315-0101-00 | | | RES, FXD, FILM: 100 OHM, 5%, 0.25W | 57668 | NTR25J-E 100E |
| A1R135 | 315-0101-00 | | | RES, FXD, FILM: 100 OHM, 5%, 0.25W | 57668 | NTR25J-E 100E |
| A1R136 | 315-0101-00 | | | RES, FXD, FILM: 100 OHM, 5%, 0.25W | 57668 | NTR25J-E 100E |
| A1R139 | 315-0102-00 | B010100 | E209928 | RES, FXD, FILM: 1K OHM, 5%, 0.25W | 57668 | NTR25JE01K0 |
| A1R139 | 315-0102-00 | E209929 | | RES, FXD, FILM: 1K OHM, 5%, 0.25W | 57668 | NTR25JE01K0 |
| A1R139 | 315-0222-00 | G100809 | | RES, FXD, FILM: 2.2K OHM, 5%, 0.25W | 57668 | NTR25J-E02K2 |
| A1R140 | 311-2364-00 | B010100 | E209929 | RES, VAR, NONWV: TRMR, 4.7K OHM, 0.5W | K8788 | TC10-LV10-4K7/A |
| A1R142 | 315-0101-00 | | | RES, FXD, FILM: 100 OHM, 5%, 0.25W | 57668 | NTR25J-E 100E |
| A1R143 | 315-0101-00 | | | RES, FXD, FILM: 100 OHM, 5%, 0.25W | 57668 | NTR25J-E 100E |
| A1R144 | 315-0471-00 | | | RES, FXD, FILM: 470 OHM, 5%, 0.25W | 57668 | NTR25J-E470E |
| A1R145 | 311-2354-00 | | | RES, VAR, NONWV: TRMR, 4.7K OHM, 0.5W | K8788 | TC10-LH2.5-4K7/A |
| A1R150 | 315-0510-00 | | | RES, FXD, FILM: 51 OHM, 5%, 0.25W | 19701 | 5043CX51R00J |

| Component No. | Tektronix Part No. | Serial/Assembly No. Effective | Discont | Name & Description | Mfr. Code | Mfr. Part No. |
|---------------|--------------------|-------------------------------|---------|---|-----------|------------------|
| A1R151 | 315-0510-00 | | | RES,FXD,FILM:51 OHM,5%,0.25W | 19701 | 5043CX51R00J |
| A1R152 | 321-0155-00 | | | RES,FXD,FILM:402 OHM,1%,0.125W,TC=TO | 07716 | CEAD402R0F |
| A1R153 | 321-0155-00 | | | RES,FXD,FILM:402 OHM,1%,0.125W,TC=TO | 07716 | CEAD402R0F |
| A1R154 | 321-0089-00 | | | RES,FXD,FILM:82.5 OHM,1%,0.125W,TC=TO | 91637 | CMF55116682R50F |
| A1R155 | 321-0089-00 | | | RES,FXD,FILM:82.5 OHM,1%,0.125W,TC=TO | 91637 | CMF55116682R50F |
| A1R156 | 321-0163-00 | | | RES,FXD,FILM:487 OHM,1%,0.125W,TC=TO | 07716 | CEAD487R0F |
| A1R157 | 311-2355-00 | | | RES,VAR,NONW:TRMR,100 OHM,20%,0.5W | K8788 | TC10-LV10-100R/A |
| A1R158 | 321-0223-00 | | | RES,FXD,FILM:2.05K OHM,1%,0.125W,TC=TO | 19701 | 5033ED2K05F |
| A1R159 | 321-0223-00 | | | RES,FXD,FILM:2.05K OHM,1%,0.125W,TC=TO | 19701 | 5033ED2K05F |
| A1R160 | 321-0199-00 | | | RES,FXD,FILM:1.15K OHM,1%,0.125W,TC=TO | 07716 | CEAD11500F |
| A1R161 | 321-0199-00 | | | RES,FXD,FILM:1.15K OHM,1%,0.125W,TC=TO | 07716 | CEAD11500F |
| A1R162 | 311-2361-00 | | | RES,VAR,NONW:TRMR,10K OHM,0.5W | K8788 | TC10-LV10-10K/A |
| A1R164 | 321-0223-00 | | | RES,FXD,FILM:2.05K OHM,1%,0.125W,TC=TO | 19701 | 5033ED2K05F |
| A1R165 | 321-0223-00 | | | RES,FXD,FILM:2.05K OHM,1%,0.125W,TC=TO | 19701 | 5033ED2K05F |
| A1R166 | 315-0101-00 | 200360 | 202907 | RES,FXD,FILM:100 OHM,5%,0.25W (UNITED KINGDOM ONLY) | 57668 | NTR25J-E 100E |
| A1R167 | 315-0101-00 | 200360 | 202907 | RES,FXD,FILM:100 OHM,5%,0.25W | 57668 | NTR25J-E 100E |
| A1R167 | 315-0510-00 | 202908 | | RES,FXD,FILM:51 OHM,5%,0.25W (UNITED KINGDOM ONLY) | 19701 | 5043CX51R00J |
| A1R167 | 315-0510-00 | | | RES,FXD,FILM:51 OHM,5%,0.25W (U.S.A. & GUERNSEY) | 19701 | 5043CX51R00J |
| A1R168 | 315-0821-00 | | | RES,FXD,FILM:820 OHM,5%,0.25W | 19701 | 5043CX820R0J |
| A1R169 | 315-0821-00 | | | RES,FXD,FILM:820 OHM,5%,0.25W | 19701 | 5043CX820R0J |
| A1R170 | 321-0123-00 | | | RES,FXD,FILM:187 OHM,1%,0.125W,TC=TO | 07716 | CEAD187R0F |
| A1R171 | 321-0123-00 | | | RES,FXD,FILM:187 OHM,1%,0.125W,TC=TO | 07716 | CEAD187R0F |
| A1R172 | 321-0089-00 | | | RES,FXD,FILM:82.5 OHM,1%,0.125W,TC=TO | 91637 | CMF55116682R50F |
| A1R174 | 315-0472-00 | | | RES,FXD,FILM:4.7K OHM,5%,0.25W | 57668 | NTR25J-E04K7 |
| A1R175 | 315-0392-00 | | | RES,FXD,FILM:3.9K OHM,5%,0.25W | 57668 | NTR25J-E03K9 |
| A1R176 | 315-0162-00 | | | RES,FXD,FILM:1.6K OHM,5%,0.25W | 19701 | 5043CX1K600J |
| A1R177 | 321-0068-00 | | | RES,FXD,FILM:49.9 OHM,0.1%,0.125W,TC=TO | 91637 | CMF55116649R90F |
| A1R178 | 315-0752-00 | | | RES,FXD,FILM:7.5K OHM,5%,0.25W | 57668 | NTR25J-E07K5 |
| A1R180 | 315-0510-00 | | | RES,FXD,FILM:51 OHM,5%,0.25W | 19701 | 5043CX51R00J |
| A1R181 | 315-0510-00 | | | RES,FXD,FILM:51 OHM,5%,0.25W | 19701 | 5043CX51R00J |
| A1R182 | 315-0511-00 | | | RES,FXD,FILM:510 OHM,5%,0.25W | 19701 | 5043CX510R0J |
| A1R183 | 315-0101-00 | | | RES,FXD,FILM:100 OHM,5%,0.25W | 57668 | NTR25J-E 100E |
| A1R185 | 315-0101-00 | | | RES,FXD,FILM:100 OHM,5%,0.25W | 57668 | NTR25J-E 100E |
| A1R186 | 315-0101-00 | | | RES,FXD,FILM:100 OHM,5%,0.25W | 57668 | NTR25J-E 100E |
| A1R189 | 315-0392-00 | | | RES,FXD,FILM:3.9K OHM,5%,0.25W | 57668 | NTR25J-E03K9 |
| A1R192 | 315-0101-00 | | | RES,FXD,FILM:100 OHM,5%,0.25W | 57668 | NTR25J-E 100E |
| A1R193 | 315-0101-00 | | | RES,FXD,FILM:100 OHM,5%,0.25W | 57668 | NTR25J-E 100E |
| A1R194 | 315-0471-00 | | | RES,FXD,FILM:470 OHM,5%,0.25W | 57668 | NTR25J-E470E |
| A1R195 | 311-2354-00 | | | RES,VAR,NONW:TRMR,4.7K OHM,0.5W | K8788 | TC10-LH2.5-4K7/A |
| A1R202 | 321-0178-00 | | | RES,FXD,FILM:698 OHM,1%,0.125W,TC=TO | 07716 | CEAD698R0F |
| A1R203 | 321-0178-00 | | | RES,FXD,FILM:698 OHM,1%,0.125W,TC=TO | 07716 | CEAD698R0F |
| A1R204 | 321-0089-00 | | | RES,FXD,FILM:82.5 OHM,1%,0.125W,TC=TO | 91637 | CMF55116682R50F |
| A1R206 | 315-0271-00 | | | RES,FXD,FILM:270 OHM,5%,0.25W | 57668 | NTR25J-E270E |
| A1R207 | 315-0271-00 | | | RES,FXD,FILM:270 OHM,5%,0.25W | 57668 | NTR25J-E270E |
| A1R212 | 321-0089-00 | | | RES,FXD,FILM:82.5 OHM,1%,0.125W,TC=TO | 91637 | CMF55116682R50F |
| A1R213 | 321-0089-00 | | | RES,FXD,FILM:82.5 OHM,1%,0.125W,TC=TO | 91637 | CMF55116682R50F |
| A1R215 | 315-0241-00 | | | RES,FXD,FILM:240 OHM,5%,0.25W | 19701 | 5043CX240R0J |
| A1R216 | 321-0163-00 | | | RES,FXD,FILM:487 OHM,1%,0.125W,TC=TO | 07716 | CEAD487R0F |
| A1R217 | 321-0163-00 | | | RES,FXD,FILM:487 OHM,1%,0.125W,TC=TO | 07716 | CEAD487R0F |
| A1R218 | 321-0109-00 | | | RES,FXD,FILM:133 OHM,1%,0.125W,TC=TO | 07716 | CEAD133R0F |
| A1R219 | 321-0109-00 | | | RES,FXD,FILM:133 OHM,1%,0.125W,TC=TO | 07716 | CEAD133R0F |
| A1R222 | 321-0318-00 | | | RES,FXD,FILM:20.0K OHM,1%,0.125W,TC=TO | 19701 | 5033ED20K00F |
| A1R223 | 321-0318-00 | | | RES,FXD,FILM:20.0K OHM,1%,0.125W,TC=TO | 19701 | 5033ED20K00F |
| A1R225 | 315-0752-00 | 200360 | 207594 | RES,FXD,FILM:7.5K OHM,5%,0.25W | 57668 | NTR25J-E07K5 |
| A1R225 | 321-0255-00 | 207595 | | RES,FXD,FILM:4.42K OHM,1%,0.125W,TC=TO (UNITED KINGDOM ONLY) | 19701 | 5033ED4K420F |

Replaceable Electrical Parts - 2225 Service

| Component No. | Tektronix Part No. | Serial/Assembly No. Effective | Discont | Name & Description | Mfr. Code | Mfr. Part No. |
|---------------|--------------------|-------------------------------|---------|--|-----------|------------------|
| A1R225 | 321-0255-00 | | | RES, FXD, FILM: 4.42K OHM, 1%, 0.125W, TC=T0 (U.S.A. & GUERNSEY) | 19701 | 5033ED4K420F |
| A1R226 | 321-0361-00 | 200360 | 207594 | RES, FXD, FILM: 56.2K OHM, 1%, 0.125W, TC=T0 | 07716 | CEAD56201F |
| A1R226 | 321-0337-00 | 207595 | | RES, FXD, FILM: 31.6K OHM, 1%, 0.125W, TC=T0 (UNITED KINGDOM ONLY) | 07716 | CEAD31601F |
| A1R226 | 321-0337-00 | | | RES, FXD, FILM: 31.6K OHM, 1%, 0.125W, TC=T0 (U.S.A. & GUERNSEY) | 07716 | CEAD31601F |
| A1R230 | 321-0093-00 | | | RES, FXD, FILM: 90.9 OHM, 1%, 0.125W, TC=T0 | 19701 | 5043ED90R90F |
| A1R231 | 321-0093-00 | | | RES, FXD, FILM: 90.9 OHM, 1%, 0.125W, TC=T0 | 19701 | 5043ED90R90F |
| A1R233 | 321-0089-00 | | | RES, FXD, FILM: 82.5 OHM, 1%, 0.125W, TC=T0 | 91637 | CMF55116G82R50F |
| A1R234 | 321-0068-00 | | | RES, FXD, FILM: 49.9 OHM, 0.1%, 0.125W, TC=T0 | 91637 | CMF55116G49R90F |
| A1R235 | 321-0068-00 | | | RES, FXD, FILM: 49.9 OHM, 0.1%, 0.125W, TC=T0 | 91637 | CMF55116G49R90F |
| A1R236 | 315-0621-00 | 200360 | 205110 | RES, FXD, FILM: 620 OHM, 5%, 0.25W | 57668 | NTR25J-E620E |
| A1R236 | 321-0172-00 | 205111 | | RES, FXD, FILM: 604 OHM, 1%, 0.125W, TC=T0 (UNITED KINGDOM ONLY) | 19701 | 5033ED604R0F |
| A1R236 | 321-0172-00 | | | RES, FXD, FILM: 604 OHM, 1%, 0.125W, TC=T0 (U.S.A. & GUERNSEY) | 19701 | 5033ED604R0F |
| A1R239 | 315-0512-00 | | | RES, FXD, FILM: 5.1K OHM, 5%, 0.25W | 57668 | NTR25J-E05K1 |
| A1R240 | 311-2365-00 | | | RES, VAR, NONW: TRMR, 470 OHM, 0.75W | K8788 | TC10-LV10-470K/A |
| A1R241 | 311-2364-00 | | | RES, VAR, NONW: TRMR, 4.7K OHM, 0.5W | K8788 | TC10-LV10-4K7/A |
| A1R242 | 315-0273-00 | | | RES, FXD, FILM: 27K OHM, 5%, 0.25W | 57668 | NTR25J-E27K0 |
| A1R244 | 321-0172-00 | | | RES, FXD, FILM: 604 OHM, 1%, 0.125W, TC=T0 | 19701 | 5033ED604R0F |
| A1R245 | 321-0172-00 | | | RES, FXD, FILM: 604 OHM, 1%, 0.125W, TC=T0 | 19701 | 5033ED604R0F |
| A1R250 | 315-0221-00 | | | RES, FXD, FILM: 220 OHM, 5%, 0.25W | 57668 | NTR25J-E220E |
| A1R251 | 315-0221-00 | | | RES, FXD, FILM: 220 OHM, 5%, 0.25W | 57668 | NTR25J-E220E |
| A1R254 | 321-0109-00 | | | RES, FXD, FILM: 133 OHM, 1%, 0.125W, TC=T0 | 07716 | CEAD133R0F |
| A1R255 | 321-0109-00 | | | RES, FXD, FILM: 133 OHM, 1%, 0.125W, TC=T0 | 07716 | CEAD133R0F |
| A1R256 | 307-1361-00 | | | RES, FXD, FILM: 2.2K OHM, 1%, 0.5W, TC=15PPM | K1439 | MK3 |
| A1R257 | 307-1361-00 | | | RES, FXD, FILM: 2.2K OHM, 1%, 0.5W, TC=15PPM | K1439 | MK3 |
| A1R258 | 315-0181-00 | | | RES, FXD, FILM: 180 OHM, 5%, 0.25W | 57668 | NTR25J-E180E |
| A1R259 | 315-0181-00 | | | RES, FXD, FILM: 180 OHM, 5%, 0.25W | 57668 | NTR25J-E180E |
| A1R261 | 307-1340-00 | | | RES, FXD, FILM: 22 OHM, 5%, 1W | K1439 | 5K/5 |
| A1R262 | 315-0103-00 | | | RES, FXD, FILM: 10K OHM, 5%, 0.25W | 19701 | 5043CX10K00J |
| A1R266 | 308-0907-00 | B010100 | B010139 | RES, FXD, WW: 330 OHM, 5%, 4W | K2504 | 155-469 |
| A1R266 | 308-0936-00 | B010140 | | RES, FXD, WW: 330OHM, 5%, 7W | U1395 | ORDER BY DESCR |
| A1R267 | 308-0907-00 | B010100 | B010139 | RES, FXD, WW: 330 OHM, 5%, 4W | K2504 | 155-469 |
| A1R267 | 308-0936-00 | B010140 | | RES, FXD, WW: 330OHM, 5%, 7W | U1395 | ORDER BY DESCR |
| A1R268 | 303-0155-00 | B010140 | | RES, FXD, CMPSN: 1.5M OHM, 5%, 1W | 01121 | GB1555 |
| A1R272 | 301-0101-00 | | | RES, FXD, FILM: 100 OHM, 5%, 0.5W | 01121 | EB1015 |
| A1R273 | 301-0101-00 | | | RES, FXD, FILM: 100 OHM, 5%, 0.5W | 01121 | EB1015 |
| A1R279 | 315-0223-00 | | | RES, FXD, FILM: 22K OHM, 5%, 0.25W | 19701 | 5043CX22K00J92U |
| A1R281 | 315-0821-00 | 200360 | 202907 | RES, FXD, FILM: 820 OHM, 5%, 0.25W | 19701 | 5043CX820R0J |
| A1R281 | 315-0272-00 | 202908 | 205110 | RES, FXD, FILM: 2.7K OHM, 5%, 0.25W | 57668 | NTR25J-E02K7 |
| A1R281 | 321-0233-00 | 205111 | | RES, FXD, FILM: 2.61K OHM, 1%, 0.125W, TC=T0 (UNITED KINGDOM ONLY) | 07716 | CEAD26100F |
| A1R281 | 321-0233-00 | | | RES, FXD, FILM: 2.61K OHM, 1%, 0.125W, TC=T0 (U.S.A. & GUERNSEY) | 07716 | CEAD26100F |
| A1R282 | 315-0302-00 | 200360 | 202907 | RES, FXD, FILM: 3K OHM, 5%, 0.25W | 57668 | NTR25J-E03K0 |
| A1R282 | 315-0182-00 | 202908 | | RES, FXD, FILM: 1.8K OHM, 5%, 0.25W (UNITED KINGDOM ONLY) | 57668 | NTR25J-E1K8 |
| A1R282 | 315-0182-00 | | | RES, FXD, FILM: 1.8K OHM, 5%, 0.25W (U.S.A. & GUERNSEY) | 57668 | NTR25J-E1K8 |
| A1R283 | 315-0471-00 | | | RES, FXD, FILM: 470 OHM, 5%, 0.25W | 57668 | NTR25J-E470E |
| A1R284 | 315-0621-00 | 200360 | 205110 | RES, FXD, FILM: 620 OHM, 5%, 0.25W | 57668 | NTR25J-E620E |
| A1R284 | 321-0172-00 | 205111 | | RES, FXD, FILM: 604 OHM, 1%, 0.125W, TC=T0 (UNITED KINGDOM ONLY) | 19701 | 5033ED604R0F |
| A1R284 | 321-0172-00 | | | RES, FXD, FILM: 604 OHM, 1%, 0.125W, TC=T0 (U.S.A. & GUERNSEY) | 19701 | 5033ED604R0F |
| A1R285 | 315-0511-00 | | | RES, FXD, FILM: 510 OHM, 5%, 0.25W | 19701 | 5043CX510R0J |
| A1R286 | 321-0068-00 | | | RES, FXD, FILM: 49.9 OHM, 0.1%, 0.125W, TC=T0 | 91637 | CMF55116G49R90F |

| Component No. | Tektronix Part No. | Serial/Assembly No. Effective | Discont | Name & Description | Mfr. Code | Mfr. Part No. |
|---------------|--------------------|-------------------------------|---------|---|-----------|-----------------|
| A1R287 | 321-0068-00 | | | RES, FXD, FILM: 49.9 OHM, 0.1%, 0.125W, TC=TO | 91637 | CMF55116649R90F |
| A1R288 | 315-0431-00 | 200360 | 205110 | RES, FXD, FILM: 430 OHM, 5%, 0.25W | 19701 | 5043CX430R0J |
| A1R288 | 321-0158-00 | 205111 | | RES, FXD, FILM: 432 OHM, 1%, 0.125W, TC=TO (UNITED KINGDOM ONLY) | 07716 | CEAD432R0F |
| A1R288 | 321-0158-00 | | | RES, FXD, FILM: 432 OHM, 1%, 0.125W, TC=TO (U.S.A. & GUERNSEY) | 07716 | CEAD432R0F |
| A1R289 | 315-0431-00 | 200360 | 205110 | RES, FXD, FILM: 430 OHM, 5%, 0.25W | 19701 | 5043CX430R0J |
| A1R289 | 321-0158-00 | 205111 | | RES, FXD, FILM: 432 OHM, 1%, 0.125W, TC=TO (UNITED KINGDOM ONLY) | 07716 | CEAD432R0F |
| A1R289 | 321-0158-00 | | | RES, FXD, FILM: 432 OHM, 1%, 0.125W, TC=TO (U.S.A. & GUERNSEY) | 07716 | CEAD432R0F |
| A1R290 | 321-0199-00 | | | RES, FXD, FILM: 1.15K OHM, 1%, 0.125W, TC=TO | 07716 | CEAD11500F |
| A1R291 | 321-0199-00 | | | RES, FXD, FILM: 1.15K OHM, 1%, 0.125W, TC=TO | 07716 | CEAD11500F |
| A1R292 | 321-0182-00 | | | RES, FXD, FILM: 768 OHM, 1%, 0.125W, TC=TO | 07716 | CEAD768R0F |
| A1R293 | 315-0120-00 | | | RES, FXD, FILM: 12 OHM, 5%, 0.25W | 57668 | NTR25J-R12 |
| A1R294 | 321-0172-00 | | | RES, FXD, FILM: 604 OHM, 1%, 0.125W, TC=TO | 19701 | 5033ED604R0F |
| A1R295 | 321-0172-00 | | | RES, FXD, FILM: 604 OHM, 1%, 0.125W, TC=TO | 19701 | 5033ED604R0F |
| A1R300 | 315-0273-00 | | | RES, FXD, FILM: 27K OHM, 5%, 0.25W | 57668 | NTR25J-E27K0 |
| A1R301 | 315-0273-00 | | | RES, FXD, FILM: 27K OHM, 5%, 0.25W | 57668 | NTR25J-E27K0 |
| A1R302 | 315-0103-00 | | | RES, FXD, FILM: 10K OHM, 5%, 0.25W | 19701 | 5043CX10K00J |
| A1R303 | 321-0318-00 | | | RES, FXD, FILM: 20.0K OHM, 1%, 0.125W, TC=TO | 19701 | 5033ED20K00F |
| A1R304 | 315-0103-00 | | | RES, FXD, FILM: 10K OHM, 5%, 0.25W | 19701 | 5043CX10K00J |
| A1R305 | 315-0103-00 | | | RES, FXD, FILM: 10K OHM, 5%, 0.25W | 19701 | 5043CX10K00J |
| A1R306 | 315-0103-00 | | | RES, FXD, FILM: 10K OHM, 5%, 0.25W | 19701 | 5043CX10K00J |
| A1R307 | 315-0103-00 | | | RES, FXD, FILM: 10K OHM, 5%, 0.25W | 19701 | 5043CX10K00J |
| A1R308 | 321-0318-00 | | | RES, FXD, FILM: 20.0K OHM, 1%, 0.125W, TC=TO | 19701 | 5033ED20K00F |
| A1R309 | 315-0103-00 | | | RES, FXD, FILM: 10K OHM, 5%, 0.25W | 19701 | 5043CX10K00J |
| A1R310 | 315-0103-00 | | | RES, FXD, FILM: 10K OHM, 5%, 0.25W | 19701 | 5043CX10K00J |
| A1R311 | 315-0102-00 | | | RES, FXD, FILM: 1K OHM, 5%, 0.25W | 57668 | NTR25JE01K0 |
| A1R312 | 315-0102-00 | | | RES, FXD, FILM: 1K OHM, 5%, 0.25W | 57668 | NTR25JE01K0 |
| A1R313 | 315-0103-00 | | | RES, FXD, FILM: 10K OHM, 5%, 0.25W | 19701 | 5043CX10K00J |
| A1R314 | 315-0103-00 | | | RES, FXD, FILM: 10K OHM, 5%, 0.25W | 19701 | 5043CX10K00J |
| A1R315 | 315-0103-00 | | | RES, FXD, FILM: 10K OHM, 5%, 0.25W | 19701 | 5043CX10K00J |
| A1R316 | 315-0471-00 | | | RES, FXD, FILM: 470 OHM, 5%, 0.25W | 57668 | NTR25J-E470E |
| A1R317 | 315-0241-00 | | | RES, FXD, FILM: 240 OHM, 5%, 0.25W | 19701 | 5043CX240R0J |
| A1R318 | 315-0241-00 | | | RES, FXD, FILM: 240 OHM, 5%, 0.25W | 19701 | 5043CX240R0J |
| A1R319 | 315-0102-00 | | | RES, FXD, FILM: 1K OHM, 5%, 0.25W | 57668 | NTR25JE01K0 |
| A1R320 | 315-0102-00 | | | RES, FXD, FILM: 1K OHM, 5%, 0.25W | 57668 | NTR25JE01K0 |
| A1R321 | 315-0101-00 | | | RES, FXD, FILM: 100 OHM, 5%, 0.25W | 57668 | NTR25J-E 100E |
| A1R322 | 321-0089-00 | | | RES, FXD, FILM: 82.5 OHM, 1%, 0.125W, TC=TO | 91637 | CMF55116682R50F |
| A1R323 | 321-0089-00 | | | RES, FXD, FILM: 82.5 OHM, 1%, 0.125W, TC=TO | 91637 | CMF55116682R50F |
| A1R325 | 321-0068-00 | 200360 | 202907 | RES, FXD, FILM: 49.9 OHM, 0.1%, 0.125W, TC=TO | 91637 | CMF55116649R90F |
| A1R325 | 315-0101-00 | 202908 | | RES, FXD, FILM: 100 OHM, 5%, 0.25W (UNITED KINGDOM ONLY) | 57668 | NTR25J-E 100E |
| A1R325 | 315-0101-00 | | | RES, FXD, FILM: 100 OHM, 5%, 0.25W (U.S.A. & GUERNSEY) | 57668 | NTR25J-E 100E |
| A1R326 | 321-0068-00 | 200360 | 202907 | RES, FXD, FILM: 49.9 OHM, 0.1%, 0.125W, TC=TO | 91637 | CMF55116649R90F |
| A1R326 | 315-0101-00 | 202908 | | RES, FXD, FILM: 100 OHM, 5%, 0.25W (UNITED KINGDOM ONLY) | 57668 | NTR25J-E 100E |
| A1R326 | 315-0101-00 | | | RES, FXD, FILM: 100 OHM, 5%, 0.25W (U.S.A. & GUERNSEY) | 57668 | NTR25J-E 100E |
| A1R327 | 321-0155-00 | | | RES, FXD, FILM: 402 OHM, 1%, 0.125W, TC=TO | 07716 | CEAD402R0F |
| A1R328 | 321-0155-00 | | | RES, FXD, FILM: 402 OHM, 1%, 0.125W, TC=TO | 07716 | CEAD402R0F |
| A1R329 | 315-0103-00 | | | RES, FXD, FILM: 10K OHM, 5%, 0.25W | 19701 | 5043CX10K00J |
| A1R330 | 315-0104-00 | | | RES, FXD, FILM: 100K OHM, 5%, 0.25W | 57668 | NTR25J-E100K |
| A1R331 | 315-0241-00 | | | RES, FXD, FILM: 240 OHM, 5%, 0.25W | 19701 | 5043CX240R0J |
| A1R332 | 315-0241-00 | | | RES, FXD, FILM: 240 OHM, 5%, 0.25W | 19701 | 5043CX240R0J |
| A1R333 | 315-0102-00 | | | RES, FXD, FILM: 1K OHM, 5%, 0.25W | 57668 | NTR25JE01K0 |
| A1R334 | 315-0102-00 | | | RES, FXD, FILM: 1K OHM, 5%, 0.25W | 57668 | NTR25JE01K0 |

Replaceable Electrical Parts - 2225 Service

| Component No. | Tektronix Part No. | Serial/Assembly No. Effective | Discont | Name & Description | Mfr. Code | Mfr. Part No. |
|---------------|--------------------|-------------------------------|---------|---|-----------|------------------|
| A1R335 | 315-0101-00 | | | RES, FXD, FILM:100 OHM, 5%, 0.25W | 57668 | NTR25J-E 100E |
| A1R336 | 321-0089-00 | | | RES, FXD, FILM:82.5 OHM, 1%, 0.125W, TC=TO | 91637 | CMF55116682R50F |
| A1R337 | 321-0089-00 | | | RES, FXD, FILM:82.5 OHM, 1%, 0.125W, TC=TO | 91637 | CMF55116682R50F |
| A1R338 | 311-2365-00 | | | RES, VAR, NONW: TRMR, 470 OHM, 0.75W | K8788 | TC10-LV10-470K/A |
| A1R339 | 321-0068-00 | 200360 | 202907 | RES, FXD, FILM:49.9 OHM, 0.1%, 0.125W, TC=TO | 91637 | CMF55116649R90F |
| A1R339 | 315-0101-00 | 202908 | | RES, FXD, FILM:100 OHM, 5%, 0.25W (UNITED KINGDOM ONLY) | 57668 | NTR25J-E 100E |
| A1R339 | 315-0101-00 | | | RES, FXD, FILM:100 OHM, 5%, 0.25W (U.S.A. & GUERNSEY) | 57668 | NTR25J-E 100E |
| A1R340 | 321-0068-00 | 200360 | 202907 | RES, FXD, FILM:49.9 OHM, 0.1%, 0.125W, TC=TO | 91637 | CMF55116649R90F |
| A1R340 | 315-0101-00 | 202908 | | RES, FXD, FILM:100 OHM, 5%, 0.25W (UNITED KINGDOM ONLY) | 57668 | NTR25J-E 100E |
| A1R340 | 315-0101-00 | | | RES, FXD, FILM:100 OHM, 5%, 0.25W (U.S.A. & GUERNSEY) | 57668 | NTR25J-E 100E |
| A1R343 | 315-0103-00 | | | RES, FXD, FILM:10K OHM, 5%, 0.25W | 19701 | 5043CX10K00J |
| A1R344 | 315-0104-00 | | | RES, FXD, FILM:100K OHM, 5%, 0.25W | 57668 | NTR25J-E100K |
| A1R345 | 321-0068-00 | 200360 | 202907 | RES, FXD, FILM:49.9 OHM, 0.1%, 0.125W, TC=TO | 91637 | CMF55116649R90F |
| A1R345 | 315-0101-00 | 202908 | | RES, FXD, FILM:100 OHM, 5%, 0.25W (UNITED KINGDOM ONLY) | 57668 | NTR25J-E 100E |
| A1R345 | 315-0101-00 | | | RES, FXD, FILM:100 OHM, 5%, 0.25W (U.S.A. & GUERNSEY) | 57668 | NTR25J-E 100E |
| A1R346 | 321-0068-00 | 200360 | 202907 | RES, FXD, FILM:49.9 OHM, 0.1%, 0.125W, TC=TO | 91637 | CMF55116649R90F |
| A1R346 | 315-0101-00 | 202908 | | RES, FXD, FILM:100 OHM, 5%, 0.25W (UNITED KINGDOM ONLY) | 57668 | NTR25J-E 100E |
| A1R346 | 315-0101-00 | | | RES, FXD, FILM:100 OHM, 5%, 0.25W (U.S.A. & GUERNSEY) | 57668 | NTR25J-E 100E |
| A1R347 | 315-0182-00 | | | RES, FXD, FILM:1.8K OHM, 5%, 0.25W | 57668 | NTR25J-E1K8 |
| A1R348 | 315-0472-00 | 200360 | 203422 | RES, FXD, FILM:4.7K OHM, 5%, 0.25W | 57668 | NTR25J-E04K7 |
| A1R348 | 315-0512-00 | 203423 | | RES, FXD, FILM:5.1K OHM, 5%, 0.25W (UNITED KINGDOM ONLY) | 57668 | NTR25J-E05K1 |
| A1R348 | 315-0512-00 | | | RES, FXD, FILM:5.1K OHM, 5%, 0.25W (U.S.A. & GUERNSEY) | 57668 | NTR25J-E05K1 |
| A1R349 | 315-0202-00 | | | RES, FXD, FILM:2K OHM, 5%, 0.25W | 57668 | NTR25J-E 2K |
| A1R351 | 315-0202-00 | | | RES, FXD, FILM:2K OHM, 5%, 0.25W | 57668 | NTR25J-E 2K |
| A1R352 | 315-0202-00 | | | RES, FXD, FILM:2K OHM, 5%, 0.25W | 57668 | NTR25J-E 2K |
| A1R353 | 315-0182-00 | 202908 | | RES, FXD, FILM:1.8K OHM, 5%, 0.25W (UNITED KINGDOM ONLY) | 57668 | NTR25J-E1K8 |
| A1R353 | 315-0182-00 | | | RES, FXD, FILM:1.8K OHM, 5%, 0.25W (U.S.A. & GUERNSEY) | 57668 | NTR25J-E1K8 |
| A1R354 | 315-0103-00 | 200360 | 202056 | RES, FXD, FILM:10K OHM, 5%, 0.25W | 19701 | 5043CX10K00J |
| A1R354 | 321-0172-00 | 202057 | | RES, FXD, FILM:604 OHM, 1%, 0.125W, TC=TO (UNITED KINGDOM ONLY) | 19701 | 5033ED604R0F |
| A1R354 | 321-0172-00 | | | RES, FXD, FILM:604 OHM, 1%, 0.125W, TC=TO (U.S.A. & GUERNSEY) | 19701 | 5033ED604R0F |
| A1R355 | 315-0101-00 | | | RES, FXD, FILM:100 OHM, 5%, 0.25W | 57668 | NTR25J-E 100E |
| A1R356 | 315-0101-00 | | | RES, FXD, FILM:100 OHM, 5%, 0.25W | 57668 | NTR25J-E 100E |
| A1R357 | 315-0182-00 | 200360 | 202056 | RES, FXD, FILM:1.8K OHM, 5%, 0.25W | 57668 | NTR25J-E1K8 |
| A1R357 | 321-0093-00 | 202057 | | RES, FXD, FILM:90.9 OHM, 1%, 0.125W, TC=TO (UNITED KINGDOM ONLY) | 19701 | 5043ED90R90F |
| A1R357 | 321-0093-00 | | | RES, FXD, FILM:90.9 OHM, 1%, 0.125W, TC=TO (U.S.A. & GUERNSEY) | 19701 | 5043ED90R90F |
| A1R358 | 315-0510-00 | | | RES, FXD, FILM:51 OHM, 5%, 0.25W | 19701 | 5043CX51R00J |
| A1R359 | 315-0103-00 | | | RES, FXD, FILM:10K OHM, 5%, 0.25W | 19701 | 5043CX10K00J |
| A1R360 | 311-2361-00 | | | RES, VAR, NONW: TRMR, 10K OHM, 0.5W | K8788 | TC10-LV10-10K/A |
| A1R361 | 315-0431-00 | 200360 | 200756 | RES, FXD, FILM:430 OHM, 5%, 0.25W | 19701 | 5043CX430R0J |
| A1R361 | 315-0621-00 | 200757 | 207594 | RES, FXD, FILM:620 OHM, 5%, 0.25W | 57668 | NTR25J-E620E |
| A1R361 | 321-0172-00 | 207595 | | RES, FXD, FILM:604 OHM, 1%, 0.125W, TC=TO (UNITED KINGDOM ONLY) | 19701 | 5033ED604R0F |
| A1R361 | 315-0621-00 | 100001 | 100120 | RES, FXD, FILM:620 OHM, 5%, 0.25W | 57668 | NTR25J-E620E |
| A1R361 | 321-0172-00 | 100121 | | RES, FXD, FILM:604 OHM, 1%, 0.125W, TC=TO (GUERNSEY ONLY) | 19701 | 5033ED604R0F |

| Component No. | Tektronix Part No. | Serial/Assembly No. Effective | Discont | Name & Description | Mfr. Code | Mfr. Part No. |
|---------------|--------------------|-------------------------------|---------|---|-----------|-----------------|
| A1R361 | 321-0172-00 | | | RES, FXD, FILM: 604 OHM, 1%, 0.125W, TC=T0 (U.S.A. ONLY) | 19701 | 5033ED604ROF |
| A1R362 | 315-0202-00 | 200360 | 202907 | RES, FXD, FILM: 2K OHM, 5%, 0.25W | 57668 | NTR25J-E 2K |
| A1R362 | 315-0102-00 | 202908 | | RES, FXD, FILM: 1K OHM, 5%, 0.25W (UNITED KINGDOM ONLY) | 57668 | NTR25JE01K0 |
| A1R362 | 315-0102-00 | | | RES, FXD, FILM: 1K OHM, 5%, 0.25W (U.S.A. & GUERNSEY) | 57668 | NTR25JE01K0 |
| A1R363 | 321-0123-00 | | | RES, FXD, FILM: 187 OHM, 1%, 0.125W, TC=T0 | 07716 | CEAD187ROF |
| A1R364 | 321-0123-00 | | | RES, FXD, FILM: 187 OHM, 1%, 0.125W, TC=T0 | 07716 | CEAD187ROF |
| A1R366 | 321-0068-00 | | | RES, FXD, FILM: 49.9 OHM, 0.1%, 0.125W, TC=T0 | 91637 | CMF55116649R90F |
| A1R367 | 321-0068-00 | | | RES, FXD, FILM: 49.9 OHM, 0.1%, 0.125W, TC=T0 | 91637 | CMF55116649R90F |
| A1R368 | 315-0331-00 | | | RES, FXD, FILM: 330 OHM, 5%, 0.25W | 57668 | NTR25J-E330E |
| A1R369 | 315-0102-00 | | | RES, FXD, FILM: 1K OHM, 5%, 0.25W | 57668 | NTR25JE01K0 |
| A1R374 | 315-0102-00 | | | RES, FXD, FILM: 1K OHM, 5%, 0.25W | 57668 | NTR25JE01K0 |
| A1R375 | 315-0103-00 | | | RES, FXD, FILM: 10K OHM, 5%, 0.25W | 19701 | 5043CX10K00J |
| A1R380 | 315-0202-00 | | | RES, FXD, FILM: 2K OHM, 5%, 0.25W | 57668 | NTR25J-E 2K |
| A1R381 | 315-0103-00 | 200360 | 207594 | RES, FXD, FILM: 10K OHM, 5%, 0.25W | 19701 | 5043CX10K00J |
| A1R381 | 315-0620-00 | 207595 | | RES, FXD, FILM: 62 OHM, 5%, 0.25W (UNITED KINGDOM ONLY) | 19701 | 5043CX63R00J |
| A1R381 | 315-0620-00 | | | RES, FXD, FILM: 62 OHM, 5%, 0.25W (U.S.A. & GUERNSEY) | 19701 | 5043CX63R00J |
| A1R384 | 315-0510-00 | | | RES, FXD, FILM: 51 OHM, 5%, 0.25W | 19701 | 5043CX51R00J |
| A1R385 | 315-0103-00 | | | RES, FXD, FILM: 10K OHM, 5%, 0.25W | 19701 | 5043CX10K00J |
| A1R386 | 315-0101-00 | | | RES, FXD, FILM: 100 OHM, 5%, 0.25W | 57668 | NTR25J-E 100E |
| A1R387 | 315-0101-00 | | | RES, FXD, FILM: 100 OHM, 5%, 0.25W | 57668 | NTR25J-E 100E |
| A1R388 | 315-0221-00 | | | RES, FXD, FILM: 220 OHM, 5%, 0.25W | 57668 | NTR25J-E220E |
| A1R389 | 315-0202-00 | | | RES, FXD, FILM: 2K OHM, 5%, 0.25W | 57668 | NTR25J-E 2K |
| A1R390 | 321-0318-00 | 200360 | 207594 | RES, FXD, FILM: 20.0K OHM, 1%, 0.125W, TC=T0 | 19701 | 5033ED20K00F |
| A1R390 | 315-0752-00 | 207595 | | RES, FXD, FILM: 7.5K OHM, 5%, 0.25W (UNITED KINGDOM ONLY) | 57668 | NTR25J-E07K5 |
| A1R390 | 315-0752-00 | | | RES, FXD, FILM: 7.5K OHM, 5%, 0.25W (U.S.A. & GUERNSEY) | 57668 | NTR25J-E07K5 |
| A1R391 | 315-0104-00 | | | RES, FXD, FILM: 100K OHM, 5%, 0.25W | 57668 | NTR25J-E100K |
| A1R392 | 315-0103-00 | | | RES, FXD, FILM: 10K OHM, 5%, 0.25W | 19701 | 5043CX10K00J |
| A1R393 | 315-0103-00 | | | RES, FXD, FILM: 10K OHM, 5%, 0.25W | 19701 | 5043CX10K00J |
| A1R394 | 315-0103-00 | 200360 | 207211 | RES, FXD, FILM: 10K OHM, 5%, 0.25W | 19701 | 5043CX10K00J |
| A1R394 | 315-0202-00 | 207212 | | RES, FXD, FILM: 2K OHM, 5%, 0.25W (UNITED KINGDOM ONLY) | 57668 | NTR25J-E 2K |
| A1R394 | 315-0103-00 | B010100 | B010462 | RES, FXD, FILM: 10K OHM, 5%, 0.25W | 19701 | 5043CX10K00J |
| A1R394 | 315-0202-00 | B010463 | | RES, FXD, FILM: 2K OHM, 5%, 0.25W (U.S.A. ONLY) | 57668 | NTR25J-E 2K |
| A1R394 | 315-0103-00 | 100001 | 100040 | RES, FXD, FILM: 10K OHM, 5%, 0.25W | 19701 | 5043CX10K00J |
| A1R394 | 315-0202-00 | 100041 | | RES, FXD, FILM: 2K OHM, 5%, 0.25W (GUERNSEY ONLY) | 57668 | NTR25J-E 2K |
| A1R395 | 311-2363-00 | | | RES, VAR, NONW: TRMR, 1K OHM, 0.5W | K8788 | TC10-LV10-1K/A |
| A1R396 | 315-0182-00 | | | RES, FXD, FILM: 1.8K OHM, 5%, 0.25W | 57668 | NTR25J-E1K8 |
| A1R397 | 315-0101-00 | | | RES, FXD, FILM: 100 OHM, 5%, 0.25W | 57668 | NTR25J-E 100E |
| A1R398 | 315-0101-00 | | | RES, FXD, FILM: 100 OHM, 5%, 0.25W | 57668 | NTR25J-E 100E |
| A1R400 | 321-0089-00 | | | RES, FXD, FILM: 82.5 OHM, 1%, 0.125W, TC=T0 | 91637 | CMF55116682R50F |
| A1R401 | 321-0089-00 | | | RES, FXD, FILM: 82.5 OHM, 1%, 0.125W, TC=T0 | 91637 | CMF55116682R50F |
| A1R402 | 315-0102-00 | | | RES, FXD, FILM: 1K OHM, 5%, 0.25W | 57668 | NTR25JE01K0 |
| A1R403 | 315-0221-00 | | | RES, FXD, FILM: 220 OHM, 5%, 0.25W | 57668 | NTR25J-E220E |
| A1R404 | 315-0120-00 | | | RES, FXD, FILM: 12 OHM, 5%, 0.25W | 57668 | NTR25J-R12 |
| A1R405 | 315-0120-00 | | | RES, FXD, FILM: 12 OHM, 5%, 0.25W | 57668 | NTR25J-R12 |
| A1R406 | 315-0202-00 | | | RES, FXD, FILM: 2K OHM, 5%, 0.25W | 57668 | NTR25J-E 2K |
| A1R407 | 315-0102-00 | | | RES, FXD, FILM: 1K OHM, 5%, 0.25W | 57668 | NTR25JE01K0 |
| A1R408 | 315-0202-00 | | | RES, FXD, FILM: 2K OHM, 5%, 0.25W | 57668 | NTR25J-E 2K |
| A1R409 | 315-0302-00 | | | RES, FXD, FILM: 3K OHM, 5%, 0.25W | 57668 | NTR25J-E03K0 |
| A1R410 | 315-0392-00 | | | RES, FXD, FILM: 3.9K OHM, 5%, 0.25W | 57668 | NTR25J-E03K9 |
| A1R412 | 315-0103-00 | | | RES, FXD, FILM: 10K OHM, 5%, 0.25W | 19701 | 5043CX10K00J |

Replaceable Electrical Parts - 2225 Service

| Component No. | Tektronix Part No. | Serial/Assembly No. Effective | Discont | Name & Description | Mfr. Code | Mfr. Part No. |
|---------------|--------------------|-------------------------------|---------|---|-----------|-----------------|
| A1R413 | 315-0562-00 | | | RES,FXD,FILM:5.6K OHM,5%,0.25W | 57668 | NTR25J-E05K6 |
| A1R414 | 315-0103-00 | | | RES,FXD,FILM:10K OHM,5%,0.25W | 19701 | 5043CX10K00J |
| A1R415 | 315-0120-00 | | | RES,FXD,FILM:12 OHM,5%,0.25W | 57668 | NTR25J-R12 |
| A1R416 | 315-0184-00 | 200360 | 200756 | RES,FXD,FILM:180K OHM,5%,0.25W | 19701 | 5043CX180K0J |
| A1R416 | 315-0204-00 | 200757 | | RES,FXD,FILM:200K OHM,5%,0.25W (UNITED KINGDOM ONLY) | 19701 | 5043CX200K0J |
| A1R416 | 315-0204-00 | | | RES,FXD,FILM:200K OHM,5%,0.25W (U.S.A. & GUERNSEY) | 19701 | 5043CX200K0J |
| A1R417 | 315-0562-00 | | | RES,FXD,FILM:5.6K OHM,5%,0.25W | 57668 | NTR25J-E05K6 |
| A1R418 | 315-0204-00 | | | RES,FXD,FILM:200K OHM,5%,0.25W | 19701 | 5043CX200K0J |
| A1R419 | 315-0104-00 | 202908 | | RES,FXD,FILM:100K OHM,5%,0.25W (UNITED KINGDOM ONLY) | 57668 | NTR25J-E100K |
| A1R419 | 315-0104-00 | | | RES,FXD,FILM:100K OHM,5%,0.25W (U.S.A. & GUERNSEY) | 57668 | NTR25J-E100K |
| A1R420 | 315-0104-00 | 202908 | | RES,FXD,FILM:100K OHM,5%,0.25W (UNITED KINGDOM ONLY) | 57668 | NTR25J-E100K |
| A1R420 | 315-0104-00 | | | RES,FXD,FILM:100K OHM,5%,0.25W (U.S.A. & GUERNSEY) | 57668 | NTR25J-E100K |
| A1R421 | 315-0103-00 | 202908 | | RES,FXD,FILM:10K OHM,5%,0.25W (UNITED KINGDOM ONLY) | 19701 | 5043CX10K00J |
| A1R421 | 315-0103-00 | | | RES,FXD,FILM:10K OHM,5%,0.25W (U.S.A. & GUERNSEY) | 19701 | 5043CX10K00J |
| A1R422 | 315-0101-00 | 200360 | 200756 | RES,FXD,FILM:100 OHM,5%,0.25W | 57668 | NTR25J-E 100E |
| A1R422 | 315-0221-00 | 200757 | | RES,FXD,FILM:220 OHM,5%,0.25W (UNITED KINGDOM ONLY) | 57668 | NTR25J-E220E |
| A1R422 | 315-0221-00 | | | RES,FXD,FILM:220 OHM,5%,0.25W (U.S.A. & GUERNSEY) | 57668 | NTR25J-E220E |
| A1R423 | 315-0101-00 | 200360 | 200756 | RES,FXD,FILM:100 OHM,5%,0.25W | 57668 | NTR25J-E 100E |
| A1R423 | 315-0221-00 | 200757 | | RES,FXD,FILM:220 OHM,5%,0.25W (UNITED KINGDOM ONLY) | 57668 | NTR25J-E220E |
| A1R423 | 315-0221-00 | 200757 | | RES,FXD,FILM:220 OHM,5%,0.25W (U.S.A. & GUERNSEY) | 57668 | NTR25J-E220E |
| A1R424 | 315-0103-00 | | | RES,FXD,FILM:10K OHM,5%,0.25W | 19701 | 5043CX10K00J |
| A1R425 | 315-0101-00 | | | RES,FXD,FILM:100 OHM,5%,0.25W | 57668 | NTR25J-E 100E |
| A1R427 | 315-0103-00 | | | RES,FXD,FILM:10K OHM,5%,0.25W | 19701 | 5043CX10K00J |
| A1R428 | 315-0243-00 | | | RES,FXD,FILM:24K OHM,5%,0.25W | 57668 | NTR25J-E24K0 |
| A1R429 | 315-0221-00 | 200360 | 206385 | RES,FXD,FILM:220 OHM,5%,0.25W | 57668 | NTR25J-E220E |
| A1R429 | 315-0510-00 | 206386 | | RES,FXD,FILM:51 OHM,5%,0.25W (UNITED KINGDOM ONLY) | 19701 | 5043CX51R00J |
| A1R429 | 315-0221-00 | B010100 | B010462 | RES,FXD,FILM:220 OHM,5%,0.25W | 57668 | NTR25J-E220E |
| A1R429 | 315-0510-00 | B010463 | | RES,FXD,FILM:51 OHM,5%,0.25W (U.S.A. ONLY) | 19701 | 5043CX51R00J |
| A1R429 | 315-0221-00 | 100001 | 100010 | RES,FXD,FILM:220 OHM,5%,0.25W | 57668 | NTR25J-E220E |
| A1R429 | 315-0510-00 | 100011 | | RES,FXD,FILM:51 OHM,5%,0.25W (GUERNSEY ONLY) | 19701 | 5043CX51R00J |
| A1R430 | 315-0204-00 | | | RES,FXD,FILM:200K OHM,5%,0.25W | 19701 | 5043CX200K0J |
| A1R432 | 315-0204-00 | | | RES,FXD,FILM:200K OHM,5%,0.25W | 19701 | 5043CX200K0J |
| A1R433 | 315-0223-00 | | | RES,FXD,FILM:22K OHM,5%,0.25W | 19701 | 5043CX22K00J92U |
| A1R434 | 315-0221-00 | 200360 | 200756 | RES,FXD,FILM:220 OHM,5%,0.25W | 57668 | NTR25J-E220E |
| A1R434 | 315-0391-00 | 200757 | | RES,FXD,FILM:390 OHM,5%,0.25W (UNITED KINGDOM ONLY) | 57668 | NTR25J-E390E |
| A1R434 | 315-0391-00 | | | RES,FXD,FILM:390 OHM,5%,0.25W (U.S.A. & GUERNSEY) | 57668 | NTR25J-E390E |
| A1R435 | 321-0123-00 | 200360 | 200756 | RES,FXD,FILM:187 OHM,1%,0.125W, TC=TO | 07716 | CEAD187R0F |
| A1R435 | 321-0155-00 | 200757 | | RES,FXD,FILM:402 OHM,1%,0.125W,TC=TO (UNITED KINGDOM ONLY) | 07716 | CEAD402R0F |
| A1R435 | 321-0155-00 | | | RES,FXD,FILM:402 OHM,1%,0.125W,TC=TO (U.S.A. & GUERNSEY) | 07716 | CEAD402R0F |
| A1R436 | 315-0102-00 | | | RES,FXD,FILM:1K OHM,5%,0.25W | 57668 | NTR25JE01K0 |
| A1R437 | 315-0103-00 | 200360 | 206385 | RES,FXD,FILM:10K OHM,5%,0.25W | 19701 | 5043CX10K00J |
| A1R437 | 315-0752-00 | 206386 | | RES,FXD,FILM:7.5K OHM,5%,0.25W (UNITED KINGDOM ONLY) | 57668 | NTR25J-E07K5 |

| Component No. | Tektronix Part No. | Serial/Assembly No. Effective | Discont | Name & Description | Mfr. Code | Mfr. Part No. |
|---------------|--------------------|-------------------------------|---------|---|-----------|------------------|
| A1R437 | 315-0103-00 | B010100 | B010462 | RES, FXD, FILM: 10K OHM, 5%, 0.25W | 19701 | 5043CX10K00J |
| A1R437 | 315-0752-00 | B010463 | | RES, FXD, FILM: 7.5K OHM, 5%, 0.25W (U.S.A. ONLY) | 57668 | NTR25J-E07K5 |
| A1R438 | 315-0204-00 | | | RES, FXD, FILM: 200K OHM, 5%, 0.25W | 19701 | 5043CX200K0J |
| A1R439 | 315-0103-00 | | | RES, FXD, FILM: 10K OHM, 5%, 0.25W | 19701 | 5043CX10K00J |
| A1R440 | 315-0392-00 | | | RES, FXD, FILM: 3.9K OHM, 5%, 0.25W | 57668 | NTR25J-E03K9 |
| A1R441 | 315-0103-00 | | | RES, FXD, FILM: 10K OHM, 5%, 0.25W | 19701 | 5043CX10K00J |
| A1R442 | 315-0103-00 | | | RES, FXD, FILM: 10K OHM, 5%, 0.25W | 19701 | 5043CX10K00J |
| A1R443 | 315-0103-00 | | | RES, FXD, FILM: 10K OHM, 5%, 0.25W | 19701 | 5043CX10K00J |
| A1R444 | 315-0103-00 | | | RES, FXD, FILM: 10K OHM, 5%, 0.25W | 19701 | 5043CX10K00J |
| A1R445 | 315-0392-00 | | | RES, FXD, FILM: 3.9K OHM, 5%, 0.25W | 57668 | NTR25J-E03K9 |
| A1R446 | 315-0392-00 | | | RES, FXD, FILM: 3.9K OHM, 5%, 0.25W | 57668 | NTR25J-E03K9 |
| A1R447 | 315-0510-00 | | | RES, FXD, FILM: 51 OHM, 5%, 0.25W | 19701 | 5043CX51R00J |
| A1R448 | 315-0510-00 | | | RES, FXD, FILM: 51 OHM, 5%, 0.25W | 19701 | 5043CX51R00J |
| A1R449 | 315-0202-00 | | | RES, FXD, FILM: 2K OHM, 5%, 0.25W | 57668 | NTR25J-E 2K |
| A1R450 | 315-0104-00 | | | RES, FXD, FILM: 100K OHM, 5%, 0.25W | 57668 | NTR25J-E100K |
| A1R451 | 315-0102-00 | | | RES, FXD, FILM: 1K OHM, 5%, 0.25W | 57668 | NTR25JE01K0 |
| A1R452 | 315-0103-00 | | | RES, FXD, FILM: 10K OHM, 5%, 0.25W | 19701 | 5043CX10K00J |
| A1R453 | 315-0102-00 | | | RES, FXD, FILM: 1K OHM, 5%, 0.25W | 57668 | NTR25JE01K0 |
| A1R454 | 321-0361-00 | | | RES, FXD, FILM: 56.2K OHM, 1%, 0.125W, TC=T0 | 07716 | CEAD56201F |
| A1R455 | 315-0103-00 | 202908 | | RES, FXD, FILM: 10K OHM, 5%, 0.25W (UNITED KINGDOM ONLY) | 19701 | 5043CX10K00J |
| A1R455 | 315-0103-00 | 202908 | | RES, FXD, FILM: 10K OHM, 5%, 0.25W (U.S.A. & GUERNSEY) | 19701 | 5043CX10K00J |
| A1R456 | 315-0103-00 | | | RES, FXD, FILM: 10K OHM, 5%, 0.25W | 19701 | 5043CX10K00J |
| A1R457 | 315-0103-00 | 200360 | 207594 | RES, FXD, FILM: 10K OHM, 5%, 0.25W | 19701 | 5043CX10K00J |
| A1R457 | 315-0102-00 | 207595 | | RES, FXD, FILM: 1K OHM, 5%, 0.25W (UNITED KINGDOM ONLY) | 57668 | NTR25JE01K0 |
| A1R457 | 315-0102-00 | | | RES, FXD, FILM: 1K OHM, 5%, 0.25W (U.S.A. & GUERNSEY) | 57668 | NTR25JE01K0 |
| A1R458 | 315-0103-00 | 200360 | 207594 | RES, FXD, FILM: 10K OHM, 5%, 0.25W | 19701 | 5043CX10K00J |
| A1R458 | 315-0102-00 | 207595 | | RES, FXD, FILM: 1K OHM, 5%, 0.25W (UNITED KINGDOM ONLY) | 57668 | NTR25JE01K0 |
| A1R458 | 315-0102-00 | | | RES, FXD, FILM: 1K OHM, 5%, 0.25W (U.S.A. & GUERNSEY) | 57668 | NTR25JE01K0 |
| A1R459 | 315-0104-00 | 200360 | 202907 | RES, FXD, FILM: 100K OHM, 5%, 0.25W (UNITED KINGDOM ONLY) | 57668 | NTR25J-E100K |
| A1R460 | 315-0104-00 | | | RES, FXD, FILM: 100K OHM, 5%, 0.25W | 57668 | NTR25J-E100K |
| A1R461 | 315-0103-00 | | | RES, FXD, FILM: 10K OHM, 5%, 0.25W | 19701 | 5043CX10K00J |
| A1R462 | 315-0103-00 | | | RES, FXD, FILM: 10K OHM, 5%, 0.25W | 19701 | 5043CX10K00J |
| A1R463 | 315-0104-00 | | | RES, FXD, FILM: 100K OHM, 5%, 0.25W | 57668 | NTR25J-E100K |
| A1R464 | 315-0104-00 | | | RES, FXD, FILM: 100K OHM, 5%, 0.25W | 57668 | NTR25J-E100K |
| A1R465 | 315-0103-00 | | | RES, FXD, FILM: 10K OHM, 5%, 0.25W | 19701 | 5043CX10K00J |
| A1R466 | 315-0103-00 | | | RES, FXD, FILM: 10K OHM, 5%, 0.25W | 19701 | 5043CX10K00J |
| A1R467 | 315-0103-00 | | | RES, FXD, FILM: 10K OHM, 5%, 0.25W | 19701 | 5043CX10K00J |
| A1R468 | 315-0204-00 | | | RES, FXD, FILM: 200K OHM, 5%, 0.25W | 19701 | 5043CX200K0J |
| A1R469 | 315-0103-00 | | | RES, FXD, FILM: 10K OHM, 5%, 0.25W | 19701 | 5043CX10K00J |
| A1R470 | 315-0204-00 | | | RES, FXD, FILM: 200K OHM, 5%, 0.25W | 19701 | 5043CX200K0J |
| A1R471 | 315-0204-00 | | | RES, FXD, FILM: 200K OHM, 5%, 0.25W | 19701 | 5043CX200K0J |
| A1R472 | 315-0103-00 | | | RES, FXD, FILM: 10K OHM, 5%, 0.25W | 19701 | 5043CX10K00J |
| A1R473 | 315-0103-00 | | | RES, FXD, FILM: 10K OHM, 5%, 0.25W | 19701 | 5043CX10K00J |
| A1R475 | 315-0392-00 | | | RES, FXD, FILM: 3.9K OHM, 5%, 0.25W | 57668 | NTR25J-E03K9 |
| A1R477 | 315-0105-00 | | | RES, FXD, FILM: 1M OHM, 5%, 0.25W | 19701 | 5043CX1M000J |
| A1R478 | 311-2358-00 | | | RES, VAR, NONWV: TRMR, 100K OHM, 0.5W | K8788 | TC10-LV10-100K/A |
| A1R480 | 315-0103-00 | | | RES, FXD, FILM: 10K OHM, 5%, 0.25W | 19701 | 5043CX10K00J |
| A1R481 | 311-2361-00 | | | RES, VAR, NONWV: TRMR, 10K OHM, 0.5W | K8788 | TC10-LV10-10K/A |
| A1R482 | 315-0271-00 | | | RES, FXD, FILM: 270 OHM, 5%, 0.25W | 57668 | NTR25J-E270E |
| A1R483 | 315-0431-00 | 200360 | 205110 | RES, FXD, FILM: 430 OHM, 5%, 0.25W | 19701 | 5043CX430R0J |
| A1R483 | 321-0158-00 | 205111 | | RES, FXD, FILM: 432 OHM, 1%, 0.125W, TC=T0 | 07716 | CEAD432R0F |

Replaceable Electrical Parts - 2225 Service

| Component No. | Tektronix Part No. | Serial/Assembly No. Effective | Discont | Name & Description | Mfr. Code | Mfr. Part No. |
|---------------|--------------------|-------------------------------|---------|---|-----------|-----------------|
| A1R483 | 321-0158-00 | | | (UNITED KINGDOM ONLY) RES, FXD, FILM:432 OHM, 1%, 0.125W, TC=T0 (U.S.A. & GUERNSEY) | 07716 | CEAD432R0F |
| A1R485 | 321-0089-00 | | | RES, FXD, FILM:82.5 OHM, 1%, 0.125W, TC=T0 | 91637 | CMF55116682R50F |
| A1R486 | 315-0222-00 | | | RES, FXD, FILM:2.2K OHM, 5%, 0.25W | 57668 | NTR25J-E02K2 |
| A1R487 | 315-0103-00 | | | RES, FXD, FILM:10K OHM, 5%, 0.25W | 19701 | 5043CX10K00J |
| A1R488 | 315-0391-00 | | | RES, FXD, FILM:390 OHM, 5%, 0.25W | 57668 | NTR25J-E390E |
| A1R489 | 311-2352-00 | | | RES, VAR, NONW:TRMR, 220 OHM, 0.5W | K8788 | TC10LV2.5220R |
| A1R490 | 315-0392-00 | | | RES, FXD, FILM:3.9K OHM, 5%, 0.25W | 57668 | NTR25J-E03K9 |
| A1R491 | 315-0391-00 | | | RES, FXD, FILM:390 OHM, 5%, 0.25W | 57668 | NTR25J-E390E |
| A1R492 | 315-0102-00 | | | RES, FXD, FILM:1K OHM, 5%, 0.25W | 57668 | NTR25JE01K0 |
| A1R493 | 315-0103-00 | | | RES, FXD, FILM:10K OHM, 5%, 0.25W | 19701 | 5043CX10K00J |
| A1R495 | 315-0752-00 | | | RES, FXD, FILM:7.5K OHM, 5%, 0.25W | 57668 | NTR25J-E07K5 |
| A1R496 | 315-0752-00 | | | RES, FXD, FILM:7.5K OHM, 5%, 0.25W | 57668 | NTR25J-E07K5 |
| A1R497 | 315-0471-00 | | | RES, FXD, FILM:470 OHM, 5%, 0.25W | 57668 | NTR25J-E470E |
| A1R498 | 315-0431-00 | 200360 | 205110 | RES, FXD, FILM:430 OHM, 5%, 0.25W | 19701 | 5043CX430R0J |
| A1R498 | 321-0158-00 | 205111 | | RES, FXD, FILM:432 OHM, 1%, 0.125W, TC=T0 (UNITED KINGDOM ONLY) | 07716 | CEAD432R0F |
| A1R498 | 321-0158-00 | | | RES, FXD, FILM:432 OHM, 1%, 0.125W, TC=T0 (U.S.A. & GUERNSEY) | 07716 | CEAD432R0F |
| A1R500 | 315-0120-00 | 200360 | 202907 | RES, FXD, FILM:12 OHM, 5%, 0.25W (UNITED KINGDOM ONLY) | 57668 | NTR25J-R12 |
| A1R501 | 321-0322-00 | | | RES, FXD, FILM:22.1K OHM, 0.1%, 0.125W, TC=T0 | 19701 | 5033ED22K10F |
| A1R502 | 321-0318-00 | | | RES, FXD, FILM:20.0K OHM, 1%, 0.125W, TC=T0 | 19701 | 5033ED20K00F |
| A1R503 | 321-0318-00 | | | RES, FXD, FILM:20.0K OHM, 1%, 0.125W, TC=T0 | 19701 | 5033ED20K00F |
| A1R504 | 315-0202-00 | | | RES, FXD, FILM:2K OHM, 5%, 0.25W | 57668 | NTR25J-E 2K |
| A1R505 | 315-0334-00 | | | RES, FXD, FILM:330K OHM, 5%, 0.25W | 57668 | NTR25J-E 330K |
| A1R506 | 315-0202-00 | | | RES, FXD, FILM:2K OHM, 5%, 0.25W | 57668 | NTR25J-E 2K |
| A1R508 | 315-0102-00 | | | RES, FXD, FILM:1K OHM, 5%, 0.25W | 57668 | NTR25JE01K0 |
| A1R509 | 315-0102-00 | 202908 | | RES, FXD, FILM:1K OHM, 5%, 0.25W (UNITED KINGDOM ONLY) | 57668 | NTR25JE01K0 |
| A1R509 | 315-0102-00 | | | RES, FXD, FILM:1K OHM, 5%, 0.25W (U.S.A. & GUERNSEY) | 57668 | NTR25JE01K0 |
| A1R510 | 315-0103-00 | | | RES, FXD, FILM:10K OHM, 5%, 0.25W | 19701 | 5043CX10K00J |
| A1R511 | 315-0102-00 | 200360 | 202907 | RES, FXD, FILM:1K OHM, 5%, 0.25W (UNITED KINGDOM ONLY) | 57668 | NTR25JE01K0 |
| A1R512 | 315-0102-00 | | | RES, FXD, FILM:1K OHM, 5%, 0.25W | 57668 | NTR25JE01K0 |
| A1R513 | 315-0103-00 | | | RES, FXD, FILM:10K OHM, 5%, 0.25W | 19701 | 5043CX10K00J |
| A1R514 | 315-0621-00 | 200360 | 205110 | RES, FXD, FILM:620 OHM, 5%, 0.25W | 57668 | NTR25J-E620E |
| A1R514 | 321-0172-00 | 205111 | | RES, FXD, FILM:604 OHM, 1%, 0.125W, TC=T0 (UNITED KINGDOM ONLY) | 19701 | 5033ED604R0F |
| A1R514 | 321-0172-00 | | | RES, FXD, FILM:604 OHM, 1%, 0.125W, TC=T0 (U.S.A. & GUERNSEY) | 19701 | 5033ED604R0F |
| A1R515 | 315-0101-00 | | | RES, FXD, FILM:100 OHM, 5%, 0.25W | 57668 | NTR25J-E 100E |
| A1R516 | 315-0472-00 | | | RES, FXD, FILM:4.7K OHM, 5%, 0.25W | 57668 | NTR25J-E04K7 |
| A1R519 | 315-0512-00 | | | RES, FXD, FILM:5.1K OHM, 5%, 0.25W | 57668 | NTR25J-E05K1 |
| A1R520 | 315-0102-00 | | | RES, FXD, FILM:1K OHM, 5%, 0.25W | 57668 | NTR25JE01K0 |
| A1R521 | 315-0182-00 | | | RES, FXD, FILM:1.8K OHM, 5%, 0.25W | 57668 | NTR25J-E1K8 |
| A1R522 | 315-0102-00 | | | RES, FXD, FILM:1K OHM, 5%, 0.25W | 57668 | NTR25JE01K0 |
| A1R523 | 315-0102-00 | | | RES, FXD, FILM:1K OHM, 5%, 0.25W | 57668 | NTR25JE01K0 |
| A1R524 | 315-0102-00 | | | RES, FXD, FILM:1K OHM, 5%, 0.25W | 57668 | NTR25JE01K0 |
| A1R525 | 315-0222-00 | | | RES, FXD, FILM:2.2K OHM, 5%, 0.25W | 57668 | NTR25J-E02K2 |
| A1R526 | 315-0222-00 | | | RES, FXD, FILM:2.2K OHM, 5%, 0.25W | 57668 | NTR25J-E02K2 |
| A1R530 | 315-0101-00 | | | RES, FXD, FILM:100 OHM, 5%, 0.25W | 57668 | NTR25J-E 100E |
| A1R531 | 315-0102-00 | | | RES, FXD, FILM:1K OHM, 5%, 0.25W | 57668 | NTR25JE01K0 |
| A1R532 | 315-0222-00 | | | RES, FXD, FILM:2.2K OHM, 5%, 0.25W | 57668 | NTR25J-E02K2 |
| A1R533 | 315-0511-00 | | | RES, FXD, FILM:510 OHM, 5%, 0.25W | 19701 | 5043CX510R0J |
| A1R534 | 315-0511-00 | | | RES, FXD, FILM:510 OHM, 5%, 0.25W | 19701 | 5043CX510R0J |
| A1R535 | 315-0181-00 | | | RES, FXD, FILM:180 OHM, 5%, 0.25W | 57668 | NTR25J-E180E |

| Component No. | Tektronix Part No. | Serial/Assembly No. Effective | Discont | Name & Description | Mfr. Code | Mfr. Part No. |
|---------------|--------------------|-------------------------------|---------|---|-----------|---------------|
| A1R536 | 315-0181-00 | | | RES,FXD,FILM:180 OHM,5%,0.25W | 57668 | NTR25J-E180E |
| A1R537 | 315-0221-00 | | | RES,FXD,FILM:220 OHM,5%,0.25W | 57668 | NTR25J-E220E |
| A1R538 | 315-0512-00 | | | RES,FXD,FILM:5.1K OHM,5%,0.25W | 57668 | NTR25J-E05K1 |
| A1R539 | 315-0512-00 | | | RES,FXD,FILM:5.1K OHM,5%,0.25W | 57668 | NTR25J-E05K1 |
| A1R540 | 315-0511-00 | | | RES,FXD,FILM:510 OHM,5%,0.25W | 19701 | 5043CX510R0J |
| A1R541 | 315-0511-00 | | | RES,FXD,FILM:510 OHM,5%,0.25W | 19701 | 5043CX510R0J |
| A1R542 | 315-0103-00 | | | RES,FXD,FILM:10K OHM,5%,0.25W | 19701 | 5043CX10K00J |
| A1R543 | 315-0103-00 | | | RES,FXD,FILM:10K OHM,5%,0.25W | 19701 | 5043CX10K00J |
| A1R544 | 315-0431-00 | 200360 | 205110 | RES,FXD,FILM:430 OHM,5%,0.25W | 19701 | 5043CX430R0J |
| A1R544 | 321-0158-00 | 205111 | | RES,FXD,FILM:432 OHM,1%,0.125W,TC=TO (UNITED KINGDOM ONLY) | 07716 | CEAD432R0F |
| A1R544 | 321-0158-00 | | | RES,FXD,FILM:432 OHM,1%,0.125W,TC=TO (U.S.A. & GUERNSEY) | 07716 | CEAD432R0F |
| A1R545 | 315-0102-00 | | | RES,FXD,FILM:1K OHM,5%,0.25W | 57668 | NTR25JE01K0 |
| A1R547 | 315-0102-00 | | | RES,FXD,FILM:1K OHM,5%,0.25W | 57668 | NTR25JE01K0 |
| A1R548 | 315-0102-00 | | | RES,FXD,FILM:1K OHM,5%,0.25W | 57668 | NTR25JE01K0 |
| A1R549 | 315-0621-00 | 200360 | 205110 | RES,FXD,FILM:620 OHM,5%,0.25W | 57668 | NTR25J-E620E |
| A1R549 | 321-0172-00 | 205111 | | RES,FXD,FILM:604 OHM,1%,0.125W,TC=TO (UNITED KINGDOM ONLY) | 19701 | 5033ED604R0F |
| A1R549 | 321-0172-00 | | | RES,FXD,FILM:604 OHM,1%,0.125W,TC=TO (U.S.A. & GUERNSEY) | 19701 | 5033ED604R0F |
| A1R550 | 315-0512-00 | | | RES,FXD,FILM:5.1K OHM,5%,0.25W | 57668 | NTR25J-E05K1 |
| A1R551 | 315-0182-00 | | | RES,FXD,FILM:1.8K OHM,5%,0.25W | 57668 | NTR25J-E1K8 |
| A1R552 | 315-0222-00 | | | RES,FXD,FILM:2.2K OHM,5%,0.25W | 57668 | NTR25J-E02K2 |
| A1R553 | 315-0511-00 | | | RES,FXD,FILM:510 OHM,5%,0.25W | 19701 | 5043CX510R0J |
| A1R554 | 315-0222-00 | | | RES,FXD,FILM:2.2K OHM,5%,0.25W | 57668 | NTR25J-E02K2 |
| A1R555 | 315-0391-00 | | | RES,FXD,FILM:390 OHM,5%,0.25W | 57668 | NTR25J-E390E |
| A1R556 | 315-0222-00 | | | RES,FXD,FILM:2.2K OHM,5%,0.25W | 57668 | NTR25J-E02K2 |
| A1R557 | 315-0102-00 | | | RES,FXD,FILM:1K OHM,5%,0.25W | 57668 | NTR25JE01K0 |
| A1R560 | 315-0271-00 | | | RES,FXD,FILM:270 OHM,5%,0.25W | 57668 | NTR25J-E270E |
| A1R561 | 315-0512-00 | | | RES,FXD,FILM:5.1K OHM,5%,0.25W | 57668 | NTR25J-E05K1 |
| A1R562 | 315-0392-00 | | | RES,FXD,FILM:3.9K OHM,5%,0.25W | 57668 | NTR25J-E03K9 |
| A1R563 | 315-0222-00 | | | RES,FXD,FILM:2.2K OHM,5%,0.25W | 57668 | NTR25J-E02K2 |
| A1R564 | 315-0102-00 | | | RES,FXD,FILM:1K OHM,5%,0.25W | 57668 | NTR25JE01K0 |
| A1R565 | 315-0103-00 | | | RES,FXD,FILM:10K OHM,5%,0.25W | 19701 | 5043CX10K00J |
| A1R570 | 315-0392-00 | | | RES,FXD,FILM:3.9K OHM,5%,0.25W | 57668 | NTR25J-E03K9 |
| A1R571 | 315-0392-00 | | | RES,FXD,FILM:3.9K OHM,5%,0.25W | 57668 | NTR25J-E03K9 |
| A1R572 | 315-0222-00 | | | RES,FXD,FILM:2.2K OHM,5%,0.25W | 57668 | NTR25J-E02K2 |
| A1R573 | 315-0222-00 | | | RES,FXD,FILM:2.2K OHM,5%,0.25W | 57668 | NTR25J-E02K2 |
| A1R574 | 315-0222-00 | | | RES,FXD,FILM:2.2K OHM,5%,0.25W | 57668 | NTR25J-E02K2 |
| A1R576 | 315-0222-00 | | | RES,FXD,FILM:2.2K OHM,5%,0.25W | 57668 | NTR25J-E02K2 |
| A1R579 | 315-0221-00 | | | RES,FXD,FILM:220 OHM,5%,0.25W | 57668 | NTR25J-E220E |
| A1R581 | 315-0103-00 | | | RES,FXD,FILM:10K OHM,5%,0.25W | 19701 | 5043CX10K00J |
| A1R582 | 321-0361-00 | | | RES,FXD,FILM:56.2K OHM,1%,0.125W,TC=TO | 07716 | CEAD56201F |
| A1R583 | 315-0204-00 | 200360 | 205963 | RES,FXD,FILM:200K OHM,5%,0.25W | 19701 | 5043CX200K0J |
| A1R583 | 315-0334-00 | 205964 | 208549 | RES,FXD,FILM:330K OHM,5%,0.25W | 57668 | NTR25J-E 330K |
| A1R583 | 315-0204-00 | 208550 | | RES,FXD,FILM:200K OHM,5%,0.25W (UNITED KINGDOM ONLY) | 19701 | 5043CX200K0J |
| A1R583 | 315-0334-00 | B010100 | B011072 | RES,FXD,FILM:330K OHM,5%,0.25W | 57668 | NTR25J-E 330K |
| A1R583 | 315-0204-00 | B011073 | | RES,FXD,FILM:200K OHM,5%,0.25W (U.S.A. ONLY) | 19701 | 5043CX200K0J |
| A1R583 | 315-0334-00 | 100001 | 100227 | RES,FXD,FILM:330K OHM,5%,0.25W | 57668 | NTR25J-E 330K |
| A1R583 | 315-0204-00 | 100228 | | RES,FXD,FILM:200K OHM,5%,0.25W (GUERNSEY ONLY) | 19701 | 5043CX200K0J |
| A1R584 | 315-0334-00 | | | RES,FXD,FILM:330K OHM,5%,0.25W | 57668 | NTR25J-E 330K |
| A1R585 | 315-0104-00 | | | RES,FXD,FILM:100K OHM,5%,0.25W | 57668 | NTR25J-E100K |
| A1R586 | 315-0334-00 | | | RES,FXD,FILM:330K OHM,5%,0.25W | 57668 | NTR25J-E 330K |
| A1R587 | 315-0104-00 | | | RES,FXD,FILM:100K OHM,5%,0.25W | 57668 | NTR25J-E100K |
| A1R588 | 315-0182-00 | | | RES,FXD,FILM:1.8K OHM,5%,0.25W | 57668 | NTR25J-E1K8 |
| A1R589 | 321-0318-00 | | | RES,FXD,FILM:20.0K OHM,1%,0.125W,TC=TO | 19701 | 5033ED20K00F |

Replaceable Electrical Parts - 2225 Service

| Component No. | Tektronix Part No. | Serial/Assembly No. Effective | Discont | Name & Description | Mfr. Code | Mfr. Part No. |
|---------------|--------------------|-------------------------------|---------|--|-----------|------------------|
| A1R590 | 321-0205-00 | | | RES,FXD,FILM:1.33K OHM,1%,0.125W,TC=T0 | 19701 | 5033ED1K330F |
| A1R764 | 315-0471-00 | B010100 | B010299 | RES,FXD,FILM:470 OHM,5%,0.25W | 57668 | NTR25J-E470E |
| A1R764 | 315-0361-00 | B010300 | | RES,FXD,FILM:360 OHM,5%,0.25W (U.S.A. ONLY) | 19701 | 5043CX360R0J |
| A1R764 | 315-0471-00 | | | RES,FXD,FILM:470 OHM,5%,0.25W (UNITED KINGDOM & GUERNSEY) | 57668 | NTR25J-E470E |
| A1R776 | 315-0102-00 | | | RES,FXD,FILM:1K OHM,5%,0.25W | 57668 | NTR25JE01K0 |
| A1R778 | 321-0361-00 | | | RES,FXD,FILM:56.2K OHM,1%,0.125W,TC=T0 | 07716 | CEAD56201F |
| A1R779 | 321-0263-00 | | | RES,FXD,FILM:5.36K OHM,1%,0.125W,TC=T0 | 07716 | CEAD53600F |
| A1R780 | 315-0510-00 | | | RES,FXD,FILM:51 OHM,5%,0.25W | 19701 | 5043CX51R00J |
| A1R781 | 321-0109-00 | | | RES,FXD,FILM:133 OHM,1%,0.125W,TC=T0 | 07716 | CEAD133R0F |
| A1R784 | 323-0310-00 | | | RES,FXD,FILM:16.5K OHM,1%,0.5W,TC=T0 | 75042 | CECT0-1652F |
| A1R785 | 315-0243-00 | | | RES,FXD,FILM:24K OHM,5%,0.25W | 57668 | NTR25J-E24K0 |
| A1R786 | 321-0182-00 | | | RES,FXD,FILM:768 OHM,1%,0.125W,TC=T0 | 07716 | CEAD768R0F |
| A1R787 | 315-0101-00 | | | RES,FXD,FILM:100 OHM,5%,0.25W | 57668 | NTR25J-E 100E |
| A1R788 | 321-0205-00 | | | RES,FXD,FILM:1.33K OHM,1%,0.125W,TC=T0 | 19701 | 5033ED1K330F |
| A1R789 | 315-0510-00 | | | RES,FXD,FILM:51 OHM,5%,0.25W | 19701 | 5043CX51R00J |
| A1R790 | 315-0510-00 | | | RES,FXD,FILM:51 OHM,5%,0.25W | 19701 | 5043CX51R00J |
| A1R791 | 321-0158-00 | | | RES,FXD,FILM:432 OHM,1%,0.125W,TC=T0 | 07716 | CEAD432R0F |
| A1R792 | 321-0223-00 | | | RES,FXD,FILM:2.05K OHM,1%,0.125W,TC=T0 | 19701 | 5033ED2K05F |
| A1R794 | 323-0310-00 | | | RES,FXD,FILM:16.5K OHM,1%,0.5W,TC=T0 | 75042 | CECT0-1652F |
| A1R795 | 315-0243-00 | | | RES,FXD,FILM:24K OHM,5%,0.25W | 57668 | NTR25J-E24K0 |
| A1R796 | 321-0201-00 | | | RES,FXD,FILM:1.21K OHM,1%,0.125W,TC=T0 | 19701 | 5043ED1K210F |
| A1R797 | 315-0101-00 | | | RES,FXD,FILM:100 OHM,5%,0.25W | 57668 | NTR25J-E 100E |
| A1R798 | 321-0205-00 | | | RES,FXD,FILM:1.33K OHM,1%,0.125W,TC=T0 | 19701 | 5033ED1K330F |
| A1R799 | 315-0510-00 | | | RES,FXD,FILM:51 OHM,5%,0.25W | 19701 | 5043CX51R00J |
| A1R804 | 315-0102-00 | | | RES,FXD,FILM:1K OHM,5%,0.25W | 57668 | NTR25JE01K0 |
| A1R805 | 315-0562-00 | | | RES,FXD,FILM:5.6K OHM,5%,0.25W | 57668 | NTR25J-E05K6 |
| A1R806 | 315-0102-00 | | | RES,FXD,FILM:1K OHM,5%,0.25W | 57668 | NTR25JE01K0 |
| A1R818 | 315-0302-00 | | | RES,FXD,FILM:3K OHM,5%,0.25W | 57668 | NTR25J-E03K0 |
| A1R819 | 315-0103-00 | | | RES,FXD,FILM:100 OHM,5%,0.25W | 19701 | 5043CX10K00J |
| A1R820 | 315-0362-00 | | | RES,FXD,FILM:3.6K OHM,5%,0.25W | 19701 | 5043CX3K600J |
| A1R821 | 315-0103-00 | | | RES,FXD,FILM:10K OHM,5%,0.25W | 19701 | 5043CX10K00J |
| A1R822 | 321-0361-00 | | | RES,FXD,FILM:56.2K OHM,1%,0.125W,TC=T0 | 07716 | CEAD56201F |
| A1R823 | 315-0103-00 | | | RES,FXD,FILM:10K OHM,5%,0.25W | 19701 | 5043CX10K00J |
| A1R825 | 315-0101-00 | | | RES,FXD,FILM:100 OHM,5%,0.25W | 57668 | NTR25J-E 100E |
| A1R828 | 321-0318-00 | | | RES,FXD,FILM:20.0K OHM,1%,0.125W,TC=T0 | 19701 | 5033ED20K00F |
| A1R830 | 321-0205-00 | | | RES,FXD,FILM:1.33K OHM,1%,0.125W,TC=T0 | 19701 | 5033ED1K330F |
| A1R832 | 321-0223-00 | | | RES,FXD,FILM:2.05K OHM,1%,0.125W,TC=T0 | 19701 | 5033ED2K05F |
| A1R834 | 315-0101-00 | | | RES,FXD,FILM:100 OHM,5%,0.25W | 57668 | NTR25J-E 100E |
| A1R835 | 321-0233-00 | | | RES,FXD,FILM:2.61K OHM,1%,0.125W,TC=T0 | 07716 | CEAD26100F |
| A1R836 | 315-0102-00 | | | RES,FXD,FILM:1K OHM,5%,0.25W | 57668 | NTR25JE01K0 |
| A1R840 | 315-0511-00 | | | RES,FXD,FILM:510 OHM,5%,0.25W | 19701 | 5043CX510R0J |
| A1R841 | 321-0322-00 | | | RES,FXD,FILM:22.1K OHM,0.1%,0.125W,TC=T0 | 19701 | 5033ED22K10F |
| A1R842 | 315-0241-00 | | | RES,FXD,FILM:240 OHM,5%,0.25W | 19701 | 5043CX240R0J |
| A1R844 | 315-0104-00 | | | RES,FXD,FILM:100K OHM,5%,0.25W | 57668 | NTR25J-E100K |
| A1R845 | 315-0472-00 | | | RES,FXD,FILM:4.7K OHM,5%,0.25W | 57668 | NTR25J-E04K7 |
| A1R849 | 315-0102-00 | | | RES,FXD,FILM:1K OHM,5%,0.25W | 57668 | NTR25JE01K0 |
| A1R850 | 315-0102-00 | | | RES,FXD,FILM:1K OHM,5%,0.25W | 57668 | NTR25JE01K0 |
| A1R851 | 311-2367-00 | | | RES,VAR,NONWV:TRMR,22K OHM,0.5W | K8788 | TC10-LV10-22K/A |
| A1R852 | 321-0318-00 | | | RES,FXD,FILM:20.0K OHM,1%,0.125W,TC=T0 | 19701 | 5033ED20K00F |
| A1R853 | 315-0204-00 | | | RES,FXD,FILM:200K OHM,5%,0.25W | 19701 | 5043CX200K0J |
| A1R854 | 315-0472-00 | | | RES,FXD,FILM:4.7K OHM,5%,0.25W | 57668 | NTR25J-E04K7 |
| A1R858 | 315-0511-00 | | | RES,FXD,FILM:510 OHM,5%,0.25W | 19701 | 5043CX510R0J |
| A1R860 | 315-0625-00 | | | RES,FXD,FILM:6.2M OHM,5%,0.25W | 01121 | CB6255 |
| A1R870 | 311-2358-00 | | | RES,VAR,NONWV:TRMR,100K OHM,0.5W | K8788 | TC10-LV10-100K/A |
| A1R872 | 315-0104-00 | | | RES,FXD,FILM:100K OHM,5%,0.25W | 57668 | NTR25J-E100K |
| A1R873 | 315-0104-00 | | | RES,FXD,FILM:100K OHM,5%,0.25W | 57668 | NTR25J-E100K |

| Component No. | Tektronix Part No. | Serial/Assembly No. Effective | Discont | Name & Description | Mfr. Code | Mfr. Part No. |
|---------------|--------------------|-------------------------------|---------|--|-----------|------------------|
| A1R874 | 311-2358-00 | | | RES, VAR, NONW: TRMR, 100K OHM, 0.5W | K8788 | TC10-LV10-100K/A |
| A1R875 | 315-0104-00 | | | RES, FXD, FILM: 100K OHM, 5%, 0.25W | 57668 | NTR25J-E100K |
| A1R877 | 307-0115-00 | | | RES, FXD, CMPSN: 7.5 OHM, 5%, 0.25W | 80009 | 307-0115-00 |
| A1R885 | 315-0103-00 | | | RES, FXD, FILM: 10K OHM, 5%, 0.25W | 19701 | 5043CX10K00J |
| A1R886 | 315-0204-00 | | | RES, FXD, FILM: 200K OHM, 5%, 0.25W | 19701 | 5043CX200K0J |
| A1R888 | 301-0105-00 | | | RES, FXD, FILM: 1M OHM, 5%, 0.50W | 19701 | 5053CX1M000J |
| A1R889 | 301-0105-00 | | | RES, FXD, FILM: 1M OHM, 5%, 0.50W | 19701 | 5053CX1M000J |
| A1R890 | 301-0105-00 | | | RES, FXD, FILM: 1M OHM, 5%, 0.50W | 19701 | 5053CX1M000J |
| A1R891 | 301-0105-00 | | | RES, FXD, FILM: 1M OHM, 5%, 0.50W | 19701 | 5053CX1M000J |
| A1R892 | 301-0105-00 | 200360 | 202061 | RES, FXD, FILM: 1M OHM, 5%, 0.50W | 19701 | 5053CX1M000J |
| A1R892 | 301-0225-00 | 202062 | 203058 | RES, FXD, FILM: 2.2M OHM, 5%, 0.5W | 19701 | 5053CX2M200J |
| A1R892 | 301-0105-00 | 203059 | | RES, FXD, FILM: 1M OHM, 5%, 0.50W (UNITED KINGDOM ONLY) | 19701 | 5053CX1M000J |
| A1R892 | 301-0105-00 | | | RES, FXD, FILM: 1M OHM, 5%, 0.50W (U.S.A. & GUERNSEY) | 19701 | 5053CX1M000J |
| A1R894 | 301-0105-00 | | | RES, FXD, FILM: 1M OHM, 5%, 0.50W | 19701 | 5053CX1M000J |
| A1R898 | 315-0391-00 | | | RES, FXD, FILM: 390 OHM, 5%, 0.25W | 57668 | NTR25J-E390E |
| A1R899 | 315-0102-00 | | | RES, FXD, FILM: 1K OHM, 5%, 0.25W | 57668 | NTR25JE01K0 |
| A1R900 | 315-0105-00 | | | RES, FXD, FILM: 1M OHM, 5%, 0.25W | 19701 | 5043CX1M000J |
| A1R901 | 315-0103-00 | | | RES, FXD, FILM: 10K OHM, 5%, 0.25W | 19701 | 5043CX10K00J |
| A1R907 | 308-0843-00 | | | RES, FXD, WW: 0.2 OHM, 5%, 1/0W | 91637 | RS1A-90-R2J |
| A1R908 | 321-0337-00 | | | RES, FXD, FILM: 31.6K OHM, 1%, 0.125W, TC=T0 | 07716 | CEAD31601F |
| A1R909 | 315-0222-00 | | | RES, FXD, FILM: 2.2K OHM, 5%, 0.25W | 57668 | NTR25J-E02K2 |
| A1R910 | 315-0821-00 | | | RES, FXD, FILM: 820 OHM, 5%, 0.25W | 19701 | 5043CX820R0J |
| A1R911 | 315-0223-00 | | | RES, FXD, FILM: 22K OHM, 5%, 0.25W | 19701 | 5043CX22K00J92U |
| A1R912 | 315-0752-00 | | | RES, FXD, FILM: 7.5K OHM, 5%, 0.25W | 57668 | NTR25J-E07K5 |
| A1R913 | 321-0318-00 | | | RES, FXD, FILM: 20.0K OHM, 1%, 0.125W, TC=T0 | 19701 | 5033ED20K00F |
| A1R914 | 315-0105-00 | | | RES, FXD, FILM: 1M OHM, 5%, 0.25W | 19701 | 5043CX1M000J |
| A1R915 | 315-0103-00 | | | RES, FXD, FILM: 10K OHM, 5%, 0.25W | 19701 | 5043CX10K00J |
| A1R916 | 315-0222-00 | | | RES, FXD, FILM: 2.2K OHM, 5%, 0.25W | 57668 | NTR25J-E02K2 |
| A1R917 | 321-0361-00 | | | RES, FXD, FILM: 56.2K OHM, 1%, 0.125W, TC=T0 | 07716 | CEAD56201F |
| A1R918 | 315-0103-00 | | | RES, FXD, FILM: 10K OHM, 5%, 0.25W | 19701 | 5043CX10K00J |
| A1R919 | 315-0182-00 | | | RES, FXD, FILM: 1.8K OHM, 5%, 0.25W | 57668 | NTR25J-E1K8 |
| A1R920 | 315-0510-00 | | | RES, FXD, FILM: 51 OHM, 5%, 0.25W | 19701 | 5043CX51R00J |
| A1R921 | 315-0101-00 | | | RES, FXD, FILM: 100 OHM, 5%, 0.25W | 57668 | NTR25J-E 100E |
| A1R922 | 315-0103-00 | | | RES, FXD, FILM: 10K OHM, 5%, 0.25W | 19701 | 5043CX10K00J |
| A1R923 | 315-0471-00 | | | RES, FXD, FILM: 470 OHM, 5%, 0.25W | 57668 | NTR25J-E470E |
| A1R924 | 315-0104-00 | | | RES, FXD, FILM: 100K OHM, 5%, 0.25W | 57668 | NTR25J-E100K |
| A1R925 | 315-0204-00 | | | RES, FXD, FILM: 200K OHM, 5%, 0.25W | 19701 | 5043CX200K0J |
| A1R926 | 315-0273-00 | | | RES, FXD, FILM: 27K OHM, 5%, 0.25W | 57668 | NTR25J-E27K0 |
| A1R927 | 321-0322-00 | | | RES, FXD, FILM: 22.1K OHM, 0.1%, 0.125W, TC=T0 | 19701 | 5033ED22K10F |
| A1R928 | 321-0337-00 | | | RES, FXD, FILM: 31.6K OHM, 1%, 0.125W, TC=T0 | 07716 | CEAD31601F |
| A1R929 | 321-0318-00 | | | RES, FXD, FILM: 20.0K OHM, 1%, 0.125W, TC=T0 | 19701 | 5033ED20K00F |
| A1R930 | 315-0104-00 | | | RES, FXD, FILM: 100K OHM, 5%, 0.25W | 57668 | NTR25J-E100K |
| A1R931 | 315-0471-00 | | | RES, FXD, FILM: 470 OHM, 5%, 0.25W | 57668 | NTR25J-E470E |
| A1R932 | 315-0243-00 | | | RES, FXD, FILM: 24K OHM, 5%, 0.25W | 57668 | NTR25J-E24K0 |
| A1R933 | 311-2364-00 | | | RES, VAR, NONW: TRMR, 4.7K OHM, 0.5W | K8788 | TC10-LV10-4K7/A |
| A1R934 | 315-0103-00 | | | RES, FXD, FILM: 10K OHM, 5%, 0.25W | 19701 | 5043CX10K00J |
| A1R935 | 315-0103-00 | | | RES, FXD, FILM: 10K OHM, 5%, 0.25W | 19701 | 5043CX10K00J |
| A1R936 | 315-0104-00 | | | RES, FXD, FILM: 100K OHM, 5%, 0.25W | 57668 | NTR25J-E100K |
| A1R937 | 315-0103-00 | | | RES, FXD, FILM: 10K OHM, 5%, 0.25W | 19701 | 5043CX10K00J |
| A1R938 | 315-0391-00 | | | RES, FXD, FILM: 390 OHM, 5%, 0.25W | 57668 | NTR25J-E390E |
| A1R939 | 315-0102-00 | | | RES, FXD, FILM: 1K OHM, 5%, 0.25W | 57668 | NTR25JE01K0 |
| A1R940 | 315-0104-00 | | | RES, FXD, FILM: 100K OHM, 5%, 0.25W | 57668 | NTR25J-E100K |
| A1R941 | 321-0253-00 | | | RES, FXD, FILM: 4.22K OHM, 1%, 0.125W, TC=T0 | 19701 | 5033ED 4K 220F |
| A1R942 | 321-0337-00 | | | RES, FXD, FILM: 31.6K OHM, 1%, 0.125W, TC=T0 | 07716 | CEAD31601F |
| A1R943 | 315-0243-00 | | | RES, FXD, FILM: 24K OHM, 5%, 0.25W | 57668 | NTR25J-E24K0 |
| A1R944 | 315-0392-00 | | | RES, FXD, FILM: 3.9K OHM, 5%, 0.25W | 57668 | NTR25J-E03K9 |

Replaceable Electrical Parts - 2225 Service

| Component No. | Tektronix Part No. | Serial/Assembly No. Effective | Dscont | Name & Description | Mfr. Code | Mfr. Part No. |
|---------------|--------------------|-------------------------------|---------|---|-----------|----------------|
| A1R945 | 315-0103-00 | | | RES, FXD, FILM: 10K OHM, 5%, 0.25W | 19701 | 5043CX10K00J |
| A1R946 | 315-0512-00 | | | RES, FXD, FILM: 5.1K OHM, 5%, 0.25W | 57668 | NTR25J-E05K1 |
| A1R952 | 315-0471-00 | | | RES, FXD, FILM: 470 OHM, 5%, 0.25W | 57668 | NTR25J-E470E |
| A1R953 | 315-0101-00 | | | RES, FXD, FILM: 100 OHM, 5%, 0.25W | 57668 | NTR25J-E 100E |
| A1R965 | 315-0103-00 | | | RES, FXD, FILM: 10K OHM, 5%, 0.25W | 19701 | 5043CX10K00J |
| A1R966 | 315-0104-00 | | | RES, FXD, FILM: 100K OHM, 5%, 0.25W | 57668 | NTR25J-E100K |
| A1R967 | 315-0103-00 | | | RES, FXD, FILM: 10K OHM, 5%, 0.25W | 19701 | 5043CX10K00J |
| A1R968 | 315-0391-00 | | | RES, FXD, FILM: 390 OHM, 5%, 0.25W | 57668 | NTR25J-E390E |
| A1R969 | 315-0102-00 | | | RES, FXD, FILM: 1K OHM, 5%, 0.25W | 57668 | NTR25J-E01K0 |
| A1R975 | 321-0318-00 | | | RES, FXD, FILM: 20.0K OHM, 1%, 0.125W, TC=TO | 19701 | 5033ED20K00F |
| A1R976 | 315-0512-00 | | | RES, FXD, FILM: 5.1K OHM, 5%, 0.25W | 57668 | NTR25J-E05K1 |
| A1R978 | 315-0512-00 | | | RES, FXD, FILM: 5.1K OHM, 5%, 0.25W | 57668 | NTR25J-E05K1 |
| A1R982 | 315-0471-00 | | | RES, FXD, FILM: 470 OHM, 5%, 0.25W | 57668 | NTR25J-E470E |
| A1R983 | 315-0101-00 | | | RES, FXD, FILM: 100 OHM, 5%, 0.25W | 57668 | NTR25J-E 100E |
| A1RT236 | 307-0125-00 | | | RES, THERMAL: 500 OHM, 10%, NTC | 15454 | 1DB501K-220-EC |
| A1T902 | 120-1634-00 | 200360 | 207158 | TRANSFORMER, RF: SWITCHING, INVERTER | 80009 | 120-1634-00 |
| A1T902 | 120-1634-01 | 207159 | | TRANSFORMER, RF: SWITCHING, INVERTER (UNITED KINGDOM ONLY) | TK0FD | ORDER BY DESCR |
| A1T902 | 120-1634-00 | 100001 | 100119 | TRANSFORMER, RF: SWITCHING, INVERTER | 80009 | 120-1634-00 |
| A1T902 | 120-1634-01 | 100120 | | TRANSFORMER, RF: SWITCHING, INVERTER (GUERNSEY ONLY) | TK0FD | ORDER BY DESCR |
| A1T902 | 120-1634-00 | B010100 | B010462 | TRANSFORMER, RF: SWITCHING, INVERTER | 80009 | 120-1634-00 |
| A1T902 | 120-1634-01 | B010463 | | TRANSFORMER, RF: SWITCHING, INVERTER (U.S.A. ONLY) | TK0FD | ORDER BY DESCR |
| A1U130 | 156-0534-00 | | | MICROCKT, LINEAR: DUAL DIFF AMPL | 02735 | CA3102E-98 |
| A1U180 | 156-0534-00 | | | MICROCKT, LINEAR: DUAL DIFF AMPL | 02735 | CA3102E-98 |
| A1U225 | 156-0067-00 | | | MICROCKT, LINEAR: BIPOLAR, OPNL AMPL | 80009 | 156-0067-00 |
| A1U300 | 156-0349-00 | | | IC, DIGITAL: CMOS, GATES; QUAD 2-INPUT NOR; 4001, DIP14.3, TUBE (U.S.A. ONLY) | 04713 | MC14001UBCL |
| A1U300 | 156-2988-00 | | | MICROCKT, DCTL: CMOS, QUAD 2 IP NOR (UNITED KINGDOM & GUERNSEY) | K5856 | CD4001BE |
| A1U304 | 156-0754-00 | | | MICROCKT, DCTL: DUAL 4-INP NOR GATE (U.S.A. ONLY) | 80009 | 156-0754-00 |
| A1U304 | 156-2986-00 | | | MICROCKT, DCTL: CMOS, QUAD 4 IP NOR (UNITED KINGDOM & GUERNSEY) | K5856 | CD4002BE |
| A1U308 | 156-0524-00 | | | IC, DIGITAL: CMOS, GATES; TRIPLE 3-INPUT NAND; 4023B, DIP14.3, TUBE (U.S.A. ONLY) | 02735 | CD4023BF |
| A1U308 | 156-2987-00 | | | MICROCKT, DCTL: CMOS, TRIPLE 3 IP NAND (UNITED KINGDOM & GUERNSEY) | K5856 | CD4023BE |
| A1U310 | 156-1349-00 | | | MICROCKT, LINEAR: DUAL INDEP DIFF AMPL (U.S.A. ONLY) | 80009 | 156-1349-00 |
| A1U310 | 156-2956-00 | | | MICROCKT, LINEAR: DUAL, INDEP PIFF AMPL (UNITED KINGDOM & GUERNSEY) | K5856 | CA 3054 |
| A1U315 | 156-0048-00 | | | MICROCKT, LINEAR: 5 XSTR ARRAY (U.S.A. ONLY) | 80009 | 156-0048-00 |
| A1U315 | 156-2902-00 | | | MICROCKT, LINEAR: (UNITED KINGDOM & GUERNSEY) | K5856 | CA 3046 |
| A1U325 | 156-0048-00 | | | MICROCKT, LINEAR: 5 XSTR ARRAY (U.S.A. ONLY) | 80009 | 156-0048-00 |
| A1U325 | 156-2902-00 | | | MICROCKT, LINEAR: (UNITED KINGDOM & GUERNSEY) | K5856 | CA 3046 |
| A1U335 | 156-1349-00 | | | MICROCKT, LINEAR: DUAL INDEP DIFF AMPL (U.S.A. ONLY) | 80009 | 156-1349-00 |
| A1U335 | 156-2956-00 | | | MICROCKT, LINEAR: DUAL, INDEP PIFF AMPL (UNITED KINGDOM & GUERNSEY) | K5856 | CA 3054 |
| A1U340 | 156-1349-00 | | | MICROCKT, LINEAR: DUAL INDEP DIFF AMPL (U.S.A. ONLY) | 80009 | 156-1349-00 |
| A1U340 | 156-2956-00 | | | MICROCKT, LINEAR: DUAL, INDEP PIFF AMPL (UNITED KINGDOM & GUERNSEY) | K5856 | CA 3054 |

| Component No. | Tektronix Part No. | Serial/Assembly No. Effective | Discont | Name & Description | Mfr. Code | Mfr. Part No. |
|---------------|--------------------|-------------------------------|---------|---|-----------|----------------|
| A1U370 | 156-0048-00 | | | MICROCKT, LINEAR: 5 XSTR ARRAY (U.S.A. ONLY) | 80009 | 156-0048-00 |
| A1U370 | 156-2902-00 | | | MICROCKT, LINEAR: (UNITED KINGDOM & GUERNSEY) | K5856 | CA 3046 |
| A1U380 | 156-0048-00 | | | MICROCKT, LINEAR: 5 XSTR ARRAY (U.S.A. ONLY) | 80009 | 156-0048-00 |
| A1U380 | 156-2902-00 | | | MICROCKT, LINEAR: (UNITED KINGDOM & GUERNSEY) | K5856 | CA 3046 |
| A1U415 | 156-0048-00 | | | MICROCKT, LINEAR: 5 XSTR ARRAY (U.S.A. ONLY) | 80009 | 156-0048-00 |
| A1U415 | 156-2902-00 | | | MICROCKT, LINEAR: (UNITED KINGDOM & GUERNSEY) | K5856 | CA 3046 |
| A1U425 | 156-0853-00 | | | MICROCKT, LINEAR: OPNL AMPL, DUAL | 80009 | 156-0853-00 |
| A1U435 | 156-0048-00 | | | MICROCKT, LINEAR: 5 XSTR ARRAY (U.S.A. ONLY) | 80009 | 156-0048-00 |
| A1U435 | 156-2902-00 | | | MICROCKT, LINEAR: (UNITED KINGDOM & GUERNSEY) | K5856 | CA 3046 |
| A1U445 | 156-0048-00 | | | MICROCKT, LINEAR: 5 XSTR ARRAY (U.S.A. ONLY) | 80009 | 156-0048-00 |
| A1U445 | 156-2902-00 | | | MICROCKT, LINEAR: (UNITED KINGDOM & GUERNSEY) | K5856 | CA 3046 |
| A1U450 | 156-0853-00 | | | MICROCKT, LINEAR: OPNL AMPL, DUAL | 80009 | 156-0853-00 |
| A1U460 | 156-1349-00 | | | MICROCKT, LINEAR: DUAL INDEP DIFF AMPL (U.S.A. ONLY) | 80009 | 156-1349-00 |
| A1U460 | 156-2956-00 | | | MICROCKT, LINEAR: DUAL, INDEP PIFF AMPL (UNITED KINGDOM & GUERNSEY) | K5856 | CA 3054 |
| A1U480 | 156-0205-03 | | | MICROCKT, DCTL: ECL, QUAD 2-INPUT NOR GATE | 04713 | MC10102 L OR P |
| A1U500 | 156-1335-00 | | | MICROCKT, DCTL: LSTTL, DUAL RETRIGGERABLE RESETTABLE MONOSTABLE MV, SCRNL | 80009 | 156-1335-00 |
| A1U510 | 156-0388-03 | | | IC, DIGITAL: LSTTL, FLIP FLOP; DUAL D-TYPE; 74LS 74, DIP14.3, TUBE, SCRNL | 80009 | 156-0388-03 |
| A1U515 | 156-0382-02 | | | IC, DIGITAL: LSTTL, GATES; QUAD 2-INPUT NAND; 74 LS00, DIP14.3, TUBE, BURN-IN | 80009 | 156-0382-02 |
| A1U520 | 156-0205-03 | | | MICROCKT, DCTL: ECL, QUAD 2-INPUT NOR GATE | 04713 | MC10102 L OR P |
| A1U530 | 156-1639-00 | | | IC, DIGITAL: ECL, FLIP FLOP; DUAL MASTER-SLAVE; 10H131, DIP16.3 | 80009 | 156-1639-00 |
| A1U537 | 156-0721-02 | | | MICROCKT, DCTL: QUAD ST 2-IMP NAND GATES | 80009 | 156-0721-02 |
| A1U540 | 156-0388-03 | | | IC, DIGITAL: LSTTL, FLIP FLOP; DUAL D-TYPE; 74LS 74, DIP14.3, TUBE, SCRNL | 80009 | 156-0388-03 |
| A1U550 | 156-0205-03 | | | MICROCKT, DCTL: ECL, QUAD 2-INPUT NOR GATE | 04713 | MC10102 L OR P |
| A1U560 | 156-0048-00 | | | MICROCKT, LINEAR: 5 XSTR ARRAY (U.S.A. ONLY) | 80009 | 156-0048-00 |
| A1U560 | 156-2902-00 | | | MICROCKT, LINEAR: (UNITED KINGDOM & GUERNSEY) | K5856 | CA 3046 |
| A1U570 | 156-1639-00 | | | IC, DIGITAL: ECL, FLIP FLOP; DUAL MASTER-SLAVE; 10H131, DIP16.3 | 80009 | 156-1639-00 |
| A1U580 | 156-0853-00 | | | MICROCKT, LINEAR: OPNL AMPL, DUAL | 80009 | 156-0853-00 |
| A1U910 | 156-1627-00 | | | MICROCKT, LINEAR: BIPOLAR, PWM PWR SPLY CONT | 12969 | UC494ACN |
| A1U920 | 156-0853-00 | | | MICROCKT, LINEAR: OPNL AMPL, DUAL | 80009 | 156-0853-00 |
| A1U940 | 156-1627-00 | | | MICROCKT, LINEAR: BIPOLAR, PWM PWR SPLY CONT | 12969 | UC494ACN |
| A1U975 | 152-0806-00 | E200000 | E210593 | SEMICON DVC, DI: HV MULTR, 4KVAC INPUT, 12KVDC OUTPUT | 80009 | 152-0806-00 |
| A1U975 | 152-1046-00 | E210594 | | SEMICON DVC, DI: HV MULTR, 4KVAC INPUT, 12KVAC (UNITED KINGDOM ONLY) | U4144 | MSL8524 |
| A1U975 | 152-0806-00 | G100000 | G100749 | SEMICON DVC, DI: HV MULTR, 4KVAC INPUT, 12KVDC OUTPUT | 80009 | 152-0806-00 |
| A1U975 | 152-1046-00 | G100750 | | SEMICON DVC, DI: HV MULTR, 4KVAC INPUT, 12KVAC (GUERNSEY ONLY) | U4144 | MSL8524 |
| A1VR514 | 152-0166-00 | | | SEMICON DVC, DI: ZEN, SI, 6.2V, 5%, 400MW, DO-7 | 80009 | 152-0166-00 |
| A1VR776 | 152-0149-00 | | | SEMICON DVC, DI: ZEN, SI, 10V, 5%, 0.4W, DO-7 | 04713 | 1N961B |
| A1VR792 | 152-0243-00 | | | SEMICON DVC, DI: ZEN, SI, 15V, 5%, 0.4W, DO-7 | 14433 | Z5412 |

Replaceable Electrical Parts - 2225 Service

| Component No. | Tektronix Part No. | Serial/Assembly No. Effective Discnt | Name & Description | Mfr. Code | Mfr. Part No. |
|---------------|-----------------------|--|---|--------------|------------------|
| A1VR910 | 152-0147-00 | | SEMICON DVC,DI:ZEN,SI,27V,5%,0.4W,DO-7 | 80009 | 152-0147-00 |
| A1VR931 | 152-0317-00 | | SEMICON DVC,DI:ZEN,SI,6.2V,5%,0.4W,DO-35 | 04713 | 1N825 |
| A1VR939 | 152-0278-00 | | DIODE,ZENER:,,3V,5%,400MW;1N4372A,DO-7 OR D 0-35,TR | 80009 | 152-0278-00 |
| A1VR942 | 152-0243-00 | | SEMICON DVC,DI:ZEN,SI,15V,5%,0.4W,DO-7 | 14433 | Z5412 |
| A1VR969 | 152-0278-00 | | DIODE,ZENER:,,3V,5%,400MW;1N4372A,DO-7 OR D 0-35,TR | 80009 | 152-0278-00 |
| A1W30 | 174-0640-00 | | CA ASSY,SP,ELEC:4,26 AWG,135MM L,RIBBON | TKOEM | 820265804(135mm) |
| A1W80 | 174-0640-00 | | CA ASSY,SP,ELEC:4,26 AWG,135MM L,RIBBON | TKOEM | 820265804(135mm) |
| A1W90 | 174-0635-00 | | CA ASSY,SP,ELEC:6,26 AWG,120MM L,RIBBON | TKOEM | 82265806(120mm) |
| A1W129 | 131-0566-00 | | BUS,CONDUCTOR:DUMMY RES,0.094 OD X 0.225 L | 24546 | OMA 07 |
| A1W140 | 176-0231-00 | E209929 | WIRE,ELECTRICAL:22 AWG,TINNED | 80009 | 176-0231-00 |
| A1W140 | 176-0231-00 | G100809 | WIRE,ELECTRICAL:22 AWG,TINNED | 80009 | 176-0231-00 |
| A1W179 | 131-0566-00 | | BUS,CONDUCTOR:DUMMY RES,0.094 OD X 0.225 L | 24546 | OMA 07 |
| A1W500 | 131-0566-00 | 202908 | BUS,CONDUCTOR:DUMMY RES,0.094 OD X 0.225 L (UNITED KINGDOM ONLY) | 24546 | OMA 07 |
| A1W500 | 131-0566-00 | | BUS,CONDUCTOR:DUMMY RES,0.094 OD X 0.225 L (U.S.A. & GUERNSEY) | 24546 | OMA 07 |
| A1W590 | 195-3407-00 | | LEAD,ELECTRICAL:26 AWG,3.0 L,9-3 | 80009 | 195-3407-00 |
| A1W701 | 174-0637-00 | | CA ASSY,SP,ELEC:6,26 AWG,300MM L,RIBBON | TKOEM | 82265806(300mm) |
| A1W755 | 174-0640-00 | | CA ASSY,SP,ELEC:4,26 AWG,135MM L,RIBBON | TKOEM | 820265804(135mm) |
| A1W792 | 131-0566-00 | | BUS,CONDUCTOR:DUMMY RES,0.094 OD X 0.225 L | 24546 | OMA 07 |
| A1W893 | 174-0642-00 | | CA ASSY,SP,ELEC:3,26 AWG,100MM L,RIBBON | TKOEM | 82265803(100mm) |
| A1W971 | 131-0566-00 | | BUS,CONDUCTOR:DUMMY RES,0.094 OD X 0.225 L | 24546 | OMA 07 |
| A1W984 | 131-0566-00 | | BUS,CONDUCTOR:DUMMY RES,0.094 OD X 0.225 L | 24546 | OMA 07 |
| A1W985 | 131-0566-00 | | BUS,CONDUCTOR:DUMMY RES,0.094 OD X 0.225 L | 24546 | OMA 07 |
| A1W987 | 131-0566-00 | | BUS,CONDUCTOR:DUMMY RES,0.094 OD X 0.225 L | 24546 | OMA 07 |
| A1W989 | 131-0566-00 | | BUS,CONDUCTOR:DUMMY RES,0.094 OD X 0.225 L | 24546 | OMA 07 |
| A1W991 | 131-0566-00 | | BUS,CONDUCTOR:DUMMY RES,0.094 OD X 0.225 L | 24546 | OMA 07 |

| Component No. | Tektronix Part No. | Serial/Assembly No. Effective | Discont | Name & Description | Mfr. Code | Mfr. Part No. |
|---------------|--------------------|-------------------------------|---------|--|-----------|------------------|
| A2 | 670-9936-00 | 200001 | 202907 | CIRCUIT BD ASSY:ATTENUATOR & TIMEBASE | 80009 | 670-9936-00 |
| A2 | 670-9936-05 | 202908 | | CIRCUIT BD ASSY:ATTENUATOR & T/B | 80009 | 670-9936-05 |
| A2AT1 | 260-2345-00 | | | SWITCH ASSEMBLY:DPDT,ATTENUATOR | S4239 | NOBLE E773-1019E |
| A2AT51 | 260-2345-00 | | | SWITCH ASSEMBLY:DPDT,ATTENUATOR | S4239 | NOBLE E773-1019E |
| A2C6 | 283-0000-00 | | | CAP,FXD,CER DI:0.001UF,+100-0%,500V | 59660 | 831-610-Y5U0102P |
| A2C7 | 281-0214-00 | 200360 | 206606 | CAP,VAR,CER DI:0.6-3PF,400V (UNITED KINGDOM ONLY) | 52763 | 313613-140 |
| A2C7 | 281-0214-00 | B010100 | B010462 | CAP,VAR,CER DI:0.6-3PF,400V (U.S.A. ONLY) | 52763 | 313613-140 |
| A2C8 | 281-0812-00 | | | CAP,FXD,CER DI:1000PF,10%,100V | 04222 | MA101C102KAA |
| A2C13 | 281-0775-01 | | | CAP,FXD,CER DI:0.1UF,20%,50V | 04222 | SA105E104MAA |
| A2C30 | 281-0775-01 | | | CAP,FXD,CER DI:0.1UF,20%,50V | 04222 | SA105E104MAA |
| A2C31 | 281-0812-00 | | | CAP,FXD,CER DI:1000PF,10%,100V | 04222 | MA101C102KAA |
| A2C32 | 281-0773-00 | | | CAP,FXD,CER DI:0.01UF,10%,100V | 04222 | MA201C103KAA |
| A2C33 | 281-0773-00 | | | CAP,FXD,CER DI:0.01UF,10%,100V | 04222 | MA201C103KAA |
| A2C35 | 281-0812-00 | | | CAP,FXD,CER DI:1000PF,10%,100V | 04222 | MA101C102KAA |
| A2C38 | 281-0812-00 | | | CAP,FXD,CER DI:1000PF,10%,100V | 04222 | MA101C102KAA |
| A2C56 | 283-0000-00 | | | CAP,FXD,CER DI:0.001UF,+100-0%,500V | 59660 | 831-610-Y5U0102P |
| A2C57 | 281-0214-00 | 200360 | 206606 | CAP,VAR,CER DI:0.6-3PF,400V (UNITED KINGDOM ONLY) | 52763 | 313613-140 |
| A2C57 | 281-0214-00 | B010100 | B010462 | CAP,VAR,CER DI:0.6-3PF,400V (U.S.A. ONLY) | 52763 | 313613-140 |
| A2C58 | 281-0812-00 | | | CAP,FXD,CER DI:1000PF,10%,100V | 04222 | MA101C102KAA |
| A2C59 | 281-0775-01 | 100752 | | CAP,FXD,CER DI:0.1UF,20%,50V | 04222 | SA105E104MAA |
| A2C59 | 281-0775-01 | 210469 | | CAP,FXD,CER DI:0.1UF,20%,50V | 04222 | SA105E104MAA |
| A2C63 | 281-0775-01 | | | CAP,FXD,CER DI:0.1UF,20%,50V | 04222 | SA105E104MAA |
| A2C80 | 281-0775-01 | | | CAP,FXD,CER DI:0.1UF,20%,50V | 04222 | SA105E104MAA |
| A2C81 | 281-0812-00 | | | CAP,FXD,CER DI:1000PF,10%,100V | 04222 | MA101C102KAA |
| A2C82 | 281-0773-00 | | | CAP,FXD,CER DI:0.01UF,10%,100V | 04222 | MA201C103KAA |
| A2C83 | 281-0773-00 | | | CAP,FXD,CER DI:0.01UF,10%,100V | 04222 | MA201C103KAA |
| A2C85 | 281-0775-01 | | | CAP,FXD,CER DI:0.1UF,20%,50V | 04222 | SA105E104MAA |
| A2C88 | 281-0812-00 | | | CAP,FXD,CER DI:1000PF,10%,100V | 04222 | MA101C102KAA |
| A2C93 | 290-1153-00 | | | CAP,FXD,ELCTLT:47UF,+50-10%,10V | K8996 | 030-24479 |
| A2C94 | 281-0775-01 | | | CAP,FXD,CER DI:0.1UF,20%,50V | 04222 | SA105E104MAA |
| A2C95 | 281-0775-01 | | | CAP,FXD,CER DI:0.1UF,20%,50V | 04222 | SA105E104MAA |
| A2C96 | 290-1153-00 | | | CAP,FXD,ELCTLT:47UF,+50-10%,10V | K8996 | 030-24479 |
| A2C97 | 281-0775-01 | | | CAP,FXD,CER DI:0.1UF,20%,50V | 04222 | SA105E104MAA |
| A2C98 | 281-0775-01 | | | CAP,FXD,CER DI:0.1UF,20%,50V | 04222 | SA105E104MAA |
| A2C701 | 285-1409-00 | | | CAP,FXD,MTLZD:1UF,1%,160V,AXIAL,TUB,MI | TKOED | ORDER BY DESCR |
| A2C702 | 285-1408-00 | | | CAP,FXD,MTLZD:10UF,1%,250V,AXIAL,TUB,MI | TKOED | ORDER BY DESCR |
| A2C703 | 281-0207-00 | | | CAP,VAR,PLASTIC:2-18PF,100V | 52769 | GXA 18000 |
| A2C704 | 283-0674-00 | | | CAP,FXD,MICA DI:85PF,1%,500V | 00853 | D155F850F0 |
| A2C705 | 281-0813-00 | | | CAP,FXD,CER DI:0.047UF,20%,50V | 05397 | C412C473M5V2CA |
| A2C706 | 281-0775-01 | | | CAP,FXD,CER DI:0.1UF,20%,50V | 04222 | SA105E104MAA |
| A2C707 | 281-0775-01 | | | CAP,FXD,CER DI:0.1UF,20%,50V | 04222 | SA105E104MAA |
| A2C708 | 281-0756-00 | | | CAP,FXD,CER DI:2.2PF,+/-0.5PF,200V | 04222 | SA102A2R2DAA |
| A2C709 | 290-0283-00 | | | CAP,FXD,ELCTLT:0.47UF,10%,35V | 05397 | T320A474K035AS |
| A2C710 | 281-0775-01 | | | CAP,FXD,CER DI:0.1UF,20%,50V | 04222 | SA105E104MAA |
| A2C712 | 290-1153-00 | | | CAP,FXD,ELCTLT:47UF,+50-10%,10V | K8996 | 030-24479 |
| A2C713 | 290-1153-00 | | | CAP,FXD,ELCTLT:47UF,+50-10%,10V | K8996 | 030-24479 |
| A2C714 | 281-0776-00 | | | CAP,FXD,CER DI:120PF,5%,100V | 20932 | 401E0100AD121J |
| A2C715 | 290-1153-00 | | | CAP,FXD,ELCTLT:47UF,+50-10%,10V | K8996 | 030-24479 |
| A2C722 | 281-0775-01 | | | CAP,FXD,CER DI:0.1UF,20%,50V | 04222 | SA105E104MAA |
| A2C723 | 290-0246-00 | | | CAP,FXD,ELCTLT:3.3UF,10%,15V | 12954 | D3R3EA15K1 |
| A2C724 | 281-0775-01 | | | CAP,FXD,CER DI:0.1UF,20%,50V | 04222 | SA105E104MAA |
| A2C732 | 281-0809-00 | 207212 | | CAP,FXD,CER DI:200 PF,5%,100V (UNITED KINGDOM ONLY) | 04222 | MA101A201JAA |
| A2C732 | 281-0809-00 | B010463 | | CAP,FXD,CER DI:200 PF,5%,100V (U.S.A. ONLY) | 04222 | MA101A201JAA |

Replaceable Electrical Parts - 2225 Service

| Component No. | Tektronix Part No. | Serial/Assembly No. Effective Dscont | Name & Description | Mfr. Code | Mfr. Part No. |
|---------------|--------------------|--------------------------------------|---|-----------|-----------------|
| A2C732 | 281-0809-00 | 100041 | CAP,FXD,CER DI:200 PF,5%,100V (GUERNSEY ONLY) | 04222 | MA101A201JAA |
| A2C733 | 281-0758-00 | | CAP,FXD,CER DI:15PF,20%,100V | 04222 | SA102A150MAA |
| A2C746 | 281-0809-00 | | CAP,FXD,CER DI:200 PF,5%,100V | 04222 | MA101A201JAA |
| A2C755 | 281-0809-00 | | CAP,FXD,CER DI:200 PF,5%,100V | 04222 | MA101A201JAA |
| A2C767 | 281-0786-00 | | CAP,FXD,CER DI:150PF,10%,100V | 04222 | MA101A151KAA |
| A2C773 | 281-0809-00 | | CAP,FXD,CER DI:200 PF,5%,100V | 04222 | MA101A201JAA |
| A2C774 | 281-0775-01 | | CAP,FXD,CER DI:0.1UF,20%,50V | 04222 | SA105E104MAA |
| A2CR7 | 152-0324-00 | | SEMICON DVC,DI:SW,SI,35V,0.1A,DO-7 | 14552 | MT5128 |
| A2CR57 | 152-0324-00 | | SEMICON DVC,DI:SW,SI,35V,0.1A,DO-7 | 14552 | MT5128 |
| A2CR747 | 152-0141-02 | | SEMICON DVC,DI:SW,SI,30V,150MA,30V,DO-35 | 03508 | DA2527 (1N4152) |
| A2CR748 | 152-0141-02 | | SEMICON DVC,DI:SW,SI,30V,150MA,30V,DO-35 | 03508 | DA2527 (1N4152) |
| A2CR755 | 152-0141-02 | | SEMICON DVC,DI:SW,SI,30V,150MA,30V,DO-35 | 03508 | DA2527 (1N4152) |
| A2CR758 | 152-0141-02 | | SEMICON DVC,DI:SW,SI,30V,150MA,30V,DO-35 | 03508 | DA2527 (1N4152) |
| A2CR761 | 152-0141-02 | | SEMICON DVC,DI:SW,SI,30V,150MA,30V,DO-35 | 03508 | DA2527 (1N4152) |
| A2CR762 | 152-0141-02 | | SEMICON DVC,DI:SW,SI,30V,150MA,30V,DO-35 | 03508 | DA2527 (1N4152) |
| A2CR769 | 152-0141-02 | | SEMICON DVC,DI:SW,SI,30V,150MA,30V,DO-35 | 03508 | DA2527 (1N4152) |
| A2CR773 | 152-0141-02 | | SEMICON DVC,DI:SW,SI,30V,150MA,30V,DO-35 | 03508 | DA2527 (1N4152) |
| A2CR774 | 152-0141-02 | | SEMICON DVC,DI:SW,SI,30V,150MA,30V,DO-35 | 03508 | DA2527 (1N4152) |
| A2E90 | 276-0752-00 | | CORE,EM:FERRITE | 34899 | 2743001111 |
| A2E91 | 276-0752-00 | | CORE,EM:FERRITE | 34899 | 2743001111 |
| A2E92 | 276-0752-00 | | CORE,EM:FERRITE | 34899 | 2743001111 |
| A2E93 | 276-0752-00 | | CORE,EM:FERRITE | 34899 | 2743001111 |
| A2J7 | 204-1034-00 | | CONN BODY,RCPT:1 X 6,WITH SOLDER TAILS | TKOEM | 52011-0610 |
| A2J29 | 136-0929-00 | | SKT,PL-IN ELEK:MICROCIRCUIT,14 PIN (U30) | TK00A | WPT DIR-14 |
| A2J30 | 204-1033-00 | | CONN BODY,RCPT:1 X 4,WITH SOLDER TAILS | TKOEM | 52011-0410 |
| A2J79 | 136-0929-00 | | SKT,PL-IN ELEK:MICROCIRCUIT,14 PIN (U80) | TK00A | WPT DIR-14 |
| A2J80 | 204-1033-00 | | CONN BODY,RCPT:1 X 4,WITH SOLDER TAILS | TKOEM | 52011-0410 |
| A2J90 | 204-1034-00 | | CONN BODY,RCPT:1 X 6,WITH SOLDER TAILS | TKOEM | 52011-0610 |
| A2J701 | 204-1034-00 | | CONN BODY,RCPT:1 X 6,WITH SOLDER TAILS | TKOEM | 52011-0610 |
| A2J755 | 204-1033-00 | | CONN BODY,RCPT:1 X 4,WITH SOLDER TAILS | TKOEM | 52011-0410 |
| A2L93 | 120-1631-00 | | COIL,RF:FXD,210UH | TK00A | ORDER BY DESCR |
| A2L96 | 120-1631-00 | | COIL,RF:FXD,210UH | TK00A | ORDER BY DESCR |
| A2L712 | 120-1631-00 | | COIL,RF:FXD,210UH | TK00A | ORDER BY DESCR |
| A2L713 | 120-1631-00 | | COIL,RF:FXD,210UH | TK00A | ORDER BY DESCR |
| A2Q13 | 151-1235-00 | | TRANSISTOR:JFET,N-CHAN,DUAL HYBRID | K7068 | 2N5911 |
| A2Q63 | 151-1235-00 | | TRANSISTOR:JFET,N-CHAN,DUAL HYBRID | K7068 | 2N5911 |
| A2Q701 | 151-0424-00 | | TRANSISTOR:NPN,SI,TO-92 | 80009 | 151-0424-00 |
| A2Q702 | 151-0188-00 | | TRANSISTOR:PNP,SI,TO-92 | 80009 | 151-0188-00 |
| A2Q704 | 151-1042-00 | | SEMICON DVC SE:FET,SI,TO-92 | 80009 | 151-1042-00 |
| A2Q706 | 151-0736-00 | | TRANSISTOR:NPN,SI,TO-92 | 80009 | 151-0736-00 |
| A2Q732 | 151-0190-00 | | TRANSISTOR:NPN,SI,TO-92 | 80009 | 151-0190-00 |
| A2Q736 | 151-0190-00 | | TRANSISTOR:NPN,SI,TO-92 | 80009 | 151-0190-00 |
| A2Q737 | 151-0188-00 | | TRANSISTOR:PNP,SI,TO-92 | 80009 | 151-0188-00 |
| A2Q747 | 151-0712-00 | | TRANSISTOR:PNP,SI,TO-92 | 80009 | 151-0712-00 |
| A2Q748 | 151-0712-00 | | TRANSISTOR:PNP,SI,TO-92 | 80009 | 151-0712-00 |
| A2Q750 | 151-0188-00 | | TRANSISTOR:PNP,SI,TO-92 | 80009 | 151-0188-00 |
| A2Q759 | 151-0188-00 | | TRANSISTOR:PNP,SI,TO-92 | 80009 | 151-0188-00 |
| A2Q760 | 151-0188-00 | | TRANSISTOR:PNP,SI,TO-92 | 80009 | 151-0188-00 |
| A2R3 | 315-0330-00 | | RES,FXD,FILM:33 OHM,5%,0.25W | 19701 | 5043CX33R00J |
| A2R5 | 322-0481-00 | | RES,FXD,FILM:1M OHM,1%,0.25W,TC=TO | 75042 | CEBT0-1004F |
| A2R6 | 315-0474-00 | | RES,FXD,FILM:470K OHM,5%,0.25W | 19701 | 5043CX470KJ92U |
| A2R7 | 315-0470-00 | | RES,FXD,FILM:47 OHM,5%,0.25W | 57668 | NTR25J-E47E0 |
| A2R8 | 315-0104-00 | | RES,FXD,FILM:100K OHM,5%,0.25W | 57668 | NTR25J-E100K |
| A2R9 | 315-0330-00 | | RES,FXD,FILM:33 OHM,5%,0.25W | 19701 | 5043CX33R00J |
| A2R13 | 315-0470-00 | | RES,FXD,FILM:47 OHM,5%,0.25W | 57668 | NTR25J-E47E0 |

| Component No. | Tektronix Part No. | Serial/Assembly No. Effective | Discont | Name & Description | Mfr. Code | Mfr. Part No. |
|---------------|--------------------|-------------------------------|---------|---|-----------|-----------------|
| A2R14 | 315-0200-00 | | | RES, FXD, FILM: 20 OHM, 5%, 0.25W | 19701 | 5043CX20R00J |
| A2R15 | 315-0200-00 | | | RES, FXD, FILM: 20 OHM, 5%, 0.25W | 19701 | 5043CX20R00J |
| A2R22 | 321-0210-00 | | | RES, FXD, FILM: 1.50K OHM, 1%, 0.125W, TC=T0 | 19701 | 5033ED1K50F |
| A2R23 | 321-0210-00 | | | RES, FXD, FILM: 1.50K OHM, 1%, 0.125W, TC=T0 | 19701 | 5033ED1K50F |
| A2R29 | 321-0068-00 | | | RES, FXD, FILM: 49.9 OHM, 0.1%, 0.125W, TC=T0 | 91637 | CMF55116649R90F |
| A2R30 | 315-0472-00 | | | RES, FXD, FILM: 4.7K OHM, 5%, 0.25W | 57668 | NTR25J-E04K7 |
| A2R31 | 315-0101-00 | | | RES, FXD, FILM: 100 OHM, 5%, 0.25W | 57668 | NTR25J-E 100E |
| A2R32 | 315-0472-00 | | | RES, FXD, FILM: 4.7K OHM, 5%, 0.25W | 57668 | NTR25J-E04K7 |
| A2R33 | 311-2368-00 | | | RES, VAR, NONW: TRMR, 47K OHM, 0.5W | K8788 | TC10-LV10-47K/A |
| A2R35 | 321-0144-00 | | | RES, FXD, FILM: 309 OHM, 1%, 0.125W, TC=T0 | 07716 | CEAD309R0F |
| A2R36 | 315-0101-00 | | | RES, FXD, FILM: 100 OHM, 5%, 0.25W | 57668 | NTR25J-E 100E |
| A2R37 | 315-0102-00 | | | RES, FXD, FILM: 1K OHM, 5%, 0.25W | 57668 | NTR25JE01K0 |
| A2R38 | 321-0144-00 | | | RES, FXD, FILM: 309 OHM, 1%, 0.125W, TC=T0 | 07716 | CEAD309R0F |
| A2R39 | 315-0242-00 | | | RES, FXD, FILM: 2.4K OHM, 5%, 0.25W | 57668 | NTR25J-E02K4 |
| A2R41 | 321-0154-00 | | | RES, FXD, FILM: 392 OHM, 1%, 0.125W, TC=T0 | 07716 | CEAD392R0F |
| A2R42 | 315-0333-00 | | | RES, FXD, FILM: 33K OHM, 5%, 0.25W | 57668 | NTR25J-E33K0 |
| A2R53 | 315-0330-00 | | | RES, FXD, FILM: 33 OHM, 5%, 0.25W | 19701 | 5043CX33R00J |
| A2R55 | 322-0481-00 | | | RES, FXD, FILM: 1M OHM, 1%, 0.25W, TC=T0 | 75042 | CEBT0-1004F |
| A2R56 | 315-0474-00 | | | RES, FXD, FILM: 470K OHM, 5%, 0.25W | 19701 | 5043CX470K0J92U |
| A2R57 | 315-0470-00 | | | RES, FXD, FILM: 47 OHM, 5%, 0.25W | 57668 | NTR25J-E47E0 |
| A2R58 | 315-0104-00 | | | RES, FXD, FILM: 100K OHM, 5%, 0.25W | 57668 | NTR25J-E100K |
| A2R59 | 315-0330-00 | | | RES, FXD, FILM: 33 OHM, 5%, 0.25W | 19701 | 5043CX33R00J |
| A2R63 | 315-0470-00 | | | RES, FXD, FILM: 47 OHM, 5%, 0.25W | 57668 | NTR25J-E47E0 |
| A2R64 | 315-0200-00 | | | RES, FXD, FILM: 20 OHM, 5%, 0.25W | 19701 | 5043CX20R00J |
| A2R65 | 315-0200-00 | | | RES, FXD, FILM: 20 OHM, 5%, 0.25W | 19701 | 5043CX20R00J |
| A2R72 | 321-0210-00 | | | RES, FXD, FILM: 1.50K OHM, 1%, 0.125W, TC=T0 | 19701 | 5033ED1K50F |
| A2R73 | 321-0210-00 | | | RES, FXD, FILM: 1.50K OHM, 1%, 0.125W, TC=T0 | 19701 | 5033ED1K50F |
| A2R78 | 315-0102-00 | 202908 | | RES, FXD, FILM: 1K OHM, 5%, 0.25W (UNITED KINGDOM ONLY) | 57668 | NTR25JE01K0 |
| A2R78 | 315-0102-00 | | | RES, FXD, FILM: 1K OHM, 5%, 0.25W (U.S.A. & GUERNSEY) | 57668 | NTR25JE01K0 |
| A2R79 | 321-0068-00 | | | RES, FXD, FILM: 49.9 OHM, 0.1%, 0.125W, TC=T0 | 91637 | CMF55116649R90F |
| A2R80 | 315-0472-00 | | | RES, FXD, FILM: 4.7K OHM, 5%, 0.25W | 57668 | NTR25J-E04K7 |
| A2R81 | 315-0101-00 | | | RES, FXD, FILM: 100 OHM, 5%, 0.25W | 57668 | NTR25J-E 100E |
| A2R82 | 315-0472-00 | | | RES, FXD, FILM: 4.7K OHM, 5%, 0.25W | 57668 | NTR25J-E04K7 |
| A2R83 | 311-2368-00 | | | RES, VAR, NONW: TRMR, 47K OHM, 0.5W | K8788 | TC10-LV10-47K/A |
| A2R85 | 321-0144-00 | | | RES, FXD, FILM: 309 OHM, 1%, 0.125W, TC=T0 | 07716 | CEAD309R0F |
| A2R86 | 315-0101-00 | | | RES, FXD, FILM: 100 OHM, 5%, 0.25W | 57668 | NTR25J-E 100E |
| A2R87 | 315-0102-00 | | | RES, FXD, FILM: 1K OHM, 5%, 0.25W | 57668 | NTR25JE01K0 |
| A2R88 | 321-0144-00 | | | RES, FXD, FILM: 309 OHM, 1%, 0.125W, TC=T0 | 07716 | CEAD309R0F |
| A2R91 | 321-0154-00 | | | RES, FXD, FILM: 392 OHM, 1%, 0.125W, TC=T0 | 07716 | CEAD392R0F |
| A2R92 | 315-0333-00 | 202908 | | RES, FXD, FILM: 33K OHM, 5%, 0.25W (UNITED KINGDOM ONLY) | 57668 | NTR25J-E33K0 |
| A2R92 | 315-0333-00 | | | RES, FXD, FILM: 33K OHM, 5%, 0.25W (U.S.A. & GUERNSEY) | 57668 | NTR25J-E33K0 |
| A2R94 | 315-0333-00 | 202908 | | RES, FXD, FILM: 33K OHM, 5%, 0.25W (UNITED KINGDOM ONLY) | 57668 | NTR25J-E33K0 |
| A2R94 | 315-0333-00 | 202908 | | RES, FXD, FILM: 33K OHM, 5%, 0.25W (U.S.A. & GUERNSEY) | 57668 | NTR25J-E33K0 |
| A2R701 | 307-0780-01 | | | RES NTK, FXD, FI: TIMING | 80009 | 307-0780-01 |
| A2R702 | 322-0519-01 | | | RES, FXD, FILM: 2.49M OHM, 0.5%, 0.25W, TC=T0 | 07716 | CCAD24903D |
| A2R703 | 315-0100-00 | | | RES, FXD, FILM: 10 OHM, 5%, 0.25W | 19701 | 5043CX10R00J |
| A2R704 | 315-0101-00 | | | RES, FXD, FILM: 100 OHM, 5%, 0.25W | 57668 | NTR25J-E 100E |
| A2R705 | 315-0151-00 | | | RES, FXD, FILM: 150 OHM, 5%, 0.25W | 57668 | NTR25J-E150E |
| A2R706 | 321-0318-00 | | | RES, FXD, FILM: 20.0K OHM, 1%, 0.125W, TC=T0 | 19701 | 5033ED20K00F |
| A2R707 | 315-0392-00 | | | RES, FXD, FILM: 3.9K OHM, 5%, 0.25W | 57668 | NTR25J-E03K9 |
| A2R708 | 315-0201-00 | | | RES, FXD, FILM: 200 OHM, 5%, 0.25W | 57668 | NTR25J-E200E |
| A2R709 | 315-0562-00 | | | RES, FXD, FILM: 5.6K OHM, 5%, 0.25W | 57668 | NTR25J-E05K6 |
| A2R710 | 315-0102-00 | | | RES, FXD, FILM: 1K OHM, 5%, 0.25W | 57668 | NTR25JE01K0 |

| Component No. | Tektronix Part No. | Serial/Assembly No. Effective | Discont | Name & Description | Mfr. Code | Mfr. Part No. |
|---------------|-----------------------|----------------------------------|---------|---|--------------|------------------|
| A2R711 | 315-0302-00 | | | RES, FXD, FILM: 3K OHM, 5%, 0.25W | 57668 | NTR25J-E03K0 |
| A2R712 | 321-0289-00 | 200360 | 202141 | RES, FXD, FILM: 10.0K OHM, 1%, 0.125W, TC=T0 | 19701 | 5033ED10K0F |
| A2R712 | 321-0231-00 | 202142 | | RES, FXD, FILM: 2.49K OHM, 1%, 0.125W, TC=T0 (UNITED KINGDOM ONLY) | 19701 | 5033ED2K49F |
| A2R712 | 321-0231-00 | | | RES, FXD, FILM: 2.49K OHM, 1%, 0.125W, TC=T0 (U.S.A. & GUERNSEY) | 19701 | 5033ED2K49F |
| A2R713 | 321-0289-00 | 200360 | 202141 | RES, FXD, FILM: 10.0K OHM, 1%, 0.125W, TC=T0 | 19701 | 5033ED10K0F |
| A2R713 | 321-0231-00 | 202142 | | RES, FXD, FILM: 2.49K OHM, 1%, 0.125W, TC=T0 (UNITED KINGDOM ONLY) | 19701 | 5033ED2K49F |
| A2R713 | 321-0231-00 | | | RES, FXD, FILM: 2.49K OHM, 1%, 0.125W, TC=T0 (U.S.A. & GUERNSEY) | 19701 | 5033ED2K49F |
| A2R714 | 321-0293-00 | 200360 | 202141 | RES, FXD, FILM: 11.0K OHM, 1%, 0.125W, TC=T0 | 07716 | CEAD11001F |
| A2R714 | 321-0235-00 | 202142 | | RES, FXD, FILM: 2.74K OHM, 1%, 0.125W, TC=T0 (UNITED KINGDOM ONLY) | 07716 | CEAD27400F |
| A2R714 | 321-0235-00 | | | RES, FXD, FILM: 2.74K OHM, 1%, 0.125W, TC=T0 (U.S.A. & GUERNSEY) | 07716 | CEAD27400F |
| A2R715 | 321-0231-00 | | | RES, FXD, FILM: 2.49K OHM, 1%, 0.125W, TC=T0 | 19701 | 5033ED2K49F |
| A2R716 | 321-0225-00 | | | RES, FXD, FILM: 2.15K OHM, 1%, 0.125W, TC=T0 | 19701 | 5033ED2K15F |
| A2R717 | 321-0306-00 | | | RES, FXD, FILM: 15.0K OHM, 1%, 0.125W, TC=T0 | 19701 | 5033ED15J00F |
| A2R718 | 321-0306-00 | | | RES, FXD, FILM: 15.0K OHM, 1%, 0.125W, TC=T0 | 19701 | 5033ED15J00F |
| A2R719 | 315-0330-00 | 200360 | 200756 | RES, FXD, FILM: 33 OHM, 5%, 0.25W | 19701 | 5043CX33R00J |
| A2R719 | 315-0270-00 | 200757 | 205763 | RES, FXD, FILM: 27 OHM, 5%, 0.25W | 19701 | 5043CX27R00J |
| A2R719 | 315-0330-00 | 205764 | | RES, FXD, FILM: 33 OHM, 5%, 0.25W (UNITED KINGDOM ONLY) | 19701 | 5043CX33R00J |
| A2R719 | 315-0330-00 | | | RES, FXD, FILM: 33 OHM, 5%, 0.25W (U.S.A. & GUERNSEY) | 19701 | 5043CX33R00J |
| A2R720 | 315-0201-00 | | | RES, FXD, FILM: 200 OHM, 5%, 0.25W | 57668 | NTR25J-E200E |
| A2R721 | 311-2356-00 | | | RES, VAR, NONW: PNL, 470 OHM, 20%, 0.2W | K8996 | 2322 50190194 |
| A2R722 | 311-2361-00 | | | RES, VAR, NONW: TRMR, 10K OHM, 0.5W | K8788 | TC10-LV10-10K/A |
| A2R723 | 315-0104-00 | | | RES, FXD, FILM: 100K OHM, 5%, 0.25W | 57668 | NTR25J-E100K |
| A2R730 | 311-2365-00 | | | RES, VAR, NONW: TRMR, 470 OHM, 0.75W | K8788 | TC10-LV10-470K/A |
| A2R731 | 311-2355-00 | | | RES, VAR, NONW: TRMR, 100 OHM, 20%, 0.5W | K8788 | TC10-LV10-100R/A |
| A2R732 | 321-0243-00 | 200360 | | RES, FXD, FILM: 3.32K OHM, 1%, 0.125W, TC=T0 (UNITED KINGDOM ONLY) | 19701 | 5033ED3K32F |
| A2R732 | 321-0243-00 | | | RES, FXD, FILM: 3.32K OHM, 1%, 0.125W, TC=T0 (U.S.A. & GUERNSEY) | 19701 | 5033ED3K32F |
| A2R733 | 321-0231-00 | | | RES, FXD, FILM: 2.49K OHM, 1%, 0.125W, TC=T0 | 19701 | 5033ED2K49F |
| A2R734 | 315-0272-00 | | | RES, FXD, FILM: 2.7K OHM, 5%, 0.25W | 57668 | NTR25J-E02K7 |
| A2R735 | 315-0103-00 | | | RES, FXD, FILM: 10K OHM, 5%, 0.25W | 19701 | 5043CX10K00J |
| A2R736 | 311-2363-00 | 200360 | | RES, VAR, NONW: TRMR, 1K OHM, 0.5W (UNITED KINGDOM ONLY) | K8788 | TC10-LV10-1K/A |
| A2R736 | 311-2363-00 | | | RES, VAR, NONW: TRMR, 1K OHM, 0.5W (U.S.A. & GUERNSEY) | K8788 | TC10-LV10-1K/A |
| A2R737 | 321-0197-00 | | | RES, FXD, FILM: 1.10K OHM, 1%, 0.125W, TC=T0 | 07716 | CEAD11000F |
| A2R738 | 321-0210-00 | | | RES, FXD, FILM: 1.50K OHM, 1%, 0.125W, TC=T0 | 19701 | 5033ED1K50F |
| A2R739 | 321-0210-00 | | | RES, FXD, FILM: 1.50K OHM, 1%, 0.125W, TC=T0 | 19701 | 5033ED1K50F |
| A2R740 | 321-0274-00 | | | RES, FXD, FILM: 6.98K OHM, 1%, 0.125W, TC=T0 | 19701 | 5043ED6K980F |
| A2R741 | 321-0210-00 | | | RES, FXD, FILM: 1.50K OHM, 1%, 0.125W, TC=T0 | 19701 | 5033ED1K50F |
| A2R742 | 321-0210-00 | | | RES, FXD, FILM: 1.50K OHM, 1%, 0.125W, TC=T0 | 19701 | 5033ED1K50F |
| A2R743 | 321-0177-00 | | | RES, FXD, FILM: 681 OHM, 1%, 0.125W, TC=T0 | 07716 | CEAD681ROF |
| A2R744 | 321-0177-00 | | | RES, FXD, FILM: 681 OHM, 1%, 0.125W, TC=T0 | 07716 | CEAD681ROF |
| A2R745 | 321-0177-00 | | | RES, FXD, FILM: 681 OHM, 1%, 0.125W, TC=T0 | 07716 | CEAD681ROF |
| A2R746 | 315-0472-00 | | | RES, FXD, FILM: 4.7K OHM, 5%, 0.25W | 57668 | NTR25J-E04K7 |
| A2R747 | 315-0431-00 | | | RES, FXD, FILM: 430 OHM, 5%, 0.25W | 19701 | 5043CX430R0J |
| A2R748 | 315-0431-00 | | | RES, FXD, FILM: 430 OHM, 5%, 0.25W | 19701 | 5043CX430R0J |
| A2R749 | 321-0098-00 | | | RES, FXD, FILM: 102 OHM, 1%, 0.125W, TC=T0 | 07716 | CEAD102ROF |
| A2R750 | 321-0318-00 | | | RES, FXD, FILM: 20.0K OHM, 1%, 0.125W, TC=T0 | 19701 | 5033ED20K00F |
| A2R751 | 321-0178-00 | | | RES, FXD, FILM: 698 OHM, 1%, 0.125W, TC=T0 | 07716 | CEAD698ROF |
| A2R752 | 321-0178-00 | | | RES, FXD, FILM: 698 OHM, 1%, 0.125W, TC=T0 | 07716 | CEAD698ROF |
| A2R753 | 321-0197-00 | 200360 | 202056 | RES, FXD, FILM: 1.10K OHM, 1%, 0.125W, TC=T0 | 07716 | CEAD11000F |

| Component No. | Tektronix Part No. | Serial/Assembly No. Effective Dscnt | Name & Description | Mfr. Code | Mfr. Part No. |
|---------------|-----------------------|--|---|--------------|------------------|
| A2R753 | 321-0178-00 | 202057 | RES,FXD,FILM:698 OHM,1%,0.125W,TC=TO (UNITED KINGDOM ONLY) | 07716 | CEAD698ROF |
| A2R753 | 321-0178-00 | | RES,FXD,FILM:698 OHM,1%,0.125W,TC=TO (U.S.A. & GUERNSEY) | 07716 | CEAD698ROF |
| A2R754 | 321-0179-00 | | RES,FXD,FILM:715 OHM,1%,0.125W,TC=TO | 07716 | CEAD715ROF |
| A2R755 | 315-0132-00 | | RES,FXD,FILM:1.3K OHM,5%,0.25W | 57668 | NTR25J-E01K3 |
| A2R756 | 315-0132-00 | | RES,FXD,FILM:1.3K OHM,5%,0.25W | 57668 | NTR25J-E01K3 |
| A2R757 | 321-0172-00 | | RES,FXD,FILM:604 OHM,1%,0.125W,TC=TO | 19701 | 5033ED604ROF |
| A2R758 | 321-0163-00 | | RES,FXD,FILM:487 OHM,1%,0.125W,TC=TO | 07716 | CEAD487ROF |
| A2R759 | 315-0222-00 | | RES,FXD,FILM:2.2K OHM,5%,0.25W | 57668 | NTR25J-E02K2 |
| A2R760 | 315-0222-00 | | RES,FXD,FILM:2.2K OHM,5%,0.25W | 57668 | NTR25J-E02K2 |
| A2R761 | 321-0225-00 | | RES,FXD,FILM:2.15K OHM,1%,0.125W,TC=TO | 19701 | 5033ED2K15F |
| A2R762 | 321-0225-00 | | RES,FXD,FILM:2.15K OHM,1%,0.125W,TC=TO | 19701 | 5033ED2K15F |
| A2R763 | 321-0216-00 | | RES,FXD,FILM:1.74K OHM,1%,0.125W,TC=TO | 07716 | CEAD17400F |
| A2R765 | 321-0274-00 | | RES,FXD,FILM:6.98K OHM,1%,0.125W,TC=TO | 19701 | 5043ED6K98OF |
| A2R766 | 321-0274-00 | | RES,FXD,FILM:6.98K OHM,1%,0.125W,TC=TO | 19701 | 5043ED6K98OF |
| A2R767 | 321-0098-00 | | RES,FXD,FILM:102 OHM,1%,0.125W,TC=TO | 07716 | CEAD102ROF |
| A2R768 | 321-0274-00 | | RES,FXD,FILM:6.98K OHM,1%,0.125W,TC=TO | 19701 | 5043ED6K98OF |
| A2R769 | 321-0318-00 | | RES,FXD,FILM:20.0K OHM,1%,0.125W,TC=TO | 19701 | 5033ED20K00F |
| A2R770 | 321-0242-00 | | RES,FXD,FILM:3.24K OHM,1%,0.125W,TC=TO | 19701 | 5043ED3K240F |
| A2R771 | 321-0225-00 | | RES,FXD,FILM:2.15K OHM,1%,0.125W,TC=TO | 19701 | 5033ED2K15F |
| A2R772 | 321-0225-00 | | RES,FXD,FILM:2.15K OHM,1%,0.125W,TC=TO | 19701 | 5033ED2K15F |
| A2R773 | 321-0178-00 | | RES,FXD,FILM:698 OHM,1%,0.125W,TC=TO | 07716 | CEAD698ROF |
| A2R774 | 321-0178-00 | | RES,FXD,FILM:698 OHM,1%,0.125W,TC=TO | 07716 | CEAD698ROF |
| A2R775 | 311-2365-00 | 200360 | RES,VAR,NONW:TRMR,470 OHM,0.75W | K8788 | TC10-LV10-470K/A |
| A2R775 | 311-2363-00 | 202057 | RES,VAR,NONW:TRMR,1K OHM,0.5W (UNITED KINGDOM ONLY) | K8788 | TC10-LV10-1K/A |
| A2R775 | 311-2363-00 | | RES,VAR,NONW:TRMR,1K OHM,0.5W (U.S.A. & GUERNSEY) | K8788 | TC10-LV10-1K/A |
| A2R777 | 311-2355-00 | | RES,VAR,NONW:TRMR,100 OHM,20%,0.5W | K8788 | TC10-LV10-100R/A |
| A2R782 | 311-2365-00 | | RES,VAR,NONW:TRMR,470 OHM,0.75W | K8788 | TC10-LV10-470K/A |
| A2S701 | 260-2289-00 | | SWITCH,ROTARY:TIMEBASE | U3771 | 685/TEK 23 POS |
| A2U30 | 156-0534-00 | | MICROCKT,LINEAR:DUAL DIFF AMPL | 02735 | CA3102E-98 |
| A2U80 | 156-0534-00 | | MICROCKT,LINEAR:DUAL DIFF AMPL | 02735 | CA3102E-98 |
| A2U83 | 156-0048-00 | | MICROCKT,LINEAR:5 XSTR ARRAY (U.S.A. ONLY) | 80009 | 156-0048-00 |
| A2U83 | 156-2902-00 | | MICROCKT,LINEAR: (UNITED KINGDOM ONLY) | K5856 | CA 3046 |
| A2U715 | 156-0067-00 | | MICROCKT,LINEAR:BIPOLAR,OPNL AMPL | 80009 | 156-0067-00 |
| A2U745 | 156-0048-00 | | MICROCKT,LINEAR:5 XSTR ARRAY (U.S.A. ONLY) | 80009 | 156-0048-00 |
| A2U745 | 156-2902-00 | | MICROCKT,LINEAR: (UNITED KINGDOM ONLY) | K5856 | CA 3046 |
| A2U755 | 156-0048-00 | | MICROCKT,LINEAR:5 XSTR ARRAY (U.S.A. ONLY) | 80009 | 156-0048-00 |
| A2U755 | 156-2902-00 | | MICROCKT,LINEAR: (UNITED KINGDOM ONLY) | K5856 | CA 3046 |
| A2VR719 | 152-0744-00 | | SEMICONDC DVC,DI:ZEN,SI,3.6V,5%,0.4W,DO-7 | 80009 | 152-0744-00 |
| A2W711 | 131-0566-00 | | BUS,CONDUCTOR:DUMMY RES,0.094 OD X 0.225 L | 24546 | OMA 07 |

| Component No. | Tektronix Part No. | Serial/Assembly No. Effective | Discont | Name & Description | Mfr. Code | Mfr. Part No. |
|---------------|--------------------|-------------------------------|---------|---|-----------|------------------|
| A3 | 670-9940-00 | 200001 | 202907 | CIRCUIT BD ASSY:FRONT PANEL | 80009 | 670-9940-00 |
| A3 | 670-9940-05 | 202908 | | CIRCUIT BD ASSY:FRONT PANEL | 80009 | 670-9940-05 |
| A3C2 | 285-1106-00 | | | CAP,FXD,PLASTIC:0.022UF,20%,600V | 14752 | 230B1F223 |
| A3C45 | 290-1153-00 | | | CAP,FXD,ELCTLT:47UF,+50-10%,10V | K8996 | 030-24479 |
| A3C46 | 290-1153-00 | | | CAP,FXD,ELCTLT:47UF,+50-10%,10V | K8996 | 030-24479 |
| A3C52 | 285-1106-00 | | | CAP,FXD,PLASTIC:0.022UF,20%,600V | 14752 | 230B1F223 |
| A3C373 | 285-1385-00 | | | CAP,FXD,PLASTIC:43PF,2.5%,630V | K7779 | B31063-A6430-H6 |
| A3C376 | 285-1387-00 | | | CAP,FXD,PLASTIC:0.01UF,10%,400V | TK00Z | MKT1-50 |
| A3C377 | 285-1385-00 | | | CAP,FXD,PLASTIC:43PF,2.5%,630V | K7779 | B31063-A6430-H6 |
| A3C378 | 285-1386-00 | B010100 | E210418 | CAP,FXD,PLASTIC:390PF,2.5%,630V | K7779 | B31063-A6391-H6 |
| A3C378 | 285-1425-00 | E210419 | | CAP,FXD,PLASTIC:390PF,2.5%,160V | K7779 | B33063-B1391-H7 |
| A3C378 | 285-1425-00 | G100851 | | CAP,FXD,PLASTIC:390PF,2.5%,160V | K7779 | B33063-B1391-H7 |
| A3C383 | 285-1385-00 | | | CAP,FXD,PLASTIC:43PF,2.5%,630V | K7779 | B31063-A6430-H6 |
| A3C392 | 281-0815-00 | | | CAP,FXD,CER DI:0.027UF,20%,50V | 04222 | MA205C273MAA |
| A3C725 | 290-1153-00 | | | CAP,FXD,ELCTLT:47UF,+50-10%,10V | K8996 | 030-24479 |
| A3C726 | 281-0775-01 | 200758 | | CAP,FXD,CER DI:0.1UF,20%,50V (UNITED KINGDOM ONLY) | 04222 | SA105E104MAA |
| A3C726 | 281-0775-01 | | | CAP,FXD,CER DI:0.1UF,20%,50V (U.S.A. & GUERNSEY) | 04222 | SA105E104MAA |
| A3CR381 | 152-0141-02 | | | SEMICON DVC,DI:SW,SI,30V,150MA,30V,DO-35 | 03508 | DA2527 (1N4152) |
| A3CR401 | 152-0141-02 | | | SEMICON DVC,DI:SW,SI,30V,150MA,30V,DO-35 | 03508 | DA2527 (1N4152) |
| A3CR534 | 152-0141-02 | | | SEMICON DVC,DI:SW,SI,30V,150MA,30V,DO-35 | 03508 | DA2527 (1N4152) |
| A3CR537 | 152-0141-02 | | | SEMICON DVC,DI:SW,SI,30V,150MA,30V,DO-35 | 03508 | DA2527 (1N4152) |
| A3CR538 | 152-0141-02 | | | SEMICON DVC,DI:SW,SI,30V,150MA,30V,DO-35 | 03508 | DA2527 (1N4152) |
| A3DS370 | 150-1187-00 | | | LT EMITTING DIO:GREEN | TK00A | LN31GPHLEXLED5GS |
| A3DS560 | 150-1187-00 | | | LT EMITTING DIO:GREEN | TK00A | LN31GPHLEXLED5GS |
| A3J987 | ----- | | | 2 PIN HEADER STRIP | | |
| A3Q370 | 151-1042-00 | | | SEMICON DVC SE:FET,SI,TO-92 | 80009 | 151-1042-00 |
| A3Q725 | 151-0188-00 | | | TRANSISTOR:PMP,SI,TO-92 | 80009 | 151-0188-00 |
| A3R1 | 315-0470-00 | | | RES,FXD,FILM:47 OHM,5%,0.25W | 57668 | NTR25J-E47E0 |
| A3R2 | 315-0105-00 | | | RES,FXD,FILM:1M OHM,5%,0.25W | 19701 | 5043CX1M000J |
| A3R4 | 315-0100-00 | | | RES,FXD,FILM:10 OHM,5%,0.25W | 19701 | 5043CX10R00J |
| A3R45 | 307-0113-00 | | | RES,FXD,CMPSN:5.1 OHM,5%,0.25W | 01121 | CB51G5 |
| A3R46 | 307-0113-00 | | | RES,FXD,CMPSN:5.1 OHM,5%,0.25W | 01121 | CB51G5 |
| A3R51 | 315-0470-00 | | | RES,FXD,FILM:47 OHM,5%,0.25W | 57668 | NTR25J-E47E0 |
| A3R52 | 315-0105-00 | | | RES,FXD,FILM:1M OHM,5%,0.25W | 19701 | 5043CX1M000J |
| A3R54 | 315-0100-00 | | | RES,FXD,FILM:10 OHM,5%,0.25W | 19701 | 5043CX10R00J |
| A3R84 | 311-2368-00 | 202908 | | RES,VAR,NONW:TRMR,47K OHM,0.5W (UNITED KINGDOM ONLY) | K8788 | TC10-LV10-47K/A |
| A3R84 | 311-2368-00 | | | RES,VAR,NONW:TRMR,47K OHM,0.5W (U.S.A. & GUERNSEY) | K8788 | TC10-LV10-47K/A |
| A3R89 | 315-0242-00 | 200360 | 202907 | RES,FXD,FILM:2.4K OHM,5%,0.25W | 57668 | NTR25J-E02K4 |
| A3R89 | 315-0222-00 | 202908 | | RES,FXD,FILM:2.2K OHM,5%,0.25W (UNITED KINGDOM ONLY) | 57668 | NTR25J-E02K2 |
| A3R89 | 315-0222-00 | | | RES,FXD,FILM:2.2K OHM,5%,0.25W (U.S.A. & GUERNSEY) | 57668 | NTR25J-E02K2 |
| A3R92 | 315-0333-00 | 200360 | 202907 | RES,FXD,FILM:33K OHM,5%,0.25W (UNITED KINGDOM ONLY) | 57668 | NTR25J-E33K0 |
| A3R113 | 321-0251-00 | | | RES,FXD,FILM:4.02K OHM,1%,0.125W,TC=TO | 19701 | 5033ED4K020F |
| A3R123 | 311-2366-00 | | | RES,VAR,NONW:PNL,470 OHM,20%,0.2W | K8996 | PP17/000HFAQA234 |
| A3R163 | 321-0251-00 | | | RES,FXD,FILM:4.02K OHM,1%,0.125W,TC=TO | 19701 | 5033ED4K020F |
| A3R173 | 311-2366-00 | | | RES,VAR,NONW:PNL,470 OHM,20%,0.2W | K8996 | PP17/000HFAQA234 |
| A3R280 | 311-2362-00 | | | RES,VAR,NONW:PNL,4.7K OHM,20%,0.2W | K8996 | PP17/000HFAQA364 |
| A3R365 | 315-0621-00 | 200360 | 205110 | RES,FXD,FILM:620 OHM,5%,0.25W | 57668 | NTR25J-E620E |
| A3R365 | 321-0172-00 | 205111 | | RES,FXD,FILM:604 OHM,1%,0.125W,TC=TO (UNITED KINGDOM ONLY) | 19701 | 5033ED604R0F |
| A3R365 | 321-0172-00 | | | RES,FXD,FILM:604 OHM,1%,0.125W,TC=TO (U.S.A. & GUERNSEY) | 19701 | 5033ED604R0F |
| A3R370 | 315-0470-00 | | | RES,FXD,FILM:47 OHM,5%,0.25W | 57668 | NTR25J-E47E0 |

| Component No. | Tektronix Part No. | Serial/Assembly No. Effective Dscont | Name & Description | Mfr. Code | Mfr. Part No. |
|---------------|-----------------------|--|---|--------------|------------------|
| A3R371 | 315-0470-00 | | RES,FXD,FILM:47 OHM,5%,0.25W | 57668 | NTR25J-E47E0 |
| A3R372 | 315-0392-00 | | RES,FXD,FILM:3.9K OHM,5%,0.25W | 57668 | NTR25J-E03K9 |
| A3R373 | 315-0202-00 | | RES,FXD,FILM:2K OHM,5%,0.25W | 57668 | NTR25J-E 2K |
| A3R376 | 315-0101-00 | | RES,FXD,FILM:100 OHM,5%,0.25W | 57668 | NTR25J-E 100E |
| A3R377 | 315-0394-00 | | RES,FXD,FILM:390K OHM,5%,0.25W | 57668 | NTR25J-E390K |
| A3R378 | 315-0433-00 | | RES,FXD,FILM:43K OHM,5%,0.25W | 19701 | 5043CX43K00J |
| A3R379 | 315-0470-00 | | RES,FXD,FILM:47 OHM,5%,0.25W | 57668 | NTR25J-E47E0 |
| A3R382 | 315-0470-00 | | RES,FXD,FILM:47 OHM,5%,0.25W | 57668 | NTR25J-E47E0 |
| A3R383 | 315-0564-00 | | RES,FXD,FILM:560K OHM,5%,0.25W | 19701 | 5043CX560K0J |
| A3R426 | 311-2362-00 | | RES,VAR,NONW:PNL,4.7K OHM,20%,0.2W | K8996 | PP17/000HFA0A364 |
| A3R511 | 311-2360-00 | | RES,VAR,NONW:PNL,47K OHM,20%,0.2W | K8996 | PP17/000HFA0A494 |
| A3R517 | 315-0682-00 | | RES,FXD,FILM:6.8K OHM,5%,0.25W | 57668 | NTR25J-E06K8 |
| A3R518 | 315-0912-00 | | RES,FXD,FILM:9.1K OHM,5%,0.25W | 57668 | NTR25J-E09K1 |
| A3R724 | 315-0751-00 | | RES,FXD,FILM:750 OHM,5%,0.25W | 57668 | NTR25J-E750E |
| A3R725 | 315-0103-00 | | RES,FXD,FILM:10K OHM,5%,0.25W | 19701 | 5043CX10K00J |
| A3R726 | 311-2366-00 | | RES,VAR,NONW:PNL,470 OHM,20%,0.2W | K8996 | PP17/000HFA0A234 |
| A3R727 | 321-0177-00 | | RES,FXD,FILM:681 OHM,1%,0.125W,TC=TO | 07716 | CEAD681R0F |
| A3R728 | 321-0318-00 | | RES,FXD,FILM:20.0K OHM,1%,0.125W,TC=TO | 19701 | 5033ED20K00F |
| A3R729 | 311-2362-00 | | RES,VAR,NONW:PNL,4.7K OHM,20%,0.2W | K8996 | PP17/000HFA0A364 |
| A3R800 | 315-0682-00 | | RES,FXD,FILM:6.8K OHM,5%,0.25W | 57668 | NTR25J-E06K8 |
| A3R802 | 311-2359-00 | | RES,VAR,NONW:PNL,10K OHM,20%,0.2W | K8996 | PP17000HGA0A4110 |
| A3R986 | 311-2364-00 | | RES,VAR,NONW:TRMR,4.7K OHM,0.5W | K8788 | TC10-LV10-4K7/A |
| A3R987 | 315-0201-00 | | RES,FXD,FILM:200 OHM,5%,0.25W | 57668 | NTR25J-E200E |
| A3S90 | 260-2291-00 | | SWITCH,SLIDE:DPDT,250MA,100VAC | U3771 | 607/TK 2 POS |
| A3S101 | 260-2293-00 | | SWITCH,SLIDE:DPDT,250MA,100VAC | U3771 | 607/TEK 3 POS |
| A3S201 | 260-2293-00 | | SWITCH,SLIDE:DPDT,250MA,100VAC | U3771 | 607/TEK 3 POS |
| A3S380 | 260-2292-00 | | SWITCH,SLIDE:DPDT,250MA,100VAC | U3771 | 607/TEK 4 POS |
| A3S390 | 260-2290-00 | | SWITCH,PUSH:1 BUTTON,1 POLE,MOMENTARY | TK0EA | SKECCAA061A |
| A3S392 | 260-2292-00 | | SWITCH,SLIDE:DPDT,250MA,100VAC | U3771 | 607/TEK 4 POS |
| A3S401 | 260-2292-00 | | SWITCH,SLIDE:DPDT,250MA,100VAC | U3771 | 607/TEK 4 POS |
| A3S460 | 260-2291-00 | | SWITCH,SLIDE:DPDT,250MA,100VAC | U3771 | 607/TK 2 POS |
| A3S505 | 260-2290-00 | | SWITCH,PUSH:1 BUTTON,1 POLE,MOMENTARY | TK0EA | SKECCAA061A |
| A3S545 | 260-2293-00 | | SWITCH,SLIDE:DPDT,250MA,100VAC | U3771 | 607/TEK 3 POS |
| A3S550 | 260-2293-00 | | SWITCH,SLIDE:DPDT,250MA,100VAC | U3771 | 607/TEK 3 POS |
| A3S555 | 260-2292-00 | | SWITCH,SLIDE:DPDT,250MA,100VAC | U3771 | 607/TEK 4 POS |
| A3S601 | 260-2293-00 | | SWITCH,SLIDE:DPDT,250MA,100VAC | U3771 | 607/TEK 3 POS |
| A3S603 | 260-2293-00 | | SWITCH,SLIDE:DPDT,250MA,100VAC | U3771 | 607/TEK 3 POS |
| A3W1 | 174-0639-00 | | CA ASSY,SP,ELEC:6,26 AWG,110MM L,RIBBON | TK0EM | 82026-5806(95mm) |
| A3W2 | 174-0638-00 | | CA ASSY,SP,ELEC:6,26 AWG,165MM L,RIBBON | TK0EM | 82265806(165mm) |
| A3W3 | 174-0639-00 | | CA ASSY,SP,ELEC:6,26 AWG,110MM L,RIBBON | TK0EM | 82026-5806(95mm) |
| A3W4 | 174-0639-00 | | CA ASSY,SP,ELEC:6,26 AWG,110MM L,RIBBON | TK0EM | 82026-5806(95mm) |
| A3W5 | 174-0639-00 | | CA ASSY,SP,ELEC:6,26 AWG,110MM L,RIBBON | TK0EM | 82026-5806(95mm) |
| A3W6 | 174-0635-00 | | CA ASSY,SP,ELEC:6,26 AWG,120MM L,RIBBON | TK0EM | 82265806(120mm) |
| A3W7 | 174-0638-00 | | CA ASSY,SP,ELEC:6,26 AWG,165MM L,RIBBON | TK0EM | 82265806(165mm) |

Replaceable Electrical Parts - 2225 Service

| Component No. | Tektronix Part No. | Serial/Assembly No. Effective | Discont | Name & Description | Mfr. Code | Mfr. Part No. |
|---------------|--------------------|-------------------------------|---------|---|-----------|-----------------|
| A4 | 670-9939-00 | 200001 | 202907 | CIRCUIT BD ASSY:MAINS INPUT | 80009 | 670-9939-00 |
| A4 | 670-9939-05 | 202908 | | CIRCUIT BD ASSY:MAIN INLET | 80009 | 670-9939-05 |
| A4C900 | 290-1158-00 | | | CAP,FXD,ELCTLT:2200UF,20%,80V | TK0ED | ORDER BY DESCR |
| A4C903 | 285-1192-00 | | | CAP,FXD,PPR DI:0.0022 UF,20%,250VAC | TK0515 | PME271Y510 |
| A4C904 | 285-1192-00 | | | CAP,FXD,PPR DI:0.0022 UF,20%,250VAC | TK0515 | PME271Y510 |
| A4C905 | 285-1252-00 | 202908 | | CAP,FXD,PLASTIC:0.15UF,10%,250VAC (UNITED KINGDOM ONLY) | D5243 | F1772-415-2000 |
| A4C905 | 285-1252-00 | | | CAP,FXD,PLASTIC:0.15UF,10%,250VAC (U.S.A. & GUERNSEY) | D5243 | F1772-415-2000 |
| A4CR901 | 152-0066-00 | | | SEMICON DVC,DI:RECT,SI,400V,1A,DO-41 | 05828 | GP10G-020 |
| A4CR902 | 152-0066-00 | | | SEMICON DVC,DI:RECT,SI,400V,1A,DO-41 | 05828 | GP10G-020 |
| A4CR903 | 152-0066-00 | | | SEMICON DVC,DI:RECT,SI,400V,1A,DO-41 | 05828 | GP10G-020 |
| A4CR904 | 152-0066-00 | | | SEMICON DVC,DI:RECT,SI,400V,1A,DO-41 | 05828 | GP10G-020 |
| A4F901 | 159-0032-00 | | | FUSE,CARTRIDGE:3AG,0.5A,250V,SLOW BLOW | 71400 | MDL 1/2 |
| A4J901 | 131-3905-00 | | | CONN,RCPT,ELEC:PWR,250VAC,6A,CKT BD MT | TK0DY | L2157 |
| A4J902 | 204-1038-00 | | | CONN BODY,PLUG:1 X 8 W/O LOCKING EARS | 80009 | 204-1038-00 |
| A4L901 | 108-1375-00 | | | COIL,RF:FXD,82UH,1A | TK00A | RL-1218-820K-1A |
| A4L902 | 108-1375-00 | | | COIL,RF:FXD,82UH,1A | TK00A | RL-1218-820K-1A |
| A4Q900 | 151-0350-00 | | | TRANSISTOR:PNP,SI,TO-92 | 04713 | 2N5401 |
| A4R902 | 315-0473-00 | | | RES,FXD,FILM:47K OHM,5%,0.25W | 57668 | NTR25J-E47K0 |
| A4R903 | 315-0243-00 | | | RES,FXD,FILM:24K OHM,5%,0.25W | 57668 | NTR25J-E24K0 |
| A4R904 | 315-0562-00 | | | RES,FXD,FILM:5.6K OHM,5%,0.25W | 57668 | NTR25J-E05K6 |
| A4R905 | 315-0104-00 | | | RES,FXD,FILM:100K OHM,5%,0.25W | 57668 | NTR25J-E100K |
| A4R906 | 315-0105-00 | | | RES,FXD,FILM:1M OHM,5%,0.25W | 19701 | 5043CX1M000J |
| A4S901 | 260-1849-05 | | | SWITCH,PUSH:DPDT,4A,250VAC,W/BRACKET | 31918 | NE-15 SERIES |
| A4S902 | 260-2116-00 | | | SWITCH,SLIDE:DPDT,10A,125VAC,LINE SEL | 04426 | 18-000-0019 |
| A4W903 | 174-0636-00 | | | CA ASSY,SP,ELEC:3,26 AWG,150MM L,RIBBON | TK0EM | 82265803(150mm) |

| Component No. | Tektronix Part No. | Serial/Assembly No. Effective Dscont | Name & Description | Mfr. Code | Mfr. Part No. |
|---------------|-----------------------|--|--------------------|--|----------------------|
| A5 | 670-9938-00 | 200001 | 202907 | CIRCUIT BD ASSY:FOCUS CONTROL MOUNTING | 80009 670-9938-00 |
| A5 | 670-9938-05 | 202908 | | CIRCUIT BD ASSY:FOCUS CONTROL | 80009 670-9938-05 |
| A5R893 | 311-2357-00 | | | RES,VAR,NONWW:PNL,2.2M OHM,20%,0.25W | TK00C ORDER BY DESCR |

Replaceable Electrical Parts - 2225 Service

| Component No. | Tektronix Part No. | Serial/Assembly No. Effective Dscont | Name & Description | Mfr. Code | Mfr. Part No. |
|---------------|-----------------------|--|--|--------------|------------------|
| DL224 | 119-2611-00 | | DELAY LINE,ELEC:ASSEMBLY | 80009 | 119-2611-00 |
| J590 | 131-3898-00 | | TERM,FEEDTHRU:0.658 M X 0.75 DIA,BRS,AU PL | K0491 | 001-1401-041140P |
| T901 | 120-1633-00 | | TRANSFORMER,RF:TORI00 | K5545 | ORDER BY DESCR |
| V900 | 154-0907-00 | | ELECTRON TUBE:CRT,FINISHED | 80009 | 154-0907-00 |

DIAGRAMS AND CIRCUIT BOARD ILLUSTRATIONS

Symbols

Graphic symbols and class designation letters are based on ANSI Standard Y32.2-1975.

Logic symbology is based on ANSI Y32.14-1973 in terms of positive logic. Logic symbols depict the logic function performed and may differ from the manufacturer's data.

The overline on a signal name indicates that the signal performs its intended function when it is in the low state.

Abbreviations are based on ANSI Y1.1-1972.

Other ANSI standards that are used in the preparation of diagrams by Tektronix, Inc. are:

Y14.15, 1966 Drafting Practices.
Y14.2, 1973 Line Conventions and Lettering.
Y10.5, 1968 Letter Symbols for Quantities Used in Electrical Science and Electrical Engineering.

American National Standard Institute
1430 Broadway
New York, New York 10018

Component Values

Electrical components shown on the diagrams are in the following units unless noted otherwise:

Capacitors = Values one or greater are in picofarads (pF).
Values less than one are in microfarads (μ F).


Resistors = Ohms (Ω).

The information and special symbols below may appear in this manual.


Assembly Numbers and Grid Coordinates

Each assembly in the instrument is assigned an assembly number (e.g., A20). The assembly number appears on the circuit board outline on the diagram, in the title for the circuit board component location illustration, and in the lookup table for the schematic diagram and corresponding component locator illustration. The Replaceable Electrical Parts list is arranged by assemblies in numerical sequence; the components are listed by component number *(see following illustration for constructing a component number).

The schematic diagram and circuit board component location illustration have grids. A lookup table with the grid coordinates is provided for ease of locating the component. Only the components illustrated on the facing diagram are listed in the lookup table. When more than one schematic diagram is used to illustrate the circuitry on a circuit board, the circuit board illustration may only appear opposite the first diagram on which it was illustrated; the lookup table will list the diagram number of other diagrams that the circuitry of the circuit board appears on.

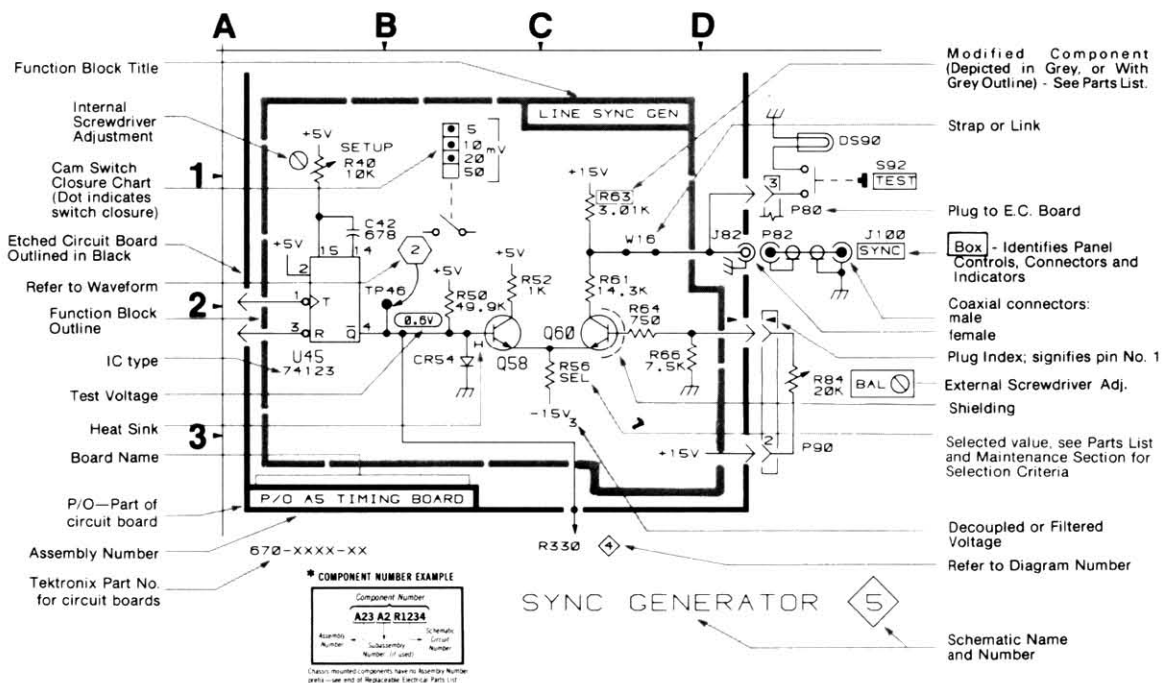

COLOR CODE

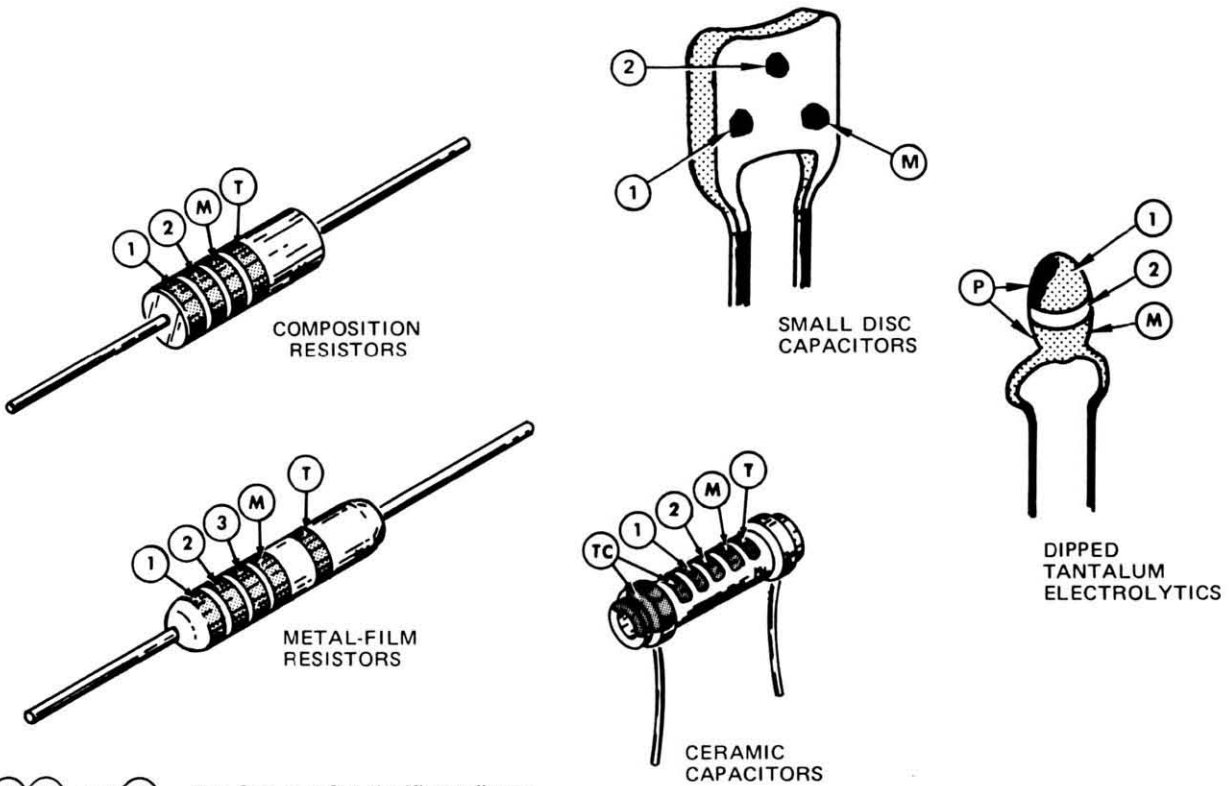

① ② and ③ – 1st, 2nd, and 3rd significant figures

Ⓜ – multiplier Ⓣ – tolerance


ⓉⓈ – temperature coefficient

Ⓟ – polarity and voltage rating

Ⓣ and/or ⓈⓈ color code may not be present on some capacitors

| COLOR | SIGNIFICANT FIGURES | RESISTORS | | CAPACITORS | | | DIPPED TANTALUM VOLTAGE RATING |
|--------|---------------------|--------------------------|-----------|------------------------------|------------|-------------|--------------------------------|
| | | MULTIPLIER | TOLERANCE | MULTIPLIER | TOLERANCE | | |
| | | | | | over 10 pF | under 10 pF | |
| BLACK | 0 | 1 | --- | 1 | ±20% | ±2 pF | 4 VDC |
| BROWN | 1 | 10 | ±1% | 10 | ±1% | ±0.1 pF | 6 VDC |
| RED | 2 | 10 ² or 100 | ±2% | 10 ² or 100 | ±2% | --- | 10 VDC |
| ORANGE | 3 | 10 ³ or 1 K | ±3% | 10 ³ or 1000 | ±3% | --- | 15 VDC |
| YELLOW | 4 | 10 ⁴ or 10 K | ±4% | 10 ⁴ or 10,000 | +100% -9% | --- | 20 VDC |
| GREEN | 5 | 10 ⁵ or 100 K | ±½% | 10 ⁵ or 100,000 | ±5% | ±0.5 pF | 25 VDC |
| BLUE | 6 | 10 ⁶ or 1 M | ±¼% | 10 ⁶ or 1,000,000 | ---- | ---- | 35 VDC |
| VIOLET | 7 | ---- | ±1/10% | ---- | ---- | ---- | 50 VDC |
| GRAY | 8 | ---- | ---- | 10 ⁻² or 0.01 | +80% -20% | ±0.25 pF | ---- |
| WHITE | 9 | ---- | ---- | 10 ⁻¹ or 0.1 | ±10% | ±1 pF | 3 VDC |
| GOLD | — | 10 ⁻¹ or 0.1 | ±5% | ---- | ---- | ---- | ---- |
| SILVER | — | 10 ⁻² or 0.01 | ±10% | ---- | ---- | ---- | ---- |
| NONE | — | ---- | ±20% | ---- | ±10% | ±1 pF | ---- |

Figure 9-1. Color codes for resistors and capacitors.

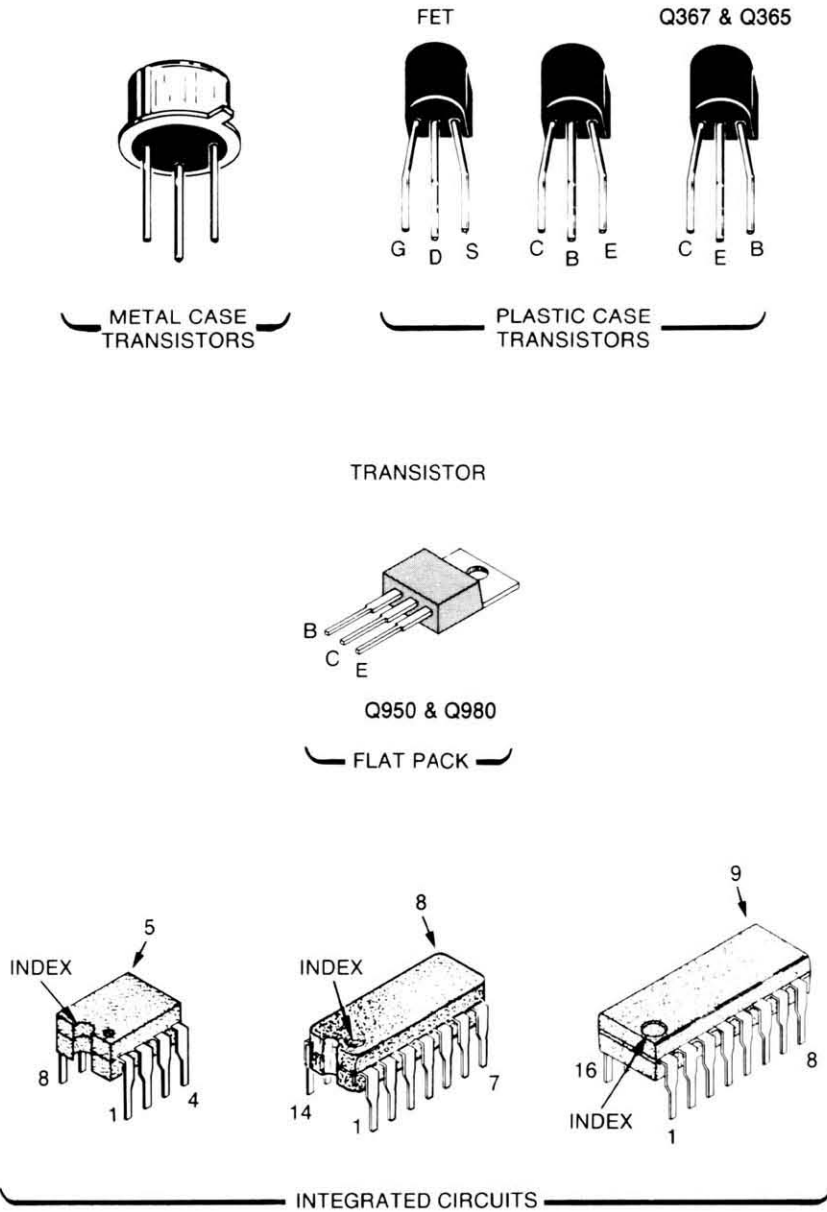

LEAD CONFIGURATIONS AND CASE STYLES ARE TYPICAL, BUT MAY VARY DUE TO VENDOR CHANGES OR INSTRUMENT MODIFICATIONS.

Figure 9.2 Semiconductor lead configurations.

2225 Service

1. Locate the Circuit Board Illustration.

- Identify the Assembly Number of the circuit board that the component is on by using the Circuit Board location illustration in this section or the mechanical parts exploded views at the rear of this manual.
- In the manual, locate the tabbed foldout page that corresponds with the Assembly Number of the circuit board. The circuit board assembly numbers and names are printed on the back side of the tabs (facing the rear of the manual).

To identify any component mounted on a circuit board and to locate that component in the schematic diagram.




2. Determine the Circuit Number and Schematic Diagram.

- Compare the circuit board with its illustration. Locate the component you are looking for by area and shape on the illustration to determine its Circuit Number.
- Scan the lookup table next to the Circuit Board illustration to find the Circuit Number of the component.
- Read the SCHEM NUMBER column next to the component's circuit number to find the Schematic Diagram number.

3. Locate the Component on the Schematic Diagram.

- Locate the tabbed page that corresponds to the Schematic Diagram number. Schematic diagram numbers and names are printed on the front side of the tabs (facing the front of the manual).
- Locate the Assembly Number in the Component Location lookup table next to the schematic diagram. Scan the CIRCUIT NUMBER column of that table to find the Circuit Number of the component you are looking for in the schematic.

- In the SCHEM LOCATION column next to the component, read the grid coordinates of the component in the schematic.
- Using the grid coordinates given, find the component in the schematic diagram.

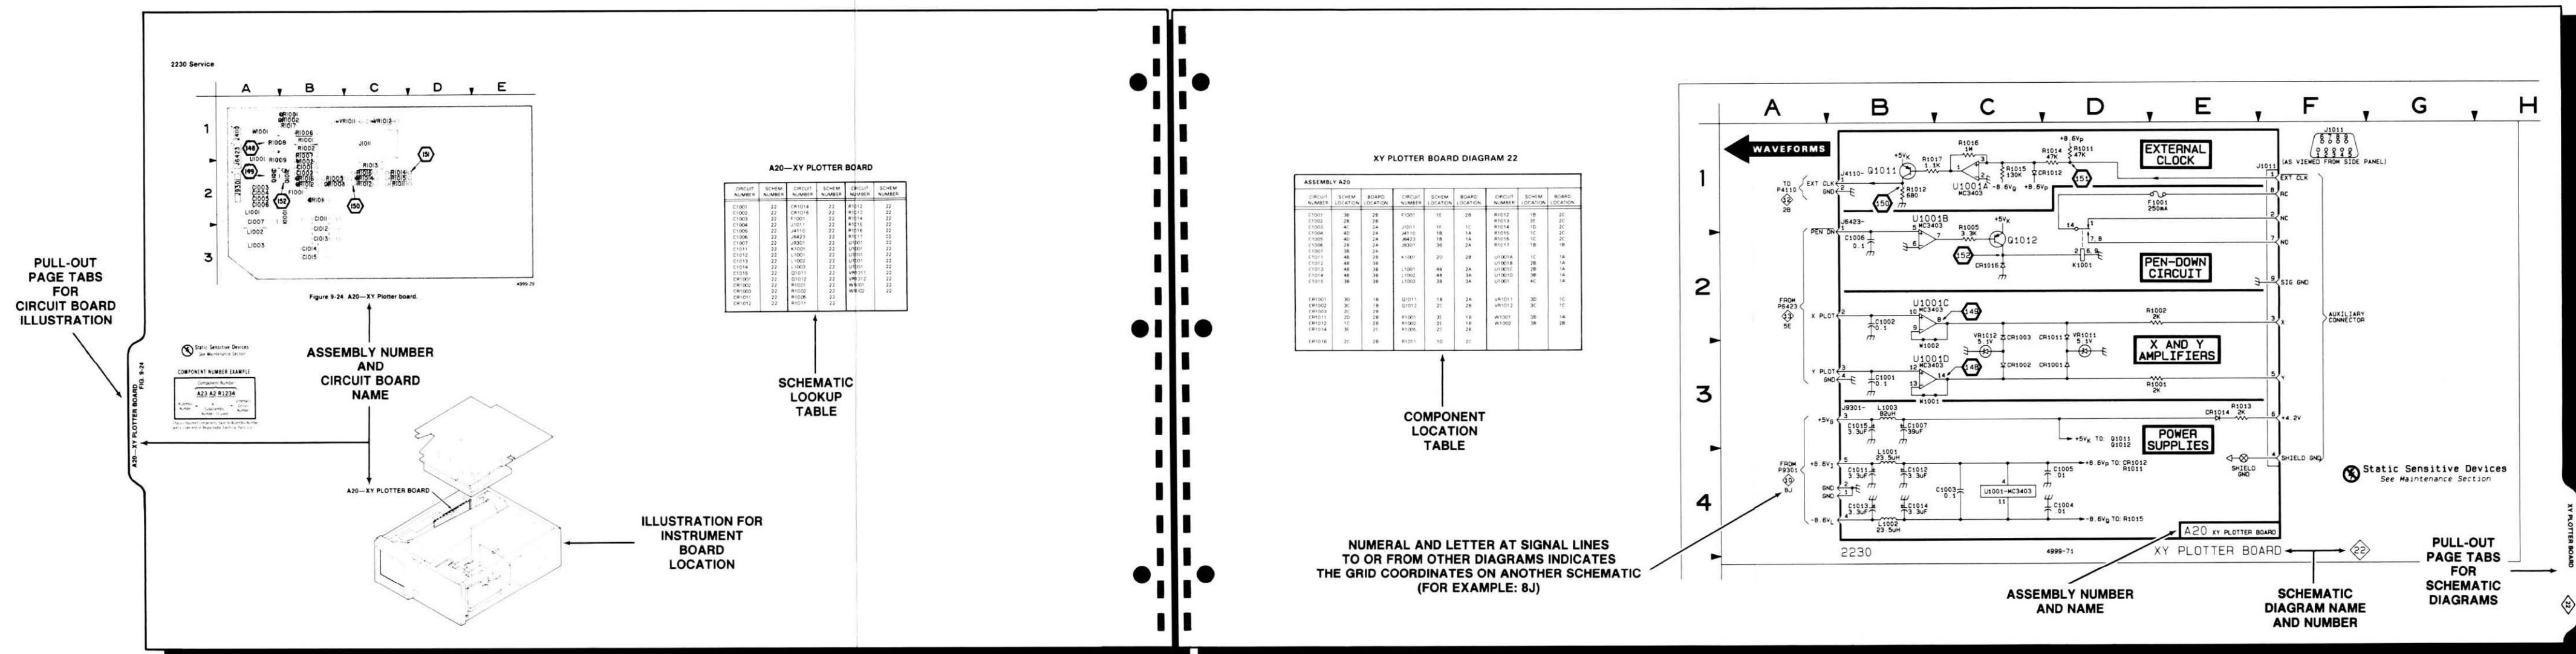

1. Determine the Circuit Board Illustration and Component Location.

- From the schematic diagram, determine the Assembly Number of the circuit board that the component is on. The Assembly Number and Name is boxed and located in a corner of the heavy line marking the circuit board outline in the schematic diagram.
- Find the Component Location table for the Assembly Number found on the schematic. Scan the CIRCUIT NUMBER column to find the Circuit Number of the component.
- Look in the BOARD LOCATION column next to the component number and read its circuit board grid coordinates.

To identify any component in a schematic diagram and to locate that component on its respective circuit board.



2. Locate the Component on the Circuit Board.

- In the manual, locate the tabbed page that corresponds to Assembly Number the component is on. Assembly numbers and names for circuit boards are on the back side of the tabs.
- Using the Circuit Number of the component and its given grid location, find the component in the Circuit Board illustration.

- From the small circuit board location illustration shown next to the circuit board, find the circuit board's location in the instrument.
- Find the circuit board in the instrument. Compare it with the circuit board illustration in the manual to locate the component on the circuit board itself.

Figure 9-3. Locating components on schematic diagrams and circuit board illustrations.

1. Locate the Circuit Board Illustration.



- a. Identify the Assembly Number of the circuit board that the component is on by using the Circuit Board location illustration in this section or the mechanical parts exploded views at the rear of this manual.
- b. In the manual, locate the tabbed foldout page that corresponds with the Assembly Number of the circuit board. The circuit board assembly numbers and names are printed on the back side of the tabs (facing the rear of the manual).

2. Determine the Circuit Number and Schematic Diagram

- Compare the circuit board with its illustration. Look for the component you are looking for by area and shape on the illustration. Write the Circuit Number.
- Scan the lookup table next to the Circuit Board illustration for the Circuit Number of the component.
- Read the SCHEM NUMBER column next to the Circuit Number. Use the number to find the Schematic Diagram number.

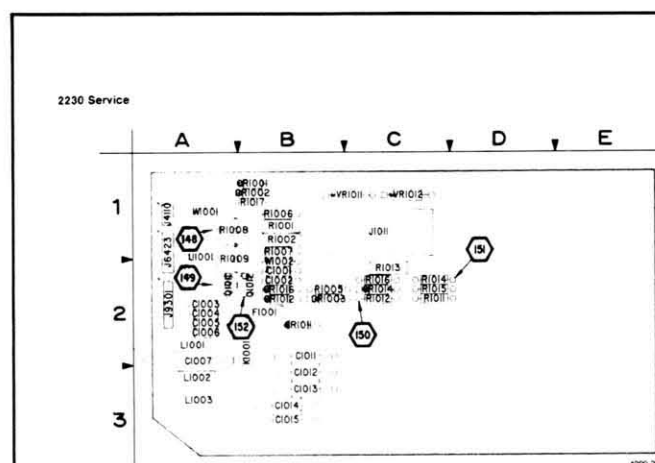
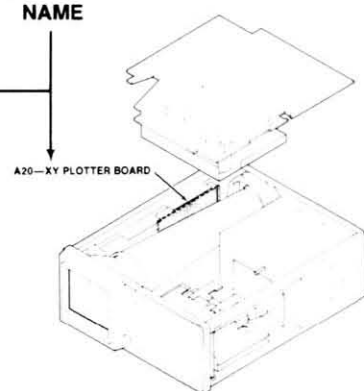
20—XY PLOTTER BOARD
FIG. 9-24

Figure 9-24. A20—XY Plotter board

ASSEMBLY NUMBER
AND
CIRCUIT BOARD
NAME



**ILLUSTRATION FOR
INSTRUMENT
BOARD
LOCATION**

A20—XY PLOTTER BOARD

| CIRCUIT NUMBER | SCHEM NUMBER | CIRCUIT NUMBER | SCHEM NUMBER | CIRCUIT NUMBER | SCHEM NUMBER |
|----------------|--------------|----------------|--------------|----------------|--------------|
| C1001 | 22 | 01W14 | 22 | R1E12 | 22 |
| C1002 | 22 | 01P16 | 22 | R1E13 | 22 |
| C1003 | 22 | 11P01 | 22 | R1E14 | 22 |
| C1004 | 22 | 11J11 | 22 | R1E15 | 22 |
| C1005 | 22 | 11J02 | 22 | R1E16 | 22 |
| C1006 | 22 | 11J23 | 22 | R1E17 | 22 |
| C1007 | 22 | 11J20 | 22 | U1001 | 22 |
| C1008 | 22 | 41S01 | 22 | U1002 | 22 |
| C1009 | 22 | 11S01 | 22 | U1003 | 22 |
| C1010 | 22 | 11S02 | 22 | U1004 | 22 |
| C1011 | 22 | 11S03 | 22 | U1005 | 22 |
| C1012 | 22 | 01S11 | 22 | V1011 | 22 |
| C1013 | 22 | 01S12 | 22 | V1012 | 22 |
| C1014 | 22 | 01S13 | 22 | V1013 | 22 |
| C1015 | 22 | 01S14 | 22 | V1014 | 22 |
| C1016 | 22 | 01S15 | 22 | V1015 | 22 |
| C1017 | 22 | 01S16 | 22 | V1016 | 22 |
| C1018 | 22 | 01S17 | 22 | V1017 | 22 |
| C1019 | 22 | 01S18 | 22 | V1018 | 22 |
| C1020 | 22 | 01S19 | 22 | V1019 | 22 |
| C1021 | 22 | 01S20 | 22 | V1020 | 22 |
| C1022 | 22 | 01S21 | 22 | V1021 | 22 |
| C1023 | 22 | 01S22 | 22 | V1022 | 22 |
| C1024 | 22 | 01S23 | 22 | V1023 | 22 |
| C1025 | 22 | 01S24 | 22 | V1024 | 22 |
| C1026 | 22 | 01S25 | 22 | V1025 | 22 |
| C1027 | 22 | 01S26 | 22 | V1026 | 22 |
| C1028 | 22 | 01S27 | 22 | V1027 | 22 |
| C1029 | 22 | 01S28 | 22 | V1028 | 22 |
| C1030 | 22 | 01S29 | 22 | V1029 | 22 |
| C1031 | 22 | 01S30 | 22 | V1030 | 22 |
| C1032 | 22 | 01S31 | 22 | V1031 | 22 |
| C1033 | 22 | 01S32 | 22 | V1032 | 22 |
| C1034 | 22 | 01S33 | 22 | V1033 | 22 |
| C1035 | 22 | 01S34 | 22 | V1034 | 22 |
| C1036 | 22 | 01S35 | 22 | V1035 | 22 |
| C1037 | 22 | 01S36 | 22 | V1036 | 22 |
| C1038 | 22 | 01S37 | 22 | V1037 | 22 |
| C1039 | 22 | 01S38 | 22 | V1038 | 22 |
| C1040 | 22 | 01S39 | 22 | V1039 | 22 |
| C1041 | 22 | 01S40 | 22 | V1040 | 22 |
| C1042 | 22 | 01S41 | 22 | V1041 | 22 |
| C1043 | 22 | 01S42 | 22 | V1042 | 22 |
| C1044 | 22 | 01S43 | 22 | V1043 | 22 |
| C1045 | 22 | 01S44 | 22 | V1044 | 22 |
| C1046 | 22 | 01S45 | 22 | V1045 | 22 |
| C1047 | 22 | 01S46 | 22 | V1046 | 22 |
| C1048 | 22 | 01S47 | 22 | V1047 | 22 |
| C1049 | 22 | 01S48 | 22 | V1048 | 22 |
| C1050 | 22 | 01S49 | 22 | V1049 | 22 |
| C1051 | 22 | 01S50 | 22 | V1050 | 22 |
| C1052 | 22 | 01S51 | 22 | V1051 | 22 |
| C1053 | 22 | 01S52 | 22 | V1052 | 22 |
| C1054 | 22 | 01S53 | 22 | V1053 | 22 |
| C1055 | 22 | 01S54 | 22 | V1054 | 22 |
| C1056 | 22 | 01S55 | 22 | V1055 | 22 |
| C1057 | 22 | 01S56 | 22 | V1056 | 22 |
| C1058 | 22 | 01S57 | 22 | V1057 | 22 |
| C1059 | 22 | 01S58 | 22 | V1058 | 22 |
| C1060 | 22 | 01S59 | 22 | V1059 | 22 |
| C1061 | 22 | 01S60 | 22 | V1060 | 22 |
| C1062 | 22 | 01S61 | 22 | V1061 | 22 |
| C1063 | 22 | 01S62 | 22 | V1062 | 22 |
| C1064 | 22 | 01S63 | 22 | V1063 | 22 |
| C1065 | 22 | 01S64 | 22 | V1064 | 22 |
| C1066 | 22 | 01S65 | 22 | V1065 | 22 |
| C1067 | 22 | 01S66 | 22 | V1066 | 22 |
| C1068 | 22 | 01S67 | 22 | V1067 | 22 |
| C1069 | 22 | 01S68 | 22 | V1068 | 22 |
| C1070 | 22 | 01S69 | 22 | V1069 | 22 |
| C1071 | 22 | 01S70 | 22 | V1070 | 22 |
| C1072 | 22 | 01S71 | 22 | V1071 | 22 |
| C1073 | 22 | 01S72 | 22 | V1072 | 22 |

SCHEMATIC
LOOKUP
TABLE

1. Determine the Circuit Board Illustration and Component Location.



- From the schematic diagram, determine the Assembly Number of the circuit board that the component is on. The Assembly Number and Name is boxed and located in a corner of the heavy line marking the circuit board outline in the schematic diagram.
- Find the Component Location table for the Assembly Number found on the schematic. Scan the CIRCUIT NUMBER column to find the Circuit Number of the component.
- Look in the BOARD LOCATION column next to the component number and read its circuit board grid coordinates.

2. Locate the Component on the Circuit Board.

- In the manual, locate the tabbed page that corresponds to the component you are working on. Assembly numbers and component numbers are on the back side of the tabs.
- Using the Circuit Number of the component and the component in the Circuit Board illustration.


Figure 9-3. Locating con

2. Determine the Circuit Number and Schematic Diagram.

- Compare the circuit board with its illustration. Locate the component you are looking for by area and shape on the illustration to determine its Circuit Number.
- Scan the lookup table next to the Circuit Board illustration to find the Circuit Number of the component.
- Read the SCHEM NUMBER column next to the component's circuit number to find the Schematic Diagram number.

3. Locate the Component on the Schematic Diagram.

- Locate the tabbed page that corresponds to the Schematic Diagram number. Schematic diagram numbers and names are printed on the tabs (facing the front of the manual).
- Locate the Assembly Number in the Component Location Table next to the schematic diagram. Scan the CIRCUI NUMBER column of that table to find the Circuit Number of the component you are looking for in the schematic.

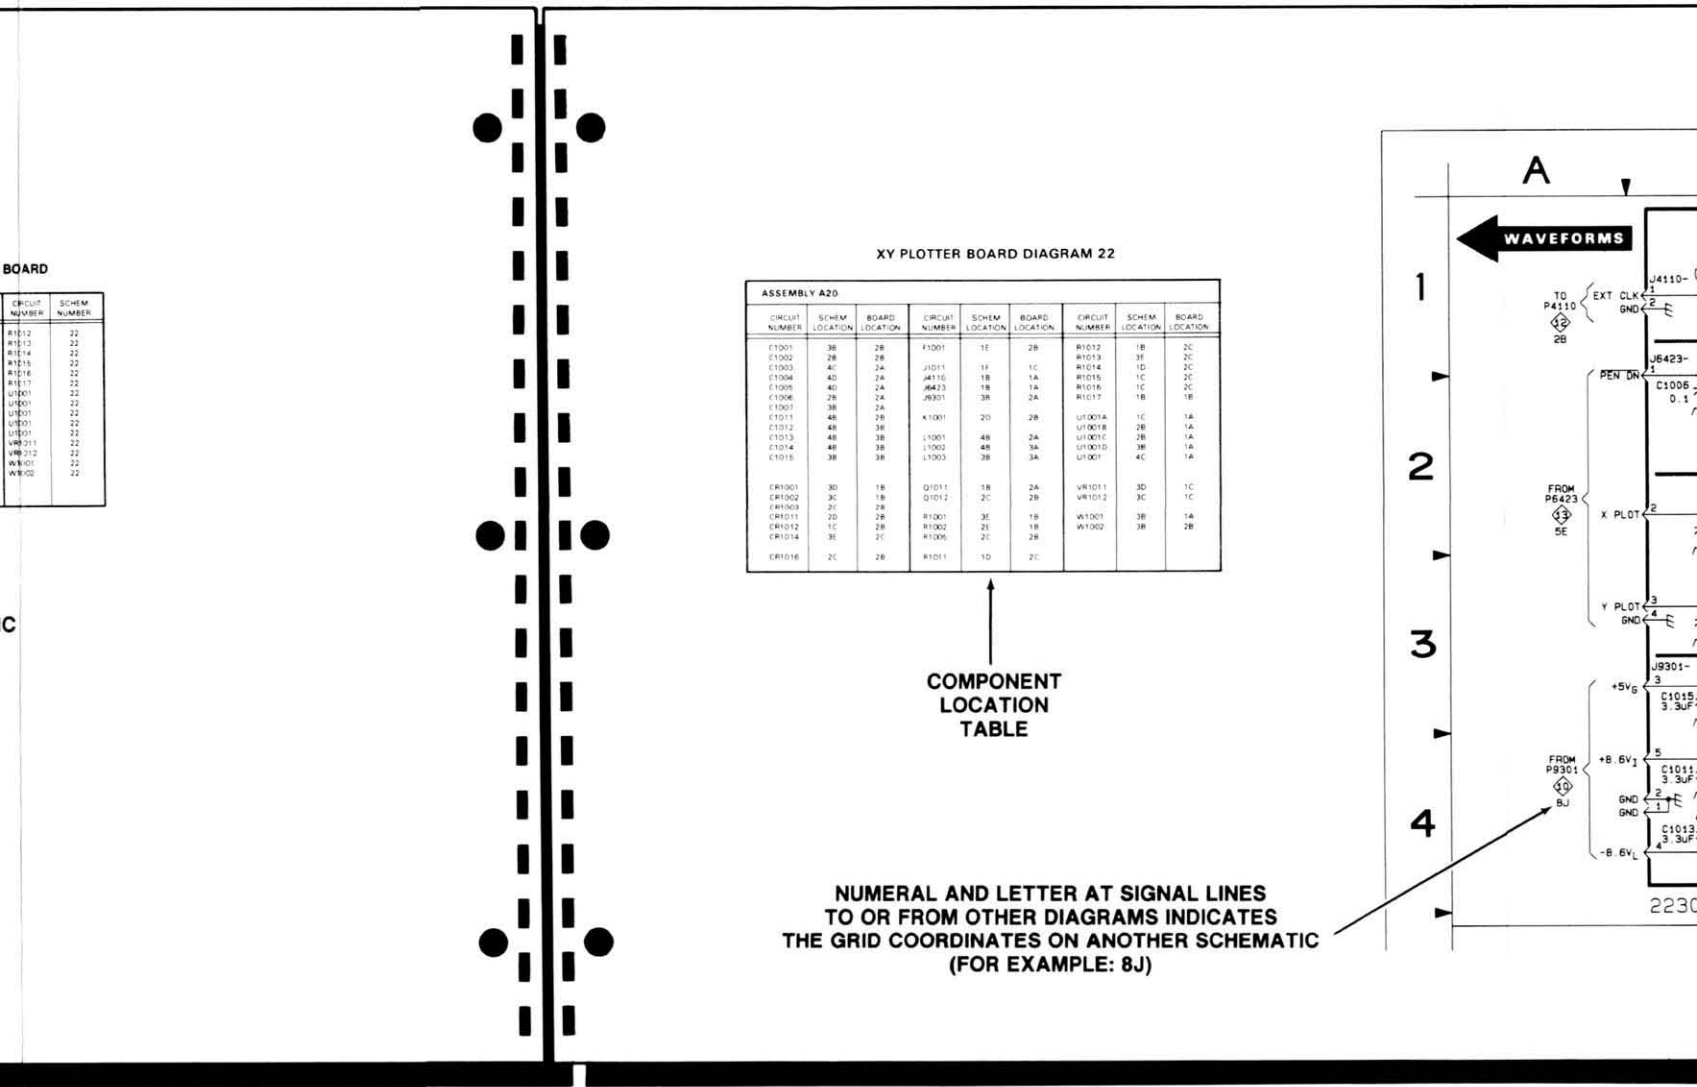


e Schematic Diagram.

that corresponds to the Schematic Diagram num-
bers and names are printed on the front side
of the manual).

number in the Component Location lookup table
diagram. Scan the CIRCUIT NUMBER column of
Circuit Number of the component you are looking for

c. In the SCHEM LOCATION column next to the component, read the grid
coordinates of the component in the schematic.

d. Using the grid coordinates given, find the component in the schematic
diagram.

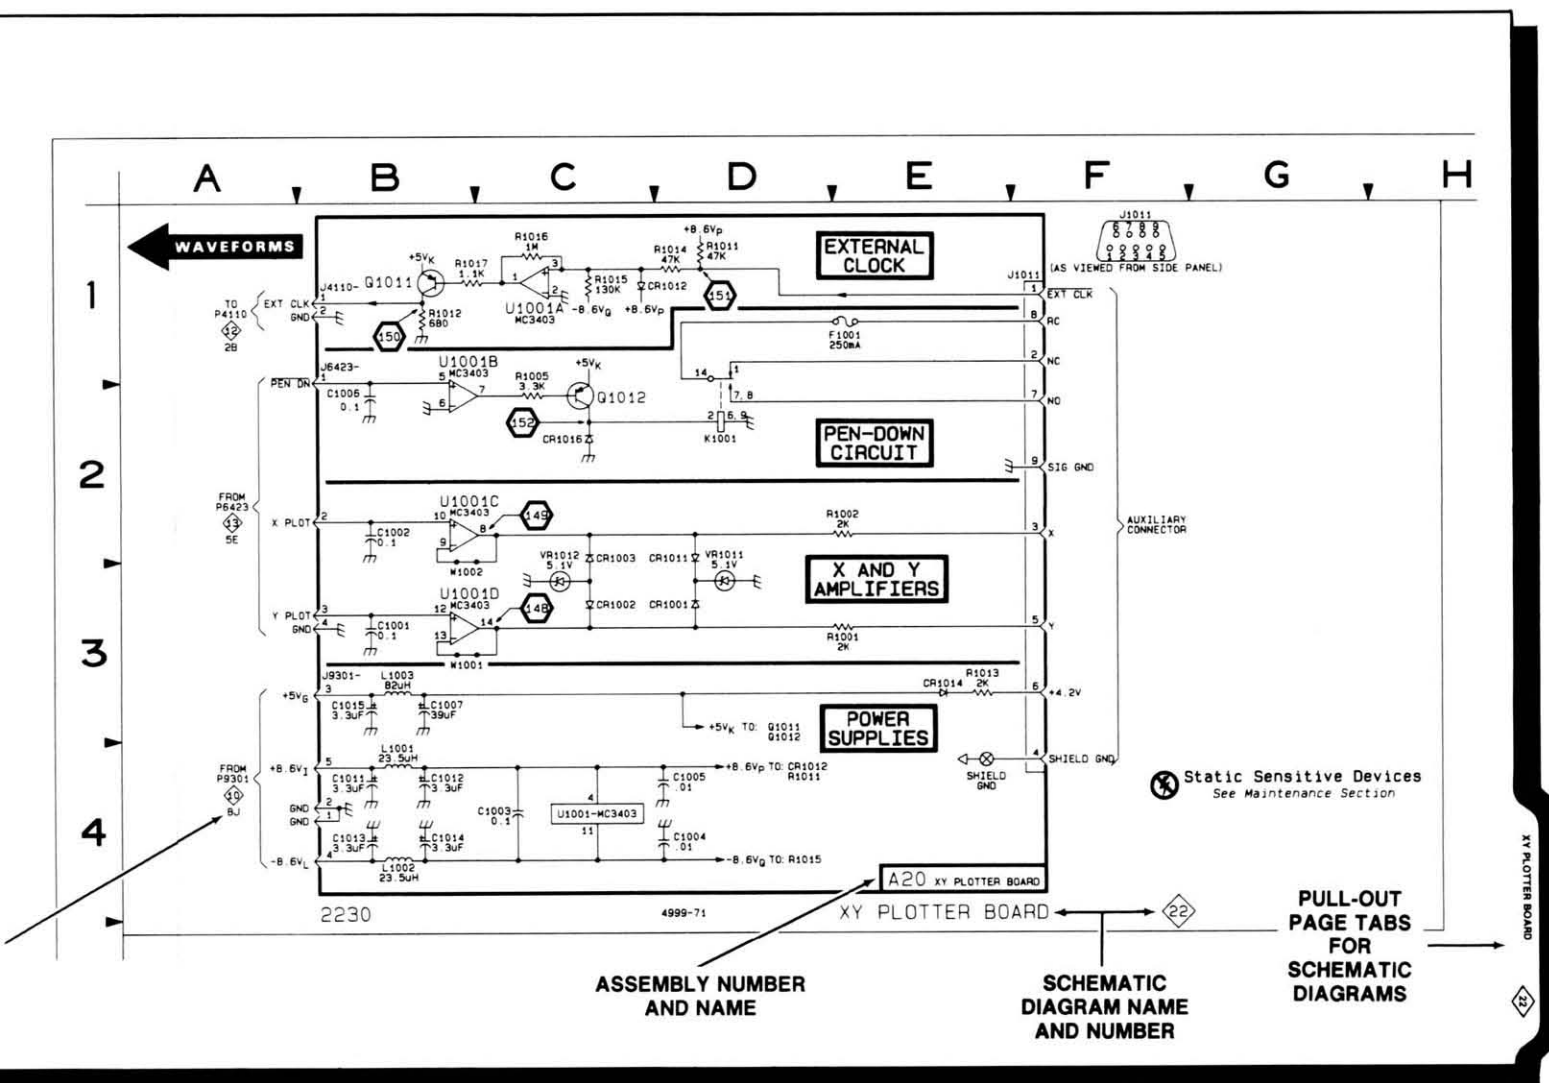

ion shown next to the circuit
instrument.

compare it with the circuit board
component on the circuit board



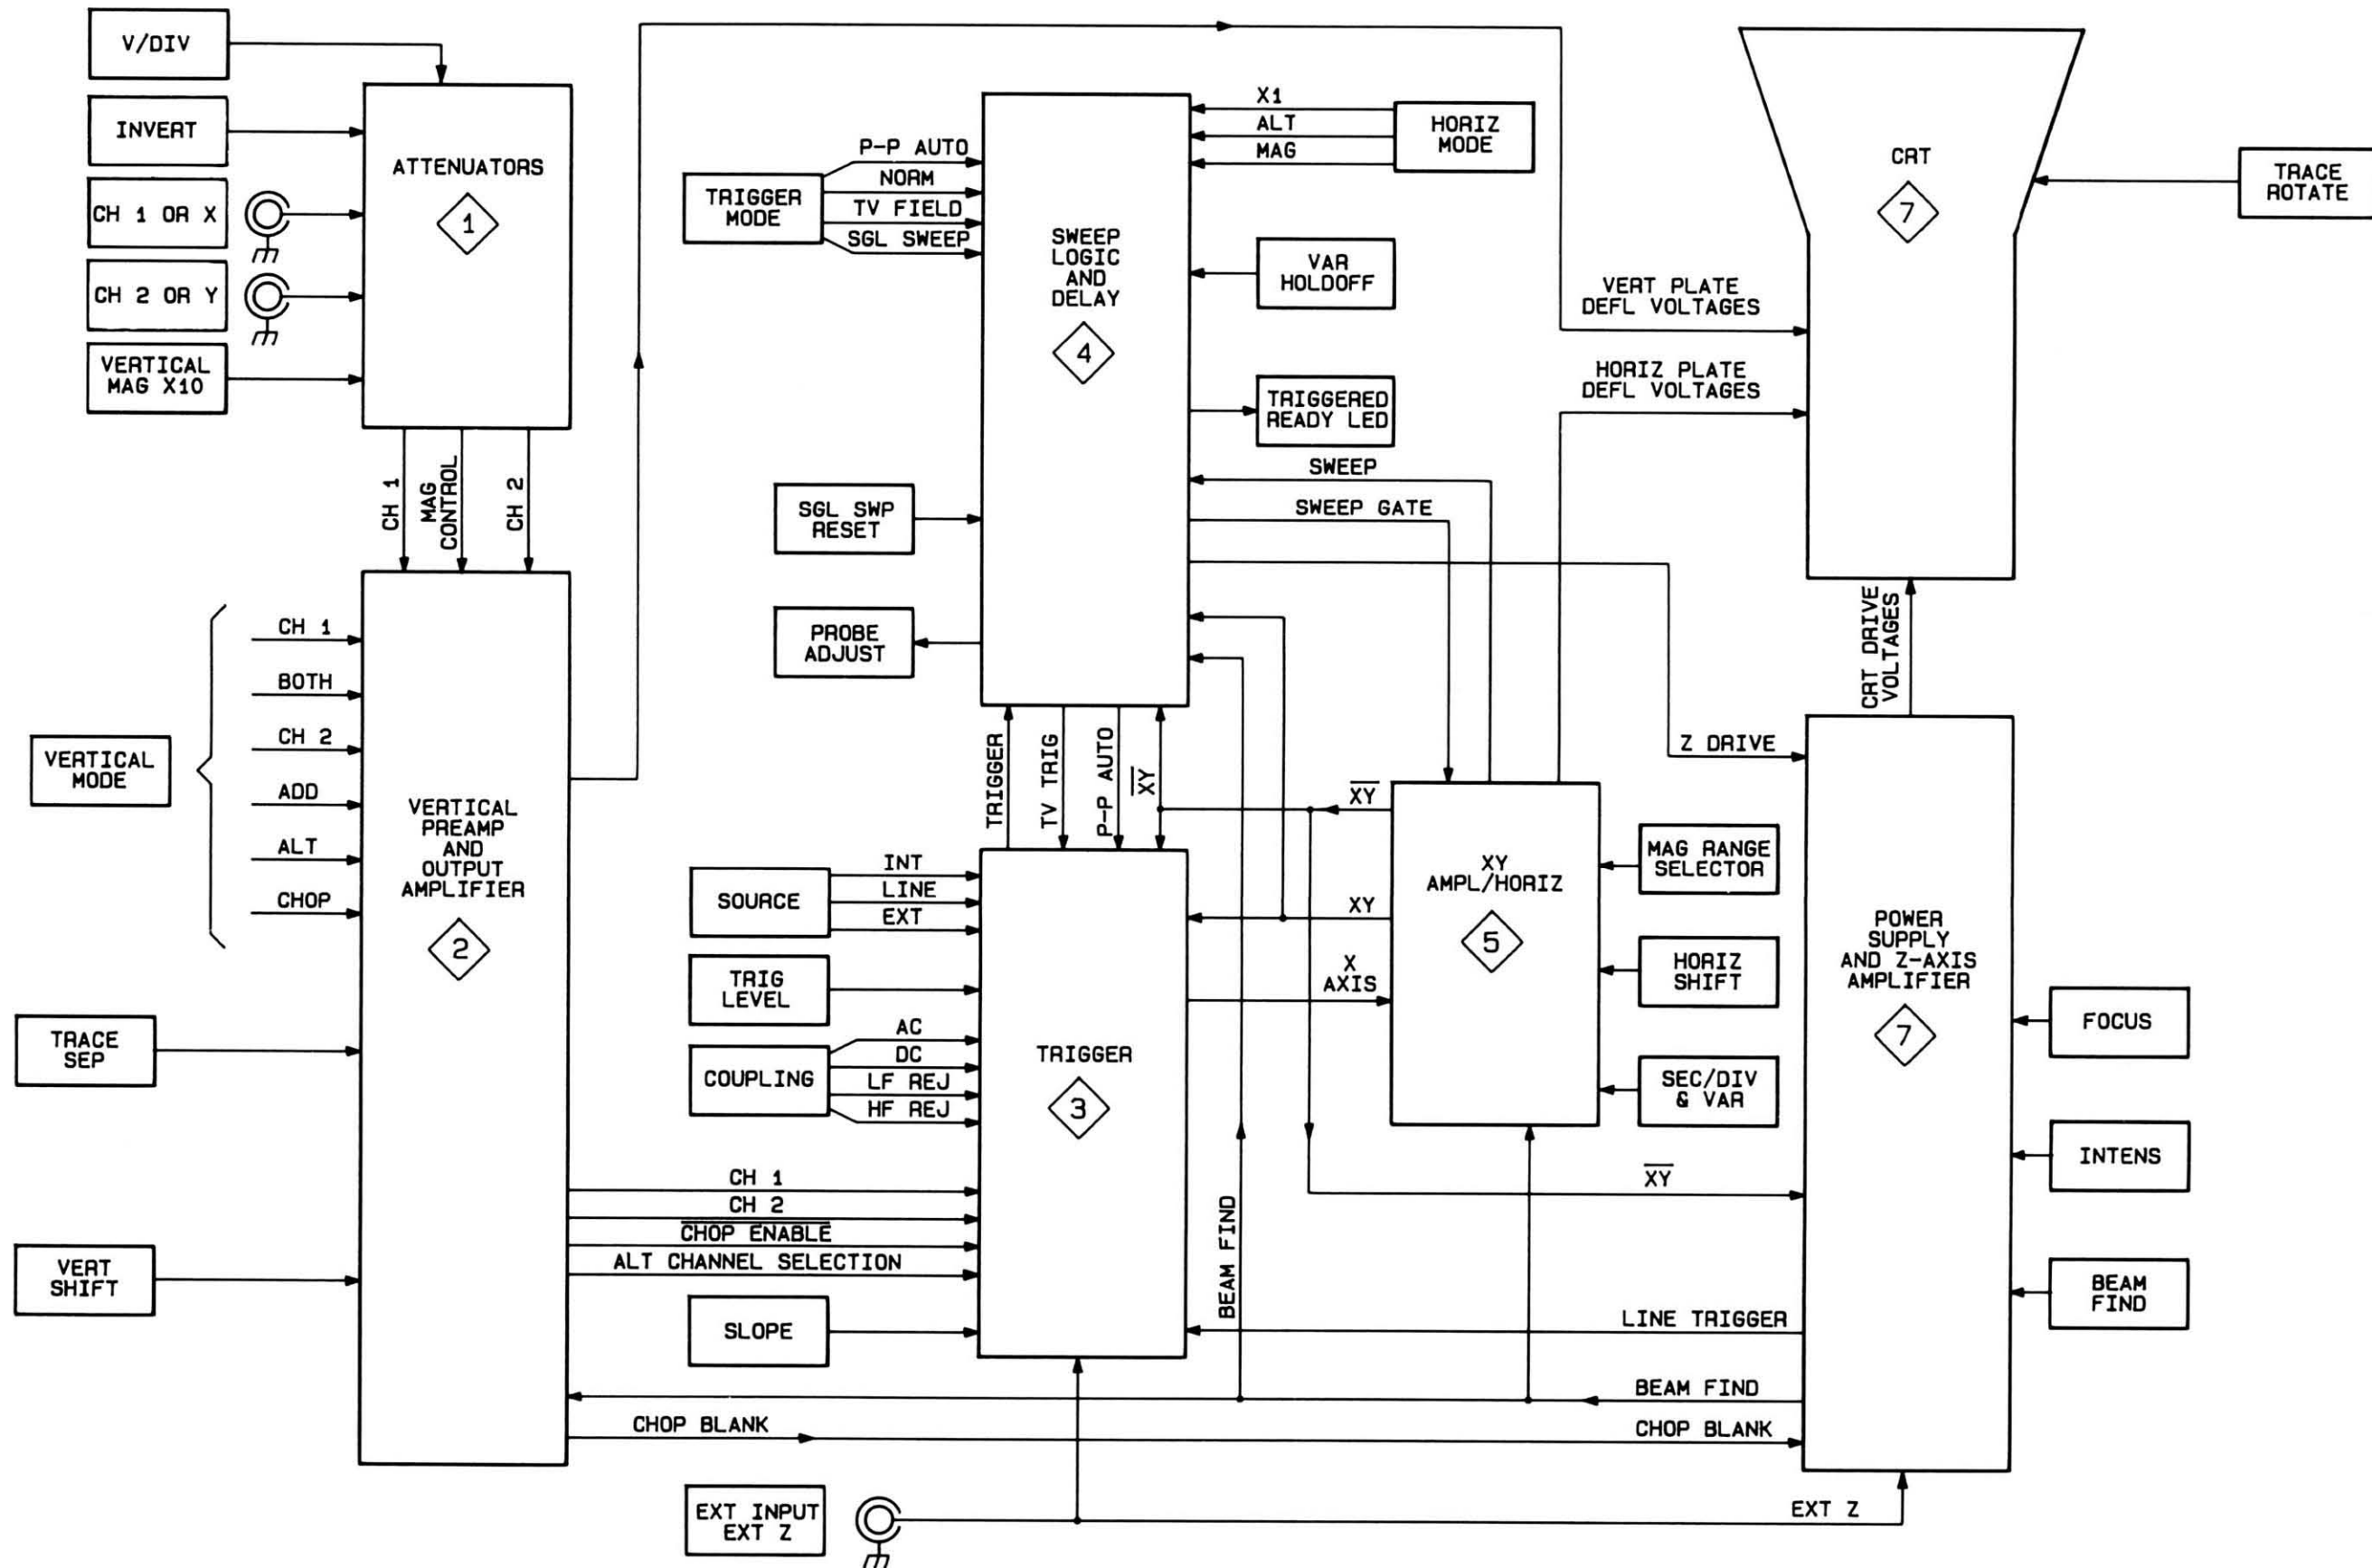


Figure 9-4. 2225 block diagram.

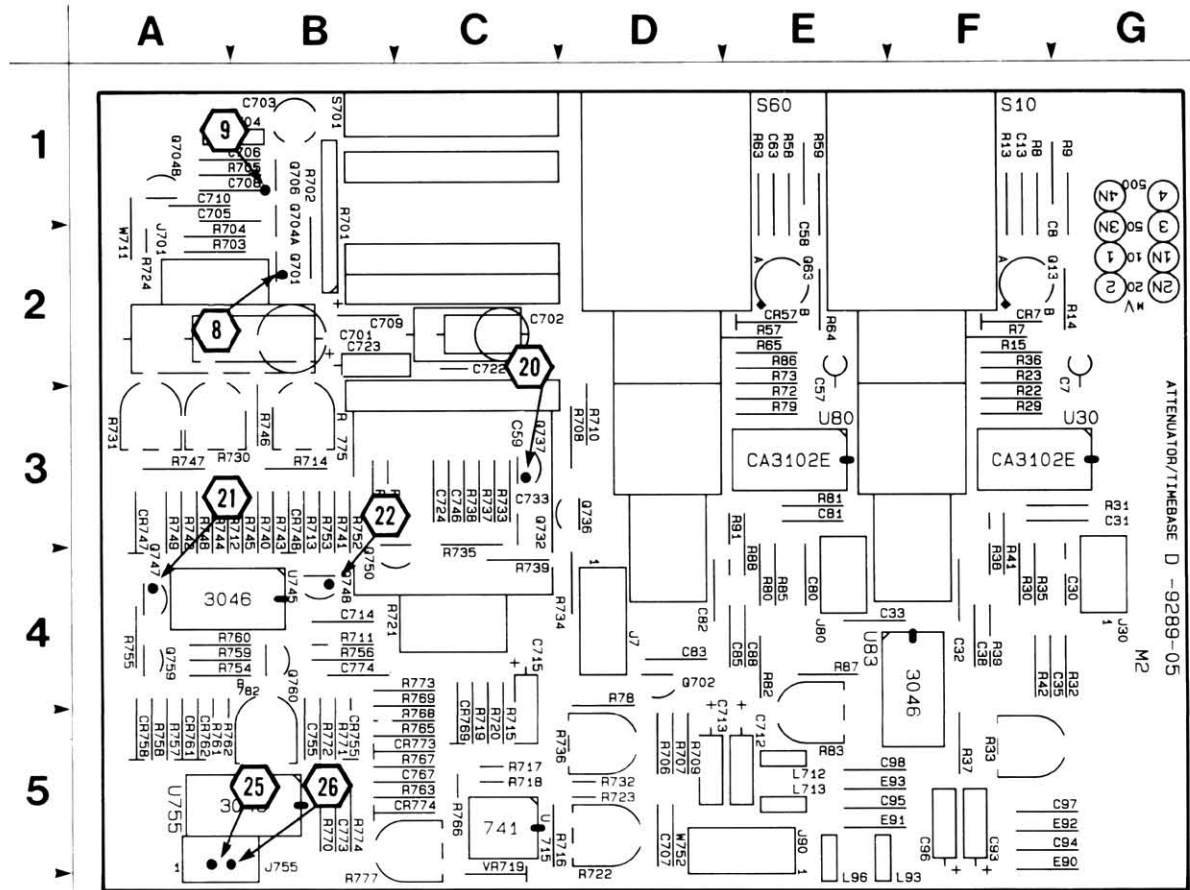

6299-13


Figure 9-5. A2—Attenuator board.

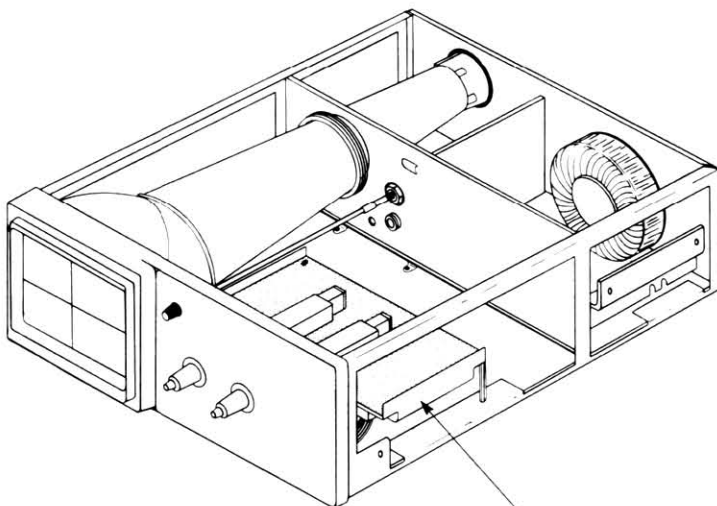

A2—ATTENUATOR BOARD

Static Sensitive Devices
See Maintenance Section

COMPONENT NUMBER EXAMPLE

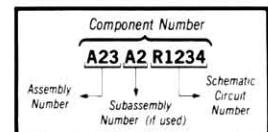

Chassis-mounted components have no Assembly Number prefix—see end of Replaceable Electrical Parts List

A2 – ATTENUATOR/TIMEBASE BOARD

| CIRCUIT NUMBER | SCHEM NUMBER | CIRCUIT NUMBER | SCHEM NUMBER | CIRCUIT NUMBER | SCHEM NUMBER | CIRCUIT NUMBER | SCHEM NUMBER | CIRCUIT NUMBER | SCHEM NUMBER | CIRCUIT NUMBER | SCHEM NUMBER |
|-------------------|-----------------|-------------------|-----------------|-------------------|-----------------|-------------------|-----------------|-------------------|-----------------|-------------------|-----------------|
| AT1 | 1 | C709 | 5 | J80 | 1 | R30 | 1 | R706 | 5 | R751 | 5 |
| AT1 | 6 | C710 | 5 | J90 | 1 | R31 | 1 | R707 | 5 | R752 | 5 |
| AT51 | 1 | C712 | 5 | J701 | 4 | R32 | 1 | R708 | 5 | R753 | 5 |
| AT51 | 6 | C713 | 5 | J701 | 5 | R33 | 1 | R709 | 5 | R754 | 5 |
| | | C714 | 5 | J755 | 5 | R35 | 1 | R710 | 5 | R755 | 5 |
| C6 | 1 | C715 | 5 | | | R36 | 1 | R711 | 5 | R756 | 5 |
| C7 | 1 | C722 | 5 | L93 | 1 | R37 | 1 | R712 | 5 | R757 | 5 |
| C8 | 1 | C723 | 5 | L96 | 1 | R38 | 1 | R713 | 5 | R758 | 5 |
| C13 | 1 | C724 | 5 | L712 | 5 | R39 | 1 | R714 | 5 | R759 | 5 |
| C30 | 1 | C733 | 5 | L713 | 5 | R41 | 1 | R715 | 5 | R760 | 5 |
| C31 | 1 | C746 | 5 | | | R42 | 1 | R716 | 5 | R761 | 5 |
| C32 | 1 | C755 | 5 | Q13 | 1 | R53 | 1 | R717 | 5 | R762 | 5 |
| C33 | 1 | C767 | 5 | Q63 | 1 | R53 | 6 | R718 | 5 | R763 | 5 |
| C35 | 1 | C773 | 5 | Q701 | 5 | R55 | 1 | R719 | 5 | R765 | 5 |
| C38 | 1 | C774 | 5 | Q702 | 5 | R56 | 1 | R720 | 5 | R766 | 5 |
| C56 | 1 | | | Q704 | 5 | R57 | 1 | R721 | 5 | R767 | 5 |
| C57 | 1 | CR7 | 1 | Q706 | 5 | R58 | 1 | R722 | 5 | R768 | 5 |
| C58 | 1 | CR57 | 1 | Q732 | 5 | R59 | 1 | R723 | 5 | R769 | 5 |
| C59 | 1 | CR747 | 5 | Q736 | 5 | R63 | 1 | R730 | 5 | R770 | 5 |
| C63 | 1 | CR748 | 5 | Q737 | 5 | R64 | 1 | R731 | 5 | R771 | 5 |
| C80 | 1 | CR755 | 5 | Q747 | 5 | R65 | 1 | R732 | 5 | R772 | 5 |
| C81 | 1 | CR758 | 5 | Q748 | 5 | R72 | 1 | R733 | 5 | R773 | 5 |
| C82 | 1 | CR761 | 5 | Q750 | 5 | R73 | 1 | R734 | 5 | R774 | 5 |
| C83 | 1 | CR762 | 5 | Q759 | 5 | R78 | 1 | R735 | 5 | R775 | 5 |
| C85 | 1 | CR769 | 5 | Q760 | 5 | R79 | 1 | R736 | 5 | R777 | 5 |
| C88 | 1 | CR773 | 5 | | | R80 | 1 | R737 | 5 | R782 | 5 |
| C93 | 1 | CR774 | 5 | R3 | 1 | R81 | 1 | R738 | 5 | | |
| C94 | 1 | | | R3 | 6 | R82 | 1 | R739 | 5 | S10 | 1 |
| C95 | 1 | E90 | 1 | R5 | 1 | R83 | 1 | R740 | 5 | S60 | 1 |
| C96 | 1 | E91 | 1 | R6 | 1 | R85 | 1 | R741 | 5 | S701 | 5 |
| C97 | 1 | E92 | 1 | R7 | 1 | R86 | 1 | R742 | 5 | | |
| C98 | 1 | E93 | 1 | R8 | 1 | R87 | 1 | R743 | 5 | U30 | 1 |
| C701 | 5 | | | R9 | 1 | R88 | 1 | R744 | 5 | U80 | 1 |
| C702 | 5 | J7 | 1 | R13 | 1 | R91 | 1 | R745 | 5 | U83 | 1 |
| C703 | 5 | J7 | 5 | R14 | 1 | R701 | 5 | R746 | 5 | U715 | 5 |
| C704 | 5 | J7 | 6 | R15 | 1 | R702 | 5 | R747 | 5 | U745 | 5 |
| C705 | 5 | J29 | 1 | R22 | 1 | R703 | 5 | R748 | 5 | U755 | 5 |
| C706 | 5 | J30 | 1 | R23 | 1 | R704 | 5 | R749 | 5 | | |
| C707 | 5 | J79 | 1 | R29 | 1 | R705 | 5 | R750 | 5 | W711 | 5 |
| C708 | 5 | | | | | | | | | | |

TEST WAVEFORM AND VOLTAGE SETUPS

WAVEFORM MEASUREMENTS

On the left-hand pages preceding the schematic diagrams are test waveform illustrations that are intended to aid in troubleshooting the instrument. To test the instrument for these waveforms, make the initial control settings as follows:

Vertical (Both Channels)

| | |
|----------------|------------------|
| POSITION | Midrange |
| MODE | CH 1, NORM |
| VOLTS/DIV | 10 mV |
| VOLTS/DIV Var | In CAL detent |
| Magnification | X1 (CAL knob in) |
| Input Coupling | GND |

Horizontal

| | |
|-----------------|---------------|
| POSITION (both) | Midrange |
| MODE | X1 |
| SEC/DIV | 0.5 ms |
| SEC/DIV Var | In CAL detent |

Trigger

| | |
|----------|-----------|
| SOURCE | VERT MODE |
| COUPLING | DC |
| MODE | P-P AUTO |
| SLOPE | Positive |
| HOLDOFF | Min |

DC VOLTAGE MEASUREMENTS

Typical voltage measurements located on the schematic diagrams were obtained with the instrument operating under the conditions specified in the Waveform Measurements setup. Control-setting changes required for specific voltages are indicated on each waveform page. Measurements are referenced to the chassis ground.

RECOMMENDED TEST EQUIPMENT

Test equipment in Table 4-1 in the Performance Check Procedure, Section 4, of this manual meets the required specifications for testing this instrument.

POWER SUPPLY ISOLATION PROCEDURE

Each regulated supply has numerous feed points to external loads through the instrument. Diagram 8, power distribution, is used in conjunction with the schematic diagrams to determine the service jumper or component that may be lifted to isolate loads from the power supply.


If a supply comes up after lifting one of the isolating jumpers, it is very probable that short exists in the circuitry

on that supply line. By lifting jumpers or other components in the supply line farther down the line, the circuit in which a short exists may be located.

Always set the POWER switch to OFF before soldering or unsoldering service jumpers or other components and before attempting to measure component resistance values.

OTHER PARTS

| CIRCUIT NUMBER | SCHEM NUMBER | SCHEM LOCATION | CIRCUIT NUMBER | SCHEM NUMBER | SCHEM LOCATION | CIRCUIT NUMBER | SCHEM NUMBER | SCHEM LOCATION |
|-------------------|-----------------|-------------------|-------------------|-----------------|-------------------|-------------------|-----------------|-------------------|
| DL224 | 2 | 5K | J590 | 4 | 3M | R53 | 6 | 3K |
| J100 | 1 | 1C | R1 | 6 | 1K | R382 | 6 | 7M |
| J100 | 6 | 1K | R3 | 6 | 2K | T901 | 7 | 6B |
| J151 | 1 | 5C | R47 | 1 | 2B | V900 | 7 | 2L |
| J151 | 6 | 3K | R51 | 1 | 5B | | | |
| J300 | 6 | 7M | R51 | 6 | 3K | | | |



Chassis-mounted components have no Assembly Number prefix—see end of Replaceable Electrical Parts List.

A3—FRONT PANEL BOARD

| CIRCUIT NUMBER | SCHEM NUMBER | CIRCUIT NUMBER | SCHEM NUMBER | CIRCUIT NUMBER | SCHEM NUMBER | CIRCUIT NUMBER | SCHEM NUMBER |
|-------------------|-----------------|-------------------|-----------------|-------------------|-----------------|-------------------|-----------------|
| C2 | 1 | R1 | 6 | R377 | 6 | S390 | 6 |
| C2 | 6 | R2 | 1 | R378 | 6 | S392 | 6 |
| C45 | 6 | R2 | 6 | R379 | 6 | S401 | 6 |
| C46 | 6 | R4 | 1 | R382 | 6 | S460 | 6 |
| C52 | 1 | R4 | 6 | R383 | 6 | S505 | 4 |
| C52 | 6 | R45 | 6 | R426 | 3 | S505 | 6 |
| C373 | 6 | R46 | 6 | R426 | 6 | S545 | 2 |
| C376 | 6 | R51 | 1 | R511 | 4 | S545 | 6 |
| C377 | 6 | R51 | 6 | R511 | 6 | S550 | 2 |
| C378 | 6 | R52 | 1 | R517 | 4 | S550 | 6 |
| C383 | 6 | R52 | 6 | R517 | 6 | S555 | 6 |
| C392 | 6 | R54 | 1 | R518 | 4 | S601 | 4 |
| C725 | 6 | R84 | 1 | R518 | 6 | S601 | 6 |
| C726 | 6 | R84 | 6 | R724 | 6 | S603 | 6 |
| | | R89 | 1 | R725 | 6 | | |
| CR136 | 2 | R89 | 6 | R726 | 6 | W1 | 2 |
| CR381 | 6 | R92 | 1 | R727 | 6 | W1 | 4 |
| CR534 | 2 | R92 | 6 | R728 | 6 | W1 | 6 |
| CR534 | 6 | R94 | 1 | R729 | 6 | W1 | 7 |
| CR537 | 2 | R94 | 6 | R800 | 6 | W2 | 2 |
| CR537 | 6 | R113 | 2 | R800 | 7 | W2 | 6 |
| CR538 | 2 | R113 | 6 | R802 | 6 | W3 | 3 |
| CR538 | 6 | R123 | 2 | R802 | 7 | W3 | 6 |
| | | R123 | 6 | R986 | 6 | W4 | 4 |
| DS370 | 6 | R163 | 2 | R986 | 7 | W4 | 6 |
| DS560 | 4 | R173 | 2 | R987 | 6 | W4 | 7 |
| DS560 | 6 | R173 | 6 | R987 | 7 | W5 | 4 |
| | | R280 | 2 | | | W5 | 6 |
| J987 | 6 | R280 | 6 | S90 | 1 | W6 | 6 |
| J987 | 7 | R365 | 6 | S90 | 6 | W6 | 7 |
| | | R370 | 6 | S101 | 1 | W7 | 1 |
| Q370 | 6 | R371 | 6 | S101 | 6 | W7 | 6 |
| Q725 | 6 | R372 | 6 | S201 | 1 | | |
| | | R373 | 6 | S201 | 6 | | |
| R1 | 1 | R376 | 6 | S380 | 6 | | |

VERTICAL ATTENUATOR/PREAMP DIAGRAM 1

| Assembly A2 | | | | | | | | | | | |
|----------------|----------------|----------------|----------------|----------------|----------------|----------------|----------------|----------------|----------------|----------------|----------------|
| CIRCUIT NUMBER | SCHEM LOCATION | BOARD LOCATION | CIRCUIT NUMBER | SCHEM LOCATION | BOARD LOCATION | CIRCUIT NUMBER | SCHEM LOCATION | BOARD LOCATION | CIRCUIT NUMBER | SCHEM LOCATION | BOARD LOCATION |
| AT1 | 1D | 1F | C97 | 9D | 5F | R5 | 2E | 1F | R59 | 6G | 1E |
| AT51 | 5D | 1D | C98 | 9D | 5E | R6 | 2F | 1F | R63 | 5G | 1E |
| C6 | 2F | 1F | CR7 | 2F | 2F | R7 | 2F | 2F | R64 | 6G | 2E |
| C7* | 1F | 2G | CR57 | 6F | 2E | R8 | 1G | 1F | R65 | 7G | 2E |
| C8 | 2G | 1G | | | | R9 | 2G | 1G | R72 | 7G | 3E |
| C13 | 1G | 1F | E90 | 8C | 5F | R13 | 1G | 1F | R73 | 7G | 3E |
| C30 | 4F | 4G | E91 | 8C | 5E | R14 | 2G | 2G | R78 | 8E | 5D |
| C31 | 4G | 3G | E92 | 9C | 5F | R15 | 3G | 2F | R79 | 7H | 3E |
| C32 | 2L | 4F | E93 | 9C | 5E | R22 | 3G | 3F | R80 | 7F | 4E |
| C33 | 4L | 4E | | | | R23 | 3G | 3F | R81 | 8H | 3E |
| C35 | 5H | 4F | J7 | 8G | 4D | R29 | 2H | 3F | R82 | 7F | 4E |
| C38 | 5J | 4F | J29 | 2H | 3F | R30 | 4F | 4F | R83 | 8E | 5E |
| C56 | 6F | 1D | J30 | 2L | 4G | R31 | 4H | 3G | R85 | 8H | 4E |
| C57* | 5F | 2E | J79 | 6H | 3E | R32 | 4F | 4G | R86 | 6H | 2E |
| C58 | 6G | 1E | J80 | 6L | 4E | R33 | 4E | 5F | R87 | 7J | 4E |
| C59 | 5G | 2D | J90 | 8B | 5E | R35 | 4H | 4F | R88 | 8J | 4E |
| C63 | 5G | 1E | | | | R36 | 1H | 2F | R91 | 9H | 4E |
| C80 | 7F | 4E | L93 | 7C | 5E | R37 | 3J | 5F | | | |
| C81 | 8G | 3E | L96 | 9C | 5E | R38 | 4J | 4F | S10 | 1D | 1F |
| C82 | 6L | 4D | | | | R39 | 4J | 4F | S60 | 5D | 1D |
| C83 | 8L | 4D | Q13A | 2G | 2F | R41 | 5H | 4F | | | |
| C85 | 9H | 4E | Q13B | 3G | 2F | R42 | 5H | 4F | U30 | 3H | 3F |
| C88 | 9J | 4E | Q63A | 6G | 2E | R53 | 6D | 1D | U80 | 7H | 3E |
| C93 | 8C | 5F | Q63B | 7G | 2E | R55 | 6E | 1D | U83A | 7H | 4F |
| C94 | 8D | 5F | | | | R56 | 6F | 1D | U83B | 7J | 4F |
| C95 | 8D | 5E | R3 | 2D | 1F | R57 | 6F | 2E | U83C | 3I | 4F |
| C96 | 9C | 5F | | | | R58 | 5G | 1E | U83D | 3J | 4F |


Partial A2 also shown on diagrams 4, 5 and 6.

| Assembly A3 | | | | | | | | | | | |
|-------------|----|----|------|----|----|------|----|----|------|----|----|
| C2 | 3B | 4C | R52 | 6B | 4D | R94 | 9G | 2C | | | |
| C52 | 6B | 4C | R54 | 6B | 4C | | | | W7-1 | 9G | 3D |
| | | | R84* | 9F | 3C | S90 | 9F | 2C | W7-2 | 9G | 3D |
| R2 | 2B | 4B | R89 | 9F | 2C | S101 | 2B | 4B | W7-6 | 8F | 3D |
| R4 | 2B | 4B | R92 | 9F | 2D | S201 | 6B | 4D | | | |


Partial A3 also shown on diagrams 2, 3, 4, 6 and 7.

| OTHER PARTS | | | | | | | | | | | |
|-------------|----|---------|------|----|---------|----|----|---------|-----|----|---------|
| J100 | 1C | CHASSIS | J151 | 5C | CHASSIS | R1 | 1B | CHASSIS | R51 | 5B | CHASSIS |

*See Parts List for serial number ranges.

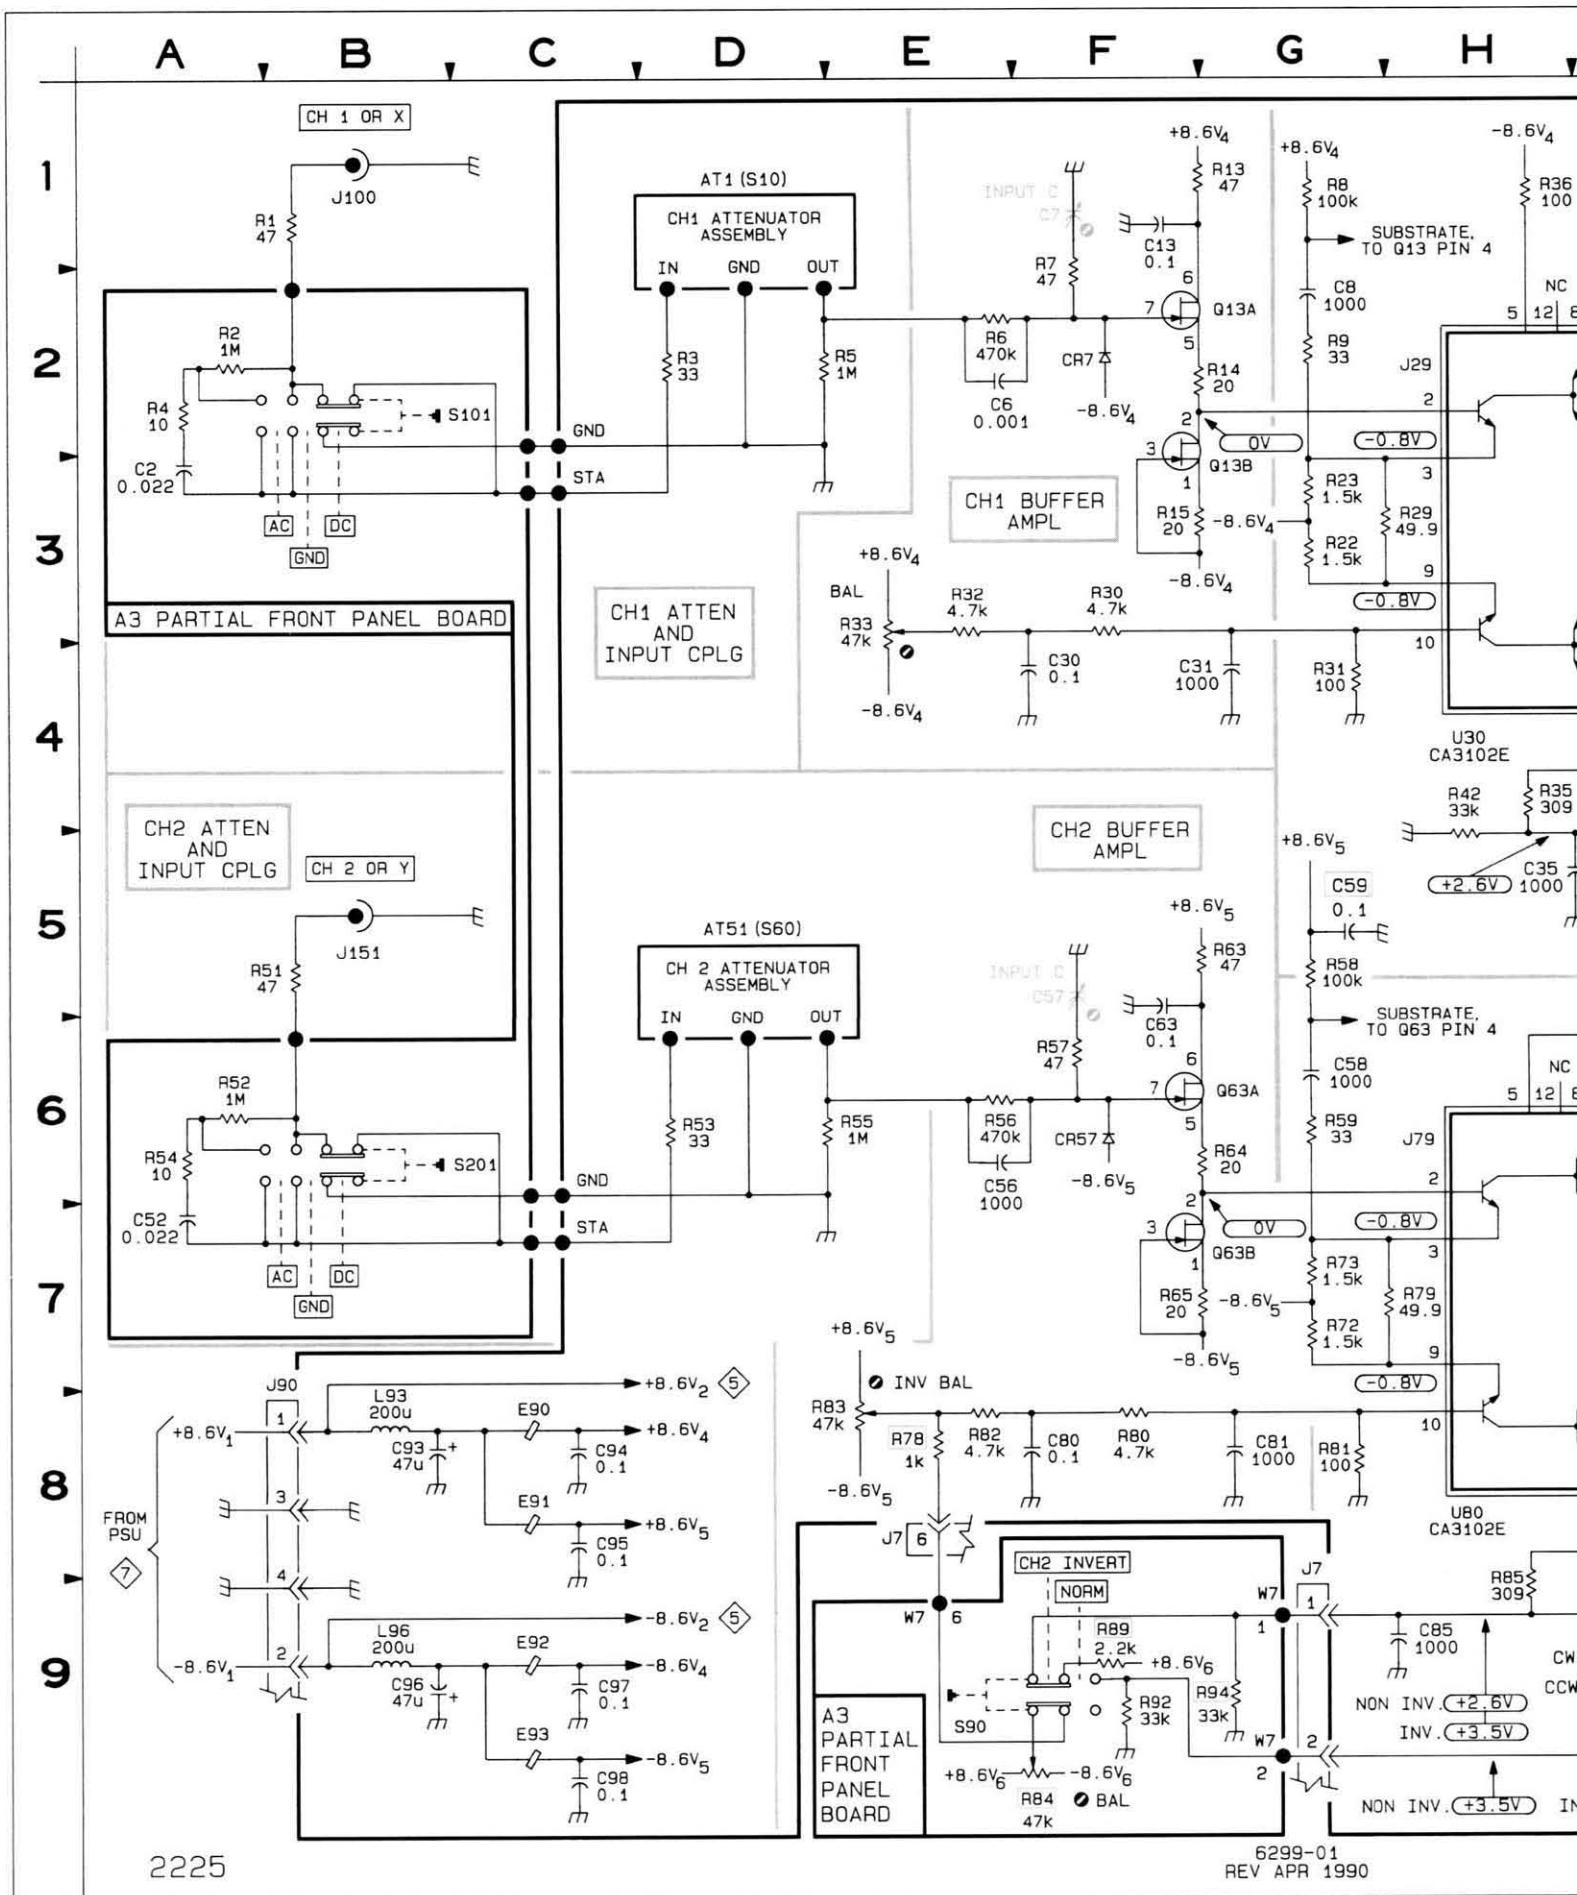

G , H , I , J , K , L , M , N

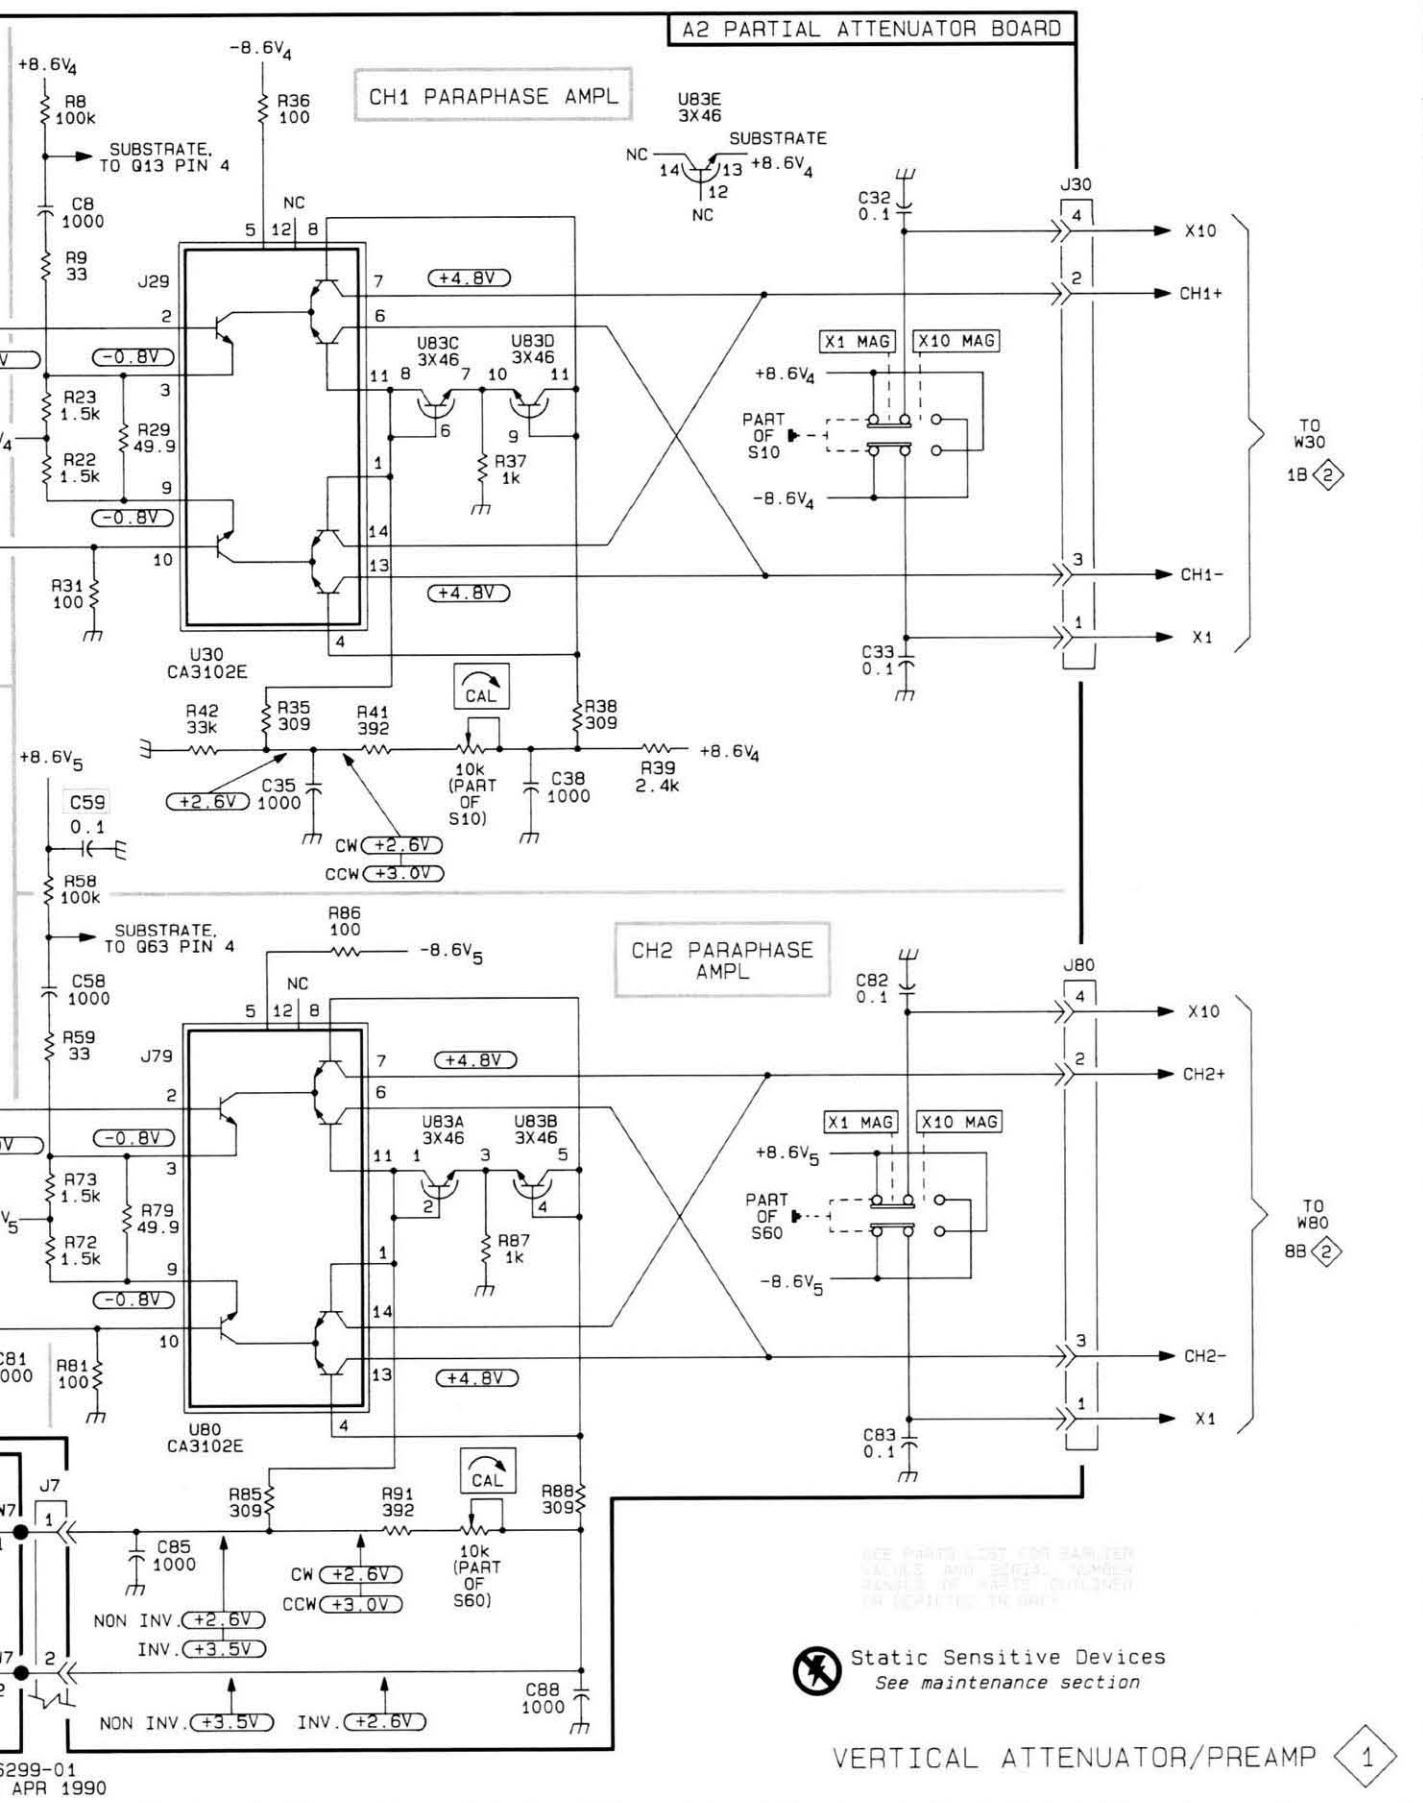

VERTICAL ATTENUATOR/
PREAMP



REV APR 1990

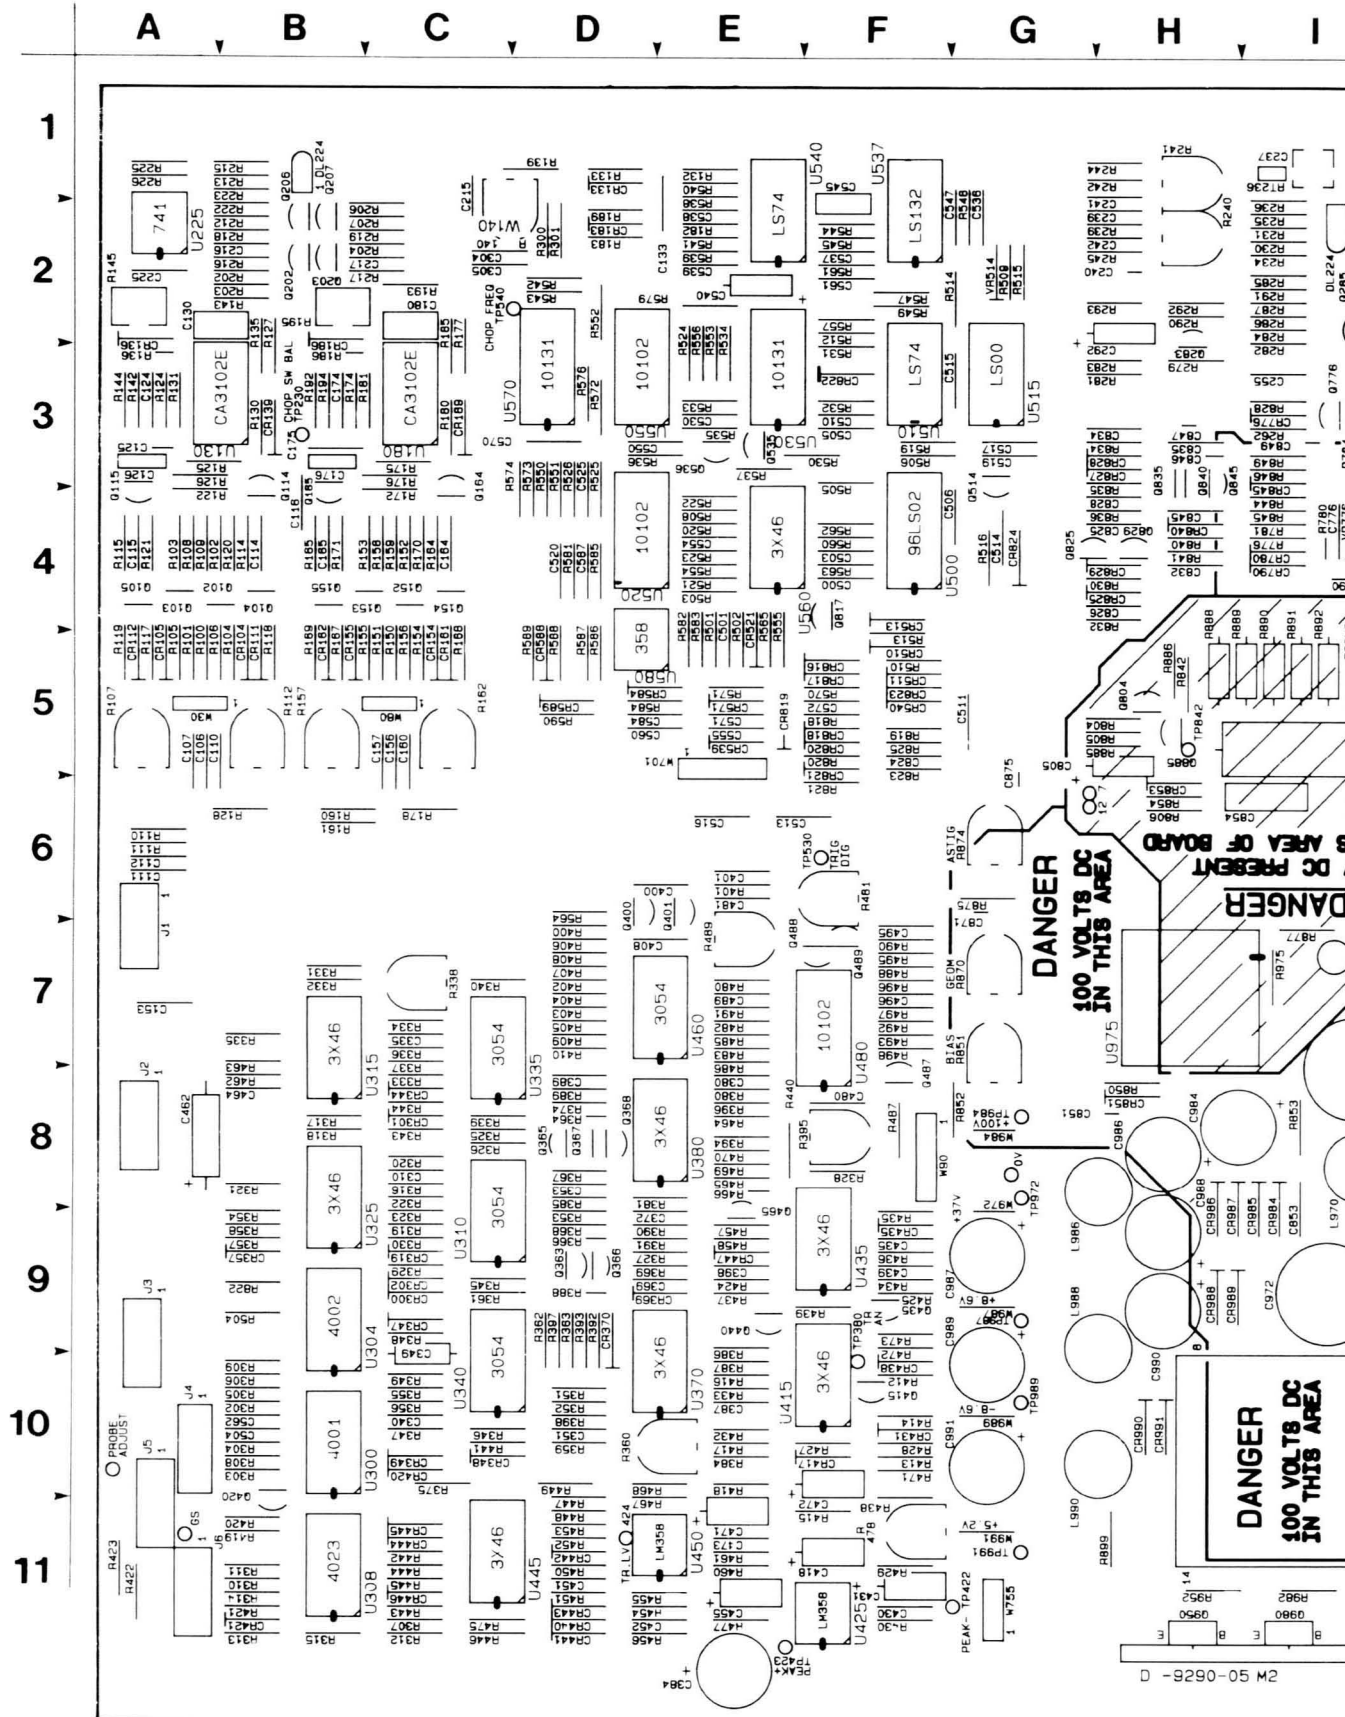


Figure 9-7. A1—Main board component view.


A1—MAIN BOARD

| CIRCUIT NUMBER | SCHEM NUMBER | CIRCUIT NUMBER | SCHEM NUMBER | CIRCUIT NUMBER | SCHEM NUMBER | CIRCUIT NUMBER | SCHEM NUMBER | CIRCUIT NUMBER | SCHEM NUMBER | CIRCUIT NUMBER | SCHEM NUMBER |
|-------------------|-----------------|-------------------|-----------------|-------------------|-----------------|-------------------|-----------------|-------------------|-----------------|-------------------|-----------------|
| C106 | 2 | C504 | 4 | C971 | 7 | CR827 | 7 | Q256 | 2 | R132 | 2 |
| C107 | 2 | C505 | 4 | C972 | 7 | CR828 | 7 | Q257 | 2 | R133 | 2 |
| C110 | 2 | C506 | 4 | C975 | 7 | CR829 | 7 | Q283 | 2 | R135 | 2 |
| C111 | 2 | C510 | 4 | C976 | 7 | CR840 | 7 | Q284 | 2 | R136 | 2 |
| C112 | 2 | C511 | 4 | C979 | 7 | CR845 | 7 | Q285 | 2 | R139 | 2 |
| C114 | 2 | C513 | 4 | C982 | 7 | CR851 | 7 | Q363 | 3 | R140 | 2 |
| C115 | 2 | C514 | 4 | C983 | 7 | CR853 | 7 | Q365 | 3 | R142 | 2 |
| C116 | 2 | C515 | 4 | C984 | 7 | CR854 | 7 | Q366 | 3 | R143 | 2 |
| C124 | 2 | C516 | 4 | C986 | 7 | CR855 | 7 | Q367 | 3 | R144 | 2 |
| C125 | 2 | C517 | 4 | C987 | 7 | CR912 | 7 | Q368 | 3 | R145 | 2 |
| C126 | 2 | C519 | 4 | C988 | 7 | CR915 | 7 | Q400 | 3 | R150 | 2 |
| C130 | 2 | C520 | 4 | C989 | 7 | CR923 | 7 | Q401 | 3 | R151 | 2 |
| C133 | 2 | C525 | 4 | C990 | 7 | CR933 | 7 | Q415 | 3 | R152 | 2 |
| C153 | 2 | C530 | 4 | C991 | 7 | CR953 | 7 | Q420 | 3 | R153 | 2 |
| C156 | 2 | C536 | 2 | | | CR983 | 7 | Q435 | 3 | R154 | 2 |
| C157 | 2 | C537 | 2 | CR104 | 2 | CR984 | 7 | Q440 | 3 | R155 | 2 |
| C160 | 2 | C538 | 2 | CR105 | 2 | CR985 | 7 | Q465 | 3 | R156 | 2 |
| C164 | 2 | C539 | 2 | CR111 | 2 | CR986 | 7 | Q487 | 3 | R157 | 2 |
| C165 | 2 | C540 | 2 | CR112 | 2 | CR987 | 7 | Q488 | 3 | R158 | 2 |
| C174 | 2 | C545 | 2 | CR133 | 2 | CR988 | 7 | Q489 | 3 | R159 | 2 |
| C175 | 2 | C547 | 2 | CR139 | 2 | CR989 | 7 | Q514 | 4 | R160 | 2 |
| C176 | 2 | C550 | 4 | CR154 | 2 | CR990 | 7 | Q535 | 4 | R161 | 2 |
| C180 | 2 | C554 | 4 | CR155 | 2 | CR991 | 7 | Q536 | 4 | R162 | 2 |
| C215 | 2 | C555 | 4 | CR161 | 2 | | | Q770 | 5 | R164 | 2 |
| C216 | 2 | C560 | 4 | CR162 | 2 | DS856 | 7 | Q775 | 5 | R165 | 2 |
| C217 | 2 | C561 | 2 | CR183 | 2 | DS858 | 7 | Q776 | 5 | R166 | 2 |
| C220 | 2 | C562 | 3 | CR186 | 2 | DS870 | 7 | Q779 | 5 | R167 | 2 |
| C225 | 2 | C570 | 4 | CR189 | 2 | | | Q780 | 5 | R168 | 2 |
| C237 | 2 | C571 | 4 | CR300 | 3 | E102 | 2 | Q785 | 5 | R169 | 2 |
| C239 | 2 | C572 | 4 | CR301 | 3 | E103 | 2 | Q789 | 5 | R170 | 2 |
| C240 | 2 | C584 | 4 | CR302 | 3 | E152 | 2 | Q804 | 7 | R171 | 2 |
| C241 | 2 | C587 | 4 | CR319 | 3 | E153 | 2 | Q817 | 7 | R172 | 2 |
| C242 | 2 | C776 | 5 | CR344 | 3 | | | Q825 | 7 | R174 | 2 |
| C250 | 2 | C780 | 5 | CR347 | 3 | J1 | 2 | Q829 | 7 | R175 | 2 |
| C251 | 2 | C782 | 5 | CR348 | 3 | J1 | 4 | Q835 | 7 | R176 | 2 |
| C255 | 2 | C784 | 5 | CR349 | 3 | J1 | 6 | Q840 | 7 | R177 | 2 |
| C256 | 2 | C785 | 5 | CR357 | 3 | J1 | 7 | Q845 | 7 | R178 | 2 |
| C257 | 2 | C789 | 5 | CR369 | 3 | J2 | 2 | Q885 | 7 | R180 | 2 |
| C258 | 2 | C794 | 5 | CR370 | 3 | J2 | 3 | Q911 | 7 | R181 | 2 |
| C281 | 2 | C795 | 5 | CR417 | 3 | J2 | 6 | Q912 | 7 | R182 | 2 |
| C292 | 2 | C799 | 5 | CR420 | 3 | J3 | 3 | Q913 | 7 | R183 | 2 |
| C304 | 3 | C805 | 7 | CR421 | 3 | J3 | 6 | Q918 | 7 | R185 | 2 |
| C305 | 3 | C824 | 7 | CR431 | 3 | J4 | 4 | Q921 | 7 | R186 | 2 |
| C310 | 3 | C825 | 7 | CR432 | 3 | J4 | 6 | Q923 | 7 | R189 | 2 |
| C335 | 3 | C828 | 7 | CR435 | 3 | J4 | 7 | Q930 | 7 | R192 | 2 |
| C340 | 3 | C832 | 7 | CR438 | 3 | J5 | 3 | Q940 | 7 | R193 | 2 |
| C349 | 3 | C834 | 7 | CR440 | 3 | J5 | 4 | Q950 | 7 | R194 | 2 |
| C351 | 3 | C835 | 7 | CR441 | 3 | J5 | 6 | Q960 | 7 | R195 | 2 |
| C353 | 3 | C845 | 7 | CR442 | 3 | J6 | 3 | Q970 | 7 | R202 | 2 |
| C369 | 3 | C847 | 7 | CR443 | 3 | J6 | 6 | Q980 | 7 | R203 | 2 |
| C372 | 3 | C849 | 7 | CR444 | 3 | J6 | 7 | | | R204 | 2 |
| C380 | 3 | C851 | 7 | CR445 | 3 | | | R100 | 2 | R206 | 2 |
| C384 | 3 | C853 | 7 | CR446 | 3 | L910 | 7 | R101 | 2 | R207 | 2 |
| C387 | 3 | C854 | 7 | CR447 | 3 | L970 | 7 | R102 | 2 | R212 | 2 |
| C389 | 3 | C855 | 7 | CR510 | 4 | L986 | 7 | R103 | 2 | R213 | 2 |
| C396 | 3 | C871 | 7 | CR511 | 4 | L988 | 7 | R104 | 2 | R215 | 2 |
| C398 | 3 | C875 | 7 | CR513 | 4 | L990 | 7 | R105 | 2 | R216 | 2 |
| C400 | 3 | C893 | 7 | CR521 | 4 | | | R106 | 2 | R217 | 2 |
| C401 | 3 | C901 | 7 | CR530 | 4 | P900 | 7 | R107 | 2 | R218 | 2 |
| C408 | 3 | C902 | 7 | CR539 | 2 | | | R108 | 2 | R219 | 2 |
| C418 | 3 | C908 | 7 | CR540 | 4 | Q102 | 2 | R109 | 2 | R222 | 2 |
| C430 | 3 | C909 | 7 | CR571 | 4 | Q103 | 2 | R110 | 2 | R223 | 2 |
| C431 | 3 | C910 | 7 | CR584 | 4 | Q104 | 2 | R111 | 2 | R225 | 2 |
| C435 | 3 | C912 | 7 | CR588 | 4 | Q105 | 2 | R112 | 2 | R226 | 2 |
| C439 | 3 | C913 | 7 | CR589 | 4 | Q114 | 2 | R114 | 2 | R230 | 2 |
| C451 | 3 | C914 | 7 | CR776 | 5 | Q115 | 2 | R115 | 2 | R231 | 2 |
| C452 | 3 | C915 | 7 | CR780 | 5 | Q152 | 2 | R116 | 2 | R233 | 2 |
| C455 | 3 | C924 | 7 | CR781 | 5 | Q153 | 2 | R117 | 2 | R234 | 2 |
| C462 | 3 | C927 | 7 | CR790 | 5 | Q154 | 2 | R118 | 2 | R235 | 2 |
| C464 | 3 | C932 | 7 | CR791 | 5 | Q155 | 2 | R119 | 2 | R236 | 2 |
| C471 | 3 | C933 | 7 | CR816 | 7 | Q164 | 2 | R120 | 2 | R239 | 2 |
| C472 | 3 | C939 | 7 | CR817 | 7 | Q165 | 2 | R121 | 2 | R240 | 2 |
| C473 | 3 | C940 | 7 | CR818 | 7 | Q202 | 2 | R122 | 2 | R241 | 2 |
| C480 | 3 | C941 | 7 | CR819 | 7 | Q203 | 2 | R124 | 2 | R242 | 2 |
| C481 | 3 | C942 | 7 | CR820 | 7 | Q206 | 2 | R125 | 2 | R244 | 2 |
| C489 | 3 | C952 | 7 | CR821 | 7 | Q207 | 2 | R126 | 2 | R245 | 2 |
| C495 | 3 | C953 | 7 | CR822 | 7 | Q230 | 2 | R127 | 2 | R250 | 2 |
| C496 | 3 | C952 | 7 | CR823 | 7 | Q231 | 2 | R128 | 2 | R251 | 2 |
| C500 | 4 | C953 | 7 | CR824 | 7 | Q254 | 2 | R130 | 2 | R254 | 2 |
| C501 | 4 | C970 | 7 | CR825 | 7 | Q255 | 2 | R131 | 2 | R255 | 2 |
| C503 | 4 | | | | | | | | | | |

A1—MAIN BOARD (cont)

| CIRCUIT NUMBER | SCHEM NUMBER | CIRCUIT NUMBER | SCHEM NUMBER | CIRCUIT NUMBER | SCHEM NUMBER | CIRCUIT NUMBER | SCHEM NUMBER | CIRCUIT NUMBER | SCHEM NUMBER | CIRCUIT NUMBER | SCHEM NUMBER |
|-------------------|-----------------|-------------------|-----------------|-------------------|-----------------|-------------------|-----------------|-------------------|-----------------|-------------------|-----------------|
| R256 | 2 | R356 | 3 | R450 | 3 | R543 | 3 | R849 | 7 | RT236 | 2 |
| R257 | 2 | R357 | 3 | R451 | 3 | R544 | 2 | R850 | 7 | | |
| R258 | 2 | R358 | 3 | R452 | 3 | R545 | 2 | R851 | 7 | T902 | 7 |
| R259 | 2 | R359 | 3 | R453 | 3 | R547 | 2 | R852 | 7 | | |
| R261 | 2 | R360 | 3 | R454 | 3 | R548 | 2 | R853 | 7 | TP230 | 2 |
| R262 | 5 | R361 | 3 | R455 | 3 | R549 | 2 | R854 | 7 | TP380 | 3 |
| R266 | 2 | R362 | 3 | R456 | 3 | R550 | 4 | R858 | 7 | TP422 | 3 |
| R267 | 2 | R363 | 3 | R457 | 3 | R551 | 4 | R860 | 7 | TP423 | 3 |
| R268 | 2 | R364 | 3 | R458 | 3 | R552 | 4 | R870 | 7 | TP530 | 4 |
| R272 | 2 | R366 | 3 | R459 | 3 | R553 | 4 | R872 | 7 | TP540 | 2 |
| R273 | 2 | R367 | 3 | R460 | 3 | R554 | 4 | R873 | 7 | TP842 | 7 |
| R279 | 2 | R368 | 3 | R461 | 3 | R555 | 4 | R874 | 7 | TP972 | 7 |
| R281 | 2 | R369 | 3 | R462 | 3 | R556 | 4 | R875 | 7 | TP984 | 7 |
| R282 | 2 | R374 | 3 | R463 | 3 | R557 | 4 | R877 | 7 | TP987 | 7 |
| R283 | 2 | R375 | 3 | R464 | 3 | R560 | 4 | R885 | 7 | TP989 | 7 |
| R284 | 2 | R380 | 3 | R465 | 3 | R561 | 2 | R886 | 7 | TP991 | 7 |
| R285 | 2 | R381 | 3 | R466 | 3 | R562 | 4 | R888 | 7 | | |
| R286 | 2 | R384 | 3 | R467 | 3 | R563 | 4 | R889 | 7 | U130 | 2 |
| R287 | 2 | R385 | 3 | R468 | 3 | R564 | 4 | R890 | 7 | U180 | 2 |
| R288 | 2 | R386 | 3 | R469 | 3 | R565 | 4 | R891 | 7 | U225 | 2 |
| R289 | 2 | R387 | 3 | R470 | 3 | R570 | 4 | R892 | 7 | U300 | 3 |
| R290 | 2 | R388 | 3 | R471 | 3 | R571 | 4 | R894 | 7 | U304 | 3 |
| R291 | 2 | R389 | 3 | R472 | 3 | R572 | 4 | R898 | 7 | U308 | 3 |
| R292 | 2 | R390 | 3 | R473 | 3 | R573 | 4 | R899 | 7 | U310 | 3 |
| R293 | 2 | R391 | 3 | R475 | 3 | R574 | 4 | R900 | 7 | U315 | 3 |
| R294 | 2 | R392 | 3 | R477 | 3 | R576 | 4 | R901 | 7 | U325 | 3 |
| R295 | 2 | R393 | 3 | R478 | 3 | R579 | 4 | R907 | 7 | U335 | 3 |
| R300 | 3 | R394 | 3 | R480 | 3 | R581 | 4 | R908 | 7 | U340 | 3 |
| R301 | 3 | R395 | 3 | R481 | 3 | R582 | 4 | R909 | 7 | U370 | 3 |
| R302 | 3 | R396 | 3 | R482 | 3 | R583 | 4 | R910 | 7 | U380 | 3 |
| R303 | 3 | R397 | 3 | R483 | 3 | R584 | 4 | R911 | 7 | U415 | 3 |
| R304 | 3 | R398 | 3 | R485 | 3 | R585 | 4 | R912 | 7 | U425 | 3 |
| R305 | 3 | R400 | 3 | R486 | 3 | R586 | 4 | R913 | 7 | U435 | 3 |
| R306 | 3 | R401 | 3 | R487 | 3 | R587 | 4 | R914 | 7 | U445 | 3 |
| R307 | 3 | R402 | 3 | R488 | 3 | R588 | 4 | R915 | 7 | U450 | 3 |
| R308 | 3 | R403 | 3 | R489 | 3 | R589 | 4 | R916 | 7 | U460 | 3 |
| R309 | 3 | R404 | 3 | R490 | 3 | R590 | 4 | R917 | 7 | U480 | 3 |
| R310 | 3 | R405 | 3 | R491 | 3 | R764 | 5 | R918 | 7 | U500 | 4 |
| R311 | 3 | R406 | 3 | R492 | 3 | R776 | 5 | R919 | 7 | U510 | 4 |
| R312 | 3 | R407 | 3 | R493 | 3 | R778 | 5 | R920 | 7 | U515 | 4 |
| R313 | 3 | R408 | 3 | R495 | 3 | R779 | 5 | R921 | 7 | U520 | 4 |
| R314 | 3 | R409 | 3 | R496 | 3 | R780 | 5 | R922 | 7 | U530 | 4 |
| R315 | 3 | R410 | 3 | R497 | 3 | R781 | 5 | R923 | 7 | U537 | 2 |
| R316 | 3 | R412 | 3 | R498 | 3 | R784 | 5 | R924 | 7 | U540 | 2 |
| R317 | 3 | R413 | 3 | R500 | 4 | R785 | 5 | R925 | 7 | U550 | 4 |
| R318 | 3 | R414 | 3 | R501 | 4 | R786 | 5 | R926 | 7 | U560 | 4 |
| R319 | 3 | R415 | 3 | R502 | 4 | R787 | 5 | R927 | 7 | U570 | 4 |
| R320 | 3 | R416 | 3 | R503 | 4 | R788 | 5 | R928 | 7 | U580 | 4 |
| R321 | 3 | R417 | 3 | R504 | 4 | R789 | 5 | R929 | 7 | U910 | 7 |
| R322 | 3 | R418 | 3 | R505 | 4 | R790 | 5 | R930 | 7 | U920 | 7 |
| R323 | 3 | R419 | 3 | R506 | 4 | R791 | 5 | R931 | 7 | U940 | 7 |
| R325 | 3 | R420 | 3 | R508 | 4 | R792 | 5 | R932 | 7 | U975 | 7 |
| R326 | 3 | R421 | 3 | R509 | 4 | R794 | 5 | R933 | 7 | | |
| R327 | 3 | R422 | 3 | R510 | 4 | R795 | 5 | R934 | 7 | VR514 | 4 |
| R328 | 3 | R423 | 3 | R512 | 4 | R796 | 5 | R935 | 7 | VR776 | 5 |
| R329 | 3 | R424 | 3 | R513 | 4 | R797 | 5 | R936 | 7 | VR792 | 5 |
| R330 | 3 | R425 | 3 | R514 | 4 | R798 | 5 | R937 | 7 | VR910 | 7 |
| R331 | 3 | R427 | 3 | R515 | 4 | R799 | 5 | R938 | 7 | VR931 | 7 |
| R332 | 3 | R428 | 3 | R516 | 4 | R804 | 7 | R939 | 7 | VR939 | 7 |
| R333 | 3 | R429 | 3 | R519 | 4 | R805 | 7 | R940 | 7 | VR942 | 7 |
| R334 | 3 | R430 | 3 | R520 | 4 | R806 | 7 | R941 | 7 | VR969 | 7 |
| R335 | 3 | R432 | 3 | R521 | 4 | R818 | 7 | R942 | 7 | | |
| R336 | 3 | R433 | 3 | R522 | 4 | R819 | 7 | R943 | 7 | W30 | 2 |
| R337 | 3 | R434 | 3 | R523 | 4 | R820 | 7 | R944 | 7 | W80 | 2 |
| R338 | 3 | R435 | 3 | R524 | 4 | R821 | 7 | R945 | 7 | W90 | 7 |
| R339 | 3 | R436 | 3 | R525 | 4 | R822 | 7 | R946 | 7 | W140 | 2 |
| R340 | 3 | R437 | 3 | R526 | 4 | R823 | 7 | R952 | 7 | W590 | 4 |
| R343 | 3 | R438 | 3 | R530 | 4 | R825 | 7 | R953 | 7 | W701 | 4 |
| R344 | 3 | R439 | 3 | R531 | 4 | R828 | 5 | R965 | 7 | W701 | 7 |
| R345 | 3 | R440 | 3 | R532 | 4 | R830 | 7 | R966 | 7 | W755 | 5 |
| R346 | 3 | R441 | 3 | R533 | 4 | R832 | 7 | R967 | 7 | W893 | 7 |
| R347 | 3 | R442 | 3 | R534 | 4 | R834 | 7 | R968 | 7 | W971 | 7 |
| R348 | 3 | R443 | 3 | R535 | 4 | R835 | 7 | R969 | 7 | W972 | 7 |
| R349 | 3 | R444 | 3 | R536 | 4 | R836 | 7 | R975 | 7 | W984 | 7 |
| R351 | 3 | R445 | 3 | R537 | 4 | R840 | 7 | R976 | 7 | W985 | 7 |
| R352 | 3 | R446 | 3 | R538 | 2 | R841 | 7 | R978 | 7 | W987 | 7 |
| R353 | 3 | R447 | 3 | R539 | 2 | R842 | 7 | R982 | 7 | W989 | 7 |
| R354 | 3 | R448 | 3 | R540 | 2 | R844 | 7 | R983 | 7 | W991 | 7 |
| R355 | 3 | R449 | 3 | R541 | 2 | R845 | 7 | | | | |
| | | | | R542 | 3 | | | | | | |

A1—MAIN BOARD
CIRCUIT SIDE

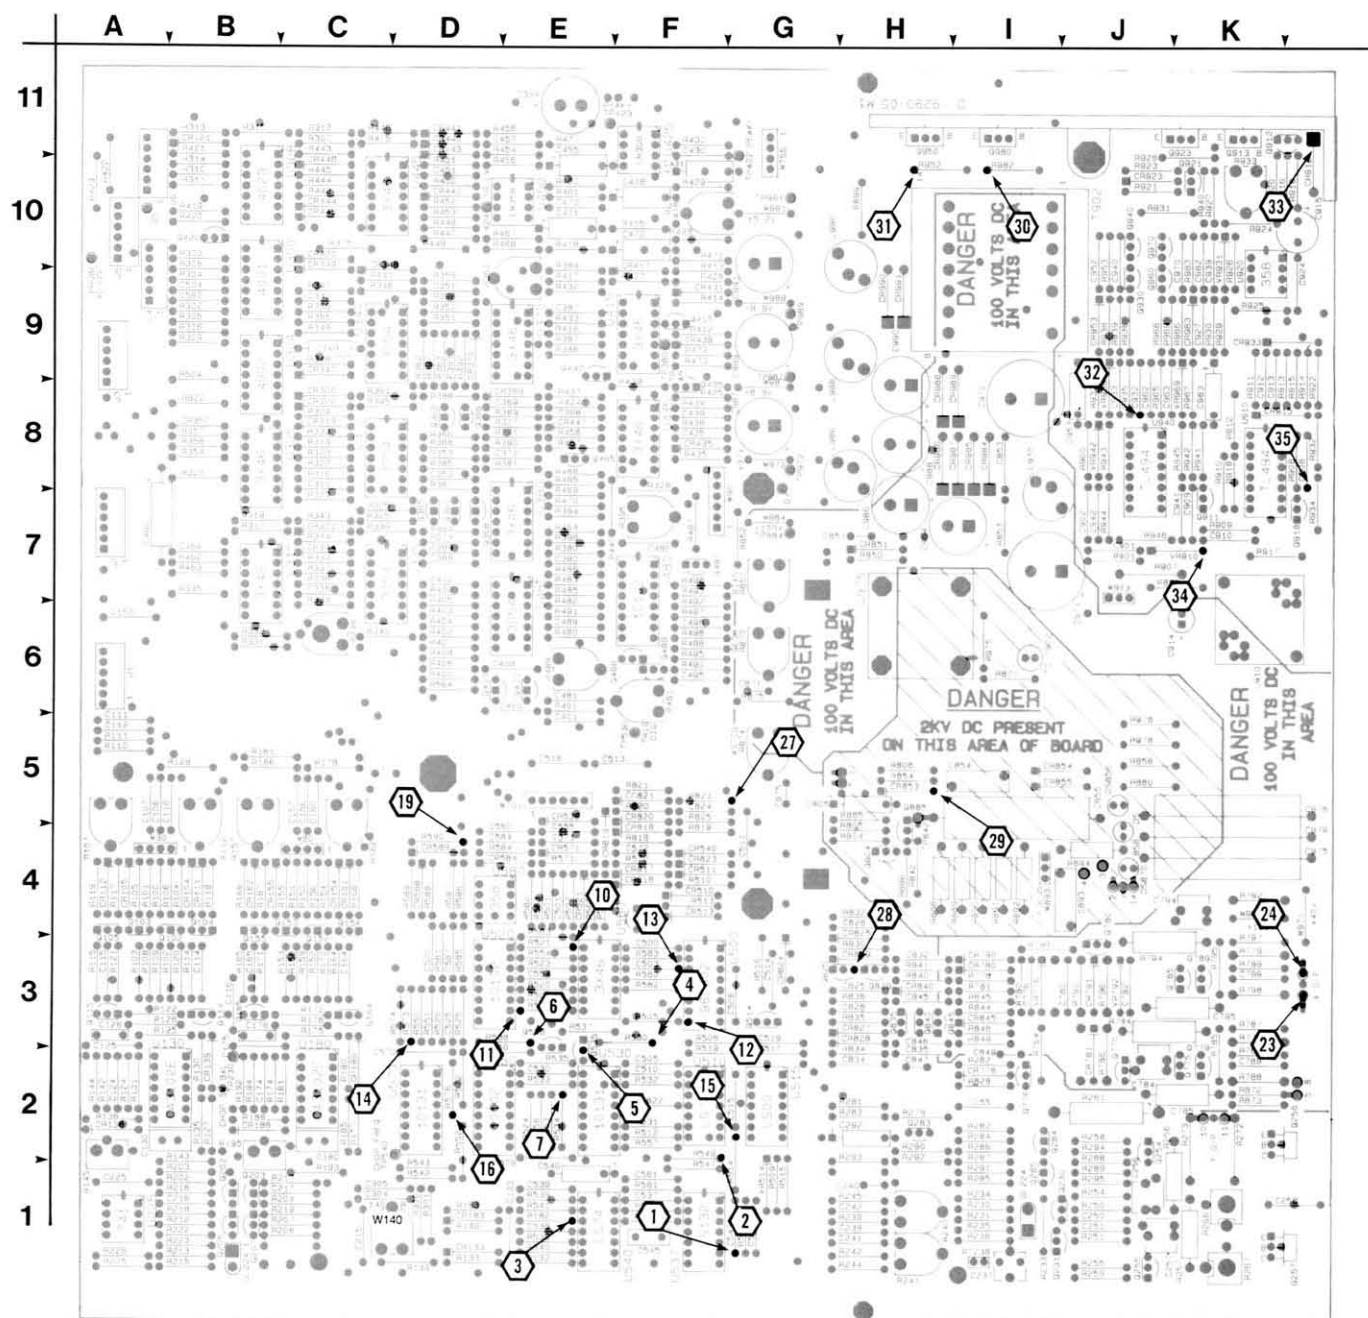

REV APR 1990

Figure 9-8. A1—Main board circuit view.

6299-11

2225 Service

VERTICAL PREAMP & OUTPUT AMPLIFIER DIAGRAM 2

| ASSEMBLY A1 | | | | | | | | | | | |
|-------------------|-------------------|-------------------|-------------------|-------------------|-------------------|-------------------|-------------------|-------------------|-------------------|-------------------|-------------------|
| CIRCUIT NUMBER | SCHEM LOCATION | BOARD LOCATION | CIRCUIT NUMBER | SCHEM LOCATION | BOARD LOCATION | CIRCUIT NUMBER | SCHEM LOCATION | BOARD LOCATION | CIRCUIT NUMBER | SCHEM LOCATION | BOARD LOCATION |
| C106 | 1C | 5A | J2 | 9E | 6A | R145 | 2H | 2A | R241 | 6P | 1H |
| C107 | 3C | 5A | | | | R150 | 9B | 4C | R242 | 5P | 1G |
| C110 | 2D | 5B | Q102 | 2B | 4B | R151 | 10B | 4C | R244 | 5P | 1G |
| C111* | 3E | 6A | Q103 | 3C | 4A | R152 | 9B | 4C | R245 | 5P | 2G |
| C112* | 2E | 6A | Q104 | 1D | 4B | R153 | 10B | 4C | R250 | 8P | 1J |
| C114 | 1E | 4B | Q105 | 3D | 4A | R154 | 9C | 4C | R251 | 4N | 1I |
| C115 | 3E | 4A | Q114 | 1F | 3B | R155 | 10C | 4C | R254 | 4P | 2I |
| C116 | 2E | 3B | Q115 | 3F | 3A | R156 | 9C | 4C | R255 | 4P | 1I |
| C124 | 3F | 3A | Q152 | 9B | 4C | R157 | 9C | 5B | R256 | 9P | 2J |
| C125 | 2F | 3A | Q153 | 10C | 4C | R158 | 9B | 4C | R257 | 3P | 1J |
| C126 | 3F | 3A | Q154 | 8D | 4C | R159 | 10B | 4C | R258 | 9P | 2C |
| C130 | 2F | 2A | Q155 | 10D | 4B | R160 | 9C | 5B | R259 | 4P | 1I |
| C133 | 6G | 1D | Q164 | 8F | 3C | R161 | 10C | 5B | R261 | 4P | 2I |
| C153* | 9E | 7A | Q165 | 10F | 3B | R162 | 10D | 5C | R272 | 9R | 2K |
| C156 | 8D | 5C | Q206 | 5L | 1B | R164 | 9F | 4C | R273 | 4R | 2J |
| C157 | 10C | 5C | Q207 | 6L | 1B | R165 | 10F | 4B | R279 | 3N | 2H |
| C160 | 9D | 5C | Q230 | 8P | 2I | R166* | 8D | 3C | R281* | 2N | 2G |
| C164 | 9E | 4C | Q231 | 5N | 1I | R167* | 9D | 4B | R282* | 2N | 2H |
| C165 | 10E | 4B | Q254 | 9P | 2J | R168 | 8D | 4C | R283 | 3M | 2G |
| C174 | 10F | 3B | Q255 | 4P | 1J | R169 | 11D | 4B | R284* | 3N | 2H |
| C175 | 10F | 3B | Q256 | 9P | 2K | R170 | 9F | 4C | R285 | 1R | 2H |
| C176 | 10F | 3B | Q257 | 4P | 1K | R171 | 10F | 4B | R286 | 1P | 2H |
| C180 | 9F | 2C | Q283 | 2N | 2H | R172 | 9F | 3C | R287 | 1P | 2H |
| C215 | 5K | 1C | Q284 | 2N | 2I | R174 | 9F | 3B | R288* | 3N | 2I |
| C216* | 4K | 2B | Q285 | 2P | 2I | R175 | 9F | 3C | R289* | 2P | 2I |
| C217* | 7K | 2C | | | | R176 | 9F | 3C | R290 | 2N | 2H |
| C220* | 9L | 1C | R100 | 2B | 4A | R177 | 9G | 2C | R291 | 1P | 2H |
| C225* | 7K | 2A | R101 | 3B | 4A | R178 | 9D | 5C | R292 | 1N | 2H |
| C237 | 7P | 1H | R102 | 2B | 4B | R180 | 8F | 3C | R293 | 1N | 2G |
| C239 | 6P | 1G | R103 | 3B | 4A | R181 | 10F | 3C | R294 | 3N | 2I |
| C240 | 6P | 2G | R104 | 2C | 4B | R182 | 8G | 1E | R295 | 2R | 2I |
| C241 | 6P | 1G | R105 | 3C | 4A | R183 | 6H | 2D | R538 | 5G | 1E |
| C242 | 5P | 2G | R106 | 2C | 4B | R185 | 10G | 2C | R539 | 7E | 2E |
| C250 | 8P | 1I | R107 | 2C | 5A | R186 | 8G | 2B | R540 | 5G | 1E |
| C251 | 4N | 1I | R108 | 2B | 4A | R189 | 6H | 1D | R541 | 6G | 2E |
| C255* | 4P | 2H | R109 | 3B | 4A | R192 | 7J | 3B | R544* | 6E | 1F |
| C256 | 9P | 2J | R110 | 2C | 5A | R193 | 8H | 2C | R545 | 6E | 2F |
| C257 | 3P | 1J | R111 | 2C | 5A | R194 | 9H | 3B | R547 | 5F | 2F |
| C258 | 7R | 2K | R112 | 3D | 5B | R195 | 9J | 2B | R548 | 5F | 1F |
| C281* | 2N | 2I | R114 | 1F | 4B | R202 | 5K | 2B | R549* | 5G | 2F |
| C292 | 1N | 2G | R115 | 3F | 4A | R203 | 6K | 2B | R561 | 5D | 2F |
| C536 | 6E | 1F | R116* | 1D | 3B | R204 | 5K | 2C | | | |
| C537 | 10L | 2F | R118 | 1D | 4B | R206 | 4K | 1C | RT236 | 7P | 1H |
| C538* | 5F | 1E | R119 | 3D | 4A | R207 | 7K | 1C | | | |
| C539* | 7F | 2E | R120 | 2F | 4B | R212 | 5L | 1B | TP230 | 6H | 2B |
| C540 | 10K | 2E | R121 | 3F | 4A | R213 | 6L | 1B | TP540 | 6G | 2C |
| C545 | 6E | 1F | R122 | 2F | 3A | R215 | 6L | 1B | | | |
| C547 | 5F | 1F | R124 | 2F | 3A | R216 | 4K | 2B | U130 | 1G | 3B |
| C561* | 5D | 2F | R125 | 2F | 3A | R217 | 6K | 2C | U180 | 10H | 3C |
| | | | R126 | 2F | 3A | R218 | 4L | 2B | U225 | 8K | 1A |
| CR111 | 2C | 4B | R127 | 2G | 2B | R219 | 6L | 2C | U225 | 9K | 1A |
| CR112 | 3C | 4A | R128 | 2D | 5B | R222 | 5L | 1B | U537A | 4F | 1F |
| CR133 | 1H | 1D | R130 | 1F | 3B | R223 | 6L | 1B | U537B | 6F | 1F |
| CR136 | 3G | 2A | R131 | 3F | 3A | R225* | 7K | 1A | U537C | 6E | 1F |
| CR139 | 3H | 3B | R132 | 6G | 1E | R226* | 8K | 1A | U537D | 5E | 1F |
| CR161 | 9C | 4C | R133 | 6G | 1D | R230 | 8N | 2H | U537 | 10K | 1F |
| CR162 | 10C | 4B | R135 | 1G | 2B | R231 | 4N | 1H | U540A | 6F | 1E |
| CR183 | 8H | 1D | R136 | 3G | 2A | R233 | 8P | 1I | U540B | 5D | 1E |
| CR186 | 8G | 2B | R139 | 5H | 1D | R234 | 7P | 2H | U540 | 10K | 1E |
| CR189 | 8H | 3C | R140* | 6H | 1C | R235 | 7P | 1H | | | |
| CR539 | 7D | 5E | R142 | 3H | 3A | R236* | 7P | 1H | W30 | 1B | 5A |
| | | | R143 | 3H | 2B | R239 | 6P | 1G | W80 | 8B | 5C |
| J1 | 2E | 6A | R144 | 2H | 3A | R240 | 6P | 1H | W140* | 6H | 1C |
| J2 | 2M | 6A | | | | | | | | | |

Partial A1 also shown on diagrams 3, 4, 5, 6 and 7.

*See Parts List for
serial number ranges.

VERTICAL PREAMP & OUTPUT AMPLIFIER DIAGRAM (CONT)

ASSEMBLY A3

[illegible]

Partial A3 also shown on diagrams 1, 3, 4, 6 and 7

CHASSIS MOUNTED PARTS

[illegible]

WAVEFORMS FOR DIAGRAM 2


2225 CONTROL SETTINGS


DC VOLTAGES

| | | | |
|------------------|-----|------|-----|
| AC | GND | DC | GND |
| VOLTS/DIV (both) | | 0.1V | |

AC WAVEFORMS

| | |
|---------------|------------|
| VERTICAL MODE | BOTH, CHOP |
| TRIGGER MODE | P-P AUTO |

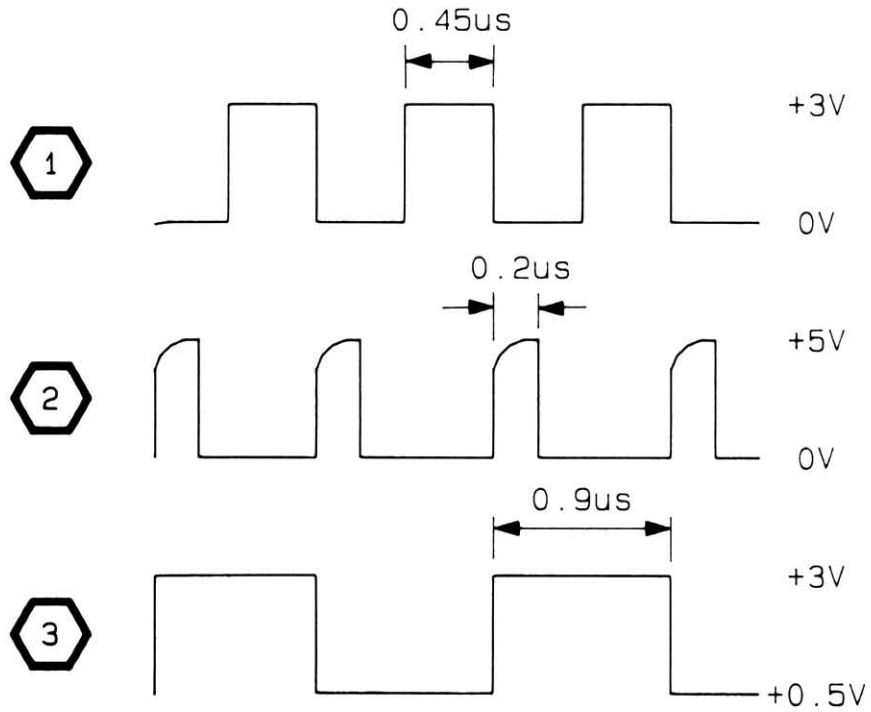


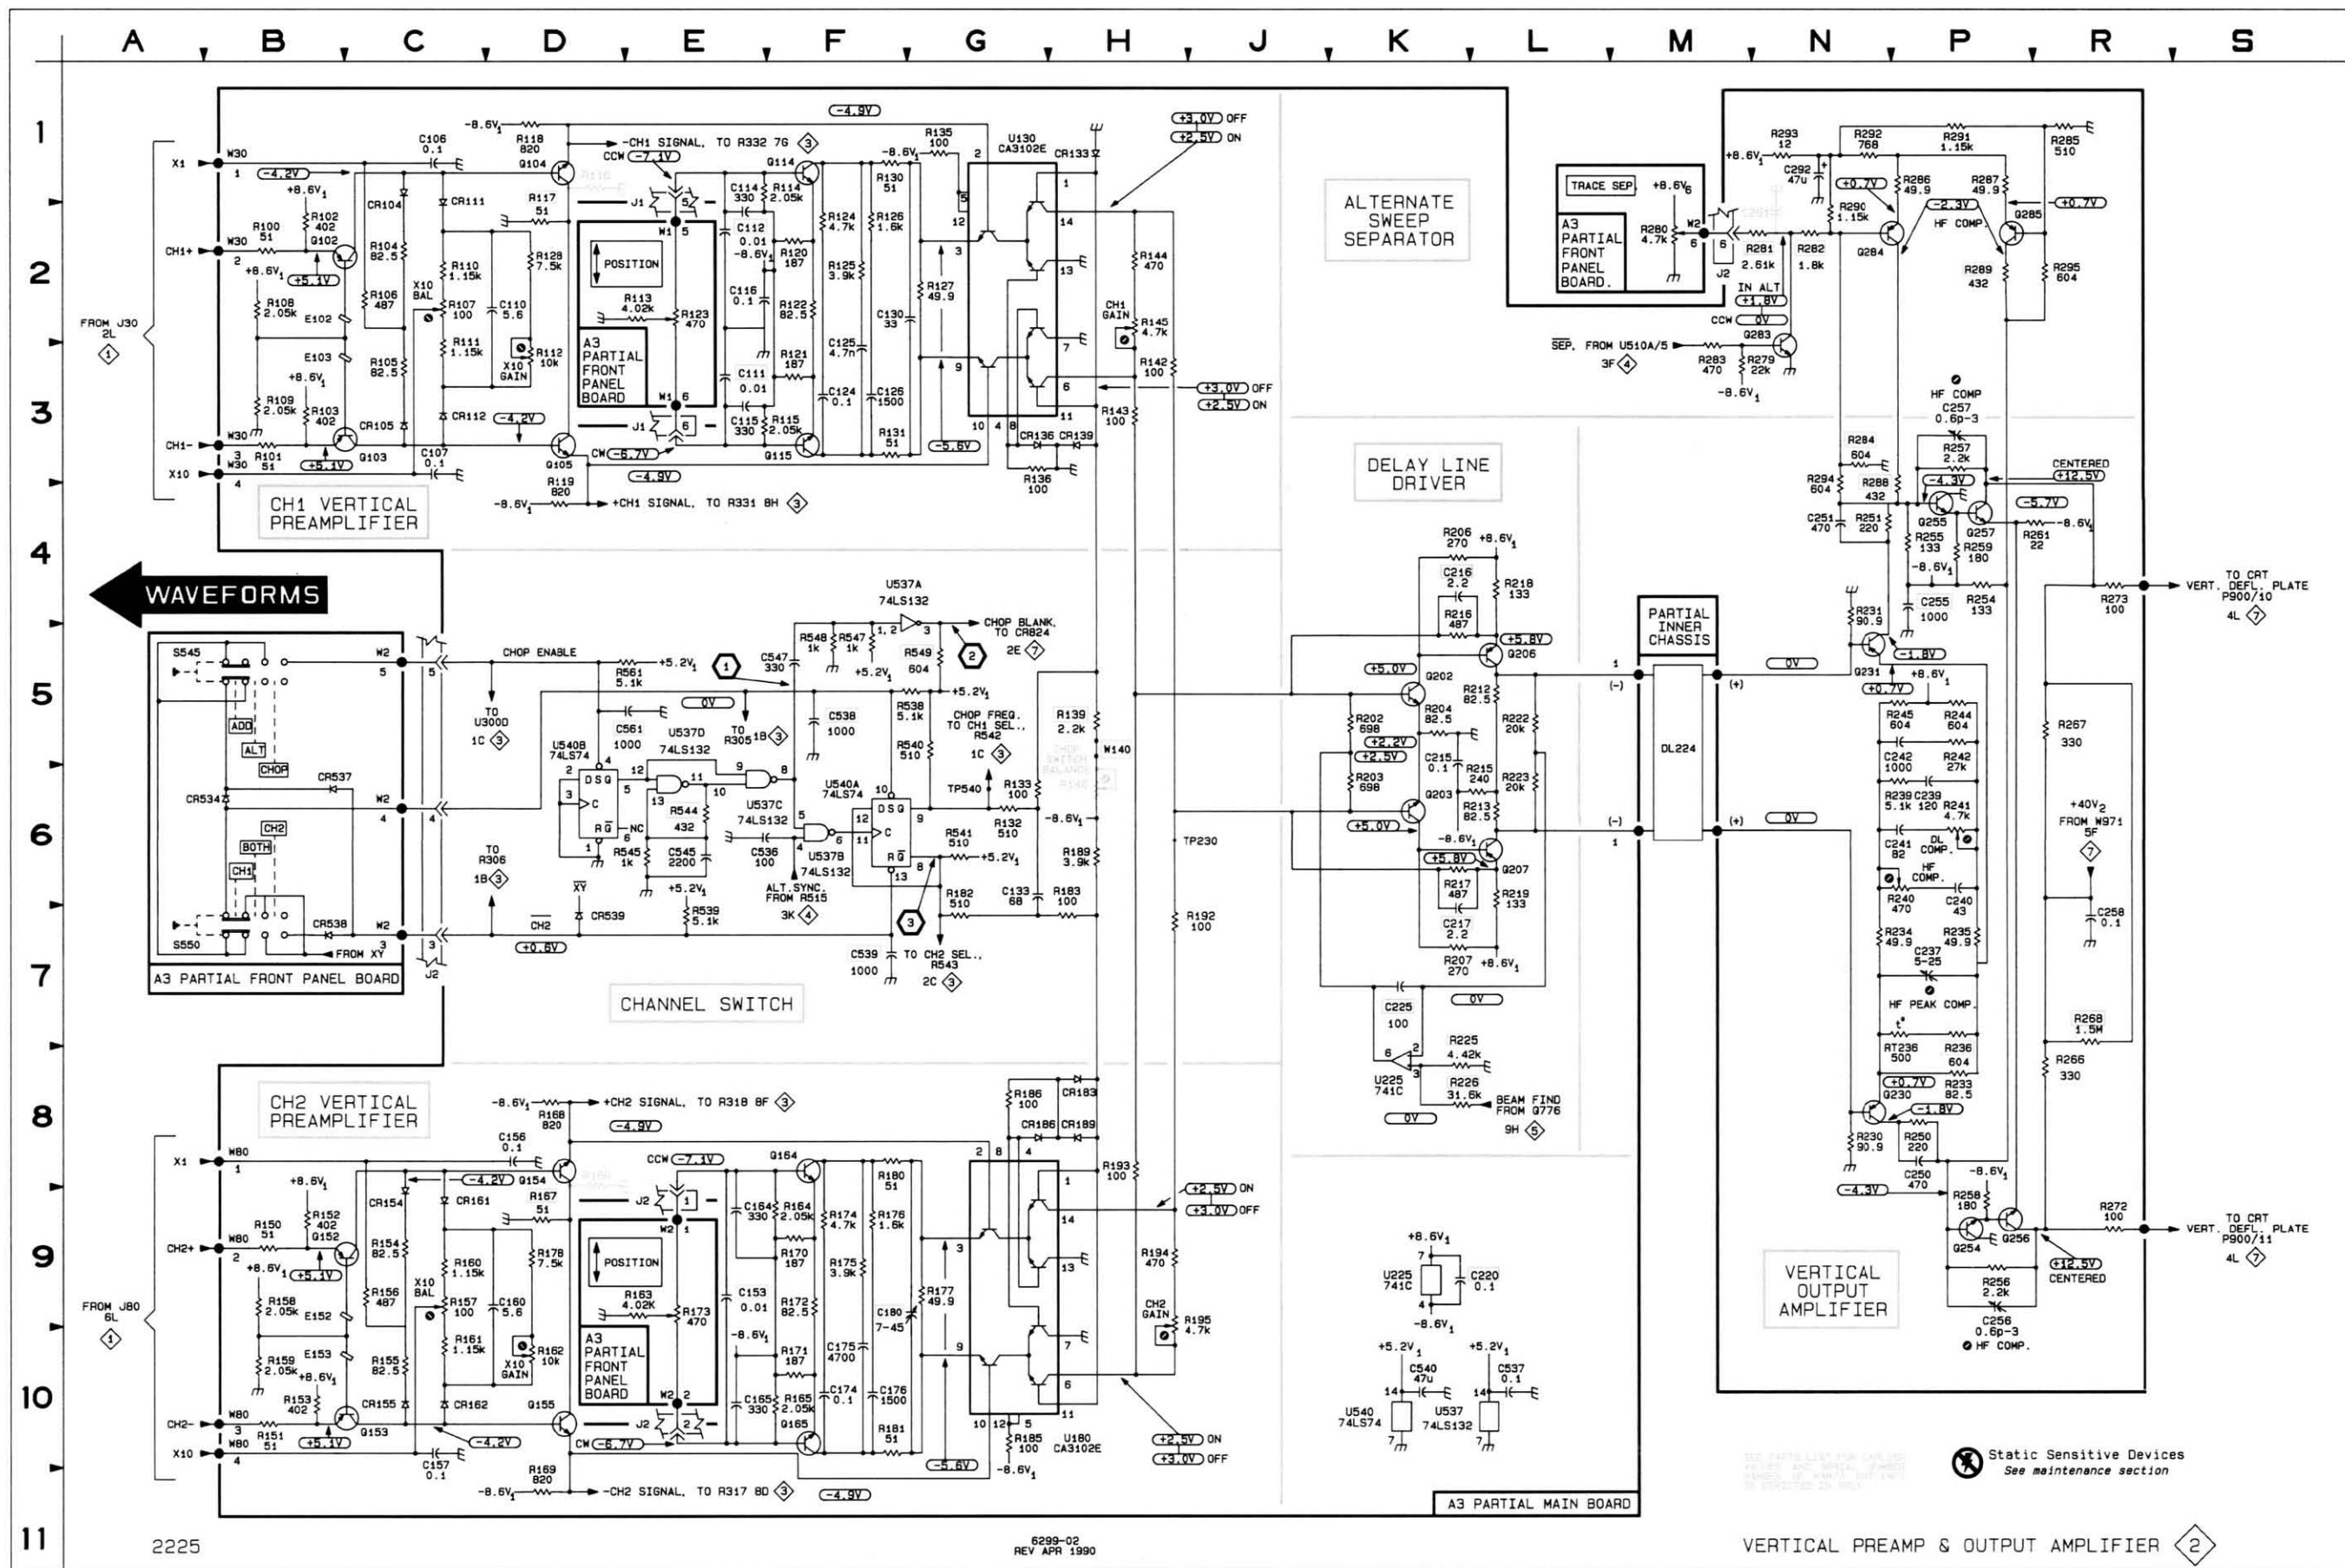

VERTICAL PREAMP & OUTPUT AMPLIFIER

2





TRIGGER DIAGRAM 3

LOOKUP TABLE FOR DIAGRAM 3

| ASSEMBLY A1 | | | | | | | | |
|-------------------|-------------------|-------------------|-------------------|-------------------|-------------------|-------------------|-------------------|-------------------|
| CIRCUIT NUMBER | SCHEM LOCATION | BOARD LOCATION | CIRCUIT NUMBER | SCHEM LOCATION | BOARD LOCATION | CIRCUIT NUMBER | SCHEM LOCATION | BOARD LOCATION |
| C304 | 1C | 2C | Q368 | 4G | 7D | R366 | 3G | 8D |
| C305 | 3C | 2C | Q400 | 1H | 6D | R367 | 3G | 8D |
| C310 | 8E | 8C | Q401 | 2H | 6E | R368 | 3G | 8D |
| C335 | 8H | 7C | Q415 | 3L | 9F | R369 | 5F | 8D |
| C340 | 8B | 9C | Q420* | 10K | 10B | R374 | 4G | 7D |
| C349 | 8A | 9C | Q435 | 5K | 8F | R375 | 10L | 10C |
| C351 | 8C | 9C | Q440 | 10N | 9E | R380 | 5J | 7E |
| C353* | 4G | 8D | Q465 | 6P | 8E | R381* | 6G | 8D |
| C369 | 5F | 8D | Q487 | 1M | 7F | R384 | 6G | 9E |
| C372 | 5G | 8D | Q488 | 2M | 6E | R385 | 6H | 8D |
| C380 | 6H | 7E | Q489 | 2M | 6F | R386 | 6F | 9E |
| C384 | 6F | 3I | | | | R387 | 6G | 9E |
| C387 | 6G | 9E | R300 | 1E | 2D | R388 | 4G | 8D |
| C389 | 4H | 7D | R301 | 3D | 2D | R389 | 4G | 7D |
| C396* | 5H | 7E | R302 | 1B | 9B | R390* | 5H | 8D |
| C398 | 7K | 8E | R303 | 2B | 10B | R391 | 5G | 8D |
| C400* | 1H | 6D | R304 | 2C | 9B | R392 | 6H | 9D |
| C401 | 1G | 6E | R305 | 2B | 9B | R393 | 6H | 9D |
| C408 | 2G | 6D | R306 | 1B | 9B | R394 | 6H | 7E |
| C418 | 4L | 10E | R307 | 3B | 11C | R395 | 5H | 7F |
| C430 | 5M | 10F | R308 | 2B | 9B | R396 | 5H | 7E |
| C431 | 5L | 10E | R309 | 2C | 9B | R397 | 7H | 9D |
| C435 | 5K | 8F | R310 | 3B | 10B | R398 | 7J | 9D |
| C439 | 6K | 8F | R311 | 4B | 10B | R400 | 1H | 8D |
| C451 | 8M | 10D | R312 | 4B | 11C | R401 | 1H | 6E |
| C452 | 8N | 11D | R313 | 4B | 11B | R402 | 3H | 6D |
| C455* | 8P | 10E | R314 | 4B | 10B | R403 | 3J | 7D |
| C462 | 6S | 6A | R315 | 4C | 11B | R404 | 3H | 6D |
| C464 | 6R | 7B | R316 | 9E | 8C | R405 | 3H | 7D |
| C471 | 7R | 10E | R317 | 9D | 7B | R406 | 1G | 6D |
| C472 | 7R | 10E | R318 | 9F | 7B | R407 | 1G | 6D |
| C473 | 7R | 10E | R319 | 9E | 8C | R408 | 2G | 6D |
| C480 | 11G | 7F | R320 | 9F | 7C | R409 | 2H | 7D |
| C481 | 1J | 6E | R321 | 9E | 8B | R410 | 2H | 7D |
| C489 | 2M | 6E | R322 | 9E | 8C | R412 | 3L | 9F |
| C495 | 2N | 6F | R323 | 9F | 8C | R413 | 4K | 9F |
| C496 | 2N | 6F | R325* | 7E | 7C | R414 | 3K | 9F |
| C562 | 1B | 2F | R326* | 7F | 7C | R415 | 4L | 10E |
| | | | R327 | 7H | 8D | R416* | 4M | 9E |
| CR300 | 2E | 8C | R328 | 7J | 8F | R417 | 4J | 9E |
| CR301 | 2E | 7C | R329 | 8F | 8C | R418 | 4L | 10E |
| CR302 | 2E | 8C | R330 | 8F | 8C | R419* | 10K | 10B |
| CR319 | 8E | 8C | R331 | 8G | 6B | R420* | 11J | 10B |
| CR344 | 8J | 7C | R332 | 9J | 6B | R421* | 10K | 10B |
| CR347 | 7C | 9C | R333 | 9H | 7C | R422* | 5N | 10A |
| CR348 | 7C | 9C | R334 | 9J | 7C | R423* | 3N | 10A |
| CR349 | 7D | 9C | R335 | 9J | 7B | R424 | 6K | 8E |
| CR357 | 9B | 8B | R336 | 9H | 7C | R425 | 5K | 8F |
| CR369 | 5F | 8D | R337 | 9J | 7C | R427 | 5M | 9E |
| CR370 | 5G | 9D | R338 | 8H | 6C | R428 | 5L | 9F |
| CR417 | 4K | 9E | R339* | 7H | 7C | R429* | 5M | 10F |
| CR420* | 10L | 10C | R340* | 7J | 6C | R430 | 5M | 10F |
| CR421* | 10K | 11B | R343 | 8J | 7C | R432 | 5M | 9E |
| CR431 | 5L | 9F | R344 | 7J | 7C | R433 | 6M | 9E |
| CR432* | 10L | 11B | R345* | 7B | 8C | R434* | 5J | 8F |
| CR435 | 5K | 8F | R346* | 7C | 9C | R435* | 5K | 8F |
| CR438 | 5L | 9F | R347 | 8C | 9C | R436 | 5J | 10F |
| CR440 | 8M | 11D | R348* | 8B | 9C | R437* | 6K | 8E |
| CR441 | 8M | 11D | R349 | 8B | 9C | R438 | 5L | 10F |
| CR442 | 9M | 10D | R351 | 8C | 9D | R439 | 5K | 8E |
| CR443 | 8M | 10D | R352 | 8C | 9D | R440 | 10N | 7E |
| CR444 | 8K | 10C | R353* | 4G | 8D | R441 | 10N | 9C |
| CR445 | 8L | 10C | R354* | 9B | 8B | R442 | 7L | 10C |
| CR446 | 7L | 10C | R355 | 8B | 10C | R443 | 7L | 10C |
| CR447 | 6N | 8E | R356 | 8C | 9C | R444 | 7L | 10C |
| | | | R357* | 9B | 8B | R445 | 8L | 10C |
| J2 | 1B | 6A | R358 | 9C | 8B | R446 | 8L | 11C |
| J3 | 4R | 9A | R359 | 8C | 9D | R447 | 9M | 10D |
| | | | R360 | 8D | 9D | R448 | 9M | 10D |
| Q363 | 4F | 8D | R361* | 4E | 8C | R449 | 9M | 10D |
| Q365 | 4F | 7D | R362* | 5E | 9D | R450 | 8N | 10D |
| Q366 | 4F | 8H | R363 | 4F | 9D | R451 | 8N | 10D |
| Q367 | 4G | 7D | R364 | 4F | 7D | R452 | 9N | 10D |

*See Parts List for
serial number ranges.

TRIGGER DIAGRAM (CONT)


| ASSEMBLY A1 | | | | | | | | |
|---|----------------|----------------|----------------|----------------|----------------|----------------|----------------|----------------|
| CIRCUIT NUMBER | SCHEM LOCATION | BOARD LOCATION | CIRCUIT NUMBER | SCHEM LOCATION | BOARD LOCATION | CIRCUIT NUMBER | SCHEM LOCATION | BOARD LOCATION |
| R453 | 9M | 10D | TP380 | 4J | 9F | U340 | 10D | 9C |
| R454 | 8N | 11D | TP422 | 5N | 10G | U370B | 6G | 9D |
| R455* | 8P | 10D | TP423 | 3N | 9F | U370C | 5G | 9D |
| R456 | 8N | 11D | | | | U370D | 6F | 9D |
| R457* | 7P | 8E | U300A | 3D | 9B | U370E | 10M | 9D |
| R458* | 7P | 8E | U300B | 2D | 9B | U380A | 5G | 7D |
| R459* | 7P | | U300C | 2C | 9B | U380B | 6H | 7D |
| R460 | 7P | 10E | U300D | 1C | 9B | U380C | 5H | 7D |
| R461 | 7R | 10E | U300 | 10E | 9B | U380D | 5G | 7D |
| R462 | 6S | 7B | U304A | 2C | 9B | U380E | 6G | 7D |
| R463 | 6S | 7B | U304B | 3C | 9B | U415A | 4K | 9E |
| R464 | 6R | 7E | U304 | 10E | 9B | U415B | 3L | 9E |
| R465 | 6R | 8E | U308A | 4C | 10B | U415C | 7S | 9E |
| R466 | 6P | 8E | U308B | 3B | 10B | U415D | 4M | 9E |
| R467 | 6R | 10D | U308C | 4B | 10B | U415E | 5M | 9E |
| R468 | 6R | 10D | U308 | 10F | 10B | U425A | 4M | 10F |
| R469 | 6P | 8E | U310A | 8D | 8C | U425B | 3L | 10F |
| R470 | 6P | 7E | U310B | 8D | 8C | U425 | 10G | 10F |
| R471 | 7R | 10F | U310C | 8F | 8C | U435A | 5J | 8E |
| R472 | 7S | 9F | U310D | 8F | 8C | U435B | 5K | 8E |
| R473 | 7S | 9F | U310E | 8F | 8C | U435C | 7N | 8E |
| R475 | 7N | 11C | U310F | 8E | 8C | U435D | 7N | 8E |
| R477 | 9N | 10E | U310 | 10D | 8C | U435E | 5L | 8E |
| R478 | 9P | 10F | U315B | 9H | 7B | U445A | 8M | 10C |
| R480 | 2J | 6E | U315C | 9J | 7B | U445B | 8M | 10C |
| R481 | 1J | 6F | U315D | 9H | 7B | U445C | 9M | 10C |
| R482 | 1J | 7E | U315E | 6S | 7B | U445D | 9L | 10C |
| R483* | 2L | 7E | U325B | 9D | 8B | U445E | 7L | 10C |
| R485 | 1L | 7E | U325C | 9F | 8B | U450A | 7P | 10D |
| R486 | 2M | 7E | U325D | 9C | 8B | U450B | 8N | 10D |
| R487 | 1M | 7F | U325D | 9F | 8B | U450 | 10H | 10D |
| R488 | 1M | 6F | U335A | 8H | 7C | U460A | 2G | 7D |
| R489 | 2L | 6E | U335B | 8H | 7C | U460B | 3G | 7D |
| R490 | 2N | 6F | U335C | 8J | 7C | U460C | 2H | 7D |
| R491 | 2M | 7E | U335D | 8J | 7C | U460D | 2J | 7D |
| R492 | 1N | 7F | U335E | 8J | 7C | U460E | 3J | 7D |
| R493 | 2N | 7F | U335F | 8H | 7C | U460F | 2H | 7D |
| R495 | 2N | 6F | U335 | 10D | 7C | U460 | 10D | 7D |
| R496 | 2P | 6F | U340A | 7B | 9C | U480A | 2N | 7F |
| R497 | 2P | 7F | U340B | 8C | 9C | U480B | 2P | 7F |
| R498* | 2P | 7F | U340C | 8C | 9C | U480C | 2J | 7F |
| R542 | 1D | 2D | U340D | 7C | 9C | U480D | 1M | 7F |
| R543 | 3D | 2D | U340F | 7B | 9C | U480 | 10F | 7F |
| Partial A1 also shown on diagrams 2, 4, 5, 6 and 7. | | | | | | | | |
| ASSEMBLY A3 | | | | | | | | |
| R426 | 4S | 1F | W3 | 4S | 4D | | | |
| Partial A3 also shown on diagrams 1, 2, 4, 6 and 7. | | | | | | | | |

*See Parts List for
serial number ranges.

TRIGGER

3







WAVEFORMS FOR DIAGRAM 4


2225 CONTROL SETTINGS

DC VOLTAGES

INTENSITY midrange
HORIZONTAL MODE X1
SEC/DIV 0.1ms
TRIGGER MODE P-P AUTO

AC WAVEFORMS


VERTICAL MODE CH2 OR Y
CH2 VOLTS/DIV 1V
CH2 AC GND DC
HORIZONTAL MODE X1
SEC/DIV 0.1ms
MAG X5
TRIGGER LEVEL midrange
TRIGGER MODE P-P AUTO
SOURCE CH2
TRIGGER COUPLING AC
CH2 input signal 1 kHz sine wave
4V P-P

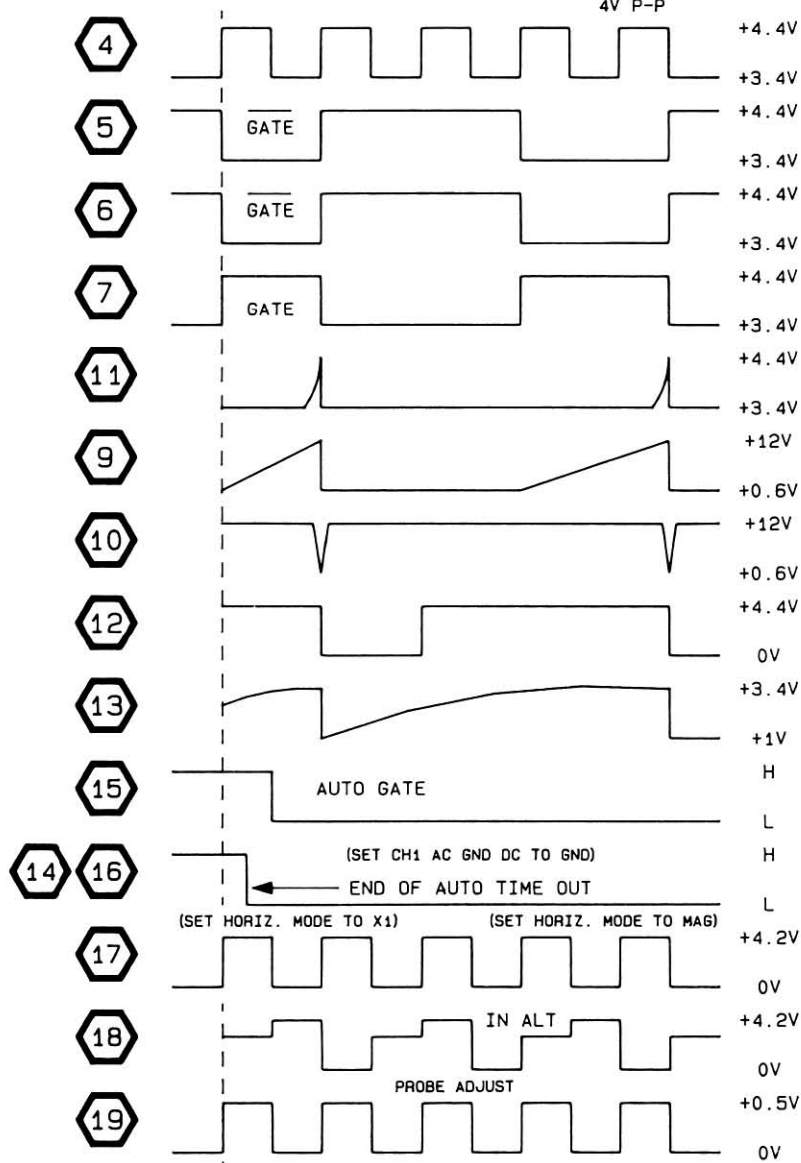


SWEEP LOGIC DIAGRAM 4

| ASSEMBLY A1 | | | | | | | | | | | |
|---|-------------------|-------------------|-------------------|-------------------|-------------------|-------------------|-------------------|-------------------|-------------------|-------------------|-------------------|
| CIRCUIT NUMBER | SCHEM LOCATION | BOARD LOCATION | CIRCUIT NUMBER | SCHEM LOCATION | BOARD LOCATION | CIRCUIT NUMBER | SCHEM LOCATION | BOARD LOCATION | CIRCUIT NUMBER | SCHEM LOCATION | BOARD LOCATION |
| C500 | 1J | 4F | J1-4 | 1C | 6A | R531 | 5F | 2F | TP530 | 7I | 5F |
| C501 | 7B | 4E | J4-1 | 2C | 9A | R532 | 6H | 3F | | | |
| C503 | 7E | 4F | J4-2 | 2C | 9A | R533 | 6J | 3E | U500A | 5E | 3F |
| C504 | 4C | 10B | J4-3 | 4M | 9A | R534 | 6K | 2E | U500B | 8E | 3F |
| C505 | 3D | 3F | J4-4 | 4C | 9A | R535 | 6K | 3E | U510A | 3F | 2F |
| C506 | 5E | 3F | J4-5 | 7M | 9A | R536 | 6K | 3D | U510B | 5I | 2F |
| C510 | 1J | 3F | J5-3 | 3C | 10A | R537 | 5K | 3E | U515A | 4L | 2G |
| C511 | 2G | 5F | J5-4 | 3C | 10A | R550 | 9I | 3D | U515B | 3J | 2G |
| C513 | 3D | 5E | J5-6 | 8M | 10A | R551 | 9H | 3D | U515C | 3I | 2G |
| C514 | 3I | 4G | | | | R552 | 8I | 2D | U515D | 3H | 2G |
| C515 | 1K | 2F | Q514 | 4I | 3G | R553 | 8I | 2E | U520A | 6F | 3D |
| C516* | 3I | 5E | Q535 | 5J | 3E | R554 | 8K | 4E | U520B | 6G | 3D |
| C517 | 4I | 3G | Q536 | 5K | 3E | R555 | 1E | 4E | U520C | 7H | 3D |
| C519 | 4E | 3G | | | | R556 | 7H | 2E | U520D | 9E | 3D |
| C520 | 1L | 4D | R500* | 5C | 5E | R557 | 6F | 2F | U530A | 5G | 2E |
| C525 | 9D | 3D | R501 | 7C | 4E | R560 | 8K | 3F | U530B | 6I | 2E |
| C530 | 1L | 3E | R502 | 7B | 4E | R562 | 8L | 3F | U550A | 7J | 2D |
| C550 | 1M | 3D | R503 | 8B | 4E | R563 | 7L | 4F | U550B | 7I | 2D |
| C554* | 1D | 3E | R504 | 5C | 9B | R564 | 1D | 6D | U550C | 6H | 2D |
| C555 | 2E | 5E | R505 | 4D | 3F | R565 | 2E | 5E | U550D | 8I | 2D |
| C560 | 7L | 5D | R506 | 5E | 3F | R570 | 5L | 4E | U560A | 7K | 3E |
| C570 | 1N | 3D | R508 | 8F | 3E | R571 | 6L | 4E | U560B | 7K | 3E |
| C571 | 6L | 5E | R509* | 4H | 2G | R572 | 9F | 3D | U560D | 1E | 3E |
| C572 | 6L | 5E | R510 | 3G | 4F | R573 | 8G | 3D | U560E | 7C | 3E |
| C584 | 8B | 5D | R512 | 5I | 2F | R574 | 9G | 3D | U570A | 8G | 2D |
| C587 | 4J | 4D | R513 | 2D | 4F | R576 | 9H | 3D | U570B | 8H | 2D |
| | | | R514* | 4G | 2F | R579 | 7H | 2E | U580A | 4K | 4D |
| CR510 | 2G | 4F | R515 | 3K | 2G | R581 | 9C | 4D | U580B | 9B | 4D |
| CR511 | 2G | 4F | R516 | 4I | 4G | R582 | 9B | 4E | | | |
| CR513 | 2D | 4F | R519 | 3E | 3F | R583* | 9B | 4E | | | |
| CR521 | 7D | 4E | R520 | 6C | 3E | R584 | 8C | 6D | VR514 | 4H | 2G |
| CR530* | 4D | 3F | R521 | 7C | 4E | R585 | 4J | 4D | | | |
| CR540 | 2E | 5F | R522 | 7F | 3E | R586 | 4K | 4D | W590 | 3M | 10A |
| CR571 | 6L | 5E | R523 | 7G | 4E | R587 | 4K | 4D | W701-2 | 5C | 5E |
| CR584 | 9C | 4D | R524 | 8H | 2E | R588 | 4L | 4D | W701-4 | 6C | 5E |
| CR588 | 4L | 4D | R525 | 9D | 3D | R589 | 4L | 4D | W701-5 | 2F | 5E |
| CR589 | 4L | 5D | R526 | 9C | 3D | R590 | 4L | 5D | W701-6 | 5M | 5E |
| | | | R530 | 7I | 3E | | | | | | |
| Partial A1 also shown on diagrams 2, 3, 5, 6 and 7. | | | | | | | | | | | |
| ASSEMBLY A2 | | | | | | | | | | | |
| CIRCUIT NUMBER | SCHEM LOCATION | BOARD LOCATION | CIRCUIT NUMBER | SCHEM LOCATION | BOARD LOCATION | CIRCUIT NUMBER | SCHEM LOCATION | BOARD LOCATION | CIRCUIT NUMBER | SCHEM LOCATION | BOARD LOCATION |
| J701-2 | 5B | 2A | J701-4 | 5B | 2A | J701-5 | 1F | 2A | J701-6 | 5M | 2A |
| Partial A2 also shown on diagrams 1, 5 and 6. | | | | | | | | | | | |
| ASSEMBLY A3 | | | | | | | | | | | |
| CIRCUIT NUMBER | SCHEM LOCATION | BOARD LOCATION | CIRCUIT NUMBER | SCHEM LOCATION | BOARD LOCATION | CIRCUIT NUMBER | SCHEM LOCATION | BOARD LOCATION | CIRCUIT NUMBER | SCHEM LOCATION | BOARD LOCATION |
| DS560 | 7N | 2F | S505 | 3B | 2F | W4-2 | 2C | 4E | W5-4 | 3C | 4F |
| R511 | 4B | 3G | S601 | 1B | 2E | W4-3 | 5M | 4E | W5-6 | 8M | 4F |
| R517 | 4A | 2F | W1-4 | 1C | 4A | W4-4 | 4C | 4E | | | |
| R518 | 4A | 2F | W4-1 | 2C | 4E | W4-5 | 7M | 4E | | | |
| | | | | | | W5-3 | 3C | 4F | | | |
| Partial A3 also shown on diagrams 1, 2, 3, 6 and 7. | | | | | | | | | | | |
| CHASSIS MOUNTED PARTS | | | | | | | | | | | |
| CIRCUIT NUMBER | SCHEM LOCATION | BOARD LOCATION | CIRCUIT NUMBER | SCHEM LOCATION | BOARD LOCATION | CIRCUIT NUMBER | SCHEM LOCATION | BOARD LOCATION | CIRCUIT NUMBER | SCHEM LOCATION | BOARD LOCATION |
| J590 | 3M | CHASSIS | | | | | | | | | |

*See Parts List for serial number ranges.


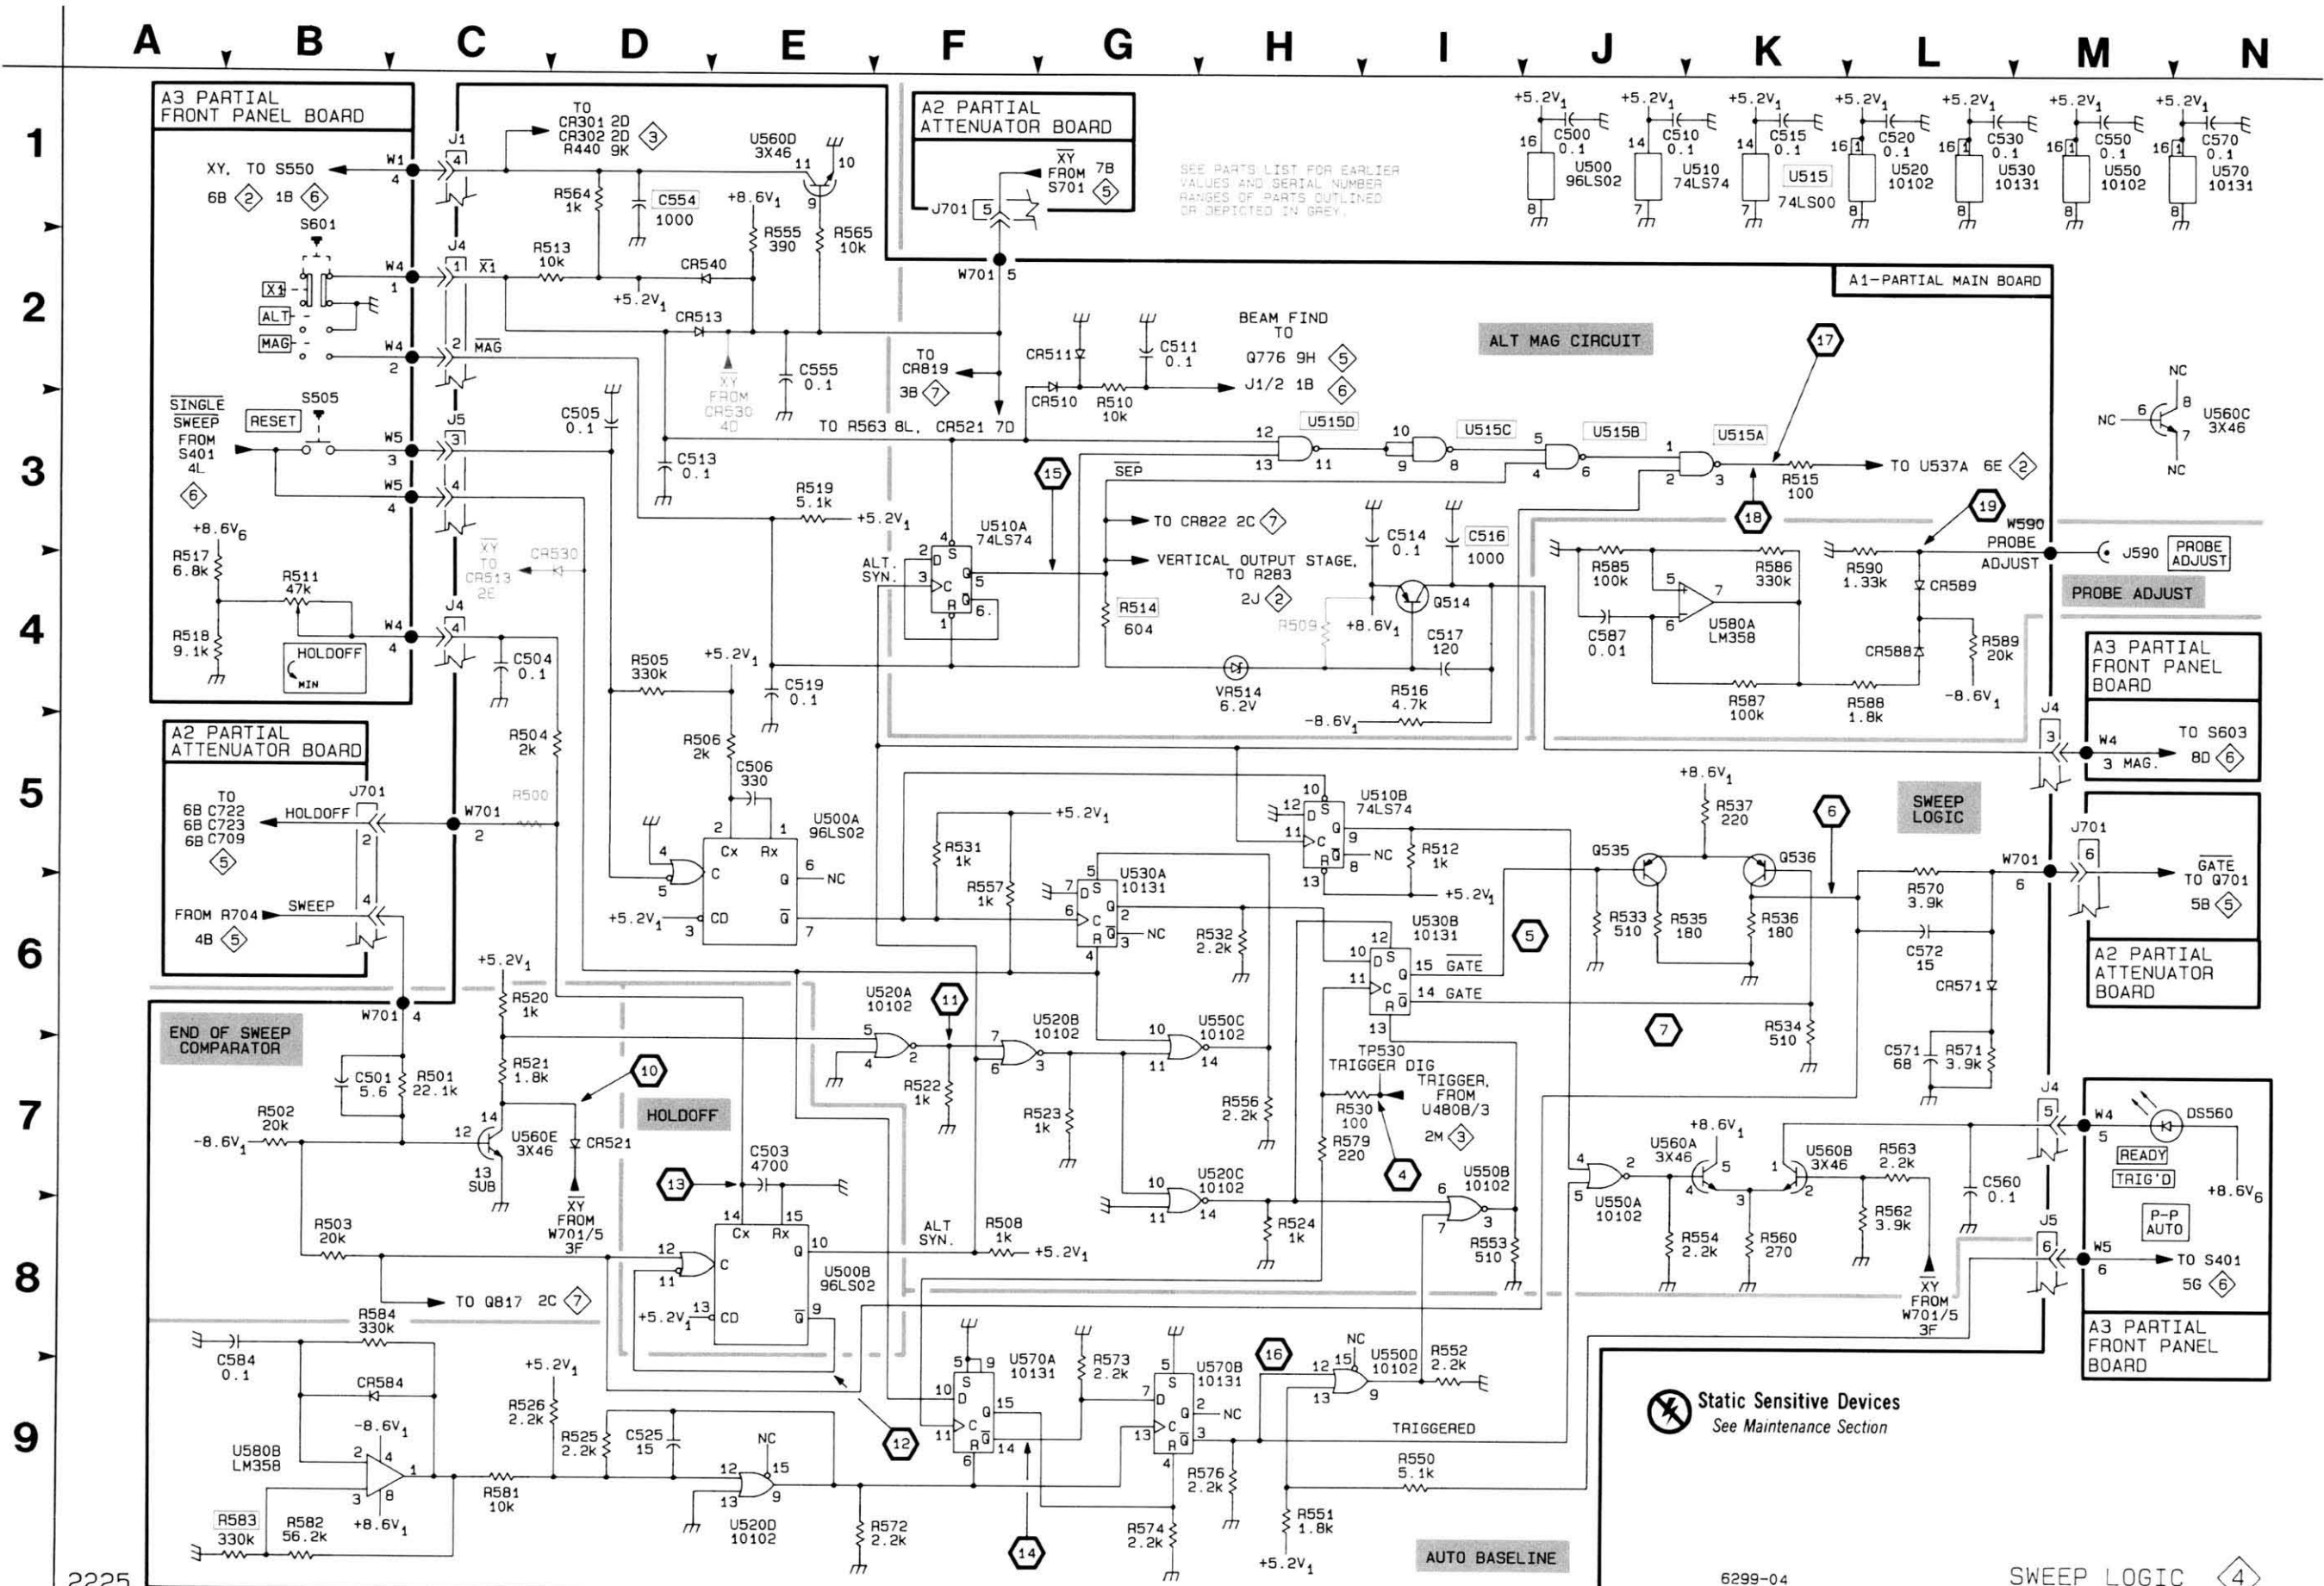


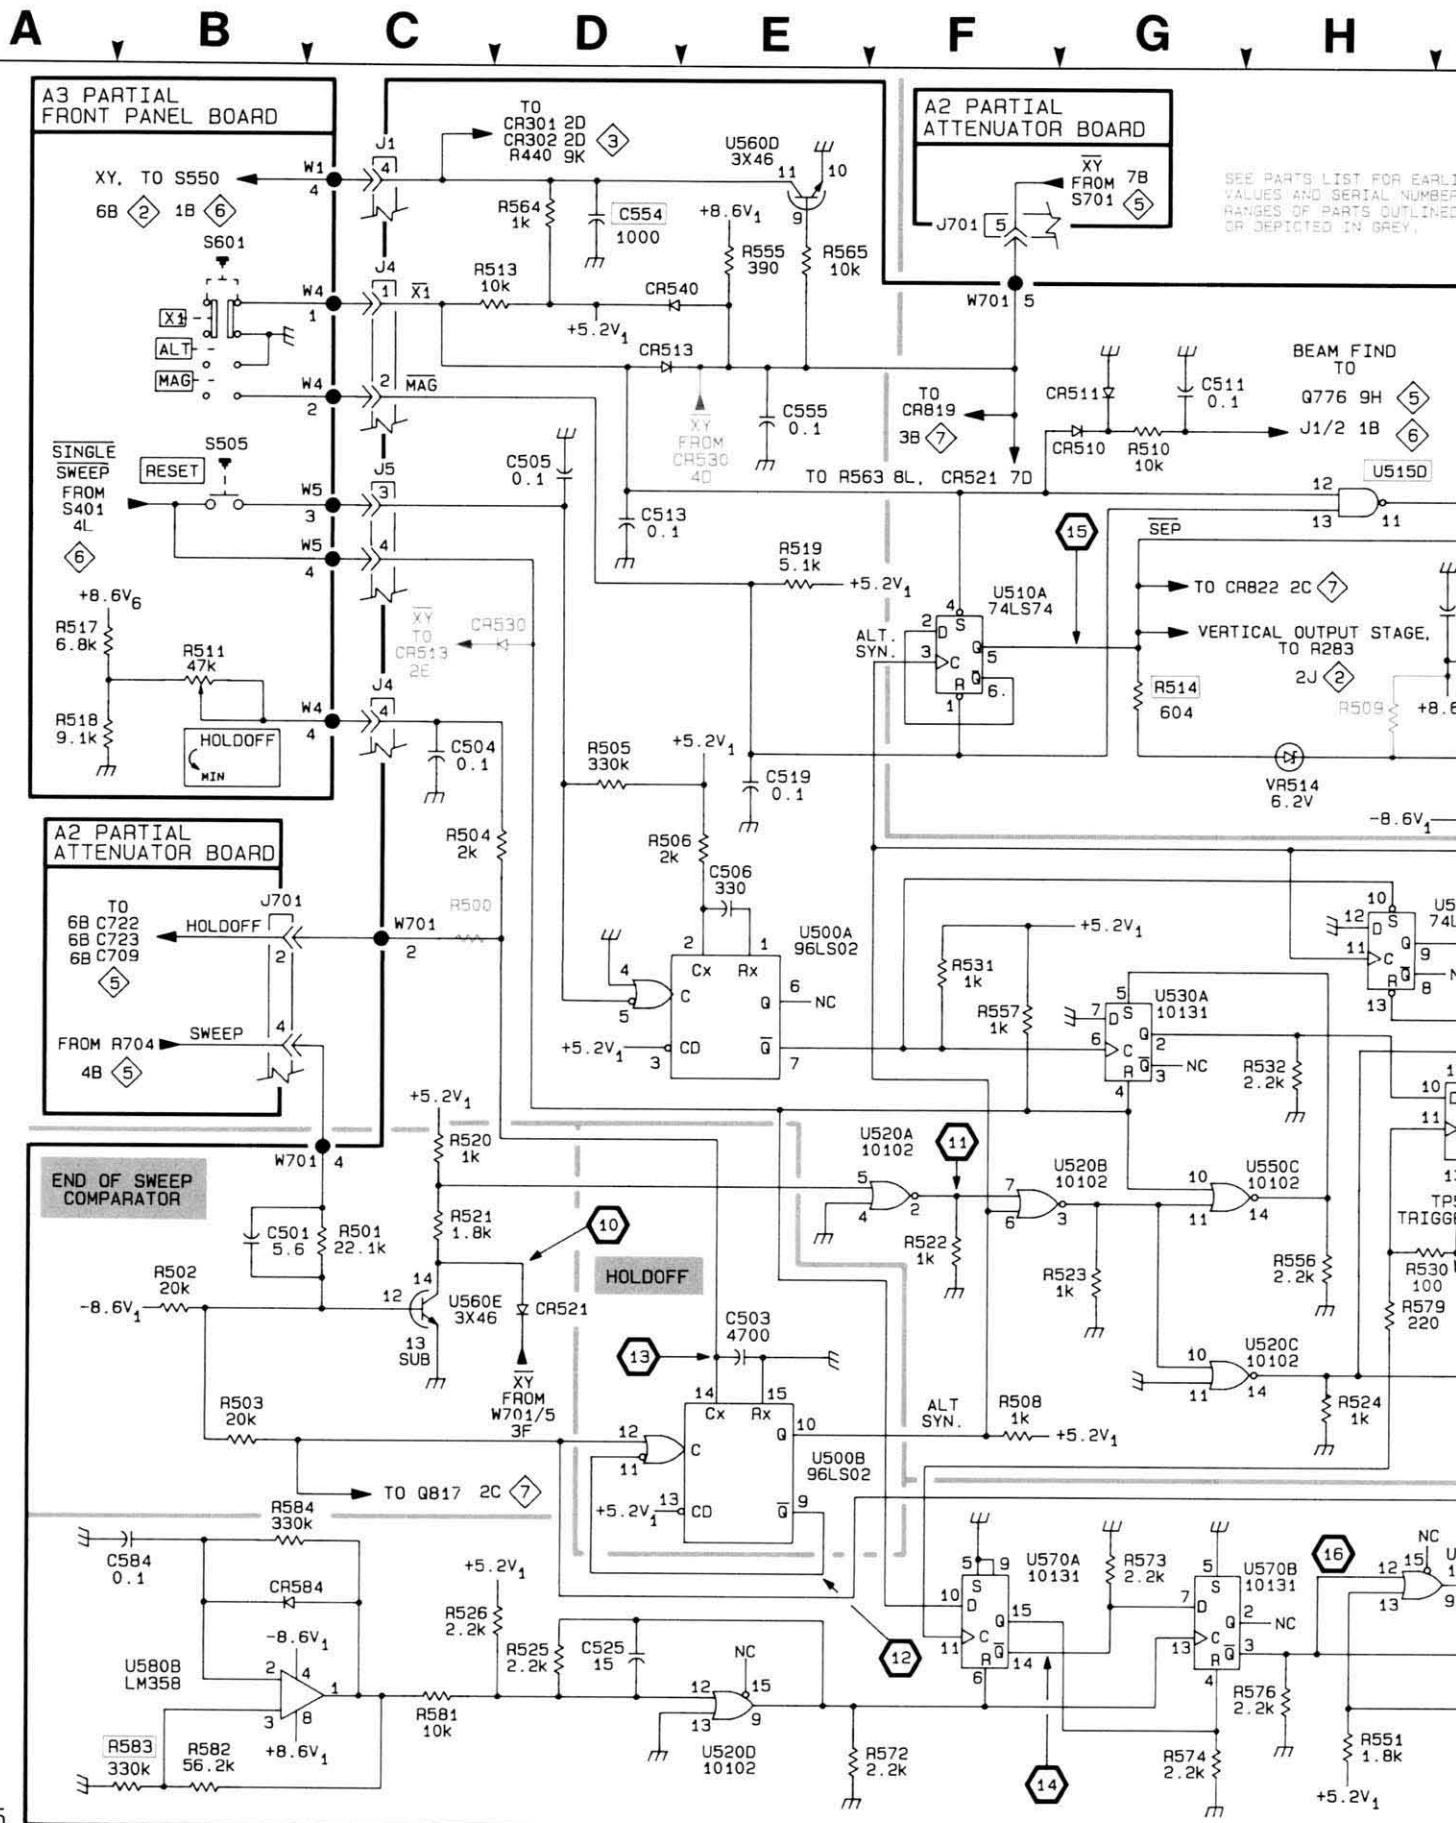

G H I J K L M N

BOARD
KY 7B
FROM 701 5

SEE PARTS LIST FOR EARLIER
VALUES AND SERIAL NUMBER
RANGES OF PARTS OUTLINED
OR DEPICTED IN GREY.

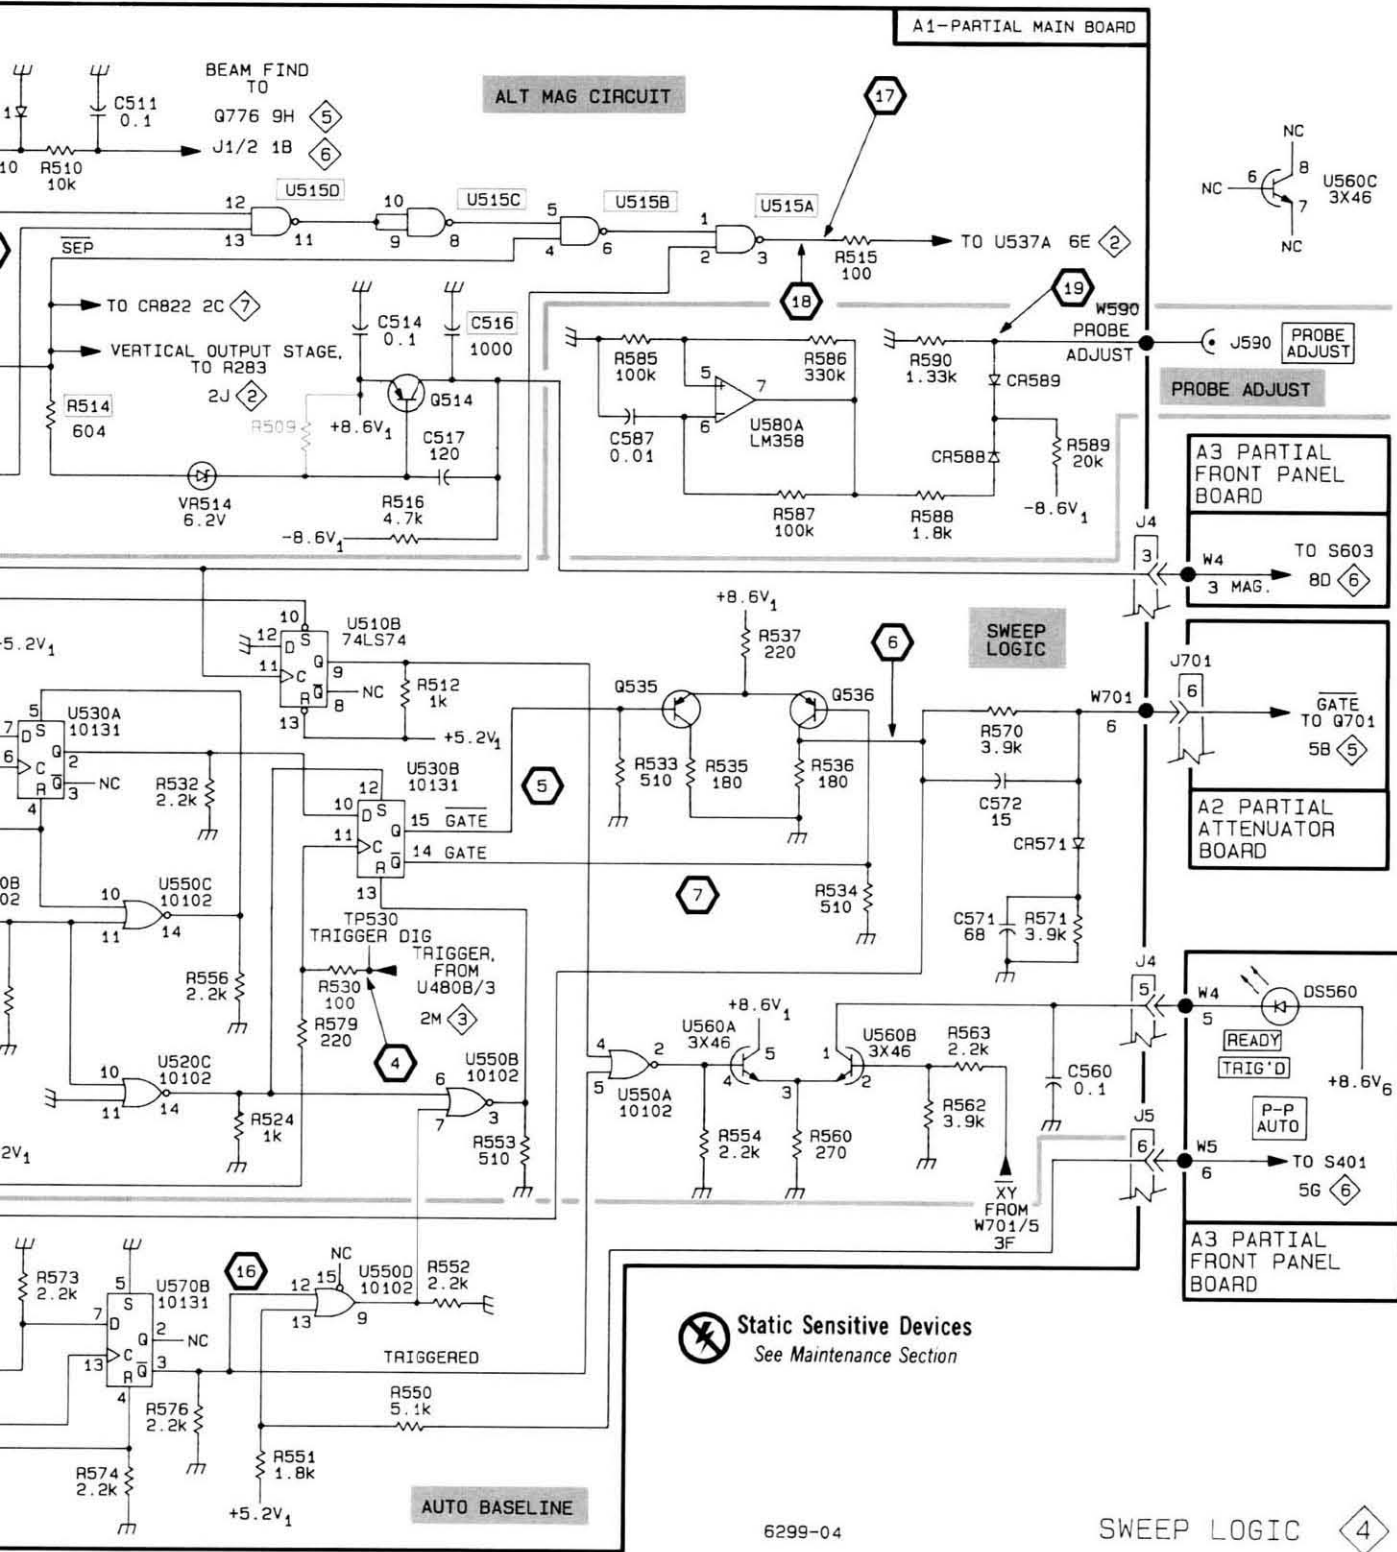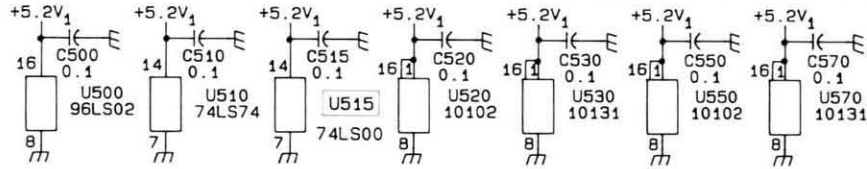

Static Sensitive Devices
See Maintenance Section

6299-04

SWEEP LOGIC 4

SWEEP LOGIC


WAVEFORMS FOR DIAGRAM 5 2225 CONTROL SETTINGS

DC VOLTAGES

INTENSITY midrange
HORIZONTAL MODE X1
SEC/DIV 0.5ms
TRIGGER MODE P-P AUTO

AC WAVEFORMS


VERTICAL MODE CH1
AC-GND-DC (both) GND
HORIZONTAL MODE X1
HOLD OFF MIN (fully ccw)
TRIGGER MODE P-P AUTO
TRIGGER LEVEL midrange
SEC/DIV 0.5ms
HORIZONTAL POSITION midrange

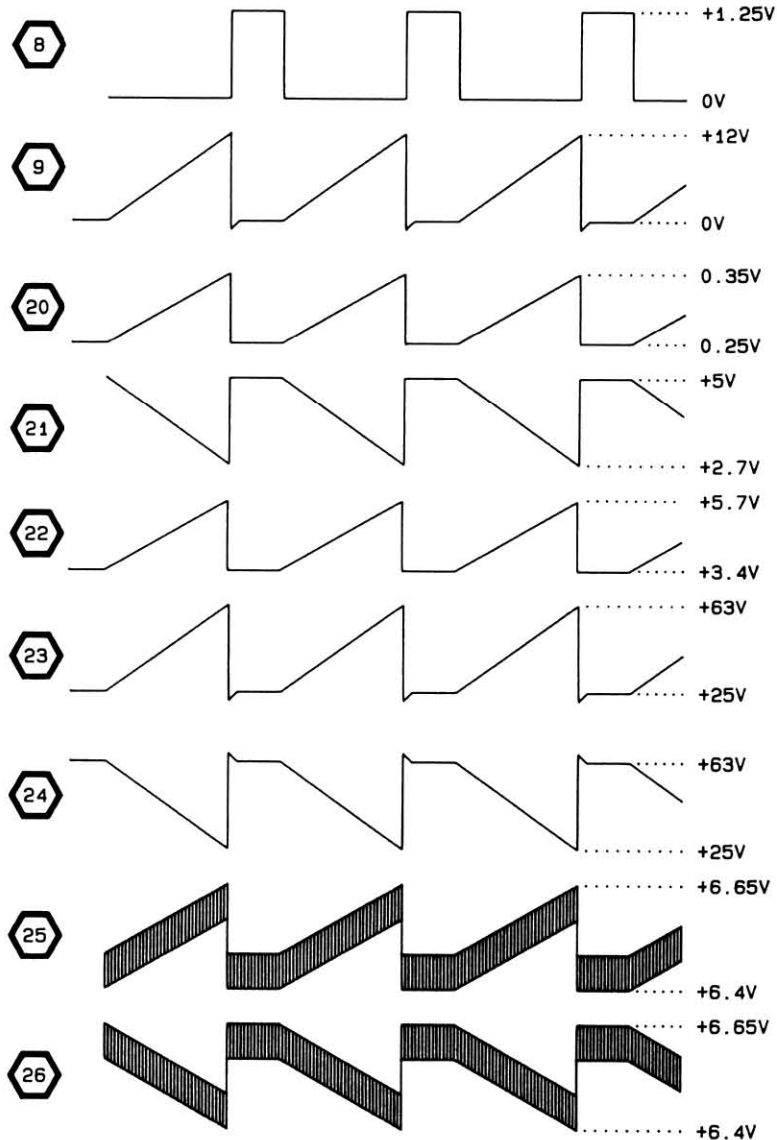

XY AMPLIFIER AND HORIZONTAL DIAGRAM 5

| ASSEMBLY A1 | | | | | | | | | | | |
|---|----------------|----------------|----------------|----------------|----------------|----------------|----------------|----------------|----------------|----------------|----------------|
| CIRCUIT NUMBER | SCHEM LOCATION | BOARD LOCATION | CIRCUIT NUMBER | SCHEM LOCATION | BOARD LOCATION | CIRCUIT NUMBER | SCHEM LOCATION | BOARD LOCATION | CIRCUIT NUMBER | SCHEM LOCATION | BOARD LOCATION |
| C776 | 6G | 3I | CR791 | 6G | 3I | R778 | 7J | 3K | R794 | 7H | 4J |
| C780 | 6H | 3I | | | | R779 | 6J | 4K | R795 | 7H | 4J |
| C782 | 7H | 3J | Q770 | 5G | 3J | R780 | 5G | 3I | R796 | 8H | 3I |
| C784* | 6H | 3J | Q775 | 6J | 3J | R781 | 5H | 3H | R797 | 8J | 4K |
| C785 | 5H | 3B | Q776 | 8G | 3I | R784 | 6H | 3J | R798 | 7J | 3K |
| C789 | 5J | 3K | Q779 | 5J | 3J | R785 | 5H | 3J | R799 | 7J | 3K |
| C794 | 8H | 4J | Q780 | 7G | 4I | R786 | 6H | 3I | R828 | 8G | 3H |
| C795 | 7H | 3J | Q785 | 8J | 3J | R787 | 6J | 3K | | | |
| C799 | 7J | 3K | Q789 | 7J | 3J | R788 | 5J | 3K | VR776 | 6G | 3I |
| | | | | | | R789 | 6J | 3K | VR792 | 7H | 3J |
| CR776 | 8G | 3H | R262 | 7G | 3H | R790 | 7G | 4I | | | |
| CR780 | 5G | 4H | R764 | 7G | 3I | R791 | 6G | 3I | W755 | 5F | 10G |
| CR781 | 6G | 3I | R776 | 6G | 3H | R792 | 7H | 4K | W900 | 6J | 4K |
| CR790 | 6G | 4H | | | | | | | | | |
| Partial A1 also shown on diagrams 2, 3, 4, 6 and 7. | | | | | | | | | | | |
| ASSEMBLY A2 | | | | | | | | | | | |
| CIRCUIT NUMBER | SCHEM LOCATION | BOARD LOCATION | CIRCUIT NUMBER | SCHEM LOCATION | BOARD LOCATION | CIRCUIT NUMBER | SCHEM LOCATION | BOARD LOCATION | CIRCUIT NUMBER | SCHEM LOCATION | BOARD LOCATION |
| C701 | 6B | 2A | J90 | 2B | 5E | R717 | 8E | 5C | R760 | 4J | 4A |
| C702 | 6A | 2C | J701 | 6B | 2A | R718 | 8E | 5C | R761 | 2L | 5A |
| C703 | 4C | 1B | J755 | 2K | 1A | R719* | 8E | 5C | R762 | 2L | 5A |
| C704 | 4C | 1A | | | | R720 | 6E | 5C | R763 | 4L | 5C |
| C705 | 4D | 1A | L712 | 1B | 5E | R721 | 7F | 4C | R765 | 4L | 5C |
| C706 | 5C | 1A | L713 | 1B | 5E | R722 | 7E | 5D | R766 | 4K | 5C |
| C707 | 2C | 5D | | | | R723 | 6E | 5D | R767 | 4L | 5C |
| C708 | 5D | 1A | Q701 | 4B | 2B | R730 | 2H | 3A | R768 | 5L | 5C |
| C709 | 5B | 2B | Q702 | 3B | 4D | R731 | 2G | 3A | R769 | 4L | 5C |
| C710 | 3D | 1A | Q704A | 5C | 2B | R732* | 2C | 5D | R770 | 5L | 5B |
| C712 | 1C | 5E | Q704B | 5D | 2B | R733 | 2D | 3C | R771 | 6L | 5B |
| C713 | 1C | 5D | Q706 | 5D | 1B | R734 | 2D | 4D | R772 | 5L | 5B |
| C714 | 3F | 4B | Q732 | 2C | 3C | R735 | 2D | 4C | R773 | 6K | 4C |
| C715 | 7D | 5C | Q736 | 3C | 3D | R736* | 1C | 5D | R774 | 6M | 3A |
| C722 | 6B | 3C | Q737 | 2E | 3C | R737 | 1E | 3C | R775* | 4G | 3B |
| C723 | 5B | 2B | Q747 | 4G | 4A | R738 | 2E | 3C | R777 | 4L | 5C |
| C724 | 1E | 3C | Q748 | 4H | 4B | R739 | 2F | 4C | R782 | 2L | 5B |
| C732* | 2C | 5D | Q750 | 3G | 4B | R740 | 4D | 3B | | | |
| C733 | 1D | 3C | Q759 | 3J | 4A | R741 | 4E | 3B | S701 | 8C | 1C |
| C746 | 2J | 3C | Q760 | 4J | 4B | R742 | 4E | 3A | | | |
| C755 | 6L | 5B | | | | R743 | 3E | 3B | U715 | 8E | 5C |
| C767 | 4L | 5C | R701 | 6E | 1B | R744 | 3F | 3A | U745C | 3K | 4A |
| C773 | 6K | 5B | R702 | 6D | 2B | R745 | 4E | 3B | U745D | 3M | 4A |
| C774 | 6K | 4B | R703 | 4C | 2A | R746 | 2J | 3B | U745E | 5K | 4A |
| | | | R704 | 3B | 2A | R747 | 2G | 3A | U745 | 4E | 4A |
| CR747 | 3G | 3A | R705 | 5D | 1A | R748 | 2H | 3A | U755A | 5M | 5A |
| CR748 | 3H | 3B | R706 | 3C | 5D | R749 | 2H | 3A | U755B | 5M | 5A |
| CR755 | 6L | 5B | R707 | 3B | 5D | R750 | 2H | 3B | U755C | 2K | 5A |
| CR758 | 3K | 5A | R708 | 3B | 3D | R751 | 3G | 3B | U755D | 2M | 5A |
| CR761 | 3L | 5A | R709 | 3C | 5D | R752 | 3H | 3B | U755E | 5K | 5A |
| CR762 | 3L | 5A | R710 | 3D | 3D | R753* | 3H | 3B | | | |
| CR769 | 4L | 4C | R711 | 3F | 4B | R754 | 4H | 4A | VR719 | 8E | 8E |
| CR773 | 4K | 5C | R712* | 4G | 3A | R755 | 4G | 4A | | | |
| CR774 | 4M | 5C | R713* | 4F | 3B | R756 | 4H | 4B | W711 | 5D | 2A |
| | | | R714* | 4F | 3B | R757 | 2L | 5A | W724 | 4D | 4D |
| J7 | 1F | 4D | R715 | 8D | 5C | R758 | 2K | 5A | W752 | 2B | 2B |
| J7 | 2J | 4D | R716 | 7D | 5C | R759 | 3J | 4A | | | |
| Partial A2 also shown on diagrams 1, 4 and 6. | | | | | | | | | | | |

*See Parts List for serial number ranges.

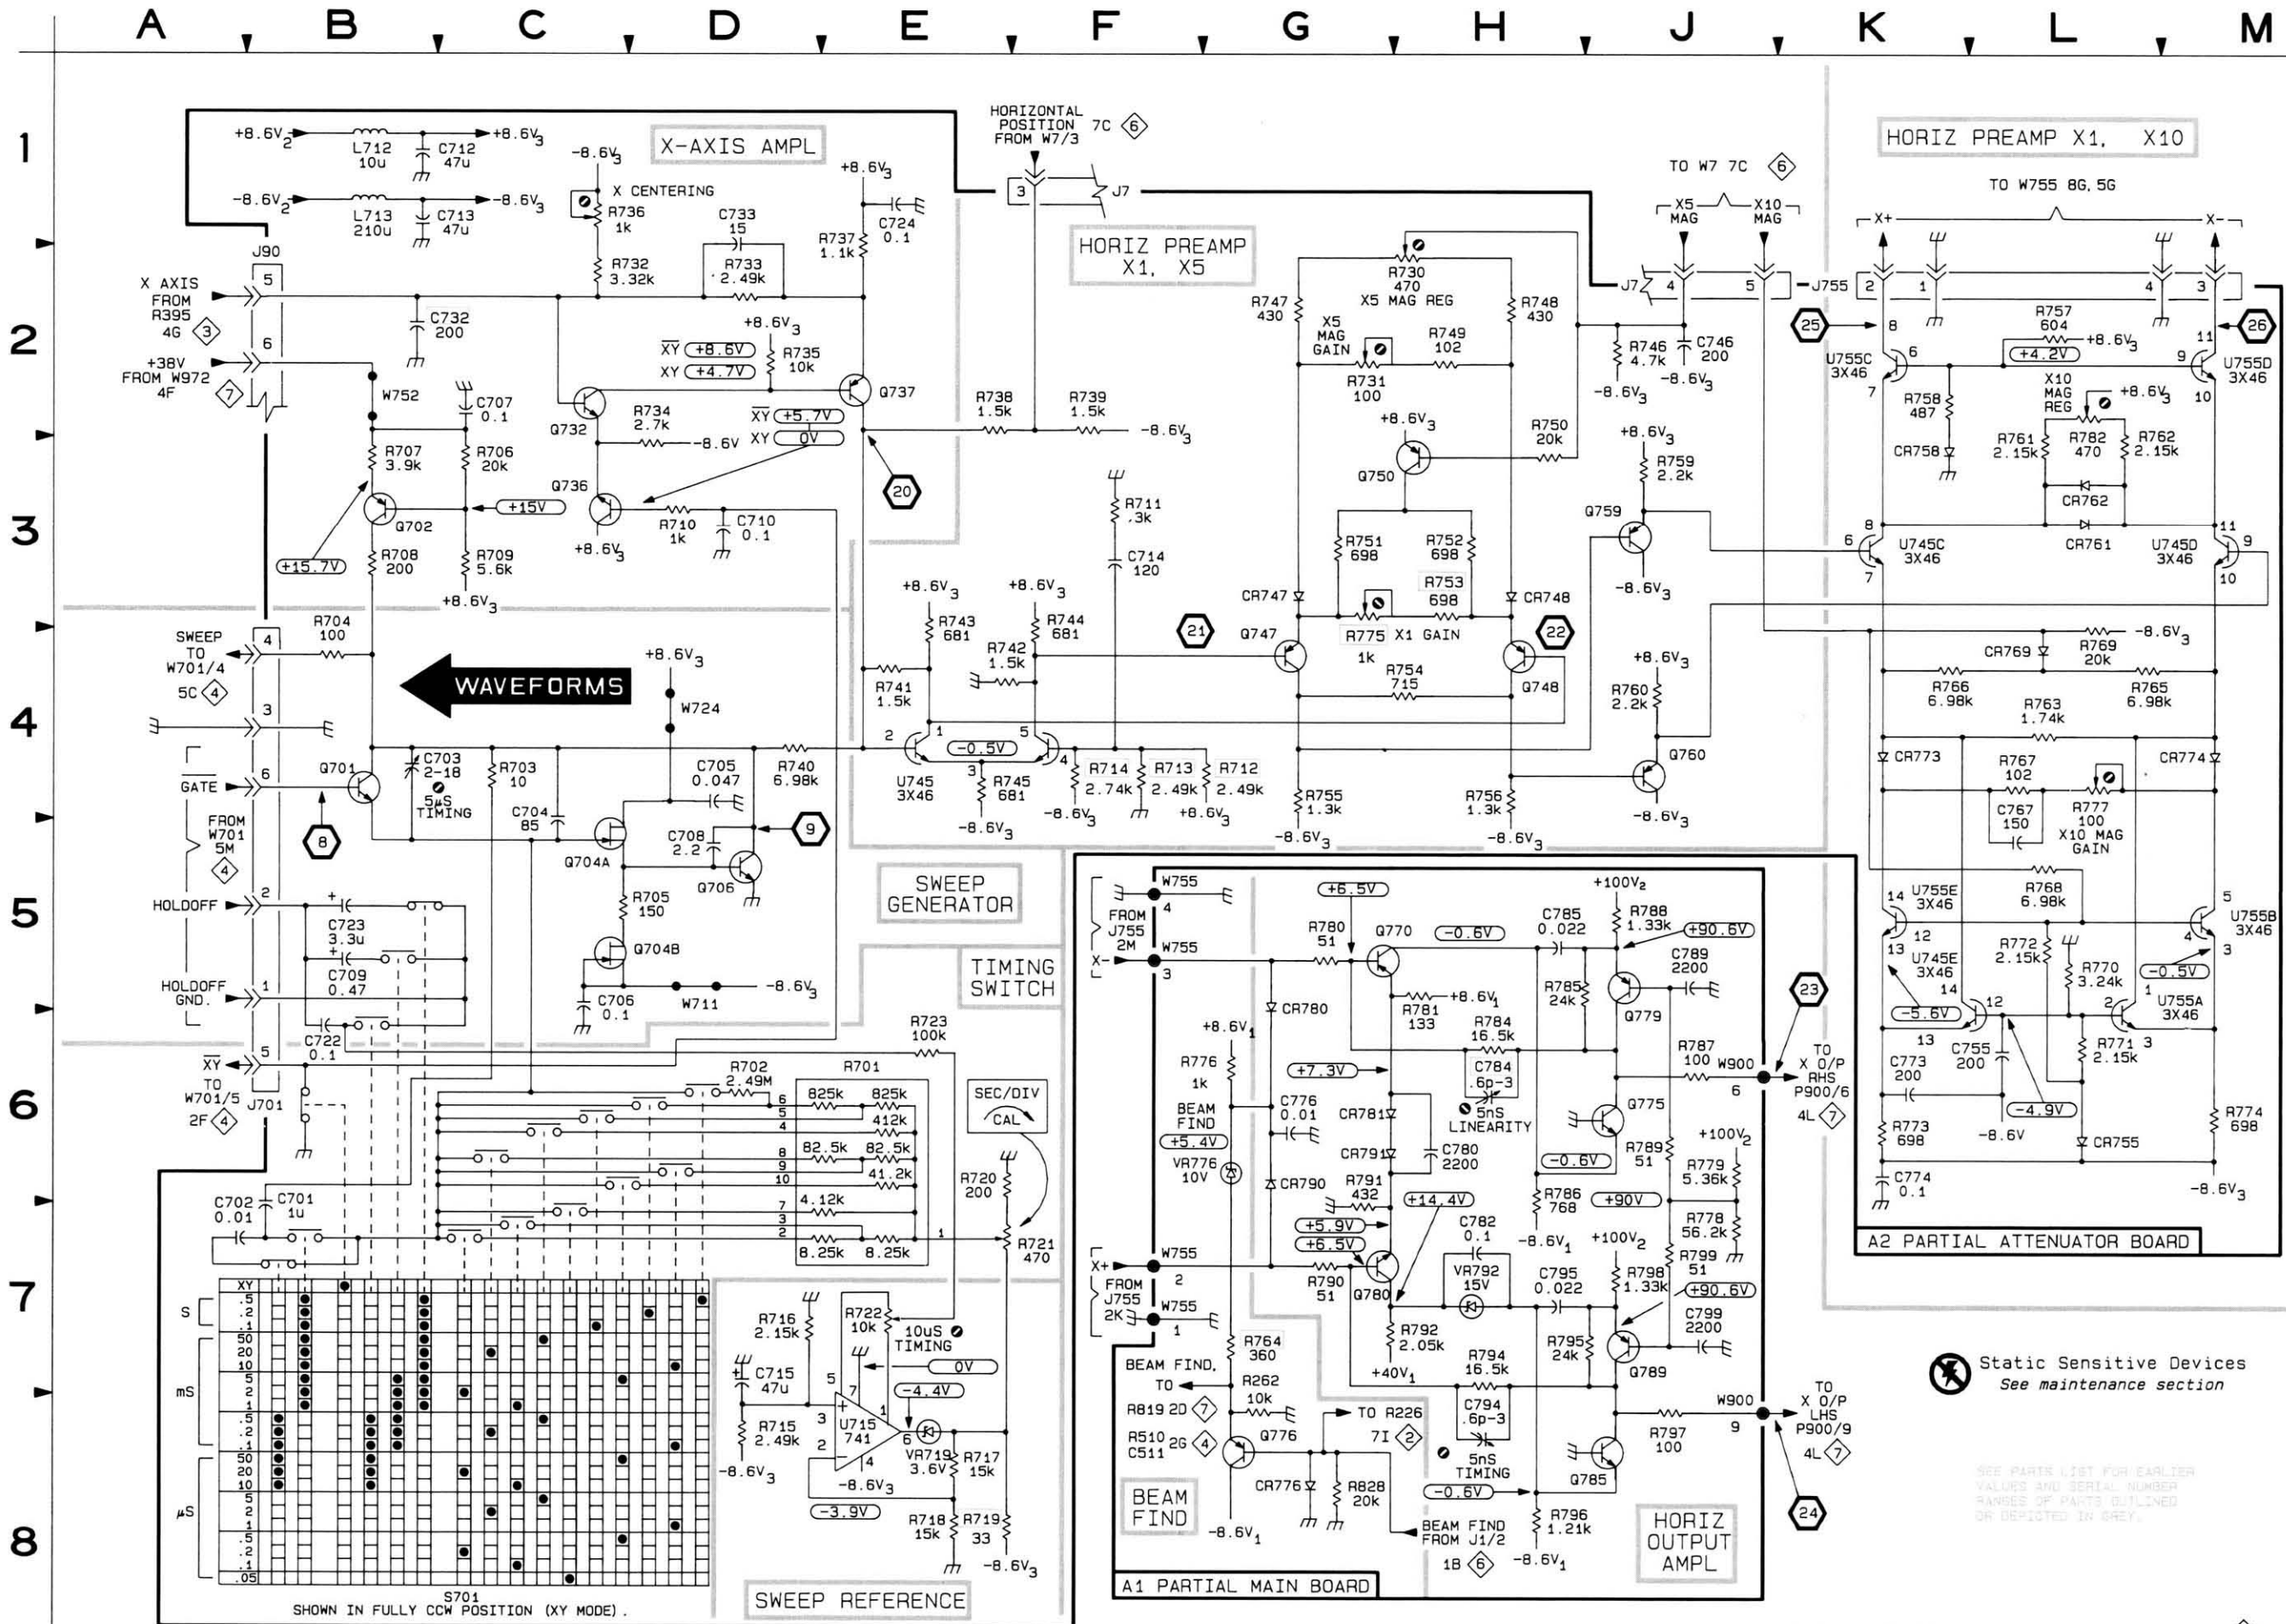

A B C D E F G

1

2

3


4


5

6

7

8

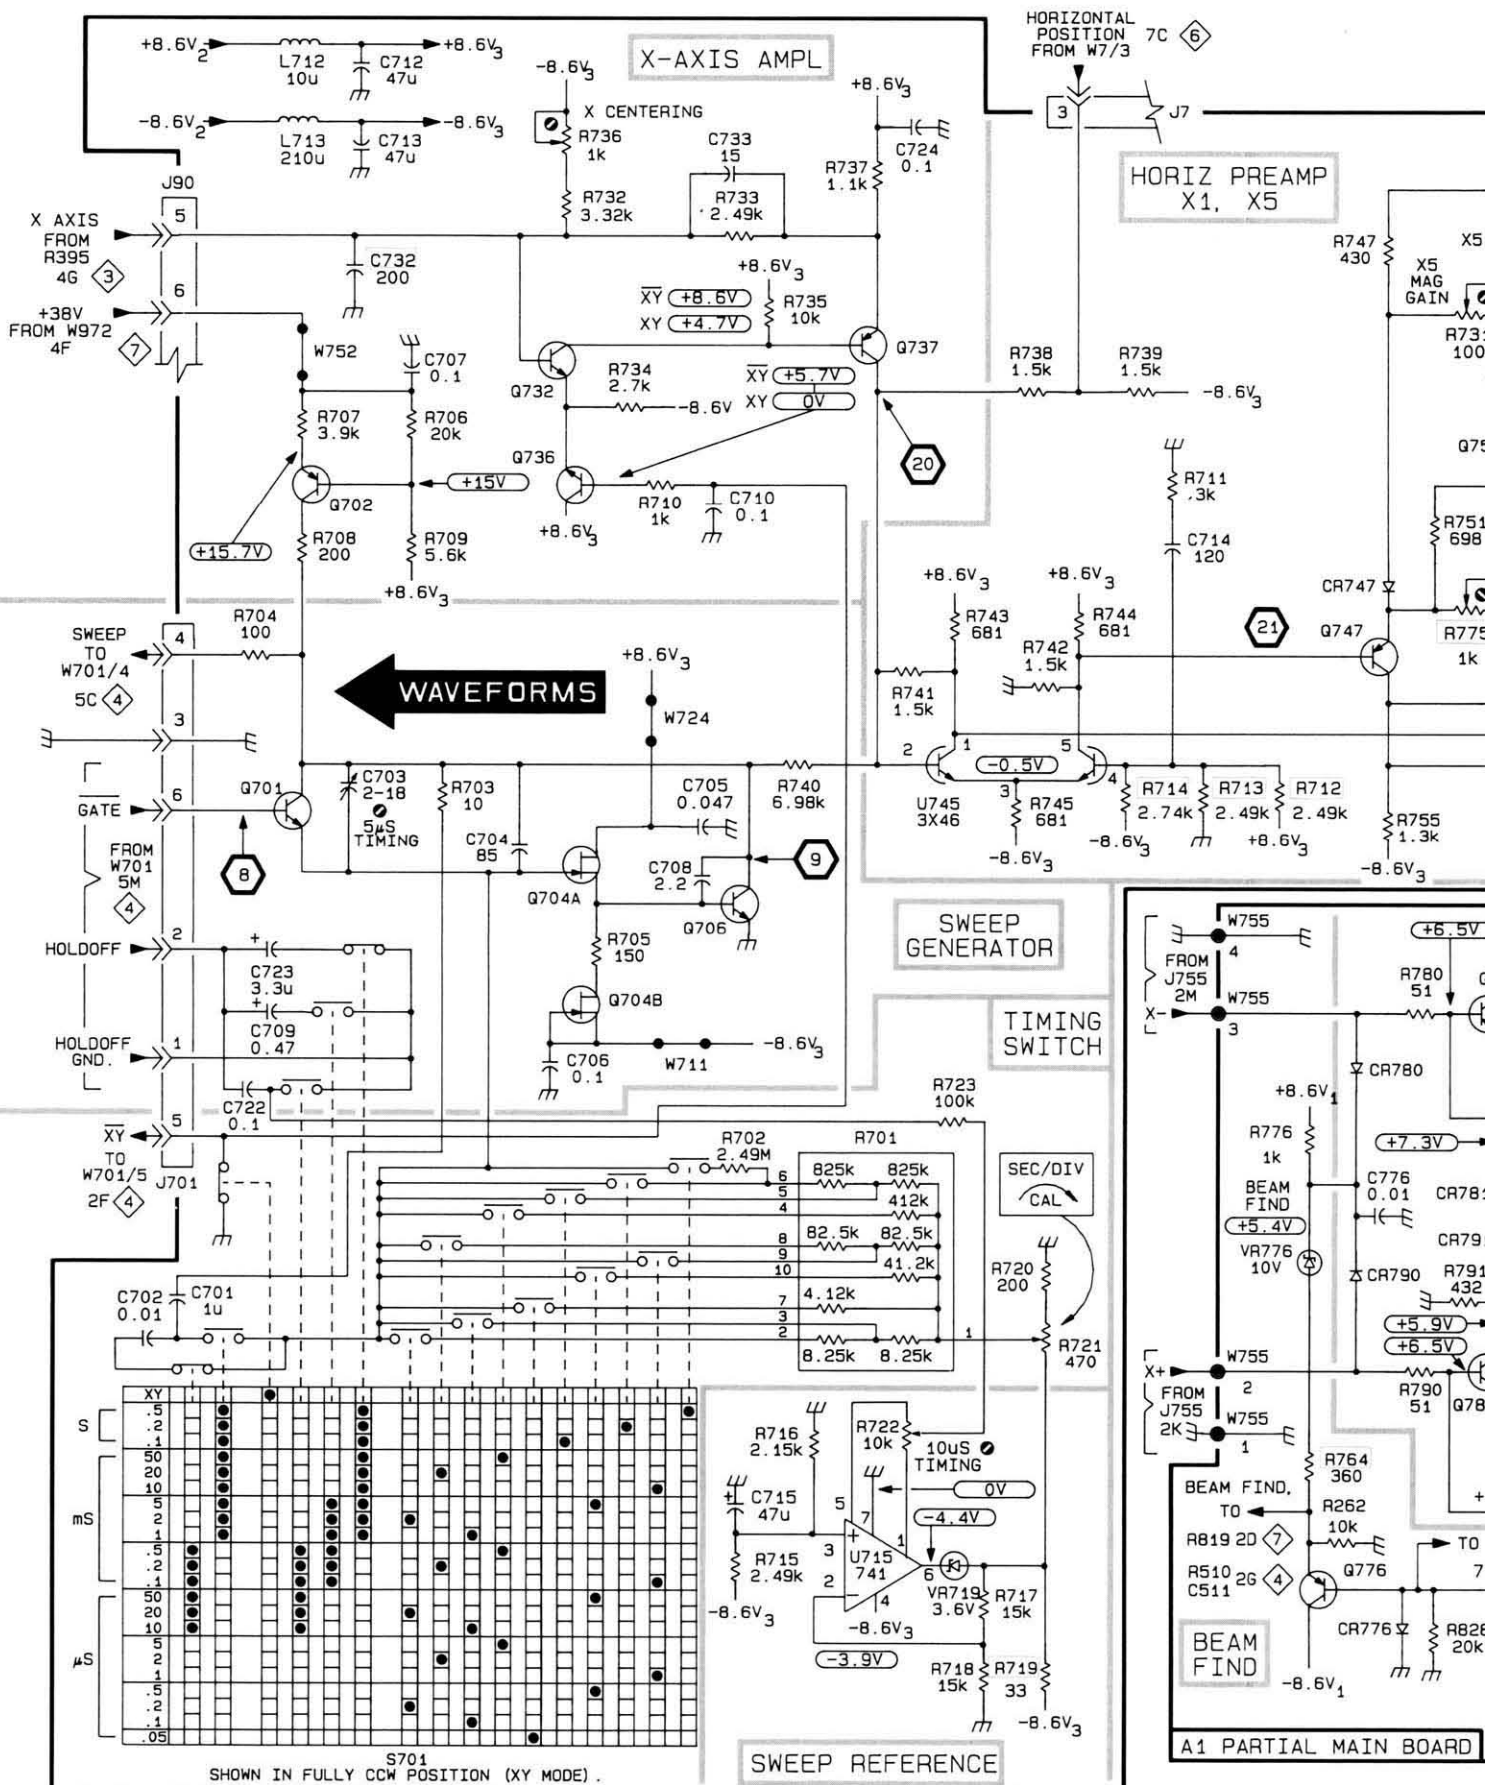



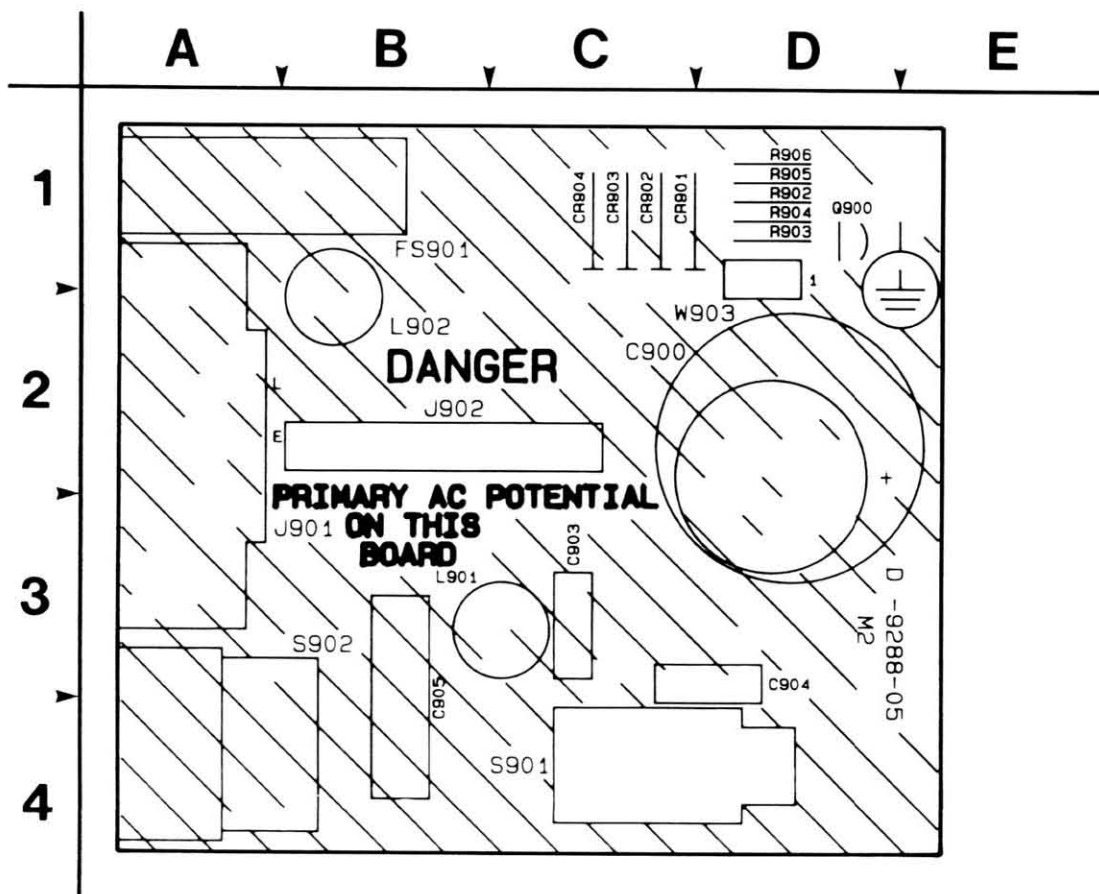


Figure 9-9. A4—Mains Input board.

| A4—MAINS INPUT BOARD | | | | | | | |
|----------------------|--------------|----------------|--------------|----------------|--------------|----------------|--------------|
| CIRCUIT NUMBER | SCHEM NUMBER | CIRCUIT NUMBER | SCHEM NUMBER | CIRCUIT NUMBER | SCHEM NUMBER | CIRCUIT NUMBER | SCHEM NUMBER |
| C900 | 7 | CR904 | 7 | L902 | 7 | R906 | 7 |
| C903 | 7 | | | Q900 | 7 | S901 | 7 |
| C904 | 7 | F901 | 7 | | | S902 | 7 |
| C905 | 7 | | | R902 | 7 | W903 | 7 |
| CR901 | 7 | J901 | 7 | R903 | 7 | | |
| CR902 | 7 | J902 | 7 | R904 | 7 | | |
| CR903 | 7 | L901 | 7 | R905 | 7 | | |


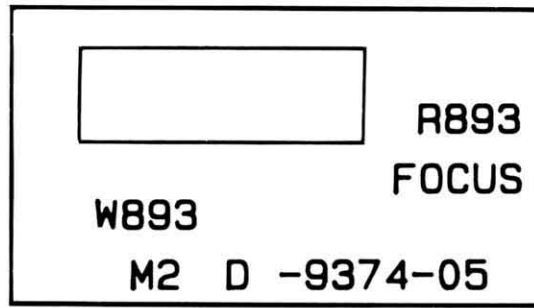




Figure 9-10. A5—Focus Pot board.

 **Static Sensitive Devices**
See Maintenance Section

COMPONENT NUMBER EXAMPLE

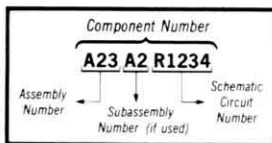

Chassis-mounted components have no Assembly Number prefix—see end of Replaceable Electrical Parts List

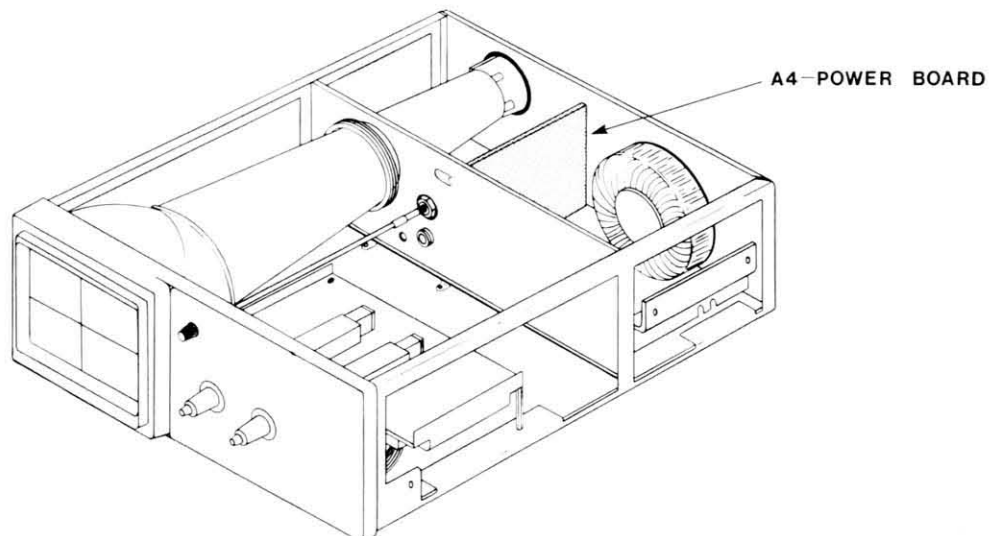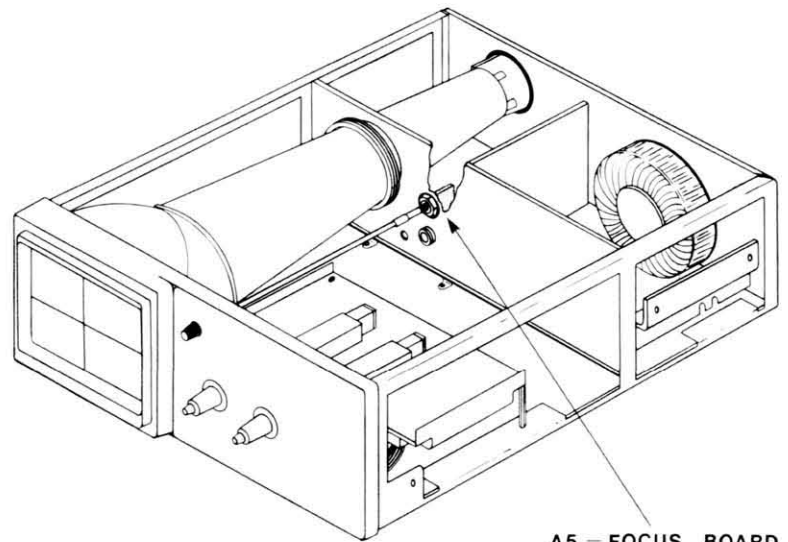

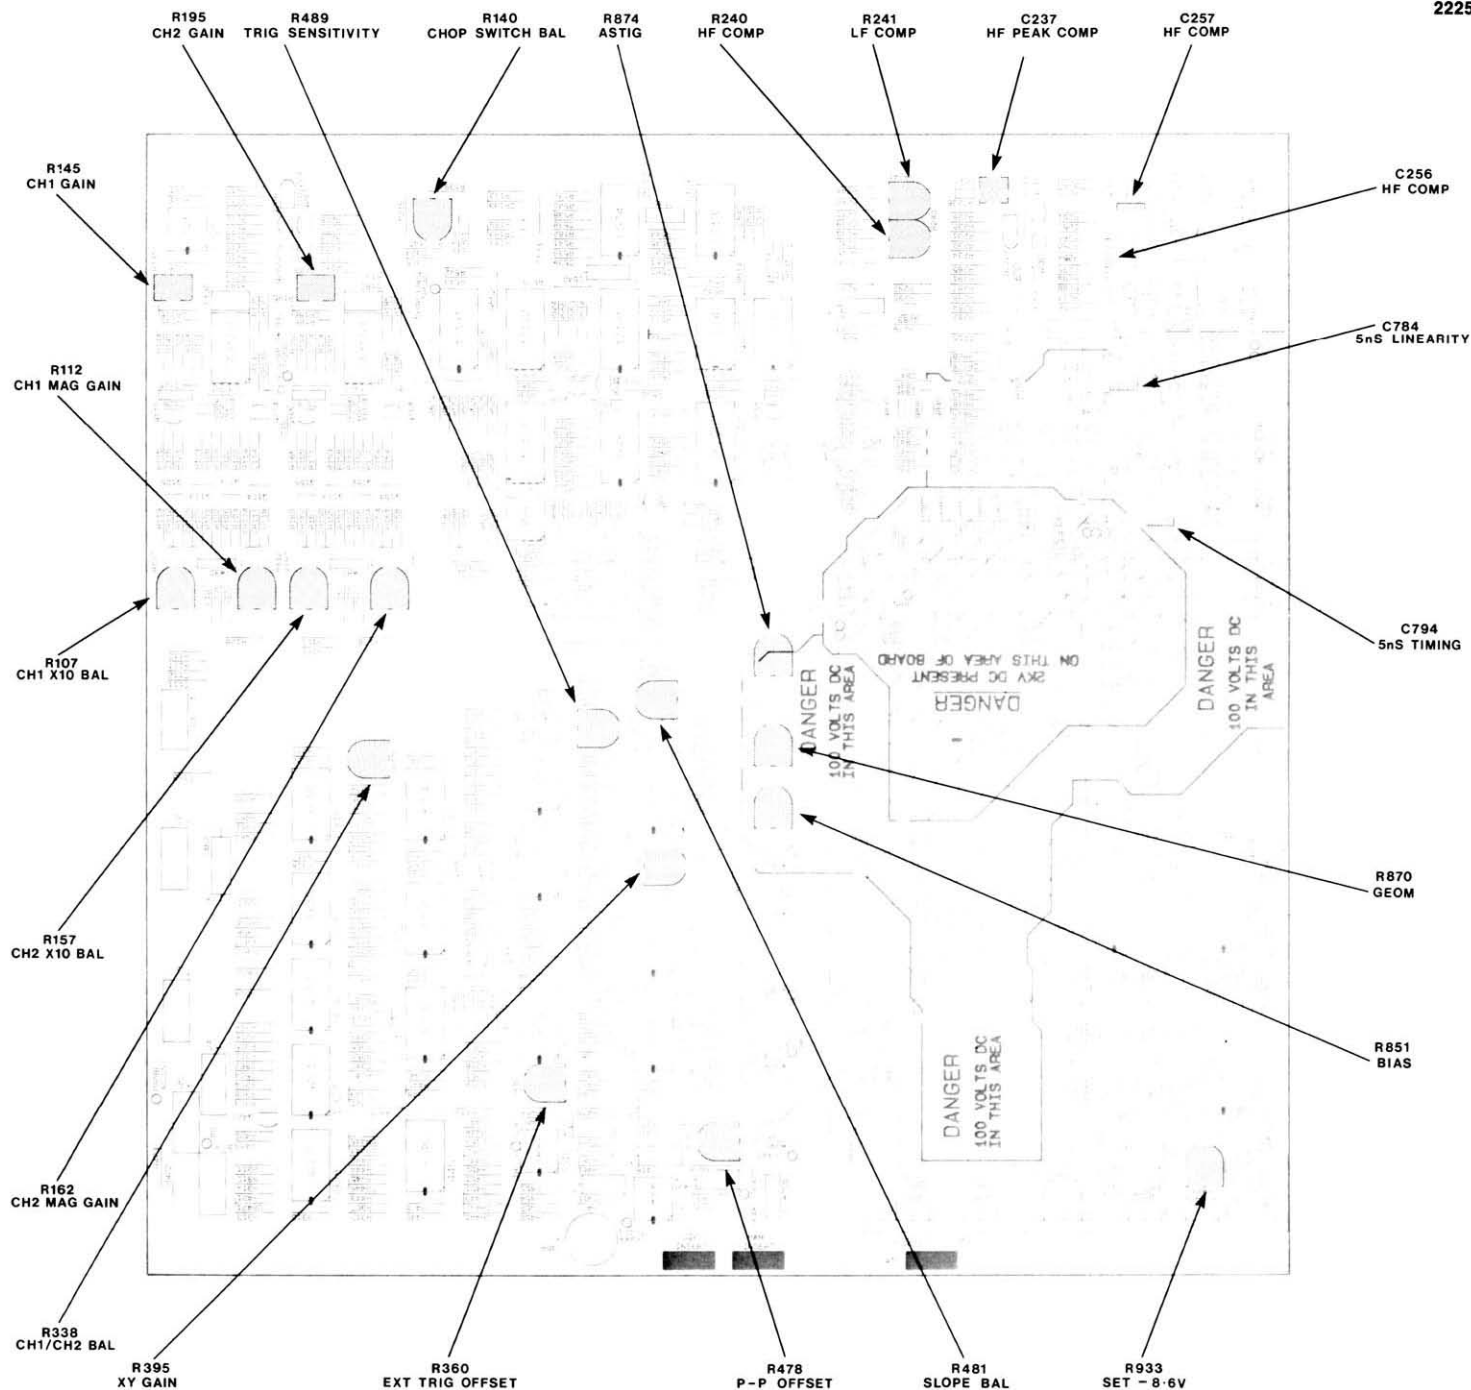


Figure 9-11. A1—Main board adjustment locations.

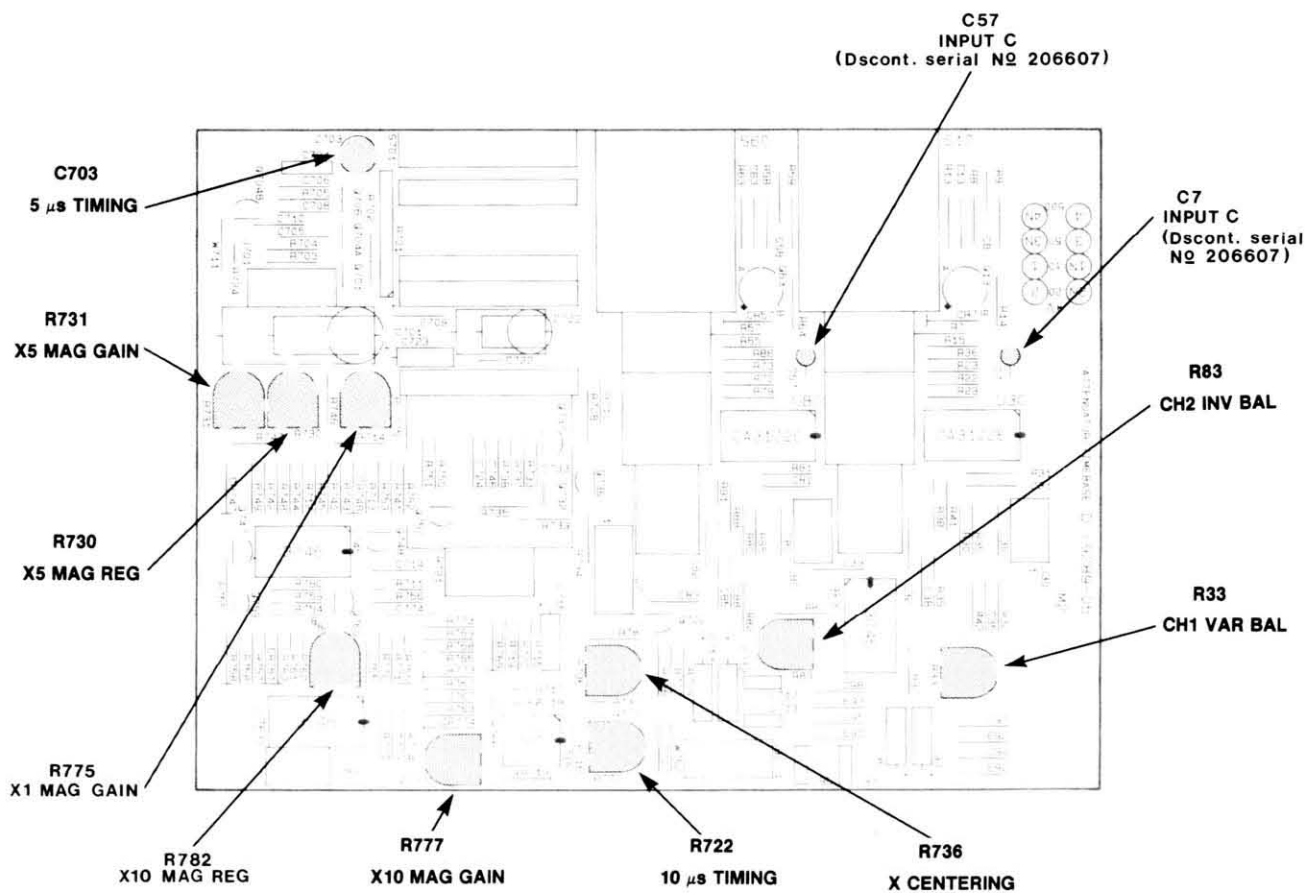


Figure 9-12. A2—Attenuator/time base adjustment locations.


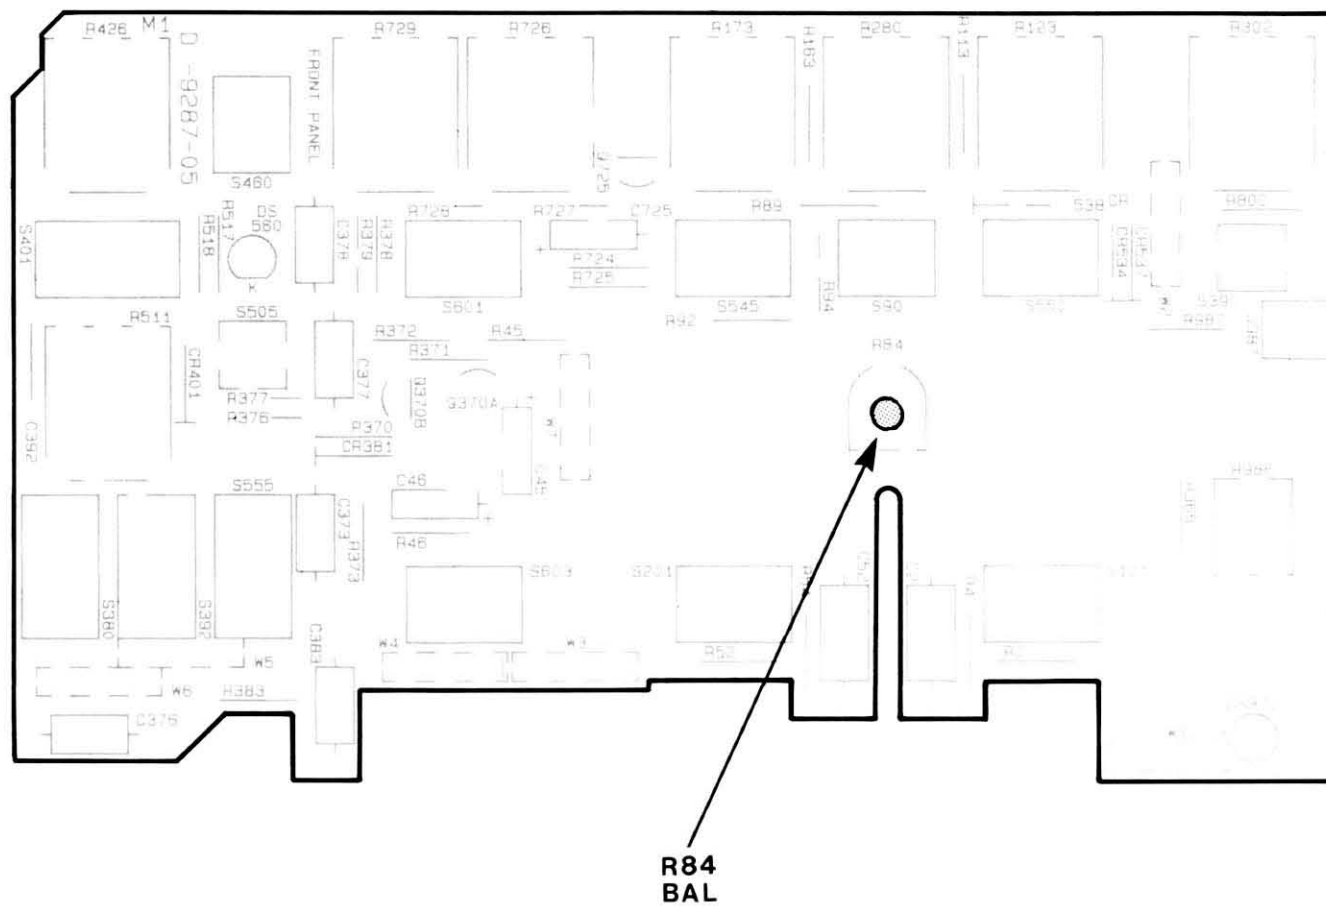


Figure 9-13. A3—Front Panel board adjustment locations.

FRONT PANEL DIAGRAM 6

| Assembly A1 | | | | | | | | | | | |
|---|----------------|----------------|----------------|----------------|----------------|----------------|----------------|----------------|----------------|----------------|----------------|
| CIRCUIT NUMBER | SCHEM LOCATION | BOARD LOCATION | CIRCUIT NUMBER | SCHEM LOCATION | BOARD LOCATION | CIRCUIT NUMBER | SCHEM LOCATION | BOARD LOCATION | CIRCUIT NUMBER | SCHEM LOCATION | BOARD LOCATION |
| J1 | 1B | 6A | J3 | 4B | 9A | J5 | 4M | 10A | J6 | 5M | 10A |
| J2 | 2B | 6A | J4 | 5B | 9A | | | | | | |
| Partial A1 also shown on diagrams 2, 3, 4, 5 and 7. | | | | | | | | | | | |
| Assembly A2 | | | | | | | | | | | |
| AT1 | 2L | 1F | J7 | 7B | 4D | R3 | 2K | 1F | R53 | 3K | 1D |
| AT51 | 2L | 1D | | | | | | | | | |
| Partial A2 also shown on diagrams 1, 4 and 5. | | | | | | | | | | | |
| Assembly A3 | | | | | | | | | | | |
| C2 | 2I | 4C | Q370A | 7I | 3E | R373 | 5I | 3E | S101 | 1J | 4B |
| C45 | 3G | 3E | Q370B | 7H | 3E | R376 | 9J | 3F | S201 | 3J | 4D |
| C46 | 3F | 3E | Q725 | 6E | 1D | R377 | 9J | 3F | S380 | 6J | 3G |
| C52 | 3I | 4C | | | | R378 | 9H | 2E | S390 | 1D | 2A |
| C373 | 5I | 3F | R2 | 1J | 4B | R379 | 9H | 2E | S392 | 8J | 3F |
| C376 | 7J | 4G | R4 | 1I | 4B | R382 | 7L | 4E | S401 | 5G | 2G |
| C377 | 9I | 2E | R45 | 3G | 2E | R383 | 7K | 4F | S460 | 4E | 1F |
| C378 | 9I | 2F | R46 | 3F | 3E | R426 | 4C | 1F | S505 | 4K | 2F |
| C383 | 7K | 4E | R52 | 3J | 4D | R511 | 5D | 3G | S545 | 2H | 2D |
| C392 | 7K | 2G | R84* | 7C | 3C | R517 | 5E | 2F | S550 | 3G | 2B |
| C725 | 6F | 2D | R89 | 6D | 2C | R518 | 5F | 2F | S555 | 4H | 3F |
| C726* | 7F | 1E | R92 | 7C | 2D | R724 | 6F | 2D | S601 | 4F | 2E |
| | | | R94 | 6C | 2C | R725 | 6F | 2D | S603 | 8D | 4E |
| CR381 | 7H | 3E | R113 | 2E | 1B | R726 | 7F | 1E | | | |
| CR534 | 3G | 2B | R123 | 2E | 1B | R727 | 8D | 2D | W1 | 1C | 4A |
| CR537 | 2G | 2B | R173 | 2C | 1D | R728 | 7E | 2E | W2 | 2C | 2A |
| CR538 | 2F | 2B | R280 | 3E | 1C | R729 | 7E | 1E | W3 | 3C | 4D |
| | | | R365* | 8G | 3A | R800 | 1F | 2A | W4 | 5C | 4E |
| DS370 | 8F | 4A | R370 | 7I | 3E | R802 | 1E | 1A | W5 | 4L | 4F |
| DS560 | 6D | 2F | R371 | 6H | 2E | | | | W6 | 5L | 4F |
| | | | R372 | 6I | 2E | S90 | 7C | 2C | W7 | 7C | 3D |
| Partial A3 also shown on diagrams 1, 2, 3, 4 and 7. | | | | | | | | | | | |
| OTHER PARTS | | | | | | | | | | | |
| J100 | 1K | CHASSIS | J300 | 7M | CHASSIS | R3 | 2K | CHASSIS | R53 | 3K | CHASSIS |
| J151 | 3K | CHASSIS | R1 | 1K | CHASSIS | R51 | 3K | CHASSIS | R382 | 7L | CHASSIS |

*See Parts List for serial number ranges.

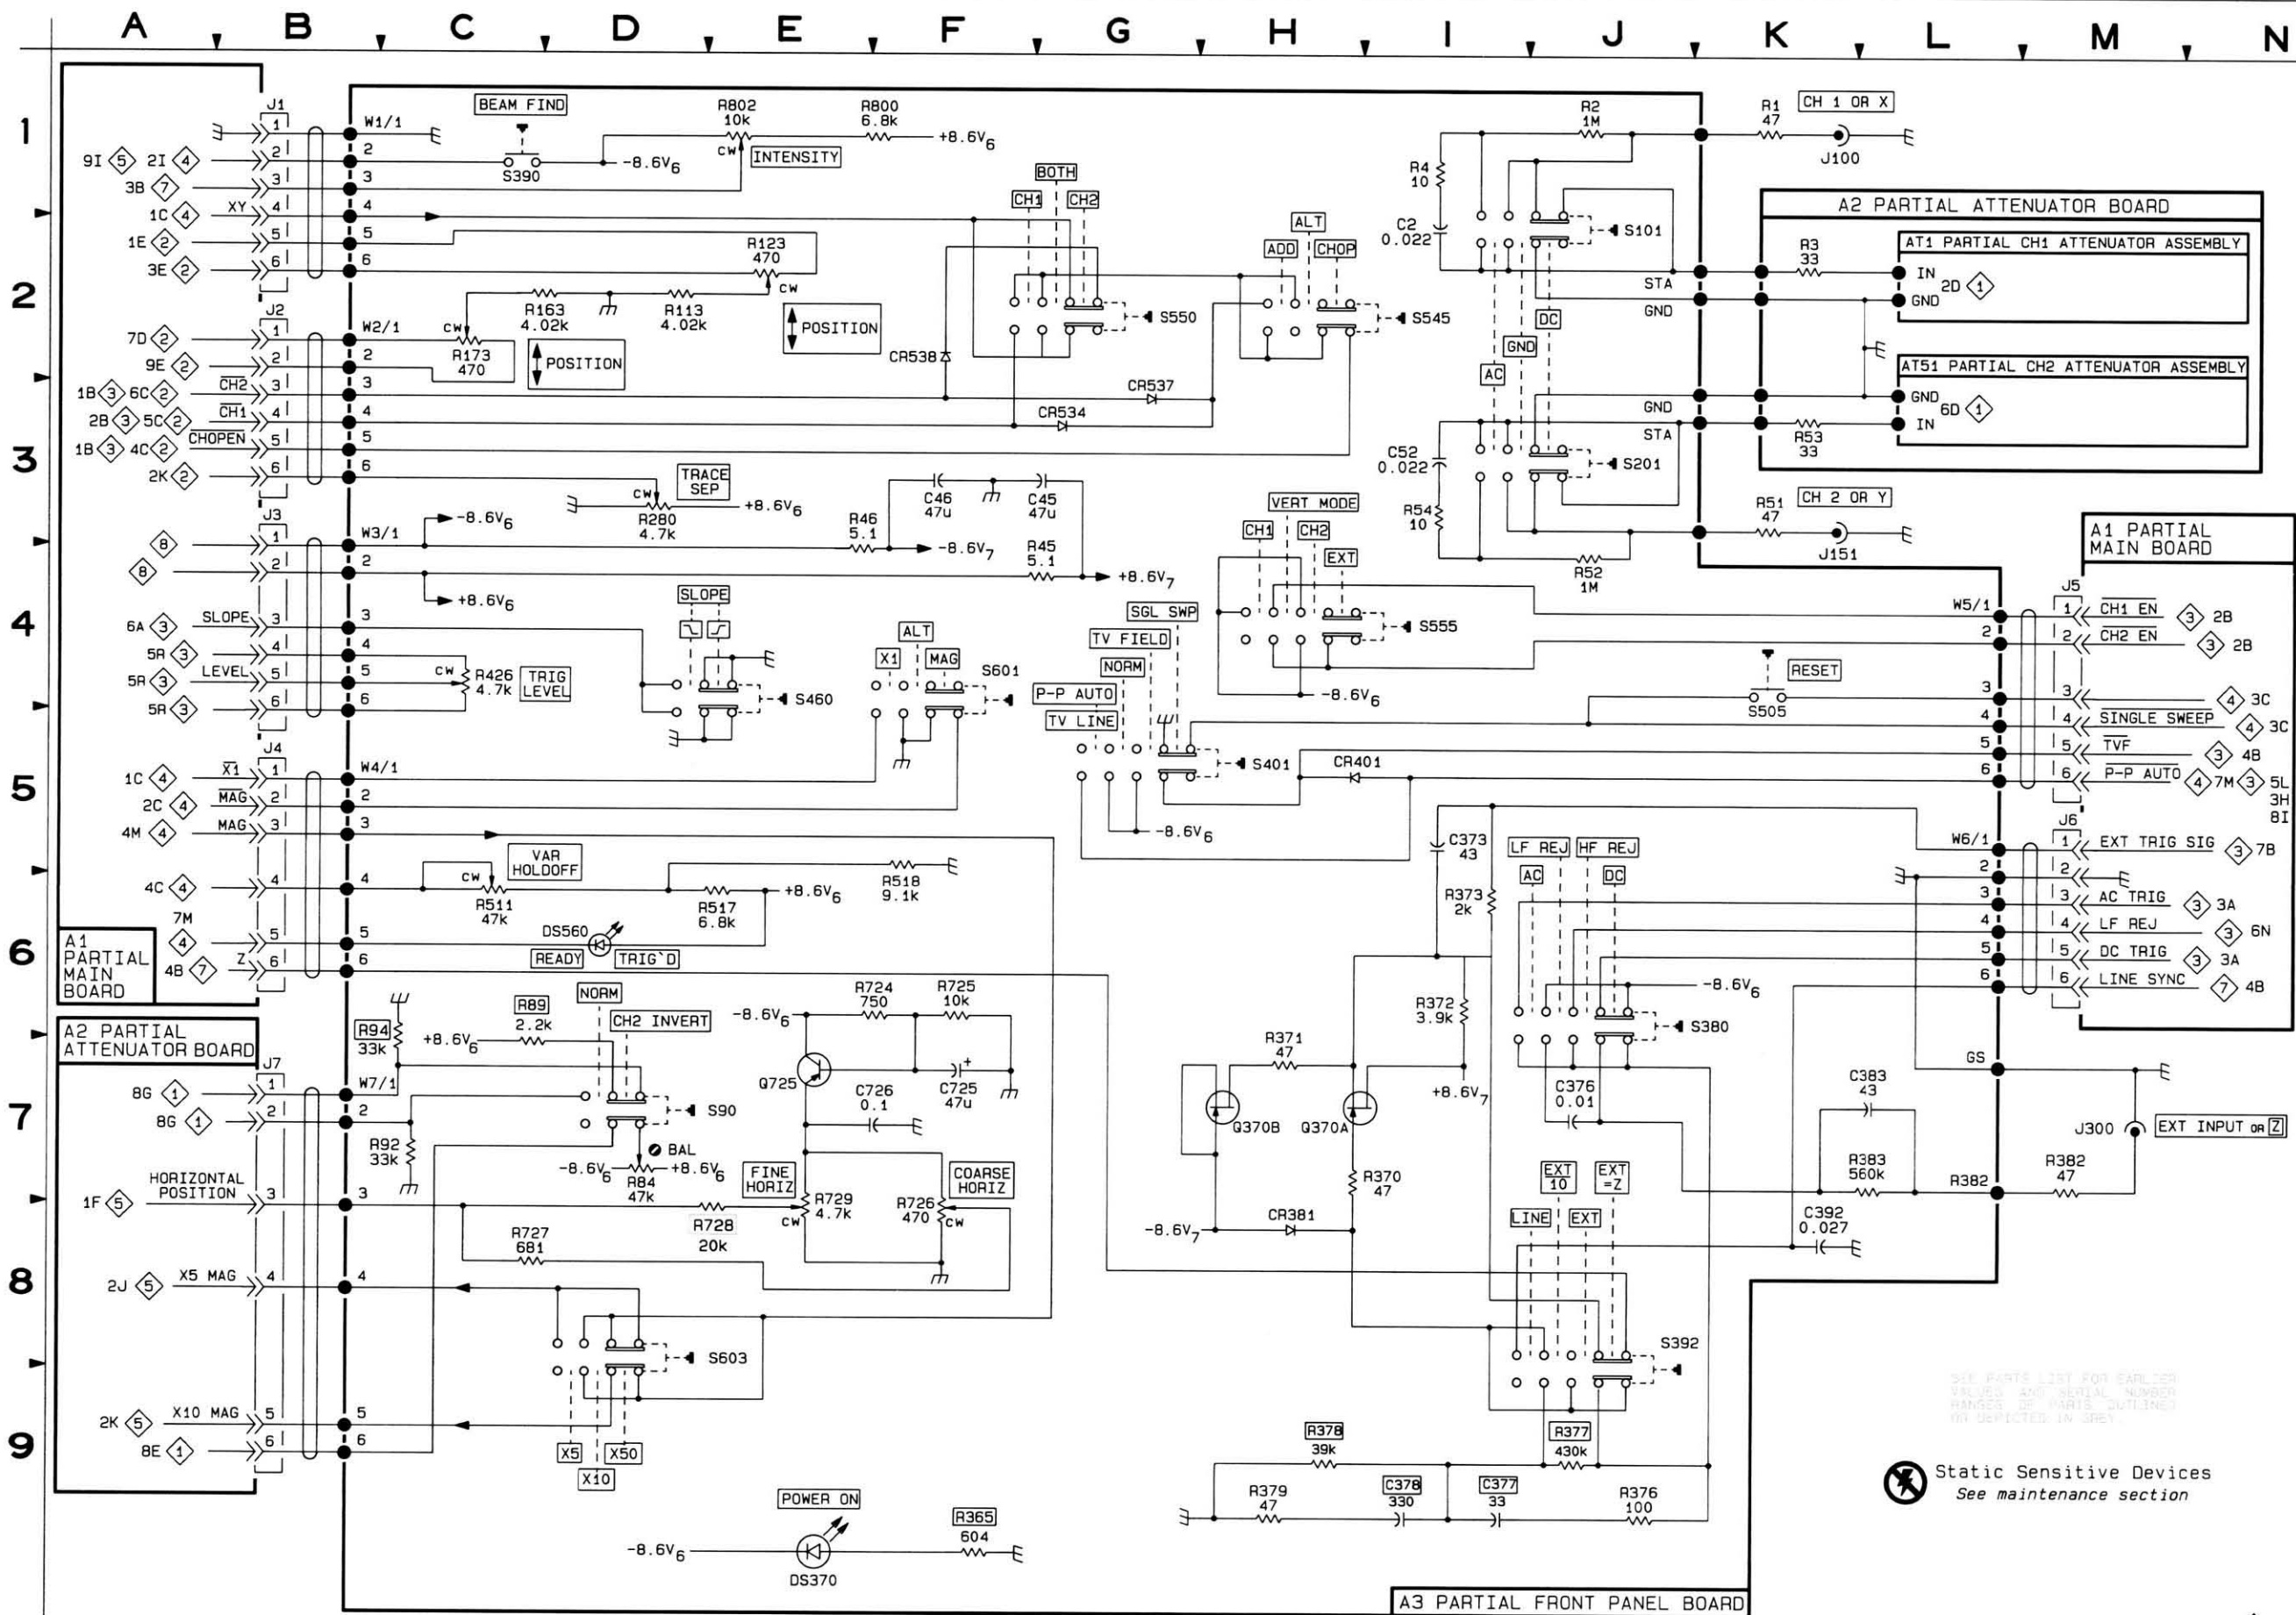

Static Sensitive Devices
See maintenance section

A B C D E F G H

1

2

3

4


5

6

7

8


9

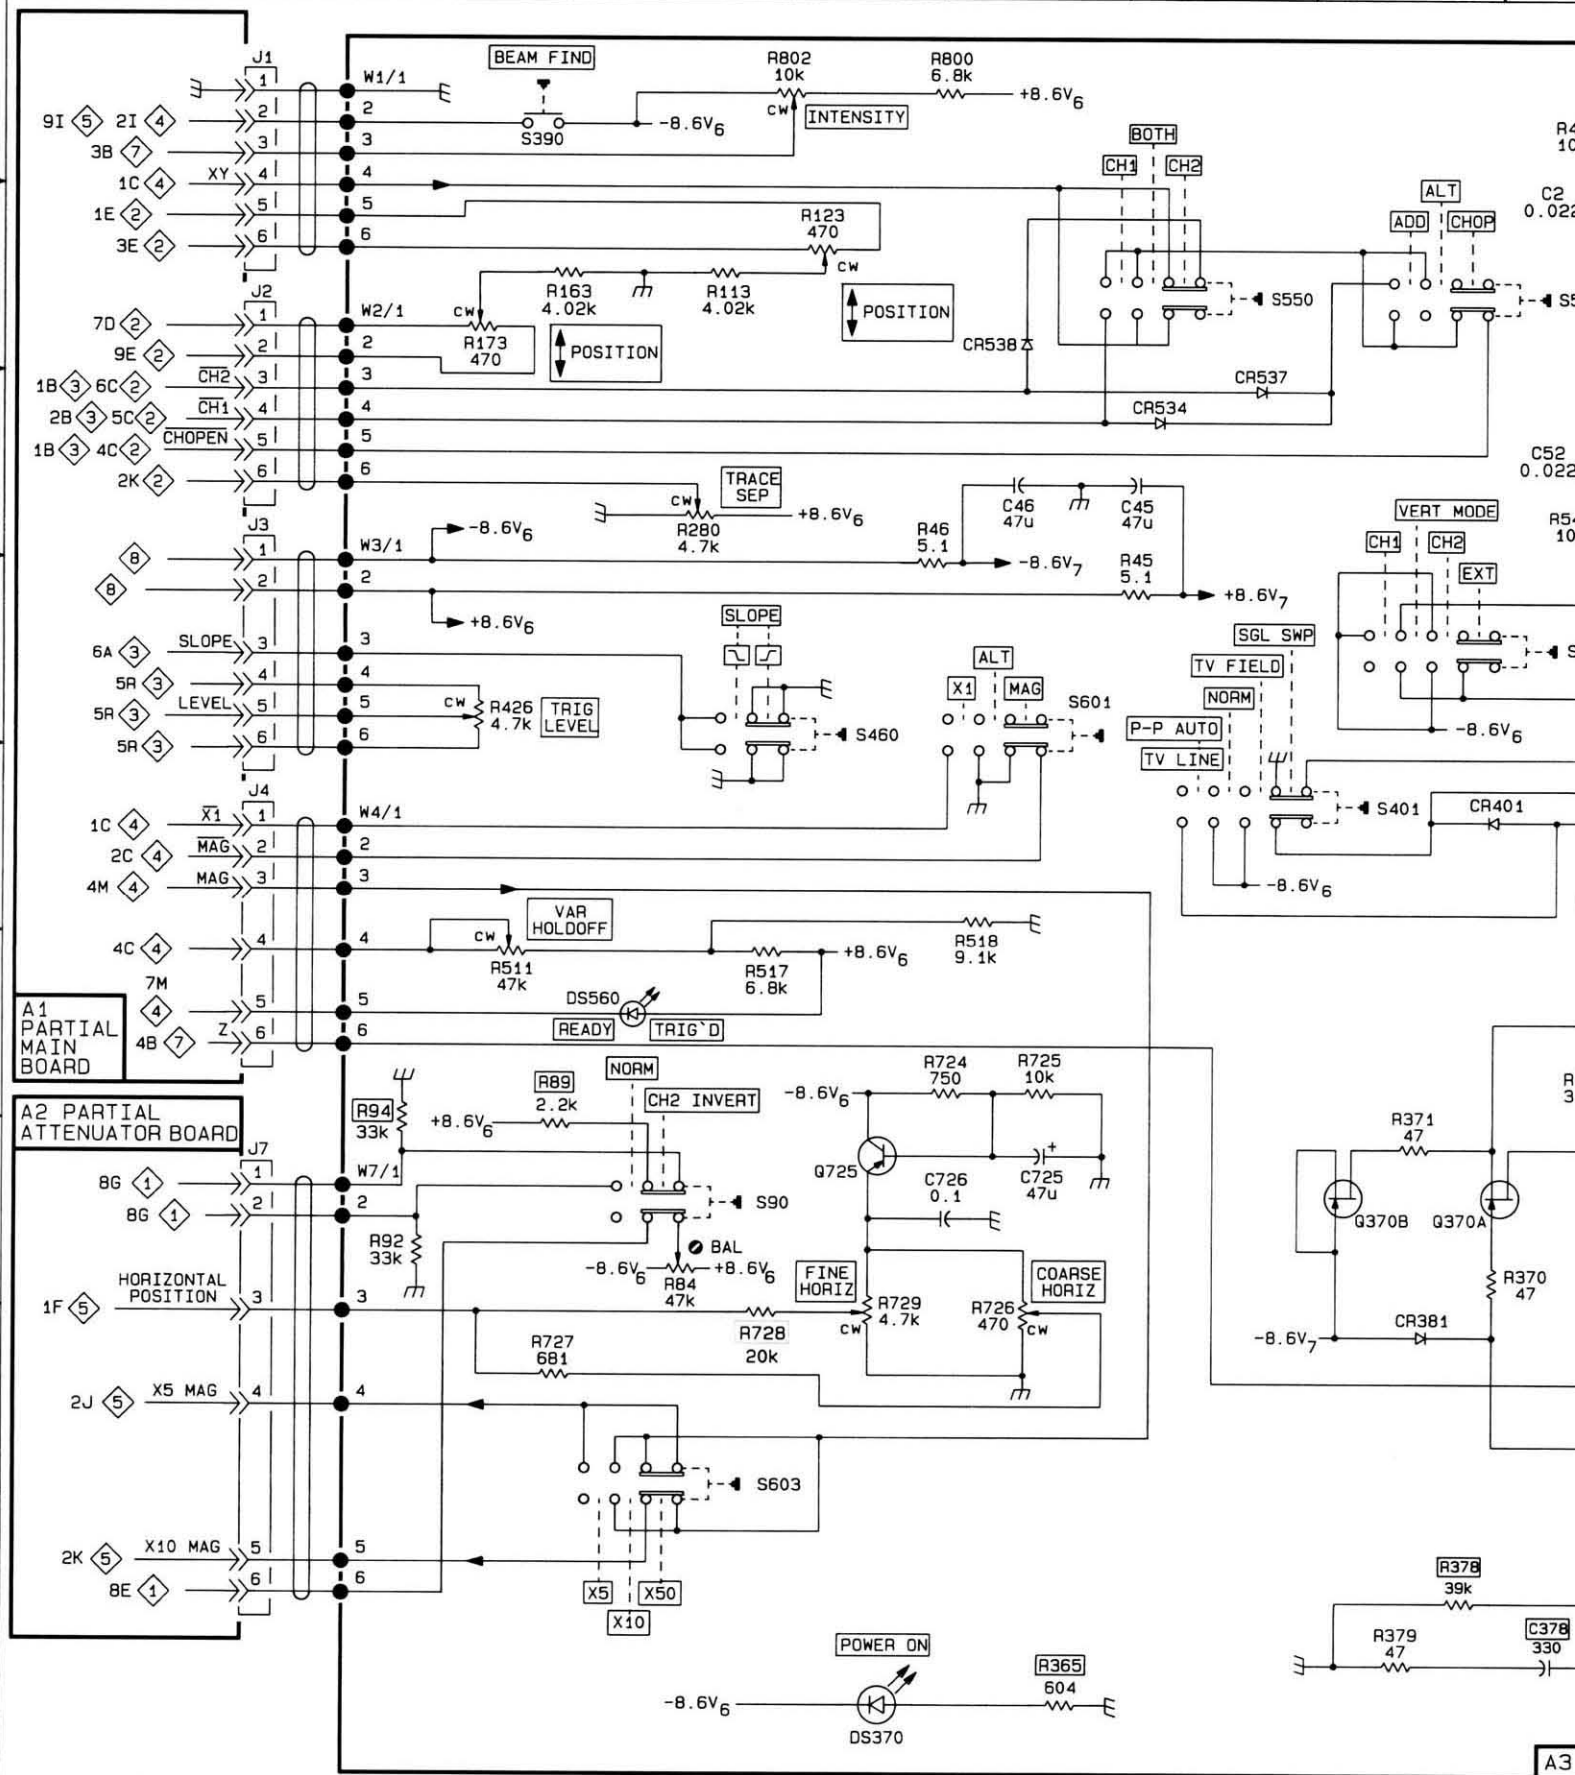

2225

6299-06
REV APR 1990


A3

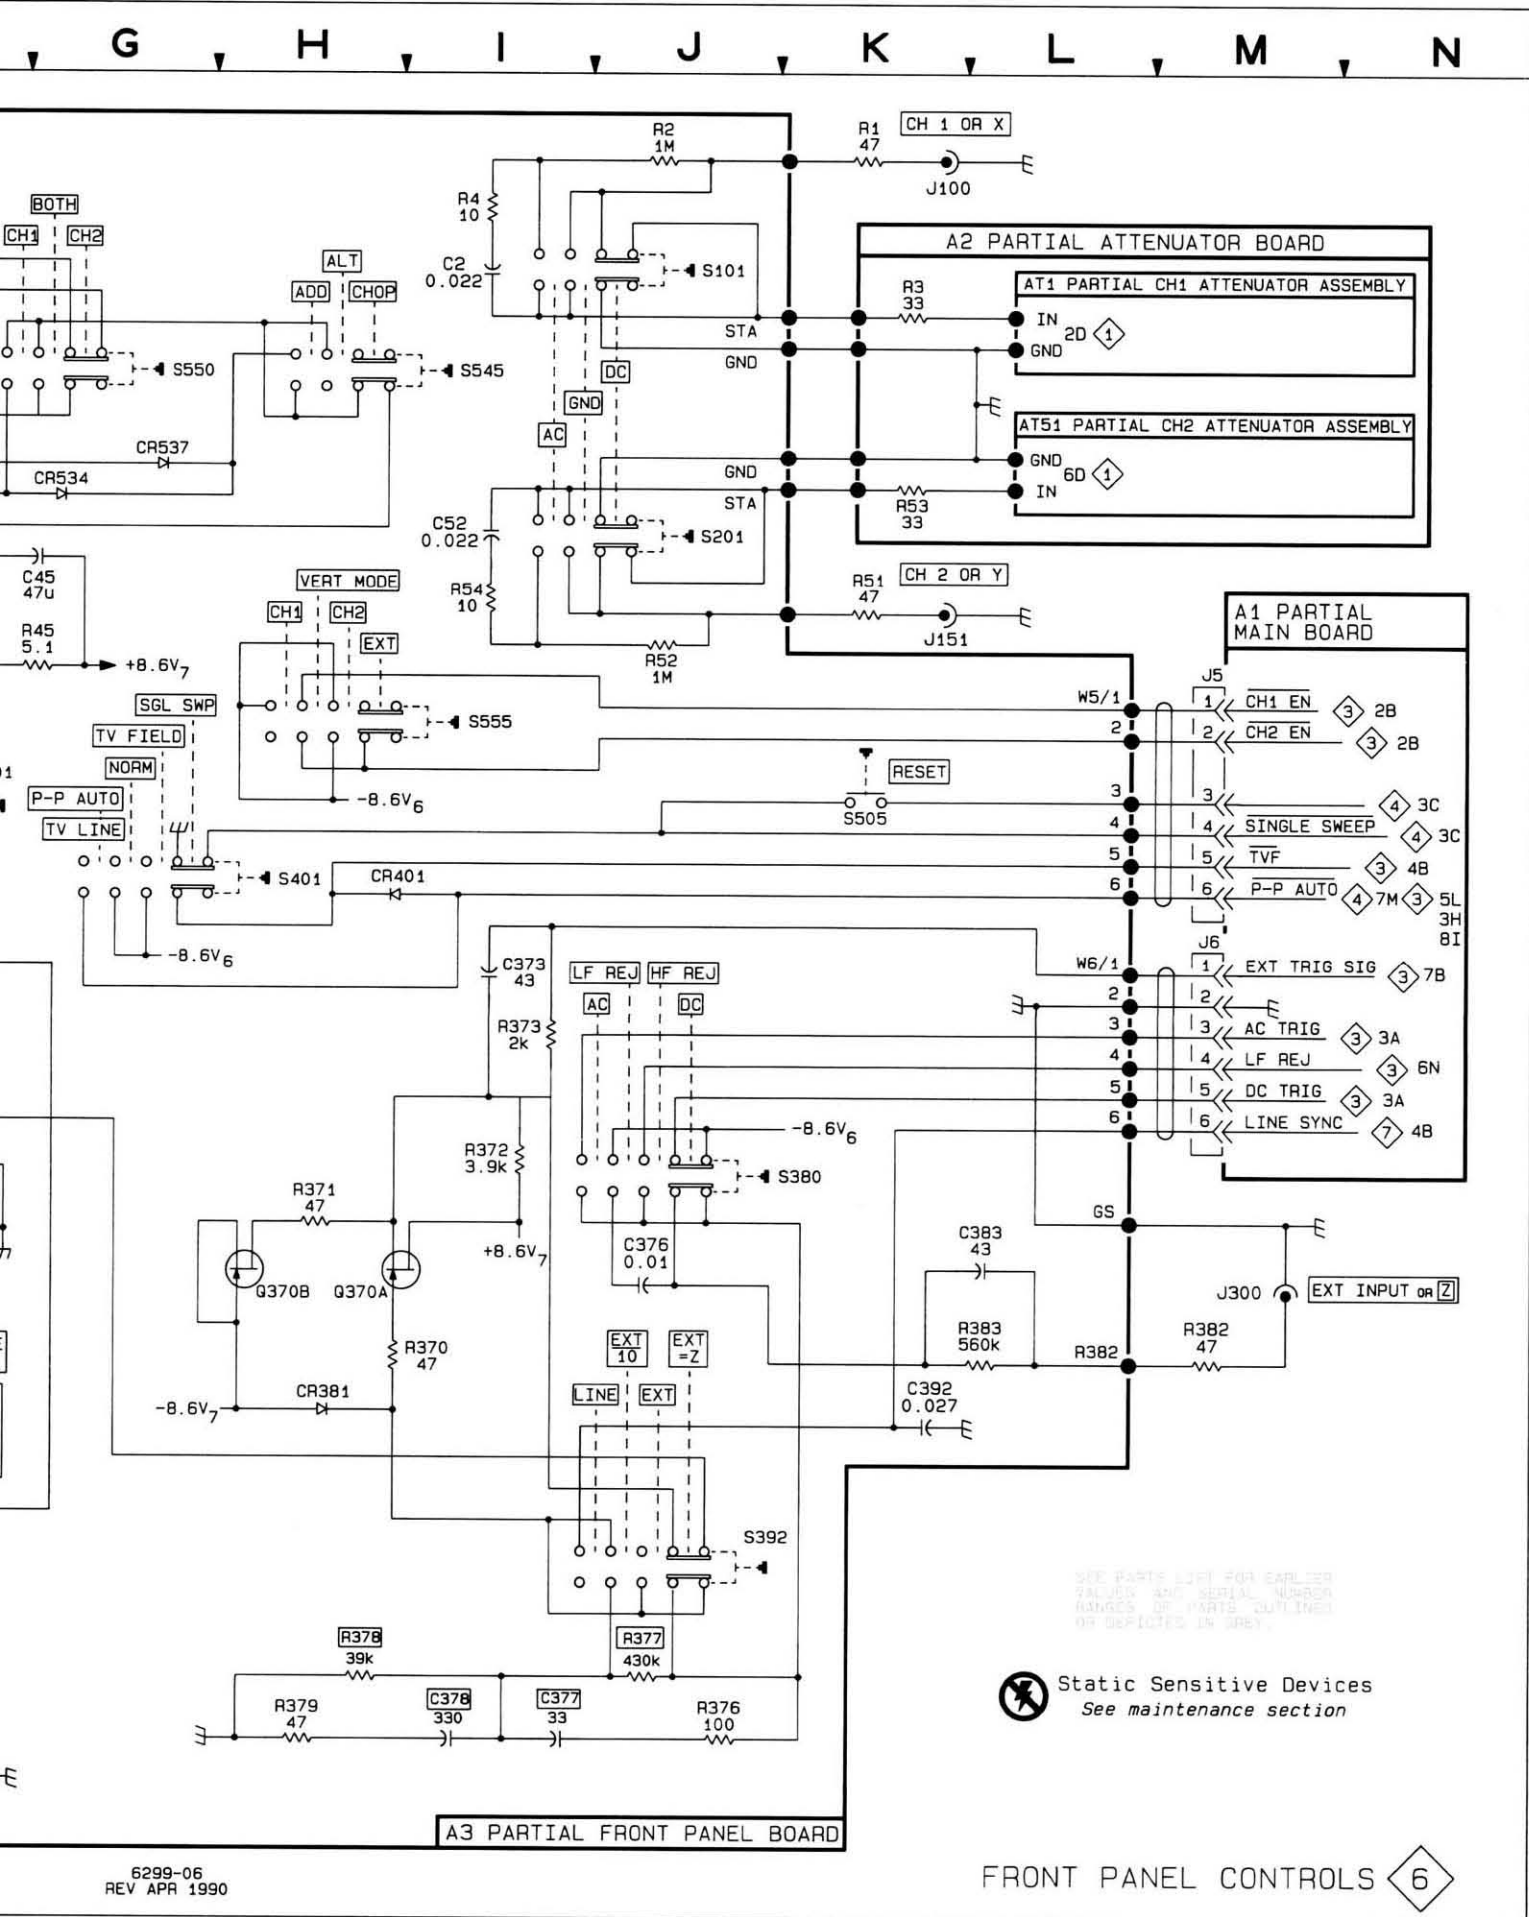


WAVEFORMS FOR DIAGRAM 7

WAVEFORMS FOR DIAGRAM 7


27



28

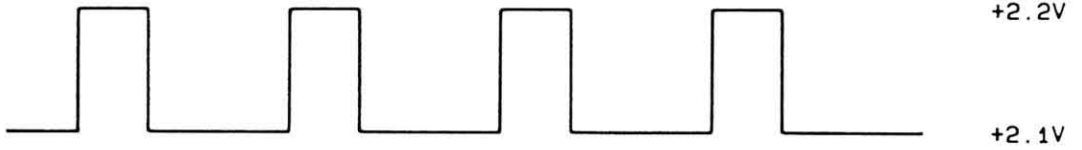


29

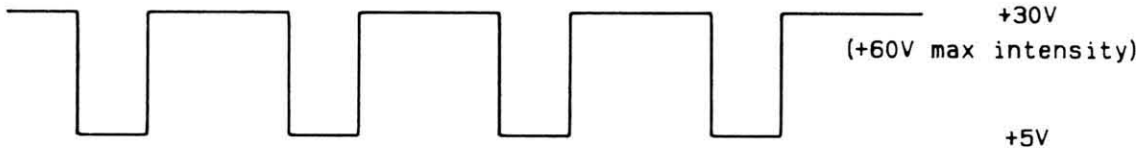


31


30

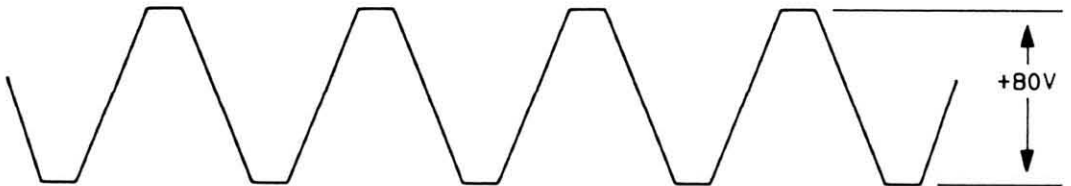


32

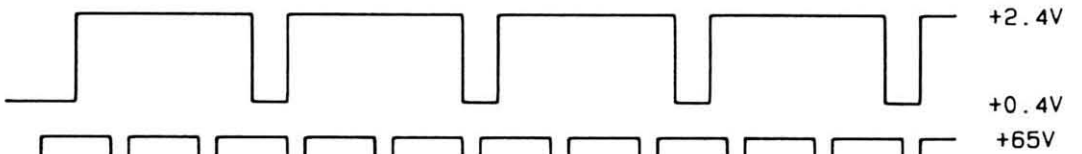

33

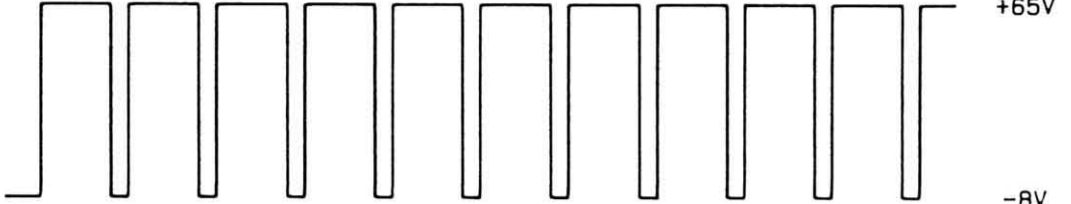

34

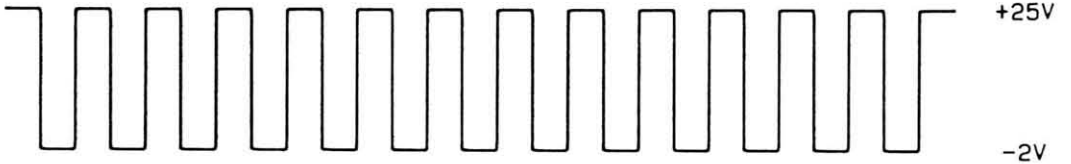

35



POWER SUPPLY, Z-AXIS, & CRT DIAGRAM 7

| ASSEMBLY A1 | | | | | | | | | | | |
|-------------------|-------------------|-------------------|-------------------|-------------------|-------------------|-------------------|-------------------|-------------------|-------------------|-------------------|-------------------|
| CIRCUIT NUMBER | SCHEM LOCATION | BOARD LOCATION | CIRCUIT NUMBER | SCHEM LOCATION | BOARD LOCATION | CIRCUIT NUMBER | SCHEM LOCATION | BOARD LOCATION | CIRCUIT NUMBER | SCHEM LOCATION | BOARD LOCATION |
| C805 | 5H | 5G | CR827 | 3D | 3G | R818 | 3C | 5E | R928 | 7G | 10J |
| C824 | 4C | 5F | CR828 | 3D | 3G | R819 | 2D | 5F | R929 | 6F | 9K |
| C825 | 3D | 3G | CR829 | 3E | 4G | R820 | 4C | 5E | R930 | 6F | 9K |
| C828 | 4D | 3G | CR840 | 3F | 3H | R821 | 3C | 5E | R931 | 6G | 10J |
| C832 | 2E | 4H | CR845 | 3F | 3H | R822 | 4D | 8B | R932 | 8E | 8K |
| C834 | 4F | 3G | CR851 | 4H | 7G | R823 | 4D | 5F | R933 | 7G | 9J |
| C835 | 4F | 3H | CR853 | 4H | 5H | R825 | 3D | 5F | R934 | 8E | 7K |
| C845 | 3F | 3H | CR854 | 3I | 5I | R830 | 3E | 4G | R935 | 6H | 8J |
| C847* | 3F | 3H | CR855 | 3I | 5I | R832 | 3E | 4G | R936 | 6I | 9J |
| C849* | 2F | 3H | CR912 | 5D | 10K | R834 | 4E | 3G | R937 | 6I | 8I |
| C851* | 4H | 7G | CR915 | 7E | 8K | R835 | 4E | 3G | R938 | 6I | 9J |
| C853 | 5I | 8I | CR923 | 8F | 10J | R836 | 4E | 3G | R939 | 6I | 9J |
| C854 | 4I | 5H | CR933 | 8F | 10K | R840 | 3E | 3H | R940 | 7F | 10K |
| C855 | 4H | 5I | CR953 | 5I | 9I | R841 | 3E | 4H | R941 | 8G | 8J |
| C871* | 3M | 6F | CR983 | 7I | 9J | R842 | 3F | 4H | R942 | 6G | 8J |
| C875* | 5M | 5G | CR984* | 6K | 8H | R844 | 3E | 3H | R943 | 6H | 8I |
| C893 | 3K | 4I | CR985* | 7K | 8H | R845 | 3E | 3H | R944 | 8H | 7I |
| C901 | 5A | 7J | CR986* | 7K | 8H | R849 | 2F | 3I | R945 | 8H | 8J |
| C902 | 5A | 7I | CR987* | 7K | 8H | R850 | 4I | 7G | R946 | 8H | 7J |
| C908 | 8D | 8K | CR988* | 8K | 8H | R851 | 4H | 7G | R952 | 6J | 10H |
| C909 | 6D | 7J | CR989* | 8K | 8H | R852 | 4H | 7F | R953 | 6J | 9I |
| C910 | 6D | 7J | CR990 | 8K | 9H | R853 | 4I | 7I | R965 | 8H | 8J |
| C912 | 6E | 8K | CR991 | 9K | 9H | R854 | 4I | 5H | R966 | 8I | 9J |
| C913 | 7E | 8K | | | | R858 | 3I | 5J | R967 | 7I | 8J |
| C914 | 8E | 7J | DS856 | 3H | 5J | R860 | 3H | 5J | R968 | 8I | 9J |
| C915 | 5D | 10K | DS858 | 3H | 5J | R870 | 3M | 6G | R969 | 8I | 9J |
| C924 | 8F | 9K | DS870 | 4J | 4J | R872 | 4M | 3K | R975 | 3J | 6H |
| C927 | 6F | 9J | | | | R873 | 4M | 2K | R976 | 4J | 6J |
| C932 | 6I | 8J | J1-3 | 4B | 6A | R874 | 5M | 5G | R978 | 4J | 5J |
| C933 | 6I | 8J | J4-6 | 4B | 9A | R875 | 5M | 6F | R982 | 8I | 10I |
| C939 | 7F | 9K | J6-6 | 4B | 10A | R877 | 7K | 5I | R983 | 7J | 9J |
| C940 | 6I | 9J | | | | R885 | 2G | 5G | | | |
| C941 | 8H | 7J | L910 | 5E | 6K | R886 | 2I | 4H | T902 | 9K | 9I |
| C942 | 6H | 7I | L970 | 5E | 8I | R888 | 2I | 4H | | | |
| C952 | 6I | 9I | L986 | 7K | 8G | R889 | 2I | 4H | TP842 | 3G | 4H |
| C953 | 6J | 8I | L988 | 8K | 9G | R890 | 2I | 4H | TP972 | 5F | 8G |
| C962 | 8I | 8J | L990 | 8K | 9G | R891 | 2J | 4I | TP984 | 6K | 7G |
| C963 | 8I | 8J | | | | R892* | 2K | 4I | TP987 | 7L | 9G |
| C970 | 8I | 9J | P900 | 5K | 5J | R894 | 3K | 5I | TP989 | 8L | 9G |
| C971 | 5E | 7I | | | | R898 | 6D | 7J | TP991 | 8C | 10G |
| C972 | 6H | 8I | Q804 | 3B | 5H | R899 | 5B | 10G | | | |
| C975 | 3J | 5K | Q817 | 2C | 4E | R900 | 5A | 8I | U910 | 7D | 8K |
| C976 | 4J | 5K | Q825 | 3D | 4G | R901 | 6A | 7J | U920A | 7F | 9K |
| C979 | 4J | 5K | Q829 | 3E | 4H | R907 | 6D | 7J | U920B | 6F | 9K |
| C982 | 7I | 9J | Q835 | 4E | 3H | R908 | 8D | 8K | U940 | 7H | 8J |
| C983 | 7J | 8J | Q840 | 3F | 4H | R909 | 6D | 7J | U975 | 3J | 6H |
| C984 | 7K | 7H | Q845 | 3F | 4H | R910 | 6D | 8J | | | |
| C986 | 7K | 8H | Q885 | 2I | 5H | R911 | 7E | 8K | VR910 | 6D | 7J |
| C987 | 7L | 8F | Q911 | 6E | 7J | R912 | 6E | 8K | VR931 | 8G | 9K |
| C988 | 7K | 8H | Q912 | 5E | 11K | R913 | 7E | 8K | VR939 | 6I | 8I |
| C989 | 8L | 9F | Q913 | 5D | 11K | R914 | 7D | 8K | VR942 | 6H | 8I |
| C990 | 8K | 8H | Q918 | 8D | 7K | R915 | 7E | 8K | VR969 | 7I | 8J |
| C991 | 8L | 9F | Q921 | 6E | 10J | R916 | 6E | 10K | | | |
| | | | Q923 | 8F | 11J | R917 | 8E | 7K | W90 | 7M | 7G |
| CR816 | 3C | 4E | Q930 | 7I | 9J | R918 | 8D | 8K | W701-5 | 2B | 5E |
| CR817 | 3C | 4E | Q940 | 6J | 10J | R919 | 6D | 10K | W893 | 2L | 4I |
| CR818 | 3C | 5E | Q950 | 6J | 11H | R920 | 5D | 10K | W971 | 5F | 4K |
| CR819 | 3C | 5E | Q960 | 8I | 9J | R921 | 6F | 10J | W972 | 5F | 8G |
| CR820 | 3C | 5F | Q970 | 8J | 10J | R922 | 7E | 8K | W984 | 6K | 7G |
| CR821 | 3C | 5E | Q980 | 8J | 10I | R923 | 8D | 10J | W985 | 7K | 4K |
| CR822 | 2C | 2F | | | | R924 | 8F | 10K | W987 | 7L | 8G |
| CR823 | 3D | 4F | R804 | 4B | 5G | R925 | 7F | 9K | W989 | 8L | 9G |
| CR824 | 3D | 4G | R805 | 2C | 5G | R926 | 7F | 10K | W991 | 8L | 10G |
| CR825 | 3E | 4G | R806 | 4E | 6H | R927 | 7G | 10K | | | |

Partial A1 also shown on diagrams 2, 3, 4, 5 and 6.

*See Parts List for
serial number ranges.

POWER SUPPLY, Z AXIS, & CRT DIAGRAM 7 (CONT)

| ASSEMBLY A3 | | | | | | | | | | | |
|---|-------------------|-------------------|-------------------|-------------------|-------------------|-------------------|-------------------|-------------------|-------------------|-------------------|-------------------|
| CIRCUIT NUMBER | SCHEM LOCATION | BOARD LOCATION | CIRCUIT NUMBER | SCHEM LOCATION | BOARD LOCATION | CIRCUIT NUMBER | SCHEM LOCATION | BOARD LOCATION | CIRCUIT NUMBER | SCHEM LOCATION | BOARD LOCATION |
| J987 | 2M | 2A | R802 | 4A | 1A | W1-3 | 4A | 4A | | | |
| R800 | 3A | 2A | R986 | 2M | 3A | W4-6 | 4A | 4E | | | |
| | | | R987 | 2M | 2A | W6-6 | 5A | 4F | | | |
| Partial A3 also shown on diagrams 1, 2, 3, 4 and 6. | | | | | | | | | | | |
| ASSEMBLY A4 | | | | | | | | | | | |
| CIRCUIT NUMBER | SCHEM LOCATION | BOARD LOCATION | CIRCUIT NUMBER | SCHEM LOCATION | BOARD LOCATION | CIRCUIT NUMBER | SCHEM LOCATION | BOARD LOCATION | CIRCUIT NUMBER | SCHEM LOCATION | BOARD LOCATION |
| C900 | 5C | 2D | CR904 | 6C | 1C | L902 | 8B | 2B | R906 | 6B | 1D |
| C903 | 8B | 3C | | | | | | | | | |
| C904 | 8C | 3D | F901 | 9B | 1B | Q900 | 5C | 1D | S901 | 8C | 4C |
| C905* | 8B | 4B | | | | | | | S902 | 7C | 4A |
| | | | J901 | 8B | 2A | R902 | 6C | 1D | | | |
| CR901 | 6B | 1D | J902 | 6B | 2B | R903 | 5C | 1D | W903-1 | 5C | 1D |
| CR902 | 6C | 1C | | | | R904 | 5C | 1D | W903-2 | 6C | 1D |
| CR903 | 6B | 1C | L901 | 8B | 3C | R905 | 6B | 1D | W903-3 | 5B | 1D |
| ASSEMBLY A5 | | | | | | | | | | | |
| CIRCUIT NUMBER | SCHEM LOCATION | BOARD LOCATION | CIRCUIT NUMBER | SCHEM LOCATION | BOARD LOCATION | CIRCUIT NUMBER | SCHEM LOCATION | BOARD LOCATION | CIRCUIT NUMBER | SCHEM LOCATION | BOARD LOCATION |
| R893* | 2L | 1A | | | | | | | | | |
| CHASSIS MOUNTED PARTS | | | | | | | | | | | |
| CIRCUIT NUMBER | SCHEM LOCATION | BOARD LOCATION | CIRCUIT NUMBER | SCHEM LOCATION | BOARD LOCATION | CIRCUIT NUMBER | SCHEM LOCATION | BOARD LOCATION | CIRCUIT NUMBER | SCHEM LOCATION | BOARD LOCATION |
| T901 | 6B | CHASSIS | V900 | 3L | CHASSIS | | | | | | |

*See Parts List for
serial number ranges.

A B C D E F G H

1
2
3
4
5
6
7
8
9

← WAVEFORMS

A3 PARTIAL FRONT PANEL BOARD


INTENSITY

W1

W4

W5


LINE SYNC

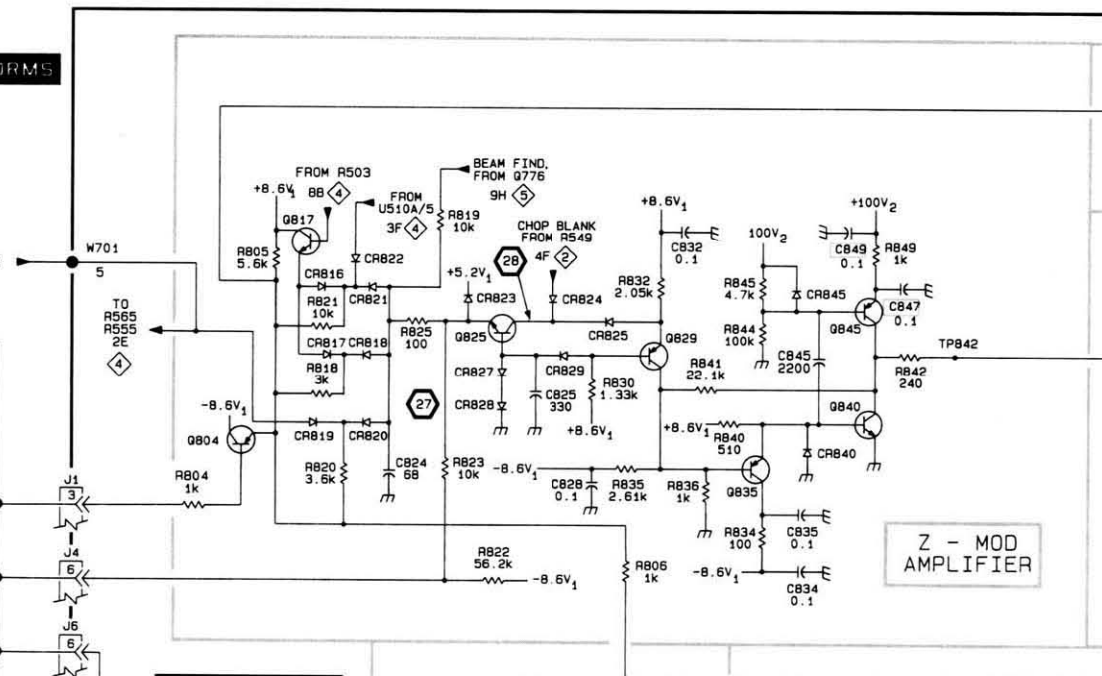

AUTO FOCUS

GRID BIAS

Z - MOD AMPLIFIER

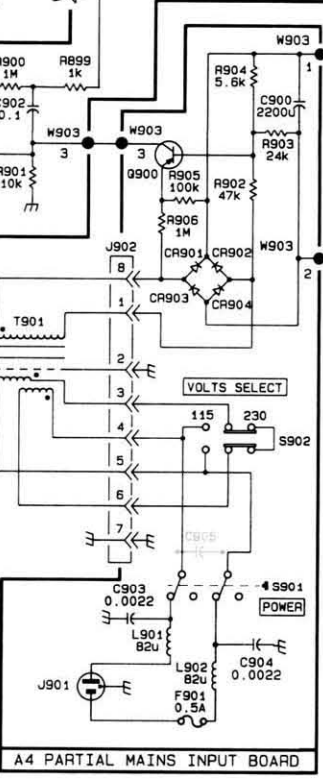


PREREGULATOR

SERIES REGULATOR

INVERTER

SEE PARTS LIST FOR EXACT
VALUES AND SERIAL NUMBERS
RANGES OF PARTS OUTLINED
OR IDENTIFIED IN GREY.

H J I K L M N



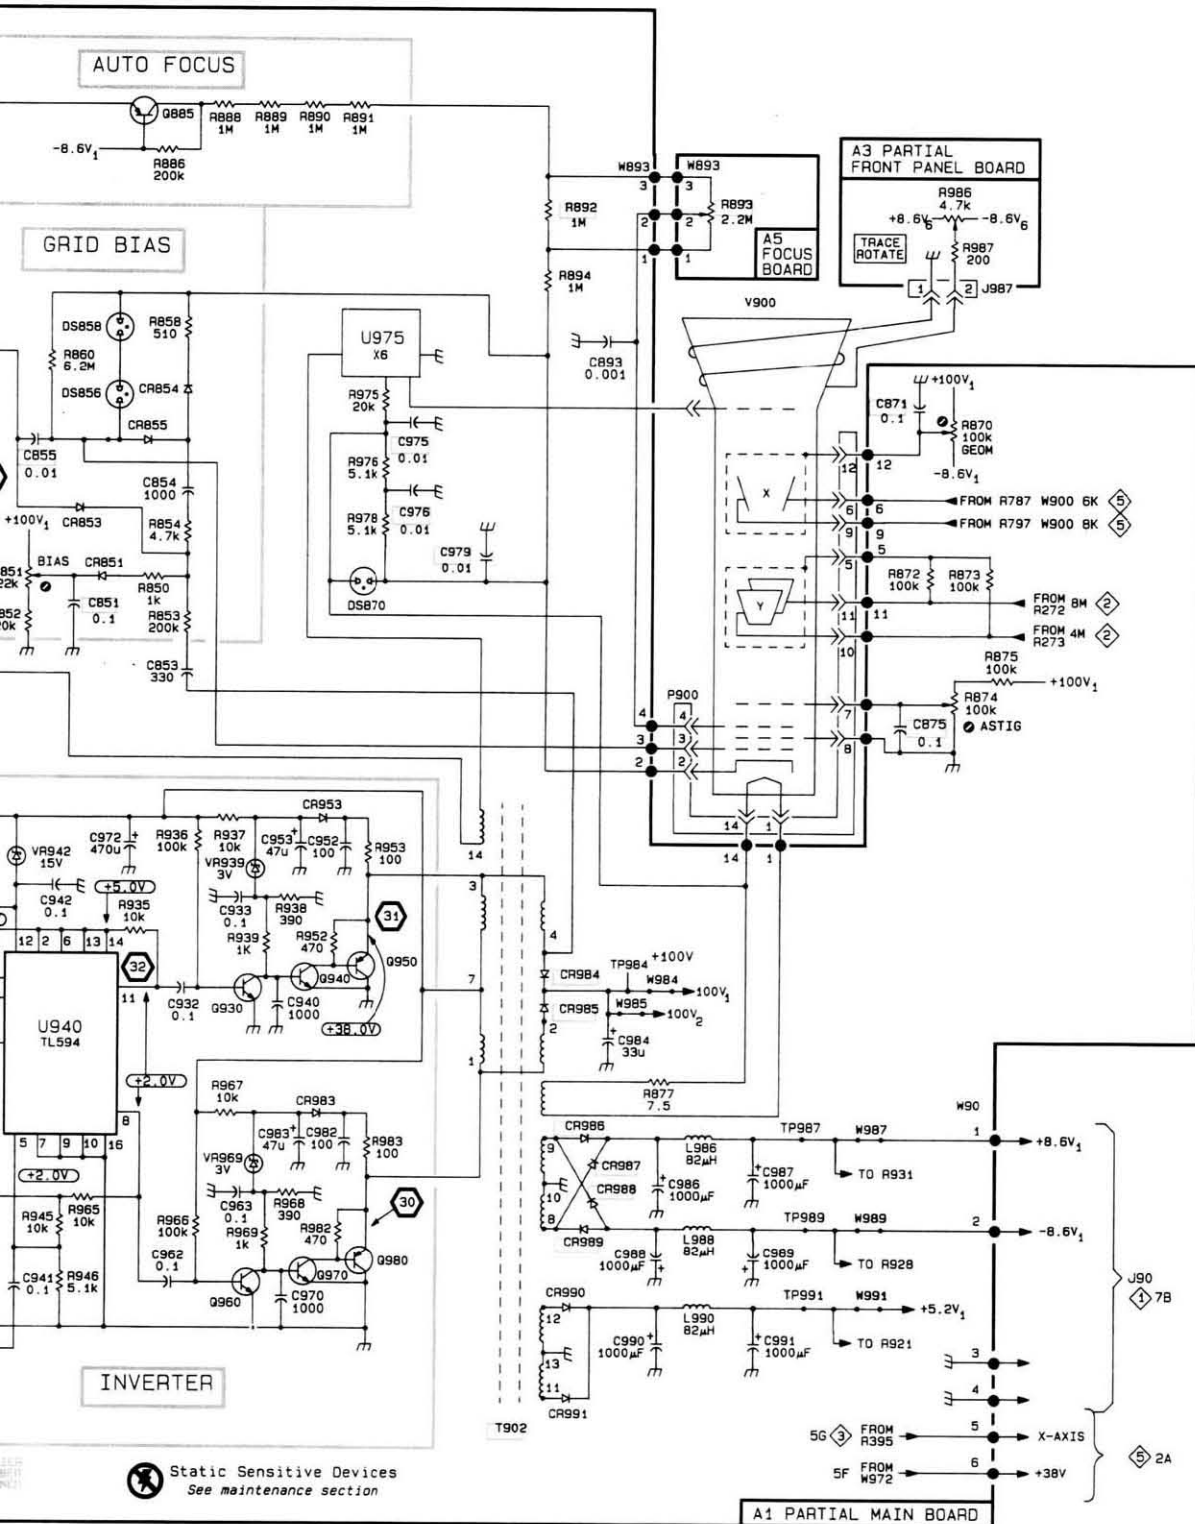



POWER SUPPLY,
Z-AXIS & CRT

7

POWER SUPPLY, Z-AXIS & CRT

7

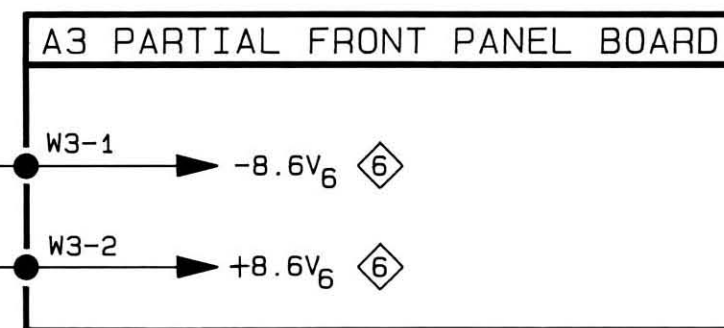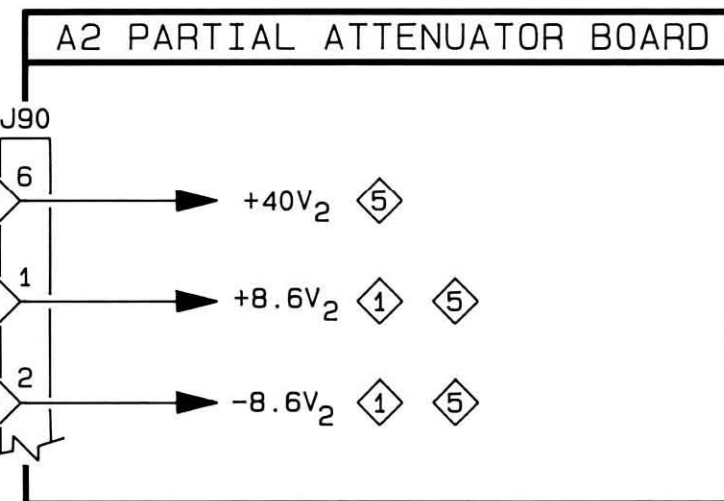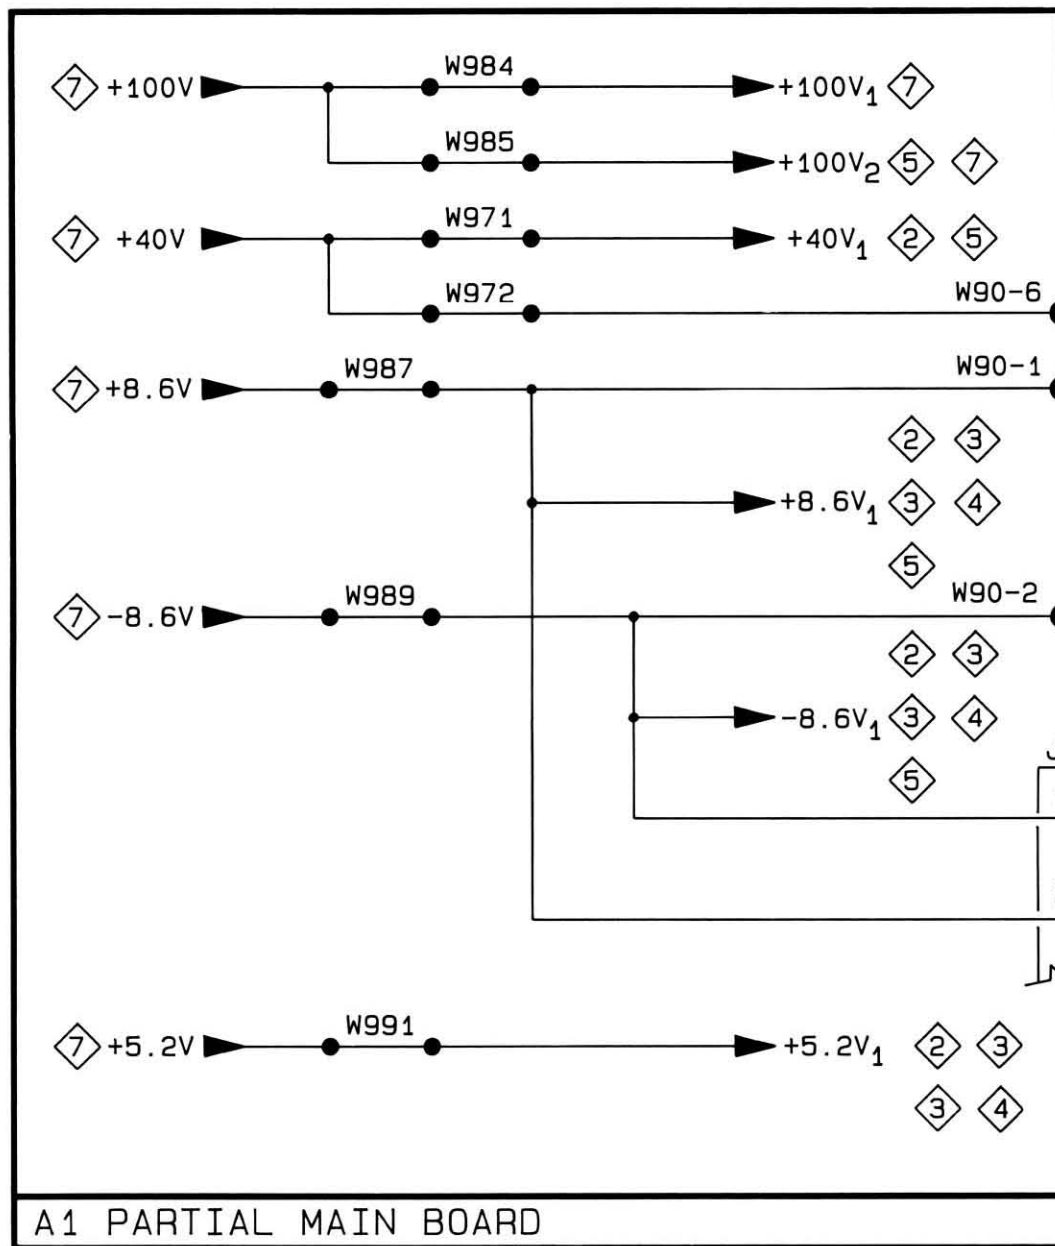

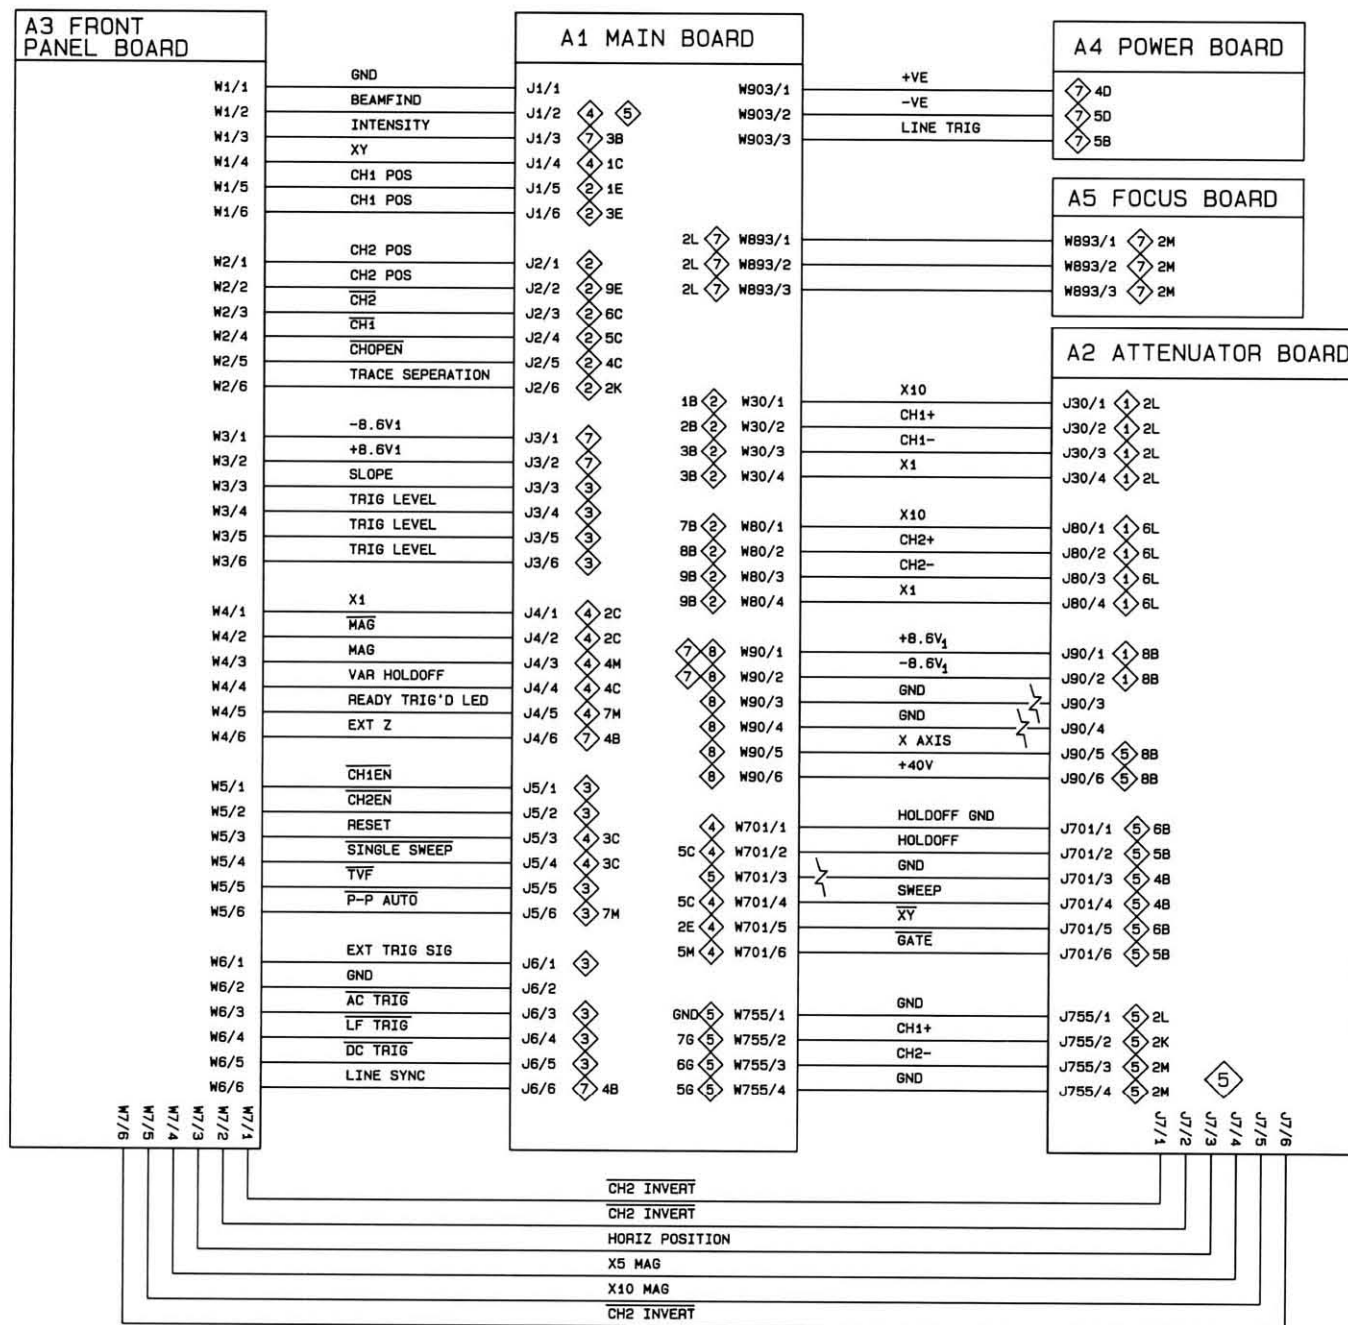

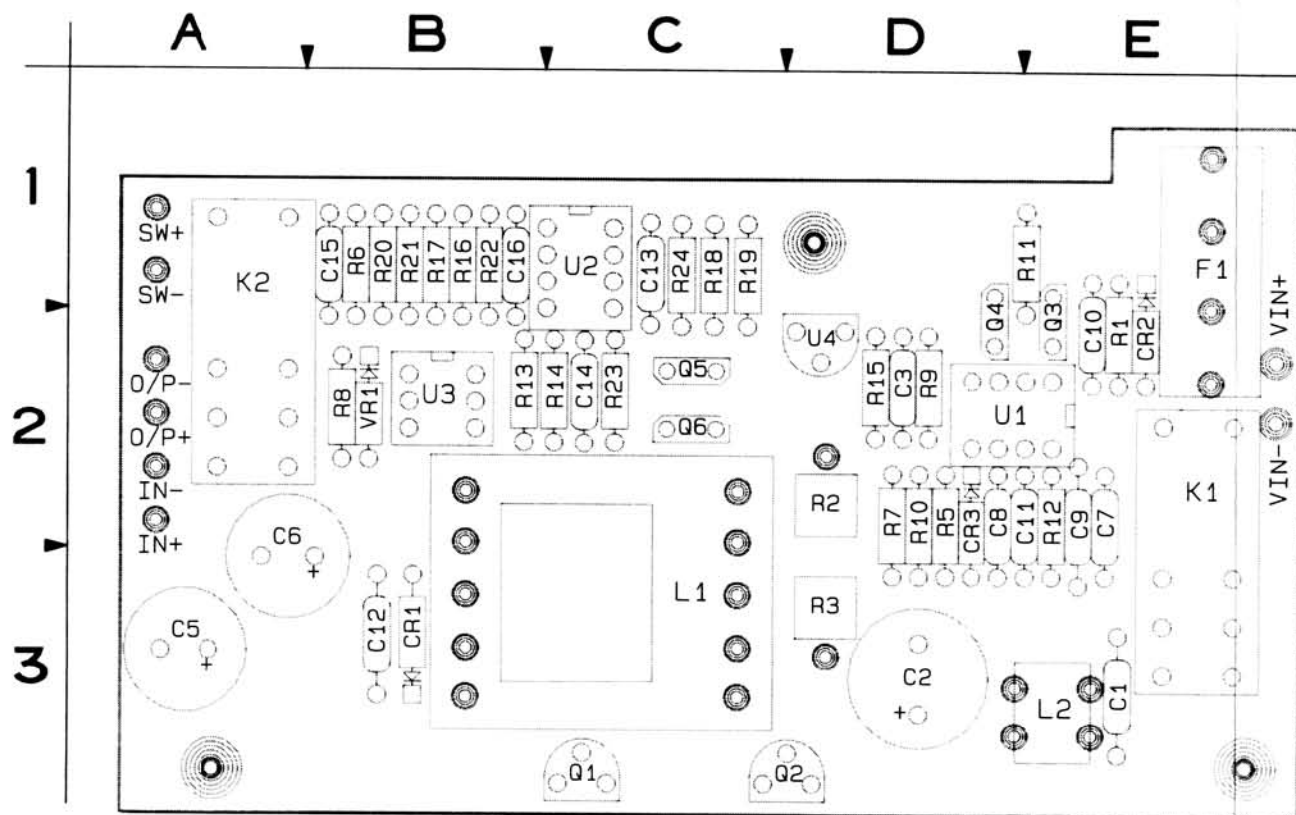



Fig. 9-10. A6—Option 07 Inverter board.

6299-14



Static Sensitive Devices
See Maintenance Section


COMPONENT NUMBER EXAMPLE

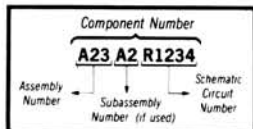

Chassis-mounted components have no Assembly Number prefix—see end of Replaceable Electrical Parts List.

OPTION 07 INVERTER DIAGRAM 10

| ASSEMBLY A6 | | | | | | | | | | | |
|-------------------|-------------------|-------------------|-------------------|-------------------|-------------------|-------------------|-------------------|-------------------|-------------------|-------------------|-------------------|
| CIRCUIT NUMBER | SCHEM LOCATION | BOARD LOCATION | CIRCUIT NUMBER | SCHEM LOCATION | BOARD LOCATION | CIRCUIT NUMBER | SCHEM LOCATION | BOARD LOCATION | CIRCUIT NUMBER | SCHEM LOCATION | BOARD LOCATION |
| C1 | 4D | 3E | F1 | 1B | 1E | Q5 | 4D | 2C | R17 | 5B | 1B |
| C2 | 4E | 3D | | | | Q6 | 1F | 2C | R18 | 3C | 1C |
| C3 | 6F | 2D | | | | | | | R19 | 5B | 1C |
| C5 | 2H | 3A | K1 | 3D | 2E | R1 | 6G | 2E | R20 | 3C | 1B |
| C6 | 2H | 2A | K1A | 1D | 2E | R2 | 6H | 2D | R21 | 5C | 1B |
| C7 | 6G | 2E | K1B | 7D | 2E | R3 | 6H | 3D | R22 | 4C | 1B |
| C8 | 6G | 2D | K2 | 5J | 1A | R5 | 4H | 2D | R23 | 3D | 2C |
| C9 | 6F | 2E | K2A | 1J | 1A | R6 | 5J | 1B | R24 | 4D | 1C |
| C10 | 4F | 2E | K2B | 6B | 1A | R7 | 5H | 2D | | | |
| C11 | 6F | 2E | | | | R8 | 1G | 2B | U1 | 4F | 2D |
| C12 | 2H | 3B | L1 | 2G | 3C | R9 | 5F | 2D | U2 | 4C | 1C |
| C13 | 6C | 1C | | | | R10 | 5H | 2D | U3 | 2G | 2B |
| C14 | 5B | 2C | L2A | 1E | 3E | R11 | 4E | 1E | U4 | 2B | 2D |
| C15 | 5C | 1B | L2B | 7E | 3E | R12 | 5F | 2E | | | |
| C16 | 5C | 1B | | | | R13 | 2F | 2B | VR1 | 2G | 2B |
| CR1 | 2G | 3B | Q1 | 4H | 3C | R14 | 3F | 2C | | | |
| CR2 | 1B | 2E | Q2 | 4H | 3C | R15 | 4E | 2D | W903 | 1B | 2A |
| CR3 | 6G | 2D | Q3 | 5E | 2E | R16 | 3B | 1B | W903 | 1J | 2E |
| | | | Q4 | 6F | 2D | | | | | | |
| CHASSIS PARTS | | | | | | | | | | | |
| C17 | 4A | CHASSIS | C18 | 4A | CHASSIS | J90 | 4A | CHASSIS | | | |

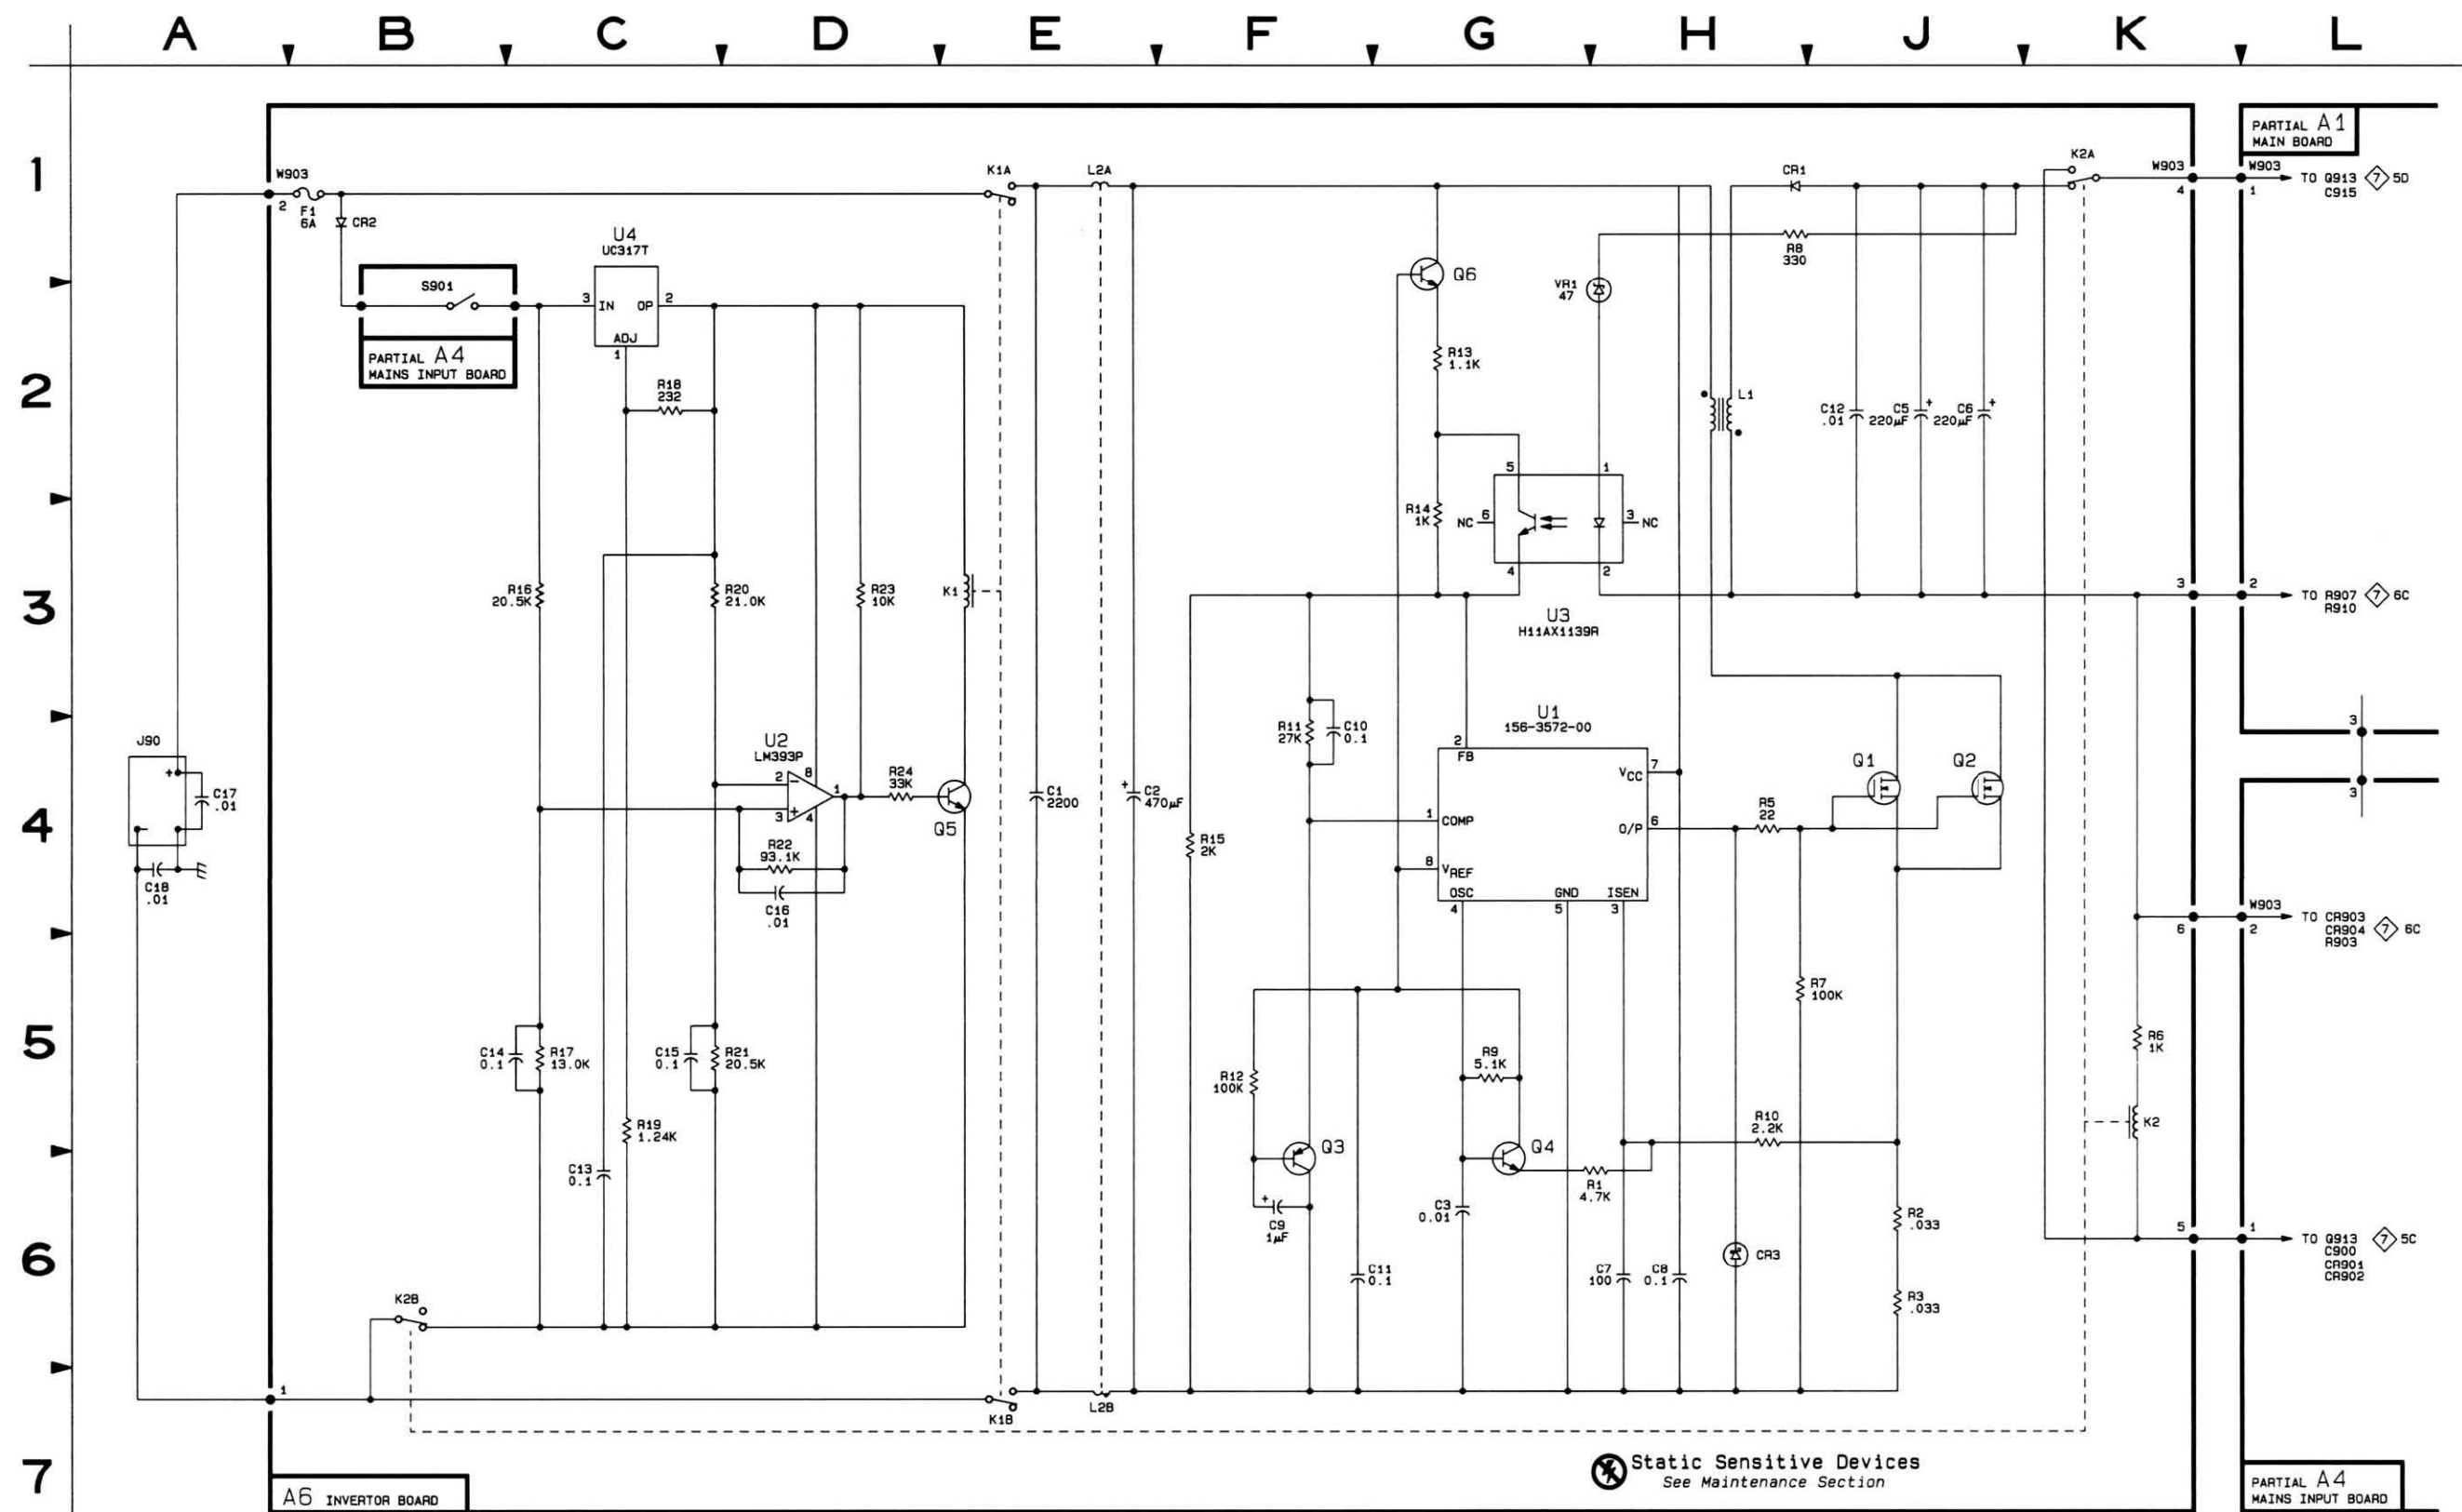

Static Sensitive Devices
See Maintenance Section

A B C D E F G

1

2


3

4

5

6

7

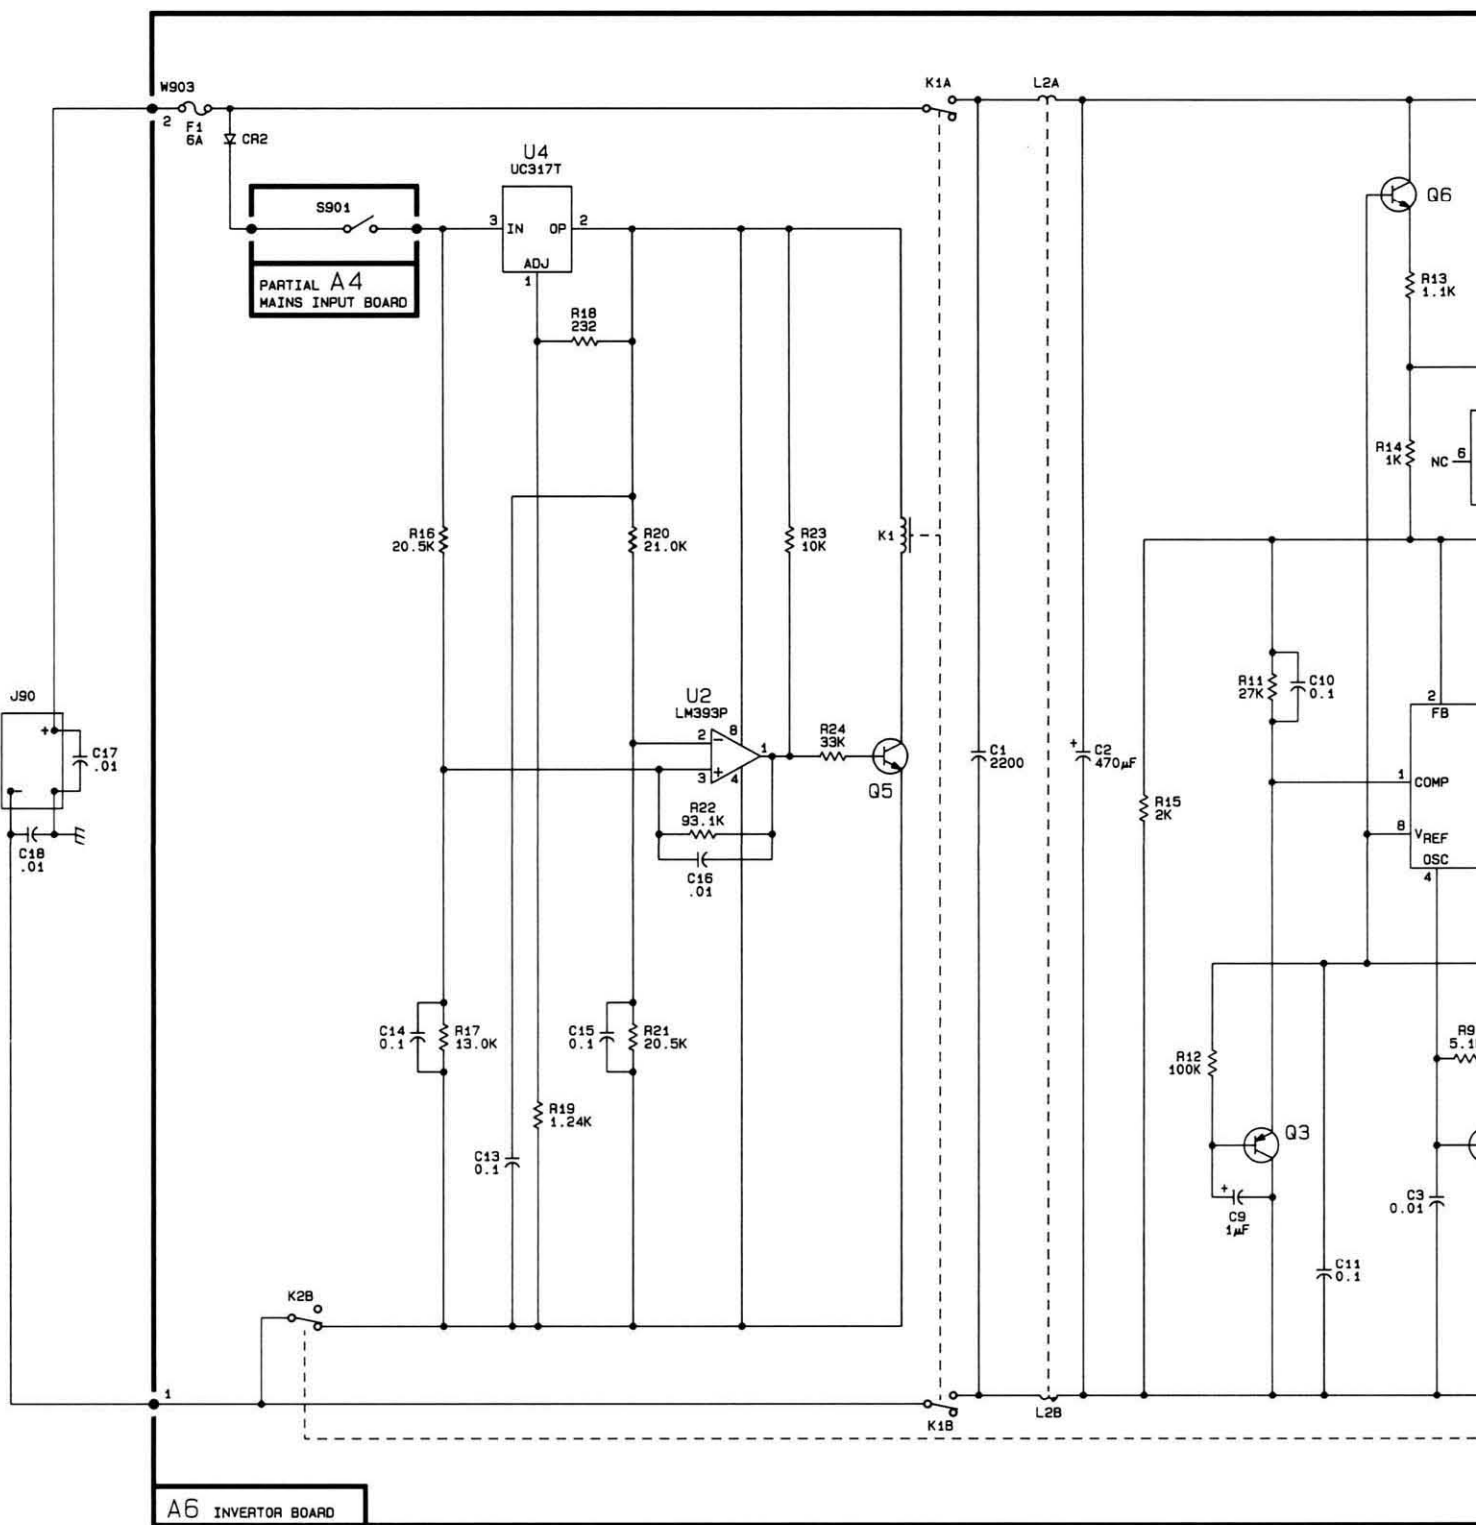

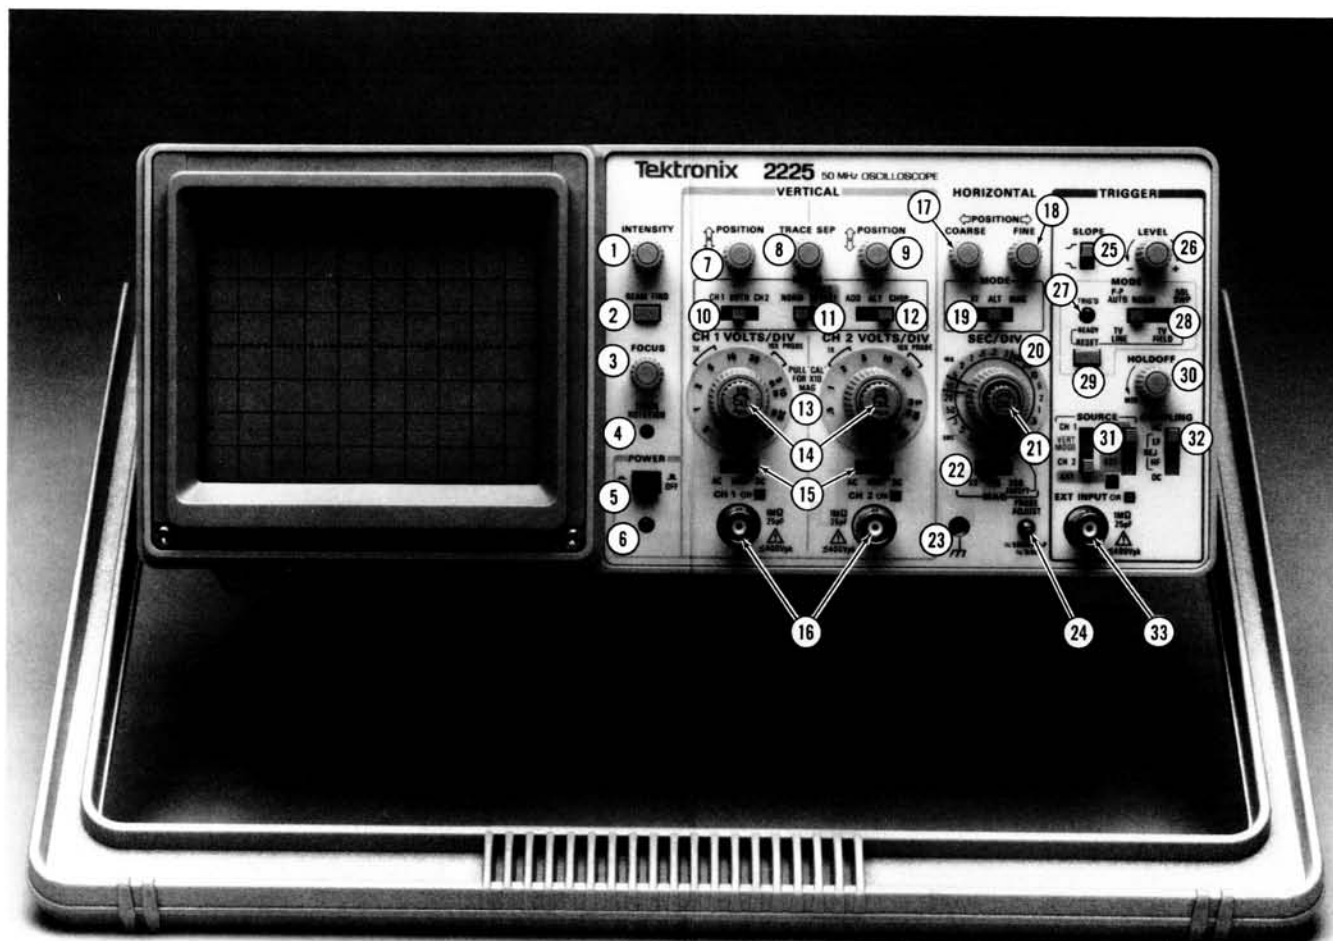
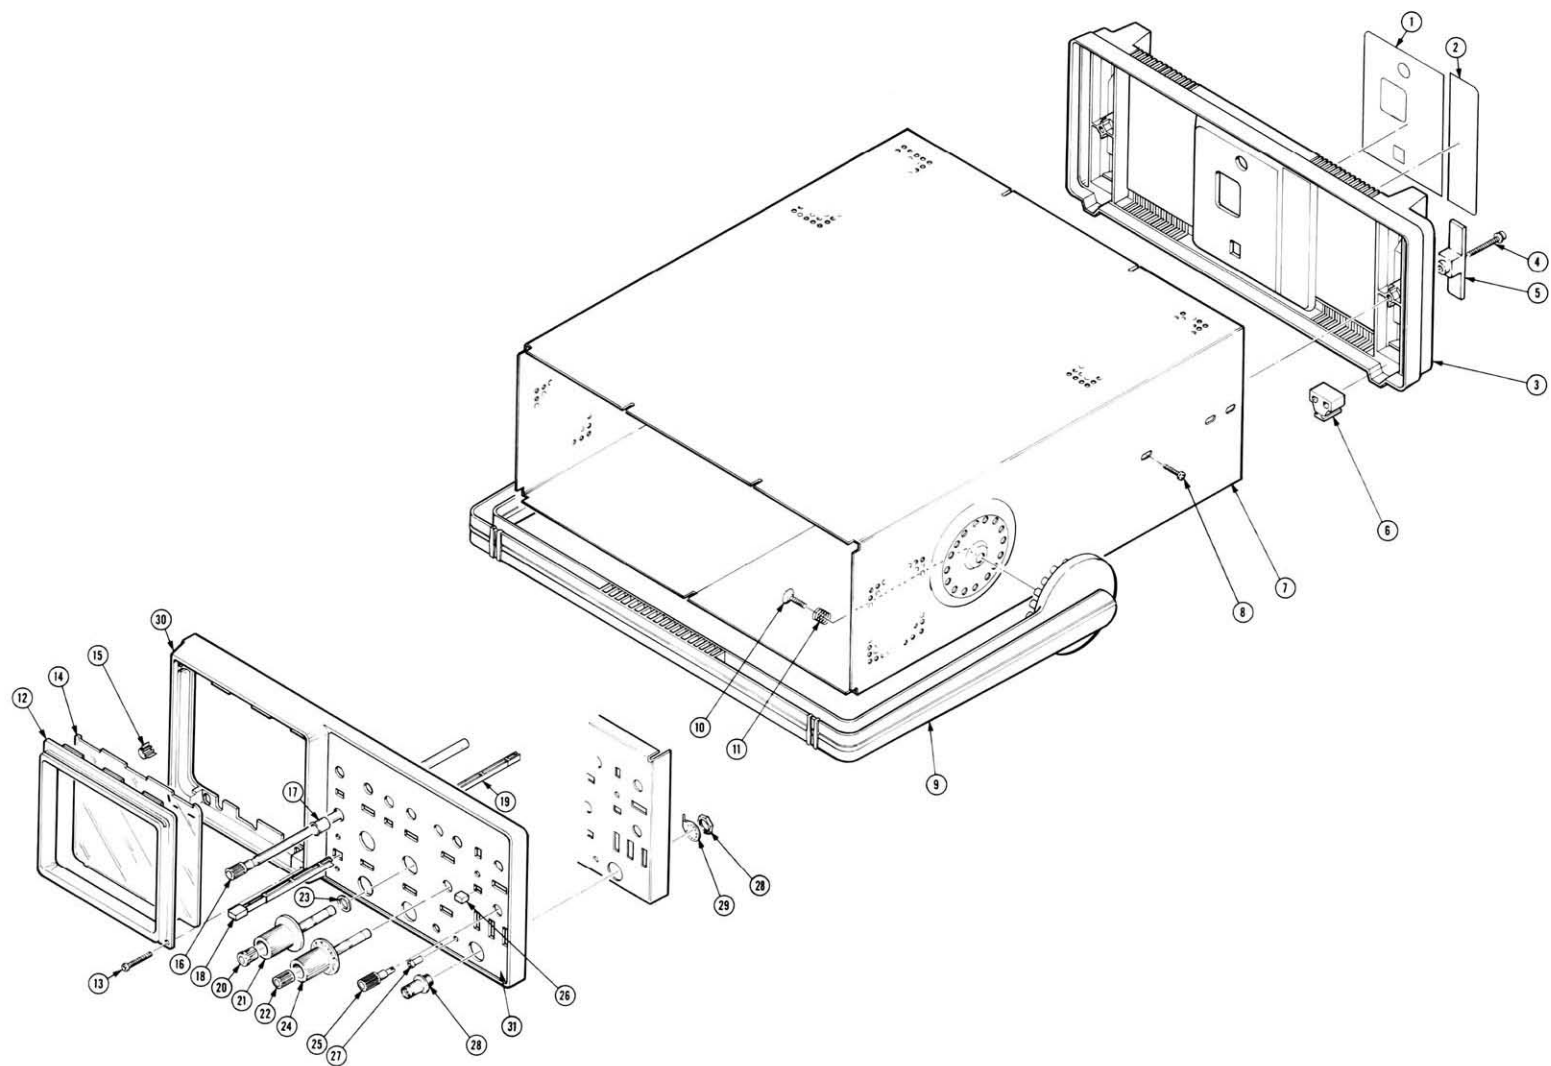


Figure 9-14. 2225 Front panel controls, connectors, and indicators.




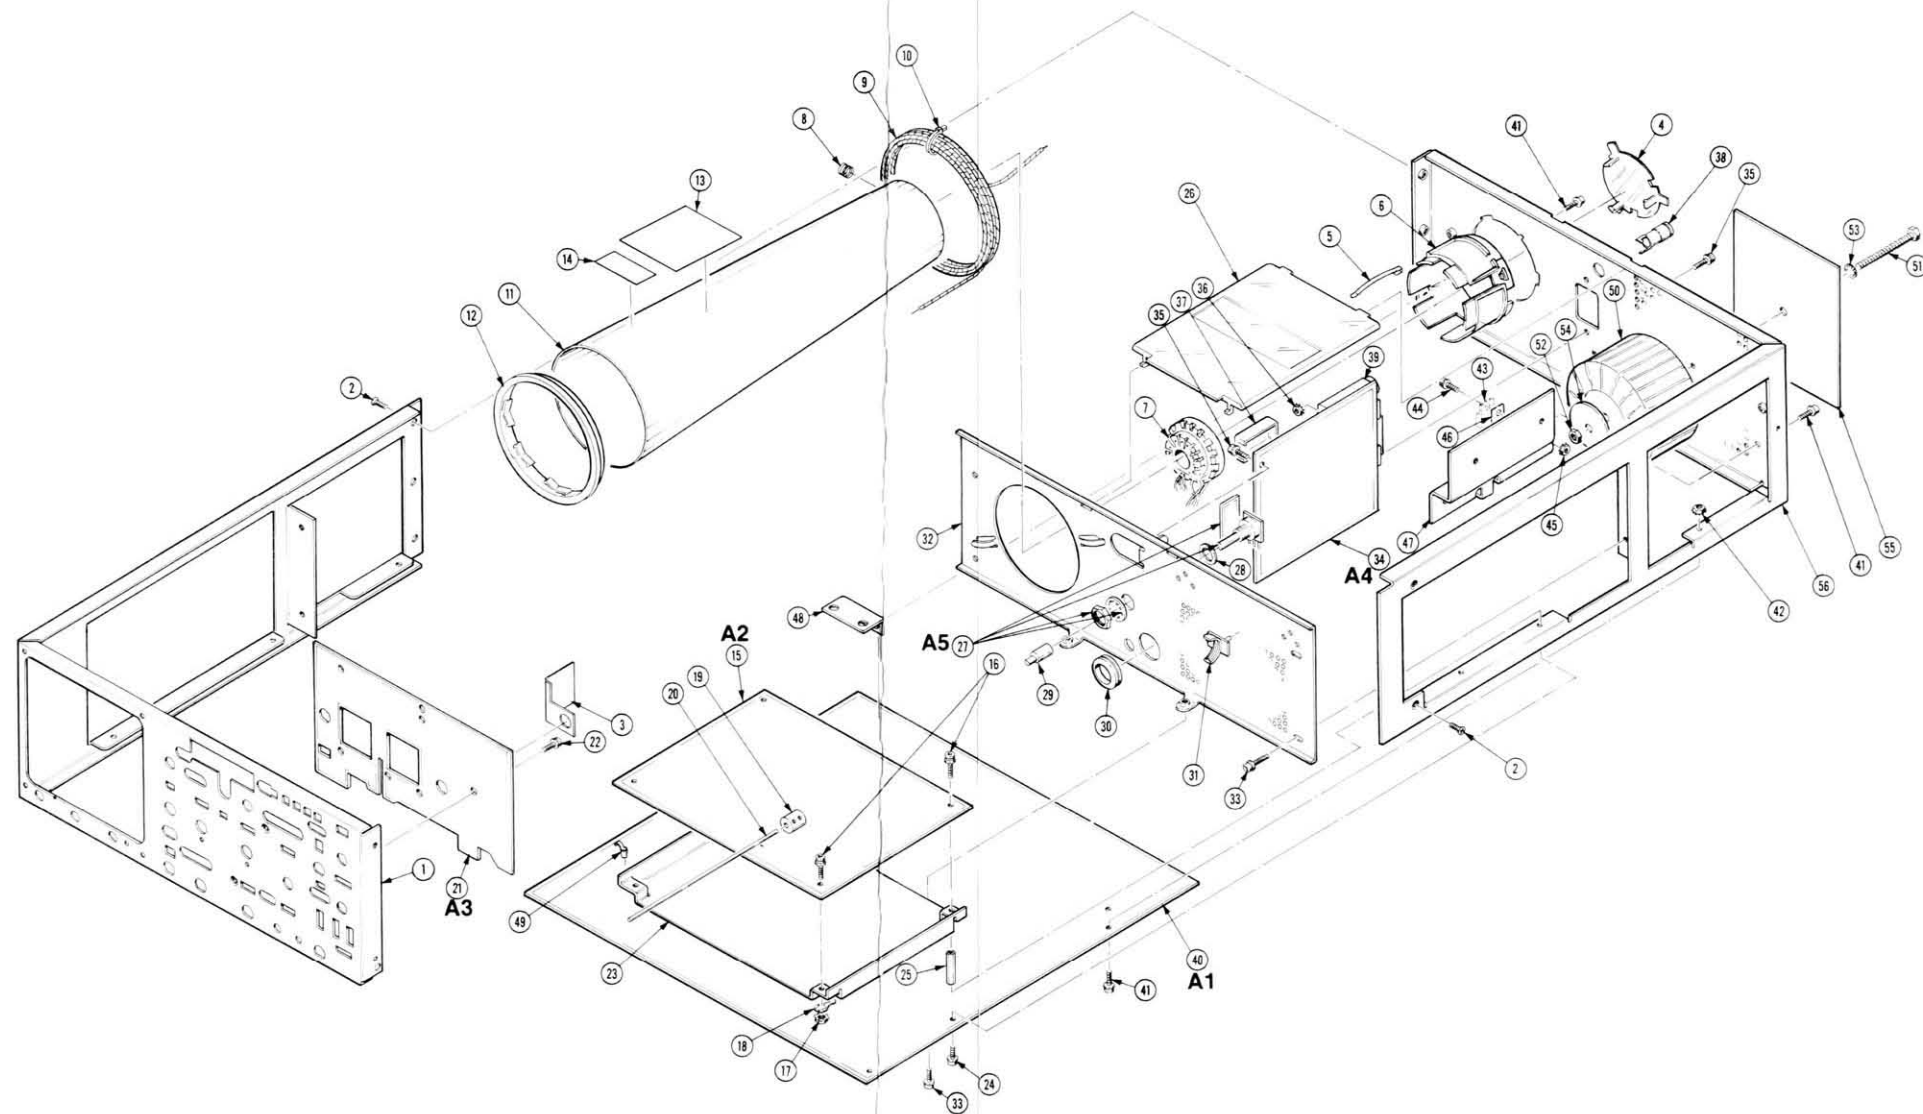


FIG. 3 ACCESSORIES

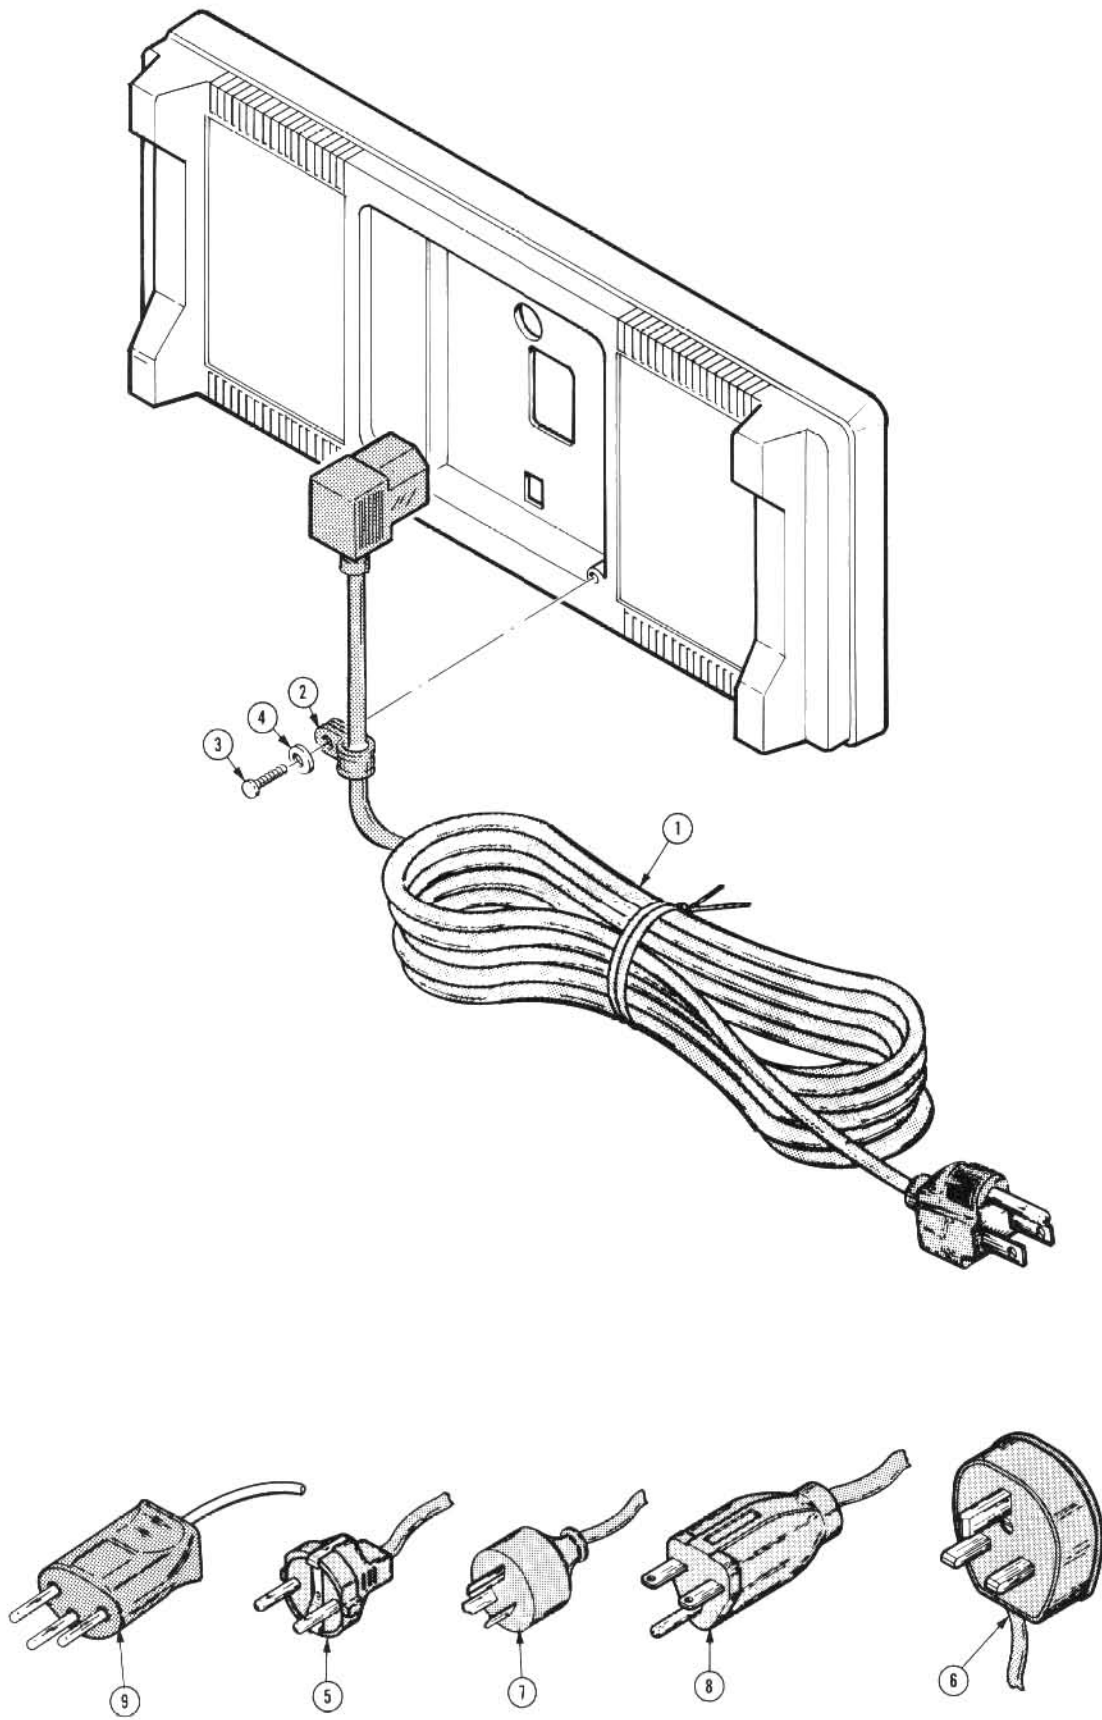

REPLACEABLE MECHANICAL PARTS

PARTS ORDERING INFORMATION

Replacement parts are available from or through your local Tektronix, Inc. Field Office or representative.

Changes to Tektronix instruments are sometimes made to accommodate improved components as they become available, and to give you the benefit of the latest circuit improvements developed in our engineering department. It is therefore important, when ordering parts, to include the following information in your order: Part number, instrument type or number, serial number, and modification number if applicable.

If a part you have ordered has been replaced with a new or improved part, your local Tektronix, Inc. Field Office or representative will contact you concerning any change in part number.

Change information, if any, is located at the rear of this manual.

ITEM NAME

In the Parts List, an Item Name is separated from the description by a colon (:). Because of space limitations, an Item Name may sometimes appear as incomplete. For further Item Name identification, the U.S. Federal Cataloging Handbook H6-1 can be utilized where possible.

FIGURE AND INDEX NUMBERS

Items in this section are referenced by figure and index numbers to the illustrations.

INDENTATION SYSTEM

This mechanical parts list is indented to indicate item relationships. Following is an example of the indentation system used in the description column.

1 2 3 4 5 Name & Description

Assembly and/or Component

Attaching parts for Assembly and/or Component

**** END ATTACHING PARTS ****

Detail Part of Assembly and/or Component

Attaching parts for Detail Part

**** END ATTACHING PARTS ****

Parts of Detail Part

Attaching parts for Parts of Detail Part

**** END ATTACHING PARTS ****

Attaching Parts always appear in the same indentation as the item it mounts, while the detail parts are indented to the right. Indented items are part of, and included with, the next higher indentation.

Attaching parts must be purchased separately, unless otherwise specified.

ABBREVIATIONS

| | | | | | | | |
|-------|--------------------|---------|-----------------------|----------|----------------------|----------|-----------------|
| " | INCH | ELCTRN | ELECTRON | IN | INCH | SE | SINGLE END |
| # | NUMBER SIZE | ELEC | ELECTRICAL | INCAND | INCANDESCENT | SECT | SECTION |
| ACTR | ACTUATOR | ELCTLT | ELECTROLYTIC | INSUL | INSULATOR | SEMICOND | SEMICONDUCTOR |
| ADPTR | ADAPTER | ELEM | ELEMENT | INTL | INTERNAL | SHLD | SHIELD |
| ALIGN | ALIGNMENT | EPL | ELECTRICAL PARTS LIST | LPHLDR | LAMPHOLDER | SHLDR | SHOULDERED |
| AL | ALUMINUM | EQPT | EQUIPMENT | MACH | MACHINE | SKT | SOCKET |
| ASSEM | ASSEMBLED | EXT | EXTERNAL | MECH | MECHANICAL | SL | SLIDE |
| ASSY | ASSEMBLY | FIL | FILLISTER HEAD | MTG | MOUNTING | SLFLKG | SELF-LOCKING |
| ATTEN | ATTENUATOR | FLEX | FLEXIBLE | NIP | NIPPLE | SLVG | SLEEVING |
| AWG | AMERICAN WIRE GAGE | FLH | FLAT HEAD | NON WIRE | NOT WIRE WOUND | SPR | SPRING |
| BD | BOARD | FLTR | FILTER | ORD | ORDER BY DESCRIPTION | SQ | SQUARE |
| BRKT | BRACKET | FR | FRAME or FRONT | OD | OUTSIDE DIAMETER | SST | STAINLESS STEEL |
| BRS | BRASS | FSTNR | FASTENER | OVH | OVAL HEAD | STL | STEEL |
| BRZ | BRONZE | FT | FOOT | PH BRZ | PHOSPHOR BRONZE | SW | SWITCH |
| BSHG | BUSHING | FXD | FIXED | PL | PLAIN or PLATE | T | TUBE |
| CAB | CABINET | GSKT | GASKET | PLSTC | PLASTIC | TERM | TERMINAL |
| CAP | CAPACITOR | HDL | HANDLE | PN | PART NUMBER | THD | THREAD |
| CER | CERAMIC | HEX | HEXAGON | PNH | PAN HEAD | THK | THICK |
| CHAS | CHASSIS | HEX HD | HEXAGONAL HEAD | PWR | POWER | TNSN | TENSION |
| CKT | CIRCUIT | HEX SOC | HEXAGONAL SOCKET | RCPT | RECEPTACLE | TPG | TAPPING |
| COMP | COMPOSITION | HLCP | HELICAL COMPRESSION | RES | RESISTOR | TRH | TRUSS HEAD |
| CONN | CONNECTOR | HLEXT | HELICAL EXTENSION | RGD | RIGID | V | VOLTAGE |
| COV | COVER | HV | HIGH VOLTAGE | RLF | RELIEF | VAR | VARIABLE |
| CPLG | COUPLING | IC | INTEGRATED CIRCUIT | RTNR | RETAINER | W | WITH |
| CRT | CATHODE RAY TUBE | ID | INSIDE DIAMETER | SCH | SOCKET HEAD | WSHR | WASHER |
| DEG | DEGREE | IDNT | IDENTIFICATION | SCOPE | OSCILLOSCOPE | XFMR | TRANSFORMER |
| DWR | DRAWER | IMPLR | IMPELLER | SCR | SCREW | XSTR | TRANSISTOR |

CROSS INDEX - MFR. CODE NUMBER TO MANUFACTURER

| Mfr. Code | Manufacturer | Address | City, State, Zip Code |
|-----------|--|---|----------------------------------|
| 01536 | TEXTRON INC CAMCAR DIV SEMS PRODUCTS UNIT | 1818 CHRISTINA ST | ROCKFORD IL 61108 |
| 06383 | PANDUIT CORP | 17301 RIDGELAND | TINLEY PARK IL 07094-2917 |
| 06915 | RICHO PLASTIC CO | 5825 N TRIPP AVE | CHICAGO IL 60646-6013 |
| 07416 | NELSON NAME PLATE CO | 3191 CASITAS | LOS ANGELES CA 90039-2410 |
| 12327 | FREEWAY CORP | 9301 ALLEN DR | CLEVELAND OH 44125-4632 |
| 13511 | AMPHENOL CADRE DIV BUNKER RAMO CORP | | LOS GATOS CA |
| 16428 | COOPER BELDEN ELECTRONIC WIRE AND CA SUB OF COOPER INDUSTRIES INC | NW N ST | RICHMOND IN 47374 |
| 22670 | G M NAMEPLATE INC | 2040 15TH AVE WEST | SEATTLE WA 98119-2728 |
| 70903 | COOPER BELDEN ELECTRONICS WIRE AND C SUB OF COOPER INDUSTRIES INC | 2000 S BATAVIA AVE | GENEVA IL 60134-3325 |
| 78189 | ILLINOIS TOOL WORKS INC SHAKEPROOF DIV | ST CHARLES ROAD | ELGIN IL 60120 |
| 80009 | TEKTRONIX INC | 14150 SW KARL BRAUN DR PO BOX 500 | BEAVERTON OR 97077-0001 |
| 83385 | MICRODOT MFG INC GREER-CENTRAL DIV | 3221 W BIG BEAVER RD | TROY MI 48098 |
| 83486 | ELCO INDUSTRIES INC | 1101 SAMUELSON RD | ROCKFORD IL 61101 |
| 86113 | MICRODOT MFG INC CENTRAL SCREW-KEENE DIV | 149 EMERALD ST | KEENE NH 03431-3628 |
| 86928 | SEASTROM MFG CO INC | 701 SONORA AVE | GLENDALE CA 91201-2431 |
| 93907 | TEXTRON INC CAMCAR DIV | 600 18TH AVE | ROCKFORD IL 61108-5181 |
| K2504 | RS COMPONENTS LTD | PO BOX 99 | CORBY NORTHANTS NN17 9RS ENGLAND |
| S3109 | FELLER | 72 Veronica Ave Unit 4 | Summerset NJ 08873 |
| S3629 | SCHURTER AG H C/O PANEL COMPONENTS CORP | 2015 SECOND STREET | BERKELEY CA 94170 |
| TK0174 | BADGLEY MFG CO | 1620 NE ARGYLE | PORTLAND OR 97211 |
| TK0861 | H SCHURTER AG DIST PANEL COMPONENTS | 2015 SECOND STREET | BERKELEY CA 94170 |
| TK0DA | MET-ETCH (SELKIRK) LTD | | SELKIRK TD75DK SCOTLAND |
| TK0EB | B D TOOLS | 237 BULLSMOOR LAND ENFIELD | MIDDX ENGLAND |
| TK0EC | CARON ENG. SERVICE | 10-11 STATION CLOSE POTTERS BAR | HERTS ENGLAND |
| TK0EH | HARLOW SPRINGS 1 + 2 ROYDONBURY IND EST THE PINNACLES | HARLOW | ESSEX ENGLAND |
| TK0EI | HIBBERTS & RICHARDS UNIT A | LANCASTER ROAD NEW BARNET | HERTS ENGLAND |
| TK0EJ | IMP WORKS | ESSEX ROAD HODDESDON | HERTS ENGLAND |
| TK0EL | MOLBRY LTD | HOLLAND WAY BLANDFORD | DORSET ENGLAND |
| TK0EO | PLANET JIG & TOOL | BAKER STREET HIGH WYCOMBE | BUCKS ENGLAND |
| TK0EP | PRINTLINE ORMOND HOUSE | 5-6 HARDWICK STREET | LONDON ENGLAND |
| TK0ER | REEVITE IND. MOULDINGS | 16 MURDOCK ROAD BICESTER | OXFORDSHIRE ENGLAND |
| TK0ES | SMALL POWER MACHINE CO INDUSTRIAL ESTATE | BATH ROAD CHIPPENHAM | WILTSHIRE ENGLAND |
| TK0ET | WARTH INTERNATIONAL CHARLWOODS BUSINESS CENTER | CHARLWOODS ROAD | EAST GRINDSTEAD ENGLAND |
| TK0EX | LUCAS DURALITH LTD STATION APPROACH | VICTORIA ROCHE | CORNWALL PL28 8JU ENGLAND |
| TK1326 | NORTHWEST FOURSIDE INC | 18224 SW 100TH CT | TUALATIN OR 97062 |
| TK1336 | PARSONS MFG CORP | 1055 OBRIEN | MENLO PARK CA 94025 |
| TK1694 | ROSE CITY LABEL CO | 7235 SE LABEL LN | PORTLAND OR 97213 |
| TK1723 | MAGNETIC SHIELDS LTD | HEADCORD ROAD STAPLEHURST, TONBRIDGE | KENT TN 12 ODS ENGLAND |
| TK2165 | TRIQUEST CORP | 3000 LEWIS AND CLARK HWY | VANCOUVER WA 98661-2999 |

| Fig. & Index No. | Tektronix Part No. | Serial/Assembly No. Effective Dscont | Qty | 12345 Name & Description | Mfr. Code | Mfr. Part No. |
|------------------------|-----------------------|--|-----|---|--------------|----------------|
| 1-1 | 334-6879-00 | | 1 | MARKER, IDENT: MARKED VOLTAGE/FUSE SELECT | TKODA | ORDER BY DESCR |
| -2 | 334-6880-00 | | 1 | MARKER, IDENT: MARKED CAUTION (UNITED KINGDOM ONLY) | TKODA | ORDER BY DESCR |
| | 334-7055-00 | | 1 | MARKER, IDENT: MKD CAUTION (U.S.A. ONLY) | 07416 | ORDER BY DESCR |
| | 334-5258-00 | 8010129 | 1 | MARKER, IDENT: MKD X-RAY WARNING, GERMAN (OPTION A1 & A5 ONLY) | TK1694 | ORDER BY DESCR |
| -3 | 200-3335-00 | | 1 | COVER, REAR: PLASTIC (ATTACHING PARTS) | TK0EJ | ORDER BY DESCR |
| -4 | 211-0712-00 | | 2 | SCR, ASSEM WSHR: 6-32 X 1.25, PNH, STL, TORX (END ATTACHING PARTS) | 01536 | ORDER BY DESCR |
| -5 | 343-1278-00 | | 2 | RTNR, POWER CORD: POLYCARBONATE GRAY | TK2165 | ORDER BY DESCR |
| -6 | 348-0964-00 | | 2 | FOOT, REAR COVER: BLACK, PLASTIC | TK0EJ | ORDER BY DESCR |
| -7 | 437-0370-00 | | 1 | CABINET, SCOPE: (ATTACHING PARTS) | 80009 | 437-0370-00 |
| -8 | 213-0882-00 | | 4 | SCREW, TPG, TR: 6-32 X 0.437 TAPTITE, PNH, STL (END ATTACHING PARTS) | 83385 | ORDER BY DESCR |
| -9 | 367-0356-00 | | 1 | HANDLE, CARRYING: (ATTACHING PARTS) | TK0EJ | ORDER BY DESCR |
| -10 | 212-0144-00 | | 2 | SCREW, TPG, TF: 8-16 X 0.562 L, PLASTITE, SPCL HD (END ATTACHING PARTS) | 93907 | 225-38131-012 |
| -11 | 214-3984-00 | 200360 | 2 | SPRING, HLCP: 0.71 OD X 12.0MM L, OPEN ENDS | TK0EH | ORDER BY DESCR |
| -12 | 426-1765-02 | | 1 | FRAME, CRT: POLYCARBONATE, GRAY (ATTACHING PARTS) | TK2165 | ORDER BY DESCR |
| -13 | 211-0690-01 | | 2 | SCREW, MACHINE: 6-32 X 0.875 PNH, SST (END ATTACHING PARTS) | 86113 | ORDER BY DESCR |
| -14 | 337-2775-00 | | 1 | SHLD, IMPLSION: FILTER, BLUE 2211/2213/2215 | 80009 | 337-2775-00 |
| -15 | 348-0660-00 | | 4 | CUSHION, CRT: POLYURETHANE | 80009 | 348-0660-00 |
| -16 | 384-1575-00 | | 1 | EXTENSION SHAFT: 8.805 L, W/KNOB, PLASTIC | 80009 | 384-1575-00 |
| -17 | 358-0550-00 | | 1 | BUSHING, SHAFT: 0.15 ID X 0.488 L, PLSTC | TK2165 | ORDER BY DESCR |
| -18 | 366-1480-03 | | 1 | PUSH BUTTON: BLACK, OFF | 80009 | 366-1480-03 |
| -19 | 384-1364-00 | | 1 | EXTENSION SHAFT: 10.818 L X 0.187 SQ, NYL, BLK | TK2165 | ORDER BY DESCR |
| -20 | 366-0641-00 | | 2 | KNOB: GY/YL, CAL/X10, 11.5MM X 3.08MM X 13MM H | TK0ES | ORDER BY DESCR |
| -21 | 331-0498-00 | | 2 | DIAL, CONTROL: 32MM X 3.75MM, MKD 1 THRU 50 | TK0EJ | ORDER BY DESCR |
| -22 | 366-0640-00 | | 1 | KNOB: GRAY, CAL W/ARROW, 10MM X 2MM X 12MM H. | TK0ES | ORDER BY DESCR |
| -23 | 210-1436-00 | | 2 | WASHER, FLAT: 9.4MM ID X 12.5MM OD X 2MM THK, ALUMINUM | TK0EL | ORDER BY DESCR |
| -24 | 331-0499-00 | | 1 | DIAL, CONTROL: 32MM X 3.75MM, MKD 2 X LINES | TK0EJ | ORDER BY DESCR |
| -25 | 366-0636-00 | | 8 | KNOB: GRAY, 10MM X 12MM H. | TK0EJ | ORDER BY DESCR |
| -26 | 366-0635-00 | | 2 | PUSH BUTTON: GRAY, 4.45MM X 7.75MM X | TK0EJ | ORDER BY DESCR |
| -27 | ----- | | 1 | TERM, FEEDTHRU: (SEE J590 REPL) | | |
| -28 | 131-0955-00 | | 3 | CONN, RCPT, ELEC: BNC, FEMALE | 13511 | 31-279 |
| -29 | 210-0255-00 | | 1 | TERMINAL, LUG: 0.391 ID, LOCKING, BRS CD PL | 12327 | ORDER BY DESCR |
| -30 | 386-5483-00 | | 1 | SUBPANEL, FRONT: | TK0EJ | ORDER BY DESCR |
| -31 | 333-3454-00 | | 1 | PANEL, FRONT: (STANDARD ONLY) | TK0EX | ORDER BY DESCR |
| | 333-3488-00 | | 1 | PANEL, FRONT: FRENCH VERSION OPT 1F (OPTION 1F ONLY) | TK0EX | ORDER BY DESCR |

| Fig. & Index No. | Tektronix Part No. | Serial/Assembly No. Effective Dscont | Qty | 12345 | Name & Description | Mfr. Code | Mfr. Part No. |
|------------------------|-----------------------|---|-----|---------|--|--------------|----------------|
| 2-1 | 441-1752-00 | | 1 | | CHASSIS,SCOPE:FRONT (ATTACHING PARTS) | TK0EO | ORDER BY DESCR |
| -2 | 211-0718-00 | | 4 | | SCREW,MACHINE:6-32 X 0.312,FLH,100 DEG,STL (END ATTACHING PARTS) | 83486 | ORDER BY DESCR |
| -3 | 337-3397-00 | | 1 | | SHIELD,ELEC:CH1,CH2 SEPARATION | TK0EO | ORDER BY DESCR |
| -4 | 200-2519-00 | | 1 | | CAP,CRT SOCKET:NATURAL LEXAN | 80009 | 200-2519-00 |
| -5 | 214-1061-05 | | 1 | | SPRING,GROUND:PLATED | TK1326 | ORDER BY DESCR |
| -6 | 426-1766-00 | | 1 | | MOUNT,RESILIENT:CRT,REAR | 80009 | 426-1766-00 |
| -7 | 136-0202-04 | | 1 | | SKT,PL-IN ELEK:ELECTRON TUBE,14 CONTACT | 80009 | 136-0202-04 |
| -8 | 214-3984-00 | | 2 | | SPRING,HLCPS:0.71 OD X 12.0MM L,OPEN ENDS | TK0EH | ORDER BY DESCR |
| -9 | ----- | | 1 | | DELAY LINE,ELEC:(SEE DL224 REPL) | | |
| -10 | 343-0549-00 | | 4 | | STRAP,TIEDOWN,E:0.091 W X 4.0 L,ZYTEL | 06383 | PLT1M |
| -11 | 337-3363-00 | | 1 | | SHIELD,ELEC:CRT | TK1723 | ORDER BY DESCR |
| -12 | 386-4443-00 | | 1 | | SUPPORT,SHIELD:CRT,FRONT,PLASTIC | 80009 | 386-4443-00 |
| -13 | 334-1951-00 | 202414 | 1 | | MARKER,IDENT:MKD WARNING,CRT VOLTAGES (UNITED KINGDOM ONLY) | 22670 | ORDER BY DESCR |
| | 334-1951-00 | | 1 | | MARKER,IDENT:MKD WARNING,CRT VOLTAGES (U.S.A. & GUERNSEY) | 22670 | ORDER BY DESCR |
| -14 | 334-1379-00 | | 1 | | MARKER,IDENT:MKD HI VACUUM | 07416 | ORDER BY DESCR |
| -15 | ----- | | 1 | | CIRCUIT BD ASSY:ATTENUATOR & TIMEBASE (SEE A2 REPL) | | |
| | | | | | (ATTACHING PARTS) | | |
| -16 | 211-0721-00 | 200360 | 4 | 208128 | SCREW,MACHINE:6-32 X 0.375,PNH,STL | 83486 | ORDER BY DESCR |
| | 211-0730-00 | 208129 | 4 | | SCR,ASSEM WSHR:6-32 X 0.375,PNH,STL CD PL, TORX T15 | 80009 | 211-0730-00 |
| | | | | | (UNITED KINGDOM ONLY) | | |
| | 211-0730-00 | | 4 | | SCR,ASSEM WSHR:6-32 X 0.375,PNH,STL CD PL, TORX T15 | 80009 | 211-0730-00 |
| | | | | | (U.S.A. & GUERNSEY) | | |
| -17 | 210-0457-00 | | 2 | | NUT,PL,ASSEM WA:6-32 X 0.312,STL CD PL | 78189 | 511-061800-00 |
| -18 | 210-0202-00 | 200360 | 1 | 200997 | TERMINAL,LUG:0.146 ID,LOCKING,BRZ TIN PL (UNITED KINGDOM ONLY) | 86928 | A-373-158-2 |
| | | | | | (END ATTACHING PARTS) | | |
| | 346-0240-00 | | 2 | | .STRAP,GROUND:ATTENUATOR (SOLDER BRACKET ACROSS THE INNER TWO LEADS .FROM THE ATTENUATOR SWITCHES) | TK0EO | ORDER BY DESCR |
| | | | | | (ATTACHING PARTS) | | |
| | 211-0325-00 | | 1 | | .SCR,ASSEM WSHR:4-40 X 0.25,PNH,STL,TORX T9 (END ATTACHING PARTS) | 01536 | ORDER BY DESCR |
| -19 | 376-0224-01 | | 1 | | CPLG,SHAFT,RGD:W/213-0153-00 | TK0EC | ORDER BY DESCR |
| -20 | 384-1714-00 | | 1 | | EXTENSION SHAFT:133MM L X 2MM OD,SST | 80009 | 384-1714-00 |
| -21 | ----- | | 1 | | CIRCUIT BD ASSY:FRONT PANEL (SEE A3 REPL) | | |
| | | | | | (ATTACHING PARTS) | | |
| -22 | 211-0304-00 | | 6 | | SCR,ASSEM WSHR:4-40 X 0.312,PNH,STL,T9 TORX (END ATTACHING PARTS) | 01536 | ORDER BY DESCR |
| -23 | 337-3365-00 | | 1 | | SHIELD,ELEC:ATTENUATOR (ATTACHING PARTS) | TK0EO | ORDER BY DESCR |
| -24 | 211-0721-00 | 200360 | 3 | 208128 | SCREW,MACHINE:6-32 X 0.375,PNH,STL | 83486 | ORDER BY DESCR |
| | 211-0730-00 | 208129 | 3 | | SCR,ASSEM WSHR:6-32 X 0.375,PNH,STL CD PL, TORX T15 | 80009 | 211-0730-00 |
| | | | | | (UNITED KINGDOM ONLY) | | |
| | 211-0730-00 | | 3 | | SCR,ASSEM WSHR:6-32 X 0.375,PNH,STL CD PL, TORX T15 | 80009 | 211-0730-00 |
| | | | | | (U.S.A. & GUERNSEY) | | |
| -25 | 129-1105-00 | | 2 | | SPACER,POST:23.5MM L,4-40 BOTH ENDS,AL,HEX | TK0EL | ORDER BY DESCR |
| | 129-1106-00 | | 1 | | SPACER,POST:25.4MM L,W 6-32 THD THRU,BRASS, 6.3MM HEX | TK0EL | ORDER BY DESCR |
| | | | | | (END ATTACHING PARTS) | | |
| -26 | 337-3364-00 | | 2 | | SHIELD,ELEC:POWER SUPPLY | TK0EJ | ORDER BY DESCR |
| -27 | ----- | | 1 | | CIRCUIT BD ASSY:FOCUS CONTROL MOUNTING (SEE A5 REPL) | | |
| | | | | | (ATTACHING PARTS) | | |
| -28 | 210-1437-00 | | 1 | | WASHER,FLAT:0.265 ID X 0.06 THK,STEEL (END ATTACHING PARTS) | TK0EI | ORDER BY DESCR |
| -29 | 384-1710-00 | | 1 | | EXTENSION SHAFT:13MM X 7MM OD,W/STEP,4MM ID | TK0EJ | ORDER BY DESCR |
| -30 | 348-0918-00 | E200000 | 1 | E210593 | GROMMET,PLASTIC:BLACK,RING,0.625 ID (UNITED KINGDOM ONLY) | TK0ER | ORDER BY DESCR |

Replaceable Mechanical Parts - 2225 Service

| Fig. & Index No. | Tektronix Part No. | Serial/Assembly No. Effective Dscont | Qty | 12345 Name & Description | Mfr. Code | Mfr. Part No. |
|------------------------|-----------------------|---|---------|--|--------------|-----------------|
| 2- | 348-0918-00 | G100000 | G100749 | 1 GROMMET, PLASTIC: BLACK, RING, 0.625 ID (GUERNSEY ONLY) | TKOER | ORDER BY DESCR |
| -31 | 344-0347-00 | E200000 | E210593 | 1 CLIP, ELECTRICAL: ANODE, 0.72 OD, NYLON | TK2165 | ORDER BY DESCR |
| | 343-0003-00 | E210594 | | 1 CLAMP, LOOP: 0.25 ID, PLASTIC (UNITED KINGDOM ONLY) | 06915 | E4 CLEAR ROUND |
| | 344-0347-00 | G100000 | G100749 | 1 CLIP, ELECTRICAL: ANODE, 0.72 OD, NYLON | TK2165 | ORDER BY DESCR |
| | 343-0003-00 | G100750 | | 1 CLAMP, LOOP: 0.25 ID, PLASTIC (GUERNSEY ONLY) | 06915 | E4 CLEAR ROUND |
| -31.1 | 343-0549-00 | 203965 | | 1 STRAP, TIEDOWN, E: 0.091 W X 4.0 L, ZYTEL (UNITED KINGDOM ONLY) | 06383 | PLT1M |
| | 343-0549-00 | | | 1 STRAP, TIEDOWN, E: 0.091 W X 4.0 L, ZYTEL (U.S.A. & GUERNSEY) | 06383 | PLT1M |
| -32 | 441-1751-00 | E200000 | E210593 | 1 CHASSIS, SCOPE: INNER | TK0EO | ORDER BY DESCR |
| | 441-1751-02 | E210594 | | 1 CHASSIS, SCOPE: INNER (UNITED KINGDOM ONLY) | 80009 | 441-1751-02 |
| | 441-1751-00 | G100000 | G100749 | 1 CHASSIS, SCOPE: INNER | TK0EO | ORDER BY DESCR |
| | 441-1751-02 | G100750 | | 1 CHASSIS, SCOPE: INNER (GUERNSEY ONLY) | 80009 | 441-1751-02 |
| -33 | 211-0721-00 | 200360 | 208128 | 8 SCREW, MACHINE: 6-32 X 0.375, PNH, STL | 83486 | ORDER BY DESCR |
| | 211-0730-00 | 208129 | | 8 SCR, ASSEM WSHR: 6-32 X 0.375, PNH, STL CD PL, TORX T15 (UNITED KINGDOM ONLY) | 80009 | 211-0730-00 |
| | 211-0730-00 | | | 8 SCR, ASSEM WSHR: 6-32 X 0.375, PNH, STL CD PL, TORX T15 (U.S.A. & GUERNSEY ONLY) | 80009 | 211-0730-00 |
| -34 | ----- | | | 1 CIRCUIT BD ASSY: POWER (SEE A4 REPL) (ATTACHING PARTS) | | |
| -35 | 211-0721-00 | 200360 | 208128 | 6 SCREW, MACHINE: 6-32 X 0.375, PNH, STL | 83486 | ORDER BY DESCR |
| | 211-0730-00 | 208129 | | 6 SCR, ASSEM WSHR: 6-32 X 0.375, PNH, STL CD PL, TORX T15 (UNITED KINGDOM ONLY) | 80009 | 211-0730-00 |
| | 211-0730-00 | | | 6 SCR, ASSEM WSHR: 6-32 X 0.375, PNH, STL CD PL, TORX T15 (U.S.A. & GUERNSEY) | 80009 | 211-0730-00 |
| -36 | 210-0457-00 | | | 2 NUT, PL, ASSEM WA: 6-32 X 0.312, STL CD PL (END ATTACHING PARTS) | 78189 | 511-061800-00 |
| -37 | 200-2735-00 | | | 1 COVER, POWER SW: BLACK, POLYCARBONATE | TK2165 | ORDER BY DESCR |
| -38 | 200-2264-00 | | | 1 CAP, FUSEHOLDER: 3AG FUSES | S3629 | FEK 031 1666 |
| -39 | 204-0906-00 | | | 1 BODY, FUSEHOLDER: 3AG & 5 X 20MM FUSES | S3629 | TYPEFAU031.3573 |
| -40 | ----- | | | 1 CIRCUIT BD ASSY: MAIN (SEE A1 REPL) (ATTACHING PARTS) | | |
| -41 | 211-0721-00 | 200360 | 208128 | 8 SCREW, MACHINE: 6-32 X 0.375, PNH, STL | 83486 | ORDER BY DESCR |
| | 211-0730-00 | 208129 | | 8 SCR, ASSEM WSHR: 6-32 X 0.375, PNH, STL CD PL, TORX T15 (UNITED KINGDOM ONLY) | 80009 | 211-0730-00 |
| -42 | 210-0457-00 | | | 5 NUT, PL, ASSEM WA: 6-32 X 0.312, STL CD PL (END ATTACHING PARTS) | 78189 | 511-061800-00 |
| -43 | ----- | | | 4 CIRCUIT BD ASSY INCLUDES: .TRANSISTOR: (SEE A1Q912, Q913, Q950, Q980 REPL) (ATTACHING PARTS) | | |
| -44 | 211-0305-00 | | | 4 .SCR, ASSEM WSHR: 4-40 X 0.437, PNH, STL, CD PL | 01536 | ORDER BY DESCR |
| -45 | 210-0586-00 | | | 4 .NUT, PL, ASSEM WA: 4-40 X 0.25, STL CD PL | 78189 | 211-041800-00 |
| | 342-0829-00 | 200360 | 200697 | 3 .INSULATOR, PLATE: TRANSISTOR, SIL-PAD (UNITED KINGDOM ONLY) | TKOET | ORDER BY DESCR |
| -46 | 342-0804-00 | 200360 | 200697 | 7 .INSULATOR, WSHR: 5.6MM OD X 3.0MM ID X 1.6MM .THK, NYLON | 80009 | 342-0804-00 |
| | 342-0804-00 | 200698 | | 1 .INSULATOR, WSHR: 5.6MM OD X 3.0MM ID X 1.6MM .THK, NYLON (UNITED KINGDOM ONLY) | 80009 | 342-0804-00 |
| | 342-0804-00 | | | 1 .INSULATOR, WSHR: 5.6MM OD X 3.0MM ID X 1.6MM .THK, NYLON (U.S.A. & GUERNSEY) (END ATTACHING PARTS) | 80009 | 342-0804-00 |

| Fig. & Index No. | Tektronix Part No. | Serial/Assembly No. Effective Discont | Qty | 12345 Name & Description | Mfr. Code | Mfr. Part No. |
|------------------------|-----------------------|---|-----|---|--------------|----------------|
| 2-47 | 407-3539-00 | | 1 | .BRACKET, HEAT SK: ALUMINUM | TK0EO | ORDER BY DESCR |
| -48 | 361-1435-00 | | 2 | .SPACER, XSTR: POLYPROPYLENE, TO-5 | K2504 | 402-175 |
| | 407-3579-00 | | 1 | .BRACKET, HEAT SK: ALUMINUM | TK0EO | ORDER BY DESCR |
| -49 | 343-0088-00 | | 2 | .CLAMP, CABLE: 0.062 DIA, PLASTIC | 80009 | 343-0088-00 |
| | 343-0002-00 | 200360 200519 | 1 | CLAMP, LOOP: 0.187 ID, PLASTIC | 06915 | E3 CLEAR ROUND |
| | 343-0003-00 | 200520 | 1 | CLAMP, LOOP: 0.25 ID, PLASTIC (UNITED KINGDOM ONLY) | 06915 | E4 CLEAR ROUND |
| | 343-0003-00 | | 1 | CLAMP, LOOP: 0.25 ID, PLASTIC (U.S.A. & GUERNSEY) | 06915 | E4 CLEAR ROUND |
| -49.1 | 214-4084-00 | B010140 | 1 | HT SK, XSTR ASSY: | 80009 | 214-4084-00 |
| -50 | ----- | | 1 | TRANSFORMER: (SEE T901 REPL) (ATTACHING PARTS) | | |
| -51 | 213-0993-00 | | 1 | SCREW, MACHINE: 0.25-20 X 2.5 L, HEX HEAD, STL | TK0EB | ORDER BY DESCR |
| -52 | 220-0054-00 | 200360 200761 | 1 | NUT, PLAIN, HEX: 0.25-20 X 0.437 HEX, STL, ZN PL | TK0EB | ORDER BY DESCR |
| | 220-0054-00 | 200762 | 2 | NUT, PLAIN, HEX: 0.25-20 X 0.437 HEX, STL, ZN PL (UNITED KINGDOM ONLY) | TK0EB | ORDER BY DESCR |
| | 220-0054-00 | | 2 | NUT, PLAIN, HEX: 0.25-20 X 0.437 HEX, STL, ZN PL (U.S.A. & GUERNSEY) | TK0EB | ORDER BY DESCR |
| -53 | 210-1026-00 | 200360 200761 | 1 | WASHER, LOCK: 0.26 ID, INTL, 0.025 THK, STL (UNITED KINGDOM ONLY) | 78189 | 1114-00 |
| -54 | 210-1437-00 | 200360 200761 | 1 | WASHER, FLAT: 0.265 ID X 0.06 THK, STEEL (UNITED KINGDOM ONLY) | TK0EI | ORDER BY DESCR |
| -55 | 386-5361-00 | | 1 | PLATE, REAR: STEEL (END ATTACHING PARTS) | TK0EO | ORDER BY DESCR |
| -56 | 441-1753-00 | | 1 | CHASSIS, SCOPE: REAR | TK0EO | ORDER BY DESCR |

Replaceable Mechanical Parts - 2225 Service

Fig. &
Index
No.

Tektronix
Part No.

Serial/Assembly No.
Effective Dscnt

Qty

12345

Name & Description

Mfr.
Code

Mfr. Part No.

3-

STANDARD ACCESSORIES

| | | | | | | |
|----|-------------|--|---|---|--------|-----------------|
| | | | 1 | ACCESSORY PKG:TWO P6103 PROBE,W/ACCESS | TK0EP | ORDER BY DESCR |
| | 070-6298-01 | | 1 | MANUAL,TECH:OPERATORS,2225 | 16428 | CH8352, FH-8352 |
| -1 | 161-0104-00 | | 1 | CABLE ASSY,PWR,:3 WIRE,98.0 L,W/RTANG CONN (UNITED KINGDOM ONLY) | | |
| | 161-0230-01 | | 1 | CABLE ASSY,PWR,:3,18 AWG,92.0 L (U.S.A. ONLY) | 80009 | 161-0230-01 |
| -2 | 343-0003-00 | | 1 | CLAMP,LOOP:0.25 ID,PLASTIC (POWER CORD CLAMP) | 06915 | E4 CLEAR ROUND |
| -3 | 213-0882-00 | | 1 | SCREW,TPG,TR:6-32 X 0.437 TAPTITE,PNH,STL | 83385 | ORDER BY DESCR |
| -4 | 210-0803-00 | | 1 | WASHER,FLAT:0.15 ID X 0.375 OD X 0.032,STL | 12327 | ORDER BY DESCR |
| | 020-0859-00 | | 1 | COMPONENT KIT:EUROPEAN | 80009 | 020-0859-00 |
| | 200-2265-00 | | 1 | .CAP,FUSEHOLDER:5 X 20MM FUSES | TK0861 | FEK 031.1663 |
| -5 | 161-0104-06 | | 1 | .CABLE ASSY,PWR,:3 X 0.75MM SQ,220V,98.0 L (OPTION A1 ONLY) | S3109 | ORDER BY DESCR |
| | 020-0860-00 | | 1 | COMPONENT KIT:UNITED KINGDOM | 80009 | 020-0860-00 |
| | 200-2265-00 | | 1 | .CAP,FUSEHOLDER:5 X 20MM FUSES | TK0861 | FEK 031.1663 |
| -6 | 161-0104-07 | | 1 | .CABLE ASSY,PWR,:3 X 0.75MM SQ,240V,98.0 L (OPTION A2 ONLY) | 80009 | 161-0104-07 |
| | 020-0861-00 | | 1 | COMPONENT KIT:AUSTRALIAN | 80009 | 020-0861-00 |
| | 200-2265-00 | | 1 | .CAP,FUSEHOLDER:5 X 20MM FUSES | TK0861 | FEK 031.1663 |
| -7 | 161-0104-05 | | 1 | .CABLE ASSY,PWR,:3,18 AWG,240V,98.0 L (OPTION A3 ONLY) | S3109 | ORDER BY DESCR |
| | 020-0862-00 | | 1 | COMPONENT KIT:NORTH AMERICAN | 80009 | 020-0862-00 |
| | 200-2265-00 | | 1 | .CAP,FUSEHOLDER:5 X 20MM FUSES | TK0861 | FEK 031.1663 |
| -8 | 161-0104-08 | | 1 | .CABLE ASSY,PWR,:3,18 AWG,240V,98.0 L (OPTION A4 ONLY) | 70903 | ORDER BY DESCR |
| | 020-0863-00 | | 1 | COMPONENT KIT:SWISS | 80009 | 020-0863-00 |
| | 200-2265-00 | | 1 | .CAP,FUSEHOLDER:5 X 20MM FUSES | TK0861 | FEK 031.1663 |
| -9 | 161-0167-00 | | 1 | .CABLE ASSY,PWR,:3.0 X 0.75,6A,240V,2.5M L (OPTION A5 ONLY) | 80009 | 161-0167-00 |

OPTIONAL ACCESSORIES

| | | | | |
|-------------|---|---|--------|----------------|
| 016-0180-00 | 1 | VISOR,CRT:FOLDING | TK2165 | ORDER BY DESCR |
| 016-0566-00 | 1 | VISOR,CRT: | TK2165 | ORDER BY DESCR |
| 016-0592-00 | 1 | VISOR,CRT: | TK2165 | ORDER BY DESCR |
| 016-0677-02 | 1 | POUCH,ACCESSORY:W/PLATE | TK0174 | 016-0677-02 |
| 016-0785-00 | 1 | ACCESSORY KIT:MOUNTING,1107 TO 2200 | 80009 | 016-0785-00 |
| 016-0792-01 | 1 | CASE,CARRYING:24.5 X 16.5 X 11.5 | TK1336 | ORDER BY DESCR |
| 016-0819-02 | 1 | ADAPTER,RACK:RACKMOUNT | 80009 | 016-0819-02 |
| 016-0921-00 | 1 | ACCESSORY KIT:24 X 1 SIGNAL ADAPTER (OPTION 22 ONLY) | 80009 | 016-0921-00 |
| 020-1514-00 | 1 | ACCESSORY KIT: (OPTION 02) | 80009 | 020-1514-00 |
| 070-6299-00 | 1 | MANUAL,TECH:SERVICE,2225 | 80009 | 070-6299-00 |
| 200-3397-00 | 1 | COVER,SCOPE:FRONT | 80009 | 200-3397-00 |
| 337-2775-01 | 1 | SHLD,IMPLOSION: | 80009 | 337-2775-01 |

APPENDIX

Table A-1
Magnified Sweep Speeds

| SEC/DIV Setting | Magnified Sweep Speed (Time/Division) | | |
|--------------------|--|-------------|-------------|
| | X5 | X10 | X50 |
| 0.5 s | 0.1 s | 50 ms | 10 ms |
| 0.2 s | 40 ms | 20 ms | 4 ms |
| 0.1 s | 20 ms | 10 ms | 2 ms |
| 50 ms | 10 ms | 5 ms | 1 ms |
| 20 ms | 4 ms | 2 ms | 0.4 ms |
| 10 ms | 2 ms | 1 ms | 0.2 ms |
| 5 ms | 1 ms | 0.5 ms | 0.1 ms |
| 2 ms | 0.4 ms | 0.2 ms | 40 μ s |
| 1 ms | 0.2 ms | 0.1 ms | 20 μ s |
| 0.5 ms | 0.1 ms | 50 μ s | 10 μ s |
| 0.2 ms | 40 μ s | 20 μ s | 4 μ s |
| 0.1 ms | 20 μ s | 10 μ s | 2 μ s |
| 50 μ s | 10 μ s | 5 μ s | 1 μ s |
| 20 μ s | 4 μ s | 2 μ s | 0.4 μ s |
| 10 μ s | 2 μ s | 1 μ s | 0.2 μ s |
| 5 μ s | 0.1 μ s | 0.5 μ s | 0.1 μ s |
| 2 μ s | 0.4 μ s | 0.2 μ s | 40 ns |
| 1 μ s | 0.2 μ s | 0.1 μ s | 20 ns |
| 0.5 μ s | 0.1 μ s | 50 ns | 10 ns |
| 0.2 μ s | 40 ns | 20 ns | N/A |
| 0.1 μ s | 20 ns | 10 ns | N/A |
| .05 μ s | 10 ns | 5 ns | N/A |

MANUAL CHANGE INFORMATION

At Tektronix, we continually strive to keep up with latest electronic developments by adding circuit and component improvements to our instruments as soon as they are developed and tested.

Sometimes, due to printing and shipping requirements, we can't get these changes immediately into printed manuals. Hence, your manual may contain new change information on following pages.

A single change may affect several sections. Since the change information sheets are carried in the manual until all changes are permanently entered, some duplication may occur. If no such change pages appear following this page, your manual is correct as printed.

Date: 8-1-88

Change Reference: C1/0888

Product: 2225 SERVICE

Manual Part Number: 070-6299-00

DESCRIPTION

Product Group 46

The information contained within the attached pages describe the new Option 07 (dc-to-dc inverter) which is now available for the 2225 instruments.

DESCRIPTION

OPTION 07

INTRODUCTION

Option 07 provides a dc-to dc inverter circuit physically located within the power supply compartment of the 2225. The Tektronix Type 2225 Oscilloscope fitted with Option 07 operates from either ac or dc power sources.

The inverter operates from a dc input voltage of +11.8 to +30 volts. A dc voltage monitor circuit continually checks the dc input voltage for proper level. If the input voltage falls below +10.65 volts, the power source will

automatically be disconnected. This is to limit the depth of discharge that the battery power source could be subjected to while supplying power to the 2225 Oscilloscope.

SPECIFICATIONS

The 2225 Option 07 instrument meets all electrical and environmental characteristics stated in tables 1-1 and 1-2. Additional electrical and mechanical characteristics which apply to the dc-dc inverter (Option 07) are listed in the following two tables.

ELECTRICAL SPECIFICATIONS

| Characteristics | Performance Requirements |
|-----------------------------------|---|
| Turn-on Range | +11.8 to 30 V. |
| Battery Protection Shutdown Limit | +10.65 V \pm 2%. |
| Rated Inverter Output Power | 35 Watts. |
| Input Protection | Low voltage and reverse polarity. |
| Output Protection | Short circuit and overload. |
| Supply Voltage | Battery Pack or External Supply. |
| Mains Voltage Operation | Inverter is automatically disconnected from the 2225 preregulator when mains power is applied to the 2225 mains input receptacle. |

MECHANICAL SPECIFICATIONS

| Characteristics | Performance Requirements |
|------------------------------------|--------------------------|
| Weight | |
| 2225 with Option 07 and Power Cord | 6.75 kg (14.9 lbs). |
| Domestic Shipping Weight | 9.15 kg (20.2 lbs). |

DESCRIPTION

OPERATING INSTRUCTIONS

Power Source

Dc Requirement: The Option 07 requires an external dc power source of between +11.0 V and +30 V. Maximum current consumption is 5 Amperes.

Ac Requirement: Operates from 115 volts or 230 volts ac, within the limits specified for the standard 2225 instrument.

Loss of Ground

The 2225 Option 07 is grounded through the dc power cord grounding conductor. Upon loss of the protective ground connection, all accessible conductive parts, including knobs and controls that may appear to be insulated can render electric shock.

CONNECTORS

An additional connector is added to the rear of the Option 07 instrument for use with the supplied dc power cord.

PERFORMANCE CHECK PROCEDURE

This procedure is used to verify proper operation of the dc-to-dc inverter (Option 07) against the requirements listed in the specifications.

Remove the cabinet from the 2225 Oscilloscope. Refer to the cabinet remove and replace instructions located in the Maintenance section of the service manual.

Equipment Required

DC variable power supply with 0 to 30V @ 5A
integral ammeter

Voltmeter 0.2% accuracy

a. Set the DC power supply output to 0V and connect it to the DC input of the 2225 Option 07 oscilloscope.

b. Adjust the range of the voltmeter to measure up to 30V and connect across the DC supply (observing proper polarity) to measure the applied voltage.

c. Switch both the 2225 oscilloscope and the DC power supply to on. Increase the DC power supply to 10V. The 2225 oscilloscope should not power up.

e. Slowly increase the DC power supply until the 2225 oscilloscope powers-up.

f. CHECK—voltmeter reads between +11.42V and +11.86V.

g. Disconnect the voltmeter from the DC supply. Using the voltmeter, check that all internal power supply voltages of the 2225 Oscilloscope are within limits. Refer to Table 5-2 located in Section 5 of the service manual for test points and voltages.

h. Increase the DC power supply to 30V.

i. CHECK—that all power supply voltages of the 2225 Oscilloscope remain within their limits.

j. Connect the voltmeter across the DC input of the 2225 Option 07. Slowly reduce the DC power supply to the point that the 2225 Oscilloscope shuts down.

k. CHECK—that the voltmeter reads between +10.44V and +10.86V

l. Adjust the DC power supply to 30V. Note the current being drawn from the supply. Reduce the DC power supply output voltage until the scope shuts down, checking that the current does not exceed 5 Amps at any time. Set the DC power supply to 0V output.

m. Turn the power off on the DC power supply and reverse the polarity of the connections to the DC input of the 2225 Option 07. Switch the DC power supply on again.

n. CHECK—that no current is drawn while increasing the output voltage to 30V.

DESCRIPTION

o. Turn power off on the DC power supply and reconnect the supply to the 2225 Option 07 observing correct polarity.

p. Turn the DC power supply on and set to 12V for operation of the 2225 Oscilloscope.

q. Plug the 2225 Oscilloscope's AC Power Cord into a suitable power outlet noting that the Line Voltage Selection switch of the 2225 Oscilloscope is properly set.

r. Note that the current drawn from the DC power supply now drops to zero.

s. Unplug the 2225's AC Power Cord and check that the scope returns to operation from the DC power supply.

NOTE

There is approximately a 10 second switching delay from an AC power source to the DC power supply.

ADJUSTMENT PROCEDURE

There are no adjustments to be made to the 2225 Option 07 dc-to-dc inverter.

THEORY OF OPERATION

The Option 07 dc-to-dc inverter produces a 48 volt dc output voltage which is applied to the 2225 preregulator circuit. The inverter output voltage is held constant over a Line Input dc voltage range of +11 to +30 volts.

Dc Input—The dc input enters via the rear panel dc input plug. Two disc capacitors, C17 and C18, decouple the input to ground.

Protection—The inverter will only operate if K1 is energized. CR1 protects against reverse connection of the dc supply. U4, R18, and R19 generate a reference voltage of 9 V. This reference is divided by R20 and R21, and compared by U2 with a voltage proportional to the input set by R16 and R17. When the + input of U2 drops below the - input, the comparator output voltage falls to near ground and turns off Q5, deactivating K1 and the inverter. Capacitors C13, C14, C15, and C16 provide noise reduction to prevent unwanted switching.

Inverter Circuit—The primary circuit consists of L1, Q1 and Q2 in parallel, and current sense resistors R2 and R3. With Q1 and Q2 switched on, the primary current increases, building up energy in L1. When Q1 and Q2 switch off, this energy is transferred to the secondary in the form of a large voltage pulse. CR1 rectifies the output and capacitors C5, C6, and C12 smooth it to a dc voltage.

Voltage feedback—R8 and VR1 produce a current through U3 for the voltage feedback loop. VR1 improves sensitivity, regulation, and allows wide input voltage variations. U3 provides isolation to the circuit. The voltage at Q6 follows the Vref voltage at pin 8 of U1 which provides a stable 5 volt reference. This reference voltage is divided by resistors R13, R14, and R15 providing feedback to pin 2 of U1.

Current mode control—This type of feedback regulates the peak inductor current and improves stability. R2 and R3 generate a voltage proportional to the primary current. R1 and R10 form a divider network from the oscillator output, voltage followed by Q4, to the current limit input. This is superimposed on the primary current voltage.

R9 and C3 set the oscillator frequency of U1 to 30KHz.

Soft Start—With the power switch on, C9 charges up through R12. This gradually turns off Q3 which in turn slowly increases the voltage on pin 1 of U1. The resulting gradual increase in the mark space ratio reduces start up surges.

Input filtering—Due to the large variations in the input current, an input filter is fitted, which comprises of coupled inductor L2, low ESR capacitor C2, and C1.

Product: 2225 SERVICE Date: 8-1-88 Change Reference: C1/0888

DESCRIPTION

OPTIONS

Option 07 is compatible with all currently available instrument options with the exception of option 1R (rack-mounting).

OPTIONAL ACCESSORIES

The 1104 Battery Pack is an additional optional accessory available for use with the 2225 Option 07 instrument along with those that can be found in the standard instrument manual.

ACCESSORIES

In addition to the standard accessories supplied with the 2225, Option 07 is shipped with a dc power cord with integral plug. The color coding of the dc power cord is as follows:

REDPOSITIVE
PURPLENEGATIVE
GREEN/YELLOWCHASSIS

MAINTENANCE

No additional maintenance is necessary for the 2225 Option 07 instrument other than that specified for the standard 2225 instrument.

Product: 2225 SERVICE

Date: 8-1-88

Change Reference:

C1/0888

DESCRIPTION

REPALCEABLE ELECTRICAL PARTS LIST


| Component No. | Tektronix Part No. | Serial/Assembly No. Effective Discont | Name & Description | Mfr. Code | Mfr. Part No. |
|---------------|--------------------|---------------------------------------|--|-----------|-----------------|
| A4DS901 | 260-2438-00 | | SWITCH,PUSH:POWER,4A,250VAC | 80009 | 260-2438-00 |
| A6 | 671-0781-00 | | CIRCUIT BD ASSY:INVERTER | 80009 | 671-0781-00 |
| A6C1 | 281-0826-00 | | CAP,FXD,CER DI:2200PF,10%,100V | 20932 | 401EM100AD222K |
| A6C2 | 290-1209-00 | | CAP,FXD,ELCTLT:470UF,35V,RADIAL LEAD | 80009 | 290-1209-00 |
| A6C3 | 281-0773-00 | | CAP,FXD,CER DI:0.01UF,10%,100V | 04222 | MA201C103KAA |
| A6C5 | 290-1208-00 | | CAP,FXD,ELCTLT:220UF,63V,RADIAL LEAD | 80009 | 290-1208-00 |
| A6C6 | 290-1208-00 | | CAP,FXD,ELCTLT:220UF,63V,RADIAL LEAD | 80009 | 290-1208-00 |
| A6C7 | 281-0814-00 | | CAP,FXD,CER DI:100 PF,10%,100V | 04222 | MA101A101KAA |
| A6C8 | 281-0775-01 | | CAP,FXD,CER DI:0.1UF,20%,50V | 04222 | SA105E104MAA |
| A6C9 | 290-0183-00 | | CAP,FXD,ELCTLT:1UF,10%,35V | 05397 | T3228105K035AS |
| A6C10 | 281-0775-00 | | CAP,FXD,CER DI:0.1UF,20%,50V | 04222 | MA205E104MAA |
| A6C11 | 281-0775-01 | | CAP,FXD,CER DI:0.1UF,20%,50V | 04222 | SA105E104MAA |
| A6C12 | 281-0773-00 | | CAP,FXD,CER DI:0.01UF,10%,100V | 04222 | MA201C103KAA |
| A6C13 | 281-0775-01 | | CAP,FXD,CER DI:0.1UF,20%,50V | 04222 | SA105E104MAA |
| A6C14 | 281-0775-01 | | CAP,FXD,CER DI:0.1UF,20%,50V | 04222 | SA105E104MAA |
| A6C15 | 281-0775-01 | | CAP,FXD,CER DI:0.1UF,20%,50V | 04222 | SA105E104MAA |
| A6C16 | 281-0773-00 | | CAP,FXD,CER DI:0.01UF,10%,100V | 04222 | MA201C103KAA |
| A6CR1 | 152-0864-00 | | SEMICON DVC,DI:RECT,SI,150V,1A | 80009 | 152-0864-00 |
| A6CR2 | 152-0141-02 | | SEMICON DVC,DI:SW,SI,30V,150MA,30V,DO-35 | 03508 | DA2527 (1N4152) |
| A6CR3 | 152-0951-00 | | SEMICON DVC DI:SCHOTTKY,SI,60V,2.25PF | 80009 | 152-0951-00 |
| A6F1 | 159-0298-00 | | FUSE,CARTRIDGE:6A,FAST BLOW | 80009 | 159-0298-00 |
| A6K1 | 148-0217-00 | | RELAY,SOL STATE:5A,240VAC,12VDC,275 OHM | 80009 | 148-0217-00 |
| A6K2 | 148-0216-00 | | RELAY,SOL STATE:5A,240VAC,48VDC,4170 OHM | 80009 | 148-0216-00 |
| A6L1 | 120-1813-00 | | TRANSFORMER,RF:POT CORE | 80009 | 120-1813-00 |
| A6L2 | 120-1814-00 | | TRANSFORMER,RF:TOROID | 80009 | 120-1814-00 |
| A6Q1 | 151-1136-00 | | TRANSISTOR:MOSFE,N-CHANNEL,SI,TO-220AB | 04713 | IRF530 |
| A6Q2 | 151-1136-00 | | TRANSISTOR:MOSFE,N-CHANNEL,SI,TO-220AB | 04713 | IRF530 |
| A6Q3 | 151-0342-00 | | TRANSISTOR:PMP,SI,TO-92 | 07263 | S035928 |
| A6Q4 | 151-0341-00 | | TRANSISTOR:NPN,SI,TO-106 | 04713 | SPS6919 |
| A6Q5 | 151-0341-00 | | TRANSISTOR:NPN,SI,TO-106 | 04713 | SPS6919 |
| A6Q6 | 151-0341-00 | | TRANSISTOR:NPN,SI,TO-106 | 04713 | SPS6919 |
| A6R1 | 313-1472-00 | | RES,FXD,FILM:4.7K OHM,5%,0.2W | 57668 | TR20JE 04K7 |
| A6R2 | 308-0944-00 | | RES,FXD,WW:0.033 OHM,5%,4W | 80009 | 308-0944-00 |
| A6R3 | 308-0944-00 | | RES,FXD,WW:0.033 OHM,5%,4W | 80009 | 308-0944-00 |
| A6R5 | 313-1220-00 | | RES,FXD,FILM:22 OHM,5%,0.2W | 57668 | TR20JE22E |
| A6R6 | 313-1102-00 | | RES,FXD,FILM:1K OHM,5%,0.2W | 57668 | TR20JE01K0 |
| A6R7 | 313-1104-00 | | RES,FXD,FILM:100K OHM,5%,0.2W | 57668 | TR20JE100K |
| A6R8 | 313-1331-00 | | RES,FXD,FILM:330 OHM,5%,0.2W | 57668 | TR20JE 330E |
| A6R9 | 313-1512-00 | | RES,FXD,FILM:5.1K OHM,5%,0.2W | 57668 | TR20JE 5K1 |
| A6R10 | 313-1222-00 | | RES,FXD,FILM:2.2K OHM,5%,0.2W | 57668 | TR20JE 02K2 |
| A6R11 | 313-1273-00 | | RES,FXD,FILM:27K OHM,5%,0.2W | 57668 | TR20JE 27K |
| A6R12 | 313-1104-00 | | RES,FXD,FILM:100K OHM,5%,0.2W | 57668 | TR20JE100K |
| A6R13 | 315-0112-00 | | RES,FXD,FILM:1.1K OHM,5%,0.25W | 19701 | 5043CX1K100J |
| A6R14 | 313-1102-00 | | RES,FXD,FILM:1K OHM,5%,0.2W | 57668 | TR20JE01K0 |
| A6R15 | 313-1202-00 | | RES,FXD,FILM:2K OHM,5%,0.2W | 57668 | TR20JE02K0 |
| A6R16 | 321-0319-00 | | RES,FXD,FILM:20.5K OHM,1%,0.125W,TC=TO | 19701 | 5033ED20K50F |
| A6R17 | 321-0300-00 | | RES,FXD,FILM:13.0K OHM,1%,0.125W,TC=TO | 07716 | CEAD13001F |
| A6R18 | 321-0132-00 | | RES,FXD,FILM:232 OHM,1%,0.125W,TC=TO | 19701 | 5043ED232R0F |

Product: 2225 SERVICEDate: 8-1-88Change Reference: C1/0888

DESCRIPTION

| Component No. | Tektronix Part No. | Serial/Assembly No. Effective Discnt | Name & Description | Mfr. Code | Mfr. Part No. |
|---------------|-----------------------|---|---|--------------|------------------|
| A6R19 | 321-0202-00 | | RES,FXD,FILM:1.24K OHM,1%,0.125W,TC=T0 | 24546 | NA55D1241F |
| A6R20 | 321-0320-00 | | RES,FXD,FILM:21.0K OHM,1%,0.125W,TC=T0 | 19701 | 5033ED21K00F |
| A6R21 | 321-0319-00 | | RES,FXD,FILM:20.5K OHM,1%,0.125W,TC=T0 | 19701 | 5033ED20K50F |
| A6R22 | 321-0382-00 | | RES,FXD,FILM:93.1K OHM,1%,0.125W,TC=T0 | 07716 | CEAD93101F |
| A6R23 | 313-1103-00 | | RES,FXD,FILM:10K OHM,5%,0.2W | 57668 | TR20JE10K0 |
| A6R24 | 315-0333-00 | | RES,FXD,FILM:33K OHM,5%,0.25W | 57668 | NTR25J-E33K0 |
| A6U1 | 156-3572-00 | | MICROCKT,DGTL:CONTROLLER,CURRENT MODE,PWM | 80009 | 156-3572-00 |
| A6U2 | 156-1225-00 | | MICROCKT,LINER:DUAL COMPARATOR | 01295 | LM393P |
| A6U3 | 156-0885-05 | | CPLR,OPTOELECTR:LED,5KV,ISOLATION | 09019 | H11AX1139R |
| A6U4 | 156-1161-00 | | MICROCKT,LINER:VOLTAGE REGULATOR,POS,ADJ | 12969 | UC317T |
| A6VR1 | 152-0756-00 | | SEMICON DVC,DI:ZEN,SI,47V,5%,1W,DO-41 | 80009 | 152-0756-00 |
| C17 | 283-0003-00 | | CAP,FXD,CER DI:0.01UF,+80-20%,150V | 59821 | D103Z40Z5UJDC EX |
| C18 | 283-0003-00 | | CAP,FXD,CER DI:0.01UF,+80-20%,150V | 59821 | D103Z40Z5UJDC EX |
| J90 | 131-1333-01 | | CONN,RCPT,ELEC:PWR,MALE,125VDC,7A | 80009 | 131-1333-01 |

DESCRIPTION

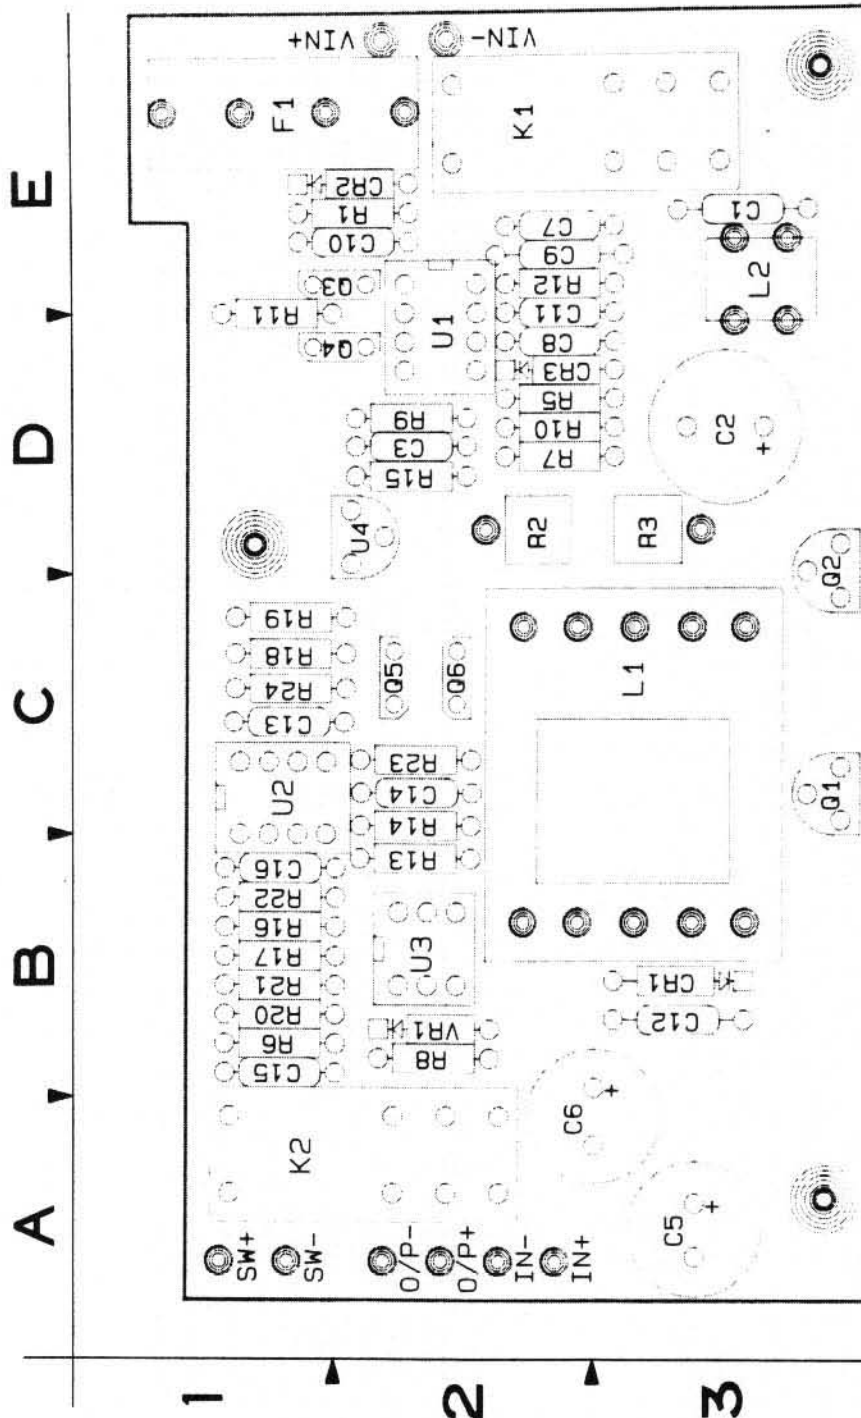

2225 OPTION 07 (DC-TO-DC INVERTER)

Product: 2225 SERVICE

Date: 8-1-88

Change Reference: C1/0888

DESCRIPTION

INVERTER OPTION


ASSEMBLY A6

| CIRCUIT NUMBER | SCHEM LOCATION | BOARD LOCATION | CIRCUIT NUMBER | SCHEM LOCATION | BOARD LOCATION | CIRCUIT NUMBER | SCHEM LOCATION | BOARD LOCATION |
|-------------------|-------------------|-------------------|-------------------|-------------------|-------------------|-------------------|-------------------|-------------------|
| C1 | 4D | 3E | K2 | 5J | 1A | R11 | 4E | 1E |
| C2 | 4E | 3D | K2A | 1J | 1A | R12 | 5F | 2E |
| C3 | 6F | 2D | K2B | 6B | 1A | R13 | 2F | 2B |
| C5 | 2H | 3A | | | | R14 | 3F | 2C |
| C6 | 2H | 2A | L1 | 2G | 3C | R15 | 4E | 2D |
| C7 | 6G | 2E | | | | R16 | 3B | 1B |
| C8 | 6G | 2D | L2A | 1E | 3E | R17 | 5B | 1B |
| C9 | 6F | 2E | L2B | 7E | 3E | R18 | 3C | 1C |
| C10 | 4F | 2E | | | | R19 | 5B | 1C |
| C11 | 6F | 2E | Q1 | 4H | 3C | R20 | 3C | 1B |
| C12 | 2H | 3B | Q2 | 4H | 3C | R21 | 5C | 1B |
| C13 | 6C | 1C | Q3 | 5E | 2E | R22 | 4C | 1B |
| C14 | 5B | 2C | Q4 | 6F | 2D | R23 | 3D | 2C |
| C15 | 5C | 1B | Q5 | 4D | 2C | R24 | 4D | 1C |
| C16 | 5C | 1B | Q6 | 1F | 2C | | | |
| CR1 | 2G | 3B | R1 | 6G | 2E | U1 | 4F | 2D |
| CR2 | 1B | 2E | R2 | 6H | 2D | U2 | 4C | 1C |
| CR3 | 6G | 2D | R3 | 6H | 3D | U3 | 2G | 2B |
| | | | R5 | 4H | 2D | U4 | 2B | 2D |
| F1 | 1B | 1E | R6 | 5J | 1B | VR1 | 2G | 2B |
| | | | R7 | 5H | 2D | | | |
| K1 | 3D | 2E | R8 | 1G | 2B | W903 | 1B | 2A |
| K1A | 1D | 2E | R9 | 5F | 2D | W903 | 1J | 2E |
| K1B | 7D | 2E | R10 | 5H | 2D | | | |

CHASSIS PARTS

| | | | | | | | | |
|-----|----|----|-----|----|----|-----|----|----|
| C17 | 4A | -- | C18 | 4A | -- | J90 | 4A | -- |
|-----|----|----|-----|----|----|-----|----|----|

DESCRIPTION

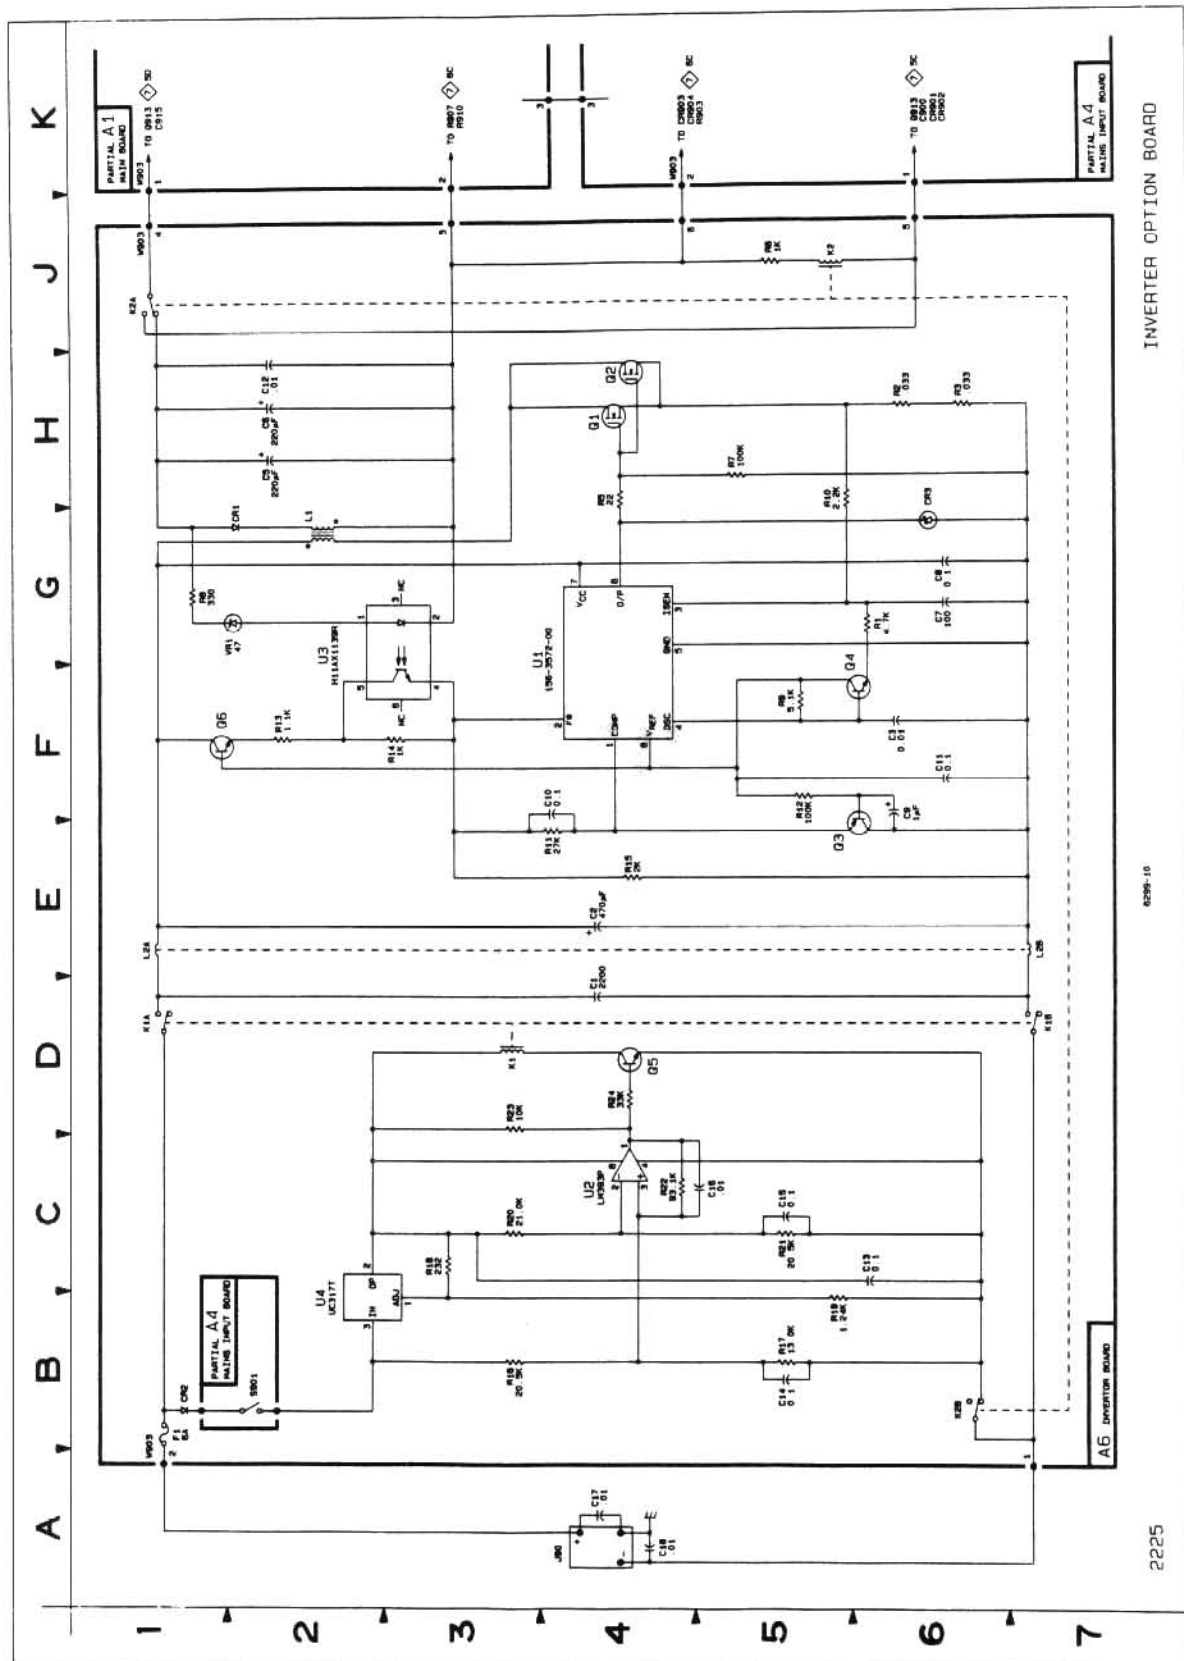

6259-10

2225

Product: 2225 SERVICE

Date: 8-1-88

Change Reference: C1/0888

DESCRIPTION


REPLACEABLE MECHANICAL PARTS LIST

| Fig. & Index No. | Tektronix Part No. | Serial/Assembly No. Effective Discnt | Qty | 12345 Name & Description | Mfr. Code | Mfr. Part No. |
|------------------------|-----------------------|--|-----|---|--------------|----------------|
| 1-1 | 214-4187-00 | | 1 | HEAR SINK ASSY:INVERTER BOARD | 80009 | 214-4187-00 |
| -2 | 211-0304-00 | | 8 | SCR,ASSEM WSHR:4-40 X 0.312,PNH,STL,T9 TORX | 01536 | ORDER BY DESCR |
| -3 | 211-0303-00 | | 4 | SCREW,MACHINE:4-40 X 0.25,FLH 100 DEG,STL | TK1543 | ORDER BY DESCR |
| -4 | 211-0380-00 | | 2 | SCREW,MACHINE:4-40 X 0.375,FLH,CD PL,T-9 | 80009 | 211-0380-00 |
| -5 | 211-0712-00 | | 1 | SCR,ASSEM WSHR:6-32 X 1.25,PNH,STL,TORX | 01536 | ORDER BY DESCR |
| | 211-0630-00 | | 4 | SCREW,MACHINE:6-32 X 1.12,FLH,100 DEG,STL | TK0435 | ORDER BY DESCR |
| | 213-0875-00 | | 1 | SCR,ASSEM WSHR:6-32 X 0.5,TAPTITE,PNH,STL (REPLACES 213-0882-00 ON 2225) | 83486 | ORDER BY DESCR |
| | 211-0529-00 | | 2 | SCREW,MACHINE:6-32 X 1.250,PNH,STL (REPLACES 211-712-00 ON 2225) | 93907 | ORDER BY DESCR |
| -6 | 210-0994-00 | | 3 | WASHER,FLAT:0.125 ID X 0.25 OD X 0.022,STL | 86928 | A371-283-20 |
| | 210-0802-00 | | 2 | WASHER,FLAT:0.15 ID X 0.312 OD X 0.032,STL | 12327 | ORDER BY DESCR |
| -7 | 210-0457-00 | | 1 | NUT,PL,ASSEM WA:6-32 X 0.312,STL CD PL | 78189 | 511-061800-00 |
| -8 | 210-0586-00 | | 4 | NUT,PL,ASSEM WA:4-40 X 0.25,STL CD PL | 78189 | 211-041800-00 |
| | 334-7403-00 | | 1 | MARKER,IDENT:MARKED CAUTION (REPLACES 334-6880-00) | 80009 | 334-7403-00 |
| | 200-3676-00 | | 1 | COVER,REAR: (REPLACES STANDARD COVER) | 80009 | 200-3676-00 |
| -9 | 342-0804-00 | | 3 | INSULATOR,WSHR:5.6MM OD X 3.0MM ID X 1.6MM THK,NYLON | 80009 | 342-0804-00 |
| -10 | 342-0829-00 | | 3 | INSULATOR,PLATE:TRANSISTOR,SIL-PAD | TK0ET | ORDER BY DESCR |
| | 384-1099-00 | | 1 | EXTENSION SHAFT:1.58 L X 0.187 SQ,PLSTC (REPLACE 384-1575-00 ON 2225) | 80009 | 384-1099-00 |
| | 384-1370-00 | | 2 | EXTENSION SHAFT:4.68 L,MOLDED PLASTIC (REPLACES 384-1575-00 ON 2225) | 80009 | 384-1370-00 |
| -11 | ----- | | 1 | CONN,RCPT,ELEC:PWR,MALE,125VDC,7A (SEE J90 REPL) | | |
| | 174-1316-00 | | 1 | CA ASSY,SP,ELEC:INPUT POSITIVE | 80009 | 174-1316-00 |
| | 174-1317-00 | | 1 | CA ASSY,SP,ELEC:INPUT NEGITIVE | 80009 | 174-1317-00 |
| | 174-1318-00 | | 1 | CA ASSY,SP,ELEC:RECTIFIED OUTPUT 48V | 80009 | 174-1318-00 |
| | 174-1319-00 | | 1 | CA ASSY,SP,ELEC:LINE TRIGGER | 80009 | 174-1319-00 |
| | 174-1320-00 | | 1 | CA ASSY,SP,ELEC:SWITCH | 80009 | 174-1320-00 |
| | 174-1321-00 | | 1 | CA ASSY,SP,ELEC:UNREGULATED INPUT 11-30V | 80009 | 174-1321-00 |
| -12 | 195-3990-00 | | 1 | LEAD,ELECTRICAL:18 AWG,4.5 L,5-4 | 80009 | 195-3990-00 |
| | 386-5859-00 | | 1 | PLATE,RETAINING:POT CORE | 80009 | 386-5859-00 |
| -13 | 361-1520-00 | | 1 | SPACER,THERMAL:INSULATOR POT CORE | 80009 | 361-1520-00 |
| | 361-1521-00 | | 1 | SPACER,THERMAL:POT CORE MOUNTING | 80009 | 361-1521-00 |
| | 276-0525-00 | | 1 | CORE,EM:TOROID,FERRITE | 01121 | T037C351A |
| | 441-1883-00 | | 1 | CHASSIS,SCOPE:INNER (REPLACES 441-1571-02 ON 2225) | 80009 | 441-1883-00 |
| | 441-1884-00 | | 1 | CHASSIS,REAR: (REPLACES 441-1753-01 ON 2225) | 80009 | 441-1884-00 |
| | 407-3765-00 | | 1 | BRACKET,HEAT SK:ALUMINUM (REPLACES 407-3539-00 ON 2225) | 80009 | 407-3765-00 |
| | 344-0326-00 | | 1 | CLIP,ELECTRICAL:FUSE,BRASS (PART OF TO AGF1 REPL) | 75915 | 102071 |

ACCESSORIES

| | | | | |
|-------------|---|-------------------------------------|-------|----------------|
| 161-0094-00 | 1 | CABLE ASSY,PWR,:3,18AWG,125V,36.0 L | 70903 | ORDER BY DESCR |
|-------------|---|-------------------------------------|-------|----------------|

DESCRIPTION

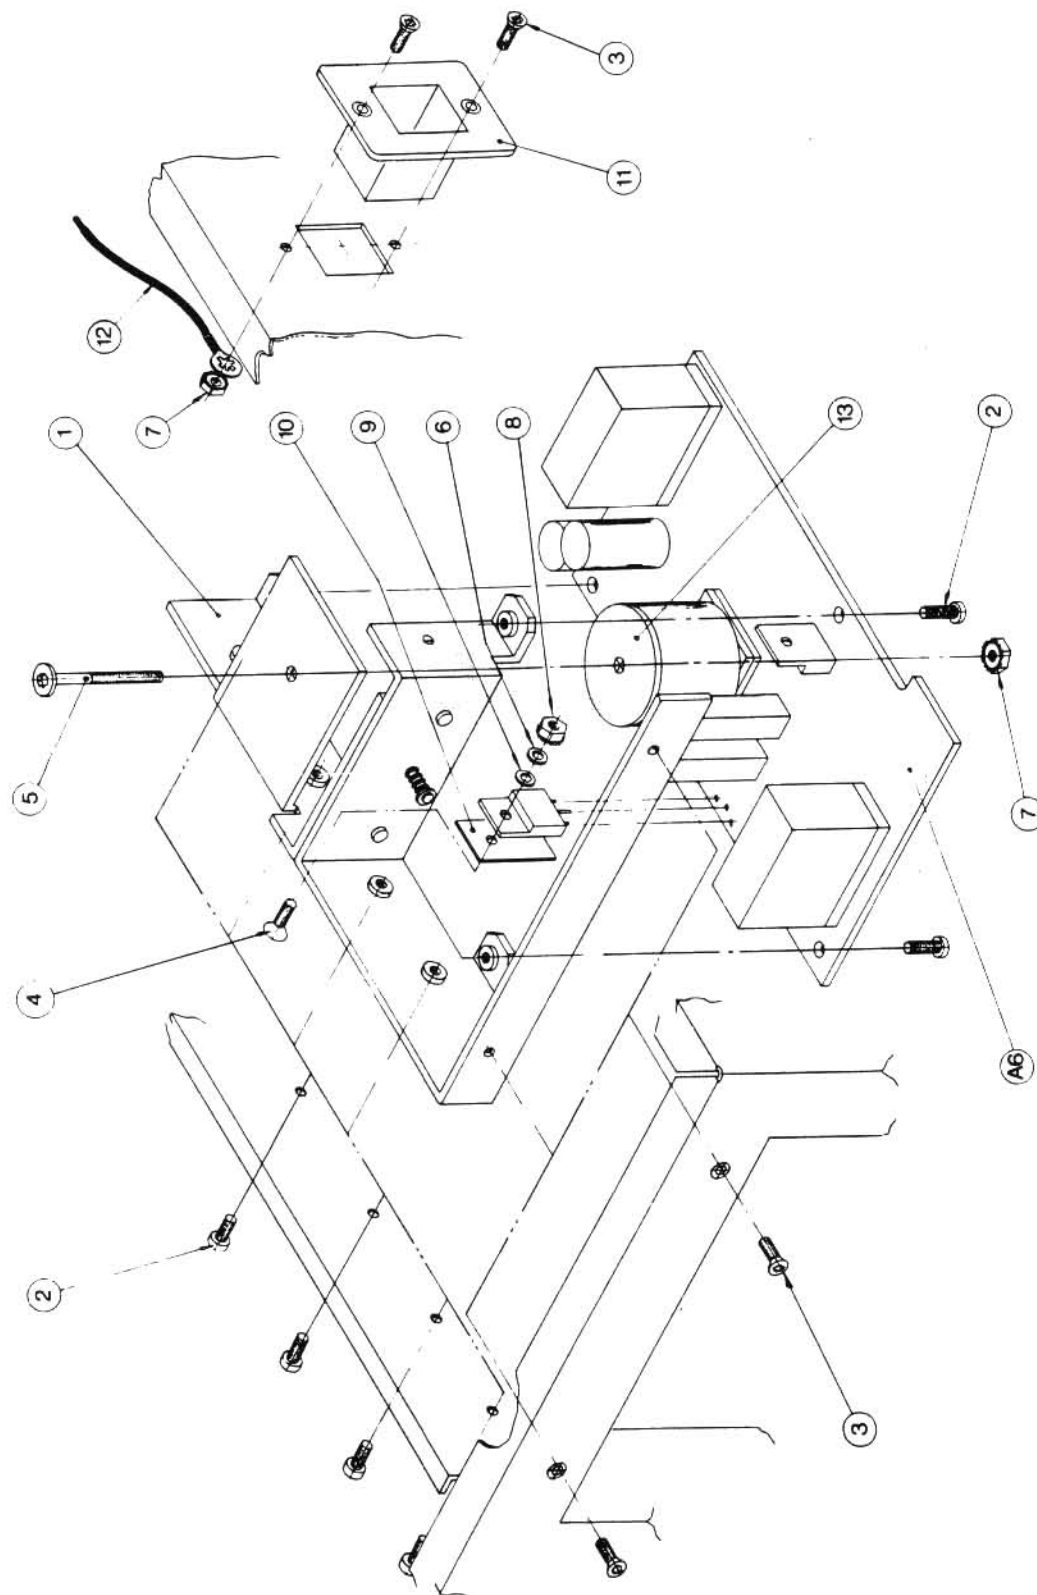

2225 OPTION 07 (DC-TO-DC INVERTER)