

**TOSHIBA**

FILE NO. 020-200026

SERVICE MANUAL

# COLOR TELEVISION

NOPSP Chassis

***50HX70, 55HX70, 61HX70***

(TAC0067)

(TAC0066)

(TAC0065)

***55H70, 61H70***

(TAC0069)

(TAC0068)

# TABLE OF CONTENTS

## CHAPTER 1 GENERAL ADJUSTMENTS

SAFETY INSTRUCTIONS .....	3
CRT ASSEMBLY REPLACEMENT AND MOUNTING .....	4
PICTURE TUBE COMPONENTS ADJUSTMENT .....	6
REPLACEMENT OF THE CRT .....	9
SERVICE MODE .....	10
ELECTRICAL ADJUSTMENT .....	12
CONVERGENCE ADJUSTMENT .....	14
SCREEN AND MIRROR ALIGNMENTS .....	16
CIRCUIT CHECKS .....	17

## CHAPTER 2 SPECIFIC INFORMATIONS

SETTING & ADJUSTING DATA .....	18
LOCATION OF CONTROLS .....	19
PROGRAMMING CHANNEL MEMORY .....	21
CIRCUIT BLOCK DIAGRAM .....	23
MECHANICAL DISASSEMBLY .....	25
CHASSIS AND CABINET REPLACEMENT PARTS LIST .....	27
PC BOARDS BOTTOM VIEW.....	57
TERMINAL VIEW OF TRANSISTORS .....	70
SPECIFICATIONS .....	71

### APPENDIX:

CIRCUIT DIAGRAM

## SAFETY INSTRUCTIONS

**WARNING:** BEFORE SERVICING THIS CHASSIS, READ THE "X-RAY RADIATION PRECAUTION", "SAFETY PRECAUTION" AND "PRODUCT SAFETY NOTICE" INSTRUCTIONS BELOW.

### X-RAY RADIATION PRECAUTION

- Excessive high voltage can produce potentially hazardous X-RAY RADIATION. To avoid such hazards, the high voltage must not be above the specified limit. The nominal value of the high voltage of this receiver is (A) kV at zero beam current (minimum brightness) under a 120V AC power source. The high voltage must not, under any circumstances, exceed (B) kV.  

Refer to table-1 for high voltage (A), (B).  
(See SETTING & ADJUSTING DATA on page 18)


Each time a receiver requires servicing, the high voltage should be checked following the HIGH VOLTAGE CHECK procedure in this manual. It is recommended that the reading of the high voltage be recorded as a part of the service record. It is important to use an accurate and reliable high voltage meter.
- This receiver is equipped with a Fail Safe (FS) circuit which prevents the receiver from producing an excessively high voltage even if the B+ voltage increases abnormally. Each time the receiver is serviced, the FS circuit must be checked to determine that the circuit is properly functioning, following the FS CIRCUIT CHECK procedure in this manual.
- The only source of X-RAY RADIATION in this TV receiver is the picture tube. For continued X-RAY RADIATION protection, the replacement tube must be exactly the same type tube as specified in the parts list.
- Some part in this receiver have special safety-related characteristics for X-RAY RADIATION protection. For continued safety, parts replacement should be undertaken only after referring to the PRODUCT SAFETY NOTICE below.

### SAFETY PRECAUTION

**WARNING :** Service should not be attempted by anyone unfamiliar with the necessary precautions on this receiver. The following are the necessary precautions to be observed before servicing this chassis.

- An isolation Transformer should be connected in the power line between the receiver and the AC line before any service is performed on the receiver.
- Always discharge the picture tube anode to the CRT conductive coating before handling the picture tube. The picture tube is highly evacuated and if broken, glass fragments will be violently expelled. Use shatter proof goggles and keep picture tube away from the unprotected body while handling.
- When replacing a chassis in the cabinet, always be certain that all the protective devices are put back in place, such as; non-metallic control knobs, insulating covers, shields, isolation resistor-capacitor network etc.
- Before returning the set to the customer, always perform an AC leakage current check on the exposed metallic parts of the cabinet, such as antennas, terminals, screwheads, metal overlays, control shafts etc. to be sure the set is safe to operate without danger of electrical shock. Plug the AC line cord directly into a 120V AC outlet (do not use a line isolation transformer during this check). Use an AC voltmeter having 5000 ohms per volt or more sensitivity in the following manner:

Connect a 1500 ohm 10 watt resistor, paralleled by a 0.15  $\mu$ F, AC type capacitor, between a known good earth ground (water pipe, conduit, etc.) and the exposed metallic parts, one at a time. Measure the AC voltage across the combination of 1500 ohm resistor and 0.15  $\mu$ F capacitor. Reverse the AC plug at the AC outlet and repeat AC voltage measurements for each exposed metallic part. Voltage measured must not exceed 0.3 volts rms. This corresponds to 0.2 milliamp. AC. Any value exceeding this limit constitutes a potential shock hazard and must be corrected immediately.

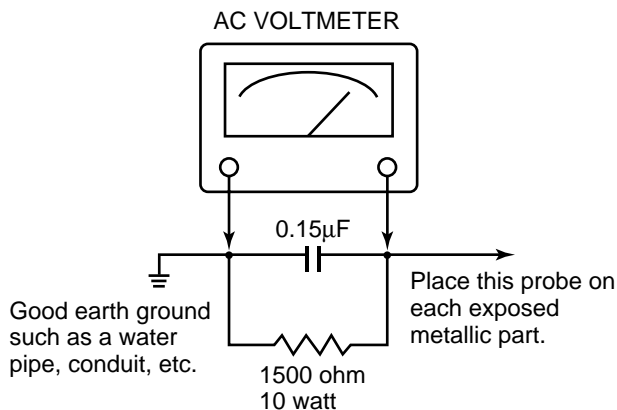


### PRODUCT SAFETY NOTICE

Many electrical and mechanical parts in this chassis have special safety-related characteristics. These characteristics are often passed unnoticed by a visual inspection and the protection afforded by them cannot necessarily be obtained by using replacement components rated for higher voltage, wattage, etc. Replacement parts which have these special safety characteristics are identified in this manual and its supplements; electrical components having such features are identified by the international hazard symbols on the schematic diagram and the parts list.

Before replacing any of these components, read the parts list in this manual carefully. The use of substitute replacement parts which do not have the same safety characteristics as specified in the parts list may create shock, fire, X-ray radiation or other hazards.


# CRT ASSEMBLY REPLACEMENT AND MOUNTING

**CAUTION : DO NOT LOOSEN THE HEX HEAD BOLTS WITH SPRINGS (12 PCS), BECAUSE THOSE ARE FOR SEALING OF CRT COOLANT.**

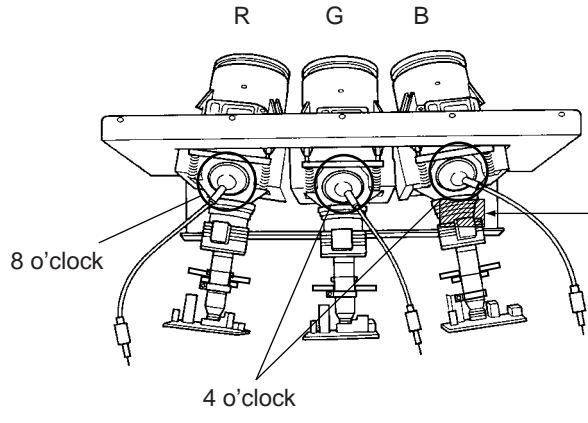

**Attention Serviceman**

The Hex Head Bolts with Springs. (see sketch) used on CRT assembly, are "NOT" Adjustment Screws **DO NOT LOOSEN-FLUID LEAKAGE WILL OCCUR.**

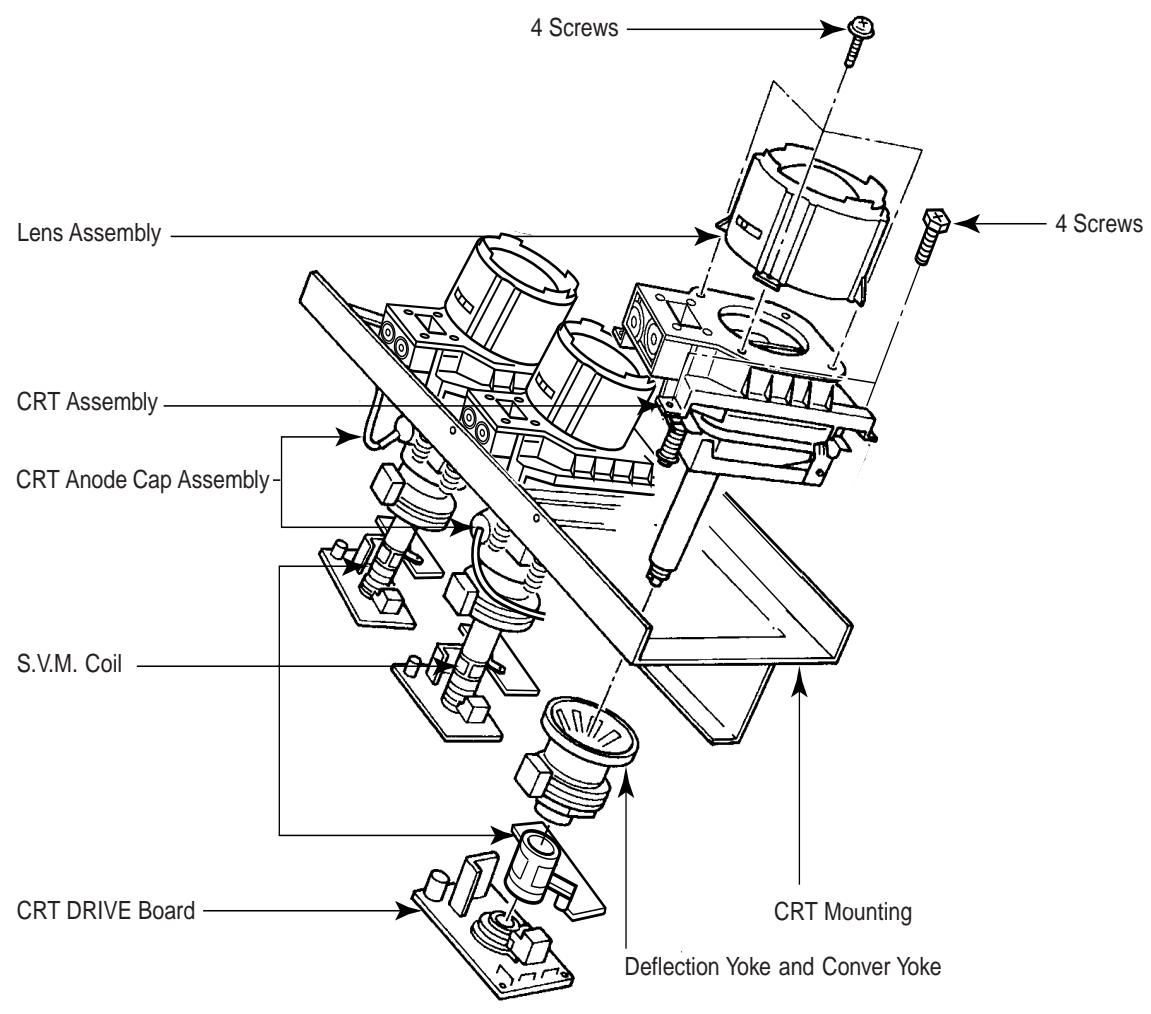

**Lens and Neck Components View**

TO REMOVE CRT (Same procedure for R, G, B)

1. Remove CRT DRIVE Board, S. V. M. COIL and DEF.YOKE from CRT.
2. Remove Lens Assembly.
3. Detach CRT Anode Cap from CRT.
4. Remove CRT Assembly from CRT Mounting.

CRT REPLACEMENT (Same procedure for R, G, B)


Reverse the removal procedures except the followings.

1. Anode Cable should be replaced with new one.  
See "SERVICING PRECAUTIONS" shown below.
2. Install silicon (T461B) to the CRT, replace the Anode cable and put enough silicon again on around the Anode Cap as illustrated.


CAUTION: Align the Anode cable as illustrated on page 4.

ADJUSTING PROCEDURE IN REPLACING CRT

1. R.G.B. CUTOFF (SCREEN VR) ADJUSTMENT (page 6.)
  2. R.G.B. FOCUS ADJUSTMENT (page 6.)
  3. PICTURE TILT ADJUSTMENT (page 7.)
  4. USER CONVERGENCE CENTER CHECK (See owner's manual.)
  5. CENTERING ADJUSTMENT (page 7.)
  6. CONVERGENCE ADJUSTMENT (page 14.)
  7. WHITE BALANCE ADJUSTMENT (page 13.)
- Adjustments are complete.

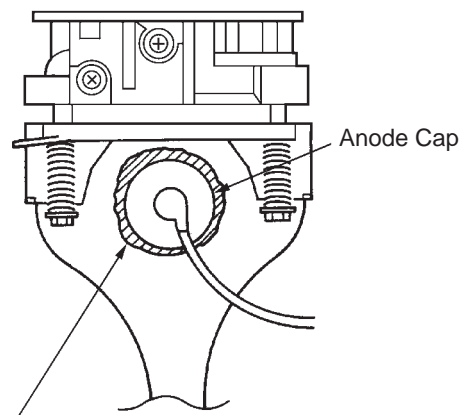


Silicon  
(On shaded area)  
TSE3843W #23960136

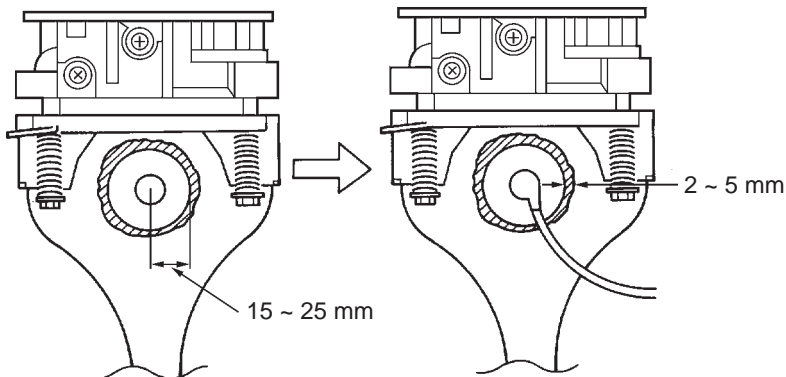


### SERVICING PRECAUTIONS

- Do not use a magnetized screw driver for screws of Deflection Yoke and Velocity Modulation Coil to avoid magnetization of electron gun. Magnetization of electron gun will degrade basic function and result in unbalance of right and left shift of user static convergence, and result in no variable quantity.

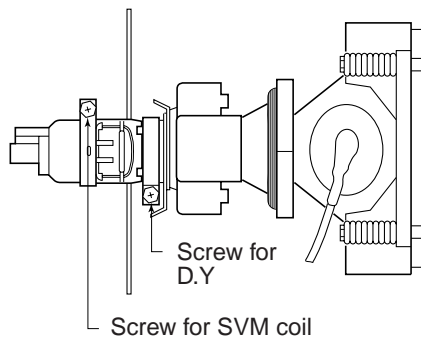


- When replacing the anode cap assembly (CRT) or anode lead assembly (F.B.T.), remove the anode lead holder from old one and attach the holder again to new anode lead.

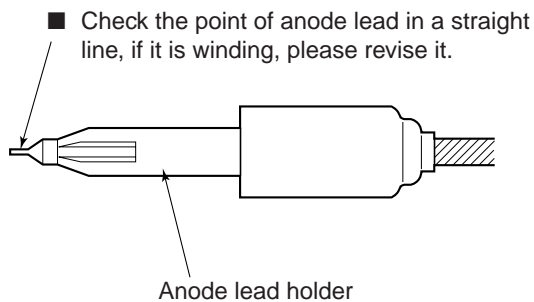

**WARNING** : BEFORE SERVICING THIS CHASSIS, READ THE "X-RAY RADIATION PRECAUTION", "SAFETY PRECAUTION" AND "PRODUCT SAFETY NOTICE" ON PAGE 3 OF THIS MANUAL.

## PICTURE TUBE COMPONENTS ADJUSTMENT

### DESCRIPTION OF NECK COMPONENTS

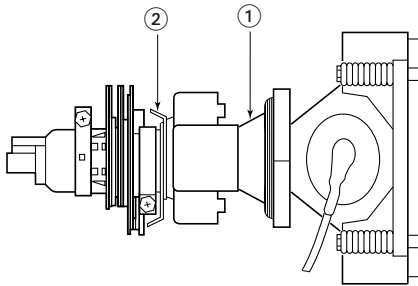

- ① Deflection yoke and convergence yoke  
The position on the neck is required most front (CRT funnel side) and the screw is fastened after rotating yoke adjusting picture tilt.
- ② Centering magnet  
After adjusting picture tilt, picture position is finally fixed by this magnet.  
In order to get maximum margin of user convergence control for center of screen, this magnet have to be used for center convergence adjustment.

#### PREPARATION


Operate the receiver for at least 5 minutes.

#### R, G, B CUTOFF (SCREEN VR) ADJUSTMENT


1. Adjust before replacing the SCREEN assembly.
2. Press RESET button on TV or remote hand set.
3. Call up the adjustment mode display, then adjust the data of items RCUT, GCUT and BCUT to "40".
4. Press TV (ANT)/VIDEO button on TV.
5. Gradually rotate R, G and B SCREEN volume of FOCUS PAC (page 8) clockwise or counterclockwise until the raster appears slightly on the CRT through the each lens, and leave them.  
(Look into the lens in order to check the raster.)
6. Press TV (ANT)/VIDEO button on TV again.

#### RGB ALIGNMENT ADJUSTMENT (ONLY 61HX70)

1. Set the knobs of the pole 2, 4, 6 magnets of the SVM coil so that their magnetic fields override each other.

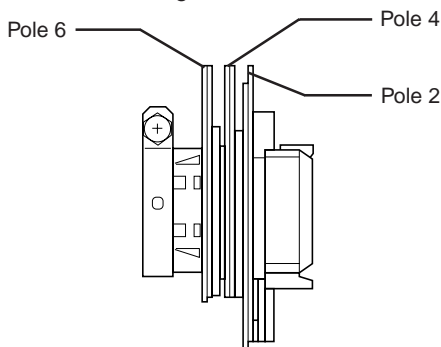

Pole 2 magnet

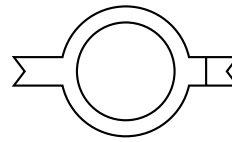


Pole 4, 6 magnet



2. Select adjustment mode (see page 10).
3. Adjust the centering magnets for the RED, GREEN and BLUE colors. (See CENTERING ADJUSTMENT.)
4. Press "7" button to display the built-in cross-hatch.
5. Press "0" and "RTN" buttons to make the picture a single Red color.  
100 button ..... to erase Red color  
0 button ..... to erase Green color  
RTN button ..... to erase Blue color5.
6. Adjust the alignment of the projection tube for RED. (See steps (1) to (3) below.


- (1) Slightly turn the focus VR of RED to the left.
- (2) Adjust the pole 2 magnet so that the bright section of the cross hatch on the center of the dark section (flare).

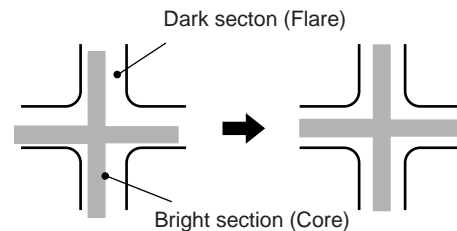

- (3) Readjust the centering magnets for the LED colors.
- (4) Reconfirm that the alignment, and centering are correct. If necessary, repeat the steps (1) to (3) above to adjust appropriately.
7. Adjust the electric focus of RED as well as possible. (See RGB FOCUS ADJUSTMENT.)
8. Adjust the alignment of GREEN and BLUE using the above procedure for adjusting RED.

**R, G, B FOCUS ADJUSTMENT**

1. Before adjusting the R, G, B FOCUS, remove the 4 screws of Lens Assembly which is fixed on the CRT Assembly. (See page 4.)  
Then turn around the Lens Assembly by 180° to adjust the fastening screw (Fig. a) and fasten the 4 screws to secure Lens Assembly.
2. Select the adjustment mode. (See page 10.)
3. Press "7" button to display the built-in cross-hatch.
4. Press "0" and "RTN" buttons to make the picture a single Red color.  
100 button ..... to erase Red color  
0 button ..... to erase Green color  
RTN button to erase Blue color
5. Loosen the fasten screw and adjust Red lense focus to best focusing point of picture center. Then fasten the screw. (See Fig. a.)

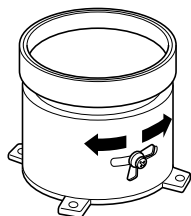

**Fig. a**


6. Adjust FOCUS VR "R" of FOCUS PACK to find best focusing point of picture center.
7. Repeat steps 3 to 5 for Green and Blue colors.

**TILT ADJUSTMENT**


Rotate R, G, B deflection yoke so that picture becomes horizon, then fasten screw.

**CENTERING ADJUSTMENT**

1. Stretch a thread between two center of screen edge (top and bottom, left and right).

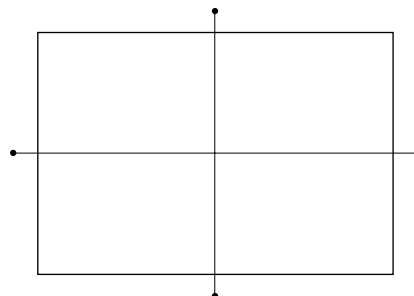


2. Select the adjustment mode.
3. Press TV/VIDEO button on the Remote Control to display the white cross-bar.

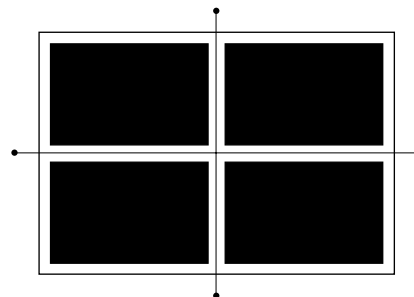

4. Perform VCEN adjustment. (See page 12.)
5. Adjust G centering magnet so that the cross-bar pattern center comes to screen center.
6. Perform HEIGHT adjustment. (See page 13.)
7. Perform VERT. LINEARITY adjustment.
8. Perform WIDTH adjustment. (See page 13.)
9. Check whole quality of green line.
10. Adjust R, B centering magnet so that the cross-bar pattern center comes to screen center.

LOCATION OF SCREEN AND FOCUS VR'S

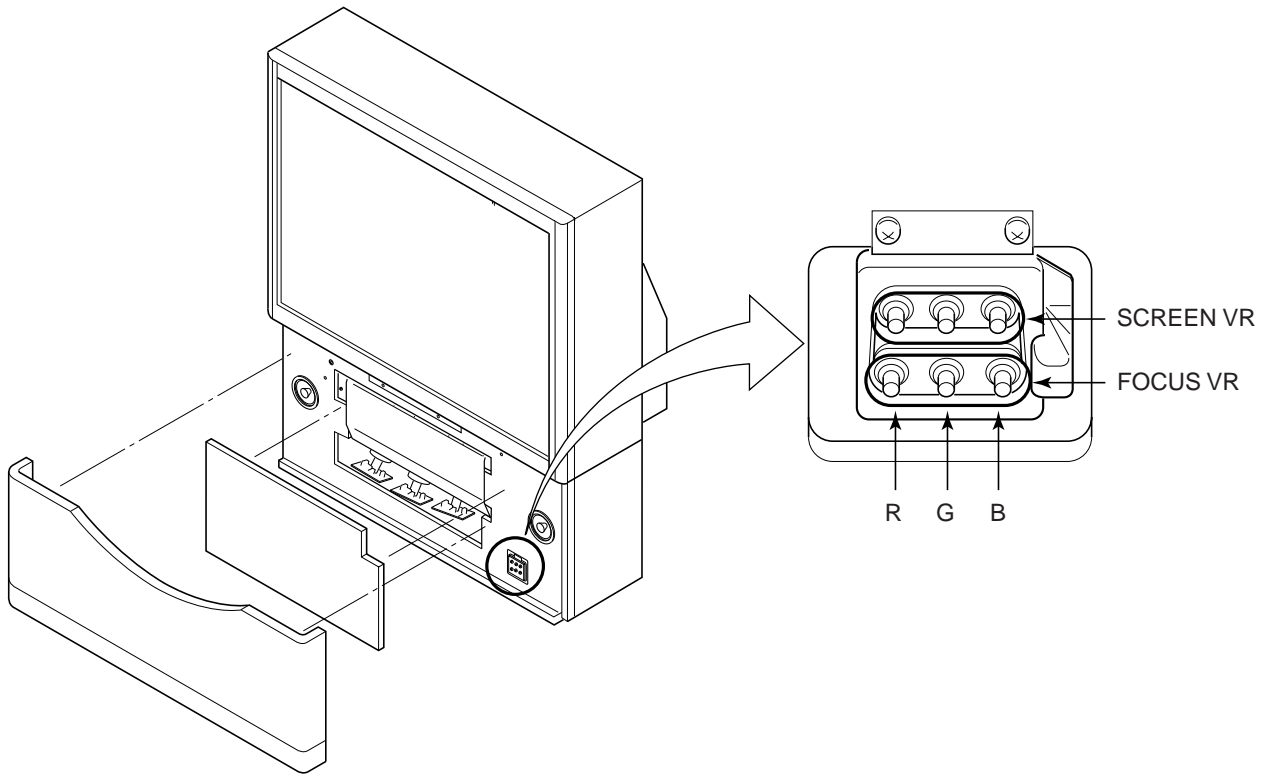



## REPLACEMENT OF THE CRT

Service parts are provided for each R, G and B.  
The contents of the parts are as follows.

		R	G	B
HITACHI CRT	50HX70	23005770	23005771	23003382
	55HX70	23005777	↑	↑
	55H70	23005723	23005808	23005724
	61HX70	23007215	23007216	23007217
	61H70	23005689	23005808	23005690

### REPLACEMENT OF HIGH VOLTAGE CABLE

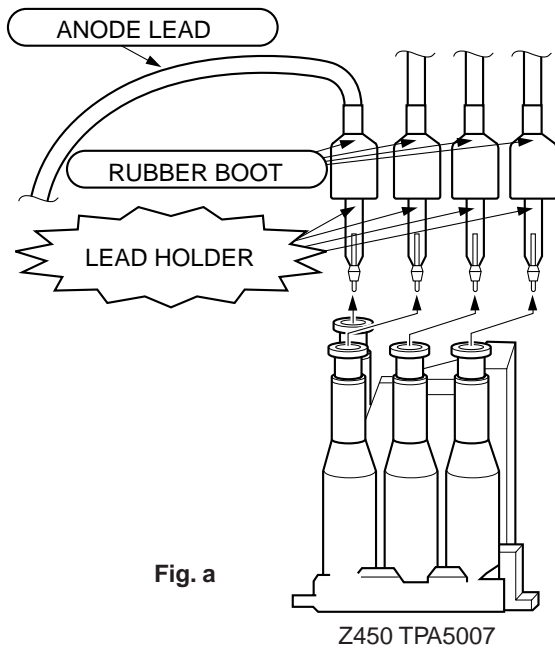


Fig. a

1. When replacing Anode Lead or Anode Cap with new one, remove Lead Holder from old lead as shown in figure below, and put it on new lead. Do not throw away Lead Holder.

**NOTE : THE LEAD HOLDER IS ATTACHED TO TPA5007 (Z450), BUT IS NOT ATTACHED TO ANODE LEAD AND ANODE CAP. RUBBER BOOT IS ATTACHED TO ANODE LEAD AND ANODE CAP.**

2. Detaching Lead Holder


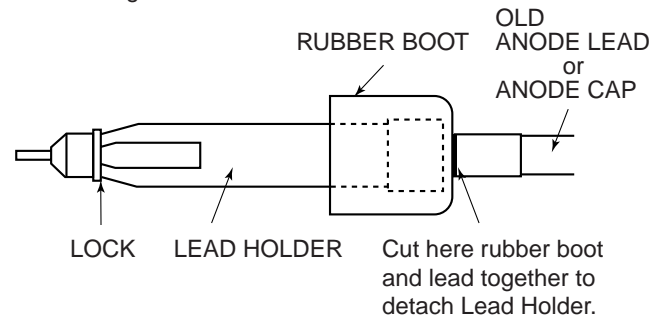


Fig. b

## SERVICE MODE


### 1. ENTERING TO SERVICE MODE

- 1) Press MUTE button once on Remote Control.
- 2) Press MUTE button again to keep pressing.
- 3) While pressing the MUTE button, press MENU button on TV set.

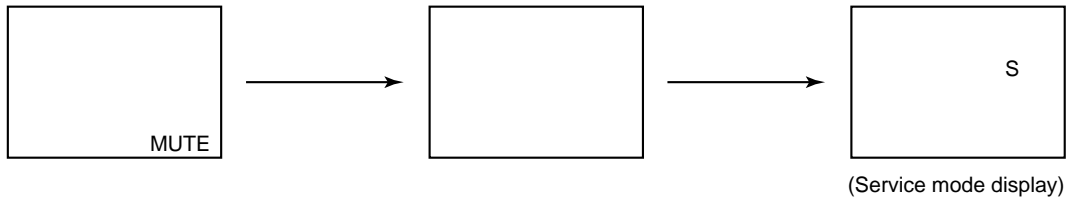

### 2. DISPLAYING THE ADJUSTMENT MENU

- 1) Press MENU button on TV.

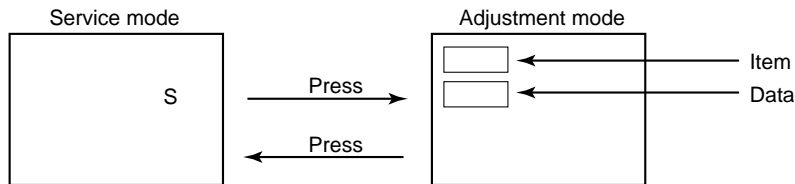

### 3. KEY FUNCTION IN THE SERVICE MODE

The following key entry during display of adjustment menu provides special functions.

Screen adjustment mode ON/OFF:	TV (ANT)/VIDEO button (on TV)
Selection of the adjustment items :	Channel ▲/▼ (on TV or Remote)
Change of the data value :	Volume ▲/▼ (on TV or Remote)
Adjustment menu mode ON/OFF :	MENU button (on TV)
Initialization of the memory (QA02) :	RECALL+Channel button on TV (▲)
Initialization of the self diagnostic data:	RECALL+Channel button on TV (▼)

“RCUT” selection :	1 button
“GCUT” selection :	2 button
“BCUT” selection :	3 button
“SCNT” selection :	4 button
“SCOL” selection :	5 button
“TNTC” selection :	6 button
Convergence adj :	7 button
Test audio signal ON/OFF (1kHz) :	8 button
Self diagnostic display :	9 button

#### 4. SELECTING THE ADJUSTING ITEMS

- 1) Every pressing of CHANNEL ▲ button in the service mode changes the adjustment items in the order of table-2.  
(▼ button for reverse order)

Refer to table-2 for preset data of adjustment mode.  
(See SETTING & ADJUSTING DATA on page 18)

#### 5. ADJUSTING THE DATA

- 1) Pressing of VOLUME ▲ or ▼ button will change the value of data in the range from 00H to FFH. The variable range depends on the adjusting item.

#### 6. EXIT FROM SERVICE MODE

- 1) Pressing POWER button to turn off the TV once.

#### ■ INITIALIZATION OF MEMORY DATA OF QA02


After replacing QA02, the following initialization is required.

1. Enter the service mode, then select any register item.
2. Press and hold the RECALL button on the Remote, then press the CHANNEL ▲ button on the TV. The initialization of QA02 has been completed.
3. Check the picture carefully. If necessary, adjust any adjustment item above.  
Perform "Programming Channel Memory" on the owner's manual.

CAUTION: Never attempt to initialize the data unless QA02 has been replaced.




#### 7. SELF DIAGNOSTIC FUNCTION


- 1) Press "9" button on Remote Control during display of adjustment menu in the service mode.  
The diagnosis will begin to check if interface among IC's are executed properly.
- 2) During diagnosis, the following displays are shown.

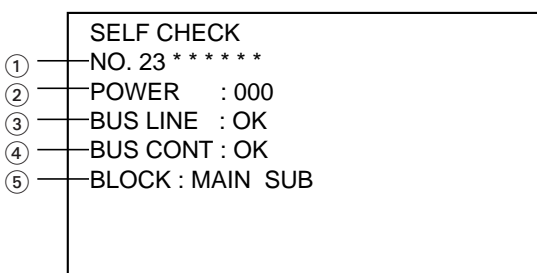

- ① Part number of microprocessor (QA01)
- ② Operation number of protection circuit (current limiter) . . . "000" is normal.
- ③ BUS line check ——— "OK" ..... Normal  
                                   └── "SCL-GND" or "NG" ..... SCL-GND short circuit  
   "SDA-GND" or "NG" ..... SDA-GND short circuit  
   "SCL-SDA" or "NG" ..... SCL-SDA short circuit
- ④ BUS line ACK (acknowledge) check  
                                   "OK" ..... Normal  
                                   Display of Location Number . . . NG  
                                   (Display example)  
                                   "QA02 NG", "H001 NG", "Q501 NG" etc.  
                                   Note: The indication of failure place is only one place though failure places are plural. When  
                                   repair of a failure place finishes, the next failure place is indicated. (The order of priority of  
                                   indication is left side.)
- ⑤ Sync. signal check ——— Green display ..... Normal  
                                   Red display ..... NG  
                                   MAIN ..... Main sync  
                                   SUB ..... Sub sync (when turn on the PIP)

## ELECTRICAL ADJUSTMENT

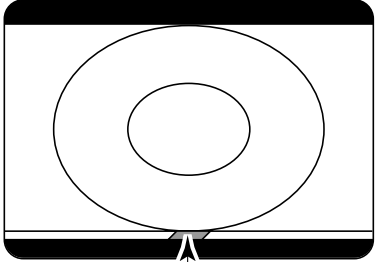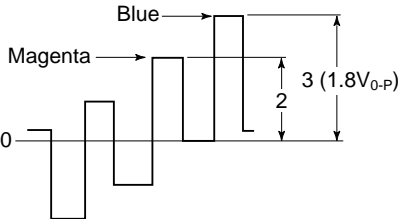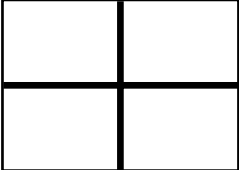
ITEM	ADJUSTMENT PROCEDURE
VERTICAL POSITION (VCEN)	<ol style="list-style-type: none"> <li>1. Call up the adjustment mode display, then select item VCEN.</li> <li>2. Press the VOLUME ▲ or ▼ button to get the voltage <math>0 \pm 10</math> mV.</li> <li>3. Measuring the terminals voltage are TP-V and TP-G on SIGNAL Board.</li> </ol>
SUB-BRIGHTNESS (BRTC)	<ol style="list-style-type: none"> <li>1. Constrict the picture height until the vertical retrace line appears adjusting the HEIGHT control on the MAIN board.</li> <li>2. Adjust the CONTRAST to the minimum and BRIGHTNESS to the center.</li> <li>3. Enter the service mode, then select "BRTC" register.</li> <li>4. Adjust the data value so the belt of vertical retrace line just disappear.</li> <li>5. Adjust the HEIGHT control.</li> </ol> <p>* Adjust the SUB-BRIGHTNESS after adjusting the WHITE BALANCE.</p> <div style="text-align: center;">  <p style="text-align: center;">Vertical retrace line</p> </div>
SUB-COLOR (SCOL) SUB-TINT (TNTC)	<ol style="list-style-type: none"> <li>1. Receive color-bar signal from color-bar generator.</li> <li>2. Adjust the BRIGHTNESS and CONTRAST to the center (RESET status).</li> <li>3. Connect oscilloscope to TP501 on the MAIN board.</li> <li>4. Enter the service mode, then select "SCOL".</li> <li>5. Temporarily adjust the data value to achieve about <math>1V_{0-p}</math> of blue bar.</li> <li>6. Select "TNTC" register.</li> <li>7. Adjust the data value to obtain the blue bar to magenta bar ratio of 3:2 as shown.</li> <li>8. Select "SCOL" register.</li> <li>9. Adjust the data value to achieve <math>1.8V_{0-p}</math> of blue bar on scope.</li> <li>10. Check the picture with off-air signal.</li> </ol> <div style="text-align: center;">  </div>
SUB-CONTRAST (SCNT)	<ol style="list-style-type: none"> <li>1. Tune in a color program and adjust the BRIGHTNESS and CONTRAST to normal mode(RESET).</li> <li>2. Enter the service mode, then select "SCNT" register.</li> <li>3. Change "SCNT" data to 13H.</li> <li>4. Check the picture contrast.</li> </ol>
PICTURE POSITION	<ol style="list-style-type: none"> <li>1. Receive the pattern signal which shows it's center on the screen.</li> <li>2. Adjust the picture position alternately by turning CENTERING MAGNETS for proper picture position.</li> <li>3. Check the picture with off-air signal.</li> </ol> <div style="text-align: center;">  </div>

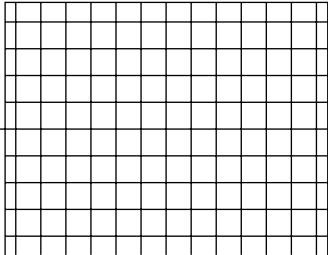ITEM	ADJUSTMENT PROCEDURE
HEIGHT (HIT) * Except 16:9 mode	<ol style="list-style-type: none"> <li>1. Call up the adjustment mode display, then select the item HIT.</li> <li>2. Press the VOLUME ▲ or ▼ button to get the picture so the top of raster begins to lack.</li> <li>3. Press the VOLUME ▲ button to advance the data by 10 steps.</li> </ol> Note : Check the vertical picture position is correct.
HEIGHT (HIT) * Only 16:9 mode	<ol style="list-style-type: none"> <li>1. Call up the adjustment mode display, then select the item HIT.</li> <li>2. Press the VOLUME ▲ or ▼ button so that picture height becomes 75% of the front mask.</li> </ol>
WIDTH (WID)	<ol style="list-style-type: none"> <li>1. Call up the adjustment mode display, then select the item <b>WID</b>.</li> <li>2. Press the VOLUME ▲ or ▼ button to get the picture so the left and right edges of raster begins to lack.</li> <li>3. Press the VOLUME ▲ or ▼ button to advance the data by 13 steps.</li> </ol> Note : Check the horizontal picture position is correct.
VERTICAL LINEARITY (VLIN)	<ol style="list-style-type: none"> <li>1. Call up the adjustment mode display, then select the item <b>VLIN</b>.</li> <li>2. Receive cross-hatch pattern signal.</li> <li>3. Press the VOLUME ▲ or ▼ button to obtain the picture of the best linearity.</li> <li>4. Then readjust the item HIT.</li> </ol> <div style="text-align: right; margin-top: 20px;">  </div>
WHITE BALANCE (RCUT) (GCUT) (BCUT) (RDRV) (BDRV)	<ol style="list-style-type: none"> <li>1. Press RESET button on TV or remote hand set.</li> <li>2. Call up the adjustment mode display, then adjust the data of items <b>RCUT</b>, <b>GCUT</b> and <b>BCUT</b> to "40".</li> <li>3. Press TV (ANT)/VIDEO button on TV.</li> <li>4. Gradually rotate R, G and B SCREEN volume of FOCUS PAC (page 8) clockwise or counterclockwise until the raster appears slightly on the CRT through the each lens, and leave them. (Look into the lens in order to check the raster.)</li> <li>5. Press TV (ANT)/VIDEO button on TV again.</li> <li>6. Exit from service mode.</li> <li>7. Receive white raster pattern signal, and adjust the contrast to the minimum to make white picture to low light.</li> <li>8. Adjust the data of items <b>RCUT</b>, <b>GCUT</b> and <b>BCUT</b> for low light area.</li> <li>9. Adjust the contrast to the maximum to make white picture to high light.</li> <li>10. Adjust the data of items <b>GDRV</b> and <b>BDRV</b> Controls for proper white-balanced picture in high light area.</li> <li>11. Check the white balance in both low and high light areas. If necessary, perform again steps from 7 to 9.</li> </ol>

## CONVERGENCE ADJUSTMENT

Adjust convergence from center to circumference in order.


1. Select the adjustment mode following the steps on page 10.

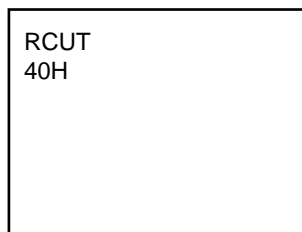

### KEY FUNCTION IN THE CONVERGENCE ADJUSTMENT:

Up :	2 button
Selet Green color:	3 button
Left :	4 button
Blinking of cursor ON/OFF:	5 button
Right:	6 button
Adjust mode ON/OFF:	7 button
Down:	8 button
Erase Green line:	0 button
Erase Red line:	100 button
Erase Blue line:	CHRTN (ENT) button

2. Press "7" button to display the built-in cross-hatch pattern.

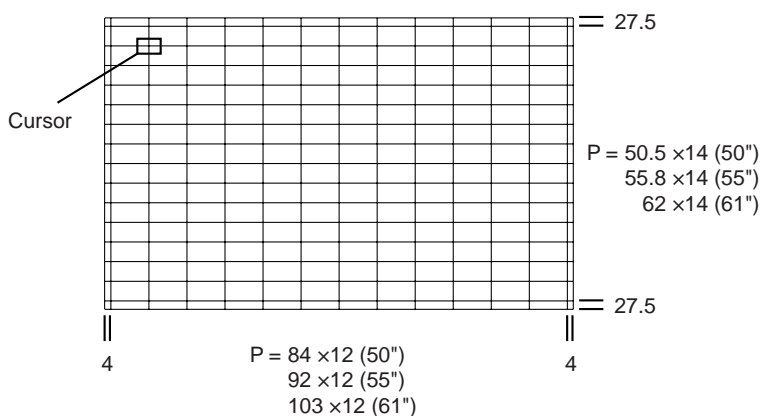

### Note:

Adjusting procedure in replacing convergence board.

1. User convergence center check. Make sure the best convergence setting is about the center of adjustable range.
2. CENTERING ADJUSTMENT
3. PICTURE POSITION ADJUSTMENT
4. HIT, WID ADJUSTMENT
5. CONVERGENCE ADJUSTMENT

The pattern includes three colors (R, G, B).

The cursor should be blinking in Red.

This means that the Red color is adjustable.

Adjustment around cursor can be done.

3. Press "3" button to select Green color to be adjusted.
4. Press "5" button to stop the blinking of cursor.
5. Press "2 (up)", "8 (down)", "4 (left)" or "6 (right)" to obtain the correct cross-hatch pattern as above.  
If necessary, the specified color line can be erased from the screen.  
100 button ..... to erase Red line  
0 button ..... to erase Green line  
RTN (ENT) button ..... to erase Blue line
6. Press "5" button to make the cursor blinking.
7. Press "2", "8", "4", "6" buttons to move the cursor to other point to be adjusted.
8. Repeat steps 4 to 7.
9. Repeat steps 3 to 8 to adjust Red and Blue colors.  
Converge the selected color line into the Green line.
10. Press "7" button to enter the adjusted states.  
At this time, picture changes for about 1 second.
11. Press "7" button again to return to the normal picture.

**NOTES**

In many cases, color misconvergence may be corrected by returning HIT and WID data in main deflection side to initial adjusting values. Following cases will surely require readjustment of convergence.

**CRT REPLACEMENT**

When CRT is replaced, main deflection readjustment and color matching are required.

Perform following procedures.

1. Replace two CRT's of blue and red.
2. Perform horizontal adjustment for blue and red yokes on base of green CRT data. Mount yoke and velocity mod. coil alignment, pushing towards CRT without gap.
3. Adjust alignment of blue and red. (Refer Alignment adjustment for details.)
4. Rotating centering magnet, adjust CRT centers of red and blue to CRT center of green.  
(Picture position adjustment)
5. Adjust HIT and WID data of main deflection, and decide data at the most precise screen comparing to green data.
6. Adjust convergence of each screen picture for color matching. Do not move green one at this time.
7. After convergence adjustment of each screen picture finishes, replace green CRT.  
For green CRT as well, repeat steps 2 to 5 above on bases of red and blue color matching to adjust convergence.


**REPLACING CONVERGENCE UNIT**

When replacing convergence unit, all picture screens require readjustment basically, but the following method allows process be reduced considerably.


1. Replace the memory (Q713) on defective unit with memory on new unit. Mounting the unit on the SET after the above working realizes picture screen before replacement immediately.
2. Mount unit which has combination of old and new memories, on SET and turn it on. Screen shows whole picture looks like straightly shifted towards vertical or horizontal direction.
3. Adjust again centers of green, red and blue with centering magnets.
4. Check each picture screen for slight disparity of color and picture size. If necessary, add some adjustments of main deflection and color matching of convergence.

# SCREEN AND MIRROR ALIGNMENTS

## ASSEMBLING OF FRONT SCREEN

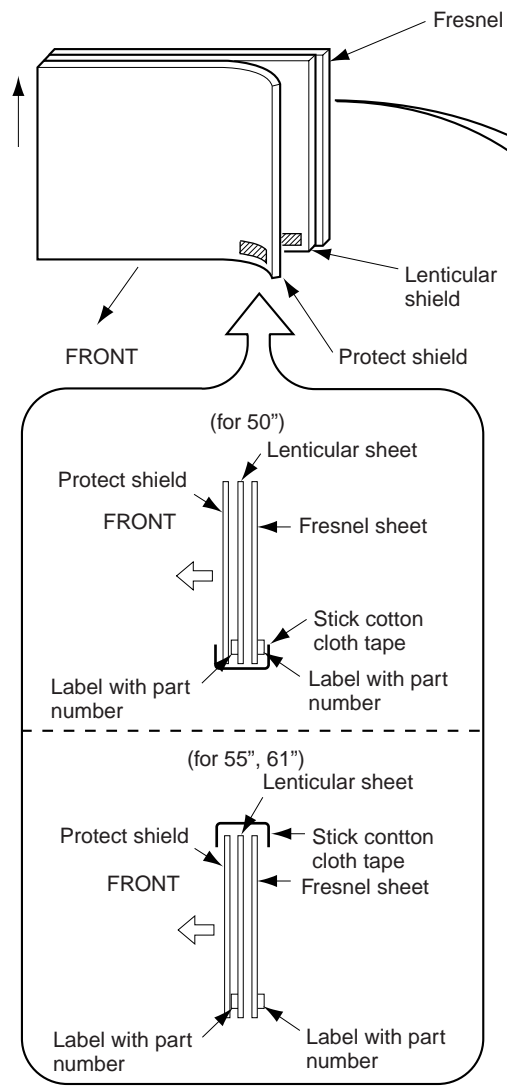

## MOUNTING OF FRONT SCREEN

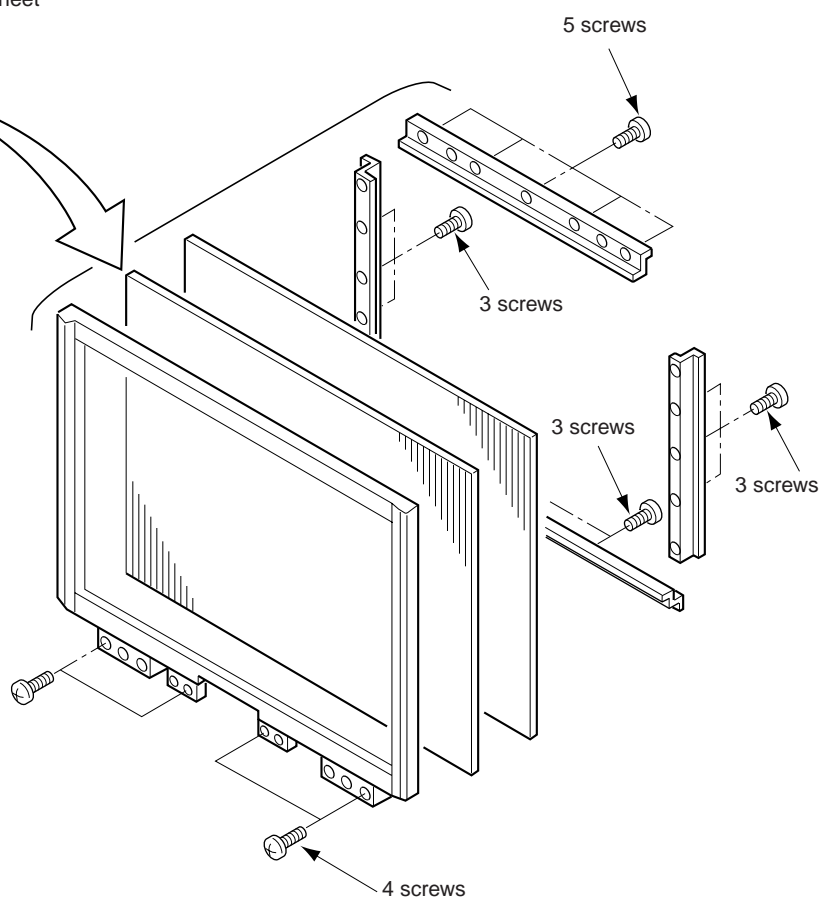

\* Please refer to Mechanical Disassembly on page 25.

**CAUTION :** Do not hold the optical system parts (lens and mirror) with bare hand to avoid finger-prints on the surface of those parts.

### HOW TO CLEAN LENS AND MIRROR

1. Be sure to remove sand dust with an air brush, etc.
2. When it is stained slightly, breathe upon it and wipe away with the specified cleaning cloth.  
For other stains than the above, wipe the stains away with the specified cloth into which a cleaning liquid has been soaked.

Cleaning liquid..... **LENS LUSTER** (Manufactured by Edmund Scientific Co.), etc.

### HOW TO CLEAN SCREEN

When cleaning the screen, use a soft cloth so as not to damage the screen.

1. Wipe the screen with a dry cloth to remove moisture on the screen.

**Note :** Absolutely do not use detergent, water, alcohol, benzene, thinner, etc. for cleaning in order not to wipe away the black print on the surface.



## CIRCUIT CHECKS

### HIGH VOLTAGE CHECK

**CAUTION:** There is no HIGH VOLTAGE ADJUSTMENT on this chassis. Checking should be done following the steps below.

1. Connect an accurate high voltage meter to the anode of the picture tube.
2. Turn on the receiver. Set the BRIGHTNESS and CONTRAST to minimum (zero beam current).
3. High voltage must be measured below (B) kV.

Refer to table-1 for high voltage (B).  
(See SETTING & ADJUSTING DATA on page 18)

4. Vary the BRIGHTNESS to both extremes to be sure the high voltage does not exceed the limit under any conditions.

**CAUTION:**

When the following parts fail, check the High Voltage after replacing.

Location No.	Name	Descriptions	
		40", 43"	50", 55", 61"
T461	Flyback	TFB3088AD	←
C407	Capacitor	4300pF, ±3%	5100pF, ±3%
C408	Capacitor	0.027μF, ±5%	0.022μF, ±3%
C445	Capacitor	0.015μF, ±5%	0.022μF, ±5%
C446	Capacitor	0.011μF, ±5%	0.012μF, ±5%
C447	Capacitor	6200PF, ±3%	5600pF, ±3%
C448	Capacitor	8200PF, ±5%	←
C449	Capacitor	1000PF, ±3%	←

### ANODE VOLTAGE MEASURING METHOD

**CAUTION:** Take extra precaution when measuring this high voltage. High voltages are also present in surrounding circuit boards (CRT DRIVE assembly, DEFLECTION assembly, and POWER SUPPLY assembly).


1. Disconnect the FBT anode cable as outlined below. Measure high voltage at the point where the cable enters the FBT.
2. Holding the rubber cover firmly, turn it counterclockwise and check that the lock has been disengaged. (See Fig. b on page 9.)
3. Determine the extent of the rubber cover before disconnecting the cable.
4. Pull straight up the anode cable to disconnect.
5. When reconnecting the cable, proceed in the reverse order. After reconnecting, tug on the cable to check that it is secure.

### FS CIRCUIT CHECK

The Fail Safe (FS) circuit check is indispensable for the final check in servicing. Checking should be done following the steps below.

1. Turn the receiver on.
2. Temporarily short TP- (R) and TP- (X) on the DEF/POWER Board with a jumper wire. Raster and sound will disappear.
3. The receiver must remain in this state even after removing the jumper wire. This is the evidence that the FS circuit is functioning properly.
4. To obtain a picture again, temporarily turn the receiver off and allow the FS circuit more than 5 seconds to reset. Then turn the receiver on to produce a normal picture.

### Troubleshooting Guide for Fail Safe Circuit

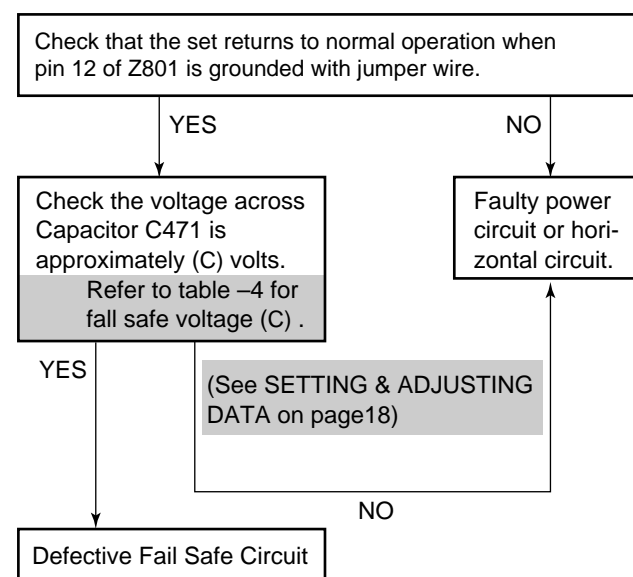

## CHAPTER 2 SPECIFIC INFORMATIONS

### SETTING & ADJUSTING DATA

#### 【 SAFETY INSTRUCTIONS 】

		40~61"
HIGH VOLTAGE AT ZERO BEAM:	(A)	31.5 kV
MAX HIGH VOLTAGE:	(B)	32.6 kV

Table-1

#### 【 SERVICE MODE 】

##### ADJUSTING ITEMS AND DATA IN THE SERVICE MODE:

Item	Name of adjustment	Preset	Date	Item	Name of adjustment	Preset	Date
RCUT	R CUTOFF	40H	←	VPS	V-SHIFT	0AH	←
GCUT	G CUTOFF	40H	←	PYOF	PIP Y OFFSET	17H	←
BCUT	B CUTOFF	40H	←	PIOF	PIP I OFFSET	24H	←
RDRV	R DRIVE	40H	←	PQOF	PIP Q OFFSET	1EH	←
BDRV	B DRIVE	40H	←	VCP	V-COMPENSATE	0AH	←
CNTX	SUB CONT MAX	7FH	←	PARA	E-W PARABOLA (DPC)	29H	←
BRTC	SUB-BRIGHT	80H	←	CNR	E-W CORNER	08H	←
COLC	SUB-COLOR	50H	←	TRAP	TRAPEZIUM	0CH	←
TNTC	SUB-TINT	44H	←	HCP	H-COMPENSATE	00H	←
SCOL	SUB COLOR	05H	←	VFC	V-F CORRECT	00H	←
SCNT	SUB-CONTRAST	10H	←	PHUE	PIP TINT	40H	←
HPOS	HORIZ. POSITION	6DH	←	PCNT	PIP CONT	10H	←
VPOS	VERT. POSITION	00H	←	PCOL	PIP COLOR	15H	←
HIT	HEIGHT	64H	55H	VCEN	V POSITION	70H	←
LIN	V-LINEARITY	12H	←	TVOP	TV OPTION	00H	←
VSC	V-S CORRECTION	10H	←	OPT0	TV SET OPTION	50H	←
WID	PICTURE WIDTH	23H	←	OPT1	TV SET OPTION	05H	←

Table-2


#### 【 CIRCUIT CHECKS 】

FBT DETECTION VOLTAGE	(C)	24.5V
-----------------------	-----	-------


Table-3

# LOCATION OF CONTROLS (Representative : 61HX70)


## TV front

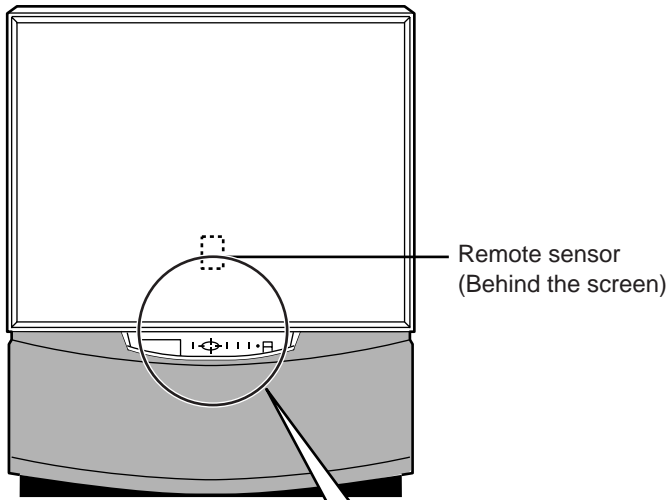


## Behind the door

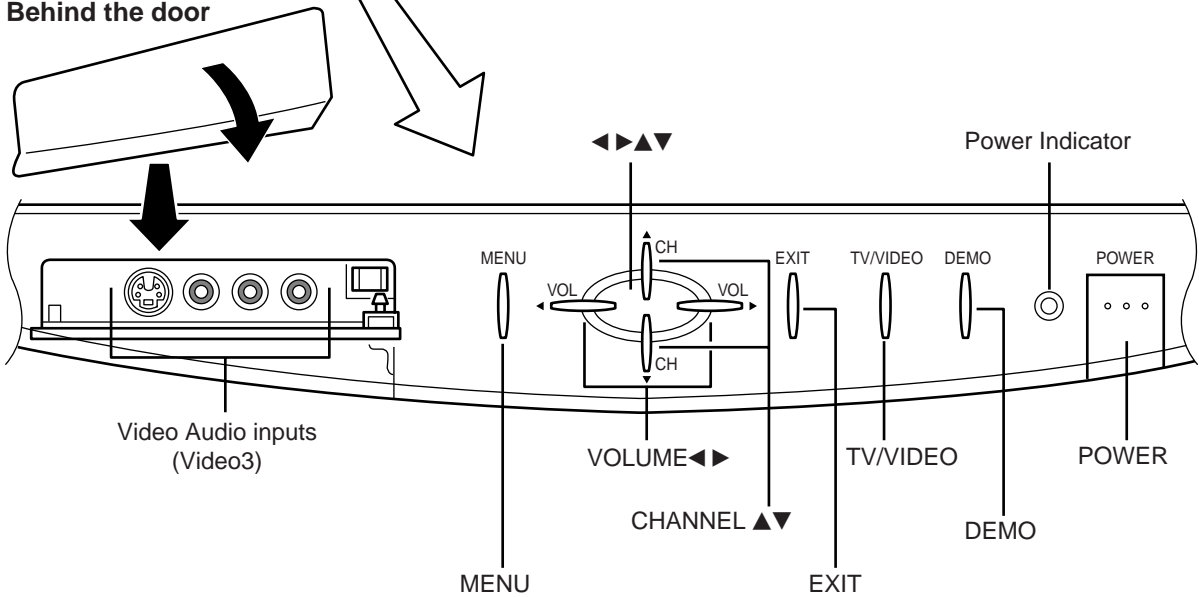

## TV rear

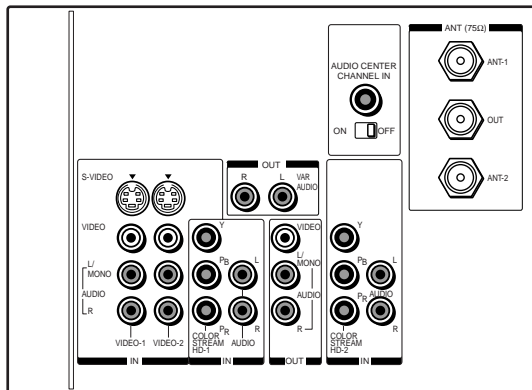

# Remote Control

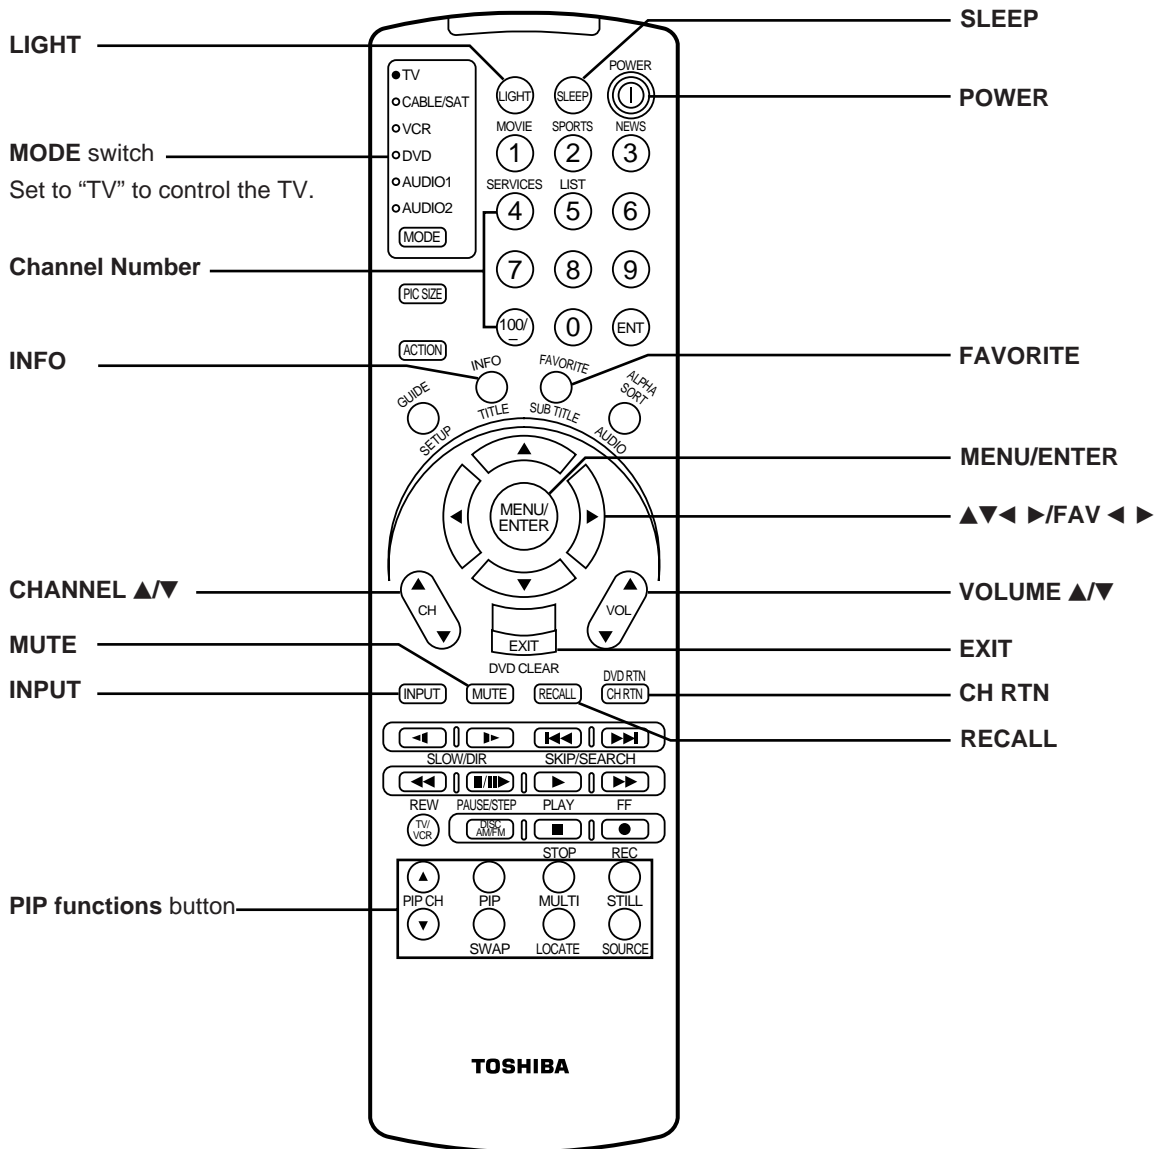

# PROGRAMMING CHANNEL MEMORY

The channel memory is the list of TV channel numbers the TV tunes in when you press the CHANNEL ▲ or ▼ button.

**First, use the TV/CABLE and CH PROGRAM functions to preset all active channels in your area automatically.**

If necessary, arrange the preset channels with the ADD/ERASE functions so that you can tune into only desired channels.

**Note:** If you utilize both ANT-1 and ANT-2 terminals for some model, perform programming channels for each input source.

## TV/CABLE function

- 1 Press **MENU**, then press ► or ◀ until the SET UP menu appears.
- 2 Press ▼ (or ▲) until "TV/CABLE" is highlighted.
- 3 Press ► or ◀ to highlight either "TV" or "CABLE", whichever you use.

## CH PROGRAM function

- 1 Select "CH PROGRAM" following steps 1 and 2 above.
- 2 Press ► or ◀ to start channel programming.  
The TV will automatically cycle through all the TV or CABLE channels selected by the TV/CABLE function, and store active channels in the channel memory.
- 3 When channel programming is complete, you will see the message to the right appears.
- 4 Press **CHANNEL ▲** or **▼** to make sure the channel programming has been done properly.

## ADD/ERASE function

After performing the CH PROGRAM function, you can add or erase specific channels.

- 1 Select the channel you want to erase using the **CHANNEL ▲** or **▼** button, or select the channel you want to add using the **Channel Number** buttons.
- 2 Press **MENU**, then press ► or ◀ until the SET UP menu appears.
- 3 Press ▼ (or ▲) until "ADD/ERASE" is highlighted.
- 4 Press ► or ◀:  
**To erase the channel** press the button until "ERASE" is highlighted.  
**To add the channel** press the button until "ADD" is highlighted.
- 5 Repeat steps 1 to 4 for other channels.


You have now completed the channel programming.

**Note:** The CHANNEL ▼/▲ buttons on the TV function as the ▼/▲ buttons while a menu is on the screen.

\* Please refer to owner's manual in detail.


**THIS PAGE IS  
INTENTIONALLY LEFT  
BLANK.**

# CIRCUIT BLOCK DIAGRAM

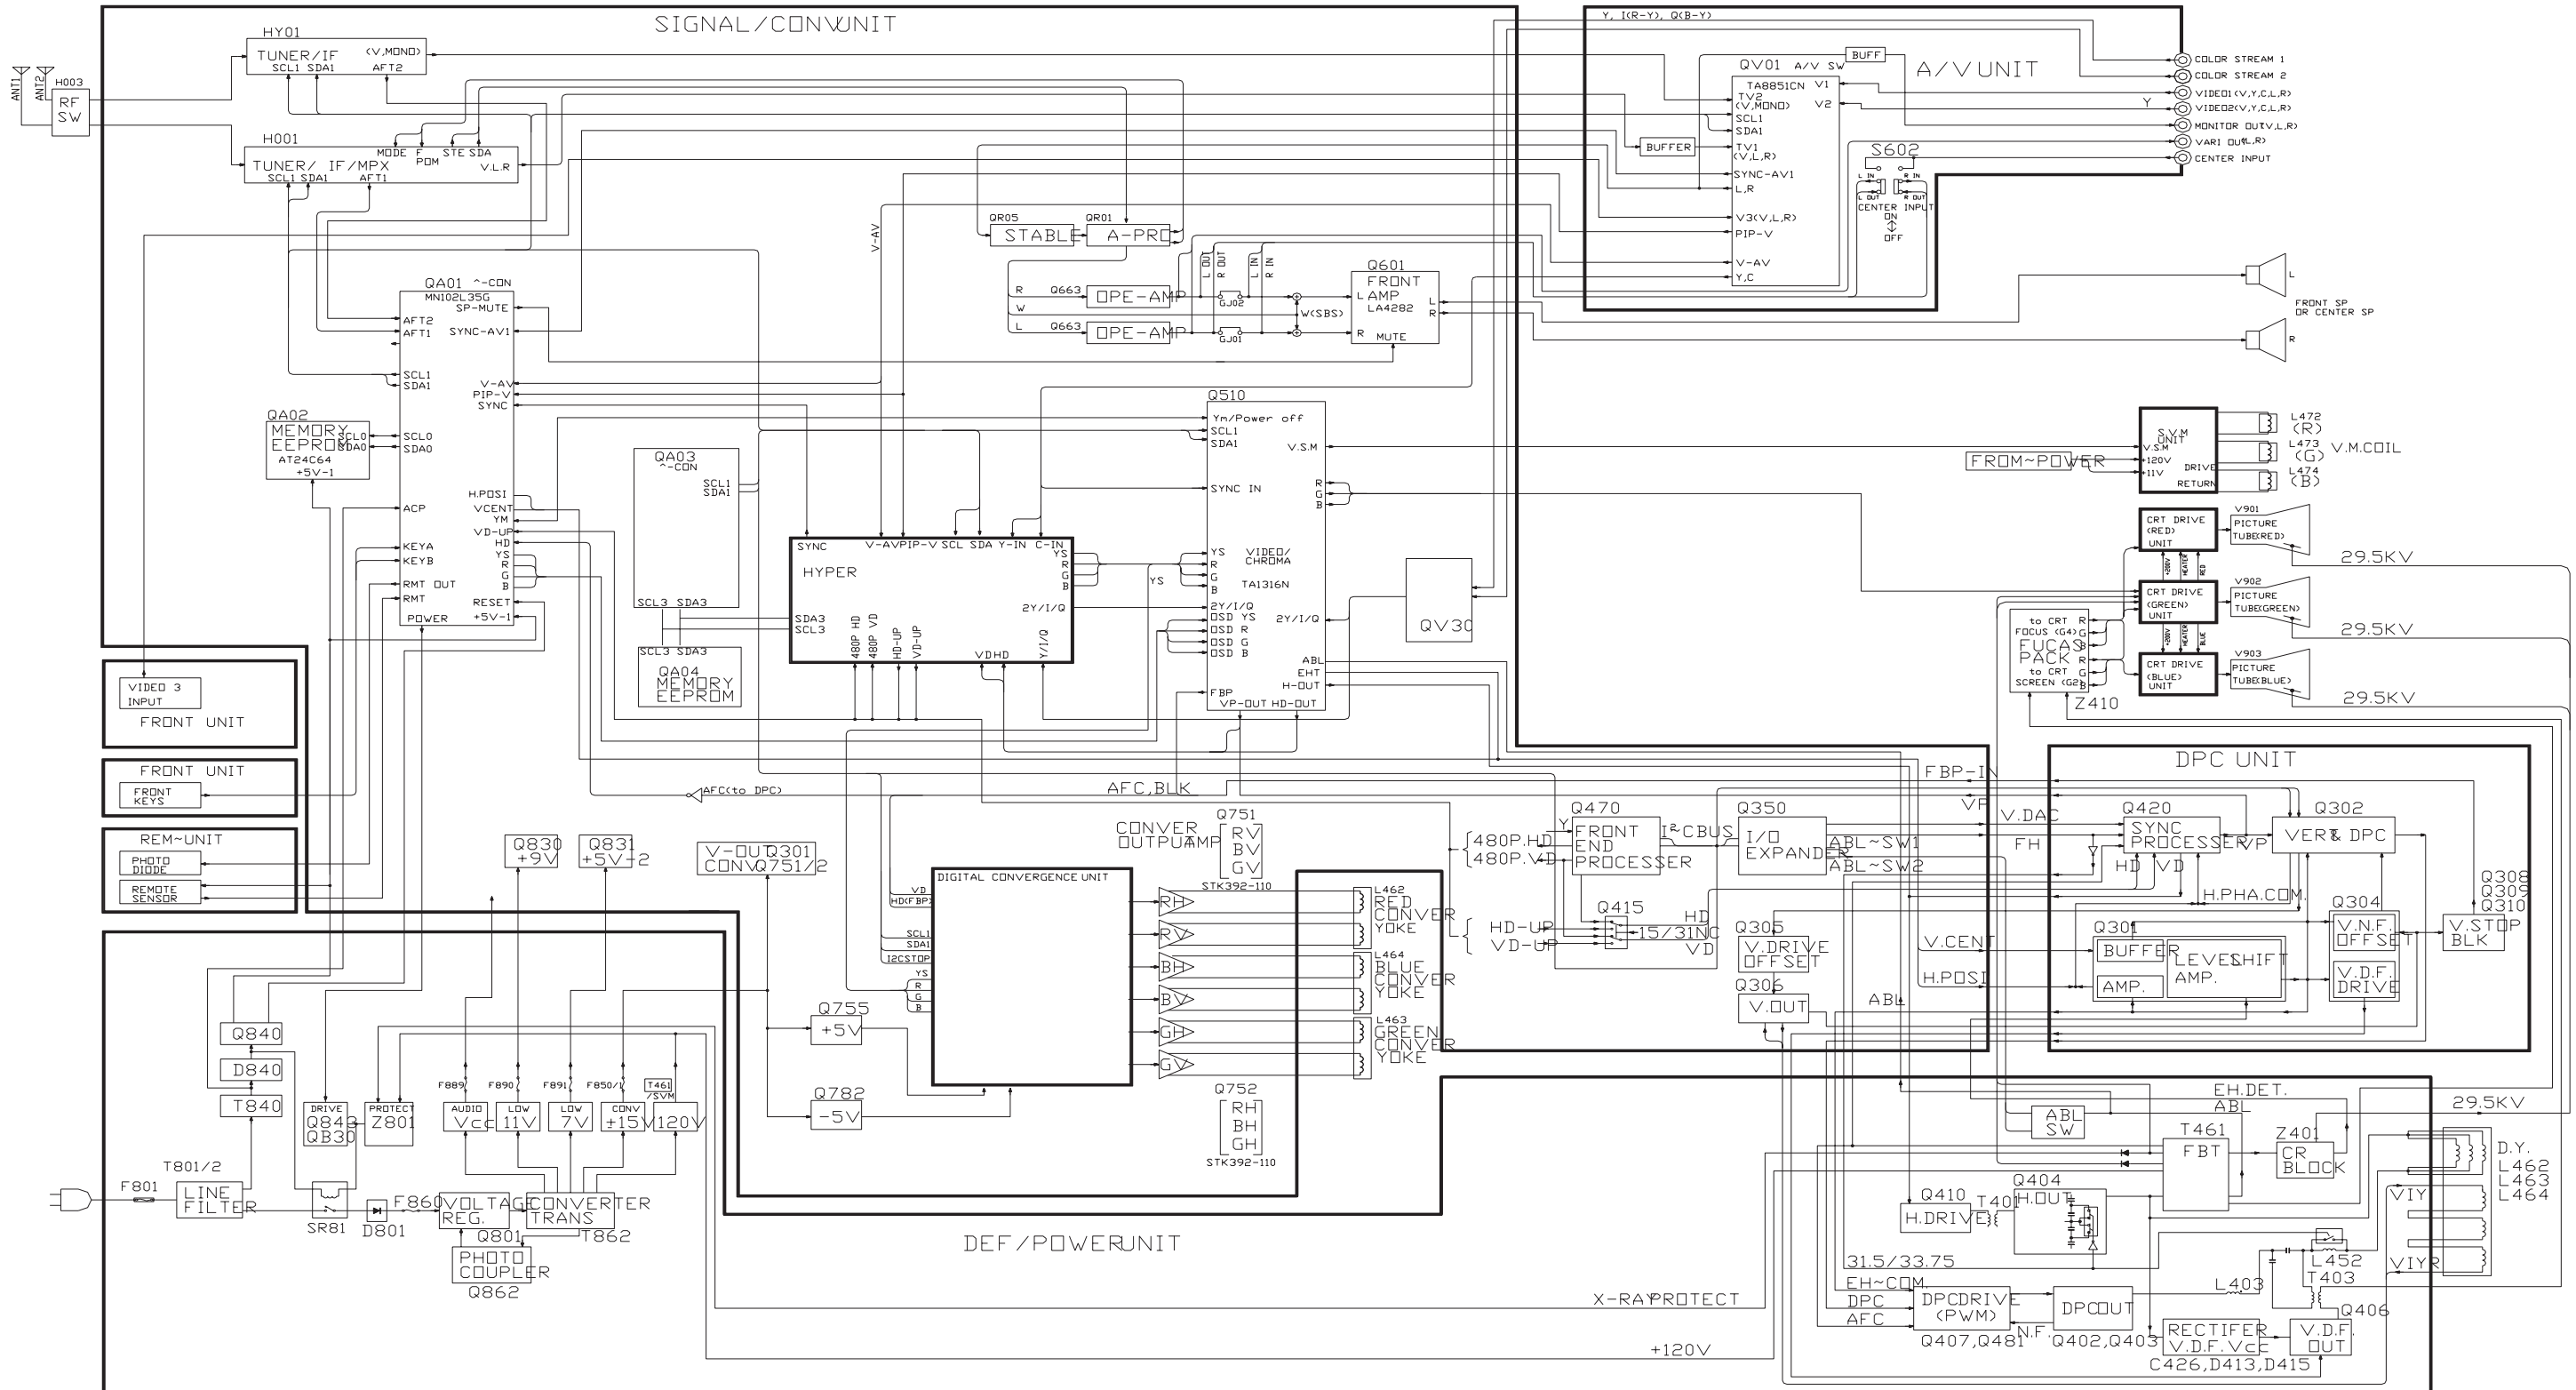

61HX70 Series  
BLOCK DIAGRAM

## MECHANICAL DISASSEMBLY

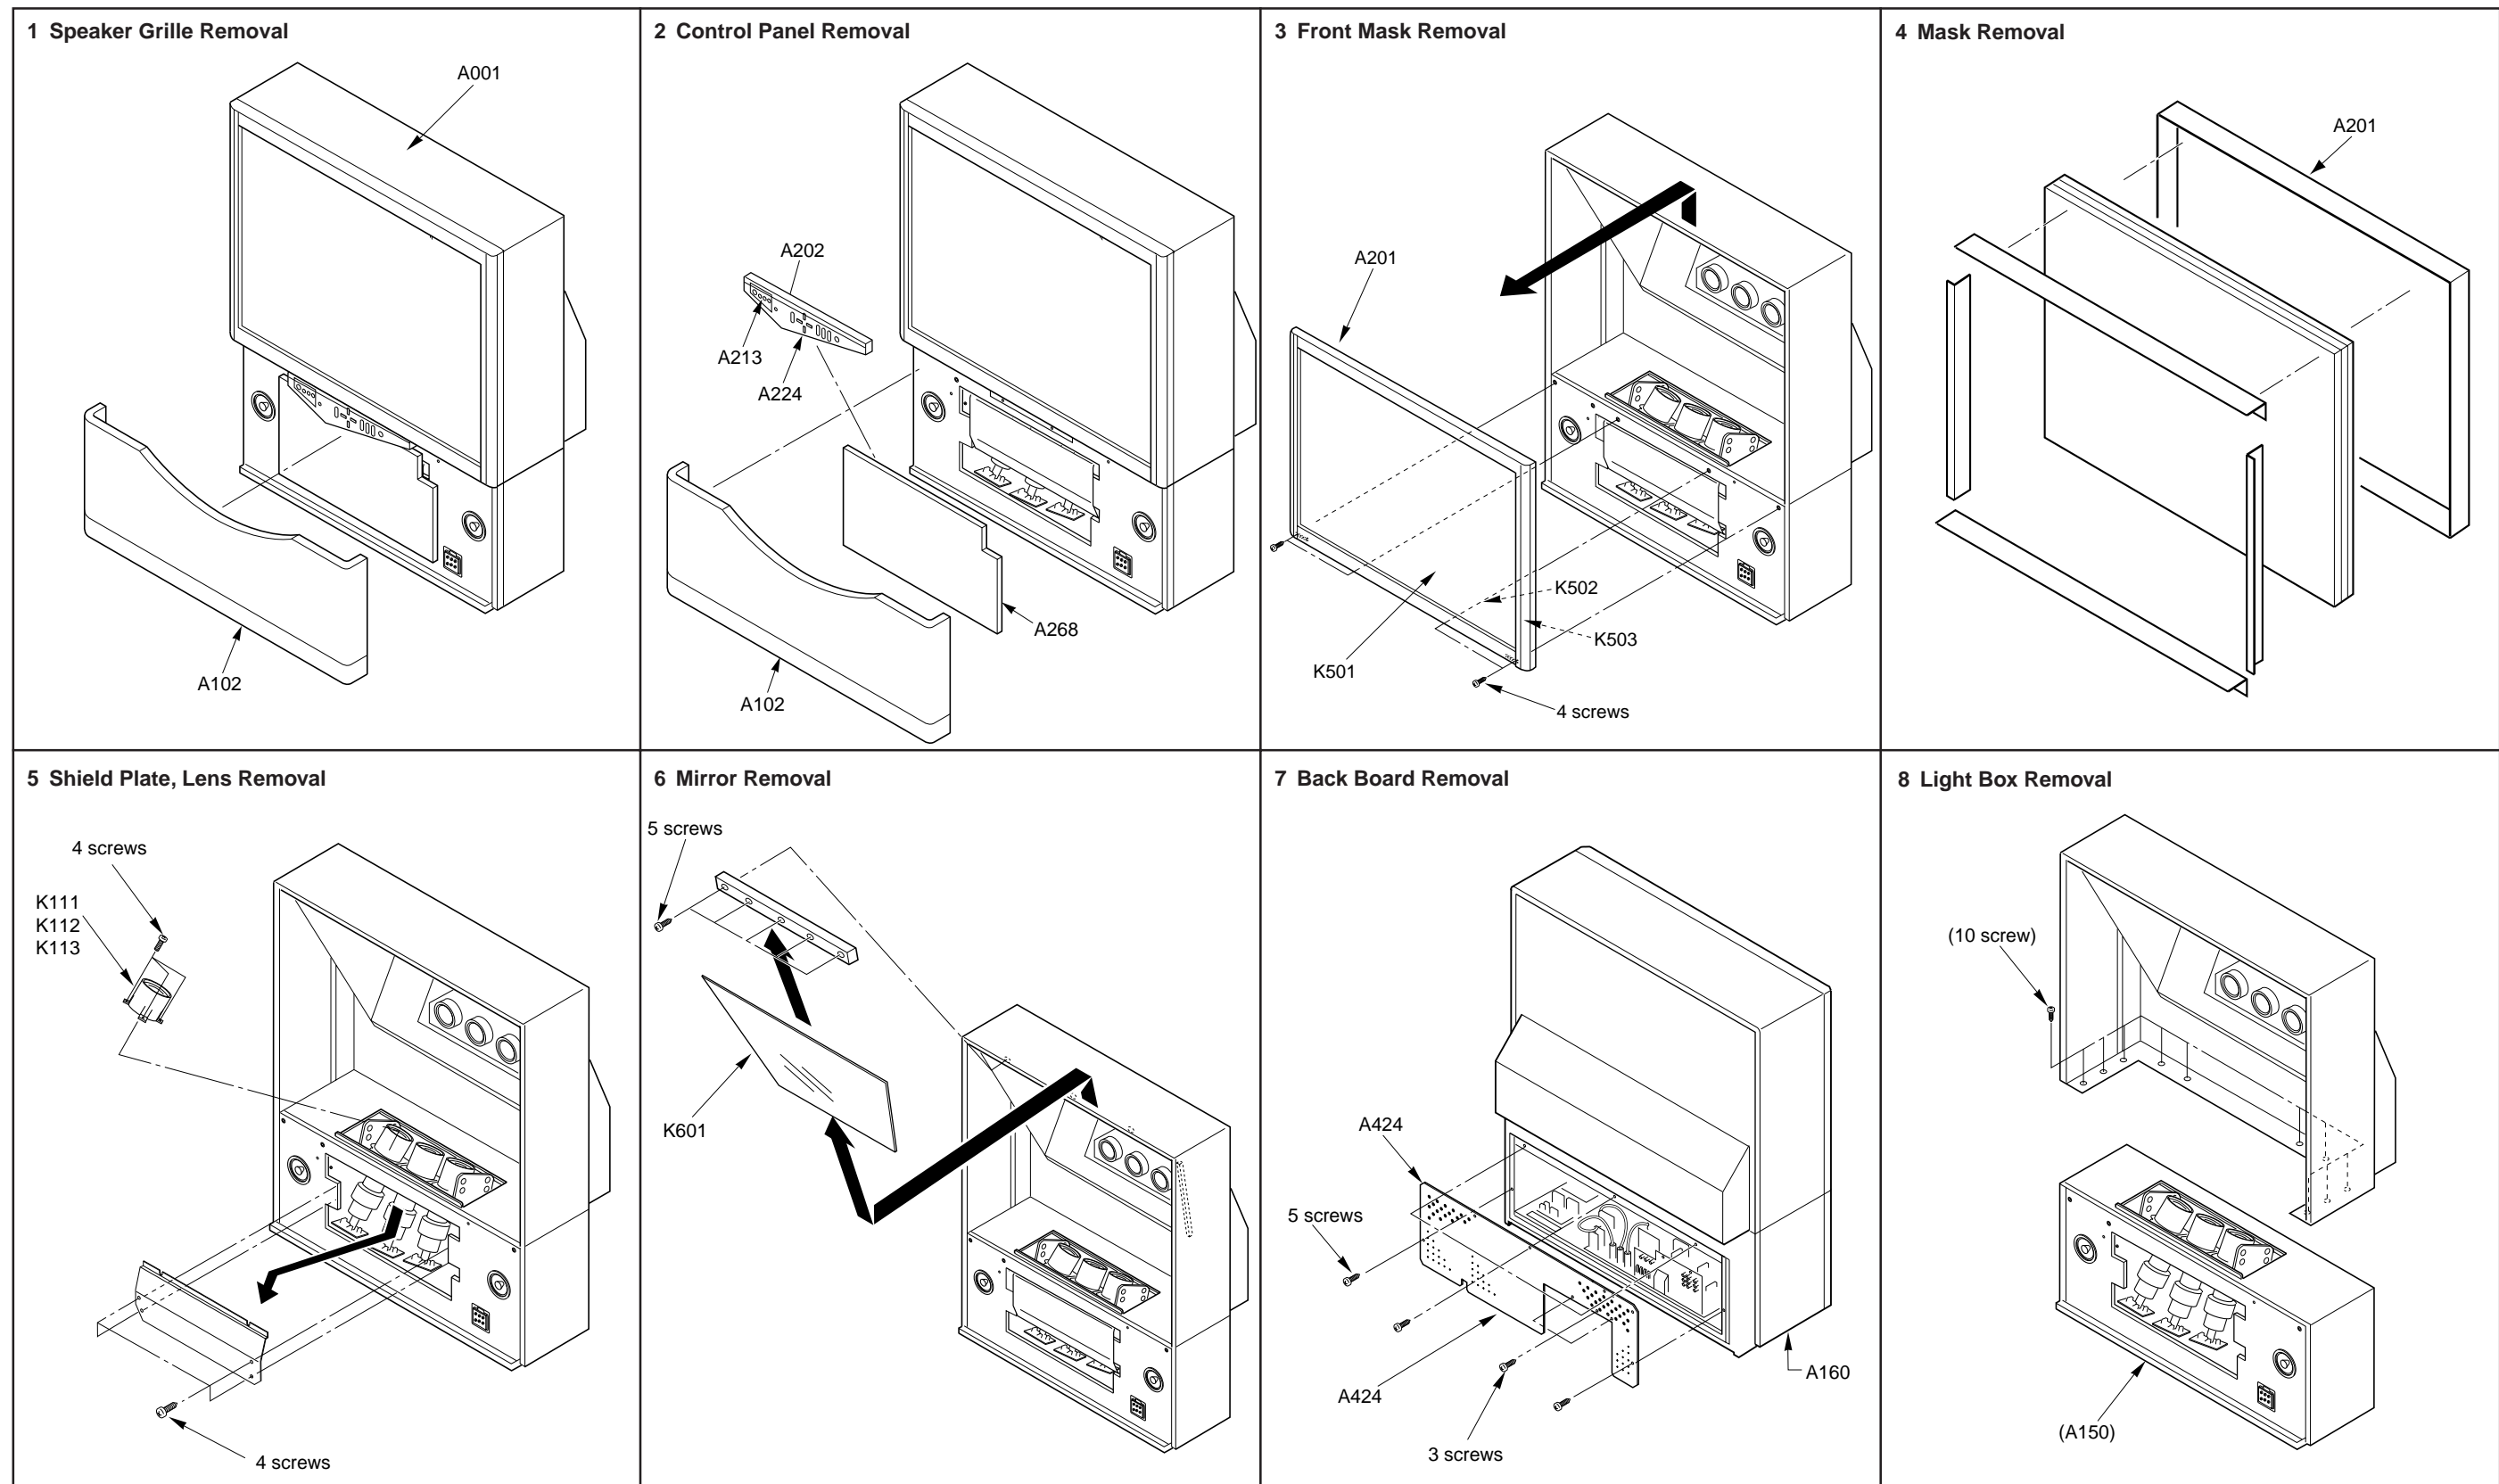



# CHASSIS AND CABINET REPLACEMENT PARTS LIST

**WARNING:** BEFORE SERVICING THIS CHASSIS, READ THE "X-RAY RADIATION PRECAUTION", "SAFETY PRECAUTION" AND "PRODUCT SAFETY NOTICE" ON PAGE 3 OF THIS MANUAL.

**CAUTION:** The international hazard symbols "⚠" in the schematic diagram and the parts list designate components which have special characteristics important for safety and should be replaced only with types identical to those in the original circuit or specified in the parts list. The mounting position of replacements is to be identical with originals. Before replacing any of these components, read carefully the PRODUCT SAFETY NOTICE. Do not degrade the safety of the receiver through improper servicing.

**NOTICE:**

- The part number must be used when ordering parts, in order to assist in processing, be sure to include the Model number and Description.
- The PC board assembly with \* mark is no longer available after the end of the production.

**Models : 50HX70/55HX70/61HX70/55H70/61H70**

Capacitors ..... CD : Ceramic Disk      PF : Plastic Film      EL : Electrolytic  
 Resistors ..... CF : Carbon Film      CC : Carbon Composition      MF : Metal Film  
                          OMF : Oxide Metal Film      VR : Variable Resistor      FR : Fusible Resistor  
 (All CD and PF capacitors are ±5%, 50V and all resistors, ±5%, 1/6W unless otherwise noted.)

Location No.	Part No.	Description
<b>CAPACITORS</b>		
C102	24665221	EL, 220µF, ±20%, 10V
C105	24109102	Chip, 1000pF, ±10%
C106	24669479	EL, 4.7µF, ±20%, 50V
C107	24666221	EL, 220µF, ±20%, 16V
C112	24665221	EL, 220µF, ±20%, 10V
C115	24109102	Chip, 1000pF, ±10%
C117	24666221	EL, 220µF, ±20%, 16V
C151	24212102	CD, 1000pF, ±10%
C201	24092730	Chip, 0.1µF, ±10%, 16V
C205	24206229	EL, 2.2µF, ±20%, 50V
C207	24105100	Chip, 10pF, ±0.5pF
C208	24105100	Chip, 10pF, ±0.5pF
C209	24105100	Chip, 10pF, ±0.5pF
C212	24666100	EL, 10µF, ±20%, 16V
C221	24567104	PF, 0.1µF
C301	24567683	PF, 0.068µF
C302	24567224	PF, 0.22µF
C303	24666101	EL, 100µF, ±20%, 16V
C304	24567104	PF, 0.1µF
C305	24567104	PF, 0.1µF
C306	24567103	PF, 0.01µF
C307	24617912	EL, 2.2µF, ±10%, 50V
C308	24567183	PF, 0.018µF
C309	24212102	CD, 1000pF, ±10%
C310	24073020	EL, 1000µF, ±20%, 10V
C311	24567103	PF, 0.01µF
C312	24591102	PF, 1000pF
C313	24567474	PF, 0.47µF
C314	24567104	PF, 0.1µF
C315	24073020	EL, 1000µF, ±20%, 10V
C315	24206229	EL, 2.2µF, ±20%, 50V
C316	24666101	EL, 100µF, ±20%, 16V
C317	24591222	PF, 2200pF
C318	24591182	PF, 1800pF
C319	24667101	EL, 100µF, ±20%, 25V
C320	24669101	EL, 100µF, ±20%, 50V
C321	24669101	EL, 100µF, ±20%, 50V
C322	24567393	PF, 0.039µF
C323	24092748	Chip, 0.056µF, ±10%, 16V
C324	24669101	EL, 100µF, ±20%, 50V

Location No.	Part No.	Description
C325	24082057	PF, 0.22µF, 100V
C326	24567334	PF, 0.33µF
C327	24567224	PF, 0.22µF
C328	24082260	PF, 4700pF, 100V
C329	24669100	EL, 10µF, ±20%, 50V
C330	24085946	EL, 10µF, ±20%, 16V, Non-Polar
C331	24109333	Chip, 0.033µF, ±10%, 25V
C332	24669221	EL, 220µF, ±20%, 50V
C333	24693473	PF, 0.047µF, 100V
C334	24109471	Chip, 470pF, ±10%
C335	24567224	PF, 0.22µF
C336	24666100	EL, 10µF, ±20%, 16V
C340	24567224	PF, 0.22µF
C350	24669229	EL, 2.2µF, ±20%, 50V
C351	24567104	PF, 0.1µF
C352	24666220	EL, 22µF, ±20%, 16V
C401	24214332	CD, 3300pF, ±10%, 500V
C402	24092463	Chip, 0.22µF, ±10%, 16V
C402	24214391	CD, 390pF, ±10%, 500V
C403	24676220	EL, 22µF, ±20%, 100V
C404	24206229	EL, 2.2µF, ±20%, 50V
C405	24567124	PF, 0.12µF
△ C406	24109223	Chip, 0.022µF, ±10%, 25V
△ C407	24082609	PF, 5100pF, ±3%, 1800V
△ C408	24820223	PF, 0.022µF, 630V
C410	24095900	PF, 3.3µF, ±10%, 100V
C410	24108221	Chip, 220pF
C411	24678220	EL, 22µF, ±20%, 200V
C412	24828823	PF, 0.082µF, 200V
C413	24214221	CD, 220pF, ±10%, 500V
△ C414	24082647	PF, 0.27µF, 400V
C415	24092484	CD, 1500pF, ±10%, 2kV
C416	24095716	PF, 1.5µF, ±10%, 250V
C417	24082648	PF, 0.3µF, 400V
C418	24679330	EL, 33µF, ±20%, 250V
C419	24669479	EL, 4.7µF, ±20%, 50V
C423	24640908	EL, 33µF, ±20%, 160V
C424	24591102	PF, 1000pF
C426	24211222	CD, 2200pF, ±10%, 2kV
C426	24666331	EL, 330µF, ±20%, 16V

Location No.	Part No.	Description
C427	24109103	Chip, 0.01 $\mu$ F, $\pm$ 10%, 25V
C427	24828473	PF, 0.047 $\mu$ F, 200V
C428	24797010	EL, 1 $\mu$ F, $\pm$ 20%, 50V
C429	24109103	Chip, 0.01 $\mu$ F, $\pm$ 10%, 25V
C429	24591472	PF, 4700pF
C430	24085903	EL, 1 $\mu$ F, $\pm$ 20%, 50V, Non-Polar
C430	24567123	PF, 0.012 $\mu$ F
C431	24567104	PF, 0.1 $\mu$ F
C431	24591102	PF, 1000pF
C432	24567103	PF, 0.01 $\mu$ F
C432	24567333	PF, 0.033 $\mu$ F
C434	24501561	PF, 560pF
C435	24501272	PF, 0.0027 $\mu$ F
C436	24669479	EL, 4.7 $\mu$ F, $\pm$ 20%, 50V
C437	24567103	PF, 0.01 $\mu$ F
C438	24591272	PF, 2700pF
C439	24669229	EL, 2.2 $\mu$ F, $\pm$ 20%, 50V
C440	24669229	EL, 2.2 $\mu$ F, $\pm$ 20%, 50V
C441	24501272	PF, 0.0027 $\mu$ F
C442	24501102	PF, 0.001 $\mu$ F
C443	24567104	PF, 0.1 $\mu$ F
C444	24666331	EL, 330 $\mu$ F, $\pm$ 20%, 16V
C445	24567103	PF, 0.01 $\mu$ F
C445	24820223	PF, 0.022 $\mu$ F, 630V
C446	24501151	PF, 150pF
$\Delta$ C447	24082610	PF, 5600pF, $\pm$ 3%, 1800V
$\Delta$ C447	24567104	PF, 0.1 $\mu$ F
$\Delta$ C448	24666331	EL, 330 $\mu$ F, $\pm$ 20%, 16V
$\Delta$ C448	24820822	PF, 0.0082 $\mu$ F, 630V
C449	24082592	PF, 1000pF, $\pm$ 3%, 1800V
C449	24591332	PF, 3300pF
C451	24567563	PF, 0.056 $\mu$ F
C452	24567823	PF, 0.082 $\mu$ F
C453	24669010	EL, 1 $\mu$ F, $\pm$ 20%, 50V
C454	24567103	PF, 0.01 $\mu$ F
C455	24668331	EL, 330 $\mu$ F, $\pm$ 20%, 35V
C455	24669010	EL, 1 $\mu$ F, $\pm$ 20%, 50V
C456	24567104	PF, 0.1 $\mu$ F
C456	24666221	EL, 220 $\mu$ F, $\pm$ 20%, 16V
C457	24092730	Chip, 0.1 $\mu$ F, $\pm$ 10%, 16V
C457	24567104	PF, 0.1 $\mu$ F
C458	24092730	Chip, 0.1 $\mu$ F, $\pm$ 10%, 16V
C458	24666331	EL, 330 $\mu$ F, $\pm$ 20%, 16V
C459	24105101	Chip, 100pF
C460	24109103	Chip, 0.01 $\mu$ F, $\pm$ 10%, 25V
C461	24109103	Chip, 0.01 $\mu$ F, $\pm$ 10%, 25V
C462	24109103	Chip, 0.01 $\mu$ F, $\pm$ 10%, 25V
C463	24105101	Chip, 100pF
C464	24666101	EL, 100 $\mu$ F, $\pm$ 20%, 16V
C465	24567104	PF, 0.1 $\mu$ F
C467	24436220	CD, 22pF
C468	24567474	PF, 0.47 $\mu$ F
C469	24666100	EL, 10 $\mu$ F, $\pm$ 20%, 16V
C470	24212101	CD, 100pF, $\pm$ 10%
C472	24567474	PF, 0.47 $\mu$ F
C481	24666101	EL, 100 $\mu$ F, $\pm$ 20%, 16V
C482	24591223	PF, 0.022 $\mu$ F
C484	24591102	PF, 1000pF
C485	24567104	PF, 0.1 $\mu$ F
C493	24567104	PF, 0.1 $\mu$ F
C501	24109103	Chip, 0.01 $\mu$ F, $\pm$ 10%, 25V
C502	24092730	Chip, 0.1 $\mu$ F, $\pm$ 10%, 16V
C503	24203101	EL, 100 $\mu$ F, $\pm$ 20%, 16V

Location No.	Part No.	Description
C504	24109222	Chip, 2200pF, $\pm$ 10%
C505	24108120	Chip, 12pF
C506	24108120	Chip, 12pF
C507	24108120	Chip, 12pF
C508	24100104	Chip, 0.1 $\mu$ F, +80%, -20%, 25V
C509	24203101	EL, 100 $\mu$ F, $\pm$ 20%, 16V
C509	24666101	EL, 100 $\mu$ F, $\pm$ 20%, 16V
C510	24092730	Chip, 0.1 $\mu$ F, $\pm$ 10%, 16V
C510	24666101	EL, 100 $\mu$ F, $\pm$ 20%, 16V
C511	24109103	Chip, 0.01 $\mu$ F, $\pm$ 10%, 25V
C511	24203101	EL, 100 $\mu$ F, $\pm$ 20%, 16V
C512	24206228	EL, 0.22 $\mu$ F, $\pm$ 20%, 50V
C513	24100104	Chip, 0.1 $\mu$ F, +80%, -20%, 25V
C513	24109103	Chip, 0.01 $\mu$ F, $\pm$ 10%, 25V
C514	24203100	EL, 10 $\mu$ F, $\pm$ 20%, 16V
C524	24092730	Chip, 0.1 $\mu$ F, $\pm$ 10%, 16V
C525	24092730	Chip, 0.1 $\mu$ F, $\pm$ 10%, 16V
C526	24092730	Chip, 0.1 $\mu$ F, $\pm$ 10%, 16V
C527	24092730	Chip, 0.1 $\mu$ F, $\pm$ 10%, 16V
C528	24092730	Chip, 0.1 $\mu$ F, $\pm$ 10%, 16V
C529	24092730	Chip, 0.1 $\mu$ F, $\pm$ 10%, 16V
C529	24109103	Chip, 0.01 $\mu$ F, $\pm$ 10%, 25V
C530	24669010	EL, 1 $\mu$ F, $\pm$ 20%, 50V
C531	24666101	EL, 100 $\mu$ F, $\pm$ 20%, 16V
C532	24666100	EL, 10 $\mu$ F, $\pm$ 20%, 16V
C535	24092730	Chip, 0.1 $\mu$ F, $\pm$ 10%, 16V
C536	24109103	Chip, 0.01 $\mu$ F, $\pm$ 10%, 25V
C537	24109103	Chip, 0.01 $\mu$ F, $\pm$ 10%, 25V
C547	24109103	Chip, 0.01 $\mu$ F, $\pm$ 10%, 25V
C551	24092730	Chip, 0.1 $\mu$ F, $\pm$ 10%, 16V
C552	24092730	Chip, 0.1 $\mu$ F, $\pm$ 10%, 16V
C553	24092730	Chip, 0.1 $\mu$ F, $\pm$ 10%, 16V
C554	24092730	Chip, 0.1 $\mu$ F, $\pm$ 10%, 16V
C555	24092730	Chip, 0.1 $\mu$ F, $\pm$ 10%, 16V
C556	24092730	Chip, 0.1 $\mu$ F, $\pm$ 10%, 16V
C563	24206229	EL, 2.2 $\mu$ F, $\pm$ 20%, 50V
C564	24666100	EL, 10 $\mu$ F, $\pm$ 20%, 16V
C565	24669229	EL, 2.2 $\mu$ F, $\pm$ 20%, 50V
C566	24669010	EL, 1 $\mu$ F, $\pm$ 20%, 50V
C567	24109103	Chip, 0.01 $\mu$ F, $\pm$ 10%, 25V
C568	24109103	Chip, 0.01 $\mu$ F, $\pm$ 10%, 25V
C569	24109103	Chip, 0.01 $\mu$ F, $\pm$ 10%, 25V
C570	24669010	EL, 1 $\mu$ F, $\pm$ 20%, 50V
C601	24109102	Chip, 1000pF, $\pm$ 10%
C602	24109102	Chip, 1000pF, $\pm$ 10%
C603	24669100	EL, 10 $\mu$ F, $\pm$ 20%, 50V
C604	24669100	EL, 10 $\mu$ F, $\pm$ 20%, 50V
C605	24667101	EL, 100 $\mu$ F, $\pm$ 20%, 25V
C606	24667101	EL, 100 $\mu$ F, $\pm$ 20%, 25V
C607	24567104	PF, 0.1 $\mu$ F
C608	24567104	PF, 0.1 $\mu$ F
C609	24669102	EL, 1000 $\mu$ F, $\pm$ 20%, 50V
C610	24669102	EL, 1000 $\mu$ F, $\pm$ 20%, 50V
C611	24667221	EL, 220 $\mu$ F, $\pm$ 20%, 25V
C612	24666221	EL, 220 $\mu$ F, $\pm$ 20%, 16V
C621	24206479	EL, 4.7 $\mu$ F, $\pm$ 20%, 50V
C622	24206108	EL, 0.1 $\mu$ F, $\pm$ 20%, 50V
C623	24100472	Chip, 0.1 $\mu$ F, +80%, -20%, 25V
C624	24206479	EL, 4.7 $\mu$ F, $\pm$ 20%, 50V
C625	24206479	EL, 4.7 $\mu$ F, $\pm$ 20%, 50V
C626	24206479	EL, 4.7 $\mu$ F, $\pm$ 20%, 50V
C627	24206479	EL, 4.7 $\mu$ F, $\pm$ 20%, 50V
C628	24206100	EL, 10 $\mu$ F, $\pm$ 20%, 50V
C629	24206100	EL, 10 $\mu$ F, $\pm$ 20%, 50V

Location No.	Part No.	Description
C630	24206108	EL, 0.1 $\mu$ F, $\pm$ 20%, 50V
C631	24100472	Chip, 0.1 $\mu$ F, +80%, -20%, 25V
C632	24203470	EL, 47 $\mu$ F, $\pm$ 20%, 16V
C633	24567224	PF, 0.22 $\mu$ F
C634	24206108	EL, 0.1 $\mu$ F, $\pm$ 20%, 50V
C635	24203220	EL, 22 $\mu$ F, $\pm$ 20%, 16V
C636	24206479	EL, 4.7 $\mu$ F, $\pm$ 20%, 50V
C637	24206100	EL, 10 $\mu$ F, $\pm$ 20%, 50V
C638	24794101	EL, 100 $\mu$ F, $\pm$ 20%, 16V
C639	24109103	Chip, 0.01 $\mu$ F, $\pm$ 10%, 25V
C640	24109223	Chip, 0.022 $\mu$ F, $\pm$ 10%, 25V
C641	24109822	Chip, 8200pF, $\pm$ 10%, 25V
C642	24206100	EL, 10 $\mu$ F, $\pm$ 20%, 50V
C643	24206479	EL, 4.7 $\mu$ F, $\pm$ 20%, 50V
C644	24206339	EL, 3.3 $\mu$ F, $\pm$ 20%, 50V
C645	24109333	Chip, 0.033 $\mu$ F, $\pm$ 10%, 25V
C646	24109153	Chip, 0.015 $\mu$ F, $\pm$ 10%, 25V
C647	24092748	Chip, 0.056 $\mu$ F, $\pm$ 10%, 16V
C648	24092748	Chip, 0.056 $\mu$ F, $\pm$ 10%, 16V
C649	24109223	Chip, 0.022 $\mu$ F, $\pm$ 10%, 25V
C650	24109822	Chip, 8200pF, $\pm$ 10%, 25V
C651	24109103	Chip, 0.01 $\mu$ F, $\pm$ 10%, 25V
C652	24109103	Chip, 0.01 $\mu$ F, $\pm$ 10%, 25V
C653	24100103	Chip, 0.01 $\mu$ F, +80%, -20%
C654	24763101	EL, 100 $\mu$ F, $\pm$ 20%, 16V
C661	24206010	EL, 1 $\mu$ F, $\pm$ 20%, 50V
C662	24206010	EL, 1 $\mu$ F, $\pm$ 20%, 50V
C663	24206010	EL, 1 $\mu$ F, $\pm$ 20%, 50V
C664	24669220	EL, 22 $\mu$ F, $\pm$ 20%, 50V
C665	24109103	Chip, 0.01 $\mu$ F, $\pm$ 10%, 25V
C666	24206010	EL, 1 $\mu$ F, $\pm$ 20%, 50V
C680	24669471	EL, 470 $\mu$ F, $\pm$ 20%, 50V
C681	24666100	EL, 10 $\mu$ F, $\pm$ 20%, 16V
C682	24567104	PF, 0.1 $\mu$ F
C690	24109103	Chip, 0.01 $\mu$ F, $\pm$ 10%, 25V
C704	24232103	CD, 0.01 $\mu$ F, +80%, -20%
C705	24206479	EL, 4.7 $\mu$ F, $\pm$ 20%, 50V
C707	24797470	EL, 47 $\mu$ F, $\pm$ 20%, 50V
C712	24797470	EL, 47 $\mu$ F, $\pm$ 20%, 50V
C713	24790470	EL, 47 $\mu$ F, $\pm$ 20%, 160V
C715	24214472	CD, 4700pF, $\pm$ 10%, 500V
C717	24214472	CD, 4700pF, $\pm$ 10%, 500V
C718	24666470	EL, 47 $\mu$ F, $\pm$ 20%, 16V
C719	24435560	CD, 56pF, 500V
C720	24790220	EL, 22 $\mu$ F, $\pm$ 20%, 160V
C721	24666470	EL, 47 $\mu$ F, $\pm$ 20%, 16V
C722	24436820	CD, 82pF
C726	24212102	CD, 1000pF, $\pm$ 10%
C760	24797470	EL, 47 $\mu$ F, $\pm$ 20%, 50V
C761	24212102	CD, 1000pF, $\pm$ 10%
C762	24797470	EL, 47 $\mu$ F, $\pm$ 20%, 50V
C765	24214472	CD, 4700pF, $\pm$ 10%, 500V
C766	24214472	CD, 4700pF, $\pm$ 10%, 500V
C767	24790470	EL, 47 $\mu$ F, $\pm$ 20%, 160V
C768	24666470	EL, 47 $\mu$ F, $\pm$ 20%, 16V
C769	24666470	EL, 47 $\mu$ F, $\pm$ 20%, 16V
C770	24435560	CD, 56pF, 500V
C771	24790220	EL, 22 $\mu$ F, $\pm$ 20%, 160V
C780	24797470	EL, 47 $\mu$ F, $\pm$ 20%, 50V
C781	24212102	CD, 1000pF, $\pm$ 10%
C782	24797470	EL, 47 $\mu$ F, $\pm$ 20%, 50V
C784	24214472	CD, 4700pF, $\pm$ 10%, 500V
C786	24214472	CD, 4700pF, $\pm$ 10%, 500V
C787	24790470	EL, 47 $\mu$ F, $\pm$ 20%, 160V

Location No.	Part No.	Description
C788	24666470	EL, 47 $\mu$ F, $\pm$ 20%, 16V
C789	24666470	EL, 47 $\mu$ F, $\pm$ 20%, 16V
C790	24435560	CD, 56pF, 500V
C791	24790220	EL, 22 $\mu$ F, $\pm$ 20%, 160V
C792	24669229	EL, 2.2 $\mu$ F, $\pm$ 20%, 50V
C801	24082001	PF, 0.47 $\mu$ F, AC125V
C809	24086067	EL, 1000 $\mu$ F, $\pm$ 20%, 200V
C810	24086067	EL, 1000 $\mu$ F, $\pm$ 20%, 200V
C811	24092597	CD, 4700pF, $\pm$ 20%, AC250V
C812	24092597	CD, 4700pF, $\pm$ 20%, AC250V
C813	24092597	CD, 4700pF, $\pm$ 20%, AC250V
C830	24567334	PF, 0.33 $\mu$ F
C831	24666101	EL, 100 $\mu$ F, $\pm$ 20%, 16V
C833	24666470	EL, 47 $\mu$ F, $\pm$ 20%, 16V
C834	24667101	EL, 100 $\mu$ F, $\pm$ 20%, 25V
C835	24667470	EL, 47 $\mu$ F, $\pm$ 20%, 25V
C836	24567334	PF, 0.33 $\mu$ F
C840	24668102	EL, 1000 $\mu$ F, $\pm$ 20%, 35V
C842	24664101	EL, 100 $\mu$ F, $\pm$ 20%, 6.3V
C843	24567105	PF, 1 $\mu$ F
C857	24668332	EL, 3300 $\mu$ F, $\pm$ 20%, 35V
C858	24668332	EL, 3300 $\mu$ F, $\pm$ 20%, 35V
C860	24214103	CD, 0.01 $\mu$ F, $\pm$ 10%, 500V
C863	24567224	PF, 0.22 $\mu$ F
C864	24092474	CD, 220pF, $\pm$ 10%, 2kV
C866	24567105	PF, 1 $\mu$ F
C867	24591472	PF, 4700pF
C868	24669101	EL, 100 $\mu$ F, $\pm$ 20%, 50V
C869	24678229	EL, 2.2 $\mu$ F, $\pm$ 20%, 200V
C870	24082889	PF, 0.068 $\mu$ F, 800V
C871	24092484	CD, 1500pF, $\pm$ 10%, 2kV
C872	24092478	CD, 470pF, $\pm$ 10%, 2kV
C873	24567224	PF, 0.22 $\mu$ F
C874	24212102	CD, 1000pF, $\pm$ 10%
C876	24567474	PF, 0.47 $\mu$ F
C881	24678478	EL, 0.47 $\mu$ F, $\pm$ 20%, 200V
C882	24794220	EL, 22 $\mu$ F, $\pm$ 20%, 16V
C883	24082229	PF, 0.1 $\mu$ F, $\pm$ 10%, 250V
C884	24086916	EL, 330 $\mu$ F, $\pm$ 20%, 160V
C885	24669229	EL, 2.2 $\mu$ F, $\pm$ 20%, 50V
C888	24666100	EL, 10 $\mu$ F, $\pm$ 20%, 16V
C889	24669010	EL, 1 $\mu$ F, $\pm$ 20%, 50V
C890	24669222	EL, 2200 $\mu$ F, $\pm$ 20%, 50V
C892	24669229	EL, 2.2 $\mu$ F, $\pm$ 20%, 50V
C894	24668222	EL, 2200 $\mu$ F, $\pm$ 20%, 35V
C895	24666332	EL, 3300 $\mu$ F, $\pm$ 20%, 16V
C898	24212102	CD, 1000pF, $\pm$ 10%
C901	24211102	CD, 1000pF, $\pm$ 10%, 2kV
C902	24794101	EL, 100 $\mu$ F, $\pm$ 20%, 16V
C903	24232103	CD, 0.01 $\mu$ F, +80%, -20%
C904	24436681	CD, 680pF
C905	24214102	CD, 1000pF, $\pm$ 10%, 500V
C907	24214101	CD, 100pF, $\pm$ 10%, 500V
C908	24436390	CD, 39pF
C909	24794470	EL, 47 $\mu$ F, $\pm$ 20%, 16V
C911	24211102	CD, 1000pF, $\pm$ 10%, 2kV
C912	24794101	EL, 100 $\mu$ F, $\pm$ 20%, 16V
C913	24232103	CD, 0.01 $\mu$ F, +80%, -20%
C914	24436821	CD, 820pF
C915	24679330	EL, 33 $\mu$ F, $\pm$ 20%, 250V
C916	24794102	EL, 1000 $\mu$ F, $\pm$ 20%, 16V
C917	24214101	CD, 100pF, $\pm$ 10%, 500V
C918	24567104	PF, 0.1 $\mu$ F
C919	24794470	EL, 47 $\mu$ F, $\pm$ 20%, 16V

Location No.	Part No.	Description
C921	24211102	CD, 1000pF, ±10%, 2kV
C922	24794101	EL, 100µF, ±20%, 16V
C923	24436681	CD, 680pF
C924	24232103	CD, 0.01µF, +80%, -20%
C926	24214101	CD, 100pF, ±10%, 500V
C927	24567104	PF, 0.1µF
C928	24203100	EL, 10µF, ±20%, 16V
C929	24794470	EL, 47µF, ±20%, 16V
C961	24763102	EL, 1000µF, ±20%, 16V
C962	24203100	EL, 10µF, ±20%, 16V
C963	24567104	PF, 0.1µF
C964	24567104	PF, 0.1µF
C7704	24667101	EL, 100µF, ±20%, 25V
C7705	24567334	PF, 0.33µF
C7706	24567334	PF, 0.33µF
C7707	24667101	EL, 100µF, ±20%, 25V
C7708	24105150	Chip, 15pF
C7709	24105150	Chip, 15pF
C7710	24105150	Chip, 15pF
C7711	24105150	Chip, 15pF
C7712	24105150	Chip, 15pF
C7713	24105150	Chip, 15pF
C7714	24105150	Chip, 15pF
C7715	24105150	Chip, 15pF
C7716	24105150	Chip, 15pF
C7717	24105150	Chip, 15pF
C7718	24105150	Chip, 15pF
C7719	24105150	Chip, 15pF
C7721	24109102	Chip, 1000pF, ±10%
C7722	24105331	Chip, 330pF
C7724	24667331	EL, 330µF, ±20%, 25V
C7725	24667331	EL, 330µF, ±20%, 25V
C7726	24109102	Chip, 1000pF, ±10%
C7727	24105331	Chip, 330pF
C7729	24109102	Chip, 1000pF, ±10%
C7730	24105331	Chip, 330pF
C7732	24105331	Chip, 330pF
C7733	24105331	Chip, 330pF
C7735	24667331	EL, 330µF, ±20%, 25V
C7736	24667331	EL, 330µF, ±20%, 25V
C7737	24109102	Chip, 1000pF, ±10%
C7738	24105331	Chip, 330pF
C7740	24105331	Chip, 330pF
C7741	24105331	Chip, 330pF
C7751	24667101	EL, 100µF, ±20%, 25V
C7752	24567334	PF, 0.33µF
C7753	24567334	PF, 0.33µF
C7754	24667101	EL, 100µF, ±20%, 25V
C7760	24667470	EL, 47µF, ±20%, 25V
C7761	24667100	EL, 10µF, ±20%, 25V
C7763	24667470	EL, 47µF, ±20%, 25V
C7767	24667101	EL, 100µF, ±20%, 25V
C7768	24667101	EL, 100µF, ±20%, 25V
C7769	24109103	Chip, 0.01µF, ±10%, 25V
C7774	24105101	Chip, 100pF
C7776	24667100	EL, 10µF, ±20%, 25V
C7779	24105331	Chip, 330pF
C7812	24109103	Chip, 0.01µF, ±10%, 25V
C7816	24667100	EL, 10µF, ±20%, 25V
C7817	24109103	Chip, 0.01µF, ±10%, 25V
CA10	24105101	Chip, 100pF
CA13	24109221	Chip, 220pF, ±10%
CA14	24666100	EL, 10µF, ±20%, 16V
CA18	24666470	EL, 47µF, ±20%, 16V

Location No.	Part No.	Description
CA20	24105181	Chip, 180pF
CA21	24092442	Chip, 0.47µF, +80%, -20%, 16V
CA22	24109103	Chip, 0.01µF, ±10%, 25V
CA23	24105181	Chip, 180pF
CA24	24092442	Chip, 0.47µF, +80%, -20%, 16V
CA25	24666100	EL, 10µF, ±20%, 16V
CA26	24092538	Chip, 1µF, +80%, -20%, 10V
CA27	24092538	Chip, 1µF, +80%, -20%, 10V
CA29	24109221	Chip, 220pF, ±10%
CA30	24105101	Chip, 100pF
CA34	24105101	Chip, 100pF
CA45	24666100	EL, 10µF, ±20%, 16V
CA49	24666100	EL, 10µF, ±20%, 16V
CA50	24100103	Chip, 0.01µF, +80%, -20%
CA52	24109272	Chip, 2700pF, ±10%
CA54	24105101	Chip, 100pF
CA59	24105101	Chip, 100pF
CA60	24105101	Chip, 100pF
CA61	24666220	EL, 22µF, ±20%, 16V
CA64	24109103	Chip, 0.01µF, ±10%, 25V
CA68	24666100	EL, 10µF, ±20%, 16V
CA69	24109103	Chip, 0.01µF, ±10%, 25V
CA71	24105101	Chip, 100pF
CA72	24085970	EL, 10µF, ±20%, 16V, Non-Polar
CA73	24666100	EL, 10µF, ±20%, 16V
CB01	24105101	Chip, 100pF
CB02	24105101	Chip, 100pF
CB11	24100103	Chip, 0.01µF, +80%, -20%
CB11	24794470	EL, 47µF, ±20%, 16V
CB12	24666100	EL, 10µF, ±20%, 16V
CB13	24085970	EL, 10µF, ±20%, 16V, Non-Polar
CB14	24105100	Chip, 10pF, ±0.5pF
CB15	24794100	EL, 10µF, ±20%, 16V
CB33	24109103	Chip, 0.01µF, ±10%, 25V
CB37	24105101	Chip, 100pF
CB38	24105101	Chip, 100pF
CB40	24109103	Chip, 0.01µF, ±10%, 25V
CB41	24666100	EL, 10µF, ±20%, 16V
CB42	24109103	Chip, 0.01µF, ±10%, 25V
CB42	24232103	CD, 0.01µF, +80%, -20%
CB43	24109103	Chip, 0.01µF, ±10%, 25V
CB62	24105331	Chip, 330pF
CB90	24109103	Chip, 0.01µF, ±10%, 25V
CB91	24666100	EL, 10µF, ±20%, 16V
CD01	24206478	EL, 0.47µF, ±20%, 50V
CD02	24206478	EL, 0.47µF, ±20%, 50V
CD03	24503041	PF, 0.1µF, 63V
CD05	24567103	PF, 0.01µF
CD06	24206478	EL, 0.47µF, ±20%, 50V
CD07	24591472	PF, 4700pF
CD08	24206478	EL, 0.47µF, ±20%, 50V
CD10	24503041	PF, 0.1µF, 63V
CD11	24203100	EL, 10µF, ±20%, 16V
CD12	24203100	EL, 10µF, ±20%, 16V
CD13	24666101	EL, 100µF, ±20%, 16V
CD15	24203100	EL, 10µF, ±20%, 16V
CD16	24206479	EL, 4.7µF, ±20%, 50V
CH001	24100104	Chip, 0.1µF, +80%, -20%, 25V
CH004	24100104	Chip, 0.1µF, +80%, -20%, 25V
CH005	24100104	Chip, 0.1µF, +80%, -20%, 25V

Location No.	Part No.	Description
CH006	24100104	Chip, 0.1 $\mu$ F, +80%, -20%, 25V
CH007	24100104	Chip, 0.1 $\mu$ F, +80%, -20%, 25V
CH008	24100104	Chip, 0.1 $\mu$ F, +80%, -20%, 25V
CH009	24100104	Chip, 0.1 $\mu$ F, +80%, -20%, 25V
CH010	24092743	Chip, 0.47 $\mu$ F, +80%, -20%, 10V
CH011	24762221	EL, 220 $\mu$ F, $\pm$ 20%, 10V
CH012	24763101	EL, 100 $\mu$ F, $\pm$ 20%, 16V
CH013	24763101	EL, 100 $\mu$ F, $\pm$ 20%, 16V
CH014	24108101	Chip, 100pF
CH015	24108330	Chip, 33pF
CH016	24108330	Chip, 33pF
CH017	24108330	Chip, 33pF
CH018	24108330	Chip, 33pF
CH019	24108330	Chip, 33pF
CH020	24108330	Chip, 33pF
CH040	24100104	Chip, 0.1 $\mu$ F, +80%, -20%, 25V
CH041	24108101	Chip, 100pF
CH042	24108101	Chip, 100pF
CH043	24108101	Chip, 100pF
CH044	24108101	Chip, 100pF
CH045	24108101	Chip, 100pF
CH046	24108101	Chip, 100pF
CH047	24108101	Chip, 100pF
CH048	24108101	Chip, 100pF
CH051	24100104	Chip, 0.1 $\mu$ F, +80%, -20%, 25V
CH052	24100104	Chip, 0.1 $\mu$ F, +80%, -20%, 25V
CH053	24105070	Chip, 7pF, $\pm$ 0.5pF
CH061	24109103	Chip, 0.01 $\mu$ F, $\pm$ 10%, 25V
CH062	24092730	Chip, 0.1 $\mu$ F, $\pm$ 10%, 16V
CH063	24100104	Chip, 0.1 $\mu$ F, +80%, -20%, 25V
CH101	24105070	Chip, 7pF, $\pm$ 0.5pF
CH102	24105070	Chip, 7pF, $\pm$ 0.5pF
CH120	24100104	Chip, 0.1 $\mu$ F, +80%, -20%, 25V
CH121	24100104	Chip, 0.1 $\mu$ F, +80%, -20%, 25V
CH122	24100104	Chip, 0.1 $\mu$ F, +80%, -20%, 25V
CH123	24100104	Chip, 0.1 $\mu$ F, +80%, -20%, 25V
CH124	24100104	Chip, 0.1 $\mu$ F, +80%, -20%, 25V
CH125	24100104	Chip, 0.1 $\mu$ F, +80%, -20%, 25V
CH126	24100104	Chip, 0.1 $\mu$ F, +80%, -20%, 25V
CH127	24100104	Chip, 0.1 $\mu$ F, +80%, -20%, 25V
CH128	24108221	Chip, 220pF
CH129	24108221	Chip, 220pF
CH140	24100104	Chip, 0.1 $\mu$ F, +80%, -20%, 25V
CH141	24100104	Chip, 0.1 $\mu$ F, +80%, -20%, 25V
CH142	24100104	Chip, 0.1 $\mu$ F, +80%, -20%, 25V
CH143	24100104	Chip, 0.1 $\mu$ F, +80%, -20%, 25V
CH144	24100104	Chip, 0.1 $\mu$ F, +80%, -20%, 25V
CH145	24100104	Chip, 0.1 $\mu$ F, +80%, -20%, 25V
CH146	24100104	Chip, 0.1 $\mu$ F, +80%, -20%, 25V
CH147	24100104	Chip, 0.1 $\mu$ F, +80%, -20%, 25V
CH148	24108221	Chip, 220pF
CH149	24108221	Chip, 220pF
CH160	24100104	Chip, 0.1 $\mu$ F, +80%, -20%, 25V
CH161	24100104	Chip, 0.1 $\mu$ F, +80%, -20%, 25V
CH162	24100104	Chip, 0.1 $\mu$ F, +80%, -20%, 25V
CH163	24100104	Chip, 0.1 $\mu$ F, +80%, -20%, 25V
CH164	24100104	Chip, 0.1 $\mu$ F, +80%, -20%, 25V
CH165	24100104	Chip, 0.1 $\mu$ F, +80%, -20%, 25V
CH166	24100104	Chip, 0.1 $\mu$ F, +80%, -20%, 25V
CH167	24100104	Chip, 0.1 $\mu$ F, +80%, -20%, 25V
CH168	24108221	Chip, 220pF
CH169	24108221	Chip, 220pF
CH170	24105681	Chip, 680pF

Location No.	Part No.	Description
CH171	24105681	Chip, 680pF
CH172	24105331	Chip, 330pF
CH173	24105102	Chip, 1000pF, 25V
CH174	24105391	Chip, 390pF
CH175	24105220	Chip, 22pF
CH176	24105391	Chip, 390pF
CH177	24105220	Chip, 22pF
CH178	24105151	Chip, 150pF
CH179	24105102	Chip, 1000pF, 25V
CH180	24105681	Chip, 680pF
CH181	24105681	Chip, 680pF
CH182	24105391	Chip, 390pF
CH183	24105220	Chip, 22pF
CH184	24105391	Chip, 390pF
CH185	24105220	Chip, 22pF
CH186	24105331	Chip, 330pF
CH187	24105102	Chip, 1000pF, 25V
CH188	24105151	Chip, 150pF
CH189	24105102	Chip, 1000pF, 25V
CH190	24105681	Chip, 680pF
CH191	24105681	Chip, 680pF
CH192	24105391	Chip, 390pF
CH193	24105220	Chip, 22pF
CH194	24105331	Chip, 330pF
CH195	24105102	Chip, 1000pF, 25V
CH196	24105391	Chip, 390pF
CH197	24105220	Chip, 22pF
CH198	24105151	Chip, 150pF
CH199	24105102	Chip, 1000pF, 25V
CH200	24105681	Chip, 680pF
CH201	24105681	Chip, 680pF
CH202	24105220	Chip, 22pF
CH203	24105391	Chip, 390pF
CH204	24105391	Chip, 390pF
CH205	24105220	Chip, 22pF
CH206	24105331	Chip, 330pF
CH207	24105102	Chip, 1000pF, 25V
CH208	24105151	Chip, 150pF
CH209	24105102	Chip, 1000pF, 25V
CH210	24105681	Chip, 680pF
CH211	24105681	Chip, 680pF
CH212	24105331	Chip, 330pF
CH213	24105102	Chip, 1000pF, 25V
CH223	24105391	Chip, 390pF
CH224	24105220	Chip, 22pF
CH225	24105391	Chip, 390pF
CH226	24105220	Chip, 22pF
CH227	24105151	Chip, 150pF
CH228	24105102	Chip, 1000pF, 25V
CH229	24105681	Chip, 680pF
CH230	24105681	Chip, 680pF
CH231	24105391	Chip, 390pF
CH232	24105220	Chip, 22pF
CH233	24105391	Chip, 390pF
CH234	24105220	Chip, 22pF
CH235	24105331	Chip, 330pF
CH236	24105102	Chip, 1000pF, 25V
CH237	24105151	Chip, 150pF
CH238	24105102	Chip, 1000pF, 25V
CH241	24100104	Chip, 0.1 $\mu$ F, +80%, -20%, 25V
CH245	24100104	Chip, 0.1 $\mu$ F, +80%, -20%, 25V
CH247	24100104	Chip, 0.1 $\mu$ F, +80%, -20%, 25V
CH248	24100104	Chip, 0.1 $\mu$ F, +80%, -20%, 25V
CH249	24092730	Chip, 0.1 $\mu$ F, $\pm$ 10%, 16V

Location No.	Part No.	Description
CH250	24092730	Chip, 0.1 $\mu$ F, $\pm$ 10%, 16V
CM01	24100104	Chip, 0.1 $\mu$ F, +80%, -20%, 25V
CM02	24100104	Chip, 0.1 $\mu$ F, +80%, -20%, 25V
CM07	24100104	Chip, 0.1 $\mu$ F, +80%, -20%, 25V
CM08	24100104	Chip, 0.1 $\mu$ F, +80%, -20%, 25V
CM09	24100104	Chip, 0.1 $\mu$ F, +80%, -20%, 25V
CR12	24092730	Chip, 0.1 $\mu$ F, $\pm$ 10%, 16V
CR13	24092730	Chip, 0.1 $\mu$ F, $\pm$ 10%, 16V
CR14	24092730	Chip, 0.1 $\mu$ F, $\pm$ 10%, 16V
CR15	24092730	Chip, 0.1 $\mu$ F, $\pm$ 10%, 16V
CR16	24092730	Chip, 0.1 $\mu$ F, $\pm$ 10%, 16V
CR17	24092730	Chip, 0.1 $\mu$ F, $\pm$ 10%, 16V
CS03	24436221	CD, 220pF
CS04	24206010	EL, 1 $\mu$ F, $\pm$ 20%, 50V
CS07	24436221	CD, 220pF
CS08	24206010	EL, 1 $\mu$ F, $\pm$ 20%, 50V
CS09	24436331	CD, 330pF
CS10	24206229	EL, 2.2 $\mu$ F, $\pm$ 20%, 50V
CS11	24206010	EL, 1 $\mu$ F, $\pm$ 20%, 50V
CS12	24436221	CD, 220pF
CS13	24206010	EL, 1 $\mu$ F, $\pm$ 20%, 50V
CS14	24436221	CD, 220pF
CS15	24436331	CD, 330pF
CS16	24206229	EL, 2.2 $\mu$ F, $\pm$ 20%, 50V
CS21	24436101	CD, 100pF
CS22	24436101	CD, 100pF
CS24	24436331	CD, 330pF
CS25	24206229	EL, 2.2 $\mu$ F, $\pm$ 20%, 50V
CS28	24436331	CD, 330pF
CS29	24436331	CD, 330pF
CS32	24203100	EL, 10 $\mu$ F, $\pm$ 20%, 16V
CS33	24203100	EL, 10 $\mu$ F, $\pm$ 20%, 16V
CS34	24436331	CD, 330pF
CS35	24206229	EL, 2.2 $\mu$ F, $\pm$ 20%, 50V
CS36	24206229	EL, 2.2 $\mu$ F, $\pm$ 20%, 50V
CS38	24206229	EL, 2.2 $\mu$ F, $\pm$ 20%, 50V
CS51	24206229	EL, 2.2 $\mu$ F, $\pm$ 20%, 50V
CS52	24206229	EL, 2.2 $\mu$ F, $\pm$ 20%, 50V
CS53	24206229	EL, 2.2 $\mu$ F, $\pm$ 20%, 50V
CS54	24206229	EL, 2.2 $\mu$ F, $\pm$ 20%, 50V
CS55	24436331	CD, 330pF
CS56	24436331	CD, 330pF
CS57	24436331	CD, 330pF
CS58	24436331	CD, 330pF
CV01	24085981	EL, 10 $\mu$ F, $\pm$ 20%, 16V, Non-Polar
CV02	24232103	CD, 0.01 $\mu$ F, +80%, -20%
CV03	24203100	EL, 10 $\mu$ F, $\pm$ 20%, 16V
CV04	24203100	EL, 10 $\mu$ F, $\pm$ 20%, 16V
CV05	24203100	EL, 10 $\mu$ F, $\pm$ 20%, 16V
CV08	24666102	EL, 1000 $\mu$ F, $\pm$ 20%, 16V
CV10	24203100	EL, 10 $\mu$ F, $\pm$ 20%, 16V
CV13	24794100	EL, 10 $\mu$ F, $\pm$ 20%, 16V
CV14	24232103	CD, 0.01 $\mu$ F, +80%, -20%
CV15	24232103	CD, 0.01 $\mu$ F, +80%, -20%
CV17	24203100	EL, 10 $\mu$ F, $\pm$ 20%, 16V
CV21	24203100	EL, 10 $\mu$ F, $\pm$ 20%, 16V
CV22	24203100	EL, 10 $\mu$ F, $\pm$ 20%, 16V
CV23	24232103	CD, 0.01 $\mu$ F, +80%, -20%
CV24	24212102	CD, 1000pF, $\pm$ 10%
CV27	24762471	EL, 470 $\mu$ F, $\pm$ 20%, 10V
CV29	24763101	EL, 100 $\mu$ F, $\pm$ 20%, 16V
CV30	24232103	CD, 0.01 $\mu$ F, +80%, -20%
CV38	24203101	EL, 100 $\mu$ F, $\pm$ 20%, 16V

Location No.	Part No.	Description
CV39	24212102	CD, 1000pF, $\pm$ 10%
CV40	24763101	EL, 100 $\mu$ F, $\pm$ 20%, 16V
CV41	24232103	CD, 0.01 $\mu$ F, +80%, -20%
CV42	24085981	EL, 10 $\mu$ F, $\pm$ 20%, 16V, Non-Polar
CV44	24436560	CD, 56pF
CV45	24436220	CD, 22pF
CV46	24232103	CD, 0.01 $\mu$ F, +80%, -20%
CV60	24203470	EL, 47 $\mu$ F, $\pm$ 20%, 16V
CV61	24203470	EL, 47 $\mu$ F, $\pm$ 20%, 16V
CV62	24232103	CD, 0.01 $\mu$ F, +80%, -20%
CV63	24109103	Chip, 0.01 $\mu$ F, $\pm$ 10%, 25V
CV64	24206100	EL, 10 $\mu$ F, $\pm$ 20%, 50V
CV65	24591122	PF, 1200pF
CV66	24436561	CD, 560pF
CV67	24591102	PF, 1000pF
CV68	24206010	EL, 1 $\mu$ F, $\pm$ 20%, 50V
CV78	24109103	Chip, 0.01 $\mu$ F, $\pm$ 10%, 25V
CV100	24206229	EL, 2.2 $\mu$ F, $\pm$ 20%, 50V
CV111	24109103	Chip, 0.01 $\mu$ F, $\pm$ 10%, 25V
CV112	24203470	EL, 47 $\mu$ F, $\pm$ 20%, 16V
CV113	24203470	EL, 47 $\mu$ F, $\pm$ 20%, 16V
CV114	24203470	EL, 47 $\mu$ F, $\pm$ 20%, 16V
CV115	24203470	EL, 47 $\mu$ F, $\pm$ 20%, 16V
CV116	24203470	EL, 47 $\mu$ F, $\pm$ 20%, 16V
CV117	24203470	EL, 47 $\mu$ F, $\pm$ 20%, 16V
CV135	24203470	EL, 47 $\mu$ F, $\pm$ 20%, 16V
CV136	24203470	EL, 47 $\mu$ F, $\pm$ 20%, 16V
CV137	24203470	EL, 47 $\mu$ F, $\pm$ 20%, 16V
CV138	24203470	EL, 47 $\mu$ F, $\pm$ 20%, 16V
CV501	24203101	EL, 100 $\mu$ F, $\pm$ 20%, 16V
CV503	24203100	EL, 10 $\mu$ F, $\pm$ 20%, 16V
CV505	24109103	Chip, 0.01 $\mu$ F, $\pm$ 10%, 25V
CW08	24794101	EL, 100 $\mu$ F, $\pm$ 20%, 16V
CW09	24109103	Chip, 0.01 $\mu$ F, $\pm$ 10%, 25V
CX11	24667470	EL, 47 $\mu$ F, $\pm$ 20%, 25V
CX13	24669470	EL, 47 $\mu$ F, $\pm$ 20%, 50V
CX102	24092441	Chip, 1 $\mu$ F, +80%, -20%, 16V
CX103	24203330	EL, 33 $\mu$ F, $\pm$ 20%, 16V
CX104	24092441	Chip, 1 $\mu$ F, +80%, -20%, 16V
CX105	24666101	EL, 100 $\mu$ F, $\pm$ 20%, 16V
CX106	24105181	Chip, 180pF
CX107	24105820	Chip, 820pF
CX108	24105121	Chip, 120pF
CX109	24100104	Chip, 0.1 $\mu$ F, +80%, -20%, 25V
CX112	24092463	Chip, 0.22 $\mu$ F, $\pm$ 10%, 16V
CX113	24100104	Chip, 0.1 $\mu$ F, +80%, -20%, 25V
CX114	24100104	Chip, 0.1 $\mu$ F, +80%, -20%, 25V
CX115	24202220	EL, 22 $\mu$ F, $\pm$ 20%, 10V
CX116	24100104	Chip, 0.1 $\mu$ F, +80%, -20%, 25V
CX132	24092441	Chip, 1 $\mu$ F, +80%, -20%, 16V
CX133	24203330	EL, 33 $\mu$ F, $\pm$ 20%, 16V
CX134	24092441	Chip, 1 $\mu$ F, +80%, -20%, 16V
CX136	24105121	Chip, 120pF
CX137	24105151	Chip, 150pF
CX138	24105471	Chip, 470pF
CX142	24092616	Chip, 0.33 $\mu$ F, $\pm$ 10%, 16V
CX145	24202220	EL, 22 $\mu$ F, $\pm$ 20%, 10V
CX146	24100104	Chip, 0.1 $\mu$ F, +80%, -20%, 25V
CX162	24092441	Chip, 1 $\mu$ F, +80%, -20%, 16V
CX163	24203330	EL, 33 $\mu$ F, $\pm$ 20%, 16V
CX164	24092441	Chip, 1 $\mu$ F, +80%, -20%, 16V
CX166	24105121	Chip, 120pF
CX167	24105151	Chip, 150pF

Location No.	Part No.	Description
CX168	24105331	Chip, 330pF
CX172	24092616	Chip, 0.33 $\mu$ F, $\pm$ 10%, 16V
CX175	24202220	EL, 22 $\mu$ F, $\pm$ 20%, 10V
CX176	24100104	Chip, 0.1 $\mu$ F, +80%, -20%, 25V
CX191	24100104	Chip, 0.1 $\mu$ F, +80%, -20%, 25V
CX192	24100104	Chip, 0.1 $\mu$ F, +80%, -20%, 25V
CX193	24100104	Chip, 0.1 $\mu$ F, +80%, -20%, 25V
CX195	24105100	Chip, 10pF, $\pm$ 0.5pF
CX196	24105100	Chip, 10pF, $\pm$ 0.5pF
CX211	24092538	Chip, 1 $\mu$ F, +80%, -20%, 10V
CX222	24100104	Chip, 0.1 $\mu$ F, +80%, -20%, 25V
CX223	24669010	EL, 1 $\mu$ F, $\pm$ 20%, 50V
CX224	24109103	Chip, 0.01 $\mu$ F, $\pm$ 10%, 25V
CX225	24100104	Chip, 0.1 $\mu$ F, +80%, -20%, 25V
CX226	24100104	Chip, 0.1 $\mu$ F, +80%, -20%, 25V
CX242	24100104	Chip, 0.1 $\mu$ F, +80%, -20%, 25V
CX243	24666100	EL, 10 $\mu$ F, $\pm$ 20%, 16V
CX244	24092730	Chip, 0.1 $\mu$ F, $\pm$ 10%, 16V
CX245	24100104	Chip, 0.1 $\mu$ F, +80%, -20%, 25V
CX246	24100104	Chip, 0.1 $\mu$ F, +80%, -20%, 25V
CX301	24761471	EL, 470 $\mu$ F, $\pm$ 20%, 6.3V
CX303	24100104	Chip, 0.1 $\mu$ F, +80%, -20%, 25V
CX306	24100104	Chip, 0.1 $\mu$ F, +80%, -20%, 25V
CX311	24100104	Chip, 0.1 $\mu$ F, +80%, -20%, 25V
CX313	24100104	Chip, 0.1 $\mu$ F, +80%, -20%, 25V
CX315	24100104	Chip, 0.1 $\mu$ F, +80%, -20%, 25V
CX317	24100104	Chip, 0.1 $\mu$ F, +80%, -20%, 25V
CX319	24100104	Chip, 0.1 $\mu$ F, +80%, -20%, 25V
CX320	24100104	Chip, 0.1 $\mu$ F, +80%, -20%, 25V
CX321	24100104	Chip, 0.1 $\mu$ F, +80%, -20%, 25V
CX322	24100104	Chip, 0.1 $\mu$ F, +80%, -20%, 25V
CX323	24092538	Chip, 1 $\mu$ F, +80%, -20%, 10V
CX326	24092538	Chip, 1 $\mu$ F, +80%, -20%, 10V
CX327	24105470	Chip, 47pF
CX328	24092730	Chip, 0.1 $\mu$ F, $\pm$ 10%, 16V
CX329	24092730	Chip, 0.1 $\mu$ F, $\pm$ 10%, 16V
CX331	24092538	Chip, 1 $\mu$ F, +80%, -20%, 10V
CX332	24105330	Chip, 33pF
CX333	24092730	Chip, 0.1 $\mu$ F, $\pm$ 10%, 16V
CX334	24092730	Chip, 0.1 $\mu$ F, $\pm$ 10%, 16V
CX341	24100104	Chip, 0.1 $\mu$ F, +80%, -20%, 25V
CX342	24092730	Chip, 0.1 $\mu$ F, $\pm$ 10%, 16V
CX343	24100104	Chip, 0.1 $\mu$ F, +80%, -20%, 25V
CX344	24092730	Chip, 0.1 $\mu$ F, $\pm$ 10%, 16V
CX345	24100104	Chip, 0.1 $\mu$ F, +80%, -20%, 25V
CX346	24092730	Chip, 0.1 $\mu$ F, $\pm$ 10%, 16V
CX354	24100104	Chip, 0.1 $\mu$ F, +80%, -20%, 25V
CX361	24761471	EL, 470 $\mu$ F, $\pm$ 20%, 6.3V
CX364	24100104	Chip, 0.1 $\mu$ F, +80%, -20%, 25V
CX366	24100104	Chip, 0.1 $\mu$ F, +80%, -20%, 25V
CX368	24100104	Chip, 0.1 $\mu$ F, +80%, -20%, 25V
CX372	24100104	Chip, 0.1 $\mu$ F, +80%, -20%, 25V
CX399	24100104	Chip, 0.1 $\mu$ F, +80%, -20%, 25V
CX471	24100104	Chip, 0.1 $\mu$ F, +80%, -20%, 25V
CX473	24092538	Chip, 1 $\mu$ F, +80%, -20%, 10V
CX521	24105820	Chip, 820pF
CX522	24105560	Chip, 56pF
CX523	24105270	Chip, 27pF
CX531	24105101	Chip, 100pF
CX532	24105330	Chip, 33pF
CX541	24105101	Chip, 100pF
CX542	24105330	Chip, 33pF
CX562	24100104	Chip, 0.1 $\mu$ F, +80%, -20%, 25V
CX564	24100104	Chip, 0.1 $\mu$ F, +80%, -20%, 25V

Location No.	Part No.	Description
CX811	24105330	Chip, 33pF
CX812	24105330	Chip, 33pF
CX821	24105101	Chip, 100pF
CX822	24105101	Chip, 100pF
CX823	24105101	Chip, 100pF
CX824	24105221	Chip, 220pF
CX825	24105221	Chip, 220pF
CX826	24105221	Chip, 220pF
CX827	24105221	Chip, 220pF
CX829	24105221	Chip, 220pF
CX844	24105221	Chip, 220pF
CX845	24105221	Chip, 220pF
CX891	24100104	Chip, 0.1 $\mu$ F, +80%, -20%, 25V
CX904	24109103	Chip, 0.01 $\mu$ F, $\pm$ 10%, 25V
CY21	24100104	Chip, 0.1 $\mu$ F, +80%, -20%, 25V
CY22	24100104	Chip, 0.1 $\mu$ F, +80%, -20%, 25V
CY23	24763221	EL, 220 $\mu$ F, $\pm$ 20%, 16V
CY24	24100104	Chip, 0.1 $\mu$ F, +80%, -20%, 25V
CY25	24100104	Chip, 0.1 $\mu$ F, +80%, -20%, 25V
CY26	24100104	Chip, 0.1 $\mu$ F, +80%, -20%, 25V
CY27	24092730	Chip, 0.1 $\mu$ F, $\pm$ 10%, 16V
CY28	24092730	Chip, 0.1 $\mu$ F, $\pm$ 10%, 16V
CY29	24092730	Chip, 0.1 $\mu$ F, $\pm$ 10%, 16V
CY32	24762102	EL, 1000 $\mu$ F, $\pm$ 20%, 10V
CY33	24100104	Chip, 0.1 $\mu$ F, +80%, -20%, 25V
CY35	24100104	Chip, 0.1 $\mu$ F, +80%, -20%, 25V
CY36	24108120	Chip, 12pF
CY37	24108120	Chip, 12pF
CY38	24108120	Chip, 12pF
CY39	24206228	EL, 0.22 $\mu$ F, $\pm$ 20%, 50V
CY40	24109222	Chip, 2200pF, $\pm$ 10%
CY40	24206100	EL, 10 $\mu$ F, $\pm$ 20%, 50V
CY41	24109103	Chip, 0.01 $\mu$ F, $\pm$ 10%, 25V
CY42	24206229	EL, 2.2 $\mu$ F, $\pm$ 20%, 50V
CY43	24092463	Chip, 0.22 $\mu$ F, $\pm$ 10%, 16V
CY44	24206229	EL, 2.2 $\mu$ F, $\pm$ 20%, 50V
CY45	24109223	Chip, 0.022 $\mu$ F, $\pm$ 10%, 25V
CY105	24108221	Chip, 220pF
CY120	24092538	Chip, 1 $\mu$ F, +80%, -20%, 10V
CY121	24108101	Chip, 100pF
CY122	24092538	Chip, 1 $\mu$ F, +80%, -20%, 10V
CY132	24092730	Chip, 0.1 $\mu$ F, $\pm$ 10%, 16V
CY133	24092730	Chip, 0.1 $\mu$ F, $\pm$ 10%, 16V
CY134	24092730	Chip, 0.1 $\mu$ F, $\pm$ 10%, 16V
CY149	24108330	Chip, 33pF
CY155	24792101	EL, 100 $\mu$ F, $\pm$ 20%, 6.3V
CY157	24108330	Chip, 33pF
CY158	24108330	Chip, 33pF
CY160	24092538	Chip, 1 $\mu$ F, +80%, -20%, 10V
CY162	24092538	Chip, 1 $\mu$ F, +80%, -20%, 10V
CY163	24092538	Chip, 1 $\mu$ F, +80%, -20%, 10V
CY164	24092538	Chip, 1 $\mu$ F, +80%, -20%, 10V
CY165	24092538	Chip, 1 $\mu$ F, +80%, -20%, 10V
CY166	24202221	EL, 220 $\mu$ F, $\pm$ 20%, 10V
CY167	24092538	Chip, 1 $\mu$ F, +80%, -20%, 10V
CY168	24092538	Chip, 1 $\mu$ F, +80%, -20%, 10V
CY169	24092538	Chip, 1 $\mu$ F, +80%, -20%, 10V
CY170	24100104	Chip, 0.1 $\mu$ F, +80%, -20%, 25V
CY171	24100104	Chip, 0.1 $\mu$ F, +80%, -20%, 25V
CY172	24100104	Chip, 0.1 $\mu$ F, +80%, -20%, 25V
CY173	24100104	Chip, 0.1 $\mu$ F, +80%, -20%, 25V
CY174	24100104	Chip, 0.1 $\mu$ F, +80%, -20%, 25V
CY175	24100104	Chip, 0.1 $\mu$ F, +80%, -20%, 25V
CY176	24100104	Chip, 0.1 $\mu$ F, +80%, -20%, 25V

Location No.	Part No.	Description
CY177	24100104	Chip, 0.1μF, +80%, -20%, 25V
CY178	24100104	Chip, 0.1μF, +80%, -20%, 25V
CY179	24100104	Chip, 0.1μF, +80%, -20%, 25V
CY180	24100104	Chip, 0.1μF, +80%, -20%, 25V
CY181	24100104	Chip, 0.1μF, +80%, -20%, 25V
CY182	24100104	Chip, 0.1μF, +80%, -20%, 25V
CY183	24100104	Chip, 0.1μF, +80%, -20%, 25V
CY184	24100104	Chip, 0.1μF, +80%, -20%, 25V
CY185	24761471	EL, 470μF, ±20%, 6.3V
CY186	24100104	Chip, 0.1μF, +80%, -20%, 25V
CY189	24100104	Chip, 0.1μF, +80%, -20%, 25V
CY202	24092730	Chip, 0.1μF, ±10%, 16V
CY203	24092730	Chip, 0.1μF, ±10%, 16V
CY204	24092730	Chip, 0.1μF, ±10%, 16V
CY205	24108101	Chip, 100pF
CY206	24100104	Chip, 0.1μF, +80%, -20%, 25V
CY207	24202101	EL, 100μF, ±20%, 10V
CY251	24109472	Chip, 4700pF, ±10%
CY252	24109472	Chip, 4700pF, ±10%
CY253	24109472	Chip, 4700pF, ±10%
CY254	24109472	Chip, 4700pF, ±10%
CY255	24109472	Chip, 4700pF, ±10%
CY256	24109472	Chip, 4700pF, ±10%
CY257	24100104	Chip, 0.1μF, +80%, -20%, 25V
CY300	24201101	EL, 100μF, 6.3V
CY301	24092538	Chip, 1μF, +80%, -20%, 10V
CY304	24203100	EL, 10μF, ±20%, 16V
CY305	24092730	Chip, 0.1μF, ±10%, 16V
CY307	24108330	Chip, 33pF
CY308	24100104	Chip, 0.1μF, +80%, -20%, 25V
CY330	24201101	EL, 100μF, 6.3V
CY331	24092538	Chip, 1μF, +80%, -20%, 10V
CY332	24092538	Chip, 1μF, +80%, -20%, 10V
CY333	24201101	EL, 100μF, 6.3V
CY334	24203100	EL, 10μF, ±20%, 16V
CY335	24092730	Chip, 0.1μF, ±10%, 16V
CY337	24108330	Chip, 33pF
CY338	24100104	Chip, 0.1μF, +80%, -20%, 25V
CY339	24100104	Chip, 0.1μF, +80%, -20%, 25V
CY340	24201101	EL, 100μF, 6.3V
CY341	24092538	Chip, 1μF, +80%, -20%, 10V
CY344	24203100	EL, 10μF, ±20%, 16V
CY345	24092730	Chip, 0.1μF, ±10%, 16V
CY347	24108330	Chip, 33pF
CY348	24100104	Chip, 0.1μF, +80%, -20%, 25V
CY439	24108330	Chip, 33pF
CY440	24108330	Chip, 33pF
CY501	24203101	EL, 100μF, ±20%, 16V
CY502	24203100	EL, 10μF, ±20%, 16V
CY505	24109103	Chip, 0.01μF, ±10%, 25V
CY511	24108101	Chip, 100pF
CY515	24092730	Chip, 0.1μF, ±10%, 16V
CY519	24092730	Chip, 0.1μF, ±10%, 16V
CY671	24092730	Chip, 0.1μF, ±10%, 16V
CY672	24092730	Chip, 0.1μF, ±10%, 16V
CY673	24761471	EL, 470μF, ±20%, 6.3V
CY674	24092730	Chip, 0.1μF, ±10%, 16V
CY675	24092730	Chip, 0.1μF, ±10%, 16V
CY702	24092730	Chip, 0.1μF, ±10%, 16V
CY703	24092730	Chip, 0.1μF, ±10%, 16V
CY711	24092730	Chip, 0.1μF, ±10%, 16V
CY712	24092730	Chip, 0.1μF, ±10%, 16V
CY713	24092730	Chip, 0.1μF, ±10%, 16V
CY720	24092730	Chip, 0.1μF, ±10%, 16V

Location No.	Part No.	Description
CY721	24092730	Chip, 0.1μF, ±10%, 16V
CY722	24092730	Chip, 0.1μF, ±10%, 16V
CY733	24092730	Chip, 0.1μF, ±10%, 16V
CY803	24092730	Chip, 0.1μF, ±10%, 16V
CY804	24092730	Chip, 0.1μF, ±10%, 16V
CY806	24100104	Chip, 0.1μF, +80%, -20%, 25V
CY807	24092538	Chip, 1μF, +80%, -20%, 10V
CY808	24100104	Chip, 0.1μF, +80%, -20%, 25V
CY813	24092538	Chip, 1μF, +80%, -20%, 10V
CY822	24108330	Chip, 33pF
CY825	24092538	Chip, 1μF, +80%, -20%, 10V
CY826	24108330	Chip, 33pF
CY827	24108330	Chip, 33pF
CY828	24108330	Chip, 33pF
CY829	24108330	Chip, 33pF
CY830	24108330	Chip, 33pF
CY900	24761471	EL, 470μF, ±20%, 6.3V
CY909	24092730	Chip, 0.1μF, ±10%, 16V
CZ02	24100104	Chip, 0.1μF, +80%, -20%, 25V
CZ03	24092730	Chip, 0.1μF, ±10%, 16V
CZ04	24105181	Chip, 180pF
CZ05	24105680	Chip, 68pF
CZ06	24108330	Chip, 33pF
CZ08	24100104	Chip, 0.1μF, +80%, -20%, 25V
CZ09	24109103	Chip, 0.01μF, ±10%, 25V
CZ10	24203101	EL, 100μF, ±20%, 16V
CZ11	24100104	Chip, 0.1μF, +80%, -20%, 25V
CZ13	24108121	Chip, 120pF
CZ14	24108151	Chip, 150pF
CZ27	24092538	Chip, 1μF, +80%, -20%, 10V
CZ28	24109103	Chip, 0.01μF, ±10%, 25V
CZ29	24092538	Chip, 1μF, +80%, -20%, 10V
CZ30	24092730	Chip, 0.1μF, ±10%, 16V
CZ31	24092730	Chip, 0.1μF, ±10%, 16V
CZ32	24100104	Chip, 0.1μF, +80%, -20%, 25V
CZ33	24109102	Chip, 1000pF, ±10%
CZ34	24100104	Chip, 0.1μF, +80%, -20%, 25V
CZ35	24206010	EL, 1μF, ±20%, 50V
CZ36	24761471	EL, 470μF, ±20%, 6.3V
CZ37	24100104	Chip, 0.1μF, +80%, -20%, 25V
CZ38	24100104	Chip, 0.1μF, +80%, -20%, 25V
CZ39	24100104	Chip, 0.1μF, +80%, -20%, 25V
CZ40	24100104	Chip, 0.1μF, +80%, -20%, 25V
CZ41	24100104	Chip, 0.1μF, +80%, -20%, 25V
CZ42	24100104	Chip, 0.1μF, +80%, -20%, 25V
CZ43	24100104	Chip, 0.1μF, +80%, -20%, 25V
CZ44	24092730	Chip, 0.1μF, ±10%, 16V
CZ45	24100104	Chip, 0.1μF, +80%, -20%, 25V
CZ46	24100104	Chip, 0.1μF, +80%, -20%, 25V
CZ47	24108820	Chip, 82pF
CZ48	24092730	Chip, 0.1μF, ±10%, 16V
CZ49	24092730	Chip, 0.1μF, ±10%, 16V
CZ50	24100104	Chip, 0.1μF, +80%, -20%, 25V
CZ51	24092730	Chip, 0.1μF, ±10%, 16V
CZ52	24092730	Chip, 0.1μF, ±10%, 16V
CZ54	24100104	Chip, 0.1μF, +80%, -20%, 25V
CZ57	24105181	Chip, 180pF
CZ58	24105680	Chip, 56pF
CZ60	24100104	Chip, 0.1μF, +80%, -20%, 25V
CZ77	24092730	Chip, 0.1μF, ±10%, 16V
CZ96	24105270	Chip, 27pF
CZ101	24092441	Chip, 1μF, +80%, -20%, 16V
CZ102	24203101	EL, 100μF, ±20%, 16V
CZ103	24100104	Chip, 0.1μF, +80%, -20%, 25V



Location No.	Part No.	Description
CZ104	24109103	Chip, 0.01 $\mu$ F, $\pm$ 10%, 25V
CZ105	24109103	Chip, 0.01 $\mu$ F, $\pm$ 10%, 25V
CZ106	24109103	Chip, 0.01 $\mu$ F, $\pm$ 10%, 25V
CZ108	24100104	Chip, 0.1 $\mu$ F, +80%, -20%, 25V
CZ109	24108101	Chip, 100pF
CZ111	24109103	Chip, 0.01 $\mu$ F, $\pm$ 10%, 25V
CZ112	24105181	Chip, 180pF
CZ113	24109103	Chip, 0.01 $\mu$ F, $\pm$ 10%, 25V
CZ114	24109103	Chip, 0.01 $\mu$ F, $\pm$ 10%, 25V
CZ115	24105390	Chip, 39pF
CZ116	24108470	Chip, 47pF
CZ117	24105680	Chip, 68pF
CZ800	24108330	Chip, 33pF
CZ802	24108330	Chip, 33pF
CZ804	24108330	Chip, 33pF
CZ805	24108330	Chip, 33pF
CZ806	24108330	Chip, 33pF
CZ809	24108330	Chip, 33pF
CZ810	24108330	Chip, 33pF
CZ811	24108330	Chip, 33pF
CZ812	24108330	Chip, 33pF

## RESISTORS

R101	24383183	OMF, 18k ohm, 2W
R150	24366101	CF, 100 ohm
R151	24366562	CF, 5600 ohm
R152	24366103	CF, 10k ohm
R201	24011101	Chip, 100 ohm, 1/20W
R202	24011471	Chip, 470 ohm, 1/20W
R203	24000445	Chip Jumper, 1680 Type
R204	24000445	Chip Jumper, 1680 Type
R205	24872101	Chip, 100 ohm, 1/16W
R206	24872102	Chip, 1k ohm, 1/16W
R207	24011101	Chip, 100 ohm, 1/20W
R208	24011102	Chip, 1k ohm, 1/20W
R209	24011102	Chip, 1k ohm, 1/20W
R210	24011102	Chip, 1k ohm, 1/20W
R212	24011103	Chip, 10k ohm, 1/20W
R213	24011123	Chip, 12k ohm, 1/20W
R214	24011222	Chip, 2200 ohm, 1/20W
R215	24011101	Chip, 100 ohm, 1/20W
R241	24367223	CF, 22k ohm, $\pm$ 2%
R242	24367223	CF, 22k ohm, $\pm$ 2%
R243	24367223	CF, 22k ohm, $\pm$ 2%
R244	24367103	CF, 10k ohm, $\pm$ 2%
R245	24367183	CF, 18k ohm, $\pm$ 2%
R247	24366474	CF, 470k ohm
R283	24011221	Chip, 220 ohm, 1/20W
R284	24011221	Chip, 220 ohm, 1/20W
R285	24011221	Chip, 220 ohm, 1/20W
R301	24366103	CF, 10k ohm
R302	24366101	CF, 100 ohm
R303	24366102	CF, 1k ohm
R304	24366103	CF, 10k ohm
R305	24366153	CF, 15k ohm
R307	24366471	CF, 470 ohm
R308	24366471	CF, 470 ohm
R310	24366562	CF, 5600 ohm
R312	24366103	CF, 10k ohm
R314	24011101	Chip, 100 ohm, 1/20W
R314	24366473	CF, 47k ohm
R315	24011474	Chip, 470k ohm, 1/20W
R315	24366821	CF, 820 ohm
R316	24366102	CF, 1k ohm

Location No.	Part No.	Description
R318	24366153	CF, 15k ohm
R320	24000249	MF, 47k ohm, 1/4W
R321	24366472	CF, 4700 ohm
R322	24000371	MF, 3600 ohm, 1/4W
R323	24000639	MF, 22k ohm, 1/4W
R324	24366103	CF, 10k ohm
R325	24366472	CF, 4700 ohm
R326	24366103	CF, 10k ohm
R327	24366103	CF, 10k ohm
R328	24366912	CF, 9100 ohm
R329	24366103	CF, 10k ohm
R330	24366153	CF, 15k ohm
R331	24019119	MF, 30k ohm, 1/6W
R332	24000525	MF, 4.7k ohm, 1/4W
R333	24366103	CF, 10k ohm
R334	24872102	Chip, 1k ohm, 1/16W
R335	24872102	Chip, 1k ohm, 1/16W
R336	24872102	Chip, 1k ohm, 1/16W
R337	24321129	MF, 1.2 ohm, 1/2W
R338	24366183	CF, 18k ohm
R339	24366393	CF, 39k ohm
R340	24366824	CF, 820k ohm
R341	24366273	CF, 27k ohm
R342	24366822	CF, 8200 ohm
R343	24366102	CF, 1k ohm
R344	24382271	OMF, 270 ohm, 1W
R345	24322828	MF, 0.82 ohm, 1W
R346	24366100	CF, 10 ohm
R346	24382391	OMF, 390 ohm, 1W
R347	24366103	CF, 10k ohm
R348	24366103	CF, 10k ohm
R349	24366392	CF, 3900 ohm
R350	24366822	CF, 8200 ohm
R351	24366472	CF, 4700 ohm
R351	24872102	Chip, 1k ohm, 1/16W
R352	24872102	Chip, 1k ohm, 1/16W
R353	24872103	Chip, 10k ohm, 1/16W
R354	24872103	Chip, 10k ohm, 1/16W
R355	24872103	Chip, 10k ohm, 1/16W
R357	24872472	Chip, 4700 ohm, 1/16W
R358	24872103	Chip, 10k ohm, 1/16W
R360	24366103	CF, 10k ohm
R361	24366103	CF, 10k ohm
R362	24366103	CF, 10k ohm
R363	24366682	CF, 6800 ohm
R364	24366103	CF, 10k ohm
R370	24366102	CF, 1k ohm
R371	24366823	CF, 82k ohm
R372	24366332	CF, 3300 ohm
R373	24366823	CF, 82k ohm
R374	24366104	CF, 100k ohm
R375	24366153	CF, 15k ohm
R376	24366333	CF, 33k ohm
R378	24366103	CF, 10k ohm
R381	24366103	CF, 10k ohm
R382	24366682	CF, 6800 ohm
R385	24872472	Chip, 4700 ohm, 1/16W
R386	24366103	CF, 10k ohm
R387	24366102	CF, 1k ohm
R401	24011361	Chip, 360 ohm, 1/20W
R402	24011103	Chip, 10k ohm, 1/20W
R403	24011272	Chip, 2700 ohm, 1/20W
R403	24553101	OMF, 100 ohm, 1W
R404	24383121	OMF, 120 ohm, 2W

Location No.	Part No.	Description
R406	24382222	OMF, 2200 ohm, 1W
R407	24381100	OMF, 10 ohm, 1/2W
R408	24366101	CF, 100 ohm
R409	24011102	Chip, 1k ohm, 1/20W
R409	24555220	OMF, 22 ohm, 3W
R410	24555220	OMF, 22 ohm, 3W
R411	24323479	MF, 4.7 ohm, 2W
R412	24366101	CF, 100 ohm
R413	24011182	Chip, 1800 ohm, 1/20W
R413	24366272	CF, 2700 ohm
R414	24366101	CF, 100 ohm
R417	24366101	CF, 100 ohm
R419	24942102	CC, 1k ohm, 1/2W
R420	24382473	OMF, 47k ohm, 1W
R421	24377224	CF, 220k ohm, 1W
R422	24376104	CF, 100k ohm, 1/2W
R423	24376104	CF, 100k ohm, 1/2W
R424	24338398	MF, 0.39 ohm, 1W
R425	24533102	FR, 1k ohm, 2W
R426	24019254	FR, 10ohm, 1/4W
R428	24310109	MF, 1.0 ohm, 1/2W
R430	24383153	OMF, 15k ohm, 2W
R431	24383102	OMF, 1k ohm, 2W
R432	24376274	CF, 270k ohm, 1/2W
R433	24376274	CF, 270k ohm, 1/2W
R434	24376274	CF, 270k ohm, 1/2W
R435	24366101	CF, 100 ohm
R436	24382561	OMF, 560 ohm, 1W
R437	24382561	OMF, 560 ohm, 1W
R438	24382561	OMF, 560 ohm, 1W
R439	24366103	CF, 10k ohm
R440	24366103	CF, 10k ohm
R441	24366474	CF, 470k ohm
R442	24366103	CF, 10k ohm
R443	24366562	CF, 5600 ohm
R444	24366562	CF, 5600 ohm
R445	24366472	CF, 4700 ohm
R446	24366103	CF, 10k ohm
R447	24366152	CF, 1500 ohm
R452	24366103	CF, 10k ohm
R453	24366472	CF, 4700 ohm
R454	24366562	CF, 5600 ohm
R455	24019259	FR, 27ohm, 1/4W
R456	24366123	CF, 12k ohm
R457	24366472	CF, 4700 ohm
R461	24366102	CF, 1k ohm
R462	24366472	CF, 4700 ohm
R470	24322568	MF, 0.56 ohm, 1W
R471	24552271	OMF, 270 ohm, 1/2W
R473	24366102	CF, 1k ohm
R482	24366331	CF, 330 ohm
R483	24366102	CF, 1k ohm
R484	24366474	CF, 470k ohm
R485	24366103	CF, 10k ohm
R486	24366103	CF, 10k ohm
△ R487	24000366	MF, 2200 ohm, 1/4W
△ R488	24000357	MF, 910ohm, 1/4W
R489	24366222	CF, 2200 ohm
R490	24327223	MF, 22k ohm, ±1%, 1/4W
R491	24366823	CF, 82k ohm
R492	24366392	CF, 3900 ohm
R493	24366224	CF, 220k ohm
△ R494	24000639	MF, 22k ohm, 1/4W
R495	24366473	CF, 47k ohm

Location No.	Part No.	Description
R496	24366223	CF, 22k ohm
R497	24366223	CF, 22k ohm
R499	24366563	CF, 56k ohm
R501	24011303	Chip, 30k ohm, 1/20W
R503	24011103	Chip, 10k ohm, 1/20W
R505	24011152	Chip, 1500 ohm, 1/20W
R506	24011272	Chip, 2700 ohm, 1/20W
R508	24011102	Chip, 1k ohm, 1/20W
R509	24011102	Chip, 1k ohm, 1/20W
R510	24011471	Chip, 470 ohm, 1/20W
R511	24011103	Chip, 10k ohm, 1/20W
R512	24011103	Chip, 10k ohm, 1/20W
R520	24011101	Chip, 100 ohm, 1/20W
R520	24872101	Chip, 100 ohm, 1/16W
R521	24011101	Chip, 100 ohm, 1/20W
R521	24872101	Chip, 100 ohm, 1/16W
R522	24872102	Chip, 1k ohm, 1/16W
R523	24872101	Chip, 100 ohm, 1/16W
R524	24872102	Chip, 1k ohm, 1/16W
R525	24872101	Chip, 100 ohm, 1/16W
R526	24872102	Chip, 1k ohm, 1/16W
R527	24872101	Chip, 100 ohm, 1/16W
R530	24011103	Chip, 10k ohm, 1/20W
R530	24872101	Chip, 100 ohm, 1/16W
R531	24011103	Chip, 10k ohm, 1/20W
R531	24872101	Chip, 100 ohm, 1/16W
R532	24011103	Chip, 10k ohm, 1/20W
R532	24872101	Chip, 100 ohm, 1/16W
R533	24552471	OMF, 470 ohm, 1/2W
R534	24552471	OMF, 470 ohm, 1/2W
R535	24552471	OMF, 470 ohm, 1/2W
R536	24872272	Chip, 2700 ohm, 1/16W
R537	24872472	Chip, 4700 ohm, 1/16W
R538	24872103	Chip, 10k ohm, 1/16W
R539	24552331	OMF, 330 ohm, 1/2W
R540	24872103	Chip, 10k ohm, 1/16W
R562	24872101	Chip, 100 ohm, 1/16W
R601	24872153	Chip, 15k ohm, 1/16W
R602	24872153	Chip, 15k ohm, 1/16W
R603	24872183	Chip, 18k ohm, 1/16W
R604	24872183	Chip, 18k ohm, 1/16W
R609	24871229	Chip, 2.2 ohm, 1/8W
R610	24871229	Chip, 2.2 ohm, 1/8W
R611	24872562	Chip, 5600 ohm, 1/16W
R612	24872562	Chip, 5600 ohm, 1/16W
R613	24872222	Chip, 2200 ohm, 1/16W
R621	24872101	Chip, 100 ohm, 1/16W
R622	24872105	Chip, 1M ohm, 1/16W
R623	24872101	Chip, 100 ohm, 1/16W
R624	24872101	Chip, 100 ohm, 1/16W
R625	24872101	Chip, 100 ohm, 1/16W
R626	24872101	Chip, 100 ohm, 1/16W
R627	24872101	Chip, 100 ohm, 1/16W
R633	24872101	Chip, 100 ohm, 1/16W
R634	24872101	Chip, 100 ohm, 1/16W
R635	24872101	Chip, 100 ohm, 1/16W
R636	24872101	Chip, 100 ohm, 1/16W
R637	24872101	Chip, 100 ohm, 1/16W
R638	24872101	Chip, 100 ohm, 1/16W
R639	24872101	Chip, 100 ohm, 1/16W
R640	24872101	Chip, 100 ohm, 1/16W
R641	24872101	Chip, 100 ohm, 1/16W
R642	24872101	Chip, 100 ohm, 1/16W
R643	24872101	Chip, 100 ohm, 1/16W

Location No.	Part No.	Description
R661	24872101	Chip, 100 ohm, 1/16W
R662	24872332	Chip, 3300 ohm, 1/16W
R663	24872472	Chip, 4700 ohm, 1/16W
R665	24872223	Chip, 22k ohm, 1/16W
R666	24872473	Chip, 47k ohm, 1/16W
R667	24872223	Chip, 22k ohm, 1/16W
R668	24872473	Chip, 47k ohm, 1/16W
R669	24872222	Chip, 2200 ohm, 1/16W
R671	24872101	Chip, 100 ohm, 1/16W
R672	24872332	Chip, 3300 ohm, 1/16W
R673	24872472	Chip, 4700 ohm, 1/16W
R674	24872103	Chip, 10k ohm, 1/16W
R675	24872473	Chip, 47k ohm, 1/16W
R682	24872473	Chip, 47k ohm, 1/16W
R683	24872223	Chip, 22k ohm, 1/16W
R684	24872223	Chip, 22k ohm, 1/16W
R687	24872103	Chip, 10k ohm, 1/16W
R689	24872222	Chip, 2200 ohm, 1/16W
R690	24872103	Chip, 10k ohm, 1/16W
R702	24552221	OMF, 220 ohm, 1/2W
R709	24366563	CF, 56k ohm
R713	24366273	CF, 27k ohm
R715	24366333	CF, 33k ohm
R716	24366273	CF, 27k ohm
R717	24366333	CF, 33k ohm
R718	24366101	CF, 100 ohm
R719	24366100	CF, 10 ohm
R720	24366102	CF, 1k ohm
R722	24552471	OMF, 470 ohm, 1/2W
R723	24366101	CF, 100 ohm
R724	24366151	CF, 150 ohm
R725	24366182	CF, 1800 ohm
R730	24552100	OMF, 10 ohm, 1/2W
R731	24552331	OMF, 330 ohm, 1/2W
R732	24366470	CF, 47 ohm
R733	24366683	CF, 68k ohm
R734	24366470	CF, 47 ohm
R735	24366683	CF, 68k ohm
R736	24553270	OMF, 27 ohm, 1W
R737	24366751	CF, 750 ohm
R738	24366102	CF, 1k ohm
R739	24366751	CF, 750 ohm
R740	24553270	OMF, 27 ohm, 1W
R741	24322399	MF, 3.9 ohm, 1W
R742	24321399	MF, 3.9 ohm, 1/2W
R743	24554221	OMF, 220 ohm, 2W
R744	24366122	CF, 1200 ohm
R745	24366122	CF, 1200 ohm
R761	24366273	CF, 27k ohm
R762	24366563	CF, 56k ohm
R763	24552331	OMF, 330 ohm, 1/2W
R764	24366470	CF, 47 ohm
R765	24552100	OMF, 10 ohm, 1/2W
R766	24366470	CF, 47 ohm
R767	24552221	OMF, 220 ohm, 1/2W
R768	24366751	CF, 750 ohm
R769	24366122	CF, 1200 ohm
R770	24553270	OMF, 27 ohm, 1W
R771	24322399	MF, 3.9 ohm, 1W
R772	24366683	CF, 68k ohm
R773	24366683	CF, 68k ohm
R774	24366751	CF, 750 ohm
R775	24366122	CF, 1200 ohm
R776	24553270	OMF, 27 ohm, 1W

Location No.	Part No.	Description
R777	24321399	MF, 3.9 ohm, 1/2W
R778	24366102	CF, 1k ohm
R779	24554221	OMF, 220 ohm, 2W
R781	24366273	CF, 27k ohm
R782	24366563	CF, 56k ohm
R783	24552221	OMF, 220 ohm, 1/2W
R784	24552100	OMF, 10 ohm, 1/2W
R785	24366470	CF, 47 ohm
R786	24366751	CF, 750 ohm
R787	24366122	CF, 1200 ohm
R788	24366683	CF, 68k ohm
R789	24366683	CF, 68k ohm
R790	24366751	CF, 750 ohm
R791	24366122	CF, 1200 ohm
R792	24366102	CF, 1k ohm
R793	24321399	MF, 3.9 ohm, 1/2W
R794	24553270	OMF, 27 ohm, 1W
R795	24322399	MF, 3.9 ohm, 1W
R796	24554221	OMF, 220 ohm, 2W
R797	24366470	CF, 47 ohm
R798	24552331	OMF, 330 ohm, 1/2W
R799	24553270	OMF, 27 ohm, 1W
R810	24510339	Cement, 3.3 ohm, 5W
R811	24007381	Cement, 1.8 ohm, 2W
R812	24382820	OMF, 82 ohm, 1W
R813	24366104	CF, 100k ohm
R818	24366683	CF, 68k ohm
R825	24545109	FR, 1 ohm, 1/4W
R827	24366104	CF, 100k ohm
R843	24366473	CF, 47k ohm
R854	24382121	OMF, 120 ohm, 1W
R856	24366152	CF, 1500 ohm
R857	24552682	OMF, 6800 ohm, 1/2W
R858	24366102	CF, 1k ohm
R859	24553333	OMF, 33k ohm, 1W
R860	24554223	OMF, 22k ohm, 2W
R861	24554273	OMF, 27k ohm, 2W
R862	24310689	MF, 6.8 ohm, 1/2W
R863	24366101	CF, 100 ohm
R864	24552102	OMF, 1k ohm, 1/2W
R865	24552390	OMF, 39 ohm, 1/2W
R867	24366102	CF, 1k ohm
R868	24552470	OMF, 47 ohm, 1/2W
R869	24366100	CF, 10 ohm
R870	24381121	OMF, 120 ohm, 1/2W
R871	24382680	OMF, 68 ohm, 1W
R873	24366109	CF, 1 ohm
R898	24002000	CC, 3.9M ohm, $\pm 10\%$ , 1/2W
R900	24000961	FR, 2.2 ohm, 2W (50HX70/55HX70/61HX70)
R900	24000945	FR, 1.8 ohm, 2W (55H70/61H70)
R901	24366101	CF, 100 ohm
R902	24366681	CF, 680 ohm
R903	24942102	CC, 1k ohm, 1/2W
R904	24366222	CF, 2200 ohm
R905	24366330	CF, 33 ohm
R906	24366331	CF, 330 ohm
R908	24366470	CF, 47 ohm
R909	24366390	CF, 39 ohm
R910	24322228	MF, 0.22 ohm, 1W
R911	24366101	CF, 100 ohm
R913	24942102	CC, 1k ohm, 1/2W
R914	24366222	CF, 2200 ohm

Location No.	Part No.	Description
R915	24366270	CF, 27 ohm
R916	24366331	CF, 330 ohm
R917	24366681	CF, 680 ohm
R918	24366330	CF, 33 ohm
R919	24366330	CF, 33 ohm
R920	24366153	CF, 15k ohm
R921	24366101	CF, 100 ohm
R922	24366681	CF, 680 ohm
R923	24942102	CC, 1k ohm, 1/2W
R924	24366222	CF, 2200 ohm
R925	24366390	CF, 39 ohm
R926	24366331	CF, 330 ohm
R927	24366100	CF, 10 ohm
R928	24366470	CF, 47 ohm
R929	24366390	CF, 39 ohm
R930	24366153	CF, 15k ohm
R931	24383153	OMF, 15k ohm, 2W
R932	24383153	OMF, 15k ohm, 2W
R935	24366150	CF, 15 ohm
R936	24383153	OMF, 15k ohm, 2W
R937	24383153	OMF, 15k ohm, 2W
R938	24366150	CF, 15 ohm
R941	24554153	OMF, 15k ohm, 2W
R942	24554153	OMF, 15k ohm, 2W
R943	24554153	OMF, 15k ohm, 2W
R944	24383153	OMF, 15k ohm, 2W
R945	24366150	CF, 15 ohm
R948	24366562	CF, 5600 ohm
R949	24366153	CF, 15k ohm
R951	24554153	OMF, 15k ohm, 2W
R952	24554153	OMF, 15k ohm, 2W
R953	24554153	OMF, 15k ohm, 2W
R954	24383153	OMF, 15k ohm, 2W
R956	24366101	CF, 100 ohm
R959	24366150	CF, 15 ohm
R961	24366122	CF, 1200 ohm
R962	24366561	CF, 560 ohm
R963	24366222	CF, 2200 ohm
R964	24366272	CF, 2700 ohm
R965	24366471	CF, 470 ohm
R966	24366331	CF, 330 ohm
R967	24366681	CF, 680 ohm
R968	24366470	CF, 47 ohm
R969	24366683	CF, 68k ohm
R970	24366393	CF, 39k ohm
R971	24367821	CF, 820 ohm, $\pm 2\%$
R972	24367471	CF, 470 ohm, $\pm 2\%$
R973	24367681	CF, 680 ohm, $\pm 2\%$
R974	24367681	CF, 680 ohm, $\pm 2\%$
R975	24366561	CF, 560 ohm
R976	24367472	CF, 4700 ohm, $\pm 2\%$
R977	24367512	CF, 5100 ohm, $\pm 2\%$
R978	24367391	CF, 390 ohm, $\pm 2\%$
R983	24366681	CF, 680 ohm
R984	24366821	CF, 820 ohm
R985	24366821	CF, 820 ohm
R986	24366821	CF, 820 ohm
R987	24366470	CF, 47 ohm
R991	24366822	CF, 8200 ohm
R992	24366153	CF, 15k ohm
R4005	24366102	CF, 1k ohm
R4006	24366103	CF, 10k ohm
R4007	24366102	CF, 1k ohm
R4008	24366101	CF, 100 ohm

Location No.	Part No.	Description
R4010	24366102	CF, 1k ohm
R4011	24366103	CF, 10k ohm
R4012	24366472	CF, 4700 ohm
R4013	24366103	CF, 10k ohm
R4014	24366222	CF, 2200 ohm
R4015	24000633	MF, 10k ohm, 1/4W
R4016	24366105	CF, 1M ohm
R4017	24000631	MF, 8200 ohm, 1/4W
R4020	24000370	MF, 3300 ohm, 1/4W
R4021	24000637	MF, 15k ohm, 1/4W
R4022	24000368	MF, 2700 ohm, 1/4W
R4023	24366472	CF, 4700 ohm
R4025	24000362	MF, 1500ohm, 1/4W
R4026	24554470	OMF, 47 ohm, 2W
R4030	24366102	CF, 1k ohm
R4031	24366562	CF, 5600 ohm
R4032	24000639	MF, 22k ohm, 1/4W
R4033	24019090	MF, 300k ohm, 1/4W
R4034	24366222	CF, 2200 ohm
R4035	24366103	CF, 10k ohm
R4036	24366102	CF, 1k ohm
R4037	24366182	CF, 1800 ohm
R4044	24000639	MF, 22k ohm, 1/4W
R4051	24000372	MF, 3900 ohm, 1/4W
R4052	24000147	MF, 470 ohm, 1/4W
R4053	24366472	CF, 4700 ohm
R4054	24366472	CF, 4700 ohm
R4055	24066864	VR, 5k ohm, 0.3W
R4056	24000372	MF, 3900 ohm, 1/4W
R4057	24366222	CF, 2200 ohm
R4061	24000529	MF, 6800 ohm, 1/4W
R4062	24000633	MF, 10k ohm, 1/4W
R4402	24011105	Chip, 1M ohm, 1/20W
R4406	24872622	Chip, 6200 ohm, 1/16W
R4407	24872361	Chip, 360 ohm, 1/16W
R4416	24872471	Chip, 470 ohm, 1/16W
R4417	24872471	Chip, 470 ohm, 1/16W
R4420	24872103	Chip, 10k ohm, 1/16W
R4422	24872222	Chip, 2200 ohm, 1/16W
R4423	24872472	Chip, 4700 ohm, 1/16W
R4424	24872103	Chip, 10k ohm, 1/16W
R4501	24872101	Chip, 100 ohm, 1/16W
R4503	24872102	Chip, 1k ohm, 1/16W
R4504	24872102	Chip, 1k ohm, 1/16W
R4505	24872223	Chip, 22k ohm, 1/16W
R4506	24872103	Chip, 10k ohm, 1/16W
R4507	24872103	Chip, 10k ohm, 1/16W
R4508	24872102	Chip, 1k ohm, 1/16W
R4509	24872561	Chip, 560 ohm, 1/16W
R4510	24872152	Chip, 1500 ohm, 1/16W
R4511	24872102	Chip, 1k ohm, 1/16W
R4512	24872103	Chip, 10k ohm, 1/16W
R4513	24872332	Chip, 3300 ohm, 1/16W
R4514	24872361	Chip, 360 ohm, 1/16W
R4515	24872622	Chip, 6200 ohm, 1/16W
R4521	24872102	Chip, 1k ohm, 1/16W
R4522	24872102	Chip, 1k ohm, 1/16W
R4523	24872102	Chip, 1k ohm, 1/16W
R4524	24872103	Chip, 10k ohm, 1/16W
R4525	24872103	Chip, 10k ohm, 1/16W
R4526	24872103	Chip, 10k ohm, 1/16W
R4527	24872102	Chip, 1k ohm, 1/16W
R4528	24872102	Chip, 1k ohm, 1/16W
R7701	24872104	Chip, 100k ohm, 1/16W

Location No.	Part No.	Description
R7705	24872154	Chip, 150k ohm, 1/16W
R7707	24872472	Chip, 4700 ohm, 1/16W
R7708	24872472	Chip, 4700 ohm, 1/16W
R7710	24384680	OMF, 68 ohm, 3W
R7711	24323129	MF, 1.2 ohm, 2W
R7712	24872472	Chip, 4700 ohm, 1/16W
R7713	24872472	Chip, 4700 ohm, 1/16W
R7715	24384680	OMF, 68 ohm, 3W
R7716	24323129	MF, 1.2 ohm, 2W
R7717	24872472	Chip, 4700 ohm, 1/16W
R7718	24872472	Chip, 4700 ohm, 1/16W
R7720	24384680	OMF, 68 ohm, 3W
R7721	24323129	MF, 1.2 ohm, 2W
R7722	24872473	Chip, 47k ohm, 1/16W
R7723	24872472	Chip, 4700 ohm, 1/16W
R7725	24384680	OMF, 68 ohm, 3W
R7726	24323129	MF, 1.2 ohm, 2W
R7727	24872472	Chip, 4700 ohm, 1/16W
R7728	24872472	Chip, 4700 ohm, 1/16W
R7730	24384680	OMF, 68 ohm, 3W
R7731	24323129	MF, 1.2 ohm, 2W
R7732	24872473	Chip, 47k ohm, 1/16W
R7733	24872472	Chip, 4700 ohm, 1/16W
R7735	24384680	OMF, 68 ohm, 3W
R7736	24323129	MF, 1.2 ohm, 2W
R7741	24872471	Chip, 470 ohm, 1/16W
R7742	24872222	Chip, 2200 ohm, 1/16W
R7743	24872223	Chip, 22k ohm, 1/16W
R7744	24872102	Chip, 1k ohm, 1/16W
R7745	24872222	Chip, 2200 ohm, 1/16W
R7746	24872223	Chip, 22k ohm, 1/16W
R7747	24872222	Chip, 2200 ohm, 1/16W
R7749	24872331	Chip, 330 ohm, 1/16W
R7750	24323228	MF, 0.22 ohm, 2W
R7751	24872471	Chip, 470 ohm, 1/16W
R7757	24872223	Chip, 22k ohm, 1/16W
R7758	24872222	Chip, 2200 ohm, 1/16W
R7760	24872103	Chip, 10k ohm, 1/16W
R7761	24872333	Chip, 33k ohm, 1/16W
R7762	24872103	Chip, 10k ohm, 1/16W
R7763	24872471	Chip, 470 ohm, 1/16W
R7764	24872331	Chip, 330 ohm, 1/16W
R7765	24323338	MF, 0.33 ohm, 2W
R7766	24872223	Chip, 22k ohm, 1/16W
R7767	24872153	Chip, 15k ohm, 1/16W
R7775	24872273	Chip, 27k ohm, 1/16W
R7776	24872472	Chip, 4700 ohm, 1/16W
R7777	24872273	Chip, 27k ohm, 1/16W
R7778	24872472	Chip, 4700 ohm, 1/16W
R7779	24872102	Chip, 1k ohm, 1/16W
R7780	24872102	Chip, 1k ohm, 1/16W
R7781	24872333	Chip, 33k ohm, 1/16W
R7793	24872153	Chip, 15k ohm, 1/16W
R7797	24872472	Chip, 4700 ohm, 1/16W
R7798	24872103	Chip, 10k ohm, 1/16W
R7799	24872222	Chip, 2200 ohm, 1/16W
R7864	24872221	Chip, 220 ohm, 1/16W
R7865	24872332	Chip, 3300 ohm, 1/16W
R7866	24872332	Chip, 3300 ohm, 1/16W
R7867	24872332	Chip, 3300 ohm, 1/16W
R7872	24872474	Chip, 470k ohm, 1/16W
R7873	24872332	Chip, 3300 ohm, 1/16W
R7880	24872221	Chip, 220 ohm, 1/16W
R7881	24872472	Chip, 4700 ohm, 1/16W

Location No.	Part No.	Description
R7882	24872103	Chip, 10k ohm, 1/16W
R7883	24872183	Chip, 18k ohm, 1/16W
R7884	24872103	Chip, 10k ohm, 1/16W
R7885	24872103	Chip, 10k ohm, 1/16W
R7886	24872104	Chip, 100k ohm, 1/16W
R7887	24872182	Chip, 1800 ohm, 1/16W
R7888	24872333	Chip, 33k ohm, 1/16W
R7889	24872333	Chip, 33k ohm, 1/16W (50HX70)
R7889	24872123	Chip, 12k ohm, 1/16W (61HX70)
R7890	24872471	Chip, 470 ohm, 1/16W
R7891	24872471	Chip, 470 ohm, 1/16W
R9501	24366470	CF, 47 ohm
R9502	24366470	CF, 47 ohm
R9503	24366681	CF, 680 ohm
R9504	24366683	CF, 68k ohm
R9505	24366393	CF, 39k ohm
R9506	24366681	CF, 680 ohm
R9601	24366121	CF, 120 ohm
R9602	24366622	CF, 6200 ohm
R9603	24366472	CF, 4700 ohm
R9604	24366272	CF, 2700 ohm
R9605	24366562	CF, 5600 ohm
R9606	24366202	CF, 2k ohm
R9607	24366470	CF, 47 ohm
R9608	24366681	CF, 680 ohm
R9609	24366683	CF, 68k ohm
R9610	24366393	CF, 39k ohm
R9611	24366681	CF, 680 ohm
R9612	24366470	CF, 47 ohm
R9613	24366270	CF, 27 ohm
R9614	24366300	CF, 30 ohm
R9701	24366103	CF, 10k ohm
R9702	24366103	CF, 10k ohm
R9703	24366103	CF, 10k ohm
R9705	24366822	CF, 8200 ohm
R9706	24366471	CF, 470 ohm
R9707	24366271	CF, 270 ohm
R9709	24366271	CF, 270 ohm
R9710	24366561	CF, 560 ohm
R9711	24366392	CF, 3900 ohm
R9712	24366272	CF, 2700 ohm
R9713	24366102	CF, 1k ohm
R9714	24366102	CF, 1k ohm
R9715	24366102	CF, 1k ohm
RA01	24872102	Chip, 1k ohm, 1/16W
RA02	24872101	Chip, 100 ohm, 1/16W
RA03	24872101	Chip, 100 ohm, 1/16W
RA04	24872102	Chip, 1k ohm, 1/16W
RA05	24872102	Chip, 1k ohm, 1/16W
RA06	24872102	Chip, 1k ohm, 1/16W
RA07	24872102	Chip, 1k ohm, 1/16W
RA08	24872102	Chip, 1k ohm, 1/16W
RA09	24872102	Chip, 1k ohm, 1/16W
RA10	24872102	Chip, 1k ohm, 1/16W
RA11	24872102	Chip, 1k ohm, 1/16W
RA12	24872102	Chip, 1k ohm, 1/16W
RA13	24872102	Chip, 1k ohm, 1/16W
RA14	24872103	Chip, 10k ohm, 1/16W
RA15	24872102	Chip, 1k ohm, 1/16W
RA16	24872102	Chip, 1k ohm, 1/16W
RA17	24872102	Chip, 1k ohm, 1/16W
RA18	24872103	Chip, 10k ohm, 1/16W

Location No.	Part No.	Description
RA19	24872102	Chip, 1k ohm, 1/16W
RA26	24872102	Chip, 1k ohm, 1/16W
RA27	24872102	Chip, 1k ohm, 1/16W
RA29	24872102	Chip, 1k ohm, 1/16W
RA30	24872102	Chip, 1k ohm, 1/16W
RA31	24872102	Chip, 1k ohm, 1/16W
RA32	24872102	Chip, 1k ohm, 1/16W
RA33	24872102	Chip, 1k ohm, 1/16W
RA34	24872102	Chip, 1k ohm, 1/16W
RA35	24872102	Chip, 1k ohm, 1/16W
RA39	24872102	Chip, 1k ohm, 1/16W
RA46	24872332	Chip, 3300 ohm, 1/16W
RA47	24872332	Chip, 3300 ohm, 1/16W
RA48	24872101	Chip, 100 ohm, 1/16W
RA49	24872332	Chip, 3300 ohm, 1/16W
RA50	24872682	Chip, 6800 ohm, 1/16W
RA51	24872151	Chip, 150 ohm, 1/16W
RA52	24872103	Chip, 10k ohm, 1/16W
RA54	24872332	Chip, 3300 ohm, 1/16W
RA55	24872102	Chip, 1k ohm, 1/16W
RA56	24872102	Chip, 1k ohm, 1/16W
RA59	24872101	Chip, 100 ohm, 1/16W
RA60	24872101	Chip, 100 ohm, 1/16W
RA61	24872103	Chip, 10k ohm, 1/16W
RA71	24366683	CF, 68k ohm
RA71	24872102	Chip, 1k ohm, 1/16W
RA72	24366223	CF, 22k ohm
RA72	24872332	Chip, 3300 ohm, 1/16W
RA73	24366103	CF, 10k ohm
RA73	24872332	Chip, 3300 ohm, 1/16W
RA74	24872153	Chip, 15k ohm, 1/16W
RA75	24872153	Chip, 15k ohm, 1/16W
RA76	24366822	CF, 8200 ohm
RA76	24872103	Chip, 10k ohm, 1/16W
RA77	24366153	CF, 15k ohm
RA77	24872103	Chip, 10k ohm, 1/16W
RA78	24366273	CF, 27k ohm
RA78	24872333	Chip, 33k ohm, 1/16W
RA79	24366823	CF, 82k ohm
RA79	24872333	Chip, 33k ohm, 1/16W
RA80	24872101	Chip, 100 ohm, 1/16W
RB01	24366271	CF, 270 ohm
RB01	24872101	Chip, 100 ohm, 1/16W
RB02	24872101	Chip, 100 ohm, 1/16W
RB03	24872101	Chip, 100 ohm, 1/16W
RB04	24366103	CF, 10k ohm
RB09	24872103	Chip, 10k ohm, 1/16W
RB10	24872101	Chip, 100 ohm, 1/16W
RB11	24872101	Chip, 100 ohm, 1/16W
RB12	24872101	Chip, 100 ohm, 1/16W
RB13	24872103	Chip, 10k ohm, 1/16W
RB14	24872153	Chip, 15k ohm, 1/16W
RB15	24366471	CF, 470 ohm
RB15	24872153	Chip, 15k ohm, 1/16W
RB16	24872332	Chip, 3300 ohm, 1/16W
RB17	24872332	Chip, 3300 ohm, 1/16W
RB19	24366470	CF, 47 ohm
RB33	24872102	Chip, 1k ohm, 1/16W
RB37	24872101	Chip, 100 ohm, 1/16W
RB38	24872101	Chip, 100 ohm, 1/16W
RB41	24366151	CF, 150 ohm
RB41	24366273	CF, 27k ohm
RB42	24366153	CF, 15k ohm
RB43	24872473	Chip, 47k ohm, 1/16W

Location No.	Part No.	Description
RB61	24872222	Chip, 2200 ohm, 1/16W
RB62	24872103	Chip, 10k ohm, 1/16W
RB65	24872392	Chip, 3900 ohm, 1/16W
RB90	24872392	Chip, 3900 ohm, 1/16W
RB91	24872473	Chip, 47k ohm, 1/16W
RB92	24872273	Chip, 27k ohm, 1/16W
RB93	24872273	Chip, 27k ohm, 1/16W
RB94	24872222	Chip, 2200 ohm, 1/16W
RB95	24872222	Chip, 2200 ohm, 1/16W
RB96	24872273	Chip, 27k ohm, 1/16W
RB97	24872273	Chip, 27k ohm, 1/16W
RB98	24872102	Chip, 1k ohm, 1/16W
RD02	24366101	CF, 100 ohm
RD03	24366101	CF, 100 ohm
RD05	24366432	CF, 4300 ohm
RD06	24366102	CF, 1k ohm
RD07	24366114	CF, 110k ohm
RD08	24366132	CF, 1300 ohm
RD09	24366473	CF, 47k ohm
RD10	24366513	CF, 51k ohm
RD11	24366392	CF, 3900 ohm
RD12	24366101	CF, 100 ohm
RD14	24366101	CF, 100 ohm
RD19	24366101	CF, 100 ohm
RD20	24366101	CF, 100 ohm
RD21	24366122	CF, 1200 ohm
RD22	24366821	CF, 820 ohm
RD23	24366152	CF, 1500 ohm
RD24	24366681	CF, 680 ohm
RH002	24872473	Chip, 47k ohm, 1/16W
RH003	24872473	Chip, 47k ohm, 1/16W
RH004	24872221	Chip, 220 ohm, 1/16W
RH005	24872221	Chip, 220 ohm, 1/16W
RH006	24872221	Chip, 220 ohm, 1/16W
RH007	24872221	Chip, 220 ohm, 1/16W
RH008	24872221	Chip, 220 ohm, 1/16W
RH009	24872103	Chip, 10k ohm, 1/16W
RH041	24872101	Chip, 100 ohm, 1/16W
RH042	24872101	Chip, 100 ohm, 1/16W
RH043	24872101	Chip, 100 ohm, 1/16W
RH044	24872101	Chip, 100 ohm, 1/16W
RH045	24872101	Chip, 100 ohm, 1/16W
RH046	24872101	Chip, 100 ohm, 1/16W
RH047	24872101	Chip, 100 ohm, 1/16W
RH048	24872101	Chip, 100 ohm, 1/16W
RH051	24872222	Chip, 2200 ohm, 1/16W
RH061	24872561	Chip, 560 ohm, 1/16W
RH062	24872102	Chip, 1k ohm, 1/16W
RH063	24872103	Chip, 10k ohm, 1/16W
RH064	24872103	Chip, 10k ohm, 1/16W
RH170	24872122	Chip, 1200 ohm, 1/16W
RH171	24872122	Chip, 1200 ohm, 1/16W
RH172	24872122	Chip, 1200 ohm, 1/16W
RH173	24872122	Chip, 1200 ohm, 1/16W
RH174	24872122	Chip, 1200 ohm, 1/16W
RH175	24872122	Chip, 1200 ohm, 1/16W
RH176	24872122	Chip, 1200 ohm, 1/16W
RH177	24872122	Chip, 1200 ohm, 1/16W
RH178	24872122	Chip, 1200 ohm, 1/16W
RH179	24872122	Chip, 1200 ohm, 1/16W
RH180	24872122	Chip, 1200 ohm, 1/16W
RH181	24872122	Chip, 1200 ohm, 1/16W
RH182	24872122	Chip, 1200 ohm, 1/16W
RH183	24872122	Chip, 1200 ohm, 1/16W

Location No.	Part No.	Description
RH184	24872122	Chip, 1200 ohm, 1/16W
RH185	24872122	Chip, 1200 ohm, 1/16W
RH186	24872122	Chip, 1200 ohm, 1/16W
RH187	24872122	Chip, 1200 ohm, 1/16W
RH188	24872122	Chip, 1200 ohm, 1/16W
RH189	24872122	Chip, 1200 ohm, 1/16W
RH190	24872122	Chip, 1200 ohm, 1/16W
RH191	24872122	Chip, 1200 ohm, 1/16W
RH192	24872122	Chip, 1200 ohm, 1/16W
RH193	24872122	Chip, 1200 ohm, 1/16W
RH194	24872122	Chip, 1200 ohm, 1/16W
RH195	24872122	Chip, 1200 ohm, 1/16W
RH196	24872122	Chip, 1200 ohm, 1/16W
RH197	24872122	Chip, 1200 ohm, 1/16W
RH198	24872122	Chip, 1200 ohm, 1/16W
RH199	24872122	Chip, 1200 ohm, 1/16W
RH201	24872472	Chip, 4700 ohm, 1/16W
RH202	24872472	Chip, 4700 ohm, 1/16W
RH205	24872472	Chip, 4700 ohm, 1/16W
RH206	24872472	Chip, 4700 ohm, 1/16W
RH207	24872331	Chip, 330 ohm, 1/16W
RH208	24872221	Chip, 220 ohm, 1/16W
RH209	24872102	Chip, 1k ohm, 1/16W
RH210	24872102	Chip, 1k ohm, 1/16W
RH211	24872473	Chip, 47k ohm, 1/16W
RH212	24872473	Chip, 47k ohm, 1/16W
RH213	24872103	Chip, 10k ohm, 1/16W
RR08	24872102	Chip, 1k ohm, 1/16W
RR09	24872102	Chip, 1k ohm, 1/16W
RR10	24872102	Chip, 1k ohm, 1/16W
RR11	24872101	Chip, 100 ohm, 1/16W
RR12	24872101	Chip, 100 ohm, 1/16W
RR13	24872101	Chip, 100 ohm, 1/16W
RR14	24872103	Chip, 10k ohm, 1/16W
RR15	24872151	Chip, 150 ohm, 1/16W
RR16	24872151	Chip, 150 ohm, 1/16W
RR17	24872151	Chip, 150 ohm, 1/16W
RR18	24872102	Chip, 1k ohm, 1/16W
RR31	24872101	Chip, 100 ohm, 1/16W
RR52	24872102	Chip, 1k ohm, 1/16W
RR53	24872471	Chip, 470 ohm, 1/16W
RR54	24872102	Chip, 1k ohm, 1/16W
RR55	24872471	Chip, 470 ohm, 1/16W
RR56	24872102	Chip, 1k ohm, 1/16W
RR57	24872471	Chip, 470 ohm, 1/16W
RR61	24872222	Chip, 2200 ohm, 1/16W
RR62	24872222	Chip, 2200 ohm, 1/16W
RR63	24872222	Chip, 2200 ohm, 1/16W
RS02	24366472	CF, 4700 ohm
RS04	24366102	CF, 1k ohm
RS06	24366102	CF, 1k ohm
RS07	24366103	CF, 10k ohm
RS08	24366103	CF, 10k ohm
RS09	24366102	CF, 1k ohm
RS10	24366102	CF, 1k ohm
RS12	24366103	CF, 10k ohm
RS21	24366104	CF, 100k ohm
RS22	24366104	CF, 100k ohm
RS25	24366223	CF, 22k ohm
RS26	24366223	CF, 22k ohm
RS27	24366471	CF, 470 ohm
RS28	24366471	CF, 470 ohm
RS29	24366104	CF, 100k ohm
RS30	24366104	CF, 100k ohm

Location No.	Part No.	Description
RS31	24366103	CF, 10k ohm
RS32	24366104	CF, 100k ohm
RS33	24366222	CF, 2200 ohm
RS34	24366222	CF, 2200 ohm
RS35	24366103	CF, 10k ohm
RS36	24366103	CF, 10k ohm
RS37	24366101	CF, 100 ohm
RS40	24366101	CF, 100 ohm
RS42	24366101	CF, 100 ohm
RS48	24366101	CF, 100 ohm
RS49	24366103	CF, 10k ohm
RS51	24366103	CF, 10k ohm
RS52	24366103	CF, 10k ohm
RS53	24366103	CF, 10k ohm
RS54	24366103	CF, 10k ohm
RV01	24366472	CF, 4700 ohm
RV03	24366101	CF, 100 ohm
RV04	24366101	CF, 100 ohm
RV11	24366100	CF, 10 ohm
RV12	24366100	CF, 10 ohm
RV13	24366100	CF, 10 ohm
RV15	24366222	CF, 2200 ohm
RV20	24366750	CF, 75 ohm
RV21	24366750	CF, 75 ohm
RV22	24366750	CF, 75 ohm
RV23	24366332	CF, 3300 ohm
RV24	24366750	CF, 75 ohm
RV25	24366750	CF, 75 ohm
RV26	24366750	CF, 75 ohm
RV28	24366472	CF, 4700 ohm
RV29	24366472	CF, 4700 ohm
RV31	24366332	CF, 3300 ohm
RV31	24872101	Chip, 100 ohm, 1/16W
RV32	24366750	CF, 75 ohm
RV32	24872101	Chip, 100 ohm, 1/16W
RV40	24366223	CF, 22k ohm
RV41	24366123	CF, 12k ohm
RV42	24366561	CF, 560 ohm
RV43	24366471	CF, 470 ohm
RV44	24366471	CF, 470 ohm
RV45	24366221	CF, 220 ohm
RV46	24366102	CF, 1k ohm
RV47	24366102	CF, 1k ohm
RV48	24366911	CF, 910 ohm
RV49	24366102	CF, 1k ohm
RV60	24366682	CF, 6800 ohm
RV63	24366102	CF, 1k ohm
RV64	24366750	CF, 75 ohm
RV65	24366750	CF, 75 ohm
RV67	24366750	CF, 75 ohm
RV74	24366750	CF, 75 ohm
RV81	24366472	CF, 4700 ohm
RV83	24366332	CF, 3300 ohm
RV84	24366750	CF, 75 ohm
RV85	24552181	OMF, 180 ohm, 1/2W
RV89	24366680	CF, 68 ohm
RV93	24366101	CF, 100 ohm
RV97	24366221	CF, 220 ohm
RV117	24366750	CF, 75 ohm
RV118	24366750	CF, 75 ohm
RV119	24366750	CF, 75 ohm
RV124	24366392	CF, 3900 ohm
RV125	24366123	CF, 12k ohm
RV126	24366274	CF, 270k ohm

Location No.	Part No.	Description
RV127	24366331	CF, 330 ohm
RV128	24366472	CF, 4700 ohm
RV140	24366103	CF, 10k ohm
RV141	24366302	CF, 3k ohm
RV142	24366103	CF, 10k ohm
RV143	24366103	CF, 10k ohm
RV167	24872102	Chip, 1k ohm, 1/16W
RV169	24872102	Chip, 1k ohm, 1/16W
RV178	24872152	Chip, 1500 ohm, 1/16W
RV179	24872472	Chip, 4700 ohm, 1/16W
RV180	24872472	Chip, 4700 ohm, 1/16W
RV181	24872101	Chip, 100 ohm, 1/16W
RV182	24872101	Chip, 100 ohm, 1/16W
RV183	24872101	Chip, 100 ohm, 1/16W
RV184	24872182	Chip, 1800 ohm, 1/16W
RV185	24872182	Chip, 1800 ohm, 1/16W
RV186	24872182	Chip, 1800 ohm, 1/16W
RV510	24011102	Chip, 1k ohm, 1/20W
RV511	24011472	Chip, 4700 ohm, 1/20W
RV520	24011472	Chip, 4700 ohm, 1/20W
RV521	24011472	Chip, 4700 ohm, 1/20W
RV522	24011472	Chip, 4700 ohm, 1/20W
RV523	24011101	Chip, 100 ohm, 1/20W
RV525	24011101	Chip, 100 ohm, 1/20W
RV527	24011101	Chip, 100 ohm, 1/20W
RV529	24011472	Chip, 4700 ohm, 1/20W
RV530	24011472	Chip, 4700 ohm, 1/20W
RV531	24011472	Chip, 4700 ohm, 1/20W
RV532	24011101	Chip, 100 ohm, 1/20W
RV533	24011101	Chip, 100 ohm, 1/20W
RV534	24011101	Chip, 100 ohm, 1/20W
RV544	24011103	Chip, 10k ohm, 1/20W
RV545	24011103	Chip, 10k ohm, 1/20W
RV546	24011103	Chip, 10k ohm, 1/20W
RW10	24872102	Chip, 1k ohm, 1/16W
RW30	24872102	Chip, 1k ohm, 1/16W
RW40	24366182	CF, 1800 ohm
RW45	24366103	CF, 10k ohm
RX11	24366151	CF, 150 ohm (50HX70/61HX70)
RX101	24011101	Chip, 100 ohm, 1/20W
RX102	24011222	Chip, 2200 ohm, 1/20W
RX103	24011123	Chip, 12k ohm, 1/20W
RX104	24011562	Chip, 5600 ohm, 1/20W
RX105	24872331	Chip, 330 ohm, 1/16W
RX106	24011151	Chip, 150 ohm, 1/20W
RX107	24011331	Chip, 330 ohm, 1/20W
RX108	24011123	Chip, 12k ohm, 1/20W
RX109	24011562	Chip, 5600 ohm, 1/20W
RX110	24872431	Chip, 430 ohm, 1/16W
RX111	24011470	Chip, 47 ohm, 1/20W
RX112	24871681	Chip, 680 ohm, 1/8W
RX113	24011121	Chip, 120 ohm, 1/20W
RX114	24011471	Chip, 470 ohm, 1/20W
RX115	24011272	Chip, 2700 ohm, 1/20W
RX116	24872102	Chip, 1k ohm, 1/16W
RX119	24011102	Chip, 1k ohm, 1/20W
RX121	24871471	Chip, 470 ohm, 1/8W
RX122	24011471	Chip, 470 ohm, 1/20W
RX123	24872471	Chip, 470 ohm, 1/16W
RX124	24011100	Chip, 10 ohm, 1/20W
RX131	24011101	Chip, 100 ohm, 1/20W
RX132	24011222	Chip, 2200 ohm, 1/20W
RX133	24011123	Chip, 12k ohm, 1/20W

Location No.	Part No.	Description
RX134	24011562	Chip, 5600 ohm, 1/20W
RX135	24872331	Chip, 330 ohm, 1/16W
RX136	24011151	Chip, 150 ohm, 1/20W
RX137	24011331	Chip, 330 ohm, 1/20W
RX138	24011123	Chip, 12k ohm, 1/20W
RX139	24011562	Chip, 5600 ohm, 1/20W
RX140	24872431	Chip, 430 ohm, 1/16W
RX141	24011470	Chip, 47 ohm, 1/20W
RX142	24871681	Chip, 680 ohm, 1/8W
RX143	24011121	Chip, 120 ohm, 1/20W
RX144	24011471	Chip, 470 ohm, 1/20W
RX146	24872102	Chip, 1k ohm, 1/16W
RX149	24011102	Chip, 1k ohm, 1/20W
RX151	24011102	Chip, 1k ohm, 1/20W
RX152	24011471	Chip, 470 ohm, 1/20W
RX153	24872331	Chip, 330 ohm, 1/16W
RX154	24011100	Chip, 10 ohm, 1/20W
RX161	24011101	Chip, 100 ohm, 1/20W
RX162	24011222	Chip, 2200 ohm, 1/20W
RX163	24011123	Chip, 12k ohm, 1/20W
RX164	24011562	Chip, 5600 ohm, 1/20W
RX165	24872331	Chip, 330 ohm, 1/16W
RX166	24011151	Chip, 150 ohm, 1/20W
RX167	24011331	Chip, 330 ohm, 1/20W
RX168	24011123	Chip, 12k ohm, 1/20W
RX169	24011562	Chip, 5600 ohm, 1/20W
RX170	24872431	Chip, 430 ohm, 1/16W
RX171	24011470	Chip, 47 ohm, 1/20W
RX172	24871681	Chip, 680 ohm, 1/8W
RX173	24011121	Chip, 120 ohm, 1/20W
RX174	24011471	Chip, 470 ohm, 1/20W
RX176	24872102	Chip, 1k ohm, 1/16W
RX179	24011102	Chip, 1k ohm, 1/20W
RX181	24011102	Chip, 1k ohm, 1/20W
RX182	24011471	Chip, 470 ohm, 1/20W
RX183	24872331	Chip, 330 ohm, 1/16W
RX184	24011100	Chip, 10 ohm, 1/20W
RX191	24011102	Chip, 1k ohm, 1/20W
RX192	24011100	Chip, 10 ohm, 1/20W
RX193	24871331	Chip, 330 ohm, 1/8W
RX195	24011100	Chip, 10 ohm, 1/20W
RX196	24011100	Chip, 10 ohm, 1/20W
RX199	24011101	Chip, 100 ohm, 1/20W
RX201	24011101	Chip, 100 ohm, 1/20W
RX202	24011221	Chip, 220 ohm, 1/20W
RX203	24011102	Chip, 1k ohm, 1/20W
RX204	24011101	Chip, 100 ohm, 1/20W
RX205	24011102	Chip, 1k ohm, 1/20W
RX211	24871100	Chip, 10 ohm, 1/8W
RX219	24011100	Chip, 10 ohm, 1/20W
RX220	24011562	Chip, 5600 ohm, 1/20W
RX221	24011272	Chip, 2700 ohm, 1/20W
RX224	24011151	Chip, 150 ohm, 1/20W
RX225	24011121	Chip, 120 ohm, 1/20W
RX227	24011100	Chip, 10 ohm, 1/20W
RX228	24011100	Chip, 10 ohm, 1/20W
RX229	24011100	Chip, 10 ohm, 1/20W
RX241	24011152	Chip, 1500 ohm, 1/20W
RX244	24011471	Chip, 470 ohm, 1/20W
RX245	24011681	Chip, 680 ohm, 1/20W
RX246	24011152	Chip, 1500 ohm, 1/20W
RX247	24011100	Chip, 10 ohm, 1/20W
RX248	24011100	Chip, 10 ohm, 1/20W
RX249	24011100	Chip, 10 ohm, 1/20W



Location No.	Part No.	Description
RX301	24011103	Chip, 10k ohm, 1/20W
RX302	24011103	Chip, 10k ohm, 1/20W
RX303	24011103	Chip, 10k ohm, 1/20W
RX304	24011103	Chip, 10k ohm, 1/20W
RX306	24011100	Chip, 10 ohm, 1/20W
RX307	24011101	Chip, 100 ohm, 1/20W
RX308	24011100	Chip, 10 ohm, 1/20W
RX309	24011103	Chip, 10k ohm, 1/20W
RX310	24011100	Chip, 10 ohm, 1/20W
RX311	24011100	Chip, 10 ohm, 1/20W
RX313	24011100	Chip, 10 ohm, 1/20W
RX317	24011100	Chip, 10 ohm, 1/20W
RX319	24011100	Chip, 10 ohm, 1/20W
RX320	24011103	Chip, 10k ohm, 1/20W
RX321	24011103	Chip, 10k ohm, 1/20W
RX322	24011103	Chip, 10k ohm, 1/20W
RX323	24011103	Chip, 10k ohm, 1/20W
RX326	24011100	Chip, 10 ohm, 1/20W
RX328	24011103	Chip, 10k ohm, 1/20W
RX330	24011100	Chip, 10 ohm, 1/20W
RX331	24011100	Chip, 10 ohm, 1/20W
RX332	24011100	Chip, 10 ohm, 1/20W
RX333	24011100	Chip, 10 ohm, 1/20W
RX334	24011100	Chip, 10 ohm, 1/20W
RX335	24011100	Chip, 10 ohm, 1/20W
RX336	24011103	Chip, 10k ohm, 1/20W
RX337	24011100	Chip, 10 ohm, 1/20W
RX338	24011100	Chip, 10 ohm, 1/20W
RX339	24011100	Chip, 10 ohm, 1/20W
RX340	24019439	Chip, 47 ohm, 1/16W
RX341	24019439	Chip, 47 ohm, 1/16W
RX342	24019439	Chip, 47 ohm, 1/16W
RX343	24019439	Chip, 47 ohm, 1/16W
RX344	24011470	Chip, 47 ohm, 1/20W
RX345	24019439	Chip, 47 ohm, 1/16W
RX346	24019439	Chip, 47 ohm, 1/16W
RX347	24019439	Chip, 47 ohm, 1/16W
RX348	24019439	Chip, 47 ohm, 1/16W
RX349	24019439	Chip, 47 ohm, 1/16W
RX350	24019439	Chip, 47 ohm, 1/16W
RX351	24019439	Chip, 47 ohm, 1/16W
RX352	24019439	Chip, 47 ohm, 1/16W
RX357	24011511	Chip, 510 ohm, 1/20W
RX358	24011470	Chip, 47 ohm, 1/20W
RX360	24011101	Chip, 100 ohm, 1/20W
RX363	24011511	Chip, 510 ohm, 1/20W
RX364	24011470	Chip, 47 ohm, 1/20W
RX366	24011101	Chip, 100 ohm, 1/20W
RX370	24011181	Chip, 180 ohm, 1/20W
RX371	24011220	Chip, 22 ohm, 1/20W
RX372	24011272	Chip, 2700 ohm, 1/20W
RX373	24011272	Chip, 2700 ohm, 1/20W
RX374	24011122	Chip, 1200 ohm, 1/20W
RX375	24011181	Chip, 180 ohm, 1/20W
RX376	24011220	Chip, 22 ohm, 1/20W
RX377	24011272	Chip, 2700 ohm, 1/20W
RX378	24011272	Chip, 2700 ohm, 1/20W
RX379	24011122	Chip, 1200 ohm, 1/20W
RX380	24011181	Chip, 180 ohm, 1/20W
RX381	24011220	Chip, 22 ohm, 1/20W
RX382	24011272	Chip, 2700 ohm, 1/20W
RX383	24011272	Chip, 2700 ohm, 1/20W
RX384	24011122	Chip, 1200 ohm, 1/20W
RX399	24011100	Chip, 10 ohm, 1/20W

Location No.	Part No.	Description
RX403	24011101	Chip, 100 ohm, 1/20W
RX404	24871101	Chip, 100 ohm, 1/8W
RX405	24011101	Chip, 100 ohm, 1/20W
RX406	24871471	Chip, 470 ohm, 1/8W
RX520	24011100	Chip, 10 ohm, 1/20W
RX521	24011222	Chip, 2200 ohm, 1/20W
RX522	24011121	Chip, 120 ohm, 1/20W
RX523	24011681	Chip, 680 ohm, 1/20W
RX524	24871681	Chip, 680 ohm, 1/8W
RX525	24000445	Chip Jumper, 1680 Type
RX530	24011100	Chip, 10 ohm, 1/20W
RX531	24011222	Chip, 2200 ohm, 1/20W
RX532	24011121	Chip, 120 ohm, 1/20W
RX533	24011471	Chip, 470 ohm, 1/20W
RX534	24871681	Chip, 680 ohm, 1/8W
RX535	24000445	Chip Jumper, 1680 Type
RX540	24011100	Chip, 10 ohm, 1/20W
RX541	24011222	Chip, 2200 ohm, 1/20W
RX542	24011121	Chip, 120 ohm, 1/20W
RX543	24011471	Chip, 470 ohm, 1/20W
RX544	24871681	Chip, 680 ohm, 1/8W
RX545	24000445	Chip Jumper, 1680 Type
RX601	24011100	Chip, 10 ohm, 1/20W
RX811	24011471	Chip, 470 ohm, 1/20W
RX812	24011471	Chip, 470 ohm, 1/20W
RX821	24011151	Chip, 150 ohm, 1/20W
RX822	24011151	Chip, 150 ohm, 1/20W
RX823	24011151	Chip, 150 ohm, 1/20W
RX824	24011101	Chip, 100 ohm, 1/20W
RX825	24011101	Chip, 100 ohm, 1/20W
RX826	24011681	Chip, 680 ohm, 1/20W
RX827	24011101	Chip, 100 ohm, 1/20W
RX829	24011102	Chip, 1k ohm, 1/20W
RX831	24000445	Chip Jumper, 1680 Type
RX832	24011100	Chip, 10 ohm, 1/20W
RX833	24011100	Chip, 10 ohm, 1/20W
RX844	24011101	Chip, 100 ohm, 1/20W
RX845	24011101	Chip, 100 ohm, 1/20W
RX890	24011682	Chip, 6800 ohm, 1/20W
RX891	24011103	Chip, 10k ohm, 1/20W
RX892	24011472	Chip, 4700 ohm, 1/20W
RX893	24011682	Chip, 6800 ohm, 1/20W
RX894	24011103	Chip, 10k ohm, 1/20W
RX895	24011472	Chip, 4700 ohm, 1/20W
RX896	24011101	Chip, 100 ohm, 1/20W
RX897	24000445	Chip Jumper, 1680 Type
RX899	24011101	Chip, 100 ohm, 1/20W
RX924	24011223	Chip, 22k ohm, 1/20W
RX934	24011223	Chip, 22k ohm, 1/20W
RX942	24011103	Chip, 10k ohm, 1/20W
RX944	24011223	Chip, 22k ohm, 1/20W
RY01	24011102	Chip, 1k ohm, 1/20W
RY02	24011471	Chip, 470 ohm, 1/20W
RY09	24011102	Chip, 1k ohm, 1/20W
RY10	24011102	Chip, 1k ohm, 1/20W
RY20	24011101	Chip, 100 ohm, 1/20W
RY21	24011101	Chip, 100 ohm, 1/20W
RY22	24011153	Chip, 15k ohm, 1/20W
RY23	24011332	Chip, 3300 ohm, 1/20W
RY24	24011102	Chip, 1k ohm, 1/20W
RY25	24011102	Chip, 1k ohm, 1/20W
RY26	24011331	Chip, 330 ohm, 1/20W
RY27	24011330	Chip, 33 ohm, 1/20W
RY28	24011153	Chip, 15k ohm, 1/20W

Location No.	Part No.	Description
RY31	24011101	Chip, 100 ohm, 1/20W
RY32	24011330	Chip, 33 ohm, 1/20W
RY33	24011330	Chip, 33 ohm, 1/20W
RY68	24011152	Chip, 1500 ohm, 1/20W
RY69	24011682	Chip, 6800 ohm, 1/20W
RY79	24011103	Chip, 10k ohm, 1/20W
RY80	24366331	CF, 330 ohm
RY81	24366101	CF, 100 ohm
RY82	24366102	CF, 1k ohm
RY87	24366100	CF, 10 ohm
RY105	24011331	Chip, 330 ohm, 1/20W
RY106	24011101	Chip, 100 ohm, 1/20W
RY109	24011331	Chip, 330 ohm, 1/20W
RY110	24011102	Chip, 1k ohm, 1/20W
RY113	24011331	Chip, 330 ohm, 1/20W
RY114	24011102	Chip, 1k ohm, 1/20W
RY120	24011821	Chip, 820 ohm, 1/20W
RY121	24011681	Chip, 680 ohm, 1/20W
RY122	24871471	Chip, 470 ohm, 1/8W
RY123	24011561	Chip, 560 ohm, 1/20W
RY124	24011272	Chip, 2700 ohm, 1/20W
RY125	24011152	Chip, 1500 ohm, 1/20W
RY126	24011561	Chip, 560 ohm, 1/20W
RY127	24011272	Chip, 2700 ohm, 1/20W
RY128	24011152	Chip, 1500 ohm, 1/20W
RY129	24011222	Chip, 2200 ohm, 1/20W
RY131	24011101	Chip, 100 ohm, 1/20W
RY132	24011101	Chip, 100 ohm, 1/20W
RY133	24011101	Chip, 100 ohm, 1/20W
RY134	24011101	Chip, 100 ohm, 1/20W
RY135	24011101	Chip, 100 ohm, 1/20W
RY136	24011101	Chip, 100 ohm, 1/20W
RY138	24011331	Chip, 330 ohm, 1/20W
RY139	24011222	Chip, 2200 ohm, 1/20W
RY140	24011392	Chip, 3900 ohm, 1/20W
RY150	24011102	Chip, 1k ohm, 1/20W
RY151	24011471	Chip, 470 ohm, 1/20W
RY152	24011102	Chip, 1k ohm, 1/20W
RY154	24011473	Chip, 47k ohm, 1/20W
RY155	24011102	Chip, 1k ohm, 1/20W
RY156	24011182	Chip, 1800 ohm, 1/20W
RY157	24011102	Chip, 1k ohm, 1/20W
RY190	24011103	Chip, 10k ohm, 1/20W
RY220	24011821	Chip, 820 ohm, 1/20W
RY221	24011681	Chip, 680 ohm, 1/20W
RY222	24871471	Chip, 470 ohm, 1/8W
RY223	24011561	Chip, 560 ohm, 1/20W
RY224	24011272	Chip, 2700 ohm, 1/20W
RY225	24011102	Chip, 1k ohm, 1/20W
RY226	24011561	Chip, 560 ohm, 1/20W
RY227	24011272	Chip, 2700 ohm, 1/20W
RY228	24011102	Chip, 1k ohm, 1/20W
RY230	24011101	Chip, 100 ohm, 1/20W
RY231	24011101	Chip, 100 ohm, 1/20W
RY232	24011101	Chip, 100 ohm, 1/20W
RY233	24011101	Chip, 100 ohm, 1/20W
RY256	24011101	Chip, 100 ohm, 1/20W
RY257	24011101	Chip, 100 ohm, 1/20W
RY300	24011152	Chip, 1500 ohm, 1/20W
RY301	24011221	Chip, 220 ohm, 1/20W
RY302	24011102	Chip, 1k ohm, 1/20W
RY303	24011273	Chip, 27k ohm, 1/20W
RY304	24011102	Chip, 1k ohm, 1/20W
RY305	24011331	Chip, 330 ohm, 1/20W

Location No.	Part No.	Description
RY306	24011152	Chip, 1500 ohm, 1/20W
RY307	24011102	Chip, 1k ohm, 1/20W
RY308	24011181	Chip, 180 ohm, 1/20W
RY310	24011103	Chip, 10k ohm, 1/20W
RY311	24011103	Chip, 10k ohm, 1/20W
RY312	24011103	Chip, 10k ohm, 1/20W
RY313	24011103	Chip, 10k ohm, 1/20W
RY330	24011182	Chip, 1800 ohm, 1/20W
RY331	24011221	Chip, 220 ohm, 1/20W
RY332	24000445	Chip Jumper, 1680 Type
RY333	24011273	Chip, 27k ohm, 1/20W
RY334	24011331	Chip, 330 ohm, 1/20W
RY335	24011331	Chip, 330 ohm, 1/20W
RY336	24011122	Chip, 1200 ohm, 1/20W
RY337	24011102	Chip, 1k ohm, 1/20W
RY338	24011181	Chip, 180 ohm, 1/20W
RY339	24011155	Chip, 1.5M ohm, 1/20W
RY340	24011152	Chip, 1500 ohm, 1/20W
RY341	24011221	Chip, 220 ohm, 1/20W
RY342	24011102	Chip, 1k ohm, 1/20W
RY343	24011273	Chip, 27k ohm, 1/20W
RY344	24011102	Chip, 1k ohm, 1/20W
RY345	24011331	Chip, 330 ohm, 1/20W
RY346	24011152	Chip, 1500 ohm, 1/20W
RY347	24011102	Chip, 1k ohm, 1/20W
RY348	24011181	Chip, 180 ohm, 1/20W
RY349	24011155	Chip, 1.5M ohm, 1/20W
RY385	24011103	Chip, 10k ohm, 1/20W
RY386	24011152	Chip, 1500 ohm, 1/20W
RY388	24011622	Chip, 6200 ohm, 1/20W
RY400	24011103	Chip, 10k ohm, 1/20W
RY401	24011103	Chip, 10k ohm, 1/20W
RY426	24011103	Chip, 10k ohm, 1/20W
RY440	24011103	Chip, 10k ohm, 1/20W
RY510	24011102	Chip, 1k ohm, 1/20W
RY511	24011472	Chip, 4700 ohm, 1/20W
RY520	24011472	Chip, 4700 ohm, 1/20W
RY521	24011472	Chip, 4700 ohm, 1/20W
RY522	24011472	Chip, 4700 ohm, 1/20W
RY523	24011101	Chip, 100 ohm, 1/20W
RY525	24011101	Chip, 100 ohm, 1/20W
RY527	24011101	Chip, 100 ohm, 1/20W
RY529	24011472	Chip, 4700 ohm, 1/20W
RY530	24011472	Chip, 4700 ohm, 1/20W
RY531	24011472	Chip, 4700 ohm, 1/20W
RY532	24011101	Chip, 100 ohm, 1/20W
RY533	24011101	Chip, 100 ohm, 1/20W
RY534	24011101	Chip, 100 ohm, 1/20W
RY544	24011103	Chip, 10k ohm, 1/20W
RY545	24011103	Chip, 10k ohm, 1/20W
RY546	24011103	Chip, 10k ohm, 1/20W
RY550	24011100	Chip, 10 ohm, 1/20W
RY551	24011100	Chip, 10 ohm, 1/20W
RY671	24011103	Chip, 10k ohm, 1/20W
RY673	24011103	Chip, 10k ohm, 1/20W
RY674	24011103	Chip, 10k ohm, 1/20W
RY675	24011103	Chip, 10k ohm, 1/20W
RY676	24011103	Chip, 10k ohm, 1/20W
RY677	24011103	Chip, 10k ohm, 1/20W
RY703	24011103	Chip, 10k ohm, 1/20W
RY721	24011152	Chip, 1500 ohm, 1/20W
RY722	24011152	Chip, 1500 ohm, 1/20W
RY723	24011152	Chip, 1500 ohm, 1/20W
RY741	24011101	Chip, 100 ohm, 1/20W

Location No.	Part No.	Description
RY742	24011101	Chip, 100 ohm, 1/20W
RY743	24011101	Chip, 100 ohm, 1/20W
RY747	24011102	Chip, 1k ohm, 1/20W
RY751	24011222	Chip, 2200 ohm, 1/20W
RY752	24011222	Chip, 2200 ohm, 1/20W
RY753	24011222	Chip, 2200 ohm, 1/20W
RY760	24011152	Chip, 1500 ohm, 1/20W
RY761	24011682	Chip, 6800 ohm, 1/20W
RY762	24011103	Chip, 10k ohm, 1/20W
RY764	24011102	Chip, 1k ohm, 1/20W
RY767	24011101	Chip, 100 ohm, 1/20W
RY771	24011101	Chip, 100 ohm, 1/20W
RY773	24011101	Chip, 100 ohm, 1/20W
RY775	24011101	Chip, 100 ohm, 1/20W
RY804	24011333	Chip, 33k ohm, 1/20W
RY805	24011153	Chip, 15k ohm, 1/20W
RY806	24011101	Chip, 100 ohm, 1/20W
RY808	24011100	Chip, 10 ohm, 1/20W
RY810	24011101	Chip, 100 ohm, 1/20W
RY909	24011103	Chip, 10k ohm, 1/20W
RZ01	24011330	Chip, 33 ohm, 1/20W
RZ02	24011152	Chip, 1500 ohm, 1/20W
RZ03	24011682	Chip, 6800 ohm, 1/20W
RZ04	24011392	Chip, 3900 ohm, 1/20W
RZ05	24011122	Chip, 1200 ohm, 1/20W
RZ06	24011431	Chip, 430 ohm, 1/20W
RZ07	24871331	Chip, 330 ohm, 1/8W
RZ08	24011151	Chip, 150 ohm, 1/20W
RZ09	24011330	Chip, 33 ohm, 1/20W
RZ10	24011102	Chip, 1k ohm, 1/20W
RZ11	24011561	Chip, 560 ohm, 1/20W
RZ12	24011182	Chip, 1800 ohm, 1/20W
RZ13	24011392	Chip, 3900 ohm, 1/20W
RZ14	24011123	Chip, 12k ohm, 1/20W
RZ15	24011151	Chip, 150 ohm, 1/20W
RZ16	24011102	Chip, 1k ohm, 1/20W
RZ17	24871181	Chip, 180 ohm, 1/8W
RZ18	24011121	Chip, 120 ohm, 1/20W
RZ19	24011471	Chip, 470 ohm, 1/20W
RZ21	24011271	Chip, 270 ohm, 1/20W
RZ26	24011102	Chip, 1k ohm, 1/20W
RZ28	24011102	Chip, 1k ohm, 1/20W
RZ30	24000445	Chip Jumper, 1680 Type
RZ31	24011104	Chip, 100k ohm, 1/20W
RZ32	24000445	Chip Jumper, 1680 Type
RZ33	24011101	Chip, 100 ohm, 1/20W
RZ34	24011101	Chip, 100 ohm, 1/20W
RZ49	24011102	Chip, 1k ohm, 1/20W
RZ60	24011102	Chip, 1k ohm, 1/20W
RZ64	24011221	Chip, 220 ohm, 1/20W
RZ65	24011224	Chip, 220k ohm, 1/20W
RZ66	24011223	Chip, 22k ohm, 1/20W
RZ67	24011102	Chip, 1k ohm, 1/20W
RZ68	24011222	Chip, 2200 ohm, 1/20W
RZ69	24011153	Chip, 15k ohm, 1/20W
RZ70	24011472	Chip, 4700 ohm, 1/20W
RZ71	24011101	Chip, 100 ohm, 1/20W
RZ72	24011103	Chip, 10k ohm, 1/20W
RZ73	24011103	Chip, 10k ohm, 1/20W
RZ74	24872229	Chip, 2.2 ohm, 1/16W
RZ101	24011101	Chip, 100 ohm, 1/20W
RZ102	24011221	Chip, 220 ohm, 1/20W
RZ103	24011102	Chip, 1k ohm, 1/20W
RZ104	24011102	Chip, 1k ohm, 1/20W

Location No.	Part No.	Description
RZ105	24011821	Chip, 820 ohm, 1/20W
RZ106	24000445	Chip Jumper, 1680 Type
RZ107	24011751	Chip, 750 ohm, 1/20W
RZ109	24011102	Chip, 1k ohm, 1/20W
RZ110	24011152	Chip, 1500 ohm, 1/20W
RZ243	24011220	Chip, 22 ohm, 1/20W
RZ244	24011152	Chip, 1500 ohm, 1/20W
RZ245	24011220	Chip, 22 ohm, 1/20W
RZ246	24011152	Chip, 1500 ohm, 1/20W
RZ265	24011472	Chip, 4700 ohm, 1/20W
RZ266	24011103	Chip, 10k ohm, 1/20W
RZ800	24871330	Chip, 33 ohm, 1/8W
RZ802	24871330	Chip, 33 ohm, 1/8W
RZ804	24011330	Chip, 33 ohm, 1/20W
<b>COILS &amp; TRANSFORMERS</b>		
L101	23289680	Coil, Peaking, TRF4680AF
L103	23289470	Coil, Peaking, TRF4470AF
L111	23289680	Coil, Peaking, TRF4680AF
L113	23289220	Coil, Peaking, TRF4220AF
L115	23103852	Coil, Filter, TEM2028AH
L121	23238562	Coil, Peaking, TRF4109AJ
L122	23238562	Coil, Peaking, TRF4109AJ
L301	23237975	Coil, Peaking, TRF4101AC
L302	23248073	Coil, Choke, TLN3299D
L303	23248073	Coil, Choke, TLN3299D
L304	23103859	Coil (Ferrite Bead), TEM2011
L402	23248243	Coil, Choke, TLN3496AH
△L403	23233995	Coil, Linearity, TLN2215AG
L406	23289560	Coil, Peaking, TRF4560AF
△L408	23248248	Coil, Choke, TLN3500AH
L409	23103775	Coil (Ferrite Bead), TEM2014
L411	23103775	Coil (Ferrite Bead), TEM2014
L412	23103880	Coil (Ferrite Bead), TEM2011Y
L413	23103880	Coil (Ferrite Bead), TEM2011Y
L452	23248223	Coil, Choke, TLN3451AH
△L462	23231300	Deflection Yoke, TDY707MS
△L463	23231300	Deflection Yoke, TDY707MS
△L464	23231300	Deflection Yoke, TDY707MS
L472	23102457	Magnet, MAG-1102
L473	23102457	Magnet, MAG-1102
L474	23102457	Magnet, MAG-1102
L502	23289120	Coil, Peaking, TRF4120AF
L503	23289120	Coil, Peaking, TRF4120AF
L504	23103827	Chip (Ferrite Bead), TEM2120M
L506	23103827	Chip (Ferrite Bead), TEM2120M
L518	23245834	Chip, Inductor, TRF4220CB
L701	23237987	Coil, Peaking, TRF4100AC
L702	23261974	Coil, Choke, HC5-035
L704	23103859	Coil (Ferrite Bead), TEM2011
L705	23103859	Coil (Ferrite Bead), TEM2011
L764	23103859	Coil (Ferrite Bead), TEM2011
L765	23103859	Coil (Ferrite Bead), TEM2011
L766	23261974	Coil, Choke, HC5-035
L769	23237987	Coil, Peaking, TRF4100AC
L780	23237987	Coil, Peaking, TRF4100AC
L781	23103859	Coil (Ferrite Bead), TEM2011
L782	23103859	Coil (Ferrite Bead), TEM2011
L783	23261974	Coil, Choke, HC5-035
L851	23103880	Coil (Ferrite Bead), TEM2011Y
L852	23103880	Coil (Ferrite Bead), TEM2011Y
L853	23289842	Coil, Peaking, TRF4220AT

Location No.	Part No.	Description
L861	23103880	Coil (Ferrite Bead), TEM2011Y
L862	23103859	Coil (Ferrite Bead), TEM2011
L881	23103880	Coil (Ferrite Bead), TEM2011Y
L882	23103880	Coil (Ferrite Bead), TEM2011Y
L885	23248073	Coil, Choke, TLN3299D
L888	23103880	Coil (Ferrite Bead), TEM2011Y
L889	23103880	Coil (Ferrite Bead), TEM2011Y
L891	23103880	Coil (Ferrite Bead), TEM2011Y
L892	23103880	Coil (Ferrite Bead), TEM2011Y
L893	23103880	Coil (Ferrite Bead), TEM2011Y
L894	23103880	Coil (Ferrite Bead), TEM2011Y
L895	70211045	Coil, Choke, 0.02mH
L896	70211045	Coil, Choke, 0.02mH
L897	23248073	Coil, Choke, TLN3299D
L898	23248073	Coil, Choke, TLN3299D
L902	23238714	Coil, Peaking, TRF4100AJ
L903	23289680	Coil, Peaking, TRF4680AF
L911	23237987	Coil, Peaking, TRF4100AC
L912	23289680	Coil, Peaking, TRF4680AF
L913	23238714	Coil, Peaking, TRF4100AJ
L915	23289100	Coil, Peaking, TRF4100AF
L922	23289680	Coil, Peaking, TRF4680AF
L923	23238714	Coil, Peaking, TRF4100AJ
L925	23289100	Coil, Peaking, TRF4100AF
L961	23238714	Coil, Peaking, TRF4100AJ
L962	23289100	Coil, Peaking, TRF4100AF
L963	23237975	Coil, Peaking, TRF4101AC
L7701	23103859	Coil (Ferrite Bead), TEM2011
L7702	23103859	Coil (Ferrite Bead), TEM2011
L7703	23103859	Coil (Ferrite Bead), TEM2011
L7704	23103859	Coil (Ferrite Bead), TEM2011
L7705	23103859	Coil (Ferrite Bead), TEM2011
L7706	23103859	Coil (Ferrite Bead), TEM2011
L7710	23248195	Coil, Choke, TLN3441AT
L7711	23248195	Coil, Choke, TLN3441AT
LA22	23245830	Chip, Inductor, TRF4100CB
LA49	23245830	Chip, Inductor, TRF4100CB
LB42	23245830	Chip, Inductor, TRF4100CB
LH001	23103864	Coil (Ferrite Bead), TEM2103T
LH002	23103864	Coil (Ferrite Bead), TEM2103T
LH003	23103859	Coil (Ferrite Bead), TEM2011
LH004	23103859	Coil (Ferrite Bead), TEM2011
LH005	23103859	Coil (Ferrite Bead), TEM2011
LH007	23103795	Chip, Impeder, MMZ2012S301A
LH009	23103795	Chip, Impeder, MMZ2012S301A
LH010	23103795	Chip, Impeder, MMZ2012S301A
LH012	23103859	Coil (Ferrite Bead), TEM2011
LH061	23103864	Coil (Ferrite Bead), TEM2103T
LH062	23103864	Coil (Ferrite Bead), TEM2103T
LH063	23103864	Coil (Ferrite Bead), TEM2103T
LH064	23103864	Coil (Ferrite Bead), TEM2103T
LH065	23103864	Coil (Ferrite Bead), TEM2103T
LH066	23103864	Coil (Ferrite Bead), TEM2103T
LH067	23103864	Coil (Ferrite Bead), TEM2103T
LH120	23103864	Coil (Ferrite Bead), TEM2103T
LH122	23103864	Coil (Ferrite Bead), TEM2103T
LH123	23103864	Coil (Ferrite Bead), TEM2103T
LH124	23103864	Coil (Ferrite Bead), TEM2103T
LH125	23103864	Coil (Ferrite Bead), TEM2103T
LH126	23103864	Coil (Ferrite Bead), TEM2103T

Location No.	Part No.	Description
LM09	23103906	Chip (Ferrite Bead), TEM2118AS
LV05	23289560	Coil, Peaking, TRF4560AF
LV06	23289560	Coil, Peaking, TRF4560AF
LV07	23289100	Coil, Peaking, TRF4100AF
LV08	23289100	Coil, Peaking, TRF4100AF
LV11	23289100	Coil, Peaking, TRF4100AF
LV13	23289100	Coil, Peaking, TRF4100AF
LV14	23289100	Coil, Peaking, TRF4100AF
LV20	23238705	Coil, Peaking, TRF4560AJ
LV41	23289470	Coil, Peaking, TRF4470AF
LV502	23103906	Chip (Ferrite Bead), TEM2118AS
LV503	23103906	Chip (Ferrite Bead), TEM2118AS
LX101	23246199	Chip, Inductor, TRF42R2CG
LX102	23246323	Chip, Inductor, TRF44R7CT
LX111	23103906	Chip (Ferrite Bead), TEM2118AS
LX112	23103906	Chip (Ferrite Bead), TEM2118AS
LX113	23103806	Chip (Ferrite Bead), TEM2114T
LX131	23246199	Chip, Inductor, TRF42R2CG
LX132	23246323	Chip, Inductor, TRF44R7CT
LX161	23246199	Chip, Inductor, TRF42R2CG
LX162	23246323	Chip, Inductor, TRF44R7CT
LX197	24000445	Chip Jumper, 1680 Type
LX198	23103906	Chip (Ferrite Bead), TEM2118AS
LX199	23103906	Chip (Ferrite Bead), TEM2118AS
LX201	23103906	Chip (Ferrite Bead), TEM2118AS
LX206	23103906	Chip (Ferrite Bead), TEM2118AS
LX207	23103906	Chip (Ferrite Bead), TEM2118AS
LX211	23103906	Chip (Ferrite Bead), TEM2118AS
LX221	23103906	Chip (Ferrite Bead), TEM2118AS
LX222	23103906	Chip (Ferrite Bead), TEM2118AS
LX223	23103906	Chip (Ferrite Bead), TEM2118AS
LX224	23103906	Chip (Ferrite Bead), TEM2118AS
LX225	23103906	Chip (Ferrite Bead), TEM2118AS
LX231	23103906	Chip (Ferrite Bead), TEM2118AS
LX241	23103906	Chip (Ferrite Bead), TEM2118AS
LX242	23103906	Chip (Ferrite Bead), TEM2118AS
LX243	23103906	Chip (Ferrite Bead), TEM2118AS
LX244	23103906	Chip (Ferrite Bead), TEM2118AS
LX245	23103906	Chip (Ferrite Bead), TEM2118AS
LX301	23103886	Chip (Ferrite Bead), TEM2129AM

Location No.	Part No.	Description
LX311	23103886	Chip (Ferrite Bead), TEM2129AM
LX321	23103906	Chip (Ferrite Bead), TEM2118AS
LX322	23103906	Chip (Ferrite Bead), TEM2118AS
LX341	23103906	Chip (Ferrite Bead), TEM2118AS
LX342	23103906	Chip (Ferrite Bead), TEM2118AS
LX344	23103806	Chip (Ferrite Bead), TEM2114T
LX362	23103886	Chip (Ferrite Bead), TEM2129AM
LX471	23103906	Chip (Ferrite Bead), TEM2118AS
LX473	23246325	Chip, Inductor, TRF4220CT
LX509	23103906	Chip (Ferrite Bead), TEM2118AS
LX510	23103906	Chip (Ferrite Bead), TEM2118AS
LX521	23246199	Chip, Inductor, TRF42R2CG
LX531	23246323	Chip, Inductor, TRF44R7CT
LX541	23246323	Chip, Inductor, TRF44R7CT
LX824	24000445	Chip Jumper, 1680 Type
LX825	24000445	Chip Jumper, 1680 Type
LX826	24000445	Chip Jumper, 1680 Type
LX827	24000445	Chip Jumper, 1680 Type
LX829	24000445	Chip Jumper, 1680 Type
LX844	24000445	Chip Jumper, 1680 Type
LX845	24000445	Chip Jumper, 1680 Type
LY09	23103827	Chip (Ferrite Bead), TEM2120M
LY22	23103824	Coil, TEM2028K
LY64	23103827	Chip (Ferrite Bead), TEM2120M
LY121	23103827	Chip (Ferrite Bead), TEM2120M
LY122	23103827	Chip (Ferrite Bead), TEM2120M
LY123	23103827	Chip (Ferrite Bead), TEM2120M
LY124	23103827	Chip (Ferrite Bead), TEM2120M
LY125	23103827	Chip (Ferrite Bead), TEM2120M
LY126	23103827	Chip (Ferrite Bead), TEM2120M
LY127	23103806	Chip (Ferrite Bead), TEM2114T
LY128	23103806	Chip (Ferrite Bead), TEM2114T
LY129	23103827	Chip (Ferrite Bead), TEM2120M
LY130	23103827	Chip (Ferrite Bead), TEM2120M
LY131	23103827	Chip (Ferrite Bead), TEM2120M
LY170	23103806	Chip (Ferrite Bead), TEM2114T
LY227	23103806	Chip (Ferrite Bead), TEM2114T
LY300	24000445	Chip Jumper, 1680 Type
LY301	24000445	Chip Jumper, 1680 Type
LY302	24000445	Chip Jumper, 1680 Type
LY330	23103806	Chip (Ferrite Bead), TEM2114T
LY331	23103806	Chip (Ferrite Bead), TEM2114T
LY340	24000445	Chip Jumper, 1680 Type
LY341	24000445	Chip Jumper, 1680 Type

Location No.	Part No.	Description
LY342	24000445	Chip Jumper, 1680 Type
LY502	23103906	Chip (Ferrite Bead), TEM2118AS
LY503	23103906	Chip (Ferrite Bead), TEM2118AS
LY701	24000445	Chip Jumper, 1680 Type
LY800	23103827	Chip (Ferrite Bead), TEM2120M
LY804	23103828	Chip (Ferrite Bead), TEM2121M
LY806	23103828	Chip (Ferrite Bead), TEM2121M
LY807	23103906	Chip (Ferrite Bead), TEM2118AS
LY808	23103827	Chip (Ferrite Bead), TEM2120M
LY809	23103827	Chip (Ferrite Bead), TEM2120M
LZ03	24000445	Chip Jumper, 1680 Type
LZ05	23103906	Chip (Ferrite Bead), TEM2118AS
LZ09	23103906	Chip (Ferrite Bead), TEM2118AS
LZ20	23246316	Chip, Inductor, TRF44R7CR
LZ21	23246317	Chip, Inductor, TRF4100CR
LZ22	23246316	Chip, Inductor, TRF44R7CR
LZ25	23103906	Chip (Ferrite Bead), TEM2118AS
LZ26	23103906	Chip (Ferrite Bead), TEM2118AS
LZ28	23103906	Chip (Ferrite Bead), TEM2118AS
LZ29	23103906	Chip (Ferrite Bead), TEM2118AS
LZ30	24000445	Chip Jumper, 1680 Type
LZ31	23103906	Chip (Ferrite Bead), TEM2118AS
LZ32	23103906	Chip (Ferrite Bead), TEM2118AS
LZ34	24000445	Chip Jumper, 1680 Type
LZ35	23103906	Chip (Ferrite Bead), TEM2118AS
LZ36	23103906	Chip (Ferrite Bead), TEM2118AS
LZ38	23103906	Chip (Ferrite Bead), TEM2118AS
LZ39	23103906	Chip (Ferrite Bead), TEM2118AS
LZ96	23246206	Chip, Inductor, TRF48R2CG
LZ100	23246223	Chip, Inductor, TRF4330CG
LZ101	23103827	Chip (Ferrite Bead), TEM2120M
LZ102	23103827	Chip (Ferrite Bead), TEM2120M
LZ103	23103906	Chip (Ferrite Bead), TEM2118AS
LZ104	23246219	Chip, Inductor, TRF4150CG
LZ105	23246222	Chip, Inductor, TRF4270CG
LZ106	24000445	Chip Jumper, 1680 Type
T401	23224371	Transformer, Horiz, Drive, TLN1080AH
T403	23224364	Transformer, Focus, TLN2168AH

Location No.	Part No.	Description
△ T461	23236635	Transformer, Flyback, TFB3088AD
T461A	23192940	Anode Cap, TCCP5157
T801	23211698	Line Filter, TRF3218AK
T802	23211712	Line Filter, TRF3209BQ
T840	23217481	Transformer, Power, TPW1562AZ
T862	23217467	Transformer, Converter, TPW3450AS
<b>SEMICONDUCTORS</b>		
Q151	23314962	Transistor, KTA1266 Y
Q152	23314965	Transistor, KTC3198 Y
Q201	A6335470	Transistor, 2SC2712-Y
Q210	A6549570	Transistor, 2SA1586-Y
Q211	23314993	Transistor, 2SC4081T106Q
Q221	A6002040	Transistor, RN1204
Q301	B0351501	IC, TA75902P(J)
Q302	B0384625	IC, TA8859CP
Q303	23314965	Transistor, KTC3198 Y
Q304	B0351501	IC, TA75902P(J)
Q305	A6541130	Transistor, 2SA1162-Y
Q306	23319787	IC, LA7833S
Q306B	70391355	Screw, BITTB3X8 SZN
Q308	23314965	Transistor, KTC3198 Y
Q309	23314962	Transistor, KTA1266 Y
Q310	23314965	Transistor, KTC3198 Y
Q311	A6002020	Transistor, RN1202
Q350	23904896	IC, JLC1562BFEL
Q403	A6073390	Transistor, 2SK2920
Q404	A6371775	Transistor, 2SC5144
Q404B	72471082	Screw, BRDT2W3X10 SZN
Q404E	A8012650	Spacer, AC263
Q406	23314548	Transistor, 2SC4256
Q407	B0347500	IC, TA75358P
Q410	A6064650	Transistor, 2SK941
Q410	A6549570	Transistor, 2SA1586-Y
Q411	23314965	Transistor, KTC3198 Y
Q411	A6734590	Transistor, 2SC752(G)TM-Y
Q412	23114530	Transistor, 2SA933S-Q
Q412	A6002030	Transistor, RN1203
Q413	A6734590	Transistor, 2SC752(G)TM-Y
Q415	23318981	IC, MC14053BFEL
Q415	A6002030	Transistor, RN1203
Q416	23314965	Transistor, KTC3198 Y
Q416	A6361770	Transistor, 2SC3437-Y
Q417	23314965	Transistor, KTC3198 Y
Q417	A6361770	Transistor, 2SC3437-Y
Q418	A6004020	Transistor, RN1402
Q420	23316816	IC, LA7860
Q421	A6734590	Transistor, 2SC752(G)TM-Y
Q423	A6002030	Transistor, RN1203
Q424	23904353	IC, AN7712F
Q424	A6361770	Transistor, 2SC3437-Y
Q425	A6361770	Transistor, 2SC3437-Y
Q426	A6335470	Transistor, 2SC2712-Y
Q427	23314962	Transistor, KTA1266 Y
Q470	B01A0156	IC, TA1318N
Q481	B0347235	IC, TA75339AP
Q490	23314965	Transistor, KTC3198 Y
Q491	A6002030	Transistor, RN1203
Q501	B0386049	IC, TA1270AF(J)
Q502	23000263	IC, BU4053BCF-E2
Q503	A6549570	Transistor, 2SA1586-Y

Location No.	Part No.	Description
Q504	23314993	Transistor, 2SC4081T106Q
Q510	B01A0150	IC, TA1316N
Q520	23114530	Transistor, 2SA933S-Q
Q521	23114530	Transistor, 2SA933S-Q
Q522	23114530	Transistor, 2SA933S-Q
Q523	A6335470	Transistor, 2SC2712-Y
Q524	A6004010	Transistor, RN1401
Q525	A6004010	Transistor, RN1401
Q526	A6004010	Transistor, RN1401
Q527	A6541130	Transistor, 2SA1162-Y
Q528	A6541130	Transistor, 2SA1162-Y
Q529	A6541130	Transistor, 2SA1162-Y
Q601	B0376885	IC, TA8216H
Q612	A6541130	Transistor, 2SA1162-Y
Q621	23000381	IC, CXA2021S
Q622	B01A0119	IC, TA1304F(EL)
Q661	A6359870	Transistor, 2SC3326-B
Q662	A6359870	Transistor, 2SC3326-B
Q663	23906596	IC, BA4558
Q664	A6014040	Transistor, RN2404
Q681	A6359870	Transistor, 2SC3326-B
Q682	A6359870	Transistor, 2SC3326-B
Q706	23114528	Transistor, 2SC1740S, Q
Q707	A6734590	Transistor, 2SC752(G)TM-Y
Q709	23114528	Transistor, 2SC1740S, Q
Q710	23114530	Transistor, 2SA933S-Q
Q711	23314911	Transistor, 2SB1569A E
Q711B	70391355	Screw, BITTB3X8 SZN
Q712	23314914	Transistor, 2SD2400A E
Q712B	70391355	Screw, BITTB3X8 SZN
Q719	23114528	Transistor, 2SC1740S, Q
Q720	23114528	Transistor, 2SC1740S, Q
Q751	23905094	IC, STR392-110
Q752	23905094	IC, STR392-110
Q755	23904521	IC, AN7805
Q757	A6335470	Transistor, 2SC2712-Y
Q758	A6335470	Transistor, 2SC2712-Y
Q759	A6541130	Transistor, 2SA1162-Y
Q760	23114530	Transistor, 2SA933S-Q
Q761	23314911	Transistor, 2SB1569A E
Q761	A6541130	Transistor, 2SA1162-Y
Q761B	70391355	Screw, BITTB3X8 SZN
Q762	A6335470	Transistor, 2SC2712-Y
Q764	B0485884	IC, TC74HC14AF
Q765	A6335470	Transistor, 2SC2712-Y
Q766	A6335470	Transistor, 2SC2712-Y
Q767	B0488448	IC, TC74HC4066AF
Q769	23114528	Transistor, 2SC1740S, Q
Q771	23314914	Transistor, 2SD2400A E
Q771B	70391355	Screw, BITTB3X8 SZN
Q772	A6541130	Transistor, 2SA1162-Y
Q773	A6335470	Transistor, 2SC2712-Y
Q779	23114528	Transistor, 2SC1740S, Q
Q781	23114528	Transistor, 2SC1740S, Q
Q782	23114530	Transistor, 2SA933S-Q
Q782	23318840	IC, AN79M05F
Q783	23114528	Transistor, 2SC1740S, Q
Q784	23314911	Transistor, 2SB1569A E
Q784B	70391355	Screw, BITTB3X8 SZN
Q785	23314914	Transistor, 2SD2400A E
Q785B	70391355	Screw, BITTB3X8 SZN
Q796	A6335470	Transistor, 2SC2712-Y
Q797	B0352035	IC, TA75S393F
Q798	A6030110	IC, TC4S66F

Location No.	Part No.	Description
Q799	A6030110	IC, TC4S66F
Q801	23135015	IC, STR-Z4369
Q820	23314965	Transistor, KTC3198 Y
Q821	A6002060	Transistor, RN1206
Q830	23904163	IC, SI-3090CA
Q831	23905976	IC, PQ05RD11
Q840	23906689	IC, PQ05RR11
Q843	A6002060	Transistor, RN1206
Q862	A8643112	Photo Coupler, TLP621(GRL-L
Q901	A6372621	Transistor, 2SC5360
Q902	A6317440	Transistor, 2SC1815-Y
Q911	A6372621	Transistor, 2SC5360
Q912	A6317440	Transistor, 2SC1815-Y
Q913	A6534145	Transistor, 2SA1020-Y(C)
Q914	A6317440	Transistor, 2SC1815-Y
Q915	A6317440	Transistor, 2SC1815-Y
Q916	A6534040	Transistor, 2SA1015-Y
Q917	A6534040	Transistor, 2SA1015-Y
Q918	A6317440	Transistor, 2SC1815-Y
Q919	A6317440	Transistor, 2SC1815-Y
Q920	A6317440	Transistor, 2SC1815-Y
Q921	A6372621	Transistor, 2SC5360
Q922	A6317440	Transistor, 2SC1815-Y
Q961	A6317440	Transistor, 2SC1815-Y
Q962	A6534145	Transistor, 2SA1020-Y(C)
Q963	A6317440	Transistor, 2SC1815-Y
Q964	A6534040	Transistor, 2SA1015-Y
Q965	A6317440	Transistor, 2SC1815-Y
Q966	A6534040	Transistor, 2SA1015-Y
Q968	A6317440	Transistor, 2SC1815-Y
Q971	A6534040	Transistor, 2SA1015-Y
Q972	A6534040	Transistor, 2SA1015-Y
Q973	A6534145	Transistor, 2SA1020-Y(C)
Q974	A6317440	Transistor, 2SC1815-Y
Q975	A6734590	Transistor, 2SC752(G)TM-Y
QA01	23000473	IC, MN102L35GFD
QA02	23906642	IC, AT24C64-10PC
QA04	23905321	IC, 24LC16B-I/P
QA05	70119743	IC, PST523D
QA71	A6541130	Transistor, 2SA1162-Y
QB01	23114528	Transistor, 2SC1740S, Q
QB03	A6004050	Transistor, RN1405
QB14	A6541130	Transistor, 2SA1162-Y
QB30	23314965	Transistor, KTC3198 Y
QB61	A6361770	Transistor, 2SC3437-Y
QB84	A6335470	Transistor, 2SC2712-Y
QB85	A6541130	Transistor, 2SA1162-Y
QB86	A6541130	Transistor, 2SA1162-Y
QB87	A6541130	Transistor, 2SA1162-Y
QB88	A6541130	Transistor, 2SA1162-Y
QD01	B01A0107	IC, TA2136N
QH001	B01B4088	IC, TC190C060AF-
QH004	B0485893	IC, TC74HC244AF
QH005	23905013	IC, TLC29321PW
QH006	23906908	IC, MC33078DR2
QH120	23318897	IC, PCM56P-L
QH121	23318897	IC, PCM56P-L
QH140	23318897	IC, PCM56P-L
QH141	23318897	IC, PCM56P-L
QH160	23318897	IC, PCM56P-L
QH161	23318897	IC, PCM56P-L
QH170	23906909	IC, MC33079DR2
QH171	23906909	IC, MC33079DR2
QH172	23906909	IC, MC33079DR2

Location No.	Part No.	Description
QH173	23905320	IC, NM24C16EN
QH177	23904743	IC, LC89066M
QR02	A6335470	Transistor, 2SC2712-Y
QR03	A6004020	Transistor, RN1402
QR14	A6541130	Transistor, 2SA1162-Y
QR15	A6541130	Transistor, 2SA1162-Y
QR16	A6541130	Transistor, 2SA1162-Y
QS01	A6342200	Transistor, 2CS2878-A
QS11	A6342200	Transistor, 2CS2878-A
QS12	A6012040	Transistor, RN2204
QS13	23314965	Transistor, KTC3198 Y
QS14	23314965	Transistor, KTC3198 Y
QV01	B0384761	IC, TA8851CN
QV10	23114528	Transistor, 2SC1740S, Q
QV20	A6002040	Transistor, RN1204
QV21	23114528	Transistor, 2SC1740S, Q
QV22	23114530	Transistor, 2SA933S-Q
QV23	23114530	Transistor, 2SA933S-Q
QV28	A6002030	Transistor, RN1203
QV30	23905590	IC, M52055FP
QV31	A6335470	Transistor, 2SC2712-Y
QV37	A6541130	Transistor, 2SA1162-Y
QV38	A6541130	Transistor, 2SA1162-Y
QV39	A6541130	Transistor, 2SA1162-Y
QV40	23114528	Transistor, 2SC1740S, Q
QV41	23114528	Transistor, 2SC1740S, Q
QV42	23114530	Transistor, 2SA933S-Q
QV43	23114530	Transistor, 2SA933S-Q
QV48	23114528	Transistor, 2SC1740S, Q
QV49	23114528	Transistor, 2SC1740S, Q
QV501	23318981	IC, MC14053BFEL
QV504	A6549570	Transistor, 2SA1586-Y
QV505	A6549570	Transistor, 2SA1586-Y
QV506	A6549570	Transistor, 2SA1586-Y
QV507	A6549570	Transistor, 2SA1586-Y
QV508	A6549570	Transistor, 2SA1586-Y
QV509	A6549570	Transistor, 2SA1586-Y
QV524	23314993	Transistor, 2SC4081T106Q
QW05	A6335470	Transistor, 2SC2712-Y
QW08	A6335470	Transistor, 2SC2712-Y
QW11	A6335470	Transistor, 2SC2712-Y
QW17	A6002010	Transistor, RN1201
QX11	23905770	IC, PQ3RF23
QX101	23314993	Transistor, 2SC4081T106Q
QX102	23314347	Transistor, IMX2 T108
QX103	23314993	Transistor, 2SC4081T106Q
QX104	23314993	Transistor, 2SC4081T106Q
QX108	23314993	Transistor, 2SC4081T106Q
QX109	A6030670	IC, TC7S66F
QX110	A6549570	Transistor, 2SA1586-Y
QX131	23314993	Transistor, 2SC4081T106Q
QX132	23314347	Transistor, IMX2 T108
QX133	23314993	Transistor, 2SC4081T106Q
QX134	23314993	Transistor, 2SC4081T106Q
QX138	23314993	Transistor, 2SC4081T106Q
QX139	A6030670	IC, TC7S66F
QX140	A6549570	Transistor, 2SA1586-Y
QX161	23314993	Transistor, 2SC4081T106Q
QX162	23314347	Transistor, IMX2 T108
QX163	23314993	Transistor, 2SC4081T106Q
QX164	23314993	Transistor, 2SC4081T106Q
QX168	23314993	Transistor, 2SC4081T106Q
QX169	A6030670	IC, TC7S66F
QX170	A6549570	Transistor, 2SA1586-Y

Location No.	Part No.	Description
QX191	23000197	IC, SN74AHC2G53H
QX192	23314345	Transistor, IMZ1 T108
QX195	A6030695	IC, TC7SH32FU(BR
QX196	A6030695	IC, TC7SH32FU(BR
QX201	23314993	Transistor, 2SC4081T106Q
QX202	23314993	Transistor, 2SC4081T106Q
QX211	23000283	IC, R1121N331B-T
QX219	A6030670	IC, TC7S66F
QX220	23905939	IC, TLC2933IPW
QX221	A6030620	IC, TC7S04F
QX231	23000283	IC, R1121N331B-T
QX240	23905013	IC, TLC29321PW
QX241	A6030620	IC, TC7S04F
QX300	23000365	IC, TC90A63F
QX310	23000198	IC, EM636327Q-8
QX322	23314352	Transistor, IMT2 T108
QX332	23314352	Transistor, IMT2 T108
QX470	B0487819	IC, TC74HCT32AF
QX471	23314993	Transistor, 2SC4081T106Q
QX472	23314993	Transistor, 2SC4081T106Q
QX521	A6549570	Transistor, 2SA1586-Y
QX522	A6549570	Transistor, 2SA1586-Y
QX531	A6549570	Transistor, 2SA1586-Y
QX532	A6549570	Transistor, 2SA1586-Y
QX541	A6549570	Transistor, 2SA1586-Y
QX542	A6549570	Transistor, 2SA1586-Y
QX904	23314993	Transistor, 2SC4081T106Q
QX910	23000263	IC, BU4053BCF-E2
QX951	23000263	IC, BU4053BCF-E2
QX952	23314993	Transistor, 2SC4081T106Q
QX953	23314993	Transistor, 2SC4081T106Q
QY01	B0386049	IC, TA1270AF(J)
QY03	A7010005	IC, TC90A66F(BR,
QY06	23000408	IC, 1V04166-30TB
QY10	A6549570	Transistor, 2SA1586-Y
QY12	A6549570	Transistor, 2SA1586-Y
QY20	23000376	IC, BA033LBSG-TR
QY21	23000283	IC, R1121N331B-T
QY30	23314993	Transistor, 2SC4081T106Q
QY101	A6549570	Transistor, 2SA1586-Y
QY104	23314993	Transistor, 2SC4081T106Q
QY105	23314993	Transistor, 2SC4081T106Q
QY106	23314993	Transistor, 2SC4081T106Q
QY107	A6549570	Transistor, 2SA1586-Y
QY108	A6549570	Transistor, 2SA1586-Y
QY109	A6549570	Transistor, 2SA1586-Y
QY116	23314993	Transistor, 2SC4081T106Q
QY207	A6549570	Transistor, 2SA1586-Y
QY208	A6549570	Transistor, 2SA1586-Y
QY209	A6549570	Transistor, 2SA1586-Y
QY254	70200076	IC, MM1232XFBE
QY260	23114528	Transistor, 2SC1740S, Q
QY300	23000366	IC, TLC2943IDB
QY301	A6030630	IC, TC7S08F
QY302	A6030670	IC, TC7S66F
QY330	23905939	IC, TLC2933IPW
QY331	A6030620	IC, TC7S04F
QY332	A6030670	IC, TC7S66F
QY333	A6030898	IC, TC4W53FU(BRA
QY341	A6030620	IC, TC7S04F
QY342	A6030670	IC, TC7S66F
QY382	23314993	Transistor, 2SC4081T106Q
QY501	23318981	IC, MC14053BFEL
QY504	A6549570	Transistor, 2SA1586-Y

Location No.	Part No.	Description
QY505	A6549570	Transistor, 2SA1586-Y
QY506	A6549570	Transistor, 2SA1586-Y
QY507	A6549570	Transistor, 2SA1586-Y
QY508	A6549570	Transistor, 2SA1586-Y
QY509	A6549570	Transistor, 2SA1586-Y
QY524	23314993	Transistor, 2SC4081T106Q
QY700	B0386238	IC, TA1287F
QY721	23314993	Transistor, 2SC4081T106Q
QY722	23314993	Transistor, 2SC4081T106Q
QY723	23314993	Transistor, 2SC4081T106Q
QY751	23314993	Transistor, 2SC4081T106Q
QY752	23314993	Transistor, 2SC4081T106Q
QY753	23314993	Transistor, 2SC4081T106Q
QY760	23314993	Transistor, 2SC4081T106Q
QZ01	23000108	IC, $\mu$ PD64082
QZ02	23000438	IC, B416256A-35J
QZ04	A6549570	Transistor, 2SA1586-Y
QZ05	A6549570	Transistor, 2SA1586-Y
QZ06	23314993	Transistor, 2SC4081T106Q
QZ14	A6549570	Transistor, 2SA1586-Y
QZ16	23314993	Transistor, 2SC4081T106Q
QZ17	A6549570	Transistor, 2SA1586-Y
QZ18	23314993	Transistor, 2SC4081T106Q
QZ20	23314993	Transistor, 2SC4081T106Q
QZ21	23314993	Transistor, 2SC4081T106Q
QZ22	23314993	Transistor, 2SC4081T106Q
QZ23	A6549570	Transistor, 2SA1586-Y
QZ24	23314993	Transistor, 2SC4081T106Q
QZ100	B0410868	IC, TC90A45F
QZ101	23314993	Transistor, 2SC4081T106Q
QZ102	23314993	Transistor, 2SC4081T106Q
QZ103	A6549570	Transistor, 2SA1586-Y
D101	23316756	Diode, Zener, MTZJ33D
D215	23118041	Diode, MA111-(TX)
D216	23118041	Diode, MA111-(TX)
D217	23118041	Diode, MA111-(TX)
D218	23118041	Diode, MA111-(TX)
D219	23118041	Diode, MA111-(TX)
D220	23118041	Diode, MA111-(TX)
D301	23316679	Diode, Zener, MTZJ6.8C
D302	23118094	Diode, EU2A, LF-F10
D303	23316732	Diode, Zener, MTZJ18C
D304	23316794	Diode, SC570ALFE2
D305	23118822	Diode, ERB12-02
D306	23118822	Diode, ERB12-02
D307	23118859	Diode, 1SS133
D308	23118859	Diode, 1SS133
D310	23118041	Diode, MA111-(TX)
D336	23118859	Diode, 1SS133
D337	23118859	Diode, 1SS133
D401	23118094	Diode, EU2A, LF-F10
D402	23118094	Diode, EU2A, LF-F10
D403	23224366	Diode, FMQ-3GU
D404	23316254	Diode, ERC06-15L
D406	23118094	Diode, EU2A, LF-F10
D407	23316731	Diode, Zener, MTZJ18B
D408	A7978850	Diode, S5295G
D411	23316666	Diode, Zener, MTZJ4.7B
D412	23118041	Diode, MA111-(TX)
D412	23118094	Diode, EU2A, LF-F10
D413	23118041	Diode, MA111-(TX)
D413	23118707	Diode, RP 1H, LF-C1
D414	23118041	Diode, MA111-(TX)
D415	23118041	Diode, MA111-(TX)



Location No.	Part No.	Description
D415	23118707	Diode, RP 1H, LF-C1
D416	23118041	Diode, MA111-(TX)
D435	23118094	Diode, EU2A, LF-F10
D436	23118094	Diode, EU2A, LF-F10
D441	23118859	Diode, 1SS133
D442	23316731	Diode, Zener, MTZJ18B
D444	23118859	Diode, 1SS133
△ D482	23115774	Diode, Zener, RD6.2E(4)
D520	23316647	Diode, Zener, MTZJ2.0B
D521	23118041	Diode, MA111-(TX)
D522	23118041	Diode, MA111-(TX)
D523	23118041	Diode, MA111-(TX)
D531	23316573	Diode, Zener, MA8062-L, TX
D532	23118822	Diode, ERB12-02
D533	23316686	Diode, Zener, MTZJ9.1A
D601	23118041	Diode, MA111-(TX)
D602	23118041	Diode, MA111-(TX)
D603	23118041	Diode, MA111-(TX)
D604	23118041	Diode, MA111-(TX)
D607	23316616	Diode, Zener, MA8220-M, TX
D608	23316616	Diode, Zener, MA8220-M, TX
D611	23118041	Diode, MA111-(TX)
D612	23118041	Diode, MA111-(TX)
D661	23316570	Diode, Zener, MA8056-L, TX
D704	23118859	Diode, 1SS133
D705	23118859	Diode, 1SS133
D715	23118859	Diode, 1SS133
D721	23118859	Diode, 1SS133
D761	23118859	Diode, 1SS133
D762	23118859	Diode, 1SS133
D763	23118859	Diode, 1SS133
D764	23118859	Diode, 1SS133
D781	23118859	Diode, 1SS133
D782	23118859	Diode, 1SS133
D783	23118859	Diode, 1SS133
D784	23118859	Diode, 1SS133
D801	23316787	Diode, D15XB60H, F5
D811	23316679	Diode, Zener, MTZJ6.8C
D812	23118859	Diode, 1SS133
D822	23316672	Diode, Zener, MTZJ5.6B
D823	23316672	Diode, Zener, MTZJ5.6B
D830	23115532	Diode, ERB12-01
D831	23115532	Diode, ERB12-01
D840	23316962	Diode, S1WBA20 4101
D841	23316745	Diode, Zener, MTZJ27A
D843	23118859	Diode, 1SS133
D845	23316679	Diode, Zener, MTZJ6.8C
D846	23118859	Diode, 1SS133
D851	23357215	Diode, D4SBS6
D858	23118859	Diode, 1SS133
D859	23118859	Diode, 1SS133
D862	23118057	Diode, AG01A
△ D863	23316689	Diode, Zener, MTZJ10A
D864	23118060	Diode, AL01Z
D873	23316747	Diode, Zener, MTZJ27C
D875	23316688	Diode, Zener, MTZJ9.1C
D876	23316753	Diode, Zener, MTZJ33A
D877	23316747	Diode, Zener, MTZJ27C
D878	23316686	Diode, Zener, MTZJ9.1A
D884	23357217	Diode, D4SBL40
D885	23357216	Diode, D4SBL20U
D891	23357214	Diode, D4SBS4
D892	23316768	Diode, FMB-26L
D899	24000948	Varistor, TNR15G391K

Location No.	Part No.	Description
D901	23118859	Diode, 1SS133
D902	23118859	Diode, 1SS133
D911	23118859	Diode, 1SS133
D912	23118859	Diode, 1SS133
D921	23118859	Diode, 1SS133
D922	23118859	Diode, 1SS133
D924	23118859	Diode, 1SS133
D925	23118859	Diode, 1SS133
D931	23118859	Diode, 1SS133
D932	23118859	Diode, 1SS133
D933	23118859	Diode, 1SS133
D934	23118859	Diode, 1SS133
D936	A7568250	Diode, 1S1834
D941	23118859	Diode, 1SS133
D942	23118859	Diode, 1SS133
D943	23118859	Diode, 1SS133
D945	A7568250	Diode, 1S1834
D946	23118859	Diode, 1SS133
D948	23118859	Diode, 1SS133
D961	23118859	Diode, 1SS133
D962	23118859	Diode, 1SS133
D963	23118859	Diode, 1SS133
D964	23118859	Diode, 1SS133
D965	23118859	Diode, 1SS133
D966	23118859	Diode, 1SS133
D967	A7568250	Diode, 1S1834
D7701	23118041	Diode, MA111-(TX)
D7702	23118859	Diode, 1SS133
D7705	23118041	Diode, MA111-(TX)
D7706	23118041	Diode, MA111-(TX)
D7707	23118041	Diode, MA111-(TX)
D7708	23118041	Diode, MA111-(TX)
D7709	23316675	Diode, Zener, MTZJ6.2B
D7714	23118041	Diode, MA111-(TX)
D7715	23118041	Diode, MA111-(TX)
D7716	23118041	Diode, MA111-(TX)
D7717	23316675	Diode, Zener, MTZJ6.2B
D7718	23316675	Diode, Zener, MTZJ6.2B
D7719	23316675	Diode, Zener, MTZJ6.2B
D7730	23118538	Diode, Zener, RD6.2ESA B2
D7736	23118538	Diode, Zener, RD6.2ESA B2
D7738	23118859	Diode, 1SS133
D7739	23118859	Diode, 1SS133
D7740	23118859	Diode, 1SS133
D7741	23118859	Diode, 1SS133
D7742	23118859	Diode, 1SS133
D7743	23118859	Diode, 1SS133
D7745	23118859	Diode, 1SS133
D7746	23118859	Diode, 1SS133
D7747	23118859	Diode, 1SS133
D7748	23118859	Diode, 1SS133
D7749	23118859	Diode, 1SS133
D7760	23118859	Diode, 1SS133
D7805	23118041	Diode, MA111-(TX)
D7806	23118041	Diode, MA111-(TX)
DA02	23316574	Diode, Zener, MA8062-M, TX
DA11	23118859	Diode, 1SS133
DA12	23316669	Diode, Zener, MTZJ5.1B
DA34	23118041	Diode, MA111-(TX)
DA43	23118041	Diode, MA111-(TX)
DA44	23118041	Diode, MA111-(TX)
DA45	23118041	Diode, MA111-(TX)
DA46	23118041	Diode, MA111-(TX)
DA61	23118041	Diode, MA111-(TX) (55H70)

Location No.	Part No.	Description
DB01	23358501	Diode(LED),SCL003URC5F (50HX70/55HX/61HX/61H70)
DB10	23316574	Diode, Zener, MA8062-M, TX
DB11	23118041	Diode, MA111-(TX)
DB12	23118041	Diode, MA111-(TX)
DB13	23118041	Diode, MA111-(TX)
DB13	23358522	Diode (LED), SIR-56SB3F
DB14	23118041	Diode, MA111-(TX)
DB30	23118859	Diode, 1SS133
DB42	23316574	Diode, Zener, MA8062-M, TX
DB61	23118041	Diode, MA111-(TX)
DH001	23316675	Diode, Zener, MTZJ6.2B
DH002	23316675	Diode, Zener, MTZJ6.2B
DH003	23316675	Diode, Zener, MTZJ6.2B
DV01	23316686	Diode, Zener, MTZJ9.1A
DV02	23316686	Diode, Zener, MTZJ9.1A
DV03	23316686	Diode, Zener, MTZJ9.1A
DV07	23316686	Diode, Zener, MTZJ9.1A
DV08	23316686	Diode, Zener, MTZJ9.1A
DV09	23316686	Diode, Zener, MTZJ9.1A
DV11	23316686	Diode, Zener, MTZJ9.1A
DV12	23316686	Diode, Zener, MTZJ9.1A
DV13	23316686	Diode, Zener, MTZJ9.1A
DV17	23316686	Diode, Zener, MTZJ9.1A
DV18	23316686	Diode, Zener, MTZJ9.1A
DV25	23118859	Diode, 1SS133
DV101	23316686	Diode, Zener, MTZJ9.1A
DV102	23316686	Diode, Zener, MTZJ9.1A
DV103	23316686	Diode, Zener, MTZJ9.1A
DV161	23316686	Diode, Zener, MTZJ9.1A
DV162	23316686	Diode, Zener, MTZJ9.1A
DV163	23316686	Diode, Zener, MTZJ9.1A
DX11	23115532	Diode, ERB12-01
DX12	23115532	Diode, ERB12-01
<b>MISCELLANEOUS</b>		
B224	23035412	Screw, BTB 4X12 SZN
B225	23035412	Screw, BTB 4X12 SZN
B230	23037312	Screw, BTBW 3X12 SZN
B233	23035412	Screw, BTB 4X12 SZN
B234	23035412	Screw, BTB 4X12 SZN
B235	23035310	Screw, BTB 3X8 SZN
B236	23035412	Screw, BTB 4X12 SZN
BB30	23903022	Socket, 8P
BB31	23903022	Socket, 8P
BB300	23368627	Plug, 8P
F470	23144624	Fuse, 2.0A, 125V
F801	23144481	Fuse, 7.0A, 125V
F801A	23165433	Holder, Fuse
F860	23144626	Fuse, 4.0A, 125V
F889	23144626	Fuse, 4.0A, 125V
F890	23144625	Fuse, 3.15A, 125V
F891	23144627	Fuse, 5.0A, 125V
G101	24872101	Chip, 100 ohm, 1/16W
G102	24872101	Chip, 100 ohm, 1/16W
GJ01	24000824	Chip Jumper, 2125Type (50HX70/61HX70)
GJ01	24000824	Chip Jumper, 2125Type (50HX70/61HX70)
GJ02	24000824	Chip Jumper, 2125Type
GJ03	24000445	Chip Jumper, 1680 Type
GJ04	24000445	Chip Jumper, 1680 Type
GJ04	24000824	Chip Jumper, 2125Type
GJ05	24000445	Chip Jumper, 1680 Type

Location No.	Part No.	Description
GJ05	24000824	Chip Jumper, 2125Type
GJ05	24000824	Chip Jumper, 2125Type
GJ06	24000445	Chip Jumper, 1680 Type
GJ06	24000824	Chip Jumper, 2125Type
GJ07	24000824	Chip Jumper, 2125Type
GJ10	24000824	Chip Jumper, 2125Type
GJ11	24000824	Chip Jumper, 2125Type
GJ14	24000824	Chip Jumper, 2125Type
GJ15	24000824	Chip Jumper, 2125Type
GJ16	24000445	Chip Jumper, 1680 Type
GJ25	24000445	Chip Jumper, 1680 Type
GJ501	24000445	Chip Jumper, 1680 Type
H003	23344422	RF Switch, RSU134X1
H003A	23740989	Nut, F-Connector
J501	24000824	Chip Jumper, 2125Type
JM03	24000445	Chip Jumper, 1680 Type
JM04	24000445	Chip Jumper, 1680 Type
JM06	24000445	Chip Jumper, 1680 Type
JM07	24000445	Chip Jumper, 1680 Type
JR02	24000445	Chip Jumper, 1680 Type
JV504	24000445	Chip Jumper, 1680 Type
JX101	24000445	Chip Jumper, 1680 Type
JX206	24000445	Chip Jumper, 1680 Type
JX207	24000445	Chip Jumper, 1680 Type
JX222	24000445	Chip Jumper, 1680 Type
JX226	24000445	Chip Jumper, 1680 Type
JX242	24000445	Chip Jumper, 1680 Type
JX246	24109103	Chip, 0.01 $\mu$ F, $\pm$ 10%, 25V
JX475	24000445	Chip Jumper, 1680 Type
JX811	24000445	Chip Jumper, 1680 Type
JX812	24000445	Chip Jumper, 1680 Type
JY02	24000445	Chip Jumper, 1680 Type
JY19	24000445	Chip Jumper, 1680 Type
JY20	24000445	Chip Jumper, 1680 Type
JY22	24000445	Chip Jumper, 1680 Type
JY26	24000445	Chip Jumper, 1680 Type
JY27	24000445	Chip Jumper, 1680 Type
JY29	24000445	Chip Jumper, 1680 Type
JY201	24000445	Chip Jumper, 1680 Type
JY301	24000445	Chip Jumper, 1680 Type
JY504	24000445	Chip Jumper, 1680 Type
JZ01	24000445	Chip Jumper, 1680 Type
JZ02	24000576	Chip Jumper, 3216 type
JZ03	24000445	Chip Jumper, 1680 Type
KB11	23904946	Remote Sensor, RPM-676CBR-S
P350	23368634	Plug, 25P
P410	23903025	Socket, 25P
P540	23903040	Socket, 56P
P601	23902213	Socket, B-B, 10P
P708	23902655	Socket, B-B, 15P
P709	23902655	Socket, B-B, 15P
P713	23164787	Plug, 7P
P714	23164787	Plug, 7P
P715	23164787	Plug, 7P
P801	23372117	Power Cord
PD02	23368130	Plug, 10P
PH001	23367724	Plug, B-B, 15P
PH002	23367724	Plug, B-B, 15P
PV02	23365819	Jack, 1S3P
PV04	23365907	Jack, 5P
PV06	23903040	Socket, 56P
S602	23145412	Switch, Slide, 2C2P
SA01	23145226	Switch, Push, 1C1P

Location No.	Part No.	Description
SA02	23145226	Switch, Push, 1C1P
SA03	23145226	Switch, Push, 1C1P
SA04	23145226	Switch, Push, 1C1P
SA05	23145226	Switch, Push, 1C1P
SA06	23145226	Switch, Push, 1C1P
SA07	23145226	Switch, Push, 1C1P
SA08	23145226	Switch, Push, 1C1P
SA09	23145226	Switch, Push, 1C1P
SR41	23146558	Relay, DC12V
SR42	23146570	Relay, DC12V
SR81	23146574	Relay, DLS5D1-O(M) 0.15W
SR82	23146574	Relay, DLS5D1-O(M) 0.15W
V901A	23902019	Socket, CRT, 9P
V902A	23902019	Socket, CRT, 9P
V903A	23902019	Socket, CRT, 9P
W661	23151232	Speaker, SPK-1235, 160X160mm, 8 ohm
W662	23151232	Speaker, SPK-1235, 160X160mm, 8 ohm
X401	23153721	Ceramic Resonator, 503kHz, TCR1023
X4401	23153721	Ceramic Resonator, 503kHz, TCR1023
X4402	23153721	Ceramic Resonator, 503kHz, TCR1023
X501	23153961	Crystal, 3.58MHz
XA01	23153533	Ceramic Resonator, 8.00MHz, TCR1082AM
XB01	23153011	Ceramic Resonator, 4.00MHz, TCR1050
XM01	23153529	Crystal, 20 MHz
XY01	23153961	Crystal, 3.58MHz
XY03	23153721	Ceramic Resonator, 503kHz, TCR1023
Z401	24082996	CR Block, TPA5007BH
Z405	23140203	SG-GAP, SG99B3EN
Z410	23110842	Focus Pack, TPA6031
Z410A	23505177	Focus Cable
Z450A	23504953	Anode Cable
Z801	23148734	Module, HIC1026A, PROTECTOR,HIC1026
ZA01	23262286	Coil, IF, TRF1237AH
ZH001	23103823	Filter, TEM2027D
ZH002	23103823	Filter, TEM2027D
ZH121	23103823	Filter, TEM2027D
ZH122	23103823	Filter, TEM2027D
ZH141	23103823	Filter, TEM2027D
ZH142	23103823	Filter, TEM2027D
ZH161	23103823	Filter, TEM2027D
ZH162	23103823	Filter, TEM2027D
ZX110	23103823	Filter, TEM2027D
ZX190	23103823	Filter, TEM2027D
ZX221	23103823	Filter, TEM2027D
ZX241	23103823	Filter, TEM2027D
ZX521	23103823	Filter, TEM2027D
ZX531	23103823	Filter, TEM2027D
ZX541	23103823	Filter, TEM2027D
ZX821	23246199	Chip (Ferrite Bead), TRF42R2CG
ZX822	23246195	Chip (Ferrite Bead), TRF41R0CG
ZX823	23246195	Chip (Ferrite Bead), TRF41R0CG
ZY300	23103823	Filter, TEM2027D

Location No.	Part No.	Description
ZY330	23103823	Filter, TEM2027D
ZY340	23103823	Filter, TEM2027D
<b>PC BOARD ASSEMBLIES</b>		
* E031Z		CRT-D/R Board, PB9586A1 (50HX70/55HX70/61HX70)
* E031Z		CRT-D/R Board, PB9586B1 (55H70/61H70)
* E032Z		CRT-D/G Board, PB9586A2 (50HX70/55HX70/61HX70)
* E032Z		CRT-D/G Board, PB9586B2 (55H70/61H70)
* E033Z		CRT-D/B Board, PB9586A3 (50HX70/55HX70/61HX70)
* E033Z		CRT-D/B Board, PB9586B3 (55H70/61H70)
* E034Z		SVM-R Board, PB9586A4 (50HX70/55HX70/61HX70)
* E034Z		SVM-R Board, PB9586B4 (55H70/61H70)
* E035Z		SVM-G Board, PB9586A5 (50HX70/55HX70/61HX70)
* E035Z		SVM-G Board, PB9586B5 (55H70/61H70)
* E036Z		SVM-B Board, PB9586A6 (50HX70/55HX70/61HX70)
* E036Z		SVM-B Board, PB9586B6 (55H70/61H70)
* E041Z		FRONT-CON Board, PB9615-1
* E042Z		FRONT-IN Board, PB9615-2
* E043Z		REM Board, PB9615-3
* U401		DPC Board, PB9602
* U701	23785265	DIGI-CONV Board, PB9585C (50HX70)
* U701	23785263	DIGI-CONV Board, PB9585B (55HX70/55H70)
* U701	23785122	DIGI-CONV Board, PB9585A (61HX70)
* U801		DEF/Power Board, PB9582A (50HX70/55HX70/61HX70)
* U801		DEF/Power Board, PB9582B (55H70/61H70)
* U901		Signal/CONV Board, PB9581C (50HX70)
* U901		Signal/CONV Board, PB9581B (55HX70)
* U901		Signal/CONV Board, PB9581A (61HX70)
* U901		Signal/CONV Board, PB9581E (55H70)
* U901		Signal/CONV Board, PB9581D (61H70)
* UD01		SRS Board, PB9587
* UV01		A/V Board, PB9583A
* UZ01	23785121	HYPERS PRO. Board, PB9584A
<b>PICTURE TUBE</b>		
△ V901R	23005770	Protector Coupling R (50HX70)
△ V901R	23005777	Protector Coupling R (55HX70)
△ V901R	23005540	Protector Coupling R 61HX (61HX70)
△ V901R	23005723	Protector Coupling R (55H70)

Location No.	Part No.	Description
△ V901R	23005689	Protector Coupling R (61H70)
△ V902G	23005771	Protector Coupling G (50HX70/55HX70)
△ V902G	23005541	Protector Coupling G 61HX(61HX70)
△ V902G	23005808	Protector Coupling G (55H70/61H70)
△ V903B	23003382	Protector Coupling B (50HX70/55HX70)
△ V903B	23003818	Protector Coupling B 56X81 (61HX70)
△ V903B	23005724	Protector Coupling B (55H70)
△ V903B	23005690	Protector Coupling B (61H70)
<b>TUNER</b>		
H001	23321389	Tuner, EL956LW
HY01	23321369	Tuner, EL953L
<b>ACCESSORIES</b>		
K912	23306370	Remote Hand Unit, CT-90047 (50HX70/55HX70/61HX70)
K912	23306269	Remote Hand Unit, CT-9954 (55H70/61H70)
Y101	23563966	Owner's Manual, English, 50HX70/55HX70/61HX70
Y101	23565014	Owner's Manual, English, 55H70/61H70
Y101F	23563967	Owner's Manual, French, 50HX70/55HX70/61HX70
Y101F	23565015	Owner's Manual, French, 55H70/61H70
<b>CABINET PARTS</b>		
A001	23411387	Wood Cabinet (50HX70)
A001	23411385	Wood Cabinet (55HX70)
A001	23411383	Wood Cabinet (61HX70)
A001	23411386	Wood Cabinet (55H70)
A001	23411384	Wood Cabinet (61H70)
A102	23527144	Speaker Grille (50HX70)
A102	23527143	Speaker Grille (55HX70)
A102	23527142	Speaker Grille (61HX70)
A102	23527150	Speaker Grille (55H70)
A102	23527149	Speaker Grille (61H70)
A150	23411402	Light Board (50HX70)
A150	23411401	Light Board (55HX70/55H70)
A150	23411398	Light Board (61HX70)
A150	23411399	Light Board (61H70)
A160	23469228	Caster
A201	23549585	Front Bezel
A202	23450268	Control Panel (50HX70/55HX70/61HX70)
A202	23450308	Control Panel (55H70/61H70)
A213	23427839	Door
A224	23445423	Button, Control
A268	23540171	Front Cover (61HX70)
A268	23540172	Front Cover (50HX70/55HX70/55H70/61H70)
A424	23540074	Back Cover (50HX70)
A424	23540214	Back Cover (55HX70/55H70)
A424	23540215	Back Cover (61HX70/61H70)
A505	72471068	Screw, BIDT2 4X12BZ
A510	23030815	Screw, PTD #6 X 3/4


Location No.	Part No.	Description
A518	23030815	Screw, PTD #6 X 3/4
A519	23030815	Screw, PTD #6 X 3/4
A521	23030815	Screw, PTD #6 X 3/4
A533	23030815	Screw, PTD #6 X 3/4
A535	23030815	Screw, PTD #6 X 3/4
A539	23030815	Screw, PTD #6 X 3/4
A541	23030815	Screw, PTD #6 X 3/4
A543	72471068	Screw, BIDT2 4X12BZ
A701	23525895	Carton (50HX70)
A701	23064270	Carton (55HX70)
A701	23064272	Case (61HX70)
A701	23064269	Case (55H70)
A701	23064271	Carton (61H70)
A703	23935847	Packing, Top (50HX70)
A703	23946070	Packing, Top (55HX70/55H70)
A703	23946072	Packing, Top (61HX70/61H70)
A708	23935848	Packing, Bottom (50HX70)
A708	23946071	Packing, Bottom (55HX70/55H70)
A708	23946073	Packing, Bottom (61HX70/61H70)
A721	23943628	Cover, Poly
K111	23430832	Delta, DELTA 51-A/B (50HX70/55HX70)
K111	23430669	Delta, DELTA 51-A/B (61HX70)
K111	23430479	Delta, DELTA 36-A/B (55H70)
K111	23430539	Delta, DELTA 37-A/B (61H70)
K112	23430832	Delta, DELTA 51-A/B (50HX70/55HX70)
K112	23430669	Delta, DELTA 51-A/B (61HX70)
K112	23430479	Delta, DELTA 36-A/B (55H70)
K112	23430539	Delta, DELTA 37-A/B (61H70)
K113	23430832	Delta, DELTA 51-A/B (50HX70/55HX70)
K113	23430669	Delta, DELTA 51-A/B (61HX70)
K113	23430479	Delta, DELTA 36-A/B (55H70)
K113	23430539	Delta, DELTA 37-A/B (61H70)
K501	23430817	Lenti Sheet, SCREEN50KKHL (50HX70)
K501	23430819	Lenti Sheet, SCREEN55KKHL (55HX70)
K501	23430796	Lenti Sheet, SCREEN61KKHL (61HX70)
K501	23430634	Lenti Sheet, SCREEN55KJ-L (55H70)
K501	23837528	Lenti Sheet, SCREEN61DH-L (61H70)
K502	23430799	Fresnel Sheet, SCREEN50KKPF (50HX70)
K502	23430635	Fresnel Sheet, SCREEN55KJ-F (55HX70/55H70)
K502	23837539	Fresnel Sheet, SCREEN61KH-F (61HX70)
K502	23837529	Fresnel Sheet, SCREEN61DH-F (61H70)
K503	23430826	Screen Protector, SCR-PRO50AK (50HX70)
K503	23430827	Screen Protector, SCR-PRO55AK (55HX70)
K503	23430797	Screen Protector, SCR-PRO61AK (61HX70)
K503	23430570	Screen Protector, SCR-PRO55RH (55H70)

Location No.	Part No.	Description
K503	23430571	Screen Protector, SCR-PRO61RH (61H70)
K601	23430509	Mirror, MIRROR50H (50HX70)
K601	23430529	Mirror, MIRROR55H (55HX70/55H70)
K601	23430528	Mirror, MIRROR61H (61HX70/61H70)


Location No.	Part No.	Description

**THIS PAGE IS  
INTENTIONALLY LEFT  
BLANK.**

SIGNAL/CONV BOARD PB9581  
BOTTOM (FOIL) SIDE

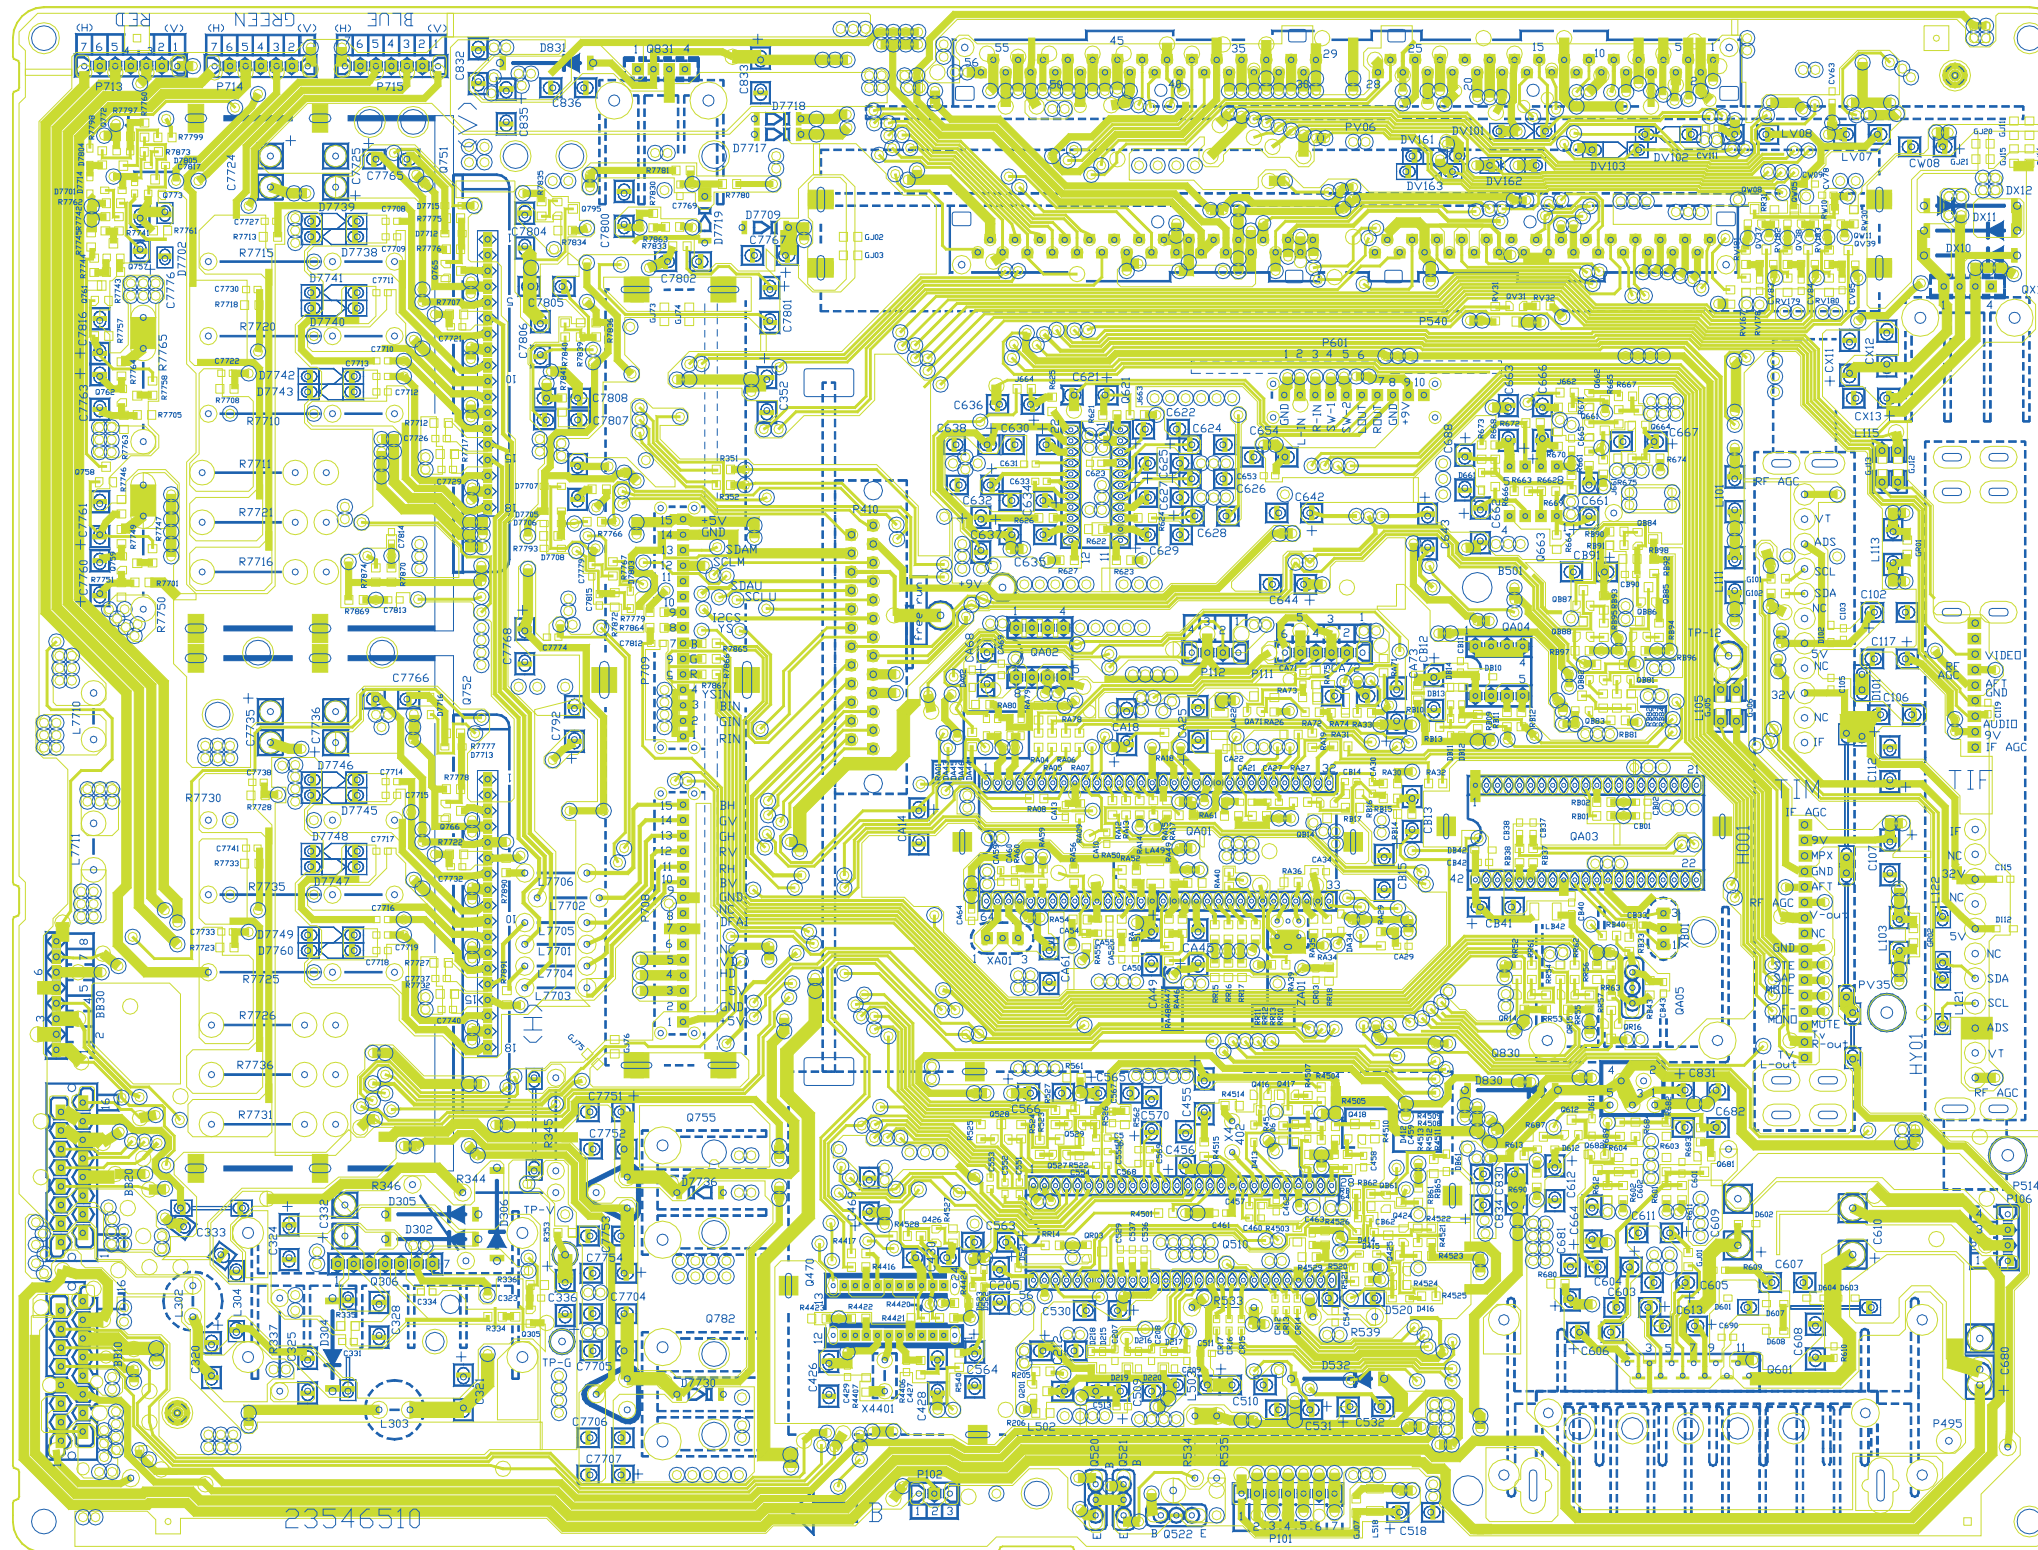

DEF/POWER BOARD PB9582  
BOTTOM (FOIL) SIDE

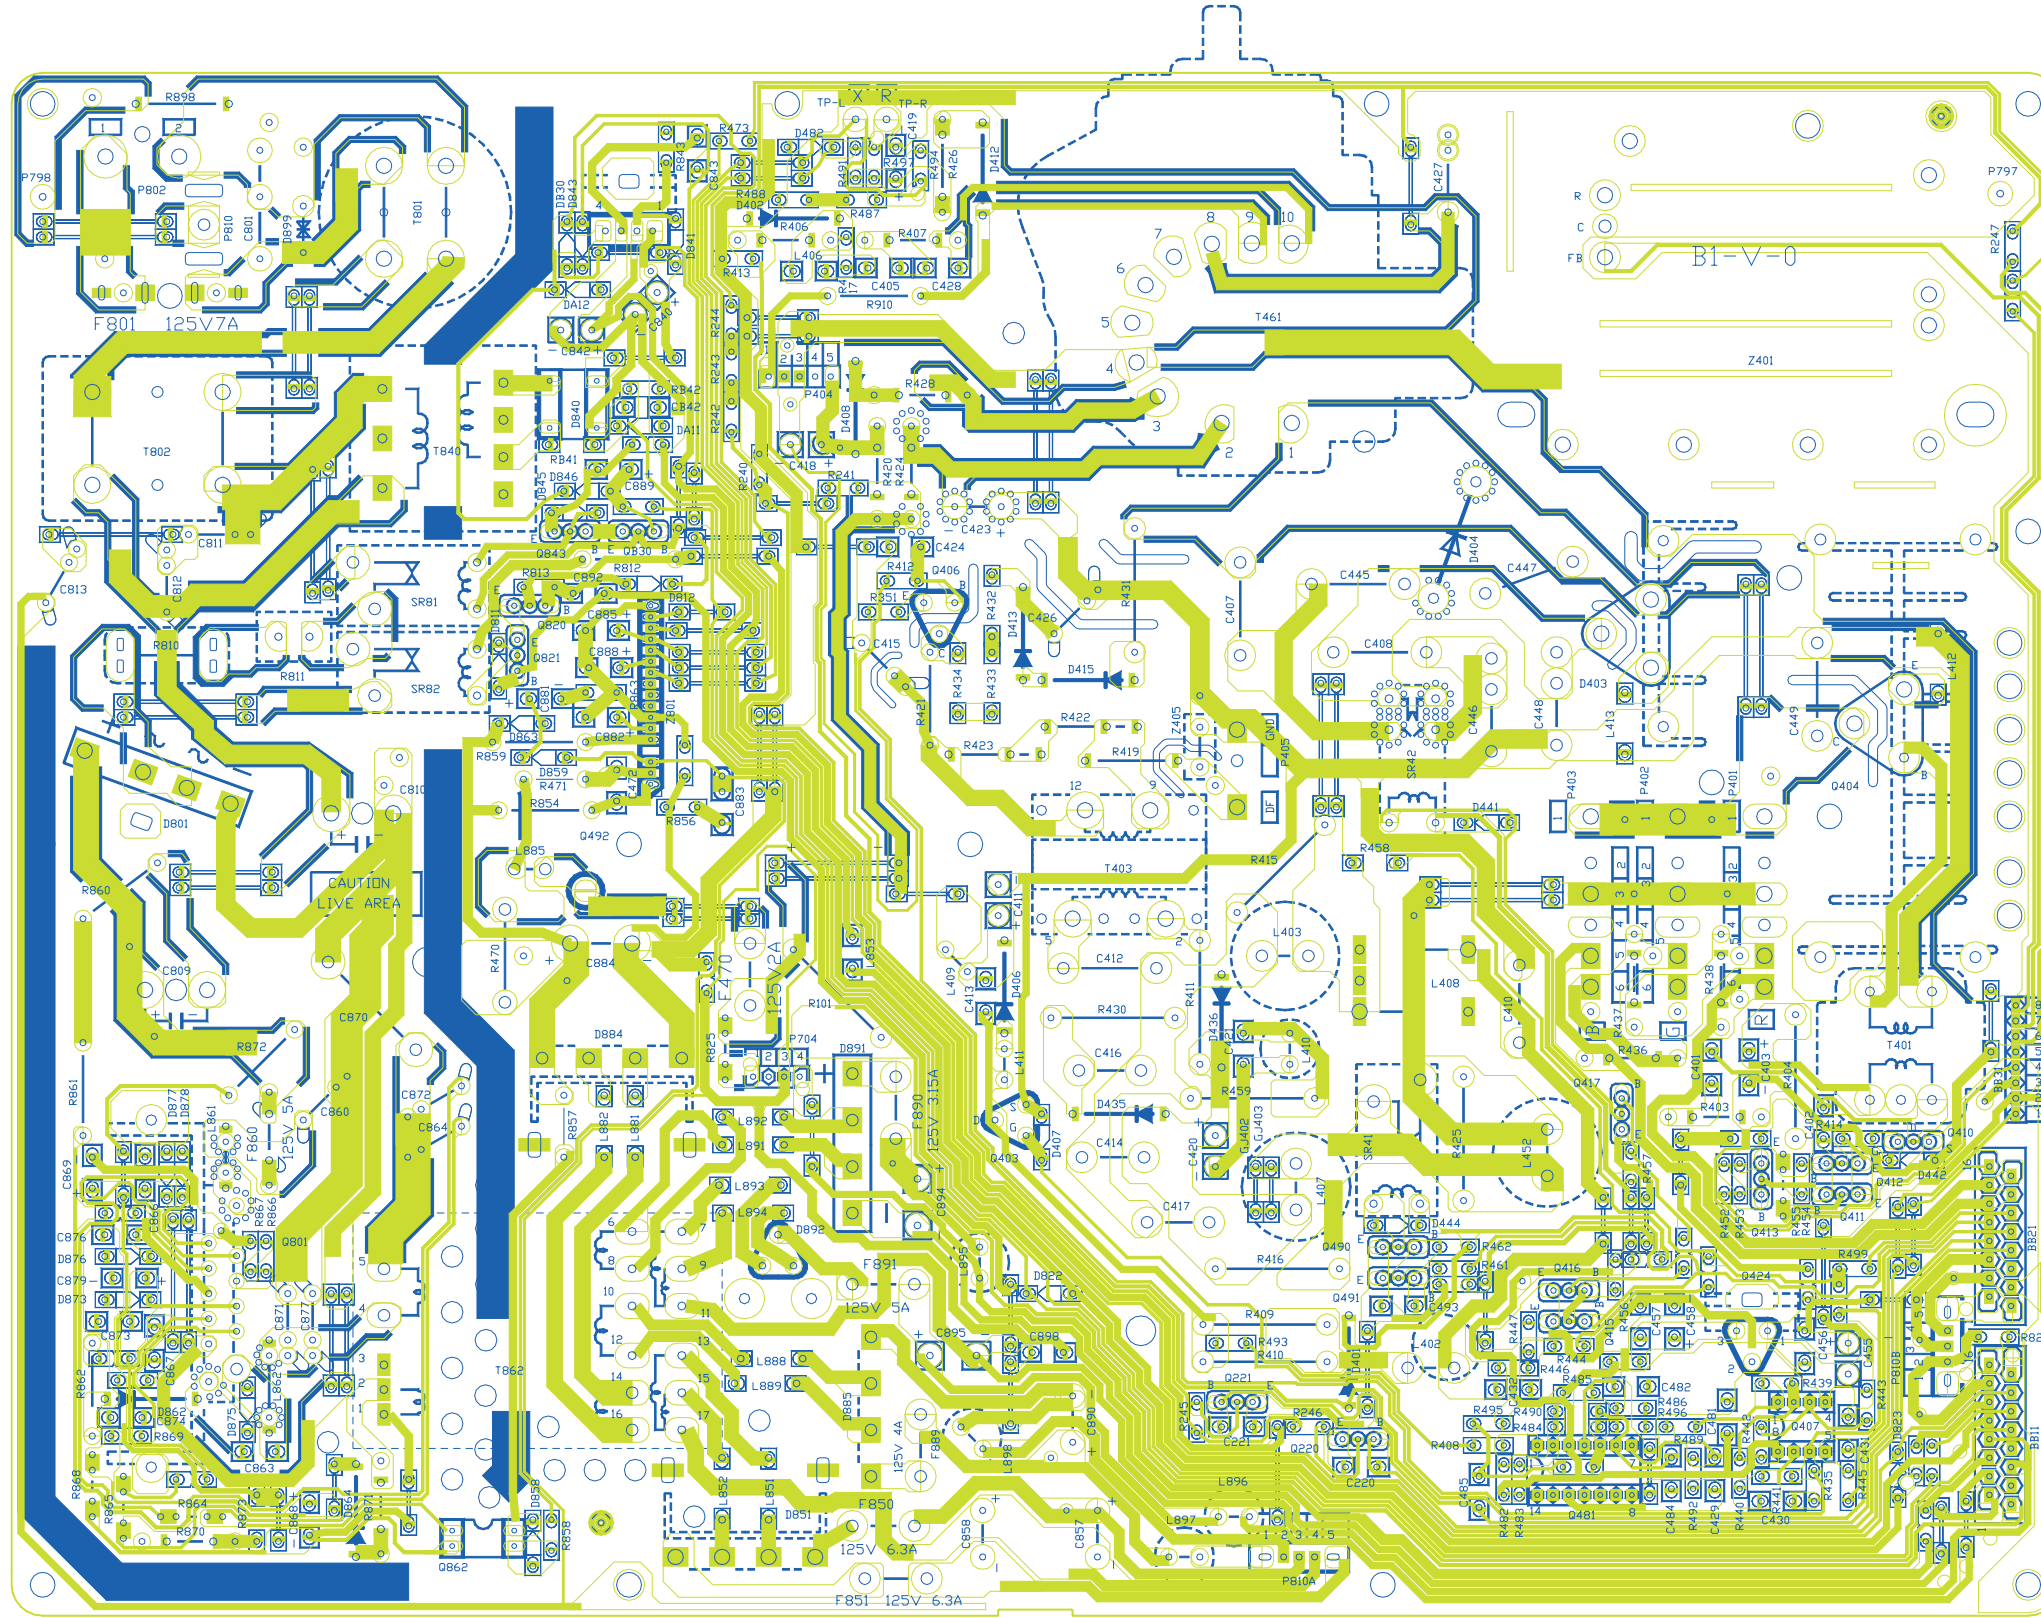







**HYPER PRO BOARD PB9584**  
BOTTOM (FOIL) SIDE




**DPC BOARD PB9602**  
BOTTOM (FOIL) SIDE

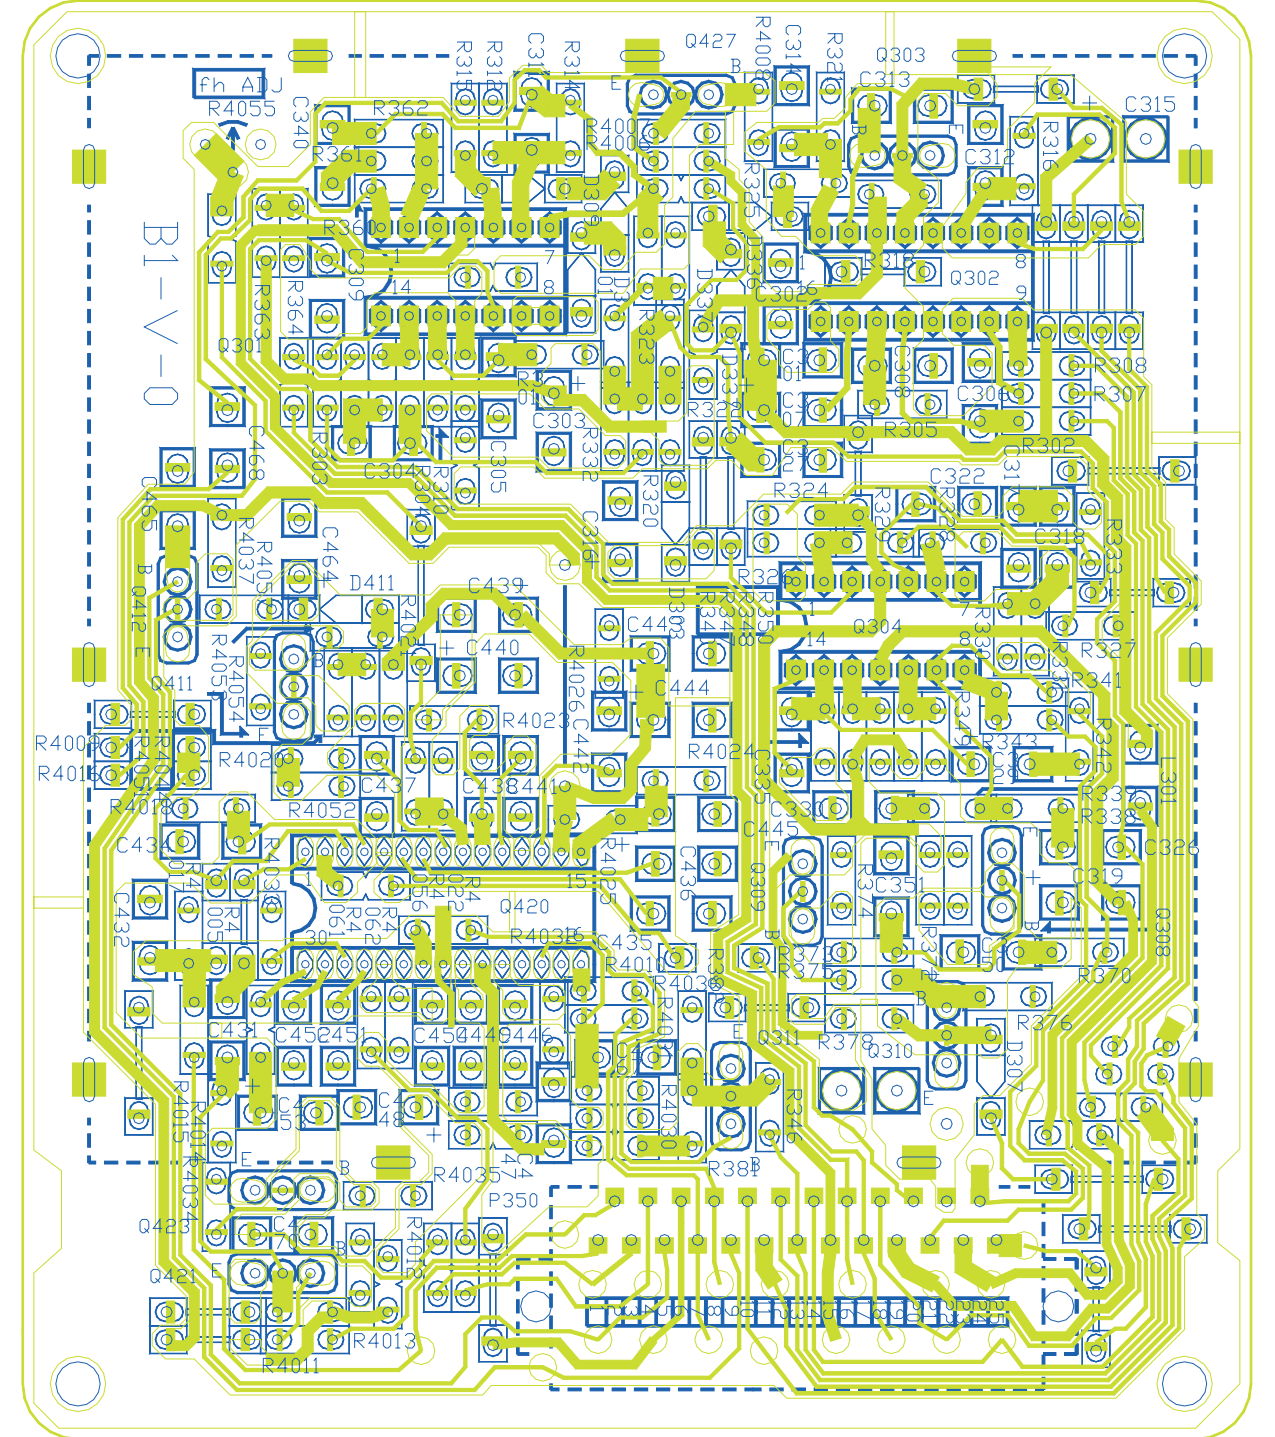

**CRT/D-RED BOARD PB9586-1**  
**BOTTOM (FOIL) SIDE**

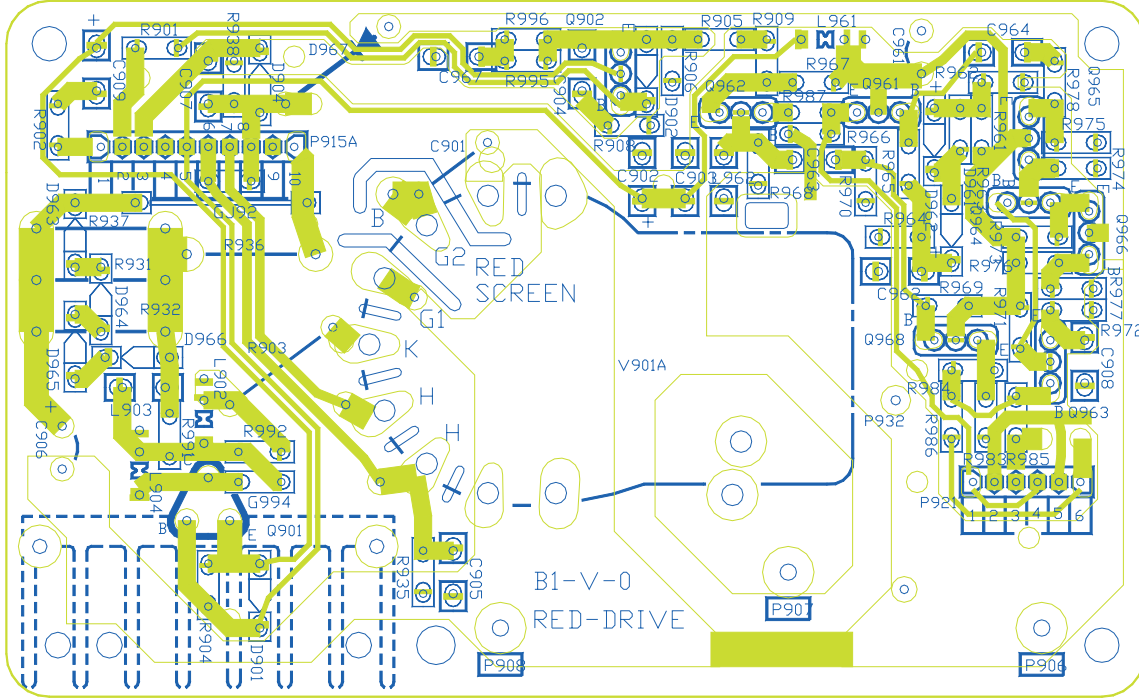


**CRT/D-GRN BOARD PB9586-2**  
**BOTTOM (FOIL) SIDE**

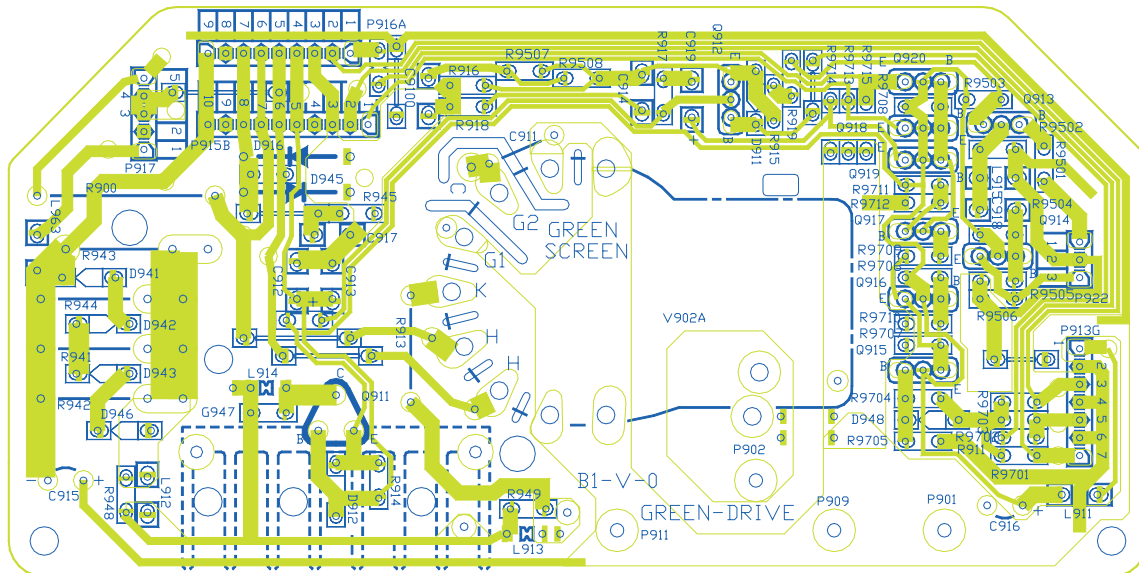





**SVM-R BOARD PB9586-4**  
**BOTTOM (FOIL) SIDE**

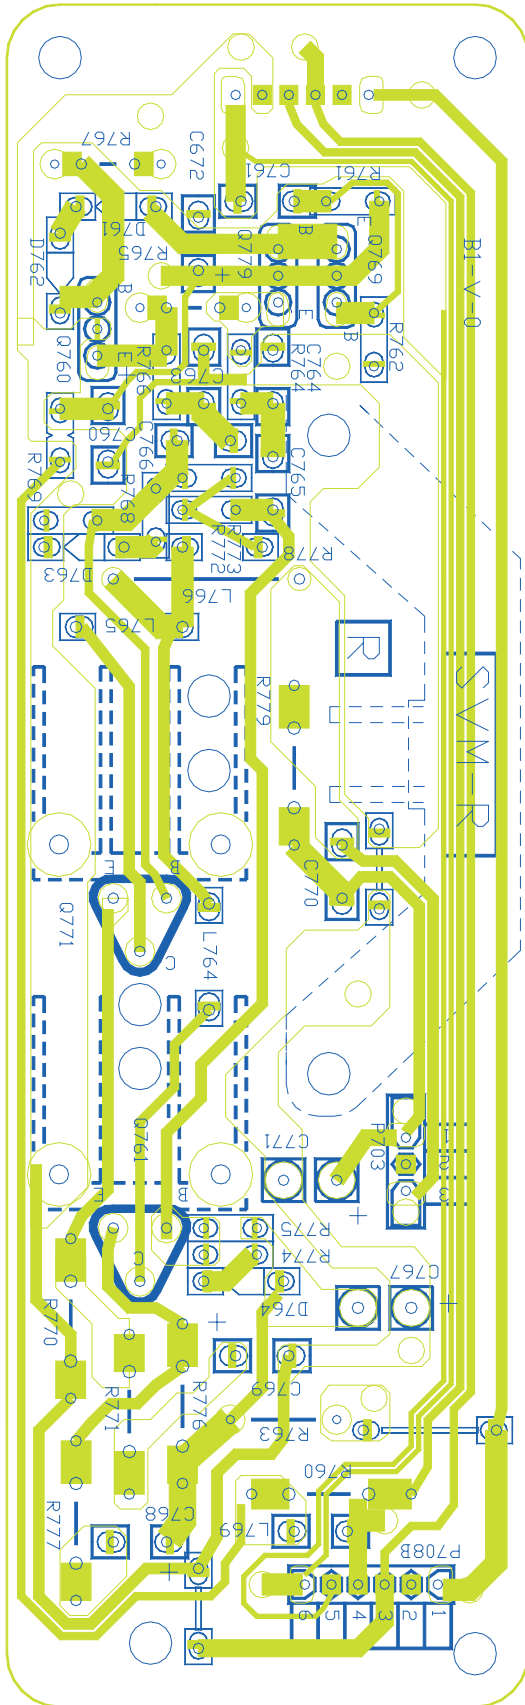


**SVM-G BOARD PB9586-5**  
**BOTTOM (FOIL) SIDE**

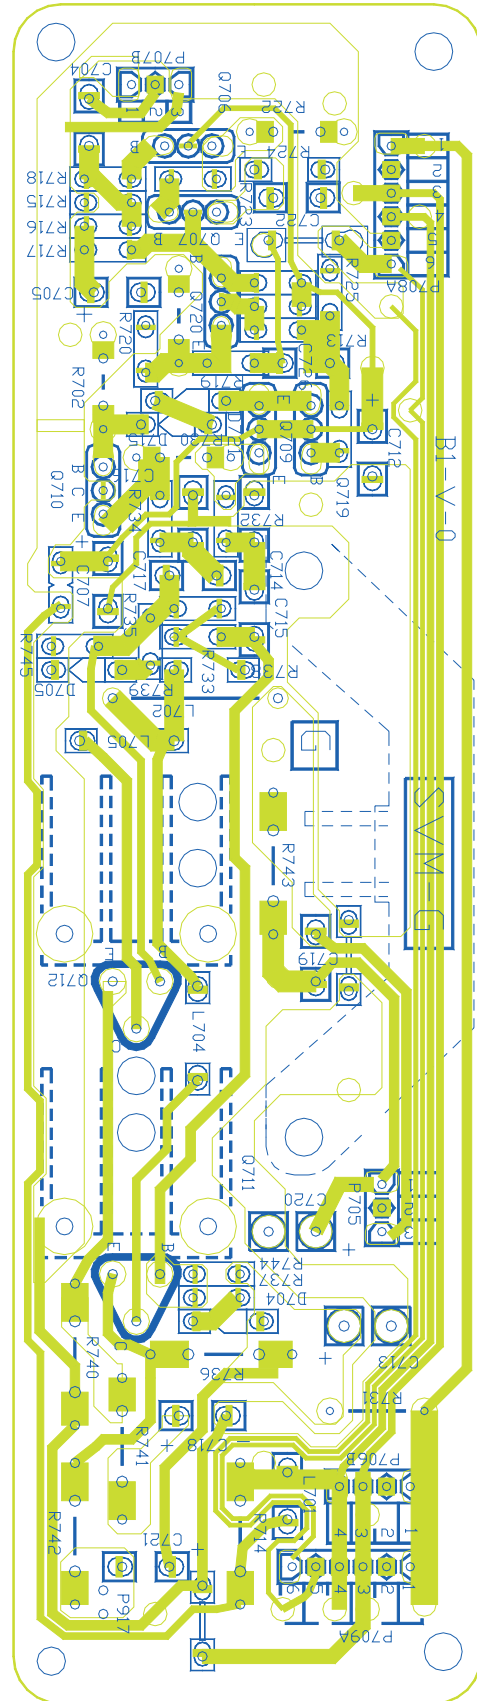


**SVM-B BOARD PB9586-6**  
**BOTTOM (FOIL) SIDE**

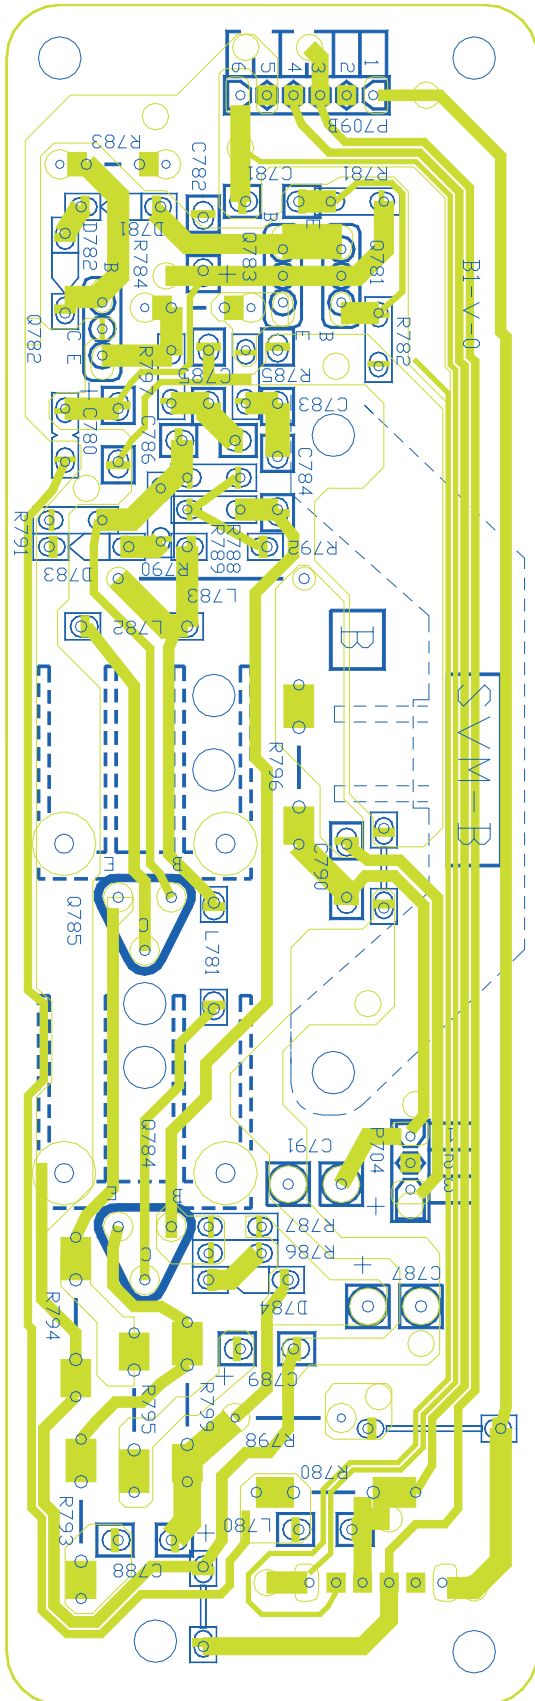


**FRONT-CON BOARD PB9615-1**  
**BOTTOM (FOIL) SIDE**

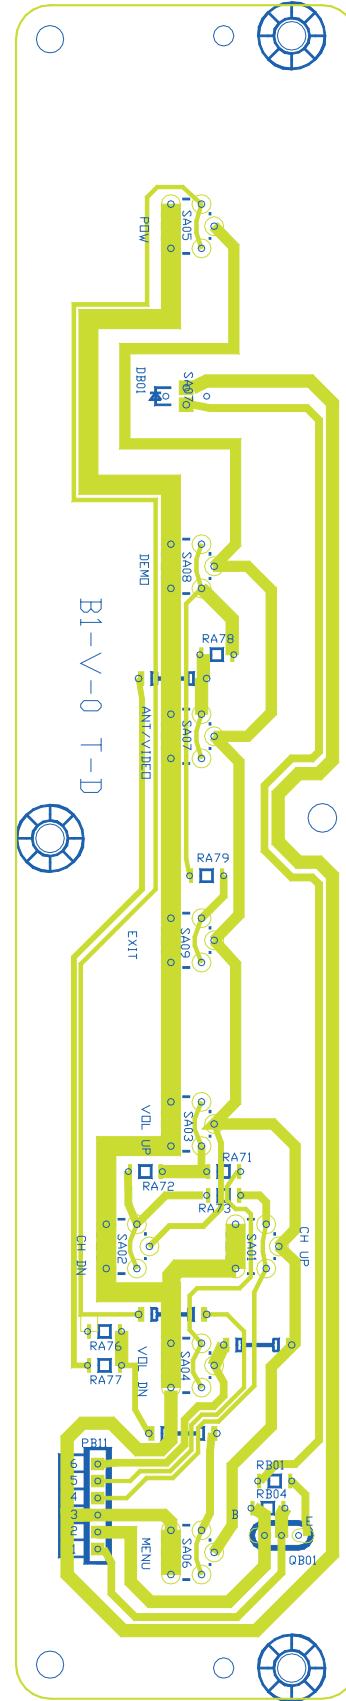


**SRS BOARD PB9587**  
**BOTTOM (FOIL) SIDE**

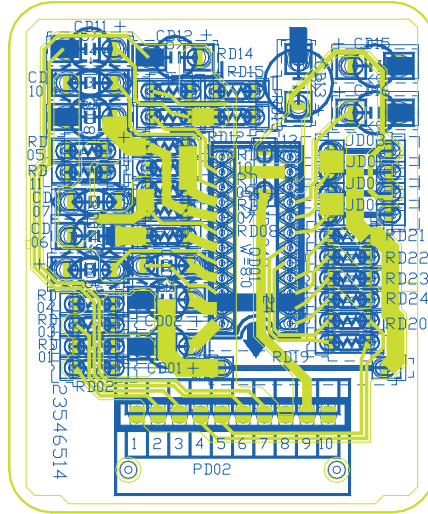

**FRONT-IN BOARD PB9615-2**  
**BOTTOM (FOIL) SIDE**

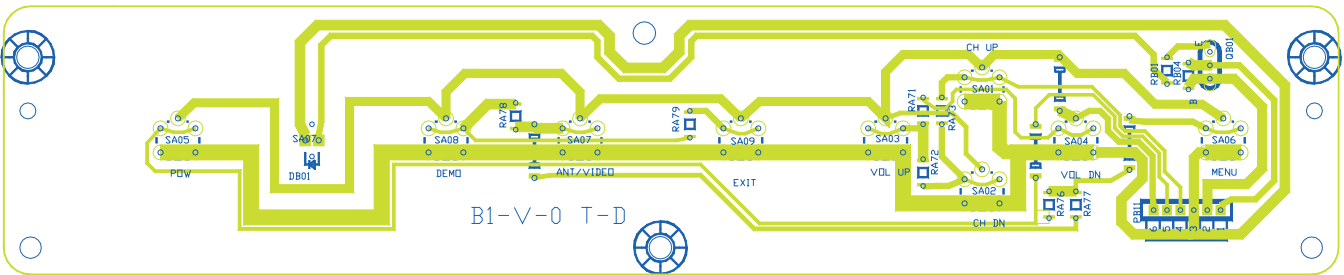


**REM BOARD PB9615-3**  
**BOTTOM (FOIL) SIDE**

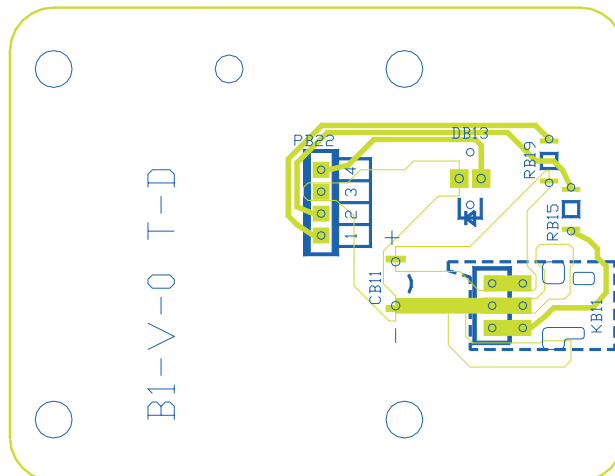


# TERMINAL VIEW OF TRANSISTORS

① 2SC5144



② 2SC3852  
2SD1763A  
2SC1569  
2SC4544  
2SA1788  
2SA1306  
2SA1186A




③ 2SC752GTM  
2SC2482  
2SC2655  
2SC4721P




④ 2SC752  
2SA562TM  
2SA1015  
2SC1815  
2SC2878  
2SC1740S  
2SC2120  
2SA9335




⑤ 2SA1788




⑥ RN2203  
RN2201  
RN2004  
RN1203  
RN1204  
RN2204  
RN1205  
RN1202  
RN1201



⑦ 2SD1554  
2SD2253  
2SD1556  
2SD2553  
2SC5143



⑧ ON4409





<b>SPECIFICATIONS (Representative: 61HX70)</b>							
TELEVISION SYSTEM	NTSC standard						
CHANNEL COVERAGE	VHF: 2 through 13 UHF: 14 through 69 Cable TV: Mid band (A-8 through A-1, A through I) Super band (J through W) Hyper band (AA through ZZ, AAA, BBB) Ultra band (65 through 94, 100 through 125)						
POWER SOURCE	120 V AC, 60 Hz						
POWER CONSUMPTION	195W (Approx.)						
AUDIO POWER	14 W + 14 W						
SPEAKER TYPE	Two 6-1/4 inches (16 cm) round						
VIDEO/AUDIO TERMINALS	<p>S-VIDEO INPUT Y-INPUT: 1V (p-p), 75 ohm, negative sync. C-INPUT: 0.286 V(p-p) (burst signal), 75 ohm</p> <p>VIDEO/AUDIO INPUT VIDEO: 1 V(p-p), 75 ohm, negative sync. AUDIO: 150 mV(rms) (30% modulation equivalent, 47 kohm)</p> <p>ColorStream™ (Color Difference) VIDEO, AUDIO INPUT Y-INPUT: 1 V(p-p), 75 ohm Pr-INPUT: 0.7 V(p-p), 75 ohm Pb-INPUT: 0.7 V(p-p), 75 ohm AUDIO: 150mV(rms). 47 kohm</p> <p>VIDEO/AUDIO OUTPUT VIDEO: 1 V(p-p), 75 ohm, negative sync. AUDIO: 150 mV(rms) (30% modulation equivalent, 4.7 kohm)</p> <p>VARIABLE AUDIO OUTPUT 0-300 mV(rms) (30% modulation equivalent, 4.7 kohm)</p> <p>AUDIO CENTER CHANNEL INPUT 300 mV(rms) (30% modulation equivalent, 10 kohm)</p>						
DIMENSIONS/MASS	<table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th style="width: 15%;"></th> <th style="width: 60%;">Dimension (W/H/D)</th> <th style="width: 25%;">Mass</th> </tr> </thead> <tbody> <tr> <td style="text-align: center;">61HX70</td> <td style="text-align: center;">51-1/16 x 60-9/16 x 25-9/16 inches (1,297 x 1,539 x 649 mm)</td> <td style="text-align: center;">288 lbs (130.9 kg)</td> </tr> </tbody> </table>		Dimension (W/H/D)	Mass	61HX70	51-1/16 x 60-9/16 x 25-9/16 inches (1,297 x 1,539 x 649 mm)	288 lbs (130.9 kg)
	Dimension (W/H/D)	Mass					
61HX70	51-1/16 x 60-9/16 x 25-9/16 inches (1,297 x 1,539 x 649 mm)	288 lbs (130.9 kg)					
SUPPLIED ACCESSORIES	Remote Control with 2 size "AA" alkaline batteries						

\*Please refer to owner's manual in detail.

**TOSHIBA CORPORATION**  
1-1, SHIBAURA 1-CHOME, MINATO-KU, TOKYO 105-8001, JAPAN