



VM3640

ARBITRARY WAVEFORM GENERATOR

USER'S MANUAL

82-0038-000

Release Decmeber 16, 2003

VXI Technology, Inc.

**2031 Main Street
Irvine, CA 92614-6509
(949) 955-1894**



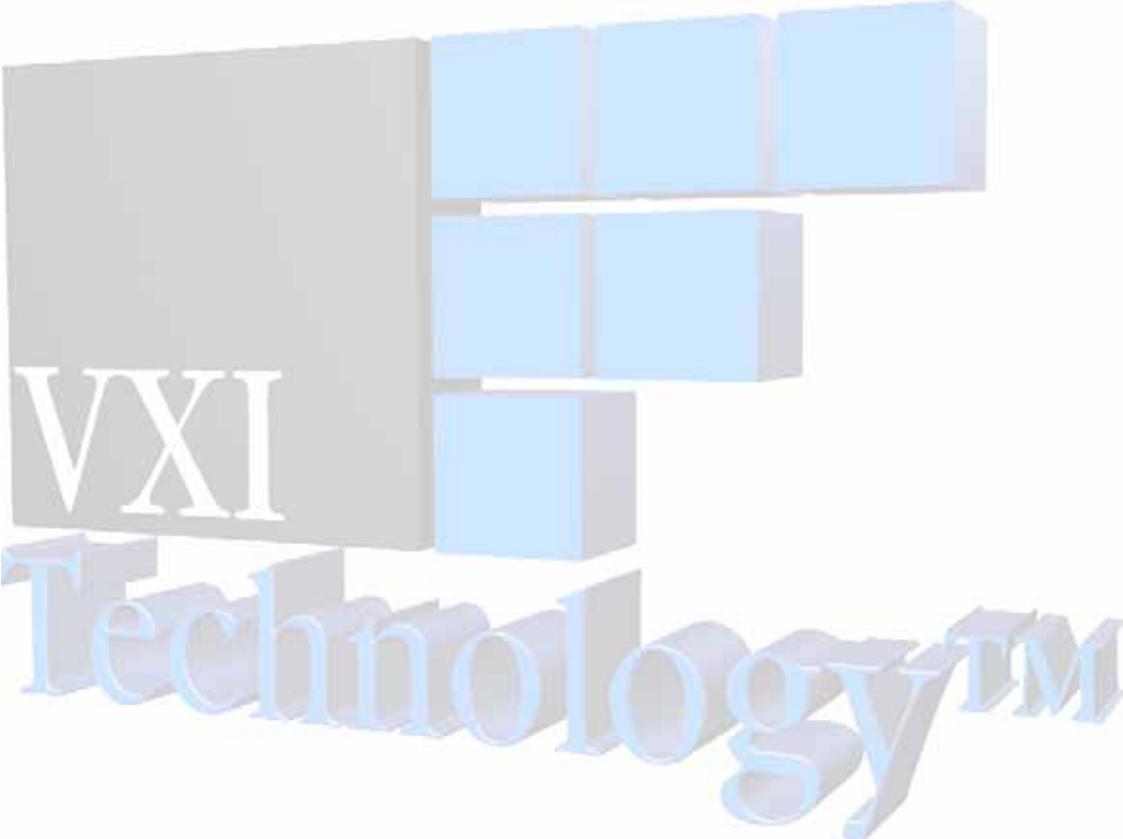


TABLE OF CONTENTS

INTRODUCTION

Certification	6
Warranty	6
Limitation of Warranty	6
Restricted Rights Legend	6
DECLARATION OF CONFORMITY	7
GENERAL SAFETY INSTRUCTIONS	9
Terms and Symbols	9
Warnings	9
SUPPORT RESOURCES	11
SECTION 1	13
INTRODUCTION	13
Introduction	13
Programming	14
Calibration	14
Front Panel Connectors	15
Clock In/Out	15
Trigger Input	15
Marker Output	15
Modulation Input	15
Horizontal Sweep Output	15
Main Output	15
VM3640 Specifications	16
SECTION 2	19
PREPARATION FOR USE	19
Installation	19
Calculating System Power and Cooling Requirements	19
Setting the Chassis Backplane Jumpers	20
Setting the Logical Address	20
SECTION 3	21
PROGRAMMING	21
Introduction	21
Notation	22
REGISTER ACCESS	23
Loading and Running a User-Defined Waveform	24
SECTION 4	25
COMMAND DICTIONARY	25
Introduction	25
Alphabetical Command Listing	25
Command Dictionary	30
COMMON IEEE 488.2 COMMANDS	31
*CLS	31
*ESE	32
*ESR?	33
*IDN?	34
*OPC	35
*RST	36
*SRE	37
*STB?	38
*TRG	39
*TST?	40
*WAI	41

INSTRUMENT SPECIFIC SCPI COMMANDS.....	42
AM[:STATe].....	42
CALibration:COUNt?.....	43
CALibration[:DATA].....	44
CALibration[:DATA]:AFCorrection.....	45
CALibration[:DATA]:AMPLitude[:GAIN].....	46
CALibration[:DATA]:AMPLitude:OFFSet.....	47
CALibration[:DATA]:DUTY.....	48
CALibration[:DATA]:OFFSet[:GAIN].....	49
CALibration[:DATA]:OFFSet:OFFSet.....	50
CALibration[:DATA]:SQHI.....	51
CALibration[:DATA]:SQUare:OFFSet:OFFSet.....	52
CALibration[:DATA]:ZERO.....	53
CALibration:DC:LEVel.....	54
CALibration:SECurity:CODE.....	55
CALibration:SECurity:STATe.....	56
CALibration:STATe.....	57
CALibration:STORE.....	58
FSK[:STATe].....	59
PSK[:STATe].....	60
RESet.....	61
SENSe:CORRection:IMPedance.....	62
[SOURce:]BURSt:COUNt.....	63
[SOURce:]BURSt:PHASe.....	64
[SOURce:]BURSt:RATE.....	65
[SOURce:]BURSt[:STATe].....	66
[SOURce:]CLOCK:CONFigure.....	67
[SOURce:]FREQUency[:CW].....	68
[SOURce:]FUNctIon:DC:VOLTagE.....	69
[SOURce:]FUNctIon:PULSe:WIDTh.....	70
[SOURce:]FUNctIon[:SHAPE].....	71
[SOURce:]FUNctIon:SQUare[:DUTY].....	72
[SOURce:]FUNctIon:USER:DIRectory?.....	73
[SOURce:]FUNctIon:USER:FREE?.....	74
[SOURce:]FUNctIon:USER[:NAME].....	75
[SOURce:]FUNctIon:USER:WAVE.....	76
[SOURce:]MARKer:POLarity.....	77
[SOURce:]MARKer:POSition.....	78
[SOURce:]MARKer:SOURce.....	79
[SOURce:]MARKer[:STATe].....	80
[SOURce:]OUTPut:FILTer[:LPASs][:STATe].....	81
[SOURce:]OUTPut:FILTer[:LPASs]:TYPE.....	82
[SOURce:]OUTPut[:STATe].....	83
[SOURce:]ROSC:SOURce.....	84
[SOURce:]SWEep:COUNt.....	85
[SOURce:]SWEep:DIRectIon.....	86
[SOURce:]SWEep:MODE.....	87
[SOURce:]SWEep:POINts.....	88
[SOURce:]SWEep:SPACing.....	89
[SOURce:]SWEep:START.....	90
[SOURce:]SWEep:STOP.....	91
[SOURce:]SWEep[:STATe].....	92
[SOURce:]SWEep:TIME.....	93
[SOURce:]SYNC:MODE.....	94
[SOURce:]SYNC[:STATe].....	95
[SOURce:]TRIGger:GATE.....	96
[SOURce:]TRIGger[:MODE].....	97

[SOURce:]TRIGger:POLarity	98
[SOURce:]TRIGger:RATE	99
[SOURce:]TRIGger:TTLT	100
[SOURce:]VOLTage[:LEVel][:AMPLitude]	101
[SOURce:]VOLTage[:LEVel]:OFFSet	102
TEST[:ALL]?	103
TEST:RAM?	104
REQUIRED SCPI COMMANDS	105
STATus:OPERation:CONDition?	105
STATus:OPERation:ENABle	106
STATus:OPERation[:EVENT]?	107
STATus:PRESet	108
STATus:QUEStionable:CONDition?	109
STATus:QUEStionable:ENABle	110
STATus:QUEStionable[:EVENT]?	111
SYSTem:ERRor?	112
SYSTem:VERSion?	113
INDEX	114

CERTIFICATION

VXI Technology, Inc. (VTI) certifies that this product met its published specifications at the time of shipment from the factory. VTI further certifies that its calibration measurements are traceable to the United States National Institute of Standards and Technology (formerly National Bureau of Standards), to the extent allowed by that organization's calibration facility, and to the calibration facilities of other International Standards Organization members.

WARRANTY

The product referred to herein is warranted against defects in material and workmanship for a period of three years from the receipt date of the product at customer's facility. The sole and exclusive remedy for breach of any warranty concerning these goods shall be repair or replacement of defective parts, or a refund of the purchase price, to be determined at the option of VTI.

For warranty service or repair, this product must be returned to a VXI Technology authorized service center. The product shall be shipped prepaid to VTI and VTI shall prepay all returns of the product to the buyer. However, the buyer shall pay all shipping charges, duties, and taxes for products returned to VTI from another country.

VTI warrants that its software and firmware designated by VTI for use with a product will execute its programming when properly installed on that product. VTI does not however warrant that the operation of the product, or software, or firmware will be uninterrupted or error free.

LIMITATION OF WARRANTY

The warranty shall not apply to defects resulting from improper or inadequate maintenance by the buyer, buyer-supplied products or interfacing, unauthorized modification or misuse, operation outside the environmental specifications for the product, or improper site preparation or maintenance.

VXI Technology, Inc. shall not be liable for injury to property other than the goods themselves. Other than the limited warranty stated above, VXI Technology, Inc. makes no other warranties, express or implied, with respect to the quality of product beyond the description of the goods on the face of the contract. VTI specifically disclaims the implied warranties of merchantability and fitness for a particular purpose.

RESTRICTED RIGHTS LEGEND

Use, duplication, or disclosure by the Government is subject to restrictions as set forth in subdivision (b)(3)(ii) of the Rights in Technical Data and Computer Software clause in DFARS 252.227-7013.

VXI Technology, Inc.
2031 Main Street
Irvine, CA 92614-6509 U.S.A.

DECLARATION OF CONFORMITY

Declaration of Conformity According to ISO/IEC Guide 22 and EN 45014

MANUFACTURER'S NAME	VXI Technology, Inc.
MANUFACTURER'S ADDRESS	2031 Main Street Irvine, California 92614-6509
PRODUCT NAME	Arbitrary Waveform Generator
MODEL NUMBER(S)	VM3640
PRODUCT OPTIONS	All
PRODUCT CONFIGURATIONS	All

VXI Technology, Inc. declares that the aforementioned product conforms to the requirements of the Low Voltage Directive 73/23/EEC and the EMC Directive 89/366/EEC (inclusive 93/68/EEC) and carries the "CE" mark accordingly. The product has been designed and manufactured according to the following specifications:


SAFETY	EN61010 (2001)
EMC	EN61326 (1997 w/A1:98) Class A CISPR 22 (1997) Class A VCCI (April 2000) Class A ICES-003 Class A (ANSI C63.4 1992) AS/NZS 3548 (w/A1 & A2:97) Class A FCC Part 15 Subpart B Class A EN 61010-1:2001

The product was installed into a C-size VXI mainframe chassis and tested in a typical configuration.

I hereby declare that the aforementioned product has been designed to be in compliance with the relevant sections of the specifications listed above as well as complying with all essential requirements of the Low Voltage Directive.

December 2003




Jerry Patton, QA Manager

GENERAL SAFETY INSTRUCTIONS

Review the following safety precautions to avoid bodily injury and/or damage to the product. These precautions must be observed during all phases of operation or service of this product. Failure to comply with these precautions, or with specific warnings elsewhere in this manual, violates safety standards of design, manufacture, and intended use of the product.

Service should only be performed by qualified personnel.

TERMS AND SYMBOLS

These terms may appear in this manual:

WARNING Indicates that a procedure or condition may cause bodily injury or death.

CAUTION Indicates that a procedure or condition could possibly cause damage to equipment or loss of data.

These symbols may appear on the product:



ATTENTION - Important safety instructions



Frame or chassis ground

WARNINGS

Follow these precautions to avoid injury or damage to the product:

Use Proper Power Cord To avoid hazard, only use the power cord specified for this product.

Use Proper Power Source To avoid electrical overload, electric shock, or fire hazard, do not use a power source that applies other than the specified voltage.

Use Proper Fuse To avoid fire hazard, only use the type and rating fuse specified for this product.

WARNINGS (CONT.)**Avoid Electric Shock**

To avoid electric shock or fire hazard, do not operate this product with the covers removed. Do not connect or disconnect any cable, probes, test leads, etc. while they are connected to a voltage source. Remove all power and unplug unit before performing any service. ***Service should only be performed by qualified personnel.***

Ground the Product

This product is grounded through the grounding conductor of the power cord. To avoid electric shock, the grounding conductor must be connected to earth ground.

Operating Conditions

To avoid injury, electric shock or fire hazard:

- Do not operate in wet or damp conditions.
- Do not operate in an explosive atmosphere.
- Operate or store only in specified temperature range.
- Provide proper clearance for product ventilation to prevent overheating.
- DO NOT operate if any damage to this product is suspected. ***Product should be inspected or serviced only by qualified personnel.***

Improper Use

The operator of this instrument is advised that if the equipment is used in a manner not specified in this manual, the protection provided by the equipment may be impaired. Conformity is checked by inspection.

SUPPORT RESOURCES

Support resources for this product are available on the Internet and at VXI Technology customer support centers.

VXI Technology World Headquarters

VXI Technology, Inc.
2031 Main Street
Irvine, CA 92614-6509

Phone: (949) 955-1894
Fax: (949) 955-3041

VXI Technology Cleveland Instrument Division

VXI Technology, Inc.
7525 Granger Road, Unit 7
Valley View, OH 44125

Phone: (216) 447-8950
Fax: (216) 447-8951

VXI Technology Lake Stevens Instrument Division

VXI Technology, Inc.
1924 - 203 Bickford
Snohomish, WA 98290

Phone: (425) 212-2285
Fax: (425) 212-2289

Technical Support

Phone: (949) 955-1894
Fax: (949) 955-3041
E-mail: support@vxitech.com



Visit <http://www.vxitech.com> for worldwide support sites and service plan information.

SECTION 1

INTRODUCTION

INTRODUCTION

The VM3640 is a high-performance VXIbus arbitrary waveform generator. It is ideal for applications requiring standard function generator capability, or the need to generate user-defined waveforms. Standard sine and square waves are available to 20 MHz.

The most powerful feature of the VM3640 is that it is a member of the VXI Technology VMIP™ (*VXI Modular Instrumentation Platform*) family of VXIbus products. This gives the user the added flexibility of combining it with other instruments, such as digital multimeters or digitizers, to create a multi-function C-size card. The VM3640 may be combined with any of the other members of the VMIP™ family to form a customized and highly integrated instrument (see Figure 1-1). This allows the user to reduce system size and cost by combining the VM3640 with two other instrument functions in a single-wide C-size VXIbus module. Up to three VM3640s can also be combined together on a single VXIbus card, making it an ideal choice for applications that require multi-signal sources, such as in automotive or medical electronic test.

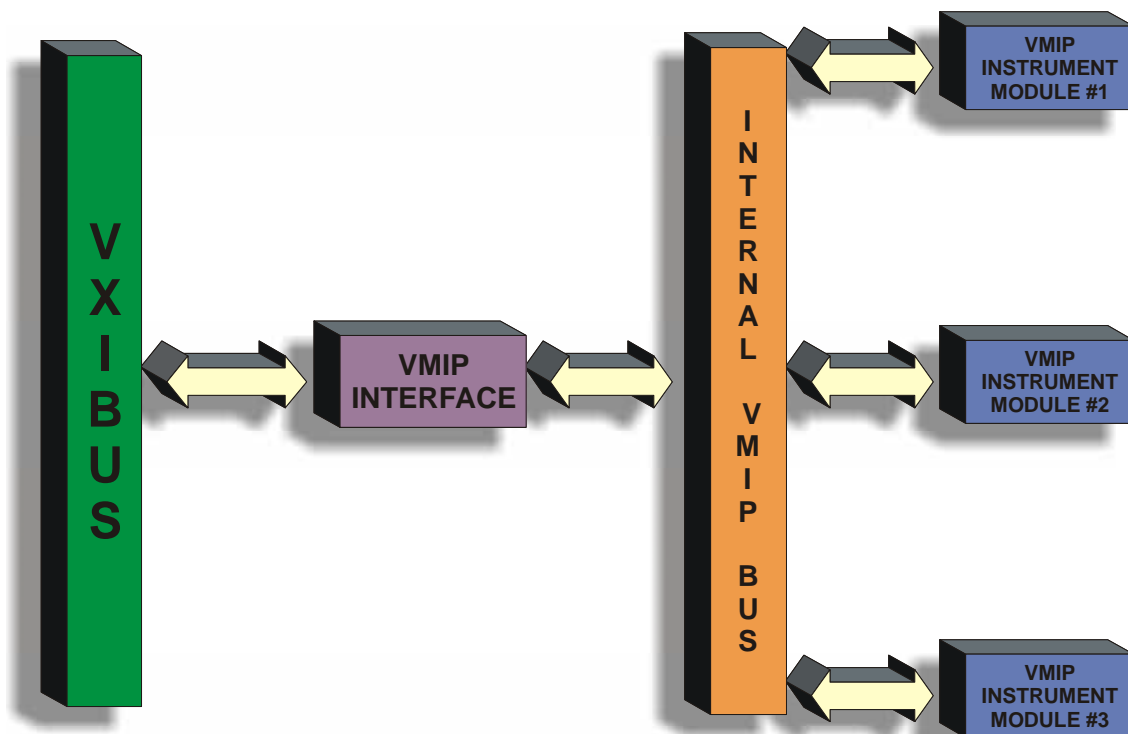


FIGURE 1-1: VMIP™ PLATFORM

Each arbitrary waveform generator is treated as an independent instrument in the VXIbus chassis. Each has its own Unique Logical Address and its own front panel FAIL and ACCESS indicators.

PROGRAMMING

The VM3640 is programmed using message-based word serial protocol. The commands are SCPI and IEEE-STD-488.2 compatible. *VXIplug&play* drivers are also provided to further ease programming.

CALIBRATION

The calibration constants used to correct the data values are stored in non-volatile memory and are password protected for security. These constants are determined when the instrument is calibrated and can be changed as necessary. These constants may also be queried at any time via a word-serial query, and altered via a word-serial command (with the password). All calibration is done using calibration DACs to adjust the gain and offset of each channel. This eliminates the need for removing covers from the unit and allows for automated calibration.

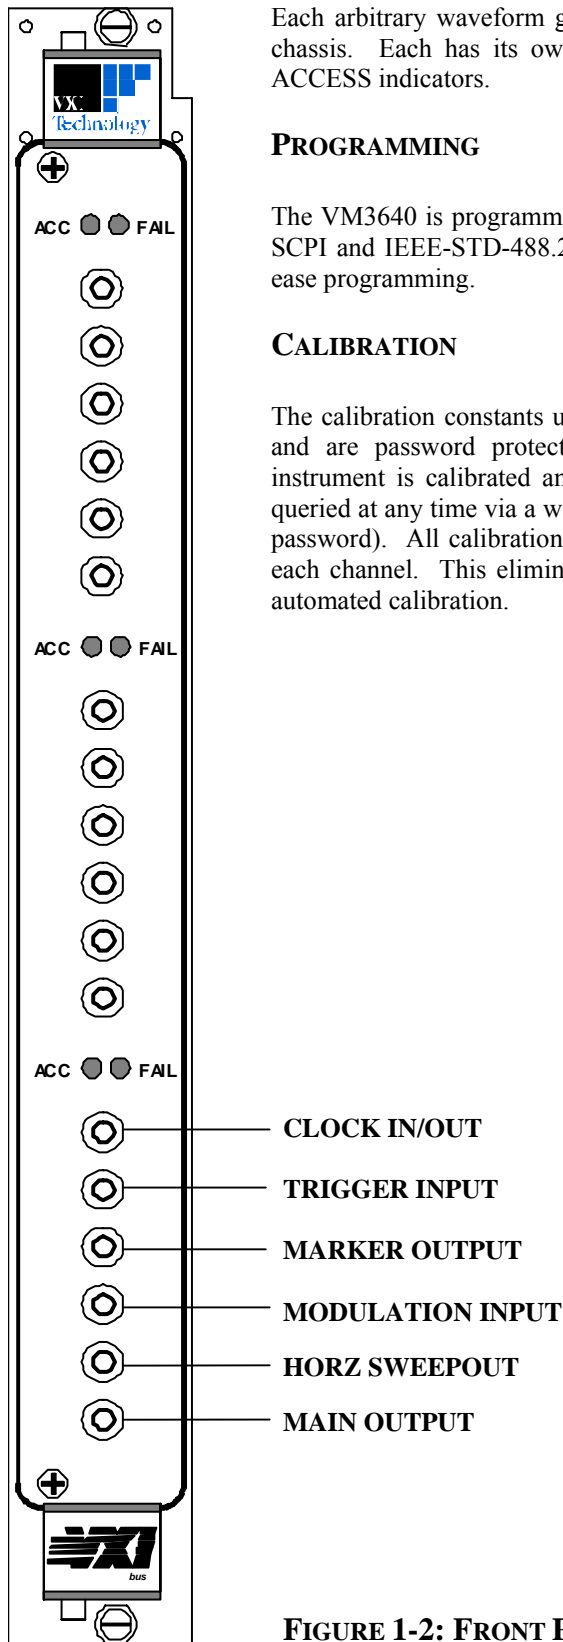


FIGURE 1-2: FRONT PANEL LAYOUT

FRONT PANEL CONNECTORS

Clock In/Out

The Clock In/Out connector serves as both an input and an output and provides access to the reference clock of the instrument. If the internal reference source is used, it can be accessed using the `[SOURce:]CLOCK:CONFigure` command. If an externally produced signal is to be used as a reference source, the source must be selected using the `[SOURce:]TRIGger[:MODE]` command.

Trigger Input

The Trigger Input connector is used to synchronize the VM3640 with other instruments. To select an external trigger source, use the `[SOURce:]TRIGger[:MODE]` command.

Marker Output

The Marker Output connector is used to synchronize to the output of the generator. The marker can be enabled or disabled using the `[SOURce:]MARKer[:STATe]` command. The `[SOURce:]MARKer:SOURce` command can be used to select the marker source.

Modulation Input

This connector input is used during amplitude modulation, frequency shift keying and phase shift keying. During amplitude modulation, the modulation input is added to the output signal. In frequency and phase shift keying, the modulation input acts as the keying signal.

Horizontal Sweep Output

This output is only available in sweep mode. The horizontal sweep output ramps from zero volts at the beginning of a sweep cycle to 5 volts at the end of a sweep cycle. It is intended to provide the user with a representation of the progress through the sweep. The slope of the horizontal sweep output is linear, regardless of the sweep mode selected.

Main Output

This is the main output from the function generator.

VM3640 SPECIFICATIONS

GENERAL SPECIFICATIONS	
WAVEFORMS	
Built-In	Sine Square Triangle Noise Pulse Sinc Cardiac DC Positive/Negative Ramp Exponential Rise/Fall
LENGTH	
Standard Patterns	4 k (4096) samples
User Patterns	Minimum of 8 samples Maximum limited to available memory (122,880 samples maximum) (Up to sixteen user defined patterns may be defined depending on the amount of pattern RAM)
RESOLUTION	
	12 bits (including sign)
SAMPLE RATE	
	50 MSamples/s
FREQUENCY	
Sine	0.1 Hz to 20 MHz Total harmonic distortion on sine wave no greater than 0.5%
Square	0.1 Hz to 20 MHz Rise/Fall time no greater than 20 ns with maximum aberrations < 5%
All Other Waveforms	0.1 Hz to 1 MHz
Resolution	8 digits limited by 0.1 Hz for sine/square 5 digits for all other waveforms
Accuracy	Same as VXICLK10 ($\pm 0.01\%$ typical, can be improved by using an external reference, i.e. VM3000)
AMPLITUDE	
Range	
DC Voltage	-6 V _{peak} to +6 V _{peak} into 50 Ω
Pulsed DC	-6 V _{peak} to +6 V _{peak} into 50 Ω
Sine/Square	
0.1 MHz – 10.0 MHz	10 V _{p-p} into 50 Ω
10.0 MHz – 20.0 MHz	5 V _{p-p} into 50 Ω
All Other Waveforms	10 V _{p-p} into 50 Ω
Output Impedance	50 Ω
Resolution	3.5 digits
Accuracy	$\pm 1\%$
OUTPUT OFFSET	
Range	
DC Voltage	-3 V to +3 V, Offset + Amplitude cannot exceed ± 6 V
Pulsed DC	-3 V to +3 V, Offset + (Amplitude / 2) cannot exceed ± 3.5 V
Sine/Square	
0.1 MHz– 10.0 MHz	-3 V to +3 V, Offset + Amplitude cannot exceed 6 V
10.0 MHz – 20.0 MHz	-3 V to +3 V, Offset + Amplitude cannot exceed 4 V
All Other Waveforms	-3 V to +3 V, Offset + Amplitude cannot exceed 6 V

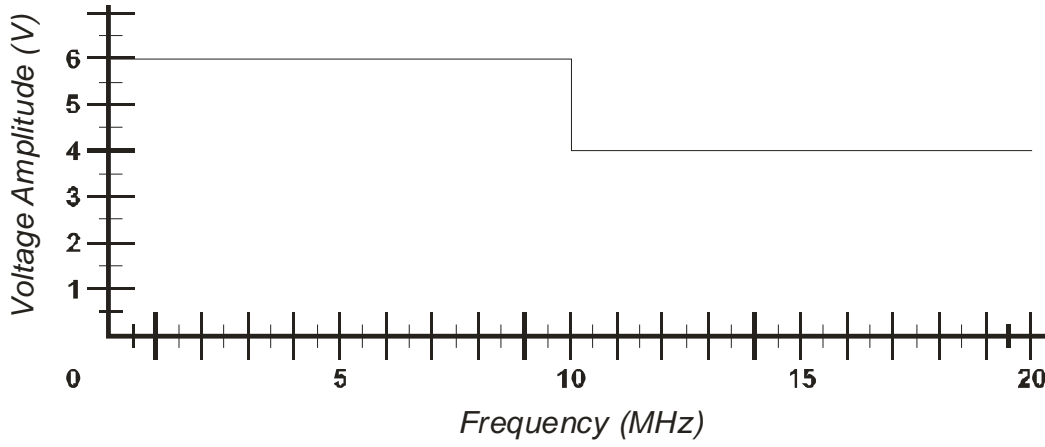


FIGURE 1-3: VOLTAGE VS. FREQUENCY - SINE AND SQUARE WAVES

Note The frequency limit for all other waveforms is 1 MHz.

SECTION 2

PREPARATION FOR USE

INSTALLATION

When the VM3640 is unpacked from its shipping carton, the contents should include the following items:

- (1) VM3640 VXIbus module
- (1) VM3640 Arbitrary waveform Generator User's Manual (this manual)

All components should be immediately inspected for damage upon receipt of the unit.

Once the VM3640 is assessed to be in good condition, it may be installed into an appropriate C-size or D-size VXIbus chassis in any slot other than slot zero. The chassis should be checked to ensure that it is capable of providing adequate power and cooling for the VM3640. Once the chassis is found adequate, the VM3640's logical address and the backplane jumpers of the chassis should be configured before the VM3640's installation.

CALCULATING SYSTEM POWER AND COOLING REQUIREMENTS

It is imperative that the chassis provide adequate power and cooling for this module. Referring to the chassis user's manual, confirm that the power budget for the system (the chassis and all modules installed therein) is not exceeded and that the cooling system can provide adequate airflow at the specified backpressure.



It should be noted that if the chassis cannot provide adequate power to the module, the instrument may not perform to specification or possibly not operate at all. In addition, if adequate cooling is not provided, the reliability of the instrument will be jeopardized and permanent damage may occur. Damage found to have occurred due to inadequate cooling would also void the warranty of the module.

SETTING THE CHASSIS BACKPLANE JUMPERS

Please refer to the chassis operation manual for further details on setting the backplane jumpers.

SETTING THE LOGICAL ADDRESS

The logical address of the VM3640 is set by a single 8-position DIP switch located near the VMIP module's backplane connectors (this is the only switch on the module). The switch is labeled with positions 1 through 8 and with an ON position. A switch pushed toward the ON legend will signify a logic 1; switches pushed away from the ON legend will signify a logic 0. The switch located at position 1 is the least significant bit while the switch located at position 8 is the most significant bit. See Figure 2-1 for examples of setting the logical address switch.

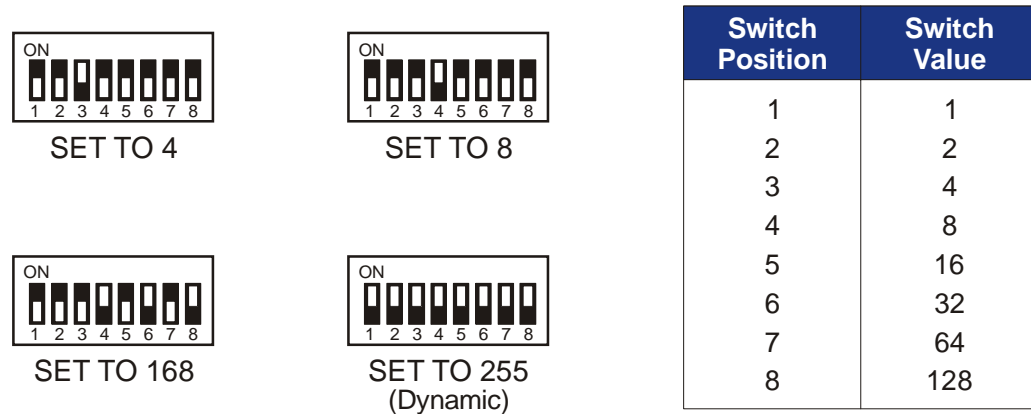


FIGURE 2-1: LOGICAL ADDRESS SWITCH SETTING EXAMPLES

The VMIP may contain three separate instruments and will allocate logical addresses as required by the VXIbus specification (revisions 1.3 and 1.4). The logical address of the instrument is set on the VMIP carrier. The VMIP logical addresses must be set to an even multiple of 4 *unless dynamic addressing is used*. Switch positions 1 and 2 must always be set to the OFF position. Therefore, only addresses of 4, 8, 12, 16, ...252 are allowed. The address switch should be set for one of these legal addresses and the address for the second instrument (the instrument in the center position) will automatically be set to the switch set address plus one; while the third instrument (the instrument in the lowest position) will automatically be set to the switch set address plus two. If dynamic address configuration is desired, the address switch should be set for a value of 255 (All switches set to ON). Upon power-up, the slot 0 resource manager will assign the first available logical addresses to each instrument in the VMIP module.

If dynamic address configuration is desired, the address switch should be set for a value of 255. (All switches set to ON). Upon power-up, the slot 0 resource manager will assign the first available logical addresses to each instrument in the VMIP module.

SECTION 3

PROGRAMMING

INTRODUCTION

The VM3640 is a VXIbus message-based device whose command set is compliant with the Standard Commands for Programmable Instruments (*SCPI*) programming language. All module commands are sent over the VXIbus backplane to the module. Commands may be in upper, lower or mixed case. All numbers are sent in ASCII decimal unless otherwise noted.

The SCPI programming language is a tree-structured language based on IEEE STD 488.2 Specifications. It utilizes the IEEE STD 488.2 Standard commands and the device dependent commands are structured to allow multiple branches off the same trunk to be used without repeating the trunk. To use this facility, terminate each branch with a semicolon. For example, **OFFSet:GAIN** and **OFFSet:OFFSet** are both branches off the **CALibration:** trunk and can be combined as follows:

```
CALibration:OFFSet:GAIN <value>;OFFSet <value>
```

The above command is the same as these two Commands

```
CALibration:OFFSet:GAIN <value>
CALibration:OFFSet:OFFSet <value>
```

See the *Standard Commands for Programmable Instruments (SCPI) Manual, Volume 1: Syntax & Style, Section 6*, for more information.

The SCPI commands in this section are listed in upper and lower case. Character case is used to indicate different forms of the same command. Keywords can have both a short form and a long form (some commands only have one form). The short form uses just the keyword characters in uppercase. The long form uses the keyword characters in uppercase plus the keyword characters in lowercase. Either form is acceptable. Note that there are no intermediate forms. All characters of the short form or all characters of the long form must be used. Short forms and long forms may be freely intermixed. The actual commands sent can be in upper case, lower case or mixed case (case is only used to distinguish short and long form for the user). As an example, these commands are all correct and all have the same effect:

```
CALibration:OFFSet:GAIN <value>
calibration:offset:gain <value>
CALIBRATION:OFFSET:GAIN <value>
CAL:OFFSet:GAIN <value>
CAL:OFFS:GAIN <value>
cal:offs:gain <value>
```

The following command is **not** correct because it uses part of the long form of **CALibration**, but not all the characters of the long form:

```
calib:offs:gain <value>
```

Incorrect syntax - extra "ib" - only cal or calibration is correct

All of the SCPI commands also have a query form unless otherwise noted. Query forms contain a question mark (?). The query form allows the system to ask what the current setting of a parameter is. The query form of the command generally replaces the parameter with a question mark (?). Query responses do not include the command header. This means only the parameter is returned: no part of the command or "question" is returned.

NOTATION

Keywords or parameters enclosed in square brackets ([]) are optional. If the optional part is a keyword, the keyword can be included or left out. Omitting an optional parameter will cause its default to be used.

Parameters are enclosed by angle brackets (< >). Braces ({ }), or curly brackets, are used to enclose one or more parameters that may be included zero or more times. A vertical bar (|), read as "or", is used to separate parameter alternatives.

REGISTER ACCESS

The VM3640 module supports direct register access for high-speed data transfer. The following table shows the A16 Memory Map.

TABLE 3-1: A16 MEMORY MAP

3E	
3C	
3A	
38	
36	
34	
32	
30	
2E	
2C	
2A	
28	
26	
24	
22	
20	Data Register - 16 Bit
1E	
1C	
1A	
18	
16	[A32 Pointer Low]
14	[A32 Pointer High]
12	[A24 Pointer Low]
10	[A24 Pointer High]
E	Data Low
C	Data High
A	Response [/Data Extended]
8	Protocol [/Signal] Register
6	[Offset Register]
4	Status / Control Register
2	Device Type
0	ID Register

LOADING AND RUNNING A USER-DEFINED WAVEFORM

There are four main steps to setting up, and running, a User-Defined Waveform:

1. Define the waveform name and size by word serial command.

Example: `func:user:wave #213wavename,1024`

defines a user waveform named 'wavename' that is 1024 samples long

2. Download the waveform data using bus access/out register data transfer.

Example: `user offset 0x20`

3. Select the downloaded waveform by word serial command.

Example: `func:user:name #18wavename`

4. Select the 'user' waveform by word serial command.

Example: `output on`
`func user`

SECTION 4

COMMAND DICTIONARY

INTRODUCTION

This section presents the instrument command set. It begins with three alphabetical listings of all the commands supported by the VM3640: IEEE 488.2 commands, the instrument specific or device dependent SCPI commands, and the required SCPI commands. Each listing includes a brief description of each command function.

The remainder of this section is devoted to describing each command, one per page, in detail. The description is presented in a way to assist the user in the use of each command. Every command entry describes the exact command and/or query syntax, the use and range of parameters, and a description of the command's purpose.

ALPHABETICAL COMMAND LISTING

The following tables provide an alphabetical listing of each command supported by the VM3640 along with a brief definition. If an X is found in the column titled ***RST**, then the value or setting controlled by this command is possibly changed by the execution of the ***RST** command. If no X is found, then ***RST** has no effect. The **Reset Value** column gives the value of each command's setting when the unit is powered up or when a ***RST** command is executed.

The following table lists the IEEE 488.2 Common (*) Commands. *See the IEEE Standard 488.2 for more information on these commands.*

TABLE 4-1: IEEE 488.2 COMMON COMMANDS

Command	Description	*RST	Reset Value
*CLS	Clears the Status Register		N/A
*ESE	Sets the Standard Event Status Register		N/A
*ESR?	Query the Standard Event Status Register		N/A
*IDN?	Query the module identification string		N/A
*OPC	Set the OPC bit in the Event Status Register		N/A
*RST	Resets the module to a known state		N/A
*SRE	Set the service request enable register		N/A
*STB?	Query the Status Byte Register		N/A
*TRG	Causes a trigger event to occur		N/A
*TST?	Starts and reports a self-test procedure		N/A
*WAI	Halts execution and queries		N/A

TABLE 4-2: INSTRUMENT SPECIFIC SCPI COMMANDS

Command	Description	*RST	Reset Value
AM[:STATe]	Enables or disables the Amplitude Modulation input	*	0
CALibration:COUNt?	Tracks the number of times calibration has been performed		N/A
CALibration[:DATA]	Sets the calibration constants		N/A
CALibration[:DATA]:AFCorrection	Sets the amplitude gain correction		N/A
CALibration[:DATA]:AMPLitude[:GAIN]	Directly sets the amplitude gain correction		N/A
CALibration[:DATA]:AMPLitude:OFFSet	Directly sets the offset of the amplitude control		N/A
CALibration[:DATA]:DUTY	Calibration for square wave duty cycle		N/A
CALibration[:DATA]:OFFSet[:GAIN]	Directly sets the offset gain correction		N/A
CALibration[:DATA]:OFFSet:OFFSet	Directly sets the output offset voltage control offset		N/A
CALibration[:DATA]:SQHI	Sets square wave amplitude correction		N/A
CALibration[:DATA]:SQUare:OFFSet:OFFSet	Square wave offset adjustment for calibration		N/A
CALibration[:DATA]:ZERO	Zero adjust for the output multiplexer		N/A
CALibration:DC:LEVel	Directly sets the DC level calibration point specified in the command		N/A
CALibration:SECurity:CODE	Sets the code required to disable calibration security		N/A
CALibration:SECurity:STATe	Enables or disables the calibration security	*	1
CALibration:STATe	Enables or disables corrections using calibration data	*	1
CALibration:STORE	Stores calibration data into non-volatile memory		N/A
FSK[:STATe]	Enables or disables Frequency Shift Key modulation input	*	0
PSK[:STATe]	Enables or disables Phase Shift Key modulation input	*	0
RESet	Resets all parameters to their default state		N/A
SENSe:CORRection:IMPedance	Allows the user to set the value of the load resistor connected to the output	*	50 Ω
[SOURce:]BURSt:COUNt	Sets the number of cycles per burst	*	1
[SOURce:]BURSt:PHASe	Sets the phase of the output waveform	*	0
[SOURce:]BURSt:RATE	Sets the burst repetition rate	*	100 Hz
[SOURce:]BURSt[:STATe]	Enables or disables burst mode	*	0
[SOURce:]CLOCK:CONFigure	Sets front panel clock BNC as an input or output	*	INP
[SOURce:]FREQUency[:CW]	Controls the frequency of the function output	*	1000 Hz
[SOURce:]FUNctIon:DC:VOLTage	Sets the DC output voltage	*	1 V
[SOURce:]FUNctIon:PULSe:WIDTh	Sets the pulse width	*	1 μ s
[SOURce:]FUNctIon[:SHAPE]	Selects the output waveform shape	*	SIN
[SOURce:]FUNctIon:SQUare[:DUTY]	Sets the duty cycle of the square wave function	*	50.0%
[SOURce:]FUNctIon:USER:DIRectory?	Lists the user-defined waveforms		N/A

Command	Description	*RST	Reset Value
[SOURce:]FUNctIon:USER:FREE?	Queries the amount of free space for user-defined waveforms		N/A
[SOURce:]FUNctIon:USER[:NAME]	Sets the output waveform shape to a user-defined waveform		N/A
[SOURce:]FUNctIon:USER:WAVE	Sets the name and stores a user-defined waveform		N/A
[SOURce:]MARkeR:POLarity	Sets the polarity for the output marker	*	POS
[SOURce:]MARkeR:POSition	Sets the marker to a specified point	*	0
[SOURce:]MARkeR:SOURce	Selects the source to generate the output marker	*	ZCRO
[SOURce:]MARkeR[:STATe]	Enables or disables the marker output	*	1
[SOURce:]OUTPut:FILTer[:LPASs][:STATe]	Enables or bypasses the output filter	*	1
[SOURce:]OUTPut:FILTer[:LPASs]:TYPE	Selects the output filter type	*	ELLiptical
[SOURce:]OUTPut[:STATe]	Enables or disables the MAIN OUT output	*	0
[SOURce:]ROSC:SOURce	Selects the source for the reference oscillator	*	PLL
[SOURce:]SWEep:COUNt	Sets the number of sweeps enabled per trigger event	*	0
[SOURce:]SWEep:DIRectIon	Sets the sweep direction	*	UP
[SOURce:]SWEep:MODE	Sets the sweep mode	*	CRESet
[SOURce:]SWEep:POINts	Sets the sweep points	*	100
[SOURce:]SWEep:SPACing	Sets the sweep spacing	*	LIN
[SOURce:]SWEep:STARt	Sets the starting sweep frequency	*	1000 Hz
[SOURce:]SWEep:STOP	Sets the ending sweep frequency	*	2000 Hz
[SOURce:]SWEep[:STATe]	Enables or disables the sweep function	*	0
[SOURce:]SWEep:TIME	Sets the sweep duration time	*	0.100 s
[SOURce:]SYNC:MODE	Selects the sync mode	*	MASTer
[SOURce:]SYNC[:STATe]	Enables or disables simultaneous sync mode	*	0
[SOURce:]TRIGger:GATE	Selects gate mode	*	0
[SOURce:]TRIGger[:MODE]	Selects the trigger source	*	IMM
[SOURce:]TRIGger:POLarity	Selects the polarity of the trigger signal	*	POS
[SOURce:]TRIGger:RATE	Sets the period for the internal trigger	*	100 Hz
[SOURce:]TRIGger:TTLT	Selects the backplane trigger line	*	0
[SOURce:]VOLTage[:LEVel][:AMPLitude]	Sets the signal output voltage	*	1.0 V _{P-P}
[SOURce:]VOLTage[:LEVel]:OFFSet	Sets the output voltage offset	*	0.0
TEST[:ALL]?	Performs a non-destructive test of the hardware		N/A
TEST:RAM?	Performs a destructive test of the Trace Memory		N/A

TABLE 4-3: REQUIRED SCPI COMMANDS

Command	Description	*RST	Reset Value
STATus:OPERation:CONDition?	Queries the Operation Status Condition Register		N/A
STATus:OPERation:ENABle	Sets the Operation Status Enable Register		N/A
STATus:OPERation[:EVENT]?	Queries the Operation Status Event Register		N/A
STATus:PRESet	Presets the Status Register		N/A
STATus:QUEStionable:CONDition?	Queries the Questionable Status Condition Register		N/A
STATus:QUEStionable:ENABle	Sets the Questionable Status Enable Register		N/A
STATus:QUEStionable[:EVENT]?	Queries the Questionable Status Event Register		N/A
SYSTem:ERRor?	Queries the Error Queue	X	Clears queue
SYSTem:VERSion?	Queries which version of the SCPI standard the module complies with		N/A

COMMAND DICTIONARY

The remainder of this section is devoted to the actual command dictionary. Each command is fully described on its own page. In defining how each command is used, the following items are described:

Purpose	Describes the purpose of the command.
Type	Describes the type of command such as an event or setting.
Command Syntax	Details the exact command format.
Command Parameters	Describes the parameters sent with the command and their legal range.
Reset Value	Describes the values assumed when the *RST command is sent.
Query Syntax	Details the exact query form of the command.
Query Parameters	Describes the parameters sent with the command and their legal range. The default parameter values are assumed the same as in the command form unless described otherwise.
Query Response	Describes the format of the query response and the valid range of output.
Description	Describes in detail what the command does and refers to additional sources.
Examples	Present the proper use of each command and its query (when available).
Related Commands	Lists commands that affect the use of this command or commands that are affected by this command.

COMMON IEEE 488.2 COMMANDS

*CLS

Purpose	Clears all status and event registers.	
Type	IEEE 488.2 Common Command	
Command Syntax	*CLS	
Command Parameters	N/A	
*RST Value	N/A	
Query Syntax	N/A	
Query Parameters	N/A	
Query Response	N/A	
Description	This command clears the Status Event Register, Operation Status Register and the Questionable Data/Signal Register. It also clears the OPC flag and clears all queues (except the output queue).	
Examples	Command / Query	Response (<i>Description</i>)
	*CLS	
Related Commands	N/A	

***ESE**

Purpose	Sets the bits of the Event Status Enable Register.	
Type	IEEE 488.2 Common Command	
Command Syntax	*ESE <mask>	
Command Parameters	<mask> = numeric ASCII value	
*RST Value	N/A, the parameter is required	
Query Syntax	*ESE?	
Query Parameters	N/A	
Query Response	Numeric ASCII value from 0 to 255	
Description	<p>The Event Status Enable command is used to set the bits of the Event Status Enable Register. See ANSI/IEEE 488.2-1987 section 11.5.1 for a complete description of the ESE register. A value of 1 in a bit position of the ESE register enables generation of the ESB (Event Status Bit) in the Status Byte by the corresponding bit in the ESR. If the ESB is set in the SRE register then an interrupt will be generated. See the *ESR? command for details regarding the individual bits.</p> <p>The ESE register layout is:</p> <ul style="list-style-type: none"> Bit 0 - Operation Complete Bit 1 - Request Control Bit 2 - Query Error Bit 3 - Device Dependent Error Bit 4 - Execution Error Bit 5 - Command Error Bit 6 - User Request Bit 7 - Power On <p>The Event Status Enable query reports the current contents of the Event Status Enable Register.</p>	
Examples	Command / Query	Response (Description)
	*ESE 36 *ESE?	36
Related Commands	*ESR?	

***ESR?**

Purpose	Queries and clears the Standard Event Status Register.	
Type	IEEE 488.2 Common Command	
Command Syntax	N/A	
Command Parameters	N/A	
*RST Value	N/A	
Query Syntax	ESR?	
Query Parameters	N/A	
Query Response	Numeric ASCII value from 0 to 255	
Description	<p>The Event Status Register query - queries and clears the contents of the Standard Event Status Register. This register is used in conjunction with the ESE register to generate the ESB (Event Status Bit) in the Status Byte.</p> <p>The layout of the ESR is:</p> <ul style="list-style-type: none"> Bit 0 - Operation Complete Bit 1 - Request Control Bit 2 - Query Error Bit 3 - Device Dependent Error Bit 4 - Execution Error Bit 5 - Command Error Bit 6 - User Request Bit 7 - Power On <p>The Operation Complete bit is set when it receives an *OPC command.</p> <p>The Query Error bit is set when data is over-written in the output queue. This could occur if one query is followed by another without reading the data from the first query.</p> <p>The Execution Error bit is set when an execution error is detected. Errors that range from -200 to -299 are execution errors.</p> <p>The Command Error bit is set when a command error is detected. Errors that range from -100 to -199 are command errors.</p> <p>The Power On bit is set when the module is first powered on or after it receives a reset via the VXI Control Register. Once the bit is cleared (by executing the *ESR? command) it will remain cleared.</p>	
Examples	Command / Query	Response (<i>Description</i>)
	*ESR?	4
Related Commands	*ESE	

***IDN?**

Purpose	Queries the module for its identification string.	
Type	IEEE 488.2 Common Command	
Command Syntax	N/A	
Command Parameters	N/A	
*RST Value	N/A	
Query Syntax	*IDN?	
Query Parameters	N/A	
Query Response	ASCII character string	
Description	The Identification query returns the identification string of the module. The response is divided into four fields separated by commas. The first field is the manufacturer's name, the second field is the model number, the third field is an optional serial number and the fourth field is the firmware revision number. If a serial number is not supplied, the third field is set to 0 (zero).	
Examples	Command / Query	Response (<i>Description</i>)
	*IDN?	VXI Technology, Inc.,VM3640,0,1.0 (<i>The revision listed here is for reference only; the response will always be the current revision of the instrument.</i>)
Related Commands	N/A	

***OPC**

Purpose	Sets the OPC bit in the Event Status Register.	
Type	IEEE 488.2 Common Command	
Command Syntax	*OPC	
Command Parameters	N/A	
*RST Value	N/A	
Query Syntax	*OPC?	
Query Parameters	N/A	
Query Response	1	
Description	The Operation Complete command sets the OPC bit in the Event Status Register when all pending operations have completed. The Operation Complete query will return a 1 to the output queue when all pending operations have completed.	
Examples	Command / Query	Response (<i>Description</i>)
	*OPC *OPC?	1
Related Commands	*WAI	

***RST**

Purpose	Resets the module's hardware and software to a known state.	
Type	IEEE 488.2 Common Command	
Command Syntax	*RST	
Command Parameters	N/A	
*RST Value	N/A	
Query Syntax	N/A	
Query Parameters	N/A	
Query Response	N/A	
Description	The Reset command resets the module's hardware and software to a known state. See the command index at the beginning of this chapter for the default parameter values used with this command.	
Examples	Command / Query	Response (Description)
	*RST	
Related Commands	N/A	

***SRE**

Purpose	Sets the service request enable register.	
Type	IEEE 488.2 Common Command	
Command Syntax	*SRE <mask>	
Command Parameters	<mask> = Numeric ASCII value from 0 to 255	
*RST Value	TBD	
Query Syntax	*SRE?	
Query Parameters	N/A	
Query Response	Numeric ASCII value from 0 to 255	
Description	<p>The service request enable mask is used to control which bits in the status byte generate back plane interrupts. If a bit is set in the mask that newly enables a bit set in the status byte and interrupts are enabled, the module will generate a REQUEST TRUE event via an interrupt. See the *STB? query for the layout of bits. Note: Bit 6 is always internally cleared to zero as required by IEEE 488.2 section 11.3.2.3.</p> <p>The layout of the Service Request Enable Register is:</p> <ul style="list-style-type: none"> Bit 0 - Unused Bit 1 - Unused Bit 2 - Error Queue Has Data Bit 3 - Questionable Status Summary (not used) Bit 4 - Message Available Bit 5 - Event Status Summary Bit 6 - 0 Bit 7 - Operation Status Summary 	
Examples	Command / Query	Response (Description)
	*SRE 4 *SRE?	4
Related Commands	N/A	

***STB?**

Purpose	Queries the Status Byte Register.	
Type	IEEE 488.2 Common Command	
Command Syntax	N/A	
Command Parameters	N/A	
*RST Value	N/A	
Query Syntax	*STB?	
Query Parameters	N/A	
Query Response	Numeric ASCII value from 0 to 255	
Description	<p>The Read Status Byte query fetches the current contents of the Status Byte Register. See the IEEE 488.2 specification for additional information regarding the Status byte Register and its use.</p> <p>The layout of the Status Register is:</p> <ul style="list-style-type: none"> Bit 0 - Unused Bit 1 - Unused Bit 2 - Error Queue Has Data Bit 4 - Questionable Status Summary (not used) Bit 5 - Message Available Bit 6 - Master Summary Status Bit 7 - Operation Status Summary 	
Examples	Command / Query	Response (<i>Description</i>)
	*STB?	16
Related Commands	N/A	

***TRG**

Purpose	Causes a trigger event to occur.	
Type	IEEE 488.2 Common Command	
Command Syntax	*TRG	
Command Parameters	N/A	
*RST Value	N/A	
Query Syntax	N/A	
Query Parameters	N/A	
Query Response	N/A	
Description	The Trigger command causes a trigger event to occur.	
Examples	Command / Query	Response (Description)
	*TRG	
Related Commands	N/A	

***TST?**

Purpose	Causes a self-test procedure to occur and queries the results.	
Type	IEEE 488.2 Common Command	
Command Syntax	N/A	
Command Parameters	N/A	
*RST Value	N/A	
Query Syntax	*TST?	
Query Parameters	N/A	
Query Response	Numeric ASCII value from 0 to 143	
Description	The Self-Test query causes the VM3640 to run its self-test procedures and report on the results.	
Examples	Command / Query	Response (<i>Description</i>)
	*TST?	0
Related Commands	N/A	

***WAI**


Purpose	Halts execution of additional commands and queries until the No Operation Pending message is true.	
Type	IEEE 488.2 Common Command	
Command Syntax	*WAI	
Command Parameters	N/A	
*RST Value	N/A	
Query Syntax	N/A	
Query Parameters	N/A	
Query Response	N/A	
Description	The Wait to Continue command halts the execution of commands and queries until the No Operation Pending message is true. This command makes sure that all previous commands have been executed before proceeding. It provides a way of synchronizing the module with its commander.	
Examples	Command / Query	Response (<i>Description</i>)
	*WAI	
Related Commands	*OPC	

INSTRUMENT SPECIFIC SCPI COMMANDS


AM[:STATe]

Purpose	Enables or disables the Amplitude Modulation input.	
Type	Setting	
Command Syntax	AM[:STATe] <boolean>	
Command Parameters	<boolean> = 0 1 OFF ON	
*RST Value	0	
Query Syntax	AM[:STATe]?	
Query Parameters	N/A	
Query Response	0 1	
Description	The AM State command enables or disables amplitude modulation input. The default state is disabled.	
Examples	Command / Query	Response (Description)
	AM 1	<i>(Enables amplitude modulation input.)</i>
	AM?	<i>(Verifies that amplitude modulation input is enabled.)</i>
Related Commands	FSK[:STATe] PSK[:STATe]	


CALibration:COUNT?

Purpose	Tracks the number of times calibration has been performed.	
Type	Query	
Command Syntax	N/A	
Command Parameters	N/A	
*RST Value	N/A	
Query Syntax	CALibration:COUNT?	
Query Parameters	N/A	
Query Response	Numeric value from 0 to 16,777,215 (after the maximum value, it will wrap to 0)	
Description	<p>The Calibration Count query returns the number of times a point calibration has occurred. The count is stored in non-volatile memory</p> <hr/> <div style="display: flex; align-items: center;">  <p>Calibration commands should only be executed by qualified personnel. Changing these values incorrectly can cause the instrument to perform improperly.</p> </div> <hr/>	
Examples	Command / Query	Response (Description)
	CAL:COUNT?	24 (Returns the quantity of points that have been calibrated.)
Related Commands	CALibration:SECurity:CODE CALibration:SECurity:STATE CALibration:STORE	


CALibration[:DATA]

Purpose	Sets the calibration constants.
Type	Setting
Command Syntax	CALibration[:DATA] <block_data>
Command Parameters	<block_data> = IEEE 488.2 definite or indefinite length arbitrary block format
*RST Value	N/A
Query Syntax	CALibration[:DATA]?
Query Parameters	N/A
Query Response	IEEE 488.2 definite or indefinite length arbitrary block format
Description	<p>The Calibration Data command is used to set the calibration constants. The constants will change only if security is disabled. New constants take effect immediately, but are not saved to non-volatile memory unless the CALibration:STORe command is executed.</p> <hr/> <div style="display: flex; align-items: center;">  <p>Calibration commands should only be executed by qualified personnel. Changing these values incorrectly can cause the instrument to perform improperly.</p> </div> <hr/>
Examples	<p>Command / Query</p> <p>CAL #232 12300174011021230014367192100156</p>
Related Commands	<p>CALibration:SECurity:CODE CALibration:SECurity:STATE CALibration:STORe</p>


CALibration[:DATA]:AFCorrection

Purpose	Sets the amplitude gain correction.							
Type	Setting							
Command Syntax	CALibration[:DATA]:AFCorrection <point>,<freq>,<gain>							
Command Parameters	<point> = 0 - 63; an index into the table of gain corrections <freq> = Frequency value <gain> = Gain value; should be set to 1							
*RST Value	N/A							
Query Syntax	CALibration[:DATA]:AFCorrection? <point>							
Query Parameters	<point> = 0 - 63; an index into the table of gain corrections							
Query Response	<freq>,<gain>							
Description	<p>The Calibration Data AFCorrection command sets an amplitude gain correction for a specified frequency point. Frequency/Gain correction factor should only be changed by qualified calibration personnel.</p> <hr/> <div style="display: flex; align-items: center;">  <p>Calibration commands should only be executed by qualified personnel. Changing these values incorrectly can cause the instrument to perform improperly.</p> </div> <hr/>							
Examples	<table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th style="text-align: left;">Command / Query</th> <th style="text-align: left;">Response (<i>Description</i>)</th> </tr> </thead> <tbody> <tr> <td>CAL:DATA:AFC 3,17,1.1</td> <td><i>(Sets point 3 to 17 MHz with a gain of 1.1.)</i></td> </tr> <tr> <td>CAL:DATA:AFC? 5</td> <td>18126524.216, 1.709 <i>(Queries the frequency and gain setting at point 5. Returns that the values are set at 18.126 MHz with a 1.709 gain.)</i></td> </tr> </tbody> </table>	Command / Query	Response (<i>Description</i>)	CAL:DATA:AFC 3,17,1.1	<i>(Sets point 3 to 17 MHz with a gain of 1.1.)</i>	CAL:DATA:AFC? 5	18126524.216, 1.709 <i>(Queries the frequency and gain setting at point 5. Returns that the values are set at 18.126 MHz with a 1.709 gain.)</i>	
Command / Query	Response (<i>Description</i>)							
CAL:DATA:AFC 3,17,1.1	<i>(Sets point 3 to 17 MHz with a gain of 1.1.)</i>							
CAL:DATA:AFC? 5	18126524.216, 1.709 <i>(Queries the frequency and gain setting at point 5. Returns that the values are set at 18.126 MHz with a 1.709 gain.)</i>							
Related Commands	CALibration:SECurity:CODE CALibration:SECurity:STATe CALibration:STORe							


CALibration[:DATA]:AMPLitude[:GAIN]

Purpose	Directly sets the amplitude gain correction.	
Type	Setting	
Command Syntax	CALibration[:DATA]:AMPLitude[:GAIN] <numeric_value>	
Command Parameters	<numeric_value> = numeric value from 0 to 1000	
*RST Value	N/A	
Query Syntax	CALibration[:DATA]:AMPLitude[:GAIN]?	
Query Parameters	N/A	
Query Response	Numeric value from 0 to 1000	
Description	<p>The Calibration Data Amplitude Gain command directly sets the amplitude gain correction. This setting is usually calculated by calibration.</p> <hr/> <div style="display: flex; align-items: center;">  <p>Calibration commands should only be executed by qualified personnel. Changing these values incorrectly can cause the instrument to perform improperly.</p> </div> <hr/>	
Examples	Command / Query	Response (Description)
	CAL:DATA:AMPL:GAIN 2.5	<i>(Sets the amplitude gain correction to 2.5.)</i>
	CAL:DATA:AMPL?	<i>(Returns that the value is set to 2.5.)</i>
Related Commands	CALibration[:DATA]:AMPLitude:OFFSet CALibration:SECurity:CODE CALibration:SECurity:STATe CALibration:STORe	


CALibration[:DATA]:AMPLitude:OFFSet

Purpose	Directly sets the offset of the amplitude control.	
Type	Setting	
Command Syntax	CALibration[:DATA]:AMPLitude:OFFSet <numeric_value>	
Command Parameters	<numeric_value> = numeric value from 0 to 4095	
*RST Value	N/A	
Query Syntax	CALibration[:DATA]:AMPLitude:OFFSet?	
Query Parameters	N/A	
Query Response	Numeric value from 0 to 4095	
Description	<p>The Calibration Data Amplitude Offset command directly sets the offset of the amplitude control. This setting is usually calculated by calibration.</p> <hr/> <div style="display: flex; align-items: center;">  <p>Calibration commands should only be executed by qualified personnel. Changing these values incorrectly can cause the instrument to perform improperly.</p> </div> <hr/>	
Examples	Command / Query	Response (Description)
	CAL:DATA:AMPL:OFFS 0	<i>(Sets the offset to 0.)</i>
	CAL:DATA:AMPL:OFFS?	<i>0 (Returns that the value is set to 0.)</i>
Related Commands	CALibration[:DATA]:AMPLitude[:GAIN] CALibration:SECurity:CODE CALibration:SECurity:STAtE CALibration:STORe	


CALibration[:DATA]:DUTY

Purpose	Calibration for square wave duty cycle.	
Type	Setting	
Command Syntax	CALibration[:DATA]:DUTY <value>	
Command Parameters	<value> = 0 - 4095 (DAC value for square wave duty-cycle adjustment)	
*RST Value	N/A	
Query Syntax	CALibration[:DATA]:DUTY?	
Query Parameters	N/A	
Query Response	0 - 4095 (DAC value for square wave duty-cycle adjustment)	
Description	<p>The Calibration Data Duty command sets the duty cycle of the square wave by inputting a voltage level cutoff-point on the sine wave input.</p> <hr/> <div style="display: flex; align-items: center;">  <p>Calibration commands should only be executed by qualified personnel. Changing these values incorrectly can cause the instrument to perform improperly.</p> </div> <hr/>	
Examples	Command / Query	Response (<i>Description</i>)
	CAL:DATA:DUTY 2	
	CAL:DATA:DUTY?	2
Related Commands	CALibration[:DATA]:SQHI CALibration[:DATA]:SQUare:OFFSet:OFFSet CALibration:SECurity:CODE CALibration:SECurity:STATe CALibration:STORe	


CALibration[:DATA]:OFFSet[:GAIN]

Purpose	Directly set the offset gain correction.	
Type	Setting	
Command Syntax	CALibration[:DATA]:OFFSet[:GAIN] <numeric_value>	
Command Parameters	<numeric_value> = numeric value from 0 to 1000	
*RST Value	N/A	
Query Syntax	CALibration[:DATA]:OFFSet[:GAIN]?	
Query Parameters	N/A	
Query Response	Numeric value from 0 to 1000	
Description	<p>The Calibration Data Offset Gain command directly sets the offset gain correction. This setting is usually calculated by calibration.</p> <hr/> <div style="display: flex; align-items: center;">  <p>Calibration commands should only be executed by qualified personnel. Changing these values incorrectly can cause the instrument to perform improperly.</p> </div> <hr/>	
Examples	Command / Query	Response (Description)
	CAL:DATA:OFFS 5 CAL:DATA:OFFS?	(Sets the offset gain correction to 5.) 5 (Confirms the offset gain correction is set to 5.)
Related Commands	CALibration[:DATA]:OFFSet:OFFSet CALibration:SECurity:CODE CALibration:SECurity:STATe CALibration:STORe	


CALibration[:DATA]:OFFSet:OFFSet

Purpose	Directly set the output offset voltage control offset.							
Type	Setting							
Command Syntax	CALibration[:DATA]:OFFSet:OFFSet <numeric_value>							
Command Parameters	<numeric_value> = numeric value from 0 to 4095							
*RST Value	N/A							
Query Syntax	CALibration[:DATA]:OFFSet:OFFSet?							
Query Parameters	N/A							
Query Response	Numeric value from 0 to 4095							
Description	<p>The Calibration Data Offset Offset command directly sets the output offset voltage control offset. This setting is usually calculated by calibration.</p> <hr/> <div style="display: flex; align-items: center;">  <p>Calibration commands should only be executed by qualified personnel. Changing these values incorrectly can cause the instrument to perform improperly.</p> </div> <hr/>							
Examples	<table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th style="text-align: left;">Command / Query</th> <th style="text-align: left;">Response (<i>Description</i>)</th> </tr> </thead> <tbody> <tr> <td>CAL:DATA:OFFS:OFFS 5</td> <td><i>(Sets the output offset voltage control offset to 5.)</i></td> </tr> <tr> <td>CAL:DATA:OFFS?</td> <td><i>5 (Confirms the output offset voltage control offset is set to 5.)</i></td> </tr> </tbody> </table>	Command / Query	Response (<i>Description</i>)	CAL:DATA:OFFS:OFFS 5	<i>(Sets the output offset voltage control offset to 5.)</i>	CAL:DATA:OFFS?	<i>5 (Confirms the output offset voltage control offset is set to 5.)</i>	
Command / Query	Response (<i>Description</i>)							
CAL:DATA:OFFS:OFFS 5	<i>(Sets the output offset voltage control offset to 5.)</i>							
CAL:DATA:OFFS?	<i>5 (Confirms the output offset voltage control offset is set to 5.)</i>							
Related Commands	CALibration[:DATA]:OFFSet[:GAIN] CALibration:SECurity:CODE CALibration:SECurity:STATe CALibration:STORe							


CALibration[:DATA]:SQHI

Purpose	Sets square wave amplitude correction.							
Type	Setting							
Command Syntax	CALibration[:DATA]:SQHI <value>							
Command Parameters	<value> = number							
*RST Value	N/A							
Query Syntax	CALibration[:DATA]:SQHI?							
Query Parameters	N/A							
Query Response	Number							
Description	<p>The Calibration Data SQHI command set the amplitude correction for the square wave.</p> <hr/> <div style="display: flex; align-items: center;">  <p>Calibration commands should only be executed by qualified personnel. Changing these values incorrectly can cause the instrument to perform improperly.</p> </div> <hr/>							
Examples	<table border="1" style="width: 100%;"> <thead> <tr> <th style="text-align: left;">Command / Query</th> <th style="text-align: left;">Response (<i>Description</i>)</th> </tr> </thead> <tbody> <tr> <td>CAL:DATA:SQHI 5</td> <td>(Sets the square wave amplitude to 5 volts.)</td> </tr> <tr> <td>CAL:DATA:SQHI?</td> <td>5</td> </tr> </tbody> </table>	Command / Query	Response (<i>Description</i>)	CAL:DATA:SQHI 5	(Sets the square wave amplitude to 5 volts.)	CAL:DATA:SQHI?	5	
Command / Query	Response (<i>Description</i>)							
CAL:DATA:SQHI 5	(Sets the square wave amplitude to 5 volts.)							
CAL:DATA:SQHI?	5							
Related Commands	CALibration[:DATA]:DUTY CALibration[:DATA]:SQUare:OFFSet:OFFSet CALibration:SECurity:CODE CALibration:SECurity:STATe CALibration:STORe							


CALibration[:DATA]:SQUare:OFFSet:OFFSet

Purpose	Square wave offset adjustment for calibration.	
Type	Setting	
Command Syntax	CALibration:DATA:SQUare:OFFSet:OFFSet <value>	
Command Parameters	<value> = numeric value from 0 to 4095	
*RST Value	N/A	
Query Syntax	CALibration:DATA:SQUare:OFFSet:OFFSet?	
Query Parameters	N/A	
Query Response	Numeric value from 0 to 4095	
Description	<p>The Calibration Data Square Offset Offset command sets the offset value for the square wave. This is the new value for “zero”.</p> <hr/> <div style="display: flex; align-items: center;">  <p>Calibration commands should only be executed by qualified personnel. Changing these values incorrectly can cause the instrument to perform improperly.</p> </div> <hr/>	
Examples	Command / Query	Response (Description)
	CAL:DATA:SQU:OFFS:OFFS 2047	(Sets the “zero” level at 2047.)
	CAL:DATA:SQU:OFFS:OFFS?	2047
Related Commands	CALibration[:DATA]:DUTY CALibration[:DATA]:SQHI CALibration:SECurity:CODE CALibration:SECurity:STATe CALibration:STORe	


CALibration[:DATA]:ZERO

Purpose	Zero adjust for the output multiplexer.	
Type	Setting	
Command Syntax	CALibration:DATA:ZERO <value>	
Command Parameters	<value> = Numeric value from 0 to 4095 (DAC offset value)	
*RST Value	N/A	
Query Syntax	CALibration:DATA:ZERO?	
Query Parameters	N/A	
Query Response	Numeric value from 0 to 4095 (DAC offset value)	
Description	<p>The Calibration Data Zero command inputs the offset to adjust “zero” for the arbitrary waveforms during calibration.</p> <hr/> <div style="display: flex; align-items: center;">  <p>Calibration commands should only be executed by qualified personnel. Changing these values incorrectly can cause the instrument to perform improperly.</p> </div> <hr/>	
Examples	Command / Query	Response (<i>Description</i>)
	CAL:DATA:ZERO 2047 CAL:DATA:ZERO?	2047
Related Commands	CALibration:SECurity:CODE CALibration:SECurity:STATE CALibration:STORE	


CALibration:DC:LEVel

Purpose	Directly sets the DC level calibration point specified in the command.	
Type	Setting	
Command Syntax	CALibration:DC:LEVel <point>,<dcv_level>,<gain>	
Command Parameters	<point> = 0 to 31, index into the calibration data structure <dcv_level> = -10.0 to +10.0, the DC voltage level adjusted <gain> = -5.0 to +5.0, the amount of adjustment	
*RST Value	N/A	
Query Syntax	CALibration:DC:LEVel? <point>	
Query Parameters	<point> = 0 to 31, index into the calibration data structure	
Query Response	<dcv_level>,<gain>	
Description	The Calibration DC Level command sets the gain correction for a specified DC voltage output level. <hr/>  Calibration commands should only be executed by qualified personnel. Changing these values incorrectly can cause the instrument to perform improperly. <hr/>	
Examples	Command / Query	Response (Description)
	CAL:DC:LEV 3,-8.7,0.9886	<i>(Sets point 3 to -8.7 volts, with a gain of 0.9886.)</i>
	CAL:DC:LEV? 3	<i>-8.7,0.9886 (Verifies that the setting at point 3 is -8.7 volts, with a gain of 0.9886.)</i>
Related Commands	[SOURce:]FUNctIon:DC:VOLTage [SOURce:]VOLTage[:LEVel][:AMPLitude] [SOURce:]VOLTage[:LEVel]:OFFSet	


CALibration:SECurity:CODE

Purpose	Sets the code required to disable calibration security.	
Type	Setting	
Command Syntax	CALibration:SECurity:CODE <string>	
Command Parameters	<string> = the code string can be from 1 to 12 ASCII characters in length entered in IEEE 488.2 definite or indefinite length arbitrary block format	
*RST Value	N/A	
Query Syntax	CALibration:SECurity:CODE?	
Query Parameters	N/A	
Query Response	<string>	
Description	<p>The Calibration Security Code command sets the code required to disable calibration security. Calibration security must first be disabled before the code can be changed. Before shipping the instrument, the factory code setting is VM3640.</p> <hr/> <div style="display: flex; align-items: center;">  <p>Calibration commands should only be executed by qualified personnel. Changing these values incorrectly can cause the instrument to perform improperly.</p> </div> <hr/>	
Examples	Command / Query	Response (Description)
	CAL:SEC:CODE #16VM3640	(Sets the factory code setting of VM3640.)
Related Commands	CALibration:SECurity:STATe CALibration:STORE	


CALibration:SECurity:STATe

Purpose	Enable or disable the calibration security.	
Type	Setting	
Command Syntax	CALibration SECurity:STATe <boolean>,<string>	
Command Parameters	<boolean>= 0 1 OFF ON <string> = the security code must be entered to disable the security	
*RST Value	1	
Query Syntax	CALibration:SECurity:STATe?	
Query Parameters	N/A	
Query Response	0 1	
Description	<p>The Calibration Security State enables or disables the calibration security. While security is on, no stores to the non-volatile memory are allowed. In order to disable the security state, the security code must be supplied. To enable the security, the code does not need to be supplied. The security state is enabled by default.</p> <hr/> <div style="display: flex; align-items: center;">  <p>Calibration commands should only be executed by qualified personnel. Changing these values incorrectly can cause the instrument to perform improperly.</p> </div> <hr/>	
Examples	Command / Query	Response (Description)
	CAL:SEC:OFF, #16VM3640	<i>(Disables the calibration security.)</i>
	CAL:SEC:STAT 1	<i>(Turns the calibration security back on again.)</i>
	CAL:SEC:STAT?	1 <i>(Indicates the calibration security is enabled.)</i>
Related Commands	CALibration:SECurity:CODE CALibration:STORE	

CALibration:STAtE

Purpose	Enables or disables corrections using calibration data.							
Type	Setting							
Command Syntax	CALibration:STAtE <boolean>							
Command Parameters	<boolean> = 0 1 OFF ON							
*RST Value	1							
Query Syntax	CALibration:STAtE?							
Query Parameters	N/A							
Query Response	0 1							
Description	<p>The Calibration State command enables or disables corrections that were stored from the calibration data. If the Calibration State is enabled, it will allow corrections of the output amplitude and offset voltage levels that are stored in non-volatile memory. If the Calibration State function is disabled, then the default corrections are used.</p> <hr/> <div style="display: flex; align-items: center;">  <p>Calibration commands should only be executed by qualified personnel. Changing these values incorrectly can cause the instrument to perform improperly.</p> </div> <hr/>							
Examples	<table border="1" style="width: 100%;"> <thead> <tr> <th style="text-align: left;">Command / Query</th> <th style="text-align: left;">Response (<i>Description</i>)</th> </tr> </thead> <tbody> <tr> <td>CAL:STAT ON</td> <td><i>(Enables corrections using the calibration data.)</i></td> </tr> <tr> <td>CAL:STAT?</td> <td>1 <i>(Confirms that using calibration data corrections has been enabled.)</i></td> </tr> </tbody> </table>	Command / Query	Response (<i>Description</i>)	CAL:STAT ON	<i>(Enables corrections using the calibration data.)</i>	CAL:STAT?	1 <i>(Confirms that using calibration data corrections has been enabled.)</i>	
Command / Query	Response (<i>Description</i>)							
CAL:STAT ON	<i>(Enables corrections using the calibration data.)</i>							
CAL:STAT?	1 <i>(Confirms that using calibration data corrections has been enabled.)</i>							
Related Commands	CALibration:SECurity:CODE CALibration:SECurity:STAtE CALibration:STORe							

CALibration:STORE

Purpose	Stores calibration data into non-volatile memory.	
Type	Event	
Command Syntax	CALibration:STORE	
Command Parameters	N/A	
*RST Value	N/A	
Query Syntax	N/A	
Query Parameters	N/A	
Query Response	N/A	
Description	<p>The Calibration Store command stores correction data into non-volatile memory. The correction data is calibration data that has been downloaded via the program messages in the CALibration:DATA subsystem. The Calibration Store should only be performed after all the correction data has been finalized.</p> <hr/> <div style="display: flex; align-items: center;">  <p>Calibration commands should only be executed by qualified personnel. Changing these values incorrectly can cause the instrument to perform improperly.</p> </div> <hr/>	
Examples	Command / Query	Response (<i>Description</i>)
	CAL:STOR	
Related Commands	CALibration[:DATA] CALibration:SECurity:CODE CALibration:SECurity:STATE	

FSK[:STATe]

Purpose	Enables or disables Frequency Shift Key modulation input.	
Type	Setting	
Command Syntax	FSK[:STATe] <boolean>	
Command Parameters	<boolean> = 0 1 OFF ON	
*RST Value	0	
Query Syntax	FSK[:STATe]?	
Query Parameters	N/A	
Query Response	0 1	
Description	The FSK State command enables or disables frequency shift key modulation input. The default state is disabled.	
Examples	Command / Query	Response (Description)
	FSK 1 FSK?	(Enables frequency shift key modulation input.) (Verifies that frequency shift key modulation input is enabled.)
Related Commands	AM[:STATe] PSK[:STATe]	

PSK[:STATe]

Purpose	Enables or disables Phase Shift Key modulation input.	
Type	Setting	
Command Syntax	PSK[:STATe] <boolean>	
Command Parameters	<boolean> = 0 1 OFF ON	
*RST Value	0	
Query Syntax	PSK[:STATe]?	
Query Parameters	N/A	
Query Response	0 1	
Description	The PSK State command enables or disable phase shift key modulation input. The default state is disabled.	
Examples	Command / Query	Response (Description)
	PSK 1 PSK?	<i>(Enables phase shift key modulation input.)</i> 1 <i>(Verifies that phase shift key modulation input is enabled.)</i>
Related Commands	AM[:STATe] FSK[:STATe]	

RESet

Purpose	Resets all parameters to their default state.	
Type	Event	
Command Syntax	RESet	
Command Parameters	N/A	
*RST Value	N/A	
Query Syntax	N/A	
Query Parameters	N/A	
Query Response	N/A	
Description	The Reset command resets all the parameters to their default state.	
Examples	Command / Query	Response (<i>Description</i>)
	RES	
Related Commands	N/A	

SENSe:CORRection:IMPedance

Purpose	Allows the user to set the value of the load resistor connected to the output.	
Type	Setting	
Command Syntax	SENSe:CORRection:IMPedance <resistor_value>	
Command Parameters	<resistor_value> = 10.0 to 100e6 Ω	
*RST Value	50.0 Ω	
Query Syntax	SENSe: CORRection:IMPedance?	
Query Parameters	N/A	
Query Response	<resistor_value>	
Description	The VM3640 is designed to drive a 50 Ω load. This command allows the user to input a different value for use in the gain calculations.	
Examples	Command / Query	Response (Description)
	SENS:CORR:IMP 200.57 SENS:CORR:IMP?	<i>(Sets the load resistance value to 200.57 Ω.)</i> <i>(Verifies that the load resistance value was set to 200.57 Ω.)</i>
Related Commands	[SOURce:]FUNCTION:DC:VOLTage [SOURce:]VOLTage[:LEVel]:AMPLitude] [SOURce:]VOLTage[:LEVel]:OFFSet	

[SOURce:]BURSt:COUNt

Purpose	Sets the number of cycles per burst.	
Type	Setting	
Command Syntax	[SOURce:]BURSt:COUNt <count>	
Command Parameters	<count> = integer from 1 to 65535	
*RST Value	1	
Query Syntax	[SOURce:]BURSt:COUNt?	
Query Parameters	N/A	
Query Response	Integer from 1 to 65535	
Description	The Source Burst Count command sets the number of output cycles per burst. The default value is 1 cycle.	
Examples	Command / Query	Response (Description)
	BURSt:COUN 12 BURSt:COUN?	(Sets the burst count to 12 cycles.) 12 (Confirms that the burst count is set to 12 cycles.)
Related Commands	[SOURce:]BURSt:PHASe [SOURce:]BURSt:RATE [SOURce:]BURSt[:STATe]	

[SOURce:]BURSt:PHASe

Purpose	Sets the phase of the output waveform.	
Type	Setting	
Command Syntax	[SOURce:]BURSt:PHASe <phase>	
Command Parameters	<phase> = value between 0 and +359 degrees	
*RST Value	0	
Query Syntax	[SOURce:]BURSt:PHASe?	
Query Parameters	N/A	
Query Response	Value between 0 and +359 degrees	
Description	The Source Burst Phase command set the starting phase for the burst. The default setting is 0 degrees.	
Examples	Command / Query	Response (Description)
	BURS:PHAS 30 BURS:PHAS?	<i>(Sets the burst-starting phase to 30 degrees.)</i> 30 <i>(Confirms that the starting phase for the burst is set to 30 degrees.)</i>
Related Commands	[SOURce:]BURSt:COUNT [SOURce:]BURSt:RATE [SOURce:]BURSt[:STATe]	

[SOURce:]BURSt:RATE

Purpose	Sets the burst repetition rate.	
Type	Setting	
Command Syntax	[SOURce:]BURSt:RATE <rate>	
Command Parameters	<rate> = value from 0.10 to 100000	
*RST Value	100	
Query Syntax	[SOURce:]BURSt:RATE?	
Query Parameters	N/A	
Query Response	Value from 0.10 to 100000	
Description	<p>The Source Burst Rate command sets the burst repetition, or frequency, of the burst. The default value is 100 Hz.</p> <p>Note: Burst Rate must \leq Frequency Setting.</p>	
Examples	Command / Query	Response (Description)
	BURS:RATE 10 BURS:RATE?	(Sets the burst rate to 10 Hz.) 10 (Verifies that the burst rate is set at 10 Hz.)
Related Commands	[SOURce:]BURSt:COUNT [SOURce:]BURSt:PHASe [SOURce:]BURSt[:STATe]	

[SOURce:]BURSt[:STATe]


Purpose	Enables or disables burst mode.	
Type	Setting	
Command Syntax	[SOURce:]BURSt[:STATe] <boolean>	
Command Parameters	<boolean> = 0 1 OFF ON	
*RST Value	0	
Query Syntax	[SOURce:]BURSt[:STATe]?	
Query Parameters	N/A	
Query Response	0 1	
Description	The Source Burst State command enables or disables the burst mode. The default setting is disabled.	
Examples	Command / Query	Response (Description)
	BURS 1 BURS?	(Enables the burst mode.) 1 (Verifies that the burst mode is enabled.)
Related Commands	[SOURce:]BURSt:COUNT [SOURce:]BURSt:PHASe [SOURce:]BURSt:RATE	

[SOURce:]CLOCK:CONFigure

Purpose	Sets front panel clock BNC as an input or output.	
Type	Setting	
Command Syntax	[SOURce:]CLOCK:CONFigure <clock_dir>	
Command Parameters	<clock_dir> = INPut OUTPut	
*RST Value	INP	
Query Syntax	[SOURce:]CLOCK:CONFigure?	
Query Parameters	N/A	
Query Response	INP OUTPut	
Description	The Source Clock Configure command configures the front-panel CLOCK IN/OUT BNC as an input or output. The default setting is INPut.	
Examples	Command / Query	Response (Description)
	CLOC:CONF OUTP CLOC:CONF?	<i>(Sets the front-panel CLOCK IN/OUT BNC as an output.)</i> <i>OUTP (Verifies that the front-panel CLOCK IN/OUT BNC is set as an output.)</i>
Related Commands	SOURce:ROSC:SOURce	

[SOURce:]FREQuency[:CW]

Purpose	Controls the frequency of the function output.	
Type	Setting	
Command Syntax	[SOURce:]FREQuency[:CW] <numeric_value>	
Command Parameters	<numeric_value>= 0.1 to 20e6 for sine and square waves <numeric_value>= 0.1 to 1.0e6 for all other waveforms <numeric_value>= 0.1 to 1.0e6 for all waveforms in Burst Mode	
*RST Value	1000	
Query Syntax	[SOURce:]FREQuency[:CW]?	
Query Parameters	N/A	
Query Response	<numeric_value>	
Description	The Source Frequency CW command controls the frequency of the function output.	
Examples	Command / Query	Response (Description)
	FREQ 1.0	
Related Commands	[SOURce:]FUNctIon[:SHApe]	

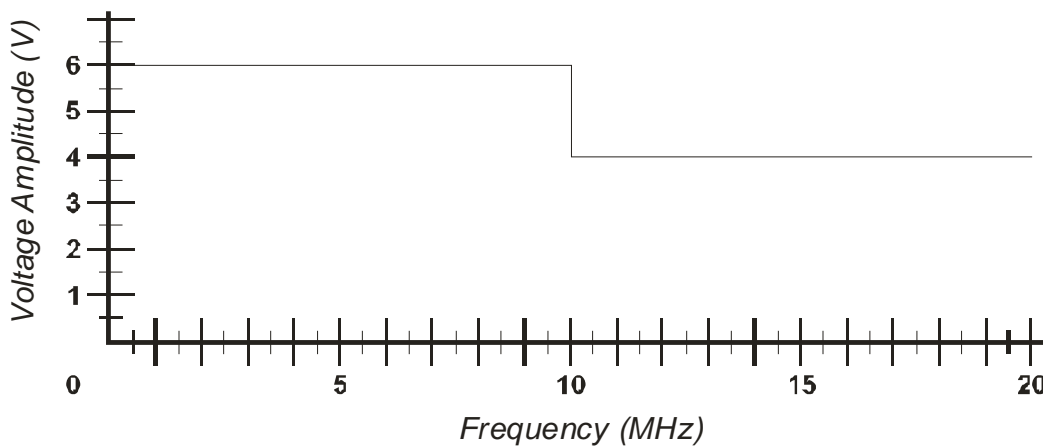**FIGURE 4-1: VOLTAGE VS. FREQUENCY - SINE AND SQUARE WAVES**

[SOURce:]FUNction:DC:VOLTage

Purpose	Sets the DC output voltage.	
Type	Setting	
Command Syntax	[SOURce:]FUNction:DC:VOLTage <dc_volts>	
Command Parameters	<dc_volts> = number from -6 to +6	
*RST Value	1	
Query Syntax	[SOURce:]FUNction:DC:VOLTage?	
Query Parameters	N/A	
Query Response	number from -6 to + 6	
Description	The Source Function DC Voltage command sets the DC voltage output. The default setting is 1 VDC.	
Examples	Command / Query	Response (Description)
	FUNC:DC:VOLT 2.5 FUNC:DC:VOLT?	(Sets the output voltage to +2.5 VDC.) 2.5 (Verifies that the output voltage is set to +2.5 VDC.)
Related Commands	[SOURce:]VOLTage[:LEVel][:AMPLitude] [SOURce:]VOLTage[:LEVel]:OFFSet	

[SOURce:]FUNcTion:PULSe:WIDTh

Purpose	Sets the pulse width.	
Type	Setting	
Command Syntax	[SOURce:]FUNcTion:PULSe:WIDTh <pls_width>[,<pls_freq>]	
Command Parameters	<pls_width> = 100e-9 to 1.0 <pls_freq> = 0.1 to 1.0e6	
*RST Value	<pls_width> = 1 μ s <pls_freq> = 1000 Hz	
Query Syntax	[SOURce:]FUNcTion:PULSe:WIDTh?	
Query Parameters	N/A	
Query Response	100e-9 to 1.0	
Description	<p>The Source Function Pulse Width command sets the pulse width of the output waveform. The default setting is 1 μs.</p> <p>Pulse width must be $\geq 0.001/F_{out}$ Pulse width must be $\leq 0.999/F_{out}$</p> <p>For short pulses at low repetition rates (e.g. 1 μs @ 1 Hz):</p> <ol style="list-style-type: none"> 1. FREQ 10e3 <i>Set freq to 10 kHz</i> 2. FUNC:PULSE:WIDTH 1e-6 <i>Set pulse width to 1 μs</i> 3. TRIG:MODE INT <i>Set trigger to internal clock</i> 4. TIRG:RATE 1 <i>Set repetition rate to 1 Hz</i> <p>The optional pulse frequency parameter adds another route to set the frequency in addition to the [SOURce:]FREQuency[:CW] command.</p>	
Examples	Command / Query	Response (Description)
	FUNC:PULS:WIDT 30E-6	<i>(Sets the pulse width to 30 μs.)</i>
	FUNC:PULS:WIDT?	<i>30 (Verifies that the pulse width is 30 μs.)</i>
	FUNC:PULS:WIDT 30E-6,10E3	<i>(Sets the pulse width to 30 μs and the pulse frequency to 10 kHz.)</i>
Related Commands	[SOURce:]FREQuency[:CW] [SOURce:]FUNcTion[:SHAPE]	

[SOURce:]FUNCTion[:SHAPE]

Purpose	Selects the output waveform shape.	
Type	Setting	
Command Syntax	[SOURce:]FUNCTion[:SHAPE] <shape>	
Command Parameters	<shape> = SINusoid SQUare TRIangle PRNoise PRAMp NRAMp EXPRise EXPFall CARDiac DC PULSe SINC	
*RST Value	SINusoid	
Query Syntax	[SOURce:]FUNCTion[:SHAPE]?	
Query Parameters	N/A	
Query Response	SIN SQU TRI PRN PRAM NRAM EXPR EXPF CARD DC PULS SINC	
Description	The Source Function Shape command selects the shape of the output waveform. The default setting is a sinusoid waveform.	
Examples	Command / Query	Response (Description)
	FUNC SQU FUNC?	(Sets the output waveform shape to a square wave.) SQU (Verifies that the output waveform shape is set to a square wave.)
Related Commands	[SOURce:]FUNCTion:PULSe:WIDTh [SOURce:]FREQuency[:CW]	

[SOURce:]FUNCTion:SQUare[:DUTY]

Purpose	Sets the duty cycle of the square wave function.	
Type	Setting	
Command Syntax	[SOURce:]FUNCTion:SQUare[:DUTY] <duty_cycle>	
Command Parameters	<duty_cycle> = 20 - 80	
*RST Value	50.0	
Query Syntax	[SOURce:]FUNCTion:SQUare[:DUTY]?	
Query Parameters	N/A	
Query Response	20 - 80	
Description	The Source Function Square Duty command sets the duty cycle of the square wave output. The default setting is 50.0.	
Examples	Command / Query	Response (Description)
	FUNC:SQU 20 FUNC:SQU?	(Sets the square wave duty-cycle to 20.0.) 20 (Verifies that the square wave duty-cycle is set to 20.0.)
Related Commands	[SOURce:]FUNCTion[:SHAPE]	

[SOURce:]FUNCTion:USER:DIRectory?

Purpose	List the user-defined waveforms.	
Type	Query	
Command Syntax	N/A	
Command Parameters	N/A	
*RST Value	N/A	
Query Syntax	[SOURce:]FUNCTion:USER:DIRectory?	
Query Parameters	N/A	
Query Response	Stored user-defined waveforms	
Description	The Source Function User Directory query lists the user-defined waveforms that have been stored.	
Examples	Command / Query	Response (Description)
	FUNC:USER:DIR?	(Lists stored user-defined waveforms.)
Related Commands	[SOURce:]FUNCTion:USER[:NAME]	

[SOURce:]FUNction:USER:FREE?

Purpose	Queries the amount of free space for user-defined waveforms.	
Type	Query	
Command Syntax	N/A	
Command Parameters	N/A	
*RST Value	N/A	
Query Syntax	[SOURce:]FUNction:USER:FREE?	
Query Parameters	N/A	
Query Response	Number of samples of free space	
Description	The Source Function User Free query shows how much user-defined space for waveforms is available. Samples are 12 bits/2 bytes.	
Examples	Command / Query	Response (Description)
	FUNC:USER:FREE?	126976 (<i>Shows that the available space is nearly 128 k samples.</i>)
Related Commands	[:SOURce:]FUNction:USER:DIRectory	

[SOURce:]FUNCTion:USER[:NAME]

Purpose	Sets the output waveform shape to a user-defined waveform.	
Type	Setting	
Command Syntax	[SOURce:]FUNCTion:USER[:NAME] <block_data>	
Command Parameters	<block_data> = IEEE 488.2 definite or indefinite length arbitrary block format	
*RST Value	N/A	
Query Syntax	[SOURce:]FUNCTion:USER[:NAME]?	
Query Parameters	N/A	
Query Response	IEEE 488.2 definite or indefinite length arbitrary block format	
Description	<p>The Source Function User Name command sets the user-defined waveform in an IEEE 488.2 definite or indefinite length arbitrary block format. For example,</p> <p style="text-align: center;">#18username</p> <p>defines the name of the user-defined waveform (username). This sets which user-defined waveform will be output. Once set, the user need only type in “func:user” to use this waveform, which will remain unchanged until another user-defined waveform is selected by the user.</p>	
Examples	Command / Query	Response (Description)
	FUNC:USER #18USERNAME FUNC:USER?	<i>(Sets the user-defined output waveform to “USERNAME”).</i> #18USERNAME
Related Commands	[SOURce:]FUNCTion:USER:FREE? [SOURce:]FUNCTion:USER:WAVE	

[SOURce:]FUNctioN:USER:WAVE

Purpose	Sets the name and stores a user-defined waveform.	
Type	Setting	
Command Syntax	[SOURce:]FUNctioN:USER:WAVE <block_data>	
Command Parameters	<block_data> = IEEE 488.2 definite or indefinite length arbitrary block format	
*RST Value	N/A	
Query Syntax	N/A	
Query Parameters	N/A	
Query Response	N/A	
Description	<p>The Source Function User Wave command sets the name and size of a user-defined waveform in an IEEE 488.2 definite or indefinite length arbitrary block format. For example,</p> <p style="text-align: center;">#213username,4095</p> <p>defines the name of the user-defined waveform (username), and the size of the waveform (4095). The waveform name and the waveform size are separated by a comma.</p> <p>Note: Waveform data must be transferred in “A16 Register Mode”.</p>	
Examples	Command / Query	Response (Description)
	FUNC:USER #213USERNAME,4095	(Sets the waveform name to “username”, and its size to 4 k.)
Related Commands	[SOURce:]FUNctioN:USER:FREE? [SOURce:]FUNctioN:USER[:NAME]	

[SOURce:]MARKer:POLarity

Purpose	Sets the polarity for the output marker.	
Type	Setting	
Command Syntax	[SOURce:]MARKer:POLarity <mark_pol>	
Command Parameters	<mark_pol> = POSitive NEGative	
*RST Value	POS	
Query Syntax	[SOURce:]MARKer:POLarity?	
Query Parameters	N/A	
Query Response	POS NEG	
Description	The Source Marker Polarity sets the polarity for the output marker. The default setting is positive.	
Examples	Command / Query	Response (Description)
	SOUR:MARK:POL NEG	(Sets the output marker polarity to negative.)
Related Commands	[SOURce:]MARKer:POSition [SOURce:]MARKer[:STATe]	

[SOURce:]MARKer:POSition

Purpose	Sets the marker to a specified point.	
Type	Setting	
Command Syntax	[SOURce:]MARKer:POSition <mark_pos>	
Command Parameters	<mark_pos> = 0 to 4095 <i>for standard waveforms</i> 0 to pattern_length – 1 <i>for user waveforms</i> If the marker is set to position zero (0) for a standard waveform, it will actually be placed at position one (1). This is to avoid having the marker output active while the waveform is waiting to be triggered.	
*RST Value	0	
Query Syntax	[SOURce:]MARKer:POSition?	
Query Parameters	N/A	
Query Response	0 to 4095	
Description	The Source Marker Position command sets the position of the output marker to a specific point, when the Marker Source is set to 'BBIT' (arb w/f only). The default setting is 0.	
Examples	Command / Query	Response (Description)
	MARK:POS 100	(Sets the output marker position to 100.)
Related Commands	[SOURce:]MARKer:POLarity [SOURce:]MARKer:SOURce [SOURce:]MARKer[:STATe]	

[SOURce:]MARKer:SOURce

Purpose	Selects the source to generate the output marker.	
Type	Setting	
Command Syntax	[SOURce:]MARKer:SOURce <mark_src>	
Command Parameters	<mark_src> = ZCROss BBITs	
*RST Value	ZCRO	
Query Syntax	[SOURce:]MARKer:SOURce?	
Query Parameters	N/A	
Query Response	ZCRO BBIT	
Description	<p>The Source Marker Source command sets the source to generate the output marker:</p> <p>ZCROss: Selects a comparator output. The comparator output is high, if the instantaneous signal is above mid-scale, and low, if the signal is below mid-scale. The Zero CROssing marker is valid for all waveforms. However, waveforms with multiple zero crossings, such as cardiac or sinc, will generate multiple markers per cycle.</p> <p>BBITs: With this setting, the Marker comes from a bit in Trace RAM. The marker is generated from pattern RAM and is active for one sample time during the generation of waveforms generated by the DAC. For this reason, the BBITs marker cannot be used with SINE and SQUARE waveforms. The location of the marker with respect to the beginning of the waveform is set by the MARK:POS command.</p> <p>The default setting is ZCROss.</p>	
Examples	Command / Query	Response (Description)
	MARK:SOUR BBIT MARK:SOUR?	(Selects BBITs as the output marker source.) BBIT (Verifies that BBIT is selected as the output marker source.)
Related Commands	[SOURce:]MARKer:POLarity [SOURce:]MARKer:POSition [SOURce:]MARKer[:STATe]	

[SOURce:]MARKer[:STATe]

Purpose	Enables or disables the marker output.	
Type	Setting	
Command Syntax	[SOURce:]MARKer[:STATe] <boolean>	
Command Parameters	<boolean> = 0 1 OFF ON	
*RST Value	1	
Query Syntax	[SOURce:]MARKer[:STATe]?	
Query Parameters	N/A	
Query Response	0 1	
Description	The Source Marker State command enables or disables the output marker. The default setting is enabled.	
Examples	Command / Query	Response (<i>Description</i>)
	MARK 0	(Disables the output marker.)
Related Commands	[SOURce:]MARKer:POLarity [SOURce:]MARKer:POSition	

[SOURce:]OUTPut:FILTer[:LPASs][:STATe]

Purpose	Enables or bypasses the output filter.	
Type	Setting	
Command Syntax	[SOURce:]OUTPut:FILTer[:LPASs][:STATe] <boolean>	
Command Parameters	<boolean> = 0 1 OFF ON	
*RST Value	1	
Query Syntax	[SOURce:]OUTPut:FILTer[:LPASs][:STATe]?	
Query Parameters	N/A	
Query Response	0 1	
Description	The Source Output Filter Low-pass State command enables or disables the output filter between the output of the waveform DAC and the preamplifier. The default setting is enabled.	
Examples	Command / Query	Response (Description)
	OUTP:FILT 0 OUTP:FILT?	(Bypasses the output filter.) 0 (Verifies that the output filtered is bypassed or disabled.)
Related Commands	[SOURce:]OUTPut:FILTer[:LPASs]:TYPe	

[SOURce:]OUTPut:FILTer[:LPASs]:TYPe

Purpose	Selects the output filter type.	
Type	Setting	
Command Syntax	[SOURce:]OUTPut:FILTer[:LPASs]:TYPe <BESSel ELLiptical>	
Command Parameters	<BESSel ELLiptical>	
*RST Value	ELLiptical	
Query Syntax	[SOURce:]OUTPut:FILTer[:LPASs]:TYPe?	
Query Parameters	N/A	
Query Response	BESS ELL	
Description	The Source Output Filter L-pass Type command selects the output filter type. The Bessel type has the flattest response with constant group delay. The Elliptical has the steepest cut-off. The default type is Elliptical.	
Examples	Command / Query	Response (Description)
	OUTP:FILT:TYP ELL OUTP:FILT:TYP?	(Sets the output filter type to elliptical.) (Verifies that the output filter type is elliptical.)
Related Commands	[SOURce:]OUTPut:FILTer[:LPASs]::STATe]	

[SOURce:]OUTPut[:STATe]

Purpose	Enables or disables the MAIN OUT output.	
Type	Setting	
Command Syntax	[SOURce:]OUTPut[:STATe] <boolean>	
Command Parameters	<boolean> = 0 1 OFF ON	
*RST Value	0	
Query Syntax	[SOURce:]OUTPut[:STATe]?	
Query Parameters	N/A	
Query Response	0 1	
Description	The Source Output State command controls the MAIN OUT output relay. The default setting is disabled.	
Examples	Command / Query	Response (Description)
	OUTP 1 OUTP?	(Turns the MAIN OUT on.) 1 (States that the MAIN OUT output is enabled.)
Related Commands	N/A	

[SOURce:]ROSC:SOURce

Purpose	Selects the source for the reference oscillator.	
Type	Setting	
Command Syntax	[SOURce:]ROSC:SOURce <rosc_src>	
Command Parameters	<rosc_src> = PLL BUS EXT DIV	
*RST Value	PLL	
Query Syntax	[SOURce:]ROSC:SOURce?	
Query Parameters	N/A	
Query Response	PLL BUS EXT DIV	
Description	<p>The Source ROSC Source command selects the source for the reference oscillator:</p> <p>PLL : Phase lock loop BUS : Backplane busline EXT : Signal from the CLOCK IN/OUT BNC - must be set as input DIV : On-board divider</p> <p>The default setting is PLL.</p>	
Examples	Command / Query	Response (Description)
	ROSC:SOUR EXT	<i>(Sets the source to the CLOCK IN/OUT BNC input.)</i>
	ROSC:SOUR?	<i>EXT (Verifies that the source is set to the CLOCK IN/OUT BNC input.)</i>
Related Commands	[SOURce:]CLOCK:CONFigure	

[SOURce:]SWEep:COUNT

Purpose	Sets the number of sweeps enabled per trigger event.	
Type	Setting	
Command Syntax	[SOURce:]SWEep:COUNT <count>	
Command Parameters	<count> = 0 - 65535	
*RST Value	0 (continuous)	
Query Syntax	[SOURce:]SWEep:COUNT?	
Query Parameters	N/A	
Query Response	0 - 65535	
Description	The Source Sweep Count command sets the number of sweeps per trigger event. The default value is 0, which is a continuous sweep.	
Examples	Command / Query	Response (Description)
	SWE:COUN 10	(Sets the number of sweeps to 10 per trigger.)
Related Commands	[SOURce:]SWEep:DIRection [SOURce:]SWEep:MODE [SOURce:]SWEep:POINts [SOURce:]SWEep:SPACing [SOURce:]SWEep:STARt [SOURce:]SWEep:STOP [SOURce:]SWEep[:STATe] [SOURce:]SWEep:TIME	

[SOURce:]SWEep:DIRectioN

Purpose	Sets the sweep direction.	
Type	Setting	
Command Syntax	[SOURce:]SWEep:DIRectioN <swp_direction>	
Command Parameters	<swp_direction> = UP for low to high, DOWN for high to low	
*RST Value	UP	
Query Syntax	[SOURce:]SWEep:DIRectioN?	
Query Parameters	N/A	
Query Response	UP DOWN	
Description	The Source Sweep Direction command sets the sweep direction from low to high (UP), or from high to low (DOWN). The default setting is from low to high (UP).	
Examples	Command / Query	Response (Description)
	SWE:DIR DOWN	
Related Commands	[SOURce:]SWEep:COUNT [SOURce:]SWEep:MODE [SOURce:]SWEep:POINts [SOURce:]SWEep:SPACing [SOURce:]SWEep:STARt [SOURce:]SWEep:STOP [SOURce:]SWEep[:STATe] [SOURce:]SWEep:TIME	

[SOURce:]SWEep:MODE

Purpose	Sets the sweep mode.	
Type	Setting	
Command Syntax	[SOURce:]SWEep:MODE <swp_mode>	
Command Parameters	<swp_mode> = CRESet CREVerse	
*RST Value	CRESet	
Query Syntax	[SOURce:]SWEep:MODE?	
Query Parameters	N/A	
Query Response	CRES CREV	
Description	<p>The Source Sweep Mode command sets the sweep mode:</p> <p>CRESet : weeps from the starting sweep frequency to the stop sweep frequency, then returns back to the starting sweep frequency. This is a continuous loop.</p> <p>CREVerse : Sweeps from the starting sweep frequency to the stop sweep frequency, then sweeps back to the start sweep frequency. This is a continuous loop.</p> <p>Horizontal Sweep Output – see the HORZ SWEEPOUT in Figure 1-2 – is available only while in sweep mode. The horizontal sweep output ramps from zero volts, at the beginning of a sweep cycle, to 5 volts at the end of a sweep cycle. It is intended to provide the user with a representation of the progress through the sweep. The slope of the horizontal sweep output is linear, regardless of the sweep mode selected.</p>	
Examples	Command / Query	Response (Description)
	SWE:MODE CREV	(Sets the sweep mode to CREVerse.)
Related Commands	[SOURce:]SWEep:COUNT [SOURce:]SWEep:DIRection [SOURce:]SWEep:POINts [SOURce:]SWEep:SPACing [SOURce:]SWEep:STARt [SOURce:]SWEep:STOP [SOURce:]SWEep[:STATe] [SOURce:]SWEep:TIME	

[SOURce:]SWEep:POINts

Purpose	Sets the sweep points.	
Type	Setting	
Command Syntax	[SOURce:]SWEep:POINts <swp_pts>	
Command Parameters	<swp_pts> = 2 to 4096	
*RST Value	100	
Query Syntax	[SOURce:]SWEep:POINts?	
Query Parameters	N/A	
Query Response	2 to 4096	
Description	<p>The Source Sweep Points command sets the number of discrete frequency steps between the sweep start and sweep stop frequencies.</p> <p>Sweep Time/Sweep Points must be > 500 μs.</p>	
Examples	Command / Query	Response (Description)
	SWE:POIN 10	(Sets the sweep points to 10.)
Related Commands	[SOURce:]SWEep:COUNT [SOURce:]SWEep:DIRection [SOURce:]SWEep:MODE [SOURce:]SWEep:SPACing [SOURce:]SWEep:START [SOURce:]SWEep:STOP [SOURce:]SWEep[:STATe] [SOURce:]SWEep:TIME	

[SOURce:]SWEep:SPACing

Purpose	Sets the sweep spacing.	
Type	Setting	
Command Syntax	[SOURce:]SWEep:SPACing <swp_space>	
Command Parameters	<swp_space> = LINear LOGarithmic	
*RST Value	LIN	
Query Syntax	[SOURce:]SWEep:SPACing?	
Query Parameters	N/A	
Query Response	LIN LOG	
Description	<p>The Source Sweep Spacing command sets the sweep spacing, or frequency vs. time, as follows:</p> <p>Linear : The output frequency is swept linearly between the start and stop frequencies.</p> <p>Logarithmic : The output frequency is swept on a logarithmic curve between the start and stop frequencies.</p> <p>The default setting is LINear.</p>	
Examples	Command / Query	Response (Description)
	SWE:SPAC LOG	(Sets the sweep spacing to logarithmic.)
Related Commands	[SOURce:]SWEep:COUNT [SOURce:]SWEep:DIRection [SOURce:]SWEep:MODE [SOURce:]SWEep:POINts [SOURce:]SWEep:STARt [SOURce:]SWEep:STOP [SOURce:]SWEep[:]STATe] [SOURce:]SWEep:TIME	

[SOURce:]SWEep:STARt

Purpose	Sets the starting sweep frequency.	
Type	Setting	
Command Syntax	[SOURce:]SWEep:STARt <freq>	
Command Parameters	<freq> = 1e-1 to 2e7	
*RST Value	1000 (1e3)	
Query Syntax	[SOURce:]SWEep:STARt?	
Query Parameters	N/A	
Query Response	1e-1 to 2e7	
Description	The Source Sweep Start command sets the sweep starting frequency. The default is set to 1000 (1e3).	
Examples	Command / Query	Response (Description)
	SWE:STAR 2000	(Sets the sweep starting frequency to 2000.)
Related Commands	[SOURce:]SWEep:COUNT [SOURce:]SWEep:DIRection [SOURce:]SWEep:MODE [SOURce:]SWEep:POINts [SOURce:]SWEep:SPACing [SOURce:]SWEep:STOP [SOURce:]SWEep[:STATe] [SOURce:]SWEep:TIME	

[SOURce:]SWEep:STOP

Purpose	Sets the ending sweep frequency.	
Type	Setting	
Command Syntax	[SOURce:]SWEep:STOP <freq>	
Command Parameters	<freq> = 1e-1 to 2e7	
*RST Value	2000 (2e3)	
Query Syntax	[SOURce:]SWEep:STOP?	
Query Parameters	N/A	
Query Response	1e-1 to 2e7	
Description	The Source Sweep Stop command sets the sweep stop frequency. The default is set to 2000 (2e3).	
Examples	Command / Query	Response (Description)
	SWE:STOP 3000	(Sets the sweep stop frequency to 3000.)
Related Commands	[SOURce:]SWEep:COUNT [SOURce:]SWEep:DIRection [SOURce:]SWEep:MODE [SOURce:]SWEep:POINts [SOURce:]SWEep:SPACing [SOURce:]SWEep:STARt [SOURce:]SWEep[:STATe] [SOURce:]SWEep:TIME	

[SOURce:]SWEep[:STATe]

Purpose	Enables or disables the sweep function.	
Type	Setting	
Command Syntax	[SOURce:]SWEep[:STATe] <boolean>	
Command Parameters	<boolean> = 0 1 OFF ON	
*RST Value	0	
Query Syntax	[SOURce:]SWEep[:STATe]?	
Query Parameters	N/A	
Query Response	0 1	
Description	The Source Sweep State command enables or disables the sweep mode. The default setting is disabled. Sweep Mode is only valid for sine and square waveforms.	
Examples	Command / Query	Response (Description)
	SWE:STAT 1	(Enables sweep mode.)
Related Commands	[SOURce:]SWEep:COUNT [SOURce:]SWEep:DIRection [SOURce:]SWEep:MODE [SOURce:]SWEep:POINts [SOURce:]SWEep:SPACing [SOURce:]SWEep:STARt [SOURce:]SWEep:STOP [SOURce:]SWEep:TIME	

[SOURce:]SWEep:TIME

Purpose	Sets the sweep duration time.	
Type	Setting	
Command Syntax	[SOURce:]SWEep:TIME <time_val>	
Command Parameters	<time_val> = 0.0005 s to 348160 s	
*RST Value	0.100 sec	
Query Syntax	[SOURce:]SWEep:TIME?	
Query Parameters	N/A	
Query Response	0.0005 s to 348160 s	
Description	<p>The Source Sweep Time command sets the sweep duration time in seconds.</p> <p>Time : Depends on the number of points in the sweep Time/points: Must be $\geq 250e-6$</p> <p>Time must not exceed 348160 seconds. The default setting is 0.100 seconds.</p>	
Examples	Command / Query	Response (Description)
	SWE:TIME 0.030	(Sets the sweep time to 30 ms.)
Related Commands	[SOURce:]SWEep:COUNT [SOURce:]SWEep:DIRection [SOURce:]SWEep:MODE [SOURce:]SWEep:POINts [SOURce:]SWEep:SPACing [SOURce:]SWEep:STARt [SOURce:]SWEep:STOP [SOURce:]SWEep[:STATe]	

[SOURce:]SYNC:MODE

Purpose	Selects the sync mode.	
Type	Setting	
Command Syntax	[SOURce:]SYNC:MODE <sync_mode>	
Command Parameters	<sync_mode> = MASTer SLAVe	
*RST Value	MASTer	
Query Syntax	[SOURce:]SYNC:MODE?	
Query Parameters	N/A	
Query Response	MASTer SLAVe	
Description	The Source Sync Mode command is used to configure each module as a master or slave, when configuring two or more VM3640 modules to sync simultaneously. The default setting is master.	
Examples	Command / Query	Response (Description)
	SYNC:MODE SLAV SYNC:MODE?	(Configures the module to be a slave.) SLAV (Verifies that the module is configured as a slave.)
Related Commands	[SOURce:]SYNC[STATe:]	

[SOURce:]SYNC[:STATe]

Purpose	Enables or disables simultaneous sync mode.	
Type	Setting	
Command Syntax	[SOURce:]SYNC[:STATe] <boolean>	
Command Parameters	<boolean> = 0 1 OFF ON	
*RST Value	0	
Query Syntax	[SOURce:]SYNC[:STATe]?	
Query Parameters	N/A	
Query Response	0 1	
Description	The Source Sync State command enables or disables sync mode, when configuring two or more VM3640 modules to sync simultaneously. The default setting is disabled. Note that each module must first be configured as a master or slave before using this function.	
Examples	Command / Query	Response (Description)
	SYNC 1 SYNC?	(Enables simultaneous synchronize mode.) 1 (Verifies that simultaneous sync mode is enabled.)
Related Commands	[SOURce:]SYNC:MODE	

[SOURce:]TRIGger:GATE

Purpose	Selects gate mode.	
Type	Setting	
Command Syntax	[SOURce:]TRIGger:GATE <boolean>	
Command Parameters	<boolean> = 0 1 OFF ON	
*RST Value	0	
Query Syntax	[SOURce:]TRIGger:GATE?	
Query Parameters	N/A	
Query Response	0 1	
Description	The Source Trigger Gate command selects the gated mode of operation, when the trigger source is external. The default value is disabled.	
Examples	Command / Query	Response (Description)
	TRIG:GATE 1	(Selects trigger gate mode.)
Related Commands	[SOURce:]TRIGger[:MODE] [SOURce:]TRIGger:POLarity [SOURce:]TRIGger:RATE [SOURce:]TRIGger:TTLT	

[SOURce:]TRIGger[:MODE]

Purpose	Selects the trigger source.	
Type	Setting	
Command Syntax	[SOURce:]TRIGger[:MODE] <trg_mode>	
Command Parameters	<trg_mode> = BUS EXTernal IMMEDIATE INTernal	
*RST Value	IMM	
Query Syntax	[SOURce:]TRIGger[:MODE]?	
Query Parameters	N/A	
Query Response	BUS EXT IMM INT	
Description	The Source Trigger Mode command selects the trigger source. The default selection is IMMEDIATE.	
Examples	Command / Query	Response (Description)
	TRIG:MODE EXT	(Selects external mode of trigger.)
Related Commands	[SOURce:]TRIGger:GATE [SOURce:]TRIGger:POLarity [SOURce:]TRIGger:RATE [SOURce:]TRIGger:TTLT	

[SOURce:]TRIGger:POLarity

Purpose	Selects the polarity of the trigger signal.	
Type	Setting	
Command Syntax	[SOURce:]TRIGger:POLarity <trig_pol>	
Command Parameters	<trig_pol> = POSitive NEGative	
*RST Value	POS	
Query Syntax	[SOURce:]TRIGger:POLarity?	
Query Parameters	N/A	
Query Response	POS NEG	
Description	The Source Trigger Polarity command set the trigger polarity to positive or negative. The default setting is positive.	
Examples	Command / Query	Response (Description)
	TRIG:POL NEG	<i>(Sets the trigger negative.)</i>
Related Commands	[SOURce:]TRIGger:GATE [SOURce:]TRIGger[:MODE] [SOURce:]TRIGger:RATE [SOURce:]TRIGger:TTLT	

[SOURce:]TRIGger:RATE


Purpose	Sets the period for the internal trigger.	
Type	Setting	
Command Syntax	[SOURce:]TRIGger:RATE <rate>	
Command Parameters	<rate> = 0.1 to 100000	
*RST Value	100	
Query Syntax	[SOURce:]TRIGger:RATE?	
Query Parameters	N/A	
Query Response	0.1 to 100000	
Description	The Source Trigger Rate command sets the period for the internal trigger. The default setting is 100.	
Examples	Command / Query	Response (Description)
	TRIG:RATE 10	(Sets the internal trigger period to 10.)
Related Commands	[SOURce:]TRIGger:GATE [SOURce:]TRIGger[:MODE] [SOURce:]TRIGger:POLarity [SOURce:]TRIGger:TTLT	

[SOURce:]TRIGger:TTLT

Purpose	Selects the backplane trigger line.	
Type	Setting	
Command Syntax	[SOURce:]TRIGger:TTLT <trg_ttl>	
Command Parameters	<trg_ttl> = 0 - 7	
*RST Value	0	
Query Syntax	[SOURce:]TRIGger:TTLT?	
Query Parameters	N/A	
Query Response	0 - 7	
Description	The Source Trigger TTLT command selects the backplane trigger line. The default setting is trigger line 0.	
Examples	Command / Query	Response (Description)
	TRIG:TTLT 3	(Selects backplane trigger line 3.)
Related Commands	[SOURce:]TRIGger:GATE [SOURce:]TRIGger[:MODE] [SOURce:]TRIGger:POLarity [SOURce:]TRIGger:RATE	

[SOURCE:]VOLTage[:LEVel][:AMPLitude]

Purpose	Sets the signal output peak-to-peak voltage.	
Type	Setting	
Command Syntax	[SOURCE:]VOLTage[:LEVel][:AMPLitude] <numeric_value>	
Command Parameters	<numeric_value>= Range = DC Volts : -6 V to +6 V into 50 Ω Pulsed DC : -6 V _{peak} to +6 V _{peak} into 50 Ω Sine/Square 0.1 Hz to 10 MHz : 10 V _{p-p} into 50 Ω 10 MHz to 20 MHz : 5 V _{p-p} into 50 Ω All other waveforms : 10 V _{p-p} into 50 Ω	
*RST Value	1.0	
Query Syntax	[SOURCE:]VOLTage[:LEVel][:AMPLitude]?	
Query Parameters	N/A	
Query Response	Varies	
Description	The Source Voltage Level Amplitude command sets the peak-to-peak amplitude value of the signal output voltage. The default setting is 1.0.	
Examples	Command / Query	Response (Description)
	VOLT 2.5 VOLT?	(Sets the voltage amplitude to 2.5 V _{p-p}) 2.5 (Verifies that the voltage amplitude is set to 2.5 V _{p-p})
Related Commands	[SOURCE:]VOLTage[:LEVel]:OFFSet	

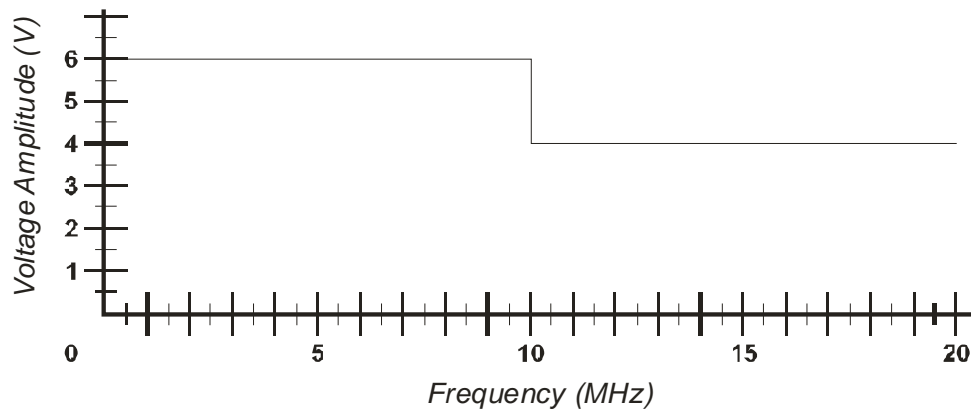**FIGURE 4-2: VOLTAGE VS. FREQUENCY - SINE AND SQUARE WAVES**

[SOURce:]VOLTage[:LEVel]:OFFSet

Purpose	Sets the output voltage offset.	
Type	Setting	
Command Syntax	[SOURce:]VOLTage[:LEVel]:OFFSet <numeric_value>	
Command Parameters	<numeric_value> = voltage range below Range: DC Volts: -3 V to +3 V, Offset + Amplitude cannot exceed ± 6 V Pulsed DC: -3 V to +3 V, Offset + (Amplitude / 2) cannot exceed ± 3.5 V Sine/Square 0.1 Hz – 10 MHz: -3 V to +3 V, Offset + Amplitude cannot exceed 6 V 10 MHz - 20 MHz: -3 V to +3 V, Offset + Amplitude cannot exceed 4 V All other waveforms: -3 V to +3 V, Offset + Amplitude cannot exceed 6 V	
*RST Value	0.0	
Query Syntax	[SOURce:]VOLTage[:LEVel]:OFFSet?	
Query Parameters	N/A	
Query Response	-3.0 to 3.0	
Description	The Source Voltage Level Offset command controls the level of the output offset-voltage. The default setting is 0.0.	
Examples	Command / Query	Response (Description)
	VOLT:OFFS 1 VOLT:OFFS?	(Sets the level of the output offset-voltage to 1.) 1 (Verifies that the level of the output offset-voltage is 1.)
Related Commands	[SOURce:]VOLTage[:LEVel][:AMPLitude]	

TEST[:ALL]?

Purpose	Performs a non-destructive test of the hardware.	
Type	Query	
Command Syntax	N/A	
Command Parameters	N/A	
*RST Value	N/A	
Query Syntax	TEST[:ALL]?	
Query Parameters	N/A	
Query Response	Numeric value	
Description	The Test All query performs a non-destructive test of the hardware. A result of 0 indicates that the test has passed; a non-zero value indicates failure.	
Examples	Command / Query	Response (<i>Description</i>)
	TEST?	0
Related Commands	TEST:RAM?	

TEST:RAM?

Purpose	Performs a destructive test of the Trace Memory.	
Type	Query	
Command Syntax	N/A	
Command Parameters	N/A	
*RST Value	N/A	
Query Syntax	TEST:RAM?	
Query Parameters	N/A	
Query Response	Numeric value	
Description	The Test Ram query runs a destructive self-test of the Trace Memory. A return of 0 indicates the test has passed.	
Examples	Command / Query	Response (<i>Description</i>)
	TEST:RAM?	(Runs Trace Memory self-test.)
Related Commands	TEST[:ALL]?	

REQUIRED SCPI COMMANDS

STATus:OPERation:CONDition?

Purpose	Queries the Operation Status Register's condition register.	
Type	Required SCPI command	
Command Syntax	N/A	
Command Parameters	N/A	
*RST Value	N/A	
Query Syntax	STATus:OPERation:CONDition?	
Query Parameters	N/A	
Query Response	0 32	
Description	Reports the bits set in the Operation Status Register's condition register. Returns a decimal number of 0 (no bits set) or 32 (bit 5 set).	
Examples	Command / Query	Response (<i>Description</i>)
	STAT:OPER:COND?	
Related Commands	STATus:OPERation:ENABLE STATus:OPERation[:EVENT]	

STATus:OPERation:ENABLE

Purpose	Sets the Operation Status Register's enable register.	
Type	Required SCPI command	
Command Syntax	STATus:OPERation:ENABLE <NRf>	
Command Parameters	<NRf> = numeric ASCII value from 0 to 32767	
*RST Value	<NRf> must be specified	
Query Syntax	STATus:OPERation:ENABLE?	
Query Parameters	N/A	
Query Response	<NRf> = Numeric ASCII value from 0 to 32767	
Description	<p>This command enables bits in the Operation Status Register's enable register to report to the summary bit; sets Status Bytes register bit 7 to true.</p> <p>The query reports the bits enabled in the Operation Status Register's enable register, then clears the register contents and enters the value into the computer.</p>	
Examples	Command / Query	Response (Description)
	STAT:OPER:ENAB 33	(Enables bit 0 and bit 5.)
	STAT:OPER:ENAB?	33
Related Commands	STATus:OPERation:CONDition? STATus:OPERation[:EVEN]	

STATus:OPERation[:EVENT]?

Purpose	Queries the Operation Status Register's event register.	
Type	Required SCPI command	
Command Syntax	N/A	
Command Parameters	N/A	
*RST Value	N/A	
Query Syntax	STATus:OPERation[:EVENT]?	
Query Parameters	N/A	
Query Response	0	
Description	Queries the bits set in the event register of the Operation Status Register. This command clears all bits in the event register.	
Examples	Command / Query	Response (<i>Description</i>)
	STAT:OPER?	0
Related Commands	STATus:OPERation:CONDition? STATus:OPERation:ENABle?	

STATus:PRESet

Purpose	Presets the Status Registers.	
Type	Required SCPI command	
Command Syntax	STATus:PRESet	
Command Parameters	N/A	
*RST Value	N/A	
Query Syntax	N/A	
Query Parameters	N/A	
Query Response	N/A	
Description	The Status Preset command presets the Status Registers. The Operational Status Enable Register is set to 0 and the Questionable Status Enable Register is set to 0. This command is provided for SCPI compliance only.	
Examples	Command / Query	Response (<i>Description</i>)
	STAT:PRES	
Related Commands	N/A	

STATus:QUEStionable:CONDition?

Purpose	Queries the Questionable Status Condition Register.	
Type	Required SCPI command	
Command Syntax	N/A	
Command Parameters	N/A	
*RST Value	N/A	
Query Syntax	STATus:QUEStionable:CONDition?	
Query Parameters	N/A	
Query Response	0	
Description	The Questionable Status Condition Register query is provided for SCPI compliance only. The VM3640 does not alter any bits in this register and a query always reports a 0.	
Examples	Command / Query	Response (<i>Description</i>)
	STAT:QUES:COND?	0
Related Commands	N/A	

STATus:QUEStionable:ENABle

Purpose	Sets the Questionable Status Enable Register.	
Type	Required SCPI command	
Command Syntax	STATus:QUEStionable:ENABle <NRf>	
Command Parameters	<NRf> = numeric ASCII value from 0 to 32767	
*RST Value	<NRf> must be supplied	
Query Syntax	STATus:QUEStionable:ENABle?	
Query Parameters	N/A	
Query Response	<NRf> = Numeric ASCII value from 0 to 32767	
Description	<p>The command sets the bits in the Questionable Data/Signal Register's enable register to be reported to the summary bit (sets Status Byte Register bit 3 to true).</p> <p>The Status Questionable Enable query reports the contents of the Questionable Data/Signal Register's enable register, then clears the register contents and enters the value into the computer</p>	
Examples	Command / Query	Response (<i>Description</i>)
	STAT:QUES:ENAB 64 STAT:QUES:ENAB?	64
Related Commands	N/A	

STATus:QUESTionable[:EVENT]?

Purpose	Queries the Questionable Status Event Register.	
Type	Required SCPI command	
Command Syntax	N/A	
Command Parameters	N/A	
*RST Value	N/A	
Query Syntax	STATus:QUESTionable [:EVENT]?	
Query Parameters	N/A	
Query Response	Decimal number	
Description	The query reports the bits set in the event register of the Questionable Data/Signal register. This command reads the event register, then clears all bits in the event register and enters the value into the computer.	
Examples	Command / Query	Response (<i>Description</i>)
	STAT:QUES?	0
Related Commands	N/A	

SYSTem:ERRor?

Purpose	Queries the Error Queue.	
Type	Required SCPI command	
Command Syntax	N/A	
Command Parameters	N/A	
*RST Value	Clears queue	
Query Syntax	SYSTem:ERRor?	
Query Parameters	N/A	
Query Response	ASCII string	
Description	<p>The System Error query is used to retrieve error messages from the error queue. The error queue will maintain two error messages. If additional errors occur, the queue will overflow and the subsequent error messages will be lost. In the case of an overflow, an overflow message will replace the second error message. See the SCPI standard Volume 2: Command Reference for details on errors and reporting them.</p>	
Examples	Command / Query	Response (<i>Description</i>)
	SYST:ERR?	-350, "Queue overflow"
Related Commands	N/A	

SYSTem:VERSion?

Purpose	Queries the SCPI version number to which the VM3640 complies.	
Type	Required SCPI command	
Command Syntax	N/A	
Command Parameters	N/A	
*RST Value	N/A	
Query Syntax	SYSTem:VERSion?	
Query Parameters	N/A	
Query Response	Numeric ASCII value	
Description	The System Version query reports version of the SCPI standard with which the VM3640 complies.	
Examples	Command / Query	Response (<i>Description</i>)
	SYST:VERS?	1994.0
Related Commands	N/A	

INDEX

*CLS	26, 31
*ESE	26, 32
*ESR?	26, 33
*IDN?	26, 34
*OPC	26, 35
*RST	26, 36
*SRE	26, 37
*STB?	26, 38
*TRG	26, 39
*TST?	26, 40
*WAI	26, 41

[

[SOURCE:]BURSt:COUNT	27, 63
[SOURCE:]BURSt:PHASe	27, 64
[SOURCE:]BURSt:RATE	27, 65
[SOURCE:]BURSt[:STATe]	27, 66
[SOURCE:]CLOCK:CONFigure	27, 67
[SOURCE:]FREQuency[:CW]	27, 68
[SOURCE:]FUNctIon:DC:VOLTagE	27, 69
[SOURCE:]FUNctIon:PULSe:WIDTh	27, 70
[SOURCE:]FUNctIon:SQUare[:DUTY]	27, 72
[SOURCE:]FUNctIon:USER:DIRectory?	27, 73
[SOURCE:]FUNctIon:USER:FREE?	28, 74
[SOURCE:]FUNctIon:USER:WAVE	28, 76
[SOURCE:]FUNctIon:USER[:NAME]	28, 75
[SOURCE:]FUNctIon[:SHAPE]	27, 71
[SOURCE:]MARKer:POLarity	28, 78
[SOURCE:]MARKer:POSItion	28, 77
[SOURCE:]MARKer:SOURce	28, 79
[SOURCE:]MARKer[:STATe]	28, 80
[SOURCE:]OUTPut:FILTer[:LPASs]:TYPe	28, 82
[SOURCE:]OUTPut:FILTer[:LPASs][:STATe]	28, 81
[SOURCE:]OUTPut[:STATe]	28, 83
[SOURCE:]ROSC:SOURce	28, 84
[SOURCE:]SWEep:COUNT	28, 85
[SOURCE:]SWEep:DIRectIon	28, 86
[SOURCE:]SWEep:MODE	28, 87
[SOURCE:]SWEep:POINts	28, 88
[SOURCE:]SWEep:SPACing	28, 89
[SOURCE:]SWEep:STARt	28, 90
[SOURCE:]SWEep:STOP	28, 91
[SOURCE:]SWEep:TIME	28, 93
[SOURCE:]SWEep[:STATe]	28, 92
[SOURCE:]SYNC:MODE	28, 94
[SOURCE:]SYNC[:STATe]	28, 95
[SOURCE:]TRIGger:GATE	28, 96
[SOURCE:]TRIGger:POLarity	28, 98
[SOURCE:]TRIGger:RATE	28, 99
[SOURCE:]TRIGger:TTLT	28, 100
[SOURCE:]TRIGger[:MODE]	28, 97
[SOURCE:]VOLTagE[:LEVel]:OFFSet	28, 102
[SOURCE:]VOLTagE[:LEVel][:AMPLitude]	28, 101

A

AM[:STATe]	27, 42
------------	--------

B

backplane	20, 21
backplane jumpers	19, 20

C

cable	10
CALibration:COUNT?	27, 43
CALibration:DC:LEVel	27, 54
CALibration:SECurity:CODE	27, 55
CALibration:SECurity:STATe	27, 56
CALibration:STATe	27, 57
CALibration:STORE	27, 58
CALibration[:DATA]	27, 44
CALibration[:DATA]:AFCorrection	27, 45
CALibration[:DATA]:AMPLitude:OFFSet	27, 47
CALibration[:DATA]:AMPLitude[:GAIN]	27, 46
CALibration[:DATA]:DUTY	27, 48
CALibration[:DATA]:OFFSet:OFFSet	27, 50
CALibration[:DATA]:OFFSet[:GAIN]	27, 49
CALibration[:DATA]:SQHI	27, 51
CALibration[:DATA]:SQUare:OFFSet:OFFSet	27, 52
CALibration[:DATA]:ZERO	27, 53
cooling	19

D

dynamic address configuration	20
-------------------------------	----

E

electric shock	10
explosive atmosphere	10

F

frame or chassis ground	9
FSK[:STATe]	27, 59

G

grounding conductor	10
---------------------	----

K

keyword	21, 22
---------	--------

L

logical address	19, 20
-----------------	--------

M

message-based	14, 21
---------------	--------

O

overheating	10
-------------	----

P

parameter	22
Port	23
power	19, 20, 25, 33
power cord	10
probes	10
programming language	21
PSK[:STATe]	27, 60

R

RESet	27, 61
-------------	--------

S

SENSe:CORRection:IMPedance	27, 62
STATus:OPERation:CONDition?	29, 105
STATus:OPERation:ENABle	29, 106
STATus:OPERation[:EVENT]?	29, 107
STATus:PRESet	29, 108
STATus:QUEStionable:CONDition?	29, 109
STATus:QUEStionable:ENABle	29, 110
STATus:QUEStionable[:EVENT]?	29, 111
syntax	21, 25
SYSTem:ERRor?	29, 112
SYSTem:VERSion?	29, 113

T

temperature range	10
test leads	10
TEST:RAM?	28, 104
TEST[:ALL]?	28, 103
tree-structured language	21

V

ventilation	10
VMIP	13, 20
VXIbus	14, 19, 21

W

wet or damp conditions	10
word serial protocol	14