

**DL9140/DL9140L/  
DL9240/DL9240L  
Digital Oscilloscope  
Communication Interface**

**U S E R ' S M A N U A L**

---

---

Thank you for purchasing the DL9140/DL9140L/DL9240/DL9240L Digital Oscilloscope. This Communication Interface User's Manual describes the functions and commands of the following communication interfaces.

- USB Interface
- Ethernet Interface (Optional)

To ensure correct use, please read this manual thoroughly before beginning operation. After reading the manual, keep it in a convenient location for quick reference whenever a question arises during operation.

The following manuals are provided for the DL9140/DL9140L/DL9240/DL9240L. Please read all of them.

Manual Title	Manual No.	Description
DL9140/DL9140L/DL9240/DL9240L User's Manual	IM 701310-01E	Explains all functions and procedures of the DL9000 excluding the communication functions.
DL9140/DL9140L/DL9240/DL9240L Communication Interface User's Manual (CD-ROM)	IM 701310-17E	This manual. Describes the communication functions of the USB and Ethernet interfaces.

## Notes

- The contents of this manual are subject to change without prior notice as a result of continuing improvements to the instrument's performance and functions.
- Every effort has been made in the preparation of this manual to ensure the accuracy of its contents. However, should you have any questions or find any errors, please contact your nearest YOKOGAWA dealer.
- Copying or reproducing all or any part of the contents of this manual without the permission of Yokogawa Electric Corporation is strictly prohibited.

## USB Interface and Ethernet Interface

- The items below are needed on the PC to use the communication functions via the USB interface.
  - DL Series Library (TMCTL)
  - USB device driver for connecting the PC and the DL9140/DL9140L/DL9240/DL9240L
- The items below are needed on the PC to use the communication functions via the Ethernet interface.
  - DL Series Library (TMCTL)

The library and driver above can be downloaded from the following Web page.  
<http://www.yokogawa.com/tm/tm-softdownload.htm>

## Sample Programs

Sample programs can be downloaded from the following Web page.  
<http://www.yokogawa.com/tm/tm-softdownload.htm>

---

## Trademarks

- Microsoft, MS-DOS, Visual C++, Windows, and Windows NT are registered trademarks of Microsoft Corporation in the United States and/or other countries.
- Adobe and Acrobat are trademarks of Adobe Systems Incorporated.
- For purposes of this manual, the TM and ® symbols do not accompany their respective trademark names or registered trademark names.
- The TCP/IP software of this product and the document concerning the TCP/IP software have been developed/created by YOKOGAWA based on the BSD Networking Software, Release 1 that has been licensed from the University of California.
- Other company and product names are trademarks or registered trademarks of their respective holders.

## Revisions

1st Edition: June 2005  
2nd Edition: September 2005  
3rd Edition: December 2005

---

# How to Use This Manual

## Structure of This Manual

This user's manual consists of the following sections.

- Chapter 1 Overview of the USB Interface**  
Describes the functions and specifications of the USB interface.
- Chapter 2 Overview of the Ethernet Interface (Optional)**  
Describes the functions and specifications of the Ethernet interface.
- Chapter 3 Overview of the GP-IB Interface**  
Describes the functions and specifications of the GP-IB interface.
- Chapter 4 Before Programming**  
Describes the syntax used to transmit commands.
- Chapter 5 Command**  
Describes all the commands one by one.
- Chapter 6 Status Reports**  
Describes the status byte, various registers, and queues.
- Appendix**  
Describes reference material such as an ASCII character code table.

## Conventions Used in This Manual

### Safety Markings

The following markings are used in this manual.



*Improper handling or use can lead to injury to the user or damage to the instrument.* This symbol appears on the instrument to indicate that the user must refer to the user's manual for special instructions. The same symbol appears in the corresponding place in the user's manual to identify those instructions. In the manual, the symbol is used in conjunction with the word "WARNING" or "CAUTION."

### **WARNING**

Calls attention to actions or conditions that could cause serious or fatal injury to the user, and precautions that can be taken to prevent such occurrences.

### **CAUTION**

Calls attentions to actions or conditions that could cause light injury to the user or damage to the instrument or user's data, and precautions that can be taken to prevent such occurrences.

### **Note**

Calls attention to information that is important for proper operation of the instrument.

### Notations Used on Pages Describing Operating Procedures

On pages that describe the operating procedures in Chapter 1 through 3, the following notations are used to distinguish the procedures from their explanations.

### **Procedure**

This subsection contains the operating procedure used to carry out the function described in the current chapter. All procedures are written with inexperienced users in mind; experienced users may not need to carry out all the steps.

### **Explanation**

This section describes the setup items and the limitations regarding the procedures.

### Notations Used in the Procedures

#### Panel Keys and Soft keys

Bold characters used in the procedural explanations indicate characters that are marked on the panel keys or the characters of the soft keys or menus displayed on the screen.

#### SHIFT+Panel Key

*SHIFT+key* means you will press the SHIFT key to turn ON the SHIFT key followed by the operation key. The setup menu marked in purple above (or below) the panel key that you pressed appears on the screen.

#### Rotary knob/SET key

*Rotary knob/SET key* indicates selecting or setting parameters and entering values using the rotary knob, the SET key, and other keys. For details on the procedure, see section 4.1 or 4.2 in the *User's Manual IM701310-01E*.

#### Unit

k Denotes 1000. Example: 100 kS/s

K Denotes 1024. Example: 459 KB (file data size)

**Symbols Used in the Syntax**

The following table indicates symbols that are used in the syntax mainly in chapter 5. These symbols are referred to as BNF (Backus-Naur Form) symbols. For details on the data, see pages 4-5 and 4-6.

Symbol	Meaning	Example	Example of Input
<x>	Defined value	CHANnel<x> <x> = 1 to 4	-> CHANNEL2
{}	Select from values given in {}	COUPLing {AC DC DC50 GND}	-> COUPLING AC
	Exclusive OR		
[]	Can be omitted	TRIGger [:SIMPlE]:SLOPe	-> TRIGger:SLOPe

---

# Contents

	How to Use This Manual .....	iii
<b>Chapter 1</b>	<b>Overview of the USB Interface</b>	
1.1	Part Names and Functions .....	1-1
1.2	USB Interface Functions and Specifications .....	1-2
1.3	Connection via the USB Interface .....	1-3
1.4	Setting the DL9000 (USB) .....	1-4
<b>Chapter 2</b>	<b>Ethernet Interface</b>	
2.1	Part Names and Functions .....	2-1
2.2	Ethernet Interface Functions and Specifications .....	2-2
2.3	Connecting the Ethernet Interface .....	2-4
2.4	Setting the DL9000 (Network) .....	2-5
<b>Chapter 3</b>	<b>Overview of the GP-IB Interface</b>	
3.1	Part Names and Functions .....	3-1
3.2	Connecting the GP-IB Card .....	3-2
3.3	GP-IB Interface Functions .....	3-3
3.4	GP-IB Interface Specifications .....	3-4
3.5	Setting the DL9000 (GP-IB) .....	3-5
3.6	Responses to Interface Messages .....	3-6
<b>Chapter 4</b>	<b>Before Programming</b>	
4.1	Messages .....	4-1
4.2	Commands .....	4-3
4.3	Response .....	4-4
4.4	Data .....	4-5
4.5	Synchronization with the Controller .....	4-7
<b>Chapter 5</b>	<b>Commands</b>	
5.1	A List of Commands .....	5-1
5.2	ACQUIRE Group .....	5-34
5.3	ANALYSIS Group .....	5-35
5.4	ASETUP Group .....	5-64
5.5	CALIBRATE Group .....	5-64
5.6	CHANNEL Group .....	5-65
5.7	CLEAR Group .....	5-67
5.8	COMMUNICATE Group .....	5-68
5.9	CURSORM Group .....	5-70
5.10	DISPLAY Group .....	5-80
5.11	FILEGROUP .....	5-83
5.12	GONOGO Group .....	5-88
5.13	HCOPY Group .....	5-97
5.14	HISTORY Group .....	5-99
5.15	IMAGE Group .....	5-109
5.16	INITIALIZE Group .....	5-109
5.17	MATH Group .....	5-110
5.18	MEASURE Group .....	5-118

5.19	REFerence Group .....	5-127
5.20	SEARch Group .....	5-128
5.21	SNAP Group .....	5-133
5.22	SSTart Group .....	5-133
5.23	STARt Group .....	5-133
5.24	STATus Group .....	5-134
5.25	STOP Group .....	5-135
5.26	SYSTem Group .....	5-136
5.27	TELEcomtest Group .....	5-137
5.28	TIMebase Group .....	5-142
5.29	TRIGger Group .....	5-143
5.30	WAVEform Group .....	5-176
5.31	ZOOM Group .....	5-178
5.32	Common Command Group .....	5-180

**Chapter 6 Status Reports**

6.1	Overview of the Status Report .....	6-1
6.2	Status Byte .....	6-2
6.3	Standard Event Register .....	6-3
6.4	Extended Event Register .....	6-4
6.5	Output Queue and Error Queue .....	6-5

**Appendix**

Appendix 1	ASCII Character Codes .....	App-1
Appendix 2	Error Messages .....	App-2
Appendix 3	Correspondence Table of Measure Parameter Names .....	App-5
Appendix 4	Eye Pattern Parameter Name Table .....	App-6







# Chapter 1 Overview of the USB Interface

## 1.1 Part Names and Functions

### Front Panel

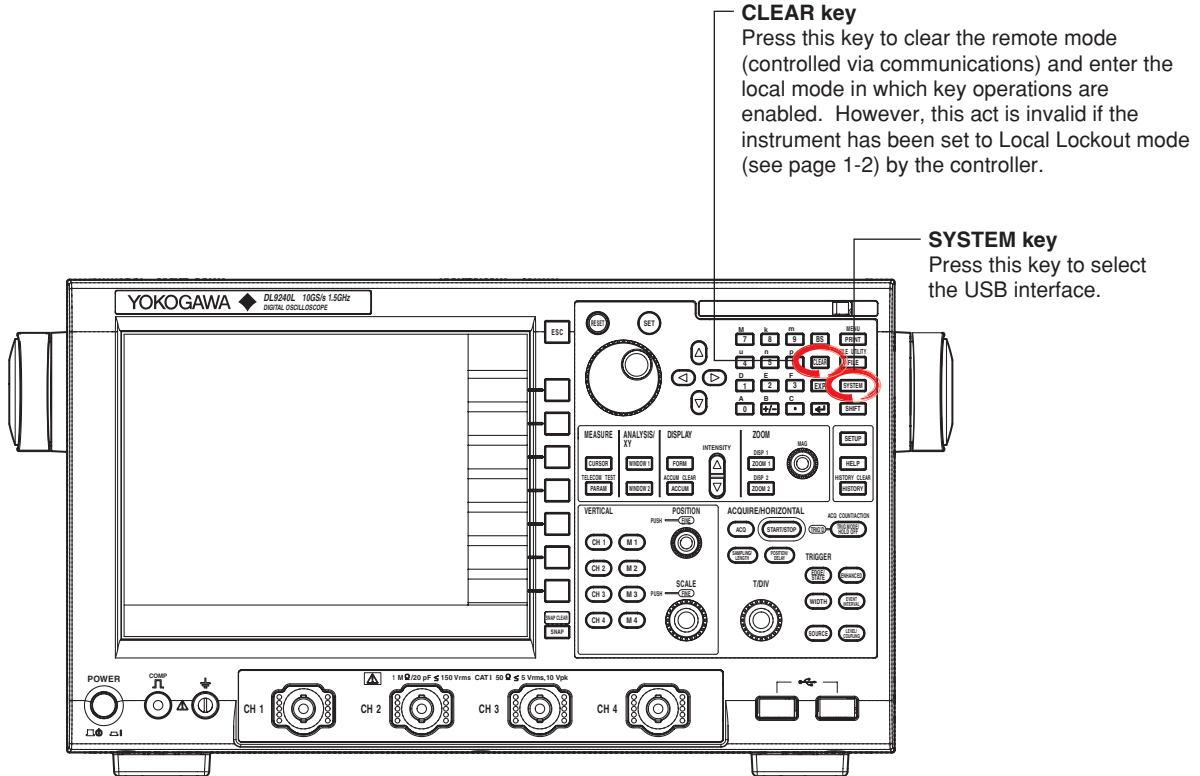

### Rear Panel

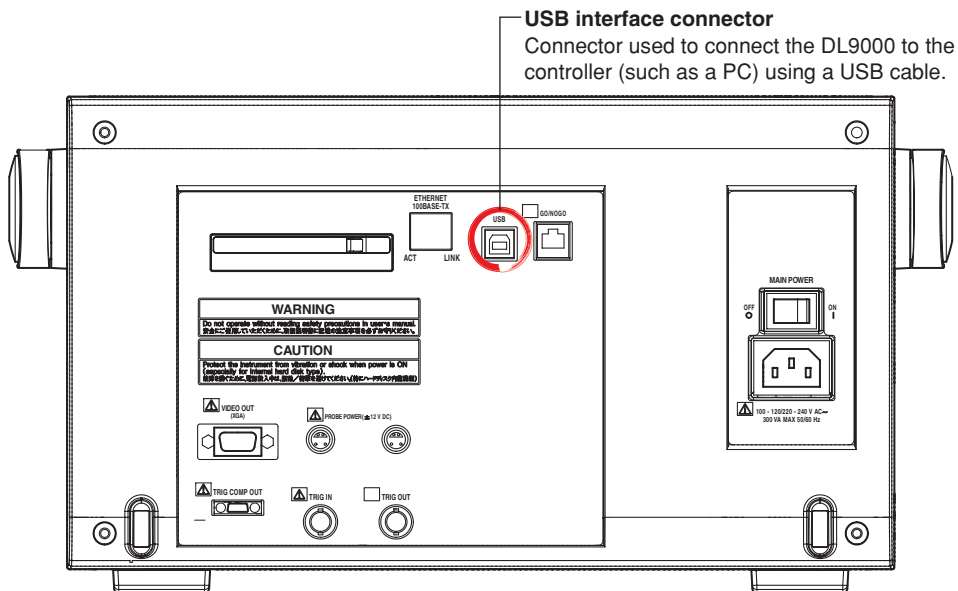

## 1.2 USB Interface Functions and Specifications

### USB Interface Functions

#### Reception Function

You can specify the same settings as those specified by front panel key operations. Receives output requests for measured and computed data, setup parameters of the panel, and error codes.

#### Transmission Function

Outputs measured and computed data.  
Outputs panel setup parameters and the status byte.  
Outputs error codes that have occurred.

### USB Interface Specifications

Electrical and mechanical specifications: Conforms to USB Rev. 2.0

Connector: Type B connector (receptacle)

Number of ports: 1

Power supply: Self-powered

PC system supported: PC running Windows 2000 or Windows XP with a standard USB port (a separate device driver is needed to connect to a PC).

### Data Rate

The response time when outputting waveform data is shown below as a reference.

Model: 701313 main unit

Controller: PC (Pentium4 3.4 GHz, USB2.0) and OS (Windows XP Professional SP1)

Language used: Visual C++

---

Number of Data Points	Word Data	ASCII Data
2500	Approx. 51 ms	Approx. 0.469 s
125000	Approx. 193 ms	Approx. 22.766 s
1250000	Approx. 1606 ms	Approx. 224.890 s
2500000	Approx. 3188 ms	Approx. 451.297 s
6250000	Approx. 7841 ms	Approx. 1127.625 s

---

### Switching between Remote and Local Modes

#### When Switching from Local to Remote Mode

If the DL9000 receives an REN (Remote Enable) message from the PC when it is in the local mode, it switches to the remote mode.

- REMOTE is displayed in the center of the upper section of the screen.
- All keys except the **CLEAR** key are disabled.
- Settings entered in local mode are retained even when the DL9000 switches to remote mode.

#### When Switching from Remote to Local Mode

Pressing **CLEAR** in remote mode puts the instrument in local mode. However, this is void.

- REMOTE indication in the center of the upper section of the screen disappears.
- Key operations are enabled.
- Settings entered in remote mode are retained even when the DL9000 switches to local mode.

#### Note

---

The USB interface cannot be used simultaneously with the Ethernet interface.

---

## 1.3 Connection via the USB Interface

### Precautions to Be Taken When Making Connections


- Connect the USB cable by inserting the connector firmly into the USB connector.
- When connecting multiple devices using USB hubs, connect the DL9000 to the USB hub that is closest to the controller.
- Do not insert the USB cable into the GO/NO-GO output terminal. If you do, the instrument may malfunction.

## 1.4 Setting the DL9000 (USB)

### Procedure

#### Selecting the Communication Interface

1. Press **SYSTEM**.
2. Press the **Remote Control** soft key.
3. Press the **USB** soft key.

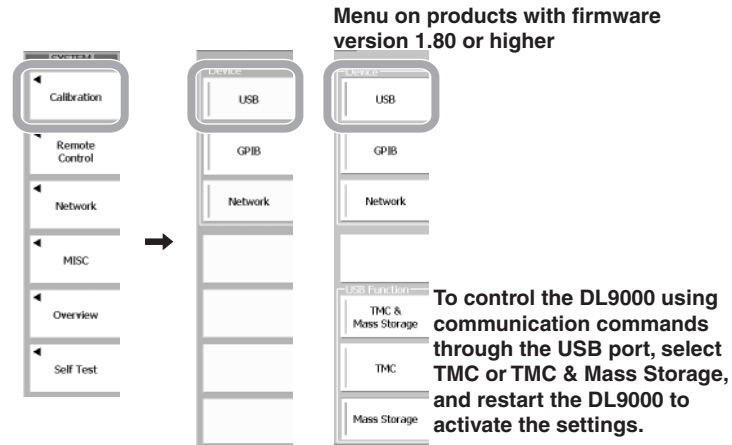


#### Note

- Only the communication interface selected by Remote Control is enabled. The DL9000 does not accept commands that are transmitted to other unselected communication interfaces.
- To control the DL9000 remotely using communication commands through the USB port, select "TMC" in the menu above, and carry out the procedure below.
  - You must restart the DL9000 to activate the TMC, Mass Storage, or TMC & Mass Storage setting. Wait at least 10 seconds after you turn the power switch OFF, and then turn the switch back ON.
  - Install YOKOGAWA's TMC (Text and Measurement Class) driver into your PC. To obtain YOKOGAWA's USB TMC driver, contact your nearest YOKOGAWA dealer or access the following USB driver page at our Web site and download it.  
<http://www.yokogawa.com/tm/tm-softdownload.htm>
  - Only use the USB TMC driver (or software) provided by YOKOGAWA.
- The DL9000 can be controlled remotely even when TMC & Mass Storage is enabled and the DL9000 is connected to the PC. However, file operation is not possible using communication commands. In addition, file operation is also not possible using the keys on the DL9000. Disconnect the PC or activate the TMC setting and connect the DL9000 to the PC. File operation is also not possible using keys on the DL9000 when the Mass Storage setting is enabled.


# Chapter 2 Ethernet Interface

## 2.1 Part Names and Functions

### Front Panel

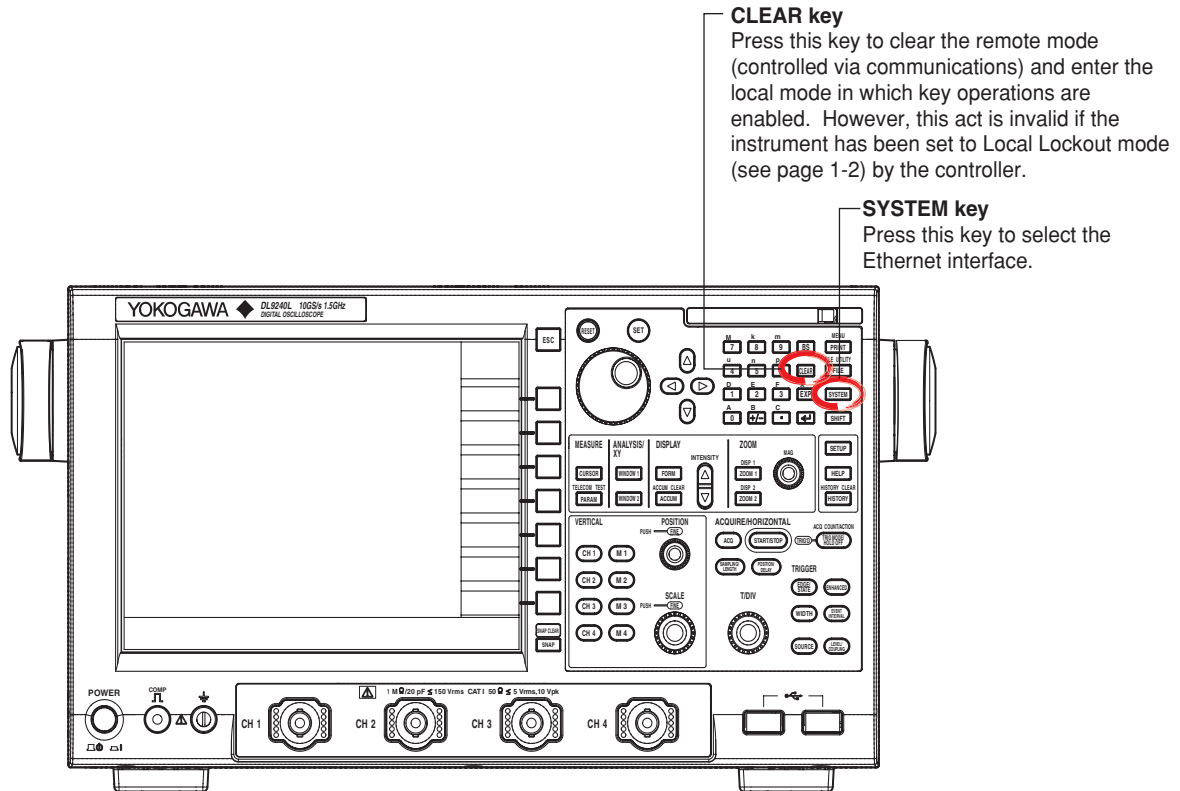

### Rear Panel

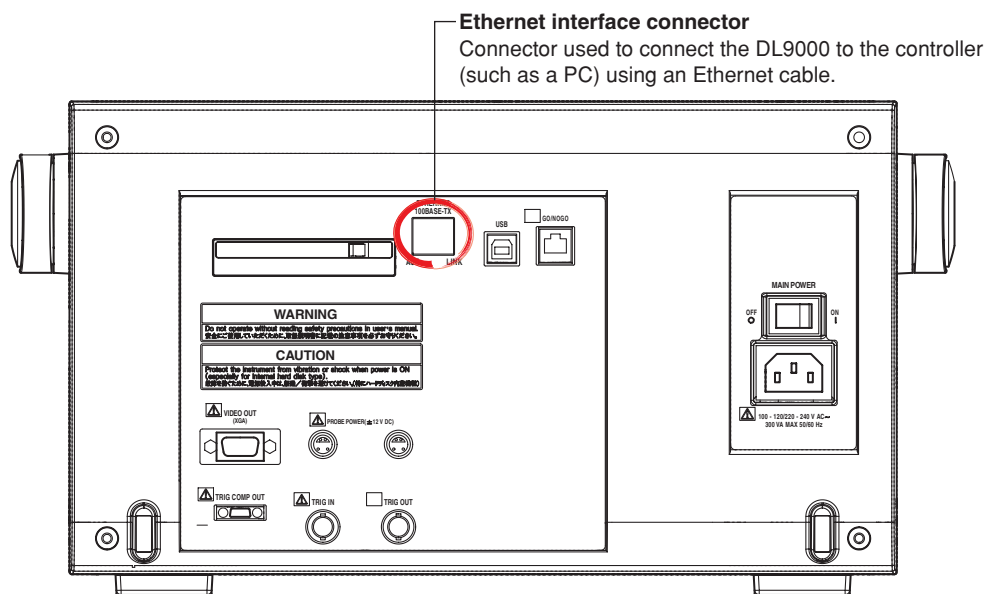

## 2.2 Ethernet Interface Functions and Specifications

### Ethernet Interface Functions

#### Reception Function

You can specify the same settings as those specified by front panel key operations. Receives output requests for measured and computed data, setup parameters of the panel, and error codes.

#### Transmission Function

Outputs measured and computed data.  
Outputs panel setup parameters and the status byte.  
Outputs error codes that have occurred.

### Ethernet Interface Specifications

Electrical and mechanical specifications: Conforms to IEEE802.3  
Number of simultaneous connections: 1  
Port No.: 10001/tcp

### Data Rate

The response time when outputting waveform data is shown below as a reference.

Model: 701313 main unit  
Controller: PC (Pentium4 3.4 GHz) and OS (Windows XP Professional SP1)  
Network adapter: Corega FEther PCI-TXL  
Language used: Visual C++

---

Number of Data Points	Word Data	ASCII Data
2500	Approx. 53 ms	Approx. 0.391 s
125000	Approx. 259 ms	Approx. 19.063 s
1250000	Approx. 2313 ms	Approx. 189.812 s
2500000	Approx. 4595 ms	Approx. 379.750 s
6250000	Approx. 10400 ms	Approx. 950.532 s

---

### Switching between Remote and Local Modes

#### When Switching from Local to Remote Mode

If the DL9000 receives a “:COMMunicate:REMOte ON” command from the PC when it is in the local mode, it switches to the remote mode.

- REMOTE is displayed in the center of the upper section of the screen.
- All keys except the **CLEAR** key are disabled.
- Settings entered in local mode are retained even when the DL9000 switches to remote mode.

#### When Switching from Remote to Local Mode

Pressing **CLEAR** in remote mode puts the instrument in local mode. However, this is void when the DL9000 has received a “:COMMunicate:LOCKout ON” command from the PC (local lockout condition). When the DL9000 receives a “:COMMunicate:REMOte OFF” command from the PC, the DL9000 switches to the local mode regardless of the local lock condition.

- REMOTE indication in the center of the upper section of the screen disappears.
- Key operations are enabled.
- Settings entered in remote mode are retained even when the DL9000 switches to local mode.

#### Note

---

The Ethernet interface cannot be used simultaneously with the USB interface.

---

### User Authentication Function



When using the Ethernet interface, a user name and password are required when connecting to the network. If the DL series library (TMCTL) version is 1.40 or later, the password is encrypted with an MD5 algorithm (RSA Data Security, Inc. MD5 Message-Digest Algorithm) and sent to the DL9000.

The user name and password are set on the Remote Control setup screen under the SYSTEM menu of the DL9000. For the setup procedure, see section 2.4, "Setting the DL9000 (Network)."

## 2.3 Connecting the Ethernet Interface

### Connection Procedure

Connect a UTP (Unshielded Twisted-Pair) cable or an STP (Shielded Twisted-Pair) cable that is connected to a hub, for example, to the 100BASE-TX port on the rear panel of the DL9000.

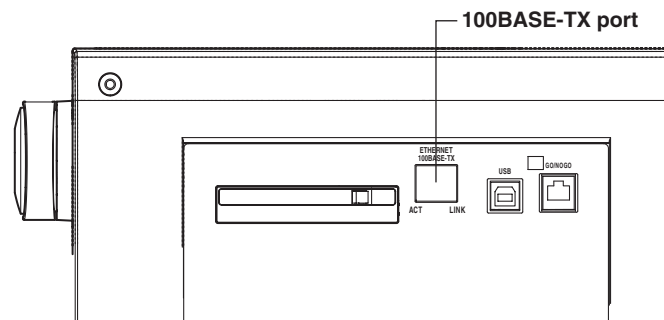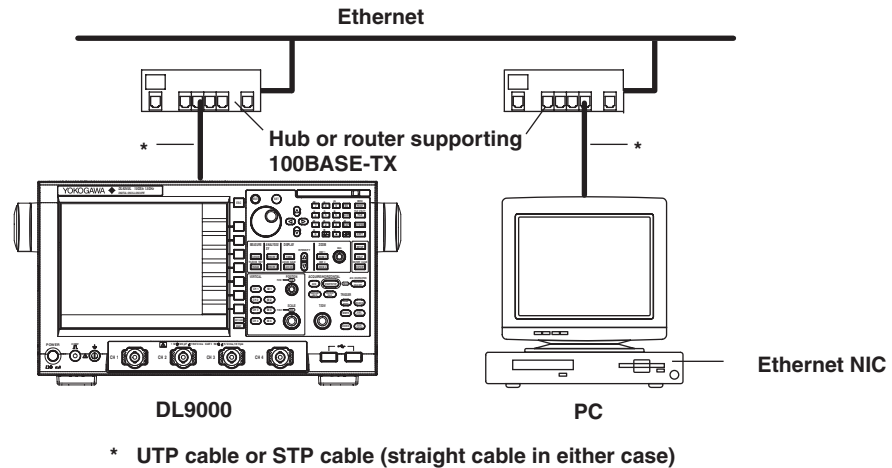

### Precautions to Be Taken When Making Connections

- Be sure to use a straight cable via a hub for the connection between the DL9000 and the PC. Operation is not guaranteed when the DL9000 and the controller are connected one-to-one using a cross cable.
- When using a UTP cable (straight cable), use a cable of category 5.




## 2.4 Setting the DL9000 (Network)

### Procedure

#### Selecting the Communication Interface

1. Press **SYSTEM**.
2. Press the **Remote Control** soft key. The Device menu appears.
3. Press the **Network** soft key.

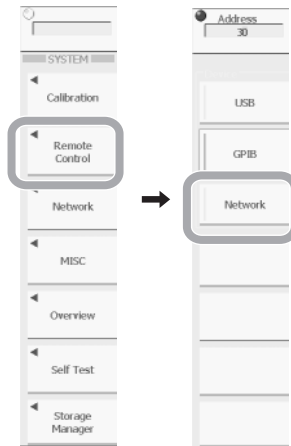


#### Note

Only the communication interface selected by Remote Control is enabled. The DL9000 does not accept commands that are transmitted to other unselected communication interfaces.

#### User Name and Password

4. Press the **UserName** soft key. A keyboard appears.
5. Enter the user name according to the procedures given in section 4.2 in the *DL9140/DL9140L/DL9240/DL9240L User's Manual (IM701310-01E)*.
6. Likewise, enter the password.

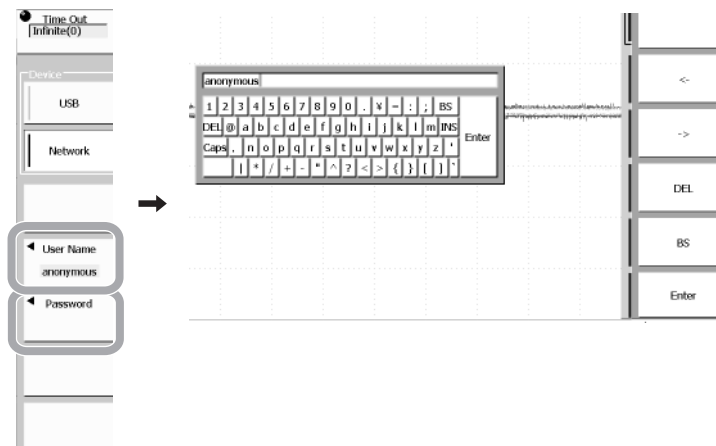


## 2.3 Connecting the Ethernet Interface

---

### Setting the Timeout Value

7. Set the timeout value using the **rotary knob**.

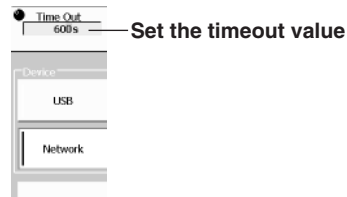

---

### Note

- For details on the keyboard (software keyboard) operation, see section 4.2, “Entering Values and Character Strings” in the *DL9140/DL9140L/DL9240/DL9240L User’s Manual (IM701310-01E)*.
  - User name and password are case-sensitive.
- 

### Setting the TCP/IP Parameters

To use the Ethernet interface function, the following TCP/IP settings must be entered.

- IP address
- Subnet mask
- Default gateway

For details on how to enter these parameters, see section 15.2, “Setting the TCP/IP Parameters” in the *DL9140/DL9140L/DL9240/DL9240L User’s Manual (IM701310-01E)*.

### Explanation

Enter the following settings when using a controller to set information that can be specified through key operation on the DL9000 or when outputting setting parameters or output waveform data to the controller.

### Setting the User Name and Password

The Ethernet interface has a user verification function. A user name and password for the DL9000 are set in advance.

- **Setting the User Name**  
Enter the user name using up to 30 characters. The default setting is “anonymous.”
- **Setting the Password**  
Enter the password using up to 30 characters.

### Setting the Timeout Value

The connection to the DL9000 is automatically dropped if there is no access to the DL9000 for the specified time.

### Setting the TCP/IP Parameters

For details, see section 15.2, “Setting the TCP/IP Parameters” in the *DL9140/DL9140L/DL9240/DL9240L User’s Manual (IM701310-01E)*.

---


### Note

- If the user authentication fails, connection to the DL9000 is dropped.
  - A password is not required if the user name is “anonymous.”
-


# Chapter 3 Overview of the GP-IB Interface

## 3.1 Part Names and Functions

### Front Panel

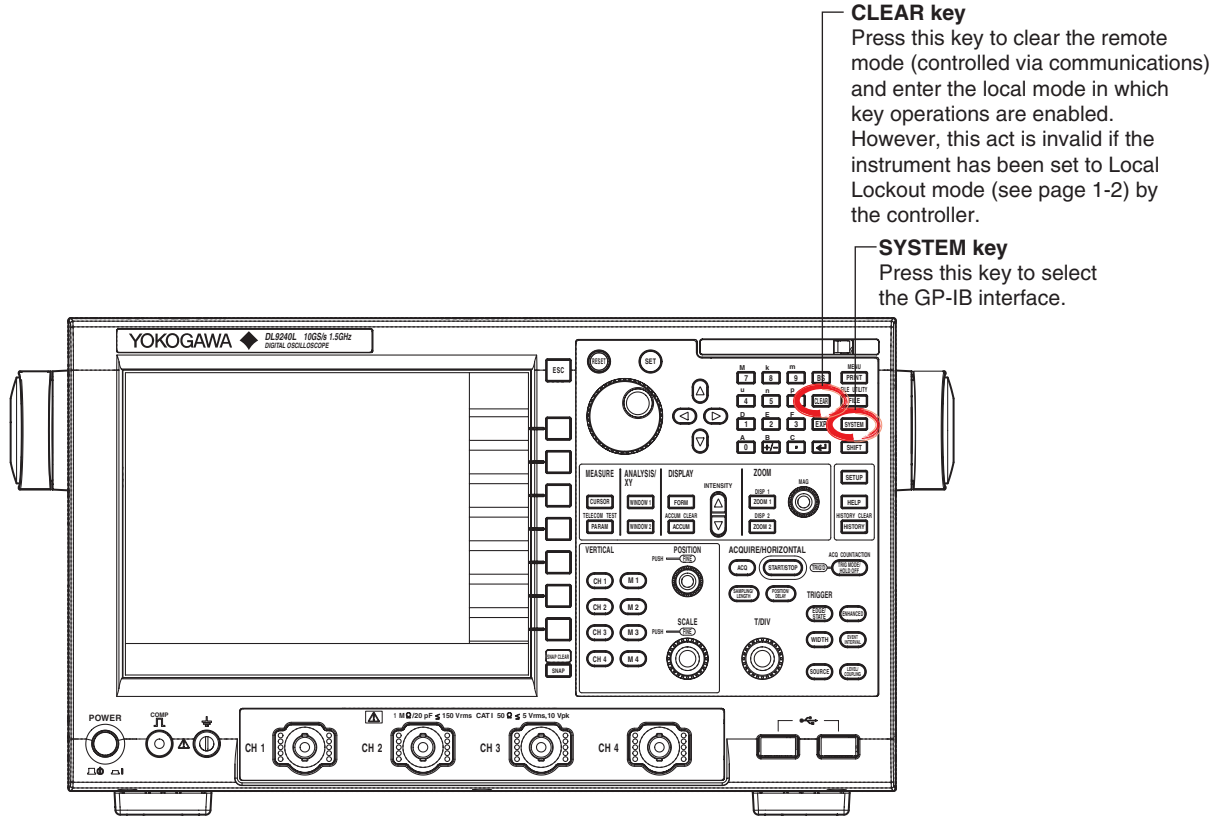

### Rear Panel

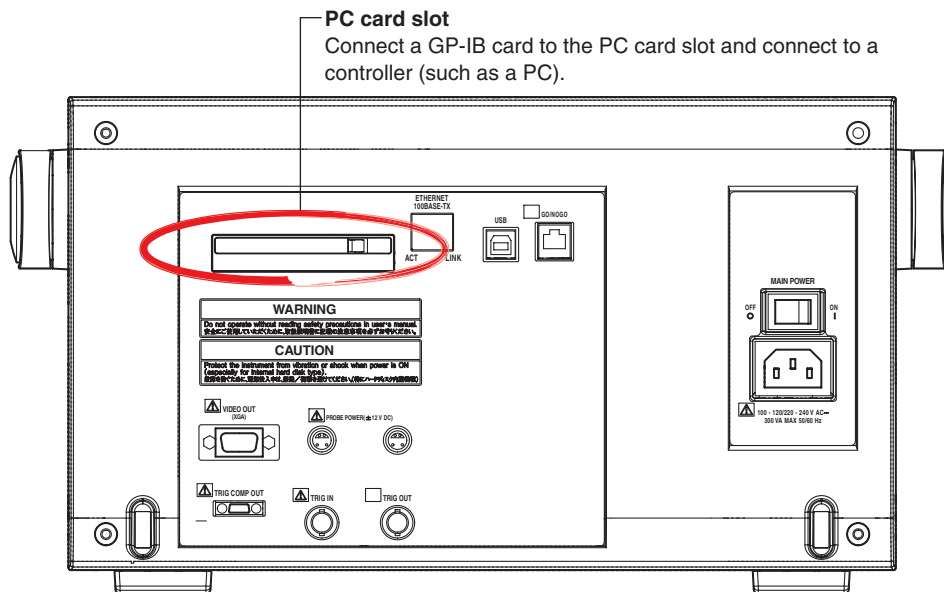

## 3.2 Connecting the GP-IB Card

### GP-IB Card


Use the NI PCMCIA-GPIB card by National Instruments.

### GP-IB Cable

Use the GP-IB cable that comes with the GP-IB card.


### Connection Procedure

Insert the GP-IB card into the DL9000 PC card slot.

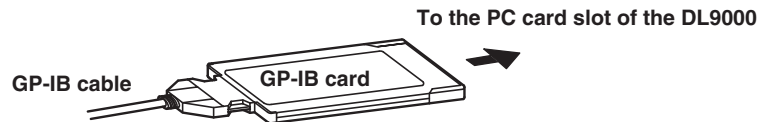

### Precautions to Be Taken When Making Connections

- For the handling of the GP-IB card, see the manual that comes with the GP-IB card.
- Attach the GP-IB correctly with the front face up.
- Connect the GP-IB card to the DL9000 PC card slot first. Then, turn the DL9000 ON.
- Multiple cables can be used to connect multiple devices. However, no more than 15 devices including the controller can be connected on a single bus.
- When connecting multiple devices, each device must have its own unique address.
- Use a cable of length 2 m or less for connecting the devices.
- Make sure the total cable length does not exceed 20 m.
- When communicating, have at least two-thirds of the devices turned ON.
- When connecting multiple devices, connect them in a star or linear configuration (see the figure below). Do not wire them in a loop or parallel configuration.

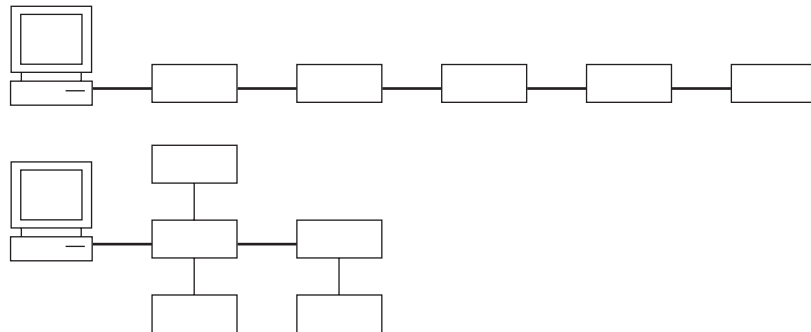

---

### CAUTION

---

When connecting or disconnecting communication cables, make sure to turn OFF the PC and the DL9000. Otherwise, erroneous operation or damage to the internal circuitry may result.

---

## 3.3 GP-IB Interface Functions

### GP-IB Interface Functions

#### Listener Capability

- All of the information that you can set with the panel keys can be set through the GP-IB interface except for turning ON/OFF the power and setting the communication parameters.
- Receives commands from a controller requesting the output of setup information, waveform data, and other information.
- Also receives status report commands.

#### Talker Capability

Outputs setup information, waveform data, and other information.

#### Note

---

Listen-only, talk-only, and controller capabilities are not available on the DL9000.

---

### Switching between Remote and Local Modes

#### When Switching from Local to Remote Mode

Receiving a REN (Remote Enable) message from the PC when the DL9000 is in the local mode causes the DL9000 to switch to the remote mode.

- REMOTE is displayed in the center of the upper section of the screen.
- All keys except the **CLEAR** key are disabled.
- Settings entered in local mode are retained even when the DL9000 switches to remote mode.

#### When Switching from Remote to Local Mode

Pressing **CLEAR** in remote mode puts the DL9000 in local mode. However, this act is invalid if the DL9000 has been set to Local Lockout mode (see page 3-6) by the controller.

- REMOTE indication in the center of the upper section of the screen disappears.
- Key operations are enabled.
- Settings entered in remote mode are retained even when the DL9000 switches to local mode.

#### Note

---

The GP-IB interface cannot be used simultaneously with other interfaces (USB and network interfaces).

---

### 3.4 GP-IB Interface Specifications

#### GP-IB Interface Specifications

Electrical and mechanical specifications:	Conforms to IEEE St'd 488-1978
Functional specifications:	See table below.
Protocol:	Conforms to IEEE St'd 488.2-1992
Code used:	ISO (ASCII) code
Mode:	Addressable mode
Address setting:	The address can be set in the range from 0 to 30 on the GP-IB setting screen that is played using the MISC menu.
Clear remote mode:	Remote mode can be cleared by pressing <b>CLEAR</b> except when the DL9000 has been set to Local Lockout mode by the controller.

#### Functional specifications

Function	Subset Name	Description
Source handshaking	SH1	Full source handshaking capability
Acceptor handshaking	AH1	Full acceptor handshaking capability
Talker	T6	Basic talker capability, serial polling, untalk on MLA (My Listen Address), and no talk-only capability
Listener	L4	Basic listener capability, unlisten on MTA (My Talk Address), and no listen-only capability.
Service request	SR1	Full service request capability
Remote local	RL1	Full remote/local capability
Parallel polling	PP0	No parallel polling capability
Device clear	DC1	Full device clear capability
Device trigger	DT0	No device trigger capability
Controller	C0	No controller capability
Electrical characteristics	E1	Open collector

#### Data Rate

The response time when outputting waveform data is shown below as a reference.

Model: 701313  
 Controller: PC (Pentium4 3.4 GHz, USB 2.0), OS (Windows XP Professional SP1)  
 Language used: Visual C++


Number of Data Points	Word Data	ASCII Data
2s500	Approx. 16 ms	Approx. 0.390 s
125000	Approx. 344 ms	Approx. 19.453 s
1250000	Approx. 3172 ms	Approx. 194.516 s
2500000	Approx. 6282 ms	Approx. 389.047 s
6250000	Approx. 15641 ms	Approx. 971.985 s

## 3.5 Setting the DL9000 (GP-IB)

### Procedure

#### Selecting the Communication Interface

1. Press **SYSTEM**.
2. Press the **Remote Control** soft key to display the Device menu.
3. Press the **GP-IB** soft key.

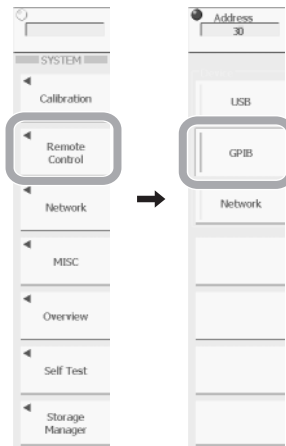

#### Note

Only the communication interface selected by Remote Control is enabled. The DL9000 does not accept commands that are transmitted to other unselected communication interfaces.

#### Setting the Address

4. Turn the **rotary knob** to set the address.



### Explanation

Enter the following settings when using a controller to set information that can be specified through key operation on the DL9000 or when outputting setting parameters or output waveform data to the controller.

#### Setting the Address

Set the address of the DL9000 within the following range for the addressable mode.

0 to 30

Each device that can be connected via GP-IB has a unique address within the GP-IB system. This address is used to distinguish the device from others. Therefore, when you connect the DL9000 to a PC, for example, make sure to assign a unique address to the DL9000.

#### Note

Do not change the address while the controller is communicating with the DL9000 or other devices over the GP-IB.

### 3.6 Responses to Interface Messages

#### Responses to Interface Messages

##### Responses to a Uni-Line Message

###### **IFC (Interface Clear)**

Clears the talker and listener functions. Stops output if data are being output.

###### **REN (Remote Enable)**

Switches between the remote and local modes.

IDY (Identify) is not supported.

##### Responses to a Multi-Line Message (Address Command)

###### **GTL (Go To Local)**

Switches to the local mode.

###### **SDC (Selected Device Clear)**

- Clears the program message (command) being received and the output queue (see page 6-5).
- \*OPC and \*OPC? commands in execution are void.
- The \*WAI and COMMunicate:WAIT commands are immediately terminated.

PPC (Parallel Poll Configure), GET(Group Execute Trigger), and TCT (Take Control) are not supported.

##### Responses to a Multi-Line Message (Universal Command)

###### **LLO (Local Lockout)**

Disables **CLEAR** on the front panel to prohibit switching to the local mode.

###### **DCL (Device Clear)**

Same operation as the SDC message.

###### **SPE (Serial Poll Enable)**

Sets the talker function on all devices on the bus to serial polling mode. The controller polls the devices in order.

###### **SPD (Serial Poll Disable)**

Clears the serial polling mode of the talker function on all devices on the bus.

PPU (Parallel Poll Unconfigure) is not supported.

#### What Are Interface Messages

Interface messages are also referred to as interface commands or bus commands. They are commands that are issued by the controller. They are classified as follows:

##### **Uni-Line Messages**

A single control line is used to transmit uni-line messages. The following three types are available.

- IFC (Interface Clear)
- REN (Remote Enable)
- IDY (Identify)



### Multi-Line Messages

Eight data lines are used to transmit multi-line messages. The messages are classified as follows:

#### Address Commands

These commands are valid when the instrument is designated as a listener or as a talker. The following five types are available.

Commands that are valid on an instrument that is designated as a listener

- GTL (Go To Local)
- SDC (Selected Device Clear)
- PPC (Parallel Poll Configure)
- GET (Group Execute Trigger)

Commands that are valid on an instrument that is designated as a talker


- TCT (Take Control)

#### Universal commands

These commands are valid on all instruments regardless of the listener and talker designations. The following five types are available.

- LLO (Local Lockout)
- DCL (Device Clear)
- PPU (Parallel Poll Unconfigure)
- SPE (Serial Poll Enable)
- SPD (Serial Poll Disable)

In addition, listener address, talker address, and secondary commands are also considered interface messages.

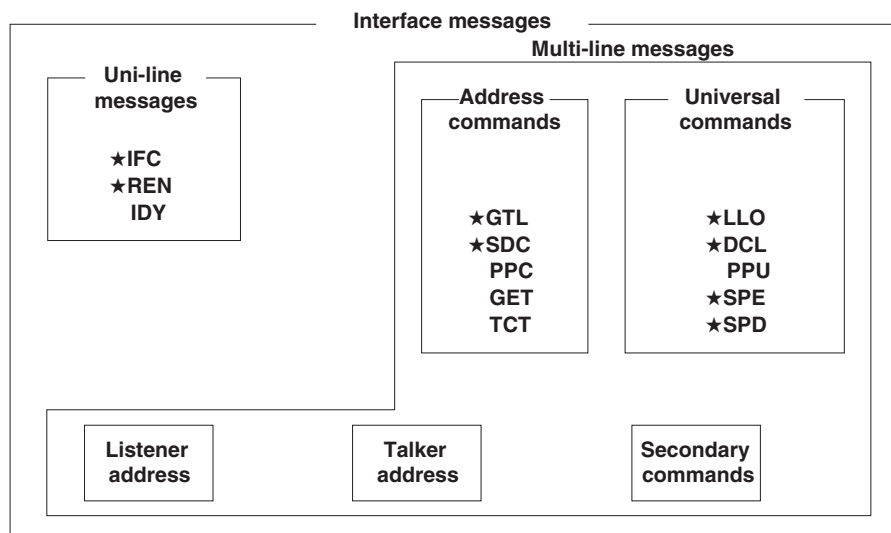

Interface messages that DL9000 supports are indicated with ★marks.

### Note

#### The Differences between SDC and DCL

In multi-line messages, SDC messages are those that require talker or listener designation and DCL messages are those that do not require the designation. Therefore, SDC messages are directed at a particular instrument while DCL messages are directed at all instruments on the bus.

# Chapter 4 Before Programming

## 4.1 Messages


### Messages

Messages are used to exchange information between the controller and the instrument. Messages that are sent from the controller to the instrument are called program messages and messages that are sent back from the instrument to the controller are called response messages.

If a program message contains a message unit that requests a response (a query), the instrument returns a response message upon receiving the program message. A single response message is always returned in response to a single program message.

### Program Messages

The program message format is shown below.

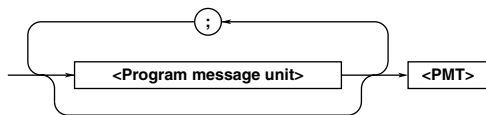

#### <Program Message Unit>

A program message consists of zero or more program message units; each unit corresponds to one command. The instrument executes the received commands in order.

Each program message unit is separated by a semicolon (;).

For details regarding the format of the program message unit, see the next section.

Example

```
:ACQUIRE:MODE NORMAL;HRMode 1<PMT>
```

Unit                      Unit

#### <PMT>

PMT is a program message terminator. The following three types are available.


NL (New Line): Same as LF (Line Feed). ASCII code "0AH"

^EOM: The END message as defined by USBTMC (The data byte that is sent simultaneously with the END message is the last data of the program message.)

NL^EOM: NL with an END message added (NL is not included in the program message.)

#### • Program Message Unit Format

The program message unit format is shown below.



#### <Program Header>

The program header indicates the command type. For details, see page 4-3.

#### <Program Data>

If certain conditions are required in executing a command, program data is added. A space (ASCII code "20H") separates the program data from the header. If there are multiple sets of program data, they are separated by commas (,).


For details, see page 4-5.

```
Example           :ACQUIRE:MODE NORMAL<PMT>
```

Header                      Data

### Response Messages

The response message format is shown below.

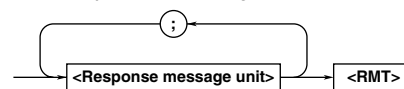

#### <Response Message Unit>

A response message consists of one or more response message units; each response message unit corresponds to one response.

Response message units are separated by a semicolon (;).

For details regarding the format of the response message unit, see the next section.

Example

```
:ACQUIRE:MODE NORMAL;HRMode 1<RMT>
```

Unit                      Unit


#### <RMT>

A response message terminator. It is NL^EOM.

## 4.1 Messages

### • Response Message Unit Format

The response message unit format is shown below.



#### <Response Header>

A response header sometimes precedes the response data. A space separates the data from the header. For details, see page 4-4.

#### <Response Data>

Response data contains the content of the response. If there are multiple sets of response data, they are separated by commas ( , ). For details, see page 4-5.

#### Example

1.25E-02<RMT> :ACQUIRE:MODE NORMAL<RMT>  
Data Header Data

If there are multiple queries in a program message, responses are made in the same order as the queries. In most cases, a single query returns a single response message unit, but there are a few queries that return multiple units. The first response message unit always corresponds to the first query, but the  $n^{\text{th}}$  response unit may not necessarily correspond to the  $n^{\text{th}}$  query. Therefore, if you want to make sure that every response is retrieved, divide the program messages into individual messages.

### Precautions to Be Taken when Transferring Messages

- If a program message that does not contain a query is sent, the next program message can be sent at any time.
- If a program message that contains a query is sent, a response message must be received before the next program message can be sent. If the next program message is sent before the response message is received in its entirety, an error occurs. The response message that was not received is discarded.
- If the controller tries to receive a response message when there is none, an error occurs. If the controller tries to receive a response message before the transmission of the program message is complete, an error occurs.

- If a program message containing multiple message units is sent, and the message contains incomplete units, the instrument attempts to execute the ones that are believed to be complete. However, these attempts may not always be successful. In addition, if the message contains queries, the responses may not be returned.

### Deadlock

The instrument can store in its buffer program and response messages of length 1024 bytes or more (The number of available bytes varies depending on the operating conditions). When both the transmit and receive buffers become full at the same time, the instrument can no longer continue to operate. This state is called a deadlock. In this case, operation can be resumed by discarding the program message. Deadlock will not occur if the program message (including the <PMT>) is kept below 1024 bytes. Furthermore, deadlock never occurs if a program message does not contain a query.


## 4.2 Commands

### Commands

There are three types of commands (program headers) that are sent from the controller to the instrument. They differ in their program header formats.

### Common Command Header


Commands that are defined in the USBTMC-USB488 are called common commands. The header format of a common command is shown below. An asterisk (\*) is always placed in the beginning of a command.



Common command example: \*CLS

### Compound Header

Dedicated commands used by the instrument are classified and arranged in a hierarchy according to their functions. The format of a compound header is shown below. A colon (:) must be used to specify a lower hierarchy.



Compound header example: :ACQUIRE:MODE

### Simple Header

These commands are functionally independent and do not have a hierarchy. The format of a simple header is shown below.



Simple header example: :START

### Note

A <mnemonic> is a character string made up of alphanumeric characters.

### When Concatenating Commands

#### • Command Group

A command group is a group of commands that have common compound headers arranged in a hierarchy. A command group may contain sub-groups.

Example Group of commands related to acquisition

```
:ACQUIRE:AVERAGE:COUNT
:ACQUIRE:MODE
:ACQUIRE:AVERAGE:EWEIGHT
:ACQUIRE:REPETITIVE
:ACQUIRE:RLLENGTH
:ACQUIRE:INTERLEAVE
```

#### • When Concatenating Commands of the Same Group

The instrument stores the hierarchical level of the command that is currently being executed, and performs analysis on the assumption that the next command sent will also belong to the same level. Therefore, common header sections can be omitted for commands belonging to the same group.

Example :ACQUIRE:MODE NORMAL;  
INTERLEAVE 1<PMT>

#### • When Concatenating Commands of Different Groups

If the following command does not belong to the same group, a colon (:) is placed in front of the header (cannot be omitted).

Example :ACQUIRE:MODE NORMAL;:DISPLAY:  
FORMAT SINGLE<PMT>

#### • When Concatenating Simple Headers

If a simple header follows another command, a colon (:) is placed in front of the simple header (cannot be omitted).

Example :ACQUIRE:MODE  
NORMAL;:START<PMT>

#### • When Concatenating Common Commands

Common commands that are defined in the USBTMC-USB488 are independent of hierarchy. Colons (:) are not needed before a common command.

Example :ACQUIRE:MODE NORMAL;\*CLS;  
INTERLEAVE 1<PMT>

#### • When Separating Commands with <PMT>

If a terminator is used to separate two commands, each command is a separate message. Therefore, the common header must be specified for each command even when commands belonging to the same command group are being concatenated.

Example :ACQUIRE:MODE NORMAL<PMT>:  
ACQUIRE:INTERLEAVE 1<PMT>

### Upper-Level Query

An upper-level query is a query in which a question mark (?) is appended to the highest level command of a group. Execution of an upper-level query allows all settings that can be specified in the group to be received at once. Some query groups which are comprised of more than three hierarchical levels can output all the lower level settings.

```
Example :ACQUIRE? ->
        :ACQUIRE:AVERAGE:COUNT 2;
        EWEIGHT 16;:ACQUIRE:HRMODE 0;
        INTERLEAVE 0;INTERPOLATE 1;
        MODE NORMAL;REPETITIVE 0;
        RLENGTH 12500
```

The response to an upper-level query can be transmitted as a program message back to the instrument. In this way, the settings that existed when the upper-level query was made can be restored. However, some upper-level queries do not return setup information that is not currently in use. It is important to remember that not all the group's information is necessarily returned as part of a response.

### Header Interpretation Rules

The instrument interprets the header that is received according to the rules below.

- Mnemonics are not case sensitive.  
Example "CURSOR" can also be written as "cursor" or "Cursor."
- The lower-case section of the header can be omitted.  
Example "CURSOR" can also be written as "CURSO" or "CURS."
- The question mark (?) at the end of a header indicates that it is a query. The question mark (?) cannot be omitted.  
Example The shortest abbreviation for CURSOR? is CURS?.
- If the <x> (value) at the end of a mnemonic is omitted, it is interpreted as a 1.  
Example If "CHANNEL<x>" is written as "CHAN," it means "CHANNEL1."
- **The section enclosed by braces ([]) can be omitted.**  
Example HISTORy[ :CURRENT ]:MODE can also be written as HIST:MODE.  
However, the last section enclosed by braces ([]) cannot be omitted in an upper-level query.  
Example "HISTORy?" and "HISTORy:CURRENT?" are different queries.

## 4.3 Response

### Response

When the controller sends a message unit that has a question mark (?) in its program header (query), the instrument returns a response message to the query. A response message is returned in one of the following two forms.

- **Response Consisting of a Header and Data**  
If the response can be used as a program message without any change, it is returned with a command header attached.

```
Example :ACQUIre:MODE?<PMT> ->
        :ACQUIre:MODE NORMAL<RMT>
```

- **Response Consisting of Data Only**  
If the response cannot be used as a program message unless changes are made to it (query-only command), only the data section is returned. However, there are query-only commands that return responses with the header attached.  
Example :MEASure:TRACe1:AREA1:PTOPeak:VALue?<PMT> -> 10.0E+00<RMT>

- **When You Wish to Return a Response without a Header**

Responses that return both header and data can be set so that only the data section is returned. The "COMMunicate:HEADer" command is used to do this.

- **Abbreviated Form**

Normally, the lower-case section is removed from a response header before the response is returned to the controller. Naturally, the full form of the header can also be used. For this, the "COMMunicate:VERBose" command is used. The sections enclosed by braces ([]) are also omitted in the abbreviated form.

## 4.4 Data

### Data

A data section comes after the header. A space must be included between the header and the data. The data contains conditions and values. Data is classified as below.

Data	Meaning
<Decimal>	A value expressed as a decimal number (Example: Probe attenuation of CH1 -> CHANne11:PROBe 100)
<Voltage><Time> <Frequency> <Current>	A physical value (Example: Time axis range -> TIMEbase:TDIV 1US)
<Register>	Register value expressed as binary, octal, decimal or hexadecimal. (Example: Extended event register value -> STATUS:EESE #HFE)
<Character Data>	Predefined character string (mnemonic). Can be selected from { }. (Example: Select the input coupling of CH1 -> CHANne11:COUPLing {AC DC DC50 GND})
<Boolean>	Indicates ON and OFF. Set using ON, OFF or a value (Example: Turn ON the CH1 display -> CHANne11:DISPlay ON)
<String data>	An arbitrary character string (Example: Comment to a screen data output -> MATH1:UNIT:USERdefine "VOLT")
<Filename>	Indicates a file name. (Example: Save file name -> FILE:SAVE:WAVEform:NAME "CASE1")
<Block data>	Arbitrary 8-bit data (Example: Response to acquired waveform data -> #800000010ABCDEFGH1J)

### <Decimal>

<Decimal> indicates a value expressed as a decimal number, as shown in the table below. Decimal values are given in the NR form as specified in the ANSI X3.42-1975.

Symbol	Meaning	Example
<NR1>	Integer	125-1 +1000
<NR2>	Fixed-point number	125.0 -.90 +001.
<NR3>	Floating-point number	125.0E+0 -9E-1 +.1E4
<NRf>	Any of the forms <NR1> to <NR3> is allowed.	

- The instrument can receive decimal values that are sent from the controller in any of the forms, <NR1> to <NR3>. This is represented by <NRf>.
- For response messages that the instrument returns to the controller, the form (<NR1> to <NR3> to be used) is determined by the query. The same form is used regardless of the size of the value.
- For the <NR3> format, the "+" sign after the "E" can be omitted. However, the "-" sign cannot be omitted.
- If a value outside the setting range is entered, the value is normalized so that it is just inside the range.
- If a value has more significant digits than the available resolution, the value is rounded.

### <Voltage>, <Time>, <Frequency>, and <Current>

<Voltage>, <Time>, <Frequency>, and <Current> indicate decimal values that have physical significance. <Multiplier> or <Unit> can be attached to the <NRf> form that was described earlier. It is expressed in one of the following forms.

Form	Example
<NRf><Multiplier><Unit>	5MV
<NRf><Unit>	5E-3V
<NRf><Multiplier>	5M
<NRf>	5E-3

### • <Multiplier>

<Multipliers> which can be used are indicated below.

Symbol	Word	Multiplier
EX	Exa	10 <sup>18</sup>
PE	Peta	10 <sup>15</sup>
T	Tera	10 <sup>12</sup>
G	Giga	10 <sup>9</sup>
MA	Mega	10 <sup>6</sup>
K	Kilo	10 <sup>3</sup>
M	Milli	10 <sup>-3</sup>
U	Micro	10 <sup>-6</sup>
N	Nano	10 <sup>-9</sup>
P	Pico	10 <sup>-12</sup>
F	Femto	10 <sup>-15</sup>
A	Ato	10 <sup>-18</sup>

### • <Unit>

<Units> that can be used are indicated below.

Symbol	Word	Meaning
V	Volt	Voltage
S	Second	Time
HZ	Hertz	Frequency
MHZ	Megahertz	Frequency
A	Ampere	Current

- <Multiplier> and <Unit> are not case sensitive.
- "U" is used to indicate micro "μ".
- "MA" is used for Mega to distinguish it from Milli. The only exception is Megahertz which is expressed as "MHZ." Therefore, the "M (Milli)" multiplier cannot be used for frequencies.
- If both <Multiplier> and <Unit> are omitted, the default unit is used.
- Response messages are always expressed in the <NR3> form. Response messages are returned using the default unit without the <Multiplier> or <Unit>.

## 4.4 Data

### <Register>

<Register> indicates an integer, and can be expressed in hexadecimal, octal, or binary as well as a decimal number. It is used when each bit of the value has a particular meaning. It is expressed in one of the following forms.

Form	Example
<NRf>	1
#H<Hexadecimal value made up of the digits 0 to 9 and A to F>	#H0F
#Q<Octal value made up of the digits 0 to 7>	#Q777
#B<Binary value made up of the digits 0 and 1>	#B001100

- <Register> is not case sensitive.
- Response messages are always expressed as <NR1>.

### <Character Data>

<Character Data> is a specified string of character data (a mnemonic). It is mainly used to indicate options and is chosen from the character strings given in { }. For interpretation rules, refer to "Header Interpretation Rules" on page 4-4.

Form	Example
{AC DC DC50 GND}	AC

- As with the header, the "COMMunicate:VERBoSe" command can be used to select whether to return the response in the full form or in the abbreviated form.
- The "COMMunicate:HEADer" setting does not affect the character data.

### <Boolean>

<Boolean> is data that indicates ON or OFF. It is expressed in one of the following forms.

Form	Example
{ON OFF <NRf>}	ON    OFF    1    0

- When <Boolean> is expressed in the <NRf> form, "OFF" is selected if the rounded integer value is 0, and ON for all other cases.
- A response message is always returned with a 1 if the value is ON and 0 if the value is OFF.

### <String data>

<String data> is not a specified character string like <Character data>. It is an arbitrary character string. The character string must be enclosed in single quotation marks (') or double quotation marks (").

Form	Example
<String data>	'ABC'    "IEEE488.2-1987"

- If a character string contains a double quotation mark ('), the double quotation mark is replaced by two double quotation marks ("). This rule also applies to a single quotation mark within a character string.
- A response message is always enclosed in double quotation marks (").
- <String data> is an arbitrary character string. Therefore the instrument assumes that the remaining program message units are part of the character string if no single (') or double quotation mark (") is encountered. As a result, no error is detected if a quotation mark is omitted.

### <Filename>

<Filename> is data that indicates a file name. It is expressed in one of the following forms.

Form	Example
{<NRf> <Character data> <String data>}	1    CASE"CASE"

- <NRf> is rounded to an 8-digit integer and converted to ASCII code. The result is the file name (example: 1 becomes "0000001"). Negative values are not allowed.
- Response messages are always returned in the <String data> form.
- For <Character data>, the first 12 characters become the file name.
- For <String data>, the first 259 characters become the file name.
- For a description of the number of characters of the <String data> file name, see the *DL9000 User's Manual*.

### <Block data>

<Block data> is arbitrary 8-bit data. It is only used in response messages on the DL9000. Below is the syntax.

Form	Example
#N<N-digit decimal number> <Data byte sequence>	#80000010ABCDEF GHIJ

- #N  
Indicates that the data is <Block data>. "N" indicates the number of succeeding data bytes (digits) in ASCII code characters.
- <N-digit decimal number>  
Indicates the number of bytes of data (example: 0000010 = 10 bytes).
- <data byte sequence>  
Expresses the actual data (example: ABCDEF GHIJ).
- Data is comprised of 8-bit values (0 to 255). This means that the ASCII code "0AH," which stands for "NL," can also be a code used for data. Hence, care must be taken when programming the controller.

## 4.5 Synchronization with the Controller

### Overlap Commands and Sequential Commands

There are two types of commands, overlap commands and sequential commands. In the case of overlap commands, the execution of the next command may start before the execution of the previous command is completed.

For example, if the next program message is transmitted when specifying the V/div value and querying the result, the response always returns the most recent setting (5 V in this case).

```
:CHANnel1:VDIV 5V;VDIV?<PMT>
```

This is because the next command is forced to wait until the processing of “CHANnel1:VDIV” itself is completed. This type of command is called a sequential command.

On the contrary, let us assume that you send the next program message when you wish to load a file and query the V/div value of the result.

```
:FILE:LOAD:SETup:EXECute"CASE1";:
CHANnel1:VDIV?
```

In this case, “CHANnel1:VDIV?” is executed before the loading of the file is completed, and the V/div value that is returned is the value before the file is loaded. The act of executing the next command before the processing of itself is completed such as with “FILE:LOAD:SETup:EXECute “CASE1”” is called an overlap operation. A command that operates in this way is called an overlap command.

In such case, the overlap operation can be prevented by using the methods below.

### Synchronizing with Overlap Commands

#### • Using the \*WAI Command

The \*WAI command holds the subsequent commands until the overlap command is completed.

```
Example :COMMunicate:OPSE #H0040;:
FILE:LOAD:SETup:
EXECute "CASE1";*WAI;:
CHANnel1:VDIV?<PMT>
```

“COMMunicate:OPSE” is a command used to select the “\*WAI” target. Here, media access is specified.

Because “\*WAI” is executed immediately before “CHANnel1:VDIV?”, “CHANnel1:VDIV?” is not executed until the file loading is complete.

#### • Using the COMMunicate:OVERlap command

The COMMunicate:OVERlap command enables (or disables) overlap operation.

```
Example :COMMunicate:OVERlap #HFFBF;:
FILE:LOAD:SETup:
EXECute "CASE1";:CHANnel1:
VDIV?<PMT>
```

“COMMunicate:OVERlap #HFFBF” enables overlap operation on commands other than media access. Because the overlap operation of file loading is disabled, “FILE:LOAD:SETup:EXECute “CASE1”” operates in the same way as a sequential command. Therefore, CHANnel1:VDIV? is not executed until the file loading is complete.

#### • Using the \*OPC Command

The \*OPC command sets the OPC bit, bit 0 of the standard event register (see page 6-3), to 1 when the overlap operation is completed.

```
Example :COMMunicate:OPSE #H0040;
*ESE 1;
*ESR?;*SRE 32;:FILE:LOAD:SETup:
EXECute "CASE1";*OPC<PMT>
(Read the response to *ESR?)
(Wait for a service request)
:CHANnel1:VDIV?<PMT>
```

“COMMunicate:OPSE” is a command used to select the “\*OPC” target. Here, media access is specified.

“\*ESE 1” and “\*SRE 32” indicate that a service request is generated only when the OPC bit is 1. “\*ESR?” clears the standard event register.

In the example above, “CHANnel1:VDIV?” is not executed until a service request is generated.



## 4.5 Synchronization with the Controller

- **Using the \*OPC? Query**

The \*OPC? query generates a response when an overlap operation is completed.

```
Example :COMMunicate:OPSE #H0040;:FILE:
        LOAD:SETup:EXECute "CASE1";
        *OPC?<PMT>
        (Read the response to *OPC?)
        :CHANnel1:VDIV?<PMT>
```

"COMMunicate:OPSE" is a command used to select the "\*OPC?" target. Here, media access is specified.

Because "\*OPC?" does not generate a response until the overlap operation is completed, the loading of the file will have been completed by the time the response to "\*OPC?" is read.

### Note

Most commands are sequential commands. Overlap commands are indicated as overlap commands in chapter 6. All other commands are sequential commands.

### Achieving Synchronization without Using Overlap Commands

Even for sequential commands, synchronization is sometimes required for non communication-related reasons such as a trigger occurrence.

For example, if the next program message is transmitted to make an inquiry about the waveform data which has been acquired with the trigger mode set to single, the WAVEform:SEND? command may be executed regardless of whether the acquisition has been completed or not and may result in command execution error.

```
TRIGger:MODE SINGLE;:START;:WAVEform:
SEND?<PMT>
```

In this case, the following method must be used to synchronize with the end of the acquisition.

- **Using the STATus:CONDition? Query**

The "STATus:CONDition?" query is used to query the contents of the condition register (page 6-4).

Whether waveforms are being retrieved can be determined by reading bit 0 of the condition register. If bit 0 of the condition register is "1," waveforms are being retrieved. Otherwise, it is stopped.

```
Example TRIGger:MODE SINGLE;:START<PMT>
        :STATus:CONDition?<PMT>
        (Read the response. If bit 0 is 1, repeat
        this command until it becomes 1.)
        :WAVEform:SEND?<PMT>
```

The WAVEform:SEND? command will not be executed until bit 0 of the condition register is set to "0."

- **Using the Extended Event Register**

The changes in the condition register can be reflected in the extended event register (page 6-4).

```
Example :STATus:FILTer1 FALL;:
        STATus:EESR 1;EESR?;*SRE 8;:
        TRIGger:MODE SINGLE;:START<PMT>
        (Read the response to STATus:EESR?)
        (Wait for a service request)
        :WAVEform:SEND?<PMT>
```

The "STATus:FILTer1 FALL" command sets the transition filter so that bit 0 (FILTer1) of the extended event register is set to 1 when bit 0 of the condition register changes from 1 to 0.

The ":STATus:EESR 1" command is used to reflect only bit 0 of the extended event register to the status byte.

The "STATus:EESR?" command is used to clear the extended event register.

The "\*SRE 8" command is used to generate a service request solely on the cause of the extended event register.

The "WAVEform:SEND?" command is not executed until a service request is generated.

- **Using the COMMunicate:WAIT Command**

The "COMMunicate:WAIT" command halts communications until a specific event is generated.

```
Example :STATus:FILTer1 FALL;:
        STATus:EESR?;:TRIGger:
        MODE SINGLE<PMT>
        (Read the response to STATus:EESR?)
        :COMMunicate:WAIT 1;:WAVEform:
        SEND?<PMT>
```

For a description of "STATus:FILTer1 FALL" and "STATus:

EESR?" see the previous section regarding the extended event register.

The "COMMunicate:WAIT 1" command indicates that the program will wait for bit 0 of the extended event register to be set to "1."

The WAVEform:SEND? command will not be executed until bit 0 of the extended event register is set to "1."

# Chapter 5 Commands

## 5.1 A List of Commands

Command	Function	Page
<b>ACQUIRE Group</b>		
:ACQUIRE?	Queries all settings related to the waveform acquisition.	5-34
:ACQUIRE:AVERAGE?	Queries all settings related to averaging and the waveform acquisition count.	5-34
:ACQUIRE:AVERAGE:COUNT	Sets the waveform acquisition count of averaging mode or queries the current setting.	5-34
:ACQUIRE:AVERAGE:EWEIGHT	Sets the attenuation constant when averaging mode is used infinitely or queries the current setting.	5-34
:ACQUIRE:HRMODE	Turns ON/OFF the harmonic analysis mode or queries the current setting.	5-34
:ACQUIRE:INTERLEAVE	Turns ON/OFF interleave or queries the current setting.	5-34
:ACQUIRE:INTERPOLATE	Turns ON/OFF data interpolation or queries the current setting.	5-34
:ACQUIRE:MODE	Sets the waveform acquisition mode or queries the current setting.	5-34
:ACQUIRE:REPETITIVE	Turns ON/OFF the repetitive sampling or queries the current setting.	5-34
:ACQUIRE:RENGTH	Sets the record length or queries the current setting.	5-34
<b>ANALYSIS Group</b>		
:ANALYSIS?	Queries all settings related to the analysis function.	5-35
:ANALYSIS:AHISTOGRAM<x>?	Queries all settings related to the accumulated histogram function.	5-35
:ANALYSIS:AHISTOGRAM<x>:HORIZONTAL	Sets the horizontal range or queries the current setting.	5-35
:ANALYSIS:AHISTOGRAM<x>:MEASURE?	Queries all settings related automated measurement.	5-36
:ANALYSIS:AHISTOGRAM<x>:MEASURE:Cursors?	Queries all settings related to cursor measurements.	5-36
:ANALYSIS:AHISTOGRAM<x>:MEASURE:Cursors[:BASIC]?	Queries all settings related to basic items of the cursor.	5-36
:ANALYSIS:AHISTOGRAM<x>:MEASURE:Cursors[:BASIC]:ALL	Turns ON/OFF all basic items of the cursor.	5-36
:ANALYSIS:AHISTOGRAM<x>:MEASURE:Cursors[:BASIC]:C<x>?	Queries all settings related to the cursor.	5-37
:ANALYSIS:AHISTOGRAM<x>:MEASURE:Cursors[:BASIC]:C<x>:STATE	Turns ON/OFF the cursor or queries the current setting.	5-37
:ANALYSIS:AHISTOGRAM<x>:MEASURE:Cursors[:BASIC]:C<x>:VALUE?	Queries the measured value of the cursor.	5-37
:ANALYSIS:AHISTOGRAM<x>:MEASURE:Cursors[:BASIC]:DC?	Queries all settings related to measured values between cursors.	5-37
:ANALYSIS:AHISTOGRAM<x>:MEASURE:Cursors[:BASIC]:DC:STATE	Turns ON/OFF the measured values between cursors or queries the current setting.	5-37
:ANALYSIS:AHISTOGRAM<x>:MEASURE:Cursors[:BASIC]:DC:VALUE?	Queries the measured value between cursors.	5-37
:ANALYSIS:AHISTOGRAM<x>:MEASURE:Cursors:CALCULATION?	Queries all settings related to calculation items of the cursor.	5-37
:ANALYSIS:AHISTOGRAM<x>:MEASURE:Cursors:CALCULATION:ALL	Turns ON/OFF all calculation items of the cursor.	5-37
:ANALYSIS:AHISTOGRAM<x>:MEASURE:Cursors:CALCULATION:DEFINE<x>	Sets the equation of the calculation item of the cursor or queries the current setting.	5-38
:ANALYSIS:AHISTOGRAM<x>:MEASURE:Cursors:CALCULATION:STATE<x>	Turns ON/OFF the calculation item of the cursor or queries the current setting.	5-38
:ANALYSIS:AHISTOGRAM<x>:MEASURE:Cursors:CALCULATION:VALUE<x>?	Queries the measured value of the calculation item of the cursor.	5-38

## 5.1 A List of Commands

Command	Function	Page
:ANALysis:AHIStogram<x>:MEASure:CURSor:HLINKage	Turns ON/OFF the horizontal cursor link of the accumulated histogram or queries the current setting.	5-38
:ANALysis:AHIStogram<x>:MEASure:CURSor:HPOStion<x>	Sets the horizontal cursor position or queries the current setting.	5-38
:ANALysis:AHIStogram<x>:MEASure:CURSor:VLINKage	Turns ON/OFF the vertical cursor link of the accumulated histogram or queries the current setting.	5-38
:ANALysis:AHIStogram<x>:MEASure:CURSor:VPOStion<x>	Sets the vertical cursor position or queries the current setting.	5-39
:ANALysis:AHIStogram<x>:MEASure:MODE	Sets the automated measurement mode or queries the current setting.	5-39
:ANALysis:AHIStogram<x>:MEASure:PARAmeter?	Queries all settings related to the automated measurement of waveform parameters.	5-39
:ANALysis:AHIStogram<x>:MEASure:PARAmeter:AREA<x>?	Queries all settings related to the area.	5-40
:ANALysis:AHIStogram<x>:MEASure:PARAmeter:AREA<x>:ALL	Turns ON/OFF all waveform parameters.	5-40
:ANALysis:AHIStogram<x>:MEASure:PARAmeter:AREA<x>:<Parameter>?	Queries all settings related to the waveform parameter.	5-40
:ANALysis:AHIStogram<x>:MEASure:PARAmeter:AREA<x>:<Parameter>:STATe	Turns ON/OFF the waveform parameter or queries the current setting.	5-40
:ANALysis:AHIStogram<x>:MEASure:PARAmeter:AREA<x>:<Parameter>:VALue?	Queries the automated measured value of the waveform parameter.	5-41
:ANALysis:AHIStogram<x>:MEASure:PARAmeter:CALCulation?	Queries all settings related to the calculation items of waveform parameters.	5-41
:ANALysis:AHIStogram<x>:MEASure:PARAmeter:CALCulation:ALL	Turns ON/OFF all calculation items of the waveform parameters.	5-41
:ANALysis:AHIStogram<x>:MEASure:PARAmeter:CALCulation:DEFine<x>	Sets the equation of the calculation items of the waveform parameter or queries the current setting.	5-41
:ANALysis:AHIStogram<x>:MEASure:PARAmeter:CALCulation:STATe<x>	Turns ON/OFF the calculation items of the waveform parameter or queries the current setting.	5-41
:ANALysis:AHIStogram<x>:MEASure:PARAmeter:CALCulation:VALue<x>?	Queries the automated measured value of the calculation items of the waveform parameter.	5-41
:ANALysis:AHIStogram<x>:MEASure:PARAmeter:HRANge<x>	Sets the horizontal range of the waveform parameter or queries the current setting.	5-42
:ANALysis:AHIStogram<x>:MEASure:PARAmeter:VRANge<x>	Sets the vertical range of the waveform parameter or queries the current setting.	5-42
:ANALysis:AHIStogram<x>:MODE	Sets the accumulated histogram mode or queries the current setting.	5-42
:ANALysis:AHIStogram<x>:TRACe	Sets the source trace of the accumulated histogram or queries the current setting.	5-42
:ANALysis:AHIStogram<x>:VERTical	Sets the vertical range of the accumulated histogram or queries the current setting.	5-42
:ANALysis:AHIStogram<x>:WINDow	Sets the measurement target window of the accumulated histogram or queries the current setting.	5-42
:ANALysis:DISPlay<x>	Turns ON/OFF the analysis function display or queries the current setting.	5-42
:ANALysis:FFT<x>?	Queries all settings related to the FFT computation function.	5-43
:ANALysis:FFT<x>:HORizontal?	Queries all settings related the horizontal axis of the FFT computation.	5-43

Command	Function	Page
:ANALysis:FFT<x>:HORizontal:CSPan?	Queries all settings related to the center and span of the horizontal axis of the FFT computation.	5-43
:ANALysis:FFT<x>:HORizontal:CSPan:CENTer	Sets the horizontal center of the FFT computation or queries the current setting.	5-43
:ANALysis:FFT<x>:HORizontal:CSPan:SPAN	Sets the horizontal span of the FFT computation or queries the current setting.	5-43
:ANALysis:FFT<x>:HORizontal:LRIGHT?	Queries all settings related the left and right edges of the horizontal axis of the FFT computation.	5-43
:ANALysis:FFT<x>:HORizontal:LRIGHT:RANGe	Sets the range of the horizontal left and right edges of the FFT computation or queries the current setting.	5-44
:ANALysis:FFT<x>:HORizontal:MODE	Sets the horizontal mode of the FFT computation or queries the current setting.	5-44
:ANALysis:FFT<x>:IPART	Sets the source trace of the imaginary part of the FFT computation or queries the current setting.	5-44
:ANALysis:FFT<x>:LENGth	Sets the number of FFT points or queries the current setting.	5-44
:ANALysis:FFT<x>:MAXHold	Turns ON/OFF the maximum value hold function of the FFT computation or queries the current setting.	5-44
:ANALysis:FFT<x>:MEASure?	Queries all settings related to the automated measurement of the FFT computation.	5-44
:ANALysis:FFT<x>:MEASure:MARKer?	Queries all settings related to the marker cursor measurement of the FFT computation.	5-45
:ANALysis:FFT<x>:MEASure:MARKer[:BASic]?	Queries all settings related to basic items of the marker cursor of the FFT computation.	5-45
:ANALysis:FFT<x>:MEASure:MARKer[:BASic]:ALL	Turns ON/OFF all basic items of the marker cursor of the FFT computation.	5-45
:ANALysis:FFT<x>:MEASure:MARKer[:BASic]:DFRequency?	Queries all settings related to the frequency value between marker cursors of the FFT computation.	5-45
:ANALysis:FFT<x>:MEASure:MARKer[:BASic]:DFRequency:STATE	Turns ON/OFF the frequency value between marker cursors of the FFT computation or queries the current setting.	5-45
:ANALysis:FFT<x>:MEASure:MARKer[:BASic]:DFRequency:VALue?	Queries the frequency value between marker cursors of the FFT computation.	5-45
:ANALysis:FFT<x>:MEASure:MARKer[:BASic]:DV?	Queries all settings related to the power value between marker cursors of the FFT computation.	5-46
:ANALysis:FFT<x>:MEASure:MARKer[:BASic]:DV:STATE	Turns ON/OFF the power value between marker cursors of the FFT computation or queries the current setting.	5-46
:ANALysis:FFT<x>:MEASure:MARKer[:BASic]:DV:VALue?	Queries the power value between marker cursors of the FFT computation.	5-46
:ANALysis:FFT<x>:MEASure:MARKer[:BASic]:FREQuency<x>?	Queries all settings related to the frequency value of the marker cursor of the FFT computation.	5-46

## 5.1 A List of Commands

Command	Function	Page
:ANALysis:FFT<x>:MEASure:MARKer[:BASic]:FREQuency<x>:STATe	Turns ON/OFF the frequency value of the marker cursor of the FFT computation or queries the current setting.	5-46
:ANALysis:FFT<x>:MEASure:MARKer[:BASic]:FREQuency<x>:VALue?	Queries the frequency value of the marker cursor of the FFT computation.	5-46
:ANALysis:FFT<x>:MEASure:MARKer[:BASic]:POSition<x> {<Nrf>}	Sets the marker cursor position of the FFT computation or queries the current setting.	5-46
:ANALysis:FFT<x>:MEASure:MARKer[:BASic]:V<x>?	Queries all settings related to the power value of the marker cursor of the FFT computation.	5-47
:ANALysis:FFT<x>:MEASure:MARKer[:BASic]:V<x>:STATe	Turns ON/OFF the power value of the marker cursor of the FFT computation or queries the current setting.	5-47
:ANALysis:FFT<x>:MEASure:MARKer[:BASic]:V<x>:VALue?	Queries the power value of the marker cursor of the FFT computation.	5-47
:ANALysis:FFT<x>:MEASure:MARKer:CALCulation?	Queries all settings related to calculation items of the marker cursor of the FFT computation.	5-47
:ANALysis:FFT<x>:MEASure:MARKer:CALCulation:ALL	Turns ON/OFF all calculation items of the marker cursor of the FFT computation.	5-47
:ANALysis:FFT<x>:MEASure:MARKer:CALCulation:DEFine<x>	Sets the equation of the calculation items of the marker cursor of the FFT computation or queries the current setting.	5-47
:ANALysis:FFT<x>:MEASure:MARKer:CALCulation:STATe<x>	Turns ON/OFF the calculation items of the marker cursor of the FFT computation or queries the current setting.	5-47
:ANALysis:FFT<x>:MEASure:MARKer:CALCulation:VALue<x>?	Queries the measured value of the calculation items of the marker cursor of the FFT computation.	5-48
:ANALysis:FFT<x>:MEASure:MODE	Sets the automated measurement mode of the FFT computation or queries the current setting.	5-48
:ANALysis:FFT<x>:MEASure:PEAK?	Queries all settings related to the peak value measurement of the FFT computation.	5-48
:ANALysis:FFT<x>:MEASure:PEAK[:BASic]?	Queries all settings related to basic items of the peak value of the FFT computation.	5-48
:ANALysis:FFT<x>:MEASure:PEAK[:BASic]:ALL	Turns ON/OFF all basic items of the peak value of the FFT computation.	5-48
:ANALysis:FFT<x>:MEASure:PEAK[:BASic]:DFRequency?	Queries all settings related to the frequency value between peak values of the FFT computation.	5-48
:ANALysis:FFT<x>:MEASure:PEAK[:BASic]:DFRequency:STATe	Turns ON/OFF the frequency value between peak values of the FFT computation or queries the current setting.	5-49
:ANALysis:FFT<x>:MEASure:PEAK[:BASic]:DFRequency:VALue?	Queries the frequency value between peak values of the FFT computation.	5-49
:ANALysis:FFT<x>:MEASure:PEAK[:BASic]:DV?	Queries all settings related to the power value between peak values of the FFT computation.	5-49

Command	Function	Page
:ANALysis:FFT<x>:MEASure:PEAK[:BASic]:DV:STATE	Turns ON/OFF the power value between peak values of the FFT computation or queries the current setting.	5-49
:ANALysis:FFT<x>:MEASure:PEAK[:BASic]:DV:VALue?	Queries the power value between peak values of the FFT computation.	5-49
:ANALysis:FFT<x>:MEASure:PEAK[:BASic]:FREQuency<x>?	Queries all settings related to the peak frequency value of the FFT computation.	5-49
:ANALysis:FFT<x>:MEASure:PEAK[:BASic]:FREQuency<x>:STATE	Turns ON/OFF the peak frequency value of the FFT computation or queries the current setting.	5-49
:ANALysis:FFT<x>:MEASure:PEAK[:BASic]:FREQuency<x>:VALue?	Queries the peak frequency value of the FFT computation.	5-49
:ANALysis:FFT<x>:MEASure:PEAK[:BASic]:RANge<x>	Sets the measurement range of the peak value of the FFT computation or queries the current setting.	5-50
:ANALysis:FFT<x>:MEASure:PEAK[:BASic]:V<x>?	Queries all settings related to the peak value of the FFT computation.	5-50
:ANALysis:FFT<x>:MEASure:PEAK[:BASic]:V<x>:STATE	Turns ON/OFF the peak value of the FFT computation or queries the current setting.	5-50
:ANALysis:FFT<x>:MEASure:PEAK[:BASic]:V<x>:VALue?	Queries the peak value of the FFT computation.	5-50
:ANALysis:FFT<x>:MEASure:PEAK:CALCulation?	Queries all settings related to calculation items of the FFT computation.	5-50
:ANALysis:FFT<x>:MEASure:PEAK:CALCulation:ALL	Turns ON/OFF all calculation items of the FFT computation.	5-50
:ANALysis:FFT<x>:MEASure:PEAK:CALCulation:DEFine<x>	Sets the equation of the calculation item of the FFT computation or queries the current setting.	5-50
:ANALysis:FFT<x>:MEASure:PEAK:CALCulation:STATE<x>	Turns ON/OFF the calculation items of the FFT computation or queries the current setting.	5-51
:ANALysis:FFT<x>:MEASure:PEAK:CALCulation:VALue<x>?	Queries the measured value of the calculation item of the FFT computation.	5-51
:ANALysis:FFT<x>:RANge	Sets the measurement source window used in the FFT computation or queries the current setting.	5-51
:ANALysis:FFT<x>:RPART	Sets the source trace of the real part of the FFT computation or queries the current setting.	5-51
:ANALysis:FFT<x>:RPOSition	Sets the center point of magnification of the vertical axis of the FFT computation or queries the current setting.	5-51
:ANALysis:FFT<x>:VERTical?	Queries all settings related the vertical axis of the FFT computation.	5-51
:ANALysis:FFT<x>:VERTical:LEVel	Sets the display position of the vertical axis of the FFT computation or queries the current setting.	5-51
:ANALysis:FFT<x>:VERTical:MODE	Sets the vertical axis mode of the FFT computation or queries the current setting.	5-51
:ANALysis:FFT<x>:VERTical:SENSitivity	Sets the vertical sensitivity of the FFT computation or queries the current setting.	5-52
:ANALysis:FFT<x>:WINDow	Sets the window function or queries the current setting.	5-52
:ANALysis:TYPE<x>	Sets the analysis function type or queries the current setting.	5-52
:ANALysis:VTDisplay	Turns ON/OFF the VT waveform display or queries the current setting.	5-52
:ANALysis:WAIT<x>?	Waits for the analysis to complete with a timeout.	5-52
:ANALysis:WPARAMeter<x>?	Queries all settings related to the waveform parameter measurement function.	5-52

## 5.1 A List of Commands

Command	Function	Page
:ANALysis:WPARAMeter<x>:CALCulation	Sets the calculation items or queries the current setting.	5-53
:ANALysis:WPARAMeter<x>:HISTogram?	Queries all settings related to the histogram display.	5-53
:ANALysis:WPARAMeter<x>:HISTogram:MEASure?	Queries all settings related to the automated measurement of the histogram display.	5-53
:ANALysis:WPARAMeter<x>:HISTogram:MEASure:CURSor?	Queries all settings related to cursor measurements on the histogram.	5-53
:ANALysis:WPARAMeter<x>:HISTogram:MEASure:CURSor:ALL	Turn ON/OFF all histogram cursors.	5-54
:ANALysis:WPARAMeter<x>:HISTogram:MEASure:CURSor:C<x>?	Queries all settings related to the cursor measurement on the histogram.	5-54
:ANALysis:WPARAMeter<x>:HISTogram:MEASure:CURSor:C<x>:POSITION	Sets the cursor position on the histogram or queries the current setting.	5-54
:ANALysis:WPARAMeter<x>:HISTogram:MEASure:CURSor:C<x>:STATE	Turns ON/OFF the cursor on the histogram or queries the current setting.	5-54
:ANALysis:WPARAMeter<x>:HISTogram:MEASure:CURSor:C<x>:VALue?	Queries the measured value of the cursor on the histogram.	5-54
:ANALysis:WPARAMeter<x>:HISTogram:MEASure:CURSor:DC?	Queries all settings related to the measurement between cursors on the histogram.	5-54
:ANALysis:WPARAMeter<x>:HISTogram:MEASure:CURSor:DC:STATE	Turns ON/OFF the measurement between cursors on the histogram or queries the current setting.	5-55
:ANALysis:WPARAMeter<x>:HISTogram:MEASure:CURSor:DC:VALue?	Queries the measured value between cursors on the histogram.	5-55
:ANALysis:WPARAMeter<x>:HISTogram:MEASure:CURSor:LINKage	Turns ON/OFF the cursor link on the histogram or queries the current setting.	5-55
:ANALysis:WPARAMeter<x>:HISTogram:MEASure:MODE	Sets the automated measurement mode of the histogram display or queries the current setting.	5-55
:ANALysis:WPARAMeter<x>:HISTogram:MEASure:PARAMeter?	Queries all settings related to the automated measurement of histogram parameters.	5-55
:ANALysis:WPARAMeter<x>:HISTogram:MEASure:PARAMeter:ALL	Turn ON/OFF all histogram parameters.	5-55
:ANALysis:WPARAMeter<x>:HISTogram:MEASure:PARAMeter:<Parameter>?	Queries all settings related to the histogram parameter.	5-56
:ANALysis:WPARAMeter<x>:HISTogram:MEASure:PARAMeter:<Parameter>:STATE	Turns ON/OFF the histogram parameter or queries the current setting.	5-56
:ANALysis:WPARAMeter<x>:HISTogram:MEASure:PARAMeter:<Parameter>:VALue?	Queries the measured value of the histogram parameter.	5-56
:ANALysis:WPARAMeter<x>:LIST?	Queries all settings related to the list display.	5-56
:ANALysis:WPARAMeter<x>:LIST:ITEM?	Queries list display items.	5-56
:ANALysis:WPARAMeter<x>:LIST:SCROLL	Sets the scroll direction of the list display or queries the current setting.	5-56
:ANALysis:WPARAMeter<x>:LIST:VALue?	Queries the automated measured value of the list display number of the waveform parameter measurement.	5-56
:ANALysis:WPARAMeter<x>:MODE	Sets the mode of the waveform parameter measurement or queries the current setting.	5-57
:ANALysis:WPARAMeter<x>:TRACe<x>?	Queries all settings related to the trace of the waveform parameter measurement.	5-57
:ANALysis:WPARAMeter<x>:TRACe<x>:AREA<x>?	Queries all settings related to the area of the waveform parameter measurement.	5-57

Command	Function	Page
:ANALysis:WPARAMeter<x>:TRACe<x>:AREA<x>:TYPE	Sets the waveform parameter of the waveform parameter measurement or queries the current setting.	5-57
:ANALysis:WPARAMeter<x>:TREND?	Queries all settings related to the trend display of the waveform parameter measurement.	5-57
:ANALysis:WPARAMeter<x>:TREND:AScale[:EXECute]	Executes the auto scaling of the trend display of the waveform parameter measurement.	5-58
:ANALysis:WPARAMeter<x>:TREND:HSPan	Sets the horizontal span of the trend display of the waveform parameter measurement or queries the current setting.	5-58
:ANALysis:WPARAMeter<x>:TREND:MEASure?	Queries all settings related to the automated measurement of the trend display of the waveform parameter measurement.	5-58
:ANALysis:WPARAMeter<x>:TREND:MEASure:CURSor?	Queries all settings related to the cursor measurement of the trend of the waveform parameter measurement.	5-58
:ANALysis:WPARAMeter<x>:TREND:MEASure:CURSor:ALL	Turns ON/OFF all cursors of the trend of the waveform parameter measurement.	5-58
:ANALysis:WPARAMeter<x>:TREND:MEASure:CURSor:C<x>?	Queries all settings related to the measured value of the cursor of the trend of the waveform parameter measurement.	5-58
:ANALysis:WPARAMeter<x>:TREND:MEASure:CURSor:C<x>:POSition	Sets the cursor position of the trend of the waveform parameter measurement or queries the current setting.	5-58
:ANALysis:WPARAMeter<x>:TREND:MEASure:CURSor:C<x>:STATe	Turns ON/OFF the cursor of the trend of the waveform parameter measurement or queries the current setting.	5-59
:ANALysis:WPARAMeter<x>:TREND:MEASure:CURSor:C<x>:VALue?	Queries the measured value of the cursor of the trend of the waveform parameter measurement.	5-59
:ANALysis:WPARAMeter<x>:TREND:MEASure:CURSor:DC?	Queries all settings related to the measurement between cursors on the trend.	5-59
:ANALysis:WPARAMeter<x>:TREND:MEASure:CURSor:DC:STATe	Turns ON/OFF the measurement between cursors on the trend or queries the current setting.	5-59
:ANALysis:WPARAMeter<x>:TREND:MEASure:CURSor:DC:VALue?	Queries the measured value between cursors on the trend.	5-59
:ANALysis:WPARAMeter<x>:TREND:MEASure:CURSor:LINKage	Turns ON/OFF the trend cursor link of the waveform parameter measurement or queries the current setting.	5-59
:ANALysis:WPARAMeter<x>:TREND:MEASure:MODE	Sets the automated measurement mode of the trend of the waveform parameter measurement or queries the current setting.	5-60
:ANALysis:WPARAMeter<x>:TREND:VERTical	Sets the vertical range of the trend of the waveform parameter measurement or queries the current setting.	5-60
:ANALysis:XY<x>?	Queries all settings related to the XY display function.	5-60
:ANALysis:XY<x>:GATE?	Queries all settings related to the gate function of the XY display.	5-60
:ANALysis:XY<x>:GATE:ALEVel	Sets the active level of the gate of the XY display or queries the current setting.	5-61
:ANALysis:XY<x>:GATE:HYSteresis<x>	Sets the hysteresis of the gate of the XY display or queries the current setting.	5-61
:ANALysis:XY<x>:GATE:LEVel<x>	Sets the level of the gate of the XY display or queries the current setting.	5-61
:ANALysis:XY<x>:GATE:TRACe	Sets the gate trace of the XY display or queries the current setting.	5-61
:ANALysis:XY<x>:MEASure?	Queries all settings related to the automated measurement of the XY display.	5-61



## 5.1 A List of Commands

Command	Function	Page
:ANALysis:XY<x>:MEASure:CURSor?	Queries all settings related to the cursor measurement of the XY display.	5-61
:ANALysis:XY<x>:MEASure:CURSor:XLINKage	Turns ON/OFF the horizontal cursor link on the XY display or queries the current setting.	5-62
:ANALysis:XY<x>:MEASure:CURSor:X<x>?	Queries all settings related to the horizontal cursor of the XY display.	5-62
:ANALysis:XY<x>:MEASure:CURSor:X<x>:POSition	Sets the horizontal cursor position of the XY display or queries the current setting.	5-62
:ANALysis:XY<x>:MEASure:CURSor:X<x>:VALue?	Queries the voltage value at the horizontal cursor of the XY display.	5-62
:ANALysis:XY<x>:MEASure:CURSor:YLINKage	Turns ON/OFF the vertical cursor link on the XY display or queries the current setting.	5-62
:ANALysis:XY<x>:MEASure:CURSor:Y<x>?	Queries all settings related to the vertical cursor of the XY display.	5-62
:ANALysis:XY<x>:MEASure:CURSor:Y<x>:POSition	Sets the vertical cursor position of the XY display or queries the current setting.	5-62
:ANALysis:XY<x>:MEASure:CURSor:Y<x>:VALue?	Queries the voltage value at the vertical cursor of the XY display.	5-63
:ANALysis:XY<x>:MEASure:MODE	Sets the automated measurement mode of the XY display or queries the current setting.	5-63
:ANALysis:XY<x>:MEASure:XYINteg?	Queries all settings related to the integration of the XY display.	5-63
:ANALysis:XY<x>:MEASure:XYINteg:LOOP	Sets the integration mode of the XY display or queries the current setting.	5-63
:ANALysis:XY<x>:MEASure:XYINteg:POLarity	Sets the integration polarity of the XY display or queries the current setting.	5-63
:ANALysis:XY<x>:MEASure:XYINteg:VALue?	Queries the integral value of the XY display.	5-63
:ANALysis:XY<x>:TRANge	Sets the measurement range of the XY display or queries the current setting.	5-63
:ANALysis:XY<x>:WINDow	Sets the measurement source window of the XY display or queries the current setting.	5-63
:ANALysis:XY<x>:XTRace	Sets the X-axis trace of the XY display or queries the current setting.	5-64
:ANALysis:XY<x>:YTRace	Sets the Y-axis trace of the XY display or queries the current setting.	5-64
<b>ASETup Group</b>		
:ASETup:EXECute	Executes auto setup.	5-64
:ASETup:UNDO	Cancels auto setup that has been executed.	5-64
<b>CALibrate Group</b>		
:CALibrate?	Queries all settings related to the calibration.	5-64
:CALibrate:EXECute	Executes calibration.	5-64
:CALibrate:MODE	Turns ON/OFF the auto calibration or queries the current setting.	5-64
<b>CHANnel Group</b>		
:CHANnel<x>?	Queries all settings related to the channel.	5-65
:CHANnel<x>:ASCale[:EXECute]	Executes the auto scaling of the channel.	5-65
:CHANnel<x>:BWIDth	Sets the input filter of the channel or queries the current setting.	5-65
:CHANnel<x>:COUPling	Sets the input coupling of the channel or queries the current setting.	5-65
:CHANnel<x>:DESKew	Sets the skew correction of the channel or queries the current setting.	5-65
:CHANnel<x>:DISPlay	Turns ON/OFF the display of the channel or queries the current setting.	5-65
:CHANnel<x>:INVert	Turns ON/OFF the inverted display of the channel or queries the current setting.	5-65
:CHANnel<x>:LABel?	Queries all settings related to the waveform label of the channel.	5-65
:CHANnel<x>:LABel[:DEFine]	Sets the waveform label of the channel or queries the current setting.	5-65
:CHANnel<x>:LABel:MODE	Turns ON/OFF the waveform label display of the channel or queries the current setting.	5-65
:CHANnel<x>:OCANcel	Turns ON/OFF the offset cancel of the channel or queries the current setting.	5-66
:CHANnel<x>:OFFSet	Sets the offset voltage of the channel or queries the current setting.	5-66
:CHANnel<x>:POSition	Sets the vertical position of the channel or queries the current setting.	5-66

Command	Function	Page
:CHANnel<x>:PROBe?	Queries all settings related to the probe attenuation of the channel.	5-66
:CHANnel<x>:PROBe[:MODE]	Sets the probe attenuation of the channel or queries the current setting.	5-66
:Channal<x>:PROBe:AUTO?	Queries the probe attenuation of the channel when set to AUTO.	5-66
:CHANnel<x>:SELEct	Sets the waveform (input/computation) to be assigned to the input channel or queries the current setting.	5-66
:CHANnel<x>:SVALue	Turns ON/OFF the scale display of the channel or queries the current setting.	5-66
:CHANnel<x>:VDIV	Sets the vertical sensitivity (V/div) of the channel or queries the current setting.	5-66
<b>CLEAr Group</b>		
:CLEAr:ACCumulate	Clears accumulated waveforms.	5-67
:CLEAr[:HISTory]	Clears history waveforms.	5-67
:CLEAr:SNAP	Clears snapshot waveforms.	5-67
<b>COMMunicate Group</b>		
:COMMunicate?	Queries all settings related to communications.	5-68
:COMMunicate:HEADer	Sets whether to attach a header to the response data or queries the current setting.	5-68
:COMMunicate:LOCKout	Sets or clears local lockout.	5-68
:COMMunicate:OPSE	Sets the overlap command that is to be used by the *OPC, *OPC?, and *WAI commands or queries the current setting.	5-68
:COMMunicate:OPSR?	Queries the operation pending status register.	5-68
:COMMunicate:OVERlap	Sets the commands that will operate as overlap commands or queries the current setting.	5-68
:COMMunicate:REMOte	Sets remote or local.	5-68
:COMMunicate:STATus?	Queries line-specific status.	5-69
:COMMunicate:VERBoSe	Sets whether to use abbreviated or unabbreviated form for response data or queries the current setting.	5-69
:COMMunicate:WAIT	Waits for a specified extended event.	5-69
:COMMunicate:WAIT?	Creates the response that is returned when the specified event occurs.	5-69
<b>CURSor Group</b>		
:CURSor?	Queries all settings related to cursor measurements.	5-70
:CURSor:DISPlay	Turns ON/OFF the cursor or queries the current setting.	5-70
:CURSor:HORizontal?	Queries all settings related to the horizontal cursors.	5-70
:CURSor:HORizontal[:BASic]?	Queries all settings related to basic items of the horizontal cursors.	5-70
:CURSor:HORizontal[:BASic]:ALL	Turns ON/OFF all basic items of the horizontal cursors.	5-70
:CURSor:HORizontal[:BASic]:DV?	Queries all settings related to the $\Delta V$ measurement of the horizontal cursors.	5-70
:CURSor:HORizontal[:BASic]:DV:STATe	Turns ON/OFF the $\Delta V$ measurement of the horizontal cursors or queries the current setting.	5-70
:CURSor:HORizontal[:BASic]:DV:VALue?	Queries the $\Delta V$ value of the horizontal cursors.	5-70
:CURSor:HORizontal[:BASic]:LINKage	Turns ON/OFF the horizontal cursor link or queries the current setting.	5-70
:CURSor:HORizontal[:BASic]:V<x>?	Queries all settings related to the horizontal cursor.	5-71
:CURSor:HORizontal[:BASic]:V<x>:JUMP	Jumps the horizontal cursor to the center position of the zoom waveform.	5-71
:CURSor:HORizontal[:BASic]:V<x>:POSition	Sets the horizontal cursor position or queries the current setting.	5-71
:CURSor:HORizontal[:BASic]:V<x>:STATe	Turns ON/OFF the horizontal cursor or queries the current setting.	5-71
:CURSor:HORizontal[:BASic]:V<x>:VALue?	Queries the voltage value at the horizontal cursor.	5-71
:CURSor:HORizontal:CALCulation?	Queries all settings related to calculation items of the horizontal cursors.	5-71
:CURSor:HORizontal:CALCulation:ALL	Turns ON/OFF all calculation items of the horizontal cursors.	5-71
:CURSor:HORizontal:CALCulation:DEFine<x>	Sets the equation of the calculation item of the horizontal cursor or queries the current setting.	5-71
:CURSor:HORizontal:CALCulation:STATe<x>	Turns ON/OFF the calculation item of the horizontal cursor or queries the current setting.	5-71

## 5.1 A List of Commands

Command	Function	Page
:CURSor:HORizontal:CALCulation:VALue<x>?	Queries the measured value of the calculation item of the horizontal cursor.	5-71
:CURSor:HORizontal:TRACe	Sets the source trace of the horizontal cursor or queries the current setting.	5-72
:CURSor:MARKer?	Queries all settings related to the marker cursors.	5-72
:CURSor:MARKer:CALCulation?	Queries all settings related to calculation items of the marker cursors.	5-72
:CURSor:MARKer:CALCulation:ALL	Turns ON/OFF all calculation items of the marker cursors.	5-72
:CURSor:MARKer:CALCulation:DEFine<x>	Sets the equation of the calculation item of the marker cursors or queries the current setting.	5-72
:CURSor:MARKer:CALCulation:STATe<x>	Turns ON/OFF the calculation item of the marker cursors or queries the current setting.	5-72
:CURSor:MARKer:CALCulation:VALue<x>?	Queries the measured value of the calculation item of the marker cursors.	5-72
:CURSor:MARKer:CM<x>?	Queries all settings related to the marker cursor.	5-72
:CURSor:MARKer:CM<x>:ALL	Turns ON/OFF all items of the marker cursor.	5-73
:CURSor:MARKer:CM<x>:DT<x>?	Queries all settings related to the $\Delta T$ measurement of the cursor marker.	5-73
:CURSor:MARKer:CM<x>:DT<x>:STATe	Turns ON/OFF the $\Delta T$ measurement of the maker cursor or queries the current setting.	5-73
:CURSor:MARKer:CM<x>:DT<x>:VALue?	Queries the $\Delta T$ value of the marker cursor.	5-73
:CURSor:MARKer:CM<x>:DV<x>?	Queries all settings related to the $\Delta V$ measurement of the cursor marker.	5-73
:CURSor:MARKer:CM<x>:DV<x>:STATe	Turns ON/OFF the $\Delta V$ measurement of the maker cursor or queries the current setting.	5-73
:CURSor:MARKer:CM<x>:DV<x>:VALue?	Queries the $\Delta V$ value of the marker cursor.	5-73
:CURSor:MARKer:CM<x>:JUMP	Jumps the marker cursor to the center position of the zoom waveform.	5-73
:CURSor:MARKer:CM<x>:POSition	Sets the marker cursor position or queries the current setting.	5-73
:CURSor:MARKer:CM<x>:T?	Queries all settings related to the time measurement of the marker cursor.	5-73
:CURSor:MARKer:CM<x>:T:STATe	Turns ON/OFF the time measurement of the maker cursor or queries the current setting.	5-74
:CURSor:MARKer:CM<x>:T:VALue?	Queries the time value at the marker cursor position.	5-74
:CURSor:MARKer:CM<x>:TRACe	Sets the source trace of the marker cursor or queries the current setting.	5-74
:CURSor:MARKer:CM<x>:V?	Queries all settings related to the voltage measurement of the marker cursor.	5-74
:CURSor:MARKer:CM<x>:V:STATe	Turns ON/OFF the voltage measurement of the maker cursor or queries the current setting.	5-74
:CURSor:MARKer:CM<x>:V:VALue?	Queries the voltage value at the marker cursor position.	5-74
:CURSor:SERial?	Queries all settings related to the serial cursors.	5-74
:CURSor:SERial:SCURsor<x>?	Queries all settings related to the serial cursor.	5-74
:CURSor:SERial:SCURsor<x>:ACTive	Sets the active level of the serial cursor or queries the current setting.	5-74
:CURSor:SERial:SCURsor<x>:BCOunt	Sets the bit length of the serial cursor or queries the current setting.	5-74
:CURSor:SERial:SCURsor<x>:BITRate	Sets the bit rate of the serial cursor or queries the current setting.	5-75
:CURSor:SERial:SCURsor<x>:BITOrder	Sets the bit order of the serial cursor or queries the current setting.	5-75
:CURSor:SERial:SCURsor<x>:FORMat	Sets the display format of the serial cursor or queries the current setting.	5-75
:CURSor:SERial:SCURsor<x>:HYSTeresis	Sets the hysteresis of the serial cursor or queries the current setting.	5-75
:CURSor:SERial:SCURsor<x>:JUMP	Moves the serial cursor to the specified direction.	5-75
:CURSor:SERial:SCURsor<x>:LEVel	Sets the threshold level of the serial cursor or queries the current setting.	5-75
:CURSor:SERial:SCURsor<x>:MODE	Turns ON/OFF the serial cursor or queries the current setting.	5-75
:CURSor:SERial:SCURsor<x>:POSition	Sets the serial cursor position or queries the current setting.	5-75
:CURSor:SERial:SCURsor<x>:TRACe	Sets the trace of the serial cursor or queries the current setting.	5-76
:CURSor:SERial:SCURsor<x>:TRACk	Jumps the serial cursor onto the zoom waveform.	5-76
:CURSor:SERial:SCURsor<x>:VALue?	Queries the measured value of the serial cursor.	5-76
:CURSor:TYPE	Sets the cursor type or queries the current setting.	5-76
:CURSor:VERTical?	Queries all settings related to the vertical cursors.	5-76
:CURSor:VERTical[:BASic]?	Queries all settings related to basic items of the vertical cursors.	5-76
:CURSor:VERTical[:BASic]:ALL	Turns ON/OFF all basic items of the vertical cursors.	5-76
:CURSor:VERTical[:BASic]:DT?	Queries all settings related to the $\Delta T$ measurement of the vertical cursors.	5-76
:CURSor:VERTical[:BASic]:DT:STATe	Turns ON/OFF the $\Delta T$ measurement of the vertical cursors or queries the current setting.	5-76

Command	Function	Page
:CURSor:VERTical[:BASic]:DT:VALue?	Queries the $\Delta T$ value of the vertical cursors.	5-76
:CURSor:VERTical[:BASic]:LINKage	Turns ON/OFF the vertical cursor link or queries the current setting.	5-76
:CURSor:VERTical[:BASic]:PERDt?	Queries all settings related to the $1/\Delta T$ measurement of the vertical cursors.	5-77
:CURSor:VERTical[:BASic]:PERDt:STATe	Turns ON/OFF the $1/\Delta T$ measurement of the vertical cursors or queries the current setting.	5-77
:CURSor:VERTical[:BASic]:PERDt:VALue?	Queries the $1/\Delta T$ value of the vertical cursors.	5-77
:CURSor:VERTical[:BASic]:T<x>?	Queries all settings related to the vertical cursor.	5-77
:CURSor:VERTical[:BASic]:T<x>:JUMP	Jumps the vertical cursor to the center position of the zoom waveform.	5-77
:CURSor:VERTical[:BASic]:T<x>:POSition	Sets the vertical cursor position or queries the current setting.	5-77
:CURSor:VERTical[:BASic]:T<x>:STATe	Turns ON/OFF the vertical cursor or queries the current setting.	5-77
:CURSor:VERTical[:BASic]:T<x>:VALue?	Queries the time value at the vertical cursor.	5-77
:CURSor:VERTical:CALCulation?	Queries all settings related to calculation items of the vertical cursors.	5-77
:CURSor:VERTical:CALCulation:ALL	Turns ON/OFF all calculation items of the vertical cursors.	5-77
:CURSor:VERTical:CALCulation:DEFine<x>	Sets the equation of the calculation item of the vertical cursor or queries the current setting.	5-78
:CURSor:VERTical:CALCulation:STATe<x>	Turns ON/OFF the calculation item of the vertical cursor or queries the current setting.	5-78
:CURSor:VERTical:CALCulation:VALue<x>?	Queries the measured value of the calculation item of the vertical cursor.	5-78
:CURSor:VT?	Queries all settings related to the VT cursor.	5-78
:CURSor:VT[:BASic]?	Queries all settings related to basic items of the VT cursor.	5-78
:CURSor:VT[:BASic]:ALL	Turns ON/OFF all basic items of the VT cursor.	5-78
:CURSor:VT[:BASic]:POSition	Sets the VT cursor position or queries the current setting.	5-78
:CURSor:VT[:BASic]:T?	Queries all settings related to the time value of the VT cursor.	5-78
:CURSor:VT[:BASic]:T:STATe	Turns ON/OFF the time value of the VT cursor or queries the current setting.	5-78
:CURSor:VT[:BASic]:T:VALue?	Queries the time value at the VT cursor.	5-78
:CURSor:VT[:BASic]:V<x>?	Queries all settings related to the voltage value of the VT cursor.	5-79
:CURSor:VT[:BASic]:V<x>:STATe	Turns ON/OFF the voltage value of the VT cursor or queries the current setting.	5-79
:CURSor:VT[:BASic]:V<x>:VALue?	Queries the voltage value at the VT cursor.	5-79
:CURSor:VT:CALCulation?	Queries all settings related to calculation items of the VT cursor.	5-79
:CURSor:VT:CALCulation:ALL	Turns ON/OFF all calculation items of the VT cursor.	5-79
:CURSor:VT:CALCulation:DEFine<x>	Sets the equation of the calculation item of the VT cursor or queries the current setting.	5-79
:CURSor:VT:CALCulation:STATe<x>	Turns ON/OFF the calculation item of the VT cursor or queries the current setting.	5-79
:CURSor:VT:CALCulation:VALue<x>?	Queries the measured value of the calculation item of the VT cursor.	5-79
:CURSor:VT:JUMP	Jumps to the center position of the zoom waveform of the VT cursor.	5-79
<b>DISPlay Group</b>		
:DISPlay?	Queries all settings related to the display.	5-80
:DISPlay:ACCumulate?	Queries all settings related to the accumulated display of waveforms.	5-80
:DISPlay:ACCumulate:GRADe	Sets the accumulate mode or queries the current setting.	5-80
:DISPlay:ACCumulate:MODE	Turns ON/OFF the accumulate mode or queries the current setting.	5-80
:DISPlay:ACCumulate:PERsistence?	Queries all settings related to persistence.	5-80
:DISPlay:ACCumulate:PERsistence:COUNt	Sets the persistence count or queries the current setting.	5-80
:DISPlay:ACCumulate:PERsistence:MODE	Sets the persistence mode or queries the current setting.	5-80
:DISPlay:ACCumulate:PERsistence:TIME	Sets the persistence time or queries the current setting.	5-80

## 5.1 A List of Commands

Command	Function	Page
:DISPlay:BLIGHt?	Queries all settings related to the backlight.	5-81
:DISPlay:BLIGHt:AUTOoff	Sets the function that automatically turns the backlight off or queries the current setting.	5-81
:DISPlay:BLIGHt:BRIGHtness	Sets the brightness of the backlight or queries the current setting.	5-81
:DISPlay:BLIGHt:LCD	Turns ON/OFF the backlight or queries the current setting.	5-81
:DISPlay:BLIGHt:TIMEout	Sets the timeout of the backlight or queries the current setting.	5-81
:DISPlay:COLor?	Queries all settings related to the waveform display color.	5-81
:DISPlay:COLor:{CHANnel<x> MATH<x> REFerence<x>}	Sets the waveform color or queries the current setting.	5-81
:DISPlay:FORMat	Sets the display format or queries the current setting.	5-81
:DISPlay:GRATICule	Sets the graticule (grid) or queries the current setting.	5-81
:DISPlay:INTENsity?	Queries all settings related to the intensity of the display item.	5-81
:DISPlay:INTENsity[:WAVEform]	Sets the intensity of the waveform or queries the current setting.	5-81
:DISPlay:INTENsity:{CURSor GRID MARKer ZBOX}	Sets the intensity of the display item or queries the current setting.	5-82
:DISPlay:INTERpolate	Sets the display interpolation format or queries the current setting.	5-82
:DISPlay:MAPPING?	Queries all settings related to the waveform mapping to the split screen.	5-82
:DISPlay:MAPPING[:MODE]	Sets the waveform mapping mode for the split screen or queries the current setting.	5-82
:DISPlay:MAPPING:TRACe<x>	Sets the mapping of the waveform to the split screen or queries the current setting.	5-82
<b>FILE Group</b>		
:FILE?	Queries all settings related to the specified storage medium or internal memory.	5-83
:FILE:DIRectory?	Queries all settings related to the specified storage medium.	5-83
:FILE[:DIRectory]:CDIRectory	Sets the current directory or queries the current setting.	5-83
:FILE[:DIRectory]:FREE?	Queries the free disk space in bytes on the specified storage medium.	5-83
:FILE[:DIRectory]:MDIRectory	Creates a directory under the specified directory.	5-84
:FILE:INTernal?	Queries all settings related to the internal memory.	5-84
:FILE:INTernal:RECall:{DMEMory SETup}[ :EXECute]	Executes the loading of specific data from the internal memory.	5-84
:FILE:INTernal:STORe?	Queries all settings related to the saving to the internal memory.	5-84
:FILE:INTernal:STORe:{BINary DMEMory}?	Queries all settings related to the saving of specific data to the internal memory.	5-84
:FILE:INTernal:STORe:{BINary DMEMory SETup}[ :EXECute]	Executes the save operation of specific data to the internal memory.	5-84
:FILE:INTernal:STORe:BINary:TRACe	Sets the trace to be saved in binary data to the internal memory or queries the current setting.	5-84
:FILE:INTernal:STORe:DMEMory:TRACe	Sets the trace to be saved in accumulated data to the internal memory or queries the current setting.	5-84
:FILE:INTernal:UNLoad:DMEMory[ :EXECute]	Clears the loaded accumulated data.	5-84
:FILE:LOAD?	Queries all settings related to the loading of files on the specified storage medium.	5-84
:FILE:LOAD:{BINary ZPOLYgon ZWAVE}?	Queries all settings related to the loading of specific data.	5-84
:FILE:LOAD:{BINary DMEMory MASK SETup ZPOLYgon ZWAVE}:ABORt	Aborts the loading of the specific data.	5-85
:FILE:LOAD:{BINary DMEMory MASK SETup ZPOLYgon ZWAVE}[ :EXECute]	Executes the loading of the specific data.	5-85
:FILE:LOAD:BINary:REFerence	Sets the load destination of the binary data or queries the current setting.	5-85
:FILE:LOAD:{ZPOLYgon ZWAVE}:ZONE	Sets the load destination of the zone data of specific data or queries the current setting.	5-85
:FILE:SAVE?	Queries all settings related to the saving of the data.	5-85

Command	Function	Page
:FILE:SAVE:{AHistogram AScii BINary DMEMory FFT FLOat SBUS ZWAVE}?	Queries all settings related to the saving of the specific data.	5-85
:FILE:SAVE:{AHistogram AScii BINary DMEMory FFT FLOat SETup SBUS WPARAMeter ZWAVE}:ABORT	Aborts the save operation of specific data.	5-85
:FILE:SAVE:{AHistogram AScii BINary DMEMory FFT FLOat SETup SBUS WPARAMeter ZWAVE}[:EXECute]	Executes the saving of specific data by specifying a file name.	5-86
:FILE:SAVE:{AHistogram FFT SBUS}:ANALysis	Sets the trace of specific data to be saved or queries the current setting.	5-86
:FILE:SAVE:ANAMing	Sets the type of auto naming of file names of the saved data or queries the current setting.	5-86
:FILE:SAVE:{AScii BINary FLOat}:COMPRession	Sets the compression method for saving specific data or queries the current setting.	5-86
:FILE:SAVE:{AScii BINary FLOat}:HISTory	Sets whether to save the entire data or the selected data of specific data or queries the current setting.	5-86
:FILE:SAVE:{AScii BINary FLOat}:TRACe	Sets the trace of specific data to be saved or queries the current setting.	5-86
:FILE:SAVE:COMMEnt	Sets the comment of data to be saved or queries the current setting.	5-86
:FILE:SAVE:DMEMory:TRACe	Sets the trace to be saved as accumulated data or queries the current setting.	5-87
:FILE:SAVE:NAME	Sets the name of the data file to be saved or queries the current setting.	5-87
:FILE:SAVE:ZWAVE:ZONE	Sets the zone of the zone data to be saved or queries the current setting.	5-87
<b>GONogo Group</b>		
:GONogo?	Queries all settings related to the GO/NO-GO determination.	5-88
:GONogo:ABORT	Aborts the GO/NO-GO determination.	5-88
:GONogo:ACTion?	Queries all settings related to the action taken when the determination result is NO-GO and the criteria.	5-88
:GONogo:ACTion:BUZZer	Sets whether to sound a buzzer when the determination result is NO-GO or queries the current setting.	5-88
:GONogo:ACTion:HCOpy	Sets whether to print the screen image on the printer when the determination result is NO-GO or queries the current setting.	5-88
:GONogo:ACTion:SAVE	Sets whether to save the waveform data to the storage medium when the determination result is NO-GO or queries the current setting.	5-88
:GONogo:CONDition<x>	Sets the GO/NO-GO determination criteria or queries the current setting.	5-88
:GONogo:COUNt?	Queries the actual number of GO/NO-GO determinations.	5-88
:GONogo:EXECute	Executes the GO/NO-GO determination.	5-88
:GONogo:LOGic	Sets the GO/NO-GO determination logic or queries the current setting.	5-89
:GONogo:MODE	Sets the type of GO/NO-GO determination or queries the current setting.	5-89
:GONogo:NGCount?	Queries the actual number of NO-GOs of the GO/NO-GO determination.	5-89
:GONogo[:SCONdition]?	Queries all settings related to the determination termination condition.	5-89
:GONogo[:SCONdition]:NGCount	Sets the number of NO-GOs that terminates the GO/NO-GO determination or queries the current setting.	5-89
:GONogo[:SCONdition]:STOPcount	Sets the acquisition count that terminates the GO/NO-GO determination or queries the current setting.	5-89
:GONogo:TELEcomtest?	Queries all settings related to telecom test determination.	5-89
:GONogo:TELEcomtest:SElect<x>?	Queries all settings related to the condition of the telecom test determination.	5-89
:GONogo:TELEcomtest:SElect<x>:EYEPattern?	Queries all settings related to eye pattern determination of the condition.	5-89
:GONogo:TELEcomtest:SElect<x>:EYEPattern:<Parameter>	Sets the upper and lower limits of the waveform parameter of the eye pattern determination or queries the current setting.	5-90
:GONogo:TELEcomtest:SElect<x>:MASK?	Queries all settings related to the mask determination of the condition.	5-90

## 5.1 A List of Commands

Command	Function	Page
:GONogo:TELEcomtest:SElect<x>;MASK:ELEment<x>?	Queries all settings related to the element used in the mask determination.	5-90
:GONogo:TELEcomtest:SElect<x>;MASK:ELEment<x>;PSPCount	Sets the upper and lower limits of the error rate for the number of sampled data points of the element or queries the current setting.	5-90
:GONogo:TELEcomtest:SElect<x>;MASK:ELEment<x>;PWCount	Sets the upper and lower limits of the error rate for the number of acquisitions of the element or queries the current setting.	5-90
:GONogo:TELEcomtest:SElect<x>;MASK:ELEment<x>;SPCount	Sets the upper and lower limits of the number of sampled data points for the element that results in error or queries the current setting.	5-91
:GONogo:TELEcomtest:SElect<x>;MASK:ELEment<x>;WCount	Sets the upper and lower limits of the number of acquisitions for the element that results in error or queries the current setting.	5-91
:GONogo:ZPARAMeter?	Queries all settings related to zone/parameter determination.	5-91
:GONogo:ZPARAMeter:SElect<x>?	Queries all settings related to the condition of the zone/parameter determination.	5-91
:GONogo:ZPARAMeter:SElect<x>;MODE	Sets the mode of the condition or queries the current setting.	5-91
:GONogo:ZPARAMeter:SElect<x>;PARAMeter?	Queries all settings related to the condition parameter.	5-92
:GONogo:ZPARAMeter:SElect<x>;PARAMeter:CATegory	Sets the parameter category or queries the current setting.	5-92
:GONogo:ZPARAMeter:SElect<x>;PARAMeter:FFT<x>?	Queries all settings related to the FFT determination.	5-92
:GONogo:ZPARAMeter:SElect<x>;PARAMeter:FFT<x>;CALCulation<x>	Sets the upper and lower limits of the calculation item of the FFT determination or queries the current setting.	5-92
:GONogo:ZPARAMeter:SElect<x>;PARAMeter:FFT<x>;PEAK?	Queries all settings related to the peak value of the FFT determination.	5-92
:GONogo:ZPARAMeter:SElect<x>;PARAMeter:FFT<x>;PEAK:DFREquency	Sets the upper and lower limits between the peak frequencies of the FFT determination or queries the current setting.	5-92
:GONogo:ZPARAMeter:SElect<x>;PARAMeter:FFT<x>;PEAK:DV	Sets the upper and lower limits between the peak voltages of the FFT determination or queries the current setting.	5-93
:GONogo:ZPARAMeter:SElect<x>;PARAMeter:FFT<x>;PEAK:FREquency<x>	Sets the upper and lower limits of the peak frequency of the FFT determination or queries the current setting.	5-93
:GONogo:ZPARAMeter:SElect<x>;PARAMeter:FFT<x>;PEAK:V<x>?	Sets the upper and lower limits of the peak voltage of the FFT determination or queries the current setting.	5-93
:GONogo:ZPARAMeter:SElect<x>;PARAMeter:MEASure?	Queries all settings related to the determination using automated measurement of waveform parameters.	5-93
:GONogo:ZPARAMeter:SElect<x>;PARAMeter:MEASure:CALCulation<x>	Sets the upper and lower limits of the calculation item of the measure determination or queries the current setting.	5-93
:GONogo:ZPARAMeter:SElect<x>;PARAMeter:MEASure:STATistics	Sets the statistical value of the measure determination or queries the current setting.	5-94
:GONogo:ZPARAMeter:SElect<x>;PARAMeter:MEASure:TRACe<x>?	Queries all settings related to the trace of the measure determination.	5-94
:GONogo:ZPARAMeter:SElect<x>;PARAMeter:MEASure:TRACe<x>;AREA<x>?	Queries all settings related to the area of the measure determination.	5-94
:GONogo:ZPARAMeter:SElect<x>;PARAMeter:MEASure:TRACe<x>;AREA<x>;TYPE?	Queries all settings related to the waveform parameters of the measure determination.	5-94

Command	Function	Page
:GONogo:ZPARAmeter:SElect<x>:PARAmeter:MEASure:TRACe<x>:AREA<x>:TYPE:<Parameter>	Sets the upper and lower limits of the waveform parameter of the measure determination or queries the current setting.	5-94
:GONogo:ZPARAmeter:SElect<x>:PARAmeter:XY<x>?	Queries all settings related to the XY determination.	5-95
:GONogo:ZPARAmeter:SElect<x>:PARAmeter:XY<x>:XYINteg	Sets the upper and lower limits integral value of the XY determination or queries the current setting.	5-95
:GONogo:ZPARAmeter:SElect<x>:RECTangle?	Queries all settings related to the rectangle determination.	5-95
:GONogo:ZPARAmeter:SElect<x>:RECTangle:HORizontal	Sets the horizontal position of the rectangle used in the rectangle determination or queries the current setting.	5-95
:GONogo:ZPARAmeter:SElect<x>:RECTangle:VERTical	Sets the vertical position of the rectangle used in the rectangle determination or queries the current setting.	5-95
:GONogo:ZPARAmeter:SElect<x>:TRACe	Sets the source trace of the zone/parameter determination or queries the current setting.	5-95
:GONogo:ZPARAmeter:SElect<x>:WAVE?	Queries all settings related to the wave determination.	5-95
:GONogo:ZPARAmeter:SElect<x>:WAVE:EDIT<x>:EXIT	Exits the zone edit menu of the wave determination.	5-96
:GONogo:ZPARAmeter:SElect<x>:WAVE:EDIT<x>:PART	Sets the editing of the portion of the zone of the wave determination.	5-96
:GONogo:ZPARAmeter:SElect<x>:WAVE:EDIT<x>:WHOLe	Sets the editing of the entire zone of the waveform zone.	5-96
:GONogo:ZPARAmeter:SElect<x>:WAVE:TRANge	Sets the determination range of the zone determination or queries the current setting.	5-96
:GONogo:ZPARAmeter:SElect<x>:WINDow	Sets the source window of the zone determination or queries the current setting.	5-96
<b>HCOPY Group</b>		
:HCOPY?	Queries all settings related to the output of screen data.	5-97
:HCOPY:ABORt	Aborts data output and paper feeding.	5-97
:HCOPY:DIRection	Sets the data output destination or queries the current setting.	5-97
:HCOPY:EXECute	Executes the data output.	5-97
:HCOPY:EXTPrinter?	Queries all settings related to the external printer output.	5-97
:HCOPY:EXTPrinter:TONE	Sets the half tone of the external printer output or queries the current setting.	5-97
:HCOPY:EXTPrinter:TYPE	Sets the type of output commands to send to the external printer or queries the current setting.	5-97
:HCOPY:FILE?	Queries all settings related to file output.	5-97
:HCOPY:FILE:FORMat	Sets the file output image format or queries the current setting.	5-97
:HCOPY:FILE:SAVE?	Queries all settings related to the saving of file output.	5-97
:HCOPY:FILE:SAVE:ANAMing	Sets the type of auto naming of save destination file names or queries the current setting.	5-98
:HCOPY:FILE:SAVE:CDIRectory	Sets the save destination directory name or queries the current setting.	5-98
:HCOPY:FILE:SAVE:NAME	Sets the save destination file name or queries the current setting.	5-98
:HCOPY:PRINter?	Queries all settings related to the built-in printer output.	5-98
:HCOPY:PRINter:HRMode	Turns ON/OFF the harmonic analysis mode of the built-in printer output or queries the current setting.	5-98
<b>HISTORY Group</b>		
:HISTory?	Queries all settings related to the history function.	5-99
:HISTory[:CURRent]?	Queries all settings related to the history function of the current waveform (CH1 to 4, M1 to 8).	5-99
:HISTory[:CURRent]:DISPlay	Sets the start number and end number of the display record of the history waveform or queries the current setting.	5-99



## 5.1 A List of Commands

Command	Function	Page
:HISTory[:CURRent]:DMODE	Sets the display mode of the history waveform or queries the current setting.	5-100
:HISTory[:CURRent]:MODE	Sets the highlight display mode of the history waveform or queries the current setting.	5-100
:HISTory[:CURRent]:RECOrd	Sets the target record of the history waveform or queries the current setting.	5-100
:HISTory[:CURRent]:RECOrd? MINimum	Queries the minimum record number of the history waveform.	5-100
:HISTory[:CURRent]:REPLay?	Queries all settings related to the replay function of the history function.	5-100
:HISTory[:CURRent]:REPLay:JUMP	Jumps the history waveform to the specified record number.	5-100
:HISTory[:CURRent]:REPLay:SPEEd	Sets the replay speed of the history waveform or queries the current setting.	5-100
:HISTory[:CURRent]:REPLay:STARt	Starts the replay of the history waveform.	5-100
:HISTory[:CURRent]:REPLay:STOP	Stops the replay of the history waveform.	5-100
:HISTory[:CURRent][:SEARCh]?	Queries all settings related to the history search function.	5-101
:HISTory[:CURRent][:SEARCh]:ABORt	Aborts the history search.	5-101
:HISTory[:CURRent][:SEARCh]:EXECute	Executes the history search.	5-101
:HISTory[:CURRent][:SEARCh]:LOGic	Sets the history search logic or queries the current setting.	5-101
:HISTory[:CURRent][:SEARCh]:RESet	Resets the search conditions of the history search.	5-101
:HISTory[:CURRent][:SEARCh]:SELEct<x>?	Queries all settings related to the history search condition.	5-101
:HISTory[:CURRent][:SEARCh]:SELEct<x>:CONDition	Sets determination criteria of the history search condition or queries the current setting.	5-101
:HISTory[:CURRent][:SEARCh]:SELEct<x>:MODE	Sets the mode of the history search condition or queries the current setting.	5-101
:HISTory[:CURRent][:SEARCh]:SELEct<x>:PARAmeter?	Queries all settings related to the parameter of the history search condition.	5-102
:HISTory[:CURRent][:SEARCh]:SELEct<x>:PARAmeter:CATegory	Sets the parameter category or queries the current setting.	5-102
:HISTory[:CURRent][:SEARCh]:SELEct<x>:PARAmeter:FFT<x>?	Queries all settings related to the FFT search.	5-102
:HISTory[:CURRent][:SEARCh]:SELEct<x>:PARAmeter:FFT<x>:CALCulation<x>	Sets the upper and lower limits of the calculation item of the FFT search or queries the current setting.	5-102
:HISTory[:CURRent][:SEARCh]:SELEct<x>:PARAmeter:FFT<x>:PEAK?	Queries all settings related to the peak value of the FFT search.	5-102
:HISTory[:CURRent][:SEARCh]:SELEct<x>:PARAmeter:FFT<x>:PEAK:DFREquency	Sets the upper and lower limits between the peak frequencies of the FFT search or queries the current setting.	5-103
:HISTory[:CURRent][:SEARCh]:SELEct<x>:PARAmeter:FFT<x>:PEAK:DV	Sets the upper and lower limits between the peak voltages of the FFT search or queries the current setting.	5-103
:HISTory[:CURRent][:SEARCh]:SELEct<x>:PARAmeter:FFT<x>:PEAK:FREquency<x>	Sets the upper and lower limits of the peak frequency of the FFT search or queries the current setting.	5-103
:HISTory[:CURRent][:SEARCh]:SELEct<x>:PARAmeter:FFT<x>:PEAK:V<x>	Sets the upper and lower limits of the peak voltage of the FFT search or queries the current setting.	5-103
:HISTory[:CURRent][:SEARCh]:SELEct<x>:PARAmeter:MEASure?	Queries all settings related to the measure search.	5-103
:HISTory[:CURRent][:SEARCh]:SELEct<x>:PARAmeter:MEASure:CALCulation<x>	Sets the upper and lower limits of the calculation item of the measure search or queries the current setting.	5-104
:HISTory[:CURRent][:SEARCh]:SELEct<x>:PARAmeter:MEASure:TRACe<x>?	Queries all settings related to the trace of the measure search.	5-104
:HISTory[:CURRent][:SEARCh]:SELEct<x>:PARAmeter:MEASure:TRACe<x>:AREA<x>?	Queries all settings related to the area of the measure search.	5-104
:HISTory[:CURRent][:SEARCh]:SELEct<x>:PARAmeter:MEASure:TRACe<x>:AREA<x>:TYPE?	Queries all settings related to the waveform parameters of the measure search.	5-104

Command	Function	Page
:HISTory[:CURRENT][:SEARCH]:SElect<x>:PARAmeter:MEASure:TRACe<x>:AREA<x>:TYPE:<Parameter>	Sets the upper and lower limits of the waveform parameter of the measure search or queries the current setting.	5-105
:HISTory[:CURRENT][:SEARCH]:SElect<x>:PARAmeter:XY<x>?	Queries all settings related to the XY search.	5-105
:HISTory[:CURRENT][:SEARCH]:SElect<x>:PARAmeter:XY<x>:XYINteg	Sets the upper and lower limits integral value of the XY search or queries the current setting.	5-105
:HISTory[:CURRENT][:SEARCH]:SElect<x>:RECTangle?	Queries all settings related to the rectangle search.	5-105
:HISTory[:CURRENT][:SEARCH]:SElect<x>:RECTangle:HORizontal	Sets the horizontal position of the rectangle used in the rectangle search or queries the current setting.	5-105
:HISTory[:CURRENT][:SEARCH]:SElect<x>:RECTangle:VERTical	Sets the vertical position of the rectangle used in the rectangle search or queries the current setting.	5-106
:HISTory[:CURRENT][:SEARCH]:SElect<x>:TRACe	Sets the source trace of the history search or queries the current setting.	5-106
:HISTory[:CURRENT][:SEARCH]:SElect<x>:WAVE?	Queries all settings related to the wave search.	5-106
:HISTory[:CURRENT][:SEARCH]:SElect<x>:WAVE:EDIT<x>:EXIT	Exits the zone edit menu of the wave search.	5-106
:HISTory[:CURRENT][:SEARCH]:SElect<x>:WAVE:EDIT<x>:PART	Sets the editing of the portion of the zone of the wave search.	5-106
:HISTory[:CURRENT][:SEARCH]:SElect<x>:WAVE:EDIT<x>:WHOLE	Sets the editing of the entire zone of the wave search.	5-106
:HISTory[:CURRENT][:SEARCH]:SElect<x>:WAVE:TRANge	Sets the range over which to perform the wave search or queries the current setting.	5-107
:HISTory[:CURRENT][:SEARCH]:SElect<x>:WINDow	Sets the source window of the history search or queries the current setting.	5-107
:HISTory[:CURRENT]:TIME?	Queries the time of the source record number of the history waveform.	5-107
:HISTory:REFerence<x>?	Queries all settings related to the history function of the reference.	5-107
:HISTory:REFerence<x>:DMODE	Sets the display mode of the history waveform of the reference or queries the current setting.	5-107
:HISTory:REFerence<x>:MODE	Sets the highlight display mode of the history waveform of the reference or queries the current setting.	5-107
:HISTory:REFerence<x>:RECORD	Sets the source record of the history waveform of the reference or queries the current setting.	5-107
:HISTory:REFerence<x>:RECORD? MINimum	Queries the minimum record number of the history waveform of the reference.	5-107
:HISTory:REFerence<x>:REPlay?	Queries all settings related to the replay function of the history function of the reference.	5-107
:HISTory:REFerence<x>:REPlay:JUMP	Jumps to the specified record number of the history waveform of the reference.	5-108
:HISTory:REFerence<x>:REPlay:SPEed	Sets the replay speed of the history waveform of the reference or queries the current setting.	5-108
:HISTory:REFerence<x>:REPlay:START	Starts the replay of the history waveform of the reference.	5-108
:HISTory:REFerence<x>:REPlay:STOP	Stops the replay of the history waveform of the reference.	5-108
:HISTory:REFerence<x>:TIME?	Queries the time of the source record number of the reference waveform.	5-108
<b>IMAGe Group</b>		
:IMAGe?	Queries all settings related to the output of screen image data.	5-109
:IMAGe:FORMat	Sets the output format of the screen image data or queries the current setting.	5-109
:IMAGe:SEND?	Queries the screen image data.	5-109
:IMAGe:TONE	Sets the tone of the screen image data or queries the current setting.	5-109

## 5.1 A List of Commands

Command	Function	Page
<b>INITialize Group</b>		
:INITialize:EXECute	Executes the initialization.	5-109
:INITialize:UNDO	Cancels the initialization that has been executed.	5-109
<b>MATH Group</b>		
:MATH<x>?	Queries all settings related to the computation.	5-110
:MATH<x>:DISPlay	Turns ON/OFF the computed waveform or queries the current setting.	5-110
:MATH<x>:ECOUNT?	Queries all settings related to the edge count computation.	5-110
:MATH<x>:ECOUNT:HYSteresis	Sets the hysteresis of the edge detection level of the edge count computation or queries the current setting.	5-110
:MATH<x>:ECOUNT:POLarity	Sets the edge detection polarity of the edge count computation or queries the current setting.	5-110
:MATH<x>:FILTer?	Queries all settings related to filters.	5-110
:MATH<x>:FILTer:DELAy?	Queries all settings related to the delay computation.	5-110
:MATH<x>:FILTer:DELAy:TIME	Sets the delay value of the delay computation or queries the current setting.	5-110
:MATH<x>:FILTer:IIR?	Queries all settings related to the IIR filter computation.	5-111
:MATH<x>:FILTer:IIR:FORDer	Sets the filter order of the IIR filter computation or queries the current setting.	5-111
:MATH<x>:FILTer:IIR:HIPass?	Queries all settings related to the IIR high pass filter computation.	5-111
:MATH<x>:FILTer:IIR:HIPass:COFF	Sets the cutoff frequency of the IIR high pass filter computation or queries the current setting.	5-111
:MATH<x>:FILTer:IIR:LOWPass?	Queries all settings related to the IIR low pass filter computation.	5-111
:MATH<x>:FILTer:IIR:LOWPass:COFF	Sets the cutoff frequency of the IIR low pass filter computation or queries the current setting.	5-111
:MATH<x>:FILTer:MAVG?	Queries all settings related to the moving average computation.	5-111
:MATH<x>:FILTer:MAVG:WEIGHT	Sets the weight of the moving average computation or queries the current setting.	5-111
:MATH<x>:FILTer:RESCaling?	Queries all settings related to the rescaling of the filter.	5-111
:MATH<x>:FILTer:RESCaling:AVAlue	Sets rescaling coefficient A of the filter or queries the current setting.	5-111
:MATH<x>:FILTer:RESCaling:BVALue	Sets rescaling offset B of the filter or queries the current setting.	5-112
:MATH<x>:FILTer:TYPE	Sets the filter type or queries the current setting.	5-112
:MATH<x>:INTegral?	Queries all settings related to the integral computation.	5-112
:MATH<x>:INTegral:PSCaling?	Queries all settings related to the pre-scaling of the integral computation.	5-112
:MATH<x>:INTegral:PSCaling:AVAlue	Sets pre-scaling coefficient A of the integral computation or queries the current setting.	5-112
:MATH<x>:INTegral:PSCaling:BVALue	Sets pre-scaling offset B of the integral computation or queries the current setting.	5-112
:MATH<x>:INTegral:RESCaling?	Queries all settings related to the rescaling of the integral computation.	5-112
:MATH<x>:INTegral:RESCaling:AVAlue	Sets rescaling coefficient A of the integral computation or queries the current setting.	5-112
:MATH<x>:INTegral:RESCaling:BVALue	Sets rescaling offset B of the integral computation or queries the current setting.	5-112
:MATH<x>:INVert	Turns ON/OFF the inverted display of the computed waveform or queries the current setting.	5-112
:MATH<x>:IPOint?	Queries all settings related to the computation reference point.	5-113
:MATH<x>:IPOint:JUMP	Moves the computation reference point to the specified position.	5-113
:MATH<x>:IPOint:POSition	Sets the computation reference point or queries the current setting.	5-113
:MATH<x>:LABel?	Queries all settings related to the label of the computed waveform.	5-113
:MATH<x>:LABel[:DEFine]	Sets the label of the computed waveform or queries the current setting.	5-113
:MATH<x>:LABel:MODE	Turns ON/OFF the label display of the computed waveform or queries the current setting.	5-113
:MATH<x>:MINus?	Queries all settings related to the subtraction.	5-113
:MATH<x>:MINus:PSCaling<x>?	Queries all settings related to the pre-scaling of the subtraction.	5-113
:MATH<x>:MINus:PSCaling<x>:AVAlue	Sets pre-scaling coefficient A of the subtraction or queries the current setting.	5-113
:MATH<x>:MINus:PSCaling<x>:BVALue	Sets pre-scaling offset B of the subtraction or queries the current setting.	5-113
:MATH<x>:MINus:RESCaling?	Queries all settings related to the rescaling of the subtraction.	5-114
:MATH<x>:MINus:RESCaling:AVAlue	Sets rescaling coefficient A of the subtraction or queries the current setting.	5-114
:MATH<x>:MINus:RESCaling:BVALue	Sets rescaling offset B of the subtraction or queries the current setting.	5-114

Command	Function	Page
:MATH<x>:MULTiple?	Queries all settings related to the multiplication.	5-114
:MATH<x>:MULTiple:PSCaling<x>?	Queries all settings related to the pre-scaling of the multiplication.	5-114
:MATH<x>:MULTiple:PSCaling<x>:AVALue	Sets pre-scaling coefficient A of the multiplication or queries the current setting.	5-114
:MATH<x>:MULTiple:PSCaling<x>:BVALue	Sets pre-scaling offset B of the multiplication or queries the current setting.	5-114
:MATH<x>:MULTiple:RESCaling?	Queries all settings related to the rescaling of the multiplication.	5-114
:MATH<x>:MULTiple:RESCaling:AVALue	Sets rescaling coefficient A of the multiplication or queries the current setting.	5-114
:MATH<x>:MULTiple:RESCaling:BVALue	Sets rescaling offset B of the multiplication or queries the current setting.	5-115
:MATH<x>:OPERation	Sets the operator or queries the current setting.	5-115
:MATH<x>:PLUS?	Queries all settings related to the addition.	5-115
:MATH<x>:PLUS:PSCaling<x>?	Queries all settings related to the pre-scaling of the addition.	5-115
:MATH<x>:PLUS:PSCaling<x>:AVALue	Sets pre-scaling coefficient A of the addition or queries the current setting.	5-115
:MATH<x>:PLUS:PSCaling<x>:BVALue	Sets pre-scaling offset B of the addition or queries the current setting.	5-115
:MATH<x>:PLUS:RESCaling?	Queries all settings related to the rescaling of the addition.	5-115
:MATH<x>:PLUS:RESCaling:AVALue	Sets rescaling coefficient A of the addition or queries the current setting.	5-115
:MATH<x>:PLUS:RESCaling:BVALue	Sets rescaling offset B of the addition or queries the current setting.	5-115
:MATH<x>:POSITION	Sets the vertical position of the computed waveform or queries the current setting.	5-116
:MATH<x>:SCALE?	Queries all settings related to scaling.	5-116
:MATH<x>:SCALE:CENTer	Sets the offset of the computed waveform or queries the current setting.	5-116
:MATH<x>:SCALE:MODE	Sets the scaling mode or queries the current setting.	5-116
:MATH<x>:SCALE:SENSitivity	Sets the vertical sensitivity of the computed waveform or queries the current setting.	5-116
:MATH<x>:SELEct	Sets the display option or queries the current setting.	5-116
:MATH<x>:SVALue	Turns ON/OFF the scale value display or queries the current setting.	5-116
:MATH<x>:THREshold<x>	Sets the edge detection level of the count computation or queries the current setting.	5-116
:MATH<x>:UNIT?	Queries all settings related to the computation unit.	5-116
:MATH<x>:UNIT[:DEFine]	Sets the computation unit or queries the current setting.	5-116
:MATH<x>:UNIT:MODE	Sets the automatic/manual addition of the computation unit or queries the current setting.	5-117
<b>MEASure Group</b>		
:MEASure?	Queries all settings related to the automated measurement of waveform parameters.	5-118
:MEASure:CALCulation?	Queries all settings related to calculation items.	5-118
:MEASure:CALCulation:ALL	Turns ON/OFF all calculation items.	5-118
:MEASure:CALCulation:COUNT<x>?	Queries the statistical processing count of the calculation item.	5-118
:MEASure:CALCulation:DEFine<x>	Sets the equation of the calculation item or queries the current setting.	5-118
:MEASure:CALCulation:{MAXimum<x> MEAN<x> MINimum<x> SDEviation<x>}?	Queries the statistical value of the calculation item.	5-118
:MEASure:CALCulation:STATe<x>	Turns ON/OFF the calculation item or queries the current setting.	5-118
:MEASure:CALCulation:VALue<x>?	Queries the automated measured value of the calculation item.	5-119
:MEASure:CONTInuous?	Queries all settings related to the continuous statistical processing.	5-119
:MEASure:CONTInuous:COUNT	Sets the continuous statistical processing count or queries the current setting.	5-119
:MEASure:CONTInuous:REStart	Restarts the continuous statistical processing.	5-119
:MEASure:CYCLE?	Queries all settings related to the cycle statistical processing.	5-119
:MEASure:CYCLE:ABORt	Aborts the execution of the cycle statistical processing.	5-119
:MEASure:CYCLE:EXECute	Executes the cycle statistical processing.	5-119
:MEASure:CYCLE:TRACe	Sets the cycle source trace of the continuous statistical processing count or queries the current setting.	5-119
:MEASure:DISPlay	Turns ON/OFF the display of the automated measurement of waveform parameters or queries the current setting.	5-119
:MEASure:HISTory:ABORt	Aborts the execution of the statistical processing of the history data.	5-119
:MEASure:HISTory:EXECute	Executes the statistical processing of the history data.	5-119

## 5.1 A List of Commands

Command	Function	Page
:MEASure:MODE	Sets the mode of the automated measurement of waveform parameters or queries the current setting.	5-119
:MEASure:THReshold?	Queries all settings related to the threshold levels of the automated measurement of waveform parameters.	5-120
:MEASure:THReshold:TRACe<x>?	Queries the threshold levels of the trace.	5-120
:MEASure:THReshold:TRACe<x>:AUTO	Sets the detection mode when the auto setting of the threshold level is enabled or queries the current setting.	5-120
:MEASure:THReshold:TRACe<x>:LHYSteresis?	Queries all settings related to the level and hysteresis of the threshold level.	5-120
:MEASure:THReshold:TRACe<x>:LHYSteresis:HYSteresis	Sets the hysteresis of the threshold level or queries the current setting.	5-120
:MEASure:THReshold:TRACe<x>:LHYSteresis:LEVel	Sets the level of the threshold level or queries the current setting.	5-121
:MEASure:THReshold:TRACe<x>:MODE	Sets the setup mode of the threshold level or queries the current setting.	5-121
:MEASure:THReshold:TRACe<x>:ULOWer?	Queries all settings related to the upper and lower limits of the threshold level.	5-121
:MEASure:THReshold:TRACe<x>:ULOWer:RANGe	Sets the upper and lower limits of the threshold level or queries the current setting.	5-121
:MEASure:TRACe<x>?	Queries all settings related to the trace.	5-121
:MEASure:TRACe<x>:AREA<x>?	Queries all settings related to the area.	5-122
:MEASure:TRACe<x>:AREA<x>:ALL	Turns ON/OFF all waveform parameters.	5-122
:MEASure:TRACe<x>:AREA<x>:<Parameter>?	Queries all settings related to the waveform parameter.	5-122
:MEASure:TRACe<x>:AREA<x>:<Parameter>:COUNT?	Queries the continuous statistical processing count of the waveform parameter.	5-122
:MEASure:TRACe<x>:AREA<x>:<Parameter>:{MAXimum MEAN MINimum SDEVIation}?	Queries the statistical value of the waveform parameter.	5-123
:MEASure:TRACe<x>:AREA<x>:<Parameter>:STATe	Turns ON/OFF the waveform parameter or queries the current setting.	5-123
:MEASure:TRACe<x>:AREA<x>:<Parameter>:VALue?	Queries the automated measured value of the waveform parameter.	5-123
:MEASure:TRACe<x>:AREA<x>:DELay:MEASure?	Queries all settings related to the measurement conditions of the source waveform of the delay measurement between channels.	5-123
:MEASure:TRACe<x>:AREA<x>:DELay:MEASure:COUNT	Sets the edge detection count of the source waveform of the delay measurement between channels or queries the current setting.	5-124
:MEASure:TRACe<x>:AREA<x>:DELay:MEASure:POLarity	Sets the polarity of the source waveform of the delay measurement between channels or queries the current setting.	5-124
:MEASure:TRACe<x>:AREA<x>:DELay:REFerence?	Queries all settings related to the reference waveform of the delay measurement between channels.	5-124
:MEASure:TRACe<x>:AREA<x>:DELay:REFerence:COUNT	Sets the edge detection count of the reference waveform of the delay measurement between channels or queries the current setting.	5-124
:MEASure:TRACe<x>:AREA<x>:DELay:REFerence:POLarity	Sets the polarity of the reference waveform of the delay measurement between channels or queries the current setting.	5-124
:MEASure:TRACe<x>:AREA<x>:DELay:REFerence:TRACe	Sets the trace of the reference waveform of the delay measurement between channels or queries the current setting.	5-124
:MEASure:TRACe<x>:AREA<x>:DELay:SOURce	Sets the reference of the delay measurement between channels or queries the current setting.	5-125

Command	Function	Page
:MEASure:TRACe<x>:AREA<x>:DPRoximal?	Queries all settings related to the distal and proximal values.	5-125
:MEASure:TRACe<x>:AREA<x>:DPRoximal:MODE	Sets the unit of the distal and proximal values or queries the current setting.	5-125
:MEASure:TRACe<x>:AREA<x>:DPRoximal:PERCent	Sets the distal and proximal values as a percentage or queries the current setting.	5-125
:MEASure:TRACe<x>:AREA<x>:DPRoximal:UNIT	Sets the distal and proximal values in the specified unit or queries the current setting.	5-125
:MEASure:TRANge<x>	Sets the measurement range or queries the current setting.	5-125
:MEASure:WAIT?	Waits for the completion of the automated measurement with a timeout option.	5-126
:MEASure:WINDow<x>	Sets the measurement source window of the area or queries the current setting.	5-126
<b>REference Group</b>		
:REference<x>?	Queries all settings related to the reference.	5-127
:REference<x>:DISPlay	Turns ON/OFF the display of the reference or queries the current setting.	5-127
:REference<x>:INVert	Sets the inverted display of the reference or queries the current setting.	5-127
:REference<x>:LABel?	Queries all settings related to the waveform label of the reference.	5-127
:REference<x>:LABel[:DEFine]	Sets the waveform label of the reference or queries the current setting.	5-127
:REference<x>:LABel:MODE	Turns ON/OFF the waveform label display of the reference or queries the current setting.	5-127
:REference<x>:LOAD	Loads the waveform to the reference.	5-127
:REference<x>:POSition	Sets the vertical position of the reference or queries the current setting.	5-127
:REference<x>:SELect	Sets the waveform (computation or reference) to the computation channel or queries the current setting.	5-127
:REference<x>:SVALue	Turns ON/OFF the scale display of the reference or queries the current setting.	5-127
<b>SEARCh Group</b>		
:SEARCh<x>?	Queries all settings related to the search function.	5-128
:SEARCh<x>:ABORT	Aborts the search.	5-128
:SEARCh<x>:CLOCK?	Queries all settings related to the clock channel.	5-128
:SEARCh<x>:CLOCK:POLarity	Sets the polarity of the clock channel or queries the current setting.	5-128
:SEARCh<x>:CLOCK:SOURce	Sets the clock trace of the search or queries the current setting.	5-128
:SEARCh<x>:DECimation	Sets the decimation detection of the skip mode or queries the current setting.	5-128
:SEARCh<x>:EXECute	Executes the search.	5-129
:SEARCh<x>:HOLDoff	Sets the hold off detection or queries the current setting.	5-129
:SEARCh<x>:LOGic	Sets the search logic or queries the current setting.	5-129
:SEARCh<x>:POLarity	Sets the search polarity or queries the current setting.	5-129
:SEARCh<x>:SELect	Sets the detection waveform number of the search function or queries the current setting.	5-129
:SEARCh<x>:SELect? MAXimum	Queries the detection count of the search function.	5-129
:SEARCh<x>:SMODE	Sets the skip mode or queries the current setting.	5-129
:SEARCh<x>:SPATtern?	Queries all settings related to the serial pattern search.	5-129
:SEARCh<x>:SPATtern:CLOCK?	Queries all settings related to clock of the serial pattern search.	5-129
:SEARCh<x>:SPATtern:CLOCK:MODE	Enables/Disables the clock of the serial pattern search or queries the current setting.	5-130
:SEARCh<x>:SPATtern:CLOCK:POLarity	Sets the polarity of the clock trace of the serial pattern search or queries the current setting.	5-130
:SEARCh<x>:SPATtern:CLOCK:SOURce	Sets the clock trace of the serial pattern search or queries the current setting.	5-130
:SEARCh<x>:SPATtern:CS	Enables/Disables the chip select of the serial pattern search or queries the current setting.	5-130
:SEARCh<x>:SPATtern:LATCh?	Queries all settings related to latch of the serial pattern search.	5-130
:SEARCh<x>:SPATtern:LATCh:POLarity	Sets the polarity of the latch trace of the serial pattern search or queries the current setting.	5-130

## 5.1 A List of Commands

Command	Function	Page
:SEARCH<x>:SPATtern:LATCh:TRACe	Sets the latch trace of the serial pattern search or queries the current setting.	5-130
:SEARCH<x>:SPATtern[:SETup]?	Queries all settings related to setup of the serial pattern search.	5-130
:SEARCH<x>:SPATtern[:SETup]:BITRate	Sets the bit rate of the serial pattern search or queries the current setting.	5-131
:SEARCH<x>:SPATtern[:SETup]:CLEar	Clears the entire pattern of the serial pattern search.	5-131
:SEARCH<x>:SPATtern[:SETup]:DATA?	Queries all settings related to data of the serial pattern search.	5-131
:SEARCH<x>:SPATtern[:SETup]:DATA:ACTive	Sets the active level of the data trace of the serial pattern search or queries the current setting.	5-131
:SEARCH<x>:SPATtern[:SETup]:DATA:TRACe	Sets the data trace of the serial pattern search or queries the current setting.	5-131
:SEARCH<x>:SPATtern[:SETup]:HEXA	Sets the pattern of the serial pattern search in hexadecimal notation.	5-131
:SEARCH<x>:SPATtern[:SETup]:PATtern	Sets the pattern of the serial pattern search in binary notation or queries the current setting.	5-131
:SEARCH<x>:SPoInt	Sets the search start position or queries the current setting.	5-131
:SEARCH<x>:STRace	Sets the search source trace or queries the current setting.	5-131
:SEARCH<x>:TRACe<x>?	Queries all settings related to the search conditions of the trace.	5-132
:SEARCH<x>:TRACe<x>:CONDition	Sets the condition to be satisfied for the trace or queries the current setting.	5-132
:SEARCH<x>:TRACe<x>:HYSTeresis	Sets the hysteresis of the trace or queries the current setting.	5-132
:SEARCH<x>:TRACe<x>:LEVel	Sets the threshold level of the trace or queries the current setting.	5-132
:SEARCH<x>:TYPE	Sets the search type or queries the current setting.	5-132
:SEARCH<x>:WIDTH?	Queries all settings related to the pulse width search.	5-132
:SEARCH<x>:WIDTH:MODE	Sets the pulse width determination mode or queries the current setting.	5-132
:SEARCH<x>:WIDTH:TIME<x>	Sets the pulse width of the pulse width search or queries the current setting.	5-132
:SEARCH<x>:WIDTH:TYPE	Sets the pulse width search type or queries the current setting.	5-132
<b>SNAP Group</b>		
:SNAP	Executes the snapshot.	5-133
<b>SStart Group</b>		
:SStart?	Executes the single start of the trigger mode.	5-133
<b>StARt Group</b>		
:StARt	Starts waveform acquisition.	5-133
<b>StATus Group</b>		
:StATus?	Queries all settings related to the communication status function.	5-134
:StATus:CONDition?	Queries the contents of the condition register.	5-134
:StATus:EESE	Sets the extended event enable register or queries the current setting.	5-134
:StATus:EESR?	Queries the content of the extended event register and clears the register.	5-134
:StATus:ERRor?	Queries the code and message of the error that occurred.	5-134
:StATus:FILTer<x>	Sets the transition filter or queries the current setting.	5-134
:StATus:QENable	Sets whether to store messages other than errors to the error queue or queries the current setting.	5-134
:StATus:QMESsage	Sets whether to attach a message description to the response to the :StATus:ERRor? query or queries the current setting.	5-134
:StATus:SPOLL?	Executes serial polling.	5-134
<b>StOP Group</b>		
:StOP	Stops waveform acquisition.	5-135
<b>SYStem Group</b>		
:SYStem?	Queries all settings related to the system.	5-136
:SYStem:BATTeRy?	Queries the condition of the internal lithium battery.	5-136
:SYStem:CLICk	Turns ON/OFF the click sound or queries the current setting.	5-136
:SYStem:CLoCk?	Queries all settings related to the date, time, and time difference with respect to GMT.	5-136

Command	Function	Page
:SYSTem:CLOCK:DTIME	Sets the date, time, and time difference with respect to GMT or queries the current setting.	5-136
:SYSTem:CLOCK:MODE	Turns ON/OFF the date, time, and time difference with respect to GMT or queries the current setting.	5-136
:SYSTem:FORMat:IMEMory[:EXECute]	Formats the internal memory.	5-136
:SYSTem:FORMat:IHDD[:EXECute]	Formats the internal hard disk.	5-136
:SYSTem:FORMat:SDElete[:EXECute]	Clears and formats the internal memory.	5-136
:SYSTem:LANGuage	Sets the message language or queries the current setting.	5-136
:SYSTem:MLANGuage	Sets the menu language or queries the current setting.	5-136
:SYSTem:OVERview	Displays system information.	5-136
<b>TELecomtest Group</b>		
:TELecomtest?	Queries all settings related to the telecom test.	5-137
:TELecomtest:CATegory	Sets the telecom test type or queries the current setting.	5-137
:TELecomtest:DISPlay	Turns ON/OFF the telecom test display or queries the current setting.	5-137
:TELecomtest:EYEPattern?	Queries all settings related to the eye pattern.	5-137
:TELecomtest:EYEPattern:ALL	Turns ON/OFF all eye pattern parameters.	5-137
:TELecomtest:EYEPattern:<Parameter>?	Queries all settings related to the waveform parameter of the eye pattern.	5-137
:TELecomtest:EYEPattern:<Parameter>:STATe	Turns ON/OFF the waveform parameter of the eye pattern or queries the current setting.	5-138
:TELecomtest:EYEPattern:<Parameter>:VALue?	Queries the waveform parameter value of the eye pattern.	5-138
:TELecomtest:EYEPattern:TLEVels?	Queries all settings related to the threshold level of the eye pattern.	5-138
:TELecomtest:EYEPattern:TLEVels:MODE	Sets the unit of the threshold level of the eye pattern or queries the current setting.	5-138
:TELecomtest:EYEPattern:TLEVels:PERCent	Sets the threshold level of the eye pattern as a percentage or queries the current setting.	5-138
:TELecomtest:EYEPattern:TLEVels:UNIT	Sets the threshold level of the eye pattern in UNIT or queries the current setting.	5-138
:TELecomtest:EYEPattern:VDARK	Sets the dark level (zero light level) or queries the current setting.	5-139
:TELecomtest:MASK?	Queries all settings related to the mask test.	5-139
:TELecomtest:MASK:ELEMent<x>?	Queries all settings related to the element used in the mask test.	5-139
:TELecomtest:MASK:ELEMent<x>:ALL	Turns ON/OFF all items of the element.	5-139
:TELecomtest:MASK:ELEMent<x>:PSPCount?	Queries the settings related to the error rate for the number of sampled data points of the element.	5-139
:TELecomtest:MASK:ELEMent<x>:PSPCount:STATe	Turns ON/OFF the measurement of the error rate for the number of sampled data points of the element or queries the current setting.	5-139
:TELecomtest:MASK:ELEMent<x>:PSPCount:VALue?	Queries the error rate for the number of sampled data points of the element.	5-139
:TELecomtest:MASK:ELEMent<x>:PWCount?	Queries the settings related to the error rate for the acquisition count of the element.	5-139
:TELecomtest:MASK:ELEMent<x>:PWCount:STATe	Turns ON/OFF the measurement of the error rate for the acquisition count of the element or queries the current setting.	5-140
:TELecomtest:MASK:ELEMent<x>:PWCount:VALue?	Queries the error rate for the acquisition count of the element.	5-140



## 5.1 A List of Commands

Command	Function	Page
:TELEcomtest:MASK:ELEMent<x>:SPCount?	Queries the settings related to the number of sampled data points for the element that results in error.	5-140
:TELEcomtest:MASK:ELEMent<x>:SPCount:STATe	Turns ON/OFF the measurement of the number of sampled data points for the element that results in error or queries the current setting.	5-140
:TELEcomtest:MASK:ELEMent<x>:SPCount:VALue?	Queries the number of sampled data points for the element that resulted in error.	5-140
:TELEcomtest:MASK:ELEMent<x>:WCCount?	Queries the settings related to the acquisition count for the element that results in error.	5-140
:TELEcomtest:MASK:ELEMent<x>:WCCount:STATe	Turns ON/OFF the measurement of the acquisition count for the element that results in error or queries the current setting.	5-140
:TELEcomtest:MASK:ELEMent<x>:WCCount:VALue?	Queries the acquisition count for the element that resulted in error.	5-140
:TELEcomtest:MMODE	Turns ON/OFF the mask display or queries the current setting.	5-141
:TELEcomtest:TRACe	Sets the source trace of the telecom test or queries the current setting.	5-141
:TELEcomtest:TRANge	Sets the measurement range of the telecom test or queries the current setting.	5-141
:TELEcomtest:WINDow	Sets the measurement source window of the telecom test or queries the current setting.	5-141
<b>TIMEbase Group</b>		
:TIMEbase?	Queries all settings related to the time base.	5-142
:TIMEbase:SRATe?	Queries the sample rate.	5-142
:TIMEbase:TDIV	Sets the T/div value or queries the current setting.	5-142
<b>TRIGger Group</b>		
:TRIGger?	Queries all settings related to the trigger.	5-143
:TRIGger:ACTion?	Queries all settings related to the action-on-trigger.	5-143
:TRIGger:ACTion:ACQCount	Sets the action count of action-on-trigger or queries the current setting.	5-143
:TRIGger:ACTion:BUZZer	Sets whether to sound a buzzer when an action is activated or queries the current setting.	5-143
:TRIGger:ACTion:HCOPY	Sets whether to output screen image data (ON/OFF) when an action is activated or queries the current setting.	5-143
:TRIGger:ACTion:MODE	Sets the action-on-trigger mode or queries the current setting.	5-143
:TRIGger:ACTion:SAVE	Sets whether to save the waveform data to the storage medium (ON/OFF) when an action is activated or queries the current setting.	5-144
:TRIGger:ACTion:STARt	Starts the action-on-trigger.	5-144
:TRIGger:ACTion:STOP	Stops the action-on-trigger.	5-144
:TRIGger:CLOCK?	Queries all settings related to the clock channel.	5-144
:TRIGger:CLOCK:POLarity	Sets the polarity of the clock channel or queries the current setting.	5-144
:TRIGger:CLOCK:SOURce	Sets the source waveform of the clock channel or queries the current setting.	5-144
:TRIGger:DELAy?	Queries all settings related to the trigger delay.	5-144
:TRIGger:DELAy:EDGecount?	Queries all settings related to edge count of the trigger delay.	5-144
:TRIGger:DELAy:EDGecount:COUNT	Sets the edge count value of the trigger delay or queries the current setting.	5-144
:TRIGger:DELAy:MODE	Turns ON/OFF the trigger delay or queries the current setting.	5-144
:TRIGger:DELAy:POLarity	Sets the edge polarity the trigger delay or queries the current setting.	5-144
:TRIGger:DELAy:SOURce	Sets the edge source the trigger delay or queries the current setting.	5-145
:TRIGger:DELAy:TIME	Sets the delay value the trigger delay or queries the current setting.	5-145
:TRIGger:DELAy:TYPE	Sets the trigger delay type or queries the current setting.	5-145
:TRIGger:EINTerval?	Queries all settings related to the event interval.	5-145
:TRIGger:EINTerval:EVENT<x>?	Queries all settings related to the event.	5-146
:TRIGger:EINTerval:EVENT<x>:CLOCK?	Queries all settings related to the clock channel of the event.	5-146
:TRIGger:EINTerval:EVENT<x>:CLOCK:POLarity	Sets the polarity of the clock channel of the event or queries the current setting.	5-146

Command	Function	Page
:TRIGger:EINterval:EVENT<x>:CLOCK:SOURce	Sets the source waveform of the clock channel of the event or queries the current setting.	5-146
:TRIGger:EINterval:EVENT<x>:ESTate?	Queries all settings related to the edge/state trigger.	5-146
:TRIGger:EINterval:EVENT<x>:ESTate:POLarity	Sets the polarity of the edge/state trigger or queries the current setting.	5-147
:TRIGger:EINterval:EVENT<x>:ESTate:SOURce	Sets the trigger source of the edge/state trigger or queries the current setting.	5-147
:TRIGger:EINterval:EVENT<x>:I2CBus?	Queries all settings related to the I <sup>2</sup> C bus trigger of the event.	5-147
:TRIGger:EINterval:EVENT<x>:I2CBus:ADATa?	Queries all settings related to the address of the I <sup>2</sup> C bus trigger.	5-147
:TRIGger:EINterval:EVENT<x>:I2CBus:ADATa:BIT10address?	Queries all settings related to the 10-bit address of the I <sup>2</sup> C bus trigger.	5-148
:TRIGger:EINterval:EVENT<x>:I2CBus:ADATa:BIT10address:HEXA	Sets the 10-bit address of the I <sup>2</sup> C bus trigger in hexadecimal notation.	5-148
:TRIGger:EINterval:EVENT<x>:I2CBus:ADATa:BIT10address:PATtern	Sets the 10-bit address of the I <sup>2</sup> C bus trigger in binary notation or queries the current setting.	5-148
:TRIGger:EINterval:EVENT<x>:I2CBus:ADATa:BIT7Address?	Queries all settings related to the 7-bit address of the I <sup>2</sup> C bus trigger.	5-148
:TRIGger:EINterval:EVENT<x>:I2CBus:ADATa:BIT7Address:HEXA	Sets the 7-bit address of the I <sup>2</sup> C bus trigger in hexadecimal notation.	5-148
:TRIGger:EINterval:EVENT<x>:I2CBus:ADATa:BIT7Address:PATtern	Sets the 7-bit address of the I <sup>2</sup> C bus trigger in binary notation or queries the current setting.	5-148
:TRIGger:EINterval:EVENT<x>:I2CBus:ADATa:BIT7APsub?	Queries all settings related to the 7-bit + Sub address of the I <sup>2</sup> C bus trigger.	5-148
:TRIGger:EINterval:EVENT<x>:I2CBus:ADATa:BIT7APsub:ADDDress?	Queries all settings related to the 7-bit address of the 7-bit + Sub address of the I <sup>2</sup> C bus trigger.	5-149
:TRIGger:EINterval:EVENT<x>:I2CBus:ADATa:BIT7APsub:ADDDress:HEXA	Sets the 7-bit address of the 7-bit + Sub address of the I <sup>2</sup> C bus trigger in hexadecimal notation.	5-149
:TRIGger:EINterval:EVENT<x>:I2CBus:ADATa:BIT7APsub:ADDDress:PATtern	Sets the 7-bit address of the 7-bit + Sub address of the I <sup>2</sup> C bus trigger in binary notation or queries the current setting.	5-149
:TRIGger:EINterval:EVENT<x>:I2CBus:ADATa:BIT7APsub:SADDDress?	Queries all settings related to the Sub address of the 7-bit + Sub address of the I <sup>2</sup> C bus trigger.	5-149
:TRIGger:EINterval:EVENT<x>:I2CBus:ADATa:BIT7APsub:SADDDress:HEXA	Sets the Sub address of the 7-bit + Sub address of the I <sup>2</sup> C bus trigger in hexadecimal notation.	5-149
:TRIGger:EINterval:EVENT<x>:I2CBus:ADATa:BIT7APsub:SADDDress:PATtern	Sets the Sub address of the 7-bit + Sub address of the I <sup>2</sup> C bus trigger in binary notation or queries the current setting.	5-149
:TRIGger:EINterval:EVENT<x>:I2CBus:ADATa:TYPE	Sets the address type of the I <sup>2</sup> C bus trigger or queries the current setting.	5-149
:TRIGger:EINterval:EVENT<x>:I2CBus:CLOCK?	Queries all settings related to the clock of the I <sup>2</sup> C bus trigger.	5-150
:TRIGger:EINterval:EVENT<x>:I2CBus:CLOCK:SOURce	Sets the clock trace of the I <sup>2</sup> C bus trigger or queries the current setting.	5-150
:TRIGger:EINterval:EVENT<x>:I2CBus:DATA?	Queries all settings related to the data of the I <sup>2</sup> C bus trigger.	5-150
:TRIGger:EINterval:EVENT<x>:I2CBus:DATA:BYTE	Sets the number of data bytes of the I <sup>2</sup> C bus trigger or queries the current setting.	5-150

## 5.1 A List of Commands

Command	Function	Page
:TRIGger:EINTerval:EVENT<x>:I2CBus:DATA:CONDition	Sets the determination method (match or not match) of the data of the I <sup>2</sup> C bus trigger or queries the current setting.	5-150
:TRIGger:EINTerval:EVENT<x>:I2CBus:DATA:DPOsition	Sets the position for comparing the data pattern of the I <sup>2</sup> C bus trigger or queries the current setting.	5-150
:TRIGger:EINTerval:EVENT<x>:I2CBus:DATA:HEXA<x>	Sets the data of the I <sup>2</sup> C bus trigger in hexadecimal notation.	5-151
:TRIGger:EINTerval:EVENT<x>:I2CBus:DATA:MODE	Enables/Disables the data conditions of the I <sup>2</sup> C bus trigger or queries the current setting.	5-151
:TRIGger:EINTerval:EVENT<x>:I2CBus:DATA:PATtern<x>	Sets the data of the I <sup>2</sup> C bus trigger in binary notation or queries the current setting.	5-151
:TRIGger:EINTerval:EVENT<x>:I2CBus:DATA:PMODE	Sets the pattern comparison start position mode of the data of the I <sup>2</sup> C bus trigger or queries the current setting.	5-151
:TRIGger:EINTerval:EVENT<x>:I2CBus:DATA:SOURce	Sets the data trace of the I <sup>2</sup> C bus trigger or queries the current setting.	5-151
:TRIGger:EINTerval:EVENT<x>:I2CBus:GCALl?	Queries all settings related to the general call of the I <sup>2</sup> C bus trigger.	5-151
:TRIGger:EINTerval:EVENT<x>:I2CBus:GCALl:BIT7maddress?	Queries all settings related to the 7-bit master address of the general call of the I <sup>2</sup> C bus trigger.	5-152
:TRIGger:EINTerval:EVENT<x>:I2CBus:GCALl:BIT7maddress:HEXA	Sets the 7-bit master address of the general call of the I <sup>2</sup> C bus trigger in hexadecimal notation.	5-152
:TRIGger:EINTerval:EVENT<x>:I2CBus:GCALl:BIT7maddress:PATtern	Sets the 7-bit master address of the general call of the I <sup>2</sup> C bus trigger in binary notation or queries the current setting.	5-152
:TRIGger:EINTerval:EVENT<x>:I2CBus:GCALl:SBYTE	Sets the second byte type of the general call of the I <sup>2</sup> C bus trigger or queries the current setting.	5-152
:TRIGger:EINTerval:EVENT<x>:I2CBus:MODE	Sets the trigger mode of the I <sup>2</sup> C bus trigger or queries the current setting.	5-152
:TRIGger:EINTerval:EVENT<x>:I2CBus:NAIGNore?	Queries all settings related to the NON ACK ignore mode of the I <sup>2</sup> C bus trigger.	5-152
:TRIGger:EINTerval:EVENT<x>:I2CBus:NAIGNore:HSMODE	Sets whether to ignore NON ACK in high speed mode of the I <sup>2</sup> C bus trigger or queries the current setting.	5-153
:TRIGger:EINTerval:EVENT<x>:I2CBus:NAIGNore:RACcEss	Sets whether to ignore NON ACK in read access mode of the I <sup>2</sup> C bus trigger or queries the current setting.	5-153
:TRIGger:EINTerval:EVENT<x>:I2CBus:NAIGNore:SBYTE	Sets whether to ignore NON ACK in the start byte of the I <sup>2</sup> C bus trigger or queries the current setting.	5-153
:TRIGger:EINTerval:EVENT<x>:I2CBus:SBHSmode?	Queries all settings related to the start byte and high speed mode of the I <sup>2</sup> C bus trigger.	5-153
:TRIGger:EINTerval:EVENT<x>:I2CBus:SBHSmode:TYPE	Sets the type of the start byte or high speed mode of the I <sup>2</sup> C bus trigger or queries the current setting.	5-153
:TRIGger:EINTerval:EVENT<x>:SPATtern?	Queries all settings related to the serial pattern trigger of the event.	5-153
:TRIGger:EINTerval:EVENT<x>:SPATtern:BITRate	Sets the bit rate of the serial pattern trigger or queries the current setting.	5-154

Command	Function	Page
:TRIGger:EINterval:EVENT<x>:SPATtern:CLEAr	Clears the entire pattern of the serial pattern trigger.	5-154
:TRIGger:EINterval:EVENT<x>:SPATtern:CLOCK?	Queries all settings related to clock of the serial pattern trigger.	5-154
:TRIGger:EINterval:EVENT<x>:SPATtern:CLOCK:MODE	Enables/Disables the clock of the serial pattern trigger or queries the current setting.	5-154
:TRIGger:EINterval:EVENT<x>:SPATtern:CLOCK:POLarity	Sets the polarity of the clock trace of the serial pattern trigger or queries the current setting.	5-154
:TRIGger:EINterval:EVENT<x>:SPATtern:CLOCK:SOURce	Sets the clock trace of the serial pattern trigger or queries the current setting.	5-154
:TRIGger:EINterval:EVENT<x>:SPATtern:CS	Enables/Disables the chip select of the serial pattern trigger or queries the current setting.	5-154
:TRIGger:EINterval:EVENT<x>:SPATtern:DATA?	Queries all settings related to data of the serial pattern trigger.	5-155
:TRIGger:EINterval:EVENT<x>:SPATtern:DATA:ACTive	Sets the active level of the data of the serial pattern trigger or queries the current setting.	5-155
:TRIGger:EINterval:EVENT<x>:SPATtern:DATA:SOURce	Sets the data trace of the serial pattern trigger or queries the current setting.	5-155
:TRIGger:EINterval:EVENT<x>:SPATtern:HEXA	Sets the pattern of the serial pattern trigger in hexadecimal notation.	5-155
:TRIGger:EINterval:EVENT<x>:SPATtern:LATCh?	Queries all settings related to latch of the serial pattern trigger.	5-155
:TRIGger:EINterval:EVENT<x>:SPATtern:LATCh:POLarity	Sets the polarity of the latch trace of the serial pattern trigger or queries the current setting.	5-155
:TRIGger:EINterval:EVENT<x>:SPATtern:LATCh:SOURce	Sets the latch trace of the serial pattern trigger or queries the current setting.	5-155
:TRIGger:EINterval:EVENT<x>:SPATtern:PATtern	Sets the pattern of the serial pattern trigger in binary notation or queries the current setting.	5-156
:TRIGger:EINterval:EVENT<x>:SPIBus?	Queries all settings related to the SPI bus trigger of the event.	5-156
:TRIGger:EINterval:EVENT<x>:SPIBus:BITorder	Sets the bit order of the SPI bus trigger or queries the current setting.	5-156
:TRIGger:EINterval:EVENT<x>:SPIBus:CLOCK?	Queries all settings related to the clock of the SPI bus trigger.	5-156
:TRIGger:EINterval:EVENT<x>:SPIBus:CLOCK:POLarity	Sets the polarity of the clock trace of the SPI bus trigger or queries the current setting.	5-156
:TRIGger:EINterval:EVENT<x>:SPIBus:CLOCK:SOURce	Sets the clock trace of the SPI bus trigger or queries the current setting.	5-156
:TRIGger:EINterval:EVENT<x>:SPIBus:CS?	Queries all settings related to the chip select of the SPI bus trigger.	5-156
:TRIGger:EINterval:EVENT<x>:SPIBus:CS:ACTive	Sets the active level of the chip select of the SPI bus trigger or queries the current setting.	5-157
:TRIGger:EINterval:EVENT<x>:SPIBus:CS:SOURce	Sets the chip select trace of the SPI bus trigger or queries the current setting.	5-157
:TRIGger:EINterval:EVENT<x>:SPIBus:DATA<x>?	Queries all settings related to the data of the SPI bus trigger.	5-157
:TRIGger:EINterval:EVENT<x>:SPIBus:DATA<x>:BYTE	Sets the number of bytes of the data of the SPI bus trigger or queries the current setting.	5-157

## 5.1 A List of Commands

Command	Function	Page
:TRIGger:EINterval:EVENT<x>:SPIBus:DATA<x>:CONDition	Sets the determination method (match or not match) of the data of the SPI bus trigger or queries the current setting.	5-157
:TRIGger:EINterval:EVENT<x>:SPIBus:DATA<x>:DPOSition	Sets the pattern comparison start position of the data of the SPI bus trigger or queries the current setting.	5-157
:TRIGger:EINterval:EVENT<x>:SPIBus:DATA<x>:HEXA<x>	Sets the data of the SPI bus trigger in hexadecimal notation.	5-158
:TRIGger:EINterval:EVENT<x>:SPIBus:DATA<x>:PATtern<x>	Sets the data of the SPI bus trigger in binary notation or queries the current setting.	5-158
:TRIGger:EINterval:EVENT<x>:SPIBus:DATA<x>:SOURce	Sets the trace of the data of the SPI bus trigger or queries the current setting.	5-158
:TRIGger:EINterval:EVENT<x>:SPIBus:MODE	Sets the wiring system of the SPI bus trigger (three-wire or four-wire) or queries the current setting.	5-158
:TRIGger:EINterval:EVENT<x>:STATE?	Queries all settings related to the state trigger of the event.	5-158
:TRIGger:EINterval:EVENT<x>:STATE:CHANnel<x>	Sets the condition to be satisfied of the channel or queries the current setting.	5-158
:TRIGger:EINterval:EVENT<x>:STATE:LOGic	Sets the logic of the condition to be satisfied or queries the current setting.	5-159
:TRIGger:EINterval:EVENT<x>:TYPE	Sets the trigger type of the event or queries the current setting.	5-159
:TRIGger:EINterval:EVENT<x>:WIDTH?	Queries all settings related to the pulse width trigger of the event.	5-159
:TRIGger:EINterval:EVENT<x>:WIDTH:MODE	Sets the determination mode of the pulse width trigger or queries the current setting.	5-159
:TRIGger:EINterval:EVENT<x>:WIDTH:POLarity	Sets the polarity of the pulse width trigger or queries the current setting.	5-159
:TRIGger:EINterval:EVENT<x>:WIDTH:SOURce	Sets the trigger source of the pulse width trigger or queries the current setting.	5-160
:TRIGger:EINterval:EVENT<x>:WIDTH:TIME<x>	Sets the pulse width of the pulse width trigger or queries the current setting.	5-160
:TRIGger:EINterval:MODE	Sets the determination mode of the event interval or queries the current setting.	5-160
:TRIGger:EINterval:TIME<x>	Sets the interval time of the event interval or queries the current setting.	5-160
:TRIGger:EINterval:TRY?	Queries all settings related to the event interval trial.	5-160
:TRIGger:EINterval:TRY:MODE	Sets the trial mode or queries the current setting.	5-160
:TRIGger:EINterval:TRY:SElect	Sets the source event of the trial mode or queries the current setting.	5-160
:TRIGger:ENHanced?	Queries all settings related to the enhanced trigger.	5-161
:TRIGger:ENHanced:I2Cbus?	Queries all settings related to the I <sup>2</sup> C bus trigger.	5-161
:TRIGger:ENHanced:I2Cbus:ADATa?	Queries all settings related to the address of the I <sup>2</sup> C bus trigger.	5-161
:TRIGger:ENHanced:I2Cbus:ADATa:BIT10address?	Queries all settings related to the 10-bit address of the I <sup>2</sup> C bus trigger.	5-161
:TRIGger:ENHanced:I2Cbus:ADATa:BIT10address:HEXA	Sets the 10-bit address of the I <sup>2</sup> C bus trigger in hexadecimal notation.	5-162
:TRIGger:ENHanced:I2Cbus:ADATa:BIT10address:PATtern	Sets the 10-bit address of the I <sup>2</sup> C bus trigger in binary notation or queries the current setting.	5-162
:TRIGger:ENHanced:I2Cbus:ADATa:BIT7Address?	Queries all settings related to the 7-bit address of the I <sup>2</sup> C bus trigger.	5-162
:TRIGger:ENHanced:I2Cbus:ADATa:BIT7Address:HEXA	Sets the 7-bit address of the I <sup>2</sup> C bus trigger in hexadecimal notation.	5-162
:TRIGger:ENHanced:I2Cbus:ADATa:BIT7Address:PATtern	Sets the 7-bit address of the I <sup>2</sup> C bus trigger in binary notation or queries the current setting.	5-162
:TRIGger:ENHanced:I2Cbus:ADATa:BIT7APsub?	Queries all settings related to the 7-bit + Sub address of the I <sup>2</sup> C bus trigger.	5-162

Command	Function	Page
:TRIGger:ENHanced:I2CBus:ADATa:BIT7APsub:ADDRESS?	Queries all settings related to the 7-bit address of the 7-bit + Sub address of the I <sup>2</sup> C bus trigger.	5-162
:TRIGger:ENHanced:I2CBus:ADATa:BIT7APsub:ADDRESS:HEXA	Sets the 7-bit address of the 7-bit + Sub address of the I <sup>2</sup> C bus trigger in hexadecimal notation.	5-162
:TRIGger:ENHanced:I2CBus:ADATa:BIT7APsub:ADDRESS:PATtern	Sets the 7-bit address of the 7-bit + Sub address of the I <sup>2</sup> C bus trigger in binary notation or queries the current setting.	5-163
:TRIGger:ENHanced:I2CBus:ADATa:BIT7APsub:SADDRESS?	Queries all settings related to the Sub address of the 7-bit + Sub address of the I <sup>2</sup> C bus trigger.	5-163
:TRIGger:ENHanced:I2CBus:ADATa:BIT7APsub:SADDRESS:HEXA	Sets the Sub address of the 7-bit + Sub address of the I <sup>2</sup> C bus trigger in hexadecimal notation.	5-163
:TRIGger:ENHanced:I2CBus:ADATa:BIT7APsub:SADDRESS:PATtern	Sets the Sub address of the 7-bit + Sub address of the I <sup>2</sup> C bus trigger in binary notation or queries the current setting.	5-163
:TRIGger:ENHanced:I2CBus:ADATa:TYPE	Sets the address type of the I <sup>2</sup> C bus trigger or queries the current setting.	5-163
:TRIGger:ENHanced:I2CBus:CLOCK?	Queries all settings related to the clock of the I <sup>2</sup> C bus trigger.	5-163
:TRIGger:ENHanced:I2CBus:CLOCK:SOURce	Sets the clock trace of the I <sup>2</sup> C bus trigger or queries the current setting.	5-163
:TRIGger:ENHanced:I2CBus:DATA?	Queries all settings related to the data of the I <sup>2</sup> C bus trigger.	5-163
:TRIGger:ENHanced:I2CBus:DATA:BYTE	Sets the number of data bytes of the I <sup>2</sup> C bus trigger or queries the current setting.	5-164
:TRIGger:ENHanced:I2CBus:DATA:CONDition	Sets the determination method (match or not match) of the data of the I <sup>2</sup> C bus trigger or queries the current setting.	5-164
:TRIGger:ENHanced:I2CBus:DATA:DPOSITion	Sets the position for comparing the data pattern of the I <sup>2</sup> C bus trigger or queries the current setting.	5-164
:TRIGger:ENHanced:I2CBus:DATA:HEXA<x>	Sets the data of the I <sup>2</sup> C bus trigger in hexadecimal notation.	5-164
:TRIGger:ENHanced:I2CBus:DATA:MODE	Enables/Disables the data conditions of the I <sup>2</sup> C bus trigger or queries the current setting.	5-164
:TRIGger:ENHanced:I2CBus:DATA:PATtern<x>	Sets the data of the I <sup>2</sup> C bus trigger in binary notation or queries the current setting.	5-164
:TRIGger:ENHanced:I2CBus:DATA:PMODE	Sets the pattern comparison start position mode of the data of the I <sup>2</sup> C bus trigger or queries the current setting.	5-164
:TRIGger:ENHanced:I2CBus:DATA:SOURce	Sets the data trace of the I <sup>2</sup> C bus trigger or queries the current setting.	5-164
:TRIGger:ENHanced:I2CBus:GCALL?	Queries all settings related to the general call of the I <sup>2</sup> C bus trigger.	5-165
:TRIGger:ENHanced:I2CBus:GCALL:BIT7maddress?	Queries all settings related to the 7-bit master address of the general call of the I <sup>2</sup> C bus trigger.	5-165
:TRIGger:ENHanced:I2CBus:GCALL:BIT7maddress:HEXA	Sets the 7-bit master address of the general call of the I <sup>2</sup> C bus trigger in hexadecimal notation.	5-165
:TRIGger:ENHanced:I2CBus:GCALL:BIT7maddress:PATtern	Sets the 7-bit master address of the general call of the I <sup>2</sup> C bus trigger in binary notation or queries the current setting.	5-165
:TRIGger:ENHanced:I2CBus:GCALL:SBYTE	Sets the second byte type of the general call of the I <sup>2</sup> C bus trigger or queries the current setting.	5-165

## 5.1 A List of Commands

Command	Function	Page
:TRIGger:ENHanced:I2CBus:MODE	Sets the trigger mode of the I <sup>2</sup> C bus trigger or queries the current setting.	5-165
:TRIGger:ENHanced:I2CBus:NAIGnore?	Queries all settings related to the NON ACK ignore mode of the I <sup>2</sup> C bus trigger.	5-165
:TRIGger:ENHanced:I2CBus:NAIGnore:HSMoDe	Sets whether to ignore NON ACK in high speed mode of the I <sup>2</sup> C bus trigger or queries the current setting.	5-165
:TRIGger:ENHanced:I2CBus:NAIGnore:RACcEss	Sets whether to ignore NON ACK in read access mode of the I <sup>2</sup> C bus trigger or queries the current setting.	5-166
:TRIGger:ENHanced:I2CBus:NAIGnore:SBYTe	Sets whether to ignore NON ACK in the start byte of the I <sup>2</sup> C bus trigger or queries the current setting.	5-166
:TRIGger:ENHanced:I2CBus:SBHSmode?	Queries all settings related to the start byte and high speed mode of the I <sup>2</sup> C bus trigger.	5-166
:TRIGger:ENHanced:I2CBus:SBHSmode:TYPE	Sets the type of the start byte or high speed mode of the I <sup>2</sup> C bus trigger or queries the current setting.	5-166
:TRIGger:ENHanced:SPATtern?	Queries all settings related to the serial pattern trigger.	5-166
:TRIGger:ENHanced:SPATtern:BITRate	Sets the bit rate of the serial pattern trigger or queries the current setting.	5-166
:TRIGger:ENHanced:SPATtern:CLEAr	Clears the entire pattern of the serial pattern trigger.	5-166
:TRIGger:ENHanced:SPATtern:CLOCK?	Queries all settings related to clock of the serial pattern trigger.	5-166
:TRIGger:ENHanced:SPATtern:CLOCK:MODE	Enables/Disables the clock of the serial pattern trigger or queries the current setting.	5-166
:TRIGger:ENHanced:SPATtern:CLOCK:POLarity	Sets the polarity of the clock trace of the serial pattern trigger or queries the current setting.	5-167
:TRIGger:ENHanced:SPATtern:CLOCK:SOURce	Sets the clock trace of the serial pattern trigger or queries the current setting.	5-167
:TRIGger:ENHanced:SPATtern:CS	Enables/Disables the chip select of the serial pattern trigger or queries the current setting.	5-167
:TRIGger:ENHanced:SPATtern:DATA?	Queries all settings related to data of the serial pattern trigger.	5-167
:TRIGger:ENHanced:SPATtern:DATA:ACTive	Sets the active level of the data of the serial pattern trigger or queries the current setting.	5-167
:TRIGger:ENHanced:SPATtern:DATA:SOURce	Sets the data trace of the serial pattern trigger or queries the current setting.	5-167
:TRIGger:ENHanced:SPATtern:HEXA	Sets the pattern of the serial pattern trigger in hexadecimal notation.	5-167
:TRIGger:ENHanced:SPATtern:LATCh?	Queries all settings related to latch of the serial pattern trigger.	5-167
:TRIGger:ENHanced:SPATtern:LATCh:POLarity	Sets the polarity of the latch trace of the serial pattern trigger or queries the current setting.	5-168
:TRIGger:ENHanced:SPATtern:LATCh:SOURce	Sets the latch trace of the serial pattern trigger or queries the current setting.	5-168
:TRIGger:ENHanced:SPATtern:PATtern	Sets the pattern of the serial pattern trigger in binary notation or queries the current setting.	5-168
:TRIGger:ENHanced:SPIBus?	Queries all settings related to the SPI bus trigger.	5-168
:TRIGger:ENHanced:SPIBus:BITorder	Sets the bit order of the SPI bus trigger or queries the current setting.	5-168
:TRIGger:ENHanced:SPIBus:CLOCK?	Queries all settings related to the clock of the SPI bus trigger.	5-168
:TRIGger:ENHanced:SPIBus:CLOCK:POLarity	Sets the polarity of the clock trace of the SPI bus trigger or queries the current setting.	5-168
:TRIGger:ENHanced:SPIBus:CLOCK:SOURce	Sets the clock trace of the SPI bus trigger or queries the current setting.	5-169
:TRIGger:ENHanced:SPIBus:CS?	Queries all settings related to the chip select of the SPI bus trigger.	5-169
:TRIGger:ENHanced:SPIBus:CS:ACTive	Sets the active level of the chip select of the SPI bus trigger or queries the current setting.	5-169

Command	Function	Page
:TRIGger:ENHanced:SPIBus:CS:SOURce	Sets the chip select trace of the SPI bus trigger or queries the current setting.	5-169
:TRIGger:ENHanced:SPIBus:DATA<x>?	Queries all settings related to the data of the SPI bus trigger.	5-169
:TRIGger:ENHanced:SPIBus:DATA<x>:BYTE	Sets the number of bytes of the data of the SPI bus trigger or queries the current setting.	5-169
:TRIGger:ENHanced:SPIBus:DATA<x>:CONDition	Sets the determination method (match or not match) of the data of the SPI bus trigger or queries the current setting.	5-169
:TRIGger:ENHanced:SPIBus:DATA<x>:DPOSition	Sets the pattern comparison start position of the data of the SPI bus trigger or queries the current setting.	5-169
:TRIGger:ENHanced:SPIBus:DATA<x>:HEXA<x>	Sets the data of the SPI bus trigger in hexadecimal notation.	5-170
:TRIGger:ENHanced:SPIBus:DATA<x>:PATtern<x>	Sets the data of the SPI bus trigger in binary notation or queries the current setting.	5-170
:TRIGger:ENHanced:SPIBus:DATA<x>:SOURce	Sets the trace of the data of the SPI bus trigger or queries the current setting.	5-170
:TRIGger:ENHanced:SPIBus:MODE	Sets the wiring system of the SPI bus trigger (three-wire or four-wire) or queries the current setting.	5-170
:TRIGger:ENHanced:TV?	Queries all settings related to the TV trigger.	5-170
:TRIGger:ENHanced:TV:COUPling?	Queries the trigger coupling of the TV trigger.	5-170
:TRIGger:ENHanced:TV:CUSTomize	Turns ON/OFF the sync guard function of the TV trigger or queries the current setting.	5-170
:TRIGger:ENHanced:TV:FIELD	Sets the field of the TV trigger or queries the current setting.	5-170
:TRIGger:ENHanced:TV:FRAME	Sets the frame skip function of the TV trigger or queries the current setting.	5-170
:TRIGger:ENHanced:TV:{HDTV NTSC PAL USERdefine}?	Queries all settings related to the TV trigger mode.	5-171
:TRIGger:ENHanced:TV:{HDTV NTSC PAL}:HFRejection?	Queries the low pass filter (HF rejection) of the TV trigger.	5-171
:TRIGger:ENHanced:TV:{HDTV NTSC PAL USERdefine}:LINE	Sets the line for activating the TV trigger or queries the current setting.	5-171
:TRIGger:ENHanced:TV:{HDTV NTSC PAL USERdefine}:POLarity	Sets the input polarity of the TV trigger or queries the current setting.	5-171
:TRIGger:ENHanced:TV:LEVel	Sets the trigger level of the TV trigger or queries the current setting.	5-171
:TRIGger:ENHanced:TV:SGUard	Sets the sync guard of the TV trigger or queries the current setting.	5-171
:TRIGger:ENHanced:TV:SOURce	Sets the trigger source of the TV trigger or queries the current setting.	5-171
:TRIGger:ENHanced:TV:TYPE	Sets the input type of the TV trigger or queries the current setting.	5-171
:TRIGger:ENHanced:TV:USERdefine:DEFinition	Sets the user defined resolution or queries the current setting.	5-171
:TRIGger:ENHanced:TV:USERdefine:HFRejection	Sets the user-defined low pass filter (HF rejection) or queries the current setting.	5-172
:TRIGger:ENHanced:TV:USERdefine:HSYNc	Sets the user-defined horizontal sync signal or queries the current setting.	5-172
:TRIGger:ESTate?	Queries all settings related to the edge/state trigger.	5-172
:TRIGger:ESTate:EOR?	Queries all settings related to the OR trigger.	5-172
:TRIGger:ESTate:EOR:CHANnel<x>	Sets the channel polarity of the OR trigger or queries the current setting.	5-172
:TRIGger:ESTate:POLarity	Sets the polarity of the edge/state trigger or queries the current setting.	5-172
:TRIGger:ESTate:SOURce	Sets the trigger source of the edge/state trigger or queries the current setting.	5-172
:TRIGger:HOLDoff	Sets the hold off time or queries the current setting.	5-173
:TRIGger:MODE	Sets the trigger mode or queries the current setting.	5-173
:TRIGger:POSition	Sets the trigger position or queries the current setting.	5-173
:TRIGger:SCOunt	Sets the number of times the trigger is to be activated when the trigger mode is Single(N) or queries the current setting.	5-173
:TRIGger:SOURce?	Queries all settings related to the trigger source.	5-173



## 5.1 A List of Commands

Command	Function	Page
:TRIGger:SOURce:CHANnel<x>?	Queries all settings related to the channel of the trigger source.	5-173
:TRIGger:SOURce:CHANnel<x>:COUPling	Sets the trigger coupling of the channel or queries the current setting.	5-173
:TRIGger:SOURce:CHANnel<x>:HFRejection	Sets the low pass filter (HF rejection) of the channel or queries the current setting.	5-174
:TRIGger:SOURce:CHANnel<x>:HYSTeresis	Sets the hysteresis of the channel or queries the current setting.	5-174
:TRIGger:SOURce:CHANnel<x>:LEVel	Sets the trigger level of the channel or queries the current setting.	5-174
:TRIGger:SOURce:CHANnel<x>:STATe	Sets the condition to be satisfied of the channel or queries the current setting.	5-174
:TRIGger:SOURce:CHANnel<x>:WIDTh	Sets the window trigger width of the channel or queries the current setting.	5-174
:TRIGger:SOURce:CHANnel<x>:WINDow	Turns ON/OFF the window of the channel or queries the current setting.	5-174
:TRIGger:SOURce:EXTErnal?	Queries all settings related to the external trigger.	5-174
:TRIGger:SOURce:EXTErnal:LEVel	Sets the trigger level of the external trigger or queries the current setting.	5-175
:TRIGger:SOURce:EXTErnal:PROBe	Sets the probe attenuation of the external trigger or queries the current setting.	5-175
:TRIGger:SOURce:LOGic	Sets the trigger source logic or queries the current setting.	5-175
:TRIGger:TYPE	Sets the trigger type or queries the current setting.	5-175
:TRIGger:WIDTh?	Queries all settings related to the pulse width trigger.	5-175
:TRIGger:WIDTh:MODE	Sets the determination mode of the pulse width trigger or queries the current setting.	5-175
:TRIGger:WIDTh:POLarity	Sets the polarity of the pulse width trigger or queries the current setting.	5-175
:TRIGger:WIDTh:SOURce	Sets the trigger source of the pulse width trigger or queries the current setting.	5-175
:TRIGger:WIDTh:TIME<x>	Sets the pulse width of the pulse width trigger or queries the current setting.	5-175
<b>WAVEform Group</b>		
:WAVEform?	Queries all of the information of the waveform data.	5-176
:WAVEform:BITS?	Queries the bit length of the specified waveform data.	5-176
:WAVEform:BYTEorder	Sets the transmission byte order or queries the current setting.	5-176
:WAVEform:END	Sets the last data point of the specified waveform or queries the current setting.	5-176
:WAVEform:FORMat	Sets the format of the data to be transmitted or queries the current setting.	5-176
:WAVEform:LENGth?	Queries the total number of data points of the specified waveform.	5-176
:WAVEform:OFFSet?	Queries the offset value of the specified waveform data.	5-176
:WAVEform:RANGe?	Queries the range value of the specified waveform data.	5-176
:WAVEform:RECOrd	Sets the target record number for the commands in the WAVEform group or queries the current setting.	5-176
:WAVEform:RECOrd? MINimum	Queries the minimum record number.	5-176
:WAVEform:SEND?	Queries the specified waveform data.	5-177
:WAVEform:SIGN?	Queries the presence of a sign.	5-177
:WAVEform:SRATE?	Queries the sample rate of the target record.	5-177
:WAVEform:STARt	Sets the first data point of the specified waveform or queries the current setting.	5-177
:WAVEform:TRACe	Sets the target waveform for the commands in the WAVEform group or queries the current setting.	5-177
:WAVEform:TRIGger?	Queries the trigger position of the target record.	5-177
:WAVEform:TYPE?	Queries the acquisition mode of the specified waveform.	5-177
<b>ZOOM Group</b>		
:ZOOM?	Queries all settings related to the waveform zoom.	5-178
:ZOOM:ALLocation?	Queries all settings related to the zoom source waveform.	5-178
:ZOOM:ALLocation:ALLon	Sets all waveforms to be zoomed.	5-178
:ZOOM:ALLocation:TRACe<x>	Turns ON/OFF the trace you wish to zoom or queries the current setting.	5-178
:ZOOM:FORMat<x>	Sets the display format of the zoom waveform or queries the current setting.	5-178
:ZOOM:HLINKage	Turns ON/OFF the horizontal link or queries the current setting.	5-178
:ZOOM:HORizontal<x>?	Queries all settings related to the horizontal zoom.	5-178
:ZOOM:HORizontal<x>:ASCRoll?	Queries all settings related to the auto scroll function.	5-178
:ZOOM:HORizontal<x>:ASCRoll:JUMP	Moves the zoom center position to the left or right edge.	5-178
:ZOOM:HORizontal<x>:ASCRoll:SPEed	Sets the auto scroll speed or queries the current setting.	5-178
:ZOOM:HORizontal<x>:ASCRoll:STARt	Starts auto scrolling.	5-179
:ZOOM:HORizontal<x>:ASCRoll:STOP	Stops auto scrolling.	5-179

Command	Function	Page
:ZOOM:HORizontal<x>:MAG	Sets the horizontal zoom magnification or queries the current setting.	5-179
:ZOOM:HORizontal<x>:POSition	Sets the horizontal zoom center position or queries the current setting.	5-179
:ZOOM:MODE	Sets the display mode of the zoom waveform or queries the current setting.	5-179
:ZOOM:TYPE<x>	Sets the zoom type or queries the current setting.	5-179
:ZOOM:VERTical<x>?	Queries all settings related to the vertical zoom.	5-179
:ZOOM:VERTical<x>:INITialize	Initializes the vertical zoom.	5-179
:ZOOM:VERTical<x>:MAG	Sets the vertical zoom magnification or queries the current setting.	5-179
:ZOOM:VERTical<x>:POSition	Sets the vertical zoom position or queries the current setting.	5-179
:ZOOM:VERTical<x>:TRACe	Sets the displayed trace of the vertical zoom screen or queries the current setting.	5-179
:ZOOM:VLINKage	Turns ON/OFF the vertical link or queries the current setting.	5-179
<b>Common Command Group</b>		
*CAL?	Performs calibration and queries the result.	5-180
*CLS	Clears the standard event register, extended event register, and error queue.	5-180
*ESE	Sets the standard event enable register or queries the current setting.	5-180
*ESR?	Queries the standard event register and clears the register.	5-180
*IDN?	Queries the instrument model.	5-180
*LRN?	Queries collectively the current settings of the command group.	5-181
*OPC	Sets the OPC bit to 1 after the completion of the specified overlap command.	5-182
*OPC?	Creates a response after the completion of the specified overlap command.	5-182
*OPT?	Queries the options.	5-182
*PSC	Sets whether to clear the registers at power on or queries the current setting.	5-182
*RST	Executes the initialization of settings.	5-182
*SRE	Sets the service request enable register or queries the current setting.	5-182
*STB?	Queries the status byte register.	5-182
*TST?	Performs a self-test and queries the result.	5-183
*WAI	Holds the subsequent command until the completion of the specified overlap operation.	5-183

## 5.2 ACQUIRE Group

### :ACQUIRE?

Function Queries all settings related to the waveform acquisition.

Syntax :ACQUIRE?

Example :ACQUIRE? -> :ACQUIRE:AVERAGE:COUNT 2;  
EWEIGHT 16;:ACQUIRE:HRMODE 0;  
INTERLEAVE 0;INTERPOLATE 1;MODE NORMAL;  
REPETITIVE 0;RLENGTH 12500

### :ACQUIRE:AVERAGE?

Function Queries all settings related to averaging and the waveform acquisition count.

Syntax :ACQUIRE:AVERAGE?

Example :ACQUIRE:AVERAGE? ->  
:ACQUIRE:AVERAGE:COUNT 2;EWEIGHT 16

### :ACQUIRE:AVERAGE:COUNT

Function Sets the waveform acquisition count of averaging mode or queries the current setting.

Syntax :ACQUIRE:AVERAGE:COUNT {<NRf>}  
:ACQUIRE:AVERAGE:COUNT?  
<NRf> = 2 to 65536 (2<sup>n</sup> steps)

Example :ACQUIRE:AVERAGE:COUNT 2  
:ACQUIRE:AVERAGE:COUNT? ->  
:ACQUIRE:AVERAGE:COUNT 2

### :ACQUIRE:AVERAGE:EWEIGHT

Function Sets the attenuation constant when averaging mode is used infinitely or queries the current setting.

Syntax :ACQUIRE:AVERAGE:EWEIGHT {<NRf>}  
:ACQUIRE:AVERAGE:EWEIGHT?  
<NRf> = 2 to 1024 (2<sup>n</sup> steps)

Example :ACQUIRE:AVERAGE:EWEIGHT 16  
:ACQUIRE:AVERAGE:EWEIGHT? ->  
:ACQUIRE:AVERAGE:EWEIGHT 16

### :ACQUIRE:HRMODE

Function Turns ON/OFF the high resolution mode or queries the current setting.

Syntax :ACQUIRE:HRMODE {<Boolean>}  
:ACQUIRE:HRMODE?

Example :ACQUIRE:HRMODE ON  
:ACQUIRE:HRMODE? -> :ACQUIRE:HRMODE 1

### :ACQUIRE:INTERLEAVE

Function Turns ON/OFF interleave or queries the current setting.

Syntax :ACQUIRE:INTERLEAVE {<Boolean>}  
:ACQUIRE:INTERLEAVE?

Example :ACQUIRE:INTERLEAVE ON  
:ACQUIRE:INTERLEAVE? ->  
:ACQUIRE:INTERLEAVE 1

### :ACQUIRE:INTERPOLATE

Function Turns ON/OFF data interpolation or queries the current setting.

Syntax :ACQUIRE:INTERPOLATE {<Boolean>}  
:ACQUIRE:INTERPOLATE?

Example :ACQUIRE:INTERPOLATE ON  
:ACQUIRE:INTERPOLATE? ->  
:ACQUIRE:INTERPOLATE 1

### :ACQUIRE:MODE

Function Sets the waveform acquisition mode or queries the current setting.

Syntax :ACQUIRE:MODE {AVERAGE|ENVELOPE|NORMAL}  
:ACQUIRE:MODE?

Example :ACQUIRE:MODE NORMAL  
:ACQUIRE:MODE? -> :ACQUIRE:MODE NORMAL

### :ACQUIRE:REPETITIVE

Function Turns ON/OFF the repetitive sampling or queries the current setting.

Syntax :ACQUIRE:REPETITIVE {<Boolean>}  
:ACQUIRE:REPETITIVE?

Example :ACQUIRE:REPETITIVE ON  
:ACQUIRE:REPETITIVE? ->  
:ACQUIRE:REPETITIVE 1

### :ACQUIRE:RLENGTH

Function Sets the record length or queries the current setting.

Syntax :ACQUIRE:RLENGTH {<NRf>}  
:ACQUIRE:RLENGTH?  
<NRf> = See the DL9000 User's Manual.

Example :ACQUIRE:RLENGTH 6250000  
:ACQUIRE:RLENGTH? ->  
:ACQUIRE:RLENGTH 6250000

## 5.3 ANALysis Group

### :ANALysis?

Function Queries all settings related to the analysis function.

Syntax :ANALysis?

Example :ANALYSIS? -> :ANALYSIS:  
 AHISTOGRAM1:HORIZONTAL 0.000E+00,  
 0.000E+00;MEASURE:CURSOR:BASIC:C1:  
 STATE 1;;ANALYSIS:AHISTOGRAM1:MEASURE:  
 CURSOR:BASIC:C2:STATE 1;;ANALYSIS:  
 AHISTOGRAM1:MEASURE:CURSOR:BASIC:DC:  
 STATE 1;;ANALYSIS:AHISTOGRAM1:MEASURE:  
 CURSOR:CALCULATION:DEFINE1 "C1";  
 DEFINE2 "C2";DEFINE3 "C1";DEFINE4 "C2";  
 STATE1 1;STATE2 1;STATE3 1;STATE4 1;;  
 ANALYSIS:AHISTOGRAM1:MEASURE:CURSOR:  
 HLINKAGE 1;HPOSITION1 0.000E+00;  
 HPOSITION2 1.000E+00;VLINKAGE 1;  
 VPOSITION1 1.000E+00;  
 VPOSITION2 1.000E+00;;ANALYSIS:  
 AHISTOGRAM1:MEASURE:MODE CURSOR;  
 PARAMETER:AREA1:MAXIMUM:STATE 1;;  
 ANALYSIS:AHISTOGRAM1:MEASURE:PARAMETER:  
 AREA1:MEAN:STATE 1;;ANALYSIS:  
 AHISTOGRAM1:MEASURE:PARAMETER:AREA1:  
 MEDIAN:STATE 1;;ANALYSIS:AHISTOGRAM1:  
 MEASURE:PARAMETER:AREA1:MINIMUM:STATE  
 1;;ANALYSIS:AHISTOGRAM1:MEASURE:  
 PARAMETER:AREA1:PEAK:STATE 1;;ANALYSIS:  
 AHISTOGRAM1:MEASURE:PARAMETER:AREA1:  
 RMS:STATE 1;;ANALYSIS:AHISTOGRAM1:  
 MEASURE:PARAMETER:AREA1:SD2INTEG:  
 STATE 1;;ANALYSIS:AHISTOGRAM1:MEASURE:  
 PARAMETER:AREA1:SD3INTEG:STATE 1;;  
 ANALYSIS:AHISTOGRAM1:MEASURE:PARAMETER:  
 AREA1:SDEVIATION:STATE 1;;ANALYSIS:  
 AHISTOGRAM1:MEASURE:PARAMETER:AREA1:  
 SDINTEG:STATE 1.....

### :ANALysis:AHISTogram<x>?

Function Queries all settings related to the accumulated histogram function.

Syntax :ANALysis:AHISTogram<x>?  
 <x> = 1 or 2

Example :ANALYSIS:AHISTOGRAM1? -> :ANALYSIS:  
 AHISTOGRAM1:HORIZONTAL 0.000E+00,  
 0.000E+00;MEASURE:CURSOR:BASIC:C1:  
 STATE 1;;ANALYSIS:AHISTOGRAM1:  
 MEASURE:CURSOR:BASIC:C2:STATE 1;;  
 ANALYSIS:AHISTOGRAM1:MEASURE:CURSOR:  
 BASIC:DC:STATE 1;;ANALYSIS:AHISTOGRAM1:  
 MEASURE:CURSOR:CALCULATION:  
 DEFINE1 "C1";DEFINE2 "C2";DEFINE3 "C1";  
 DEFINE4 "C2";STATE1 1;STATE2 1;  
 STATE3 1;STATE4 1;;ANALYSIS:  
 AHISTOGRAM1:MEASURE:CURSOR:HLINKAGE 1;  
 HPOSITION1 0.000E+00;  
 HPOSITION2 1.000E+00;VLINKAGE 1;  
 VPOSITION1 1.000E+00;  
 VPOSITION2 1.000E+00;;ANALYSIS:  
 AHISTOGRAM1:MEASURE:MODE CURSOR;  
 PARAMETER:AREA1:MAXIMUM:STATE 1;;  
 ANALYSIS:AHISTOGRAM1:MEASURE:PARAMETER:  
 AREA1:MEAN:STATE 1;;ANALYSIS:  
 AHISTOGRAM1:MEASURE:PARAMETER:AREA1:  
 MEDIAN:STATE 1;;ANALYSIS:AHISTOGRAM1:  
 MEASURE:PARAMETER:AREA1:MINIMUM:  
 STATE 1;;ANALYSIS:AHISTOGRAM1:MEASURE:  
 PARAMETER:AREA1:PEAK:STATE 1;;ANALYSIS:  
 AHISTOGRAM1:MEASURE:PARAMETER:AREA1:  
 RMS:STATE 1;;ANALYSIS:AHISTOGRAM1:  
 MEASURE:PARAMETER:AREA1:SD2INTEG:  
 STATE 1;;ANALYSIS:AHISTOGRAM1:MEASURE:  
 PARAMETER:AREA1:SD3INTEG:STATE 1;;A  
 ANALYSIS:AHISTOGRAM1:MEASURE:PARAMETER:  
 AREA1:SDEVIATION:STATE 1;;ANALYSIS:  
 AHISTOGRAM1:MEASURE:PARAMETER:AREA1:  
 SDINTEG:STATE 1.....

### :ANALysis:AHISTogram<x>:HORizontal

Function Sets the horizontal range of the accumulated histogram or queries the current setting.

Syntax :ANALysis:AHISTogram<x>:HORizontal  
 {<Nrf>,<Nrf>}  
 :ANALysis:AHISTogram<x>:HORizontal?  
 <x> = 1 or 2  
 <Nrf> = -4 to 4 (div)

Example :ANALYSIS:AHISTOGRAM1:HORIZONTAL 0,1  
 :ANALYSIS:AHISTOGRAM1:HORIZONTAL? ->  
 :ANALYSIS:AHISTOGRAM1:  
 HORIZONTAL 0.000E+00,0.000E+00

### 5.3 ANALysis Group

#### **:ANALysis:AHISTogram<x>:MEASure?**

:ANALysis:AHISTogram<x>:MEASure?

Function Queries all settings related automated measurement of the accumulated histogram.

Syntax :ANALysis:AHISTogram<x>:MEASure?  
<x> = 1 or 2

Example :ANALYSIS:AHISTOGRAM1:MEASURE? ->  
:ANALYSIS:AHISTOGRAM1:MEASURE:Cursors:  
BASIC:C1:STATE 1;:ANALYSIS:AHISTOGRAM1:  
MEASURE:Cursors:BASIC:C2:STATE 1;:  
ANALYSIS:AHISTOGRAM1:MEASURE:Cursors:  
BASIC:DC:STATE 1;:ANALYSIS:AHISTOGRAM1:  
MEASURE:Cursors:CALCULATION:  
DEFINE1 "C1";DEFINE2 "C2";DEFINE3 "C1";  
DEFINE4 "C2";STATE1 1;STATE2 1;  
STATE3 1;STATE4 1;:ANALYSIS:  
AHISTOGRAM1:MEASURE:Cursors:HLINKAGE 1;  
HPOSITION1 0.000E+00;  
HPOSITION2 1.000E+00;VLINKAGE 1;  
VPOSITION1 0.000E+00;  
VPOSITION2 1.000E+00;:ANALYSIS:  
AHISTOGRAM1:MEASURE:MODE CURSOR;  
PARAMETER:AREA1:MAXIMUM:STATE 1;:  
ANALYSIS:AHISTOGRAM1:MEASURE:PARAMETER:  
AREA1:MEAN:STATE 1;:ANALYSIS:  
AHISTOGRAM1:MEASURE:PARAMETER:AREA1:  
MEDIAN:STATE 1;:ANALYSIS:AHISTOGRAM1:  
MEASURE:PARAMETER:AREA1:MINIMUM:  
STATE 1;:ANALYSIS:AHISTOGRAM1:MEASURE:  
PARAMETER:AREA1:PEAK:STATE 1;:ANALYSIS:  
AHISTOGRAM1:MEASURE:PARAMETER:AREA1:  
RMS:STATE 1;:ANALYSIS:AHISTOGRAM1:  
MEASURE:PARAMETER:AREA1:SD2INTEG:  
STATE 1;:ANALYSIS:AHISTOGRAM1:MEASURE:  
PARAMETER:AREA1:SD3INTEG:STATE 1;:  
ANALYSIS:AHISTOGRAM1:MEASURE:PARAMETER:  
AREA1:SDEVIATION:STATE 1;:ANALYSIS:  
AHISTOGRAM1:MEASURE:PARAMETER:AREA1:  
SDINTEG:STATE 1.....

#### **:ANALysis:AHISTogram<x>:MEASure:**

##### **CURSor?**

Function Queries all settings related to cursor measurements of the accumulated histogram.

Syntax :ANALysis:AHISTogram<x>:MEASure:CURSor?  
<x> = 1 or 2

Example :ANALYSIS:AHISTOGRAM1:MEASURE:Cursors?  
-> :ANALYSIS:AHISTOGRAM1:MEASURE:  
Cursors:BASIC:C1:STATE 1;:ANALYSIS:  
AHISTOGRAM1:MEASURE:Cursors:BASIC:C2:  
STATE 1;:ANALYSIS:AHISTOGRAM1:MEASURE:  
Cursors:BASIC:DC:STATE 1;:ANALYSIS:  
AHISTOGRAM1:MEASURE:Cursors:CALCULATION:  
DEFINE1 "C1";DEFINE2 "C2";DEFINE3 "C1";  
DEFINE4 "C2";STATE1 1;STATE2 1;  
STATE3 1;STATE4 1;:ANALYSIS:  
AHISTOGRAM1:MEASURE:Cursors:HLINKAGE 1;  
HPOSITION1 0.000E+00;  
HPOSITION2 1.000E+00;VLINKAGE 1;  
VPOSITION1 0.000E+00;  
VPOSITION2 1.000E+00

#### **:ANALysis:AHISTogram<x>:MEASure:**

##### **CURSor[:BASic]?**

Function Queries all settings related to basic items of the cursor of the accumulated histogram.

Syntax :ANALysis:AHISTogram<x>:MEASure:  
CURSor[:BASic]?  
<x> = 1 or 2

Example :ANALYSIS:AHISTOGRAM1:MEASURE:Cursors:  
BASIC? -> :ANALYSIS:AHISTOGRAM1:  
MEASURE:Cursors:BASIC:C1:STATE 1;:  
ANALYSIS:AHISTOGRAM1:MEASURE:Cursors:  
BASIC:C2:STATE 1;:ANALYSIS:AHISTOGRAM1:  
MEASURE:Cursors:BASIC:DC:STATE 1

#### **:ANALysis:AHISTogram<x>:MEASure:**

##### **CURSor[:BASic]:ALL**

Function Turns ON/OFF all basic items of the cursor of the accumulated histogram.

Syntax :ANALysis:AHISTogram<x>:MEASure:  
CURSor[:BASic]:ALL {<Boolean>}  
<x> = 1 or 2

Example :ANALYSIS:AHISTOGRAM1:MEASURE:Cursors:  
BASIC:ALL ON

**:ANALYSIS:AHISTogram<x>:MEASURE:  
CURSOR[:BASic]:C<x>?**

Function Queries all settings related to the cursor of the accumulated histogram.

Syntax :ANALYSIS:AHISTogram<x>:MEASURE:  
CURSOR[:BASic]:C<x>?  
<x> of AHISTogram<x> = 1 or 2  
<x> of C<x> = 1 or 2

Example :ANALYSIS:AHISTOGRAM1:MEASURE:CURSOR:  
BASIC:C1? -> :ANALYSIS:AHISTOGRAM1:  
MEASURE:CURSOR:BASIC:C1:STATE 1

**:ANALYSIS:AHISTogram<x>:MEASURE:  
CURSOR[:BASic]:C<x>:STATE**

Function Turns ON/OFF the cursor of the accumulated histogram or queries the current setting.

Syntax :ANALYSIS:AHISTogram<x>:MEASURE:  
CURSOR[:BASic]:C<x>:STATE {<Boolean>}  
:ANALYSIS:AHISTogram<x>:MEASURE:  
CURSOR[:BASic]:C<x>:STATE?  
<x> of AHISTogram<x> = 1 or 2  
<x> of C<x> = 1 or 2

Example :ANALYSIS:AHISTOGRAM1:MEASURE:CURSOR:  
BASIC:C1:STATE ON  
:ANALYSIS:AHISTOGRAM1:MEASURE:CURSOR:  
BASIC:C1:STATE? ->  
:ANALYSIS:AHISTOGRAM1:MEASURE:CURSOR:  
BASIC:C1:STATE 1

**:ANALYSIS:AHISTogram<x>:MEASURE:  
CURSOR[:BASic]:C<x>:VALUE?**

Function Queries the measured value of the cursor of the accumulated histogram.

Syntax :ANALYSIS:AHISTogram<x>:MEASURE:  
CURSOR[:BASic]:C<x>:VALUE?  
<x> of AHISTogram<x> = 1 or 2  
<x> of C<x> = 1 or 2

Example :ANALYSIS:AHISTOGRAM1:MEASURE:CURSOR:  
BASIC:C1:VALUE? ->  
:ANALYSIS:AHISTOGRAM1:MEASURE:CURSOR:  
BASIC:C1:VALUE 1.000E+00

**:ANALYSIS:AHISTogram<x>:MEASURE:  
CURSOR[:BASic]:DC?**

Function Queries all settings related to measured values between cursors of the accumulated histogram.

Syntax :ANALYSIS:AHISTogram<x>:MEASURE:  
CURSOR[:BASic]:DC?  
<x> = 1 or 2

Example :ANALYSIS:AHISTOGRAM1:MEASURE:CURSOR:  
BASIC:DC? -> :ANALYSIS:AHISTOGRAM1:  
MEASURE:CURSOR:BASIC:DC:STATE 1

**:ANALYSIS:AHISTogram<x>:MEASURE:  
CURSOR[:BASic]:DC:STATE**

Function Turns ON/OFF the measured values between cursors of the accumulated histogram or queries the current setting.

Syntax :ANALYSIS:AHISTogram<x>:MEASURE:  
CURSOR[:BASic]:DC:STATE {<Boolean>}  
:ANALYSIS:AHISTogram<x>:MEASURE:  
CURSOR[:BASic]:DC:STATE?  
<x> = 1 or 2

Example :ANALYSIS:AHISTOGRAM1:MEASURE:CURSOR:  
BASIC:DC:STATE ON  
:ANALYSIS:AHISTOGRAM1:MEASURE:CURSOR:  
BASIC:DC:STATE? ->  
:ANALYSIS:AHISTOGRAM1:  
MEASURE:CURSOR:BASIC:DC:STATE 1

**:ANALYSIS:AHISTogram<x>:MEASURE:  
CURSOR[:BASic]:DC:VALUE?**

Function Queries the measured value between cursors of the accumulated histogram.

Syntax :ANALYSIS:AHISTogram<x>:MEASURE:  
CURSOR[:BASic]:DC:VALUE?  
<x> = 1 or 2

Example :ANALYSIS:AHISTOGRAM1:MEASURE:CURSOR:  
BASIC:DC:VALUE? ->  
:ANALYSIS:AHISTOGRAM1:MEASURE:CURSOR:  
BASIC:DC:VALUE 1.000E+00

**:ANALYSIS:AHISTogram<x>:MEASURE:  
CURSOR:CALCulation?**

Function Queries all settings related to calculation items of the cursor of the accumulated histogram.

Syntax :ANALYSIS:AHISTogram<x>:MEASURE:CURSOR:  
CALCulation?  
<x> = 1 or 2

Example :ANALYSIS:AHISTOGRAM1:MEASURE:CURSOR:  
CALCULATION? ->  
:ANALYSIS:AHISTOGRAM1:MEASURE:CURSOR:  
CALCULATION:DEFINE1 "C1";DEFINE2 "C2";  
DEFINE3 "C1";DEFINE4 "C2";STATE1 1;  
STATE2 1;STATE3 1;STATE4 1

**:ANALYSIS:AHISTogram<x>:MEASURE:  
CURSOR:CALCulation:ALL**

Function Turns ON/OFF all calculation items of the cursor of the accumulated histogram.

Syntax :ANALYSIS:AHISTogram<x>:MEASURE:CURSOR:  
CALCulation:ALL {<Boolean>}  
<x> = 1 or 2

Example :ANALYSIS:AHISTOGRAM1:MEASURE:CURSOR:  
CALCULATION:ALL ON

### 5.3 ANALysis Group

#### **:ANALysis:AHISTogram<x>:MEASure:**

##### **CURSor:CALCulation:DEFine<x>**

Function Sets the equation of the calculation item of the cursor of the accumulated histogram or queries the current setting.

Syntax :ANALysis:AHISTogram<x>:MEASure:CURSor:  
CALCulation:DEFine<x> {<String>}  
:ANALysis:AHISTogram<x>:MEASure:CURSor:  
CALCulation:DEFine<x>?  
<x> of AHISTogram<x> = 1 or 2  
<x> of DEFine<x> = 1 to 4  
<String> = Up to 128 characters

Example :ANALYSIS:AHISTOGRAM1:MEASURE:CURSOR:  
CALCULATION:DEFINE1 "C1"  
:ANALYSIS:AHISTOGRAM1:MEASURE:CURSOR:  
CALCULATION:DEFINE1? ->  
:ANALYSIS:AHISTOGRAM1:MEASURE:CURSOR:  
CALCULATION:DEFINE1 "C1"

#### **:ANALysis:AHISTogram<x>:MEASure:**

##### **CURSor:CALCulation:STATe<x>**

Function Turns ON/OFF the calculation item of the cursor of the accumulated histogram or queries the current setting.

Syntax :ANALysis:AHISTogram<x>:MEASure:CURSor:  
CALCulation:STATe<x> {<Boolean>}  
:ANALysis:AHISTogram<x>:MEASure:CURSor:  
CALCulation:STATe<x>?  
<x> of AHISTogram<x> = 1 or 2  
<x> of STATe<x> = 1 to 4

Example :ANALYSIS:AHISTOGRAM1:MEASURE:CURSOR:  
CALCULATION:STATE1 ON  
:ANALYSIS:AHISTOGRAM1:MEASURE:CURSOR:  
CALCULATION:STATE1? ->  
:ANALYSIS:AHISTOGRAM1:MEASURE:CURSOR:  
CALCULATION:STATE1 1

#### **:ANALysis:AHISTogram<x>:MEASure:**

##### **CURSor:CALCulation:VALue<x>?**

Function Queries the measured value of the calculation item of the cursor of the accumulated histogram.

Syntax :ANALysis:AHISTogram<x>:MEASure:CURSor:  
CALCulation:VALue<x>?  
<x> of AHISTogram<x> = 1 or 2  
<x> of VALue<x> = 1 to 4

Example :ANALYSIS:AHISTOGRAM1:MEASURE:CURSOR:  
CALCULATION:VALUE1? ->  
:ANALYSIS:AHISTOGRAM1:MEASURE:CURSOR:  
CALCULATION:VALUE1 1.000E+00

#### **:ANALysis:AHISTogram<x>:MEASure:**

##### **CURSor:HLINKage**

Function Turns ON/OFF the horizontal cursor link of the accumulated histogram or queries the current setting.

Syntax :ANALysis:AHISTogram<x>:MEASure:CURSor:  
HLINKage {<Boolean>}  
:ANALysis:AHISTogram<x>:MEASure:CURSor:  
HLINKage?  
<x> = 1 or 2

Example :ANALYSIS:AHISTOGRAM1:MEASURE:CURSOR:  
HLINKAGE ON  
:ANALYSIS:AHISTOGRAM1:MEASURE:CURSOR:  
HLINKAGE? -> :ANALYSIS:AHISTOGRAM1:  
MEASURE:CURSOR:HLINKAGE 1

#### **:ANALysis:AHISTogram<x>:MEASure:**

##### **CURSor:HPOSITion<x>**

Function Sets the horizontal cursor position of the accumulated histogram or queries the current setting.

Syntax :ANALysis:AHISTogram<x>:MEASure:CURSor:  
HPOSITion<x> {<Nrf>}  
:ANALysis:AHISTogram<x>:MEASure:CURSor:  
HPOSITion<x>?  
<x> of AHISTogram<x> = 1 or 2  
<x> of HPOSITion<x> = 1 or 2  
<Nrf> = -5 to 5 div

Example :ANALYSIS:AHISTOGRAM1:MEASURE:CURSOR:  
HPOSITION1 1  
:ANALYSIS:AHISTOGRAM1:MEASURE:CURSOR:  
HPOSITION1? ->  
:ANALYSIS:AHISTOGRAM1:MEASURE:CURSOR:  
HPOSITION1 1.000E+00

#### **:ANALysis:AHISTogram<x>:MEASure:**

##### **CURSor:VLINKage**

Function Turns ON/OFF the vertical cursor link of the accumulated histogram or queries the current setting.

Syntax :ANALysis:AHISTogram<x>:MEASure:CURSor:  
VLINKage {<Boolean>}  
:ANALysis:AHISTogram<x>:MEASure:CURSor:  
VLINKage?  
<x> = 1 or 2

Example :ANALYSIS:AHISTOGRAM1:MEASURE:CURSOR:  
VLINKAGE ON  
:ANALYSIS:AHISTOGRAM1:MEASURE:CURSOR:  
VLINKAGE? -> :ANALYSIS:AHISTOGRAM1:  
MEASURE:CURSOR:VLINKAGE 1

**:ANALysis:AHIStoqram<x>:MEASure:  
CURSor:VPOStion<x>**

Function Sets the vertical cursor position of the accumulated histogram or queries the current setting.

Syntax :ANALysis:AHIStoqram<x>:MEASure:CURSor:  
VPOStion<x> {<NRf>}  
:ANALysis:AHIStoqram<x>:MEASure:CURSor:  
VPOStion<x>?  
<x> of AHIStoqram<x> = 1 and 2  
<x> of VPOStion<x> = 1 and 2  
<NRf> = -4 to 4 (div)

Example :ANALYSIS:AHISTOGRAM1:MEASURE:CURSOR:  
VPOSITION1 1  
:ANALYSIS:AHISTOGRAM1:MEASURE:CURSOR:  
VPOSITION1? ->  
:ANALYSIS:AHISTOGRAM1:MEASURE:CURSOR:  
VPOSITION1 1.000E+00

**:ANALysis:AHIStoqram<x>:MEASure:MODE**

Function Sets the automated measurement mode of the accumulated histogram or queries the current setting.

Syntax :ANALysis:AHIStoqram<x>:MEASure:MODE  
{CURSor|OFF|PARAMeter}  
:ANALysis:AHIStoqram<x>:MEASure:MODE?  
<x> = 1 or 2

Example :ANALYSIS:AHISTOGRAM1:MEASURE:  
MODE CURSOR  
:ANALYSIS:AHISTOGRAM1:MEASURE:MODE? ->  
:ANALYSIS:AHISTOGRAM1:MEASURE:  
MODE CURSOR

**:ANALysis:AHIStoqram<x>:MEASure:  
PARAMeter?**

Function Queries all settings related to the automated measurement of waveform parameters of the accumulated histogram.

Syntax :ANALysis:AHIStoqram<x>:MEASure:  
PARAMeter?  
<x> = 1 or 2

Example :ANALYSIS:AHISTOGRAM1:MEASURE:  
PARAMETER? -> :ANALYSIS:AHISTOGRAM1:  
MEASURE:PARAMETER:AREA1:MAXIMUM:  
STATE 1;:ANALYSIS:AHISTOGRAM1:MEASURE:  
PARAMETER:AREA1:MEAN:STATE 1;:ANALYSIS:  
AHISTOGRAM1:MEASURE:PARAMETER:AREA1:  
MEDIAN:STATE 1;:ANALYSIS:AHISTOGRAM1:  
MEASURE:PARAMETER:AREA1:MINIMUM:  
STATE 1;:ANALYSIS:AHISTOGRAM1:MEASURE:  
PARAMETER:AREA1:PEAK:STATE 1;:ANALYSIS:  
AHISTOGRAM1:MEASURE:PARAMETER:AREA1:  
RMS:STATE 1;:ANALYSIS:AHISTOGRAM1:  
MEASURE:PARAMETER:AREA1:SD2INTEG:  
STATE 1;:ANALYSIS:AHISTOGRAM1:MEASURE:  
PARAMETER:AREA1:SD3INTEG:STATE 1;:  
ANALYSIS:AHISTOGRAM1:MEASURE:PARAMETER:  
AREA1:SDEVIATION:STATE 1;:ANALYSIS:  
AHISTOGRAM1:MEASURE:PARAMETER:AREA1:  
SDINTEG:STATE 1;:ANALYSIS:AHISTOGRAM1:  
MEASURE:PARAMETER:AREA2:MAXIMUM:  
STATE 1;:ANALYSIS:AHISTOGRAM1:MEASURE:  
PARAMETER:AREA2:MEAN:STATE 1;:ANALYSIS:  
AHISTOGRAM1:MEASURE:PARAMETER:AREA2:  
MEDIAN:STATE 1;:ANALYSIS:AHISTOGRAM1:  
MEASURE:PARAMETER:AREA2:MINIMUM:  
STATE 1;:ANALYSIS:AHISTOGRAM1:MEASURE:  
PARAMETER:AREA2:PEAK:STATE 1;:ANALYSIS:  
AHISTOGRAM1:MEASURE:PARAMETER:AREA2:  
RMS:STATE 1;:ANALYSIS:AHISTOGRAM1:  
MEASURE:PARAMETER:AREA2:SD2INTEG:  
STATE 1;:ANALYSIS:AHISTOGRAM1:MEASURE:  
PARAMETER:AREA2:SD3INTEG:STATE 1;:  
ANALYSIS:AHISTOGRAM1:MEASURE:PARAMETER:  
AREA2:SDEVIATION:STATE 1;:ANALYSIS:  
AHISTOGRAM1:MEASURE:PARAMETER:AREA2:  
SDINTEG:STATE 1.....



### 5.3 ANALysis Group

#### **:ANALysis:AHISTogram<x>:MEASure:**

##### **PARAMeter:AREA<x>?**

Function Queries all settings related to the area of the accumulated histogram.

Syntax :ANALysis:AHISTogram<x>:MEASure:  
PARAMeter:AREA<x>?  
<x> of AHISTogram<x> = 1 and 2  
<x> of AREA<x> = 1 or 2

Example :ANALYSIS:AHISTOGRAM1:MEASURE:  
PARAMETER:AREA1? ->  
:ANALYSIS:AHISTOGRAM1:MEASURE:  
PARAMETER:AREA1:MAXIMUM:STATE 1;  
ANALYSIS:AHISTOGRAM1:MEASURE:PARAMETER:  
AREA1:MEAN:STATE 1;:ANALYSIS:  
AHISTOGRAM1:MEASURE:PARAMETER:AREA1:  
MEDIAN:STATE 1;:ANALYSIS:AHISTOGRAM1:  
MEASURE:PARAMETER:AREA1:MINIMUM:  
STATE 1;:ANALYSIS:AHISTOGRAM1:MEASURE:  
PARAMETER:AREA1:PEAK:STATE 1;:ANALYSIS:  
AHISTOGRAM1:MEASURE:PARAMETER:AREA1:  
RMS:STATE 1;:ANALYSIS:AHISTOGRAM1:  
MEASURE:PARAMETER:AREA1:SD2INTEG:  
STATE 1;:ANALYSIS:AHISTOGRAM1:MEASURE:  
PARAMETER:AREA1:SD3INTEG:STATE 1;  
ANALYSIS:AHISTOGRAM1:MEASURE:PARAMETER:  
AREA1:SDEVIATION:STATE 1;:ANALYSIS:  
AHISTOGRAM1:MEASURE:PARAMETER:AREA1:  
SDINTEG:STATE 1

#### **:ANALysis:AHISTogram<x>:MEASure:**

##### **PARAMeter:AREA<x>:ALL**

Function Turns ON/OFF all waveform parameters of the accumulated histogram.

Syntax :ANALysis:AHISTogram<x>:MEASure:  
PARAMeter:AREA<x>:ALL {<Boolean>}  
<x> of AHISTogram<x> = 1 or 2  
<x> of AREA<x> = 1 or 2

Example :ANALYSIS:AHISTOGRAM1:MEASURE:  
PARAMETER:AREA1:ALL ON

#### **:ANALysis:AHISTogram<x>:MEASure:**

##### **PARAMeter:AREA<x>:<Parameter>?**

Function Queries all settings related to the waveform parameter of the accumulated histogram.

Syntax :ANALysis:AHISTogram<x>:MEASure:  
PARAMeter:AREA<x>:<Parameter>?  
<x> of AHISTogram<x> = 1 or 2  
<x> of AREA<x> = 1 or 2  
<Parameter> = {MAXimum|MEAN|MEDIan|  
MINimum|PEAK|RMS|SD2integ|SD3integ|  
SDEVIation|SDINteG}

Example (The following is an example for the maximum value of area 1.)

```
:ANALYSIS:AHISTOGRAM1:MEASURE:
PARAMETER:AREA1:MAXIMUM? ->
:ANALYSIS:AHISTOGRAM1:MEASURE:
PARAMETER:AREA1:MAXIMUM:STATE 1
```

#### **:ANALysis:AHISTogram<x>:MEASure:**

##### **PARAMeter:AREA<x>:<Parameter>:STATE**

Function Turns ON/OFF the waveform parameter of the accumulated histogram or queries the current setting.

Syntax :ANALysis:AHISTogram<x>:MEASure:  
PARAMeter:AREA<x>:<Parameter>:  
STATE {<Boolean>}  
:ANALysis:AHISTogram<x>:MEASure:  
PARAMeter:AREA<x>:<Parameter>:STATE?  
<x> of AHISTogram<x> = 1 or 2  
<x> of AREA<x> = 1 or 2  
<Parameter> = {MAXimum|MEAN|MEDIan|  
MINimum|PEAK|RMS|SD2integ|SD3integ|  
SDEVIation|SDINteG}

Example (The following is an example for the maximum value of area 1.)

```
:ANALYSIS:AHISTOGRAM1:MEASURE:
PARAMETER:AREA1:MAXIMUM:STATE ON
:ANALYSIS:AHISTOGRAM1:MEASURE:
PARAMETER:AREA1:MAXIMUM:STATE? ->
:ANALYSIS:AHISTOGRAM1:MEASURE:
PARAMETER:AREA1:MAXIMUM:STATE 1
```

**:ANALYSIS:AHISTogram<x>:MEASURE:****PARAMETER:AREA<x>:<Parameter>:VALUE?**

Function Queries the automated measured value of the waveform parameter of the accumulated histogram.

Syntax :ANALYSIS:AHISTogram<x>:MEASURE:  
PARAMETER:AREA<x>:<Parameter>:VALUE?  
<x> of AHISTogram<x> = 1 or 2  
<x> of AREA<x> = 1 or 2  
<Parameter> = {MAXimum|MEAN|MEDIan|  
MINimum|PEAK|RMS|SD2integ|SD3integ|  
SDEviation|SDINtegr}

Example (The following is an example for the maximum value of area 1.)

```
:ANALYSIS:AHISTOGRAM1:MEASURE:
PARAMETER:AREA1:MAXIMUM:VALUE? ->
:ANALYSIS:AHISTOGRAM1:MEASURE:
PARAMETER:AREA1:MAXIMUM:VALUE 1.000E+00
```

**:ANALYSIS:AHISTogram<x>:MEASURE:****PARAMETER:CALCulation?**

Function Queries all settings related to the calculation items of waveform parameters of the accumulated histogram.

Syntax :ANALYSIS:AHISTogram<x>:MEASURE:  
PARAMETER:CALCulation?  
<x> = 1 or 2

Example :ANALYSIS:AHISTOGRAM1:MEASURE:  
PARAMETER:CALCULATION? ->  
:ANALYSIS:AHISTOGRAM1:MEASURE:  
PARAMETER:CALCULATION:DEFINE1 "MEAN";  
DEFINE2 "MAX";DEFINE3 "MIN";  
DEFINE4 "PEAK";STATE1 1;STATE2 1;  
STATE3 1;STATE4 1

**:ANALYSIS:AHISTogram<x>:MEASURE:****PARAMETER:CALCulation:ALL**

Function Turns ON/OFF all calculation items of the waveform parameters of the accumulated histogram.

Syntax :ANALYSIS:AHISTogram<x>:MEASURE:  
PARAMETER:CALCulation:ALL {<Boolean>}  
<x> = 1 or 2

Example :ANALYSIS:AHISTOGRAM1:MEASURE:  
PARAMETER:CALCULATION:ALL ON

**:ANALYSIS:AHISTogram<x>:MEASURE:****PARAMETER:CALCulation:DEFINE<x>**

Function Sets the equation of the calculation items of the waveform parameter of the accumulated histogram or queries the current setting.

Syntax :ANALYSIS:AHISTogram<x>:MEASURE:  
PARAMETER:CALCulation:  
DEFINE<x> {<String>}  
:ANALYSIS:AHISTogram<x>:MEASURE:  
PARAMETER:CALCulation:DEFINE<x>?  
<x> of AHISTogram<x> = 1 or 2  
<x> of DEFINE<x> = 1 to 4  
<String> = Up to 128 characters

Example :ANALYSIS:AHISTOGRAM1:MEASURE:  
PARAMETER:CALCULATION:DEFINE1 "MEAN"  
:ANALYSIS:AHISTOGRAM1:MEASURE:  
PARAMETER:CALCULATION:DEFINE1? ->  
:ANALYSIS:AHISTOGRAM1:MEASURE:  
PARAMETER:CALCULATION:DEFINE1 "MEAN"

**:ANALYSIS:AHISTogram<x>:MEASURE:****PARAMETER:CALCulation:STATE<x>**

Function Turns ON/OFF the calculation items of the waveform parameter of the accumulated histogram or queries the current setting.

Syntax :ANALYSIS:AHISTogram<x>:MEASURE:  
PARAMETER:CALCulation:STATE<x>  
{<Boolean>}  
:ANALYSIS:AHISTogram<x>:MEASURE:  
PARAMETER:CALCulation:STATE<x>?  
<x> of AHISTogram<x> = 1 or 2  
<x> of STATE<x> = 1 to 4

Example :ANALYSIS:AHISTOGRAM1:MEASURE:  
PARAMETER:CALCULATION:STATE1 ON  
:ANALYSIS:AHISTOGRAM1:MEASURE:  
PARAMETER:CALCULATION:STATE1? ->  
:ANALYSIS:AHISTOGRAM1:MEASURE:  
PARAMETER:CALCULATION:STATE1 1

**:ANALYSIS:AHISTogram<x>:MEASURE:****PARAMETER:CALCulation:VALUE<x>?**

Function Queries the automated measured value of the calculation items of the waveform parameter of the accumulated histogram.

Syntax :ANALYSIS:AHISTogram<x>:MEASURE:  
PARAMETER:CALCulation:VALUE<x>?  
<x> of AHISTogram<x> = 1 or 2  
<x> of VALUE<x> = 1 to 4

Example :ANALYSIS:AHISTOGRAM1:MEASURE:  
PARAMETER:CALCULATION:VALUE1? ->  
:ANALYSIS:AHISTOGRAM1:MEASURE:  
PARAMETER:CALCULATION:VALUE1 1.000E+00

## 5.3 ANALYSIS Group

### **:ANALYSIS:AHISTogram<x>:MEASURE:**

#### **PARAMETER:HRANGE<x>**

**Function** Sets the horizontal range of the waveform parameter of the accumulated histogram or queries the current setting.

**Syntax** :ANALYSIS:AHISTogram<x>:MEASURE:  
PARAMETER:HRANGE<x> {<NRf>,<NRf>}  
:ANALYSIS:AHISTogram<x>:MEASURE:  
PARAMETER:HRANGE<x>?  
<x> of AHISTogram<x> = 1 or 2  
<x> of HRANGE<x> = 1 or 2  
<NRf> = -5 to 5 div

**Example** :ANALYSIS:AHISTOGRAM1:MEASURE:  
PARAMETER:HRANGE1 1,2  
:ANALYSIS:AHISTOGRAM1:MEASURE:  
PARAMETER:HRANGE1? ->  
:ANALYSIS:AHISTOGRAM1:MEASURE:  
PARAMETER:HRANGE1 2.000E+00,1.000E+00

### **:ANALYSIS:AHISTogram<x>:MEASURE:**

#### **PARAMETER:VRANGE<x>**

**Function** Sets the vertical range of the waveform parameter of the accumulated histogram or queries the current setting.

**Syntax** :ANALYSIS:AHISTogram<x>:MEASURE:  
PARAMETER:VRANGE<x> {<NRf>,<NRf>}  
:ANALYSIS:AHISTogram<x>:MEASURE:  
PARAMETER:VRANGE<x>?  
<x> of AHISTogram<x> = 1 or 2  
<x> of VRANGE<x> = 1 or 2  
<NRf> = -4 to 4 (div)

**Example** :ANALYSIS:AHISTOGRAM1:MEASURE:  
PARAMETER:VRANGE1 1,2  
:ANALYSIS:AHISTOGRAM1:MEASURE:  
PARAMETER:VRANGE1? ->  
:ANALYSIS:AHISTOGRAM1:MEASURE:  
PARAMETER:VRANGE1 2.000E+00,1.000E+00

### **:ANALYSIS:AHISTogram<x>:MODE**

**Function** Sets the accumulated histogram mode or queries the current setting.

**Syntax** :ANALYSIS:AHISTogram<x>:MODE  
{HORIZONTAL|VERTICAL}  
:ANALYSIS:AHISTogram<x>:MODE?  
<x> = 1 or 2

**Example** :ANALYSIS:AHISTOGRAM1:MODE HORIZONTAL  
:ANALYSIS:AHISTOGRAM1:MODE? ->  
:ANALYSIS:AHISTOGRAM1:MODE HORIZONTAL

### **:ANALYSIS:AHISTogram<x>:TRACE**

**Function** Sets the source trace of the accumulated histogram or queries the current setting.

**Syntax** :ANALYSIS:AHISTogram<x>:TRACE {<NRf>}  
:ANALYSIS:AHISTogram<x>:TRACE?  
<x> = 1 or 2  
<NRf> = 1 to 8

**Example** :ANALYSIS:AHISTOGRAM1:TRACE 1  
:ANALYSIS:AHISTOGRAM1:TRACE? ->  
:ANALYSIS:AHISTOGRAM1:TRACE 1

### **:ANALYSIS:AHISTogram<x>:VERTICAL**

**Function** Sets the vertical range of the accumulated histogram or queries the current setting.

**Syntax** :ANALYSIS:AHISTogram<x>:VERTICAL  
{<NRf>,<NRf>}  
:ANALYSIS:AHISTogram<x>:VERTICAL?  
<x> = 1 or 2  
<NRf> = -4 to 4 (div)

**Example** :ANALYSIS:AHISTOGRAM1:VERTICAL 1,2  
:ANALYSIS:AHISTOGRAM1:VERTICAL? ->  
:ANALYSIS:AHISTOGRAM1:  
VERTICAL 2.000E+00,1.000E+00

### **:ANALYSIS:AHISTogram<x>:WINDOW**

**Function** Sets the measurement target window of the accumulated histogram or queries the current setting.

**Syntax** :ANALYSIS:AHISTogram<x>:WINDOW {MAIN|  
Z1|Z2}  
:ANALYSIS:AHISTogram<x>:WINDOW?  
<x> = 1 or 2

**Example** :ANALYSIS:AHISTOGRAM1:WINDOW MAIN  
:ANALYSIS:AHISTOGRAM1:WINDOW? ->  
:ANALYSIS:AHISTOGRAM1:WINDOW MAIN

### **:ANALYSIS:DISPLAY<x>**

**Function** Turns ON/OFF the analysis function display or queries the current setting.

**Syntax** :ANALYSIS:DISPLAY<x> {<Boolean>}  
:ANALYSIS:DISPLAY<x>?  
<x> = 1 or 2

**Example** :ANALYSIS:DISPLAY1 ON  
:ANALYSIS:DISPLAY1? ->  
:ANALYSIS:DISPLAY1 1

**:ANALysis:FFT<x>?**

Function Queries all settings related to the FFT computation function.

Syntax :ANALysis:FFT<x>?  
<x> = 1 or 2

Example :ANALYSIS:FFT1? ->  
:ANALYSIS:FFT1:HORIZONTAL:CSPAN:  
CENTER 1.000E+00;SPAN1.000E+00;  
:ANALYSIS:FFT1:HORIZONTAL:  
LRIGHT:RANGE2.000E+00,1.000E+00;  
:ANALYSIS:FFT1:HORIZONTAL:MODE AUTO;  
:ANALYSIS:FFT1:IPART 1;LENGTH 2500;  
MAXHOLD 1;MEASURE:MARKER:BASIC:  
DFREQUENCY:STATE1;:ANALYSIS:FFT1:  
MEASURE:MARKER:BASIC:DV:STATE 1;  
:ANALYSIS:FFT1:MEASURE:MARKER:BASIC:  
FREQUENCY1:STATE 1;  
:ANALYSIS:FFT1:MEASURE:MARKER:BASIC:  
FREQUENCY2:STATE 1;  
:ANALYSIS:FFT1:MEASURE:MARKER:BASIC:  
POSITION1 1.000E+00;  
:ANALYSIS:FFT1:MEASURE:MARKER:BASIC:  
POSITION2 2.000E+00;V1:STATE 1;  
:ANALYSIS:FFT1:MEASURE:MARKER:BASIC:  
V2:STATE 1;:ANALYSIS:FFT1:MEASURE:  
MARKER:CALCULATION:DEFINE1 "V(F1)";  
DEFINE2 "V(F2)";DEFINE3 "V(F1)";  
DEFINE4 "V(F2)";STATE1 1;STATE2 1;  
STATE3 1;STATE4 1;  
:ANALYSIS:FFT1:MEASURE:MODE MARKER;  
PEAK:BASIC:DFREQUENCY:STATE 1;  
:ANALYSIS:FFT1:MEASURE:PEAK:BASIC:  
DV:STATE 1;  
:ANALYSIS:FFT1:MEASURE:PEAK:BASIC:  
FREQUENCY1:STATE 1;  
:ANALYSIS:FFT1:MEASURE:PEAK:BASIC:  
FREQUENCY2:STATE 1;  
:ANALYSIS:FFT1:MEASURE:PEAK:BASIC:  
RANGE1 1.000E+00,0.000E+00;  
RANGE2 1.000E+00,0.000E+00;V1:  
STATE 1;  
:ANALYSIS:FFT1:MEASURE:PEAK:BASIC:V2:  
STATE 1.....

**:ANALysis:FFT<x>:HORizontal?**

Function Queries all settings related the horizontal axis of the FFT computation.

Syntax :ANALysis:FFT<x>:HORizontal?  
<x> = 1 or 2

Example :ANALYSIS:FFT1:HORIZONTAL? ->  
:ANALYSIS:FFT1:HORIZONTAL:CSPAN:  
CENTER 1.000E+00;SPAN 1.000E+00;;  
ANALYSIS:FFT1:HORIZONTAL:LRIGHT:  
RANGE 2.000E+00,1.000E+00;:ANALYSIS:  
FFT1:HORIZONTAL:MODE AUTO

**:ANALysis:FFT<x>:HORizontal:CSPan?**

Function Queries all settings related to the center and span of the horizontal axis of the FFT computation.

Syntax :ANALysis:FFT<x>:HORizontal:CSPan?  
<x> = 1 or 2

Example :ANALYSIS:FFT1:HORIZONTAL:CSPAN? ->  
:ANALYSIS:FFT1:HORIZONTAL:CSPAN:  
CENTER 1.000E+00;SPAN 1.000E+00

**:ANALysis:FFT<x>:HORizontal:CSPan:****CENter**

Function Sets the horizontal center of the FFT computation or queries the current setting.

Syntax :ANALysis:FFT<x>:HORizontal:CSPan:  
CENTER {<Frequency>}  
:ANALysis:FFT<x>:HORizontal:CSPan:  
CENTER?  
<x> = 1 or 2  
<Frequency> = 0 to 250 G (Hz)

Example :ANALYSIS:FFT1:HORIZONTAL:CSPAN:  
CENTER 1HZ  
:ANALYSIS:FFT1:HORIZONTAL:CSPAN:CENTER?  
-> :ANALYSIS:FFT1:HORIZONTAL:CSPAN:  
CENTER 1.000E+00

**:ANALysis:FFT<x>:HORizontal:CSPan:****SPAN**

Function Sets the horizontal span of the FFT computation or queries the current setting.

Syntax :ANALysis:FFT<x>:HORizontal:CSPan:  
SPAN {<Frequency>}  
:ANALysis:FFT<x>:HORizontal:CSPan:SPAN?  
<x> = 1 or 2  
<Frequency> = 0 to 250 G (Hz)

Example :ANALYSIS:FFT1:HORIZONTAL:CSPAN:  
SPAN 1HZ  
:ANALYSIS:FFT1:HORIZONTAL:CSPAN:SPAN?  
-> :ANALYSIS:FFT1:HORIZONTAL:CSPAN:  
SPAN 1.000E+00

**:ANALysis:FFT<x>:HORizontal:LRIGHT?**

Function Queries all settings related the left and right edges of the horizontal axis of the FFT computation.

Syntax :ANALysis:FFT<x>:HORizontal:LRIGHT?  
<x> = 1 or 2

Example :ANALYSIS:FFT1:HORIZONTAL:LRIGHT? ->  
:ANALYSIS:FFT1:HORIZONTAL:LRIGHT:  
RANGE 2.000E+00,1.000E+00

### 5.3 ANALYSIS Group

#### **:ANALYSIS:FFT<x>:HORIZONTAL:LRIGHT:**

##### **RANGE**

**Function** Sets the range of the horizontal left and right edges of the FFT computation or queries the current setting.

**Syntax** :ANALYSIS:FFT<x>:HORIZONTAL:LRIGHT:RANGE {<Frequency>,<Frequency>}  
:ANALYSIS:FFT<x>:HORIZONTAL:LRIGHT:RANGE?  
<x> = 1 or 2  
<Frequency> = 0 to 250 G (Hz)

**Example** :ANALYSIS:FFT1:HORIZONTAL:LRIGHT:RANGE 1HZ,2HZ  
:ANALYSIS:FFT1:HORIZONTAL:LRIGHT:RANGE?  
-> :ANALYSIS:FFT1:HORIZONTAL:LRIGHT:RANGE 2.000E+00,1.000E+00

#### **:ANALYSIS:FFT<x>:HORIZONTAL:MODE**

**Function** Sets the horizontal mode of the FFT computation or queries the current setting.

**Syntax** :ANALYSIS:FFT<x>:HORIZONTAL:MODE {AUTO|CSPAN|LRIGHT}  
:ANALYSIS:FFT<x>:HORIZONTAL:MODE?  
<x> = 1 or 2

**Example** :ANALYSIS:FFT1:HORIZONTAL:MODE AUTO  
:ANALYSIS:FFT1:HORIZONTAL:MODE? ->  
:ANALYSIS:FFT1:HORIZONTAL:MODE AUTO

#### **:ANALYSIS:FFT<x>:IPART (Imag Part)**

**Function** Sets the source trace of the imaginary part of the FFT computation or queries the current setting.

**Syntax** :ANALYSIS:FFT<x>:IPART {<NRf>|DONTcare}  
:ANALYSIS:FFT<x>:IPART?  
<x> = 1 or 2  
<NRf> = 1 to 8

**Example** :ANALYSIS:FFT1:IPART 1  
:ANALYSIS:FFT1:IPART? ->  
:ANALYSIS:FFT1:IPART 1

#### **:ANALYSIS:FFT<x>:LENGTH**

**Function** Sets the number of FFT points of the FFT computation or queries the current setting.

**Syntax** :ANALYSIS:FFT<x>:LENGTH {<NRf>}  
:ANALYSIS:FFT<x>:LENGTH?  
<x> = 1 or 2  
<NRf> = 2500, 6250, 12500, 25000, 62500, 125000, or 250000

**Example** :ANALYSIS:FFT1:LENGTH 2500  
:ANALYSIS:FFT1:LENGTH? ->  
:ANALYSIS:FFT1:LENGTH 2500

#### **:ANALYSIS:FFT<x>:MAXHOLD**

**Function** Turns ON/OFF the maximum value hold function of the FFT computation or queries the current setting.

**Syntax** :ANALYSIS:FFT<x>:MAXHOLD {<Boolean>}  
:ANALYSIS:FFT<x>:MAXHOLD?  
<x> = 1 or 2

**Example** :ANALYSIS:FFT1:MAXHOLD ON  
:ANALYSIS:FFT1:MAXHOLD? ->  
:ANALYSIS:FFT1:MAXHOLD 1

#### **:ANALYSIS:FFT<x>:MEASURE**

**Function** Queries all settings related to the automated measurement of the FFT computation.

**Syntax** :ANALYSIS:FFT<x>:MEASURE?  
<x> = 1 or 2

**Example** :ANALYSIS:FFT1:MEASURE? ->  
:ANALYSIS:FFT1:MEASURE:MARKER:BASIC:DFREQUENCY:STATE 1;  
:ANALYSIS:FFT1:MEASURE:MARKER:BASIC:DV:STATE 1;  
:ANALYSIS:FFT1:MEASURE:MARKER:BASIC:FREQUENCY1:STATE 1;  
:ANALYSIS:FFT1:MEASURE:MARKER:BASIC:FREQUENCY2:STATE 1;  
:ANALYSIS:FFT1:MEASURE:MARKER:BASIC:POSITION1 1.000E+00;  
:ANALYSIS:FFT1:MEASURE:MARKER:BASIC:POSITION2 2.000E+00;V1:STATE 1;  
:ANALYSIS:FFT1:MEASURE:MARKER:BASIC:V2:STATE 1;  
:ANALYSIS:FFT1:MEASURE:MARKER:CALCULATION:DEFINE1 "V(F1)";DEFINE2 "V(F2)";DEFINE3 "V(F1)";DEFINE4 "V(F2)";STATE1 1;STATE2 1;STATE3 1;STATE4 1;  
:ANALYSIS:FFT1:MEASURE:MODE:MARKER:PEAK:BASIC:DFREQUENCY:STATE 1;  
:ANALYSIS:FFT1:MEASURE:PEAK:BASIC:DV:STATE 1;  
:ANALYSIS:FFT1:MEASURE:PEAK:BASIC:FREQUENCY1:STATE 1;  
:ANALYSIS:FFT1:MEASURE:PEAK:BASIC:FREQUENCY2:STATE 1;  
:ANALYSIS:FFT1:MEASURE:PEAK:BASIC:RANGE1 1.000E+00,0.000E+00;RANGE2 1.000E+00,0.000E+00;V1:STATE 1;  
:ANALYSIS:FFT1:MEASURE:PEAK:BASIC:V2:STATE 1;  
:ANALYSIS:FFT1:MEASURE:PEAK:CALCULATION:DEFINE1 "V(P1)";DEFINE2 "V(P2)";DEFINE3 "V(P1)";DEFINE4 "V(P2)";STATE1 1;STATE2 1;STATE3 1;STATE4 1

**:ANALYSIS:FFT<x>:MEASURE:MARKER?**

Function Queries all settings related to the marker cursor measurement of the FFT computation.

Syntax :ANALYSIS:FFT<x>:MEASURE:MARKER?  
<x> = 1 or 2

Example :ANALYSIS:FFT1:MEASURE:MARKER? ->  
:ANALYSIS:FFT1:MEASURE:MARKER:BASIC:  
DFREQUENCY:STATE 1;  
:ANALYSIS:FFT1:MEASURE:MARKER:BASIC:  
DV:STATE 1;  
:ANALYSIS:FFT1:MEASURE:MARKER:BASIC:  
FREQUENCY1:STATE 1;  
:ANALYSIS:FFT1:MEASURE:MARKER:BASIC:  
FREQUENCY2:STATE 1;  
:ANALYSIS:FFT1:MEASURE:MARKER:BASIC:  
POSITION1 1.000E+00;  
:ANALYSIS:FFT1:MEASURE:MARKER:BASIC:  
POSITION2 2.000E+00;V1:STATE 1;  
:ANALYSIS:FFT1:MEASURE:MARKER:BASIC:  
V2:STATE 1;  
:ANALYSIS:FFT1:MEASURE:MARKER:  
CALCULATION:DEFINE1 "V(F1)";DEFINE2  
"V(F2)";DEFINE3 "V(F1)";DEFINE4  
"V(F2)";STATE1 1;STATE2 1;STATE3  
1;STATE4 1

**:ANALYSIS:FFT<x>:MEASURE:****MARKER[:BASIC]?**

Function Queries all settings related to basic items of the marker cursor of the FFT computation.

Syntax :ANALYSIS:FFT<x>:MEASURE:  
MARKER[:BASIC]?  
<x> = 1 or 2

Example :ANALYSIS:FFT1:MEASURE:MARKER:BASIC? ->  
:ANALYSIS:FFT1:MEASURE:MARKER:BASIC:  
DFREQUENCY:STATE 1;  
:ANALYSIS:FFT1:MEASURE:MARKER:  
BASIC:DV:STATE 1;  
:ANALYSIS:FFT1:MEASURE:MARKER:BASIC:  
FREQUENCY1:STATE 1;  
:ANALYSIS:FFT1:MEASURE:MARKER:BASIC:  
FREQUENCY2:STATE 1;  
:ANALYSIS:FFT1:MEASURE:MARKER:  
BASIC:POSITION1 1.000E+00;  
:ANALYSIS:FFT1:MEASURE:  
MARKER:BASIC:POSITION2  
2.000E+00;V1:STATE 1;  
:ANALYSIS:FFT1:MEASURE:MARKER:  
BASIC:V2:STATE 1

**:ANALYSIS:FFT<x>:MEASURE:****MARKER[:BASIC]:ALL**

Function Turns ON/OFF all basic items of the marker cursor of the FFT computation.

Syntax :ANALYSIS:FFT<x>:MEASURE:  
MARKER[:BASIC]:ALL {<Boolean>}  
<x> = 1 or 2

Example :ANALYSIS:FFT1:MEASURE:MARKER:BASIC:  
ALL ON

**:ANALYSIS:FFT<x>:MEASURE:****MARKER[:BASIC]:DFREQUENCY?**

Function Queries all settings related to the frequency value between marker cursors of the FFT computation.

Syntax :ANALYSIS:FFT<x>:MEASURE:  
MARKER[:BASIC]:DFREQUENCY?  
<x> = 1, 2

Example :ANALYSIS:FFT1:MEASURE:MARKER:BASIC:  
DFREQUENCY? ->  
:ANALYSIS:FFT1:MEASURE:MARKER:BASIC:  
DFREQUENCY:STATE 1

**:ANALYSIS:FFT<x>:MEASURE:****MARKER[:BASIC]:DFREQUENCY:STATE**

Function Turns ON/OFF the frequency value between marker cursors of the FFT computation or queries the current setting.

Syntax :ANALYSIS:FFT<x>:MEASURE:  
MARKER[:BASIC]:DFREQUENCY:  
STATE {<Boolean>}  
:ANALYSIS:FFT<x>:MEASURE:  
MARKER[:BASIC]:DFREQUENCY:STATE?  
<x> = 1, 2

Example :ANALYSIS:FFT1:MEASURE:MARKER:BASIC:  
DFREQUENCY:STATE ON  
:ANALYSIS:FFT1:MEASURE:MARKER:BASIC:  
DFREQUENCY:STATE? ->  
:ANALYSIS:FFT1:MEASURE:MARKER:BASIC:  
DFREQUENCY:STATE 1

**:ANALYSIS:FFT<x>:MEASURE:****MARKER[:BASIC]:DFREQUENCY:VALUE?**

Function Queries the frequency value between marker cursors of the FFT computation.

Syntax :ANALYSIS:FFT<x>:MEASURE:  
MARKER[:BASIC]:DFREQUENCY:VALUE?  
<x> = 1, 2

Example :ANALYSIS:FFT1:MEASURE:MARKER:BASIC:  
DFREQUENCY:VALUE? ->  
:ANALYSIS:FFT1:MEASURE:MARKER:BASIC:  
DFREQUENCY:VALUE 1.000E+00

### 5.3 ANALYSIS Group

#### **:ANALYSIS:FFT<x>:MEASURE:**

##### **MARKER[:BASIC]:DV?**

Function Queries all settings related to the power value between marker cursors of the FFT computation.

Syntax :ANALYSIS:FFT<x>:MEASURE:  
MARKER[:BASIC]:DV?  
<x> = 1 or 2

Example :ANALYSIS:FFT1:MEASURE:MARKER:BASIC:DV?  
-> :ANALYSIS:FFT1:MEASURE:MARKER:BASIC:  
DV:STATE 1

#### **:ANALYSIS:FFT<x>:MEASURE:**

##### **MARKER[:BASIC]:DV:STATE**

Function Turns ON/OFF the power value between marker cursors of the FFT computation or queries the current setting.

Syntax :ANALYSIS:FFT<x>:MEASURE:  
MARKER[:BASIC]:DV:STATE {<Boolean>}  
:ANALYSIS:FFT<x>:MEASURE:  
MARKER[:BASIC]:DV:STATE?  
<x> = 1 or 2

Example :ANALYSIS:FFT1:MEASURE:MARKER:BASIC:DV:  
STATE ON  
:ANALYSIS:FFT1:MEASURE:MARKER:BASIC:DV:  
STATE? -> :ANALYSIS:FFT1:MEASURE:  
MARKER:BASIC:DV:STATE 1

#### **:ANALYSIS:FFT<x>:MEASURE:**

##### **MARKER[:BASIC]:DV:VALUE?**

Function Queries the power value between marker cursors of the FFT computation.

Syntax :ANALYSIS:FFT<x>:MEASURE:  
MARKER[:BASIC]:DV:VALUE?  
<x> = 1 or 2

Example :ANALYSIS:FFT1:MEASURE:MARKER:BASIC:DV:  
VALUE? -> :ANALYSIS:FFT1:MEASURE:  
MARKER:BASIC:DV:VALUE 1.000E+00

#### **:ANALYSIS:FFT<x>:MEASURE:**

##### **MARKER[:BASIC]:FREQUENCY<x>?**

Function Queries all settings related to the frequency value of the marker cursor of the FFT computation.

Syntax :ANALYSIS:FFT<x>:MEASURE:  
MARKER[:BASIC]:FREQUENCY<x>?  
<x> of FFT<x> = 1, 2  
<x> of FREQUENCY<x> = 1, 2

Example :ANALYSIS:FFT1:MEASURE:MARKER:BASIC:  
FREQUENCY1? ->  
:ANALYSIS:FFT1:MEASURE:MARKER:BASIC:  
FREQUENCY1:STATE 1

#### **:ANALYSIS:FFT<x>:MEASURE:**

##### **MARKER[:BASIC]:FREQUENCY<x>:STATE**

Function Turns ON/OFF the frequency value of the marker cursor of the FFT computation or queries the current setting.

Syntax :ANALYSIS:FFT<x>:MEASURE:  
MARKER[:BASIC]:FREQUENCY<x>:  
STATE {<Boolean>}  
:ANALYSIS:FFT<x>:MEASURE:  
MARKER[:BASIC]:FREQUENCY<x>:STATE?  
<x> of FFT<x> = 1, 2  
<x> of FREQUENCY<x> = 1, 2

Example :ANALYSIS:FFT1:MEASURE:MARKER:BASIC:  
FREQUENCY1:STATE ON  
:ANALYSIS:FFT1:MEASURE:MARKER:BASIC:  
FREQUENCY1:STATE? ->  
:ANALYSIS:FFT1:MEASURE:MARKER:BASIC:  
FREQUENCY1:STATE 1

#### **:ANALYSIS:FFT<x>:MEASURE:**

##### **MARKER[:BASIC]:FREQUENCY<x>:VALUE?**

Function Queries the frequency value of the marker cursor of the FFT computation.

Syntax :ANALYSIS:FFT<x>:MEASURE:  
MARKER[:BASIC]:FREQUENCY<x>:VALUE?  
<x> of FFT<x> = 1, 2  
<x> of FREQUENCY<x> = 1, 2

Example :ANALYSIS:FFT1:MEASURE:MARKER:BASIC:  
FREQUENCY1:VALUE? ->  
:ANALYSIS:FFT1:MEASURE:MARKER:BASIC:  
FREQUENCY1:VALUE 1.000E+00

#### **:ANALYSIS:FFT<x>:MEASURE:**

##### **MARKER[:BASIC]:POSITION<x> {<NRf>}**

Function Sets the marker cursor position of the FFT computation or queries the current setting.

Syntax :ANALYSIS:FFT<x>:MEASURE:  
MARKER[:BASIC]:POSITION<x> {<NRf>}  
:ANALYSIS:FFT<x>:MEASURE:  
MARKER[:BASIC]:POSITION<x>?  
<x> of FFT<x> = 1, 2  
<x> of POSITION<x> = 1, 2  
<NRf> = -5 to 5 (div)

Example :ANALYSIS:FFT1:MEASURE:MARKER:BASIC:  
POSITION1 1  
:ANALYSIS:FFT1:MEASURE:MARKER:BASIC:  
POSITION1? ->  
:ANALYSIS:FFT1:MEASURE:MARKER:BASIC:  
POSITION1 1.000E+00

**:ANALYSIS:FFT<x>:MEASURE:****MARKER[:BASIC]:V<x>?**

Function Queries all settings related to the power value of the marker cursor of the FFT computation.

Syntax :ANALYSIS:FFT<x>:MEASURE:  
MARKER[:BASIC]:V<x>?  
<x> of FFT<x> = 1 or 2  
<x> of V<x> = 1 or 2

Example :ANALYSIS:FFT1:MEASURE:MARKER:BASIC:V1?  
-> :ANALYSIS:FFT1:MEASURE:MARKER:  
BASIC:STATE 1

**:ANALYSIS:FFT<x>:MEASURE:****MARKER[:BASIC]:V<x>:STATE**

Function Turns ON/OFF the power value of the marker cursor of the FFT computation or queries the current setting.

Syntax :ANALYSIS:FFT<x>:MEASURE:  
MARKER[:BASIC]:V<x>:STATE {<Boolean>}  
:ANALYSIS:FFT<x>:MEASURE:  
MARKER[:BASIC]:V<x>:STATE?  
<x> of FFT<x> = 1 or 2  
<x> of V<x> = 1 or 2

Example :ANALYSIS:FFT1:MEASURE:MARKER:BASIC:V1:  
STATE ON  
:ANALYSIS:FFT1:MEASURE:MARKER:BASIC:V1:  
STATE? -> :ANALYSIS:FFT1:MEASURE:  
MARKER:BASIC:V1:STATE 1

**:ANALYSIS:FFT<x>:MEASURE:****MARKER[:BASIC]:V<x>:VALUE?**

Function Queries the power value of the marker cursor of the FFT computation.

Syntax :ANALYSIS:FFT<x>:MEASURE:  
MARKER[:BASIC]:V<x>:VALUE?  
<x> of FFT<x> = 1 or 2  
<x> of V<x> = 1 or 2

Example :ANALYSIS:FFT1:MEASURE:MARKER:BASIC:V1:  
VALUE? -> :ANALYSIS:FFT1:MEASURE:  
MARKER:BASIC:V1:VALUE 1.000E+00

**:ANALYSIS:FFT<x>:MEASURE:MARKER:****CALCULATION?**

Function Queries all settings related to calculation items of the marker cursor of the FFT computation.

Syntax :ANALYSIS:FFT<x>:MEASURE:MARKER:  
CALCULATION?  
<x> = 1 or 2

Example :ANALYSIS:FFT1:MEASURE:MARKER:  
CALCULATION? ->  
:ANALYSIS:FFT1:MEASURE:MARKER:  
CALCULATION:DEFINE1 "V(F1)";  
DEFINE2 "V(F2)";DEFINE3 "V(F1)";D  
EFINE4 "V(F2)";STATE1 1;STATE2 1;  
STATE3 1;STATE4 1

**:ANALYSIS:FFT<x>:MEASURE:MARKER:****CALCULATION:ALL**

Function Turns ON/OFF all calculation items of the marker cursor of the FFT computation.

Syntax :ANALYSIS:FFT<x>:MEASURE:MARKER:  
CALCULATION:ALL {<Boolean>}  
<x> = 1 or 2

Example :ANALYSIS:FFT1:MEASURE:MARKER:  
CALCULATION:ALL ON

**:ANALYSIS:FFT<x>:MEASURE:MARKER:****CALCULATION:DEFINE<x>**

Function Sets the equation of the calculation items of the marker cursor of the FFT computation or queries the current setting.

Syntax :ANALYSIS:FFT<x>:MEASURE:MARKER:  
CALCULATION:DEFINE<x> {<String>}  
:ANALYSIS:FFT<x>:MEASURE:MARKER:  
CALCULATION:DEFINE<x>?  
<x> of FFT<x> = 1 or 2  
<x> of DEFINE<x> = 1 to 4  
<String> = Up to 128 characters

Example :ANALYSIS:FFT1:MEASURE:MARKER:  
CALCULATION:DEFINE1 "V(F1)"  
:ANALYSIS:FFT1:MEASURE:MARKER:  
CALCULATION:DEFINE1? ->  
:ANALYSIS:FFT1:MEASURE:MARKER:  
CALCULATION:DEFINE1 "V(F1)"

**:ANALYSIS:FFT<x>:MEASURE:MARKER:****CALCULATION:STATE<x>**

Function Turns ON/OFF the calculation items of the marker cursor of the FFT computation or queries the current setting.

Syntax :ANALYSIS:FFT<x>:MEASURE:MARKER:C  
ALCULATION:STATE<x> {<Boolean>}  
:ANALYSIS:FFT<x>:MEASURE:MARKER:  
CALCULATION:STATE<x>?  
<x> of FFT<x> = 1 or 2  
<x> of STATE<x> = 1 to 4

Example :ANALYSIS:FFT1:MEASURE:MARKER:  
CALCULATION:STATE1 ON  
:ANALYSIS:FFT1:MEASURE:MARKER:  
CALCULATION:STATE1? ->  
:ANALYSIS:FFT1:MEASURE:MARKER:  
CALCULATION:STATE1 1



### 5.3 ANALYSIS Group

#### **:ANALYSIS:FFT<x>:MEASURE:MARKER: CALCULATION:VALUE<x>?**

Function Queries the measured value of the calculation items of the marker cursor of the FFT computation.

Syntax :ANALYSIS:FFT<x>:MEASURE:MARKER:  
CALCULATION:VALUE<x>?  
<x> of FFT<x> = 1 or 2  
<x> of VALUE<x> = 1 to 4

Example :ANALYSIS:FFT1:MEASURE:MARKER:  
CALCULATION:VALUE1? ->  
:ANALYSIS:FFT1:MEASURE:MARKER:  
CALCULATION:VALUE1 1.000E+00

#### **:ANALYSIS:FFT<x>:MEASURE:MODE**

Function Sets the automated measurement mode of the FFT computation or queries the current setting.

Syntax :ANALYSIS:FFT<x>:MEASURE:MODE {MARKER |  
OFF | PEAK}  
:ANALYSIS:FFT<x>:MEASURE:MODE?  
<x> = 1 or 2

Example :ANALYSIS:FFT1:MEASURE:MODE MARKER  
:ANALYSIS:FFT1:MEASURE:MODE? ->  
:ANALYSIS:FFT1:MEASURE:MODE MARKER

#### **:ANALYSIS:FFT<x>:MEASURE:PEAK?**

Function Queries all settings related to the peak value measurement of the FFT computation.

Syntax :ANALYSIS:FFT<x>:MEASURE:PEAK?  
<x> = 1 or 2

Example :ANALYSIS:FFT1:MEASURE:PEAK? ->  
:ANALYSIS:FFT1:MEASURE:PEAK: BASIC:  
DFREQUENCY:STATE 1;:ANALYSIS:FFT1:  
MEASURE:PEAK: BASIC:DV:STATE 1;;  
ANALYSIS:FFT1:MEASURE:PEAK: BASIC:  
FREQUENCY1:STATE 1;:ANALYSIS:FFT1:  
MEASURE:PEAK: BASIC:FREQUENCY2:STATE 1;;  
ANALYSIS:FFT1:MEASURE:PEAK: BASIC:  
RANGE1 1.000E+00,0.000E+00;  
RANGE2 1.000E+00,0.000E+00;V1:STATE 1;;  
ANALYSIS:FFT1:MEASURE:PEAK: BASIC:V2:  
STATE 1;:ANALYSIS:FFT1:MEASURE:PEAK:  
CALCULATION:DEFINE1 "V(P1)";  
DEFINE2 "V(P2)";DEFINE3 "V(P1)";  
DEFINE4 "V(P2)";STATE1 1;STATE2 1;  
STATE3 1;STATE4 1

#### **:ANALYSIS:FFT<x>:MEASURE: PEAK[:BASIC]?**

Function Queries all settings related to basic items of the peak value of the FFT computation.

Syntax :ANALYSIS:FFT<x>:MEASURE:PEAK[:BASIC]?  
<x> = 1 or 2

Example :ANALYSIS:FFT1:MEASURE:PEAK: BASIC? ->  
:ANALYSIS:FFT1:MEASURE:PEAK: BASIC:  
DFREQUENCY:STATE 1;:ANALYSIS:FFT1:  
MEASURE:PEAK: BASIC:DV:STATE 1;;  
ANALYSIS:FFT1:MEASURE:PEAK: BASIC:  
FREQUENCY1:STATE 1;:ANALYSIS:FFT1:  
MEASURE:PEAK: BASIC:FREQUENCY2:STATE  
1;;  
ANALYSIS:FFT1:MEASURE:PEAK: BASIC:  
RANGE1 1.000E+00,0.000E+00;  
RANGE2 1.000E+00,0.000E+00;V1:  
STATE 1;:ANALYSIS:FFT1:MEASURE:PEAK:  
BASIC:V2:STATE 1

#### **:ANALYSIS:FFT<x>:MEASURE: PEAK[:BASIC]:ALL**

Function Turns ON/OFF all basic items of the peak value of the FFT computation.

Syntax :ANALYSIS:FFT<x>:MEASURE:  
PEAK[:BASIC]:ALL {<Boolean>}  
<x> = 1 or 2

Example :ANALYSIS:FFT1:MEASURE:PEAK: BASIC:  
ALL ON

#### **:ANALYSIS:FFT<x>:MEASURE: PEAK[:BASIC]:DFREQUENCY?**

Function Queries all settings related to the frequency value between peak values of the FFT computation.

Syntax :ANALYSIS:FFT<x>:MEASURE:PEAK[:BASIC]:  
DFREQUENCY?  
<x> = 1 or 2

Example :ANALYSIS:FFT1:MEASURE:PEAK: BASIC:  
DFREQUENCY? ->  
:ANALYSIS:FFT1:MEASURE:PEAK: BASIC:  
DFREQUENCY:STATE 1

**:ANALYSIS:FFT<x>:MEASURE:****PEAK[:BASIC]:DFREQUENCY:STATE**

Function Turns ON/OFF the frequency value between peak values of the FFT computation or queries the current setting.

Syntax :ANALYSIS:FFT<x>:MEASURE:PEAK[:BASIC]:DFREQUENCY:STATE {<Boolean>}  
:ANALYSIS:FFT<x>:MEASURE:PEAK[:BASIC]:DFREQUENCY:STATE?  
<x> = 1 or 2

Example :ANALYSIS:FFT1:MEASURE:PEAK:BASIC:DFREQUENCY:STATE ON  
:ANALYSIS:FFT1:MEASURE:PEAK:BASIC:DFREQUENCY:STATE? ->  
:ANALYSIS:FFT1:MEASURE:PEAK:BASIC:DFREQUENCY:STATE 1

**:ANALYSIS:FFT<x>:MEASURE:****PEAK[:BASIC]:DFREQUENCY:VALUE?**

Function Queries the frequency value between peak values of the FFT computation.

Syntax :ANALYSIS:FFT<x>:MEASURE:PEAK[:BASIC]:DFREQUENCY:VALUE?  
<x> = 1 or 2

Example :ANALYSIS:FFT1:MEASURE:PEAK:BASIC:DFREQUENCY:VALUE? ->  
:ANALYSIS:FFT1:MEASURE:PEAK:BASIC:DFREQUENCY:VALUE 1.000E+00

**:ANALYSIS:FFT<x>:MEASURE:****PEAK[:BASIC]:DV?**

Function Queries all settings related to the power value between peak values of the FFT computation.

Syntax :ANALYSIS:FFT<x>:MEASURE:PEAK[:BASIC]:DV?  
<x> = 1 or 2

Example :ANALYSIS:FFT1:MEASURE:PEAK:BASIC:DV? ->  
:ANALYSIS:FFT1:MEASURE:PEAK:BASIC:DV:STATE 1

**:ANALYSIS:FFT<x>:MEASURE:****PEAK[:BASIC]:DV:STATE**

Function Turns ON/OFF the power value between peak values of the FFT computation or queries the current setting.

Syntax :ANALYSIS:FFT<x>:MEASURE:PEAK[:BASIC]:DV:STATE {<Boolean>}  
:ANALYSIS:FFT<x>:MEASURE:PEAK[:BASIC]:DV:STATE?  
<x> = 1 or 2

Example :ANALYSIS:FFT1:MEASURE:PEAK:BASIC:DV:STATE ON  
:ANALYSIS:FFT1:MEASURE:PEAK:BASIC:DV:STATE? ->  
:ANALYSIS:FFT1:MEASURE:PEAK:BASIC:DV:STATE 1

**:ANALYSIS:FFT<x>:MEASURE:****PEAK[:BASIC]:DV:VALUE?**

Function Queries the power value between peak values of the FFT computation.

Syntax :ANALYSIS:FFT<x>:MEASURE:PEAK[:BASIC]:DV:VALUE?  
<x> = 1 or 2

Example :ANALYSIS:FFT1:MEASURE:PEAK:BASIC:DV:VALUE? ->  
:ANALYSIS:FFT1:MEASURE:PEAK:BASIC:DV:VALUE 1.000E+00

**:ANALYSIS:FFT<x>:MEASURE:****PEAK[:BASIC]:FREQUENCY<x>?**

Function Queries all settings related to the peak frequency value of the FFT computation.

Syntax :ANALYSIS:FFT<x>:MEASURE:PEAK[:BASIC]:FREQUENCY<x>?  
<x> of FFT<x> = 1 or 2  
<x> of FREQUENCY<x> = 1 or 2

Example :ANALYSIS:FFT1:MEASURE:PEAK:BASIC:FREQUENCY1? ->  
:ANALYSIS:FFT1:MEASURE:PEAK:BASIC:FREQUENCY1:STATE 1

**:ANALYSIS:FFT<x>:MEASURE:****PEAK[:BASIC]:FREQUENCY<x>:STATE**

Function Turns ON/OFF the peak frequency value of the FFT computation or queries the current setting.

Syntax :ANALYSIS:FFT<x>:MEASURE:PEAK[:BASIC]:FREQUENCY<x>:STATE {<Boolean>}  
:ANALYSIS:FFT<x>:MEASURE:PEAK[:BASIC]:FREQUENCY<x>:STATE?  
<x> of FFT<x> = 1 or 2  
<x> of FREQUENCY<x> = 1 or 2

Example :ANALYSIS:FFT1:MEASURE:PEAK:BASIC:FREQUENCY1:STATE ON  
:ANALYSIS:FFT1:MEASURE:PEAK:BASIC:FREQUENCY1:STATE? ->  
:ANALYSIS:FFT1:MEASURE:PEAK:BASIC:FREQUENCY1:STATE 1

**:ANALYSIS:FFT<x>:MEASURE:****PEAK[:BASIC]:FREQUENCY<x>:VALUE?**

Function Queries the peak frequency value of the FFT computation.

Syntax :ANALYSIS:FFT<x>:MEASURE:PEAK[:BASIC]:FREQUENCY<x>:VALUE?  
<x> of FFT<x> = 1 or 2  
<x> of FREQUENCY<x> = 1 or 2

Example :ANALYSIS:FFT1:MEASURE:PEAK:BASIC:FREQUENCY1:VALUE? ->  
:ANALYSIS:FFT1:MEASURE:PEAK:BASIC:FREQUENCY1:VALUE 1.000E+00

### 5.3 ANALysis Group

#### **:ANALysis:FFT<x>:MEASure:**

##### **PEAK[:BASic]:RANGe<x>**

Function Sets the measurement range of the peak value of the FFT computation or queries the current setting.

Syntax :ANALysis:FFT<x>:MEASure:PEAK[:BASic]:  
RANGe<x> {<Nrf>,<Nrf>}  
:ANALysis:FFT<x>:MEASure:PEAK[:BASic]:  
RANGe<x>?  
<x> of FFT<x> = 1 or 2  
<x> of RANGe<x> = 1 or 2  
<Nrf> = -5 to 5 div

Example :ANALYSIS:FFT1:MEASURE:PEAK:BASIC:  
RANGE1 0,1  
:ANALYSIS:FFT1:MEASURE:PEAK:BASIC:  
RANGE1? -> :ANALYSIS:FFT1:MEASURE:  
PEAK:BASIC:RANGE1 1.000E+00,0.000E+00

#### **:ANALysis:FFT<x>:MEASure:**

##### **PEAK[:BASic]:V<x>?**

Function Queries all settings related to the peak value of the FFT computation.

Syntax :ANALysis:FFT<x>:MEASure:PEAK[:BASic]:  
V<x>?  
<x> of FFT<x> = 1 or 2  
<x> of V<x> = 1 or 2

Example :ANALYSIS:FFT1:MEASURE:PEAK:BASIC:V1?  
-> :ANALYSIS:FFT1:MEASURE:PEAK:BASIC:  
V1:STATE 1

#### **:ANALysis:FFT<x>:MEASure:**

##### **PEAK[:BASic]:V<x>:STATe**

Function Turns ON/OFF the peak value of the FFT computation or queries the current setting.

Syntax :ANALysis:FFT<x>:MEASure:PEAK[:BASic]:  
V<x>:STATe {<Boolean>}  
:ANALysis:FFT<x>:MEASure:PEAK[:BASic]:  
V<x>:STATe?  
<x> of FFT<x> = 1 or 2  
<x> of V<x> = 1 or 2

Example :ANALYSIS:FFT1:MEASURE:PEAK:BASIC:V1:  
STATE ON  
:ANALYSIS:FFT1:MEASURE:PEAK:BASIC:V1:  
STATE? -> :ANALYSIS:FFT1:MEASURE:PEAK:  
BASIC:V1:STATE 1

#### **:ANALysis:FFT<x>:MEASure:**

##### **PEAK[:BASic]:V<x>:VALue?**

Function Queries the peak value of the FFT computation.

Syntax :ANALysis:FFT<x>:MEASure:PEAK[:BASic]:  
V<x>:VALue?  
<x> of FFT<x> = 1 or 2  
<x> of V<x> = 1 or 2

Example :ANALYSIS:FFT1:MEASURE:PEAK:BASIC:V1:  
VALUE? -> :ANALYSIS:FFT1:MEASURE:PEAK:  
BASIC:V1:VALUE 1.000E+00

#### **:ANALysis:FFT<x>:MEASure:PEAK:**

##### **CALCulation?**

Function Queries all settings related to calculation items of the FFT computation.

Syntax :ANALysis:FFT<x>:MEASure:PEAK:  
CALCulation?  
<x> = 1 or 2

Example :ANALYSIS:FFT1:MEASURE:PEAK:  
CALCULATION? -> :ANALYSIS:FFT1:MEASURE:  
PEAK:CALCULATION:DEFINE1 "V(P1)";  
DEFINE2 "V(P2)";DEFINE3 "V(P1)";  
DEFINE4 "V(P2)";STATE1 1;STATE2 1;  
STATE3 1;STATE4 1

#### **:ANALysis:FFT<x>:MEASure:PEAK:**

##### **CALCulation:ALL**

Function Turns ON/OFF all calculation items of the FFT computation.

Syntax :ANALysis:FFT<x>:MEASure:PEAK:  
CALCulation:ALL {<Boolean>}  
<x> = 1 or 2

Example :ANALYSIS:FFT1:MEASURE:PEAK:  
CALCULATION:ALL ON

#### **:ANALysis:FFT<x>:MEASure:PEAK:**

##### **CALCulation:DEFine<x>**

Function Sets the equation of the calculation item of the FFT computation or queries the current setting.

Syntax :ANALysis:FFT<x>:MEASure:PEAK:  
CALCulation:DEFine<x> {<String>}  
:ANALysis:FFT<x>:MEASure:PEAK:  
CALCulation:DEFine<x>?  
<x> of FFT<x> = 1 or 2  
<x> of DEFine<x> = 1 to 4  
<String> = Up to 128 characters

Example :ANALYSIS:FFT1:MEASURE:PEAK:  
CALCULATION:DEFINE1 "V(P1)"  
:ANALYSIS:FFT1:MEASURE:PEAK:  
CALCULATION:DEFINE1? ->  
:ANALYSIS:FFT1:MEASURE:PEAK:  
CALCULATION:DEFINE1 "V(P1)"

**:ANALYSIS:FFT<x>:MEASURE:PEAK:****CALCULATION:STATE<x>**

Function Turns ON/OFF the calculation items of the FFT computation or queries the current setting.

Syntax :ANALYSIS:FFT<x>:MEASURE:PEAK:  
CALCULATION:STATE<x> {<Boolean>}  
:ANALYSIS:FFT<x>:MEASURE:PEAK:  
CALCULATION:STATE<x>?  
<x> of FFT<x> = 1 or 2  
<x> of STATE<x> = 1 to 4

Example :ANALYSIS:FFT1:MEASURE:PEAK:  
CALCULATION:STATE1 ON  
:ANALYSIS:FFT1:MEASURE:PEAK:  
CALCULATION:STATE1? ->  
:ANALYSIS:FFT1:MEASURE:PEAK:  
CALCULATION:STATE1 1

**:ANALYSIS:FFT<x>:MEASURE:PEAK:****CALCULATION:VALUE<x>?**

Function Queries the measured value of the calculation item of the FFT computation.

Syntax :ANALYSIS:FFT<x>:MEASURE:PEAK:  
CALCULATION:VALUE<x>?  
<x> of FFT<x> = 1 or 2  
<x> of VALUE<x> = 1 to 4

Example :ANALYSIS:FFT1:MEASURE:PEAK:  
CALCULATION:VALUE1? ->  
:ANALYSIS:FFT1:MEASURE:PEAK:  
CALCULATION:VALUE1 1.000E+00

**:ANALYSIS:FFT<x>:RANGE**

Function Sets the measurement source window used in the FFT computation or queries the current setting.

Syntax :ANALYSIS:FFT<x>:RANGE {MAIN|Z1|Z2}  
:ANALYSIS:FFT<x>:RANGE?  
<x> = 1 or 2

Example :ANALYSIS:FFT1:RANGE MAIN  
:ANALYSIS:FFT1:RANGE? ->  
:ANALYSIS:FFT1:RANGE MAIN

**:ANALYSIS:FFT<x>:RPART (Real Part)**

Function Sets the source trace of the real part of the FFT computation or queries the current setting.

Syntax :ANALYSIS:FFT<x>:RPART {<NRf>}  
:ANALYSIS:FFT<x>:RPART?  
<x> = 1 or 2  
<NRf> = 1 to 8

Example :ANALYSIS:FFT1:RPART 1  
:ANALYSIS:FFT1:RPART? ->  
:ANALYSIS:FFT1:RPART 1

**:ANALYSIS:FFT<x>:RPOSITION****(Ref Position)**

Function Sets the center point of magnification of the vertical axis of the FFT computation or queries the current setting.

Syntax :ANALYSIS:FFT<x>:RPOSITION {<NRf>}  
:ANALYSIS:FFT<x>:RPOSITION?  
<x> = 1 or 2  
<NRf> = -4 to 4 (div)

Example :ANALYSIS:FFT1:RPOSITION 1  
:ANALYSIS:FFT1:RPOSITION? ->  
:ANALYSIS:FFT1:RPOSITION 1.000E+00

**:ANALYSIS:FFT<x>:VERTICAL?**

Function Queries all settings related the vertical axis of the FFT computation.

Syntax :ANALYSIS:FFT<x>:VERTICAL?  
<x> = 1 or 2

Example :ANALYSIS:FFT1:VERTICAL? ->  
:ANALYSIS:FFT1:VERTICAL:  
LEVEL 1.000E+00;MODE AUTO;  
SENSITIVITY 1.000E+00

**:ANALYSIS:FFT<x>:VERTICAL:LEVEL**

Function Sets the display position of the vertical axis of the FFT computation or queries the current setting.

Syntax :ANALYSIS:FFT<x>:VERTICAL:LEVEL {<NRf>}  
:ANALYSIS:FFT<x>:VERTICAL:LEVEL?  
<x> = 1 or 2  
<NRf> = -1.000E+31 to 1.000E+31 (dBV)

Example :ANALYSIS:FFT1:VERTICAL:LEVEL 1  
:ANALYSIS:FFT1:VERTICAL:LEVEL? ->  
:ANALYSIS:FFT1:VERTICAL:LEVEL 1.000E+00

**:ANALYSIS:FFT<x>:VERTICAL:MODE**

Function Sets the vertical axis mode of the FFT computation or queries the current setting.

Syntax :ANALYSIS:FFT<x>:VERTICAL:MODE {AUTO|  
MANUAL}  
:ANALYSIS:FFT<x>:VERTICAL:MODE?  
<x> = 1 or 2

Example :ANALYSIS:FFT1:VERTICAL:MODE AUTO  
:ANALYSIS:FFT1:VERTICAL:MODE? ->  
:ANALYSIS:FFT1:VERTICAL:MODE AUTO

### 5.3 ANALysis Group

#### **:ANALysis:FFT<x>:VERTical:**

##### **SENSitivity**

Function Sets the vertical sensitivity of the FFT computation or queries the current setting.

Syntax :ANALysis:FFT<x>:VERTical:SENSitivity {<Nrf>}  
:ANALysis:FFT<x>:VERTical:SENSitivity?  
<x> = 1 or 2  
<Nrf> = 0 to 1.000E+31 (dBV)

Example :ANALYSIS:FFT1:VERTICAL:SENSITIVITY 1  
:ANALYSIS:FFT1:VERTICAL:SENSITIVITY? ->  
:ANALYSIS:FFT1:VERTICAL:SENSITIVITY  
1.000E+00

#### **:ANALysis:FFT<x>:WINDow**

Function Sets the window function of the FFT computation or queries the current setting.

Syntax :ANALysis:FFT<x>:WINDow {FLATtop|  
HANNing|RECTangle}  
:ANALysis:FFT<x>:WINDow?  
<x> = 1 or 2

Example :ANALYSIS:FFT1:WINDOW FLATTOP  
:ANALYSIS:FFT1:WINDOW? ->  
:ANALYSIS:FFT1:WINDOW FLATTOP

#### **:ANALysis:TYPE<x>**

Function Sets the analysis function type or queries the current setting.

Syntax :ANALysis:TYPE<x> {AHISTogram|FFT|  
WPARAMeter|XY}  
:ANALysis:TYPE<x>?  
<x> = 1 or 2

Example :ANALYSIS:TYPE1 AHISTOGRAM  
:ANALYSIS:TYPE1? ->  
:ANALYSIS:TYPE1 AHISTOGRAM

#### **:ANALysis:VTDisplay**

Function Turns ON/OFF the VT waveform display or queries the current setting.

Syntax :ANALysis:VTDisplay {<Boolean>}  
:ANALysis:VTDisplay?

Example :ANALYSIS:VTDISPLAY ON  
:ANALYSIS:VTDISPLAY? ->  
:ANALYSIS:VTDISPLAY 1

#### **:ANALysis:WAIT<x>?**

Function Waits for the completion of the automated measurement with a timeout option.

Syntax ANALysis:WAIT<x>? {<Nrf>}  
<x> = 1 or 2  
<Nrf> = 1 to 360000 (timeout value, in units of 10 ms)

Example ANALYSIS:WAIT1? 100 ->:ANALYSIS:WAIT1 1

Description If the execution of the automated measurement completes within the timeout value, 0 is returned; if it is not complete or automated measurement is not being executed, 1 is returned. Even if the timeout value is set long, 0 is returned when the execution of the automated measurement is complete.

#### **:ANALysis:WPARAMeter<x>?**

Function Queries all settings related to the waveform parameter measurement function.

Syntax :ANALysis:WPARAMeter<x>?  
<x> = 1 or 2

Example :ANALYSIS:WPARAMETER1? ->  
:ANALYSIS:WPARAMETER1:CALCULATION 1;  
HISTOGRAM:MEASURE:MODE CURSOR;  
CURSOR:C1:POSITION 1.000E+00;STATE 1;  
:ANALYSIS:WPARAMETER1:HISTOGRAM:  
MEASURE:CURSOR:C2:  
POSITION 2.000E+00;STATE 1;  
:ANALYSIS:WPARAMETER1:HISTOGRAM:  
MEASURE:CURSOR:DC:STATE 1;  
:ANALYSIS:WPARAMETER1:HISTOGRAM:  
MEASURE:CURSOR:LINKAGE 1;  
:ANALYSIS:WPARAMETER1:HISTOGRAM:  
MEASURE:PARAMETER:MEAN:STATE 1;  
:ANALYSIS:WPARAMETER1:HISTOGRAM:  
MEASURE:PARAMETER:PEAK:STATE 1;  
:ANALYSIS:WPARAMETER1:HISTOGRAM:  
MEASURE:PARAMETER:SD3INTEG:STATE 1;  
:ANALYSIS:WPARAMETER1:HISTOGRAM:  
MEASURE:PARAMETER:SDEVIATION:STATE 1;  
:ANALYSIS:WPARAMETER1:HISTOGRAM:  
MEASURE:PARAMETER:SDINTEG:STATE 1;  
:ANALYSIS:WPARAMETER1:LIST:SCROLL  
HORIZONTAL;:ANALYSIS:WPARAMETER1:  
MODE HISTOGRAM;TREND:HSPAN 1;  
MEASURE:CURSOR:C1:POSITION 1.000E+00;  
STATE 1;  
:ANALYSIS:WPARAMETER1:TREND:MEASURE:  
CURSOR:C2:POSITION 2.000E+00;STATE 1;  
:ANALYSIS:WPARAMETER1:TREND:MEASURE:  
CURSOR:DC:STATE 1;  
:ANALYSIS:WPARAMETER1:TREND:MEASURE:  
MODE CURSOR;  
:ANALYSIS:WPARAMETER1:TREND:  
VERTICAL 2.000E+00,1.000E+00

**:ANALysis:WPARAMeter<x>:CALCulation**

Function Sets the calculation items of the automated measurement of waveform parameters or queries the current setting.

Syntax :ANALysis:WPARAMeter<x>:CALCulation  
{<NRf>}  
:ANALysis:WPARAMeter<x>:CALCulation?  
<x> = 1 or 2  
<NRf> = 1 to 4

Example :ANALYSIS:WPARAMETER1:CALCULATION 1  
:ANALYSIS:WPARAMETER1:CALCULATION? ->  
:ANALYSIS:WPARAMETER1:CALCULATION 1

**:ANALysis:WPARAMeter<x>:HISTogram?**

Function Queries all settings related to the histogram display of the waveform parameter measurement.

Syntax :ANALysis:WPARAMeter<x>:HISTogram?  
<x> = 1 or 2

Example :ANALYSIS:WPARAMETER1:HISTOGRAM? ->  
:ANALYSIS:WPARAMETER1:HISTOGRAM:  
MEASURE:MODE CURSOR;CURSOR:C1:  
POSITION 1.000E+00;STATE 1;  
:ANALYSIS:WPARAMETER1:HISTOGRAM:  
MEASURE:CURSOR:C2:  
POSITION 2.000E+00;STATE 1;  
:ANALYSIS:WPARAMETER1:HISTOGRAM:  
MEASURE:CURSOR:DC:STATE 1;  
:ANALYSIS:WPARAMETER1:HISTOGRAM:  
MEASURE:CURSOR:LINKAGE 1;  
:ANALYSIS:WPARAMETER1:HISTOGRAM:  
MEASURE:PARAMETER:MEAN:STATE 1;  
:ANALYSIS:WPARAMETER1:HISTOGRAM:  
MEASURE:PARAMETER:PEAK:STATE 1;  
:ANALYSIS:WPARAMETER1:HISTOGRAM:  
MEASURE:PARAMETER:SD3INTEG:STATE 1;  
:ANALYSIS:WPARAMETER1:HISTOGRAM:  
MEASURE:PARAMETER:SDEVIATION:STATE 1;  
:ANALYSIS:WPARAMETER1:HISTOGRAM:  
MEASURE:PARAMETER:SDINTEG:STATE 1

**:ANALysis:WPARAMeter<x>:HISTogram:  
MEASure?**

Function Queries all settings related to the automated measurement of the histogram display of the waveform parameter measurement.

Syntax :ANALysis:WPARAMeter<x>:HISTogram:  
MEASure?  
<x> = 1 or 2

Example :ANALYSIS:WPARAMETER1:HISTOGRAM:  
MEASURE? ->  
:ANALYSIS:WPARAMETER1:HISTOGRAM:  
MEASURE:MODE CURSOR;CURSOR:C1:  
POSITION 1.000E+00;STATE 1;  
:ANALYSIS:WPARAMETER1:HISTOGRAM:  
MEASURE:CURSOR:C2:POSITION 2.000E+00;  
STATE 1;  
:ANALYSIS:WPARAMETER1:HISTOGRAM:  
MEASURE:CURSOR:DC:STATE 1;  
:ANALYSIS:WPARAMETER1:HISTOGRAM:  
MEASURE:CURSOR:LINKAGE 1;  
:ANALYSIS:WPARAMETER1:HISTOGRAM:  
MEASURE:PARAMETER:MEAN:STATE 1;  
:ANALYSIS:WPARAMETER1:HISTOGRAM:  
MEASURE:PARAMETER:PEAK:STATE 1;  
:ANALYSIS:WPARAMETER1:HISTOGRAM:  
MEASURE:PARAMETER:SD3INTEG:STATE 1;  
:ANALYSIS:WPARAMETER1:HISTOGRAM:  
MEASURE:PARAMETER:SDEVIATION:STATE 1;  
:ANALYSIS:WPARAMETER1:HISTOGRAM:  
MEASURE:PARAMETER:SDINTEG:STATE 1

**:ANALysis:WPARAMeter<x>:HISTogram:  
MEASure:CURSor?**

Function Queries all settings related to the cursor measurement on the histogram of the waveform parameter measurement.

Syntax :ANALysis:WPARAMeter<x>:HISTogram:  
MEASure:CURSor?  
<x> = 1, 2

Example :ANALYSIS:WPARAMETER1:HISTOGRAM:  
MEASURE:CURSOR? ->  
:ANALYSIS:WPARAMETER1:HISTOGRAM:  
MEASURE:CURSOR:C1:POSITION 1.000E+00;  
STATE 1;  
:ANALYSIS:WPARAMETER1:HISTOGRAM:  
MEASURE:CURSOR:C2:POSITION 2.000E+00;  
STATE 1;  
:ANALYSIS:WPARAMETER1:HISTOGRAM:  
MEASURE:CURSOR:DC:STATE 1;  
:ANALYSIS:WPARAMETER1:HISTOGRAM:  
MEASURE:CURSOR:LINKAGE 1

### 5.3 ANALYSIS Group

#### **:ANALYSIS:WPARAMETER<x>:HISTOGRAM:**

##### **MEASURE:Cursors:ALL**

Function Turns ON/OFF all histogram cursors of waveform parameter measurement.

Syntax :ANALYSIS:WPARAMETER<x>:HISTOGRAM:  
MEASURE:Cursors:ALL {<Boolean>}  
<x> = 1, 2

Example :ANALYSIS:WPARAMETER1:HISTOGRAM:  
MEASURE:Cursors:ALL ON

#### **:ANALYSIS:WPARAMETER<x>:HISTOGRAM:**

##### **MEASURE:Cursors:C<x>?**

Function Queries all settings related to the cursor measurement on the histogram of the waveform parameter measurement.

Syntax :ANALYSIS:WPARAMETER<x>:HISTOGRAM:  
MEASURE:Cursors:C<x>?  
<x> of WPARAMETER<x> = 1, 2  
<x> of C<x> = 1, 2

Example :ANALYSIS:WPARAMETER1:HISTOGRAM:  
MEASURE:Cursors:C1? ->  
:ANALYSIS:WPARAMETER1:HISTOGRAM:  
MEASURE:Cursors:C1:POSITION 1.000E+00;  
STATE 1

#### **:ANALYSIS:WPARAMETER<x>:HISTOGRAM:**

##### **MEASURE:Cursors:C<x>:POSITION**

Function Sets the cursor position on the trend of the waveform parameter measurement or queries the current setting.

Syntax :ANALYSIS:WPARAMETER<x>:HISTOGRAM:  
MEASURE:PARAMETER:C<x>:POSITION {<NRf>}  
:ANALYSIS:WPARAMETER<x>:HISTOGRAM:  
MEASURE:PARAMETER:C<x>:POSITION?  
<x> of WPARAMETER<x> = 1, 2  
<x> of C<x> = 1, 2  
<NRf> = -5 to 5 (div)

Example :ANALYSIS:WPARAMETER1:HISTOGRAM:  
MEASURE:Cursors:C1:POSITION ON  
:ANALYSIS:WPARAMETER1:HISTOGRAM:  
MEASURE:Cursors:C1:POSITION? ->  
:ANALYSIS:WPARAMETER1:HISTOGRAM:  
MEASURE:Cursors:C1:POSITION 1.000E+00

#### **:ANALYSIS:WPARAMETER<x>:HISTOGRAM:**

##### **MEASURE:Cursors:C<x>:STATE**

Function Turns ON/OFF the cursor on the histogram of the waveform parameter measurement or queries the current setting.

Syntax :ANALYSIS:WPARAMETER<x>:HISTOGRAM:  
MEASURE:PARAMETER:C<x>:  
STATE {<Boolean>}  
:ANALYSIS:WPARAMETER<x>:HISTOGRAM:  
MEASURE:PARAMETER:C<x>:STATE?  
<x> of WPARAMETER<x> = 1, 2  
<x> of C<x> = 1, 2

Example :ANALYSIS:WPARAMETER1:HISTOGRAM:  
MEASURE:Cursors:C1:STATE ON  
:ANALYSIS:WPARAMETER1:HISTOGRAM:  
MEASURE:Cursors:C1:STATE? ->  
:ANALYSIS:WPARAMETER1:HISTOGRAM:  
MEASURE:Cursors:C1:STATE 1

#### **:ANALYSIS:WPARAMETER<x>:HISTOGRAM:**

##### **MEASURE:Cursors:C<x>:VALUE?**

Function Queries the measured value of the cursor on the histogram of the waveform parameter measurement.

Syntax :ANALYSIS:WPARAMETER<x>:HISTOGRAM:  
MEASURE:Cursors:C<x>:VALUE?  
<x> of WPARAMETER<x> = 1, 2  
<x> of C<x> = 1, 2

Example :ANALYSIS:WPARAMETER1:HISTOGRAM:  
MEASURE:Cursors:C1:VALUE? ->  
:ANALYSIS:WPARAMETER1:HISTOGRAM:  
MEASURE:Cursors:C1:VALUE 1.000E+00

#### **:ANALYSIS:WPARAMETER<x>:HISTOGRAM:**

##### **MEASURE:Cursors:DC?**

Function Queries all settings related to the measurement between cursors on the histogram of the waveform parameter measurement.

Syntax :ANALYSIS:WPARAMETER<x>:HISTOGRAM:  
MEASURE:Cursors:DC?  
<x> = 1, 2

Example :ANALYSIS:WPARAMETER1:HISTOGRAM:  
MEASURE:Cursors:DC? ->  
:ANALYSIS:WPARAMETER1:HISTOGRAM:  
MEASURE:Cursors:DC:STATE 1

**:ANALYSIS:WPARAMETER<x>:HISTOGRAM:****MEASURE:CURSOR:DC:STATE**

Function Turns ON/OFF the measurement between cursors on the histogram of the waveform parameter measurement or queries the current setting.

Syntax :ANALYSIS:WPARAMETER<x>:HISTOGRAM:  
MEASURE:PARAMETER:DC:STATE {<Boolean>}  
:ANALYSIS:WPARAMETER<x>:HISTOGRAM:  
MEASURE:PARAMETER:DC:STATE?  
<x> = 1, 2

Example :ANALYSIS:WPARAMETER1:HISTOGRAM:  
MEASURE:CURSOR:DC:STATE ON  
:ANALYSIS:WPARAMETER1:HISTOGRAM:  
MEASURE:CURSOR:DC:STATE? ->  
:ANALYSIS:WPARAMETER1:HISTOGRAM:  
MEASURE:CURSOR:DC:STATE 1

**:ANALYSIS:WPARAMETER<x>:HISTOGRAM:****MEASURE:CURSOR:DC:VALUE?**

Function Queries the measured value between cursors on the histogram of the waveform parameter measurement.

Syntax :ANALYSIS:WPARAMETER<x>:HISTOGRAM:  
MEASURE:CURSOR:DC:VALUE?  
<x> = 1, 2

Example :ANALYSIS:WPARAMETER1:HISTOGRAM:  
MEASURE:CURSOR:DC:VALUE? ->  
:ANALYSIS:WPARAMETER1:HISTOGRAM:  
MEASURE:CURSOR:DC:VALUE 1.000E+00

**:ANALYSIS:WPARAMETER<x>:HISTOGRAM:****MEASURE:CURSOR:LINKAGE**

Function Turns ON/OFF the histogram cursor link of the waveform parameter measurement or queries the current setting.

Syntax :ANALYSIS:WPARAMETER<x>:HISTOGRAM:  
MEASURE:CURSOR:LINKAGE {<Boolean>}  
:ANALYSIS:WPARAMETER<x>:HISTOGRAM:  
MEASURE:CURSOR:LINKAGE?  
<x> = 1, 2

Example :ANALYSIS:WPARAMETER1:HISTOGRAM:  
MEASURE:CURSOR:LINKAGE ON  
:ANALYSIS:WPARAMETER1:HISTOGRAM:  
MEASURE:CURSOR:LINKAGE? ->  
:ANALYSIS:WPARAMETER1:HISTOGRAM:  
MEASURE:CURSOR:LINKAGE 1

**:ANALYSIS:WPARAMETER<x>:HISTOGRAM:****MEASURE:MODE**

Function Sets the automated measurement mode of the histogram display of the waveform parameter measurement or queries the current setting.

Syntax :ANALYSIS:WPARAMETER<x>:HISTOGRAM:  
MEASURE:MODE {CURSOR|OFF|PARAMETER}  
:ANALYSIS:WPARAMETER<x>:HISTOGRAM:  
MEASURE:MODE?  
<x> = 1 or 2

Example :ANALYSIS:WPARAMETER1:HISTOGRAM:  
MEASURE:MODE CURSOR  
:ANALYSIS:WPARAMETER1:HISTOGRAM:  
MEASURE:MODE? ->  
:ANALYSIS:WPARAMETER1:HISTOGRAM:  
MEASURE:MODE CURSOR

**:ANALYSIS:WPARAMETER<x>:HISTOGRAM:****MEASURE:PARAMETER?**

Function Queries all settings related to the automated measurement of histogram parameters of the waveform parameter measurement.

Syntax :ANALYSIS:WPARAMETER<x>:HISTOGRAM:  
MEASURE:PARAMETER?  
<x> = 1 or 2

Example :ANALYSIS:WPARAMETER1:HISTOGRAM:  
MEASURE:PARAMETER? ->  
:ANALYSIS:WPARAMETER1:HISTOGRAM:  
MEASURE:PARAMETER:MEAN:STATE 1;;  
ANALYSIS:WPARAMETER1:HISTOGRAM:MEASURE:  
PARAMETER:PEAK:STATE 1;ANALYSIS:  
WPARAMETER1:HISTOGRAM:MEASURE:  
PARAMETER:SD3INTEG:STATE 1;ANALYSIS:  
WPARAMETER1:HISTOGRAM:MEASURE:  
PARAMETER:SDEVIATION:STATE 1;ANALYSIS:  
WPARAMETER1:HISTOGRAM:MEASURE:  
PARAMETER:SDINTEG:STATE 1

**:ANALYSIS:WPARAMETER<x>:HISTOGRAM:****MEASURE:PARAMETER:ALL**

Function Turn ON/OFF all histogram parameters of the waveform parameter measurement.

Syntax :ANALYSIS:WPARAMETER<x>:HISTOGRAM:  
MEASURE:PARAMETER:ALL {<Boolean>}  
<x> = 1 or 2

Example :ANALYSIS:WPARAMETER1:HISTOGRAM:  
MEASURE:PARAMETER:ALL ON



### 5.3 ANALYSIS Group

#### **:ANALYSIS:WPARAMETER<x>:HISTOGRAM:**

##### **MEASURE:PARAMETER:<Parameter>?**

Function Queries all settings related to the histogram parameter of the waveform parameter measurement.

Syntax :ANALYSIS:WPARAMETER<x>:HISTOGRAM:  
MEASURE:PARAMETER:<Parameter>?  
<x> = 1 or 2  
<Parameter> = {MEAN|PEAK|SD3integ|  
SDEVIATION|SDINTEG}

Example (The following is an example for the average value.)

```
:ANALYSIS:WPARAMETER1:HISTOGRAM:  
MEASURE:PARAMETER:MEAN? ->  
:ANALYSIS:WPARAMETER1:HISTOGRAM:  
MEASURE:PARAMETER:MEAN:STATE 1
```

#### **:ANALYSIS:WPARAMETER<x>:HISTOGRAM:**

##### **MEASURE:PARAMETER:<Parameter>:STATE**

Function Turns ON/OFF the histogram parameter of the waveform parameter measurement or queries the current setting.

Syntax :ANALYSIS:WPARAMETER<x>:HISTOGRAM:  
MEASURE:PARAMETER:<Parameter>:STATE  
{<Boolean>}  
:ANALYSIS:WPARAMETER<x>:HISTOGRAM:  
MEASURE:PARAMETER:<Parameter>:STATE?  
<x> = 1 or 2  
<Parameter> = {MEAN|PEAK|SD3integ|  
SDEVIATION|SDINTEG}

Example (The following is an example for the average value.)

```
:ANALYSIS:WPARAMETER1:HISTOGRAM:  
MEASURE:PARAMETER:MEAN:STATE ON  
:ANALYSIS:WPARAMETER1:HISTOGRAM:  
MEASURE:PARAMETER:MEAN:STATE? ->  
:ANALYSIS:WPARAMETER1:HISTOGRAM:  
MEASURE:PARAMETER:MEAN:STATE 1
```

#### **:ANALYSIS:WPARAMETER<x>:HISTOGRAM:**

##### **MEASURE:PARAMETER:<Parameter>:VALUE?**

Function Queries the measured value of the histogram parameter of the waveform parameter measurement.

Syntax :ANALYSIS:WPARAMETER<x>:HISTOGRAM:  
MEASURE:PARAMETER:<Parameter>:VALUE?  
<x> = 1 or 2  
<Parameter> = {MEAN|PEAK|SD3integ|  
SDEVIATION|SDINTEG}

Example (The following is an example for the average value.)

```
:ANALYSIS:WPARAMETER1:HISTOGRAM:  
MEASURE:PARAMETER:MEAN:VALUE? ->  
:ANALYSIS:WPARAMETER1:HISTOGRAM:  
MEASURE:PARAMETER:MEAN:VALUE 1.000E+00
```

#### **:ANALYSIS:WPARAMETER<x>:LIST?**

Function Queries all settings related to the list display of the waveform parameter measurement.

Syntax :ANALYSIS:WPARAMETER<x>:LIST?  
<x> = 1 or 2

Example :ANALYSIS:WPARAMETER1:LIST? ->  
:ANALYSIS:WPARAMETER1:LIST:  
SCROLL HORIZONTAL

#### **:ANALYSIS:WPARAMETER<x>:LIST:ITEM?**

Function Queries list display items of the waveform parameter measurement.

Syntax :ANALYSIS:WPARAMETER<x>:LIST:ITEM?  
<x> = 1 or 2

Example :ANALYSIS:WPARAMETER1:LIST:ITEM? ->  
:ANALYSIS:WPARAMETER1:LIST:  
ITEM "LOW(C1)"

#### **:ANALYSIS:WPARAMETER<x>:LIST:SCROLL**

Function Sets the scroll direction of the list display of the waveform parameter measurement or queries the current setting.

Syntax :ANALYSIS:WPARAMETER<x>:LIST:SCROLL  
{HORIZONTAL|VERTICAL}  
:ANALYSIS:WPARAMETER<x>:LIST:SCROLL?  
<x> = 1 or 2

Example :ANALYSIS:WPARAMETER1:LIST:  
SCROLL HORIZONTAL  
:ANALYSIS:WPARAMETER1:LIST:SCROLL? ->  
:ANALYSIS:WPARAMETER1:LIST:  
SCROLL HORIZONTAL

#### **:ANALYSIS:WPARAMETER<x>:LIST:VALUE?**

Function Queries the automated measured value of the list display number of the waveform parameter measurement.

Syntax :ANALYSIS:WPARAMETER<x>:LIST:  
VALUE? {<NRF>|MAXIMUM}  
<x> = 1 or 2  
<NRF> = 1 to 10000

Example :ANALYSIS:WPARAMETER1:LIST:VALUE? 1 ->  
:ANALYSIS:WPARAMETER1:LIST:  
VALUE 1,1.000E+00

Description

- If the measurement is not possible, "NAN (Not A Number)" is returned.
- If the value of the list display number is not present, "NAN (Not A Number)" is returned.
- If MAXIMUM is specified, the maximum list display number is selected.

**:ANALYSIS:WPARAMETER<x>:MODE**

Function Sets the mode of the waveform parameter measurement or queries the current setting.

Syntax :ANALYSIS:WPARAMETER<x>:MODE  
{HISTogram|LIST|TREND}  
:ANALYSIS:WPARAMETER<x>:MODE?  
<x> = 1 or 2

Example :ANALYSIS:WPARAMETER1:MODE HISTOGRAM  
:ANALYSIS:WPARAMETER1:MODE? ->  
:ANALYSIS:WPARAMETER1:MODE HISTOGRAM

**:ANALYSIS:WPARAMETER<x>:TRACE<x>?**

Function Queries all settings related to the trace of the waveform parameter measurement.

Syntax :ANALYSIS:WPARAMETER<x>:TRACE<x>?  
<x> of WPARAMETER<x> = 1 or 2  
<x> of TRACE<x> = 1 to 8

Example :ANALYSIS:WPARAMETER1:TRACE1? ->  
:ANALYSIS:WPARAMETER1:TRACE1:AREA1:  
TYPE BURST

**:ANALYSIS:WPARAMETER<x>:TRACE<x>:  
AREA<x>?**

Function Queries all settings related to the area of the waveform parameter measurement.

Syntax :ANALYSIS:WPARAMETER<x>:TRACE<x>:  
AREA<x>?  
<x> of WPARAMETER<x> = 1 or 2  
<x> of TRACE<x> = 1 to 8  
<x> of AREA<x> = 1 or 2

Example :ANALYSIS:WPARAMETER1:TRACE1:AREA1? ->  
:ANALYSIS:WPARAMETER1:TRACE1:AREA1:  
TYPE BURST

**:ANALYSIS:WPARAMETER<x>:TRACE<x>:  
AREA<x>:TYPE**

Function Sets the waveform parameter of the waveform parameter measurement or queries the current setting.

Syntax :ANALYSIS:WPARAMETER<x>:TRACE<x>:  
AREA<x>:TYPE {<Parameter>}  
:ANALYSIS:WPARAMETER<x>:TRACE<x>:  
AREA<x>:TYPE?  
<x> of WPARAMETER<x> = 1 or 2  
<x> of TRACE<x> = 1 to 8  
<x> of AREA<x> = 1 or 2

<Parameter> = {BURST|CMEAN|COUNT|CRMS|  
CSDEVIATION|DELAY|DUTYCYCLE|FALL|  
FREQUENCY|HIGH|HILOW|LOW|MAXIMUM|MEAN|  
MINIMUM|NOVERSHOOT|NWIDTH|PERFREQUENCY|  
PERIOD|POVERSHOOT|PTOPEAK|PWIDTH|RISE|  
RMS|SDEVIATION|TYCINTEG|TYINTEG}  
Example :ANALYSIS:WPARAMETER1:TRACE1:AREA1:  
TYPE BURST  
:ANALYSIS:WPARAMETER1:TRACE1:AREA1:  
TYPE? -> :ANALYSIS:WPARAMETER1:TRACE1:  
AREA1:TYPE BURST

**:ANALYSIS:WPARAMETER<x>:TREND?**

Function Queries all settings related to the trend display of the waveform parameter measurement.

Syntax :ANALYSIS:WPARAMETER<x>:TREND?  
<x> = 1 or 2

Example :ANALYSIS:WPARAMETER1:TREND? ->  
:ANALYSIS:WPARAMETER1:TREND:  
HSPAN 1;MEASURE:CURSOR:C1:  
POSITION 1.000E+00;STATE 1;  
:ANALYSIS:WPARAMETER1:TREND:MEASURE:  
CURSOR:C2:POSITION 2.000E+00;STATE 1;  
:ANALYSIS:WPARAMETER1:TREND:MEASURE:  
CURSOR:DC:STATE 1;  
:ANALYSIS:WPARAMETER1:TREND:MEASURE:  
MODE CURSOR;  
:ANALYSIS:WPARAMETER1:TREND:  
VERTICAL 2.000E+00,1.000E+00

### 5.3 ANALYSIS Group

#### **:ANALYSIS:WPARAMETER<x>:TREND:**

##### **ASCALE[:EXECUTE]**

Function Executes the auto scaling of the trend display of the waveform parameter measurement.

Syntax :ANALYSIS:WPARAMETER<x>:TREND:  
ASCALE[:EXECUTE]  
<x> = 1 or 2

Example :ANALYSIS:WPARAMETER1:TREND:ASCALE:  
EXECUTE

#### **:ANALYSIS:WPARAMETER<x>:TREND:HSPAN**

Function Sets the horizontal span of the trend display of the waveform parameter measurement or queries the current setting.

Syntax :ANALYSIS:WPARAMETER<x>:TREND:HSPAN  
{<NRf>}  
:ANALYSIS:WPARAMETER<x>:TREND:HSPAN?  
<x> = 1 or 2  
<NRf> = 1 to 100000

Example :ANALYSIS:WPARAMETER1:TREND:HSPAN 1  
:ANALYSIS:WPARAMETER1:TREND:HSPAN? ->  
:ANALYSIS:WPARAMETER1:TREND:HSPAN 1

#### **:ANALYSIS:WPARAMETER<x>:TREND:**

##### **MEASURE?**

Function Queries all settings related to the automated measurement of the trend display of the waveform parameter measurement.

Syntax :ANALYSIS:WPARAMETER<x>:TREND:MEASURE?  
<x> = 1 or 2

Example :ANALYSIS:WPARAMETER1:TREND:MEASURE? ->  
:ANALYSIS:WPARAMETER1:TREND:MEASURE:  
CURSOR:C1:POSITION 1.000E+00;STATE 1;  
:ANALYSIS:WPARAMETER1:TREND:MEASURE:  
CURSOR:C2:POSITION 2.000E+00;STATE 1;  
:ANALYSIS:WPARAMETER1:TREND:MEASURE:  
CURSOR:DC:STATE 1;  
:ANALYSIS:WPARAMETER1:TREND:  
MEASURE:MODE CURSOR

#### **:ANALYSIS:WPARAMETER<x>:TREND:**

##### **MEASURE:CURSOR?**

Function Queries all settings related to the cursor measurement of the trend of the waveform parameter measurement.

Syntax :ANALYSIS:WPARAMETER<x>:TREND:MEASURE:  
CURSOR?  
<x> = 1 or 2

Example :ANALYSIS:WPARAMETER1:TREND:MEASURE:  
CURSOR? -> :ANALYSIS:WPARAMETER1:TREND:  
MEASURE:CURSOR:C1:POSITION 1.000E+00;  
STATE 1;:ANALYSIS:WPARAMETER1:TREND:  
MEASURE:CURSOR:C2:POSITION 2.000E+00;  
STATE 1;:ANALYSIS:WPARAMETER1:TREND:  
MEASURE:CURSOR:DC:STATE 1

#### **:ANALYSIS:WPARAMETER<x>:TREND:**

##### **MEASURE:CURSOR:ALL**

Function Turns ON/OFF all cursors of the trend of the waveform parameter measurement.

Syntax :ANALYSIS:WPARAMETER<x>:TREND:MEASURE:  
CURSOR:ALL {<Boolean>}  
<x> = 1 or 2

Example :ANALYSIS:WPARAMETER1:TREND:MEASURE:  
CURSOR:ALL ON

#### **:ANALYSIS:WPARAMETER<x>:TREND:**

##### **MEASURE:CURSOR:C<x>?**

Function Queries all settings related to the measured value of the cursor of the trend of the waveform parameter measurement.

Syntax :ANALYSIS:WPARAMETER<x>:TREND:MEASURE:  
CURSOR:C<x>?  
<x> of WPARAMETER<x> = 1 or 2  
<x> of C<x> = 1 or 2

Example :ANALYSIS:WPARAMETER1:TREND:MEASURE:  
CURSOR:C1? -> :ANALYSIS:WPARAMETER1:  
TREND:MEASURE:CURSOR:C1:  
POSITION 1.000E+00;STATE 1

#### **:ANALYSIS:WPARAMETER<x>:TREND:**

##### **MEASURE:CURSOR:C<x>:POSITION**

Function Sets the cursor position of the trend of the waveform parameter measurement or queries the current setting.

Syntax :ANALYSIS:WPARAMETER<x>:TREND:MEASURE:  
CURSOR:C<x>:POSITION {<NRf>}  
:ANALYSIS:WPARAMETER<x>:TREND:MEASURE:  
CURSOR:C<x>:POSITION?  
<x> of WPARAMETER<x> = 1 or 2  
<x> of C<x> = 1 or 2  
<NRf> = -5 to 5 div

Example :ANALYSIS:WPARAMETER1:TREND:MEASURE:  
CURSOR:C1:POSITION 1  
:ANALYSIS:WPARAMETER1:TREND:MEASURE:  
CURSOR:C1:POSITION? ->  
:ANALYSIS:WPARAMETER1:TREND:MEASURE:  
CURSOR:C1:POSITION 1.000E+00  
CURSOR:C1:STATE? ->  
:ANALYSIS:WPARAMETER1:TREND:MEASURE:  
CURSOR:C1:STATE 1

**:ANALysis:WPARAMeter<x>:TREND:MEASure:CURSOR:C<x>:STATE**

Function Turns ON/OFF the cursor of the trend of the waveform parameter measurement or queries the current setting.

Syntax :ANALysis:WPARAMeter<x>:TREND:MEASure:CURSOR:C<x>:STATE {<Boolean>}  
:ANALysis:WPARAMeter<x>:TREND:MEASure:CURSOR:C<x>:STATE?  
<x> of WPARAMeter<x> = 1 or 2  
<x> of C<x> = 1 or 2

Example :ANALYSIS:WPARAMETER1:TREND:MEASURE:CURSOR:C1:STATE ON  
:ANALYSIS:WPARAMETER1:TREND:MEASURE:CURSOR:C1:STATE? ->  
:ANALYSIS:WPARAMETER1:TREND:MEASURE:CURSOR:C1:STATE 1

**:ANALysis:WPARAMeter<x>:TREND:MEASure:CURSOR:C<x>:VALUE?**

Function Queries the measured value of the cursor of the trend of the waveform parameter measurement.

Syntax :ANALysis:WPARAMeter<x>:TREND:MEASure:CURSOR:C<x>:VALUE?  
<x> of WPARAMeter<x> = 1 or 2  
<x> of C<x> = 1 or 2

Example :ANALYSIS:WPARAMETER1:TREND:MEASURE:CURSOR:C1:VALUE? ->  
:ANALYSIS:WPARAMETER1:TREND:MEASURE:CURSOR:C1:VALUE 1.000E+00

**:ANALysis:WPARAMeter<x>:TREND:MEASure:CURSOR:DC?**

Function Queries all settings related to the measurement between cursors on the trend of the waveform parameter measurement.

Syntax :ANALysis:WPARAMeter<x>:TREND:MEASure:CURSOR:DC?  
<x> of WPARAMeter<x> = 1, 2

Example :ANALYSIS:WPARAMETER1:TREND:MEASURE:CURSOR:DC? ->  
:ANALYSIS:WPARAMETER1:TREND:MEASURE:CURSOR:DC:STATE 1

**:ANALysis:WPARAMeter<x>:TREND:MEASure:CURSOR:DC:STATE**

Function Turns ON/OFF the measurement between cursors on the trend of the waveform parameter measurement or queries the current setting.

Syntax :ANALysis:WPARAMeter<x>:TREND:MEASure:CURSOR:DC:STATE {<Boolean>}  
:ANALysis:WPARAMeter<x>:TREND:MEASure:CURSOR:DC:STATE?  
<x> of WPARAMeter<x> = 1, 2

Example :ANALYSIS:WPARAMETER1:TREND:MEASURE:CURSOR:DC:STATE ON  
:ANALYSIS:WPARAMETER1:TREND:MEASURE:CURSOR:DC:STATE? ->  
:ANALYSIS:WPARAMETER1:TREND:MEASURE:CURSOR:DC:STATE 1

**:ANALysis:WPARAMeter<x>:TREND:MEASure:CURSOR:DC:VALUE?**

Function Sets the measured value between cursors on the trend of the waveform parameter measurement or queries the current setting.

Syntax :ANALysis:WPARAMeter<x>:TREND:MEASure:CURSOR:DC:VALUE?  
<x> of WPARAMeter<x> = 1, 2

Example :ANALYSIS:WPARAMETER1:TREND:MEASURE:CURSOR:DC:VALUE? ->  
:ANALYSIS:WPARAMETER1:TREND:MEASURE:CURSOR:DC:VALUE 1.000E+00

**:ANALysis:WPARAMeter<x>:TREND:MEASure:CURSOR:LINKage**

Function Turns ON/OFF the trend cursor link of the waveform parameter measurement or queries the current setting.

Syntax :ANALysis:WPARAMeter<x>:TREND:MEASure:CURSOR:LINKage {<Boolean>}  
:ANALysis:WPARAMeter<x>:TREND:MEASure:CURSOR:LINKage?  
<x> = 1 or 2

Example :ANALYSIS:WPARAMETER1:TREND:MEASURE:CURSOR:LINKAGE ON  
:ANALYSIS:WPARAMETER1:TREND:MEASURE:CURSOR:LINKAGE? ->  
:ANALYSIS:WPARAMETER1:TREND:MEASURE:CURSOR:LINKAGE 1

### 5.3 ANALYSIS Group

#### **:ANALYSIS:WPARAMETER<x>:TREND:**

##### **MEASURE:MODE**

**Function** Sets the automated measurement mode of the trend of the waveform parameter measurement or queries the current setting.

**Syntax** :ANALYSIS:WPARAMETER<x>:TREND:MEASURE:MODE {CURSOR|OFF}  
:ANALYSIS:WPARAMETER<x>:TREND:MEASURE:MODE?

**Example** :ANALYSIS:WPARAMETER1:TREND:MEASURE:MODE CURSOR  
:ANALYSIS:WPARAMETER1:TREND:MEASURE:MODE? -> :ANALYSIS:WPARAMETER1:TREND:MEASURE:MODE CURSOR

#### **:ANALYSIS:WPARAMETER<x>:TREND:**

##### **VERTICAL**

**Function** Sets the vertical range of the trend of the waveform parameter measurement or queries the current setting.

**Syntax** :ANALYSIS:WPARAMETER<x>:TREND:VERTICAL {<NRF>,<NRF>}  
:ANALYSIS:WPARAMETER<x>:TREND:VERTICAL?

**Example** :ANALYSIS:WPARAMETER1:TREND:VERTICAL 1,2  
:ANALYSIS:WPARAMETER1:TREND:VERTICAL? -> :ANALYSIS:WPARAMETER1:TREND:VERTICAL 2.000E+00,1.000E+00

#### **:ANALYSIS:XY<x>?**

**Function** Queries all settings related to the XY display function.

**Syntax** :ANALYSIS:XY<x>?  
<x> = 1 or 2

**Example** :ANALYSIS:XY1? -> :ANALYSIS:XY1:  
GATE:ALEVEL HIGH;HYSTERESIS1 1.000E+00;  
HYSTERESIS2 1.000E+00;  
HYSTERESIS3 1.000E+00;  
HYSTERESIS4 1.000E+00;  
HYSTERESIS5 1.000E+00;  
HYSTERESIS6 1.000E+00;  
HYSTERESIS7 1.000E+00;  
HYSTERESIS8 1.000E+00;LEVEL1 1.000E+00;  
LEVEL2 1.000E+00;LEVEL3 1.000E+00;  
LEVEL4 1.000E+00;LEVEL5 1.000E+00;  
LEVEL6 1.000E+00;LEVEL7 1.000E+00;  
LEVEL8 1.000E+00;TRACE 1;:ANALYSIS:XY1:  
MEASURE:CURSOR:X1:POSITION 1.000E+00;:  
ANALYSIS:XY1:MEASURE:CURSOR:X2:  
POSITION 2.000E+00;:ANALYSIS:XY1:  
MEASURE:CURSOR:XLINKAGE 1;Y1:  
POSITION 1.000E+00;:ANALYSIS:XY1:  
MEASURE:CURSOR:Y2:POSITION 2.000E+00;:  
ANALYSIS:XY1:MEASURE:CURSOR:  
YLINKAGE 1;:ANALYSIS:XY1:MEASURE:  
MODE CURSOR;XYINTEG:LOOP CLOSE;  
POLARITY CCW;:ANALYSIS:XY1:  
TRANGE 1.000E+00,0.000E+00;WINDOW MAIN;  
XTRACE 1;YTRACE 1

#### **:ANALYSIS:XY<x>:GATE?**

**Function** Queries all settings related to the gate function of the XY display.

**Syntax** :ANALYSIS:XY<x>:GATE?  
<x> = 1 or 2

**Example** :ANALYSIS:XY1:GATE? ->  
:ANALYSIS:XY1:GATE:ALEVEL HIGH;  
HYSTERESIS1 1.000E+00;  
HYSTERESIS2 1.000E+00;  
HYSTERESIS3 1.000E+00;  
HYSTERESIS4 1.000E+00;  
HYSTERESIS5 1.000E+00;  
HYSTERESIS6 1.000E+00;  
HYSTERESIS7 1.000E+00;  
HYSTERESIS8 1.000E+00;LEVEL1 1.000E+00;  
LEVEL2 1.000E+00;LEVEL3 1.000E+00;  
LEVEL4 1.000E+00;LEVEL5 1.000E+00;  
LEVEL6 1.000E+00;LEVEL7 1.000E+00;  
LEVEL8 1.000E+00;TRACE 1

**:ANALysis:XY<x>:GATE:ALEVEL**

Function Sets the active level of the gate of the XY display or queries the current setting.

Syntax :ANALysis:XY<x>:GATE:ALEVEL {HIGH|LOW}  
:ANALysis:XY<x>:GATE:ALEVEL?  
<x> = 1 or 2

Example :ANALYSIS:XY1:GATE:ALEVEL HIGH  
:ANALYSIS:XY1:GATE:ALEVEL? ->  
:ANALYSIS:XY1:GATE:ALEVEL HIGH

**:ANALysis:XY<x>:GATE:HYSTERESIS<x>**

Function Sets the hysteresis of the gate of the XY display or queries the current setting.

Syntax :ANALysis:XY<x>:GATE:HYSTERESIS<x>  
{<NRf>}  
:ANALysis:XY<x>:GATE:HYSTERESIS<x>?  
<x> of XY<x> = 1 or 2  
<x> of HYSTERESIS<x> = 1 to 8  
<NRf> = 0 to 4 (div)

Example :ANALYSIS:XY1:GATE:HYSTERESIS1 1  
:ANALYSIS:XY1:GATE:HYSTERESIS1? ->  
:ANALYSIS:XY1:GATE:  
HYSTERESIS1 1.000E+00

**:ANALysis:XY<x>:GATE:LEVEL<x>**

Function Sets the level of the gate of the XY display or queries the current setting.

Syntax :ANALysis:XY<x>:GATE:LEVEL<x>  
{<NRf>,<Voltage>,<Current>}  
:ANALysis:XY<x>:GATE:LEVEL<x>?  
<x> of XY<x> = 1 or 2  
<x> of LEVEL<x> = 1 to 8  
<NRf>,<Voltage>, and <Current> = See the DL9000  
User's Manual.

Example :ANALYSIS:XY1:GATE:LEVEL1 1  
:ANALYSIS:XY1:GATE:LEVEL1? ->  
:ANALYSIS:XY1:GATE:LEVEL1 1.000E+00

**:ANALysis:XY<x>:GATE:TRACE**

Function Sets the gate trace of the XY display or queries the current setting.

Syntax :ANALysis:XY<x>:GATE:TRACE {<NRf>|OFF}  
:ANALysis:XY<x>:GATE:TRACE?  
<x> = 1 or 2  
<NRf> = 1 to 8

Example :ANALYSIS:XY1:GATE:TRACE 1  
:ANALYSIS:XY1:GATE:TRACE? ->  
:ANALYSIS:XY1:GATE:TRACE 1

Function Queries all settings related to the automated measurement of the XY display.

Syntax :ANALysis:XY<x>:MEASURE?  
<x> = 1 or 2

Example :ANALYSIS:XY1:MEASURE? -> :ANALYSIS:  
XY1:MEASURE:Cursors:X1:  
POSITION 1.000E+00;:ANALYSIS:XY1:  
MEASURE:Cursors:X2:POSITION 2.000E+00;;  
ANALYSIS:XY1:MEASURE:Cursors:XLINKAGE 1;  
Y1:POSITION 1.000E+00;:ANALYSIS:XY1:  
MEASURE:Cursors:Y2:POSITION 2.000E+00;;  
ANALYSIS:XY1:MEASURE:Cursors:  
YLINKAGE 1;:ANALYSIS:XY1:MEASURE:  
MODE CURSOR;XYINTEG:LOOP CLOSE;  
POLARITY CCW

**:ANALysis:XY<x>:MEASURE?**

Function Queries all settings related to the automated measurement of the XY display.

Syntax :ANALysis:XY<x>:MEASURE?  
<x> = 1 or 2

Example :ANALYSIS:XY1:MEASURE? -> :ANALYSIS:  
XY1:MEASURE:Cursors:X1:  
POSITION 1.000E+00;:ANALYSIS:XY1:  
MEASURE:Cursors:X2:POSITION 2.000E+00;;  
ANALYSIS:XY1:MEASURE:Cursors:XLINKAGE 1;  
Y1:POSITION 1.000E+00;:ANALYSIS:XY1:  
MEASURE:Cursors:Y2:POSITION 2.000E+00;;  
ANALYSIS:XY1:MEASURE:Cursors:  
YLINKAGE 1;:ANALYSIS:XY1:MEASURE:  
MODE CURSOR;XYINTEG:LOOP CLOSE;  
POLARITY CCW

**:ANALysis:XY<x>:MEASURE:Cursors?**

Function Queries all settings related to the cursor measurement of the XY display.

Syntax :ANALysis:XY<x>:MEASURE:Cursors?  
<x> = 1 or 2

Example :ANALYSIS:XY1:MEASURE:Cursors? ->  
:ANALYSIS:XY1:MEASURE:Cursors:X1:  
POSITION 1.000E+00;:ANALYSIS:XY1:  
MEASURE:Cursors:X2:POSITION 2.000E+00;;  
ANALYSIS:XY1:MEASURE:Cursors:XLINKAGE 1;  
Y1:POSITION 1.000E+00;:ANALYSIS:XY1:  
MEASURE:Cursors:Y2:POSITION 2.000E+00;;  
ANALYSIS:XY1:MEASURE:Cursors:YLINKAGE 1

### 5.3 ANALYSIS Group

#### **:ANALYSIS:XY<x>:MEASURE:Cursors:**

##### **XLINKage**

Function Turns ON/OFF the horizontal cursor link on the XY display or queries the current setting.

Syntax :ANALYSIS:XY<x>:MEASURE:Cursors:  
XLINKage {<Boolean>}  
:ANALYSIS:XY<x>:MEASURE:Cursors:  
XLINKage?  
<x> = 1 or 2

Example :ANALYSIS:XY1:MEASURE:Cursors:  
XLINKAGE ON  
:ANALYSIS:XY1:MEASURE:Cursors:XLINKAGE?  
-> :ANALYSIS:XY1:MEASURE:Cursors:  
XLINKAGE 1

#### **:ANALYSIS:XY<x>:MEASURE:Cursors:X<x>?**

Function Queries all settings related to the horizontal cursor of the XY display.

Syntax :ANALYSIS:XY<x>:MEASURE:Cursors:X<x>?  
<x> of XY<x> = 1 or 2  
<x> of X<x> = 1 or 2

Example :ANALYSIS:XY1:MEASURE:Cursors:X1? ->  
:ANALYSIS:XY1:MEASURE:Cursors:X1:  
POSITION 1.000E+00

<x> of X<x> = 1 or 2  
<NRf> = -4 to 4 (div)

Example :ANALYSIS:XY1:MEASURE:Cursors:X1:  
POSITION 1  
:ANALYSIS:XY1:MEASURE:Cursors:X1:  
POSITION? ->  
:ANALYSIS:XY1:MEASURE:Cursors:X1:  
POSITION 1.000E+00

#### **:ANALYSIS:XY<x>:MEASURE:Cursors:Y<x>:**

##### **POSITION**

Function Sets the vertical cursor position of the XY display or queries the current setting.

Syntax :ANALYSIS:XY<x>:MEASURE:Cursors:Y<x>:  
POSITION {<NRf>}  
:ANALYSIS:XY<x>:MEASURE:Cursors:Y<x>:  
POSITION?  
<x> of XY<x> = 1 or 2  
<x> of Y<x> = 1 or 2  
<NRf> = -4 to 4 (div)

Example :ANALYSIS:XY1:MEASURE:Cursors:Y1:  
POSITION 1  
:ANALYSIS:XY1:MEASURE:Cursors:Y1:  
POSITION? -> :ANALYSIS:XY1:MEASURE:  
Cursors:Y1:POSITION 1.000E+00

#### **:ANALYSIS:XY<x>:MEASURE:Cursors:X<x>:**

##### **VALUE?**

Function Queries the voltage value at the horizontal cursor of the XY display.

Syntax :ANALYSIS:XY<x>:MEASURE:Cursors:X<x>:  
VALUE?  
<x> of XY<x> = 1 or 2  
<x> of X<x> = 1 or 2

Example :ANALYSIS:XY1:MEASURE:Cursors:X1:VALUE?  
-> :ANALYSIS:XY1:MEASURE:Cursors:X1:  
VALUE 1.000E+00

#### **:ANALYSIS:XY<x>:MEASURE:Cursors:**

##### **YLINKage**

Function Turns ON/OFF the vertical cursor link on the XY display or queries the current setting.

Syntax :ANALYSIS:XY<x>:MEASURE:Cursors:  
YLINKage {<Boolean>}  
:ANALYSIS:XY<x>:MEASURE:Cursors:  
YLINKage?  
<x> = 1 or 2

Example :ANALYSIS:XY1:MEASURE:Cursors:  
YLINKAGE ON  
:ANALYSIS:XY1:MEASURE:Cursors:YLINKAGE?  
-> :ANALYSIS:XY1:MEASURE:Cursors:  
YLINKAGE 1

#### **:ANALYSIS:XY<x>:MEASURE:Cursors:Y<x>?**

Function Queries all settings related to the vertical cursor of the XY display.

Syntax :ANALYSIS:XY<x>:MEASURE:Cursors:Y<x>?  
<x> of XY<x> = 1 or 2  
<x> of Y<x> = 1 or 2

Example :ANALYSIS:XY1:MEASURE:Cursors:Y1? ->  
:ANALYSIS:XY1:MEASURE:Cursors:Y1:  
POSITION 1.000E+00

#### **:ANALYSIS:XY<x>:MEASURE:Cursors:Y<x>:**

##### **POSITION**

Function Sets the vertical cursor position of the XY display or queries the current setting.

Syntax :ANALYSIS:XY<x>:MEASURE:Cursors:Y<x>:  
POSITION {<NRf>}  
:ANALYSIS:XY<x>:MEASURE:Cursors:Y<x>:  
POSITION?  
<x> of XY<x> = 1 or 2  
<x> of Y<x> = 1 or 2  
<NRf> = -4 to 4 (div)

Example :ANALYSIS:XY1:MEASURE:Cursors:Y1:  
POSITION 1  
:ANALYSIS:XY1:MEASURE:Cursors:Y1:  
POSITION? -> :ANALYSIS:XY1:MEASURE:  
Cursors:Y1:POSITION 1.000E+00

**:ANALYSIS:XY<x>:MEASURE:CUSOR:Y<x>:VALUE?**

Function Queries the voltage value at the vertical cursor of the XY display.

Syntax :ANALYSIS:XY<x>:MEASURE:CUSOR:Y<x>:VALUE?  
<x> of XY<x> = 1 or 2  
<x> of Y<x> = 1 or 2

Example :ANALYSIS:XY1:MEASURE:CUSOR:Y1:VALUE?  
-> :ANALYSIS:XY1:MEASURE:CUSOR:Y1:VALUE 1.000E+00

**:ANALYSIS:XY<x>:MEASURE:MODE**

Function Sets the automated measurement mode of the XY display or queries the current setting.

Syntax :ANALYSIS:XY<x>:MEASURE:MODE {CURSOR|OFF|XYINTEG}  
:ANALYSIS:XY<x>:MEASURE:MODE?  
<x> = 1 or 2

Example :ANALYSIS:XY1:MEASURE:MODE CURSOR  
:ANALYSIS:XY1:MEASURE:MODE? ->  
:ANALYSIS:XY1:MEASURE:MODE CURSOR

**:ANALYSIS:XY<x>:MEASURE:XYINTEG?**

Function Queries all settings related to the integration of the XY display.

Syntax :ANALYSIS:XY<x>:MEASURE:XYINTEG?  
<x> = 1 or 2

Example :ANALYSIS:XY1:MEASURE:XYINTEG? ->  
:ANALYSIS:XY1:MEASURE:XYINTEG:  
LOOP CLOSE;POLARITY CCW

**:ANALYSIS:XY<x>:MEASURE:XYINTEG:LOOP**

Function Sets the integration mode of the XY display or queries the current setting.

Syntax :ANALYSIS:XY<x>:MEASURE:XYINTEG:LOOP {CLOSE|OPEN}  
:ANALYSIS:XY<x>:MEASURE:XYINTEG:LOOP?  
<x> = 1 or 2

Example :ANALYSIS:XY1:MEASURE:XYINTEG:  
LOOP CLOSE  
:ANALYSIS:XY1:MEASURE:XYINTEG:LOOP? ->  
:ANALYSIS:XY1:MEASURE:XYINTEG:  
LOOP CLOSE

**:ANALYSIS:XY<x>:MEASURE:XYINTEG:POLARITY**

Function Sets the integration polarity of the XY display or queries the current setting.

Syntax :ANALYSIS:XY<x>:MEASURE:XYINTEG:POLARITY {CCW|CW}  
:ANALYSIS:XY<x>:MEASURE:XYINTEG:POLARITY?  
<x> = 1 or 2

Example :ANALYSIS:XY1:MEASURE:XYINTEG:POLARITY CCW  
:ANALYSIS:XY1:MEASURE:XYINTEG:POLARITY?  
-> :ANALYSIS:XY1:MEASURE:XYINTEG:POLARITY CCW

**:ANALYSIS:XY<x>:MEASURE:XYINTEG:VALUE?**

Function Queries the integral value of the XY display.

Syntax :ANALYSIS:XY<x>:MEASURE:XYINTEG:VALUE?  
<x> = 1 or 2

Example :ANALYSIS:XY1:MEASURE:XYINTEG:VALUE? ->  
:ANALYSIS:XY1:MEASURE:XYINTEG:  
VALUE 1.000E+00

**:ANALYSIS:XY<x>:TRANGE (Time Range)**

Function Sets the measurement range of the XY display or queries the current setting.

Syntax :ANALYSIS:XY<x>:TRANGE {<NRf>,<NRf>}  
:ANALYSIS:XY<x>:TRANGE?  
<x> = 1 or 2  
<NRf> = -5 to 5 div

**:ANALYSIS:XY<x>:WINDOW**

Function Sets the measurement source window of the XY display or queries the current setting.

Syntax :ANALYSIS:XY<x>:WINDOW {MAIN|Z1|Z2}  
:ANALYSIS:XY<x>:WINDOW?  
<x> = 1 or 2

Example :ANALYSIS:XY1:WINDOW MAIN  
:ANALYSIS:XY1:WINDOW? ->  
:ANALYSIS:XY1:WINDOW MAIN



## 5.4 ASETup Group

### **:ANALysis:XY<x>:XTRace**

Function Sets the X-axis trace of the XY display or queries the current setting.

Syntax :ANALysis:XY<x>:XTRace {<NRf>}  
:ANALysis:XY<x>:XTRace?  
<x> = 1 or 2  
<NRf> = 1 to 8

Example :ANALYSIS:XY1:XTRACE 1  
:ANALYSIS:XY1:XTRACE? ->  
:ANALYSIS:XY1:XTRACE 1

### **:ANALysis:XY<x>:YTRace**

Function Sets the Y-axis trace of the XY display or queries the current setting.

Syntax :ANALysis:XY<x>:YTRace {<NRf>}  
:ANALysis:XY<x>:YTRace?  
<x> = 1 or 2  
<NRf> = 1 to 8

Example :ANALYSIS:XY1:YTRACE 1  
:ANALYSIS:XY1:YTRACE? ->  
:ANALYSIS:XY1:YTRACE 1

## 5.4 ASETup Group

### **:ASETup:EXECute**

Function Execute auto setup.

Syntax :ASETup:EXECute

Example :ASETUP:EXECUTE

### **:ASETup:UNDO**

Function Cancels auto setup that has been executed.

Syntax :ASETup:UNDO

Example :ASETUP:UNDO

## 5.5 CALibrate Group

### **:CALibrate?**

Function Queries all settings related to the calibration.

Syntax :CALibrate?

Example :CALIBRATE? -> :CALIBRATE:MODE AUTO

### **:CALibrate:EXECute**

Function Executes calibration.

Syntax :CALibrate:EXECute

Example :CALIBRATE:EXECUTE

### **:CALibrate:MODE**

Function Turns ON/OFF the auto calibration or queries the current setting.

Syntax :CALibrate:MODE {AUTO|OFF}  
:CALibrate:MODE?

Example :CALIBRATE:MODE AUTO  
:CALIBRATE:MODE? ->  
:CALIBRATE:MODE AUTO

## 5.6 CHANnel Group

### **:CHANnel<x>?**

Function Queries all settings related to the channel.  
 Syntax :CHANnel<x>?  
 <x> = 1 to 4  
 Example :CHANNEL1? -> :CHANNEL1:SELECT INPUT;  
 DISPLAY 1;BWIDTh FULL;COUPLING DC;  
 DESKEW 0.000E+00;INVERT 0;LABEL:  
 DEFINE "CH1";MODE 1;:CHANNEL1:  
 OCANCEL 0;OFFSET 0.000E+00;  
 POSITION 0.000E+00;PROBE:MODE 1;:  
 CHANNEL1:SVALUE 0;VDIV 1.000E+00

### **:CHANnel<x>:AScale[:EXECute]**

Function Executes the auto scaling of the channel.  
 Syntax CHANnel<x>:AScale[:EXECute]  
 <x> = 1 to 4  
 Example CHANNEL1:ASCALE:EXECUTE

### **:CHANnel<x>:BWIDTh**

Function Sets the input filter of the channel or queries the current setting.  
 Syntax :CHANnel<x>:BWIDTh {<Frequency>|FULL}  
 :CHANnel<x>:BWIDTh?  
 <x> = 1 to 4  
 <Frequency> = See the DL9000 User's Manual  
 Example :CHANNEL1:BWIDTh FULL  
 :CHANNEL1:BWIDTh? -> :CHANNEL1:BWIDTh  
 FULL

### **:CHANnel<x>:COUPLing**

Function Sets the input coupling of the channel or queries the current setting.  
 Syntax :CHANnel<x>:COUPLing {AC|DC|DC50|GND}  
 :CHANnel<x>:COUPLing?  
 <x> = 1 to 4  
 Example :CHANNEL1:COUPLING GND  
 :CHANNEL1:COUPLING? ->  
 :CHANNEL1:COUPLING GND

### **:CHANnel<x>:DESKew**

Function Sets the skew correction of the channel or queries the current setting.  
 Syntax :CHANnel<x>:DESKew {<Time>}  
 :CHANnel<x>:DESKew?  
 <x> = 1 to 4  
 <Time> = -100 ns to 100 ns (10 ps steps)  
 Example :CHANNEL1:DESKew 1NS  
 :CHANNEL1:DESKew? ->  
 :CHANNEL1:DESKew 1.000E-09

### **:CHANnel<x>:DISPlay**

Function Turns ON/OFF the display of the channel or queries the current setting.  
 Syntax :CHANnel<x>:DISPlay {<Boolean>}  
 :CHANnel<x>:DISPlay?  
 <x> = 1 to 4  
 Example :CHANNEL1:DISPlay ON  
 :CHANNEL1:DISPlay? ->  
 :CHANNEL1:DISPlay 1

### **:CHANnel<x>:INVert**

Function Turns ON/OFF the inverted display of the channel or queries the current setting.  
 Syntax :CHANnel<x>:INVert {<Boolean>}  
 :CHANnel<x>:INVert?  
 <x> = 1 to 4  
 Example :CHANNEL1:INVERT ON  
 :CHANNEL1:INVERT -> :CHANNEL1:INVERT 1

### **:CHANnel<x>:LABel?**

Function Queries all settings related to the waveform label of the channel.  
 Syntax :CHANnel<x>:LABel?  
 <x> = 1 to 4  
 Example :CHANNEL1:LABel? ->  
 :CHANNEL1:LABel:DEFINE "CH1";MODE 0

### **:CHANnel<x>:LABel[:DEFine]**

Function Sets the waveform label of channel or queries the current setting.  
 Syntax :CHANnel<x>:LABel[:DEFine] {<String>}  
 :CHANnel<x>:LABel[:DEFine]?  
 <x> = 1 to 4  
 <String> = Up to 8 characters  
 Example :CHANNEL1:LABel:DEFINE "CH1"  
 :CHANNEL1:LABel:DEFINE? ->  
 :CHANNEL1:LABel:DEFINE "CH1"

### **:CHANnel<x>:LABel:MODE**

Function Turns ON/OFF the waveform label display of the channel or queries the current setting.  
 Syntax :CHANnel<x>:LABel:MODE {<Boolean>}  
 :CHANnel<x>:LABel:MODE?  
 <x> = 1 to 4  
 Example :CHANNEL1:LABel:MODE ON  
 :CHANNEL1:LABel:MODE? ->  
 :CHANNEL1:LABel:MODE 1

## 5.6 CHANnel Group

### **:CHANnel<x>:OCANcel**

Function Turns ON/OFF the offset cancel of the channel or queries the current setting.

Syntax :CHANneL<x>:OCANcel {<Boolean>}  
:CHANneL<x>:OCANcel?  
<x> = 1 to 4

Example :CHANNEL1:OCANCEL ON  
:CHANNELL1:OCANCEL? ->  
:CHANNEL1:OCANCEL 1

### **:CHANnel<x>:OFFSet**

Function Sets the offset voltage of the channel or queries the current setting.

Syntax :CHANneL<x>:OFFSet  
{<Voltage>|<Current>}  
:CHANneL<x>:OFFSet?  
<x> = 1 to 4  
<Voltage> and <Current> = See the DL9000 User's Manual.

Example :CHANNEL1:OFFSET 1V  
:CHANNEL1:OFFSET? ->  
:CHANNEL1:OFFSET 1.000E+00

### **:CHANnel<x>:POSition**

Function Sets the vertical position of the channel or queries the current setting.

Syntax :CHANneL<x>:POSition {<NRf>}  
:CHANneL<x>:POSition?  
<x> = 1 to 4  
<NRf> = -4 to 4 (div)

Example :CHANNEL1:POSITION 1  
:CHANNEL1:POSITION? ->  
:CHANNEL1:POSITION 1.000E+00

### **:CHANnel<x>:PROBe?**

Function Queries all settings related to the probe attenuation of the channel.

Syntax :CHANneL<x>:PROBe?  
<x> = 1 to 4

Example :CHANNEL1:PROBE? ->  
:CHANNEL1:PROBE:MODE 1

### **:CHANnel<x>:PROBe [ :MODE ]**

Function Sets the probe attenuation of the channel or queries the current setting.

Syntax :CHANneL<x>:PROBe [ :MODE ] {<NRf>|AUTO|C10|C100}  
:CHANneL<x>:PROBe [ :MODE ] ?  
<x> = 1 to 4  
<NRf> = 1,2,5,10,20,50,100,200,500,1000

Example :CHANNEL1:PROBE:MODE 1  
:CHANNEL1:PROBE:MODE? ->  
:CHANNEL1:PROBE:MODE 1

### **:ChanneL<x>:PROBe:AUTO?**

Function Queries the probe attenuation of the channel when set to AUTO.

Syntax :ChanneL<x>:PROBe:AUTO?  
<x> = 1 to 4

Example :CHANNEL1:PROBE:AUTO? ->  
:CHANNEL1:PROBE:AUTO 1

### **:CHANnel<x>:SElect**

Function Sets the waveform (input/computation) to be assigned to the input channel or queries the current setting.

Syntax :CHANneL<x>:SElect {INPUt|MATH}  
:CHANneL<x>:SElect?  
<x> = 1 to 4

Example :CHANNEL1:SELECT INPUT  
:CHANNEL1:SELECT? -> :CHANNEL1:SELECT INPUT

### **:CHANnel<x>:SVALue (Scale VALUE)**

Function Turns ON/OFF the scale display of the channel or queries the current setting.

Syntax :CHANneL<x>:SVALue {<Boolean>}  
:CHANneL<x>:SVALue?  
<x> = 1 to 4

Example :CHANNEL1:SVALUE ON  
:CHANNEL1:SVALUE? -> :CHANNEL1:SVALUE 1

### **:CHANnel<x>:VDIV**

Function Sets the vertical sensitivity (V/div) of the channel or queries the current setting.

Syntax :CHANneL<x>:VDIV {<Voltage>|<Current>}  
:CHANneL<x>:VDIV?  
<x> = 1 to 4  
<Voltage> and <Current> = See the DL9000 User's Manual.

Example :CHANNEL1:VDIV 5V  
:CHANNEL1:VDIV? ->  
:CHANNEL1:VDIV 5.000E+00

## 5.7 CLEAr Group

### **:CLEAr:ACCumulate**

Function Clears accumulated waveforms.

Syntax :CLEAr:ACCumulate

Example :CLEAR:ACCUMULATE

### **:CLEAr[:HISTory]**

Function Clears history waveforms.

Syntax :CLEAr[:HISTory]

Example :CLEAR:HISTORY

### **:CLEAr:SNAP**

Function Clears snapshot waveforms.

Syntax :CLEAr:SNAP

Example :CLEAR:SNAP

### 5.8 COMMunicate Group

The commands in this group deal with communications. There are no front panel keys that correspond to the commands in this group.

#### **:COMMunicate?**

**Function** Queries all settings related to communications.  
**Syntax** :COMMunicate?  
**Example** :COMMUNICATE? -> :COMMUNICATE:  
HEADER 1;OPSE 352;OVERLAP 352;VERBOSE 1

#### **:COMMunicate:HEADer**

**Function** Sets whether to add a header to the response to a query (example CHANNEL1:VOLTAGE:PROBE 10) or not add the header (example 10) or queries the current setting.  
**Syntax** :COMMunicate:HEADer {<Boolean>}  
:COMMunicate:HEADer?  
**Example** :COMMUNICATE:HEADER ON  
:COMMUNICATE:HEADER? ->  
:COMMUNICATE:HEADER 1

#### **:COMMunicate:LOCKout**

**Function** Sets or clears local lockout.  
**Syntax** :COMMunicate:LOCKout {<Boolean>}  
:COMMunicate:LOCKout?  
**Example** :COMMUNICATE:LOCKOUT ON  
:COMMUNICATE:LOCKOUT? ->  
:COMMUNICATE:LOCKOUT 1  
**Description** This command is dedicated to the Ethernet interface (option).

#### **:COMMunicate:OPSE**

##### **(Operation Pending Status Enable register)**

**Function** Sets the overlap command that is used by the \*OPC, \*OPC?, and \*WAI commands or queries the current setting.  
**Syntax** :COMMunicate:OPSE <Register>  
:COMMunicate:OPSE?  
<Register> = 0 to 65535, :COMMunicate:WAIT?  
See the command diagram.  
**Example** :COMMUNICATE:OPSE 65535  
:COMMUNICATE:OPSE? ->  
:COMMUNICATE:OPSE 2400  
**Description** In the above example, all bits are set to 1 to make all overlap commands applicable. However, bits fixed to 0 are not set to 1. Thus, the response to the query indicates 1 for bits 5, 6, 8, and 11 only.

#### **:COMMunicate:OPSR?**

##### **(Operation Pending Status Register)**

**Function** Queries the value of the operation pending status register.  
**Syntax** :COMMunicate:OPSR?  
**Example** :COMMUNICATE:OPSR? -> 0  
**Description** For details on the operation pending status register, see the figure for the :COMMunicate:WAIT? command.

#### **:COMMunicate:OVERlap**

**Function** Sets the commands to operate as overlap commands or queries the current setting.  
**Syntax** :COMMunicate:OVERlap <Register>  
:COMMunicate:OVERlap?  
<Register> = 0 to 65535, :COMMunicate:WAIT?  
See the command diagram.  
**Example** :COMMUNICATE:OVERLAP 65535  
:COMMUNICATE:OVERLAP? ->  
:COMMUNICATE:OVERLAP 2400  
**Description**

- In the above example, all bits are set to 1 to make all overlap commands applicable. However, bits fixed to 0 are not set to 1. Thus, the response to the query indicates 1 for bits 5, 6, 8, and 11 only.
- For the description of how to synchronize the program using :COMMunicate:OVERlap, see page 4-7.
- In the above example, bits 5, 6, 8, and 11 are set to 1 to make all overlap commands applicable (see the figure for the :COMMunicate:WAIT? command).

#### **:COMMunicate:REMote**

**Function** Sets remote or local. ON is remote mode.  
**Syntax** :COMMunicate:REMote {<Boolean>}  
:COMMunicate:REMote?  
**Example** :COMMUNICATE:REMOTE ON  
:COMMUNICATE:REMOTE? ->  
:COMMUNICATE:REMOTE 1  
**Description** This command is dedicated to the Ethernet interface (option).

**:COMMunicate:STATus?**

Function Queries line-specific status.

Syntax :COMMunicate:STATus?

Example :COMMUNICATE:STATUS? ->  
:COMMUNICATE:STATUS 0

Description The meaning of each status bit is as follows:

Bit	GP-IB
0	Unrecoverable transmission error
1	Always 0
2	Always 0
3 or greater	Always 0

For USB and Ethernet communications, 0 is always returned.

The status bit is set when the corresponding cause occurs and cleared when it is read.

**:COMMunicate:VERBoSe**

Function Sets whether to return the response to a query using full spelling (example CHANNEL1:VOLTAGE:PROBE 10) or using abbreviation (example CHAN:PROB 10) or queries the current setting.

Syntax :COMMunicate:VERBoSe {<Boolean>}  
:COMMunicate:VERBoSe?

Example :COMMUNICATE:VERBOSE ON  
:COMMUNICATE:VERBOSE? ->  
:COMMUNICATE:VERBOSE 1

**:COMMunicate:WAIT**

Function Waits for one of the specified extended events to occur.

Syntax :COMMunicate:WAIT <Register>  
<Register> = 0 to 65535 (extended event register, see page 6-4.)

Example :COMMUNICATE:WAIT 65535

Description For the description of how to synchronize the program using :COMMunicate:WAIT, see page 3-8.

**:COMMunicate:WAIT?**

Function Creates the response that is returned when the specified event occurs.

Syntax :COMMunicate:WAIT? <Register>  
<Register> = 0 to 65535 (extended event register, see page 6-4.)

Example :COMMUNICATE:WAIT? 65535 -> 1

Operation pending status register/overlap enable register

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
0	0	0	0	SCH	0	0	HST	0	ACS	PRN	0	0	0	0	0

When bit 5 (PRN) = 1:

Built-in printer operation not complete

When bit 6 (ACS) = 1:

Access to the medium not complete.

When bit 8 (HST) = 1:

History search execution not complete

When bit 11 (SCH) = 1:

Search execution not complete

## 5.9 CURSor Group

**:CURSor?**

Function Queries all settings related to the cursor measurement.

Syntax :CURSor?

Example :CURSOR? -> :CURSOR:DISPLAY 1;  
 HORIZONTAL:BASIC:DV:STATE 1;;CURSOR:  
 HORIZONTAL:BASIC:LINKAGE 1;V1:  
 POSITION 1.000E+00;STATE 0;;CURSOR:  
 HORIZONTAL:BASIC:V2:POSITION 1.000E+00;  
 STATE 0;;CURSOR:HORIZONTAL:CALCULATION:  
 DEFINE1 "V1";DEFINE2 "V2";DEFINE3 "V1";  
 DEFINE4 "V2";STATE1 0;STATE2 0;  
 STATE3 0;STATE4 0;;CURSOR:HORIZONTAL:  
 TRACE 1;;CURSOR:MARKER:CALCULATION:  
 DEFINE1 "T2";DEFINE2 "V2";DEFINE3 "V3";  
 DEFINE4 "V4";STATE1 0;STATE2 0;  
 STATE3 0;STATE4 0;;CURSOR:MARKER:CM1:  
 DT2:STATE 1;;CURSOR:MARKER:CM1:DT3:  
 STATE 1;;CURSOR:MARKER:CM1:DT4:  
 STATE 1;;CURSOR:MARKER:CM1:DV2:  
 STATE 1;;CURSOR:MARKER:CM1:DV3:  
 STATE 1;;CURSOR:MARKER:CM1:DV4:  
 STATE 1;;CURSOR:MARKER:CM1:  
 POSITION 1.000E+00;T:STATE 1;;CURSOR:  
 MARKER:CM1:TRACE 1;V:STATE 1;;CURSOR:  
 MARKER:CM2:DT1:STATE 1;;CURSOR:MARKER:  
 CM2:DT3:STATE 1;;CURSOR:MARKER:CM2:DT4:  
 STATE 1;;CURSOR:MARKER:CM2:DV1:  
 STATE 1;;CURSOR:MARKER:CM2:DV3:  
 STATE .....

**:CURSor:DISPlay**

Function Turns ON/OFF the cursor or queries the current setting.

Syntax :CURSor:DISPlay {<Boolean>}  
 :CURSor:DISPlay?

Example :CURSOR:DISPLAY ON  
 :CURSOR:DISPLAY? -> :CURSOR:DISPLAY 1

**:CURSor:HORizontal?**

Function Queries all settings related to the horizontal cursors.

Syntax :CURSor:HORizontal?

Example :CURSOR:HORIZONTAL? ->  
 :CURSOR:HORIZONTAL:BASIC:DV:STATE 1;;  
 CURSOR:HORIZONTAL:BASIC:LINKAGE 1;V1:  
 POSITION 1.000E+00;STATE 0;;CURSOR:  
 HORIZONTAL:BASIC:V2:POSITION 1.000E+00;  
 STATE 0;;CURSOR:HORIZONTAL:  
 CALCULATION:DEFINE1 "V1";DEFINE2 "V2";  
 DEFINE3 "V1";DEFINE4 "V2";STATE1 0;  
 STATE2 0;STATE3 0;STATE4 0;;CURSOR:  
 HORIZONTAL:TRACE 1

**:CURSor:HORizontal:BASic?**

Function Queries all settings related to basic items of the horizontal cursors.

Syntax :CURSor:HORizontal:BASic?

Example :CURSOR:HORIZONTAL:BASIC? ->  
 :CURSOR:HORIZONTAL:BASIC:DV:STATE 1;;  
 CURSOR:HORIZONTAL:BASIC:LINKAGE 1;V1:  
 POSITION 1.000E+00;STATE 0;;CURSOR:  
 HORIZONTAL:BASIC:V2:POSITION 1.000E+00;  
 STATE 0

**:CURSor:HORizontal[:BASic]:ALL**

Function Turns ON/OFF all basic items of the horizontal cursors.

Syntax :CURSor:HORizontal[:BASic]:ALL  
 {<Boolean>}

Example :CURSOR:HORIZONTAL:BASIC:ALL ON

**:CURSor:HORizontal[:BASic]:DV?**

Function Queries all settings related to the  $\Delta V$  measurement of the horizontal cursors.

Syntax :CURSor:HORizontal[:BASic]:DV?

Example :CURSOR:HORIZONTAL:BASIC:DV? ->  
 :CURSOR:HORIZONTAL:BASIC:DV:STATE 1

**:CURSor:HORizontal[:BASic]:DV:STATE**

Function Turns ON/OFF the  $\Delta V$  measurement of the horizontal cursors or queries the current setting.

Syntax :CURSor:HORizontal[:BASic]:DV:STATE  
 {<Boolean>}  
 :CURSor:HORizontal[:BASic]:DV:STATE?

Example :CURSOR:HORIZONTAL:BASIC:DV:STATE ON  
 :CURSOR:HORIZONTAL:BASIC:DV:STATE? ->  
 :CURSOR:HORIZONTAL:BASIC:DV:STATE 1

**:CURSor:HORizontal[:BASic]:DV:VALue?**

Function Queries the voltage value between the horizontal cursors.

Syntax :CURSor:HORizontal[:BASic]:DV:VALue?

Example :CURSOR:HORIZONTAL:BASIC:DV:VALUE? ->  
 :CURSOR:HORIZONTAL:BASIC:DV:  
 VALUE 1.000E+00

**:CURSor:HORizontal[:BASic]:LINKage**

Function Turns ON/OFF the horizontal cursor link or queries the current setting.

Syntax :CURSor:HORizontal[:BASic]:  
 LINKage {<Boolean>}  
 :CURSor:HORizontal[:BASic]:LINKage?

Example :CURSOR:HORIZONTAL:BASIC:LINKAGE ON  
 :CURSOR:HORIZONTAL:BASIC:LINKAGE? ->  
 :CURSOR:HORIZONTAL:BASIC:LINKAGE 1

**:CURSOR:HORIZONTAL[:BASIC]:V<x>?**

Function Queries all settings related to the horizontal cursor.

Syntax :CURSOR:HORIZONTAL[:BASIC]:V<x>?  
<x> = 1 or 2

Example :CURSOR:HORIZONTAL:BASIC:V1? ->  
:CURSOR:HORIZONTAL:BASIC:V1:POSITION  
1.000E+00;STATE 1

**:CURSOR:HORIZONTAL[:BASIC]:V<x>:JUMP**

Function Jumps the horizontal cursor to the center position of the zoom waveform.

Syntax :CURSOR:HORIZONTAL[:BASIC]:V<x>:  
JUMP {Z1|Z2}  
<x>=1 or 2

Example :CURSOR:HORIZONTAL:BASIC:V1:JUMP Z1

**:CURSOR:HORIZONTAL[:BASIC]:V<x>:POSITION**

Function Sets the horizontal cursor position or queries the current setting.

Syntax :CURSOR:HORIZONTAL[:BASIC]:V<x>:  
POSITION {<NRf>}  
:CURSOR:HORIZONTAL[:BASIC]:V<x>:  
POSITION?  
<x> = 1 or 2  
<NRf> = -4 to 4 (div)

Example :CURSOR:HORIZONTAL:BASIC:V1:POSITION 1  
:CURSOR:HORIZONTAL:BASIC:V1:POSITION?  
-> :CURSOR:HORIZONTAL:BASIC:V1:  
POSITION 1.000E+00

**:CURSOR:HORIZONTAL[:BASIC]:V<x>:STATE**

Function Turns ON/OFF the horizontal cursor or queries the current setting.

Syntax :CURSOR:HORIZONTAL[:BASIC]:V<x>:STATE  
{<Boolean>}  
:CURSOR:HORIZONTAL[:BASIC]:V<x>:STATE?  
<x> = 1 or 2

Example :CURSOR:HORIZONTAL:BASIC:V1:STATE ON  
:CURSOR:HORIZONTAL:BASIC:V1:STATE? ->  
:CURSOR:HORIZONTAL:BASIC:V1:STATE 1

**:CURSOR:HORIZONTAL[:BASIC]:V<x>:VALUE?**

Function Queries the voltage value at the horizontal cursor.

Syntax :CURSOR:HORIZONTAL[:BASIC]:V<x>:VALUE?  
<x> = 1 or 2

Example :CURSOR:HORIZONTAL:BASIC:V1:VALUE? ->  
:CURSOR:HORIZONTAL:BASIC:V1:  
VALUE 1.000E+00

**:CURSOR:HORIZONTAL:CALCULATION?**

Function Queries all settings related to calculation items of the horizontal cursors.

Syntax :CURSOR:HORIZONTAL:CALCULATION?

Example :CURSOR:HORIZONTAL:CALCULATION? ->  
:CURSOR:HORIZONTAL:CALCULATION:  
DEFINE1 "V1";DEFINE2 "V2";DEFINE3 "V1";  
DEFINE4 "V2";STATE1 0;STATE2 0;  
STATE3 0;STATE4 0

**:CURSOR:HORIZONTAL:CALCULATION:ALL**

Function Turns ON/OFF all calculation items of the horizontal cursors.

Syntax :CURSOR:HORIZONTAL:CALCULATION:ALL  
{<Boolean>}

Example :CURSOR:HORIZONTAL:CALCULATION:ALL ON

**:CURSOR:HORIZONTAL:CALCULATION:DEFINE<x>**

Function Sets the equation of the calculation item of the horizontal cursor or queries the current setting.

Syntax :CURSOR:HORIZONTAL:CALCULATION:  
DEFINE<x> {<String>}  
:CURSOR:HORIZONTAL:CALCULATION:  
DEFINE<x>?  
<x> = 1 to 4  
<String> = Up to 128 characters

Example :CURSOR:HORIZONTAL:CALCULATION:  
DEFINE1 "V1"  
:CURSOR:HORIZONTAL:CALCULATION:DEFINE1?  
-> :CURSOR:HORIZONTAL:CALCULATION:  
DEFINE1 "V1"

**:CURSOR:HORIZONTAL:CALCULATION:STATE<x>**

Function Turns ON/OFF the calculation item of the horizontal cursor or queries the current setting.

Syntax :CURSOR:HORIZONTAL:CALCULATION:STATE<x>  
{<Boolean>}  
:CURSOR:HORIZONTAL:CALCULATION:STATE<x>?  
<x> = 1 to 4

Example :CURSOR:HORIZONTAL:CALCULATION:STATE1 ON  
:CURSOR:HORIZONTAL:CALCULATION:STATE1?  
-> :CURSOR:HORIZONTAL:CALCULATION:  
STATE1 1

**:CURSOR:HORIZONTAL:CALCULATION:VALUE<x>?**

Function Queries the measured value of the calculation item of the horizontal cursor.

Syntax :CURSOR:HORIZONTAL:CALCULATION:  
VALUE<x>?  
<x> = 1 to 4

Example :CURSOR:HORIZONTAL:CALCULATION:VALUE1?  
-> :CURSOR:HORIZONTAL:CALCULATION:  
VALUE1 0.000E+00



## 5.9 CURSOR Group

### **:CURSOR:HORIZONTAL:TRACE**

Function Sets the source trace of the horizontal cursor or queries the current setting.

Syntax :CURSOR:HORIZONTAL:TRACE {<NRf>}  
:CURSOR:HORIZONTAL:TRACE?  
<NRf> = 1 to 8

Example :CURSOR:HORIZONTAL:TRACE 1  
:CURSOR:HORIZONTAL:TRACE? ->  
:CURSOR:HORIZONTAL:TRACE 1

### **:CURSOR:MARKER?**

Function Queries all settings related to the marker cursors.

Syntax :CURSOR:MARKER?

Example :CURSOR:MARKER? -> :CURSOR:MARKER:  
CALCULATION:DEFINE1 "T2";DEFINE2 "V2";  
DEFINE3 "V3";DEFINE4 "V4";STATE1 0;  
STATE2 0;STATE3 0;STATE4 0;:CURSOR:  
MARKER:CM1:DT2:STATE 1;:CURSOR:MARKER:  
CM1:DT3:STATE 1;:CURSOR:MARKER:CM1:DT4:  
STATE 1;:CURSOR:MARKER:CM1:DV2:  
STATE 1;:CURSOR:MARKER:CM1:DV3:  
STATE 1;:CURSOR:MARKER:CM1:DV4:  
STATE 1;:CURSOR:MARKER:CM1:  
POSITION 1.000E+00;T:STATE 1;:CURSOR:  
MARKER:CM1:TRACE 1;V:STATE 1;:CURSOR:  
MARKER:CM2:DT1:STATE 1;:CURSOR:MARKER:  
CM2:DT3:STATE 1;:CURSOR:MARKER:CM2:DT4:  
STATE 1;:CURSOR:MARKER:CM2:DV1:  
STATE 1;:CURSOR:MARKER:CM2:DV3:  
STATE 1;:CURSOR:MARKER:CM2:DV4:  
STATE 1;:CURSOR:MARKER:CM2:  
POSITION 1.000E+00;T:STATE 1;:CURSOR:  
MARKER:CM2:TRACE 1;V:STATE 1;:CURSOR:  
MARKER:CM3:DT1:STATE 1;:CURSOR:MARKER:  
CM3:DT2:STATE 1;:CURSOR:MARKER:CM3:DT4:  
STATE 1;:CURSOR:MARKER:CM3:DV1:  
STATE 1;:CURSOR:MARKER:CM3:DV2:  
STATE .....

### **:CURSOR:MARKER:CALCULATION?**

Function Queries all settings related to calculation items of the marker cursors.

Syntax :CURSOR:MARKER:CALCULATION?

Example :CURSOR:MARKER:CALCULATION? ->  
:CURSOR:MARKER:CALCULATION:  
DEFINE1 "T2";DEFINE2 "V2";DEFINE3 "V3";  
DEFINE4 "V4";STATE1 0;STATE2 0;  
STATE3 0;STATE4 0

### **:CURSOR:MARKER:CALCULATION:ALL**

Function Turns ON/OFF all calculation items of the marker cursors.

Syntax :CURSOR:MARKER:CALCULATION:ALL  
{<Boolean>}

Example :CURSOR:MARKER:CALCULATION:ALL ON

### **:CURSOR:MARKER:CALCULATION:DEFINE<x>**

Function Sets the equation of the calculation item of the marker cursors or queries the current setting.

Syntax :CURSOR:MARKER:CALCULATION:DEFINE<x>  
{<String>}  
:CURSOR:MARKER:CALCULATION:DEFINE<x>?  
<x> = 1 to 4  
<String> = Up to 128 characters

Example :CURSOR:MARKER:CALCULATION:DEFINE1 "T1"  
:CURSOR:MARKER:CALCULATION:DEFINE1? ->  
:CURSOR:MARKER:CALCULATION:DEFINE1 "T1"

### **:CURSOR:MARKER:CALCULATION:STATE<x>**

Function Turns ON/OFF the calculation item of the marker cursors or queries the current setting.

Syntax :CURSOR:MARKER:CALCULATION:STATE<x>  
{<Boolean>}  
:CURSOR:MARKER:CALCULATION:STATE<x>?  
<x> = 1 to 4

Example :CURSOR:MARKER:CALCULATION:STATE1 ON  
:CURSOR:MARKER:CALCULATION:STATE1? ->  
:CURSOR:MARKER:CALCULATION:STATE1 1

### **:CURSOR:MARKER:CALCULATION:VALUE<x>?**

Function Queries the measured value of the calculation item of the marker cursors.

Syntax :CURSOR:MARKER:CALCULATION:VALUE<x>?  
<x> = 1 to 4

Example :CURSOR:MARKER:CALCULATION:VALUE1? ->  
:CURSOR:MARKER:CALCULATION:VALUE1  
0.000E+00

### **:CURSOR:MARKER:CM<x>?**

Function Queries all settings related to the marker cursor.

Syntax :CURSOR:MARKER:CM<x>?  
<x> = 1 to 4

Example :CURSOR:MARKER:CM1? ->  
:CURSOR:MARKER:CM1:DT2:STATE 1;:CURSOR:  
MARKER:CM1:DT3:STATE 1;:CURSOR:MARKER:  
CM1:DT4:STATE 1;:CURSOR:MARKER:CM1:DV2:  
STATE 1;:CURSOR:MARKER:CM1:DV3:  
STATE 1;:CURSOR:MARKER:CM1:DV4:  
STATE 1;:CURSOR:MARKER:CM1:  
POSITION 1.000E+00;T:STATE 1;:CURSOR:  
MARKER:CM1:TRACE 1;V:STATE 1

**:CURSOR:MARKER:CM<x>:ALL**

Function Turns ON/OFF all items of the marker cursor.  
 Syntax :CURSOR:MARKER:CM<x>:ALL {<Boolean>}  
 <x> = 1 to 4  
 Example :CURSOR:MARKER:CM1:ALL ON

**:CURSOR:MARKER:CM<x>:DT<x>?**

Function Queries all settings related to the  $\Delta T$  measurement of the cursor marker.  
 Syntax :CURSOR:MARKER:CM<x>:DT<x>?  
 <x> of CM<x> = 1 to 4  
 <x> of DT<x> = 1 to 4  
 Example :CURSOR:MARKER:CM1:DT1? ->  
 :CURSOR:MARKER:CM1:DT1:STATE 1

**:CURSOR:MARKER:CM<x>:DT<x>:STATE**

Function Turns ON/OFF the  $\Delta T$  measurement of the maker cursor or queries the current setting.  
 Syntax :CURSOR:MARKER:CM<x>:DT<x>:STATE  
 {<Boolean>}  
 :CURSOR:MARKER:CM<x>:DT<x>:STATE?  
 <x> of CM<x> = 1 to 4  
 <x> of DT<x> = 1 to 4  
 Example :CURSOR:MARKER:CM1:DT2:STATE ON  
 :CURSOR:MARKER:CM1:DT2:STATE? ->  
 :CURSOR:MARKER:CM1:DT2:STATE 1

**:CURSOR:MARKER:CM<x>:DT<x>:VALUE?**

Function Queries the  $\Delta T$  value of the marker cursor.  
 Syntax :CURSOR:MARKER:CM<x>:DT<x>:VALUE?  
 <x> of CM<x> = 1 to 4  
 <x> of DT<x> = 1 to 4  
 Example :CURSOR:MARKER:CM1:DT2:VALUE? ->  
 :CURSOR:MARKER:CM1:DT2:VALUE 0.000E+00

**:CURSOR:MARKER:CM<x>:DV<x>?**

Function Queries all settings related to the  $\Delta V$  measurement of the cursor marker.  
 Syntax :CURSOR:MARKER:CM<x>:DV<x>?  
 <x> of CM<x> = 1 to 4  
 <x> of DV<x> = 1 to 4  
 Example :CURSOR:MARKER:CM1:DV2? ->  
 :CURSOR:MARKER:CM1:DV2:STATE 1

**:CURSOR:MARKER:CM<x>:DV<x>:STATE**

Function Turns ON/OFF the  $\Delta V$  measurement of the maker cursor or queries the current setting.  
 Syntax :CURSOR:MARKER:CM<x>:DV<x>:STATE  
 {<Boolean>}  
 :CURSOR:MARKER:CM<x>:DV<x>:STATE?  
 <x> of CM<x> = 1 to 4  
 <x> of DV<x> = 1 to 4  
 Example :CURSOR:MARKER:CM1:DV2:STATE ON  
 :CURSOR:MARKER:CM1:DV2:STATE? ->  
 :CURSOR:MARKER:CM1:DV2:STATE 1

**:CURSOR:MARKER:CM<x>:DV<x>:VALUE?**

Function Queries the  $\Delta V$  value of the marker cursor.  
 Syntax :CURSOR:MARKER:CM<x>:DV<x>:VALUE?  
 <x> of CM<x> = 1 to 4  
 <x> of DV<x> = 1 to 4  
 Example :CURSOR:MARKER:CM1:DV2:VALUE? ->  
 :CURSOR:MARKER:CM1:DV2:VALUE 0

**:CURSOR:MARKER:CM<x>:JUMP**

Function Jumps the marker cursor to the center position of the zoom waveform.  
 Syntax :CURSOR:MARKER:CM<x>:JUMP {Z1|Z2}  
 <x> = 1 to 4  
 Example :CURSOR:MARKER:CM1:JUMP Z1

**:CURSOR:MARKER:CM<x>:POSITION**

Function Sets the marker cursor position or queries the current setting.  
 Syntax :CURSOR:MARKER:CM<x>:POSITION {<NRf>}  
 :CURSOR:MARKER:CM<x>:POSITION?  
 <x> = 1 to 4  
 <NRf> = -5 to 5 div  
 Example :CURSOR:MARKER:CM1:POSITION 1  
 :CURSOR:MARKER:CM1:POSITION? ->  
 :CURSOR:MARKER:CM1:POSITION 1.000E+00

**:CURSOR:MARKER:CM<x>:T?**

Function Queries all settings related to the time measurement of the marker cursor.  
 Syntax :CURSOR:MARKER:CM<x>:T?  
 <x> = 1 to 4  
 Example :CURSOR:MARKER:CM1:T? ->  
 :CURSOR:MARKER:CM1:T:STATE 1

## 5.9 CURSOR Group

### **:CURSOR:MARKER:CM<x>:T:STATE**

Function Turns ON/OFF the time measurement of the maker cursor or queries the current setting.

Syntax :CURSOR:MARKER:CM<x>:T:STATE  
{<Boolean>}  
:CURSOR:MARKER:CM<x>:T:STATE?  
<x> = 1 to 4

Example :CURSOR:MARKER:CM1:T:STATE ON  
:CURSOR:MARKER:CM1:T:STATE? ->  
:CURSOR:MARKER:CM1:T:STATE 1

### **:CURSOR:MARKER:CM<x>:T:VALUE?**

Function Queries the time value at the marker cursor position.

Syntax :CURSOR:MARKER:CM<x>:T:VALUE?  
<x> = 1 to 4

Example :CURSOR:MARKER:CM1:T:VALUE? ->  
:CURSOR:MARKER:CM1:T:VALUE 0.000E+00

### **:CURSOR:MARKER:CM<x>:TRACE**

Function Sets the source trace of the marker cursor or queries the current setting.

Syntax :CURSOR:MARKER:CM<x>:TRACE {<NRf>|OFF}  
:CURSOR:MARKER:CM<x>:TRACE?  
<x> = 1 to 4  
<NRf> = 1 to 8

Example :CURSOR:MARKER:CM1:TRACE 1  
:CURSOR:MARKER:CM1:TRACE? ->  
:CURSOR:MARKER:CM1:TRACE 1

### **:CURSOR:MARKER:CM<x>:V?**

Function Queries all settings related to the voltage measurement of the marker cursor.

Syntax :CURSOR:MARKER:CM<x>:V?  
<x> = 1 to 4

Example :CURSOR:MARKER:CM1:V? ->  
:CURSOR:MARKER:CM1:V:STATE 1

### **:CURSOR:MARKER:CM<x>:V:STATE**

Function Turns ON/OFF the voltage measurement of the maker cursor or queries the current setting.

Syntax :CURSOR:MARKER:CM<x>:V:STATE  
{<Boolean>}  
:CURSOR:MARKER:CM<x>:V:STATE?  
<x> = 1 to 4

Example :CURSOR:MARKER:CM1:V:STATE ON  
:CURSOR:MARKER:CM1:V:STATE? ->  
:CURSOR:MARKER:CM1:V:STATE 1

### **:CURSOR:MARKER:CM<x>:V:VALUE?**

Function Queries the voltage value at the marker cursor position.

Syntax :CURSOR:MARKER:CM<x>:V:VALUE?  
<x> = 1 to 4

Example :CURSOR:MARKER:CM1:V:VALUE? ->  
:CURSOR:MARKER:CM1:V:VALUE 0.000E+00

### **:CURSOR:SERIAL?**

Function Queries all settings related to the serial cursors.

Syntax :CURSOR:SERIAL?

Example :CURSOR:SERIAL? ->  
:CURSOR:SERIAL:SCURSOr1:ACTIVE HIGH;  
BCOUNT 8;BITRATE 10.00E+00;  
BITORDER MSBFIRST;FORMAT BINARY;  
HYSTERESIS 1.000E+00;LEVEL 0.000E+00;  
MODE 1;POSITION -4.000E+00;TRACE 1;  
TRACK OFF;:CURSOR:SERIAL:SCURSOr2:  
ACTIVE HIGH;BCOUNT 8;BITRATE 1.000E+00;  
BITORDER MSBFIRST;FORMAT BINARY;  
HYSTERESIS 3.000E+00;LEVEL 0.000E+00;  
MODE 0;POSITION -4.000E+00;TRACE 2;  
TRACK OFF

### **:CURSOR:SERIAL:SCURSOr<x>?**

Function Queries all settings related to the serial cursor.

Syntax :CURSOR:SERIAL:SCURSOr<x>?  
<x> = 1 or 2

Example :CURSOR:SERIAL:SCURSOr1? ->  
:CURSOR:SERIAL:SCURSOr1:ACTIVE HIGH;  
BCOUNT 8;BITRATE 1.25E+06;  
BITORDER MSBFIRST;FORMAT BINARY;  
HYSTERESIS 300.00E-03;LEVEL 0.000E+00;  
MODE 1;POSITION -4.00E+00;TRACE 1;  
TRACK OFF

### **:CURSOR:SERIAL:SCURSOr<x>:ACTIVE**

Function Sets the active level of the serial cursor or queries the current setting.

Syntax :CURSOR:SERIAL:SCURSOr<x>:ACTIVE {HIGH|  
LOW}  
:CURSOR:SERIAL:SCURSOr<x>:ACTIVE?  
<x> = 1 or 2

Example :CURSOR:SERIAL:SCURSOr1:ACTIVE HIGH  
:CURSOR:SERIAL:SCURSOr1:ACTIVE? ->  
:CURSOR:SERIAL:SCURSOr1:ACTIVE HIGH

### **:CURSOR:SERIAL:SCURSOr<x>:BCOUNT**

Function Sets the bit length of the serial cursor or queries the current setting.

Syntax :CURSOR:SERIAL:SCURSOr<x>:BCOUNT  
{<NRf>}  
:CURSOR:SERIAL:SCURSOr<x>:BCOUNT?  
<x> = 1 or 2  
<NRf> = 1 to 128 (bits)

Example :CURSOR:SERIAL:SCURSOr1:BCOUNT 8  
:CURSOR:SERIAL:SCURSOr1:BCOUNT? ->  
:CURSOR:SERIAL:SCURSOr1:BCOUNT 8

## 5.9 CURSOR Group

### **:CURSOR:SERIAL:SCURSOR<x>:BITRate**

Function Sets the bit rate of the serial cursor or queries the current setting.

Syntax :CURSOR:SERIAL:SCURSOR<x>:BITRate  
{<NRf>}  
:CURSOR:SERIAL:SCURSOR<x>:BITRate?  
<x> = 1 or 2  
<NRf> = 1 to 1 G (bps)

Example :CURSOR:SERIAL:SCURSOR1:BITRATE 10  
:CURSOR:SERIAL:SCURSOR1:BITRATE? ->  
:CURSOR:SERIAL:SCURSOR1:  
BITRATE 10.00E+00

### **:CURSOR:SERIAL:SCURSOR<x>:BITOrder**

Function Sets the bit order of the serial cursor or queries the current setting.

Syntax :CURSOR:SERIAL:SCURSOR<x>:BITOrder  
{LSBFirst|MSBFirst}  
:CURSOR:SERIAL:SCURSOR<x>:BITOrder?  
<x> = 1 or 2

Example :CURSOR:SERIAL:SCURSOR1:  
BITORDER LSBFIRST  
:CURSOR:SERIAL:SCURSOR1:BITORDER? ->  
:CURSOR:SERIAL:SCURSOR1:  
BITORDER LSBFIRST

### **:CURSOR:SERIAL:SCURSOR<x>:FORMat**

Function Sets the display format of the serial cursor or queries the current setting.

Syntax :CURSOR:SERIAL:SCURSOR<x>:FORMat  
{BINARY|HEXa}  
:CURSOR:SERIAL:SCURSOR<x>:FORMat?  
<x> = 1 or 2

Example :CURSOR:SERIAL:SCURSOR1:FORMAT HEXA  
:CURSOR:SERIAL:SCURSOR1:FORMAT? ->  
:CURSOR:SERIAL:SCURSOR1:FORMAT HEXA

### **:CURSOR:SERIAL:SCURSOR<x>:HYSTeresis**

Function Sets the hysteresis of the serial cursor or queries the current setting.

Syntax :CURSOR:SERIAL:SCURSOR<x>:HYSTeresis  
{<NRf>}  
:CURSOR:SERIAL:SCURSOR<x>:HYSTeresis?  
<x> = 1 or 2  
<NRf> = 0 to 4 (div)

Example :CURSOR:SERIAL:SCURSOR1:HYSTERESIS 1  
:CURSOR:SERIAL:SCURSOR1:HYSTERESIS? ->  
:CURSOR:SERIAL:SCURSOR1:  
HYSTERESIS 1.000E+00

### **:CURSOR:SERIAL:SCURSOR<x>:JUMP**

Function Moves the serial cursor to the specified direction.

Syntax :CURSOR:SERIAL:SCURSOR<x>:JUMP  
{BACK|FRONT}  
<x> = 1 or 2

Example :CURSOR:SERIAL:SCURSOR1:JUMP BACK

### **:CURSOR:SERIAL:SCURSOR<x>:LEVel**

Function Sets the threshold level of the serial cursor or queries the current setting.

Syntax :CURSOR:SERIAL:SCURSOR<x>:LEVel  
{<Voltage>|<Current>}  
:CURSOR:SERIAL:SCURSOR<x>:LEVel?  
<x> = 1 or 2  
<Voltage> and <Current> = See the DL9000 User's Manual.

Example :CURSOR:SERIAL:SCURSOR1:LEVEL 0V  
:CURSOR:SERIAL:SCURSOR1:LEVEL? ->  
:CURSOR:SERIAL:SCURSOR1:LEVEL 0.000E+00

### **:CURSOR:SERIAL:SCURSOR<x>:MODE**

Function Turns ON/OFF the serial cursor or queries the current setting.

Syntax :CURSOR:SERIAL:SCURSOR<x>:MODE  
{<Boolean>}  
:CURSOR:SERIAL:SCURSOR<x>:MODE?  
<x> = 1 or 2

Example :CURSOR:SERIAL:SCURSOR1:MODE ON  
:CURSOR:SERIAL:SCURSOR1:MODE? ->  
:CURSOR:SERIAL:SCURSOR1:MODE 1

### **:CURSOR:SERIAL:SCURSOR<x>:POSition**

Function Sets the serial cursor position or queries the current setting.

Syntax :CURSOR:SERIAL:SCURSOR<x>:POSition  
{<NRf>}  
:CURSOR:SERIAL:SCURSOR<x>:POSition?  
<x> = 1 or 2  
<NRf> = -5 to 5 div

Example :CURSOR:SERIAL:SCURSOR1:POSITION 1  
:CURSOR:SERIAL:SCURSOR1:POSITION? ->  
:CURSOR:SERIAL:SCURSOR1:  
POSITION 1.000E+00

## 5.9 CURSOR Group

### **:CURSOR:SERIAL:SCURSOR<x>:TRACE**

Function Sets the trace of the serial cursor or queries the current setting.

Syntax :CURSOR:SERIAL:SCURSOR<x>:TRACE {<NRf>}  
:CURSOR:SERIAL:SCURSOR<x>:TRACE?  
<x> = 1 or 2  
<NRf> = 1 to 8

Example :CURSOR:SERIAL:SCURSOR1:TRACE 1  
:CURSOR:SERIAL:SCURSOR1:TRACE? ->  
:CURSOR:SERIAL:SCURSOR1:TRACE 1

### **:CURSOR:SERIAL:SCURSOR<x>:TRACK**

Function Jumps the serial cursor onto the zoom waveform.

Syntax :CURSOR:SERIAL:SCURSOR<x>:TRACK {OFF | Z1 | Z2}  
:CURSOR:SERIAL:SCURSOR<x>:TRACK?  
<x> = 1 or 2

Example :CURSOR:SERIAL:SCURSOR1:TRACK OFF  
:CURSOR:SERIAL:SCURSOR1:TRACK? ->  
:CURSOR:SERIAL:SCURSOR1:TRACK OFF

### **:CURSOR:SERIAL:SCURSOR<x>:VALUE?**

Function Queries the measured value of the serial cursor.

Syntax :CURSOR:SERIAL:SCURSOR<x>:VALUE?  
<x> = 1 or 2

Example :CURSOR:SERIAL:SCURSOR1:VALUE? ->  
:CURSOR:SERIAL:SCURSOR1:VALUE 11000111

### **:CURSOR:TYPE**

Function Sets the cursor type or queries the current setting.

Syntax :CURSOR:TYPE {HORIZONTAL|HORIZONTAL|MARKER|SERIAL|VERTICAL|VT}  
:CURSOR:TYPE?

Example :CURSOR:TYPE HORIZONTAL  
:CURSOR:TYPE? ->  
:CURSOR:TYPE HORIZONTAL

### **:CURSOR:VERTICAL?**

Function Queries all settings related to the vertical cursors.

Syntax :CURSOR:VERTICAL?

Example :CURSOR:VERTICAL? -> :CURSOR:VERTICAL:  
BASIC:DT:STATE 1;:CURSOR:VERTICAL:  
BASIC:LINKAGE 1;PERDT:STATE 1;:CURSOR:  
VERTICAL:BASIC:T1:POSITION -4.000E+00;  
STATE 1;:CURSOR:VERTICAL:BASIC:T2:  
POSITION -4.000E+00;STATE 1;:CURSOR:  
VERTICAL:CALCULATION:DEFINE1 "T1";  
DEFINE2 "T2";DEFINE3 "T1";DEFINE4 "T2";  
STATE1 0;STATE2 0;STATE3 0;STATE4 0

### **:CURSOR:VERTICAL:BASIC?**

Function Queries all settings related to basic items of the vertical cursors.

Syntax :CURSOR:VERTICAL:BASIC?

Example :CURSOR:VERTICAL:BASIC? ->  
:CURSOR:VERTICAL:BASIC:DT:STATE 1;:  
CURSOR:VERTICAL:BASIC:LINKAGE 1;PERDT:  
STATE 1;:CURSOR:VERTICAL:BASIC:T1:  
POSITION -4.000E+00;STATE 1;:CURSOR:  
VERTICAL:BASIC:T2:POSITION -4.000E+00;  
STATE 1

### **:CURSOR:VERTICAL[:BASIC]:ALL**

Function Turns ON/OFF all basic items of the vertical cursors.

Syntax :CURSOR:VERTICAL[:BASIC]:ALL  
{<Boolean>}

Example :CURSOR:VERTICAL:BASIC:ALL ON

### **:CURSOR:VERTICAL[:BASIC]:DT?**

Function Queries all settings related to the  $\Delta T$  measurement of the vertical cursors.

Syntax :CURSOR:VERTICAL[:BASIC]:DT?

Example :CURSOR:VERTICAL:BASIC:DT? ->  
:CURSOR:VERTICAL:BASIC:DT:STATE 1

### **:CURSOR:VERTICAL[:BASIC]:DT:STATE**

Function Turns ON/OFF the  $\Delta T$  measurement of the vertical cursors or queries the current setting.

Syntax :CURSOR:VERTICAL[:BASIC]:DT:STATE  
{<Boolean>}  
:CURSOR:VERTICAL[:BASIC]:DT:STATE?

Example :CURSOR:VERTICAL:BASIC:DT:STATE ON  
:CURSOR:VERTICAL:BASIC:DT:STATE? ->  
:CURSOR:VERTICAL:BASIC:DT:STATE 1

### **:CURSOR:VERTICAL[:BASIC]:DT:VALUE?**

Function Queries the  $\Delta T$  value of the vertical cursors.

Syntax :CURSOR:VERTICAL[:BASIC]:DT:VALUE?

Example :CURSOR:VERTICAL:BASIC:DT:VALUE? ->  
:CURSOR:VERTICAL:BASIC:DT:  
VALUE 1.000E+00

### **:CURSOR:VERTICAL[:BASIC]:LINKAGE**

Function Turns ON/OFF the vertical cursor link or queries the current setting.

Syntax :CURSOR:VERTICAL[:BASIC]:  
LINKAGE {<Boolean>}  
:CURSOR:VERTICAL[:BASIC]:LINKAGE?

Example :CURSOR:VERTICAL:BASIC:LINKAGE ON  
:CURSOR:VERTICAL:BASIC:LINKAGE? ->  
:CURSOR:VERTICAL:BASIC:LINKAGE 1

**:CURSOR:VERTICAL[:BASIC]:PERDt?**

Function Queries all settings related to the  $1/\Delta T$  measurement of the vertical cursors.

Syntax :CURSOR:VERTICAL[:BASIC]:PERDt?

Example :CURSOR:VERTICAL:BASIC:PERDt? ->  
:CURSOR:VERTICAL:BASIC:PERDt:STATE 1

**:CURSOR:VERTICAL[:BASIC]:PERDt:STATE**

Function Turns ON/OFF the  $1/\Delta T$  measurement of the vertical cursors or queries the current setting.

Syntax :CURSOR:VERTICAL[:BASIC]:PERDt:STATE  
{<Boolean>}

Example :CURSOR:VERTICAL:BASIC:PERDt:STATE ON  
:CURSOR:VERTICAL:BASIC:PERDt:STATE? ->  
:CURSOR:VERTICAL:BASIC:PERDt:STATE 1

**:CURSOR:VERTICAL[:BASIC]:PERDt:****VALUE?**

Function Queries the  $1/\Delta T$  value of the vertical cursors.

Syntax :CURSOR:VERTICAL[:BASIC]:PERDt:VALUE?

Example :CURSOR:VERTICAL:BASIC:PERDt:VALUE? ->  
:CURSOR:VERTICAL:BASIC:PERDt:  
VALUE 0.000E+00

**:CURSOR:VERTICAL[:BASIC]:T<x>?**

Function Queries all settings related to the vertical cursor.

Syntax :CURSOR:VERTICAL[:BASIC]:T<x>?  
<x> = 1 or 2

Example :CURSOR:VERTICAL:BASIC:T1? ->  
:CURSOR:VERTICAL:BASIC:T1:  
POSITION -4.000E+00;STATE 1

**:CURSOR:VERTICAL[:BASIC]:T<x>:JUMP**

Function Jumps to the center position of the zoom waveform of the vertical cursor.

Syntax :CURSOR:VERTICAL[:BASIC]:T<x>:JUMP {Z1 |  
Z2}  
<x> = 1 or 2

Example :CURSOR:VERTICAL:BASIC:T1:JUMP Z1

**:CURSOR:VERTICAL[:BASIC]:T<x>:****POSITION**

Function Sets the vertical cursor position or queries the current setting.

Syntax :CURSOR:VERTICAL[:BASIC]:T<x>:POSITION  
{<NRF>}  
:CURSOR:VERTICAL[:BASIC]:T<x>:POSITION?  
<x> = 1 or 2  
<NRF> = -5 to 5 (div)

Example :CURSOR:VERTICAL:BASIC:T1:POSITION 1  
:CURSOR:VERTICAL:BASIC:T1:POSITION? ->  
:CURSOR:VERTICAL:BASIC:T1:  
POSITION 1.000E+00

**:CURSOR:VERTICAL[:BASIC]:T<x>:STATE**

Function Turns ON/OFF the vertical cursor or queries the current setting.

Syntax :CURSOR:VERTICAL[:BASIC]:T<x>:STATE  
{<Boolean>}  
:CURSOR:VERTICAL[:BASIC]:T<x>:STATE?  
<x> = 1 or 2

Example :CURSOR:VERTICAL:BASIC:T1:STATE ON  
:CURSOR:VERTICAL:BASIC:T1:STATE? ->  
:CURSOR:VERTICAL:BASIC:T1:STATE 1

**:CURSOR:VERTICAL[:BASIC]:T<x>:VALUE?**

Function Queries the time value at the vertical cursor.

Syntax :CURSOR:VERTICAL[:BASIC]:T<x>:VALUE?  
<x> = 1 or 2

Example :CURSOR:VERTICAL:BASIC:T1:VALUE? ->  
:CURSOR:VERTICAL:BASIC:T1:  
VALUE 0.000E+00

**:CURSOR:VERTICAL:CALCulation?**

Function Queries all settings related to calculation items of the vertical cursors.

Syntax :CURSOR:VERTICAL:CALCulation?

Example :CURSOR:VERTICAL:CALCulation? ->  
:CURSOR:VERTICAL:CALCulation:  
DEFINE1 "T1";DEFINE2 "T2";DEFINE3 "T1";  
DEFINE4 "T2";STATE1 0;STATE2 0;  
STATE3 0;STATE4 0

**:CURSOR:VERTICAL:CALCulation:ALL**

Function Turns ON/OFF all calculation items of the vertical cursors.

Syntax :CURSOR:VERTICAL:CALCulation:ALL  
{<Boolean>}

Example :CURSOR:VERTICAL:CALCulation:ALL ON

## 5.9 CURSOR Group

### **:CURSOR:VERTICAL:CALCULATION:**

#### **DEFINE<x>**

**Function** Sets the equation of the calculation item of the vertical cursor or queries the current setting.

**Syntax** :CURSOR:VERTICAL:CALCULATION:DEFINE<x> {<String>}  
:CURSOR:VERTICAL:CALCULATION:DEFINE<x>? <x> = 1 to 4  
<String> = Up to 128 characters

**Example** :CURSOR:VERTICAL:CALCULATION:  
DEFINE1 "T1"  
:CURSOR:VERTICAL:CALCULATION:DEFINE1?  
-> :CURSOR:VERTICAL:CALCULATION:  
DEFINE1 "T1"

### **:CURSOR:VERTICAL:CALCULATION:**

#### **STATE<x>**

**Function** Turns ON/OFF the calculation item of the vertical cursor or queries the current setting.

**Syntax** :CURSOR:VERTICAL:CALCULATION:STATE<x> {<Boolean>}  
:CURSOR:VERTICAL:CALCULATION:STATE<x>? <x> = 1 to 4

**Example** :CURSOR:VERTICAL:CALCULATION:STATE1 ON  
:CURSOR:VERTICAL:CALCULATION:STATE1? ->  
:CURSOR:VERTICAL:CALCULATION:STATE1 1

### **:CURSOR:VERTICAL:CALCULATION:**

#### **VALUE<x>?**

**Function** Queries the measured value of the calculation item of the vertical cursor.

**Syntax** :CURSOR:VERTICAL:CALCULATION:VALUE<x>? <x> = 1 to 4

**Example** :CURSOR:VERTICAL:CALCULATION:VALUE1? ->  
:CURSOR:VERTICAL:CALCULATION:VALUE1  
0.000E+00

### **:CURSOR:VT?**

**Function** Queries all settings related to the VT cursor.

**Syntax** :CURSOR:VT?

**Example** :CURSOR:VT? ->  
:CURSOR:VT:BASIC:POSITION 0.000E+00;T:  
STATE 1;;CURSOR:VT:BASIC:V1:STATE 1;;  
CURSOR:VT:BASIC:V2:STATE 1;;CURSOR:VT:  
BASIC:V3:STATE 1;;CURSOR:VT:BASIC:V4:  
STATE 1;;CURSOR:VT:BASIC:V5:STATE 1;;  
CURSOR:VT:BASIC:V6:STATE 1;;CURSOR:VT:  
BASIC:V7:STATE 1;;CURSOR:VT:BASIC:V8:  
STATE 1;;CURSOR:VT:CALCULATION:  
DEFINE1 "T1";DEFINE2 "V(C1)";  
DEFINE3 "V(C2)";DEFINE4 "V(C3)";  
STATE1 0;STATE2 0;STATE3 0;STATE4 0

### **:CURSOR:VT[:BASIC]?**

**Function** Queries all settings related to basic items of the VT cursor.

**Syntax** :CURSOR:VT[:BASIC]?

**Example** :CURSOR:VT:BASIC? ->  
:CURSOR:VT:BASIC:POSITION 0.000E+00;T:  
STATE 1;;CURSOR:VT:BASIC:V1:STATE 1;;  
CURSOR:VT:BASIC:V2:STATE 1;;CURSOR:VT:  
BASIC:V3:STATE 1;;CURSOR:VT:BASIC:V4:  
STATE 1;;CURSOR:VT:BASIC:V5:STATE 1;;  
CURSOR:VT:BASIC:V6:STATE 1;;CURSOR:VT:  
BASIC:V7:STATE 1;;CURSOR:VT:BASIC:V8:  
STATE 1

### **:CURSOR:VT[:BASIC]:ALL**

**Function** Turns ON/OFF all basic items of the VT cursor.

**Syntax** :CURSOR:VT[:BASIC]:ALL {<Boolean>}

**Example** :CURSOR:VT:BASIC:ALL ON

### **:CURSOR:VT[:BASIC]:POSITION**

**Function** Sets the VT cursor position or queries the current setting.

**Syntax** :CURSOR:VT[:BASIC]:POSITION {<NRf>}  
:CURSOR:VT[:BASIC]:POSITION? <NRf> = -5 to 5 (div)

**Example** :CURSOR:VT:BASIC:POSITION 1  
:CURSOR:VT:BASIC:POSITION? ->  
:CURSOR:VT:BASIC:POSITION 1.000E+00

### **:CURSOR:VT[:BASIC]:T?**

**Function** Queries all settings related to the time value of the VT cursor.

**Syntax** :CURSOR:VT[:BASIC]:T?

**Example** :CURSOR:VT:BASIC:T? ->  
:CURSOR:VT:BASIC:T:STATE 1

### **:CURSOR:VT[:BASIC]:T:STATE**

**Function** Turns ON/OFF the time value of the VT cursor or queries the current setting.

**Syntax** :CURSOR:VT[:BASIC]:T:STATE {<Boolean>}  
:CURSOR:VT[:BASIC]:T:STATE?

**Example** :CURSOR:VT:BASIC:T:STATE ON  
:CURSOR:VT:BASIC:T:STATE? ->  
:CURSOR:VT:BASIC:T:STATE 1

### **:CURSOR:VT[:BASIC]:T:VALUE?**

**Function** Queries the time value at the VT cursor.

**Syntax** :CURSOR:VT[:BASIC]:T:VALUE?

**Example** :CURSOR:VT:BASIC:T:VALUE? ->  
:CURSOR:VT:BASIC:T:VALUE 0.000E+00

**:CURSOR:VT[:BASic]:V<x>?**

Function Queries all settings related to the voltage value of the VT cursor.

Syntax :CURSOR:VT[:BASic]:V<x>?  
<x> = 1 to 8

Example :CURSOR:VT:BASic:V1? ->  
:CURSOR:VT:BASic:V1:STATE 1

**:CURSOR:VT[:BASic]:V<x>:STATE**

Function Turns ON/OFF the voltage value of the VT cursor or queries the current setting.

Syntax :CURSOR:VT[:BASic]:V<x>:STATE  
{<Boolean>}  
:CURSOR:VT[:BASic]:V<x>:STATE?  
<x> = 1 to 8

Example :CURSOR:VT:BASic:V1:STATE ON  
:CURSOR:VT:BASic:V1:STATE? ->  
:CURSOR:VT:BASic:V1:STATE 1

**:CURSOR:VT[:BASic]:V<x>:VALue?**

Function Queries the voltage value at the VT cursor.

Syntax :CURSOR:VT[:BASic]:V<x>:VALue?  
<x> = 1 to 8

Example :CURSOR:VT:BASic:V1:VALue? ->  
:CURSOR:VT:BASic:V1:VALue 0.000E+00

**:CURSOR:VT:CALCulation?**

Function Queries all settings related to calculation items of the VT cursor.

Syntax :CURSOR:VT:CALCulation?

Example :CURSOR:VT:CALCULATION? ->  
:CURSOR:VT:CALCULATION:DEFINE1 "T1";  
DEFINE2 "V(C1)";DEFINE3 "V(C2)";  
DEFINE4 "V(C3)";STATE1 0;STATE2 0;  
STATE3 0;STATE4 0

**:CURSOR:VT:CALCulation:ALL**

Function Turns ON/OFF all calculation items of the VT cursor.

Syntax :CURSOR:VT:CALCulation:ALL {<Boolean>}  
Example :CURSOR:VT:CALCULATION:ALL ON

**:CURSOR:VT:CALCulation:DEFine<x>**

Function Sets the equation of the calculation item of the VT cursor or queries the current setting.

Syntax :CURSOR:VT:CALCulation:DEFine<x>  
{<String>}  
:CURSOR:VT:CALCulation:DEFine<x>?  
<x> = 1 to 4  
<String> = Up to 128 characters

Example :CURSOR:VT:CALCULATION:DEFINE1 "T1"  
:CURSOR:VT:CALCULATION:DEFINE1? ->  
:CURSOR:VT:CALCULATION:DEFINE1 "T1"

**:CURSOR:VT:CALCulation:STATE<x>**

Function Turns ON/OFF the calculation item of the VT cursor or queries the current setting.

Syntax :CURSOR:VT:CALCulation:STATE<x>  
{<Boolean>}  
:CURSOR:VT:CALCulation:STATE<x>?  
<x> = 1 to 4

Example :CURSOR:VT:CALCULATION:STATE1 ON  
:CURSOR:VT:CALCULATION:STATE1? ->  
:CURSOR:VT:CALCULATION:STATE1 0

**:CURSOR:VT:CALCulation:VALue<x>?**

Function Queries the measured value of the calculation item of the VT cursor.

Syntax :CURSOR:VT:CALCulation:VALue<x>?  
<x> = 1 to 4

Example :CURSOR:VT:CALCULATION:VALUE1? ->  
:CURSOR:VT:CALCULATION:VALUE1 0.000E+00

**:CURSOR:VT:JUMP**

Function Jumps the VT cursor to the center position of the zoom waveform.

Syntax :CURSOR:VT:JUMP {Z1|Z2}

Example :CURSOR:VT:JUMP Z1



## 5.10 DISPlay Group

### :DISPlay?

Function Queries all settings related to the display.

Syntax :DISPlay?

Example :DISPLAY? -> :DISPLAY:ACCUMULATE:  
 GRADE INTENSITY;MODE 0;PERSISTENCE:  
 COUNT INFINITY;MODE COUNT;  
 TIME 1.000E+00;:DISPLAY:BLIGHT:  
 AUTOOFF 0;BRIGHTNESS 1;LCD 1;TIMEOUT 1;  
 :DISPLAY:COLOR:CHANNEL1 BLUE;  
 CHANNEL2 BGREEN;CHANNEL3 CYAN;  
 CHANNEL4 DBLUE;MATH1 GRAY;MATH2 GREEN;  
 MATH3 LBLUE;MATH4 LGREEN;  
 REFERENCE1 MAGENTA;REFERENCE2 MGREEN;  
 REFERENCE3 ORANGE;REFERENCE4 PINK;  
 :DISPLAY:FORMAT SINGLE;GRATICULE GRID;  
 INTENSITY:WAVEFORM 10;CURSOR 10;  
 GRID 10;MARKER 10;ZBOX 10;  
 :DISPLAY:INTERPOLATE SINE;MAPPING:  
 MODE AUTO;TRACE1 1;TRACE2 1;TRACE3 1;  
 TRACE4 1;TRACE5 1;TRACE6 1;TRACE7 1;  
 TRACE8 1

### :DISPlay:ACCumulate?

Function Queries all settings related to the accumulated display of waveforms.

Syntax :DISPlay:ACCumulate?

Example :DISPLAY:ACCUMULATE? ->  
 :DISPLAY:ACCUMULATE:GRADE INTENSITY;  
 MODE 0;PERSISTENCE:COUNT INFINITY;  
 MODE COUNT;TIME 1.000E+00

### :DISPlay:ACCumulate:GRADE

Function Sets the accumulate mode or queries the current setting.

Syntax :DISPlay:ACCumulate:GRADE {COLor |  
 INTensity}

Example :DISPLAY:ACCUMULATE:GRADE INTENSITY  
 :DISPLAY:ACCUMULATE:GRADE? ->  
 :DISPLAY:ACCUMULATE:GRADE INTENSITY

### :DISPlay:ACCumulate:MODE

Function Turns ON/OFF the accumulate mode or queries the current setting.

Syntax :DISPlay:ACCumulate:MODE {<Boolean>}  
 :DISPlay:ACCumulate:MODE?

Example :DISPLAY:ACCUMULATE:MODE ON  
 :DISPLAY:ACCUMULATE:MODE? ->  
 :DISPLAY:ACCUMULATE:MODE 1

### :DISPlay:ACCumulate:PERSistence?

Function Queries all settings related to persistence.

Syntax :DISPlay:ACCumulate:PERSistence?

Example :DISPLAY:ACCUMULATE:PERSISTENCE? ->  
 :DISPLAY:ACCUMULATE:PERSISTENCE:  
 COUNT INFINITY;MODE COUNT;  
 TIME 1.000E+00

### :DISPlay:ACCumulate:PERSistence:

#### COUNT

Function Sets the persistence count or queries the current setting.

Syntax :DISPlay:ACCumulate:PERSistence:COUNT  
 {<Nrf> | INFinity}  
 :DISPlay:ACCumulate:PERSistence:COUNT?  
 <Nrf> = 1 to (the maximum number of history pages at the current record length)

Example :DISPLAY:ACCUMULATE:PERSISTENCE:  
 COUNT INFINITY  
 :DISPLAY:ACCUMULATE:PERSISTENCE:COUNT?  
 -> :DISPLAY:ACCUMULATE:PERSISTENCE:  
 COUNT INFINITY

### :DISPlay:ACCumulate:PERSistence:MODE

Function Sets the persistence mode or queries the current setting.

Syntax :DISPlay:ACCumulate:PERSistence:MODE  
 {COUNT | TIME}  
 :DISPlay:ACCumulate:PERSistence:MODE?

Example :DISPLAY:ACCUMULATE:PERSISTENCE:  
 MODE COUNT  
 :DISPLAY:ACCUMULATE:PERSISTENCE:MODE?  
 -> :DISPLAY:ACCUMULATE:PERSISTENCE:  
 MODE COUNT

### :DISPlay:ACCumulate:PERSistence:TIME

Function Sets the persistence time or queries the current setting.

Syntax :DISPlay:ACCumulate:PERSistence:TIME  
 {<Time> | INFinity}  
 :DISPlay:ACCumulate:PERSistence:TIME?  
 <Time> = 100 ms to 1 s (100 ms steps), 1 s to 10 s  
 (200 ms steps), 10 s to 100 s (2 s steps)

Example :DISPLAY:ACCUMULATE:PERSISTENCE:TIME 1S  
 :DISPLAY:ACCUMULATE:PERSISTENCE:TIME?  
 -> :DISPLAY:ACCUMULATE:PERSISTENCE:  
 TIME 1.000E+00

**:DISPlay:BLIght?**

Function Queries all settings related to the backlight.  
 Syntax :DISPlay:BLIght?  
 Example :DISPLAY:BLIGHT? ->  
 :DISPLAY:BLIGHT:AUTOOFF 0;BRIGHTNESS 1;  
 LCD 1;TIMEOUT 1

**:DISPlay:BLIght:AUTOoff**

Function Sets the function that automatically turns the backlight off or queries the current setting.  
 Syntax :DISPlay:BLIght:AUTOoff {<Boolean>}  
 :DISPlay:BLIght:AUTOoff?  
 Example :DISPLAY:BLIGHT:AUTOOFF ON  
 :DISPLAY:BLIGHT:AUTOOFF? ->  
 :DISPLAY:BLIGHT:AUTOOFF 1

**:DISPlay:BLIght:BRIGhtness**

Function Sets the brightness of the backlight or queries the current setting.  
 Syntax :DISPlay:BLIght:BRIGhtness {<NRf>}  
 :DISPlay:BLIght:BRIGhtness?  
 <NRf> = 1 to 8  
 Example :DISPLAY:BLIGHT:BRIGHTNESS 1  
 :DISPLAY:BLIGHT:BRIGHTNESS? ->  
 :DISPLAY:BLIGHT:BRIGHTNESS 1

**:DISPlay:BLIght:LCD**

Function Turns ON/OFF the backlight or queries the current setting.  
 Syntax :DISPlay:BLIght:LCD {<Boolean>}  
 :DISPlay:BLIght:LCD?  
 Example :DISPLAY:BLIGHT:LCD ON  
 :DISPLAY:BLIGHT:LCD? ->  
 :DISPLAY:BLIGHT:LCD 1

**:DISPlay:BLIght:TIMEout**

Function Sets the timeout of the backlight or queries the current setting.  
 Syntax :DISPlay:BLIght:TIMEout {<NRf>}  
 :DISPlay:BLIght:TIMEout?  
 <NRf> = 1 to 60 (minutes)  
 Example :DISPLAY:BLIGHT:TIMEOUT 60  
 :DISPLAY:BLIGHT:TIMEOUT? ->  
 :DISPLAY:BLIGHT:TIMEOUT 60

**:DISPlay:COLor?**

Function Queries all settings related to the waveform display color.  
 Syntax :DISPlay:COLor?  
 Example :DISPLAY:COLOR? ->  
 :DISPLAY:COLOR:CHANNEL1 BLUE;  
 CHANNEL2 BGREEN;CHANNEL3 CYAN;  
 CHANNEL4 DBLUE;MATH1 GRAY;MATH2 GREEN;  
 MATH3 LBLUE;MATH4 LGREEN;  
 REFERENCE1 MAGENTA;REFERENCE2 MGREEN;  
 REFERENCE3 ORANGE;REFERENCE4 PINK

**:DISPlay:COLor:{CHANnel<x>|MATH<x>|REFERENCE<x>}?**

Function Sets the color of the waveform or queries the current setting.  
 Syntax :DISPlay:COLor:{CHANnel<x>|MATH<x>|REFERENCE<x>}  
 {BLUE|BGreen|CYAN|DBLue|GRAY|GRen|LBlue|LGreen|MAGenta|MGreen|ORANge|PINK|PURple|RED|SPInk|YELLOW}  
 :DISPlay:COLor:{CHANnel<x>|MATH<x>|REFERENCE<x>}?  
 <x> of CHANnel<x> = 1 to 4  
 <x> of MATH<x> = 1 to 4  
 <x> of REFERENCE<x> = 1 to 4  
 Example :DISPLAY:COLOR:CHANNEL1 BLUE  
 :DISPLAY:COLOR:CHANNEL1? ->  
 :DISPLAY:COLOR:CHANNEL1 BLUE

**:DISPlay:FORMat**

Function Sets the display format or queries the current setting.  
 Syntax :DISPlay:FORMat {DUAL|QUAD|SINGLE|TRIad}  
 :DISPlay:FORMat?  
 Example :DISPLAY:FORMAT SINGLE  
 :DISPLAY:FORMAT? ->  
 :DISPLAY:FORMAT SINGLE

**:DISPlay:GRATicule**

Function Sets the graticule (grid) or queries the current setting.  
 Syntax :DISPlay:GRATicule {CROSShair|FRAME|GRID|LINE}  
 :DISPlay:GRATicule?  
 Example :DISPLAY:GRATICULE CROSSHAIR  
 :DISPLAY:GRATICULE? ->  
 :DISPLAY:GRATICULE CROSSHAIR

**:DISPlay:INTENSity?**

Function Queries all settings related to the intensity of the displayed items.  
 Syntax :DISPlay:INTENSity?  
 :DISPlay:INTENSity? ->  
 Example :DISPLAY:INTENSITY? ->  
 :DISPLAY:INTENSITY:WAVEFORM 10;  
 CURSOR 10;GRID 10;MARKER 10

**:DISPlay:INTENSity[:WAVEform]**

Function Sets the intensity of the waveform or queries the current setting.  
 Syntax :DISPlay:INTENSity[:WAVEform] {<NRf>}  
 :DISPlay:INTENSity[:WAVEform]?  
 <NRf> = 1 to 20  
 Example :DISPLAY:INTENSITY:WAVEFORM 10  
 :DISPLAY:INTENSITY:WAVEFORM? ->  
 :DISPLAY:INTENSITY:WAVEFORM 10

## 5.10 DISPlay Group

---

### **:DISPlay:INTENsity:{CURSOR|GRID|MARKER|ZBOX}**

Function Sets the intensity of the display item or queries the current setting.

Syntax :DISPlay:INTENsity:{CURSOR|GRID|MARKER|ZBOX} {<NRf>}  
:DISPlay:INTENsity:{CURSOR|GRID|MARKER|ZBOX}?  
<NRf> = 0 to 31

Example :DISPLAY:INTENSITY:CURSOR 10  
:DISPLAY:INTENSITY:CURSOR? ->  
:DISPLAY:INTENSITY:CURSOR 10

### **:DISPlay:INTERpolate**

Function Sets the display interpolation format or queries the current setting.

Syntax :DISPlay:INTERpolate {LINE|OFF|PULSe|SINE}  
:DISPlay:INTERpolate?

Example :DISPLAY:INTERPOLATE SINE  
:DISPLAY:INTERPOLATE? ->  
:DISPLAY:INTERPOLATE SINE

### **:DISPlay:MAPPING?**

Function Queries all settings related to the waveform mapping to the split screen.

Syntax :DISPlay:MAPPING?

Example :DISPLAY:MAPPING? ->  
:DISPLAY:MAPPING:MODE AUTO;TRACE1 1;  
TRACE2 1;TRACE3 1;TRACE4 1;TRACE5 1;  
TRACE6 1;TRACE7 1;TRACE8 1

### **:DISPlay:MAPPING[:MODE]**

Function Sets the waveform mapping mode for the split screen or queries the current setting.

Syntax :DISPlay:MAPPING[:MODE] {AUTO|MANual}  
:DISPlay:MAPPING[:MODE]?

Example :DISPLAY:MAPPING:MODE AUTO  
:DISPLAY:MAPPING:MODE? ->  
:DISPLAY:MAPPING:MODE AUTO

### **:DISPlay:MAPPING:TRACe<x>**

Function Sets the mapping of the waveform to the split screen or queries the current setting.

Syntax :DISPlay:MAPPING:TRACe<x> {<NRf>}  
:DISPlay:MAPPING:TRACe<x>?  
<x> = 1 to 8  
<NRf> = 1 to 4

Example :DISPLAY:MAPPING:TRACE1 3  
:DISPLAY:MAPPING:TRACE1? ->  
:DISPLAY:MAPPING:TRACE1 3

## 5.11 FILEGroup

### :FILE?

**Function** Queries all settings related to the specified storage medium or internal memory.

**Syntax** :FILE?

**Example** :FILE? -> :FILE:DIRECTORY:  
 CDIRECTORY "\Flash Mem\HOME";:FILE:  
 INTERNAL:STORE:BINARy:TRACE 1;:FILE:  
 INTERNAL:STORE:DMEMORY:TRACE 1;:FILE:  
 LOAD:BINARy:REFERENCE 1;:FILE:LOAD:  
 ZPOLYGON:ZONE 1;:FILE:LOAD:ZWAVE:  
 ZONE 1;:FILE:SAVE:AHISTOGRAM:  
 ANALYSIS 1;:FILE:SAVE:ANAMING DATE;  
 ASCII:COMPRESSION DECIMATION;  
 HISTORY ONE;TRACE 1;:FILE:SAVE:BINARy:  
 COMPRESSION DECIMATION;HISTORY ONE;  
 TRACE 1;:FILE:SAVE:  
 COMMENT "THIS IS TEST";DMEMORY:  
 TRACE 1;:FILE:SAVE:FFT:ANALYSIS 1;  
 FILE:SAVE:FLOAT:COMPRESSION DECIMATION;  
 HISTORY ONE;TRACE 1;:FILE:SAVE:  
 NAME "DL9000";SBUS:ANALYSIS 1;:FILE:  
 SAVE:ZWAVE:ZONE 1

### :FILE:DIRectory?

**Function** Queries all settings related to the specified storage medium.

**Syntax** :FILE:DIRectory?

**Example** :FILE:DIRectory? -> :FILE:DIRectory:  
 CDIRECTORY "\Flash Mem\HOME"

### :FILE[ :DIRectory ] :CDIRectory (Change Directory)

**Function** Sets the current directory or queries the current setting.

**Syntax** :FILE[ :DIRectory ]:CDIRectory {<String>}  
 :FILE[ :DIRectory ]:CDIRectory?  
 <String> = Up to 259 characters

**Example** :FILE:DIRectory:CDIRectory "\Flash  
 Mem\DIR1\DIR2"  
 (Absolute path designation)  
 :FILE:DIRectory:CDIRectory "DIR2"  
 (Relative path designation)  
 :FILE:DIRectory:CDIRectory "\"  
 (Root directory designation)  
 :FILE:DIRectory:CDIRectory? ->  
 :FILE:DIRectory:  
 CDIRECTORY "\Flash Mem\DIR1\DIR2"

**Description** • Data files cannot be saved to the root directory. Specify a save destination drive for the save directory.

The following five drives are selectable.

- Internal hard disk: "HD"
- Internal memory: "Flash Mem"
- Network drive: "Network"
- PC card: "Storage Card<x>"
- USB storage device: "USB Storage<x>"

<x> = 1 to 4 (however, only a total of four "Storage Card" and "USB Storage" designations are supported (including partitions))

- Sets the specified directory the current directory for saving and loading.
- Absolute and relative path designations are possible.
- To specify an absolute path, enter a backslash at the front of the path.
- Relative path to higher level directories is not allowed.

### :FILE[ :DIRectory ] :FREE?

**Function** Queries the free disk space in bytes on the specified storage medium.

**Syntax** :FILE[ :DIRectory ]:FREE?

**Example** :FILE:DIRectory:FREE?->  
 :FILE:DIRectory:FREE 65536

**Description** • Returns the size of the current directory.

- If the current directory is the root directory, "0" is returned.

## 5.11 FILEGroup

### **:FILE[:DIReCTory]:MDIRectory (Make Directory)**

**Function** Creates a directory under the specified directory. This is an overlap command.

**Syntax** :FILE[:DIReCTory]:MDIRectory {<String>}  
<String> = Up to 259 characters

**Example** :FILE:DIReCTory:MDIRectory "\Flash  
Mem\DIR1\DIR2"  
(Absolute path designation)  
:FILE:DIReCTory:MDIRectory "DIR2"  
(Relative path designation)

**Description** For details on the <String> parameter, see the description in FILE[:DIReCTory]:CDIRectory.

### **:FILE:INTernal?**

**Function** Queries all settings related to the internal memory.

**Syntax** :FILE:INTernal?

**Example** :FILE:INTernal? ->  
:FILE:INTernal:STORE:BINARy:TRACe 1;;  
FILE:INTernal:STORE:DMEMORy:TRACe 1

### **:FILE:INTernal:RECall:{DMEMORy} SETup}{:EXECute}**

**Function** Executes the loading of specific data from the internal memory. This is an overlap command.

**Syntax** :FILE:INTernal:RECall:{DMEMORy}  
SETup}{:EXECute} {<NRf>}  
<NRf> = 1 to 4

**Example** (The following is an example for setup data.)  
:FILE:INTernal:RECall:SETup:EXECUTE 1

### **:FILE:INTernal:STORE?**

**Function** Queries all settings related to the saving to the internal memory.

**Syntax** :FILE:INTernal:STORE?

**Example** :FILE:INTernal:STORE? ->  
:FILE:INTernal:STORE:BINARy:TRACe 1;;  
FILE:INTernal:STORE:DMEMORy:TRACe 1

### **:FILE:INTernal:STORE:{BINARy|DMEMORy}?**

**Function** Queries all settings related to the saving of specific data to the internal memory.

**Syntax** :FILE:INTernal:STORE:{BINARy|DMEMORy}?

**Example** (The following is an example for binary data.)  
:FILE:INTernal:STORE:BINARy? ->  
:FILE:INTernal:STORE:BINARy:TRACe 1

### **:FILE:INTernal:STORE:{BINARy|DMEMORy} SETup}{:EXECute}**

**Function** Executes the save operation of specific data to the internal memory. This is an overlap command.

**Syntax** :FILE:INTernal:STORE:{BINARy|DMEMORy}  
SETup}{:EXECute} {<NRf>}  
<NRf> = 1 to 4

**Example** (The following is an example for binary data.)  
:FILE:INTernal:STORE:BINARy:EXECUTE 1

### **:FILE:INTernal:STORE:BINARy:TRACe**

**Function** Sets the trace to be saved in binary data to the internal memory or queries the current setting.

**Syntax** :FILE:INTernal:STORE:BINARy:  
TRACe {<NRf>}  
:FILE:INTernal:STORE:BINARy:TRACe?  
<NRf> = 1 to 8

**Example** :FILE:INTernal:STORE:BINARy:TRACe 1  
:FILE:INTernal:STORE:BINARy:TRACe? ->  
:FILE:INTernal:STORE:BINARy:TRACe 1

### **:FILE:INTernal:STORE:DMEMORy:TRACe**

**Function** Sets the trace to be saved in accumulated data to the internal memory or queries the current setting.

**Syntax** :FILE:INTernal:STORE:DMEMORy:  
TRACe {<NRf>|ALL|XY1|XY2}  
:FILE:INTernal:STORE:DMEMORy:TRACe?  
<NRf> = 1 to 8

**Example** :FILE:INTernal:STORE:DMEMORy:TRACe 1  
:FILE:INTernal:STORE:DMEMORy:TRACe? ->  
:FILE:INTernal:STORE:DMEMORy:TRACe 1

### **:FILE:INTernal:UNLoad:**

#### **DMEMORy{:EXECute}**

**Function** Clears the loaded accumulated data.

**Syntax** :FILE:INTernal:UNLoad:DMEMORy{:EXECute}

**Example** :FILE:INTernal:UNLoad:DMEMORy:EXECUTE

### **:FILE:LOAD?**

**Function** Queries all settings related to the loading of files on the specified storage medium.

**Syntax** :FILE:LOAD?

**Example** :FILE:LOAD? ->  
:FILE:LOAD:BINARy:REFERenCe 1;:FILE:  
LOAD:ZPOLYGON:ZONE 1;:FILE:LOAD:ZWAVE:  
ZONE 1

### **:FILE:LOAD:{BINARy|ZPOLYGON|ZWAVE}?**

**Function** Queries all settings related to the loading of specific data.

**Syntax** :FILE:LOAD:{BINARy|ZPOLYGON|ZWAVE}?

**Example** (The following is an example for binary data.)  
:FILE:LOAD:BINARy? ->  
:FILE:LOAD:BINARy:REFERenCe 1

**:FILE:LOAD:{BINary|DMEemory|MASK|SETup|ZPOLygon|ZWAVE}:ABORT**

Function Aborts the loading of specific data.

Syntax :FILE:LOAD:{BINary|DMEemory|MASK|SETup|ZPOLygon|ZWAVE}:ABORT

Example (The following is an example for binary data.)  
:FILE:LOAD:BINARY:ABORT

**:FILE:LOAD:{BINary|DMEemory|MASK|SETup|ZPOLygon|ZWAVE}[:EXECute]**

Function Executes the loading of specific data. This is an overlap command.

Syntax :FILE:LOAD:{BINary|DMEemory|MASK|SETup|ZPOLygon|ZWAVE}[:EXECute] {<String>}  
<String> = Up to 259 characters

Example (The following is an example for binary data.)  
:FILE:LOAD:BINARY:  
EXECUTE "\Flash Mem\DIR\DATA"  
(Absolute path designation)  
:FILE:LOAD:BINARY:EXECUTE "DATA"  
(Relative path designation)

Description For details on the <String> parameter, see the description in FILE[:DIRectory]:CDIRectory.

**:FILE:LOAD:BINary:REFerence**

Function Sets the load destination of the binary data or queries the current setting.

Syntax :FILE:LOAD:BINary:REFerence {<NRf>|ACQMemory}  
:FILE:LOAD:BINary:REFerence?  
<NRf> = 1 to 4

Example :FILE:LOAD:BINARY:REFERENCE 1  
:FILE:LOAD:BINARY:REFERENCE? ->  
:FILE:LOAD:BINARY:REFERENCE 1

**:FILE:LOAD:{ZPOLygon|ZWAVE}:ZONE**

Function Sets the load destination of the zone data of specific data or queries the current setting.

Syntax :FILE:LOAD:{ZPOLygon|ZWAVE}:  
ZONE {<NRf>}  
:FILE:LOAD:{ZPOLygon|ZWAVE}:ZONE?  
<NRf> = 1 to 4

Example (The following is an example for ZONE WAVE data.)  
:FILE:LOAD:ZWAVE:ZONE 1  
:FILE:LOAD:ZWAVE:ZONE? ->  
:FILE:LOAD:ZWAVE:ZONE 1

**:FILE:SAVE?**

Function Queries all settings related to the saving of data.

Syntax :FILE:SAVE?

Example :FILE:SAVE? -> :FILE:SAVE:AHISTOGRAM:  
ANALYSIS 1;:FILE:SAVE:ANAMING DATE;  
ASCII:COMPRESSION DECIMATION;  
HISTORY ONE;TRACE 1;:FILE:SAVE:BINARY:  
COMPRESSION DECIMATION;HISTORY ONE;  
TRACE 1;:FILE:SAVE:  
COMMENT "THIS IS TEST";DMEMORY:  
TRACE 1;:FILE:SAVE:FFT:ANALYSIS 1;:  
FILE:SAVE:FLOAT:COMPRESSION DECIMATION;  
HISTORY ONE;TRACE 1;:FILE:SAVE:  
NAME "DL9000";SBUS:ANALYSIS 1;:FILE:  
SAVE:ZWAVE:ZONE 1

**:FILE:SAVE:{AHISTogram|ASCIi|BINary|DMEemory|FFT|FLOat|SBUS|ZWAVE}?**

Function Queries all settings related to the saving of specific data.

Syntax :FILE:SAVE:{AHISTogram|ASCIi|BINary|DMEemory|FFT|FLOat|SBUS|ZWAVE}?

Example (The following is an example for binary data.)  
:FILE:SAVE:BINARY? ->  
:FILE:SAVE:BINARY:COMPRESSION  
DECIMATION;HISTORY ONE;TRACE 1

**:FILE:SAVE:{AHISTogram|ASCIi|BINary|DMEemory|FFT|FLOat|SETup|SBUS|WPARAMeter|ZWAVE}:ABORT**

Function Aborts the save operation of specific data.

Syntax :FILE:SAVE:{AHISTogram|ASCIi|BINary|DMEemory|FFT|FLOat|SETup|SBUS|WPARAMeter|ZWAVE}:ABORT

Example (The following is an example for binary data.)  
:FILE:SAVE:BINARY:ABORT

## 5.11 FILEGroup

### **:FILE:SAVE:{AHISTogram|ASCIi|BINary|DMEemory|FFT|FLOat|SETup|SBUS|WPARAMeter|ZWAVE}[ :EXECute]**

**Function** Executes the saving of specific data by specifying a file name. This is an overlap command.

**Syntax** :FILE:SAVE:{AHISTogram|ASCIi|BINary|DMEemory|FFT|FLOat|SETup|SBUS|WPARAMeter|ZWAVE}[ :EXECute] {<String>}  
<String> = Up to 259 characters

**Example** (The following is an example for binary data.)  
:FILE:SAVE:BINary:EXECUTE  
:FILE:SAVE:BINary:  
EXECUTE "\Flash Mem\DIR\DATA"  
(Absolute path designation)  
:FILE:SAVE:BINary:EXECUTE "DATA"  
(Relative path designation)

**Description**

- If the path is not specified, the data is saved to the file name specified by :FILE:SAVE:NAME.
- If the path is specified, the auto naming function is disabled.
- For details on the <String> parameter, see the description in FILE[:DIReCTory]:CDIReCTory.

### **:FILE:SAVE:{AHISTogram|FFT|SBUS}:ANALysis**

**Function** Sets the trace of specific data to be saved or queries the current setting.

**Syntax** FILE:SAVE:{AHISTogram|FFT|SBUS}:ANALysis {<NRf>}  
FILE:SAVE:{AHISTogram|FFT|SBUS}:ANALysis?  
<NRf> = 1 to 8

**Example** (The following is an example for FFT data.)  
:FILE:SAVE:FFT:ANALYSIS 1  
:FILE:SAVE:FFT:ANALYSIS? ->  
:FILE:SAVE:FFT:ANALYSIS 1

### **:FILE:SAVE:ANAMing**

**Function** Sets the type of auto naming of file names of the saved data or queries the current setting.

**Syntax** :FILE:SAVE:ANAMing {DATE|NUMBERing|OFF}  
:FILE:SAVE:ANAMing?

**Example** :FILE:SAVE:ANAMING DATE  
:FILE:SAVE:ANAMING? ->  
:FILE:SAVE:ANAMING DATE

### **:FILE:SAVE:{ASCIi|BINary|FLOat}:COMPRession**

**Function** Sets the compression method for saving specific data or queries the current setting.

**Syntax** :FILE:SAVE:{ASCIi|BINary|FLOat}:COMPRession {DECimation|OFF|PTOPeak}  
:FILE:SAVE:{ASCIi|BINary|FLOat}:COMPRession?

**Example** (The following is an example for binary data.)  
:FILE:SAVE:BINary:  
COMPRession DECIMATION  
:FILE:SAVE:BINary:COMPRession? ->  
:FILE:SAVE:BINary:  
COMPRession DECIMATION

### **:FILE:SAVE:{ASCIi|BINary|FLOat}:HISTory**

**Function** Sets whether to save the entire data or the selected data of specific data or queries the current setting.

**Syntax** :FILE:SAVE:{ASCIi|BINary|FLOat}:HISTory {ALL|ONE}  
:FILE:SAVE:{ASCIi|BINary|FLOat}:HISTory?

**Example** (The following is an example for binary data.)  
:FILE:SAVE:BINary:HISTory ALL  
:FILE:SAVE:BINary:HISTory? ->  
:FILE:SAVE:BINary:HISTory ALL

### **:FILE:SAVE:{ASCIi|BINary|FLOat}:TRACe**

**Function** Sets the trace of specific data to be saved or queries the current setting.

**Syntax** :FILE:SAVE:{ASCIi|BINary|FLOat}:TRACe {<NRf>|ALL}  
:FILE:SAVE:{ASCIi|BINary|FLOat}:TRACe?  
<NRf> = 1 to 8

**Example** (The following is an example for binary data.)  
:FILE:SAVE:BINary:TRACe 1  
:FILE:SAVE:BINary:TRACe? ->  
:FILE:SAVE:BINary:TRACe 1

### **:FILE:SAVE:COMMeNT**

**Function** Sets the comment of data to be saved or queries the current setting.

**Syntax** :FILE:SAVE:COMMeNT {<String>}  
:FILE:SAVE:COMMeNT?  
<String> = Up to 160 characters

**Example** :FILE:SAVE:COMMeNT "THIS IS TEST"  
:FILE:SAVE:COMMeNT? ->  
:FILE:SAVE:COMMeNT "THIS IS TEST"

**:FILE:SAVE:DMEMory:TRACe**

Function Sets the trace to be saved as accumulated data or queries the current setting.

Syntax :FILE:SAVE:DMEMory:TRACe {<NRf>|ALL|XY1|XY2}

:FILE:SAVE:DMEMory:TRACe?

<NRf> = 1 to 8

Example :FILE:SAVE:DMEMORY:TRACE 1

:FILE:SAVE:DMEMORY:TRACE? ->

:FILE:SAVE:DMEMORY:TRACE 1

**:FILE:SAVE:NAME**

Function Sets the name of the data file to be saved or queries the current setting.

Syntax :FILE:SAVE:NAME {<Filename>}

:FILE:SAVE:NAME?

Example :FILE:SAVE:NAME "DL9000"

:FILE:SAVE:NAME? ->

:FILE:SAVE:NAME "DL9000"

**:FILE:SAVE:ZWAVE:ZONE**

Function Sets the zone of the zone data to be saved or queries the current setting.

Syntax :FILE:SAVE:ZWAVE:ZONE {<NRf>}

:FILE:SAVE:ZWAVE:ZONE?

<NRf> = 1 to 4

Example :FILE:SAVE:ZWAVE:ZONE 1

:FILE:SAVE:ZWAVE:ZONE? ->

:FILE:SAVE:ZWAVE:ZONE 1



## 5.12 GONogo Group

### :GONogo?

**Function** Queries all settings related to GO/NO-GO determination.

**Syntax** :GONogo?

**Example** :GONOGO? -> :GONOGO:ACTION:BUZZER 0;  
 HCOPIY 0;SAVE 0;:GONOGO:  
 CONDITION1 DONTCARE;  
 CONDITION2 DONTCARE;  
 CONDITION3 DONTCARE;  
 CONDITION4 DONTCARE;LOGIC AND;MODE OFF;  
 SCNDITION:NGCOUNT 1;STOPCOUNT 1;:  
 GONOGO:TELECOMTEST:SELECT1:MASK:  
 ELEMENT1:WCOUNT 1.000E+00,2.000E+00;:  
 GONOGO:TELECOMTEST:SELECT2:MASK:  
 ELEMENT1:WCOUNT 1.000E+00,2.000E+00;:  
 GONOGO:TELECOMTEST:SELECT3:MASK:  
 ELEMENT1:WCOUNT 1.000E+00,2.000E+00;:  
 GONOGO:TELECOMTEST:SELECT4:MASK:  
 ELEMENT1:WCOUNT 2.000E+00,3.000E+00;:  
 GONOGO:ZPARAMETER:SELECT1:  
 MODE PARAMETER;PARAMETER:CATEGORY FFT;  
 FFT1:CALCULATION1 0.000E+00,1.000E+00;:  
 GONOGO:ZPARAMETER:SELECT1:PARAMETER:  
 MEASURE:STATISTICS MAXIMUM;:GONOGO:  
 ZPARAMETER:SELECT1:RECTANGLE:  
 HORIZONTAL 0.000E+00,1.000E+00;  
 VERTICAL 0.000E+00,1.000E+00;:GONOGO:  
 ZPARAMETER:SELECT1:TRACE 1;WAVE:  
 TRANGE 1.000E+00,2.000E+00;:GONOGO:  
 ZPARAMETER:SELECT1:WINDOW MAIN;:GONOGO:  
 ZPARAMETER:SELECT2:MODE PARAMETER;  
 PARAMETER:CATEGORY FFT;FFT1:  
 CALCULATION1 0.000E+00,1.000E+00...

### :GONogo:ABORt

**Function** Aborts the GO/NO-GO determination.

**Syntax** :GONogo:ABORt

**Example** :GONOGO:ABORt

### :GONogo:ACTion?

**Function** Queries all settings related to the action taken when the determination result is NO-GO and the criteria values.

**Syntax** :GONogo:ACTion?

**Example** :GONOGO:ACTion? ->  
 :GONOGO:ACTION:BUZZER 0;HCOPIY 0;SAVE 0

### :GONogo:ACTion:BUZZer

**Function** Sets whether to sound a buzzer when the determination result is NO-GO or queries the current setting.

**Syntax** :GONogo:ACTion:BUZZer {<Boolean>}  
 :GONogo:ACTion:BUZZer?

**Example** :GONOGO:ACTION:BUZZER ON  
 :GONOGO:ACTION:BUZZER? ->  
 :GONOGO:ACTION:BUZZER 1

### :GONogo:ACTion:HCOpy

**Function** Sets whether to print the screen image on the printer when the determination result is NO-GO or queries the current setting.

**Syntax** :GONogo:ACTion:HCOpy {<Boolean>}  
 :GONogo:ACTion:HCOpy?

**Example** :GONOGO:ACTION:HCOPIY ON  
 :GONOGO:ACTION:HCOPIY? ->  
 :GONOGO:ACTION:HCOPIY 1

### :GONogo:ACTion:SAVE

**Function** Sets whether to save the waveform data to the storage medium when the determination result is NO-GO or queries the current setting.

**Syntax** :GONogo:ACTion:SAVE {<Boolean>}  
 :GONogo:ACTion:SAVE?

**Example** :GONOGO:ACTION:SAVE ON  
 :GONOGO:ACTION:SAVE? ->  
 :GONOGO:ACTION:SAVE 1

### :GONogo:CONDition<x>

**Function** Sets the GO/NO-GO determination criteria or queries the current setting.

**Syntax** :GONogo:CONDition<x> {DONTcare|IN|OUT}  
 :GONogo:CONDition<x>?  
 <x> = 1 to 4

**Example** :GONOGO:CONDITION1 DONTCARE  
 :GONOGO:CONDITION1? ->  
 :GONOGO:CONDITION1 DONTCARE

### :GONogo:COUNT?

**Function** Queries the actual number of GO/NO-GO determinations.

**Syntax** :GONogo:COUNT?

**Example** :GONOGO:COUNT? -> :GONOGO:COUNT 1

### :GONogo:EXECute

**Function** Executes the GO/NO-GO determination. This is an overlap command.

**Syntax** :GONogo:EXECute

**Example** :GONOGO:EXECUTE

**:GONogo:LOGic**

Function Sets the GO/NO-GO determination logic or queries the current setting.

Syntax :GONogo:LOGic {AND|OR}  
:GONogo:LOGic?

Example :GONOGO:LOGIC AND  
:GONOGO:LOGIC? -> :GONOGO:LOGIC AND

**:GONogo:MODE**

Function Sets the GO/NO-GO determination type or queries the current setting.

Syntax GONogo:MODE {OFF|TELEcomtest|  
ZPARAMeter}  
:GONogo:MODE?

Example GONOGO:MODE OFF  
:GONOGO:MODE? -> :GONOGO:MODE OFF

**:GONogo:NGCount?**

Function Queries the actual number of NO-GOs of the GO/NO-GO determination.

Syntax :GONogo:NGCount?

Example :GONOGO:NGCOUNT? -> :GONOGO:NGCOUNT 1

**:GONogo[:SCONdition]?****(Stop Condition)**

Function Queries all settings related to the determination termination condition.

Syntax :GONogo[:SCONdition]?

Example :GONOGO:SCONDITION? ->  
:GONOGO:SCONDITION:NGCOUNT 1;  
STOPCOUNT 1

**:GONogo[:SCONdition]:NGCount**

Function Sets the number of NO-GOs that terminates the GO/NO-GO determination or queries the current setting.

Syntax :GONogo[:SCONdition]:NGCount {<NRf>|  
INFinite}  
:GONogo[:SCONdition]:NGCount?  
<NRf> = 1 to 1000

Example :GONOGO:SCONDITION:NGCOUNT 1  
:GONOGO:SCONDITION:NGCOUNT? ->  
:GONOGO:SCONDITION:NGCOUNT 1

**:GONogo[:SCONdition]:STOPcount**

Function Sets the acquisition count that terminates the GO/NO-GO determination or queries the current setting.

Syntax :GONogo[:SCONdition]:STOPcount {<NRf>|  
INFinite}  
:GONogo[:SCONdition]:STOPcount?  
<NRf> = 1 to 1000000

Example :GONOGO:SCONDITION:STOPCOUNT 1  
:GONOGO:SCONDITION:STOPCOUNT? ->  
:GONOGO:SCONDITION:STOPCOUNT 1

**:GONogo:TELEcomtest?**

Function Queries all settings related to telecom test determination.

Syntax :GONogo:TELEcomtest?

Example :GONOGO:TELECOMTEST? -> :GONOGO:  
TELECOMTEST:SELECT1:MASK:ELEMENT1:  
WCOUNT 2.000E+00,1.000E+00;:GONOGO:  
TELECOMTEST:SELECT2:MASK:ELEMENT1:  
WCOUNT 2.000E+00,1.000E+00;:GONOGO:  
TELECOMTEST:SELECT3:MASK:ELEMENT1:  
WCOUNT 2.000E+00,1.000E+00;:GONOGO:  
TELECOMTEST:SELECT4:MASK:ELEMENT1:  
WCOUNT 2.000E+00,1.000E+00

**:GONogo:TELEcomtest:SElect<x>?**

Function Queries all settings related to the condition of the telecom test determination.

Syntax :GONogo:TELEcomtest:SElect<x>?  
<x> = 1 to 4

Example :GONOGO:TELECOMTEST:SELECT1? ->  
:GONOGO:TELECOMTEST:SELECT1:MASK:  
ELEMENT1:PSPCOUNT 2.000E+00,1.000E+00

**:GONogo:TELEcomtest:SElect<x>:****EYEPattern?**

Function Queries all settings related to the eye pattern determination of the condition.

Syntax :GONogo:TELEcomtest:SElect<x>:  
EYEPattern?  
<x> = 1 to 4

Example :GONOGO:TELECOMTEST:SELECT1:EYEPATTERN?  
->:GONOGO:TELECOMTEST:SELECT1:  
EYEPATTERN:DBERATE 2.000E+00,1.000E+00

## 5.12 GONogo Group

### **:GONogo:TELEcomtest:SElect<x>:**

#### **EYEPattern:<Parameter>**

**Function** Sets the upper and lower limits of the waveform parameter of the eye pattern determination or queries the current setting.

**Syntax** :GONogo:TELEcomtest:SElect<x>:  
EYEPattern:<Parameter> {<NRf>,<NRf>|  
<Voltage>,<Voltage>|  
<Current>,<Current>|<Time>,<Time>}  
:GONogo:TELEcomtest:SElect<x>:  
EYEPattern:<Parameter>?  
<x> of SElect<x> = 1 to 4  
<Parameter> =  
{DBERate|EHEight|EWIDth|FALL|JITTer|  
PCROSSing|PDUTYcycle|QFACTOR|RISE|  
SDBase|SDTop|T1CROSSing|T2CROSSing|  
VBASE|VCROSSing|VTOP}  
<NRf>, <Voltage>, <Current>, and <Time> = See the  
DL9000 User's Manual (IM701310-01E).

**Example** The following is an example for  
DBERate.  
:GONOGO:TELECOMTEST:SELECT1:EYEPATTERN:  
DBERATE 1,2  
:GONOGO:TELECOMTEST:SELECT1:EYEPATTERN:  
DBERATE? ->  
:GONOGO:TELECOMTEST:SELECT1:EYEPATTERN:  
DBERATE 2.000E+00,1.000E+00

**Description** • For the relationship between communication commands and parameters used by the DL9000, see appendix 4.  
• For details on the parameters, see the DL9000 User's Manual (IM701310-01E).

### **:GONogo:TELEcomtest:SElect<x>:MASK?**

**Function** Queries all settings related to the mask determination of the condition.

**Syntax** :GONogo:TELEcomtest:SElect<x>:MASK?  
<x> = 1 to 4

**Example** :GONOGO:TELECOMTEST:SELECT1:MASK? ->  
:GONOGO:TELECOMTEST:SELECT1:MASK:  
ELEMENT1:PSPCOUNT 2.000E+00,1.000E+00

### **:GONogo:TELEcomtest:SElect<x>:MASK:**

#### **ELEMent<x>?**

**Function** Queries all settings related to the element used in the mask determination.

**Syntax** :GONogo:TELEcomtest:SElect<x>:MASK:  
ELEMent<x>?  
<x> of SElect<x> = 1 to 4  
<x> of ELEMent<x> = 1 to 4

**Example** :GONOGO:TELECOMTEST:SELECT1:MASK:  
ELEMENT1? -> :GONOGO:TELECOMTEST:  
SELECT1:MASK:ELEMENT1:  
PSPCOUNT 2.000E+00,1.000E+00

### **:GONogo:TELEcomtest:SElect<x>:MASK:**

#### **ELEMent<x>:PSPCount**

#### **(Sample Point Count %)**

**Function** Sets the upper and lower limits of the error rate for the number of sampled data points of the element or queries the current setting.

**Syntax** :GONogo:TELEcomtest:SElect<x>:MASK:  
ELEMent<x>:PSPCount {<NRf>,<NRf>}  
:GONogo:TELEcomtest:SElect<x>:MASK:  
ELEMent<x>:PSPCount?  
<x> of SElect<x> = 1 to 4  
<x> of ELEMent<x> = 1 to 4  
<NRf> = 0 to 100 (%)

**Example** :GONOGO:TELECOMTEST:SELECT1:MASK:  
ELEMENT1:PSPCOUNT 1,2  
:GONOGO:TELECOMTEST:SELECT1:MASK:  
ELEMENT1:PSPCOUNT? ->  
:GONOGO:TELECOMTEST:SELECT1:MASK:  
ELEMENT1:PSPCOUNT 2.000E+00,1.000E+00

### **:GONogo:TELEcomtest:SElect<x>:MASK:**

#### **ELEMent<x>:PWCount**

#### **(Wave Count %)**

**Function** Sets the upper and lower limits of the error rate for the number of acquisitions of the element or queries the current setting.

**Syntax** :GONogo:TELEcomtest:SElect<x>:MASK:  
ELEMent<x>:PWCount {<NRf>,<NRf>}  
:GONogo:TELEcomtest:SElect<x>:MASK:  
ELEMent<x>:PWCount?  
<x> of SElect<x> = 1 to 4  
<x> of ELEMent<x> = 1 to 4  
<NRf> = 0 to 100 (%)

**Example** :GONOGO:TELECOMTEST:SELECT1:MASK:  
ELEMENT1:PWCOUNT 1,2  
:GONOGO:TELECOMTEST:SELECT1:MASK:  
ELEMENT1:PWCOUNT? ->  
:GONOGO:TELECOMTEST:SELECT1:MASK:  
ELEMENT1:PWCOUNT 2.000E+00,1.000E+00

**:GONogo:TELEcomtest:SElect<x>:MASK:****ELEMent<x>:SPCount****(Sample Point Count)**

**Function** Sets the upper and lower limits of the number of sampled data points for the element that results in error or queries the current setting.

**Syntax** :GONogo:TELEcomtest:SElect<x>:MASK:ELEMent<x>:SPCount {<NRf>,<NRf>}  
:GONogo:TELEcomtest:SElect<x>:MASK:ELEMent<x>:SPCount?  
<x> of SElect<x> = 1 to 4  
<x> of ELEMent<x> = 1 to 4  
<NRf> = See the DL9000 User's Manual.

**Example** :GONOGO:TELECOMTEST:SELECT1:MASK:ELEMENT1:SPCOUNT 1,2  
:GONOGO:TELECOMTEST:SELECT1:MASK:ELEMENT1:SPCOUNT? ->  
:GONOGO:TELECOMTEST:SELECT1:MASK:ELEMENT1:SPCOUNT 2.000E+00,1.000E+00

**:GONogo:TELEcomtest:SElect<x>:MASK:****ELEMent<x>:WCOunt (Wave Count)**

**Function** Sets the upper and lower limits of the number of acquisitions for the element that results in error or queries the current setting.

**Syntax** :GONogo:TELEcomtest:SElect<x>:MASK:ELEMent<x>:WCOunt {<NRf>,<NRf>}  
:GONogo:TELEcomtest:SElect<x>:MASK:ELEMent<x>:WCOunt?  
<x> of SElect<x> = 1 to 4  
<x> of ELEMent<x> = 1 to 4  
<NRf> = See the DL9000 User's Manual.

**Example** :GONOGO:TELECOMTEST:SELECT1:MASK:ELEMENT1:WCOUNT 1,2  
:GONOGO:TELECOMTEST:SELECT1:MASK:ELEMENT1:WCOUNT? ->  
:GONOGO:TELECOMTEST:SELECT1:MASK:ELEMENT1:WCOUNT 2.000E+00,1.000E+00

**:GONogo:ZPARAMeter?**

**Function** Queries all settings related to zone/parameter determination.

**Syntax** :GONogo:ZPARAMeter?

**Example** :GONOGO:ZPARAMETER? ->  
:GONOGO:ZPARAMETER:SELECT1:MODE PARAMETER;PARAMETER:CATEGORY FFT;FFT1:CALCULATION1 0.000E+00,1.000E+00;;GONOGO:ZPARAMETER:SELECT1:RECTANGLE:HORIZONTAL 0.000E+00,1.000E+00;VERTICAL 0.000E+00,1.000E+00;;GONOGO:ZPARAMETER:SELECT1:TRACE 1;WAVE:TRANGE 1.000E+00,2.000E+00;;GONOGO:ZPARAMETER:SELECT1:WINDOW MAIN;;GONOGO:ZPARAMETER:SELECT2:MODE PARAMETER;PARAMETER:CATEGORY FFT;;FFT1:CALCULATION1 0.000E+00,1.000E+00;;GONOGO:ZPARAMETER:SELECT2:RECTANGLE:HORIZONTAL 0.000E+00,1.000E+00;VERTICAL 0.000E+00,1.000E+00;;GONOGO:ZPARAMETER:SELECT2:TRACE 1;WAVE:TRANGE 1.000E+00,2.000E+00;;GONOGO:ZPARAMETER:SELECT2:WINDOW MAIN;;GONOGO:ZPARAMETER:SELECT3:MODE PARAMETER;PARAMETER:CATEGORY FFT;FFT1:CALCULATION1 0.000E+00,1.000E+00;;.....

**:GONogo:ZPARAMeter:SElect<x>?**

**Function** Queries all settings related to the condition of the zone/parameter determination.

**Syntax** :GONogo:ZPARAMeter:SElect<x>?

<x> = 1 to 4

**Example** :GONOGO:ZPARAMETER:SELECT1? ->  
:GONOGO:ZPARAMETER:SELECT1:MODE PARAMETER;PARAMETER:CATEGORY FFT;FFT1:CALCULATION1 0.000E+00,1.000E+00;;GONOGO:ZPARAMETER:SELECT1:RECTANGLE:HORIZONTAL 0.000E+00,1.000E+00;VERTICAL 0.000E+00,1.000E+00;;GONOGO:ZPARAMETER:SELECT1:TRACE 1;WAVE:TRANGE 1.000E+00,2.000E+00;;GONOGO:ZPARAMETER:SELECT1:WINDOW MAIN

**:GONogo:ZPARAMeter:SElect<x>:MODE**

**Function** Sets the mode of the condition or queries the current setting.

**Syntax** :GONogo:ZPARAMeter:SElect<x>:MODE {PARAMeter|POLYgon|RECTangle|WAVE}  
:GONogo:ZPARAMeter:SElect<x>:MODE?  
<x> = 1 to 4

**Example** :GONOGO:ZPARAMETER:SELECT1:MODE WAVE  
:GONOGO:ZPARAMETER:SELECT1:MODE? ->  
:GONOGO:ZPARAMETER:SELECT1:MODE WAVE

## 5.12 GONogo Group

### **:GONogo:ZPARAMeter:SElect<x>:**

#### **PARAMeter?**

Function Queries all settings related to the condition parameter.

Syntax :GONogo:ZPARAMeter:SElect<x>:PARAMeter?  
<x> = 1 to 4

Example :GONOGO:ZPARAMETER:SELECT1:PARAMETER?  
-> :GONOGO:ZPARAMETER:SELECT1:  
PARAMETER:CATEGORY FFT;PARAMETER:  
CATEGORY FFT;FFT1:  
CALCULATION1 1.000E+00,0.000E+00

### **:GONogo:ZPARAMeter:SElect<x>:**

#### **PARAMeter:CATegory**

Function Sets the parameter category or queries the current setting.

Syntax :GONogo:ZPARAMeter:SElect<x>:PARAMeter:  
CATegory {FFT|MEASURE|XY}  
:GONogo:ZPARAMeter:SElect<x>:PARAMeter:  
CATegory?  
<x> = 1 to 4

Example :GONOGO:ZPARAMETER:SELECT1:PARAMETER:  
CATEGORY FFT  
:GONOGO:ZPARAMETER:SELECT1:PARAMETER:  
CATEGORY? -> :GONOGO:ZPARAMETER:  
SELECT1:PARAMETER:CATEGORY FFT

Description This command is valid when :MEASURE:MODE  
CYCLE.

### **:GONogo:ZPARAMeter:SElect<x>:**

#### **PARAMeter:FFT<x>?**

Function Queries all settings related to the FFT determination.

Syntax :GONogo:ZPARAMeter:SElect<x>:PARAMeter:  
FFT<x>?  
<x> of SElect<x> = 1 to 4  
<x> of FFT<x> = 1 or 2

Example :GONOGO:ZPARAMETER:SELECT1:PARAMETER:  
FFT1? -> :GONOGO:ZPARAMETER:SELECT1:  
PARAMETER:FFT1:PEAK:  
FREQUENCY1 0.000E+00,0.000E+00

### **:GONogo:ZPARAMeter:SElect<x>:**

#### **PARAMeter:FFT<x>:CALCulation<x>**

Function Sets the upper and lower limits of the calculation item of the FFT determination or queries the current setting.

Syntax :GONogo:ZPARAMeter:SElect<x>:PARAMeter:  
FFT<x>:CALCulation<x> {<Nrf>,<Nrf>}  
:GONogo:ZPARAMeter:SElect<x>:PARAMeter:  
FFT<x>:CALCulation<x>?  
<x> of SElect<x> = 1 to 4  
<x> of FFT<x> = 1 or 2  
<x> of CALCulation<x> = 1 to 4  
<Nrf> = -4 to 4 (div)

Example GONOGO:ZPARAMETER:SELECT1:PARAMETER:  
FFT1:CALCULATION1 0,1  
:GONOGO:ZPARAMETER:SELECT1:PARAMETER:  
FFT1:CALCULATION1? ->  
:GONOGO:ZPARAMETER:SELECT1:PARAMETER:  
FFT1:CALCULATION1 1.000E+00,0.000E+00

### **:GONogo:ZPARAMeter:SElect<x>:**

#### **PARAMeter:FFT<x>:PEAK?**

Function Queries all settings related to the peak value of the FFT determination.

Syntax :GONogo:ZPARAMeter:SElect<x>:PARAMeter:  
FFT<x>:PEAK?  
<x> of SElect<x> = 1 to 4  
<x> of FFT<x> = 1 or 2

Example :GONOGO:ZPARAMETER:SELECT1:PARAMETER:  
FFT1:PEAK? -> :GONOGO:ZPARAMETER:  
SELECT1:PARAMETER:FFT1:PEAK:  
FREQUENCY1 1.000E+00,0.000E+00

### **:GONogo:ZPARAMeter:SElect<x>:**

#### **PARAMeter:FFT<x>:PEAK:DFREquency**

Function Sets the upper and lower limits between the peak frequencies of the FFT determination or queries the current setting.

Syntax :GONogo:ZPARAMeter:SElect<x>:PARAMeter:  
FFT<x>:PEAK:DFREquency  
{<Frequency>,<Frequency>}  
:GONogo:ZPARAMeter:SElect<x>:PARAMeter:  
FFT<x>:PEAK:DFREquency?  
<x> of SElect<x> = 1 to 4  
<x> of FFT<x> = 1 or 2  
<Frequency> = See the DL9000 User's Manual

Example :GONOGO:ZPARAMETER:SELECT1:PARAMETER:  
FFT1:PEAK:DFREQUENCY 0,1  
:GONOGO:ZPARAMETER:SELECT1:PARAMETER:  
FFT1:PEAK:DFREQUENCY? -> :GONOGO:  
ZPARAMETER:SELECT1:PARAMETER:FFT1:PEAK:  
DFREQUENCY 1.000E+00,0.000E+00

**:GONogo:ZPARAMeter:SElect<x>:****PARAMeter:FFT<x>:PEAK:DV**

Function Sets the upper and lower limits between the peak voltages of the FFT determination or queries the current setting.

Syntax :GONogo:ZPARAMeter:SElect<x>;PARAMeter:FFT<x>;PEAK:DV {<NRf>,<NRf>}  
:GONogo:ZPARAMeter:SElect<x>;PARAMeter:FFT<x>;PEAK:DV?  
<x> of SElect<x> = 1 to 4  
<x> of FFT<x> = 1 or 2  
<NRf> = -4 to 4 (div)

Example :GONOGO:ZPARAMETER:SELECT1:PARAMETER:FFT1:PEAK:DV 0,1  
:GONOGO:ZPARAMETER:SELECT1:PARAMETER:FFT1:PEAK:DV? -> :GONOGO:ZPARAMETER:SELECT1:PARAMETER:FFT1:PEAK:DV 1.000E+00,0.000E+00

**:GONogo:ZPARAMeter:SElect<x>:****PARAMeter:FFT<x>:PEAK:FREQuency<x>**

Function Sets the upper and lower limits of the peak frequency of the FFT determination or queries the current setting.

Syntax :GONogo:ZPARAMeter:SElect<x>;PARAMeter:FFT<x>;PEAK:FREQuency<x> {<Frequency>,<Frequency>}  
:GONogo:ZPARAMeter:SElect<x>;PARAMeter:FFT<x>;PEAK:FREQuency<x>?  
<x> of SElect<x> = 1 to 4  
<x> of FFT<x> = 1 or 2  
<Frequency> = See the DL9000 User's Manual

Example :GONOGO:ZPARAMETER:SELECT1:PARAMETER:FFT1:PEAK:FREQUENCY1 0,1  
:GONOGO:ZPARAMETER:SELECT1:PARAMETER:FFT1:PEAK:FREQUENCY1? -> :GONOGO:ZPARAMETER:SELECT1:PARAMETER:FFT1:PEAK:FREQUENCY1 1.000E+00,0.000E+00

**:GONogo:ZPARAMeter:SElect<x>:****PARAMeter:FFT<x>:PEAK:V<x>**

Function Sets the upper and lower limits of the peak voltage of the FFT determination or queries the current setting.

Syntax :GONogo:ZPARAMeter:SElect<x>;PARAMeter:FFT<x>;PEAK:V<x> {<NRf>,<NRf>}  
:GONogo:ZPARAMeter:SElect<x>;PARAMeter:FFT<x>;PEAK:V<x>?  
<x> of SElect<x> = 1 to 4  
<x> of FFT<x> = 1 or 2  
<x> of V<x> = 1 or 2  
<NRf> = -4 to 4 (div)

Example :GONOGO:ZPARAMETER:SELECT1:PARAMETER:FFT1:PEAK:V1 1,2  
:GONOGO:ZPARAMETER:SELECT1:PARAMETER:FFT1:PEAK:V1? -> :GONOGO:ZPARAMETER:SELECT1:PARAMETER:FFT1:PEAK:V1 2.000E+00,1.000E+00

**:GONogo:ZPARAMeter:SElect<x>:****PARAMeter:MEASure?**

Function Queries all settings related to the determination using automated measurement of waveform parameters (measure determination).

Syntax :GONogo:ZPARAMeter:SElect<x>;PARAMeter:MEASure?  
<x> = 1 to 4

Example :GONOGO:ZPARAMETER:SELECT1:PARAMETER:MEASURE? -> :GONOGO:ZPARAMETER:SELECT1:PARAMETER:MEASURE:CALCULATION1 2.000E+00,1.000E+00

**:GONogo:ZPARAMeter:SElect<x>:****PARAMeter:MEASure:CALCulation<x>**

Function Sets the upper and lower limits of the calculation item of the measure determination or queries the current setting.

Syntax :GONogo:ZPARAMeter:SElect<x>;PARAMeter:MEASure:CALCulation<x> {<NRf>,<NRf>}  
:GONogo:ZPARAMeter:SElect<x>;PARAMeter:MEASure:CALCulation<x>?  
<x> of SElect<x> = 1 to 4  
<x> of CALCulation<x> = 1 to 4  
<NRf> = -4 to 4 (div)

Example :GONOGO:ZPARAMETER:SELECT1:PARAMETER:MEASURE:CALCULATION1 1,2  
:GONOGO:ZPARAMETER:SELECT1:PARAMETER:MEASURE:CALCULATION1? -> :GONOGO:ZPARAMETER:SELECT1:PARAMETER:MEASURE:CALCULATION1 2.000E+00,1.000E+00

## 5.12 GONogo Group

### **:GONogo:ZPARAMeter:SElect<x>:**

#### **PARAMeter:MEASure:STATISTICS**

Function Sets the statistical value of the measure determination or queries the current setting.

Syntax :GONogo:ZPARAMeter:SElect<x>:PARAMeter:MEASure:STATISTICS {MAXimum|MEAN|MINimum|SIGMa}  
:GONogo:ZPARAMeter:SElect<x>:PARAMeter:MEASure:STATISTICS?  
<x> = 1 to 4

Example :GONOGO:ZPARAMETER:SELECT1:PARAMETER:MEASURE:STATISTICS MAXIMUM  
:GONOGO:ZPARAMETER:SELECT1:PARAMETER:MEASURE:STATISTICS? ->  
:GONOGO:ZPARAMETER:SELECT1:PARAMETER:MEASURE:STATISTICS MAXIMUM

Description This command is valid when :MEASURE:MODE CYCLE.

### **:GONogo:ZPARAMeter:SElect<x>:**

#### **PARAMeter:MEASure:TRACe<x>?**

Function Queries all settings related to the trace of the measure determination.

Syntax :GONogo:ZPARAMeter:SElect<x>:PARAMeter:MEASure:TRACe<x>?  
<x> of SElect<x> = 1 to 4  
<x> of TRACe<x> = 1 to 8

Example :GONOGO:ZPARAMETER:SELECT1:PARAMETER:MEASURE:TRACE1? ->  
:GONOGO:ZPARAMETER:SELECT1:PARAMETER:MEASURE:TRACE1:AREA1:TYPE:  
MAXIMUM 2.000E+00,1.000E+00

### **:GONogo:ZPARAMeter:SElect<x>:**

#### **PARAMeter:MEASure:TRACe<x>:AREA<x>?**

Function Queries all settings related to the area of the measure determination.

Syntax :GONogo:ZPARAMeter:SElect<x>:PARAMeter:MEASure:TRACe<x>:AREA<x>?  
<x> of SElect<x> = 1 to 4  
<x> of TRACe<x> = 1 to 8  
<x> of AREA<x> = 1 or 2

Example :GONOGO:ZPARAMETER:SELECT1:PARAMETER:MEASURE:TRACE1:AREA1? ->  
:GONOGO:ZPARAMETER:SELECT1:PARAMETER:MEASURE:TRACE1:AREA1:TYPE:  
MAXIMUM 2.000E+00,1.000E+00

### **:GONogo:ZPARAMeter:SElect<x>:**

#### **PARAMeter:MEASure:TRACe<x>:AREA<x>:**

##### **TYPE?**

Function Queries all settings related to the waveform parameters of the measure determination.

Syntax :GONogo:ZPARAMeter:SElect<x>:PARAMeter:MEASure:TRACe<x>:AREA<x>:TYPE?  
<x> of SElect<x> = 1 to 4  
<x> of TRACe<x> = 1 to 8  
<x> of AREA<x> = 1 or 2

Example :GONOGO:ZPARAMETER:SELECT1:PARAMETER:MEASURE:TRACE1:AREA1:TYPE? ->  
:GONOGO:ZPARAMETER:SELECT1:PARAMETER:MEASURE:TRACE1:AREA1:TYPE:  
MAXIMUM 2.000E+00,1.000E+00

### **:GONogo:ZPARAMeter:SElect<x>:**

#### **PARAMeter:MEASure:TRACe<x>:AREA<x>:**

##### **TYPE:<Parameter>**

Function Sets the upper and lower limits of the waveform parameter of the measure determination or queries the current setting.

Syntax :GONogo:ZPARAMeter:SElect<x>:PARAMeter:MEASure:TRACe<x>:AREA<x>:TYPE:  
<Parameter>  
{<Nrf>,<Nrf>|<Voltage>,<Voltage>|<Current>,<Current>|<Time>,<Time>|<Frequency>,<Frequency>}  
:GONogo:ZPARAMeter:SElect<x>:PARAMeter:MEASure:TRACe<x>:AREA<x>:TYPE:  
<Parameter>?  
<x> of SElect<x> = 1 to 4  
<x> of TRACe<x> = 1 to 8  
<x> of AREA<x> = 1 or 2  
<Parameter> = {BURSt|CMEan|COUNT|CRMS|CSDeviation|DElay|DUTYcycle|FALL|FREQuency|HIGH|HILow|LOW|MAXimum|MEAN|MINimum|NOVershoot|NWIDTH|PERFrequency|PERiod|POVershoot|PTOPeak|PWIDth|RISE|RMS|SDEviation|TYCInteg|TYINtegr}<Nrf>,<Voltage>,<Current>,<Time>, and <Frequency> = See the DL9000 User's Manual.

Example (The following is an example for the maximum value of trace 1 and area 1.)  
:GONOGO:ZPARAMETER:SELECT1:PARAMETER:MEASURE:TRACE1:AREA1:TYPE:MAXIMUM 1,2  
:GONOGO:ZPARAMETER:SELECT1:PARAMETER:MEASURE:TRACE1:AREA1:TYPE:MAXIMUM? ->  
:GONOGO:ZPARAMETER:SELECT1:PARAMETER:MEASURE:TRACE1:AREA1:TYPE:  
MAXIMUM 2.000E+00,1.000E+00

Description This command applies to cycle statistical processing when :MEASURE:MODE CYCLE.

**:GONogo:ZPARAMeter:SElect<x>:****PARAMeter:XY<x>?**

Function Queries all settings related to the XY determination.

Syntax :GONogo:ZPARAMeter:SElect<x>;PARAMeter:  
XY<x>?  
<x> of SElect<x> = 1 to 4  
<x> of XY<x> = 1 or 2

Example :GONOGO:ZPARAMETER:SELECT1:PARAMETER:  
XY1? -> :GONOGO:ZPARAMETER:SELECT1:  
PARAMETER:XY1:  
XYINTEG 2.000E+00,1.000E+00

**:GONogo:ZPARAMeter:SElect<x>:****PARAMeter:XY<x>:XYINteG**

Function Sets the upper and lower limits integral value of the XY determination or queries the current setting.

Syntax :GONogo:ZPARAMeter:SElect<x>;PARAMeter:  
XY<x>;XYINteG {<NRf>,<NRf>}  
:GONogo:ZPARAMeter:SElect<x>;PARAMeter:  
XY<x>;XYINteG?  
<x> of SElect<x> = 1 to 4  
<x> of XY<x> = 1 or 2  
<NRf> = -4 to 4 (div)

Example :GONOGO:ZPARAMETER:SELECT1:PARAMETER:  
XY1:XYINTEG 1,2  
:GONOGO:ZPARAMETER:SELECT1:PARAMETER:  
XY1:XYINTEG? -> :GONOGO:ZPARAMETER:  
SELECT1:PARAMETER:XY1:  
XYINTEG 2.000E+00,1.000E+00

**:GONogo:ZPARAMeter:SElect<x>:****RECTangle?**

Function Queries all settings related to the rectangle determination.

Syntax :GONogo:ZPARAMeter:SElect<x>;RECTangle?  
<x> = 1 to 4

Example :GONOGO:ZPARAMETER:SELECT1:RECTANGLE?  
-> :GONOGO:ZPARAMETER:SELECT1:  
RECTANGLE:HORIZONTAL 1.000E+00,  
0.000E+00;VERTICAL 1.000E+00,0.000E+00

**:GONogo:ZPARAMeter:SElect<x>:****RECTangle:HORizontal**

Function Sets the horizontal position of the rectangle used in the rectangle determination or queries the current setting.

Syntax :GONogo:ZPARAMeter:SElect<x>;RECTangle:  
HORizontal {<NRf>,<NRf>}  
:GONogo:ZPARAMeter:SElect<x>;RECTangle:  
HORizontal?  
<x> = 1 to 4  
<NRf> = -5 to 5 div

Example :GONOGO:ZPARAMETER:SELECT1:RECTANGLE:  
HORIZONTAL 0,1  
:GONOGO:ZPARAMETER:SELECT1:RECTANGLE:  
HORIZONTAL? -> :GONOGO:ZPARAMETER:  
SELECT1:RECTANGLE:  
HORIZONTAL 1.000E+00,0.000E+00

**:GONogo:ZPARAMeter:SElect<x>:****RECTangle:VERTical**

Function Sets the vertical position of the rectangle used in the rectangle determination or queries the current setting.

Syntax :GONogo:ZPARAMeter:SElect<x>;RECTangle:  
VERTical {<NRf>,<NRf>}  
:GONogo:ZPARAMeter:SElect<x>;RECTangle:  
VERTical?  
<x> = 1 to 4  
<NRf> = -4 to 4 (div)

Example :GONOGO:ZPARAMETER:SELECT1:RECTANGLE:  
VERTICAL 0,1  
:GONOGO:ZPARAMETER:SELECT1:RECTANGLE:  
VERTICAL? -> :GONOGO:ZPARAMETER:  
SELECT1:RECTANGLE:  
VERTICAL 1.000E+00,0.000E+00

**:GONogo:ZPARAMeter:SElect<x>:TRACe**

Function Sets the source trace of the zone/parameter determination or queries the current setting.

Syntax :GONogo:ZPARAMeter:SElect<x>;TRACe  
{<NRf>}  
:GONogo:ZPARAMeter:SElect<x>;TRACe?  
<x> = 1 to 4  
<NRf> = 1 to 8

Example :GONOGO:ZPARAMETER:SELECT1:TRACE 1  
:GONOGO:ZPARAMETER:SELECT1:TRACE? ->  
:GONOGO:ZPARAMETER:SELECT1:TRACE 1

**:GONogo:ZPARAMeter:SElect<x>:WAVE?**

Function Queries all settings related to the wave determination.

Syntax :GONogo:ZPARAMeter:SElect<x>;WAVE?  
<x> = 1 to 4

Example :GONOGO:ZPARAMETER:SELECT1:WAVE? ->  
:GONOGO:ZPARAMETER:SELECT1:WAVE:  
TRANGE 2.000E+00,1.000E+00



## 5.12 GONogo Group

### **:GONogo:ZPARAMeter:SElect<x>:WAVE:**

#### **EDIT<x>:EXIT**

Function Exits the edit menu of the wave determination zone.

Syntax :GONogo:ZPARAMeter:SElect<x>:WAVE:  
EDIT<x>:EXIT {<Nrf>|QUIT}  
<x> of SElect<x> = 1 to 4  
<x> of EDIT<x> = 1 to 13 (1 to 8 are traces and 9 to 13 are internal memories)  
<Nrf> = 1 to 4 (internal memories)

Example :GONOGO:ZPARAMETER:SELECT1:WAVE:EDIT1:  
EXIT 1

Description • An error occurs if this command is issued when the zone is not being edited.  
• Saves the zone waveform to the internal memory specified by <Nrf>.

### **:GONogo:ZPARAMeter:SElect<x>:WAVE:**

#### **EDIT<x>:PART**

Function Editing the portion of the zone of the wave determination.

Syntax :GONogo:ZPARAMeter:SElect<x>:WAVE:  
EDIT<x>:PART {<Nrf>,<Nrf>,<Nrf>,<Nrf>}  
<x> of SElect<x> = 1 to 4  
<x> of EDIT<x> = 1 to 13 (1 to 8 are traces. 9 to 12 are internal memories. 13 is the zone waveform that is currently displayed)  
<Nrf> = -5 to 5 (div: partial editing time axis cursor 1 and 2)  
-8 to 8 (div: up and down) (in the order partial editing time axis cursor 1, 2, ↑, and ↓)

Example :GONOGO:ZPARAMETER:SELECT1:WAVE:EDIT1:  
PART 1,2,3,4

Description The amount of movement upward or downward is a relative value with respect to the zone waveform that is currently displayed.

### **:GONogo:ZPARAMeter:SElect<x>:WAVE:**

#### **EDIT<x>:WHOLE**

Function Sets the editing of the entire zone of the waveform zone.

Syntax :GONogo:ZPARAMeter:SElect<x>:WAVE:  
EDIT<x>:WHOLE {<Nrf>,<Nrf>,<Nrf>,<Nrf>}  
<x> of SElect<x> = 1 to 4  
<x> of EDIT<x> = 1 to 13 (1 to 8 are traces. 9 to 12 are internal memories. 13 is the zone waveform that is currently displayed)  
<Nrf> = 0 to 5 (div: left and right)  
0 to 8 (div: up and down)  
(In the order ←, →, ↑, and ↓)

Example :GONOGO:ZPARAMETER:SELECT1:WAVE:EDIT1:  
WHOLE 1,2,3,4

Description The amount of movement is a relative value with respect to the reference waveform.

### **:GONogo:ZPARAMeter:SElect<x>:WAVE:**

#### **TRANGE**

Function Sets the determination range of the zone determination or queries the current setting.

Syntax :GONogo:ZPARAMeter:SElect<x>:WAVE:  
TRANGE {<Nrf>,<Nrf>}  
<x> of SElect<x> = 1 to 4  
TRANGE?  
<x> = 1 to 4  
<Nrf> = -5 to 5 (div)

Example :GONOGO:ZPARAMETER:SELECT1:WAVE:  
TRANGE 1,2  
:GONOGO:ZPARAMETER:SELECT1:WAVE:TRANGE?  
-> :GONOGO:ZPARAMETER:SELECT1:WAVE:  
TRANGE 2.000E+00,1.000E+00

### **:GONogo:ZPARAMeter:SElect<x>:WINDOW**

Function Sets the source window of the zone determination or queries the current setting.

Syntax :GONogo:ZPARAMeter:SElect<x>:WINDOW  
{MAIN|XY1|XY2|Z1|Z2}  
:GONogo:ZPARAMeter:SElect<x>:WINDOW?  
<x> = 1 to 4

Example :GONOGO:ZPARAMETER:SELECT1:WINDOW MAIN  
:GONOGO:ZPARAMETER:SELECT1:WINDOW? ->  
:GONOGO:ZPARAMETER:SELECT1:WINDOW MAIN

## 5.13 HCOpy Group

### **:HCOpy? (Hard COPY)**

**Function** Queries all settings related to the output of screen data.

**Syntax** :HCOpy?

**Example** :HCOpy? -> :HCOpy:DIRECTION EXTPRINTER;  
EXTPRINTER:TONE 1;TYPE EINKJET;;HCOpy:  
FILE:FORMAT BMP;SAVE:ANAMING DATE;  
CDIRECTORY "\Flash Mem\DIR1\DIR2";  
NAME "SAMPLE";:HCOpy:FILE:TONE COLOR;;  
HCOpy:PRINTER:HRMODE 1

### **:HCOpy:ABORT**

**Function** Aborts data output and paper feeding.

**Syntax** :HCOpy:ABORT

**Example** :HCOpy:ABORT

**Description** This command is valid for :HCOpy:DIRectio  
EXTPrinter|PRINTER.

### **:HCOpy:DIRectio**

**Function** Sets the data output destination or queries the current setting.

**Syntax** :HCOpy:DIRectio {EXTPrinter|FILE|  
PRINTER}  
:HCOpy:DIRectio?

**Example** :HCOpy:DIRECTION EXTPRINTER  
:HCOpy:DIRECTION? -> :HCOpy:DIRECTION  
EXTPRINTER

### **:HCOpy:EXECute**

**Function** Executes the data output. This is an overlap command.

**Syntax** :HCOpy:EXECute {<String>}  
<String> = Up to 259 characters

**Example** :HCOpy:EXECUTE  
:HCOpy:EXECUTE "\Flash Mem\DIR\DATA"  
(Absolute path designation)  
:HCOpy:EXECUTE "DATA"  
(Relative path designation)

**Description**

- If the path is not specified, the data is saved to the file name specified by :HCOpy:FILE:SAVE:NAME.
- If the path is specified, the auto naming function is disabled.
- For details on the <String> parameter, see the description in :HCOpy:FILE:SAVE:CDIRECTORY.

### **:HCOpy:EXTPrinter?**

**Function** Queries all settings related to the external printer output.

**Syntax** :HCOpy:EXTPrinter?

**Example** :HCOpy:EXTPRINTER? ->  
:HCOpy:EXTPRINTER:TONE 1;TYPE EINKJET

### **:HCOpy:EXTPrinter:TONE**

**Function** Sets the half tone of the external printer output or queries the current setting.

**Syntax** :HCOpy:EXTPrinter:TONE {<Boolean>}  
:HCOpy:EXTPrinter:TONE?

**Example** :HCOpy:EXTPRINTER:TONE ON  
:HCOpy:EXTPRINTER:TONE? ->  
:HCOpy:EXTPRINTER:TONE 1

### **:HCOpy:EXTPrinter:TYPE**

**Function** Sets the type of output commands to send to the external printer or queries the current setting.

**Syntax** :HCOpy:EXTPrinter:TYPE {EINKjet|  
HINKjet}  
:HCOpy:EXTPrinter:TYPE?

**Example** :HCOpy:EXTPRINTER:TYPE EINKJET  
:HCOpy:EXTPRINTER:TYPE? ->  
:HCOpy:EXTPRINTER:TYPE EINKJET

### **:HCOpy:FILE?**

**Function** Queries all settings related to file output.

**Syntax** :HCOpy:FILE?

**Example** :HCOpy:FILE? -> :HCOpy:FILE:FORMAT BMP;  
SAVE:ANAMING DATE;  
CDIRECTORY "\Flash Mem\DIR1\DIR2";  
NAME "SAMPLE";:HCOpy:FILE:TONE COLOR

### **:HCOpy:FILE:FORMat**

**Function** Sets the file output image format or queries the current setting.

**Syntax** :HCOpy:FILE:FORMat {BMP|JPEG|PNG}  
:HCOpy:FILE:FORMat?

**Example** :HCOpy:FILE:FORMAT BMP  
:HCOpy:FILE:FORMAT? ->  
:HCOpy:FILE:FORMAT BMP

### **:HCOpy:FILE:SAVE?**

**Function** Queries all settings related to the saving of file output.

**Syntax** :HCOpy:FILE:SAVE?

**Example** :HCOpy:FILE:SAVE? ->  
:HCOpy:FILE:SAVE:ANAMING DATE;  
CDIRECTORY "\Flash Mem\DIR1\DIR2";  
NAME "SAMPLE"

## 5.13 HCOpy Group

### **:HCOpy:FILE:SAVE:ANAMing**

Function Sets the type of auto naming of save destination file names or queries the current setting.

Syntax :HCOpy:FILE:SAVE:ANAMing {DATE|NUMBERing|OFF}  
:HCOpy:FILE:SAVE:ANAMing?

Example :HCOpy:FILE:SAVE:ANAMing DATE  
:HCOpy:FILE:SAVE:ANAMing? ->  
:HCOpy:FILE:SAVE:ANAMing DATE

### **:HCOpy:FILE:SAVE:CDIRECTory (Change Directory)**

Function Sets the save destination directory name or queries the current setting.

Syntax :HCOpy:FILE:SAVE:CDIRECTory {<String>}  
:HCOpy:FILE:SAVE:CDIRECTory?  
<String> = Up to 259 characters

Example :HCOpy:FILE:SAVE:CDIRECTory "\Flash Mem\DIR1\DIR2"  
(Absolute path designation)  
:HCOpy:FILE:SAVE:CDIRECTory "DIR2"  
(Relative path designation)  
:HCOpy:FILE:SAVE:CDIRECTory "\"  
(Root directory designation)  
:HCOpy:FILE:SAVE:CDIRECTory? ->  
:HCOpy:FILE:SAVE:  
CDIRECTory "\Flash Mem\DIR1\DIR2"

Description

- Data files cannot be saved to the root directory. Specify a save destination drive for the current directory.  
The following five drives are selectable.
  - Internal hard disk: "HD"
  - Internal memory: "Flash Mem"
  - Network drive: "Network"
  - PC card: "Storage Card<x>"
  - USB storage device: "USB Storage<x>"<x> = 1 to 4 (however, only a total of four "Storage Card" and "USB Storage" designations are supported (including partitions))
- Sets the specified directory the current directory for saving and loading.
- Absolute and relative path designations are possible.
- To specify an absolute path, enter a backslash at the front of the path.
- Relative path to higher level directories is not allowed.

### **:HCOpy:FILE:SAVE:NAME**

Function Sets the save destination file name or queries the current setting.

Syntax :HCOpy:FILE:SAVE:NAME <Filename>  
:HCOpy:FILE:SAVE:NAME?

Example :HCOpy:FILE:SAVE:NAME "SAMPLE"  
:HCOpy:FILE:SAVE:NAME? ->  
:HCOpy:FILE:SAVE:NAME "SAMPLE"

### **:HCOpy:PRINter?**

Function Queries all settings related to the built-in printer output.

Syntax :HCOpy:PRINter?

Example :HCOpy:PRINter? ->  
:HCOpy:PRINter:HRMODE 1

### **:HCOpy:PRINter:HRMode**

Function Turns ON/OFF the high resolution mode of the built-in printer output or queries the current setting.

Syntax :HCOpy:PRINter:HRMode {<Boolean>}  
:HCOpy:PRINter:HRMode?

Example :HCOpy:PRINter:HRMODE ON  
:HCOpy:PRINter:HRMODE? ->  
:HCOpy:PRINter:HRMODE 1

## 5.14 HISTory Group

### :HISTory?

Function Queries all settings related to the history function.

Syntax :HISTory?

Example :HISTory? -> :HISTORY:CURRENT:  
 DISPLAY 0,-10;DMODE ONE;MODE RECORD;  
 RECORD 0;REPLAY:SPEED 1;:HISTORY:  
 CURRENT:SEARCH:LOGIC AND;SELECT1:  
 CONDITION IN;MODE PARAMETER;PARAMETER:  
 CATEGORY MEASURE;MEASURE:  
 CALCULATION1 1.000E+00,2.000E+00;:  
 HISTORY:CURRENT:SEARCH:SELECT1:  
 RECTANGLE:HORIZONTAL 1.000E+00,  
 2.000E+00;VERTICAL 1.000E+00,  
 2.000E+00;:HISTORY:CURRENT:SEARCH:  
 SELECT1:TRACE 1;:HISTORY:CURRENT:  
 SEARCH:SELECT1:WAVE:TRANGE 1.000E+00,  
 2.000E+00;:HISTORY:CURRENT:SEARCH:  
 SELECT1:WINDOW MAIN;:HISTORY:CURRENT:  
 SEARCH:SELECT2:CONDITION IN;  
 MODE PARAMETER;PARAMETER:  
 CATEGORY MEASURE;MEASURE:  
 CALCULATION1 1.000E+00,2.000E+00;:  
 HISTORY:CURRENT:SEARCH:SELECT2:  
 RECTANGLE:HORIZONTAL 1.000E+00,  
 2.000E+00;VERTICAL 1.000E+00,  
 2.000E+00;:HISTORY:CURRENT:SEARCH:  
 SELECT2:TRACE 1;:HISTORY:CURRENT:  
 SEARCH:SELECT2:WAVE:TRANGE 1.000E+00,  
 2.000E+00;:HISTORY:CURRENT:SEARCH:  
 SELECT2:WINDOW MAIN;:HISTORY:CURRENT:  
 SEARCH;SELECT3:CONDITION IN;  
 MODE PARAMETER;PARAMETER:  
 CATEGORY MEASURE;MEASURE:  
 CALCULATION1 1.000E+00,2.000E+00.....

### :HISTory [ :CURRENT ] ?

Function Queries all settings related to the history function of the current waveform (CH1 to 4, M1 to 8).

Syntax :HISTory[ :CURRENT ] ?

Example :HISTory:CURRENT? -> :HISTORY:CURRENT:  
 DISPLAY 0,-10;DMODE ONE;MODE RECORD;  
 RECORD 0;REPLAY:SPEED 1;:HISTORY:  
 CURRENT:SEARCH:LOGIC AND;SELECT1:  
 CONDITION IN;MODE PARAMETER;PARAMETER:  
 CATEGORY MEASURE;MEASURE:  
 CALCULATION1 1.000E+00,2.000E+00;:  
 HISTORY:CURRENT:SEARCH:SELECT1:  
 RECTANGLE:HORIZONTAL 1.000E+00,  
 2.000E+00;VERTICAL 1.000E+00,  
 2.000E+00;:HISTORY:CURRENT:SEARCH:  
 SELECT1:TRACE 1;:HISTORY:CURRENT:  
 SEARCH:SELECT1:WAVE:TRANGE 1.000E+00,  
 2.000E+00;:HISTORY:CURRENT:SEARCH:  
 SELECT1:WINDOW MAIN;:HISTORY:CURRENT:  
 SEARCH:SELECT2:CONDITION IN;  
 MODE PARAMETER;PARAMETER:  
 CATEGORY MEASURE;MEASURE:  
 CALCULATION1 1.000E+00,2.000E+00;:  
 HISTORY:CURRENT:SEARCH:SELECT2:  
 RECTANGLE:HORIZONTAL 1.000E+00,  
 2.000E+00;VERTICAL 1.000E+00,  
 2.000E+00;:HISTORY:CURRENT:SEARCH:  
 SELECT2:TRACE 1;:HISTORY:CURRENT:  
 SEARCH:SELECT2:WAVE:TRANGE 1.000E+00,  
 2.000E+00;:HISTORY:CURRENT:SEARCH:  
 SELECT2:WINDOW MAIN;:HISTORY:CURRENT:  
 SEARCH;SELECT3:CONDITION IN;  
 MODE PARAMETER;PARAMETER:  
 CATEGORY MEASURE;MEASURE:  
 CALCULATION1 1.000E+00,2.000E+00.....

### :HISTory [ :CURRENT ] :DISPlay

Function Sets the start number and end number of the display record of the history waveform or queries the current setting.

Syntax :HISTory[ :CURRENT ] :DISPlay  
 {<NRf>,<NRf>}  
 :HISTory[ :CURRENT ] :DISPlay?  
 <NRf> = See the DL9000 User's Manual.

Example :HISTory:CURRENT:DISPlay 0,-10  
 :HISTory:CURRENT:DISPlay? ->  
 :HISTory:CURRENT:DISPlay 0,-10

## 5.14 HISTory Group

### **:HISTory [ :CURRENT ] :DMODE**

#### **(Display Mode)**

Function Sets the display mode of the history waveform or queries the current setting.

Syntax :HISTory[ :CURRENT ]:DMODE {ACOLor | AHTone | AINTensity | ONE}  
:HISTory[ :CURRENT ]:DMODE?

Example :HISTORY:CURRENT:DMODE ONE  
:HISTORY:CURRENT:DMODE? ->  
:HISTORY:CURRENT:DMODE ONE

### **:HISTory [ :CURRENT ] :MODE**

Function Sets the highlight display mode of the history waveform or queries the current setting.

Syntax :HISTory[ :CURRENT ]:MODE {AVERAge | RECOrd}  
:HISTory[ :CURRENT ]:MODE?

Example :HISTORY:CURRENT:MODE RECORD  
:HISTORY:CURRENT:MODE? ->  
:HISTORY:CURRENT:MODE RECORD

### **:HISTory [ :CURRENT ] :RECOrd**

Function Sets the target record of the history waveform or queries the current setting.

Syntax :HISTory[ :CURRENT ]:RECOrd  
{<NRf> | MINimum}  
:HISTory[ :CURRENT ]:RECOrd?  
<NRf> = See the DL9000 User's Manual.

Example :HISTORY:CURRENT:RECORD 0  
:HISTORY:CURRENT:RECORD? ->  
:HISTORY:CURRENT:RECORD 0

Description Specifying MINimum sets the record to the minimum record number.

### **:HISTory [ :CURRENT ] :RECOrd? MINimum**

Function Queries the minimum record number of the history waveform.

Syntax :HISTory[ :CURRENT ]:RECOrd? MINimum

Example :HISTORY:CURRENT:RECORD? MINIMUM ->  
:HISTORY:CURRENT:RECORD -1

Description Specifying MINimum sets the record to the minimum record number.

### **:HISTory [ :CURRENT ] :REPLay?**

Function Queries all settings related to the replay function of the history function.

Syntax :HISTory[ :CURRENT ]:REPLay?

Example :HISTORY:CURRENT:REPLAY? ->  
:HISTORY:CURRENT:REPLAY:SPEED 1

### **:HISTory [ :CURRENT ] :REPLay: JUMP**

Function Jumps the history waveform to the specified record number.

Syntax :HISTory[ :CURRENT ]:REPLay:JUMP  
{MAXimum | MINimum}

Example :HISTORY:CURRENT:REPLAY:JUMP MAXIMUM

### **:HISTory [ :CURRENT ] :REPLay: SPEEd**

Function Sets the replay speed of the history waveform or queries the current setting.

Syntax :HISTory[ :CURRENT ]:REPLay:SPEEd  
{<NRf> | PER3 | PER10 | PER30 | PER60}  
:HISTory[ :CURRENT ]:REPLay:SPEEd?  
<NRf> = 1, 3, 10

Example :HISTORY:CURRENT:REPLAY:SPEED 1  
:HISTORY:CURRENT:REPLAY:SPEED? ->  
:HISTORY:CURRENT:REPLAY:SPEED 1

### **:HISTory [ :CURRENT ] :REPLay: START**

Function Starts the replay of the history waveform in the specified direction.

Syntax :HISTory[ :CURRENT ]:REPLay:START  
{MAXimum | MINimum}

Example :HISTORY:CURRENT:REPLAY:START MAXIMUM

### **:HISTory [ :CURRENT ] :REPLay: STOP**

Function Stops the replay of the history waveform.

Syntax :HISTory[ :CURRENT ]:REPLay:STOP

Example :HISTORY:CURRENT:REPLAY:STOP

**:HISToRY [ :CURRent ] [ :SEARCh ] ?**

Function Queries all settings related to the history search function.

Syntax :HISToRY [ :CURRent ] [ :SEARCh ] ?

Example :HISToRY:CURRent:SEARCh? ->

```
:HISToRY:CURRent:SEARCh:LOGIC AND;
SELEct1:CONDITIoN IN;MoDE PARAMETER;
PARAMETER:CATegory MEASURE;MEASURE:
CALCULATION1 1.000E+00,2.000E+00;;
HISToRY:CURRent:SEARCh:SELEct1:
RECTANGLE:HORIZoNTAL 1.000E+00,
2.000E+00;VERTICAL 1.000E+00,
2.000E+00;;HISToRY:CURRent:SEARCh:
SELEct1:TRACE 1;;HISToRY:CURRent:
SEARCh:SELEct1:WAVE:TRANGE 1.000E+00,
2.000E+00;;HISToRY:CURRent:SEARCh:
SELEct1:WINDoW MAIN;;HISToRY:CURRent:
SEARCh:SELEct2:CONDITIoN IN;
MoDE PARAMETER;PARAMETER:
CATegory MEASURE;MEASURE:
CALCULATION1 1.000E+00,2.000E+00;;
HISToRY:CURRent:SEARCh:SELEct2:
RECTANGLE:HORIZoNTAL 1.000E+00,
2.000E+00;VERTICAL 1.000E+00,
2.000E+00;;HISToRY:CURRent:SEARCh:
SELEct2:TRACE 1;;HISToRY:CURRent:
SEARCh:SELEct2:WAVE:TRANGE 1.000E+00,
2.000E+00;;HISToRY:CURRent:SEARCh:
SELEct2:WINDoW MAIN;;HISToRY:CURRent:
SEARCh;SELEct3:CONDITIoN IN;
MoDE PARAMETER;PARAMETER:
CATegory MEASURE;MEASURE:
CALCULATION1 1.000E+00,2.000E+00.....
```

**:HISToRY [ :CURRent ] [ :SEARCh ] :ABORT**

Function Aborts the history search.

Syntax :HISToRY [ :CURRent ] [ :SEARCh ] :ABORT

Example :HISToRY:CURRent:SEARCh:ABORT

**:HISToRY [ :CURRent ] [ :SEARCh ] :EXECute**

Function Executes the history search. This is an overlap command.

Syntax :HISToRY [ :CURRent ] [ :SEARCh ] :EXECute

Example :HISToRY:CURRent:SEARCh:EXECUTE

**:HISToRY [ :CURRent ] [ :SEARCh ] :LOGic**

Function Sets the history search logic or queries the current setting.

Syntax :HISToRY [ :CURRent ] [ :SEARCh ] :LOGic {AND|OR}

Example :HISToRY:CURRent:SEARCh:LOGIC AND  
:HISToRY:CURRent:SEARCh:LOGIC? ->  
:HISToRY:CURRent:SEARCh:LOGIC AND

**:HISToRY [ :CURRent ] [ :SEARCh ] :RESet**

Function Resets the search conditions of the history search.

Syntax :HISToRY [ :CURRent ] [ :SEARCh ] :RESet

Example :HISToRY:CURRent:SEARCh:RESet

**:HISToRY [ :CURRent ] [ :SEARCh ] :****SELEct<x>?**

Function Queries all settings related to the history search condition.

Syntax :HISToRY [ :CURRent ] [ :SEARCh ] :SELEct<x>?  
<x> = 1 to 4

Example :HISToRY:CURRent:SEARCh:SELEct1? ->

```
:HISToRY:CURRent:SEARCh:SELEct1:
CONDITIoN IN;MoDE PARAMETER;PARAMETER:
CATegory MEASURE;MEASURE:
CALCULATION1 1.000E+00,2.000E+00;;
HISToRY:CURRent:SEARCh:SELEct1:
RECTANGLE:HORIZoNTAL 1.000E+00,
2.000E+00;VERTICAL 1.000E+00,
2.000E+00;;HISToRY:CURRent:SEARCh:
SELEct1:TRACE 1;;HISToRY:CURRent:
SEARCh:SELEct1:WAVE:TRANGE 1.000E+00,
2.000E+00;;HISToRY:CURRent:SEARCh:
SELEct1:WINDoW MAIN
```

**:HISToRY [ :CURRent ] [ :SEARCh ] :****SELEct<x>:CONDITIoN**

Function Sets determination criteria of the history search condition or queries the current setting.

Syntax :HISToRY [ :CURRent ] [ :SEARCh ] :SELEct<x>:  
CONDITIoN {DONTcare|IN|OUT}

Example :HISToRY:CURRent:SEARCh:SELEct1:  
CONDITIoN? -> :HISToRY:CURRent:SEARCh:  
SELEct1:CONDITIoN IN

**:HISToRY [ :CURRent ] [ :SEARCh ] :****SELEct<x>:MoDE**

Function Sets the mode of the history search condition or queries the current setting.

Syntax :HISToRY [ :CURRent ] [ :SEARCh ] :SELEct<x>:  
MoDE {PARAMeter|POLYgon|RECTangle|WAVE}

Example :HISToRY:CURRent:SEARCh:SELEct1:  
MoDE WAVE  
:HISToRY:CURRent:SEARCh:SELEct1:MoDE?  
-> :HISToRY:CURRent:SEARCh:SELEct1:  
MoDE WAVE

## 5.14 HISTory Group

### **:HISTory [ :CURRENT ] [ :SEARCH ] :**

#### **SElect<x>:PARAmeter?**

Function Queries all settings related to the parameter of the history search condition.

Syntax :HISTory [ :CURRENT ] [ :SEARCH ] :SElect<x> :  
PARAmeter?  
<x> = 1 to 4

Example :HISTORY:CURRENT:SEARCH:SELECT1:  
PARAMETER? -> :HISTORY:CURRENT:SEARCH:  
SELECT1:PARAMETER:CATEGORY MEASURE;  
MEASURE:CALCULATION1 2.000E+00,  
1.000E+00

### **:HISTory [ :CURRENT ] [ :SEARCH ] :**

#### **SElect<x>:PARAmeter:CATegory**

Function Sets the parameter category or queries the current setting.

Syntax :HISTory [ :CURRENT ] [ :SEARCH ] :SElect<x> :  
PARAmeter:CATegory {FFT|MEASure|XY}  
:HISTory [ :CURRENT ] [ :SEARCH ] :SElect<x> :  
PARAmeter:CATegory?  
<x> = 1 to 4

Example :HISTORY:CURRENT:SEARCH:SELECT1:  
PARAMETER:CATEGORY MEASURE  
:HISTORY:CURRENT:SEARCH:SELECT1:  
PARAMETER:CATEGORY? ->  
:HISTORY:CURRENT:SEARCH:SELECT1:  
PARAMETER:CATEGORY MEASURE

### **:HISTory [ :CURRENT ] [ :SEARCH ] :S**

#### **ELect<x>:PARAmeter:FFT<x>?**

Function Queries all settings related to the FFT search.

Syntax :HISTory [ :CURRENT ] [ :SEARCH ] :SElect<x> :  
PARAmeter:FFT<x>?  
<x> of SElect<x> = 1 to 4  
<x> of FFT<x> = 1 or 2

Example :HISTORY:CURRENT:SEARCH:SELECT1:  
PARAMETER:FFT1? -> :HISTORY:CURRENT:  
SEARCH:SELECT1:PARAMETER:FFT1:  
CALCULATION1 2.000E+00,1.000E+00

### **:HISTory [ :CURRENT ] [ :SEARCH ] :**

#### **SElect<x>:PARAmeter:FFT<x>:**

#### **CALCulation<x>**

Function Sets the upper and lower limits of the calculation item of the FFT search or queries the current setting.

Syntax :HISTory [ :CURRENT ] [ :SEARCH ] :SElect<x> :  
PARAmeter:FFT<x>:CALCulation<x>?  
{<NRf>, <NRf>}  
:HISTory [ :CURRENT ] [ :SEARCH ] :SElect<x> :  
PARAmeter:FFT<x>:CALCulation<x>?  
<x> of SElect<x> = 1 to 4  
<x> of FFT<x> = 1 or 2  
<x> of CALCulation<x> = 1 to 4  
<NRf> = See the DL9000 User's Manual.

Example :HISTORY:CURRENT:SEARCH:SELECT1:  
PARAMETER:FFT1:CALCULATION1 1,2  
:HISTORY:CURRENT:SEARCH:SELECT1:  
PARAMETER:FFT1:CALCULATION1? ->  
:HISTORY:CURRENT:SEARCH:SELECT1:  
PARAMETER:FFT1:CALCULATION1 2.000E+00,  
1.000E+00

### **:HISTory [ :CURRENT ] [ :SEARCH ] :**

#### **SElect<x>:PARAmeter:FFT<x>:PEAK?**

Function Queries all settings related to the peak value of the FFT search.

Syntax :HISTory [ :CURRENT ] [ :SEARCH ] :SElect<x> :  
PARAmeter:FFT<x>:PEAK?  
<x> of SElect<x> = 1 to 4  
<x> of FFT<x> = 1 or 2

Example :HISTORY:CURRENT:SEARCH:SELECT1:  
PARAMETER:FFT1:PEAK? ->  
:HISTORY:CURRENT:SEARCH:SELECT1:  
PARAMETER:FFT1:PEAK:  
DV 2.000E+00,1.000E+00

**:HISToRY [ :CURREnt ] [ :SEARCh ] :****SELEct<x>:PARAmeter:FFT<x>:PEAK:****DFREquency**

**Function** Sets the upper and lower limits between the peak frequencies of the FFT search or queries the current setting.

**Syntax** :HISToRY [ :CURREnt ] [ :SEARCh ] :SELEct<x>:  
PARAmeter:FFT<x>:PEAK:DFREquency  
{<Frequency>, <Frequency>}  
:HISToRY [ :CURREnt ] [ :SEARCh ] :SELEct<x>:  
PARAmeter:FFT<x>:PEAK:DFREquency?  
<x> of SELEct<x> = 1 to 4  
<x> of FFT<x> = 1 or 2  
<Frequency> = See the DL9000 User's Manual

**Example** :HISToRY:CURREnt:SEARCh:SELEct1:  
PARAmeter:FFT1:PEAK:DFREquency 1,10  
:HISToRY:CURREnt:SEARCh:SELEct1:  
PARAmeter:FFT1:PEAK:DFREquency? ->  
:HISToRY:CURREnt:SEARCh:SELEct1:  
PARAmeter:FFT1:PEAK:  
DFREquency 10.00E+00,1.000E+00

**:HISToRY [ :CURREnt ] [ :SEARCh ] :****SELEct<x>:PARAmeter:FFT<x>:PEAK:DV**

**Function** Sets the upper and lower limits between the peak voltages of the FFT search or queries the current setting.

**Syntax** :HISToRY [ :CURREnt ] [ :SEARCh ] :SELEct<x>:  
PARAmeter:FFT<x>:PEAK:DV {<NRf>, <NRf>}  
:HISToRY [ :CURREnt ] [ :SEARCh ] :SELEct<x>:  
PARAmeter:FFT<x>:PEAK:DV?  
<x> of SELEct<x> = 1 to 4  
<x> of FFT<x> = 1 or 2  
<NRf> = -4 to 4 (div)

**Example** :HISToRY:CURREnt:SEARCh:SELEct1:  
PARAmeter:FFT1:PEAK:DV 1,2  
:HISToRY:CURREnt:SEARCh:SELEct1:  
PARAmeter:FFT1:PEAK:DV? ->  
:HISToRY:CURREnt:SEARCh:SELEct1:  
PARAmeter:FFT1:PEAK:  
DV 2.000E+00,1.000E+00

**:HISToRY [ :CURREnt ] [ :SEARCh ] :****SELEct<x>:PARAmeter:FFT<x>:PEAK:****FREquency<x>**

**Function** Sets the upper and lower limits of the peak frequency of the FFT search or queries the current setting.

**Syntax** :HISToRY [ :CURREnt ] [ :SEARCh ] :SELEct<x>:  
PARAmeter:FFT<x>:PEAK:FREquency<x>  
{<Frequency>, <Frequency>}  
:HISToRY [ :CURREnt ] [ :SEARCh ] :SELEct<x>:  
PARAmeter:FFT<x>:PEAK:FREquency<x>?  
<x> of SELEct<x> = 1 to 4  
<x> of FFT<x> = 1 or 2  
<x> of FREquency<x> = 1 or 2  
<Frequency> = See the DL9000 User's Manual

**Example** :HISToRY:CURREnt:SEARCh:SELEct1:  
PARAmeter:FFT1:PEAK:FREquency1 1,2  
:HISToRY:CURREnt:SEARCh:SELEct1:  
PARAmeter:FFT1:PEAK:FREquency1? ->  
:HISToRY:CURREnt:SEARCh:SELEct1:  
PARAmeter:FFT1:PEAK:  
FREquency1 2.000E+00,1.000E+00

**:HISToRY [ :CURREnt ] [ :SEARCh ] :****SELEct<x>:PARAmeter:FFT<x>:PEAK:V<x>**

**Function** Sets the upper and lower limits of the peak voltage of the FFT search or queries the current setting.

**Syntax** :HISToRY [ :CURREnt ] [ :SEARCh ] :SELEct<x>:  
PARAmeter:FFT<x>:PEAK:V<x>  
{<NRf>, <NRf>}  
:HISToRY [ :CURREnt ] [ :SEARCh ] :SELEct<x>:  
PARAmeter:FFT<x>:PEAK:V<x>?  
<x> of SELEct<x> = 1 to 4  
<x> of FFT<x> = 1 or 2  
<x> of V<x> = 1 or 2  
<NRf> = -4 to 4 (div)

**Example** :HISToRY:CURREnt:SEARCh:SELEct1:  
PARAmeter:FFT1:PEAK:V1 1,2  
:HISToRY:CURREnt:SEARCh:SELEct1:  
PARAmeter:FFT1:PEAK:V1? ->  
:HISToRY:CURREnt:SEARCh:SELEct1:  
PARAmeter:FFT1:PEAK:  
V1 2.000E+00,1.000E+00

**SELEct<x>:PARAmeter:MEASure?**

**Function** Queries all settings related to the search using automated measurement of waveform parameters (measure search).

**Syntax** :HISToRY [ :CURREnt ] [ :SEARCh ] :SELEct<x>:  
PARAmeter:MEASure?  
<x> = 1 to 4

**Example** :HISToRY:CURREnt:SEARCh:SELEct1:  
PARAmeter:MEASure? ->  
:HISToRY:CURREnt:SEARCh:SELEct1:  
PARAmeter:MEASure:  
CALCULATION1 1.000E+00,2.000E+00



## 5.14 HISTory Group

### **:HISTory [ :CURRent ] [ :SEARCh ] :**

#### **SElect<x>:PARAmeter:MEASure:**

#### **CALCulation<x>**

**Function** Sets the upper and lower limits of the calculation item of the measure search or queries the current setting.

**Syntax** :HISTory [ :CURRent ] [ :SEARCh ] :SElect<x>:  
PARAmeter:MEASure:CALCulation<x>?  
{<Nrf>,<Nrf>}  
:HISTory [ :CURRent ] [ :SEARCh ] :SElect<x>:  
PARAmeter:MEASure:CALCulation<x>?  
<x> of SElect<x> = 1 to 4  
<x> of CALCulation<x> = 1 to 4  
<Nrf> = -4 to 4 (div)

**Example** :HISTORY:CURRENT:SEARCH:SELECT1:  
PARAMETER:MEASURE:CALCULATION1 1,2  
:HISTORY:CURRENT:SEARCH:SELECT1:  
PARAMETER:MEASURE:CALCULATION1? ->  
:HISTORY:CURRENT:SEARCH:SELECT1:  
PARAMETER:MEASURE:  
CALCULATION1 2.000E+00,1.000E+00

### **:HISTory [ :CURRent ] [ :SEARCh ] :**

#### **SElect<x>:PARAmeter:MEASure:**

#### **TRACe<x>?**

**Function** Queries all settings related to the trace of the measure search.

**Syntax** :HISTory [ :CURRent ] [ :SEARCh ] :SElect<x>:  
PARAmeter:MEASure:TRACe<x>?  
<x> of SElect<x> = 1 to 4  
<x> of TRACe<x> = 1 to 8

**Example** :HISTORY:CURRENT:SEARCH:SELECT1:  
PARAMETER:MEASURE:TRACE1? ->  
:HISTORY:CURRENT:SEARCH:SELECT1:  
PARAMETER:MEASURE:TRACE1:AREA1:TYPE:  
BURST 2.000E+00,1.000E+00

### **:HISTory [ :CURRent ] [ :SEARCh ] :**

#### **SElect<x>:PARAmeter:MEASure:**

#### **TRACe<x>:AREA<x>?**

**Function** Queries all settings related to the area of the measure search.

**Syntax** :HISTory [ :CURRent ] [ :SEARCh ] :SElect<x>:  
PARAmeter:MEASure:TRACe<x>:AREA<x>?  
<x> of SElect<x> = 1 to 4  
<x> of TRACe<x> = 1 to 8  
<x> of AREA<x> = 1 or 2

**Example** :HISTORY:CURRENT:SEARCH:SELECT1:  
PARAMETER:MEASURE:TRACE1:AREA1? ->  
:HISTORY:CURRENT:SEARCH:SELECT1:  
PARAMETER:MEASURE:TRACE1:AREA1:TYPE:  
BURST  
2.000E+00,1.000E+00SElect<x>:PARAmeter:  
MEASure:  
TRACe<x>:AREA<x>:TYPE?

### **:HISTory [ :CURRent ] [ :SEARCh ] :**

#### **SElect<x>:PARAmeter:MEASure:**

#### **TRACe<x>:AREA<x>:TYPE?**

**Function** Queries all settings related to the waveform parameters of the measure search.

**Syntax** :HISTory [ :CURRent ] [ :SEARCh ] :SElect<x>:  
PARAmeter:MEASure:TRACe<x>:AREA<x>:  
TYPE?  
<x> of SElect<x> = 1 to 4  
<x> of TRACe<x> = 1 to 8  
<x> of AREA<x> = 1 or 2

**Example** :HISTORY:CURRENT:SEARCH:SELECT1:  
PARAMETER:MEASURE:TRACE1:AREA1:TYPE? ->  
:HISTORY:CURRENT:SEARCH:SELECT1:  
PARAMETER:MEASURE:TRACE1:AREA1:TYPE:  
BURST 2.000E+00,1.000E+00

**:HISToRY[:CURRENT][:SEARCH]:****SElect<x>:PARAMeter:MEASure:****TRACe<x>:AREA<x>:TYPE:<Parameter>**

Function Sets the upper and lower limits of the waveform parameter of the measure search or queries the current setting.

Syntax :HISToRY[:CURRENT][:SEARCH]:SElect<x>:  
PARAMeter:MEASure:TRACe<x>:AREA<x>:  
TYPE:<Parameter> {(<NRf>,<NRf>)|  
(<Voltage>,<Voltage>)|  
(<Current>,<Current>)|(<Time>,<Time>)|  
(<Frequency>,<Frequency>)}  
:HISToRY[:CURRENT][:SEARCH]:SElect<x>:  
PARAMeter:MEASure:TRACe<x>:AREA<x>:  
TYPE:<Parameter>?  
<x> of SElect<x> = 1 to 4  
<x> of TRACe<x> = 1 to 8  
<x> of AREA<x> = 1 or 2

<Parameter> = {BURSt|CMEan|COUNT|CRMS|  
CSDeviAtion|DELay|DUTYcycle|FALL|  
FREQuency|HIGH|HILow|LOW|MAXimum|MEAN|  
MINimum|NOvershoot|NWIDTH|PERFrequency|  
PERiod|POvershoot|PTOPeak|PWIDth|RISE|  
RMS|SDeviAtion|TYCInteg|TYINteg}  
<NRf>, <Voltage>, <Current>, <Time>, and  
<Frequency> = See the DL9000 User's Manual.

Example (The following is an example for the maximum value of trace 1 and area 1.)

```
:HISTORY:CURRENT:SEARCH:SELECT1:
PARAMETER:MEASURE:TRACE1:AREA1:TYPE:
MAXIMUM 0,1
:HISTORY:CURRENT:SEARCH:SELECT1:
PARAMETER:MEASURE:TRACE1:AREA1:TYPE:
MAXIMUM? -> :HISTORY:CURRENT:SEARCH:
SELECT1:PARAMETER:MEASURE:TRACE1:AREA1:
TYPE:MAXIMUM 1.000E+00,0.000E+00
```

**:HISToRY[:CURRENT][:SEARCH]:****SElect<x>:PARAMeter:XY<x>?**

Function Queries all settings related to the XY search.

Syntax :HISToRY[:CURRENT][:SEARCH]:SElect<x>:  
PARAMeter:XY<x>?  
<x> of SElect<x> = 1 to 4  
<x> of XY<x> = 1 or 2

Example :HISTORY:CURRENT:SEARCH:SELECT1:  
PARAMETER:XY1? ->  
:HISTORY:CURRENT:SEARCH:SELECT1:  
PARAMETER:XY1:  
XYINTEG 2.000E+00,1.000E+00

**:HISToRY[:CURRENT][:SEARCH]:****SElect<x>:PARAMeter:XY<x>:XYINteg**

Function Sets the upper and lower limits integral value of the XY search or queries the current setting.

Syntax :HISToRY[:CURRENT][:SEARCH]:SElect<x>:  
PARAMeter:XY<x>:XYINteg {<NRf>,<NRf>}  
:HISToRY[:CURRENT][:SEARCH]:SElect<x>:  
PARAMeter:XY<x>:XYINteg?  
<x> of SElect<x> = 1 to 4  
<x> of XY<x> = 1 or 2  
<NRf> = -4 to 4 (div)

Example :HISTORY:CURRENT:SEARCH:SELECT1:  
PARAMETER:XY1:XYINTEG 1,2  
:HISTORY:CURRENT:SEARCH:SELECT1:  
PARAMETER:XY1:XYINTEG? ->  
:HISTORY:CURRENT:SEARCH:SELECT1:  
PARAMETER:XY1:  
XYINTEG 2.000E+00,1.000E+00

**:HISToRY[:CURRENT][:SEARCH]:****SElect<x>:RECTangle?**

Function Queries all settings related to the rectangle search.

Syntax :HISToRY[:CURRENT][:SEARCH]:SElect<x>:  
RECTangle?  
<x> = 1 to 4

Example :HISTORY:CURRENT:SEARCH:SELECT1:  
RECTANGLE? -> :HISTORY:CURRENT:SEARCH:  
SELECT1:RECTANGLE:HORIZONTAL 2.000E+00,  
1.000E+00;VERTICAL 2.000E+00,1.000E+00

**:HISToRY[:CURRENT][:SEARCH]:****SElect<x>:RECTangle:HORizontal**

Function Sets the horizontal position of the rectangle used in the rectangle search or queries the current setting.

Syntax :HISToRY[:CURRENT][:SEARCH]:SElect<x>:  
RECTangle:HORizontal {<NRf>,<NRf>}  
:HISToRY[:CURRENT][:SEARCH]:SElect<x>:  
RECTangle:HORizontal?  
<x> = 1 to 4  
<NRf> = -5 to 5 (div)

Example :HISTORY:CURRENT:SEARCH:SELECT1:  
RECTANGLE:HORIZONTAL 1,2  
:HISTORY:CURRENT:SEARCH:SELECT1:  
RECTANGLE:HORIZONTAL? ->  
:HISTORY:CURRENT:SEARCH:SELECT1:  
RECTANGLE:HORIZONTAL 2.000E+00,  
1.000E+00

## 5.14 HISTory Group

### **:HISTory [ :CURRENT ] [ :SEARCH ] :**

#### **SElect<x>:RECTangle:VERTical**

Function Sets the vertical position of the rectangle used in the rectangle search or queries the current setting.

Syntax :HISTory [ :CURRENT ] [ :SEARCH ] :SElect<x>:  
RECTangle:VERTical {<NRf>, <NRf>}  
:HISTory [ :CURRENT ] [ :SEARCH ] :SElect<x>:  
RECTangle:VERTical?  
<x> = 1 to 4  
<NRf> = -4 to 4 (div)

Example :HISTORY:CURRENT:SEARCH:SELECT1:  
RECTANGLE:VERTICAL 1,2  
:HISTORY:CURRENT:SEARCH:SELECT1:  
RECTANGLE:VERTICAL? ->  
:HISTORY:CURRENT:SEARCH:SELECT1:  
RECTANGLE:VERTICAL 2.000E+00,1.000E+00

### **:HISTory [ :CURRENT ] [ :SEARCH ] :**

#### **SElect<x>:TRAcE**

Function Sets the source trace of the history search or queries the current setting.

Syntax :HISTory [ :CURRENT ] [ :SEARCH ] :SElect<x>:  
TRAcE {<NRf>}  
:HISTory [ :CURRENT ] [ :SEARCH ] :SElect<x>:  
TRAcE?  
<x> = 1 to 4  
<NRf> = 1 to 8

Example :HISTORY:CURRENT:SEARCH:SELECT1:TRACE 1  
:HISTORY:CURRENT:SEARCH:SELECT1:TRACE?  
-> :HISTORY:CURRENT:SEARCH:SELECT1:  
TRACE 1

Description This command is invalid when Window is XY.

### **:HISTory [ :CURRENT ] [ :SEARCH ] :**

#### **SElect<x>:WAVE?**

Function Queries all settings related to the search in the waveform zone (wave search).

Syntax :HISTory [ :CURRENT ] [ :SEARCH ] :SElect<x>:  
WAVE?  
<x> = 1 to 4

Example :HISTORY:CURRENT:SEARCH:SELECT1:WAVE?  
-> :HISTORY:CURRENT:SEARCH:SELECT1:  
WAVE:TRANGE 2.000E+00,1.000E+00

### **:HISTory [ :CURRENT ] [ :SEARCH ] :**

#### **SElect<x>:WAVE:EDIT<x>:EXIT**

Function Exits the zone edit menu of the wave search.

Syntax :HISTory [ :CURRENT ] [ :SEARCH ] :SElect<x>:  
WAVE:EDIT<x>:EXIT {<NRf>|QUIT}  
<x> of SElect<x> = 1 to 4  
<x> of EDIT<x> = 1 to 13  
<NRf> = 1 to 4 (internal memories)

Example :HISTORY:CURRENT:SEARCH:SELECT1:WAVE:  
EDIT1:EXIT 1

Description • An error occurs if this command is issued when the zone is not being edited.  
• Saves the zone waveform to the internal memory specified by <NRf>.

### **:HISTory [ :CURRENT ] [ :SEARCH ] :**

#### **SElect<x>:WAVE:EDIT<x>:PART**

Function Sets the editing of the portion of the zone of the wave search.

Syntax :HISTory [ :CURRENT ] [ :SEARCH ] :SElect<x>:  
WAVE:EDIT<x>:PART  
{<NRf>, <NRf>, <NRf>, <NRf>}  
<x> of SElect<x> = 1 to 4  
<x> of EDIT<x> = 1 to 13 (1 to 8 are traces. 9 to 12 are internal memories. 13 is the zone waveform that is currently displayed)  
<NRf> = -5 to 5 (div: partial editing time axis cursor 1 and 2)  
-8 to 8 (div: up and down) (in the order partial editing time axis cursor 1, 2, ↑, and ↓)

Example :HISTORY:CURRENT:SEARCH:SELECT1:WAVE:  
EDIT1:PART 1,2,3,4

Description The amount of movement upward or downward is a relative value with respect to the zone waveform that is currently displayed.

### **:HISTory [ :CURRENT ] [ :SEARCH ] :**

#### **SElect<x>:WAVE:EDIT<x>:WHOLE**

Function Sets the editing of the entire zone of the wave search.

Syntax :HISTory [ :CURRENT ] [ :SEARCH ] :SElect<x>:  
WAVE:EDIT<x>:WHOLE  
{<NRf>, <NRf>, <NRf>, <NRf>}  
<x> of SElect<x> = 1 to 4  
<x> of EDIT<x> = 1 to 13 (1 to 8 are traces. 9 to 12 are internal memories. 13 is the zone waveform that is currently displayed)  
<NRf> = 0 to 5 (div: left and right)  
0 to 8 (div: up and down)  
(In the order ←, →, ↑, and ↓)

Example :HISTORY:CURRENT:SEARCH:SELECT1:WAVE:  
EDIT1:WHOLE 1,2,3,4

Description The amount of movement is a relative value with respect to the reference waveform.

**:HISToRY[:CURRENT][:SEARCH]:****SElect<x>:WAVE:TRANge**

Function Sets the range over which to perform the wave search or queries the current setting.

Syntax :HISToRY[:CURRENT][:SEARCH]:SElect<x>:  
WAVE:TRANge {<NRf>,<NRf>}  
:HISToRY[:CURRENT][:SEARCH]:SElect<x>:  
WAVE:TRANge?  
<x> = 1 to 4  
<NRf> = -5 to 5 (div)

Example :HISToRY:CURRENT:SEARCH:SElect1:WAVE:  
TRANge 1,2  
:HISToRY:CURRENT:SEARCH:SElect1:WAVE:  
TRANge? -> :HISToRY:CURRENT:SEARCH:  
SElect1:WAVE:TRANge 2.000E+00,1.000E+00

**:HISToRY[:CURRENT][:SEARCH]:****SElect<x>:WINDow**

Function Sets the source window of the history search or queries the current setting.

Syntax :HISToRY[:CURRENT][:SEARCH]:SElect<x>:  
WINDow {MAIN|XY1|XY2|Z1|Z2}  
:HISToRY[:CURRENT][:SEARCH]:SElect<x>:  
WINDow?  
<x> = 1 to 4

Example :HISToRY:CURRENT:SEARCH:SElect1:  
WINDow MAIN  
:HISToRY:CURRENT:SEARCH:SElect1:WINDow?  
-> :HISToRY:CURRENT:SEARCH:SElect1:  
WINDow MAIN

Description XY1 and XY2 are valid only for a rectangular polygon.

**:HISToRY[:CURRENT]:TIME?**

Function Queries the time of the source record number of the history waveform.

Syntax :HISToRY[:CURRENT]:TIME? {<NRf>|  
MINimum}

Example :HISToRY:CURRENT:TIME? -1 ->  
:HISToRY:CURRENT:TIME "-1 10:20:30.10"

Description Specifying MINimum sets the record to the minimum record number.

**:HISToRY:REFEreNce<x>?**

Function Queries all settings related to the history function of the reference.

Syntax :HISToRY:REFEreNce<x>?  
<x> = 1 to 4

Example :HISToRY:REFEreNce1? ->  
HISToRY:REFEreNce1:DMODE ACOLOR;  
MODE AVERAGE;RECORD 1;REPLAY:SPEED 1

**:HISToRY:REFEreNce<x>:DMODE****(Display Mode)**

Function Sets the display mode of the history waveform of the reference or queries the current setting.

Syntax :HISToRY:REFEreNce<x>:DMODE {ACOLor|  
AHTone|AINTensity|ONE}  
:HISToRY:REFEreNce<x>:DMODE?  
<x> = 1 to 4

Example :HISToRY:REFEreNce1:DMODE ACOLOR  
:HISToRY:REFEreNce1:DMODE? ->  
:HISToRY:REFEreNce1:DMODE ACOLOR

**:HISToRY:REFEreNce<x>:MODE**

Function Sets the highlight display mode of the history waveform of the reference or queries the current setting.

Syntax :HISToRY:REFEreNce<x>:MODE {AVERAge|  
RECORD}  
:HISToRY:REFEreNce<x>:MODE?  
<x> = 1 to 4

Example :HISToRY:REFEreNce1:MODE AVERAGE  
:HISToRY:REFEreNce1:MODE? ->  
:HISToRY:REFEreNce1:MODE AVERAGE

**:HISToRY:REFEreNce<x>:RECORD**

Function Sets the source record of the history waveform of the reference or queries the current setting.

Syntax :HISToRY:REFEreNce<x>:RECORD {<NRf>|  
MINimum}  
:HISToRY:REFEreNce<x>:RECORD?  
<x> = 1 to 4  
<NRf> = See the DL9000 User's Manual.

Example :HISToRY:REFEreNce1:RECORD 1  
:HISToRY:REFEreNce1:RECORD? ->  
:HISToRY:REFEreNce1:RECORD 1

**:HISToRY:REFEreNce<x>:RECORD? MINimum**

Function Queries the minimum record number of the history waveform of the reference.

Syntax :HISToRY:REFEreNce<x>:RECORD? {MINimum}  
<x> = 1 to 4

Example :HISToRY:REFEreNce1:RECORD? MINIMUM ->  
:HISToRY:REFEreNce1:RECORD -1

Description Specifying MINimum sets the record to the minimum record number.

**:HISToRY:REFEreNce<x>:REPLAY?**

Function Queries all settings related to the replay function of the history function of the reference.

Syntax :HISToRY:REFEreNce<x>:REPLAY?  
<x> = 1 to 4

Example :HISToRY:REFEreNce1:REPLAY? ->  
:HISToRY:REFEreNce1:REPLAY:SPEED 1

## 5.14 HISTory Group

### **:HISTory:REFEreNce<x>:REPLay:JUMP**

Function Jumps to the specified record number of the history waveform of the reference.

Syntax :HISTory:REFEreNce<x>:REPLay:JUMP  
{MAXimum|MINimum}  
<x> = 1 to 4

Example :HISTORY:REFERENCE1:REPLAY:JUMP MAXIMUM

### **:HISTory:REFEreNce<x>:REPLay:SPEEd**

Function Sets the replay speed of the history waveform of the reference or queries the current setting.

Syntax :HISTory:REFEreNce<x>:REPLay:SPEEd  
{<NRf>|PER3|PER10|PER30|PER60}  
:HISTory:REFEreNce<x>:REPLay:SPEEd?  
<x> = 1 to 4  
<NRf> = 1,3,10

Example :HISTORY:REFERENCE1:REPLAY:SPEED 1  
:HISTORY:REFERENCE1:REPLAY:SPEED? ->  
:HISTORY:REFERENCE1:REPLAY:SPEED 1

### **:HISTory:REFEreNce<x>:REPLay:START**

Function Starts the replay of the history waveform of the reference.

Syntax :HISTory:REFEreNce<x>:REPLay:START  
{MAXimum|MINimum}  
<x> = 1 to 4

Example :HISTORY:REFERENCE1:REPLAY:START  
MAXIMUM

### **:HISTory:REFEreNce<x>:REPLay:STOP**

Function Stops the replay of the history waveform of the reference.

Syntax :HISTory:REFEreNce<x>:REPLay:STOP  
<x> = 1 to 4

Example :HISTORY:REFERENCE1:REPLAY:STOP

### **:HISTory:REFEreNce<x>:TIME?**

Function Queries the time of the source record number of the reference waveform.

Syntax :HISTory:REFEreNce<x>:TIME? {<NRf>|  
MINimum}  
<x> = 1 to 4

Example :HISTORY:REFERENCE1:TIME? -1 ->  
:HISTORY:REFERENCE1:TIME "-1  
10:20:30.10"

Description Specifying MINimum sets the record to the minimum record number.

## 5.15 IMAGE Group

### **:IMAGE?**

**Function** Queries all settings related to the output of screen image data.

**Syntax** :IMAGE?

**Example** :IMAGE? -> :IMAGE:FORMAT BMP;TONE COLOR

### **:IMAGE:FORMAT**

**Function** Sets the output format of the screen image data or queries the current setting.

**Syntax** :IMAGE:FORMAt {BMP|JPEG|PNG}  
:IMAGE:FORMAt?

**Example** :IMAGE:FORMAT BMP  
:IMAGE:FORMAT? -> :IMAGE:FORMAT BMP

### **:IMAGE:SEND?**

**Function** Queries the screen image data.

**Syntax** :IMAGE:SEND?

**Example** :IMAGE:SEND? -> #6 (number of bytes, 6 digits)  
(data byte sequence) (block data)

**Description** For details on <Block data>, see page 4-6.

### **:IMAGE:TONE**

**Function** Sets the tone of the screen image data or queries the current setting.

**Syntax** :IMAGE:TONE {COLOr|GRAY|OFF|REVerse}  
:IMAGE:TONE?

**Example** :IMAGE:TONE COLOR  
:IMAGE:TONE? -> :IMAGE:TONE COLOR

**Description** If ":IMAGE:FORMAt JPEG" is specified, OFF cannot be selected.

## 5.16 INITialize Group

### **:INITialize:EXECute**

**Function** Execute the initialization.

**Syntax** :INITialize:EXECute

**Example** :INITIALIZE:EXECUTE

### **:INITialize:UNDO**

**Function** Cancels the initialization that was executed.

**Syntax** :INITialize:UNDO

**Example** :INITIALIZE:UNDO

## 5.17 MATH Group

**:MATH<x>?**

Function Queries all settings related to the computation.

Syntax :MATH<x>?

<x> = 1 to 8

Example :MATH1? -> :MATH1:SELECT MATH;  
 DISPLAY 1;ECOUNT:HYSTERESIS 1.000E+00;  
 POLARITY RISE;:MATH1:FILTER:DELAY:  
 TIME 0.000E+00;:MATH1:FILTER:IIR:  
 FORDER 2;HIPASS:COFF 10.00E+06;:MATH1:  
 FILTER:IIR:LOWPASS:COFF 10.00E+00;;  
 MATH1:FILTER:MAVG:WEIGHT 2;:MATH1:  
 FILTER:RESCALING:AVALUE 1.000E+00;  
 BVALUE 0.000E+00;:MATH1:FILTER:  
 TYPE THROUGH;:MATH1:INTEGRAL:PSCALING:  
 AVALUE 1.000E+00;BVALUE 0.000E+00;;  
 MATH1:INTEGRAL:RESCALING:  
 AVALUE 1.000E+00;BVALUE 0.000E+00;;  
 MATH1:INVERT 0;IPOINT:  
 POSITION 0.000E+00;:MATH1:LABEL:  
 DEFINE "MATH1";MODE 0;:MATH1:MINUS:  
 PSCALING1:AVALUE 1.000E+00;  
 BVALUE 0.000E+00;:MATH1:MINUS:  
 PSCALING2:AVALUE 1.000E+00;  
 BVALUE 0.000E+00;:MATH1:MINUS:  
 RESCALING:AVALUE 1.000E+00;  
 BVALUE 0.000E+00;:MATH1:MULTIPLE:  
 PSCALING1:AVALUE 1.000E+00;  
 BVALUE 0.000E+00;:MATH1:MULTIPLE:  
 PSCALING2:AVALUE 1.000E+00;  
 BVALUE 0.000E+00;:MATH1:MULTIPLE:  
 RESCALING:AVALUE 1.000E+00;  
 BVALUE 0.000E+00;:MATH1:  
 OPERATION FILTER,1;PLUS:PSCALING1:  
 AVALUE 1.000E+00;BVALUE .....

**:MATH<x>:DISPlay**

Function Turns ON/OFF the computed waveform or queries the current setting.

Syntax :MATH<x>:DISPlay {<Boolean>}

:MATH<x>:DISPlay?

<x> = 1 to 8

Example :MATH1:DISPLAY ON  
 :MATH1:DISPLAY? -> :MATH1:DISPLAY 1

**:MATH<x>:ECOUNT?**

Function Queries all settings related to the edge count computation.

Syntax :MATH<x>:ECOUNT?

<x> = 1 to 8

Example :MATH1:ECOUNT? ->  
 :MATH1:ECOUNT:HYSTERESIS 1.000E+00;  
 POLARITY RISE

**:MATH<x>:ECOUNT:HYSTERESIS**

Function Sets the hysteresis of the edge detection level of the edge count computation or queries the current setting.

Syntax :MATH<x>:ECOUNT:HYSTERESIS {<NRf>}

:MATH<x>:ECOUNT:HYSTERESIS?

<x> = 1 to 8

<NRf> = 0 to 4 (div)

Example :MATH1:ECOUNT:HYSTERESIS 1  
 :MATH1:ECOUNT:HYSTERESIS? ->  
 :MATH1:ECOUNT:HYSTERESIS 1.000E+00

**:MATH<x>:ECOUNT:POLARITY**

Function Sets the edge detection polarity of the edge count computation or queries the current setting.

Syntax :MATH<x>:ECOUNT:POLARITY {FALL|RISE}

:MATH<x>:ECOUNT:POLARITY?

<x> = 1 to 8

Example :MATH1:ECOUNT:POLARITY RISE  
 :MATH1:ECOUNT:POLARITY? ->  
 :MATH1:ECOUNT:POLARITY RISE

**:MATH<x>:FILTER?**

Function Queries all settings related to the filter.

Syntax :MATH<x>:FILTER?

<x> = 1 to 8

Example :MATH1:FILTER? -> :MATH1:FILTER:DELAY:  
 TIME 0.000E+00;:MATH1:FILTER:IIR:  
 FORDER 2;HIPASS:COFF 10.00E+06;:MATH1:  
 FILTER:IIR:LOWPASS:COFF 10.00E+06;;  
 MATH1:FILTER:MAVG:WEIGHT 2;:MATH1:  
 FILTER:RESCALING:AVALUE 1.000E+00;  
 BVALUE 0.000E+00;:MATH1:FILTER:  
 TYPE THROUGH

**:MATH<x>:FILTER:DELAY?**

Function Queries all settings related to the delay computation.

Syntax :MATH<x>:FILTER:DELAY?

<x> = 1 to 8

Example :MATH1:FILTER:DELAY? ->  
 :MATH1:FILTER:DELAY:TIME 0.000E+00

**:MATH<x>:FILTER:DELAY:TIME**

Function Sets the delay value of the delay computation or queries the current setting.

Syntax :MATH<x>:FILTER:DELAY:TIME {<Time>}

:MATH<x>:FILTER:DELAY:TIME?

<x> = 1 to 8

<Time> = See the DL9000 User's Manual.

Example :MATH1:FILTER:DELAY:TIME 1S  
 :MATH1:FILTER:DELAY:TIME? ->  
 :MATH1:FILTER:DELAY:TIME 1.000E+00

**:MATH<x>:FILTER:IIR?**

Function Queries all settings related to the IIR filter computation.

Syntax :MATH<x>:FILTER:IIR?  
<x> = 1 to 8

Example :MATH1:FILTER:IIR? -> :MATH1:FILTER:  
IIR:FORDER 2;HIPASS:COFF 10.00E+06;;  
MATH1:FILTER:IIR:LOWPASS:COFF 10.00E+00

**:MATH<x>:FILTER:IIR:FORDER  
(Filter Order)**

Function Sets the filter order of the IIR filter computation or queries the current setting.

Syntax :MATH<x>:FILTER:IIR:FORDER {<Nrf>}  
:MATH<x>:FILTER:IIR:FORDER?  
<x> = 1 to 8  
<Nrf> = 1 or 2

Example :MATH1:FILTER:IIR:FORDER 2  
:MATH1:FILTER:IIR:FORDER? ->  
:MATH1:FILTER:IIR:FORDER 2

**:MATH<x>:FILTER:IIR:HIPass?**

Function Queries all settings related to the IIR high pass filter computation.

Syntax :MATH<x>:FILTER:IIR:HIPass?  
<x> = 1 to 8

Example :MATH1:FILTER:IIR:HIPASS? ->  
:MATH1:FILTER:IIR:HIPASS:COFF 10.00E+06

**:MATH<x>:FILTER:IIR:HIPass:COFF**

Function Sets the cutoff frequency of the IIR high pass filter computation or queries the current setting.

Syntax :MATH<x>:FILTER:IIR:HIPass:  
COFF {<Frequency>}  
:MATH<x>:FILTER:IIR:HIPass:COFF?  
<x> = 1 to 8  
<Frequency> = 0.01 to 1 G (Hz)

Example :MATH1:FILTER:IIR:HIPASS:COFF 10MHZ  
:MATH1:FILTER:IIR:HIPASS:COFF? ->  
:MATH1:FILTER:IIR:HIPASS:COFF 10.00E+06

**:MATH<x>:FILTER:IIR:LOWPass?**

Function Queries all settings related to the IIR low pass filter computation.

Syntax :MATH<x>:FILTER:IIR:LOWPass?  
<x> = 1 to 8

Example :MATH1:FILTER:IIR:LOWPASS? ->  
:MATH1:FILTER:IIR:LOWPASS:  
COFF 10.00E+06

**:MATH<x>:FILTER:IIR:LOWPass:COFF**

Function Sets the cutoff frequency of the IIR low pass filter computation or queries the current setting.

Syntax :MATH<x>:FILTER:IIR:LOWPass:C  
OFF {<Frequency>}  
:MATH<x>:FILTER:IIR:LOWPass:COFF?  
<x> = 1 to 8  
<Frequency> = 0.01 to 1 G (Hz)

Example :MATH1:FILTER:IIR:LOWPASS:COFF 10HZ  
:MATH1:FILTER:IIR:LOWPASS:COFF? ->  
:MATH1:FILTER:IIR:LOWPASS:  
COFF 10.00E+00

**:MATH<x>:FILTER:MAVG?**

Function Queries all settings related to the moving average computation.

Syntax :MATH<x>:FILTER:MAVG?  
<x> = 1 to 8

Example :MATH1:FILTER:MAVG? ->  
:MATH1:FILTER:MAVG:WEIGHT 2

**:MATH<x>:FILTER:MAVG:WEIGHT**

Function Sets the weight of the moving average computation or queries the current setting.

Syntax :MATH<x>:FILTER:MAVG:WEIGHT {<Nrf>}  
:MATH<x>:FILTER:MAVG:WEIGHT?  
<x> = 1 to 8  
<Nrf> = 2 to 128 (2<sup>n</sup> steps)

Example :MATH1:FILTER:MAVG:WEIGHT 2  
:MATH1:FILTER:MAVG:WEIGHT? ->  
:MATH1:FILTER:MAVG:WEIGHT 2

**:MATH<x>:FILTER:RESCaling?**

Function Queries all settings related to the rescaling of the filter.

Syntax :MATH<x>:FILTER:RESCaling?  
<x> = 1 to 8

Example :MATH1:FILTER:RESCALING? ->  
:MATH1:FILTER:RESCALING:  
AVALUE 1.000E+00;BVALUE 0.000E+00

**:MATH<x>:FILTER:RESCaling:AVALue**

Function Sets rescaling coefficient A of the filter or queries the current setting.

Syntax :MATH<x>:FILTER:RESCaling:  
AVALue {<Nrf>}  
:MATH<x>:FILTER:RESCaling:AVALue?  
<x> = 1 to 8  
<Nrf> = -1.0000E+31 to 1.0000E+31

Example :MATH1:FILTER:RESCALING:AVALUE 1  
:MATH1:FILTER:RESCALING:AVALUE? ->  
:MATH1:FILTER:RESCALING:  
AVALUE 1.000E+00



## 5.17 MATH Group

### **:MATH<x>:FILTER:RESCaling:BVALue**

Function Sets rescaling offset B of the filter or queries the current setting.

Syntax :MATH<x>:FILTER:RESCaling:  
BVALue {<NRf>}  
:MATH<x>:FILTER:RESCaling:BVALue?  
<x> = 1 to 8  
<NRf> = -1.0000E+31 to 1.0000E+31

Example :MATH1:FILTER:RESCALING:BVALUE 0  
:MATH1:FILTER:RESCALING:BVALUE? ->  
:MATH1:FILTER:RESCALING:  
BVALUE 0.000E+00

### **:MATH<x>:FILTER:TYPE**

Function Sets the filter type or queries the current setting.

Syntax :MATH<x>:FILTER:TYPE {DELAY|IHPass|  
ILPass|MAVG|THROUGH}  
:MATH<x>:FILTER:TYPE?  
<x> = 1 to 8

Example :MATH1:FILTER:TYPE DELAY  
:MATH1:FILTER:TYPE? ->  
:MATH1:FILTER:TYPE DELAY

### **:MATH<x>:INTEgral?**

Function Queries all settings related to the integral computation.

Syntax :MATH<x>:INTEgral?  
<x> = 1 to 8

Example :MATH1:INTEGRAL? -> :MATH1:INTEGRAL:  
PSCALING:AVALUE 1.000E+00;  
BVALUE 0.000E+00;:MATH1:INTEGRAL:  
RESCALING:AVALUE 1.000E+00;  
BVALUE 0.000E+00

### **:MATH<x>:INTEgral:PSCaling?**

Function Queries all settings related to the pre-scaling of the integral computation.

Syntax :MATH<x>:INTEgral:PSCaling?  
<x> = 1 to 8

Example :MATH1:INTEGRAL:PSCALING? ->  
:MATH1:INTEGRAL:PSCALING:  
AVALUE 1.000E+00;BVALUE 0.000E+00

### **:MATH<x>:INTEgral:PSCaling:AVALue**

Function Sets pre-scaling coefficient A of the integral computation or queries the current setting.

Syntax :MATH<x>:INTEgral:PSCaling:  
AVALue {<NRf>}  
:MATH<x>:INTEgral:PSCaling:AVALue?  
<x> = 1 to 8  
<NRf> = -1.0000E+31 to 1.0000E+31

Example :MATH1:INTEGRAL:PSCALING:AVALUE 1  
:MATH1:INTEGRAL:PSCALING:AVALUE? ->  
:MATH1:INTEGRAL:PSCALING:  
AVALUE 1.000E+00

### **:MATH<x>:INTEgral:PSCaling:BVALue**

Function Sets pre-scaling offset B of the integral computation or queries the current setting.

Syntax :MATH<x>:INTEgral:PSCaling:  
BVALue {<NRf>}  
:MATH<x>:INTEgral:PSCaling:BVALue?  
<x> = 1 to 8  
<NRf> = -1.0000E+31 to 1.0000E+31

Example :MATH1:INTEGRAL:PSCALING:BVALUE 0  
:MATH1:INTEGRAL:PSCALING:BVALUE? ->  
:MATH1:INTEGRAL:PSCALING:  
BVALUE 0.000E+00

### **:MATH<x>:INTEgral:RESCaling?**

Function Queries all settings related to the rescaling of the integral computation.

Syntax :MATH<x>:INTEgral:RESCaling?  
<x> = 1 to 8

Example :MATH1:INTEGRAL:RESCALING? ->  
:MATH1:INTEGRAL:RESCALING:  
AVALUE 1.000E+00;BVALUE 0.000E+00

### **:MATH<x>:INTEgral:RESCaling:AVALue**

Function Sets rescaling coefficient A of the integral computation or queries the current setting.

Syntax :MATH<x>:INTEgral:RESCaling:  
AVALue {<NRf>}  
:MATH<x>:INTEgral:RESCaling:AVALue?  
<x> = 1 to 8  
<NRf> = -1.0000E+31 to 1.0000E+31

Example :MATH1:INTEGRAL:RESCALING:AVALUE 1  
:MATH1:INTEGRAL:RESCALING:AVALUE? ->  
:MATH1:INTEGRAL:RESCALING:  
AVALUE 1.000E+00

### **:MATH<x>:INTEgral:RESCaling:BVALue**

Function Sets rescaling offset B of the integral computation or queries the current setting.

Syntax :MATH<x>:INTEgral:RESCaling:  
BVALue {<NRf>}  
:MATH<x>:INTEgral:RESCaling:BVALue?  
<x> = 1 to 8  
<NRf> = -1.0000E+31 to 1.0000E+31

Example :MATH1:INTEGRAL:RESCALING:BVALUE 0  
:MATH1:INTEGRAL:RESCALING:BVALUE? ->  
:MATH1:INTEGRAL:RESCALING:  
BVALUE 0.000E+00

### **:MATH<x>:INVert**

Function Turns ON/OFF the inverted display of the computed waveform or queries the current setting.

Syntax :MATH<x>:INVert {<Boolean>}  
:MATH<x>:INVert?  
<x> = 1 to 8

Example :MATH1:INVERT ON  
:MATH1:INVERT? -> :MATH1:INVERT 1

**:MATH<x>:IPOINT?****(Initial Point)**

Function Queries all settings related to the computation reference point.

Syntax :MATH<x>:IPOINT?  
<x> = 1 to 8

Example :MATH1:IPOINT? ->  
:MATH1:IPOINT:POSITION 0.000E+00

**:MATH<x>:IPOINT:JUMP**

Function Moves the computation reference point to the specified position.

Syntax :MATH<x>:IPOINT:JUMP {<NRf>|TRIGger|Z1|Z2}  
<x> = 1 to 8  
<NRf> = -5 or 0 (div)

Example :MATH1:IPOINT:JUMP TRIGGER

**:MATH<x>:IPOINT:POSITION**

Function Sets the computation reference point or queries the current setting.

Syntax :MATH<x>:IPOINT:POSITION {<NRf>}  
:MATH<x>:IPOINT:POSITION?  
<x> = 1 to 8  
<NRf> = -5 to 5 (div)

Example :MATH1:IPOINT:POSITION 0  
:MATH1:IPOINT:POSITION? ->  
:MATH1:IPOINT:POSITION 0.000E+00

Description This command is valid when  
:MATH<x>:OPERation INTEGRal.

**:MATH<x>:LABEL?**

Function Queries all settings related to the label of the computed waveform.

Syntax :MATH<x>:LABEL?  
<x> = 1 to 8

Example :MATH1:LABEL? ->  
:MATH1:LABEL:DEFINE "MATH1";MODE 0

**:MATH<x>:LABEL[:DEFINE]**

Function Sets the label of the computed waveform or queries the current setting.

Syntax :MATH<x>:LABEL[:DEFINE] {<String>}  
:MATH<x>:LABEL[:DEFINE]?  
<x> = 1 to 8  
<String> = Up to 8 characters

Example :MATH1:LABEL:DEFINE "MATH1"  
:MATH1:LABEL:DEFINE? ->  
:MATH1:LABEL:DEFINE "MATH1"

**:MATH<x>:LABEL:MODE**

Function Turns ON/OFF the label display of the computed waveform or queries the current setting.

Syntax :MATH<x>:LABEL:MODE {<Boolean>}  
:MATH<x>:LABEL:MODE?  
<x> = 1 to 8

**:MATH<x>:MINUS?**

Function Queries all settings related to the subtraction.

Syntax :MATH<x>:MINUS?  
<x> = 1 to 8

Example :MATH1:MINUS? -> :MATH1:MINUS:  
PSCALING1:AVALUE 1.000E+00;  
BVALUE 0.000E+00;:MATH1:MINUS:  
PSCALING2:AVALUE 1.000E+00;  
BVALUE 0.000E+00;:MATH1:MINUS:  
RESCALING:AVALUE 1.000E+00;  
BVALUE 0.000E+00+00

**:MATH<x>:MINUS:PSCALING<x>?**

Function Queries all settings related to the pre-scaling of the subtraction.

Syntax :MATH<x>:MINUS:PSCALING<x>?  
<x> of MATH<x> = 1 to 8  
<x> of PSCALING<x> = 1 or 2

Example :MATH1:MINUS:PSCALING1? ->  
:MATH1:MINUS:PSCALING1:  
AVALUE 1.000E+00;BVALUE 0.000E+00

**:MATH<x>:MINUS:PSCALING<x>:AVALUE**

Function Sets pre-scaling coefficient A of the subtraction or queries the current setting.

Syntax :MATH<x>:MINUS:PSCALING<x>:  
AVALUE {<NRf>}  
:MATH<x>:MINUS:PSCALING<x>:AVALUE?  
<x> of MATH<x> = 1 to 8  
<x> of PSCALING<x> = 1 or 2  
<NRf> = -1.0000E+31 to 1.0000E+31

Example :MATH1:MINUS:PSCALING1:AVALUE 1  
:MATH1:MINUS:PSCALING1:AVALUE? ->  
:MATH1:MINUS:PSCALING1:AVALUE 1.000E+00

**:MATH<x>:MINUS:PSCALING<x>:BVALUE**

Function Sets pre-scaling offset B of the subtraction or queries the current setting.

Syntax :MATH<x>:MINUS:PSCALING<x>:  
BVALUE {<NRf>}  
:MATH<x>:MINUS:PSCALING<x>:BVALUE?  
<x> of MATH<x> = 1 to 8  
<x> of PSCALING<x> = 1 or 2  
<NRf> = -1.0000E+31 to 1.0000E+31

Example :MATH1:MINUS:PSCALING1:BVALUE 0  
:MATH1:MINUS:PSCALING1:BVALUE? ->  
:MATH1:MINUS:PSCALING1:BVALUE 0.000E+00

## 5.17 MATH Group

### **:MATH<x>:MINus:RESCaling?**

Function Queries all settings related to the rescaling of the subtraction.

Syntax :MATH<x>:MINus:RESCaling?  
<x> = 1 to 8

Example :MATH1:MINUS:RESCALING? ->  
:MATH1:MINUS:RESCALING:  
AVALUE 1.000E+00;BVALUE 0.000E+00

### **:MATH<x>:MINus:RESCaling:AVALue**

Function Sets rescaling coefficient A of the subtraction or queries the current setting.

Syntax :MATH<x>:MINus:RESCaling:AVALue {<Nrf>}  
:MATH<x>:MINus:RESCaling:AVALue?  
<x> = 1 to 8  
<Nrf> = -1.0000E+31 to 1.0000E+31

Example :MATH1:MINUS:RESCALING:AVALUE 1  
:MATH1:MINUS:RESCALING:AVALUE? ->  
:MATH1:MINUS:RESCALING:AVALUE 1.000E+00

### **:MATH<x>:MINus:RESCaling:BVALue**

Function Sets rescaling offset B of the subtraction or queries the current setting.

Syntax :MATH<x>:MINus:RESCaling:BVALue {<Nrf>}  
:MATH<x>:MINus:RESCaling:BVALue?  
<x> = 1 to 8  
<Nrf> = -1.0000E+31 to 1.0000E+31

Example :MATH1:MINUS:RESCALING:BVALUE 0  
:MATH1:MINUS:RESCALING:BVALUE? ->  
:MATH1:MINUS:RESCALING:BVALUE 0.000E+00

### **:MATH<x>:MULTiple?**

Function Queries all settings related to the multiplication.

Syntax :MATH<x>:MULTiple?  
<x> = 1 to 8

Example :MATH1:MULTIPLE? -> :MATH1:MULTIPLE:  
PSCALING1:AVALUE 1.000E+00;  
BVALUE 0.000E+00;:MATH1:MULTIPLE:  
PSCALING2:AVALUE 1.000E+00;  
BVALUE 0.000E+00;:MATH1:MULTIPLE:  
RESCALING:AVALUE 1.000E+00;  
BVALUE 0.000E+00

### **:MATH<x>:MULTiple:PSCaling<x>?**

Function Queries all settings related to the pre-scaling of the multiplication.

Syntax :MATH<x>:MULTiple:PSCaling<x>?  
<x> of MATH<x> = 1 to 8  
<x> of PSCaling<x> = 1 or 2

Example :MATH1:MULTIPLE:PSCALING1? ->  
:MATH1:MULTIPLE:PSCALING1:  
AVALUE 1.000E+00;BVALUE 0.000E+00

### **:MATH<x>:MULTiple:PSCaling<x>:AVALue**

Function Sets pre-scaling coefficient A of the multiplication or queries the current setting.

Syntax :MATH<x>:MULTiple:PSCaling<x>:  
AVALue {<Nrf>}  
:MATH<x>:MULTiple:PSCaling<x>:AVALue?  
<x> of MATH<x> = 1 to 8  
<x> of PSCaling<x> = 1 or 2  
<Nrf> = -1.0000E+31 to 1.0000E+31

Example :MATH1:MULTIPLE:PSCALING1:AVALUE 1  
:MATH1:MULTIPLE:PSCALING1:AVALUE? ->  
:MATH1:MULTIPLE:PSCALING1:  
AVALUE 1.000E+00

### **:MATH<x>:MULTiple:PSCaling<x>:BVALue**

Function Sets pre-scaling offset B of the multiplication or queries the current setting.

Syntax :MATH<x>:MULTiple:PSCaling<x>:  
BVALue {<Nrf>}  
:MATH<x>:MULTiple:PSCaling<x>:BVALue?  
<x> of MATH<x> = 1 to 8  
<x> of PSCaling<x> = 1 or 2  
<Nrf> = -1.0000E+31 to 1.0000E+31

Example :MATH1:MULTIPLE:PSCALING1:BVALUE 0  
:MATH1:MULTIPLE:PSCALING1:BVALUE? ->  
:MATH1:MULTIPLE:PSCALING1:  
BVALUE 0.000E+00

### **:MATH<x>:MULTiple:RESCaling?**

Function Queries all settings related to the rescaling of the multiplication.

Syntax :MATH<x>:MULTiple:RESCaling?  
<x> = 1 to 8

Example :MATH1:MULTIPLE:RESCALING? ->  
:MATH1:MULTIPLE:RESCALING:  
AVALUE 1.000E+00;BVALUE 0.000E+00

### **:MATH<x>:MULTiple:RESCaling:AVALue**

Function Sets rescaling coefficient A of the multiplication or queries the current setting.

Syntax :MATH<x>:MULTiple:RESCaling:  
AVALue {<Nrf>}  
:MATH<x>:MULTiple:RESCaling:AVALue?  
<x> = 1 to 8  
<Nrf> = -1.0000E+31 to 1.0000E+31

Example :MATH1:MULTIPLE:RESCALING:AVALUE 1  
:MATH1:MULTIPLE:RESCALING:AVALUE? ->  
:MATH1:MULTIPLE:RESCALING:  
AVALUE 1.000E+00

**:MATH<x>:MULTiple:RESCaling:BVALue**

Function Sets rescaling offset B of the multiplication or queries the current setting.

Syntax :MATH<x>:MULTiple:RESCaling:  
BVALue {<NRf>}  
:MATH<x>:MULTiple:RESCaling:BVALue?  
<x> = 1 to 8  
<NRf> = -1.0000E+31 to 1.0000E+31

Example :MATH1:MULTIPLE:RESCALING:BVALUE 0  
:MATH1:MULTIPLE:RESCALING:BVALUE? ->  
:MATH1:MULTIPLE:RESCALING:  
BVALUE 0.000E+00

**:MATH<x>:OPERation**

Function Sets the operator or queries the current setting.

Syntax :MATH<x>:OPERation {(ECount|FILTer|  
INTEgral|MINus|MULTiple|PLUS|RCOUNT),  
<NRf>,<NRf>}  
:MATH<x>:OPERation?  
<x> = 1 to 8  
<NRf> = 1 to 4

Example :MATH1:OPERATION FILTER,1  
:MATH1:OPERATION? ->  
:MATH1:OPERATION FILTER,1

Description For unary operators  
(ECount|FILTer|INTEgral), select the target  
waveform using the first <NRf>.  
For binary operators  
(MINus|MULTiple|PLUS|RCOUNT), select the  
target waveform of the first term using the first <NRf>  
and the target waveform of the second term using  
the second <NRf>.

**:MATH<x>:PLUS?**

Function Queries all settings related to the addition.

Syntax :MATH<x>:PLUS?  
<x> = 1 to 8

Example :MATH1:PLUS? -> :MATH1:PLUS:  
PSCALING1:AVALUE 1.000E+00;  
BVALUE 0.000E+00;:MATH1:PLUS:PSCALING2:  
AVALUE 1.000E+00;BVALUE 0.000E+00;:  
MATH1:PLUS:RESCALING:AVALUE 1.000E+00;  
BVALUE 0.000E+00

**:MATH<x>:PLUS:PSCaling<x>?**

Function Queries all settings related to the pre-scaling of the addition.

Syntax :MATH<x>:PLUS:PSCaling<x>?  
<x> of MATH<x> = 1 to 8  
<x> of PSCaling<x> = 1 or 2

Example :MATH1:PLUS:PSCALING1? ->  
:MATH1:PLUS:PSCALING1:  
AVALUE 1.000E+00;BVALUE 0.000E+00

**:MATH<x>:PLUS:PSCaling<x>:AVALue**

Function Sets pre-scaling coefficient A of the addition or queries the current setting.

Syntax :MATH<x>:PLUS:PSCaling<x>:  
AVALue {<NRf>}  
:MATH<x>:PLUS:PSCaling<x>:AVALue?  
<x> of MATH<x> = 1 to 8  
<x> of PSCaling<x> = 1 or 2  
<NRf> = -1.0000E+31 to 1.0000E+31

Example :MATH1:PLUS:PSCALING1:AVALUE 1  
:MATH1:PLUS:PSCALING1:AVALUE? ->  
:MATH1:PLUS:PSCALING1:AVALUE 1.000E+00

**:MATH<x>:PLUS:PSCaling<x>:BVALue**

Function Sets pre-scaling offset B of the addition or queries the current setting.

Syntax :MATH<x>:PLUS:PSCaling<x>:  
BVALue {<NRf>}  
:MATH<x>:PLUS:PSCaling<x>:BVALue?  
<x> of MATH<x> = 1 to 8  
<x> of PSCaling<x> = 1 or 2  
<NRf> = -1.0000E+31 to 1.0000E+31

Example :MATH1:PLUS:PSCALING1:BVALUE 0  
:MATH1:PLUS:PSCALING1:BVALUE? ->  
:MATH1:PLUS:PSCALING1:BVALUE 0.000E+00

**:MATH<x>:PLUS:RESCaling?**

Function Queries all settings related to the rescaling of the addition.

Syntax :MATH<x>:PLUS:RESCaling?  
<x> = 1 to 8

Example :MATH1:PLUS:RESCALING? ->  
:MATH1:PLUS:RESCALING:AVALUE 1.000E+00;  
BVALUE 0.000E+00

**:MATH<x>:PLUS:RESCaling:AVALue**

Function Sets rescaling coefficient A of the addition or queries the current setting.

Syntax :MATH<x>:PLUS:RESCaling:AVALue {<NRf>}  
:MATH<x>:PLUS:RESCaling:AVALue?  
<x> = 1 to 8  
<NRf> = -1.0000E+31 to 1.0000E+31

Example :MATH1:PLUS:RESCALING:AVALUE 1  
:MATH1:PLUS:RESCALING:AVALUE? ->  
:MATH1:PLUS:RESCALING:AVALUE 1.000E+00

**:MATH<x>:PLUS:RESCaling:BVALue**

Function Sets rescaling offset B of the addition or queries the current setting.

Syntax :MATH<x>:PLUS:RESCaling:BVALue {<NRf>}  
:MATH<x>:PLUS:RESCaling:BVALue?  
<x> = 1 to 8  
<NRf> = -1.0000E+31 to 1.0000E+31

Example :MATH1:PLUS:RESCALING:BVALUE 0  
:MATH1:PLUS:RESCALING:BVALUE? ->  
:MATH1:PLUS:RESCALING:BVALUE 0.000E+00

## 5.17 MATH Group

### **:MATH<x>:POSITION**

Function Sets the vertical position of the computed waveform or queries the current setting.

Syntax :MATH<x>:POSITION {<NRF>}  
:MATH<x>:POSITION?  
<x> = 1 to 8

<NRF> = -4 to 4 (div)

Example :MATH1:POSITION 0  
:MATH1:POSITION? ->  
:MATH1:POSITION 0.000E+00

### **:MATH<x>:SCALE?**

Function Queries all settings related to scaling.

Syntax :MATH<x>:SCALE?  
<x> = 1 to 8

Example :MATH1:SCALE? -> :MATH1:SCALE:  
CENTER 1.000E+00;MODE AUTO;  
SENSITIVITY 1.000E+00

### **:MATH<x>:SCALE:CENTER**

Function Sets the offset of the computed waveform or queries the current setting.

Syntax :MATH<x>:SCALE:CENTER {<NRF>|<Voltage>|  
<Current>}  
:MATH<x>:SCALE:CENTER?  
<x> = 1 to 8

<NRF>, <Voltage>, and <Current> = See the DL9000 User's Manual.

Example :MATH1:SCALE:CENTER 1  
:MATH1:SCALE:CENTER? ->  
:MATH1:SCALE:CENTER 1.000E+00

### **:MATH<x>:SCALE:MODE**

Function Sets the scaling mode or queries the current setting.

Syntax :MATH<x>:SCALE:MODE {AUTO|MANual}  
:MATH<x>:SCALE:MODE?  
<x> = 1 to 8

Example :MATH1:SCALE:MODE AUTO  
:MATH1:SCALE:MODE? ->  
:MATH1:SCALE:MODE AUTO

### **:MATH<x>:SCALE:SENSitivity**

Function Sets the vertical sensitivity of the computed waveform or queries the current setting.

Syntax :MATH<x>:SCALE:SENSitivity {<NRF>|  
<Voltage>|<Current>}  
:MATH<x>:SCALE:SENSitivity?  
<x> = 1 to 8

<NRF>, <Voltage>, and <Current> = See the DL9000 User's Manual.

Example :MATH1:SCALE:SENSITIVITY 1  
:MATH1:SCALE:SENSITIVITY? ->  
:MATH1:SCALE:SENSITIVITY 1.000E+00

### **:MATH<x>:SELEct**

Function Sets the display option or queries the current setting.

Syntax :MATH<x>:SELEct {INPut|MATH|REFErence}  
:MATH<x>:SELEct?  
<x> = 1 to 8

Example :MATH1:SELECT INPUT  
:MATH1:SELECT? -> :MATH1:SELECT INPUT

### **:MATH<x>:SVALue (Scale VALUE)**

Function Turns ON/OFF the scale value display or queries the current setting.

Syntax :MATH<x>:SVALue {<Boolean>}  
:MATH<x>:SVALue?  
<x> = 1 to 8

Example :MATH1:SVALUE ON  
:MATH1:SVALUE? -> MATH1:SVALUE 1

### **:MATH<x>:THReshold<x>**

Function Sets the edge detection level of the count computation or queries the current setting.

Syntax :MATH<x>:THReshold<x> {<NRF>|  
<Voltage>|<Current>}  
:MATH<x>:THReshold<x>?  
<x> of MATH<x> = 1 to 8  
<x> of THReshold<x> = 1 or 2  
<NRF>, <Voltage>, and <Current> = See the DL9000 User's Manual.

Example :MATH1:THRESHOLD1 1  
:MATH1:THRESHOLD1? ->  
:MATH1:THRESHOLD1 1.000E+00

Description THReshold2 is valid when the operation is {RCount}.

### **:MATH<x>:UNIT?**

Function Queries all settings related to the computation unit.

Syntax :MATH<x>:UNIT?  
<x> = 1 to 8

Example :MATH1:UNIT? ->  
:MATH1:UNIT:DEFINE "EU";MODE AUTO

### **:MATH<x>:UNIT[:DEFine]**

Function Sets the computation unit or queries the current setting.

Syntax :MATH<x>:UNIT[:DEFine] {<String>}  
:MATH<x>:UNIT[:DEFine]?  
<x> = 1 to 8  
<String> = Up to 4 characters

Example :MATH1:UNIT:DEFINE "EU"  
:MATH1:UNIT:DEFINE? ->  
:MATH1:UNIT:DEFINE "EU"

**:MATH<x>:UNIT:MODE**

**Function** Sets the automatic/manual addition of the computation unit or queries the current setting.

**Syntax** :MATH<x>:UNIT:MODE {AUTO|USERdefine}  
:MATH<x>:UNIT:MODE?  
<x> = 1 to 8

**Example** :MATH1:UNIT:MODE AUTO  
:MATH1:UNIT:MODE? ->  
:MATH1:UNIT:MODE AUTO

## 5.18 MEASure Group

**:MEASure?**

Function Queries all settings related to the automated measurement of waveform parameters.

Syntax :MEASure?

Example :MEASURE? ->

```
:MEASURE:CALCULATION:DEFINE1 "MAX(C1)";
DEFINE2 "MIN(C2)";DEFINE3 "HIGH(C3)";
DEFINE4 "LOW(C4)";STATE1 0;STATE2 0;
STATE3 0;STATE4 0;:MEASURE:CONTINUOUS:
COUNT 0;:MEASURE:CYCLE:TRACE 1;:
MEASURE:DISPLAY 1;MODE BASIC;THRESHOLD:
TRACE1:AUTO PTOPEAK;LHYSTERESIS:
HYSTERESIS 1.000E+00;LEVEL 0.000E+00;:
MEASURE:THRESHOLD:TRACE1:MODE AUTO;
ULOWER:RANGE 2.000E+00,1.000E+00;:
MEASURE:THRESHOLD:TRACE2:AUTO PTOPEAK;
LHYSTERESIS:HYSTERESIS 1.000E+00;
LEVEL 0.000E+00;:MEASURE:THRESHOLD:
TRACE2:MODE AUTO;ULOWER:
RANGE 2.000E+00,1.000E+00;:MEASURE:
THRESHOLD:TRACE3:AUTO PTOPEAK;
LHYSTERESIS:HYSTERESIS 1.000E+00;
LEVEL 0.000E+00;:MEASURE:THRESHOLD:
TRACE3:MODE AUTO;ULOWER:
RANGE 2.000E+00,1.000E+00;:MEASURE:
THRESHOLD:TRACE5:AUTO PTOPEAK;
LHYSTERESIS:HYSTERESIS 1.000E+00;
LEVEL 0.000E+00;:MEASURE:THRESHOLD:
TRACE5:MODE AUTO;ULOWER:RANGE .....
```

**:MEASure:CALCulation?**

Function Queries all settings related to calculation items.

Syntax :MEASure:CALCulation?

Example :MEASURE:CALCULATION? ->

```
:MEASURE:CALCULATION:DEFINE1 "MAX(C1)";
DEFINE2 "MIN(C2)";DEFINE3 "HIGH(C3)";
DEFINE4 "LOW(C4)";STATE1 0;STATE2 0;
STATE3 0;STATE4 0
```

**:MEASure:CALCulation:ALL**

Function Turns ON/OFF all calculation items.

Syntax :MEASure:CALCulation:ALL {<Boolean>}

Example :MEASURE:CALCULATION:ALL ON

**:MEASure:CALCulation:COUNT<x>?**

Function Queries the statistical processing count of the calculation item.

Syntax :MEASure:CALCulation:COUNT<x>?  
<x> = 1 to 4

Example :MEASURE:CALCULATION:COUNT1? ->  
:MEASURE:CALCULATION:COUNT1 1

**:MEASure:CALCulation:DEFine<x>**

Function Sets the equation of the calculation item or queries the current setting.

Syntax :MEASure:CALCulation:DEFine<x>  
{<String>}  
:MEASure:CALCulation:DEFine<x>?  
<x> = 1 to 4  
<String> = Up to 128 characters

Example :MEASURE:CALCULATION:DEFINE1 "MAX(C1)"  
:MEASURE:CALCULATION:DEFINE1? ->  
:MEASURE:CALCULATION:DEFINE1 "MAX(C1)"

**:MEASure:CALCulation:{MAXimum<x>|  
MEAN<x>|MINimum<x>|SDEVIation<x>}?**

Function Queries the statistical value of the calculation item.

Syntax :MEASure:CALCulation:{MAXimum<x>|  
MEAN<x>|MINimum<x>|SDEVIation<x>}?  
<x> of MAXimum<x> = 1 to 4  
<x> of MEAN<x> = 1 to 4  
<x> of MINimum<x> = 1 to 4  
<x> of SDEVIation<x> = 1 to 4

Example (The following is an example for the maximum value.)  
:MEASURE:CALCULATION:MAXIMUM1? ->  
:MEASURE:CALCULATION:MAXIMUM1 1.000E+00

**:MEASure:CALCulation:STATE<x>**

Function Turns ON/OFF the calculation item or queries the current setting.

Syntax :MEASure:CALCulation:STATE<x>  
{<Boolean>}  
:MEASure:CALCulation:STATE<x>?  
<x> = 1 to 4

Example :MEASURE:CALCULATION:STATE1 ON  
:MEASURE:CALCULATION:STATE1? ->  
:MEASURE:CALCULATION:STATE1 1

**:MEASure:CALCulation:VALue<x>?**

Function Queries the automated measured value of the calculation item.

Syntax :MEASure:CALCulation:VALue<x>? {<NRf>}  
 <x> = 1 to 4  
 <NRf> = 1 to 100000

Example :MEASURE:CALCULATION:VALUE1? ->  
 :MEASURE:CALCULATION:VALUE1 1.000E+00

Description • If the measurement is not possible, "NAN (Not A Number)" is returned.  
 • <NRf> indicates the nth automated measured value in the past.  
 In the case of cycle statistical processing, specify the <NRf><sup>th</sup> cycle from the left of the screen.  
 To specify the oldest automated measured value, specify 1.  
 If <NRf> is omitted, the latest automated measured value is specified.  
 If the value corresponding to the relevant count is not present, "NAN" (Not A Number)" is returned.

**:MEASure:CONTinuous?**

Function Queries all settings related to the continuous statistical processing.

Syntax :MEASure:CONTinuous?

Example :MEASURE:CONTINUOUS? ->  
 :MEASURE:CONTINUOUS:COUNT 0

**:MEASure:CONTinuous:COUNT**

Function Sets the continuous statistical processing count or queries the current setting.

Syntax :MEASure:CONTinuous:COUNT {<NRf>}  
 :MEASure:CONTinuous:COUNT?  
 <NRf> = 0 to 100000

Example :MEASURE:CONTINUOUS:COUNT 10  
 :MEASURE:CONTINUOUS:COUNT? ->  
 :MEASURE:CONTINUOUS:COUNT 10

Description When <NRf> = 0, the maximum count that is possible under the current settings is automatically set.

**:MEASure:CONTinuous:REStArt**

Function Restarts the continuous statistical processing.

Syntax :MEASure:CONTinuous:REStArt

Example :MEASURE:CONTINUOUS:RESTART

Description Clears the previous statistical data.

**:MEASure:CYCLE?**

Function Queries all settings related to the cycle statistical processing.

Syntax :MEASure:CYCLE?

Example :MEASURE:CYCLE? ->  
 :MEASURE:CYCLE:TRACE 1

**:MEASure:CYCLE:ABORT**

Function Aborts the execution of the cycle statistical processing.

Syntax :MEASure:CYCLE:ABORT

Example :MEASURE:CYCLE:ABORT

**:MEASure:CYCLE:EXECute**

Function Executes the cycle statistical processing. This is an overlap command.

Syntax :MEASure:CYCLE:EXECute

Example :MEASURE:CYCLE:EXECUTE

Description Continues the operation without clearing the previous statistical data.

**:MEASure:CYCLE:TRACe**

Function Sets the cycle source trace of the continuous statistical processing count or queries the current setting.

Syntax :MEASure:CYCLE:TRACe {<NRf>}  
 :MEASure:CYCLE:TRACe?  
 <NRf> = 1 to 8

Example :MEASURE:CYCLE:TRACE 1  
 :MEASURE:CYCLE:TRACE? ->  
 :MEASURE:CYCLE:TRACE 1

**:MEASure:DISPlay**

Function Turns ON/OFF the display of the automated measurement of waveform parameters or queries the current setting.

Syntax :MEASure:DISPlay {<Boolean>}  
 :MEASure:DISPlay?

Example :MEASURE:DISPLAY ON  
 :MEASURE:DISPLAY? -> :MEASURE:DISPLAY 1

**:MEASure:HISTory:ABORT**

Function Aborts the execution of the statistical processing of the history data.

Syntax :MEASure:HISTory:ABORT

Example :MEASURE:HISTORY:ABORT

**:MEASure:HISTory:EXECute**

Function Executes the statistical processing of the history data. This is an overlap command.

Syntax :MEASure:HISTory:EXECute

Example :MEASURE:HISTORY:EXECUTE

**:MEASure:MODE**

Function Sets the mode of the automated measurement of waveform parameters or queries the current setting.

Syntax :MEASure:MODE {BASic|CONTinuous|CYCLE|HISTory}  
 :MEASure:MODE?

Example :MEASURE:MODE BASIC  
 :MEASURE:MODE? -> :MEASURE:MODE BASIC



## 5.18 MEASure Group

### **:MEASure:THReshold?**

**Function** Queries all settings related to the threshold levels of the automated measurement of waveform parameters.

**Syntax** :MEASure:THReshold?

**Example** :MEASURE:THRESHOLD? ->  
:MEASURE:THRESHOLD:TRACE1:AUTO PTOPEAK;  
LHYSTERESIS:HYSTERESIS 1.000E+00;  
LEVEL 0.000E+00;:MEASURE:THRESHOLD:  
TRACE1:MODE AUTO;ULOWER:  
RANGE 2.000E+00,1.000E+00;:MEASURE:  
THRESHOLD:TRACE2:AUTO PTOPEAK;  
LHYSTERESIS:HYSTERESIS 1.000E+00;  
LEVEL 0.000E+00;:MEASURE:THRESHOLD:  
TRACE2:MODE AUTO;ULOWER:  
RANGE 2.000E+00,1.000E+00;:MEASURE:  
THRESHOLD:TRACE3:AUTO PTOPEAK;  
LHYSTERESIS:HYSTERESIS 1.000E+00;  
LEVEL 0.000E+00;:MEASURE:THRESHOLD:  
TRACE3:MODE AUTO;ULOWER:  
RANGE 2.000E+00,1.000E+00;:MEASURE:  
THRESHOLD:TRACE4:AUTO PTOPEAK;  
LHYSTERESIS:HYSTERESIS 1.000E+00;  
LEVEL 0.000E+00;:MEASURE:THRESHOLD:  
TRACE4:MODE AUTO;ULOWER:  
RANGE 2.000E+00,1.000E+00;:MEASURE:  
THRESHOLD:TRACE5:AUTO PTOPEAK;  
LHYSTERESIS:HYSTERESIS 1.000E+00;  
LEVEL 0.000E+00;:MEASURE:THRESHOLD:  
TRACE5:MODE AUTO;ULOWER:  
RANGE 2.000E+00,1.000E+00;:MEASURE:  
THRESHOLD:TRACE6:AUTO PTOPEAK;  
LHYSTERESIS:HYSTERESIS 1.000E+00;  
LEVEL 0.000E+00;:MEASURE:THRESHOLD:  
TRACE6:MODE AUTO;ULOWER:RANGE .....

**Description** This command is valid when the <Parameter> of :MEASure:TRACe<x>:AREA<x>:<Parameter> is not RISE or FALL.

### **:MEASure:THReshold:TRACe<x>?**

**Function** Queries the threshold levels of the trace.

**Syntax** :MEASure:THReshold:TRACe<x>?  
<x> = 1 to 8

**Example** :MEASURE:THRESHOLD:TRACE1? ->  
:MEASURE:THRESHOLD:TRACE1:AUTO PTOPEAK;  
LHYSTERESIS:HYSTERESIS 1.000E+00;  
LEVEL 0.000E+00;:MEASURE:THRESHOLD:  
TRACE1:MODE AUTO;ULOWER:  
RANGE 1.000E+00,2.000E+00

**Description** This command is valid when the <Parameter> of :MEASure:TRACe<x>:AREA<x>:<Parameter> is not RISE or FALL.

### **:MEASure:THReshold:TRACe<x>:AUTO**

**Function** Sets the detection mode when the auto setting of the threshold level is enabled or queries the current setting.

**Syntax** :MEASure:THReshold:TRACe<x>:AUTO {HLOW|PTOPeak}  
:MEASure:THReshold:TRACe<x>:AUTO?  
<x> = 1 to 8

**Example** :MEASURE:THRESHOLD:TRACE1:AUTO PTOPEAK  
:MEASURE:THRESHOLD:TRACE1:AUTO? ->  
:MEASURE:THRESHOLD:TRACE1:AUTO PTOPEAK

**Description** This command is valid when the <Parameter> of :MEASure:TRACe<x>:AREA<x>:<Parameter> is not RISE or FALL.

### **:MEASure:THReshold:TRACe<x>:**

#### **LHYSTeresis?**

**Function** Queries all settings related to the level and hysteresis of the threshold level.

**Syntax** :MEASure:THReshold:TRACe<x>:  
LHYSTeresis?  
<x> = 1 to 8

**Example** :MEASURE:THRESHOLD:TRACE1:LHYSTERESIS?  
-> :MEASURE:THRESHOLD:TRACE1:  
LHYSTERESIS:HYSTERESIS 1.000E+00;  
LEVEL 0.000E+00

**Description** This command is valid when the <Parameter> of :MEASure:TRACe<x>:AREA<x>:<Parameter> is not RISE or FALL.

### **:MEASure:THReshold:TRACe<x>:**

#### **LHYSTeresis:HYSTeresis**

**Function** Sets the hysteresis of the threshold level or queries the current setting.

**Syntax** :MEASure:THReshold:TRACe<x>:  
LHYSTeresis:HYSTeresis {<NRf>}  
:MEASure:THReshold:TRACe<x>:  
LHYSTeresis:HYSTeresis?  
<x> = 1 to 8  
<NRf> = 0 to 4 (div)

**Example** :MEASURE:THRESHOLD:TRACE1:LHYSTERESIS:  
HYSTERESIS 1  
:MEASURE:THRESHOLD:TRACE1:LHYSTERESIS:  
HYSTERESIS? ->  
:MEASURE:THRESHOLD:TRACE1:  
LHYSTERESIS:HYSTERESIS 1.000E+00

**Description** This command is valid when the <Parameter> of :MEASure:TRACe<x>:AREA<x>:<Parameter> is not RISE or FALL.

**:MEASure:THReshold:TRACe<x>:****LHYSteresis:LEVel**

Function Sets the level of the threshold level or queries the current setting.

Syntax :MEASure:THReshold:TRACe<x>:  
LHYSteresis:LEVel  
{<NRf>|<Voltage>|<Current>}  
:MEASure:THReshold:TRACe<x>:  
LHYSteresis:LEVel?  
<x> = 1 to 8  
<NRf>, <Voltage>, and <Current> = See the DL9000  
User's Manual.

Example :MEASURE:THRESHOLD:TRACE1:LHYSTERESIS:  
LEVEL 1  
:MEASURE:THRESHOLD:TRACE1:LHYSTERESIS:  
LEVEL? -> :MEASURE:THRESHOLD:TRACE1:  
LHYSTERESIS:LEVEL 1.000E+00

Description This command is valid when the <Parameter> of  
:MEASure:TRACe<x>:AREA<x>:<Parameter> is not  
RISE or FALL.

**:MEASure:THReshold:TRACe<x>:MODE**

Function Sets the setup mode of the threshold level or queries  
the current setting.

Syntax :MEASure:THReshold:TRACe<x>:MODE {AUTO|  
LHYSteresis|ULOWer}  
:MEASure:THReshold:TRACe<x>:MODE?  
<x> = 1 to 8

Example :MEASURE:THRESHOLD:TRACE1:  
MODE LHYSTERESIS  
:MEASURE:THRESHOLD:TRACE1:MODE? ->  
:MEASURE:THRESHOLD:TRACE1:  
MODE LHYSTERESIS

Description This command is valid when the <Parameter> of  
:MEASure:TRACe<x>:AREA<x>:<Parameter> is not  
RISE or FALL.

**:MEASure:THReshold:TRACe<x>:ULOWer?**

Function Queries all settings related to the upper and lower  
limits of the threshold level.

Syntax :MEASure:THReshold:TRACe<x>:ULOWer?  
<x> = 1 to 8

Example :MEASURE:THRESHOLD:TRACE1:ULOWER? ->  
:MEASURE:THRESHOLD:TRACE1:ULOWER:  
RANGE 2.000E+00,1.000E+00

Description This command is valid when the <Parameter> of  
:MEASure:TRACe<x>:AREA<x>:<Parameter> is not  
RISE or FALL.

**:MEASure:THReshold:TRACe<x>:ULOWer:****RANGE**

Function Sets the upper and lower limits of the threshold level  
or queries the current setting.

Syntax :MEASure:THReshold:TRACe<x>:ULOWer:  
RANGE {( <NRf>, <NRf> ) |  
( <Voltage>, <Voltage> ) |  
( <Current>, <Current> ) }  
:MEASure:THReshold:TRACe<x>:ULOWer:  
RANGE?  
<x> = 1 to 8  
<NRf>, <Voltage>, and <Current> = See the DL9000  
User's Manual.

Example :MEASURE:THRESHOLD:TRACE1:ULOWER:  
RANGE 1,2  
:MEASURE:THRESHOLD:TRACE1:ULOWER:RANGE?  
-> :MEASURE:THRESHOLD:TRACE1:ULOWER:  
RANGE 2.000E+00,1.000E+00

Description This command is valid when the <Parameter> of  
:MEASure:TRACe<x>:AREA<x>:<Parameter> is not  
RISE or FALL.

**:MEASure:TRACe<x>?**

Function Queries all settings related to the trace.

Syntax :MEASure:TRACe<x>?  
<x> = 1 to 8

Example :MEASURE:TRACE1? ->  
:MEASURE:TRACE1:AREA1:BURST:STATE 1;;  
:MEASURE:TRACE1:AREA1:CMEAN:STATE 0;;  
:MEASURE:TRACE1:AREA1:COUNT:STATE 0;;  
:MEASURE:TRACE1:AREA1:CRMS:STATE 0;;  
:MEASURE:TRACE1:AREA1:CSDEVIATION:  
STATE 0;;:MEASURE:TRACE1:AREA1:DELAY:  
:MEASURE:COUNT 3;POLARITY RISE;;:MEASURE:  
TRACE1:AREA1:DELAY:REFERENCE:COUNT 1;  
POLARITY FALL;TRACE 2;;:MEASURE:TRACE1:  
AREA1:DELAY:SOURCE TRACE;;:MEASURE:  
TRACE1:AREA1:DPROXIMAL:MODE PERCENT;  
PERCENT 10,90;UNIT -1.000E+00,  
1.000E+00;;:MEASURE:TRACE1:AREA1:  
DUTYCYCLE:STATE 1;;:MEASURE:TRACE1:  
AREA1:FALL:STATE 0;;:MEASURE:TRACE1:  
AREA1:FREQUENCY:STATE 0;;:MEASURE:  
TRACE1:AREA1:HIGH:STATE 1;;:MEASURE:  
TRACE1:AREA1:HILOW:STATE 0;;:MEASURE:  
TRACE1:AREA1:LOW:STATE 1;;:MEASURE:  
TRACE1:AREA1:MAXIMUM:STATE 1;;:MEASURE:  
TRACE1:AREA1:MEAN:STATE 1;;:MEASURE:  
TRACE1:AREA1:MINIMUM:STATE 1;;:MEASURE:  
TRACE1:AREA1:NOVERSHOOT:STATE 0;;  
:MEASURE:TRACE1:AREA1:NWIDTH:STATE 1;;  
:MEASURE:TRACE1:AREA1:PERFREQUENCY:  
STATE 0;;:MEASURE:TRACE1:AREA1:PERIOD:  
STATE 0;;:MEASURE:TRACE1:AREA1:  
POVERSHOOT:STATE .....

## 5.18 MEASure Group

### **:MEASure:TRACe<x>:AREA<x>?**

Function Queries all settings related to the area.

Syntax :MEASure:TRACe<x>:AREA<x>?  
<x> of TRACe<x> = 1 to 8  
<x> of AREA<x> = 1 or 2

Example :MEASURE:TRACE1:AREA1? ->  
:MEASURE:TRACE1:AREA1:BURST:STATE 1;;  
MEASURE:TRACE1:AREA1:CMEAN:STATE 0;;  
MEASURE:TRACE1:AREA1:COUNT:STATE 0;;  
MEASURE:TRACE1:AREA1:CRMS:STATE 0;;  
MEASURE:TRACE1:AREA1:CSDEVIATION:  
STATE 0;;MEASURE:TRACE1:AREA1:DELAY:  
MEASURE:COUNT 3;POLARITY RISE;;MEASURE:  
TRACE1:AREA1:DELAY:REFERENCE:COUNT 1;  
POLARITY FALL;TRACE 2;;MEASURE:TRACE1:  
AREA1:DELAY:SOURCE TRACE;;MEASURE:  
TRACE1:AREA1:DPROXIMAL:MODE PERCENT;  
PERCENT 10,90;UNIT -1.000E+00,  
1.000E+00;;MEASURE:TRACE1:AREA1:  
DUTYCYCLE:STATE 1;;MEASURE:TRACE1:  
AREA1:FALL:STATE 0;;MEASURE:TRACE1:  
AREA1:FREQUENCY:STATE 0;;MEASURE:  
TRACE1:AREA1:HIGh:STATE 1;;MEASURE:  
TRACE1:AREA1:HILOW:STATE 0;;MEASURE:  
TRACE1:AREA1:LOW:STATE 1;;MEASURE:  
TRACE1:AREA1:MAXIMUM:STATE 1;;MEASURE:  
TRACE1:AREA1:MEAN:STATE 1;;MEASURE:  
TRACE1:AREA1:MINIMUM:STATE 1;;MEASURE:  
TRACE1:AREA1:NOVERSHOOT:STATE 0;;  
MEASURE:TRACE1:AREA1:NWIDTH:STATE 1;;  
MEASURE:TRACE1:AREA1:PERFREQUENCY:  
STATE 0;;MEASURE:TRACE1:AREA1:PERIOD:  
STATE 0;;MEASURE:TRACE1:AREA1:  
POVERSHOOT:STATE .....

### **:MEASure:TRACe<x>:AREA<x>:ALL**

Function Turns ON/OFF all waveform parameters.

Syntax :MEASure:TRACe<x>:AREA<x>:ALL  
{<Boolean>}  
<x> of TRACe<x> = 1 to 8  
<x> of AREA<x> = 1 or 2

Example :MEASURE:TRACE1:AREA1:ALL ON

### **:MEASure:TRACe<x>:AREA<x>:**

#### **<Parameter>?**

Function Queries all settings related to the waveform parameter.

Syntax :MEASure:TRACe<x>:AREA<x>:<Parameter>?  
<x> of TRACe<x> = 1 to 8  
<x> of AREA<x> = 1 or 2  
<Parameter> = {BURSt|CMEan|COUNT|CRMS|  
CSDeviatiOn|DELay|DUTYcycle|FALL|  
FREQuency|HIGH|HILOW|LOW|MAXimum|MEAN|  
MINimum|NOVershoot|NWIDTH|PERFrequency|  
PERiod|POVershoot|PTOPeak|PWIDth|RISE|  
RMS|SDEviatiOn|TYCInteg|TYINteg}

Example (The following is an example for the maximum value of trace 1 and area 1.)  
:MEASURE:TRACE1:AREA1:MAXIMUM? ->  
:MEASURE:TRACE1:AREA1:MAXIMUM:STATE 0

### **:MEASure:TRACe<x>:AREA<x>:**

#### **<Parameter>:COUNT?**

Function Queries the continuous statistical processing count of the waveform parameter.

Syntax :MEASure:TRACe<x>:AREA<x>:<Parameter>:  
COUNT?  
<x> of TRACe<x> = 1 to 8  
<x> of AREA<x> = 1 or 2  
<Parameter> = {BURSt|CMEan|COUNT|CRMS|  
CSDeviatiOn|DELay|DUTYcycle|FALL|  
FREQuency|HIGH|HILOW|LOW|MAXimum|MEAN|  
MINimum|NOVershoot|NWIDTH|PERFrequency|  
PERiod|POVershoot|PTOPeak|PWIDth|RISE|  
RMS|SDEviatiOn|TYCInteg|TYINteg}

Example (The following is an example for the maximum value of trace 1 and area 1.)  
:MEASURE:TRACE1:AREA1:MAXIMUM:COUNT? ->  
:MEASURE:TRACE1:AREA1:MAXIMUM:COUNT 0

**<Parameter>: {MAXimum | MEAN | MINimum | SDEVIation}?**

Function Queries the statistical value of the waveform parameter.

Syntax :MEASure:TRACe<x>:AREA<x>:<Parameter>:  
{MAXimum|MEAN|MINimum|SDEVIation}?  
<x> of TRACe<x> = 1 to 8  
<x> of AREA<x> = 1 or 2  
<Parameter> = {BURSt|CMEan|COUNT|CRMS|  
CSDEVIation|DELay|DUTYcycle|FALL|  
FREQuency|HIGH|HILOw|LOW|MAXimum|MEAN|  
MINimum|NOVershoot|NWIDth|PERFrequency|  
PERiod|POVershoot|PTOPeak|PWIDth|RISE|  
RMS|SDEVIation|TYCInteg|TYINteg}

Example (The following is an example for the maximum value.)

```
:MEASURE:TRACE1:AREA1:MAXIMUM:
MAXIMUM? ->
:MEASURE:TRACE1:AREA1:MAXIMUM:
MAXIMUM 1.000E+00
```

**:MEASure:TRACe<x>:AREA<x>:****<Parameter>:STATE**

Function Turns ON/OFF the waveform parameter or queries the current setting.

Syntax :MEASure:TRACe<x>:AREA<x>:<Parameter>:  
STATE {<Boolean>}  
:MEASure:TRACe<x>:AREA<x>:<Parameter>:  
STATE?  
<x> of TRACe<x> = 1 to 8  
<x> of AREA<x> = 1 or 2

<Parameter> = {BURSt|CMEan|COUNT|CRMS|  
CSDEVIation|DELay|DUTYcycle|FALL|  
FREQuency|HIGH|HILOw|LOW|MAXimum|MEAN|  
MINimum|NOVershoot|NWIDth|PERFrequency|  
PERiod|POVershoot|PTOPeak|PWIDth|RISE|  
RMS|SDEVIation|TYCInteg|TYINteg}

Example (The following is an example for the maximum value of trace 1 and area 1.)

```
:MEASURE:TRACE1:AREA1:MAXIMUM:STATE ON
:MEASURE:TRACE1:AREA1:MAXIMUM:STATE? ->
:MEASURE:TRACE1:AREA1:MAXIMUM:STATE 1
```

**:MEASure:TRACe<x>:AREA<x>:****<Parameter>:VALUE?**

Function Queries the automated measured value of the waveform parameter.

Syntax :MEASure:TRACe<x>:AREA<x>:<Parameter>:  
VALUE? {<NRf>}  
<x> of TRACe<x> = 1 to 8  
<x> of AREA<x> = 1 or 2  
<Parameter> = {BURSt|CMEan|COUNT|CRMS|  
CSDEVIation|DELay|DUTYcycle|FALL|  
FREQuency|HIGH|HILOw|LOW|MAXimum|MEAN|  
MINimum|NOVershoot|NWIDth|PERFrequency|  
PERiod|POVershoot|PTOPeak|PWIDth|RISE|  
RMS|SDEVIation|TYCInteg|TYINteg}  
<NRf> = 1 to 100000

Example (The following is an example for the maximum value of trace 1 and area 1.)

```
:MEASURE:TRACE1:AREA1:MAXIMUM:VALUE? ->
:MEASURE:TRACE1:AREA1:MAXIMUM:
VALUE 1.000E+00
```

Description • If the measurement is not possible, "NAN (Not A Number)" is returned.

- <NRf> indicates the nth automated measured value in the past.

In the case of cycle statistical processing, specify the <NRf> cycle from the left of the screen.

To specify the oldest automated measured value, specify 1.

If <NRf> is omitted, the latest automated measured value is specified.

If the value corresponding to the relevant count is not present, "NAN" (Not A Number) is returned.

**:MEASure:TRACe<x>:AREA<x>:DELay:****MEASure?**

Function Queries all settings related to the measurement conditions of the source waveform of the delay measurement between channels.

Syntax :MEASure:TRACe<x>:AREA<x>:DELay:  
MEASure?

<x> of TRACe<x> = 1 to 8

<x> of AREA<x> = 1 or 2

Example :MEASURE:TRACE1:AREA1:DELAY:MEASURE? ->

```
:MEASURE:TRACE1:AREA1:DELAY:MEASURE:
COUNT 1;POLARITY RISE
```

## 5.18 MEASure Group

### **:MEASure:TRACe<x>:AREA<x>:DELay:**

#### **MEASure:COUNT**

**Function** Sets the edge detection count of the source waveform of the delay measurement between channels or queries the current setting.

**Syntax** :MEASure:TRACe<x>:AREA<x>:DELay:  
MEASure:COUNT {<NRF>}  
:MEASure:TRACe<x>:AREA<x>:DELay:  
MEASure:COUNT?  
<x> of TRACe<x> = 1 to 8  
<x> of AREA<x> = 1 or 2  
<NRF> = 1 to 10

**Example** :MEASURE:TRACE1:AREA1:DELAY:MEASURE:  
COUNT 1  
:MEASURE:TRACE1:AREA1:DELAY:MEASURE:  
COUNT? -> :MEASURE:TRACE1:AREA1:DELAY:  
MEASURE:COUNT 1

### **:MEASure:TRACe<x>:AREA<x>:DELay:**

#### **MEASure:POLarity**

**Function** Sets the polarity of the source waveform of the delay measurement between channels or queries the current setting.

**Syntax** :MEASure:TRACe<x>:AREA<x>:DELay:  
MEASure:POLarity {FALL|RISE}  
:MEASure:TRACe<x>:AREA<x>:DELay:  
MEASure:POLarity?  
<x> of TRACe<x> = 1 to 8  
<x> of AREA<x> = 1 or 2

**Example** :MEASURE:TRACE1:AREA1:DELAY:MEASURE:  
POLARITY RISE  
:MEASURE:TRACE1:AREA1:DELAY:MEASURE:  
POLARITY? -> :MEASURE:TRACE1:AREA1:  
DELAY:MEASURE:POLARITY RISE

### **:MEASure:TRACe<x>:AREA<x>:DELay:**

#### **REFERENCE?**

**Function** Queries all settings related to the reference waveform of the delay measurement between channels.

**Syntax** :MEASure:TRACe<x>:AREA<x>:DELay:  
REFERENCE?  
<x> of TRACe<x> = 1 to 8  
<x> of AREA<x> = 1 or 2

**Example** :MEASURE:TRACE1:AREA1:DELAY:REFERENCE?  
-> :MEASURE:TRACE1:AREA1:DELAY:  
REFERENCE:COUNT 1;POLARITY FALL;TRACE 1

### **:MEASure:TRACe<x>:AREA<x>:DELay:**

#### **REFERENCE:COUNT**

**Function** Sets the edge detection count of the reference waveform of the delay measurement between channels or queries the current setting.

**Syntax** :MEASure:TRACe<x>:AREA<x>:DELay:  
REFERENCE:COUNT {<NRF>}  
:MEASure:TRACe<x>:AREA<x>:DELay:  
REFERENCE:COUNT?  
<x> of TRACe<x> = 1 to 8  
<x> of AREA<x> = 1 or 2  
<NRF> = 1 to 10

**Example** :MEASURE:TRACE1:AREA1:DELAY:REFERENCE:  
COUNT 1  
:MEASURE:TRACE1:AREA1:DELAY:REFERENCE:  
COUNT? -> :MEASURE:TRACE1:AREA1:DELAY:  
REFERENCE:COUNT 1

### **:MEASure:TRACe<x>:AREA<x>:DELay:**

#### **REFERENCE:POLarity**

**Function** Sets the polarity of the reference waveform of the delay measurement between channels or queries the current setting.

**Syntax** :MEASure:TRACe<x>:AREA<x>:DELay:  
REFERENCE:POLarity {FALL|RISE}  
:MEASure:TRACe<x>:AREA<x>:DELay:  
REFERENCE:POLarity?  
<x> of TRACe<x> = 1 to 8  
<x> of AREA<x> = 1 or 2

**Example** :MEASURE:TRACE1:AREA1:DELAY:REFERENCE:  
POLARITY FALL  
:MEASURE:TRACE1:AREA1:DELAY:REFERENCE:  
POLARITY? -> :MEASURE:TRACE1:AREA1:  
DELAY:REFERENCE:POLARITY FALL

### **:MEASure:TRACe<x>:AREA<x>:DELay:**

#### **REFERENCE:TRACe**

**Function** Sets the trace of the reference waveform of the delay measurement between channels or queries the current setting.

**Syntax** :MEASure:TRACe<x>:AREA<x>:DELay:  
REFERENCE:TRACe {<NRF>}  
:MEASure:TRACe<x>:AREA<x>:DELay:  
REFERENCE:TRACe?  
<x> of TRACe<x> = 1 to 8  
<x> of AREA<x> = 1 or 2  
<NRF> = 1 to 8

**Example** :MEASURE:TRACE1:AREA1:DELAY:REFERENCE:  
TRACE 1  
:MEASURE:TRACE1:AREA1:DELAY:REFERENCE:  
TRACE? -> :MEASURE:TRACE1:AREA1:DELAY:  
REFERENCE:TRACE 1

**:MEASure:TRACe<x>:AREA<x>:DELay:SOURCE**

Function Sets the reference of the delay measurement between channels or queries the current setting.

Syntax `:MEASure:TRACe<x>:AREA<x>:DELay:SOURCE {TRACE|TRIGger}`  
`:MEASure:TRACe<x>:AREA<x>:DELay:SOURCE? <x> of TRACe<x> = 1 to 8`  
`<x> of AREA<x> = 1 or 2`

Example `:MEASURE:TRACE1:AREA1:DELAY:SOURCE TRACE`  
`:MEASURE:TRACE1:AREA1:DELAY:SOURCE? ->`  
`MEASURE:TRACE1:AREA1:DELAY:SOURCE TRACE`

**:MEASure:TRACe<x>:AREA<x>:DPRoximal?**

Function Queries all settings related to the distal and proximal values.

Syntax `:MEASure:TRACe<x>:AREA<x>:DPRoximal? <x> of TRACe<x> = 1 to 8`  
`<x> of AREA<x> = 1 or 2`

Example `:MEASURE:TRACE1:AREA1:DPROXIMAL? ->`  
`;MEASURE:TRACE1:AREA1:DPROXIMAL:MODE PERCENT;PERCENT 10,20;UNIT 1.000E+00,1.000E+00`

Description This command is valid when the <Parameter> of `:MEASure:TRACe<x>:AREA<x>:<Parameter>` is RISE or FALL.

**:MEASure:TRACe<x>:AREA<x>:DPRoximal:MODE**

Function Sets the unit of the distal and proximal values or queries the current setting.

Syntax `:MEASure:TRACe<x>:AREA<x>:DPRoximal:MODE {PERCent|UNIT}`  
`:MEASure:TRACe<x>:AREA<x>:DPRoximal:MODE? <x> of TRACe<x> = 1 to 8`  
`<x> of AREA<x> = 1 or 2`

Example `:MEASURE:TRACE1:AREA1:DPROXIMAL:MODE PERCENT`  
`:MEASURE:TRACE1:AREA1:DPROXIMAL:MODE? ->`  
`MEASURE:TRACE1:AREA1:DPROXIMAL:MODE PERCENT`

Description This command is valid when the <Parameter> of `:MEASure:TRACe<x>:AREA<x>:<Parameter>` is RISE or FALL.

**:MEASure:TRACe<x>:AREA<x>:DPRoximal:PERCent**

Function Sets the distal and proximal values as a percentage or queries the current setting.

Syntax `:MEASure:TRACe<x>:AREA<x>:DPRoximal:PERCent {<NRf>,<NRf>}`  
`:MEASure:TRACe<x>:AREA<x>:DPRoximal:PERCent? <x> of TRACe<x> = 1 to 8`  
`<x> of AREA<x> = 1 or 2`  
`<NRf> = 0 to 100 (%)`

Example `:MEASURE:TRACE1:AREA1:DPROXIMAL:PERCENT 10,90`  
`:MEASURE:TRACE1:AREA1:DPROXIMAL:PERCENT? ->`  
`MEASURE:TRACE1:AREA1:DPROXIMAL:PERCENT 10,90`

Description This command is valid when the <Parameter> of `:MEASure:TRACe<x>:AREA<x>:<Parameter>` is RISE or FALL.

**:MEASure:TRACe<x>:AREA<x>:DPRoximal:UNIT**

Function Sets the distal and proximal values in the specified unit or queries the current setting.

Syntax `:MEASure:TRACe<x>:AREA<x>:DPRoximal:UNIT {(<NRf>,<NRf>)|(<Voltage>,<Voltage>)|(<Current>,<Current>)}`  
`:MEASure:TRACe<x>:AREA<x>:DPRoximal:UNIT? <x> of TRACe<x> = 1 to 8`  
`<x> of AREA<x> = 1 or 2`  
`<NRf>, <Voltage>, and <Current> = See the DL9000 User's Manual.`

Example `:MEASURE:TRACE1:AREA1:DPROXIMAL:UNIT 1,-1`  
`:MEASURE:TRACE1:AREA1:DPROXIMAL:UNIT? ->`  
`MEASURE:TRACE1:AREA1:DPROXIMAL:UNIT -1.000E+00,1.000E+00`

Description This command is valid when the <Parameter> of `:MEASure:TRACe<x>:AREA<x>:<Parameter>` is RISE or FALL.

**:MEASure:TRANge<x> (Time Range)**

Function Sets the measurement range or queries the current setting.

Syntax `:MEASure:TRANge<x> {<NRf>,<NRf>}`  
`:MEASure:TRANge<x>? <x> = 1 or 2`  
`<NRf> = -5 to 5 (div)`

Example `:MEASURE:TRANGE1 -5,0`  
`:MEASURE:TRANGE1? ->`  
`MEASURE:TRANGE1 0.000E+00,-5.000E+00`

## 5.18 MEASure Group

---

### **:MEASure:WAIT?**

**Function** Waits for the completion of the automated measurement with a timeout option.

**Syntax** MEASure:WAIT? {<NRf>}  
<NRf> = 1 to 360000 (timeout value, in units of 10 ms)

**Example** MEASURE:WAIT 100? -> :MEASURE:WAIT 1

**Description** If the execution of the automated measurement completes within the timeout value, 0 is returned; if it is not complete or automated measurement is not being executed, 1 is returned.  
Even if the timeout value is set long, 0 is returned when the execution of the automated measurement is complete.

### **:MEASure:WINDow<x>**

**Function** Sets the measurement source window of the area or queries the current setting.

**Syntax** :MEASure:WINDow<x> {MAIN|Z1|Z2}  
:MEASure:WINDow<x>?  
<x> = 1 or 2

**Example** :MEASURE:WINDOW1 MAIN  
:MEASURE:WINDOW1? ->  
:MEASURE:WINDOW1 MAIN

## 5.19 REFERENCE GROUP

### **:REFERENCE<x>?**

Function Queries all settings related to the reference.

Syntax :REFERENCE<x>?  
<x> = 1 to 4

Example :REFERENCE1? -> :REFERENCE1:  
SELECT REFERENCE;DISPLAY 1;INVERT 0;  
LABEL:DEFINE "REF1";MODE 1;:REFERENCE1:  
POSITION 1.000E+00;SVALUE 1

### **:REFERENCE<x>:DISPLAY**

Function Turns ON/OFF the display of the reference or queries the current setting.

Syntax :REFERENCE<x>:DISPLAY {<Boolean>}  
:REFERENCE<x>:DISPLAY?  
<x> = 1 to 4

Example :REFERENCE1:DISPLAY ON  
:REFERENCE1:DISPLAY? ->  
:REFERENCE1:DISPLAY 1

### **:REFERENCE<x>:INVERT**

Function Sets the inverted display of the reference or queries the current setting.

Syntax :REFERENCE<x>:INVERT {<Boolean>}  
:REFERENCE<x>:INVERT?  
<x> = 1 to 4

Example :REFERENCE1:INVERT ON  
:REFERENCE1:INVERT? ->  
:REFERENCE1:INVERT 1

### **:REFERENCE<x>:LABEL?**

Function Queries all settings related to the waveform label of the reference.

Syntax :REFERENCE<x>:LABEL?  
<x> = 1 to 4

Example :REFERENCE1:LABEL? ->  
:REFERENCE1:LABEL:DEFINE "REF1";MODE 1

### **:REFERENCE<x>:LABEL[:DEFINE]**

Function Sets the waveform label of the reference or queries the current setting.

Syntax :REFERENCE<x>:LABEL[:DEFINE] {<String>}  
:REFERENCE<x>:LABEL[:DEFINE]?  
<x> = 1 to 4  
<String> = Up to 8 characters

Example :REFERENCE1:LABEL:DEFINE "REF1"  
:REFERENCE1:LABEL:DEFINE? ->  
:REFERENCE1:LABEL:DEFINE "REF1"

### **:REFERENCE<x>:LABEL:MODE**

Function Turns ON/OFF the waveform label display of the reference or queries the current setting.

Syntax :REFERENCE<x>:LABEL:MODE {<Boolean>}  
:REFERENCE<x>:LABEL:MODE?  
<x> = 1 to 4

Example :REFERENCE1:LABEL:MODE ON  
:REFERENCE1:LABEL:MODE? ->  
:REFERENCE1:LABEL:MODE 1

### **:REFERENCE<x>:LOAD**

Function Loads the waveform to the reference.

Syntax :REFERENCE<x>:LOAD {<NRf>}  
<x> = 1 to 4  
<NRf> = 1 to 12 (1 to 8 are traces and 9 to 12 are internal memories)

Example :REFERENCE1:LOAD 1

### **:REFERENCE<x>:POSITION**

Function Sets the vertical position of the reference or queries the current setting.

Syntax :REFERENCE<x>:POSITION {<NRf>}  
:REFERENCE<x>:POSITION?  
<x> = 1 to 4  
<NRf> = -4 to 4 (div)

Example :REFERENCE1:POSITION 1  
:REFERENCE1:POSITION? ->  
:REFERENCE1:POSITION 1.000E+00

### **:REFERENCE<x>:SELECT**

Function Sets the waveform (computation or reference) to the computation channel or queries the current setting.

Syntax :REFERENCE<x>:SELECT {MATH|REFERENCE}  
:REFERENCE<x>:SELECT?  
<x> = 1 to 4

Example :REFERENCE1:SELECT MATH  
:REFERENCE1:SELECT? ->  
:REFERENCE1:SELECT MATH

### **:REFERENCE<x>:SVALUE (Scale VALUE)**

Function Turns ON/OFF the scale display of the reference or queries the current setting.

Syntax :REFERENCE<x>:SVALUE {<Boolean>}  
:REFERENCE<x>:SVALUE?  
<x> = 1 to 4

Example :REFERENCE1:SVALUE ON  
:REFERENCE1:SVALUE? ->  
:REFERENCE1:SVALUE 1



## 5.20 SEARCh Group

**:SEARCh<x>?**

Function Queries all settings related to the search function.

Syntax :SEARCh<x>?  
<x> = 1 or 2

Example :SEARCH1? -> :SEARCH1:CLOCK:SOURCE 1;  
POLARITY FALL;:SEARCH1:DECIMATION 1;  
HOLDOFF 0.000E+00;LOGIC AND;  
POLARITY RISE;SMODE OFF;SPATTERN:CLOCK:  
MODE 1;POLARITY FALL;SOURCE 1;:SEARCH1:  
SPATTERN:CS 1;LATCH:TRACE 1;  
POLARITY FALL;:SEARCH1:SPATTERN:SETUP:  
BITRATE 1.000E+00;  
PATTERN "1100110111101111";:SEARCH1:  
SPOINT -5.000E+00;STRACE 1;TRACE1:  
CONDITION DONTCARE;  
HYSTERESIS 1.000E+00;LEVEL 0.000E+00;:  
SEARCH1:TRACE2:CONDITION DONTCARE;  
HYSTERESIS 1.000E+00;LEVEL 0.000E+00;:  
SEARCH1:TRACE3:CONDITION DONTCARE;  
HYSTERESIS 1.000E+00;LEVEL 0.000E+00;:  
SEARCH1:TRACE4:CONDITION DONTCARE;  
HYSTERESIS 1.000E+00;LEVEL 0.000E+00;:  
SEARCH1:TRACE5:CONDITION DONTCARE;  
HYSTERESIS 1.000E+00;LEVEL 0.000E+00;:  
SEARCH1:TRACE6:CONDITION DONTCARE;  
HYSTERESIS 1.000E+00;LEVEL 0.000E+00;:  
SEARCH1:TRACE7:CONDITION DONTCARE;  
HYSTERESIS 1.000E+00;LEVEL 0.000E+00;:  
SEARCH1:TRACE8:CONDITION DONTCARE;  
HYSTERESIS 1.000E+00;LEVEL 0.000E+00;:  
SEARCH1:TYPE EDGE;WIDTH:MODE OUT;  
TIME1 1.000E+00;TIME2 2.000E+00;  
TYPE PULSE

**:SEARCh<x>:ABORt**

Function Aborts the search.

Syntax :SEARCh<x>:ABORt  
<x> = 1 or 2

Example :SEARCH1:ABORt

**:SEARCh<x>:CLOCK?**

Function Queries all settings related to the clock channel.

Syntax :SEARCh<x>:CLOCK?  
<x> = 1 or 2

Example :SEARCH1:CLOCK? ->  
:SEARCH1:CLOCK:SOURCE 1;POLARITY RISE

**:SEARCh<x>:CLOCK:POLARity**

Function Sets the polarity of the clock channel or queries the current setting.

Syntax :SEARCh<x>:CLOCK:POLARity {FALL|RISE}  
:SEARCh<x>:CLOCK:POLARity?  
<x> = 1 or 2

Example :SEARCH1:CLOCK:POLARITY RISE  
:SEARCH1:CLOCK:POLARITY? ->  
:SEARCH1:CLOCK:POLARITY RISE

Description • This command is invalid when  
:SEARCh<x>:CLOCK:SOURCE NONE.  
• This command is valid when :SEARCh<x>:TYPE  
STATE.  
• This command is valid when :SEARCh<x>:TYPE  
WIDTH and :SEARCh<x>:WIDTH:TYPE PSTate.

**:SEARCh<x>:CLOCK:SOURCE**

Function Sets the clock trace of the search or queries the current setting.

Syntax :SEARCh<x>:CLOCK:SOURCE {<NRF>|NONE}  
:SEARCh<x>:CLOCK:SOURCE?  
<x> = 1 or 2  
<NRF> = 1 to 8

Example :SEARCH1:CLOCK:SOURCE NONE  
:SEARCH1:CLOCK:SOURCE? ->  
:SEARCH1:CLOCK:SOURCE NONE

Description • This command is valid when :SEARCh<x>:TYPE  
STATE.  
• This command is valid when :SEARCh<x>:TYPE  
WIDTH and :SEARCh<x>:WIDTH:TYPE PSTate.

**:SEARCh<x>:DECImation**

Function Sets the decimation detection of the skip mode or queries the current setting.

Syntax :SEARCh<x>:DECImation {<NRF>}  
:SEARCh<x>:DECImation?  
<x> = 1 or 2  
<NRF> = 1 to 9999

Example :SEARCH1:DECIMATION 1  
:SEARCH1:DECIMATION? ->  
:SEARCH1:DECIMATION 1

**:SEARCH<x>:EXECute**

Function Executes the search. This is an overlap command.  
 Syntax :SEARCH<x>:EXECute  
 <x> = 1 or 2  
 Example :SEARCH1:EXECUTE

**:SEARCH<x>:HOLDoff**

Function Sets the hold off detection or queries the current setting.  
 Syntax :SEARCH<x>:HOLDoff {<Time>}  
 :SEARCH<x>:HOLDoff?  
 <x> = 1 or 2  
 <Time> = 0 s to 1 s (100 ps steps)  
 Example :SEARCH1:HOLDoff 0S  
 :SEARCH1:HOLDoff? ->  
 :SEARCH1:HOLDoff 0.000E+00

**:SEARCH<x>:LOGic**

Function Sets the search logic or queries the current setting.  
 Syntax :SEARCH<x>:LOGic {AND|OR}  
 :SEARCH<x>:LOGic?  
 <x> = 1 or 2  
 Example :SEARCH1:LOGic OR  
 :SEARCH1:LOGic? -> :SEARCH1:LOGic OR

Description • This command is valid when :SEARCH<x>:TYPE EQUalify|SPATtern|STATe.  
 • This command is valid when :SEARCH<x>:TYPE WIDTH and :SEARCH<x>:WIDTH:TYPE PQUalify|PSTATe.

**:SEARCH<x>:POLarity**

Function Sets the search polarity or queries the current setting.  
 Syntax :SEARCH<x>:POLarity {ENTER|EXIT|FALL|FALSE|NEGative|POSitive|RISE|TRUE}  
 :SEARCH<x>:POLarity?  
 <x> = 1 or 2  
 Example :SEARCH1:POLARITY ENTER  
 :SEARCH1:POLARITY? ->  
 :SEARCH1:POLARITY ENTER  
 Description • {FALL|RISE} is valid when :SEARCH<x>:TYPE EDGE|EQUalify.  
 • {ENTER|EXIT} is valid when :SEARCH<x>:TYPE STATE.  
 • {NEGative|POSitive} is valid when :SEARCH<x>:TYPE WIDTH and :SEARCH<x>:WIDTH:TYPE PQUalify|PULSe.  
 • {FALSE|TRUE} is valid when :SEARCH<x>:TYPE WIDTH and :SEARCH<x>:WIDTH:TYPE PSTate.

**:SEARCH<x>:SElect**

Function Sets the detection waveform number of the search function and queries the position that corresponds to the detection waveform number.  
 Syntax :SEARCH<x>:SElect {<Nrf>|MAXimum}  
 :SEARCH<x>:SElect?  
 <x> = 1 or 2  
 <Nrf> = 0 to 4999  
 Example :SEARCH1:SElect 1  
 :SEARCH1:SElect? ->  
 :SEARCH1:SElect 1.500E+00  
 Description If there is no searched position, "NAN" is returned for the query.

**:SEARCH<x>:SElect? MAXimum**

Function Queries the detection count of the search function.  
 Syntax :SEARCH<x>:SElect? {MAXimum}  
 <x> = 1 or 2  
 Example :SEARCH1:SElect? MAXimum ->  
 :SEARCH1:SElect 100  
 Description If there is no searched position, "NAN" is returned for the query.

**:SEARCH<x>:SMODE**

Function Sets the skip mode or queries the current setting.  
 Syntax :SEARCH<x>:SMODE {DECimation|HOLDoff|OFF}  
 :SEARCH<x>:SMODE?  
 <x> = 1 or 2  
 Example :SEARCH1:SMODE HOLDoff  
 :SEARCH1:SMODE? ->  
 :SEARCH1:SMODE HOLDoff

**:SEARCH<x>:SPATtern? (Serial Pattern)**

Function Queries all settings related to the serial pattern search.  
 Syntax :SEARCH<x>:SPATtern?  
 <x> = 1,2  
 Example :SEARCH1:SPATtern? -> :SEARCH1:  
 SPATtern:CLOCK:MODE 1;POLARITY FALL;  
 SOURCE 1;;SEARCH1:SPATtern:CS 1;LATCH:  
 TRACE 1;POLARITY FALL;;SEARCH1:  
 SPATtern:SETUP:BITRATE 1.000E+00;  
 PATtern "1100110111101111"

**:SEARCH<x>:SPATtern:CLOCK?**

Function Queries all settings related to clock of the serial pattern search.  
 Syntax :SEARCH<x>:SPATtern:CLOCK?  
 <x> = 1,2  
 Example :SEARCH1:SPATtern:CLOCK? ->  
 :SEARCH1:SPATtern:CLOCK:MODE 1;  
 POLARITY FALL;SOURCE 1

## 5.20 SEARCh Group

### **:SEARCh<x>:SPATtern:CLOCK:MODE**

Function Enables/Disables the clock of the serial pattern search or queries the current setting.

Syntax :SEARCh<x>:SPATtern:CLOCK:  
MODE {<Boolean>}  
:SEARCh<x>:SPATtern:CLOCK:MODE?  
<x> = 1,2

Example :SEARCH1:SPATTERN:CLOCK:MODE ON  
:SEARCH1:SPATTERN:CLOCK:MODE? ->  
:SEARCH1:SPATTERN:CLOCK:MODE 1

### **:SEARCh<x>:SPATtern:CLOCK:POLArity**

Function Sets the polarity of the clock trace of the serial pattern search or queries the current setting.

Syntax :SEARCh<x>:SPATtern:CLOCK:  
POLArity {FALL|RISE}  
:SEARCh<x>:SPATtern:CLOCK:POLArity?  
<x> = 1,2

Example :SEARCH1:SPATTERN:CLOCK:POLARITY FALL  
:SEARCH1:SPATTERN:CLOCK:POLARITY? ->  
:SEARCH1:SPATTERN:CLOCK:POLARITY FALL

Description This command is valid when  
:SEARCh<x>:SPATtern:CLOCK:MODE ON.

### **:SEARCh<x>:SPATtern:CLOCK:SOURce**

Function Sets the clock trace of the serial pattern search or queries the current setting.

Syntax :SEARCh<x>:SPATtern:CLOCK:  
SOURce {<NRf>}  
:SEARCh<x>:SPATtern:CLOCK:SOURce?  
<x> = 1,2  
<NRf> = 1 to 8

Example :SEARCH1:SPATTERN:CLOCK:SOURCE 1  
:SEARCH1:SPATTERN:CLOCK:SOURCE? ->  
:SEARCH1:SPATTERN:CLOCK:SOURCE 1

Description This command is valid when  
:SEARCh<x>:SPATtern:CLOCK:MODE ON.

### **:SEARCh<x>:SPATtern:CS**

Function Enables/Disables the chip select of the serial pattern search or queries the current setting.

Syntax :SEARCh<x>:SPATtern:CS {<Boolean>}  
:SEARCh<x>:SPATtern:CS?  
<x> = 1,2

Example :SEARCH1:SPATTERN:CS ON  
:SEARCH1:SPATTERN:CS? ->  
:SEARCH1:SPATTERN:CS 1

Description This command is valid when  
:SEARCh<x>:SPATtern:CLOCK:MODE ON.

POLARITY FALL

### **:SEARCh<x>:SPATtern:LATCh?**

Function Queries all settings related to latch of the serial pattern search.

Syntax :SEARCh<x>:SPATtern:LATCh?  
<x> = 1,2

Example :SEARCH1:SPATTERN:LATCH? ->  
:SEARCH1:SPATTERN:LATCH:TRACE 1;  
POLARITY FALL

### **:SEARCh<x>:SPATtern:LATCh:POLArity**

Function Sets the polarity of the latch trace of the serial pattern search or queries the current setting.

Syntax :SEARCh<x>:SPATtern:LATCh:  
POLArity {FALL|RISE}  
:SEARCh<x>:SPATtern:LATCh:POLArity?  
<x> = 1,2

Example :SEARCH1:SPATTERN:LATCH:POLARITY FALL  
:SEARCH1:SPATTERN:LATCH:POLARITY? ->  
:SEARCH1:SPATTERN:LATCH:POLARITY FALL

Description • This command is valid when  
:SEARCh<x>:SPATtern:CLOCK:MODE ON.  
• This command is invalid when  
:SEARCh<x>:SPATtern:LATCh:TRACE NONE.

### **:SEARCh<x>:SPATtern:LATCh:TRACe**

Function Sets the latch trace of the serial pattern search or queries the current setting.

Syntax :SEARCh<x>:SPATtern:LATCh:TRACe {<NRf>|  
NONE}  
:SEARCh<x>:SPATtern:LATCh:TRACe?  
<x> = 1,2  
<NRf> = 1 to 8

Example :SEARCH1:SPATTERN:LATCH:TRACE 1  
:SEARCH1:SPATTERN:LATCH:TRACE? ->  
:SEARCH1:SPATTERN:LATCH:TRACE 1

Description This command is valid when  
:SEARCh<x>:SPATtern:CLOCK:MODE ON.

### **:SEARCh<x>:SPATtern[:SETUp]?**

Function Queries all settings related to setup of the serial pattern search.

Syntax :SEARCh<x>:SPATtern[:SETUp]?  
<x> = 1,2

Example :SEARCH1:SPATTERN:SETUP? ->  
:SEARCH1:SPATTERN:SETUP:  
BITRATE 1.000E+03;DATA:ACTIVE HIGH;  
TRACE 1;  
:SEARCH1:SPATTERN:SETUP:PATTERN "1100"

**:SEARCH<x>:SPATtern [ :SETup ] :BITRate**

Function Sets the bit rate of the serial pattern search or queries the current setting.

Syntax `:SEARCH<x>:SPATtern [ :SETup ] :BITRate {<NRf>}`  
`:SEARCH<x>:SPATtern [ :SETup ] :BITRate?`  
`<x> = 1, 2`  
`<NRf> = 1 to 1G (bps)`

Example `:SEARCH1:SPATtern:SETUP:BITRATE 1`  
`:SEARCH1:SPATtern:SETUP:BITRATE? ->`  
`:SEARCH1:SPATtern:SETUP:`  
`BITRATE 1.000E+00`

Description This command is valid when  
`:SEARCH<x>:SPATtern:CLOCK:MODE OFF.`

**:SEARCH<x>:SPATtern [ :SETup ] :CLEar**

Function Clears the entire pattern of the serial pattern search (to don't care).

Syntax `:SEARCH<x>:SPATtern [ :SETup ] :CLEar`  
`<x> = 1, 2`

Example `:SEARCH1:SPATtern:SETUP:CLEAR`

**:SEARCH<x>:SPATtern [ :SETup ] :DATA?**

Function Queries all settings related to data of the serial pattern search.

Syntax `:SEARCH<x>:SPATtern [ :SETup ] :DATA?`  
`<x> = 1, 2`

Example `:SEARCH1:SPATtern:SETUP:DATA? -`  
`>:SEARCH1:SPATtern:SETUP:DATA:`  
`ACTIVE HIGH;TRACE 1`

**:SEARCH<x>:SPATtern [ :SETup ] :DATA:****ACTIVE**

Function Sets the active level of the data trace of the serial pattern search or queries the current setting.

Syntax `:SEARCH<x>:SPATtern [ :SETup ] :DATA:ACTIVE {HIGH|LOW}`  
`:SEARCH<x>:SPATtern [ :SETup ] :DATA:ACTIVE?`  
`<x> = 1, 2`

Example `:SEARCH1:SPATtern:SETUP:DATA:ACTIVE HIGH`  
`:SEARCH1:SPATtern:SETUP:DATA:ACTIVE? ->`  
`:SEARCH1:SPATtern:SETUP:DATA:ACTIVE HIGH`

**:SEARCH<x>:SPATtern [ :SETup ] :DATA:TRACe**

Function Sets the data trace of the serial pattern search or queries the current setting.

Syntax `:SEARCH<x>:SPATtern [ :SETup ] :DATA:TRACe {<NRf>}`  
`:SEARCH<x>:SPATtern [ :SETup ] :DATA:TRACe?`  
`<x> = 1, 2`  
`<NRf> = 1 to 8`

Example `:SEARCH1:SPATtern:SETUP:DATA:TRACE 1`  
`:SEARCH1:SPATtern:SETUP:DATA:TRACE? ->`  
`:SEARCH1:SPATtern:SETUP:DATA:TRACE 1`

**:SEARCH<x>:SPATtern [ :SETup ] :HEXA**

Function Sets the pattern of the serial pattern search in hexadecimal notation.

Syntax `:SEARCH<x>:SPATtern [ :SETup ] :HEXA {<String>}`  
`<x> = 1, 2`  
`<String> = Up to 32 characters by combining '0' to 'F' and 'X'`

Example `:SEARCH1:SPATtern:SETUP:HEXA "ABCD"`

**:SEARCH<x>:SPATtern [ :SETup ] :PATTERn**

Function Sets the pattern of the serial pattern search in binary notation or queries the current setting.

Syntax `:SEARCH<x>:SPATtern [ :SETup ] :PATTERn {<String>}`  
`:SEARCH<x>:SPATtern [ :SETup ] :PATTERn?`  
`<x> = 1, 2`  
`<String> = Up to 128 characters by combining '0', '1', and 'X'`

Example `:SEARCH1:SPATtern:SETUP:PATTERN "1100110111101111"`  
`:SEARCH1:SPATtern:SETUP:PATTERN? ->`  
`:SEARCH1:SPATtern:SETUP:PATTERN "1100110111101111"`

**:SEARCH<x>:SPOint**

Function Sets the search start position or queries the current setting.

Syntax `:SEARCH<x>:SPOint {<NRf>}`  
`:SEARCH<x>:SPOint?`  
`<x> = 1 or 2`  
`<NRf> = -5 to 5 (div)`

Example `:SEARCH1:SPOINT 1`  
`:SEARCH1:SPOINT? ->`  
`:SEARCH1:SPOINT 1.000E+00`

**:SEARCH<x>:STRace**

Function Sets the search source trace or queries the current setting.

Syntax `:SEARCH<x>:STRace {<NRf>}`  
`:SEARCH<x>:STRace?`  
`<x> = 1 or 2`  
`<NRf> = 1 to 8`

Example `:SEARCH1:STRACE 1`  
`:SEARCH1:STRACE? -> :SEARCH1:STRACE 1`

Description • This command is valid when `:SEARCH<x>:TYPE EDGE|EQUALify`.  
• This command is valid when `:SEARCH<x>:TYPE WIDTH` and `:SEARCH<x>:WIDTH:TYPE PQUALify|PULSE`.

## 5.20 SEARCh Group

### **:SEARCh<x>:TRACe<x>?**

Function Queries all settings related to the search conditions of the trace.

Syntax :SEARCh<x>:TRACe<x>?  
<x> of SEARCh<x> = 1 or 2  
<x> of TRACe<x> = 1 to 8

Example :SEARCH1:TRACE1? ->  
:SEARCH1:TRACE1:CONDITION DONTCARE;  
HYSTERESIS 1.000E+00;LEVEL 0.000E+00

### **:SEARCh<x>:TRACe<x>:CONDition**

Function Sets the condition to be satisfied for the trace or queries the current setting.

Syntax :SEARCh<x>:TRACe<x>:  
CONDition {DONTcare|HIGH|LOW}  
:SEARCh<x>:TRACe<x>:CONDition?  
<x> of SEARCh<x> = 1 or 2  
<x> of TRACe<x> = 1 to 8

Example :SEARCH1:TRACE1:CONDITION HIGH  
:SEARCH1:TRACE1:CONDITION? ->  
:SEARCH1:TRACE1:CONDITION HIGH

Description • This command is valid when :SEARCh<x>:TYPE  
EQUalify|SPATtern|STATE.  
• This command is valid when :SEARCh<x>:TYPE  
WIDTh and :SEARCh<x>:WIDTh:TYPE  
PQUalify|PSTATE.

### **:SEARCh<x>:TRACe<x>:HYSTEResis**

Function Sets the hysteresis of the trace or queries the current setting.

Syntax :SEARCh<x>:TRACe<x>:HYSTEResis {<Nrf>}  
:SEARCh<x>:TRACe<x>:HYSTEResis?  
<x> of SEARCh<x> = 1 or 2  
<x> of TRACe<x> = 1 to 8  
<Nrf> = 0 to 4 (div, 0.1 div steps)

Example :SEARCH1:TRACE1:HYSTERESIS 1  
:SEARCH1:TRACE1:HYSTERESIS? ->  
:SEARCH1:TRACE1:HYSTERESIS 1.000E+00

### **:SEARCh<x>:TRACe<x>:LEVel**

Function Sets the threshold level of the trace or queries the current setting.

Syntax :SEARCh<x>:TRACe<x>:LEVel {<Nrf>|  
<Voltage>|<Current>}  
:SEARCh<x>:TRACe<x>:LEVel?  
<x> of SEARCh<x> = 1 or 2  
<x> of TRACe<x> = 1 to 8  
<Nrf>, <Voltage>, and <Current> = See the DL9000  
User's Manual.

Example :SEARCH1:TRACE1:LEVEL 0  
:SEARCH1:TRACE1:LEVEL? ->  
:SEARCH1:TRACE1:LEVEL 0.000E+00

### **:SEARCh<x>:TYPE**

Function Sets the search type or queries the current setting.

Syntax :SEARCh<x>:TYPE {EDGE|EQUalify|  
Example :SEARCH1:TYPE EDGE  
:SEARCH1:TYPE? -> :SEARCH1:TYPE EDGE

### **:SEARCh<x>:WIDTh?**

Function Queries all settings related to the pulse width search.

Syntax :SEARCh<x>:WIDTh?  
<x> = 1 or 2

Example :SEARCH1:WIDTh? -> :SEARCH1:WIDTh:  
MODE OUT;TIME1 1.000E-09;  
TIME2 2.000E-09;TYPE PULSE

### **:SEARCh<x>:WIDTh:MODE**

Function Sets the pulse width determination mode or queries the current setting.

Syntax :SEARCh<x>:WIDTh:MODE  
{BETween|IN|NOTbetween|OUT|TIMEout}  
:SEARCh<x>:WIDTh:MODE?  
<x> = 1 or 2

Example :SEARCH1:WIDTh:MODE TIMEOUT  
:SEARCH1:WIDTh:MODE? ->  
:SEARCH1:WIDTh:MODE TIMEOUT

### **:SEARCh<x>:WIDTh:TIME<x>**

Function Sets the pulse width of the pulse width search or queries the current setting.

Syntax :SEARCh<x>:WIDTh:TIME<x> {<Time>}  
:SEARCh<x>:WIDTh:TIME<x>?  
<x> of SEARCh<x> = 1 or 2  
<x> of TIME<x> = 1 or 2  
<Time> = 1 ns to 10 s (500 ps steps)

Example :SEARCH1:WIDTh:TIME1 1S  
:SEARCH1:WIDTh:TIME1? ->  
:SEARCH1:WIDTh:TIME1 1.000E+00

Description TIME2 is valid when :SEARCh<x>:WIDTh:MODE  
BETween|NOTbetween.

### **:SEARCh<x>:WIDTh:TYPE**

Function Sets the pulse width search type or queries the current setting.

Syntax :SEARCh<x>:WIDTh:TYPE {PQUalify|PSTATE|  
PULSE}  
:SEARCh<x>:WIDTh:TYPE?  
<x> = 1 or 2

Example :SEARCH1:WIDTh:TYPE PQUALIFY  
:SEARCH1:WIDTh:TYPE? ->  
:SEARCH1:WIDTh:TYPE PQUALIFY

## 5.21 SNAP Group

### :SNAP

Function Executes the snapshot.

Syntax :SNAP

Example :SNAP

## 5.22 SStArt Group

### :SStArt?

Function Starts the waveform acquisition with the trigger mode set to single. If the waveform acquisition stops within the specified time period, 0 is returned at that point. If not, 1 is returned.

Syntax :SStArt? {<NRf>}  
 <NRf> = 1 to 360000 (10 ms resolution:  
 wait period, START and wait)  
 0 (START only. No wait.)  
 -360000 to -1 (10 ms unit: wait time, do  
 not START and wait)

Example :SStArt? 100 -> :SStArt 0

Description

- If the specified time period is positive, data acquisition is started in the SINGLE TRIGGER mode and waits for the operation to stop.
- If the specified time period is 0, data acquisition is started and 0 is returned without waiting for the operation to stop.
- If the specified time period is negative, the instrument simply waits for the operation to stop. Data acquisition is not started.

## 5.23 StARt Group

### :StARt

Function Starts the waveform acquisition.

Syntax :StARt

Example :StARt

Description Use STOP to stop the waveform acquisition.

## 5.24 STATUS Group

The commands in the STATUS group are used to make settings and inquiries related to the communication status function. There are no front panel keys that correspond to the commands in this group. For a description of the status report, see chapter 6.

### :STATUS?

**Function** Queries all settings related to the communication status function.

**Syntax** :STATUS?

**Example** :STATUS? -> :STATUS:EES 0;  
 FILTER1 NEVER;FILTER2 NEVER;  
 FILTER3 NEVER;FILTER4 NEVER;  
 FILTER5 NEVER;FILTER6 NEVER;  
 FILTER7 NEVER;FILTER8 NEVER;  
 FILTER9 NEVER;FILTER10 NEVER;  
 FILTER11 NEVER;FILTER12 NEVER;  
 FILTER13 NEVER;FILTER14 NEVER;  
 FILTER15 NEVER;FILTER16 NEVER;  
 QENABLE 1;QMESSAGE 1

### :STATUS:CONDition?

**Function** Queries the contents of the condition register.

**Syntax** :STATUS:CONDition?

**Example** :STATUS:CONDITION -> 16

**Description** For details on the condition register, see chapter 6, "Status Report."

### :STATUS:EES

**Function** Sets the extended event enable register or queries the current setting.

**Syntax** :STATUS:EES <Register>  
 :STATUS:EES?  
 <Register> = 0 to 65535

**Example** :STATUS:EES 257  
 :STATUS:EES? -> :STATUS:EES 257

**Description** For details on the extended event enable register, see chapter 6, "Status Report."

### :STATUS:EESR?

**Function** Queries the content of the extended event register and clears the register.

**Syntax** :STATUS:EESR?

**Example** :STATUS:EESR? -> 1

**Description** For details on the extended event register, see chapter 6, "Status Report."

### :STATUS:ERRor?

**Function** Queries the error code and message information (top of the error queue).

**Syntax** :STATUS:ERRor?

**Example** :STATUS:ERROR? ->  
 113,"Undefined header"

### :STATUS:FILTer<x>

**Function** Sets the transition filter or queries the current setting.

**Syntax** :STATUS:FILTer<x> {RISE|FALL|BOTH|NEVER}  
 :STATUS:FILTer<x>?  
 <x> = 1 to 16

**Example** :STATUS:FILTer2 RISE  
 :STATUS:FILTer2? -> :STATUS:FILTer2  
 RISE

**Description** For details on the transition filter, see chapter 6, "Status Report."

### :STATUS:QENable

**Function** Sets whether to store messages other than errors to the error queue or queries the current setting.

**Syntax** :STATUS:QENable {<Boolean>}  
 :STATUS:QENable?

**Example** :STATUS:QENABLE ON  
 :STATUS:QENABLE? -> :STATUS:QENABLE 1

### :STATUS:QMESsage

**Function** Sets whether or not to attach message information to the response to the "STATUS:ERRor?" query or queries the current setting.

**Syntax** :STATUS:QMESsage {<Boolean>}  
 :STATUS:QMESsage?

**Example** :STATUS:QMESsage OFF  
 :STATUS:QMESsage? -> :STATUS:QMESsage 0

### :STATUS:SPOLL? (Serial Poll)

**Function** Executes serial polling.

**Syntax** :STATUS:SPOLL?

**Example** :STATUS:SPOLL? -> STATUS:SPOLL 0

**Description** This command is dedicated to the Ethernet interface (option).

## 5.25 STOP Group

### **:STOP**

Function Stops the waveform acquisition.

Syntax :STOP

Example :STOP

Description Use STARt to start the waveform acquisition.



## 5.26 SYSTem Group

### : SYSTem?

Function Queries all settings related to the system.  
 Syntax :SYSTem?  
 Example :SYSTem? -> :SYSTEM:CLICK 1;CLOCK:  
 DTIME "2005/05/06",  
 "11:37:32", "09:00";MODE 1;:SYSTEM:  
 LANGUAGE JAPANESE;MLANGUAGE ENGLISH

### : SYSTem: BATTery?

Function Queries the condition of the internal lithium battery.  
 Syntax :SYSTem: BATTery?  
 Example :SYSTEM: BATTERY? -> :SYSTEM: BATTERY 1  
 Description If the lithium battery is normal, 1 is returned. If the battery is dead, 0 is returned.

### : SYSTem: CLICk

Function Turns ON/OFF the click sound or queries the current setting.  
 Syntax :SYSTem: CLICk {<Boolean>}  
 :SYSTem: CLICk?  
 Example :SYSTEM: CLICk ON  
 :SYSTEM: CLICk? -> :SYSTEM: CLICk 1

### : SYSTem: CLOCk?

Function Queries all settings related to the date, time, and time difference with respect to GMT.  
 Syntax :SYSTem: CLOCk?  
 Example :SYSTEM: CLOCk? -> :SYSTEM: CLOCk:  
 DTIME "2005/05/06", "11:37:32", "09:00";  
 MODE 1

### : SYSTem: CLOCk: DTIME

Function Sets the date, time, and time difference with respect to GMT or queries the current setting.  
 Syntax :SYSTem: CLOCk: DTIME  
 {<String>, <String>, <String>}  
 :SYSTem: CLOCk: DTIME?  
 The left <String> = YYYY/MM/DD. See the DL9000 User's Manual.  
 The center <String> = HH:MM:SS. See the DL9000 User's Manual.  
 The right <String> = HH:MM. See the DL9000 User's Manual.  
 Example :SYSTEM: CLOCk: DTIME "2005/05/06",  
 "11:37:32", "09:00"  
 :SYSTEM: CLOCk: DTIME? ->  
 :SYSTEM: CLOCk: DTIME "2005/05/06",  
 "11:37:32", "09:00"

### : SYSTem: CLOCk: MODE

Function Turns ON/OFF the date, time, and time difference with respect to GMT or queries the current setting.  
 Syntax :SYSTem: CLOCk: MODE {<Boolean>}  
 :SYSTem: CLOCk: MODE?  
 Example :SYSTEM: CLOCk: MODE ON  
 :SYSTEM: CLOCk: MODE? ->  
 :SYSTEM: CLOCk: MODE 1

### : SYSTem: FORMat: IMEMory [ : EXECute]

Function Formats the internal memory.  
 Syntax :SYSTem: FORMat: IMEMory [ : EXECute]  
 Example :SYSTEM: FORMat: IMEMORY: EXECUTE

### : SYSTem: FORMat: IHDD [ : EXECute]

Function Formats the internal hard disk.  
 Syntax :SYSTem: FORMat: IHDD [ : EXECute]  
 Example :SYSTEM: FORMat: IHDD: EXECUTE

### : SYSTem: FORMat: SDElete [ : EXECute] (Sure Delete)

Function Clears and formats the internal memory.  
 Syntax :SYSTem: FORMat: SDElete [ : EXECute]  
 Example :SYSTEM: FORMat: SDELETE: EXECUTE

### : SYSTem: LANGUage

Function Sets the message language or queries the current setting.  
 Syntax :SYSTem: LANGUage {CHINese|ENGLish|  
 JAPANese}  
 :SYSTem: LANGUage?  
 Example :SYSTEM: LANGUage JAPANESE  
 :SYSTEM: LANGUage? ->  
 :SYSTEM: LANGUage JAPANESE

### : SYSTem: MLANGUage

Function Sets the menu language or queries the current setting.  
 Syntax :SYSTem: MLANGUage {CHINese|ENGLish}  
 :SYSTem: MLANGUage?  
 Example :SYSTEM: MLANGUage ENGLISH  
 :SYSTEM: MLANGUage? ->  
 :SYSTEM: MLANGUage ENGLISH

### : SYSTem: OVERview

Function Displays system information.  
 Syntax :SYSTem: OVERview  
 Example :SYSTEM: OVERVIEW

## 5.27 TELecomtest Group

### :TELecomtest?

Function Queries all settings related to the telecom test.

Syntax :TELecomtest?

Example :TELECOMTEST? -> :TELECOMTEST:  
 CATEGORY MASK;DISPLAY 0;EYEPATTERN:  
 DBERATE:STATE 0;:TELECOMTEST:  
 EYEPATTERN:EHEIGHT:STATE 0;:  
 TELECOMTEST:EYEPATTERN:EWIDTH:STATE 0;:  
 TELECOMTEST:EYEPATTERN:FALL:STATE 0;:  
 TELECOMTEST:EYEPATTERN:JITTER:STATE 0;:  
 TELECOMTEST:EYEPATTERN:PCROSSING:  
 STATE 0;:TELECOMTEST:EYEPATTERN:  
 PDUTYCYCLE:STATE 0;:TELECOMTEST:  
 EYEPATTERN:QFACTOR:STATE 0;:  
 TELECOMTEST:EYEPATTERN:RISE:STATE 0;:  
 TELECOMTEST:EYEPATTERN:SDBASE:STATE 0;:  
 TELECOMTEST:EYEPATTERN:SDTOP:STATE 0;:  
 TELECOMTEST:EYEPATTERN:T1CROSSING:  
 STATE 0;:TELECOMTEST:EYEPATTERN:  
 T2CROSSING:STATE 0;:TELECOMTEST:  
 EYEPATTERN:TLEVELS:MODE PERCENT;  
 PERCENT 90,10;  
 UNIT 1.000E+00,0.000E+00;:TELECOMTEST:  
 EYEPATTERN:VBASE:STATE 0.....

### :TELecomtest:CAteGory

Function Sets the telecom test type or queries the current setting.

Syntax :TELecomtest:CAteGory {EYEPattern|MASK}  
 :TELecomtest:CAteGory?

Example :TELECOMTEST:CAteGory EYEPATTERN  
 :TELECOMTEST:CAteGory? ->  
 :TELECOMTEST:CAteGory EYEPATTERN

### :TELecomtest:DISPlay

Function Turns ON/OFF the telecom test display or queries the current setting.

Syntax :TELecomtest:DISPlay {<Boolean>}  
 :TELecomtest:DISPlay?

Example :TELECOMTEST:DISPlay ON  
 :TELECOMTEST:DISPlay? ->  
 :TELECOMTEST:DISPlay 1

### :TELecomtest:EYEPattern?

Function Queries all settings related to the eye pattern.

Syntax :TELecomtest:EYEPattern?

Example :TELECOMTEST:EYEPATTERN? ->  
 :TELECOMTEST:EYEPATTERN:DBERATE:  
 STATE 1;:TELECOMTEST:EYEPATTERN:  
 EHEIGHT:STATE 1;:TELECOMTEST:  
 EYEPATTERN:EWIDTH:STATE 1;:  
 TELECOMTEST:EYEPATTERN:FALL:STATE 1;:  
 TELECOMTEST:EYEPATTERN:JITTER:STATE 1;:  
 EYEPATTERN:QFACTOR:STATE 1;:  
 TELECOMTEST:EYEPATTERN:RISE:STATE 1;:  
 TELECOMTEST:EYEPATTERN:SDBASE:STATE 1;:  
 TELECOMTEST:EYEPATTERN:SDTOP:STATE 1;:  
 TELECOMTEST:EYEPATTERN:T1CROSSING:  
 STATE 1;:TELECOMTEST:EYEPATTERN:  
 T2CROSSING:STATE 1;:TELECOMTEST:  
 EYEPATTERN:TLEVELS:MODE PERCENT;  
 PERCENT 90,10;  
 UNIT 1.000E+00,0.000E+00;:TELECOMTEST:  
 EYEPATTERN:VBASE:STATE 1;:TELECOMTEST:  
 EYEPATTERN:VCROSSING:STATE 1;:  
 TELECOMTEST:EYEPATTERN:VDARK 1;VTOP:  
 STATE 1

### :TELecomtest:EYEPattern:ALL

Function Turns ON/OFF all eye pattern parameters.

Syntax :TELecomtest:EYEPattern:ALL {<Boolean>}

Example :TELECOMTEST:EYEPATTERN:ALL ON

### :TELecomtest:EYEPattern:<Parameter>?

Function Queries all settings related to the waveform parameter of the eye pattern.

Syntax :TELecomtest:EYEPattern:<Parameter>?  
 <Parameter> = {DBERate|EHEight|EWIDth|  
 FALL|JITTer|PCROSSing|PDUTYcycle|  
 QFACTOR|RISE|SDBase|SDTop|T1Crossing|  
 T2Crossing|VBAsE|VCrossing|VTOp}

Example (The following is an example for DBERate.)  
 :TELECOMTEST:EYEPATTERN:DBERATE? ->  
 :TELECOMTEST:EYEPATTERN:DBERATE:STATE 1

Description • For the relationship between communication commands and parameters used by the DL9000, see appendix 4.  
 • For parameter details, see the DL9000 User's Manual.

**:TELEcomtest:EYEPattern:<Parameter>:****STATE**

Function Turns ON/OFF the waveform parameter of the eye pattern or queries the current setting.

Syntax :TELEcomtest:EYEPattern:<Parameter>:  
STATE {<Boolean>}  
:TELEcomtest:EYEPattern:<Parameter>:  
STATE?

<Parameter> = {DBERate|EHEight|EWIDTH|  
FALL|JITTER|PCROSSING|PDUTYcycle|  
QFACTOR|RISSEDBase|SDTop|T1CROSSING|  
T2CROSSING|VBASe|VCROSSING|VTOP}  
Example (The following is an example for DBERate.)  
:TELECOMTEST:EYEPATTERN:DBERATE:  
STATE ON  
:TELECOMTEST:EYEPATTERN:DBERATE:STATE?  
-> :TELECOMTEST:EYEPATTERN:DBERATE:  
STATE 1

**:TELEcomtest:EYEPattern:<Parameter>:****VALUE?**

Function Queries the waveform parameter value of the eye pattern.

Syntax :TELEcomtest:EYEPattern:<Parameter>:  
VALUE?

<Parameter> = {DBERate|EHEight|EWIDTH|  
FALL|JITTER|PCROSSING|PDUTYcycle|  
QFACTOR|RISSEDBase|SDTop|T1CROSSING|  
T2CROSSING|VBASe|VCROSSING|VTOP}  
Example (The following is an example for DBERate.)  
:TELECOMTEST:EYEPATTERN:DBERATE:VALUE?  
-> :TELECOMTEST:EYEPATTERN:DBERATE:  
VALUE 1.000E+00

**:TELEcomtest:EYEPattern:TLEVELs?**

Function Queries all settings related to the threshold level of the eye pattern.

Syntax :TELEcomtest:EYEPattern:TLEVELs?

Example :TELECOMTEST:EYEPATTERN:TLEVELS? ->  
:TELECOMTEST:EYEPATTERN:TLEVELS:  
MODE PERCENT;PERCENT 90,10;  
UNIT 1.000E+00,0.000E+00

**:TELEcomtest:EYEPattern:TLEVELs:MODE**

Function Sets the unit of the threshold level of the eye pattern or queries the current setting.

Syntax :TELEcomtest:EYEPattern:TLEVELs:  
MODE {PERCENT|UNIT}  
:TELEcomtest:EYEPattern:TLEVELs:MODE?

Example :TELECOMTEST:EYEPATTERN:TLEVELS:  
MODE PERCENT  
:TELECOMTEST:EYEPATTERN:TLEVELS:MODE?  
-> :TELECOMTEST:EYEPATTERN:TLEVELS:  
MODE PERCENT

**:TELEcomtest:EYEPattern:TLEVELs:****PERCENT**

Function Sets the threshold level of the eye pattern as a percentage or queries the current setting.

Syntax :TELEcomtest:EYEPattern:TLEVELs:  
PERCENT {<NRf>,<NRf>}  
:TELEcomtest:EYEPattern:TLEVELs:  
PERCENT?  
<NRf> = 0 to 100 (%)

Example :TELECOMTEST:EYEPATTERN:TLEVELS:  
PERCENT 90,10  
:TELECOMTEST:EYEPATTERN:TLEVELS:  
PERCENT? -> :TELECOMTEST:EYEPATTERN:  
TLEVELS:PERCENT 90,10

**:TELEcomtest:EYEPattern:TLEVELs:UNIT**

Function Sets the threshold level of the eye pattern in UNIT or queries the current setting.

Syntax :TELEcomtest:EYEPattern:TLEVELs:  
UNIT {<NRf>,<NRf>|<Voltage>,<Voltage>|  
<Current>,<Current>}  
:TELEcomtest:EYEPattern:TLEVELs:UNIT?  
<NRf>, <Voltage>, and <Current> = See the DL9000  
User's Manual.

Example :TELECOMTEST:EYEPATTERN:TLEVELS:  
UNIT 1,0  
:TELECOMTEST:EYEPATTERN:TLEVELS:UNIT?  
-> :TELECOMTEST:EYEPATTERN:TLEVELS:  
UNIT 1.000E+00,0.000E+00

**:TELEcomtest:EYEPattern:VDARK**

Function Sets the dark level (zero light level) or queries the current setting.

Syntax :TELEcomtest:EYEPattern:VDARK {<NRf>|  
<Voltage>|<Current>}  
:TELEcomtest:EYEPattern:VDARK?  
<NRf>, <Voltage>, and <Current> = See the DL9000  
User's Manual.

Example :TELECOMTEST:EYEPATTERN:VDARK 1.000E+00  
:TELECOMTEST:EYEPATTERN:VDARK? ->  
:TELECOMTEST:EYEPATTERN:VDARK 1.000E+00

**:TELEcomtest:MASK?**

Function Queries all settings related to the mask test.

Syntax :TELEcomtest:MASK?

Example :TELECOMTEST:MASK? -> :TELECOMTEST:  
 MASK:ELEMENT1:PSPCOUNT:STATE 1;:  
 TELECOMTEST:MASK:ELEMENT1:PWCOUNT:  
 STATE 1;:TELECOMTEST:MASK:ELEMENT1:  
 SPCOUNT:STATE 1;:TELECOMTEST:MASK:  
 ELEMENT1:WCOUNT:STATE 1;:TELECOMTEST:  
 MASK:ELEMENT2:PSPCOUNT:STATE 1;:  
 TELECOMTEST:MASK:ELEMENT2:PWCOUNT:  
 STATE 1;:TELECOMTEST:MASK:ELEMENT2:  
 SPCOUNT:STATE 1;:TELECOMTEST:MASK:  
 ELEMENT2:WCOUNT:STATE 1;:TELECOMTEST:  
 MASK:ELEMENT3:PSPCOUNT:STATE 1;:  
 TELECOMTEST:MASK:ELEMENT3:PWCOUNT:  
 STATE 1;:TELECOMTEST:MASK:ELEMENT3:  
 SPCOUNT:STATE 1;:TELECOMTEST:MASK:  
 ELEMENT3:WCOUNT:STATE 1;:TELECOMTEST:  
 MASK:ELEMENT4:PSPCOUNT:STATE 1;:  
 TELECOMTEST:MASK:ELEMENT4:PWCOUNT:  
 STATE 1;:TELECOMTEST:MASK:ELEMENT4:  
 SPCOUNT:STATE 1;:TELECOMTEST:MASK:  
 ELEMENT4:WCOUNT:STATE 1

**:TELEcomtest:MASK:ELEMENT<x>?**

Function Queries all settings related to the element used in the mask test.

Syntax :TELEcomtest:MASK:ELEMENT<x>?  
 <x> = 1 to 4

Example :TELECOMTEST:MASK:ELEMENT1? ->  
 :TELECOMTEST:MASK:ELEMENT1:PSPCOUNT:  
 STATE 1;:TELECOMTEST:MASK:ELEMENT1:  
 PWCOUNT:STATE 1;:TELECOMTEST:MASK:  
 ELEMENT1:SPCOUNT:STATE 1;:TELECOMTEST:  
 MASK:ELEMENT1:WCOUNT:STATE 1

**:TELEcomtest:MASK:ELEMENT<x>:ALL**

Function Turns ON/OFF all items of the element.

Syntax :TELEcomtest:MASK:ELEMENT<x>:ALL  
 {<Boolean>}  
 <x> = 1 to 4

Example :TELECOMTEST:MASK:ELEMENT1:ALL ON

**:TELEcomtest:MASK:ELEMENT<x>:****PSPCount? (Sample Point Count %)**

Function Queries the settings related to the error rate for the number of sampled data points of the element.

Syntax :TELEcomtest:MASK:ELEMENT<x>:PSPCount?  
 <x> = 1 to 4

Example :TELECOMTEST:MASK:ELEMENT1:PSPCOUNT? ->  
 :TELECOMTEST:MASK:ELEMENT1:PSPCOUNT:  
 STATE 1

**:TELEcomtest:MASK:ELEMENT<x>:****PSPCount:STATE**

Function Turns ON/OFF the measurement of the error rate for the number of sampled data points of the element or queries the current setting.

Syntax :TELEcomtest:MASK:ELEMENT<x>:PSPCount:  
 STATE {<Boolean>}  
 :TELEcomtest:MASK:ELEMENT<x>:PSPCount:  
 STATE?  
 <x> = 1 to 4

Example :TELECOMTEST:MASK:ELEMENT1:PSPCOUNT:  
 STATE ON  
 :TELECOMTEST:MASK:ELEMENT1:PSPCOUNT:  
 STATE? -> :TELECOMTEST:MASK:ELEMENT1:  
 PSPCOUNT:STATE 1

**:TELEcomtest:MASK:ELEMENT<x>:****PSPCount:VALUE?**

Function Queries the error rate for the number of sampled data points of the element.

Syntax :TELEcomtest:MASK:ELEMENT<x>:PSPCount:  
 VALUE?  
 <x> = 1 to 4

Example :TELECOMTEST:MASK:ELEMENT1:PSPCOUNT:  
 VALUE? -> :TELECOMTEST:MASK:ELEMENT1:  
 PSPCOUNT:VALUE 1.000E+00

**:TELEcomtest:MASK:ELEMENT<x>:****PWCount? (Wave Count %)**

Function Queries the settings related to the error rate for the acquisition count of the element.

Syntax :TELEcomtest:MASK:ELEMENT<x>:PWCount?  
 <x> = 1 to 4

Example :TELECOMTEST:MASK:ELEMENT1:PWCOUNT? ->  
 :TELECOMTEST:MASK:ELEMENT1:PWCOUNT:  
 STATE 1

## 5.27 TELEcomtest Group

### **:TELEcomtest:MASK:ELEMENT<x>:**

#### **PWCount:STATE**

Function Turns ON/OFF the measurement of the error rate for the acquisition count of the element or queries the current setting.

Syntax :TELEcomtest:MASK:ELEMENT<x>:PWCount:STATE {<Boolean>}  
:TELEcomtest:MASK:ELEMENT<x>:PWCount:STATE?

Example :TELECOMTEST:MASK:ELEMENT1:PWCOUNT:STATE ON  
:TELECOMTEST:MASK:ELEMENT1:PWCOUNT:STATE? -> :TELECOMTEST:MASK:ELEMENT1:PWCOUNT:STATE 1

### **:TELEcomtest:MASK:ELEMENT<x>:**

#### **PWCount:VALUE?**

Function Queries the error rate for the acquisition count of the element.

Syntax :TELEcomtest:MASK:ELEMENT<x>:PWCount:VALUE?

Example :TELECOMTEST:MASK:ELEMENT1:PWCOUNT:VALUE? -> :TELECOMTEST:MASK:ELEMENT1:PWCOUNT:VALUE 1.000E+00

### **:TELEcomtest:MASK:ELEMENT<x>:**

#### **SPCount? (Sample Point Count)**

Function Queries the settings related to the number of sampled data points for the element that results in error.

Syntax :TELEcomtest:MASK:ELEMENT<x>:SPCount?

Example :TELECOMTEST:MASK:ELEMENT1:SPCOUNT? -> :TELECOMTEST:MASK:ELEMENT1:SPCOUNT:STATE 1

### **:TELEcomtest:MASK:ELEMENT<x>:**

#### **SPCount:STATE**

Function Turns ON/OFF the measurement of the number of sampled data points for the element that results in error or queries the current setting.

Syntax :TELEcomtest:MASK:ELEMENT<x>:SPCount:STATE {<Boolean>}  
:TELEcomtest:MASK:ELEMENT<x>:SPCount:STATE?

Example :TELECOMTEST:MASK:ELEMENT1:SPCOUNT:STATE ON  
:TELECOMTEST:MASK:ELEMENT1:SPCOUNT:STATE? -> :TELECOMTEST:MASK:ELEMENT1:SPCOUNT:STATE 1

### **:TELEcomtest:MASK:ELEMENT<x>:**

#### **SPCount:VALUE?**

Function Queries the number of sampled data points for the element that resulted in error.

Syntax :TELEcomtest:MASK:ELEMENT<x>:SPCount:VALUE?

Example :TELECOMTEST:MASK:ELEMENT1:SPCOUNT:VALUE? -> :TELECOMTEST:MASK:ELEMENT1:SPCOUNT:VALUE 1

### **:TELEcomtest:MASK:ELEMENT<x>:WCount?**

#### **(Wave Count)**

Function Queries the settings related to the acquisition count for the element that results in error.

Syntax :TELEcomtest:MASK:ELEMENT<x>:WCount?

Example :TELECOMTEST:MASK:ELEMENT1:WCOUNT? -> :TELECOMTEST:MASK:ELEMENT1:WCOUNT:STATE 1

### **:TELEcomtest:MASK:ELEMENT<x>:WCount:**

#### **STATE**

Function Turns ON/OFF the measurement of the acquisition count for the element that results in error or queries the current setting.

Syntax :TELEcomtest:MASK:ELEMENT<x>:WCount:STATE {<Boolean>}  
:TELEcomtest:MASK:ELEMENT<x>:WCount:STATE?

Example :TELECOMTEST:MASK:ELEMENT1:WCOUNT:STATE ON  
:TELECOMTEST:MASK:ELEMENT1:WCOUNT:STATE? -> :TELECOMTEST:MASK:ELEMENT1:WCOUNT:STATE 1

### **:TELEcomtest:MASK:ELEMENT<x>:**

#### **WCount:VALUE?**

Function Queries the acquisition count for the element that resulted in error.

Syntax :TELEcomtest:MASK:ELEMENT<x>:WCount:VALUE?

Example :TELECOMTEST:MASK:ELEMENT1:WCOUNT:VALUE? -> :TELECOMTEST:MASK:ELEMENT1:WCOUNT:VALUE 1

**:TELecomtest:MMODE**

Function Turns ON/OFF the computed waveform or queries the current setting.

Syntax :TELecomtest:MMODE {<Boolean>}  
:TELecomtest:MMODE?

Example :TELECOMTEST:MMODE ON  
:TELECOMTEST:MMODE? ->  
:TELECOMTEST:MMODE 1

**:TELecomtest:TRACe**

Function Sets the source trace of the telecom test or queries the current setting.

Syntax :TELecomtest:TRACe {<NRf>}  
:TELecomtest:TRACe?  
<NRf> = 1 to 8

Example :TELECOMTEST:TRACE 1  
:TELECOMTEST:TRACE? ->  
:TELECOMTEST:TRACE 1

**:TELecomtest:TRANge (Time Range)**

Function Sets the measurement range of the telecom test or queries the current setting.

Syntax :TELecomtest:TRANge {<NRf>,<NRf>}  
:TELecomtest:TRANge?  
<NRf> = -5 to 5 (div)

Example :TELECOMTEST:TRANGE -5,0  
:TELECOMTEST:TRANGE? -> :TELECOMTEST:  
TRANGE 0.000E+00,-5.000E+00

**:TELecomtest:WINDow**

Function Sets the measurement source window of the telecom test or queries the current setting.

Syntax :TELecomtest:WINDow {MAIN|Z1|Z2}  
:TELecomtest:WINDow?

Example :TELECOMTEST:WINDOW MAIN  
:TELECOMTEST:WINDOW? ->  
:TELECOMTEST:WINDOW MAIN

## 5.28 TIMEbase Group

### **:TIMEbase?**

Function Queries all settings related to the time base.

Syntax :TIMEbase?

Example :TIMEBASE? -> :TIMEBASE:TDIV 1.000E-06

### **:TIMEbase:SRATE? (Sample RATE)**

Function Queries the sample rate or queries the current setting.

Syntax :TIMEbase:SRATE?

Example :TIMEBASE:SRATE? ->  
:TIMEBASE:SRATE 125.0E+06

### **:TIMEbase:TDIV**

Function Sets the T/div value or queries the current setting.

Syntax :TIMEbase:TDIV {<Time>}

:TIMEbase:TDIV?

<Time> = 500 ps to 50 s

Example :TIMEBASE:TDIV 1NS  
:TIMEBASE:TDIV? ->  
:TIMEBASE:TDIV 1.000E-06

## 5.29 TRIGger Group

### :TRIGger?

Function Queries all settings related to the trigger.

Syntax :TRIGger?

```
Example :TRIGGER? -> :TRIGGER:ACTION:
ACQCOUNT 1;BUZZER 0;HCOPY 1;
MODE ACONDITION;SAVE 1;:TRIGGER:
TYPE EICYCLE;CLOCK:SOURCE 1;
POLARITY RISE;:TRIGGER:DELAY:EDGE:COUNT
COUNT 1;:TRIGGER:DELAY:MODE 1;
POLARITY FALL;SOURCE 4;TIME 1.000E+00;
TYPE EDGE:COUNT;:TRIGGER:EINTERVAL:
EVENT1:TYPE EDGE;CLOCK:SOURCE 1;
POLARITY FALL;:TRIGGER:EINTERVAL:
EVENT1:ESTATE:SOURCE 1;POLARITY FALL;:
TRIGGER:EINTERVAL:EVENT1:I2CBUS:ADATA:
BIT10ADDRESS:PATTERN "1011101111";:
TRIGGER:EINTERVAL:EVENT1:I2CBUS:ADATA:
BIT7ADDRESS:PATTERN "11011110";:
TRIGGER:EINTERVAL:EVENT1:I2CBUS:ADATA:
BIT7APSUB:ADDRESS:PATTERN "10101011";:
TRIGGER:EINTERVAL:EVENT1:I2CBUS:ADATA:
BIT7APSUB:SADDRESS:PATTERN "11001101";:
TRIGGER:EINTERVAL:EVENT1:I2CBUS:ADATA:
TYPE BIT10ADDRESS;:TRIGGER:EINTERVAL:
EVENT1:I2CBUS:CLOCK:SOURCE 1;:TRIGGER:
EINTERVAL:EVENT1:I2CBUS:DATA:BYTE 1;
CONDITION TRUE;DPOSITION 1;MODE 1;
PATTERN1 "10101011";
PATTERN2 "10101010";
PATTERN3 "10101111";
PATTERN4 "10101011";PMODE DONTCARE;
SOURCE 1;:TRIGGER:EINTERVAL:EVENT1:
I2CBUS:GCALL:BIT7MADDRESS:
PATTERN "1010101";:TRIGGER:EINTERVAL:
EVENT1:I2CBUS:GCALL:
SBYTE BIT7MADDRESS;:TRIGGER:EINTERVAL:
EVENT1:I2CBUS:MODE ADATA;NAIGNORE:
HSMODE 1;RACCESS 1;SBYTE 1;:TRIGGER:
EINTERVAL:EVENT1:I2CBUS:SBHSMODE:
TYPE HSMODE;:TRIGGER:EINTERVAL:EVENT1:
SPATTERN:BITRATE 1.000E+00;CLOCK:
MODE 1;POLARITY FALL;SOURCE 1;:
TRIGGER:EINTERVAL:EVENT1:SPATTERN:CS 1;
DATA:ACTIVE HIGH;SOURCE 1;:TRIGGER:
EINTERVAL:EVENT1:SPATTERN:LATCH:
SOURCE 1;POLARITY FALL;:TRIGGER:
EINTERVAL:EVENT1:SPATTERN:
PATTERN "1100110111101111".....
```

### :TRIGger:ACTion?

Function Queries all settings related to action-on-trigger.

Syntax :TRIGger:ACTion?

```
Example :TRIGGER:ACTION? ->
:TRIGGER:ACTION:ACQCOUNT 1;BUZZER 0;
HCOPY 1;MODE ACONDITION;SAVE 1
```

### :TRIGger:ACTion:ACQCount

Function Sets the action count of action-on-trigger or queries the current setting.

```
Syntax :TRIGger:ACTion:ACQCount {<NRf>|
INFinite}
:TRIGger:ACTion:ACQCount?
<NRf> = 1 to 1000000
```

```
Example :TRIGGER:ACTION:ACQCOUNT 10
:TRIGGER:ACTION:ACQCOUNT? ->
:TRIGGER:ACTION:ACQCOUNT 10
```

### :TRIGger:ACTion:BUZZer

Function Sets whether to sound a buzzer when an action is activated or queries the current setting.

```
Syntax :TRIGger:ACTion:BUZZer {<Boolean>}
:TRIGger:ACTion:BUZZer?
```

```
Example :TRIGGER:ACTION:BUZZER ON
:TRIGGER:ACTION:BUZZER? ->
:TRIGGER:ACTION:BUZZER 1
```

### :TRIGger:ACTion:HCOPY

Function Sets whether or not to output screen image data (ON/OFF) when an action is activated, or queries the current setting.

```
Syntax :TRIGger:ACTion:HCOPY {<Boolean>}
:TRIGger:ACTion:HCOPY?
```

```
Example :TRIGGER:ACTION:HCOPY ON
:TRIGGER:ACTION:HCOPY? ->
:TRIGGER:ACTION:HCOPY 1
```

### :TRIGger:ACTion:MODE

Function Sets the action-on-trigger mode or queries the current setting.

```
Syntax :TRIGger:ACTion:MODE {ACONdition|OFF}
:TRIGger:ACTion:MODE?
```

```
Example :TRIGGER:ACTION:MODE ACONDITION
:TRIGGER:ACTION:MODE? ->
:TRIGGER:ACTION:MODE ACONDITION
```



## 5.29 TRIGger Group

### **:TRIGger:ACTion:SAVE**

Function Sets whether to save the waveform data to the storage medium (ON/OFF) when an action is activated or queries the current setting.

Syntax :TRIGger:ACTion:SAVE {<Boolean>}  
:TRIGger:ACTion:SAVE?

Example :TRIGGER:ACTION:SAVE ON  
:TRIGGER:ACTION:SAVE? ->  
:TRIGGER:ACTION:SAVE 1

### **:TRIGger:ACTion:START**

Function Starts the action-on-trigger.

Syntax :TRIGger:ACTion:START

Example :TRIGGER:ACTION:START

### **:TRIGger:ACTion:STOP**

Function Stops the action-on-trigger.

Syntax :TRIGger:ACTion:STOP

Example :TRIGGER:ACTION:STOP

### **:TRIGger:CLOCK?**

Function Queries all settings related to the clock channel.

Syntax :TRIGger:CLOCK?

Example :TRIGGER:CLOCK? ->  
:TRIGGER:CLOCK:SOURCE 1;POLARITY RISE

### **:TRIGger:CLOCK:POLarity**

Function Sets the polarity of the clock channel or queries the current setting.

Syntax :TRIGger:CLOCK:POLarity {ENTER|EXIT|  
FALL|RISE}  
:TRIGger:CLOCK:POLarity?

Example :TRIGGER:CLOCK:POLARITY RISE  
:TRIGGER:CLOCK:POLARITY? ->  
:TRIGGER:CLOCK:POLARITY RISE

Description • This command is invalid when  
:TRIGger:CLOCK:SOURce NONE.  
• {ENTER|EXIT} is valid when  
:TRIGger:SOURce:CHANnel<x>:WINDow ON.  
For all other cases, {FALL|RISE} is valid.  
• This command is valid when :TRIGger:TYPE  
PState|State.

### **:TRIGger:CLOCK:SOURce**

Function Sets the source waveform of the clock channel or queries the current setting.

Syntax :TRIGger:CLOCK:SOURce {<NRf>|NONE}  
:TRIGger:CLOCK:SOURce?  
<NRf> = 1 to 4

Example :TRIGGER:CLOCK:SOURCE NONE  
:TRIGGER:CLOCK:SOURCE? ->  
:TRIGGER:CLOCK:SOURCE NONE

Description This command is valid when :TRIGger:TYPE  
PState|State.

### **:TRIGger:DELay?**

Function Queries all settings related to the trigger delay.

Syntax :TRIGger:DELay?

Example :TRIGGER:DELAY? ->  
:TRIGGER:DELAY:EDGEcount:COUNT 1;:  
TRIGGER:DELAY:MODE 1;POLARITY FALL;  
SOURCE 4;TIME 1.000E+00;TYPE EDGEcount

### **:TRIGger:DELay:EDGEcount?**

Function Queries all settings related to edge count of the trigger delay.

Syntax :TRIGger:DELay:EDGEcount?

Example :TRIGGER:DELAY:EDGEcount? ->  
:TRIGGER:DELAY:EDGEcount:COUNT 1

### **:TRIGger:DELay:EDGEcount:COUNT**

Function Sets the edge count value of the trigger delay or queries the current setting.

Syntax :TRIGger:DELay:EDGEcount:COUNT {<NRf>}  
:TRIGger:DELay:EDGEcount:COUNT?  
<NRf> = 1 to 1000000000

Example :TRIGGER:DELAY:EDGEcount:COUNT 1  
:TRIGGER:DELAY:EDGEcount:COUNT? ->  
:TRIGGER:DELAY:EDGEcount:COUNT 1

### **:TRIGger:DELay:MODE**

Function Turns ON/OFF the trigger delay or queries the current setting.

Syntax :TRIGger:DELay:MODE {<Boolean>}  
:TRIGger:DELay:MODE?

Example :TRIGGER:DELAY:MODE ON  
:TRIGGER:DELAY:MODE? ->  
:TRIGGER:DELAY:MODE 1

### **:TRIGger:DELay:POLarity**

Function Sets the edge polarity the trigger delay or queries the current setting.

Syntax :TRIGger:DELay:POLarity {FALL|RISE}  
:TRIGger:DELay:POLarity?

Example :TRIGGER:DELAY:POLARITY RISE  
:TRIGGER:DELAY:POLARITY? ->  
:TRIGGER:DELAY:POLARITY RISE

Description This command is valid when  
:TRIGger:DELay:TYPE EDGEcount|FEADelay.

**:TRIGger:DElay:SOURCE**

Function Sets the edge source the trigger delay or queries the current setting.

Syntax :TRIGger:DElay:SOURCE {<NRf>|EXTErnal}  
:TRIGger:DElay:SOURCE?  
<NRf> = 1 to 4

Example :TRIGGER:DElay:SOURCE 1  
:TRIGGER:DElay:SOURCE? ->  
:TRIGGER:DElay:SOURCE 1

Description This command is valid when  
:TRIGger:DElay:TYPE EDGecount|FEADelay.

**:TRIGger:DElay:TIME**

Function Sets the delay value the trigger delay or queries the current setting.

Syntax :TRIGger:DElay:TIME {<Time>}  
:TRIGger:DElay:TIME?  
<Time> = 0 s to 10 s (5 ps steps)

Example :TRIGGER:DElay:TIME 1S  
:TRIGGER:DElay:TIME? ->  
:TRIGGER:DElay:TIME 1.000E+00

Description This command is valid when  
:TRIGger:DElay:TYPE BYTime|FEADelay.

**:TRIGger:DElay:TYPE**

Function Sets the trigger delay type or queries the current setting.

Syntax :TRIGger:DElay:TYPE {BYTime|EDGecount|FEADelay}  
:TRIGger:DElay:TYPE?

Example :TRIGGER:DElay:TYPE BYTIME  
:TRIGGER:DElay:TYPE? ->  
:TRIGGER:DElay:TYPE BYTIME

**:TRIGger:EINTerval?**

Function Queries all settings related to the event interval.

Syntax :TRIGger:EINTerval?

Example :TRIGGER:EINTERVAL? -> :TRIGGER:  
EINTERVAL:EVENT1:TYPE EDGE;CLOCK:  
SOURCE 1;POLARITY FALL;:TRIGGER:  
EINTERVAL:EVENT1:ESTATE:SOURCE 1;  
POLARITY FALL;:TRIGGER:EINTERVAL:  
EVENT1:I2CBUS:ADATA:BIT10ADDRESS:  
PATTERN "10111011111";:TRIGGER:  
EINTERVAL:EVENT1:I2CBUS:ADATA:  
BIT7ADDRESS:PATTERN "11011110";:  
TRIGGER:EINTERVAL:EVENT1:I2CBUS:ADATA:  
BIT7APSUB:ADDRESS:PATTERN "10101011";:  
TRIGGER:EINTERVAL:EVENT1:I2CBUS:ADATA:  
BIT7APSUB:SADDRESS:PATTERN "11001101";:  
TRIGGER:EINTERVAL:EVENT1:I2CBUS:ADATA:  
TYPE BIT10ADDRESS;:TRIGGER:EINTERVAL:  
EVENT1:I2CBUS:CLOCK:SOURCE 1;:TRIGGER:  
EINTERVAL:EVENT1:I2CBUS:DATA:BYTE 1;  
CONDITION TRUE;DPOSITION 1;MODE 1;  
PATTERN1 "10101011";  
PATTERN2 "10101010";  
PATTERN3 "10101111";  
PATTERN4 "10101011";PMODE DONTCARE;  
SOURCE 1;:TRIGGER:EINTERVAL:EVENT1:  
I2CBUS:GCALL:BIT7MADDRESS:  
PATTERN "1010101";:TRIGGER:EINTERVAL:  
EVENT1:I2CBUS:GCALL:  
SBYTE BIT7MADDRESS;:TRIGGER:EINTERVAL:  
EVENT1:I2CBUS:MODE ADATA;NAIGNORE:  
HSMODE 1;RACCESS 1;SBYTE 1;:TRIGGER:  
EINTERVAL:EVENT1:I2CBUS:SBHSMODE:  
TYPE HSMODE;:TRIGGER:EINTERVAL:EVENT1:  
SPATTERN:BITRATE 1.000E+00;CLOCK:  
MODE 1;POLARITY FALL;SOURCE 1;:  
TRIGGER:EINTERVAL:EVENT1:SPATTERN:CS 1;  
DATA:ACTIVE HIGH;SOURCE 1;:TRIGGER:  
EINTERVAL:EVENT1:SPATTERN:LATCH:  
SOURCE 1;POLARITY FALL;:TRIGGER:  
EINTERVAL:EVENT1:SPATTERN:  
PATTERN "1100110111101111".....

## 5.29 TRIGger Group

### **:TRIGger:EINterval:EVENT<x>?**

Function Queries all settings related to the event.

Syntax :TRIGger:EINterval:EVENT<x>?  
<x> = 1 or 2

Example :TRIGGER:EINTERVAL:EVENT1? ->  
:TRIGGER:EINTERVAL:EVENT1:TYPE EDGE;  
CLOCK:SOURCE 1;POLARITY FALL;:TRIGGER:  
EINTERVAL:EVENT1:ESTATE:SOURCE 1;  
POLARITY FALL;:TRIGGER:EINTERVAL:  
EVENT1:I2CBUS:ADATA:BIT10ADDRESS:  
PATTERN "1011101111";:TRIGGER:E  
INTERVAL:EVENT1:I2CBUS:ADATA:  
BIT7ADDRESS:PATTERN "11011110";:  
TRIGGER:EINTERVAL:EVENT1:I2CBUS:ADATA:  
BIT7APSUB:ADDRESS:PATTERN "10101011";:  
TRIGGER:EINTERVAL:EVENT1:I2CBUS:ADATA:  
BIT7APSUB:SADDRESS:PATTERN "11001101";:  
TRIGGER:EINTERVAL:EVENT1:I2CBUS:ADATA:  
TYPE BIT10ADDRESS;:TRIGGER:EINTERVAL:  
EVENT1:I2CBUS:CLOCK:SOURCE 1;:TRIGGER:  
EINTERVAL:EVENT1:I2CBUS:DATA:BYTE 1;  
CONDITION TRUE;DPOSITION 1;MODE 1;  
PATTERN1 "10101011";  
PATTERN2 "10101010";  
PATTERN3 "10101111";  
PATTERN4 "10101011";PMODE DONTCARE;  
SOURCE 1;:TRIGGER:EINTERVAL:EVENT1:  
I2CBUS:GCALL:BIT7MADDRESS:  
PATTERN "1010101";:TRIGGER:EINTERVAL:  
EVENT1:I2CBUS:GCALL:  
SBYTE BIT7MADDRESS;:TRIGGER:EINTERVAL:  
EVENT1:I2CBUS:MODE ADATA;NAIGNORE:  
HSMODE 1;RACCESS 1;SBYTE 1;:TRIGGER:  
EINTERVAL:EVENT1:I2CBUS:SBHSMODE:  
TYPE HSMODE;:TRIGGER:EINTERVAL:EVENT1:  
SPATTERN:BITRATE 1.000E+00;CLOCK:  
MODE 1;POLARITY FALL;SOURCE 1;:  
TRIGGER:EINTERVAL:EVENT1:SPATTERN:CS 1;  
DATA:ACTIVE HIGH;SOURCE 1;:TRIGGER:  
EINTERVAL:EVENT1:SPATTERN:LATCH:  
SOURCE 1;POLARITY FALL;:TRIGGER:  
EINTERVAL:EVENT1:SPATTERN:  
PATTERN "1100110111101111".....

Description EVENT2 is valid when :TRIGger:TYPE  
EIDelay|EISequence.

### **:TRIGger:EINterval:EVENT<x>:CLOCK?**

Function Queries all settings related to the clock channel of the event.

Syntax :TRIGger:EINterval:EVENT<x>:CLOCK?  
<x> = 1 or 2

Example :TRIGGER:EINTERVAL:EVENT1:CLOCK? ->  
:TRIGGER:EINTERVAL:EVENT1:CLOCK:  
SOURCE 1;POLARITY FALL

### **:TRIGger:EINterval:EVENT<x>:CLOCK: POLarity**

Function Sets the polarity of the clock channel of the event or queries the current setting.

Syntax :TRIGger:EINterval:EVENT<x>:CLOCK:  
POLarity {ENTER|EXIT|FALL|RISE}  
:TRIGger:EINterval:EVENT<x>:CLOCK:  
POLarity?  
<x> = 1 or 2

Example :TRIGGER:EINTERVAL:EVENT1:CLOCK:  
POLARITY FALL  
:TRIGGER:EINTERVAL:EVENT1:CLOCK:  
POLARITY? -> :TRIGGER:EINTERVAL:EVENT1:  
CLOCK:POLARITY FALL

Description • This command is invalid when :TRIGger:  
EINterval:EVENT<x>:CLOCK:SOURCE NONE.  
• {ENTER|EXIT} is valid when  
:TRIGger:SOURCE:CHANNEL<x>:WINDOW ON.  
For all other cases, {FALL|RISE} is valid.  
• This command is valid when  
:TRIGger:EINterval:EVENT<x>:TYPE  
PSTATE|STATE.

### **:TRIGger:EINterval:EVENT<x>:CLOCK: SOURCE**

Function Sets the source waveform of the clock channel of the event or queries the current setting.

Syntax :TRIGger:EINterval:EVENT<x>:CLOCK:  
SOURCE {<Nrf>|NONE}  
:TRIGger:EINterval:EVENT<x>:CLOCK:  
SOURCE?  
<x> = 1 or 2  
<Nrf> = 1 to 4

Example :TRIGGER:EINTERVAL:EVENT1:CLOCK:  
SOURCE 1  
:TRIGGER:EINTERVAL:EVENT1:CLOCK:SOURCE?  
-> :TRIGGER:EINTERVAL:EVENT1:CLOCK:  
SOURCE 1

Description This command is valid when  
:TRIGger:EINterval:EVENT<x>:TYPE  
PSTATE|STATE.

### **:TRIGger:EINterval:EVENT<x>:ESTate?**

Function Queries all settings related to the edge/state trigger.

Syntax :TRIGger:EINterval:EVENT<x>:ESTate?  
<x> = 1 or 2

Example :TRIGGER:EINTERVAL:EVENT1:ESTATE? ->  
:TRIGGER:EINTERVAL:EVENT1:ESTATE:  
SOURCE 1;POLARITY FALL

**:TRIGger:EINterval:EVENT<x>:ESTate:POLarity**

Function Sets the polarity of the edge/state trigger or queries the current setting.

Syntax :TRIGger:EINterval:EVENT<x>:ESTate:POLarity {ENTER|EXIT|FALL|RISE}  
:TRIGger:EINterval:EVENT<x>:ESTate:POLarity?  
<x> = 1 or 2

Example :TRIGGER:EINTERVAL:EVENT1:ESTATE:POLARITY ENTER  
:TRIGGER:EINTERVAL:EVENT1:ESTATE:POLARITY? -> :TRIGGER:EINTERVAL:EVENT1:ESTATE:POLARITY ENTER

Description • This command is valid when  
:TRIGger:EINterval:EVENT<x>:TYPE EDGE and :TRIGger:EINterval:EVENT<x>:ESTate:SOURCE LINE.  
• {ENTER|EXIT} is valid when :TRIGger:EINterval:EVENT<x>:TYPE EDGE|EQUalify and :TRIGger:SOURCE:CHANNEL<x>:WINDOW ON. {FALL|RISE} is valid when :TRIGger:EINterval:EVENT<x>:TYPE EDGE|EQUalify and :TRIGger:SOURCE:CHANNEL<x>:WINDOW OFF.  
• {ENTER|EXIT} is valid when :TRIGger:EINterval:EVENT<x>:TYPE STATE.

**:TRIGger:EINterval:EVENT<x>:ESTate:SOURCE**

Function Sets the trigger source of the edge/state trigger or queries the current setting.

Syntax :TRIGger:EINterval:EVENT<x>:ESTate:SOURCE {<NRF>|EXTERNAL|LINE}  
:TRIGger:EINterval:EVENT<x>:ESTate:SOURCE?  
<x> = 1 or 2  
<NRF> = 1 to 4

Example :TRIGGER:EINTERVAL:EVENT1:ESTATE:SOURCE 1  
:TRIGGER:EINTERVAL:EVENT1:ESTATE:SOURCE? -> :TRIGGER:EINTERVAL:EVENT1:ESTATE:SOURCE 1

Description • This command is valid when  
:TRIGger:EINterval:EVENT<x>:TYPE EDGE|EQUalify.  
• {<NRF>|EXTERNAL|LINE} is valid when :TRIGger:EINterval:EVENT<x>:TYPE EDGE.  
• {<NRF>|EXTERNAL} is valid when :TRIGger:EINterval:EVENT<x>:TYPE EQUalify.

**:TRIGger:EINterval:EVENT<x>:I2CBus?**

Function Queries all settings related to the I<sup>2</sup>C bus trigger of the event.

Syntax :TRIGger:EINterval:EVENT<x>:I2CBus?  
<x> = 1 or 2

Example :TRIGGER:EINTERVAL:EVENT1:I2CBUS? -> :TRIGGER:EINTERVAL:EVENT1:I2CBUS:ADATA:BIT10ADDRESS:PATTERN "1011101111"; :TRIGGER:EINTERVAL:EVENT1:I2CBUS:ADATA:BIT7ADDRESS:PATTERN "11011110"; :TRIGGER:EINTERVAL:EVENT1:I2CBUS:ADATA:BIT7APSUB:ADDRESS:PATTERN "10101011"; :TRIGGER:EINTERVAL:EVENT1:I2CBUS:ADATA:BIT7APSUB:SADDRESS:PATTERN "10101011"; :TRIGGER:EINTERVAL:EVENT1:I2CBUS:ADATA:TYPE BIT10ADDRESS; :TRIGGER:EINTERVAL:EVENT1:I2CBUS:CLOCK:SOURCE 1; :TRIGGER:EINTERVAL:EVENT1:I2CBUS:DATA:BYTE 1; CONDITION TRUE;DPOSITION 1;MODE 1; PATTERN1 "10101011"; PATTERN2 "10101010"; PATTERN3 "10101111"; PATTERN4 "10101011";PMODE DONTCARE; SOURCE 1; :TRIGGER:EINTERVAL:EVENT1:I2CBUS:GCALL:BIT7MADDRESS: PATTERN "1010101"; :TRIGGER:EINTERVAL:EVENT1:I2CBUS:GCALL:SBYTE BIT7MADDRESS; :TRIGGER:EINTERVAL:EVENT1:I2CBUS:MODE ADATA;NAIGNORE: HSMODE 1;RACCESS 1;SBYTE 1; :TRIGGER:EINTERVAL:EVENT1:I2CBUS:SBHSMODE: TYPE HSMODE

**:TRIGger:EINterval:EVENT<x>:I2CBus:ADATa?**

Function Queries all settings related to the address of the I<sup>2</sup>C bus trigger.

Syntax :TRIGger:EINterval:EVENT<x>:I2CBus:ADATa?  
<x> = 1 or 2

Example :TRIGGER:EINTERVAL:EVENT1:I2CBUS:ADATA? -> :TRIGGER:EINTERVAL:EVENT1:I2CBUS:ADATA:BIT10ADDRESS: PATTERN "1011101111"; :TRIGGER:EINTERVAL:EVENT1:I2CBUS:ADATA:BIT7ADDRESS:PATTERN "11011110"; :TRIGGER:EINTERVAL:EVENT1:I2CBUS:ADATA:BIT7APSUB:ADDRESS:PATTERN "10101011"; :TRIGGER:EINTERVAL:EVENT1:I2CBUS:ADATA:BIT7APSUB:SADDRESS:PATTERN "10101011"; :TRIGGER:EINTERVAL:EVENT1:I2CBUS:ADATA:TYPE BIT10ADDRESS

## 5.29 TRIGger Group

### **:TRIGger:EINTerval:EVENT<x>:I2Cbus:ADATa:BIT10address?**

Function Queries all settings related to the 10-bit address of the I<sup>2</sup>C bus trigger.

Syntax :TRIGger:EINTerval:EVENT<x>:I2Cbus:ADATa:BIT10address?  
<x> = 1 or 2

Example :TRIGGER:EINTERVAL:EVENT1:I2CBUS:ADATA:BIT10ADDRESS? -> :TRIGGER:EINTERVAL:EVENT1:I2CBUS:ADATA:BIT10ADDRESS:PATTERN "10111011111"

### **:TRIGger:EINTerval:EVENT<x>:I2Cbus:ADATa:BIT10address:HEXA**

Function Sets the 10-bit address of the I<sup>2</sup>C bus trigger in hexadecimal notation.

Syntax :TRIGger:EINTerval:EVENT<x>:I2Cbus:ADATa:BIT10address:HEXA {<String>}  
<x> = 1 or 2  
<String> = 3 characters by combining '0' to 'F' and 'X' (bit 8 is the R/W bit)

Example :TRIGGER:EINTERVAL:EVENT1:I2CBUS:ADATA:BIT10ADDRESS:HEXA "7AB"

### **:TRIGger:EINTerval:EVENT<x>:I2Cbus:ADATa:BIT10address:PATtern**

Function Sets the 10-bit address of the I<sup>2</sup>C bus trigger in binary notation or queries the current setting.

Syntax :TRIGger:EINTerval:EVENT<x>:I2Cbus:ADATa:BIT10address:PATtern {<String>}  
:TRIGger:EINTerval:EVENT<x>:I2Cbus:ADATa:BIT10address:PATtern?  
<x> = 1 or 2  
<String> = 11 characters by combining '0', '1', and 'X' (bit 8 is the R/W bit)

Example :TRIGGER:EINTERVAL:EVENT1:I2CBUS:ADATA:BIT10ADDRESS:PATTERN "10111011111"  
:TRIGGER:EINTERVAL:EVENT1:I2CBUS:ADATA:BIT10ADDRESS:PATTERN? -> :TRIGGER:EINTERVAL:EVENT1:I2CBUS:ADATA:BIT10ADDRESS:PATTERN "10111011111"

### **:TRIGger:EINTerval:EVENT<x>:I2Cbus:ADATa:BIT7Address?**

Function Queries all settings related to the 7-bit address of the I<sup>2</sup>C bus trigger.

Syntax :TRIGger:EINTerval:EVENT<x>:I2Cbus:ADATa:BIT7Address?  
<x> = 1 or 2

Example :TRIGGER:EINTERVAL:EVENT1:I2CBUS:ADATA:BIT7ADDRESS? -> :TRIGGER:EINTERVAL:EVENT1:I2CBUS:ADATA:BIT7ADDRESS:PATTERN "11011110"

### **:TRIGger:EINTerval:EVENT<x>:I2Cbus:ADATa:BIT7Address:HEXA**

Function Sets the 7-bit address of the I<sup>2</sup>C bus trigger in hexadecimal notation.

Syntax :TRIGger:EINTerval:EVENT<x>:I2Cbus:ADATa:BIT7Address:HEXA {<String>}  
<x> = 1 or 2

<String> = 2 characters by combining '0' to 'F' and 'X' (bit 0 is the R/W bit)

Example :TRIGGER:EINTERVAL:EVENT1:I2CBUS:ADATA:BIT7ADDRESS:HEXA "DE"

### **:TRIGger:EINTerval:EVENT<x>:I2Cbus:ADATa:BIT7Address:PATtern**

Function Sets the 7-bit address of the I<sup>2</sup>C bus trigger in binary notation or queries the current setting.

Syntax :TRIGger:EINTerval:EVENT<x>:I2Cbus:ADATa:BIT7Address:PATtern {<String>}  
:TRIGger:EINTerval:EVENT<x>:I2Cbus:ADATa:BIT7Address:PATtern?  
<x> = 1 or 2

<String> = 8 characters by combining '0', '1', and 'X' (bit 0 is the R/W bit)

Example :TRIGGER:EINTERVAL:EVENT1:I2CBUS:ADATA:BIT7ADDRESS:PATTERN "11011110"  
:TRIGGER:EINTERVAL:EVENT1:I2CBUS:ADATA:BIT7ADDRESS:PATTERN? -> :TRIGGER:EINTERVAL:EVENT1:I2CBUS:ADATA:BIT7ADDRESS:PATTERN "11011110"

### **:TRIGger:EINTerval:EVENT<x>:I2Cbus:ADATa:BIT7APsub?**

Function Queries all settings related to the 7-bit + Sub address of the I<sup>2</sup>C bus trigger.

Syntax :TRIGger:EINTerval:EVENT<x>:I2Cbus:ADATa:BIT7APsub?  
<x> = 1 or 2

Example :TRIGGER:EINTERVAL:EVENT1:I2CBUS:ADATA:BIT7APSUB? -> :TRIGGER:EINTERVAL:EVENT1:I2CBUS:ADATA:BIT7APSUB:ADDRESS:PATTERN "10101011"; :TRIGGER:EINTERVAL:EVENT1:I2CBUS:ADATA:BIT7APSUB:SADDRESS:PATTERN "10101011"

**:TRIGger:EINterval:EVENT<x>:I2Cbus:ADATa:BIT7APsub:ADDRESS?**

Function Queries all settings related to the 7-bit address of the 7-bit + Sub address of the I<sup>2</sup>C bus trigger.

Syntax :TRIGger:EINterval:EVENT<x>:I2Cbus:ADATa:BIT7APsub:ADDRESS?  
<x> = 1 or 2

Example :TRIGGER:EINTERVAL:EVENT1:I2CBUS:ADATA:BIT7APSUB:ADDRESS? -> :TRIGGER:EINTERVAL:EVENT1:I2CBUS:ADATA:BIT7APSUB:ADDRESS:PATTERN "10101011"

**:TRIGger:EINterval:EVENT<x>:I2Cbus:ADATa:BIT7APsub:ADDRESS:HEXA**

Function Sets the 7-bit address of the 7-bit + Sub address of the I<sup>2</sup>C bus trigger in hexadecimal notation.

Syntax :TRIGger:EINterval:EVENT<x>:I2Cbus:ADATa:BIT7APsub:ADDRESS:HEXA {<String>}  
<x> = 1 or 2  
<String> = 2 characters by combining '0' to 'F' and 'X' (bit 0 is the R/W bit)

Example :TRIGGER:EINTERVAL:EVENT1:I2CBUS:ADATA:BIT7APSUB:ADDRESS:HEXA "AB"

**:TRIGger:EINterval:EVENT<x>:I2Cbus:ADATa:BIT7APsub:ADDRESS:PATtern**

Function Sets the 7-bit address of the 7-bit + Sub address of the I<sup>2</sup>C bus trigger in binary notation or queries the current setting.

Syntax :TRIGger:EINterval:EVENT<x>:I2Cbus:ADATa:BIT7APsub:ADDRESS:PATtern {<String>}  
:TRIGger:EINterval:EVENT<x>:I2Cbus:ADATa:BIT7APsub:ADDRESS:PATtern?  
<x> = 1 or 2  
<String> = 8 characters by combining '0', '1', and 'X' (bit 0 is the R/W bit)

Example :TRIGGER:EINTERVAL:EVENT1:I2CBUS:ADATA:BIT7APSUB:ADDRESS:PATTERN "10101011"  
:TRIGGER:EINTERVAL:EVENT1:I2CBUS:ADATA:BIT7APSUB:ADDRESS:PATTERN? ->  
:TRIGGER:EINTERVAL:EVENT1:I2CBUS:ADATA:BIT7APSUB:ADDRESS:PATTERN "10101011"

**:TRIGger:EINterval:EVENT<x>:I2Cbus:ADATa:BIT7APsub:SADDress?**

Function Queries all settings related to the Sub address of the 7-bit + Sub address of the I<sup>2</sup>C bus trigger.

Syntax :TRIGger:EINterval:EVENT<x>:I2Cbus:ADATa:BIT7APsub:SADDress?  
<x> = 1 or 2

Example :TRIGGER:EINTERVAL:EVENT1:I2CBUS:ADATA:BIT7APSUB:SADDRESS? ->  
:TRIGGER:EINTERVAL:EVENT1:I2CBUS:ADATA:BIT7APSUB:SADDRESS:PATTERN "10101011"

**:TRIGger:EINterval:EVENT<x>:I2Cbus:ADATa:BIT7APsub:SADDress:HEXA**

Function Sets the Sub address of the 7-bit + Sub address of the I<sup>2</sup>C bus trigger in hexadecimal notation.

Syntax :TRIGger:EINterval:EVENT<x>:I2Cbus:ADATa:BIT7APsub:SADDress:HEXA {<String>}  
<x> = 1 or 2  
<String> = 2 characters by combining '0' to 'F' and 'X'

Example :TRIGGER:EINTERVAL:EVENT1:I2CBUS:ADATA:BIT7APSUB:SADDRESS:HEXA "EF"

**:TRIGger:EINterval:EVENT<x>:I2Cbus:ADATa:BIT7APsub:SADDress:PATtern**

Function Sets the Sub address of the 7-bit + Sub address of the I<sup>2</sup>C bus trigger in binary notation or queries the current setting.

Syntax :TRIGger:EINterval:EVENT<x>:I2Cbus:ADATa:BIT7APsub:SADDress:PATtern {<String>}  
:TRIGger:EINterval:EVENT<x>:I2Cbus:ADATa:BIT7APsub:SADDress:PATtern?  
<x> = 1 or 2  
<String> = 8 characters by combining '0', '1', and 'X'

Example :TRIGGER:EINTERVAL:EVENT1:I2CBUS:ADATA:BIT7APSUB:SADDRESS:PATTERN "10101011"  
:TRIGGER:EINTERVAL:EVENT1:I2CBUS:ADATA:BIT7APSUB:SADDRESS:PATTERN? ->  
:TRIGGER:EINTERVAL:EVENT1:I2CBUS:ADATA:BIT7APSUB:SADDRESS:PATTERN "10101011"

**:TRIGger:EINterval:EVENT<x>:I2Cbus:ADATa:TYPE**

Function Sets the address type of the I<sup>2</sup>C bus trigger or queries the current setting.

Syntax :TRIGger:EINterval:EVENT<x>:I2Cbus:ADATa:TYPE {BIT10address|BIT7Address|BIT7APsub}  
:TRIGger:EINterval:EVENT<x>:I2Cbus:ADATa:TYPE?  
<x> = 1 or 2

Example :TRIGGER:EINTERVAL:EVENT1:I2CBUS:ADATA:TYPE BIT10ADDRESS  
:TRIGGER:EINTERVAL:EVENT1:I2CBUS:ADATA:TYPE? -> :TRIGGER:EINTERVAL:EVENT1:I2CBUS:ADATA:TYPE BIT10ADDRESS

## 5.29 TRIGger Group

### **:TRIGger:EINTerval:EVENT<x>:I2Cbus:CLOCK?**

Function Queries all settings related to the clock of the I<sup>2</sup>C bus trigger.

Syntax :TRIGger:EINTerval:EVENT<x>:I2Cbus:CLOCK?  
<x> = 1 or 2

Example :TRIGGER:EINTERVAL:EVENT1:I2CBUS:CLOCK?  
-> :TRIGGER:EINTERVAL:EVENT1:I2CBUS:CLOCK:SOURCE 1

### **:TRIGger:EINTerval:EVENT<x>:I2Cbus:CLOCK:SOURCE**

Function Sets the clock trace of the I<sup>2</sup>C bus trigger or queries the current setting.

Syntax :TRIGger:EINTerval:EVENT<x>:I2Cbus:CLOCK:SOURCE {<Nrf>}  
:TRIGger:EINTerval:EVENT<x>:I2Cbus:CLOCK:SOURCE?  
<x> = 1 or 2  
<Nrf> = 1 to 4

Example :TRIGGER:EINTERVAL:EVENT1:I2CBUS:CLOCK:SOURCE 1  
:TRIGGER:EINTERVAL:EVENT1:I2CBUS:CLOCK:SOURCE? -> :TRIGGER:EINTERVAL:EVENT1:I2CBUS:CLOCK:SOURCE 1

### **:TRIGger:EINTerval:EVENT<x>:I2Cbus:DATA?**

Function Queries all settings related to the data of the I<sup>2</sup>C bus trigger.

Syntax :TRIGger:EINTerval:EVENT<x>:I2Cbus:DATA?  
<x> = 1 or 2

Example :TRIGGER:EINTERVAL:EVENT1:I2CBUS:DATA? -> :TRIGGER:EINTERVAL:EVENT1:I2CBUS:DATA:BYTE 1;CONDITION TRUE;DPOSITION 1;MODE 1;PATTERN1 "10101011";PATTERN2 "10101010";PATTERN3 "10101111";PATTERN4 "10101011";PMODE DONTCARE;SOURCE 1

### **:TRIGger:EINTerval:EVENT<x>:I2Cbus:DATA:BYTE**

Function Sets the number of data bytes of the I<sup>2</sup>C bus trigger or queries the current setting.

Syntax :TRIGger:EINTerval:EVENT<x>:I2Cbus:DATA:BYTE {<Nrf>}  
:TRIGger:EINTerval:EVENT<x>:I2Cbus:DATA:BYTE?  
<x> = 1 or 2  
<Nrf> = 1 to 4

Example :TRIGGER:EINTERVAL:EVENT1:I2CBUS:DATA:BYTE 1  
:TRIGGER:EINTERVAL:EVENT1:I2CBUS:DATA:BYTE? -> :TRIGGER:EINTERVAL:EVENT1:I2CBUS:DATA:BYTE 1

### **:TRIGger:EINTerval:EVENT<x>:I2Cbus:DATA:CONDITION**

Function Sets the determination method (match or not match) of the data of the I<sup>2</sup>C bus trigger or queries the current setting.

Syntax :TRIGger:EINTerval:EVENT<x>:I2Cbus:DATA:CONDITION {FALSE|TRUE}  
:TRIGger:EINTerval:EVENT<x>:I2Cbus:DATA:CONDITION?  
<x> = 1 or 2

Example :TRIGGER:EINTERVAL:EVENT1:I2CBUS:DATA:CONDITION TRUE  
:TRIGGER:EINTERVAL:EVENT1:I2CBUS:DATA:CONDITION? -> :TRIGGER:EINTERVAL:EVENT1:I2CBUS:DATA:CONDITION TRUE

### **:TRIGger:EINTerval:EVENT<x>:I2Cbus:DATA:DPOSITION**

Function Sets the position for comparing the data pattern of the I<sup>2</sup>C bus trigger or queries the current setting.

Syntax :TRIGger:EINTerval:EVENT<x>:I2Cbus:DATA:DPOSITION {<Nrf>}  
:TRIGger:EINTerval:EVENT<x>:I2Cbus:DATA:DPOSITION?  
<x> = 1 or 2  
<Nrf> = 0 to 9999

Example :TRIGGER:EINTERVAL:EVENT1:I2CBUS:DATA:DPOSITION 1  
:TRIGGER:EINTERVAL:EVENT1:I2CBUS:DATA:DPOSITION? -> :TRIGGER:EINTERVAL:EVENT1:I2CBUS:DATA:DPOSITION 1

**:TRIGger:EINTerval:EVENT<x>:I2Cbus:****DATA:HEXA<x>**

Function Sets the data of the I<sup>2</sup>C bus trigger in hexadecimal notation.

Syntax :TRIGger:EINTerval:EVENT<x>:I2Cbus:  
DATA:HEXA<x> {<String>}  
<x> of EVENT<x> = 1 or 2  
<x> of HEXA<x> = 1 to 4  
<String> = 2 characters by combining '0' to 'F' and 'X'

Example :TRIGGER:EINTERVAL:EVENT1:I2CBUS:DATA:  
HEXA1 "AB"

**:TRIGger:EINTerval:EVENT<x>:I2Cbus:****DATA:MODE**

Function Enables/Disables the data conditions of the I<sup>2</sup>C bus trigger or queries the current setting.

Syntax :TRIGger:EINTerval:EVENT<x>:I2Cbus:  
DATA:MODE {<Boolean>}  
:TRIGger:EINTerval:EVENT<x>:I2Cbus:  
DATA:MODE?  
<x> = 1 or 2

Example :TRIGGER:EINTERVAL:EVENT1:I2CBUS:DATA:  
MODE ON  
:TRIGGER:EINTERVAL:EVENT1:I2CBUS:DATA:  
MODE? -> :TRIGGER:EINTERVAL:EVENT1:  
I2CBUS:DATA:MODE 1

**:TRIGger:EINTerval:EVENT<x>:I2Cbus:****DATA:PATtern<x>**

Function Sets the data of the I<sup>2</sup>C bus trigger in binary notation or queries the current setting.

Syntax :TRIGger:EINTerval:EVENT<x>:I2Cbus:  
DATA:PATtern<x> {<String>}  
:TRIGger:EINTerval:EVENT<x>:I2Cbus:  
DATA:PATtern<x>?  
<x> of EVENT<x> = 1 or 2  
<x> of PATtern<x> = 1 to 4  
<String> = 8 characters by combining '0,' '1,' and 'X'

Example :TRIGGER:EINTERVAL:EVENT1:I2CBUS:DATA:  
PATTERN1 "10101011"  
:TRIGGER:EINTERVAL:EVENT1:I2CBUS:DATA:  
PATTERN1? -> :TRIGGER:EINTERVAL:EVENT1:  
I2CBUS:DATA:PATTERN1 "10101011"

**:TRIGger:EINTerval:EVENT<x>:I2Cbus:****DATA:PMODE**

Function Sets the pattern comparison start position mode of the data of the I<sup>2</sup>C bus trigger or queries the current setting.

Syntax :TRIGger:EINTerval:EVENT<x>:I2Cbus:  
DATA:PMODE {DONTcare|SElect}  
:TRIGger:EINTerval:EVENT<x>:I2Cbus:  
DATA:PMODE?  
<x> = 1 or 2

Example :TRIGGER:EINTERVAL:EVENT1:I2CBUS:DATA:  
PMODE SELECT  
:TRIGGER:EINTERVAL:EVENT1:I2CBUS:DATA:  
PMODE? -> :TRIGGER:EINTERVAL:EVENT1:  
I2CBUS:DATA:PMODE SELECT

**:TRIGger:EINTerval:EVENT<x>:I2Cbus:****DATA:SOURce**

Function Sets the data trace of the I<sup>2</sup>C bus trigger or queries the current setting.

Syntax :TRIGger:EINTerval:EVENT<x>:I2Cbus:  
DATA:SOURce {<NRf>}  
:TRIGger:EINTerval:EVENT<x>:I2Cbus:  
DATA:SOURce?  
<x> = 1 or 2  
<NRf> = 1 to 4

Example :TRIGGER:EINTERVAL:EVENT1:I2CBUS:  
DATA:SOURCE 1  
:TRIGGER:EINTERVAL:EVENT1:I2CBUS:  
DATA:SOURCE? -> :TRIGGER:EINTERVAL:  
EVENT1:I2CBUS:DATA:SOURCE 1

**:TRIGger:EINTerval:EVENT<x>:I2Cbus:****GCALL?**

Function Queries all settings related to the general call of the I<sup>2</sup>C bus trigger.

Syntax :TRIGger:EINTerval:EVENT<x>:I2Cbus:  
GCALL?  
<x> = 1 or 2

Example :TRIGGER:EINTERVAL:EVENT1:I2CBUS:GCALL?  
-> :TRIGGER:EINTERVAL:EVENT1:I2CBUS:  
GCALL:BIT7MADDRESS:PATTERN "1010101";;  
TRIGGER:EINTERVAL:EVENT1:I2CBUS:GCALL:  
SBYTE BIT7MADDRESS



## 5.29 TRIGger Group

### **:TRIGger:EINTerval:EVENT<x>:I2Cbus:GCALl:BIT7maddress?**

Function Queries all settings related to the 7-bit master address of the general call of the I<sup>2</sup>C bus trigger.

Syntax :TRIGger:EINTerval:EVENT<x>:I2Cbus:GCALl:BIT7maddress?  
<x> = 1 or 2

Example :TRIGGER:EINTERVAL:EVENT1:I2CBUS:GCALL:BIT7MADDRESS? -> :TRIGGER:EINTERVAL:EVENT1:I2CBUS:GCALL:BIT7MADDRESS:PATTERN "1010101"

### **:TRIGger:EINTerval:EVENT<x>:I2Cbus:GCALl:BIT7maddress:HEXA**

Function Sets the 7-bit master address of the general call of the I<sup>2</sup>C bus trigger in hexadecimal notation.

Syntax :TRIGger:EINTerval:EVENT<x>:I2Cbus:GCALl:BIT7maddress:HEXA {<String>}  
<x> = 1 or 2

<String> = 2 characters by combining '0' to 'F' and 'X' (bit 0 is fixed 1)

Example :TRIGGER:EINTERVAL:EVENT1:I2CBUS:GCALL:BIT7MADDRESS:HEXA "AB"

### **:TRIGger:EINTerval:EVENT<x>:I2Cbus:GCALl:BIT7maddress:PATtern**

Function Sets the 7-bit master address of the general call of the I<sup>2</sup>C bus trigger in binary notation or queries the current setting.

Syntax :TRIGger:EINTerval:EVENT<x>:I2Cbus:GCALl:BIT7maddress:PATtern {<String>}  
:TRIGger:EINTerval:EVENT<x>:I2Cbus:GCALl:BIT7maddress:PATtern?  
<x> = 1 or 2

<String> = 7 characters by combining '0,' '1,' and 'X'

Example :TRIGGER:EINTERVAL:EVENT1:I2CBUS:GCALL:BIT7MADDRESS:PATTERN "1010101"  
:TRIGGER:EINTERVAL:EVENT1:I2CBUS:GCALL:BIT7MADDRESS:PATTERN? -> :TRIGGER:EINTERVAL:EVENT1:I2CBUS:GCALL:BIT7MADDRESS:PATTERN "1010101"

### **:TRIGger:EINTerval:EVENT<x>:I2Cbus:GCALl:SBYTE (Second Byte)**

Function Sets the second byte type of the general call of the I<sup>2</sup>C bus trigger or queries the current setting.

Syntax :TRIGger:EINTerval:EVENT<x>:I2Cbus:GCALl:SBYTE {BIT7maddress|DONTcare|H04|H06}

:TRIGger:EINTerval:EVENT<x>:I2Cbus:GCALl:SBYTE?  
<x> = 1 or 2

Example :TRIGGER:EINTERVAL:EVENT1:I2CBUS:GCALL:SBYTE BIT7MADDRESS  
:TRIGGER:EINTERVAL:EVENT1:I2CBUS:GCALL:SBYTE? -> :TRIGGER:EINTERVAL:EVENT1:I2CBUS:GCALL:SBYTE BIT7MADDRESS

### **:TRIGger:EINTerval:EVENT<x>:I2Cbus:MODE**

Function Sets the trigger mode of the I<sup>2</sup>C bus trigger or queries the current setting.

Syntax :TRIGger:EINTerval:EVENT<x>:I2Cbus:MODE {ADATa|ESTart|GCALl|NAIgnore|SBHSmode}

:TRIGger:EINTerval:EVENT<x>:I2Cbus:MODE?  
<x> = 1 or 2

Example :TRIGGER:EINTERVAL:EVENT1:I2CBUS:MODE ADATA  
:TRIGGER:EINTERVAL:EVENT1:I2CBUS:MODE? -> :TRIGGER:EINTERVAL:EVENT1:I2CBUS:MODE ADATA

### **:TRIGger:EINTerval:EVENT<x>:I2Cbus:NAIgnore?**

Function Queries all settings related to the NON ACK ignore mode of the I<sup>2</sup>C bus trigger.

Syntax :TRIGger:EINTerval:EVENT<x>:I2Cbus:NAIgnore?  
<x> = 1 or 2

Example :TRIGGER:EINTERVAL:EVENT1:I2CBUS:NAIGNORE? -> :TRIGGER:EINTERVAL:EVENT1:I2CBUS:NAIGNORE:HSMODE 1;RACCESS 1;SBYTE 1

**:TRIGger:EINterval:EVENT<x>:I2Cbus:NAIGnore:HSMODE**

Function Sets whether to ignore NON ACK in high speed mode of the I<sup>2</sup>C bus trigger or queries the current setting.

Syntax :TRIGger:EINterval:EVENT<x>:I2Cbus:NAIGnore:HSMODE {<Boolean>}  
:TRIGger:EINterval:EVENT<x>:I2Cbus:NAIGnore:HSMODE?  
<x> = 1 or 2

Example :TRIGGER:EINTERVAL:EVENT1:I2CBUS:NAIGNORE:HSMODE ON  
:TRIGGER:EINTERVAL:EVENT1:I2CBUS:NAIGNORE:HSMODE? -> :TRIGGER:EINTERVAL:EVENT1:I2CBUS:NAIGNORE:HSMODE 1

**:TRIGger:EINterval:EVENT<x>:I2Cbus:NAIGnore:RACcess**

Function Sets whether to ignore NON ACK in read access mode of the I<sup>2</sup>C bus trigger or queries the current setting.

Syntax :TRIGger:EINterval:EVENT<x>:I2Cbus:NAIGnore:RACcess {<Boolean>}  
:TRIGger:EINterval:EVENT<x>:I2Cbus:NAIGnore:RACcess?  
<x> = 1 or 2

Example :TRIGGER:EINTERVAL:EVENT1:I2CBUS:NAIGNORE:RACCESS ON  
:TRIGGER:EINTERVAL:EVENT1:I2CBUS:NAIGNORE:RACCESS? ->  
:TRIGGER:EINTERVAL:EVENT1:I2CBUS:NAIGNORE:RACCESS 1

**:TRIGger:EINterval:EVENT<x>:I2Cbus:NAIGnore:SBYTE (Start Byte)**

Function Sets whether to ignore NON ACK in the start byte of the I<sup>2</sup>C bus trigger or queries the current setting.

Syntax :TRIGger:EINterval:EVENT<x>:I2Cbus:NAIGnore:SBYTE {<Boolean>}  
:TRIGger:EINterval:EVENT<x>:I2Cbus:NAIGnore:SBYTE?  
<x> = 1 or 2

Example :TRIGGER:EINTERVAL:EVENT1:I2CBUS:NAIGNORE:SBYTE ON  
:TRIGGER:EINTERVAL:EVENT1:I2CBUS:NAIGNORE:SBYTE? -> :TRIGGER:EINTERVAL:EVENT1:I2CBUS:NAIGNORE:SBYTE 1

**:TRIGger:EINterval:EVENT<x>:I2Cbus:SBHSMODE?**

Function Queries all settings related to the start byte and high speed mode of the I<sup>2</sup>C bus trigger.

Syntax :TRIGger:EINterval:EVENT<x>:I2Cbus:SBHSMODE?  
<x> = 1 or 2

Example :TRIGGER:EINTERVAL:EVENT1:I2CBUS:SBHSMODE? -> :TRIGGER:EINTERVAL:EVENT1:I2CBUS:SBHSMODE:TYPE HSMODE

**:TRIGger:EINterval:EVENT<x>:I2Cbus:SBHSMODE:TYPE**

Function Sets the type of the start byte or high speed mode of the I<sup>2</sup>C bus trigger or queries the current setting.

Syntax :TRIGger:EINterval:EVENT<x>:I2Cbus:SBHSMODE:TYPE {HSMODE|SBYTE}  
:TRIGger:EINterval:EVENT<x>:I2Cbus:SBHSMODE:TYPE?  
<x> = 1 or 2

Example :TRIGGER:EINTERVAL:EVENT1:I2CBUS:SBHSMODE:TYPE HSMODE  
:TRIGGER:EINTERVAL:EVENT1:I2CBUS:SBHSMODE:TYPE? -> :TRIGGER:EINTERVAL:EVENT1:I2CBUS:SBHSMODE:TYPE HSMODE

**:TRIGger:EINterval:EVENT<x>:SPATtern? (Serial Pattern)**

Function Queries all settings related to the serial pattern trigger of the event.

Syntax :TRIGger:EINterval:EVENT<x>:SPATtern?  
<x> = 1 or 2

Example :TRIGGER:EINTERVAL:EVENT1:SPATTERN? ->  
:TRIGGER:EINTERVAL:EVENT1:SPATTERN:BITRATE 1.000E+00;CLOCK:MODE 1;POLARITY FALL;SOURCE 1;:TRIGGER:EINTERVAL:EVENT1:SPATTERN:CS 1;DATA:ACTIVE HIGH;SOURCE 1;:TRIGGER:EINTERVAL:EVENT1:SPATTERN:LATCH:SOURCE 1;POLARITY FALL;:TRIGGER:EINTERVAL:EVENT1:SPATTERN:PATTERN "1100110111101111"

## 5.29 TRIGger Group

### **:TRIGger:EINTerval:EVENT<x>:SPATtern:**

#### **BITRate**

**Function** Sets the bit rate of the serial pattern trigger or queries the current setting.

**Syntax** :TRIGger:EINTerval:EVENT<x>:SPATtern:  
BITRate {<Nrf>}  
:TRIGger:EINTerval:EVENT<x>:SPATtern:  
BITRate?  
<x> = 1 or 2  
<Nrf> = 1 to 50M (bps)

**Example** :TRIGGER:EINTERVAL:EVENT1:SPATTERN:  
BITRATE 1  
:TRIGGER:EINTERVAL:EVENT1:SPATTERN:  
BITRATE? -> :TRIGGER:EINTERVAL:EVENT1:  
SPATTERN:BITRATE 1.000E+00

**Description** This command is valid when  
:TRIGger:EINTerval:EVENT<x>:SPATtern:  
CLOCK:MODE OFF.

### **:TRIGger:EINTerval:EVENT<x>:SPATtern:**

#### **CLEar**

**Function** Clears the entire pattern of the serial pattern trigger (to don't care).

**Syntax** :TRIGger:EINTerval:EVENT<x>:SPATtern:  
CLEar  
<x> = 1 or 2

**Example** :TRIGGER:EINTERVAL:EVENT1:SPATTERN:  
CLEAR

### **:TRIGger:EINTerval:EVENT<x>:SPATtern:**

#### **CLOCK?**

**Function** Queries all settings related to clock of the serial pattern trigger.

**Syntax** :TRIGger:EINTerval:EVENT<x>:SPATtern:  
CLOCK?  
<x> = 1 or 2

**Example** :TRIGGER:EINTERVAL:EVENT1:SPATTERN:  
CLOCK? -> :TRIGGER:EINTERVAL:EVENT1:  
SPATTERN:CLOCK:MODE 1;POLARITY FALL;  
SOURCE 1

### **:TRIGger:EINTerval:EVENT<x>:SPATtern:**

#### **CLOCK:MODE**

**Function** Enables/Disables the clock of the serial pattern trigger or queries the current setting.

**Syntax** :TRIGger:EINTerval:EVENT<x>:SPATtern:  
CLOCK:MODE {<Boolean>}  
:TRIGger:EINTerval:EVENT<x>:SPATtern:  
CLOCK:MODE?  
<x> = 1 or 2

**Example** :TRIGGER:EINTERVAL:EVENT1:SPATTERN:  
CLOCK:MODE ON  
:TRIGGER:EINTERVAL:EVENT1:SPATTERN:  
CLOCK:MODE? -> :TRIGGER:EINTERVAL:  
EVENT1:SPATTERN:CLOCK:MODE 1

### **:TRIGger:EINTerval:EVENT<x>:SPATtern:**

#### **CLOCK:POLarity**

**Function** Sets the polarity of the clock trace of the serial pattern trigger or queries the current setting.

**Syntax** :TRIGger:EINTerval:EVENT<x>:SPATtern:  
CLOCK:POLarity {FALL|RISE}  
:TRIGger:EINTerval:EVENT<x>:SPATtern:  
CLOCK:POLarity?  
<x> = 1 or 2

**Example** :TRIGGER:EINTERVAL:EVENT1:SPATTERN:  
CLOCK:POLARITY FALL  
:TRIGGER:EINTERVAL:EVENT1:SPATTERN:  
CLOCK:POLARITY? -> :TRIGGER:EINTERVAL:  
EVENT1:SPATTERN:CLOCK:POLARITY FALL

**Description** This command is valid when  
:TRIGger:EINTerval:EVENT<x>:SPATtern:  
CLOCK:MODE ON.

### **:TRIGger:EINTerval:EVENT<x>:SPATtern:**

#### **CLOCK:SOURCE**

**Function** Sets the clock trace of the serial pattern trigger or queries the current setting.

**Syntax** :TRIGger:EINTerval:EVENT<x>:SPATtern:  
CLOCK:SOURCE {<Nrf>}  
:TRIGger:EINTerval:EVENT<x>:SPATtern:  
CLOCK:SOURCE?  
<x> = 1 or 2  
<Nrf> = 1 to 4

**Example** :TRIGGER:EINTERVAL:EVENT1:SPATTERN:  
CLOCK:SOURCE 1  
:TRIGGER:EINTERVAL:EVENT1:SPATTERN:  
CLOCK:SOURCE? -> :TRIGGER:EINTERVAL:  
EVENT1:SPATTERN:CLOCK:SOURCE 1

**Description** This command is valid when  
:TRIGger:EINTerval:EVENT<x>:SPATtern:  
CLOCK:MODE ON.

### **:TRIGger:EINTerval:EVENT<x>:SPATtern:**

#### **CS**

**Function** Enables/Disables the chip select of the serial pattern trigger or queries the current setting.

**Syntax** :TRIGger:EINTerval:EVENT<x>:SPATtern:  
CS {<Boolean>}  
:TRIGger:EINTerval:EVENT<x>:SPATtern:  
CS?  
<x> = 1 or 2

**Example** :TRIGGER:EINTERVAL:EVENT1:SPATTERN:  
CS ON  
:TRIGGER:EINTERVAL:EVENT1:SPATTERN:CS?  
-> :TRIGGER:EINTERVAL:EVENT1:SPATTERN:  
CS 1

**Description** This command is valid when  
:TRIGger:EINTerval:EVENT<x>:SPATtern:  
CLOCK:MODE ON.

**:TRIGger:EINterval:EVENT<x>:SPATtern:DATA?**

Function Queries all settings related to data of the serial pattern trigger.

Syntax :TRIGger:EINterval:EVENT<x>:SPATtern:DATA?  
<x> = 1 or 2

Example :TRIGGER:EINTERVAL:EVENT1:SPATTERN:DATA? -> :TRIGGER:EINTERVAL:EVENT1:SPATTERN:DATA:ACTIVE HIGH;SOURCE 1

**:TRIGger:EINterval:EVENT<x>:SPATtern:DATA:ACTive**

Function Sets the active level of the data of the serial pattern trigger or queries the current setting.

Syntax :TRIGger:EINterval:EVENT<x>:SPATtern:DATA:ACTive {HIGH|LOW}  
:TRIGger:EINterval:EVENT<x>:SPATtern:DATA:ACTive?  
<x> = 1 or 2

Example :TRIGGER:EINTERVAL:EVENT1:SPATTERN:DATA:ACTIVE HIGH  
:TRIGGER:EINTERVAL:EVENT1:SPATTERN:DATA:ACTIVE? -> :TRIGGER:EINTERVAL:EVENT1:SPATTERN:DATA:ACTIVE HIGH

**:TRIGger:EINterval:EVENT<x>:SPATtern:DATA:SOURce**

Function Sets the data trace of the serial pattern trigger or queries the current setting.

Syntax :TRIGger:EINterval:EVENT<x>:SPATtern:DATA:SOURce {<NRf>}  
:TRIGger:EINterval:EVENT<x>:SPATtern:DATA:SOURce?  
<x> = 1 or 2  
<NRf> = 1 to 4

Example :TRIGGER:EINTERVAL:EVENT1:SPATTERN:DATA:SOURCE 1  
:TRIGGER:EINTERVAL:EVENT1:SPATTERN:DATA:SOURCE? -> :TRIGGER:EINTERVAL:EVENT1:SPATTERN:DATA:SOURCE 1

**:TRIGger:EINterval:EVENT<x>:SPATtern:HEXA**

Function Sets the pattern of the serial pattern trigger in hexadecimal notation.

Syntax :TRIGger:EINterval:EVENT<x>:SPATtern:HEXA {<String>}  
<x> = 1 or 2  
<String> = Up to 32 characters by combining '0' to 'F' and 'X'

Example :TRIGGER:EINTERVAL:EVENT1:SPATTERN:HEXA "ABCD"

**:TRIGger:EINterval:EVENT<x>:SPATtern:LATCh?**

Function Queries all settings related to latch of the serial pattern trigger.

Syntax :TRIGger:EINterval:EVENT<x>:SPATtern:LATCh?  
<x> = 1 or 2

Example :TRIGGER:EINTERVAL:EVENT1:SPATTERN:LATCH? -> :TRIGGER:EINTERVAL:EVENT1:SPATTERN:LATCH:SOURCE 1;POLARITY FALL

**:TRIGger:EINterval:EVENT<x>:SPATtern:LATCh:POLarity**

Function Sets the polarity of the latch trace of the serial pattern trigger or queries the current setting.

Syntax :TRIGger:EINterval:EVENT<x>:SPATtern:LATCh:POLarity {FALL|RISE}  
:TRIGger:EINterval:EVENT<x>:SPATtern:LATCh:POLarity?  
<x> = 1 or 2

Example :TRIGGER:EINTERVAL:EVENT1:SPATTERN:LATCH:POLARITY FALL  
:TRIGGER:EINTERVAL:EVENT1:SPATTERN:LATCH:POLARITY? -> :TRIGGER:EINTERVAL:EVENT1:SPATTERN:LATCH:POLARITY FALL

Description • This command is valid when

:TRIGger:EINterval:EVENT<x>:SPATtern:CLOCK:MODE ON.

• This command is invalid when

:TRIGger:EINterval:EVENT<x>:SPATtern:LATCh:SOURce NONE.

**:TRIGger:EINterval:EVENT<x>:SPATtern:LATCh:SOURce**

Function Sets the latch trace of the serial pattern trigger or queries the current setting.

Syntax :TRIGger:EINterval:EVENT<x>:SPATtern:LATCh:SOURce {<NRf>|NONE}  
:TRIGger:EINterval:EVENT<x>:SPATtern:LATCh:SOURce?  
<x> = 1 or 2  
<NRf> = 1 to 4

Example :TRIGGER:EINTERVAL:EVENT1:SPATTERN:LATCH:SOURCE 1  
:TRIGGER:EINTERVAL:EVENT1:SPATTERN:LATCH:SOURCE? -> :TRIGGER:EINTERVAL:EVENT1:SPATTERN:LATCH:SOURCE 1

Description This command is valid when

:TRIGger:EINterval:EVENT<x>:SPATtern:CLOCK:MODE ON.

## 5.29 TRIGger Group

### **:TRIGger:EINTerval:EVENT<x>:SPATtern: PATTern**

**Function** Sets the pattern of the serial pattern trigger in binary notation or queries the current setting.

**Syntax** :TRIGger:EINTerval:EVENT<x>:SPATtern:  
PATTern {<String>}  
:TRIGger:EINTerval:EVENT<x>:SPATtern:  
PATTern?  
<x> = 1 or 2  
<String> = Up to 128 characters by combining '0', '1',  
and 'X'

**Example** :TRIGGER:EINTERVAL:EVENT1:SPATTERN:  
PATTERN "1100110111101111"  
:TRIGGER:EINTERVAL:EVENT1:SPATTERN:  
PATTERN? -> :TRIGGER:EINTERVAL:EVENT1:  
SPATTERN:PATTERN "1100110111101111"

### **:TRIGger:EINTerval:EVENT<x>:SPIBus?**

**Function** Queries all settings related to the SPI bus trigger of the event.

**Syntax** :TRIGger:EINTerval:EVENT<x>:SPIBus?  
<x> = 1 or 2

**Example** :TRIGGER:EINTERVAL:EVENT1:SPIBUS? ->  
:TRIGGER:EINTERVAL:EVENT1:SPIBUS:  
BITORDER LSBFIRST;CLOCK:POLARITY FALL;  
SOURCE 1;:TRIGGER:EINTERVAL:EVENT1:  
SPIBUS:CS:ACTIVE HIGH;SOURCE 1;:  
TRIGGER:EINTERVAL:EVENT1:SPIBUS:DATA1:  
BYTE 1;CONDITION TRUE;DPOSITION 1;  
PATTERN1 "00010010";  
PATTERN2 "00110100";  
PATTERN3 "01010110";  
PATTERN4 "00010010";SOURCE 3;:TRIGGER:  
EINTERVAL:EVENT1:SPIBUS:DATA2:BYTE 4;  
CONDITION TRUE;DPOSITION 1;  
PATTERN1 "00010010";  
PATTERN2 "00110100";  
PATTERN3 "01010110";  
PATTERN4 "00010010";SOURCE 3;:TRIGGER:  
EINTERVAL:EVENT1:SPIBUS:MODE WIRE3

### **:TRIGger:EINTerval:EVENT<x>:SPIBus:**

**BITOrder**

**Function** Sets the bit order of the SPI bus trigger or queries the current setting.

**Syntax** :TRIGger:EINTerval:EVENT<x>:SPIBus:  
BITOrder {LSBFirst|MSBFirst}  
:TRIGger:EINTerval:EVENT<x>:SPIBus:  
BITOrder?  
<x> = 1 or 2

**Example** :TRIGGER:EINTERVAL:EVENT1:SPIBUS:  
BITORDER LSBFIRST  
:TRIGGER:EINTERVAL:EVENT1:SPIBUS:  
BITORDER? -> :TRIGGER:EINTERVAL:  
EVENT1:SPIBUS:BITORDER LSBFIRST

### **:TRIGger:EINTerval:EVENT<x>:SPIBus: CLOCK?**

**Function** Queries all settings related to the clock of the SPI bus trigger.

**Syntax** :TRIGger:EINTerval:EVENT<x>:SPIBus:  
CLOCK?  
<x> = 1 or 2

**Example** :TRIGGER:EINTERVAL:EVENT1:SPIBUS:CLOCK?  
-> :TRIGGER:EINTERVAL:EVENT1:SPIBUS:  
CLOCK:POLARITY FALL;SOURCE 1

### **:TRIGger:EINTerval:EVENT<x>:SPIBus: CLOCK:POLarity**

**Function** Sets the polarity of the clock trace of the SPI bus trigger or queries the current setting.

**Syntax** :TRIGger:EINTerval:EVENT<x>:SPIBus:  
CLOCK:POLarity {FALL|RISE}  
:TRIGger:EINTerval:EVENT<x>:SPIBus:  
CLOCK:POLarity?  
<x> = 1 or 2

**Example** :TRIGGER:EINTERVAL:EVENT1:SPIBUS:CLOCK:  
POLARITY FALL  
:TRIGGER:EINTERVAL:EVENT1:SPIBUS:CLOCK:  
POLARITY? -> :TRIGGER:EINTERVAL:EVENT1:  
SPIBUS:CLOCK:POLARITY FALL

### **:TRIGger:EINTerval:EVENT<x>:SPIBus: CLOCK:SOURCE**

**Function** Sets the clock trace of the SPI bus trigger or queries the current setting.

**Syntax** :TRIGger:EINTerval:EVENT<x>:SPIBus:  
CLOCK:SOURCE {<Nrf>}  
:TRIGger:EINTerval:EVENT<x>:SPIBus:  
CLOCK:SOURCE?  
<x> = 1 or 2  
<Nrf> = 1 to 4

**Example** :TRIGGER:EINTERVAL:EVENT1:SPIBUS:CLOCK:  
SOURCE 1  
:TRIGGER:EINTERVAL:EVENT1:SPIBUS:CLOCK:  
SOURCE? -> :TRIGGER:EINTERVAL:EVENT1:  
SPIBUS:CLOCK:SOURCE 1

### **:TRIGger:EINTerval:EVENT<x>:SPIBus:CS?**

**Function** Queries all settings related to the chip select of the SPI bus trigger.

**Syntax** :TRIGger:EINTerval:EVENT<x>:SPIBus:CS?  
<x> = 1 or 2

**Example** :TRIGGER:EINTERVAL:EVENT1:SPIBUS:CS? ->  
:TRIGGER:EINTERVAL:EVENT1:SPIBUS:CS:  
ACTIVE HIGH;SOURCE 1

**:TRIGger:EINterval:EVENT<x>:SPIBus:CS:ACTIVE**

Function Sets the active level of the chip select of the SPI bus trigger or queries the current setting.

Syntax :TRIGger:EINterval:EVENT<x>:SPIBus:CS:ACTIVE {HIGH|LOW}  
:TRIGger:EINterval:EVENT<x>:SPIBus:CS:ACTIVE?

Example :TRIGGER:EINTERVAL:EVENT1:SPIBUS:CS:ACTIVE HIGH  
:TRIGGER:EINTERVAL:EVENT1:SPIBUS:CS:ACTIVE? -> :TRIGGER:EINTERVAL:EVENT1:SPIBUS:CS:ACTIVE HIGH

**:TRIGger:EINterval:EVENT<x>:SPIBus:CS:SOURce**

Function Sets the chip select trace of the SPI bus trigger or queries the current setting.

Syntax :TRIGger:EINterval:EVENT<x>:SPIBus:CS:SOURce {<Nrf>}  
:TRIGger:EINterval:EVENT<x>:SPIBus:CS:SOURce?  
<x> = 1 or 2  
<Nrf> = 1 to 4

Example :TRIGGER:EINTERVAL:EVENT1:SPIBUS:CS:SOURCE 1  
:TRIGGER:EINTERVAL:EVENT1:SPIBUS:CS:SOURCE? -> :TRIGGER:EINTERVAL:EVENT1:SPIBUS:CS:SOURCE 1

**:TRIGger:EINterval:EVENT<x>:SPIBus:DATA<x>?**

Function Queries all settings related to the data of the SPI bus trigger.

Syntax :TRIGger:EINterval:EVENT<x>:SPIBus:DATA<x>?  
<x> of EVENT<x> = 1 or 2  
<x> of DATA<x> = 1 or 2

Example :TRIGGER:EINTERVAL:EVENT1:SPIBUS:DATA1?  
-> :TRIGGER:EINTERVAL:EVENT1:SPIBUS:DATA1:BYTE 1;CONDITION TRUE;  
DPOSITION 1;PATTERN1 "00010010";  
PATTERN2 "00110100";  
PATTERN3 "01010110";  
PATTERN4 "00010010";SOURCE 3

Description DATA2 is valid when :TRIGger:EINterval:EVENT<x>:SPIBus:MODE WIRE4.

**:TRIGger:EINterval:EVENT<x>:SPIBus:DATA<x>:BYTE**

Function Sets the number of bytes of the data of the SPI bus trigger or queries the current setting.

Syntax :TRIGger:EINterval:EVENT<x>:SPIBus:DATA<x>:BYTE {<Nrf>}  
:TRIGger:EINterval:EVENT<x>:SPIBus:DATA<x>:BYTE?  
<x> of EVENT<x> = 1 or 2  
<x> of DATA<x> = 1 or 2  
<Nrf> = 1 to 4

Example :TRIGGER:EINTERVAL:EVENT1:SPIBUS:DATA1:BYTE 1  
:TRIGGER:EINTERVAL:EVENT1:SPIBUS:DATA1:BYTE? -> :TRIGGER:EINTERVAL:EVENT1:SPIBUS:DATA1:BYTE 1

**:TRIGger:EINterval:EVENT<x>:SPIBus:DATA<x>:CONDition**

Function Sets the determination method (match or not match) of the data of the SPI bus trigger or queries the current setting.

Syntax :TRIGger:EINterval:EVENT<x>:SPIBus:DATA<x>:CONDition {FALSE|TRUE}  
:TRIGger:EINterval:EVENT<x>:SPIBus:DATA<x>:CONDition?  
<x> of EVENT<x> = 1 or 2  
<x> of DATA<x> = 1 or 2

Example :TRIGGER:EINTERVAL:EVENT1:SPIBUS:DATA1:CONDITION TRUE  
:TRIGGER:EINTERVAL:EVENT1:SPIBUS:DATA1:CONDITION? -> :TRIGGER:EINTERVAL:EVENT1:SPIBUS:DATA1:CONDITION TRUE

**:TRIGger:EINterval:EVENT<x>:SPIBus:DATA<x>:DPOsition**

Function Sets the pattern comparison start position of the data of the SPI bus trigger or queries the current setting.

Syntax :TRIGger:EINterval:EVENT<x>:SPIBus:DATA<x>:DPOsition {<Nrf>}  
:TRIGger:EINterval:EVENT<x>:SPIBus:DATA<x>:DPOsition?  
<x> of EVENT<x> = 1 or 2  
<x> of DATA<x> = 1 or 2  
<Nrf> = 0 to 9999

Example :TRIGGER:EINTERVAL:EVENT1:SPIBUS:DATA1:DPOSITION 1  
:TRIGGER:EINTERVAL:EVENT1:SPIBUS:DATA1:DPOSITION? -> :TRIGGER:EINTERVAL:EVENT1:SPIBUS:DATA1:DPOSITION 1

## 5.29 TRIGger Group

### **:TRIGger:EINTerval:EVENT<x>:SPIBUS:DATA<x>:HEXA<x>**

**Function** Sets the data of the SPI bus trigger in hexadecimal notation.

**Syntax** :TRIGger:EINTerval:EVENT<x>:SPIBUS:DATA<x>:HEXA<x> {<String>}  
<x> of EVENT<x> = 1 or 2  
<x> of DATA<x> = 1 or 2  
<x> of HEXA<x> = 1 to 4  
<String> = 2 characters by combining '0' to 'F' and 'X'

**Example** :TRIGGER:EINTERVAL:EVENT1:SPIBUS:DATA1:HEXA1 "AB"

### **:TRIGger:EINTerval:EVENT<x>:SPIBUS:DATA<x>:PATTern<x>**

**Function** Sets the data of the SPI bus trigger in binary notation or queries the current setting.

**Syntax** :TRIGger:EINTerval:EVENT<x>:SPIBUS:DATA<x>:PATTern<x> {<String>}  
  
:TRIGger:EINTerval:EVENT<x>:SPIBUS:DATA<x>:PATTern<x>?  
<x> of EVENT<x> = 1 or 2  
<x> of DATA<x> = 1 or 2  
<x> of PATTern<x> = 1 to 4  
<String> = 8 characters by combining '0,' '1,' and 'X'

**Example** :TRIGGER:EINTERVAL:EVENT1:SPIBUS:DATA1:PATTERN1 "10101011"  
:TRIGGER:EINTERVAL:EVENT1:SPIBUS:DATA1:PATTERN1? -> :TRIGGER:EINTERVAL:EVENT1:SPIBUS:DATA1:PATTERN1 "10101011"

### **:TRIGger:EINTerval:EVENT<x>:SPIBUS:DATA<x>:SOURCE**

**Function** Sets the trace of the data of the SPI bus trigger or queries the current setting.

**Syntax** :TRIGger:EINTerval:EVENT<x>:SPIBUS:DATA<x>:SOURCE {<NRf>}  
:TRIGger:EINTerval:EVENT<x>:SPIBUS:DATA<x>:SOURCE?  
<x> of EVENT<x> = 1 or 2  
<x> of DATA<x> = 1 or 2  
<NRf> = 1 to 4

**Example** :TRIGGER:EINTERVAL:EVENT1:SPIBUS:DATA1:SOURCE 1  
:TRIGGER:EINTERVAL:EVENT1:SPIBUS:DATA1:SOURCE? -> :TRIGGER:EINTERVAL:EVENT1:SPIBUS:DATA1:SOURCE 1

### **:TRIGger:EINTerval:EVENT<x>:SPIBUS:MODE**

**Function** Sets the wiring system of the SPI bus trigger (three-wire or four-wire) or queries the current setting.

**Syntax** :TRIGger:EINTerval:EVENT<x>:SPIBUS:MODE {WIRE3|WIRE4}  
:TRIGger:EINTerval:EVENT<x>:SPIBUS:MODE?  
<x> = 1 or 2

**Example** :TRIGGER:EINTERVAL:EVENT1:SPIBUS:MODE WIRE3  
:TRIGGER:EINTERVAL:EVENT1:SPIBUS:MODE? -> :TRIGGER:EINTERVAL:EVENT1:SPIBUS:MODE WIRE3

### **:TRIGger:EINTerval:EVENT<x>:STATE?**

**Function** Queries all settings related to condition to be satisfied of the event.

**Syntax** :TRIGger:EINTerval:EVENT<x>:STATE?  
<x> = 1 or 2

**Example** :TRIGGER:EINTERVAL:EVENT1:STATE? -> :TRIGGER:EINTERVAL:EVENT1:STATE:CHANNEL1 DONTCARE;CHANNEL2 DONTCARE;CHANNEL3 DONTCARE;CHANNEL4 DONTCARE;LOGIC AND

### **:TRIGger:EINTerval:EVENT<x>:STATE:CHANNEL<x>**

**Function** Sets the condition to be satisfied of the channel or queries the current setting.

**Syntax** :TRIGger:EINTerval:EVENT<x>:STATE:CHANNEL<x> {DONTcare|HIGH|IN|LOW|OUT}  
:TRIGger:EINTerval:EVENT<x>:STATE:CHANNEL<x>?  
<x> of EVENT<x> = 1 or 2  
<x> of CHANNEL<x> = 1 to 4

**Example** :TRIGGER:EINTERVAL:EVENT1:STATE:CHANNEL1 HIGH  
:TRIGGER:EINTERVAL:EVENT1:STATE:CHANNEL1? -> :TRIGGER:EINTERVAL:EVENT1:STATE:CHANNEL1 HIGH

**Description** • This command is valid when  
:TRIGger:EINTerval:EVENT<x>:TYPE EQUALify|I2CBus|PQUALify|PSTATE|SPATtern|STATE.  
• {HIGH|LOW} is valid when  
:TRIGger:EINTerval:EVENT<x>:TYPE I2CBus|SPATtern.  
• {IN|OUT} is valid when  
:TRIGger:EINTerval:EVENT<x>:TYPE EQUALify|PQUALify|PSTATE|STATE and TRIGger:SOURCE:CHANNEL<x>:WINDOW ON.  
{HIGH|LOW} is valid when  
:TRIGger:EINTerval:EVENT<x>:TYPE EQUALify|PQUALify|PSTATE|STATE and TRIGger:SOURCE:CHANNEL<x>:WINDOW OFF.

**:TRIGger:EINterval:EVENT<x>:STATE:LOGic**

Function Sets the logic of the condition to be satisfied or queries the current setting.

Syntax :TRIGger:EINterval:EVENT<x>:STATE:LOGic {AND|OR}  
:TRIGger:EINterval:EVENT<x>:STATE:LOGic?  
<x> = 1 or 2

Example :TRIGGER:EINTERVAL:EVENT1:STATE:LOGIC AND  
:TRIGGER:EINTERVAL:EVENT1:STATE:LOGIC?  
-> :TRIGGER:EINTERVAL:EVENT1:STATE:LOGIC AND

Description This command is valid when

:TRIGger:EINterval:EVENT<x>:TYPE  
EQUalify|I2Cbus|PQUalify|PSTATE|SPATtern|STATE.

**:TRIGger:EINterval:EVENT<x>:TYPE**

Function Sets the trigger type of the event or queries the current setting.

Syntax :TRIGger:EINterval:EVENT<x>:TYPE {EDGE|EQUalify|I2Cbus|PQUalify|PSTATE|PULSE|SPATtern|SPIbus|STATE}  
:TRIGger:EINterval:EVENT<x>:TYPE?  
<x> = 1 or 2

Example :TRIGGER:EINTERVAL:EVENT1:TYPE EDGE  
:TRIGGER:EINTERVAL:EVENT1:TYPE? ->  
:TRIGGER:EINTERVAL:EVENT1:TYPE EDGE

**:TRIGger:EINterval:EVENT<x>:WIDTH?**

Function Queries all settings related to the pulse width trigger of the event.

Syntax :TRIGger:EINterval:EVENT<x>:WIDTH?  
<x> = 1 or 2

Example :TRIGGER:EINTERVAL:EVENT1:WIDTH? ->  
:TRIGGER:EINTERVAL:EVENT1:WIDTH:  
MODE TIMEOUT;POLARITY POSITIVE;  
SOURCE EXTERNAL;TIME1 1.000E+00;  
TIME2 1.000E+00

**:TRIGger:EINterval:EVENT<x>:WIDTH:MODE**

Function Sets the determination mode of the pulse width trigger or queries the current setting.

Syntax :TRIGger:EINterval:EVENT<x>:WIDTH:MODE {BETween|IN|NOTBetween|OUT|TIMEout}  
:TRIGger:EINterval:EVENT<x>:WIDTH:MODE?  
<x> = 1 or 2

Example :TRIGGER:EINTERVAL:EVENT1:WIDTH:MODE  
TIMEOUT  
:TRIGGER:EINTERVAL:EVENT1:WIDTH:MODE?  
-> :TRIGGER:EINTERVAL:EVENT1:WIDTH:MODE  
MODE TIMEOUT

**:TRIGger:EINterval:EVENT<x>:WIDTH:POLarity**

Function Sets the polarity of the pulse width trigger or queries the current setting.

Syntax :TRIGger:EINterval:EVENT<x>:WIDTH:POLarity {FALSE|IN|NEGative|OUT|POSitive|TRUE}  
:TRIGger:EINterval:EVENT<x>:WIDTH:POLarity?  
<x> = 1 or 2

Example :TRIGGER:EINTERVAL:EVENT1:WIDTH:POLARITY POSITIVE  
:TRIGGER:EINTERVAL:EVENT1:WIDTH:POLARITY? -> :TRIGGER:EINTERVAL:EVENT1:WIDTH:POLARITY POSITIVE

Description • {IN|OUT} is valid when

:TRIGger:EINterval:EVENT<x>:TYPE  
PQUalify|PULSE and  
:TRIGger:SOURce:CHANnel<x>:WINDow ON.  
{POSitive|NEGative} is valid when  
:TRIGger:EINterval:EVENT<x>:TYPE  
PQUalify|PULSE and  
:TRIGger:SOURce:CHANnel<x>:WINDow OFF.

• {FALSE|TRUE} is valid when  
:TRIGger:EINterval:EVENT<x>:TYPE  
PSTATE.



## 5.29 TRIGger Group

### **:TRIGger:EINterval:EVENT<x>:WIDTH:**

#### **SOURCE**

**Function** Sets the trigger source of the pulse width trigger or queries the current setting.

**Syntax** :TRIGger:EINterval:EVENT<x>:WIDTH:  
SOURCE {<NRf>|EXTERNAL}  
:TRIGger:EINterval:EVENT<x>:WIDTH:  
SOURCE?  
<x> = 1 or 2  
<NRf> = 1 to 4

**Example** :TRIGGER:EINTERVAL:EVENT1:WIDTH:  
SOURCE EXTERNAL  
:TRIGGER:EINTERVAL:EVENT1:WIDTH:SOURCE?  
-> :TRIGGER:EINTERVAL:EVENT1:WIDTH:  
SOURCE EXTERNAL

**Description** This command is valid when  
:TRIGger:EINterval:EVENT<x>:TYPE  
PQualify|PULSe.

### **:TRIGger:EINterval:EVENT<x>:WIDTH:**

#### **TIME<x>**

**Function** Sets the pulse width of the pulse width trigger or queries the current setting.

**Syntax** :TRIGger:EINterval:EVENT<x>:WIDTH:  
TIME<x> {<Time>}  
:TRIGger:EINterval:EVENT<x>:WIDTH:  
TIME<x>?  
<x> of EVENT<x> = 1 or 2  
<x> of TIME<x> = 1 or 2  
<Time> = 1 ns to 10 s (500 ps steps)

**Example** :TRIGGER:EINTERVAL:EVENT1:WIDTH:  
TIME1 1S  
:TRIGGER:EINTERVAL:EVENT1:WIDTH:TIME1?  
-> :TRIGGER:EINTERVAL:EVENT1:WIDTH:  
TIME1 1.000E+00

**Description** TIME2 is valid when  
:TRIGger:EINterval:EVENT<x>:WIDTH:MODE  
BETWEEN|NOTBetween.

### **:TRIGger:EINterval:MODE**

**Function** Sets the determination mode of the event interval or queries the current setting.

**Syntax** :TRIGger:EINterval:MODE {BETWEEN|IN|  
NOTBetween|OUT|TIMEout}  
:TRIGger:EINterval:MODE?

**Example** :TRIGGER:EINTERVAL:MODE BETWEEN  
:TRIGGER:EINTERVAL:MODE? ->  
:TRIGGER:EINTERVAL:MODE BETWEEN

### **:TRIGger:EINterval:TIME<x>**

**Function** Sets the interval time of the event interval or queries the current setting.

**Syntax** :TRIGger:EINterval:TIME<x> {<Time>}  
:TRIGger:EINterval:TIME<x>?  
<x> = 1 or 2  
<Time> = 1 ns to 10 s (500 ps steps)

**Example** :TRIGGER:EINTERVAL:TIME1 1S  
:TRIGGER:EINTERVAL:TIME1? ->  
:TRIGGER:EINTERVAL:TIME1 0.000E+00

**Description** TIME2 is valid when :TRIGger:EINterval:MODE  
BETWEEN|NOTBetween.

### **:TRIGger:EINterval:TRY?**

**Function** Queries all settings related to the event interval trial.

**Syntax** :TRIGger:EINterval:TRY?  
**Example** :TRIGGER:EINTERVAL:TRY? ->  
:TRIGGER:EINTERVAL:TRY:MODE 0;SELECT 1

### **:TRIGger:EINterval:TRY:MODE**

**Function** Sets the trial mode or queries the current setting.

**Syntax** :TRIGger:EINterval:TRY:MODE {<Boolean>}  
:TRIGger:EINterval:TRY:MODE?  
**Example** :TRIGGER:EINTERVAL:TRY:MODE ON  
:TRIGGER:EINTERVAL:TRY:MODE? ->  
:TRIGGER:EINTERVAL:TRY:MODE 1

**Description** This command is valid when  
:TRIGger:EINterval:MODE BETWEEN|  
NOTBetween.

### **:TRIGger:EINterval:TRY:SElect**

**Function** Sets the source event of the trial mode or queries the current setting.

**Syntax** :TRIGger:EINterval:TRY:SElect {<NRf>}  
:TRIGger:EINterval:TRY:SElect?  
<NRf> = 1 or 2

**Example** :TRIGGER:EINTERVAL:TRY:SELECT 1  
:TRIGGER:EINTERVAL:TRY:SELECT? ->  
:TRIGGER:EINTERVAL:TRY:SELECT 1

**Description** This command is valid when  
:TRIGger:EINterval:MODE BETWEEN|  
NOTBetween.

**:TRIGger:ENHanced?**

Function Queries all settings related to the enhanced trigger.

Syntax `:TRIGger:ENHanced?`

Example `:TRIGGER:ENHANCED? -> :TRIGGER:  
 ENHANCED:I2CBUS:ADATA:BIT10ADDRESS:  
 PATTERN "0001111101";:TRIGGER:  
 ENHANCED:I2CBUS:ADATA:BIT7ADDRESS:  
 PATTERN "11011110";:TRIGGER:ENHANCED:  
 I2CBUS:ADATA:BIT7APSUB:ADDRESS:  
 PATTERN "11001101";:TRIGGER:ENHANCED:  
 I2CBUS:ADATA:BIT7APSUB:SADDRESS:  
 PATTERN "11101111";:TRIGGER:ENHANCED:  
 I2CBUS:ADATA:TYPE BIT10ADDRESS;:  
 TRIGGER:ENHANCED:I2CBUS:CLOCK:  
 SOURCE 1;:TRIGGER:ENHANCED:I2CBUS:DATA:  
 BYTE 1;CONDITION TRUE;DPOSITION 1;  
 MODE 1;PATTERN1 "10101011";  
 PATTERN2 "10001011";  
 PATTERN3 "00101011";  
 PATTERN4 "10101011";PMODE DONTCARE;  
 SOURCE 1;:TRIGGER:ENHANCED:I2CBUS:  
 GCALL:BIT7MADDRESS:PATTERN "1010101";:  
 TRIGGER:ENHANCED:I2CBUS:GCALL:  
 SBYTE BIT7MADDRESS;:TRIGGER:ENHANCED:  
 I2CBUS:MODE ADATA;NAIGNORE:HSMODE 1;  
 RACCESS 1;SBYTE 1;:TRIGGER:ENHANCED:  
 I2CBUS:SBHSMODE:TYPE HSMODE;:TRIGGER:  
 ENHANCED:SPATTERN:BITRATE 1.000E+00;  
 CLOCK:MODE 1;POLARITY FALL;SOURCE 1;:  
 TRIGGER:ENHANCED:SPATTERN:CS 1;DATA:  
 ACTIVE HIGH;SOURCE 1;:TRIGGER:ENHANCED:  
 SPATTERN:LATCH:SOURCE 1;POLARITY FALL;:  
 TRIGGER:ENHANCED:SPATTERN:  
 PATTERN "1100110111101111";:TRIGGER:  
 ENHANCED:SPIBUS:BITORDER MSBFIRST;  
 CLOCK:POLARITY FALL;SOURCE 1;:TRIGGER:  
 ENHANCED:SPIBUS:CS:ACTIVE HIGH;  
 SOURCE 1;:TRIGGER:ENHANCED:SPIBUS:  
 DATA1:BYTE 1;CONDITION TRUE;  
 DPOSITION 0;PATTERN1 "00010010";  
 PATTERN2 "00110100";  
 PATTERN3 "01010110";  
 PATTERN4 "00010010";SOURCE 3;:  
 TRIGGER:ENHANCED:SPIBUS:DATA2:BYTE 1;  
 CONDITION TRUE;DPOSITION 0;  
 PATTERN1 "00010010";  
 PATTERN2 "00110100";  
 PATTERN3 "01010110";  
 PATTERN4 "00010010";SOURCE DONTCARE;:  
 TRIGGER:ENHANCED:SPIBUS:MODE WIRE3.....`

**:TRIGger:ENHanced:I2CBus?**

Function Queries all settings related to the I<sup>2</sup>C trigger.

Syntax `:TRIGger:ENHanced:I2CBus?`

Example `:TRIGGER:ENHANCED:I2CBUS? ->  
 :TRIGGER:ENHANCED:I2CBUS:ADATA:  
 BIT10ADDRESS:PATTERN "10111011111";:  
 TRIGGER:ENHANCED:I2CBUS:ADATA:  
 BIT7ADDRESS:PATTERN "11011110";:  
 TRIGGER:ENHANCED:I2CBUS:ADATA:  
 BIT7APSUB:ADDRESS:PATTERN "10101011";:  
 TRIGGER:ENHANCED:I2CBUS:ADATA:  
 BIT7APSUB:SADDRESS:PATTERN "10101011";:  
 TRIGGER:ENHANCED:I2CBUS:ADATA:  
 TYPE BIT10ADDRESS;:TRIGGER:ENHANCED:  
 I2CBUS:CLOCK:SOURCE 1;:TRIGGER:  
 ENHANCED:I2CBUS:DATA:BYTE 1;  
 CONDITION TRUE;DPOSITION 1;MODE 1;  
 PATTERN1 "10101011";  
 PATTERN2 "10101010";  
 PATTERN3 "10101111";  
 PATTERN4 "10101011";PMODE DONTCARE;  
 SOURCE 1;:TRIGGER:ENHANCED:I2CBUS:  
 GCALL:BIT7MADDRESS:PATTERN "1010101";:  
 TRIGGER:ENHANCED:I2CBUS:GCALL:  
 SBYTE BIT7MADDRESS;:TRIGGER:ENHANCED:  
 I2CBUS:MODE ADATA;NAIGNORE:HSMODE 1;  
 RACCESS 1;SBYTE 1;:TRIGGER:ENHANCED:  
 I2CBUS:SBHSMODE:TYPE HSMODE`

**:TRIGger:ENHanced:I2CBus:ADATa?**

Function Queries all settings related to the address of the I<sup>2</sup>C bus trigger.

Syntax `:TRIGger:ENHanced:I2CBus:ADATa?`

Example `:TRIGGER:ENHANCED:I2CBUS:ADATa? ->  
 :TRIGGER:ENHANCED:I2CBUS:ADATa:  
 BIT10ADDRESS:PATTERN "10111011111";:  
 TRIGGER:ENHANCED:I2CBUS:ADATa:  
 BIT7ADDRESS:PATTERN "11011110";:  
 TRIGGER:ENHANCED:I2CBUS:ADATa:  
 BIT7APSUB:ADDRESS:PATTERN "10101011";:  
 TRIGGER:ENHANCED:I2CBUS:ADATa:  
 BIT7APSUB:SADDRESS:PATTERN "10101011";:  
 TRIGGER:ENHANCED:I2CBUS:ADATa:  
 TYPE BIT10ADDRESS`

**:TRIGger:ENHanced:I2CBus:ADATa:BIT10address?**

Function Queries all settings related to the 10-bit address of the I<sup>2</sup>C bus trigger.

Syntax `:TRIGger:ENHanced:I2CBus:ADATa:BIT10address?`

Example `:TRIGGER:ENHANCED:I2CBUS:ADATa:  
 BIT10ADDRESS? -> :TRIGGER:ENHANCED:  
 I2CBUS:ADATa:BIT10ADDRESS:  
 PATTERN "10111011111"`

## 5.29 TRIGger Group

### **:TRIGger:ENHanced:I2CBus:ADATa:**

#### **BIT10address:HEXA**

**Function** Sets the 10-bit address of the I<sup>2</sup>C bus trigger in hexadecimal notation.

**Syntax** :TRIGger:ENHanced:I2CBus:ADATa:  
BIT10address:HEXA {<String>}  
<String> = 3 characters by combining '0' to 'F' and 'X' (bit 8 is the R/W bit)

**Example** :TRIGGER:ENHANCED:I2CBUS:ADATA:  
BIT10ADDRESS:HEXA "7AB"

### **:TRIGger:ENHanced:I2CBus:ADATa:**

#### **BIT10address:PATtern**

**Function** Sets the 10-bit address of the I<sup>2</sup>C bus trigger in binary notation or queries the current setting.

**Syntax** :TRIGger:ENHanced:I2CBus:ADATa:  
BIT10address:PATtern {<String>}  
:TRIGger:ENHanced:I2CBus:ADATa:  
BIT10address:PATtern?  
<String> = 11 characters by combining '0', '1', and 'X' (bit 8 is the R/W bit)

**Example** :TRIGGER:ENHANCED:I2CBUS:ADATA:  
BIT10ADDRESS:PATTERN "10111011111"  
:TRIGGER:ENHANCED:I2CBUS:ADATA:  
BIT10ADDRESS:PATTERN? ->  
:TRIGGER:ENHANCED:I2CBUS:ADATA:  
BIT10ADDRESS:PATTERN "10111011111"

### **:TRIGger:ENHanced:I2CBus:ADATa:**

#### **BIT7Address?**

**Function** Queries all settings related to the 7-bit address of the I<sup>2</sup>C bus trigger.

**Syntax** :TRIGger:ENHanced:I2CBus:ADATa:  
BIT7Address?

**Example** :TRIGGER:ENHANCED:I2CBUS:ADATA:  
BIT7ADDRESS? ->  
:TRIGGER:ENHANCED:I2CBUS:ADATA:  
BIT7ADDRESS:PATTERN "11011110"

### **:TRIGger:ENHanced:I2CBus:ADATa:**

#### **BIT7Address:HEXA**

**Function** Sets the 7-bit address of the I<sup>2</sup>C bus trigger in hexadecimal notation.

**Syntax** :TRIGger:ENHanced:I2CBus:ADATa:  
BIT7Address:HEXA {<String>}  
<String> = 2 characters by combining '0' to 'F' and 'X' (bit 0 is the R/W bit)

**Example** :TRIGGER:ENHANCED:I2CBUS:ADATA:  
BIT7ADDRESS:HEXA "DE"

### **:TRIGger:ENHanced:I2CBus:ADATa:**

#### **BIT7Address:PATtern**

**Function** Sets the 7-bit address of the I<sup>2</sup>C bus trigger in binary notation or queries the current setting.

**Syntax** :TRIGger:ENHanced:I2CBus:ADATa:  
BIT7Address:PATtern {<String>}  
:TRIGger:ENHanced:I2CBus:ADATa:  
BIT7Address:PATtern?  
<String> = 8 characters by combining '0', '1', and 'X' (bit 0 is the R/W bit)

**Example** :TRIGGER:ENHANCED:I2CBUS:ADATA:  
BIT7ADDRESS:PATTERN "11011110"  
:TRIGGER:ENHANCED:I2CBUS:ADATA:  
BIT7ADDRESS:PATTERN? ->  
:TRIGGER:ENHANCED:I2CBUS:ADATA:  
BIT7ADDRESS:PATTERN "11011110"

### **:TRIGger:ENHanced:I2CBus:ADATa:**

#### **BIT7APsub?**

**Function** Queries all settings related to the 7-bit + Sub address of the I<sup>2</sup>C bus trigger.

**Syntax** :TRIGger:ENHanced:I2CBus:ADATa:  
BIT7APsub?

**Example** :TRIGGER:ENHANCED:I2CBUS:ADATA:  
BIT7APSUB? -> :TRIGGER:ENHANCED:I2CBUS:  
ADATA:BIT7APSUB:ADDRESS:  
PATTERN "10101011"; :TRIGGER:ENHANCED:  
I2CBUS:ADATA:BIT7APSUB:SADDRESS:  
PATTERN "10101011"

### **:TRIGger:ENHanced:I2CBus:ADATa:**

#### **BIT7APsub:ADDRess?**

**Function** Queries all settings related to the 7-bit address of the 7-bit + Sub address of the I<sup>2</sup>C bus trigger.

**Syntax** :TRIGger:ENHanced:I2CBus:ADATa:  
BIT7APsub:ADDRess?

**Example** :TRIGGER:ENHANCED:I2CBUS:ADATA:  
BIT7APSUB:ADDRESS? ->  
:TRIGGER:ENHANCED:I2CBUS:ADATA:  
BIT7APSUB:ADDRESS:PATTERN "10101011"

### **:TRIGger:ENHanced:I2CBus:ADATa:**

#### **BIT7APsub:ADDRess:HEXA**

**Function** Sets the 7-bit address of the 7-bit + Sub address of the I<sup>2</sup>C bus trigger in hexadecimal notation.

**Syntax** :TRIGger:ENHanced:I2CBus:ADATa:  
BIT7APsub:ADDRess:HEXA {<String>}  
<String> = 2 characters by combining '0' to 'F' and 'X' (bit 0 is the R/W bit)

**Example** :TRIGGER:ENHANCED:I2CBUS:ADATA:  
BIT7APSUB:ADDRESS:HEXA "AB"

**:TRIGger:ENHanced:I2Cbus:ADATa:****BIT7APsub:ADDRESS:PATtern**

Function Sets the 7-bit address of the 7-bit + Sub address of the I<sup>2</sup>C bus trigger in binary notation or queries the current setting.

Syntax :TRIGger:ENHanced:I2Cbus:ADATa:  
BIT7APsub:ADDRESS:PATtern {<String>}  
:TRIGger:ENHanced:I2Cbus:ADATa:  
BIT7APsub:ADDRESS:PATtern?  
<String> = 8 characters by combining '0', '1', and 'X'  
(bit 0 is the R/W bit)

Example :TRIGGER:ENHANCED:I2CBUS:ADATa:  
BIT7APSUB:ADDRESS:PATTERN "10101011"  
:TRIGGER:ENHANCED:I2CBUS:ADATa:  
BIT7APSUB:ADDRESS:PATTERN? ->  
:TRIGGER:ENHANCED:I2CBUS:ADATa:  
BIT7APSUB:ADDRESS:PATTERN "10101011"

**:TRIGger:ENHanced:I2Cbus:ADATa:****BIT7APsub:SADdress?**

Function Queries all settings related to the Sub address of the 7-bit + Sub address of the I<sup>2</sup>C bus trigger.

Syntax :TRIGger:ENHanced:I2Cbus:ADATa:  
BIT7APsub:SADdress?

Example :TRIGGER:ENHANCED:I2CBUS:ADATa:  
BIT7APSUB:SADDRESS? ->  
:TRIGGER:ENHANCED:I2CBUS:ADATa:  
BIT7APSUB:SADDRESS:PATTERN "10101011"

**:TRIGger:ENHanced:I2Cbus:ADATa:****BIT7APsub:SADdress:HEXA**

Function Sets the Sub address of the 7-bit + Sub address of the I<sup>2</sup>C bus trigger in hexadecimal notation.

Syntax :TRIGger:ENHanced:I2Cbus:ADATa:  
BIT7APsub:SADdress:HEXA {<String>}  
<String> = 2 characters by combining '0' to 'F' and 'X'

Example :TRIGGER:ENHANCED:I2CBUS:ADATa:  
BIT7APSUB:SADDRESS:HEXA "EF"

**:TRIGger:ENHanced:I2Cbus:ADATa:****BIT7APsub:SADdress:PATtern**

Function Sets the Sub address of the 7-bit + Sub address of the I<sup>2</sup>C bus trigger in binary notation or queries the current setting.

Syntax :TRIGger:ENHanced:I2Cbus:ADATa:  
BIT7APsub:SADdress:PATtern {<String>}  
:TRIGger:ENHanced:I2Cbus:ADATa:  
BIT7APsub:SADdress:PATtern?  
<String> = 8 characters by combining '0', '1', and 'X'

Example :TRIGGER:ENHANCED:I2CBUS:ADATa:  
BIT7APSUB:SADDRESS:PATTERN "10101011"  
:TRIGGER:ENHANCED:I2CBUS:ADATa:  
BIT7APSUB:SADDRESS:PATTERN? ->  
:TRIGGER:ENHANCED:I2CBUS:ADATa:  
BIT7APSUB:SADDRESS:PATTERN "10101011"

**:TRIGger:ENHanced:I2Cbus:ADATa:TYPE**

Function Sets the address type of the I<sup>2</sup>C bus trigger or queries the current setting.

Syntax :TRIGger:ENHanced:I2Cbus:ADATa:  
TYPE {BIT10address|BIT7Address|  
BIT7APsub}  
:TRIGger:ENHanced:I2Cbus:ADATa:TYPE?

Example :TRIGGER:ENHANCED:I2CBUS:ADATa:  
TYPE BIT10ADDRESS  
:TRIGGER:ENHANCED:I2CBUS:ADATa:TYPE? ->  
:TRIGGER:ENHANCED:I2CBUS:ADATa:  
TYPE BIT10ADDRESS

**:TRIGger:ENHanced:I2Cbus:CLOCK?**

Function Queries all settings related to the clock of the I<sup>2</sup>C bus trigger.

Syntax :TRIGger:ENHanced:I2Cbus:CLOCK?

Example :TRIGGER:ENHANCED:I2CBUS:CLOCK? ->  
:TRIGGER:ENHANCED:I2CBUS:CLOCK:SOURCE 1

**:TRIGger:ENHanced:I2Cbus:CLOCK:SOURCE**

Function Sets the clock trace of the I<sup>2</sup>C bus trigger or queries the current setting.

Syntax :TRIGger:ENHanced:I2Cbus:CLOCK:  
SOURCE {<Nrf>}  
:TRIGger:ENHanced:I2Cbus:CLOCK:SOURCE?  
<Nrf> = 1 to 4

Example :TRIGGER:ENHANCED:I2CBUS:CLOCK:SOURCE 1  
:TRIGGER:ENHANCED:I2CBUS:CLOCK:SOURCE?  
-> :TRIGGER:ENHANCED:I2CBUS:CLOCK:  
SOURCE 1

**:TRIGger:ENHanced:I2Cbus:DATA?**

Function Queries all settings related to the data of the I<sup>2</sup>C bus trigger.

Syntax :TRIGger:ENHanced:I2Cbus:DATA?  
<X> = 1 or 2

Example :TRIGGER:ENHANCED:I2CBUS:DATA? ->  
:TRIGGER:ENHANCED:I2CBUS:DATA:BYTE 1;  
CONDITION TRUE;DPOSITION 1;MODE 1;  
PATTERN1 "10101011";  
PATTERN2 "10101010";  
PATTERN3 "10101111";  
PATTERN4 "10101011";PMODE DONTCARE;  
SOURCE 1

## 5.29 TRIGger Group

### **:TRIGger:ENHanced:I2CBus:DATA:BYTE**

Function Sets the number of data bytes of the I<sup>2</sup>C bus trigger or queries the current setting.

Syntax :TRIGger:ENHanced:I2CBus:DATA:  
BYTE {<NRf>}  
:TRIGger:ENHanced:I2CBus:DATA:BYTE?  
<NRf> = 1 to 4

Example :TRIGGER:ENHANCED:I2CBUS:DATA:BYTE 1  
:TRIGGER:ENHANCED:I2CBUS:DATA:BYTE? ->  
:TRIGGER:ENHANCED:I2CBUS:DATA:BYTE 1

### **:TRIGger:ENHanced:I2CBus:DATA:**

#### **CONDition**

Function Sets the determination method (match or not match) of the data of the I<sup>2</sup>C bus trigger or queries the current setting.

Syntax :TRIGger:ENHanced:I2CBus:DATA:  
CONDition {FALSE|TRUE}  
:TRIGger:ENHanced:I2CBus:DATA:  
CONDition?

Example :TRIGGER:ENHANCED:I2CBUS:DATA:  
CONDITION TRUE  
:TRIGGER:ENHANCED:I2CBUS:DATA:  
CONDITION? -> :TRIGGER:ENHANCED:I2CBUS:  
DATA:CONDITION TRUE

### **:TRIGger:ENHanced:I2CBus:DATA:**

#### **DPOSITION**

Function Sets the position for comparing the data pattern of the I<sup>2</sup>C bus trigger or queries the current setting.

Syntax :TRIGger:ENHanced:I2CBus:DATA:  
DPOSITION {<NRf>}  
:TRIGger:ENHanced:I2CBus:DATA:  
DPOSITION?  
<NRf> = 0 to 9999

Example :TRIGGER:ENHANCED:I2CBUS:DATA:  
DPOSITION 1  
:TRIGGER:ENHANCED:I2CBUS:DATA:  
DPOSITION? -> :TRIGGER:ENHANCED:I2CBUS:  
DATA:DPOSITION 1

### **:TRIGger:ENHanced:I2CBus:DATA:HEXA<x>**

Function Sets the data of the I<sup>2</sup>C bus trigger in hexadecimal notation.

Syntax :TRIGger:ENHanced:I2CBus:DATA:  
HEXA<x> {<String>}  
<x> = 1 to 4  
<String> = 2 characters by combining '0' to 'F' and 'X'

Example :TRIGGER:ENHANCED:I2CBUS:DATA:  
HEXA1 "AB"

### **:TRIGger:ENHanced:I2CBus:DATA:MODE**

Function Enables/Disables the data conditions of the I<sup>2</sup>C bus trigger or queries the current setting.

Syntax :TRIGger:ENHanced:I2CBus:DATA:  
MODE {<Boolean>}  
:TRIGger:ENHanced:I2CBus:DATA:MODE?

Example :TRIGGER:ENHANCED:I2CBUS:DATA:MODE ON  
:TRIGGER:ENHANCED:I2CBUS:DATA:MODE? ->  
:TRIGGER:ENHANCED:I2CBUS:DATA:MODE 1

### **:TRIGger:ENHanced:I2CBus:DATA:**

#### **PATtern<x>**

Function Sets the data of the I<sup>2</sup>C bus trigger in binary notation or queries the current setting.

Syntax :TRIGger:ENHanced:I2CBus:DATA:  
PATtern<x> {<String>}  
:TRIGger:ENHanced:I2CBus:DATA:  
PATtern<x>?  
<x> = 1 to 4  
<String> = 8 characters by combining '0','1,' and 'X'

Example :TRIGGER:ENHANCED:I2CBUS:DATA:  
PATTERN1 "10101011"  
:TRIGGER:ENHANCED:I2CBUS:DATA:PATTERN1?  
-> :TRIGGER:ENHANCED:I2CBUS:DATA:  
PATTERN1 "10101011"

### **:TRIGger:ENHanced:I2CBus:DATA:PMODE**

Function Sets the pattern comparison start position mode of the data of the I<sup>2</sup>C bus trigger or queries the current setting.

Syntax :TRIGger:ENHanced:I2CBus:DATA:  
PMODE {DONTcare|SELECT}  
:TRIGger:ENHanced:I2CBus:DATA:PMODE?

Example :TRIGGER:ENHANCED:I2CBUS:DATA:  
PMODE SELECT  
:TRIGGER:ENHANCED:I2CBUS:DATA:PMODE? ->  
:TRIGGER:ENHANCED:I2CBUS:DATA:  
PMODE SELECT

### **:TRIGger:ENHanced:I2CBus:DATA:SOURce**

Function Sets the data trace of the I<sup>2</sup>C bus trigger or queries the current setting.

Syntax :TRIGger:ENHanced:I2CBus:DATA:  
SOURce {<NRf>}  
:TRIGger:ENHanced:I2CBus:DATA:SOURce?  
<NRf> = 1 to 4

Example :TRIGGER:ENHANCED:I2CBUS:DATA:SOURCE 1  
:TRIGGER:ENHANCED:I2CBUS:DATA:SOURCE?  
-> :TRIGGER:ENHANCED:I2CBUS:DATA:  
SOURCE 1

**:TRIGger:ENHanced:I2CBus:GCALl?**

Function Queries all settings related to the general call of the I<sup>2</sup>C bus trigger.

Syntax :TRIGger:ENHanced:I2CBus:GCALl?  
<x> = 1 or 2

Example :TRIGGER:ENHANCED:I2CBUS:GCALL? ->  
:TRIGGER:ENHANCED:I2CBUS:GCALL:  
BIT7MADDRESS:PATTERN "1010101";:  
TRIGGER:ENHANCED:I2CBUS:GCALL:  
SBYTE BIT7MADDRESS

**:TRIGger:ENHanced:I2CBus:GCALl:BIT7maddress?**

Function Queries all settings related to the 7-bit master address of the general call of the I<sup>2</sup>C bus trigger.

Syntax :TRIGger:ENHanced:I2CBus:GCALl:  
BIT7maddress?  
<x> = 1 or 2

Example :TRIGGER:ENHANCED:I2CBUS:GCALL:  
BIT7MADDRESS? -> :TRIGGER:ENHANCED:  
I2CBUS:GCALL:BIT7MADDRESS:  
PATTERN "1010101"

**:TRIGger:ENHanced:I2CBus:GCALl:BIT7maddress:HEXA**

Function Sets the 7-bit master address of the general call of the I<sup>2</sup>C bus trigger in hexadecimal notation.

Syntax :TRIGger:ENHanced:I2CBus:GCALl:  
BIT7maddress:HEXA {<String>}  
<x> = 1 or 2  
<String> = 2 characters by combining '0' to 'F' and 'X' (bit 0 is fixed 1)

Example :TRIGGER:ENHANCED:I2CBUS:GCALL:  
BIT7MADDRESS:HEXA "AB"

**:TRIGger:ENHanced:I2CBus:GCALl:BIT7maddress:PATtern**

Function Sets the 7-bit master address of the general call of the I<sup>2</sup>C bus trigger in binary notation or queries the current setting.

Syntax :TRIGger:ENHanced:I2CBus:GCALl:  
BIT7maddress:PATtern {<String>}  
:TRIGger:ENHanced:I2CBus:GCALl:  
BIT7maddress:PATtern?  
<x> = 1 or 2

<String> = 7 characters by combining '0', '1,' and 'X'  
Example :TRIGGER:ENHANCED:I2CBUS:GCALL:  
BIT7MADDRESS:PATTERN "1010101"  
:TRIGGER:ENHANCED:I2CBUS:GCALL:  
BIT7MADDRESS:PATTERN? -> :TRIGGER:  
ENHANCED:I2CBUS:GCALL:BIT7MADDRESS:  
PATTERN "1010101"

**:TRIGger:ENHanced:I2CBus:GCALl:SBYTE (Second Byte)**

Function Sets the second byte type of the general call of the I<sup>2</sup>C bus trigger or queries the current setting.

Syntax :TRIGger:ENHanced:I2CBus:GCALl:  
SBYTE {BIT7maddress|DONTcare|H04|H06}  
:TRIGger:ENHanced:I2CBus:GCALl:SBYTE?

Example :TRIGGER:ENHANCED:I2CBUS:GCALL:  
SBYTE BIT7MADDRESS  
:TRIGGER:ENHANCED:I2CBUS:GCALL:SBYTE?  
-> :TRIGGER:ENHANCED:I2CBUS:GCALL:  
SBYTE BIT7MADDRESS

**:TRIGger:ENHanced:I2CBus:MODE**

Function Sets the trigger mode of the I<sup>2</sup>C bus trigger or queries the current setting.

Syntax :TRIGger:ENHanced:I2CBus:MODE {ADATa|  
ESTart|GCALl|NAIGnore|SBHSmode}  
:TRIGger:ENHanced:I2CBus:MODE?

Example :TRIGGER:ENHANCED:I2CBUS:MODE ADATA  
:TRIGGER:ENHANCED:I2CBUS:MODE? ->  
:TRIGGER:ENHANCED:I2CBUS:MODE ADATA

**:TRIGger:ENHanced:I2CBus:NAIGnore?**

Function Queries all settings related to the NON ACK ignore mode of the I<sup>2</sup>C bus trigger.

Syntax :TRIGger:ENHanced:I2CBus:NAIGnore?

Example :TRIGGER:ENHANCED:I2CBUS:NAIGNORE? ->  
:TRIGGER:ENHANCED:I2CBUS:NAIGNORE:  
HSMODE 1;RACCESS 1;SBYTE 1

**:TRIGger:ENHanced:I2CBus:NAIGnore:HSMode**

Function Sets whether to ignore NON ACK in high speed mode of the I<sup>2</sup>C bus trigger or queries the current setting.

Syntax :TRIGger:ENHanced:I2CBus:NAIGnore:  
HSMode {<Boolean>}  
:TRIGger:ENHanced:I2CBus:NAIGnore:  
HSMode?

Example :TRIGGER:ENHANCED:I2CBUS:NAIGNORE:  
HSMODE ON  
:TRIGGER:ENHANCED:I2CBUS:NAIGNORE:  
HSMODE? -> :TRIGGER:ENHANCED:I2CBUS:  
NAIGNORE:HSMODE 1

## 5.29 TRIGger Group

### **:TRIGger:ENHanced:I2CBus:NAIGnore:RACcEss**

**Function** Sets whether to ignore NON ACK in read access mode of the I<sup>2</sup>C bus trigger or queries the current setting.

**Syntax** :TRIGger:ENHanced:I2CBus:NAIGnore:RACcEss {<Boolean>}  
:TRIGger:ENHanced:I2CBus:NAIGnore:RACcEss?

**Example** :TRIGGER:ENHANCED:I2CBUS:NAIGNORE:RACCESS ON  
:TRIGGER:ENHANCED:I2CBUS:NAIGNORE:RACCESS? -> :TRIGGER:ENHANCED:I2CBUS:NAIGNORE:RACCESS 1

### **:TRIGger:ENHanced:I2CBus:NAIGnore:SBYte (Start Byte)**

**Function** Sets whether to ignore NON ACK in the start byte of the I<sup>2</sup>C bus trigger or queries the current setting.

**Syntax** :TRIGger:ENHanced:I2CBus:NAIGnore:SBYte {<Boolean>}  
:TRIGger:ENHanced:I2CBus:NAIGnore:SBYte?

**Example** :TRIGGER:ENHANCED:I2CBUS:NAIGNORE:SBYTE ON  
:TRIGGER:ENHANCED:I2CBUS:NAIGNORE:SBYTE? -> :TRIGGER:ENHANCED:I2CBUS:NAIGNORE:SBYTE 1

### **:TRIGger:ENHanced:I2CBus:SBHSmode?**

**Function** Queries all settings related to the start byte and high speed mode of the I<sup>2</sup>C bus trigger.

**Syntax** :TRIGger:ENHanced:I2CBus:SBHSmode?

**Example** :TRIGGER:ENHANCED:I2CBUS:SBHSMODE? -> :TRIGGER:ENHANCED:I2CBUS:SBHSMODE:TYPE HSMODE

### **:TRIGger:ENHanced:I2CBus:SBHSmode:TYPE**

**Function** Sets the type of the start byte or high speed mode of the I<sup>2</sup>C bus trigger or queries the current setting.

**Syntax** :TRIGger:ENHanced:I2CBus:SBHSmode:TYPE {HSMODE|SBYTE}  
:TRIGger:ENHanced:I2CBus:SBHSmode:TYPE?

**Example** :TRIGGER:ENHANCED:I2CBUS:SBHSMODE:TYPE HSMODE  
:TRIGGER:ENHANCED:I2CBUS:SBHSMODE:TYPE? -> :TRIGGER:ENHANCED:I2CBUS:SBHSMODE:TYPE HSMODE

### **:TRIGger:ENHanced:SPATtern? (Serial Pattern)**

**Function** Queries all settings related to the serial pattern trigger.

**Syntax** :TRIGger:ENHanced:SPATtern?

**Example** :TRIGGER:ENHANCED:SPATTERN? -> :TRIGGER:ENHANCED:SPATTERN:BITRATE 1.000E+00;CLOCK:MODE 1;POLARITY FALL;SOURCE 1;:TRIGGER:ENHANCED:SPATTERN:CS 1;DATA:ACTIVE HIGH;SOURCE 1;:TRIGGER:ENHANCED:SPATTERN:LATCH:SOURCE 1;POLARITY FALL;:TRIGGER:ENHANCED:SPATTERN:BITRATE 1.000E+00;CLOCK:MODE 1;POLARITY FALL;SOURCE 1;:TRIGGER:ENHANCED:SPATTERN:PATTERN "1100110111101111"

### **:TRIGger:ENHanced:SPATtern:BITRate**

**Function** Sets the bit rate of the serial pattern trigger or queries the current setting.

**Syntax** :TRIGger:ENHanced:SPATtern:BITRate {<NRf>}  
:TRIGger:ENHanced:SPATtern:BITRate?  
<NRf> = 1 to 50M (bps)

**Example** :TRIGGER:ENHANCED:SPATTERN:BITRATE 1  
:TRIGGER:ENHANCED:SPATTERN:BITRATE? -> :TRIGGER:ENHANCED:SPATTERN:BITRATE 1.000E+00

**Description** This command is valid when :TRIGger:ENHanced:SPATtern:CLOCK:MODE OFF.

### **:TRIGger:ENHanced:SPATtern:CLEar**

**Function** Clears the entire pattern of the serial pattern trigger (to don't care).

**Syntax** :TRIGger:ENHanced:SPATtern:CLEar

**Example** :TRIGGER:ENHANCED:SPATTERN:CLEAR

### **:TRIGger:ENHanced:SPATtern:CLOCK?**

**Function** Queries all settings related to clock of the serial pattern trigger.

**Syntax** :TRIGger:ENHanced:SPATtern:CLOCK?

**Example** :TRIGGER:ENHANCED:SPATTERN:CLOCK? -> :TRIGGER:ENHANCED:SPATTERN:CLOCK:MODE 1;POLARITY FALL;SOURCE 1

### **:TRIGger:ENHanced:SPATtern:CLOCK:MODE**

**Function** Enables/Disables the clock of the serial pattern trigger or queries the current setting.

**Syntax** :TRIGger:ENHanced:SPATtern:CLOCK:MODE {<Boolean>}  
:TRIGger:ENHanced:SPATtern:CLOCK:MODE?

**Example** :TRIGGER:ENHANCED:SPATTERN:CLOCK:MODE ON  
:TRIGGER:ENHANCED:SPATTERN:CLOCK:MODE? -> :TRIGGER:ENHANCED:SPATTERN:CLOCK:MODE 1

**:TRIGger:ENHanced:SPATtern:CLOCK:POLarity**

Function Sets the polarity of the clock trace of the serial pattern trigger or queries the current setting.

Syntax :TRIGger:ENHanced:SPATtern:CLOCK:POLarity {FALL|RISE}  
:TRIGger:ENHanced:SPATtern:CLOCK:POLarity?

Example :TRIGGER:ENHANCED:SPATTERN:CLOCK:POLARITY FALL  
:TRIGGER:ENHANCED:SPATTERN:CLOCK:POLARITY? -> :TRIGGER:ENHANCED:SPATTERN:CLOCK:POLARITY FALL

Description This command is valid when :TRIGger:ENHanced:SPATtern:CLOCK:MODE ON.

**:TRIGger:ENHanced:SPATtern:CLOCK:SOURce**

Function Sets the clock trace of the serial pattern trigger or queries the current setting.

Syntax :TRIGger:ENHanced:SPATtern:CLOCK:SOURce {<Nrf>}  
:TRIGger:ENHanced:SPATtern:CLOCK:SOURce?  
<Nrf> = 1 to 4

Example :TRIGGER:ENHANCED:SPATTERN:CLOCK:SOURCE 1  
:TRIGGER:ENHANCED:SPATTERN:CLOCK:SOURCE? -> :TRIGGER:ENHANCED:SPATTERN:CLOCK:SOURCE 1

Description This command is valid when :TRIGger:ENHanced:SPATtern:CLOCK:MODE ON.

**:TRIGger:ENHanced:SPATtern:CS**

Function Enables/Disables the chip select of the serial pattern trigger or queries the current setting.

Syntax :TRIGger:ENHanced:SPATtern:CS {<Boolean>}  
:TRIGger:ENHanced:SPATtern:CS?

Example :TRIGGER:ENHANCED:SPATTERN:CS ON  
:TRIGGER:ENHANCED:SPATTERN:CS? -> :TRIGGER:ENHANCED:SPATTERN:CS 1

Description This command is valid when :TRIGger:ENHanced:SPATtern:CLOCK:MODE ON.

**:TRIGger:ENHanced:SPATtern:DATA?**

Function Queries all settings related to data of the serial pattern trigger.

Syntax :TRIGger:ENHanced:SPATtern:DATA?

Example :TRIGGER:ENHANCED:SPATTERN:DATA? -> :TRIGGER:ENHANCED:SPATTERN:DATA:ACTIVE HIGH;SOURCE 1

**:TRIGger:ENHanced:SPATtern:DATA:ACTIve**

Function Sets the active level of the data of the serial pattern trigger or queries the current setting.

Syntax :TRIGger:ENHanced:SPATtern:DATA:ACTIve {HIGH|LOW}  
:TRIGger:ENHanced:SPATtern:DATA:ACTIve?

Example :TRIGGER:ENHANCED:SPATTERN:DATA:ACTIVE HIGH  
:TRIGGER:ENHANCED:SPATTERN:DATA:ACTIVE? -> :TRIGGER:ENHANCED:SPATTERN:DATA:ACTIVE HIGH

**:TRIGger:ENHanced:SPATtern:DATA:SOURce**

Function Sets the data trace of the serial pattern trigger or queries the current setting.

Syntax :TRIGger:ENHanced:SPATtern:DATA:SOURce {<Nrf>}  
:TRIGger:ENHanced:SPATtern:DATA:SOURce?  
<Nrf> = 1 to 4

Example :TRIGGER:ENHANCED:SPATTERN:DATA:SOURCE 1  
:TRIGGER:ENHANCED:SPATTERN:DATA:SOURCE? -> :TRIGGER:ENHANCED:SPATTERN:DATA:SOURCE 1

**:TRIGger:ENHanced:SPATtern:HEXA**

Function Sets the pattern of the serial pattern trigger in hexadecimal notation.

Syntax :TRIGger:ENHanced:SPATtern:HEXA {<String>}  
<String> = Up to 32 characters by combining '0' to 'F' and 'X'

Example :TRIGGER:ENHANCED:SPATTERN:HEXA "ABCD"

**:TRIGger:ENHanced:SPATtern:LATCH?**

Function Queries all settings related to latch of the serial pattern trigger.

Syntax :TRIGger:ENHanced:SPATtern:LATCH?

Example :TRIGGER:ENHANCED:SPATTERN:LATCH? -> :TRIGGER:ENHANCED:SPATTERN:LATCH:SOURCE 1;POLARITY FALL



## 5.29 TRIGger Group

### **:TRIGger:ENHanced:SPATtern:LATCh:**

#### **POLarity**

**Function** Sets the polarity of the latch trace of the serial pattern trigger or queries the current setting.

**Syntax** `:TRIGger:ENHanced:SPATtern:LATCh:POLarity {FALL|RISE}`  
`:TRIGger:ENHanced:SPATtern:LATCh:POLarity?`

**Example** `:TRIGGER:ENHANCED:SPATTERN:LATCH:POLARITY FALL`  
`:TRIGGER:ENHANCED:SPATTERN:LATCH:POLARITY? -> :TRIGGER:ENHANCED:SPATTERN:LATCH:POLARITY FALL`

**Description** • This command is valid when  
`:TRIGger:ENHanced:SPATtern:CLOCK:MODE ON`.  
• This command is invalid when  
`:TRIGger:ENHanced:SPATtern:LATCh:SOURce NONE`.

### **:TRIGger:ENHanced:SPATtern:LATCh:**

#### **SOURCE**

**Function** Sets the latch trace of the serial pattern trigger or queries the current setting.

**Syntax** `:TRIGger:ENHanced:SPATtern:LATCh:SOURce {<NRf>|NONE}`  
`:TRIGger:ENHanced:SPATtern:LATCh:SOURce?`  
`<NRf> = 1 to 4`

**Example** `:TRIGGER:ENHANCED:SPATTERN:LATCH:SOURCE 1`  
`:TRIGGER:ENHANCED:SPATTERN:LATCH:SOURCE? -> :TRIGGER:ENHANCED:SPATTERN:LATCH:SOURCE 1`

**Description** This command is valid when  
`:TRIGger:ENHanced:SPATtern:CLOCK:MODE ON`.

### **:TRIGger:ENHanced:SPATtern:PATtern**

**Function** Sets the pattern of the serial pattern trigger in binary notation or queries the current setting.

**Syntax** `:TRIGger:ENHanced:SPATtern:PATtern {<String>}`  
`:TRIGger:ENHanced:SPATtern:PATtern?<String> = Up to 128 characters by combining '0', '1', and 'X'`

**Example** `:TRIGGER:ENHANCED:SPATTERN:PATTERN "1100110111101111"`  
`:TRIGGER:ENHANCED:SPATTERN:PATTERN? -> :TRIGGER:ENHANCED:SPATTERN:PATTERN "1100110111101111"`

### **:TRIGger:ENHanced:SPIBUS?**

**Function** Queries all settings related to the SPI bus trigger.

**Syntax** `:TRIGger:ENHanced:SPIBUS?`

**Example** `:TRIGGER:ENHANCED:SPIBUS? -> :TRIGGER:ENHANCED:SPIBUS:BITORDER LSBFIRST;CLOCK:POLARITY FALL;SOURCE 1;TRIGGER:ENHANCED:SPIBUS:CS:ACTIVE HIGH;SOURCE 1;TRIGGER:ENHANCED:SPIBUS:DATA1:BYTE 1;CONDITION TRUE;DPOSITION 1;PATTERN1 "00010010";PATTERN2 "00110100";PATTERN3 "01010110";PATTERN4 "00010010";SOURCE 3;TRIGGER:ENHANCED:SPIBUS:DATA2:BYTE 4;CONDITION TRUE;DPOSITION 1;PATTERN1 "00010010";PATTERN2 "00110100";PATTERN3 "01010110";PATTERN4 "00010010";SOURCE 3;TRIGGER:ENHANCED:SPIBUS:MODE WIRE3`

### **:TRIGger:ENHanced:SPIBUS:BITOrder**

**Function** Sets the bit order of the SPI bus trigger or queries the current setting.

**Syntax** `:TRIGger:ENHanced:SPIBUS:BITOrder {LSBFirst|MSBFirst}`  
`:TRIGger:ENHanced:SPIBUS:BITOrder?`

**Example** `:TRIGGER:ENHANCED:SPIBUS:BITORDER LSBFIRST`  
`:TRIGGER:ENHANCED:SPIBUS:BITORDER? -> :TRIGGER:ENHANCED:SPIBUS:BITORDER LSBFIRST`

### **:TRIGger:ENHanced:SPIBUS:CLOCK?**

**Function** Queries all settings related to the clock of the SPI bus trigger.

**Syntax** `:TRIGger:ENHanced:SPIBUS:CLOCK?`

**Example** `:TRIGGER:ENHANCED:SPIBUS:CLOCK? -> :TRIGGER:ENHANCED:SPIBUS:CLOCK:POLARITY FALL;SOURCE 1`

### **:TRIGger:ENHanced:SPIBUS:CLOCK:**

#### **POLarity**

**Function** Sets the polarity of the clock trace of the SPI bus trigger or queries the current setting.

**Syntax** `:TRIGger:ENHanced:SPIBUS:CLOCK:POLarity {FALL|RISE}`  
`:TRIGger:ENHanced:SPIBUS:CLOCK:POLarity?`

**Example** `:TRIGGER:ENHANCED:SPIBUS:CLOCK:POLARITY FALL`  
`:TRIGGER:ENHANCED:SPIBUS:CLOCK:POLARITY? -> :TRIGGER:ENHANCED:SPIBUS:CLOCK:POLARITY FALL`

**:TRIGger:ENHanced:SPIBus:CLOCK:SOURce**

Function Sets the clock trace of the SPI bus trigger or queries the current setting.

Syntax :TRIGger:ENHanced:SPIBus:CLOCK:  
SOURce {<Nrf>}  
:TRIGger:ENHanced:SPIBus:CLOCK:SOURce?  
<Nrf> = 1 to 4

Example :TRIGGER:ENHANCED:SPIBUS:CLOCK:SOURCE 1  
:TRIGGER:ENHANCED:SPIBUS:CLOCK:SOURCE?  
-> :TRIGGER:ENHANCED:SPIBUS:CLOCK:  
SOURCE 1

**:TRIGger:ENHanced:SPIBus:CS?**

Function Queries all settings related to the chip select of the SPI bus trigger.

Syntax :TRIGger:ENHanced:SPIBus:CS?  
Example :TRIGGER:ENHANCED:SPIBUS:CS? ->  
:TRIGGER:ENHANCED:SPIBUS:CS:  
ACTIVE HIGH;SOURCE 1

**:TRIGger:ENHanced:SPIBus:CS:ACTIVE**

Function Sets the active level of the chip select of the SPI bus trigger or queries the current setting.

Syntax :TRIGger:ENHanced:SPIBus:CS:  
ACTive {HIGH|LOW}  
:TRIGger:ENHanced:SPIBus:CS:ACTive?

Example :TRIGGER:ENHANCED:SPIBUS:CS:ACTIVE HIGH  
:TRIGGER:ENHANCED:SPIBUS:CS:ACTIVE? ->  
:TRIGGER:ENHANCED:SPIBUS:CS:ACTIVE HIGH

**:TRIGger:ENHanced:SPIBus:CS:SOURce**

Function Sets the chip select trace of the SPI bus trigger or queries the current setting.

Syntax :TRIGger:ENHanced:SPIBus:CS:  
SOURce {<Nrf>}  
:TRIGger:ENHanced:SPIBus:CS:SOURce?  
<Nrf> = 1 to 4

Example :TRIGGER:ENHANCED:SPIBUS:CS:SOURCE 1  
:TRIGGER:ENHANCED:SPIBUS:CS:SOURCE? ->  
:TRIGGER:ENHANCED:SPIBUS:CS:SOURCE 1

**:TRIGger:ENHanced:SPIBus:DATA<x>?**

Function Queries all settings related to the data of the SPI bus trigger.

Syntax :TRIGger:ENHanced:SPIBus:DATA<x>?  
<x> = 1 or 2

Example :TRIGGER:ENHANCED:SPIBUS:DATA1? ->  
:TRIGGER:ENHANCED:SPIBUS:DATA1:BYTE 1;  
CONDITION TRUE;DPOSITION 1;  
PATTERN1 "00010010";  
PATTERN2 "00110100";  
PATTERN3 "01010110";  
PATTERN4 "00010010";SOURCE 3

Description DATA2 is valid when

:TRIGger:ENHanced:SPIBus:MODE WIRE4 is specified.

**:TRIGger:ENHanced:SPIBus:DATA<x>:BYTE**

Function Sets the number of bytes of the data of the SPI bus trigger or queries the current setting.

Syntax :TRIGger:ENHanced:SPIBus:DATA<x>:  
BYTE {<Nrf>}  
:TRIGger:ENHanced:SPIBus:DATA<x>:BYTE?  
<x> = 1 or 2  
<Nrf> = 1 to 4

Example :TRIGGER:ENHANCED:SPIBUS:DATA1:BYTE 1  
:TRIGGER:ENHANCED:SPIBUS:DATA1:BYTE? ->  
:TRIGGER:ENHANCED:SPIBUS:DATA1:BYTE 1

**:TRIGger:ENHanced:SPIBus:DATA<x>:****CONDition**

Function Sets the determination method (match or not match) of the data of the SPI bus trigger or queries the current setting.

Syntax :TRIGger:ENHanced:SPIBus:DATA<x>:  
CONDition {FALSE|TRUE}  
:TRIGger:ENHanced:SPIBus:DATA<x>:  
CONDition?  
<x> = 1 or 2

Example :TRIGGER:ENHANCED:SPIBUS:DATA1:  
CONDITION TRUE  
:TRIGGER:ENHANCED:SPIBUS:DATA1:  
CONDITION? -> :TRIGGER:ENHANCED:SPIBUS:  
DATA1:CONDITION TRUE

**:TRIGger:ENHanced:SPIBus:DATA<x>:****DPOSITION**

Function Sets the pattern comparison start position of the data of the SPI bus trigger or queries the current setting.

Syntax :TRIGger:ENHanced:SPIBus:DATA<x>:  
DPOSITION {<Nrf>}  
:TRIGger:ENHanced:SPIBus:DATA<x>:  
DPOSITION?  
<x> = 1 or 2  
<Nrf> = 0 to 9999

Example :TRIGGER:ENHANCED:SPIBUS:DATA1:  
DPOSITION 1  
:TRIGGER:ENHANCED:SPIBUS:DATA1:  
DPOSITION? -> :TRIGGER:ENHANCED:SPIBUS:  
DATA1:DPOSITION 1

## 5.29 TRIGger Group

### **:TRIGger:ENHanced:SPIBus:DATA<x>:**

#### **HEXA<x>**

**Function** Sets the data of the SPI bus trigger in hexadecimal notation.

**Syntax** :TRIGger:ENHanced:SPIBus:DATA<x>:  
HEXA<x> {<String>}  
<x> of DATA<x> = 1 or 2  
<x> of HEXA<x> = 1 to 4  
<String> = 2 characters by combining '0' to 'F' and 'X'

**Example** :TRIGGER:ENHANCED:SPIBUS:DATA1:  
HEXA1 "AB"

### **:TRIGger:ENHanced:SPIBus:DATA<x>:**

#### **PATtern<x>**

**Function** Sets the data of the SPI bus trigger in binary notation or queries the current setting.

**Syntax** :TRIGger:ENHanced:SPIBus:DATA<x>:  
PATtern<x> {<String>}  
:TRIGger:ENHanced:SPIBus:DATA<x>:  
PATtern<x>?  
<x> of DATA<x> = 1 or 2  
<x> of PATtern<x> = 1 to 4  
<String> = 8 characters by combining '0', '1,' and 'X'

**Example** :TRIGGER:ENHANCED:SPIBUS:DATA1:  
PATTERN1 "10101011"  
:TRIGGER:ENHANCED:SPIBUS:DATA1:  
PATTERN1? -> :TRIGGER:ENHANCED:SPIBUS:  
DATA1:PATTERN1 "10101011"

### **:TRIGger:ENHanced:SPIBus:DATA<x>:**

#### **SOURCE**

**Function** Sets the trace of the data of the SPI bus trigger or queries the current setting.

**Syntax** :TRIGger:ENHanced:SPIBus:DATA<x>:  
SOURCE {<NRf>}  
:TRIGger:ENHanced:SPIBus:DATA<x>:  
SOURCE?  
<x> = 1 or 2  
<NRf> = 1 to 4

**Example** :TRIGGER:ENHANCED:SPIBUS:DATA1:SOURCE 1  
:TRIGGER:ENHANCED:SPIBUS:DATA1:SOURCE?  
-> :TRIGGER:ENHANCED:SPIBUS:DATA1:  
SOURCE 1

### **:TRIGger:ENHanced:SPIBus:MODE**

**Function** Sets the wiring system of the SPI bus trigger (three-wire or four-wire) or queries the current setting.

**Syntax** :TRIGger:ENHanced:SPIBus:MODE {WIRE3 |  
WIRE4}  
:TRIGger:ENHanced:SPIBus:MODE?

**Example** :TRIGGER:ENHANCED:SPIBUS:MODE WIRE3  
:TRIGGER:ENHANCED:SPIBUS:MODE? ->  
:TRIGGER:ENHANCED:SPIBUS:MODE WIRE3

### **:TRIGger:ENHanced:TV?**

**Function** Queries all settings related to the TV trigger.

**Syntax** :TRIGger:ENHanced:TV?

**Example** :TRIGGER:ENHANCED:TV? -> :TRIGGER:  
ENHANCED:TV:CUSTOMIZE 1;FIELD DONTCARE;  
FRAME 2;HDTV:LINE 2;POLARITY NEGATIVE;;  
TRIGGER:ENHANCED:TV:LEVEL 1.000E+00;  
NTSC:LINE 5;POLARITY NEGATIVE;;TRIGGER:  
ENHANCED:TV:PAL:LINE 2;  
POLARITY NEGATIVE;;TRIGGER:ENHANCED:TV:  
SGUARD 60;SOURCE 1;TYPE HDTV;  
USERDEFINE:DEFINITION HD;  
HFREJECTION OFF;HSYNC 50.00E+06;LINE 2;  
POLARITY NEGATIVE

### **:TRIGger:ENHanced:TV:COUPLing?**

**Function** Queries the trigger coupling of the TV trigger.

**Syntax** :TRIGger:ENHanced:TV:COUPLing?

**Example** :TRIGGER:ENHANCED:TV:COUPLING? ->  
:TRIGGER:ENHANCED:TV:COUPLING TV

### **:TRIGger:ENHanced:TV:CUSTomize**

**Function** Turns ON/OFF the sync guard function of the TV trigger or queries the current setting.

**Syntax** :TRIGger:ENHanced:TV:  
CUSTomize {<Boolean>}  
:TRIGger:ENHanced:TV:CUSTomize?

**Example** :TRIGGER:ENHANCED:TV:CUSTOMIZE ON  
:TRIGGER:ENHANCED:TV:CUSTOMIZE? ->  
:TRIGGER:ENHANCED:TV:CUSTOMIZE 1

### **:TRIGger:ENHanced:TV:FIELD**

**Function** Sets the field of the TV trigger or queries the current setting.

**Syntax** :TRIGger:ENHanced:TV:FIELD {DONTcare |  
<NRf>}  
:TRIGger:ENHanced:TV:FIELD?  
<NRf> = 1 or 2

**Example** :TRIGGER:ENHANCED:TV:FIELD DONTCARE  
:TRIGGER:ENHANCED:TV:FIELD? ->  
:TRIGGER:ENHANCED:TV:FIELD DONTCARE

### **:TRIGger:ENHanced:TV:FRAME**

**Function** Sets the frame skip function of the TV trigger or queries the current setting.

**Syntax** :TRIGger:ENHanced:TV:FRAME {<NRf>}  
:TRIGger:ENHanced:TV:FRAME?  
<NRf> = 1, 2, 4, or 8

**Example** :TRIGGER:ENHANCED:TV:FRAME 2  
:TRIGGER:ENHANCED:TV:FRAME? ->  
:TRIGGER:ENHANCED:TV:FRAME 2

**:TRIGger:ENHanced:TV:{HDTV|NTSC|PAL|USERdefine}?**

Function Queries all settings related to the TV trigger mode.

Syntax :TRIGger:ENHanced:TV:{HDTV|NTSC|PAL|USERdefine}?

Example (The following is an example for the HDTV.)  
:TRIGGER:ENHANCED:TV:HDTV? ->  
:TRIGGER:ENHANCED:TV:HDTV:LINE 2;  
POLARITY NEGATIVE

**:TRIGger:ENHanced:TV:{HDTV|NTSC|PAL}:HFRejection?(HighFrequencyREJECTION)**

Function Queries the low pass filter (HF rejection) of the TV trigger.

Syntax TRIGger:ENHanced:TV:{HDTV|NTSC|PAL}:HFRejection?

Example (The following is an example for the HDTV.)  
:TRIGGER:ENHANCED:TV:HDTV:HFREJECTION?  
-> :TRIGGER:ENHANCED:TV:HDTV:  
HFREJECTION OFF

**:TRIGger:ENHanced:TV:{HDTV|NTSC|PAL|USERdefine}:LINE**

Function Sets the line for activating the TV trigger or queries the current setting.

Syntax :TRIGger:ENHanced:TV:{HDTV|NTSC|PAL|USERdefine}:LINE  
:TRIGger:ENHanced:TV:{HDTV|NTSC|PAL|USERdefine}:LINE {<Nrf>}  
<Nrf> = 2 to 1251 (for HDTV)  
5 to 1054 (for NTSC)  
2 to 1251 (for PAL)  
2 to 2048 (for USERdefine)

Example (The following is an example for the HDTV.)  
:TRIGGER:ENHANCED:TV:HDTV:LINE 10  
:TRIGGER:ENHANCED:TV:HDTV:LINE? ->  
:TRIGGER:ENHANCED:TV:HDTV:LINE 10

**:TRIGger:ENHanced:TV:{HDTV|NTSC|PAL|USERdefine}:POLarity**

Function Sets the input polarity of the TV trigger or queries the current setting.

Syntax :TRIGger:ENHanced:TV:{HDTV|NTSC|PAL|USERdefine}:POLarity  
{NEGative|POSitive}  
:TRIGger:ENHanced:TV:{HDTV|NTSC|PAL|USERdefine}:POLarity?

Example (The following is an example for the HDTV.)  
:TRIGGER:ENHANCED:TV:HDTV:  
POLARITY NEGATIVE  
:TRIGGER:ENHANCED:TV:HDTV:POLARITY? ->  
:TRIGGER:ENHANCED:TV:HDTV:  
POLARITY NEGATIVE

**:TRIGger:ENHanced:TV:LEVEL**

Function Sets the trigger level of the TV trigger or queries the current setting.

Syntax :TRIGger:ENHanced:TV:LEVEL {<Nrf>}  
:TRIGger:ENHanced:TV:LEVEL?  
<Nrf> = 0.1 to 2.0 (div)

Example :TRIGGER:ENHANCED:TV:LEVEL 1  
:TRIGGER:ENHANCED:TV:LEVEL? ->  
:TRIGGER:ENHANCED:TV:LEVEL 1.000E+00

**:TRIGger:ENHanced:TV:SGUard**

Function Sets the sync guard of the TV trigger or queries the current setting.

Syntax :TRIGger:ENHanced:TV:SGUard {<Nrf>}  
:TRIGger:ENHanced:TV:SGUard?  
<Nrf> = 60 to 90 (%)

Example :TRIGGER:ENHANCED:TV:SGUARD 60  
:TRIGGER:ENHANCED:TV:SGUARD? ->  
:TRIGGER:ENHANCED:TV:SGUARD 60

Description This command is valid when  
:TRIGGER:ENHANCED:TV:TYPE HDTV|NTSC|  
PAL.

**:TRIGger:ENHanced:TV:SOURce**

Function Sets the trigger source of the TV trigger or queries the current setting.

Syntax :TRIGger:ENHanced:TV:SOURce {<Nrf>}  
:TRIGger:ENHanced:TV:SOURce?  
<Nrf> = 1 to 4

Example :TRIGGER:ENHANCED:TV:SOURCE 1  
:TRIGGER:ENHANCED:TV:SOURCE? ->  
:TRIGGER:ENHANCED:TV:SOURCE 1

**:TRIGger:ENHanced:TV:TYPE**

Function Sets the input type of the TV trigger or queries the current setting.

Syntax :TRIGger:ENHanced:TV:TYPE {HDTV|NTSC|  
PAL|USERdefine}  
:TRIGger:ENHanced:TV:TYPE?

Example :TRIGGER:ENHANCED:TV:TYPE HDTV  
:TRIGGER:ENHANCED:TV:TYPE? ->  
TRIGGER:ENHANCED:TV:TYPE HDTV

**:TRIGger:ENHanced:TV:USERdefine:DEFinition**

Function Sets the user-defined resolution or queries the current setting.

Syntax :TRIGger:ENHanced:TV:USERdefine:  
DEFinition {HD|SD}  
:TRIGger:ENHanced:TV:USERdefine:  
DEFinition?

Example :TRIGGER:ENHANCED:TV:USERDEFINE:  
DEFINITION HD  
:TRIGGER:ENHANCED:TV:USERDEFINE:  
DEFINITION? -> :TRIGGER:ENHANCED:TV:  
USERDEFINE:DEFINITION HD

## 5.29 TRIGger Group

### **:TRIGger:ENHanced:TV:USERdefine:**

#### **HFRejection (HighFrequencyREJECTION)**

**Function** Sets the user-defined low pass filter (HF rejection) or queries the current setting.

**Syntax** :TRIGger:ENHanced:TV:USERdefine:  
HFRejection {<Frequency>|OFF}  
:TRIGger:ENHanced:TV:USERdefine:  
HFRejection?  
<Frequency> = 300kHz

**Example** :TRIGGER:ENHANCED:TV:USERDEFINE:  
HFREJECTION OFF  
:TRIGGER:ENHANCED:TV:USERDEFINE:  
HFREJECTION? -> :TRIGGER:ENHANCED:TV:  
USERDEFINE:HFREJECTION OFF

### **:TRIGger:ENHanced:TV:USERdefine:**

#### **HSYnc (Hsync Freq)**

**Function** Sets the user-defined horizontal sync signal or queries the current setting.

**Syntax** :TRIGger:ENHanced:TV:USERdefine:  
HSYnc {<Frequency>}  
:TRIGger:ENHanced:TV:USERdefine:HSYnc?  
<Frequency> = 10k to 200k (Hz)

**Example** :TRIGGER:ENHANCED:TV:USERDEFINE:  
HSYNC 10KHZ  
:TRIGGER:ENHANCED:TV:USERDEFINE:HSYNC?  
-> :TRIGGER:ENHANCED:TV:USERDEFINE:  
HSYNC 10.00E+03

### **:TRIGger:ESTate?**

**Function** Queries all settings related to the edge/state trigger.

**Syntax** :TRIGger:ESTate?

**Example** :TRIGGER:ESTATE? ->  
:TRIGGER:ESTATE:EOR:CHANNEL1 DONTCARE;  
CHANNEL2 DONTCARE;CHANNEL3 DONTCARE;  
CHANNEL4 DONTCARE;:TRIGGER:ESTATE:  
SOURCE 1;POLARITY ENTER

### **:TRIGger:ESTate:EOR?**

**Function** Queries all settings related to the OR trigger.

**Syntax** :TRIGger:ESTate:EOR?

**Example** :TRIGGER:ESTATE:EOR? ->  
:TRIGGER:ESTATE:EOR:CHANNEL1 DONTCARE;  
CHANNEL2 DONTCARE;CHANNEL3 DONTCARE;  
CHANNEL4 DONTCARE

### **:TRIGger:ESTate:EOR:CHANnel<x>**

**Function** Sets the channel polarity of the OR trigger or queries the current setting.

**Syntax** :TRIGger:ESTate:EOR:  
CHANnel<x> {DONTcare|ENTER|EXIT|FALL|  
RISE}  
:TRIGger:ESTate:EOR:CHANnel<x>?  
<x> = 1 to 4

**Example** :TRIGGER:ESTATE:EOR:CHANNEL1 DONTCARE  
:TRIGGER:ESTATE:EOR:CHANNEL1? ->  
:TRIGGER:ESTATE:EOR:CHANNEL1 DONTCARE

**Description** • This command is valid when :TRIGger:TYPE  
EOR.  
• {ENTER|EXIT} is valid when  
:TRIGger:SOURce:CHANnel<x>:WINDow ON.  
For all other cases, {FALL|RISE} is valid.

### **:TRIGger:ESTate:POLarity**

**Function** Sets the polarity of the edge/state trigger or queries the current setting.

**Syntax** :TRIGger:ESTate:POLarity {ENTER|EXIT|  
FALL|RISE}  
:TRIGger:ESTate:POLarity?

**Example** :TRIGGER:ESTATE:POLARITY ENTER  
:TRIGGER:ESTATE:POLARITY? ->  
:TRIGGER:ESTATE:POLARITY ENTER

**Description** • This command is valid when :TRIGger:TYPE  
EDGE|EQUalify|STATE.  
• This command is invalid when :TRIGger:TYPE  
EDGE and :TRIGger:ESTate:SOURce LINE.  
• {ENTER|EXIT} is valid when :TRIGger:TYPE  
EDGE|EQUalify and  
:TRIGger:SOURce:CHANnel<x>:WINDow ON.  
{FALL|RISE} is valid when :TRIGger:TYPE  
EDGE|EQUalify and  
:TRIGger:SOURce:CHANnel<x>:WINDow OFF.  
• {ENTER|EXIT} is valid when :TRIGger:TYPE  
STATE.

### **:TRIGger:ESTate:SOURce**

**Function** Sets the trigger source of the edge/state trigger or queries the current setting.

**Syntax** :TRIGger:ESTate:SOURce {<NRf>|EXTernal|  
LINE}  
:TRIGger:ESTate:SOURce?  
<NRf> = 1 to 4

**Example** :TRIGGER:ESTATE:SOURCE EXTERNAL  
:TRIGGER:ESTATE:SOURCE? ->  
:TRIGGER:ESTATE:SOURCE EXTERNAL

**Description** • This command is valid when :TRIGger:TYPE  
EDGE|EQUalify.  
• {<NRf>|EXTernal|LINE} is valid when  
:TRIGger:TYPE EDGE.  
• {<NRf>|EXTernal} is valid when  
:TRIGger:TYPE EQUalify.

**:TRIGger:HOLDOff**

Function Sets the hold off time or queries the current setting.

Syntax :TRIGger:HOLDOff {<Time>}  
:TRIGger:HOLDOff?  
<Time> = 20 ns to 10 s (5 ns steps)

Example :TRIGGER:HOLDOFF 1S  
:TRIGGER:HOLDOFF? ->  
:TRIGGER:HOLDOFF 1.000E+00

**:TRIGger:MODE**

Function Sets the trigger mode or queries the current setting.

Syntax :TRIGger:MODE {ALEvel|AUTO|NORMal|  
NSingle|Single}  
:TRIGger:MODE?

Example :TRIGGER:MODE ALEVEL  
:TRIGGER:MODE? -> :TRIGGER:MODE ALEVEL

**:TRIGger:POSition**

Function Sets the trigger position or queries the current setting.

Syntax :TRIGger:POSition {<NRf>}  
:TRIGger:POSition?  
<NRf> = 0 to 100 (%)

Example :TRIGGER:POSITION 10  
:TRIGGER:POSITION? ->  
:TRIGGER:POSITION 10

**:TRIGger:SCount (Single(N) Count)**

Function Sets the number of times the trigger is to be activated when the trigger mode is Single(N) or queries the current setting.

Syntax :TRIGger:SCount {<NRf>}  
:TRIGger:SCount?  
<NRf> = See the DL9000 User's Manual.

Example :TRIGGER:SCOUNT 1  
:TRIGGER:SCOUNT? -> :TRIGGER:SCOUNT 1

**:TRIGger:SOURce?**

Function Queries all settings related to the trigger source.

Syntax :TRIGger:SOURce?

Example :TRIGGER:SOURCE? -> :TRIGGER:SOURCE:  
CHANNEL1:COUPLING DC;HFREJECTION OFF;  
HYSTERESIS HIGH;LEVEL 1.000E+00;  
STATE HIGH;WIDTH 1.000E+00;WINDOW 0;  
TRIGGER:SOURCE:CHANNEL2:COUPLING DC;  
HFREJECTION OFF;HYSTERESIS HIGH;  
LEVEL 1.000E+00;STATE HIGH;  
WIDTH 1.000E+00;WINDOW 0;:TRIGGER:  
SOURCE:CHANNEL3:COUPLING DC;  
HFREJECTION OFF;HYSTERESIS HIGH;  
LEVEL 1.000E+00;STATE HIGH;  
WIDTH 1.000E+00;WINDOW 0;:TRIGGER:  
SOURCE:CHANNEL4:COUPLING DC;  
HFREJECTION OFF;HYSTERESIS HIGH;  
LEVEL 1.000E+00;STATE HIGH;  
WIDTH 1.000E+00;WINDOW 0;:TRIGGER:  
SOURCE:EXTERNAL:LEVEL 0.000E+00;  
PROBE 1;:TRIGGER:SOURCE:LOGIC AND

**:TRIGger:SOURce:CHANnel<x>?**

Function Queries all settings related to the channel of the trigger source.

Syntax :TRIGger:SOURce:CHANnel<x>?  
<x> = 1 to 4

Example :TRIGGER:SOURCE:CHANNEL1? ->  
:TRIGGER:SOURCE:CHANNEL1:COUPLING DC;  
HFREJECTION OFF;HYSTERESIS HIGH;  
LEVEL 1.000E+00;STATE HIGH;  
WIDTH 1.000E+00;WINDOW 0

**:TRIGger:SOURce:CHANnel<x>:COUPling**

Function Sets the trigger coupling of the channel or queries the current setting.

Syntax :TRIGger:SOURce:CHANnel<x>:  
COUPling {AC|DC}  
:TRIGger:SOURce:CHANnel<x>:COUPling?  
<x> = 1 to 4

Example :TRIGGER:SOURCE:CHANNEL1:COUPLING AC  
:TRIGGER:SOURCE:CHANNEL1:COUPLING? ->  
:TRIGGER:SOURCE:CHANNEL1:COUPLING DC

## 5.29 TRIGger Group

### **:TRIGger:SOURCE:CHANNEL<x>:**

#### **HFRejection (HighFrequencyREJECTION)**

**Function** Sets the low pass filter (HF rejection) of the channel or queries the current setting.

**Syntax** :TRIGger:SOURCE:CHANNEL<x>:  
HFRejection {<Frequency>|OFF}  
:TRIGger:SOURCE:CHANNEL<x>:HFRejection?  
<x> = 1 to 4  
<Frequency> = 20MHz or 15kHz

**Example** :TRIGGER:SOURCE:CHANNEL1:  
HFREJECTION OFF  
:TRIGGER:SOURCE:CHANNEL1:HFREJECTION?  
-> :TRIGGER:SOURCE:CHANNEL1:  
HFREJECTION OFF

**Description** This command is invalid when the trigger source is {EXTERNAL|LINE}.

### **:TRIGger:SOURCE:CHANNEL<x>:**

#### **HYSTeresis**

**Function** Sets the hysteresis of the channel or queries the current setting.

**Syntax** :TRIGger:SOURCE:CHANNEL<x>:  
HYSTeresis {HIGH|LOW}  
:TRIGger:SOURCE:CHANNEL<x>:HYSTeresis?  
<x> = 1 to 4

**Example** :TRIGGER:SOURCE:CHANNEL1:  
HYSTERESIS HIGH  
:TRIGGER:SOURCE:CHANNEL1:HYSTERESIS? ->  
:TRIGGER:SOURCE:CHANNEL1:  
HYSTERESIS HIGH

### **:TRIGger:SOURCE:CHANNEL<x>:LEVel**

**Function** Sets the trigger level of the channel or queries the current setting.

**Syntax** :TRIGger:SOURCE:CHANNEL<x>:  
LEVel {<Voltage>|<Current>}  
:TRIGger:SOURCE:CHANNEL<x>:LEVel?  
<x> = 1 to 4  
<Voltage> and <Current> = See the DL9000 User's Manual.

**Example** :TRIGGER:SOURCE:CHANNEL1:LEVEL 1V  
:TRIGGER:SOURCE:CHANNEL1:LEVEL? ->  
:TRIGGER:SOURCE:CHANNEL1:  
LEVEL 1.000E+00

### **:TRIGger:SOURCE:CHANNEL<x>:STATE**

**Function** Sets the condition to be satisfied of the channel or queries the current setting.

**Syntax** :TRIGger:SOURCE:CHANNEL<x>:  
STATE {DONTcare|HIGH|IN|LOW|OUT}  
:TRIGger:SOURCE:CHANNEL<x>:STATE?  
<x> = 1 to 4

**Example** :TRIGGER:SOURCE:CHANNEL1:STATE HIGH  
:TRIGGER:SOURCE:CHANNEL1:STATE? ->  
:TRIGGER:SOURCE:CHANNEL1:STATE HIGH

**Description** • This command is valid when :TRIGger:TYPE EQUALify|I2Cbus|PQUALify|PSTATE|SPATtern|STATE.  
• {HIGH|LOW} is valid when :TRIGger:TYPE I2Cbus|SPATtern.  
• {IN|OUT} is valid when :TRIGger:TYPE EQUALify|PQUALify|PSTATE|STATE and :TRIGger:SOURCE:CHANNEL<x>:WINDOW ON.  
{HIGH|LOW} is valid when :TRIGger:TYPE EQUALify|PQUALify|PSTATE|STATE and :TRIGger:SOURCE:CHANNEL<x>:WINDOW OFF.

### **:TRIGger:SOURCE:CHANNEL<x>:WIDTh**

**Function** Sets the window trigger width of the channel or queries the current setting.

**Syntax** :TRIGger:SOURCE:CHANNEL<x>:  
WIDTh {<Voltage>|<Current>}  
:TRIGger:SOURCE:CHANNEL<x>:WIDTh?  
<x> = 1 to 4  
<Voltage> and <Current> = See the DL9000 User's Manual.

**Example** :TRIGGER:SOURCE:CHANNEL1:WIDTH 1V  
:TRIGGER:SOURCE:CHANNEL1:WIDTH? ->  
:TRIGGER:SOURCE:CHANNEL1:WIDTH  
1.000E+00

**Description** This command is valid when :TRIGger:SOURCE:CHANNEL<x>:WINDOW ON.

### **:TRIGger:SOURCE:CHANNEL<x>:WINDow**

**Function** Turns ON/OFF the window of the channel or queries the current setting.

**Syntax** :TRIGger:SOURCE:CHANNEL<x>:  
WINDow {<Boolean>}  
:TRIGger:SOURCE:CHANNEL<x>:WINDow?  
<x> = 1 to 4

**Example** :TRIGGER:SOURCE:CHANNEL1:WINDOW ON  
:TRIGGER:SOURCE:CHANNEL1:WINDOW? ->  
:TRIGGER:SOURCE:CHANNEL1:WINDOW 1

### **:TRIGger:SOURCE:EXTErnal?**

**Function** Queries all settings related to the external trigger.

**Syntax** :TRIGger:SOURCE:EXTErnal?  
**Example** :TRIGGER:SOURCE:EXTERNAL? ->  
:TRIGGER:SOURCE:EXTERNAL:  
LEVEL 0.000E+00;PROBE 1

**:TRIGger:SOURce:EXTErnal:LEVel**

Function Sets the trigger level of the external trigger or queries the current setting.

Syntax :TRIGger:SOURce:EXTErnal:LEVel {<Voltage>|<Current>}  
:TRIGger:SOURce:EXTErnal:LEVel?  
<x> = 1 to 4  
<Voltage> and <Current> = See the DL9000 User's Manual.

Example :TRIGGER:SOURCE:EXTERNAL:LEVEL 1V  
:TRIGGER:SOURCE:EXTERNAL:LEVEL? ->  
:TRIGGER:SOURCE:EXTERNAL:  
LEVEL 1.000E+00

Description This command is valid when :TRIGger:TYPE  
EDGE|EQUalify|PQUalify|PULSE.

**:TRIGger:SOURce:EXTErnal:PROBE**

Function Sets the probe attenuation of the external trigger or queries the current setting.

Syntax :TRIGger:SOURce:EXTErnal:PROBE {<Nrf>}  
:TRIGger:SOURce:EXTErnal:PROBE?  
<Nrf> = 1,10

Example :TRIGGER:SOURCE:EXTERNAL:PROBE 1  
:TRIGGER:SOURCE:EXTERNAL:PROBE? ->  
:TRIGGER:SOURCE:EXTERNAL:PROBE 1

Description This command is valid when :TRIGger:TYPE  
EDGE|EQUalify|PQUalify|PULSE.

**:TRIGger:SOURce:LOGic**

Function Sets the trigger source logic or queries the current setting.

Syntax :TRIGger:SOURce:LOGic {AND|OR}  
:TRIGger:SOURce:LOGic?

Example :TRIGGER:SOURCE:LOGIC AND  
:TRIGGER:SOURCE:LOGIC? ->  
:TRIGGER:SOURCE:LOGIC AND

Description This command is valid when :TRIGger:TYPE  
EQUalify|I2CBus|PQUalify|PSTATE|  
SPATtern|STATE.

**:TRIGger:TYPE**

Function Sets the trigger type or queries the current setting.

Syntax :TRIGger:TYPE {EDGE|EICYcle|EIDelay|  
EISequence|EOR|EQUalify|I2CBus|  
PQUalify|PSTATE|PULSE|SPATtern|SPIBus|  
STATE|TV}  
:TRIGger:TYPE?

Example :TRIGGER:TYPE EDGE  
:TRIGGER:TYPE? -> :TRIGGER:TYPE EDGE

**:TRIGger:WIDTh?**

Function Queries all settings related to the pulse width trigger.

Syntax :TRIGger:WIDTh?  
Example :TRIGGER:WIDTH? -> :TRIGGER:WIDTH:  
MODE OUT;POLARITY POSITIVE;SOURCE 1;  
TIME1 1.000E-09;TIME2 1.000E-09

**:TRIGger:WIDTh:MODE**

Function Sets the determination mode of the pulse width trigger or queries the current setting.

Syntax :TRIGger:WIDTh:MODE {BETween|IN|  
NOTBetween|OUT|TIMEout}  
:TRIGger:WIDTh:MODE?

Example :TRIGGER:WIDTH:MODE BETWEEN  
:TRIGGER:WIDTH:MODE? ->  
:TRIGGER:WIDTH:MODE BETWEEN

**:TRIGger:WIDTh:POLarity**

Function Sets the polarity of the pulse width trigger or queries the current setting.

Syntax :TRIGger:WIDTh:POLarity {FALSE|IN|  
NEGative|OUT|POSitive|TRUE}  
:TRIGger:WIDTh:POLarity?

Example :TRIGGER:WIDTH:POLARITY POSITIVE  
:TRIGGER:WIDTH:POLARITY? ->  
:TRIGGER:WIDTH:POLARITY POSITIVE

Description • {IN|OUT} is valid when :TRIGger:TYPE  
PQUalify|PULSE and  
:TRIGger:SOURce:CHANnel<x>:WINDow ON.  
{HIGH|LOW} is valid when :TRIGger:TYPE  
PQUalify|PULSE and  
:TRIGger:SOURce:CHANnel<x>:WINDow OFF.  
• {FALSE|TRUE} is valid when :TRIGger:TYPE  
PSTATE.

**:TRIGger:WIDTh:SOURce**

Function Sets the trigger source of the pulse width trigger or queries the current setting.

Syntax :TRIGger:WIDTh:SOURce {<Nrf>|EXTErnal}  
:TRIGger:WIDTh:SOURce?  
<Nrf> = 1 to 4

Example :TRIGGER:WIDTH:SOURCE EXTERNAL  
:TRIGGER:WIDTH:SOURCE? ->  
:TRIGGER:WIDTH:SOURCE EXTERNAL

Description This command is valid when :TRIGger:TYPE  
PQUalify|PULSE.

**:TRIGger:WIDTh:TIME<x>**

Function Sets the pulse width of the pulse width trigger or queries the current setting.

Syntax :TRIGger:WIDTh:TIME<x> {<Time>}  
:TRIGger:WIDTh:TIME<x>?  
<x> = 1 or 2

Example :TRIGGER:WIDTH:TIME1 1S  
:TRIGGER:WIDTH:TIME1? ->  
:TRIGGER:WIDTH:TIME1 1.000E+00

Description TIME2 is valid when :TRIGger:WIDTh:MODE  
BETween|NOTBetween.



## 5.30 WAVEform Group

The commands in this group deal with acquired waveform data. There are no front panel keys that correspond to the commands in this group.

### :WAVEform?

Function Queries all information about the waveform data.  
 Syntax :WAVEform?  
 Example :WAVEFORM? -> :WAVEFORM:TRACE 1;  
 RECORD 0;START 0;END 6249999;  
 FORMAT WORD;  
 BYTEORDER LSBFIRST

### :WAVEform:BITS?

Function Queries the bit length of the waveform data specified by ":WAVEform:TRACE".  
 Syntax :WAVEform:BITS?  
 Example :WAVEFORM:BITS? -> :WAVEFORM:BITS 16

### :WAVEform:BYTeorder

Function Sets the transmission order when using word format of two bytes or more or queries the current setting.  
 Syntax :WAVEform:BYTeorder {LSBFirst|MSBFirst}  
 :WAVEform:BYTeorder?  
 Example :WAVEFORM:BYTEORDER LSBFIRST  
 :WAVEFORM:BYTEORDER? ->  
 :WAVEFORM:BYTEORDER LSBFIRST

### :WAVEform:END

Function Sets the last data point of the waveform specified by :WAVEform:TRACE or queries the current setting.  
 Syntax :WAVEform:END {<NRf>}  
 :WAVEform:END?  
 <NRf> = 0 to 6,249,999  
 Example :WAVEFORM:END 12499  
 :WAVEFORM:END? -> :WAVEFORM:END 12499  
 Description The total number of data points can be queried using :WAVEform:LENGth?.

### :WAVEform:FORMat

Function Sets the format of the data to be transmitted or queries the current setting.  
 Syntax :WAVEform:FORMat {ASCIi|BYTE|WORD}  
 :WAVEform:FORMat?  
 Example :WAVEFORM:FORMAT ASCII  
 :WAVEFORM:FORMAT? ->  
 :WAVEFORM:FORMAT ASCII  
 Description For details on the differences in the format setting, see the description of :WAVEform:SEND?.

### :WAVEform:LENGth?

Function Queries the total number of points of the waveform specified by ":WAVEform:TRACE".  
 Syntax :WAVEform:LENGth?  
 Example :WAVEFORM:LENGTH? ->  
 :WAVEFORM:LENGTH 12500

### :WAVEform:OFFSet?

Function Queries the offset value when converting the waveform data specified by :WAVEform:TRACE to physical values.  
 Syntax :WAVEform:OFFSet?  
 Example :WAVEFORM:OFFSET? -> 0.000E+00  
 Description • The offset value is used when converting the <Block data> that is output using :WAVEform:SEND? to physical values.  
 • When :CHANnel<x>:OCANcel is ON, 0 is returned.

### :WAVEform:RANGE?

Function Queries the range value when converting the waveform data specified by :WAVEform:TRACE to physical values.  
 Syntax :WAVEform:RANGE?  
 Example :WAVEFORM:RANGE? -> 5.000E+00  
 Description The range value is used when converting the <Block data> that is output using :WAVEform:SEND? to physical values.

### :WAVEform:RECORD

Function Sets the target record number for the commands in the WAVEform group or queries the current setting.  
 Syntax :WAVEform:RECORD {AVERAge|MINimum|<NRf>}  
 :WAVEform:RECORD?  
 <NRf> = 0 to -1999  
 Example :WAVEFORM:RECORD 0  
 :WAVEFORM:RECORD? -> :WAVEFORM:RECORD 0  
 Description • If "AVERAge" is specified, the commands in the WAVEform group are applied to the average value of the history waveform. The record numbers to be averaged are set using the ":HISTory[:CURRent]:DISPlay" command. In addition, the highlight display mode must be set to "AVERAge." Set the highlight display mode using the ":HISTory[:CURRent]:MODE" command.  
 • Specifying "MINimum" sets the record to the minimum record number. The selectable record number varies depending on the model and acquisition setting. For details, see the DL9000 User's Manual.

### :WAVEform:RECORD? MINimum

Function Queries the minimum record number of the history of the target channel.  
 Syntax :WAVEform:RECORD? MINimum  
 Example :WAVEFORM:RECORD? MINimum ->  
 :WAVEFORM:RECORD -1999

**:WAVEform:SEND?**

- Function** Queries the waveform data specified by “:WAVEform:TRACe”.
- Syntax** :WAVEform:SEND? [ {<NRf>} ]  
 <NRf> = 1 to 2000  
 Varies depending on the record length setting.
- Example** :WAVEFORM:SEND? -> #8 (number of bytes, 8 digits) (data sequence)  
 or <NRf> , <NRf> , ...
- Description** • The output format of :WAVEform:SEND? varies depending on the :WAVEform:FORMat setting.
- (1) When set to ASCii  
 Returned in the following format: <Voltage> , <Voltage> , ... <Voltage> .
  - (2) When set to BYTE or WORD  
 Returned in the <Block data> format.  
 You can convert the value using the following equation.  

$$\text{Voltage (computed value)} = (\text{range} \times \text{data} / \text{divisions}^*) + \text{offset}$$
    - \* BYTE: Divisions = 12.5
    - WORD: Divisions = 3200
- <NRf> can be omitted. If <NRf> is attached, waveform data is queried <NRf> times in order from the record number specified by :WAVEform:RECOrd - <NRf> + 1.

**:WAVEform:SIGN?**

- Function** Queries the existence of a sign when querying the waveform data specified by :WAVEform:TRACe using binary data.
- Syntax** :WAVEform:SIGN?
- Example** :WAVEFORM:SIGN? -> :WAVEFORM:SIGN 1

**:WAVEform:SRATe? (Sample RATE)**

- Function** Queries the sample rate of the record specified by :WAVEform:RECOrd.
- Syntax** :WAVEform:SRATe?
- Example** :WAVEFORM:SRATE? ->  
 :WAVEFORM:SRATE 1.25E+09

**:WAVEform:START**

- Function** Sets the first data point of the waveform specified by :WAVEform:TRACe or queries the current setting.
- Syntax** :WAVEform:START {<NRf>}  
 :WAVEform:START?
- <NRf> = 0 to 6,249,999 (0 to 2,499,999 on 2.5 MW memory models)
- Example** :WAVEFORM:START 0  
 :WAVEFORM:START? -> :WAVEFORM:START 0

**:WAVEform:TRACe**

- Function** Sets the target waveform or queries the current setting.
- Syntax** :WAVEform:TRACe {<NRf> | MATH<x> | REFerence<x>}  
 :WAVEform:TRACe?  
 <NRf> = 1 to 4  
 <x> of MATH<x> = 1 to 8  
 <x> of REFerence<x> = 1 to 4
- Example** :WAVEFORM:TRACE 1  
 :WAVEFORM:TRACE? -> :WAVEFORM:TRACE 1

**:WAVEform:TRIGger?**

- Function** Queries the trigger position of the record specified by :WAVEform:RECOrd.
- Syntax** :WAVEform:TRIGger?
- Example** :WAVEFORM:TRIGGER? ->  
 :WAVEFORM:TRIGGER 6250
- Description** Queries the number of points from the first point of the record length to the trigger position.

**:WAVEform:TYPE?**

- Function** Queries the acquisition mode of the waveform specified by :WAVEform:TRACe.
- Syntax** :WAVEform:TYPE?
- Example** :WAVEFORM:TYPE? ->  
 :WAVEFORM:TYPE NORMAL

## 5.31 ZOOM Group

**: ZOOM?**

Function Queries all settings related to the waveform zoom.  
 Syntax :ZOOM?  
 Example :ZOOM? -> :ZOOM:ALLOCATION1:TRACE1 1;  
 TRACE2 1;TRACE3 1;TRACE4 1;TRACE5 1;  
 TRACE6 1;TRACE7 1;TRACE8 1;:ZOOM:  
 ALLOCATION2:TRACE1 1;TRACE2 1;TRACE3 1;  
 TRACE4 1;TRACE5 1;TRACE6 1;TRACE7 1;  
 TRACE8 1;:ZOOM:FORMAT1 MAIN;  
 FORMAT2 MAIN;HLINKAGE 0;HORIZONTAL1:  
 ASCROLL:SPEED 5;:ZOOM:HORIZONTAL1:  
 MAG 2.000E+00;POSITION 0.000E+00;:ZOOM:  
 HORIZONTAL2:ASCROLL:SPEED 5;:ZOOM:  
 HORIZONTAL2:MAG 2.000E+00;  
 POSITION 0.000E+00;:ZOOM:MODE MAIN;  
 TYPE1 HORIZONTAL;TYPE2 HORIZONTAL;  
 VERTICAL1:MAG 1.000E+00;  
 POSITION 0.000E+00;TRACE 1;:ZOOM:  
 VERTICAL2:MAG 1.000E+00;  
 POSITION 0.000E+00;TRACE 1;:ZOOM:  
 VLINKAGE 0

**: ZOOM:ALLOCATION<x>?**

Function Queries all settings related to the zoom source waveform.  
 Syntax :ZOOM:ALLOCATION<x>?  
 <x> = 1 or 2  
 Example :ZOOM:ALLOCATION1? ->  
 :ZOOM:ALLOCATION1:TRACE1 1;TRACE2 1;  
 TRACE3 1;TRACE4 1;TRACE5 1;TRACE6 1;  
 TRACE7 1;TRACE8 1

**: ZOOM:ALLOCATION<x>:ALLON**

Function Sets all waveforms to be zoomed.  
 Syntax :ZOOM:ALLOCATION<x>:ALLON  
 <x> = 1 or 2  
 Example :ZOOM:ALLOCATION1:ALLON

**: ZOOM:ALLOCATION<x>:TRACE<x>**

Function Turns ON/OFF the trace you wish to zoom or queries the current setting.  
 Syntax :ZOOM:ALLOCATION<x>:  
 TRACE<x> {<Boolean>}  
 :ZOOM:ALLOCATION<x>:TRACE<x>?  
 <x> of ALLOCATION<x> = 1 or 2  
 <x> of TRACE<x> = 1 to 8  
 Example :ZOOM:ALLOCATION1:TRACE1 ON  
 :ZOOM:ALLOCATION1:TRACE1? ->  
 :ZOOM:ALLOCATION1:TRACE1 1

**: ZOOM:FORMAT<x>**

Function Sets the display format of the zoom waveform or queries the current setting.  
 Syntax :ZOOM:FORMAT<x> {DUAL|MAIN|QUAD|SINGLE|TRIAD}  
 :ZOOM:FORMAT<x>?  
 <x> = 1 or 2  
 Example :ZOOM:FORMAT1 SINGLE  
 :ZOOM:FORMAT1? -> :ZOOM:FORMAT1 SINGLE

**: ZOOM:HLINKAGE**

Function Turns ON/OFF the horizontal link or queries the current setting.  
 Syntax :ZOOM:HLINKAGE {<Boolean>}  
 :ZOOM:HLINKAGE?  
 Example :ZOOM:HLINKAGE ON  
 :ZOOM:HLINKAGE? -> :ZOOM:HLINKAGE 1

**: ZOOM:HORIZONTAL<x>?**

Function Queries all settings related to the horizontal zoom.  
 Syntax :ZOOM:HORIZONTAL<x>?  
 <x> = 1 or 2  
 Example :ZOOM:HORIZONTAL1? ->  
 :ZOOM:HORIZONTAL1:ASCROLL:SPEED 5;:  
 ZOOM:HORIZONTAL1:MAG 2.000E+00;  
 POSITION 4.000E+00

**: ZOOM:HORIZONTAL<x>:ASCROLL?**

Function Queries all settings related to the auto scroll function.  
 Syntax :ZOOM:HORIZONTAL<x>:ASCROLL?  
 <x> = 1 or 2  
 Example :ZOOM:HORIZONTAL1:ASCROLL? ->  
 :ZOOM:HORIZONTAL1:ASCROLL:SPEED 5

**: ZOOM:HORIZONTAL<x>:ASCROLL:JUMP**

Function Moves the zoom center position to the left or right edge of the main screen.  
 Syntax :ZOOM:HORIZONTAL<x>:ASCROLL:JUMP {LEFT|RIGHT}  
 <x> = 1 or 2  
 Example :ZOOM:HORIZONTAL1:ASCROLL:JUMP RIGHT

**: ZOOM:HORIZONTAL<x>:ASCROLL:SPEED**

Function Sets the auto scroll speed or queries the current setting.  
 Syntax :ZOOM:HORIZONTAL<x>:ASCROLL:SPEED  
 {<Nrf>}  
 :ZOOM:HORIZONTAL<x>:ASCROLL:SPEED?  
 <x> = 1 or 2  
 <Nrf> = 1, 2, 5, 10, 20, 50  
 Example :ZOOM:HORIZONTAL1:ASCROLL:SPEED 1  
 :ZOOM:HORIZONTAL1:ASCROLL:SPEED? ->  
 :ZOOM:HORIZONTAL1:ASCROLL:SPEED 1

**:ZOOM:HORizontal<x>:ASCROLL:START**

Function Starts auto scrolling.  
 Syntax :ZOOM:HORizontal<x>:ASCROLL:START  
 {LEFT|RIGHT}  
 <x> = 1 or 2  
 Example :ZOOM:HORIZONTAL1:ASCROLL:START LEFT

**:ZOOM:HORizontal<x>:ASCROLL:STOP**

Function Stops auto scrolling.  
 Syntax :ZOOM:HORizontal<x>:ASCROLL:STOP  
 <x> = 1 or 2  
 Example :ZOOM:HORIZONTAL1:ASCROLL:STOP

**:ZOOM:HORizontal<x>:MAG**

Function Sets the horizontal zoom magnification or queries the current setting.  
 Syntax :ZOOM:HORizontal<x>:MAG {<Nrf>}  
 :ZOOM:HORizontal<x>:MAG?  
 <x> = 1 or 2  
 <Nrf> = See the DL9000 User's Manual.  
 Example :ZOOM:HORIZONTAL1:MAG 2  
 :ZOOM:HORIZONTAL1:MAG? ->  
 :ZOOM:HORIZONTAL1:MAG 2.000E+00

**:ZOOM:HORizontal<x>:POSITION**

Function Sets the horizontal zoom center position or queries the current setting.  
 Syntax :ZOOM:HORizontal<x>:POSITION {<Nrf>}  
 :ZOOM:HORizontal<x>:POSITION?  
 <x> = 1 or 2  
 <Nrf> = -5 to 5 (div)  
 Example :ZOOM:HORIZONTAL1:POSITION 1  
 :ZOOM:HORIZONTAL1:POSITION? ->  
 :ZOOM:HORIZONTAL1:POSITION 1.000E+00

**:ZOOM:MODE**

Function Sets the zoom waveform display format or queries the current setting.  
 Syntax :ZOOM:MODE {MAIN|MAIN\_Z1|MAIN\_Z1\_Z2|  
 MAIN\_Z2|Z1|Z1\_Z2|Z2}  
 :ZOOM:MODE?  
 Example :ZOOM:MODE MAIN\_Z1\_Z2  
 :ZOOM:MODE? -> :ZOOM:MODE MAIN\_Z1\_Z2

**:ZOOM:TYPE<x>**

Function Sets the zoom type or queries the current setting.  
 Syntax :ZOOM:TYPE<x> {HORizontal|VERTical}  
 :ZOOM:TYPE<x>?  
 <x> = 1 or 2  
 Example :ZOOM:TYPE1 VERTICAL  
 :ZOOM:TYPE1? -> :ZOOM:TYPE1 VERTICAL

**:ZOOM:VERTical<x>?**

Function Queries all settings related to the vertical zoom.  
 Syntax :ZOOM:VERTical<x>?  
 <x> = 1 or 2  
 Example :ZOOM:VERTICAL1? -> :ZOOM:VERTICAL1:  
 MAG 1.000E+00;POSITION 0.000E+00;  
 TRACE 1

**:ZOOM:VERTical<x>:INITialize**

Function Initializes the vertical zoom.  
 Syntax :ZOOM:VERTical<x>:INITialize  
 <x> = 1 or 2  
 Example :ZOOM:VERTICAL1:INITIALIZE

**:ZOOM:VERTical<x>:MAG**

Function Sets the vertical zoom magnification or queries the current setting.  
 Syntax :ZOOM:VERTical<x>:MAG {<Nrf>}  
 :ZOOM:VERTical<x>:MAG?  
 <x> = 1 or 2  
 <Nrf> = See the DL9000 User's Manual.  
 Example :ZOOM:VERTICAL1:MAG 1  
 :ZOOM:VERTICAL1:MAG? ->  
 :ZOOM:VERTICAL1:MAG 1.000E+00

**:ZOOM:VERTical<x>:POSITION**

Function Sets the vertical zoom position or queries the current setting.  
 Syntax :ZOOM:VERTical<x>:POSITION {<Nrf>}  
 :ZOOM:VERTical<x>:POSITION?  
 <x> = 1 or 2  
 <Nrf> = -4 to 4 (div)  
 Example :ZOOM:VERTICAL1:POSITION 1  
 :ZOOM:VERTICAL1:POSITION? ->  
 :ZOOM:VERTICAL1:POSITION 1.000E+00

**:ZOOM:VERTical<x>:TRACe**

Function Sets the trace you wish to display on the vertical zoom screen or queries the current setting.  
 Syntax :ZOOM:VERTical<x>:TRACe {<Nrf>}  
 :ZOOM:VERTical<x>:TRACe?  
 <x> = 1 or 2  
 <Nrf> = 1 to 8  
 Example :ZOOM:VERTICAL1:TRACE 1  
 :ZOOM:VERTICAL1:TRACE? ->  
 :ZOOM:VERTICAL1:TRACE 1

**:ZOOM:VLINKage**

Function Turns ON/OFF the vertical link or queries the current setting.  
 Syntax :ZOOM:VLINKage {<Boolean>}  
 :ZOOM:VLINKage?  
 Example :ZOOM:VLINKAGE ON  
 :ZOOM:VLINKAGE? -> :ZOOM:VLINKAGE 1

## 5.32 Common Command Group

The commands in the common group are defined in the USBTMC-USB488 and are independent of the instrument's functions. There are no front panel keys that correspond to the commands in this group.

### \*CAL? (CALibrate)

**Function** Performs calibration and queries the result.  
**Syntax** \*CAL?  
**Example** \*CAL? -> 0  
**Description** If the calibration terminates normally, 0 is returned. If an error is detected, 1 is returned.

### \*CLS (CLear Status)

**Function** Clears the standard event register, extended event register, and error queue.  
**Syntax** \*CLS  
**Example** \*CLS  
**Description** • If the \*CLS command is located immediately after the program message terminator, the output queue is also cleared.  
 • For details on the register and queue, see chapter 6.

### \*ESE (standard Event Status Enable register)

**Function** Sets the standard event enable register or queries the current setting.  
**Syntax** \*ESE {<NRf>}  
 \*ESE?  
 <NRf> = 0 to 255  
**Example** \*ESE 251  
 \*ESE? -> 251  
**Description** • Specify the value as a sum of decimal values of each bit.  
 • For example, specifying “\*ESE 251” will cause the standard enable register to be set to “11111011.” In this case, bit 2 of the standard event register is disabled which means that bit 5 (ESB) of the status byte register is not set to 1, even if a “query error” occurs.  
 • The default value is “\*ESE 0” (all bits disabled).  
 • A query using \*ESE? will not clear the contents of the standard event enable register.  
 • For details on the standard event enable register, see page 6-3.

### \*ESR? (standard Event Status Register)

**Function** Queries the standard event register and clears the register.  
**Syntax** \*ESR?  
**Example** \*ESR? -> 32  
**Description** • A sum of decimal values of each bit is returned.  
 • You can check what type of events occurred when an SRQ is generated.  
 • For example, if a value of “32” is returned, this indicates that the standard event register is set to “00100000.” In this case, you can see that the SRQ occurred due to a “command syntax error.”  
 • A query using \*ESR? will clear the contents of the standard event register.  
 • For details on the standard event register, see page 6-3.

### \*IDN? (IDeNtify)

**Description** Queries the instrument model.  
**Syntax** \*IDN?  
**Example** \*IDN? ->  
 YOKOGAWA,701313,27E100000,F1.10  
**Description** The information is returned in the following form:  
 <Manufacturer>,<Model>,<Serial No.>,<Firmware version> The values 701310, 701311, 701312, and 701313 are returned for the <Model> when the instrument is the DL9140, DL9140L, DL9240, and DL9240L, respectively.

**\*LRN? (Learn)**

Function Queries collectively the current settings of the following command groups.

ACQuire, CHANnel<x>, TIMebase, TRIGger

Syntax \*LRN?

Example \*LRN? -> :ACQUIRE:AVERAGE:COUNT 2;  
 EWEIGHT 16;:ACQUIRE:HRMODE 0;  
 INTERLEAVE 0;INTERPOLATE 1;MODE NORMAL;  
 REPETITIVE 0;RLENGTH 12500;:CHANNEL1:  
 SELECT INPUT;DISPLAY 1;BWIDTH FULL;  
 COUPLING DC;DESKEW 0.000E+00;INVERT 0;  
 LABEL:DEFINE "CH1";MODE 1;:CHANNEL1:  
 OCANCEL 0;OFFSET 0.000E+00;  
 POSITION 0.000E+00;PROBE:MODE 1;:  
 CHANNEL1:SVALUE 0;VDIV 1.000E+00;:  
 CHANNEL2:SELECT INPUT;DISPLAY 1;  
 BWIDTH FULL;COUPLING DC;  
 DESKEW 0.000E+00;INVERT 0;LABEL:  
 DEFINE "CH2";MODE 1;:CHANNEL2:  
 OCANCEL 0;OFFSET 0.000E+00;  
 POSITION 0.000E+00;PROBE:MODE 1;:  
 CHANNEL2:SVALUE 0;VDIV 1.000E+00;:  
 CHANNEL3:SELECT INPUT;DISPLAY 1;  
 BWIDTH FULL;COUPLING DC;  
 DESKEW 0.000E+00;INVERT 0;LABEL:  
 DEFINE "CH3";MODE 1;:CHANNEL3:  
 OCANCEL 0;OFFSET 0.000E+00;  
 POSITION 0.000E+00;PROBE:MODE 1;:  
 CHANNEL3:SVALUE 0;VDIV 1.000E+00;:  
 CHANNEL4:SELECT INPUT;DISPLAY 1;  
 BWIDTH FULL;COUPLING DC;  
 DESKEW 0.000E+00;INVERT 0;LABEL:  
 DEFINE "CH4";MODE 1;:CHANNEL4:  
 OCANCEL 0;OFFSET 0.000E+00;  
 POSITION 0.000E+00;PROBE:MODE 1;:  
 CHANNEL4:SVALUE 0;VDIV 1.000E+00;:  
 TIMEBASE:TDIV 1.000E-06;:TRIGGER:  
 ACTION:ACQCOUNT 1;BUZZER 0;HCOPY 0;  
 MODE OFF;SAVE 0;:TRIGGER:TYPE EDGE;  
 CLOCK:SOURCE 1;POLARITY RISE;:TRIGGER:  
 DELAY:EDGECOUNT:COUNT 1;:TRIGGER:DELAY:  
 MODE 0;POLARITY RISE;SOURCE 1;  
 TIME 0.000E+00;TYPE BYTIME;:TRIGGER:  
 EINTERVAL:EVENT1:TYPE EDGE;CLOCK:  
 SOURCE 1;POLARITY RISE;:TRIGGER:  
 EINTERVAL:EVENT1:ESTATE:SOURCE 1;  
 POLARITY RISE;:TRIGGER:EINTERVAL:  
 EVENT1:STATE:CHANNEL1 DONTCARE;  
 CHANNEL2 DONTCARE;CHANNEL3 DONTCARE;  
 CHANNEL4 DONTCARE;LOGIC AND;:TRIGGER:  
 EINTERVAL:EVENT1:WIDTH:MODE OUT;  
 POLARITY POSITIVE;SOURCE 1;  
 TIME1 1.000E-09;TIME2 2.000E-09;:  
 TRIGGER:EINTERVAL:EVENT2:TYPE EDGE;  
 CLOCK:SOURCE 1;POLARITY RISE;:TRIGGER:  
 EINTERVAL:EVENT2:ESTATE:SOURCE 1;

POLARITY RISE;:TRIGGER:EINTERVAL:  
 EVENT2:STATE:CHANNEL1 DONTCARE;  
 CHANNEL2 DONTCARE;CHANNEL3 DONTCARE;  
 CHANNEL4 DONTCARE;LOGIC AND;:TRIGGER:  
 EINTERVAL:EVENT2:WIDTH:MODE OUT;  
 POLARITY POSITIVE;SOURCE 1;  
 TIME1 1.000E-09;TIME2 2.000E-09;:  
 TRIGGER:EINTERVAL:MODE OUT;  
 TIME1 1.500E-09;TIME2 2.000E-09;TRY:  
 MODE 0;SELECT 1;:TRIGGER:ENHANCED:TV:  
 CUSTOMIZE 0;FIELD 1;FRAME 1;HDTV:  
 LINE 2;POLARITY POSITIVE;:TRIGGER:  
 ENHANCED:TV:LEVEL 500.0E-03;NTSC:  
 LINE 5;POLARITY NEGATIVE;:TRIGGER:  
 ENHANCED:TV:PAL:LINE 2;  
 POLARITY NEGATIVE;:TRIGGER:ENHANCED:TV:  
 SGUARD 75;SOURCE 1;TYPE NTSC;  
 USERDEFINE:DEFINITION HD;  
 HFREJECTION OFF;HSYNC 31.500E+03;  
 LINE 2;POLARITY POSITIVE;:TRIGGER:  
 ESTATE:EOR:CHANNEL1 RISE;CHANNEL2 RISE;  
 CHANNEL3 RISE;CHANNEL4 RISE;:TRIGGER:  
 ESTATE:SOURCE 1;POLARITY RISE;:TRIGGER:  
 HOLDOFF 20.00E-09;MODE AUTO;  
 POSITION 50;SCOUNT 1;SOURCE:CHANNEL1:  
 COUPLING DC;HFREJECTION OFF;  
 HYSTERESIS LOW;LEVEL 0.000E+00;  
 STATE DONTCARE;WIDTH 1.000E+00;  
 WINDOW 0;:TRIGGER:SOURCE:CHANNEL2:  
 COUPLING DC;HFREJECTION OFF;  
 HYSTERESIS LOW;LEVEL 0.000E+00;  
 STATE DONTCARE;WIDTH 1.000E+00;  
 WINDOW 0;:TRIGGER:SOURCE:CHANNEL3:  
 COUPLING DC;HFREJECTION OFF;  
 HYSTERESIS LOW;LEVEL 0.000E+00;  
 STATE DONTCARE;WIDTH 1.000E+00;  
 WINDOW 0;:TRIGGER:SOURCE:CHANNEL4:  
 COUPLING DC;HFREJECTION OFF;  
 HYSTERESIS LOW;LEVEL 0.000E+00;  
 STATE DONTCARE;WIDTH 1.000E+00;  
 WINDOW 0;:TRIGGER:SOURCE:EXTERNAL:  
 LEVEL 0.000E+00;PROBE 1;:TRIGGER:  
 SOURCE:LOGIC AND;:TRIGGER:WIDTH:  
 MODE OUT;POLARITY POSITIVE;SOURCE 1;  
 TIME1 1.000E-09;TIME2 2.000E-09

## 5.32 Common Command Group

### \*OPC (Operation Complete)

**Function** Sets bit 0 (OPC bit) of the standard event register to 1 upon the completion of the specified overlap command.

**Syntax** \*OPC

**Example** \*OPC

**Description**

- For the description regarding how to synchronize the program using \*OPC, see page 5-7.
- The `COMMunicate:OPSE` command is used to specify the overlap command.
- If \*OPC is not the last command of the message, the operation is not guaranteed.

### \*OPC? (Operation Complete)

**Function** If \*OPC? is transmitted and the specified overlap command is completed, ASCII code 1 is returned.

**Syntax** \*OPC?

**Example** \*OPC? -> 1

**Description**

- For the description regarding how to synchronize the program using \*OPC, see page 5-8.
- The `COMMunicate:OPSE` command is used to specify the overlap command.
- If \*OPC? is not the last command of the message, the operation is not guaranteed.

### \*OPT? (Option)

**Description** Queries the installed options.

**Syntax** \*OPT?

**Example** \*OPT? -> CH6.25MW,PRINTER,ETHER,HDD,  
USERDEFINE,I2C,PROBEPower,SCSI,ETHER,  
USERDEFINE

**Description**

- Returns the memory model and the presence/absence of the built-in printer, Ethernet, internal hard disk, user-defined computation, I<sup>2</sup>C analysis function, and rear panel probe power.
- The “\*OPT?” query must be the last query of the program message. An error occurs if there is a query after this query.

### \*PSC (Power-on Status Clear)

**Function** Sets whether or not to clear the registers below at power on or queries the current setting. The register is cleared when the value rounded to an integer is a non-zero value.

- Standard event enable register
- Extended event enable register
- Transition filter

**Syntax** \*PSC {<NRf>}

\*PSC?

<NRf> = 0 (not clear), non-zero (clear)

**Example** \*PSC 1

\*PSC? -> 1

**Description** For details on the registers, see chapter 6.

### \*RST (ReSet)

**Function** Initializes the settings.

**Syntax** \*RST

**Example** \*RST

**Description** Also clears \*OPC and \*OPC? commands that have been sent earlier.

### \*SRE (Service Request Enable register)

**Function** Sets the service request enable register or queries the current setting.

**Syntax** \*SRE <NRf>

\*SRE?

<NRf> = 0 to 255

**Example** \*SRE 239

\*SRE? -> 239

**Description**

- Specify the value as a sum of decimal values of each bit.
- For example, specifying “\*SRE 239” will cause the service request enable register to be set to “11101111.” In this case, bit 4 of the service request enable register is disabled which means that bit 4 (MAV) of the status byte register is not set to 1, even if “the output queue is not empty.”
- Bit 6 (MSS) of the status byte register is the MSS bit itself, and therefore, is ignored.
- The default value is “\*SRE 0” (all bits disabled).
- A query using \*SRE? will not clear the contents of the service request enable register.
- For details on the service request enable register, see page 6-1.

### \*STB? (Status Byte)

**Function** Queries the status byte register.

**Syntax** \*STB?

**Example** \*STB? -> 4

**Description**

- The sum of the bits is returned as a decimal value.
- Since the register is read without executing serial polling, bit 6 is a MSS bit not RQS.
- For example, if a value of 4 is returned, this indicates that the status byte register is set to “00000100.” In this case, you can see that “the error queue is not empty” (an error occurred).
- A query using \*STB? will not clear the contents of the status byte register.
- For details on the status byte register, see page 5-2.

**\*TST?**

**Function** Performs a self-test and queries the result. The self test involves internal memory tests.

**Syntax** \*TST?

**Example** \*TST? -> 0

**Description** If the self-test is successful, 0 is returned. If there is an error, 1 is returned.

**\*WAI (WAIT)**

**Function** Holds the subsequent command until the completion of the specified overlap operation.

**Syntax** \*WAI

**Example** \*WAI

**Description**


- For the description regarding how to synchronize the program using \*WAI, see page 5-7.
- The :COMMunicate:OPSE command is used to specify the overlap command.



# Chapter 6 Status Reports

## 6.1 Overview of the Status Report Status Reports

The figure below shows the status report that is read by serial polling. This status report is an extended version of the status report defined in IEEE 488.2-1992.

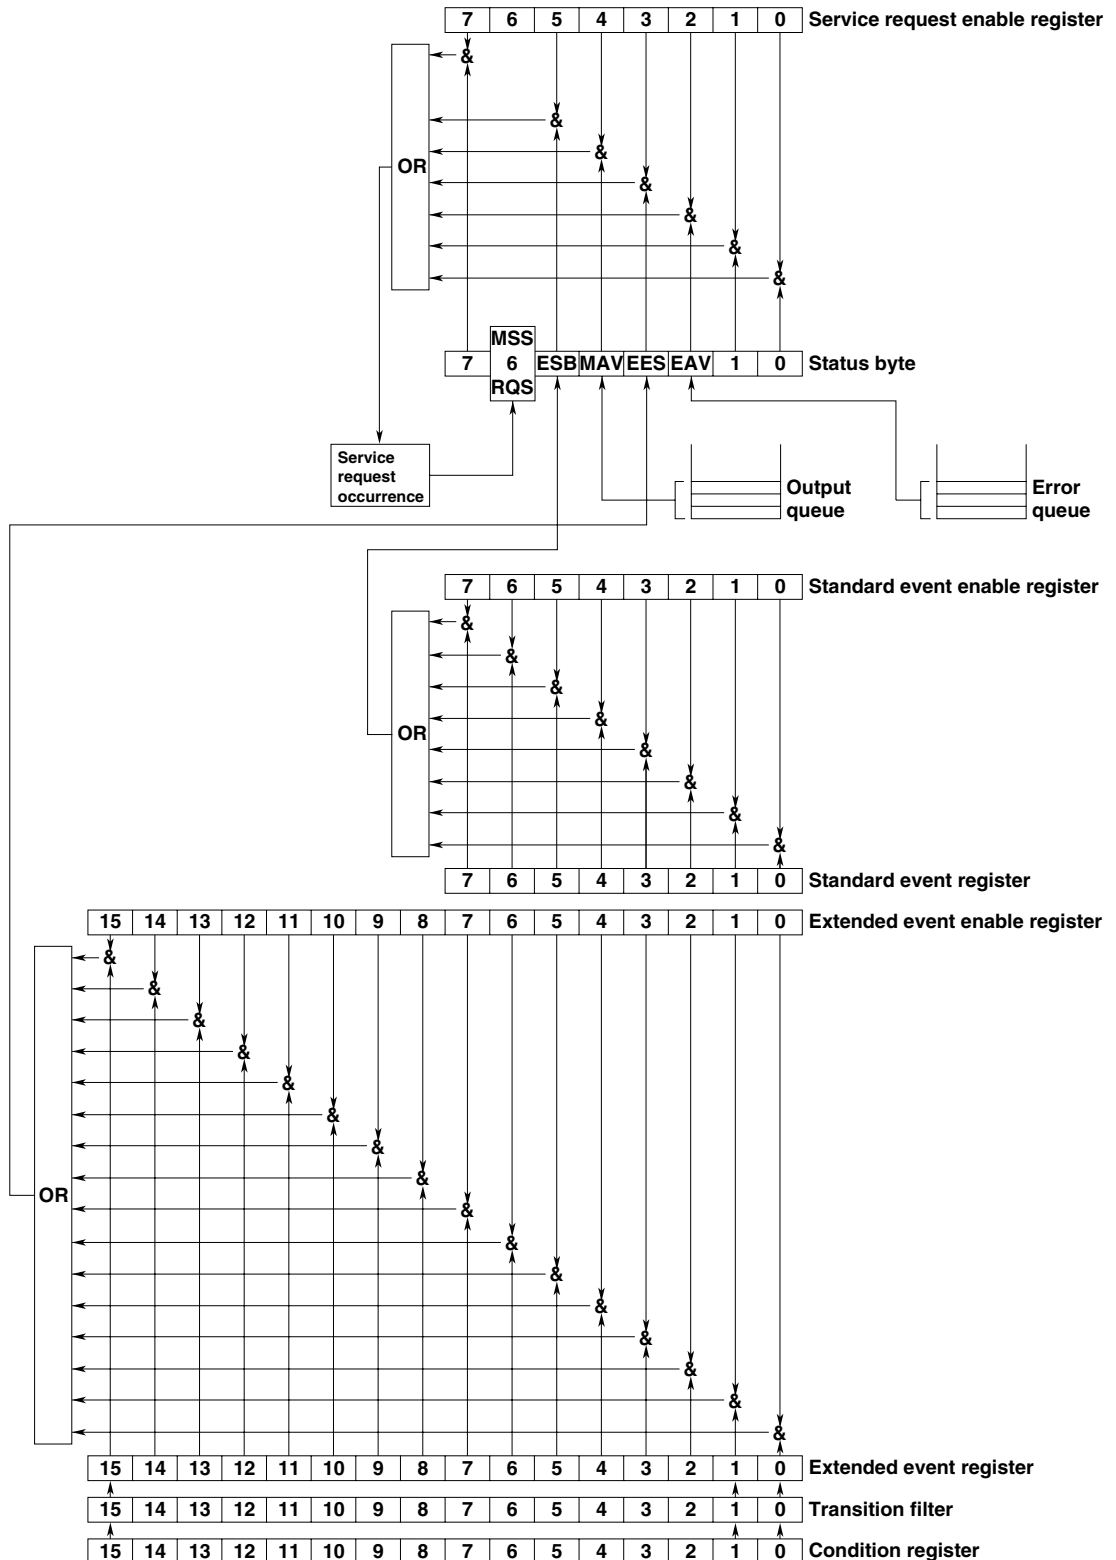

## 6.1 Overview of the Status Report/6.2 Status Byte

### Overview of the Registers and Queues

Name	Functions	Writing	Reading
Status byte		–	Serial polling (RQS), *STB?(MSS)
Service request enable register	Masks status byte	*SRE	*SRE?
Standard event register	Changes in device status	–	*ESR?
Standard event enable register	Masks standard event register	*ESE	*ESE?
Extended event register	Changes in device status	–	STATus: EESR?
Extended event enable register	Masks extended event register	STATus: EESE	STATus: EESR?
Condition register	Current instrument status	–	STATus: CONDition?
Transition filter	Conditions that change the extended event register	STATus: FILTER<x>	STATus: FILTER<x>?
Output queue	Stores a response message to a query All query commands		
Error queue	Stores the error No. and message	–	STATus: ERRor?

#### Registers and Queues That Affect the Status Byte

Registers that affect the bits of the status byte are shown below.

Standard event register:	Sets bit 5 (ESB) of the status byte to 1 or 0.
Output queue:	Sets bit 4 (MAV) of the status byte to 1 or 0.
Extended event register:	Sets bit 3 (EES) of the status byte to 1 or 0.
Error queue:	Sets bit 2 (EAV) of the status byte to 1 or 0.

#### Enable Registers

Registers that are used to mask a bit so that the bit will not affect the status byte even when it is set to 1, are shown below.

Status byte:	Mask the bits using the service request enable register.
Standard event register:	Mask the bits using the standard event enable register.
Extended event register:	Mask the bits using the extended event enable register.

#### Writing/Reading from Registers

The \*ESE command is used to set the bits in the standard event register to 1's or 0's. The \*ESE? command is used to query whether the bits in the standard event register are 1's or 0's. For details regarding these commands, see chapter 5.

## 6.2 Status Byte

### Status Byte



- **Bits 0, 1, and 7**  
Not used (always 0)
- **Bit 2 EAV (Error Available)**  
Set to 1 when the error queue is not empty. In other words, this bit is set to 1 when an error occurs. See the page 6-5.
- **Bit 3 EES (Extend Event Summary Bit)**  
Set to 0 when the logical product of the extended event register and the corresponding enable register is 1. In other words, this bit is set to 1 when an event takes place inside the instrument. See the page 6-4.
- **Bit 4 MAV (Message Available)**  
Set to "1" when the output queue is not empty. In other words, this bit is set to 1 when there are data to be transmitted. See the page 6-5.
- **Bit 5 ESB (Event Summary Bit)**  
Set to 0 when the logical product of the standard event register and the corresponding enable register is 1. In other words, this bit is set to 1 when an event takes place inside the instrument. See the page 6-3.
- **Bit 6 RQS(Request Service)/MSS(Master Status Summary)**  
Set to 1 when the logical AND of the status byte excluding Bit 6 and the service request enable register is not 0. In other words, this bit is set to 1 when the instrument is requesting service from the controller.  
RQS is set to 1 when the MSS bit changes from 0 to 1, and cleared when serial polling is carried out or when the MSS bit changes to 0.

#### Bit Masking

To mask a bit in the status byte so that it does not cause an SRQ, set the corresponding bit of the service request enable register to 0.

For example, to mask bit 2 (EAV) so that service is not requested when an error occurs, set bit 2 of the service request enable register to 0. This can be done using the \*SRE command. To query whether each bit of the service request enable register is 1 or 0, use \*SRE?. For details on the \*SRE command, see chapter 5.

### Operation of the Status Byte

A service request is issued when bit 6 of the status byte becomes 1. Bit 6 is set to 1 when any of the other bits becomes a 1 (when the corresponding bit of the service request enable register is also set to 1).

For example, if an event occurs and the logical AND of the standard event register and the corresponding enable register becomes a 1, then bit 5 (ESB) is set to 1. In this case, if bit 5 of the service request enable register is 1, bit 6 (MSS) will be set to 1, thus requesting service from the controller.

In addition, you can also check what type of event occurred by reading the contents of the status byte.

### Reading from the Status Byte

The following two methods are provided for reading the status byte.

- **Inquiry using the \*STB? query**  
Making an inquiry using the \*STB? query sets bit 6 to MSS. This causes the MSS to be read. After completion of the read-out, none of the bits in the status byte will be cleared.
- **Serial polling**  
Execution of a serial polling changes bit 6 to RQS. This causes RQS to be read. After completion of the read-out, only RQS is cleared. It is not possible to read MSS using serial polling.

### Clearing the Status Byte

No method is provided for forcibly clearing all the bits in the status byte. The bits that are cleared for each operation are shown below.

- **When a query is made using the \*STB? command**  
No bits are cleared.
- **When serial polling is executed**  
Only the RQS bit is cleared.
- **When a \*CLS command is received.**  
When the \*CLS command is received, the status byte itself is not cleared, but the contents of the standard event register (which affects the bits in the status byte) are cleared. As a result, the corresponding bits in the status byte are cleared, except bit 4 (MAV), since the output queue cannot be emptied by the \*CLS command. However, the output queue will also be cleared if the \*CLS command is received just after a program message terminator.

## 6.3 Standard Event Register

### Standard Event Register

7	6	5	4	3	2	1	0
PON	URQ	CME	EXE	DDE	QYE	RQC	OPC

- **Bit 7 PON (Power ON)**  
Set to 1 when the power is turned ON.
- **Bit 6 URQ (User Request)**  
Not used (always 0)
- **Bit 5 CME (Command Error)**  
Set to 1 when the command syntax is incorrect.  
Example Incorrectly spelled command name; "9" used in octal data.
- **Bit 4 EXE (Execution Error)**  
Set to 1 when the command syntax is correct but the command cannot be executed in the current state.  
Example Received a command with a parameter outside the range or attempted to output a hard copy while waveform acquisition is in progress.
- **Bit 3 DDE (Device Dependent Error)**  
Set to 1 when execution of the command is not possible due to an internal problem in the instrument that is not a command error or an execution error.
- **Bit 2 QYE (Query Error)**  
Set to 1 if the output queue is empty or if the data is missing even after a query has been sent.  
Example No response data; data is lost due to an overflow in the output queue.
- **Bit 1 RQC (Request Control)**  
Not used (always 0)
- **Bit 0 OPC (Operation Complete)**  
Set to 1 when the operation designated by the \*OPC command (see chapter 5) has been completed.

### Bit Masking

To mask a bit in the standard event register so that it does not cause bit 5 (ESB) of the status byte to change, set the corresponding bit in the standard event enable register to 0. Refer to Chapter 4.

For example, to mask bit 2 (QYE) so that ESB will not be set to 1, even if a query error occurs, set bit 2 of the standard event enable register to 0. This can be done using the \*ESE command. To inquire whether each bit of the standard event enable register is 1 or 0, use the \*ESE?. For details on the \*ESE command, see chapter 5.

### 6.3 Standard Event Register/6.4 Extended Event Register

#### Operation of the Standard Event Register

The standard event register is provided for eight different kinds of event which can occur inside the instrument. Bit 5 (ESB) of the status byte is set to 1 when any of the bits in this register becomes 1 (or when the corresponding bit of the standard event enable register becomes 1).

Example

1. A query error occurs.
2. Bit 2 (QYE) is set to 1.
3. Bit 5 (ESB) of the status byte is set to 1 if bit 2 of the standard event enable register is 1.

It is also possible to check what type of event has occurred inside the instrument by reading the contents of the standard event register.

#### Reading from the Standard Event Register

The contents of the standard event register can be read by the \*ESR command. After the register is read, it is cleared.


#### Clearing the Standard Event Register

The standard event register is cleared in the following three cases.

- When the contents of the standard event register are read using the \*ESR command.
- When a \*CLS command is received.
- When the instrument is power cycled.

### 6.4 Extended Event Register

Reading the extended event register tells you whether changes in the condition register (reflecting internal conditions) have occurred. A filter can be applied which allows you to decide which events are reported to the extended event register.

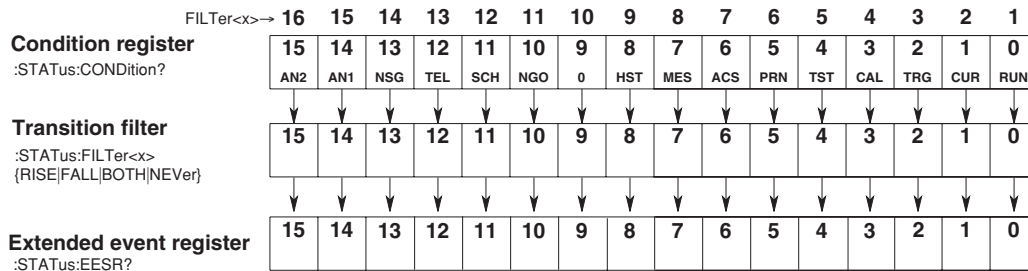

The meaning of each bit of the condition register is as follows:

Bit 0	RUN (Running)	Set to 1 while waveform acquisition is in progress.
Bit 1	CUR (Cursor)	Set to 1 during cursor measurement.
Bit 2	TRG (Awaiting trigger)	Set to 1 when waiting for a trigger.
Bit 3	CAL (Calibration)	Set to 1 while calibration is in progress.
Bit 4	TST (Testing)	Set to 1 while self-test is in progress.
Bit 5	PRN (Printing)	Set to 1 while the built-in printer is operating, while data is being output to an external printer (USB/network), or while screen image data is being saved.
Bit 6	ACS (Accessing)	Set to 1 while a storage drive is being accessed.
Bit 7	MES (Measuring)	Set to 1 when automated measurement of waveform parameters is in progress.
Bit 8	HST (History Search)	Set to 1 while history search is in progress.
Bit 10	NGO (Go/No-go)	Set to 1 while GO/NO-GO search is in progress.
Bit 11	SCH (Search)	Set to 1 while search is in progress.
Bit 12	TEL (Telecom Test)	Set to 1 while the telecom test is in progress.
Bit 13	NSG (N-Single)	Set to 1 while continuous acquisition is in progress when the trigger mode is set to single (N).
Bit 14	AN1 (Analysis1)	Set to 1 while Analysis 1 is in progress.
Bit 15	AN2 (Analysis2)	Set to 1 while Analysis 2 is in progress.

The transition filter parameters detect changes in the specified bit (numerical suffix, 1 to 16) of the condition register in the following manner and overwrite the extended event register.

RISE	The specified bit of the extended event register is set to 1 when the bit of the condition register changes from 1 to 0.
FALL	The specified bit of the extended event register is set to 1 when the bit of the condition register changes from 0 to 1.
BOTH	The bit of the extended event register is set to 1 when the bit of the condition register changes from 0 to 1 or from 1 to 0.
NEVer	Always 0.

## 6.5 Output Queue and Error Queue


### Output Queue

The output queue is provided to store response messages to queries. For example, if you send the `WAVeform:SEND?` command, which requests the output of acquired data, the data is stored in the output queue until it is read.

As shown below, data are stored in order and read from the oldest ones first. The output queue is emptied in the following cases (in addition to when read-out is performed).

- When a new message is received from the controller.
- When a deadlock occurs (see page 5-2).
- When a device clear command (DCL or SDC) is received.
- When the instrument is power cycled.

The output queue cannot be emptied using the `*CLS` command. To see whether the output queue is empty or not, check bit 4 (MAV) of the status byte.

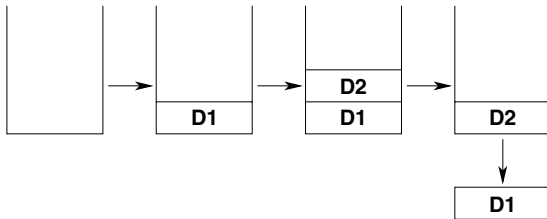

### Error Queue

The error queue stores the error No. and message when an error occurs. For example, if the controller sends an incorrect program message, the error number and message "113, "Undefined header"" are stored in the error queue when the error is displayed. The `STATus:ERRor?` query can be used to read the contents of the error queue. As with the output queue, the messages are read from the oldest ones first.

When the error queue overflows, the last message is replaced by the message "350, "Queue overflow"."

The error queue is also cleared for the following cases:

- When a `*CLS` command is received.
- When the instrument is power cycled.

To see whether the error queue is empty or not, check bit 2 (EAV) of the status byte.


# Appendix

## Appendix 1 ASCII Character Codes

The following table shows the ASCII character codes.

	0	1	2	3	4	5	6	7
0	0 NUL	20 DEL	40 SP	60 0	100 @	120 P	140 '	160 p
1	1 SOH	21 DC1	41 !	61 1	101 A	121 Q	141 a	161 q
2	2 STX	22 DC2	42 "	62 2	102 B	122 R	142 b	162 r
3	3 ETX	23 DC3	43 #	63 3	103 C	123 S	143 c	163 s
4	4 EOT	24 DC4	44 \$	64 4	104 D	124 T	144 d	164 t
5	5 ENQ	25 NAK	45 %	65 5	105 E	125 U	145 e	165 u
6	6 ACK	26 SYN	46 &	66 6	106 F	126 V	146 f	166 v
7	7 BEL	27 ETB	47 ,	67 7	107 G	127 W	147 g	167 w
8	10 BS	30 CAN	50 (	70 8	110 H	130 X	150 h	170 x
9	11 HT	31 EM	51 )	71 9	111 I	131 Y	151 i	171 y
A	12 LF	32 SUB	52 *	72 :	112 J	132 Z	152 j	172 z
B	13 VT	33 ESC	53 +	73 ;	113 K	133 [	153 k	173 {
C	14 FF	34 FS	54 ,	74 <	114 L	134 \	154 l	174 
D	15 CR	35 GS	55 -	75 =	115 M	135 ]	155 m	175 }
E	16 SO	36 RS	56 .	76 >	116 N	136 ^	156 n	176 ~
F	17 SI	37 US	57 /	77 ?	117 O	137 _	157 o	177 DEL (RUBOUT)
	Address commands	Universal commands	Listener address	Talker address	Secondary commands			

### Example



## Appendix 2 Error Messages

This section describes the error messages related to communications.

- The messages can be displayed in English or Japanese on the DL9000. However, when the messages are read from a PC or other similar computers, the messages are displayed in English.
- If servicing is required, contact your nearest YOKOGAWA dealer for repairs.
- Only error messages related to communications are listed here. For other error messages, see *User's Manual IM 701310-01E*.
  - Communication syntax error 100~199
  - Communication execution error 200~299
  - Model specific (other) 300~398
  - Communication query error 400~499
  - System error (communications) 399

} Details given below.

### Error in Communication Command (100-199)

Code	Messages	Corrective Action	Page
102	A syntax error. Syntax error.	Invalid syntax.	
103	<DATA SEPARATOR> is missing. Invalid separator.	Use a comma to separate the data.	
104	The <DATA> type is incorrect. Data type error.	Write using the correct data form.	
105	Device trigger function cannot be used. GET not allowed.	GET is not supported for responses to interface messages.	
108	There are too many <DATA>. Parameter not allowed.	Check the number of data points.	
109	Required <DATA> is missing. Missing parameter.	Enter the required data.	
111	<HEADER SEPARATOR> is missing. Header separator error.	Use a space to separate the header and data.	
112	<mnemonic> is too long. Program mnemonic too long.	Check the mnemonic (alphanumerical character string).	
113	No such command. Undefined header.	Check the header.	
114	The value of <HEADER> is not correct. Header suffix out of range.	Check the header.	
120	The mantissa of the value is missing. Numeric data error.	A number is required in the <NRf> form.	
123	The exponent is too large. Exponent too large.	Use a smaller exponent for <NR3> format.	
124	There are too many significant digits. Too many digits.	The value must be less than equal to 255 digits.	
128	Numeric data cannot be used. Numeric data not allowed.	Enter in a format other than <NRf> format.	
131	The unit is not correct. Invalid suffix.	Check the unit of the <Voltage>, <Time>, <Frequency>, and <Current>.	
134	The spelling of the unit is too long. Suffix too long.	Check the unit of the <Voltage>, <Time>, <Frequency>, and <Current>.	

Code	Messages	Corrective Action	Page
138	Units cannot be used. Suffix not allowed.	No units are allowed other than <Voltage>, <Time> <Frequency>, and <Current>.	
141	No such selection available. Invalid character data.	Select character data from the selections available in {...   ...   ...}.	
144	The spelling of <CHARACTER DATA> is too long. Character data too long.	Check the spelling of the character strings in {...   ...   ...}.	
148	<CHARACTER DATA> cannot be used. Character data not allowed.	Write in a data form other than {...   ...   ...}.	
150	There is no delimiter to the right of <STRING DATA>. String data error.	Enclose <String> in double quotation or single quotation marks.	
151	The contents of <STRING DATA> Invalid string data.	<String> is too long or contains characters which cannot be used.	
158	<STRING DATA> cannot be used. are inappropriate. String data not allowed.	Enter in a data format other than <Character string>.	
161	The data length of <BLOCK DATA> does not match. Invalid block data.	<Block data> is not allowed.	
168	<BLOCK DATA> cannot be used. Block data not allowed.	<Block data> is not allowed.	
171	There is an invalid character in the <EXPRESSION DATA>. Invalid expression.	Equations cannot be used.	
178	<EXPRESSION DATA> cannot be used. Expression data not allowed.	Equations cannot be used.	

**Error in Communication Execution (200 to 299)**

Code	Messages	Corrective Action	Page
221	There is a conflict in the setup information. Setting conflict.	Check the relevant settings.	
222	The data value is outside the range. Data out of range.	Check the range.	
223	The data byte length is too long. Too much data.	Check the length of the data.	
224	The data value is invalid. Illegal parameter value.	Check the range.	
241	The hardware is not implemented. Hardware missing.	Check the installed options.	
260	<EXPRESSION DATA> is not correct. Expression error.	Equations cannot be used.	

**Error in Communication Query (400 to 499)**

Code	Messages	Corrective Action	Page
410	Query transmission was aborted. Query INTERRUPTED.	Check transmission/reception order.	
420	There is no response that can be transmitted. Query UNTERMINATED.	Check transmission/reception order.	
430	Deadlock occurred. Aborting transmission. Query DEADLOCKED.	Limit the length of the program message including <PMT> to 1024 bytes or less.	
440	The order to request the response is not correct. Query UNTERMINATED after indefinite response.	Do not specify a query after the *IDN? or *OPT? command.	



## Appendix 2 Error Messages

---

### Error in System Operation (399)

Code	Messages	Corrective Action	Page
399	Communication driver error. Fatal error in the communication driver.	Maintenance service is required.	

---

### Warning (50)

Code	Messages	Corrective Action	Page
50	*OPC/? is in the middle of the message. *OPC/? exists in message.	Place the *OPC or *OPC? command at the end of the program message.	

---

### Other Errors (350)

Code	Messages	Corrective Action	Page
350	Queue overflow.	Read the error queue.	

---

#### **Note**

Code 350 indicates overflow of error queue. This code is returned as a response to the STATus:ERRor? query; it does not appear on the screen.

---

**Appendix 3 Correspondence Table of Measure Parameter Names**

<b>Name Displayed on Setup Screen</b>	<b>Name Used by Communication Commands</b>	<b>Name on Menu of the DL9000 the the DL9000 Screen When Displaying Measured Results</b>
Max	MAXimum	Max
Min	MINimum	Min
High	HIGH	High
Low	LOW	Low
P-P	PTOPeak	P-P
Hi-Low	HiLow	Hi-Low
+Over	POVershoot	+Over
-Over	NOVershoot	-Over
Rms	RMS	Rms
Mean	MEAN	Mean
Sdev	SDEViation	Sdev
IntegTY	TYINteg	ITY
C.Rms	CRMS	CRms
C.Mean	CMEan	CMean
C.Sdev	CSDeviation	CSdev
C.IntegTY	TYCInteg	CITY
Freq	FREQUency	Freq
1/Freq	PERFrequency	1/FR
Count	COUNT	Count
Burst	BURSt	Burst
+Width	PWIDth	+Width
-Width	NWIDth	-Width
Period	PERiod	Period
Duty	DUTYcycle	Duty
Rise	RISE	Rise
Fall	FALL	Fall
Delay	DELay	Dly

## Appendix 4 Eye Pattern Parameter Name Table

---

### Appendix 4 Eye Pattern Parameter Name Table

Name Displayed on the Setup Menu of the DL9000 Screen	Name Used by Communication Commands	Name on the DL9000 Screen When Displaying Measured Results
Crossing %	PCROssing	Cross%
Eye Height	EHEight	EyeHi
Eye Width	EWIDth	EyeWid
Q Factor	QFACtor	QFact
Jitter	JITTer	Jitter
Duty Cycle Distraction %	PDUTycycle	DCDTime%
Vtop	VTOP	Vtop
Vbase	VBASe	Vbase
$\sigma$ top	SDTop	$\sigma$ top
$\sigma$ base	SDBase	$\sigma$ base
Tcrossing1	T1CRossing	Tcros1
Tcrossing2	T2CRossing	Tcros2
Vcrossing	VCRossing	Vcros
Ext Rate dB	DBERate	ERdB
Rise	RISE	Rise
Fall	FALL	Fall