

# **\*TB 9-6625-1998-24**

DEPARTMENT OF THE ARMY TECHNICAL BULLETIN

## **CALIBRATION PROCEDURE FOR SIGNAL GENERATOR AN/URM-127 (SG-377/U) AND AN/URM-127A (SG-377A/U)**

Headquarters, Department of the Army, Washington, DC  
26 March 2008

*Distribution Statement A: Approved for public release; distribution is unlimited.*

### **REPORTING OF ERRORS AND RECOMMENDING IMPROVEMENTS**

You can improve this manual. If you find any mistakes or if you know of a way to improve these procedures, please let us know. Mail your letter or DA Form 2028 (Recommended Changes to Publications and Blank Forms) directly to: Commander, U.S. Army Aviation and Missile Command, ATTN: AMSAM-MMC-MA-NP, Redstone Arsenal, AL 35898-5000. A reply will be furnished to you. You may also send in your comments electronically to our E-mail address: [2028@redstone.army.mil](mailto:2028@redstone.army.mil) or by fax 256-842-6546/DSN 788-6546. For the World Wide Web use: <https://amcom2028.redstone.army.mil>. Instructions for sending an electronic 2028 can be found at the back of this manual.

SECTION		Paragraph	Page
I.	IDENTIFICATION AND DESCRIPTION		
	Test instrument identification .....	1	2
	Forms, records, and reports.....	2	2
	Calibration description .....	3	2
II.	EQUIPMENT REQUIREMENTS		
	Equipment required.....	4	3
	Accessories required.....	5	3
III.	CALIBRATION PROCESS		
	Preliminary instructions .....	6	3
	Equipment setup .....	7	4
	Output voltage.....	8	4
	Frequency .....	9	7
	Frequency meter (AN/URM-127 only).....	10	9
	Distortion.....	11	10
	Power supply .....	12	10
Final procedure .....	13	10	

\*This bulletin supersedes TB 9-6625-1998-35, dated 20 January 1997.

## SECTION I IDENTIFICATION AND DESCRIPTION

**1. Test Instrument Identification.** This bulletin provides instructions for the calibration of Signal Generator, AN/URM-127 (SG-377/U) and AN/URM-127A (SG-377A/U). TM 11-6625-683-14 was used as the prime data sources in compiling these instructions. The equipment being calibrated will be referred to as the TI (test instrument) throughout this bulletin.

**a. Model Variations.** Variations among models are described within the text.

**b. Time and Technique.** The time required for this calibration is approximately 2 hours, using the dc and low frequency technique.

### 2. Forms, Records, and Reports

**a.** Forms, records, and reports required for calibration personnel at all levels are prescribed by TB 750-25.

**b.** Adjustments to be reported are designated (R) at the end of the sentence in which they appear. When adjustments are in tables, the (R) follows the designated adjustment. Report only those adjustments made and designated with (R).

**3. Calibration Description.** TI parameters and performance specifications which pertain to this calibration are listed in table 1.

Table 1. Calibration Description

Test instrument parameters	Performance specifications
Frequency	Range: 20 Hz to 200 kHz Accuracy: $\pm 2\%$ indication
Output voltage	Range: 10 $\mu$ V ac Accuracy: -30% to +20% FS Range: 100 $\mu$ V to 10 V ac Accuracy: $\pm 5\%$ FS
Distortion <sup>1</sup>	1% maximum (AN/URM-127) 2% maximum (AN/URM-127A)
Frequency meter (AN/URM-127 only)	60 and 400 Hz $\pm 1\%$

<sup>1</sup>Standard limited not checked above 100 kHz.

## SECTION II EQUIPMENT REQUIREMENTS

**4. Equipment Required.** Table 2 identifies the specific equipment to be used in this calibration procedure. This equipment is issued with Secondary Transfer Calibration Standards Sets AN/GSM-286, AN/GSM-287 or AN/GSM-705. Alternate items may be used by the calibrating activity. The items selected must be verified to perform satisfactorily prior to use and must bear evidence of current calibration. The equipment must meet or exceed the minimum use specifications listed in table 2. The accuracies listed in table 2

provide a four-to-one ratio between the standard and TI. Where the four-to-one ratio cannot be met, the actual accuracy of the equipment selected is shown in parenthesis.

**5. Accessories Required.** The accessories required for this calibration are common usage accessories, issued as indicated in paragraph 4 above, and are not listed in this calibration procedure. The following peculiar accessory is required for this calibration: RF Power Amplifier, Antenna Research Associated Inc., Model 757LC (757LC).

Table 2. Minimum Specifications of Equipment Required

Common name	Minimum use specifications	Manufacturer and model (part number)
AUDIO ANALYZER	Frequency measurement: Range: 19.6 Hz to 204 kHz Accuracy: $\pm 0.25\%$ Distortion measurement: Range: 20 Hz to 100 kHz Capability: to 1 %	Boonton, Model 1121 (1121)
MULTIMETER	Dc voltage: Range: 46 to 52 V Accuracy: $\pm 0.5\%$ Ac level measurement: Range: 0.7 mV to 10.5 V Frequency: 110 kHz Accuracy: $\pm 1.25\%$	Agilent, Model 3458A (3458A)
RESISTANCE STANDARD	Range: 1000 $\Omega$	Biddle-Gray, Model 71-631 (7910328)

### SECTION III CALIBRATION PROCESS

#### 6. Preliminary Instructions

**a.** The instructions outlined in paragraphs 6 and 7 are preparatory to the calibration process. Personnel should become familiar with the entire bulletin before beginning the calibration.

**b.** Items of equipment used in this procedure are referenced within the text by common name as listed in table 2.

**c.** Unless otherwise specified, verify the results of each test and, whenever the test requirement is not met, take corrective action before continuing with the calibration. Adjustments required to calibrate the TI are included in this procedure. Additional maintenance information is contained in TM 11-6625-683-14 for this TI.

**d.** When indications specified in paragraphs 8 through 11 are not within tolerance, perform the power supply check prior to making adjustments. After adjustments are made, repeat paragraphs 8 through 11. Do not perform power supply check if all other parameters are within tolerance.

**e.** Unless otherwise specified, all controls and control settings refer to the TI.

## 7. Equipment Setup

### WARNING

HIGH VOLTAGE is used or exposed during the performance of this calibration. DEATH ON CONTACT may result if personnel fail to observe the safety precautions. REDUCE OUTPUT(S) to minimum after each step within the performance check where applicable.

- a. Set **POWER** switch to **OFF**.
- b. If **OUTPUT RMS (VOLTS RMS)** meter does not indicate on mark or 0, adjust screw located below meter face until meter indicates on mark or 0.
- c. Connect TI to a 115 V ac power source.
- d. Position controls as listed in (1) through (6) below:
  - (1) **FREQ RANGE MULTIPLIER** switch to **X10**.
  - (2) Frequency dial to **100**.
  - (3) **OUTPUT CONTROL** fully ccw.
  - (4) **ATTENUATOR** switch to **X10 V**.
  - (5) **FREQ METER** switch to **OFF** (AN/URM-127 only).
  - (6) **1 k $\Omega$  LOAD** switch to **OUT** (AN/URM-127A only).
- e. Set **POWER** switch to **ON** and allow at least 15 minutes for TI to reach operating temperature.

## 8. Output Voltage

### a. Performance Check

- (1) Set TI frequency to 110 kHz.
- (2) Connect resistance standard (adjusted to 1000 $\Omega$ ) to **OUTPUT**. Connect multimeter **INPUT** to resistance standard.
- (3) Adjust **OUTPUT CONTROL** until **OUTPUT RMS (VOLTS RMS)** meter indicates **1.0**. If multimeter does not indicate between 9.5 and 10.5 V ac, perform **b** below.

### NOTE

Perform (4) through (7) below for AN/URM-127A only.

- (4) Temporarily disconnect resistance standard from equipment setup by removing cables from resistance standard.
- (5) Set **1 k $\Omega$  LOAD** switch to **IN**.
- (6) Adjust **OUTPUT CONTROL** until TI **VOLTS RMS** meter indicates **1.0**. Multimeter will indicate between 9.5 and 10.5 V ac.
- (7) Set **1 k $\Omega$  LOAD** switch to **OUT** and reconnect cables to resistance standard.

(8) Repeat technique of (3) above at **ATTENUATOR** switch and meter indications listed in table 3. If multimeter does not indicate within limits specified, perform **b** below.

Table 3. Output Voltage

Test instrument		Multimeter indications			
ATTENUATOR switch positions	Meter indications OUTPUT RMS (VOLTS RMS)	Min		Max	
		X10 V	0.8	7.5	V ac
X10 V	0.6	5.5	V ac	6.5	V ac
X10 V	0.4	3.5	V ac	4.5	V ac
X1 V	1.0	0.95	V ac	1.05	V ac
X.1 V	1.0	95.0	mV ac	105.0	mV ac
X.01 V	1.0	9.50	mV ac	10.50	mV ac
X1000 $\mu$ V	1.0	0.95	mV ac	1.05	mV ac

(9) Connect equipment as shown in figure 1 below.

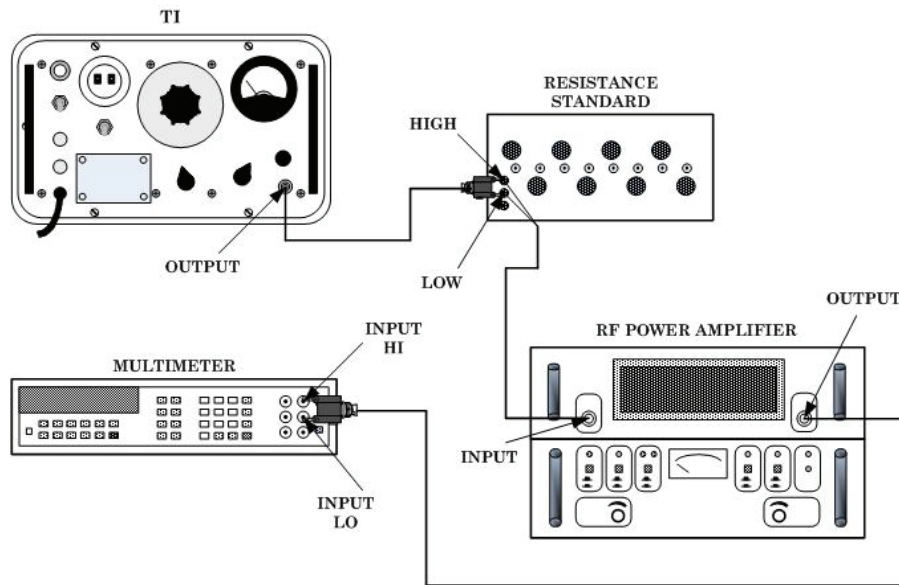


Figure 1. Equipment connection.

- (10) Set resistance standard for 1 k $\Omega$ .
- (11) Adjust TI output to **1.0** on **OUTPUT RMS (VOLTS RMS)** meter (in **X1000  $\mu$ V** position).
- (12) Adjust RF power amplifier for an indication of 100 mV on multimeter.
- (13) Set **ATTENUATOR** switch to **X100  $\mu$ V**. Multimeter will indicate 9.5 and 10.5 mV.
- (14) Set **ATTENUATOR** switch to **X10  $\mu$ V**. Multimeter will indicate 0.7 and 1.2 mV.

**b. Adjustments**

- (1) Set **ATTENUATOR** switch to **X10 V** and **OUTPUT CONTROL** fully cw.

**NOTE**

For AN/URM-127, perform (2) through (4) below. For AN/URM-127A, perform (5) through (7) below.

- (2) Adjust R2 (fig. 2) until **OUTPUT RMS** meter indicates 1.15 (R).  
(3) Adjust **OUTPUT CONTROL** until audio analyzer indicates 10 V.  
(4) Adjust R29 (fig. 2) until **OUTPUT RMS** meter indicates 1.0 (R).  
(5) Adjust A2R5 (fig. 3) until audio analyzer indicates 12.0 V ac (R).  
(6) Adjust **OUTPUT CONTROL** until audio analyzer indicates 10.0 V ac.  
(7) Adjust A2R12 (fig. 3) until **VOLTS RMS** meter indicates **1.0** (R).

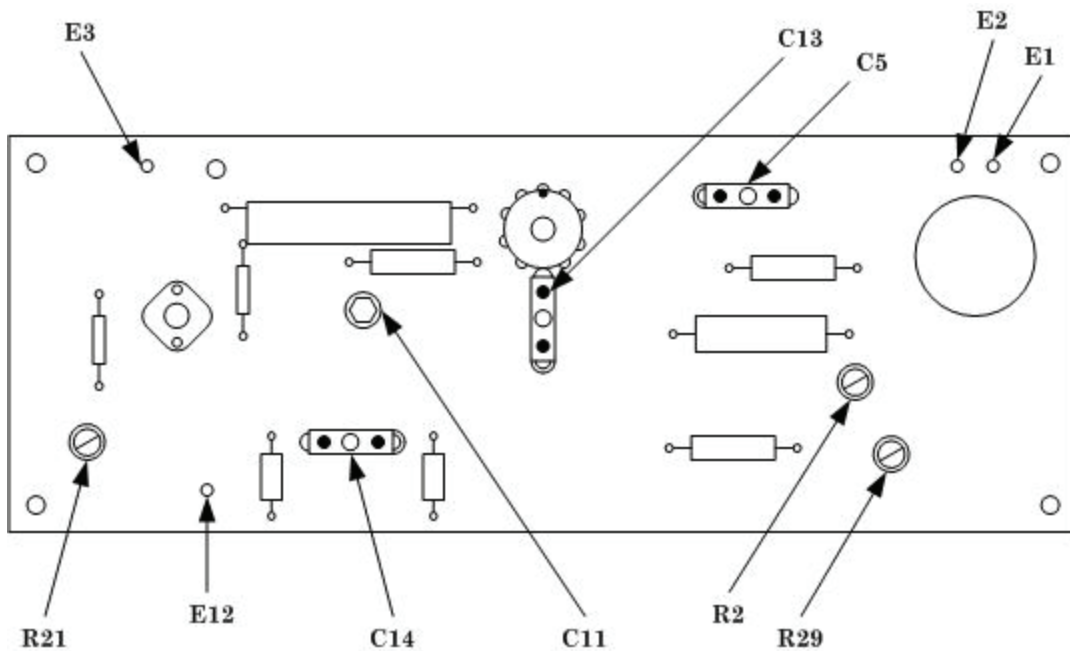


Figure 2. AN/URM-127 - adjustments

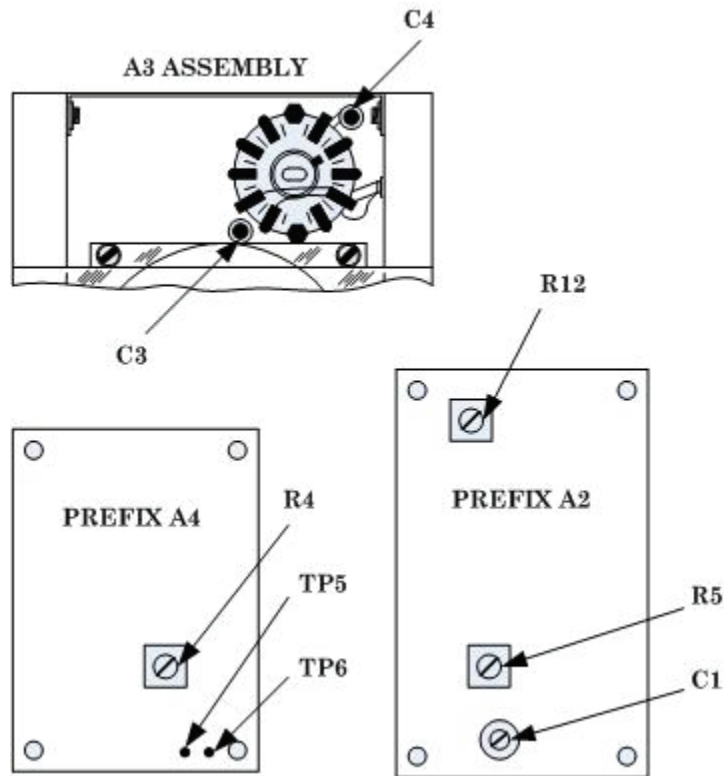


Figure 3. AN/URM-127A - adjustments

## 9. Frequency

### a. Performance Check

- (1) Connect **OUTPUT** to audio analyzer **INPUT** high.
- (2) Set **ATTENUATOR** switch to **X1V** and adjust **TI OUTPUT CONTROL** for **1.0** on **OUTPUT RMS (VOLTS RMS)** meter.
- (3) Set **FREQ RANGE MULTIPLIER** switch to **X1K** and frequency dial to **200**. If audio analyzer does not indicate between 196.000 and 204.00 kHz, perform **b** below.
- (4) Repeat technique of (3) above at **FREQ RANGE MULTIPLIER** switch and frequency dial settings listed in table 4. If audio analyzer does not indicate within limits specified, perform **b** below.

Table 4. Frequency

Test instrument		Audio analyzer indications	
<b>FREQ RANGE MULTIPLIER</b> switch settings	<b>FREQUENCY</b> dial settings	Min	Max
X1K	100	98.000 kHz	102.000 kHz
X1K	20	19600.0 Hz	20.400 kHz

Table 4. Frequency - Continued

Test instrument		Audio analyzer indications			
FREQ RANGE MULTIPLIER switch settings	FREQUENCY dial settings	Min		Max	
X100	20	1960.00	Hz	2040.0	Hz
X100	100	9800.0	Hz	10200.0	Hz
X100	200	19600.0	Hz	20.400	kHz
X10	200	1960.00	Hz	2040.0	Hz
X10	100	980.00	Hz	1020.00	Hz
X10	20	196.000	Hz	204.00	Hz
X1	20	19.600	Hz	20.400	Hz
X1	100	98.000	Hz	102.000	Hz
X1	200	196.000	Hz	204.00	Hz

**b. Adjustments**

**NOTE**

Perform (1) through (15) for AN/URM-127. Perform (16) through (26) for AN/URM-127A.

- (1) Set **FREQ RANGE MULTIPLIER** switch to **X100** and frequency dial fully ccw to mark on dial.
- (2) Adjust C11 (fig. 2) until audio analyzer indicates between 21.400 and 21.500 kHz (R).
- (3) Slowly rotate frequency dial cw until audio analyzer indicates 20.000 kHz.
- (4) Reposition frequency dial to indicate **200**.

**NOTE**

Remove frequency dial knob and loosen set screws to reposition dial to **200**. Tighten set screws after repositioning dial.

- (5) Set frequency dial in turn to **100**, **60**, **40**, and **20**. If audio analyzer does not indicate within 2 percent of settings, repeat (1) through (4) above for best in-tolerance condition.
- (6) Repeat a (4) above. If audio analyzer does not indicate within limits specified, perform (7) through (15) below.
- (7) Set C14 (fig. 2) to the half-open position.
- (8) Set **FREQ RANGE MULTIPLIER** switch to **X1K** and frequency dial to **20**.
- (9) Adjust C5 and C13 (fig. 2) until audio analyzer indicates 20.000 kHz (R).
- (10) Turn **OUTPUT CONTROL** fully cw.
- (11) If required, readjust C5 and C13 (fig. 2) until **OUTPUT RMS** meter indicates at least 1.15 and audio analyzer indicates 20.000 kHz.



**NOTE**

Increase capacitance of C5 and decrease capacitance of C13 (fig. 2).

- (12) Set frequency dial to **200**.
- (13) Adjust C14 (fig. 2) until audio analyzer indicates 200.00 kHz (R).
- (14) Set frequency dial to **20** and repeat (11) through (13) above for best in-tolerance condition.
- (15) Repeat a (1) through (4) above and, if required, (1) through (14) above for best intolerance condition.
- (16) Set **FREQ RANGE MULTIPLIER** switch to **X100** and frequency dial to **20**.
- (17) Readjust frequency dial until audio analyzer indicates 2000.0 Hz.
- (18) Reposition frequency dial to indicate **20**.

**NOTE**

Remove frequency dial knob and loosen set screws to reposition dial to **20**. Tighten set screws after repositioning dial.

- (19) Set frequency dial to **200**.
- (20) Adjust A3C3 and A3C4 (fig. 3) until audio analyzer indicates 20.000 kHz and **VOLTS RMS** meter indicates at least 1.0 (R).
- (21) Repeat (16) through (20) above for best in-tolerance condition.
- (22) Repeat a (4) and if audio analyzer does not indicate within limits specified, perform (23) through (26) below.
- (23) Set **FREQ RANGE MULTIPLIER** switch to **X1K** and frequency dial to **200**.
- (24) Adjust A2C1 (fig. 3) until audio analyzer indicates 200.00 kHz (R).
- (25) If **VOLTS RMS** meter indicates more than 1.2, adjust A2R5 (fig. 3) for 1.2 indication on **VOLTS RMS** meter (R).
- (26) Repeat a (1) through (4) and, if required, (16) through (25) above for best intolerance condition.

**10. Frequency Meter (AN/URM-127 Only)****a. Performance Check**

- (1) Connect **OUTPUT** to audio analyzer **INPUT** high.
- (2) Set **FREQ RANGE MULTIPLIER** switch to **X10** and **FREQ METER** switch to **ON**.
- (3) Set frequency dial to **40**, and fine tune for maximum vibration on 400 window of **FREQ METER**. Audio analyzer will indicate between 396.00 and 404.00 Hz.
- (4) Set **FREQ RANGE MULTIPLIER** switch to **X1** and frequency dial to **60**.
- (5) Fine tune frequency dial for maximum vibration on 60 window of **FREQ METER**. Audio analyzer will indicate between 59.400 and 60.600 Hz.

**b. Adjustments.** No adjustments can be made.

**11. Distortion**

**a. Performance Check**

- (1) Connect **OUTPUT** to audio analyzer **INPUT** high.
- (2) Set **ATTENUATOR** switch to **X10V** and **OUTPUT CONTROL** for **1.0** on **OUTPUT RMS (VOLTS RMS)** meter.
- (3) Set **FREQ RANGE MULTIPLIER** switch and frequency dial to positions listed in table 5 and measure distortion at each frequency. Audio analyzer will indicate within limits specified.

Table 5. Distortion

Test instrument		Audio analyzer indications	
FREQ RANGE MULTIPLIER switch settings	FREQUENCY dial settings	AN/URM-127	AN/URM-127A
X1	20	≤ 1%	≤ 2%
X10	100	≤ 1%	≤ 2%
X100	200	≤ 1%	≤ 2%
X1K	100	≤ 1%	≤ 2%

**b. Adjustments.** No adjustments can be made.

**12. Power Supply**

**NOTE**

Do not perform power supply check if all other parameters are within tolerance.

**a. Performance Check.** Connect multimeter between test points listed in table 6. If multimeter does not indicate within limits specified, perform **b** below.

**b. Adjustments.** Perform corresponding adjustments as listed in table 6.

Table 6. Power Supply


Model	Test points	Multimeter indications (V dc)		Adjustments (R)
		Min	Max	
AN/URM-127	E3 and E12 (fig. 2)	46	48	R21 (fig. 2) for 47 V
AN/URM-127A	A4TP5 and A4TP6 (fig. 3)	48	52	A4R4 (fig. 3) for 50 V

**13. Final Procedure**

- a.** Deenergize and disconnect all equipment.
- b.** Annotate and affix DA label/form in accordance with TB 750-25.

By Order of the Secretary of the Army:

Official:

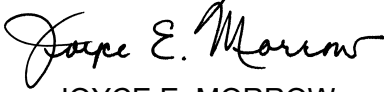  
JOYCE E. MORROW  
*Administrative Assistant to the  
Secretary of the Army*

0802812

GEORGE W. CASEY, JR.  
*General, United States Army  
Chief of Staff*

Distribution:

To be distributed in accordance with the initial distribution number (IDN) 342174, requirements for calibration procedure TB 9-6625-1998-24.



## INSTRUCTIONS FOR SUBMITTING AN ELECTRONIC 2028

The following format must be used if submitting an electronic 2028. The subject line must be exactly the same and all fields must be included; however, only the following fields are mandatory: 1, 3, 4, 5, 6, 7, 8, 9, 10, 13, 15, 16, 17, and 27.

From: "Whomever" [whomever@redstone.army.mil](mailto:whomever@redstone.army.mil)  
To: <2028@redstone.army.mil

Subject: DA Form 2028

1. **From:** Joe Smith
2. **Unit:** home
3. **Address:** 4300 Park
4. **City:** Hometown
5. **St:** MO
6. **Zip:** 77777
7. **Date Sent:** 19-OCT-93
8. **Pub no:** 55-2840-229-23
9. **Pub Title:** TM
10. **Publication Date:** 04-JUL-85
11. **Change Number:** 7
12. **Submitter Rank:** MSG
13. **Submitter FName:** Joe
14. **Submitter MName:** T
15. **Submitter LName:** Smith
16. **Submitter Phone:** 123-123-1234
17. **Problem:** 1
18. **Page:** 2
19. **Paragraph:** 3
20. **Line:** 4
21. **NSN:** 5
22. **Reference:** 6
23. **Figure:** 7
24. **Table:** 8
25. **Item:** 9
26. **Total:** 123
27. **Text**

This is the text for the problem below line 27.





