

TM 11-6760-206-12

DEPARTMENT OF THE ARMY TECHNICAL MANUAL

OPERATOR
AND ORGANIZATIONAL
MAINTENANCE MANUAL
**METER, PHOTOGRAPHIC
EXPOSURE LM-46A**

HEADQUARTERS, DEPARTMENT OF THE ARMY

SEPTEMBER 1960

TECHNICAL MANUAL } HEADQUARTERS
 } DEPARTMENT OF THE ARMY
 No. 11-6760-206-12 } WASHINGTON 25, D. C., 14 Sept. 1960

**OPERATOR AND ORGANIZATIONAL
 MAINTENANCE MANUAL
 METER, PHOTOGRAPHIC EXPOSURE LM-46A**

	Paragraph	Page
CHAPTER 1. INTRODUCTION		
Section I. General		
Scope -----	1	3
Forms and records-----	2	3
II. Description and data		
Purpose and use-----	3	4
Technical characteristics-----	4	4
Components of Photographic Exposure Meter, LM-46A ---	5	5
Description of LM-46A ----	6	5
CHAPTER 2. OPERATING INSTRUCTIONS		
Section I. Service upon receipt of equip- ment		
Unpacking -----	7	7
Checking unpacked equipment-	8	8
II. Light readings		
General -----	9	9
Types of light readings -----	10	9
Average brightness method ----	11	10
Brightest-object method-----	12	11
Darkest-object method -----	13	11
Color photography -----	14	12
Substitution method-----	15	12
Beat average exposure method --	16	13
Section III. Operation under usual condi- tions		
Controls and indicators -----	17	13
Calculating exposure -----	18	15
TAGO 1612-C-September		1

	Paragraph	Page
Section III. Selecting best exposure setting-	19	22
Compensating for filters ----	20	23
Use with motion picture cam-		
eras-----	21	23
IV. Operation under unusual con-		
ditions		
Use in arctic areas -----	22	26
Use in tropical and desert areas-	23	26
CHAPTER 3. MAINTENANCE INSTRUC-		
TIONS		
Scope of operator's and organi-		
zational maintenance -----	24	27
Preventive maintenance -----	25	27
Zero adjustment of lightmeter		
pointer-----	26	28
CHAPTER 4. SHIPMENT AND LIMITED		
STORAGE AND DEMO-		
LITION TO PREVENT		
ENEMY USE		
Section I. Shipment and limited storage		
Preparation for shipment or		
limited storage -----	27	30
Repackaging for equipment or		
limited storage -----	28	20
Section II. Demolition of materiel to pre-		
vent enemy use		
Authority for demolition -----	29	31
Methods of destruction-----	30	32
APPENDIX I. REFERENCES -----	--	33
II. MAINTENANCE ALLOCA-		
TION -----	--	34
III. BASIC ISSUE ITEMS -----	--	39

CHAPTER 1

INTRODUCTION

Section I. GENERAL

1. Scope

This manual describes Meter, Photographic Exposure LM-46A and contains instructions for the operation and operator and organizational maintenance of this equipment. Instructions for using the equipment to the best advantage under a variety of conditions are included.

2. Forms and Records

a. Unsatisfactory Equipment Reports. Fill out and forward DA Form 468 (Unsatisfactory Equipment Report) to the Commanding Officer, U. S. Army Signal Materiel Support Agency, ATTN: SIGMS-MLM, Fort Monmouth, N. J., as prescribed in AR 700-38.

b. Report of Damaged or Improper Shipment. Fill out and forward DD Form 6 (Report of Damaged or Improper Shipment) as prescribed in AR 700-58 (Army), Navy Shipping Guide, Article 1850-4 (Navy), and AFR 714 (Air Force).

c. Preventive Maintenance Form. Prepare DA Form 11-254 (fig. 5 and 6) (Maintenance Check List for Signal Equipment (Still and Motion Picture Camera)) in accordance with the instructions on the form.

d. Parts List Form. Forward DA Form 2028 (Recommended Changes to DA Technical Manual Parts List or Supply Manuals 7, 8, and 9) direct to the Commanding Officer, U. S. Army Signal Materiel Support Agency, ATTN: SIGMS-MLM, Fort Monmouth, N.J., with comments on parts listing.

e. Comments on Manual. Forward all other comments on this manual to the Commanding Officer, U. S. Army Signal Materiel Support Agency, ATTN: Pub Engrg Dept, Fort Monmouth, N.J.

Section II. DESCRIPTION AND DATA

3. Purpose and Use

The LM-46A measures light intensities and converts light value readings to proper combinations of camera shutter speed and lens aperture settings. It is used as an aid in producing the best negative possible, under existing light conditions, with the particular type of film in use. The exposure meter is intended primarily for field use with still picture cameras, but can be adapted for use with motion picture cameras.

4. Technical Characteristics

Lightmeter:

Type_____ Matched photoelectric cell
and microammeter.

Dial calibration unit __ Candles per square foot.

Range _ _ _ _ _ 0 to 1,600 foot-candles.

Calculating dial ranges:

Exposure index dial __ 0.1 to 12,000 American
Standards Association
(ASA) units.

Relative aperture dial _ f/1 to f/32.

Time and brightness dial:

Time scale _ _ _ _ _ 1/1000 second to 100
seconds.

Brightness scale _ _ _ _ 0 to 1,600 foot-candles.

5. Components of Motor, Photographic Exposure LM-46A

(fig. 1)

Quantity	Item	Dimensions (in.)			Weight (oz)
		Height	Depth	Width	
1	Exposure meter.....	3 $\frac{7}{8}$	$\frac{9}{16}$	2 $\frac{1}{2}$	5 $\frac{1}{2}$
1	Carrying cord.....	$\frac{1}{2}$	30	$\frac{1}{16}$	$\frac{1}{10}$
1	Carrying case.....	4 $\frac{1}{4}$	1 $\frac{3}{8}$	2 $\frac{5}{8}$	1 $\frac{1}{2}$
1	TM 11-6760-206-12				

6. Description of LM-46A

(fig. 1)

The exposure meter consists of a lightmeter assembly with a dial calibrated in foot-candles; a set of concentric, calibrated dials with a cursor; and an aluminum alloy case. A hinged baffle, controlled by a spring-loaded baffle button, covers or exposes a photoelectric cell and forms one end of the case. A slot at the other end of the case accommodates a nylon carrying cord. A leather carrying case houses and protects the exposure meter when it is not in use.



Figure 1. Meter, Photographic Exposure LM-46A.

TAGO 1612-C

CHAPTER 2 OPERATING INSTRUCTIONS

Section I. SERVICE UPON RECEIPT OF EQUIPMENT

7. Unpacking


(fig. 2)

a. Packaging Data. The exposure meter, inclosed in its carrying case, is wrapped for protection and then placed, together with a suitable amount of desiccant and a humidity indicator, within a moisture-vaporproof barrier bag, which then is heat-sealed. The packaged equipment is packed in a corrugated fiberboard carton and the carton is sealed with gummed tape. Packed for shipment, the equipment measures 4¾ inches, by 4 inches, by 3¼ inches and weighs approximately 1 pound.

b. Removing Contents.

- (1) Slit the gummed tape that seals the corrugated fiberboard carton and open the carton. Remove the packaged equipment from the carton.
- (2) Slit open the moisture-vaporproof barrier bag and remove the wrapped equipment.
- (3) Carefully remove the exposure meter from the wrapping and cushioning materials.

Caution: The LM-64A can be damaged easily. Do not drop it and handle it carefully at all times.

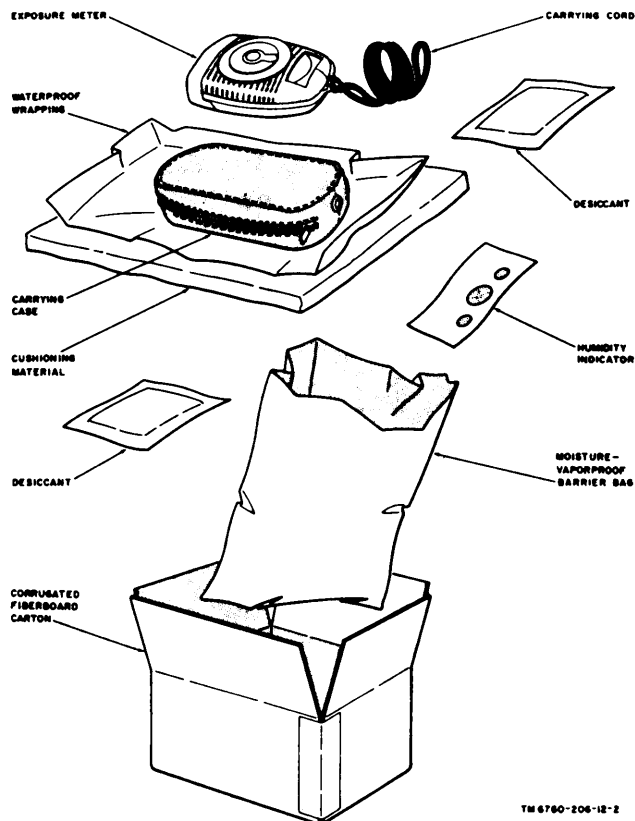

TM 6760-206-12-2

Figure 2. Meter, Photographic Exposure LM-46A, typical packaging arrangement.

8. Checking Unpacked Equipment

- a. Check the equipment against the packing list or the list of components in paragraph 5.
- b. Inspect the equipment carefully for damage that may have been incurred during shipment.
- c. If the equipment does not check with the packing list, or if any damage is noted, refer to paragraph 2b.

Section II. LIGHT READINGS

9. General

Methods of using the exposure meter under a variety of conditions to take light readings for use in determining exposures that will produce the best possible negative are described in this section. The production of negatives for special effects is not considered.

10. Types of Light Readings

a. Reflected Light Readings. Reflected light readings are measurements of the intensity of the light reflected from a scene or object and generally are more accurate than incident light readings (*b* below), except when the prevailing illumination is at a low level. Reflected light readings may be taken with the exposure meter either in the *camera position* ((1) below) or in the *near-object* position ((2) below). In either position, hold the exposure meter so that it receives light only from that portion of the scene or object that is to be included in the photograph.

- (1) *Camera position.* Use this position when the range of brightness of the entire scene is within the range of the film being used. Hold the exposure meter near the camera and aim the exposure meter toward the scene to be photographed. If the scene includes an excessive amount of sky, point the exposure meter downward so that the line of sight along the upper surface of the exposure meter meets the ground at a point approximately halfway between the exposure meter and the center of the scene.

(2) *Near-object position.* Use this position when the range of brightness of a scene exceeds the range of the film being used or when certain details are to be emphasized and the surrounding light is in definite contrast to that reflected from the pertinent area. Hold the exposure meter near the object or the significant area of the scene and aim the exposure meter toward the object or portion of the scene or object to be emphasized. Be careful not to cast a shadow on the object while a reflected light reading is being taken.

b. Incident Light Readings. Incident light readings are measurements of the intensity of the light by which a scene or object is illuminated. Use incident light readings to determine the best average exposure when the general illumination is at a low level. Hold the exposure meter near the object or the center of the scene and aim the exposure meter toward the camera. If the light comes from one side, point the exposure meter about halfway between the light source and the camera.

Caution: Never point the exposure meter directly at the sun.

11. Average Brightness Method

Use this method when the scene has no outstanding light or dark areas, its range of brightness is within the range of the film being used, and no details require special emphasis. Take reflected light readings (par. 10a) from either the camera position (*a* below) or the near-object position (*b* below), as appropriate.

a. Camera Position. Use this position when the scene has comparatively even illumination and no

extremely bright or dark spots, such as reflections from water, or deep shadows cast by heavy foliage. Take one reflected light reading (par. 10a(1)).

b. Near-Object Position. Use this position when the subject is strongly side- or back-lighted or when some very dark or very bright object within the general scene is of primary importance. Take one reflected light reading (par. 10a(2)) using the darkest-object method (par. 13) and one reflected light reading using the brightest-object method (par. 12). The light value midway between these two readings (par. 18c(3)) is the average brightness of the scene.

12. Brightest-Object Method

Use this method when both the brightness of the darkest object and the average brightness of the scene are below the range of the exposure meter, when complete detail in the brightest portion of the scene is required, and when a light reading of the brightest object is required to determine the average brightness of a scene (par. 11b). Hold the exposure meter close to the brightest object in which full detail is desired; disregard incidental bright spots such as a window in an interior scene or a patch of bright sunlight in an otherwise shaded area. Take one reflected light reading (par. 10a(2)).

13. Darkest-Object Method

Use this method when the most important object in a scene is very dim or has adjacent reflections or bright spots unrelated to the subject, and when a light reading of the darkest object is required to determine the average brightness of the scene (par. 11b). This method may be used also for any scene (except

one in which complete detail in the brightest object is required), because it will place the darkest object within the film range. Hold the exposure meter near the darkest object in which complete detail is desired. The distance between the exposure meter and the object should be approximately the width of the object; for example, about 6 inches, if a face is being photographed. Take one reflected light reading (par. 10a(2)).

14. Color Photography

In color photography, the light readings required to determine the proper exposure depend upon the colors that are of particular interest. Do not consider black, white, and brilliant, mirror-like reflections as colors. Take reflected light readings from the near-object position (par. 10a(2)) as follows:

- a.* If the dark colors are of particular interest, take one light reading of the darkest color.
- b.* If the bright colors are of particular interest, take one light reading of the brightest color.
- c.* If the medium colors are of particular interest, take one light reading of the darkest color and one light reading of the lightest color. Use the light value midway between these two readings (par. 18c(3)).
- d.* If the photograph is a portrait, take one light reading of the highlighted portion of the face.

15. Substitution Method

Use this method when it is difficult or impossible to take reflected light readings from the near-object position because the actual objects or the most important objects in a scene are inaccessible (for instance, on the far side of a stream). Take the reflected light

readings indicated in paragraphs 11b and 12 through 14 of similar, nearby objects that are lighted in the same manner as the inaccessible objects. For example, substitute a light reading of a nearby building of similar material for a light reading of a distant group of buildings, or substitute a light reading of the palm of the hand for a light reading of a person's face. Be sure the substitute object and the actual object are lighted the same way; for example, if the actual object is in full sunlight, the substitute object also must be in full sunlight.

16. Best Average Exposure Method

Use this method when every part of the subject is of equal importance, such as a group of people; when the scene includes both highlighted and shadowed areas of equal significance; and when the general illumination is at a low level. Take one incident light reading (par. 10b).

Section III. OPERATION UNDER USUAL CONDITIONS

17. Controls and Indicators

(fig. 3)

a. Controls.

Control	Function
EXP. ASA INDEX selector	Sets on the exposure index dial (<i>b</i> below) the emulsion speed in ASA units of the film in use.

Control	Function
Baffle button.....	When depressed, lowers the baffle to expose the photoelectric cell to direct light and shifts the relative aperture dial (<i>b</i> below) from REFLECTED LIGHT position to INCIDENT LIGHT position.
SET ZERO screw.....	Permits adjustment of lightmeter pointer to 0 position.

b. Indicators.

Indicator	Function
Lightmeter.....	Indicates in foot-candles (direct light) or as relative brightness (reflected light) the intensity of light striking the photoelectric cell.
Exposure index dial.....	Used with EXP. ASA INDEX selector (<i>a</i> above) to set up in ASA units the emulsion speed of the film in use.
Time and brightness dial: Brightness scale.....	Used to set up the light value measured by the lightmeter in relation to the emulsion speed of the film.
Time scale.....	Indicates the shutter speed for the corresponding lens aperture indicated on the relative aperture dial in relation to the light value and emulsion speed settings.

Indicator	Function
Relative aperture dial: REFLECTED LIGHT position...	Indicates the lens aperture for the corresponding shutter speed indicated on the time scale in relation to the light value and film emulsion speed settings when the light value setting is a function of reflected light.
INCIDENT LIGHT position...	Indicates the lens aperture for the corresponding shutter speed indicated on the time scale in relation to the light value and film emulsion speed settings when the light value setting is a function of incident light.

18. Calculating Exposure

a. Determining Film Emulsion Speed. Determine the emulsion speed rating in ASA units of the film being used. If the emulsion speed rating, as given by the film manufacturer, is not in ASA units, refer to the film emulsion speed rating chart below to find the ASA rating that is equivalent to the rating given for the film being used.

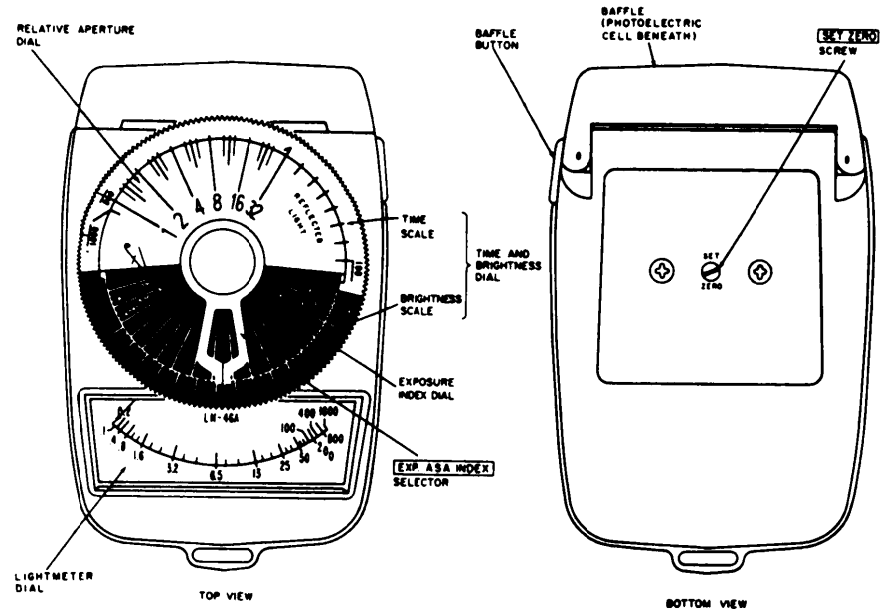


Figure 3. Exposure meter controls and indicators.

ASA	Weston	General electric	Hurter and driffeld	American scheiner	European scheiner	Din
0.1	0.07		1.87			
0.12	0.08		2.18			
0.16	0.12		3.12			
0.2	0.15		3.75			
0.25	0.17		4.37			
0.3	0.25		6.25			
0.4	0.3		7.5			
0.5	0.35		8.75			
0.6	0.5	0.6	12.5	4	10	
0.8	0.6		15.0	5	11	1/10
1.0	0.7	1.0	17.5	6	12	2/10
1.2	1.0	1.5	25	7	13	3/10
1.6	1.2	2.0	30	8	14	4/10
2.0	1.5		38	9	15	5/10
2.5	2.0	3.0	50	10	16	6/10
3	2.5	4.0	63	11	17	7/10
4	3	4.5	75	12	18	8/10
5	4	6.0	100	13	19	9/10
6	5	8	125	14	20	10/10
8	6	10	150	15	21	11/10

ASA	Weston	General electric	Hurter and driffield	American scheiner	European scheiner	Din
10	8	12	200	16	22	12/10
12	10	16	250	17	23	13/10
16	12	20	300	18	24	14/10
20	16	24	400	19	25	15/10
25	20	32	500	20	26	16/10
32	24	40	600	21	27	17/10
40	32	38	800	22	28	18/10
50	40	64	1,000	23	29	19/10
64	50	80	1,250	24	30	20/10
80	64	100	1,600	25	31	21/10
100	80	125	2,000	26	32	22/10
125	100	150	2,500	27	33	23/10
160	125	200	3,120	28	34	24/10
200	160	250	4,000	29	35	25/10
250	200	300	5,000	30	36	26/10
300	250	400	6,250	31	37	27/10
400	320	500	8,000	32	38	28/10
500	400	600	10,000	33	39	29/10
650	500	800	12,500	34	40	30/10
800	650	900	16,250	35	41	31/10

1,000	800	1,200	20,000	36	42	32/10
1,250	950	1,520	11,250	37	43	33/10
1,600	1,300	1,800	32,500	38	44	34/10
2,000	1,600	2,400	40,000	39	45	35/10
3,000	2,400	3,600	60,000	40	46	36/10
4,000	3,200	4,800	80,000	41	47	37/10
5,000	4,000	6,000	100,000	42	48	38/10
6,000	4,800	7,200	120,000	43	49	39/10
8,000	6,400	9,600	160,000	44	50	40/10
10,000	8,000	12,000	200,000	45	51	41/10
12,000	9,600	14,400	240,000	46	52	42/10

TABLE 1612-C

b. Setting EXP. ASA INDEX Selector. Align the red index line of the EXP. ASA INDEX selector with the calibration on the exposure index dial that corresponds to the ASA rating of the film (*a* above).

c. Taking Light Readings. Select the method of taking light reading that is appropriate to the subject (pars. 11-16). Take the indicated light readings as follows:

- (1) Take reflected light readings (par. 10a) with the baffle closed (baffle button in normal or released position). Take incident light readings (par. 10b) with the baffle lowered (baffle button depressed).
- (2) Hold the exposure meter in the position indicated for taking light readings by the selected method and read the light value indicated by the lightmeter.
- (3) When two light readings are required (pars. 11b and 14c), to determine the average brightness (light intensity) of the scene, find on the lightmeter dial the light value midway between the two readings; this light value is the average brightness of the scene. For example, if the light reading of the darkest object or color is 25 and the light reading of the brightest object or color is 400, the light value on the lightmeter dial midway between these two values (the average brightness) is 100 (fig. 4). Note that the average light intensity is the value *on the lightmeter dial* midway between the darkest-object reading and the brightest-object reading and is *not* the arithmetic average of these two readings.

d. Determining Exposure. Determine the exposure (combination of shutter speed and lens aperture) required as follows:

- (1) When reflected light readings are being used, use the REFLECTED LIGHT position of the relative aperture dial (baffle button in normal or released position). When incident light readings are being used, hold the baffle button depressed and use the INCIDENT LIGHT position of the relative aperture dial.
- (2) Position the time and brightness dial so that the calibration on the brightness scale (fig. 3) that corresponds with the light reading of the scene or object (*c* above) is aligned exactly with the ASA film rating set on the exposure index dial (*a* above).
- (3) Combinations of shutter speed on the time scale and lens aperture (*f*/ stop) on the relative aperture dial that are aligned will provide the correct exposure for the particular film and light condition. For example, if the EXP. ASA INDEX selector is set at 50 (the ASA rating of the film) and the brightness scale is set at 100 (the reflected light reading) as shown in figure 4, the aligned lens aperture and shutter speed settings are *f*/4 at 1/1000, *f*/11 at 1/100, *f*/16 at 1/50, and *f*/22 at 1/25. Each of the aligned combinations will provide the same exposure; select the combination (par. 19) that will produce the best negative for the intended purpose.

19. Selecting Best Exposure Setting

a. Selecting Best Combination of Shutter Speed and Lens Aperture. Although each of the aligned combinations of shutter speed and lens aperture (f/ stop) will provide the same exposure (par. 18d(3)), the character of the subject determines the particular combination that will produce the best negative. When the scene includes action, a fast shutter speed is required to *stop* the action. When the overall scene is important and there are important details in both the foreground and the background, a small aperture is required to provide depth of field. Select the best combination of shutter speed and f/ stop as follows:

- (1) If the movement in the scene is very rapid, for example, an airplane takeoff, use the combination that shows the shortest time on the time scale (f/4 at 1/1000, fig. 4). If the action is less rapid, for example, marching troops, use the combination that shows the next to the shortest time on the time scale (f/11 at 1/100).
- (2) If the scene consists entirely of stationary objects, such as an interior in which there are no people, use the combination that shows the smallest aperture on the relative aperture dial (f/22 at 1/25, fig. 4). If the scene includes some slight movement, such as an exterior that includes flags that may be stirred by a breeze, use the combination that shows the next larger lens aperture (f/ 16 at 1/50).

b. Increasing and Decreasing Exposure. Occasionally none of the aligned combinations (par. 18d(3)) will produce exactly the result desired. Scenes that are a

long way from the camera and have little contrast, such as parachutes in the sky, require less exposure. Dark scenes with a great deal of contrast, such as narrow streets between tall buildings, require more exposure. Select the combination (*a* above) most nearly suitable, then use the next smaller lens aperture to decrease the exposure or the next larger lens aperture to increase the exposure. If either case, use the shutter speed aligned with the combination originally selected. For example, if the *f*/ stop of the selected combination is *f*/5.6, the next higher *f*/ stop, *f*/6.3, will decrease the exposure; the next lower *f*/ stop, *f*/4.5, will increase the exposure.

20. Compensating for Filters

Because filters reduce the intensity of the light that reaches the film, when a filter is used, the exposure must be increased in proportion to the filter factor of the filter in use to compensate for this reduction. For example, if the filter factor is 2, the normal (without filter) exposure must be doubled. To determine the proper exposure when a filter is being used, divide the emulsion speed of the film in ASA units (par. 18a) by the filter factor. Set the EXP. ASA INDEX selector (par. 18b) at the resulting value instead of the full ASA rating of the film, and then take light readings and determine the required exposure in the normal manner (par. 18c and d).

21. Use With Motion Picture Cameras

The procedure for using the exposure meter to determine exposure settings for motion picture cameras is essentially the same as for still picture cameras (par. 18) except that for motion picture cameras, the shutter

speed is predetermined and only the correct lens aperture must be found. To determine the correct lens aperture (f/ stop setting) for a particular light condition, follow the procedure described in paragraph 18, except instead of reading the exposure from the aligned combinations of shutter speed and f/ stop setting, read the f/ stop setting that is aligned with the shutter speed of the particular camera in use. If the exact shutter speed is not marked on the time scale, use the f/ stop aligned with the shutter speed nearest to it. A shutter speed of 1/30 second is marked on the time scale by a red dot.



Figure 4. Typical dial settings and exposure readings.

OPERATION UNDER UNUSUAL CONDITIONS

22. Use in Arctic Areas

Extreme cold (subzero temperatures) and sudden changes in temperature are detrimental to the mechanism of the exposure meter. Protect the exposure meter when it is not actually in use by placing it inside the jacket or in a pocket and store it in a warm (not hot) place after use. In cold, dry weather, the window over the lightmeter dial may receive a static charge that will deflect the pointer and cause a false reading. Breathe on the window to remove the static charge before taking light readings.

23. Use in Tropical and Desert Areas

a. Desert Regions. Protect the exposure meter from dust, extreme heat, and sudden temperature changes. Always enclose the exposure meter in its case, when it is not actually in use and store it in a cool place. Never leave the exposure meter exposed to the direct rays of the sun. Temperatures of 125°F. and over may damage the photoelectric cell permanently.

b. Tropical Regions. In the tropical zone, follow the lightmeter readings exactly, because tropical sunlight, although extremely bright, may have less actinic effect on film than the weaker sunlight of temperature zones. Shield the exposure meter from extreme heat at all times and store it in a cool, dry, well-ventilated place when it is not in use. Clean it frequently to prevent corrosion caused by high relative humidity.

CHAPTER 3

MAINTENANCE INSTRUCTIONS

24. Scope of Operator and Organizational Maintenance

First and second echelon maintenance of the LM-46A consist of preventive maintenance (par. 25) and the zero adjustment of the lightmeter pointer (par. 26). No tools or test equipment is required to perform these functions.

25. Preventive Maintenance

a. DA Form 11-254. DA Form 11-254 (figs. 5 and 6) is a preventive maintenance checklist to be used by the operator and by organizational (second echelon) maintenance personnel. Items not applicable to the equipment are lined out in figure 6. References in the ITEM block are to paragraphs in this manual that contain additional maintenance information pertinent to the particular item. Instructions for use of the form appear on the form.

b. Items. The information in this subparagraph supplements DA Form 11-254. The item numbers correspond to the ITEM numbers on the form.

Item	Maintenance procedure
1	Clean the windows of the photoelectric cell, the lightmeter dial, and the relative aperture and exposure index dials with a clean, soft, lint-free cloth. Never use a rough or abrasive cleaning material. See that the windows are not broken, cracked, or excessively scratched.
2	Remove dust, dirt, and moisture from the exposure meter case with a clean, soft, lint-free cloth. In tropical or maritime areas, clean the exposure meter thoroughly to prevent corrosion caused by condensation or salt-laden air.
3	Rotate the EXP. ASA INDEX selector and the time and brightness dial to see that they do not bind or scrape, and that they remain in the positions at which they are set without slipping. Depress and release the baffle button several times. See that the baffle is lowered fully and that the relative aperture dial shifts to the INCIDENT LIGHT position when the baffle button is depressed and that the baffle and dial return fully to their normal positions when the baffle button is released.
21	Cover the baffle closely with the hand to shut out all light from the photoelectric cell and note whether the lightmeter pointer rests exactly at 0. Adjust the pointer if necessary.

26. Zero Adjustment of Lightmeter Pointer

- a. Hold the exposure meter right side up and with the baffle end tilted upward about 45°.
- b. Cover the baffle closely with an opaque material or with the hand. Be sure no light can strike the window of the photoelectric cell.
- c. Rotate the SET ZERO screw (fig. 3) until the lightmeter pointer indicates exactly 0.
- d. Uncover the baffle and aim the exposure meter toward a light source so that the lightmeter pointer

moves upscale. Again cover the baffle closely and note whether the pointer comes to rest at 0.

e. If the pointer does not return exactly to 0 (*d* above), repeat the procedure described in *a* through *d* above until the pointer returns exactly to 0. If this cannot be accomplished by adjusting the SET ZERO screw, higher echelon maintenance is required.

CHAPTER 4
SHIPMENT AND LIMITED STORAGE
AND DEMOLITION TO PREVENT ENEMY USE

Section I. SHIPMENT AND LIMITED STORAGE

27. Preparation for Shipment or Limited Storage

a. Clean the windows of the exposure meter and wipe all dust and dirt from the case.

b. Enclose the exposure meter in its carrying case. Coil the carrying cord around the carrying case and tie it in place with cotton twine.

28. Repackaging for Shipment or Limited Storage

a. Materials Required. The materials and the approximate quantity of each required to repackage the LM-46A are listed below. For stock numbers of materials, refer to SB 38-100.

Material	Quantity
Single-face corrugated fiberboard.....	1½ sq ft
Gummed paper tape.....	4 ft
Waterproof barrier material.....	3 sq ft
Pressure-sensitive tape.....	4 ft
Cotton twine.....	1 ft
Filler material.....	As required
Desiccant.....	2 units
Corrugated fiberboard carton.....	1 (approx 4¾ x 4 x 3½ in.)

b. Packaging. Wrap the exposure meter, enclosed in its case, in waterproof barrier material and seal all closures with pressure-sensitive tape.

- (1) Cushion the wrapped exposure meter on all sides with filler material, and then enclose it within a wrap of single-face corrugated fiberboard secured with gummed paper tape.
- (2) Wrap the cushioned equipment, together with 2 units of desiccant, in waterproof barrier material and seal all closures with pressure-sensitive tape.
- (3) Fold the technical manual horizontally once. Wrap it in waterproof barrier material, and seal all closures with pressure-sensitive tape.

c. Packing.

- (1) Place the packaged equipment and technical literature in a corrugated fiberboard carton of suitable dimensions.
- (2) Fill all voids in the carton with filler material to prevent any movement of the equipment during shipment.
- (3) Seal all seams of the carton with gummed paper tape.

Section II. DEMOLITION OF MATERIEL TO PREVENT ENEMY USE

29. Authority for Demolition

Demolition of this equipment will be accomplished only upon order of the commander. Use the destruction procedures outlined in paragraph 30 to prevent further use of the equipment.

30. Methods of Destruction

Use any or all of the following methods—

a. Smash. Smash the exposure meter; use any heavy tool or object.

b. Cut. Cut the carrying case and the carrying cord; use a pocket knife or any sharp instrument.

c. Burn. Burn the carrying case and cord, the smashed exposure meter, and the technical literature; use gasoline, kerosene, oil, flamethrowers, or incendiary grenades.

d. Dispose. Bury or scatter the destroyed equipment in slit trenches or foxholes, or throw it into streams.

APPENDIX I
REFERENCES

TM 11-401 Elements of Signal Photography
SB 38-100 Preservation, Packaging, and Packing
Materials, Supplies, and Equipment
Used by the Army

APPENDIX II

MAINTENANCE ALLOCATION

a. The maintenance allocation chart assigns maintenance functions and repair operations to be performed by the lowest appropriate maintenance echelon. It also specifies the tool and test equipments authorized at each echelon to perform the assigned maintenance functions.

b. The columns are as follows:

(1) *Part or component.* Only the nomenclature or standard item name is shown in this column. Parts and assemblies comprising the major end item are listed alphabetically. Mounting hardware, such as screws, nuts, bolts, and washers, is not included.

(2) *Maintenance function.* This column indicates the various maintenance functions allocated to the echelon capable of performing the operations. These functions are defined as follows.

(*a*) *Service.* To clean; to preserve; and to replenish fuel and lubricants.

(*b*) *Adjust.* To regulate periodically to prevent malfunction.

(*c*) *Inspect.* To verify serviceability and to detect incipient electrical or mechanical failure by scrutiny.

- (d) *Test.* To verify serviceability and to detect incipient electrical or mechanical failure by use of special equipment, such as gages, meters, etc.
 - (e) *Replace.* To substitute serviceable assemblies, subassemblies, and parts for unserviceable components.
 - (f) *Rebuild.* To restore an item to a standard as near as possible to its original or new condition in appearance, performance, and life expectancy. This is accomplished by the maintenance technique of disassembling the item completely, inspecting all parts or components, repairing or replacing worn or unserviceable elements, using original manufacturing tolerances and/or specifications, and subsequently reassembling the item.
- (3) *1st, 2d, 3d, 4th, 5th echelon.* The symbol X indicates that that echelon is the lowest echelon responsible for performing the associated maintenance operation, but does not indicate, necessarily, that repair parts will be stocked at that level. Echelons higher than the echelon indicated by X are authorized to perform the maintenance operation.
- (4) *Tools required.* The numbers in this column represent tool and test equipments required to perform the related maintenance function. These numbers are identified in the Allocation of Tools for Maintenance Functions Chart.
- (5) *Remarks.* This column contains any notations necessary to clarify the data cited in the preceding columns.

c. Allocation of tools for maintenance functions columns are as follows:

- (1) *Tools required for maintenance functions.* This column lists the tool and test equipments required to perform the assigned maintenance functions.
- (2) *1st, 2d, 3d, 4th, 5th echelon.* A dagger (†) indicates that the tool or test equipment is allocated to that echelon.
- (3) *Tool code.* The numbers in this column are code numbers that represent the associated tool or test equipment and are used in the maintenance allocation chart, to refer to the indicated item.
- (4) *Remarks.* This column is used for explanatory notes.

2. Maintenance by Using Organizations

When this equipment is used by signal service organizations organic to the theater headquarters or communications zone to provide theater communications, those maintenance functions allocated up to and including fourth echelon are authorized to the organization operating this equipment.

Maintenance Allocation Chart

(1) Part or component	(2) Maintenance function	(3) 1st ech.	(4) 2d ech.	(5) 3d ech.	(6) 4th ech.	(7) 5th ech.	(8) Tools required	(9) Remarks
METER, EXPOSURE, PHOTO- GRAPHIC LM-46A.	service....	X						Clean
	adjust....	X						Zero adjust only
	inspect....	X						Visual
	test.....				X		2	Instrument pointer response
rebuild....						X	1, 3	Plus shop support
ADJUSTER, METER POINTER.....	replace....				X		1	
BUTTON, BAFFLE RELEASE.....	replace....				X		1	
CASE ASSEMBLY.....	replace....				X		1	
GASKET.....	replace....				X		1	
GLASS, CELL.....	replace....				X		1	
MATCHED CELL AND MECHA- NISM ASSEMBLY	replace....				X		1, 3	
PHOTOGRAPHIC EXPOSURE METER SUB-ASSEMBLY	replace....				X		1	
SLIDER ASSEMBLY.....	replace....				X		1	
WINDOW DIAL.....	replace....				X		1	

Allocation of Tools for Maintenance Functions

(1) Tools required for maintenance functions	(2) 1st ech.	(3) 2d ech.	(4) 3d ech.	(5) 4th ech.	(6) 5th ech.	(7) Tool code	(8) Remarks
LM-46A							
TOOL EQUIPMENT TK-21/G				(†)	(†)	1	
METER, FOOT CANDLE, PHOTOELEC- TRIC ME-86/U.				(†)	(†)	2	
SCREWDRIVER, STRADDLE FOR DEJUR PART NO. Z-7.182B				(†)	(†)	3	For slotted cylindrical nut $\frac{3}{16}$ in. od x $\frac{1}{4}$ in. id 031 035 x 030 slot. To be issued 1 per 1-5 MOS 295.1.

APPENDIX III BASIC ISSUE ITEMS

Section I. INTRODUCTION

1. General

a. Scope. This appendix lists items supplied for the initial operation of the equipment. The list includes all items issued as *part of* the major end item. End items of equipment are issued on the basis of allowances prescribed in equipment authorization tables and other documents that are a basis for requisitioning.

b. Columns. The columns of section II are:

- (1) *Source, maintenance, and recoverability code.*
Not used.
- (2) *Federal stock number.* This column lists the 11-digit Federal stock number.
- (3) *Designation by model.* (Not used).
- (4) *Description.* Nomenclature or the standard item name and brief identifying data for each item are listed in this column. When requisitioning, enter the nomenclature and description on the requisition.
- (5) *Unit of issue.* The unit of issue is the supply term applied to the smallest quantity by which the individual item is counted for procurement, storage, requisitioning, and issue purposes.

- (6) *Expendability.* Expendable items are indicated by the letter X; nonexpendable items are indicated by NX.
- (7) *Quantity authorized.* For “Items Comprising an Operable Equipment”, the column lists the quantity of each item supplied for the initial operation of the equipment.
- (8) *Illustrations.* The number in the “Figure No.” column designates the figure number of the illustration in this technical manual in which that particular item is shown. The numbers in the “Item No. ” column correspond to item numbers appearing on the associated illustration that identify particular items.

2. Second Echelon Maintenance Parts

No maintenance parts are authorized for stockage at second echelon.

(1) Source maintenance and re- coverability code	(2) Federal stock No.	(3) Designation by model	(4) Description	(5) Unit of issue	(6) Ex- pend- ability	(7) Quan- tity author- ized	Illustrations	
							(8) Fig- ure No.	(9) Item No.
			signed for incident light reading and reflected light reading, film speed range .1 to 12,000 A.S.A. time range 1/1000 sec to 100 sec aperture range, f/1 to f/32; DeJur-Amsco part No. Z22-165.					
	Ord thru AGC		TECHNICAL MANUAL	ea	X	2		
	6760-752-7912		TM-11-6760-206-12.					
	6760-776-0630		CASE, METER: DeJur-Amsco part No. Z-10.1313.	ea	X	1	1	2
			CORD, CARRYING: DeJur-Amsco part No. Z-10.1314.	ea	X	1	1	1
			RUNNING SPARES AND ACCESSORY ITEMS					

TAGO 1612-C

METER, PHOTOGRAPHIC
EXPOSURE LM-46A

NO PARTS AUTHORIZED
FOR STOCKAGE AT
FIRST ECHELON.

By Order of *Wilber M. Brucker*, Secretary of the Army:

L. L. LEMNITZER,
General, United States Army,
Chief of Staff.

Official:
R. V. LEE,
Major General, United States Army,
The Adjutant General.

Distribution:

Active Army:

To be distributed in accordance with DA Form 12-7 requirements for TM 11 series (Unclas) plus the following additional formula:

USASA (2)	11-55
CNGB (1)	11-56
Tech Stf, DA (1) except	11-57
CSigO (18)	11-96
Def Atomic Spt Accy (5)	11-117
USARADCOM (2)	11-155
USARADCOM Rgn (2)	11-500 (AA-AE)
Seventh US Army (2)	11-557
EUSA (2)	11-587
MDW (1)	11-592
USASCS (93)	11-597
Units organized under following	17
TOE's: (2 ea)	19-29
11-7	19-5000 (AA-AE)
11-16	39-51

NG: State AC (3); Units same as Active Army except allowance is one copy to each unit.

USAR: None.

For explanation of abbreviations used, see AR 320-50.

* U. S. GOVERNMENT PRINTING OFFICE: 1990--262-912/30280

TECHNICAL MANUAL

Operator and Organizational Maintenance
Manual

METER, PHOTOGRAPHIC EXPOSURE LM-46A

TM 11-6760-206-12	}	HEADQUARTERS,
CHANGE No. 1		DEPARTMENT OF THE ARMY
		WASHINGTON, D.C., 20 Sept. 1963

TM 11-6760-206-12, 14 September 1960, is changed as follows:

Page 3. Add paragraph 1.1 after paragraph 1.

1.1. Index of Publications

Refer to the latest issue of DA Pam 310-4 to determine whether there are new editions, changes, or additional publications pertaining to this equipment. DA Pam 310-4 is an index of current technical manuals, technical bulletins, supply bulletins, lubrication orders, and modification work orders that are available through publications supply channels. The index lists the individual parts (-10, -20, -35P, etc.) and the latest changes to and revisions of each equipment publication.

Delete paragraph 2 and substitute:

2. Forms and Records

a. Reports of Maintenance and Unsatisfactory

Equipment. Use equipment forms and records in accordance with instructions in TM 38-750.

b. Report of Damaged or Improper Shipment. Fill out and forward DD Form 6 (Report of Damaged or Improper Shipment) as prescribed in AR 700-58 (Army), NAVSANDA Publication 378 (Navy), and AFR 71-4 (Air Force).

c. Reporting of Equipment Manual Improvements. The direct reporting by the individual user of errors, omissions, and recommendations for improving this manual is authorized and encouraged. DA Form 2028 (Recommended Changes to DA Technical Manual Parts Lists or Supply Manual 7, 8 or 9) will be used for reporting these improvement and/or recommendations. This form will be completed in triplicate using pencil, pen, or typewriter. The original and one copy will be forwarded direct to: Commanding Officer, U.S. Army Electronics Materiel Support Agency, ATTN: SELMS-MP, Fort Monmouth, N.J. 07733. One information copy will be furnished to the individual's immediate supervisor (officer, noncommissioned officer, supervisor, etc.).

Figure 5 (facing page 26). Delete figure 5.

Page 27, paragraph 24, line 2. Change "(par. 25)" to: (pars. 25-25.5).

Delete paragraph 25 and substitute:

25. Preventive Maintenance

Preventive maintenance is the systematic care,

servicing, and inspection of equipment to prevent the occurrence of trouble, to reduce downtime, and to assure that the equipment is serviceable.

a. Systematic Care. The procedures given in paragraphs 25.2, 25.3, and 25.5 cover routine systematic care and cleaning essential to proper upkeep and operation of the equipment.

b. Preventive Maintenance Checks and Services. The preventive maintenance checks and services charts (pars. 25.2 and 25.5) outline functions to be performed at specific intervals. These checks and services are to maintain Army equipment in combat serviceable condition; that is, in good general condition (physical) and in good operating condition. To assist operators and organizational personnel in maintaining combat serviceability, the charts indicate what to check, how to check, and what the normal conditions are. The *references* column lists paragraphs or other manuals that contain appropriate corrective procedures. If the defect cannot be remedied during service and inspection, higher echelon maintenance or repair is required. Records and reports of these checks and services must be made in accordance with the requirements of TM 38-750.

Page 28. Add paragraphs 25.1 through 25.5 after paragraph 25.

25.1. Preventive Maintenance Checks and Services Periods

The LM-46A requires preventive maintenance

checks and services on a daily and monthly basis. Paragraph 25.2 specifies checks and services that must be accomplished daily or at least once each week if the equipment is maintained in a standby condition. Paragraph 25.5 specifies *additional* checks and services that must be performed once each month.

25.2. Daily Preventive Maintenance Checks and Services Chart

Sequence No.	Item	Procedure	References
1	Exterior surfaces	<p><i>a.</i> Clean all exposed surfaces of exposure meter and carrying case.</p> <p><i>b.</i> Inspect case of exposure meter for good general condition.</p> <p><i>c.</i> See that windows of photoelectric cell, lightmeter dial, and relative aperture and exposure index dials are not cracked, broken, or excessively scratched.</p>	<p><i>a.</i> Par. 25.3.</p> <p><i>b.</i> None.</p> <p><i>c.</i> None.</p>
2	Controls	<p><i>a.</i> Rotate EXP. ASA INDEX selector and time and brightness dial (fig. 3) to see that they do not bind or scrape and that they remain in positions at which they are set without slipping.</p> <p><i>b.</i> Depress and release baffle button several times. See that baffle is lowered fully and that relative aperture dial shifts to INCIDENT LIGHT position when</p>	

6 **25.2. Daily Preventive Maintenance Checks and Services Chart— Continued**

Sequence No.	Item	Procedure	References
3-W ^a	Lightmeter pointer	<p>baffle button is depressed, and that baffle and dial return to their normal positions, when baffle button is released.</p> <p>Cover baffle closely with hand to shut out all light from photoelectric cell, and note whether lightmeter pointer rests exactly at 0. Adjust lightmeter pointer if necessary.</p>	Par. 26.

^a To be accomplished weekly instead of daily.

25.3. Cleaning

a. Remove dust, dirt, and moisture from the exposure meter case and the carrying case with a clean, soft, lintless cloth. In tropical or maritime areas, clean the exposure meter thoroughly to prevent rust or corrosion caused by condensation or salt-laden air.

b. Carefully clean the windows of the photoelectric cell, the lightmeter dial, and the relative aperture and exposure index dials with a clean, soft, lintless cloth. Never use a rough or abrasive cleaning material or a dirty cloth.

25.4. Monthly Maintenance

Perform the maintenance functions indicated in the monthly preventive maintenance checks and services chart (par. 25.5) once each month. Monthly maintenance is in addition to the daily preventive maintenance checks and services (par. 25.2), which should be performed at the same time. A month is defined as approximately 30 calendar days of 8-hour-per-day operation. If the equipment is operated more or less than 8 hours a day, the maintenance interval must be adjusted accordingly. For example, if the equipment is operated only 4 hours a day, monthly preventive maintenance checks and services should be performed at 2-month intervals. The maintenance interval must be adjusted also to compensate for any other unusual operating conditions. Equipment maintained in a standby (ready for opera-

tion) condition requires monthly maintenance. Equipment in limited storage requires service before operation but does not require monthly maintenance. All deficiencies or shortcomings will be recorded and those not corrected during inspection and service will be reported immediately to higher echelon using forms and procedures specified in TM 38-750. Equipment that has a deficiency that cannot be corrected during inspection and service should be deadlined in accordance with TM 38-750.

25.5. Monthly Preventive Maintenance Checks and Services Chart

Sequence No.	Item	Procedure	References
1	Preservation	<p>a. Inspect leather carrying case for deterioration, broken stitching, fungus, and defective zipper.</p> <p>b. Inspect carrying cord for excessive wear or fraying and for secure attachment to exposure meter.</p> <p>c. Inspect exposure meter case for dents, serious scratches, rust, corrosion, and loose or missing screws.</p> <p>d. See that all dial and scale markings and other insignia are clearly legible.</p>	
2	Publications	See that all pertinent publications are available, current, complete, and in usable condition.	DA Pam 310-4.
3	Modifications	Check DA Pam 310-4 to determine whether new applicable MWO's have been published. All URGENT MWO's must be applied immediately. All NORMAL MWO's must be scheduled.	TM 38-750 and DA Pam 310-4.

Page 33, appendix I. Add the following to the list of references:

- DA Pam 310-4 Index of Technical Manuals, Technical Bulletins, Supply Bulletins, Lubrication Orders, and Modification Work Orders.
- TM 38-750 The Army Equipment Record System and Procedures.

BY ORDER OF THE SECRETARY OF THE
ARMY:

EARLE G. WHEELER,
*General, United States Army,
Chief of Staff.*

Official:

J. C. LAMBERT,
*Major General, United States Army,
The Adjutant General.*

Distribution:

Active Army:

USASA (2)
CNGB (1)
CofEngrs (1)
TSG (1)
CSigO (7)
CofT (1)
CofSpts (1)
USA CD Agcy (1)
USCONARC (6)
USAMC (6)
ARADCOM (2)
ARADCOM Rgn (2)
OS Maj Comd (3)
OS Base Comd (2)
LOGCOMD (2)
USAES (5)
USAMICOM (4)
USASCC (4)
MDW (1)
Armies (2)
Corps (2)
USA Corps (3)
USATC AD (2)

11-96	29-1
11-117	29-21
11-155	29-51
11-157	29-66
11-237	29-75
11-500 (AA-AC) (4)	29-105
11-557	30-14
11-587	30-17
11-592	30-18
11-597	30-25
12-37	30-26
12-157	30-28
12-167	30-500 (AA-AE)
12-177	30-600 (AA-AC)
17	37
17-100	37-100
19-29	39-51
19-217	57
19-600 (AA-AE)	57-100

NG: State AG (3); units — same as Active Army except allowance is one copy each unit.

USAR: None.

For explanation of abbreviations used, see AR 320-50.

Changes in force: C1 and C3

TM 11-6760-206-12

C2

CHANGE } HEADQUARTERS
No. 2 } DEPARTMENT OF THE ARMY
WASHINGTON, D.C., 1 May 1974

**Operator and Organizational
Maintenance Manual
METERS, PHONOGRAPHIC EXPOSURE LM-46A**

TM 11-6760-206-12, 14 September 1960, is changed as follows:

Page 3, paragraph 1.1. Delete paragraph 1.1 and substitute:

1.1. Indexes of Publications

a. DA Pam 310-4. Refer to the latest issue of DA Pam 310-4 to determine whether there are new editions, changes, or additional publications pertaining to the equipment.

b. DA Pam 310-7. Refer to DA Pam 310-7 to determine whether there are modification work orders (MWO's) pertaining to the equipment.

Paragraph. Delete paragraph 2 and substitute:

2. Forms and Records

a. Reports of Maintenance and Unsatisfactory Equipment. Maintenance forms, records, and reports which are to be used by maintenance personnel at all maintenance levels are listed in and prescribed by TM 38-750.

b. Report of Packaging and Handling Deficiencies. Fill out and forward DD Form 6 (Report of Packaging and Handling Deficiencies) as prescribed in AR 700-58/NAVSUP PUB 378/AFR 71-4/MCO P4030.29, and DSAR 4145.8.

c. Discrepancy in Shipment Report (DISREP) (SF 361). Fill out and forward Discrepancy in Shipment Report (DISREP) (SF 361) as prescribed in AR 55-38/NAVSUPINST 4610.33/AFM 75-18/MCO P4610.19A, and DSAR 4500.15.

2.1. Reporting of Equipment Publications Improvements

Reporting of errors, omissions, and recommendations for improving this publication by the individual user is encouraged. Reports should be submitted on DA Form 2028 (Recommended Changes to Publications and Blank Forms) and forwarded direct to Commander, US Army Electronics Command, ATTN: AMSEL-MA-S Fort Monmouth, NJ 07703.

a. Basic Issue Items List — Section II. A list, in alphabetical sequence, of items which are furnished with, and which must be turned in with the end item.

b. Items Troop Installed or Authorized List — Section III. Nonapplicable.

3. Explanation of Columns.

The following provides an explanation of columns found in the tabular listings:

a. Illustration. This column is divided as follows:

(1) *Figure Number.* Indicates the figure number of the illustration in which the item is shown.

(2) *Item Number.* Not applicable.

b. Federal Stock Number. Indicates the Federal stock number assigned to the item and will be used for requisitioning purposes.

c. Part Number. Indicates the primary number used by the manufacturer (individual, company, firm, corporation, or Government activity), which controls the design and characteristics of the item by means of its engineering drawings, specifications standards, and inspection requirements, to identify an item or range of items.

d. Federal Supply Code for Manufacturer (FSCM). The FSCM is a 5-digit numeric code used to identify the manufacturer, distributor, or Government agency, etc., and is identified in SB 708-42.

e. Description. Indicates the Federal item name and a minimum description required to identify the item.

Page 5, paragraph 5. Delete paragraph 5 and substitute:

5. Items Comprising an Operable Equipment

<i>FSN</i>	<i>Qty</i>	<i>Nomenclature</i>	<i>Fig. No.</i>
6760-810-8385	1	Meter, Photographic Exposure LM-64A (Basic Component)	1

Page 39, appendix III. Delete appendix III and substitute:

APPENDIX III

BASIC ISSUE ITEMS LIST (BILL) AND ITEMS TROOP INSTALLED OR AUTHORIZED LIST (ITIAL)

Section I. INTRODUCTION

1. Scope

This appendix lists only basic issue items required by the crew/operator for installation, operation, and maintenance of Meter, Photographic Exposure LM-46A.

2. General

This Basic Issue Items and Items Troop Installed or Authorized List is divided into the following sections:

4

f. Unit of Measure (U/M). Indicates the standard of basic quantity of the listed item as used in performing the actual maintenance function. This measure is expressed by a two-character alphabetical abbreviation, (e.g., ea, in., pr, etc). When the unit of measure differs from the unit of issue, the lowest unit of issue that will satisfy the required units of measure will be requisitioned.

g. Quantity Furnished with Equipment (Basic Issue Items Only). Indicates the quantity of the basic issue item furnished with the equipment.

SECTION II. BASIC ISSUE ITEMS LIST

(1) ILLUSTRATION		(2) FEDERAL STOCK NUMBER	(3) PART NUMBER	(4) FSCM	(5) DESCRIPTION USABLE ON CODE	(6) UNIT OF MEAS	(7) QTY FURN WITH EQUIP
(A) FIG NO.	(B) ITEM NO						
1		6760-752-7912	Z-10.1313	28281	CASE, METER	EA	1
1		6760-776-0630	Z-10.1314	28281	CORD, CARRYING	EA	1

By Order of the Secretary of the Army:

CREIGHTON W. ABRAMS
General, United States Army
Chief of Staff

Official:

VERNE L. BOWERS
Major General, United States Army
The Adjutant General

DISTRIBUTION:

Active Army:

USASA (2)	Fort Gordon (10)
CNGB (1)	Fort Huachuca (10)
ACSC-E (2)	Fort Carson (5)
Dir of Trans (1)	Ft Richardson (ECOM Ofc) (2)
COE (1)	Army Dep (1) except
TSG (1)	LBAD (14)
USAARENBD (1)	SAAD (30)
USAMB (10)	TOAD (14)
AMC (1)	ATAD (10)
TRADOC (2)	WSMR (1)
ARADCOM (2)	USA Dep (2)
ARADCOM Rgn (2)	Sig Sec USA Dep (2)
OS Maj Comd (4)	Sig Dep (2)
LOGCOMDS (3)	Sig FLDMS (1)
MICOM (2)	USAERDAA (1)
TECOM (2)	USAERDAW (1)
AV Comm Cen (1)	MAAG (1)
GH (1)	USARMIS (1)
USA Crim Inves Lab (2)	Units org under fol TOE:
USACC (4)	(1 copy each)
MDW (1)	7 29-51
Armies (2)	11-16 29-56
Corps (2)	11-35 29-75
HISA Ft Monmouth (18)	11-36 29-105
Svc Colleges (1)	11-96 30-14
USASCS (10)	11-117 30-17
USASESS (5)	11-237 30-18
USAAADS (2)	11-500 30-25
	(AA-AC)
USAFAS (2)	12-157 30-26
USAARMS (2)	12-167 30-28
USAIS (2)	12-177 37
USAES (2)	17 37-100
USAINTC (3)	17-100 39-51
WRAMC (1)	19-217 57
ATS (1)	29-1 57-100

NG: None

USAR: None

For explanation of abbreviations used, see AR 310-60.

PIN : 021123 - 002

RECOMMENDED CHANGES TO EQUIPMENT TECHNICAL PUBLICATIONS



THEN...JOT DOWN THE DOPE ABOUT IT ON THIS FORM. CAREFULLY TEAR IT OUT, FOLD IT AND DROP IT IN THE MAIL.

SOMETHING WRONG WITH PUBLICATION

FROM: (PRINT YOUR UNIT'S COMPLETE ADDRESS)

DATE SENT

PUBLICATION NUMBER

PUBLICATION DATE

PUBLICATION TITLE

BE EXACT PIN-POINT WHERE IT IS

PAGE NO.

PARA-GRAPH

FIGURE NO.

TABLE NO.

IN THIS SPACE, TELL WHAT IS WRONG AND WHAT SHOULD BE DONE ABOUT IT.

TEAR ALONG PERFORATED LINE

PRINTED NAME, GRADE OR TITLE AND TELEPHONE NUMBER

SIGN HERE

