


Model-Based Calibration Toolbox™ 3

Reference

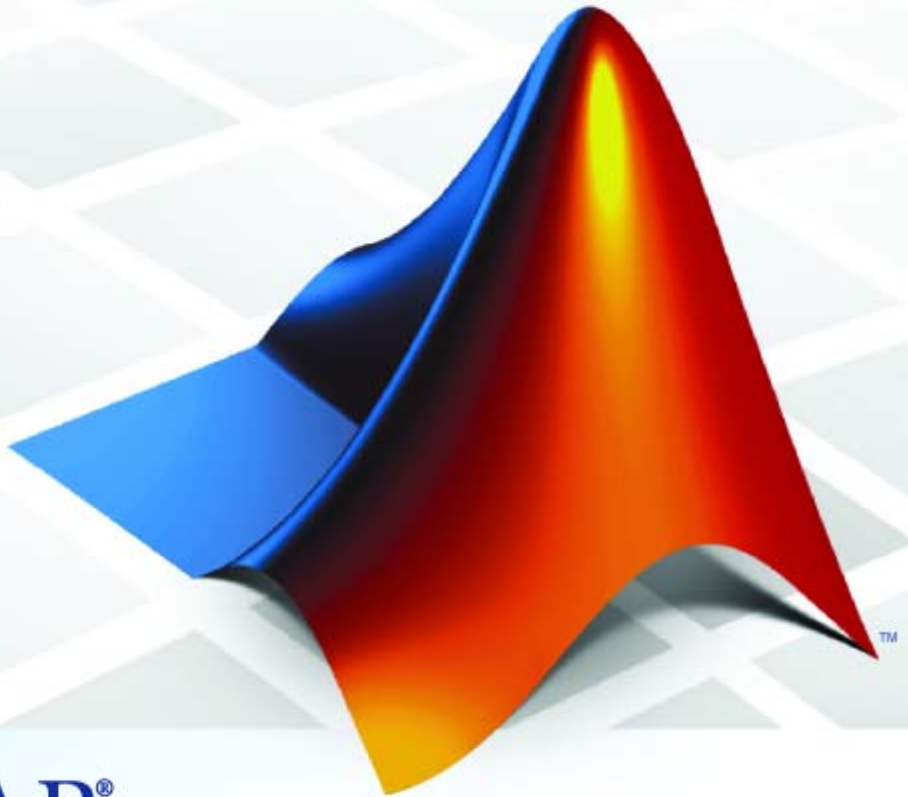

MATLAB®
& **SIMULINK®**

How to Contact The MathWorks



www.mathworks.com Web
comp.soft-sys.matlab Newsgroup
www.mathworks.com/contact_TS.html Technical Support



suggest@mathworks.com Product enhancement suggestions
bugs@mathworks.com Bug reports
doc@mathworks.com Documentation error reports
service@mathworks.com Order status, license renewals, passcodes
info@mathworks.com Sales, pricing, and general information



508-647-7000 (Phone)



508-647-7001 (Fax)



The MathWorks, Inc.
3 Apple Hill Drive
Natick, MA 01760-2098

For contact information about worldwide offices, see the MathWorks Web site.

Model-Based Calibration Toolbox™ Reference

© COPYRIGHT 2005–2009 by The MathWorks, Inc.

The software described in this document is furnished under a license agreement. The software may be used or copied only under the terms of the license agreement. No part of this manual may be photocopied or reproduced in any form without prior written consent from The MathWorks, Inc.

FEDERAL ACQUISITION: This provision applies to all acquisitions of the Program and Documentation by, for, or through the federal government of the United States. By accepting delivery of the Program or Documentation, the government hereby agrees that this software or documentation qualifies as commercial computer software or commercial computer software documentation as such terms are used or defined in FAR 12.212, DFARS Part 227.72, and DFARS 252.227-7014. Accordingly, the terms and conditions of this Agreement and only those rights specified in this Agreement, shall pertain to and govern the use, modification, reproduction, release, performance, display, and disclosure of the Program and Documentation by the federal government (or other entity acquiring for or through the federal government) and shall supersede any conflicting contractual terms or conditions. If this License fails to meet the government's needs or is inconsistent in any respect with federal procurement law, the government agrees to return the Program and Documentation, unused, to The MathWorks, Inc.

Trademarks

MATLAB and Simulink are registered trademarks of The MathWorks, Inc. See www.mathworks.com/trademarks for a list of additional trademarks. Other product or brand names may be trademarks or registered trademarks of their respective holders.

Patents

The MathWorks products are protected by one or more U.S. patents. Please see www.mathworks.com/patents for more information.

Revision History

November 2005	Online only	New for Version 3.0 (Release 14SP3+)
September 2006	Online only	Version 3.1 (Release 2006b)
March 2007	Online only	Version 3.2 (Release 2007a)
September 2007	Online only	Revised for Version 3.3 (Release 2007b)
March 2008	Online only	Revised for Version 3.4 (Release 2008a)
October 2008	Online only	Revised for Version 3.4.1 (Release 2008a+)
October 2008	Online only	Revised for Version 3.5 (Release 2008b)
March 2009	Online only	Revised for Version 3.6 (Release 2009a)
September 2009	Online only	Revised for Version 3.7 (Release 2009b)

Function Reference

1

Object Creation	1-2
Data Manipulation	1-3
Data Properties	1-3
Data Methods	1-4
Projects	1-5
Project Properties	1-5
Project Methods	1-5
Test Plans	1-6
Testplan Properties	1-6
Testplan Methods	1-6
Designs	1-8
Design Properties	1-8
Design Methods	1-9
Generator Properties	1-9
Generator Methods	1-10
Candidate Set Properties	1-10
Candidate Set Methods	1-10
Design Constraint Properties	1-10
Design Constraint Methods	1-11
Models	1-12
Hierarchical Models	1-12
Local Models	1-13
Response Models	1-15
Model Objects	1-16
Model Parameters	1-19
Model Properties	1-20
Boundary Models	1-21

Boundary Classes	1-21
AbstractBoundary Properties	1-22
AbstractBoundary Methods	1-22
Model Properties	1-23
Model Methods	1-23
Boolean Properties	1-23
Boolean Methods	1-24
PointByPoint Properties	1-24
PointByPoint Methods	1-25
TwoStage Properties	1-25
TwoStage Methods	1-26
Tree Properties	1-26
Tree Methods	1-26
TwoStageTree Properties	1-27

Commands — Alphabetical List

2

Function Reference

Object Creation (p. 1-2)	Functions to construct data, model and project objects; load projects; and find data file types.
Data Manipulation (p. 1-3)	Properties and methods for data objects
Projects (p. 1-5)	Properties and methods for project objects
Test Plans (p. 1-6)	Properties and methods for test plan objects
Designs (p. 1-8)	Properties and methods for design objects
Models (p. 1-12)	Properties and methods for model objects
Boundary Models (p. 1-21)	Properties and methods for boundary model objects

Object Creation

CreateBoundary

Create boundary model

CreateData

Create data object

CreateModel

Create new model

CreateProject

Create project object

DataFileTypes

Data file types

LoadProject

Load mbemodel.project

modelinput

Create modelinput object

Data Manipulation

Data Properties (p. 1-3)

Examine data objects

Data Methods (p. 1-4)

Work with data objects

Data Properties

Filters

Structure array holding user-defined filters

IsBeingEdited

Boolean signaling if data or model is being edited

IsEditable

Boolean signaling whether data is editable

Name

Name of object

NumberOfRecords

Total number of records in data object

NumberOfTests

Total number of tests being used in model

Owner

Object from which data was received

RecordsPerTest

Number of records in each test

SignalNames

Names of signals held by data

SignalUnits

Names of units in data

TestFilters

Structure array holding user-defined test filters

UserVariables

Structure array holding user-defined variables

Data Methods

AddFilter	Add user-defined filter to data set
AddTestFilter	Add user-defined test filter to data set
AddVariable	Add user-defined variable to data set
Append	Append data to data set
BeginEdit	Begin editing session on data object
CommitEdit	Update temporary changes in data
DefineNumberOfRecordsPerTest	Define exact number of records per test
DefineTestGroups	Define rule-based test groupings
ExportToMBCDataStructure	Export data to MBC data structure
ImportFromFile	Load data from file
ImportFromMBCDataStructure	Load data from MBC data structure
ModifyFilter	Modify user-defined filter in data set
ModifyTestFilter	Modify user-defined test filter in data set
ModifyVariable	Modify user-defined variable in data set
RemoveFilter	Remove user-defined filter from data set
RemoveTestFilter	Remove user-defined test filter from data set
RemoveVariable	Remove user-defined variable from data set
RollbackEdit	Undo most recent changes to data
Value	Double data from data object

Projects

Project Properties (p. 1-5)

Examine project objects

Project Methods (p. 1-5)

Work with project objects

Project Properties

Data

Array of data objects in project, boundary tree, or test plan

Filename

Full path to project file

Modified

Boolean signaling whether project has been modified

Name

Name of object

TestPlans

Array of test plan objects in project

Project Methods

CopyData

Create data object from copy of existing object

CreateData

Create data object

CreateTestplan

Create new test plan

Load

Load existing project file

New

Create new project file

Remove

Remove project, test plan, model, or boundary model

RemoveData

Remove data from project

Save

Save project

SaveAs

Save project to new file

Test Plans

Testplan Properties (p. 1-6)

Examine test plan objects

Testplan Methods (p. 1-6)

Work with test plan objects

Testplan Properties

BestDesign

Best design in test plan

Boundary

Get boundary model tree from test plan

Data

Array of data objects in project, boundary tree, or test plan

DefaultModels

Default models for test plan

Designs

Designs in test plan

Inputs

Inputs for test plan, model, boundary model, design, or constraint

InputSignalNames

Names of signals in data that are being modeled

InputsPerLevel

Number of inputs at each level in model

Levels

Number of levels in hierarchical model

Name

Name of object

Responses

Array of available responses for test plan

Testplan Methods

AddDesign

Add design to test plan

AttachData

Attach data from project to test plan

BoundaryModel

Get boundary model from test plan

CreateDesign	Create design object for test plan or model
CreateResponse	Create new response model for test plan
DetachData	Detach data from test plan
FindDesign	Find design by name
InputSetupDialog	Open Input Setup dialog box to edit inputs
Remove	Remove project, test plan, model, or boundary model
RemoveDesign	Remove design from test plan
UpdateDesign	Update design in test plan

Designs

Design Properties (p. 1-8)	Examine design objects
Design Methods (p. 1-9)	Work with design objects
Generator Properties (p. 1-9)	Examine design generator objects
Generator Methods (p. 1-10)	Work with design generator objects
Candidate Set Properties (p. 1-10)	Examine design candidate set objects
Candidate Set Methods (p. 1-10)	Work with design candidate set objects
Design Constraint Properties (p. 1-10)	Examine design constraint objects
Design Constraint Methods (p. 1-11)	Work with design constraint objects

Design Properties

Constraints	Constraints in design
Generator	Design generation options
Inputs	Inputs for test plan, model, boundary model, design, or constraint
Model (for designs)	Model for design
Name	Name of object
NumberOfInputs	Number of model, boundary model, or design object inputs
NumberOfPoints	Number of design points
Points	Matrix of design points
PointTypes	Fixed and free point status
Style	Style of design type
Type (for designs and generators)	Design type

Design Methods

AddConstraint	Add design constraint
Augment	Add design points
ConstrainedGenerate	Generate constrained space-filling design of specified size
CreateCandidateSet	Create candidate set for optimal designs
CreateConstraint	Create design constraint
Discrepancy	Discrepancy value
FixPoints	Fix design points
Generate	Generate new design points
getAlternativeTypes	Alternative model or design types
Maximin	Maximum of minimum of distance between design points
Merge	Merge designs
Minimax	Minimum of maximum distance between design points
OptimalCriteria	Optimal design criteria (V, D, A, G)
RemovePoints	Remove all nonfixed design points
Scatter2D	Plot design points

Generator Properties

NumberOfInputs	Number of model, boundary model, or design object inputs
Type (for designs and generators)	Design type

Generator Methods

getAlternativeTypes	Alternative model or design types
Properties (for design generators)	View and edit design generator properties

Candidate Set Properties

NumberOfInputs	Number of model, boundary model, or design object inputs
Type (for candidate sets)	Candidate set type

Candidate Set Methods

getAlternativeTypes	Alternative model or design types
Properties (for candidate sets)	View and edit candidate set properties

Design Constraint Properties

Inputs	Inputs for test plan, model, boundary model, design, or constraint
Name	Name of object
NumberOfInputs	Number of model, boundary model, or design object inputs
Type (for design constraints)	Design constraint type

Design Constraint Methods

Evaluate	Evaluate model, boundary model, or design constraint
getAlternativeTypes	Alternative model or design types
MatchInputs	Match design constraint inputs
Properties (for design constraints)	View and edit design constraint properties

Models

Hierarchical Models (p. 1-12)	Working with hierarchical models
Local Models (p. 1-13)	Working with local models
Response Models (p. 1-15)	Working with response models
Model Objects (p. 1-16)	Working with model objects
Model Parameters (p. 1-19)	Examine model parameter objects
Model Properties (p. 1-20)	Set model properties

Hierarchical Models

Hierarchical Response Properties

InputSignalNames	Names of signals in data that are being modeled
Level	Level in test plan of response
LocalResponses	Array of local responses for response
Name	Name of object
NumberOfTests	Total number of tests being used in model
ResponseSignalName	Name of signal or response feature being modeled

Hierarchical Response Methods

AlternativeModelStatistics	Summary statistics for alternative models
CreateAlternativeModels	Create alternative models from model template
DoubleInputData	Data being used as input to model

DoubleResponseData	Data being used as output to model for fitting
Export	Make command-line or Simulink® export model
OutlierIndices	Indices of DoubleInputData marked as outliers
PEV	Predicted error variance of model at specified inputs
PredictedValue	Predicted value of model at specified inputs
Remove	Remove project, test plan, model, or boundary model
SummaryStatistics	Summary statistics for response

Local Models

Local Response Properties

InputSignalNames	Names of signals in data that are being modeled
Level	Level in test plan of response
Name	Name of object
NumberOfTests	Total number of tests being used in model
ResponseFeatures (Local Response)	Array of response features for local response
ResponseSignalName	Name of signal or response feature being modeled

Local Response Methods

AlternativeModelStatistics	Summary statistics for alternative models
CreateAlternativeModels	Create alternative models from model template
CreateResponseFeature	Create new response feature for local model
DiagnosticStatistics	Diagnostic statistics for response
DoubleInputData	Data being used as input to model
DoubleResponseData	Data being used as output to model for fitting
Export	Make command-line or Simulink export model
MakeHierarchicalResponse	Build two-stage model from response feature models
ModelForTest	Model for specified test
OutlierIndices	Indices of DoubleInputData marked as outliers
OutlierIndicesForTest	Indices marked as outliers for test
PEV	Predicted error variance of model at specified inputs
PEVForTest	Local model predicted error variance for test
PredictedValue	Predicted value of model at specified inputs
PredictedValueForTest	Predicted local model response for test
Remove	Remove project, test plan, model, or boundary model
RemoveOutliers	Remove outliers in input data by index or rule, and refit models

RemoveOutliersForTest	Remove outliers on test by index or rule and refit models
RestoreData	Restore removed outliers
RestoreDataForTest	Restore removed outliers for test
SummaryStatistics	Summary statistics for response
SummaryStatisticsForTest	Statistics for specified test
UpdateResponseFeatures	Refit response feature models

Local Model Properties

LocalModel Properties	Edit local model properties
ResponseFeatures(Local Model)	Set of response features for local model

Response Models

Response Properties

AlternativeResponses	Array of alternative responses for this response
InputSignalNames	Names of signals in data that are being modeled
Level	Level in test plan of response
Model Object	Model object within response object
Name	Name of object
NumberOfTests	Total number of tests being used in model
ResponseSignalName	Name of signal or response feature being modeled

Response Methods

<code>AlternativeModelStatistics</code>	Summary statistics for alternative models
<code>ChooseAsBest</code>	Choose best model from alternative responses
<code>CreateAlternativeModels</code>	Create alternative models from model template
<code>DiagnosticStatistics</code>	Diagnostic statistics for response
<code>DoubleInputData</code>	Data being used as input to model
<code>DoubleResponseData</code>	Data being used as output to model for fitting
<code>Export</code>	Make command-line or Simulink export model
<code>OutlierIndices</code>	Indices of <code>DoubleInputData</code> marked as outliers
<code>PEV</code>	Predicted error variance of model at specified inputs
<code>PredictedValue</code>	Predicted value of model at specified inputs
<code>Remove</code>	Remove project, test plan, model, or boundary model
<code>RemoveOutliers</code>	Remove outliers in input data by index or rule, and refit models
<code>RestoreData</code>	Restore removed outliers
<code>SummaryStatistics</code>	Summary statistics for response

Model Objects

Response objects contain an `mbcmodel.model` object with the following properties and methods.

Model Properties

FitAlgorithm	Fit algorithm for model or boundary model
InputData	Input data for model
Inputs	Inputs for test plan, model, boundary model, design, or constraint
IsBeingEdited	Boolean signaling if data or model is being edited
NumberOfInputs	Number of model, boundary model, or design object inputs
OutputData	Output (or response) data for model
Parameters	Model parameters
Properties (for models)	View and edit model properties
Response	Response for model object
Status	Model status: fitted, not fitted or best
Type (for models)	Valid model types
Units	Model output units

Linear Model Methods

AliasMatrix	Alias matrix for linear model parameters
BoxCoxSSE	SSE and confidence interval for Box-Cox transformations
Correlation	Correlation matrix for linear model parameters
Covariance	Covariance matrix for linear model parameters
MultipleVIF	Multiple VIF matrix for linear model parameters

ParameterStatistics	Calculate parameter statistics for linear model
PartialVIF	Partial VIF matrix for linear model parameters
SingleVIF	Single VIF matrix for linear model parameters
StepwiseRegression	Change stepwise selection status for specified terms

Model Methods

CreateDesign	Create design object for test plan or model
Evaluate	Evaluate model, boundary model, or design constraint
Export	Make command-line or Simulink export model
Fit	Fit model or boundary model to new or existing data, and provide summary statistics
getAlternativeTypes	Alternative model or design types
InputSetupDialog	Open Input Setup dialog box to edit inputs
Jacobian	Calculate Jacobian matrix for model at existing or new X points
ModelSetup	Open Model Setup dialog box where you can alter model type
PEV	Predicted error variance of model at specified inputs
PredictedValue	Predicted value of model at specified inputs
StatisticsDialog	Open summary statistics dialog box

SummaryStatistics	Summary statistics for response
UpdateResponse	Replace model in response

Fit Algorithm Methods

An `mbcmodel.fitalgorithm` object is contained within the `Properties` property of an `mbcmodel.model` object.

CreateAlgorithm	Create algorithm
getAlternativeNames	List alternative algorithm names
IsAlternative	Test alternative fit algorithm
SetupDialog	Open fit algorithm setup dialog box

Model Parameters

These properties of the `mbcmodel.modelparameters` object are all read-only. An `mbcmodel.modelparameters` object is contained within the `Parameters` property of an `mbcmodel.model` object.

Model Parameters Properties

Names	Model parameter names
NumberOfParameters	Number of included model parameters
Values	Values of model parameters

Linear Model Properties

A `mbcmodel.linearmodelparameters` object is a `mbcmodel.modelparameters` object plus the following properties.

SizeOfParameterSet	Number of model parameters
StepwiseSelection	Model parameters currently included and excluded
StepwiseStatus	Stepwise status of parameters in model

RBF Model Properties

A `mbcmodel.rbfmodelparameters` object is a `mbcmodel.linearmodelparameters` object plus the following properties.

Centers	Centers of RBF model
Widths	Width data from RBF model

Model Properties

Linear Model Properties Methods

GetAllTerms	List all model terms
GetIncludedTerms	List included model terms
SetTermStatus	Set status of model terms

Boundary Models

Boundary Classes (p. 1-21)	Learn about boundary model objects
AbstractBoundary Properties (p. 1-22)	Examine parent boundary model objects
AbstractBoundary Methods (p. 1-22)	Work with parent boundary model objects
Model Properties (p. 1-23)	Examine base boundary model objects
Model Methods (p. 1-23)	Work with base boundary model objects
Boolean Properties (p. 1-23)	Examine boolean boundary model objects
Boolean Methods (p. 1-24)	Work with boolean boundary model objects
PointByPoint Properties (p. 1-24)	Examine point-by-point boundary model objects
PointByPoint Methods (p. 1-25)	Work with point-by-point boundary model objects
TwoStage Properties (p. 1-25)	Examine two-stage boundary model objects
TwoStage Methods (p. 1-26)	Work with two-stage boundary model objects
Tree Properties (p. 1-26)	Examine boundary tree objects
Tree Methods (p. 1-26)	Work with boundary tree objects
TwoStageTree Properties (p. 1-27)	Examine two-stage boundary tree objects

Boundary Classes

<code>mcboundary.AbstractBoundary</code>	Base boundary model class
<code>mcboundary.Boolean</code>	Boolean boundary model class

<code>mbcboundary.Model</code>	Boundary model class
<code>mbcboundary.PointByPoint</code>	Point-by-point boundary model class
<code>mbcboundary.Tree</code>	Boundary tree class
<code>mbcboundary.TwoStage</code>	Two-stage boundary model class
<code>mbcboundary.TwoStageTree</code>	Root boundary tree class in two-stage test plans

AbstractBoundary Properties

<code>FitAlgorithm</code>	Fit algorithm for model or boundary model
<code>Fitted</code>	Indicate whether boundary model has been fitted
<code>Inputs</code>	Inputs for test plan, model, boundary model, design, or constraint
<code>Name</code>	Name of object
<code>NumberOfInputs</code>	Number of model, boundary model, or design object inputs
<code>Type (for boundary models)</code>	Boundary model type

AbstractBoundary Methods

<code>CreateBoundary</code>	Create boundary model
<code>designconstraint</code>	Convert boundary model to design constraint
<code>Evaluate</code>	Evaluate model, boundary model, or design constraint
<code>getAlternativeTypes</code>	Alternative model or design types

Model Properties

ActiveInputs	Active boundary model inputs
FitAlgorithm	Fit algorithm for model or boundary model
Fitted	Indicate whether boundary model has been fitted
Inputs	Inputs for test plan, model, boundary model, design, or constraint
Name	Name of object
NumberOfInputs	Number of model, boundary model, or design object inputs
Type (for boundary models)	Boundary model type

Model Methods

CreateBoundary	Create boundary model
designconstraint	Convert boundary model to design constraint
Evaluate	Evaluate model, boundary model, or design constraint
Fit	Fit model or boundary model to new or existing data, and provide summary statistics
getAlternativeTypes	Alternative model or design types

Boolean Properties

FitAlgorithm	Fit algorithm for model or boundary model
Fitted	Indicate whether boundary model has been fitted

Inputs	Inputs for test plan, model, boundary model, design, or constraint
Name	Name of object
NumberOfInputs	Number of model, boundary model, or design object inputs
Type (for boundary models)	Boundary model type

Boolean Methods

CreateBoundary	Create boundary model
designconstraint	Convert boundary model to design constraint
Evaluate	Evaluate model, boundary model, or design constraint
getAlternativeTypes	Alternative model or design types

PointByPoint Properties

FitAlgorithm	Fit algorithm for model or boundary model
Fitted	Indicate whether boundary model has been fitted
Inputs	Inputs for test plan, model, boundary model, design, or constraint
LocalBoundaries	Array of local boundary models for each operating point
LocalModel	Definition of local boundary model
Name	Name of object
NumberOfInputs	Number of model, boundary model, or design object inputs

OperatingPoints	Model operating point sites
Type (for boundary models)	Boundary model type

PointByPoint Methods

CreateBoundary	Create boundary model
designconstraint	Convert boundary model to design constraint
Evaluate	Evaluate model, boundary model, or design constraint
getAlternativeTypes	Alternative model or design types

TwoStage Properties

FitAlgorithm	Fit algorithm for model or boundary model
Fitted	Indicate whether boundary model has been fitted
GlobalModel	Interpolating global boundary model definition
Inputs	Inputs for test plan, model, boundary model, design, or constraint
LocalModel	Definition of local boundary model
Name	Name of object
NumberOfInputs	Number of model, boundary model, or design object inputs
Type (for boundary models)	Boundary model type

TwoStage Methods

CreateBoundary	Create boundary model
designconstraint	Convert boundary model to design constraint
Evaluate	Evaluate model, boundary model, or design constraint
getAlternativeTypes	Alternative model or design types
getLocalBoundary	Local boundary model for operating point

Tree Properties

BestModel	Combined best boundary models
Data	Array of data objects in project, boundary tree, or test plan
InBest	Boundary models selected as best
Models	Array of boundary models
TestPlan	Test plan containing boundary tree

Tree Methods

Add	Add boundary model to tree and fit to test plan data
CreateBoundary	Create boundary model
Remove	Remove project, test plan, model, or boundary model
Update	Update boundary model in tree and fit to test plan data

TwoStageTree Properties

BestModel	Combined best boundary models
Global	Global boundary model tree
InBest	Boundary models selected as best
Local	Local boundary model tree
Response	Response for model object
TestPlan	Test plan containing boundary tree

Commands — Alphabetical List

ActiveInputs

Purpose Active boundary model inputs

Syntax `B.ActiveInputs = [X]`

Description `ActiveInputs` is a property of `mbcboundary.Model`.
`B.ActiveInputs = [X]` sets the active inputs for the boundary model. `X` is a logical row vector indicating which inputs to use to fit a boundary. You can build boundary models using subsets of input factors and then combine them for the most accurate boundary. This approach can provide more effective results than including all inputs.

Examples To make a boundary model using only the first two inputs:

```
B.ActiveInputs = [true true false false];
```

See Also “Boundary Models” on page 1-21

Purpose Add boundary model to tree and fit to test plan data

Syntax
B = Add(Tree,B)
B = Add(Tree,B,InBest)

Description This is a method of `mbcboundary.Tree`.

`B = Add(Tree,B)` adds the boundary model to the tree and fits the boundary model to the test plan data. `Tree` is an `mbcboundary.Tree` object, `B` is a new boundary model object. The boundary model must have the same inputs as the boundary tree. The boundary model is always fitted when you add it to the boundary tree. This fitting ensures that the fitting data is compatible with the test plan data. The method returns the fitted boundary model.

`B = Add(Tree,B,InBest)` adds and fits the boundary model, and `InBest` specifies whether to include the boundary model in the best boundary model for the boundary tree. By default, the best model includes the new boundary model.

See Also Update, Remove, CreateBoundary, “Boundary Models” on page 1-21

AddConstraint

Purpose Add design constraint

Syntax `D = AddConstraint(D,c)`

Description `AddConstraint` is a method of `mbcdoe.design`.
`D = AddConstraint(D,c)` adds constraint `c` to the design. You must call `AddConstraint` to apply the constraint and remove points outside the constraint.
If `c` is a boundary model, `AddConstraint` also converts the boundary model object to a `mbcdoe.designconstraint` object.

See Also `CreateConstraint`

Purpose

Add design to test plan

Syntax

```
D = AddDesign(T,D)
D = AddDesign(T,Level,D)
D = AddDesign(T,Level,D,Parent)
```

Description

AddDesign is a method of `mbcmodel.testplan`.

```
D = AddDesign(T,D)
D = AddDesign(T,Level,D)
D = AddDesign(T,Level,D,Parent)
```

D is the array of designs to be added to the test plan, T.

Level is the test plan level. By default the level is the outer level (i.e., Level 1 for One-stage, Level 2 (global) for Two-stage).

Parent is the parent design in the design tree. By default designs are added to the top level of the design tree. See [Designs](#) for more information on the design tree.

In order to ensure that the design names are unique in the test plan, the design name will be changed when adding a design to a test plan if a design of the same name already exists. The array of designs with modified names is an output.

Examples

To add three designs to the test plan global (2) level:

```
D = AddDesign(TP, [sfDesign, parkedCamsDesign, mainDesign])
```

See Also

[UpdateDesign](#); [RemoveDesign](#); [FindDesign](#)

AddFilter

Purpose Add user-defined filter to data set

Syntax `D = AddFilter(D, expr)`

Description This is a method of `mbcmodel.data`.

A filter is a constraint on the data set used to exclude some records. You define the filter using logical operators or a logical function on the existing variables.

`D` is the `mbcmodel.data` object you want to filter.

`expr` is an input string holding the expression that defines the filter.

Examples `AddFilter(D, 'AFR < AFR_CALC + 10');`

The effect of this filter is to keep all records where `AFR < AFR_CALC + 10`.

`AddFilter(D, 'MyFilterFunction(AFR, RPM, TQ, SPK)');`

The effect of this filter is to apply the function `MyFilterFunction` using the variables `AFR`, `RPM`, `TQ`, `SPK`.

All filter functions receive an `nx1` vector for each variable and must return an `nx1` logical array out. In that array, true (or 1) indicates a record to keep, and false (or 0) indicates a record to discard.

See Also `ModifyFilter`, `RemoveFilter`, `Filters`, `AddTestFilter`, `ModifyTestFilter`

Purpose Add user-defined test filter to data set

Syntax `D = AddTestFilter(D, expr)`

Description This is a method of `mbcmodel.data`.

A test filter is a constraint on the data set used to exclude some entire tests. You define the test filter using logical operators or functions on the existing variables.

D is your data object.

expr is the input string holding the definition of the new test filter.

Examples `AddTestFilter(d1, 'any(n>1000)');`

The effect of this filter is to include all tests in which all records have speed (n) greater than 1000.

Similar to filters, test filter functions are iteratively evaluated on each test, receiving an `nx1` vector for each variable input in a test, and must return an `1x1` logical array out. In that array, true (or 1) indicates a record to keep, and false (or 0) indicates a test to discard.

```
AddTestFilter(data, 'length(LOGNO) > 6');
```

The effect of this filter is to include all tests with more than 6 records.

See Also `ModifyTestFilter`, `RemoveTestFilter`, `TestFilters`, `AddFilter`

AddVariable

Purpose Add user-defined variable to data set

Syntax `D = AddVariable(D, expr, units)`

Description This is a method of `mbcmodel.data`.

You can define new variables in terms of existing variables. Note that variable names are case sensitive.

`D` is your data object.

`expr` is the input string holding the definition of the new variable.

`units` is an optional input string holding the units of the variable.

Examples

```
AddVariable(D, 'MY_NEW_VARIABLE = TQ*AFR/2');  
AddVariable(D, 'funcVar = MyVariableFunction(TQ, AFR, RPM)',  
            'lb');  
AddVariable(D, 'TQ=tq');
```

The last example could be useful if the signal names in the data do not match the model input factor names in the test plan template file.

See Also

`ModifyVariable`, `RemoveVariable`, `UserVariables`

Purpose	Alias matrix for linear model parameters
Syntax	<code>A = M.AliasMatrix</code>
Description	<p>This is a method of <code>mbcmodel.linearmodel</code>.</p> <p><code>A = M.AliasMatrix</code> calculates the alias matrix for the linear model parameters (where <code>M</code> is a linear model).</p>
Examples	<pre>A = AliasMatrix(knot_model)</pre>
See Also	<code>ParameterStatistics</code>

AlternativeModelStatistics

Purpose Summary statistics for alternative models

Syntax
S = AlternativeModelStatistics(R)
S = AlternativeModelStatistics(R, Name)

Description This is a method of all model objects: `mbcmodel.hierarchicalresponse`, `mbcmodel.localresponse` and `mbcmodel.response`.

This returns an array (S) of summary statistics of all the alternative model fits, to be used to select the best model. These are the summary statistics seen in the list view at the bottom of the Model Browser GUI in any model view.

You must use `CreateAlternativeModels` before you can compare the alternative responses using `AlternativeModelStatistics`. Then use `ChooseAsBest`.

R is the model object whose alternative response models you want to compare. R could be a local (L), response feature (R) or hierarchical response (HR) model.

S is a structure containing `Statistics` and `Names` fields.

- `S.Statistics` is a matrix of size (number alternative responses x number of statistics).
- `S.Names` is a cell array containing the names of all the statistics.

The available statistics vary according to what kind of parent model (two-stage, local, response feature or response) produced the alternative models, and include `PRESS RMSE`, `RMSE`, and `Two-Stage RMSE`.

All the available statistics are calculated unless you specify which you want. You can specify only the statistics you require using the following form:

```
S = AlternativeModelStatistics(R, Name)
```

This returns a double matrix containing only the statistics specified in `Name`.

Note that you use `SummaryStatistics` to examine the fit of the current model, and `AlternativeModelStatistics` to examine the fit of several alternative child models.

Examples

```
S = AlternativeModelStatistics(R);
```

See Also

`CreateAlternativeModels`, `SummaryStatistics`, `ChooseAsBest`

AlternativeResponses

Purpose	Array of alternative responses for this response
Syntax	<code>altR = R.AlternativeResponses</code>
Description	This is a property of the response model object, <code>mbcmodel.response (R)</code> . It returns a list of alternative responses used for one-stage or response feature models.
Examples	<pre>R = testplan.Responses; TQ = R(1); AR = TQ.AlternativeResponses;</pre>
See Also	<code>LocalResponses</code> , <code>ResponseFeatures(Local Response)</code>

Purpose Append data to data set

Syntax `D = Append(D, otherData)`

Description This is a method of `mbcmodel.data`.

You can use this to add new data to your existing data set, `D`.

`otherData` is the input argument holding the extra data to add below the existing data. This argument can either be an `mbcmodel.data` object or a double array. The behavior is different depending on the type.

If `otherData` is an `mbcmodel.data` object then `Append` will look for common `SignalNames` between the two sets of data. If no common `SignalNames` are found then a error will be thrown. Any common signals will be Appended to the existing data and other signals will be filled with `NaN`.

If `otherData` is a double array then it must have exactly the same number of columns as there are `SignalNames` in the data, and a simple `vertcat` (vertical concatenation) is applied between the existing data and `otherData`.

Examples

```
Append(D, CreateData('aDataFile.xls'));
Append(D, rand(10,100));
```

See Also `CreateData`

AttachData

Purpose Attach data from project to test plan

Syntax `newD = AttachData(T, D, Property1, Value, Property2, Value...)`

Description This is a method of `mbcmodel.testplan`. Use it to attach the data you want to model to the test plan.

T is the test plan object, D is the data object.

The following table shows the valid properties and their corresponding possible values. The first five are optional property/value pairs to control how the data is matched to a design. These are the settings shown in the last page of the Data Wizard (if there is a design) in the Model Browser. For more information on the meaning of these settings, refer to the Data Wizard section (under Data) in the *Model Browser User's Guide*.

The `usedatarange` property changes the test plan input ranges to the range of the data.

Note If the testplan has responses set up the models are fitted when you attach data.

Property	Value	Default
<code>unmatcheddata</code>	{'all', 'none'}	'all'
<code>moredata</code>	{'all', 'closest'}	'all'
<code>moredesign</code>	{'none', 'closest'}	'none'
<code>tolerances</code>	[1xNumInputs double]	ModelRange/20
<code>usedatarange</code>	logical	false

When you attach data to a test plan the Name property of the test plan inputs is used to select data channels. If the Name is empty then the

Symbol is used as the Name. If the Name does not exist in the data set, an error is generated.

When a test plan has data attached, it is only possible to change the symbols, ranges or nonlinear transforms of the test plan inputs.

Examples

To use all the data in DATA in the test plan TESTPLAN and set the input ranges to the data range:

```
newD = AttachData(TESTPLAN, DATA, 'usedatarange', true);
```

To match data DATA to the best design in testplan TESTPLAN within specified tolerances:

```
tol = [0.075, 100, 1, 2];
unmatch = 'all';
moredata = 'all';
moredes = 'none';
AttachData(testplan, data, ...
    'tolerances', tol, ...
    'unmatcheddata', unmatch, ...
    'moredata', moredata, ...
    'moredesign', moredes);
```

You can use AttachData to use data from one project in another project, as follows:

```
p1 = mbcmodel.LoadProject( filename );
p2 = mbcmodel.LoadProject( filename2 );
p1.Testplan.AttachData( p2.Data );
```

See Also

Data, CreateData, DetachData

Augment

Purpose Add design points

Syntax
D = Augment(D, Numpoints)
D = Augment(D, 'Prop1', value1, ...)

Description Augment is a method of `mbcdoe.design`. Use it to add points to a design using a specified design generator. After augmenting a design, the design `Style` is set to `Custom` unless an optimal design is used for augmentation, as in the Design Editor.

D = Augment(D, Numpoints) augments the design with the number of points specified by Numpoints using the current generator settings.

D = Augment(D, 'Prop1', value1, ...) augments the design with the generator specified by the generator property value pairs.

You can use the Augment method to add points to an existing type using a different design type.

```
OptDesign = Augment(OptDesign, ...  
    'Type', 'V-optimal', ...  
    'MaxIterations', 200, ...  
    'NoImprovement', 50, ...  
    'NumberOfPoints', 20);
```

To set all designs points to fixed and then augment an existing design optimally, use the `FixPoints` method to fix all the points as follows:

```
OptDesign = FixPoints(OptDesign);  
OptDesign = Augment(OptDesign, ...  
    'Type', 'V-optimal', ...  
    'MaxIterations', 200, ...  
    'NoImprovement', 50, ...  
    'NumberOfPoints', 20);
```

When augmenting with an optimal design generator existing points which are not fixed may be changed. To add points optimally and keep only fixed points, use `RemovePoints` before augmenting, e.g.,

```
OptDesign = RemovePoints(OptDesign,'free');  
OptDesign = Augment(OptDesign,...  
    'Type','V-optimal',...  
    'MaxIterations',200,...  
    'NoImprovement', 50,...  
    'NumberOfPoints',20);
```

To get a candidate set object for use with an optimal design:

```
C = CreateCandidateSet(OptDesign,'Type', 'Grid',...  
    'NumberOfLevels',[21 21 21]);
```

You see an error if you try to call Augment when the design Style is User-defined or Experimental data.

Examples

To create a candidate set and then optimally augment a design with 10 points:

```
CandidateSet = augmentedDesign.CreateCandidateSet...  
( 'Type', 'Grid' );  
CandidateSet.NumberOfLevels = [21 21 21 21];  
augmentedDesign = Augment( augmentedDesign,...  
    'Type', 'V-optimal',...  
    'NumberOfPoints', 10,...  
    'CandidateSet', CandidateSet,...  
    'MaxIterations', 200,...  
    'NoImprovement', 50 );
```

See Also

Generate; CreateCandidateSet

BeginEdit

Purpose Begin editing session on data object

Syntax `D = BeginEdit(D)`

Description This is a method of `mbcmodel.data`.

You must call this method before you can make any changes to a data object.

There are no input arguments. You must call `BeginEdit` before attempting to modify your data object (`D` in the example below) in any way. An error will be thrown if this condition is not satisfied. Data which cannot be edited (see `IsEditable`) will throw an error if `BeginEdit` is called.

Examples `BeginEdit(D);`

See Also `CommitEdit, RollbackEdit, IsEditable, IsBeingEdited`

Purpose	Best design in test plan
Syntax	<code>T.BestDesign{Level} = d;</code>
Description	<p>BestDesign is a property of <code>mbcdmodel.testplan</code>.</p> <p><code>T.BestDesign{Level} = d;</code> sets <code>d</code> as the best design, where <code>Level</code> is the test plan level. There can be one best design for each level, but the best global (2) level design is used for matching to data when you call <code>AttachData</code>.</p> <p>BestDesign is a cell array with a cell per level. <code>TP.BestDesign{1}</code> is the best design for the first level and <code>TP.BestDesign{2}</code> is best design for the second level.</p>
Examples	<p>To set the design <code>globalDesign</code> as the best design at the global (2) level:</p> <pre>T.BestDesign{2} = globalDesign</pre>
See Also	<code>CreateDesign</code>

BestModel

Purpose Combined best boundary models

Syntax `mbcboundary.Tree.BestModel`

Description This is a property of `mbcboundary.Tree` and `mbcboundary.TwoStageTree`.

`mbcboundary.Tree.BestModel` returns the combined boundary model containing all best boundary models in the tree (read only).

`BestModel` is the boundary model combining the models selected as best. You can select which boundary models to include in the best model with `InBest`. If the best boundary model includes more than one boundary model, that boundary model is an `mbcboundary.Boolean` object.

For `TwoStageTree` objects, the `BestModel` property contains the best boundary model (local, global, and response) (read only). In this case, `BestModel` is the boundary model combining the best local, global and response boundary models. You can select which boundary models to include in the best model with `InBest`. If the best boundary model includes more than one boundary model, that boundary model is an `mbcboundary.Boolean` object.

See Also `InBest`

Purpose	Get boundary model tree from test plan
Syntax	<code>BoundaryTree = mbcmodel.testplan.Boundary</code>
Description	<p>Boundary is a property of <code>mbcmodel.testplan</code>.</p> <p><code>BoundaryTree = mbcmodel.testplan.Boundary</code> returns the boundary tree for the test plan. The <code>BoundaryTree</code> is a container for all the boundary models you create. <code>BoundaryTree</code> is an <code>mbcboundary.Tree</code> object.</p>
Examples	<p>To get the boundary tree from the test plan <code>Boundary</code> property:</p> <pre>BoundaryTree = mbcmodel.testplan.Boundary</pre>
See Also	<code>CreateBoundary</code> , <code>mbcboundary.Tree</code> , <code>mbcboundary.Model</code>

BoundaryModel

Purpose Get boundary model from test plan

Syntax Best = BoundaryModel (T)
Best = BoundaryModel (T, Type)

Description BoundaryModel is a method of `mbcmodel.testplan`.

Best = BoundaryModel (T) returns the best boundary model for the test plan, T. Best is a boundary model subclass of `mbcboundary.AbstractBoundary`: `mbcboundary.Model`, `mbcboundary.Boolean`, `mbcboundary.PointByPoint`, or `mbcboundary.TwoStage`.

Note Before Release 2009b, BoundaryModel returned an `mbcdoe.designconstraint` object. Use `designconstraint` to convert a boundary to a design constraint.

Best = BoundaryModel (T, Type) is the best boundary model for the specified type associated with the test plan. Type can be any of the following values:

- 'all': Best boundary model for all inputs (default)
- 'local': Best local boundary model
- 'global': Best global boundary model

Examples To load boundary constraints from another project file and add to design:

```
otherProject = mbcmodel.LoadProject( [matlabroot,'\toolbox\...  
mbc\mbctraining\Gasoline_project.mat']);  
boundaryConstraints = otherProject.Testplans(1).Boundary.Global.BestModel  
Design.Constraints = boundaryConstraints;
```


When you add the constraints to the design, the boundary model object converts automatically to an `mbcdoe.designconstraint`.

See Also

Boundary, CreateBoundary

BoxCoxSSE

Purpose SSE and confidence interval for Box-Cox transformations

Syntax

```
[sse, ci, lambda] = BoxCoxSSE(Model, lambda)
[sse, ci, lambda] = BoxCoxSSE(Model)
BoxCoxSSE(Model, ...)
```

Description This is a method of `mbcmodel.linearmodel`.

`[sse, ci, lambda] = BoxCoxSSE(Model, lambda)` computes the sum of squares error (`sse`) and confidence interval (`ci`) for values of the model under different Box-Cox transforms (as given by the parameter `lambda`). The data used is that which was used to fit the model. `sse` is a vector the same size as `lambda` and `ci` is a scalar. There is no statistical difference between the Box-Cox transforms where `sse` less than `ci`.

`[sse, ci, lambda] = BoxCoxSSE(Model)` If `lambda` is not specified, then default values for are used and these are returned in third output argument.

`BoxCoxSSE(Model, ...)` If no output arguments are requested then a plot of SSE versus `lambda` is displayed. The confidence intervals are also displayed on this plot.

Examples To try several different values, of the Box-Cox parameter and plot the results:

```
lambda = -3:0.5:3;
[sse, ci] = BoxCoxSSE( M, lambda);
semilogy( lambda, sse, 'bo-', lambda([1,end]), [ci, ci], 'r--' );
xlabel( 'Box-Cox parameter, \lambda' );
ylabel( 'SSE' );
```

Note that `BoxCoxSSE` does not set a Box-Cox transform in the model. To do this use:

```
M.Properties.BoxCox = 0;
[S,M] = M.Fit;
```

See Also `ParameterStatistics`

Purpose	Centers of RBF model
Syntax	<code>centers = params.Centers</code>
Description	This is a property of <code>mbcmodel.rbfmodelparameters</code> , for Radial Basis Function (RBF) models only. This returns an array of size <code>number_of_centers</code> by <code>number_of_variables</code> .
Examples	<pre>centers = params.Centers;</pre>
See Also	Widths

ChooseAsBest

Purpose Choose best model from alternative responses

Syntax ChooseAsBest(R, Index)

Description This is a method of the response model object, `mbcmodel.response`. This is the same function as selecting the best model in the Model Selection window of the Model Browser GUI. For a local model `MakeHierarchicalResponse` performs a similar function.

R is the object containing the response model.

Index is the number of the response model you want to choose as best. Use `AlternativeResponses` to find the index for each response model, and use `AlternativeModelStatistics` to choose the best fit.

Examples

```
ChooseAsBest(R, AlternativeModel)
RMSE = AlternativeModelStatistics(R, 'RMSE');
[mr, Best] = min(RMSE);
ChooseAsBest(R, Best);
```

See Also `AlternativeResponses`, `AlternativeModelStatistics`, `DiagnosticStatistics`, `MakeHierarchicalResponse`

Purpose Update temporary changes in data

Syntax `D = CommitEdit(D)`

Description This is a method of `mbcmodel.data`.

Use this to apply changes you have made to the data, such as creating new variables and applying filters to remove unwanted records.

There are no input arguments. Once you have finished editing your data object `D` you must commit your changes back to the project. Data can only be committed if both `IsEditable` and `IsBeingEdited` are true. `CommitEdit` will throw an error if these conditions are not met.

Examples

```
D = P.Data;
BeginEdit(D);
AddVariable(D, 'TQ = tq', 'lbft');
AddFilter(D, 'TQ < 200');
DefineTestGroups(D, {'RPM' 'AFR'}, [50 10], 'MyLogNo');
CommitEdit(D);
```

For an example situation which results in `CommitEdit` failing:

```
D = p.Data;
D1 = p.Data;
BeginEdit(D1);
tp = p.'Testplan;
Attach(tp, D);
```

Where `p` is an `mbcmodel.project` object, and `D` and `D1` are `mbcmodel.data` objects.

At this point `IsEditable(D1)` becomes false because it is now Attached to the test plan and hence can only be modified from the test plan. If you now enter:

```
OK = D1.IsEditable
```

the answer is false.

CommitEdit

If you now enter:

```
CommitEdit(D1);
```

An error is thrown because the data is no longer editable. The error message informs you that the data may have been attached to a test plan and can only be edited from there.

See Also

BeginEdit, RollbackEdit, IsEditable, IsBeingEdited

Purpose

Generate constrained space-filling design of specified size

Syntax

```
design = ConstrainedGenerate( design, NumPoints,  
    'UnconstrainedSize', Size, 'MaxIter', NumIterations )  
design = ConstrainedGenerate( design, NumPoints, OPTIONS )
```

Description

`ConstrainedGenerate` is a method of `mbcdoe.design`. Use it to generate a space-filling design of specified size within the constrained region. This method only works for space-filling designs. It may not be possible to achieve a specified number of points, depending on the generator settings and constraints.

```
design = ConstrainedGenerate( design, NumPoints,  
    'UnconstrainedSize', Size, 'MaxIter', NumIterations )
```

tries to generate a design with the number of constrained points specified by `NumPoints`. You can supply parameter value pairs for the options or you can use a structure: `design = ConstrainedGenerate(design, NumPoints, OPTIONS)`.

- `MaxIter` — Maximum iterations. Default: 10
- `UnconstrainedSize` — Total number of points in unconstrained design. Default: `NumPoints`

The algorithm `ConstrainedGenerate` produces a sequence of calls to `Generate`, and updates the `UnconstrainedSize` using the following formula:

```
UnconstrainedSize = ceil(UnconstrainedSize * NumPoints/D.NumberOfPoints);
```

Examples

With `ConstrainedGenerate`, make a 200 point design, using an existing space-filling design `sfDesign`, and inspect the constrained and total number of points:

```
sfDesign = ConstrainedGenerate( sfDesign, 200, 'UnconstrainedSize', 800, 'MaxIter', 10 );  
  
% How did we do?  
finalNumberOfPoints = sfDesign.NumberOfPoints
```

ConstrainedGenerate

```
% How many points did we need in total?  
totalNumberOfPoints = sfDesign.Generator.NumberOfPoints  
  
finalNumberOfPoints =  
    200  
totalNumberOfPoints =  
    839
```

See Also CreateConstraint; Generate

Purpose Constraints in design

Syntax `Constraints = D.Constraints`

Description Constraints is a property of `mbcdoe.design`.

`Constraints = D.Constraints` Designs have a `Constraints` property, initially this is empty:

```
constraints = design.Constraints
```

```
constraints =  
0x0 array of mbcdoe.designconstraint
```

Use `CreateConstraint` to form constraints.

See Also `CreateConstraint`; `AddConstraint`

CopyData

Purpose Create data object from copy of existing object

Syntax
`newD = CopyData(P, D)`
`newD = CopyData(P, Index)`

Description This is a method of `mbcmodel.project`.
Use this to duplicate data, for example if you want to make changes for further modeling but want to retain the existing data set. You can refer to the data object either by name or index.
P is the project object.
D is the data object you want to copy.
Index is the index of the data object you want to copy.

Examples `D2 = CopyData(P1, D1);`

See Also `Data`, `CreateData`, `RemoveData`

Purpose	Correlation matrix for linear model parameters
Syntax	<code>STATS = Correlation(LINEARMODEL)</code>
Description	<p>This is a method of <code>mbcmodel.linearmodel</code>.</p> <p><code>STATS = Correlation(LINEARMODEL)</code> calculates the correlation matrix for the linear model parameters.</p>
Examples	<pre>Stats = Correlation(knot_model)</pre>
See Also	<code>ParameterStatistics</code>

Covariance

Purpose Covariance matrix for linear model parameters

Syntax `STATS = Covariance(LINEARMODEL)`

Description This is a method of `mbcmodel.linearmodel`.

`STATS = Covariance(LINEARMODEL)` calculates the covariance matrix for the linear model parameters.

Examples `Stats = Covariance(knot_model)`

See Also `ParameterStatistics`

Purpose Create algorithm

Syntax `newalg = alg.CreateAlgorithm(AlgorithmName)`

Description This is a method of `mbcmodel.fitalgorithm`.

`newalg = alg.CreateAlgorithm(AlgorithmName)` creates an algorithm of the specified type. `alg` is a `mbcmodel.fitalgorithm` object. `AlgorithmName` must be in the list of alternative algorithms given by `alg.getAlternativeNames`.

To change the fit algorithm for a model:

```
>> mdl = mbcmodel.CreateModel('Polynomial', 2);
>> minpress = mdl.FitAlgorithm.CreateAlgorithm('Minimize PRESS');
>> mdl.FitAlgorithm = minpress;
```

The `AlgorithmName` determines what properties you can set. You can display the properties for an algorithm as follows:

```
>> mdl.FitAlgorithm.properties
```

```
Algorithm: Minimize PRESS
Alternatives: 'Least Squares','Forward Selection','Backward
Selection','Prune'
MaxIter: Maximum Iterations (int: [1,1000])
```

As a simpler alternative to using `CreateAlgorithm`, you can assign the algorithm name directly to the algorithm. For example:

```
B.FitAlgorithm.BoundaryPointOptions = 'Boundary Only';
```

Or:

```
m.FitAlgorithm = `Minimize PRESS`;
```

Case and spaces are ignored. See `FitAlgorithm`.

The following sections list the properties available for each algorithm type.

Linear Model Algorithm Properties

Linear Models Algorithms

Used by polynomials, hybrid splines and as the StepAlgorithm for RBF algorithms.

Algorithm: Least Squares

Alternatives: 'Minimize PRESS', 'Forward Selection', 'Backward Selection', 'Prune'

Algorithm: Minimize PRESS

Alternatives: 'Least Squares', 'Forward Selection', 'Backward Selection', 'Prune'

- MaxIter: Maximum Iterations (int: [1,1000])

Algorithm: Forward Selection

Alternatives: 'Least Squares', 'Minimize PRESS', 'Backward Selection', 'Prune'

- ConfidenceLevel: Confidence level (%) (numeric: [70,100])
- MaxIter: Maximum Iterations (int: [1,1000])
- RemoveAll: Remove all terms first (Boolean)

Algorithm: Backward Selection

Alternatives: 'Least Squares', 'Minimize PRESS', 'Forward Selection', 'Prune'

- ConfidenceLevel: Alpha (%) (numeric: [70,100])
- MaxIter: Maximum Iterations (int: [1,1000])
- IncludeAll: Include all terms first (Boolean)

Algorithm: Prune

Alternatives: 'Least Squares', 'Minimize PRESS', 'Forward Selection', 'Backward Selection'

- Criteria (PRESS | RMSE | GCV | Weighted PRESS | $-2\log L$ | AIC | AICc | BIC | R^2 | R^2_{adj} | PRESS R^2 | DW | C_p | $\text{cond}(J)$)
- MinTerms: Minimum number of terms (int: [0,Inf])
- Tolerance (numeric: [0,1000])
- IncludeAll: Include all terms before prune (Boolean)
- Display (Boolean)

RBF Algorithm Properties

For information about any of the RBF and Hybrid RBF algorithm properties, see “Radial Basis Functions”, and especially “Fitting Routines” in the Model Browser User’s Guide.

Algorithm: RBF Fit

- WidthAlgorithm: Width selection algorithm (mbcmodel.fitalgorithm)
- StepAlgorithm: Stepwise (mbcmodel.fitalgorithm)

Width Selection Algorithms

Alternatives: 'WidPerDim', 'Tree Regression'

Algorithm: TrialWidths

- NestedFitAlgorithm: Lambda selection algorithm (mbcmodel.fitalgorithm)
- Trials: Number of trial widths in each zoom (int: [2,100])
- Zooms: Number of zooms (int: [1,100])
- MinWidth: Initial lower bound on width (numeric: [2.22045e-016,1000])
- MaxWidth: Initial upper bound on width (numeric: [2.22045e-016,100])
- PlotFlag: Display plots (Boolean)

- PlotProgress: Display fit progress (Boolean)

Algorithm: WidPerDim

Alternatives: 'TrialWidths', 'Tree Regression'

- NestedFitAlgorithm: Lambda selection algorithm (mbcmodel.fitalgorithm)
- DisplayFlag: Display (Boolean)
- MaxFunEvals: Maximum number of test widths (int: [1,1e+006])
- PlotProgress: Display fit progress (Boolean)

Algorithm: Tree Regression

Alternatives: 'TrialWidths', 'WidPerDim'

- MaxNumRectangles: Maximum number of panels (int: [1,Inf])
- MinPerRectangle: Minimum data points per panel (int: [2,Inf])
- RectangleSize: Shrink panel to data (Boolean)
- AlphaSelectAlg: Alpha selection algorithm (mbcmodel.fitalgorithm)

Lambda Selection Algorithms

Algorithm: IterateRidge

Alternatives: 'IterateRols', 'StepItRols'

- CenterSelectionAlg: Center selection algorithm (mbcmodel.fitalgorithm)
- MaxNumIter: Maximum number of updates (int: [1,100])
- Tolerance: Minimum change in $\log_{10}(\text{GCV})$ (numeric: [2.22045e-016,1])
- NumberOfLambdaValues: Number of initial test values for lambda (int: [0,100])

- CheapMode: Do not reselect centers for new width (Boolean)
- PlotFlag: Display (Boolean)

Algorithm: IterateRols

Alternatives: 'IterateRidge', 'StepItRols'

- CenterSelectionAlg: Center selection algorithm (mbcmodel.fitalgorithm)
- MaxNumIter: Maximum number of iterations (int: [1,100])
- Tolerance: Minimum change in $\log_{10}(\text{GCV})$ (numeric: [2.22045e-016,1])
- NumberOfLambdaValues: Number of initial test values for lambda (int: [0,100])
- CheapMode: Do not reselect centers for new width (Boolean)
- PlotFlag: Display (Boolean)

Algorithm: StepItRols

Alternatives: 'IterateRidge', 'IterateRols'

- MaxCenters: Maximum number of centers (evalstr)
- PercentCandidates: Percentage of data to be candidate centers (evalstr)
- StartLambdaUpdate: Number of centers to add before updating (int: [1,Inf])
- Tolerance: Minimum change in $\log_{10}(\text{GCV})$ (numeric: [2.22045e-016,1])
- MaxRep: Maximum number of times $\log_{10}(\text{GCV})$ change is minimal (int: [1,100])

Center Selection Algorithms

Algorithm: Rols

CreateAlgorithm

Alternatives: 'RedErr', 'WiggleCenters', 'CenterExchange'

- MaxCenters: Maximum number of centers (evalstr)
- PercentCandidates: Percentage of data to be candidate centers (evalstr)
- Tolerance: Regularized error tolerance (numeric: [2.22045e-016,1])

Algorithm: RedErr

Alternatives: 'Rols', 'WiggleCenters', 'CenterExchange'

- MaxCenters: Number of centers (evalstr)

Algorithm: WiggleCenters

Alternatives: 'Rols', 'RedErr', 'CenterExchange'

- MaxCenters: Number of centers (evalstr)
- PercentCandidates: Percentage of data to be candidate centers (evalstr)

Algorithm: CenterExchange

Alternatives: 'Rols', 'RedErr', 'WiggleCenters'

- MaxCenters: Number of centers (evalstr)
- NumLoops: Number of augment/reduce cycles (int: [1,Inf])
- NumAugment: Number of centers to augment by (int: [1,Inf])

Tree Regression Algorithms

Algorithm: Trial Alpha

Alternatives: 'Specify Alpha'

- AlphaLowerBound: Initial lower bound on alpha (numeric: [2.22045e-016,Inf])

- AlphaUpperBound: Initial upper bound on alpha (numeric: [2.22045e-016,Inf])
- Zooms: Number of zooms (int: [1,Inf])
- Trials: Trial alphas per zoom (int: [2,Inf])
- Spacing: Spacing (Linear|Logarithmic)
- CenterSelectAlg: Center selection algorithm (mbcmodel.fitalgorithm)

Algorithm: Specify Alpha

Alternatives: 'Trial Alpha'

- Alpha: Width scale parameter, alpha (numeric: [2.22045e-016,Inf])
- NestedFitAlgorithm: Center selection algorithm (mbcmodel.fitalgorithm)

Algorithm: Tree-based Center Selection

Alternatives: 'Generic Center Selection'

- ModelSelectionCriteria: Model selection criteria (BIC|GCV)
- MaxNumberCenters: Maximum number of centers (evalstr)

Algorithm: Generic Center Selection

Alternatives: 'Tree-based Center Selection'

- CenterSelectAlg: Center selection algorithm (mbcmodel.fitalgorithm)

Hybrid RBF Algorithms

Algorithm: RBF Fit

- WidthAlgorithm: Width selection algorithm (mbcmodel.fitalgorithm)
- StepAlgorithm: Stepwise (mbcmodel.fitalgorithm)

Width Selection Algorithms

Algorithm: TrialWidths

- **NestedFitAlgorithm:** Lambda and term selection algorithm (mbcmodel.fitalgorithm)
- **Trials:** Number of trial widths in each zoom (int: [2,100])
- **Zooms:** Number of zooms (int: [1,100])
- **MinWidth:** Initial lower bound on width (numeric: [2.22045e-016,1000])
- **MaxWidth:** Initial upper bound on width (numeric: [2.22045e-016,100])
- **PlotFlag:** Display plots (Boolean)
- **PlotProgress:** Display fit progress (Boolean)

Nested Fit Algorithms

Algorithm: Twostep

Alternatives: 'Interlace'

- **MaxCenters:** Maximum number of centers (evalstr)
- **PercentCandidates:** Percentage of data to be candidate centers (evalstr)
- **StartLambdaUpdate:** Number of terms to add before updating (int: [1,Inf])
- **Tolerance:** Minimum change in $\log_{10}(\text{GCV})$ (numeric: [2.22045e-016,1])
- **MaxRep:** Maximum number of times $\log_{10}(\text{GCV})$ change is minimal (int: [1,100])
- **PlotFlag:** Display (Boolean)

Algorithm: Interlace

Alternatives: 'Twostep'

- MaxParameters: Maximum number of terms (evalstr)
- MaxCenters: Maximum number of centers (evalstr)
- PercentCandidates: Percentage of data to be candidate centers (evalstr)
- StartLambdaUpdate: Number of terms to add before updating (int: [1,Inf])
- Tolerance: Minimum change in $\log_{10}(\text{GCV})$ (numeric: [2.22045e-016,1])
- MaxRep: Maximum number of times $\log_{10}(\text{GCV})$ change is minimal (int: [1,100])

Boundary Model Fit Algorithm Parameters

The following sections list the available fit algorithm parameters for command-line boundary models. The boundary model fit algorithm parameters have the same fit options as the Boundary Editor GUI. For instructions on using these fit options, see “Boundary Model Fit Options” in the Model Browser documentation.

Ellipsoid

Algorithm: Constraint Fitting

BoundaryPointOptions: Boundary Points (mbcmodel.fitalgorithm)

The boundary points algorithm uses optimization to find the best ellipse. These options are from `fmincon`.

Algorithm: Boundary Points

- Display: Display (none | iter | final)
- MaxFunEvals: Maximum function evaluations (int: [1,Inf])
- MaxIter: Maximum iterations (int: [1,Inf])
- TolFun: Function tolerance (numeric: [1e-012,Inf])

CreateAlgorithm

- TolX: Variable tolerance (numeric: [1e-012,Inf])
- TolCon: Constraint tolerance (numeric: [1e-012,Inf])

Star-shaped

Algorithm: Constraint Fitting

SpecialPointOptions: Special Points (mbcmodel.fitalgorithm)

BoundaryPointOptions: Boundary Points (mbcmodel.fitalgorithm)

ConstraintFitOptions: Constraint Fit (mbcmodel.fitalgorithm)

Star-shaped—Special Points

Algorithm: Star-shaped Points

CenterAlg: Center (mbcmodel.fitalgorithm)

Algorithm alternatives: 'Mean', 'Median', 'Mid Range', 'Min Ellipse', 'User Defined'

For User Defined only: CenterPoint: User-defined center [X1,X2]
(vector: NumberOfActiveInputs)

Star-shaped—Boundary Points

You can choose to find boundary points (use `Interior`) or to assume that all points are on the boundary (use `Boundary Only`). The interior algorithm then has manual and auto options for the dilation radius and ray casting algorithms.

- Algorithm: Boundary Only (no further options)
- Algorithm: Interior. Further options:
 - DilationRadius (mbcmodel.fitalgorithm)
 - Algorithm: Auto
 - Algorithm: Manual
 - radius: Radius (numeric: [0,Inf])
 - RayCasting (mbcmodel.fitalgorithm)
 - Algorithm: From data

- Algorithm: Manual
 - nrays: Number of Rays (int: [1,Inf])

Star-shaped—Constraint Fit

Algorithm: Star-shaped RBF Fit

Further options:

- Transform (None | Log | McCallum)
- KernelOpts: RBF Kernel (mbcmodel.fitalgorithm)

Kernel algorithms can be: wendland, multiquadric, recmultiquadric, gaussian, thinplate, logisticrbf. linearrbf, cubicrbf.

You can specify widths and continuity as sub-properties of particular RBF kernels.

- You can set widths for wendland, multiquadric, recmultiquadric, gaussian, logisticrbf. Width: RBF Width (numeric: [1.49012e-008,Inf])

You can set Continuity for wendland. Cont: RBF Continuity (0 | 2 | 4 | 6)

RbfOpts: RBF Algorithm (mbcmodel.fitalgorithm)

Algorithm: Interpolation. The following are additional settings for interpolating RBF.

- CoincidentStrategy: Coincident Node Strategy (Maximum | Minimum | Mean)
- Algorithm: Algorithm (Direct | GMRES | BICG | CGS | QMR)
- Tolerance: Tolerance (numeric: [0,Inf])
- MaxIt: Maximum number of iterations (int: [1,Inf])

Examples

First get a fitalgorithm object, F, from a model:

```
M = mbcmodel.CreateModel('Polynomial', 4);  
F = M.FitAlgorithm
```

CreateAlgorithm

```
F =  
Algorithm: Least Squares  
Alternatives: 'Minimize PRESS', 'Forward Selection', 'Backward  
Selection', 'Prune'  
1x1 struct array with no fields.
```

Then, to create a new algorithm type:

```
Alg = CreateAlgorithm(F, 'Minimize PRESS')  
  
Alg =  
Algorithm: Minimize PRESS  
Alternatives: 'Least Squares', 'Forward Selection', 'Backward  
Selection', 'Prune'  
MaxIter: 50
```

The `AlgorithmName` determines what properties you can set. You can display the properties for an algorithm as follows:

```
>> mdl.FitAlgorithm.properties  
  
Algorithm: Minimize PRESS  
Alternatives: 'Least Squares', 'Forward Selection', 'Backward  
Selection', 'Prune'  
MaxIter: Maximum Iterations (int: [1,1000])
```

As a simpler alternative to using `CreateAlgorithm`, you can assign the algorithm name directly to the algorithm. For example:

```
B.FitAlgorithm.BoundaryPointOptions = 'Boundary Only';
```

Or:

```
m.FitAlgorithm = `Minimize PRESS';
```

Case and spaces are ignored.

See Also `getAlternativeNames`, `SetupDialog`, `FitAlgorithm`

CreateAlternativeModels

Purpose Create alternative models from model template

Syntax

```
R = CreateAlternativeModels(R, modeltemplate, criteria)
R = CreateAlternativeModels(R, modellist, criteria
R = CreateAlternativeModels(R,
LocalModels,LocalCriteria,GlobalModels,GlobalCriteria)
```

Description This is a method of all model objects: `mbcmodel.hierarchicalresponse`, `mbcmodel.localresponse` and `mbcmodel.response`.

This is the same as the Build Models function in the Model Browser GUI. A selection of child node models are built. The results depend on where you call this method from. Note that the hierarchical model is automatically constructed when `CreateAlternativeModels` is called for a local model.

- This option makes alternative response feature models for each response feature.

```
R = CreateAlternativeModels(R, models, criteria)
```

- `Models` is the list of models. You can use a model template file (.mbm) created in the Model Browser, or a cell array of `mbcmodel.model` objects.
- `Criteria` is the selection criteria for best model (from the statistics available from `AlternativeModelStatistics`).
- This option makes alternative local models as well as alternative response feature models.

```
R = CreateAlternativeModels(R,
LocalModels,LocalCriteria,GlobalModels,GlobalCriteria)
```

- `LocalModels` is the list of local models - you must pass in an empty matrix).
- `LocalCriteria` is 'Two-Stage RMSE'.

- `GlobalModels` is the list of global models (from the model template).
- `GlobalCriteria` is the selection criteria for best model.

You construct a model template file (such as 'mymodels.mbm') in the Model Browser. From any response (global or one-stage model) with alternative responses (child nodes), select **Model > Make Template**. You can save the child node model types of your currently selected modeling node as a model template. Alternatively from any response click **Build Models** in the toolbar and create a series of alternative response models in the dialog.

Examples

```
mymodels = 'mymodels.mbm';  
m1ist = {};  
load('-mat', mymodels);  
criteria = 'PRESS RMSE';  
CreateAlternativeModels(R, [], 'Two-Stage RMSE', m1ist,  
criteria);
```

Note that the model template contains the variable `m1ist`.

```
CreateAlternativeModels( RESPONSE, 'alternative_models.mbm', 'Weighted PRESS' )
```

creates alternative response feature models based upon the model template file `alternative_models.mbt`, and chooses the best model based upon each model's Weighted PRESS statistic.

See Also

`AlternativeModelStatistics`

CreateBoundary

Purpose

Create boundary model

Syntax

```
B = mbcboundary.CreateBoundary(Type,Inputs)
B = mbcboundary.CreateBoundary(Type,Inputs,Property,Value,
    ...)
B = CreateBoundary(Tree)
B = CreateBoundary(Tree,Type)
B = CreateBoundary(Tree,Type,Property,Value,...)
newboundary = CreateBoundary(B,Type)
newboundary = CreateBoundary(B,Type,Property,Value,...)
```

Description

`B = mbcboundary.CreateBoundary(Type,Inputs)` This syntax is a static package function that creates an `mbcboundary.Model` object (**B**) of the specified `Type`, where `Inputs` is an `mbcmodel.modelinput` object. Use this function to create a new boundary model object independent of any project. See `Fit` for an alternative.

`B = mbcboundary.CreateBoundary(Type,Inputs,Property,Value,...)` creates a boundary with the specified properties. Properties depend on the boundary model type.

You can use `getAlternativeTypes` to get a list of valid model types, or see `Type` (for boundary models). Spaces and case in `Type` are ignored.

`CreateBoundary` is also a method of `mbcboundary.Tree`. Use the method to create a new boundary model within a project.

`B = CreateBoundary(Tree)` creates a new boundary model, **B**, from the `mbcboundary.Tree` object, `Tree`. The method uses the test plan inputs to define the boundary model inputs. You must call `Addto` to add the new model to the tree.

`B = CreateBoundary(Tree,Type)` creates a new boundary model, **B** of the specified `Type`.

`B = CreateBoundary(Tree,Type,Property,Value,...)` creates a boundary with the specified properties.

CreateBoundary is also a method of `mbcboundary.AbstractBoundary` and all its subclasses. Use the method to create a new boundary model from an existing boundary model.

`newboundary = CreateBoundary(B,Type)` creates a new boundary model, `newboundary`, with the same inputs as the current boundary model `B`. You can get a list of valid types with `getAlternativeTypes`.

`newboundary = CreateBoundary(B,Type,Property,Value,...)` creates a new boundary model with specified properties.

Examples

You can create a boundary model outside of a project in either of the following ways:

```
B = mbcboundary.Fit(Data,Type);
```

```
B = mbcboundary.CreateBoundary(Type,Inputs)
```

To create a new boundary model within a project:

```
Tree = testplan.Boundary  
B = CreateBoundary(Tree)
```

This creates a new boundary model, `B`, from the `mbcboundary.Tree` object, `Tree`. The method uses the test plan inputs to define the boundary model inputs.

To create a star-shaped global boundary model for a testplan:

```
B = CreateBoundary(testplan.Boundary.Global,'Star-shaped');
```

Call `Add` to add the boundary model to the tree. .

To add the boundary model to the test plan, and fit the boundary model:

```
B = Add(testplan.Boundary.Global,B);
```

The best boundary model for the tree includes this boundary model.

To create boundary models for a point-by-point test plan:

CreateBoundary

```
B = TP.Boundary.Local.CreateBoundary('Point-by-point');
% Use convex hull type for the local boundaries
B.LocalModel = CreateBoundary(B.LocalModel,'Convex hull');
% Add point-by-point boundary model to project.
TP.Boundary.Local.Add(B);
```

See Also

“Boundary Models” on page 1-21, Type (for boundary models), Fit, getAlternativeTypes, mbcboundary.Model, mbcboundary.Tree

Purpose Create candidate set for optimal designs

Syntax D = CreateCandidateSet(D)
D = CreateCandidateSet(D,prop1,value1,...)

Description CreateCandidateSet is a method of mbcdoe.design. Candidate sets are very similar to design generators. They are not used directly in specifying a design but are used to specify the set of all possible points to be considered as part of an optimal design. You obtain the candidate set from an optimal design generator or by using mbcdoe.design.CreateCandidateSet.

D = CreateCandidateSet(D) creates a candidate set (mbcdoe.candidateset object) for the design.

D = CreateCandidateSet(D,prop1,value1,...) creates a candidate set with the specified properties for the design. To see the properties you can set, see the table of candidate set properties, Candidate Set Properties (for Optimal Designs) on page 2-194.

Examples CandidateSet = augmentedDesign.CreateCandidateSet('Type',...
'Grid');
CandidateSet.NumberOfLevels = [21 21 21 21];

See Also Properties (for candidate sets); Augment

CreateConstraint

Purpose

Create design constraint

Syntax

```
c = CreateConstraint(D)
c = CreateConstraint(D,prop1,val1,...)
```

Description

CreateConstraint is a method of `mbcdoe.design`.

Designs have a Constraints property, initially this is empty:

```
constraints = design.Constraints

constraints =
0x0 array of mbcdoe.designconstraint
```

Use CreateConstraint to form constraints.

`c = CreateConstraint(D)` creates a default constraint for the design.

`c = CreateConstraint(D,prop1,val1,...)` creates a constraint with the specified properties. See Constraint Properties on page 2-197.

By default a 1D table constraint is created for designs with two or more inputs.

For a design with one input a linear constraint is created by default.

You can specify the constraint type during creation by using the Type property, e.g.,

```
c = D.CreateConstraint('Type','Linear')
```

Other available properties depend on the design type. See the table Constraint Properties on page 2-197.

This method does not add the constraint to the design. You must explicitly add the constraint to the design using the Constraints property of the design e.g.,

```
D= AddConstraint(D,c)
```

or


```
D.Constraints(end+1) = c;
```

You must call `AddConstraint` to apply the constraint and remove design points outside the constraint.

Examples

To create a Linear constraint, add it to a design, and regenerate the design points:

```
cLinear = design.CreateConstraint( 'Type', 'Linear' );
cLinear.A = [-2.5e-4, 1];
cLinear.b = 0.25;
cLinear
design.Constraints = cLinear;
design = Generate(design);
```

To create and apply a 1D Table constraint:

```
cTable1d = design.CreateConstraint( 'Type', '1D Table' );
cTable1d.Table = [0.9 0.5];
cTable1d.Breakpoints = [500 6000];
cTable1d
design.Constraints = cTable1d;
design = Generate(design);
```

To combine constraints, use an array of the constraints you want to apply:

```
design.Constraints = [cLinear, cTable1d];
constraints = design.Constraints
design = Generate(design);
```

```
constraints =
1x2 array of mbcdoe.designconstraint
Linear design constraint: -0.00025*N + 1*L <= 0.25
1D Table design constraint: L(N) <= Lmax
```

CreateConstraint

To load boundary constraints from another project file and add to design:

```
otherProject = mbcmodel.LoadProject( [matlabroot, '\toolbox\...  
mbc\mbctraining\Gasoline_project.mat']);  
boundaryConstraints = otherProject.Testplans(1).BoundaryModel...  
( 'global');  
Design.Constraints = boundaryConstraints;
```

See Also

Properties (for design constraints); AddConstraint

Purpose

Create data object

Syntax

```
D = CreateData(P, filename, filetype)
D = mbcmodel.CreateData(filename, filetype)
```

Description

The first syntax is a method of `mbcmodel.project`. Use this to create a new data object in an existing project. `P` is the project object.

`filename` and `filetype` are optional arguments that are used to load data from a file into the new data object at creation time.

`filename` is a string specifying the full path to the file.

`filetype` is a string specifying the file type. See `DataFileTypes` for the specification of allowed file types (and `mbccheckindataloadingfcn` to specify your own data loading function). If `filetype` is not provided, then MBC will attempt to infer the file type from the file extension, i.e. if the file extension is `.xls` then MBC will try the Excel File Loader.

If `filename` is not provided then no data will be loaded into the new data object. Data can be loaded subsequently using `ImportFromFile`, provided that editing of the data object has been enabled via a call to `BeginEdit`. Call `CommitEdit` to apply edits.

If you create the data object specifying a `filename`, then the `Name` property is set to the filename. However, if you use `ImportFromFile` after creation to load data from a file, the name of the data object does not change.

The second syntax is a function. Use this to create a new data object independent of any project. You can use `AttachData` to use the data object in another test plan, e.g.,

```
d = mbcmodel.CreateData( filename );
testplan.AttachData( d );
```

Examples

```
data = CreateData(P, 'D:\MBCWork\data1.xls');
D = mbcmodel.CreateData;
D = mbcmodel.CreateData('D:\MBCWork\data.xls');
```

CreateData

Where P is an `mbcmodel.project` object.

See Also

`DataFileTypes`, `BeginEdit`, `CopyData`, `RemoveData`, `Data`,
`ImportFromFile`, `CommitEdit`, `AttachData`

Purpose Create design object for test plan or model

Syntax

```
D = CreateDesign(Testplan)
D = CreateDesign(Testplan,Level)
D = CreateDesign(Testplan,Level,prop1,value1,...)
D = CreateDesign(Model)
D = CreateDesign(Model,prop1,value1,...)
D = CreateDesign(Inputs)
D = CreateDesign(Inputs,prop1,value1,...)
D = CreateDesign(Design)
```

Description CreateDesign is a method of `mbcmodel.testplan`, `mbcmodel.model`, and `mbcmodel.modelinput`. Property value pairs can be specified at creation time. The property value pairs are properties of `mbcdoe.design`.

Properties of `mbcdoe.design`

mbcdoe.design Property	Description
Constraints	Constraints in design.
Generator	Design generation options.
Inputs	Inputs for design.
Model	Model for design.
Points	Matrix of design points.
PointTypes	Fixed and free point status.
Style	Style of design type.
NumberOfInputs	Read-only — Number of model inputs.

Properties of `mbcdoe.design` (Continued)

<code>mbcdoe.design</code> Property	Description
<code>NumberOfPoints</code>	Read-only — Number of design points.
<code>Type</code>	Design type. The design property <code>Type</code> can <i>only</i> be specified with <code>CreateDesign</code> and is subsequently read-only for design objects.

`D = CreateDesign(Testplan)` creates a design for the test plan, where `Testplan` is an `mbcmodel.testplan` object.

`D = CreateDesign(Testplan,Level)` creates a design for the specified level of the test plan. By default the level is the outer level (i.e., Level 1 for one-stage, Level 2 (global) for two-stage).

If you do not specify any properties, the method creates a default design type. The default design types are a Sobol Sequence for two or more inputs, and a Full Factorial for a single input.

`D = CreateDesign(Testplan,Level,prop1,value1,...)` creates a design with the specified properties.

`D = CreateDesign(Model)` creates a design based on the inputs of the `mbcmodel.model` object, `Model`.

`D = CreateDesign(Model,prop1,value1,...)` creates a design with the specified properties based on the inputs of the model.

`D = CreateDesign(Inputs)` creates a design based on the inputs of the `mbcmodel.modelinput` object, `Inputs`.

`D = CreateDesign(Inputs,prop1,value1,...)` creates a design with the specified properties based on the inputs.

`D = CreateDesign(Design)` creates a copy of an existing design.

Examples

To create a space-filling design for a test plan TP:

```
sfDesign = CreateDesign(TP, ...  
    'Type', 'Latin Hypercube Sampling',...  
    'Name', 'Space Filling');
```

Create an optimal design based on the inputs of a model:

```
optimalDesign = CreateDesign( model,...  
    'Type', 'V-optimal',...  
    'Name', 'Optimal Design' );
```

Create a classical full factorial design based on the inputs defined by a `mbcmodel.modelinput` object:

```
design = CreateDesign( inputs, 'Type', 'Full Factorial' );
```

Create a new design based on an existing design (`ActualDesign`) in order to augment it:

```
augmentedDesign = ActualDesign.CreateDesign('Name',...  
    'Augmented Design');
```

Create a local level design for the two-stage test plan TP:

```
localDesign = TP.CreateDesign(1, 'Type',...  
    'Latin Hypercube Sampling');
```

Create a global level design for the two-stage test plan TP:

```
globalDesign = TP.CreateDesign(2, 'Type',...  
    'Latin Hypercube Sampling');
```

See Also

Generate; modelinput

CreateModel

Purpose Create new model

Syntax `M = mbcmodel.CreateModel(Type, INPUTS)`
`NewModel = CreateModel(model,Type)`

Description `M = mbcmodel.CreateModel(Type, INPUTS)` This syntax is a function that creates an `mbcmodel.model` object of the specified `Type`.

`mbcmodel.linearmodel` and `mbcmodel.localmodel` are subclasses of `mbcmodel.model`. Model types that begin with the word “local” specify an `mbcmodel.localmodel` object.

`NewModel = CreateModel(model,Type)` This syntax is a function that creates a new model (of the specified `Type`) with the same inputs as an existing `model`. `model` is an `mbcmodel.model` object. You can use `getAlternativeTypes` to generate a list of valid model types. See `Type (for models)` for a list of valid model types. Spaces and case in `Type` are ignored.

`INPUTS` can be a `mbcmodel.modelinput` object, or any valid input to the `mbcmodel.modelinput` constructor. See `modelinput`.

Examples

To create a hybrid spline with four input factors, enter:

```
M = mbcmodel.CreateModel('Hybrid Spline', 4)
```

To create an RBF with four input factors, enter:

```
Inputs = mbcmodel.modelinput('Symbol',{ 'N', 'L', 'EXH', 'INT' }, ...  
    'Name', { 'ENGSPEED', 'LOAD', 'EXHCAM', 'INTCAM' }, ...  
    'Range', { [800 5000], [0.1 1], [-5 50], [-5 50] });  
  
RBFModel = mbcmodel.CreateModel( 'RBF', Inputs);
```

To create a polynomial with the same input factors as the previously created RBF, enter:

```
PolyModel = CreateModel(RBFModel, 'Polynomial')
```


See Also

`getAlternativeTypes`, `modelinput`, `CreateProject`, `CreateData`, `Type`
(for models)

CreateProject

Purpose Create project object

Syntax `P = mbcmodel.CreateProject`

Description This is a function that creates an `mbcmodel.project` object.
P is the project object.
P = `mbcmodel.CreateProject` creates an `mbcmodel.project` called `Untitled`. P = `mbcmodel.CreateProject(NAME)` creates an `mbcmodel.project` called `NAME`.

Examples `P = mbcmodel.CreateProject;`

Create a project called `MBT_Project`:

```
P = mbcmodel.CreateProject( 'MBT_Project' );
```

Purpose

Create new response model for test plan

Syntax

```
R = CreateResponse(T, Varname)
R = CreateResponse(T, Varname, Model)
R = CreateResponse(T, Varname, LocalModel, GlobalModel)
R = CreateResponse(T, Varname, LocalModel, GlobalModel,
    DatumType)
```

Description

This is a method of `mbcmodel.testplan`.

`R = CreateResponse(T, Varname)` creates a model of the variable `Varname` using the test plan's one- or two-stage default models. `T` is the test plan object, `R` is the new response object.

`R = CreateResponse(T, Varname, Model)` creates a one-stage model of `Varname`, where `T` must be a one-stage test plan object.

`R = CreateResponse(T, Varname, LocalModel, GlobalModel)` or `R = CreateResponse(T, Varname, LocalModel, GlobalModel, DatumType)` creates a two-stage model of `Varname`. `T` must be a two-stage test plan object. `DatumType` can only be specified if the local model type permits a datum model. Only the model types "Polynomial Spline" and "Polynomial with Datum" permit datum models.

`Varname` is the variable name for the new response.

`Model` is the One-stage model object (if you leave this field empty, the default is used).

`LocalModel` is the Local Model object (if you leave this field empty, the default is used).

`GlobalModel` is the Response Feature model object (if you leave this field empty, the default is used).

`DatumType` can be 'None' 'Maximum' 'Minimum' or 'Linked'.

Examples

To create a response using the default models, enter:

```
R = CreateResponse(T, 'torque');
TQ_response = CreateResponse(testplan, 'TQ');
```

CreateResponse

To create a response and specify the local and global model types, enter:

```
mdl1 = T.DefaultModels
LocalModel = CreateModel(mdl{1}, 'Local Polynomial Spline');
GlobalModel = CreateModel(mdl{2}, 'RBF');
R = CreateResponse(T, 'TQ', LocalModel, GlobalModel, 'Maximum')
```

See Also

Responses

Purpose

Create new response feature for local model

Syntax

```
RF = CreateResponseFeature(RF,RFTYPE)
RF = CreateResponseFeature(RF,RFTYPE,EvaluationPoint)
```

Description

This is a method of `mbcmodel.localresponse`.

```
RF = CreateResponseFeature(RF,RFTYPE)
```

```
RF = CreateResponseFeature(RF,RFTYPE,EvaluationPoint)
```

`RFTYPE` is a description string belonging to the set of alternative response features for the current local model.

`EvaluationPoint` is a row vector with an element for each model input and is used for response features that require an input value to evaluate the response feature (e.g., function evaluation, derivatives). It is an error to specify an evaluation point for a response feature type that does not require an evaluation point.

You should use this method to add response features without refitting all local and global models.

Examples

```
RF = CreateResponseFeature(RF,'Beta_1')
```

See Also

`ResponseFeatures(Local Model)`

CreateTestplan

Purpose

Create new test plan

Syntax

```
T = CreateTestplan(P, TestPlanTemplate)
T = CreateTestplan(P, TestPlanTemplate, newtestplanname)
T = CreateTestplan(P, InputsPerLevel)
T = CreateTestplan(P, InputsPerLevel, newtestplanname)
T = CreateTestplan(P, Inputs)
T = CreateTestplan(P, Inputs, newtestplanname)
```

Description

This is a method of the `mbcmodel.project` object.

You can use this method with a test plan template or input information.

You set templates up in the Model Browser GUI. This setup includes number of stages, inputs, base models, and designs. If the test plan is used as part of a previous project it is also possible to save response models in the test plan. It is not possible to change the number of stages after creation of the test plan.

After you create a new test plan, you can add data to model, and new responses. Note that the model input signal names specified in the template *must* match the signal names in the data.

Use `CreateTestplan` in the following ways:

```
T = CreateTestplan(P, TestPlanTemplate)
```

```
T = CreateTestplan(P, TestPlanTemplate, newtestplanname)
```

`P` is the project object.

`TestPlanTemplate` is the full name and path to the test plan template file created in the Model Browser.

`newtestplanname` is the optional name for the new test plan object.

```
T = CreateTestplan(P, InputsPerLevel)
```

```
T = CreateTestplan(P, InputsPerLevel, newtestplanname)
```

`InputsPerLevel` is a row vector with number of inputs for each stage.

```
T = CreateTestplan(P, Inputs)
```

```
T = CreateTestplan(P, Inputs, newtestplanname)
```

`Inputs` is a cell array with input information for each level. The input information can be specified as a cell array of `mbcmodel.modelinput` objects (one for each level), or as a cell array of cell arrays (one for each level).

Examples

To create a test plan using a test plan template, enter:

```
T = CreateTestplan(P1, 'd:\MBCwork\TQtemplate1', 'newtestplan')
```

```
testplan = CreateTestplan(P, 'example_testplan')
```

To create a test plan using inputs per level, enter:

```
T = P.CreateTestplan([1,2])
```

To specify the input information in a cell array of `mbcmodel.modelinput` objects, enter:

```
% Define Inputs for test plan
LocalInputs = mbcmodel.modelinput('Symbol','S',...
    'Name','SPARK',...
    'Range',[0 50]);
GlobalInputs = mbcmodel.modelinput('Symbol',{'N','L','ICP',...
    'ECP'},'Name',{'SPEED','LOAD','INT_ADV','EXH_RET'},...
    'Range',{[500 6000],[0.0679 0.9502],[-5 50],[-5 50]});
% create test plan
testplan = CreateTestplan( project, {LocalInputs,...
    GlobalInputs} );
```

Or

```
T = P.CreateTestplan({LocalInputs,GlobalInputs})
```

To specify the input information in a cell array, enter:

```
localInputs = {'S',0,50,'','SPARK'};
globalInputs = {'N', 800, 5000, '', 'ENGSPEED'
```

CreateTestplan

```
'L', 0.1, 1, '', 'LOAD'  
'EXH', -5, 50, '', 'EXHCAM'  
'INT', -5, 50, '', 'INTCAM'];
```

```
T = CreateTestplan(P,{localInputs,globalInputs});
```

See Also

AttachData, CreateResponse, Responses, Data, Levels,
InputSignalNames, InputsPerLevel, Inputs, modelinput

Purpose

Array of data objects in project, boundary tree, or test plan

Syntax

```
allD = project.Data  
allD = testplan.Data
```

Description

This is a property of `mbcmodel.project`, `mbcmodel.testplan`, and `mbcboundary.Tree`.

For projects and test plans, it returns an array of `mbcmodel.data` objects. A project can have many data objects, but a test plan can only have one or none.

`Tree.B.Data` returns a double matrix for one-stage, response, and global boundary models. For local boundary models, `Data` is a cell array of double matrices with one cell per test. For boundary models, `Data` is read-only.

Examples

```
allD = P.Data;
```

For a project object `P`, this example returns an `nx1` array of all the data objects.

```
allD = T.Data;
```

For the test plan object `T`, this example returns a `1x1` array if the test plan has a data object attached, and `0x1` otherwise.

See Also

`CreateData`, `RemoveData`, `CopyData`

DataFileTypes

Purpose Data file types

Syntax `f = mbcmodel.DataFileTypes`

Description This is a function to return a list of data file types for mbcmodel.

Examples

```
f = mbcmodel.DataFileTypes

f =

Columns 1 through 4
'Excel file'      'FT/DB data files'      'Delimited Text File'
[1x25 char]
Column 5
'MATLAB Data File'
```

See Also `ImportFromFile`, `CreateData`

Purpose Default models for test plan

Syntax `testplan.DefaultModels`

Description This is a read-only property of `mbcmodel.testplan`. It returns a cell array of `mbcmodel.model` objects (one array for each stage).

Examples To get the default model objects for use in creating a response, enter:

```
mdls = T.DefaultModels
LocalModel = CreateModel mdl{1}, 'Local Polynomial Spline');
GlobalModel = CreateModel(mdl{2}, 'RBF');
R = CreateResponse(T, 'TQ', LocalModel, GlobalModel, 'Maximum')
```

See Also `CreateResponse`; `modelinput`

DefineNumberOfRecordsPerTest

Purpose Define exact number of records per test

Syntax `D = DefineNumberOfRecordsPerTest(D, number, testnumAlias)`

Description This is a method of `mbcmodel.data`.

You can use this to set one test per record for one-stage modeling.

`number` is the input specifying the number of records to include in each test. Most usually this will be used to specify one test per record.

`testnumAlias` is an optional string input to define the `SignalName` that should be used as the testnumber within MBC. Defaults to the index of the test.

Note `testnumAlias` uses the first record in the test as the testnumber, and testnumbers *are* unique so any duplicates will be modified.

Examples

```
DefineNumberOfRecordsPerTest(D, 1);  
DefineNumberOfRecordsPerTest(D, 10, 'MYLOGNO');
```

See Also `DefineTestGroups`

Purpose	Define rule-based test groupings
Syntax	<code>D = DefineTestGroups(D, variables, tolerances, testnumAlias, reorder)</code>
Description	<p>This is a method of <code>mbcmodel.data</code>.</p> <p>You can impose rules to collect records of the current data set (D) into groups; these groups are referred to as tests. Test groupings are used to define hierarchical structure in the data for two-stage modeling.</p> <p>Select a variable or variables to group by and set tolerances. The tolerance is used to define groups: on reading through the data, when the value of any specified variable changes by more than the tolerance, a new group is defined.</p> <p>variables is the input cell array of strings holding the <code>SignalNames</code> on which to define the test groupings.</p> <p>tolerances is the input double array of the same length as variables holding the required tolerances for the test grouping definition.</p> <p>testnumAlias is an optional string input to define the <code>SignalName</code> that should be used as the testnumber within MBC. Defaults to the index of the test.</p> <hr/> <p>Note <code>testnumAlias</code> uses the first record in the test as the testnumber, and testnumbers <i>are</i> unique so any duplicates will be modified.</p> <hr/> <p>reorder is an optional Boolean indicating that the data should be reordered within the data set. Defaults to <code>false</code>.</p> <p>See the section on Test Groupings (under Data) in the Model Browser User's Guide for more information on these inputs.</p>
Examples	<pre>DefineTestGroups(D, {'AFR' 'RPM'}, [0.1 30], 'MYLOGNO', false);</pre>

DefineTestGroups

See Also

DefineNumberOfRecordsPerTest, NumberOfTests

Purpose	Convert boundary model to design constraint
Syntax	<code>C = designconstraint(C)</code>
Description	<p>This is a method of <code>mbcboundary.AbstractBoundary</code> and all its subclasses (e.g., <code>mbcboundary.Model</code>).</p> <p><code>C = designconstraint(C)</code> converts the boundary model <code>C</code> to an <code>mbcdoe.designconstraint</code> object. Convert boundary models to use them as a design constraint. You cannot convert the boundary model to a design constraint until it is fitted (<code>Fitted=true</code>).</p> <p>You can also call <code>mbcdoe.design.AddConstraint</code> directly and the method converts the boundary model object to a <code>mbcdoe.designconstraint</code> object.</p>
See Also	<code>AddConstraint</code> , “Boundary Models” on page 1-21

Designs

Purpose Designs in test plan

Syntax `D = T.Designs`

Description `Designs` is a property of `mbcmodel.testplan`.

`D = T.Designs` returns a cell array of designs in the test plan, `T`, one element for each level.

When using designs at the command line, designs are treated as an array. In the Design Editor you can build a design tree, where child designs inherit characteristics such as constraints from the parent design. At the command line you can copy and modify designs. By default, designs are added to the top level of the design tree. To build tree structures at the command line, you can use the `Parent` argument of the `AddDesign` method to specify the parent design in the design tree. The tree structure cannot be used at the command line any further, but you can use the design tree in the Design Editor after you load the project into the Model Browser.

Examples To get local designs only:

```
LocalDesigns = T.Designs{1}
```

To get global designs only:

```
GlobalDesigns = T.Designs{2}
```

To get the fifth global design:

```
D = T.Design {2}(5)
```

After modifying the design, you must call `UpdateDesign`, or reassign to the test plan as follows:

```
T.Design {2}(5) = D
```

See Also `UpdateDesign`

Purpose Detach data from test plan

Syntax `T = DetachData(T)`

Description This is a method of `mbcmodel.testplan`.

T is the test plan object. A test plan can only use a single data set, so you do not need to specify the data object.

Examples `DetachData(T1);`

See Also `AttachData`

DiagnosticStatistics

Purpose Diagnostic statistics for response

Syntax `S = DiagnosticStatistics(R, TestNumbers, Stats)`

Description This is a method of the local and response model objects, `mbcmodel.localresponse` and `mbcmodel.response`.

The options available are model-specific and are the same options shown in the drop-down menus of the scatter plots (the top plots) in the local and global (response feature) model views of the toolbox GUI.

`S` is a structural array containing `Statistics` and `Names` fields.

`R` is the response model object.

`Testnumbers` specifies the index into tests for local or hierarchical models.

`Stats` is an optional input that defines which diagnostic statistics you want from the available list. If you don't specify `Stats`, you get all available statistics.

A row is set to NaN if that point is removed.

Examples

```
studentRes = DiagnosticStatistics(local, tn, 'Studentized residuals');
```

See Also `SummaryStatistics`, `AlternativeModelStatistics`

Purpose Discrepancy value

Syntax `s = Discrepancy(D)`

Description Discrepancy is a method of `mbcdoe.design`.
`s = Discrepancy(D)` returns the discrepancy, which is a measure of the deviation from the average point density. Discrepancy is defined over the unconstrained design and is only available for space-filling designs.

See Also Maximin; Minimax

DoubleInputData

Purpose Data being used as input to model

Syntax `X = DoubleInputData(R, TestNumber)`

Description This is a method of all model objects: `mbcmodel.hierarchicalresponse`, `mbcmodel.localresponse` and `mbcmodel.response`. It returns an array (X) containing the input data used for fitting the model.

R is the response model object.

TestNumber is an optional input to specify the tests you want.

Examples

```
X = DoubleInputData(R);  
x = DoubleInputData(local, tn);
```

See Also `DoubleResponseData`

Purpose	Data being used as output to model for fitting
Syntax	<code>Y = DoubleResponseData(R, TestNumber)</code>
Description	<p>This is a method of all model objects: <code>mbcmodel.hierarchicalresponse</code>, <code>mbcmodel.localresponse</code> and <code>mbcmodel.response</code>. It returns an array (Y) containing the response data used for fitting the model.</p> <p>R is the response model object.</p> <p>TestNumber is an optional input to specify the tests you want.</p>
Examples	<pre>Y = DoubleResponseData(R); y = DoubleResponseData(local, tn);</pre>
See Also	<code>DoubleInputData</code>

Evaluate

Purpose Evaluate model, boundary model, or design constraint

Syntax
`Y = Evaluate(M, X)`
`Y = Evaluate(C, X)`
`Y = Evaluate(B, X)`

Description This is a method of `mbcmodel.model`, `mbcdoe.designconstraint`, and boundary model object `mbcboundary.AbstractBoundary` and all its subclasses.

`Y = Evaluate(M, X)` evaluates the model `M` at `X`.

`Y = Evaluate(C, X)` evaluates the design constraint `C` at `X` (negative results are within the constraint).

`Y = Evaluate(B, X)` evaluates the boundary model `B` at `X`. `X` is a matrix with `B.NumberOfInputs` columns. All boundaries use the form $g(x)=0$. A positive value indicates that the point is outside the boundary. The method cannot evaluate a boundary model until it is fitted.

`X` is a (*numpoints-by-nfactors*) array.

`Y` is a (*numpoints-by-1*) array.

See Also PredictedValue, PEV

Purpose

Make command-line or Simulink export model

Syntax

```
ExportedModel = Export(MODEL)
ExportedModel = Export(MODEL, Format)
```

Description

This is a method of these model objects:
mbcmodel.hierarchicalresponse, mbcmodel.localresponse,
mbcmodel.response and mbcmodel.model.

ExportedModel = Export(MODEL) exports the model to MATLAB® software.

ExportedModel = Export(MODEL, Format) exports the model in the specified format, which can be 'MATLAB' or 'Simulink'.

Format must be 'MATLAB' or 'Simulink'; an error will be thrown if this is incorrect.

You can evaluate models exported to the MATLAB workspace in the same way as when you export them from the Model Browser. You can save these models as a *.mat file and load them into CAGE.

Model is the object containing the response models from the node you are exporting from.

Examples

```
M = Export(R2, 'MATLAB');
mbt_model = Export(maxTQ, 'MATLAB');
```

ExportToMBCDataStructure

Purpose Export data to MBC data structure

Syntax `mbcStruct = ExportToMBCDataStructure (D)`

Description This is a method of `mbcmodel.data`.

It converts the specified data object (D) to the MBC Data Structure format.

An MBC Data Structure is a structure array that contains the following fields:

- `varNames` is a cell array of strings that hold the names of the variables in the data (1xn or nx1).
- `varUnits` is a cell array of strings that hold the units associated with the variables in `varNames` (1xn or nx1). This array can be empty, in which case no units are defined.
- `data` is an array that holds the values of the variables (m x n).
- `comment` is an optional string holding comment information about the data.

For more information see the Data Loading Function section (under Data) in the Model Browser User's Guide ("Data Loading Application Programming Interface"). See also `mbccheckindataloadingfcn` to specify your own data loading function.

Examples `X = ExportToMBCDataStructure(D1);`

See Also `ImportFromMBCDataStructure`

Purpose	Full path to project file
Syntax	Name = P.Filename
Description	This is a property of mbcmodel.project.
Examples	Name = P.Filename;

Filters

Purpose Structure array holding user-defined filters

Syntax `filt = D.Filters`

Description This is a property of `mbcmodel.data`.

It returns a structure array holding information about the currently defined filters. The array will be the same length as the number of currently defined filters, with the following fields for each filter:

- **Expression** — The string expression as defined in `AddFilter` or `ModifyFilter`
- **AppliedOK** — Boolean indicating that the filter was successfully applied
- **RemovedRecords** — Boolean vector indicating which records the filter removed. Note that many filters could remove the same record
- **Message** — String holding information on the success or otherwise of the filter

Examples `filt = D.Filters;`

See Also `AddFilter`, `ModifyFilter`, `RemoveFilter`

Purpose

Find design by name

Syntax

```
D = FindDesign(T,Name)
D = FindDesign(T,Level,Name)
```

Description

FindDesign is a method of `mbcmodel.testplan`.

`D = FindDesign(T,Name)` finds a design with a matching name from the test plan T.

Name is a string or a cell array of strings specifying a design name.

Level is the test plan level. By default the level is the outer level (i.e., Level 1 for one-stage, Level 2 (global) for two-stage).

`D = FindDesign(T,Level,Name)` finds a design with a matching name from the specified level of the test plan.

FitAlgorithm

Purpose Fit algorithm for model or boundary model

Syntax `F = M.FitAlgorithm`

Description This is a property of `mbcmodel.model`, and boundary model objects `mbcboundary.AbstractBoundary` and all subclasses.

An `mbcmodel.model.FitAlgorithm` object is contained within the `FitAlgorithm` property of an `mbcmodel.model` object or `mbcboundary` object. This object has a `Name` property, and the following methods: `CreateAlgorithm`, `getAlternativeNames`, `IsAlternative`, `SetupDialog`, properties.

As a simpler alternative to using `CreateAlgorithm`, you can assign the algorithm name directly to the algorithm. For example:

```
B.FitAlgorithm.BoundaryPointOptions = 'Boundary Only';
```

```
m.FitAlgorithm = `Minimize PRESS`;
```

Case and spaces are ignored.

For properties, see `CreateAlgorithm`.

Examples To get a `fitalgorithm` object, `F`, from a model:

```
M = mbcmodel.CreateModel('Polynomial', 4);  
F = M.FitAlgorithm
```

```
F =  
Algorithm: Least Squares  
Alternatives: 'Minimize PRESS','Forward Selection','Backward  
Selection','Prune'  
1x1 struct array with no fields.
```

See Also `CreateAlgorithm`, `getAlternativeNames`, `IsAlternative`, `SetupDialog`.

Purpose	Fit model or boundary model to new or existing data, and provide summary statistics
Syntax	<pre>[statistics, model] = Fit(model, X, Y) [statistics, model] = Fit(model) B = mbcboundary.Fit(X,Type)</pre>
Description	<p>This is a method of <code>mbcmodel.model</code> and <code>mbcboundary.Model</code>.</p> <p><code>[statistics, model] = Fit(model, X, Y)</code> This fits the model to the specified data. After you have called <code>Fit</code> specifying the data to use, then you can refit the model by calling <code>[statistics, model] = Fit(model)</code>.</p> <p>The response object that the model came from defines which summary statistics are returned. To see these statistics, call <code>SummaryStatistics</code>. These statistics appear in the Summary Statistics pane of the Model Browser GUI. The statistics returned depend on the model type.</p> <p>For a linear model, the statistics are: 'Observations','Parameters','Box-Cox','PRESS RMSE','RMSE'.</p> <p>For a neural network model: 'Observations','Parameters', 'Box-Cox','RMSE', 'R^2'.</p> <p><code>B = mbcboundary.Fit(X,Type)</code> creates and fits a boundary model to the data <code>X</code>, a double matrix. <code>B</code> is an <code>mbcboundary.Model</code> object.</p>
Examples	<pre>statistics = Fit(knot) statistics = 27.0000 7.0000 1.0000 3.0184 2.6584</pre>
See Also	<code>SummaryStatistics</code> , <code>UpdateResponse</code>

Fitted

Purpose	Indicate whether boundary model has been fitted
Syntax	Fitted(B)
Description	<p>This is a property of <code>mbcboundary.AbstractBoundary</code> and all its subclasses.</p> <p>Fitted(B) indicates whether boundary model B has been fitted (read only). You cannot evaluate the boundary model unless fitted equals true.</p>
See Also	“Boundary Models” on page 1-21

Purpose	Fix design points
Syntax	<code>D = FixPoints(D)</code> <code>D = FixPoints(D,indices)</code>
Description	<code>FixPoints</code> is a method of <code>mbcdoe.design</code> . <code>D = FixPoints(D)</code> fixes all points in the design. <code>D = FixPoints(D,indices)</code> fixes all points specified by <code>indices</code> .
See Also	<code>PointTypes</code> ; <code>RemovePoints</code>

Generate

Purpose Generate new design points

Syntax

```
D = Generate(D)
D = Generate(D, NumPoints)
D = Generate(D, 'Prop1', value1, ...)
```

Description `Generate` is a method of `mbcdoe.design`. The `Generate` method always generates a new design and replaces the existing points (fixed or free).

`D = Generate(D)` regenerates the design with the current generator settings (the current design properties and current number of points). It is possible that a different design will result (e.g., for Latin Hypercube Sampling designs).

`D = Generate(D, NumPoints)` generates the number of points specified by `NumPoints` using the current generator settings. You cannot specify the number of points for all design types (e.g., Central Composite, Box Behnken) and therefore the `NumPoints` second input is not supported for all design types.

`D = Generate(D, 'Prop1', value1, ...)` generates a new design with the generator specified by the generator property value pairs.

You can use the property value pairs to specify design generator properties (such as the design Type) as part of the `Generate` command, e.g.,

```
C = OptDesign.CreateCandidateSet(OptDesign, ...
    'Type', 'Grid', ...
    'NumberOfLevels', [21 21 21]);
```

```
OptDesign = Generate(OptDesign, ...
    'Type', 'V-optimal', ...
    'CandidateSet', C, ...
    'MaxIterations', 200, ...
    'NoImprovement', 50, ...
    'NumberOfPoints', 200);
```


This is equivalent to the following code setting the properties individually and then assigning the updated generator object to the design:

```
P = OptDesign.Generator;  
P.Type = `V-optimal';  
P.CandidateSet.NumberOfLevels(:)=21;  
P.MaxIterations = 200;  
P.NumberOfPoints = 200;  
P.NoImprovement = 50;  
OptDesign.Generator = P;
```

You see an error if you try to call `Generate` when the design `Style` is `User-defined` or `Experimental data`.

For space-filling designs, see also `ConstrainedGenerate`.

Examples

To generate a design with 10 points:

```
d = Generate( d, 10 );
```

Note The design `Type` must have a writeable property `'NumberOfPoints'` to use this syntax `D = Generate(D, NumPoints)`. See `Type` (for designs and generators).

To create and generate a 15 point latin hypercube sampling design:

```
globalDesign = TP.CreateDesign(2, 'Type', ...  
    'Latin Hypercube Sampling');  
globalDesign = Generate(globalDesign, 15)
```

To regenerate the design and get a different 15 point latin hypercube sampling design:

```
globalDesign = Generate(globalDesign);
```

Generate

To create and generate a halton design with 50 points:

```
haltonDesign = CreateDesign( inputs, 'Type',...  
    'Halton Sequence', 'Name', 'Halton' );  
haltonDesign = Generate( haltonDesign, 'NumberOfPoints', 50 );
```

To create and generate a halton design with specified scrambling and other properties:

```
haltonDesignWithScrambling = haltonDesign.CreateDesign...  
    ( 'Name', 'Scrambled Halton' );  
haltonDesignWithScrambling = Generate...  
(haltonDesignWithScrambling,  
    'Scramble', 'RR2', 'PrimeLeap', true );
```

To create a full factorial design and specify the number of levels when generating the design:

```
design = CreateDesign( inputs, 'Type', 'Full Factorial' );  
design = Generate( design, 'NumberOfLevels', [50 50] );
```

See Also

Augment; CreateDesign; ConstrainedGenerate

Purpose Design generation options

Syntax D.Generator
D.Generator = NewGenerator

Description Generator is a property of `mbcdoe.design`.
D.Generator returns an `mbcdoe.generator` object.
D.Generator = NewGenerator generates a new design based on the new design generator. Design generators provide the properties for all the design types.
The properties you can set depend on the design Type. To view the properties for generating designs, see `Properties` (for design generators).
Use `getAlternativeTypes` to get a list of alternative generators.

See Also `Generate`; `Properties` (for design generators); `Type` (for designs and generators); `getAlternativeTypes`.

GetAllTerms

Purpose List all model terms

Syntax `Terms = M.Properties.GetAllTerms`

Description This is a method of `mbcmodel.linearmodelproperties`.

`Terms = M.Properties.GetAllTerms` returns a list of all terms in this model. `M` is an `mbcmodel.linearmodel` object.

`Terms` is a (*numterms*-by-*nfactors*) array. The $(m,n)^{\text{th}}$ element is the power of the n^{th} factor in the m^{th} term.

Examples The following example creates a model, and finds which terms are quadratic in the first input factor (`X1`):

```
mdl = mbcmodel.CreateModel('Polynomial', 2)

mdl =

    1 + 2*X1 + 8*X2 + 3*X1^2 + 6*X1*X2 + 9*X2^2 + 4*X1^3
    + 5*X1^2*X2 + 7*X1*X2^2 + 10*X2^3
    InputData: [0x2 double]
    OutputData: [0x1 double]
    Status: Not fitted
    Linked to Response: <not linked>

>>terms = mdl.Properties.GetAllTerms;
>>x1quadraticterms = find(terms(:,1)==2)

x1quadraticterms =

    4
    8
```

See Also `GetIncludedTerms`

Purpose List alternative algorithm names

Syntax `F.getAlternativeNames`
`AltList = getAlternativeNames(F)`

Description This is a method of `mbcmodel.fitalgorithm`.
`F.getAlternativeNames` or `AltList = getAlternativeNames(F)` return a cell array of alternative algorithm names. `F` is a `mbcmodel.fitalgorithm` object.

Examples

```
mdl = mbcmodel.CreateModel('Polynomial', 2);  
F = mdl.FitAlgorithm;  
altAlgs = F.getAlternativeNames  
  
altAlgs =  
  
        'Least Squares'      'Minimize PRESS'      'Forward Selection'  
        'Backward Selection'  'Prune'
```

See Also `CreateAlgorithm`, `IsAlternative`

getAlternativeTypes

Purpose Alternative model or design types

Syntax

```
list = getAlternativeTypes(Model)
list = getAlternativeTypes(Boundary)
list = getAlternativeTypes(Design)
list = getAlternativeTypes(Design,Style)
list = getAlternativeTypes(DesignGenerator)
list = getAlternativeTypes(DesignGenerator,Style)
list = getAlternativeTypes(CandidateSet)
list = getAlternativeTypes(DesignConstraint)
```

Description This is a method of

- `mbcmodel.model`
- All the boundary model objects: `mbcboundary.AbstractBoundary` and all its subclasses.
- All the design objects: `mbcdoe.design`, `mbcdoe.generator`, `mbcdoe.candidateset`, and `mbcdoe.designconstraint`.

Models

`list = getAlternativeTypes(Model)` returns a cell array of alternative model types with the same number of inputs as `Model`.

Boundary Models

`list = getAlternativeTypes(Boundary)` returns a list of boundary model types that you can use as alternative boundary model types for the current boundary model.

Designs

`list = getAlternativeTypes(Design)` returns a list of design types, which you can use as alternative designs for current design.

`list = getAlternativeTypes(Design,Style)` returns a list of design types of the specified style. The design style requires a type of 'Space-Filling', 'Classical' or 'Optimal'.

Design Generators

`list = getAlternativeTypes(DesignGenerator)` returns a list of design generator types that you can use as alternative designs for current design generator.

`list = getAlternativeTypes(DesignGenerator, Style)` returns a list of design generator types of the specified style. The design generator style requires a type of 'Candidate Set', 'Space-Filling', 'Classical' or 'Optimal'.

Design Candidate Sets

`list = getAlternativeTypes(CandidateSet)` is a list of candidate set types that you can use as alternative candidate sets for the current candidate set. You can obtain the candidate set from an optimal design generator or by using `mbcdoe.design.CreateCandidateSet`.

Design Constraints

`list = getAlternativeTypes(DesignConstraint)` returns a list of design constraint types.

Examples

```
mdl = mbcmodel.CreateModel('RBF', 2);  
altmodels = getAlternativeTypes(mdl)
```

This produces the output:

```
altmodels =  
  
Columns 1 through 6  
  
'Polynomial' 'Hybrid Spline' 'RBF' 'Polynomial-RBF'  
'Hybrid Spline-RBF' 'Multiple Linear'  
  
Columns 7 through 8  
  
'Neural Network' 'Transient'
```

See Also

Type (for models), CreateModel

GetIncludedTerms

Purpose List included model terms

Syntax `Terms = M.Properties.GetIncludedTerms`

Description This is a method of `mbcmodel.linearmodelproperties`.
`Terms = M.Properties.GetIncludedTerms` returns a list of those terms that will be used to fit the model. `M` is an `mbcmodel.linearmodel` object.

`Terms` is a (*numincludedterms-by-nfactors*) array. The $(m,n)^{\text{th}}$ element is the power of the n^{th} factor in the m^{th} included term.

Examples

```
>>mdl = mbcmodel.CreateModel('Polynomial', 2);

>>includedterms = mdl.Properties.GetIncludedTerms;
>>x1quadraticterms = find(includedterms(:,1)==2)

x1quadraticterms =

     4
     8
```

See Also `GetAllTerms`, `SetTermStatus`

Purpose Local boundary model for operating point

Syntax `getLocalBoundary(B)`

Description This is a method of `mbcboundary.TwoStage`.
`getLocalBoundary(B)` returns the definition of the local boundary model.

GetTermLabel

Purpose List labels for model terms

Syntax

```
Labels = M.Properties.GetTermLabel
Labels = M.Properties.GetTermLabel( Terms )
Labels = M.Properties.GetTermLabel( Terms, 'Format',
    OutputFormat )
```

Description This is a method of `mbcmodel.linearmodelproperties`, which returns a user-friendly label for one or more specified terms.

```
Labels = M.Properties.GetTermLabel
Labels = M.Properties.GetTermLabel( Terms )
Labels = M.Properties.GetTermLabel( Terms, 'Format',
    OutputFormat )
```

`M` is an `mbcmodel.linearmodel` object.

The specified terms form a row where each value gives the power of that parameter. `OutputFormat` can be 'List' or 'Formula'.

Examples

```
mdl = mbcmodel.CreateModel('Polynomial', 2);
mdl.Properties.GetTermLabel([1 2; 1 0] )
```

produces {'X1*X2^2'; 'X1'} and

```
mdl.Properties.GetTermLabel([1 2; 1 0], 'Format', 'Formula' )
```

produces 'X1*X2^2 + X1'.

See Also

`GetAllTerms`, `GetIncludedTerms`

Purpose

List status of some or all model terms

Syntax

```
Status = M.Properties.GetTermStatus
Status = M.Properties.GetTermStatus(Terms)
```

Description

This is a method of `mbcmodel.linearmodelproperties`.

`Status = M.Properties.GetTermStatus` returns the status of all of the terms in this model. `Status` is a cell array of status strings. `M` is an `mbcmodel.linearmodel` object.

`Status = M.Properties.GetTermStatus(Terms)` returns the status of the specified terms in this model.

The stepwise status for each term can be 'Always', 'Never' or 'Step'. The status determines whether you can use the `StepwiseRegression` function to throw away terms in order to try to improve the predictive power of the model.

Examples

```
mdl = mbcmodel.CreateModel('Polynomial', 2);
```

Get status of X_2^3 term:

```
status = mdl.Properties.GetTermStatus([0 3])
```

```
status =
```

```
    'Step'
```

Get status of all terms linear in X_1 :

```
status = mdl.Properties.GetTermStatus([1 0; 1 1; 1 2])
```

```
status =
```

```
    'Step'
```

```
    'Step'
```

```
    'Step'
```

GetTermStatus

See Also

SetTermStatus, StepwiseStatus

Purpose Global boundary model tree

Syntax Global(B)

Description This is a property of `mbcboundary.TwoStageTree`.

`Global(B)` The `Global` property contains a global boundary model tree (read only).

The toolbox fits boundary models in the global model boundary tree with one point per test (the average value of the global variables for that test).

GlobalModel

Purpose Interpolating global boundary model definition

Syntax `B.GlobalModel`

Description This is a property of `mbcboundary.TwoStage`.
`B.GlobalModel` returns the definition of global boundary model.
`GlobalModel` requires the type `Interpolating RBF`.

Purpose Load data from file

Syntax
D = ImportFromFile(D, filename, filetype)
D = ImportFromFile(D, filename, 'Excel file', SHEETNAME)

Description This is a method of the `mbcmodel.data` object.

First you must use `CreateData`, than `BeginEdit` before you can call `ImportFromFile` to bring data into your new data object, D, as follows:
D = `ImportFromFile(D, filename, filetype)`

Note that you can specify `filename` and `filetype` when you call `CreateData` as a shortcut for loading data from a file. You still need to call `BeginEdit` before you can make changes to the data.

`filename` is a string holding the full path to the file to load.

`filetype` is an optional file type to load. See `DataFileTypes` for the specification of the allowed file types (and `mbccheckindataloadingfcn` to specify your own data loading function).

Filetype defaults to 'auto' which will attempt to guess the filetype based on the extension of the file being loaded. i.e. if the file extension is `.xls` then MBC will try the Excel File Loader.

D = `ImportFromFile(D, filename, 'Excel file', SHEETNAME)` specifies a sheet name for an Excel file.

Examples `ImportFromFile(D, 'D:\MBCData\Raw Data\testdata.xls');`

See Also `CreateData`, `DataFileTypes`, `BeginEdit`,
`ImportFromMBCDataStructure`, `RemoveData`, `Append`

ImportFromMBCDataStructure

Purpose Load data from MBC data structure

Syntax `D = ImportFromMBCDataStructure(D, mbcStruct)`

Description This is a method of `mbcmodel.data`.

First you must use `CreateData`, than `BeginEdit` before you can bring data into your new data object.

An MBC Data Structure is a structure array that contains the following fields:

- `varNames` is a cell array of strings that hold the names of the variables in the data (1xn or nx1).
- `varUnits` is a cell array of strings that hold the units associated with the variables in `varNames` (1xn or nx1). This array can be empty, in which case no units are defined.
- `data` is an array that holds the values of the variables (m x n).
- `comment` is an optional string holding comment information about the data.

For more information see the Data Loading Function section (under Data) in the *Model Browser User's Guide* ("Data Loading Application Programming Interface"), and see also `mbccheckindataloadingfcn` to specify your own data loading function.

Examples `ImportFromMBCDataStructure(D, mbcStruct);`

See Also `ImportFromFile`, `CreateData`, `BeginEdit`, `RemoveData`, `Append`, `ExportToMBCDataStructure`

Purpose	Boundary models selected as best
Syntax	<code>mbcboundary.Tree.InBest</code>
Description	<p>This is a property of <code>mbcboundary.Tree</code> and <code>mbcboundary.TwoStageTree</code>.</p> <p><code>mbcboundary.Tree.InBest</code> Specify a logical array indicating which boundary models to select as best.</p> <p>You can combine models into a single boundary model for the boundary tree. The logical array specifies which models to include in the best boundary model. The <code>BestModel</code> property gives the best boundary model for the boundary tree.</p> <p>Including boundary models <code>InBest</code> corresponds to combining boundary models in <i>best</i> in the Boundary Editor GUI. For further information, see “Combining Best Boundary Models” in the Model Browser documentation.</p>
See Also	<code>BestModel</code> , “Boundary Models” on page 1-21

InputData

Purpose Input data for model

Syntax `D = M.InputData`

Description This is a property of `mbcmodel.model`. It returns an array of the input variable data currently in the model.

Examples `D = knot.InputData;`

See Also `OutputData`

Purpose	Inputs for test plan, model, boundary model, design, or constraint
Syntax	<code>testplan.Inputs</code> <code>model.Inputs</code> <code>design.Inputs</code> <code>boundary.Inputs</code>
Description	<p>This is a property of <code>mbcmodel.testplan</code>, <code>mbcmodel.model</code>, <code>mbcdoe.design</code>, <code>mbcdoe.designconstraint</code>, and boundary model object <code>mbcboundary.AbstractBoundary</code> and all its subclasses.</p> <p>For <code>mbcmodel.testplan</code>, this property returns a cell array of <code>mbcmodel.modelinput</code> objects (one array for each stage). You cannot change the number of stages after creation of the test plan.</p> <p>For <code>mbcmodel.model</code> and <code>mbcboundary</code> objects, this property returns an <code>mbcmodel.modelinput</code> object. You cannot edit this object when it is attached to a response. You cannot change number of inputs after creation.</p> <p>In both cases, verification of valid variable names and symbols occurs before assigning inputs to model at the command line. Names and Symbols must be unique.</p> <p>Boundary model inputs use an array of <code>mbcmodel.modelinput</code> objects. You set the number of boundary model inputs when you create the boundary model. You can change the name, symbol, and range of the inputs.</p> <p>For <code>mbcdoe.design</code>, <code>D.Inputs = NewInputs</code> updates the inputs. You cannot change the number of design inputs. Many designs have <code>Limits</code> properties in addition to model input ranges. These properties allow you to restrict the range of the design without changing the model or losing points via a constraint.</p>
See Also	<code>CreateTestplan</code> , <code>modelinput</code>

InputSetupDialog

Purpose	Open Input Setup dialog box to edit inputs
Syntax	<pre>[NEWMODEL, OK] = InputSetupDialog(OLDMODEL) [NEWTTESTPLAN, OK] = InputSetupDialog(OLDTESTPLAN)</pre>
Description	<p>This is a method of <code>mbcmodel.model</code> and <code>mbcmodel.testplan</code>.</p> <p><code>[NEWMODEL, OK] = InputSetupDialog(OLDMODEL)</code> opens the Input Setup dialog box, where you can edit the model inputs (names, symbols, and ranges).</p> <p><code>[NEWTTESTPLAN, OK] = InputSetupDialog(OLDTESTPLAN)</code> opens the Input Setup dialog box, where you can edit the test plan inputs (names, symbols, and ranges).</p> <p>If you click Cancel to dismiss the dialog box, <code>OK = false</code> and <code>NEWMODEL = OLDMODEL</code>. If you click OK to close the dialog box, then <code>OK = true</code> and <code>NEWMODEL</code> is your new chosen model setup. The new model is refitted when you click OK.</p>

Purpose Names of signals in data that are being modeled

Syntax `inputs = A.InputSignalNames`

Description This is a property of `mbcmodel.testplan` and the modeling objects `mbcmodel.hierarchicalresponse`, `mbcmodel.localresponse` and `mbcmodel.response`.

A can be a test plan (T) or model (L, R, HR) object.

Examples

```
inputs = T.'InputSignalNames';  
  
InputFactors = thisRF.InputSignalNames';
```

See Also `SignalNames`

InputsPerLevel

Purpose Number of inputs at each level in model

Syntax `L = T.InputsPerLevel`

Description This is a property of `mbcmodel.testplan`.

This is a vector of length `Levels`. Each element defines the number of inputs at that level. See “Understanding Model Structure” for an explanation of the levels in a test plan.

Examples `L = T.InputsPerLevel`
 `L =`
 `2 4`

This answer means the test plan `T` has 2 local inputs and 4 global inputs.

See Also `Levels`, `Level`

Purpose	Test alternative fit algorithm
Syntax	<code>OK = IsAlternative(F1, F2)</code>
Description	<p>This is a method of <code>mbcmodel.fitalgorithm</code>.</p> <p><code>OK = IsAlternative(F1, F2)</code> tests whether <code>F</code> is an alternative <code>mbcmodel.fitalgorithm</code> for <code>F1</code>.</p>
See Also	<code>CreateAlgorithm</code> , <code>getAlternativeNames</code>

IsBeingEdited

Purpose Boolean signaling if data or model is being edited

Syntax `OK = D.IsBeingEdited`

Description This is a property of `mbcmodel.data` and `mbcmodel.model`.

This Boolean property indicates that the data or model is currently being edited.

For data, it also indicates that previously there was a successful call to `BeginEdit` and hence that whatever changes have been applied can be undone by calling `RollbackEdit`. It does not indicate that a call to `CommitEdit` will necessarily succeed. See `CommitEdit` for an example of this case.

Examples `OK = D.IsBeingEdited;`

`OK = knot.IsBeingEdited;`

See Also `BeginEdit`, `IsEditable`, `CommitEdit`, `RollbackEdit`

Purpose Boolean signaling whether data is editable

Syntax `OK = D.IsEditable`

Description This is a property of `mbcmodel.data`.
This Boolean property indicates if a particular piece of data is editable.
The following rules apply:

- If the data was created using `mbcmodel.CreateData` and was not Attached to a test plan it is editable.
- If the data was created or retrieved from the project and was not Attached to a test plan it is editable.
- If the data was Attached to a test plan and was subsequently retrieved from that test plan it is editable.

Examples

```
D = p.Data;  
D1 = p.Data;  
BeginEdit(D1);  
tp = p.Testplan;  
Attach(tp, D);
```

Where `p` is an `mbcmodel.project` object, and `D` and `D1` are `mbcmodel.data` objects.

At this point `D1.IsEditable` becomes false because `D1` is now Attached to the test plan and hence can only be modified from the test plan. If you now enter:

```
OK = D1.IsEditable
```

the answer is false.

See Also `BeginEdit`, `IsBeingEdited`, `CommitEdit`, `RollbackEdit`

Jacobian

Purpose Calculate Jacobian matrix for model at existing or new X points

Syntax `J = Jacobian(model, optional X)`

Description This is a method of `mbcmodel.model`.

This calculates the Jacobian matrix for the model at existing or new X points. If X is not specified then the existing data is used. The Jacobian is the regression matrix for linear models and RBF models.

The Jacobian matrix (for linear and RBF models) is the same as the Regression Matrix in the Design Evaluation Tool GUI. These matrices only include the terms currently selected in the model.

If all terms are included (none removed by Stepwise) then the Jacobian (for linear and RBF models) is the same as the Full FX matrix found in the Design Evaluation Tool GUI. The Jacobian matrix only includes the currently selected model terms.

To determine the condition number, use the MATLAB command `cond(J)`.

Examples `J = Jacobian(knot),`

Purpose Level in test plan of response

Syntax `level = R.Level`

Description This is a property for all model objects:
`mbcmodel.hierarchicalresponse`, `mbcmodel.localresponse` and `mbcmodel.response`.

R is the response for which you want the level.

The level is usually 0 for hierarchical models, usually 1 for local models, and usually 2 or 1 for response models. See “Understanding Model Structure” for an explanation of what `Level` indicates about a response.

Examples `level = R.Level;`

See Also Levels

Levels

Purpose	Number of levels in hierarchical model
Syntax	<code>levels = T.'Levels</code>
Description	This is a property of <code>mbcmodel.testplan</code> . See “Understanding Model Structure” for an explanation of what <code>Levels</code> mean.
Examples	<code>levels = T.Levels;</code>
See Also	<code>Level</code>

Purpose Load existing project file

Syntax `P = Load(P, Filename)`

Description This is a method of `mbcmodel.project`.
P is a project object, and `Filename` is the full path to the project you want to load.

Examples `P2 = Load(P2, 'D:/MBCwork/TQproject2.mat');`

See Also `New`

LoadProject

Purpose Load mbcmodel.project

Syntax P = MBCMODEL.LOADPROJECT(FILENAME)

Description P = mbcmodel.LoadProject(FILENAME) loads a mbcmodel.project from the file FILENAME.

See Also CreateProject, Load

Purpose Local boundary model tree

Syntax

Description This is a property of `mbcboundary.TwoStageTree`.

The `Local` property contains a local boundary model tree (read only).

Point-by-point and two-stage boundary models are fitted in the local boundary model tree. These boundary models fit local boundary models for each operating point and combine into a single boundary model that includes the global inputs.

LocalBoundaries

Purpose	Array of local boundary models for each operating point
Syntax	<code>LocalBoundaries(B)</code>
Description	<p>This is a property of <code>mbcboundary.PointByPoint</code>.</p> <p><code>LocalBoundaries(B)</code> returns a cell array of local boundary models for each operating point (read only).</p>
See Also	“Boundary Models” on page 1-21

Purpose	Definition of local boundary model
Syntax	<code>B.LocalModel</code>
Description	<p>This is a property of <code>mbcboundary.PointByPoint</code> and <code>mbcboundary.TwoStage</code>.</p> <p><code>B.LocalModel</code> returns the definition of the local boundary model for every operating point.</p> <p>For <code>mbcboundary.TwoStage</code>, <code>LocalModel</code> requires a type of either <code>Range</code> or <code>Ellipsoid</code>.</p> <p>For <code>mbcboundary.PointByPoint</code>, the <code>LocalModel</code> type can be any valid type for <code>mbcboundary.Model</code> (such as <code>Range</code>, <code>Ellipsoid</code>, <code>Star-shaped</code>, or <code>Convex Hull</code>).</p>
See Also	“Boundary Models” on page 1-21

LocalModel Properties

Purpose Edit local model properties

Syntax `Props = localmodel.Properties`

Description This is a property of the `mbcmodel.localmodel` object, which is a subclass of `mbcmodel.model`.

See “Understanding Model Structure” for an explanation of the relationship between the different response types.

Every local model object has an `mbcmodel.modelproperties` object (within the Properties property). In this object, each local model type has specific properties, as described in the following tables.

Local Polynomial Properties

Property	Description
Order	Polynomial order (vector int: {[0,Inf],2})
InteractionOrder	Maximum order of interaction terms (int: [0,Inf])
TransformInputRange	Transform inputs (Boolean)
ParameterNames	List of parameter names (read-only)
StepwiseStatus	Stepwise status { 'Always', 'Never', 'Step' } (cell)
Transform	Transform function (char) or empty (' ')

Local Polynomial Properties (Continued)

Property	Description
CovarianceModel	Covariance Model (enum: { 'None', 'Power', 'Exponential', 'Mixed' })
CorrelationModel	Correlation Model (enum: { 'None', 'MA(1)', 'AR(1)', 'AR(2)' })

Local Hybrid Spline Properties

Property	Description
Order	Spline and polynomial order (vector int: { [0,3], 2 })
SplineVariable	Spline variable
SplineInteraction	Order of interaction between spline and polynomial (int: [0,3])
Knots: Position of knots (vector real)	ParameterNames: List of parameter names (read-only)
StepwiseStatus	Stepwise status { 'Always', 'Never', 'Step' } (cell)
Transform	Transform function (char) or empty (' ')
CovarianceModel	Covariance Model (enum: { 'None', 'Power', 'Exponential', 'Mixed' })
CorrelationModel	Correlation Model (enum: { 'None', 'MA(1)', 'AR(1)', 'AR(2)' })

LocalModel Properties

Local Polynomial Spline Properties

Property	Description
HighOrder	Polynomial order above knot (int: [2, Inf])
LowOrder	Polynomial order below knot (int: [2, Inf])
Transform	Transform function (char) or empty (' ')
CovarianceModel	Covariance Model (enum: { 'None', 'Power', 'Exponential', 'Mixed' })
CorrelationModel	Correlation Model (enum: { 'None', 'MA(1)', 'AR(1)', 'AR(2)' })
DatumType	Datum Type (enum: { 'None', 'Maximum', 'Minimum', 'Linked' })

Local Polynomial With Datum Properties

Property	Description
Order	Polynomial order (int: [0, Inf])
Transform	Transform function (char) or empty (' ')
CovarianceModel	Covariance Model (enum: { 'None', 'Power', 'Exponential', 'Mixed' })

Local Polynomial With Datum Properties (Continued)

Property	Description
CorrelationModel	Correlation Model (enum: { 'None', 'MA(1)', 'AR(1)', 'AR(2)' })
DatumType	Datum Type (enum: { 'None', 'Maximum', 'Minimum', 'Linked' })

Local Free Knot Spline Properties

Property	Description
Order	Spline Order (int: [0, Inf])
NumKnots	Number of knots (int: 'Positive')
Transform	Transform function (char) or empty ('')
CovarianceModel	Covariance Model (enum: { 'None', 'Power', 'Exponential', 'Mixed' })
CorrelationModel	Correlation Model (enum: { 'None', 'MA(1)', 'AR(1)', 'AR(2)' })

Local Truncated Power Series Properties

Property	Description
Order	Polynomial order (int: 'Positive')

LocalModel Properties

Local Truncated Power Series Properties (Continued)

Property	Description
NumKnots	Number of knots (int: 'Positive')
Transform	Transform function (char) or empty (' ')
CovarianceModel	Covariance Model (enum: { 'None', 'Power', 'Exponential', 'Mixed' })
CorrelationModel	Correlation Model (enum: { 'None', 'MA(1)', 'AR(1)', 'AR(2)' })

Local Growth Properties

Property	Description
Model	Growth model (enum: { 'expgrowth', 'gomp', 'logistic', 'logistic4', 'mmf', 'richards', 'weibul' })
AlternativeModels	List of growth models (read-only)
Transform	Transform function (char) or empty (' ')
TransformBothSides	Transform both sides (Boolean)
CovarianceModel	Covariance Model (enum: { 'None', 'Power', 'Exponential', 'Mixed' })
CorrelationModel	Correlation Model (enum: { 'None', 'MA(1)', 'AR(1)', 'AR(2)' })

Local User-Defined Properties

Property	Description
Model	Name of user-defined model (enum: { 'exponential' })
AlternativeModels	List of registered user-defined models (read-only)
Transform	Transform function (char) or empty (' ')
TransformBothSides	Transform both sides (Boolean)
CovarianceModel	Covariance Model (enum: { 'None', 'Power', 'Exponential', 'Mixed' })
CorrelationModel	Correlation Model (enum: { 'None', 'MA(1)', 'AR(1)', 'AR(2)' })

Local Transient Properties

Property	Description
Model	Name of transient model (enum: { 'fuelPuddle' })
AlternativeModels	List of registered transient models (read-only)
Transform	Transform function (char) or empty (' ')
TransformBothSides	Transform both sides (Boolean)

LocalModel Properties

Local Transient Properties (Continued)

Property	Description
CovarianceModel	Covariance Model (enum: { 'None', 'Power', 'Exponential', 'Mixed' })
CorrelationModel	Correlation Model (enum: { 'None', 'MA(1)', 'AR(1)', 'AR(2)' })

Local Multiple Models Properties

Property	Description
ModelCandidates	List of candidate models (cell)
SelectionStatistic	Selection statistic for automatic model selection (char)
AutomaticInputRanges	Use data range as model input ranges (Boolean)
Transform	Transform function (char) or empty (' ')

Local Average Fit Properties

Property	Description
Model	[1x1 mbcmodel.linearmodel]
Transform	Transform function (char) or empty (' ')

Examples

To create a local model object, create a model specifying any model Type that begins with the word “local”, e.g.,

```
L = mbcmodel.CreateModel('Local Polynomial',2);
```


To show properties, at the command line enter:

```
P = L.Properties

P =
Local Polynomial Properties
      Order: [3 3]
      InteractionOrder: 3
      TransformInputRange: 1
      ParameterNames: {10x1 cell}
      StepwiseStatus: {10x1 cell}
      Transform: ''
      CovarianceModel: 'None'
      CorrelationModel: 'None'
```

To set the Order property to a quadratic, enter:

```
>> P.Order = [2,2]

P =
Local Polynomial Properties
      Order: [2 2]
      InteractionOrder: 2
      TransformInputRange: 1
      ParameterNames: {6x1 cell}
      StepwiseStatus: {6x1 cell}
      Transform: ''
      CovarianceModel: 'None'
      CorrelationModel: 'None'
```

To update the local model, the properties object must be reassigned to the model as follows:

```
>> L.Properties = P

L =
```

LocalModel Properties

```
1 + 2*X1 + 5*X2 + 3*X1^2 + 4*X1*X2 + 6*X2^2  
InputData: [0x2 double]  
OutputData: [0x1 double]  
Status: Being Edited  
Linked to Response: not linked
```

See Also

CreateModel, Type (for models), ResponseFeatures(Local Model)

Purpose	Array of local responses for response
Syntax	<code>local = response.LocalResponses</code>
Description	<p>This is a property of the <code>mbcmodel.hierarchicalresponse</code> object.</p> <p>It returns the local model response objects that belong to the hierarchical response R.</p> <p>See “Understanding Model Structure” for an explanation of the relationship between the different response types.</p>
Examples	<pre>local = response.LocalResponses;</pre>

MakeHierarchicalResponse

Purpose Build two-stage model from response feature models

Syntax `OK = MakeHierarchicalResponse(L,MLE)`

Description This method of `mbcmodel.localresponse` builds a two-stage model from the response feature models and optionally runs MLE (Maximum Likelihood Estimation). If there are more response features than the number of parameters in the local model, the subset of response features that leads to the best hierarchical response is chosen. The best hierarchical response is chosen using PRESS RMSE (root mean square prediction error — see “PRESS statistic”) if all the response feature models are linear. Otherwise, the best hierarchical response is chosen using Two-stage RMSE.

This performs a similar function to `ChooseAsBest` for response models. You can call `MakeHierarchicalResponse` directly or indirectly by calling `CreateAlternativeModels` for a local model. If you call `CreateAlternativeModels` for a local model, `MakeHierarchicalResponse` is called automatically.

If the local and response models are not ready to calculate a two-stage model, an error is generated. This situation can occur if you have created alternative models and not chosen the best. A sufficient number of response features models to calculate the two-stage model must be selected.

L is the local model object.

MLE can be true or false. If true, MLE will be calculated.

Examples `OK = MakeHierarchicalResponse(L, true)`

See Also `ChooseAsBest`

Purpose Match design constraint inputs

Syntax
C = MatchInputs(C,DesignInputs)
C = MatchInputs(C,DesignInputs,mapping)

Description MatchInputs is a method of mbcdoe.designconstraint. Use it to match inputs for constraints from different sources.
C = MatchInputs(C,DesignInputs)
C = MatchInputs(C,DesignInputs,mapping) matches inputs where mapping defines the relationship between the inputs in C, and DesignInputs.

Examples A design constraint does not have required inputs EXH_RET and INT_ADV. Use MatchInputs to match the constraint inputs to the design inputs as follows:

```
c = p.Testplans.BoundaryModel('all')
c =
  Star(N-3.5e+003,L-0.54)

originalInputs=c.Inputs
originalInputs =
  SPEED (N) [rpm] [500,6000]
  LOAD (L) [%] [0.06,0.95]

designInputs = Design.Inputs
designInputs =
  SPEED (N) [rpm] [500,6000]
  LOAD (L) [%] [0.06,0.95]
  EXH_RET (ECP) [DegCrank] [-5,50]
  INT_ADV (ICP) [DegCrank] [-5,50]

c2=MatchInputs(c,designInputs,[1 2]);
newInputs=c2.Inputs
newInputs =
  SPEED (N) [rpm] [500,6000]
```

MatchInputs

LOAD (L) [%] [0.06,0.95]
EXH_RET (ECP) [DegCrank] [-5,50]
INT_ADV (ICP) [DegCrank] [-5,50]

See Also

CreateConstraint

Purpose	Maximum of minimum of distance between design points
Syntax	<code>s = Maximin(D)</code>
Description	<p>Maximin is a method of <code>mbcdoe.design</code>.</p> <p><code>s = Maximin(D)</code> returns the maximum of the minimum distance between design points. Maximin is defined over the unconstrained design and is only available for space-filling design types.</p>
See Also	Minimax

mbcboundary.AbstractBoundary

Purpose Base boundary model class

Description Do not use this class directly because the `mbcboundary.AbstractBoundary` class is the base class for all boundary model classes in the Model-Based Calibration Toolbox™ software.

The following subclasses inherit all the properties and methods of the `mbcboundary.AbstractBoundary` class:

- `mbcboundary.Model`
- `mbcboundary.Boolean`
- `mbcboundary.PointByPoint`
- `mbcboundary.TwoStage`

Properties of `mbcboundary.AbstractBoundary`

<code>FitAlgorithm</code>	Fit algorithm for model or boundary model
<code>Fitted</code>	Indicate whether boundary model has been fitted
<code>Inputs</code>	Inputs for test plan, model, boundary model, design, or constraint
<code>Name</code>	Name of object
<code>NumberOfInputs</code>	Number of model, boundary model, or design object inputs
<code>Type (for boundary models)</code>	Boundary model type

Methods of `mbcboundary.AbstractBoundary`

<code>CreateBoundary</code>	Create boundary model
<code>designconstraint</code>	Convert boundary model to design constraint

Evaluate

Evaluate model, boundary model, or design constraint

getAlternativeTypes

Alternative model or design types

See Also

“Boundary Models” on page 1-21

mbcboundary.Boolean

Purpose Boolean boundary model class

Description You can create Boolean boundary models, which are useful as design constraints, in two ways. You can either use logical operators (&, |, ~) on other boundary models, or you can include more than one boundary model in the best boundary model for a boundary tree. If you combine boundary models using logical operators you cannot add the resulting Boolean boundary model to a boundary tree.

When working in projects, you can combine boundary models by including them `InBest`. For example, you can use subsets of input factors to build boundary models (see `ActiveFactors`). You can then combine the subset boundary models for the most accurate boundary. This approach can provide more effective results than including all inputs. If the `BestModel` property of the boundary tree includes more than one boundary model, then the boundary model is an `mbcboundary.Boolean` object.

This class is a subclass of `mbcboundary.AbstractBoundary`.

Properties of `mbcboundary.Boolean`

<code>FitAlgorithm</code>	Fit algorithm for model or boundary model
<code>Fitted</code>	Indicate whether boundary model has been fitted
<code>Inputs</code>	Inputs for test plan, model, boundary model, design, or constraint
<code>Name</code>	Name of object
<code>NumberOfInputs</code>	Number of model, boundary model, or design object inputs
<code>Type (for boundary models)</code>	Boundary model type

Methods of `mbcboundary.Boolean`

CreateBoundary	Create boundary model
designconstraint	Convert boundary model to design constraint
Evaluate	Evaluate model, boundary model, or design constraint
getAlternativeTypes	Alternative model or design types

See Also

“Boundary Models” on page 1-21

mbcboundary.Model

Purpose Boundary model class

Description The `mbcboundary.Model` class represents the basic boundary model types in the Model-Based Calibration Toolbox software.

You can fit boundary models in `mbcmodel` projects using the boundary tree class `mbcboundary.Tree`, or you can fit boundary models directly to data.

You can combine boundary models using the logical operators `&`, `|` and `~`.

This class is a subclass of `mbcboundary.AbstractBoundary`.

Properties of `mbcboundary.Model`

<code>ActiveInputs</code>	Active boundary model inputs
<code>FitAlgorithm</code>	Fit algorithm for model or boundary model
<code>Fitted</code>	Indicate whether boundary model has been fitted
<code>Inputs</code>	Inputs for test plan, model, boundary model, design, or constraint
<code>Name</code>	Name of object
<code>NumberOfInputs</code>	Number of model, boundary model, or design object inputs
<code>Type (for boundary models)</code>	Boundary model type

Methods of `mbcboundary.Model`

<code>CreateBoundary</code>	Create boundary model
<code>designconstraint</code>	Convert boundary model to design constraint

Evaluate

Evaluate model, boundary model, or design constraint

Fit

Fit model or boundary model to new or existing data, and provide summary statistics

getAlternativeTypes

Alternative model or design types

See Also

“Boundary Models” on page 1-21

mbcboundary.PointByPoint

Purpose Point-by-point boundary model class

Description You can only create and fit point-by-point boundary models in the local boundary tree in two ways. You can use either a two-stage test plan or an existing boundary of type, either 'Point-by-point' or 'Two-stage'. You cannot create or fit these types of boundary models outside a project. Fit them by adding to the boundary model to the boundary tree.

A separate boundary model is fitted to each operating point. Point-by-point boundary models are only valid at the observed operating points.

This class is a subclass of `mbcboundary.AbstractBoundary`.

Properties of `mbcboundary.PointByPoint`

<code>FitAlgorithm</code>	Fit algorithm for model or boundary model
<code>Fitted</code>	Indicate whether boundary model has been fitted
<code>Inputs</code>	Inputs for test plan, model, boundary model, design, or constraint
<code>LocalBoundaries</code>	Array of local boundary models for each operating point
<code>LocalModel</code>	Definition of local boundary model
<code>Name</code>	Name of object
<code>NumberOfInputs</code>	Number of model, boundary model, or design object inputs
<code>OperatingPoints</code>	Model operating point sites
<code>Type (for boundary models)</code>	Boundary model type

Methods of `mbcboundary.PointByPoint`

CreateBoundary	Create boundary model
designconstraint	Convert boundary model to design constraint
Evaluate	Evaluate model, boundary model, or design constraint
getAlternativeTypes	Alternative model or design types

See Also

“Boundary Models” on page 1-21

mbcboundary.Tree

Purpose Boundary tree class

Description The boundary Tree is a container for all the boundary models you create. You access the boundary tree from the Boundary property of `mbcmodel.testplan`. The root of the boundary tree for a one-stage test plan is an `mbcboundary.Tree` object. The root of the boundary tree for a two-stage test plan is a `mbcboundary.TwoStageTree`, and this object has `mbcboundary.Tree` objects in its `Local`, `Global` and `Response` properties.

Use the `Models` and `BestModel` properties of the boundary Tree to access your boundary models.

Properties of `mbcboundary.Tree`

<code>BestModel</code>	Combined best boundary models
<code>Data</code>	Array of data objects in project, boundary tree, or test plan
<code>InBest</code>	Boundary models selected as best
<code>Models</code>	Array of boundary models
<code>TestPlan</code>	Test plan containing boundary tree

Methods of `mbcboundary.Tree`

<code>Add</code>	Add boundary model to tree and fit to test plan data
<code>CreateBoundary</code>	Create boundary model
<code>Remove</code>	Remove project, test plan, model, or boundary model
<code>Update</code>	Update boundary model in tree and fit to test plan data

See Also “Boundary Models” on page 1-21

Purpose Two-stage boundary model class

Description You can only create and fit two-stage boundary models in the local boundary tree in two ways. You can use a two-stage test plan or an existing boundary of type, either 'Point-by-point' or 'Two-stage'. You cannot create or fit these types of boundary models outside a project. Fit them by adding the boundary model to the boundary tree. Local boundary model parameters are fitted using interpolating RBFs for global inputs. Two-stage boundary models are valid at any operating point.

This class is a subclass of `mbcboundary.AbstractBoundary`.

Properties of `mbcboundary.TwoStage`

<code>FitAlgorithm</code>	Fit algorithm for model or boundary model
<code>Fitted</code>	Indicate whether boundary model has been fitted
<code>GlobalModel</code>	Interpolating global boundary model definition
<code>Inputs</code>	Inputs for test plan, model, boundary model, design, or constraint
<code>LocalModel</code>	Definition of local boundary model
<code>Name</code>	Name of object
<code>NumberOfInputs</code>	Number of model, boundary model, or design object inputs
<code>Type (for boundary models)</code>	Boundary model type

Methods of `mbcboundary.TwoStage`

mbcboundary.TwoStage

CreateBoundary	Create boundary model
designconstraint	Convert boundary model to design constraint
Evaluate	Evaluate model, boundary model, or design constraint
getAlternativeTypes	Alternative model or design types
getLocalBoundary	Local boundary model for operating point

See Also

“Boundary Models” on page 1-21

Purpose

Root boundary tree class in two-stage test plans

Description

You access the boundary tree from the `Boundary` property of `mbcmodel.testplan`. The root of the boundary tree for two-stage test plans contains boundary trees (`mbcboundary.Tree` objects) for local, global and response boundary models in the `Local`, `Global` and `Response` properties respectively.

Details of properties:

- `Local` — Local boundary model tree (read only).

Point-by-point and two-stage boundary models are fitted in the local boundary model tree. These boundary models fit local boundary models for each operating point and combine into a single boundary model that includes the global inputs.

- `Global` — Global boundary model tree (read only).

Boundary models in the global model boundary tree are fitted with one point per test (the average value of the global variables for that test).

- `Response` — Response boundary model tree (read only).

Boundary models in the response model boundary tree are fitted with all local and global input data for the test plan.

- `BestModel` — Best boundary model (local, global, and response) (read only).

`BestModel` is the boundary model combining the best local, global, and response boundary models. You can select which boundary models to include in the best model with `InBest`. If the best boundary model includes more than one boundary model, that boundary model is an `mbcboundary.Boolean` object.

- `InBest` — Logical array indicating which boundary models you selected as best.

You can combine local, global, and response boundary models into a single boundary model for the test plan. The logical array specifies

mbcboundary.TwoStageTree

whether to include, in order, the best local, global, and response boundary models, in the best boundary model for the test plan. The `BestModel` property gives the best boundary model for the test plan.

- `TestPlan` — Test plan object that contains this boundary tree (read only).

Properties of `mbcboundary.TwoStageTree`

<code>BestModel</code>	Combined best boundary models
<code>Global</code>	Global boundary model tree
<code>InBest</code>	Boundary models selected as best
<code>Local</code>	Local boundary model tree
<code>Response</code>	Response for model object
<code>TestPlan</code>	Test plan containing boundary tree

See Also

“Boundary Models” on page 1-21

Purpose Merge designs

Syntax `D = Merge(D1,D2,...)`

Description Merge is a method of `mbcdoe.design`.
`D = Merge(D1,D2,...)` merges the specified designs D1, D2, etc. into a single design D. The resulting design is a custom design Style.

See Also Style; Augment

Minimax

Purpose	Minimum of maximum distance between design points
Syntax	<code>s = Minimax(D)</code>
Description	<p>Minimax is a method of <code>mbcdoe.design</code>.</p> <p><code>s = Minimax(D)</code> returns the minimum of the maximum distance between design points. Minimax is defined over the unconstrained design and is only available for space-filling designs.</p>
See Also	Maximin

Purpose Model for design

Syntax `D.Model = NewModel`

Description Model is a property of `mbcdoe.design`.
`D.Model = NewModel` changes the model for the design to `NewModel`.
The number of inputs cannot be changed. Many designs have `Limits` properties in addition to model input ranges.
Setting this property changes optimal designs to `custom` if the new model does not support optimal designs.

See Also Inputs

Model Object

Purpose Model object within response object

Syntax `M = response.Model`

Description This is a property of all `mbcmodel.response` objects.

Each response contains a model object (`mbcmodel.model`) that can be extracted and manipulated independently of the project.

Extract a model object from any response object (see `Response`), and then:

- Fit to new data ().
- Change model type, properties, and fit algorithm settings (`ModelSetup`, `Type` (for models); `Properties` (for models), `CreateAlgorithm`).
- Create a copy of the model with the same inputs (`CreateModel`).
- Include and exclude terms to improve the model (`StepwiseRegression`).
- Examine coefficient values, predicted values, and regression matrices (`ParameterStatistics`; `PredictedValue`; `Jacobian`).
- If you change the model you need to use `UpdateResponse` to replace the new model back into the response object in the project. When you use `UpdateResponse` the new model is fitted to the response data.

Examples `M = response.Model;`

Purpose Model for specified test

Syntax `mdl = ModelForTest(L,TestNo);`

Description This is a method of `mbcmodel.localresponse`.
`mdl = ModelForTest(L,TestNo);`

Examples To get the model for test 22, enter:
`mdl = ModelForTest(L,22);`

modelinput

Purpose Create modelinput object

Syntax

```
Inputs = mbcmodel.modelinput('Property1',value1,'Property2',  
    value2,...);  
Inputs = mbcmodel.modelinput(NUMINPUTS);  
Inputs = mbcmodel.modelinput(INPUTCELLARRAY);
```

Description This is the constructor for the mbcmodel.modelinput object.

```
Inputs =  
mbcmodel.modelinput('Property1',value1,'Property2',value2,...);
```

You can set the properties shown in the following table.

Property	Description
Range	[min,max]
NonlinearTransform	{'', '1./x', 'sqrt(x)', 'log10(x)', 'x.^2', 'log(x)'} }
Name	String. Signal name from data set. Inputs for a test plan must be set before selecting data.
Symbol	String. Short name for plot labels and for use in CAGE.
Units	String. Units are overwritten from the data set units when a data is selected.

Specify “property, value” pairs as follows:

```
Inputs = mbcmodel.modelinput('Symbol',{ 'A', 'B'},...  
    'Range',{[0 100],[-20 20]});
```

Scalar expansion of properties is supported, e.g.,

```
Inputs = mbcmodel.modelinput('Symbol',{ 'A', 'B'},...
```

```
'Range',[0 100]);
```

```
Inputs = mbcmodel.modelinput(NUMINPUTS);
```

NUMINPUTS is the number of inputs. Symbols are automatically set to 'X1', 'X2', ..., 'Xn'. The default range is [-1,1]. For example:

```
Inputs = mbcmodel.modelinput(2);
```

```
Inputs = mbcmodel.modelinput(INPUTCELLARRAY);
```

INPUTCELLARRAY is a cell array with one row per input and 5 columns to specify factor names, symbols, ranges and nonlinear transforms as follows.

The columns of INPUTCELLARRAY must be:

- 1** Factor symbol (string)
- 2** Minimum (double)
- 3** Maximum (double)
- 4** Transform (string) — empty for none
- 5** Signal name

These columns are the same as the columns in the Model Factor Setup dialog box, which can be launched from the test plan in the model browser.

Examples

To create a modelinput object with 2 inputs, enter:

```
Inputs = mbcmodel.modelinput(2);
```

To create a modelinput object and define symbols and ranges, enter:

```
Inputs = mbcmodel.modelinput('Symbol',{'A','B'},...
    'Range',{[0 100],[-20 20]});
```

modelinput

```
Inputs = mbcmodel.modelinput('Symbol',{ 'A','B'},...  
    'Range',[0 100]);
```

To create a modelinput object and define inputs with a cell array, enter:

```
Inputs = mbcmodel.modelinput( {...  
    'N', 800, 5000, '', 'ENGSPEED'  
    'L', 0.1, 1, '', 'LOAD'  
    'EXH', -5, 50, '', 'EXHCAM'  
    'INT', -5, 50, '', 'INTCAM'} );
```

See Also

CreateModel, CreateTestplan

Purpose	Array of boundary models
Syntax	<code>Models(T)</code>
Description	This is a property of <code>mbcboundary.Tree</code> . <code>Models(T)</code> returns a cell array of boundary models (read only).
See Also	“Boundary Models” on page 1-21

ModelSetup

Purpose Open Model Setup dialog box where you can alter model type

Syntax `[newModel, OK] = ModelSetup(oldModel)`

Description This is a method of `mbcmodel.model` objects.

This method opens the **Model Setup** dialog box where you can choose new model types and settings. If you click **Cancel** to dismiss the dialog, `OK = false` and `newModel = oldModel`. If you click **OK** to close the dialog box, then `OK = true` and `newModel` is your new chosen model setup. Data and response remain the same as `oldModel`. The new model is refitted when you click OK.

Call `UpdateResponse` to put the new model type back into the response.

Examples `[RBF, OK] = ModelSetup(Cubic);`

See Also `UpdateResponse`, `Fit`

Purpose Boolean signaling whether project has been modified

Syntax `Name = P.Modified`

Description This is a property of `mbcmodel.project`.

Examples `Name = Project.Modified;`

ModifyFilter

Purpose Modify user-defined filter in data set

Syntax `D = ModifyFilter(D, Index, expr)`

Description This is a method of `mbcmodel.data`.

You call this method to modify the expression that defines existing filters.

`D` is a data object.

`Index` is the input index to indicate which of the available filters you wish to modify. Use the property `Filters` to find the index for each filter.

`expr` is the input string holding the expression that defines the filter, as for `AddFilter`.

Examples `ModifyFilter(D, 3, 'AFR < AFR_CALC + 20');`

The effect of this filter is to modify filter number 3 to keep all records where `AFR < AFR_CALC + 20`.

```
ModifyFilter(D, 2, 'MyNewFilterFunction(AFR, RPM, TQ, SPK)');
```

This modifies filter number 2 to apply the function `MyNewFilterFunction`.

See Also `AddFilter`, `RemoveFilter`, `Filters`

Purpose Modify user-defined test filter in data set

Syntax `D = ModifyTestFilter(D, Index, expr)`

Description This is a method of `mbcmodel.data`.

You call this method to modify the expression that defines existing filters.

`D` is a data object.

`Index` is the input index to indicate which of the available test filters you wish to modify. Use the property `TestFilters` to find the index for each test filter.

`expr` is the input string holding the expression that defines the test filter, as for `AddTestFilter`.

Examples `ModifyTestFilter(d1, 2, 'any(n>2000)');`

The effect of this is to modify test filter number 2 to include all tests in which any records have speed (`n`) greater than 1000.

See Also `AddTestFilter`, `RemoveTestFilter`, `TestFilters`

ModifyVariable

Purpose Modify user-defined variable in data set

Syntax `D = ModifyVariable(D, Index, expr, units)`

Description This is a method of `mbcmodel.data`.

You call this method to modify the expression that defines existing variables.

`D` is a data object.

`Index` is the input index to indicate which of the available variables you wish to modify. Use the property `UserVariables` to find the index for each variable.

`expr` is the input string holding the expression that defines the variable, as for `AddVariable`.

`units` is an optional input string holding the units of the variable.

Examples `ModifyVariable(D, 2, 'MY_NEW_VARIABLE = TQ*AFR/2');`

See Also `AddVariable`, `RemoveVariable`, `UserVariables`

Purpose Multiple VIF matrix for linear model parameters

Syntax `VIF = MultipleVIF(LINEARMODEL)`

Description This is a method of `mbcmodel.linearmodel`.

`VIF = MultipleVIF(LINEARMODEL)` calculates the multiple Variance Inflation Factor (VIF) matrix for the linear model parameters.

Examples `VIF = MultipleVIF(knot_model)`

See Also `ParameterStatistics`

Name

Purpose Name of object

Syntax `name = A.Name`

Description This is a property of project, data, test plan, input, model, fitalgorithm, design, design constraint, and boundary model objects.

A can be any test plan (T), data (D), project (P) model (L, R, HR), fitalgorithm (F), design (D), design constraint (C) or boundary model (B) object.

You can change the names of these objects as follows:

```
A.Name = newName
```

For response (output or Y data) signal names, see [ResponseSignalName](#).

For `mbcmodel.model.Name`, the `Name` property refers to the model output name. The toolbox sets this property to the data signal name when the response is created or if you assign a model to a response. You cannot set this property when a response is attached to the model.

For model parameter names, see [Names](#).

For testplan and response object input names, see [InputSignalNames](#), and for data objects, see [SignalNames](#).

Names of boundary models are read only and provide a description of the boundary model type and active inputs.

Examples `ResponseFeatureName = thisRF.Name;`

See Also [Names](#), [InputSignalNames](#), [SignalNames](#), [ResponseSignalName](#)

Purpose Model parameter names

Syntax `N = params.Names`

Description This is a property of `mbcmodel.modelparameters`. It returns the names of all the parameters in the model. These are read-only.

Examples

```
N = paramsknot.Names
N =
'1'
'N'
'N^2'
'N*L'
'N*A'
'L'
'L^2'
'L*A'
'A'
'A^2';
```

See Also `NumberOfParameters`, `Values`, `Name`

New

Purpose Create new project file

Syntax P = New(P)

Description This is a method of `mbcmodel.project`. Use this to modify a project object to make a new project from scratch. Note the current project gets removed from memory when you open a new one.

P is the new project object.

Examples `New(P) ;`

See Also `Load`

Purpose	Number of model, boundary model, or design object inputs
Syntax	<code>N = model.NumberOfInputs</code>
Description	<p>This is a property of</p> <ul style="list-style-type: none">• <code>mbcmodel.model</code> and <code>mbcmodel.modelproperties</code>• The design objects <code>mbcdoe.design</code>, <code>mbcdoe.generator</code>, <code>mbcdoe.candidateset</code>, and <code>mbcdoe.designconstraint</code>• The boundary model object <code>mbcboundary.AbstractBoundary</code> and all its subclasses: <code>mbcboundary.Model</code>, <code>mbcboundary.Boolean</code>, <code>mbcboundary.PointByPoint</code> and <code>mbcboundary.TwoStage</code>. You set the number of boundary model inputs when you create the boundary model. <p>It returns the number of inputs to the model, boundary model, or design object.</p>
Examples	<pre>N = knot.NumberOfInputs;</pre>

NumberOfParameters

Purpose	Number of included model parameters
Syntax	<code>N = knotparams.NumberOfParameters</code>
Description	<p>This is a read-only property of <code>mbcmodel.linearmodelparameters</code>, for linear models only.</p> <p>The number returned is the number of parameters currently in the model (you can remove some parameters by using <code>StepwiseRegression</code>). To see which parameters are currently in the model, use <code>StepwiseSelection</code>. Only parameters listed as 'in' are currently included.</p> <p>To see the the total possible number of parameters in a linear model, use <code>SizeOfParameterSet</code>.</p> <p>Use <code>Names</code> and <code>Values</code> to get the parameter names and values.</p>
Examples	<pre>N = knotparams.NumberOfParameters;</pre>
See Also	<code>SizeOfParameterSet</code> , <code>StepwiseSelection</code> , <code>StepwiseRegression</code> , <code>Names</code> , <code>Values</code>

Purpose	Number of design points
Syntax	<code>D.NumberOfPoints</code>
Description	<p><code>NumberOfPoints</code> is a read only property of <code>mbcdoe.design</code> (constrained number of points).</p> <p><code>D.NumberOfPoints</code> is the number of points in the design after applying the constraints.</p> <p>You specify the number of points for a design using the generator object. The <code>NumberOfPoints</code> property of <code>mbcdoe.generator</code> is the number of points before any constraints are applied. You cannot specify the number of points for all design types (e.g., it is not allowed for Central Composite, Box Behnken). To see which design types have an editable <code>NumberOfPoints</code> property, see the tables in <code>Type</code> (for designs and generators).</p>
See Also	<code>Type</code> (for designs and generators)

NumberOfRecords

Purpose Total number of records in data object

Syntax `numRecords = D.NumberOfRecords`

Description This is a property of data objects: `mbcmodel.data`.

Examples `numRecords = Data.NumberOfRecords;`

Purpose Total number of tests being used in model

Syntax `numtests = A.NumberOfTests`

Description This is a property of all model objects: `mbcmodel.hierarchicalresponse`, `mbcmodel.localresponse` and `mbcmodel.response`, and data objects `mbcmodel.data`. 'A' can be any model or data object.

Examples `numTests = TQ_response.NumberOfTests;`

See Also `DefineTestGroups`

OperatingPoints

Purpose	Model operating point sites
Syntax	<code>OperatingPoints(B)</code>
Description	This is a property of <code>mbcboundary.PointByPoint</code> . <code>OperatingPoints(B)</code> returns the operating point sites for models (read only).
See Also	“Boundary Models” on page 1-21

Purpose

Optimal design criteria (V, D, A, G)

Syntax

```
s = OptimalCriteria(D)
s = OptimalCriteria(D,Criteria)
```

Description

`OptimalCriteria` is a method of `mbcdoe.design`. `OptimalCriteria` can only be used for optimal designs.

`s = OptimalCriteria(D)` returns an array with the values of optimal criteria [V,D,A,G].

`s = OptimalCriteria(D,Criteria)` returns the specified optimal criteria. `Criteria` must be one of V,D, A, or G.

OutlierIndices

Purpose	Indices of DoubleInputData marked as outliers
Syntax	<code>indices = OutlierIndices(R)</code>
Description	This is a method of all model objects: <code>mbcmodel.hierarchicalresponse</code> , <code>mbcmodel.localresponse</code> and <code>mbcmodel.response</code> .
Examples	<pre>ind = OutlierIndices(R); bad = OutlierIndices(thisRF);</pre>
See Also	<code>DoubleInputData</code>

- Purpose** Indices marked as outliers for test
- Syntax** `indices = OutlierIndicesForTest(R, TestNumber)`
- Description** This is a method of the local model object, `mbcmodel.localresponse`. This shows the current records discarded as outliers. You can use `'.'` to use all tests.
- Examples**
- ```
ind = OutlierIndicesForTest(R, ':');
bad = OutlierIndicesForTest(local, tn);
```
- See Also** `OutlierIndices`

# OutputData

---

|                    |                                                                                                                          |
|--------------------|--------------------------------------------------------------------------------------------------------------------------|
| <b>Purpose</b>     | Output (or response) data for model                                                                                      |
| <b>Syntax</b>      | <code>D = M.OutputData</code>                                                                                            |
| <b>Description</b> | This is a property of <code>mbcmodel1.model</code> .<br>It returns an array of the response data currently in the model. |
| <b>Examples</b>    | <code>D = knot.OutputData;</code>                                                                                        |
| <b>See Also</b>    | <code>InputData</code>                                                                                                   |



**Purpose** Object from which data was received

**Syntax** `0 = D1.Owner`

**Description** This property of `mbcmodel.data` is:

- Empty if the data was created using `mbcmodel.CreateData`
- An `mbcmodel.project` object if the data was extracted from a project
- An `mbcmodel.testplan` object if the data was extracted from a test plan

**Examples** `0 = D1.Owner;`

# Parameters

---

## **Purpose**

Model parameters

## **Syntax**

```
P = model.Parameters
```

## **Description**

This is a property of `mbcmodel.model.`, that contains an object `mbcmodel.model.parameters`. This object contains a number of read-only parameters that describe the model.

All models have these properties:

- `SizeOfParameterSet`
- `Names`
- `Values`

Linear models also have these properties:

- `StepwiseStatus`
- `NumberOfParameters`
- `StepwiseSelection`

Radial Basis Function (RBF) models have all the above properties and these additional properties:

- `Centers`
- `Widths`

## **Examples**

```
P = model.Parameters;
```

## **See Also**

`SizeOfParameterSet`, `Names`, `Values`, `StepwiseStatus`, `NumberOfParameters`, `StepwiseSelection`, `Centers`, `Widths`

|                    |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
|--------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Purpose</b>     | Calculate parameter statistics for linear model                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| <b>Syntax</b>      | <code>values = ParameterStatistics(linearmodel, optional statType)</code>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
| <b>Description</b> | <p>This is a method of <code>mbcmodel.model</code>, for linear models only. This calculates parameter statistics for the linear model. If you don't specify <code>statType</code>, then a structure with all valid types is output. <code>statType</code> may be a string specifying a particular statistic or a cell array of string specifying a number of statistics to output. If <code>statType</code> is a string, then <code>values</code> is an array of doubles. If <code>statType</code> is a cell array of strings, then <code>values</code> is a cell array of array of doubles.</p> <p>The valid types are:</p> <ul style="list-style-type: none"><li>'Alias'</li><li>'Covariance'</li><li>'Correlation'</li><li>'VIFsingle'</li><li>'VIFmultiple'</li><li>'VIFpartial'</li><li>'Stepwise'</li></ul> <p>These types (except Stepwise) appear in the Design Evaluation tool; see the documentation for this tool for details of these matrices.</p> <p>The <code>Stepwise</code> field contains the values found in the Stepwise table. In this array (and in the Stepwise GUI) you can see for each parameter in the model: the value of the coefficient, the standard error of the coefficient, the t value and Next PRESS ( the value of PRESS if the status of this term is changed at the next iteration). See the documentation for the Stepwise table. You can also see these Stepwise values when you use <code>StepwiseRegression</code>.</p> |
| <b>Examples</b>    | <pre>values = ParameterStatistics(knot) values =</pre>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |

# ParameterStatistics

---

```
Alias: [7x3 double]
Covariance: [7x7 double]
Correlation: [7x7 double]
VIFsingle: [5x5 double]
VIFmultiple: [7x1 double]
VIFpartial: [5x5 double]
Stepwise: [10x4 double]
```

```
values.Stepwise
```

```
ans =
```

```
1.0e+003 *
```

|         |        |        |        |
|---------|--------|--------|--------|
| 0.0190  | 0.0079 | 0.0210 | NaN    |
| 0.0000  | 0.0000 | 0.0210 | 1.9801 |
| 0.0000  | 0.0000 | 0.0200 | 0.2984 |
| -0.0000 | 0.0000 | 0.0200 | 0.2768 |
| 0.0000  | 0.0000 | 0.0200 | 0.2890 |
| -0.0526 | 0.0367 | 0.0210 | 0.2679 |
| 0.0911  | 0.0279 | 0.0210 | 0.3837 |
| -0.0041 | 0.0024 | 0.0210 | 0.2728 |
| -0.0178 | 0.0095 | 0.0200 | 0.2460 |
| 0.0001  | 0.0000 | 0.0210 | 0.3246 |

## See Also

StepwiseRegression

**Purpose** Partial VIF matrix for linear model parameters

**Syntax** `STATS = PartialVIF(LINEARMODEL)`

**Description** This is a method of `mbcmodel.linearmodel`.  
`STATS = PartialVIF(LINEARMODEL)` calculates the partial Variance Inflation Factor (VIF) matrix for the linear model parameters.

**Examples** `VIF = PartialVIF(knot_model)`

**See Also** `ParameterStatistics`

# PEV

---

**Purpose** Predicted error variance of model at specified inputs

**Syntax** `pev = PEV(R, X)`

**Description** This is a method of the hierarchical, local response, response, and model objects: `mbcmodel.hierarchicalresponse`, `mbcmodel.response`, and `mbcmodel.model`.

R is the model object, and X is the array of input values where you want to evaluate the PEV of the model. For a local response, the predicted value uses the hierarchical model.

Note that for an `mbcmodel.model` and `mbcmodel.response` objects only, the X is optional. That is, the syntax is:

```
PEV = PEV(model, optional X)
```

This calculates the Predicated Error Variance at X. If X is not specified, then X is the existing input values. An array is returned of PEV values evaluated at each data point.

**Examples** `pev = PEV(R, X);`

**See Also** `PEVForTest`

- Purpose** Local model predicted error variance for test
- Syntax** `pev = PEVforTest(L, TestNumber, X)`
- Description** This is a method of the local model object, `mbcmodel.localresponse`.  
L is the local model object.  
TestNumber is the test for which you want to evaluate the model PEV.  
X is the array of inputs where you want to evaluate the PEV of the model.
- Examples** `pev = PEVforTest(L, TestNumber, X);`
- See Also** PEV

# Points

---

**Purpose**

Matrix of design points

**Syntax**

```
designPoints = D.Points
```

**Description**

`Points` is a property of `mbcdoe.design`.

`designPoints = D.Points` returns the matrix of design points.

You can perform any valid MATLAB operation on this matrix. The number of columns of the points matrix must be the same as the number of inputs when setting `Points`. If you make an assignment to the `Points`, the design type changes to `Custom`. Points are only updated in the underlying design if they have changed.

**See Also**

`FixPoints`; `PointTypes`; `RemovePoints`; `NumberOfPoints`



**Purpose** Fixed and free point status

**Syntax** `D.PointTypes`

**Description** `PointType` is a property of `mbcdoe.design`. Each point has a type of `free`, `fixed` or `data`.

You can specify `fixed` points. `free` is the default. If a point has been matched to data then it is of type `data`.

`D.PointTypes` returns a cell array of `PointTypes`, one for each design point. You cannot change a `PointType` of `data` to something else as the data is set by the test plan when matching the design to data.

You can use the method `FixPoints` to fix all the points in a design.

**See Also** `FixPoints`; `Points`; `RemovePoints`

# PredictedValue

---

**Purpose** Predicted value of model at specified inputs

**Syntax**  
`y = PredictedValue(R,X)`  
`y = PredictedValue(R)`

**Description** This is a method of the hierarchical, response, local response, and model objects: `mbcmodel.hierarchicalresponse`, `mbcmodel.response`, `mbcmodel.localresponse`, and `mbcmodel.model`.

`y = PredictedValue(R,X)` evaluates the model at the specified inputs, where `R` is the model object, and `X` is the array of inputs where you want to evaluate the output of the model.

Note that for an `mbcmodel.model`, `mbcmodel.localresponse` and `mbcmodel.response` objects, the `X` is optional. If `X` is not specified then the `X` is the existing input values. That is, the syntax is:

```
y = PredictedValue(model, optional X)
```

`y = PredictedValue(R)` calculates the predicted value at the fit data. An array is returned of predicted values evaluated at each data point. For local models, this is equivalent to `y= PredictedValue(L, L.InputData)`.

Note that you cannot evaluate model output for a local response or hierarchical response until you have constructed it using `MakeHierarchicalResponse` (or `CreateAlternativeModels`). If you have created alternative response feature models then a best model must be selected. If you have made changes such as removing outliers since choosing a model as best, you may need to choose a new best model. For a local response, the predicted value uses the hierarchical model. If no data is specified then the data from all tests is used.

**Examples**  

```
y = PredictedValue(R, X);
modelPred = PredictedValue(thisRF, x);
```

**See Also** `PredictedValueForTest`, `ChooseAsBest`, `PEV`, `Evaluate`

**Purpose** Predicted local model response for test

**Syntax** `y = PredictedValueForTest(L, TestNumber, X)`

**Description** This is a method of the local model object, `mbcmodel.localresponse`.  
L is a local model object.  
TestNumber is the test for which you want to evaluate the model.  
X is the array of inputs where you want to evaluate the output of the model.

**Examples** `y = PredictedValueForTest(L, TestNumber, X);`

**See Also** `PredictedValue`

# Properties (for candidate sets)

---

**Purpose** View and edit candidate set properties

**Syntax** `properties(CS)`  
`CS.PropertyName = NewValue`

**Description** “Properties” is a method of `mbcdoe.candidateset`, which returns a list of properties.

`properties(CS)` lists the candidate set properties.

`CS.PropertyName = NewValue` sets the candidate set property.

The candidate set Type determines which properties you can set.

The following table lists the properties available for each candidate set type.

## Candidate Set Properties (for Optimal Designs)

| Candidate Set Type                                                                     | Property                                                   | Description                                                                          |
|----------------------------------------------------------------------------------------|------------------------------------------------------------|--------------------------------------------------------------------------------------|
| All built-in: Grid/<br>Lattice, Grid, Lattice,<br>Stratified Lattice,<br>Sobol, Halton | NumberOfPoints<br>(read-only for Grid<br>and Grid/Lattice) | Number of points (int:<br>[0,Inf])                                                   |
|                                                                                        | Limits                                                     | Design Limits                                                                        |
| Grid                                                                                   | Levels                                                     | Selection criteria for<br>best LHS design (cell)                                     |
|                                                                                        | NumberPerLevel                                             | Symmetric design<br>(vector int: {[ -Inf,Inf],<br>NumberOfInputs})                   |
| Lattice                                                                                | Generators                                                 | Prime number<br>generators for lattice<br>(vector int: {[0,Inf],<br>NumberOfInputs}) |

## Properties (for candidate sets)

### Candidate Set Properties (for Optimal Designs) (Continued)

| Candidate Set Type | Property       | Description                                                               |
|--------------------|----------------|---------------------------------------------------------------------------|
| Stratified Lattice | StratifyLevels | Number of levels for each factors (vector int: {[0,Inf], NumberOfInputs}) |
| Sobol Sequence     | Scramble       | Scramble method (enum: {'none', 'MatousekAffineOwen'})                    |
|                    | SkipMode       | Skip mode options (enum: {'None', '2^k', 'Custom'})                       |
|                    | Skip           | Skip size (int: [0,Inf])                                                  |
| Halton Sequence    | Scramble       | Scrambling method for sequence (enum: {'None', 'RR2'})                    |
|                    | PrimeLeap      | Leap sequence points using prime number (boolean)                         |
|                    | SkipZero       | Skip zero point (boolean)                                                 |
| User-defined       | NumberOfPoints | User-defined points (read-only)                                           |
|                    | Points         | User-defined points                                                       |

### Examples

You can use property value pairs to specify candidate set properties as part of the `CreateCandidateSet` command, or you can set properties individually.

To create a candidate set with type `grid` and specified grid levels:

## Properties (for candidate sets)

---

```
CandidateSet = augmentedDesign.CreateCandidateSet...
('Type', 'Grid');
CandidateSet.NumberOfLevels = [21 21 21 21];
```

### See Also

CreateCandidateSet

# Properties (for design constraints)

**Purpose** View and edit design constraint properties

**Syntax** `properties(C)`  
`C.PropertyName = NewValue`

**Description** “Properties” is a method of `mbcdoe.designconstraint`, which returns a list of properties.

`properties(C)` lists the constraint properties.

`C.PropertyName = NewValue` sets the constraint property.

The constraint `Type` determines which properties you can set. For more information, see the following table or `Type` (for design constraints).

The following table lists the properties available for each constraint type.

## Constraint Properties

| Constraint Type                                                                                 | Property    | Description                                                                               |
|-------------------------------------------------------------------------------------------------|-------------|-------------------------------------------------------------------------------------------|
| Linear design constraint:<br>$1 * \text{Input1} + 1 * \text{Input2} + 1 * \text{Input3} \leq 0$ | A           | Matrix for linear constraint (matrix: [1,NumberOfInputs])                                 |
|                                                                                                 | b           | Bound for linear constraint (double)                                                      |
| Ellipsoid design constraint:<br>Ellipsoid at (Input1=0, Input2=0, Input3=0)                     | CenterPoint | Center of ellipse (vector: NumberOfInputs)                                                |
|                                                                                                 | Matrix      | Ellipsoid form matrix (positive semi-definite) (matrix: [NumberOfInputs, NumberOfInputs]) |

# Properties (for design constraints)

## Constraint Properties (Continued)

| Constraint Type                                                  | Property          | Description                                             |
|------------------------------------------------------------------|-------------------|---------------------------------------------------------|
| 1D Table design constraint:<br>InputY(InputX) <= InputY max      | Table             | Table constraint (vector)                               |
|                                                                  | Breakpoints       | Breakpoints for rows (vector)                           |
|                                                                  | Inequality        | Relational Operator (enum: {'<=', '>='})                |
|                                                                  | InputFactor       | Column input symbol (enum: {'InputX', 'InputY'})        |
|                                                                  | TableFactor       | Table input symbol (enum: {'InputX', 'InputY'})         |
| 2D Table design constraint:<br>InputZ(InputX,InputY) <=InputZmax | Table             | : Table constraint (matrix)                             |
|                                                                  | RowBreakpoints    | Breakpoints for rows (vector)                           |
|                                                                  | ColumnBreakpoints | Breakpoints for columns (vector)                        |
|                                                                  | Inequality        | Relational operator (enum: {'<=', '>='})                |
|                                                                  | RowFactor         | Row input symbol (enum: {'InputX', 'InputY', 'InputZ'}) |



# Properties (for design constraints)

---

## Constraint Properties (Continued)

| Constraint Type | Property     | Description                                                |
|-----------------|--------------|------------------------------------------------------------|
|                 | ColumnFactor | Column input symbol (enum: {'InputX', 'InputY', 'InputZ'}) |
|                 | TableFactor  | Table input symbol (enum: {'InputX', 'InputY', 'InputZ'})  |

### Examples

You can use property value pairs to specify constraint properties as part of the `CreateConstraint` command, or you can set properties individually.

For examples, see `CreateConstraint`.

### See Also

`CreateConstraint`

# Properties (for design generators)

---

**Purpose** View and edit design generator properties

**Syntax**  
`properties(Generator)`  
`Generator.PropertyName = NewValue`

**Description** “properties” (lower case p) is a method of `mbcdoe.generator`, which returns a list of properties.

`properties(Generator)` lists the generator properties.

`Generator.PropertyName = NewValue` sets the generator property.

The design generator object `Type` determines which properties you can set. For more information, see `Type (for designs and generators)`.

The settings are applied immediately, you do not need to call `generate` on the design object.

The following tables list the properties available for each design type.

## Optimal Design Properties (D-, V- and A-Optimal)

| Property        | Description                                            |
|-----------------|--------------------------------------------------------|
| NumberOfPoints  | Number of points (int: [0,Inf])                        |
| InitialPoints   | Initial design points (Matrix)                         |
| CandidateSet    | Candidate set<br>( <code>mbcdoe.candidateset</code> )  |
| AllowReplicates | Allow replicate points (boolean)                       |
| AugmentMethod   | Methods to add points (enum:<br>{'random', 'optimal'}) |
| Tolerance       | Tolerance (numeric: 'positive')                        |
| MaxIterations   | Maximum Iterations (int:<br>'positive')                |

# Properties (for design generators)

## Optimal Design Properties (D-, V- and A-Optimal) (Continued)

| Property              | Description                                                                                    |
|-----------------------|------------------------------------------------------------------------------------------------|
| NumberOfPointsToAlter | Number of points to alter per iteration using the random augment method (p) (int: 'positive')  |
| NoImprovement         | Number of iterations with no improvement using the random augment method (p) (int: 'positive') |

**Note** Optimal designs have dependencies between `NumberOfPoints`, `InitialPoints` and `CandidateSets`. When you change `NumberOfPoints`, an initial point is drawn from the existing candidate set. Setting `NumberOfPoints` updates `InitialPoints`. Likewise setting `InitialPoints` updates `NumberOfPoints`. When changing the candidate set a new initial design is drawn from the new candidate set.

## Space-Filling Design Properties

| Design Type                                                                                                   | Property        | Description                                                              |
|---------------------------------------------------------------------------------------------------------------|-----------------|--------------------------------------------------------------------------|
| All space-filling design types (Lattice, Latin Hypercube Sampling, Stratified Latin Hypercube, Sobol, Halton) | NumberOfPoints  | Number of points (int: [0,Inf])                                          |
|                                                                                                               | Limits          | Design Limits (matrix: [NumberOfInputs,2])                               |
| Lattice                                                                                                       | PrimeGenerators | Prime number generators for lattice for each input (vector int: [0,Inf]) |

# Properties (for design generators)

## Space-Filling Design Properties (Continued)

| Design Type                                             | Property          | Description                                                                                                       |
|---------------------------------------------------------|-------------------|-------------------------------------------------------------------------------------------------------------------|
| Latin Hypercube Sampling and Stratified Latin Hypercube | SelectionCriteria | Selection criteria for best LHS design (enum: {'discrepancy', 'minimax', 'maximin', 'cdfvariance', 'cdfmaximum'}) |
|                                                         | Symmetry          | Symmetric design (boolean)                                                                                        |
| Stratified Latin Hypercube                              | StratifyLevels    | Number of levels for each factors (vector int: {[0,Inf], NumberOfInputs})                                         |
|                                                         | StratifyValues    | Stratify levels (cell)                                                                                            |
| Sobol Sequence                                          | Scramble          | Scramble method (enum: {'none', 'MatousekAffineOwen'})                                                            |
|                                                         | SkipMode          | Skip mode options (enum: {'None', '2^k', 'Custom'})                                                               |
|                                                         | Skip              | Skip size (int: [0,Inf])                                                                                          |

# Properties (for design generators)

## Space-Filling Design Properties (Continued)

| Design Type     | Property  | Description                                            |
|-----------------|-----------|--------------------------------------------------------|
| Halton Sequence | Scramble  | Scrambling method for sequence (enum: {'None', 'RR2'}) |
|                 | PrimeLeap | Leap sequence points using prime number (boolean)      |
|                 | SkipZero  | Skip zero point (boolean)                              |

## Classical Design Properties

| Design Type                                                                            | Property                   | Description                            |
|----------------------------------------------------------------------------------------|----------------------------|----------------------------------------|
| All (Box-Behnken, Central Composite, Full Factorial, Plackett-Burman, Regular Simplex) | NumberOfPoints (read-only) | Number of points (int: [0,Inf])        |
|                                                                                        | Limits                     | Design limits                          |
| All except Plackett-Burman                                                             | NumberOfCenterPoints       | Number of center points (int: [0,Inf]) |

# Properties (for design generators)

---

## Classical Design Properties (Continued)

| Design Type       | Property       | Description                                                                          |
|-------------------|----------------|--------------------------------------------------------------------------------------|
| Central Composite | StarPoints     | Star point position (enum: {'FaceCenteredCube', 'Spherical', 'Rotatable', 'Custom'}) |
|                   | Inscribe       | Inscribe points (boolean)                                                            |
|                   | Alpha          | Star point location (vector: {'positive', NumberOfInputs})                           |
| Full Factorial    | Levels         | Cell array of levels for each input (cell)                                           |
|                   | NumberOfLevels | Number of levels for each input (vector int: {'positive', NumberOfInputs})           |

## Examples

You can use property value pairs to specify design generator properties as part of the `Generate` and `Augment` commands. You can also set properties individually. Some examples:

To create a full factorial design and specify the number of levels when generating the design:

```
design = CreateDesign(inputs, 'Type', 'Full Factorial');
design = Generate(design, 'NumberOfLevels', [50 50]);
```

To create a latin hypercube sampling design:

```
globalDesign = TP.CreateDesign(2,...
'Type', 'Latin Hypercube Sampling');
```

## Properties (for design generators)

---

To create and generate a halton design with 50 points:

```
haltonDesign = CreateDesign(inputs, 'Type',...
 'Halton Sequence', 'Name', 'Halton');
haltonDesign = Generate(haltonDesign, 50);
```

To explicitly specify the NumberOfPoints property:

```
haltonDesign = Generate(haltonDesign, 'NumberOfPoints', 50);
```

To create and generate a halton design with specified scrambling and other properties:

```
haltonDesignWithScrambling = haltonDesign.CreateDesign...
 ('Name', 'Scrambled Halton');
haltonDesignWithScrambling = Generate...
 (haltonDesignWithScrambling,...
 'Scramble', 'RR2', 'PrimeLeap', true);
```

To generate an optimal design with specified properties:

```
OptDesign = Generate(OptDesign,...
 'Type', 'V-optimal',...
 'CandidateSet', C,...
 'MaxIterations', 200,...
 'NoImprovement', 50,...
 'NumberOfPoints', 200);
```

The previous code is equivalent to setting the properties individually and then calling Generate as follows:

```
P = OptDesign.Generator;
P.Type = `V-optimal';
P.CandidateSet.NumberOfLevels(:)=21;
P.MaxIterations = 200;
P.NumberOfPoints = 200;
P.NoImprovement = 50;
OptDesign.Generator = P;
```

## Properties (for design generators)

---

To augment a design optimally with 20 points:

```
OptDesign = Augment(OptDesign,...
 'Type','V-optimal',...
 'MaxIterations',200,...
 'NoImprovement', 50,...
 'NumberOfPoints',20);
```

### **See Also**

CreateDesign; Generate; Augment; Properties (for candidate sets); Properties (for design constraints)



|                    |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
|--------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Purpose</b>     | View and edit model properties                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| <b>Syntax</b>      | <pre>properties=M.Properties M.Properties.PropertyName = NewValue properties(M.Properties) f=M.Properties.properties</pre>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| <b>Description</b> | <p>“Properties” is a property of <code>mbcmodel.model</code>.</p> <p><code>properties=M.Properties</code> returns a <code>mbcmodel.modelproperties</code> object.</p> <p>To edit a property, use the syntax <code>M.Properties.PropertyName = NewValue</code></p> <p>“properties” is a method of <code>mbcmodel.fitalgorithm</code> and <code>mbcmodel.modelproperties</code> which returns a list of properties.</p> <p><code>properties(M.Properties)</code> lists the property names, types and allowed values.</p> <p><code>f=M.Properties.properties</code> returns the property names as a cell array.</p> <p>The model Type determines which properties you can set. For more information, see <a href="#">Type (for models)</a>.</p> <p>To get a <code>mbcmodel.modelproperties</code> object from a model:</p> <pre>&gt;&gt; M = mbcmodel.CreateModel('Polynomial', 4); &gt;&gt; disp(M) mbcmodel.linearmodel:Polynomial  &gt;&gt;modelproperties=M.Properties  modelproperties = Polynomial Properties                 Order: [3 3 3 3]     InteractionOrder: 3     TransformInputRange: 1</pre> |

# Properties (for models)

---

```
ParameterNames: {35x1 cell}
StepwiseStatus: {35x1 cell}
BoxCox: 1
```

To create a model and list the properties:

```
>> M = mbcmodel.CreateModel('RBF',2)
```

```
M =
```

```
A radial basis function network using a multiquadric kernel
with 0 centers
and a global width of 2.
The regularization parameter, lambda, is 0.0001.
InputData: [0x2 double]
OutputData: [0x1 double]
Status: Not fitted
Linked to Response: <not linked>
```

```
>> properties(M.Properties)
```

```
RBF Properties
```

```
Kernel: RBF kernel (enum: {'multiquadric',...
'recmultiquadric','gaussian','thinplate','logisticrbf',...
'wendland','linearrbf','cubicrbf'})
Continuity: Continuity for Wendland kernel...
(0,2,4,6) (int: [0,6])
ParameterNames: List of parameter names (read-only)
StepwiseStatus: Stepwise status {'Always','Never',...
'Step'} (cell)
BoxCox: Box-Cox transform (power) (numeric: [-3,3])
```

The following syntax returns the properties as a cell array:

```
>> f=M.Properties.properties
```

```
f =
```

```
'Kernel'
```

```
'Continuity'
'ParameterNames'
'StepwiseStatus'
'BoxCox'
```

Change a property as follows:

```
>>M.Properties.Kernel = 'thinplate';
```

The model changes state to 'Being Edited'. The settings are not applied until you call Fit on the model object.

The following sections list the properties available for each model type.

## **Linear Models – Polynomial Properties**

mbcmodel.linearmodel:Polynomial

Order: Polynomial order (vector int: {[0,Inf],NumberOfInputs})

InteractionOrder: Maximum order of interaction terms (int: [0,Inf])

TransformInputRange: Transform inputs (Boolean)

ParameterNames: List of parameter names (read-only)

StepwiseStatus: Stepwise status {'Always','Never','Step'} (cell)

BoxCox: Box-Cox transform (power) (numeric: [-3,3])

## **Linear Models – Hybrid Spline Properties**

mbcmodel.linearmodel:Hybrid Spline

Order: Spline and polynomial order (vector int: {[0,3],NumberOfInputs})

SplineVariable: Spline variable

SplineInteraction: Order of interaction between spline and polynomial (int: [0,3])

Knots: Position of knots (vector real)

ParameterNames: List of parameter names (read-only)

# Properties (for models)

---

StepwiseStatus: Stepwise status {'Always','Never','Step'} (cell)

BoxCox: Box-Cox transform (power) (numeric: [-3,3])

## **Linear Models – RBF Properties**

mbcmodel.linearmodel:RBF

Kernel: RBF kernel (enum: {'multiquadric','recmultiquadric','gaussian','thinplate','logisticrbf','wendland','linearrbf','cubicrbf'})

Continuity: Continuity for Wendland kernel (0,2,4,6) (int: [0,6])

ParameterNames: List of parameter names (read-only)

StepwiseStatus: Stepwise status {'Always','Never','Step'} (cell)

BoxCox: Box-Cox transform (power) (numeric: [-3,3])

## **Linear Models – Polynomial-RBF Properties**

mbcmodel.linearmodel:Polynomial-RBF

Order: Polynomial order (vector int: {[0,Inf],NumberOfInputs})

InteractionOrder: Maximum order of interaction terms (int: [0,Inf])

Kernel: RBF kernel (enum: {'multiquadric','recmultiquadric','gaussian','thinplate','logisticrbf','wendland','linearrbf','cubicrbf'})

Continuity: Continuity for Wendland kernel (0,2,4,6) (int: [0,6])

ParameterNames: List of parameter names (read-only)

StepwiseStatus: Stepwise status {'Always','Never','Step'} (cell)

BoxCox: Box-Cox transform (power) (numeric: [-3,3])

## **Linear Models – Hybrid Spline-RBF Properties**

mbcmodel.linearmodel:Hybrid Spline-RBF

Order: Spline and polynomial order (vector int: {[0,3],NumberOfInputs})

SplineVariable: Spline variable

SplineInteraction: Order of interaction between spline and polynomial (int: [0,3])

Knots: Position of knots (vector real)

Kernel: RBF kernel (enum: {'multiquadric', 'recmultiquadric', 'gaussian', 'thinplate', 'logisticrbf', 'wendland', 'linearrbf', 'cubicrbf'})

Continuity: Continuity for Wendland kernel (0,2,4,6) (int: [0,6])

ParameterNames: List of parameter names (read-only)

StepwiseStatus: Stepwise status {'Always', 'Never', 'Step'} (cell)

BoxCox: Box-Cox transform (power) (numeric: [-3,3])

## **Nonlinear Models – Free Knot Spline Properties**

mbcmodel.model:Free Knot Spline

Order: Spline order (int: [0,3])

NumKnots: Number of knots (int: 'Positive')

## **Nonlinear Models – Neural Network Properties**

mbcmodel.model:Neural Network

HiddenLayers: Number of hidden layers (int: [1,2])

Neurons: Number of Neurons in each hidden layer (vector int: 'Positive')

## **Examples**

```
>> properties=M.Properties

properties =
Polynomial Properties
 Order: [3 3 3 3]
InteractionOrder: 3
TransformInputRange: 1
ParameterNames: {35x1 cell}
StepwiseStatus: {35x1 cell}
```

# Properties (for models)

---

BoxCox: 1

```
>> M.Properties.Order = [3 2 2 3]
```

```
M =
```

```
1 + 2*X1 + 10*X4 + 15*X2 + 18*X3 + 3*X1^2 + 6*X1*X4
...+ 8*X1*X2 + 9*X1*X3 +
11*X4^2 + 13*X4*X2 + 14*X4*X3 + 16*X2^2 + 17*X2*X3
...+ 19*X3^2 + 4*X1^3 +
5*X1^2*X4 + 7*X1*X4^2 + 12*X4^3
InputData: [0x4 double]
OutputData: [0x1 double]
Status: Being Edited
Linked to Response: <not linked>
```

## See Also

Type (for models), LocalModel Properties

**Purpose**            Number of records in each test

**Syntax**            `numRecords = D.RecordsPerTest`

**Description**        This is a property of data objects: `mbcmodel.data`. It returns an array, of length `NumberOfTests`, containing the number of records in each test.

**Examples**            `numRecords = D.RecordsPerTest;`

# Remove

---

**Purpose** Remove project, test plan, model, or boundary model

**Syntax** OK = Remove(A)

**Description** This is a method of all the nondata objects: projects, test plans, all models, and boundary trees.

A can be any project, test plan, or model object.

You cannot remove datum models if other models use them.

For boundary trees, specify which boundary model to remove:  
Remove(BoundaryTree, Index).

**Examples** OK = Remove(R3);



**Purpose** Remove data from project

**Syntax** P = RemoveData(P, D)  
P = RemoveData(P, Index)

**Description** This is a method of `mbcmodel.project`.  
You can refer to the data object either by name or index.  
P is the project object.  
D is the data object you want to remove.  
Index is the index of the data object you want to remove.

**Examples** `RemoveData(P, D);`

**See Also** `CreateData`, `Data`, `CopyData`

# RemoveDesign

---

**Purpose** Remove design from test plan

**Syntax** RemoveDesign(T,Name)  
RemoveDesign(T,Level,Name)  
RemoveDesign(T,D)  
RemoveDesign(T,Level,D)

**Description** RemoveDesign is a method of `mbcmodel.testplan`.

RemoveDesign(T,Name) removes a design with a matching name from the test plan T.

Name can be a string, or a cell array of strings.

RemoveDesign(T,Level,Name) removes a design with a matching name from the specified level of the test plan. By default the level is the outer level (i.e., Level 1 for one-stage, Level 2 (global) for two-stage).

RemoveDesign(T,D) removes D, an array of designs to be deleted. All designs with matching names are deleted.

RemoveDesign(T,Level,D) removes D from the specified level.

**See Also** AddDesign; UpdateDesign; FindDesign

**Purpose** Remove user-defined filter from data set

**Syntax** `D = RemoveFilter(D, Index)`

**Description** This is a method of the `mbcmodel.data` object.  
`Index` is the input index indicating the filter to remove. Use the property `Filters` to find out which filters are present.

**Examples** `RemoveFilter(D1, 3);`

**See Also** `AddFilter`, `Filters`

# RemoveOutliers

---

**Purpose** Remove outliers in input data by index or rule, and refit models

**Syntax** `R = RemoveOutliers(R, Selection);`  
`R = RemoveOutliers(L, LocalSelection, GlobalSelection)`

**Description** This is a method of the local model object, `mbcmodel.localresponse` and the response feature model object `mbcmodel.response`.

All the response feature models are refitted after the local models are refitted. Outlier selection is applied to all tests.

For a response model:

- `R` is a response object.
- `Selection` specifies either a set of indices or the name of an outlier selection function, of the following form:

```
Indices = myMfile(model, data, factorName)
```

The factors are the same as defined in `DiagnosticStatistics`.

- `data` contains the factors as columns of a matrix.
- `factorNames` is a cell array of the names for each factor.

For a local model:

- `LocalSelection` is the local outlier selection indices or function.
- `GlobalSelection` is the global outlier selection indices or function.

Outlier selection functions must conform to this prototype:

```
Indices = myMfile(model, data, factorName)
```

The factors are the same as appear in the scatter plot in the Model Browser.

- `data` contains the factors as columns of a matrix.

- factorNames is a cell array of the names for each factor.

## Examples

```
outlierind = [1 4 6 7];
RemoveOutliers(thisRF, outlierind);
```

## See Also

RemoveOutliersForTest

# RemoveOutliersForTest

---

**Purpose** Remove outliers on test by index or rule and refit models

**Syntax**

```
L = RemoveOutliersForTest(LOCALRESPONSE, TESTNUMBER,
 LOCALSELECTION)
L = RemoveOutliersForTest(LOCALRESPONSE, TESTNUMBER,
 LOCALSELECTION, doUpdate)
```

**Description** This is a method of `mbcmodel.localresponse`.

`L = RemoveOutliersForTest(LOCALRESPONSE, TESTNUMBER, LOCALSELECTION)` removes outliers, refits the local model, and refits the response feature models.

`L = RemoveOutliersForTest(LOCALRESPONSE, TESTNUMBER, LOCALSELECTION, doUpdate)` removes outliers and if `doUpdate` is true, refits all response features after the local model is refitted.

`TESTNUMBER` is the single test number to refit.

`LOCALSELECTION` can either be a set of indices or a function name.

An outlier selection function must take the following form:

```
INDICES = MYMFILE(MODEL, DATA, FACTORNAME);
```

The factors are the same as defined in `DiagnosticStatistics`.

`DATA` contains the factors as columns of a matrix, and `FACTORNAME` is a cell array of the names for each factor.

**Examples** For a local response `LOCALRESPONSE`, to remove first two data points and do not update response features:

```
RemoveOutliersForTest(LOCALRESPONSE, 1, 1:2, false);
```

To find list of indices of removed data points:

```
indices = OutliersForTest(LOCALRESPONSE, 1);
```

To restore first data point:

```
RestoreDataForTest (LOCALRESPONSE, 1, 1, false);
```

To restore all data:

```
RestoreDataForTest (LOCALRESPONSE, 1, ': ', false);
```

To update response features:

```
UpdateResponseFeatures (LOCALRESPONSE);
```

## See Also

UpdateResponseFeatures, RestoreDataForTest,  
OutlierIndicesForTest, RemoveOutliers

# RemovePoints

---

**Purpose** Remove all nonfixed design points

**Syntax**  
D = RemovePoints(D)  
D = RemovePoints(D,PointType)  
D = RemovePoints(D,indices)

**Description** RemovePoints is a method of `mbcdoe.design`.  
D = RemovePoints(D) removes all nonfixed points from the design.  
D = RemovePoints(D,PointType) removes the specified type of points, where PointType is one of 'free', 'fixed' or 'data'.  
D = RemovePoints(D,indices) removes the points specified by indices.

**Examples** To remove all free points:  

```
Design = RemovePoints(Design,'free');
```

**See Also** FixPoints



**Purpose** Remove user-defined test filter from data set

**Syntax** `D = RemoveTestFilter(D, Index)`

**Description** This is a method of `mbcmodel.data`.  
D is the data object.  
Index is the input index indicating the filter to remove.  
Use the property `TestFilters` to find the index of the test filter you want to remove.

**Examples** `RemoveTestFilter(D1, 2);`

**See Also** `AddTestFilter`, `TestFilters`

# RemoveVariable

---

**Purpose** Remove user-defined variable from data set

**Syntax** `D = RemoveVariable(D, Index)`

**Description** This is a method of `mbcmodel.data`.

D is the data object.

Index is the input index indicating the variable to remove.

Use `UserVariables` to find the index of the variable you want to remove.

**Examples** `RemoveVariable(D1, 2);`

**See Also** `AddVariable`, `UserVariables`

**Purpose** Response for model object

**Syntax** `R = model.Response`

**Description** *Models.* This is a property of `mbcmodel.model`. It returns the response the model object came from (e.g. a response object).

If you make changes to the model object (for example by changing the model type using `ModelSetup`, or using `StepwiseRegression`) you must use `UpdateResponse` to return the new model object to the response in the project.

*Boundary models.* This is a property of `mbcboundary.TwoStageTree`.

The `Response` property contains a response boundary model tree (read only). Boundary models in the response model boundary tree are fitted with all local and global input data for the test plan.

**Examples** `R = model.Response;`

**See Also** `UpdateResponse`, `ModelSetup`

# ResponseFeatures(Local Model)

---

**Purpose** Set of response features for local model

**Syntax** `RFs = L.ResponseFeatures`

**Description** This is a property of the local model object, `mbcmodel.localmodel`.  
`RFs = L.ResponseFeatures` returns a `mbcmodel.responsefeatures` object. `L` is the local model.

See “Understanding Model Structure” in the Getting Started documentation for an explanation of the relationships between local models, local responses, and other responses.

Available properties and methods are described in the following tables.

| Property                 | Description                                                                                                                                                                                                                                                                  |
|--------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| EvaluationPoints         | Cell array of evaluation points for the response feature set (read-only). An element of <code>EvaluationPoints</code> is empty if the response feature does not use the Evaluation point. This property is set up when the response feature is created (see the Add method). |
| Types                    | Cell array of types for response feature set (read-only). This property is set up when the response feature is created (see the Add method).                                                                                                                                 |
| NumberOfResponseFeatures | Number of response features in set (read-only).                                                                                                                                                                                                                              |
| IsFitted                 | The local model has been fitted.                                                                                                                                                                                                                                             |

# ResponseFeatures(Local Model)

| Method        | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
|---------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Add           | <p>Add new response feature to response feature set</p> <p><code>RF = Add(RF, RFtype)</code></p> <p><code>RFtype</code> is a description string belonging to the set of alternative response features. See <code>getAlternativeTypes</code>.</p> <p><code>RF = Add(RF, RFtype, EvaluationPoint)</code></p> <p><code>EvaluationPoint</code> is a row vector with an element for each model input and is used for response features that require an input value to evaluate the response feature (e.g., function evaluation, derivatives). It is an error to specify an evaluation point for a response feature type that does not require an evaluation point.</p> |
| Remove        | <p>Remove a response feature from the response feature set</p> <p><code>RF = Remove(RF, index)</code></p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| Select        | <p>Select a subset of response features from the response feature set</p> <p><code>RF = Select(RF, indices)</code></p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| getDefaultSet | <p>List of default response features</p> <p><code>RF = getDefaultSet(RF)</code></p> <p>Returns an <code>mbcmodel.responsefeatures</code> object with the default set of response features for the local model.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                |

## ResponseFeatures(Local Model)

---

| Method              | Description                                                                                                                                                                                                                                                                                                                                                       |
|---------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| getAlternativeTypes | <p>List of all alternative response feature types for local model</p> <pre>RFtypes = getAlternativeTypes(RF)</pre> <p>Returns a cell array of response feature type strings for the local model.</p>                                                                                                                                                              |
| Evaluate            | <p>Evaluate response features</p> <pre>rfvals = Evaluate(RF);</pre> <p>Returns the values for the response features for the current local model.</p> <pre>[rfvals,stderr] = Evaluate(RF)</pre> <p>Also returns the standard errors for the response features for the current local model. The local model must be fitted before evaluating response features.</p> |
| Jacobian            | <p>Jacobian matrix of response features with respect to parameters</p> <pre>J = Jacobian(RF)</pre> <p>The local model must be fitted before calculating the Jacobian matrix.</p>                                                                                                                                                                                  |
| Covariance          | <p>Covariance matrix for response features</p> <pre>rfvals = Covariance(RF);</pre> <p>The local model must be fitted before calculating the covariance matrix.</p>                                                                                                                                                                                                |

# ResponseFeatures(Local Model)

| Method          | Description                                                                                                                                                                                                                                                                                                      |
|-----------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Correlation     | Correlation matrix for response features<br><br><code>rfvals = Correlation(RF)</code><br><br>Errors occur if model is not fitted.                                                                                                                                                                                |
| ReconstructSets | List of subsets of response features which can be used to reconstruct the local model<br><br><code>RFlist = ReconstructSets(RF)</code><br><br>RFlist is a cell array of <code>mbcmodel.responsefeatures</code> . Each element of RFlist can be used to reconstruct the local model from response feature values. |

## Examples

First, create a local model object:

```
L = mbcmodel.CreateModel('Local Polynomial',2)
```

```
L =
```

```
 1 + 2*X1 + 8*X2 + 3*X1^2 + 6*X1*X2 + 9*X2^2 + 4*X1^3...
+ 5*X1^2*X2 + 7*X1*X2^2 +
 10*X2^3
 InputData: [0x2 double]
 OutputData: [0x1 double]
 Status: Not fitted
 Linked to Response: not linked
```

The properties of the local model object are the same as the properties of an `mbcmodel.model` object with the additional property “ResponseFeatures”. Look at the response features property as follows:

## ResponseFeatures(Local Model)

---

```
>> RFs = L.ResponseFeatures

RFs =

Response features for Polynomial
 'Beta_1'
 'Beta_X1'
 'Beta_X1^2'
 'Beta_X1^3'
 'Beta_X1^2*X2'
 'Beta_X1*X2'
 'Beta_X1*X2^2'
 'Beta_X2'
 'Beta_X2^2'
 'Beta_X2^3'

% Set up response features
RFtypes = getAlternativeTypes(RFs);
RF = Add(RF, RFtypes{end}, -10);

% assign to local model
L.ResponseFeatures = RFs;
```



# ResponseFeatures(Local Response)

---

|                    |                                                                                                                                                                                                                                                                                             |
|--------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Purpose</b>     | Array of response features for local response                                                                                                                                                                                                                                               |
| <b>Syntax</b>      | <code>RFs = L.ResponseFeatures</code>                                                                                                                                                                                                                                                       |
| <b>Description</b> | <p>This is a property of the local model object, <code>mbcmodel.localresponse</code>.<br/>L is the local response.</p> <p>See “Understanding Model Structure” in the Getting Started documentation for an explanation of the relationships between local responses and other responses.</p> |
| <b>Examples</b>    | <code>RFs = Local.ResponseFeatures;</code>                                                                                                                                                                                                                                                  |

# ResponseSignalName

---

|                    |                                                                                                                                                                                                                                                 |
|--------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Purpose</b>     | Name of signal or response feature being modeled                                                                                                                                                                                                |
| <b>Syntax</b>      | <code>ysignal = R.ResponseSignalName</code>                                                                                                                                                                                                     |
| <b>Description</b> | <p>This is a property of all response objects:<br/><code>mbcmodel.hierarchicalresponse</code>, <code>mbcmodel.localresponse</code> and <code>mbcmodel.response</code>.</p> <p>R can be a hierarchical response, local response or response.</p> |
| <b>Examples</b>    | <code>yName = local.ResponseSignalName;</code>                                                                                                                                                                                                  |
| <b>See Also</b>    | <code>InputSignalNames</code>                                                                                                                                                                                                                   |

**Purpose**            Array of available responses for test plan

**Syntax**            `R = T.Responses`

**Description**        This is a property of `mbcmodel.testplan`.  
T is the test plan object.

See “Understanding Model Structure” for an explanation of the relationship between test plans and responses.

**Examples**            `R = T.Responses;`

# RestoreData

---

**Purpose**

Restore removed outliers

**Syntax**

```
R = RestoreData(RESPONSE)
R = RestoreData(RESPONSE, OUTLIERINDICES)
```

**Description**

This is a method of `mbcmodel.localresponse` and `mbcmodel.response`.

`R = RestoreData(RESPONSE)` restores all data previously removed as outliers.

`R = RestoreData(RESPONSE, OUTLIERINDICES)` restores all removed data specified in `OutlierIndices`. For a local response, the indices refer to record numbers for all tests.

**Examples**

```
RemoveOutliers(R, 1:5)
RestoreData(R, 1:2)
```

**See Also**

`RemoveOutliersForTest`, `RemoveOutliers`, `OutlierIndices`

## Purpose

Restore removed outliers for test

## Syntax

```
L = RestoreDataForTest(LOCALRESPONSE, TESTNUMBER, Indices)
L = RestoreDataForTest(LOCALRESPONSE, TESTNUMBER, Indices,
 doUpdate)
```

## Description

This is a method of `mbcmodel.localresponse`.

`L = RestoreDataForTest(LOCALRESPONSE, TESTNUMBER, Indices)` restores all removed data for `TESTNUMBER` specified in `Indices`.

`L = RestoreDataForTest(LOCALRESPONSE, TESTNUMBER, Indices, doUpdate)` restores all specified removed data and if `doUpdate` is true, refits all response features. By default, all response feature models will be updated. If a number of tests are being screened it is more efficient to set `doUpdate` to false and call `UpdateResponseFeatures` when all the tests have been screened.

`Indices` must be numbers and must belong to the set of outliers in `OutliersForTest`.

## Examples

For a local response `LOCALRESPONSE`, to remove first two data points without updating response features:

```
RemoveOutliersForTest(LOCALRESPONSE, 1, 1:2, false);
```

To find list of indices of removed data points:

```
indices = OutliersForTest(LOCALRESPONSE, 1);
```

To restore first data point:

```
RestoreDataForTest(LOCALRESPONSE, 1, 1, false);
```

To restore all data:

```
RestoreDataForTest(LOCALRESPONSE, 1, ' ', false);
```

To update response features:

# RestoreDataForTest

---

```
UpdateResponseFeatures(LOCALRESPONSE);
```

## **See Also**

UpdateResponseFeatures, RemoveOutliersForTest,  
OutlierIndicesForTest

**Purpose** Undo most recent changes to data

**Syntax** `D = RollbackEdit(D)`

**Description** This is a method of `mbcmodel.data`. Use this if you change your mind about changes you have made to the data since you called `BeginEdit`, such as importing or appending data, applying filters or creating new user variables.

There are no input arguments. If for your data object `D`, `IsBeingEdited` is true, then `RollbackEdit` will return it to the same state as it was when `BeginEdit` was called. If `IsEditable(D)` is true then you can still modify it, if not it will revert to being read-only. See the example below.

## Examples

```
D = P.Data;
BeginEdit(D);
AddVariable(D, 'TQ = tq', 'lbft');
AddFilter(D, 'TQ < 200');
DefineTestGroups(D, {'RPM' 'AFR'}, [50 10], 'MyLogNo');
RollbackEdit(D);
```

This returns the data object `D` to the same state as when `BeginEdit` was called. If the data object `IsEditable` then the returned object will still return true for `IsBeingEdited`, else it will not be editable.

For an example case where `IsEditable` is false and `IsBeingEdited` is true:

```
D = p.Data;
D1 = p.Data;
BeginEdit(D1);
tp = p.Testplan;
Attach(tp, D);
```

Where `p` is an `mbcmodel.project` object, and `D` and `D1` are `mbcmodel.data` objects.

## RollbackEdit

---

At this point `IsEditable` for `D1` becomes false because it is now Attached to the test plan and hence can only be modified from the test plan. However

```
OK = D1.IsBeingEdited
```

will still be true at this point, and trying to call `CommitEdit` will fail.

### **See Also**

`BeginEdit`, `CommitEdit`, `IsBeingEdited`



**Purpose** Save project

**Syntax** OK = Save(P)  
OK = Save(P, *filename*)

**Description** This is a method of `mbcmodel.project`.  
  
OK = Save(P) saves the project P to the currently selected `Filename`. The project `Name` is used as the `Filename` if none has previously been specified. If neither has been specified then you see a warning that your project has been saved to `Untitled.mat`.  
  
OK = Save(P, *filename*) saves the project P with the name specified by *filename*.

**Examples** OK = Save(proj, 'Example.mat');

**See Also** SaveAs

# SaveAs

---

|                    |                                              |
|--------------------|----------------------------------------------|
| <b>Purpose</b>     | Save project to new file                     |
| <b>Syntax</b>      | OK = SaveAs(P, Name)                         |
| <b>Description</b> | This is a method of mbcmodel.project.        |
| <b>Examples</b>    | <pre>OK = SaveAs(proj, 'Example.mat');</pre> |
| <b>See Also</b>    | Save                                         |

**Purpose**

Plot design points

**Syntax**

```
Scatter2D(D,Xindex,Yindex)
Scatter2D(D,xindex,yindex,plotArguments)
```

**Description**

Scatter2D is a method of `mbcdoe.design`.

`Scatter2D(D,Xindex,Yindex)` creates a scatter plot of the design points in design `D`, where `X` and `Y` are the indices or symbols for the input factors to plot on the `X` and `Y` axis.

`Scatter2D(D,xindex,yindex,plotArguments)` creates a scatter plot with additional arguments. `plotArguments` specifies additional arguments to the MATLAB plot command. The plot command used in `Scatter2D` is

```
plot(D.Points(:,v1),D.Points(:,v2),varargin{:})
```

The default for `varargin` is `'.'`.

**Examples**

```
Scatter2D(mainDesign, 1, 2);
```

# SetTermStatus

---

|                    |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
|--------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Purpose</b>     | Set status of model terms                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
| <b>Syntax</b>      | <code>M.Properties = M.Properties.SetTermStatus(Terms, Status)</code>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| <b>Description</b> | <p>This is a method of <code>mbcmodel.linearmodelproperties</code>.</p> <p><code>M.Properties = M.Properties.SetTermStatus(Terms, Status)</code> sets the status of the specified terms in this model. Status must be a cell array of status strings.</p> <p>The stepwise status for each term can be Always, Never or Step. The status determines whether you can use the <code>StepwiseRegression</code> function to throw away terms in order to try to improve the predictive power of the model.</p> <p>M is an <code>mbcmodel.linearmodel</code> object.</p> |
| <b>Examples</b>    | <pre>M = mbcmodel.CreateModel('Polynomial', 2); M.Properties = M.Properties.SetTermStatus([1 2; 1 0], {'Never', 'Always'});</pre> <p>This example sets the status of the <math>X1 \cdot X2^2</math> term to Never and the <math>X1</math> term to Always.</p>                                                                                                                                                                                                                                                                                                      |
| <b>See Also</b>    | <code>GetTermStatus</code> , <code>StepwiseStatus</code>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |

**Purpose** Open fit algorithm setup dialog box

**Syntax** [OPT,OK]= SetupDialog(F)

**Description** This is a method of `mbcmodel.fitalgorithm`.

[OPT,OK]= SetupDialog(F) opens the fit algorithm setup dialog box, where you can edit the algorithm parameters. F is a `mbcmodel.fitalgorithm` object.

If you click **Cancel** to dismiss the dialog, `OK = false` and no changes are made. If you click **OK** to close the dialog box, then `OK = true` and your new chosen algorithm parameters are set up.

**Examples** [OPT,OK]= SetupDialog(F)

**See Also** CreateAlgorithm, getAlternativeNames

# SignalNames

---

**Purpose** Names of signals held by data

**Syntax** `names = D.SignalNames`

**Description** This is a property of `mbcmodel.data`.  
This is a cell array of strings that hold the names of the signals within the data. These names can be used to reference the appropriate signals in the `Value` method. The subset of these names that are being used for modeling may also be found in the test plan and responses `InputSignalNames` properties.

**Examples** `names = D.SignalNames;`

**See Also** `SignalUnits`, `InputSignalNames`, `Value`

|                    |                                                                                                                                                                   |
|--------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Purpose</b>     | Names of units in data                                                                                                                                            |
| <b>Syntax</b>      | <code>units = D.SignalUnits</code>                                                                                                                                |
| <b>Description</b> | <p>This is a property of <code>mbcmodel.data</code>.</p> <p>D is the data object.</p> <p>It returns a cell array of strings holding the units of the signals.</p> |
| <b>Examples</b>    | <pre>units = D.SignalUnits;</pre>                                                                                                                                 |
| <b>See Also</b>    | <code>SignalNames</code>                                                                                                                                          |

# SingleVIF

---

**Purpose** Single VIF matrix for linear model parameters

**Syntax** `VIF = SingleVIF(LINEARMODEL)`

**Description** This is a method of `mbcmodel.linearmodel`.

`VIF = SingleVIF(LINEARMODEL)` calculates the single Variance Inflation Factor (VIF) matrix for the linear model parameters.

**Examples** `VIF = SingleVIF(knot_model)`

**See Also** `ParameterStatistics`



**Purpose**            Number of model parameters

**Syntax**            `N = params.SizeOfParameterSet`

**Description**        This is a property of `mbcmodel.linearmodelparameters`, for linear models only. It returns the total possible number of parameters in the model. Note that not all of these terms are necessarily currently included in the model, as you may remove some using `StepwiseRegression`.

Call `NumberOfParameters` to see how many terms are currently included in the model. Call `StepwiseSelection` to see which terms are included and excluded.

Use `Names` and `Values` to get the parameter names and values.

**Examples**            `N = knotparams.SizeOfParameterSet`

**See Also**            `NumberOfParameters`, `StepwiseSelection`, `Names`, `Values`

# StatisticsDialog

---

**Purpose** Open summary statistics dialog box

**Syntax** [mdl,OK]= StatisticsDialog(mdl)

**Description** This is a method of `mbcmodel.model`.  
[mdl,OK]= StatisticsDialog(mdl) opens the Summary Statistics dialog box, where you can select the summary statistics you want to use.  
If you click **Cancel** to dismiss the dialog, `OK = false` and no changes are made. If you click **OK** to close the dialog box, then `OK = true` and your new chosen summary statistics are set up.

**See Also** SummaryStatistics

**Purpose** Model status: fitted, not fitted or best

**Syntax** `S = model.Status`

**Description** This is a property of `mbcmodel.model`. It returns a string: 'Fitted' if the model is fitted, 'Not fitted' if the model is not fitted (for example there is not enough data to fit the model), or 'Best' if the model has been selected as best from some alternative models. A model must be Fitted before it can be selected as Best.

**Examples**

```
S = knot.Status
S =
 `Fitted`
```

**See Also** `ChooseAsBest`

# StepwiseRegression

---

|                    |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
|--------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Purpose</b>     | Change stepwise selection status for specified terms                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| <b>Syntax</b>      | <code>[S, model] = StepwiseRegression(model, optional toggleTerms)</code>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| <b>Description</b> | <p>This is a method of <code>mbcmodel.model</code>, for linear models only. This method returns the Stepwise table (as in the Stepwise values for <code>ParameterStatistics</code>). Leave out <code>toggleTerms</code> to get the current Stepwise values. You can choose to remove or include parameters using <code>StepwiseRegression</code>, as long as their <code>StepwiseStatus</code> is <code>Step</code>.</p> <p>The Stepwise values returned are the same as those found in the table in the Stepwise GUI. For each parameter, the columns are: the value of the coefficient, the standard error of the coefficient, the t value and Next PRESS (the value of PRESS if the status of this term is changed at the next iteration). Look for the lowest Next PRESS to indicate which terms to toggle in order to improve the predictive power of the model.</p> <p>Call <code>StepwiseRegression</code> to toggle between in and out for particular parameters. <code>toggleTerms</code> can be either an index that specifies which parameters to toggle, or an array or logical where a true value indicates that a toggle should occur. The example shown toggles parameter 4, after inspection of the Next PRESS column indicates changing the status of this term will result in the lowest PRESS. <code>StepwiseRegression</code> returns the new Stepwise values after toggling a parameter.</p> <p>After making changes to the model using <code>StepwiseRegression</code> you must call <code>UpdateResponse</code>.</p> <p>Use <code>StepwiseStatus</code> (on the child <code>modelparameters</code> object) to see which parameters have a status of <code>Step</code>; these can be toggled between in and out using <code>StepwiseRegression</code> (on the parent model object).</p> <p>Use <code>StepwiseSelection</code> (on the child <code>modelparameters</code> object) to view which terms are in and out, as shown in the example.</p> |

## Examples

```
[S, knot] = StepwiseRegression(knot)
S =

 1.0e+003 *
```

```
0.1316 0.0606 0.0200 NaN
0.0000 0.0000 0.0200 2.0919
0.0000 0.0000 0.0190 0.2828
-0.0000 0.0000 0.0190 0.2531
0.0000 0.0000 0.0190 0.2680
-0.0551 0.0347 0.0200 0.2566
0.0919 0.0264 0.0200 0.3672
-0.0040 0.0023 0.0200 0.2564
-0.0178 0.0095 0.0200 0.2644
0.0008 0.0004 0.0200 0.2787
```

```
[S, knot] = StepwiseRegression(knot, 4)
```

```
S =
```

```
129.8406 60.1899 19.0000 NaN
 0.0048 0.0008 19.0000 662.3830
 0.0000 0.0000 18.0000 290.8862
 -0.0021 0.0019 19.0000 245.9833
 0.0001 0.0002 18.0000 281.4104
-50.4091 34.7401 19.0000 262.8346
 94.9675 26.3690 19.0000 400.6572
 -4.0887 2.2488 19.0000 262.6588
-17.9412 9.4611 19.0000 276.7535
 0.8229 0.3734 19.0000 292.0827
```

```
params = knot.Parameters;
N = params.StepwiseSelection
```

```
N =
```

```
'in'
'out'
'out'
'in'
'out'
'in'
```

# StepwiseRegression

---

```
'in'
'in'
'in'
'in'

>> StepwiseRegression(knot, 4);
params = knot.Parameters;
N = params.StepwiseSelection

N =
'in'
'in'
'out'
'out'
'out'
'in'
'in'
'in'
'in'
'in'
```

## See Also

StepwiseSelection, StepwiseStatus, UpdateResponse

**Purpose** Model parameters currently included and excluded

**Syntax** `N = paramsknot.StepwiseSelection`

**Description** This is a read-only property of `mbcmodel.linearmodelparameters`, for linear models only. It returns a status for each parameter in the model, `in` or `out`, depending on whether the term is included or excluded. You can choose to remove or include parameters using `StepwiseRegression`, as long as their `StepwiseStatus` is `Step`. Call `StepwiseRegression` (on the parent model object) to toggle between `in` and `out` for particular parameters. You must then call `UpdateResponse` before calling `StepwiseSelection`.

**Examples**

```
N = paramsknot.StepwiseSelection
N =
 'in'
 'in'
 'out'
 'out'
 'out'
 'in'
 'in'
 'in'
 'in'
 'in'
```

**See Also** `StepwiseRegression`, `StepwiseStatus`, `NumberOfParameters`, `UpdateResponse`

# StepwiseStatus

---

**Purpose** Stepwise status of parameters in model

**Syntax** `N = paramsknot.StepwiseStatus`

**Description** This is a method of `mbcmodel.linearmodelparameters`, for linear models only. It returns the stepwise status of each parameter in the model.

The stepwise status for each term can be `Always`, `Never` or `Step`. The status determines whether you can use the `StepwiseRegression` function to throw away terms in order to try to improve the predictive power of the model.

- `Always` - Always included in the model.
- `Never` - Never included in the model.
- `Step` - You can choose whether to include or exclude this term. Do this by using `StepwiseRegression` to toggle between in and out for particular parameters.

Use `StepwiseSelection` to find out which terms are currently included and excluded.

**Examples**

```
N = paramsknot.StepwiseStatus
N =
 'Always'
 'Step'
 'Step'
 'Step'
 'Step'
 'Step'
 'Step'
 'Step'
 'Step'
 'Step'
```

**See Also** `StepwiseRegression`, `StepwiseSelection`



**Purpose** Style of design type

**Syntax** D.Style

**Description** Style is a read-only property of `mbcdoe.design`.  
D.Style

The style of the design is one of :

- 'User-defined'
- 'Optimal'
- 'Space-filling'
- 'Classical'
- 'Experimental data'

The read-only Style property is derived from the design Type.

**See Also** Type (for designs and generators)

# SummaryStatistics

---

**Purpose** Summary statistics for response

**Syntax** `S = SummaryStatistics(M)`  
`S = SummaryStatistics(M, Names)`

**Description** This is a method of all model objects (`mbcmodel.model` and `mbcmodel.localmodel`) and response objects (`mbcmodel.hierarchicalresponse`, `mbcmodel.localresponse`, and `mbcmodel.response`).

These statistics appear in the Summary Statistics pane of the Model Browser GUI.

`S = SummaryStatistics(M)` returns summary statistics for the model or response in a structure array containing `Statistics` and `Names` fields.

`S = SummaryStatistics(M, Names)` returns summary statistics specified by `Names` for the model or response in an array. `Names` can be a char array, or a cell array of strings.

**Examples** `S = SummaryStatistics(R2);`

**See Also** `DiagnosticStatistics`, `AlternativeModelStatistics`

|                    |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
|--------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Purpose</b>     | Statistics for specified test                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| <b>Syntax</b>      | <pre>SS = SummaryStatisticsForTest( LocalResponse, TestNumber ) SS = SummaryStatisticsForTest(LocalResponse,TestNumber,Names)</pre>                                                                                                                                                                                                                                                                                                                                                                                              |
| <b>Description</b> | <p>This is a method of <code>mbcmodel.localresponse</code>.</p> <p><code>SS = SummaryStatisticsForTest( LocalResponse, TestNumber )</code> returns a structure array containing <code>Statistics</code> and <code>Names</code> fields values for the local model for test <code>TestNumber</code>.</p> <p><code>SS = SummaryStatisticsForTest(LocalResponse,TestNumber,Names)</code> returns an array of the statistics specified by <code>Names</code>. <code>Names</code> can be a char array, or a cell array of strings.</p> |
| <b>Examples</b>    | <pre>SS = SummaryStatisticsForTest( L, 22 )</pre>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| <b>See Also</b>    | <code>SummaryStatistics</code>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |

# TestFilters

---

**Purpose**                    Structure array holding user-defined test filters

**Syntax**                    `testf = data.TestFilters`

**Description**              This is a property of `mbcmodel.data`.

It returns a structure array holding information about the currently defined test filters for the data object `D`. The array will be the same length as the number of currently defined test filters, with the following fields for each filter:

- **Expression** — The string expression as defined in `AddTestFilter` or `ModifyTestFilter`.
- **AppliedOK** — Boolean indicating that the filter was successfully applied.
- **RemovedTests** — Boolean vector indicating which tests the filter removed. Note that many filters could remove the same test.
- **Message** — String holding information on the success or otherwise of the filter.

**Examples**                    `testf = data.TestFilters;`

**See Also**                    `AddTestFilter`, `ModifyTestFilter`, `RemoveTestFilter`

|                    |                                                                                                                                                                                                                    |
|--------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Purpose</b>     | Test plan containing boundary tree                                                                                                                                                                                 |
| <b>Syntax</b>      | <code>Tree.TestPlan</code>                                                                                                                                                                                         |
| <b>Description</b> | <p>This is a property of <code>mbcboundary.Tree</code> and <code>mbcboundary.TwoStageTree</code>.</p> <p><code>Tree.TestPlan</code> returns the test plan object that contains this boundary tree (read only).</p> |
| <b>See Also</b>    | “Boundary Models” on page 1-21                                                                                                                                                                                     |

# TestPlans

---

**Purpose**            Array of test plan objects in project

**Syntax**            `tps = project.TestPlans`

**Description**        This is a property of `mbcmodel.project`.  
P is the project object.

**Examples**            `tps = project.TestPlans;`

**Purpose**

Boundary model type

**Syntax**

B.Type

**Description**

This is a property of `mbcboundary.AbstractBoundary` and all subclasses.

`B.Type` returns the boundary model type. You can only choose a type when you create the boundary. Use the `Type` input argument with `CreateBoundary` to specify what kind of boundary model you want to create, such as 'Star-shaped', 'Range', 'Ellipsoid', 'Convex Hull'.

Use `getAlternativeTypes` to find out what types are available for the specified boundary model.

Available types depend on the boundary model, for example:

- For `mbcboundary.Model`, type can be 'Star-shaped', 'Range', 'Ellipsoid', or 'Convex Hull'
- For `mbcboundary.TwoStage`, `LocalModel` requires a type of either `Range` or `Ellipsoid`, and `GlobalModel` requires a type of `Interpolating RBFonly`.
- For `mbcboundary.PointByPoint`, the `LocalModel` type can be any valid type for `mbcboundary.Model`.

You can only create boundaries of type 'Point-by-point' or 'Two-stage' from a Local boundary tree, or from an existing boundary of type 'Point-by-point' or 'Two-stage'. You cannot create or fit these types of boundary models outside a project. Fit them by adding the boundary model to the boundary tree.

**Examples**

The following example creates a point-by-point boundary model from the Local boundary tree:

```
B = CreateBoundary(T.Boundary.Local, 'Point-by-point');
```

Create a local boundary with type range:

## Type (for boundary models)

---

```
B.LocalModel = CreateBoundary(B.LocalModel, 'Range');
```

### **See Also**

“Boundary Models” on page 1-21, `CreateBoundary`,  
`getAlternativeTypes`



**Purpose** Candidate set type

**Syntax** C.Type

**Description** This is a property of `mbcdoe.candidateset`.

`C.Type` returns the candidate set type. You can only choose a type when you create the candidate set, when calling `CreateCandidateset`.

You can specify the candidate set type during creation by using the `Type` property, e.g.,

```
CandidateSet = augmentedDesign.CreateCandidateSet...
 ('Type', 'Grid');
```

Other available properties depend on the candidate set type. To see the properties you can set, see the table of candidate set properties, [Candidate Set Properties \(for Optimal Designs\)](#) on page 2-194.

**See Also** `CreateCandidateSet`

# Type (for designs and generators)

---

**Purpose** Design type

**Syntax**  
D.Type  
G.Type = NewType

**Description** This is a read-only property of `mbcdoe.design`, and a settable property of `mbcdoe.generator`.

D.Type returns the design type. You can only choose a type when you create designs. After design creation, you can only set the Type of a `mbcdoe.generator` object, or when calling `Generate` or `Augment`.

G.Type = NewType changes the Type, where G is a `mbcdoe.generator` object.

The design Type determines which properties you can set. To set properties, see `Properties (for design generators)`.

Get a list of types which could be used as alternative designs for current design, using `getAlternativeTypes`, by entering the following syntax:

```
Dlist = getAlternativeTypes(D)
```

where D is an `mbcdoe.design` object.

The design Type must be one shown in the following table. The read-only Style property is derived from the Type.

| Style   | Type      |
|---------|-----------|
| Optimal | D-Optimal |
|         | V-Optimal |
|         | A-Optimal |

## Type (for designs and generators)

---

| Style             | Type                                                                            |
|-------------------|---------------------------------------------------------------------------------|
| Classical         | Box-Behnken                                                                     |
|                   | Central Composite                                                               |
|                   | Full Factorial                                                                  |
|                   | Plackett-Burman                                                                 |
|                   | Regular Simplex                                                                 |
| Space-filling     | Lattice                                                                         |
|                   | Latin Hypercube Sampling                                                        |
|                   | Stratified Latin Hypercube                                                      |
|                   | Sobol Sequence                                                                  |
|                   | Halton Sequence                                                                 |
| Experimental data | Design points replaced by data points                                           |
| Custom            | Any design with a mix of Types (eg an optimally augmented space-filling design) |

### Examples

To specify the Type while creating and then generating a design of a given size:

```
D = CreateDesign(md1, 'Type', 'Sobol Sequence')
D = Generate(D, 128);
```

### See Also

Properties (for design generators); Generate; Augment

# Type (for design constraints)

---

**Purpose** Design constraint type

**Syntax** C.Type

**Description** This is a property of `mbcdoe.constraint`.

`C.Type` returns the design constraint type. You can only choose a type when you create the constraint, when calling `CreateConstraint`.

You can specify the constraint type during creation by using the `Type` property, e.g.,

```
c = D.CreateConstraint('Type','Linear')
```

Other available properties depend on the constraint type. See the table `Constraint Properties` on page 2-197.

The constraint `Type` must be one shown in the following table.

| Constraint Type | Description                                                                                          |
|-----------------|------------------------------------------------------------------------------------------------------|
| 'Linear'        | Linear design constraint:<br>$1 * \text{Input1} + 1 * \text{Input2} + 1 * \text{Input3} \leq 0$      |
| 'Ellipsoid'     | Ellipsoid design constraint:<br>Ellipsoid at ( $\text{Input1}=0, \text{Input2}=0, \text{Input3}=0$ ) |
| '1D Table'      | 1D Table design constraint:<br>$\text{InputY}(\text{InputX}) \leq \text{InputY max}$                 |
| '2D Table'      | 2D Table design constraint:<br>$\text{InputZ}(\text{InputX}, \text{InputY}) \leq \text{InputZmax}$   |

**See Also** `CreateConstraint`; `Constraint Properties` on page 2-197

**Purpose**

Valid model types

**Syntax**

```
model.Type
M = mbcmodel.CreateModel(Type, NUMINPUTS)
M2 = CreateModel(M, Type)
```

**Description**

This is a property of `mbcmodel.model`.

`model.Type` returns the model type. This property is set at creation time. See `CreateModel`.

The model `Type` determines which properties you can set. To set properties, see `Properties (for models)`, and `LocalModel Properties`.

---

**Note** Spaces and case in model `Type` are ignored.

---

The model type must be one shown in the following table.

| Type              | Model Object                      |
|-------------------|-----------------------------------|
| Polynomial        | <code>mbcmodel.linearmodel</code> |
| Hybrid Spline     | <code>mbcmodel.linearmodel</code> |
| RBF               | <code>mbcmodel.linearmodel</code> |
| Hybrid RBF        | <code>mbcmodel.linearmodel</code> |
| Polynomial-RBF    | <code>mbcmodel.linearmodel</code> |
| Hybrid Spline-RBF | <code>mbcmodel.linearmodel</code> |
| Multiple Linear   | <code>mbcmodel.linearmodel</code> |
| Free Knot Spline  | <code>mbcmodel.model</code>       |
| Transient         | <code>mbcmodel.model</code>       |
| User-Defined      | <code>mbcmodel.model</code>       |

## Type (for models)

---

| Type                         | Model Object        |
|------------------------------|---------------------|
| Neural Network               | mbcmodel.model      |
| Local Polynomial Spline      | mbcmodel.localmodel |
| Local Polynomial with Datum  | mbcmodel.localmodel |
| Local Polynomial             | mbcmodel.localmodel |
| Local Hybrid Spline          | mbcmodel.localmodel |
| Local Truncated Power Series | mbcmodel.localmodel |
| Local Free Knot Spline       | mbcmodel.localmodel |
| Local Multiple Models        | mbcmodel.localmodel |
| Local Growth                 | mbcmodel.localmodel |
| Local User-Defined           | mbcmodel.localmodel |
| Local Transient              | mbcmodel.localmodel |
| Local Average Fit            | mbcmodel.localmodel |

Get a list of types, using `getAlternativeTypes`, by entering the following syntax:

```
Mlist = getAlternativeTypes(M)
```

where `M` is an `mbcmodel.model` object.

Create an alternative model as follows: `M = mbcmodel.CreateModel(Type, NUMINPUTS)` or `M2 = CreateModel(M, Type)`.

### See Also

`Properties (for models)`, `getAlternativeTypes`, `CreateModel`

**Purpose** Model output units

**Syntax** `model.Units`  
`modelinput.Units`

**Description** This is a property of `mbcmodel.model` and `mbcmodel.modelinput` objects.

`model.Units` or `modelinput.Units` return the units of the model or modelinput object.

This property is set to the data signal units when the response is created or if a model is assigned to a response. This property cannot be set when a response is attached to the model.

# Update

---

**Purpose** Update boundary model in tree and fit to test plan data

**Syntax**  
B = Update(Tree, Index, B)  
B = Update(Tree, Index, B, InBest)

**Description** This is a method of `mbcboundary.Tree`.

B = Update(Tree, Index, B) updates the boundary model B in the boundary tree Tree, and fits the boundary model to the test plan data. Tree is an `mbcboundary.Tree` object, Index is the index to boundary model in the tree, and B is a boundary model object. The boundary model must have the same inputs as the boundary tree. The boundary model is always fitted when you add it to the boundary tree. This fitting ensures that the fitting data is compatible with the test plan data. The method returns the fitted boundary model.

B = Update(Tree, Index, B, InBest) updates the boundary model in the tree and InBest specifies whether to include the boundary model in the best boundary model for the boundary tree. By default, the boundary model retains its previous InBest status after calling Update.

**See Also** Add, Remove, CreateBoundary



**Purpose**

Update design in test plan

**Syntax**

D = UpdateDesign(T,D)  
D = UpdateDesign(T,Level,D)

**Description**

UpdateDesign is a method of `mbcmodel.testplan`. You must call UpdateDesign to replace an edited design in the test plan.

D = UpdateDesign(T,D)

D = UpdateDesign(T,Level,D)

D is the array of designs to be updated in the test plan, T.

Level is the test plan level. By default the level is the outer level (i.e., Level 1 for One-stage, Level 2 (global) for Two-stage).

The design Name is used to decide what to update. If no name match is found in the test plan, the design is added.

Design names must be unique so any repeated names will be changed. The array of designs is an output.

**See Also**

AddDesign; RemoveDesign; FindDesign

# UpdateResponse

---

|                    |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
|--------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Purpose</b>     | Replace model in response                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| <b>Syntax</b>      | <pre>UpdateResponse(model) M = UpdateResponse( M , R); updates the response specified by R</pre>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| <b>Description</b> | <p>This is a method of <code>mbcmodel.model</code>. This takes the model and places it back into the response it came from. Appropriate action is taken if a refit is necessary because you have modified either the model, response data or model data in the interim. For example, if you have changed the model type, the new model is fitted to the response data. If you have changed the response data (e.g. removed an outlier), the model is fitted to the new response data.</p> <p>Note that when changing the model type or settings (using the <code>ModelSetup</code> command) the response is not refitted until you call <code>UpdateResponse</code>. If you have changed the model by using <code>StepwiseRegression</code> you must call <code>UpdateResponse</code>.</p> <pre>UpdateResponse( M )</pre> <p>updates the model in the response associated with the model.</p> <pre>M = UpdateResponse( M , R);</pre> <p>updates the response specified by R.</p> |
| <b>Examples</b>    | <pre>UpdateResponse(knot);</pre>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| <b>See Also</b>    | <code>ModelSetup</code>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |

**Purpose** Refit response feature models

**Syntax** `UpdateResponseFeatures(L)`

**Description** This is a method of `mbcmodel.localresponse`.  
`UpdateResponseFeatures(L)` refits all response feature models. You need to call this if you used `RemoveOutliersForTest` without specifying refitting the response features (`doUpdate` set to `false`).

**Examples** For a local response `LOCALRESPONSE`, to remove first two data points without updating response features:

```
RemoveOutliersForTest(LOCALRESPONSE, 1, 1:2, false);
```

To update response features:

```
UpdateResponseFeatures(LOCALRESPONSE);
```

**See Also** `RemoveOutliersForTest`, `RestoreDataForTest`

# UserVariables

---

**Purpose**                    Structure array holding user-defined variables

**Syntax**                    `userV = D.UserVariables`

**Description**              This is a property of `mbcmodel.data`.

This returns a structure array holding information about the currently defined filters. The array will be the same length as the number of currently defined variables, with fields

- **Variable** — variable name
  - **Expression** — The string expression as defined in `AddVariable` or `ModifyVariable`
  - **Units** — The string defining the units
  - **AppliedOK** — Boolean indicating that the variable expression was successfully applied
  - **Message** — String holding information on the success or otherwise of the variable

**Examples**                    `myvars = D1.UserVariables`

This returns the following information about the user-defined variable in the example data object D1:

```
Variable: 'BSFC'
Expression: 'BSFC = FUELFLO./(BTQ.*(ENGSPD*2*pi/60))'
Units: 'kg/Nm'
AppliedOK: 1
Message: 'Variable successfully added'
```

`Variable` is the parsed name of the variable being added. Note that this might differ from the string used in `AddVariable` because the `SignalName` must be a valid MATLAB variable name, and hence MBC will parse and modify the input string appropriately.

**See Also**

AddVariable, ModifyVariable, RemoveVariable

# Value

---

**Purpose** Double data from data object

**Syntax** `val = Value(D, varNames, testNumbers)`

**Description** This is a method of `mbcmodel.data`.

Use this to extract particular data values.

`varNames` is an optional input that specifies either the name of the signal that you want to extract (such as 'SPK') or an array of names ({'SPK' 'AFR' 'TQ'}) the indices of the signals ([1 4 5]). Defaults to ':' meaning all.

`testNumbers` is an optional input that specifies which test indices you want. Defaults to ':' meaning all.

`val` outputs the double values held in the data.

## Examples

```
dblValues = Value(D, 'SPK', 1);
dblValues = Value(D, {'SPK' 'AFR'}, ':');
dblValues = Value(D, [1 3 4 5]);
dblValues = Value(D, ':', [1 4 6 8]);
```

**See Also** `SignalNames`

**Purpose** Values of model parameters

**Syntax** `vals = paramsknot.Values`

**Description** This is a read-only property of `mbcmodel.modelparameters`. It returns the value of each parameter in the model. Use `Names` to find out the names of these terms.

**Examples** `vals = paramsknot.Values;`

**See Also** `Names`

# Widths

---

**Purpose** Width data from RBF model

**Syntax** `Width = params.Widths`

**Description** This is a property of `mbcmodel.rbfmodelparameters`, for Radial Basis Function (RBF) models only.

Width is usually a single value, but can also be of size 1 by number of variables in the case of the width per dimension algorithm, or number of centers by number of variables in the case of tree regression.

**Examples** `Width = params.Widths;`

**See Also** `Centers`