


Powertrain Blockset™

Reference

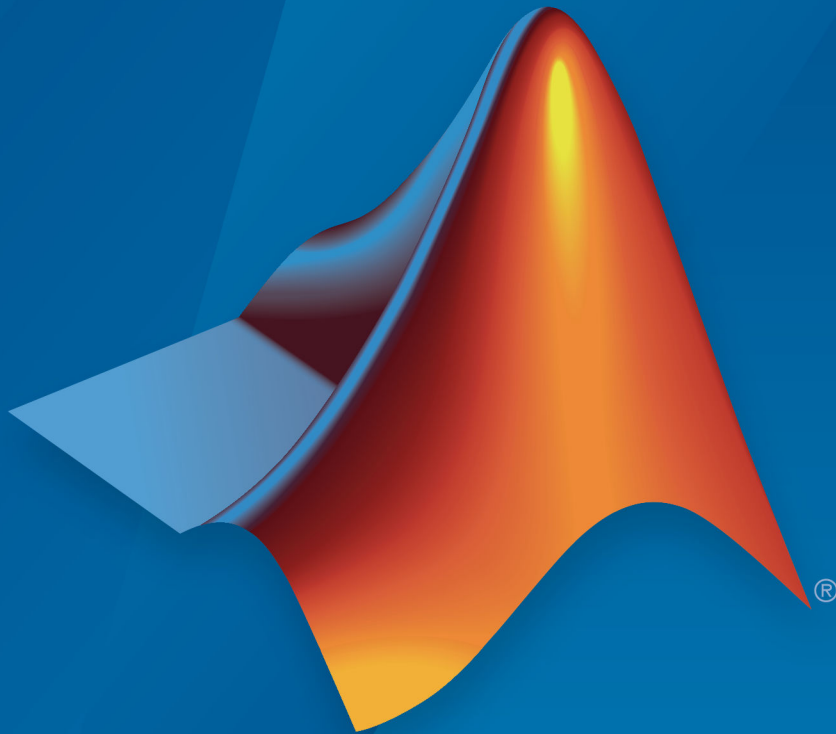

MATLAB® & SIMULINK®

R2019b



How to Contact MathWorks



Latest news: www.mathworks.com
Sales and services: www.mathworks.com/sales_and_services
User community: www.mathworks.com/matlabcentral
Technical support: www.mathworks.com/support/contact_us



Phone: 508-647-7000



The MathWorks, Inc.
1 Apple Hill Drive
Natick, MA 01760-2098

Powertrain Blockset™ Reference

© COPYRIGHT 2016–2019 by The MathWorks, Inc.

The software described in this document is furnished under a license agreement. The software may be used or copied only under the terms of the license agreement. No part of this manual may be photocopied or reproduced in any form without prior written consent from The MathWorks, Inc.

FEDERAL ACQUISITION: This provision applies to all acquisitions of the Program and Documentation by, for, or through the federal government of the United States. By accepting delivery of the Program or Documentation, the government hereby agrees that this software or documentation qualifies as commercial computer software or commercial computer software documentation as such terms are used or defined in FAR 12.212, DFARS Part 227.72, and DFARS 252.227-7014. Accordingly, the terms and conditions of this Agreement and only those rights specified in this Agreement, shall pertain to and govern the use, modification, reproduction, release, performance, display, and disclosure of the Program and Documentation by the federal government (or other entity acquiring for or through the federal government) and shall supersede any conflicting contractual terms or conditions. If this License fails to meet the government's needs or is inconsistent in any respect with federal procurement law, the government agrees to return the Program and Documentation, unused, to The MathWorks, Inc.

Trademarks

MATLAB and Simulink are registered trademarks of The MathWorks, Inc. See www.mathworks.com/trademarks for a list of additional trademarks. Other product or brand names may be trademarks or registered trademarks of their respective holders.

Patents

MathWorks products are protected by one or more U.S. patents. Please see www.mathworks.com/patents for more information.

Revision History

October 2016	Online only	New for Version 1.0 (Release 2016b+)
March 2017	Online only	Revised for Version 1.1 (Release 2017a)
September 2017	Online only	Revised for Version 1.2 (Release 2017b)
March 2018	Online only	Revised for Version 1.3 (Release 2018a)
September 2018	Online only	Revised for Version 1.4 (Release 2018b)
March 2019	Online only	Revised for Version 1.5 (Release 2019a)
September 2019	Online only	Revised for Version 1.6 (Release 2019b)


1	<u>Drivetrain Blocks – Alphabetical List</u>
2	<u>Vehicle Dynamics Blocks – Alphabetical List</u>
3	<u>Energy Storage Blocks – Alphabetical List</u>
4	<u>Propulsion Blocks – Alphabetical List</u>
5	<u>Electric Motor, Converters, Inverter Blocks – Alphabetical List</u>
6	<u>Scenario Creation Blocks – Alphabetical List</u>
7	<u>Transmission Blocks – Alphabetical List</u>

Drivetrain Blocks – Alphabetical List

Rotational Inertia

Ideal mechanical rotational inertia

Library: Powertrain Blockset / Drivetrain / Couplings
 Vehicle Dynamics Blockset / Powertrain / Drivetrain / Couplings



Description

The Rotational Inertia block implements an ideal mechanical rotational inertia.

Power Accounting

For the power accounting, the block implements these equations.

Bus Signal		Description	Variable	Equations	
PwrInfo	PwrTrnsfrd — Power transferred between blocks • Positive signals indicate flow into block • Negative signals indicate flow out of block	PwrR	Mechanical power from base shaft	P_{TR}	$P_{TR} = T_R\omega$
		PwrC	Mechanical power from follower shaft	P_{TC}	$P_{TC} = T_C\omega$

Bus Signal		Description	Variable	Equations	
	PwrNotTrnsfrd — Power crossing the block boundary, but not transferred <ul style="list-style-type: none"> • Positive signals indicate an input • Negative signals indicate a loss 	PwrDampLoss	Power loss due to damping	P_d	$P_d = -b \omega ^2$
	PwrStored — Stored energy rate of change <ul style="list-style-type: none"> • Positive signals indicate an increase • Negative signals indicate a decrease 	PwrStoredShft	Rate change of stored internal torsional energy	P_s	$P_s = \omega\dot{\omega}J$

The equations use these variables.

T_R	Input torque
T_C	Output torque
ω	Driveshaft angular velocity
J	Rotational inertia
b	Rotational viscous damping
P_d	Power loss due to damping
P_s	Rate change of stored internal torsional energy

Ports

Input

RTrq — Input torque

scalar

Applied input driveshaft torque, T_R , in N·m.

Dependencies

To create this port, for **Port Configuration**, select Simulink.

CTrq — Output torque

scalar

Load driveshaft torque, T_C , in N·m.

Dependencies

To create this port, for **Port Configuration**, select Simulink.

R — Angular velocity and torque

two-way connector port

Angular velocity in rad/s. Torque is in N·m.

Dependencies

To create this port, for **Port Configuration**, select Two-way connection.

Inertia — Input

scalar

Rotational inertia, in $\text{kg}\cdot\text{m}^2$.

Dependencies

To create the Inertia port, select **External inertia input**.

Output

Info — Bus signal

bus

Bus signal containing these block calculations.

Signal		Description	Variable	Units	
Trq	R	Applied input driveshaft torque	T_R	N·m	
	C	Output driveshaft torque	T_C	N·m	
	Damp	Damping torque	$T_d = b\omega$	N·m	
Spd		Angular driveshaft speed	ω	rad/s	
PwrInfo	PwrTrns frd	PwrR	Mechanical power from base shaft	P_{TR}	W
		PwrC	Mechanical power from follower shaft	P_{TC}	W
	PwrNotTrns frd	PwrDampLoss	Power loss due to damping	P_d	W
	PwrStored	PwrStored Shft	Rate change of stored internal torsional energy	P_s	W

Dependencies

To create this port, select **Output Info bus**.

Spd — Driveshaft speed

scalar

Angular driveshaft speed, ω , in rad/s.

Dependencies

To create this port, for **Port Configuration**, select Simulink.

C — Angular velocity and torque

two-way connector port

Angular velocity in rad/s. Torque is in N·m.

Dependencies

To create this port, for **Port Configuration**, select Two-way connection.

Parameters

Block Options

Port Configuration — Specify configuration

Simulink (default) | Two-way connection

Specify the port configuration.

Dependencies

Specifying Simulink creates these ports:

- RTrq
- CTrq
- Spd

Specifying Two-way connection creates these ports:

- R
- C

Output Info bus — Selection

off (default) | on

Select to create the Info output port.

External inertia input — Input rotational inertia

off (default) | on

Dependencies

To create the Inertia port, select **External inertia input**.

Parameters**Rotational inertia, J — Inertia**

scalar

Rotational inertia, in $\text{kg}\cdot\text{m}^2$.**Dependencies**To enable this parameter, clear **Input rotational inertia**.**Torsional damping, b — Damping**

scalar

Torsional damping, in $\text{N}\cdot\text{m}\cdot\text{s}/\text{rad}$.**Initial velocity, omega_o — Angular**

scalar

Initial angular velocity, in rad/s .

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using Simulink® Coder™.


See Also

[Split Torsional Compliance](#) | [Torsional Compliance](#)**Introduced in R2017a**

Split Torsional Compliance

Split torsional coupler

Library: Powertrain Blockset / Drivetrain / Couplings
 Vehicle Dynamics Blockset / Powertrain / Drivetrain / Couplings

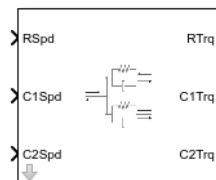

Description


The Split Torsional Compliance block implements parallel spring-damper coupling between shafts. You can specify the type of coupling by selecting one of the **Coupling Configuration** parameters:

- **Shaft split** — Single input shaft coupled to two output shafts
- **Shaft merge** — Two input shafts coupled to a single output shaft

In fuel economy and emissions studies, you can use the Split Torsional Compliance block to model mechanical rotational compliance between common driveline elements such as motors, planetary gears, and clutches. For example, use the **Shaft split** configuration to couple a motor and two planetary gear sets. Use the **Shaft merge** configuration to couple a dual clutch transmission to an output shaft.

Shaft Split

For the **Shaft split** configuration, the block implements this schematic and equations.

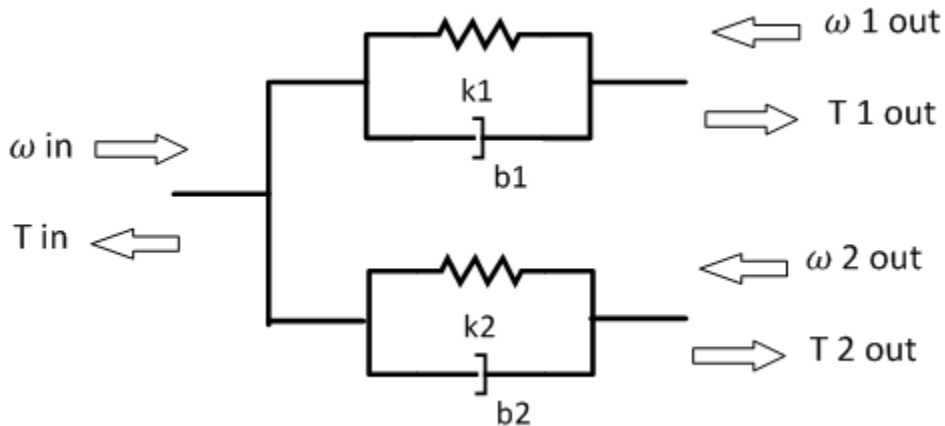

$$T_{in} = -(\omega_{in} - \omega_{1out})b_1 - (\omega_{in} - \omega_{2out})b_2 - \theta_1 k_1 - \theta_2 k_2$$

$$T_{1out} = (\omega_{in} - \omega_{1out})b_1 + \theta_1 k_1$$

$$T_{2out} = (\omega_{in} - \omega_{2out})b_2 + \theta_2 k_2$$

$$\dot{\theta}_1 = (\omega_{in} - \omega_{1out})$$

$$\dot{\theta}_2 = (\omega_{in} - \omega_{2out})$$

To account for frequency-dependent damping, both damping terms incorporate a low-pass filter.


The equations use these variables.

T_{in}	Resulting applied input reaction torque
ω_{in}	Input shaft rotational velocity
T_{1out}	Resulting applied torque to first output shaft
ω_{1out}	First output shaft rotational velocity
T_{2out}	Resulting applied torque to second output shaft
ω_{2out}	Second output shaft rotational velocity
θ_1, θ_2	First, second shaft rotation, respectively
b_1, b_2	First, second shaft viscous damping, respectively

k_1, k_2 First, second shaft torsional stiffness, respectively

Shaft Merge

For the Shaft merge configuration, the block implements this schematic and equations.

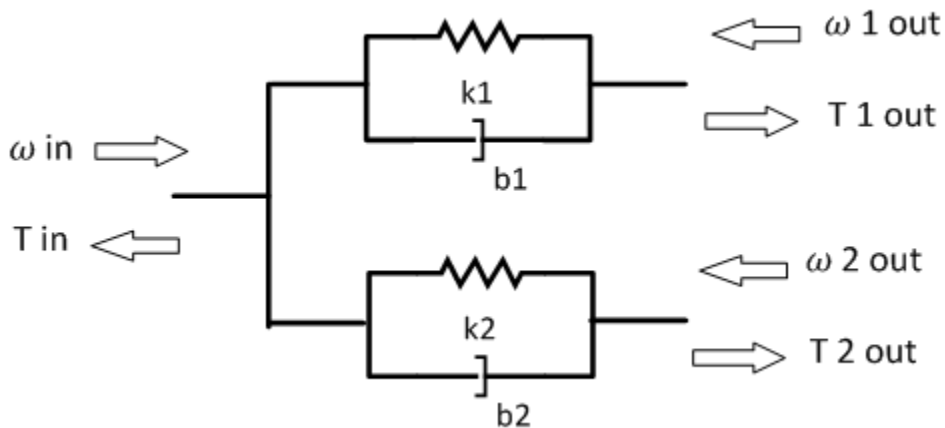

$$T_{out} = (-\omega_{out} + \omega_{1in})b_1 + (-\omega_{out} + \omega_{2in})b_2 + \theta_1 k_1 + \theta_2 k_2$$

$$T_{1out} = (\omega_{out} - \omega_{1in})b_1 - \theta_1 k_1$$

$$T_{2out} = (\omega_{out} - \omega_{2in})b_2 - \theta_2 k_2$$

$$\dot{\theta}_1 = (\omega_{1in} - \omega_{out})$$

$$\dot{\theta}_2 = (\omega_{2in} - \omega_{out})$$

To account for frequency-dependent damping, both damping terms incorporate a low-pass filter.

The equations use these variables.

T_{out}	Resulting applied output torque
ω_{out}	Output shaft rotational velocity
T_{1in}	Resulting reaction torque to first input shaft
ω_{1in}	First input shaft rotational velocity

T_{2in}	Resulting reaction torque to second input shaft
ω_{2in}	Second input shaft rotational velocity
θ_1, θ_2	First, second shaft rotation, respectively
b_1, b_2	First, second shaft viscous damping, respectively
k_1, k_2	First, second shaft torsional stiffness, respectively

Power Accounting

For the power accounting, the block implements these equations.

Bus Signal		Description	Variable	Equations
PwrInfo	PwrTrnsfrd — Power transferred between blocks <ul style="list-style-type: none"> • Positive signals indicate flow into block • Negative signals indicate flow out of block 	PwrR	For the Shaft split configuration, mechanical power from input shaft	$P_{TR} = -T_R\omega_R$
		PwrC1	For the Shaft split configuration, mechanical power from first output shaft	$P_{TC1} = -T_{C1}\omega_{C1}$
		PwrC2	For the Shaft split configuration, mechanical power from second output shaft	$P_{TC2} = -T_{C2}\omega_{C2}$

Bus Signal		Description	Variable	Equations
	PwrC	For the Shaft merge configuration, mechanical power from output shaft	P_{TC}	$P_{TC} = T_C \omega_C$
	PwrR1	For the Shaft merge configuration, mechanical power from first input shaft	P_{TR1}	$P_{TR1} = T_{R1} \omega_{R1}$
	PwrR2	For the Shaft merge configuration, mechanical power from second input shaft	P_{TR2}	$P_{TR2} = T_{R2} \omega_{R2}$
PwrNotTrnsfrd — Power crossing the block boundary, but not transferred	PwrDampLoss	Mechanical damping loss	P_d	$P_d = - \left(b_1 \dot{\theta}_1 ^2 + b_2 \dot{\theta}_2 ^2 \right)$

Bus Signal		Description	Variable	Equations
	PwrStored — Stored energy rate of change <ul style="list-style-type: none"> • Positive signals indicate an increase • Negative signals indicate a decrease 	PwrStoredShft	Rate change in spring energy	$P_s = (k_1\theta_1\dot{\theta}_1 + k_2\theta_2\dot{\theta}_2)$

The equations use these variables.

T_R	Shaft R torque
T_C	Shaft C torque
ω_R	Shaft R angular velocity
ω_C	Shaft C angular velocity
θ	Coupled shaft rotation
k	Shaft torsional stiffness
b	Rotational viscous damping
P_t	Total mechanical power
P_d	Power loss due to damping
P_s	Rate change of stored spring energy

Ports

Input

RSpd — Input shaft speed

scalar

Input shaft rotational velocity, ω_{in} , in rad/s.

Dependencies

To create this port, set both of these parameters:

- **Port Configuration** to Simulink
- **Coupling Configuration** to Shaft split

C1Spd — First output shaft speed

scalar

First output shaft rotational velocity, ω_{1out} , in rad/s.

Dependencies

To create this port, set both of these parameters:

- **Port Configuration** to Simulink
- **Coupling Configuration** to Shaft split

C2Spd — Second output shaft speed

scalar

Second output shaft rotational velocity, ω_{2out} , in rad/s.

Dependencies

To create this port, set both of these parameters:

- **Port Configuration** to Simulink
- **Coupling Configuration** to Shaft split

CSpd — Input speed

scalar

Output shaft rotational velocity, ω_{out} , in rad/s.

Dependencies

To create this port, set both of these parameters:

- **Port Configuration** to Simulink
- **Coupling Configuration** to Shaft merge

R1Spd — First input shaft speed

scalar

First input shaft rotational velocity, ω_{1in} , in rad/s.**Dependencies**

To create this port, set both of these parameters:

- **Port Configuration** to Simulink
- **Coupling Configuration** to Shaft merge

R2Spd — Second input shaft speed

scalar

Second input shaft rotational velocity, ω_{2in} , in rad/s.**Dependencies**

To create this port, set both of these parameters:

- **Port Configuration** to Simulink
- **Coupling Configuration** to Shaft merge

R — Input shaft angular velocity and torque

two-way connector port

Input shaft angular velocity, ω_{in} , in rad/s and torque, T_{in} , in N·m.**Dependencies**

To create this port, select:

- **Port Configuration**>Two-way connection
- **Coupling Configuration**>Shaft split

R1 — First input shaft angular velocity and torque

two-way connector port

First input shaft angular velocity, ω_{1in} , in rad/s and torque, T_{1in} , in N·m.**Dependencies**

To create this port, select:

- **Port Configuration**>Two-way connection
- **Coupling Configuration**>Shaft merge

R2 — Second input shaft angular velocity and torque

two-way connector port

Second input shaft angular velocity, ω_{2in} , in rad/s and torque, T_{2in} , in N·m.

Dependencies

To create this port, select:

- **Port Configuration**>Two-way connection
- **Coupling Configuration**>Shaft merge

Output

Info — Bus signal

bus

If you set **Coupling Configuration** to Shaft split, the Info bus contains these signals.

Signal		Description	Variable	Units	
Trq	R	Input shaft torque	T_{in}	N·m	
	C1	First output shaft torque	T_{1out}	N·m	
	C2	Second output shaft torque	T_{2out}	N·m	
	Damp	C1	First output shaft damping torque	$b_1\omega_{1out}$	N·m
		C2	Second output shaft damping torque	$b_2\omega_{2out}$	N·m
	Spring	C1	First output shaft spring torque	$k_1\theta_1$	N·m
C2		Second output shaft spring torque	$k_2\theta_2$	N·m	
Spd	R	Input shaft angular velocity	ω_{in}	rad/s	
	C1	First output shaft angular velocity	ω_{1out}	rad/s	

Signal		Description	Variable	Units	
	C2	Second output shaft angular velocity	ω_{2out}	rad/s	
	deltadot1	Difference in input and first output shaft angular velocity	$\dot{\theta}_1$	rad/s	
	deltadot2	Difference in input and second output shaft angular velocity	$\dot{\theta}_2$	rad/s	
PwrInfo	PwrTrnsfrd	PwrR	Mechanical power from input shaft	P_{TR}	W
		PwrC1	Mechanical power from first output shaft	P_{TC1}	W
		PwrC2	Mechanical power from second output shaft	P_{TC2}	W
	PwrNotTrnsfrd	PwrDampLoss	Mechanical damping loss	P_d	W
	PwrStored	PwrStoredShft	Rate change of stored internal torsional energy	P_s	W

If you set **Coupling Configuration** to Shaft merge, the Info bus contains these signals.

Signal		Description	Variable	Units	
Trq	C	Output shaft torque	T_{out}	N·m	
	R1	First input shaft torque	T_{1in}	N·m	
	R2	Second input shaft torque	T_{2in}	N·m	
	Damp	R1	First input shaft damping torque	$b_1\omega_{1in}$	N·m
		R2	Second in shaft damping torque	$b_2\omega_{2in}$	N·m
	Spring	R1	First input shaft spring torque	$k_1\theta_1$	N·m
		R2	Second in shaft spring torque	$k_2\theta_2$	N·m

Signal		Description	Variable	Units	
Spd	C	Output shaft angular velocity	ω_{out}	rad/s	
	R1	First input shaft angular velocity	ω_{1in}	rad/s	
	R2	Second input shaft angular velocity	ω_{2in}	rad/s	
	deltadot1	Difference in first input and output shaft angular velocity	$\dot{\theta}_1$	rad/s	
	deltadot2	Difference in second input and output shaft angular velocity	$\dot{\theta}_2$	rad/s	
PwrInfo	PwrTrns frd	PwrC	Mechanical power from output shaft	P_{TC}	W
		PwrR1	Mechanical power from first input shaft	P_{TR1}	W
		PwrR2	Mechanical power from second input shaft	P_{TR2}	W
	PwrNotTrns frd	PwrDampLoss	Mechanical damping loss	P_d	W
	PwrStored	PwrStore dShft	Rate change of stored internal torsional energy	P_s	W

Dependencies

To create this port, select **Output Info bus**.

RTdq — Input shaft torque

scalar

Input shaft torque, T_{in} , in N·m.

Dependencies

To create this port, set both of these parameters:

- **Port Configuration** to Simulink

- **Coupling Configuration** to Shaft split

C1Trq — First output shaft torque

scalar

First output shaft torque, T_{1out} in N·m.**Dependencies**

To create this port, set both of these parameters:

- **Port Configuration** to Simulink
- **Coupling Configuration** to Shaft split

C2Trq — Second output shaft torque

scalar

Second output shaft torque, T_{2out} in N·m.**Dependencies**

To create this port, set both of these parameters:

- **Port Configuration** to Simulink
- **Coupling Configuration** to Shaft split

CTrq — Output shaft torque

scalar

Output shaft torque, T_{out} in N·m.**Dependencies**

To create this port, set both of these parameters:

- **Port Configuration** to Simulink
- **Coupling Configuration** to Shaft merge

R1Trq — First input shaft torque

scalar

First input shaft torque, T_{in} in N·m.

Dependencies

To create this port, set both of these parameters:

- **Port Configuration** to Simulink
- **Coupling Configuration** to Shaft merge

R2Trq — Second input shaft torque

scalar

Second input shaft torque, T_{2in} , in N·m.

Dependencies

To create this port, set both of these parameters:

- **Port Configuration** to Simulink
- **Coupling Configuration** to Shaft merge

C1 — First output shaft angular velocity and torque

two-way connector port

First output shaft angular velocity, ω_{1out} , in rad/s and torque, T_{1out} , in N·m.

Dependencies

To create this port, select:

- **Port Configuration**>Two-way connection
- **Coupling Configuration**>Shaft split

C2 — Second output shaft angular velocity and torque

two-way connector port

Second output shaft angular velocity, ω_{2out} , in rad/s and torque, T_{2out} , in N·m.

Dependencies

To create this port, select:

- **Port Configuration**>Two-way connection
- **Coupling Configuration**>Shaft split

C — Output shaft angular velocity and torque

two-way connector port

Output shaft angular velocity, ω_{out} , in rad/s and torque, T_{out} , in N·m.**Dependencies**

To create this port, select:

- **Port Configuration**>Two-way connection
- **Coupling Configuration**>Shaft merge

Parameters**Block Options****Port Configuration — Specify configuration**

Simulink (default) | Two-way connection

Specify the port configuration.

Coupling Configuration — Specify configuration

Shaft split (default) | Shaft merge

Specify the coupling type.

Output Info bus — Selection

off (default) | on

Select to create the Info output port.

Coupling 1**Torsional stiffness, k1 — Stiffness**

scalar

Rotational inertia, k_1 , in N·m/rad.**Torsional damping, b1 — Damping**

scalar

Torsional damping, b_1 , in N·m·s/rad.

Damping cutoff frequency, omega1_c — Frequency
scalar

Damping cutoff frequency, in rad/s.

Coupling 2

Torsional stiffness, k2 — Stiffness
scalar

Rotational inertia, k_2 , in N·m/rad.

Torsional damping, b2 — Damping
scalar

Torsional damping, b_2 , in N·m· s/rad.

Damping cutoff frequency, omega2_c — Frequency
scalar

Damping cutoff frequency, in rad/s.

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using Simulink® Coder™.

See Also

Rotational Inertia | Torsional Compliance

Introduced in R2017b

Torsional Compliance

Parallel spring-damper

Library: Powertrain Blockset / Drivetrain / Couplings
 Vehicle Dynamics Blockset / Powertrain / Drivetrain / Couplings



Description

The Torsional Compliance block implements a parallel spring-damper to couple two rotating driveshafts. The block uses the driveshaft angular velocities, torsional stiffness, and torsional damping to determine the torques.

$$T_R = -(\omega_R - \omega_C)b - \theta k$$

$$T_C = (\omega_R - \omega_C)b + \theta k$$

$$\dot{\theta} = (\omega_R - \omega_C)$$

Power Accounting

For the power accounting, the block implements these equations.

Bus Signal		Description	Variable	Equations
PwrInfo	PwrTrnsfrd — Power transferred between blocks	PwrR	P_{TR}	$P_{TR} = T_R \omega_R$
	<ul style="list-style-type: none"> Positive signals indicate flow into block Negative signals indicate flow out of block 	PwrC	P_{TC}	$P_{TC} = T_C \omega_C$

Bus Signal			Description	Variable	Equations
	PwrNotTrnsfrd — Power crossing the block boundary, but not transferred <ul style="list-style-type: none"> • Positive signals indicate an input • Negative signals indicate a loss 	PwrDampLoss	Mechanical damping loss	P_d	$P_d = -b \dot{\theta} ^2$
	PwrStored — Stored energy rate of change <ul style="list-style-type: none"> • Positive signals indicate an increase • Negative signals indicate a decrease 	PwrStoredShft	Rate change in spring energy	P_s	$P_s = -\theta k\dot{\theta}$

The equations use these variables.

T_R	Driveshaft R torque
T_C	Driveshaft C torque
ω_R	Driveshaft R angular velocity
ω_C	Driveshaft C angular velocity
θ	Coupled driveshaft rotation
k	Driveshaft torsional stiffness
b	Rotational viscous damping
P_d	Power loss due to damping
P_s	Rate change of stored spring energy

Ports

Input

RSpd — Driveshaft R angular velocity

scalar

Input driveshaft angular velocity, in rad/s.

Dependencies

To create this port, for **Port Configuration**, select Simulink.

CSpd — Driveshaft C angular velocity

scalar

Output driveshaft angular velocity, in rad/s.

Dependencies

To create this port, for **Port Configuration**, select Simulink.

R — Angular velocity and torque

two-way connector port

Angular velocity in rad/s. Torque is in N·m.

Dependencies

To create this port, for **Port Configuration**, select Two-way connection.

Output

Info — Bus signal

bus

Bus signal containing these block calculations.

Signal	Description	Variable	Units
Trq	R	T_R	N·m

Signal		Description	Variable	Units	
	C	Output driveshaft torque	T_C	N·m	
	Damp	Damping torque	$T_s = b\dot{\theta}$	N·m	
	Spring	Spring torque	$T_d = k\theta$	N·m	
Spd	R	Input driveshaft angular velocity	ω_R	rad/s	
	C	Output driveshaft angular velocity	ω_C	rad/s	
	deltadot	Difference in input and output driveshaft angular velocity	$\dot{\theta}$	rad/s	
PwrInfo	PwrTrnsfrd	PwrR	Mechanical power from driveshaft R	P_{TR}	W
		PwrC	Mechanical power from driveshaft C	P_{TC}	W
	PwrNotTrnsfrd	PwrDampLoss	Power loss due to damping	P_d	W
	PwrStored	PwrStoredShft	Rate change of stored internal kinetic energy	P_s	W

Dependencies

To create this port, select **Output Info bus**.

RTrq — Driveshaft R torque

scalar

Input drive shaft torque, in N·m.

Dependencies

To create this port, for **Port Configuration**, select Simulink.

CTrq — Driveshaft C torque

scalar

Applied output driveshaft torque, in N·m.

Dependencies

To create this port, for **Port Configuration**, select Simulink.

C — Angular velocity and torque

two-way connector port

Angular velocity in rad/s. Torque is in N·m.

Dependencies

To create this port, for **Port Configuration**, select Two-way connection.

Parameters

Block Options

Port Configuration — Specify configuration

Simulink (default) | Two-way connection

Specify the port configuration.

Dependencies

Specifying Simulink creates these ports:

- RSpd
- CSpd
- RTrq
- CTrq

Specifying Two-way connection creates these ports:

- R
- C

Output Info bus — Selection

off (default) | on

Select to create the Info output port.

Torsional stiffness, k — Inertia

scalar

Torsional stiffness, in N·m/rad.

Torsional damping, b — Damping

scalar

Torsional damping, in N·m· s/rad.

Initial deflection, theta_o — Angular

scalar

Initial deflection, in rad.

Initial velocity difference, domega_o — Angular

scalar

Initial velocity difference, in rad/s.

Damping cut-off frequency, omega_c — Frequency

scalar

Damping cut-off frequency, in rad/s.

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using Simulink® Coder™.

See Also


Rotational Inertia | Split Torsional Compliance

Introduced in R2017a

Limited Slip Differential

Limited differential as a planetary bevel gear

Library: Powertrain Blockset / Drivetrain / Final Drive Unit
 Vehicle Dynamics Blockset / Powertrain / Drivetrain /
 Final Drive Unit

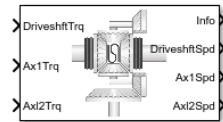

Description

The Limited Slip Differential block implements a differential as a planetary bevel gear train. The block matches the driveshaft bevel gear to the crown (ring) bevel gear. You can specify:


- Carrier-to-driveshaft ratio
- Crown wheel location
- Viscous and damping coefficients for the axles and carrier
- Type of slip coupling

Use the block in system-level driveline analysis to account for the power transfer from the transmission to the wheels. The block is suitable for use in hardware-in-the-loop (HIL) and optimization workflows. All the parameters are tunable.

In a limited slip differential, to prevent one of the wheels from slipping, the differential splits the torque applied to the left and right axles. With different torque applied to the axles, the wheels can move at different angular velocities, preventing slip. The block implements three methods for coupling the different torques applied to the axes:

- Pre-loaded ideal clutch
- Slip speed-dependent torque data
- Input torque dependent torque data

The block uses a coordinate system that produces positive tire and vehicle motion for standard engine, transmission, and differential configurations. The arrows indicate positive motion.

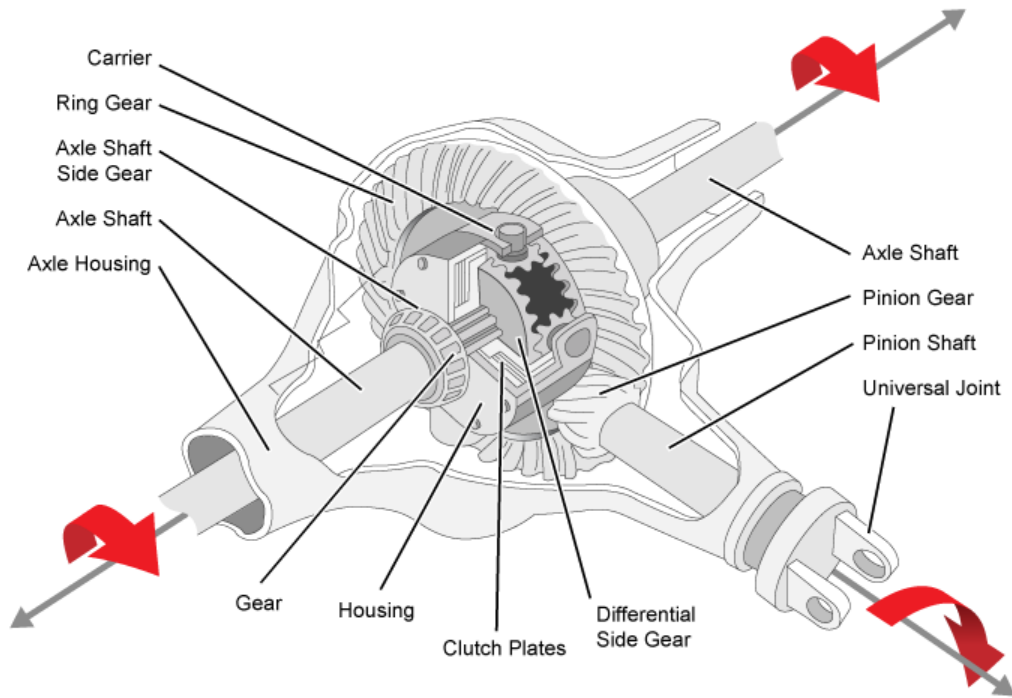

Efficiency

To account for the block efficiency, use the **Efficiency factors** parameter. This table summarizes the block implementation for each setting.

Setting	Implementation
Constant	Constant efficiency that you can set with the Constant efficiency factor, eta parameter.

Setting	Implementation
Driveshaft torque, temperature and speed	<p>Efficiency as a function of base gear input torque, air temperature, and driveshaft speed. Use these parameters to specify the lookup table and breakpoints:</p> <ul style="list-style-type: none"> • Efficiency lookup table, eta_tbl • Efficiency torque breakpoints, Trq_bpts • Efficiency speed breakpoints, omega_bpts • Efficiency temperature breakpoints, Temp_bpts <p>For the air temperature, you can either:</p> <ul style="list-style-type: none"> • Select Input temperature to create an input port. • Set a Ambient temperature, Tamb parameter value. <p>To select the interpolation method, use the Interpolation method parameter. For more information, see “Interpolation Methods” (Simulink).</p>

Power Accounting

For the power accounting, the block implements these equations.

Bus Signal		Description	Equations
PwrInfo	PwrTrnsfrd — Power transferred between blocks	PwrDriveshaft	Mechanical power from driveshaft $\eta T_d \omega_d$
	<ul style="list-style-type: none"> • Positive signals indicate flow into block • Negative signals indicate flow out of block 	PwrAx11	Mechanical power from axle 1 $\eta T_1 \omega_1$
		PwrAx12	Mechanical power from axle 2 $\eta T_2 \omega_2$
PwrNotTrnsfrd — Power crossing the	PwrMechLoss	Total power loss	$\dot{W}_{loss} = - (P_t + P_d + P_c) + P_s$ $P_t = \eta (T_d \omega_d + T_1 \omega_1 + T_2 \omega_2)$

Bus Signal		Description	Equations
block boundary, but not transferred • Positive signals indicate an input • Negative signals indicate a loss	PwrDampLoss	Power loss due to damping	$P_d = -(b_1 \omega_1 + b_2 \omega_2 + b_d \omega_d)$
	PwrCplngLoss	Power loss due to clutch	$P_c = T_c \bar{\omega} $
	PwrStored — Stored energy rate of change • Positive signals indicate an increase • Negative signals indicate a decrease	PwrStoredShft	Rate change of stored internal energy

Dynamics

The Limited Slip Differential block implements these differential equations to represent the mechanical dynamic response for the crown gear, left axle, and right axle.

Mechanical Dynamic Response	Differential Equation
Crown Gear	$\dot{\omega}_d J_d = \eta T_d - \omega_d b_d - T_i$
Left Axle	$\dot{\omega}_1 J_1 = \eta T_1 - \omega_1 b_1 - T_{i1}$
Right Axle	$\dot{\omega}_2 J_2 = \eta T_2 - \omega_2 b_2 - T_{i2}$

The block assumes rigid coupling between the crown gear and axles. These constraint equations apply.

$$\eta T_1 = \frac{N}{2} T_i - \frac{1}{2} T_c$$

$$\eta T_2 = \frac{N}{2} T_i + \frac{1}{2} T_c$$

$$\omega_d = \frac{N}{2} (\omega_1 + \omega_2)$$

The equations use these variables.

N	Carrier-to-driveshaft gear ratio
J_d	Rotational inertia of the crown gear assembly
b_d	Crown gear linear viscous damping
ω_d	Driveshaft angular speed
ω	Slip speed
J_1	Axle 1 rotational inertia
b_1	Axle 1 linear viscous damping
ω_1	Axle 1 speed
J_2	Axle 2 rotational inertia
b_2	Axle 2 linear viscous damping
ω_2	Axle 2 angular speed
η	Efficiency
T_d	Driveshaft torque
T_1	Axle 1 torque
T_2	Axle 2 torque
T_i	Axle internal resistance torque
T_{i1}	Axle 1 internal resistance torque
T_{i2}	Axle 2 internal resistance torque
μ	Coefficient of friction
R_{eff}	Effective clutch radius
R_o	Annular disk outer radius
R_i	Annular disk inner radius
F_c	Clutch force
T_c	Clutch torque
μ	Coefficient of friction

Table blocks in the Limited Slip Differential have these parameter settings:

- **Interpolation method** — Linear

- **Extrapolation method — Clip**

Ideal Clutch Coupling

The ideal clutch coupling model uses the axle slip speed and friction to calculate the clutch torque. The friction coefficient is a function of the slip speed.

$$T_c = F_c N \mu(|\varpi|) R_{eff} \tanh(4|\varpi|)$$

The disc radii determine the effective clutch radius over which the clutch force acts.

$$R_{eff} = \frac{2(R_o^3 - R_i^3)}{3(R_o^2 - R_i^2)}$$

The angular velocities of the axles determine the slip speed.

$$\varpi = \omega_1 - \omega_2$$

Slip Speed Coupling

To calculate the clutch torque, the slip speed coupling model uses torque data that is a function of slip speed. The angular velocities of the axles determine the slip speed.

$$\varpi = \omega_1 - \omega_2$$

Input Torque Coupling

To calculate the clutch torque, the input torque coupling model uses torque data that is a function of input torque.

The Open Differential block assumes rigid coupling between the crown gear and axles. These constraint equations apply.

$$\eta T_1 = \eta T_2 = \frac{N}{2} T_i$$

$$\omega_d = \frac{N}{2} (\omega_1 + \omega_2)$$

Ports

Inputs

DriveshftTrq — Torque

scalar

Applied input torque, typically from the engine crankshaft, in N·m.

Axl1Trq — Torque

scalar

Axle 1 torque, T_1 , in N·m.

Axl2Trq — Torque

scalar

Axle 2 torque, T_2 , in N·m.

Temp — Temperature

scalar

Temperature, in K.

Dependencies

To create this port:

- Set **Efficiency factors** to Driveshaft torque, speed and temperature.
- Select **Input temperature**.

Output

Info — Bus signal

bus

Bus signal containing these block calculations.

Signal	Description	Units
Driveshft	DriveshftTrq	Driveshaft torque
		N·m

Signal		Description	Units	
	DriveshaftSpd	Driveshaft speed	rad/s	
Axl1	Axl1Trq	Axle 1 torque	N·m	
	Axl1Spd	Axle 1 speed	rad/s	
Axl2	Axl2Trq	Axle 2 torque	N·m	
	Axl2Spd	Axle 2 speed	rad/s	
Cplng	CplngTrq	Torque coupling	N·m	
	CplngSlipSpd	Slip speed	rad/s	
PwrInfo	PwrTrnsfrd	PwrDriveshft	Mechanical power from driveshaft	W
		PwrAxl1	Mechanical power from axle 1	W
		PwrAxl2	Mechanical power from axle 2	W
	PwrNotTrnsfrd	PwrMechLoss	Total power loss	W
		PwrDampLoss	Power loss due to damping	W
		PwrCplngLoss	Power loss due to clutch	W
PwrStoredShft	PwrStoredShft	Rate change of stored internal energy	W	

DriveshaftSpd — Angular speed

scalar

Driveshaft angular speed, ω_d , in rad/s.

Axl1Spd — Angular speed

scalar

Axle 1 angular speed, ω_1 , in rad/s.

Axl2Spd — Angular speed

scalar

Axle 2 angular speed, ω_2 , in rad/s.

Parameters

Block Options

Efficiency factors — Specify configuration

Constant (default) | Driveshaft torque, speed and temperature

To account for the block efficiency, use the **Efficiency factors** parameter. This table summarizes the block implementation for each setting.

Setting	Implementation
Constant	Constant efficiency that you can set with the Constant efficiency factor, eta parameter.
Driveshaft torque, temperature and speed	<p>Efficiency as a function of base gear input torque, air temperature, and driveshaft speed. Use these parameters to specify the lookup table and breakpoints:</p> <ul style="list-style-type: none"> • Efficiency lookup table, eta_tbl • Efficiency torque breakpoints, Trq_bpts • Efficiency speed breakpoints, omega_bpts • Efficiency temperature breakpoints, Temp_bpts <p>For the air temperature, you can either:</p> <ul style="list-style-type: none"> • Select Input temperature to create an input port. • Set a Ambient temperature, Tamb parameter value. <p>To select the interpolation method, use the Interpolation method parameter. For more information, see “Interpolation Methods” (Simulink).</p>

Interpolation method — Method

Flat (default) | Nearest | Linear point-slope | Linear Lagrange | Cubic spline

For more information, see “Interpolation Methods” (Simulink).

Dependencies

To enable this parameter, set **Efficiency factors** to Driveshaft torque, speed and temperature.

Input temperature — Create input port

off (default) | on

Select to create input port Temp for the temperature.

Dependencies

To enable this parameter, set **Efficiency factors** to Driveshaft torque, speed and temperature.

Open Differential

Crown wheel (ring gear) located — Specify crown wheel connection

To the left of center-line (default) | To the right of center-line

Specify the crown wheel connection to the driveshaft.

Carrier to drive shaft ratio, NC/ND — Ratio

scalar

Carrier-to-driveshaft gear ratio, N .

Carrier inertia, J_d — Inertia

scalar

Rotational inertia of the crown gear assembly, J_d , in $\text{kg}\cdot\text{m}^2$. You can include the driveshaft inertia.

Carrier damping, b_d — Damping

scalar

Crown gear linear viscous damping, b_d , in $\text{N}\cdot\text{m}\cdot\text{s}/\text{rad}$.

Axle 1 inertia, J_w1 — Inertia

scalar

Axle 1 rotational inertia, J_1 , in $\text{kg}\cdot\text{m}^2$.

Axle 1 damping, bw1 — Damping

scalar

Axle 1 linear viscous damping, b_1 , in N·m·s/rad.**Axle 2 inertia, Jw2 — Inertia**

scalar

Axle 2 rotational inertia, J_2 , in kg·m².**Axle 2 damping, bw2 — Damping**

scalar

Axle 2 linear viscous damping, b_2 , in N·m·s/rad.**Axle 1 initial velocity, omegaw1o — Angular velocity**

scalar

Axle 1 initial velocity, ω_{o1} , in rad/s.**Axle 2 initial velocity, omegaw2o — Angular velocity**

scalar

Axle 2 initial velocity, ω_{o2} , in rad/s.**Constant efficiency factor, eta — Efficiency**

1 (default)

Constant efficiency, η .**Dependencies**To enable this parameter, set **Efficiency factors** to Constant.**Efficiency lookup table, eta_tbl — Lookup table**

M-by-N-by-L array

Dimensionless array of values for efficiency as a function of:

- M input torques
- N input speed
- L air temperatures

Each value specifies the efficiency for a specific combination of torque, speed, and temperature. The array size must match the dimensions defined by the torque, speed, and temperature breakpoint vectors.

Dependencies

To enable this parameter, set **Efficiency factors** to Driveshaft torque, speed and temperature.

Efficiency torque breakpoints, Trq_bpts — Torque breakpoints

1-by-M vector

Vector of input torque, breakpoints for efficiency, in N·m.

Dependencies

To enable this parameter, set **Efficiency factors** to Driveshaft torque, speed and temperature.

Efficiency speed breakpoints, omega_bpts — Speed breakpoints

1-by-N vector

Vector of speed, breakpoints for efficiency, in rad/s.

Dependencies

To enable this parameter, set **Efficiency factors** to Driveshaft torque, speed and temperature.

Efficiency temperature breakpoints, Temp_bpts — Temperature breakpoints

1-by-L vector

Vector of ambient temperature breakpoints for efficiency, in K.

Dependencies

To enable this parameter, set **Efficiency factors** to Driveshaft torque, speed and temperature.

Ambient temperature, Tamb — Ambient temperature

scalar

Ambient air temperature, T_{air} , in K.

Dependencies

To enable this parameter:

- Set **Efficiency factors** to Driveshaft torque, speed and temperature.
- Clear **Input temperature**.

Slip Coupling**Coupling type — Torque coupling**

Pre-loaded ideal clutch (default) | Slip speed dependent torque data |
Input torque dependent torque data

Specify the type of torque coupling.

Number of disks, Ndisks — Torque coupling

scalar

Number of disks.

Dependencies

To enable the ideal clutch parameters, select Pre-loaded ideal clutch for the **Coupling type** parameter.

Effective radius, R_{eff} — Radius

scalar

The effective radius, R_{eff} , used with the applied clutch friction force to determine the friction force. The effective radius is defined as:

$$R_{eff} = \frac{2(R_o^3 - R_i^3)}{3(R_o^2 - R_i^2)}$$

The equation uses these variables.

R_o Annular disk outer radius

R_i Annular disk inner radius

Dependencies

To enable the clutch parameters, select Pre-loaded ideal clutch for the **Coupling type** parameter.

Nominal preload force, F_c — Force
scalar

Nominal preload force, in N.

Dependencies

To enable the clutch parameters, select Pre-loaded ideal clutch for the **Coupling type** parameter.

Friction coefficient vector, μ — Friction
vector

Friction coefficient vector.

Dependencies

To enable the clutch parameters, select Pre-loaded ideal clutch for the **Coupling type** parameter.

Slip speed vector, $d\omega$ — Angular velocity
vector

Slip speed vector, in rad/s.

Dependencies

To enable the clutch parameters, select Pre-loaded ideal clutch for the **Coupling type** parameter.

Torque - slip speed vector, $T_{d\omega}$ — Torque
vector

Torque vector, in N·m.

Dependencies

To enable the slip speed parameters, select Slip speed dependent torque data for the **Coupling type** parameter.

Slip speed vector, $d\omega_T$ — Angular velocity
vector

Slip speed vector, in rad/s.

Dependencies

To enable the slip speed parameters, select Slip speed dependent torque data for the **Coupling type** parameter.

Torque - input torque vector, T_{in} – Torque vector

Torque vector, in N·m.

Dependencies

To enable the input torque parameters, select Input torque dependent torque data for the **Coupling type** parameter.

Input torque vector, T_{in} – Torque vector

Torque vector, in N·m.

Dependencies

To enable the input torque parameters, select Input torque dependent torque data for the **Coupling type** parameter.

Coupling time constant, tau_C – Constant scalar

Coupling time constant, in s.

References

[1] Deur, J., Ivanović, V., Hancock, M., and Assadian, F. "Modeling of Active Differential Dynamics." In ASME proceedings. *Transportation Systems*. Vol. 17, pp: 427-436.

Extended Capabilities**C/C++ Code Generation**

Generate C and C++ code using Simulink® Coder™.

See Also


Open Differential

Introduced in R2017a

Open Differential

Differential as a planetary bevel gear

Library: Powertrain Blockset / Drivetrain / Final Drive Unit
 Vehicle Dynamics Blockset / Powertrain / Drivetrain /
 Final Drive Unit



Description

The Open Differential block implements a differential as a planetary bevel gear train. The block matches the driveshaft bevel gear to the crown (ring) bevel gear. You can specify:


- Carrier-to-driveshaft ratio
- Crown wheel location
- Viscous and damping coefficients for the axles and carrier

Use the Open Differential block to:

- Dynamically couple the post-transmission driveshaft to the wheel axles or universal joints
- Model simplified or older drivetrains when optimal traction control does not require passive or active torque vectoring
- Model mechanical power splitting in generic gearbox and drive line scenarios

The block is suitable for use in hardware-in-the-loop (HIL) and optimization workflows. All the parameters are tunable.

The block uses a coordinate system that produces positive tire and vehicle motion for standard engine, transmission, and differential configurations. The arrows indicate positive motion.

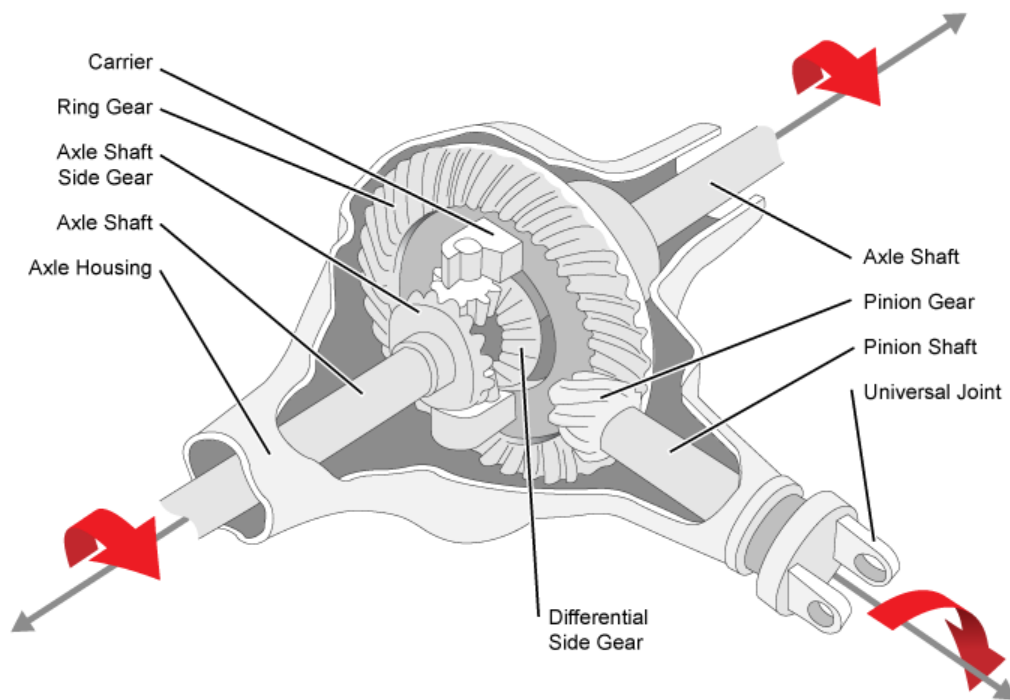

Efficiency

To account for the block efficiency, use the **Efficiency factors** parameter. This table summarizes the block implementation for each setting.

Setting	Implementation
Constant	Constant efficiency that you can set with the Constant efficiency factor, eta parameter.

Setting	Implementation
Driveshaft torque, temperature and speed	<p>Efficiency as a function of base gear input torque, air temperature, and driveshaft speed. Use these parameters to specify the lookup table and breakpoints:</p> <ul style="list-style-type: none"> • Efficiency lookup table, eta_tbl • Efficiency torque breakpoints, Trq_bpts • Efficiency speed breakpoints, omega_bpts • Efficiency temperature breakpoints, Temp_bpts <p>For the air temperature, you can either:</p> <ul style="list-style-type: none"> • Select Input temperature to create an input port. • Set a Ambient temperature, Tamb parameter value. <p>To select the interpolation method, use the Interpolation method parameter. For more information, see “Interpolation Methods” (Simulink).</p>

Power Accounting

For the power accounting, the block implements these equations.

Bus Signal		Description	Equations
PwrInfo	PwrTrnsfrd — Power transferred between blocks	PwrDriveshft	Mechanical power from driveshaft $\eta T_d \omega_d$
	<ul style="list-style-type: none"> • Positive signals indicate flow into block • Negative signals indicate flow out of block 	PwrAxl1	Mechanical power from axle 1 $\eta T_1 \omega_1$
		PwrAxl2	Mechanical power from axle 2 $\eta T_2 \omega_2$

Bus Signal			Description	Equations
PwrNotTrnsfrd — Power crossing the block boundary, but not transferred	<ul style="list-style-type: none"> • Positive signals indicate an input • Negative signals indicate a loss 	PwrMechLoss	Total power loss	$\dot{W}_{loss} = -(P_t + P_d) + P_s$ $P_t = \eta T_d \omega_d + \eta T_1 \omega_1 + \eta T_2 \omega_2$
		PwrDampLoss	Power loss due to damping	$P_d = -(b_1 \omega_1 + b_2 \omega_2 + b_d \omega_d)$
PwrStored — Stored energy rate of change	<ul style="list-style-type: none"> • Positive signals indicate an increase • Negative signals indicate a decrease 	PwrStoredShft	Rate change of stored internal energy	$P_s = -(\omega_1 \dot{\omega}_1 J_1 + \omega_2 \dot{\omega}_2 J_2 + \omega_d \dot{\omega}_d J_d)$

Dynamics

The Open Differential block implements these differential equations to represent the mechanical dynamic response for the crown gear, left axle, and right axle.

Mechanical Dynamic Response	Differential Equation
Crown Gear	$\dot{\omega}_d J_d = \eta T_d - \omega_d b_d - T_i$
Left Axle	$\dot{\omega}_1 J_1 = \eta T_1 - \omega_1 b_1 - T_{i1}$
Right Axle	$\dot{\omega}_2 J_2 = \eta T_2 - \omega_2 b_2 - T_{i2}$

The Open Differential block assumes rigid coupling between the crown gear and axles. These constraint equations apply.

$$\eta T_1 = \eta T_2 = \frac{N}{2} T_i$$

$$\omega_d = \frac{N}{2}(\omega_1 + \omega_2)$$

The equations use these variables.

N	Carrier-to-driveshaft gear ratio
J_d	Rotational inertia of the crown gear assembly
b_d	Crown gear linear viscous damping
ω_d	Driveshaft angular speed
η	Differential efficiency
J_1	Axle 1 rotational inertia
b_1	Axle 1 linear viscous damping
ω_1	Axle 1 speed
J_2	Axle 2 rotational inertia
b_2	Axle 2 linear viscous damping
ω_2	Axle 2 angular speed
T_d	Driveshaft torque
T_1	Axle 1 torque
T_2	Axle 2 torque
T_i	Driveshaft internal resistance torque
T_{i1}	Axle 1 internal resistance torque
T_{i2}	Axle 2 internal resistance torque

Ports

Inputs

DriveshaftTrq – Torque

scalar

Applied input torque, typically from the engine crankshaft, in N·m.

Ax11Trq – Torque

scalar

Axle 1 torque, T_1 , in N·m.

Axl2Trq — Torque

scalar

Axle 2 torque, T_2 , in N·m.

Temp — Temperature

scalar

Temperature, in K.

Dependencies

To create this port:

- Set **Efficiency factors** to Driveshaft torque, speed and temperature.
- Select **Input temperature**.

Output

Info — Bus signal

bus

Bus signal containing these block calculations.

Signal		Description	Units
Driveshft	DriveshftTrq	Driveshaft torque	N·m
	DriveshftSpd	Driveshaft speed	rad/s
Axl1	Axl1Trq	Axle 1 torque	N·m
	Axl1Spd	Axle 1 speed	rad/s
Axl2	Axl2Trq	Axle 2 torque	N·m
	Axl2Spd	Axle 2 speed	rad/s
PwrInfo	PwrTrnsfrd	PwrDriveshft	Mechanical power from driveshaft
		PwrAxl1	Mechanical power from axle 1

Signal		Description	Units
	PwrAx12	Mechanical power from axle 2	W
	PwrTrnsfrd	PwrMechLoss	Total power loss
		PwrDampLoss	Power loss due to damping
	PwrStored	PwrStoredShft	Rate change of stored internal energy

DriveshftSpd – Angular speed

scalar

Driveshaft angular speed, ω_d , in rad/s.

Axl1Spd – Angular speed

scalar

Axle 1 angular speed, ω_1 , in rad/s.

Axl2Spd – Angular speed

scalar

Axle 2 angular speed, ω_2 , in rad/s.

Parameters

Block Options

Efficiency factors – Specify configuration

Constant (default) | Driveshaft torque, speed and temperature

To account for the block efficiency, use the **Efficiency factors** parameter. This table summarizes the block implementation for each setting.

Setting	Implementation
Constant	Constant efficiency that you can set with the Constant efficiency factor, eta parameter.

Setting	Implementation
Driveshaft torque, temperature and speed	<p>Efficiency as a function of base gear input torque, air temperature, and driveshaft speed. Use these parameters to specify the lookup table and breakpoints:</p> <ul style="list-style-type: none"> • Efficiency lookup table, eta_tbl • Efficiency torque breakpoints, Trq_bpts • Efficiency speed breakpoints, omega_bpts • Efficiency temperature breakpoints, Temp_bpts <p>For the air temperature, you can either:</p> <ul style="list-style-type: none"> • Select Input temperature to create an input port. • Set a Ambient temperature, Tamb parameter value. <p>To select the interpolation method, use the Interpolation method parameter. For more information, see “Interpolation Methods” (Simulink).</p>

Interpolation method — Method

Flat (default) | Nearest | Linear point-slope | Linear Lagrange | Cubic spline

For more information, see “Interpolation Methods” (Simulink).

Dependencies

To enable this parameter, set **Efficiency factors** to Driveshaft torque, speed and temperature.

Input temperature — Create input port

off (default) | on

Select to create input port Temp for the temperature.

Dependencies

To enable this parameter, set **Efficiency factors** to Driveshaft torque, speed and temperature.

Crown wheel (ring gear) located — Specify crown wheel connection

To the left of center-line (default) | To the right of center-line

Specify the crown wheel connection to the driveshaft.

Carrier to drive shaft ratio, Ndiff – Ratio

scalar

Carrier-to-driveshaft gear ratio, N , dimensionless.

Carrier inertia, Jd – Inertia

scalar

Rotational inertia of the crown gear assembly, J_d , in $\text{kg}\cdot\text{m}^2$. You can include the driveshaft inertia.

Carrier damping, bd – Damping

scalar

Crown gear linear viscous damping, b_d , in $\text{N}\cdot\text{m}\cdot\text{s}/\text{rad}$.

Axle 1 inertia, Jw1 – Inertia

scalar

Axle 1 rotational inertia, J_1 , in $\text{kg}\cdot\text{m}^2$.

Axle 1 damping, bw1 – Damping

scalar

Axle 1 linear viscous damping, b_1 , in $\text{N}\cdot\text{m}\cdot\text{s}/\text{rad}$.

Axle 2 inertia, Jw2 – Inertia

scalar

Axle 2 rotational inertia, J_2 , in $\text{kg}\cdot\text{m}^2$.

Axle 2 damping, bw2 – Damping

scalar

Axle 2 linear viscous damping, b_2 , in $\text{N}\cdot\text{m}\cdot\text{s}/\text{rad}$.

Axle 1 initial velocity, omegaw1o – Angular velocity

scalar

Axle 1 initial velocity, ω_{o1} , in rad/s .

Axle 2 initial velocity, omegaw2o — Angular velocity
scalar

Axle 2 initial velocity, ω_{o2} , in rad/s.

Efficiency

Constant efficiency factor, eta — Efficiency
1 (default)

Constant efficiency, η .

Dependencies

To enable this parameter, set **Efficiency factors** to Constant.

Efficiency lookup table, eta_tbl — Lookup table
M-by-N-by-L array

Dimensionless array of values for efficiency as a function of:

- M input torques
- N input speed
- L air temperatures

Each value specifies the efficiency for a specific combination of torque, speed, and temperature. The array size must match the dimensions defined by the torque, speed, and temperature breakpoint vectors.

Dependencies

To enable this parameter, set **Efficiency factors** to Driveshaft torque, speed and temperature.

Efficiency torque breakpoints, Trq_bpts — Torque breakpoints
1-by-M vector

Vector of input torque, breakpoints for efficiency, in N·m.

Dependencies

To enable this parameter, set **Efficiency factors** to Driveshaft torque, speed and temperature.

Efficiency speed breakpoints, omega_bpts — Speed breakpoints

1-by-N vector

Vector of speed, breakpoints for efficiency, in rad/s.

Dependencies

To enable this parameter, set **Efficiency factors** to Driveshaft torque, speed and temperature.

Efficiency temperature breakpoints, Temp_bpts — Temperature breakpoints

1-by-L vector

Vector of ambient temperature breakpoints for efficiency, in K.

Dependencies

To enable this parameter, set **Efficiency factors** to Driveshaft torque, speed and temperature.

Ambient temperature, Tamb — Ambient temperature

scalar

Ambient air temperature, T_{air} , in K.

Dependencies

To enable this parameter:

- Set **Efficiency factors** to Driveshaft torque, speed and temperature.
- Clear **Input temperature**.

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using Simulink® Coder™.

See Also


Limited Slip Differential

Introduced in R2017a

Longitudinal Wheel

Longitudinal wheel with disc, drum, or mapped brake

Library: Powertrain Blockset / Drivetrain / Wheels
 Vehicle Dynamics Blockset / Wheels and Tires

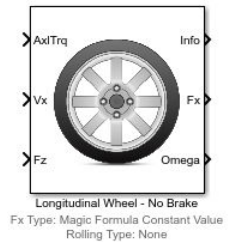

Description

The Longitudinal Wheel block implements the longitudinal behavior of an ideal wheel. You can specify the longitudinal force and rolling resistance calculation method, and brake type. Use the block in driveline and longitudinal vehicle simulations where low frequency tire-road and braking forces are required to determine vehicle acceleration, braking, and wheel-rolling resistance. For example, you can use the block to determine the torque and power requirements for a specified drive cycle or braking event. The block is not suitable for applications that require combined lateral slip.

There are four types of Longitudinal Wheel blocks. Each block implements a different brake type.

Block Name	Brake Type Setting	Brake Implementation
Longitudinal Wheel - No Brake	None	None
Longitudinal Wheel - Disc Brake	Disc	Brake that converts the brake cylinder pressure into a braking force.
Longitudinal Wheel - Drum Brake	Drum	Simplex drum brake that converts the applied force and brake geometry into a net braking torque.

Block Name	Brake Type Setting	Brake Implementation
Longitudinal Wheel - Mapped Brake	Mapped	Lookup table that is a function of the wheel speed and applied brake pressure.

The block models longitudinal force as a function of wheel slip relative to the road surface. To calculate the longitudinal force, specify one of these **Longitudinal Force** parameters.

Setting	Block Implementation
Magic Formula constant value	Magic Formula with constant coefficient for stiffness, shape, peak, and curvature.
Magic Formula pure longitudinal slip	Magic Formula with load-dependent coefficients that implement equations 4.E9 through 4.E18 in <i>Tire and Vehicle Dynamics</i> .
Mapped force	Lookup table that is a function of the normal force and wheel slip ratio.

To calculate the rolling resistance torque, specify one of these **Rolling Resistance** parameters.

Setting	Block Implementation
None	None
Pressure and velocity	Method in <i>Stepwise Coastdown Methodology for Measuring Tire Rolling Resistance</i> . The rolling resistance is a function of tire pressure, normal force, and velocity.
ISO 28580	Method specified in ISO 28580:2018, <i>Passenger car, truck and bus tyre rolling resistance measurement method — Single point test and correlation of measurement results</i> .
Magic Formula	Magic formula equations from 4.E70 in <i>Tire and Vehicle Dynamics</i> . The magic formula is an empirical equation based on fitting coefficients.
Mapped torque	Lookup table that is a function of the normal force and spin axis longitudinal velocity.

To calculate vertical motion, specify one of these **Vertical Motion** parameters.

Setting	Block Implementation
None	Block passes the applied chassis forces directly through to the rolling resistance and longitudinal force calculations.
Mapped stiffness and damping	Vertical motion depends on wheel stiffness and damping. Stiffness is a function of tire sidewall displacement and pressure. Damping is a function of tire sidewall velocity and pressure.

Rotational Wheel Dynamics

The block calculates the inertial response of the wheel subject to:

- Axle losses
- Brake and drive torque
- Tire rolling resistance
- Ground contact through the tire-road interface

The input torque is the summation of the applied axle torque, braking torque, and moment arising from the combined tire torque.

$$T_i = T_a - T_b + T_d$$

For the moment arising from the combined tire torque, the block implements tractive wheel forces and rolling resistance with first order dynamics. The rolling resistance has a time constant parameterized in terms of a relaxation length.

$$T_d(s) = \frac{1}{\frac{|\omega| R_e}{L_e} s + 1} (F_x R_e + M_y)$$

To calculate the rolling resistance torque, you can specify one of these **Rolling Resistance** parameters.

Setting	Block Implementation
None	Block sets rolling resistance, M_y , to zero.

Setting	Block Implementation
Pressure and velocity	Block uses the method in SAE <i>Stepwise Coastdown Methodology for Measuring Tire Rolling Resistance</i> . The rolling resistance is a function of tire pressure, normal force, and velocity. Specifically, $M_y = R_e \{ a + b V_x + cV_x^2 \} \{ F_z \beta p_i^\alpha \} \tanh(4V_x)$
ISO 28580	Block uses the method specified in ISO 28580:2018, <i>Passenger car, truck and bus tyre rolling resistance measurement method — Single point test and correlation of measurement results</i> . The method accounts for normal load, parasitic loss, and thermal corrections from test conditions. Specifically, $M_y = R_e \left(\frac{F_z C_r}{1 + K_t(T_{amb} - T_{meas})} - F_{pl} \right) \tanh(\omega)$
Magic Formula	Block calculates the rolling resistance, M_y , using the Magic Formula equations from 4.E70 in <i>Tire and Vehicle Dynamics</i> . The magic formula is an empirical equation based on fitting coefficients.
Mapped torque	For the rolling resistance, M_y , the block uses a lookup table that is a function of the normal force and spin axis longitudinal velocity.

If the brakes are enabled, the block determines the braking locked or unlocked condition based on an idealized dry clutch friction model. Based on the lock-up condition, the block implements these friction and dynamic models.

If	Lock-Up Condition	Friction Model	Dynamic Model
$\omega \neq 0$ or $T_S < T_i + T_f - \omega b $	Unlocked	$T_f = T_k$ where, $T_k = F_c R_{eff} \mu_k \tanh[4(-\omega_d)]$ $T_s = F_c R_{eff} \mu_s$ $R_{eff} = \frac{2(R_o^3 - R_i^3)}{3(R_o^2 - R_i^2)}$	$\dot{\omega} J = -\omega b + T_i + T_o$
$\omega = 0$ and $T_S \geq T_i + T_f - \omega b $	Locked	$T_f = T_s$	$\omega = 0$

The equations use these variables.


ω	Wheel angular velocity
a	Velocity-independent force component
b	Linear velocity force component
c	Quadratic velocity force component
L_e	Tire relaxation length
J	Moment of inertia
M_y	Rolling resistance torque
T_a	Applied axle torque
T_b	Braking torque
T_d	Combined tire torque
T_f	Frictional torque
T_i	Net input torque
T_k	Kinetic frictional torque
T_o	Net output torque
T_s	Static frictional torque
F_c	Applied clutch force
F_x	Longitudinal force developed by the tire road interface due to slip
R_{eff}	Effective clutch radius
R_o	Annular disk outer radius
R_i	Annular disk inner radius
R_e	Effective tire radius while under load and for a given pressure
V_x	Longitudinal axle velocity
F_z	Vehicle normal force
C_r	Rolling resistance constant
T_{amb}	Ambient temperature
T_{meas}	Measured temperature for rolling resistance constant
F_{pl}	Parasitic force loss
K_t	Thermal correction factor

α	Tire pressure exponent
β	Normal force exponent
p_i	Tire pressure
μ_s	Coefficient of static friction
μ_k	Coefficient of kinetic friction

Brakes

Disc

If you specify the **Brake Type** parameter `Disc`, the block implements a disc brake. This figure shows the side and front views of a disc brake.

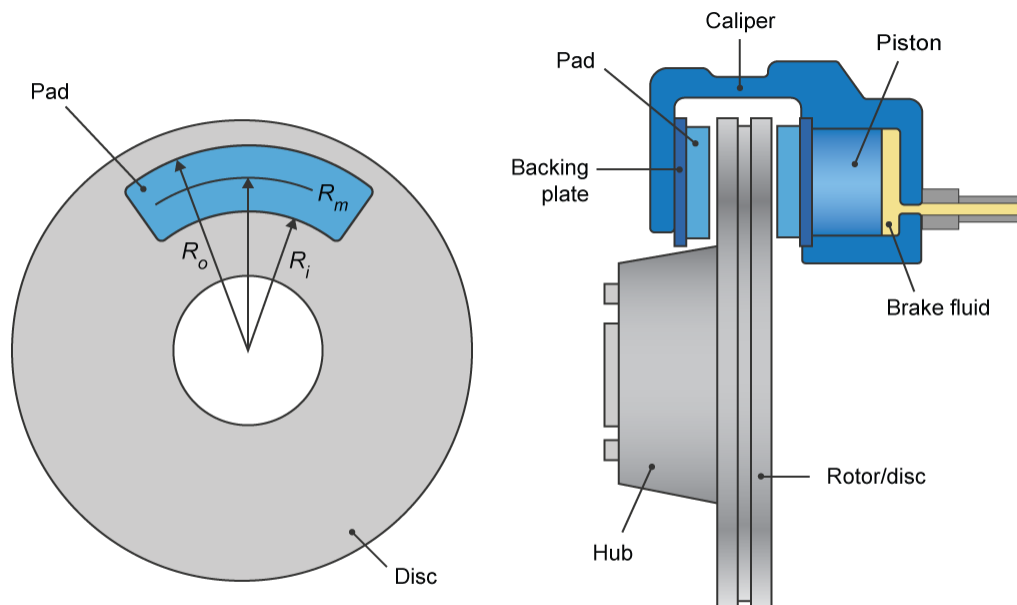

A disc brake converts brake cylinder pressure from the brake cylinder into force. The disc brake applies the force at the brake pad mean radius.

The block uses these equations to calculate brake torque for the disc brake.

$$T = \begin{cases} \frac{\mu P \pi B_a^2 R_m N_{pads}}{4} & \text{when } N \neq 0 \\ \frac{\mu_{static} P \pi B_a^2 R_m N_{pads}}{4} & \text{when } N = 0 \end{cases}$$

$$R_m = \frac{R_o + R_i}{2}$$

The equations use these variables.

T	Brake torque
P	Applied brake pressure
N	Wheel speed
N_{pads}	Number of brake pads in disc brake assembly
μ_{static}	Disc pad-rotor coefficient of static friction
μ	Disc pad-rotor coefficient of kinetic friction
B_a	Brake actuator bore diameter
R_m	Mean radius of brake pad force application on brake rotor
R_o	Outer radius of brake pad
R_i	Inner radius of brake pad

Drum

If you specify the **Brake Type** parameter Drum, the block implements a static (steady-state) simplex drum brake. A simplex drum brake consists of a single two-sided hydraulic actuator and two brake shoes. The brake shoes do not share a common hinge pin.


The simplex drum brake model uses the applied force and brake geometry to calculate a net torque for each brake shoe. The drum model assumes that the actuators and shoe geometry are symmetrical for both sides, allowing a single set of geometry and friction parameters to be used for both shoes.

The block implements equations that are derived from these equations in *Fundamentals of Machine Elements*.

$$T_{rshoe} = \left(\frac{\pi \mu c r (\cos \theta_2 - \cos \theta_1) B a^2}{2 \mu (2r (\cos \theta_2 - \cos \theta_1) + a (\cos^2 \theta_2 - \cos^2 \theta_1)) + ar (2\theta_1 - 2\theta_2 + \sin 2\theta_2 - \sin 2\theta_1)} \right) P$$

$$T_{lshoe} = \left(\frac{\pi \mu c r (\cos \theta_2 - \cos \theta_1) B a^2}{-2 \mu (2r (\cos \theta_2 - \cos \theta_1) + a (\cos^2 \theta_2 - \cos^2 \theta_1)) + ar (2\theta_1 - 2\theta_2 + \sin 2\theta_2 - \sin 2\theta_1)} \right) P$$

$$T = \begin{cases} T_{rshoe} + T_{lshoe} & \text{when } N \neq 0 \\ (T_{rshoe} + T_{lshoe}) \frac{\mu_{static}}{\mu} & \text{when } N = 0 \end{cases}$$

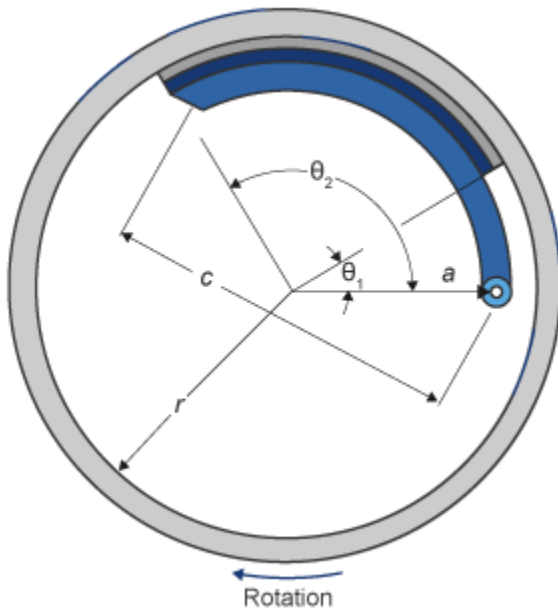

The equations use these variables.

- | | |
|----------------|--|
| T | Brake torque |
| P | Applied brake pressure |
| N | Wheel speed |
| μ_{static} | Disc pad-rotor coefficient of static friction |
| μ | Disc pad-rotor coefficient of kinetic friction |

T_{rshoe}	Right shoe brake torque
T_{lshoe}	Left shoe brake torque
a	Distance from drum center to shoe hinge pin center
c	Distance from shoe hinge pin center to brake actuator connection on brake shoe
r	Drum internal radius
B_a	Brake actuator bore diameter
Θ_1	Angle from shoe hinge pin center to start of brake pad material on shoe
Θ_2	Angle from shoe hinge pin center to end of brake pad material on shoe

Mapped

If you specify the **Brake Type** parameter Mapped, the block uses a lookup table to determine the brake torque.


$$T = \begin{cases} f_{brake}(P, N) & \text{when } N \neq 0 \\ \left(\frac{\mu_{static}}{\mu}\right)f_{brake}(P, N) & \text{when } N = 0 \end{cases}$$

The equations use these variables.

T	Brake torque
$f_{brake}(P, N)$	Brake torque lookup table
P	Applied brake pressure
N	Wheel speed
μ_{static}	Friction coefficient of drum pad-face interface under static conditions
μ	Friction coefficient of disc pad-rotor interface

The lookup table for the brake torque, $f_{brake}(P, N)$, is a function of applied brake pressure and wheel speed, where:

- T is brake torque, in N·m.
- P is applied brake pressure, in bar.
- N is wheel speed, in rpm.

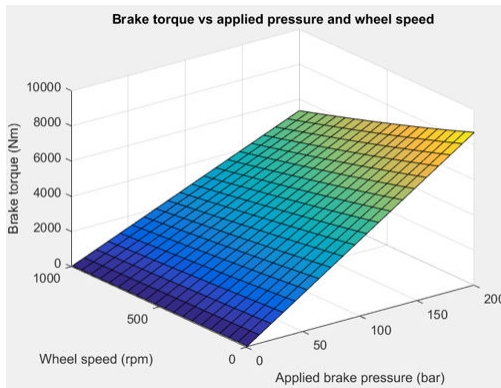

Longitudinal Force

To model the Longitudinal Wheel block longitudinal forces, you can use the Magic Formula. The model provides a steady-state *tire characteristic function* $F_x = f(\kappa, F_z)$, the longitudinal force F_x on the tire, based on:

- Vertical load F_z
- Wheel slip κ



The Magic Formula model uses these variables.

Ω	Wheel angular velocity
r_w	Wheel radius
V_x	Wheel hub longitudinal velocity
$r_w\Omega$	Tire tread longitudinal velocity
$V_{sx} = r_w\Omega - V_x$	Wheel slip velocity
$\kappa = V_{sx}/ V_x $	Wheel slip
F_z, F_{z0}	Vertical load and nominal vertical load on tire
$F_x = f(\kappa, F_z)$	Longitudinal force exerted on the tire at the contact point. Also a characteristic function f of the tire.

Magic Formula Constant Value

If you set **Longitudinal Force** to Magic Formula constant value, the block implements the Magic Formula as a specific form of the tire characteristic function, characterized by four dimensionless coefficients (B, C, D, E), or stiffness, shape, peak, and curvature:

$$F_x = f(\kappa, F_z) = F_z D \sin\left(C \tan^{-1}\left[\left\{B\kappa - E\left[B\kappa - \tan^{-1}(B\kappa)\right]\right\}\right]\right)$$

The slope of f at $\kappa = 0$ is $BCD \cdot F_z$.

The coefficients are based on empirical tire data. These values are typical sets of constant Magic Formula coefficients for common road conditions.

Surface	B	C	D	E
Dry tarmac	10	1.9	1	0.97
Wet tarmac	12	2.3	0.82	1
Snow	5	2	0.3	1
Ice	4	2	0.1	1

Magic Formula Pure Longitudinal Slip

If you set **Longitudinal Force** to Magic Formula pure longitudinal slip, the block implements a more general Magic Formula using dimensionless coefficients that

are functions of the tire load. The block implements the longitudinal force equations in Chapter 4 of *Tire and Vehicle Dynamics*, including 4.E9 through 4.E18:

$$F_{x0} = D_x \sin\left(C_x \tan^{-1}\left[\left\{B_x \kappa_x - E_x [B_x \kappa_x - \tan^{-1}(B_x \kappa_x)]\right\}\right]\right) + S_{Vx}$$

where:

$$\kappa_x = \kappa + S_{Hx}$$

$$C_x = p_{Cx1} \lambda_{Cx}$$

$$D_x = \mu_x F_z c_1$$

$$\mu_x = (p_{Dx1} + p_{Dx2} df_z)(1 + p_{px3} dp_i + p_{px4} dp_i^2)(1 - p_{Dx3} v^2) \lambda_{\mu x}^*$$

$$E_x = (p_{Ex1} + p_{Ex2} df_z + p_{Ex3} df_z^2)[1 - p_{Ex4} \text{sgn}(\kappa_x)] \lambda_{Ex}$$

$$K_{xk} = F_z (p_{Kx1} + p_{Kx2} df_z) \exp(p_{Kx3} df_z)(1 + p_{px1} dp_i + p_{px2} dp_i^2)$$

$$B_x = K_{xk} / (C_x D_x + \varepsilon_x)$$

$$S_{Hx} = p_{Hx1} + p_{Hx2} df_z$$

$$S_{Vx} = F_z \cdot (p_{Vx1} + p_{Vx2} df_z) \lambda_{Vx} \lambda'_{\mu x} c_1$$

S_{Hx} and S_{Vx} represent offsets to the slip and longitudinal force in the force-slip function, or horizontal and vertical offsets if the function is plotted as a curve. μ_x is the longitudinal load-dependent friction coefficient. ε_x is a small number inserted to prevent division by zero as F_z approaches zero.

Vertical Dynamics

If you select no vertical degrees-of-freedom by setting **Vertical Motion** to **None**, the block passes the applied chassis forces directly through to the rolling resistance and longitudinal force calculations.

If you set **Vertical Motion** to **Mapped stiffness and damping**, the vertical motion depends on wheel stiffness and damping. Stiffness is a function of tire sidewall displacement and pressure. Damping is a function of tire sidewall velocity and pressure.

$$F_{ztire}(z, \dot{z}, P_{tire}) = F_{zk}(z, P_{tire}) + F_{zb}(\dot{z}, P_{tire})$$

The block determines the vertical response using this differential equation.


$$\ddot{z}m = F_{ztire} - F_z - mg$$

When you disable the vertical degree-of-freedom, the input normal force from the vehicle passes directly to the longitudinal and rolling force calculations.

$$\ddot{z} = \dot{z} = z = 0$$

$$F_{ztire} = mg$$

The block uses the wheel-fixed frame to resolve the vertical forces.

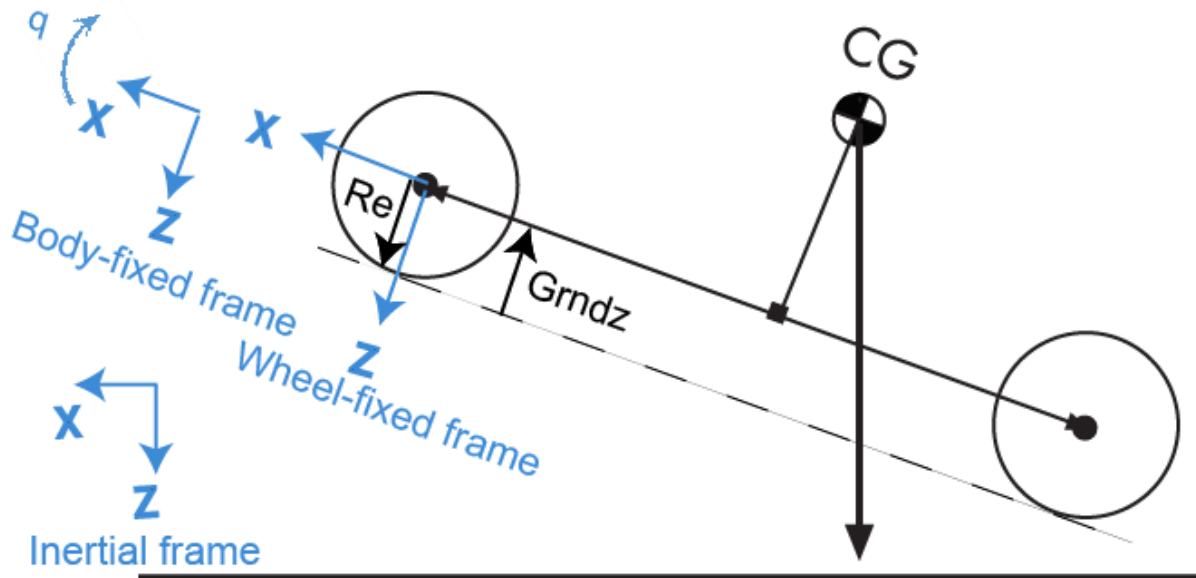

The equations use these variables.

F_{ztire}	Tire normal force along the wheel-fixed z -axis
m	Axle mass
F_{zk}	Tire normal force due to wheel stiffness along the wheel-fixed z -axis
F_{zb}	Tire normal force due to wheel damping along the wheel-fixed z -axis
F_z	Suspension or vehicle normal force along the wheel-fixed z -axis
P_{Tire}	Tire pressure

z, \dot{z}, \ddot{z} Tire displacement, velocity, and acceleration, respectively, along the wheel-fixed z -axis

Power Accounting

For the power accounting, the block implements these equations.

Bus Signal		Description	Equations
PwrIn fo	PwrTrnsfrd — Power transferred between blocks • Positive signals indicate flow into block • Negative signals indicate flow out of block	PwrRoad	Tractive power applied from the axle $P_{road} = F_x V_x$
		PwrAxlTrq	External torque applied by the axle to the wheel $P_T = T\omega$
		PwrFz	Vertical force applied to the wheel by the vehicle or suspension $P_{Fz} = F_z \dot{z}$
PwrNotTrnsfrd — Power crossing the block boundary, but not transferred • Positive signals indicate an input • Negative signals indicate a loss	PwrSlip	Tractive power loss $P_K = F_x V_x + (-F_{cp} R_e + M_y)\omega$	
	PwrMyRoll	Rolling resistance power $P_{My} = M_y \omega$	
	PwrMyBrk	Braking power $P_{brk} = M_{brk} \omega$	
	PwrMyb	Rolling viscous damping loss $P_b = -b\omega^2$	
	PwrFzDamp	Vertical damping power $P_{Fzb} = F_{zb} \dot{z}$	
PwrStored — Stored energy rate of change	PwrStoredzdot	Rate of change of vertical kinetic energy $P_{\dot{z}} = m\dot{z}\ddot{z}$	

Bus Signal		Description	Equations
<ul style="list-style-type: none"> • Positive signals indicate an increase • Negative signals indicate a decrease 	PwrStoredq	Rate of change of rotational kinetic energy	$P_{\omega} = I_{yy}\dot{\omega}\omega$
	PwrStoredFsFzSprng	Rate of change of stored sidewall potential energy	$P_{Fzk} = F_{zk}\dot{z}_x$
	PwrStoredGrvt y	Rate of change of gravitational potential energy	$P_g = -mg\dot{Z}$

The equations use these variables.

ω	Wheel angular velocity
b	Linear velocity force component
F_x	Longitudinal force developed by the tire road interface due to slip
F_{cp}	Tire slip force at contact patch
F_z	Vehicle normal force
F_{zb}	Tire normal force due to wheel damping
F_{zk}	Tire normal force due to wheel stiffness
I_{yy}	Wheel rotational inertia
M_{brk}	Braking moment
M_y	Rolling resistance torque
R_e	Effective tire radius while under load and for a given pressure
T	Axle torque applied on wheel
V_x	Longitudinal axle velocity
z, \dot{z}, \ddot{z}	Tire displacement, velocity, and acceleration, respectively
ω	Wheel angular velocity
\dot{Z}	Vehicle vertical velocity along vehicle-fixed z-axis

Ports

Input

BrkPrs — Brake pressure

scalar

Brake pressure, in Pa.

Dependencies

To create this port, for the **Brake Type** parameter, specify one of these types:

- Disc
- Drum
- Mapped

AxlTrq — Axle torque

scalar

Axle torque, T_a , about wheel spin axis, in N·m.

Vx — Velocity

scalar

Axle longitudinal velocity along vehicle(body)-fixed x-axis, in m/s.

Fz — Normal force


scalar

Absolute value of suspension or vehicle normal force along body-fixed z-axis, in N.

Gnd — Ground displacement

scalar

Ground displacement, Grndz, along negative wheel-fixed z-axis, in m.

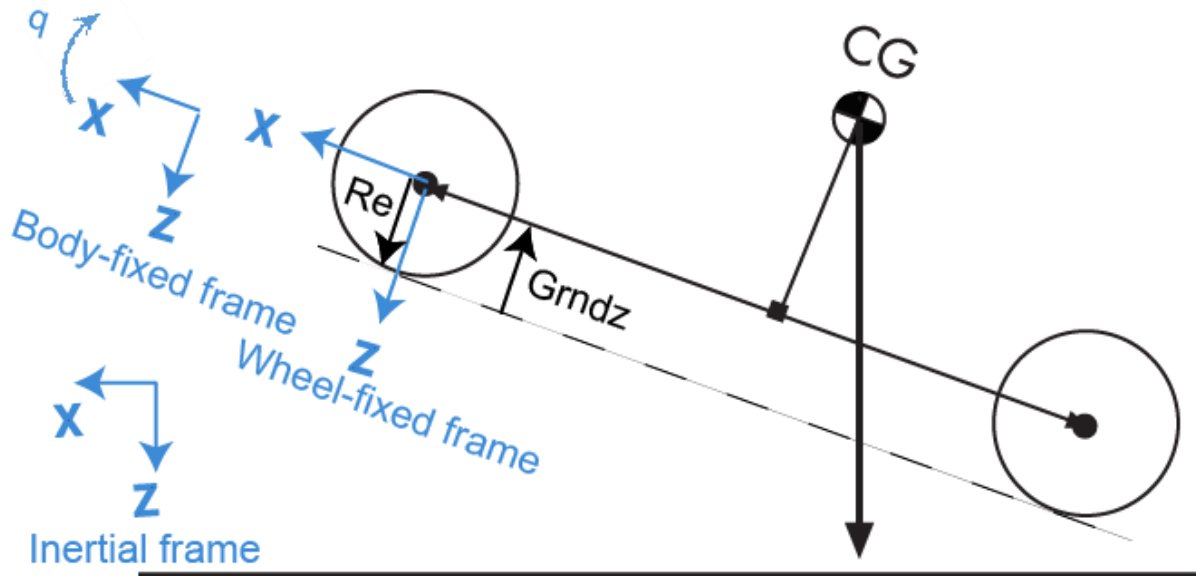

Dependencies

To create Gnd:

- Set **Vertical Motion** to Mapped stiffness and damping.
- On the **Vertical** pane, select **Input ground displacement**.

Lam_mux — Friction scaling factor

scalar

Longitudinal friction scaling factor, dimensionless.

Dependencies

To create this port, select **Input friction scale factor**.

TirePrs — Tire pressure

scalar

Tire pressure, in Pa.

Dependencies

To create this port:

- Set one of these parameters:
 - **Longitudinal Force** to Magic Formula pure longitudinal slip.
 - **Rolling Resistance** to Pressure and velocity or Magic Formula.
 - **Vertical Motion** to Mapped stiffness and damping.
- On the **Wheel Dynamics** pane, select **Input tire pressure**.

Tamb — Ambient temperature

scalar

Ambient temperature, T_{amb} , in K.

Dependencies

To create this port:

- 1 Set **Rolling Resistance** to ISO 28580.
- 2 On the **Rolling Resistance** pane, select to **Input ambient temperature**.

Output

Info — Bus signal

bus

Bus signal containing these block calculations.

Signal	Description	Units
AxlTrq	Axle torque about body-fixed y-axis	N·m
Omega	Wheel angular velocity about body-fixed y-axis	rad/s
Omegadot	Wheel angular acceleration about body-fixed y-axis	rad/s ²

Signal	Description	Units
Fx	Longitudinal vehicle force along body-fixed x -axis	N
Fz	Vertical vehicle force along body-fixed z -axis	N
Fzb	Tire normal force due to wheel damping along the wheel-fixed z -axis	N
Fzk	Tire normal force due to wheel stiffness along the wheel-fixed z -axis	N
My	Rolling resistance torque about body-fixed y -axis	N·m
Myb	Rolling resistance torque due to damping about body-fixed y -axis	N·m
Kappa	Slip ratio	NA
Vx	Vehicle longitudinal velocity along body-fixed x -axis	m/s
Re	Wheel effective radius along wheel-fixed z -axis	m
BrkTrq	Brake torque about body-fixed y -axis	N·m
BrkPrs	Brake pressure	Pa
z	Wheel vertical deflection along wheel-fixed z -axis	m
zdot	Wheel vertical velocity along wheel-fixed z -axis	m/s
zddot	Wheel vertical acceleration along wheel-fixed z -axis	m/s ²

Signal		Description	Units	
Gndz		Ground displacement along negative of wheel-fixed z-axis (positive input produces wheel lift)	m	
GndFz		Vertical wheel force on ground along negative of wheel-fixed z-axis	N	
TirePrs		Tire pressure	Pa	
Fpatch		Tractive power applied from the axle		
PwrInfo	PwrTrnsfrd	PwrRoad	External torque applied by the axle to the wheel	W
		PwrAxlTrq	Vertical force applied to the wheel by the vehicle or suspension	W
		PwrFz	Tractive power loss	W
	PwrNotTrnsfrd	PwrSlip	Rolling resistance power	W
		PwrMyRoll	Braking power	W
		PwrMyBrk	Rolling viscous damping loss	W
		PwrMyb	Vertical damping power	W
		PwrFzDamp	Rate of change of vertical kinetic energy	W
	PwrStored	PwrStoredzdot	Rate of change of rotational kinetic energy	W
		PwrStoredq	Rate of change of stored sidewall potential energy	W
		PwrStoredFsFzSprng	Rate of change of gravitational potential energy	W
		PwrStoredGrvty	Tractive power applied from the axle	W

F_x — Longitudinal axle force

scalar

Longitudinal force acting on axle, along body-fixed x-axis, in N. Positive force acts to move the vehicle forward.

Omega — Wheel angular velocity

scalar

Wheel angular velocity, about body-fixed y-axis, in rad/s.

z — Wheel vertical deflection

scalar

Wheel vertical deflection along wheel-fixed z-axis, in m.

Dependencies

To create this port, set **Vertical Motion** to Mapped stiffness and damping.

zdot — Wheel vertical velocity

scalar

Wheel vertical velocity along wheel-fixed z-axis, in m/s.

Dependencies

To create this port, set **Vertical Motion** to Mapped stiffness and damping.

Parameters

Block Options

Longitudinal Force — Select type

Magic Formula constant value (default) | Magic Formula pure longitudinal slip | Mapped force

The block models longitudinal force as a function of wheel slip relative to the road surface. To calculate the longitudinal force, specify one of these **Longitudinal Force** parameters.

Setting	Block Implementation
Magic Formula constant value	Magic Formula with constant coefficient for stiffness, shape, peak, and curvature.
Magic Formula pure longitudinal slip	Magic Formula with load-dependent coefficients that implement equations 4.E9 through 4.E18 in <i>Tire and Vehicle Dynamics</i> .
Mapped force	Lookup table that is a function of the normal force and wheel slip ratio.

Dependencies

Selecting	Enables These Parameters
Magic Formula constant value	Pure longitudinal peak factor, Dx Pure longitudinal shape factor, Cx Pure longitudinal stiffness factor, Bx Pure longitudinal curvature factor, Ex

Selecting	Enables These Parameters
Magic Formula pure longitudinal slip	<p>Cfx shape factor, PCX1</p> <p>Longitudinal friction at nominal normal load, PDX1</p> <p>Frictional variation with load, PDX2</p> <p>Frictional variation with camber, PDX3</p> <p>Longitudinal curvature at nominal normal load, PEX1</p> <p>Variation of curvature factor with load, PEX2</p> <p>Variation of curvature factor with square of load, PEX3</p> <p>Longitudinal curvature factor with slip, PEX4</p> <p>Longitudinal slip stiffness at nominal normal load, PKX1</p> <p>Variation of slip stiffness with load, PKX2</p> <p>Slip stiffness exponent factor, PKX3</p> <p>Horizontal shift in slip ratio at nominal normal load, PHX1</p> <p>Variation of horizontal slip ratio with load, PHX2</p> <p>Vertical shift in load at nominal normal load, PVX1</p> <p>Variation of vertical shift with load, PVX2</p> <p>Linear variation of longitudinal slip stiffness with tire pressure, PPX1</p> <p>Quadratic variation of longitudinal slip stiffness with tire pressure, PPX2</p>

Selecting	Enables These Parameters
	<p>Linear variation of peak longitudinal friction with tire pressure, PPX3</p> <p>Quadratic variation of peak longitudinal friction with tire pressure, PPX4</p> <p>Linear variation of longitudinal slip stiffness with tire pressure, PPX1</p> <p>Slip speed decay function scaling factor, lam_muV</p> <p>Brake slip stiffness scaling factor, lam_Kxkappa</p> <p>Longitudinal shape scaling factor, lam_Cx</p> <p>Longitudinal curvature scaling factor, lam_Ex</p> <p>Longitudinal horizontal shift scaling factor, lam_Hx</p> <p>Longitudinal vertical shift scaling factor, lam_Vx</p>
Mapped force	<p>Slip ratio breakpoints, kappaFx</p> <p>Normal force breakpoints, FzFx</p> <p>Longitudinal force map, FxMap</p>

Rolling Resistance — Select type

None (default) | Pressure and velocity | ISO 28580 | Magic Formula | Mapped torque

To calculate the rolling resistance torque, specify one of these **Rolling Resistance** parameters.

Setting	Block Implementation
None	None

Setting	Block Implementation
Pressure and velocity	Method in <i>Stepwise Coastdown Methodology for Measuring Tire Rolling Resistance</i> . The rolling resistance is a function of tire pressure, normal force, and velocity.
ISO 28580	Method specified in ISO 28580:2018, <i>Passenger car, truck and bus tyre rolling resistance measurement method – Single point test and correlation of measurement results</i> .
Magic Formula	Magic formula equations from 4.E70 in <i>Tire and Vehicle Dynamics</i> . The magic formula is an empirical equation based on fitting coefficients.
Mapped torque	Lookup table that is a function of the normal force and spin axis longitudinal velocity.

Dependencies

Selecting	Parameters
Pressure and velocity	<p>Velocity independent force coefficient, a_{My}</p> <p>Linear velocity force component, b_{My}</p> <p>Quadratic velocity force component, c_{My}</p> <p>Tire pressure exponent, α_{My}</p> <p>Normal force exponent, β_{My}</p>
ISO 28580	<p>Parasitic losses force, F_{pl}</p> <p>Rolling resistance constant, C_r</p> <p>Thermal correction factor, K_t</p> <p>Measured temperature, T_{meas}</p> <p>Parasitic losses force, F_{pl}</p> <p>Ambient temperature, T_{amb}</p>

Selecting	Parameters
Magic Formula	<p>Rolling resistance torque coefficient, QSY</p> <p>Longitudinal force rolling resistance coefficient, QSY2</p> <p>Linear rotational speed rolling resistance coefficient, QSY3</p> <p>Quartic rotational speed rolling resistance coefficient, QSY4</p> <p>Camber squared rolling resistance torque, QSY5</p> <p>Load based camber squared rolling resistance torque, QSY6</p> <p>Normal load rolling resistance coefficient, QSY7</p> <p>Pressure load rolling resistance coefficient, QSY8</p> <p>Rolling resistance scaling factor, lam_My</p>
Mapped torque	<p>Spin axis velocity breakpoints, VxMy</p> <p>Normal force breakpoints, FzMy</p> <p>Rolling resistance torque map, MyMap</p>

Brake Type — Select type

None | Disc | Drum | Mapped

There are four types of Longitudinal Wheel blocks. Each block implements a different brake type.

Block Name	Brake Type Setting	Brake Implementation
Longitudinal Wheel - No Brake	None	None
Longitudinal Wheel - Disc Brake	Disc	Brake that converts the brake cylinder pressure into a braking force.

Block Name	Brake Type Setting	Brake Implementation
Longitudinal Wheel - Drum Brake	Drum	Simplex drum brake that converts the applied force and brake geometry into a net braking torque.
Longitudinal Wheel - Mapped Brake	Mapped	Lookup table that is a function of the wheel speed and applied brake pressure.

Vertical Motion – Select type

None (default) | Mapped stiffness and damping

To calculate vertical motion, specify one of these **Vertical Motion** parameters.

Setting	Block Implementation
None	Block passes the applied chassis forces directly through to the rolling resistance and longitudinal force calculations.
Mapped stiffness and damping	Vertical motion depends on wheel stiffness and damping. Stiffness is a function of tire sidewall displacement and pressure. Damping is a function of tire sidewall velocity and pressure.

Selecting	Enables These Parameters	Creates These Output Ports
Mapped stiffness and damping	Wheel and unsprung mass, m Initial deflection, z₀ Initial velocity, z_{dot0} Gravitational acceleration, g Vertical deflection breakpoints, zFz Pressure breakpoints, pFz Force due to deflection, Fzz Vertical velocity breakpoints, zdotFz Force due to velocity, Fzzdot Ground displacement, Gndz Input ground displacement	z zdot

Longitudinal scaling factor, lam_x — Friction scaling factor

1 (default)

Longitudinal friction scaling factor, dimensionless.

Dependencies

To enable this parameter, clear **Input friction scale factor**.

Input friction scale factor — Selection

Off (default)

Create input port for longitudinal friction scaling factor.

Dependencies

Selecting this parameter:

- Creates input port `lam_mux`.
- Disables parameter **Longitudinal scaling factor, `lam_x`**.

Wheel Dynamics

Axle viscous damping coefficient, `br` – Damping
scalar

Axle viscous damping coefficient, *br*, in N·m·s/rad.

Wheel inertia, `Iyy` – Inertia
scalar

Wheel inertia, in kg·m².

Wheel initial angular velocity, `omegao` – Wheel speed
scalar


Initial angular velocity of wheel, along body-fixed y-axis, in rad/s.

Relaxation length, `Lrel` – Relaxation length
scalar

Wheel relaxation length, in m.

Loaded radius, `Re` – Loaded radius
scalar

Loaded wheel radius, *Re*, in m.

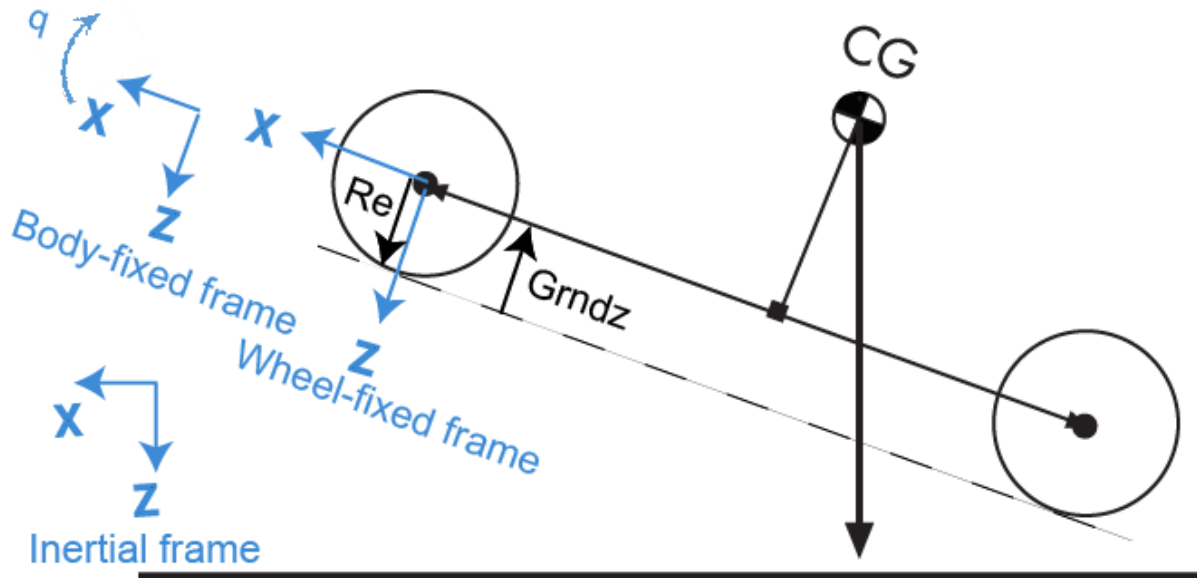

Unloaded radius, UNLOADED_RADIUS — Unloaded radius
scalar

Unloaded wheel radius, in m.

Dependencies

To create this parameter, set **Rolling Resistance** to Pressure and velocity or Magic Formula.

Nominal longitudinal speed, LONGVL — Speed
scalar

Nominal longitudinal speed along body-fixed x-axis, in m/s.

Dependencies

To enable this parameter, set **Longitudinal Force** to Magic Formula pure longitudinal slip.

Nominal camber angle, gamma — Camber
scalar

Nominal camber angle, in rad.

Dependencies

To enable this parameter, set either:

- **Longitudinal Force** to Magic Formula pure longitudinal slip.
- **Rolling Resistance** to Magic Formula.

Nominal pressure, NOMPRES — Pressure
scalar

Nominal pressure, in Pa.

Dependencies

To enable this parameter, set either:

- **Longitudinal Force** to Magic Formula pure longitudinal slip.
- **Rolling Resistance** to Magic Formula.

Pressure, press — Pressure
scalar

Pressure, in Pa.

Dependencies

To enable this parameter:

- Set one of these:
 - **Longitudinal Force** to Magic Formula pure longitudinal slip.
 - **Rolling Resistance** to Pressure and velocity or Magic Formula.
 - **Vertical Motion** to Mapped stiffness and damping.
- On the **Wheel Dynamics** pane, clear **Input tire pressure**.

Longitudinal

Magic Formula Constant Value

Pure longitudinal peak factor, D_x — Factor scalar

Pure longitudinal peak factor, dimensionless.

The coefficients are based on empirical tire data. These values are typical sets of constant Magic Formula coefficients for common road conditions.

Surface	B	C	D	E
Dry tarmac	10	1.9	1	0.97
Wet tarmac	12	2.3	0.82	1
Snow	5	2	0.3	1
Ice	4	2	0.1	1

Dependencies

To create this parameter, select the **Longitudinal Force** parameter Magic Formula constant value.

Pure longitudinal shape factor, C_x — Factor scalar

Pure longitudinal shape factor, dimensionless.

The coefficients are based on empirical tire data. These values are typical sets of constant Magic Formula coefficients for common road conditions.

Surface	B	C	D	E
Dry tarmac	10	1.9	1	0.97
Wet tarmac	12	2.3	0.82	1
Snow	5	2	0.3	1
Ice	4	2	0.1	1

Dependencies

To create this parameter, select the **Longitudinal Force** parameter Magic Formula constant value.

Pure longitudinal stiffness factor, Bx – Factor

scalar

Pure longitudinal stiffness factor, dimensionless.

The coefficients are based on empirical tire data. These values are typical sets of constant Magic Formula coefficients for common road conditions.

Surface	B	C	D	E
Dry tarmac	10	1.9	1	0.97
Wet tarmac	12	2.3	0.82	1
Snow	5	2	0.3	1
Ice	4	2	0.1	1

Dependencies

To create this parameter, select the **Longitudinal Force** parameter Magic Formula constant value.

Pure longitudinal curvature factor, Ex – Factor

scalar

Pure longitudinal curvature factor, dimensionless.

The coefficients are based on empirical tire data. These values are typical sets of constant Magic Formula coefficients for common road conditions.

Surface	B	C	D	E
Dry tarmac	10	1.9	1	0.97
Wet tarmac	12	2.3	0.82	1
Snow	5	2	0.3	1
Ice	4	2	0.1	1

Dependencies

To create this parameter, select the **Longitudinal Force** parameter Magic Formula constant value.

Magic Formula Pure Longitudinal Slip

Cfx shape factor, PCX1 — Factor

scalar

Cfx shape factor, PCX1, dimensionless.

Dependencies

To create this parameter, select the **Longitudinal Force** parameter Magic Formula pure longitudinal slip.

Longitudinal friction at nominal normal load, PDX1 — Factor

scalar

Longitudinal friction at nominal normal load, PDX1, dimensionless.

Dependencies

To create this parameter, select the **Longitudinal Force** parameter Magic Formula pure longitudinal slip.

Frictional variation with load, PDX2 — Factor

scalar

Frictional variation with load, PDX2, dimensionless.

Dependencies

To create this parameter, select the **Longitudinal Force** parameter Magic Formula pure longitudinal slip.

Frictional variation with camber, PDX3 — Factor

scalar

Frictional variation with camber, PDX3, 1/rad².

Dependencies

To create this parameter, select the **Longitudinal Force** parameter Magic Formula pure longitudinal slip.

Longitudinal curvature at nominal normal load, PEX1 — Factor
scalar

Longitudinal curvature at nominal normal load, PEX1, dimensionless.

Dependencies

To create this parameter, select the **Longitudinal Force** parameter Magic Formula pure longitudinal slip.

Variation of curvature factor with load, PEX2 — Factor
scalar

Variation of curvature factor with load, PEX2, dimensionless.

Dependencies

To create this parameter, select the **Longitudinal Force** parameter Magic Formula pure longitudinal slip.

Variation of curvature factor with square of load, PEX3 — Factor
scalar

Variation of curvature factor with square of load, PEX3, dimensionless.

Dependencies

To create this parameter, select the **Longitudinal Force** parameter Magic Formula pure longitudinal slip.

Longitudinal curvature factor with slip, PEX4 — Factor
scalar

Longitudinal curvature factor with slip, PEX4, dimensionless.

Dependencies

To create this parameter, select the **Longitudinal Force** parameter Magic Formula pure longitudinal slip.

Longitudinal slip stiffness at nominal normal load, PKX1 — Factor
scalar

Longitudinal slip stiffness at nominal normal load, PKX1, dimensionless.

Dependencies

To create this parameter, select the **Longitudinal Force** parameter Magic Formula pure longitudinal slip.

Variation of slip stiffness with load, PKX2 — Factor
scalar

Variation of slip stiffness with load, PKX2, dimensionless.

Dependencies

To create this parameter, select the **Longitudinal Force** parameter Magic Formula pure longitudinal slip.

Slip stiffness exponent factor, PKX3 — Factor
scalar

Slip stiffness exponent factor, PKX3, dimensionless.

Dependencies

To create this parameter, select the **Longitudinal Force** parameter Magic Formula pure longitudinal slip.

Horizontal shift in slip ratio at nominal normal load, PHX1 — Factor
scalar

Horizontal shift in slip ratio at nominal normal load, PHX1, dimensionless.

Dependencies

To create this parameter, select the **Longitudinal Force** parameter Magic Formula pure longitudinal slip.

Variation of horizontal slip ratio with load, PHX2 — Factor
scalar

Variation of horizontal slip ratio with load, PHX2, dimensionless.

Dependencies

To create this parameter, select the **Longitudinal Force** parameter Magic Formula pure longitudinal slip.

Vertical shift in load at nominal normal load, PVX1 – Factor

scalar

Vertical shift in load at nominal normal load, PVX1, dimensionless.

Dependencies

To create this parameter, select the **Longitudinal Force** parameter Magic Formula pure longitudinal slip.

Variation of vertical shift with load, PVX2 – Factor

scalar

Variation of vertical shift with load, PVX2, dimensionless.

Dependencies

To create this parameter, select the **Longitudinal Force** parameter Magic Formula pure longitudinal slip.

Linear variation of longitudinal slip stiffness with tire pressure, PPX1 – Factor

scalar

Linear variation of longitudinal slip stiffness with tire pressure, PPX1, dimensionless.

Dependencies

To create this parameter, select the **Longitudinal Force** parameter Magic Formula pure longitudinal slip.

Quadratic variation of longitudinal slip stiffness with tire pressure, PPX2 – Factor

scalar

Quadratic variation of longitudinal slip stiffness with tire pressure, PPX2, dimensionless.

Dependencies

To create this parameter, select the **Longitudinal Force** parameter Magic Formula pure longitudinal slip.

Linear variation of peak longitudinal friction with tire pressure, PPX3 — Factor

scalar

Linear variation of peak longitudinal friction with tire pressure, PPX3, dimensionless.

Dependencies

To create this parameter, select the **Longitudinal Force** parameter Magic Formula pure longitudinal slip.

Quadratic variation of peak longitudinal friction with tire pressure, PPX4 — Factor

scalar

Quadratic variation of peak longitudinal friction with tire pressure, PPX4, dimensionless.

Dependencies

To create this parameter, select the **Longitudinal Force** parameter Magic Formula pure longitudinal slip.

Slip speed decay function scaling factor, lam_muV — Factor

scalar

Slip speed decay function scaling factor, lam_muV, dimensionless.

Dependencies

To create this parameter, select the **Longitudinal Force** parameter Magic Formula pure longitudinal slip.

Brake slip stiffness scaling factor, lam_Kxkappa — Factor

scalar

Brake slip stiffness scaling factor, lam_Kxkappa, dimensionless.

Dependencies

To create this parameter, select the **Longitudinal Force** parameter Magic Formula pure longitudinal slip.

Longitudinal shape scaling factor, lam_Cx — Factor

scalar

Longitudinal shape scaling factor, lam_Cx, dimensionless.

Dependencies

To create this parameter, select the **Longitudinal Force** parameter Magic Formula pure longitudinal slip.

Longitudinal curvature scaling factor, lam_Ex — Factor

scalar

Longitudinal curvature scaling factor, lam_Ex, dimensionless.

Dependencies

To create this parameter, select the **Longitudinal Force** parameter Magic Formula pure longitudinal slip.

Longitudinal horizontal shift scaling factor, lam_Hx — Factor

scalar

Longitudinal horizontal shift scaling factor, lam_Hx, dimensionless.

Dependencies

To create this parameter, select the **Longitudinal Force** parameter Magic Formula pure longitudinal slip.

Longitudinal vertical shift scaling factor, lam_Vx — Factor

scalar

Longitudinal vertical shift scaling factor, lam_Vx, dimensionless.

Dependencies

To create this parameter, select the **Longitudinal Force** parameter Magic Formula pure longitudinal slip.

Mapped Force

Slip ratio breakpoints, kappaFx — Breakpoints

vector

Slip ratio breakpoints, dimensionless.

Dependencies

To create this parameter, select the **Longitudinal Force** parameter Mapped force.

Normal force breakpoints, FzFx — Breakpoints

vector

Normal force breakpoints, N.

Dependencies

To create this parameter, select the **Longitudinal Force** parameter Mapped force.

Longitudinal force map, FxMap — Lookup table

array

Longitudinal force versus slip ratio and normal force, N.

Dependencies

To create this parameter, select the **Longitudinal Force** parameter Mapped force.

Rolling Resistance

Pressure and Velocity

Velocity independent force coefficient, aMy — Force coefficient

scalar

Velocity-independent force coefficient, a , in s/m.

Dependencies

To create this parameter, select the **Rolling Resistance** parameter Pressure and velocity.

Linear velocity force component, bMy — Force component

scalar

Linear velocity force component, b , in s/m.

Dependencies

To create this parameter, select the **Rolling Resistance** parameter Pressure and velocity.

Quadratic velocity force component, cMy – Force component
scalar

Quadratic velocity force component, c , in s^2/m^2 .

Dependencies

To create this parameter, select the **Rolling Resistance** parameter Pressure and velocity.

Tire pressure exponent, alphaMy – Pressure exponent
scalar

Tire pressure exponent, α , dimensionless.

Dependencies

To create this parameter, select the **Rolling Resistance** parameter Pressure and velocity.

Normal force exponent, betaMy – Force exponent
scalar

Normal force exponent, β , dimensionless.

Dependencies

To create this parameter, select the **Rolling Resistance** parameter Pressure and velocity.

ISO 28580

Parasitic losses force, Fpl – Force loss
scalar

Parasitic force loss, F_{pl} , in N.

Dependencies

To create this parameter, select the **Rolling Resistance** parameter ISO 28580.

Rolling resistance constant, Cr — Constant

scalar

Rolling resistance constant, C_r , in N/kN. ISO 28580 specifies the rolling resistance unit as one newton of tractive resistance for every kilonewtons of normal load.

Dependencies

To create this parameter, select the **Rolling Resistance** parameter ISO 28580.

Thermal correction factor, Kt — Correction factor

scalar

Thermal correction factor, K_t , in 1/degC.

Dependencies

To create this parameter, select the **Rolling Resistance** parameter ISO 28580.

Measured temperature, Tmeas — Temperature

scalar

Measured temperature, T_{meas} , in K.

Dependencies

To create this parameter, select the **Rolling Resistance** parameter ISO 28580.

Ambient temperature, Tamb — Temperature

scalar

Measured temperature, T_{amb} , in K.

Dependencies

To create this parameter, select the **Rolling Resistance** parameter ISO 28580.

Input ambient temperature — Selection

scalar

Select to create input port Tamb.

Dependencies

To create this parameter, select the **Rolling Resistance** parameter ISO 28580.

Magic Formula

Rolling resistance torque coefficient, QSY1 – Torque coefficient
scalar

Rolling resistance torque coefficient, dimensionless.

Dependencies

To create this parameter, select the **Rolling Resistance** parameter Magic Formula.

Longitudinal force rolling resistance coefficient, QSY2 – Force resistance coefficient
scalar

Longitudinal force rolling resistance coefficient, dimensionless.

Dependencies

To create this parameter, select the **Rolling Resistance** parameter Magic Formula.

Linear rotational speed rolling resistance coefficient, QSY3 – Linear speed coefficient
scalar

Linear rotational speed rolling resistance coefficient, dimensionless.

Dependencies

To create this parameter, select the **Rolling Resistance** parameter Magic Formula.

Quartic rotational speed rolling resistance coefficient, QSY4 – Quartic speed coefficient
scalar

Quartic rotational speed rolling resistance coefficient, dimensionless.

Dependencies

To create this parameter, select the **Rolling Resistance** parameter Magic Formula.

Camber squared rolling resistance torque, QSY5 — Camber resistance torque

scalar

Camber squared rolling resistance torque, in $1/\text{rad}^2$.

Dependencies

To create this parameter, select the **Rolling Resistance** parameter Magic Formula.

Load based camber squared rolling resistance torque, QSY6 — Load resistance torque

scalar

Load based camber squared rolling resistance torque, in $1/\text{rad}^2$.

Dependencies

To create this parameter, select the **Rolling Resistance** parameter Magic Formula.

Normal load rolling resistance coefficient, QSY7 — Normal resistance coefficient

scalar

Normal load rolling resistance coefficient, dimensionless.

Dependencies

To create this parameter, select the **Rolling Resistance** parameter Magic Formula.

Pressure load rolling resistance coefficient, QSY8 — Pressure resistance coefficient

scalar

Pressure load rolling resistance coefficient, dimensionless.

Dependencies

To create this parameter, select the **Rolling Resistance** parameter Magic Formula.

Rolling resistance scaling factor, lam_My — Scale

scalar

Rolling resistance scaling factor, dimensionless.

Dependencies

To create this parameter, select the **Rolling Resistance** parameter Magic Formula.

Mapped**Spin axis velocity breakpoints, VxMy — Breakpoints**

vector

Spin axis velocity breakpoints, in m/s.

Dependencies

To create this parameter, select the **Rolling Resistance** parameter Mapped torque.

Normal force breakpoints, FzMy — Breakpoints

vector

Normal force breakpoints, in N.

Dependencies

To create this parameter, select the **Rolling Resistance** parameter Mapped torque.

Rolling resistance torque map, MyMap — Lookup table

scalar

Rolling resistance torque versus axle speed and normal force, in N·m.

Dependencies

To create this parameter, select the **Rolling Resistance** parameter Mapped torque.

Brake**Static friction coefficient, mu_static — Static friction**

scalar

Static friction coefficient, dimensionless.

Dependencies

To enable this parameter, for the **Brake Type** parameter, specify one of these types:

- Disc
- Drum
- Mapped

Kinetic friction coefficient, `mu_kinetic` — Kinetic friction
scalar

Kinematic friction coefficient, dimensionless.

Dependencies

To enable this parameter, for the **Brake Type** parameter, specify one of these types:

- Disc
- Drum
- Mapped

Disc

Disc brake actuator bore, `disc_abore` — Bore distance
scalar

Disc brake actuator bore, in m.

Dependencies

To enable the disc brake parameters, select **Disc** for the **Brake Type** parameter.

Brake pad mean radius, `Rm` — Radius
scalar

Brake pad mean radius, in m.

Dependencies

To enable the disc brake parameters, select **Disc** for the **Brake Type** parameter.

Number of brake pads, `num_pads` — Count
scalar

Number of brake pads.

Dependencies

To enable the disc brake parameters, select **Disc** for the **Brake Type** parameter.

Drum**Drum brake actuator bore, disc_abore – Bore distance**

scalar

Drum brake actuator bore, in m.

Dependencies

To enable the drum brake parameters, select **Drum** for the **Brake Type** parameter.

Shoe pin to drum center distance, drum_a – Distance

scalar

Shoe pin to drum center distance, in m.

Dependencies

To enable the drum brake parameters, select **Drum** for the **Brake Type** parameter.

Shoe pin center to force application point distance, drum_c – Distance

scalar

Shoe pin center to force application point distance, in m.

Dependencies

To enable the drum brake parameters, select **Drum** for the **Brake Type** parameter.

Drum internal radius, drum_r – Radius

scalar

Drum internal radius, in m.

Dependencies

To enable the drum brake parameters, select **Drum** for the **Brake Type** parameter.

Shoe pin to pad start angle, drum_theta1 – Angle

scalar

Shoe pin to pad start angle, in deg.

Dependencies

To enable the drum brake parameters, select Drum for the **Brake Type** parameter.

Shoe pin to pad end angle, drum_theta2 — Angle

scalar

Shoe pin to pad end angle, in deg.

Dependencies

To enable the drum brake parameters, select Drum for the **Brake Type** parameter.

Mapped

Brake actuator pressure breakpoints, brake_p_bpt — Breakpoints

vector

Brake actuator pressure breakpoints, in bar.

Dependencies

To enable the mapped brake parameters, select Mapped for the **Brake Type** parameter.

Wheel speed breakpoints, brake_n_bpt — Breakpoints

vector

Wheel speed breakpoints, in rpm.

Dependencies

To enable the mapped brake parameters, select Mapped for the **Brake Type** parameter.


Brake torque map, f_brake_t — Lookup table

array

The lookup table for the brake torque, $f_{brake}(P, N)$, is a function of applied brake pressure and wheel speed, where:

- T is brake torque, in N·m.
- P is applied brake pressure, in bar.

- N is wheel speed, in rpm.

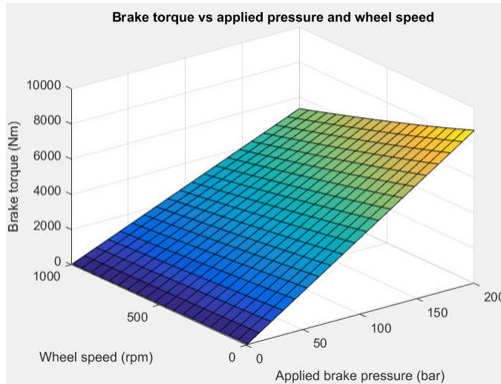

Dependencies

To enable the mapped brake parameters, select Mapped for the **Brake Type** parameter.

Vertical

Nominal normal force, FNOMIN – Force
scalar

Nominal rated wheel load along wheel-fixed z-axis, in N.

Dependencies

To enable this parameter, set either:

- **Longitudinal Force** to Magic Formula pure longitudinal slip.
- **Rolling Resistance** to Magic Formula.

Nominal rated load scaling factor, lam_Fzo – Factor
scalar

Nominal rated load scaling factor, dimensionless. Used to scale the normal for specific applications and load conditions.

Dependencies

To enable this parameter, set **Longitudinal Force** to Magic Formula pure longitudinal slip.

Wheel and unsprung mass, m — Mass

scalar

Wheel and unsprung mass, in kg. Used in the vertical motion calculations.

Dependencies

To enable this parameter, set **Vertical Motion** to Mapped stiffness and damping.

Initial deflection, z₀ — Deflection

scalar

Initial axle displacement along wheel-fixed z-axis, in m.

Dependencies

To enable this parameter, set **Vertical Motion** to Mapped stiffness and damping.

Initial velocity, z_{dot0} — Velocity

scalar

Initial axle velocity along wheel-fixed z-axis, in m.

Dependencies

To enable this parameter, set **Vertical Motion** to Mapped stiffness and damping.

Gravitational acceleration, g — Gravity

scalar

Gravitational acceleration, in m/s².


Dependencies

To enable this parameter, set **Vertical Motion** to Mapped stiffness and damping.

Ground displacement, Grndz — Displacement

scalar

Ground displacement, Grndz, along negative wheel-fixed z-axis, in m.

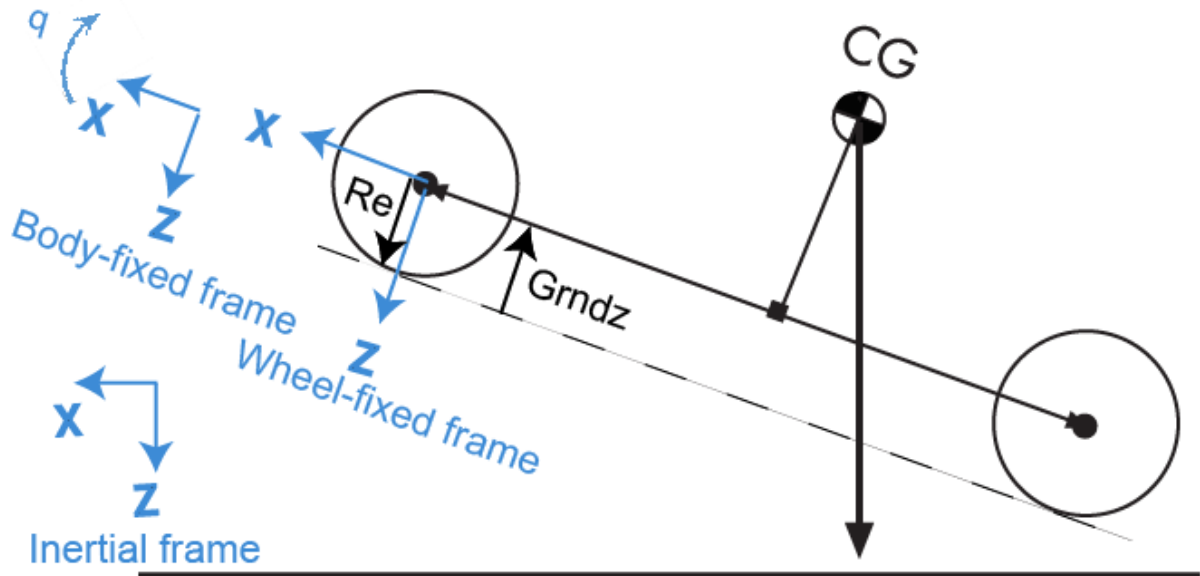**Dependencies**

To enable this parameter, set **Vertical Motion** to Mapped stiffness and damping.

Mapped Stiffness and Damping**Vertical deflection breakpoints, zFz – Breakpoints**

vector

Vector of sidewall deflection breakpoints corresponding to the force table, in m.

Dependencies

To enable this parameter, set **Vertical Motion** to Mapped stiffness and damping.

Pressure breakpoints, pFz – Breakpoints

vector

Vector of pressure data points corresponding to the force table, in Pa.

Dependencies

To enable this parameter, set **Vertical Motion** to Mapped stiffness and damping.

Force due to deflection, Fzz — Force

vector

Force due to sidewall deflection and pressure along wheel-fixed z-axis, in N.

Dependencies

To enable this parameter, set **Vertical Motion** to Mapped stiffness and damping.

Vertical velocity breakpoints, zdotFz — Breakpoints

scalar

Vector of sidewall velocity breakpoints corresponding to the force due to velocity table, in m.

Dependencies

To enable this parameter, set **Vertical Motion** to Mapped stiffness and damping.

Force due to velocity, Fzzdot — Force

scalar

Force due to sidewall velocity and pressure along wheel-fixed z-axis, in N.

Dependencies

To enable this parameter, set **Vertical Motion** to Mapped stiffness and damping.

Simulation Setup

Minimum normal force, FZMIN — Force

scalar

Minimum normal force, in N. Used with all vertical force calculations.

Maximum normal force, FZMAX — Force

scalar

Maximum normal force, in N. Used with all vertical force calculations.

Max allowable slip ratio (absolute), kappamax – Ratio

scalar

Maximum allowable absolute slip ratio, dimensionless.

Velocity tolerance used to handle low velocity situations, VXL0W – Tolerance

scalar

Velocity tolerance used to handle low-velocity situations, in m/s.

Minimum ambient temperature, TMIN – Tmin

scalar

Minimum ambient temperature, T_{MIN} , in K.

Dependencies

To create this parameter, select the **Rolling Resistance** parameter ISO 28580.

Maximum ambient temperature, TMAX – Tmax

scalar

Maximum ambient temperature, T_{MAX} , in K.

Dependencies

To create this parameter, select the **Rolling Resistance** parameter ISO 28580.

References

- [1] Highway Tire Committee. *Stepwise Coastdown Methodology for Measuring Tire Rolling Resistance*. Standard J2452_199906. Warrendale, PA: SAE International, June 1999.
- [2] Pacejka, H. B. *Tire and Vehicle Dynamics*. 3rd ed. Oxford, United Kingdom: SAE and Butterworth-Heinemann, 2012.
- [3] Schmid, Steven R., Bernard J. Hamrock, and Bo O. Jacobson. "Chapter 18: Brakes and Clutches." *Fundamentals of Machine Elements, SI Version*. 3rd ed. Boca Raton, FL: CRC Press, 2014.

[4] Shigley, Joseph E., and Larry Mitchel. *Mechanical Engineering Design*. 4th ed. New York, NY: McGraw Hill, 1983.

[5] ISO 28580:2018. *Passenger car, truck and bus tyre rolling resistance measurement method -- Single point test and correlation of measurement results*. ISO (International Organization for Standardization), 2018.

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using Simulink® Coder™.

See Also


Drive Cycle Source | Longitudinal Driver

Introduced in R2017a

Planetary Gear


Ideal planetary gear with sun, ring, and carrier

Library: Powertrain Blockset / Drivetrain / Couplings

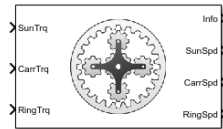

Description

The Planetary Gear block implements an ideal planetary gear coupling consisting of a rigidly coupled sun, ring, and carrier gears. The block calculates the dynamic response to the sun, carrier, and ring input torques.

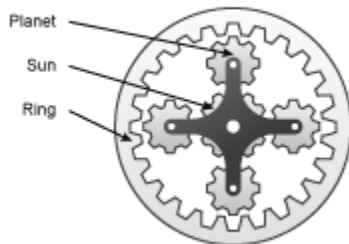

In fuel economy and powertrain studies, you can use the Planetary Gear block as a power-split device by coupling it to common driveline elements such as transmissions, engines, clutches, and differentials.

These equations of motion represent the dynamic response of the planetary gear.

$$\dot{\omega}_s J_s = \dot{\omega}_s b_s + T_s + T_{ps}$$

$$\dot{\omega}_c J_c = \dot{\omega}_c b_c + T_c + T_{pc}$$

$$\dot{\omega}_r J_r = \dot{\omega}_r b_r + T_r + T_{pr}$$

$$\dot{\omega}_p J_p = \dot{\omega}_p b_p + T_{rp} + T_{sp} + T_{cp}$$

To reduce the equations of motion, the block uses these kinematic and geometric constraints.

$$\omega_c r_c = r_s \omega_s + r_p \omega_p$$

$$\omega_r r_r = r_c \omega_c + r_p \omega_p$$

$$r_c = r_s + r_p$$

$$r_r = r_c + r_p$$

Power Accounting

For the power accounting, the block implements these equations.

Bus Signal		Description	Equations
PwrIn fo	PwrTrnsfrd — Power transferred between blocks <ul style="list-style-type: none"> • Positive signals indicate flow into block • Negative signals indicate flow out of block 	PwrSun	Sun gear applied power $\omega_s T_s$
		PwrCarr	Carrier gear applied power $\omega_c T_c$
		PwrRing	Ring gear applied power $\omega_r T_r$

Bus Signal		Description	Equations
PwrNotTrnsfrd — Power crossing the block boundary, but not transferred	PwrDampLoss	Mechanical damping loss	$-(b_s\omega_s^2 + b_c\omega_c^2 + b_r\omega_r^2 + b_p\omega_p^2)$
<ul style="list-style-type: none"> • Positive signals indicate an input • Negative signals indicate a loss 			
PwrStored — Stored energy rate of change	PwrStoredPlnt ry	Rate change in rotational kinetic energy	$\dot{\omega}_s\omega_s J_s + \dot{\omega}_c\omega_c J_c + \dot{\omega}_r\omega_r J_r + \dot{\omega}_p\omega_p J_p$
<ul style="list-style-type: none"> • Positive signals indicate an increase • Negative signals indicate a decrease 			

The equations use these variables.

$\omega_c, \omega_p, \omega_r, \omega_s$ Carrier, planet, ring, and sun gear angular speed

r_c, r_p, r_r, r_s Carrier, planet, ring, and sun gear angular radius

J_c, J_p, J_r, J_s Carrier, planet, ring, and sun gear inertia

b_c, b_p, b_r, b_s Darrier, planet, ring, and sun gear damping

T_c, T_p, T_r, T_s	Applied carrier, planet, ring, and sun gear torque
T_{ps}	Torque applied from planet gear on sun gear
T_{pc}	Torque applied from planet gear on carrier gear
T_{pr}	Torque applied from planet gear on ring gear
T_{rp}	Torque applied from ring gear on planet gear
T_{sp}	Torque applied from sun gear on planet gear
T_{cp}	Torque applied from carrier gear on planet gear

Ports

Input

SunTrq — Sun gear applied torque

scalar

Sun gear input torque, T_s , in N·m.

Dependencies

To create this port, for **Port Configuration**, select Simulink.

CarrTrq — Carrier gear applied torque

scalar

Carrier gear input torque, T_c , in N·m.

Dependencies

To create this port, for **Port Configuration**, select Simulink.

RingTrq — Ring gear applied torque

scalar

Ring gear applied torque, T_r , in N·m.

Dependencies

To create this port, for **Port Configuration**, select Simulink.

C — Carrier gear angular speed and torque

two-way connector port

Carrier gear angular speed, ω_c , in rad/s. Carrier gear applied torque, T_c , in N·m.

Dependencies

To create this port, for **Port Configuration**, select Two-way connection.

Output

Info — Bus signal

bus

Bus signal containing these block calculations.

Signal		Description	Units	
Sun	SunTrq	Sun gear applied torque	N·m	
	SunSpd	Sun gear angular speed	rad/s	
Carr	CarrTrq	Carrier gear applied torque	N·m	
	CarrSpd	Carrier gear angular speed	rad/s	
Ring	RingTrq	Ring gear applied torque	N·m	
PwrInfo	PwrTrnsfrd	PwrSun	Sun gear applied power	W
		PwrCarr	Carrier gear applied power	W
		PwrRing	Ring gear applied power	W
	PwrNotTrnsfrd	PwrDampLoss	Mechanical damping loss	W
	PwrStored	PwrStoredPlntry	Rate change in rotational kinetic energy	W

SunSpd — Sun gear angular speed

scalar

Sun gear angular speed, ω_s , in rad/s.

Dependencies

To create this port, for **Port Configuration**, select Simulink.

CarrSpd — Carrier gear angular speed

scalar

Carrier gear angular speed, ω_c , in rad/s.

Dependencies

To create this port, for **Port Configuration**, select Simulink.

RingSpd — Ring gear angular speed

scalar

Ring gear angular speed, ω_r , in rad/s.

Dependencies

To create this port, for **Port Configuration**, select Simulink.

S — Sun gear angular speed and torque

two-way connector port

Sun gear angular speed, ω_s , in rad/s. Sun gear applied torque, T_s , in N·m.

Dependencies

To create this port, for **Port Configuration**, select Two-way connection.

R — Ring gear angular speed and torque

two-way connector port

Ring gear angular speed, ω_r , in rad/s. Ring gear applied torque, T_r , in N·m.

Dependencies

To create this port, for **Port Configuration**, select Two-way connection.

Parameters

Block Options

Port Configuration — Specify configuration

Simulink (default) | Two-way connection

Specify the port configuration.

Dependencies

Specifying Simulink creates these ports:

- SunTrq
- CarrTrq
- RingTrq
- SunSpd
- CarrSpd
- RingSpd

Specifying Two-way connection creates these ports:

- C
- S
- R

Sun to planet ratio, Nsp – Ratio

scalar

Sun-to-planet gear ratio, dimensionless.

Sun to ring ratio, Nsr – Ratio

scalar

Sun-to-ring gear ratio, dimensionless.

Sun inertia, Js – Inertia

scalar

Sun gear inertia, J_s , in $\text{kg}\cdot\text{m}^2$.

Planet inertia, Jp – Inertia

scalar

Planet gear inertia, J_p , in $\text{kg}\cdot\text{m}^2$.

Ring inertia, Jr – Inertia

scalar

Ring gear inertia, J_r , in $\text{kg}\cdot\text{m}^2$.

Carrier inertia, J_c — Inertia

scalar

Carrier gear inertia, J_c , in $\text{kg}\cdot\text{m}^2$.

Sun viscous damping, b_s — Damping

scalar

Sun gear viscous damping, b_s , $\text{N}\cdot\text{m}\cdot\text{s}/\text{rad}$.

Ring viscous damping, b_r — Damping

scalar

Ring gear viscous damping, b_r , $\text{N}\cdot\text{m}\cdot\text{s}/\text{rad}$.

Planet viscous damping, b_p — Damping

scalar

Planet gear viscous damping, b_p , $\text{N}\cdot\text{m}\cdot\text{s}/\text{rad}$.

Carrier viscous damping, b_c — Damping

scalar

Carrier gear viscous damping, b_c , $\text{N}\cdot\text{m}\cdot\text{s}/\text{rad}$.

Initial sun velocity, ws_o — Angular speed

scalar

Initial sun gear angular speed, in rad/s .

Initial carrier velocity, wc_o — Angular speed

scalar

Initial carrier gear angular speed, in rad/s .

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using Simulink® Coder™.

See Also


Disc Clutch | Gearbox | Rotational Inertia | Torque Converter | Torsional Compliance

Introduced in R2017a

Gearbox

Ideal rotational gearbox

Library: Powertrain Blockset / Drivetrain / Couplings

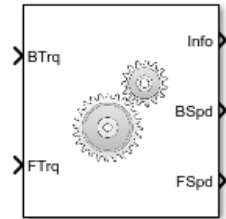

Description

The Gearbox block implements an ideal rotational gearbox. The block uses the gear inertias and damping to calculate the velocity response to the base and follower gear pair input torques.

In fuel economy and powertrain efficiency studies, you can use the Gearbox block to model ideal gear coupling and the power transfer between common driveline elements such as transmissions, engines, clutches, and differentials.

The Gearbox block uses these equations to approximate the transmission dynamics.

$$\dot{\omega}_B J_B = \omega_B b_B + \eta N T_F$$

$$\dot{\omega}_F J_F = \omega_F b_F + \eta T_F$$

This constraint equation reduces the system to a one DOF system.

$$\omega_B = N \omega_F$$

To express the ideal torque transfer, the block uses this relationship.

$$\eta N T_B + T_F = 0$$

Efficiency

To account for the block efficiency, use the **Efficiency factors** parameter. This table summarizes the block implementation for each setting.

Setting	Implementation
Constant	Constant efficiency that you can set with the Constant efficiency factor, eta parameter.
Driveshaft torque, temperature and speed	<p>Efficiency as a function of base gear input torque, air temperature, and driveshaft speed. Use these parameters to specify the lookup table and breakpoints:</p> <ul style="list-style-type: none"> • Efficiency lookup table, eta_tbl • Efficiency torque breakpoints, Trq_bpts • Efficiency speed breakpoints, omega_bpts • Efficiency temperature breakpoints, Temp_bpts <p>For the air temperature, you can either:</p> <ul style="list-style-type: none"> • Select Input temperature to create an input port. • Set a Ambient temperature, Tamb parameter value. <p>To select the interpolation method, use the Interpolation method parameter. For more information, see “Interpolation Methods” (Simulink).</p>

Power Accounting

For the power accounting, the block implements these equations.

Bus Signal		Description	Variable	Equations
PwrIn fo	PwrTrnsfrd — Power transferred between blocks <ul style="list-style-type: none"> • Positive signals indicate flow into block 	PwrBase	Mechanical power from base shaft	P_{Base} $=$ $\eta T_B \omega_B$

Bus Signal		Description	Variable	Equations
<ul style="list-style-type: none"> Negative signals indicate flow out of block 	PwrFlwr	Mechanical power from follower shaft	P_{Flwr}	$P_{Flwr} = \eta T_F \omega_F$
PwrNotTrnsfrd — Power crossing the block boundary, but not transferred <ul style="list-style-type: none"> Positive signals indicate an input Negative signals indicate a loss 	PwrMechLoss	Total power loss	P_{ng}	$P_{ng} = - (P_t + P_d) + P_t = \eta T_B \omega_B + \eta T_F \omega_F$
	PwrDampLoss	Power loss due to damping	P_d	$P_d = - (b_F \omega_F ^2 + b_B \omega_B ^2)$
PwrStored — Stored energy rate of change <ul style="list-style-type: none"> Positive signals indicate an increase Negative signals indicate a decrease 	PwrStoredShft	Rate change of stored internal kinetic energy	P_s	$P_s = (\omega_B \dot{\omega}_B J_B + \omega_F \dot{\omega}_F J_F)$

The equations use these variables.

- T_B Base gear input torque
- T_F Follower gear output torque
- ω_B Base gear angular velocity
- ω_F Follower gear angular velocity
- J_B Base gear rotational inertia
- J_F Follower gear rotational inertia
- b_B Base gear rotational viscous damping
- b_F Follower gear rotational viscous damping
- N Torque transmission gear ratio

η	Gear efficiency
P_t	Total power
P_d	Power loss due to damping
P_s	Rate change of stored internal kinetic energy

Ports

Input

BTrq — Base gear input torque

scalar

Base gear input torque, T_B , in N·m.

Dependencies

To create this port, for **Port Configuration**, select Simulink.

FTrq — Follower gear output torque

scalar

Follower gear output torque, T_F , in N·m.

Dependencies

To create this port, for **Port Configuration**, select Simulink.

B — Base gear angular velocity and torque

two-way connector port

Base gear angular velocity, ω_B , in rad/s. Base gear torque, T_B , in N·m.

Dependencies

To create this port, for **Port Configuration**, select Two-way connection.

AirTemp — Ambient air temperature

scalar

Ambient air temperature, T_{air} , in K.

Dependencies

To create this port:

- Set **Efficiency factors** to Driveshaft torque, speed and temperature.
- Select **Input ambient temperature**.

Output

Info — Bus signal

bus

Bus signal containing these block calculations.

Signal		Description	Variable	Units	
Base	BaseTrq	Base gear input torque	T_B	N·m	
	BaseSpd	Base gear angular velocity	ω_B	rad/s	
Flwr	FlwrTrq	Follower gear torque	T_F	N·m	
	FlwrSpd	Follower gear angular velocity	ω_F	rad/s	
PwrInfo	PwrTrnsfrd	PwrBase	Mechanical power from base shaft	P_{Base}	W
		PwrFlwr	Mechanical power from follower shaft	P_{Flwr}	W
	PwrNotTrnsfrd	PwrMechLoss	Total gear power loss	P_{ng}	W
		PwrDampLoss	Power loss due to damping	P_d	W
	PwrStored	PwrStoredShft	Rate change of stored internal kinetic energy	P_s	W

BSpd — Input gear angular velocity

scalar

Base gear angular velocity, ω_B , in rad/s.**Dependencies**To create this port, for **Port Configuration**, select Simulink.**FSpd — Output gear angular velocity**

scalar

Follower gear angular velocity, ω_F , in rad/s.**Dependencies**To create this port, for **Port Configuration**, select Simulink.**F — Output gear angular velocity and torque**

two-way connector port

Follower gear angular velocity, ω_F , in rad/s. Follower gear torque, T_F , in N·m.**Dependencies**To create this port, for **Port Configuration**, select Two-way connection.

Parameters

Block Options**Port Configuration — Specify configuration**

Simulink (default) | Two-way connection

Specify the port configuration.

Dependencies

Specifying Simulink creates these ports:

- BSpd
- FSpd

- BTrq
- FTrq

Specifying `Two-way` connection creates these ports:

- B
- F

Efficiency factors — Specify configuration

Constant (default) | Driveshaft torque, speed and temperature

To account for the block efficiency, use the **Efficiency factors** parameter. This table summarizes the block implementation for each setting.

Setting	Implementation
Constant	Constant efficiency that you can set with the Constant efficiency factor, eta parameter.
Driveshaft torque, temperature and speed	<p>Efficiency as a function of base gear input torque, air temperature, and driveshaft speed. Use these parameters to specify the lookup table and breakpoints:</p> <ul style="list-style-type: none"> • Efficiency lookup table, eta_tbl • Efficiency torque breakpoints, Trq_bpts • Efficiency speed breakpoints, omega_bpts • Efficiency temperature breakpoints, Temp_bpts <p>For the air temperature, you can either:</p> <ul style="list-style-type: none"> • Select Input temperature to create an input port. • Set a Ambient temperature, Tamb parameter value. <p>To select the interpolation method, use the Interpolation method parameter. For more information, see “Interpolation Methods” (Simulink).</p>

Interpolation method — Method

Flat (default) | Nearest | Linear point-slope | Linear Lagrange | Cubic spline

For more information, see “Interpolation Methods” (Simulink).

Dependencies

To enable this parameter, set **Efficiency factors** to Driveshaft torque, speed and temperature.

Output shaft rotates in same direction as input — Rotation

off (default) | on

Select to specify that the output shaft rotates in the same direction as the input.

Input ambient temperature — Create input port

off (default) | on

Select to create input port AirTemp for the ambient air temperature.

Dependencies

To enable this parameter, set **Efficiency factors** to Driveshaft torque, speed and temperature.

Input to output gear ratio, N — Ratio

scalar

Base-to-follower gear ratio, dimensionless.

Input shaft inertia, J1 — Inertia

scalar

Base shaft inertia, in $\text{kg}\cdot\text{m}^2$.

Output shaft inertia, J2 — Inertia

scalar

Follower shaft inertia, in $\text{kg}\cdot\text{m}^2$.

Input shaft damping, b1 — Damping

scalar

Base viscous shaft damping, in $\text{N}\cdot\text{m}\cdot\text{s}/\text{rad}$.

Output shaft damping, b2 — Damping

scalar

Follower viscous shaft damping, in $\text{N}\cdot\text{m}\cdot\text{s}/\text{rad}$.

Input shaft initial velocity, $w1_o$ — Initial velocity
scalar

Base shaft initial velocity, in rad/s.

Efficiency

Constant efficiency factor, η — Efficiency
1 (default)

Constant efficiency, η .

Dependencies

To enable this parameter, set **Efficiency factors** to Constant.

Efficiency lookup table, η_tbl — Lookup table
M-by-N-by-L array

Dimensionless array of values for efficiency as a function of:

- M input torques
- N input speed
- L air temperatures

Each value specifies the efficiency for a specific combination of torque, speed, and temperature. The array size must match the dimensions defined by the torque, speed, and temperature breakpoint vectors.

Dependencies

To enable this parameter, set **Efficiency factors** to Driveshaft torque, speed and temperature.

Efficiency torque breakpoints, Trq_bpts — Torque breakpoints
1-by-M vector

Vector of input torque, breakpoints for efficiency, in N·m.

Dependencies

To enable this parameter, set **Efficiency factors** to Driveshaft torque, speed and temperature.

Efficiency speed breakpoints, omega_bpts — Speed breakpoints

1-by-N vector

Vector of speed, breakpoints for efficiency, in rad/s.

Dependencies

To enable this parameter, set **Efficiency factors** to Driveshaft torque, speed and temperature.

Efficiency temperature breakpoints, Temp_bpts — Temperature breakpoints

1-by-L vector

Vector of ambient temperature breakpoints for efficiency, in K.

Dependencies

To enable this parameter, set **Efficiency factors** to Driveshaft torque, speed and temperature.

Air temperature, Tair — Ambient air temperature

scalar

Ambient air temperature, T_{air} , in K.

Dependencies

To enable this parameter:

- Set **Efficiency factors** to Driveshaft torque, speed and temperature.
- Clear **Input ambient temperature**.

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using Simulink® Coder™.

See Also


Disc Clutch | Planetary Gear | Rotational Inertia | Torque Converter | Torsional Compliance

Introduced in R2017a

Disc Clutch

Idealized disc clutch coupler

Library: Powertrain Blockset / Drivetrain / Couplings

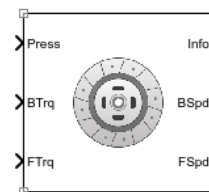

Description

The Disc Clutch block implements an idealized disc clutch coupler. The block couples the rotary input and output shafts through an idealized friction model. To determine the output torque, the block uses friction parameters, relative slip velocity, and applied input pressure.

In fuel economy and powertrain efficiency studies, you can use the Disc Clutch block to model the mechanical power transfer between common driveline elements such as transmissions, engines, and differentials.

To approximate the torque response, the Disc Clutch block implements friction and dynamic models that depend on the clutch lockup condition. The block determines the locked or unlocked condition based on an idealized dry clutch friction model. This table summarizes the logic the block uses to determine the clutch condition.

Clutch Condition	When
Unlocked	$\omega_i \neq \omega_o$ or $T_{fmax} < \left \frac{J_o T_i - (J_o b_i - J_i b_o) \omega_{i/o}}{J_o + J_i} \right $

Clutch Condition	When
Locked	$\omega_i = \omega_o$ and $T_{fmax} < \left T_i - \frac{J_i(b_i + b_o)\omega_i}{J_o + J_i} + b_o\omega_i \right $

This table summarizes the friction and dynamic models that the block uses for locked or unlocked clutch conditions.

Clutch Condition	Friction Model	Dynamic Model
Unlocked	$T_{fmax} = T_k$ where, $T_k = N_{disc}P_cA_{eff}R_{eff}\mu_k \tanh[4(\omega_i - \omega_o)]$ $R_{eff} = \frac{2(R_o^3 - R_i^3)}{3(R_o^2 - R_i^2)}$ and $P_c = \max(P_c - P_{eng}, 0)$	$\dot{\omega}_i J_i = T_i - T_f - \omega_i b_i$ $\dot{\omega}_o J_o = T_f + T_o - \omega_o b_o$
Locked	$T_{fmax} = T_s$ where, $T_s = N_{disc}P_cA_{eff}R_{eff}\mu_s$ $R_{eff} = \frac{2(R_o^3 - R_i^3)}{3(R_o^2 - R_i^2)}$	$\dot{\omega}_i (J_o + J_i) = T_o - \omega_i (b_i + b_o) + T_i$ $\omega_i = \omega_o$

Power Accounting

For the power accounting, the block implements these equations.

Bus Signal		Description	Equations
PwrInfo	PwrTrnsfrd — Power transferred between blocks <ul style="list-style-type: none"> Positive signals indicate flow into block 	PwrBase	Applied base power $\omega_i T_i$

Bus Signal		Description	Equations	
<ul style="list-style-type: none"> Negative signals indicate flow out of block Positive signals indicate an input Negative signals indicate a loss 	PwrFlwr	Applied follower output power	$\omega_o T_o$	
	PwrNotTrnsfrd — Power crossing the block boundary, but not transferred <ul style="list-style-type: none"> Positive signals indicate an input Negative signals indicate a loss 	PwrDampLoss	Damping power loss	$-b_o \omega_o^2 - b_i \omega_i^2$
		PwrClutchSlipLoss	Clutch slip power loss	$-T_k(\omega_i - \omega_o)$
	PwrStored — Stored energy rate of change <ul style="list-style-type: none"> Positive signals indicate an increase Negative signals indicate a decrease 	PwrStoredBase	Rate change in base rotational kinetic energy	$\dot{\omega}_i \omega_i J_i$
PwrStoredFlwr		Rate change in follower rotational kinetic energy	$\dot{\omega}_o \omega_o J_o$	

The equations use these variables.

ω_i	Input shaft angular speed
ω_o	Output shaft angular speed
b_i	Input shaft viscous damping
b_o	Output shaft viscous damping
J_i	Input shaft moment of inertia
J_o	Output shaft moment of inertia
T_f	Frictional torque
T_i	Net input torque
T_k	Kinetic frictional torque
T_o	Net output torque
T_s	Static frictional torque
T_{fmax}	Maximum frictional torque before slipping
P_c	Applied clutch pressure

P_{eng}	Engagement pressure
A_{eff}	Effective area
N_{disc}	Number of frictional discs
R_{eff}	Effective clutch radius
R_o	Annular disk outer radius
R_i	Annular disk inner radius
R_e	Effective tire radius while under load and for a given pressure
μ_s	Coefficient of static friction
μ_k	Coefficient of kinetic friction

Ports

Input

Press — Applied clutch pressure

scalar

Base gear input torque, P_c , in $N \cdot m^2$.

BTrq — Applied input torque

scalar

Applied input torque, T_i , typically from the engine crankshaft or dual mass flywheel damper, in $N \cdot m$.

Dependencies

To create this port, for **Port Configuration**, select Simulink.

FTrq — Applied load torque

scalar

Applied load torque, T_o , typically from the differential or drive shaft, in $N \cdot m$.

Dependencies

To create this port, for **Port Configuration**, select Simulink.

B — Applied drive shaft angular speed and torque

two-way connector port

Applied drive shaft angular speed, ω_i , in rad/s. Applied drive shaft torque, T_i , in N·m.**Dependencies**To create this port, for **Port Configuration**, select Two-way connection.**Output****Info — Bus signal**

bus

Bus signal containing these block calculations.

Signal		Description	Units	
Base	BTrq	Applied input torque, typically from the engine crankshaft or dual mass flywheel damper	N·m	
	BSpd	Applied drive shaft angular speed input	rad/s	
Flwr	FTrq	Applied load torque, typically from the differential	N·m	
	FSpd	Drive shaft angular speed output	rad/s	
Cltch	CltchForce	Applied clutch force	N	
	CltchLocked	Clutch lock status	NA	
	CltchSpdRatio	Clutch speed ratio	NA	
	CltchEta	Clutch power transmission efficiency	NA	
PwrInfo	PwrTrnsfrd	PwrBase	Applied base power	W
		PwrFlwr	Applied follower output power	W

Signal		Description	Units
	PwrNotTrnsfrd	PwrDampLoss	W
		PwrClutchSlipLoss	W
	PwrStored	PwrStoredBase	W
		PwrStoredFollower	W

BSpd — Angular speed

scalar

Applied drive shaft angular speed input, ω_i , in rad/s.

Dependencies

To create this port, for **Port Configuration**, select Simulink.

FSpd — Angular speed

scalar

Drive shaft angular speed output, ω_o , in rad/s.

Dependencies

To create this port, for **Port Configuration**, select Simulink.

F — Output velocity and torque

two-way connector port

Output drive shaft angular speed, ω_{oi} , in rad/s. Output drive shaft torque, T_o , in N·m.

Dependencies

To create this port, for **Port Configuration**, select Two-way connection.

Parameters

Block Options

Port Configuration — Specify configuration

Simulink (default) | Two-way connection

Specify the port configuration.

Dependencies

Specifying Simulink creates these ports:

- BSpd
- FSpd
- BTrq
- FTrq

Specifying Two-way connection creates these ports:

- B
- F

Clutch force equivalent net radius, R_{eff} — Radius

scalar

Clutch force equivalent net radius, in m.

Number of disks, N_{disk} — Ratio

scalar

Number of disks, dimensionless.

Effective applied pressure area, A_{eff} — Pressure area

scalar

Effective applied pressure area, in m^2 .

Engagement pressure threshold, P_{eng} — Pressure threshold

scalar

Pressure to engage clutch, in Pa.

Input shaft inertia, J_{in} — Inertia

scalar

Input shaft inertia, in $\text{kg}\cdot\text{m}^2$.

Output shaft inertia, J_{out} — Inertia

scalar

Output shaft inertia, in $\text{kg}\cdot\text{m}^2$.

Kinetic friction coefficient, μ_k — Coefficient

scalar

Kinetic friction coefficient, dimensionless.

Static friction coefficient, μ_s — Coefficient

scalar

Static friction coefficient, dimensionless.

Input shaft viscous damping, b_{in} — Damping

scalar

Input shaft viscous damping, in $\text{N}\cdot\text{m}\cdot\text{s}/\text{rad}$.

Output shaft viscous damping, b_{out} — Damping

scalar

Output shaft viscous damping, in $\text{N}\cdot\text{m}\cdot\text{s}/\text{rad}$.

Initial input shaft velocity, w_{in_o} — Initial velocity

scalar

Input shaft initial velocity, in rad/s .

Initial output shaft velocity, w_{out_o} — Initial velocity

scalar

Input shaft initial velocity, in rad/s .

Clutch actuation time constant, τ_C — Constant

scalar

Clutch actuation time constant, in s.

Clutch initially locked – Select to initially lock clutch
off (default)

Select to lock clutch initially.

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using Simulink® Coder™.

See Also

Planetary Gear | Rotational Inertia | Torque Converter | Torsional Compliance


Introduced in R2017a

Vehicle Dynamics Blocks — Alphabetical List

Vehicle Body 1DOF Longitudinal

Two-axle vehicle in forward and reverse motion

Library: Powertrain Blockset / Vehicle Dynamics
 Vehicle Dynamics Blockset / Vehicle Body

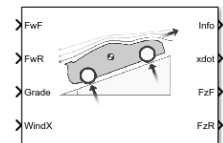

Description

The Vehicle Body 1DOF Longitudinal block implements a one degree-of-freedom (1DOF) rigid vehicle body with constant mass undergoing longitudinal (that is, forward and reverse) motion. Use the block:

- In powertrain and fuel economy studies to represent the vehicle inertial and drag loads when weight transfer from vertical and pitch motions are negligible.
- To determine the engine torque and power required for the vehicle to follow a specified drive cycle.

You can select block options to create input ports for external forces, moments, air temperature, and wind speed.


Block Option Setting	External Input Ports	Description
External forces	FExt	External force applied to vehicle CG in vehicle-fixed frame.
External moments	MExt	External moment about vehicle CG in vehicle-fixed frame.
Air temperature	AirTemp	Ambient air temperature. Consider this option if you want to vary the temperature during run-time.

Block Option Setting	External Input Ports	Description
Wind X,Y,Z	WindXYZ	Wind speed along earth-fixed X-, Y-, and Z-axes. If you do not select this option, the block implements input port WindX — Longitudinal wind speed along the earth-fixed X-axis.

Vehicle Body Model

The vehicle axles are parallel and form a plane. The longitudinal direction lies in this plane and is perpendicular to the axles. If the vehicle is traveling on an inclined slope, the normal direction is not parallel to gravity but is always perpendicular to the axle-longitudinal plane.

The block uses the net effect of all the forces and torques acting on it to determine the vehicle motion. The longitudinal tire forces push the vehicle forward or backward. The weight of the vehicle acts through its center of gravity (CG). The grade angle changes the direction of the resolved gravitational force acting on the vehicle CG. Similarly, the block resolves the resistive aerodynamic drag force on the vehicle CG.

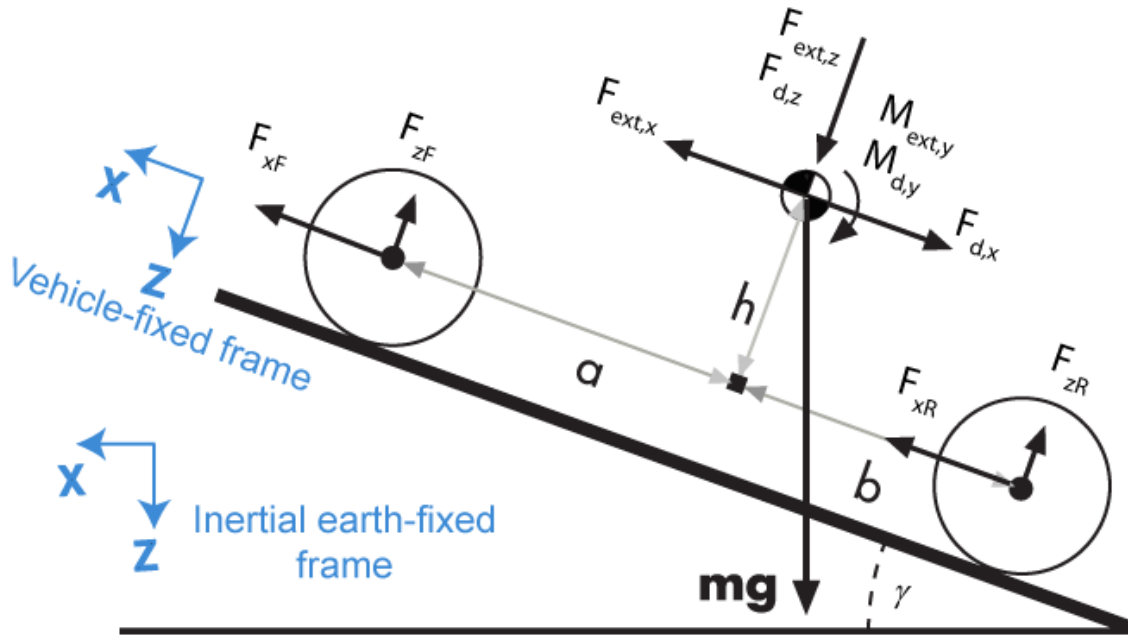

The Vehicle Body 1DOF Longitudinal block implements these equations.

$$F_b = m\ddot{x}$$

$$F_b = F_{xF} + F_{xR} - F_{d,x} + F_{ext,x} - mg\sin\gamma$$

Zero normal acceleration and zero pitch torque determine the normal force on each front and rear axles.

$$F_{zF} = \frac{-M_{ext,y} - M_{d,y} + b(F_{d,z} + F_{ext,z} + mg\cos\gamma) - h(-F_{ext,x} + F_{d,x} + mg\sin\gamma + m\ddot{x})}{N_F(a + b)}$$

$$F_{zR} = \frac{M_{ext,y} + M_{d,y} + a(F_{d,z} + F_{ext,z} + mg\cos\gamma) + h(-F_{ext,x} + F_{d,x} + mg\sin\gamma + m\ddot{x})}{N_R(a + b)}$$

The wheel normal forces satisfy this equation.

$$N_F F_{zF} + N_R F_{zR} - F_{ext, z} = mg \cos \gamma$$

Wind and Drag Forces

The block subtracts the wind speeds from the vehicle velocity components to obtain a net relative airspeed. To calculate the drag force and moments acting on the vehicle, the block uses the net relative airspeed.

$$F_{d, x} = \frac{1}{2TR} C_d A_f P_{abs}(\dot{x})$$

$$F_{d, z} = \frac{1}{2TR} C_l A_f P_{abs}(\dot{x})$$

$$M_{d, y} = \frac{1}{2TR} C_{pm} A_f P_{abs}(\dot{x})(a + b)$$

By default, to calculate the wind speed along vehicle-fixed x-axis, the block uses the longitudinal wind speed along the earth-fixed X-axis. If you select **WindX,Y,Z**, the block uses the wind speed along the earth-fixed X-, Y-, Z-axes.

Power Accounting

For the power accounting, the block implements these equations.

Bus Signal		Description	Equations
PwrIn fo	PwrTrnsfrd — Power transferred between blocks <ul style="list-style-type: none"> • Positive signals indicate flow into block • Negative signals indicate flow out of block 	PwrFxExt	Externally applied force power $P_{FxExt} = F_{xExt}\dot{x}$
		PwrFwFx	Longitudinal force power applied at the front axle $P_{FwFx} = F_w F \dot{x}$
		PwrFwRx	Longitudinal force power applied at the rear axle $P_{FwRx} = F_w R \dot{x}$

Bus Signal		Description	Equations
<p>PwrNotTrnsfrd — Power crossing the block boundary, but not transferred</p> <ul style="list-style-type: none"> • Positive signals indicate an input • Negative signals indicate a loss 	PwrFxDrag	Drag force power	$P_d = - \frac{0.5C_dA_fP_{abs}(\dot{x}^2 - w_x)^2}{287.058T} \dot{x}$
	<p>PwrStored — Stored energy rate of change</p> <ul style="list-style-type: none"> • Positive signals indicate an increase • Negative signals indicate a decrease 	wrStoredGrvt y	Rate change in gravitational potential energy
	PwrStoredxdo t	Rate in change of longitudinal kinetic energy	$P_{\dot{x}} = m\ddot{x}\dot{x}$

The equations use these variables.

- F_{xf}, F_{xr} Longitudinal forces on each wheel at the front and rear ground contact points, respectively
- F_{zf}, F_{zr} Normal load forces on each wheel at the front and rear ground contact points, respectively
- F_{wF}, F_{wR} Longitudinal force on front and rear axles along vehicle-fixed x-axis
- F_{xExt}, F_{wR} External force along vehicle-fixed x-axis
- $F_{d,x}, F_{d,z}$ Longitudinal and normal drag force on vehicle CG
- $M_{d,y}$ Torque due to drag on vehicle about vehicle-fixed y-axis

F_d	Aerodynamic drag force
V_x	Velocity of the vehicle. When $V_x > 0$, the vehicle moves forward. When $V_x < 0$, the vehicle moves backward.
N_f, N_r	Number of wheels on front and rear axle, respectively
γ	Angle of road grade
m	Vehicle body mass
a, b	Distance of front and rear axles, respectively, from the normal projection point of vehicle CG onto the common axle plane
h	Height of vehicle CG above the axle plane
C_d	Frontal air drag coefficient
A_f	Frontal area
P_{abs}	Absolute pressure
ρ	Mass density of air
x, \dot{x}, \ddot{x}	Vehicle longitudinal position, velocity, and acceleration along vehicle-fixed x -axis
w_x	Wind speed along vehicle-fixed x -axis
\dot{z}	Vehicle vertical velocity along vehicle-fixed z -axis

Limitations

The Vehicle Body 1DOF Longitudinal block lets you model only longitudinal dynamics, parallel to the ground and oriented along the direction of motion. The vehicle is assumed to be in pitch and normal equilibrium. The block does not model pitch or vertical movement. To model a vehicle with three degrees-of-freedom (DOF), use the Vehicle Body 3DOF Longitudinal.

Ports

Input

FExt — External force on vehicle CG

array

External forces applied to vehicle CG, F_{xext} , F_{yext} , F_{zext} , in vehicle-fixed frame, in N. Signal vector dimensions are [1x3] or [3x1].

Dependencies

To create this port, select **External forces**.

MExt — External moment about vehicle CG

array

External moment about vehicle CG, M_x , M_y , M_z , in vehicle-fixed frame, in N·m. Signal vector dimensions are [1x3] or [3x1].

Dependencies

To create this port, select **External moments**.

FwF — Total longitudinal force on front axle

scalar

Longitudinal force on the front axle, F_{xf} , along vehicle-fixed x-axis, in N.

FwR — Total longitudinal force on rear axle

scalar

Longitudinal force on the rear axle, F_{wR} , along vehicle-fixed x-axis, in N.

Grade — Road grade angle

scalar

Road grade angle, γ , in deg.

WindX — Longitudinal wind speed

scalar

Longitudinal wind speed, W_w , along earth-fixed X-axis, in m/s.

Dependencies

To create this port, clear **Wind X,Y,Z components**.

WindXYZ — Wind speed

array

Wind speed, W_w , W_{wY} , W_{wZ} along inertial X-, Y-, and Z-axes, in m/s. Signal vector dimensions are [1x3] or [3x1].

Dependencies

To create this port, select **Wind X,Y,Z components**.

AirTemp — Ambient air temperature

scalar

Ambient air temperature, T_{air} , in K. Considering this option if you want to vary the temperature during run-time.

Dependencies

To create this port, select **Air temperature**.

Output

Info — Bus signal

bus

Bus signal containing these block values.

Signal				Description	Value	Units
InertFr m	Cg	Disp	X	Vehicle CG displacement along earth-fixed X-axis	Computed	m
			Y	Vehicle CG displacement along earth-fixed Y-axis	0	m
			Z	Vehicle CG displacement along earth-fixed Z-axis	Computed	m
	Vel		Xdot	Vehicle CG velocity along earth-fixed X-axis	Computed	m/s
			Ydot	Vehicle CG velocity along earth-fixed Y-axis	0	m/s

Signal				Description	Value	Units	
			Zdot	Vehicle CG velocity along earth-fixed Z-axis	Computed	m/s	
			Ang	phi	Rotation of vehicle-fixed frame about earth-fixed X-axis (roll)	0	rad
				theta	Rotation of vehicle-fixed frame about earth-fixed Y-axis (pitch)	Computed (input - grade angle)	rad
				psi	Rotation of vehicle-fixed frame about earth-fixed Z-axis (yaw)	0	rad
	FrntAx _l	Disp	X	Front axle displacement along the earth-fixed X-axis	Computed	m	
			Y	Front axle displacement along the earth-fixed Y-axis	0	m	
			Z	Front axle displacement along the earth-fixed Z-axis	Computed	m	
		Vel	Xdot	Front axle velocity along the earth-fixed X-axis	Computed	m/s	
			Ydot	Front axle velocity along the earth-fixed Y-axis	0	m/s	
			Zdot	Front axle velocity along the earth-fixed Z-axis	Computed	m/s	
	RearAx _l	Disp	X	Rear axle displacement along the earth-fixed X-axis	Computed	m	
			Y	Rear axle displacement along the earth-fixed Y-axis	0	m	

Signal				Description	Value	Units	
			Z	Rear axle displacement along the earth-fixed Z-axis	Computed	m	
			Vel	Xdot	Rear axle velocity along the earth-fixed X-axis	Computed	m/s
				Ydot	Rear axle velocity along the earth-fixed Y-axis	0	m/s
				Zdot	Rear axle velocity along the earth-fixed Z-axis	Computed	m/s
BdyFrm	Cg	Disp	x	Vehicle CG displacement along vehicle-fixed x-axis	Computed	m	
			y	Vehicle CG displacement along vehicle-fixed y-axis	0	m	
			z	Vehicle CG displacement along vehicle-fixed z-axis	0	m	
		Vel	xdot	Vehicle CG velocity along vehicle-fixed x-axis	Computed	m/s	
			ydot	Vehicle CG velocity along vehicle-fixed y-axis	0	m/s	
			zdot	Vehicle CG velocity along vehicle-fixed z-axis	0	m/s	
		AngVel	p	Vehicle angular velocity about the vehicle-fixed x-axis (roll rate)	0	rad/s	
			q	Vehicle angular velocity about the vehicle-fixed y-axis (pitch rate)	0	rad/s	

Signal				Description	Value	Units		
			r	Vehicle angular velocity about the vehicle-fixed z-axis (yaw rate)	0	rad/s		
		Accel	ax	Vehicle CG acceleration along vehicle-fixed x-axis	Computed	gn		
			ay	Vehicle CG acceleration along vehicle-fixed y-axis	0	gn		
			az	Vehicle CG acceleration along vehicle-fixed z-axis	0	gn		
	Forces	Body	Fx	Net force on vehicle CG along vehicle-fixed x-axis	0	N		
				Fy	Net force on vehicle CG along vehicle-fixed y-axis	0	N	
				Fz	Net force on vehicle CG along vehicle-fixed z-axis	0	N	
			Ext	Fx	External force on vehicle CG along vehicle-fixed x-axis	Computed	N	
					Fy	External force on vehicle CG along vehicle-fixed y-axis	Computed	N
					Fz	External force on vehicle CG along vehicle-fixed z-axis	Computed	N
			FrntAx l	Fx	Longitudinal force on front axle, along the vehicle-fixed x-axis	0	N	

Signal			Description	Value	Units		
	RearAx l	Fy	Lateral force on front axle, along the vehicle-fixed y-axis	0	N		
		Fz	Normal force on front axle, along the vehicle-fixed z-axis	Computed	N		
		Fx	Longitudinal force on rear axle, along the vehicle-fixed x-axis	0	N		
		Fy	Lateral force on rear axle, along the vehicle-fixed y-axis	0	N		
		Fz	Normal force on rear axle, along the vehicle-fixed z-axis	Computed	N		
		Tires	FrntTire	Fx	Front tire force, along vehicle-fixed x-axis	0	N
				Fy	Front tire force, along vehicle-fixed y-axis	0	N
				Fz	Front tire force, along vehicle-fixed z-axis	Computed	N
			RearTire	Fx	Rear tire force, along vehicle-fixed x-axis	0	N
	Fy			Rear tire force, along vehicle-fixed y-axis	0	N	
	Fz			Rear tire force, along vehicle-fixed z-axis	Computed	N	
	Drag	Fx	Drag force on vehicle CG along vehicle-fixed x-axis	Computed	N		
		Fy	Drag force on vehicle CG along vehicle-fixed y-axis	Computed	N		

Signal				Description	Value	Units	
			Fz	Drag force on vehicle CG along vehicle-fixed z-axis	Computed	N	
			Grvty	Fx	Gravity force on vehicle CG along vehicle-fixed x-axis	Computed	N
				Fy	Gravity force on vehicle CG along vehicle-fixed y-axis	0	N
				Fz	Gravity force on vehicle CG along vehicle-fixed z-axis	Computed	N
	Moment s	Body	Mx	Net moment on vehicle CG about vehicle-fixed x-axis	0	N·m	
			My	Net moment on vehicle CG about vehicle-fixed y-axis	0	N·m	
			Mz	Net moment on vehicle CG about vehicle-fixed z-axis	0	N·m	
		Drag	Mx	Drag moment on vehicle CG about vehicle-fixed x-axis	Computed	N·m	
			My	Drag moment on vehicle CG about vehicle-fixed y-axis	Computed	N·m	
			Mz	Drag moment on vehicle CG about vehicle-fixed z-axis	Computed	N·m	
		Ext	Fx	External moment on vehicle CG about vehicle-fixed x-axis	Computed	N·m	

Signal				Description	Value	Units
			Fy	External moment on vehicle CG about vehicle-fixed y-axis	Computed	N·m
			Fz	External moment on vehicle CG about vehicle-fixed z-axis	Computed	N·m
	FrntAx l	Disp	x	Front axle displacement along the vehicle-fixed x-axis	Computed	m
			y	Front axle displacement along the vehicle-fixed y-axis	0	m
			z	Front axle displacement along the vehicle-fixed z-axis	Computed	m
		Vel	xdot	Front axle velocity along the vehicle-fixed x-axis	Computed	m/s
			ydot	Front axle velocity along the vehicle-fixed y-axis	0	m/s
			zdot	Front axle velocity along the vehicle-fixed z-axis	Computed	m/s
		Steer	WhlAngFL	Front left wheel steering angle	Computed	rad
			WhlAngFR	Front right wheel steering angle	Computed	rad
		RearAx l	Disp	x	Rear axle displacement along the vehicle-fixed x-axis	Computed
	y			Rear axle displacement along the vehicle-fixed y-axis	0	m

Signal				Description	Value	Units
	Vel	z	Rear axle displacement along the vehicle-fixed z-axis	Computed	m	
		xdot	Rear axle velocity along the vehicle-fixed x-axis	Computed	m/s	
		ydot	Rear axle velocity along the vehicle-fixed y-axis	0	m/s	
		zdot	Rear axle velocity along the vehicle-fixed z-axis	Computed	m/s	
		Steer	WhlAngRL	Rear left wheel steering angle	Computed	rad
			WhlAngRR	Rear right wheel steering angle	Computed	rad
	Pwr	PwrExt		Applied external power	Computed	W
		Drag		Power loss due to drag	Computed	W
	PwrInfo	PwrTrnsfrd	PwrFxEExt		Externally applied force power	Computed
PwrFwFx			Longitudinal force power applied at the front axle	Computed	W	
PwrFwRx			Longitudinal force power applied at the rear axle	Computed	W	
PwrNotTrnsfrd		PwrFxDrag		Drag force power	Computed	W
PwrStored		wrStoredGrvty		Rate change in gravitational potential energy	Computed	W

Signal			Description	Value	Units
		PwrStoredxdot	Rate in change of longitudinal kinetic energy	Computed	W

xdot — Vehicle body longitudinal velocity

scalar

Vehicle body longitudinal velocity along the earth-fixed reference frame X-axis, in m/s.

FzF — Front axle normal force

scalar

Normal load force on the front axle, F_{zf} , along vehicle-fixed z-axis, in N.

FzR — Rear axle normal force

scalar

Normal force on rear axle, F_{zr} , along vehicle-fixed z-axis, in N.

Parameters

Options**External forces — FExt input port**

off (default) | on

Specify to create input port FExt.

External moments — MExt input port

off (default) | on

Specify to create input port MExt.

Air temperature — AirTemp input port

off (default) | on

Specify to create input port AirTemp.

Wind X,Y,Z components — WindXYZ input port

off (default) | on

Specify to create input port WindXYZ.

Longitudinal

Number of wheels on front axle, N_F — Front wheel count
scalar

Number of wheels on front axle, N_F , dimensionless.

Number of wheels on rear axle, N_R — Rear wheel count
scalar

Number of wheels on rear axle, N_R , dimensionless.

Mass, m — Vehicle mass
scalar

Vehicle mass, M , in kg.

Horizontal distance from CG to front axle, a — Front axle distance
scalar

Horizontal distance a from the vehicle CG to the front wheel axle, in m.

Horizontal distance from CG to rear axle, b — Rear axle distance
scalar

Horizontal distance b from the vehicle CG to the rear wheel axle, in m.

CG height above axles, h — Height
scalar

Height of vehicle CG above the ground, h , in m.

Drag coefficient, C_d — Drag
scalar

Air drag coefficient, C_d .

Frontal area, A_f — Area
scalar

Effective vehicle cross-sectional area, A , to calculate the aerodynamic drag force on the vehicle, in m^2 .

Initial position, x_o — Position

scalar

Vehicle body longitudinal initial position along the vehicle-fixed x-axis, x_o , in m.**Initial velocity, \dot{x}_o — Velocity**

scalar

Vehicle body longitudinal initial velocity along the vehicle-fixed x-axis, \dot{x}_o , in m/s.**Environment****Absolute air pressure, P_{abs} — Pressure**

scalar

Environmental air absolute pressure, P_{abs} , in Pa.**Air temperature, T — Ambient air temperature**

scalar

Ambient air temperature, T_{air} , in K.**Dependencies**To enable this parameter, clear **Air temperature**.**Gravitational acceleration, g — Gravity**

scalar

Gravitational acceleration, g , in m/s².

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using Simulink® Coder™.

See Also


Vehicle Body 3DOF Longitudinal | Vehicle Body Total Road Load

Introduced in R2017a

Vehicle Body 3DOF Longitudinal

3DOF rigid vehicle body to calculate longitudinal, vertical, and pitch motion

Library: Powertrain Blockset / Vehicle Dynamics
Vehicle Dynamics Blockset / Vehicle Body

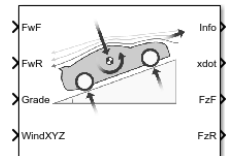

Description

The Vehicle Body 3DOF Longitudinal block implements a three degrees-of-freedom (3DOF) rigid vehicle body model with configurable axle stiffness to calculate longitudinal, vertical, and pitch motion. The block accounts for body mass, aerodynamic drag, road incline, and weight distribution between the axles due to acceleration and the road profile.

You can specify the type of axle attachment to the vehicle:

- **Grade angle** — Vertical axle displacement from road surface to axles remains constant. The block uses tabular stiffness and damping parameters to model the suspension forces acting between the vehicle body and axles.
- **Axle displacement** — Axles have input-provided vertical displacement and velocity with respect to the road grade. The block uses tabular stiffness and damping parameters to model the suspension forces acting between the vehicle body and axle.
- **External suspension** — Axles have externally applied forces for coupling the vehicle body to custom suspension models.


If the weight transfer from vertical and pitch motions are not negligible, consider using this block to represent vehicle motion in powertrain and fuel economy studies. For example, in studies with heavy braking or acceleration or road profiles that contain larger vertical changes.

The block uses rigid-body vehicle motion, suspension system forces, and wind and drag forces to calculate the normal forces on the front and rear axles. The block resolves the force components and moments on the rigid vehicle body frame:

$$F_x = F_{wF} + F_{wR} - F_{d,x} - F_{sx,F} - F_{sx,R} + F_{g,x}$$

$$F_z = F_{d,z} - F_{sz,F} - F_{sz,R} + F_{g,z}$$

$$M_y = aF_{sz,F} - bF_{sz,R} + h(F_{wF} + F_{wR} + F_{sx,F} + F_{sx,R}) - M_{d,y}$$

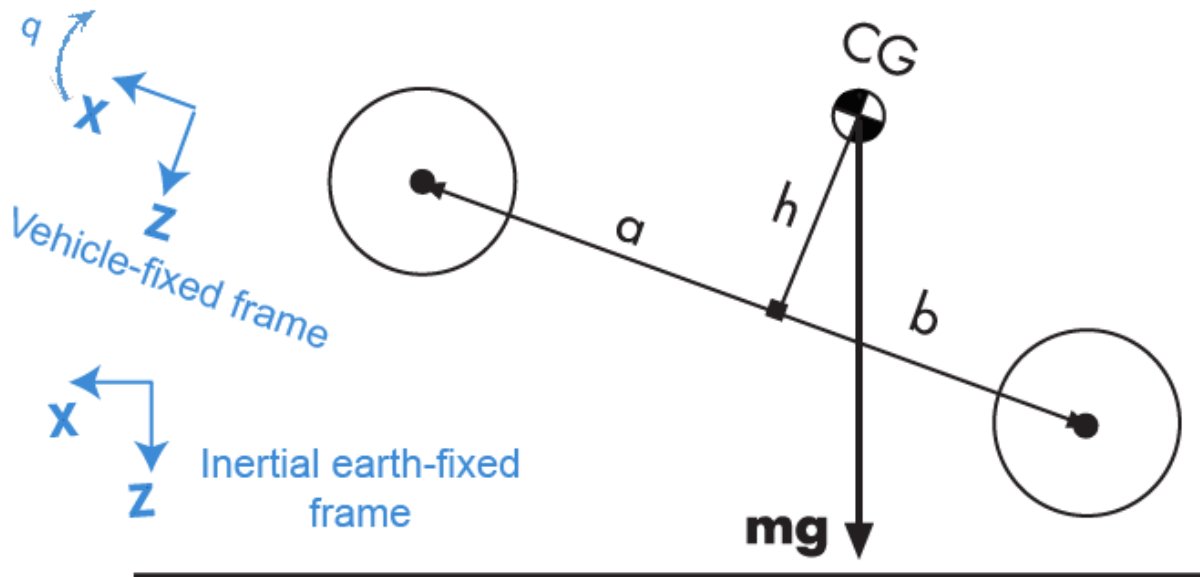

Rigid-Body Vehicle Motion

The vehicle axles are parallel and form a plane. The longitudinal direction lies in this plane and is perpendicular to the axles. If the vehicle is traveling on an inclined slope, the normal direction is not parallel to gravity but is always perpendicular to the axle-longitudinal plane.

The block uses the net effect of all the forces and torques acting on it to determine the vehicle motion. The longitudinal tire forces push the vehicle forward or backward. The weight of the vehicle acts through its center of gravity (CG). Depending on the inclined angle, the weight pulls the vehicle to the ground and either forward or backward.

Whether the vehicle travels forward or backward, aerodynamic drag slows it down. For simplicity, the drag is assumed to act through the CG.

The Vehicle Body 3DOF Longitudinal implements these equations.

$$\ddot{x} = \frac{F_x}{m} - qz$$

$$\ddot{z} = \frac{F_z}{m} - qx$$

$$\dot{q} = \frac{M_y}{I_{yy}}$$

$$\dot{\theta} = q$$

Suspension System Forces

If you configure the block with the **Ground interaction type** parameter **Grade angle** or **Axle displacement, velocity**, the block uses nonlinear stiffness and damping parameters to model the suspension system.

The front and rear axle suspension forces are given by:

$$F_{S_F} = N_F[Fk_F + Fb_F]$$

$$F_{S_R} = N_R[Fk_R + Fb_R]$$

The block uses lookup tables to implement the front and rear suspension stiffness. To account for kinematic and material nonlinearities, including collisions with end-stops, the tables are functions of the stroke.

$$Fk_F = f(dZ_F)$$

$$Fk_R = f(dZ_R)$$

The block uses lookup tables to implement the front and rear suspension damping. To account for nonlinearities, compression, and rebound, the tables are functions of the stroke rate.

$$Fb_F = f(d\dot{Z}_F)$$

$$Fb_R = f(d\dot{Z}_R)$$

The stroke is the difference in the vehicle vertical and axle positions. The stroke rate is the difference in the vertical and axle velocities.

$$dZ_F = Z_F - \bar{Z}_F$$

$$dZ_R = Z_R - \bar{Z}_R$$

$$d\dot{Z}_F = \dot{Z}_F - \dot{\bar{Z}}_F$$

$$d\dot{Z}_R = \dot{Z}_R - \dot{\bar{Z}}_R$$

When the **Ground interaction type** parameter is **Grade angle**, the axle vertical positions (\bar{Z}_F, \bar{Z}_R) and velocities ($\dot{\bar{Z}}_F, \dot{\bar{Z}}_R$) are set to 0.

Wind and Drag Forces

The block subtracts the wind speeds from the vehicle velocity components to obtain a net relative airspeed. To calculate the drag force and moments acting on the vehicle, the block uses the net relative airspeed:

$$F_{d,x} = \frac{1}{2TR} C_d A_f P_{abs}(\dot{x})$$

$$F_{d,z} = \frac{1}{2TR} C_l A_f P_{abs}(\dot{x})$$

$$M_{d,y} = \frac{1}{2TR} C_{pm} A_f P_{abs}(\dot{x})(a + b)$$

Power Accounting

For the power accounting, the block implements these equations.

Bus Signal		Description	Equations
PwrIn fo	PwrTrnsfrd — Power transferred between blocks • Positive signals	PwrFxExt	Externally applied longitudinal force power $P_{FxExt} = F_{xExt}\dot{x}$

Bus Signal		Description	Equations
indicate flow into block • Negative signals indicate flow out of block	PwrFzExt	Externally applied longitudinal force power	$P_{FzExt} = F_{zExt}\dot{z}$
	PwrMyExt	Externally applied pitch moment power	$P_{MzExt} = M_{zExt}\dot{\theta}$
	PwrFwFx	Longitudinal force applied at the front axle	$P_{FwFx} = F_{wF}\dot{x}$
	PwrFwRx	Longitudinal force applied at the rear axle	$P_{FwRx} = F_{wR}\dot{x}$
PwrNotTrnsfrd — Power crossing the block boundary, but not transferred • Positive signals indicate an input • Negative signals indicate a loss	PwrFsF	Internal power transferred between suspension and vehicle body at the front axle	$P_{Fs,F} = -P_{FwFx} + P_{FsbF} + P_{Fsk,F} + F_{xF}\dot{x}_F + F_{zF}\dot{z}_F$
	PwrFsR	Internal power transferred between suspension and vehicle body at the rear axle	$P_{Fs,R} = -P_{FwRx} + P_{Fsb,R} + P_{Fsk,R} + F_{xF}\dot{x}_F + F_{zF}\dot{z}_F$
	PwrFxDrag	Longitudinal drag force power	$P_{d,x} = F_{d,x}\dot{x}$
	PwrFzDrag	Vertical drag force power	$P_{d,z} = F_{d,z}\dot{z}$
	PwrMyDrag	Drag pitch moment power	$P_{d,My} = M_{d,y}\dot{\theta}$
	PwrFsb	Total suspension damping power	$P_{Fsb} = \sum_{i=F,R} F_{sb,i}\dot{z}_i$

Bus Signal		Description	Equations
PwrStored — Stored energy rate of change <ul style="list-style-type: none"> • Positive signals indicate an increase • Negative signals indicate a decrease 	PwrStoredGrvt y	Rate change in gravitational potential energy	$P_g = -mg\dot{Z}$
	PwrStoredxdot	Rate of change of longitudinal kinetic energy	$P_{\dot{x}} = m\dot{x}\dot{x}$
	PwrStoredzdot	Rate of change of longitudinal kinetic energy	$P_{\dot{z}} = m\dot{z}\dot{z}$
	PwrStoredq	Rate of change of rotational pitch kinetic energy	$P_{\dot{\theta}} = I_{yy}\dot{\theta}\dot{\theta}$
	PwrStoredFsFz Sprng	Stored spring energy from front suspension	$P_{FskF} = F_{sk,F}\dot{z}_F$
	PwrStoredFsRz Sprng	Stored spring energy from rear suspension	$P_{FskR} = F_{sk,R}\dot{z}_R$

The equations use these variables.

F_x	Longitudinal force on vehicle
F_z	Normal force on vehicle
M_y	Torque on vehicle about vehicle-fixed y-axis
F_{wF}, F_{wR}	Longitudinal force on front and rear axles along vehicle-fixed x-axis
$F_{d,x}, F_{d,z}$	Longitudinal and normal drag force on vehicle CG
$F_{sx,F}, F_{sx,R}$	Longitudinal suspension force on front and rear axles
$F_{sz,F}, F_{sz,R}$	Normal suspension force on front and rear axles
$F_{g,x}, F_{g,z}$	Longitudinal and normal gravitational force on vehicle along vehicle-fixed frame

$M_{d,y}$	Torque due to drag on vehicle about vehicle-fixed y-axis
a, b	Distance of front and rear axles, respectively, from the normal projection point of vehicle CG onto the common axle plane
h	Height of vehicle CG above the axle plane along vehicle-fixed z-axis
F_{sF}, F_{sR}	Front and rear axle suspension force along vehicle-fixed z-axis
Z_{wF}, Z_{wR}	Front and rear vehicle normal position along earth-fixed z-axis
Θ	Vehicle pitch angle about vehicle-fixed y-axis
m	Vehicle body mass
N_F, N_R	Number of front and rear wheels
I_{yy}	Vehicle body moment of inertia about the vehicle-fixed y-axis
x, \dot{x}, \ddot{x}	Vehicle longitudinal position, velocity, and acceleration along vehicle-fixed x-axis
z, \dot{z}, \ddot{z}	Vehicle normal position, velocity, and acceleration along vehicle-fixed z-axis
Fk_F, Fk_R	Front and rear wheel suspension stiffness force along vehicle-fixed z-axis
Fb_F, Fb_R	Front and rear wheel suspension damping force along vehicle-fixed z-axis
Z_F, Z_R	Front and rear vehicle vertical position along earth-fixed Z-axis
\dot{Z}_F, \dot{Z}_R	Front and rear vehicle vertical velocity along vehicle-fixed z-axis
\bar{Z}_F, \bar{Z}_R	Front and rear wheel axle vertical position along vehicle-fixed z-axis
$\dot{\bar{Z}}_F, \dot{\bar{Z}}_R$	Front and rear wheel axle vertical velocity along earth-fixed z-axis
dZ_F, dZ_R	Front and rear axle suspension deflection along vehicle-fixed z-axis
$d\dot{Z}_F, d\dot{Z}_R$	Front and rear axle suspension deflection rate along vehicle-fixed z-axis
C_d	Frontal air drag coefficient acting along vehicle-fixed x-axis
C_l	Lateral air drag coefficient acting along vehicle-fixed z-axis
C_{pm}	Air drag pitch moment acting about vehicle-fixed y-axis
A_f	Frontal area
P_{abs}	Environmental absolute pressure
R	Atmospheric specific gas constant
T	Environmental air temperature

w_x Wind speed along vehicle-fixed x -axis

Ports

Input

FExt — External force on vehicle CG

array

External forces applied to vehicle CG, F_{xext} , F_{yext} , F_{zext} , in vehicle-fixed frame, in N. Signal vector dimensions are [1×3] or [3×1].

Dependencies

To create this port, select **External forces**.

MExt — External moment about vehicle CG

array

External moment about vehicle CG, M_x , M_y , M_z , in vehicle-fixed frame, in N·m. Signal vector dimensions are [1×3] or [3×1].

Dependencies

To create this port, select **External moments**.

FwF — Total longitudinal force on the front axle

scalar

Longitudinal force on the front axle, Fw_F , along vehicle-fixed x -axis, in N.

FwR — Total longitudinal force on the rear axle

scalar

Longitudinal force on the rear axle, Fw_R , along vehicle-fixed x -axis, in N.

Grade — Road grade angle

scalar

Road grade angle, γ , in deg.

FsF — Suspension force on front axle per wheel

vector

Suspension force on front axle, F_{sF} , along vehicle-fixed z -axis, in N.

Dependencies

To create this port, for the **Ground interaction type** parameter, select External suspension.

FsR — Suspension force on rear axle per wheel

vector

Suspension force on rear axle, F_{sR} , along vehicle-fixed z -axis, in N.

Dependencies

To create this port, for the **Ground interaction type** parameter, select External suspension.

WindXYZ — Wind speed

array

Wind speed, W_x , W_y , W_z along earth-fixed X -, Y -, and Z -axes, in m/s. Signal vector dimensions are [1x3] or [3x1].

AirTemp — Ambient air temperature

scalar

Ambient air temperature, T_{air} , in K. Considering this option if you want to vary the temperature during run-time.

Dependencies

To create this port, select **Air temperature**.

zF, R — Forward and rear axle positions

vector

Forward and rear axle positions along the vehicle-fixed z -axis, \bar{z}_F , \bar{z}_R , in m.

Dependencies

To create this port, for the **Ground interaction type** parameter, select Axle displacement, velocity.

zdotF,R — Forward and rear axle velocities

vector

Forward and rear axle velocities along the vehicle-fixed z -axis, \dot{Z}_F, \dot{Z}_R , in m/s.

Dependencies

To create this port, for the **Ground interaction type** parameter, select Axle displacement, velocity.

Output

Info — Bus signal

bus

Bus signal containing these block values.

Signal				Description	Value	Units
InertForm	Cg	Disp	X	Vehicle CG displacement along earth-fixed X-axis	Computed	m
			Y	Vehicle CG displacement along earth-fixed Y-axis	0	m
			Z	Vehicle CG displacement along earth-fixed Z-axis	Computed	m
		Vel	Xdot	Vehicle CG velocity along earth-fixed X-axis	Computed	m/s
			Ydot	Vehicle CG velocity along earth-fixed Y-axis	0	m/s
			Zdot	Vehicle CG velocity along earth-fixed Z-axis	Computed	m/s
		Ang	phi	Rotation of vehicle-fixed frame about earth-fixed X-axis (roll)	0	rad

Signal			Description	Value	Units	
			theta	Rotation of vehicle-fixed frame about earth-fixed Y-axis (pitch)	Computed	rad
			psi	Rotation of vehicle-fixed frame about earth-fixed Z-axis (yaw)	0	rad
	FrntAx l	Disp	X	Front axle displacement along the earth-fixed X-axis	Computed	m
			Y	Front axle displacement along the earth-fixed Y-axis	0	m
			Z	Front axle displacement along the earth-fixed Z-axis	Computed	m
		Vel	Xdot	Front axle velocity along the earth-fixed X-axis	Computed	m/s
			Ydot	Front axle velocity along the earth-fixed Y-axis	0	m/s
			Zdot	Front axle velocity along the earth-fixed Z-axis	Computed	m/s
	RearAx l	Disp	X	Rear axle displacement along the earth-fixed X-axis	Computed	m
			Y	Rear axle displacement along the earth-fixed Y-axis	0	m
			Z	Rear axle displacement along the earth-fixed Z-axis	Computed	m
		Vel	Xdot	Rear axle velocity along the earth-fixed X-axis	Computed	m/s

Signal				Description	Value	Units
			Ydot	Rear axle velocity along the earth-fixed Y-axis	0	m/s
			Zdot	Rear axle velocity along the earth-fixed Z-axis	Computed	m/s
BdyFrm	Cg	Disp	x	Vehicle CG displacement along vehicle-fixed x-axis	Computed	m
			y	Vehicle CG displacement along vehicle-fixed y-axis	0	m
			z	Vehicle CG displacement along vehicle-fixed z-axis	Computed	m
		Vel	xdot	Vehicle CG velocity along vehicle-fixed x-axis	Computed	m/s
			ydot	Vehicle CG velocity along vehicle-fixed y-axis	0	m/s
			zdot	Vehicle CG velocity along vehicle-fixed z-axis	Computed	m/s
		AngVel	p	Vehicle angular velocity about the vehicle-fixed x-axis (roll rate)	0	rad/s
			q	Vehicle angular velocity about the vehicle-fixed y-axis (pitch rate)	Computed	rad/s
			r	Vehicle angular velocity about the vehicle-fixed z-axis (yaw rate)	0	rad/s
	Accel	ax	Vehicle CG acceleration along vehicle-fixed x-axis	Computed	gn	

Signal				Description	Value	Units
			ay	Vehicle CG acceleration along vehicle-fixed y-axis	0	gn
			az	Vehicle CG acceleration along vehicle-fixed z-axis	Computed	gn
	Forces	Body	Fx	Net force on vehicle CG along vehicle-fixed x-axis	Computed	N
			Fy	Net force on vehicle CG along vehicle-fixed y-axis	0	N
			Fz	Net force on vehicle CG along vehicle-fixed z-axis	Computed	N
		Ext	Fx	External force on vehicle CG along vehicle-fixed x-axis	Computed	N
			Fy	External force on vehicle CG along vehicle-fixed y-axis	Computed	N
			Fz	External force on vehicle CG along vehicle-fixed z-axis	Computed	N
		FrntAxle	Fx	Longitudinal force on front axle, along the vehicle-fixed x-axis	Computed	N
			Fy	Lateral force on front axle, along the vehicle-fixed y-axis	0	N
			Fz	Normal force on front axle, along the vehicle-fixed z-axis	Computed	N

Signal				Description	Value	Units	
	RearAxle	Fx		Longitudinal force on rear axle, along the vehicle-fixed x-axis	Computed	N	
				Fy	Lateral force on rear axle, along the vehicle-fixed y-axis	0	N
				Fz	Normal force on rear axle, along the vehicle-fixed z-axis	Computed	N
	Tires	FrntTire	Fx	Front tire force, along vehicle-fixed x-axis	0	N	
				Fy	Front tire force, along vehicle-fixed y-axis	0	N
				Fz	Front tire force, along vehicle-fixed z-axis	Computed	N
		RearTire	Fx	Rear tire force, along vehicle-fixed x-axis	0	N	
				Fy	Rear tire force, along vehicle-fixed y-axis	0	N
				Fz	Rear tire force, along vehicle-fixed z-axis	Computed	N
	Drag	Fx		Drag force on vehicle CG along vehicle-fixed x-axis	Computed	N	
				Fy	Drag force on vehicle CG along vehicle-fixed y-axis	Computed	N
				Fz	Drag force on vehicle CG along vehicle-fixed z-axis	Computed	N
	Grvty	Fx		Gravity force on vehicle CG along vehicle-fixed x-axis	Computed	N	

Signal				Description	Value	Units			
			Fy	Gravity force on vehicle CG along vehicle-fixed y-axis	0	N			
			Fz	Gravity force on vehicle CG along vehicle-fixed z-axis	Computed	N			
			Moment s	Body	Mx	Body moment on vehicle CG about vehicle-fixed x-axis	0	N·m	
				My	Body moment on vehicle CG about vehicle-fixed y-axis	Computed	N·m		
				Mz	Body moment on vehicle CG about vehicle-fixed z-axis	0	N·m		
				Drag	Mx	Drag moment on vehicle CG about vehicle-fixed x-axis	0	N·m	
					My	Drag moment on vehicle CG about vehicle-fixed y-axis	Computed	N·m	
					Mz	Drag moment on vehicle CG about vehicle-fixed z-axis	0	N·m	
					Ext	Fx	External moment on vehicle CG about vehicle-fixed x-axis	Computed	N·m
						Fy	External moment on vehicle CG about vehicle-fixed y-axis	Computed	N·m
						Fz	External moment on vehicle CG about vehicle-fixed z-axis	Computed	N·m

Signal			Description	Value	Units	
	FrntAx l	Disp	x	Front axle displacement along the vehicle-fixed x-axis	Computed	m
			y	Front axle displacement along the vehicle-fixed y-axis	0	m
			z	Front axle displacement along the vehicle-fixed z-axis	Computed	m
		Vel	xdot	Front axle velocity along the vehicle-fixed x-axis	Computed	m/s
			ydot	Front axle velocity along the vehicle-fixed y-axis	0	m/s
			zdot	Front axle velocity along the vehicle-fixed z-axis	Computed	m/s
	Steer	WhlAngFL	Front left wheel steering angle	Computed	rad	
		WhlAngFR	Front right wheel steering angle	Computed	rad	
	RearAx l	Disp	x	Rear axle displacement along the vehicle-fixed x-axis	Computed	m
			y	Rear axle displacement along the vehicle-fixed y-axis	0	m
			z	Rear axle displacement along the vehicle-fixed z-axis	Computed	m
		Vel	xdot	Rear axle velocity along the vehicle-fixed x-axis	Computed	m/s
ydot			Rear axle velocity along the vehicle-fixed y-axis	0	m/s	

Signal				Description	Value	Units
			zdot	Rear axle velocity along the vehicle-fixed z-axis	Computed	m/s
		Steer	WhlAngRL	Rear left wheel steering angle	Computed	rad
			WhlAngRR	Rear right wheel steering angle	Computed	rad
	Pwr	PwrExt		Applied external power	Computed	W
		Drag		Power loss due to drag	Computed	W
PwrInfo	PwrTrnsfrd	PwrFxExt		Externally applied longitudinal force power	Computed	W
		PwrFzExt		Externally applied longitudinal force power	Computed	W
		PwrMyExt		Externally applied pitch moment power	Computed	W
		PwrFwFx		Longitudinal force applied at the front axle	Computed	W
		PwrFwRx		Longitudinal force applied at the rear axle	Computed	W
	PwrNotTrnsfrd	PwrFsF		Internal power transferred between suspension and vehicle body at the front axle	Computed	W
		PwrFsR		Internal power transferred between suspension and vehicle body at the rear axle	Computed	W
		PwrFxDrag		Longitudinal drag force power	Computed	W
		PwrFzDrag		Vertical drag force power	Computed	W

Signal		Description	Value	Units	
		PwrMyDrag	Drag pitch moment power	Computed	W
		PwrFsb	Total suspension damping power	Computed	W
	PwrStored	PwrStoredGrvty	Rate change in gravitational potential energy	Computed	W
		PwrStoredxdot	Rate of change of longitudinal kinetic energy	Computed	W
		PwrStoredzdot	Rate of change of longitudinal kinetic energy	Computed	W
		PwrStoredq	Rate of change of rotational pitch kinetic energy	Computed	W
		PwrStoredFsFzSprng	Stored spring energy from front suspension	Computed	W
		PwrStoredFsRzSprng	Stored spring energy from rear suspension	Computed	W

x_{dot} — Vehicle longitudinal velocity

scalar

Vehicle CG velocity along vehicle-fixed x-axis, in m/s.

F_{zF} — Front axle normal force

scalar

Normal force on front axle, F_{zF} , along vehicle-fixed z-axis, in N.

F_{zR} — Rear axle normal force

scalar

Normal force on rear axle, F_{zR} , along vehicle-fixed z-axis, in N.

Parameters

Options

External forces — FExt input port

off (default) | on

Specify to create input port FExt.

External moments — MExt input port

off (default) | on

Specify to create input port MExt.

Air temperature — AirTemp input port

off (default) | on

Specify to create input port AirTemp.

Longitudinal

Number of wheels on front axle, NF — Front wheel count

scalar

Number of wheels on front axle, N_F , dimensionless.

Number of wheels on rear axle, NR — Rear wheel count

scalar

Number of wheels on rear axle, N_R , dimensionless.

Mass, m — Vehicle mass

scalar

Vehicle mass, m , in kg.

Horizontal distance from CG to front axle, a — Front axle distance

scalar

Horizontal distance a from the vehicle CG to the front wheel axle, in m.

Horizontal distance from CG to rear axle, b — Rear axle distance

scalar

Horizontal distance b from the vehicle CG to the rear wheel axle, in m.

CG height above axles, h — Height

scalar

Height of vehicle CG above the axles, h , in m.

Drag coefficient, C_d — Drag

scalar

Air drag coefficient, C_d , dimensionless.

Frontal area, A_f — Area

scalar

Effective vehicle cross-sectional area, A_f to calculate the aerodynamic drag force on the vehicle, in m^2 .

Initial position, x_o — Position

scalar

Vehicle body longitudinal initial position along earth-fixed x -axis, x_o , in m.

Initial velocity, \dot{x}_o — Velocity

scalar

Vehicle body longitudinal initial velocity along earth-fixed x -axis, \dot{x}_o , in m/s.

Vertical

Lift coefficient, C_l — Lift

scalar

Lift coefficient, C_l , dimensionless.

Initial vertical position, z_o — Position

scalar

Initial vertical CG position, z_o , along the vehicle-fixed z -axis, in m.

Initial vertical velocity, \dot{z}_o — Velocity

scalar

Initial vertical CG velocity, \dot{z}_o , along the vehicle-fixed z -axis, in m/s.

Pitch**Inertia, I_{yy} – About body y-axis**

scalar

Vehicle body moment of inertia about body z-axis.

Pitch drag moment coefficient, C_{pm} – Drag coefficient

scalar

Pitch drag moment coefficient, dimensionless.

Initial pitch angle, θ_o – Pitch

scalar

Initial pitch angle about body z-axis, in rad.

Initial angular velocity, q_o – Pitch velocity

scalar

Initial vehicle body angular velocity about body z-axis, in rad/s.

Suspension**Front axle stiffness force data, F_{skF} – Force**

vector

Front axle stiffness force data, F_{k_F} , in N.**Dependencies**

To enable this parameter, for the **Ground interaction type** parameter, select Grade angle or Axle displacement, velocity.

Front axle displacement data, d_{zsF} – Displacement

vector

Front axle displacement data, in m.

Dependencies

To enable this parameter, for the **Ground interaction type** parameter, select Grade angle or Axle displacement, velocity.

Front axle damping force data, FsbF — Damping force

vector

Front axle damping force, in N.

Dependencies

To enable this parameter, for the **Ground interaction type** parameter, select Grade angle or Axle displacement, velocity.

Front axle velocity data, dzdotsF — Velocity

vector

Front axle velocity data, in m/s.

Dependencies

To enable this parameter, for the **Ground interaction type** parameter, select Grade angle or Axle displacement, velocity.

Rear axle stiffness force data, FskR — Force

vector

Rear axle stiffness force data, in N.

Dependencies

To enable this parameter, for the **Ground interaction type** parameter, select Grade angle or Axle displacement, velocity.

Rear axle displacement data, dzsR — Displacement

vector

Rear axle displacement data, in m.

Dependencies

To enable this parameter, for the **Ground interaction type** parameter, select Grade angle or Axle displacement, velocity.

Rear axle damping force data, FsbR — Damping force

vector

Rear axle damping force, in N.

Dependencies

To enable this parameter, for the **Ground interaction type** parameter, select Grade angle or Axle displacement, velocity.

Rear axle velocity data, \dot{z}_{R} – Velocity

vector

Rear axle velocity data, in m/s.

Dependencies

To enable this parameter, for the **Ground interaction type** parameter, select Grade angle or Axle displacement, velocity.

Environment**Absolute air pressure, P_{abs} – Pressure**

scalar

Environmental air absolute pressure, P_{abs} , in Pa.

Air temperature, T_{air} – Ambient air temperature

scalar

Ambient air temperature, T_{air} , in K.

Dependencies

To enable this parameter, clear **Air temperature**.

Gravitational acceleration, g – Gravity

scalar

Gravitational acceleration, g , in m/s^2 .

References

- [1] Gillespie, Thomas. *Fundamentals of Vehicle Dynamics*. Warrendale, PA: Society of Automotive Engineers, 1992.
- [2] Vehicle Dynamics Standards Committee. *Vehicle Dynamics Terminology*. SAE J670. Warrendale, PA: Society of Automotive Engineers, 2008.

[3] Technical Committee. *Road vehicles — Vehicle dynamics and road-holding ability — Vocabulary*. ISO 8855:2011. Geneva, Switzerland: International Organization for Standardization, 2011.

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using Simulink® Coder™.

See Also


Vehicle Body 1DOF Longitudinal | Vehicle Body Total Road Load

Introduced in R2017a

Vehicle Body Total Road Load

Vehicle motion using coast-down testing coefficients

Library: Powertrain Blockset / Vehicle Dynamics
Vehicle Dynamics Blockset / Vehicle Body

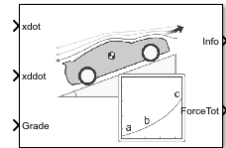

Description

The Vehicle Body Total Road Load block implements a one degree-of-freedom (1DOF) rigid vehicle model using coast-down testing coefficients. You can use this block in a vehicle model to represent the load that the driveline and chassis applies to a transmission or engine. It is suitable for system-level performance, component sizing, fuel economy, or drive cycle tracking studies. The block calculates the dynamic powertrain load with minimal parameterization or computational cost.

You can configure the block for kinematic, force, or total power input.

- Kinematic — Block uses the vehicle longitudinal velocity and acceleration to calculate the tractive force and power.
- Force — Block uses the tractive force to calculate the vehicle longitudinal displacement and velocity.
- Power — Block uses the engine or transmission power to calculate the vehicle longitudinal displacement and velocity.

Dynamics

To calculate the total road load acting on the vehicle, the block implements this equation.

$$F_{road} = a + b\dot{x} + c\dot{x}^2 + mg\sin(\theta)$$

To determine the coefficients a , b , and c , you can use a test procedure similar to the one described in *Road Load Measurement and Dynamometer Simulation Using Coastdown Techniques*. You can also use Simulink® Design Optimization™ to fit the coefficients to measured data.

To calculate the vehicle motion, the block uses Newton’s law for rigid bodies.

$$F_{total} = m\ddot{x} + F_{road}$$

Total power input is a product of the total force and longitudinal velocity. Power due to road and gravitational forces is a product of the road force and longitudinal velocity.

$$P_{total} = F_{total}\dot{x}$$

$$P_{road} = F_{road}\dot{x}$$

Power Accounting

For the power accounting, the block implements these equations.

Bus Signal		Description	Variable	Equations
PwrInfo	PwrTrnsfrd — Power transferred between blocks <ul style="list-style-type: none"> Positive signals indicate flow into block Negative signals indicate flow out of block 	PwrFxEst	Externally applied force power	$P_{FxEst} = F_{total}\dot{x}$
	PwrNotTrnsfrd — Power crossing the block boundary, but not transferred <ul style="list-style-type: none"> Positive signals indicate an input Negative signals indicate a loss 	PwrFxDrag	Drag force power	$P_d = -(a + b\dot{x} + c\dot{x}^2)\dot{x}$
	PwrStored — Stored energy rate of change <ul style="list-style-type: none"> Positive signals indicate an increase Negative signals indicate a decrease 	wrStoredGrvty	Rate change in gravitational potential energy	$P_g = -mg\dot{z}$

Bus Signal		Description	Variable	Equations
	PwrSt oredx dot	Rate in change of longitudinal kinetic energy	$P_{x\dot{}}$	$P_{\dot{x}} = m\ddot{x}$

The equations use these variables.

a	Steady-state rolling resistance coefficient
b	Viscous driveline and rolling resistance coefficient
c	Aerodynamic drag coefficient
g	Gravitational acceleration
x	Vehicle longitudinal displacement with respect to ground, in vehicle-fixed frame
\dot{x}	Vehicle longitudinal velocity with respect to ground, in vehicle-fixed frame
\ddot{x}	Vehicle longitudinal acceleration with respect to ground, vehicle-fixed frame
m	Vehicle body mass
θ	Road grade angle
F_{total}	Total force acting on vehicle
F_{road}	Resistive road load due to losses and gravitational load
P_{total}	Total tractive input power
P_{road}	Total power due to losses and gravitational load
\dot{z}	Vehicle vertical velocity along vehicle-fixed z-axis

Ports

Input

xdot – Vehicle longitudinal velocity
scalar

Vehicle total longitudinal velocity, \dot{x} , in m/s.

Dependencies

To create this port, for the **Input Mode** parameter, select Kinematic.

xddot — Vehicle longitudinal acceleration

scalar

Vehicle total longitudinal acceleration, \ddot{x} , in m/s².

Dependencies

To create this port, for the **Input Mode** parameter, select Kinematic.

PwrTot — Tractive input power

scalar

Tractive input power, P_{total} , in W.

Dependencies

To create this port, for the **Input Mode** parameter, select Power.

ForceTot — Tractive input force

scalar

Tractive input force, F_{total} , in N.

Dependencies

To create this port, for the **Input Mode** parameter, select Force.

Grade — Road grade angle

scalar

Road grade angle, θ , in deg.

Output

Info — Bus signal

bus

Bus signal containing these block calculations.

Signal			Description	Value	Units	
I n e r t f r m	Cg	Disp	X	Vehicle CG displacement along earth-fixed X-axis	Computed	m
			Y	Vehicle CG displacement along earth-fixed Y-axis	0	m
			Z	Vehicle CG displacement along earth-fixed Z-axis	Computed	m
		Vel	Xdot	Vehicle CG velocity along earth-fixed X-axis	Computed	m/s
			Ydot	Vehicle CG velocity along earth-fixed Y-axis	0	m/s
			Zdot	Vehicle CG velocity along earth-fixed Z-axis	Computed	m/s
		Ang	phi	Rotation of vehicle-fixed frame about earth-fixed X-axis (roll)	0	rad
			theta	Rotation of vehicle-fixed frame about earth-fixed Y-axis (pitch)	Computed	rad
			psi	Rotation of vehicle-fixed frame about earth-fixed Z-axis (yaw)	0	rad
B o d y F r m	Cg	Disp	x	Vehicle CG displacement along vehicle-fixed x-axis	Computed	m
			y	Vehicle CG displacement along vehicle-fixed y-axis	0	m
			z	Vehicle CG displacement along vehicle-fixed z-axis	0	m
		Vel	xdot	Vehicle CG velocity along vehicle-fixed x-axis	Computed	m/s
			ydot	Vehicle CG velocity along vehicle-fixed y-axis	0	m/s
			zdot	Vehicle CG velocity along vehicle-fixed z-axis	0	m/s
		Acc	ax	Vehicle CG acceleration along vehicle-fixed x-axis	Computed	gn

Signal			Description	Value	Units	
		ay	Vehicle CG acceleration along vehicle-fixed y-axis	0	gn	
		az	Vehicle CG acceleration along vehicle-fixed z-axis	0	gn	
	Forces	Body	Fx	Net force on vehicle CG along vehicle-fixed x-axis	Computed	N
			Fy	Net force on vehicle CG along vehicle-fixed y-axis	0	N
			Fz	Net force on vehicle CG along vehicle-fixed z-axis	0	N
	Ext	Fx	External force on vehicle CG along vehicle-fixed x-axis	Computed	N	
		Fy	External force on vehicle CG along vehicle-fixed y-axis	0	N	
		Fz	External force on vehicle CG along vehicle-fixed z-axis	0	N	
	Drag	Fx	Drag force on vehicle CG along vehicle-fixed x-axis	Computed	N	
		Fy	Drag force on vehicle CG along vehicle-fixed y-axis	0	N	
		Fz	Drag force on vehicle CG along vehicle-fixed z-axis	0	N	
	Grvty	Fx	Gravity force on vehicle CG along vehicle-fixed x-axis	Computed	N	
		Fy	Gravity force on vehicle CG along vehicle-fixed y-axis	0	N	
		Fz	Gravity force on vehicle CG along vehicle-fixed z-axis	Computed	N	
	Pwr	PwrExt	Applied external power	Computed	W	
		Drag	Power loss due to drag	Computed	W	

Signal			Description	Value	Units
P w r I n f o P w r S t o r e d	PwrTrnsfrd	PwrFxExt	Externally applied force power	P_{FxExt}	W
	PwrNotTrnsfrd	PwrFxDrag	Drag force power	P_D	W
	PwrStored	wrStoredGrvty	Rate change in gravitational potential energy	P_g	W
		PwrStoredxdot	Rate in change of longitudinal kinetic energy	P_{xdot}	W

xdot — Vehicle longitudinal velocity

scalar

Vehicle total longitudinal velocity, \dot{x} , in m/s.

Dependencies

To create this port, for the **Input Mode** parameter, select Power or Force.

ForceTot — Tractive input force

scalar

Tractive input force, F_{total} , in N.

Dependencies

To create this port, for the **Input Mode** parameter, select Kinematic.

Parameters

Input Mode — Specify input mode

Kinematic (default) | Force | Power

Specify the input type.

- **Kinematic** — Block uses the vehicle longitudinal velocity and acceleration to calculate the tractive force and power. Use this configuration for powertrain, driveline, and braking system design, or component sizing.
- **Force** — Block uses the tractive force to calculate the vehicle longitudinal displacement and velocity. Use this configuration for system-level performance, fuel economy, or drive cycle tracking studies.
- **Power** — Block uses the engine or transmission power to calculate the vehicle longitudinal displacement and velocity. Use this configuration for system-level performance, fuel economy, or drive cycle tracking studies.

Dependencies

This table summarizes the port and input mode configurations.

Input Mode	Creates Ports
Kinematic	xdot
	xddot
Force	Force
Power	Power

Mass — Vehicle body mass

scalar

Vehicle body mass, m , in kg.

Rolling resistance coefficient, a — Rolling

scalar

Steady-state rolling resistance coefficient, a , in N.

Rolling and driveline resistance coefficient, b — Rolling and driveline

scalar

Viscous driveline and rolling resistance coefficient, b , in N*s/m.

Aerodynamic drag coefficient, c — Drag

scalar

Aerodynamic drag coefficient, c , in N*s²/m.

Gravitational acceleration, g – Gravity

scalar

Gravitational acceleration, g , in m/s^2 .**Initial velocity, \dot{x}_o – Velocity**

scalar

Vehicle longitudinal initial velocity with respect to ground, in m/s .**References**

- [1] Gillespie, Thomas. *Fundamentals of Vehicle Dynamics*. Warrendale, PA: Society of Automotive Engineers (SAE), 1992.
- [2] Light Duty Vehicle Performance And Economy Measure Committee. *Road Load Measurement and Dynamometer Simulation Using Coastdown Techniques*. Standard J1263_201003. SAE International, March 2010.

Extended Capabilities**C/C++ Code Generation**

Generate C and C++ code using Simulink® Coder™.


See Also[Drive Cycle Source](#) | [Vehicle Body 1DOF Longitudinal](#) | [Vehicle Body 3DOF Longitudinal](#)**Introduced in R2017a**

Energy Storage Blocks — Alphabetical List

Datasheet Battery

Lithium-ion, lithium-polymer, or lead-acid battery

Library: Powertrain Blockset / Energy Storage and Auxiliary Drive / Datasheet Battery

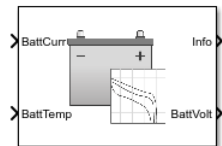

Description

The Datasheet Battery block implements a lithium-ion, lithium-polymer, or lead-acid battery that you can parameterize using manufacturer data. To create the open-circuit voltage and internal resistance parameters that you need for the block, use the manufacturer discharge characteristics by temperature data. For an example, see “Generate Parameter Data for Datasheet Battery Block”.

To determine the battery output voltage, the block uses lookup tables for the battery open-circuit voltage and the internal resistance. The lookup tables are functions of the state-of-charge (SOC) and battery temperature, characterizing the battery performance at various operating points:

$$E_m = f(SOC)$$

$$R_{int} = f(T, SOC)$$

To calculate the voltage, the block implements these equations.

$$V_T = E_m + I_{batt}R_{int}$$

$$I_{batt} = \frac{I_{in}}{N_p}$$

$$V_{out} = \begin{cases} N_s V_T & \text{unfiltered} \\ \frac{V_{out}}{\tau s + 1} & \text{filtered} \end{cases}$$

$$SOC = \frac{1}{Cap_{batt}} \int_0^t I_{batt} dt$$

$$Ld_{AmpHr} = \int_0^t I_{batt} dt$$

Positive current indicates battery discharge. Negative current indicates battery charge.

Power Accounting

For the power accounting, the block implements these equations.

Bus Signal		Description	Equations
PwrInfo	PwrTrnsfrd — Power transferred between blocks <ul style="list-style-type: none"> Positive signals indicate flow into block Negative signals indicate flow out of block 	PwrLdBatt	Battery network power $V_{batt} = V_{out} \text{ OR } \frac{V_{out}}{\tau s + 1}$ $P_{batt} = -V_{batt}I_{batt}$ $P_{LdBatt} = -P_{batt}$
	PwrNotTrnsfrd — Power crossing the block boundary, but not transferred <ul style="list-style-type: none"> Positive signals indicate an input Negative signals indicate a loss 	PwrLossBatt	Battery network power loss $P_{LossBatt} = -N_p N_s I_{batt}^2 R_{int}$

Bus Signal		Description	Equations
	<p>PwrStored — Stored energy rate of change</p> <ul style="list-style-type: none"> • Positive signals indicate an increase • Negative signals indicate a decrease 	PwrStoredBatt	$P_{StoredBatt} = P_{Batt} + P_{LossBatt}$

The equations use these variables.

SOC	State-of-charge
E_m	Battery open-circuit voltage
I_{batt}	Per module battery current
P_{LdBatt}	Battery network power
P_{batt}	Battery power
$P_{LossBatt}$	Battery network power loss
$P_{StoredBatt}$	Battery network power stored
I_{in}	Combined current flowing from the battery network
R_{int}	Battery internal resistance
N_s	Number of cells in series
N_p	Number of cells in parallel
V_{out}, V_{batt}	Combined voltage of the battery network
V_T	Per module battery voltage
Cap_{batt}	Battery capacity
Ld_{AmpHr}	Battery energy

Ports

Inputs

CapInit – Battery capacity

scalar

Rated battery capacity at the nominal temperature, Cap_{batt} , in Ah.

Dependencies

To create this port, select External Input for the **Initial battery capacity** parameter.

BattCurr – Battery load current

scalar

Combined current flowing from the battery network, I_{in} , in A.

BattTemp – Battery temperature

scalar

Temperature measured at the battery housing, T , in K.

Output

Info – Bus signal

bus

Bus signal containing these block calculations.

Signal	Description	Variable	Units
BattCurr	Combined current flowing from the battery network	I_{batt}	A
BattAmpHr	Battery energy	Ld_{AmpHr}	A*h
BattSoc	State-of-charge capacity	SOC	NA
BattVolt	Combined voltage of the battery network	V_{out}	V

Signal		Description	Variable	Units	
BattPwr		Battery network power	P_{batt}	W	
PwrInfo	PwrTrnsfrd	PwrLdBatt	Battery network power	P_{LdBatt}	W
	PwrNotTrnsfrd	PwrLossBatt	Battery network power loss	$P_{LossBatt}$	W
	PwrStored	PwrStoredBatt	Battery network power stored	$P_{StoredBatt}$	W

BattVolt — Battery output voltage

scalar

Combined voltage of the battery network, V_{out} , in V.

Parameters

Block Options

Initial battery capacity — Input or parameter

Parameter (default) | External Input

Initial battery capacity, Cap_{batt} , in Ah.

Dependencies

Block Parameter Initial battery capacity Option	Creates
External Input	Input port CapInit
Parameter	Parameter Initial battery capacity, BattCapInit

Output battery voltage — Unfiltered or Filter

Unfiltered (default) | Filtered

Select Filtered to apply a first-order filter to the output batter voltage.

Dependencies

Setting **Output battery voltage** parameter to Filtered creates these parameters:

- **Output battery voltage time constant, T_c**
- **Output battery voltage initial value, V_{init}**

Rated capacity at nominal temperature, $BattChargeMax$ – Constant
scalar

Rated battery capacity at the nominal temperature, in Ah.

Open circuit voltage table data, E_m – 1-D lookup table
1-by-P matrix

Open-circuit voltage data curve, E_m , as a function of the discharged capacity for P operating points, in V.

Open circuit voltage breakpoints 1, $CapLUTBp$ – Breakpoints
1-by-P matrix

Discharge capacity breakpoints for P operating points, dimensionless.

Although this parameter is the same as the **Battery capacity breakpoints 2, $CapSOCBp$** parameter, the block uses unique parameters for calibration flexibility.

Internal resistance table data, R_{Int} – 2-D lookup table
N-by-M matrix

Internal resistance map, R_{int} , as a function of N temperatures and M SOC's, in ohms.

Battery temperature breakpoints 1, $BattTempBp$ – Breakpoints
1-by-N matrix

Battery temperature breakpoints for N temperatures, in K.

Battery capacity breakpoints 2, $CapSOCBp$ – Breakpoints
1-by-M matrix

Battery capacity breakpoints for M SOC's, dimensionless.

Although this parameter is the same as the **Open circuit voltage breakpoints 1, $CapLUTBp$** parameter, the block uses unique parameters for calibration flexibility.

Number of cells in series, N_s – Integer
scalar

Number of cells in series, dimensionless, N_s .

Number of cells in parallel, N_p — Integer

scalar

Number of cells in parallel, dimensionless, N_p .

Initial battery capacity, $BattCapInit$ — Capacity

scalar

Initial battery capacity, Cap_{batt} , in Ah.

Dependencies

Block Parameter Initial battery capacity Option	Creates
External Input	Input port $CapInit$
Parameter	Parameter Initial battery capacity, $BattCapInit$

Output battery voltage time constant, T_c — Filter time constant

scalar

Output battery voltage time constant, T_c , in s. Used in a first-order voltage filter.

Dependencies

Setting **Output battery voltage** parameter to `Filtered` creates these parameters:

- **Output battery voltage time constant, T_c**
- **Output battery voltage initial value, V_{init}**

Output battery voltage initial value — Filter initial voltage

scalar

Output battery voltage initial value, V_{init} , in V. Used in a first-order voltage filter.

Dependencies

Setting **Output battery voltage** parameter to `Filtered` creates these parameters:

- **Output battery voltage time constant, T_c**

- **Output battery voltage initial value, Vinit**

References

- [1] Arrhenius, S.A. "Über die Dissociationswärme und den Einfluß der Temperatur auf den Dissociationsgrad der Elektrolyte." *Journal of Physical Chemistry*. 4 (1889): 96-116.
- [2] Connors, K. *Chemical Kinetics*. New York: VCH Publishers, 1990.
- [3] Ji, Yan, Yancheng Zhang, and Chao-Yang Wang. *Journal of the Electrochemical Society*. Volume 160, Issue 4 (2013), A636-A649.

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using Simulink® Coder™.

See Also

Equivalent Circuit Battery | Estimation Equivalent Circuit Battery

Topics


"Generate Parameter Data for Datasheet Battery Block"
Battery Modeling

Introduced in R2017a

Estimation Equivalent Circuit Battery

Resistor-capacitor (RC) circuit battery that creates lookup tables

Library: Powertrain Blockset / Energy Storage and Auxiliary Drive / Network Battery

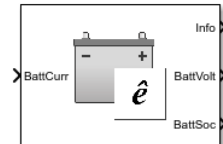

Description

The Estimation Equivalent Circuit Battery block implements a resistor-capacitor (RC) circuit battery model that you can use to create lookup tables for the Equivalent Circuit Battery block. The lookup tables are functions of the state-of-charge (SOC).

The Estimation Equivalent Circuit Battery block calculates the combined voltage of the network battery using parameter lookup tables. The tables are functions of the SOC. To acquire the SOC, the block integrates the charge and discharge currents.

Specifically, the block implements these parameters as lookup tables that are functions of the SOC:

- Series resistance, $R_o=f(SOC)$
- Battery open-circuit voltage, $E_m=f(SOC)$
- Network resistance, $R_n=f(SOC)$
- Network capacitance, $C_n=f(SOC)$

To calculate the combined voltage of the battery network, the block uses these equations.

$$V_T = E_m - I_{batt}R_o - \sum_1^n V_n$$

$$V_n = \int_0^t \left[\frac{I_{batt}}{C_n} - \frac{V_n}{R_n C_n} \right] dt$$

$$SOC = \frac{-1}{C_{batt}} \int_0^t I_{batt} dt$$

$$I_{batt} = I_{in}$$

$$V_{out} = V_T$$

Positive current indicates battery discharge. Negative current indicates battery charge.

The equations use these variables.

SOC	State-of-charge
E_m	Battery open-circuit voltage
I_{batt}	Per module battery current
I_{in}	Combined current flowing from the battery network
R_o	Series resistance
n	Number of RC pairs in series
V_{out}, V_T	Combined voltage of the battery network
V_n	Voltage for n -th RC pair
R_n	Resistance for n -th RC pair
C_n	Capacitance for n -th RC pair
C_{batt}	Battery capacity

Ports

Inputs

BattCurr — Battery network current
scalar

Combined current flowing from the battery network, I_{in} , in A.

Output

Info — Bus signal

bus

Bus signal containing these block calculations.

Signal	Description	Variable	Units
CapV _{olt}	Voltage for n -th RC pair	V_n	V

BattV_{olt} — Battery output voltage

scalar

Combined voltage of the battery network, V_{out} , in V.

BattSoc — Battery SOC

scalar

Battery state-of-charge, SOC .

Parameters

Core Battery

Number of series RC pairs — RC pairs

1 (default) | 2 | 3 | 4 | 5

Number of series RC pairs. For lithium, typically 1 or 2.

Open circuit voltage Em table data, Em — Voltage table

array

Open-circuit voltage table, E_m , in V. Function of SOC.

Series resistance table data, R0 — Resistance

array

Series resistance table, R_o , in ohms. Function of SOC.

State of charge breakpoints, SOC_BP – SOC breakpoints

vector

State-of-charge (SOC) breakpoints, dimensionless.

Battery capacity, BattCap – Capacity

scalar

Battery capacity, C_{batt} , in Ah.**Initial battery capacity, BattCapInit – Capacity**

scalar

Initial battery capacity, C_{batt0} , in Ah.**Initial capacitor voltage, InitialCapVoltage – Voltage**

vector

Initial capacitor voltage, in V. Dimension of vector must equal the **Number of series RC pairs**.**R and C Table Data****Network resistance table data, Rn – Lookup table**

array

Network resistance table data for n -th RC pair, as a function of SOC, in ohms.**Network capacitance table data, Cn – Lookup table**

array

Network capacitance table data for n -th RC pair, as a function of SOC, in F.**Cell Limits****Upper Integrator Voltage Limit, Vu – Maximum**

scalar

Upper voltage limit, in V.

Lower Integrator Voltage Limit, Vl – Minimum

scalar

Lower voltage limit, in V.

References

- [1] Ahmed, R., J. Gazzarri, R. Jackey, S. Onori, S. Habibi, et al. "Model-Based Parameter Identification of Healthy and Aged Li-ion Batteries for Electric Vehicle Applications." *SAE International Journal of Alternative Powertrains*. doi:10.4271/2015-01-0252, 4(2):2015.
- [2] Gazzarri, J., N. Shrivastava, R. Jackey, and C. Borghesani. "Battery Pack Modeling, Simulation, and Deployment on a Multicore Real Time Target." *SAE International Journal of Aerospace*. doi:10.4271/2014-01-2217, 7(2):2014.
- [3] Huria, T., M. Ceraolo, J. Gazzarri, and R. Jackey. "High fidelity electrical model with thermal dependence for characterization and simulation of high power lithium battery cells." *IEEE® International Electric Vehicle Conference*. March 2012, pp. 1-8.
- [4] Huria, T., M. Ceraolo, J. Gazzarri, and R. Jackey. "Simplified Extended Kalman Filter Observer for SOC Estimation of Commercial Power-Oriented LFP Lithium Battery Cells." *SAE Technical Paper 2013-01-1544*. doi:10.4271/2013-01-1544, 2013.
- [5] Jackey, R. "A Simple, Effective Lead-Acid Battery Modeling Process for Electrical System Component Selection." *SAE Technical Paper 2007-01-0778*. doi:10.4271/2007-01-0778, 2007.
- [6] Jackey, R., G. Plett, and M. Klein. "Parameterization of a Battery Simulation Model Using Numerical Optimization Methods." *SAE Technical Paper 2009-01-1381*. doi:10.4271/2009-01-1381, 2009.
- [7] Jackey, R., M. Saginaw, T. Huria, M. Ceraolo, P. Sanghvi, and J. Gazzarri. "Battery Model Parameter Estimation Using a Layered Technique: An Example Using a Lithium Iron Phosphate Cell." *SAE Technical Paper 2013-01-1547*. Warrendale, PA: SAE International, 2013.

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using Simulink® Coder™.

See Also

Datasheet Battery | Equivalent Circuit Battery

Topics


“Generate Parameter Data for Equivalent Circuit Battery Block”
Battery Modeling

Introduced in R2017a

Equivalent Circuit Battery

Resistor-capacitor (RC) circuit battery

Library: Powertrain Blockset / Energy Storage and Auxiliary Drive / Network Battery

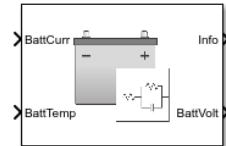

Description

The Equivalent Circuit Battery block implements a resistor-capacitor (RC) circuit battery that you can parameterize using equivalent circuit modeling (ECM). To simulate the state-of-charge (SOC) and terminal voltage, the block uses load current and internal core temperature.

The Equivalent Circuit Battery block calculates the combined voltage of the network battery using parameter lookup tables. The tables are functions of the SOC and battery temperature. You can use the Estimation Equivalent Circuit Battery block to help create the lookup tables.

Specifically, the Equivalent Circuit Battery block implements these parameters as lookup tables that are functions of the SOC and battery temperature:

- Series resistance, $R_o=f(SOC,T)$
- Battery open-circuit voltage, $E_m=f(SOC,T)$
- Battery capacity, $C_{batt}=f(T)$
- Network resistance, $R_n=f(SOC,T)$
- Network capacitance, $C_n=f(SOC,T)$

To calculate the combined voltage of the battery network, the block uses these equations.

$$V_T = E_m - I_{batt}R_o - \sum_1^n V_n$$

$$V_n = \int_0^t \left[\frac{I_{batt}}{C_n} - \frac{V_n}{R_n C_n} \right] dt$$

$$SOC = \frac{-1}{C_{batt}} \int_0^t I_{batt} dt$$

$$I_{batt} = \frac{I_{in}}{N_p}$$

$$V_{out} = N_s V_T$$

$$P_{BattLoss} = I_{batt}^2 R_o + \sum_1^n \frac{V_n^2}{R_n}$$

$$Ld_{AmpHr} = \int_0^t I_{batt} dt$$

Positive current indicates battery discharge. Negative current indicates battery charge.

Power Accounting

For the power accounting, the block implements these equations.

Bus Signal		Description	Equations
PwrInfo	PwrTrnsfrd — Power transferred between blocks <ul style="list-style-type: none"> Positive signals indicate flow into block Negative signals indicate flow out of block 	PwrLdBatt	$V_{batt} = V_{out}$ OR $\frac{V_{out}}{\tau_s + 1}$ $P_{batt} = -V_{batt} I_{batt}$ $P_{LdBatt} = -P_{batt}$

Bus Signal		Description	Equations
	<p>PwrNotTrnsfrd — Power crossing the block boundary, but not transferred</p> <ul style="list-style-type: none"> • Positive signals indicate an input • Negative signals indicate a loss 	PwrLossBatt	<p>Battery network power loss</p> $P_{LossBatt} = - \left(I_{batt}^2 R_0 + \sum_1^n \frac{V_n^2}{R_n} \right)$
	<p>PwrStored — Stored energy rate of change</p> <ul style="list-style-type: none"> • Positive signals indicate an increase • Negative signals indicate a decrease 	PwrStoredBatt	<p>Battery network power stored</p> $P_{StoredBatt} = P_{Batt} + P_{LossBatt}$

The equations use these variables.

<i>SOC</i>	State-of-charge
<i>E_m</i>	Battery open-circuit voltage
<i>I_{batt}</i>	Per module battery current
<i>I_{in}</i>	Combined current flowing from the battery network
<i>R_o</i>	Series resistance
<i>N_p</i>	Number parallel branches
<i>N_p</i>	Number of RC pairs in series
<i>V_{out}, V_T</i>	Combined voltage of the battery network
<i>V_n</i>	Voltage for <i>n</i> -th RC pair
<i>R_n</i>	Resistance for <i>n</i> -th RC pair
<i>C_n</i>	Capacitance for <i>n</i> -th RC pair
<i>C_{batt}</i>	Battery capacity
<i>P_{batt}</i>	Battery power
<i>P_{LossBatt}</i>	Negative of battery network power loss
<i>P_{BattLoss}</i>	Battery network power loss

$P_{StoredBatt}$	Battery network power stored
P_{LdBatt}	Battery network power
T	Battery temperature

Ports

Inputs

CapInit — Battery capacity

scalar

Rated battery capacity at the nominal temperature, Cap_{batt} , in Ah.

Dependencies

To create this port, select External Input for the **Initial battery capacity** parameter.

BattCurr — Battery network current

scalar

Combined current flowing from the battery network, I_{in} , in A.

BattTemp — Battery temperature

scalar

Battery temperature, T , in K.

Output

Info — Bus signal

bus

Bus signal containing these block calculations.

Signal	Description	Variable	Units
BattCurr	Combined current flowing from the battery network	I_{batt}	A

Signal			Description	Variable	Units
BattAmpHr			Battery energy	Ld_{AmpHr}	A*h
BattSoc			State-of-charge capacity	SOC	NA
BattVolt			Combined voltage of the battery network	V_{out}	V
BattPwr			Battery power	P_{batt}	W
PwrInfo	PwrTrnsfrd	PwrLdBatt	Battery network power	P_{LdBatt}	W
	PwrNotTrnsfrd	PwrLossBatt	Battery network power loss	$P_{LossBatt}$	W
	PwrStored	PwrStoredBatt	Battery network power stored	$P_{StoredBatt}$	W

BattVolt — Battery output voltage

scalar

Combined voltage of the battery network, V_{out} , in V.

Parameters

Block Options

Initial battery capacity — Input or parameter

Parameter (default) | External Input

Initial battery capacity, Cap_{batt} , in Ah.

Dependencies

Block Parameter Initial battery capacity Option	Creates
External Input	Input port CapInit
Parameter	Parameter Initial battery capacity, BattCapInit

Output battery voltage — Unfiltered or Filter

Unfiltered (default) | Filtered

Select **Filtered** to apply a first-order filter to the output battery voltage.

Dependencies

Setting **Output battery voltage** parameter to **Filtered** creates these parameters:

- **Output battery voltage time constant, Tc**
- **Output battery voltage initial value, Vinit**

Core Battery

Number of series RC pairs – RC pairs

1 (default) | 2 | 3 | 4 | 5

Number of series RC pairs. For lithium, typically 1 or 2.

Open circuit voltage Em table data, Em – Voltage table

array

Open circuit voltage table, E_m , in V. Function of SOC and battery temperature.

Series resistance table data, R0 – Resistance

array

Series resistance table, R_o , in ohms. Function of SOC and battery temperature.

State of charge breakpoints, SOC_BP – SOC breakpoints

vector

State-of-charge (SOC) breakpoints, dimensionless.

Temperature breakpoints, Temperature_BP – Battery

vector

Battery temperature breakpoints, K.

Battery capacity table, BattCap – Capacity

array

Battery capacity, C_{batt} , in Ah. Function of battery temperature.

Initial capacitor voltage, InitialCapVoltage – Voltage

vector

Initial capacitor voltage, in V. Dimension of vector must equal the **Number of series RC pairs**.

Initial battery capacity, BattCapInit — Capacity
scalar

Initial battery capacity, Cap_{batt} , in Ah.

Dependencies

Block Parameter Initial battery capacity Option	Creates
External Input	Input port CapInit
Parameter	Parameter Initial battery capacity, BattCapInit

Output battery voltage time constant, Tc — Filter time constant
scalar

Output battery voltage time constant, T_c , in s. Used in a first-order voltage filter.

Dependencies

Setting **Output battery voltage** parameter to Filtered creates these parameters:

- **Output battery voltage time constant, Tc**
- **Output battery voltage initial value, Vinit**

Output battery voltage initial value, Vinit — Filter initial voltage
scalar

Output battery voltage initial value, V_{init} , in V. Used in a first-order voltage filter.

Dependencies

Setting **Output battery voltage** parameter to Filtered creates these parameters:

- **Output battery voltage time constant, Tc**
- **Output battery voltage initial value, Vinit**

R and C Table Data

Network resistance table data, R_n — Lookup table

array

Network resistance table data for n -th RC pair, in ohms, as a function of SOC and battery temperature.

Network capacitance table data, C_n — Lookup table

array

Network capacitance table data for n -th RC pair, in F, as a function of SOC and battery temperature.

Cell Limits

Upper integrator voltage limit, V_u — Maximum

scalar

Upper voltage limit, in V.

Lower integrator voltage limit, V_l — Minimum

scalar

Lower voltage limit, in V.

References

- [1] Ahmed, R., J. Gazzarri, R. Jackey, S. Onori, S. Habibi, et al. "Model-Based Parameter Identification of Healthy and Aged Li-ion Batteries for Electric Vehicle Applications." *SAE International Journal of Alternative Powertrains*. doi:10.4271/2015-01-0252, 4(2):2015.
- [2] Gazzarri, J., N. Shrivastava, R. Jackey, and C. Borghesani. "Battery Pack Modeling, Simulation, and Deployment on a Multicore Real Time Target." *SAE International Journal of Aerospace*. doi:10.4271/2014-01-2217, 7(2):2014.
- [3] Huria, T., M. Ceraolo, J. Gazzarri, and R. Jackey. "High fidelity electrical model with thermal dependence for characterization and simulation of high power lithium battery cells." *IEEE International Electric Vehicle Conference*. March 2012, pp. 1-8.

- [4] Huria, T., M. Ceraolo, J. Gazzarri, and R. Jackey. "Simplified Extended Kalman Filter Observer for SOC Estimation of Commercial Power-Oriented LFP Lithium Battery Cells." *SAE Technical Paper 2013-01-1544*. doi:10.4271/2013-01-1544, 2013.
- [5] Jackey, R. "A Simple, Effective Lead-Acid Battery Modeling Process for Electrical System Component Selection." *SAE Technical Paper 2007-01-0778*. doi:10.4271/2007-01-0778, 2007.
- [6] Jackey, R., G. Plett, and M. Klein. "Parameterization of a Battery Simulation Model Using Numerical Optimization Methods." *SAE Technical Paper 2009-01-1381*. doi:10.4271/2009-01-1381, 2009.
- [7] Jackey, R., M. Saginaw, T. Huria, M. Ceraolo, P. Sanghvi, and J. Gazzarri. "Battery Model Parameter Estimation Using a Layered Technique: An Example Using a Lithium Iron Phosphate Cell." *SAE Technical Paper 2013-01-1547*. Warrendale, PA: SAE International, 2013.

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using Simulink® Coder™.

See Also

Datasheet Battery | Estimation Equivalent Circuit Battery

Topics


“Generate Parameter Data for Equivalent Circuit Battery Block”
Battery Modeling

Introduced in R2017a

Reduced Lundell Alternator

Reduced Lundell (claw-pole) alternator with an external voltage regulator

Library: Powertrain Blockset / Energy Storage and Auxiliary Drive / Alternator

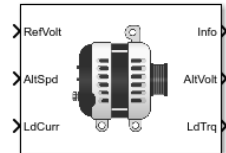

Description

The Reduced Lundell Alternator block implements a reduced Lundell (claw-pole) alternator with an external voltage regulator. The back-electromotive force (EMF) voltage is proportional to the input velocity and field current. The motor operates as a source torque to the internal combustion engine.

Use the Reduced Lundell Alternator block:

- To model an automotive electrical system
- In an engine model with a front-end accessory drive (FEAD)

The calculated motor shaft torque is in the opposite direction of the engine speed. You can:

- Tune the external voltage regulator to a desired bandwidth. The stator current and two diode drops reduce the stator voltage.
- Filter the load current to desired bandwidth. The load current has a lower saturation of 0 A.

The Reduced Lundell Alternator block implements equations for the electrical, control, and mechanical systems that use these variables.

Electrical

To calculate voltages, the block uses these equations.

Calculation	Equations
Alternator output voltage	$v_s = K_v i_f \omega - R_s i_s - 2V_d$
Field winding voltage	$v_f = R_f i_f + L_f \frac{di_f}{dt}$

Control

The controller assumes no resistance or voltage drop.

Calculation	Equations
Field winding voltage transform	$V_f(s) = R_f I_f(s) + sL_f I_f(s)$
Field winding current transform	$I_f(s) = \frac{V_f(s)}{(R_f + sL_f)}$
Open loop electrical transfer function	$G(s) = \frac{V_s(s)}{V_f(s)} = \frac{K_v \omega}{(R_f + sL_f)}$
Open loop voltage regulator transfer function	$G_C(s) = \frac{V_f(s)}{V_{ref}(s)}$
Closed loop transfer function	$T(s) = \frac{G(s)G_C(s)}{1 + G(s)G_C(s)}$
Closed loop controller design	$T(s) = \frac{1}{\tau_s + 1} \rightarrow G(s)G_C(s) = \frac{1}{\tau_s}$ $G_C(s) = K_g \left(K_p + \frac{K_i}{s} \right)$ $G(s)G_C(s) = \frac{K_v \omega}{(R_f + sL_f)} K_g \left(K_p + \frac{K_i}{s} \right)$ $K_p = L_f, K_i = R_f, \text{ and } K_g = \frac{2\pi f}{K_v \omega}$

Mechanical

To calculate torques, the block uses these equations.

Calculation	Equations
Electrical torque	$\tau_{elec} = (K_v i_f \omega) i_{load}$
Frictional torque	$\tau_{friction} = K_b \omega$
Windage torque	$\tau_{windage} = K_w \omega^2$
Torque at start	$\tau_{start} = K_c$ when $\omega = 0$
Motor shaft torque	$\tau_{mech} = \tau_{elec} + \tau_{friction} + \tau_{windage} + \tau_{start}$

Power Accounting

For the power accounting, the block implements these equations.

Bus Signal		Description	Variable	Equations	
PwrInfo	PwrTrnsfrd — Power transferred between blocks	PwrMtr	Mechanical power	P_{mot}	$P_{mot} = \omega \tau_{mech}$
	<ul style="list-style-type: none"> Positive signals indicate flow into block Negative signals indicate flow out of block 	PwrBus	Electrical power	P_{bus}	$P_{bus} = -v_s i_{load}$
	PwrNotTrnsfrd — Power crossing the block boundary, but not transferred	PwrLoss	Motor power loss	P_{loss}	$P_{loss} = -(P_{mot} + P_{bus} - P_{ind})$
	<ul style="list-style-type: none"> Positive signals indicate an input Negative signals indicate a loss 				

Bus Signal		Description	Variable	Equations	
	PwrStored — Stored energy rate of change <ul style="list-style-type: none"> • Positive signals indicate an increase • Negative signals indicate a decrease 	PwrInd	Electrical winding loss	P_{ind}	$P_{ind} = L_f i_f \frac{di_f}{dt}$

The equations use these variables.

v_{ref}	Alternator output voltage command
v_f	Field winding voltage
i_f	Field winding current
i_s	Stator winding current
V_d	Diode voltage drop
R_f	Field winding resistance
R_s	Stator winding resistance
L_f	Field winding inductance
K_v	Voltage constant
F_v	Voltage regulator bandwidth
F_c	Input current filter bandwidth
V_{fmax}	Field control voltage upper saturation limit
V_{fmin}	Field control voltage lower saturation limit
K_c	Coulomb friction coefficient
K_b	Viscous friction coefficient
K_w	Windage coefficient
ω	Motor shaft angular speed
i_{load}	Alternator load current
v_s	Alternator output voltage
τ_{mech}, T_{mech}	Motor shaft torque

Ports

Inputs

RefVolt — Alternator output voltage command

scalar

Alternator output voltage command, in V.

AltSpd — Angular speed

scalar

Motor shaft input angular speed, in rad/s.

LdCurr — Alternator load current

scalar

Alternator load current, in A.

Do not connect the port to the alternator rated current, which is a constant value. The block uses the alternator load current as the stator winding current, i_s , to determine the alternator voltage and motor torque. If you connect the port to the rated alternator current, the block does not model the dynamic effect of load current changes on the voltage and motor torque.

Output

Info — Bus signal

bus

Bus signal containing these block calculations.

Signal			Description	Units
FldVolt			Field winding voltage	A
FldFlux			Field flux	Wb
PwrInfo	PwrTrnsfrd	PwrMtr	Mechanical power	W
		PwrBus	Electrical power	W

Signal		Description	Units	
	PwrNotTrns frd	PwrLoss	Motor power loss	W
	PwrStored	PwrInd	Electrical winding loss	W

AltVolt — Alternator output voltage

scalar

Alternator output voltage, in V.

LdTrq — Motor shaft torque

scalar

Motor shaft torque, in N·m.

Parameters

Machine Configuration**Voltage constant, Kv — Constant**

scalar

Voltage constant, in V/rad/s.

Field winding resistance, Rf — Resistance

scalar

Field winding resistance, in ohm.

Field winding inductance, Lf — Inductance

scalar

Field winding inductance, in H.

Stator winding resistance, Rs — Resistance

scalar

Stator winding resistance, in ohm.

Diode voltage drop, Vd — Voltage

scalar

Diode voltage drop, in V.

Voltage Regulator

Regulator bandwidth, Fv — Bandwidth

scalar

The regulator bandwidth, in Hz.

Current filter bandwidth, Fc — Bandwidth

scalar

The current filter bandwidth, in Hz.

Field voltage max, Vfmax — Maximum field voltage

scalar

The maximum field voltage, in V.

Field voltage min, Vfmin — Minimum field voltage

scalar

The minimum field voltage, in V.

Mechanical Losses

Coulomb friction, Kc — Friction

scalar

Coulomb friction, in N·m.

Viscous friction, Kb — Friction

scalar

Viscous friction, in N·m/rad/s.

Windage, Kw — Windage

scalar

Windage, in N·m/rad²/s².

References

[1] Krause, P. C. *Analysis of Electric Machinery*. New York: McGraw-Hill, 1994.

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using Simulink® Coder™.

See Also


Starter

Introduced in R2017a

Starter

Starter as a DC motor

Library: Powertrain Blockset / Energy Storage and Auxiliary Drive / Starter



Description

The Starter block implements a starter assembly as a separately excited DC motor, permanent magnet DC motor, or series connection DC motor. The motor operates as a torque source to an internal combustion engine.

Use the Starter block:

- In an engine model with a front-end accessory drive (FEAD)
- To model engine start and stop scenarios

The Starter block supports only an angular speed input to the DC motor. A load torque input requires engine dynamics.

Separately Excited DC Motor

In a separately excited DC motor, the field winding is connected to a separate source of DC power.

The relationship between the field winding voltage, field resistance, and field inductance is given by:

$$V_f = L_f \frac{di_f}{dt} + R_f i_f$$

The counter-electromotive force is a product of the field resistance, mutual inductance, and motor shaft angular speed:

$$EMF = L_a i_f L_a f \omega$$

The armature voltage is given by:

$$V_a = L_a \frac{di_a}{dt} + R_a i_a + EMF$$

The starter motor current load is the sum of the field winding current and armature winding current:

$$i_{load} = i_f + i_a$$

The starter motor shaft torque is the product of the armature current, field current, and mutual inductance:

$$T_{mech} = i_a i_f L_{af}$$

Permanent Magnet DC Motor

In a permanent magnet DC motor, the magnets establish the excitation flux, so there is no field current.

The counter-electromotive force is proportional to the motor shaft angular speed:

$$EMF = K_t \omega$$

The armature voltage is given by:

$$V_a = L_a \frac{di_a}{dt} + R_a i_a + EMF$$

The starter motor current load is equal to the armature winding current:

$$i_{load} = i_a$$

The starter motor shaft torque is proportional to the armature winding current:

$$T_{mech} = K_t i_a$$

Series Excited DC Motor

A series excited DC motor connects the armature and field windings in series with a common DC power source.

The counter-electromotive force is a product of the field and armature initial series current, field, and armature mutual inductance and motor shaft angular speed:

$$EMF = i_{af}L_{af}\omega$$

The field and armature winding voltage is given by:

$$V_{af} = L_{ser}\frac{di_{af}}{dt} + R_{ser}i_{af} + EMF$$

The starter motor current load is equal to the field and armature series current:

$$i_{load} = i_{af}$$

The starter motor shaft torque is the product of the squared field and armature series current and the field and armature mutual inductance:

$$T_{mech} = i_{af}^2L_{af}$$

For motor stability, the motor shaft angular speed must be greater than the ratio of the series connected field and armature resistance to the mutual inductance:

$$\omega > -\frac{R_{ser}}{L_{af}}$$

Power Accounting

For the power accounting, the block implements these equations.

Bus Signal		Description	Variable	Equations	
PwrInfo	PwrTrnsfrd – Power transferred between blocks <ul style="list-style-type: none"> Positive signals indicate flow into block Negative signals indicate flow out of block 	PwrMtr	Mechanical power	$P_{mot} = -\omega T_{mech}$	
		PwrBus	Electrical power	P_{bus}	Separately excited DC motor $P_{bus} = v_a i_a + v_f i_f$
					PM excited DC motor $P_{bus} = v_a i_a$

Bus Signal		Description	Variable	Equations
				Series excited DC motor $P_{bus} = v_{af}i_{af}$
PwrNotTrnsfrd — Power crossing the block boundary, but not transferred	PwrLoss	Motor losses	P_{loss}	$P_{loss} = -(P_{mot} + P_{bus} - P_{ind})$
<ul style="list-style-type: none"> • Positive signals indicate an input • Negative signals indicate a loss 				
PwrStored — Stored energy rate of change	PwrInd	Electrical inductance	P_{ind}	Separately excited DC motor $P_{ind} = L_f i_f \frac{di_f}{dt} + L_a i_a \frac{di_a}{dt}$
<ul style="list-style-type: none"> • Positive signals indicate an increase • Negative signals indicate a decrease 				PM excited DC motor $P_{ind} = L_a i_a \frac{di_a}{dt}$
				Series excited DC motor $P_{ind} = L_{ser} i_{af} \frac{di_{af}}{dt}$

The equations use these variables.

- R_a Armature winding resistance
- L_a Armature winding inductance
- EMF Counter-electromotive force
- R_f Field winding resistance

L_f	Field winding inductance
L_{af}	Field and armature mutual inductance
i_a	Armature winding current
i_f	Field winding current
K_t	Motor torque constant
ω	Motor shaft angular speed
V_a	Armature winding voltage
V_f	Field winding voltage
V_{af}	Field and armature winding voltage
i_{af}	Field and armature series current
R_{ser}	Series connected field and armature resistance
L_{ser}	Series connected field and armature inductance
i_{load}	Starter motor current load
T_{mech}	Starter motor shaft torque

Ports

Inputs

MtrSpd — Angular speed

scalar

Motor shaft angular speed, in rad/s.

StartVolt — Armature and field voltage

scalar

- Armature winding voltage V_a and field winding voltage V_f , in V.
- In series excited DC motor, armature and field winding voltage V_{af} .

Output

Info — Bus signal

bus

Bus signal containing these block calculations.

Signal			Description	Units
ArmCurr			Armature winding current	A
FldCurr			Field winding current	A
PwrInfo	PwrTrnsfrd	PwrMtr	Mechanical power	W
		PwrBus	Electrical power	W
	PwrNotTrnsfrd	PwrLoss	Motor power loss	W
	PwrStored	PwrInd	Electrical inductance	W

LdCurr — Starter motor load current

scalar

Starter motor load current, in A.

MtrTrq — Starter motor shaft torque

scalar

Starter motor shaft torque, in N·m.

Parameters

Configuration

Motor Type — Select motor type

Separately Excited DC Motor (default) | Permanent Magnet Excited DC Motor | Series Connection DC Motor

Select one of the three motor types.

Dependencies

The table summarizes the motor parameter dependencies.

Motor Type	Enables Motor Parameter
Separately Excited DC Motor	Armature winding resistance, Ra

Motor Type	Enables Motor Parameter
	Armature winding inductance, L_a
	Field winding resistance R_f
	Field winding inductance, L_f
	Mutual inductance, L_{af}
	Initial armature and field current, I_{af}
Permanent Magnet Excited DC Motor	Armature winding resistance, R_{apm}
	Armature winding inductance, L_{apm}
	Torque constant, K_t
	Initial armature current, I_a
Series Connection DC Motor	Total resistance, R_{ser}
	Total inductance, L_{ser}
	Initial current, I_{afser}
	Mutual inductance, L_{afser}

Separately Excited DC Motor

Armature winding resistance, R_a – Resistance
scalar

Armature winding resistance, in ohm.

Dependencies

To enable this parameter, select Separately Excited DC Motor for the **Motor Type** parameter.

Armature winding inductance, L_a – Inductance
scalar

Armature winding inductance, in H.

Dependencies

To enable this parameter, select Separately Excited DC Motor for the **Motor Type** parameter.

Field winding resistance, R_f — Resistance

scalar

Field winding resistance, in ohm.

Dependencies

To enable this parameter, select Separately Excited DC Motor for the **Motor Type** parameter.

Field winding inductance, L_f — Inductance

scalar

Field winding inductance, in H.

Dependencies

To enable this parameter, select Separately Excited DC Motor for the **Motor Type** parameter.

Mutual inductance, L_{af} — Inductance

scalar

Mutual inductance, in H.

Dependencies

To enable this parameter, select Separately Excited DC Motor for the **Motor Type** parameter.

Initial armature and field current, I_{af} — Current

vector

Initial armature and field current, in A.

Dependencies

To enable this parameter, select Separately Excited DC Motor for the **Motor Type** parameter.

Permanent Magnet Excited DC Motor

Armature winding resistance, R_{apm} — Resistance

scalar

Armature winding resistance, in ohm.

Dependencies

To enable this parameter, select Permanent Magnet Excited DC Motor for the **Motor Type** parameter.

Armature winding inductance, L_{apm} – Inductance

scalar

Armature winding inductance, in H.

Dependencies

To enable this parameter, select Permanent Magnet Excited DC Motor for the **Motor Type** parameter.

Torque constant, K_t – Motor torque constant

scalar

Motor torque constant, in N·m/A.

Dependencies

To enable this parameter, select Permanent Magnet Excited DC Motor for the **Motor Type** parameter.

Initial armature current, I_a – Current

scalar

Initial armature current, in A.

Dependencies

To enable this parameter, select Permanent Magnet Excited DC Motor for the **Motor Type** parameter.

Series Excited DC Motor

Total resistance, R_{ser} – Resistance

scalar

Series connected field and armature resistance, in ohm.

Dependencies

To enable this parameter, select `Series Excited DC Motor` for the **Motor Type** parameter.

Total inductance, L_{ser} — Inductance

scalar

Series connected field and armature inductance, in H.

Dependencies

To enable this parameter, select `Series Excited DC Motor` for the **Motor Type** parameter.

Initial current, I_{fser} — Current

scalar

Initial series current, in A.

Dependencies

To enable this parameter, select `Series Excited DC Motor` for the **Motor Type** parameter.

Mutual inductance, L_{fser} — Inductance

scalar

Field and armature mutual inductance, in H.

Dependencies

To enable this parameter, select `Series Excited DC Motor` for the **Motor Type** parameter.

References

[1] Krause, P. C. *Analysis of Electric Machinery*. New York: McGraw-Hill, 1994.

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using Simulink® Coder™.

See Also


Reduced Lundell Alternator

Introduced in R2017a

Bidirectional DC-DC

DC-to-DC converter that supports bidirectional boost and buck

Library: Powertrain Blockset / Energy Storage and Auxiliary Drive / DC-DC

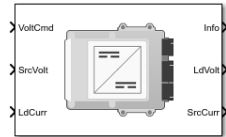

Description

The Bidirectional DC-DC block implements a DC-to-DC converter that supports bidirectional boost and buck (lower) operation. Unless the DC-to-DC conversion limits the power, the output voltage tracks the voltage command. You can specify electrical losses or measured efficiency.

Depending on your battery system configuration, the voltage might not be at a potential that is required by electrical system components such as inverters and motors. You can use the block to boost or buck the voltage. Connect the block to the battery and one of these blocks:

- Mapped Motor
- IM Controller
- Interior PM Controller
- Surface Mount PM Controller

To calculate the electrical loss during the DC-to-DC conversion, use **Parameterize losses by**.

Parameter Option	Description
Single efficiency measurement	Electrical loss calculated using a constant value for conversion efficiency.

Parameter Option	Description
Tabulated loss data	Electrical loss calculated as a function of load current and voltage. DC-to-DC converter data sheets typically provide loss data in this format. When you use this option, provide data for all the operating quadrants in which the simulation will run. If you provide partial data, the block assumes the same loss pattern for other quadrants. The block does not extrapolate loss that is outside the range voltage and current that you provide. The block allows you to account for fixed losses that are still present for zero voltage or current.
Tabulated efficiency data	Electrical loss calculated using conversion efficiency that is a function of load current and voltage. When you use this option, provide data for all the operating quadrants in which the simulation will run. If you provide partial data, the block assumes the same efficiency pattern for other quadrants. The block: <ul style="list-style-type: none"> Assumes zero loss when either the voltage or current is zero. Uses linear interpolation to determine the loss. At lower power conditions, for calculation accuracy, provide efficiency at low voltage and low current.

Note The block does not support inversion. The polarity of the input voltage matches the polarity of the output voltage.

Theory

The Bidirectional DC-DC block uses the commanded voltage and the actual voltage to determine whether to boost or buck (lower) the voltage. You can specify a time constant for the voltage response.

If	Then
$Volt_{cmd} > Src_{Volt}$	Boost
$Volt_{cmd} < Src_{Volt}$	Buck

The Bidirectional DC-DC block uses a time constant-based regulator to provide a fixed output voltage that is independent of load current. Using the output voltage and current, the block determines the losses of the DC-to-DC conversion. The block uses the conversion losses to calculate the input current. The block accounts for:

- Bidirectional current flow
 - Source to load — Battery discharge
 - Load to source — Battery charge
- Rated power limits

The block provides voltage control that is power limited based on these equations. The voltage is fixed. The block does not implement a voltage drop because the load current approximates DC-to-DC conversion with a bandwidth that is greater than the load current draw.

DC-to-DC converter load voltage	$LdVOLT_{Cmd} = \min(VOLT_{Cmd}, \frac{P_{limit}}{LdAmp}, 0)$ $LdVOLT = LdVOLT_{Cmd} \cdot \frac{1}{\tau S + 1}$
Power loss for single efficiency source to load	$Pwr_{Loss} = \frac{100 - Eff}{Eff} \cdot LdVOLT \cdot LdAmp$
Power loss for single efficiency load to source	$Pwr_{Loss} = \frac{100 - Eff}{Eff} \cdot LdVOLT \cdot LdAmp $
Power loss for tabulated efficiency	$Prw_{Loss} = f(LdVOLT, LdAmp)$
Source current draw from DC-to-DC converter	$SrcAmp = \frac{LdPwr + Prw_{Loss}}{SrcVOLT}$
Source power from DC-to-DC converter	$SrcPwr = SrcAmp \cdot SrcVOLT$

Power Accounting

For the power accounting, the block implements these equations.

Bus Signal		Description	Variable	Equations	
PwrInfo	PwrTrnsfrd — Power transferred between blocks	PwrBusSrc	Source power to DC-to-DC converter	P_{src}	$P_{src} = SrcPwr$
	<ul style="list-style-type: none"> Positive signals indicate flow into block Negative signals indicate flow out of block 	PwrBusLd	Load power from DC-to-DC converter	P_{bus}	$P_{bus} = -LdVolt$
	PwrNotTrnsfrd — Power crossing the block boundary, but not transferred	PwrLoss	Converter power loss	P_{loss}	$P_{loss} = PwrLoss$
	<ul style="list-style-type: none"> Positive signals indicate an input Negative signals indicate a loss 				
	PwrStored — Stored energy rate of change		<i>Not used</i>		
	<ul style="list-style-type: none"> Positive signals indicate an increase Negative signals indicate a decrease 				

The equations use these variables.

$Volt_{Cmd}$	DC-to-DC converter commanded output voltage
Src_{Volt}	Source input voltage to DC-to-DC converter
Ld_{Amp}	Load current of DC-to-DC converter
Ld_{Volt}	Load voltage of DC-to-DC converter
Src_{Amp}	Source current draw from DC-to-DC converter
τ	Conversion time constant
V_{init}	Initial load voltage of the DC-to-DC converter
P_{limit}	Output power limit for DC-to-DC converter
Eff	Input to output efficiency
Src_{Pwr}	Source power to DC-to-DC converter

Ld_{Pwr}	Load power from DC-to-DC converter
Pwr_{Loss}	Power loss
$LdVolt_{Cmd}$	Commanded load voltage of DC-to-DC converter before application of time constant

Ports

Inputs

VoltCmd — Commanded voltage

scalar

DC-to-DC converter commanded output voltage, $Volt_{Cmd}$, in V.

SrcVolt — Input voltage

scalar

Source input voltage to DC-to-DC converter, Src_{Volt} , in V.

LdCurr — Load current

scalar

Load current of DC-to-DC converter, Ld_{Amp} , in A.

Output

Info — Bus signal

bus

Bus signal containing these block calculations.

Signal	Description	Variable	Units
SrcPwr	Source power to DC-to-DC converter	Src_{Pwr}	W

Signal			Description	Variable	Units
LdPwr			Load power from DC-to-DC converter	Ld_{Pwr}	W
PwrLoss			Power loss	Pwr_{Loss}	W
LdVOLTcmd			Commanded load voltage of DC-to-DC converter before application of time constant	$LdVOLT_{Cmd}$	V
PwrInfo	PwrTrnsfrd	PwrBusSrc	Source power to DC-to-DC converter	P_{src}	W
		PwrBusLd	Load power from DC-to-DC converter	P_{bus}	W
	PwrNotTrnsfrd	PwrLoss	Converter power loss	P_{loss}	W
	PwrStored	<i>Not used</i>			

LdVOLT — Load voltage

scalar

Load voltage of DC-to-DC converter, Ld_{VOLT} , in V.**SrcCurr — Source current**

scalar

Source current draw from DC-to-DC converter, Src_{Amp} , in A.**Parameters****Electrical Control****Converter response time constant — Constant**

scalar

Converter response time, τ , in s.**Converter response initial voltage, Vinit — Voltage**

scalar

Initial load voltage of the DC-to-DC converter, V_{init} , in V.

Converter power limit, P_{limit} — Power
 scalar

Initial load voltage of the DC-to-DC converter, P_{limit} , in W.

Electrical Losses

Parameterize losses by — Loss calculation

Single efficiency measurement (default) | Tabulated loss data
 Tabulated efficiency data

This table summarizes the loss options used to calculate electrical options.

Parameter Option	Description
Single efficiency measurement	Electrical loss calculated using a constant value for conversion efficiency.
Tabulated loss data	Electrical loss calculated as a function of load current and voltage. DC-to-DC converter data sheets typically provide loss data in this format. When you use this option, provide data for all the operating quadrants in which the simulation will run. If you provide partial data, the block assumes the same loss pattern for other quadrants. The block does not extrapolate loss that is outside the range voltage and current that you provide. The block allows you to account for fixed losses that are still present for zero voltage or current.

Parameter Option	Description
Tabulated efficiency data	<p>Electrical loss calculated using conversion efficiency that is a function of load current and voltage. When you use this option, provide data for all the operating quadrants in which the simulation will run. If you provide partial data, the block assumes the same efficiency pattern for other quadrants. The block:</p> <ul style="list-style-type: none"> Assumes zero loss when either the voltage or current is zero. Uses linear interpolation to determine the loss. At lower power conditions, for calculation accuracy, provide efficiency at low voltage and low current.

Overall DC to DC converter efficiency, eff – Constant

scalar

Overall conversion efficiency, Eff , in %.

Dependencies

To enable this parameter, for **Parameterize losses by**, select Single efficiency measurement.

Vector of voltages (v) for tabulated loss, v_loss_bp – Breakpoints

1-by-M matrix

Tabulated loss breakpoints for M load voltages, in V.

Dependencies

To enable this parameter, for **Parameterize losses by**, select Tabulated loss data.

Vector of currents (i) for tabulated loss, i_loss_bp – Breakpoints

1-by-N matrix

Tabulated loss breakpoints for N load currents, in A.

Dependencies

To enable this parameter, for **Parameterize losses by**, select Tabulated loss data.

Corresponding losses, losses_table — 2-D lookup table

N-by-M matrix

Electrical loss map, as a function of N load currents and M load voltages, in W.

Dependencies

To enable this parameter, for **Parameterize losses by**, select Tabulated loss data.

Vector of voltages (v) for tabulated efficiency, v_eff_bp — Breakpoints

1-by-M matrix

Tabulated efficiency breakpoints for M load voltages, in V.

Dependencies

To enable this parameter, for **Parameterize losses by**, select Tabulated efficiency data.

Vector of currents (i) for tabulated efficiency, i_eff_bp — Breakpoints

1-by-N matrix

Tabulated efficiency breakpoints for N load currents, in A.

Dependencies

To enable this parameter, for **Parameterize losses by**, select Tabulated efficiency data.

Corresponding efficiency, efficiency_table — 2-D lookup table

N-by-M matrix

Electrical efficiency map, as a function of N load currents and Mload voltages, in %.

Dependencies

To enable this parameter, for **Parameterize losses by**, select Tabulated efficiency data.

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using Simulink® Coder™.

See Also

Equivalent Circuit Battery | Estimation Equivalent Circuit Battery

Topics

Battery Modeling

Introduced in R2017b

Power Accounting Bus Creator

Create power information bus

Library: Powertrain Blockset / Utilities / Power Accounting



Description

Creates a power information bus for reporting system power and energy consumption. You can associate the block to a parent system, select types of power signals to track, and add signal descriptions. If you want to generate a power and energy report, you must use this block to log the power signals in your plant model blocks. The Powertrain Blockset plant blocks use the Power Accounting Bus Creator to log the power signals. The documentation for each block includes information about the logged power bus signals.

The system-level power and energy accounting satisfies the conservation of energy.

$$\sum P_{trans} + \sum P_{nottrans} = \sum P_{store}$$

To add the Power Accounting Bus Creator to your plant block, follow these steps:

- 1 Add the Power Accounting Bus Creator block to your block.
- 2 Select the types of power signals that you want to log. See “Power Signals” on page 3-55.
- 3 Associate the Power Accounting Bus Creator with a parent subsystem. See “Block Association” on page 3-56.
- 4 Connect the power signals to the Power Accounting Bus Creator.
 - Follow the sign convention.
 - To ensure that your plant block conserves energy, include all power associated with the block.

- 5 In the Power Accounting Bus Creator:
 - On the **Transferred** power tab, specify these parameters:
 - **Associated Port**
 - **Description**
 - On the **Not Transferred** power tab, specify the **Description** parameter:
- 6 In the plant block, connect the transferred power signals to the Power Accounting Bus Creator ports that are specified with the **Associated Port** parameter.

Power Signals

The Power Accounting Bus Creator sorts the signals into three power types.

Power Type		Description	Examples
P_{trans}	Transferred	Power transferred between blocks: <ul style="list-style-type: none"> • Positive signals indicate flow into block • Negative signals indicate flow out of block 	<ul style="list-style-type: none"> • Crankshaft power transferred from mapped engine to transmission. • Road load power transferred from wheel to vehicle. • Rate of heat flow transferred from throttle to manifold volume.


Power Type		Description	Examples
$P_{nottrans}$	Not transferred	<p>Power crossing the block boundary, but not transferred:</p> <ul style="list-style-type: none"> • Positive signals indicate an input • Negative signals indicate a loss 	<ul style="list-style-type: none"> • Rate of heat transfer with the environment. <ul style="list-style-type: none"> • From environment is an input (positive signal) • To environment is a loss (negative signal) • Flow boundary with the environment. <ul style="list-style-type: none"> • From environment is an input (positive signal) • To environment is a loss (negative signal) • Mapped engine fuel flow.
P_{store}	Stored	<p>Stored energy rate of change:</p> <ul style="list-style-type: none"> • Positive signals indicate an increase • Negative signals indicate a decrease 	<p>Energy rate of change:</p> <ul style="list-style-type: none"> • Battery storage • Kinetic energy in drivetrain components • Vehicle potential energy • Vehicle velocity

Block Association

When you add the Power Accounting Bus Creator to your plant block, you associate the signals to a parent block. There are two association methods.

Method	Description	Example
Parent	Power Accounting Bus Creator associates the power bus signals with the parent block.	<p>In the conventional vehicle reference application, navigate to the Passenger Car > Engine > SiMappedEngine > Accessory Load Model plant subsystem. Open the Power Accounting Bus Creator.</p> <p>The Associated block parameter is set to Parent, so the Power Accounting Bus Creator associates the power signals with the Accessory Load Model plant subsystem.</p>

Method	Description	Example
		<p> </p>

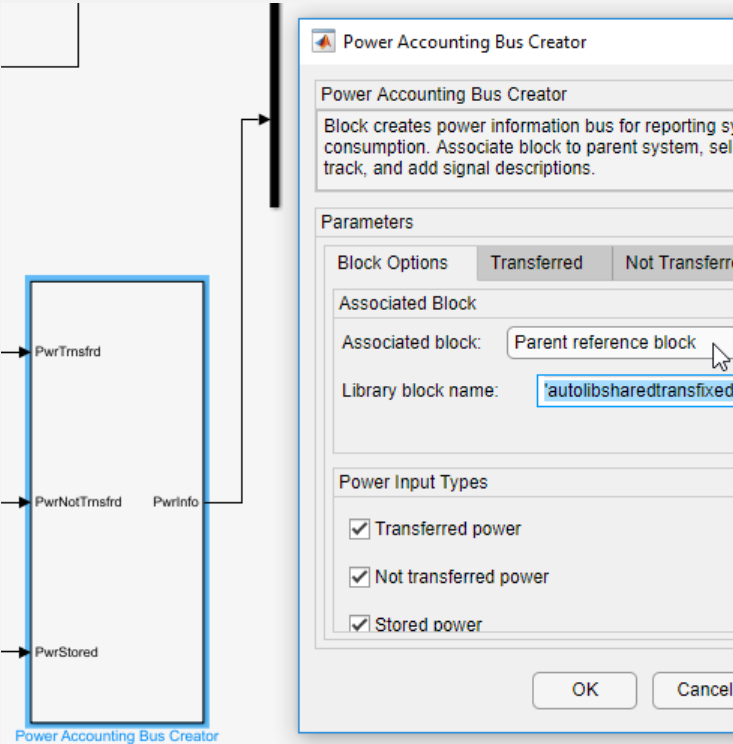Method	Description	Example
<p>Parent reference block</p>	<p>Power Accounting Bus Creator associates the power bus signals with a reference block.</p> <p>Use the Library block name parameter to specify the block.</p>	<p>In the Ideal Fixed Gear Transmission block, navigate to the Bus Creation subsystem. Open the Power Accounting Bus Creator.</p> <p>The Power Accounting Bus Creator block uses these parameter settings to associate the power signals to the Ideal Fixed Gear Transmission block.</p> <ul style="list-style-type: none"> • Associated block parameter is set to Parent reference block. • Library block name parameter is set to 'autolibsharedtransfixedgear/Ideal Fixed Gear Transmission'.  <p>The diagram shows a block named 'Power Accounting Bus Creator' with four input ports: PwrTmsfrd, PwrNotTmsfrd, PwrInfo, and PwrStored. An arrow points from the PwrInfo port to a dialog box titled 'Power Accounting Bus Creator'. The dialog box has the following parameters:</p> <ul style="list-style-type: none"> Block Options: Transferred, Not Transferred, Stored Associated Block: Parent reference block Library block name: autolibsharedtransfixedgear/Ideal Fixed G Power Input Types: <ul style="list-style-type: none"> <input checked="" type="checkbox"/> Transferred power <input checked="" type="checkbox"/> Not transferred power <input checked="" type="checkbox"/> Stored power <p>Buttons: OK, Cancel, Help</p>

Ports

Input

PwrTrnsfrd — Power transferred between blocks

bus

PwrTrnsfrd — Power transferred between blocks

- Positive signals indicate flow into block
- Negative signals indicate flow out of block

Dependencies

To create this input port, select **Transferred power**.

PwrNotTrnsfrd — Power crossing block boundary, not transferred

bus

PwrNotTrnsfrd — Power crossing the block boundary, but not transferred

- Positive signals indicate an input
- Negative signals indicate a loss

Dependencies

To create this input port, select **Not transferred power**.

PwrStored — Stored energy rate of change

bus

PwrStored — Stored energy rate of change

- Positive signals indicate an increase
- Negative signals indicate a decrease

Dependencies

To create this input port, select **Stored power**.

Output

PwrInfo — Power information bus

bus

Power information bus

Parameters

Block Options


Associated block — Associated block

Parent (default) | Parent reference block

When you add the Power Accounting Bus Creator to your plant block, you associate the signals to a parent block. There are two association methods.

Method	Description	Example
Parent	Power Accounting Bus Creator associates the power bus signals with the parent block.	<p>In the conventional vehicle reference application, navigate to the Passenger Car > Engine > SiMappedEngine > Accessory Load Model plant subsystem. Open the Power Accounting Bus Creator.</p> <p>The Associated block parameter is set to Parent, so the Power Accounting Bus Creator associates the power signals with the Accessory Load Model plant subsystem.</p>

Method	Description	Example
		<p> </p> <p> The example shows a Simulink model for a passenger car engine. A 'Net Torque' block (num(s)/den(s)) is connected to a 'Lumped Torque Dynam...' block. The output of the torque block is multiplied by a gain of 1/30 (rpm to rad/s) and then by a gain of -1. The resulting signal is split into three paths, each multiplied by a gain of 1 (Unit:W), to produce 'PwrEngIn', 'PwrEngOut', and 'PwrAccsryLoad' signals. These signals are connected to a 'Power Accounting Bus Creator' block, which outputs 'PwrTrnsfrd' and 'PwrNotTrnsfrd' signals. </p> <p> The 'Power Accounting Bus Creator' dialog box is shown with the following parameters: </p> <ul style="list-style-type: none"> Block Options: Transferred (selected), Not Transferred Associated Block: Parent Power Input Types: <input checked="" type="checkbox"/> Transferred power

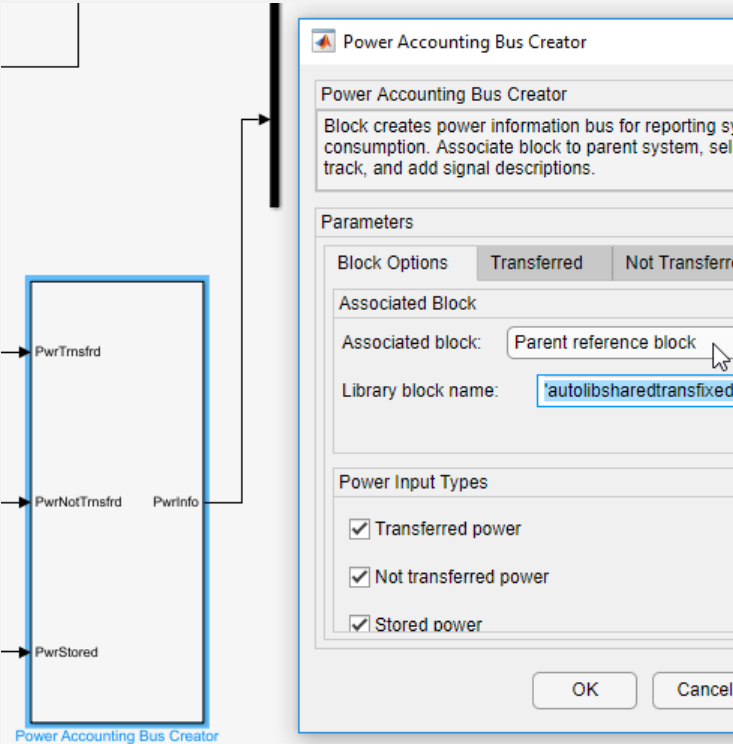Method	Description	Example
<p>Parent reference block</p>	<p>Power Accounting Bus Creator associates the power bus signals with a reference block.</p> <p>Use the Library block name parameter to specify the block.</p>	<p>In the Ideal Fixed Gear Transmission block, navigate to the Bus Creation subsystem. Open the Power Accounting Bus Creator.</p> <p>The Power Accounting Bus Creator block uses these parameter settings to associate the power signals to the Ideal Fixed Gear Transmission block.</p> <ul style="list-style-type: none"> • Associated block parameter is set to Parent reference block. • Library block name parameter is set to 'autolibsharedtransfixedgear/Ideal Fixed Gear Transmission'. 

Library block name — Block name

Block name

Dependencies

To create this parameter, set **Associated block** to Parent reference block.

Power Input Types**Transferred power — Power transferred between blocks**

on (default) | off

Power transferred between blocks.

Dependencies

Selecting this parameter creates the:

- PwrTrnsfrd input port
- **Transferred** parameters

Not transferred power — Power crossing block boundary

on (default) | off

Power crossing block boundary, but not transferred.

Dependencies

Selecting this parameter creates the:

- PwrNotTrnsfrd input port
- **Not Transferred** parameters

Stored power — Stored energy rate of change

on (default) | off

Stored energy rate of change.

Dependencies

Selecting this parameter creates the:

- PwrStored input port

- **Stored** parameters

Transferred

Signal name — Name of signal

char

Signal name.

For example, this table summarizes the Power Accounting Bus Creator parameter **Transferred** parameter values for the listed blocks.

Block	Power Accounting Bus Creator Parameter Values		
	Signal Name	Associated Port	Description
Ideal Fixed Gear Transmission	PwrTrnsfrd.PwrDiffrentl	{'DiffTrq', 'DiffSpd'}	Differential
	PwrTrnsfrd.PwrEng	{'EngTrq', 'EngSpd'}	Engine
Gear box	PwrTrnsfrd.PwrBase	{{'BTrq', 'BSpd'}'B'}	Base input
	PwrTrnsfrd.PwrFlwr	{{'FTrq', 'FSpd'}'F'}	Follower output
Boost Drive Shaft	PwrTrnsfrd.PwrCmps	'Cmps'	Compressor
	PwrTrnsfrd.PwrExt	'ExtTrq'	External
	PwrTrnsfrd.Turb	'Turb'	Turbine

Associated Port — Name of ports that transfer power

{'PortA', 'PortB', 'PortC'}

Name of ports that transfer power.

For example, this table summarizes the Power Accounting Bus Creator parameter **Transferred** parameter values for the listed blocks.

Block	Power Accounting Bus Creator Parameter Values		
	Signal Name	Associated Port	Description
Ideal Fixed Gear Transmission	PwrTrnsfrd.PwrDiffrentl	{'DiffTrq', 'DiffSpd'}	Differential
	PwrTrnsfrd.PwrEng	{'EngTrq', 'EngSpd'}	Engine
Gear box	PwrTrnsfrd.PwrBase	{{'BTrq', 'BSpd'}'B'}	Base input
	PwrTrnsfrd.PwrFlwr	{{'FTrq', 'FSpd'}'F'}	Follower output
Boost Drive Shaft	PwrTrnsfrd.PwrCmps	'Cmps'	Compressor
	PwrTrnsfrd.PwrExt	'ExtTrq'	External
	PwrTrnsfrd.Turb	'Turb'	Turbine

Description – Signal description

char

Signal description.

For example, this table summarizes the Power Accounting Bus Creator parameter **Transferred** parameter values for the listed blocks.

Block	Power Accounting Bus Creator Parameter Values		
	Signal Name	Associated Port	Description
Ideal Fixed Gear Transmission	PwrTrnsfrd.PwrDiffrentl	{'DiffTrq', 'DiffSpd'}	Differential
	PwrTrnsfrd.PwrEng	{'EngTrq', 'EngSpd'}	Engine
Gear box	PwrTrnsfrd.PwrBase	{{'BTrq', 'BSpd'}'B'}	Base input

Block	Power Accounting Bus Creator Parameter Values		
	Signal Name	Associated Port	Description
	PwrTrnsfrd.PwrFlwr	{{ 'FTrq' , 'FSpd' } 'F' }	Follower output
Boost Drive Shaft	PwrTrnsfrd.PwrCmpsr	'Cmpsr'	Compressor
	PwrTrnsfrd.PwrExt	'ExtTrq'	External
	PwrTrnsfrd.Turb	'Turb'	Turbine

Not Transferred

Signal name — Name of signal

char

Signal name.

For example, this table summarizes the Power Accounting Bus Creator parameter **Not Transferred** parameter values for the listed blocks.

Block	Power Accounting Bus Creator Parameter Values	
	Signal Name	Description
Ideal Fixed Gear Transmission	PwrNotTrnsfrd.PwrDampLoss	Damping loss
	PwrNotTrnsfrd.PwrEffLoss	Efficiency loss
Gearbox	PwrNotTrnsfrd.PwrDampLoss	Damping loss
	PwrNotTrnsfrd.PwrMechLoss	Mechanical loss
Boost Drive Shaft	PwrNotTrnsfrd.PwrMechLoss	Mechanical loss

Description — Signal description

char

Signal description.

For example, this table summarizes the Power Accounting Bus Creator parameter **Not Transferred** parameter values for the listed blocks.

Block	Power Accounting Bus Creator Parameter Values	
	Signal Name	Description
Ideal Fixed Gear Transmission	PwrNotTrnsfrd.PwrDampLoss	Damping loss
	PwrNotTrnsfrd.PwrEffLoss	Efficiency loss
Gearbox	PwrNotTrnsfrd.PwrDampLoss	Damping loss
	PwrNotTrnsfrd.PwrMechLoss	Mechanical loss
Boost Drive Shaft	PwrNotTrnsfrd.PwrMechLoss	Mechanical loss

Stored

Signal name — Name of signal

char

Signal name.

For example, this table summarizes the Power Accounting Bus Creator parameter **Stored** parameter values for the listed blocks.

Block	Power Accounting Bus Creator Parameter Values	
	Signal Name	Description
Ideal Fixed Gear Transmission	PwrStored.PwrStoredTrans	Rotational
Control Volume System	PwrStored.PwrHeatStored	Stored heat

Block	Power Accounting Bus Creator Parameter Values	
	Signal Name	Description
Datasheet Battery	PwrStored.PwrStoredBatt	Battery stored

Description — Signal description

char

Signal description.

For example, this table summarizes the Power Accounting Bus Creator parameter **Stored** parameter values for the listed blocks.

Block	Power Accounting Bus Creator Parameter Values	
	Signal Name	Description
Ideal Fixed Gear Transmission	PwrStored.PwrStoredTrans	Rotational
Control Volume System	PwrStored.PwrHeatStored	Stored heat
Datasheet Battery	PwrStored.PwrStoredBatt	Battery stored

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using Simulink® Coder™.

See Also

autoblks.pwr.PlantInfo

Topics

“Conventional Vehicle Powertrain Efficiency”

“Analyze Power and Energy”

Introduced in R2019a

Propulsion Blocks — Alphabetical List

Boost Drive Shaft

Boost drive shaft speed

Library: Powertrain Blockset / Propulsion / Combustion Engine
Components / Boost



Description

The Boost Drive Shaft block uses the compressor, turbine, and external torques to calculate the drive shaft speed. Use the block to model turbochargers and superchargers in an engine model.

You can specify these configurations:

- Turbocharger — Connect the compressor to the turbine
 - Two-way ports for turbine and compressor connections
 - Option to add an externally applied input torque
- Compressor only — Connect the drive shaft to the compressor
 - Two-way port for compressor connection
 - Externally applied input torque
- Turbine only — Connect the drive shaft to the turbine
 - Two-way port for turbine connection
 - Externally applied load torque

For the **Turbine only** and **Turbocharger** configurations, the block modifies the turbine torque with a mechanical efficiency.

Equations

The Boost Drive Shaft block applies Newton's Second Law for Rotation. Positive torques cause the drive shaft to accelerate. Negative torques impose a load and decelerate the drive shaft.

The block also calculates the power loss due to mechanical inefficiency.

Calculation	Equations
Shaft dynamics	$\frac{d\omega}{dt} = \frac{1}{J_{shaft}}(\eta_{mech}\tau_{turb} + \tau_{comp} + \tau_{ext})$ with initial speed ω_0
Speed constraint	$\omega_{min} \leq \omega \leq \omega_{max}$
Power loss	$\dot{W}_{loss} = \omega\tau_{turb}(1 - \eta_{mech})$

Power Accounting

For the power accounting, the block implements these equations.

Bus Signal		Description	Equations
PwrIn fo	PwrTrnsfrd — Power transferred between blocks <ul style="list-style-type: none"> • Positive signals indicate flow into block • Negative signals indicate flow out of block 	PwrCmpr	Shaft power from compressor $\tau_{comp}\omega$
		PwrTurb	Shaft power from turbine $\tau_{turb}\omega$
		PwrExt	Externally applied power $\tau_{ext}\omega$
	PwrNotTrnsfrd — Power crossing the block boundary, but not transferred <ul style="list-style-type: none"> • Positive signals indicate an input • Negative signals indicate a loss 	PwrMechLoss	Mechanical power loss $-\dot{W}_{turb}$
	PwrStored — Stored energy rate of change <ul style="list-style-type: none"> • Positive signals indicate an increase • Negative signals indicate a decrease 	PwrStoredDrives hft	Rate change in rotational kinetic energy $(\eta_{mech}\tau_{turb} + \tau_{comp} + \tau_{ext})\omega$

The equations use these variables.

ω	Shaft speed
ω_0	Initial drive shaft speed
ω_{min}	Minimum drive shaft speed
ω_{max}	Maximum drive shaft speed
J_{shaft}	Shaft inertia
η_{max}	Mechanical efficiency of turbine
τ_{comp}	Compressor torque
τ_{turb}	Turbine torque
τ_{ext}	Externally applied torque.
\dot{W}_{loss}	Power loss due to mechanical inefficiency

Ports

Input

Cmprs — Compressor torque

two-way connector port

Compressor torque, τ_{comp} , in N·m.

Dependencies

To create this port, for the **Configuration** parameter, select Turbocharger or Compressor only.

Turb — Turbine torque

two-way connector port

Turbine torque, τ_{turb} , in N·m.

Dependencies

To create this port, for the **Configuration** parameter, select Turbocharger or Turbine only.

ExtTrq — Externally applied torque

scalar

Externally applied torque, τ_{ext} , in N·m.

Dependencies

For turbocharger configurations, to create this port, set **Additional torque input** to External torque input.

Output**Info — Bus signal**

bus

Bus signal containing these block calculations.

Signal			Description	Units
DriveshftSpd			Shaft speed	rad/s
MechPwrLoss			Mechanical power loss	W
ExtTrq			Applied external torque	N·m
PwrInfo	PwrTrnsfrd	PwrCmprs	Shaft power from compressor	W
		PwrTurb	Shaft power from turbine	W
		PwrExt	Externally applied power	W
	PwrNotTrnsfrd	PwrMechLoss	Mechanical power loss	W
	PwrStored	PwrStoredDriveshft	Rate change in rotational kinetic energy	W

Cmprs — Compressor speed

two-way connector port

Compressor speed, ω , in rad/s.

Dependencies

To create this port, for the **Configuration** parameter, select Turbocharger or Compressor only.

Turb — Turbine speed

two-way connector port

Turbine speed, ω , in N·m.

Dependencies

To create this port, for the **Configuration** parameter, select Turbocharger or Turbine only.

Parameters

Block Options

Configuration — Specify configuration

Turbocharger (default) | Turbine only | Compressor only

Dependencies

- Selecting Turbocharger or Compressor only creates the Cmprs port.
- Selecting Turbocharger or Turbine only creates the Turb port.

Additional torque input — Specify external torque input

External torque input (default) | No external torque input

Dependencies

- To enable this parameter, select a Turbocharger configuration.
- To create the Trq port, select External torque input.

Shaft inertia, J_shaft — Inertia

scalar

Shaft inertia, J_{shaft} , in $\text{kg}\cdot\text{m}^2$.

Initial shaft speed, w_0 — Speed

scalar

Initial drive shaft speed, ω_0 , in rad/s.

Min shaft speed, w_min — Speed

scalar

Minimum drive shaft speed, ω_{min} , in rad/s.

Max shaft speed, w_max – Speed
scalar

Maximum drive shaft speed, ω_{max} , in rad/s.

Turbine mechanical efficiency, eta_mech – Efficiency
scalar

Mechanical efficiency of turbine η_{max} .

Dependencies

To enable this parameter, select the Turbocharger or Turbine only configuration.

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using Simulink® Coder™.

See Also


Compressor | Turbine

Introduced in R2017a

CI Controller

Compression-ignition controller that includes air mass flow, torque, and EGR estimation

Library: Powertrain Blockset / Propulsion / Combustion Engine Controllers

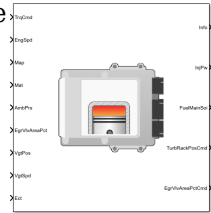

Description

The CI Controller block implements a compression-ignition (CI) controller with air mass flow, torque, exhaust gas recirculation (EGR) flow, exhaust back-pressure, and exhaust gas temperature estimation. You can use the CI Controller block in engine control design or performance, fuel economy, and emission tradeoff studies. The core engine block requires the commands that are output from the CI Controller block.

The block uses the commanded torque and measured engine speed to determine these open-loop actuator commands:

- Injector pulse-width
- Fuel injection timing
- Variable geometry turbocharger (VGT) rack position
- EGR valve area percent

The CI Controller block has two subsystems:


- The **Controller** subsystem — Determines the commands based on tables that are functions of commanded torque and measured engine speed.

Based On	Determines Commands for
Commanded torque	Injector pulse-width
Measured engine speed	Fuel injection timing
	VGT rack position
	EGR valve area percent

- The Estimator subsystem — Determines estimates based on these engine attributes.

Based On	Estimates
Measured engine speed	Air mass flow
Fuel injection timing	Torque
Cycle average intake manifold pressure and temperature	Exhaust gas temperature
Fuel injector pulse-width	Exhaust gas back-pressure
Absolute ambient pressure	EGR valve gas mass flow
EGR valve area percent	
VGT rack position	
VGT speed	

The figure illustrates the signal flow.

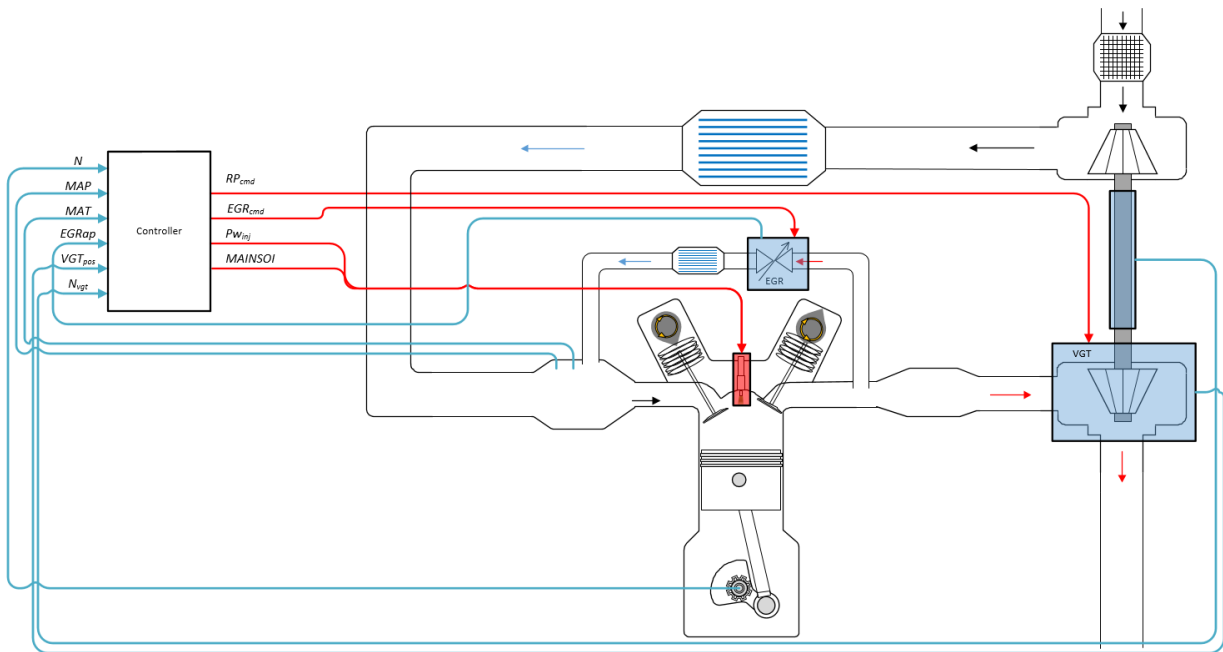

The figure uses these variables.

N	Engine speed
MAP	Cycle average intake manifold absolute pressure
MAT	Cycle average intake manifold gas absolute temperature
EGR_{ap} , EGR_{cmd}	EGR valve area percent and EGR valve area percent command, respectively
VGT_{pos}	VGT rack position
N_{vgt}	Corrected turbocharger speed
RP_{cmd}	VGT rack position command
Pw_{inj}	Fuel injector pulse-width
$MAINSOI$	Start of injection timing for main fuel injection pulse

The Model-Based Calibration Toolbox™ was used to develop the tables that are available with the Powertrain Blockset.

Controller

The controller governs the combustion process by commanding VGT rack position, EGR valve area percent, fuel injection timing, and injector pulse-width. Feedforward lookup tables, which are functions of measured engine speed and commanded torque, determine the control commands.

Air


The controller commands the EGR valve area percent and VGT rack position. Changing the VGT rack position modifies the turbine flow characteristics. At low-requested torques, the rack position can reduce the exhaust back pressure, resulting in a low turbocharger speed and boost pressure. When the commanded fuel requires additional air mass flow, the rack position is set to close the turbocharger vanes, increasing the turbocharger speed and intake manifold boost pressure.

The variable geometry turbocharger (VGT) rack position lookup table is a function of commanded torque and engine speed

$$RP_{cmd} = f_{RPcmd}(Trq_{cmd}, N)$$

where:

- RP_{cmd} is VGT rack position command, in percent.
- Trq_{cmd} is commanded engine torque, in N·m.
- N is engine speed, in rpm.

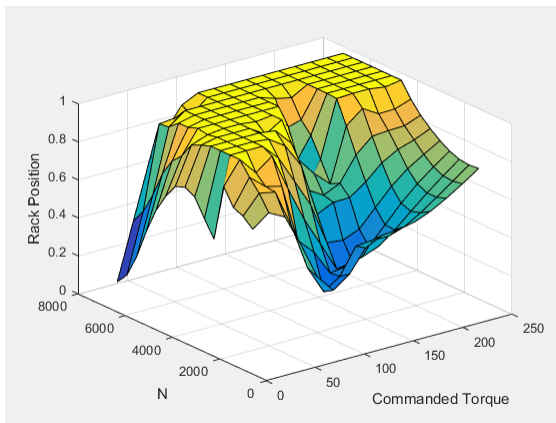


The commanded exhaust gas recirculation (EGR) valve area percent lookup table is a function of commanded torque and engine speed

$$EGR_{cmd} = f_{EGRcmd}(Trq_{cmd}, N)$$

where:

- EGR_{cmd} is commanded EGR valve area percent, in percent.
- Trq_{cmd} is commanded engine torque, in N·m.
- N is engine speed, in rpm.

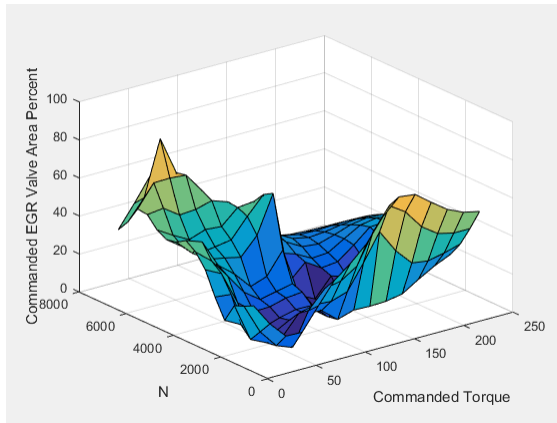

Fuel

To initiate combustion, a CI engine injects fuel directly into the combustion chamber. After the injection, the fuel spontaneously ignites, increasing cylinder pressure. The total mass of the injected fuel and main injection timing determines the torque production.

Assuming constant fuel rail pressure, the CI controller commands the injector pulse-width based on the total requested fuel mass:

$$Pw_{inj} = \frac{F_{cmd, tot}}{S_{inj}}$$

The equation uses these variables.

Pw_{inj} Fuel injector pulse-width


S_{inj}	Fuel injector slope
$F_{cmd,tot}$	Commanded total fuel mass per injection
$MAINSOI$	Main start-of-injection timing
N	Engine speed

The commanded total fuel mass per injection table is a function of the torque command and engine speed

$$F_{cmd,tot} = f_{F_{cmd,tot}}(Trq_{cmd}, N)$$

where:

- $F_{cmd,tot} = F$ is commanded total fuel mass per injection, in mg per cylinder.
- Trq_{cmd} is commanded engine torque, in N·m.
- N is engine speed, in rpm.

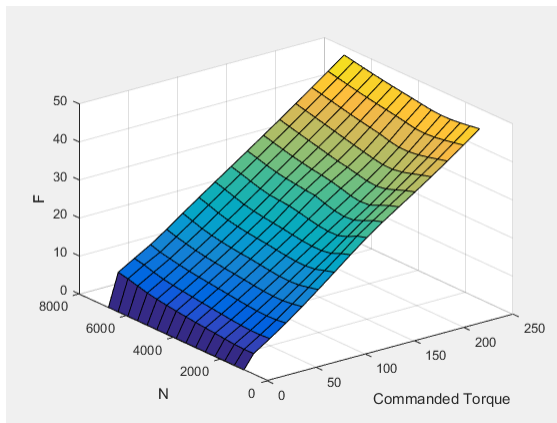


The main start-of-injection (SOI) timing lookup table is a function of commanded fuel mass and engine speed

$$MAINSOI = f(F_{cmd,tot}, N)$$

where:

- $MAINSOI$ is the main start-of-injection timing, in degrees crank angle after top dead center (degATDC).

- $F_{cmd,tot} = F$ is commanded fuel mass, in mg per injection.
- N is engine speed, in rpm.

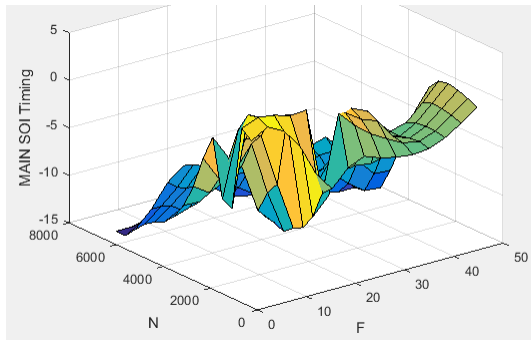

Idle Speed

When the commanded torque is below a threshold value, the idle speed controller regulates the engine speed.

If	Idle Speed Controller
$Trq_{cmd,input} < Trq_{idlecmd,enable}$	Enabled
$Trq_{idlecmd,enable} \leq Trq_{cmd,input}$	Not enabled

The idle speed controller uses a discrete PI controller to regulate the target idle speed by commanding a torque.

The PI controller uses this transfer function:

$$C_{idle}(z) = K_{p, idle} + K_{i, idle} \frac{t_s}{z-1}$$

The idle speed commanded torque must be less than the maximum commanded torque:

$$0 \leq Trq_{idlecmd} \leq Trq_{idlecmd,max}$$

Idle speed control is active under these conditions. If the commanded input torque drops below the threshold for enabling the idle speed controller ($Trq_{cmd,input} < Trq_{idlecmd,enable}$), the commanded engine torque is given by:

$$Trq_{cmd} = \max(Trq_{cmd,input}, Trq_{idlecmd}).$$

The equations use these variables.

Trq_{cmd}	Commanded engine torque
$Trq_{cmd,input}$	Input commanded engine torque
$Trq_{idlecmd,enable}$	Threshold for enabling idle speed controller
$Trq_{idlecmd}$	Idle speed controller commanded torque
$Trq_{idlecmd,max}$	Maximum commanded torque
N_{idle}	Base idle speed
$K_{p,idle}$	Idle speed controller proportional gain
$K_{i,idle}$	Idle speed controller integral gain

Speed Limiter

To prevent over revving the engine, the block implements an engine speed limit controller that limits the engine speed to the value specified by the **Rev-limiter speed threshold** parameter on the **Controls > Idle Speed** tab.

If the engine speed, N , exceeds the engine speed limit, N_{lim} , the block sets the commanded engine torque to 0.

To smoothly transition the torque command to 0 as the engine speed approaches the speed limit, the block implements a lookup table multiplier. The lookup table multiplies the torque command by a value that ranges from 0 (engine speed exceeds limit) to 1 (engine speed does not exceed the limit).

Estimator

Using the CI Core Engine block, the CI Controller block estimates the air mass flow rate, EGR valve mass flow, exhaust back-pressure, engine torque, AFR, and exhaust temperature from sensor feedback. The **Info** port provides the estimated values, but block does not use them to determine the open-loop engine actuator commands.

Air Mass Flow

To calculate the air mass flow, the compression-ignition (CI) engine uses the “CI Engine Speed-Density Air Mass Flow Model”. The speed-density model uses the speed-density equation to calculate the engine air mass flow, relating the engine intake port mass flow to the intake manifold pressure, intake manifold temperature, and engine speed.

EGR Valve Mass Flow

To calculate the estimated exhaust gas recirculation (EGR) valve mass flow, the block calculates the EGR flow that would occur at standard temperature and pressure conditions, and then corrects the flow to actual temperature and pressure conditions. The block EGR calculation uses estimated exhaust back-pressure, estimated exhaust temperature, standard temperature, and standard pressure.


$$\dot{m}_{egr, est} = \dot{m}_{egr, std} \frac{P_{exh, est}}{P_{std}} \sqrt{\frac{T_{std}}{T_{exh, est}}}$$

- The standard exhaust gas recirculation (EGR) mass flow is a lookup table that is a function of the standard flow pressure ratio and EGR valve flow area

$$\dot{m}_{egr, std} = f\left(\frac{MAP}{P_{exh, est}}, EGRap\right)$$

where:

- $\dot{m}_{egr, std}$ is the standard EGR valve mass flow, in g/s.
- $P_{exh, est}$ is the estimated exhaust back-pressure, in Pa.
- MAP is the cycle average intake manifold absolute pressure, in Pa.
- $EGRap$ is the measured EGR valve area, in percent.

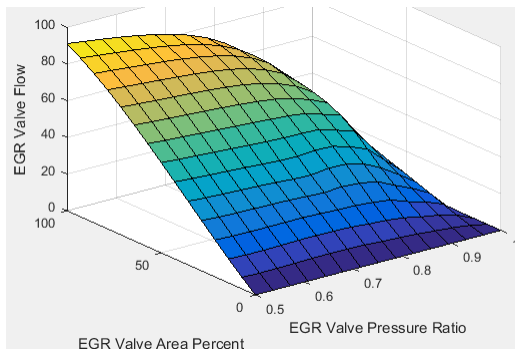

The equations use these variables.

$\dot{m}_{egr, est}$ Estimated EGR valve mass flow

$\dot{m}_{egr, std}$	Standard EGR valve mass flow
P_{std}	Standard pressure
T_{std}	Standard temperature
$T_{exh, est}$	Estimated exhaust manifold gas temperature
MAP	Measured cycle average intake manifold absolute pressure
$P_{exh, est}$	Estimated exhaust back-pressure
P_{Amb}	Absolute ambient pressure
EGR_{ap}	Measured EGR valve area percent

Exhaust Back-Pressure

To estimate the EGR valve mass flow, the block requires an estimate of the exhaust back-pressure. To estimate the exhaust back-pressure, the block uses the ambient pressure and the turbocharger pressure ratio.

$$P_{exh, est} = P_{Amb} Pr_{turbo}$$

For the turbocharger pressure ration calculation, the block uses two lookup tables. The first lookup table determines the approximate turbocharger pressure ratio as a function of turbocharger mass flow and corrected turbocharger speed. Using a second lookup table, the block corrects the approximate turbocharger pressure ratio for VGT rack position.

$$Pr_{turbo} = f(\dot{m}_{airstd}, N_{vgtcorr})f(VGT_{pos})$$

where:

$$N_{vgtcorr} = \frac{N_{vgt}}{\sqrt{T_{exh, est}}}$$


The equations use these variables.

$\dot{m}_{egr, est}$	Estimated EGR valve mass flow
$\dot{m}_{egr, std}$	Standard EGR valve mass flow
$\dot{m}_{port, est}$	Estimated intake port mass flow rate
\dot{m}_{airstd}	Standard air mass flow

EGR_{ap}	Measured EGR valve area
MAP	Measured cycle average intake manifold absolute pressure
MAT	Measured cycle average intake manifold gas absolute temperature
P_{std}	Standard pressure
T_{std}	Standard temperature
$T_{exh,est}$	Estimated exhaust manifold gas temperature
Pr_{vgtcrr}	Turbocharger pressure ratio correction for VGT rack position
Pr_{turbo}	Turbocharger pressure ratio
$P_{exh,est}$	Estimated exhaust back-pressure
P_{Amb}	Absolute ambient pressure
N_{vgtcrr}	Corrected turbocharger speed
VGT_{pos}	Measured VGT rack position

The exhaust-back pressure calculation uses these lookup tables:


- The turbocharger pressure ratio, corrected for variable geometry turbocharger (VGT) speed, is a lookup table that is a function of the standard air mass flow and corrected turbocharger speed, $Pr_{turbo} = f(\dot{m}_{airstd}, N_{vgtcrr})$, where:
 - Pr_{turbo} is the turbocharger pressure ratio, corrected for VGT speed.
 - \dot{m}_{airstd} is the standard air mass flow, in g/s.
 - N_{vgtcrr} is the corrected turbocharger speed, in rpm/K^(1/2).

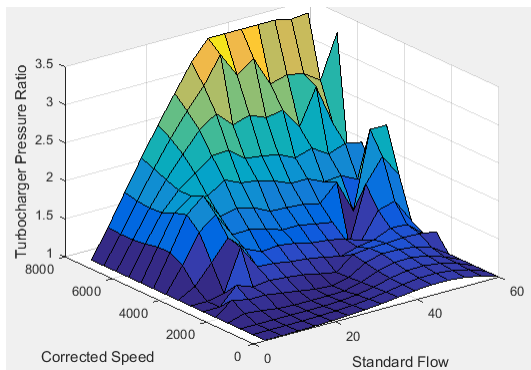

To calculate the standard air mass flow through the turbocharger, the block uses conservation of mass, the estimated intake port, and EGR mass flows (from the last estimated calculation). The calculation assumes negligible exhaust manifold filling dynamics.

$$\dot{m}_{airstd} = (\dot{m}_{port, est} - \dot{m}_{egr, est}) \frac{P_{std}}{MAP} \sqrt{\frac{MAT}{T_{std}}}$$

- The variable geometry turbocharger pressure ratio correction is a function of the rack position, $Pr_{vgtcorr} = f(VGT_{pos})$, where:
 - $Pr_{vgtcorr}$ is the turbocharger pressure ratio correction.
 - VGT_{pos} is the variable geometry turbocharger (VGT) rack position.

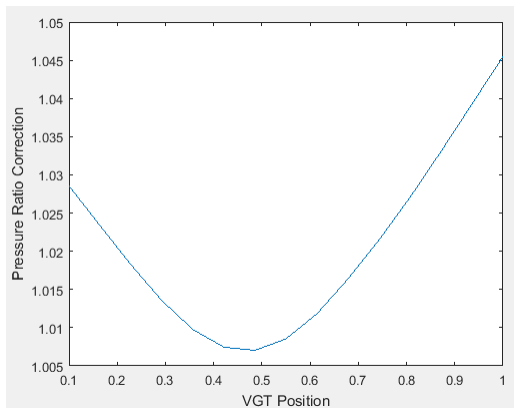

Engine Torque

To calculate the engine torque, you can configure the block to use either of these torque models.

Brake Torque Model	Description
“CI Engine Torque Structure Model”	<p>The CI core engine torque structure model determines the engine torque by reducing the maximum engine torque potential as these engine conditions vary from nominal:</p> <ul style="list-style-type: none"> • Start of injection (SOI) timing • Exhaust back-pressure • Burned fuel mass • Intake manifold gas pressure, temperature, and oxygen percentage • Fuel rail pressure <p>To account for the effect of post-inject fuel on torque, the model uses a calibrated torque offset table.</p>
“CI Engine Simple Torque Model”	<p>For the simple engine torque calculation, the CI engine uses a torque lookup table map that is a function of engine speed and injected fuel mass.</p>

Exhaust Temperature

The exhaust temperature calculation depends on the torque model. For both torque models, the block implements lookup tables.

Torque Model	Description	Equations
Simple Torque Lookup	Exhaust temperature lookup table is a function of the injected fuel mass and engine speed.	$T_{exh} = f_{T_{exh}}(F, N)$

Torque Model	Description	Equations
Torque Structure	<p>The nominal exhaust temperature, $T_{exh_{nom}}$, is a product of these exhaust temperature efficiencies:</p> <ul style="list-style-type: none"> • SOI timing • Intake manifold gas pressure • Intake manifold gas temperature • Intake manifold gas oxygen percentage • Fuel rail pressure • Optimal temperature <p>The exhaust temperature, $T_{exh_{nom}}$, is offset by a post temperature effect, ΔT_{post}, that accounts for post and late injections during the expansion and exhaust strokes.</p>	$T_{exh_{nom}} = SOI_{exhteff} MAP_{exhteff} MAT_{exhteff} O2p_{exhteff}$ $T_{exh} = T_{exh_{nom}} + \Delta T_{post}$ $SOI_{exhteff} = f_{SOI_{exhteff}}(\Delta SOI, N)$ $MAP_{exhteff} = f_{MAP_{exhteff}}(MAP_{ratio}, \lambda)$ $MAT_{exhteff} = f_{MAT_{exhteff}}(\Delta MAT, N)$ $O2p_{exhteff} = f_{O2p_{exhteff}}(\Delta O2p, N)$ $T_{exh_{opt}} = f_{T_{exh}}(F, N)$

The equations use these variables.

F	Compression stroke injected fuel mass
N	Engine speed
T_{exh}	Exhaust manifold gas temperature
$T_{exh_{opt}}$	Optimal exhaust manifold gas temperature
ΔT_{post}	Post injection temperature effect
$T_{exh_{nom}}$	Nominal exhaust temperature
$SOI_{exhteff}$	Main SOI exhaust temperature efficiency multiplier
ΔSOI	Main SOI timing relative to optimal timing
$MAP_{exhteff}$	Intake manifold gas pressure exhaust temperature efficiency multiplier
MAP_{ratio}	Intake manifold gas pressure ratio relative to optimal pressure ratio

λ	Intake manifold gas lambda
MAT_{exheff}	Intake manifold gas temperature exhaust temperature efficiency multiplier
ΔMAT	Intake manifold gas temperature relative to optimal temperature
$O2P_{exheff}$	Intake manifold gas oxygen exhaust temperature efficiency multiplier
$\Delta O2P$	Intake gas oxygen percent relative to optimal
$FUELP_{exheff}$	Fuel rail pressure exhaust temperature efficiency multiplier
$\Delta FUELP$	Fuel rail pressure relative to optimal

Air-Fuel Ratio

The measured engine speed and fuel injector pulse-width determine the commanded fuel mass flow rate:

$$\dot{m}_{fuel,cmd} = \frac{NS_{inj}Pw_{inj}N_{cyl}}{Cps\left(\frac{60s}{min}\right)\left(\frac{1000mg}{g}\right)}$$

The commanded total fuel mass flow and estimated port mass flow rates determine the estimated AFR:

$$AFR_{est} = \frac{\dot{m}_{port,est}}{\dot{m}_{fuel,cmd}}$$

The equations use these variables.

Pw_{inj}	Fuel injector pulse-width
AFR_{est}	Estimated air-fuel ratio
$\dot{m}_{fuel,cmd}$	Commanded fuel mass flow rate
S_{inj}	Fuel injector slope
N	Engine speed
N_{cyl}	Number of engine cylinders
Cps	Crankshaft revolutions per power stroke, rev/stroke
$\dot{m}_{port,est}$	Total estimated engine air mass flow at intake ports

Ports

Input

TrqCmd — Commanded engine torque

scalar

Commanded engine torque, $Trq_{cmd,input}$, in N·m.**EngSpd — Measured engine speed**

scalar

Measured engine speed, N , in rpm.**Map — Measured intake manifold absolute pressure**

scalar

Measured intake manifold absolute pressure, MAP , in Pa.**Mat — Measured intake manifold absolute temperature**

scalar

Measured intake manifold absolute temperature, MAT , in K.**AmbPrs — Ambient pressure**

scalar

Absolute ambient pressure, P_{Amb} , in Pa.**EgrVlvAreaPct — EGR valve area percent**

scalar

Measured EGR valve area percent, EGR_{ap} , in %.**VgtPos — VGT speed**

scalar

Measured VGT rack position, VGT_{pos} .**VgtSpd — VGT speed**

scalar

Measured VGT speed, N_{vgt} , in rpm.

Ect — Engine cooling temperature

scalar

Engine cooling temperature, $T_{coolant}$, in K.

Output

Info — Bus signal

bus

Bus signal containing these block calculations.

Signal	Description	Variable	Units
InjPw	Fuel injector pulse-width	Pw_{inj}	ms
EgrVlvAreaPctCmd	EGR valve area percent command	EGR_{cmd}	%
TurbRackPosCmd	VGT rack position command	RP_{cmd}	N/A
TrqCmd	Engine torque	Trq_{cmd}	N·m
FuelMassTotCmd	Commanded total fuel mass per injection	$F_{cmd,tot}$	mg
FuelMainSoi	Main start-of-injection timing	$MAINSOI$	degATDC
FuelMassFlwCmd	Commanded fuel mass flow rate	$\dot{m}_{fuel,cmd}$	kg/s
EstIntkPortMassFlw	Estimated port mass flow rate	$\dot{m}_{port,est}$	kg/s
EstEngTrq	Estimated engine torque	Trq_{est}	N·m
EstExhManGasTemp	Estimated exhaust manifold gas temperature	$T_{exh,est}$	K
EstExhPrs	Estimated exhaust back-pressure	P_{ex}	Pa
EstEGRFlow	EstEGRFlow	EstEGRFlow	EstEGRFlow
EstAfr	Estimated air-fuel ratio	AFR_{est}	N/A

Signal	Description	Variable	Units
EngRevLimAct	Flag that indicates if rev-limiter control is active	N/A	N/A

InjPw — Fuel injector pulse-width

scalar

Fuel injector pulse-width, Pw_{inj} , in ms.

FuelMainSoi — Fuel main injecting timing

scalar

Main start-of-injection timing, $MAINSOI$, in degrees crank angle after top dead center (degATDC).

TurbRackPosCmd — Rack position

scalar

VGT rack position command, RP_{cmd} .

EgrVlvAreaPctCmd — Intake cam phaser angle command

scalar

EGR valve area percent command, EGR_{cmd} .

Parameters

Controls

Air - EGR

EGR valve area percent, $f_{egr_{cmd}}$ — Lookup table


array

The commanded exhaust gas recirculation (EGR) valve area percent lookup table is a function of commanded torque and engine speed

$$EGR_{cmd} = f_{EGR_{cmd}}(Trq_{cmd}, N)$$

where:

- EGR_{cmd} is commanded EGR valve area percent, in percent.
- Trq_{cmd} is commanded engine torque, in N·m.
- N is engine speed, in rpm.

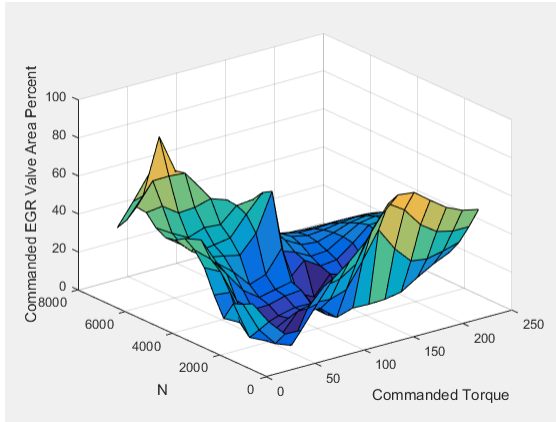

Commanded torque breakpoints, $f_{egr_tq_bpt}$ — Breakpoints vector

Commanded torque breakpoints, in N·m.

Speed breakpoints, $f_{egr_n_bpt}$ — Breakpoints vector

Speed breakpoints, in rpm.

Air - VGR

VGT rack position table, f_{rpcmd} — Lookup table array


The variable geometry turbocharger (VGT) rack position lookup table is a function of commanded torque and engine speed

$$RP_{cmd} = f_{RPcmd}(Trq_{cmd}, N)$$

where:

- RP_{cmd} is VGT rack position command, in percent.

- Trq_{cmd} is commanded engine torque, in N·m.
- N is engine speed, in rpm.

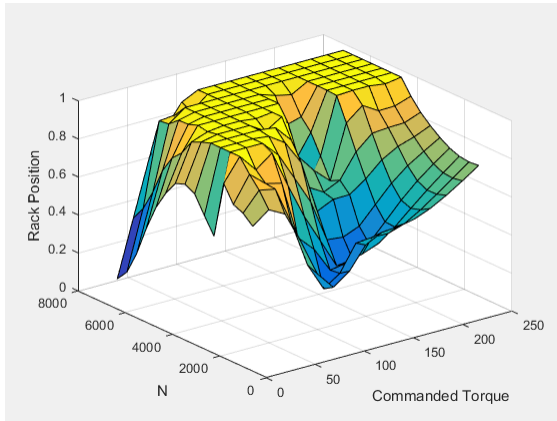

Commanded torque breakpoints, $f_{rp_tq_bpt}$ – Breakpoints
vector

Breakpoints, in N·m.

Speed breakpoints, $f_{rp_n_bpt}$ – Breakpoints
vector

Breakpoints, in rpm.

Fuel

Injector slope, S_{inj} – Slope
scalar

Fuel injector slope, S_{inj} , in mg/ms.

Stoichiometric air-fuel ratio, afr_{stoich} – Ratio
scalar

Stoichiometric air-fuel ratio, AFR_{stoich} .

Fuel lower heating value, $fuel_lhv$ – Heat
scalar

Fuel lower heating value, in J/kg.

Fuel mass per injection table, f_fcmd_tot — Lookup table


array

The commanded total fuel mass per injection table is a function of the torque command and engine speed

$$F_{cmd,tot} = f_{Fcmd,tot}(Trq_{cmd}, N)$$

where:

- $F_{cmd,tot} = F$ is commanded total fuel mass per injection, in mg per cylinder.
- Trq_{cmd} is commanded engine torque, in N·m.
- N is engine speed, in rpm.

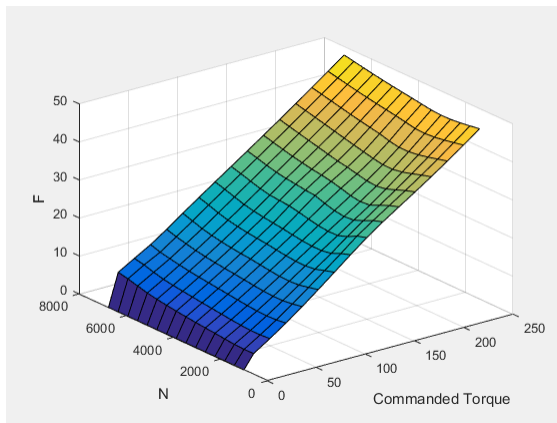

Fuel main injection timing table, f_main_soi — Lookup table

array


The main start-of-injection (SOI) timing lookup table is a function of commanded fuel mass and engine speed

$$MAINSOI = f(F_{cmd,tot}, N)$$

where:

- $MAINSOI$ is the main start-of-injection timing, in degrees crank angle after top dead center (degATDC).

- $F_{cmd,tot} = F$ is commanded fuel mass, in mg per injection.
- N is engine speed, in rpm.

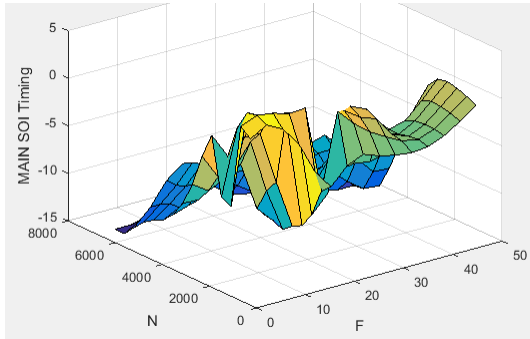

Fuel main injection timing fuel breakpoints, $f_main_soi_f_bpt$ – Breakpoints
vector

Fuel main injection timing fuel breakpoints, in mg per injection.

Fuel main injection timing speed breakpoints, $f_main_soi_n_bpt$ – Breakpoints
vector

Fuel main injection timing speed breakpoints, in rpm.

Commanded torque breakpoints, $f_f_tot_tq_bpt$ – Breakpoints
vector

Commanded torque breakpoints, in N·m.

Speed breakpoints, $f_f_tot_n_bpt$ – Breakpoints
vector

Speed breakpoints, in rpm.

Idle Speed

Base idle speed, N_idle – Speed
scalar

Base idle speed, N_{idle} , in rpm.

Enable torque command limit, $Trq_idlecmd_enable$ — Torque

scalar

Torque to enable the idle speed controller, $Trq_{idlecmd,enable}$, in N·m.

Maximum torque command, $Trq_idlecmd_max$ — Torque

scalar

Maximum idle controller commanded torque, $Trq_{idlecmd,max}$, in N·m.

Proportional gain, Kp_idle — PI Controller

scalar

Proportional gain for idle speed control, $K_{p,idle}$, in N·m/rpm.

Integral gain, Ki_idle — PI Controller

scalar

Integral gain for idle speed control, $K_{i,idle}$, in N·m/(rpm·s).

Rev-limiter speed threshold — Engine speed limit

scalar

Engine speed limit, N_{lim} , in rpm.

If the engine speed, N , exceeds the engine speed limit, N_{lim} , the block sets the commanded engine torque to 0.

To smoothly transition the torque command to 0 as the engine speed approaches the speed limit, the block implements a lookup table multiplier. The lookup table multiplies the torque command by a value that ranges from 0 (engine speed exceeds limit) to 1 (engine speed does not exceed the limit).

Estimation

Air

Number of cylinders, $NCyl$ — Engine cylinders

scalar

Number of engine cylinders, N_{cyl} .

Crank revolutions per power stroke, Cps – Revolutions per stroke

scalar

Crankshaft revolutions per power stroke, Cps , in rev/stroke.**Total displaced volume, Vd – Volume**

scalar

Displaced volume, V_d , in m^3 .**Ideal gas constant air, Rair – Constant**

scalar

Ideal gas constant, R_{air} , in $J/(kg \cdot K)$.**Air standard pressure, Pstd – Pressure**

scalar

Standard air pressure, P_{std} , in Pa.**Air standard temperature, Tstd – Temperature**

scalar

Standard air temperature, T_{std} , in K.**Speed density volumetric efficiency, f_nv – Lookup table**


array

The volumetric efficiency lookup table is a function of the intake manifold absolute pressure at intake valve closing (IVC) and engine speed

$$\eta_v = f_{\eta_v}(MAP, N)$$

where:

- η_v is engine volumetric efficiency, dimensionless.
- MAP is intake manifold absolute pressure, in KPa.
- N is engine speed, in rpm.

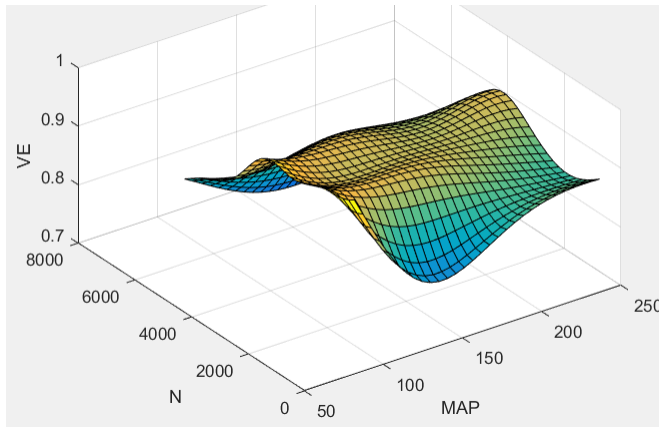

Speed density intake manifold pressure breakpoints, $f_{nv_prs_bpt}$ — Breakpoints
vector

Intake manifold pressure breakpoints for speed-density volumetric efficiency lookup table, in KPa.

Speed density engine speed breakpoints, $f_{nv_n_bpt}$ — Breakpoints
vector

Engine speed breakpoints for speed-density volumetric efficiency lookup table, in rpm.

EGR valve standard flow calibration, $f_{egr_stdflow}$ — Lookup table
array


The standard exhaust gas recirculation (EGR) mass flow is a lookup table that is a function of the standard flow pressure ratio and EGR valve flow area

$$\dot{m}_{egr, std} = f\left(\frac{MAP}{P_{exh, est}}, EGR_{ap}\right)$$

where:

- $\dot{m}_{egr, std}$ is the standard EGR valve mass flow, in g/s.
- $P_{exh, est}$ is the estimated exhaust back-pressure, in Pa.
- MAP is the cycle average intake manifold absolute pressure, in Pa.

- EGR_{ap} is the measured EGR valve area, in percent.

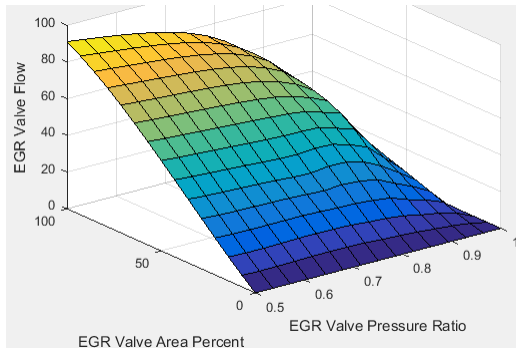

EGR valve standard flow pressure ratio breakpoints, f_egr_stdflow_pr_bpt – Breakpoints

vector

EGR valve standard flow pressure ratio breakpoints, dimensionless.

EGR valve standard flow area percent breakpoints, f_egr_stdflow_egrp_bpt – Breakpoints

vector


EGR valve standard flow area percent breakpoints, in percent.

Turbocharger pressure ratio, f_turbo_pr – Lookup table

array

The turbocharger pressure ratio, corrected for variable geometry turbocharger (VGT) speed, is a lookup table that is a function of the standard air mass flow and corrected turbocharger speed, $Pr_{turbo} = f(\dot{m}_{airstd}, N_{vgtcrr})$, where:

- Pr_{turbo} is the turbocharger pressure ratio, corrected for VGT speed.
- \dot{m}_{airstd} is the standard air mass flow, in g/s.
- N_{vgtcrr} is the corrected turbocharger speed, in rpm/K^(1/2).

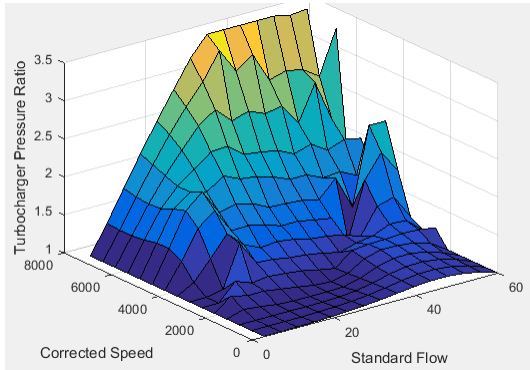

**Turbocharger pressure ratio standard flow breakpoints,
f_turbo_pr_stdflow_bpt — Breakpoints**
vector

Turbocharger pressure ratio standard flow breakpoints, in g/s.


**Turbocharger pressure ratio corrected speed breakpoints,
f_turbo_pr_corrspd_bpt — Breakpoints**
vector

Turbocharger pressure ratio corrected speed breakpoints, in $\text{rpm}/\text{K}^{(1/2)}$.

**Turbocharger pressure ratio VGT position correction,
f_turbo_pr_vgtposcorr — Lookup table**
array

The variable geometry turbocharger pressure ratio correction is a function of the rack position, $Pr_{vgtcorr} = f(VGT_{pos})$, where:

- $Pr_{vgtcorr}$ is the turbocharger pressure ratio correction.
- VGT_{pos} is the variable geometry turbocharger (VGT) rack position.

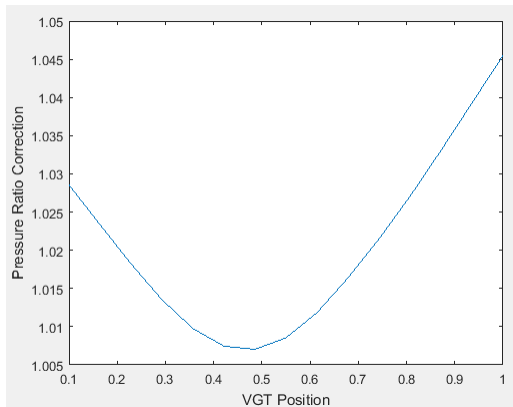

Turbocharger pressure ratio VGT position correction breakpoints, $f_turbo_pr_vgtposcorr_bpt$ – Breakpoints
vector


Turbocharger pressure ratio VGT position correction breakpoints, dimensionless.

Torque - Simple Torque Lookup

Torque table, f_tq_nf – Lookup table
array

For the simple torque lookup table model, the CI engine uses a lookup table is a function of engine speed and injected fuel mass, $T_{brake} = f_{Tnf}(F, N)$, where:

- $Tq = T_{brake}$ is engine brake torque after accounting for engine mechanical and pumping friction effects, in N·m.
- F is injected fuel mass, in mg per injection.
- N is engine speed, in rpm.

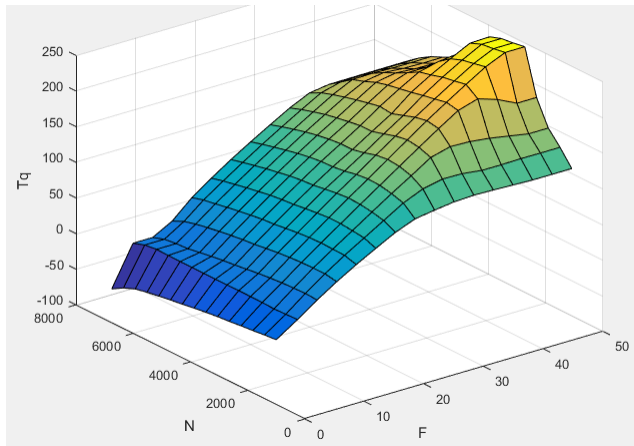

Dependencies

To enable this parameter, for **Torque model**, select Simple Torque Lookup.

Torque table fuel mass per injection breakpoints, `f_tq_nf_f_bpt` — Breakpoints

vector

Torque table fuel mass per injection breakpoints, in mg per injection.

Dependencies

To enable this parameter, for **Torque model**, select Simple Torque Lookup.

Torque table speed breakpoints, `f_tq_nf_n_bpt` — Breakpoints

vector

Engine speed breakpoints, in rpm.

Dependencies

To enable this parameter, for **Torque model**, select Simple Torque Lookup.

Torque - Torque Structure

Fuel mass per injection breakpoints, `f_tqs_f_bpt` — Breakpoints

vector

Fuel mass per injection breakpoints, in mg per injection.

Dependencies

To enable this parameter, for **Torque model**, select Torque Structure.

Engine speed breakpoints, **f_tqs_n_bpt** — Breakpoints vector

Engine speed breakpoints, in rpm.


Dependencies

To enable this parameter, for **Torque model**, select Torque Structure.

Optimal main start of injection timing, **f_tqs_mainsoi** — Optimal **MAINSOI** array

The optimal main start of injection (SOI) timing lookup table, f_{SOI_c} , is a function of the engine speed and injected fuel mass, $SOI_c = f_{SOI_c}(F, N)$, where:

- SOI_c is optimal SOI timing, in degATDC.
- F is compression stroke injected fuel mass, in mg per injection.
- N is engine speed, in rpm.

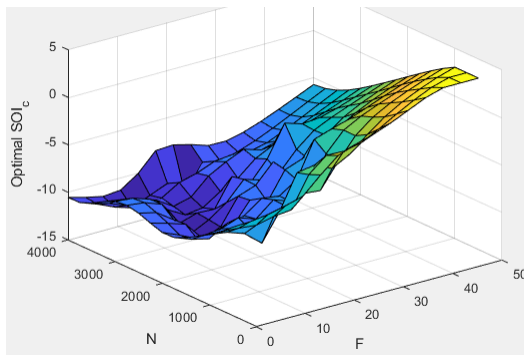


Dependencies

To enable this parameter, for **Torque model**, select Torque Structure.

Optimal intake manifold gas pressure, **f_tqs_map** — Optimal intake MAP array

The optimal intake manifold gas pressure lookup table, f_{MAP} , is a function of the engine speed and injected fuel mass, $MAP = f_{MAP}(F, N)$, where:

- MAP is optimal intake manifold gas pressure, in Pa.
- F is compression stroke injected fuel mass, in mg per injection.
- N is engine speed, in rpm.

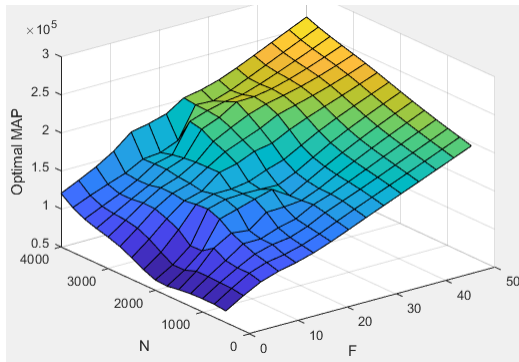

Dependencies


To enable this parameter, for **Torque model**, select Torque Structure.

Optimal exhaust manifold gas pressure, f_{tqs_emap} — Optimal exhaust MAP

array

The optimal exhaust manifold gas pressure lookup table, f_{EMAP} , is a function of the engine speed and injected fuel mass, $EMAP = f_{EMAP}(F, N)$, where:

- $EMAP$ is optimal exhaust manifold gas pressure, in Pa.
- F is compression stroke injected fuel mass, in mg per injection.
- N is engine speed, in rpm.

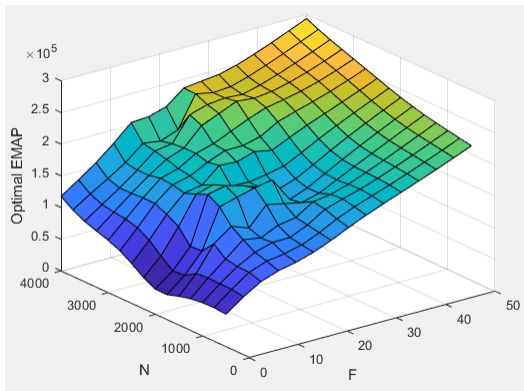


Dependencies

To enable this parameter, for **Torque model**, select Torque Structure.

Optimal intake manifold gas temperature, f_{tqs_mat} – Optimal intake MAT array

The optimal intake manifold gas temperature lookup table, f_{MAT} , is a function of the engine speed and injected fuel mass, $MAT = f_{MAT}(F, N)$, where:

- MAT is optimal intake manifold gas temperature, in K.
- F is compression stroke injected fuel mass, in mg per injection.
- N is engine speed, in rpm.

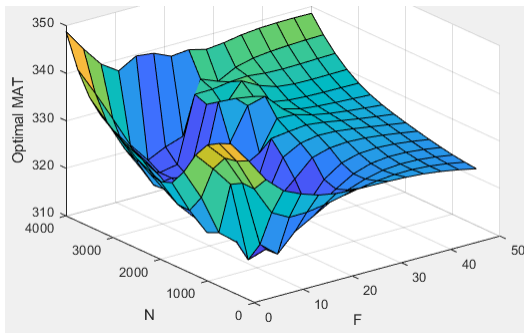

Dependencies


To enable this parameter, for **Torque model**, select Torque Structure.

Optimal intake gas oxygen percent, `f_tqs_o2pct` — Optimal intake gas oxygen

array

The optimal intake gas oxygen percent lookup table, f_{O_2} , is a function of the engine speed and injected fuel mass, $O_2PCT = f_{O_2}(F, N)$, where:

- O_2PCT is optimal intake gas oxygen, in percent.
- F is compression stroke injected fuel mass, in mg per injection.
- N is engine speed, in rpm.

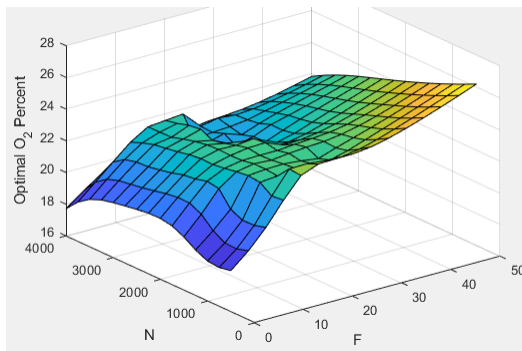

Dependencies


To enable this parameter, for **Torque model**, select Torque Structure.

Optimal fuel rail pressure, `f_tqs_fuelpress` — Optimal fuel rail pressure

array

The optimal fuel rail pressure lookup table, f_{fuelp} , is a function of the engine speed and injected fuel mass, $FUELP = f_{fuelp}(F, N)$, where:

- $FUELP$ is optimal fuel rail pressure, in MPa.
- F is compression stroke injected fuel mass, in mg per injection.
- N is engine speed, in rpm.

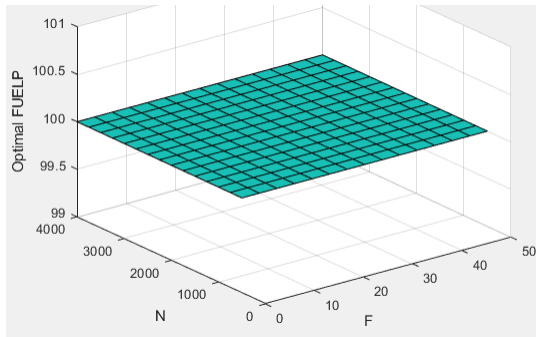


Dependencies

To enable this parameter, for **Torque model**, select Torque Structure.

Optimal gross indicated mean effective pressure, f_tqs_imepg —
Optimal mean effective pressure
 array

The optimal gross indicated mean effective pressure lookup table, f_{imepg} , is a function of the engine speed and injected fuel mass, $IMEPG = f_{imepg}(F, N)$, where:

- $IMEPG$ is optimal gross indicated mean effective pressure, in Pa.
- F is compression stroke injected fuel mass, in mg per injection.
- N is engine speed, in rpm.

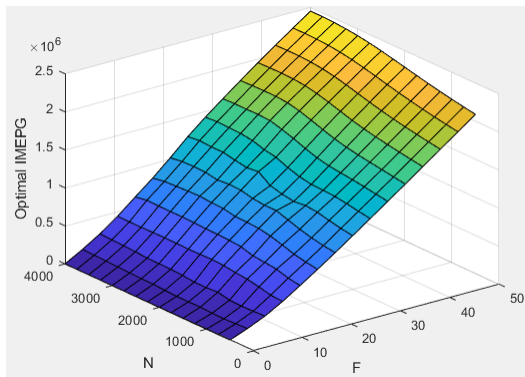

Dependencies


To enable this parameter, for **Torque model**, select Torque Structure.

Optimal friction mean effective pressure, f_{tqs_fmep} — Optimal friction mean effective pressure

array

The optimal friction mean effective pressure lookup table, f_{fmep} , is a function of the engine speed and injected fuel mass, $FMEP = f_{fmep}(F, N)$, where:

- $FMEP$ is optimal friction mean effective pressure, in Pa.
- F is compression stroke injected fuel mass, in mg per injection.
- N is engine speed, in rpm.

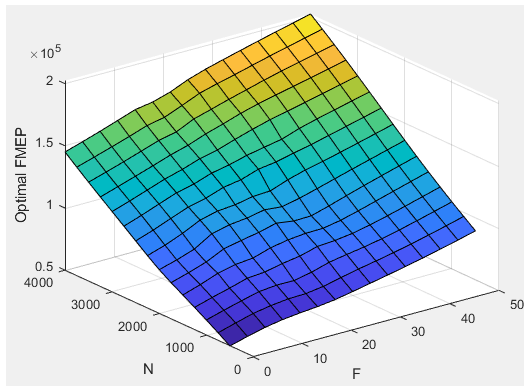

Dependencies

To enable this parameter, for **Torque model**, select Torque Structure.


Optimal pumping mean effective pressure, f_{tqs_pmep} — Optimal pumping mean effective pressure

array

The optimal pumping mean effective pressure lookup table, f_{pmep} , is a function of the engine speed and injected fuel mass, $PMEP = f_{pmep}(F, N)$, where:

- $PMEP$ is optimal pumping mean effective pressure, in Pa.
- F is compression stroke injected fuel mass, in mg per injection.

- N is engine speed, in rpm.

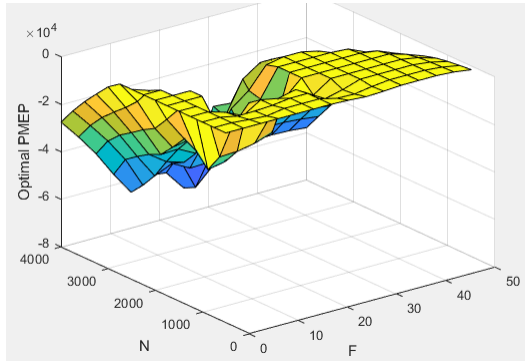

Dependencies

To enable this parameter, for **Torque model**, select Torque Structure.

Friction multiplier as a function of temperature, f_tqs_fric_temp_mod – Friction multiplier
array

Friction multiplier as a function of temperature, dimensionless.

Dependencies

To enable this parameter, for **Torque model**, select Torque Structure.

Friction multiplier temperature breakpoints, f_tqs_fric_temp_bpt – Breakpoints
vector

Friction multiplier temperature breakpoints, in K.


Dependencies

To enable this parameter, for **Torque model**, select Torque Structure.

Main start of injection timing efficiency multiplier, f_tqs_mainsoi_eff – MAINSOI efficiency multiplier
array

The main start of injection (SOI) timing efficiency multiplier lookup table, $f_{SOI_{eff}}$, is a function of the engine speed and main SOI timing relative to optimal timing, $SOI_{eff} = f_{SOI_{eff}}(\Delta SOI, N)$, where:

- SOI_{eff} is main SOI timing efficiency multiplier, dimensionless.
- ΔSOI is main SOI timing relative to optimal timing, in degBTDC.
- N is engine speed, in rpm.

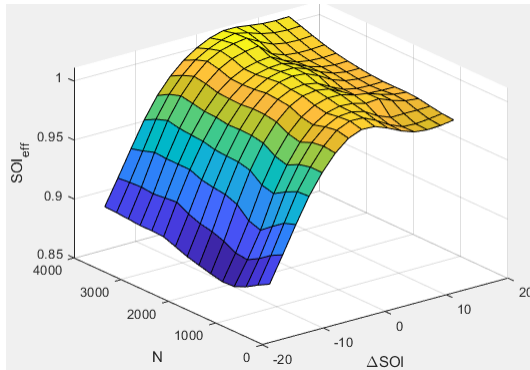

Dependencies

To enable this parameter, for **Torque model**, select Torque Structure.

Main start of injection timing relative to optimal timing breakpoints, f_tqs_mainsoi_delta_bpt — Breakpoints
vector

Main start of injection timing relative to optimal timing breakpoints, in degBTDC.


Dependencies

To enable this parameter, for **Torque model**, select Torque Structure.

Intake manifold gas pressure efficiency multiplier, f_tqs_map_eff — Intake pressure efficiency multiplier
array

The intake manifold gas pressure efficiency multiplier lookup table, $f_{MAP_{eff}}$, is a function of the intake manifold gas pressure ratio relative to optimal pressure ratio and lambda, $MAP_{eff} = f_{MAP_{eff}}(MAP_{ratio}, \lambda)$, where:

- MAP_{eff} is intake manifold gas pressure efficiency multiplier, dimensionless.
- MAP_{ratio} is intake manifold gas pressure ratio relative to optimal pressure ratio, dimensionless.
- λ is intake manifold gas lambda, dimensionless.

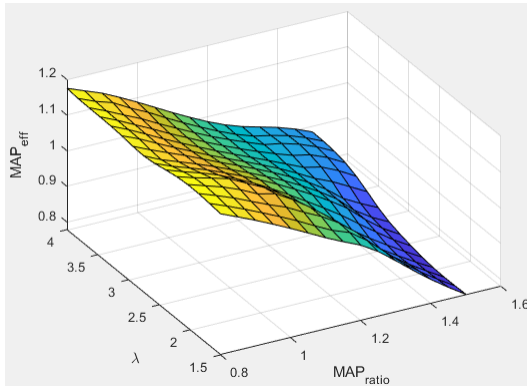

Dependencies

To enable this parameter, for **Torque model**, select Torque Structure.

Intake manifold gas pressure ratio relative to optimal pressure ratio breakpoints, $f_{tqs_map_ratio_bpt}$ – Breakpoints
vector

Intake manifold gas pressure ratio relative to optimal pressure ratio breakpoints, dimensionless.

Dependencies

To enable this parameter, for **Torque model**, select Torque Structure.

Intake manifold gas lambda breakpoints, $f_{tqs_lambda_bpt}$ – Breakpoints
vector

Intake manifold gas lambda breakpoints, dimensionless.

Dependencies


To enable this parameter, for **Torque model**, select Torque Structure.

Intake manifold gas temperature efficiency multiplier, $f_{tqs_mat_eff}$ — Intake temperature efficiency multiplier

array

The intake manifold gas temperature efficiency multiplier lookup table, $f_{MAT_{eff}}$, is a function of the engine speed and intake manifold gas temperature relative to optimal temperature, $MAT_{eff} = f_{MAT_{eff}}(\Delta MAT, N)$, where:

- MAT_{eff} is intake manifold gas temperature efficiency multiplier, dimensionless.
- ΔMAT is intake manifold gas temperature relative to optimal temperature, in K.
- N is engine speed, in rpm.

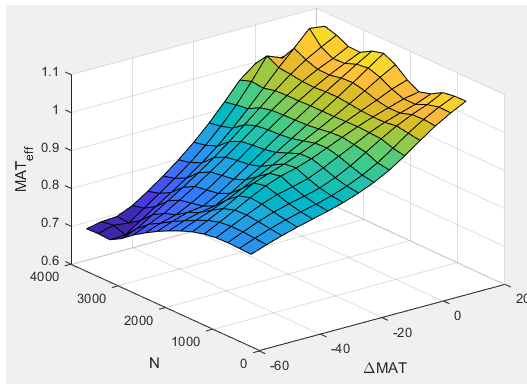

Dependencies

To enable this parameter, for **Torque model**, select Torque Structure.

Intake manifold gas temperature relative to optimal gas temperature breakpoints, $f_{tqs_mat_delta_bpt}$ — Breakpoints

vector

Intake manifold gas temperature relative to optimal gas temperature breakpoints, in K.

Dependencies


To enable this parameter, for **Torque model**, select Torque Structure.

Intake manifold gas oxygen efficiency multiplier, $f_{tqs_o2pct_eff}$ — Intake oxygen efficiency multiplier

array

The intake manifold gas oxygen efficiency multiplier lookup table, f_{O2Peff} , is a function of the engine speed and intake manifold gas oxygen percent relative to optimal, $O2P_{eff} = f_{O2Peff}(\Delta O2P, N)$, where:

- $O2P_{eff}$ is intake manifold gas oxygen efficiency multiplier, dimensionless.
- $\Delta O2P$ is intake gas oxygen percent relative to optimal, in percent.
- N is engine speed, in rpm.

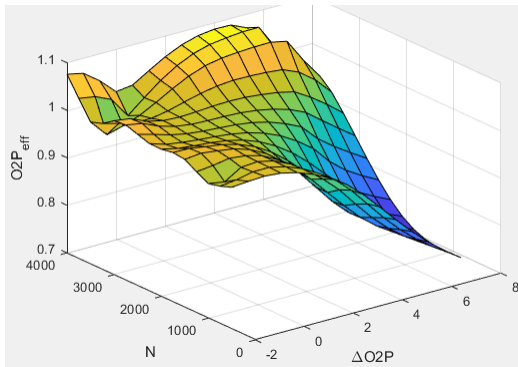

Dependencies

To enable this parameter, for **Torque model**, select Torque Structure.

Intake gas oxygen percent relative to optimal breakpoints, f_tqs_o2pct_delta_bpt – Breakpoints
vector

Intake gas oxygen percent relative to optimal breakpoints, in percent.


Dependencies

To enable this parameter, for **Torque model**, select Torque Structure.

Fuel rail pressure efficiency multiplier, f_tqs_fuelpress_eff – Efficiency multiplier
array

The fuel rail pressure efficiency multiplier lookup table, $f_{FUELPeff}$, is a function of the engine speed and fuel rail pressure relative to optimal breakpoints, $FUELPeff = f_{FUELPeff}(\Delta FUELPN)$, where:

- $FUEL P_{eff}$ is fuel rail pressure efficiency multiplier, dimensionless.
- $\Delta FUEL P$ is fuel rail pressure relative to optimal, in MPa.
- N is engine speed, in rpm.

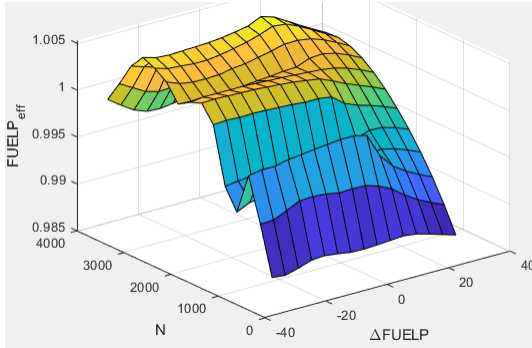

Dependencies

To enable this parameter, for **Torque model**, select Torque Structure.

Fuel rail pressure relative to optimal breakpoints, f_tqs_fuelpress_delta_bpt — Breakpoints
vector

Fuel rail pressure relative to optimal breakpoints, in MPa.

Dependencies

To enable this parameter, for **Torque model**, select Torque Structure.

Fuel mass injection type identifier, f_tqs_f_inj_type — Type identifier
vector

Fuel mass injection type identifier, dimensionless.

In the CI Core Engine and CI Controller blocks, you can represent multiple injections with the start of injection (SOI) and fuel mass inputs to the model. To specify the type of injection, use the **Fuel mass injection type identifier** parameter.

Type of Injection	Parameter Value
Pilot	0

Type of Injection	Parameter Value
Main	1
Post	2
Passed	3

The model considers Passed fuel injections and fuel injected later than a threshold to be unburned fuel. Use the **Maximum start of injection angle for burned fuel, $f_tqs_f_burned_soi_limit$** parameter to specify the threshold.


Dependencies

To enable this parameter, for **Torque model**, select Torque Structure.

Indicated mean effective pressure post inject correction, $f_tqs_imep_post_corr$ – Post inject correction array

The indicated mean effective pressure post inject correction lookup table, $f_{IMEP_{post}}$, is a function of the engine speed and fuel rail pressure relative to optimal breakpoints, $\Delta IMEP_{post} = f_{IMEP_{post}}(\Delta SOI_{post}, F_{post})$, where:

- $\Delta IMEP_{post}$ is indicated mean effective pressure post inject correction, in Pa.
- ΔSOI_{post} is indicated mean effective pressure post inject start of inject timing centroid, in degATDC.
- F_{post} is indicated mean effective pressure post inject mass sum, in mg per injection.

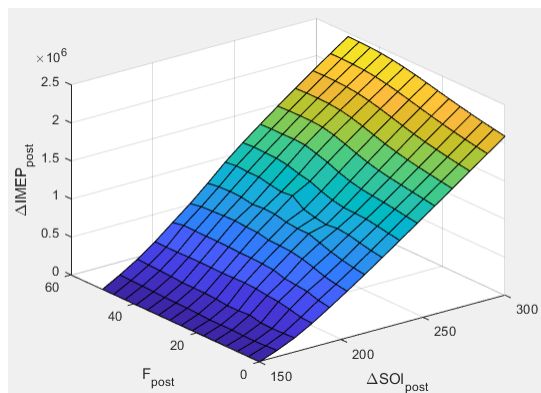

Dependencies

To enable this parameter, for **Torque model**, select Torque Structure.

Indicated mean effective pressure post inject mass sum breakpoints, f_tqs_f_post_sum_bpt — Breakpoints
vector

Indicated mean effective pressure post inject mass sum breakpoints, in mg per injection.

Dependencies

To enable this parameter, for **Torque model**, select Torque Structure.

Indicated mean effective pressure post inject start of inject timing centroid breakpoints, f_tqs_soi_post_cent_bpt — Breakpoints
vector

Indicated mean effective pressure post inject start of inject timing centroid breakpoints, in degATDC.

Dependencies

To enable this parameter, for **Torque model**, select Torque Structure.

Maximum start of injection angle for burned fuel, f_tqs_f_burned_soi_limit — Maximum SOI angle for burned fuel
vector

Maximum start of injection angle for burned fuel, in degATDC.

Dependencies

To enable this parameter, for **Torque model**, select Torque Structure.

Exhaust

Exhaust gas specific heat at constant pressure, cp_exh — Specific heat
scalar

Exhaust gas-specific heat, $C_{p_{exh}}$, in J/(kg·K).

Exhaust Temperature - Simple Torque Lookup

Exhaust temperature table, `f_t_exh` – Lookup table


array

The lookup table for the exhaust temperature is a function of injected fuel mass and engine speed

$$T_{exh} = f_{T_{exh}}(F, N)$$

where:

- T_{exh} is exhaust temperature, in K.
- F is injected fuel mass, in mg per injection.
- N is engine speed, in rpm.

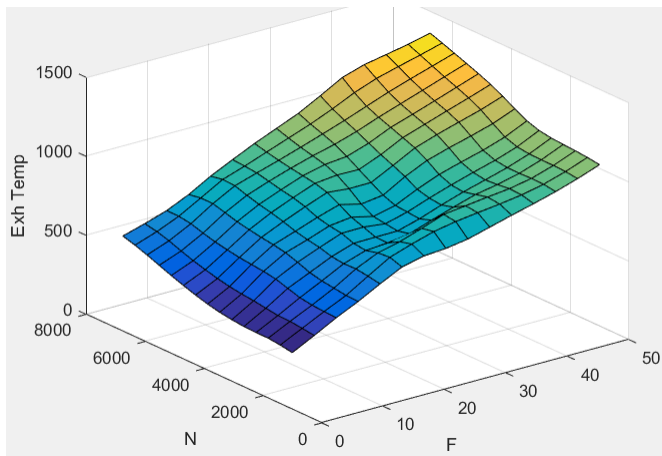

Dependencies

To enable this parameter, for **Torque model**, select Simple Torque Lookup.

Fuel mass per injection breakpoints, `f_t_exh_f_bpt` – Breakpoints

array

Engine load breakpoints used for exhaust temperature lookup table, in mg per injection.

Dependencies

To enable this parameter, for **Torque model**, select Simple Torque Lookup.

Speed breakpoints, $f_t_exh_n_bpt$ — Breakpoints

array

Engine speed breakpoints used for exhaust temperature lookup table, in rpm.

Dependencies

To enable this parameter, for **Torque model**, select Simple Torque Lookup.


Exhaust Temperature - Torque Structure

Optimal exhaust manifold gas temperature, f_tqs_exht — Optimal exhaust manifold gas temperature

array

The optimal exhaust manifold gas temperature lookup table, f_{Texh} , is a function of the engine speed engine speed and injected fuel mass, $Texh_{opt} = f_{Texh}(F, N)$, where:

- $Texh_{opt}$ is optimal exhaust manifold gas temperature, in K.
- F is compression stroke injected fuel mass, in mg per injection.
- N is engine speed, in rpm.

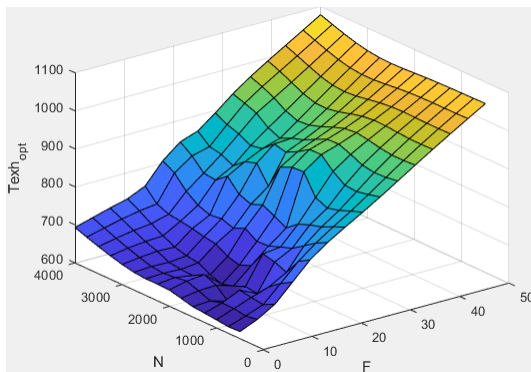


Dependencies

To enable this parameter, for **Torque model**, select Torque Structure.

Main start of injection timing exhaust temperature efficiency multiplier, f_tqs_exht_mainsoi_eff – Main SOI timing efficiency multiplier array

The main start of injection (SOI) timing exhaust temperature efficiency multiplier lookup table, $f_{SOI_{exhteff}}$, is a function of the engine speed engine speed and injected fuel mass, $SOI_{exhteff} = f_{SOI_{exhteff}}(\Delta SOI, N)$, where:

- $SOI_{exhteff}$ is main SOI exhaust temperature efficiency multiplier, dimensionless.
- ΔSOI is main SOI timing relative to optimal timing, in degBTDC.
- N is engine speed, in rpm.

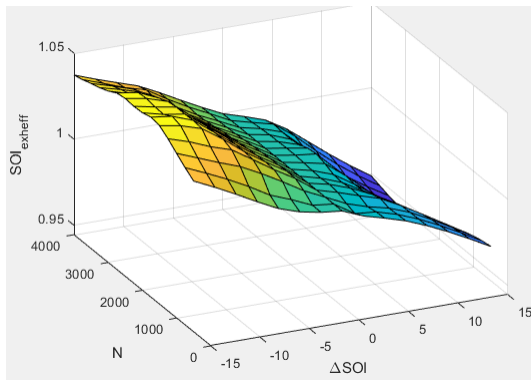

Dependencies


To enable this parameter, for **Torque model**, select Torque Structure.

Intake manifold gas pressure exhaust temperature efficiency multiplier, f_tqs_exht_map_eff – Intake manifold efficiency multiplier array

The intake manifold gas pressure exhaust temperature efficiency multiplier lookup table, $f_{MAP_{exhteff}}$, is a function of the intake manifold gas pressure ratio relative to optimal pressure ratio and lambda, $MAP_{exhteff} = f_{MAP_{exhteff}}(MAP_{ratio}, \lambda)$, where:

- $MAP_{exhteff}$ is intake manifold gas pressure exhaust temperature efficiency multiplier, dimensionless.
- MAP_{ratio} is intake manifold gas pressure ratio relative to optimal pressure ratio, dimensionless.

- λ is intake manifold gas lambda, dimensionless.

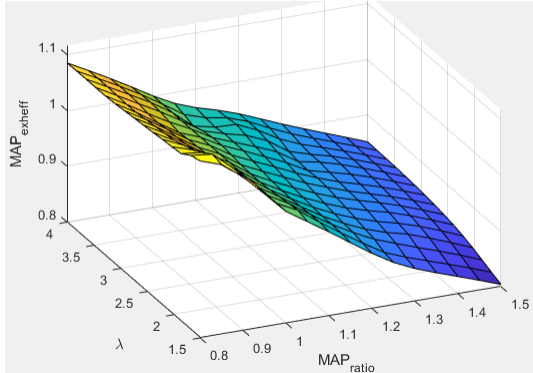


Dependencies

To enable this parameter, for **Torque model**, select Torque Structure.

Intake manifold gas temperature exhaust temperature efficiency multiplier, f_tqs_exht_mat_eff — Intake manifold efficiency multiplier array

The intake manifold gas temperature exhaust temperature efficiency multiplier lookup table, $f_{MATexheff}$, is a function of the engine speed and intake manifold gas temperature relative to optimal temperature, $MAT_{exheff} = f_{MATexheff}(\Delta MAT, N)$, where:

- MAT_{exheff} is intake manifold gas temperature exhaust temperature efficiency multiplier, dimensionless.
- ΔMAT is intake manifold gas temperature relative to optimal temperature, in K.
- N is engine speed, in rpm.

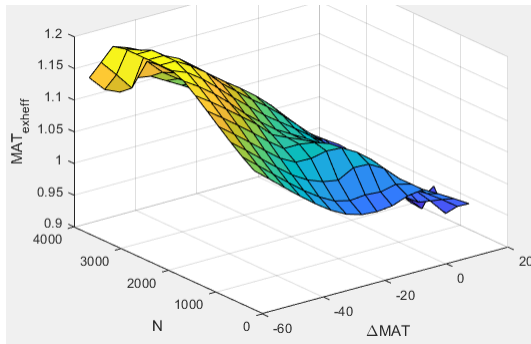


Dependencies

To enable this parameter, for **Torque model**, select Torque Structure.

Intake manifold gas oxygen exhaust temperature efficiency multiplier, $f_{tqs_exht_o2pct_eff}$ – Intake manifold efficiency multiplier array

The intake manifold gas oxygen exhaust temperature efficiency multiplier lookup table, $f_{O2P_{exheff}}$, is a function of the engine speed and intake manifold gas oxygen percent relative to optimal, $O2P_{exheff} = f_{O2P_{exheff}}(\Delta O2P, N)$, where:

- $O2P_{exheff}$ is intake manifold gas oxygen exhaust temperature efficiency multiplier, dimensionless.
- $\Delta O2P$ is intake gas oxygen percent relative to optimal, in percent.
- N is engine speed, in rpm.

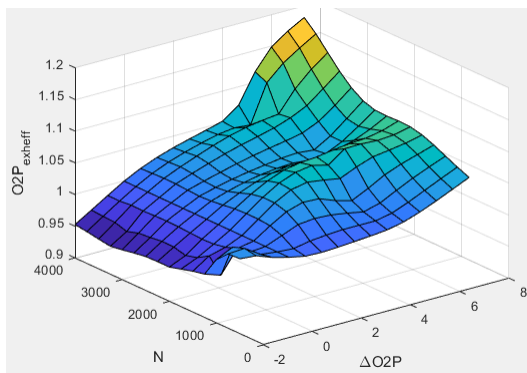

Dependencies


To enable this parameter, for **Torque model**, select Torque Structure.

Fuel rail pressure exhaust temperature efficiency multiplier, f_tqs_exht_fuelpress_eff — Fuel rail pressure exhaust temperature efficiency multiplier

array

The fuel rail pressure efficiency exhaust temperature multiplier lookup table, $f_{FUELPe\text{xheff}}$, is a function of the engine speed and fuel rail pressure relative to optimal breakpoints, $FUELPe\text{xheff} = f_{FUELPe\text{xheff}}(\Delta FUEL P, N)$, where:

- $FUELPe\text{xheff}$ is fuel rail pressure exhaust temperature efficiency multiplier, dimensionless.
- $\Delta FUEL P$ is fuel rail pressure relative to optimal, in MPa.
- N is engine speed, in rpm.

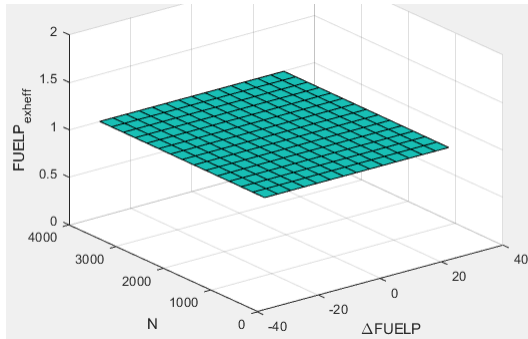

Dependencies

To enable this parameter, for **Torque model**, select Torque Structure.

Post-injection cylinder wall heat loss transfer coefficient, f_tqs_exht_post_inj_wall_htc — Post-injection offset

scalar

Post-injection cylinder wall heat loss transfer coefficient, in W/K.

Dependencies

To enable this parameter, for **Torque model**, select Torque Structure.

References

[1] Heywood, John B. *Internal Combustion Engine Fundamentals*. New York: McGraw-Hill, 1988.

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using Simulink® Coder™.

See Also

CI Core Engine | Mapped CI Engine

Topics

“Engine Calibration Maps”


“Generate Mapped CI Engine from a Spreadsheet”

Introduced in R2017a

CI Core Engine

Compression-ignition engine from intake to exhaust port

Library: Powertrain Blockset / Propulsion / Combustion Engine Components / Core Engine

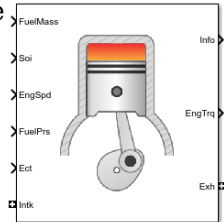

Description

The CI Core Engine block implements a compression-ignition (CI) engine from intake to the exhaust port. You can use the block for hardware-in-the-loop (HIL) engine control design or vehicle-level fuel economy and performance simulations.

The CI Core Engine block calculates:

- Brake torque
- Exhaust temperature
- Air-fuel ratio (AFR)
- Fuel rail pressure
- Engine-out (EO) exhaust emissions:
 - Hydrocarbon (HC)
 - Carbon monoxide (CO)
 - Nitric oxide and nitrogen dioxide (NO_x)
 - Carbon dioxide (CO₂)
 - Particulate matter (PM)

Air Mass Flow

To calculate the air mass flow, the compression-ignition (CI) engine uses the “CI Engine Speed-Density Air Mass Flow Model”. The speed-density model uses the speed-density

equation to calculate the engine air mass flow, relating the engine intake port mass flow to the intake manifold pressure, intake manifold temperature, and engine speed.

Brake Torque

To calculate the engine torque, you can configure the block to use either of these torque models.

Brake Torque Model	Description
"CI Engine Torque Structure Model"	<p>The CI core engine torque structure model determines the engine torque by reducing the maximum engine torque potential as these engine conditions vary from nominal:</p> <ul style="list-style-type: none"> • Start of injection (SOI) timing • Exhaust back-pressure • Burned fuel mass • Intake manifold gas pressure, temperature, and oxygen percentage • Fuel rail pressure <p>To account for the effect of post-inject fuel on torque, the model uses a calibrated torque offset table.</p>
"CI Engine Simple Torque Model"	<p>For the simple engine torque calculation, the CI engine uses a torque lookup table map that is a function of engine speed and injected fuel mass.</p>

Fuel Flow

In the CI Core Engine and CI Controller blocks, you can represent multiple injections with the start of injection (SOI) and fuel mass inputs to the model. To specify the type of injection, use the **Fuel mass injection type identifier** parameter.

Type of Injection	Parameter Value
Pilot	0
Main	1
Post	2

Type of Injection	Parameter Value
Passed	3

The model considers Passed fuel injections and fuel injected later than a threshold to be unburned fuel. Use the **Maximum start of injection angle for burned fuel, $f_tqs_f_burned_soi_limit$** parameter to specify the threshold.

To calculate the engine fuel mass flow, the CI Core Engine block uses fuel mass flow delivered by the injectors and the engine airflow.

$$\dot{m}_{fuel} = \frac{N \cdot N_{cyl}}{Cps \left(\frac{60s}{min} \right) \left(\frac{1000mg}{g} \right)} \sum m_{fuel, inj}$$

To calculate the fuel economy for high-fidelity models, the block uses the volumetric fuel flow.

$$Q_{fuel} = \frac{\dot{m}_{fuel}}{\left(\frac{1000kg}{m^3} \right) Sg_{fuel}}$$

The equation uses these variables.

- \dot{m}_{fuel} Fuel mass flow, g/s
- $m_{fuel, inj}$ Fuel mass per injection
- Cps Crankshaft revolutions per power stroke, rev/stroke
- N_{cyl} Number of engine cylinders
- N Engine speed, rpm
- Q_{fuel} Volumetric fuel flow
- Sg_{fuel} Specific gravity of fuel

Air-Fuel Ratio

To calculate the air-fuel (AFR) ratio, the CI Core Engine and SI Core Engine blocks implement this equation.

$$AFR = \frac{\dot{m}_{air}}{\dot{m}_{fuel}}$$

The CI Core Engine uses this equation to calculate the relative AFR.

$$\lambda = \frac{AFR}{AFR_s}$$

To calculate the exhaust gas recirculation (EGR), the blocks implement this equation. The calculation expresses the EGR as a percent of the total intake port flow.

$$EGR_{pct} = 100 \frac{\dot{m}_{intk,b}}{\dot{m}_{intk}} = 100 y_{intk,b}$$

The equations use these variables.

AFR	Air-fuel ratio
AFR_s	Stoichiometric air-fuel ratio
\dot{m}_{intk}	Engine air mass flow
\dot{m}_{fuel}	Fuel mass flow
λ	Relative AFR
$y_{intk,b}$	Intake burned mass fraction
EGR_{pct}	EGR percent
$\dot{m}_{intk,b}$	Recirculated burned gas mass flow rate

Exhaust Temperature

The exhaust temperature calculation depends on the torque model. For both torque models, the block implements lookup tables.

Torque Model	Description	Equations
Simple Torque Lookup	Exhaust temperature lookup table is a function of the injected fuel mass and engine speed.	$T_{exh} = f_{Texh}(F, N)$

Torque Model	Description	Equations
Torque Structure	<p>The nominal exhaust temperature, $T_{exh_{nom}}$, is a product of these exhaust temperature efficiencies:</p> <ul style="list-style-type: none"> • SOI timing • Intake manifold gas pressure • Intake manifold gas temperature • Intake manifold gas oxygen percentage • Fuel rail pressure • Optimal temperature <p>The exhaust temperature, $T_{exh_{nom}}$, is offset by a post temperature effect, ΔT_{post}, that accounts for post and late injections during the expansion and exhaust strokes.</p>	$T_{exh_{nom}} = SOI_{exh_{teff}} MAP_{exh_{teff}} MAT_{exh_{teff}} O2p_{exh_{teff}}$ $T_{exh} = T_{exh_{nom}} + \Delta T_{post}$ $SOI_{exh_{teff}} = f_{SOI_{exh_{teff}}}(\Delta SOI, N)$ $MAP_{exh_{teff}} = f_{MAP_{exh_{teff}}}(MAP_{ratio}, \lambda)$ $MAT_{exh_{teff}} = f_{MAT_{exh_{teff}}}(\Delta MAT, N)$ $O2p_{exh_{teff}} = f_{O2p_{exh_{teff}}}(\Delta O2p, N)$ $T_{exh_{opt}} = f_{T_{exh}}(F, N)$

The equations use these variables.

F	Compression stroke injected fuel mass
N	Engine speed
T_{exh}	Exhaust manifold gas temperature
$T_{exh_{opt}}$	Optimal exhaust manifold gas temperature
ΔT_{post}	Post injection temperature effect
$T_{exh_{nom}}$	Nominal exhaust temperature
$SOI_{exh_{teff}}$	Main SOI exhaust temperature efficiency multiplier
ΔSOI	Main SOI timing relative to optimal timing
$MAP_{exh_{teff}}$	Intake manifold gas pressure exhaust temperature efficiency multiplier
MAP_{ratio}	Intake manifold gas pressure ratio relative to optimal pressure ratio

λ	Intake manifold gas lambda
MAT_{exheff}	Intake manifold gas temperature exhaust temperature efficiency multiplier
ΔMAT	Intake manifold gas temperature relative to optimal temperature
$O2P_{exheff}$	Intake manifold gas oxygen exhaust temperature efficiency multiplier
$\Delta O2P$	Intake gas oxygen percent relative to optimal
$FUELP_{exheff}$	Fuel rail pressure exhaust temperature efficiency multiplier
$\Delta FUELP$	Fuel rail pressure relative to optimal

EO Exhaust Emissions

The block calculates these engine-out (EO) exhaust emissions:

- Hydrocarbon (HC)
- Carbon monoxide (CO)
- Nitric oxide and nitrogen dioxide (NOx)
- Carbon dioxide (CO₂)
- Particulate matter (PM)

The exhaust temperature determines the specific enthalpy.

$$h_{exh} = Cp_{exh}T_{exh}$$

The exhaust mass flow rate is the sum of the intake port air mass flow and the fuel mass flow.

$$\dot{m}_{exh} = \dot{m}_{intake} + \dot{m}_{fuel}$$

To calculate the exhaust emissions, the block multiplies the emission mass fraction by the exhaust mass flow rate. To determine the emission mass fractions, the block uses lookup tables that are functions of the engine torque and speed.

$$y_{exh,i} = f_{i_frac}(T_{brake}, N)$$

$$\dot{m}_{exh,i} = \dot{m}_{exh}y_{exh,i}$$

The fraction of air and fuel entering the intake port, injected fuel, and stoichiometric AFR determine the air mass fraction that exits the exhaust.

$$y_{exh, air} = \max\left[y_{in, air} - \frac{\dot{m}_{fuel} + y_{in, fuel}\dot{m}_{intake}}{\dot{m}_{fuel} + \dot{m}_{intake}}AFR_s\right]$$

If the engine is operating at the stoichiometric or fuel rich AFR, no air exits the exhaust. Unburned hydrocarbons and burned gas comprise the remainder of the exhaust gas. This equation determines the exhaust burned gas mass fraction.

$$y_{exh, b} = \max[(1 - y_{exh, air} - y_{exh, HC}), 0]$$

The equations use these variables.

T_{exh}	Engine exhaust temperature
h_{exh}	Exhaust manifold inlet-specific enthalpy
Cp_{exh}	Exhaust gas specific heat
\dot{m}_{intk}	Intake port air mass flow rate
\dot{m}_{fuel}	Fuel mass flow rate
\dot{m}_{exh}	Exhaust mass flow rate
$y_{in, fuel}$	Intake fuel mass fraction
$y_{exh, i}$	Exhaust mass fraction for $i = CO_2, CO, HC, NOx, air, burned\ gas, and\ PM$
$\dot{m}_{exh, i}$	Exhaust mass flow rate for $i = CO_2, CO, HC, NOx, air, burned\ gas, and\ PM$
T_{brake}	Engine brake torque
N	Engine speed
$y_{exh, air}$	Exhaust air mass fraction
$y_{exh, b}$	Exhaust air burned mass fraction

Power Accounting

For the power accounting, the block implements equations that depend on **Torque model**.

When you set **Torque model** to Simple Torque Lookup, the block implements these equations.

Bus Signal		Description	Equations
PwrInfo	PwrTrnsfrd — Power transferred between blocks	PwrIntkHeatFlw	Intake heat flow $\dot{m}_{intk}h_{intk}$
		PwrExhHeatFlw	Exhaust heat flow $-\dot{m}_{exh}h_{exh}$
		PwrCrkshft	Crankshaft power $-T_{brake}\omega$
	PwrNotTrnsfrd — Power crossing the block boundary, but not transferred	PwrFuel	Fuel input power $\dot{m}_{fuel}LHV$
		PwrLoss	All losses $T_{brake}\omega - \dot{m}_{fuel}LHV - \dot{m}_{intk}h_{intk} + \dot{m}_{exh}h_{exh}$
<ul style="list-style-type: none"> • Positive signals indicate flow into block • Negative signals indicate flow out of block 			
<ul style="list-style-type: none"> • Positive signals indicate an input • Negative signals indicate a loss 			

Bus Signal		Description	Equations
	<p>PwrStored — Stored energy rate of change</p> <ul style="list-style-type: none"> • Positive signals indicate an increase • Negative signals indicate a decrease 	<i>Not used</i>	

When you set **Torque model** to Torque Structure, the block implements these equations.

Bus Signal		Description	Equations
PwrInfo	<p>PwrTrnsfrd — Power transferred between blocks</p> <ul style="list-style-type: none"> • Positive signals indicate flow into block • Negative signals indicate flow out of block 	PwrIntkHeatFlw	Intake heat flow $\dot{m}_{intk}h_{intk}$
		PwrExhHeatFlw	Exhaust heat flow $-\dot{m}_{exh}h_{exh}$
		PwrCrkshft	Crankshaft power $-T_{brake}\omega$

Bus Signal		Description	Equations
PwrNotTrnsfrd — Power crossing the block boundary, but not transferred	PwrFuel	Fuel input power	$\dot{m}_{fuel}LHV$
	PwrFrictLoss	Friction loss	$-T_{fric}\omega$
	PwrPumpLoss	Pumping loss	$-T_{pump}\omega$
	PwrHeatTrnsfrLoss	Heat transfer loss	$T_{brake}\omega - \dot{m}_{fuel}LHV - \dot{m}_{intk}h_{intk} + \dot{m}_{exh}h_{exh} + T_{fric}\omega + T_{pump}\omega$
PwrStored — Stored energy rate of change	<i>Not used</i>		

h_{exh} Exhaust manifold inlet-specific enthalpy

h_{intk} Intake port specific enthalpy

\dot{m}_{intk} Intake port air mass flow rate

\dot{m}_{fuel}	Fuel mass flow rate
\dot{m}_{exh}	Exhaust mass flow rate
ω	Engine speed
T_{brake}	Brake torque
T_{pump}	Engine pumping torque offset to inner torque
T_{fric}	Engine friction torque
LHV	Fuel lower heating value

Ports

Input

FuelMass — Fuel injector pulse-width

vector

Fuel mass per injection, $m_{fuel,inj}$, in mg per injection.

Soi — Start of fuel injection timing

vector

Fuel injection timing, SOI , in degrees crank angle after top dead center (degATDC). First vector value, $Soi(1)$, is main injection timing.

Dependencies

To enable this parameter, for **Torque model**, select Torque Structure.

EngSpd — Engine speed

scalar

Engine speed, N , in rpm.

FuelPrs — Fuel rail pressure

scalar

Fuel rail pressure, $FUELP$, in MPa.

Dependencies

To enable this parameter, for **Torque model**, select Torque Structure.

Ect — Engine cooling temperature

scalar

Engine cooling temperature, $T_{coolant}$, in K.

Dependencies

To enable this parameter, for **Torque model**, select Torque Structure.

Intk — Intake port pressure, temperature, enthalpy, mass fractions

two-way connector port

Bus containing the upstream:

- Prs — Pressure, in Pa
- Temp — Temperature, in K
- Enth — Specific enthalpy, in J/kg
- MassFrac — Intake port mass fractions, dimensionless. Exhaust gas recirculation (EGR) mass flow at the intake port is burned gas.

Specifically, a bus with these mass fractions:

- O2MassFrac — Oxygen
- N2MassFrac — Nitrogen
- UnbrndFuelMassFrac — Unburned fuel
- CO2MassFrac — Carbon dioxide
- H2OMassFrac — Water
- COMassFrac — Carbon monoxide
- NOMassFrac — Nitric oxide
- NO2MassFrac — Nitrogen dioxide
- NOxMassFrac — Nitric oxide and nitrogen dioxide
- PmMassFrac — Particulate matter
- AirMassFrac — Air

- BrndGasMassFrac — Burned gas

Exh — Exhaust port pressure, temperature, enthalpy, mass fractions two-way connector port

Bus containing the exhaust:

- Prs — Pressure, in Pa
- Temp — Temperature, in K
- Enth — Specific enthalpy, in J/kg
- MassFrac — Exhaust port mass fractions, dimensionless.

Specifically, a bus with these mass fractions:

- O2MassFrac — Oxygen
- N2MassFrac — Nitrogen
- UnbrndFuelMassFrac — Unburned fuel
- CO2MassFrac — Carbon dioxide
- H2OMassFrac — Water
- COMassFrac — Carbon monoxide
- NOMassFrac — Nitric oxide
- NO2MassFrac — Nitrogen dioxide
- NOxMassFrac — Nitric oxide and nitrogen dioxide
- PmMassFrac — Particulate matter
- AirMassFrac — Air
- BrndGasMassFrac — Burned gas

Output

Info — Bus signal

bus

Bus signal containing these block calculations.

Signal	Description	Variable	Units
IntkGasMassFlw	Engine intake air mass flow.	\dot{m}_{air}	kg/s
IntkAirMassFlw	Engine intake port mass flow.	\dot{m}_{intk}	kg/s
NrmlzdAirChrg	Engine load (that is, normalized cylinder air mass) corrected for final steady-state cam phase angles	L	N/A
Afr	Air-fuel ratio at engine exhaust port	AFR	N/A
FuelMassFlw	Fuel flow into engine	\dot{m}_{fuel}	kg/s
FuelVolFlw	Volumetric fuel flow	Q_{fuel}	m ³ /s
ExhManGasTemp	Exhaust gas temperature at exhaust manifold inlet	T_{exh}	K
EngTrq	Engine brake torque	T_{brake}	N·m
EngSpd	Engine speed	N	rpm
IntkCamPhase	Intake cam phaser angle	φ_{ICP}	degrees crank advance
ExhCamPhase	Exhaust cam phaser angle	φ_{ECP}	degrees crank retard
CrkAng	Engine crankshaft absolute angle	$\int_0^{(360)Cps} EngSpd \frac{180}{30} d\theta$ <p>where Cps is crankshaft revolutions per power stroke</p>	degrees crank angle
EgrPct	EGR percent	EGR_{pct}	N/A
EoAir	EO air mass flow rate	\dot{m}_{exh}	kg/s

Signal			Description	Variable	Units
EoBrndGas			EO burned gas mass flow rate	$y_{exh,b}$	kg/s
EoHC			EO hydrocarbon emission mass flow rate	$y_{exh,HC}$	kg/s
EoCO			EO carbon monoxide emission mass flow rate	$y_{exh,CO}$	kg/s
EoNOx			EO nitric oxide and nitrogen dioxide emissions mass flow rate	$y_{exh,NOx}$	kg/s
EoCO2			EO carbon dioxide emission mass flow rate	$y_{exh,CO2}$	kg/s
EoPm			EO particulate matter emission mass flow rate	$y_{exh,PM}$	kg/s
PwrInfo	PwrTrnsfrd	PwrIntkHeatFlw	Intake heat flow	$\dot{m}_{intk}h_{intk}$	W
		PwrExHeatFlw	Exhaust heat flow	$-\dot{m}_{exh}h_{exh}$	W
		PwrCrkshft	Crankshaft power	$-T_{brake}\omega$	W
	PwrNotTrnsfrd	PwrFuel	Fuel input power	$\dot{m}_{fuel}LHV$	W
		PwrLoss	For Torque model set to Simple Torque Lookup: All losses	$T_{brake}\omega - \dot{m}_{fuel}LHV - \dot{m}_{intk}h_{intk} + \dot{m}_{exh}h_{exh}$	W

Signal		Description	Variable	Units
	PwrFricLoss	For Torque model set to Torque Structure: Friction loss	$-T_{fric}\omega$	W
	PwrPumpLoss	For Torque model set to Torque Structure: Pumping loss	$-T_{pump}\omega$	W
	PwrHeatTransfersLoss	For Torque model set to Torque Structure: Heat transfer loss	$T_{brake}\omega - \dot{m}_{fuel}LHV - \dot{m}_{intk}h_{intk} + \dot{m}_{exh}h_{exh} + T_{fric}\omega + T_{pump}\omega$	W
	PwrStored	<i>Not used</i>		

EngTrq — Engine brake torque

scalar

Engine brake torque, T_{brake} , in N·m.

Intk — Intake port mass flow rate, heat flow rate, temperature, mass fraction

two-way connector port

Bus containing:

- MassFlwRate — Intake port mass flow rate, in kg/s
- HeatFlwRate — Intake port heat flow rate, in J/s
- ExhManGasTemp — Intake port temperature, in K
- MassFrac — Intake port mass fractions, dimensionless.

Specifically, a bus with these mass fractions:

- O2MassFrac — Oxygen
- N2MassFrac — Nitrogen

- UnbrndFuelMassFrac — Unburned fuel
- CO2MassFrac — Carbon dioxide
- H2OMassFrac — Water
- COMassFrac — Carbon monoxide
- NOMassFrac — Nitric oxide
- NO2MassFrac — Nitrogen dioxide
- NOxMassFrac — Nitric oxide and nitrogen dioxide
- PmMassFrac — Particulate matter
- AirMassFrac — Air
- BrndGasMassFrac — Burned gas

Exh — Exhaust port mass flow rate, heat flow rate, temperature, mass fraction
two-way connector port

Bus containing:

- MassFlwRate — Exhaust port mass flow rate, in kg/s
- HeatFlwRate — Exhaust heat flow rate, in J/s
- ExhManGasTemp — Exhaust port temperature, in K
- MassFrac — Exhaust port mass fractions, dimensionless.

Specifically, a bus with these mass fractions:

- O2MassFrac — Oxygen
- N2MassFrac — Nitrogen
- UnbrndFuelMassFrac — Unburned fuel
- CO2MassFrac — Carbon dioxide
- H2OMassFrac — Water
- COMassFrac — Carbon monoxide
- NOMassFrac — Nitric oxide
- NO2MassFrac — Nitrogen dioxide
- NOxMassFrac — Nitric oxide and nitrogen dioxide
- PmMassFrac — Particulate matter

- AirMassFrac — Air
- BrndGasMassFrac — Burned gas

Parameters

Block Options

Torque model — Select torque model

Torque Structure (default) | Simple Torque Lookup

To calculate the engine torque, you can configure the block to use either of these torque models.

Brake Torque Model	Description
"CI Engine Torque Structure Model"	<p>The CI core engine torque structure model determines the engine torque by reducing the maximum engine torque potential as these engine conditions vary from nominal:</p> <ul style="list-style-type: none"> • Start of injection (SOI) timing • Exhaust back-pressure • Burned fuel mass • Intake manifold gas pressure, temperature, and oxygen percentage • Fuel rail pressure <p>To account for the effect of post-inject fuel on torque, the model uses a calibrated torque offset table.</p>
"CI Engine Simple Torque Model"	<p>For the simple engine torque calculation, the CI engine uses a torque lookup table map that is a function of engine speed and injected fuel mass.</p>

Air

Number of cylinders, NCyl — Engine cylinders

scalar

Number of engine cylinders, N_{cyl} .

Crank revolutions per power stroke, Cps — Revolutions per stroke

scalar

Crankshaft revolutions per power stroke, Cps , in rev/stroke.

Total displaced volume, Vd — Volume

scalar

Displaced volume, V_d , in m^3 .

Ideal gas constant air, Rair — Constant

scalar

Ideal gas constant, R_{air} , in $J/(kg \cdot K)$.

Air standard pressure, Pstd — Pressure

scalar

Standard air pressure, P_{std} , in Pa.

Speed-density volumetric efficiency, f_nv — Lookup table


array

The volumetric efficiency lookup table is a function of the intake manifold absolute pressure at intake valve closing (IVC) and engine speed

$$\eta_v = f_{\eta_v}(MAP, N)$$

where:

- η_v is engine volumetric efficiency, dimensionless.
- MAP is intake manifold absolute pressure, in KPa.
- N is engine speed, in rpm.

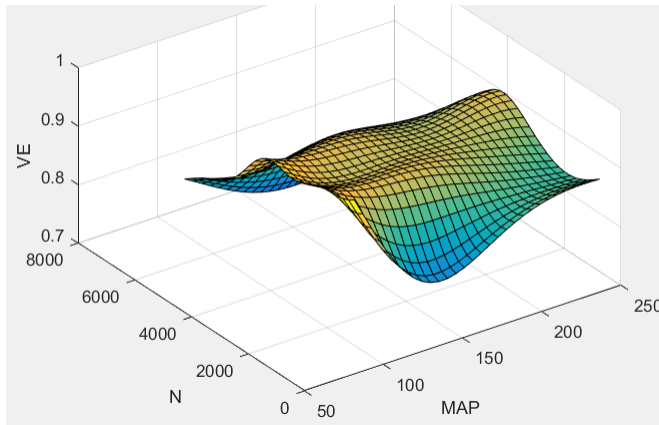

Speed-density intake manifold pressure breakpoints, `f_nv_prs_bpt` — Breakpoints

array

Intake manifold pressure breakpoints for speed-density volumetric efficiency lookup table, in KPa.

Speed-density engine speed breakpoints, `f_nv_n_bpt` — Breakpoints

array

Engine speed breakpoints for speed-density volumetric efficiency lookup table, in rpm.

Torque

Torque - Simple Torque Lookup


Torque table, `f_tq_nf` — Lookup table

array

For the simple torque lookup table model, the CI engine uses a lookup table as a function of engine speed and injected fuel mass, $T_{brake} = f_{Tnf}(F, N)$, where:

- $Tq = T_{brake}$ is engine brake torque after accounting for engine mechanical and pumping friction effects, in N·m.
- F is injected fuel mass, in mg per injection.

- N is engine speed, in rpm.

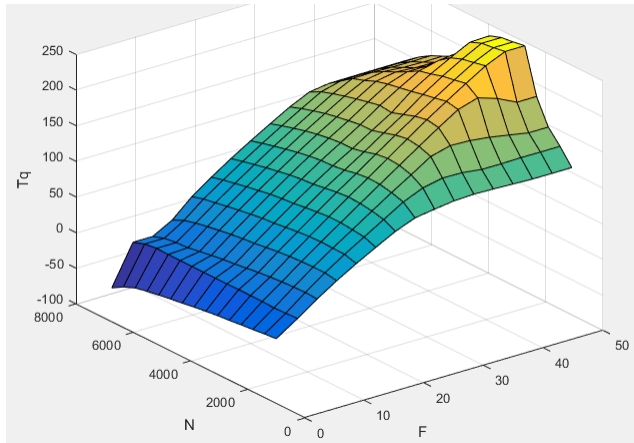

Dependencies

To enable this parameter, for **Torque model**, select Simple Torque Lookup.

Torque table fuel mass per injection breakpoints, $f_tq_nf_f_bpt$ — Breakpoints

vector

Torque table fuel mass per injection breakpoints, in mg per injection.

Dependencies

To enable this parameter, for **Torque model**, select Simple Torque Lookup.

Torque table speed breakpoints, $f_tq_nf_n_bpt$ — Breakpoints

vector

Engine speed breakpoints, in rpm.

Dependencies

To enable this parameter, for **Torque model**, select Simple Torque Lookup.

Torque - Torque Structure

Fuel mass per injection breakpoints, $f_tqs_f_bpt$ — Breakpoints

vector

Fuel mass per injection breakpoints, in mg per injection.

Dependencies

To enable this parameter, for **Torque model**, select Torque Structure.

Engine speed breakpoints, $f_tqs_n_bpt$ – Breakpoints vector

Engine speed breakpoints, in rpm.


Dependencies

To enable this parameter, for **Torque model**, select Torque Structure.

Optimal main start of injection timing, $f_tqs_mainsoi$ – Optimal MAINSOI array

The optimal main start of injection (SOI) timing lookup table, f_{SOI_c} , is a function of the engine speed and injected fuel mass, $SOI_c = f_{SOI_c}(F, N)$, where:

- SOI_c is optimal SOI timing, in degATDC.
- F is compression stroke injected fuel mass, in mg per injection.
- N is engine speed, in rpm.

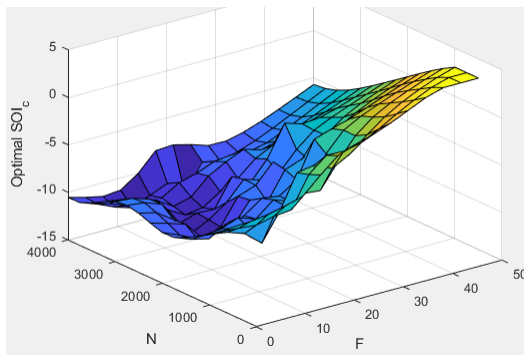


Dependencies

To enable this parameter, for **Torque model**, select Torque Structure.

Optimal intake manifold gas pressure, `f_tqs_map` — Optimal intake MAP array

The optimal intake manifold gas pressure lookup table, f_{MAP} , is a function of the engine speed and injected fuel mass, $MAP = f_{MAP}(F, N)$, where:

- MAP is optimal intake manifold gas pressure, in Pa.
- F is compression stroke injected fuel mass, in mg per injection.
- N is engine speed, in rpm.

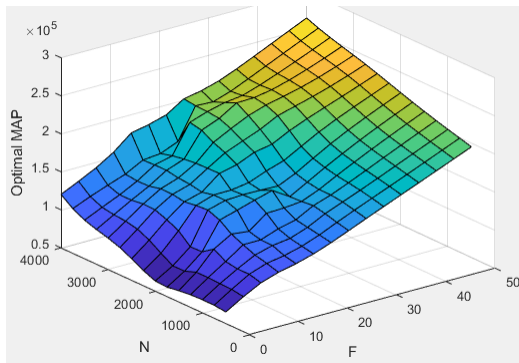


Dependencies

To enable this parameter, for **Torque model**, select Torque Structure.

Optimal exhaust manifold gas pressure, `f_tqs_emap` — Optimal exhaust MAP array

The optimal exhaust manifold gas pressure lookup table, f_{EMAP} , is a function of the engine speed and injected fuel mass, $EMAP = f_{EMAP}(F, N)$, where:

- $EMAP$ is optimal exhaust manifold gas pressure, in Pa.
- F is compression stroke injected fuel mass, in mg per injection.
- N is engine speed, in rpm.

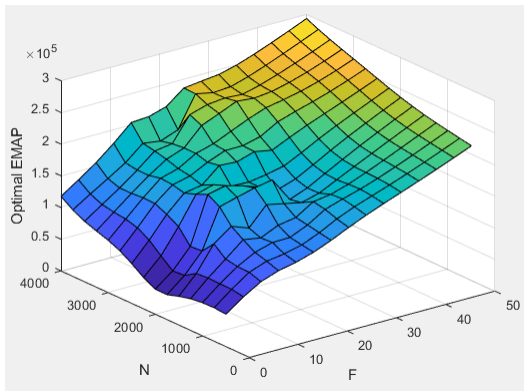


Dependencies

To enable this parameter, for **Torque model**, select Torque Structure.

Optimal intake manifold gas temperature, f_{tqs_mat} – Optimal intake MAT array

The optimal intake manifold gas temperature lookup table, f_{MAT} , is a function of the engine speed and injected fuel mass, $MAT = f_{MAT}(F, N)$, where:

- MAT is optimal intake manifold gas temperature, in K.
- F is compression stroke injected fuel mass, in mg per injection.
- N is engine speed, in rpm.

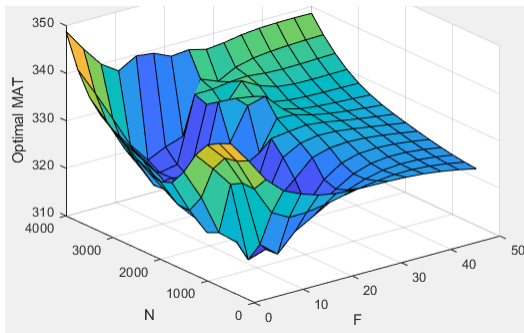

Dependencies


To enable this parameter, for **Torque model**, select Torque Structure.

Optimal intake gas oxygen percent, `f_tqs_o2pct` — Optimal intake gas oxygen

array

The optimal intake gas oxygen percent lookup table, f_{O_2} , is a function of the engine speed and injected fuel mass, $O_2PCT = f_{O_2}(F, N)$, where:

- O_2PCT is optimal intake gas oxygen, in percent.
- F is compression stroke injected fuel mass, in mg per injection.
- N is engine speed, in rpm.

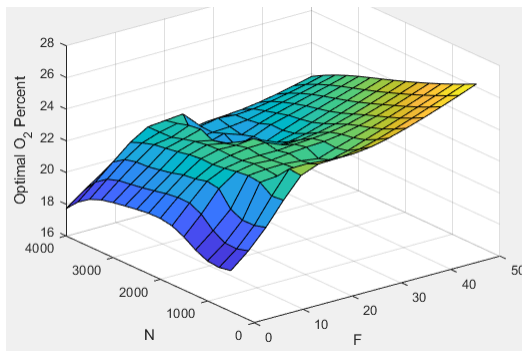

Dependencies


To enable this parameter, for **Torque model**, select Torque Structure.

Optimal fuel rail pressure, `f_tqs_fuelpress` — Optimal fuel rail pressure

array

The optimal fuel rail pressure lookup table, f_{fuelp} , is a function of the engine speed and injected fuel mass, $FUELP = f_{fuelp}(F, N)$, where:

- $FUELP$ is optimal fuel rail pressure, in MPa.
- F is compression stroke injected fuel mass, in mg per injection.
- N is engine speed, in rpm.

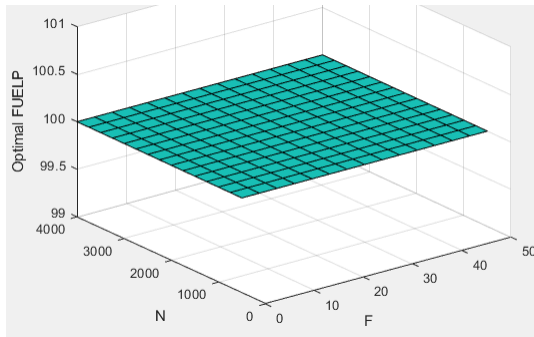


Dependencies

To enable this parameter, for **Torque model**, select Torque Structure.

Optimal gross indicated mean effective pressure, f_tqs_imepg —
Optimal mean effective pressure
 array

The optimal gross indicated mean effective pressure lookup table, f_{imepg} , is a function of the engine speed and injected fuel mass, $IMEPG = f_{imepg}(F, N)$, where:

- $IMEPG$ is optimal gross indicated mean effective pressure, in Pa.
- F is compression stroke injected fuel mass, in mg per injection.
- N is engine speed, in rpm.

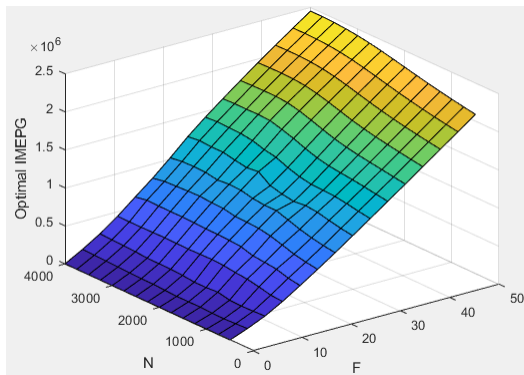

Dependencies


To enable this parameter, for **Torque model**, select Torque Structure.

Optimal friction mean effective pressure, f_{tqs_fmep} — Optimal friction mean effective pressure

array

The optimal friction mean effective pressure lookup table, f_{fmep} , is a function of the engine speed and injected fuel mass, $FMEP = f_{fmep}(F, N)$, where:

- $FMEP$ is optimal friction mean effective pressure, in Pa.
- F is compression stroke injected fuel mass, in mg per injection.
- N is engine speed, in rpm.

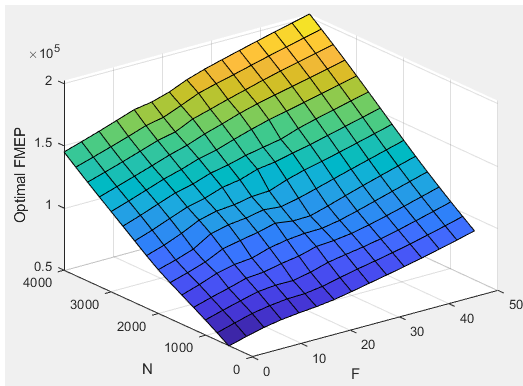

Dependencies

To enable this parameter, for **Torque model**, select Torque Structure.


Optimal pumping mean effective pressure, f_{tqs_pmep} — Optimal pumping mean effective pressure

array

The optimal pumping mean effective pressure lookup table, f_{pmep} , is a function of the engine speed and injected fuel mass, $PMEP = f_{pmep}(F, N)$, where:

- $PMEP$ is optimal pumping mean effective pressure, in Pa.
- F is compression stroke injected fuel mass, in mg per injection.

- N is engine speed, in rpm.

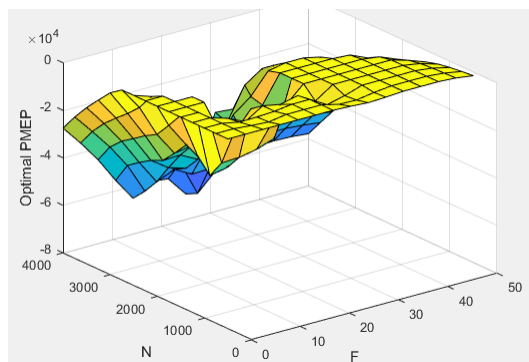

Dependencies

To enable this parameter, for **Torque model**, select Torque Structure.

Friction multiplier as a function of temperature, f_tqs_fric_temp_mod – Friction multiplier
array

Friction multiplier as a function of temperature, dimensionless.

Dependencies

To enable this parameter, for **Torque model**, select Torque Structure.

Friction multiplier temperature breakpoints, f_tqs_fric_temp_bpt – Breakpoints
vector

Friction multiplier temperature breakpoints, in K.


Dependencies

To enable this parameter, for **Torque model**, select Torque Structure.

Main start of injection timing efficiency multiplier, f_tqs_mainsoi_eff – MAINSOI efficiency multiplier
array

The main start of injection (SOI) timing efficiency multiplier lookup table, $f_{SOI_{eff}}$, is a function of the engine speed and main SOI timing relative to optimal timing, $SOI_{eff} = f_{SOI_{eff}}(\Delta SOI, N)$, where:

- SOI_{eff} is main SOI timing efficiency multiplier, dimensionless.
- ΔSOI is main SOI timing relative to optimal timing, in degBTDC.
- N is engine speed, in rpm.

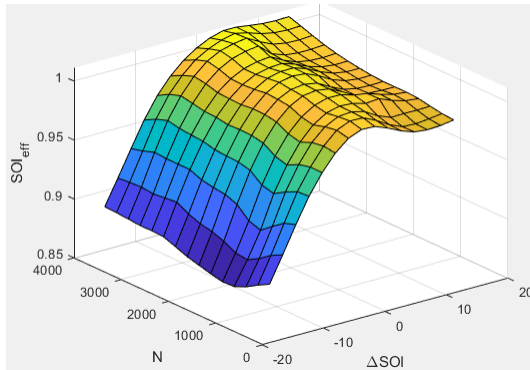

Dependencies

To enable this parameter, for **Torque model**, select Torque Structure.

Main start of injection timing relative to optimal timing breakpoints, f_tqs_mainsoi_delta_bpt — Breakpoints
vector

Main start of injection timing relative to optimal timing breakpoints, in degBTDC.


Dependencies

To enable this parameter, for **Torque model**, select Torque Structure.

Intake manifold gas pressure efficiency multiplier, f_tqs_map_eff — Intake pressure efficiency multiplier
array

The intake manifold gas pressure efficiency multiplier lookup table, $f_{MAP_{eff}}$, is a function of the intake manifold gas pressure ratio relative to optimal pressure ratio and lambda, $MAP_{eff} = f_{MAP_{eff}}(MAP_{ratio}, \lambda)$, where:

- MAP_{eff} is intake manifold gas pressure efficiency multiplier, dimensionless.
- MAP_{ratio} is intake manifold gas pressure ratio relative to optimal pressure ratio, dimensionless.
- λ is intake manifold gas lambda, dimensionless.

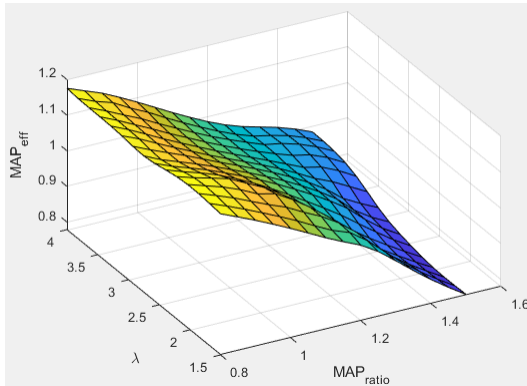

Dependencies

To enable this parameter, for **Torque model**, select Torque Structure.

Intake manifold gas pressure ratio relative to optimal pressure ratio breakpoints, $f_{tqs_map_ratio_bpt}$ – Breakpoints vector

Intake manifold gas pressure ratio relative to optimal pressure ratio breakpoints, dimensionless.

Dependencies

To enable this parameter, for **Torque model**, select Torque Structure.

Intake manifold gas lambda breakpoints, $f_{tqs_lambda_bpt}$ – Breakpoints vector

Intake manifold gas lambda breakpoints, dimensionless.

Dependencies


To enable this parameter, for **Torque model**, select Torque Structure.

Intake manifold gas temperature efficiency multiplier, f_tqs_mat_eff — Intake temperature efficiency multiplier

array

The intake manifold gas temperature efficiency multiplier lookup table, $f_{MAT_{eff}}$, is a function of the engine speed and intake manifold gas temperature relative to optimal temperature, $MAT_{eff} = f_{MAT_{eff}}(\Delta MAT, N)$, where:

- MAT_{eff} is intake manifold gas temperature efficiency multiplier, dimensionless.
- ΔMAT is intake manifold gas temperature relative to optimal temperature, in K.
- N is engine speed, in rpm.

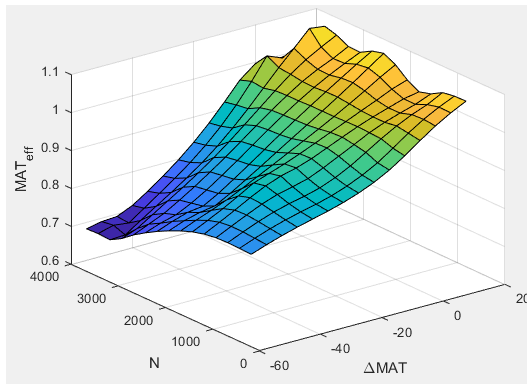

Dependencies

To enable this parameter, for **Torque model**, select Torque Structure.

Intake manifold gas temperature relative to optimal gas temperature breakpoints, f_tqs_mat_delta_bpt — Breakpoints

vector

Intake manifold gas temperature relative to optimal gas temperature breakpoints, in K.

Dependencies


To enable this parameter, for **Torque model**, select Torque Structure.

Intake manifold gas oxygen efficiency multiplier, f_tqs_o2pct_eff — Intake oxygen efficiency multiplier

array

The intake manifold gas oxygen efficiency multiplier lookup table, f_{O2Peff} , is a function of the engine speed and intake manifold gas oxygen percent relative to optimal, $O2P_{eff} = f_{O2Peff}(\Delta O2P, N)$, where:

- $O2P_{eff}$ is intake manifold gas oxygen efficiency multiplier, dimensionless.
- $\Delta O2P$ is intake gas oxygen percent relative to optimal, in percent.
- N is engine speed, in rpm.

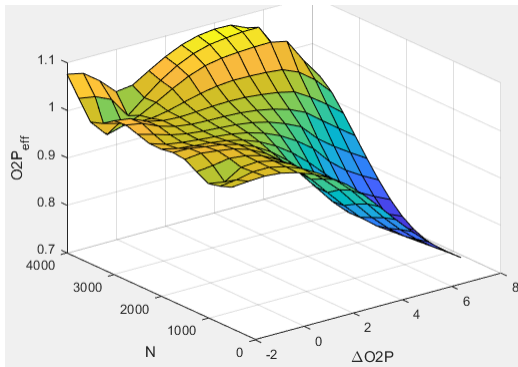

Dependencies

To enable this parameter, for **Torque model**, select Torque Structure.

Intake gas oxygen percent relative to optimal breakpoints, f_tqs_o2pct_delta_bpt – Breakpoints
vector

Intake gas oxygen percent relative to optimal breakpoints, in percent.


Dependencies

To enable this parameter, for **Torque model**, select Torque Structure.

Fuel rail pressure efficiency multiplier, f_tqs_fuelpress_eff – Efficiency multiplier
array

The fuel rail pressure efficiency multiplier lookup table, $f_{FUELPeff}$, is a function of the engine speed and fuel rail pressure relative to optimal breakpoints, $FUELPeff = f_{FUELPeff}(\Delta FUELPN)$, where:

- $FUELP_{eff}$ is fuel rail pressure efficiency multiplier, dimensionless.
- $\Delta FUELP$ is fuel rail pressure relative to optimal, in MPa.
- N is engine speed, in rpm.

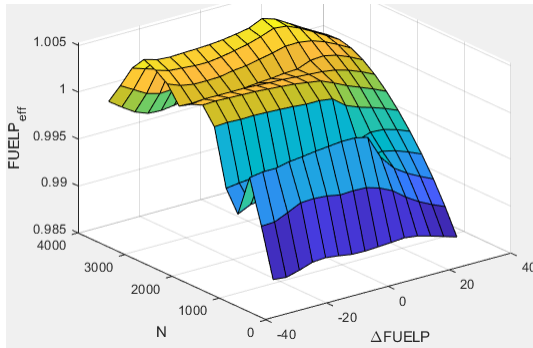

Dependencies

To enable this parameter, for **Torque model**, select Torque Structure.

Fuel rail pressure relative to optimal breakpoints, f_tqs_fuelpress_delta_bpt — Breakpoints
vector

Fuel rail pressure relative to optimal breakpoints, in MPa.

Dependencies

To enable this parameter, for **Torque model**, select Torque Structure.

Fuel mass injection type identifier, f_tqs_f_inj_type — Type identifier
vector

Fuel mass injection type identifier, dimensionless.

In the CI Core Engine and CI Controller blocks, you can represent multiple injections with the start of injection (SOI) and fuel mass inputs to the model. To specify the type of injection, use the **Fuel mass injection type identifier** parameter.

Type of Injection	Parameter Value
Pilot	0

Type of Injection	Parameter Value
Main	1
Post	2
Passed	3

The model considers Passed fuel injections and fuel injected later than a threshold to be unburned fuel. Use the **Maximum start of injection angle for burned fuel, $f_tqs_f_burned_soi_limit$** parameter to specify the threshold.


Dependencies

To enable this parameter, for **Torque model**, select Torque Structure.

Indicated mean effective pressure post inject correction, $f_tqs_imep_post_corr$ – Post inject correction array

The indicated mean effective pressure post inject correction lookup table, $f_{IMEP_{post}}$, is a function of the engine speed and fuel rail pressure relative to optimal breakpoints, $\Delta IMEP_{post} = f_{IMEP_{post}}(\Delta SOI_{post}, F_{post})$, where:

- $\Delta IMEP_{post}$ is indicated mean effective pressure post inject correction, in Pa.
- ΔSOI_{post} is indicated mean effective pressure post inject start of inject timing centroid, in degATDC.
- F_{post} is indicated mean effective pressure post inject mass sum, in mg per injection.

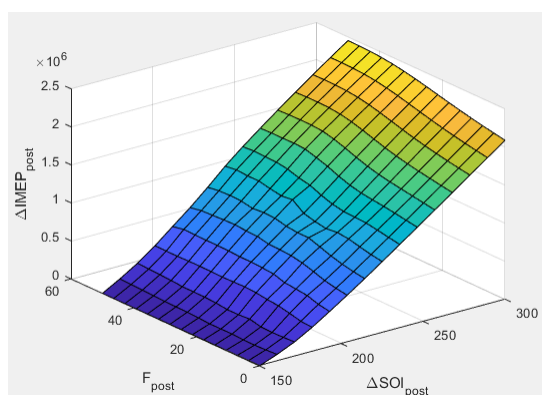

Dependencies

To enable this parameter, for **Torque model**, select Torque Structure.

Indicated mean effective pressure post inject mass sum breakpoints, f_tqs_f_post_sum_bpt — Breakpoints

vector

Indicated mean effective pressure post inject mass sum breakpoints, in mg per injection.

Dependencies

To enable this parameter, for **Torque model**, select Torque Structure.

Indicated mean effective pressure post inject start of inject timing centroid breakpoints, f_tqs_soi_post_cent_bpt — Breakpoints

vector

Indicated mean effective pressure post inject start of inject timing centroid breakpoints, in degATDC.

Dependencies

To enable this parameter, for **Torque model**, select Torque Structure.

Maximum start of injection angle for burned fuel, f_tqs_f_burned_soi_limit — Maximum SOI angle for burned fuel

vector

Maximum start of injection angle for burned fuel, in degATDC.

Dependencies

To enable this parameter, for **Torque model**, select Torque Structure.

Exhaust

Exhaust Temperature - Simple Torque Lookup

Exhaust temperature table, f_t_exh — Lookup table


array

The lookup table for the exhaust temperature is a function of injected fuel mass and engine speed

$$T_{exh} = f_{T_{exh}}(F, N)$$

where:

- T_{exh} is exhaust temperature, in K.
- F is injected fuel mass, in mg per injection.
- N is engine speed, in rpm.

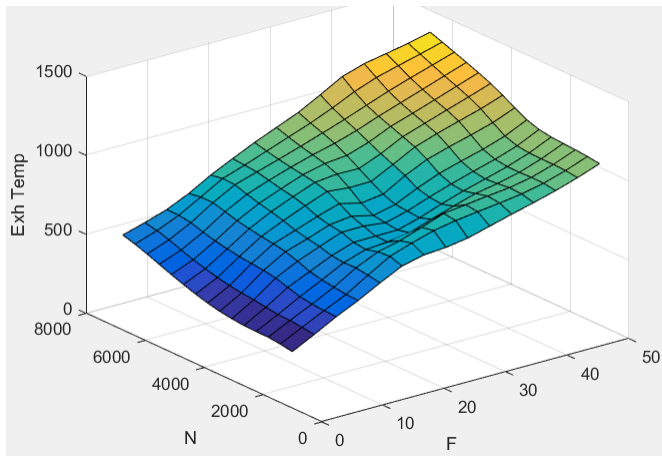

Dependencies

To enable this parameter, for **Torque model**, select Simple Torque Lookup.

Fuel mass per injection breakpoints, `f_t_exh_f_bpt` – Breakpoints array

Engine load breakpoints used for exhaust temperature lookup table, in mg per injection.

Dependencies

To enable this parameter, for **Torque model**, select Simple Torque Lookup.

Speed breakpoints, `f_t_exh_n_bpt` – Breakpoints array

Engine speed breakpoints used for exhaust temperature lookup table, in rpm.

Dependencies

To enable this parameter, for **Torque model**, select Simple Torque Lookup.


Exhaust Temperature - Torque Structure

Optimal exhaust manifold gas temperature, f_tqs_exht — Optimal exhaust manifold gas temperature

array

The optimal exhaust manifold gas temperature lookup table, f_{Texh} , is a function of the engine speed engine speed and injected fuel mass, $Texh_{opt} = f_{Texh}(F,N)$, where:

- $Texh_{opt}$ is optimal exhaust manifold gas temperature, in K.
- F is compression stroke injected fuel mass, in mg per injection.
- N is engine speed, in rpm.

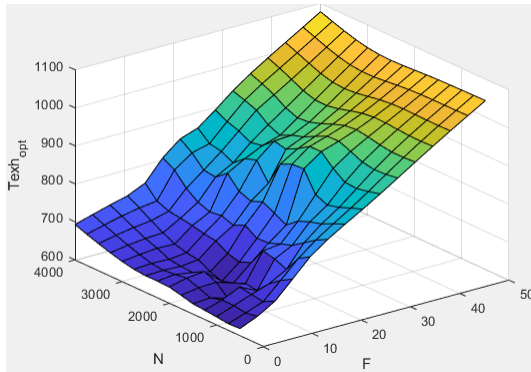

Dependencies


To enable this parameter, for **Torque model**, select Torque Structure.

Main start of injection timing exhaust temperature efficiency multiplier, f_tqs_exht_mainsoi_eff — Main SOI timing efficiency multiplier

array

The main start of injection (SOI) timing exhaust temperature efficiency multiplier lookup table, $f_{SOIexhteff}$, is a function of the engine speed engine speed and injected fuel mass, $SOI_{exhteff} = f_{SOIexhteff}(\Delta SOI,N)$, where:

- $SOI_{exhteff}$ is main SOI exhaust temperature efficiency multiplier, dimensionless.
- ΔSOI is main SOI timing relative to optimal timing, in degBTDC.
- N is engine speed, in rpm.

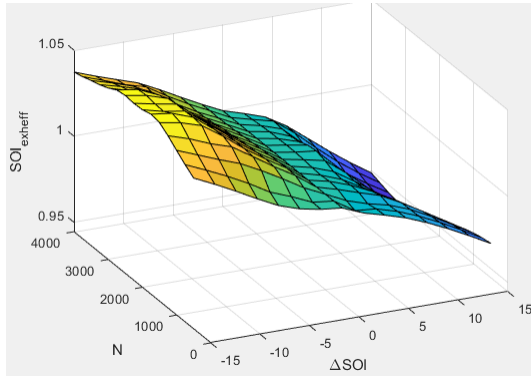


Dependencies

To enable this parameter, for **Torque model**, select Torque Structure.

Intake manifold gas pressure exhaust temperature efficiency multiplier, $f_{tqs_exht_map_eff}$ – Intake manifold efficiency multiplier array

The intake manifold gas pressure exhaust temperature efficiency multiplier lookup table, $f_{MAPexhteff}$, is a function of the intake manifold gas pressure ratio relative to optimal pressure ratio and lambda, $MAP_{exhteff} = f_{MAPexhteff}(MAP_{ratio}, \lambda)$, where:

- $MAP_{exhteff}$ is intake manifold gas pressure exhaust temperature efficiency multiplier, dimensionless.
- MAP_{ratio} is intake manifold gas pressure ratio relative to optimal pressure ratio, dimensionless.
- λ is intake manifold gas lambda, dimensionless.

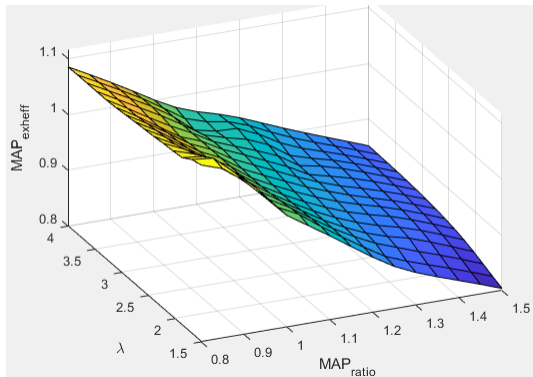


Dependencies

To enable this parameter, for **Torque model**, select Torque Structure.

Intake manifold gas temperature exhaust temperature efficiency multiplier, $f_{MATexheff}$ — Intake manifold efficiency multiplier array

The intake manifold gas temperature exhaust temperature efficiency multiplier lookup table, $f_{MATexheff}$, is a function of the engine speed and intake manifold gas temperature relative to optimal temperature, $MAT_{exheff} = f_{MATexheff}(\Delta MAT, N)$, where:

- MAT_{exheff} is intake manifold gas temperature exhaust temperature efficiency multiplier, dimensionless.
- ΔMAT is intake manifold gas temperature relative to optimal temperature, in K.
- N is engine speed, in rpm.

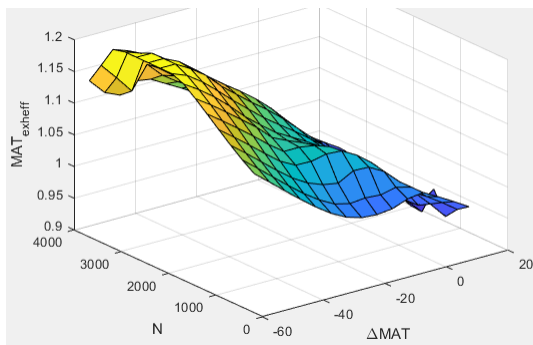


Dependencies

To enable this parameter, for **Torque model**, select Torque Structure.

Intake manifold gas oxygen exhaust temperature efficiency multiplier, $f_{tqs_exht_o2pct_eff}$ – Intake manifold efficiency multiplier array

The intake manifold gas oxygen exhaust temperature efficiency multiplier lookup table, $f_{O2P_{exheff}}$, is a function of the engine speed and intake manifold gas oxygen percent relative to optimal, $O2P_{exheff} = f_{O2P_{exheff}}(\Delta O2P, N)$, where:

- $O2P_{exheff}$ is intake manifold gas oxygen exhaust temperature efficiency multiplier, dimensionless.
- $\Delta O2P$ is intake gas oxygen percent relative to optimal, in percent.
- N is engine speed, in rpm.

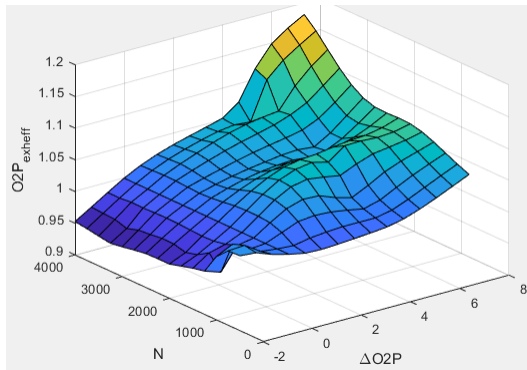


Dependencies

To enable this parameter, for **Torque model**, select Torque Structure.

Fuel rail pressure exhaust temperature efficiency multiplier, $f_{tqs_exht_fuelpress_eff}$ – Fuel rail pressure exhaust temperature efficiency multiplier array

The fuel rail pressure efficiency exhaust temperature multiplier lookup table, $f_{FUELP_{exheff}}$, is a function of the engine speed and fuel rail pressure relative to optimal breakpoints, $FUELP_{exheff} = f_{FUELP_{exheff}}(\Delta FUELP, N)$, where:

- $FUELP_{exheff}$ is fuel rail pressure exhaust temperature efficiency multiplier, dimensionless.
- $\Delta FUELP$ is fuel rail pressure relative to optimal, in MPa.
- N is engine speed, in rpm.

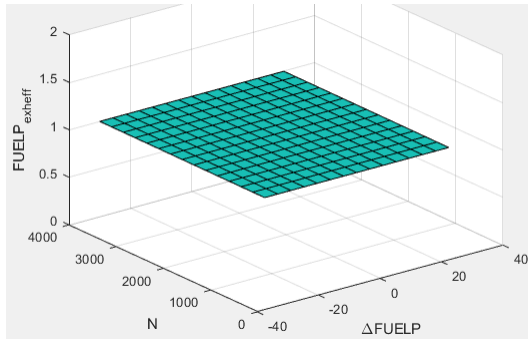

Dependencies

To enable this parameter, for **Torque model**, select Torque Structure.

Post-injection cylinder wall heat loss transfer coefficient, $f_{tqs_exht_post_inj_wall_htc}$ — Post-injection offset
scalar

Post-injection cylinder wall heat loss transfer coefficient, in W/K.

Dependencies

To enable this parameter, for **Torque model**, select Torque Structure.


Emissions

CO₂ mass fraction table, f_{CO2_frac} — Carbon dioxide (CO₂) emission lookup table
array

The CI Core Engine CO₂ emission mass fraction lookup table is a function of engine torque and engine speed, $CO_2\ Mass\ Fraction = f(Speed, Torque)$, where:

- $CO_2\ Mass\ Fraction$ is the CO₂ emission mass fraction, dimensionless.
- $Speed$ is engine speed, in rpm.

- *Torque* is engine torque, in N·m.

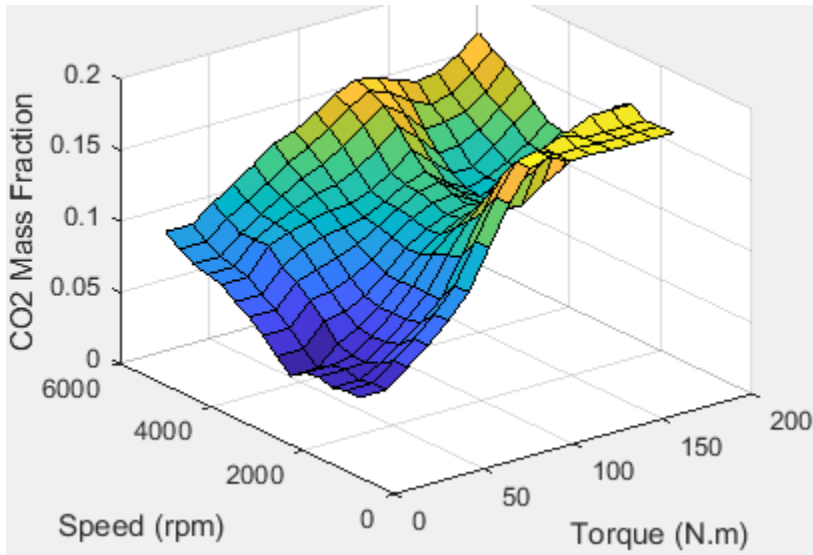

Dependencies


To enable this parameter, on the **Exhaust** tab, select **CO2**.

CO mass fraction table, `f_CO_frac` – Carbon monoxide (CO) emission lookup table

array

The CI Core Engine CO emission mass fraction lookup table is a function of engine torque and engine speed, $CO\ Mass\ Fraction = f(Speed, Torque)$, where:

- *CO Mass Fraction* is the CO emission mass fraction, dimensionless.
- *Speed* is engine speed, in rpm.
- *Torque* is engine torque, in N·m.

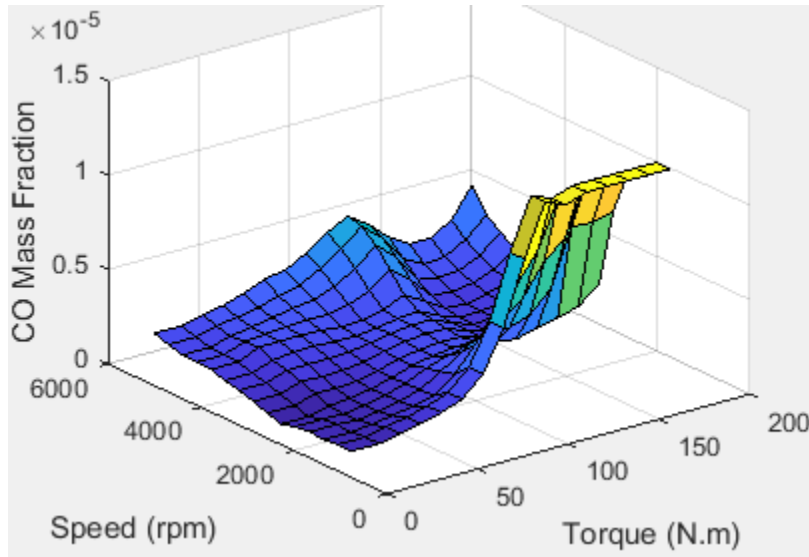

Dependencies


To enable this parameter, on the **Exhaust** tab, select **CO**.

HC mass fraction table, f_{HC_frac} — Hydrocarbon (HC) emission lookup table

array

The CI Core Engine HC emission mass fraction lookup table is a function of engine torque and engine speed, $HC\ Mass\ Fraction = f(Speed, Torque)$, where:

- $HC\ Mass\ Fraction$ is the HC emission mass fraction, dimensionless.
- $Speed$ is engine speed, in rpm.
- $Torque$ is engine torque, in N·m.

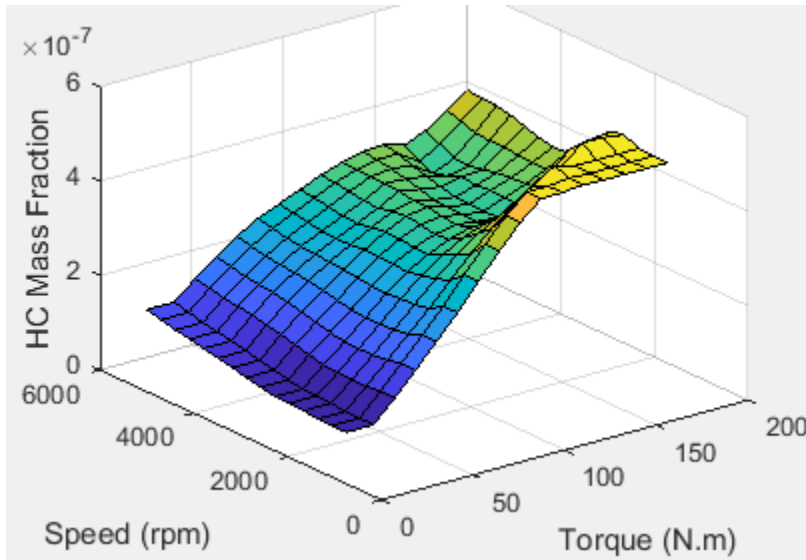

Dependencies


To enable this parameter, on the **Exhaust** tab, select **HC**.

NOx mass fraction table, `f_NOx_frac` — Nitric oxide and nitrogen dioxide (NOx) emission lookup table

array

The CI Core Engine NOx emission mass fraction lookup table is a function of engine torque and engine speed, $NOx\ Mass\ Fraction = f(Speed, Torque)$, where:

- *NOx Mass Fraction* is the NOx emission mass fraction, dimensionless.
- *Speed* is engine speed, in rpm.
- *Torque* is engine torque, in N·m.

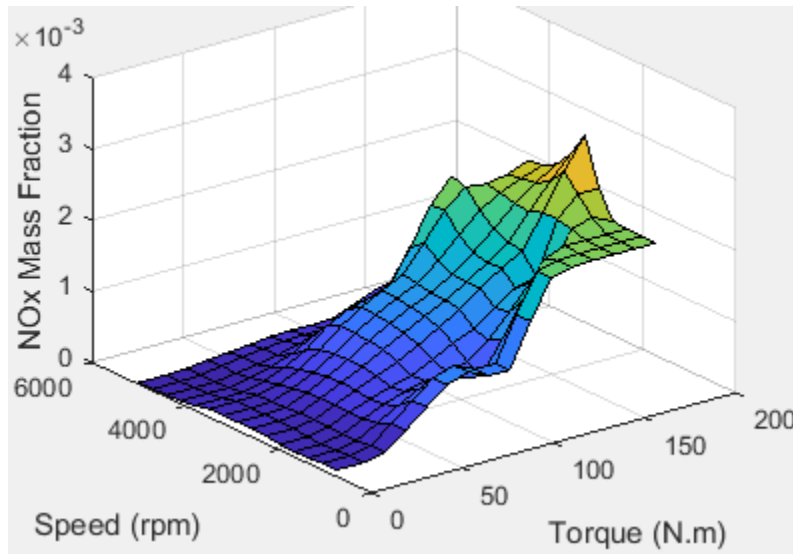

Dependencies

To enable this parameter, on the **Exhaust** tab, select **NOx**.

PM mass fraction table, `f_PM_frac` — Particulate matter (PM) emission lookup table

array

The CI Core Engine PM emission mass fraction lookup table is a function of engine torque and engine speed where:

- *PM* is the PM emission mass fraction, dimensionless.
- *Speed* is engine speed, in rpm.
- *Torque* is engine torque, in N·m.

Dependencies

To enable this parameter, on the **Exhaust** tab, select **PM**.

Engine speed breakpoints, `f_exhfrac_n_bpt` — Breakpoints

vector

Engine speed breakpoints used for the emission mass fractions lookup tables, in rpm.

Dependencies

To enable this parameter, on the **Exhaust** tab, select **CO2**, **CO**, **NOx**, **HC**, or **PM**.

Engine torque breakpoints, f_exhfrac_trq_bpt – Breakpoints

vector

Engine torque breakpoints used for the emission mass fractions lookup tables, in N·m.

Dependencies

To enable this parameter, on the **Exhaust** tab, select **CO2**, **CO**, **NOx**, **HC**, or **PM**.

Exhaust gas specific heat at constant pressure, cp_exh – Specific heat

scalar

Exhaust gas-specific heat, $C_{p_{exh}}$, in J/(kg·K).

Fuel**Stoichiometric air-fuel ratio, afr_stoich – Air-fuel ratio**

scalar

Air-fuel ratio, AFR .

Fuel lower heating value, fuel_lhv – Heating value

scalar

Fuel lower heating value, LHV , in J/kg.

Fuel specific gravity, fuel_sg – Specific gravity

scalar

Specific gravity of fuel, Sg_{fuel} , dimensionless.

References

- [1] Heywood, John B. *Internal Combustion Engine Fundamentals*. New York: McGraw-Hill, 1988.

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using Simulink® Coder™.

See Also

CI Controller | Mapped CI Engine

Topics

“CI Core Engine Air Mass Flow and Torque Production”


“Engine Calibration Maps”

Introduced in R2017a

Compressor

Compressor for boosted engines

Library: Powertrain Blockset / Propulsion / Combustion Engine
Components / Boost

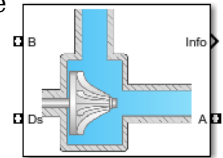


Description

The Compressor block simulates engine boost by using the drive shaft energy to increase the intake manifold pressure. The block is a component of supercharger and turbocharger models. The block uses two-way ports to connect to the inlet and outlet control volumes and the drive shaft. The control volumes provide the pressure, temperature, and specific enthalpy for the compressor to calculate the mass and energy flow rates. To calculate the torque and flow rates, the drive shaft provides the speed to the compressor. Typically, compressor manufacturers provide the mass flow rate and efficiency tables as a function of corrected speed and pressure ratio. You can specify the lookup tables to calculate the mass flow rate and efficiency. The block does not support reverse mass flow.

If you have Model-Based Calibration Toolbox, click **Calibrate Performance Maps** to virtually calibrate the mass flow rate and turbine efficiency lookup tables using measured data.

The mass flows from the inlet control volume to the outlet control volume.

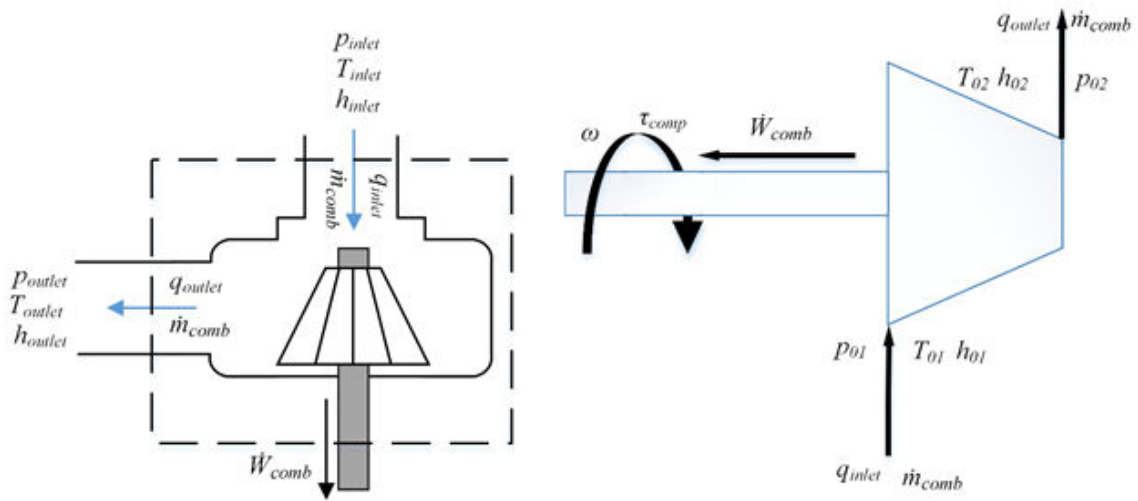

Virtual Calibration

If you have Model-Based Calibration Toolbox, click **Calibrate Performance Maps** to virtually calibrate the mass flow rate and turbine efficiency lookup tables using measured data. The dialog box steps through these tasks.

Task	Description						
Import compressor data	<p>Import this compressor data from a file. For more information, see “Using Data” (Model-Based Calibration Toolbox).</p> <ul style="list-style-type: none"> • Pressure ratio, dimensionless • Speed, rad/s • Mass flow rate, kg/s • Efficiency, dimensionless <p>Model-Based Calibration Toolbox limits the speed and pressure ratio breakpoint values to the maximum values in the file.</p> <p>To filter or edit the data, select Edit in Application. The Model-Based Calibration Toolbox Data Editor opens.</p>						
Generate response models	<p>Model-Based Calibration Toolbox fits the imported data to the response models.</p> <table border="1" data-bbox="476 835 1332 996"> <thead> <tr> <th data-bbox="476 835 706 873">Data</th> <th data-bbox="706 835 1332 873">Response Model</th> </tr> </thead> <tbody> <tr> <td data-bbox="476 873 706 951">Mass flow rate</td> <td data-bbox="706 873 1332 951">Extended ellipse response model described in <i>Modeling and Control of Engines and Drivelines²</i></td> </tr> <tr> <td data-bbox="476 951 706 996">Efficiency</td> <td data-bbox="706 951 1332 996">Polynomial</td> </tr> </tbody> </table> <p>To assess or adjust the response model fit, select Edit in Application. The Model-Based Calibration Toolbox Model Browser opens. For more information, see “Model Assessment” (Model-Based Calibration Toolbox).</p>	Data	Response Model	Mass flow rate	Extended ellipse response model described in <i>Modeling and Control of Engines and Drivelines²</i>	Efficiency	Polynomial
Data	Response Model						
Mass flow rate	Extended ellipse response model described in <i>Modeling and Control of Engines and Drivelines²</i>						
Efficiency	Polynomial						
Generate calibration	<p>Model-Based Calibration Toolbox calibrates the response model and generates calibrated tables.</p> <p>To assess or adjust the calibration, select Edit in Application. The Model-Based Calibration Toolbox CAGE Browser opens. For more information, see “Calibration Tables” (Model-Based Calibration Toolbox).</p>						

Task	Description
Update block parameters	<p>Update these mass flow rate and efficiency parameters with the calibration.</p> <ul style="list-style-type: none"> • Corrected mass flow rate table, $\dot{m}_{dot_corr_tbl}$ • Efficiency table, η_{comp_tbl} • Corrected speed breakpoints, w_corr_bpts1 • Pressure ratio breakpoints, Pr_bpts2

Thermodynamics

The block uses these equations to model the thermodynamics.

Calculation	Equations
Forward mass flow	$\dot{m}_{comp} > 0$ $p_{01} = p_{inlet}$ $p_{02} = p_{outlet}$ $T_{01} = T_{inlet}$ $h_{01} = h_{inlet}$
First law of thermodynamics	$\dot{W}_{comp} = \dot{m}_{comp} c_p (T_{01} - T_{02})$
Isentropic efficiency	$\eta_{comp} = \frac{h_{02s} - h_{01}}{h_{02} - h_{01}} = \frac{T_{02s} - T_{01}}{T_{02} - T_{01}}$
Isentropic outlet temperature, assuming ideal gas and constant specific heats	$T_{02s} = T_{01} \left(\frac{p_{02}}{p_{01}} \right)^{\frac{\gamma - 1}{\gamma}}$
Specific heat ratio	$\gamma = \frac{c_p}{c_p - R}$
Outlet temperature	$T_{02} = T_{01} + \frac{T_{01}}{\eta_{comb}} \left\{ \left(\frac{p_{02}}{p_{01}} \right)^{\frac{\gamma - 1}{\gamma}} - 1 \right\}$

Calculation	Equations
Heat flows	$q_{inlet} = \dot{m}_{comp} h_{01}$ $q_{outlet} = \dot{m}_{comp} h_{02} = \dot{m}_{comp} c_p T_{02}$
Corrected mass flow rate	$\dot{m}_{corr} = \dot{m}_{comp} \frac{\sqrt{T_{01}/T_{ref}}}{p_{01}/p_{ref}}$
Corrected speed	$\omega_{corr} = \frac{\omega}{\sqrt{T_{01}/T_{ref}}}$
Pressure ratio	$p_r = \frac{p_{01}}{p_{02}}$

The equations use these variables.

p_{inlet}, p_{01}	Inlet control volume total pressure
T_{inlet}, T_{01}	Inlet control volume total temperature
h_{inlet}, h_{01}	Inlet control volume total specific enthalpy
p_{outlet}, p_{02}	Outlet control volume total pressure
T_{outlet}	Outlet control volume total temperature
h_{outlet}	Outlet control volume total specific enthalpy
\dot{W}_{comp}	Drive shaft power
T_{02}	Outlet total temperature
h_{02}	Outlet total specific enthalpy
\dot{m}_{comp}	Mass flow rate through compressor
q_{inlet}	Inlet heat flow rate
q_{outlet}	Outlet heat flow rate
η_{comp}	Compressor isentropic efficiency
T_{02s}	Isentropic outlet total temperature
h_{02s}	Isentropic outlet total specific enthalpy
R	Ideal gas constant
c_p	Specific heat at constant pressure

γ	Specific heat ratio
\dot{m}_{corr}	Corrected mass flow rate
ω	Drive shaft speed
ω_{corr}	Corrected drive shaft speed
T_{ref}	Lookup table reference temperature
P_{ref}	Lookup table reference pressure
τ_{comp}	Compressor drive shaft torque
p_r	Pressure ratio
$\eta_{comb, tbl}$	Compressor efficiency 3-D lookup table
$\dot{m}_{corr, tbl}$	Corrected mass flow rate 3-D lookup table
$\omega_{corr, bpts1}$	Corrected speed breakpoints
$p_r, bpts2$	Pressure ratio breakpoints

Power Accounting

For the power accounting, the block implements these equations.

Bus Signal		Description	Equations
PwrIn fo	PwrTrnsfrd — Power transferred between blocks <ul style="list-style-type: none"> • Positive signals indicate flow into block • Negative signals indicate flow out of block 	PwrDriveshft	Power transmitted from the shaft $-\dot{W}_{turb}$
		PwrHeatFlwIn	Heat flow rate at port A q_{outlet}
		PwrHeatFlwOut	Heat flow rate at port B q_{outlet}

Bus Signal		Description	Equations
PwrNotTrnsfrd — Power crossing the block boundary, but not transferred	PwrLoss	Power loss	$-q_{inlet}$ $-q_{outlet}$ $+ \dot{W}_{turb}$
<ul style="list-style-type: none"> • Positive signals indicate an input • Negative signals indicate a loss 			
PwrStored — Stored energy rate of change	<i>Not used</i>		
<ul style="list-style-type: none"> • Positive signals indicate an increase • Negative signals indicate a decrease 			

The equations use these variables.

\dot{W}_{turb}	Drive shaft power
q_{outlet}	Total outlet heat flow rate
q_{inlet}	Total inlet heat flow rate

Ports

Input

Ds — Drive shaft speed

two-way connector port

ShftSpd — Signal containing the drive shaft angular speed, ω , in rad/s.

A — Inlet pressure, temperature, enthalpy, mass fractions

two-way connector port

Bus containing the inlet control volume:

- InPrs — Pressure, p_{inlet} , in Pa
- InTemp — Temperature, T_{inlet} , in K
- InEnth — Specific enthalpy, h_{inlet} , in J/kg

B — Outlet pressure, temperature, enthalpy, mass fractions

two-way connector port

Bus containing the outlet control volume:

- OutPrs — Pressure, p_{outlet} , in Pa
- OutTemp — Temperature, T_{outlet} , in K
- OutEnth — Specific enthalpy, h_{outlet} , in J/kg

Output

Info — Bus signal

bus

Bus signal containing these block calculations.

Signal			Description	Units
CmprsOutletTemp			Temperature exiting the compressor	K
DriveshaftPwr			Drive shaft power	W
DriveshaftTrq			Drive shaft torque	N·m
CmprsMassFlw			Mass flow rate through compressor	kg/s
PrsRatio			Pressure ratio	N/A
DriveshaftCorrSpd			Corrected drive shaft speed	rad/s
CmprsEff			Compressor isentropic efficiency	N/A
CorrMassFlw			Corrected mass flow rate	kg/s
PwrInfo	PwrTrnsfrd	PwrDriveshaft	Power transmitted from the shaft	W
		PwrHeatFlwIn	Heat flow rate at port A	W
		PwrHeatFlwOut	Heat flow rate at port B	W

Signal		Description	Units	
	PwrNotTrnsfrd	PwrLoss	Power loss	W
	PwrStored		<i>Not used</i>	W

Ds — Drive shaft torque

two-way connector port

Trq — Signal containing the drive shaft torque, τ_{comp} , in N·m.

A — Inlet mass flow rate, heat flow rate, temperature, mass fractions

two-way connector port

Bus containing:

- MassFlwRate — Mass flow rate through inlet, \dot{m}_{comp} , in kg/s
- HeatFlwRate — Inlet heat flow rate, q_{inlet} , in J/s
- Temp — Inlet temperature, in K
- MassFrac — Inlet mass fractions, dimensionless.

Specifically, a bus with these mass fractions:

- O2MassFrac — Oxygen
- N2MassFrac — Nitrogen
- UnbrndFuelMassFrac — Unburned fuel
- CO2MassFrac — Carbon dioxide
- H2OMassFrac — Water
- COMassFrac — Carbon monoxide
- NOMassFrac — Nitric oxide
- NO2MassFrac — Nitrogen dioxide
- NOxMassFrac — Nitric oxide and nitrogen dioxide
- PmMassFrac — Particulate matter
- AirMassFrac — Air
- BrndGasMassFrac — Burned gas

B — Outlet mass flow rate, heat flow rate, temperature, mass fractions

two-way connector port

Bus containing:

- `MassFlwRate` — Outlet mass flow rate, \dot{m}_{comp} , in kg/s
- `HeatFlwRate` — Outlet heat flow rate, q_{outlet} , in J/s
- `Temp` — Outlet temperature, in K
- `MassFrac` — Outlet mass fractions, dimensionless.

Specifically, a bus with these mass fractions:

- `O2MassFrac` — Oxygen
- `N2MassFrac` — Nitrogen
- `UnbrndFuelMassFrac` — Unburned fuel
- `CO2MassFrac` — Carbon dioxide
- `H2OMassFrac` — Water
- `COMassFrac` — Carbon monoxide
- `NOMassFrac` — Nitric oxide
- `NO2MassFrac` — Nitrogen dioxide
- `NOxMassFrac` — Nitric oxide and nitrogen dioxide
- `PmMassFrac` — Particulate matter
- `AirMassFrac` — Air
- `BrndGasMassFrac` — Burned gas

Parameters

Performance Tables

Calibrate Performance Maps — Calibrate tables with measured data selection


If you have Model-Based Calibration Toolbox, click **Calibrate Performance Maps** to virtually calibrate the mass flow rate and turbine efficiency lookup tables using measured data. The dialog box steps through these tasks.

Task	Description						
Import compressor data	<p>Import this compressor data from a file. For more information, see “Using Data” (Model-Based Calibration Toolbox).</p> <ul style="list-style-type: none"> • Pressure ratio, dimensionless • Speed, rad/s • Mass flow rate, kg/s • Efficiency, dimensionless <p>Model-Based Calibration Toolbox limits the speed and pressure ratio breakpoint values to the maximum values in the file.</p> <p>To filter or edit the data, select Edit in Application. The Model-Based Calibration Toolbox Data Editor opens.</p>						
Generate response models	<p>Model-Based Calibration Toolbox fits the imported data to the response models.</p> <table border="1" data-bbox="476 835 1332 996"> <thead> <tr> <th data-bbox="476 835 706 874">Data</th> <th data-bbox="706 835 1332 874">Response Model</th> </tr> </thead> <tbody> <tr> <td data-bbox="476 874 706 951">Mass flow rate</td> <td data-bbox="706 874 1332 951">Extended ellipse response model described in <i>Modeling and Control of Engines and Drivelines²</i></td> </tr> <tr> <td data-bbox="476 951 706 996">Efficiency</td> <td data-bbox="706 951 1332 996">Polynomial</td> </tr> </tbody> </table> <p>To assess or adjust the response model fit, select Edit in Application. The Model-Based Calibration Toolbox Model Browser opens. For more information, see “Model Assessment” (Model-Based Calibration Toolbox).</p>	Data	Response Model	Mass flow rate	Extended ellipse response model described in <i>Modeling and Control of Engines and Drivelines²</i>	Efficiency	Polynomial
Data	Response Model						
Mass flow rate	Extended ellipse response model described in <i>Modeling and Control of Engines and Drivelines²</i>						
Efficiency	Polynomial						
Generate calibration	<p>Model-Based Calibration Toolbox calibrates the response model and generates calibrated tables.</p> <p>To assess or adjust the calibration, select Edit in Application. The Model-Based Calibration Toolbox CAGE Browser opens. For more information, see “Calibration Tables” (Model-Based Calibration Toolbox).</p>						

Task	Description
Update block parameters	Update these mass flow rate and efficiency parameters with the calibration. <ul style="list-style-type: none"> • Corrected mass flow rate table, <code>mdot_corr_tbl</code> • Efficiency table, <code>eta_comp_tbl</code> • Corrected speed breakpoints, <code>w_corr_bpts1</code> • Pressure ratio breakpoints, <code>Pr_bpts2</code>

Corrected mass flow rate table, `mdot_corr_tbl` — Lookup table array


Corrected mass flow rate lookup table, $\dot{m}_{corr, tbl}$, as a function of corrected driveshaft speed, ω_{corr} , and pressure ratio, p_r , in kg/s.

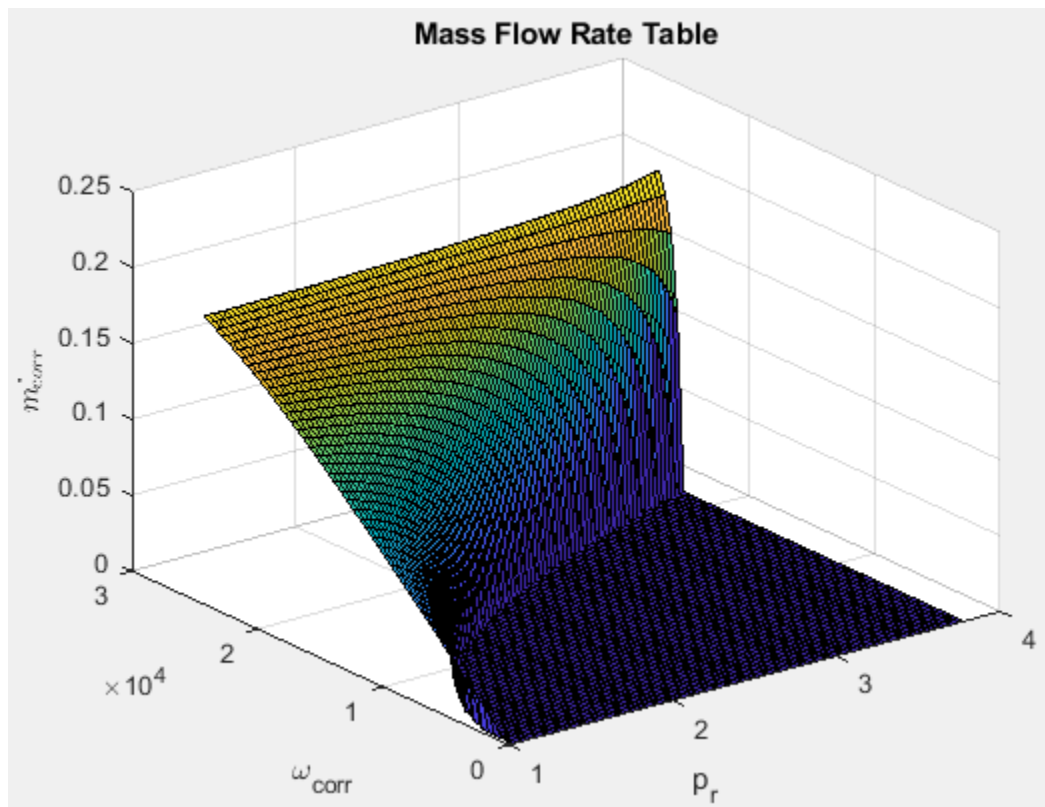

Efficiency table, eta_comp_tbl – Lookup table

array

Efficiency lookup table, $\eta_{comb,tbl}$, as a function of corrected driveshaft speed, ω_{corr} , and pressure ratio, p_r , dimensionless.

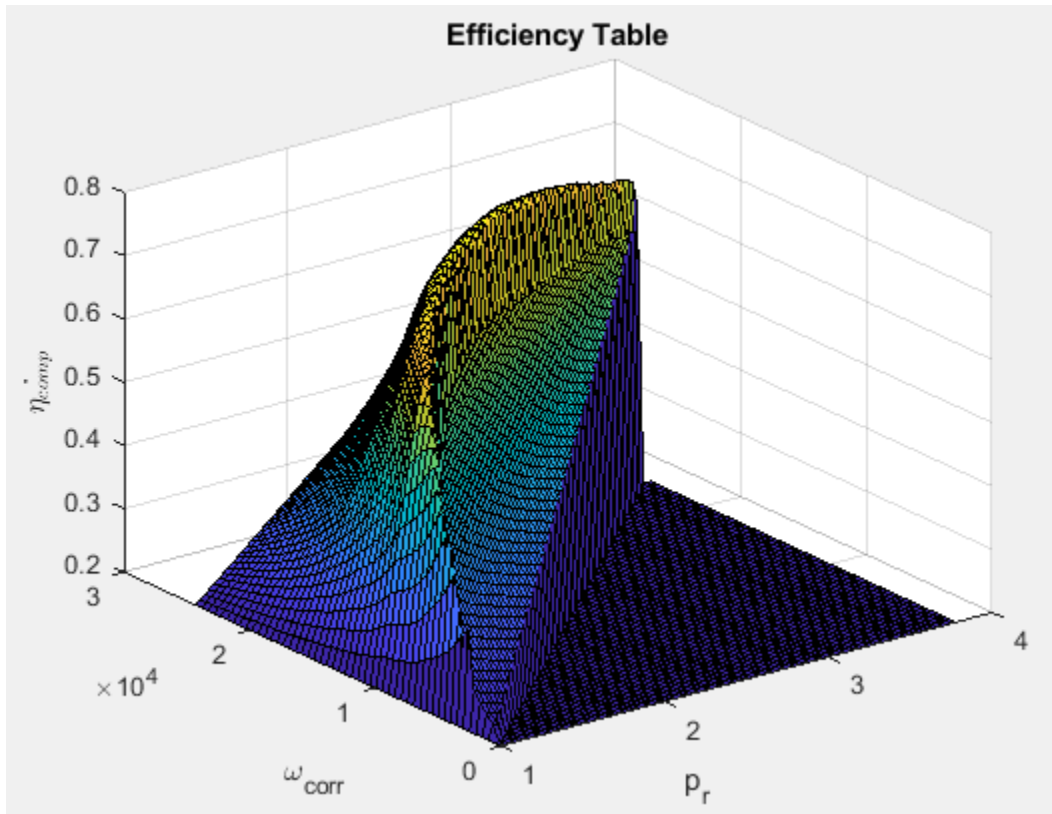

Corrected speed breakpoints, w_corr_bpts1 — Breakpoints
vector

Corrected drive shaft speed breakpoints, $\omega_{corr, bpts1}$, in rad/s.

Pressure ratio breakpoints, Pr_bpts2 — Breakpoints
vector

Pressure ratio breakpoints, $p_{r, bpts2}$.

Reference temperature, T_ref — Reference
scalar

Lookup table reference temperature, T_{ref} , in K.

Reference pressure, P_ref — Reference
scalar

Lookup table reference pressure, P_{ref} , in Pa.

Gas Properties**Ideal gas constant, R — Constant**
scalar

Ideal gas constant, R , in J/(kg*K).

Specific heat at constant pressure, cp — Specific heat
scalar

Specific heat at constant pressure, c_p , in J/(kg*K).

References

- [1] Heywood, John B. *Internal Combustion Engine Fundamentals*. New York: McGraw-Hill, 1988.
- [2] Eriksson, Lars and Lars Nielsen. *Modeling and Control of Engines and Drivelines*. Chichester, West Sussex, United Kingdom: John Wiley & Sons Ltd, 2014.

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using Simulink® Coder™.

See Also

Two-Way Connection | Boost Drive Shaft | Turbine

Topics

“Model-Based Calibration Toolbox”

Introduced in R2017a

Control Volume System

Constant volume open thermodynamic system with heat transfer

Library: Powertrain Blockset / Propulsion / Combustion Engine
Components / Fundamental Flow



Description

The Control Volume System block models a constant volume open thermodynamic system with heat transfer. The block uses the conservation of mass and energy, assuming an ideal gas, to determine the pressure and temperature. The block implements an automotive-specific Constant Volume Pneumatic Chamber block that includes thermal effects related to the under hood of passenger vehicles. You can specify heat transfer models:

- Constant
- External input
- External wall convection

You can use the Control Volume System block to represent engine components that contain volume, including pipes and manifolds.

Thermodynamics

The Control Volume System block implements a constant volume chamber containing an ideal gas. To determine the rate changes in temperature and pressure, the block uses the continuity equation and the first law of thermodynamics.

$$\frac{dT_{vol}}{dt} = \frac{RT_{vol}}{c_v V_{ch} P_{vol}} (\sum (q_i - T_{vol} c_v \dot{m}_i) - Q_{wall})$$

$$\frac{dP_{vol}}{dt} = \frac{P_{vol}}{T_{vol}} \frac{dT_{vol}}{dt} + \frac{RT_{vol}}{V_{ch}} \sum \dot{m}_i$$

The block uses this equation for the volume-specific enthalpy.

$$h_{vol} = c_p T_{vol}$$

The equations use these variables.

\dot{m}_i	Mass flow rate at port
q_i	Heat flow rate at port
V_{ch}	Chamber volume
P_{vol}	Absolute pressure in the chamber
R	Ideal gas constant
c_v	Specific heat at constant volume
T_{vol}	Absolute gas temperature
Q_{wall}	Wall heat transfer rate
h_{vol}	Volume-specific enthalpy
c_p	Specific heat capacity

Mass Fractions

The Control Volume Source block is part of a flow network. Blocks in the network determine the mass fractions that the block will track during simulation. The block can track these mass fractions:

- O2 — Oxygen
- N2 — Nitrogen
- UnburnedFuel — Unburned fuel
- CO2 — Carbon dioxide
- H2O — Water
- CO — Carbon monoxide
- NO — Nitric oxide
- NO2 — Nitrogen dioxide
- PM — Particulate matter
- Air — Air
- BurnedGas — Burned gas

Using the conservation of mass for each gas constituent, this equation determines the rate change:


$$\frac{dy_{vol,j}}{dt} = \frac{RT_{vol}}{P_{vol}V_{ch}} \left(\sum \dot{m}_i y_{i,j} + y_{vol,j} \sum \dot{m}_i \right)$$

The equations use these variables.

V_{ch}	Chamber volume
P_{vol}	Absolute pressure in the chamber
R	Ideal gas constant
T_{vol}	Absolute gas temperature
$y_{i,j}$	I-th port mass fraction for $j = O_2, N_2, \text{unburned fuel}, CO_2, H_2O, CO, NO, NO_2, PM, \text{air}, \text{and burned gas}$
$y_{vol,j}$	Control volume mass fraction for $j = O_2, N_2, \text{unburned fuel}, CO_2, H_2O, CO, NO, NO_2, PM, \text{air}, \text{and burned gas}$
\dot{m}_i	Mass flow rate for $i = O_2, N_2, \text{unburned fuel}, CO_2, H_2O, CO, NO, NO_2, PM, \text{air}, \text{and burned gas}$

External Wall Convection Heat Transfer Model

To calculate the heat transfer, you can configure the Control Volume Source block to calculate the heat transfer across the wall of the control volume.

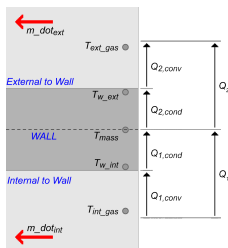

The block implements these equations to calculate the heat transfer, Q_1 , from the internal control volume gas to the internal wall depth, D_{int_cond} .

$$Q_1 = Q_{1,conv} = Q_{1,cond}$$

$$Q_{1,conv} = h_{int}(x_{int}) \cdot A_{int_conv} \cdot (T_{int_gas} - T_{w_int})$$

$$Q_{1,cond} = k_{int} \cdot \frac{A_{int_cond}}{D_{int_cond}} \cdot (T_{w_int} - T_{mass})$$

The block implements these equations to calculate the heat transfer, Q_2 , from the external wall depth, D_{ext_cond} to the external gas.

$$Q_2 = Q_{2,conv} = h_{ext}(x_{ext}) \cdot A_{ext_conv} \cdot (T_{w_ext} - T_{ext_gas})$$

$$Q_{2,cond} = k_{ext} \cdot \frac{A_{ext_cond}}{D_{ext_cond}} \cdot (T_{mass} - T_{w_ext})$$

This equation expresses the heat stored in the thermal mass.

$$\frac{dT_{mass}}{dt} = \frac{Q_1 - Q_2}{c_{pwall} m_{wall}}$$

The block determines the interior convection heat transfer coefficient using a lookup table that is a function of the average mass flow rate.

$$\dot{m}_{int_gas} = \frac{1}{2} \sum |\dot{m}_i|$$

The equations use these variables.

Q_1	Heat flow from the internal gas to a specified wall depth
$Q_{1,conv}$	Heat flow convection from the internal gas to the internal wall
$Q_{1,cond}$	Conduction heat transfer rate
Q_2	Heat transfer rate
$Q_{2,conv}$	Convection heat transfer
$Q_{2,cond}$	Heat flow conduction from the external middle portion of the wall to the external wall
Q_{mass}	Heat stored in thermal mass
h_{int}	Internal convection heat transfer coefficient
x_{int}	Internal mass flow rate breakpoints
A_{int_conv}	Internal flow convection area
T_{int_gas}	Temperature of the gas inside the chamber
T_{w_int}	Temperature of the inside wall of the chamber
k_{int}	Internal wall thermal conductivity
A_{int_cond}	Internal conduction area

D_{int_cond}	Internal wall thickness
h_{ext}	External convection heat transfer coefficient
x_{ext}	External velocity breakpoints
A_{ext_conv}	External convection area
T_{ext_gas}	External gas temperature
T_{w_ext}	Temperature of the external wall of the chamber
k_{ext}	External wall thermal conductivity
A_{ext_cond}	External conduction area
D_{ext_cond}	External wall thickness
T_{mass}	Temperature of the thermal mass
c_{p_wall}	Wall heat capacity
m_{wall}	Thermal mass
Flw_{spd}	External flow velocity
\dot{m}_{int_gas}	Average internal mass flow rate

Power Accounting

For the power accounting, the block implements these equation based on the number of inlet and outlet ports.

Bus Signal		Description	Equations
PwrInfo	PwrTrnsfrd — Power transferred between blocks <ul style="list-style-type: none"> Positive signals indicate flow into block Negative signals indicate flow out of block 	PwrHeatFlwi	Port i heat flow q_i

Bus Signal		Description	Equations
PwrI nfo	PwrNotTrnsfrd — Power crossing the block boundary, but not transferred <ul style="list-style-type: none"> • Positive signals indicate an input • Negative signals indicate a loss 	PwrHeatTrnsfr	Heat transfer rate from wall to control volume $-Q_{wall}$
	PwrStored — Stored energy rate of change <ul style="list-style-type: none"> • Positive signals indicate an increase • Negative signals indicate a decrease 	PwrHeatStored	Rate of heat stored in the control volume $\left(\sum (q_i) - Q_{wall} \right)$

For example, if you configure your block with 3 input ports and 2 outlet ports, the block implements these equations

Bus Signal		Description	Equations
PwrI nfo	PwrTrnsfrd — Power transferred between blocks <ul style="list-style-type: none"> • Positive signals indicate flow into block • Negative signals indicate flow out of block 	PwrHeatFlw1	Inlet port 1 heat flow q_1
		PwrHeatFlw2	Inlet port 2 heat flow q_2
		PwrHeatFlw3	Inlet port 3 heat flow q_3
		PwrHeatFlw4	Outlet port 4 heat flow q_4
		PwrHeatFlw5	Outlet port 5 heat flow q_5

Bus Signal		Description	Equations
PwrNotTrnsfrd — Power crossing the block boundary, but not transferred	PwrHeatTrnsfr	Heat transfer rate from wall to control volume	$-Q_{wall}$
<ul style="list-style-type: none"> • Positive signals indicate an input • Negative signals indicate a loss 			
PwrStored — Stored energy rate of change	PwrHeatStored	Rate of heat stored in the control volume	$\left(\sum (q_i) - Q_{wall} \right)$
<ul style="list-style-type: none"> • Positive signals indicate an increase • Negative signals indicate a decrease 			

Ports

Input

C — Inlet mass flow rate, heat flow rate, mass fractions

two-way connector port

Bus containing:

- MassFlw — Mass flow rate through inlet, in kg/s
- HeatFlw — Inlet heat flow rate, in J/s
- MassFrac — Inlet mass fractions, dimensionless.

Specifically, a bus with these mass fractions:

- O2MassFrac — Oxygen
- N2MassFrac — Nitrogen
- UnbrndFuelMassFrac — Unburned fuel
- CO2MassFrac — Carbon dioxide

- H2OMassFrac — Water
- COMassFrac — Carbon monoxide
- NOMassFrac — Nitric oxide
- NO2MassFrac — Nitrogen dioxide
- NOxMassFrac — Nitric oxide and nitrogen dioxide
- PmMassFrac — Particulate matter
- AirMassFrac — Air
- BrndGasMassFrac — Burned gas

Dependencies

To create input ports, specify the **Number of inlet ports** parameter.

HeatTrnsfrRate — Heat transfer

scalar

External heat transfer input to control volume, q_{he} , in Kg/s.

Dependencies

To create this port, select External input for the **Heat transfer model** parameter.

ExtnlFlwVel — External flow velocity

scalar

External flow velocity, Flw_{spd} , in m/s.

Dependencies

To create this port, select External wall convection for the **Heat transfer model** parameter.

ExtnlTemp — Ambient temperature, K

scalar

Dependencies

To create this port, select External wall convection for the **Heat transfer model** parameter.

Output

Info – Bus signal

bus

Bus signal containing these block calculations.

Signal		Description	Units	
Vol	Prs	Volume pressure	Pa	
	Temp	Volume temperature	K	
	Enth	Volume specific enthalpy	J/kg	
	Species	O2MassFrac	Oxygen mass fraction	NA
		N2MassFrac	Nitrogen mass fraction	NA
		UnbrndFuelMassFrac	Unburned gas mass fraction	NA
		CO2MassFrac	Carbon dioxide mass fraction	NA
		H2OMassFrac	Water mass fraction	NA
		COMassFrac	Carbon monoxide mass fraction	NA
		NOMassFrac	Nitric oxide mass fraction	NA
		NO2MassFrac	Nitrogen dioxide mass fraction	NA
		NOxMassFrac	Nitric oxide and nitrogen dioxide mass fraction	NA
		PmMassFrac	Particulate matter mass fraction	NA
AirMassFrac	Air mass fraction	NA		
BrndGasMassFrac	Burned gas mass fraction	NA		

Signal		Description	Units	
HeatTrnsfr	HeatTrnsfrRate	Wall heat transfer rate	J/s	
	MassFlw	Average internal mass flow rate	kg/s	
	IntrnTemp	Temperature of gas inside chamber	K	
PwrInfo	PwrTrnsfrd	PwrHeatFlwi	Port <i>i</i> heat flow	W
	PwrNotTrnsfrd	PwrHeatTrnsfr	Heat transfer rate from wall to control volume	W
	PwrStored	PwrHeatStored	Rate of heat stored in the control volume	W

C — Outlet pressure, temperature, enthalpy, mass fractions

two-way connector port

Bus containing the outlet control volume:

- Prs — Chamber pressure, in Pa
- Temp — Gas temperature, in K
- Enth — Specific enthalpy, in J/kg
- MassFrac — Mass fractions, dimensionless.

Specifically, a bus with these mass fractions:

- O2MassFrac — Oxygen
- N2MassFrac — Nitrogen
- UnbrndFuelMassFrac — Unburned fuel
- CO2MassFrac — Carbon dioxide
- H2OMassFrac — Water
- COMassFrac — Carbon monoxide
- NOMassFrac — Nitric oxide
- NO2MassFrac — Nitrogen dioxide

- NOxMassFrac — Nitric oxide and nitrogen dioxide
- PmMassFrac — Particulate matter
- AirMassFrac — Air
- BrndGasMassFrac — Burned gas

Dependencies

To create outlet ports, specify the **Number of outlet ports** parameter.

Parameters

Block Options

Number of inlet ports — Number of ports

1 (default) | 0 | 2 | 3 | 4

Number of inlet ports.

Dependencies

To create inlet ports, specify the number.

Number of outlet ports — Number of ports

1 (default) | 0 | 2 | 3 | 4

Number of outlet ports.

Dependencies

To create outlet ports, specify the number.

Heat transfer model — Select model

Constant (default) | External input | External wall convection

Dependencies

Selecting Constant or External wall convection enables the **Heat Transfer** parameters.

Image type — Icon color

Cold (default) | Hot

Select color for block icon:

- Cold for blue
- Hot for red

General

Chamber volume, V_{ch} — Volume

scalar

Chamber volume, V_{ch} , in m^3 .

Initial chamber pressure, P_{init} — Pressure

scalar

Initial chamber pressure, P_{vol} , in Pa.

Initial chamber temperature, T_{init} — Temperature

scalar

Initial chamber temperature, T_{vol} , in K.

Ideal gas constant, R — Ideal gas constant

scalar

Ideal gas constant, R , in $J/(kg \cdot K)$.

Specific heat capacity, c_p — Specific heat

scalar

Specific heat capacity, c_p , in $J/(kg \cdot K)$.

Heat Transfer

Heat transfer rate, q_{he} — Rate

scalar

Constant heat transfer rate, q_{he} , in J/s .

Dependencies

To enable this parameter, select Constant for the **Heat transfer model** parameter.

External convection heat transfer coefficient, ext_tbl – Manifold external air

vector

External convection heat transfer coefficient, h_{ext} , in $W/(m^2K)$.**Dependencies**To enable this parameter, select External wall convection for the **Heat transfer model** parameter.**External velocity breakpoints, ext_bpts – Manifold external air**

linspace(0,180,4) (default)

External velocity breakpoints, x_{ext} , in m/s.**Dependencies**To enable this parameter, select External wall convection for the **Heat transfer model** parameter.**External convection area, Aext_conv – Manifold external air**

scalar

External convection area, A_{ext_conv} , in m^2 .**Dependencies**To enable this parameter, select External wall convection for the **Heat transfer model** parameter.**Thermal mass, m_wall – Manifold wall general**

scalar

Thermal mass, m_{wall} , in kg.**Dependencies**To enable this parameter, select External wall convection for the **Heat transfer model** parameter.**Wall heat capacity, cp_wall – Manifold wall general**

scalar

Wall heat capacity, c_{p_wall} , in $J/(kg \cdot K)$.

Dependencies

To enable this parameter, select External wall convection for the **Heat transfer model** parameter.

Initial mass temperature, Tmass — Manifold wall general
scalar

Initial mass temperature, T_{mass} , in K.

Dependencies

To enable this parameter, select External wall convection for the **Heat transfer model** parameter.

External wall thickness, Dext_cond — Manifold wall external
scalar

External wall thickness, D_{ext_cond} , in m.

Dependencies

To enable this parameter, select External wall convection for the **Heat transfer model** parameter.

External conduction area, Aext_cond — Manifold wall external
scalar

External conduction area, A_{ext_cond} , in m^2 .

Dependencies

To enable this parameter, select External wall convection for the **Heat transfer model** parameter.

External wall thermal conductivity, kint — Manifold wall external
scalar

External wall thermal conductivity, k_{ext} , in $W/(m \cdot K)$.

Dependencies

To enable this parameter, select External wall convection for the **Heat transfer model** parameter.

Internal wall thickness, D_{int_cond} – Manifold wall internal
scalar

Internal wall thickness, D_{int_cond} , in m.

Dependencies

To enable this parameter, select External wall convection for the **Heat transfer model** parameter.

Internal conduction area, A_{int_cond} – Manifold wall internal
scalar

Internal conduction area, A_{int_cond} , in m^2 .

Dependencies

To enable this parameter, select External wall convection for the **Heat transfer model** parameter.

Internal wall thermal conductivity, k_{int} – Manifold wall internal
scalar

Internal wall thermal conductivity, k_{int} , in $W/(m \cdot K)$.

Dependencies

To enable this parameter, select External wall convection for the **Heat transfer model** parameter.

Internal convection heat transfer coefficient, int_tbl – Manifold internal air
vector

Internal convection heat transfer coefficient, h_{int} , in $W/(m^2K)$.

Dependencies

To enable this parameter, select External wall convection for the **Heat transfer model** parameter.

Internal mass flow rate breakpoints, int_bpts – Manifold internal air
vector

Internal velocity breakpoints, x_{int} , in kg/s.

Dependencies

To enable this parameter, select External wall convection for the **Heat transfer model** parameter.

Internal flow convection area, A_{int_conv} — Manifold internal air scalar

Internal convection area, A_{int_conv} , in m^2 .

Dependencies

To enable this parameter, select External wall convection for the **Heat transfer model** parameter.

References

[1] Heywood, John B. *Internal Combustion Engine Fundamentals*. New York: McGraw-Hill, 1988.

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using Simulink® Coder™.

See Also

Constant Volume Pneumatic Chamber | Two-Way Connection | Flow Restriction | Heat Exchanger

Introduced in R2017a

Flow Boundary

Flow boundary for ambient temperature and pressure

Library: Powertrain Blockset / Propulsion / Combustion Engine
Components / Fundamental Flow



Description

The Flow Boundary block implements a flow boundary that typically represents ambient temperature and pressure. Engine models require flow boundaries at the intake inlet and exhaust outlet. In dynamic engine models, flow-modifying components (for example, flow restriction, turbines, and compressors) connect to control volumes and flow boundaries.

You can specify these block configurations:

- Constant pressure and temperature
- Externally input pressure and temperature

The Flow Boundary block outputs pressure, temperature, and specific enthalpy:

$$h = c_p T$$

The block models the mass fractions as dry air, resulting in these mass fractions:

- $y_{N_2} = 0.767$
- $y_{O_2} = .233$

The equation uses these variables.

T	Temperature
h	Specific enthalpy
c_p	Specific heat at constant pressure
y_{N_2}	Nitrogen mass fraction
y_{O_2}	Oxygen mass fraction

Power Accounting

For the power accounting, the block implements these equations.

Bus Signal		Description	Equations
PwrInfo	PwrTrnsfrd — Power transferred between blocks <ul style="list-style-type: none"> • Positive signals indicate flow into block • Negative signals indicate flow out of block 	PwrBndrFlw	Heat flow rate to flow restriction q_{orf}
	PwrNotTrnsfrd — Power crossing the block boundary, but not transferred <ul style="list-style-type: none"> • Positive signals indicate an input • Negative signals indicate a loss 	PwrEnv	Heat flow rate to environment $-q_{orf}$
	PwrStored — Stored energy rate of change <ul style="list-style-type: none"> • Positive signals indicate an increase • Negative signals indicate a decrease 	<i>Not used</i>	

Ports

Input

Prs — Pressure

scalar

External input pressure, P , in Pa.

Dependencies

To create this port, select External input for the **Pressure and temperature source** parameter.

Temp — Temperature

scalar

External input temperature, T , in K.

Dependencies

To create this port, select External input for the **Pressure and temperature source** parameter.

Output**Info — Bus signal**

bus

Bus signal containing these block calculations.

Signal			Description	Units
BndryPrs			Boundary pressure	Pa
BndryTemp			Boundary temperature	K
BndryEnth			Boundary specific enthalpy	J/kg
PwrInfo	PwrTrnsfrd	PwrBndryFlw	Heat flow rate to flow restriction	W
	PwrNotTrnsfrd	PwrEnv	Heat flow rate to environment	W
	PwrStored		<i>Not used</i>	

C — Boundary pressure, temperature, enthalpy, mass fractions

two-way connector port

Bus containing the flow boundary:

- Prs — Pressure, P , in Pa

- Temp — Temperature, T , in K
- Enth — Specific enthalpy, h , in J/kg
- MassFrac — Mass fractions, dimensionless.

Specifically, a bus with these mass fractions:

- O2MassFrac — Oxygen
- N2MassFrac — Nitrogen
- UnbrndFuelMassFrac — Unburned fuel
- CO2MassFrac — Carbon dioxide
- H2OMassFrac — Water
- COMassFrac — Carbon monoxide
- NOMassFrac — Nitric oxide
- NO2MassFrac — Nitrogen dioxide
- NOxMassFrac — Nitric oxide and nitrogen dioxide
- PmMassFrac — Particulate matter
- AirMassFrac — Air
- BrndGasMassFrac — Burned gas

Parameters

Block Options

Pressure and temperature source — Select source

External input (default) | Constant

Pressure and temperature source.

Dependencies

The table summarizes the parameter and port dependencies.

Value	Enables Parameters	Creates Ports
Constant	Pressure, Pcnst Temperature, Tcnst	None
External input	None	Prs Temp

Image type – Icon color

Cold (default) | Hot

Select color for block icon:

- Cold for blue
- Hot for red

Pressure, Pcnst – Constant

scalar

Constant pressure, P , in Pa.**Dependencies**

To enable this parameter, select Constant for the **Pressure and temperature source** parameter.

Temperature, Tcnst – Constant

scalar

Constant temperature, T , in K.**Dependencies**

To enable this parameter, select Constant for the **Pressure and temperature source** parameter.

Specific heat at constant pressure, cp – Constant, J/(kg(K))

scalar

Specific heat at constant pressure, in J/(kg·K).

References

- [1] Heywood, John B. *Internal Combustion Engine Fundamentals*. New York: McGraw-Hill, 1988.

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using Simulink® Coder™.

See Also


Compressor | Flow Restriction | Turbine

Introduced in R2017a

Flow Restriction

Isentropic ideal gas flow through an orifice

Library: Powertrain Blockset / Propulsion / Combustion Engine
Components / Fundamental Flow



Description

The Flow Restriction block models isentropic ideal gas flow through an orifice. The block uses the conservation of mass and energy to determine the mass flow rate. The flow velocity is limited by choked flow.

You can specify these orifice area models:

- Constant
- External input
- Throttle body geometry

Equations

The Flow Restriction block implements these equations.

Calculation	Equations
Standard orifice	$\dot{m}_{orf} = \Gamma \cdot \Psi(P_{ratio})$ $P_{ratio} = \frac{P_{downstr}}{P_{upstr}}$ $\Gamma = \frac{A_{eff} \cdot P_{upstr}}{\sqrt{R \cdot T_{upstr}}}$ $P_{cr} = \left(\frac{2}{\gamma + 1}\right)^{\frac{\gamma}{\gamma - 1}}$ $\Psi = \begin{cases} \sqrt{\gamma \left(\frac{2}{\gamma + 1}\right)^{\frac{\gamma + 1}{\gamma - 1}}} & P_{ratio} < P_{cr} \\ \sqrt{\frac{2\gamma}{\gamma - 1} \left(P_{ratio}^{\frac{2}{\gamma}} - P_{ratio}^{\frac{\gamma + 1}{\gamma}}\right)} & P_{cr} \leq P_{ratio} \leq P_{lim} \\ \frac{P_{ratio} - 1}{P_{lim} - 1} \sqrt{\frac{2\gamma}{\gamma - 1} \left(P_{lim}^{\frac{2}{\gamma}} - P_{lim}^{\frac{\gamma + 1}{\gamma}}\right)} & P_{lim} < P_{ratio} \end{cases}$
Constituent mass flow rates	$\dot{m}_i = \dot{m}_{orf} \mathcal{Y}_{upstr, i}$
Constant orifice area	$A_{eff} = A_{orf_cnst} \cdot Cd_{cnst}$
External input orifice area	$A_{eff} = A_{orf_ext} \cdot Cd_{ext}$
Throttle body geometry	$\theta_{thr} = Pct_{thr} \cdot \frac{90}{100}$ $A_{eff_thr} = \frac{\pi}{4} D_{thr}^2 Cd_{thr}(\theta_{thr})$
Heat flow rate	$q_{orf} = \dot{m}_{orf} h_{upstr}$

The equations use these variables.

A_{eff}, A_{eff_thr}	Effective orifice cross-sectional area
$A_{orf_cnst}, A_{orf_ext}$	Orifice area
Cd_{cnst}, Cd_{ext}	Discharge coefficient

R	Ideal gas constant
P_{cr}	Critical pressure at which choked flow occurs
γ	Ratio of specific heats
Γ	Flow function based on pressure ratio
P_{ratio}	Pressure ratio
P_{upstr}	Upstream orifice pressure
$P_{downstr}$	Downstream orifice pressure
P_{lim}	Pressure ratio limit to avoid singularities as the pressure ratio approaches 1
$y_{upstr,i}$	Upstream species mass fraction for $i = O_2, N_2, \text{unburned fuel}, CO_2, H_2O, CO, NO, NO_2, PM, \text{air}, \text{and burned gas}$
\dot{m}_i	Mass flow rate for $i = O_2, N_2, \text{unburned fuel}, CO_2, H_2O, CO, NO, NO_2, PM, \text{air}, \text{and burned gas}$
θ_{thr}	Throttle angle
Pct_{thr}	Percentage of throttle body that is open
C_{d_thr}	Throttle discharge coefficient
D_{thr}	Throttle body diameter at opening
\dot{m}_{orf}	Orifice mass flow
h_{upstr}	Upstream specific enthalpy
q_{orf}	Heat flow rate

Power Accounting

For the power accounting, the block implements these equations.

Bus Signal		Description	Equations
PwrInfo	PwrTrnsfrd — Power transferred between blocks <ul style="list-style-type: none"> Positive signals indicate flow into block 	PwrHeatFlw In	Heat flow rate at port A q_{orf}

Bus Signal		Description	Equations
<ul style="list-style-type: none"> Negative signals indicate flow out of block 	PwrHeatFlw Out	Heat flow rate at port B	$-q_{orf}$
PwrNotTrnsfrd — Power crossing the block boundary, but not transferred <ul style="list-style-type: none"> Positive signals indicate an input Negative signals indicate a loss 	<i>Not used</i>		
PwrStored — Stored energy rate of change <ul style="list-style-type: none"> Positive signals indicate an increase Negative signals indicate a decrease 	<i>Not used</i>		

Ports

Input

A — Inlet orifice pressure, temperature, enthalpy, mass fractions

two-way connector port

Bus containing orifice:

- Prs — Pressure, in Pa
- Temp — Temperature, in K
- Enth — Specific enthalpy, in J/kg
- MassFrac — Inlet mass fractions, dimensionless.

Specifically, a bus with these mass fractions:

- O2MassFrac — Oxygen
- N2MassFrac — Nitrogen
- UnbrndFuelMassFrac — Unburned fuel

- C02MassFrac — Carbon dioxide
- H20MassFrac — Water
- C0MassFrac — Carbon monoxide
- N0MassFrac — Nitric oxide
- N02MassFrac — Nitrogen dioxide
- N0xMassFrac — Nitric oxide and nitrogen dioxide
- PmMassFrac — Particulate matter
- AirMassFrac — Air
- BrndGasMassFrac — Burned gas

B — Outlet orifice pressure, temperature, enthalpy, mass fractions

two-way connector port

Bus containing orifice:

- Prs — Pressure, in Pa
- Temp — Temperature, in K
- Enth — Specific enthalpy, in J/kg
- MassFrac — Outlet mass fractions, dimensionless.

Specifically, a bus with these mass fractions:

- O2MassFrac — Oxygen
- N2MassFrac — Nitrogen
- UnbrndFuelMassFrac — Unburned fuel
- C02MassFrac — Carbon dioxide
- H20MassFrac — Water
- C0MassFrac — Carbon monoxide
- N0MassFrac — Nitric oxide
- N02MassFrac — Nitrogen dioxide
- N0xMassFrac — Nitric oxide and nitrogen dioxide
- PmMassFrac — Particulate matter
- AirMassFrac — Air

- BrndGasMassFrac — Burned gas

Area — Orifice area

scalar

External area input for orifice area, A_{orf_ext} , in m^2 .

Dependencies

To create this port, select External input for the **Orifice area model** parameter.

ThrPct — Throttle body percent open

scalar

Percentage of throttle body that is open, Pct_{thr} .

Dependencies

To create this port, select Throttle body geometry for the **Orifice area model** parameter.

Output

A — Inlet mass flow rate, heat flow rate, temperature

two-way connector port

Bus containing:

- MassFlw — Mass flow rate through inlet, in kg/s
- HeatFlw — Inlet heat flow rate, in J/s
- Temp — Inlet temperature, in K
- MassFrac — Inlet mass fractions, dimensionless.

Specifically, a bus with these mass fractions:

- O2MassFrac — Oxygen
- N2MassFrac — Nitrogen
- UnbrndFuelMassFrac — Unburned fuel
- CO2MassFrac — Carbon dioxide

- H2OMassFrac — Water
- COMassFrac — Carbon monoxide
- NOMassFrac — Nitric oxide
- NO2MassFrac — Nitrogen dioxide
- NOxMassFrac — Nitric oxide and nitrogen dioxide
- PmMassFrac — Particulate matter
- AirMassFrac — Air
- BrndGasMassFrac — Burned gas

B — Outlet mass flow rate, heat flow rate, temperature

two-way connector port

Bus containing:

- MassFlw — Outlet mass flow rate, in kg/s
- HeatFlw — Outlet heat flow rate, in J/s
- Temp — Outlet temperature, in K
- MassFrac — Outlet mass fractions, dimensionless.

Specifically, a bus with these mass fractions:

- O2MassFrac — Oxygen
- N2MassFrac — Nitrogen
- UnbrndFuelMassFrac — Unburned fuel
- CO2MassFrac — Carbon dioxide
- H2OMassFrac — Water
- COMassFrac — Carbon monoxide
- NOMassFrac — Nitric oxide
- NO2MassFrac — Nitrogen dioxide
- NOxMassFrac — Nitric oxide and nitrogen dioxide
- PmMassFrac — Particulate matter
- AirMassFrac — Air
- BrndGasMassFrac — Burned gas

Info — Bus signal

bus

Bus signal containing these block calculations.

Signal		Description	Units		
Flw	PrsAdj	DwnstrmPrs	Downstream pressure	Pa	
		UpstrmPrs	Upstream pressure	Pa	
		PrsRatio	Pressure ratio	NA	
		DwnstrmTemp	Downstream temperature	K	
		UpstrmTemp	Upstream temperature	K	
	OrfMassFlw		Mass flow rate through orifice	kg/s	
	Species		O2MassFlw	Oxygen mass flow rate	kg/s
			N2MassFlw	Nitrogen mass flow rate	kg/s
			UnbrndFuelMassFlw	Unburned gas mass flow rate	kg/s
			CO2MassFlw	Carbon dioxide mass flow rate	kg/s
			H2OMassFlw	Water mass flow rate	kg/s
			COMassFlw	Carbon monoxide mass flow rate	kg/s
			NOMassFlw	Nitric oxide mass flow rate	kg/s
			NO2MassFlw	Nitrogen dioxide mass flow rate	kg/s
			NOxMassFlw	Nitric oxide and nitrogen dioxide mass flow rate	kg/s
		PmMassFlw	Particulate matter mass flow rate	kg/s	
		AirMassFlw	Air mass flow rate	kg/s	
		BrnedGasMassFlw	Burned gas mass flow rate	kg/s	

Signal				Description	Units
	PwrInflow	PwrTransfrd	PwrHeatFlwIn	Heat flow rate at port A	W
			PwrHeatFlwOut	Heat flow rate at port B	W
	PwrNotTrnsfrd		<i>Not used</i>		
	PwrStored		<i>Not used</i>		
Area	FlwArea		Cross-sectional flow area	m ²	
	EffctArea		Effective orifice cross-sectional area	m ²	
	ThrAng		Throttle area, if applicable	deg	

Parameters

Block Options

Orifice area model – Select model

Constant (default) | External input | Throttle body geometry

Orifice area model.

Dependencies

The orifice area model enables the parameters on the **Area Parameters** tab.

Image type – Icon color

Cold (default) | Hot

Block icon color:

- Cold for blue.
- Hot for red.

General

Ratio of specific heats, gamma – Ratio scalar

Ratio of specific heats, γ .

Ideal gas constant, R — Constant

scalar

Ideal gas constant, R , in $J/(kg \cdot K)$.

Pressure ratio linearize limit, Plim — Limit

scalar

Pressure ratio limit to avoid singularities as the pressure ratio approaches 1, P_{lim} .

Area

Constant area value, Aorf_cnst — Area

scalar

Constant area value, A_{orf_cnst} , in m^2 .

Dependencies

To enable this parameter, select Constant for the **Orifice area model** parameter.

Discharge coefficient, Cd_cnst — Coefficient

scalar

Discharge coefficient for constant area, Cd_{cnst} .

Dependencies

To enable this parameter, select Constant for the **Orifice area model** parameter.

Discharge coefficient, Cd_ext — Coefficient

scalar

Discharge coefficient for external area input, Cd_{ext} .

Dependencies

To enable this parameter, select External input for the **Orifice area model** parameter.

Throttle diameter, Dthr — Diameter

scalar

Throttle body diameter at opening, D_{thr} , in mm.

Dependencies

To enable this parameter, select Throttle body geometry for the **Orifice area model** parameter.

Discharge coefficient table, ThrCd – Coefficient array

Discharge coefficient table, C_{d_thr} .

Dependencies

To enable this parameter, select Throttle body geometry for the **Orifice area model** parameter.

Angle breakpoints, ThrAngBpts – Angle array

Angle breakpoints, Thr_{ang_bpts} , in deg.

Dependencies

To enable this parameter, select Throttle body geometry for the **Orifice area model** parameter.

References

- [1] Heywood, John B. *Internal Combustion Engine Fundamentals*. New York: McGraw-Hill, 1988.

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using Simulink® Coder™.

See Also


Control Volume System | Heat Exchanger

Introduced in R2017a

Heat Exchanger

Intercooler or exhaust gas recirculation (EGR) cooler

Library: Powertrain Blockset / Propulsion / Combustion Engine
Components / Fundamental Flow



Description

The Heat Exchanger block models a heat exchanger, for example, an intercooler or exhaust gas recirculation (EGR) cooler. The inlet (port C) connects to an engine flow component (flow restriction, compressor, turbine, or engine block). The outlet (port B) connects to a volume (control volume or environment). Based on the upstream temperature, heat exchanger effectiveness, and cooling medium temperature, the block determines the heat transfer rate and downstream temperature.

For the heat exchanger effectiveness and cooling medium temperature, you can specify either a constant value or an external input. For example, if you specify a heat exchanger effectiveness that is:

- Equal to 1, the downstream temperature is equal to the cooling medium temperature.
- Equal to 0, there is no heat transfer to the cooling medium. The downstream temperature is equal to the upstream temperature.

The block assumes no pressure drop. To model pressure losses, use a Flow Restriction block.

Equations

The Heat Exchanger block implements equations that use these variables.

T_{upstr}	Upstream temperature
T_{dnstr}	Downstream temperature
T_{cool}	Cooling medium temperature
$T_{cool, cnst}$	Constant cooling medium temperature

$T_{cool, input}$	External input cooling medium temperature
ε	Heat exchanger effectiveness
ε_{cnst}	Constant heat exchanger effectiveness
ε_{input}	Input heat exchanger effectiveness
c_p	Specific heat at constant pressure
q_{ht}	Heat exchanger heat transfer rate
$p_{flw, in}$	Pressure at inlet
$p_{vol, out}$	Pressure at outlet
$T_{vol, out}$	Temperature at outlet
$h_{vol, out}$	Specific enthalpy at outlet
q_{in}	Heat flow rate at inlet
q_{out}	Heat flow rate at outlet
\dot{m}	Heat exchanger mass flow rate
$T_{flw, in}$	Temperature at inlet
T_{in}	Heat exchanger inlet temperature
T_{out}	Heat exchanger outlet temperature
h_{in}	Inlet specific enthalpy

Heat Exchanger Effectiveness

Heat exchanger effectiveness measures the effectiveness of heat transfer from the incoming hot fluid to the cooling medium:

$$\varepsilon = \frac{T_{upstr} - T_{dnstr}}{T_{upstr} - T_{cool}}$$

In an ideal heat exchanger, the downstream temperature equals the cooling temperature. The effectiveness is equal to 1.

$$\begin{aligned} T_{dnstr} &= T_{cool} \\ \varepsilon &= 1 \end{aligned}$$

The Heat Exchanger block uses the effectiveness to determine the downstream temperature and heat transfer rate.

$$T_{dnstr} = T_{upstr} - \varepsilon(T_{upstr} - T_{cool})$$

$$q_{ht} = \dot{m}c_p(T_{upstr} - T_{dnstr})$$

Fluid Flow

Since the block assumes no pressure drop, $P_{flw, in} = P_{vol, out}$.

The flow component connection to the heat exchanger inlet determines the direction of the mass flow. Based on the mass flow rate direction, these temperature and heat flow equations apply.

Fluid Flow	Mass Flow Rate	Temperatures and Heat Flow
Forward — From engine flow component to outlet volume	$\dot{m} \geq 0$	$T_{upstr} = T_{flw, in}$ $T_{in} = T_{upstr}$ $T_{out} = T_{dnstr}$ $q_{out} = \dot{m}c_p T_{dnstr}$
Reverse — From outlet volume to engine flow component	$\dot{m} < 0$	$T_{upstr} = T_{vol, out}$ $T_{in} = T_{dnstr}$ $T_{out} = T_{vol, out}$ $h_{in} = c_p T_{dnstr}$ $q_{out} = \dot{m}h_{vol, out}$

Power Accounting

For the power accounting, the block implements these equations.

Bus Signal	Description	Equations
PwrInfo	PwrTrnsfrd — Power transferred between blocks	q_{in}
	<ul style="list-style-type: none"> Positive signals indicate flow into block Negative signals indicate flow out of block 	$-q_{out}$

Bus Signal		Description	Equations
PwrNotTrnsfrd — Power crossing the block boundary, but not transferred	PwrHeatTrnsfr	Heat transfer rate to cooling medium	$-q_{ht}$
<ul style="list-style-type: none"> Positive signals indicate an input Negative signals indicate a loss 			
PwrStored — Stored energy rate of change		<i>Not used</i>	
<ul style="list-style-type: none"> Positive signals indicate an increase Negative signals indicate a decrease 			

Ports

Input

C — Inlet mass flow rate, heat flow rate, temperature, mass fractions

two-way connector port

Bus containing the heat exchanger:

- MassFlwRate — Mass flow rate at inlet, \dot{m} , in kg/s
- HeatFlwRate — Heat flow rate at inlet, q_{in} , in J/s
- Temp — Temperature at inlet, $T_{flw,in}$, in K
- MassFrac — Inlet mass fractions, dimensionless.

Specifically, a bus with these mass fractions:

- O2MassFrac — Oxygen
- N2MassFrac — Nitrogen
- UnbrndFuelMassFrac — Unburned fuel
- CO2MassFrac — Carbon dioxide
- H2OMassFrac — Water

- `COMassFrac` — Carbon monoxide
- `NOMassFrac` — Nitric oxide
- `N02MassFrac` — Nitrogen dioxide
- `N0xMassFrac` — Nitric oxide and nitrogen dioxide
- `PmMassFrac` — Particulate matter
- `AirMassFrac` — Air
- `BrndGasMassFrac` — Burned gas

B — Outlet volume pressure, temperature, enthalpy, mass fractions

two-way connector port

Bus containing the heat exchanger:

- `Prs` — Pressure at outlet, $p_{vol, out}$, in Pa
- `Temp` — Temperature at outlet, $T_{vol, out}$, in K
- `Enth` — Specific enthalpy at outlet, $h_{vol, out}$, in J/kg
- `MassFrac` — Outlet mass fractions, dimensionless.

Specifically, a bus with these mass fractions:

- `O2MassFrac` — Oxygen
- `N2MassFrac` — Nitrogen
- `UnbrndFuelMassFrac` — Unburned fuel
- `C02MassFrac` — Carbon dioxide
- `H20MassFrac` — Water
- `COMassFrac` — Carbon monoxide
- `NOMassFrac` — Nitric oxide
- `N02MassFrac` — Nitrogen dioxide
- `N0xMassFrac` — Nitric oxide and nitrogen dioxide
- `PmMassFrac` — Particulate matter
- `AirMassFrac` — Air
- `BrndGasMassFrac` — Burned gas

Effct — Heat exchanger effectiveness

scalar

Heat exchanger effectiveness, ϵ_{input} .

Dependencies

To create this port, select External input for the **Effectiveness model** parameter.

CoolTemp — Cooling medium temperature

scalar

Cooling medium temperature, $T_{cool, input}$.

Dependencies

To create this port, select External input for the **Cooling medium temperature input** parameter.

Output

Info — Bus signal

bus

Bus signal containing these block calculations.

Signal		Description	Units	
InletTemp		Heat exchanger inlet temperature	K	
OutletTemp		Heat exchanger outlet temperature	K	
HeatTrnsfrRate		Heat exchanger heat transfer rate	J/s	
PwrInfo	PwrTrnsfrd	PwrHeatFlwIn	Heat flow rate at port C	W
		PwrHeatFlwOut	Heat flow rate at port B	W
	PwrNotTrnsfrd	PwrHeatTrnsfr	Heat transfer rate to cooling medium	W
	PwrStored		<i>Not used</i>	

C — Inlet flow pressure, temperature, enthalpy, mass fractions

two-way connector port

Bus containing the heat exchanger:

- Prs — Pressure at inlet, $p_{flw,in}$, in Pa
- Temp — Temperature at inlet, T_{in} , in K
- Enth — Specific enthalpy at inlet, h_{in} , in J/kg
- MassFrac — Inlet mass fractions, dimensionless.

Specifically, a bus with these mass fractions:

- O2MassFrac — Oxygen
- N2MassFrac — Nitrogen
- UnbrndFuelMassFrac — Unburned fuel
- CO2MassFrac — Carbon dioxide
- H2OMassFrac — Water
- COMassFrac — Carbon monoxide
- NOMassFrac — Nitric oxide
- NO2MassFrac — Nitrogen dioxide
- NOxMassFrac — Nitric oxide and nitrogen dioxide
- PmMassFrac — Particulate matter
- AirMassFrac — Air
- BrndGasMassFrac — Burned gas

B — Outlet volume mass flow rate, heat flow rate, temperature, mass fractions

two-way connector port

Bus containing the heat exchanger:

- MassFlwRate — Mass flow rate at outlet, \dot{m} , in kg/s
- HeatFlwRate — Heat flow rate at outlet, q_{out} , in J/s
- Temp — Temperature at outlet, T_{out} , in K
- MassFrac — Outlet mass fractions, dimensionless.

Specifically, a bus with these mass fractions:

- O2MassFrac — Oxygen
- N2MassFrac — Nitrogen
- UnbrndFuelMassFrac — Unburned fuel
- CO2MassFrac — Carbon dioxide
- H2OMassFrac — Water
- COMassFrac — Carbon monoxide
- NOMassFrac — Nitric oxide
- NO2MassFrac — Nitrogen dioxide
- NOxMassFrac — Nitric oxide and nitrogen dioxide
- PmMassFrac — Particulate matter
- AirMassFrac — Air
- BrndGasMassFrac — Burned gas

Parameters

Block Options

Effectiveness model — Model type for heat effectiveness

Constant (default) | External input

Type of model to calculate the heat exchanger effectiveness.

Dependencies

- Selecting External input creates the Effct port.
- Selecting Constant enables the **Heat exchanger effectiveness, ep_cnst** parameter.

Cooling medium temperature input — Specify type

Constant (default) | External input

Cooling medium temperature input.

Dependencies

- Selecting External input creates the CoolTemp port.
- Selecting Constant enables the **Cooling medium temperature, T_cool_cnst** parameter.

Image type — Icon color

Intercooler (default) | EGR cooler

Block icon color:

- Intercooler for blue, to indicate an intercooler
- EGR cooler for red, to indicate exhaust-gas-recirculation (EGR) cooling

Heat exchanger effectiveness, ep_cnst — Effectiveness

scalar

Constant heat exchanger effectiveness, ε_{cnst} .**Dependencies**To enable this parameter, select Constant for the **Effectiveness model** parameter.**Cooling medium temperature, T_cool_cnst — Temperature**

scalar

Constant cooling medium temperature, $T_{cool, cnst}$, in K.**Dependencies**To enable this parameter, select Constant for the **Cooling medium temperature input** parameter.**Specific heat at constant pressure, cp — Specific heat**

scalar

Specific heat at constant pressure, c_p , in J/(kg*K).**References**

- [1] Eriksson, Lars and Nielsen, Lars. *Modeling and Control of Engines and Drivelines*. Chichester, West Sussex, United Kingdom: John Wiley & Sons Ltd, 2014.

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using Simulink® Coder™.

See Also


Control Volume System | Flow Restriction

Introduced in R2017a

SI Controller

Spark-ignition engine controller that uses the driver torque request

Library: Powertrain Blockset / Propulsion / Combustion Engine Controllers

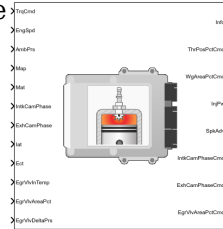

Description

The SI Controller block implements a spark-ignition (SI) controller that uses the driver torque request to calculate the open-loop air, fuel, and spark actuator commands that are required to meet the driver demand.

You can use the SI Controller block in engine control design or performance, fuel economy, and emission tradeoff studies. The core engine, throttle, and turbocharger wastegate subsystems require the commands that are output from the SI Controller block.


The block uses the commanded torque and engine speed to determine these open-loop actuator commands:

- Throttle position percent
- Wastegate area percent
- Injector pulse-width
- Spark advance
- Intake cam phaser angle
- Exhaust cam phaser angle
- Exhaust gas recirculation (EGR) valve area percent

The SI Controller block has two subsystems:

- The Controller subsystem — Determines the commands based on the commanded torque, measured engine speed, and estimated cylinder air mass.
- The Estimator subsystem — Determines the estimated air mass flow, torque, and exhaust gas temperature from intake manifold gas pressure, intake manifold gas temperature, engine speed, and cam phaser positions.

The figure illustrates the signal flow.

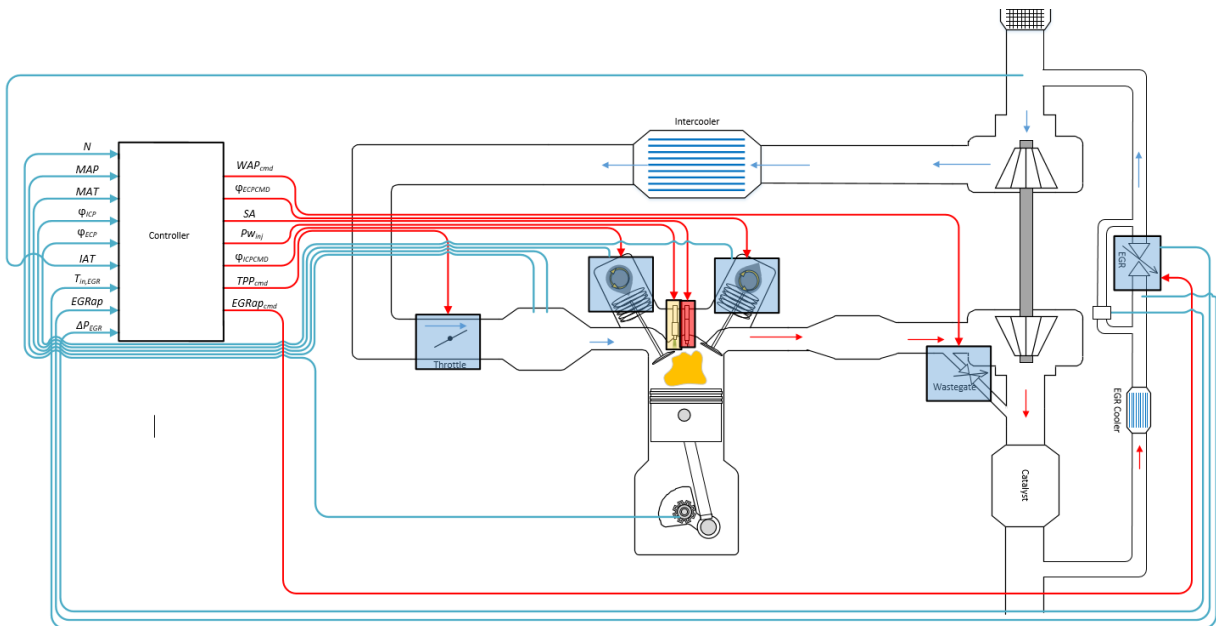

The figure uses these variables.

N	Engine speed
MAP	Cycle average intake manifold pressure
IAT	Intake air temperature
$T_{in,EGR}$	Temperature at EGR valve inlet
MAT	Cycle average intake manifold gas absolute temperature
$\Phi_{ICP}, \Phi_{ICP_CMD}$	Intake cam phaser angle and intake cam phaser angle command, respectively

$\varphi_{ECP}, \varphi_{ECPCMD}$	Exhaust cam phaser angle and exhaust cam phaser angle command, respectively
$EGRap, EGRap_{cmd}$	EGR valve area percent and EGR valve area percent command, respectively
ΔP_{EGR}	Pressure difference at EGR valve inlet and outlet
WAP_{cmd}	Turbocharger wastegate area percent command
SA	Spark advance
Pw_{inj}	Fuel injector pulse-width
TPP_{cmd}	Throttle position percent command

The Model-Based Calibration Toolbox was used to develop the tables that are available with the Powertrain Blockset.

Controller

Air

The block determines the commanded engine load (that is, normalized cylinder air mass) from a lookup table that is a function of commanded torque and measured engine speed.

$$L_{cmd} = f_{Lcmd}(T_{cmd}, N)$$

To achieve the commanded load, the controller sets the throttle position percent and turbocharger wastegate area percent using feed forward lookup tables. The lookup tables are functions of the commanded load and measured engine speed.

$$TAP_{cmd} = f_{TAPcmd}(L_{cmd}, N)$$

$$TPP_{cmd} = f_{TPPcmd}(TAP_{cmd})$$

$$WAP_{cmd} = f_{WAPcmd}(L_{cmd}, N)$$

To determine the cam phaser angle commands, the block uses lookup tables that are functions of estimated engine load and measured engine speed.

$$\varphi_{ICPCMD} = f_{ICPCMD}(L_{est}, N)$$

$$\varphi_{ECPCMD} = f_{ECPCMD}(L_{est}, N)$$

The block calculates the desired engine load using this equation.

$$L_{est} = \frac{CpsR_{air}T_{std}\dot{m}_{air,est}}{P_{std}V_dN}$$

The equations use these variables.

L_{est}	Estimated engine load
L_{cmd}	Commanded engine load
N	Engine speed
T_{cmd}	Commanded engine torque
TAP_{cmd}	Throttle area percent command
TPP_{cmd}	Throttle position percent command
WAP_{cmd}	Turbocharger wastegate area percent command
Cps	Crankshaft revolutions per power stroke
P_{std}	Standard pressure
T_{std}	Standard temperature
R_{air}	Ideal gas constant for air and burned gas mixture
V_d	Displaced volume
$\dot{m}_{air,est}$	Estimated engine air mass flow


The controller subsystem uses these lookup tables for the air calculations.

- The throttle area percent command lookup table, $f_{TAP_{cmd}}$, is a function of commanded load and engine speed

$$TAP_{cmd} = f_{TAP_{cmd}}(L_{cmd}, N)$$

where:

- TAP_{cmd} is throttle area percentage command, in percent.
- $L_{cmd}=L$ is commanded engine load, dimensionless.
- N is engine speed, in rpm.

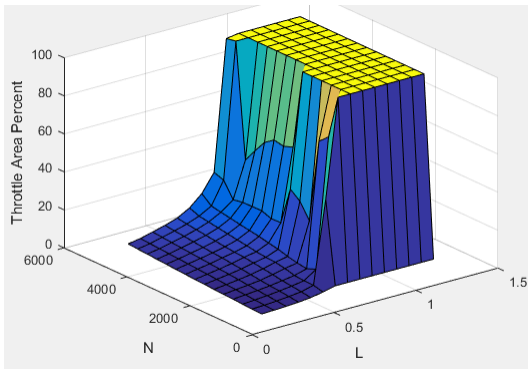


- To account for the non-linearity of the throttle position to throttle area, the throttle position percent lookup table linearizes the open-loop air mass flow control.

The throttle position percent command lookup table, f_{TPPcmd} , is a function of the throttle area percentage command

$$TPP_{cmd} = f_{TPPcmd}(TAP_{cmd})$$

where:

- TPP_{cmd} is throttle position percentage command, in percent.
- TAP_{cmd} is throttle area percentage command, in percent.

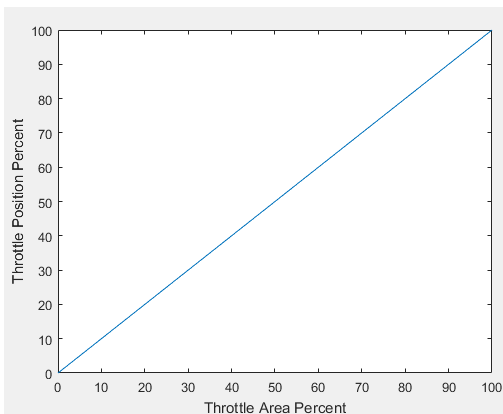


- The wastegate area percent command lookup table, f_{WAPcmd} , is a function of the commanded engine load and engine speed

$$WAP_{cmd} = f_{WAPcmd}(L_{cmd}, N)$$

where:

- WAP_{cmd} is wastegate area percentage command, in percent.
- $L_{cmd}=L$ is commanded engine load, dimensionless.
- N is engine speed, in rpm.

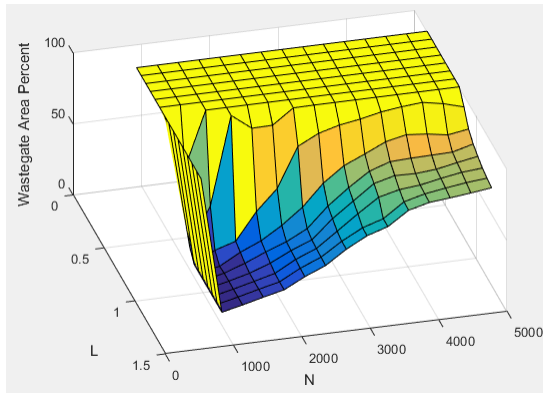


- The commanded engine load lookup table, f_{Lcmd} , is a function of the commanded torque and engine speed

$$L_{cmd} = f_{Lcmd}(T_{cmd}, N)$$

where:

- $L_{cmd}=L$ is commanded engine load, dimensionless.
- T_{cmd} is commanded torque, in N·m.
- N is engine speed, in rpm.

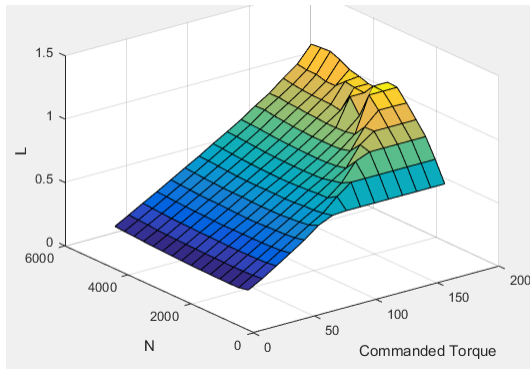


- The intake cam phaser angle command lookup table, f_{ICPCMD} , is a function of the engine load and engine speed

$$\varphi_{ICPCMD} = f_{ICPCMD}(L_{est}, N)$$

where:

- φ_{ICPCMD} is commanded intake cam phaser angle, in degrees crank advance.
- $L_{est}=L$ is estimated engine load, dimensionless.
- N is engine speed, in rpm.

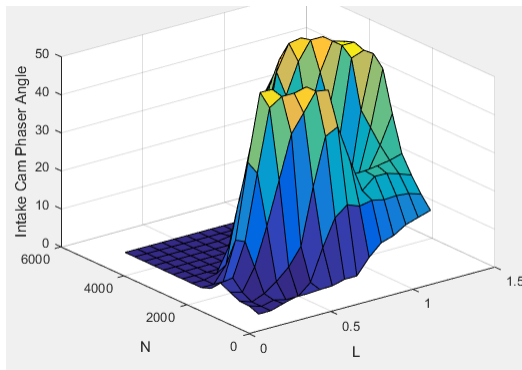


- The exhaust cam phaser angle command lookup table, f_{ECPCMD} , is a function of the engine load and engine speed

$$\varphi_{ECPCMD} = f_{ECPCMD}(L_{est}, N)$$

where:

- φ_{ECPCMD} is commanded exhaust cam phaser angle, in degrees crank retard.
- $L_{est}=L$ is estimated engine load, dimensionless.
- N is engine speed, in rpm.

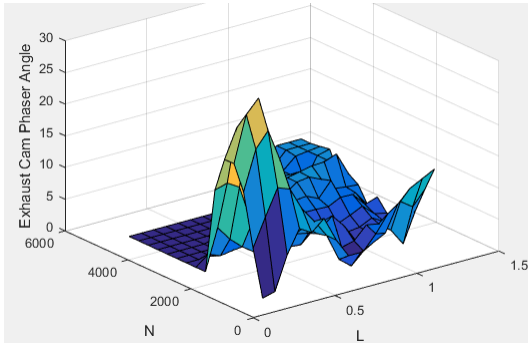


EGR

EGR is typically expressed as a percent of total intake port flow.

$$EGR_{pct} = 100 \frac{\dot{m}_{EGR}}{\dot{m}_{EGR} + \dot{m}_{air}}$$

To calculate the EGR area percent command, the block uses equations and a lookup table.

Equations	$\dot{m}_{EGRstd,cmd} = \dot{m}_{EGR,cmd} \frac{P_{std}}{P_{in,EGR}} \sqrt{\frac{T_{in,EGR}}{T_{std}}}$ $\dot{m}_{EGRstd,max} = f_{EGRstd,max} \left(\frac{P_{out,EGR}}{P_{in,EGR}} \right)$ $\dot{m}_{EGR,cmd} = EGR_{pct,cmd} \dot{m}_{intk,est}$
-----------	--
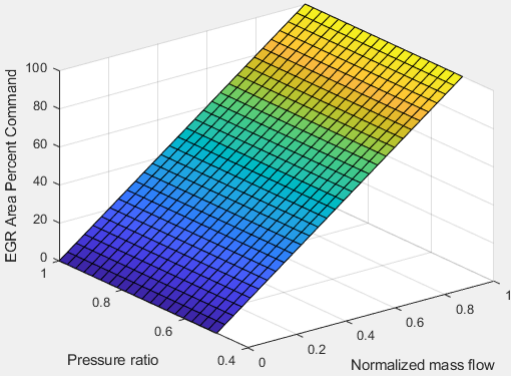
<p>Lookup table</p>	<p>The EGR area percent command, $EGRap_{cmd}$, lookup table is a function of the normalized mass flow and pressure ratio</p> $EGRap_{cmd} = f_{EGRap,cmd} \left(\frac{\dot{m}_{EGRstd,cmd}}{\dot{m}_{EGRstd,max}}, \frac{P_{out,EGR}}{P_{in,EGR}} \right)$ <p>where:</p> <ul style="list-style-type: none"> • $EGRap_{cmd}$ is commanded EGR area percent, dimensionless. • $\frac{\dot{m}_{EGRstd,cmd}}{\dot{m}_{EGRstd,max}}$ is the normalized mass flow, dimensionless. • $\frac{P_{out,EGR}}{P_{in,EGR}}$ is the pressure ratio, dimensionless. 
---------------------	--

The equations and table use these variables.

$EGRap$, $EGRap_{cmd}$	EGR valve area percent and EGR valve area percent command, respectively
$EGR_{pct,cmd}$	EGR percent command
$\dot{m}_{EGRstd,cmd}$	Commanded standard mass flow
$\dot{m}_{EGRstd,max}$	Maximum standard mass flow
$\dot{m}_{EGR,cmd}$	Commanded mass flow
$\dot{m}_{intk,est}$	Estimated intake port mass flow

- T_{std}, P_{std} Standard temperature and pressure
 $T_{in,EGR}$ Temperature at EGR valve inlet
 $P_{out,EGR}, P_{in,EGR}$ Pressure at EGR valve inlet and outlet, respectively

Fuel

The air-fuel ratio (AFR) impacts three-way-catalyst (TWC) conversion efficiency, torque production, and combustion temperature. The engine controller manages AFR by commanding injector pulse-width from a desired relative AFR. The relative AFR, λ_{cmd} , is the ratio between the commanded AFR and the stoichiometric AFR of the fuel.

$$\lambda_{cmd} = \frac{AFR_{cmd}}{AFR_{stoich}}$$

$$AFR_{cmd} = \frac{\dot{m}_{air,est}}{\dot{m}_{fuel,cmd}}$$

The SI Controller block accounts for the extra fuel delivered to the SI engine during startup. If the engine speed is greater than the startup engine cranking speed, the SI Controller block enriches the optimal AFR, lambda, with an exponentially decaying delta lambda. To initialize the delta lambda, the block uses the engine coolant temperature at startup. The delta lambda exponentially decays to zero based on a time constant that is a function of the engine coolant temperature.

You can configure the block for open-loop and closed-loop AFR control.

To	Use	Controls > Fuel > Closed-loop feedback Parameter Setting
<ul style="list-style-type: none"> Assess the dynamic and steady-state accuracy of the controller airflow estimation and fuel delivery. 	(default) Open-loop control	off
<ul style="list-style-type: none"> Hold the average AFR close to stoichiometric AFR to maintain a high TWC conversion efficiency. 	Closed-loop control	on

Open-Loop Control

To create an input port for the commanded AFR (lambda), on the **Controls > Fuel > Open-loop fuel** pane, select **Input lambda**.

You can manually tune the catalyst for maximum efficiency during open-loop AFR control with or without dither. If you want to implement dither during open-loop control, on the **Fuel** tab, on the **Closed-loop fuel** pane, select **Dither**.


By default, the block is configured to use a lookup table for the commanded AFR.

The commanded lambda, λ_{cmd} , lookup table is a function of estimated engine load and measured engine speed

$$\lambda_{cmd} = f_{\lambda_{cmd}}(L_{est}, N)$$

where:

- λ_{cmd} is commanded relative AFR, dimensionless.
- $L_{est}=L$ is estimated engine load, dimensionless.
- N is engine speed, in rpm.

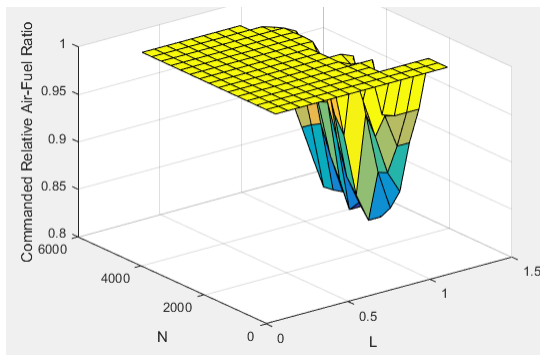

The block calculates the estimated fuel mass flow rate using the commanded lambda, λ_{cmd} , stoichiometric AFR, and estimated air mass flow rate.

$$\dot{m}_{fuel,cmd} = \frac{\dot{m}_{air,est}}{AFR_{cmd}} = \frac{\dot{m}_{air,est}}{\lambda_{cmd}AFR_{stoich}}$$

The block assumes that the battery voltage and fuel pressure are at nominal settings where pulse-width correction is not necessary. The commanded fuel injector pulse-width

is proportional to the fuel mass per injection. The fuel mass per injection is calculated from the commanded fuel mass flow rate, engine speed, and the number of cylinders.

$$Pw_{inj} = \begin{cases} \frac{\dot{m}_{fuel,cmd} Cps \left(\frac{60s}{min} \right) \left(\frac{1000mg}{g} \right) \left(\frac{1000g}{kg} \right)}{N S_{inj} N_{cyl}} & \text{when } Trq_{cmd} > 0 \\ 0 & \text{when } Trq_{cmd} \leq 0 \end{cases}$$

Closed-Loop Control

TWC converters are most efficient when the exhaust AFR is near the stoichiometric AFR, where the air and fuel burn most completely. Around this ideal point, the AFR is within the *catalyst window* in which the catalyst is most efficient at converting carbon monoxide, hydrocarbons, and nitrogen oxides to non-harmful exhaust products. Empirical studies show that oscillating the AFR around stoichiometry at an optimized AFR frequency, amplitude, and bias widens the TWC window, increasing catalyst conversion efficiency in the presence of unavoidable disturbances.

To keep production hardware costs down, AFR control systems include inexpensive switching oxygen sensors positioned in the engine exhaust stream upstream and downstream of the catalyst. The oxygen sensors have a narrow range. Essentially, they switch between too lean (i.e., more air is available than is required to burn the available fuel) and too rich (i.e., more air is available than is required to burn the available fuel).

The block implements a period-based method to control the average AFR at a value within the catalyst window for maximum conversion efficiency. Period-based AFR control is independent of the transport delay across the engine from the fuel injection point to the sensor measurement point. For more information about the method, see *Developing a Period-Based Air-Fuel Ratio Controller Using a Low-Cost Switching Sensor*.

Spark


Spark advance is the crank angle before top dead center (BTDC) of the power stroke when the spark is delivered. The spark advance has an impact on engine efficiency, torque, exhaust temperature, knock, and emissions.

The spark advance lookup table is a function of estimated load and engine speed.

$$SA = f_{SA}(L_{est}, N)$$

where:

- SA is spark advance, in crank advance degrees.
- $L_{est}=L$ is estimated engine load, dimensionless.
- N is engine speed, in rpm.

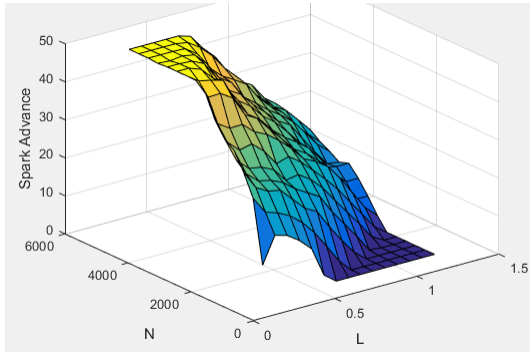

The equations use these variables.

L_{est}	Estimated engine load, based on normalized cylinder air mass
N	Engine speed
f_{SA}	Lookup table for spark advance
SA	Spark advance

Idle Speed

When the commanded torque is below a threshold value, the idle speed controller regulates the engine speed.

If	Idle Speed Controller
$Trq_{cmd,input} < Trq_{idlecmd,enable}$	Enabled
$Trq_{idlecmd,enable} \leq Trq_{cmd,input}$	Not enabled

The idle speed controller uses a discrete PI controller to regulate the target idle speed by commanding a torque.

The PI controller uses this transfer function:

$$C_{idle}(z) = K_{p,idle} + K_{i,idle} \frac{t_s}{z-1}$$

The idle speed commanded torque must be less than the maximum commanded torque:

$$0 \leq Trq_{idlecmd} \leq Trq_{idlecmd,max}$$

Idle speed control is active under these conditions. If the commanded input torque drops below the threshold for enabling the idle speed controller ($Trq_{cmd,input} < Trq_{idlecmd,enable}$), the commanded engine torque is given by:

$$Trq_{cmd} = \max(Trq_{cmd,input}, Trq_{idlecmd}).$$

The equations use these variables.

Trq_{cmd}	Commanded engine torque
$Trq_{cmd,input}$	Input commanded engine torque
$Trq_{idlecmd,enable}$	Threshold for enabling idle speed controller
$Trq_{idlecmd}$	Idle speed controller commanded torque
$Trq_{idlecmd,max}$	Maximum commanded torque
N_{idle}	Base idle speed
$K_{p,idle}$	Idle speed controller proportional gain
$K_{i,idle}$	Idle speed controller integral gain

Speed Limiter

To prevent over revving the engine, the block implements an engine speed limit controller that limits the engine speed to the value specified by the **Rev-limiter speed threshold** parameter on the **Controls > Idle Speed** tab.

If the engine speed, N , exceeds the engine speed limit, N_{lim} , the block sets the commanded engine torque to 0.

To smoothly transition the torque command to 0 as the engine speed approaches the speed limit, the block implements a lookup table multiplier. The lookup table multiplies the torque command by a value that ranges from 0 (engine speed exceeds limit) to 1 (engine speed does not exceed the limit).

Estimator

The estimator subsystem determines the estimated air mass flow, torque, EGR mass flow, and exhaust temperature based on sensor feedback and calibration parameters.

$\dot{m}_{air, est}$	Estimated engine air mass flow
Trq_{est}	Estimated engine torque
$T_{exh, est}$	Estimated engine exhaust temperature
$\dot{m}_{EGR, est}$	Estimated low-pressure EGR mass flow

Air Mass Flow

To calculate engine air mass flow, configure the SI engine to use either of these air mass flow models.

Air Mass Flow Model	Description
"SI Engine Speed-Density Air Mass Flow Model"	Uses the speed-density equation to calculate the engine air mass flow, relating the engine air mass flow to the intake manifold pressure and engine speed. Consider using this air mass flow model in engines with fixed valvetrain designs.

Air Mass Flow Model	Description
<p>“SI Engine Dual-Independent Cam Phaser Air Mass Flow Model”</p>	<p>To calculate the engine air mass flow, the dual-independent cam phaser model uses:</p> <ul style="list-style-type: none"> • Empirical calibration parameters developed from engine mapping measurements • Desktop calibration parameters derived from engine computer-aided design (CAD) data <p>In contrast to typical embedded air mass flow calculations based on direct air mass flow measurement with an air mass flow (MAF) sensor, this air mass flow model offers:</p> <ul style="list-style-type: none"> • Elimination of MAF sensors in dual cam-phased valvetrain applications • Reasonable accuracy with changes in altitude • Semiphysical modeling approach • Bounded behavior • Suitable execution time for electronic control unit (ECU) implementation • Systematic development of a relatively small number of calibration parameters

To determine the estimated air mass flow, the block uses the intake air mass fraction. The EGR mass fraction at the intake port lags the mass fraction near the EGR valve outlet. To model the lag, the block uses a first order system with a time constant.

$$y_{intk,EGR,est} = \frac{\dot{m}_{EGR,est}}{\dot{m}_{intk,est}} \frac{t_s z}{\tau_{EGR} z + t_s - \tau_{EGR}}$$

The remainder of the gas is air.

$$y_{intk,air,est} = 1 - y_{intk,EGR,est}$$

The equations use these variables.

$y_{intk,EGR,est}$ Estimated intake manifold EGR mass fraction

$y_{intk,air,est}$	Estimated intake manifold air mass fraction
$\dot{m}_{EGR,est}$	Estimated low-pressure EGR mass flow
$\dot{m}_{intk,est}$	Estimated intake port mass flow
τ_{EGR}	EGR time constant

Torque

To calculate the brake torque, configure the SI engine to use either of these torque models.

Brake Torque Model	Description
“SI Engine Torque Structure Model”	For the structured brake torque calculation, the SI engine uses tables for the inner torque, friction torque, optimal spark, spark efficiency, and lambda efficiency.
“SI Engine Simple Torque Model”	For the simple brake torque calculation, the SI engine block uses a torque lookup table map that is a function of engine speed and load.

EGR

The controller estimates low-pressure mass flow, EGR valve inlet pressure, and EGR valve outlet pressure using an algorithm developed by F. Liu and J. Pfeiffer. The estimator requires measured EGR valve differential pressure, EGR valve area percent, intake air temperature, and EGR valve inlet temperature.

To estimate the EGR valve commands, the block uses:

- Equations

$$\dot{m}_{air,std} = \dot{m}_{air,est} \frac{P_{std}}{P_{amb}} \sqrt{\frac{IAT}{T_{std}}}$$

$$P_{in,EGR} = P_{out,EGR} + \Delta P_{EGR}$$

$$\dot{m}_{EGR,est} = \dot{m}_{EGR,std} \frac{P_{in,EGR}}{P_{std}} \sqrt{\frac{T_{std}}{T_{in,EGR}}}$$


- Tables

- The EGR valve standard mass flow lookup table is a function of EGR valve area percent and the pressure ratio

$$\dot{m}_{EGR, std} = f_{EGR, std} \left(EGRap, \frac{P_{out, EGR}}{P_{in, EGR}} \right)$$

where:

- $\dot{m}_{EGR, std}$ is EGR valve standard mass flow, dimensionless.
- $EGRap$ is EGR valve flow area percent, in percent.
- $\frac{P_{out, EGR}}{P_{in, EGR}}$ is the pressure ratio, dimensionless.

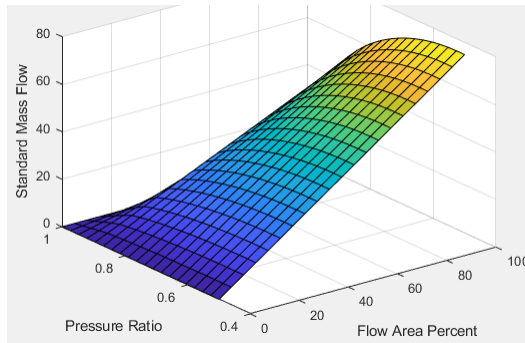


- The pressure ratio is a function of the standard mass flow

$$\frac{P_{out, EGR}}{P_{amb}} = f_{intksys, pr}(\dot{m}_{air, std})$$

where:

- $\dot{m}_{air, std}$ is standard mass flow, in g/s.
- $\frac{P_{out, EGR}}{P_{amb}}$ is pressure ratio, dimensionless.

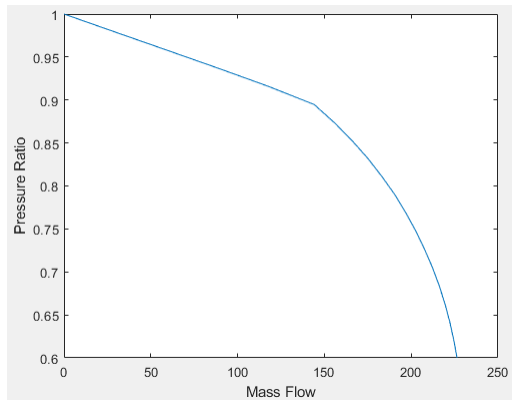

The equations use these variables.

EGR_{ap}	EGR valve area percent command
IAT	Intake air temperature
$\dot{m}_{air, std}, \dot{m}_{EGR, std}$	Standard air and EGR valve mass flow, respectively
$\dot{m}_{air, est}, \dot{m}_{EGR, est}$	Estimated air and EGR valve mass flow, respectively
T_{std}, P_{std}	Standard temperature and pressure
T_{amb}, P_{amb}	Ambient temperature and pressure
ΔP_{EGR}	Pressure difference at EGR valve inlet and outlet
$T_{in,EGR}, T_{out,EGR}$	Temperature at EGR valve inlet and outlet, respectively
$P_{in,EGR}, P_{out,EGR}$	Pressure at EGR valve inlet and outlet, respectively

Exhaust Temperature


The exhaust temperature lookup table, f_{Texh} , is a function of engine load and engine speed

$$T_{exh} = f_{Texh}(L, N)$$

where:

- T_{exh} is engine exhaust temperature, in K.
- L is normalized cylinder air mass or engine load, dimensionless.

- N is engine speed, in rpm.

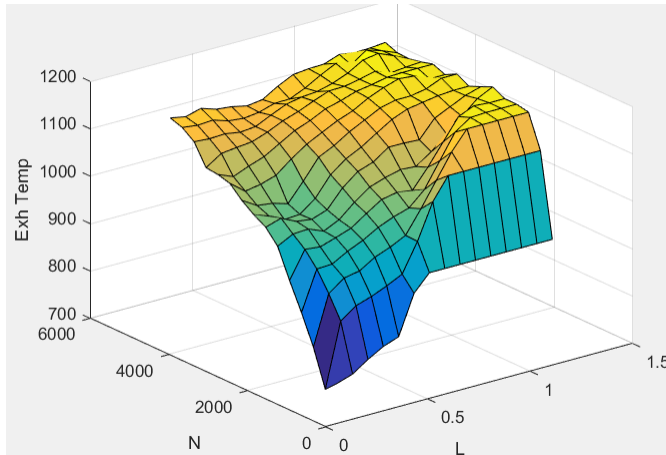

Ports

Input

TrqCmd — Commanded engine torque
scalar

Commanded engine torque, $Trq_{cmd,input}$, in N·m.

EngSpd — Measured engine speed
scalar

Measured engine speed, N , in rpm.

AmbPrs — Measured absolute ambient pressure
scalar

Measured ambient pressure, P_{Amb} , in Pa.

Map — Measured intake manifold absolute pressure
scalar

Measured intake manifold absolute pressure MAP , in Pa.

Mat — Measured intake manifold absolute temperature

scalar

Measured intake manifold absolute temperature, MAT , in K.

IntkCamPhase — Intake cam phaser angle

scalar

Intake cam phaser angle, φ_{ICP} , in degCrkAdv, or degrees crank advance.

ExhCamPhase — Exhaust cam phaser angle

scalar

Exhaust cam phaser angle, φ_{ECP} , in degCrkRet, or degrees crank retard.

Iat — Intake air temperature

scalar

Intake air temperature, IAT , in K.

Ect — Engine cooling temperature

scalar

Engine cooling temperature, $T_{coolant}$, in K.

EgrVlvInTemp — EGR valve inlet temperature

scalar

EGR valve inlet temperature, $T_{in,EGR}$, in K.

EgrVlvAreaPct — EGR valve area percent

scalar

EGR valve area percent, $EGRap$, in %.

EgrVlvDeltaPrs — EGR valve delta pressure

scalar

EGR valve delta pressure, ΔP_{EGR} , in Pa.

02VoltSen — Oxygen sensor voltage

scalar

Oxygen sensor voltage for closed-loop air-fuel-ratio (lambda) control, in mV.

To configure the block to use closed-loop air-fuel-ratio control, on the **Fuel** tab, on the **Closed-loop fuel** pane, select **Closed-loop feedback**.

LambdaCmd — Commanded AFR, lambda

scalar

Commanded air-fuel-ratio (lambda), λ_{cmd} , dimensionless.

Dependencies

To create this port, on the **Fuel** tab, on the **Open-loop fuel** pane, select **Input lambda**.

Output

Info — Bus signal

bus

Bus signal containing these block calculations.

Signal	Description	Variable	Units
TrqCmd	Engine torque	Trq_{cmd}	N·m
LdCmd	Commanded load	L_{cmd}	N/A
ThrPosCmd	Throttle area percent command	TAP_{cmd}	%
WgAreaPctCmd	Wastegate area percent command	WAP_{cmd}	%
InjPw	Fuel injector pulse-width	Pw_{inj}	ms
SpkAdv	Spark advance	SA	degBTDC
IntkCamPhaseCmd	Intake cam phaser angle command	φ_{ICPCMD}	degCrkAdv
ExhCamPhaseCmd	Exhaust cam phaser angle command	φ_{ECPCMD}	degCrkRet
EgrVlvAreaPctCmd	Exhaust cam phaser angle command	$EGRap_{cmd}$	%

Signal	Description	Variable	Units
FuelMassFlwCmd	EGR valve area percent command	$\dot{m}_{fuel,cmd}$	kg/s
AfrCmd	Commanded air-fuel ratio	AFR_{cmd}	N/A
EstEngTrq	Estimated engine torque	Trq_{est}	N·m
EstNrmlzdAirCharg	Estimated normalized cylinder air mass	N/A	N/A
EstIntkPortMassFlw	Estimated intake port air mass flow rate	$\dot{m}_{intk,est}$	kg/s
EstIntkAirMassFlw	Estimated air mass flow rate	$\dot{m}_{air,est}$	kg/s
EstEgrMassFlw	Estimated low-pressure EGR mass flow rate	$\dot{m}_{EGR,est}$	kg/s
EstExhManGasTemp	Estimated exhaust manifold gas temperature	$T_{exh,est}$	K
EngRevLimAct	Flag that indicates if rev-limiter control is active	N/A	N/A
ClsdLpFuelMult	Fuel injector pulse-width multiplier for closed-loop AFR control	Pw_{inj_mult}	N/A

ThrPosPctCmd – Throttle area percent command

scalar

Throttle area percent command, TAP_{cmd} .**WgAreaPctCmd – Wastegate area percent command**

scalar

Wastegate area percent command, WAP_{cmd} .**InjPw – Fuel injector pulse-width**

scalar

Fuel injector pulse-width, Pw_{inj} , in ms.**SpkAdv – Spark advance**

scalar

Spark advance, SA , in degrees crank angle before top dead center (degBTDC).

IntkCamPhaseCmd — Intake cam phaser angle command

scalar

Intake cam phaser angle command, φ_{ICPCMD} .

ExhCamPhaseCmd — Exhaust cam phaser angle command

scalar

Exhaust cam phaser angle command, φ_{ECPCMD} .

EgrVlvAreaPctCmd — EGR valve area percent command

scalar

EGR valve area percent command, $EGRap_{cmd}$, in %.

Parameters

Configuration

Air mass flow estimation model — Select air mass flow estimation model

Dual Variable Cam Phasing (default) | Simple Speed-Density

To calculate engine air mass flow, configure the SI engine to use either of these air mass flow models.

Air Mass Flow Model	Description
"SI Engine Speed-Density Air Mass Flow Model"	Uses the speed-density equation to calculate the engine air mass flow, relating the engine air mass flow to the intake manifold pressure and engine speed. Consider using this air mass flow model in engines with fixed valvetrain designs.

Air Mass Flow Model	Description
<p>“SI Engine Dual-Independent Cam Phaser Air Mass Flow Model”</p>	<p>To calculate the engine air mass flow, the dual-independent cam phaser model uses:</p> <ul style="list-style-type: none"> • Empirical calibration parameters developed from engine mapping measurements • Desktop calibration parameters derived from engine computer-aided design (CAD) data <p>In contrast to typical embedded air mass flow calculations based on direct air mass flow measurement with an air mass flow (MAF) sensor, this air mass flow model offers:</p> <ul style="list-style-type: none"> • Elimination of MAF sensors in dual cam-phased valvetrain applications • Reasonable accuracy with changes in altitude • Semiphysical modeling approach • Bounded behavior • Suitable execution time for electronic control unit (ECU) implementation • Systematic development of a relatively small number of calibration parameters

Dependencies

The table summarizes the parameter dependencies.

Air Mass Flow Estimation Model	Enables Parameters on Estimation > Air Tab
Dual Variable Cam Phasing	<p>Cylinder volume at intake valve close table, f_{vive}</p> <p>Cylinder volume intake cam phase breakpoints, $f_{vive_icp_bpt}$</p> <p>Cylinder trapped mass correction factor, f_{tm_corr}</p> <p>Normalized density breakpoints, $f_{tm_corr_nd_bpt}$</p> <p>Engine speed breakpoints, $f_{tm_corr_n_bpt}$</p> <p>Air mass flow, f_{mdot_air}</p> <p>Exhaust cam phase breakpoints, $f_{mdot_air_ecp_bpt}$</p> <p>Trapped mass flow breakpoints, $f_{mdot_trpd_bpt}$</p> <p>Air mass flow correction factor, $f_{mdot_air_corr}$</p> <p>Engine load breakpoints for air mass flow correction, $f_{mdot_air_corr_ld_bpt}$</p> <p>Engine speed breakpoints for air mass flow correction, $f_{mdot_air_n_bpt}$</p>
Simple Speed-Density	<p>Speed-density volumetric efficiency, f_{nv}</p> <p>Speed-density intake manifold pressure breakpoints, $f_{nv_prs_bpt}$</p> <p>Speed-density engine speed breakpoints, $f_{nv_n_bpt}$</p>

Torque estimation model — Select torque estimation model

Torque Structure (default) | Simple Torque Lookup

To calculate the brake torque, configure the SI engine to use either of these torque models.

Brake Torque Model	Description
"SI Engine Torque Structure Model"	For the structured brake torque calculation, the SI engine uses tables for the inner torque, friction torque, optimal spark, spark efficiency, and lambda efficiency.
"SI Engine Simple Torque Model"	For the simple brake torque calculation, the SI engine block uses a torque lookup table map that is a function of engine speed and load.

Dependencies

The table summarizes the parameter dependencies.

Torque Estimation Model	Enables Parameters on Estimation > Torque Tab
Torque Structure	<p>Inner torque table, f_tq_inr</p> <p>Friction torque table, f_tq_fric</p> <p>Engine temperature modifier on friction torque, f_fric_temp_mod</p> <p>Engine temperature modifier breakpoints, f_fric_temp_bpt</p> <p>Pumping torque table, f_tq_pump</p> <p>Optimal spark table, f_sa_opt</p> <p>Inner torque load breakpoints, f_tq_inr_l_bpt</p> <p>Inner torque speed breakpoints, f_tq_inr_n_bpt</p> <p>Spark efficiency table, f_m_sa</p> <p>Spark retard from optimal, f_del_sa_bpt</p> <p>Lambda efficiency, f_m_lam</p> <p>Lambda breakpoints, f_m_lam_bpt</p>

Torque Estimation Model	Enables Parameters on Estimation > Torque Tab
Simple Torque Lookup	<p>Torque table, f_{tq_nl}</p> <p>Torque table load breakpoints, $f_{tq_nl_l_bpt}$</p> <p>Torque table speed breakpoints, $f_{tq_nl_n_bpt}$</p>

Controls

Air

Engine commanded load table, f_{lcmd} — Lookup table


array

The commanded engine load lookup table, f_{Lcmd} , is a function of the commanded torque and engine speed

$$L_{cmd} = f_{Lcmd}(T_{cmd}, N)$$

where:

- $L_{cmd}=L$ is commanded engine load, dimensionless.
- T_{cmd} is commanded torque, in N·m.
- N is engine speed, in rpm.

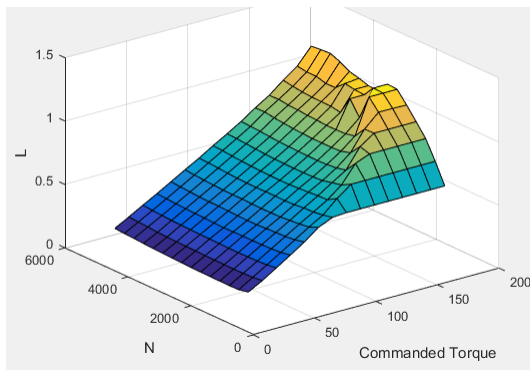

Torque command breakpoints, $f_{lcmd_tq_bpt}$ — Breakpoints

array

Torque command breakpoints, in N·m.

Speed breakpoints, $f_lcmd_n_bpt$ – Breakpoints
array

Speed breakpoints, in rpm.


Throttle area percent, f_tap – Lookup table, %
array

The throttle area percent command lookup table, f_{TAPcmd} , is a function of commanded load and engine speed

$$TAP_{cmd} = f_{TAPcmd}(L_{cmd}, N)$$

where:

- TAP_{cmd} is throttle area percentage command, in percent.
- $L_{cmd}=L$ is commanded engine load, dimensionless.
- N is engine speed, in rpm.

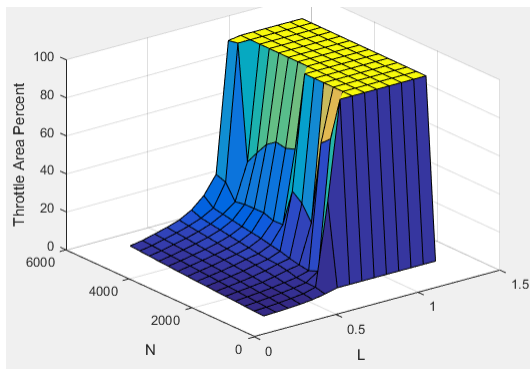

Throttle area percent load breakpoints, $f_tap_ld_bpt$ – Breakpoints
array

Throttle area percent load breakpoints, dimensionless.

Throttle area percent speed breakpoints, $f_tap_n_bpt$ – Breakpoints
array

Throttle area percent speed breakpoints, in rpm.


Throttle area percent to position percent table, f_tpp — Lookup table array

The throttle position percent command lookup table, f_{TPPcmd} , is a function of the throttle area percentage command

$$TPP_{cmd} = f_{TPPcmd}(TAP_{cmd})$$

where:

- TPP_{cmd} is throttle position percentage command, in percent.
- TAP_{cmd} is throttle area percentage command, in percent.

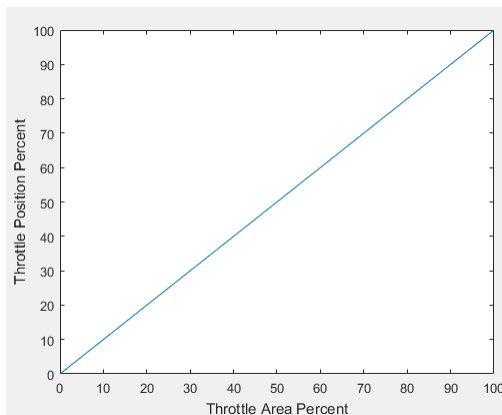

Throttle area percent to position percent area breakpoints, $f_tpp_tap_bpt$ — Breakpoints array

Throttle area percent to position percent area breakpoints, dimensionless.


Wastegate area percent, f_wap — Lookup table, % array

The wastegate area percent command lookup table, f_{WAPcmd} , is a function of the commanded engine load and engine speed

$$WAP_{cmd} = f_{WAPcmd}(L_{cmd}, N)$$

where:

- WAP_{cmd} is wastegate area percentage command, in percent.
- $L_{cmd}=L$ is commanded engine load, dimensionless.
- N is engine speed, in rpm.

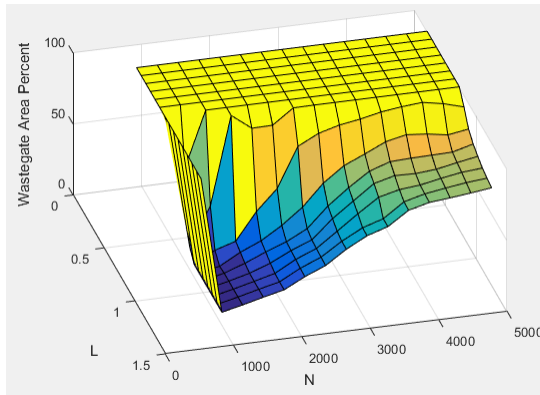

Load breakpoints, $f_{wap_ld_bpt}$ – Breakpoints
array

Load breakpoints, dimensionless.

Speed breakpoints, $f_{wap_n_bpt}$ – Breakpoints, rpm
array

Speed breakpoints, in rpm.

Intake cam phaser angle, f_{icp} – Lookup table
array


The intake cam phaser angle command lookup table, f_{ICPCMD} , is a function of the engine load and engine speed

$$\varphi_{ICPCMD} = f_{ICPCMD}(L_{est}, N)$$

where:

- φ_{ICPCMD} is commanded intake cam phaser angle, in degrees crank advance.

- $L_{est}=L$ is estimated engine load, dimensionless.
- N is engine speed, in rpm.

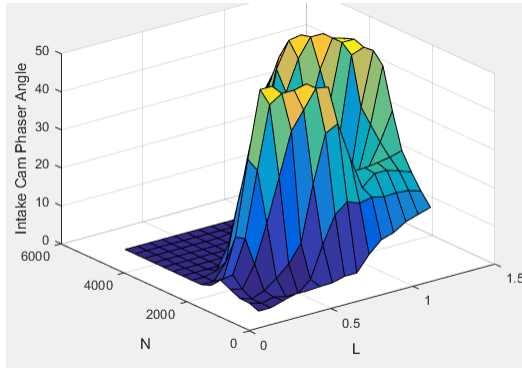


Exhaust cam phaser angle, f_{ecp} — Lookup table array

The exhaust cam phaser angle command lookup table, f_{ECPCMD} , is a function of the engine load and engine speed

$$\varphi_{ECPCMD} = f_{ECPCMD}(L_{est}, N)$$

where:

- φ_{ECPCMD} is commanded exhaust cam phaser angle, in degrees crank retard.
- $L_{est}=L$ is estimated engine load, dimensionless.
- N is engine speed, in rpm.

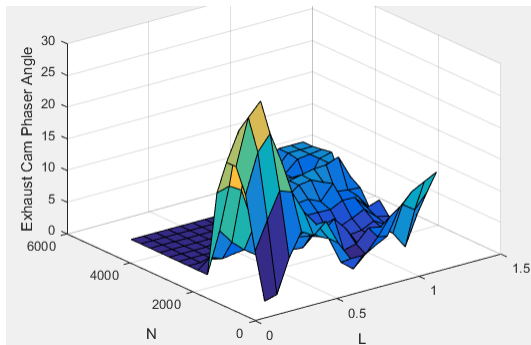

Load breakpoints, $f_cp_ld_bpt$ – Breakpoints
array

Load breakpoints, dimensionless.

Speed breakpoints, $f_cp_n_bpt$ – Breakpoints
array

Speed breakpoints, in rpm.


Commanded EGR percent, f_egrpct_cmd – Lookup table
array

The EGR percent command, $EGR_{pct,cmd}$, lookup table is a function of estimated engine load and engine speed

$$EGR_{pct,cmd} = f_{EGRpct,cmd}(L_{est}, N)$$

where:

- $EGR_{pct,cmd}$ is commanded EGR percent, dimensionless.
- $L_{est}=L$ is estimated engine load, dimensionless.
- N is engine speed, in rpm.

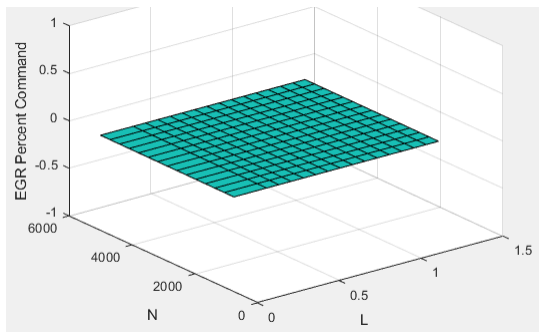

Load breakpoints, $f_egrpct_ld_bpt$ – Breakpoints
vector

Engine load breakpoints, L , dimensionless.

Speed breakpoints, $f_egrpct_n_bpt$ – Breakpoints
vector

Engine speed breakpoints, N , in rpm.

EGR valve area percent, $f_egr_areapct_cmd$ — Lookup table


array

The EGR area percent command, $EGRap_{cmd}$, lookup table is a function of the normalized mass flow and pressure ratio

$$EGRap_{cmd} = f_{EGRap,cmd} \left(\frac{\dot{m}_{EGRstd,cmd}}{\dot{m}_{EGRstd,max}}, \frac{P_{out,EGR}}{P_{in,EGR}} \right)$$

where:

- $EGRap_{cmd}$ is commanded EGR area percent, dimensionless.
- $\frac{\dot{m}_{EGRstd,cmd}}{\dot{m}_{EGRstd,max}}$ is the normalized mass flow, dimensionless.
- $\frac{P_{out,EGR}}{P_{in,EGR}}$ is the pressure ratio, dimensionless.

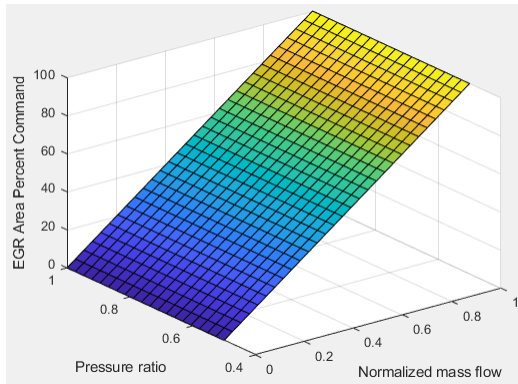

Open EGR valve standard flow, $f_egr_max_stdflow$ — Breakpoints

vector

Maximum standard EGR valve mass flow breakpoints, $\dot{m}_{EGRstd,max}$, in N·m.

Normalized EGR valve standard flow breakpoints,

$f_egr_areapct_nrmlzdflow_bpt$ — Breakpoints

vector

Normalized mass flow breakpoints, $\frac{\dot{m}_{EGRstd,cmd}}{\dot{m}_{EGRstd,max}}$, dimensionless.

EGR valve pressure ratio breakpoints, f_egr_areapct_pr_bpt – Breakpoints

vector

Pressure ratio breakpoints, $\frac{P_{out,EGR}}{P_{in,EGR}}$, dimensionless.

Fuel

Injector slope, Sinj – Slope

scalar

Fuel injector slope, S_{inj} , in mg/ms.

Stoichiometric air-fuel ratio, afr_stoich – Ratio

scalar

Stoichiometric air-fuel ratio, AFR_{stoich} .

Relative air-fuel ratio lambda, f_lamcmd – Air-fuel-ratio (AFR) lookup table


array

The commanded lambda, λ_{cmd} , lookup table is a function of estimated engine load and measured engine speed

$$\lambda_{cmd} = f_{\lambda_{cmd}}(L_{est}, N)$$

where:

- λ_{cmd} is commanded relative AFR, dimensionless.
- $L_{est}=L$ is estimated engine load, dimensionless.
- N is engine speed, in rpm.

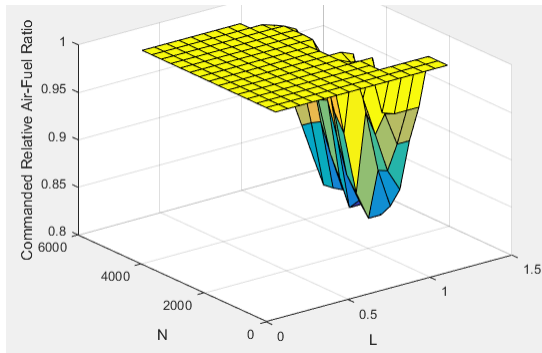

Dependencies

To create this parameter, on the **Fuel** tab, on the **Open-loop fuel** pane, clear **Input lambda**.

Load breakpoints, f_lamcmd_ld_bpt — Breakpoints
vector

Load breakpoints, dimensionless.

Dependencies

To create this parameter, on the **Fuel** tab, on the **Open-loop fuel** pane, clear **Input lambda**.

Speed breakpoints, f_lamcmd_n_bpt — Breakpoints
vector

Speed breakpoints, in rpm.

Dependencies

To create this parameter, on the **Fuel** tab, on the **Open-loop fuel** pane, clear **Input lambda**.

Engine startup lambda enrichment delta vs coolant temperature, f_startup_lambda_delta — Lookup table
vector

Engine startup lambda enrichment delta as a function of coolant temperature, dimensionless.

The SI Controller block uses this parameter to account for the extra fuel delivered to the spark-ignition (SI) engine during startup. If the engine speed is greater than the **Engine cranking speed** parameter, the SI Controller block enriches the optimal relative air-fuel ratio (λ) with an exponentially decaying delta λ . To initialize the delta λ , the block uses the **Engine startup lambda enrichment delta vs coolant temperature** parameter to create a lambda enrichment table that is a function of the engine coolant temperature. The delta λ exponentially decays to zero based on a time constant specified with the **Engine startup lambda enrichment delta time constant vs coolant temperature** parameter.

Dependencies

To create this parameter, on the **Fuel** tab, on the **Open-loop fuel** pane, clear **Input lambda**.

Engine startup lambda enrichment delta time constant vs coolant temperature, f_startup_lambda_delta_timecnst – Lambda time constant vector

Engine startup lambda enrichment delta time constant versus coolant temperature, in s.

The SI Controller block uses this parameter to account for the extra fuel delivered to the spark-ignition (SI) engine during startup. If the engine speed is greater than the **Engine cranking speed** parameter, the SI Controller block enriches the optimal relative air-fuel ratio (λ) with an exponentially decaying delta λ . To initialize the delta λ , the block uses the **Engine startup lambda enrichment delta vs coolant temperature** parameter to create a lambda enrichment table that is a function of the engine coolant temperature. The delta λ exponentially decays to zero based on a time constant specified with the **Engine startup lambda enrichment delta time constant vs coolant temperature** parameter.

Dependencies

To create this parameter, on the **Fuel** tab, on the **Open-loop fuel** pane, clear **Input lambda**.

Engine startup coolant temperature breakpoints, f_startup_ect_bpt – Breakpoints vector

Engine startup coolant temperature breakpoints, in C.

The SI Controller block uses this parameter to account for the extra fuel delivered to the spark-ignition (SI) engine during startup. If the engine speed is greater than the **Engine**

cranking speed parameter, the SI Controller block enriches the optimal relative air-fuel ratio (λ) with an exponentially decaying delta λ . To initialize the delta λ , the block uses the **Engine startup lambda enrichment delta vs coolant temperature** parameter to create a lambda enrichment table that is a function of the engine coolant temperature. The delta λ exponentially decays to zero based on a time constant specified with the **Engine startup lambda enrichment delta time constant vs coolant temperature** parameter.

Dependencies

To create this parameter, on the **Fuel** tab, on the **Open-loop fuel** pane, clear **Input lambda**.

Closed-loop feedback — Minimize commanded AFR error

off (default) | on

Select option to minimize the commanded air-fuel-ratio (λ), λ_{cmd} error.

Dependencies

Selecting this parameter enables these parameters:

- **Closed-loop fuel proportional gain, ClsdLpFuelPGain**
- **Closed-loop fuel integral gain, ClsdLpFuelIGain**
- **Closed-loop fuel integrator limit, ClsdLpFuelIntgLmt**
- **Lambda dither amplitude, LambdaDitherAmp**
- **Lambda dither frequency, LambdaDitherFrq**
- **Oxygen sensor stoichiometric reset voltage, O2ResetStoichVoltSen**
- **Oxygen sensor minimum voltage reset, O2ResetMinVoltSen**
- **Oxygen sensor maximum voltage reset, O2ResetMaxVoltSen**
- **Oxygen sensor voltage learn update period, O2LearnUpdatePerSen**
- **Oxygen sensor voltage amplitude minimum, O2AmpMinVoltSen**
- **Oxygen sensor ready voltage, O2ReadyVoltSen**
- **Oxygen sensor not ready voltage, O2NotReadyVoltSen**

Dither — Model catalytic conversion efficiency

off (default) | on

Configure the block to model dither. For open-loop analysis, select this option to tune for maximum catalytic conversion efficiency.

Dependencies

By default, selecting **Closed-loop feedback** configures the block to model dither.

To enable this parameter for open-loop air-fuel-ratio (lambda) commands, clear **Closed-loop feedback**.

Selecting this parameter enables these parameters:

- **Lambda dither amplitude, LambdaDitherAmp**
- **Lambda dither frequency, LambdaDitherFrq**

Closed-loop fuel proportional gain, ClsdLpFuelPGain — Proportional gain
scalar

Closed-loop fuel proportional gain, dimensionless.

Dependencies

To enable this parameter, on the **Fuel** tab, on the **Closed-loop fuel** pane, select **Closed-loop feedback**.

Closed-loop fuel integral gain, ClsdLpFuelIGain — Integral gain
scalar

Closed-loop fuel integral gain, dimensionless.

Dependencies

To enable this parameter, on the **Fuel** tab, on the **Closed-loop fuel** pane, select **Closed-loop feedback**.

Closed-loop fuel integrator limit, ClsdLpFuelIntgLmt — Integrator limit
scalar

Closed-loop fuel integrator limit, dimensionless.

Dependencies

To enable this parameter, on the **Fuel** tab, on the **Closed-loop fuel** pane, select **Closed-loop feedback**.

Lambda dither amplitude, LambdaDitherAmp — Amplitude

scalar

Lambda dither amplitude, dimensionless.

Dependencies

To enable this parameter, on the **Fuel** tab, on the **Closed-loop fuel** pane, select either **Closed-loop feedback** or **Dither**.

Lambda dither frequency, LambdaDitherFrq — Frequency

scalar

Lambda dither frequency, in Hz.

Dependencies

To enable this parameter, on the **Fuel** tab, on the **Closed-loop fuel** pane, select either **Closed-loop feedback** or **Dither**.

Oxygen sensor stoichiometric reset voltage, O2ResetStoichVoltSen — Closed-loop AFR control

scalar

Oxygen sensor stoichiometric reset voltage, O2ResetStoichVoltSen, in mV.

Dependencies

To enable this parameter, on the **Fuel** tab, on the **Closed-loop fuel** pane, select **Closed-loop feedback**.

Oxygen sensor minimum voltage reset, O2ResetMinVoltSen — Closed-loop AFR control

scalar

Oxygen sensor minimum voltage reset, O2ResetMinVoltSen, in mV.

Dependencies

To enable this parameter, on the **Fuel** tab, on the **Closed-loop fuel** pane, select **Closed-loop feedback**.

Oxygen sensor maximum voltage reset, O2ResetMaxVoltSen — Closed-loop AFR control

scalar

Oxygen sensor maximum voltage reset, O2ResetMaxVoltSen, in mV.

Dependencies

To enable this parameter, on the **Fuel** tab, on the **Closed-loop fuel** pane, select **Closed-loop feedback**.

Oxygen sensor voltage learn update period, O2LearnUpdatePerSen — Closed-loop AFR control

scalar

Oxygen sensor voltage learn update period, O2LearnUpdatePerSen, in mV.

Dependencies

To enable this parameter, on the **Fuel** tab, on the **Closed-loop fuel** pane, select **Closed-loop feedback**.

Oxygen sensor voltage amplitude minimum, O2AmpMinVoltSen — Closed-loop AFR control

scalar

Oxygen sensor voltage amplitude minimum, O2AmpMinVoltSen, in mV.

Dependencies

To enable this parameter, on the **Fuel** tab, on the **Closed-loop fuel** pane, select **Closed-loop feedback**.

Oxygen sensor ready voltage, O2ReadyVoltSen — Closed-loop AFR control

scalar

Oxygen sensor ready voltage, O2ReadyVoltSen, in mV.

Dependencies

To enable this parameter, on the **Fuel** tab, on the **Closed-loop fuel** pane, select **Closed-loop feedback**.

Oxygen sensor not ready voltage, O2NotReadyVoltSen — Closed-loop AFR control

scalar

Oxygen sensor not ready voltage, O2NotReadyVoltSen, in mV.

Dependencies

To enable this parameter, on the **Fuel** tab, on the **Closed-loop fuel** pane, select **Closed-loop feedback**.

Spark

Spark advance table, **f_sa** — Lookup table


array

The spark advance lookup table is a function of estimated load and engine speed.

$$SA = f_{SA}(L_{est}, N)$$

where:

- SA is spark advance, in crank advance degrees.
- $L_{est}=L$ is estimated engine load, dimensionless.
- N is engine speed, in rpm.

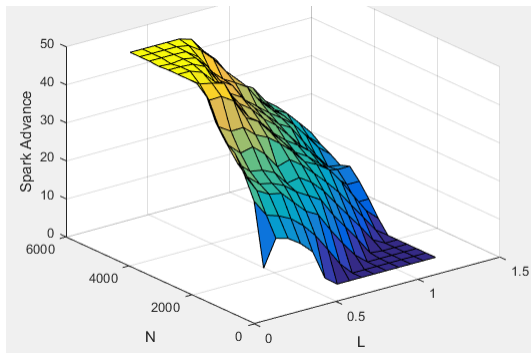

Load breakpoints, **f_sa_ld_bpt** — Breakpoints

array

Load breakpoints, dimensionless.

Speed breakpoints, **f_sa_n_bpt** — Breakpoints

array

Speed breakpoints, in rpm.

Idle Speed**Target idle speed, N_{idle} – Speed**

scalar

Target idle speed, N_{idle} , in rpm.

Enable torque command limit, $Trq_{idlecmd_enable}$ – Torque

scalar

Torque to enable the idle speed controller, $Trq_{idlecmd,enable}$, in N·m.

Maximum torque command, $Trq_{idlecmd_max}$ – Torque

scalar

Maximum idle controller commanded torque, $Trq_{idlecmd,max}$, in N·m.

Proportional gain, Kp_{idle} – PI Controller

scalar

Proportional gain for idle speed control, $K_{p,idle}$, in N·m/rpm.

Integral gain, Ki_{idle} – PI Controller

scalar

Integral gain for idle speed control, $K_{i,idle}$, in N·m/(rpm·s).

Rev-limiter speed threshold – Engine speed limit

scalar

Engine speed limit, N_{lim} , in rpm.

If the engine speed, N , exceeds the engine speed limit, N_{lim} , the block sets the commanded engine torque to 0.

To smoothly transition the torque command to 0 as the engine speed approaches the speed limit, the block implements a lookup table multiplier. The lookup table multiplies the torque command by a value that ranges from 0 (engine speed exceeds limit) to 1 (engine speed does not exceed the limit).

Estimation

Air

Number of cylinders, NCyl — Engine cylinders

scalar

Number of engine cylinders, N_{cyl} .

Crank revolutions per power stroke, Cps — Revolutions per stroke

scalar

Crankshaft revolutions per power stroke, Cps , in rev/stroke.

Total displaced volume, Vd — Volume

scalar

Displaced volume, V_d , in m^3 .

Ideal gas constant air, Rair — Constant

scalar

Ideal gas constant, R_{air} , in $J/(kg \cdot K)$.

Air standard pressure, Pstd — Pressure

scalar

Standard air pressure, P_{std} , in Pa.

Air standard temperature, Tstd — Temperature

scalar

Standard air temperature, T_{std} , in K.

Speed-density volumetric efficiency, f_nv — Lookup table


array

The engine volumetric efficiency lookup table, f_{η_v} , is a function of intake manifold absolute pressure and engine speed

$$\eta_v = f_{\eta_v}(MAP, N)$$

where:

- η_v is engine volumetric efficiency, dimensionless.
- MAP is intake manifold absolute pressure, in KPa.
- N is engine speed, in rpm.

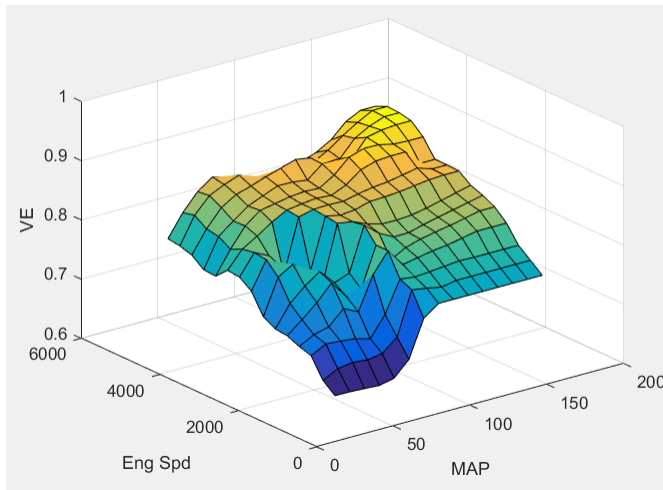

Dependencies

To enable this parameter, for the **Air mass flow estimation model** parameter, select Simple Speed-Density.

Speed-density intake manifold pressure breakpoints, $f_{nv_prs_bpt}$ — Breakpoints

array

Intake manifold pressure breakpoints for speed-density volumetric efficiency lookup table, in KPa.

Dependencies

To enable this parameter, for the **Air mass flow estimation model** parameter, select Simple Speed-Density.

Speed-density engine speed breakpoints, $f_{nv_n_bpt}$ — Breakpoints

array

Engine speed breakpoints for speed-density volumetric efficiency lookup table, in rpm.

Dependencies

To enable this parameter, for the **Air mass flow estimation model** parameter, select Simple Speed-Density.


Cylinder volume at intake valve close table, $f_{V_{IVC}}$ — 2-D lookup table array

The cylinder volume at intake valve close table (IVC), $f_{V_{IVC}}$ is a function of the intake cam phaser angle

$$V_{IVC} = f_{V_{IVC}}(\varphi_{ICP})$$

where:

- V_{IVC} is cylinder volume at IVC, in L.
- φ_{ICP} is intake cam phaser angle, in crank advance degrees.

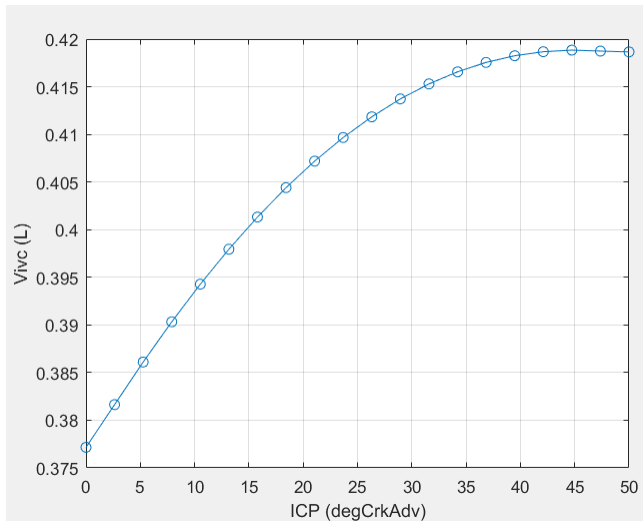

Dependencies

To enable this parameter, for the **Air mass flow estimation model** parameter, select Dual Variable Cam Phasing.

Engine speed breakpoints, f_tm_corr_n_bpt — Breakpoints

array

Engine speed breakpoints, in rpm.

Dependencies

To enable this parameter, for the **Air mass flow estimation model** parameter, select Dual Variable Cam Phasing.

Cylinder volume intake cam phase breakpoints, f_vivc_icp_bpt — Breakpoints

array

Cylinder volume at intake valve close table breakpoints.

Dependencies

To enable this parameter, for the **Air mass flow estimation model** parameter, select Dual Variable Cam Phasing.

Cylinder trapped mass correction factor, f_tm_corr — Lookup table


array

The trapped mass correction factor table, $f_{TM_{corr}}$, is a function of the normalized density and engine speed

$$TM_{corr} = f_{TM_{corr}}(\rho_{norm}, N)$$

where:

- TM_{corr} , is trapped mass correction multiplier, dimensionless.
- ρ_{norm} is normalized density, dimensionless.
- N is engine speed, in rpm.

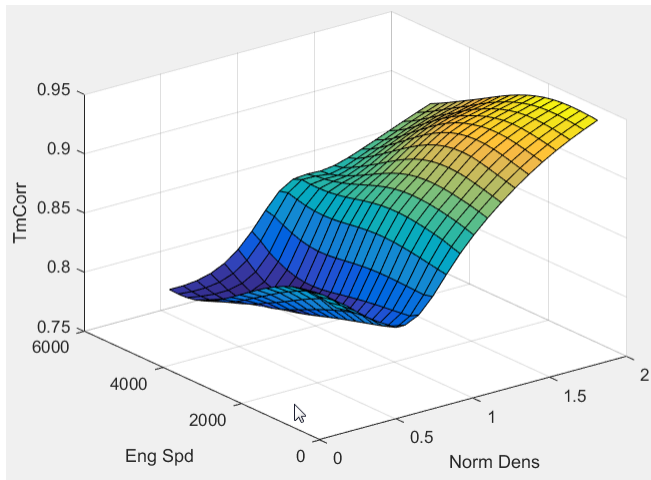

Dependencies

To enable this parameter, for the **Air mass flow estimation model** parameter, select Dual Variable Cam Phasing.

Normalized density breakpoints, **f_tm_corr_nd_bpt** — Breakpoints array

Normalized density breakpoints.

Dependencies

To enable this parameter, for the **Air mass flow estimation model** parameter, select Dual Variable Cam Phasing.

Intake mass flow, **f_mdot_intk** — Lookup table array


The phaser intake mass flow model lookup table is a function of exhaust cam phaser angles and trapped air mass flow

$$\dot{m}_{intkideal} = f_{intkideal}(\varphi_{ECP}, TM_{flow})$$

where:

- $\dot{m}_{intkideal}$ is engine intake port mass flow at arbitrary cam phaser angles, in g/s.

- φ_{ECP} is exhaust cam phaser angle, in degrees crank retard.
- TM_{flow} is flow rate equivalent to corrected trapped mass at the current engine speed, in g/s.

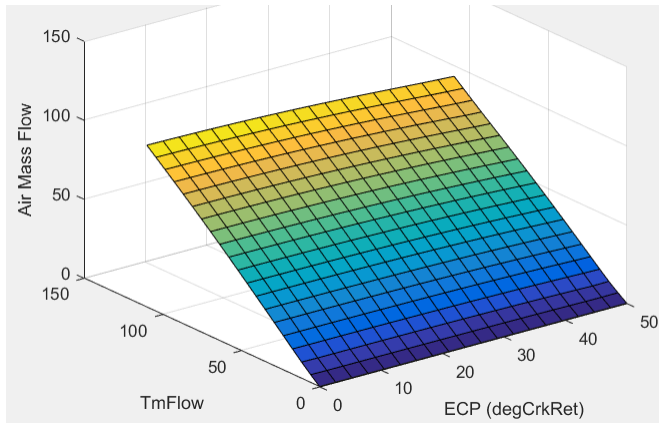

Dependencies

To enable this parameter, for the **Air mass flow estimation model** parameter, select Dual Variable Cam Phasing.

Exhaust cam phase breakpoints, $f_mdot_air_ecp_bpt$ — Breakpoints array

Exhaust cam phaser breakpoints for air mass flow lookup table.

Dependencies

To enable this parameter, for the **Air mass flow estimation model** parameter, select Dual Variable Cam Phasing.

Trapped mass flow breakpoints, $f_mdot_trpd_bpt$ — Breakpoints array

Trapped mass flow breakpoints for air mass flow lookup table.

Dependencies

To enable this parameter, for the **Air mass flow estimation model** parameter, select Dual Variable Cam Phasing.

Air mass flow correction factor, $f_{\dot{m}_{air_corr}}$ — Lookup table


array

The intake air mass flow correction lookup table, $f_{aircorr}$, is a function of ideal load and engine speed

$$\dot{m}_{air} = \dot{m}_{intkideal} f_{aircorr}(L_{ideal}, N)$$

where:

- L_{ideal} is engine load (normalized cylinder air mass) at arbitrary cam phaser angles, uncorrected for final steady-state cam phaser angles, dimensionless.
- N is engine speed, in rpm.
- \dot{m}_{air} is engine intake air mass flow final correction at steady-state cam phaser angles, in g/s.
- $\dot{m}_{intkideal}$ is engine intake port mass flow at arbitrary cam phaser angles, in g/s.

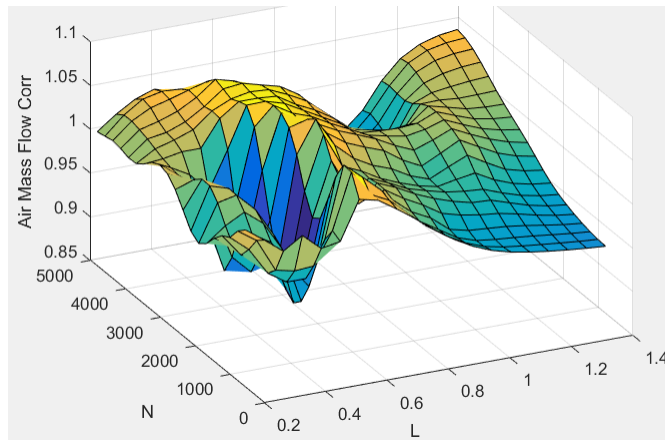

Dependencies

To enable this parameter, for the **Air mass flow estimation model** parameter, select Dual Variable Cam Phasing.

Engine load breakpoints for air mass flow correction, $f_{\dot{m}_{air_corr_ld_bpt}}$ — Breakpoints

array

Engine load breakpoints for air mass flow final correction.

Dependencies

To enable this parameter, for the **Air mass flow estimation model** parameter, select Dual Variable Cam Phasing.

Engine speed breakpoints for air mass flow correction, f_mdot_air_n_bpt – Breakpoints

vector

Engine speed breakpoints for air mass flow final correction.

Dependencies

To enable this parameter, for the **Air mass flow estimation model** parameter, select Dual Variable Cam Phasing.

EGR flow time constant, tau_egr – Constant

scalar

EGR flow time constant, τ_{EGR} , in s.

Intake system pressure ratio table, f_intksys_stdflow_pr – Table


array

The pressure ratio is a function of the standard mass flow

$$\frac{P_{out,EGR}}{P_{amb}} = f_{intksys,pr}(\dot{m}_{air,std})$$

where:

- $\dot{m}_{air,std}$ is standard mass flow, in g/s.
- $\frac{P_{out,EGR}}{P_{amb}}$ is pressure ratio, dimensionless.

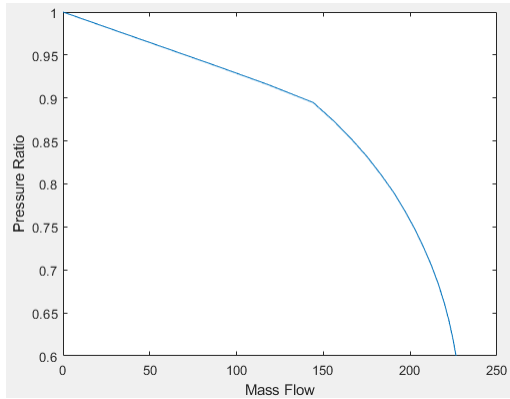

Standard mass flow rate breakpoints for intake pressure ratio, $f_intksys_stdflow_bpt$ — Breakpoints
vector

Standard mass flow, $\dot{m}_{air, std}$, in g/s.


EGR valve standard mass flow rate, $f_egr_stdflow$ — Table
array

The EGR valve standard mass flow lookup table is a function of EGR valve area percent and the pressure ratio

$$\dot{m}_{EGR, std} = f_{EGR, std} \left(EGRap, \frac{P_{out, EGR}}{P_{in, EGR}} \right)$$

where:

- $\dot{m}_{EGR, std}$ is EGR valve standard mass flow, dimensionless.
- $EGRap$ is EGR valve flow area percent, in percent.
- $\frac{P_{out, EGR}}{P_{in, EGR}}$ is the pressure ratio, dimensionless.

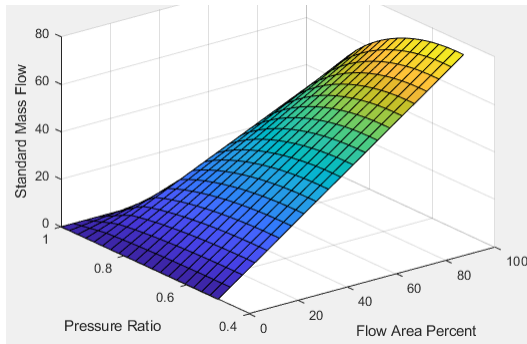

EGR valve standard flow pressure ratio breakpoints,
f_egr_stdflow_pr_bpt – Breakpoints
 vector

EGR valve standard flow pressure ratio, $\frac{P_{out,EGR}}{P_{in,EGR}}$, dimensionless.

EGR valve standard flow area percent breakpoints,
f_egr_stdflow_egrp_bpt – Breakpoints
 vector


EGR valve flow area percent, $EGRap$, in percent.

Torque

Torque table, f_tq_n1 – Lookup table
 [L x N] array

For the simple torque lookup table model, the SI engine uses a lookup table map that is a function of engine speed and load, $T_{brake} = f_{TnL}(L, N)$, where:

- T_{brake} is engine brake torque after accounting for spark advance, AFR, and friction effects, in N·m.
- L is engine load, as a normalized cylinder air mass, dimensionless.
- N is engine speed, in rpm.

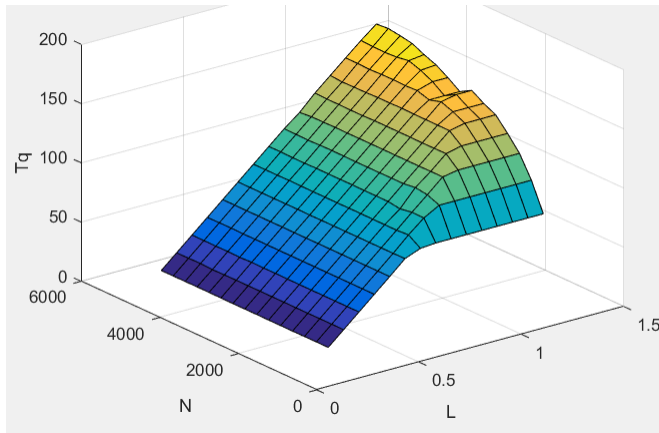

The simple torque lookup model assumes that the calibration has negative torque values to indicate the non-firing engine load (L) versus speed (N) condition. The calibrated table (L -by- N) contains the non-firing data in the first table row (1 -by- N). When the fuel delivered to the engine is zero, the model uses the data in the first table row (1 -by- N) at or above 100 AFR. 100 AFR results from fuel cutoff or very lean operation where combustion cannot occur.

Dependencies

To enable this parameter, for the **Torque model** parameter, select Simple Torque Lookup.

Torque table load breakpoints, $f_{tq_nl_l_bpt}$ — Breakpoints

$[1 \times L]$ vector

Engine load breakpoints, L , dimensionless.

Dependencies

To enable this parameter, for the **Torque model** parameter, select Simple Torque Lookup.

Torque table speed breakpoints, $f_{tq_nl_n_bpt}$ — Breakpoints

$[1 \times N]$ vector

Engine speed breakpoints, N , in rpm.

Dependencies


To enable this parameter, for the **Torque model** parameter, select Simple Torque Lookup.

Inner torque table, $f_{Tq_{inr}}$ – Lookup table

array

The inner torque lookup table, $f_{Tq_{inr}}$, is a function of engine speed and engine load, $Tq_{inr} = f_{Tq_{inr}}(L, N)$, where:

- Tq_{inr} is inner torque based on gross indicated mean effective pressure, in N·m.
- L is engine load at arbitrary cam phaser angles, corrected for final steady-state cam phaser angles, dimensionless.
- N is engine speed, in rpm.

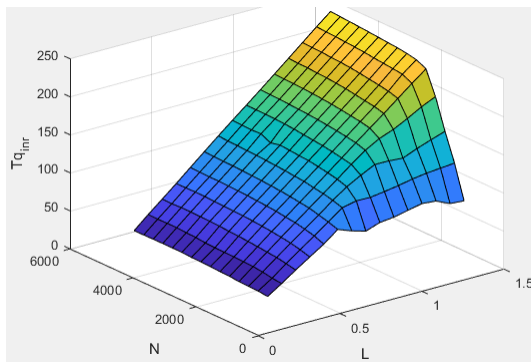

Dependencies

To enable this parameter, for the **Torque model** parameter, select Torque Structure.


Friction torque table, $f_{Tq_{fric}}$ – Lookup table

array

The friction torque lookup table, $f_{Tq_{fric}}$, is a function of engine speed and engine load, $Tq_{fric} = f_{Tq_{fric}}(L, N)$, where:

- Tq_{fric} is friction torque offset to inner torque, in N·m.

- L is engine load at arbitrary cam phaser angles, corrected for final steady-state cam phaser angles, dimensionless.
- N is engine speed, in rpm.

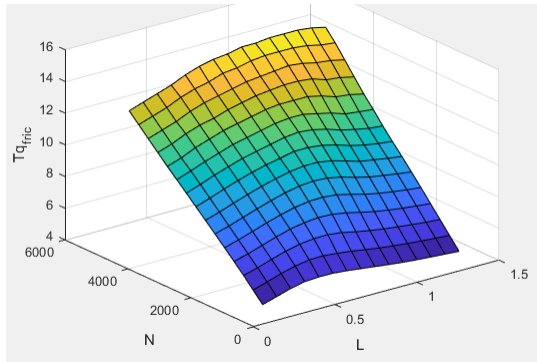

Dependencies

To enable this parameter, for the **Torque model** parameter, select Torque Structure.

Engine temperature modifier on friction torque, $f_{fric_temp_mod}$ — Lookup table

vector

Engine temperature modifier on friction torque, $f_{fric,temp}$, dimensionless.

Dependencies

To enable this parameter, for the **Torque model** parameter, select Torque Structure.

Engine temperature modifier breakpoints, $f_{fric_temp_bpt}$ — Breakpoints

vector

Engine temperature modifier breakpoints, in K.

Dependencies


To enable this parameter, for the **Torque model** parameter, select Torque Structure.

Pumping torque table, f_{tq_pump} — Lookup table

array

The pumping torque lookup table, $f_{T_{pump}}$, is a function of engine speed and injected fuel mass, $T_{pump} = f_{T_{pump}}(L, N)$, where:

- T_{pump} is pumping torque, in N·m.
- L is engine load, as a normalized cylinder air mass, dimensionless.
- N is engine speed, in rpm.

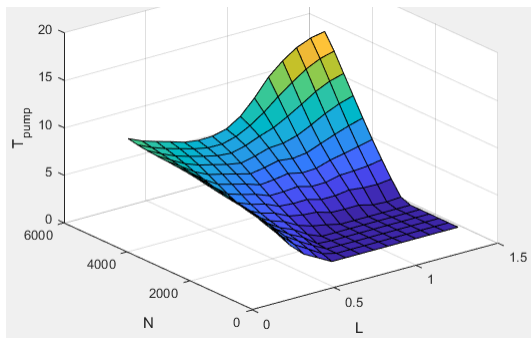

Dependencies


To enable this parameter, for the **Torque model** parameter, select Torque Structure.

Optimal spark table, f_{sa_opt} — Lookup table

array

The optimal spark lookup table, $f_{SA_{opt}}$, is a function of engine speed and engine load, $SA_{opt} = f_{SA_{opt}}(L, N)$, where:

- SA_{opt} is optimal spark advance timing for maximum inner torque at stoichiometric air-fuel ratio (AFR), in deg.
- L is engine load at arbitrary cam phaser angles, corrected for final steady-state cam phaser angles, dimensionless.
- N is engine speed, in rpm.

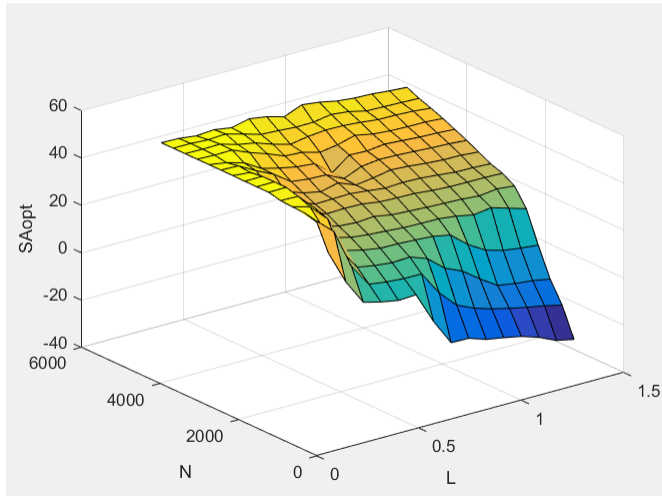

Dependencies

To enable this parameter, for the **Torque model** parameter, select Torque Structure.

Inner torque load breakpoints, $f_{tq_inr_l_bpt}$ — Breakpoints

array

Inner torque load breakpoints, dimensionless.

Dependencies

To enable this parameter, for the **Torque model** parameter, select Torque Structure.

Inner torque speed breakpoints, $f_{tq_inr_n_bpt}$ — Breakpoints

array

Inner torque speed breakpoints, in rpm.

Dependencies

To enable this parameter, for the **Torque model** parameter, select Torque Structure.

Spark efficiency table, f_{m_sa} — Lookup table

array


The spark efficiency lookup table, f_{Msa} , is a function of the spark retard from optimal

$$M_{sa} = f_{Msa}(\Delta SA)$$

$$\Delta SA = SA_{opt} - SA$$

where:

- M_{sa} is the spark retard efficiency multiplier, dimensionless.
- ΔSA is the spark retard timing distance from optimal spark advance, in deg.

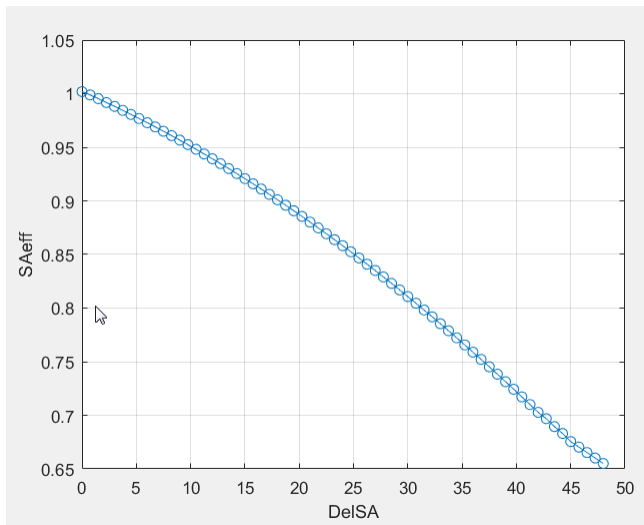

Dependencies

To enable this parameter, for the **Torque model** parameter, select Torque Structure.

Spark retard from optimal, **f_del_sa_bpt** – Breakpoints

scalar

Spark retard from optimal inner torque timing breakpoints, in deg.

Dependencies


To enable this parameter, for the **Torque model** parameter, select Torque Structure.

Lambda efficiency, **f_m_lam** – Lookup table

array

The lambda efficiency lookup table, $f_{M\lambda}$, is a function of lambda, $M_\lambda = f_{M\lambda}(\lambda)$, where:

- M_λ is the lambda multiplier on inner torque to account for the air-fuel ratio (AFR) effect, dimensionless.
- λ is lambda, AFR normalized to stoichiometric fuel AFR, dimensionless.

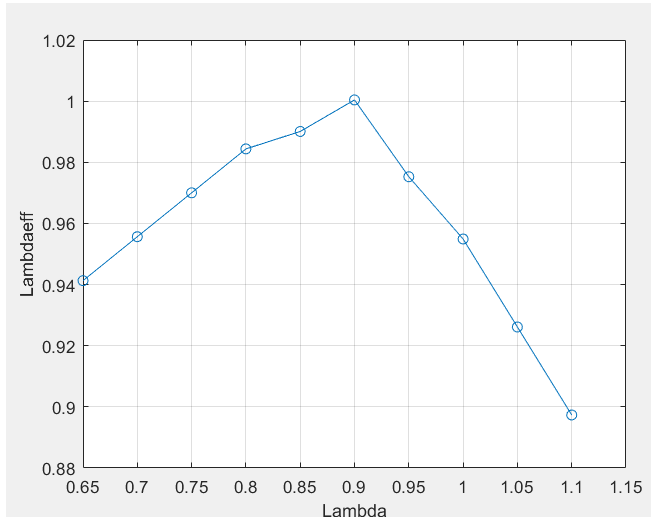

Dependencies

To enable this parameter, for the **Torque model** parameter, select Torque Structure.

Lambda breakpoints, $f_m_lam_bpt$ — Breakpoints

array

Lambda effect on inner torque lambda breakpoints, dimensionless.

Dependencies

To enable this parameter, for the **Torque model** parameter, select Torque Structure.

Exhaust

Exhaust temperature table, f_t_exh — Lookup table


array

The exhaust temperature lookup table, $f_{T_{exh}}$, is a function of engine load and engine speed

$$T_{exh} = f_{Texh}(L, N)$$

where:

- T_{exh} is engine exhaust temperature, in K.
- L is normalized cylinder air mass or engine load, dimensionless.
- N is engine speed, in rpm.

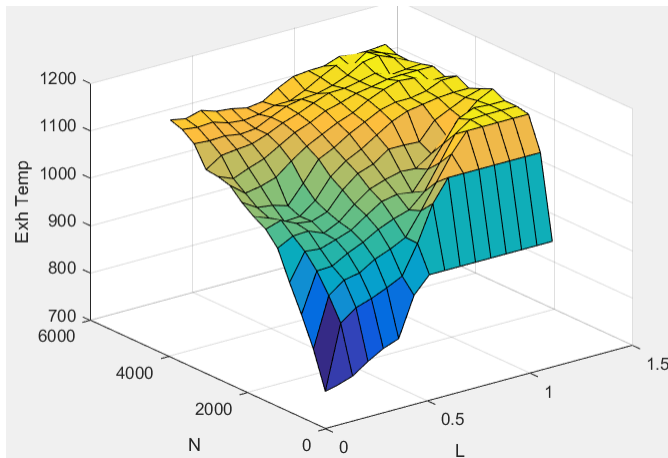

Load breakpoints, `f_t_exh_l_bpt` — Breakpoints

array

Engine load breakpoints used for exhaust temperature lookup table.

Speed breakpoints, `f_t_exh_n_bpt` — Breakpoints

array

Engine speed breakpoints used for exhaust temperature lookup table, in rpm.

References

- [1] Gerhardt, J., Hönninger, H., and Bischof, H., *A New Approach to Functional and Software Structure for Engine Management Systems — BOSCH ME7*. SAE Technical Paper 980801, 1998.

- [2] Heywood, John B. *Internal Combustion Engine Fundamentals*. New York: McGraw-Hill, 1988.
- [3] Leone, T. Christenson, E., Stein, R., *Comparison of Variable Camshaft Timing Strategies at Part Load*. SAE Technical Paper 960584, 1996, doi:10.4271/960584.
- [4] Liu, F. and Pfeiffer, J., *Estimation Algorithms for Low Pressure Cooled EGR in Spark-Ignition Engines*. SAE Int. J. Engines 8(4):2015, doi:10.4271/2015-01-1620.

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using Simulink® Coder™.

See Also

Mapped SI Engine | SI Core Engine

Topics

“Engine Calibration Maps”

External Websites


Developing a Period-Based Air-Fuel Ratio Controller Using a Low-Cost Switching Sensor

Introduced in R2017a

SI Core Engine

Spark-ignition engine from intake to exhaust port

Library: Powertrain Blockset / Propulsion / Combustion Engine
Components / Core Engine

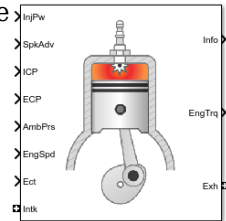

Description

The SI Core Engine block implements a spark-ignition (SI) engine from intake to exhaust port. You can use the block in larger vehicle models, hardware-in-the-loop (HIL) engine control design, or vehicle-level fuel economy and performance simulations.

The SI Core Engine block calculates:

- Brake torque
- Fuel flow
- Port gas mass flow, including exhaust gas recirculation (EGR)
- Air-fuel ratio (AFR)
- Exhaust temperature and exhaust mass flow rate
- Engine-out (EO) exhaust emissions
 - Hydrocarbon (HC)
 - Carbon monoxide (CO)
 - Nitric oxide and nitrogen dioxide (NO_x)
 - Carbon dioxide (CO₂)
 - Particulate matter (PM)

Air Mass Flow

To calculate engine air mass flow, configure the SI engine to use either of these air mass flow models.

Air Mass Flow Model	Description
"SI Engine Speed-Density Air Mass Flow Model"	<p>Uses the speed-density equation to calculate the engine air mass flow, relating the engine air mass flow to the intake manifold pressure and engine speed. Consider using this air mass flow model in engines with fixed valvetrain designs.</p>
"SI Engine Dual-Independent Cam Phaser Air Mass Flow Model"	<p>To calculate the engine air mass flow, the dual-independent cam phaser model uses:</p> <ul style="list-style-type: none"> • Empirical calibration parameters developed from engine mapping measurements • Desktop calibration parameters derived from engine computer-aided design (CAD) data <p>In contrast to typical embedded air mass flow calculations based on direct air mass flow measurement with an air mass flow (MAF) sensor, this air mass flow model offers:</p> <ul style="list-style-type: none"> • Elimination of MAF sensors in dual cam-phased valvetrain applications • Reasonable accuracy with changes in altitude • Semiphysical modeling approach • Bounded behavior • Suitable execution time for electronic control unit (ECU) implementation • Systematic development of a relatively small number of calibration parameters

Brake Torque

To calculate the brake torque, configure the SI engine to use either of these torque models.

Brake Torque Model	Description
“SI Engine Torque Structure Model”	For the structured brake torque calculation, the SI engine uses tables for the inner torque, friction torque, optimal spark, spark efficiency, and lambda efficiency.
“SI Engine Simple Torque Model”	For the simple brake torque calculation, the SI engine block uses a torque lookup table map that is a function of engine speed and load.

Fuel Flow

To calculate the fuel flow, the SI Core Engine block uses fuel injector characteristics and fuel injector pulse-width.

$$\dot{m}_{fuel} = \frac{NS_{inj}Pw_{inj}N_{cyl}}{Cps\left(\frac{60s}{min}\right)\left(\frac{1000mg}{g}\right)}$$

To calculate the fuel economy for high-fidelity models, the block uses the volumetric fuel flow.

$$Q_{fuel} = \frac{\dot{m}_{fuel}}{\left(\frac{1000kg}{m^3}\right)Sg_{fuel}}$$

The equation uses these variables.

\dot{m}_{fuel}	Fuel mass flow, g/s
ω	Engine rotational speed, rad/s
Cps	Crankshaft revolutions per power stroke, rev/stroke
S_{inj}	Fuel injector slope, mg/ms
Pw_{inj}	Fuel injector pulse-width, ms
N_{cyl}	Number of engine cylinders
N	Engine speed, rpm
Sg_{fuel}	Specific gravity of fuel
Q_{fuel}	Volumetric fuel flow

Air-Fuel Ratio

To calculate the air-fuel (AFR) ratio, the CI Core Engine and SI Core Engine blocks implement this equation.

$$AFR = \frac{\dot{m}_{air}}{\dot{m}_{fuel}}$$

The CI Core Engine uses this equation to calculate the relative AFR.

$$\lambda = \frac{AFR}{AFR_s}$$

To calculate the exhaust gas recirculation (EGR), the blocks implement this equation. The calculation expresses the EGR as a percent of the total intake port flow.

$$EGR_{pct} = 100 \frac{\dot{m}_{intk,b}}{\dot{m}_{intk}} = 100 y_{intk,b}$$

The equations use these variables.

AFR	Air-fuel ratio
AFR_s	Stoichiometric air-fuel ratio
\dot{m}_{intk}	Engine air mass flow
\dot{m}_{fuel}	Fuel mass flow
λ	Relative AFR
$y_{intk,b}$	Intake burned mass fraction
EGR_{pct}	EGR percent
$\dot{m}_{intk,b}$	Recirculated burned gas mass flow rate

Exhaust

The block calculates the:

- Exhaust gas temperature
- Exhaust gas-specific enthalpy
- Exhaust gas mass flow rate

- Engine-out (EO) exhaust emissions:
 - Hydrocarbon (HC)
 - Carbon monoxide (CO)
 - Nitric oxide and nitrogen dioxide (NOx)
 - Carbon dioxide (CO₂)
 - Particulate matter (PM)

The exhaust temperature determines the specific enthalpy.

$$h_{exh} = Cp_{exh}T_{exh}$$

The exhaust mass flow rate is the sum of the intake port air mass flow and the fuel mass flow.

$$\dot{m}_{exh} = \dot{m}_{intake} + \dot{m}_{fuel}$$

To calculate the exhaust emissions, the block multiplies the emission mass fraction by the exhaust mass flow rate. To determine the emission mass fractions, the block uses lookup tables that are functions of the engine torque and speed.

$$y_{exh,i} = f_{i_frac}(T_{brake}, N)$$

$$\dot{m}_{exh,i} = \dot{m}_{exh}y_{exh,i}$$

The fraction of air and fuel entering the intake port, injected fuel, and stoichiometric AFR determine the air mass fraction that exits the exhaust.

$$y_{exh,air} = \max\left[y_{in,air} - \frac{\dot{m}_{fuel} + y_{in,fuel}\dot{m}_{intake}}{\dot{m}_{fuel} + \dot{m}_{intake}}AFR_s\right]$$

If the engine is operating at the stoichiometric or fuel rich AFR, no air exits the exhaust. Unburned hydrocarbons and burned gas comprise the remainder of the exhaust gas. This equation determines the exhaust burned gas mass fraction.

$$y_{exh,b} = \max[(1 - y_{exh,air} - y_{exh,HC}), 0]$$

The equations use these variables.

T_{exh} Engine exhaust temperature

h_{exh}	Exhaust manifold inlet-specific enthalpy
Cp_{exh}	Exhaust gas specific heat
\dot{m}_{intk}	Intake port air mass flow rate
\dot{m}_{fuel}	Fuel mass flow rate
\dot{m}_{exh}	Exhaust mass flow rate
$y_{in, fuel}$	Intake fuel mass fraction
$y_{exh, i}$	Exhaust mass fraction for $i = CO_2, CO, HC, NOx, air, burned\ gas, and\ PM$
$\dot{m}_{exh, i}$	Exhaust mass flow rate for $i = CO_2, CO, HC, NOx, air, burned\ gas, and\ PM$
T_{brake}	Engine brake torque
N	Engine speed
$y_{exh, air}$	Exhaust air mass fraction
$y_{exh, b}$	Exhaust air burned mass fraction

Power Accounting

For the power accounting, the block implements equations that depend on **Torque model**.

When you set **Torque model** to Simple Torque Lookup, the block implements these equations.

Bus Signal		Description	Equations
PwrInfo	PwrTrnsfrd — Power transferred between blocks	PwrIntkHeatFlw	Intake heat flow $\dot{m}_{intk}h_{intk}$
		PwrExhHeatFlw	Exhaust heat flow $-\dot{m}_{exh}h_{exh}$
<ul style="list-style-type: none"> Positive signals indicate flow into block 			

Bus Signal			Description	Equations
	<ul style="list-style-type: none"> Negative signals indicate flow out of block 	PwrCrkshft	Crankshaft power	$-T_{brake}\omega$
	PwrNotTrnsfrd — Power crossing the block boundary, but not transferred	PwrFuel	Fuel input power	$\dot{m}_{fuel}LHV$
	<ul style="list-style-type: none"> Positive signals indicate an input Negative signals indicate a loss 	PwrLoss	All losses	$T_{brake}\omega - \dot{m}_{fuel}LHV - \dot{m}_{intk}h_{intk} + \dot{m}_{exh}h_{exh}$
	PwrStored — Stored energy rate of change <ul style="list-style-type: none"> Positive signals indicate an increase Negative signals indicate a decrease 	<i>Not used</i>		

When you set **Torque model** to Torque Structure, the block implements these equations.

Bus Signal		Description	Equations
PwrInfo	PwrTrnsfrd — Power transferred between blocks <ul style="list-style-type: none"> Positive signals indicate flow into block Negative signals indicate flow out of block 	PwrIntkHeatFlow	Intake heat flow $\dot{m}_{intk}h_{intk}$
		PwrExhHeatFlow	Exhaust heat flow $-\dot{m}_{exh}h_{exh}$
		PwrCrankshaft	Crankshaft power $-T_{brake}\omega$
	PwrNotTrnsfrd — Power crossing the block boundary, but not transferred <ul style="list-style-type: none"> Positive signals indicate an input Negative signals indicate a loss 	PwrFuel	Fuel input power $\dot{m}_{fuel}LHV$
		PwrFrictionLoss	Friction loss $-T_{fric}\omega$
		PwrPumpLoss	Pumping loss $-T_{pump}\omega$
		PwrHeatTransferLoss	Heat transfer loss $T_{brake}\omega - \dot{m}_{fuel}LHV - \dot{m}_{intk}h_{intk} + \dot{m}_{exh}h_{exh} + T_{fric}\omega + T_{pump}\omega$

Bus Signal		Description	Equations
	PwrStored — Stored energy rate of change <ul style="list-style-type: none"> • Positive signals indicate an increase • Negative signals indicate a decrease 	<i>Not used</i>	

h_{exh} Exhaust manifold inlet-specific enthalpy

h_{intk} Intake port specific enthalpy

\dot{m}_{intk} Intake port air mass flow rate

\dot{m}_{fuel} Fuel mass flow rate

\dot{m}_{exh} Exhaust mass flow rate

ω Engine speed

T_{brake} Brake torque

T_{pump} Engine pumping torque offset to inner torque

T_{fric} Engine friction torque

LHV Fuel lower heating value

Ports

Input

InjPw — Fuel injector pulse-width

scalar

Fuel injector pulse-width, Pw_{inj} , in ms.

SpkAdv — Spark advance

scalar

Spark advance, SA , in degrees crank angle before top dead center (degBTDC).

Dependencies

To create this port, for the **Torque model** parameter, select Torque Structure.

ICP — Intake cam phase angle command

scalar

Intake cam phase angle command, φ_{ICPCMD} , in degCrkAdv, or degrees crank advance.

Dependencies

To create this port, for the **Air mass flow model** parameter, select Dual - Independent Variable Cam Phasing.

ECP — Exhaust cam phase angle command

scalar

Exhaust cam phase angle command, φ_{EPCMD} , in degCrkRet, or degrees crank retard.

Dependencies

To create this port, for the **Air mass flow model** parameter, select Dual - Independent Variable Cam Phasing.

AmbPrs — Ambient pressure

scalar

Ambient pressure, P_{Amb} , in Pa.

Dependencies

To create this port, for the **Air mass flow model** parameter, select Dual - Independent Variable Cam Phasing.

EngSpd — Engine speed

scalar

Engine speed, N , in rpm.

Ect — Engine cooling temperature

scalar

Engine cooling temperature, $T_{coolant}$ in K.

Dependencies

To enable this parameter, for **Torque model**, select Torque Structure.

Intk — Intake port pressure, temperature, enthalpy, mass fractions

two-way connector port

Bus containing the upstream:

- Prs — Pressure, in Pa
- Temp — Temperature, in K
- Enth — Specific enthalpy, in J/kg
- MassFrac — Intake port mass fractions, dimensionless. EGR mass flow at the intake port is burned gas.

Specifically, a bus with these mass fractions:

- O2MassFrac — Oxygen
- N2MassFrac — Nitrogen
- UnbrndFuelMassFrac — Unburned fuel
- CO2MassFrac — Carbon dioxide
- H2OMassFrac — Water
- COMassFrac — Carbon monoxide
- NOMassFrac — Nitric oxide
- NO2MassFrac — Nitrogen dioxide
- NOxMassFrac — Nitric oxide and nitrogen dioxide
- PmMassFrac — Particulate matter
- AirMassFrac — Air
- BrndGasMassFrac — Burned gas

Exh — Exhaust port pressure, temperature, enthalpy, mass fractions

two-way connector port

Bus containing the exhaust:

- Prs — Pressure, in Pa
- Temp — Temperature, in K
- Enth — Specific enthalpy, in J/kg
- MassFrac — Exhaust port mass fractions, dimensionless.

Specifically, a bus with these mass fractions:

- O2MassFrac — Oxygen
- N2MassFrac — Nitrogen
- UnbrndFuelMassFrac — Unburned fuel
- CO2MassFrac — Carbon dioxide
- H2OMassFrac — Water
- COMassFrac — Carbon monoxide
- NOMassFrac — Nitric oxide
- NO2MassFrac — Nitrogen dioxide
- NOxMassFrac — Nitric oxide and nitrogen dioxide
- PmMassFrac — Particulate matter
- AirMassFrac — Air
- BrndGasMassFrac — Burned gas

Output

Info — Bus signal

bus

Bus signal containing these block calculations.

Signal	Description	Variable	Units
IntkGasMassFlw	Engine intake air mass flow.	\dot{m}_{air}	kg/s

Signal	Description	Variable	Units
IntkAirMassFlw	Engine intake port mass flow.	\dot{m}_{intk}	kg/s
NrmlzdAirChrg	Engine load (that is, normalized cylinder air mass) corrected for final steady-state cam phase angles	L	N/A
Afr	Air-fuel ratio at engine exhaust port	AFR	N/A
FuelMassFlw	Fuel flow into engine	\dot{m}_{fuel}	kg/s
FuelVolFlw	Volumetric fuel flow	Q_{fuel}	m ³ /s
ExhManGasTemp	Exhaust gas temperature at exhaust manifold inlet	T_{exh}	K
EngTrq	Engine brake torque	T_{brake}	N·m
EngSpd	Engine speed	N	rpm
IntkCamPhase	Intake cam phaser angle	φ_{ICP}	degrees crank advance
ExhCamPhase	Exhaust cam phaser angle	φ_{ECP}	degrees crank retard
CrkAng	Engine crankshaft absolute angle	$\int_0^{(360)Cps} EngSpd \frac{180}{30} d\theta$ <p>where Cps is crankshaft revolutions per power stroke</p>	degrees crank angle
EgrPct	EGR percent	EGR_{pct}	N/A
EoAir	EO air mass flow rate	\dot{m}_{exh}	kg/s
EoBrndGas	EO burned gas mass flow rate	$y_{exh,b}$	kg/s

Signal			Description	Variable	Units
EoHC			EO hydrocarbon emission mass flow rate	$y_{exh,HC}$	kg/s
EoCO			EO carbon monoxide emission mass flow rate	$y_{exh,CO}$	kg/s
EoNOx			EO nitric oxide and nitrogen dioxide emissions mass flow rate	$y_{exh,NOx}$	kg/s
EoCO2			EO carbon dioxide emission mass flow rate	$y_{exh,CO2}$	kg/s
EoPm			EO particulate matter emission mass flow rate	$y_{exh,PM}$	kg/s
PwrInfo	PwrTrnsfrd	PwrIntkHeatFlw	Intake heat flow	$\dot{m}_{intk}h_{intk}$	W
		PwrExhHeatFlw	Exhaust heat flow	$-\dot{m}_{exh}h_{exh}$	W
		PwrCrkshft	Crankshaft power	$-T_{brake}\omega$	W
	PwrNotTrnsfrd	PwrFuel	Fuel input power	$\dot{m}_{fuel}LHV$	W
		PwrLoss	For Torque model set to Simple Torque Lookup: All losses	$T_{brake}\omega - \dot{m}_{fuel}LHV - \dot{m}_{intk}h_{intk} + \dot{m}_{exh}h_{exh}$	W
		PwrFrictionLoss	For Torque model set to Torque Structure: Friction loss	$-T_{fric}\omega$	W

Signal		Description	Variable	Units
	PwrPumpLoss	For Torque model set to Torque Structure: Pumping loss	$-T_{pump}\omega$	W
	PwrHeatTransfers	For Torque model set to Torque Structure: Heat transfer loss	$T_{brake}\omega - \dot{m}_{fuel}LHV - \dot{m}_{intk}h_{intk} + \dot{m}_{exh}h_{exh} + T_{fric}\omega + T_{pump}\omega$	W
	PwrStored	<i>Not used</i>		

EngTrq — Engine brake torque

scalar

Engine brake torque, T_{brake} , in N·m.

Intk — Intake port mass flow rate, heat flow rate, temperature, mass fraction

two-way connector port

Bus containing:

- MassFlwRate — Intake port mass flow rate, in kg/s
- HeatFlwRate — Intake port heat flow rate, in J/s
- Temp — Intake port temperature, in K
- MassFrac — Intake port mass fractions, dimensionless.

Specifically, a bus with these mass fractions:

- O2MassFrac — Oxygen
- N2MassFrac — Nitrogen
- UnbrndFuelMassFrac — Unburned fuel
- CO2MassFrac — Carbon dioxide
- H2OMassFrac — Water
- COMassFrac — Carbon monoxide

- `NOMassFrac` — Nitric oxide
- `N02MassFrac` — Nitrogen dioxide
- `N0xMassFrac` — Nitric oxide and nitrogen dioxide
- `PmMassFrac` — Particulate matter
- `AirMassFrac` — Air
- `BrndGasMassFrac` — Burned gas

Exh — Exhaust port mass flow rate, heat flow rate, temperature, mass fraction
two-way connector port

Bus containing:

- `MassFlwRate` — Exhaust port mass flow rate, in kg/s
- `HeatFlwRate` — Exhaust heat flow rate, in J/s
- `Temp` — Exhaust temperature, in K
- `MassFrac` — Exhaust port mass fractions, dimensionless.

Specifically, a bus with these mass fractions:

- `O2MassFrac` — Oxygen
- `N2MassFrac` — Nitrogen
- `UnbrndFuelMassFrac` — Unburned fuel
- `C02MassFrac` — Carbon dioxide
- `H20MassFrac` — Water
- `COMassFrac` — Carbon monoxide
- `NOMassFrac` — Nitric oxide
- `N02MassFrac` — Nitrogen dioxide
- `N0xMassFrac` — Nitric oxide and nitrogen dioxide
- `PmMassFrac` — Particulate matter
- `AirMassFrac` — Air
- `BrndGasMassFrac` — Burned gas

Parameters

Block Options

Air mass flow model — Select air mass flow model

Dual-Independent Variable Cam Phasing (default) | Simple Speed-Density

To calculate engine air mass flow, configure the SI engine to use either of these air mass flow models.

Air Mass Flow Model	Description
"SI Engine Speed-Density Air Mass Flow Model"	<p>Uses the speed-density equation to calculate the engine air mass flow, relating the engine air mass flow to the intake manifold pressure and engine speed. Consider using this air mass flow model in engines with fixed valvetrain designs.</p>
"SI Engine Dual-Independent Cam Phaser Air Mass Flow Model"	<p>To calculate the engine air mass flow, the dual-independent cam phaser model uses:</p> <ul style="list-style-type: none"> • Empirical calibration parameters developed from engine mapping measurements • Desktop calibration parameters derived from engine computer-aided design (CAD) data <p>In contrast to typical embedded air mass flow calculations based on direct air mass flow measurement with an air mass flow (MAF) sensor, this air mass flow model offers:</p> <ul style="list-style-type: none"> • Elimination of MAF sensors in dual cam-phased valvetrain applications • Reasonable accuracy with changes in altitude • Semiphysical modeling approach • Bounded behavior • Suitable execution time for electronic control unit (ECU) implementation • Systematic development of a relatively small number of calibration parameters

Dependencies

The table summarizes the parameter dependencies.

Air Mass Flow Model	Enables Parameters
Dual-Independent Variable Cam Phasing	<p>Cylinder volume at intake valve close table, f_vivc</p> <p>Cylinder volume intake cam phase breakpoints, f_vivc_icp_bpt</p> <p>Cylinder trapped mass correction factor, f_tm_corr</p> <p>Normalized density breakpoints, f_tm_corr_nd_bpt</p> <p>Engine speed breakpoints, f_tm_corr_n_bpt</p> <p>Air mass flow, f_mdot_air</p> <p>Exhaust cam phase breakpoints, f_mdot_air_ecp_bpt</p> <p>Trapped mass flow breakpoints, f_mdot_trpd_bpt</p> <p>Air mass flow correction factor, f_mdot_air_corr</p> <p>Engine load breakpoints for air mass flow correction, f_mdot_air_corr_ld_bpt</p> <p>Engine speed breakpoints for air mass flow correction, f_mdot_air_n_bpt</p>
Simple Speed Density	<p>Speed-density volumetric efficiency, f_nv</p> <p>Speed-density intake manifold pressure breakpoints, f_nv_prs_bpt</p> <p>Speed-density engine speed breakpoints, f_nv_n_bpt</p>

Torque model — Select torque model

Torque Structure (default) | Simple Torque Lookup

To calculate the brake torque, configure the SI engine to use either of these torque models.

Brake Torque Model	Description
"SI Engine Torque Structure Model"	For the structured brake torque calculation, the SI engine uses tables for the inner torque, friction torque, optimal spark, spark efficiency, and lambda efficiency.
"SI Engine Simple Torque Model"	For the simple brake torque calculation, the SI engine block uses a torque lookup table map that is a function of engine speed and load.

Dependencies

The table summarizes the parameter dependencies.

Torque Model	Enables Parameters
Torque Structure	Inner torque table, f_tq_inr Friction torque table, f_tq_fric Engine temperature modifier on friction torque, f_fric_temp_mod Engine temperature modifier breakpoints, f_fric_temp_bpt Pumping torque table, f_tq_pump Optimal spark table, f_sa_opt Inner torque load breakpoints, f_tq_inr_l_bpt Inner torque speed breakpoints, f_tq_inr_n_bpt Spark efficiency table, f_m_sa Spark retard from optimal, f_del_sa_bpt Lambda efficiency, f_m_lam Lambda breakpoints, f_m_lam_bpt

Torque Model	Enables Parameters
Simple Torque Lookup	Torque table, f_{tq_nl} Torque table load breakpoints, $f_{tq_nl_l_bpt}$ Torque table speed breakpoints, $f_{tq_nl_n_bpt}$

Air

Number of cylinders, NCyl — Engine cylinders

scalar

Number of engine cylinders, N_{cyl} .

Crank revolutions per power stroke, Cps — Revolutions per stroke

scalar

Crankshaft revolutions per power stroke, Cps , in rev/stroke.

Total displaced volume, Vd — Volume

scalar

Displaced volume, V_d , in m^3 .

Ideal gas constant air, Rair — Constant

scalar

Ideal gas constant, R_{air} , in $J/(kg \cdot K)$.

Air standard pressure, Pstd — Pressure

scalar

Standard air pressure, P_{std} , in Pa.

Air standard temperature, Tstd — Temperature

scalar

Standard air temperature, T_{std} , in K.

Speed-density volumetric efficiency, f_nv — Lookup table


array

The engine volumetric efficiency lookup table, f_{η_v} , is a function of intake manifold absolute pressure and engine speed

$$\eta_v = f_{\eta_v}(MAP, N)$$

where:

- η_v is engine volumetric efficiency, dimensionless.
- MAP is intake manifold absolute pressure, in KPa.
- N is engine speed, in rpm.

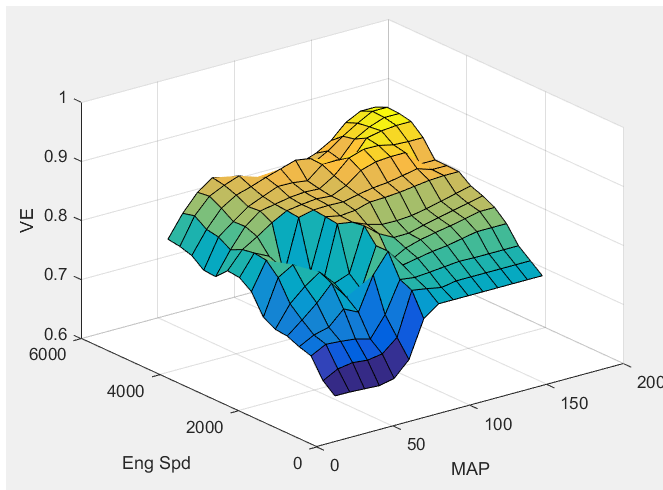

Dependencies

To enable this parameter, for the **Air mass flow model** parameter, select Simple Speed-Density.

Speed-density intake manifold pressure breakpoints, $f_{nv_prs_bpt}$ — Breakpoints

array

Intake manifold pressure breakpoints for speed-density volumetric efficiency lookup table, in KPa.

Dependencies

To enable this parameter, for the **Air mass flow model** parameter, select Simple Speed-Density.

Speed-density engine speed breakpoints, $f_{nv_n_bpt}$ — Breakpoints array

Engine speed breakpoints for speed-density volumetric efficiency lookup table, in rpm.

Dependencies

To enable this parameter, for the **Air mass flow model** parameter, select Simple Speed-Density.


Cylinder volume at intake valve close table, f_{vivc} — 2-D lookup table array

The cylinder volume at intake valve close table (IVC), f_{vivc} is a function of the intake cam phaser angle

$$V_{IVC} = f_{vivc}(\varphi_{ICP})$$

where:

- V_{IVC} is cylinder volume at IVC, in L.
- φ_{ICP} is intake cam phaser angle, in crank advance degrees.

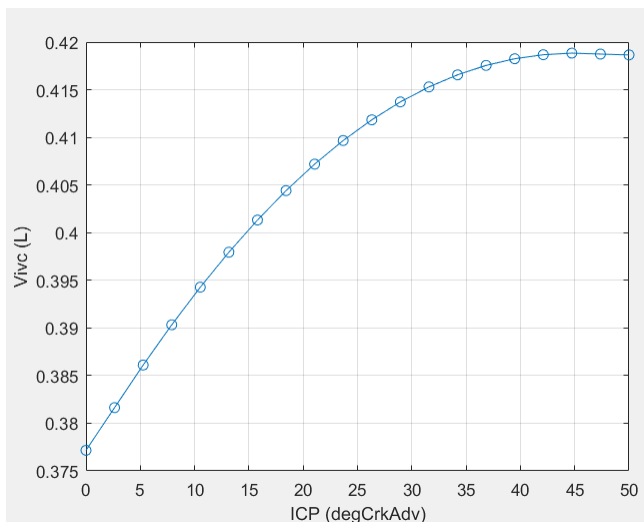

Dependencies

To enable this parameter, for the **Air mass flow model** parameter, select Dual - Independent Variable Cam Phasing.

Cylinder volume intake cam phase breakpoints, `f_vivc_icp_bpt` — Breakpoints

array

Cylinder volume intake cam phase breakpoints, in L.

Dependencies

To enable this parameter, for the **Air mass flow model** parameter, select Dual - Independent Variable Cam Phasing.

Cylinder trapped mass correction factor, `f_tm_corr` — Lookup table


array

The trapped mass correction factor table, $f_{TM_{corr}}$, is a function of the normalized density and engine speed

$$TM_{corr} = f_{TM_{corr}}(\rho_{norm}, N)$$

where:

- TM_{corr} , is trapped mass correction multiplier, dimensionless.
- ρ_{norm} is normalized density, dimensionless.
- N is engine speed, in rpm.

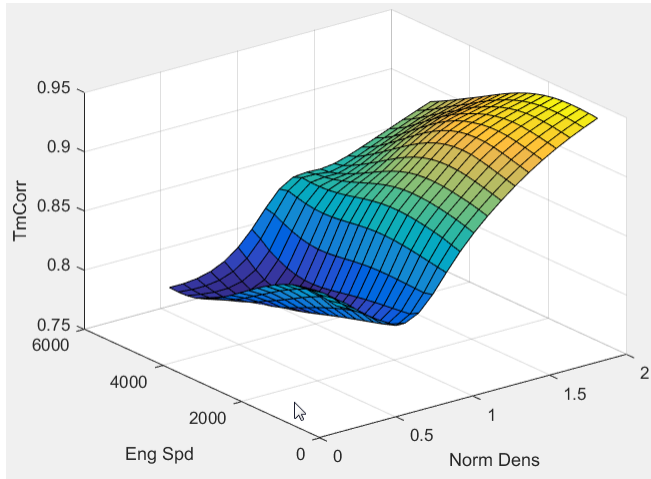

Dependencies

To enable this parameter, for the **Air mass flow model** parameter, select Dual-Independent Variable Cam Phasing.

Normalized density breakpoints, `f_tm_corr_nd_bpt` — Breakpoints array

Normalized density breakpoints, dimensionless.

Dependencies

To enable this parameter, for the **Air mass flow model** parameter, select Dual-Independent Variable Cam Phasing.

Engine speed breakpoints, `f_tm_corr_n_bpt` — Breakpoints array

Engine speed breakpoints, in rpm.

Dependencies

To enable this parameter, for the **Air mass flow model** parameter, select Dual - Independent Variable Cam Phasing.

Air mass flow, $f_{\dot{m}_{air}}$ – Lookup table


array

The phaser intake mass flow model lookup table is a function of exhaust cam phaser angles and trapped air mass flow

$$\dot{m}_{intkideal} = f_{intkideal}(\varphi_{ECP}, TM_{flow})$$

where:

- $\dot{m}_{intkideal}$ is engine intake port mass flow at arbitrary cam phaser angles, in g/s.
- φ_{ECP} is exhaust cam phaser angle, in degrees crank retard.
- TM_{flow} is flow rate equivalent to corrected trapped mass at the current engine speed, in g/s.

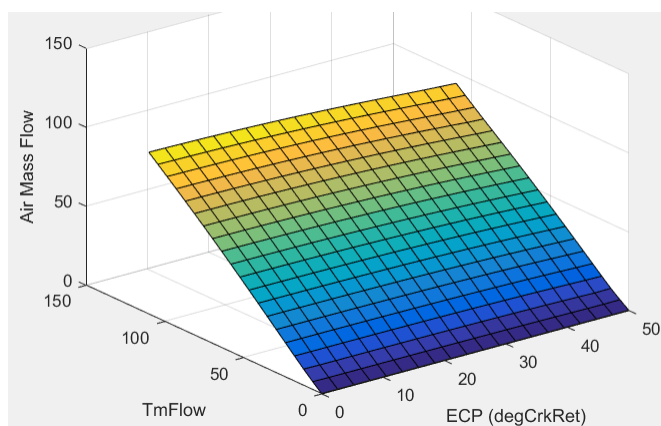

Dependencies

To enable this parameter, for the **Air mass flow model** parameter, select Dual - Independent Variable Cam Phasing.

Exhaust cam phase breakpoints, $f_{\dot{m}_{air_ecp_bpt}}$ – Breakpoints

array

Exhaust cam phaser breakpoints for air mass flow lookup table, in degrees crank retard.

Dependencies

To enable this parameter, for the **Air mass flow model** parameter, select Dual - Independent Variable Cam Phasing.

Trapped mass flow breakpoints, $f_{\dot{m}_{trpd_bpt}}$ — Breakpoints

array

Trapped mass flow breakpoints for air mass flow lookup table, in g/s.

Dependencies

To enable this parameter, for the **Air mass flow model** parameter, select Dual - Independent Variable Cam Phasing.

Air mass flow correction factor, $f_{\dot{m}_{air_corr}}$ — Lookup table


array

The intake air mass flow correction lookup table, $f_{aircorr}$, is a function of ideal load and engine speed

$$\dot{m}_{air} = \dot{m}_{intkideal} f_{aircorr}(L_{ideal}, N)$$

where:

- L_{ideal} is engine load (normalized cylinder air mass) at arbitrary cam phaser angles, uncorrected for final steady-state cam phaser angles, dimensionless.
- N is engine speed, in rpm.
- \dot{m}_{air} is engine intake air mass flow final correction at steady-state cam phaser angles, in g/s.
- $\dot{m}_{intkideal}$ is engine intake port mass flow at arbitrary cam phaser angles, in g/s.

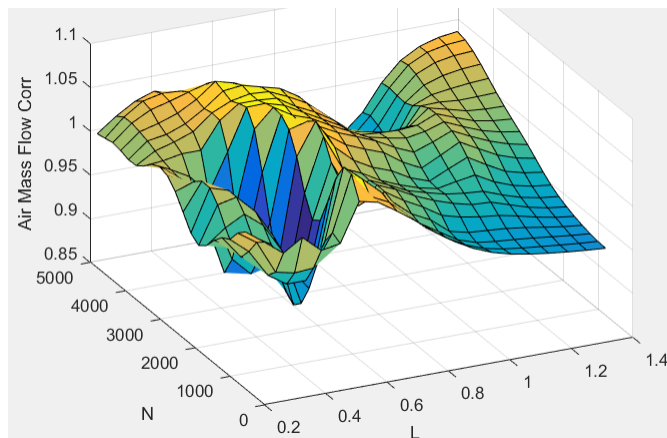

Dependencies

To enable this parameter, for the **Air mass flow model** parameter, select Dual-Independent Variable Cam Phasing.

Engine load breakpoints for air mass flow correction, **f_mdott_air_corr_ld_bpt** — Breakpoints

array

Engine load breakpoints for air mass flow final correction, dimensionless.

Dependencies

To enable this parameter, for the **Air mass flow model** parameter, select Dual-Independent Variable Cam Phasing.

Engine speed breakpoints for air mass flow correction, **f_mdott_air_n_bpt** — Breakpoints

array

Engine speed breakpoints for air mass flow final correction, in rpm.

Dependencies

To enable this parameter, for the **Air mass flow model** parameter, select Dual-Independent Variable Cam Phasing.


Torque

Torque table, f_{tq_nl} — Lookup table

[L x N] array

For the simple torque lookup table model, the SI engine uses a lookup table map that is a function of engine speed and load, $T_{brake} = f_{TnL}(L, N)$, where:

- T_{brake} is engine brake torque after accounting for spark advance, AFR, and friction effects, in N·m.
- L is engine load, as a normalized cylinder air mass, dimensionless.
- N is engine speed, in rpm.

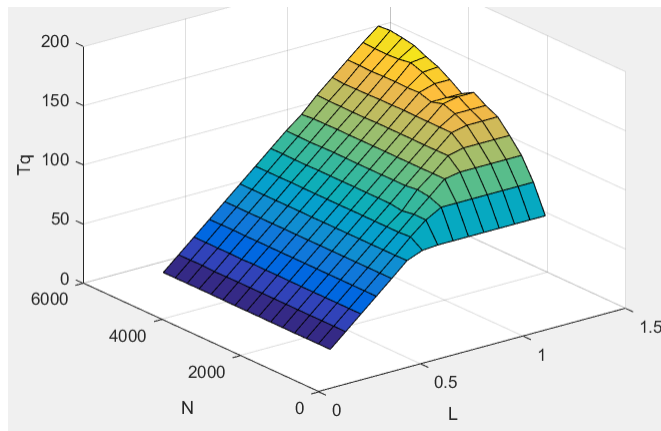

The simple torque lookup model assumes that the calibration has negative torque values to indicate the non-firing engine load (L) versus speed (N) condition. The calibrated table (L-by-N) contains the non-firing data in the first table row (1-by-N). When the fuel delivered to the engine is zero, the model uses the data in the first table row (1-by-N) at or above 100 AFR. 100 AFR results from fuel cutoff or very lean operation where combustion cannot occur.

Dependencies

To enable this parameter, for the **Torque model** parameter, select Simple Torque Lookup.

Torque table load breakpoints, $f_{tq_nl_l_bpt}$ — Breakpoints

[1 x L] vector

Engine load breakpoints, L , dimensionless.

Dependencies

To enable this parameter, for the **Torque model** parameter, select Simple Torque Lookup.

Torque table speed breakpoints, $f_{tq_nl_n_bpt}$ — Breakpoints

[1 x N] vector

Engine speed breakpoints, N , in rpm.

Dependencies


To enable this parameter, for the **Torque model** parameter, select Simple Torque Lookup.

Inner torque table, f_{tq_inr} — Lookup table

array

The inner torque lookup table, $f_{T_{qinr}}$, is a function of engine speed and engine load, $T_{qinr} = f_{T_{qinr}}(L, N)$, where:

- T_{qinr} is inner torque based on gross indicated mean effective pressure, in N·m.
- L is engine load at arbitrary cam phaser angles, corrected for final steady-state cam phaser angles, dimensionless.
- N is engine speed, in rpm.

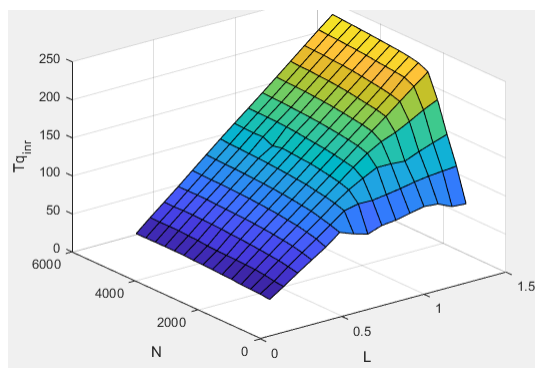

Dependencies


To enable this parameter, for the **Torque model** parameter, select Torque Structure.

Friction torque table, f_{Tq_fric} — Lookup table

array

The friction torque lookup table, f_{Tfric} , is a function of engine speed and engine load, $T_{fric} = f_{Tfric}(L, N)$, where:

- T_{fric} is friction torque offset to inner torque, in N·m.
- L is engine load at arbitrary cam phaser angles, corrected for final steady-state cam phaser angles, dimensionless.
- N is engine speed, in rpm.

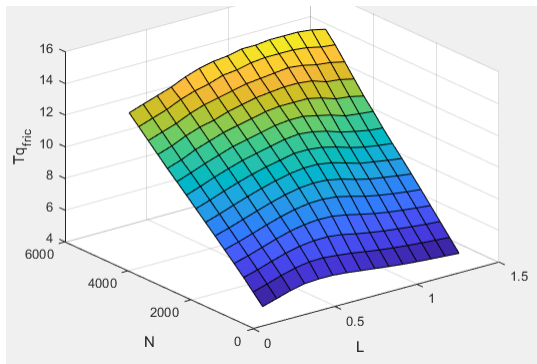

Dependencies

To enable this parameter, for the **Torque model** parameter, select Torque Structure.

Engine temperature modifier on friction torque, $f_{fric_temp_mod}$ — Lookup table

vector

Engine temperature modifier on friction torque, $f_{fric,temp}$, dimensionless.

Dependencies

To enable this parameter, for the **Torque model** parameter, select Torque Structure.

Engine temperature modifier breakpoints, `f_fric_temp_bpt` – Breakpoints

vector

Engine temperature modifier breakpoints, in K.

Dependencies


To enable this parameter, for the **Torque model** parameter, select Torque Structure.

Pumping torque table, `f_tq_pump` – Lookup table

array

The pumping torque lookup table, $f_{T_{pump}}$, is a function of engine speed and injected fuel mass, $T_{pump} = f_{T_{pump}}(L, N)$, where:

- T_{pump} is pumping torque, in N·m.
- L is engine load, as a normalized cylinder air mass, dimensionless.
- N is engine speed, in rpm.

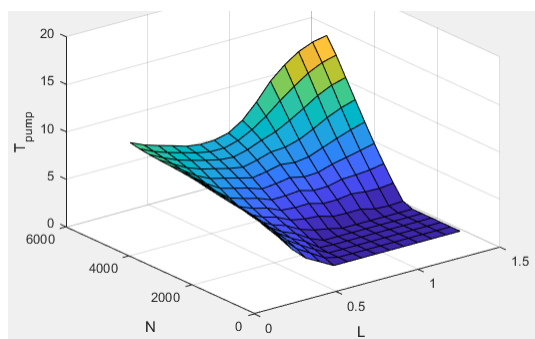

Dependencies


To enable this parameter, for the **Torque model** parameter, select Torque Structure.

Optimal spark table, `f_sa_opt` – Lookup table

array

The optimal spark lookup table, $f_{SA_{opt}}$, is a function of engine speed and engine load, $SA_{opt} = f_{SA_{opt}}(L, N)$, where:

- SA_{opt} is optimal spark advance timing for maximum inner torque at stoichiometric air-fuel ratio (AFR), in deg.
- L is engine load at arbitrary cam phaser angles, corrected for final steady-state cam phaser angles, dimensionless.
- N is engine speed, in rpm.

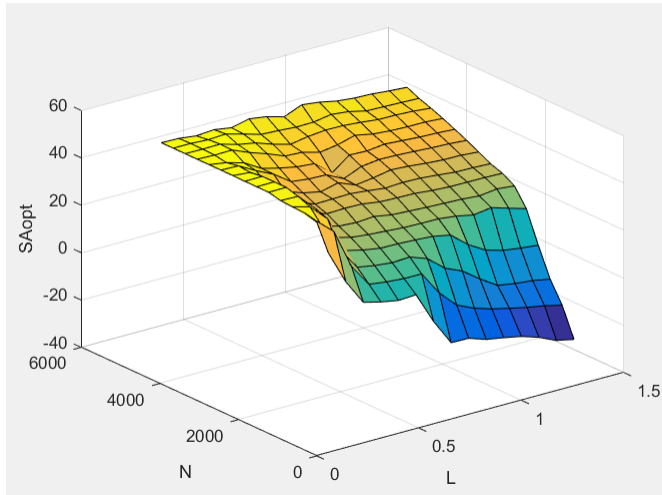

Dependencies

To enable this parameter, for the **Torque model** parameter, select Torque Structure.

Inner torque load breakpoints, $f_{tq_inr_l_bpt}$ — Breakpoints

array

Inner torque load breakpoints, dimensionless.

Dependencies

To enable this parameter, for the **Torque model** parameter, select Torque Structure.

Inner torque speed breakpoints, $f_{tq_inr_n_bpt}$ — Breakpoints

array

Inner torque speed breakpoints, in rpm.

Dependencies

To enable this parameter, for the **Torque model** parameter, select Torque Structure.

Spark efficiency table, f_{m_sa} – Lookup table

array


The spark efficiency lookup table, f_{Msa} , is a function of the spark retard from optimal

$$M_{sa} = f_{Msa}(\Delta SA)$$

$$\Delta SA = SA_{opt} - SA$$

where:

- M_{sa} is the spark retard efficiency multiplier, dimensionless.
- ΔSA is the spark retard timing distance from optimal spark advance, in deg.

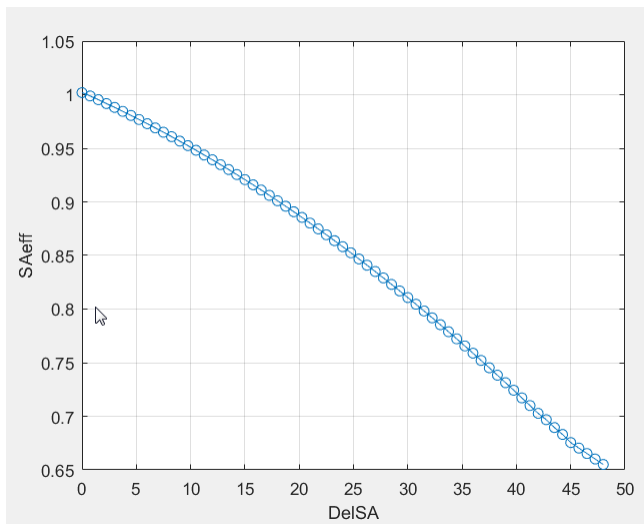

Dependencies

To enable this parameter, for the **Torque model** parameter, select Torque Structure.

Spark retard from optimal, $f_{del_sa_bpt}$ – Breakpoints

scalar

Spark retard from optimal inner torque timing breakpoints, in deg.

Dependencies


To enable this parameter, for the **Torque model** parameter, select Torque Structure.

Lambda efficiency, f_m_lam — Lookup table

array

The lambda efficiency lookup table, $f_{M\lambda}$, is a function of lambda, $M_\lambda = f_{M\lambda}(\lambda)$, where:

- M_λ is the lambda multiplier on inner torque to account for the air-fuel ratio (AFR) effect, dimensionless.
- λ is lambda, AFR normalized to stoichiometric fuel AFR, dimensionless.

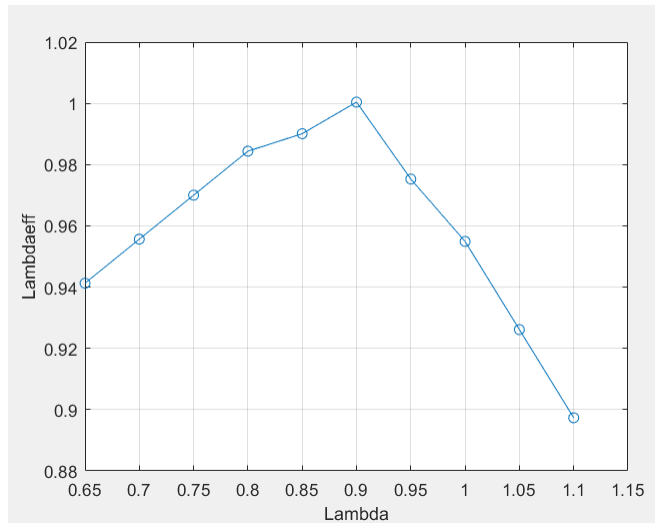

Dependencies

To enable this parameter, for the **Torque model** parameter, select Torque Structure.

Lambda breakpoints, f_m_lam_bpt — Breakpoints

array

Lambda effect on inner torque lambda breakpoints, dimensionless.

Dependencies

To enable this parameter, for the **Torque model** parameter, select Torque Structure.

Exhaust

Exhaust temperature table, $f_{T_{exh}}$ – Lookup table


array

The exhaust temperature lookup table, $f_{T_{exh}}$, is a function of engine load and engine speed

$$T_{exh} = f_{T_{exh}}(L, N)$$

where:

- T_{exh} is engine exhaust temperature, in K.
- L is normalized cylinder air mass or engine load, dimensionless.
- N is engine speed, in rpm.

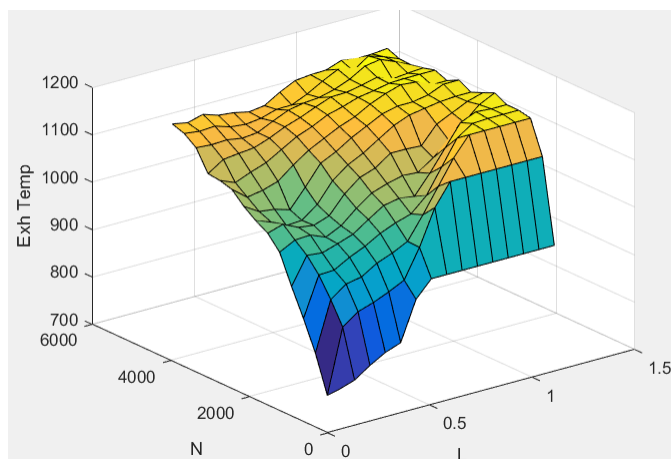

Load breakpoints, $f_{T_{exh_l_bpt}}$ – Breakpoints

array

Engine load breakpoints used for exhaust temperature lookup table, dimensionless.

Speed breakpoints, $f_{T_{exh_n_bpt}}$ – Breakpoints

array

Engine speed breakpoints used for exhaust temperature lookup table, in rpm.

Exhaust gas specific heat at constant pressure, cp_{exh} — Specific heat scalar


Exhaust gas-specific heat, Cp_{exh} , in J/(kg·K).

CO₂ mass fraction table, $f_{CO_2_frac}$ — Carbon dioxide (CO₂) emission lookup table

array

The SI Core Engine CO₂ emission mass fraction lookup table is a function of engine torque and engine speed, $CO_2\ Mass\ Fraction = f(Speed, Torque)$, where:

- *CO₂ Mass Fraction* is the CO₂ emission mass fraction, dimensionless.
- *Speed* is engine speed, in rpm.
- *Torque* is engine torque, in N·m.

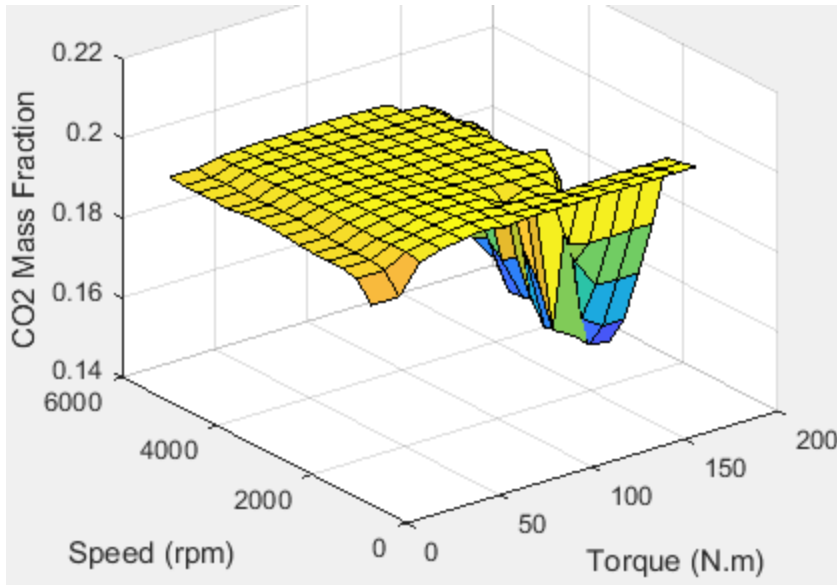

Dependencies


To enable this parameter, on the **Exhaust** tab, select **CO₂**.

CO mass fraction table, f_{CO_frac} – Carbon monoxide (CO) emission lookup table

array

The SI Core Engine CO emission mass fraction lookup table is a function of engine torque and engine speed, $CO\ Mass\ Fraction = f(Speed, Torque)$, where:

- *CO Mass Fraction* is the CO emission mass fraction, dimensionless.
- *Speed* is engine speed, in rpm.
- *Torque* is engine torque, in N·m.

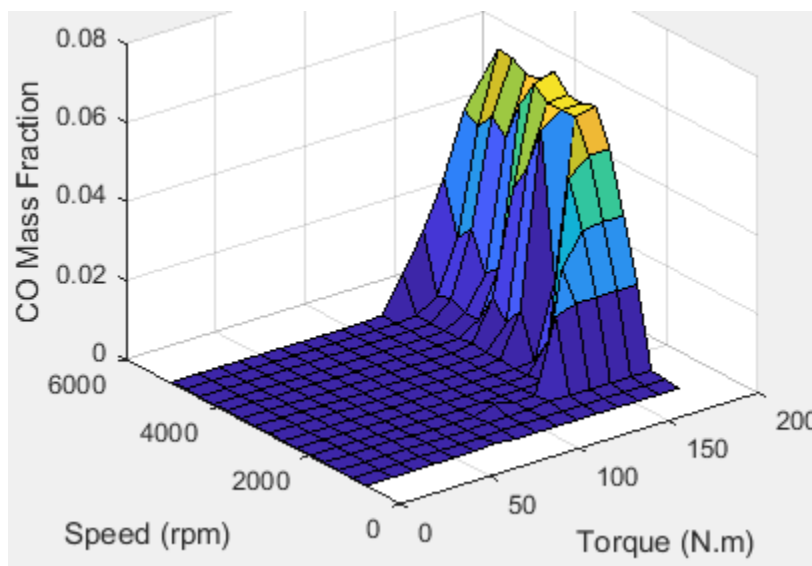

Dependencies


To enable this parameter, on the **Exhaust** tab, select **CO**.

HC mass fraction table, f_{HC_frac} – Hydrocarbon (HC) emission lookup table

array

The SI Core Engine HC emission mass fraction lookup table is a function of engine torque and engine speed, $HC\ Mass\ Fraction = f(Speed, Torque)$, where:

- *HC Mass Fraction* is the HC emission mass fraction, dimensionless.
- *Speed* is engine speed, in rpm.
- *Torque* is engine torque, in N·m.

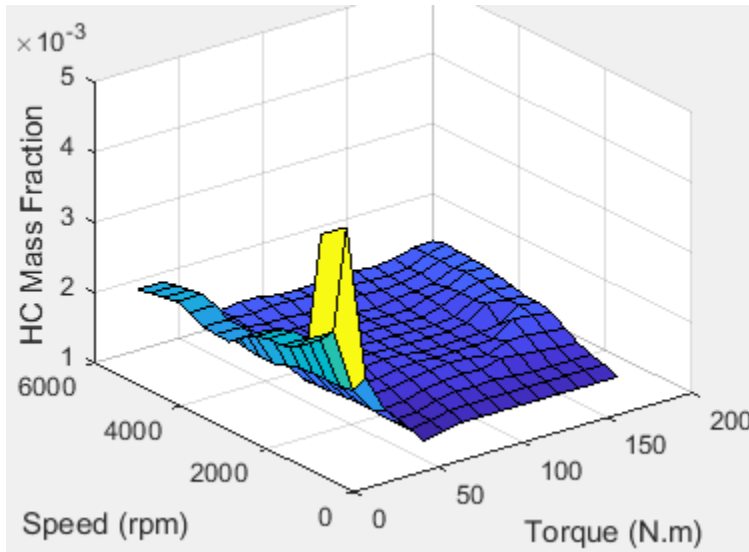

Dependencies


To enable this parameter, on the **Exhaust** tab, select **HC**.

NOx mass fraction table, `f_NOx_frac` — Nitric oxide and nitrogen dioxide (NOx) emission lookup table

array

The SI Core Engine NOx emission mass fraction lookup table is a function of engine torque and engine speed, $NOx\ Mass\ Fraction = f(Speed, Torque)$, where:

- *NOx Mass Fraction* is the NOx emission mass fraction, dimensionless.
- *Speed* is engine speed, in rpm.
- *Torque* is engine torque, in N·m.

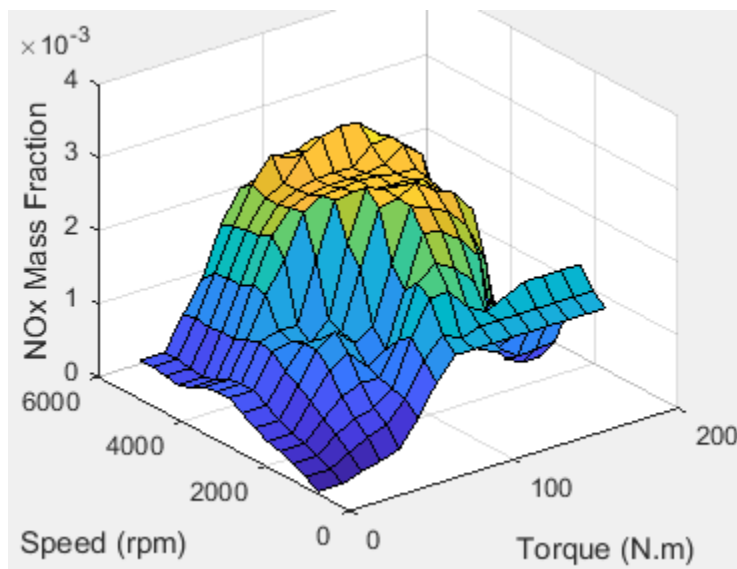

Dependencies

To enable this parameter, on the **Exhaust** tab, select **NOx**.

PM mass fraction table, **f_PM_frac** – Particulate matter (PM) emission lookup table

array

The SI Core Engine PM emission mass fraction lookup table is a function of engine torque and engine speed where:

- *PM* is the PM emission mass fraction, dimensionless.
- *Speed* is engine speed, in rpm.
- *Torque* is engine torque, in N·m.

Dependencies

To enable this parameter, on the **Exhaust** tab, select **PM**.

Engine speed breakpoints, **f_exhfrac_n_bpt** – Breakpoints

vector

Engine speed breakpoints used for the emission mass fractions lookup tables, in rpm.

Dependencies

To enable this parameter, on the **Exhaust** tab, select **CO₂**, **CO**, **NO_x**, **HC**, or **PM**.

Engine torque breakpoints, `f_exhfrac_trq_bpt` — Breakpoints

vector

Engine torque breakpoints used for the emission mass fractions lookup tables, in N·m.

Dependencies

To enable this parameter, on the **Exhaust** tab, select **CO₂**, **CO**, **NO_x**, **HC**, or **PM**.

Fuel

Injector slope, `Sinj` — Slope

scalar

Fuel injector slope, S_{inj} , mg/ms.

Stoichiometric air-fuel ratio, `afr_stoich` — Air-fuel ratio

scalar

Air-fuel ratio, AFR .

Fuel lower heating value, `fuel_lhv` — Heating value

scalar

Fuel lower heating value, LHV , in J/kg.

Fuel specific gravity, `fuel_sg` — Specific gravity

scalar

Specific gravity of fuel, Sg_{fuel} , dimensionless.

References

- [1] Gerhardt, J., Hönninger, H., and Bischof, H., *A New Approach to Functional and Software Structure for Engine Management Systems — BOSCH ME7*. SAE Technical Paper 980801, 1998.
- [2] Heywood, John B. *Internal Combustion Engine Fundamentals*. New York: McGraw-Hill, 1988.

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using Simulink® Coder™.

See Also

Mapped SI Engine | SI Controller

Topics

“SI Core Engine Air Mass Flow and Torque Production”


“Engine Calibration Maps”

Introduced in R2017a

Turbine

Turbine for boosted engines

Library: Powertrain Blockset / Propulsion / Combustion Engine
Components / Boost

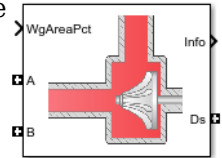


Description

The Turbine block uses the conservation of mass and energy to calculate mass and heat flow rates for turbines with either fixed or variable geometry. You can configure the block with a wastegate valve to bypass the turbine. The block uses two-way ports to connect to the inlet and outlet control volumes and the drive shaft. You can specify the lookup tables to calculate the mass flow rate and turbine efficiency. Typically, turbine manufacturers provide the mass flow rate and efficiency tables as a function of corrected speed and pressure ratio. The block does not support reverse mass flow.

If you have Model-Based Calibration Toolbox, click **Calibrate Performance Maps** to virtually calibrate the mass flow rate and turbine efficiency lookup tables using measured data.

The mass flows from the inlet control volume to outlet control volume.

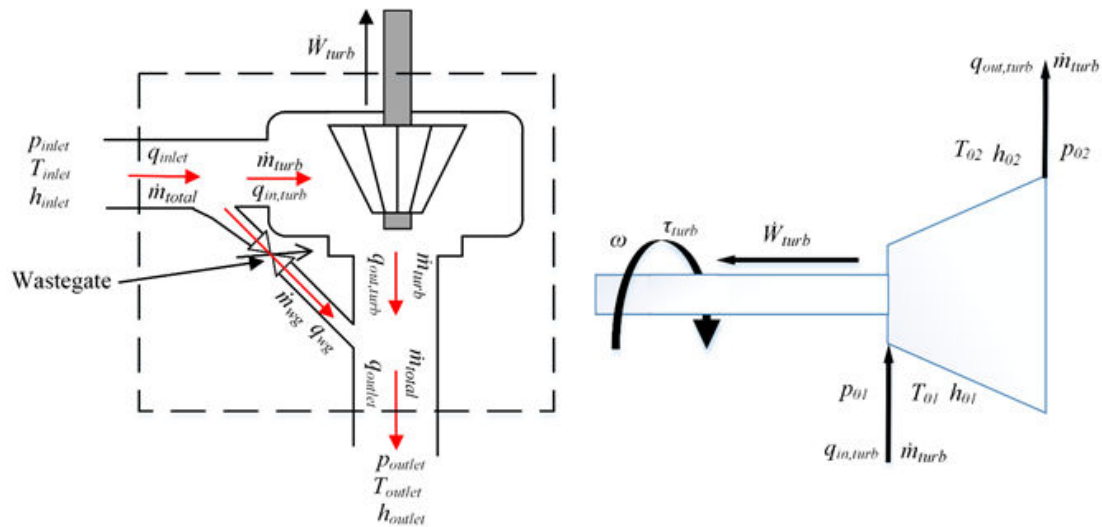

The Turbine block implements equations to model the performance, wastegate flow, and combined flow.

Virtual Calibration

If you have Model-Based Calibration Toolbox, click **Calibrate Performance Maps** to virtually calibrate the corrected mass flow rate and turbine efficiency lookup tables using measured data. The dialog box steps through these tasks.

Task	Description	
Import turbine data	Import this turbine data from a file. For more information, see “Using Data” (Model-Based Calibration Toolbox).	
	Turbine type	Data
	Fixed geometry	<ul style="list-style-type: none"> • Pressure ratio, dimensionless • Speed, rad/s • Efficiency, dimensionless • Corrected mass flow rate, kg/s
Variable geometry	<ul style="list-style-type: none"> • Pressure ratio, dimensionless • Speed, rad/s • Rack position, dimensionless • Efficiency, dimensionless • Corrected mass flow rate, kg/s <p>Include data for several test points at each rack position operating point.</p>	
<p>Model-Based Calibration Toolbox limits the speed and pressure ratio breakpoint values to the maximum values in the file.</p>		
<p>To filter or edit the data, select Edit in Application. The Model-Based Calibration Toolbox Data Editor opens.</p>		

Task	Description																			
Generate response models	Model-Based Calibration Toolbox fits the imported data and generates response models.																			
	<table border="1"> <thead> <tr> <th data-bbox="468 388 698 434">Turbine type</th> <th colspan="2" data-bbox="698 388 1332 434">Description</th> </tr> </thead> <tbody> <tr> <td data-bbox="468 434 698 704" rowspan="3">Fixed geometry</td> <td data-bbox="698 434 865 479">Data</td> <td data-bbox="865 434 1332 479">Response Model</td> </tr> <tr> <td data-bbox="698 479 865 591">Corrected mass flow rate</td> <td data-bbox="865 479 1332 591">Square root turbine flow model described in <i>Modeling and Control of Engines and Drivelines²</i></td> </tr> <tr> <td data-bbox="698 591 865 704">Efficiency</td> <td data-bbox="865 591 1332 704">Blade speed ratio (BSR) model described in <i>Modeling and Control of Engines and Drivelines²</i></td> </tr> <tr> <td data-bbox="468 704 698 1164" rowspan="4">Variable geometry</td> <td colspan="2" data-bbox="698 704 1332 895">Model-Based Calibration Toolbox uses a point-by-point test plan to fit the data. For each rack position, the block uses these response models to fit the corrected mass flow rate and efficiency data.</td> </tr> <tr> <td data-bbox="698 895 865 940">Data</td> <td data-bbox="865 895 1332 940">Response Model</td> </tr> <tr> <td data-bbox="698 940 865 1053">Corrected mass flow rate</td> <td data-bbox="865 940 1332 1053">Square root turbine flow model described in <i>Modeling and Control of Engines and Drivelines²</i></td> </tr> <tr> <td data-bbox="698 1053 865 1164">Efficiency</td> <td data-bbox="865 1053 1332 1164">Blade speed ratio (BSR) model described in <i>Modeling and Control of Engines and Drivelines²</i></td> </tr> </tbody> </table>	Turbine type	Description		Fixed geometry	Data	Response Model	Corrected mass flow rate	Square root turbine flow model described in <i>Modeling and Control of Engines and Drivelines²</i>	Efficiency	Blade speed ratio (BSR) model described in <i>Modeling and Control of Engines and Drivelines²</i>	Variable geometry	Model-Based Calibration Toolbox uses a point-by-point test plan to fit the data. For each rack position, the block uses these response models to fit the corrected mass flow rate and efficiency data.		Data	Response Model	Corrected mass flow rate	Square root turbine flow model described in <i>Modeling and Control of Engines and Drivelines²</i>	Efficiency	Blade speed ratio (BSR) model described in <i>Modeling and Control of Engines and Drivelines²</i>
	Turbine type	Description																		
	Fixed geometry	Data	Response Model																	
		Corrected mass flow rate	Square root turbine flow model described in <i>Modeling and Control of Engines and Drivelines²</i>																	
		Efficiency	Blade speed ratio (BSR) model described in <i>Modeling and Control of Engines and Drivelines²</i>																	
Variable geometry	Model-Based Calibration Toolbox uses a point-by-point test plan to fit the data. For each rack position, the block uses these response models to fit the corrected mass flow rate and efficiency data.																			
	Data	Response Model																		
	Corrected mass flow rate	Square root turbine flow model described in <i>Modeling and Control of Engines and Drivelines²</i>																		
	Efficiency	Blade speed ratio (BSR) model described in <i>Modeling and Control of Engines and Drivelines²</i>																		
To assess or adjust the response model fit, select Edit in Application . The Model-Based Calibration Toolbox Model Browser opens. For more information, see “Model Assessment” (Model-Based Calibration Toolbox).																				

Task	Description	
Generate calibration	Model-Based Calibration Toolbox calibrates the response model and generates calibrated tables.	
	Turbine type	Description
	Fixed geometry	Model-Based Calibration Toolbox uses the response models for the corrected mass flow rate and efficiency tables.
Variable geometry	Model-Based Calibration Toolbox fills the corrected mass flow rate and efficiency tables for each rack position. Model-Based Calibration Toolbox then combines the rack position-dependent tables into 3D lookup tables for corrected mass flow rate and efficiency.	
To assess or adjust the calibration, select Edit in Application . The Model-Based Calibration Toolbox CAGE Browser opens. For more information, see “Calibration Tables” (Model-Based Calibration Toolbox).		

Task	Description						
Update block parameters	Update these corrected mass flow rate and efficiency parameters with the calibration.						
	<table border="1"> <thead> <tr> <th>Turbine type</th> <th>Parameters</th> </tr> </thead> <tbody> <tr> <td>Fixed geometry</td> <td> <ul style="list-style-type: none"> Corrected mass flow rate table, mdot_corrfx_tbl Efficiency table, eta_turbfx_tbl Corrected speed breakpoints, w_corrfx_bpts1 Pressure ratio breakpoints, Pr_fx_bpts2 </td> </tr> <tr> <td>Variable geometry</td> <td> <ul style="list-style-type: none"> Corrected mass flow rate table, mdot_corrvr_tbl Efficiency table, eta_turbvr_tbl Corrected speed breakpoints, w_corrvr_bpts2 Pressure ratio breakpoints, Pr_vr_bpts2 Rack breakpoints, L_rack_bpts3 </td> </tr> </tbody> </table>	Turbine type	Parameters	Fixed geometry	<ul style="list-style-type: none"> Corrected mass flow rate table, mdot_corrfx_tbl Efficiency table, eta_turbfx_tbl Corrected speed breakpoints, w_corrfx_bpts1 Pressure ratio breakpoints, Pr_fx_bpts2 	Variable geometry	<ul style="list-style-type: none"> Corrected mass flow rate table, mdot_corrvr_tbl Efficiency table, eta_turbvr_tbl Corrected speed breakpoints, w_corrvr_bpts2 Pressure ratio breakpoints, Pr_vr_bpts2 Rack breakpoints, L_rack_bpts3
	Turbine type	Parameters					
Fixed geometry	<ul style="list-style-type: none"> Corrected mass flow rate table, mdot_corrfx_tbl Efficiency table, eta_turbfx_tbl Corrected speed breakpoints, w_corrfx_bpts1 Pressure ratio breakpoints, Pr_fx_bpts2 						
Variable geometry	<ul style="list-style-type: none"> Corrected mass flow rate table, mdot_corrvr_tbl Efficiency table, eta_turbvr_tbl Corrected speed breakpoints, w_corrvr_bpts2 Pressure ratio breakpoints, Pr_vr_bpts2 Rack breakpoints, L_rack_bpts3 						

Thermodynamics

The block uses these equations to model the thermodynamics.

Calculation	Equations
Forward mass flow	$\dot{m}_{turb} > 0$ $p_{01} = p_{inlet}$ $p_{02} = p_{outlet}$ $T_{01} = T_{inlet}$ $h_{01} = h_{inlet}$
First law of thermodynamics	$\dot{W}_{turb} = \dot{m}_{turb} c_p (T_{01} - T_{02})$

Calculation	Equations
Isentropic efficiency	$\eta_{turb} = \frac{h_{01} - h_{02}}{h_{01} - h_{02s}} = \frac{T_{01} - T_{02}}{T_{01} - T_{02s}}$
Isentropic outlet temperature, assuming ideal gas, and constant specific heats	$T_{02s} = T_{01} \left(\frac{p_{02}}{p_{01}} \right)^{\frac{\gamma - 1}{\gamma}}$
Specific heat ratio	$\gamma = \frac{c_p}{c_p - R}$
Outlet temperature	$T_{02} = T_{01} + \eta_{turb} T_{01} \left\{ 1 - \left(\frac{p_{02}}{p_{01}} \right)^{\frac{\gamma - 1}{\gamma}} \right\}$
Heat flows	$q_{in, turb} = \dot{m}_{turb} c_p T_{01}$ $q_{out, turb} = \dot{m}_{turb} c_p T_{02}$
Drive shaft torque	$\tau_{turb} = \frac{\dot{W}_{turb}}{\omega}$

The equations use these variables.

p_{inlet}, p_{01}	Inlet control volume total pressure
T_{inlet}, T_{01}	Inlet control volume total temperature
h_{inlet}, h_{01}	Inlet control volume total specific enthalpy
p_{outlet}, p_{02}	Outlet control volume total pressure
T_{outlet}	Outlet control volume total temperature
h_{outlet}	Outlet control volume total specific enthalpy
\dot{W}_{turb}	Drive shaft power
T_{02}	Temperature exiting the turbine
h_{02}	Outlet total specific enthalpy
\dot{m}_{turb}	Turbine mass flow rate
$q_{in, turb}$	Turbine inlet heat flow rate
$q_{out, turb}$	Turbine outlet heat flow rate

η_{turb}	Turbine isentropic efficiency
T_{02s}	Isentropic outlet total temperature
h_{02s}	Isentropic outlet total specific enthalpy
R	Ideal gas constant
c_p	Specific heat at constant pressure
γ	Specific heat ratio
τ_{turb}	Drive shaft torque

Performance Lookup Tables

The block implements lookup tables based on these equations.

Calculation	Equation	
Corrected mass flow rate	$\dot{m}_{corr} = \dot{m}_{turb} \frac{\sqrt{T_{01}/T_{ref}}}{p_{01}/p_{ref}}$	
Corrected speed	$\omega_{corr} = \frac{\omega}{\sqrt{T_{01}/T_{ref}}}$	
Pressure expansion ratio	$p_r = \frac{p_{01}}{p_{02}}$	
Efficiency lookup table	Fixed geometry (3-D table)	$\eta_{turbfx, tbl} = f(\omega_{corr}, p_r)$
	Variable geometry (3-D table)	$\eta_{turbvr, tbl} = f(\omega_{corr}, p_r, L_{rack})$
Corrected mass flow lookup table	Fixed geometry (3-D table)	$\dot{m}_{corrfx, tbl} = f(\omega_{corr}, p_r)$
	Variable geometry (3-D table)	$\dot{m}_{corrvr, tbl} = f(\omega_{corr}, p_r, L_{rack})$

The equations use these variables.

p_{01}	Inlet control volume total pressure
p_r	Pressure expansion ratio
p_{02}	Outlet control volume total pressure
P_{ref}	Lookup table reference pressure
T_{01}	Inlet control volume total temperature

T_{ref}	Lookup table reference temperature
\dot{m}_{turb}	Turbine mass flow rate
ω	Drive shaft speed
ω_{corr}	Corrected drive shaft speed
L_{rack}	Variable geometry turbine rack position
$\eta_{turbfx, tbl}$	Efficiency 3-D lookup table for fixed geometry
$\dot{m}_{corrfx, tbl}$	Corrected mass flow rate 3-D lookup table for fixed geometry
$\eta_{turbvr, tbl}$	Efficiency 3-D lookup table for variable geometry
$\dot{m}_{corrvr, tbl}$	Corrected mass flow rate 3-D lookup table for variable geometry

Wastegate

To calculate the wastegate heat and mass flow rates, the Turbine block uses a Flow Restriction block. The Flow Restriction block uses the wastegate flow area.

$$A_{wg} = A_{wgpctcmd} \frac{A_{wopen}}{100}$$

The equation uses these variables.

$A_{wgpctcmd}$	Wastegate valve area percent command
A_{wg}	Wastegate valve area
A_{wopen}	Wastegate valve area when fully open

Combined Flow

To represent flow through the wastegate valve and turbine, the block uses these equations.

Calculation	Equations
Blocks not configured with a wastegate valve	$\dot{m}_{wg} = q_{wg} = 0$
Total mass flow rate	$\dot{m}_{total} = \dot{m}_{turb} + \dot{m}_{wg}$

Calculation	Equations
Total heat flow rate	$q_{inlet} = q_{in, turb} + q_{wg}$
	$q_{outlet} = q_{out, turb} + q_{wg}$
Combined temperature exiting the wastegate valve and turbine	$T_{outflw} = \begin{cases} \frac{q_{outlet}}{\dot{m}_{total}c_p} & \dot{m}_{total} > \dot{m}_{thresh} \\ \frac{T_{02} + T_{outflw, wg}}{2} & else \end{cases}$

The equations use these variables.

\dot{m}_{total}	Total mass flow rate through the wastegate valve and turbine
\dot{m}_{turb}	Turbine mass flow rate
\dot{m}_{wg}	Mass flow rate through the wastegate valve
q_{inlet}	Total inlet heat flow rate
q_{outlet}	Total outlet heat flow rate
$q_{in, turb}$	Turbine inlet heat flow rate
$q_{out, turb}$	Turbine outlet heat flow rate
q_{wg}	Wastegate valve heat flow rate
T_{02}	Temperature exiting the turbine
T_{outflw}	Total temperature exiting the block
$T_{outflw, wg}$	Temperature exiting the wastegate valve
\dot{m}_{thresh}	Mass flow rate threshold to prevent dividing by zero
c_p	Specific heat at constant pressure

Power Accounting

For the power accounting, the block implements these equations.

Bus Signal		Description	Equations	
PwrInfo	PwrTrnsfrd — Power transferred between blocks <ul style="list-style-type: none"> • Positive signals indicate flow into block • Negative signals indicate flow out of block 	PwrDriveshft	Power transmitted from the shaft	$-\dot{W}_{turb}$
		PwrHeatFlwIn	Heat flow rate at port A	q_{outlet}
		PwrHeatFlwOut	Heat flow rate at port B	q_{outlet}
	PwrNotTrnsfrd — Power crossing the block boundary, but not transferred <ul style="list-style-type: none"> • Positive signals indicate an input • Negative signals indicate a loss 	PwrLoss	Power loss	$-\dot{q}_{inlet}$ $-\dot{q}_{outlet}$ $+\dot{W}_{turb}$
	PwrStored — Stored energy rate of change <ul style="list-style-type: none"> • Positive signals indicate an increase • Negative signals indicate a decrease 	<i>Not used</i>		

The equations use these variables.

- \dot{W}_{turb} Drive shaft power
- q_{outlet} Total outlet heat flow rate
- q_{inlet} Total inlet heat flow rate

Ports

Input

Ds — Drive shaft speed

two-way connector port

ShaftSpd — Signal containing the drive shaft angular speed, ω , in rad/s.

A — Inlet pressure, temperature, enthalpy, mass fractions

two-way connector port

Bus containing the inlet control volume:

- InPrs — Pressure, p_{inlet} , in Pa
- InTemp — Temperature, T_{inlet} , in K
- InEnth — Specific enthalpy, h_{inlet} , in J/kg

B — Outlet pressure, temperature, enthalpy, mass fractions

two-way connector port

Bus containing the outlet control volume:

- OutPrs — Pressure, p_{outlet} , in Pa
- OutTemp — Temperature, T_{outlet} , in K
- OutEnth — Specific enthalpy, h_{outlet} , in J/kg

RackPos — Rack position

scalar

Variable geometry turbine rack position, L_{rack} .

Dependencies

To create this port, select `Variable geometry` for the **Turbine type** parameter.

WgAreaPct — Wastegate area percent

scalar

Wastegate valve area percent, $A_{wgpctcmd}$.

Dependencies

To create this port, select **Include wastegate**.

Output

Info — Bus signal

bus

Bus signal containing these block calculations.

Signal			Description	Units
TurbOutletTemp			Temperature exiting the turbine	K
DriveshaftPwr			Drive shaft power	W
DriveshaftTrq			Drive shaft torque	N·m
TurbMassFlw			Turbine mass flow rate	kg/s
PrsRatio			Pressure ratio	N/A
DriveshaftCorrSpd			Corrected drive shaft speed	rad/s
TurbEff			Turbine isentropic efficiency	N/A
CorrMassFlw			Corrected mass flow rate	kg/s
WgArea			Wastegate valve area	m ²
WgMassFlw			Mass flow rate through the wastegate valve	kg/s
WgOutletTemp			Temperature exiting the wastegate valve	K
PwrInfo	PwrTrnsfrd	PwrDriveshaft	Power transmitted from the shaft	W
		PwrHeatFlwIn	Heat flow rate at port A	W
		PwrHeatFlwOut	Heat flow rate at port B	W
	PwrNotTrnsfrd	PwrLoss	Power loss	W
	PwrStored		<i>Not used</i>	

Ds — Drive shaft torque

two-way connector port

Trq — Signal containing the drive shaft torque, τ_{turb} , in N·m.

A — Inlet mass flow rate, heat flow rate, temperature, mass fractions

two-way connector port

Bus containing:

- MassFlwRate — Total mass flow rate through wastegate valve and turbine, $-\dot{m}_{total}$, in kg/s
- HeatFlwRate — Total inlet heat flow rate, $-q_{inlet}$, in J/s
- Temp — Total inlet temperature, T_{inlet} , in K
- MassFrac — Mass fractions, dimensionless.

Specifically, a bus with these mass fractions:

- O2MassFrac — Oxygen
- N2MassFrac — Nitrogen
- UnbrndFuelMassFrac — Unburned fuel
- CO2MassFrac — Carbon dioxide
- H2OMassFrac — Water
- COMassFrac — Carbon monoxide
- NOMassFrac — Nitric oxide
- NO2MassFrac — Nitrogen dioxide
- NOxMassFrac — Nitric oxide and nitrogen dioxide
- PmMassFrac — Particulate matter
- AirMassFrac — Air
- BrndGasMassFrac — Burned gas

B — Outlet mass flow rate, heat flow rate, temperature, mass fractions

two-way connector port

Bus containing:

- **MassFlwRate** — Turbine mass flow rate through wastegate valve and turbine, \dot{m}_{turb} , in kg/s
- **HeatFlwRate** — Total outlet heat flow rate, q_{outlet} , in J/s
- **Temp** — Total outlet temperature, $T_{outflow}$, in K
- **MassFrac** — Mass fractions, dimensionless.

Specifically, a bus with these mass fractions:

- **O2MassFrac** — Oxygen
- **N2MassFrac** — Nitrogen
- **UnbrndFuelMassFrac** — Unburned fuel
- **CO2MassFrac** — Carbon dioxide
- **H2OMassFrac** — Water
- **COMassFrac** — Carbon monoxide
- **NOMassFrac** — Nitric oxide
- **NO2MassFrac** — Nitrogen dioxide
- **NOxMassFrac** — Nitric oxide and nitrogen dioxide
- **PmMassFrac** — Particulate matter
- **AirMassFrac** — Air
- **BrndGasMassFrac** — Burned gas

Parameters

Block Options

Turbine type — Select turbine type

Fixed geometry (default) | Variable geometry

Turbine type.

Dependencies

The table summarizes the parameter and port dependencies.

Value	Enables Parameters	Creates Ports
Fixed geometry	<p>Corrected mass flow rate table, mdot_corrfx_tbl</p> <p>Efficiency table, eta_turbfx_tbl</p> <p>Corrected speed breakpoints, w_corrfx_bpts1</p> <p>Pressure ratio breakpoints, Pr_fx_bpts2</p>	None
Variable geometry	<p>Corrected mass flow rate table, mdot_corrvr_tbl</p> <p>Efficiency table, eta_turbvr_tbl</p> <p>Corrected speed breakpoints, w_corrvr_bpts2</p> <p>Pressure ratio breakpoints, Pr_vr_bpts2</p> <p>Rack breakpoints, L_rack_bpts3</p>	RP

Include wastegate – Select

on (default) | off | off

Dependencies

Selecting the **Include wastegate** parameter enables:

- **Wastegate flow area, A_wgopen**
- **Pressure ratio linearize limit, Plim_wg**

Performance Tables

Calibrate Performance Maps – Calibrate tables with measured data selection

If you have Model-Based Calibration Toolbox, click **Calibrate Performance Maps** to virtually calibrate the corrected mass flow rate and turbine efficiency lookup tables using measured data. The dialog box steps through these tasks.

Task	Description	
Import turbine data	Import this turbine data from a file. For more information, see “Using Data” (Model-Based Calibration Toolbox).	
	Turbine type	Data
	Fixed geometry	<ul style="list-style-type: none"> • Pressure ratio, dimensionless • Speed, rad/s • Efficiency, dimensionless • Corrected mass flow rate, kg/s
Variable geometry	<ul style="list-style-type: none"> • Pressure ratio, dimensionless • Speed, rad/s • Rack position, dimensionless • Efficiency, dimensionless • Corrected mass flow rate, kg/s <p>Include data for several test points at each rack position operating point.</p>	
Model-Based Calibration Toolbox limits the speed and pressure ratio breakpoint values to the maximum values in the file.		
To filter or edit the data, select Edit in Application . The Model-Based Calibration Toolbox Data Editor opens.		


Task	Description																			
Generate response models	Model-Based Calibration Toolbox fits the imported data and generates response models.																			
	<table border="1"> <thead> <tr> <th data-bbox="468 388 698 430">Turbine type</th> <th colspan="2" data-bbox="698 388 1332 430">Description</th> </tr> </thead> <tbody> <tr> <td data-bbox="468 430 698 708" rowspan="3">Fixed geometry</td> <td data-bbox="698 430 865 472">Data</td> <td data-bbox="865 430 1332 472">Response Model</td> </tr> <tr> <td data-bbox="698 472 865 591">Corrected mass flow rate</td> <td data-bbox="865 472 1332 591">Square root turbine flow model described in <i>Modeling and Control of Engines and Drivelines²</i></td> </tr> <tr> <td data-bbox="698 591 865 708">Efficiency</td> <td data-bbox="865 591 1332 708">Blade speed ratio (BSR) model described in <i>Modeling and Control of Engines and Drivelines²</i></td> </tr> <tr> <td data-bbox="468 708 698 1164" rowspan="3">Variable geometry</td> <td colspan="2" data-bbox="698 708 1332 895">Model-Based Calibration Toolbox uses a point-by-point test plan to fit the data. For each rack position, the block uses these response models to fit the corrected mass flow rate and efficiency data.</td> </tr> <tr> <td data-bbox="698 895 865 937">Data</td> <td data-bbox="865 895 1332 937">Response Model</td> </tr> <tr> <td data-bbox="698 937 865 1048">Corrected mass flow rate</td> <td data-bbox="865 937 1332 1048">Square root turbine flow model described in <i>Modeling and Control of Engines and Drivelines²</i></td> </tr> <tr> <td data-bbox="698 1048 865 1164">Efficiency</td> <td data-bbox="865 1048 1332 1164">Blade speed ratio (BSR) model described in <i>Modeling and Control of Engines and Drivelines²</i></td> </tr> </tbody> </table>	Turbine type	Description		Fixed geometry	Data	Response Model	Corrected mass flow rate	Square root turbine flow model described in <i>Modeling and Control of Engines and Drivelines²</i>	Efficiency	Blade speed ratio (BSR) model described in <i>Modeling and Control of Engines and Drivelines²</i>	Variable geometry	Model-Based Calibration Toolbox uses a point-by-point test plan to fit the data. For each rack position, the block uses these response models to fit the corrected mass flow rate and efficiency data.		Data	Response Model	Corrected mass flow rate	Square root turbine flow model described in <i>Modeling and Control of Engines and Drivelines²</i>	Efficiency	Blade speed ratio (BSR) model described in <i>Modeling and Control of Engines and Drivelines²</i>
	Turbine type	Description																		
	Fixed geometry	Data	Response Model																	
		Corrected mass flow rate	Square root turbine flow model described in <i>Modeling and Control of Engines and Drivelines²</i>																	
Efficiency		Blade speed ratio (BSR) model described in <i>Modeling and Control of Engines and Drivelines²</i>																		
Variable geometry	Model-Based Calibration Toolbox uses a point-by-point test plan to fit the data. For each rack position, the block uses these response models to fit the corrected mass flow rate and efficiency data.																			
	Data	Response Model																		
	Corrected mass flow rate	Square root turbine flow model described in <i>Modeling and Control of Engines and Drivelines²</i>																		
Efficiency	Blade speed ratio (BSR) model described in <i>Modeling and Control of Engines and Drivelines²</i>																			
<p>To assess or adjust the response model fit, select Edit in Application. The Model-Based Calibration Toolbox Model Browser opens. For more information, see “Model Assessment” (Model-Based Calibration Toolbox).</p>																				

Task	Description	
Generate calibration	Model-Based Calibration Toolbox calibrates the response model and generates calibrated tables.	
	Turbine type	Description
	Fixed geometry	Model-Based Calibration Toolbox uses the response models for the corrected mass flow rate and efficiency tables.
Variable geometry	Model-Based Calibration Toolbox fills the corrected mass flow rate and efficiency tables for each rack position. Model-Based Calibration Toolbox then combines the rack position-dependent tables into 3D lookup tables for corrected mass flow rate and efficiency.	
To assess or adjust the calibration, select Edit in Application . The Model-Based Calibration Toolbox CAGE Browser opens. For more information, see “Calibration Tables” (Model-Based Calibration Toolbox).		

Task	Description	
Update block parameters	Update these corrected mass flow rate and efficiency parameters with the calibration.	
	Turbine type	Parameters
	Fixed geometry	<ul style="list-style-type: none"> • Corrected mass flow rate table, mdot_corrfx_tbl • Efficiency table, eta_turbfx_tbl • Corrected speed breakpoints, w_corrfx_bpts1 • Pressure ratio breakpoints, Pr_fx_bpts2
Variable geometry	<ul style="list-style-type: none"> • Corrected mass flow rate table, mdot_corrvr_tbl • Efficiency table, eta_turbvr_tbl • Corrected speed breakpoints, w_corrvr_bpts2 • Pressure ratio breakpoints, Pr_vr_bpts2 • Rack breakpoints, L_rack_bpts3 	

Corrected mass flow rate table, \dot{m}_{corrfx_tbl} – Lookup table array

Corrected mass flow rate lookup table for fixed geometry, \dot{m}_{corrfx_tbl} , as a function of corrected driveshaft speed, ω_{corr} , and pressure ratio, p_r , in kg/s.

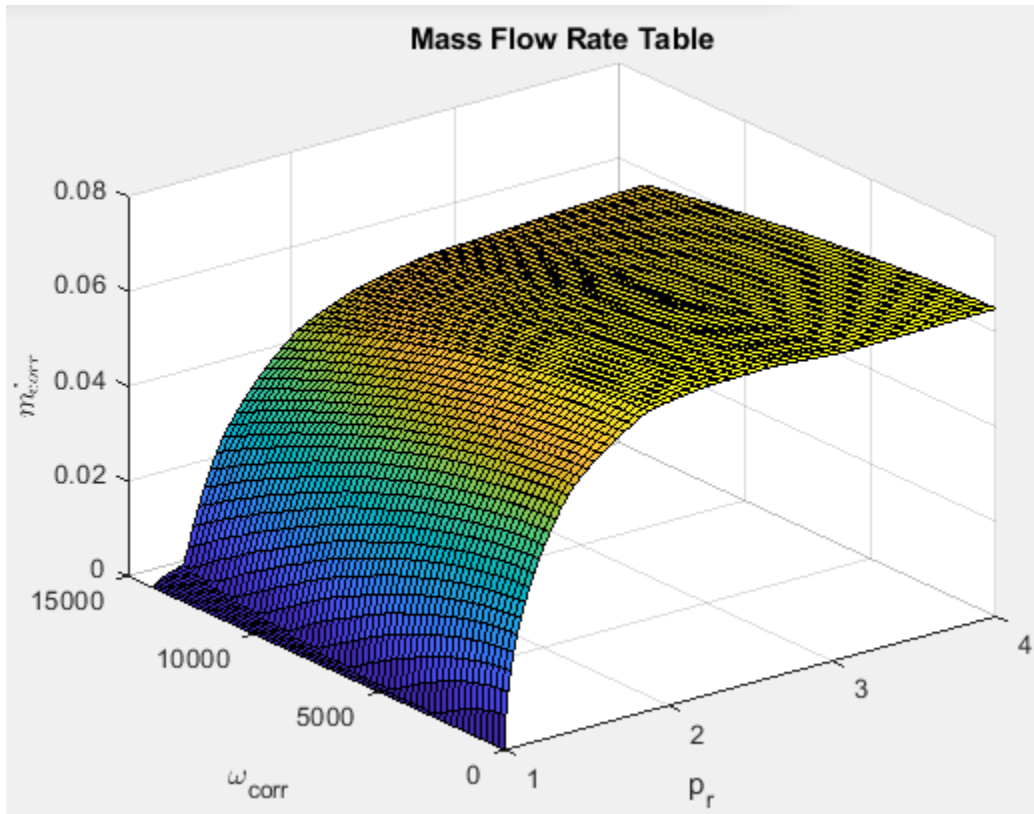


Dependencies

To enable this parameter, select Fixed geometry for the **Turbine type** parameter.

Efficiency table, eta_turbfx_tb — Lookup table

array

Efficiency lookup table for fixed geometry, $\eta_{turbfx, tbl}$, as a function of corrected driveshaft speed, ω_{corr} , and pressure ratio, p_r , dimensionless.

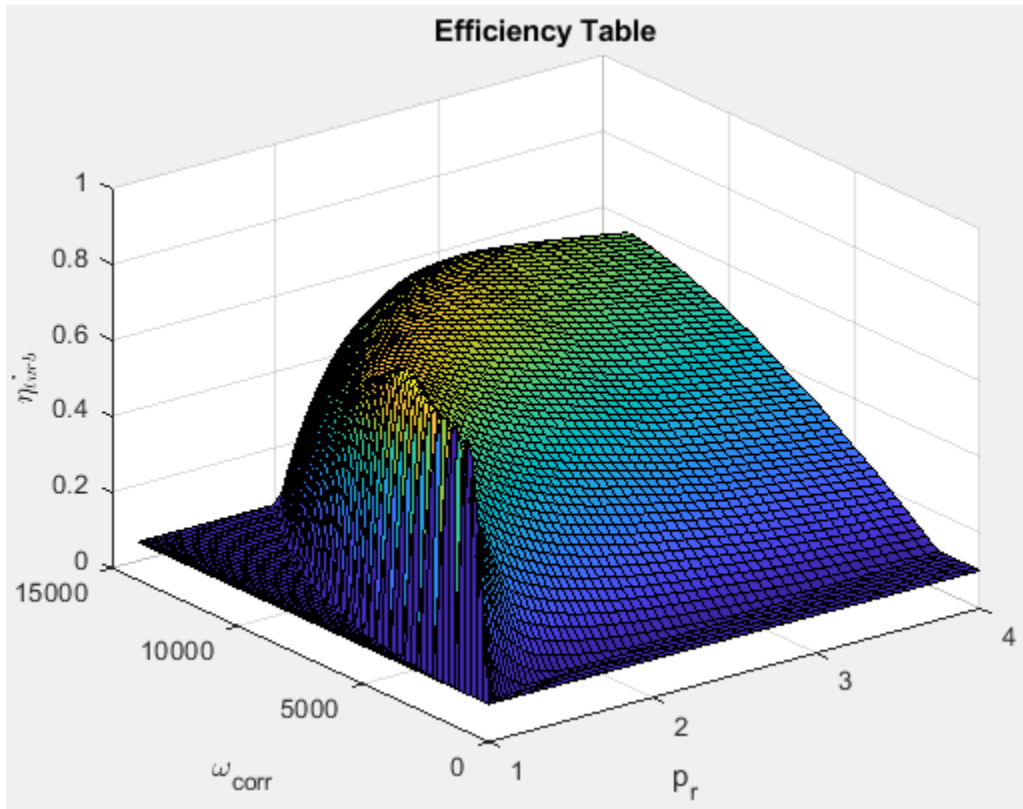

Dependencies

To enable this parameter, select Fixed geometry for the **Turbine type** parameter.

Corrected speed breakpoints, $w_corr_fx_bpts1$ – Fixed geometry

array

Corrected drive shaft speed breakpoints for fixed geometry, $\omega_{corr,fx,bpts1}$, in rad/s.

Dependencies

To enable this parameter, select Fixed geometry for the **Turbine type** parameter.

Pressure ratio breakpoints, Pr_fx_bpts2 – Fixed geometry

array


Pressure ratio breakpoints for fixed geometry, $p_{rfx, bpts2}$.

Dependencies

To enable this parameter, select **Fixed** geometry for the **Turbine type** parameter.

Corrected mass flow rate table, \dot{m}_{corrvr_tbl} — Lookup table array

Corrected mass flow rate lookup table for variable geometry, $\dot{m}_{corrvr, tbl}$, as a function of corrected driveshaft speed, ω_{corr} , and pressure ratio, p_r , in kg/s.

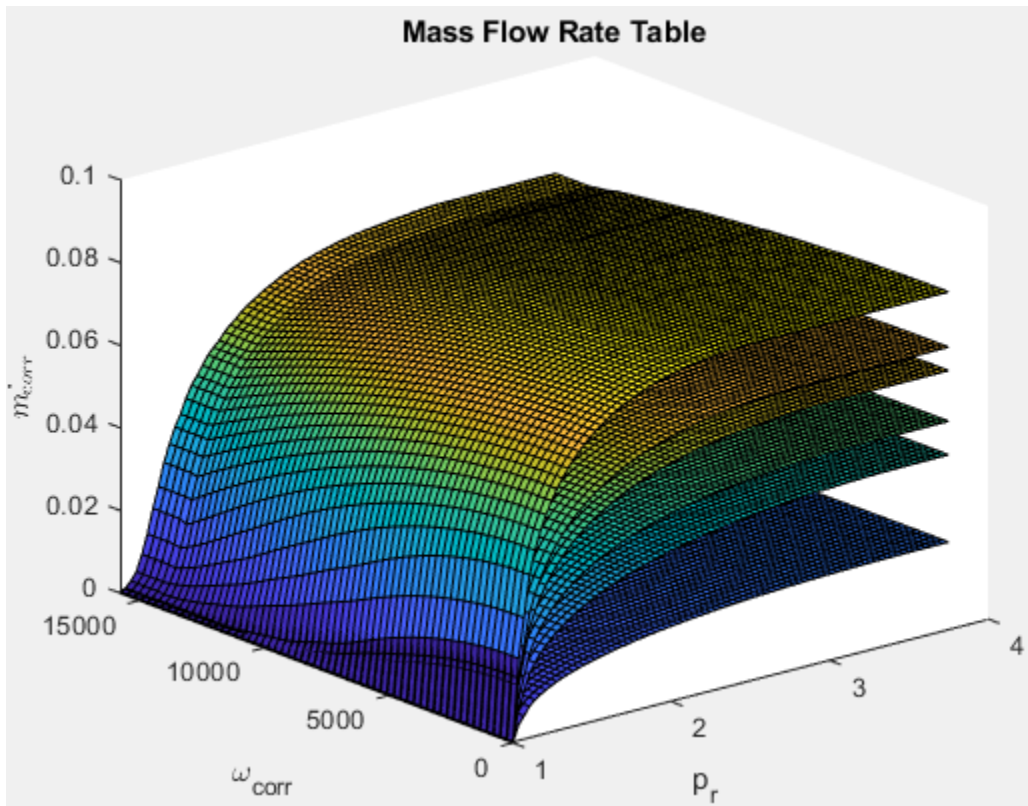


Dependencies

To enable this parameter, select **Variable** geometry for the **Turbine type** parameter.

Efficiency table, eta_turbvr_tbl – Lookup table

array

Efficiency lookup table for variable geometry, $\eta_{turbvr, tbl}$, as a function of corrected driveshaft speed, ω_{corr} , and pressure ratio, p_r , dimensionless.

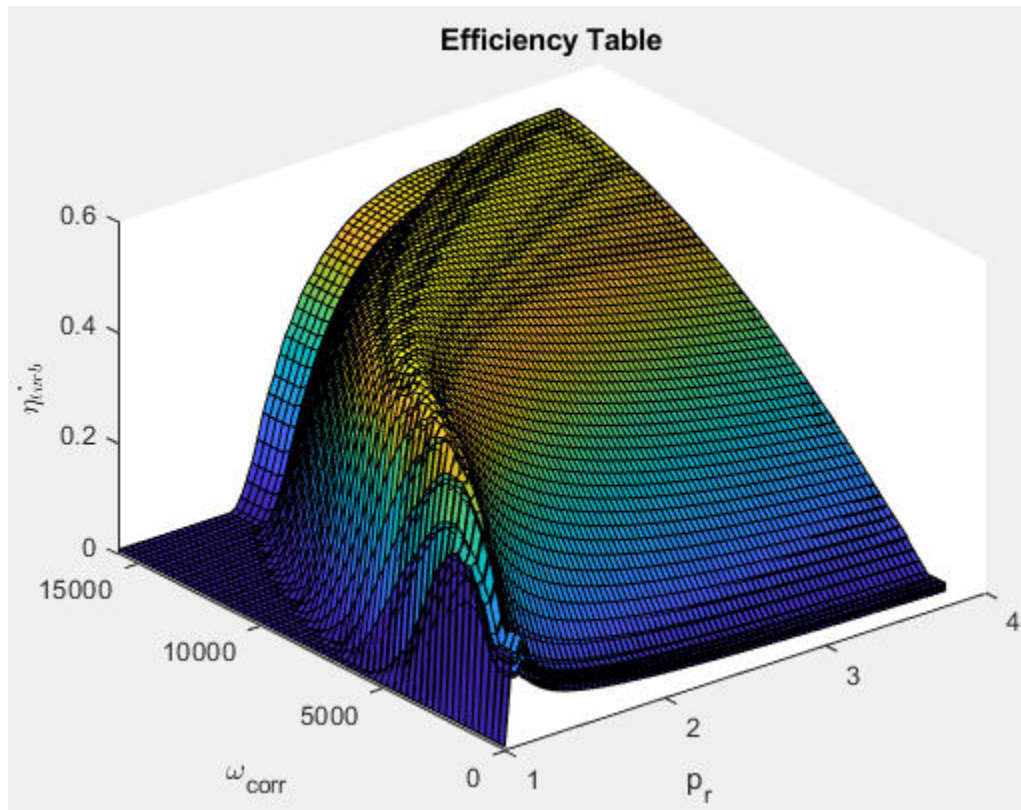

Dependencies

To enable this parameter, select Variable geometry for the **Turbine type** parameter.

Corrected speed breakpoints, w_corrvr_bpts2 – Variable geometry

array

Corrected drive shaft speed breakpoints for variable geometry, $\omega_{corrvr, bpts1}$, in rad/s.

Dependencies

To enable this parameter, select `Variable geometry` for the **Turbine type** parameter.

Pressure ratio breakpoints, Pr_vr_bpts2 — Variable geometry

array

Pressure ratio breakpoints for variable geometry.

Dependencies

To enable this parameter, select `Variable geometry` for the **Turbine type** parameter.

Rack breakpoints, L_rack_bpts3 — Variable geometry

array

Rack position breakpoints for variable geometry, $L_{rack, bpts3}$.

Dependencies

To enable this parameter, select `Variable geometry` for the **Turbine type** parameter.

Reference temperature, T_ref — Temperature

scalar

Performance map reference temperature, T_{ref} , in K.

Reference pressure, P_ref — Pressure

scalar

Performance map reference pressure, P_{ref} , in Pa.

Wastegate

Wastegate flow area, A_wgopen — Area

scalar

Area of fully opened wastegate valve, A_{wgopen} , in m^2 .

Dependencies

To enable **Wastegate flow area, A_wgopen**, select the **Include wastegate** parameter.

Pressure ratio linearize limit, Plim_wg — Area, m^2

scalar

Dependencies

Flow restriction linearization limit, $p_{lim, wg}$.

To enable **Pressure ratio linearize limit, Plim_wg**, select the **Include wastegate** parameter.

Properties

Ideal gas constant, R – Constant

scalar

Ideal gas constant R , in J/(kg·K).

Specific heat at constant pressure, cp – Specific heat

scalar

Specific heat at constant pressure, c_p , in J/(kg·K).

References

- [1] Heywood, John B. *Internal Combustion Engine Fundamentals*. New York: McGraw-Hill, 1988.
- [2] Eriksson, Lars and Lars Nielsen. *Modeling and Control of Engines and Drivelines*. Chichester, West Sussex, United Kingdom: John Wiley & Sons Ltd, 2014.

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using Simulink® Coder™.

See Also

Two-Way Connection | Boost Drive Shaft | Compressor

Topics


“Model-Based Calibration Toolbox”

Introduced in R2017a

Mapped Core Engine

Steady-state core engine model using lookup tables

Library: Powertrain Blockset / Propulsion / Combustion Engine
Components / Core Engine

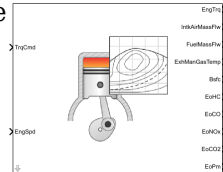

Description

The Mapped Core Engine block implements a steady-state core engine model using power, air mass flow, fuel flow, exhaust temperature, efficiency, and emission performance lookup tables. You can use the block for:

- Hardware-in-the-loop (HIL) engine control design.
- Vehicle-level fuel economy and performance simulations.

The block enables you to specify lookup tables for these engine characteristics. The lookup tables are functions of engine load, L , and engine speed N . If you select **Input engine temperature**, the tables are also a function of engine temperature, T .

- Power
- Air
- Fuel
- Temperature
- Efficiency
- Emissions
 - Hydrocarbon (HC)
 - Carbon monoxide (CO)
 - Nitric oxide and nitrogen dioxide (NO_x)
 - Carbon dioxide (CO₂)

- Particulate matter (PM) emissions

To bound the Mapped Core Engine block output, the block does not extrapolate the lookup table data.

Ports

Input

<TrqCmd> — Engine load

TrqCmd (default)

Engine load, L . Examples of engine load include:

- Commanded torque
- Commanded indicated mean effective pressure (IMEP) in the engine cylinder
- Normalized cylinder air mass
- Injected fuel mass

Dependencies

To specify an engine load port name, on the **Configuration** tab, enter a name in the **Load input port name** parameter field.

<EngSpd> — Engine speed

EngSpd (default)

Engine speed, N .

Dependencies

To specify an engine load port name, on the **Configuration** tab, enter a name in the **Speed input port name** parameter field.

<EngTemp> — Engine temperature

EngSpd (default)

Engine temperature, T .

Dependencies

To create the engine temperature input port name, select **Input engine temperature** parameter field.

To specify an engine load port name, on the **Configuration** tab, enter a name in the **Temperature input port name** parameter field.

Output

<EngTrq> – Power

EngTrq (default)

Engine power, T_{brake} .

Dependencies

- To create this port, on the **Configuration** tab, select **Power**.
- To specify the port name, on the **Power** tab, enter a name in the **Power output port name** parameter field.

<IntkAirMassFlw> – Air mass flow

IntkAirMassFlw (default)

Engine air mass flow, \dot{m}_{intk} .

Dependencies

- To create this port, on the **Configuration** tab, select **Air**.
- To specify the port name, on the **Air** tab, enter a name in the **Air output port name** parameter field.

<FuelMassFlw> – Fuel flow

FuelMassFlw (default)

Engine fuel flow, \dot{m}_{fuel} .

Dependencies

- To create this port, on the **Configuration** tab, select **Fuel**.
- To specify the port name, on the **Fuel** tab, enter a name in the **Fuel output port name** parameter field.

<ExhManGasTemp> — Exhaust temperature

ExhManGasTemp (default)

Engine exhaust temperature, T_{exh} .

Dependencies

- To create this port, on the **Configuration** tab, select **Temperature**.
- To specify the port name, on the **Temperature** tab, enter a name in the **Temperature output port name** parameter field.

<Bsfc> — Efficiency

Bsfc (default)

Brake-specific fuel consumption (BSFC), Eff .

Dependencies

- To create this port, on the **Configuration** tab, select **Efficiency**.
- To specify the port name, on the **Efficiency** tab, enter a name in the **Efficiency output port name** parameter field.

<EoHC> — Hydrocarbon emissions

EoHC (default)

Hydrocarbon emissions, HC .

Dependencies

- To create this port, on the **Configuration** tab, select **HC**.
- To specify the port name, on the **HC** tab, enter a name in the **HC output port name** parameter field.

<EoCO> — Carbon monoxide emissions

EoCO (default)

Carbon monoxide emissions, CO .

Dependencies

- To create this port, on the **Configuration** tab, select **CO**.
- To specify the port name, on the **CO** tab, enter a name in the **CO output port name** parameter field.

<EoNOx> – Nitric oxide and nitrogen dioxide emissions

EoNOx (default)

Nitric oxide and nitrogen dioxide emissions, *NOx*.**Dependencies**

- To create this port, on the **Configuration** tab, select **NOx**.
- To specify the port name, on the **NOx** tab, enter a name in the **NOx output port name** parameter field.

<EoCO2> – Carbon dioxide emissions

EoCO2 (default)

Carbon dioxide emissions, *CO2*.**Dependencies**

- To create this port, on the **Configuration** tab, select **CO2**.
- To specify the port name, on the **CO2** tab, enter a name in the **CO2 output port name** parameter field.

<EoPm> – Particulate matter emissions

EoPm (default)

Particulate matter emissions, *PM*.**Dependencies**

- To create this port, on the **Configuration** tab, select **PM**.
- To specify the port name, on the **PM** tab, enter a name in the **PM output port name** parameter field.

Parameters

Configuration**Engine Type – Type of engine image**

Compression-ignition (CI) (default) | Spark-ignition (SI)

Type of mapped internal combustion engine image to use in the block.

Load input port name — Name

TrqCmd (default)

Engine load input port name.

Breakpoints for load input — Breakpoints

vector

Breakpoints for engine load input.

Speed input port name — Name

EngSpd (default)

Speed input port name.

Breakpoints for speed input — Breakpoints

vector

Breakpoints for engine speed input.

Temperature input port name — Name

EngTemp (default)

Temperature input port name.

Dependencies

To enable this parameter, select **Input engine temperature**.

Breakpoints for temperature input — Breakpoints

vector

Breakpoints for engine temperature input.

Dependencies

To enable this parameter, select **Input engine temperature**.

Output Configuration — Create output ports

power on (default)

Create the output ports.

Dependencies

The table summarizes the output ports that are created for each **Output** parameter selection.

Output Selection	Creates Port	Creates Tab
Power	<i>EngTrq</i>	Power
Air	<i>IntkAirMassFlw</i>	Air
Fuel	<i>FuelMassFlw</i>	Fuel
Temperature	<i>ExhManGasTemp</i>	Temperature
Efficiency	<i>Bsfc</i>	Efficiency
HC	<i>EoHC</i>	HC
CO	<i>EoCO</i>	CO
NOx	<i>EoNOx</i>	NOx
CO2	<i>EoCO2</i>	CO2
PM	<i>EoPm</i>	PM

Power

Power output port name — Power

BrkTrq (default)

Power output port name.

Dependencies

To create this parameter, on the **Configuration** tab, select **Power**.

Power table — Power

array

Power table.

Dependencies

To create this parameter, on the **Configuration** tab, select **Power**.

Air

Air output port name — Air

AirFlw (default)

Air mass flow output port name.

Dependencies

To create this parameter, on the **Configuration** tab, select **Air**.

Air table — Air

array

Air mass flow table.

Dependencies

To create this parameter, on the **Configuration** tab, select **Air**.

Fuel

Fuel output port name — Fuel

FuelFlw (default)

Fuel output port name.

Dependencies

To create this parameter, on the **Configuration** tab, select **Fuel**.

Fuel table — Fuel

array

Fuel table.

Dependencies

To create this parameter, on the **Configuration** tab, select **Fuel**.

Temperature

Temperature output port name — Temperature

Texh (default)

Temperature output port name.

Dependencies

To create this parameter, on the **Configuration** tab, select **Temperature**.

Temperature table – Temperature

array

Temperature table.

Dependencies

To create this parameter, on the **Configuration** tab, select **Temperature**.

Efficiency**Efficiency output port name – Efficiency**

BSFC (default)

Efficiency output port name.

Dependencies

To create this parameter, on the **Configuration** tab, select **Efficiency**.

Efficiency table – Efficiency

array

Efficiency table.

Dependencies

To create this parameter, on the **Configuration** tab, select **Efficiency**.

HC**HC output port name – Hydrocarbon**

EO HC (default)

Hydrocarbon output port name.

Dependencies

To create this parameter, on the **Configuration** tab, select **HC**.

HC table – Hydrocarbon

array

Hydrocarbon table.

Dependencies

To create this parameter, on the **Configuration** tab, select **HC**.

CO

CO output port name — Carbon dioxide

E0 CO (default)

Carbon monoxide output port name.

Dependencies

To create this parameter, on the **Configuration** tab, select **CO**.

CO table — Carbon dioxide

array

Carbon dioxide table.

Dependencies

To create this parameter, on the **Configuration** tab, select **CO**.

NOx

NOx output port name — Nitric oxide *NO* and nitrogen dioxide *NO₂*

E0 NOx (default)

NOx output port name. NOx is nitric oxide *NO* and nitrogen dioxide *NO₂*.

Dependencies

To create this parameter, on the **Configuration** tab, select **NOx**.

NOx table — Nitric oxide *NO* and nitrogen dioxide *NO₂*

array

NOx emissions table. NOx is nitric oxide *NO* and nitrogen dioxide *NO₂*.

Dependencies

To create this parameter, on the **Configuration** tab, select **NOx**.

CO2

CO2 output port name — Carbon dioxide

E0 CO2 (default)

Carbon dioxide output port name.

Dependencies

To create this parameter, on the **Configuration** tab, select **CO2**.

CO2 table — Carbon dioxide

array

Carbon dioxide table.

Dependencies

To create this parameter, on the **Configuration** tab, select **CO2**.

PM

PM output port name — Particulate matter

E0 PM (default)

Particulate matter output port name.

Dependencies

To create this parameter, on the **Configuration** tab, select **PM**.

PM table — Particulate matter

array

Particulate matter table.

Dependencies

To create this parameter, on the **Configuration** tab, select **PM**.

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using Simulink® Coder™.

See Also


CI Core Engine | SI Core Engine

Introduced in R2017a

Mapped CI Engine

Compression-ignition engine model using lookup tables

Library: Powertrain Blockset / Propulsion / Combustion Engines
Vehicle Dynamics Blockset / Powertrain / Propulsion

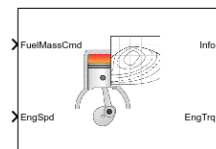

Description

The Mapped CI Engine block implements a mapped compression-ignition (CI) engine model using power, air mass flow, fuel flow, exhaust temperature, efficiency, and emission performance lookup tables. You can use the block for:

- Hardware-in-the-loop (HIL) engine control design
- Vehicle-level fuel economy and performance simulations

The lookup tables, developed with the Model-Based Calibration Toolbox, are functions of injected fuel mass, F , engine torque, T , engine speed, N , and engine temperature, $Temp_{Eng}$.

Input Command Setting	Input Engine Temperature Parameter Setting	Lookup Tables
Fuel mass	off	$f(F,N)$
	on	$f(F,N,Temp_{Eng})$
Torque	off	$f(T,N)$
	on	$f(T,N,Temp_{Eng})$

The block enables you to specify lookup tables for these engine characteristics:

- Power
- Air
- Fuel

- Temperature
- Efficiency
- Hydrocarbon (HC) emissions
- Carbon monoxide (CO) emissions
- Nitric oxide and nitrogen dioxide (NO_x) emissions
- Carbon dioxide (CO₂) emissions
- Particulate matter (PM) emissions

To bound the Mapped CI Engine block output, the block does not extrapolate the lookup table data.

Virtual Calibration

If you have Model-Based Calibration Toolbox, click **Calibrate Maps** to virtually calibrate the 2D lookup tables using measured data. The dialog box steps through these tasks.

Task	Description									
Import firing data	<p data-bbox="476 300 1302 361">Import this firing data from a file. For more information, see “Using Data” (Model-Based Calibration Toolbox).</p> <table border="1" data-bbox="476 388 1320 996"> <thead> <tr> <th data-bbox="476 388 647 465">Input command</th> <th data-bbox="647 388 980 465">Required Data</th> <th data-bbox="980 388 1320 465">Optional Data</th> </tr> </thead> <tbody> <tr> <td data-bbox="476 465 647 626">Fuel mass</td> <td data-bbox="647 465 980 626"> <ul style="list-style-type: none"> • Engine speed, rpm • Commanded fuel mass per injection, mg • Engine torque, N·m </td> <td data-bbox="980 465 1320 626"> <ul style="list-style-type: none"> • Air mass flow rate, kg/s • Brake specific fuel consumption, g/(kW·h) • CO₂ mass flow rate, kg/s </td> </tr> <tr> <td data-bbox="476 626 647 996">Torque</td> <td data-bbox="647 626 980 996"> <ul style="list-style-type: none"> • Engine speed, rpm • Engine torque, N·m </td> <td data-bbox="980 626 1320 996"> <ul style="list-style-type: none"> • CO mass flow rate, kg/s • Exhaust temperature, K • Fuel mass flow rate, kg/s • HC mass flow rate, kg/s • NO_x mass flow rate, kg/s • Particulate matter mass flow rate, kg/s </td> </tr> </tbody> </table> <p data-bbox="476 1022 1320 1147">Collect firing data at steady-state operating conditions when injectors deliver the fuel. Data should cover the engine speed and torque operating range. Model-Based Calibration Toolbox uses the firing data boundary as the maximum torque.</p> <p data-bbox="476 1177 1320 1237">To filter or edit the data, select Edit in Application. The Model-Based Calibration Toolbox Data Editor opens.</p>	Input command	Required Data	Optional Data	Fuel mass	<ul style="list-style-type: none"> • Engine speed, rpm • Commanded fuel mass per injection, mg • Engine torque, N·m 	<ul style="list-style-type: none"> • Air mass flow rate, kg/s • Brake specific fuel consumption, g/(kW·h) • CO₂ mass flow rate, kg/s 	Torque	<ul style="list-style-type: none"> • Engine speed, rpm • Engine torque, N·m 	<ul style="list-style-type: none"> • CO mass flow rate, kg/s • Exhaust temperature, K • Fuel mass flow rate, kg/s • HC mass flow rate, kg/s • NO_x mass flow rate, kg/s • Particulate matter mass flow rate, kg/s
Input command	Required Data	Optional Data								
Fuel mass	<ul style="list-style-type: none"> • Engine speed, rpm • Commanded fuel mass per injection, mg • Engine torque, N·m 	<ul style="list-style-type: none"> • Air mass flow rate, kg/s • Brake specific fuel consumption, g/(kW·h) • CO₂ mass flow rate, kg/s 								
Torque	<ul style="list-style-type: none"> • Engine speed, rpm • Engine torque, N·m 	<ul style="list-style-type: none"> • CO mass flow rate, kg/s • Exhaust temperature, K • Fuel mass flow rate, kg/s • HC mass flow rate, kg/s • NO_x mass flow rate, kg/s • Particulate matter mass flow rate, kg/s 								
Import non-firing data	<p data-bbox="476 1255 936 1281">Import this non-firing data from a file.</p> <ul style="list-style-type: none"> • Engine speed, rpm • Engine torque, N·m <p data-bbox="476 1411 1320 1498">Collect non-firing (motoring) data at steady-state operating conditions when fuel is cut off. All non-firing torque points must be less than zero. Non-firing data is a function of engine speed only.</p>									

Task	Description
Generate response models	For both firing and non-firing data, the Model-Based Calibration Toolbox uses test plans to fit data to Gaussian process models (GPMs). To assess or adjust the response model fit, select Edit in Application . The Model-Based Calibration Toolbox Model Browser opens. For more information, see “Model Assessment” (Model-Based Calibration Toolbox).
Generate calibration	Model-Based Calibration Toolbox calibrates the firing and non-firing response models and generates calibrated tables. To assess or adjust the calibration, select Edit in Application . The Model-Based Calibration Toolbox CAGE Browser opens. For more information, see “Calibration Tables” (Model-Based Calibration Toolbox).
Update block parameters	Update the block lookup table and breakpoint parameters with the calibration.

Cylinder Air Mass

The block calculates the normalized cylinder air mass using these equations.

$$M_{Nom} = \frac{P_{std}V_d}{N_{cyl}R_{air}T_{std}}$$

$$L = \frac{\left(\frac{60s}{min}\right)Cps \cdot \dot{m}_{air}}{\left(\frac{1000g}{Kg}\right)N_{cyl} \cdot N \cdot M_{Nom}}$$

The equations use these variables.

L	Normalized cylinder air mass
M_{Nom}	Nominal engine cylinder air mass at standard temperature and pressure, piston at bottom dead center (BDC) maximum volume, in kg
Cps	Crankshaft revolutions per power stroke, rev/stroke
P_{std}	Standard pressure
T_{std}	Standard temperature

R_{air}	Ideal gas constant for air and burned gas mixture
V_d	Displaced volume
N_{cyl}	Number of engine cylinders
N	Engine speed
\dot{m}_{intk}	Engine air mass flow, in g/s

Turbocharger Lag

To model turbocharger lag, select **Include turbocharger lag effect**. Turbocharger lag limits the maximum fuel mass per injection. To model the maximum fuel mass per injection, the block uses a first-order system with a time constant. At low torque, the engine does not require boost to provide sufficient air flow. When the requested fuel mass requires boost, the block uses a time constant to determine the maximum fuel mass per injection. The block uses these equations for the specified **Input command** setting.

Calculation	Input command Parameter Setting	
	Fuel mass	Torque
Dynamic torque	$\frac{dF_{max}}{dt} = \frac{1}{\tau_{eng}}(F_{cmd} - F_{max})$	$\frac{dT_{max}}{dt} = \frac{1}{\tau_{eng}}(T_{cmd} - T_{max})$
Fuel mass per injection or torque - with turbocharger lag	$F = \begin{cases} F_{cmd} & \text{when } F_{cmd} < F_{max} \\ F_{max} & \text{when } F_{cmd} \geq F_{max} \end{cases}$	$T_{target} = \begin{cases} T_{cmd} & \text{when } T_{cmd} < T_{max} \\ T_{max} & \text{when } T_{cmd} \geq T_{max} \end{cases}$
Fuel mass per injection or torque - without turbocharger lag	$F = F_{cmd} = F_{max}$	$T_{target} = T_{cmd} = T_{max}$
Boost time constant	$\tau_{bst} = \begin{cases} \tau_{bst, rising} & \text{when } F_{cmd} > F_{max} \\ \tau_{bst, falling} & \text{when } F_{cmd} \leq F_{max} \end{cases}$	$\tau_{bst} = \begin{cases} \tau_{bst, rising} & \text{when } T_{cmd} > T_{max} \\ \tau_{bst, falling} & \text{when } T_{cmd} \leq T_{max} \end{cases}$

Calculation	Input command Parameter Setting	
	Fuel mass	Torque
Final time constant	$\tau_{eng} = \begin{cases} \tau_{nat} & \text{when } T_{brake} < f_{bst}(N) \\ \tau_{bst} & \text{when } T_{brake} \geq f_{bst}(N) \end{cases}$	

The equations use these variables.

T_{brake}	Brake torque
F	Fuel mass per injection
F_{cmd}, F_{max}	Commanded and maximum fuel mass per injection, respectively
$T_{target}, T_{cmd}, T_{max}$	Target, commanded, and maximum torque, respectively
τ_{bst}	Boost time constant
$\tau_{bst,rising}, \tau_{bst,falling}$	Boost rising and falling time constant, respectively
τ_{eng}	Final time constant
τ_{nat}	Time constant below the boost torque speed line
$f_{bst}(N)$	Boost torque/speed line
N	Engine speed

Fuel Flow

To calculate the fuel economy for high-fidelity models, the block uses the volumetric fuel flow.

$$Q_{fuel} = \frac{\dot{m}_{fuel}}{\left(\frac{1000kg}{m^3}\right) Sg_{fuel}}$$

The equation uses these variables.

\dot{m}_{fuel}	Fuel mass flow
Sg_{fuel}	Specific gravity of fuel
Q_{fuel}	Volumetric fuel flow

Power Accounting

For the power accounting, the block implements these equations.

Bus Signal		Description	Equations
PwrInfo	PwrTrnsfrd — Power transferred between blocks <ul style="list-style-type: none"> • Positive signals indicate flow into block • Negative signals indicate flow out of block 	PwrCrkshft	Crankshaft power $-\tau_{eng}\omega$
	PwrNotTrnsfrd — Power crossing the block boundary, but not transferred <ul style="list-style-type: none"> • Positive signals indicate an input • Negative signals indicate a loss 	PwrFuel	Fuel input power $\dot{m}_{fuel}LHV$
		PwrLoss	Power loss $\tau_{eng}\omega - \dot{m}_{fuel}LHV$
PwrStored — Stored energy rate of change <ul style="list-style-type: none"> • Positive signals indicate an increase • Negative signals indicate a decrease 		<i>Not used</i>	

The equations use these variables.

LHV	Fuel lower heating value
ω	Engine speed, rad/s
\dot{m}_{fuel}	Fuel mass flow
τ_{eng}	Fuel mass per injection time constant

Ports

Input

FuelMassCmd — Injected fuel mass command

scalar

Injected fuel mass command, F , in mg/inj.

Dependencies

To create this port, for **Input command**, select Fuel mass.

TrqCmd — Torque command

scalar

Torque command, T , in N·m.

Dependencies

To create this port, for **Input command**, select Torque.

EngSpd — Engine speed

scalar

Engine speed, N , in rpm.

EngTemp — Engine temperature

scalar

Engine temperature, $Temp_{Eng}$, in K.

Dependencies

To create this port, select **Input engine temperature**.

Output

Info — Bus signal

bus

Bus signal containing these block calculations.

Signal			Description	Units
IntkGasMassFlw			Engine air mass flow output	kg/s
NrmlzdAirChrg			Normalized engine cylinder air mass	N/A
Afr			Air-fuel ratio (AFR)	N/A
FuelMassFlw			Engine fuel flow output	kg/s
FuelVolFlw			Volumetric fuel flow	m ³ /s
ExhManGasTemp			Engine exhaust gas temperature	K
EngTrq			Engine torque output	N·m
EngSpd			Engine speed	rpm
CrkAng			Engine crankshaft absolute angle $\int_0^{(360)Cps} EngSpd \frac{180}{30} d\theta$ where <i>Cps</i> is crankshaft revolutions per power stroke.	degrees crank angle
Bsfc			Engine brake-specific fuel consumption (BSFC)	g/kWh
EoHC			Engine out hydrocarbon emission mass flow	kg/s
EoCO			Engine out carbon monoxide emission mass flow rate	kg/s
EoNOx			Engine out nitric oxide and nitrogen dioxide emissions mass flow	kg/s
EoCO2			Engine out carbon dioxide emission mass flow	kg/s
EoPM			Engine out particulate matter emission mass flow	kg/s
PwrIn _o	PwrTrnsfrd	PwrCrkshft	Crankshaft power	W
	PwrNotTrnsfrd	PwrFuel	Fuel input power	W
		PwrLoss	Power loss	W

Signal	Description	Units
PwrStored	Not used	

EngTrq — Power

scalar

Engine power, T_{brake} , in N·m.

Parameters

Block Options

Input command — Table functions

Fuel mass (default) | Torque

The lookup tables, developed with the Model-Based Calibration Toolbox, are functions of injected fuel mass, F , engine torque, T , engine speed, N , and engine temperature, $Temp_{Eng}$.

Input Command Setting	Input Engine Temperature Parameter Setting	Lookup Tables
Fuel mass	off	$f(F,N)$
	on	$f(F,N,Temp_{Eng})$
Torque	off	$f(T,N)$
	on	$f(T,N,Temp_{Eng})$

Dependencies

- Selecting Fuel mass enables **Breakpoints for commanded fuel mass input, f_tbrake_f_bpt.**
- Selecting Torque enables **Breakpoints for commanded torque input, f_tbrake_t_bpt.**
- Selecting **Input engine temperature** enables **Breakpoints for temperature input, f_tbrake_engtmp_bpt.**

Include turbocharger lag effect — Increase time constant

off (default)

To model turbocharger lag, select **Include turbocharger lag effect**. Turbocharger lag limits the maximum fuel mass per injection. To model the maximum fuel mass per injection, the block uses a first-order system with a time constant. At low torque, the engine does not require boost to provide sufficient air flow. When the requested fuel mass requires boost, the block uses a time constant to determine the maximum fuel mass per injection. The block uses these equations for the specified **Input command** setting.

Calculation	Input command Parameter Setting	
	Fuel mass	Torque
Dynamic torque	$\frac{dF_{max}}{dt} = \frac{1}{\tau_{eng}}(F_{cmd} - F_{max})$	$\frac{dT_{max}}{dt} = \frac{1}{\tau_{eng}}(T_{cmd} - T_{max})$
Fuel mass per injection or torque - with turbocharger lag	$F = \begin{cases} F_{cmd} & \text{when } F_{cmd} < F_{max} \\ F_{max} & \text{when } F_{cmd} \geq F_{max} \end{cases}$	$T_{target} = \begin{cases} T_{cmd} & \text{when } T_{cmd} < T_{max} \\ T_{max} & \text{when } T_{cmd} \geq T_{max} \end{cases}$
Fuel mass per injection or torque - without turbocharger lag	$F = F_{cmd} = F_{max}$	$T_{target} = T_{cmd} = T_{max}$
Boost time constant	$\tau_{bst} = \begin{cases} \tau_{bst, rising} & \text{when } F_{cmd} > F_{max} \\ \tau_{bst, falling} & \text{when } F_{cmd} \leq F_{max} \end{cases}$	$\tau_{bst} = \begin{cases} \tau_{bst, rising} & \text{when } T_{cmd} > T_{max} \\ \tau_{bst, falling} & \text{when } T_{cmd} \leq T_{max} \end{cases}$
Final time constant	$\tau_{eng} = \begin{cases} \tau_{nat} & \text{when } T_{brake} < f_{bst}(N) \\ \tau_{bst} & \text{when } T_{brake} \geq f_{bst}(N) \end{cases}$	

The equations use these variables.

T_{brake}	Brake torque
F	Fuel mass per injection
F_{cmd}, F_{max}	Commanded and maximum fuel mass per injection, respectively
$T_{target}, T_{cmd}, T_{max}$	Target, commanded, and maximum torque, respectively

τ_{bst}	Boost time constant
$\tau_{bst,rising}, \tau_{bst,falling}$	Boost rising and falling time constant, respectively
τ_{eng}	Final time constant
τ_{nat}	Time constant below the boost torque speed line
$f_{bst}(N)$	Boost torque/speed line
N	Engine speed

Dependencies

Selecting **Include turbocharger lag effect** enables these parameters:

- **Boost torque line, f_tbrake_bst**
- **Time constant below boost line, tau_nat**
- **Rising maximum fuel mass boost time constant, tau_bst_rising**
- **Falling maximum fuel mass boost time constant, tau_bst_falling**

Input engine temperature — Create input port

off (default) | on

Select this to create the EngTemp input port.

The lookup tables, developed with the Model-Based Calibration Toolbox, are functions of injected fuel mass, F , engine torque, T , engine speed, N , and engine temperature, $Temp_{Eng}$.

Input Command Setting	Input Engine Temperature Parameter Setting	Lookup Tables
Fuel mass	off	$f(F,N)$
	on	$f(F,N,Temp_{Eng})$
Torque	off	$f(T,N)$
	on	$f(T,N,Temp_{Eng})$

Configuration

Calibrate Maps — Calibrate tables with measured data

selection

If you have Model-Based Calibration Toolbox, click **Calibrate Maps** to virtually calibrate the 2D lookup tables using measured data. The dialog box steps through these tasks.

Task	Description		
Import firing data	Import this firing data from a file. For more information, see “Using Data” (Model-Based Calibration Toolbox).		
	Input command	Required Data	Optional Data
	Fuel mass	<ul style="list-style-type: none"> • Engine speed, rpm • Commanded fuel mass per injection, mg • Engine torque, N·m 	<ul style="list-style-type: none"> • Air mass flow rate, kg/s • Brake specific fuel consumption, g/(kW·h) • CO₂ mass flow rate, kg/s
Torque	<ul style="list-style-type: none"> • Engine speed, rpm • Engine torque, N·m 	<ul style="list-style-type: none"> • CO mass flow rate, kg/s • Exhaust temperature, K • Fuel mass flow rate, kg/s • HC mass flow rate, kg/s • NO_x mass flow rate, kg/s • Particulate matter mass flow rate, kg/s 	
<p>Collect firing data at steady-state operating conditions when injectors deliver the fuel. Data should cover the engine speed and torque operating range. Model-Based Calibration Toolbox uses the firing data boundary as the maximum torque.</p>			
<p>To filter or edit the data, select Edit in Application. The Model-Based Calibration Toolbox Data Editor opens.</p>			

Task	Description
Import non-firing data	<p>Import this non-firing data from a file.</p> <ul style="list-style-type: none"> • Engine speed, rpm • Engine torque, N·m <p>Collect non-firing (motoring) data at steady-state operating conditions when fuel is cut off. All non-firing torque points must be less than zero. Non-firing data is a function of engine speed only.</p>
Generate response models	<p>For both firing and non-firing data, the Model-Based Calibration Toolbox uses test plans to fit data to Gaussian process models (GPMs).</p> <p>To assess or adjust the response model fit, select Edit in Application. The Model-Based Calibration Toolbox Model Browser opens. For more information, see “Model Assessment” (Model-Based Calibration Toolbox).</p>
Generate calibration	<p>Model-Based Calibration Toolbox calibrates the firing and non-firing response models and generates calibrated tables.</p> <p>To assess or adjust the calibration, select Edit in Application. The Model-Based Calibration Toolbox CAGE Browser opens. For more information, see “Calibration Tables” (Model-Based Calibration Toolbox).</p>
Update block parameters	<p>Update the block lookup table and breakpoint parameters with the calibration.</p>

Dependencies

To enable this parameter, clear **Input engine temperature**.

Breakpoints for commanded fuel mass input, f_tbrake_f_bpt — Breakpoints

vector

Breakpoints, in mg/inj.

Dependencies

Setting **Input command** to Fuel mass enables this parameter.

Breakpoints for commanded torque input, f_tbrake_t_bpt – Breakpoints
vector

Breakpoints, in N·m.

Dependencies

Setting **Input command** to Torque enables this parameter.

Breakpoints for engine speed input, f_tbrake_n_bpt – Breakpoints
vector

Breakpoints, in rpm.

Breakpoints for temperature input, f_tbrake_engtmp_bpt – Breakpoints
vector

Breakpoints, in K.

Dependencies

To enable this parameter, select **Input engine temperature**.

Number of cylinders, NCyl – Number
scalar

Number of cylinders.

Crank revolutions per power stroke, Cps – Crank revolutions
scalar

Crank revolutions per power stroke.

Total displaced volume, Vd – Volume
scalar

Volume displaced by engine, in m³.

Fuel lower heating value, Lhv – Heating value
scalar

Fuel lower heating value, *LHV*, in J/kg.

Fuel specific gravity, Sg — Specific gravity

scalar

Specific gravity of fuel, Sg_{fuel} , dimensionless.

Ideal gas constant air, Rair — Constant

scalar

Ideal gas constant of air and residual gas entering the engine intake port, in J/(kg·K).

Air standard pressure, Pstd — Pressure

scalar

Standard air pressure, in Pa.

Air standard temperature, Tstd — Temperature

scalar

Standard air temperature, in K.

Boost torque line, f_tbrake_bst — Boost lag

vector

Boost torque line, $f_{bst}(N)$, in N·m.

Dependencies

To enable this parameter, select **Include turbocharger lag effect**.

Time constant below boost line — Time constant below

scalar

Time constant below boost line, τ_{nat} , in s.

Dependencies

To enable this parameter, select **Include turbocharger lag effect**.

Rising maximum fuel mass boost time constant, tau_bst_rising — Rising time constant

scalar

Rising maximum fuel mass boost time constant, $\tau_{bst,rising}$, in s.

Dependencies

To enable this parameter, select **Include turbocharger lag effect**.

Falling maximum fuel mass boost time constant, $\tau_{bst_falling}$ — Falling time constant

scalar

Falling maximum fuel mass boost time constant, $\tau_{bst,falling}$, in s.


Dependencies

To enable this parameter, select **Include turbocharger lag effect**.

Power

Brake torque map, f_tbrake — 2D lookup table

array

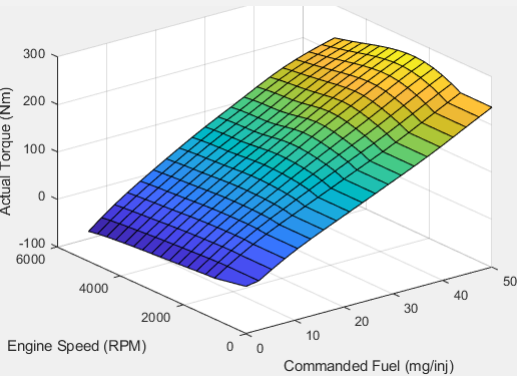Input Command Setting	Description
Fuel mass	<p>The engine brake torque lookup table is a function of commanded fuel mass and engine speed, $T_{brake} = f(F, N)$, where:</p> <ul style="list-style-type: none"> • T_{brake} is engine torque, in N·m. • F is commanded fuel mass, in mg per injection. • N is engine speed, in rpm. 

Input Command Setting	Description
Torque	<p>The engine brake torque lookup table is a function of target torque and engine speed, $T_{brake} = f(T_{target}, N)$, where:</p> <ul style="list-style-type: none"> • T_{brake} is engine torque, in N·m. • T_{target} is target torque, in N·m. • N is engine speed, in rpm.

Dependencies

To enable this parameter, clear **Input engine temperature**.

Plot brake torque map — Plot table

button

Click to plot table.

Dependencies

To enable this parameter, clear **Input engine temperature**.

Brake torque map, f_tbrake_3d — 3D lookup table

array

Input Command Setting	Description
Fuel mass	<p>The engine brake torque lookup table is a function of commanded fuel mass and engine speed, $T_{brake} = f(F, N, Temp_{Eng})$, where:</p> <ul style="list-style-type: none"> • T_{brake} is engine torque, in N·m. • F is commanded fuel mass, in mg per injection. • $Temp_{Eng}$ is engine temperature, in K.

Input Command Setting	Description
Torque	<p>The engine brake torque lookup table is a function of target torque and engine speed, $T_{brake} = f(T_{target}, N, Temp_{Eng})$, where:</p> <ul style="list-style-type: none"> • T_{brake} is engine torque, in N·m. • T_{target} is target torque, in N·m. • N is engine speed, in rpm. • $Temp_{Eng}$ is engine temperature, in K.


Dependencies

To enable this parameter, select **Input engine temperature**.

Air

Air mass flow map, f_air – 2D lookup table

array

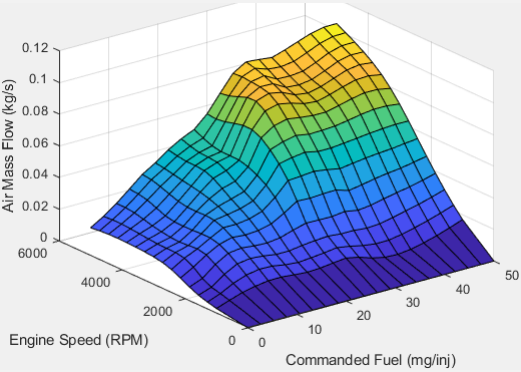Input Command Setting	Description
Fuel mass	<p>The air mass flow lookup table is a function of commanded fuel mass and engine speed, $\dot{m}_{intk} = f(F_{max}, N)$, where:</p> <ul style="list-style-type: none"> • \dot{m}_{intk} is engine air mass flow, in kg/s. • F_{max} is commanded fuel mass, in mg per injection. • N is engine speed, in rpm. 
Torque	<p>The air mass flow lookup table is a function of maximum torque and engine speed, $\dot{m}_{intk} = f(T_{max}, N)$, where:</p> <ul style="list-style-type: none"> • \dot{m}_{intk} is engine air mass flow, in kg/s. • T_{max} is maximum torque, in N·m. • N is engine speed, in rpm.

Dependencies

To enable this parameter, clear **Input engine temperature**.

Plot air mass map — Plot table

button

Click to plot table.

Dependencies

To enable this parameter, clear **Input engine temperature**.

Air mass flow map, f_air_3d – 3D lookup table

array


Input Command Setting	Description
Fuel mass	<p>The air mass flow lookup table is a function of commanded fuel mass and engine speed, $\dot{m}_{intk} = f(F_{max}, N, Temp_{Eng})$, where:</p> <ul style="list-style-type: none"> • \dot{m}_{intk} is engine air mass flow, in kg/s. • F_{max} is commanded fuel mass, in mg per injection. • N is engine speed, in rpm. • $Temp_{Eng}$ is engine temperature, in K.
Torque	<p>The air mass flow lookup table is a function of maximum torque and engine speed, $\dot{m}_{intk} = f(T_{max}, N, Temp_{Eng})$, where:</p> <ul style="list-style-type: none"> • \dot{m}_{intk} is engine air mass flow, in kg/s. • T_{max} is maximum torque, in N·m. • N is engine speed, in rpm. • $Temp_{Eng}$ is engine temperature, in K.

Dependencies

To enable this parameter, select **Input engine temperature**.

Fuel**Fuel flow map, f_fuel – 2D lookup table**

array

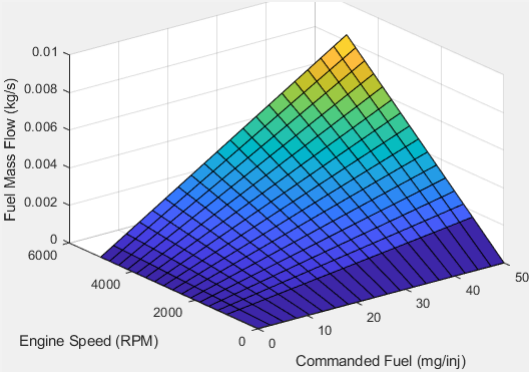Input Command Setting	Description
Fuel mass	<p>The engine fuel flow lookup table is a function of commanded fuel mass and engine speed, $MassFlow = f(F, N)$, where:</p> <ul style="list-style-type: none"> • $MassFlow$ is engine fuel mass flow, in kg/s. • F is commanded fuel mass, in mg per injection. • N is engine speed, in rpm. 
Torque	<p>The engine fuel flow lookup table is a function of target torque and engine speed, $MassFlow = f(T_{target}, N)$, where:</p> <ul style="list-style-type: none"> • $MassFlow$ is engine fuel mass flow, in kg/s. • T_{target} is target torque, in N·m. • N is engine speed, in rpm.

Dependencies

To enable this parameter, clear **Input engine temperature**.

Plot fuel flow map — Plot table

button

Click to plot table.

Dependencies

To enable this parameter, clear **Input engine temperature**.

Fuel flow map, f_fuel_3d – 3D lookup table

array


Input Command Setting	Description
Fuel mass	<p>The engine fuel flow lookup table is a function of commanded fuel mass, engine speed, and engine temperature, $MassFlow = f(F, N, Temp_{Eng})$, where:</p> <ul style="list-style-type: none"> • $MassFlow$ is engine fuel mass flow, in kg/s. • F is commanded fuel mass, in mg per injection. • N is engine speed, in rpm. • $Temp_{Eng}$ is engine temperature, in K.
Torque	<p>The engine fuel flow lookup table is a function of target torque and engine speed, and engine temperature, $MassFlow = f(T_{target}, N, Temp_{Eng})$, where:</p> <ul style="list-style-type: none"> • $MassFlow$ is engine fuel mass flow, in kg/s. • T_{target} is target torque, in N·m. • N is engine speed, in rpm. • $Temp_{Eng}$ is engine temperature, in K.

Dependencies

To enable this parameter, select **Input engine temperature**.

Temperature**Exhaust temperature map, f_texh – 2D lookup table**

array

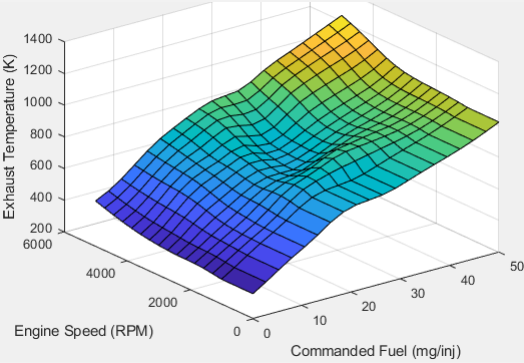Input Command Setting	Description
Fuel mass	<p>The engine exhaust temperature table is a function of commanded fuel mass and engine speed, $T_{exh} = f(F, N)$, where:</p> <ul style="list-style-type: none"> • T_{exh} is exhaust temperature, in K. • F is commanded fuel mass, in mg per injection. • N is engine speed, in rpm. 
Torque	<p>The engine exhaust temperature table is a function of target torque and engine speed, $T_{exh} = f(T_{target}, N)$, where:</p> <ul style="list-style-type: none"> • T_{exh} is exhaust temperature, in K. • T_{target} is target torque, in N·m. • N is engine speed, in rpm.

Dependencies

To enable this parameter, clear **Input engine temperature**.

Plot exhaust temperature map — Plot table
button

Click to plot table.

Dependencies

To enable this parameter, clear **Input engine temperature**.

Exhaust temperature map, f_texh_3d – 3D lookup table

array


Input Command Setting	Description
Fuel mass	<p>The engine exhaust temperature table is a function of commanded fuel mass and engine speed, $T_{exh} = f(F, N, Temp_{Eng})$, where:</p> <ul style="list-style-type: none"> • T_{exh} is exhaust temperature, in K. • F is commanded fuel mass, in mg per injection. • N is engine speed, in rpm. • $Temp_{Eng}$ is engine temperature, in K.
Torque	<p>The engine exhaust temperature table is a function of target torque and engine speed, $T_{exh} = f(T_{target}, N, Temp_{Eng})$, where:</p> <ul style="list-style-type: none"> • T_{exh} is exhaust temperature, in K. • T_{target} is target torque, in N·m. • N is engine speed, in rpm. • $Temp_{Eng}$ is engine temperature, in K.

Dependencies

To enable this parameter, select **Input engine temperature**.

Efficiency**BSFC map, f_eff – 2D lookup table**

array

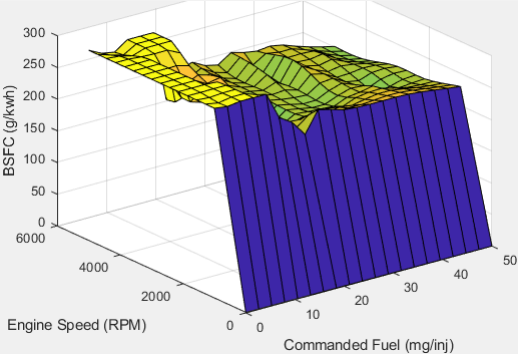Input Command Setting	Description
Fuel mass	<p>The brake-specific fuel consumption (BSFC) efficiency is a function of commanded fuel mass and engine speed, $BSFC = f(F, N)$, where:</p> <ul style="list-style-type: none"> • $BSFC$ is BSFC, in g/kWh. • F is commanded fuel mass, in mg per injection. • N is engine speed, in rpm. 
Torque	<p>The brake-specific fuel consumption (BSFC) efficiency is a function of target torque and engine speed, $BSFC = f(T_{target}, N)$, where:</p> <ul style="list-style-type: none"> • $BSFC$ is BSFC, in g/kWh. • T_{target} is target torque, in N·m. • N is engine speed, in rpm.

Dependencies

To enable this parameter, clear **Input engine temperature**.

Plot BSFC map — Plot table
button

Click to plot table.

Dependencies

To enable this parameter, clear **Input engine temperature**.

BSFC map, f_eff_3d — 3D lookup table

array


Input Command Setting	Description
Fuel mass	<p>The brake-specific fuel consumption (BSFC) efficiency is a function of commanded fuel mass and engine speed, $BSFC = f(F, N, Temp_{Eng})$, where:</p> <ul style="list-style-type: none"> • $BSFC$ is BSFC, in g/kWh. • F is commanded fuel mass, in mg per injection. • N is engine speed, in rpm. • $Temp_{Eng}$ is engine temperature, in K.
Torque	<p>The brake-specific fuel consumption (BSFC) efficiency is a function of target torque and engine speed, $BSFC = f(T_{target}, N, Temp_{Eng})$, where:</p> <ul style="list-style-type: none"> • $BSFC$ is BSFC, in g/kWh. • T_{target} is target torque, in N·m. • N is engine speed, in rpm. • $Temp_{Eng}$ is engine temperature, in K.

Dependencies

To enable this parameter, select **Input engine temperature**.

HC**E0 HC map, f_hc — 2D lookup table**

array

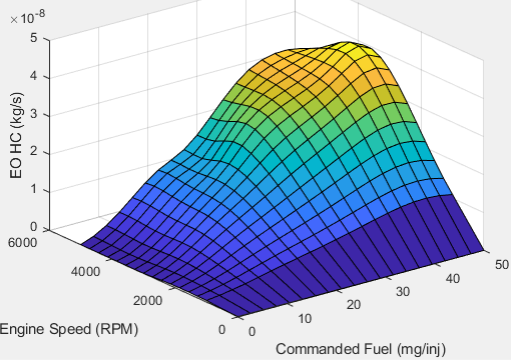Input Command Setting	Description
Fuel mass	<p>The engine-out hydrocarbon emissions are a function of commanded fuel mass and engine speed, $EO\ HC = f(F, N)$, where:</p> <ul style="list-style-type: none"> • $EO\ HC$ is engine-out hydrocarbon emissions, in kg/s. • F is commanded fuel mass, in mg per injection. • N is engine speed, in rpm. 
Torque	<p>The engine-out hydrocarbon emissions are a function of target torque and engine speed, $EO\ HC = f(T_{target}, N)$, where:</p> <ul style="list-style-type: none"> • $EO\ HC$ is engine-out hydrocarbon emissions, in kg/s. • T_{target} is target torque, in N·m. • N is engine speed, in rpm.

Dependencies

To enable this parameter, clear **Input engine temperature**.

Plot EO HC map — Plot table

button

Click to plot table.

Dependencies

To enable this parameter, clear **Input engine temperature**.

EO HC map, f_hc_3d – 3D lookup table

array


Input Command Setting	Description
Fuel mass	<p>The engine-out hydrocarbon emissions are a function of commanded fuel mass and engine speed, $EO\ HC = f(F, N, Temp_{Eng})$, where:</p> <ul style="list-style-type: none"> • $EO\ HC$ is engine-out hydrocarbon emissions, in kg/s. • F is commanded fuel mass, in mg per injection. • N is engine speed, in rpm. • $Temp_{Eng}$ is engine temperature, in K.
Torque	<p>The engine-out hydrocarbon emissions are a function of target torque and engine speed, $EO\ HC = f(T_{target}, N, Temp_{Eng})$, where:</p> <ul style="list-style-type: none"> • $EO\ HC$ is engine-out hydrocarbon emissions, in kg/s. • T_{target} is target torque, in N·m. • N is engine speed, in rpm. • $Temp_{Eng}$ is engine temperature, in K.

Dependencies

To enable this parameter, select **Input engine temperature**.

CO**EO CO map, f_co – 2D lookup table**

array

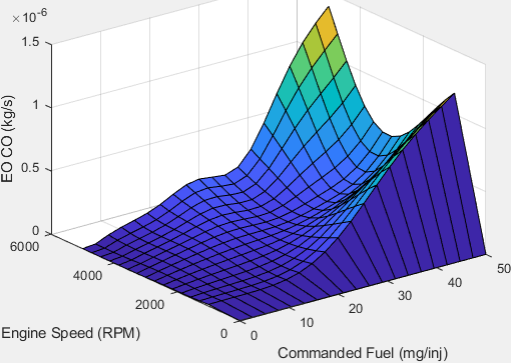Input Command Setting	Description
Fuel mass	<p>The engine-out carbon monoxide emissions are a function of commanded fuel mass and engine speed, $EO\ CO = f(F, N)$, where:</p> <ul style="list-style-type: none"> • $EO\ CO$ is engine-out carbon monoxide emissions, in kg/s. • F is commanded fuel mass, in mg per injection. • N is engine speed, in rpm. 
Torque	<p>The engine-out carbon monoxide emissions are a function of target torque and engine speed, $EO\ CO = f(T_{target}, N)$, where:</p> <ul style="list-style-type: none"> • $EO\ CO$ is engine-out carbon monoxide emissions, in kg/s. • T_{target} is target torque, in N·m. • N is engine speed, in rpm.

Dependencies

To enable this parameter, clear **Input engine temperature**.

Plot EO CO map — Plot table
button

Click to plot table.

Dependencies

To enable this parameter, clear **Input engine temperature**.

EO CO map, f_co_3d – 3D lookup table

array


Input Command Setting	Description
Fuel mass	<p>The engine-out carbon monoxide emissions are a function of commanded fuel mass and engine speed, $EO\ CO = f(F, N, Temp_{Eng})$, where:</p> <ul style="list-style-type: none"> • $EO\ CO$ is engine-out carbon monoxide emissions, in kg/s. • F is commanded fuel mass, in mg per injection. • N is engine speed, in rpm. • $Temp_{Eng}$ is engine temperature, in K.
Torque	<p>The engine-out carbon monoxide emissions are a function of target torque and engine speed, $EO\ CO = f(T_{target}, N, Temp_{Eng})$, where:</p> <ul style="list-style-type: none"> • $EO\ CO$ is engine-out carbon monoxide emissions, in kg/s. • T_{target} is target torque, in N·m. • N is engine speed, in rpm. • $Temp_{Eng}$ is engine temperature, in K.

Dependencies

To enable this parameter, select **Input engine temperature**.

NOx**EO NOx map, f_nox – 2D lookup table**

array

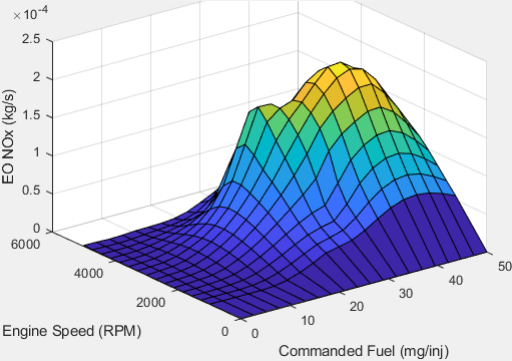Input Command Setting	Description
Fuel mass	<p>The engine-out nitric oxide and nitrogen dioxide emissions are a function of commanded fuel mass and engine speed, $EO\ NO_x = f(F, N)$, where:</p> <ul style="list-style-type: none"> • $EO\ NO_x$ is engine-out nitric oxide and nitrogen dioxide emissions, in kg/s. • F is commanded fuel mass, in mg per injection. • N is engine speed, in rpm. 
Torque	<p>The engine-out nitric oxide and nitrogen dioxide emissions are a function of target torque and engine speed, $EO\ NO_x = f(T_{target}, N)$, where:</p> <ul style="list-style-type: none"> • $EO\ NO_x$ is engine-out nitric oxide and nitrogen dioxide emissions, in kg/s. • T_{target} is target torque, in N·m. • N is engine speed, in rpm.

Dependencies

To enable this parameter, clear **Input engine temperature**.

Plot EO NOx map — Plot table
button

Click to plot table.

Dependencies

To enable this parameter, clear **Input engine temperature**.

EO NO_x map, f_nox_3d — 3D lookup table

array


Input Command Setting	Description
Fuel mass	<p>The engine-out nitric oxide and nitrogen dioxide emissions are a function of commanded fuel mass, engine speed, and engine temperature, $EO\ NO_x = f(F, N, Temp_{Eng})$, where:</p> <ul style="list-style-type: none"> • $EO\ NO_x$ is engine-out nitric oxide and nitrogen dioxide emissions, in kg/s. • F is commanded fuel mass, in mg per injection. • N is engine speed, in rpm. • $Temp_{Eng}$ is engine temperature, in K.
Torque	<p>The engine-out nitric oxide and nitrogen dioxide emissions are a function of target torque, engine speed, and engine temperature, $EO\ NO_x = f(T_{target}, N, Temp_{Eng})$, where:</p> <ul style="list-style-type: none"> • $EO\ NO_x$ is engine-out nitric oxide and nitrogen dioxide emissions, in kg/s. • T_{target} is target torque, in N·m. • N is engine speed, in rpm. • $Temp_{Eng}$ is engine temperature, in K.

Dependencies

To enable this parameter, select **Input engine temperature**.

CO₂**EO CO₂ map, f_co2 — 2D lookup table**

array

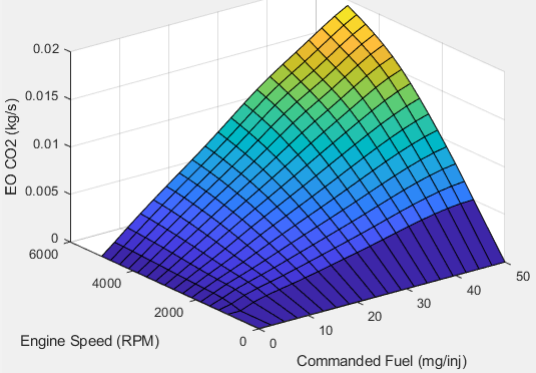Input Command Setting	Description
Fuel mass	<p>The engine-out carbon dioxide emissions are a function of commanded fuel mass and engine speed, $EO\ CO_2 = f(F, N)$, where:</p> <ul style="list-style-type: none"> • $EO\ CO_2$ is engine-out carbon dioxide emissions, in kg/s. • F is commanded fuel mass, in mg per injection. • N is engine speed, in rpm. 
Torque	<p>The engine-out carbon dioxide emissions are a function of target torque and engine speed, $EO\ CO_2 = f(T_{target}, N)$, where:</p> <ul style="list-style-type: none"> • $EO\ CO_2$ is engine-out carbon dioxide emissions, in kg/s. • T_{target} is target torque, in N·m. • N is engine speed, in rpm.

Dependencies

To enable this parameter, clear **Input engine temperature**.

Plot CO2 map — Plot table

button

Click to plot table.

Dependencies

To enable this parameter, clear **Input engine temperature**.

E0 CO2 map, f_co2_3d – 3D lookup table

array

Input Command Setting	Description
Fuel mass	<p>The engine-out carbon dioxide emissions are a function of commanded fuel mass, engine speed, and engine temperature, $EO\ CO_2 = f(F, N, Temp_{Eng})$, where:</p> <ul style="list-style-type: none"> • $EO\ CO_2$ is engine-out carbon dioxide emissions, in kg/s. • F is commanded fuel mass, in mg per injection. • N is engine speed, in rpm. • $Temp_{Eng}$ is engine temperature, in K.
Torque	<p>The engine-out carbon dioxide emissions are a function of target torque, engine speed, and engine temperature, $EO\ CO_2 = f(T_{target}, N, Temp_{Eng})$, where:</p> <ul style="list-style-type: none"> • $EO\ CO_2$ is engine-out carbon dioxide emissions, in kg/s. • T_{target} is target torque, in N·m. • N is engine speed, in rpm. • $Temp_{Eng}$ is engine temperature, in K.

Dependencies

To enable this parameter, select **Input engine temperature**.

PM**E0 PM map, f_pm – 2D lookup table**

array

Input Command Setting	Description
Fuel mass	<p>The engine-out PM emissions are a function of commanded fuel mass and engine speed, where:</p> <ul style="list-style-type: none"> • $EO\ PM$ is engine-out PM emissions, in kg/s. • F is commanded fuel mass, in mg per injection. • N is engine speed, in rpm.
Torque	<p>The engine-out PM emissions are a function of target torque and engine speed, $EO\ PM = f(T_{target}, N)$, where:</p> <ul style="list-style-type: none"> • $EO\ PM$ is engine-out PM emissions, in kg/s. • T_{target} is target torque, in N·m. • N is engine speed, in rpm.

Dependencies

To enable this parameter, clear **Input engine temperature**.

Plot EO PM map — Plot table

button

Click to plot table.

Dependencies

To enable this parameter, clear **Input engine temperature**.

EO PM map, f_pm_3d — 3D lookup table

array

Input Command Setting	Description
Fuel mass	<p>The engine-out PM emissions are a function of commanded fuel mass, engine speed, and engine temperature, where:</p> <ul style="list-style-type: none"> • $EO\ PM$ is engine-out PM emissions, in kg/s. • F is commanded fuel mass, in mg per injection. • N is engine speed, in rpm. • $Temp_{Eng}$ is engine temperature, in K.
Torque	<p>The engine-out PM emissions are a function of target torque, engine speed, and engine temperature, $EO\ PM = f(T_{target}, N, T)$, where:</p> <ul style="list-style-type: none"> • $EO\ PM$ is engine-out PM emissions, in kg/s. • T_{target} is target torque, in N·m. • N is engine speed, in rpm. • $Temp_{Eng}$ is engine temperature, in K.

Dependencies

To enable this parameter, select **Input engine temperature**.

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using Simulink® Coder™.

See Also

CI Core Engine | Mapped Motor | Mapped SI Engine

Topics

“Generate Mapped CI Engine from a Spreadsheet”


“Engine Calibration Maps”
“Model-Based Calibration Toolbox”

Introduced in R2017a

Mapped SI Engine

Spark-ignition engine model using lookup tables

Library: Powertrain Blockset / Propulsion / Combustion Engines
Vehicle Dynamics Blockset / Powertrain / Propulsion

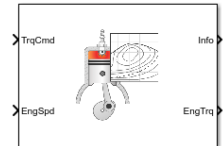

Description

The Mapped SI Engine block implements a mapped spark-ignition (SI) engine model using power, air mass flow, fuel flow, exhaust temperature, efficiency, and emission performance lookup tables. You can use the block for:

- Hardware-in-the-loop (HIL) engine control design
- Vehicle-level fuel economy and performance simulations

The block enables you to specify lookup tables for these engine characteristics. The lookup tables, developed with the Model-Based Calibration Toolbox, are functions of commanded torque, T_{cmd} , brake torque, T_{brake} , and engine speed, N . If you select **Input engine temperature**, the tables are also a function of engine temperature, $Temp_{Eng}$.

Table	Input Engine Temperature Parameter Setting	
	off	on
Power	$f(T_{cmd}, N)$	$f(T_{cmd}, N, Temp_{Eng})$
Air	$f(T_{brake}, N)$	$f(T_{brake}, N, Temp_{Eng})$
Fuel		
Temperature		
Efficiency		
HC		
CO		
NOx		

Table	Input Engine Temperature Parameter Setting	
	off	on
CO2		
PM		

To bound the Mapped SI Engine block output, the block does not extrapolate the lookup table data.

Virtual Calibration

If you have Model-Based Calibration Toolbox, click **Calibrate Maps** to virtually calibrate the 2D lookup tables using measured data. The dialog box steps through these tasks.

Task	Description				
Import firing data	<p data-bbox="474 300 1302 361">Import this firing data from a file. For more information, see “Using Data” (Model-Based Calibration Toolbox).</p> <table border="1" data-bbox="474 390 1332 854"> <thead> <tr> <th data-bbox="474 390 793 430">Required Data</th> <th data-bbox="793 390 1332 430">Optional Data</th> </tr> </thead> <tbody> <tr> <td data-bbox="474 430 793 854"> <ul style="list-style-type: none"> <li data-bbox="482 439 753 465">• Engine speed, rpm <li data-bbox="482 482 764 508">• Engine torque, N·m </td> <td data-bbox="793 430 1332 854"> <ul style="list-style-type: none"> <li data-bbox="801 439 1124 465">• Air mass flow rate, kg/s <li data-bbox="801 482 1268 543">• Brake specific fuel consumption, g/(kW·h) <li data-bbox="801 560 1142 586">• CO₂ mass flow rate, kg/s <li data-bbox="801 604 1127 630">• CO mass flow rate, kg/s <li data-bbox="801 647 1127 673">• Exhaust temperature, K <li data-bbox="801 690 1142 716">• Fuel mass flow rate, kg/s <li data-bbox="801 734 1127 760">• HC mass flow rate, kg/s <li data-bbox="801 777 1142 803">• NO_x mass flow rate, kg/s <li data-bbox="801 821 1313 847">• Particulate matter mass flow rate, kg/s </td> </tr> </tbody> </table> <p data-bbox="474 876 1332 1003">Collect firing data at steady-state operating conditions when injectors deliver the fuel. Data should cover the engine speed and torque operating range. Model-Based Calibration Toolbox uses the firing data boundary as the maximum torque.</p> <p data-bbox="474 1032 1268 1093">To filter or edit the data, select Edit in Application. The Model-Based Calibration Toolbox Data Editor opens.</p>	Required Data	Optional Data	<ul style="list-style-type: none"> <li data-bbox="482 439 753 465">• Engine speed, rpm <li data-bbox="482 482 764 508">• Engine torque, N·m 	<ul style="list-style-type: none"> <li data-bbox="801 439 1124 465">• Air mass flow rate, kg/s <li data-bbox="801 482 1268 543">• Brake specific fuel consumption, g/(kW·h) <li data-bbox="801 560 1142 586">• CO₂ mass flow rate, kg/s <li data-bbox="801 604 1127 630">• CO mass flow rate, kg/s <li data-bbox="801 647 1127 673">• Exhaust temperature, K <li data-bbox="801 690 1142 716">• Fuel mass flow rate, kg/s <li data-bbox="801 734 1127 760">• HC mass flow rate, kg/s <li data-bbox="801 777 1142 803">• NO_x mass flow rate, kg/s <li data-bbox="801 821 1313 847">• Particulate matter mass flow rate, kg/s
Required Data	Optional Data				
<ul style="list-style-type: none"> <li data-bbox="482 439 753 465">• Engine speed, rpm <li data-bbox="482 482 764 508">• Engine torque, N·m 	<ul style="list-style-type: none"> <li data-bbox="801 439 1124 465">• Air mass flow rate, kg/s <li data-bbox="801 482 1268 543">• Brake specific fuel consumption, g/(kW·h) <li data-bbox="801 560 1142 586">• CO₂ mass flow rate, kg/s <li data-bbox="801 604 1127 630">• CO mass flow rate, kg/s <li data-bbox="801 647 1127 673">• Exhaust temperature, K <li data-bbox="801 690 1142 716">• Fuel mass flow rate, kg/s <li data-bbox="801 734 1127 760">• HC mass flow rate, kg/s <li data-bbox="801 777 1142 803">• NO_x mass flow rate, kg/s <li data-bbox="801 821 1313 847">• Particulate matter mass flow rate, kg/s 				
Import non-firing data	<p data-bbox="474 1111 942 1137">Import this non-firing data from a file.</p> <ul style="list-style-type: none"> <li data-bbox="482 1163 749 1189">• Engine speed, rpm <li data-bbox="482 1206 756 1232">• Engine torque, N·m <p data-bbox="474 1258 1332 1354">Collect non-firing (motoring) data at steady-state operating conditions when fuel is cut off. All non-firing torque points must be less than zero. Non-firing data is a function of engine speed only.</p>				

Task	Description
Generate response models	For both firing and non-firing data, the Model-Based Calibration Toolbox uses test plans to fit data to Gaussian process models (GPMs). To assess or adjust the response model fit, select Edit in Application . The Model-Based Calibration Toolbox Model Browser opens. For more information, see “Model Assessment” (Model-Based Calibration Toolbox).
Generate calibration	Model-Based Calibration Toolbox calibrates the firing and non-firing response models and generates calibrated tables. To assess or adjust the calibration, select Edit in Application . The Model-Based Calibration Toolbox CAGE Browser opens. For more information, see “Calibration Tables” (Model-Based Calibration Toolbox).
Update block parameters	Update the block lookup table and breakpoint parameters with the calibration.

Cylinder Air Mass

The block calculates the normalized cylinder air mass using these equations.

$$M_{Nom} = \frac{P_{std}V_d}{N_{cyl}R_{air}T_{std}}$$

$$L = \frac{\left(\frac{60s}{min}\right)Cps \cdot \dot{m}_{air}}{\left(\frac{1000g}{kg}\right)N_{cyl} \cdot N \cdot M_{Nom}}$$

The equations use these variables.

L	Normalized cylinder air mass
M_{Nom}	Nominal engine cylinder air mass at standard temperature and pressure, piston at bottom dead center (BDC) maximum volume, in kg
Cps	Crankshaft revolutions per power stroke, rev/stroke
P_{std}	Standard pressure
T_{std}	Standard temperature

R_{air}	Ideal gas constant for air and burned gas mixture
V_d	Displaced volume
N_{cyl}	Number of engine cylinders
N	Engine speed
\dot{m}_{intk}	Engine air mass flow, in g/s

Turbocharger Lag

To model turbocharger lag, select **Include turbocharger lag effect**. During throttle control, the time constant models the manifold filling and emptying dynamics. When the torque request requires a turbocharger boost, the block uses a larger time constant to represent the turbocharger lag. The block uses these equations.

Dynamic torque	$\frac{dT_{brake}}{dt} = \frac{1}{\tau_{eng}}(T_{stdy} - T_{brake})$
Boost time constant	$\tau_{bst} = \begin{cases} \tau_{bst, rising} & \text{when } T_{stdy} > T_{brake} \\ \tau_{bst, falling} & \text{when } T_{stdy} \leq T_{brake} \end{cases}$
Final time constant	$\tau_{eng} = \begin{cases} \tau_{thr} & \text{when } T_{brake} < f_{bst}(N) \\ \tau_{bst} & \text{when } T_{brake} \geq f_{bst}(N) \end{cases}$

The equations use these variables.

T_{brake}	Brake torque
T_{stdy}	Steady-state target torque
τ_{bst}	Boost time constant
$\tau_{bst, rising},$ $\tau_{bst, falling}$	Boost rising and falling time constant, respectively
τ_{eng}	Final time constant
τ_{thr}	Time constant during throttle control
$f_{bst}(N)$	Boost torque speed line
N	Engine speed

Fuel Flow

To calculate the fuel economy for high-fidelity models, the block uses the volumetric fuel flow.

$$Q_{fuel} = \frac{\dot{m}_{fuel}}{\left(\frac{1000kg}{m^3}\right)Sg_{fuel}}$$

The equation uses these variables.

- \dot{m}_{fuel} Fuel mass flow
- Sg_{fuel} Specific gravity of fuel
- Q_{fuel} Volumetric fuel flow

Power Accounting

For the power accounting, the block implements these equations.

Bus Signal		Description	Equations
PwrIn fo	PwrTrnsfrd — Power transferred between blocks <ul style="list-style-type: none"> • Positive signals indicate flow into block • Negative signals indicate flow out of block 	PwrCrkshft	Crankshaft power $-\tau_{eng}\omega$
	PwrNotTrnsfrd — Power crossing the block boundary, but not transferred <ul style="list-style-type: none"> • Positive signals indicate an input • Negative signals indicate a loss 	PwrFuel	Fuel input power $\dot{m}_{fuel}LHV$
		PwrLoss	Power loss $\tau_{eng}\omega - \dot{m}_{fuel}LHV$
PwrStored — Stored energy rate of change <ul style="list-style-type: none"> • Positive signals indicate an increase • Negative signals indicate a decrease 		<i>Not used</i>	

The equations use these variables.

LHV	Fuel lower heating value
ω	Engine speed, rad/s
\dot{m}_{fuel}	Fuel mass flow
τ_{eng}	Fuel mass per injection time constant

Ports

Input

TrqCmd — Commanded torque

scalar

Torque, T_{cmd} , in N·m.

EngSpd — Engine speed

scalar

Engine speed, N , in rpm.

EngTemp — Engine temperature

scalar

Engine temperature, $Temp_{Eng}$, in K.

Dependencies

To create this port, select **Input engine temperature**.

Output

Info — Bus signal

bus

Bus signal containing these block calculations.

Signal		Description	Units	
IntkGassMassFlw		Engine air mass flow output	kg/s	
NrmlzdAirChrg		Normalized engine cylinder air mass	N/A	
Afr		Air-fuel ratio (AFR)	N/A	
FuelMassFlw		Engine fuel flow output	kg/s	
FuelVolFlw		Volumetric fuel flow	m ³ /s	
ExhManGasTemp		Engine exhaust gas temperature	K	
EngTrq		Engine torque output	N·m	
EngSpd		Engine speed	rpm	
CrkAng		Engine crankshaft absolute angle $\int_0^{(360)Cps} EngSpd \frac{180}{30} d\theta$ where <i>Cps</i> is crankshaft revolutions per power stroke.	degrees crank angle	
Bsfc		Engine brake-specific fuel consumption (BSFC)	g/kWh	
EoHC		Engine out hydrocarbon emission mass flow	kg/s	
EoCO		Engine out carbon monoxide emission mass flow rate	kg/s	
EoNOx		Engine out nitric oxide and nitrogen dioxide emissions mass flow	kg/s	
EoCO2		Engine out carbon dioxide emission mass flow	kg/s	
EoPM		Engine out particulate matter emission mass flow	kg/s	
PwrInf o	PwrTrnsfrd	PwrCrkshft	Crankshaft power	W
	PwrNotTrnsfrd	PwrFuel	Fuel input power	W
		PwrLoss	Power loss	W

Signal	Description	Units
PwrStored	Not used	

EngTrq – Engine brake torque

scalar

Engine brake torque, T_{brake} , in N·m.

Parameters

Block Options

Include turbocharger lag effect – Increase time constant

off (default)

To model turbocharger lag, select **Include turbocharger lag effect**. During throttle control, the time constant models the manifold filling and emptying dynamics. When the torque request requires a turbocharger boost, the block uses a larger time constant to represent the turbocharger lag. The block uses these equations.

Dynamic torque	$\frac{dT_{brake}}{dt} = \frac{1}{\tau_{eng}}(T_{stdy} - T_{brake})$
Boost time constant	$\tau_{bst} = \begin{cases} \tau_{bst, rising} & \text{when } T_{stdy} > T_{brake} \\ \tau_{bst, falling} & \text{when } T_{stdy} \leq T_{brake} \end{cases}$
Final time constant	$\tau_{eng} = \begin{cases} \tau_{thr} & \text{when } T_{brake} < f_{bst}(N) \\ \tau_{bst} & \text{when } T_{brake} \geq f_{bst}(N) \end{cases}$

The equations use these variables.

T_{brake}	Brake torque
T_{stdy}	Steady-state target torque
τ_{bst}	Boost time constant
$\tau_{bst, rising}$, $\tau_{bst, falling}$	Boost rising and falling time constant, respectively
τ_{eng}	Final time constant

τ_{thr}	Time constant during throttle control
$f_{bst}(N)$	Boost torque speed line
N	Engine speed

Dependencies

Selecting **Include turbocharger lag effect** enables these parameters:

- **Boost torque line, f_tbrake_bst**
- **Time constant below boost line, tau_thr**
- **Rising torque boost time constant, tau_bst_rising**
- **Falling torque boost time constant, tau_bst_falling**

Input engine temperature — Create input port

off (default) | on

Select this to create the EngTemp input port.

The block enables you to specify lookup tables for these engine characteristics. The lookup tables, developed with the Model-Based Calibration Toolbox, are functions of commanded torque, T_{cmd} , brake torque, T_{brake} , and engine speed, N . If you select **Input engine temperature**, the tables are also a function of engine temperature, $Temp_{Eng}$.

Table	Input Engine Temperature Parameter Setting	
	off	on
Power	$f(T_{cmd}, N)$	$f(T_{cmd}, N, Temp_{Eng})$
Air	$f(T_{brake}, N)$	$f(T_{brake}, N, Temp_{Eng})$
Fuel		
Temperature		
Efficiency		
HC		
CO		
NOx		
CO2		
PM		

Configuration

Calibrate Maps — Calibrate tables with measured data selection

If you have Model-Based Calibration Toolbox, click **Calibrate Maps** to virtually calibrate the 2D lookup tables using measured data. The dialog box steps through these tasks.

Task	Description	
Import firing data	Import this firing data from a file. For more information, see “Using Data” (Model-Based Calibration Toolbox).	
	Required Data	Optional Data
	<ul style="list-style-type: none"> • Engine speed, rpm • Engine torque, N·m 	<ul style="list-style-type: none"> • Air mass flow rate, kg/s • Brake specific fuel consumption, g/(kW·h) • CO₂ mass flow rate, kg/s • CO mass flow rate, kg/s • Exhaust temperature, K • Fuel mass flow rate, kg/s • HC mass flow rate, kg/s • NO_x mass flow rate, kg/s • Particulate matter mass flow rate, kg/s
<p>Collect firing data at steady-state operating conditions when injectors deliver the fuel. Data should cover the engine speed and torque operating range. Model-Based Calibration Toolbox uses the firing data boundary as the maximum torque.</p> <p>To filter or edit the data, select Edit in Application. The Model-Based Calibration Toolbox Data Editor opens.</p>		

Task	Description
Import non-firing data	<p>Import this non-firing data from a file.</p> <ul style="list-style-type: none"> • Engine speed, rpm • Engine torque, N·m <p>Collect non-firing (motoring) data at steady-state operating conditions when fuel is cut off. All non-firing torque points must be less than zero. Non-firing data is a function of engine speed only.</p>
Generate response models	<p>For both firing and non-firing data, the Model-Based Calibration Toolbox uses test plans to fit data to Gaussian process models (GPMs).</p> <p>To assess or adjust the response model fit, select Edit in Application. The Model-Based Calibration Toolbox Model Browser opens. For more information, see “Model Assessment” (Model-Based Calibration Toolbox).</p>
Generate calibration	<p>Model-Based Calibration Toolbox calibrates the firing and non-firing response models and generates calibrated tables.</p> <p>To assess or adjust the calibration, select Edit in Application. The Model-Based Calibration Toolbox CAGE Browser opens. For more information, see “Calibration Tables” (Model-Based Calibration Toolbox).</p>
Update block parameters	<p>Update the block lookup table and breakpoint parameters with the calibration.</p>

Dependencies

To enable this parameter, clear **Input engine temperature**.

Breakpoints for commanded torque, f_tbrake_t_bpt — Breakpoints
vector

Breakpoints, in N·m.

Breakpoints for engine speed input, f_tbrake_n_bpt — Breakpoints
vector

Breakpoints, in rpm.

Breakpoints for temperature input, f_tbrake_engtmp_bpt — Breakpoints
vector

Breakpoints, in K.

Dependencies

To enable this parameter, select **Input engine temperature**.

Number of cylinders, NCyl — Number
scalar

Number of cylinders.

Crank revolutions per power stroke, Cps — Crank revolutions
scalar

Crank revolutions per power stroke.

Total displaced volume, Vd — Volume
scalar

Volume displaced by engine, in m^3 .

Fuel lower heating value, Lhv — Heating value
scalar

Fuel lower heating value, LHV , in J/kg.

Fuel specific gravity, Sg — Specific gravity
scalar

Specific gravity of fuel, Sg_{fuel} , dimensionless.

Ideal gas constant air, Rair — Constant
scalar

Ideal gas constant of air and residual gas entering the engine intake port, in J/(kg*K).

Air standard pressure, Pstd — Pressure
scalar

Standard air pressure, in Pa.

Air standard temperature, Tstd — Temperature

scalar

Standard air temperature, in K.

Boost torque line, f_tbrake_bst — Boost lag

vector

Boost torque line, $f_{bst}(N)$, in N·m.

Dependencies

To enable this parameter, select **Include turbocharger lag effect**.

Time constant below boost line — Time constant below

scalar

Time constant below boost line, τ_{thr} , in s.

Dependencies

To enable this parameter, select **Include turbocharger lag effect**.

Rising torque boost time constant, tau_bst_rising — Rising time constant

scalar

Rising torque boost time constant, $\tau_{bst,rising}$, in s.

Dependencies

To enable this parameter, select **Include turbocharger lag effect**.

Falling torque boost time constant, tau_bst_falling — Falling time constant

scalar

Falling torque boost time constant, $\tau_{bst,falling}$, in s.

Dependencies

To enable this parameter, select **Include turbocharger lag effect**.


Power

Brake torque map, `f_tbrake` – 2D lookup table

array

The engine torque lookup table is a function of commanded engine torque and engine speed, $T = f(T_{cmd}, N)$, where:

- T is engine torque, in N·m.
- T_{cmd} is commanded engine torque, in N·m.
- N is engine speed, in rpm.

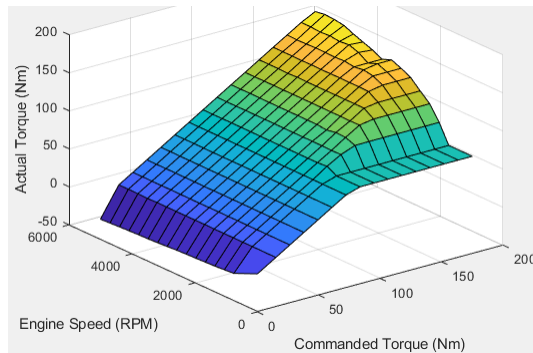

Plot brake torque map – Plot table

button

Click to plot table.

Dependencies

To enable this parameter, clear **Input engine temperature**.

Brake torque map, `f_tbrake_3d` – 3D lookup table

array

The engine torque lookup table is a function of commanded engine torque, engine speed, and engine temperature, $T = f(T_{cmd}, N, Temp_{Eng})$, where:

- T is engine torque, in N·m.
- T_{cmd} is commanded engine torque, in N·m.

- N is engine speed, in rpm.
- $Temp_{Eng}$ is engine temperature, in K.

Dependencies

To enable this parameter, select **Input engine temperature**.


Air

Air mass flow map, f_air — 2D lookup table

array

The engine air mass flow lookup table is a function of commanded engine torque and engine speed, $\dot{m}_{intk} = f(T_{cmd}, N)$, where:

- \dot{m}_{intk} is engine air mass flow, in kg/s.
- T_{cmd} is commanded engine torque, in N·m.
- N is engine speed, in rpm.

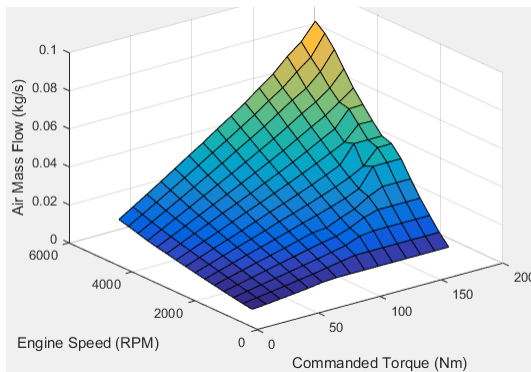

Dependencies

To enable this parameter, clear **Input engine temperature**.

Plot air mass map — Plot table

button

Click to plot table.

Dependencies

To enable this parameter, clear **Input engine temperature**.

Air mass flow map, f_air_3d – 3D lookup table

array

The engine air mass flow lookup table is a function of commanded engine torque, engine speed, and engine temperature, $\dot{m}_{intk} = f(T_{cmd}, N, Temp_{Eng})$, where:

- \dot{m}_{intk} is engine air mass flow, in kg/s.
- T_{cmd} is commanded engine torque, in N·m.
- N is engine speed, in rpm.
- $Temp_{Eng}$ is engine temperature, in K.

Dependencies


To enable this parameter, select **Input engine temperature**.

Fuel**Fuel flow map, f_fuel – 2D lookup table**

array

The engine fuel mass flow lookup table is a function of commanded engine torque and engine speed, $MassFlow = f(T_{cmd}, N)$, where:

- $MassFlow$ is engine fuel mass flow, in kg/s.
- T_{cmd} is commanded engine torque, in N·m.
- N is engine speed, in rpm.

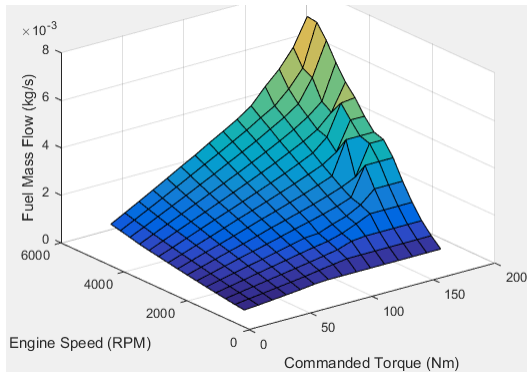

Dependencies

To enable this parameter, clear **Input engine temperature**.

Plot fuel flow map — Plot table

button

Click to plot table.

Dependencies

To enable this parameter, clear **Input engine temperature**.

Fuel flow map, `f_fuel_3d` — 3D lookup table

array

The engine fuel mass flow lookup table is a function of commanded engine torque, engine speed, and engine temperature, $MassFlow = f(T_{cmd}, N, Temp_{Eng})$, where:

- $MassFlow$ is engine fuel mass flow, in kg/s.
- T_{cmd} is commanded engine torque, in N·m.
- N is engine speed, in rpm.
- $Temp_{Eng}$ is engine temperature, in K.

Dependencies


To enable this parameter, select **Input engine temperature**.

Temperature

Exhaust temperature map, f_texh – 2D lookup table array

The engine exhaust temperature lookup table is a function of commanded engine torque and engine speed, $T_{exh} = f(T_{cmd}, N)$, where:

- T_{exh} is exhaust temperature, in K.
- T_{cmd} is commanded engine torque, in N·m.
- N is engine speed, in rpm.

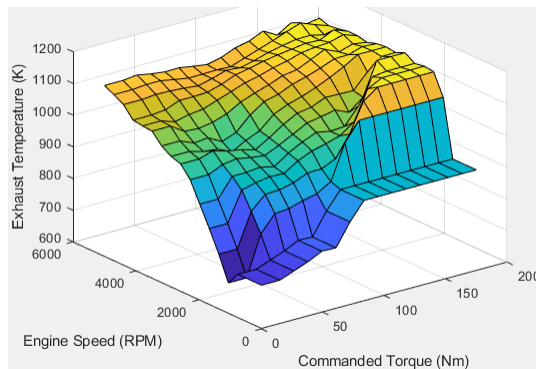

Dependencies

To enable this parameter, clear **Input engine temperature**.

Plot exhaust temperature map – Plot table button

Click to plot table.

Dependencies

To enable this parameter, clear **Input engine temperature**.

Exhaust temperature map, f_texh_3d – 3D lookup table array

The engine exhaust temperature lookup table is a function of commanded engine torque, engine speed, and engine temperature, $T_{exh} = f(T_{cmd}, N, Temp_{Eng})$, where:

- T_{exh} is exhaust temperature, in K.
- T_{cmd} is commanded engine torque, in N·m.
- N is engine speed, in rpm.
- $Temp_{Eng}$ is engine temperature, in K.

Dependencies

To enable this parameter, select **Input engine temperature**.


Efficiency

BSFC map, f_{eff} — 2D lookup table

array

The brake-specific fuel consumption (BSFC) efficiency is a function of commanded engine torque and engine speed, $BSFC = f(T_{cmd}, N)$, where:

- $BSFC$ is BSFC, in g/kWh.
- T_{cmd} is commanded engine torque, in N·m.
- N is engine speed, in rpm.

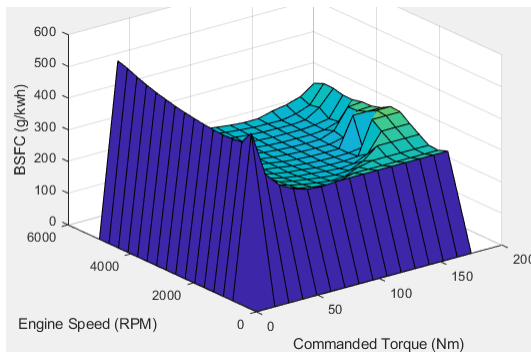

Dependencies

To enable this parameter, clear **Input engine temperature**.

Plot BSFC map — Plot table

button

Click to plot table.

Dependencies

To enable this parameter, clear **Input engine temperature**.

BSFC map, f_eff_3d – 3D lookup table

array

The brake-specific fuel consumption (BSFC) efficiency is a function of commanded engine torque, engine speed, and engine temperature, $BSFC = f(T_{cmd}, N, Temp_{Eng})$, where:

- $BSFC$ is BSFC, in g/kWh.
- T_{cmd} is commanded engine torque, in N·m.
- N is engine speed, in rpm.
- $Temp_{Eng}$ is engine temperature, in K.

Dependencies

To enable this parameter, select **Input engine temperature**.


HC

EO HC map, f_hc – 2D lookup table

array

The engine-out hydrocarbon emissions are a function of commanded engine torque and engine speed, $EO\ HC = f(T_{cmd}, N)$, where:

- $EO\ HC$ is engine-out hydrocarbon emissions, in kg/s.
- T_{cmd} is commanded engine torque, in N·m.
- N is engine speed, in rpm.

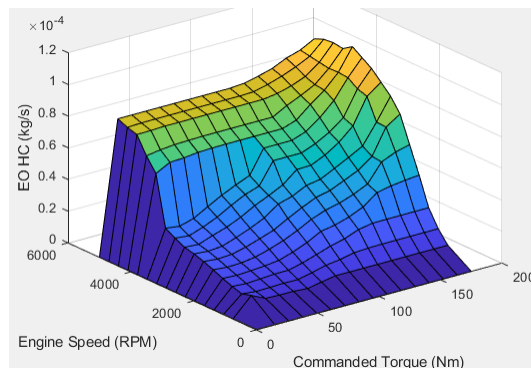

Dependencies

To enable this parameter, clear **Input engine temperature**.

Plot EO HC map — Plot table

button

Click to plot table.

Dependencies

To enable this parameter, clear **Input engine temperature**.

EO HC map, f_hc_3d — 3D lookup table

array

The engine-out hydrocarbon emissions are a function of commanded engine torque, engine speed, and engine temperature, $EO\ HC = f(T_{cmd}, N, Temp_{Eng})$, where:

- $EO\ HC$ is engine-out hydrocarbon emissions, in kg/s.
- T_{cmd} is commanded engine torque, in N·m.
- N is engine speed, in rpm.
- $Temp_{Eng}$ is engine temperature, in K.

Dependencies

To enable this parameter, select **Input engine temperature**.


CO

EO CO map, f_co — 2D lookup table

array

The engine-out carbon monoxide emissions are a function of commanded engine torque and engine speed, $EO\ CO = f(T_{cmd}, N)$, where:

- $EO\ CO$ is engine-out carbon monoxide emissions, in kg/s.
- T_{cmd} is commanded engine torque, in N·m.
- N is engine speed, in rpm.

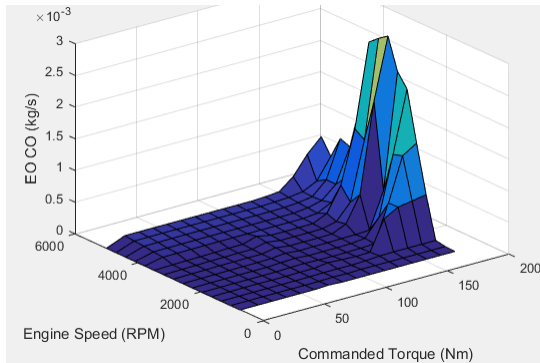

Dependencies

To enable this parameter, clear **Input engine temperature**.

Plot EO CO map — Plot table

button

Click to plot table.

Dependencies

To enable this parameter, clear **Input engine temperature**.

EO HC map, f_hc_3d — 3D lookup table

array

The engine-out hydrocarbon emissions are a function of commanded engine torque, engine speed, and engine temperature, $EO\ HC = f(T_{cmd}, N, Temp_{Eng})$, where:

- $EO\ HC$ is engine-out hydrocarbon emissions, in kg/s.
- T_{cmd} is commanded engine torque, in N·m.
- N is engine speed, in rpm.
- $Temp_{Eng}$ is engine temperature, in K.

Dependencies

To enable this parameter, select **Input engine temperature**.


NOx

E0 NOx map, f_nox — 2D lookup table

array

The engine-out nitric oxide and nitrogen dioxide emissions are a function of commanded engine torque and engine speed, $EO\ NO_x = f(T_{cmd}, N)$, where:

- $EO\ NO_x$ is engine-out nitric oxide and nitrogen dioxide emissions, in kg/s.
- T_{cmd} is commanded engine torque, in N·m.
- N is engine speed, in rpm.

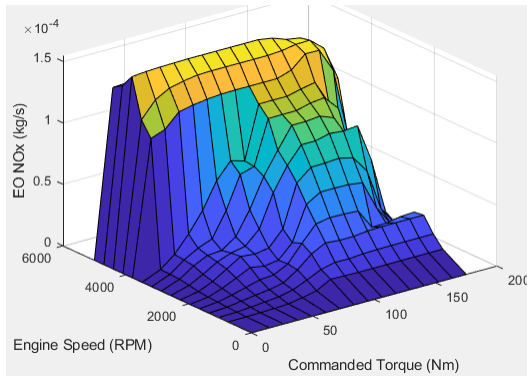

Dependencies

To enable this parameter, clear **Input engine temperature**.

Plot E0 NOx map — Plot table

button

Click to plot table.

Dependencies

To enable this parameter, clear **Input engine temperature**.

E0 NOx map, f_nox_3d — 3D lookup table

array

The engine-out nitric oxide and nitrogen dioxide emissions are a function of commanded engine torque, engine speed, and engine temperature, $EO\ NO_x = f(T_{cmd}, N, Temp_{Eng})$, where:

- $EO\ NO_x$ is engine-out nitric oxide and nitrogen dioxide emissions, in kg/s.
- T_{cmd} is commanded engine torque, in N·m.
- N is engine speed, in rpm.
- $Temp_{Eng}$ is engine temperature, in K.

Dependencies

To enable this parameter, select **Input engine temperature**.


CO2

E0 CO2 map, f_co2 – 2D lookup table

array

The engine-out carbon dioxide emissions are a function of commanded engine torque and engine speed, $EO\ CO_2 = f(T_{cmd}, N)$, where:

- $EO\ CO_2$ is engine-out carbon dioxide emissions, in kg/s.
- T_{cmd} is commanded engine torque, in N·m.
- N is engine speed, in rpm.

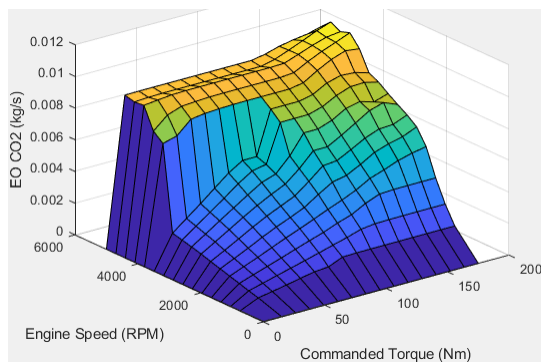

Dependencies

To enable this parameter, clear **Input engine temperature**.

Plot CO2 map — Plot table

button

Click to plot table.

Dependencies

To enable this parameter, clear **Input engine temperature**.

E0 CO2 map, f_co2_3d — 3D lookup table

array

The engine-out carbon dioxide emissions are a function of commanded engine torque, engine speed, and engine temperature, $EO\ CO2 = f(T_{cmd}, N, Temp_{Eng})$, where:

- $EO\ CO2$ is engine-out carbon dioxide emissions, in kg/s.
- T_{cmd} is commanded engine torque, in N·m.
- N is engine speed, in rpm.
- $Temp_{Eng}$ is engine temperature, in K.

Dependencies

To enable this parameter, select **Input engine temperature**.

PM

E0 PM map, f_pm — 2D lookup table

array

The engine-out particulate matter emissions are a function of commanded engine torque and engine speed, where:

- $EO\ PM$ is engine-out PM emissions, in kg/s.
- T_{cmd} is commanded engine torque, in N·m.
- N is engine speed, in rpm.

Dependencies

To enable this parameter, clear **Input engine temperature**.

Plot E0 PM map — Plot table

button

Click to plot table.

Dependencies

To enable this parameter, clear **Input engine temperature**.

EO PM map, `f_pm_3d` — 3D lookup table

array

The engine-out particulate matter emissions are a function of commanded engine torque, engine speed, and engine temperature, where:

- $EO\ PM$ is engine-out PM emissions, in kg/s.
- T_{cmd} is commanded engine torque, in N·m.
- N is engine speed, in rpm.
- $Temp_{Eng}$ is engine temperature, in K.

Dependencies

To enable this parameter, select **Input engine temperature**.

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using Simulink® Coder™.

See Also

Mapped CI Engine | Mapped Motor | SI Core Engine

Topics

“Generate Mapped SI Engine from a Spreadsheet”

“Engine Calibration Maps”

“Model-Based Calibration Toolbox”


Introduced in R2017a

Electric Motor, Converters, Inverter Blocks — Alphabetical List

Interior PMSM

Three-phase interior permanent magnet synchronous motor with sinusoidal back electromotive force

Library: Powertrain Blockset / Propulsion / Electric Motors

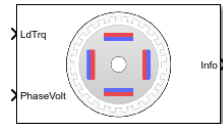

Description

The Interior PMSM block implements a three-phase interior permanent magnet synchronous motor (PMSM) with sinusoidal back electromotive force. The block uses the three-phase input voltages to regulate the individual phase currents, allowing control of the motor torque or speed.


By default, the block sets the **Simulation type** parameter to **Continuous** to use a continuous sample time during simulation. If you want to generate code for fixed-step double- and single-precision targets, considering setting the parameter to **Discrete**. Then specify a **Sample Time, Ts** parameter.

On the **Parameters** tab, if you select **Back - emf**, the block implements this equation to calculate the permanent flux linkage constant.

$$\lambda_{pm} = \frac{1}{\sqrt{3}} \cdot \frac{K_e}{1000P} \cdot \frac{60}{2\pi}$$

Motor Construction

This figure shows the motor construction with a single pole pair on the motor.

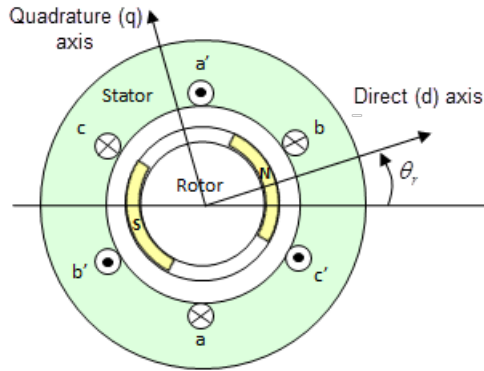

The motor magnetic field due to the permanent magnets creates a sinusoidal rate of change of flux with motor angle.

For the axes convention, the a -phase and permanent magnet fluxes are aligned when motor angle θ_r is zero.

Three-Phase Sinusoidal Model Electrical System

The block implements these equations, expressed in the motor flux reference frame (dq frame). All quantities in the motor reference frame are referred to the stator.

$$\omega_e = P\omega_m$$

$$\frac{d}{dt}i_d = \frac{1}{L_d}v_d - \frac{R}{L_d}i_d + \frac{L_q}{L_d}P\omega_m i_q$$

$$\frac{d}{dt}i_q = \frac{1}{L_q}v_q - \frac{R}{L_q}i_q - \frac{L_d}{L_q}P\omega_m i_d - \frac{\lambda_{pm}P\omega_m}{L_q}$$

$$T_e = 1.5P[\lambda_{pm}i_q + (L_d - L_q)i_d i_q]$$

The L_q and L_d inductances represent the relation between the phase inductance and the motor position due to the saliency of the motor.

The equations use these variables.

L_q, L_d q- and d-axis inductances

R	Resistance of the stator windings
i_q, i_d	q- and d-axis currents
v_q, v_d	q- and d-axis voltages
ω_m	Angular mechanical velocity of the motor
ω_e	Angular electrical velocity of the motor
λ_{pm}	Permanent flux linkage constant
K_e	Back electromotive force (EMF)
P	Number of pole pairs
T_e	Electromagnetic torque
Θ_e	Electrical angle

Mechanical System

The motor angular velocity is given by:

$$\frac{d}{dt}\omega_m = \frac{1}{J}(T_e - T_f - F\omega_m - T_m)$$
$$\frac{d\theta_m}{dt} = \omega_m$$

The equations use these variables.

J	Combined inertia of motor and load
F	Combined viscous friction of motor and load
θ_m	Motor mechanical angular position
T_m	Motor shaft torque
T_e	Electromagnetic torque
T_f	Motor shaft static friction torque
ω_m	Angular mechanical velocity of the motor

Power Accounting

For the power accounting, the block implements these equations.

Bus Signal			Description	Variable	Equations
PwrInfo	PwrTrnsfrd — Power transferred between blocks	PwrMtr	Mechanical power	P_{mot}	$P_{mot} = -\omega_m T_e$
	<ul style="list-style-type: none"> Positive signals indicate flow into block Negative signals indicate flow out of block 	PwrBus	Electrical power	P_{bus}	$P_{bus} = v_{an}i_a + v_{bn}i_b + v_{cn}i_c$
	PwrNotTrnsfrd — Power crossing the block boundary, but not transferred	PwrElecLoss	Resistive power loss	P_{elec}	$P_{elec} = -\frac{3}{2}(R_s i_{sd}^2 + R_s i_{sq}^2)$
	<ul style="list-style-type: none"> Positive signals indicate an input Negative signals indicate a loss 	PwrMechLoss	Mechanical power loss	P_{mech}	<p>When Port Configuration is set to Torque:</p> $P_{mech} = -(\omega_m^2 F + \omega_m T_f)$ <p>When Port Configuration is set to Speed:</p> $P_{mech} = 0$
PwrStored — Stored energy rate of change	PwrMtrStored	Stored motor power	P_{str}	$P_{str} = P_{bus} + P_{mot} + P_{elec} + P_{mech}$	
<ul style="list-style-type: none"> Positive signals indicate an increase Negative signals indicate a decrease 					

The equations use these variables.

R_s	Stator resistance
i_a, i_b, i_c	Stator phase a, b, and c current
i_{sq}, i_{sd}	Stator q- and d-axis currents

v_{an}, v_{bn}, v_{cn}	Stator phase a, b, and c voltage
ω_m	Angular mechanical velocity of the rotor
F	Combined motor and load viscous damping
T_e	Electromagnetic torque
T_f	Combined motor and load friction torque

Ports

Input

LdTrq — Motor shaft torque

scalar

Motor shaft input torque, T_m , in N·m.

Dependencies

To create this port, select Torque for the **Port Configuration** parameter.

Spd — Motor shaft speed

scalar

Angular velocity of the motor, ω_m , in rad/s.

Dependencies

To create this port, select Speed for the **Port Configuration** parameter.

PhaseVolt — Stator terminal voltages

1-by-3 array

Stator terminal voltages, V_a , V_b , and V_c , in V.

Dependencies

To create this port, select Speed or Torque for the **Port Configuration** parameter.

Output

Info — Bus signal

bus

The bus signal contains these block calculations.

Signal			Description	Variable	Units
IaStator			Stator phase current A	i_a	A
IbStator			Stator phase current B	i_b	A
IcStator			Stator phase current C	i_c	A
IdSync			Direct axis current	i_d	A
IqSync			Quadrature axis current	i_q	A
VdSync			Direct axis voltage	v_d	V
VqSync			Quadrature axis voltage	v_q	V
MtrSpd			Angular mechanical velocity of the motor	ω_m	rad/s
MtrPos			Motor mechanical angular position	θ_m	rad
MtrTrq			Electromagnetic torque	T_e	N·m
PwrInfo	PwrTrnsfrd	PwrMtr	Mechanical power	P_{mot}	W
		PwrBus	Electrical power	P_{bus}	W
	PwrNotTrnsfrd	PwrElecLoss	Resistive power loss	P_{elec}	W
		PwrMechLoss	Mechanical power loss	P_{mech}	W
	PwrStored	PwrMtrStored	Stored motor power	P_{str}	W

PhaseCurr — Phase a, b, c current

1-by-3 array

Phase a, b, c current, i_a , i_b , and i_c , in A.

MtrTrq — Motor torque

scalar

Motor torque, T_{mtr} , in N·m.

Dependencies

To create this port, select Speed for the **Mechanical input configuration** parameter.

MtrSpd — Motor speed

scalar

Angular speed of the motor, ω_{mtr} , in rad/s.

Dependencies

To create this port, select Torque for the **Mechanical input configuration** parameter.

Parameters

Block Options

Mechanical input configuration — Select port configuration

Torque (default) | Speed

This table summarizes the port configurations.

Port Configuration	Creates Input Port	Creates Output Port
Torque	LdTrq	MtrSpd
Speed	Spd	MtrTrq

Simulation type — Select simulation type

Continuous (default) | Discrete

By default, the block uses a continuous sample time during simulation. If you want to generate code for single-precision targets, considering setting the parameter to Discrete.

Dependencies

Setting **Simulation type** to Discrete creates the **Sample Time, Ts** parameter.

Sample Time (Ts) – Sample time for discrete integration

scalar

Integration sample time for discrete simulation, in s.

Dependencies

Setting **Simulation type** to Discrete creates the **Sample Time, Ts** parameter.

Parameters**Number of pole pairs (P) – Pole pairs**

scalar

Motor pole pairs, P .

Stator phase resistance per phase (Rs) – Resistance

scalar

Stator phase resistance per phase, R_s , in ohm.

Stator d-axis and q-axis inductance (Ldq) – Inductance

vector

Stator d-axis and q-axis inductance, L_d , L_q , in H.

Permanent flux linkage constant (lambda_pm) – Flux

scalar

Permanent flux linkage constant, λ_{pm} , in Wb.

Back-emf constant (Ke) – Back electromotive force

scalar

Back electromotive force, EMF, K_e , in Vpk_LL/krpm. Vpk_LL is the peak voltage line-to-line measurement.

To calculate the permanent flux linkage constant, the block implements this equation.

$$\lambda_{pm} = \frac{1}{\sqrt{3}} \cdot \frac{K_e}{1000P} \cdot \frac{60}{2\pi}$$

Physical inertia, viscous damping, and static friction (mechanical) — Inertia, damping, friction

vector

Mechanical properties of the motor:

- Inertia, J , in kgm^2
- Viscous damping, F , in $\text{N}\cdot\text{m}/(\text{rad}/\text{s})$
- Static friction, T_f , in $\text{N}\cdot\text{m}$

Dependencies

To enable this parameter, select the Torque configuration parameter.

Initial Values

Initial d-axis and q-axis current (idq0) — Current

vector

Initial q- and d-axis currents, i_q , i_d , in A.

Initial mechanical position (theta_init) — Angle

scalar

Initial motor angular position, θ_{m0} , in rad.

Initial mechanical speed (omega_init) — Speed

scalar

Initial angular velocity of the motor, ω_{m0} , in rad/s.

Dependencies

To enable this parameter, select the Torque configuration parameter.

References

- [1] Kundur, P. *Power System Stability and Control*. New York, NY: McGraw Hill, 1993.
- [2] Anderson, P. M. *Analysis of Faulted Power Systems*. Hoboken, NJ: Wiley-IEEE Press, 1995.

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using Simulink® Coder™.

See Also


Flux-Based PMSM | Induction Motor | Interior PM Controller | Mapped Motor | Surface Mount PMSM

Introduced in R2017a

Interior PM Controller

Torque-based, field-oriented controller for an internal permanent magnet synchronous motor

Library: Powertrain Blockset / Propulsion / Electric Motor Controllers

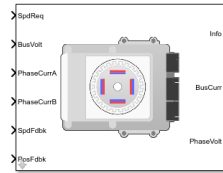


Description

The Interior PM Controller block implements a torque-based, field-oriented controller for an internal permanent magnet synchronous motor (PMSM) with an optional outer-loop speed controller. The internal torque control implements strategies for achieving maximum torque per ampere (MTPA) and weakening the magnetic flux. You can specify either the speed or torque control type.

The Interior PM Controller implements equations for speed control, torque determination, regulators, transforms, and motors.

The figure illustrates the information flow in the block.

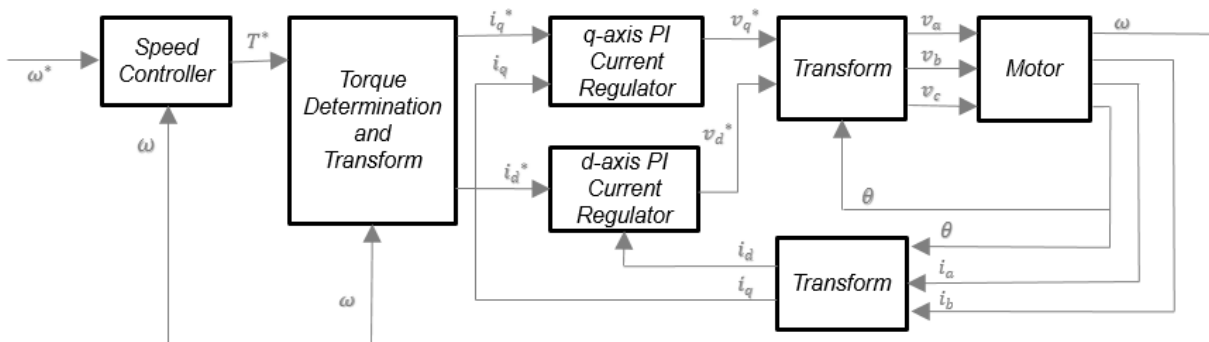


The block implements equations that use these variables.

ω	Rotor speed
ω^*	Rotor speed command
T^*	Torque command
i_d	d-axis current
i_d^*	d-axis current command
i_q	q-axis current
i_q^*	q-axis current command
v_d	d-axis voltage
v_d^*	d-axis voltage command
v_q	q-axis voltage
v_q^*	q-axis voltage command
v_a, v_b, v_c	Stator phase a, b, c voltages
i_a, i_b, i_c	Stator phase a, b, c currents

Speed Controller

To implement the speed controller, select the **Control Type** parameter `Speed Control`. If you select the **Control Type** parameter `Torque Control`, the block does not implement the speed controller.

The speed controller determines the torque command by implementing a state filter, and calculating the feedforward and feedback commands. If you do not implement the speed controller, input a torque command to the Interior PM Controller block.

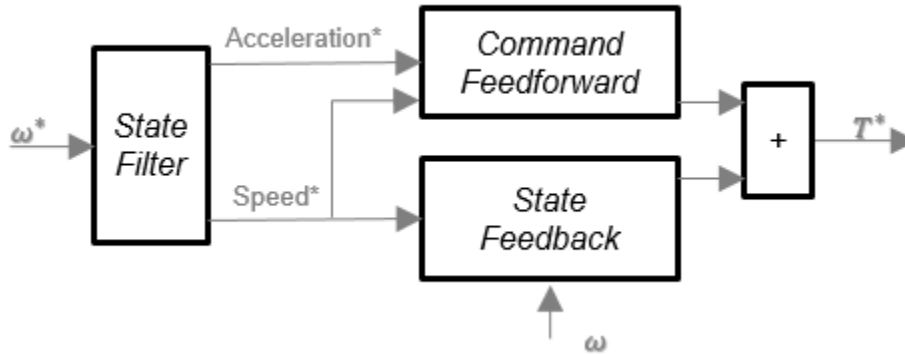

State Filter

The state filter is a low-pass filter that generates the acceleration command based on the speed command. On the **Speed Controller** tab:

- To make the speed-command lag time negligible, specify a **Bandwidth of the state filter** parameter.
- To calculate a **Speed time constant, Ksf** gain based on the state filter bandwidth, select **Calculate Speed Regulator Gains**.

The discrete form of characteristic equation is given by:

$$z + K_{sf}T_{sm} - 1$$

The filter calculates the gain using this equation.

$$K_{sf} = \frac{1 - \exp(-T_{sm}2\pi EV_{sf})}{T_{sm}}$$

The equations use these variables.

EV_{sf}	Bandwidth of the speed command filter
T_{sm}	Motion controller sample time
K_{sf}	Speed regulator time constant

State Feedback

To generate the state feedback torque, the block uses the filtered speed error signal from the state filter. The feedback torque calculation also requires gains for speed regulator.

On the **Speed Controller** tab, select **Calculate Speed Regulator Gains** to calculate:

- **Proportional gain, b_a**
- **Angular gain, K_{sa}**
- **Rotational gain, K_{isa}**

For the gain calculations, the block uses the inertia from the **Physical inertia, viscous damping, static friction** parameter value on the **Motor Parameters** tab.

The gains for the state feedback are calculated using these equations.

Calculation	Equations
Discrete forms of characteristic equation	$z^3 + \frac{(-3J_p + T_s b_a + T_s^2 K_{sa} + T_s^3 K_{isa})}{J_p} z^2 + \frac{(3J_p - 2T_s b_a - T_s^2 K_{sa})}{J_p} z + \frac{-J_p + T_s b_a}{J_p}$ $(z - p_1)(z - p_2)(z - p_3) = z^3 + (p_1 + p_2 + p_3)z^2 + (p_1 p_2 + p_2 p_3 + p_1 p_3)z^2 - p_1 p_2 p_3$
Speed regulator proportional gain	$b_a = \frac{J_p - J_p p_1 p_2 p_3}{T_{sm}}$
Speed regulator integral gain	$K_{sa} = \frac{J_p(p_1 p_2 + p_2 p_3 + p_3 p_1) - 3J_p + 2b_a T_{sm}}{T_{sm}^2}$
Speed regulator double integral gain	$K_{isa} = \frac{-J_p(p_1 + p_2 + p_3) + 3J_p - b_a T_{sm} - K_{sa} T_{sm}^2}{T_{sm}^3}$

The equations use these variables.

P	Motor pole pairs
b_a	Speed regulator proportional gain
K_{sa}	Speed regulator integral gain

K_{isa}	Speed regulator double integral gain
J_p	Motor inertia
T_{sm}	Motion controller sample time

Command Feedforward

To generate the state feedforward torque, the block uses the filtered speed and acceleration from the state filter. Also, the feedforward torque calculation uses the inertia, viscous damping, and static friction. To achieve zero tracking error, the torque command is the sum of the feedforward and feedback torque commands.

Selecting **Calculate Speed Regulator Gains** on the **Speed Controller** tab updates the inertia, viscous damping, and static friction with the **Physical inertia, viscous damping, static friction** parameter values on the **Motor Parameters** tab.

The feedforward torque command uses this equation.

$$T_{cmd_ff} = J_p \dot{\omega}_m + F_v \omega_m + F_s \frac{\omega_m}{|\omega_m|}$$

where:

J_p	Motor inertia
T_{cmd_ff}	Torque command feedforward
F_s	Static friction torque constant
F_v	Viscous friction torque constant
F_s	Static friction torque constant
ω_m	Rotor speed

Torque Determination

The block uses a maximum torque per ampere (MTPA) trajectory to calculate the base speed and the current commands. The available bus voltage determines the base speed. The direct (d) and quadrature (q) permanent magnet (PM) determines the induced voltage.

Calculation	Equations
Electrical base speed transition into field weakening	$\omega_{base} = \frac{v_{max}}{\sqrt{(L_q i_q)^2 + (L_d i_d + \lambda_{pm})^2}}$
d-axis voltage	$v_d = -\omega_e L_q i_{q_{max}}$
q-axis voltage	$v_q = \omega_e (L_d i_{d_{max}} + \lambda_{pm})$
Maximum phase current	$i_{max}^2 = i_{d_{max}}^2 + i_{q_{max}}^2$
Maximum line to neutral voltage	$v_{max} = \frac{v_{bus}}{\sqrt{3}}$
d-axis phase current MTPA table	$I_m = \frac{2T_{max}}{3P\lambda_{pm}}$ $i_{d_mtpa} = \frac{\lambda_{pm}}{4(L_q - L_d)} - \sqrt{\frac{\lambda_{pm}^2}{16(L_q - L_d)^2} + \frac{I_m^2}{2}}$
q-axis phase current MTPA table	$i_{q_mtpa} = \sqrt{I_m^2 - (i_{mtpa})^2}$
Torque MTPA breakpoints	$T_{mtpa} = \frac{3}{2}P(\lambda_{pm}i_q + (L_d - L_q)i_d i_q)$

Calculation	Equations
Field weakening, using the speed-based voltage limits	$(L_q i_q)^2 + (L_d i_d + \lambda_{pm})^2 \leq \frac{v_{max}^2}{\omega_e^2}$ $i_q = \sqrt{i_{max}^2 - i_d^2}$ $(L_d^2 - L_q^2) i_d^2 + 2\lambda_{pm} L_d i_d + \lambda_{pm}^2 + L_q^2 i_{max}^2 - \frac{v_{max}^2}{\omega_e^2} = 0$ $i_{dfw} = \frac{-\lambda_{pm} L_d + \sqrt{(\lambda_{pm} L_d)^2 - (L_d^2 - L_q^2) \left(\lambda_{pm}^2 + L_q^2 i_{max}^2 - \frac{v_{max}^2}{\omega_e^2} \right)}}{(L_d^2 - L_q^2)}$ $T_{fw} = \frac{3}{2} P (\lambda_{pm} i_{qfw} + (L_d - L_q) i_{dfw} i_{qfw})$
Current command	<p>If $\omega_e \leq \omega_{base}$</p> $i_{dref} = i_{dmtpa}(T_{ref})$ $i_{qref} = i_{qmtpa}(T_{ref})$ <p>Else</p> $i_{dfw} = \max(i_{dfw}, -i_{max})$ $i_{qfw} = \sqrt{i_{max}^2 - i_d^2}$ <p>If $T_{fw} < T_{ref}$</p> $i_{dref} = i_{dfw}$ $i_{qref} = i_{qfw}$ <p>Else</p> $i_{dref} = i_{dfw}$ $i_{qref} = \frac{T_{ref}}{\frac{3}{2} P (\lambda_{pm} + (L_d - L_q) i_{dfw})}$ <p>End</p> <p>End</p>

The equations use these variables.

i_{max}	Maximum phase current
i_d	d-axis current
i_q	q-axis current
i_{d_max}	Maximum d-axis phase current
i_{q_max}	Maximum q-axis phase current
i_{d_mtpa}	d-axis phase current MTPA table
i_{q_mtpa}	q-axis phase current MTPA table
I_m	Estimated maximum current
i_{dfw}	d-axis field weakening current
i_{qfw}	q-axis field weakening current
ω_e	Rotor electrical speed
λ_{pm}	Permanent magnet flux linkage
v_d	d-axis voltage
v_q	q-axis voltage
v_{max}	Maximum line to neutral voltage
v_{bus}	DC bus voltage
L_d	d-axis winding inductance
L_q	q-axis winding inductance
P	Motor pole pairs
T_{fw}	Field weakening torque
T_{mtpa}	Torque MTPA breakpoints

Current Regulators

The block regulates the current with an anti-windup feature. Classic proportional-integrator (PI) current regulators do not consider the d-axis and q-axis coupling or the back-electromagnetic force (EMF) coupling. As a result, transient performance deteriorates. To account for the coupling, the block implements the complex vector current regulator (CVCR) in the scalar format of the rotor reference frame. The CVCR decouples:

- d-axis and q-axis current cross-coupling
- Back-EMF cross-coupling

The current frequency response is a first-order system, with a bandwidth of $EV_{current}$.

The block implements these equations.

Calculation	Equations
Motor voltage, in the rotor reference frame	$L_d \frac{di_d}{dt} = v_d - R_s i_d + p \omega_m L_q i_q$ $L_q \frac{di_q}{dt} = v_q - R_s i_q - p \omega_m L_d i_d - p \omega_m \lambda_{pm}$
Current regulator gains	$\omega_b = 2\pi EV_{current}$ $K_{p_d} = L_d \omega_b$ $K_{p_q} = L_q \omega_b$ $K_i = R_s \omega_b$
Transfer functions	$\frac{i_d}{i_{dref}} = \frac{\omega_b}{s + \omega_b}$ $\frac{i_q}{i_{qref}} = \frac{\omega_b}{s + \omega_b}$

The equations use these variables.

$EV_{current}$	Current regulator bandwidth
i_d	d-axis current
i_q	q-axis current
K_{p_d}	Current regulator d-axis gain
K_{p_q}	Current regulator q-axis gain
L_d	d-axis winding inductance
L_q	q-axis winding inductance
R_s	Stator phase winding resistance
ω_m	Rotor speed
v_d	d-axis voltage
v_q	q-axis voltage

λ_{pm} Permanent magnet flux linkage
 P Motor pole pairs

Transforms

To calculate the voltages and currents in balanced three-phase (a, b) quantities, quadrature two-phase (α, β) quantities, and rotating (d, q) reference frames, the block uses the Clarke and Park Transforms.

In the transform equations.

$$\omega_e = P\omega_m$$

$$\frac{d\theta_e}{dt} = \omega_e$$

Transform	Description	Equations
Clarke	Converts balanced three-phase quantities (a, b) into balanced two-phase quadrature quantities (α, β).	$x_\alpha = \frac{2}{3}x_a - \frac{1}{3}x_b - \frac{1}{3}x_c$ $x_\beta = \frac{\sqrt{3}}{2}x_b - \frac{\sqrt{3}}{2}x_c$
Park	Converts balanced two-phase orthogonal stationary quantities (α, β) into an orthogonal rotating reference frame (d, q).	$x_d = x_\alpha \cos\theta_e + x_\beta \sin\theta_e$ $x_q = -x_\alpha \sin\theta_e + x_\beta \cos\theta_e$
Inverse Clarke	Converts balanced two-phase quadrature quantities (α, β) into balanced three-phase quantities (a, b).	$x_a = x_\alpha$ $x_b = -\frac{1}{2}x_\alpha + \frac{\sqrt{3}}{2}x_\beta$ $x_c = -\frac{1}{2}x_\alpha - \frac{\sqrt{3}}{2}x_\beta$
Inverse Park	Converts an orthogonal rotating reference frame (d, q) into balanced two-phase orthogonal stationary quantities (α, β).	$x_\alpha = x_d \cos\theta_e - x_q \sin\theta_e$ $x_\beta = x_d \sin\theta_e + x_q \cos\theta_e$

The transforms use these variables.

ω_m Rotor speed

P	Motor pole pairs
ω_e	Rotor electrical speed
θ_e	Rotor electrical angle
x	Phase current or voltage

Motor

The block uses the phase currents and phase voltages to estimate the DC bus current. Positive current indicates battery discharge. Negative current indicates battery charge. The block uses these equations.

Load power	$Ld_{Pwr} = v_a i_a + v_b i_b + v_c i_c$
Source power	$Src_{Pwr} = Ld_{Pwr} + Pwr_{Loss}$
DC bus current	$i_{bus} = \frac{Src_{Pwr}}{v_{bus}}$
Estimated rotor torque	$MtrTrq_{est} = 1.5P[\lambda i_q + (L_d - L_q)i_d i_q]$
Power loss for single efficiency source to load	$Pwr_{Loss} = \frac{100 - Eff}{Eff} \cdot Ld_{Pwr}$
Power loss for single efficiency load to source	$Pwr_{Loss} = \frac{100 - Eff}{100} \cdot Ld_{Pwr} $
Power loss for tabulated efficiency	$Pwr_{Loss} = f(\omega_m, MtrTrq_{est})$

The equations use these variables.

v_a, v_b, v_c	Stator phase a, b, c voltages
v_{bus}	Estimated DC bus voltage
i_a, i_b, i_c	Stator phase a, b, c currents
i_{bus}	Estimated DC bus current
Eff	Overall inverter efficiency
ω_m	Rotor mechanical speed
L_q	q-axis winding inductance
L_d	d-axis winding inductance

i_q	q-axis current
i_d	d-axis current
λ	Permanent magnet flux linkage
P	Motor pole pairs

Electrical Losses

To specify the electrical losses, on the **Electrical Losses** tab, for **Parameterize losses by**, select one of these options.

Setting	Block Implementation
Single efficiency measurement	Electrical loss calculated using a constant value for inverter efficiency.
Tabulated loss data	Electrical loss calculated as a function of motor speeds and load torques.
Tabulated efficiency data	<p>Electrical loss calculated using inverter efficiency that is a function of motor speeds and load torques.</p> <ul style="list-style-type: none"> • Converts the efficiency values you provide into losses and uses the tabulated losses for simulation. • Ignores efficiency values you provide for zero speed or zero torque. Losses are assumed zero when either torque or speed is zero. • Uses linear interpolation to determine losses. Provide tabulated data for low speeds and low torques, as required, to get the desired level of accuracy for lower power conditions. • Does not extrapolate loss values for speed and torque magnitudes that exceed the range of the table.

For best practice, use **Tabulated loss data** instead of **Tabulated efficiency data**:

- Efficiency becomes ill defined for zero speed or zero torque.
- You can account for fixed losses that are still present for zero speed or torque.

Ports

Input

SpdReq — Rotor speed command

scalar

Rotor speed command, ω_m^* , in rad/s.

Dependencies

To create this port, select Speed Control for the **Control Type** parameter.

TrqCmd — Torque command

scalar

Torque command, T^* , in N·m.

Dependencies

To create this port, select Torque Control for the **Control Type** parameter.

BusVolt — DC bus voltage

scalar

DC bus voltage, v_{bus} , in V.

PhaseCurrA — Current

scalar

Stator current phase a, i_a , in A.

PhaseCurrB — Current

scalar

Stator current phase b, i_b , in A.

SpdFdbk — Rotor speed

scalar

Rotor speed, ω_m , in rad/s.

PosFdbk — Rotor electrical angle

scalar

Rotor electrical angle, θ_m , in rad.**Output****Info — Bus signal**

bus

Bus signal containing these block calculations.

Signal	Description	Units
SrcPwr	Source power	W
LdPwr	Load power	W
PwrLoss	Power loss	W
MtrTrqEst	Estimated motor torque	N·m

BusCurr — Bus current

scalar

Estimated DC bus current, i_{bus} , in A.**PhaseVlt — Stator terminal voltages**

array

Stator terminal voltages, V_a , V_b , and V_c , in V.**Parameters****Block Options****Control Type — Select control**

Speed Control (default) | Torque Control

If you select Torque Control, the block does not implement the speed controller.

This table summarizes the port configurations.

Port Configuration	Creates Ports
Speed Control	SpdReq
Torque Control	TrqCmd

Motor Parameters

Stator resistance, Rs — Resistance

scalar

Stator phase winding resistance, R_s , in ohm.

Dependencies

This table summarizes the parameter dependencies.

Parameter	Used to Derive	
	Parameter	Tab
Stator resistance, Rs	D and Q axis integral gain, Ki	Current Controller

D-axis inductance, Ld — Inductance

scalar

D-axis winding inductance, L_d , in H.

Dependencies

This table summarizes the parameter dependencies.

Parameter	Used to Derive	
	Parameter	Tab
D-axis inductance, Ld	Torque Breakpoints, T_mtpa D-axis table data, id_mtpa Q-axis table data, iq_mtpa D, q, and max current limits, idq_limits	Id and Iq Calculation

Q-axis inductance, L_q – Inductance

scalar

Q-axis winding inductance, L_q , in H.**Dependencies**

This table summarizes the parameter dependencies.

Parameter	Used to Derive	
	Parameter	Tab
Q-axis inductance, L_q	Torque Breakpoints, T_{mtpa} D-axis table data, id_{mtpa} Q-axis table data, iq_{mtpa} D, Q, and max current limits, idq_limits	Id and Iq Calculation

Permanent magnet flux, λ_{pm} – Flux

scalar

Permanent magnet flux, λ_{pm} , in Wb.**Dependencies**

This table summarizes the parameter dependencies.

Parameter	Used to Derive	
	Parameter	Tab
Permanent magnet flux, λ_{pm}	Torque Breakpoints, T_{mtpa} D-axis table data, id_{mtpa} Q-axis table data, iq_{mtpa} D, Q, and max current limits, idq_limits	Id and Iq Calculation

Number of pole pairs, PolePairs — Poles
scalar

Motor pole pairs, P .

Dependencies

This table summarizes the parameter dependencies.

Parameter	Used to Derive	
	Parameter	Tab
Number of pole pairs, PolePairs	Torque Breakpoints, T_mtpa D-axis table data, id_mtpa Q-axis table data, iq_mtpa D, Q, and max current limits, idq_limits	Id and Iq Calculation

Physical inertia, viscous damping, static friction, Mechanical — Inertia, damping, friction
vector

Mechanical properties of the motor:

- Motor inertia, F_v , in kgm^2
- Viscous friction torque constant, F_v , in $\text{N}\cdot\text{m}/(\text{rad}/\text{s})$
- Static friction torque constant, F_s , in $\text{N}\cdot\text{m}$

Dependencies

To enable this parameter, set the **Control Type** parameter to Speed Control.

For the gain calculations, the block uses the inertia from the **Physical inertia, viscous damping, static friction** parameter value that is on the **Motor Parameters** tab.

This table summarizes the parameter dependencies.

Parameter	Used to Derive	
	Parameter	Tab
Physical inertia, viscous damping, static friction, Mechanical	Proportional gain, ba Angular gain, Ksa Rotational gain, Kisa Inertia compensation, Jcomp Viscous damping compensation, Fv Static friction, Fs	Speed Controller

Id and Iq Calculation

Maximum torque, T_max – Torque

scalar

Maximum torque, in N·m.

Dependencies

This table summarizes the parameter dependencies.

Parameter	Used to Derive	
	Parameter	Tab
Maximum torque, T_max	Torque Breakpoints, T_mtpa D-axis table data, id_mtpa Q-axis table data, iq_mtpa D, Q, and max current limits, idq_limits	Id and Iq Calculation

MTPA table breakpoints, bp – Number of breakpoints

scalar

Dependencies

This table summarizes the parameter dependencies.

Parameter	Used to Derive	
	Parameter	Tab
MTPA table breakpoints, pb	Torque Breakpoints, T_mtpa D-axis table data, id_mtpa Q-axis table data, iq_mtpa D, Q, and max current limits, idq_limits	Id and Iq Calculation

Calculate MTPA Table Data — Derive parameters

button

Click to derive parameters.

Dependencies

On the **Id and Iq Calculation** tab, when you select **Calculate MTPA Table data**, the block calculates derived parameters. The table summarizes the derived parameter dependencies on other block parameters.

Derived Parameter on Id and Iq Calculation tab		Depends On	
		Parameter	Tab
Torque Breakpoints, T_mtpa	$T_{mtpa} = \frac{3}{2}P(\lambda_{pm}i_q + (L_d - L_q)i_d i_q)$	Maximum torque, T_max MTPA table breakpoints, pb	Id and Iq Calculation
D-axis table data, id_mtpa	$I_m = \frac{2T_{max}}{3P\lambda_{pm}}$ $i_{d_mtpa} = \frac{\lambda_{pm}}{4(L_q - L_d)} - \sqrt{\frac{\lambda_{pm}^2}{16(L_q - L_d)^2} - \frac{I_m^2}{2}}$	Permanent magnet flux, lambda_pm D-axis inductance, Ld	Motor Parameters

Derived Parameter on Id and Iq Calculation tab		Depends On	
		Parameter	Tab
Q-axis table data, iq_mtpa	$i_{q_mtpa} = \sqrt{I_m^2 - (i_{mtpa})^2}$	Q-axis inductance, Lq	
D, Q, and max current limits, idq_limits		Number of pole pairs, PolePairs	

The equations use these variables.

i_{max}	Maximum phase current
i_d	d-axis current
i_q	q-axis current
i_{d_max}	Maximum d-axis phase current
i_{q_max}	Maximum q-axis phase current
i_{d_mtpa}	d-axis phase current MTPA table
i_{q_mtpa}	q-axis phase current MTPA table
λ_{pm}	Permanent magnet flux linkage
L_d	d-axis winding inductance
L_q	q-axis winding inductance
P	Motor pole pairs
T_{mtpa}	Torque MTPA breakpoints
I_m	Estimated maximum current

Torque Breakpoints, T_mtpa – Derived vector

Derived torque breakpoints, in N·m.

Dependencies

This table summarizes the parameter dependencies.

Parameter	Dependency	
	Parameter	Tab
Torque Breakpoints, T_mtpa	Maximum torque, T_max MTPA table breakpoints, pb	Id and Iq Calculation
	Permanent magnet flux, lambda_pm D-axis inductance, Ld Q-axis inductance, Lq Number of pole pairs, PolePairs	Motor Parameters

D-axis table data, id_mtpa – Derived vector

Derived d-axis table data, in A.

Dependencies

This table summarizes the parameter dependencies.

Parameter	Dependency	
	Parameter	Tab
D-axis table data, id_mtpa	Maximum torque, T_max MTPA table breakpoints, pb	Id and Iq Calculation

Parameter	Dependency	
	Parameter	Tab
	Permanent magnet flux, lambda_pm D-axis inductance, Ld Q-axis inductance, Lq Number of pole pairs, PolePairs	Motor Parameters

Q-axis table data, iq_mtpa – Derived
vector

Derived q-axis table data, in A.

Dependencies

This table summarizes the parameter dependencies.

Parameter	Dependency	
	Parameter	Tab
D-axis table data, id_mtpa	Maximum torque, T_max MTPA table breakpoints, pb	Id and Iq Calculation
	Permanent magnet flux, lambda_pm D-axis inductance, Ld Q-axis inductance, Lq Number of pole pairs, PolePairs	Motor Parameters

D, Q, and max current limits, idq_limits – Derived
array

Derived d, q, and maximum current limits, in A.

Dependencies

This table summarizes the parameter dependencies.

Parameter	Dependency	
	Parameter	Tab
D, Q, and max current limits, idq_limits	Maximum torque, T_max	Id and Iq Calculation
	MTPA table breakpoints, pb	
	Permanent magnet flux, lambda_pm	Motor Parameters
	D-axis inductance, Ld	
	Q-axis inductance, Lq	
Number of pole pairs, PolePairs		

Current Controller

Bandwidth of the current regulator, EV_current — Bandwidth scalar

Derived current regulator bandwidth, in Hz.

Dependencies

This table summarizes the parameter dependencies.

Parameter	Used to Derive	
	Parameter	Tab
Bandwidth of the current regulator, EV_current	D-axis proportional gain, Kp_d Q-axis proportional gain, Kp_q D and Q axis proportional gain, Ki	Current Controller

Sample time for the torque control, Tst – Time scalar

Derived torque control sample time, in s.

Dependencies

This table summarizes the parameter dependencies.

Parameter	Used to Derive	
	Parameter	Tab
Sample time for the torque control, Tst	Speed time constant, Ksf	Speed Controller

Calculate Current Regulator Gains – Derive parameters button

Click to derive parameters.

Dependencies

On the **Current Controller** tab, when you select **Calculate Current Regulator Gains**, the block calculates derived parameters. The table summarizes the derived parameter dependencies on other block parameters.

Derived Parameter on Current Controller tab	Dependency	
	Parameter	Tab
D-axis proportional gain, Kp_d Q-axis proportional gain, Kp_q D and Q axis integral gain, Ki	Bandwidth of the current regulator, EV_current	Current Controller
	Stator resistance, Rs	Motor Parameters

D-axis proportional gain, Kp_d — Derived scalar

Derived d-axis proportional gain, in V/A.

Dependencies

This table summarizes the parameter dependencies.

Parameter	Dependency	
	Parameter	Tab
D-axis proportional gain, Kp_d	Bandwidth of the current regulator, EV_current	Current Controller

Q-axis proportional gain, Kp_q — Derived scalar

Derived q-axis proportional gain, in V/A.

Dependencies

This table summarizes the parameter dependencies.

Parameter	Dependency	
	Parameter	Tab
Q-axis proportional gain, K_p_q	Bandwidth of the current regulator, $EV_current$	Current Controller

D and Q axis integral gain, K_i – Derived scalar

Derived d- and q- axis integral gains, in V/A·s.

Dependencies

This table summarizes the parameter dependencies.

Parameter	Dependency	
	Parameter	Tab
D and Q axis integral gain, K_i	Stator resistance, R_s	Motor Parameters

Speed Controller

Bandwidth of the motion controller, EV_motion – Bandwidth vector

Motion controller bandwidth, in Hz. Set the first element of the vector to the desired cutoff frequency. Set the second and third elements of the vector to the higher-order cut off frequencies. You can set the value of the next element to 1/5 the value of the previous element. For example, if the desired cutoff frequency is 20 Hz, specify [20 4 0.8].

Dependencies

The parameter is enabled when the **Control Type** parameter is set to Speed Control.

Parameter	Used to Derive	
	Parameter	Tab
Bandwidth of the motion controller, EV_motion	Proportional gain, ba Angular gain, Ksa Rotational gain, Kisa	Speed Controller

Bandwidth of the state filter, EV_sf — Bandwidth scalar

State filter bandwidth, in Hz.

Dependencies

The parameter is enabled when the **Control Type** parameter is set to Speed Control.

Parameter	Used to Derive	
	Parameter	Tab
Bandwidth of the state filter, EV_sf	Speed time constant, Ksf	Speed Controller

Calculate Speed Regulator Gains — Derive parameters button

Click to derive parameters.

Dependencies

On the **Speed Controller** tab, when you select **Calculate Speed Regulator Gains**, the block calculates derived parameters. The table summarizes the derived parameters that depend on other block parameters.

Derived Parameter on Speed Controller tab		Depends On	
		Parameter	Tab
Proportional gain, b_a	$b_a = \frac{J_p - J_p p_1 p_2 p_3}{T_{sm}}$	Bandwidth of the motion controller, EV_motion Bandwidth of the state filter, EV_sf	Speed Controller
Angular gain, K_{sa}	$K_{sa} = \frac{J_p(p_1 p_2 + p_2 p_3 + p_3 p_1) - 3J_p + 2b_a T_{sm}}{T_{sm}^2}$	Sample time for the torque control, T_{st}	Current Controller
Rotational gain, K_{isa}	$K_{isa} = \frac{-J_p(p_1 + p_2 + p_3) + 3J_p - b_a T_{sm} - K_v T_{sm}^2}{T_{sm}^3}$	Physical inertia, viscous damping, static friction, Mechanical	Motor Parameters
Speed time constant, K_{sf}	$K_{sf} = \frac{1 - \exp(-T_{sm} 2\pi EV_{sf})}{T_{sm}}$		
Inertia compensation, J_{comp}	$J_{comp} = J_p$	Physical inertia, viscous damping, static friction, Mechanical	Motor Parameters
Viscous damping compensation, F_v	F_v		
Static friction, F_s	F_s		

The equations use these variables.

- P Motor pole pairs
 b_a Speed regulator proportional gain

K_{sa}	Speed regulator integral gain
K_{isa}	Speed regulator double integral gain
K_{sf}	Speed regulator time constant
J_p	Motor inertia
EV_{sf}	State filter bandwidth
EV_{motion}	Motion controller bandwidth

Proportional gain, ba — Derived
scalar

Derived proportional gain, in N·m/(rad/s).

Dependencies

This table summarizes the parameter dependencies.

Parameter	Dependency	
	Parameter	Tab
Proportional gain, ba	Physical inertia, viscous damping, static friction, Mechanical	Motor Parameters
	Bandwidth of the motion controller, EV_motion	Speed Controller

Angular gain, Ksa — Derived
scalar

Derived angular gain, in N·m/rad.

Dependencies

This table summarizes the parameter dependencies.

Parameter	Dependency	
	Parameter	Tab
Angular gain, Ksa	Physical inertia, viscous damping, static friction, Mechanical	Motor Parameters

Parameter	Dependency	
	Parameter	Tab
	Bandwidth of the motion controller, EV_motion	Speed Controller

Rotational gain, Kisa – Derived

scalar

Derived rotational gain, in N·m/(rad*s).

Dependencies

This table summarizes the parameter dependencies.

Parameter	Dependency	
	Parameter	Tab
Rotational gain, Kisa	Physical inertia, viscous damping, static friction, Mechanical	Motor Parameters
	Bandwidth of the motion controller, EV_motion	Speed Controller

Speed time constant, Ksf – Derived

scalar

Derived speed time constant, in 1/s.

Dependencies

This table summarizes the parameter dependencies.

Parameter	Dependency	
	Parameter	Tab
Speed time constant, Ksf	Sample time for the torque control, Tst	Current Controller
	Bandwidth of the state filter, EV_sf	Speed Controller

Inertia compensation, Jcomp — Derived

scalar

Derived inertia compensation, in $\text{kg}\cdot\text{m}^2$.

Dependencies

This table summarizes the parameter dependencies.

Parameter	Dependency	
	Parameter	Tab
Inertia compensation, Jcomp	Physical inertia, viscous damping, static friction, Mechanical	Motor Parameters

Viscous damping compensation, Fv — Derived

scalar

Dependencies

This table summarizes the parameter dependencies.

Parameter	Dependency	
	Parameter	Tab
Viscous damping compensation, Fv	Physical inertia, viscous damping, static friction, Mechanical	Motor Parameters

Static friction, Fs — Derived

scalar

Derived static friction, in $\text{N}\cdot\text{m}/(\text{rad}/\text{s})$.

Dependencies

This table summarizes the parameter dependencies.

Parameter	Dependency	
	Parameter	Tab
Static friction, Fs	Physical inertia, viscous damping, static friction, Mechanical	Motor Parameters

Electrical Losses

Parameterize losses by – Select type

Single efficiency measurement (default) | Tabulated loss data | Tabulated efficiency data

Setting	Block Implementation
Single efficiency measurement	Electrical loss calculated using a constant value for inverter efficiency.
Tabulated loss data	Electrical loss calculated as a function of motor speeds and load torques.
Tabulated efficiency data	<p>Electrical loss calculated using inverter efficiency that is a function of motor speeds and load torques.</p> <ul style="list-style-type: none"> Converts the efficiency values you provide into losses and uses the tabulated losses for simulation. Ignores efficiency values you provide for zero speed or zero torque. Losses are assumed zero when either torque or speed is zero. Uses linear interpolation to determine losses. Provide tabulated data for low speeds and low torques, as required, to get the desired level of accuracy for lower power conditions. Does not extrapolate loss values for speed and torque magnitudes that exceed the range of the table.

For best practice, use Tabulated loss data instead of Tabulated efficiency data:

- Efficiency becomes ill defined for zero speed or zero torque.
- You can account for fixed losses that are still present for zero speed or torque.

Overall inverter efficiency, eff — Constant
scalar

Overall inverter efficiency, Eff , in %.

Dependencies

To enable this parameter, for **Parameterize losses by**, select Tabulated loss data.

Vector of speeds (w) for tabulated loss, w_loss_bp — Breakpoints
1-by-M matrix

Speed breakpoints for lookup table when calculating losses, in rad/s.

Dependencies

To enable this parameter, for **Parameterize losses by**, select Tabulated loss data.

Vector of torques (T) for tabulated loss, T_loss_bp — Breakpoints
1-by-N matrix

Torque breakpoints for lookup table when calculating losses, in N·m.

Dependencies

To enable this parameter, for **Parameterize losses by**, select Tabulated loss data.

Corresponding losses, $losses_table$ — Table
M-by-N matrix

Array of values for electrical losses as a function of M speeds and N torques, in W. Each value specifies the losses for a specific combination of speed and torque. The matrix size must match the dimensions defined by the speed and torque vectors.

Dependencies

To enable this parameter, for **Parameterize losses by**, select Tabulated loss data.

Vector of speeds (w) for tabulated efficiency, w_eff_bp — Breakpoints
1-by-M matrix

Speed breakpoints for lookup table when calculating efficiency, in rad/s.

Dependencies

To enable this parameter, for **Parameterize losses by**, select Tabulated efficiency data.

Vector of torques (T) for tabulated efficiency, T_eff_bp – Breakpoints

1-by-N matrix

Torque breakpoints for lookup table when calculating efficiency, in N·m.

Dependencies

To enable this parameter, for **Parameterize losses by**, select Tabulated efficiency data.

Corresponding efficiency, efficiency_table – Table

M-by-N matrix

Array of efficiency as a function of M speeds and N torque, in %. Each value specifies the efficiency for a specific combination of speed and torque. The matrix size must match the dimensions defined by the speed and torque vectors.

The block ignores efficiency values for zero speed or zero torque. Losses are zero when either torque or speed is zero. The block uses linear interpolation.

To get the desired level of accuracy for lower power conditions, you can provide tabulated data for low speeds and low torques.

Dependencies

To enable this parameter, for **Parameterize losses by**, select Tabulated efficiency data.

References

- [1] Lorenz, Robert D., Thomas Lipo, and Donald W. Novotny. "Motion control with induction motors." *Proceedings of the IEEE*, Vol. 82, Issue 8, August 1994, pp. 1215-1240.
- [2] Morimoto, Shigeo, Masayuka Sanada, and Yoji Takeda. "Wide-speed operation of interior permanent magnet synchronous motors with high-performance current

regulator." *IEEE Transactions on Industry Applications*, Vol. 30, Issue 4, July/August 1994, pp. 920-926.

- [3] Li, Muyang. "Flux-Weakening Control for Permanent-Magnet Synchronous Motors Based on Z-Source Inverters." Master's Thesis, Marquette University, e-Publications@Marquette, Fall 2014.
- [4] Briz, Fernando, Michael W. Degner, and Robert D. Lorenz. "Analysis and design of current regulators using complex vectors." *IEEE Transactions on Industry Applications*, Vol. 36, Issue 3, May/June 2000, pp. 817-825.
- [5] Briz, Fernando, et al. "Current and flux regulation in field-weakening operation [of induction motors]." *IEEE Transactions on Industry Applications*, Vol. 37, Issue 1, Jan/Feb 2001, pp. 42-50.

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using Simulink® Coder™.

See Also


Flux-Based PM Controller | IM Controller | Interior PMSM | Surface Mount PM Controller

Introduced in R2017a

Flux-Based PMSM

Flux-based permanent magnet synchronous motor

Library: Powertrain Blockset / Propulsion / Electric Motors

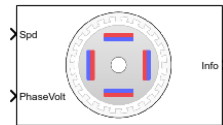

Description

The Flux-Based PMSM block implements a flux-based three-phase permanent magnet synchronous motor (PMSM) with a tabular-based electromotive force. The block uses the three-phase input voltages to regulate the individual phase currents, allowing control of the motor torque or speed.


Flux-based motor models take into account magnetic saturation and iron losses. To calculate the magnetic saturation and iron loss, the Flux-Based PMSM block uses the inverse of the flux linkages. To obtain the block parameters, you can use finite-element analysis (FEA) or measure phase voltages using a dynamometer.

By default, the block sets the **Simulation Type** parameter to **Continuous** to use a continuous sample time during simulation. If you want to generate code for fixed-step double- and single-precision targets, considering setting the parameter to **Discrete**. Then specify a **Sample Time, Ts** parameter.

To enable power loss calculations suitable for code generation targets that limit memory, select **Enable memory optimized 2D LUT**.

Three-Phase Sinusoidal Model Electrical System

The block implements equations that are expressed in a stationary rotor reference (dq) frame. The d -axis aligns with the a -axis. All quantities in the rotor reference frame are referred to the stator.

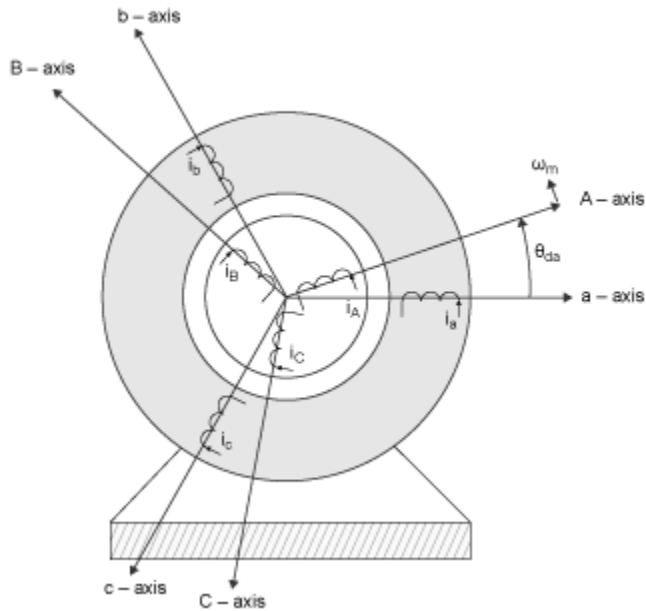

The block uses these equations.

Calculation	Equation
q - and d -axis voltage	$v_d = \frac{d\psi_d}{dt} + R_s i_d - \omega_e \psi_q$ $v_q = \frac{d\psi_q}{dt} + R_s i_q + \omega_e \psi_d$
q - and d -axis current	$i_d = f(\psi_d, \psi_q)$ $i_q = g(\psi_d, \psi_q)$
Electromechanical torque	$T_e = 1.5P[\psi_d i_q - \psi_q i_d]$

The equations use these variables.

ω_m Rotor mechanical speed

ω_e Rotor electrical speed

Θ_{da}	dq stator electrical angle with respect to the rotor a-axis
R_s, R_r	Resistance of the stator and rotor windings, respectively
i_q, i_d	q - and d -axis current, respectively
v_q, v_d	q - and d -axis voltage, respectively
Ψ_q, Ψ_d	q - and d -axis magnet flux, respectively
P	Number of pole pairs
T_e	Electromagnetic torque

Transforms

To calculate the voltages and currents in balanced three-phase (a, b) quantities, quadrature two-phase (α, β) quantities, and rotating (d, q) reference frames, the block uses the Clarke and Park Transforms.

In the transform equations.

$$\omega_e = P\omega_m$$

$$\frac{d\theta_e}{dt} = \omega_e$$

Transform	Description	Equations
Clarke	Converts balanced three-phase quantities (a, b) into balanced two-phase quadrature quantities (α, β).	$x_\alpha = \frac{2}{3}x_a - \frac{1}{3}x_b - \frac{1}{3}x_c$ $x_\beta = \frac{\sqrt{3}}{2}x_b - \frac{\sqrt{3}}{2}x_c$
Park	Converts balanced two-phase orthogonal stationary quantities (α, β) into an orthogonal rotating reference frame (d, q).	$x_d = x_\alpha \cos\theta_e + x_\beta \sin\theta_e$ $x_q = -x_\alpha \sin\theta_e + x_\beta \cos\theta_e$
Inverse Clarke	Converts balanced two-phase quadrature quantities (α, β) into balanced three-phase quantities (a, b).	$x_a = x_\alpha$ $x_b = -\frac{1}{2}x_\alpha + \frac{\sqrt{3}}{2}x_\beta$ $x_c = -\frac{1}{2}x_\alpha - \frac{\sqrt{3}}{2}x_\beta$

Transform	Description	Equations
Inverse Park	Converts an orthogonal rotating reference frame (d, q) into balanced two-phase orthogonal stationary quantities (α, β).	$x_\alpha = x_d \cos \theta_e - x_q \sin \theta_e$ $x_\beta = x_d \sin \theta_e + x_q \cos \theta_e$

The transforms use these variables.

ω_m	Rotor mechanical speed
P	Motor pole pairs
ω_e	Rotor electrical speed
θ_e	Rotor electrical angle
x	Phase current or voltage

Mechanical System

The rotor angular velocity is given by:

$$\frac{d}{dt} \omega_m = \frac{1}{J} (T_e - T_f - F \omega_m - T_m)$$

$$\frac{d\theta_m}{dt} = \omega_m$$

The equations use these variables.

J	Combined inertia of rotor and load
F	Combined viscous friction of rotor and load
θ_m	Rotor mechanical angular position
T_m	Rotor shaft torque
T_e	Electromagnetic torque
T_f	Combined rotor and load friction torque
ω_m	Rotor mechanical speed

Power Accounting

For the power accounting, the block implements these equations.

Bus Signal			Description	Variable	Equations
PwrInfo	PwrTrnsfrd — Power transferred between blocks	PwrMtr	Mechanical power	P_{mot}	$P_{mot} = -\omega_m T_e$
	<ul style="list-style-type: none"> Positive signals indicate flow into block Negative signals indicate flow out of block 	PwrBus	Electrical power	P_{bus}	$P_{bus} = v_{an}i_a + v_{bn}i_b + v_{cn}i_c$
	PwrNotTrnsfrd — Power crossing the block boundary, but not transferred	PwrElecLoss	Resistive power loss	P_{elec}	$P_{elec} = -\frac{3}{2}(R_s i_{sd}^2 + R_s i_{sq}^2)$
	<ul style="list-style-type: none"> Positive signals indicate an input Negative signals indicate a loss 	PwrMechLoss	Mechanical power loss	P_{mech}	<p>When Port Configuration is set to Torque:</p> $P_{mech} = -(\omega_m^2 F + \omega_m T_f)$ <p>When Port Configuration is set to Speed:</p> $P_{mech} = 0$
	PwrStored — Stored energy rate of change	PwrMtrStored	Stored motor power	P_{str}	$P_{str} = P_{bus} + P_{mot} + P_{elec} + P_{mech}$
<ul style="list-style-type: none"> Positive signals indicate an increase Negative signals indicate a decrease 					

The equations use these variables.

R_s	Stator resistance
i_a, i_b, i_c	Stator phase a, b, and c current
i_{sq}, i_{sd}	Stator q- and d-axis currents

v_{an}, v_{bn}, v_{cn}	Stator phase a, b, and c voltage
ω_m	Angular mechanical velocity of the rotor
F	Combined motor and load viscous damping
T_e	Electromagnetic torque
T_f	Combined motor and load friction torque

Lookup Table Memory Optimization

The data for the **Corresponding d-axis current, i_d** and **Corresponding q-axis current, i_q** lookup tables are functions of the d - and q -axis flux.


To enable current calculations suitable for code generation targets that limit memory, select **Enable memory optimized 2D LUT**. The block uses linear interpolation to optimize the current lookup table values for code generation. This table summarizes the optimization implementation.

Use Case	Implementation
d - and q -axis flux aligns with the lookup table breakpoint values.	Memory-optimized current is current lookup table value at intersection of flux values.
d - and q -axis flux does not align with the lookup table breakpoint values, but is within range.	Memory-optimized current is linear interpolation between corresponding flux values.
d - and q -axis flux does not align with the lookup table breakpoint values, and is out of range.	Cannot compute an memory-optimized current. Block uses extrapolated data.

Extrapolation

The lookup tables optimized for code generation do not support extrapolation for data that is out of range. However, you can include pre-calculated extrapolation values in the power loss lookup table by selecting **Specify Extrapolation**.

The block uses the endpoint parameters to resize the table data.

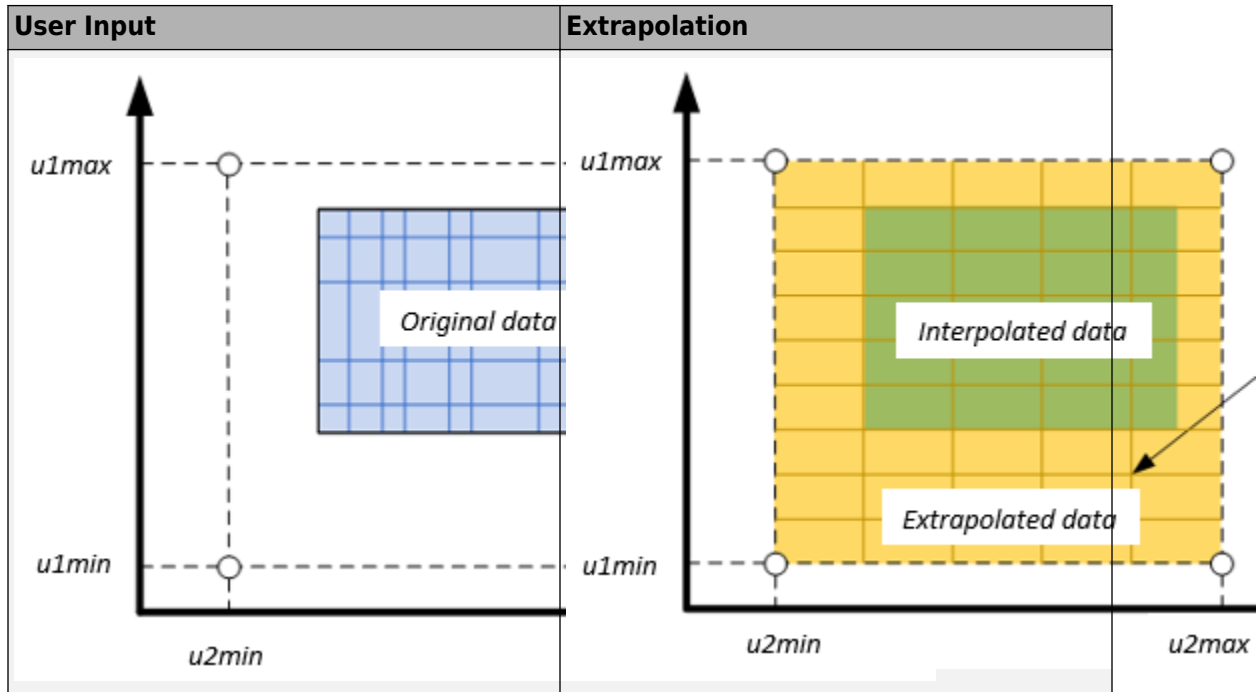

Ports

Input

LdTrq — Rotor shaft torque

scalar

Rotor shaft input torque, T_m , in N·m.

Dependencies

To create this port, select Torque for the **Port Configuration** parameter.

Spd — Rotor shaft speed

scalar

Angular velocity of the rotor, ω_m , in rad/s.

Dependencies

To create this port, select Speed for the **Port Configuration** parameter.

PhaseVolt — Stator terminal voltages

1-by-3 array

Stator terminal voltages, V_a , V_b , and V_c , in V.

Dependencies

To create this port, select Speed or Torque for the **Port Configuration** parameter.

Output

Info — Bus signal

bus

The bus signal contains these block calculations.

Signal			Description	Variable	Units
IaStator			Stator phase current A	i_a	A
IbStator			Stator phase current B	i_b	A
IcStator			Stator phase current C	i_c	A
IdSync			Direct axis current	i_d	A
IqSync			Quadrature axis current	i_q	A
VdSync			Direct axis voltage	v_d	V
VqSync			Quadrature axis voltage	v_q	V
MtrSpd			Angular mechanical velocity of the rotor	ω_m	rad/s
MtrPos			Rotor mechanical angular position	θ_m	rad
MtrTrq			Electromagnetic torque	T_e	N·m
PwrInfo	PwrTrnsfrd	PwrMtr	Mechanical power	P_{mot}	W
		PwrBus	Electrical power	P_{bus}	W

Signal		Description	Variable	Units	
	PwrNotTransfrd	PwrElecLoss	Resistive power loss	P_{elec}	W
		PwrMechLoss	Mechanical power loss	P_{mech}	W
	PwrStored	PwrMtrStored	Stored motor power	P_{str}	W

PhaseCurr — Phase a, b, c current

1-by-3 array

Phase a, b, c current, i_a , i_b , and i_c , in A.**MtrTrq — Motor torque**

scalar

Motor torque, T_{mtr} , in N·m.**Dependencies**To create this port, select Speed for the **Port configuration** parameter.**MtrSpd — Motor speed**

scalar

Angular speed of the motor, ω_{mtr} , in rad/s.**Dependencies**To create this port, select Torque for the **Port configuration** parameter.

Parameters

Block Options**Simulation Type — Select simulation type**

Continuous (default) | Discrete

By default, the block uses a continuous sample time during simulation. If you want to generate code for single-precision targets, considering setting the parameter to Discrete.

Dependencies

Setting **Simulation Type** to Discrete creates the **Sample Time, Ts** parameter.

Sample Time, Ts — Sample time for discrete integration

scalar

Integration sample time for discrete simulation, in s.

Dependencies

Setting **Simulation Type** to Discrete creates the **Sample Time, Ts** parameter.

Port Configuration — Select port configuration

Torque (default) | Speed

This table summarizes the port configurations.

Port Configuration	Creates Input Port	Creates Output Port
Torque	LdTrq	MtrSpd
Speed	Spd	MtrTrq

Enable memory optimized 2D LUT — Selection

off (default) | on

Enable generation of optimized lookup tables, suitable code generation targets that limit memory.

Vector of d-axis flux, flux_d — Flux breakpoints

1-by-M vector

d-axis flux, Ψ_d , breakpoints, in Wb.

Resample storage size for flux_d, n1 — Flux bit size

2 (default) | 4 | 8 | 16 | 32 | 64 | 128 | 256

Flux breakpoint storage size, *n1*, dimensionless. The block resamples the **Corresponding d-axis current, id** and **Corresponding q-axis current, iq** data based on the storage size.

Dependencies

To create this parameter, select **Enable memory optimized 2D LUT**.

Vector of q-axis flux, flux_q — Flux breakpoints

1-by-N vector

 q -axis flux, Ψ_q , breakpoints, in Wb.**Resample storage size for flux_q, n2 — Flux bit size**

2 (default) | 4 | 8 | 16 | 32 | 64 | 128 | 256

Flux breakpoint storage size, $n2$, dimensionless. The block resamples the **Corresponding d-axis current, id** and **Corresponding q-axis current, iq** data based on the storage size.

Dependencies

To create this parameter, select **Enable memory optimized 2D LUT**.

Corresponding d-axis current, id — 2D lookup table

M-by-N array

Array of values for d -axis current, i_d , as a function of M d -fluxes, Ψ_d , and N q -fluxes, Ψ_q , in A. Each value specifies the current for a specific combination of d - and q -axis flux. The array size must match the dimensions defined by the flux vectors.

If you set **Enable memory optimized 2D LUT**, the block converts the data to single precision.

Corresponding q-axis current, iq — 2D lookup table

M-by-N array

Array of values for q -axis current, i_q , as a function of M d -fluxes, Ψ_d , and N q -fluxes, Ψ_q , in A. Each value specifies the current for a specific combination of d - and q -axis flux. The array size must match the dimensions defined by the flux vectors.

If you set **Enable memory optimized 2D LUT**, the block converts the data to single precision.

flux_d max endpoint, u1max — Flux breakpoint

scalar

Flux breakpoint maximum extrapolation endpoint, $u1max$, in Wb.

Dependencies

To create this parameter, select **Enable memory optimized 2D LUT** and **Specify Extrapolation**.

flux_d min endpoint, u1min — Flux breakpoint

scalar

Flux breakpoint minimum extrapolation endpoint, $u1min$, in Wb.

Dependencies

To create this parameter, select **Enable memory optimized 2D LUT** and **Specify Extrapolation**.

flux_q max endpoint, u1max — Flux breakpoint

scalar

Flux breakpoint maximum extrapolation endpoint, $u2max$, in Wb.

Dependencies

To create this parameter, select **Enable memory optimized 2D LUT** and **Specify Extrapolation**.

flux_q min endpoint, u1min — Flux breakpoint

scalar

Flux breakpoint minimum extrapolation endpoint, $u2min$, in Wb.

Dependencies

To create this parameter, select **Enable memory optimized 2D LUT** and **Specify Extrapolation**.

Stator phase resistance, Rs — Resistance

scalar

Stator phase resistance, R_s , in ohm.

Number of pole pairs, P — Pole pairs

scalar

Motor pole pairs, P .

Initial flux, fluxdq0 – Flux

vector

Initial d - and q -axis flux, Ψ_{q0} and Ψ_{d0} , in Wb.**Initial mechanical position, theta_init – Angle**

scalar

Initial rotor angular position, θ_{m0} , in rad.**Initial mechanical speed, omega_init – Speed**

scalar

Initial angular velocity of the rotor, ω_{m0} , in rad/s.**Dependencies**

To enable this parameter, select the Torque configuration parameter.

Physical inertia, viscous damping, and static friction, mechanical – Inertia, damping, friction

vector

Mechanical properties of the rotor:

- Inertia, J , in kgm^2
- Viscous damping, F , in $\text{N}\cdot\text{m}/(\text{rad}/\text{s})$
- Static friction, T_f , in $\text{N}\cdot\text{m}$

Dependencies

To enable this parameter, select the Torque configuration parameter.

References

- [1] Hu, Dakai, Yazan Alsmadi, and Longya Xu. "High fidelity nonlinear IPM modeling based on measured stator winding flux linkage." *IEEE Transactions on Industry Applications*, Vol. 51, No. 4, July/August 2015.
- [2] Chen, Xiao, Jiabin Wang, Bhaskar Sen, Panagiotis Lasari, Tianfu Sun. "A High-Fidelity and Computationally Efficient Model for Interior Permanent-Magnet Machines

Considering the Magnetic Saturation, Spatial Harmonics, and Iron Loss Effect.”
IEEE Transactions on Industrial Electronics, Vol. 62, No. 7, July 2015.

[3] Ottosson, J., M. Alakula. “A compact field weakening controller implementation.”
International Symposium on Power Electronics, Electrical Drives, Automation and Motion, July, 2006.

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using Simulink® Coder™.

See Also

Flux-Based PM Controller | Induction Motor | Interior PMSM | Mapped Motor | Surface Mount PMSM

Topics


“Generate Parameters for Flux-Based Blocks”

Introduced in R2017b

Flux-Based PM Controller

Controller for a flux-based permanent magnet synchronous motor

Library: Powertrain Blockset / Propulsion / Electric Motor Controllers

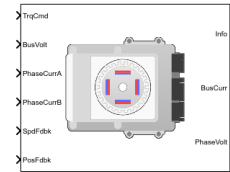


Description

The Flux Based PM Controller block implements a flux-based, field-oriented controller for an interior permanent magnet synchronous motor (PMSM) with an optional outer-loop speed controller. The internal torque control implements strategies for achieving maximum torque per ampere (MTPA) and weakening the magnetic flux. You can specify either the speed or torque control type.

The Flux Based PM Controller implements equations for speed control, torque determination, regulators, transforms, and motors.

The figure illustrates the information flow in the block.

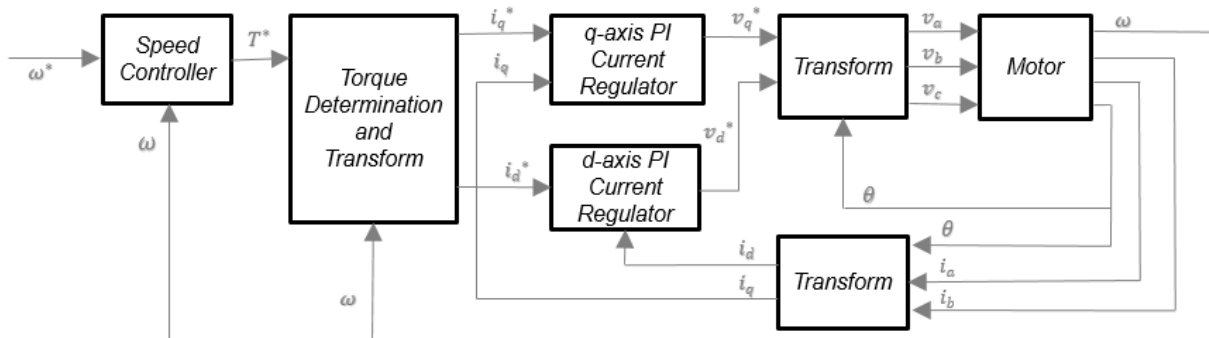


The block implements equations using these variables.

ω	Rotor speed
ω^*	Rotor speed command
T^*	Torque command
i_d	d -axis current
i_d^*	d -axis current command
i_q	q -axis current
i_q^*	q -axis current command
v_d	d -axis voltage
v_d^*	d -axis voltage command
v_q	q -axis voltage
v_q^*	q -axis voltage command
v_a, v_b, v_c	Stator phase a, b, c voltages
i_a, i_b, i_c	Stator phase a, b, c currents

Speed Controller

To implement the speed controller, select the **Control Type** parameter `Speed Control`. If you select the **Control Type** parameter `Torque Control`, the block does not implement the speed controller.

The speed controller determines the torque command by implementing a state filter, and calculating the feedforward and feedback commands. If you do not implement the speed controller, input a torque command to the Flux Based PM Controller block.

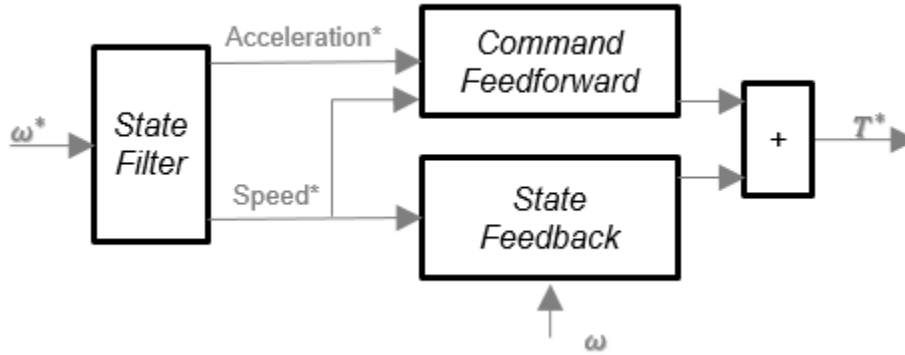

State Filter

The state filter is a low-pass filter that generates the acceleration command based on the speed command. The discrete form of characteristic equation is given by:

$$z + K_{sf}T_{sm} - 1$$

The filter calculates the gain using this equation.

$$K_{sf} = \frac{1 - \exp(-T_{sm}2\pi EV_{sf})}{T_{sm}}$$

The equations use these variables.

EV_{sf}	Bandwidth of the speed command filter
T_{sm}	Motion controller sample time
K_{sf}	Speed regulator time constant

State Feedback

To generate the state feedback torque, the block uses the filtered speed error signal from the state filter. To filter the speed, the block uses a proportional integral (PI) controller.

$$T_{cmd} = Kp_{\omega}(\omega_m^* - \omega_m) + Ki_{\omega} \frac{zT_{sm}}{z-1}(\omega_m^* - \omega_m)$$

The equations use these variables.

ω_m	Rotor speed
ω_m^*	Rotor speed command
T_{cmd}	Torque command
Kp_ω	Speed regulator proportional gain
Ki_ω	Speed regulator integral gain
T_{sm}	Speed regulator sample rate

Command Feedforward

To generate the state feedforward torque, the block uses the filtered speed and acceleration from the state filter. Also, the feedforward torque calculation uses the inertia, viscous damping, and static friction. To achieve zero tracking error, the torque command is the sum of the feedforward and feedback torque commands.

The feedforward torque command uses this equation.

$$T_{cmd_ff} = J_p \dot{\omega}_m + F_v \omega_m + F_s \frac{\omega_m}{|\omega_m|}$$

where:

J_p	Rotor inertia
T_{cmd_ff}	Torque command feedforward
F_s	Static friction torque constant
F_v	Viscous friction torque constant
F_s	Static friction torque constant
ω_m	Rotor speed

Current Command

The block uses lookup tables to determine the d -axis and q -axis current commands. The lookup tables are functions of mechanical speed and torque. To determine the lookup tables, you can use an external finite element analysis (FEA) models or dynamometer test results.

$$i_{dref} = f(|\omega_m|, |T_{ref}|)$$

$$i_{qref} = \text{sign}(T_{ref}) * f(|\omega_m|, |T_{ref}|)$$

The equations use these variables.

ω_m	Rotor speed
T_{ref}	Torque command
i_{dref}, i_{qref}	d - and q -axis reference current, respectively

Voltage Command

The block uses these equations to calculate the voltage in the motor reference frame.

$$v_d = \frac{d\psi_d}{dt} + R_s i_d - \omega_e \psi_q$$

$$v_q = \frac{d\psi_q}{dt} + R_s i_q + \omega_e \psi_d$$

$$\frac{d\psi_d}{dt} + R_s i_d = K p_d (i_d^* - i_d) + K i_d \frac{z T_{st}}{z - 1} (i_d^* - i_d)$$

$$\frac{d\psi_q}{dt} + R_s i_q = K p_q (i_q^* - i_q) + K i_q \frac{z T_{st}}{z - 1} (i_q^* - i_q)$$

$$v_d = K p_i (i_d^* - i_d) + K i_d \frac{z T_{st}}{z - 1} (i_d^* - i_d) + \omega_e \psi_q$$

$$v_q = K p_i (i_q^* - i_q) + K i_q \frac{z T_{st}}{z - 1} (i_q^* - i_q) - \omega_e \psi_d$$

$$\psi_q = f(i_d, i_q)$$

$$\psi_d = f(i_d, i_q)$$

The equations use these variables.

ω_m	Rotor mechanical speed
ω_e	Rotor electrical speed
R_s, R_r	Resistance of the stator and rotor windings, respectively
i_q, i_d	q - and d -axis current, respectively
v_q, v_d	q - and d -axis voltage, respectively
Ψ_q, Ψ_d	q - and d -axis magnet flux, respectively

T_{st}	Current regulator sample rate
Ki_d, Ki_q	d - and q - axis integral gain, respectively
Kp_d, Kp_q	d - and q - axis proportional gain, respectively

Transforms

To calculate the voltages and currents in balanced three-phase (a, b) quantities, quadrature two-phase (α, β) quantities, and rotating (d, q) reference frames, the block uses the Clarke and Park Transforms.

In the transform equations.

$$\omega_e = P\omega_m$$

$$\frac{d\theta_e}{dt} = \omega_e$$

Transform	Description	Equations
Clarke	Converts balanced three-phase quantities (a, b) into balanced two-phase quadrature quantities (α, β).	$x_\alpha = \frac{2}{3}x_a - \frac{1}{3}x_b - \frac{1}{3}x_c$ $x_\beta = \frac{\sqrt{3}}{2}x_b - \frac{\sqrt{3}}{2}x_c$
Park	Converts balanced two-phase orthogonal stationary quantities (α, β) into an orthogonal rotating reference frame (d, q).	$x_d = x_\alpha \cos\theta_e + x_\beta \sin\theta_e$ $x_q = -x_\alpha \sin\theta_e + x_\beta \cos\theta_e$
Inverse Clarke	Converts balanced two-phase quadrature quantities (α, β) into balanced three-phase quantities (a, b).	$x_a = x_\alpha$ $x_b = -\frac{1}{2}x_\alpha + \frac{\sqrt{3}}{2}x_\beta$ $x_c = -\frac{1}{2}x_\alpha - \frac{\sqrt{3}}{2}x_\beta$
Inverse Park	Converts an orthogonal rotating reference frame (d, q) into balanced two-phase orthogonal stationary quantities (α, β).	$x_\alpha = x_d \cos\theta_e - x_q \sin\theta_e$ $x_\beta = x_d \sin\theta_e + x_q \cos\theta_e$

The transforms use these variables.

ω_m	Rotor speed
P	Rotor pole pairs
ω_e	Rotor electrical speed
Θ_e	Rotor electrical angle
x	Phase current or voltage

Motor

The block uses the phase currents and phase voltages to estimate the DC bus current. Positive current indicates battery discharge. Negative current indicates battery charge.

The block uses these equations.

Load power	$Ld_{Pwr} = v_a i_a + v_b i_b + v_c i_c$
Source power	$Src_{Pwr} = Ld_{Pwr} + Pwr_{Loss}$
DC bus current	$i_{bus} = \frac{Src_{Pwr}}{v_{bus}}$
Estimated rotor torque	$T_e = 1.5P[\psi_d i_q - \psi_q i_d]$
Power loss for single efficiency source to load	$Pwr_{Loss} = \frac{100 - Eff}{Eff} \cdot Ld_{Pwr}$
Power loss for single efficiency load to source	$Pwr_{Loss} = \frac{100 - Eff}{100} \cdot Ld_{Pwr} $
Power loss for tabulated efficiency	$Pwr_{Loss} = f(\omega_m, MtrTrq_{est})$

The equations use these variables.

v_a, v_b, v_c	Stator phase a, b, c voltages
v_{bus}	Estimated DC bus voltage
i_a, i_b, i_c	Stator phase a, b, c currents
i_{bus}	Estimated DC bus current
Eff	Overall inverter efficiency
ω_m	Rotor mechanical speed

L_q, L_d	q - and d -axis winding inductance, respectively
Ψ_q, Ψ_d	q - and d -axis magnet flux, respectively
i_q, i_d	q - and d -axis current, respectively
λ	Permanent magnet flux linkage
P	Rotor pole pairs

Electrical Losses

To specify the electrical losses, on the **Electrical Losses** tab, for **Parameterize losses** by, select one of these options.

Setting	Block Implementation
Single efficiency measurement	Electrical loss calculated using a constant value for inverter efficiency.
Tabulated loss data	Electrical loss calculated as a function of motor speeds and load torques.
Tabulated efficiency data	<p>Electrical loss calculated using inverter efficiency that is a function of motor speeds and load torques.</p> <ul style="list-style-type: none"> • Converts the efficiency values you provide into losses and uses the tabulated losses for simulation. • Ignores efficiency values you provide for zero speed or zero torque. Losses are assumed zero when either torque or speed is zero. • Uses linear interpolation to determine losses. Provide tabulated data for low speeds and low torques, as required, to get the desired level of accuracy for lower power conditions. • Does not extrapolate loss values for speed and torque magnitudes that exceed the range of the table.

For best practice, use Tabulated loss data instead of Tabulated efficiency data:

- Efficiency becomes ill defined for zero speed or zero torque.
- You can account for fixed losses that are still present for zero speed or torque.

Ports

Input

SpdReq — Rotor speed command

scalar

Rotor speed command, ω_m^* , in rad/s.

Dependencies

To create this port, select Speed Control for the **Control Type** parameter.

TrqCmd — Torque command

scalar

Torque command, T^* , in N·m.

Dependencies

To create this port, select Torque Control for the **Control Type** parameter.

BusVolt — DC bus voltage

scalar

DC bus voltage, v_{bus} , in V.

PhaseCurrA — Current

scalar

Stator current phase a, i_a , in A.

PhaseCurrB — Current

scalar

Stator current phase b, i_b , in A.

SpdFdbk — Rotor speed

scalar

Rotor speed, ω_m , in rad/s.

PosFdbk — Rotor electrical angle

scalar

Rotor electrical angle, θ_m , in rad.

Output

Info — Bus signal

bus

Bus signal containing these block calculations.

Signal	Description	Units
SrcPwr	Source power	W
LdPwr	Load power	W
PwrLoss	Power loss	W
MtrTrqEst	Estimated motor torque	N·m

BusCurr — Bus current

scalar

Estimated DC bus current, i_{bus} , in A.

PhaseVolt — Stator terminal voltages

array

Stator terminal voltages, V_a , V_b , and V_c , in V.

Parameters

Block Options

Control Type — Select control

Speed Control (default) | Torque Control

If you select Torque Control, the block does not implement the speed controller.

This table summarizes the port configurations.

Port Configuration	Creates Ports
Speed Control	SpdReq
Torque Control	TrqCmd

Motor Parameters

Number of pole pairs, PolePairs – Poles

scalar

Motor pole pairs, P .

Vector of d-axis current breakpoints, id_index – Current

vector

d -axis current, i_{d_index} , in A.

Vector of q-axis current breakpoints, iq_index – current

vector

q -axis current, i_{q_index} , in A.

Corresponding d-axis flux, lambda_d – Flux

vector

d -axis flux, λ_d , in Wb.

Corresponding q-axis flux, lambda_q – Flux

vector

q -axis flux, λ_q , in Wb.

Current Controller

Sample time for the torque control, Tst – Time

scalar

Torque control sample time, T_{st} , in s.

D-axis proportional gain, Kp_d – Gain

scalar

d -axis proportional gain, Kp_d , in V/A.

Q-axis proportional gain, Kp_q — Gain

scalar

q -axis proportional gain, Kp_q , in V/A.

D-axis integral gain, Ki_d — Gain

scalar

d -axis integral gain, Ki_d , in V/A·s.

Q-axis integral gain, Ki_q — Gain

scalar

q -axis integral gain, Ki_q , in V/A·s.

Vector of speed breakpoints, wpb — Breakpoints

vector

Speed breakpoints, ω_{bp} , in rad/s.

Vector of torque breakpoints, tpb — Breakpoints

vector

Torque breakpoints, T_{bp} , in N·m.

Corresponding d-axis current reference, id_ref — Current

vector

d -axis reference current, i_{dref} , in A.

Corresponding q-axis current reference, iq_ref — Current

vector

q -axis reference current, i_{qref} , in A.

Speed Controller

Speed time constant, Ksf — Time

scalar

Speed regulator time constant, K_{sf} , in 1/s.

Dependencies

To enable this parameter, for the **Control Type** parameter, select Speed Control.

Proportional gain, Kp_w – Gain

scalar

Proportional gain, Kp_w , in N·m/(rad/s).

Dependencies

To enable this parameter, for the **Control Type** parameter, select Speed Control.

Integral gain, Ki_w – Gain

scalar

Integral gain, Ki_w N·m/rad.

Dependencies

To enable this parameter, for the **Control Type** parameter, select Speed Control.

Inertia compensation, $Jcomp$ – Inertia

scalar

Inertia compensation, in kg·m².

Dependencies

To enable this parameter, for the **Control Type** parameter, select Speed Control.

Static friction, Fs – Friction

scalar

Static friction, in N·m.

Dependencies

To enable this parameter, for the **Control Type** parameter, select Speed Control.

Viscous damping compensation, Fv – Dampint

scalar

Viscous damping compensation, in N·m/(rad/s).

Dependencies

To enable this parameter, for the **Control Type** parameter, select **Speed Control**.

Electrical Losses

Parameterize losses by — Select type

Single efficiency measurement (default) | Tabulated loss data | Tabulated efficiency data

Setting	Block Implementation
Single efficiency measurement	Electrical loss calculated using a constant value for inverter efficiency.
Tabulated loss data	Electrical loss calculated as a function of motor speeds and load torques.
Tabulated efficiency data	<p>Electrical loss calculated using inverter efficiency that is a function of motor speeds and load torques.</p> <ul style="list-style-type: none"> • Converts the efficiency values you provide into losses and uses the tabulated losses for simulation. • Ignores efficiency values you provide for zero speed or zero torque. Losses are assumed zero when either torque or speed is zero. • Uses linear interpolation to determine losses. Provide tabulated data for low speeds and low torques, as required, to get the desired level of accuracy for lower power conditions. • Does not extrapolate loss values for speed and torque magnitudes that exceed the range of the table.

For best practice, use **Tabulated loss data** instead of **Tabulated efficiency data**:

- Efficiency becomes ill defined for zero speed or zero torque.
- You can account for fixed losses that are still present for zero speed or torque.

Overall inverter efficiency, *eff* — Constant scalar

Overall inverter efficiency, *Eff*, in %.

Dependencies

To enable this parameter, for **Parameterize losses by**, select Tabulated loss data.

Vector of speeds (w) for tabulated loss, w_loss_bp – Breakpoints

1-by-M matrix

Speed breakpoints for lookup table when calculating losses, in rad/s.

Dependencies

To enable this parameter, for **Parameterize losses by**, select Tabulated loss data.

Vector of torques (T) for tabulated loss, T_loss_bp – Breakpoints

1-by-N matrix

Torque breakpoints for lookup table when calculating losses, in N·m.

Dependencies

To enable this parameter, for **Parameterize losses by**, select Tabulated loss data.

Corresponding losses, losses_table – Table

M-by-N matrix

Array of values for electrical losses as a function of M speeds and N torques, in W. Each value specifies the losses for a specific combination of speed and torque. The matrix size must match the dimensions defined by the speed and torque vectors.

Dependencies

To enable this parameter, for **Parameterize losses by**, select Tabulated loss data.

Vector of speeds (w) for tabulated efficiency, w_eff_bp – Breakpoints

1-by-M matrix

Speed breakpoints for lookup table when calculating efficiency, in rad/s.

Dependencies

To enable this parameter, for **Parameterize losses by**, select Tabulated efficiency data.

Vector of torques (T) for tabulated efficiency, T_eff_bp — Breakpoints

1-by-N matrix

Torque breakpoints for lookup table when calculating efficiency, in N·m.

Dependencies

To enable this parameter, for **Parameterize losses by**, select Tabulated efficiency data.

Corresponding efficiency, efficiency_table — Table

M-by-N matrix

Array of efficiency as a function of M speeds and N torque, in %. Each value specifies the efficiency for a specific combination of speed and torque. The matrix size must match the dimensions defined by the speed and torque vectors.

The block ignores efficiency values for zero speed or zero torque. Losses are zero when either torque or speed is zero. The block uses linear interpolation.

To get the desired level of accuracy for lower power conditions, you can provide tabulated data for low speeds and low torques.

Dependencies

To enable this parameter, for **Parameterize losses by**, select Tabulated efficiency data.

References

- [1] Hu, Dakai, Yazan Alsmadi, and Longya Xu. "High fidelity nonlinear IPM modeling based on measured stator winding flux linkage." *IEEE Transactions on Industry Applications*, Vol. 51, No. 4, July/August 2015.
- [2] Chen, Xiao, Jiabin Wang, Bhaskar Sen, Panagiotis Lasari, Tianfu Sun. "A High-Fidelity and Computationally Efficient Model for Interior Permanent-Magnet Machines Considering the Magnetic Saturation, Spatial Harmonics, and Iron Loss Effect." *IEEE Transactions on Industrial Electronics*, Vol. 62, No. 7, July 2015.
- [3] Ottosson, J., M. Alakula. "A compact field weakening controller implementation." *International Symposium on Power Electronics, Electrical Drives, Automation and Motion*, July, 2006.

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using Simulink® Coder™.

See Also

Flux-Based PMSM | IM Controller | Interior PM Controller | Surface Mount PM Controller

Topics


“Generate Parameters for Flux-Based Blocks”

Introduced in R2017b

Induction Motor

Three-phase induction motor

Library: Powertrain Blockset / Propulsion / Electric Motors

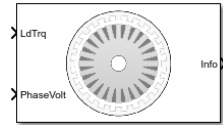


Description

The Induction Motor block implements a three-phase induction motor. The block uses the three-phase input voltages to regulate the individual phase currents, allowing control of the motor torque or speed.

By default, the block sets the **Simulation Type** parameter to **Continuous** to use a continuous sample time during simulation. If you want to generate code for fixed-step double- and single-precision targets, considering setting the parameter to **Discrete**. Then specify a **Sample Time, Ts** parameter.

Three-Phase Sinusoidal Model Electrical System

The block implements equations that are expressed in a stationary rotor reference (qd) frame. The d-axis aligns with the a-axis. All quantities in the rotor reference frame are referred to the stator.

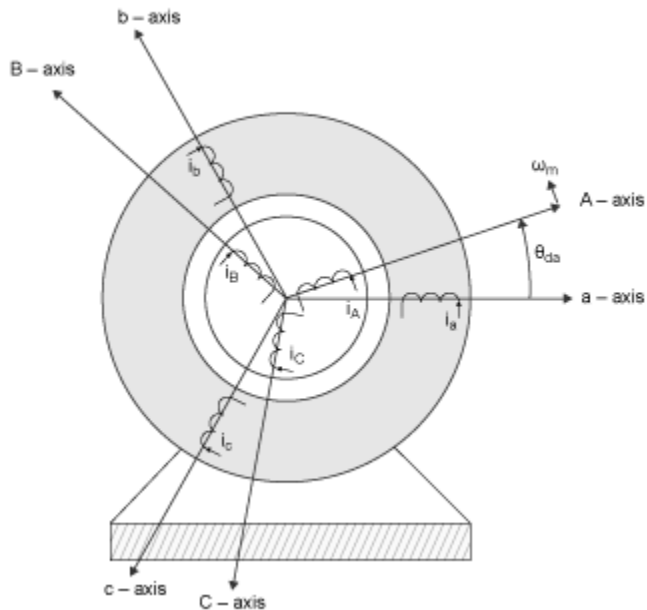

The block uses these equations to calculate the electrical speed (ω_{em}) and slip speed (ω_{slip}).

$$\omega_{em} = P\omega_m$$

$$\omega_{slip} = \omega_{syn} - \omega_{em}$$

To calculate the dq rotor electrical speed with respect to the rotor A-axis (dA), the block uses the difference between the stator a-axis (da) speed and slip speed:

$$\omega_{dA} = \omega_{da} - \omega_{em}$$

To simplify the equations for the flux, voltage, and current transformations, the block uses a stationary reference frame:

$$\omega_{da} = 0$$

$$\omega_{dA} = -\omega_{em}$$

Calculation	Equation
Flux	$\frac{d}{dt} \begin{bmatrix} \lambda_{sd} \\ \lambda_{sq} \end{bmatrix} = \begin{bmatrix} v_{sd} \\ v_{sq} \end{bmatrix} - R_s \begin{bmatrix} i_{sd} \\ i_{sq} \end{bmatrix} - \omega_{da} \begin{bmatrix} 0 & -1 \\ 1 & 0 \end{bmatrix} \begin{bmatrix} \lambda_{sd} \\ \lambda_{sq} \end{bmatrix}$ $\frac{d}{dt} \begin{bmatrix} \lambda_{rd} \\ \lambda_{rq} \end{bmatrix} = \begin{bmatrix} v_{rd} \\ v_{rq} \end{bmatrix} - R_r \begin{bmatrix} i_{rd} \\ i_{rq} \end{bmatrix} - \omega_{dA} \begin{bmatrix} 0 & -1 \\ 1 & 0 \end{bmatrix} \begin{bmatrix} \lambda_{rd} \\ \lambda_{rq} \end{bmatrix}$ $\begin{bmatrix} \lambda_{sd} \\ \lambda_{sq} \\ \lambda_{rd} \\ \lambda_{rq} \end{bmatrix} = \begin{bmatrix} L_s & 0 & L_m & 0 \\ 0 & L_s & 0 & L_m \\ L_m & 0 & L_r & 0 \\ 0 & L_m & 0 & L_r \end{bmatrix} \begin{bmatrix} i_{sd} \\ i_{sq} \\ i_{rd} \\ i_{rq} \end{bmatrix}$
Current	$\begin{bmatrix} i_{sd} \\ i_{sq} \\ i_{rd} \\ i_{rq} \end{bmatrix} = \left(\frac{1}{L_m^2 - L_r L_s} \right) \begin{bmatrix} -L_r & 0 & L_m & 0 \\ 0 & -L_r & 0 & L_m \\ L_m & 0 & -L_s & 0 \\ 0 & L_m & 0 & -L_s \end{bmatrix} \begin{bmatrix} \lambda_{sd} \\ \lambda_{sq} \\ \lambda_{rd} \\ \lambda_{rq} \end{bmatrix}$
Inductance	$L_s = L_{ls} + L_m$ $L_r = L_{lr} + L_m$
Electromagnetic torque	$T_e = PL_m(i_{sq}i_{rd} - i_{sd}i_{rq})$

Calculation	Equation
Power invariant dq transformation to ensure that the dq and three phase powers are equal	$\begin{bmatrix} v_{sd} \\ v_{sq} \end{bmatrix} = \sqrt{\frac{2}{3}}$ $\begin{bmatrix} \cos(\theta_{da}) & \cos(\theta_{da} - \frac{2\pi}{3}) & \cos(\theta_{da} + \frac{2\pi}{3}) \\ -\sin(\theta_{da}) & -\sin(\theta_{da} - \frac{2\pi}{3}) & -\sin(\theta_{da} + \frac{2\pi}{3}) \end{bmatrix} \begin{bmatrix} v_a \\ v_b \\ v_c \end{bmatrix}$ $\begin{bmatrix} i_a \\ i_b \\ i_c \end{bmatrix} = \sqrt{\frac{2}{3}} \begin{bmatrix} \cos(\theta_{da}) & -\sin(\theta_{da}) \\ \cos(\theta_{da} - \frac{2\pi}{3}) & -\sin(\theta_{da} - \frac{2\pi}{3}) \\ \cos(\theta_{da} + \frac{2\pi}{3}) & -\sin(\theta_{da} + \frac{2\pi}{3}) \end{bmatrix}$ $\begin{bmatrix} i_{sd} \\ i_{sq} \end{bmatrix}$

The equations use these variables.

ω_m	Angular velocity of the rotor
ω_{em}	Electrical rotor speed
ω_{slip}	Electrical rotor slip speed
ω_{syn}	Synchronous rotor speed
ω_{da}	dq stator electrical speed with respect to the rotor a-axis
ω_{dA}	dq stator electrical speed with respect to the rotor A-axis
θ_{da}	dq stator electrical angle with respect to the rotor a-axis
θ_{dA}	dq stator electrical angle with respect to the rotor A-axis
L_q, L_d	q- and d-axis inductances
L_s	Stator inductance
L_r	Rotor inductance
L_m	Magnetizing inductance
L_{ls}	Stator leakage inductance

L_{lr}	Rotor leakage inductance
v_{sq}, v_{sd}	Stator q- and d-axis voltages
i_{sq}, i_{sd}	Stator q- and d-axis currents
$\lambda_{sq}, \lambda_{sd}$	Stator q- and d-axis flux
i_{rq}, i_{rd}	Rotor q- and d-axis currents
$\lambda_{rq}, \lambda_{rd}$	Rotor q- and d-axis flux
v_a, v_b, v_c	Stator voltage phases a, b, c
i_a, i_b, i_c	Stator currents phases a, b, c
R_s	Resistance of the stator windings
R_r	Resistance of the rotor windings
P	Number of pole pairs
T_e	Electromagnetic torque

Mechanical System

The motor angular velocity is given by:

$$\frac{d}{dt}\omega_m = \frac{1}{J}(T_e - T_f - F\omega_m - T_m)$$

$$\frac{d\theta_m}{dt} = \omega_m$$

The equations use these variables.

J	Combined inertia of motor and load
F	Combined viscous friction of motor and load
θ_m	Motor mechanical angular position
T_m	Motor shaft torque
T_e	Electromagnetic torque
T_f	Motor shaft static friction torque
ω_m	Angular mechanical velocity of the motor

Power Accounting

For the power accounting, the block implements these equations.

Bus Signal		Description	Variable	Equations
PwrInfo	PwrTrnsfrd — Power transferred between blocks	PwrMtr	Mechanical power	$P_{mot} = -\omega_m T_e$
	<ul style="list-style-type: none"> Positive signals indicate flow into block Negative signals indicate flow out of block 	PwrBus	Electrical power	$P_{bus} = v_{an}i_a + v_{bn}i_b + v_{cn}i_c$
	PwrNotTrnsfrd — Power crossing the block boundary, but not transferred	PwrElecLoss	Resistive power loss	$P_{elec} = -(R_s i_{sd}^2 + R_s i_{sq}^2 + R_r i_{rd}^2 + R_r i_{rq}^2)$
	<ul style="list-style-type: none"> Positive signals indicate an input Negative signals indicate a loss 	PwrMechLoss	Mechanical power loss	<p>When Port Configuration is set to Torque:</p> $P_{mech} = -(\omega_m^2 F + \omega_m T_f)$ <p>When Port Configuration is set to Speed:</p> $P_{mech} = 0$
PwrStored — Stored energy rate of change	PwrMtr Stored	Stored motor power	$P_{str} = P_{bus} + P_{mot} + P_{elec} + P_{mech}$	
<ul style="list-style-type: none"> Positive signals indicate an increase Negative signals indicate a decrease 				

The equations use these variables.

R_s	Stator resistance
R_r	Motor resistance
i_a, i_b, i_c	Stator phase a, b, and c current
i_{sq}, i_{sd}	Stator q- and d-axis currents
v_{an}, v_{bn}, v_{cn}	Stator phase a, b, and c voltage
ω_m	Angular mechanical velocity of the rotor
F	Combined motor and load viscous damping
T_e	Electromagnetic torque
T_f	Combined motor and load friction torque

Ports

Input

LdTrq — Rotor shaft torque

scalar

Rotor shaft input torque, T_m , in N·m.

Dependencies

To create this port, select Torque for the **Port configuration** parameter.

Spd — Rotor shaft speed

scalar

Angular velocity of the rotor, ω_m , in rad/s.

Dependencies

To create this port, select Speed for the **Port configuration** parameter.

PhaseVolt — Stator terminal voltages

1-by-3 array

Stator terminal voltages, V_a , V_b , and V_c , in V.

Output

Info — Bus signal

bus

The bus signal contains these block calculations.

Signal			Description	Variable	Units
IaStator			Stator phase current A	i_a	A
IbStator			Stator phase current B	i_b	A
IcStator			Stator phase current C	i_c	A
IdSync			Direct axis current	i_d	A
IqSync			Quadrature axis current	i_q	A
VdSync			Direct axis voltage	v_d	V
VqSync			Quadrature axis voltage	v_q	V
MtrSpd			Angular mechanical velocity of the rotor	ω_m	rad/s
MtrPos			Rotor mechanical angular position	θ_m	rad
MtrTrq			Electromagnetic torque	T_e	N·m
PwrInfo	PwrTrnsfrd	PwrMtr	Mechanical power	P_{mot}	W
		PwrBus	Electrical power	P_{bus}	W
	PwrNotTrnsfrd	PwrElecLoss	Resistive power loss	P_{elec}	W
		PwrMechLoss	Mechanical power loss	P_{mech}	W
	PwrStored	PwrMtrStored	Stored motor power	P_{str}	W

PhaseCurr — Phase a, b, c current

1-by-3 array

Phase a, b, c current, i_a , i_b , and i_c , in A.

MtrTrq — Motor torque

scalar

Motor torque, T_{mtr} , in N·m.

Dependencies

To create this port, select Speed for the **Port configuration** parameter.

MtrSpd — Motor speed

scalar

Angular speed of the motor, ω_{mtr} , in rad/s.

Dependencies

To create this port, select Torque for the **Port configuration** parameter.

Parameters

Block Options

Simulation Type — Select simulation type

Continuous (default) | Discrete

By default, the block uses a continuous sample time during simulation. If you want to generate code for single-precision targets, considering setting the parameter to Discrete.

Dependencies

Setting **Simulation Type** to Discrete creates the **Sample Time, Ts** parameter.

Sample Time, Ts — Sample time for discrete integration

scalar

Integration sample time for discrete simulation, in s.

Dependencies

Setting **Simulation Type** to Discrete creates the **Sample Time, Ts** parameter.

Port configuration — Select port configuration

Torque (default) | Speed

This table summarizes the port configurations.

Port Configuration	Creates Input Port	Creates Output Port
Torque	LdTrq	MtrSpd
Speed	Spd	MtrTrq

Stator resistance and leakage inductance, Zs – Resistance and inductance

vector

Stator resistance, R_s , in ohms and leakage inductance, L_{ls} , in H.

Rotor resistance and leakage inductance, Zr – Resistance and inductance

vector

Rotor resistance, R_r , in ohms and leakage inductance, L_{lr} , in H.

Magnetizing inductance, Lm – Inductance

scalar

Magnetizing inductance, L_m , in H.

Number of pole pairs, P – Pole pairs

scalar

Motor pole pairs, P .

Initial mechanical position, theta_init – Angular position

scalar

Initial rotor angular position, θ_{m0} , in rad.

Initial mechanical speed, omega_init – Angular speed

scalar

Initial angular velocity of the rotor, ω_{m0} , in rad/s.

Dependencies

To enable this parameter, select Torque for the **Port configuration**.

Physical inertia, viscous damping, static friction, mechanical — Inertia, damping, friction
vector

Mechanical properties of the rotor:

- Inertia, J , in $\text{kg}\cdot\text{m}^2$
- Viscous damping, F , in $\text{N}\cdot\text{m}/(\text{rad}/\text{s})$
- Static friction, T_f , in $\text{N}\cdot\text{m}$

Dependencies

To enable this parameter, select Torque for the **Port configuration**.

References

[1] Mohan, Ned. *Advanced Electric Drives: Analysis, Control and Modeling Using Simulink*. Minneapolis, MN: MNPETE, 2001.

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using Simulink® Coder™.

See Also


Flux-Based PMSM | IM Controller | Interior PMSM | Mapped Motor | Surface Mount PMSM

Introduced in R2017a

IM Controller

Internal torque-based, field-oriented controller for an induction motor with an optional outer-loop speed controller

Library: Powertrain Blockset / Propulsion / Electric Motor Controllers

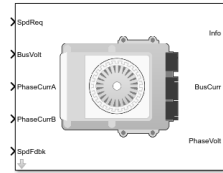


Description

The IM Controller block implements an internal torque-based, field-oriented controller for an induction motor (IM) with an optional outer-loop speed controller. The torque control implements a strategy to control the motor flux. You can specify either speed or torque control.

The IM Controller implements equations for speed control, torque determination, regulators, transforms, and motors.

The figure illustrates the information flow in the block.

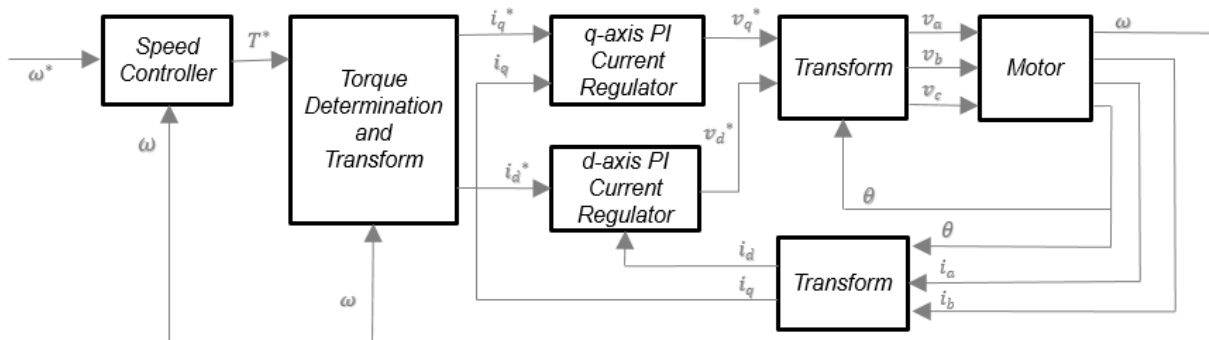


The block implements equations that use these variables.

ω	Rotor speed
ω^*	Rotor speed command
T^*	Torque command
i_d	d-axis current
i_d^*	d-axis current command
i_q	q-axis current
i_q^*	q-axis current command
v_d	d-axis voltage
v_d^*	d-axis voltage command
v_q	q-axis voltage
v_q^*	q-axis voltage command
v_a, v_b, v_c	Stator phase a, b, c voltages
i_a, i_b, i_c	Stator phase a, b, c currents

Speed Controller

To implement the speed controller, select the **Control Type** parameter `Speed Control`. If you select the **Control Type** parameter `Torque Control`, the block does not implement the speed controller.

The speed controller determines the torque command by implementing a state filter, and calculating the feedforward and feedback commands. If you do not implement the speed controller, input a torque command to the IM Controller block.

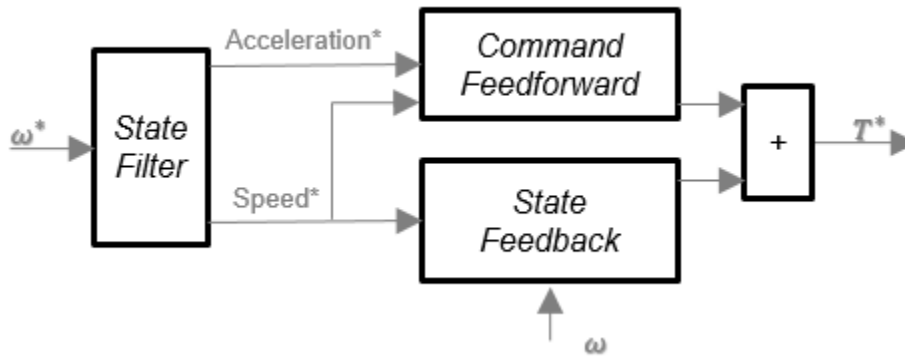

State Filter

The state filter is a low-pass filter that generates the acceleration command based on the speed command. On the **Speed Controller** tab:

- To make the speed-command lag time negligible, specify a **Bandwidth of the state filter** parameter.
- To calculate a **Speed time constant, Ksf** gain based on the state filter bandwidth, select **Calculate Speed Regulator Gains**.

The discrete form of characteristic equation is given by:

$$z + K_{sf}T_{sm} - 1$$

The filter calculates the gain using this equation.

$$K_{sf} = \frac{1 - \exp(-T_{sm}2\pi EV_{sf})}{T_{sm}}$$

The equation uses these variables.

EV_{sf}	Bandwidth of the speed command filter
T_{sm}	Motion controller sample time
K_{sf}	Speed regulator time constant

State Feedback

To generate the state feedback torque, the block uses the filtered speed error signal from the state filter. The feedback torque calculation also requires gains for speed regulator.

On the **Speed Controller** tab, select **Calculate Speed Regulator Gains** to compute:

- **Proportional gain, b_a**
- **Angular gain, K_{sa}**
- **Rotational gain, K_{isa}**

For the gain calculations, the block uses the inertia from the **Physical inertia, viscous damping, static friction** parameter value on the **Motor Parameter** tab.

The gains for the state feedback are calculated using these equations.

Calculation	Equations
Discrete forms of characteristic equation	$z^3 + \frac{(-3J_p + T_s b_a + T_s^2 K_{sa} + T_s^3 K_{isa})}{J_p} z^2 + \frac{(3J_p - 2T_s b_a - T_s^2 K_{sa})}{J_p} z + \frac{-J_p + T_s b_a}{J_p}$ $(z - p_1)(z - p_2)(z - p_3) = z^3 + (p_1 + p_2 + p_3)z^2 + (p_1 p_2 + p_2 p_3 + p_1 p_3)z^2 - p_1 p_2 p_3$
Speed regulator proportional gain	$b_a = \frac{J_p - J_p p_1 p_2 p_3}{T_{sm}}$
Speed regulator integral gain	$K_{sa} = \frac{J_p(p_1 p_2 + p_2 p_3 + p_3 p_1) - 3J_p + 2b_a T_{sm}}{T_{sm}^2}$
Speed regulator double integral gain	$K_{isa} = \frac{-J_p(p_1 + p_2 + p_3) + 3J_p - b_a T_{sm} - K_{sa} T_{sm}^2}{T_{sm}^3}$

The equations use these variables.

- P Motor pole pairs
 b_a Speed regulator proportional gain
 K_{sa} Speed regulator integral gain

K_{isa}	Speed regulator double integral gain
J_p	Motor inertia
T_{sm}	Motion controller sample time

Command Feedforward

To generate the state feedforward torque, the block uses the filtered speed and acceleration from the state filter. Also, the feedforward torque calculation uses the inertia, viscous damping, and static friction. To achieve zero tracking error, the torque command is the sum of the feedforward and feedback torque commands.

Selecting **Calculate Speed Regulator Gains** on the **Speed Controller** tab updates the inertia, viscous damping, and static friction with the **Physical inertia, viscous damping, static friction** parameter values on the **Motor Parameter** tab.

The feedforward torque command uses this equation.

$$T_{cmd_ff} = J_p \dot{\omega}_m + F_v \omega_m + F_s \frac{\omega_m}{|\omega_m|}$$

The equation uses these variables.

J_p	Motor inertia
T_{cmd_ff}	Torque command feedforward
F_s	Static friction torque constant
F_v	Viscous friction torque constant
F_s	Static friction torque constant
ω_m	Rotor mechanical speed

Torque Determination

The block uses a quadrature current to determine the base speed and the current commands. The motor ratings determine the rated electrical speed.

Calculation	Equations
Current commands	$i_{qref} = \frac{T_{cmd}}{i_{sq_0} \cdot P \cdot \left(\frac{L_m^2}{L_r} \right)}$ <p>If $\omega_e \leq \omega_{rated}$ $i_{dref} = i_{sd_0}$</p> <p>Else $i_{dref} = \frac{i_{sd_0}}{ \omega_e }$</p> <p>End</p>
Inductance	$L_r = L_{lr} + L_m$ $L_s = L_{ls} + L_m$

The equations use these variables.

i_{dref}	d-axis reference current
i_{qref}	q-axis reference current
i_{sd_0}	d-axis rated current
i_{sq_0}	q-axis rated current
ω_e	Rotor electrical speed
ω_{rated}	Rated electrical speed
L_{lr}	Rotor leaking inductance
L_r	Rotor winding inductance
L_{ls}	Stator leaking inductance
L_s	Stator winding inductance
L_m	Motor magnetizing inductance
P	Motor pole pairs
T_{cmd}	Commanded motor maximum torque

Current Regulators

The block regulates the current with an anti-windup feature. Classic proportional-integrator (PI) current regulators do not consider the d-axis and q-axis coupling or the

back-electromagnetic force (EMF) coupling. As a result, transient performance deteriorates. To account for the coupling, the block implements the complex vector current regulator (CVCR) in the scalar format of the rotor reference frame. The CVCR decouples:

- d-axis and q-axis current cross-coupling
- Back-EMF cross-coupling

The current frequency response is a first-order system, with a bandwidth of $EV_{current}$.

The block implements these equations.

Calculation	Equations
Motor voltage, in the stator reference frame	$\sigma = 1 - \frac{L_m^2}{L_s L_r}$ $v_{sd} = R_s i_{sd} + \sigma L_s \frac{di_{sd}}{dt} + \frac{L_m}{L_r} \frac{d\lambda_{rd}}{dt} - P\omega_m \sigma L_s i_{sq}$ $v_{sq} = R_s i_{sq} + \sigma L_s \frac{di_{sq}}{dt} + \omega_d \frac{L_m}{L_r} \frac{d\lambda_{rd}}{dt} + P\omega_m \sigma L_s i_{sd}$
Current regulator gains	$\omega_b = 2\pi EV_{current}$ $K_p = \sigma L_d \omega_b$ $K_i = R_s \omega_b$
Transfer functions	$\frac{i_d}{i_{dref}} = \frac{\omega_b}{s + \omega_b}$ $\frac{i_q}{i_{qref}} = \frac{\omega_b}{s + \omega_b}$

The equations use these variables.

$EV_{current}$	Current regulator bandwidth
i_d	d-axis current
i_q	q-axis current
i_{sq}	Stator q-axis current
i_{sd}	Stator d-axis current
v_{sd}	Stator d-axis voltage

v_{sq}	Stator q-axis voltage
K_p	Current regulator d-axis gain
K_i	Current regulator integrator gain
L_s	Stator winding inductance
L_m	Motor magnetizing inductance
L_r	Rotor winding inductance
R_s	Stator phase winding resistance
λ_{rd}	Rotor d-axis magnetic flux
σ	Leakage factor
p	Motor pole pairs

Transforms

To calculate the voltages and currents in balanced three-phase (a, b) quantities, quadrature two-phase (α, β) quantities, and rotating (d, q) reference frames, the block uses the Clarke and Park Transforms.

In the transform equations.

$$\omega_e = P\omega_m$$

$$\frac{d\theta_e}{dt} = \omega_e$$

Transform	Description	Equations
Clarke	Converts balanced three-phase quantities (a, b) into balanced two-phase quadrature quantities (α, β).	$x_\alpha = \frac{2}{3}x_a - \frac{1}{3}x_b - \frac{1}{3}x_c$ $x_\beta = \frac{\sqrt{3}}{2}x_b - \frac{\sqrt{3}}{2}x_c$
Park	Converts balanced two-phase orthogonal stationary quantities (α, β) into an orthogonal rotating reference frame (d, q).	$x_d = x_\alpha \cos\theta_e + x_\beta \sin\theta_e$ $x_q = -x_\alpha \sin\theta_e + x_\beta \cos\theta_e$

Transform	Description	Equations
Inverse Clarke	Converts balanced two-phase quadrature quantities (α, β) into balanced three-phase quantities (a, b).	$x_a = x_a$ $x_b = -\frac{1}{2}x_\alpha + \frac{\sqrt{3}}{2}x_\beta$ $x_c = -\frac{1}{2}x_\alpha - \frac{\sqrt{3}}{2}x_\beta$
Inverse Park	Converts an orthogonal rotating reference frame (d, q) into balanced two-phase orthogonal stationary quantities (α, β).	$x_\alpha = x_d \cos \theta_e - x_q \sin \theta_e$ $x_\beta = x_d \sin \theta_e + x_q \cos \theta_e$

The transforms use these variables.

ω_m	Rotor mechanical speed
P	Motor pole pairs
ω_e	Rotor electrical speed
θ_e	Rotor electrical angle
x	Phase current or voltage

Motor

The block uses the phase currents and phase voltages to estimate the DC bus current. Positive current indicates battery discharge. Negative current indicates battery charge. The block uses these equations.

Load power	$Ld_{Pwr} = v_a i_a + v_b i_b + v_c i_c$
Source power	$Src_{Pwr} = Ld_{Pwr} + Pwr_{Loss}$
DC bus current	$i_{bus} = \frac{Src_{Pwr}}{v_{bus}}$
Estimated rotor torque	$MtrTrq_{est} = P \lambda_{rd} i_{sq} \frac{L_m}{L_r}$
Power loss for single efficiency source to load	$Pwr_{Loss} = \frac{100 - Eff}{Eff} \cdot Ld_{Pwr}$

Power loss for single efficiency load to source	$P_{wrLoss} = \frac{100 - Eff}{100} \cdot Ld_{Pwr} $
Power loss for tabulated efficiency	$P_{wrLoss} = f(\omega_m, MtrTrq_{est})$

The equations use these variables.

v_a, v_b, v_c	Stator phase a, b, c voltages
v_{bus}	Estimated DC bus voltage
i_a, i_b, i_c	Stator phase a, b, c currents
i_{bus}	Estimated DC bus current
Eff	Overall inverter efficiency
ω_m	Rotor mechanical speed
L_r	Rotor winding inductance
L_m	Motor magnetizing inductance
λ_{rd}	Rotor d-axis magnetic flux
i_{sq}	q-axis current
P	Motor pole pairs

Electrical Losses

To specify the electrical losses, on the **Electrical Losses** tab, for **Parameterize losses by**, select one of these options.

Setting	Block Implementation
Single efficiency measurement	Electrical loss calculated using a constant value for inverter efficiency.
Tabulated loss data	Electrical loss calculated as a function of motor speeds and load torques.

Setting	Block Implementation
Tabulated efficiency data	<p>Electrical loss calculated using inverter efficiency that is a function of motor speeds and load torques.</p> <ul style="list-style-type: none"> • Converts the efficiency values you provide into losses and uses the tabulated losses for simulation. • Ignores efficiency values you provide for zero speed or zero torque. Losses are assumed zero when either torque or speed is zero. • Uses linear interpolation to determine losses. Provide tabulated data for low speeds and low torques, as required, to get the desired level of accuracy for lower power conditions. • Does not extrapolate loss values for speed and torque magnitudes that exceed the range of the table.

For best practice, use `Tabulated loss data` instead of `Tabulated efficiency data`:

- Efficiency becomes ill defined for zero speed or zero torque.
- You can account for fixed losses that are still present for zero speed or torque.

Ports

Input

SpdReq — Rotor mechanical speed command

scalar

Rotor mechanical speed command, ω_m^* , in rad/s.

Dependencies

To create this port, select `Speed Control` for the **Control Type** parameter.

TrqCmd — Torque command

scalar

Torque command, T^* , in N·m.

Dependencies

To create this port, select Torque Control for the **Control Type** parameter.

BusVolt — DC bus voltage

scalar

DC bus voltage v_{bus} , in V.

PhaseCurrA — Current

scalar

Stator current phase a, i_a , in A.

PhaseCurrB — Current

scalar

Stator current phase b, i_b , in A.

SpdFdbk — Rotor mechanical speed

scalar

Rotor mechanical speed, ω_m , in rad/s.

Output

Info — Bus signal

bus

Bus signal containing these block calculations.

Signal	Description	Units
SrcPwr	Source power	W
LdPwr	Load power	W
PwrLoss	Power loss	W
MtrTrqEst	Estimated motor torque	N·m

BusCurr — Bus current

scalar

Estimated DC bus current, i_{bus} , in A.

PhaseVolt — Stator terminal voltages

array

Stator terminal voltages, V_a , V_b , and V_c , in V.

Parameters

Block Options**Control Type — Select control**

Speed Control (default) | Torque Control

If you select Torque Control, the block does not implement the speed controller.

This table summarizes the port configurations.

Port Configuration	Creates Ports
Speed Control	SpdReq
Torque Control	TrqCmd

Motor**Stator resistance, Rs — Resistance**

scalar

Stator phase winding resistance, R_s , in ohm.**Dependencies**

This table summarizes the parameter dependencies.

Parameter	Used to Derive	
	Parameter	Tab
Stator resistance, R_s	D-axis rated current, I_{sd_0} Q-axis rated current, I_{sq_0} Torque at rated current, T_{em}	Id and Iq Calculation

Parameter	Used to Derive	
	Parameter	Tab
	D and Q axis integral gain, Ki	Current Controller

Stator leakage inductance, Lls – Inductance

scalar

Stator leakage inductance, L_{ls} , in H.

Dependencies

This table summarizes the parameter dependencies.

Parameter	Used to Derive	
	Parameter	Tab
Stator leakage inductance, Lls	D-axis rated current, Isd_0 Q-axis rated current, Isq_0 Torque at rated current, Tem	Id and Iq Calculation
	D and Q axis proportional gain, Kp D and Q axis integral gain, Ki	Current Controller

Rotor resistance, Rr – Resistance

scalar

Rotor resistance, R_r , in ohm.

Dependencies

This table summarizes the parameter dependencies.

Parameter	Used to Derive	
	Parameter	Tab
Rotor resistance, R_r	D-axis rated current, I_{sd_0}	Id and Iq Calculation
	Q-axis rated current, I_{sq_0}	
	Torque at rated current, T_{em}	

Rotor leakage inductance, L_{lr} – Inductance
scalar

Rotor leakage inductance, L_{lr} , in H.

Dependencies

This table summarizes the parameter dependencies.

Parameter	Used to Derive	
	Parameter	Tab
Rotor leakage inductance, L_{lr}	D-axis rated current, I_{sd_0}	Id and Iq Calculation
	Q-axis rated current, I_{sq_0}	
	Torque at rated current, T_{em}	
	D and Q axis proportional gain, K_p	Current Controller

Rotor magnetizing inductance, L_m – Inductance
scalar

Rotor magnetizing inductance, L_m , in H.

Dependencies

This table summarizes the parameter dependencies.

Parameter	Used to Derive	
	Parameter	Tab
Rotor leakage inductance, L_{lr}	D-axis rated current, I_{sd_0} Q-axis rated current, I_{sq_0} Torque at rated current, T_{em}	Id and Iq Calculation
	D and Q axis proportional gain, K_p	Current Controller

Number of pole pairs, PolePairs — Poles
scalar

Motor pole pairs, P .

Dependencies

This table summarizes the parameter dependencies.

Parameter	Used to Derive	
	Parameter	Tab
Rotor leakage inductance, L_{lr}	Torque at rated current, T_{em}	Id and Iq Calculation

Physical inertia, viscous damping, static friction, Mechanical — Mechanical properties of motor
vector

Mechanical properties of the motor:

- Motor inertia, F_v , in kgm^2
- Viscous friction torque constant, F_v , in $\text{N}\cdot\text{m}/(\text{rad}/\text{s})$
- Static friction torque constant, F_s , in $\text{N}\cdot\text{m}$

Dependencies

To enable this parameter, set the **Control Type** parameter to Speed Control.

For the gain calculations, the block uses the inertia from the **Physical inertia, viscous damping, static friction** parameter value that is on the **Motor Parameters** tab.

Parameter	Used to Derive	
	Parameter	Tab
Physical inertia, viscous damping, static friction, Mechanical	Proportional gain, ba Angular gain, Ksa Rotational gain, Kisa Inertia compensation, Jcomp Viscous damping compensation, Fv Static friction, Fs	Speed Controller

Id and Iq Calculation

Rated synchronous speed, F_{rate} – Motor frequency

scalar

Motor-rated electrical frequency, F_{rate} , in Hz.

Dependencies

This table summarizes the parameter dependencies.

Parameter	Used to Derive	
	Parameter	Tab
Rated synchronous speed, F_{rate}	D-axis rated current, Isd_0 Q-axis rated current, Isq_0 Torque at rated current, Tem	Id and Iq Calculation

Rated line to line voltage RMS, V_{rate} – Motor voltage

scalar

Motor-rated line-to-line voltage, V_{rate} , in V.

Dependencies

This table summarizes the parameter dependencies.

Parameter	Used to Derive	
	Parameter	Tab
Rated synchronous speed, F_{rate}	D-axis rated current, I_{sd_0}	Id and Iq Calculation
	Q-axis rated current, I_{sq_0}	
	Torque at rated current, T_{em}	

Rated slip, S_{rate} — Motor slip speed

scalar

Motor-rated slip speed, S_{rate} , dimensionless.

Dependencies

This table summarizes the parameter dependencies.

Parameter	Used to Derive	
	Parameter	Tab
Rated slip, S_{rate}	D-axis rated current, I_{sd_0}	Id and Iq Calculation
	Q-axis rated current, I_{sq_0}	
	Torque at rated current, T_{em}	

Calculate Rated Stator Flux Current — Derive parameters

button

Click to derive parameters.

Dependencies

On the **Id and Iq Calculation** tab, when you select **Calculate Rated Stator Flux Current**, the block calculates derived parameters. The table summarizes the derived parameters that depend on other block parameters.

Derived Parameter on Id and Iq Calculation tab	Dependency	
	Parameter	Tab
D-axis rated current, Isd_0	Rated synchronous speed, Frate	Id and Iq Calculation
Q-axis rated current, Isq_0	Rated line to line voltage RMS, Vrate	
Torque at rated current, Tem	Rated slip, Srate	
	Stator resistance, Rs	Motor Parameters
	Stator leakage inductance, Lls	
	Rotor resistance, Rr	
	Rotor leakage inductance, Llr	
	Rotor magnetizing inductance, Lm	

D-axis rated current, Isd_0 – Derived scalar

Derived d-axis rated current, in A.

Dependencies

On the **Id and Iq Calculation** tab, when you select **Calculate Rated Stator Flux Current**, the block calculates derived parameters. The table summarizes the derived parameters that depend on other block parameters.

Derived Parameter on Id and Iq Calculation tab	Dependency	
	Parameter	Tab
D-axis rated current, Isd_0	Rated synchronous speed, Frate	Id and Iq Calculation
Q-axis rated current, Isq_0	Rated line to line voltage RMS, Vrate	
Torque at rated current, Tem	Rated slip, Srate	
	Stator resistance, Rs	Motor Parameters
	Stator leakage inductance, Lls	
	Rotor resistance, Rr	
	Rotor leakage inductance, Llr	
	Rotor magnetizing inductance, Lm	

Q-axis rated current, Isq_0 — Derived
scalar

Derived q-axis rated current, in A.

Dependencies

On the **Id and Iq Calculation** tab, when you select **Calculate Rated Stator Flux Current**, the block calculates derived parameters. The table summarizes the derived parameters that depend on other block parameters.

Derived Parameter on Id and Iq Calculation tab	Dependency	
	Parameter	Tab
D-axis rated current, Isd_0	Rated synchronous speed, Frate	Id and Iq Calculation
Q-axis rated current, Isq_0	Rated line to line voltage RMS, Vrate	
Torque at rated current, Tem	Rated slip, Srate	
	Stator resistance, Rs	Motor Parameters
	Stator leakage inductance, Lls	
	Rotor resistance, Rr	
	Rotor leakage inductance, Llr	
	Rotor magnetizing inductance, Lm	

Torque at rated current, Tem – Derived scalar

Torque at rated current, in N·m.

Dependencies

On the **Id and Iq Calculation** tab, when you select **Calculate Rated Stator Flux Current**, the block calculates derived parameters. The table summarizes the derived parameters that depend on other block parameters.

Derived Parameter on Id and Iq Calculation tab	Dependency	
	Parameter	Tab
D-axis rated current, Isd_0	Rated synchronous speed, Frate	Id and Iq Calculation
Q-axis rated current, Isq_0	Rated line to line voltage RMS, Vrate	
Torque at rated current, Tem	Rated slip, Srate	
	Stator resistance, Rs	Motor Parameters
	Stator leakage inductance, Lls	
	Rotor resistance, Rr	
	Rotor leakage inductance, Llr	
	Rotor magnetizing inductance, Lm	

Current Controller

Bandwidth of the current regulator, EV_current — Bandwidth scalar

Current regulator bandwidth, in Hz.

Dependencies

This table summarizes the parameter dependencies.

Parameter	Used to Derive	
	Parameter	Tab
Bandwidth of the current regulator, EV_current	D and Q axis integral gain, Ki D and Q axis proportional gain, Kp	Current Controller

Sample time for the torque control, Tst – Time scalar

Torque control sample time, in s.

Dependencies

This table summarizes the parameter dependencies.

Parameter	Used to Derive	
	Parameter	Tab
Sample time for the torque control, Tst	Speed time constant, Ksf	Speed Controller

Calculate Current Regulator Gains – Derive parameters button

Click to derive parameters.

Dependencies

On the **Current Controller** tab, when you select **Calculate Current Regulator Gains**, the block calculates derived parameters. The table summarizes the derived parameters that depend on other block parameters.

Derived Parameter on Current Controller tab	Dependency	
	Parameter	Tab
D and Q axis proportional gain, Kp	Bandwidth of the current regulator, EV_current	Current Controller
	Stator resistance, Rs	Motor Parameters
D and Q axis integral gain, Ki	Stator leakage inductance, Lls	
	Rotor resistance, Rr	
	Rotor leakage inductance, Llr	
	Rotor magnetizing inductance, Lm	

D and Q axis proportional gain, Kp – Derived scalar

Derived proportional gain, in V/A.

Dependencies

On the **Current Controller** tab, when you select **Calculate Current Regulator Gains**, the block calculates derived parameters. The table summarizes the derived parameters that depend on other block parameters.

Derived Parameter on Current Controller tab	Dependency	
	Parameter	Tab
D and Q axis proportional gain, Kp	Bandwidth of the current regulator, EV_current	Current Controller
D and Q axis integral gain, Ki		

Derived Parameter on Current Controller tab	Dependency	
	Parameter	Tab
	Stator resistance, Rs Stator leakage inductance, Lls Rotor resistance, Rr Rotor leakage inductance, Llr Rotor magnetizing inductance, Lm	Motor Parameters

D and Q axis integral gain, Ki – Derived scalar

Derived integral gain, in V/A*s.

Dependencies

On the **Current Controller** tab, when you select **Calculate Current Regulator Gains**, the block calculates derived parameters. The table summarizes the derived parameters that depend on other block parameters.

Derived Parameter on Current Controller tab	Dependency	
	Parameter	Tab
D and Q axis proportional gain, Kp D and Q axis integral gain, Ki	Bandwidth of the current regulator, EV_current	Current Controller

Derived Parameter on Current Controller tab	Dependency	
	Parameter	Tab
	Stator resistance, Rs Stator leakage inductance, Lls Rotor resistance, Rr Rotor leakage inductance, Llr Rotor magnetizing inductance, Lm	Motor Parameters

Speed Controller

Bandwidth of the motion controller, EV_motion — Bandwidth vector

Motion controller bandwidth, in Hz. Set the first element of the vector to the desired cutoff frequency. Set the second and third elements of the vector to the higher-order cut off frequencies. You can set the value of the next element to 1/5 the value of the previous element. For example, if the desired cutoff frequency is 20 Hz, specify [20 4 0.8].

Dependencies

The parameter is enabled when the **Control Type** parameter is set to Speed Control.

Parameter	Used to Derive	
	Parameter	Tab
Bandwidth of the motion controller, EV_motion	Proportional gain, ba Angular gain, Ksa Rotational gain, Kisa	Speed Controller

Bandwidth of the state filter, EV_sf — Bandwidth scalar

State filter bandwidth, in Hz.

Dependencies

The parameter is enabled when the **Control Type** parameter is set to Speed Control.

Parameter	Used to Derive	
	Parameter	Tab
Bandwidth of the state filter, EV_sf	Speed time constant, Ksf	Speed Controller

Calculate Speed Regulator Gains – Derive parameters

button

Click to derive parameters.

Dependencies

On the **Speed Controller** tab, when you select **Calculate Speed Regulator Gains**, the block calculates derived parameters. The table summarizes the derived parameters that depend on other block parameters.

Derived Parameter on Speed Controller tab		Depends On	
		Parameter	Tab
Proportional gain, ba	$b_a = \frac{J_p - J_p p_1 p_2 p_3}{T_{sm}}$	Bandwidth of the motion controller, EV_motion Bandwidth of the state filter, EV_sf	Speed Controller
Angular gain, Ksa	$K_{sa} = \frac{J_p(p_1 p_2 + p_2 p_3 + p_3 p_1) - 3J_p + 2b_a T_{sm}}{T_{sm}^2}$	Sample time for the torque control, Tst	Current Controller

Derived Parameter on Speed Controller tab		Depends On	
		Parameter	Tab
Rotational gain, K_{isa}	$K_{isa} = \frac{-J_p(p_1 + p_2 + p_3) + 3J_p - b_a T_{sm} - K_e T_{sm}^2}{T_{sm}^3}$	Physical inertia, viscous damping, static friction, Mechanical	Motor Parameters
	Speed time constant, K_{sf}		
Inertia compensation, J_{comp}	$J_{comp} = J_p$	Physical inertia, viscous damping, static friction, Mechanical	Motor Parameters
Viscous damping compensation, F_v	F_v		
Static friction, F_s	F_s		

The equations use these variables.

- P Motor pole pairs
- b_a Speed regulator proportional gain
- K_{sa} Speed regulator integral gain
- K_{isa} Speed regulator double integral gain
- K_{sf} Speed regulator time constant
- J_p Motor inertia
- EV_{sf} State filter bandwidth
- EV_{motion} Motion controller bandwidth

Proportional gain, b_a — Derived scalar

Derived proportional gain, in N·m/(rad/s).

Dependencies

This table summarizes the parameter dependencies.

Parameter	Dependency	
	Parameter	Tab
Proportional gain, k_p	Physical inertia, viscous damping, static friction, Mechanical	Motor Parameters
	Bandwidth of the motion controller, EV_motion	Speed Controller

Angular gain, K_{sa} – Derived

scalar

Derived angular gain, in N·m/rad.

Dependencies

This table summarizes the parameter dependencies.

Parameter	Dependency	
	Parameter	Tab
Angular gain, K_{sa}	Physical inertia, viscous damping, static friction, Mechanical	Motor Parameters
	Bandwidth of the motion controller, EV_motion	Speed Controller

Rotational gain, K_{isa} – Derived

scalar

Derived rotational gain, in N·m/(rad*s).

Dependencies

This table summarizes the parameter dependencies.

Parameter	Dependency	
	Parameter	Tab
Rotational gain, Kisa	Physical inertia, viscous damping, static friction, Mechanical	Motor Parameters
	Bandwidth of the motion controller, EV_motion	Speed Controller

Speed time constant, Ksf — Derived
scalar

Derived speed time constant, in 1/s.

Dependencies

This table summarizes the parameter dependencies.

Parameter	Dependency	
	Parameter	Tab
Speed time constant, Ksf	Sample time for the torque control, Tst	Current Controller
	Bandwidth of the state filter, EV_sf	Speed Controller

Inertia compensation, Jcomp — Derived
scalar

Derived inertia compensation, in $\text{kg}\cdot\text{m}^2$.

Dependencies

This table summarizes the parameter dependencies.

Parameter	Dependency	
	Parameter	Tab
Inertia compensation, Jcomp	Physical inertia, viscous damping, static friction, Mechanical	Motor Parameters

Viscous damping compensation, F_v – Derived scalar

Dependencies

This table summarizes the parameter dependencies.

Parameter	Dependency	
	Parameter	Tab
Viscous damping compensation, F_v	Physical inertia, viscous damping, static friction, Mechanical	Motor Parameters

Static friction, F_s – Derived scalar

Derived static friction, in N·m/(rad/s).

Dependencies

This table summarizes the parameter dependencies.

Parameter	Dependency	
	Parameter	Tab
Static friction, F_s	Physical inertia, viscous damping, static friction, Mechanical	Motor Parameters

Electrical Losses

Parameterize losses by – Select type

Single efficiency measurement (default) | Tabulated loss data | Tabulated efficiency data

Setting	Block Implementation
Single efficiency measurement	Electrical loss calculated using a constant value for inverter efficiency.
Tabulated loss data	Electrical loss calculated as a function of motor speeds and load torques.

Setting	Block Implementation
Tabulated efficiency data	<p>Electrical loss calculated using inverter efficiency that is a function of motor speeds and load torques.</p> <ul style="list-style-type: none"> • Converts the efficiency values you provide into losses and uses the tabulated losses for simulation. • Ignores efficiency values you provide for zero speed or zero torque. Losses are assumed zero when either torque or speed is zero. • Uses linear interpolation to determine losses. Provide tabulated data for low speeds and low torques, as required, to get the desired level of accuracy for lower power conditions. • Does not extrapolate loss values for speed and torque magnitudes that exceed the range of the table.

For best practice, use Tabulated loss data instead of Tabulated efficiency data:

- Efficiency becomes ill defined for zero speed or zero torque.
- You can account for fixed losses that are still present for zero speed or torque.

Overall inverter efficiency, *eff* – Constant
 scalar

Overall inverter efficiency, *Eff*, in %.

Dependencies

To enable this parameter, for **Parameterize losses by**, select Tabulated loss data.

Vector of speeds (*w*) for tabulated loss, *w_loss_bp* – Breakpoints
 1-by-M matrix

Speed breakpoints for lookup table when calculating losses, in rad/s.

Dependencies

To enable this parameter, for **Parameterize losses by**, select Tabulated loss data.

Vector of torques (T) for tabulated loss, T_loss_bp – Breakpoints

1-by-N matrix

Torque breakpoints for lookup table when calculating losses, in N·m.

Dependencies

To enable this parameter, for **Parameterize losses by**, select Tabulated loss data.

Corresponding losses, losses_table – Table

M-by-N matrix

Array of values for electrical losses as a function of M speeds and N torques, in W. Each value specifies the losses for a specific combination of speed and torque. The matrix size must match the dimensions defined by the speed and torque vectors.

Dependencies

To enable this parameter, for **Parameterize losses by**, select Tabulated loss data.

Vector of speeds (w) for tabulated efficiency, w_eff_bp – Breakpoints

1-by-M matrix

Speed breakpoints for lookup table when calculating efficiency, in rad/s.

Dependencies

To enable this parameter, for **Parameterize losses by**, select Tabulated efficiency data.

Vector of torques (T) for tabulated efficiency, T_eff_bp – Breakpoints

1-by-N matrix

Torque breakpoints for lookup table when calculating efficiency, in N·m.

Dependencies

To enable this parameter, for **Parameterize losses by**, select Tabulated efficiency data.

Corresponding efficiency, efficiency_table – Table

M-by-N matrix

Array of efficiency as a function of M speeds and N torque, in %. Each value specifies the efficiency for a specific combination of speed and torque. The matrix size must match the dimensions defined by the speed and torque vectors.

The block ignores efficiency values for zero speed or zero torque. Losses are zero when either torque or speed is zero. The block uses linear interpolation.

To get the desired level of accuracy for lower power conditions, you can provide tabulated data for low speeds and low torques.

Dependencies

To enable this parameter, for **Parameterize losses by**, select Tabulated efficiency data.

References

- [1] Lorenz, Robert D., Thomas Lipo, and Donald W. Novotny. "Motion control with induction motors." *Proceedings of the IEEE*, Vol. 82, Issue 8, August 1994, pp. 1215-1240.
- [2] Shigeo Morimoto, Masayuka Sanada, Yoji Takeda. "Wide-speed operation of interior permanent magnet synchronous motors with high-performance current regulator." *IEEE Transactions on Industry Applications*, Vol. 30, Issue 4, July/August 1994, pp. 920-926.
- [3] Muyang Li. "Flux-Weakening Control for Permanent-Magnet Synchronous Motors Based on Z-Source Inverters." Master's Thesis, Marquette University, e-Publications@Marquette, Fall 2014.
- [4] Briz, Fernando, Michael W. Degner, and Robert D. Lorenz. "Analysis and design of current regulators using complex vectors." *IEEE Transactions on Industry Applications*, Vol. 36, Issue 3, May/June 2000, pp. 817-825.
- [5] Briz, Fernando, et al. "Current and flux regulation in field-weakening operation [of induction motors]." *IEEE Transactions on Industry Applications*, Vol. 37, Issue 1, Jan/Feb 2001, pp. 42-50.

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using Simulink® Coder™.

See Also


Flux-Based PM Controller | Induction Motor | Interior PM Controller | Surface Mount PM Controller

Introduced in R2017a

Surface Mount PMSM

Three-phase exterior permanent magnet synchronous motor with sinusoidal back electromotive force

Library: Powertrain Blockset / Propulsion / Electric Motors

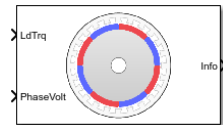

Description

The Surface Mount PMSM block implements a three-phase exterior permanent magnet synchronous motor (PMSM) with sinusoidal back electromotive force. The block uses the three-phase input voltages to regulate the individual phase currents, allowing control of the motor torque or speed.


By default, the block sets the **Simulation type** parameter to **Continuous** to use a continuous sample time during simulation. If you want to generate code for fixed-step double- and single-precision targets, considering setting the parameter to **Discrete**. Then specify a **Sample Time, Ts** parameter.

On the **Parameters** tab, if you select **Back-emf** or **Torque constant**, the block implements one of these equations to calculate the permanent flux linkage constant.

Setting	Equation
Back-emf	$\lambda_{pm} = \frac{1}{\sqrt{3}} \cdot \frac{K_e}{1000P} \cdot \frac{60}{2\pi}$
Torque constant	$\lambda_{pm} = \frac{2}{3} \cdot \frac{K_t}{P}$

Motor Construction

This figure shows the motor construction with a single pole pair on the motor.

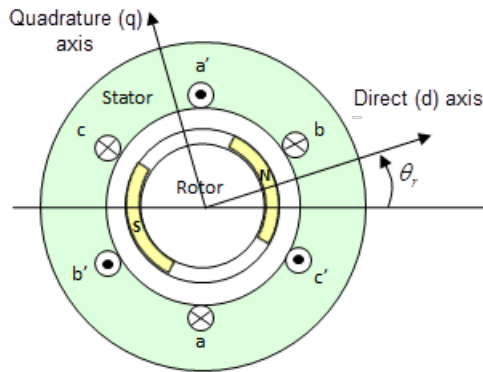

The motor magnetic field due to the permanent magnets creates a sinusoidal rate of change of flux with motor angle.

For the axes convention, the a -phase and permanent magnet fluxes are aligned when motor angle θ_r is zero.

Three-Phase Sinusoidal Model Electrical System

The block implements these equations, expressed in the motor flux reference frame (dq frame). All quantities in the motor reference frame are referred to the stator.

$$\omega_e = P\omega_m$$

$$\frac{d}{dt}i_d = \frac{1}{L_d}v_d - \frac{R}{L_d}i_d + \frac{L_q}{L_d}P\omega_m i_q$$

$$\frac{d}{dt}i_q = \frac{1}{L_q}v_q - \frac{R}{L_q}i_q - \frac{L_d}{L_q}P\omega_m i_d - \frac{\lambda_{pm}P\omega_m}{L_q}$$

$$T_e = 1.5P[\lambda_{pm}i_q + (L_d - L_q)i_d i_q]$$

The L_q and L_d inductances represent the relation between the phase inductance and the motor position due to the saliency of the motor magnets. For the surface mount PMSM, $L_d = L_q$.

The equations use these variables.

L_q, L_d	q- and d-axis inductances
R	Resistance of the stator windings
i_q, i_d	q- and d-axis currents
v_q, v_d	q- and d-axis voltages
ω_m	Angular mechanical velocity of the motor
ω_e	Angular electrical velocity of the motor
λ_{pm}	Permanent magnet flux linkage
K_e	Back electromotive force (EMF)
K_t	Torque constant
P	Number of pole pairs
T_e	Electromagnetic torque
Θ_e	Electrical angle

Mechanical System

The motor angular velocity is given by:

$$\frac{d}{dt}\omega_m = \frac{1}{J}(T_e - T_f - F\omega_m - T_m)$$
$$\frac{d\theta_m}{dt} = \omega_m$$

The equations use these variables.

J	Combined inertia of motor and load
F	Combined viscous friction of motor and load
θ_m	Motor mechanical angular position
T_m	Motor shaft torque
T_e	Electromagnetic torque
T_f	Motor shaft static friction torque
ω_m	Angular mechanical velocity of the motor

Power Accounting

For the power accounting, the block implements these equations.

Bus Signal		Description	Variable	Equations
PwrInfo	PwrTrnsfrd — Power transferred between blocks	PwrMtr	Mechanical power	$P_{mot} = -\omega_m T_e$
	<ul style="list-style-type: none"> Positive signals indicate flow into block Negative signals indicate flow out of block 	PwrBus	Electrical power	$P_{bus} = v_{an}i_a + v_{bn}i_b + v_{cn}i_c$
	PwrNotTrnsfrd — Power crossing the block boundary, but not transferred	PwrElecLoss	Resistive power loss	$P_{elec} = -\frac{3}{2}(R_s i_{sd}^2 + R_s i_{sq}^2)$
	<ul style="list-style-type: none"> Positive signals indicate an input Negative signals indicate a loss 	PwrMechLoss	Mechanical power loss	<p>When Port Configuration is set to Torque:</p> $P_{mech} = -(\omega_m^2 F + \omega_m T_f)$ <p>When Port Configuration is set to Speed:</p> $P_{mech} = 0$
	PwrStored — Stored energy rate of change	PwrMtr Stored	Stored motor power	$P_{str} = P_{bus} + P_{mot} + P_{elec} + P_{mech}$
<ul style="list-style-type: none"> Positive signals indicate an increase Negative signals indicate a decrease 				

The equations use these variables.

R_s	Stator resistance
i_a, i_b, i_c	Stator phase a, b, and c current
i_{sq}, i_{sd}	Stator q- and d-axis currents
v_{an}, v_{bn}, v_{cn}	Stator phase a, b, and c voltage
ω_m	Angular mechanical velocity of the motor
F	Combined motor and load viscous damping
T_e	Electromagnetic torque
T_f	Combined motor and load friction torque

Ports

Input

LdTrq — Motor shaft torque

scalar

Motor shaft input torque, T_m , in N·m.

Dependencies

To create this port, select Torque for the **Port Configuration** parameter.

Spd — Motor shaft speed

scalar

Angular velocity of the motor, ω_m , in rad/s.

Dependencies

To create this port, select Speed for the **Port Configuration** parameter.

PhaseVolt — Stator terminal voltages

1-by-3 array

Stator terminal voltages, V_a , V_b , and V_c , in V.

Output

Info — Bus signal

bus

The bus signal contains these block calculations.

Signal			Description	Variable	Units
IaStator			Stator phase current A	i_a	A
IbStator			Stator phase current B	i_b	A
IcStator			Stator phase current C	i_c	A
IdSync			Direct axis current	i_d	A
IqSync			Quadrature axis current	i_q	A
VdSync			Direct axis voltage	v_d	V
VqSync			Quadrature axis voltage	v_q	V
MtrSpd			Angular mechanical velocity of the motor	ω_m	rad/s
MtrPos			Motor mechanical angular position	θ_m	rad
MtrTrq			Electromagnetic torque	T_e	N·m
PwrInfo	PwrTrnsfrd	PwrMtr	Mechanical power	P_{mot}	W
		PwrBus	Electrical power	P_{bus}	W
	PwrNotTrnsfrd	PwrEleLoss	Resistive power loss	P_{elec}	W
		PwrMechLoss	Mechanical power loss	P_{mech}	W
	PwrStored	PwrMtrStored	Stored motor power	P_{str}	W

PhaseCurr — Phase a, b, c current

1-by-3 array

Phase a, b, c current, i_a , i_b , and i_c , in A.

MtrTrq — Motor torque

scalar

Motor torque, T_{mtr} , in N·m.

Dependencies

To create this port, select Speed for the **Mechanical input configuration** parameter.

MtrSpd — Motor speed

scalar

Angular speed of the motor, ω_{mtr} , in rad/s.

Dependencies

To create this port, select Torque for the **Mechanical input configuration** parameter.

Parameters

Block Options

Mechanical input configuration — Select port configuration

Torque (default) | Speed

This table summarizes the port configurations.

Port Configuration	Creates Input Port	Creates Output Port
Torque	LdTrq	MtrSpd
Speed	Spd	MtrTrq

Simulation type — Select simulation type

Continuous (default) | Discrete

By default, the block uses a continuous sample time during simulation. If you want to generate code for single-precision targets, considering setting the parameter to Discrete.

Dependencies

Setting **Simulation type** to Discrete creates the **Sample Time, Ts** parameter.

Sample Time (Ts) – Sample time for discrete integration

scalar

Integration sample time for discrete simulation, in s.

Dependencies

Setting **Simulation type** to Discrete creates the **Sample Time, Ts** parameter.

Parameters**Number of pole pairs (P) – Pole pairs**

scalar

Motor pole pairs, P .

Stator phase resistance per phase (Rs) – Resistance

scalar

Stator phase resistance per phase, R_s , in ohm.

Stator d-axis inductance (Ldq_) – Inductance

scalar

Stator inductance, L_{dq} , in H.

Permanent flux linkage constant (lambda_pm) – Flux

scalar

Permanent flux linkage constant, λ_{pm} , in Wb.

Back-emf constant (Ke) – Back electromotive force

scalar

Back electromotive force, EMF, K_e , in peak Vpk_LL/krpm. Vpk_LL is the peak voltage line-to-line measurement.

To calculate the permanent flux linkage constant, the block implements this equation.

$$\lambda_{pm} = \frac{1}{\sqrt{3}} \cdot \frac{K_e}{1000P} \cdot \frac{60}{2\pi}$$

Torque constant (Kt) – Torque constant

scalar

Torque constant, K_t , in N·m/A.

To calculate the permanent flux linkage constant, the block implements this equation.

$$\lambda_{pm} = \frac{2}{3} \cdot \frac{K_t}{P}$$

Physical inertia, viscous damping, and static friction (mechanical) — Inertia, damping, friction

vector

Mechanical properties of the motor:

- Inertia, J , in kgm²
- Viscous damping, F , in N·m/(rad/s)
- Static friction, T_f , in N·m

Dependencies

To enable this parameter, select the Torque configuration parameter.

Initial Values

Initial d-axis and q-axis current (idq0) — Current

vector

Initial q- and d-axis currents, i_q , i_d , in A.

Initial mechanical position (theta_init) — Angle

scalar

Initial motor angular position, θ_{m0} , in rad.

Initial mechanical speed (omega_init) — Speed

scalar

Initial angular velocity of the motor, ω_{m0} , in rad/s.

Dependencies

To enable this parameter, select the Torque configuration parameter.

References

- [1] Kundur, P. *Power System Stability and Control*. New York, NY: McGraw Hill, 1993.
- [2] Anderson, P. M. *Analysis of Faulted Power Systems*. Hoboken, NJ: Wiley-IEEE Press, 1995.

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using Simulink® Coder™.

See Also


Flux-Based PMSM | Induction Motor | Interior PMSM | Mapped Motor | Surface Mount PM Controller

Introduced in R2017a

Surface Mount PM Controller

Torque-based, field-oriented controller for a surface mount permanent magnet synchronous motor

Library: Powertrain Blockset / Propulsion / Electric Motors

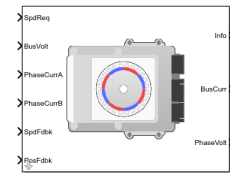


Description

The Surface Mount PM Controller block implements a torque-based, field-oriented controller for a surface mount permanent magnet synchronous motor (PMSM) with an optional outer-loop speed controller. The torque control utilizes quadrature current and does not weaken the magnetic flux. You can specify either speed or torque control.

The Surface Mount PM Controller implements equations for speed control, torque determination, regulators, transforms, and motors.

The figure illustrates the information flow in the block.

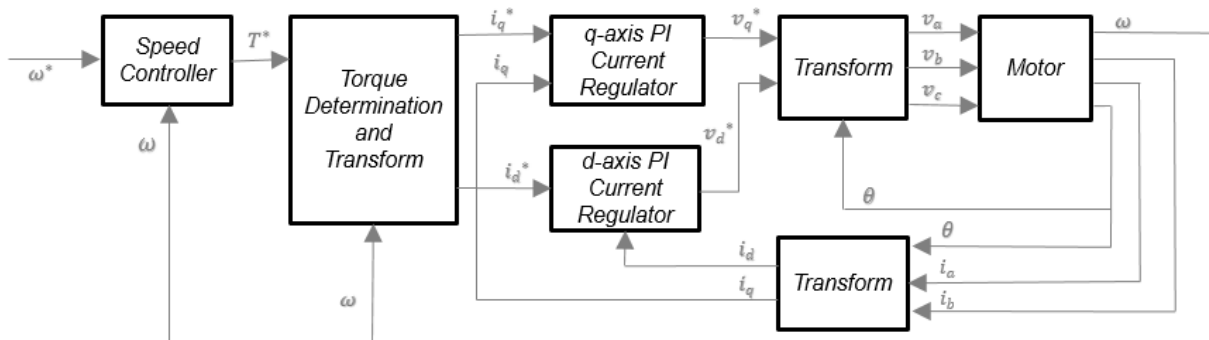


The block implements equations that use these variables.

ω	Rotor speed
ω^*	Rotor speed command
T^*	Torque command
i_d	d-axis current
i_d^*	d-axis current command
i_q	q-axis current
i_q^*	q-axis current command
v_d	d-axis voltage
v_d^*	d-axis voltage command
v_q	q-axis voltage
v_q^*	q-axis voltage command
v_a, v_b, v_c	Stator phase a, b, c voltages
i_a, i_b, i_c	Stator phase a, b, c currents

Speed Controller

To implement the speed controller, select the **Control Type** parameter `Speed Control`. If you select the **Control Type** parameter `Torque Control`, the block does not implement the speed controller.

The speed controller determines the torque command by implementing a state filter, and calculating the feedforward and feedback commands. If you do not implement the speed controller, input a torque command to the Surface Mount PM Controller block.

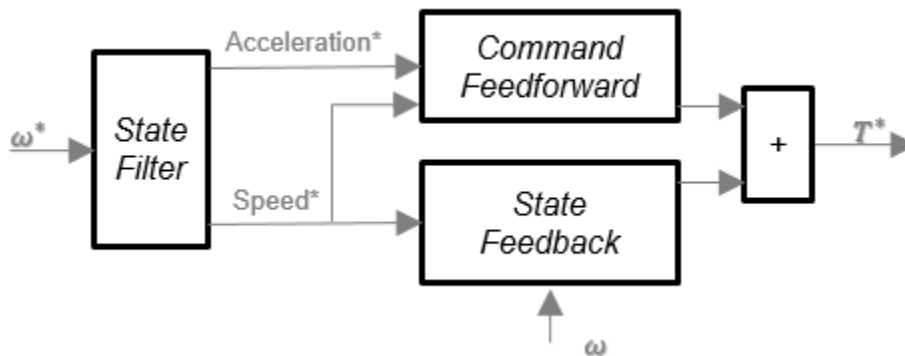

State Filter

The state filter is a low-pass filter that generates the acceleration command based on the speed command. On the **Speed Controller** tab:

- To make the speed-command lag time negligible, specify a **Bandwidth of the state filter** parameter.
- To calculate a **Speed time constant, Ksf** gain based on the state filter bandwidth, select **Calculate Speed Regulator Gains**.

The discrete form of characteristic equation is given by:

$$z + K_{sf}T_{sm} - 1$$

The filter calculates the gain using this equation.

$$K_{sf} = \frac{1 - \exp(-T_{sm}2\pi EV_{sf})}{T_{sm}}$$

The equations use these variables.

EV_{sf}	Bandwidth of the speed command filter
T_{sm}	Motion controller sample time
K_{sf}	Speed regulator time constant

State Feedback

To generate the state feedback torque, the block uses the filtered speed error signal from the state filter. The feedback torque calculation also requires gains for speed regulator.

On the **Speed Controller** tab, select **Calculate Speed Regulator Gains** to calculate:

- **Proportional gain, b_a**
- **Angular gain, K_{sa}**
- **Rotational gain, K_{isa}**

For the gain calculations, the block uses the inertia from the **Physical inertia, viscous damping, static friction** parameter value on the **Motor Parameters** tab.

The gains for the state feedback are calculated using these equations.

Calculation	Equations
Discrete forms of characteristic equation	$z^3 + \frac{(-3J_p + T_s b_a + T_s^2 K_{sa} + T_s^3 K_{isa})}{J_p} z^2 + \frac{(3J_p - 2T_s b_a - T_s^2 K_{sa})}{J_p} z + \frac{-J_p + T_s b_a}{J_p}$ $(z - p_1)(z - p_2)(z - p_3) = z^3 + (p_1 + p_2 + p_3)z^2 + (p_1 p_2 + p_2 p_3 + p_1 p_3)z^2 - p_1 p_2 p_3$
Speed regulator proportional gain	$b_a = \frac{J_p - J_p p_1 p_2 p_3}{T_{sm}}$
Speed regulator integral gain	$K_{sa} = \frac{J_p(p_1 p_2 + p_2 p_3 + p_3 p_1) - 3J_p + 2b_a T_{sm}}{T_{sm}^2}$
Speed regulator double integral gain	$K_{isa} = \frac{-J_p(p_1 + p_2 + p_3) + 3J_p - b_a T_{sm} - K_{sa} T_{sm}^2}{T_{sm}^3}$

The equations use these variables.

P	Motor pole pairs
b_a	Speed regulator proportional gain
K_{sa}	Speed regulator integral gain

K_{isa}	Speed regulator double integral gain
J_p	Motor inertia
T_{sm}	Motion controller sample time

Command Feedforward

To generate the state feedforward torque, the block uses the filtered speed and acceleration from the state filter. Also, the feedforward torque calculation uses the inertia, viscous damping, and static friction. To achieve zero tracking error, the torque command is the sum of the feedforward and feedback torque commands.

Selecting **Calculate Speed Regulator Gains** on the **Speed Controller** tab updates the inertia, viscous damping, and static friction with the **Physical inertia, viscous damping, static friction** parameter values on the **Motor Parameters** tab.

The feedforward torque command uses this equation.

$$T_{cmd_ff} = J_p \dot{\omega}_m + F_v \omega_m + F_s \frac{\omega_m}{|\omega_m|}$$

The equation uses these variables.

J_p	Motor inertia
T_{cmd_ff}	Torque command feedforward
F_s	Static friction torque constant
F_v	Viscous friction torque constant
F_s	Static friction torque constant
ω_m	Rotor speed

Torque Determination

The block uses a quadrature current to determine the base speed and the current commands. The available bus voltage determines the base speed. The direct (d) and quadrature (q) permanent magnet (PM) determines the induced voltage.

Calculation	Equations
Motor maximum torque	$T_{max} = \frac{3}{2}P(\lambda_{pm}i_q + (L_d - L_q)i_d i_q)$
Maximum q-axis phase current	$i_{q_max} = \frac{T_{cmd}}{\frac{3}{2}P\lambda_{pm}}$
Electrical base speed	$\omega_{base} = \frac{v_{max}}{\sqrt{(L_q i_q)^2 + (\lambda_{pm})^2}}$
d-axis voltage	$v_d = -\omega_e L_q i_{q_max}$
q-axis voltage	$v_q = \omega_e \lambda_{pm}$
Maximum phase current	$i_{max} = i_{q_max} $
Maximum voltage	$v_{max} = \frac{v_{bus}}{\sqrt{3}}$
Current command	$i_{dref} = 0$ $i_{q_tmp} = \min(i_{q_max}, \frac{T_{cmd}}{\frac{3}{2}P\lambda_{pm}})$ <p>If $\omega_e \leq \omega_{base}$ $i_{qref} = i_{q_tmp}$</p> <p>Else</p> $i_{qfw} = \text{sqrt}(\min(0, \frac{1}{L_q}((\frac{v_{max}}{\omega_e})^2 - (\lambda_{pm})^2)))$ <p>If $i_{q_tmp} < i_{qfw}$ $i_{qref} = i_{q_tmp}$</p> <p>Else $i_{qref} = i_{qfw}$</p> <p>End</p> <p>End</p>

The equations use these variables.

i_{max}	Maximum phase current
i_d	d-axis current
i_q	q-axis current
i_{dref}	d-axis reference current

i_{qref}	q-axis reference current
i_{q_max}	Maximum q-axis phase current
ω_e	Rotor electrical speed
λ_{pm}	Permanent magnet flux linkage
v_d	d-axis voltage
v_q	q-axis voltage
v_{max}	Maximum line to neutral voltage
v_{bus}	DC bus voltage
L_d	d-axis winding inductance
L_q	q-axis winding inductance
P	Motor pole pairs
T_{max}	Motor maximum torque
T_{cmd}	Commanded motor maximum torque

Current Regulators

The block regulates the current with an anti-windup feature. Classic proportional-integrator (PI) current regulators do not consider the d-axis and q-axis coupling or the back-electromagnetic force (EMF) coupling. As a result, transient performance deteriorates. To account for the coupling, the block implements the complex vector current regulator (CVCR) in the scalar format of the rotor reference frame. The CVCR decouples:

- d-axis and q-axis current cross-coupling
- back-EMF cross-coupling

The current frequency response is a first-order system, with a bandwidth of $EV_{current}$.

The block implements these equations.

Calculation	Equations
Motor voltage, in the rotor reference frame	$L_d \frac{di_d}{dt} = v_d - R_s i_d + p \omega_m L_q i_q$ $L_d \frac{di_q}{dt} = v_q - R_s i_q - p \omega_m L_d i_d - p \omega_m \lambda_{pm}$

Calculation	Equations
Current regulator gains	$\omega_b = 2\pi EV_{current}$ $K_{p_d} = L_d \omega_b$ $K_{p_q} = L_q \omega_b$ $K_i = R_s \omega_b$
Transfer functions	$\frac{i_d}{i_{dref}} = \frac{\omega_b}{s + \omega_b}$ $\frac{i_q}{i_{qref}} = \frac{\omega_b}{s + \omega_b}$

The equations use these variables.

$EV_{current}$	Current regulator bandwidth
i_d	d-axis current
i_q	q-axis current
K_{p_d}	Current regulator d-axis gain
K_{p_q}	Current regulator q-axis gain
K_i	Current regulator integrator gain
L_d	d-axis winding inductance
L_q	q-axis winding inductance
R_s	Stator phase winding resistance
ω_m	Rotor speed
v_d	d-axis voltage
v_q	q-axis voltage
λ_{pm}	Permanent magnet flux linkage
P	Motor pole pairs

Transforms

To calculate the voltages and currents in balanced three-phase (a, b) quantities, quadrature two-phase (α, β) quantities, and rotating (d, q) reference frames, the block uses the Clarke and Park Transforms.

In the transform equations.

$$\omega_e = P\omega_m$$

$$\frac{d\theta_e}{dt} = \omega_e$$

Transform	Description	Equations
Clarke	Converts balanced three-phase quantities (a, b) into balanced two-phase quadrature quantities (α, β).	$x_\alpha = \frac{2}{3}x_a - \frac{1}{3}x_b - \frac{1}{3}x_c$ $x_\beta = \frac{\sqrt{3}}{2}x_b - \frac{\sqrt{3}}{2}x_c$
Park	Converts balanced two-phase orthogonal stationary quantities (α, β) into an orthogonal rotating reference frame (d, q).	$x_d = x_\alpha \cos\theta_e + x_\beta \sin\theta_e$ $x_q = -x_\alpha \sin\theta_e + x_\beta \cos\theta_e$
Inverse Clarke	Converts balanced two-phase quadrature quantities (α, β) into balanced three-phase quantities (a, b).	$x_a = x_\alpha$ $x_b = -\frac{1}{2}x_\alpha + \frac{\sqrt{3}}{2}x_\beta$ $x_c = -\frac{1}{2}x_\alpha - \frac{\sqrt{3}}{2}x_\beta$
Inverse Park	Converts an orthogonal rotating reference frame (d, q) into balanced two-phase orthogonal stationary quantities (α, β).	$x_\alpha = x_d \cos\theta_e - x_q \sin\theta_e$ $x_\beta = x_d \sin\theta_e + x_q \cos\theta_e$

The transforms use these variables.

ω_m	Rotor speed
P	Motor pole pairs
ω_e	Rotor electrical speed
θ_e	Rotor electrical angle
x	Phase current or voltage

Motor

The block uses the phase currents and phase voltages to estimate the DC bus current. Positive current indicates battery discharge. Negative current indicates battery charge. The block uses these equations.

Load power	$Ld_{Pwr} = v_a i_a + v_b i_b + v_c i_c$
Source power	$Src_{Pwr} = Ld_{Pwr} + Pwr_{Loss}$
DC bus current	$i_{bus} = \frac{Src_{Pwr}}{v_{bus}}$
Estimated rotor torque	$MtrTrq_{est} = 1.5P[\lambda i_q + (L_d - L_q)i_d i_q]$
Power loss for single efficiency source to load	$Pwr_{Loss} = \frac{100 - Eff}{Eff} \cdot Ld_{Pwr}$
Power loss for single efficiency load to source	$Pwr_{Loss} = \frac{100 - Eff}{100} \cdot Ld_{Pwr} $
Power loss for tabulated efficiency	$Pwr_{Loss} = f(\omega_m, MtrTrq_{est})$

The equations use these variables.

v_a, v_b, v_c	Stator phase a, b, c voltages
v_{bus}	Estimated DC bus voltage
i_a, i_b, i_c	Stator phase a, b, c currents
i_{bus}	Estimated DC bus current
Eff	Overall inverter efficiency
ω_m	Rotor mechanical speed
L_q	q-axis winding inductance
L_d	d-axis winding inductance
i_q	q-axis current
i_d	d-axis current
λ	Permanent magnet flux linkage
P	Motor pole pairs

Electrical Losses

To specify the electrical losses, on the **Electrical Losses** tab, for **Parameterize losses by**, select one of these options.

Setting	Block Implementation
Single efficiency measurement	Electrical loss calculated using a constant value for inverter efficiency.
Tabulated loss data	Electrical loss calculated as a function of motor speeds and load torques.
Tabulated efficiency data	<p>Electrical loss calculated using inverter efficiency that is a function of motor speeds and load torques.</p> <ul style="list-style-type: none"> • Converts the efficiency values you provide into losses and uses the tabulated losses for simulation. • Ignores efficiency values you provide for zero speed or zero torque. Losses are assumed zero when either torque or speed is zero. • Uses linear interpolation to determine losses. Provide tabulated data for low speeds and low torques, as required, to get the desired level of accuracy for lower power conditions. • Does not extrapolate loss values for speed and torque magnitudes that exceed the range of the table.

For best practice, use **Tabulated loss data** instead of **Tabulated efficiency data**:

- Efficiency becomes ill defined for zero speed or zero torque.
- You can account for fixed losses that are still present for zero speed or torque.

Ports

Input

SpdReq — Rotor speed command
scalar

Rotor speed command, ω_m^* , in rad/s.

Dependencies

To create this port, select Speed Control for the **Control Type** parameter.

TrqCmd — Torque command

scalar

Torque command, T^* , in N·m.

Dependencies

To create this port, select Torque Control for the **Control Type** parameter.

BusVolt — DC bus voltage

scalar

DC bus voltage v_{bus} , in V.

PhaseCurrA — Current

scalar

Stator current phase a, i_a , in A.

PhaseCurrB — Current

scalar

Stator current phase b, i_b , in A.

SpdFdbk — Rotor speed

scalar

Rotor speed, ω_m , in rad/s.

PosFdbk — Rotor electrical angle

scalar

Rotor electrical angle, θ_m , in rad.

Output

Info — Bus signal

bus

Bus signal containing these block calculations.

Signal	Description	Units
SrcPwr	Source power	W
LdPwr	Load power	W
PwrLoss	Power loss	W
MtrTrqEst	Estimated motor torque	N·m

BusCurr — Bus current

scalar

Estimated DC bus current, i_{bus} , in A.

PhaseVolt — Stator terminal voltages

array

Stator terminal voltages, V_a , V_b , and V_c , in V.

Parameters

Configuration

Control Type — Select control

Speed Control (default) | Torque Control

If you select Torque Control, the block does not implement the speed controller.

This table summarizes the port configurations.

Port Configuration	Creates Ports
Speed Control	SpdReq
Torque Control	TrqCmd

Motor Parameters

Stator resistance, Rs — Resistance

scalar

Stator phase winding resistance, R_s , in ohm.

Dependencies

This table summarizes the parameter dependencies.

Parameter	Used to Derive	
	Parameter	Tab
Stator resistance, R_s	D and Q axis integral gain, K_i	Current Controller

DQ axis inductance, L_{dq} – Inductance
scalar

D-axis winding inductance, L_{dq} , in H.

Dependencies

This table summarizes the parameter dependencies.

Parameter	Used to Derive	
	Parameter	Tab
DQ axis inductance, L_{dq}	D-axis proportional gain, K_{p_d} Q-axis proportional gain, K_{p_q} D and Q axis integral gain, K_i	Current Controller

Permanent magnet flux, λ_{pm} – Flux
scalar

Permanent magnet flux, λ_{pm} , in Wb.

Number of pole pairs, PolePairs – Poles
scalar

Motor pole pairs, P .

Physical inertia, viscous damping, static friction, Mechanical — Inertia, damping, friction
vector

Mechanical properties of the motor:

- Motor inertia, F_v , in kgm^2
- Viscous friction torque constant, F_v , in $\text{N}\cdot\text{m}/(\text{rad}/\text{s})$
- Static friction torque constant, F_s , in $\text{N}\cdot\text{m}$

Dependencies

To enable this parameter, set the **Control Type** parameter to Speed Control.

For the gain calculations, the block uses the inertia from the **Physical inertia, viscous damping, static friction** parameter value that is on the **Motor Parameters** tab.

This table summarizes the parameter dependencies.

Parameter	Used to Derive	
	Parameter	Tab
Physical inertia, viscous damping, static friction, Mechanical	Proportional gain, ba Angular gain, Ksa Rotational gain, Kisa Inertia compensation, Jcomp Viscous damping compensation, Fv Static friction, Fs	Speed Controller

Id and Iq Calculation

Maximum torque, T_max — Torque
scalar

Maximum torque, in $\text{N}\cdot\text{m}$.

Current Controller

Bandwidth of the current regulator, EV_current – Bandwidth
scalar

Current regulator bandwidth, in Hz.

Dependencies

This table summarizes the parameter dependencies.

Parameter	Used to Derive	
	Parameter	Tab
Bandwidth of the current regulator, EV_current	D-axis proportional gain, Kp_d Q-axis proportional gain, Kp_q D and q axis proportional gain, Ki	Current Controller

Sample time for the torque control, Tst – Time
scalar

Torque control sample time, in s.

Dependencies

This table summarizes the parameter dependencies.

Parameter	Used to Derive	
	Parameter	Tab
Sample time for the torque control, Tst	Speed time constant, Ksf	Speed Controller

Calculate Current Regulator Gains – Derive parameters
button

Click to derive parameters.

Dependencies

On the **Current Controller** tab, when you select **Calculate Current Regulator Gains**, the block calculates derived parameters. The table summarizes the derived parameters that depend on other block parameters.

Derived Parameter on Current Controller tab	Dependency	
	Parameter	Tab
D-axis proportional gain, Kp_d	Bandwidth of the current regulator, EV_current	Current Controller
	Stator resistance, Rs	Motor Parameters
Q-axis proportional gain, Kp_q	DQ-axis inductance, Ldq	
D and Q axis integral gain, Ki		

D-axis proportional gain, Kp_d — Derived scalar

Derived d-axis proportional gain, in V/A.

Dependencies

This table summarizes the parameter dependencies.

Parameter	Dependency	
	Parameter	Tab
D-axis proportional gain, Kp_d	Bandwidth of the current regulator, EV_current	Current Controller
	DQ-axis inductance, Ldq	Motor Parameters

Q-axis proportional gain, Kp_q — Derived scalar

Derived q-axis proportional gain, in V/A.

Dependencies

This table summarizes the parameter dependencies.

Parameter	Dependency	
	Parameter	Tab
Q-axis proportional gain, K_{p_q}	Bandwidth of the current regulator, $EV_current$	Current Controller
	DQ-axis inductance, L_{dq}	Motor Parameters

D and Q axis integral gain, K_i – Derived scalar

Derived axis integral gain, in V/A*s.

Dependencies

This table summarizes the parameter dependencies.

Parameter	Dependency	
	Parameter	Tab
D and Q axis integral gain, K_i	Bandwidth of the current regulator, $EV_current$	Current Controller
	Stator resistance, R_s	Motor Parameters
	DQ-axis inductance, L_{dq}	

Speed Controller

Bandwidth of the motion controller, EV_motion – Bandwidth vector

Motion controller bandwidth, in Hz. Set the first element of the vector to the desired cutoff frequency. Set the second and third elements of the vector to the higher-order cut off frequencies. You can set the value of the next element to 1/5 the value of the previous element. For example, if the desired cutoff frequency is 20 Hz, specify [20 4 0.8].

Dependencies

The parameter is enabled when the **Control Type** parameter is set to Speed Control.

Parameter	Used to Derive	
	Parameter	Tab
Bandwidth of the motion controller, EV_motion	Proportional gain, ba Angular gain, Ksa Rotational gain, Kisa	Speed Controller

Bandwidth of the state filter, EV_sf — Bandwidth scalar

State filter bandwidth, in Hz.

Dependencies

The parameter is enabled when the **Control Type** parameter is set to Speed Control.

Parameter	Used to Derive	
	Parameter	Tab
Bandwidth of the state filter, EV_sf	Speed time constant, Ksf	Speed Controller

Calculate Speed Regulator Gains — Derive parameters button

Click to derive parameters.

Dependencies

On the **Speed Controller** tab, when you select **Calculate Speed Regulator Gains**, the block calculates derived parameters. The table summarizes the derived parameters that depend on other block parameters.

Derived Parameter on Speed Controller tab		Depends On	
		Parameter	Tab
Proportional gain, b_a	$b_a = \frac{J_p - J_p p_1 p_2 p_3}{T_{sm}}$	Bandwidth of the motion controller, EV_motion Bandwidth of the state filter, EV_sf	Speed Controller
Angular gain, K_{sa}	$K_{sa} = \frac{J_p(p_1 p_2 + p_2 p_3 + p_3 p_1) - 3J_p + 2b_a T_{sm}}{T_{sm}^2}$	Sample time for the torque control, T_{st}	Current Controller
Rotational gain, K_{isa}	$K_{isa} = \frac{-J_p(p_1 + p_2 + p_3) + 3J_p - b_a T_{sm} - K_v T_{sm}^2}{T_{sm}^3}$	Physical inertia, viscous damping, static friction, Mechanical	Motor Parameters
Speed time constant, K_{sf}	$K_{sf} = \frac{1 - \exp(-T_{sm} 2\pi EV_{sf})}{T_{sm}}$		
Inertia compensation, J_{comp}	$J_{comp} = J_p$	Physical inertia, viscous damping, static friction, Mechanical	Motor Parameters
Viscous damping compensation, F_v	F_v		
Static friction, F_s	F_s		

The equations use these variables.

- P Motor pole pairs
 b_a Speed regulator proportional gain

K_{sa}	Speed regulator integral gain
K_{isa}	Speed regulator double integral gain
K_{sf}	Speed regulator time constant
J_p	Motor inertia
EV_{sf}	State filter bandwidth
EV_{motion}	Motion controller bandwidth

Proportional gain, ba — Derived
scalar

Derived proportional gain, in N·m/(rad/s).

Dependencies

This table summarizes the parameter dependencies.

Parameter	Dependency	
	Parameter	Tab
Proportional gain, ba	Physical inertia, viscous damping, static friction, Mechanical	Motor Parameters
	Bandwidth of the motion controller, EV_motion	Speed Controller

Angular gain, Ksa — Derived
scalar

Derived angular gain, in N·m/rad.

Dependencies

This table summarizes the parameter dependencies.

Parameter	Dependency	
	Parameter	Tab
Angular gain, Ksa	Physical inertia, viscous damping, static friction, Mechanical	Motor Parameters

Parameter	Dependency	
	Parameter	Tab
	Bandwidth of the motion controller, EV_motion	Speed Controller

Rotational gain, Kisa – Derived

scalar

Derived rotational gain, in N·m/(rad*s).

Dependencies

This table summarizes the parameter dependencies.

Parameter	Dependency	
	Parameter	Tab
Rotational gain, Kisa	Physical inertia, viscous damping, static friction, Mechanical	Motor Parameters
	Bandwidth of the motion controller, EV_motion	Speed Controller

Speed time constant, Ksf – Derived

scalar

Derived speed time constant, in 1/s.

Dependencies

This table summarizes the parameter dependencies.

Parameter	Dependency	
	Parameter	Tab
Speed time constant, Ksf	Sample time for the torque control, Tst	Current Controller
	Bandwidth of the state filter, EV_sf	Speed Controller

Inertia compensation, Jcomp — Derived

scalar

Derived inertia compensation, in $\text{kg}\cdot\text{m}^2$.

Dependencies

This table summarizes the parameter dependencies.

Parameter	Dependency	
	Parameter	Tab
Inertia compensation, Jcomp	Physical inertia, viscous damping, static friction, Mechanical	Motor Parameters

Viscous damping compensation, Fv — Derived

scalar

Dependencies

This table summarizes the parameter dependencies.

Parameter	Dependency	
	Parameter	Tab
Viscous damping compensation, Fv	Physical inertia, viscous damping, static friction, Mechanical	Motor Parameters

Static friction, Fs — Derived

scalar

Derived static friction, in $\text{N}\cdot\text{m}/(\text{rad}/\text{s})$.

Dependencies

This table summarizes the parameter dependencies.

Parameter	Dependency	
	Parameter	Tab
Static friction, Fs	Physical inertia, viscous damping, static friction, Mechanical	Motor Parameters

Electrical Losses

Parameterize losses by – Select type

Single efficiency measurement (default) | Tabulated loss data | Tabulated efficiency data

Setting	Block Implementation
Single efficiency measurement	Electrical loss calculated using a constant value for inverter efficiency.
Tabulated loss data	Electrical loss calculated as a function of motor speeds and load torques.
Tabulated efficiency data	<p>Electrical loss calculated using inverter efficiency that is a function of motor speeds and load torques.</p> <ul style="list-style-type: none"> • Converts the efficiency values you provide into losses and uses the tabulated losses for simulation. • Ignores efficiency values you provide for zero speed or zero torque. Losses are assumed zero when either torque or speed is zero. • Uses linear interpolation to determine losses. Provide tabulated data for low speeds and low torques, as required, to get the desired level of accuracy for lower power conditions. • Does not extrapolate loss values for speed and torque magnitudes that exceed the range of the table.

For best practice, use Tabulated loss data instead of Tabulated efficiency data:

- Efficiency becomes ill defined for zero speed or zero torque.
- You can account for fixed losses that are still present for zero speed or torque.

Overall inverter efficiency, eff — Constant
scalar

Overall inverter efficiency, Eff , in %.

Dependencies

To enable this parameter, for **Parameterize losses by**, select Tabulated loss data.

Vector of speeds (w) for tabulated loss, w_loss_bp — Breakpoints
1-by-M matrix

Speed breakpoints for lookup table when calculating losses, in rad/s.

Dependencies

To enable this parameter, for **Parameterize losses by**, select Tabulated loss data.

Vector of torques (T) for tabulated loss, T_loss_bp — Breakpoints
1-by-N matrix

Torque breakpoints for lookup table when calculating losses, in N·m.

Dependencies

To enable this parameter, for **Parameterize losses by**, select Tabulated loss data.

Corresponding losses, $losses_table$ — Table
M-by-N matrix

Array of values for electrical losses as a function of M speeds and N torques, in W. Each value specifies the losses for a specific combination of speed and torque. The matrix size must match the dimensions defined by the speed and torque vectors.

Dependencies

To enable this parameter, for **Parameterize losses by**, select Tabulated loss data.

Vector of speeds (w) for tabulated efficiency, w_eff_bp — Breakpoints
1-by-M matrix

Speed breakpoints for lookup table when calculating efficiency, in rad/s.

Dependencies

To enable this parameter, for **Parameterize losses by**, select Tabulated efficiency data.

Vector of torques (T) for tabulated efficiency, T_{eff_bp} – Breakpoints

1-by-N matrix

Torque breakpoints for lookup table when calculating efficiency, in N·m.

Dependencies

To enable this parameter, for **Parameterize losses by**, select Tabulated efficiency data.

Corresponding efficiency, $efficiency_table$ – Table

M-by-N matrix

Array of efficiency as a function of M speeds and N torque, in %. Each value specifies the efficiency for a specific combination of speed and torque. The matrix size must match the dimensions defined by the speed and torque vectors.

The block ignores efficiency values for zero speed or zero torque. Losses are zero when either torque or speed is zero. The block uses linear interpolation.

To get the desired level of accuracy for lower power conditions, you can provide tabulated data for low speeds and low torques.

Dependencies

To enable this parameter, for **Parameterize losses by**, select Tabulated efficiency data.

References

- [1] Lorenz, Robert D., Thomas Lipo, and Donald W. Novotny. "Motion control with induction motors." *Proceedings of the IEEE*, Vol. 82, Issue 8, August 1994, pp. 1215-1240.
- [2] Shigeo Morimoto, Masayuka Sanada, Yoji Takeda. "Wide-speed operation of interior permanent magnet synchronous motors with high-performance current

regulator." *IEEE Transactions on Industry Applications*, Vol. 30, Issue 4, July/August 1994, pp. 920-926.

- [3] Muyang Li. "Flux-Weakening Control for Permanent-Magnet Synchronous Motors Based on Z-Source Inverters." Master's Thesis, Marquette University, e-Publications@Marquette, Fall 2014.
- [4] Briz, Fernando, Michael W. Degner, and Robert D. Lorenz. "Analysis and design of current regulators using complex vectors." *IEEE Transactions on Industry Applications*, Vol. 36, Issue 3, May/June 2000, pp. 817-825.
- [5] Briz, Fernando, et al. "Current and flux regulation in field-weakening operation [of induction motors]." *IEEE Transactions on Industry Applications*, Vol. 37, Issue 1, Jan/Feb 2001, pp. 42-50.

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using Simulink® Coder™.

See Also


Flux-Based PM Controller | IM Controller | Interior PM Controller | Surface Mount PMSM

Introduced in R2017a

Three-Phase Voltage Source Inverter

Three-phase voltage source inverter

Library: Powertrain Blockset / Propulsion / Electric Motors and Inverters

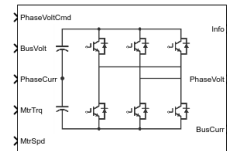



Description

The Three-Phase Voltage Source Inverter block implements a three-phase voltage source inverter that generates neutral voltage commands for a balanced three-phase load. Configure the voltage switching function for continuous vector modulation or inverter switch input signals. You can incorporate the block into a closed-loop model to simulate a power inverter. The block controls the ideal switch states.

To enable power loss calculations suitable for code generation targets that limit memory, select **Enable memory optimized 2D LUT**. Click **Calibrate Maps** to virtually calibrate an inverter power loss lookup table as a function of motor torque and motor speed.

If you select **Input inverter temperature**, click **Calibrate Maps** to virtually calibrate the power loss table as a function of motor torque, motor speed, and inverter temperature. You cannot enable memory optimization for the 3D power loss lookup table.

Use the **Switching voltage function** parameter to set the switching voltage function.

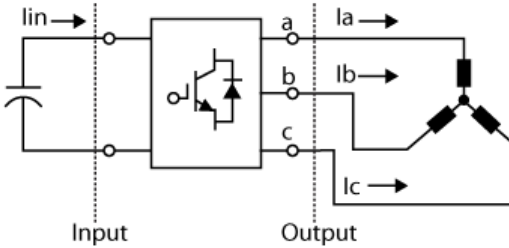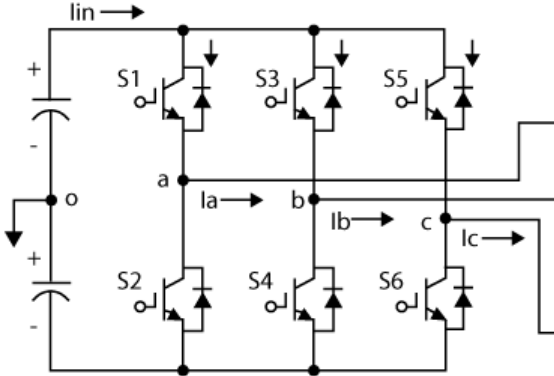Setting	Implementation	Illustration
<p>Commanded phase voltage</p>	<p>Phase a, b, c line-to-neutral voltage command input. Suitable for continuous sinusoidal or space vector modulation input signals.</p>	
<p>Switch inputs (default)</p>	<p>Inverter switch input command. Suitable for hardware-in-the-loop (HIL) simulation.</p> <p>The inverter switches S1, S3, and S5 using complimented control for S2, S4, and S6.</p>	

Virtual Calibration

If you have Model-Based Calibration Toolbox, click **Calibrate Maps** to virtually calibrate the lookup tables using measured data. The dialog box steps through these tasks.

Task	Description						
Import Loss Data	<p>Import this loss data from a file. For example, open <code><matlabroot>toolbox/autoblks/autoblksshared/mbc_templates/MappedInverterDataset.xlsx</code>.</p> <p>For more information, see “Using Data” (Model-Based Calibration Toolbox).</p> <table border="1" data-bbox="476 517 1331 927"> <thead> <tr> <th data-bbox="476 517 698 621">Input inverter temperature Setting</th> <th data-bbox="698 517 1331 621">Required Data</th> </tr> </thead> <tbody> <tr> <td data-bbox="476 621 698 753">off</td> <td data-bbox="698 621 1331 753"> <ul style="list-style-type: none"> • Motor speed, rad/s • Motor torque, N·m • Power loss, W </td> </tr> <tr> <td data-bbox="476 753 698 927">on</td> <td data-bbox="698 753 1331 927"> <ul style="list-style-type: none"> • Motor speed, rad/s • Motor torque, N·m • Motor temperature, K • Power loss, W </td> </tr> </tbody> </table> <p>Collect inverter data at steady-state operating conditions. Data should cover the inverter speed, torque, and temperature operating range.</p> <p>To filter or edit the data, select Edit in Application. The Model-Based Calibration Toolbox Data Editor opens.</p>	Input inverter temperature Setting	Required Data	off	<ul style="list-style-type: none"> • Motor speed, rad/s • Motor torque, N·m • Power loss, W 	on	<ul style="list-style-type: none"> • Motor speed, rad/s • Motor torque, N·m • Motor temperature, K • Power loss, W
Input inverter temperature Setting	Required Data						
off	<ul style="list-style-type: none"> • Motor speed, rad/s • Motor torque, N·m • Power loss, W 						
on	<ul style="list-style-type: none"> • Motor speed, rad/s • Motor torque, N·m • Motor temperature, K • Power loss, W 						
Generate Response Models	<p>Model-Based Calibration Toolbox uses test plans to fit data to Gaussian process models (GPMs).</p> <p>To assess or adjust the response model fit, select Edit in Application. The Model-Based Calibration Toolbox Model Browser opens. For more information, see “Model Assessment” (Model-Based Calibration Toolbox).</p>						

Task	Description						
Generate Calibration	<p>Model-Based Calibration Toolbox calibrates the response models and generates calibrated tables.</p> <p>To assess or adjust the calibration, select Edit in Application. The Model-Based Calibration Toolbox CAGE Browser opens. For more information, see “Calibration Tables” (Model-Based Calibration Toolbox).</p>						
Update block parameters	<p>Update these parameters with the calibration.</p> <table border="1" data-bbox="477 590 1335 1166"> <thead> <tr> <th data-bbox="477 590 698 696">Input inverter temperature Setting</th> <th data-bbox="698 590 1335 696">Parameters</th> </tr> </thead> <tbody> <tr> <td data-bbox="477 696 698 892">off</td> <td data-bbox="698 696 1335 892"> <ul style="list-style-type: none"> • Vector of speeds (w) for tabulated losses, w_eff_bp • Vector of torques (T) for tabulated losses, T_eff_bp • Corresponding power loss, ploss_table </td> </tr> <tr> <td data-bbox="477 892 698 1166">on</td> <td data-bbox="698 892 1335 1166"> <ul style="list-style-type: none"> • Vector of speeds (w) for tabulated losses, w_eff_bp • Vector of torques (T) for tabulated losses, T_eff_bp • Vector of temperatures for tabulated losses, Temp_eff_bp • Corresponding power loss, ploss_table_3d </td> </tr> </tbody> </table>	Input inverter temperature Setting	Parameters	off	<ul style="list-style-type: none"> • Vector of speeds (w) for tabulated losses, w_eff_bp • Vector of torques (T) for tabulated losses, T_eff_bp • Corresponding power loss, ploss_table 	on	<ul style="list-style-type: none"> • Vector of speeds (w) for tabulated losses, w_eff_bp • Vector of torques (T) for tabulated losses, T_eff_bp • Vector of temperatures for tabulated losses, Temp_eff_bp • Corresponding power loss, ploss_table_3d
Input inverter temperature Setting	Parameters						
off	<ul style="list-style-type: none"> • Vector of speeds (w) for tabulated losses, w_eff_bp • Vector of torques (T) for tabulated losses, T_eff_bp • Corresponding power loss, ploss_table 						
on	<ul style="list-style-type: none"> • Vector of speeds (w) for tabulated losses, w_eff_bp • Vector of torques (T) for tabulated losses, T_eff_bp • Vector of temperatures for tabulated losses, Temp_eff_bp • Corresponding power loss, ploss_table_3d 						

Switching Function

For the switch voltage, the block implementation depends on the **Switching voltage function** setting.

Setting	Calculation	Equations
Commanded phase voltage	Continuous line-to-neutral voltage commands set to phase a, b, c line-to-neutral voltage command input	$v_{an} = v_{a_cmd}$ $v_{bn} = v_{b_cmd}$ $v_{cn} = v_{c_cmd}$
	Line-to-line voltage	$v_{ab} = v_{an} - v_{bn}$ $v_{bc} = v_{bn} - v_{cn}$ $v_{ca} = v_{cn} - v_{an}$
Switch inputs	Switching function	$SF_a = \begin{cases} 1 & \text{S1 on and S2 off} \\ -1 & \text{S1 off and S2 on} \end{cases}$ $SF_b = \begin{cases} 1 & \text{S3 on and S4 off} \\ -1 & \text{S3 off and S4 on} \end{cases}$ $SF_c = \begin{cases} 1 & \text{S5 on and S6 off} \\ -1 & \text{S5 off and S6 on} \end{cases}$
	Line-to-center point voltage	$v_{ao} = \frac{v_{bus}}{2} SF_a$ $v_{bo} = \frac{v_{bus}}{2} SF_b$ $v_{co} = \frac{v_{bus}}{2} SF_c$
	Line-to-neutral voltage	$v_{an} = v_{ao} - v_{no}$ $v_{bn} = v_{bo} - v_{no}$ $v_{cn} = v_{co} - v_{no}$ $v_{an} + v_{bn} + v_{cn} = 0$ $v_{no} = \frac{1}{3}(v_{ao} + v_{bo} + v_{co})$ $v_{an} = v_{ao} - \frac{1}{3}(v_{ao} + v_{bo} + v_{co})$ $v_{bn} = v_{bo} - \frac{1}{3}(v_{ao} + v_{bo} + v_{co})$ $v_{cn} = v_{co} - \frac{1}{3}(v_{ao} + v_{bo} + v_{co})$

Setting	Calculation	Equations
	Line-to-line voltage	$v_{ab} = v_{an} - v_{bn}$ $v_{bc} = v_{bn} - v_{cn}$ $v_{ca} = v_{cn} - v_{an}$

The equations use these variables.

SF_a, SF_b, SF_c	Phase a, b, c line switching functions, respectively
v_{bus}	Power source bus voltage
V_{ao}, V_{bo}, V_{co}	Phase a, b, c line-to-center voltage, respectively
V_{an}, V_{bn}, V_{cn}	Phase a, b, c line-to-neutral voltage, respectively
V_{ab}, V_{bc}, V_{ca}	Phase ab, bc, ca line-to-neutral voltage, respectively
$V_{a_cmd}, V_{b_cmd}, V_{c_cmd}$	Phase a, b, c line-to-neutral voltage commands, respectively

Current and Power Loss

For the line-to-center, line-to-neutral, and line-to-line voltage, the block implements these equations.

Calculation	Equations
Motor and bus power	$P_{mtr} = v_{an}i_a + v_{bn}i_b + v_{cn}i_c$ $P_{bus} = v_{bus}i_{bus}$
Inverter power loss and bus current	$P_{in} = P_{bus} = v_{bus}i_{bus}$ $P_{out} = P_{mtr} = v_{an}i_a + v_{bn}i_b + v_{cn}i_c + P_{LossInv}$ $i_{bus} = \frac{v_{an}i_a + v_{bn}i_b + v_{cn}i_c + P_{LossInv}}{v_{bus}}$

The equations use these variables.

P_{mtr}	Power delivered to the motor
P_{bus}	Power from input bus
P_{loss}	Power loss

- i_{bus} Power source bus current
- i_a, i_b, i_c Phase a, b, c line current, respectively
- V_{an}, V_{bn}, V_{cn} Phase a, b, c line-to-neutral voltage, respectively
- v_{bus} Power source bus voltage

Power Accounting

For the power accounting, the block implements these equations.

Bus Signal		Description	Variable	Equation
PwrInfo	PwrTrnsfrd — Power transferred between blocks	PwrMtr	Power delivered to the motor	$P_{TrnsfrdMtr} = - (v_{an}i_a + v_{bn}i_b + v_{cn}i_c)$
	<ul style="list-style-type: none"> • Positive signals indicate flow into block • Negative signals indicate flow out of block 	PwrBus	Power from input bus	$P_{TrnsfrdBus} = P_{bus}$

Bus Signal		Description	Variable	Equation
PwrNotTrnsfrd — Power crossing the block boundary, but not transferred	PwrLoss	Power loss Negative value indicates power loss	$P_{NotTrnsfrd}$	$P_{NotTrnsfrd} = - (P_{TrnsfrdBus} + P_{TrnsfrdMtr})$
<ul style="list-style-type: none"> • Positive signals indicate an input • Negative signals indicate a loss 				
PwrStored — Stored energy rate of change		<i>Not used</i>		
<ul style="list-style-type: none"> • Positive signals indicate an increase • Negative signals indicate a decrease 				

Lookup Table Memory Optimization

The inverter power loss table parameter **Corresponding power loss, ploss_table** data is a function of motor torque and motor speed at different battery voltages. Positive current indicates battery discharge. Negative current indicates battery charge.


To enable power loss calculations suitable for code generation targets that limit memory, select **Enable memory optimized 2D LUT**. The block uses linear interpolation to optimize the inverter power loss lookup table values for code generation. This table summarizes the optimization implementation.

Use Case	Implementation
Motor speed and torque input align with the lookup table breakpoint values.	Memory-optimized power loss is power loss lookup table value at intersection of motor speed and torque.
Motor speed and torque input do not align with the lookup table breakpoint values, but are within range.	Memory-optimized power loss is linear interpolation between corresponding motor speed and torque.
Motor speed and torque input do not align with the lookup table breakpoint values, and are out of range.	Cannot compute a memory-optimized power loss. Block uses extrapolated data.

Extrapolation

The lookup tables optimized for code generation do not support extrapolation for data that is out of range. However, you can include pre-calculated extrapolation values in the power loss lookup table by selecting **Specify Extrapolation**.

The block uses the endpoint parameters to resize the table data.

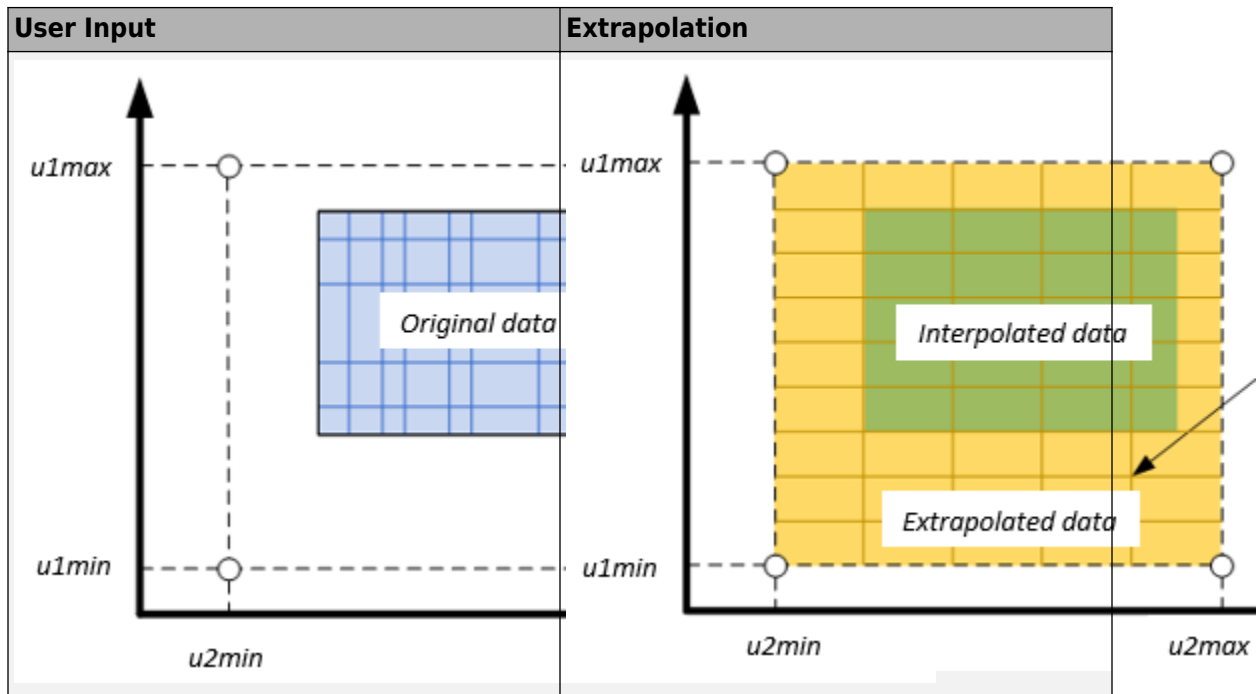

Ports

Input

PhaseVoltCmd — Phase a, b, c line-to-neutral voltage command

1-by-3 array

Phase a, b, c line-to-neutral voltage command, V_{a_cmd} , V_{b_cmd} , and V_{c_cmd} , in V.

Dependencies

To create this port, set **Switching voltage function** to Commanded phase voltage.

SwitchCmd — Switch commands

1-by-3 array

Switch commands, S_a , S_b , and S_c , dimensionless.

Dependencies

To create this port, set **Switching voltage function** to Switch inputs.

BusVolt — Power source bus voltage

bus

Power source bus voltage, V_{bus} , in V.

PhaseCurr — Phase a, b, c current

1-by-3 array

Phase a, b, c current, i_a , i_b , and i_c , in A.

MtrTrq — Motor torque

scalar

Motor torque, T_{mtr} , in N·m.

MtrSpd — Motor speed

scalar

Angular speed of the motor, ω_{mtr} , in rad/s.

InvrtrTemp — Inverter operating temperature

scalar

Inverter operating temperature, $Temp_{Invtrtr}$, in K.

Dependencies

To create this port, select **Input inverter temperature**.

Output**Info — Bus signal**

bus

The bus signal contains these block calculations.

Signal			Description	Variable	Units
BusCurr			Power source bus current	i_{bus}	A
PwrLossInv			Inverter power loss	ε_{inv}	dimensionless
PwrInfo	PwrTrnsfrd	PwrMtr	Power delivered to the motor	$P_{TrnsfrdMtr}$	W
		PwrBus	Power from input bus	$P_{TrnsfrdBus}$	W
	PwrNotTrnsfrd	PwrLoss	Power loss	$P_{NotTrnsfrd}$	W
	PwrStored		<i>Not used</i>		

PhaseVlt — Phase a, b, c line-to-neutral voltage

1-by-3 array

Phase a, b, c line-to-neutral voltage, V_{an} , V_{bn} , and V_{cn} , in V.

BusCurr — Power source bus current

scalar

Power source bus current, i_{bus} , in A.

Parameters

Block Options

Input inverter temperature — Create input port

off (default) | on

Select this parameter to create the `InvrtrTemp` input port.

The block enables you to specify inverter power loss lookup tables that are functions of motor torque, T_{mtr} , and motor speed, ω_{mtr} . If you select **Input inverter temperature**, the tables are also a function of the inverter temperature, $Temp_{Invrtr}$.

Input Inverter Temperature Parameter Setting	Enables Efficiency Table	Function Of
off	Corresponding power loss, ploss_table	$f(T_{mtr}, \omega_{mtr})$
on	Corresponding power loss, ploss_table_3d	$f(T_{mtr}, \omega_{mtr}, Temp_{Invtr})$

Dependencies

If you select **Input inverter temperature** to specify a 3D power loss lookup table as a function of motor torque, motor speed, and inverter temperature, you cannot select **Enable memory optimized 2D LUT** to enable a memory optimization.

Enable memory optimized 2D LUT – Selection

off (default) | on

Enable generation of memory-optimized lookup tables, suitable code generation targets that limit memory.

Dependencies

If you select **Enable memory optimized 2D LUT**, you cannot select **Input inverter temperature**.

Calibrate Maps – Calibrate tables with measured data

selection

If you have Model-Based Calibration Toolbox, click **Calibrate Maps** to virtually calibrate the lookup tables using measured data. The dialog box steps through these tasks.

Task	Description						
Import Loss Data	Import this loss data from a file. For example, open <code><matlabroot>toolbox/autoblks/autoblksshared/mbc_templates/MappedInverterDataset.xlsx</code> . For more information, see “Using Data” (Model-Based Calibration Toolbox).						
	<table border="1"> <thead> <tr> <th data-bbox="473 517 698 626">Input inverter temperature Setting</th> <th data-bbox="698 517 1338 626">Required Data</th> </tr> </thead> <tbody> <tr> <td data-bbox="473 626 698 756">off</td> <td data-bbox="698 626 1338 756"> <ul style="list-style-type: none"> • Motor speed, rad/s • Motor torque, N·m • Power loss, W </td> </tr> <tr> <td data-bbox="473 756 698 930">on</td> <td data-bbox="698 756 1338 930"> <ul style="list-style-type: none"> • Motor speed, rad/s • Motor torque, N·m • Motor temperature, K • Power loss, W </td> </tr> </tbody> </table>	Input inverter temperature Setting	Required Data	off	<ul style="list-style-type: none"> • Motor speed, rad/s • Motor torque, N·m • Power loss, W 	on	<ul style="list-style-type: none"> • Motor speed, rad/s • Motor torque, N·m • Motor temperature, K • Power loss, W
	Input inverter temperature Setting	Required Data					
	off	<ul style="list-style-type: none"> • Motor speed, rad/s • Motor torque, N·m • Power loss, W 					
on	<ul style="list-style-type: none"> • Motor speed, rad/s • Motor torque, N·m • Motor temperature, K • Power loss, W 						
Collect inverter data at steady-state operating conditions. Data should cover the inverter speed, torque, and temperature operating range. To filter or edit the data, select Edit in Application . The Model-Based Calibration Toolbox Data Editor opens.							
Generate Response Models	Model-Based Calibration Toolbox uses test plans to fit data to Gaussian process models (GPMs). To assess or adjust the response model fit, select Edit in Application . The Model-Based Calibration Toolbox Model Browser opens. For more information, see “Model Assessment” (Model-Based Calibration Toolbox).						



Task	Description						
Generate Calibration	<p>Model-Based Calibration Toolbox calibrates the response models and generates calibrated tables.</p> <p>To assess or adjust the calibration, select Edit in Application. The Model-Based Calibration Toolbox CAGE Browser opens. For more information, see “Calibration Tables” (Model-Based Calibration Toolbox).</p>						
Update block parameters	<p>Update these parameters with the calibration.</p> <table border="1" data-bbox="476 586 1320 1154"> <thead> <tr> <th data-bbox="476 586 698 696">Input inverter temperature Setting</th> <th data-bbox="698 586 1320 696">Parameters</th> </tr> </thead> <tbody> <tr> <td data-bbox="476 696 698 890">off</td> <td data-bbox="698 696 1320 890"> <ul style="list-style-type: none"> • Vector of speeds (w) for tabulated losses, w_eff_bp • Vector of torques (T) for tabulated losses, T_eff_bp • Corresponding power loss, ploss_table </td> </tr> <tr> <td data-bbox="476 890 698 1154">on</td> <td data-bbox="698 890 1320 1154"> <ul style="list-style-type: none"> • Vector of speeds (w) for tabulated losses, w_eff_bp • Vector of torques (T) for tabulated losses, T_eff_bp • Vector of temperatures for tabulated losses, Temp_eff_bp • Corresponding power loss, ploss_table_3d </td> </tr> </tbody> </table>	Input inverter temperature Setting	Parameters	off	<ul style="list-style-type: none"> • Vector of speeds (w) for tabulated losses, w_eff_bp • Vector of torques (T) for tabulated losses, T_eff_bp • Corresponding power loss, ploss_table 	on	<ul style="list-style-type: none"> • Vector of speeds (w) for tabulated losses, w_eff_bp • Vector of torques (T) for tabulated losses, T_eff_bp • Vector of temperatures for tabulated losses, Temp_eff_bp • Corresponding power loss, ploss_table_3d
Input inverter temperature Setting	Parameters						
off	<ul style="list-style-type: none"> • Vector of speeds (w) for tabulated losses, w_eff_bp • Vector of torques (T) for tabulated losses, T_eff_bp • Corresponding power loss, ploss_table 						
on	<ul style="list-style-type: none"> • Vector of speeds (w) for tabulated losses, w_eff_bp • Vector of torques (T) for tabulated losses, T_eff_bp • Vector of temperatures for tabulated losses, Temp_eff_bp • Corresponding power loss, ploss_table_3d 						

Electrical Model

Switching voltage function – Selection

Commanded phase voltage (default) | Switch inputs

Use the **Switching voltage function** parameter to set the switching voltage function.

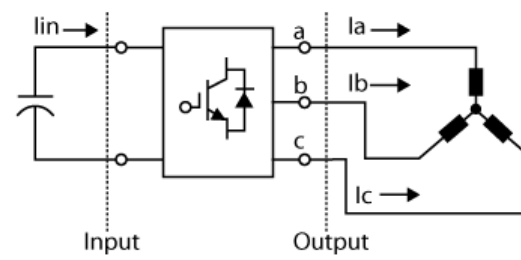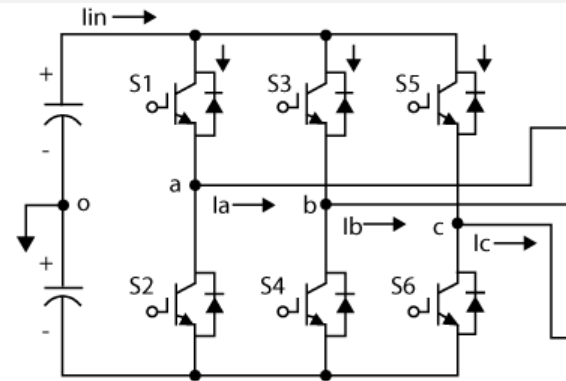Setting	Implementation	Illustration
<p>Commanded phase voltage</p>	<p>Phase a, b, c line-to-neutral voltage command input. Suitable for continuous sinusoidal or space vector modulation input signals.</p>	
<p>Switch inputs (default)</p>	<p>Inverter switch input command. Suitable for hardware-in-the-loop (HIL) simulation.</p> <p>The inverter switches S1, S3, and S5 using complimented control for S2, S4, and S6.</p>	

Vector of speeds (w) for tabulated losses, w_eff_bp — Speed breakpoints

1-by-M vector

Vector of motor speed, ω_{mtr} , breakpoints for power loss, in rad/s. If you set **Enable memory optimized 2D LUT**, the block converts the data to single precision.

Resample storage size for w_eff_bp , $n1$ — Speed bit size

128 (default) | 2 | 4 | 8 | 16 | 32 | 64 | 256

Speed breakpoint storage size, $n1$, dimensionless. The block resamples the **Corresponding power loss, $ploss_table$** data based on the storage size.

Dependencies

To create this parameter, select **Enable memory optimized 2D LUT**.

Vector of torques (T) for tabulated losses, T_eff_bp — Torque breakpoints

1-by-N vector

Vector of motor torque, T_{mtr} , breakpoints for power loss, in N·m. If you set **Enable memory optimized 2D LUT**, the block converts the data to single precision.

Resample storage size for T_eff_bp, n2 — Torque bit size

128 (default) | 2 | 4 | 8 | 16 | 32 | 64 | 256

Torque breakpoint storage size, $n2$, dimensionless. The block resamples the **Corresponding power loss, ploss_table** data based on the storage size.

Dependencies

To create this parameter, select **Enable memory optimized 2D LUT**.

Vector of temperatures for tabulated losses, Temp_eff_bp — Temperature breakpoints

1-by-L vector

Vector of inverter temperature, $Temp_{Invtr}$, breakpoints for power loss, in K.

Dependencies

To create this parameter, select **Input inverter temperature**.

Corresponding power loss, ploss_table — 2D lookup table

M-by-N array

Array of values for power loss as a function of M motor speeds, ω_{mtr} , and N motor torques, T_{mtr} , in W. Each value specifies the power loss for a specific combination of motor speed and motor torque. The array size must match the dimensions defined by the speed and torque vectors.

If you have Model-Based Calibration Toolbox, click **Calibrate Maps** to virtually calibrate the lookup table using measured data.

If you set **Enable memory optimized 2D LUT**, the block converts the data to single precision.

Dependencies

To create this parameter, clear **Input inverter temperature**.

Corresponding power loss, `ploss_table_3d` — 3D lookup table

M-by-N-by-L array

Array of values for power loss as a function of M motor speeds, ω_{mtr} , N motor torques, T_{mtr} , and L motor temperatures, $Temp_{Invtr}$, in W. Each value specifies the power loss for a specific combination of motor speed, motor torque, and temperature. The array size must match the dimensions defined by the speed, torque, and temperature vectors.

If you have Model-Based Calibration Toolbox, click **Calibrate Maps** to virtually calibrate the lookup table using measured data.

Dependencies

To create this parameter, select **Input inverter temperature**.

Specify Extraction

`w_eff_bp max endpoint, u1max` — Speed breakpoint

scalar

Speed breakpoint maximum extrapolation endpoint, $u1max$, in rad/s.

Dependencies

To create this parameter, select **Enable memory optimized 2D LUT** and **Specify Extrapolation**.

`w_eff_bp min endpoint, u1min` — Speed breakpoint

scalar

Speed breakpoint minimum extrapolation endpoint, $u1min$, in rad/s.

Dependencies

To create this parameter, select **Enable memory optimized 2D LUT** and **Specify Extrapolation**.

`T_eff_bp max endpoint, u2max` — Torque breakpoint

scalar

Torque breakpoint maximum extrapolation endpoint, $u2max$, in rad/s.

Dependencies

To create this parameter, select **Enable memory optimized 2D LUT** and **Specify Extrapolation**.

T_eff_bp min endpoint, u2min – Torque breakpoint
scalar

Torque breakpoint minimum extrapolation endpoint, $u2min$, in rad/s.

Dependencies

To create this parameter, select **Enable memory optimized 2D LUT** and **Specify Extrapolation**.

References

- [1] Lee, Byoung-Kuk and Mehrdad Ehsami. "A simplified functional simulation model for three-phase voltage-source inverter using switching function concept." *IEEE Transactions on Industrial Electronics*, Vol. 48, No. 2, pp. 309-321, April 2001.
- [2] Ziogas, Phoivas D., Eduardo P. Wiechmann, and Victor R. Stefanovic. "A Computer-Aided Analysis and Design Approach for Static Voltage Source Inverters." *IEEE Transactions on Industry Applications*, Vol. IA-21, No. 5, September/October 1985.

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using Simulink® Coder™.

See Also


Flux-Based PM Controller | Induction Motor | Interior PMSM | Surface Mount PMSM

Introduced in R2019a

Mapped Motor

Mapped motor and drive electronics operating in torque-control mode

Library: Powertrain Blockset / Propulsion / Electric Motors
 Vehicle Dynamics Blockset / Powertrain / Propulsion

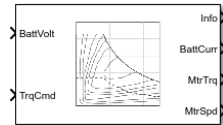

Description

The Mapped Motor block implements a mapped motor and drive electronics operating in torque-control mode. The output torque tracks the torque reference demand and includes a motor-response and drive-response time constant. Use the block for fast system-level simulations when you do not know detailed motor parameters, for example, for motor power and torque tradeoff studies. The block assumes that the speed fluctuations due to mechanical load do not affect the motor torque tracking.

You can specify:

- Port configuration — Input torque or speed.
- Electrical torque range — Torque speed envelope or maximum motor power and torque.
- Electrical loss — Single operating point, measured efficiency, or measured loss. If you have Model-Based Calibration Toolbox, you can virtually calibrate the measured loss tables.


Electrical Torque

To specify the range of torque and speed that the block allows, on the **Electrical Torque** tab, for **Parametrized by**, select one of these options.

Setting	Block Implementation
Tabulated torque-speed envelope	Range specified as a set of speed data points and corresponding maximum torque values.

Setting	Block Implementation
Maximum torque and power	Range specified with maximum torque and maximum power.

For either method, the block implements an envelope similar to this.

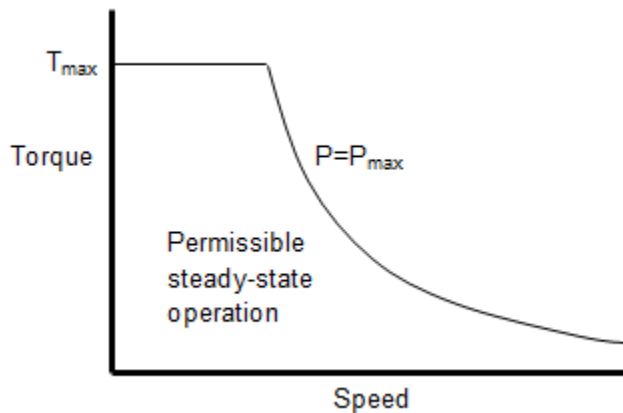

Electrical Losses

To specify the electrical losses, on the **Electrical Losses** tab, for **Parameterize losses by**, select one of these options.

Setting	Block Implementation
Single efficiency measurement	<p>Sum of these terms, measured at a single measurement point:</p> <ul style="list-style-type: none"> • Fixed losses independent of torque and speed, P_0. Use P_0 to account for fixed converter losses. • A torque-dependent electrical loss $k\tau^2$, where k is a constant and τ is the torque. Represents ohmic losses in the copper windings. • A speed-dependent electrical loss $k_w\omega^2$, where k_w is a constant and ω is the speed. Represents iron losses due to eddy currents.

Setting	Block Implementation
Tabulated loss data	<p>Loss lookup table that is a function of motor speeds and load torques.</p> <p>If you have Model-Based Calibration Toolbox, click Calibrate Maps to virtually calibrate the 2D lookup tables using measured data.</p>
Tabulated loss data with temperature	<p>Loss lookup table that is a function of motor speeds, load torques, and operating temperature.</p> <p>If you have Model-Based Calibration Toolbox, click Calibrate Maps to virtually calibrate the 3D lookup tables using measured data.</p>
Tabulated efficiency data	<p>2D efficiency lookup table that is a function of motor speeds and load torques:</p> <ul style="list-style-type: none"> • Converts the efficiency values you provide into losses and uses the tabulated losses for simulation. • Ignores efficiency values you provide for zero speed or zero torque. Losses are assumed zero when either torque or speed is zero. • Uses linear interpolation to determine losses. Provide tabulated data for low speeds and low torques, as required, to get the desired level of accuracy for lower power conditions. • Does not extrapolate loss values for speed and torque magnitudes that exceed the range of the table.

Setting	Block Implementation
Tabulated efficiency data with temperature	<p>3D efficiency lookup table that is a function of motor speeds, load torques, and operating temperature:</p> <ul style="list-style-type: none"> • Converts the efficiency values you provide into losses and uses the tabulated losses for simulation. • Ignores efficiency values you provide for zero speed or zero torque. Losses are assumed zero when either torque or speed is zero. • Uses linear interpolation to determine losses. Provide tabulated data for low speeds and low torques, as required, to get the desired level of accuracy for lower power conditions. • Does not extrapolate loss values for speed, torque, or temperature magnitudes that exceed the range of the table.

For best practice, use `Tabulated loss data` instead of `Tabulated efficiency data`:

- Efficiency becomes ill defined for zero speed or zero torque.
- You can account for fixed losses that are still present for zero speed or torque.

Note Due to system losses, the motor can draw a current when the motor torque is zero.

Virtual Calibration

If you have Model-Based Calibration Toolbox, you can virtually calibrate the measured loss lookup tables.

- 1 On the **Electrical Losses** tab, set **Parameterize losses by** to either:
 - Tabulated loss data
 - Tabulated loss data with temperature
- 2 Click **Calibrate Maps**.

The dialog box steps through these tasks.

Task	Description						
Import Loss Data	<p>Import this loss data from a file. For example, open <code><matlabroot>toolbox/autoblks/autoblksshared/mbc_templates/MappedMotorDataset.xlsx</code>.</p> <p>For more information, see “Using Data” (Model-Based Calibration Toolbox).</p> <table border="1" data-bbox="476 517 1332 895"> <thead> <tr> <th data-bbox="476 517 698 591">Parameterize losses by</th> <th data-bbox="698 517 1332 591">Required Data</th> </tr> </thead> <tbody> <tr> <td data-bbox="476 591 698 722">Tabulated loss data</td> <td data-bbox="698 591 1332 722"> <ul style="list-style-type: none"> • Motor speed, rad/s • Motor torque, N·m • Power loss, W </td> </tr> <tr> <td data-bbox="476 722 698 895">Tabulated loss data with temperature</td> <td data-bbox="698 722 1332 895"> <ul style="list-style-type: none"> • Motor speed, rad/s • Motor torque, N·m • Motor temperature, K • Power loss, W </td> </tr> </tbody> </table> <p>Collect motor data at steady-state operating conditions. Data should cover the motor speed, torque, and temperature operating range.</p> <p>To filter or edit the data, select Edit in Application. The Model-Based Calibration Toolbox Data Editor opens.</p>	Parameterize losses by	Required Data	Tabulated loss data	<ul style="list-style-type: none"> • Motor speed, rad/s • Motor torque, N·m • Power loss, W 	Tabulated loss data with temperature	<ul style="list-style-type: none"> • Motor speed, rad/s • Motor torque, N·m • Motor temperature, K • Power loss, W
Parameterize losses by	Required Data						
Tabulated loss data	<ul style="list-style-type: none"> • Motor speed, rad/s • Motor torque, N·m • Power loss, W 						
Tabulated loss data with temperature	<ul style="list-style-type: none"> • Motor speed, rad/s • Motor torque, N·m • Motor temperature, K • Power loss, W 						
Generate Response Models	<p>Model-Based Calibration Toolbox uses test plans to fit data to Gaussian process models (GPMs).</p> <p>To assess or adjust the response model fit, select Edit in Application. The Model-Based Calibration Toolbox Model Browser opens. For more information, see “Model Assessment” (Model-Based Calibration Toolbox).</p>						

Task	Description						
Generate Calibration	<p>Model-Based Calibration Toolbox calibrates the response models and generates calibrated tables.</p> <p>To assess or adjust the calibration, select Edit in Application. The Model-Based Calibration Toolbox CAGE Browser opens. For more information, see “Calibration Tables” (Model-Based Calibration Toolbox).</p>						
Update block parameters	<p>Update these parameters with the calibration.</p> <table border="1"> <thead> <tr> <th>Parameterize losses by</th> <th>Parameters</th> </tr> </thead> <tbody> <tr> <td>Tabulated loss data</td> <td> <ul style="list-style-type: none"> • Vector of speeds(w) for tabulated losses, w_eff_bp • Vector of torques (T) for tabulated losses, T_eff_bp • Corresponding losses, losses_table </td> </tr> <tr> <td>Tabulated loss data with temperature</td> <td> <ul style="list-style-type: none"> • Vector of speeds(w) for tabulated losses, w_eff_bp • Vector of torques (T) for tabulated losses, T_eff_bp • Vector of temperatures for tabulated losses, Temp_eff_bp • Corresponding losses, losses_table_3d </td> </tr> </tbody> </table>	Parameterize losses by	Parameters	Tabulated loss data	<ul style="list-style-type: none"> • Vector of speeds(w) for tabulated losses, w_eff_bp • Vector of torques (T) for tabulated losses, T_eff_bp • Corresponding losses, losses_table 	Tabulated loss data with temperature	<ul style="list-style-type: none"> • Vector of speeds(w) for tabulated losses, w_eff_bp • Vector of torques (T) for tabulated losses, T_eff_bp • Vector of temperatures for tabulated losses, Temp_eff_bp • Corresponding losses, losses_table_3d
Parameterize losses by	Parameters						
Tabulated loss data	<ul style="list-style-type: none"> • Vector of speeds(w) for tabulated losses, w_eff_bp • Vector of torques (T) for tabulated losses, T_eff_bp • Corresponding losses, losses_table 						
Tabulated loss data with temperature	<ul style="list-style-type: none"> • Vector of speeds(w) for tabulated losses, w_eff_bp • Vector of torques (T) for tabulated losses, T_eff_bp • Vector of temperatures for tabulated losses, Temp_eff_bp • Corresponding losses, losses_table_3d 						

Battery Current

The block calculates the battery current using the mechanical power, power loss, and battery voltage. Positive current indicates battery discharge. Negative current indicates battery charge.

$$BattAmp = \frac{MechPwr + PwrLoss}{BattVolt}$$

The equation uses these variables.

BattVolt Battery voltage
MechPwr Mechanical power
PwrLoss Power loss
BattCurr Battery current

Power Accounting

For the power accounting, the block implements these equations.

Bus Signal		Description	Variable	Equations	
PwrInfo	PwrTrnsfrd	PwrMtr	Mechanical power	P_{mot}	$P_{mot} = \omega_m T_e$
	<ul style="list-style-type: none"> Positive signals indicate power flow into the block. Negative signals indicate power flow out of the block. 	PwrBus	Electrical power	P_{bus}	$P_{bus} = P_{mot} + P_{loss}$
	PwrNotTrnsfrd	PwrLoss	Motor power loss	P_{loss}	$P_{stored} = \omega_m \omega_m J$
	PwrStored	PwrStoredShft	Motor power stored	P_{str}	$P_{loss} = -(P_{mot} + P_{loss} - P_{stored})$

The equations use these variables.

T_e Motor output shaft torque
 ω Motor shaft speed
 J Motor inertia

Ports

Input

BattVolt — Battery voltage

scalar

Battery voltage, $BattVolt$, in V.

TrqCmd — Commanded motor torque

scalar

Commanded motor torque, Trq_{cmd} , in N·m.

Dependencies

To create this input port, for the **Port configuration**, select Torque.

MtrSpd — Motor output shaft speed

scalar

Motor shaft speed, Mtr_{spd} , in rad/s.

Dependencies

To create this input port, for the **Port configuration**, select Speed.

Output

Info — Bus signal

bus

The bus signal contains these block calculations.

Signal			Description	Units
MechPwr			Mechanical power	rad
PwrLoss			Internal inverter and motor power loss	N·m
PwrInfo	PwrTrnsfrd	PwrMtr	Mechanical power	W

Signal		Description	Units
	PwrBus	Electrical power	W
	PwrNotTrnsf rd	Motor power loss	W
	PwrStored	Motor power stored	W

BattCurr — Battery current

scalar

Battery current draw or demand, I_{batt} , in A.

MtrTrq — Motor torque

scalar

Motor output shaft torque, Mtr_{trq} , in N·m.

MtrSpd — Motor shaft speed

scalar

Motor shaft speed, Mtr_{spd} , in rad/s.

Dependencies

To create this output port, for the **Port configuration**, select Torque.

Parameters

Block Options

Port configuration — Select port configuration

Torque (default) | Speed

This table summarizes the port configurations.

Port Configuration	Creates Ports
Torque	Outpost MtrSpd
Speed	Input MtrSpd

Calibrate Maps — Calibrate tables with measured data selection

If you have Model-Based Calibration Toolbox, you can virtually calibrate the measured loss lookup tables.

- 1 On the **Electrical Losses** tab, set **Parameterize losses by** to either:
 - Tabulated loss data
 - Tabulated loss data with temperature
- 2 Click **Calibrate Maps**.

The dialog box steps through these tasks.

Task	Description						
Import Loss Data	Import this loss data from a file. For example, open <code><matlabroot>toolbox/autoblks/autoblksshared/mbctemplates/MappedMotorDataset.xlsx</code> .						
	For more information, see “Using Data” (Model-Based Calibration Toolbox).						
	<table border="1"> <thead> <tr> <th>Parameterize losses by</th> <th>Required Data</th> </tr> </thead> <tbody> <tr> <td>Tabulated loss data</td> <td> <ul style="list-style-type: none"> • Motor speed, rad/s • Motor torque, N·m • Power loss, W </td> </tr> <tr> <td>Tabulated loss data with temperature</td> <td> <ul style="list-style-type: none"> • Motor speed, rad/s • Motor torque, N·m • Motor temperature, K • Power loss, W </td> </tr> </tbody> </table>	Parameterize losses by	Required Data	Tabulated loss data	<ul style="list-style-type: none"> • Motor speed, rad/s • Motor torque, N·m • Power loss, W 	Tabulated loss data with temperature	<ul style="list-style-type: none"> • Motor speed, rad/s • Motor torque, N·m • Motor temperature, K • Power loss, W
	Parameterize losses by	Required Data					
Tabulated loss data	<ul style="list-style-type: none"> • Motor speed, rad/s • Motor torque, N·m • Power loss, W 						
Tabulated loss data with temperature	<ul style="list-style-type: none"> • Motor speed, rad/s • Motor torque, N·m • Motor temperature, K • Power loss, W 						
Collect motor data at steady-state operating conditions. Data should cover the motor speed, torque, and temperature operating range.							
	To filter or edit the data, select Edit in Application . The Model-Based Calibration Toolbox Data Editor opens.						

Task	Description						
Generate Response Models	<p>Model-Based Calibration Toolbox uses test plans to fit data to Gaussian process models (GPMs).</p> <p>To assess or adjust the response model fit, select Edit in Application. The Model-Based Calibration Toolbox Model Browser opens. For more information, see “Model Assessment” (Model-Based Calibration Toolbox).</p>						
Generate Calibration	<p>Model-Based Calibration Toolbox calibrates the response models and generates calibrated tables.</p> <p>To assess or adjust the calibration, select Edit in Application. The Model-Based Calibration Toolbox CAGE Browser opens. For more information, see “Calibration Tables” (Model-Based Calibration Toolbox).</p>						
Update block parameters	<p>Update these parameters with the calibration.</p> <table border="1" data-bbox="476 821 1328 1355"> <thead> <tr> <th data-bbox="476 821 691 899">Parameterize losses by</th> <th data-bbox="691 821 1328 899">Parameters</th> </tr> </thead> <tbody> <tr> <td data-bbox="476 899 691 1090">Tabulated loss data</td> <td data-bbox="691 899 1328 1090"> <ul style="list-style-type: none"> • Vector of speeds(w) for tabulated losses, w_eff_bp • Vector of torques (T) for tabulated losses, T_eff_bp • Corresponding losses, losses_table </td> </tr> <tr> <td data-bbox="476 1090 691 1355">Tabulated loss data with temperature</td> <td data-bbox="691 1090 1328 1355"> <ul style="list-style-type: none"> • Vector of speeds(w) for tabulated losses, w_eff_bp • Vector of torques (T) for tabulated losses, T_eff_bp • Vector of temperatures for tabulated losses, Temp_eff_bp • Corresponding losses, losses_table_3d </td> </tr> </tbody> </table>	Parameterize losses by	Parameters	Tabulated loss data	<ul style="list-style-type: none"> • Vector of speeds(w) for tabulated losses, w_eff_bp • Vector of torques (T) for tabulated losses, T_eff_bp • Corresponding losses, losses_table 	Tabulated loss data with temperature	<ul style="list-style-type: none"> • Vector of speeds(w) for tabulated losses, w_eff_bp • Vector of torques (T) for tabulated losses, T_eff_bp • Vector of temperatures for tabulated losses, Temp_eff_bp • Corresponding losses, losses_table_3d
Parameterize losses by	Parameters						
Tabulated loss data	<ul style="list-style-type: none"> • Vector of speeds(w) for tabulated losses, w_eff_bp • Vector of torques (T) for tabulated losses, T_eff_bp • Corresponding losses, losses_table 						
Tabulated loss data with temperature	<ul style="list-style-type: none"> • Vector of speeds(w) for tabulated losses, w_eff_bp • Vector of torques (T) for tabulated losses, T_eff_bp • Vector of temperatures for tabulated losses, Temp_eff_bp • Corresponding losses, losses_table_3d 						


Electrical Torque

Parameterized by — Select type

Tabulated torque-speed envelope (default) | Maximum torque and power

Setting	Block Implementation
Tabulated torque-speed envelope	Range specified as a set of speed data points and corresponding maximum torque values.
Maximum torque and power	Range specified with maximum torque and maximum power.

For either method, the block implements an envelope similar to this.

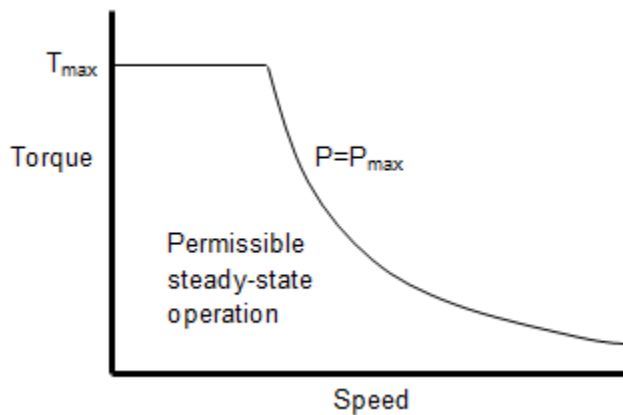

Vector of rotational speeds, w_t – Rotational speeds

vector

Rotational speeds for permissible steady-state operation, in rad/s. To avoid poor performance due to an infinite slope in the torque-speed curve, specify a vector of rotational speeds that does not contain duplicate consecutive values.

Dependencies

To create this parameter, for the **Parameterized by** parameter, select Tabulated torque-speed envelope.

Vector of maximum torque values, T_t – Torque

vector

Maximum torque values for permissible steady state, in N·m.

Dependencies

To create this parameter, for the **Parameterized by** parameter, select Tabulated torque-speed envelope.

Maximum torque, torque_max — Torque
scalar

The maximum permissible motor torque, in N·m.

Dependencies

To create this parameter, for the **Parameterized by** parameter, select Maximum torque and power.

Maximum power, power_max — Power
scalar

The maximum permissible motor power, in W.

Dependencies

To create this parameter, for the **Parameterized by** parameter, select Maximum torque and power.

Torque control time constant, Tc — Time constant
scalar

Time constant with which the motor driver tracks a torque demand, in s.

Electrical Losses

Parameterize losses by — Select type

Single efficiency measurement (default) | Tabulated loss data | Tabulated efficiency data

Setting	Block Implementation
Single efficiency measurement	<p>Sum of these terms, measured at a single measurement point:</p> <ul style="list-style-type: none"> • Fixed losses independent of torque and speed, P_0. Use P_0 to account for fixed converter losses. • A torque-dependent electrical loss $k\tau^2$, where k is a constant and τ is the torque. Represents ohmic losses in the copper windings. • A speed-dependent electrical loss $k_w\omega^2$, where k_w is a constant and ω is the speed. Represents iron losses due to eddy currents.
Tabulated loss data	<p>Loss lookup table that is a function of motor speeds and load torques.</p> <p>If you have Model-Based Calibration Toolbox, click Calibrate Maps to virtually calibrate the 2D lookup tables using measured data.</p>
Tabulated loss data with temperature	<p>Loss lookup table that is a function of motor speeds, load torques, and operating temperature.</p> <p>If you have Model-Based Calibration Toolbox, click Calibrate Maps to virtually calibrate the 3D lookup tables using measured data.</p>

Setting	Block Implementation
Tabulated efficiency data	<p>2D efficiency lookup table that is a function of motor speeds and load torques:</p> <ul style="list-style-type: none"> • Converts the efficiency values you provide into losses and uses the tabulated losses for simulation. • Ignores efficiency values you provide for zero speed or zero torque. Losses are assumed zero when either torque or speed is zero. • Uses linear interpolation to determine losses. Provide tabulated data for low speeds and low torques, as required, to get the desired level of accuracy for lower power conditions. • Does not extrapolate loss values for speed and torque magnitudes that exceed the range of the table.
Tabulated efficiency data with temperature	<p>3D efficiency lookup table that is a function of motor speeds, load torques, and operating temperature:</p> <ul style="list-style-type: none"> • Converts the efficiency values you provide into losses and uses the tabulated losses for simulation. • Ignores efficiency values you provide for zero speed or zero torque. Losses are assumed zero when either torque or speed is zero. • Uses linear interpolation to determine losses. Provide tabulated data for low speeds and low torques, as required, to get the desired level of accuracy for lower power conditions. • Does not extrapolate loss values for speed, torque, or temperature magnitudes that exceed the range of the table.

For best practice, use `Tabulated loss data` instead of `Tabulated efficiency data`:

- Efficiency becomes ill defined for zero speed or zero torque.
- You can account for fixed losses that are still present for zero speed or torque.

Note Due to system losses, the motor can draw a current when the motor torque is zero.

Motor and drive overall efficiency, **eff** – Efficiency

scalar

The block defines overall efficiency as:

$$\eta = 100 \frac{\tau_0 \omega_0}{\tau_0 \omega_0 + P_0 + k \tau_0^2 + k_w \omega_0^2}$$

The equation uses these variables.

τ_0	Torque at which efficiency is measured
ω_0	Speed at which efficiency is measured
P_0	Fixed losses independent of torque or speed
$k \tau_0^2$	Torque-dependent electrical losses
$k_w \omega^2$	Speed-dependent iron losses

At initialization, the block solves the efficiency equation for k . The block neglects losses associated with the rotor damping.

Dependencies

To create this parameter, for the **Parameterize losses by** parameter, select Single efficiency measurement.

Speed at which efficiency is measured, **w_eff** – Speed

scalar

Speed at which efficiency is measured, in rad/s.

Dependencies

To create this parameter, for the **Parameterize losses by** parameter, select Single efficiency measurement.

Torque at which efficiency is measured, **T_eff** – Torque

scalar

Torque at which efficiency is measured, in N·m.

Dependencies

To create this parameter, for the **Parameterize losses by** parameter, select Single efficiency measurement.

Iron losses, P_{iron} — Power

scalar

Iron losses at the speed and torque at which efficiency is defined, in W.

Dependencies

To create this parameter, for the **Parameterize losses by** parameter, select Single efficiency measurement.

Fixed losses independent of torque and speed, P_{fixed} — Power

scalar

Fixed electrical loss associated with the driver when the motor current and torque are zero, in W.

Dependencies

To create this parameter, for the **Parameterize losses by** parameter, select Single efficiency measurement.

Vector of speeds (w) for tabulated losses, w_{eff_bp} — Breakpoints

1-by-M array

Speed breakpoints for lookup table when calculating losses, in rad/s. Array dimensions are 1 by the number of speed breakpoints, M.

Dependencies

To create this parameter, for the **Parameterize losses by** parameter, select one of these:

- Tabulated loss data
- Tabulated loss data with temperature
- Tabulated efficiency data
- Tabulated efficiency data with temperature

Vector of torques (T) for tabulated losses, T_{eff_bp} — Breakpoints

1-by-N array

Torque breakpoints for lookup table when calculating losses, in N·m. Array dimensions are 1 by the number of torque breakpoints, N.

Dependencies

To create this parameter, for the **Parameterize losses by** parameter, select one of these:

- Tabulated loss data
- Tabulated loss data with temperature
- Tabulated efficiency data
- Tabulated efficiency data with temperature

Vector of temperatures for tabulated losses, Temp_eff_bp – Breakpoints

1-by-L array

Temperature breakpoints for lookup table when calculating losses, in K. Array dimensions are 1 by the number of temperature breakpoints, L.

Dependencies

To create this parameter, for the **Parameterize losses by** parameter, select one of these:

- Tabulated loss data with temperature
- Tabulated efficiency data with temperature

Corresponding losses, losses_table – 2D lookup table

M-by-N array

Array of values for electrical losses as a function of speed and torque, in W. Each value specifies the losses for a specific combination of speed and torque. The array dimensions must match the speed, M, and torque, N, breakpoint vector dimensions.

Dependencies

To create this parameter, for the **Parameterize losses by** parameter, select Tabulated loss data.

Corresponding losses, losses_table_3d – 3D lookup table

M-by-N-by-L array

Array of values for electrical losses as a function of speed, torque, and temperature, in W. Each value specifies the losses for a specific combination of speed, torque, and

temperature. The array dimensions must match the speed, M, torque, N, and temperature, L, breakpoint vector dimensions.

Dependencies

To create this parameter, for the **Parameterize losses by** parameter, select Tabulated loss data with temperature.

Corresponding efficiency, `efficiency_table` — 2D lookup table

M-by-N array

Array of efficiency as a function of speed and torque, in %. Each value specifies the losses for a specific combination of speed and torque. The array dimensions must match the speed, M, and torque, N, breakpoint vector dimensions.

The block ignores efficiency values for zero speed or zero torque. Losses are zero when either torque or speed is zero. The block uses linear interpolation.

To get the desired level of accuracy for lower power conditions, you can provide tabulated data for low speeds and low torques.

Dependencies

To create this parameter, for the **Parameterize losses by** parameter, select Tabulated efficiency data.

Corresponding efficiency, `efficiency_table_3d` — 3D lookup table

M-by-N-by-L array

Array of efficiency as a function of speed and torque, in %. Each value specifies the losses for a specific combination of speed and torque. The array dimensions must match the speed, M, torque, N, and temperature, L, breakpoint vector dimensions.

The block ignores efficiency values for zero speed or zero torque. Losses are zero when either torque or speed is zero. The block uses linear interpolation.

To get the desired level of accuracy for lower power conditions, you can provide tabulated data for low speeds and low torques.

Dependencies

To create this parameter, for the **Parameterize losses by** parameter, select Tabulated efficiency data.

Mechanical

Rotational inertia, J – Inertia

scalar

Rotor resistance to change in motor motion, in $\text{kg}\cdot\text{m}^2$. The value can be zero.

Dependencies

To create this parameter, for the **Port configuration** parameter, select Torque.

Rotor damping, b – Damping

scalar

Rotor damping, in $\text{N}\cdot\text{m}/(\text{rad}/\text{s})$. The value can be zero.

Dependencies

To create this parameter, for the **Port configuration** parameter, select Torque.

Initial rotor speed, ω_o – Speed

scalar

Rotor speed at the start of the simulation, in rad/s .

Dependencies

To create this parameter, for the **Port configuration** parameter, select Torque.

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using Simulink® Coder™.

See Also

Flux-Based PMSM | Induction Motor | Interior PMSM | Surface Mount PMSM


Introduced in R2017a

Scenario Creation Blocks — Alphabetical List

Drive Cycle Source

Standard or specified longitudinal drive cycle

Library: Powertrain Blockset / Vehicle Scenario Builder
Vehicle Dynamics Blockset / Vehicle Scenarios / Drive Cycle and Maneuvers

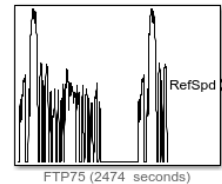

Description

The Drive Cycle Source block generates a standard or user-specified longitudinal drive cycle. The block output is the specified vehicle longitudinal speed, which you can use to:

- Predict the engine torque and fuel consumption that a vehicle requires to achieve desired speed and acceleration for a given gear shift reference.
- Produce realistic velocity and shift references for closed loop acceleration and braking commands for vehicle control and plant models.
- Study, tune, and optimize vehicle control, system performance, and system robustness over multiple drive cycles.

For the drive cycles, you can use:

- Drive cycles from predefined sources. By default, the block includes the FTP–75 drive cycle. To install additional drive cycles from a support package, see “Install Drive Cycle Data”. The support package has drive cycles that include the gear shift schedules, for example JC08 and CUEDC.
- Workspace variables.
- .mat, .xls, .xlsx, or .txt files.
- Wide open throttle (WOT) parameters, including initial and nominal reference speed, deceleration start time, and final reference speed.

To achieve the goals listed in the table, use the specified Drive Cycle Source block parameter options.

Goal	Action
Repeat the drive cycle if the simulation run time exceeds the drive cycle length.	Select Repeat cyclically .
Output the acceleration, as calculated by Savitzky-Golay differentiation.	Select Output acceleration .
Specify a sample period for discrete applications.	Specify a Output sample period (0 for continuous), dt parameter.
Update the simulation run time so that it equals the length of the drive cycle.	Click Update simulation time . If a model configuration reference exists, the block does not enable this option.
Plot the drive cycle in a MATLAB® figure.	Click Plot drive cycle .
Specify the drive cycle using a workspace variable.	Click Specify variable . The block: <ul style="list-style-type: none"> • Sets the Drive cycle source parameter to Workspace variable. • Enables the From workspace parameter. Specify the workspace variable so that it contains time, velocity, and, optionally, the gear shift schedule.
Specify the drive cycle using a file.	Click Select file . The block: <ul style="list-style-type: none"> • Sets the Drive cycle source parameter to .mat, .xls, .xlsx or .txt file. • Enables the Drive cycle source file parameter. Specify a file that contains time, velocity, and, optionally, the gear shift schedule.

Goal	Action
Output drive cycle gear.	Specify a drive cycle that contains a gear shift schedule. You can use: <ul style="list-style-type: none"> • A support package to install standard drive cycles that include the gear shift schedules, for example JC08 and CUEDC. • Workspace variables. • .mat, .xls, .xlsx, or .txt files. Click Output gear shift data .
Install additional drive cycles from a support package.	Click Install additional drive cycles . The block enables the parameter if you can install additional drive cycles from a support package.

Ports

Output

Speed — Vehicle reference speed

scalar

Vehicle reference speed, in units that you specify. To specify the units, use the **Output velocity units** parameter.

Acceleration — Vehicle reference acceleration

scalar

To calculate the acceleration, the block implements Savitzky-Golay differentiation using a second-order polynomial with a three-sample point filter.

Dependencies

To create the output acceleration port, select **Output acceleration**. Selecting **Output acceleration** enables the **Output acceleration units** parameter.

Gear — Vehicle gear

scalar

Dependencies

To create this port:

- 1 Specify a drive cycle that contains a gear shift schedule. You can use:
 - A support package to install standard drive cycles that include the gear shift schedules, for example JC08 and CUEDC.
 - Workspace variables.
 - .mat, .xls, .xlsx, or .txt files.
- 2 Select **Output gear shift** data.

Parameters

Drive Cycle

Drive cycle source — Select the drive cycle source

FTP75 (default) | Wide Open Throttle (WOT) | Workspace variable
|.mat, .xls, .xlsx or .txt file

- **FTP75** — Load the FTP75 drive cycle from a .mat file into a 1-D Lookup Table block. The FTP75 represents a city drive cycle that you can use to determine tailpipe emissions and fuel economy of passenger cars. To install additional drive cycles from a support package, see “Install Drive Cycle Data”.
- **Wide Open Throttle (WOT)** — Use WOT parameters to specify a drive cycle for performance testing.
- **Workspace variable** — Specify time, speed, and, optionally, gear data as a structure, 2-D array, or time series object.
- **.mat, .xls, .xlsx or .txt file** — Specify a file that contains time, speed and, optionally, gear data in column format.

Once you have installed additional cycles, you can use `set_param` to set the drive cycle. For example, to use drive cycle US06:

```
set_param([gcs '/Drive Cycle Source'], 'cycleVar', 'US06')
```

Dependencies


The table summarizes the parameter dependencies.


Drive Cycle Source	Enables Parameter
Wide Open Throttle (WOT)	Start time, <code>t_wot1</code>
	Initial reference speed, <code>xdot_woto</code>
	Nominal reference speed, <code>xdot_wot1</code>
	Time to start deceleration, <code>wot2</code>
	Final reference speed, <code>xdot_wot2</code>
	WOT simulation time, <code>t_wotend</code>
	Source velocity units
Workspace variable	From workspace
	Source velocity units
	Output gear shift data, if drive cycle includes gear shift schedule
.mat, .xls, .xlsx or .txt file	Drive cycle source file
	Source velocity units
	Output gear shift data, if drive cycle includes gear shift schedule


From workspace — Workspace variable


Monotonically increasing time, velocity, and, optionally, gear data, specified by a structure, 2-D array, or time series object. Enter units for velocity in the **Source velocity units** parameter field.


A valid point must exist for each corresponding time value. You cannot specify `inf`, empty, or `NaN`.

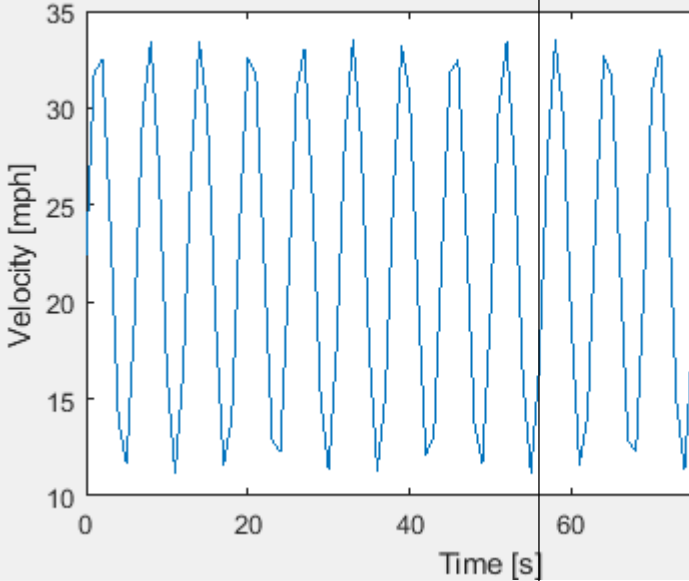Workspace Variable	Source Velocity Unit	Output Velocity Unit	Drive Cycle Plot
<p>Structure without a gear shift schedule. From workspace set to myCycleS.</p> <pre>t = 0:1:100; xdot = 5.*sin(t)+10; myCycleS.time = t'; myCycleS.signals.values = xdot';</pre>	m/s	mph	<p>Custom Data Set</p> 

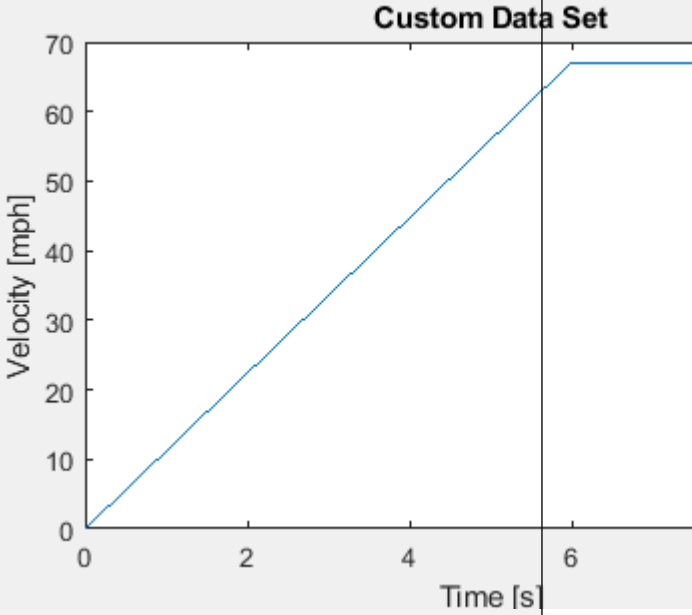Workspace Variable	Source Velocity Unit	Output Velocity Unit	Drive Cycle Plot
<p>Structure with a gear shift schedule. From workspace set to myCycleS.</p> <pre>gears=[0, 1, 2, 3, 3, 4, 4, 4, 4, 4, 4]; t=0:1:10; xdot=[0,5,10,15,20,25,30,30,30,30,30]; myCycleS.time=t'; myCycleS.signals.values=[xdot',gears'</pre>	m/s	mph	 <p>The graph displays a velocity profile over time. The x-axis is labeled 'Time [s]' and ranges from 0 to 6 with major ticks every 2 units. The y-axis is labeled 'Velocity [mph]' and ranges from 0 to 70 with major ticks every 10 units. The data points are connected by a blue line. The velocity starts at 0 mph at 0s and increases linearly to approximately 68 mph at 6s. From 6s to 10s, the velocity remains constant at approximately 68 mph.</p>

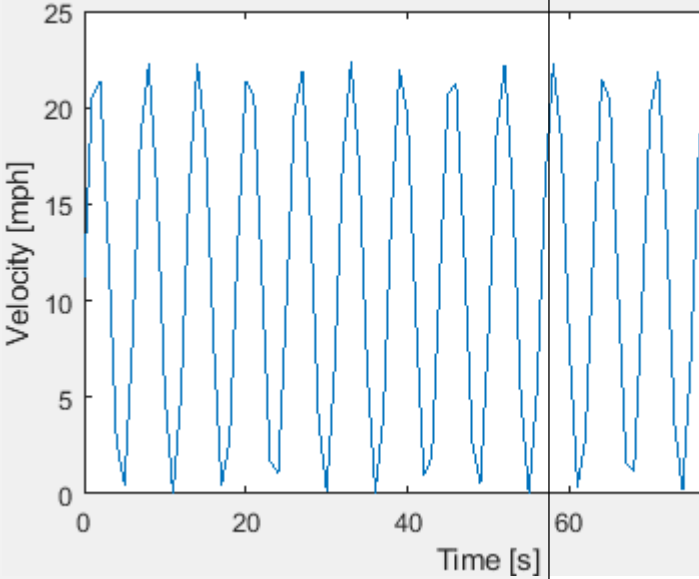Workspace Variable	Source Velocity Unit	Output Velocity Unit	Drive Cycle Plot
<p>2-D array without a gear shift schedule. From workspace set to myCycleA.</p> <pre>t = 0:1:100; xdot = 5.*sin(t)+5; myCycleA = [t',xdot'];</pre>	m/s	mph	

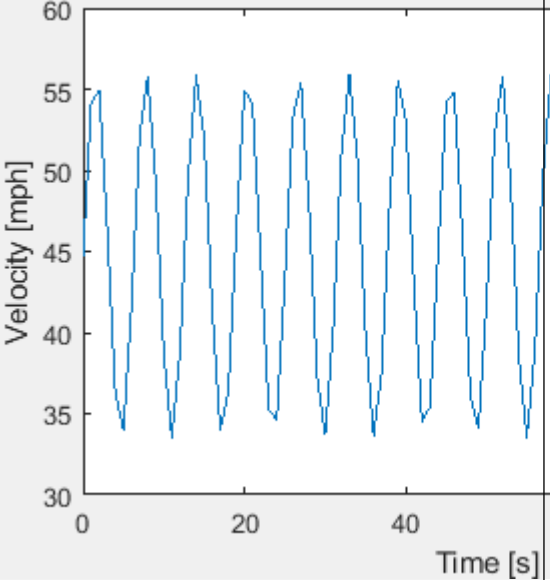Workspace Variable	Source Velocity Unit	Output Velocity Unit	Drive Cycle Plot
<p>Time series object without a gear shift schedule. From workspace set to myCycleT.</p> <pre>myCycleT = timeseries; t = 0:1:100; xdot = 5.*sin(t)+20; myCycleT.Data = xdot'; myCycleT.Time = t;</pre>	m/s	mph	<p>Custom Data Set 1</p> 

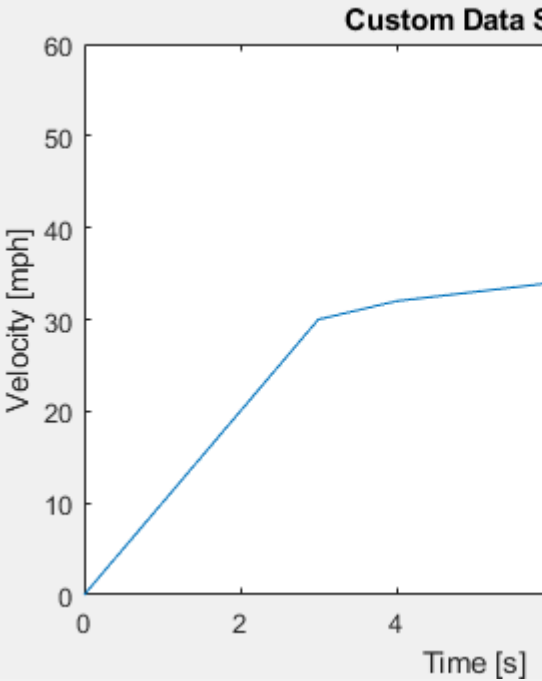Workspace Variable	Source Velocity Unit	Output Velocity Unit	Drive Cycle Plot
<p>Time series object without a gear shift schedule. From workspace set to <code>myCycleT</code>.</p> <pre>myCycleT = timeseries; gears=[0, 1, 2, 3, 4, 4, 4, 5, 5, 5, 5]; t=0:1:10; xdot=[0,10,20,30,32,33,34,40,50,60,60]; myCycleT.Data = [xdot',gears']; myCycleT.Time = t';</pre>	mph	mph	


Dependencies


To enable this parameter, select **Workspace** variable from **Drive cycle source**.

Drive cycle source file — File name

.mat, .xls, .xlsx or .txt

File containing monotonically increasing time, velocity, and, optionally, gear in column or comma-separated format. The block ignores units in the file. Enter units for velocity in the **Source velocity units** parameter field.

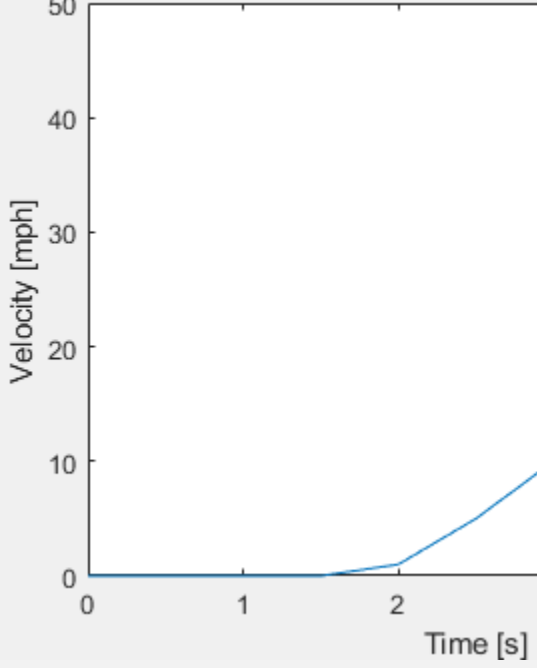File	Source Velocity Unit	Output Velocity Unit	Drive Cycle Plot																																				
<p>An .xls or .xlsx file with time in column A and velocity in column B.</p> <table border="1" data-bbox="246 552 468 909"> <thead> <tr> <th></th> <th>A</th> <th>B</th> </tr> </thead> <tbody> <tr><td>1</td><td>0</td><td>0</td></tr> <tr><td>2</td><td>0.5</td><td>0</td></tr> <tr><td>3</td><td>1</td><td>0</td></tr> <tr><td>4</td><td>1.5</td><td>0</td></tr> <tr><td>5</td><td>2</td><td>1</td></tr> <tr><td>6</td><td>2.5</td><td>5</td></tr> <tr><td>7</td><td>3</td><td>10</td></tr> <tr><td>8</td><td>3.5</td><td>20</td></tr> <tr><td>9</td><td>4</td><td>30</td></tr> <tr><td>10</td><td>4.5</td><td>40</td></tr> <tr><td>11</td><td>5</td><td>50</td></tr> </tbody> </table>		A	B	1	0	0	2	0.5	0	3	1	0	4	1.5	0	5	2	1	6	2.5	5	7	3	10	8	3.5	20	9	4	30	10	4.5	40	11	5	50	mph	mph	<p>Custom Data Set</p> 
	A	B																																					
1	0	0																																					
2	0.5	0																																					
3	1	0																																					
4	1.5	0																																					
5	2	1																																					
6	2.5	5																																					
7	3	10																																					
8	3.5	20																																					
9	4	30																																					
10	4.5	40																																					
11	5	50																																					

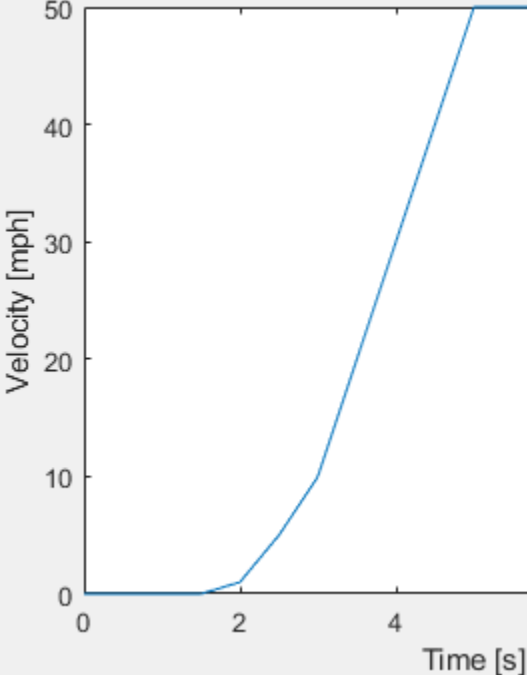File	Source Velocity Unit	Output Velocity Unit	Drive Cycle Plot																																																				
<p>An .xls or .xlsx file with time in column A, velocity in column B, and gear in column C. The block:</p> <ul style="list-style-type: none"> • Ignores the units in the file. • Converts the gear information to integers: <ul style="list-style-type: none"> • N to 0 • D to 2 <table border="1" data-bbox="244 847 578 1242"> <thead> <tr> <th></th> <th>A</th> <th>B</th> <th>C</th> </tr> </thead> <tbody> <tr> <td>1</td> <td>sec</td> <td>mph</td> <td>gear</td> </tr> <tr> <td>2</td> <td>0</td> <td>0</td> <td>N</td> </tr> <tr> <td>3</td> <td>0.5</td> <td>0</td> <td>N</td> </tr> <tr> <td>4</td> <td>1</td> <td>0</td> <td>N</td> </tr> <tr> <td>5</td> <td>1.5</td> <td>0</td> <td>N</td> </tr> <tr> <td>6</td> <td>2</td> <td>1</td> <td>D</td> </tr> <tr> <td>7</td> <td>2.5</td> <td>5</td> <td>D</td> </tr> <tr> <td>8</td> <td>3</td> <td>10</td> <td>D</td> </tr> <tr> <td>9</td> <td>3.5</td> <td>20</td> <td>D</td> </tr> <tr> <td>10</td> <td>4</td> <td>30</td> <td>D</td> </tr> <tr> <td>11</td> <td>4.5</td> <td>40</td> <td>D</td> </tr> <tr> <td>12</td> <td>5</td> <td>50</td> <td>D</td> </tr> </tbody> </table>		A	B	C	1	sec	mph	gear	2	0	0	N	3	0.5	0	N	4	1	0	N	5	1.5	0	N	6	2	1	D	7	2.5	5	D	8	3	10	D	9	3.5	20	D	10	4	30	D	11	4.5	40	D	12	5	50	D	mph	mph	<p>Custom Data Set</p> 
	A	B	C																																																				
1	sec	mph	gear																																																				
2	0	0	N																																																				
3	0.5	0	N																																																				
4	1	0	N																																																				
5	1.5	0	N																																																				
6	2	1	D																																																				
7	2.5	5	D																																																				
8	3	10	D																																																				
9	3.5	20	D																																																				
10	4	30	D																																																				
11	4.5	40	D																																																				
12	5	50	D																																																				

File	Source Velocity Unit	Output Velocity Unit	Drive Cycle Plot
<p>A .txt with time in column 1 and velocity in column 2. The block ignores the header and units information.</p> <pre> Time Speed sec mph 0 0 1 0 2 0 3 0 4 0 5 5 6 10 7 15 8 20 9 30 10 35 11 40 12 45 13 50 14 55 15 60 16 60 17 60 18 60 19 60 20 60 </pre>	mph	mph	<p>The graph displays a velocity profile over time. The y-axis is labeled 'Velocity [mph]' and ranges from 0 to 60 in increments of 10. The x-axis is labeled 'Time [s]' and ranges from 0 to 15, with major ticks at 0, 5, 10, and 15. The data points from the table are plotted, showing a constant velocity of 0 mph from 0 to 4 seconds, followed by a linear increase to 60 mph at 15 seconds.</p>

If you provide the gear schedule using **P**, **R**, **N**, **D**, **L**, **OD**, the block maps the gears to integers.

Gear	Integer
P	80
R	-1
N	0

Gear	Integer
L	1
D	2
OD	Next integer after highest specified gear.

For example, the block converts the gear schedule P P N L D 3 4 5 6 5 4 5 6 7 OD 7 to 80 80 0 1 2 3 4 5 6 5 4 5 6 7 8 7.

Dependencies

To enable this parameter, select `.mat`, `.xls`, `.xlsx` or `.txt` file from **Drive cycle source**.

Repeat cyclically — Repeat drive cycle

off (default)

Repeat the drive cycle if the simulation run time exceeds the length of the drive cycle.

Output acceleration — Output the acceleration

off (default)

To calculate the acceleration, the block implements Savitzky-Golay differentiation using a second-order polynomial with a three-sample point filter.

Dependencies

To create the output acceleration port, select **Output acceleration**. Selecting **Output acceleration** enables the **Output acceleration units** parameter.

Output gear shift data — Output the gear

off (default)

Dependencies


- Specify a drive cycle that contains a gear shift schedule. You can use:
 - A support package to install standard drive cycles that include the gear shift schedules, for example JC08 and CUEDC.
 - Workspace variables.
 - `.mat`, `.xls`, `.xlsx`, or `.txt` files.
- Clicking this parameter creates input port **Gear**.

WOT

Start time, t_{wot1} — Drive cycle start time

scalar

Drive cycle start time, in s. For example, this plot shows a drive cycle with a start time of 10 s.

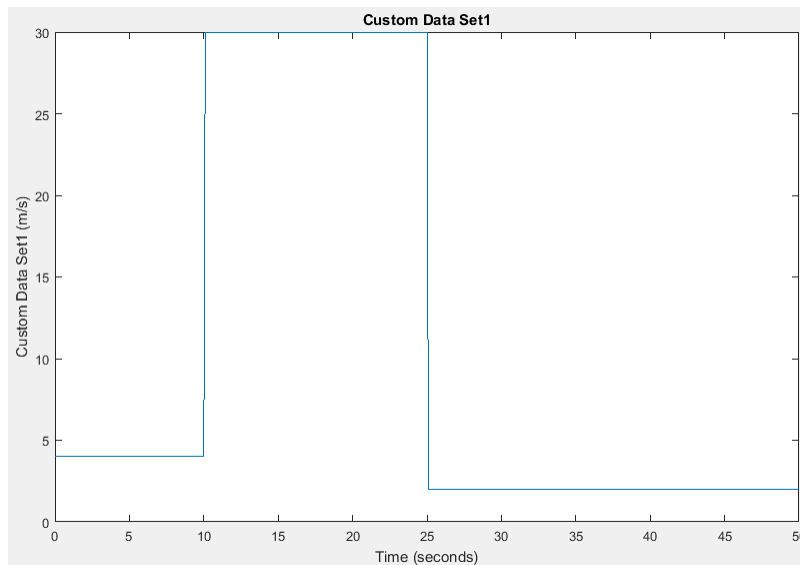


Dependencies

To enable this parameter, select the **Drive cycle source** parameter Wide Open Throttle (WOT).

Initial reference speed, $x_{\text{dot_woto}}$ — Speed

scalar

Initial reference speed, in units that you specify with the **Source velocity units** parameter. For example, this plot shows a drive cycle with an initial reference speed of 4 m/s.

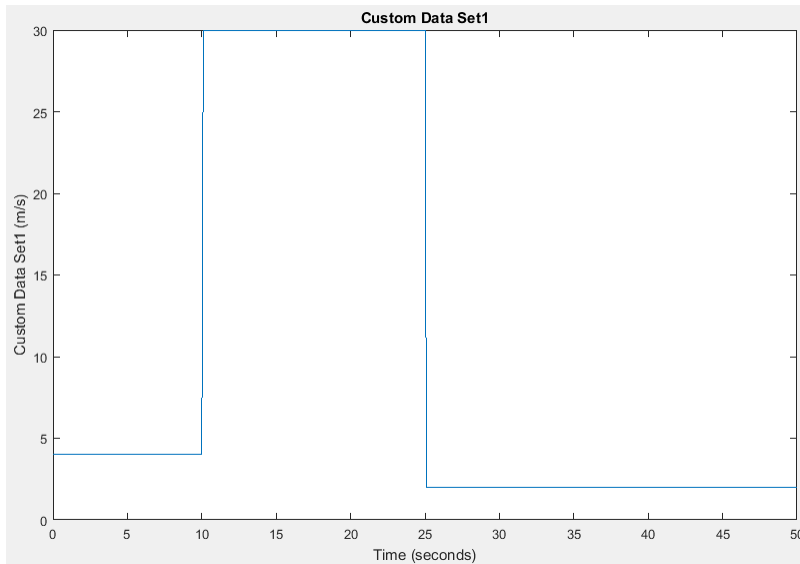


Dependencies

To enable this parameter, select the **Drive cycle source** parameter Wide Open Throttle (WOT).

Nominal reference speed, `xdot_wot1` — Speed scalar

Nominal reference speed, in units that you specify with the **Source velocity units** parameter. For example, this plot shows a drive cycle with a nominal reference speed of 30 m/s.

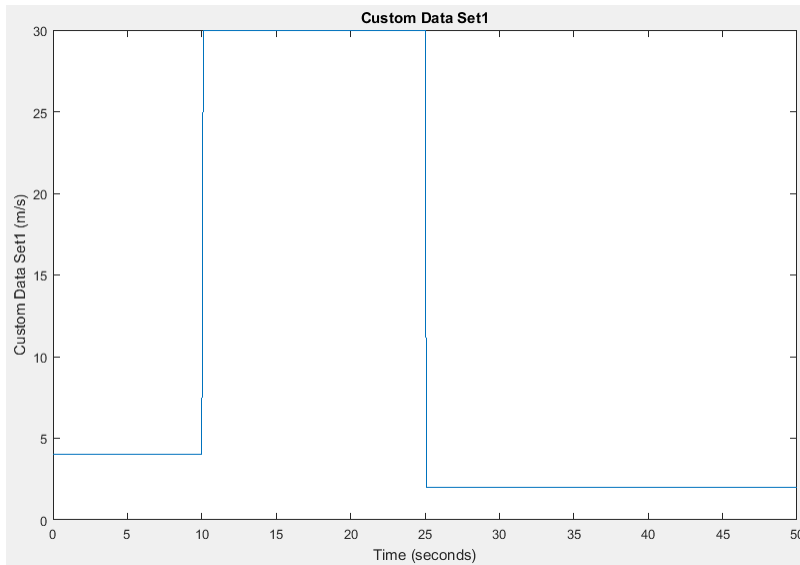


Dependencies

To enable this parameter, select the **Drive cycle source** parameter Wide Open Throttle (WOT).

Time to start deceleration, wot2 – Time scalar

Time to start vehicle deceleration, in s. For example, this plot shows a drive cycle with vehicle deceleration starting at 25 s.

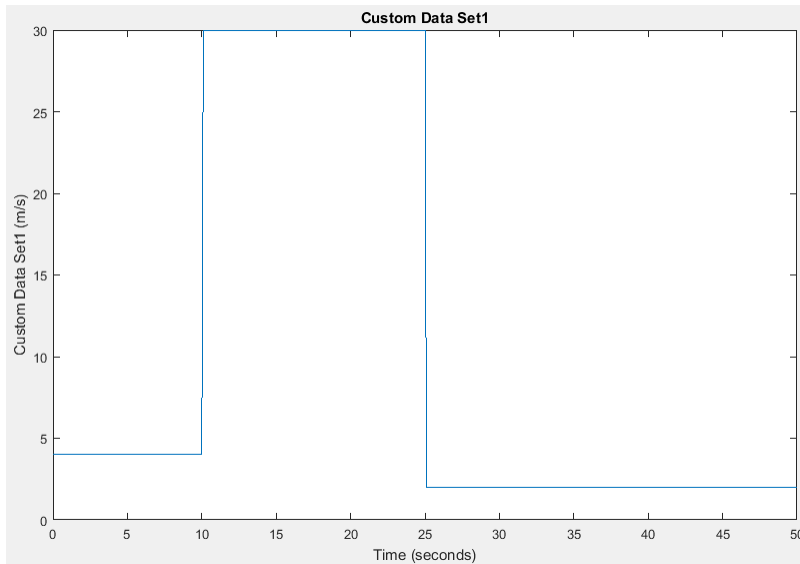


Dependencies

To enable this parameter, select the **Drive cycle source** parameter Wide Open Throttle (WOT).

Final reference speed, `xdot_wot2` — Speed scalar

Final reference speed, in units that you specify with the **Source velocity units** parameter. For example, this plot shows a drive cycle with a final reference speed of 2 m/s.

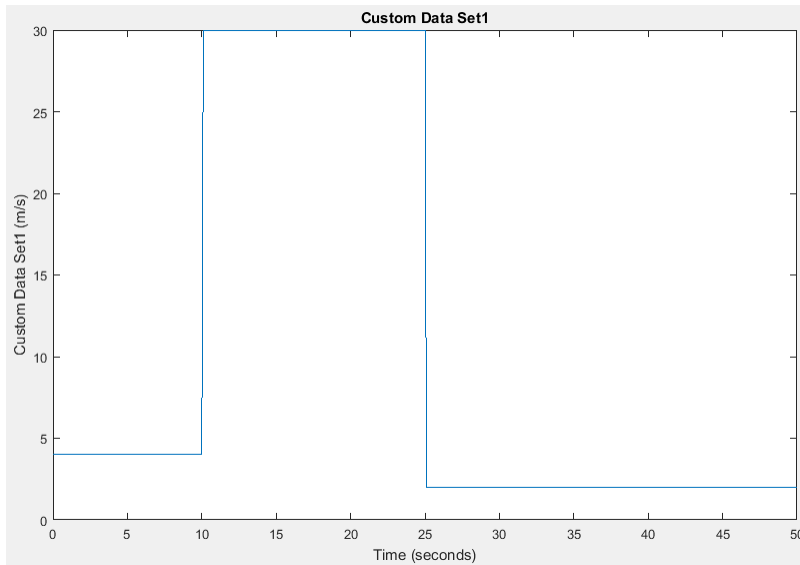


Dependencies

To enable this parameter, select the **Drive cycle source** parameter Wide Open Throttle (WOT).

WOT simulation time, `t_wotend` – Time scalar

Drive cycle WOT simulation time, in s. For example, this plot shows a drive cycle with a simulation time of 50 s.

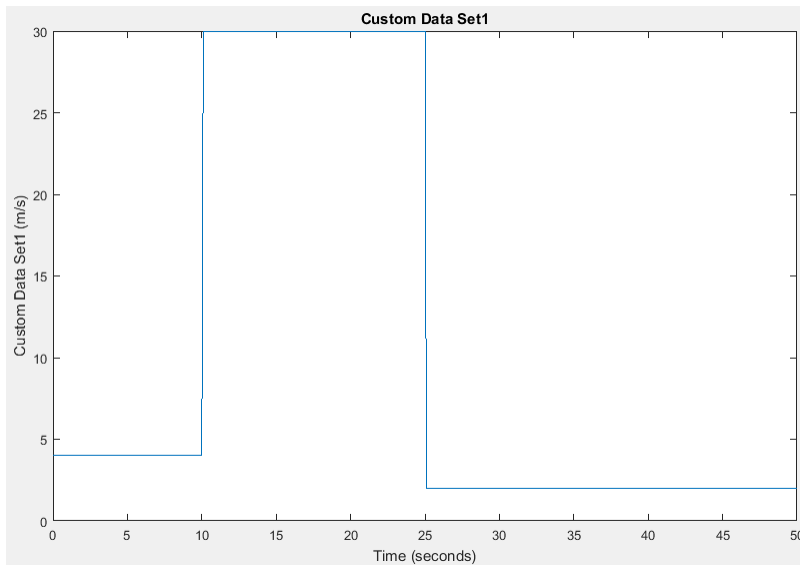

Dependencies

To enable this parameter, select the **Drive cycle source** parameter Wide Open Throttle (WOT).

Units and Sample Period

Source velocity units — Specify velocity units

m/s (default)

Input velocity units.

Dependencies

To enable this parameter, select the **Drive cycle source** parameter Wide Open Throttle (WOT), Workspace variable, or .mat, .xls, .xlsx or .txt file.

Output velocity units — Specify velocity units

m/s (default)

Output velocity units.

Output acceleration units — Specify acceleration units

m/s² (default)

Specify the output acceleration units.

Dependencies

To enable this parameter, select **Output acceleration**.

Output sample period (0) for continuous – Sample rate scalar

Sample rate. Set to 0 for continuous sample period. For a discrete period, specify a non-zero rate.

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using Simulink® Coder™.

See Also

Longitudinal Driver

Topics


“Time Series Objects and Collections” (MATLAB)

Introduced in R2017a

Longitudinal Driver

Longitudinal speed-tracking controller

Library: Powertrain Blockset / Vehicle Scenario Builder
 Vehicle Dynamics Blockset / Vehicle Scenarios / Driver

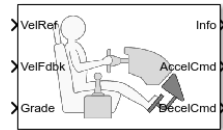

Description

The Longitudinal Driver block implements a longitudinal speed-tracking controller. Based on reference and feedback velocities, the block generates normalized acceleration and braking commands that can vary from 0 through 1. You can use the block to model the dynamic response of a driver or to generate the commands necessary to track a longitudinal drive cycle.

Configurations

Controller

Use the **Control type**, **cntrlType** parameter to specify one of these control options.

Setting	Block Implementation
PI	Proportional-integral (PI) control with tracking windup and feed-forward gains.
Scheduled PI	PI control with tracking windup and feed-forward gains that are a function of vehicle velocity.

Setting	Block Implementation
Predictive	<p>Optimal single-point preview (look ahead) control model developed by C. C. MacAdam^{1, 2, 3}. The model represents driver steering control behavior during path-following and obstacle avoidance maneuvers. Drivers preview (look ahead) to follow a predefined path. To implement the MacAdam model, the block:</p> <ul style="list-style-type: none"> • Represents the dynamics as a linear single track (bicycle) vehicle • Minimizes the previewed error signal at a single point T^* seconds ahead in time • Accounts for the driver lag deriving from perceptual and neuromuscular mechanisms

Shift

Use the **Shift type**, **shftType** parameter to specify one of these shift options.

Setting	Block Implementation
None	<p>No transmission. Block outputs a constant gear of 1.</p> <p>Use this setting to minimize the number of parameters you need to generate acceleration and braking commands to track forward vehicle motion. This setting does not allow reverse vehicle motion.</p>
Reverse, Neutral, Drive	<p>Block uses a Stateflow[®] chart to model reverse, neutral, and drive gear shift scheduling.</p> <p>Use this setting to generate acceleration and braking commands to track forward and reverse vehicle motion using simple reverse, neutral, and drive gear shift scheduling. Depending on the vehicle state and vehicle velocity feedback, the block uses the initial gear and time required to shift to shift the vehicle up into drive or down into reverse or neutral.</p> <p>For neutral gears, the block uses braking commands to control the vehicle speed. For reverse gears, the block uses an acceleration command to generate torque and a brake command to reduce vehicle speed.</p>

Setting	Block Implementation
Scheduled	<p>Block uses a Stateflow chart to model reverse, neutral, park, and N-speed gear shift scheduling.</p> <p>Use this setting to generate acceleration and braking commands to track forward and reverse vehicle motion using reverse, neutral, park, and N-speed gear shift scheduling. Depending on the vehicle state and vehicle velocity feedback, the block uses these parameters to determine the:</p> <ul style="list-style-type: none"> • Initial gear • Upshift and downshift accelerator pedal positions • Upshift and downshift velocity • Timing for shifting and engaging forward and reverse from neutral <p>For neutral gears, the block uses braking commands to control the vehicle speed. For reverse gears, the block uses an acceleration command to generate torque and a brake command to reduce vehicle speed.</p>
External	<p>Block uses the input gear, vehicle state, and velocity feedback to generate acceleration and braking commands to track forward and reverse vehicle motion.</p> <p>For neutral gears, the block uses braking commands to control the vehicle speed. For reverse gears, the block uses an acceleration command to generate torque and a brake command to reduce vehicle speed.</p>

Controller: PI Speed-Tracking

If you set the control type to PI or Scheduled PI, the block implements proportional-integral (PI) control with tracking windup and feed-forward gains. For the Scheduled PI configuration, the block uses feed forward gains that are a function of vehicle velocity.

To calculate the speed control output, the block uses these equations.

Setting	Equation
PI	$y = \frac{K_{ff}}{v_{nom}} v_{ref} + \frac{K_p e_{ref}}{v_{nom}} + \int \left(\frac{K_i e_{ref}}{v_{nom}} + K_{aw} e_{out} \right) dt + K_g \theta$
Scheduled PI	$y = \frac{K_{ff}(v)}{v_{nom}} v_{ref} + \frac{K_p(v) e_{ref}}{v_{nom}} + \int \left(\frac{K_i(v) e_{ref}}{v_{nom}} + K_{aw} e_{out} \right) e_{ref} dt + K_g(v) \theta$

where:

$$e_{ref} = v_{ref} - v$$

$$e_{out} = y_{sat} - y$$

$$y_{sat} = \begin{cases} -1 & y < -1 \\ y & -1 \leq y \leq 1 \\ 1 & 1 < y \end{cases}$$

The velocity error low-pass filter uses this transfer function.

$$H(s) = \frac{1}{\tau_{err} s + 1} \quad \text{for } \tau_{err} > 0$$

To calculate the acceleration and braking commands, the block uses these equations.

$$y_{acc} = \begin{cases} 0 & y_{sat} < 0 \\ y_{sat} & 0 \leq y_{sat} \leq 1 \\ 1 & 1 < y_{sat} \end{cases}$$

$$y_{dec} = \begin{cases} 0 & y_{sat} > 0 \\ -y_{sat} & -1 \leq y_{sat} \leq 0 \\ 1 & y_{sat} < -1 \end{cases}$$

The equations use these variables.

v_{nom}	Nominal vehicle speed
K_p	Proportional gain
K_i	Integral gain
K_{aw}	Anti-windup gain

K_{ff}	Velocity feed-forward gain
K_g	Grade feed-forward gain
θ	Grade angle
τ_{err}	Error filter time constant
y	Nominal control output magnitude
y_{sat}	Saturated control output magnitude
e_{ref}	Velocity error
e_{out}	Difference between saturated and nominal control outputs
y_{acc}	Acceleration signal
y_{dec}	Braking signal
v	Velocity feedback signal
v_{ref}	Reference velocity signal

Controller: Predictive Speed-Tracking

If you set the **Control type**, `cntrlType` parameter to **Predictive**, the block implements an optimal single-point preview (look ahead) control model developed by C. C. MacAdam^{1, 2, 3}. The model represents driver steering control behavior during path-following and obstacle avoidance maneuvers. Drivers preview (look ahead) to follow a predefined path. To implement the MacAdam model, the block:

- Represents the dynamics as a linear single track (bicycle) vehicle
- Minimizes the previewed error signal at a single point T^* seconds ahead in time
- Accounts for the driver lag deriving from perceptual and neuromuscular mechanisms

Vehicle Dynamics

For longitudinal motion, the block implements these linear dynamics.

$$x_1 = v$$
$$\dot{x}_1 = x_2 = \frac{K_{pt}}{m} - g\sin(\gamma) + F_r x_1$$

In matrix notation:

$$\dot{x} = Fx + g\bar{u}$$

where:

$$x = \begin{bmatrix} x_1 \\ x_2 \end{bmatrix}$$

$$F = \begin{bmatrix} 0 & 1 \\ \frac{F_r}{m} & 0 \end{bmatrix}$$

$$g = \begin{bmatrix} 0 \\ \frac{K_{pt}}{m} \end{bmatrix}$$

$$\bar{u} = u - \frac{m^2}{K_{pt}} g \sin(\gamma)$$

The block uses this equation for the rolling resistance.

$$F_r = - \left[\tanh(x_1) \left(\frac{a_r}{x_1} + c_r x_1 \right) + b_r \right]$$

The single-point model assumes a minimum previewed error signal at a single point T^* seconds ahead in time. a^* is the driver ability to predict the future vehicle response based on the current steering control input. b^* is the driver ability to predict the future vehicle response based on the current vehicle state. The block uses these equations.

$$a^* = (T^*) m^T \left[I + \sum_{n=1}^{\infty} \frac{F^n (T^*)^n}{(n+1)!} \right] g e$$

$$b^* = m^T \left[I + \sum_{n=1}^{\infty} \frac{F^n (T^*)^n}{n!} \right]$$

where:

$$m^T = [1 \ 1]$$

The equations use these variables.

a, b Forward and rearward tire location, respectively

m	Vehicle mass
I	Vehicle rotational inertia
a^*, \mathbf{b}^*	Driver prediction scalar and vector gain, respectively
\mathbf{x}	Predicted vehicle state vector
v	Longitudinal velocity
\mathbf{F}	System matrix
K_{pt}	Tractive force and brake limit
γ	Grade angle
\mathbf{g}	Control coefficient vector
g	Gravitational constant
T^*	Preview time window
$f(t+T^*)$	Previewed path input T^* seconds ahead
U	Forward vehicle velocity
\mathbf{m}^T	Constant observer vector; provides vehicle lateral position
F_r	Rolling resistance
a_r	Static rolling and driveline resistance
b_r	Linear rolling and driveline resistance
c_r	Aerodynamic rolling and driveline resistance

Optimization

The single-point model implemented by the block finds the steering command that minimizes a local performance index, J , over the current preview interval, $(t, t+T)$.

$$J = \frac{1}{T} \int_t^{t+T} [f(\eta) - y(\eta)]^2 d\eta$$

To minimize J with respect to the steering command, this condition must be met.

$$\frac{dJ}{du} = 0$$

You can express the optimal control solution in terms of a current non-optimal and corresponding nonzero preview output error T^* seconds ahead^{1, 2, 3}.

$$u^o(t) = u(t) + \frac{e(t + T^*)}{a^*}$$

The equations use these variables.

$f(t+T^*)$	Previewed path input T^* sec ahead
$y(t+T^*)$	Previewed plant output T^* sec ahead
$e(t+T^*)$	Previewed error signal T^* sec ahead
$u(t), u^o(t)$	Steer angle and optimal steer angle, respectively
J	Performance index

Driver Lag

The single-point model implemented by the block introduces a driver lag. The driver lag accounts for the delay when the driver is tracking tasks. Specifically, it is the transport delay deriving from perceptual and neuromuscular mechanisms. To calculate the driver transport delay, the block implements this equation.

$$H(s) = e^{-s\tau}$$

The equations use these variables.

τ	Driver transport delay
$y(t+T^*)$	Previewed plant output T^* sec ahead
$e(t+T^*)$	Previewed error signal T^* sec ahead
$u(t), u^o(t)$	Steer angle and optimal steer angle, respectively
J	Performance index

Ports

Input

VelRef — Reference vehicle velocity

scalar

Reference velocity, v_{ref} , in m/s.

VelFdbk — Longitudinal vehicle velocity

scalar

Longitudinal vehicle velocity, U , in vehicle-fixed frame, in m/s.

Grade — Road grade angle

scalar

Road grade angle, θ or γ , in deg.

ExtGear — Gear

scalar

Gear	Integer
Park	80
Reverse	-1
Neutral	0
Drive	1
Gear	Gear number

Dependencies

To create this port, set **Shift type**, **shftType** to External.

Output

Info — Bus signal

bus

Bus signal containing these block calculations.

Signal	Variable	Description
Accel	y_{acc}	Commanded vehicle acceleration, normalized from 0 through 1
Decel	y_{dec}	Commanded vehicle deceleration, normalized from 0 through 1
Gear		Integer value of commanded gear

Signal	Variable	Description
Clutch		Clutch command
Err	e_{ref}	Difference in reference vehicle speed and vehicle speed
ErrSqrSum	$\int_0^t e_{ref}^2 dt$	Integrated square of error
ErrMax	$\max(e_{ref}(t))$	Maximum error during simulation
ErrMin	$\min(e_{ref}(t))$	Minimum error during simulation

AccelCmd – Commanded vehicle acceleration

scalar

Commanded vehicle acceleration, y_{acc} , normalized from 0 through 1.

DecelCmd – Commanded vehicle deceleration

scalar

Commanded vehicle deceleration, y_{dec} , normalized from 0 through 1.

Gear – Commanded vehicle gear

scalar

Integer value of commanded vehicle gear.

Gear	Integer
Park	80
Reverse	-1
Neutral	0
Drive	1
Gear	Gear number

Dependencies

To create this port, select **Output gear signal**.

Parameters

Control type, `cntrlType` — Longitudinal control

PI (default) | Scheduled PI | Predictive

Type of longitudinal control.

Setting	Block Implementation
PI	Proportional-integral (PI) control with tracking windup and feed-forward gains.
Scheduled PI	PI control with tracking windup and feed-forward gains that are a function of vehicle velocity.
Predictive	<p>Optimal single-point preview (look ahead) control model developed by C. C. MacAdam^{1, 2, 3}. The model represents driver steering control behavior during path-following and obstacle avoidance maneuvers. Drivers preview (look ahead) to follow a predefined path. To implement the MacAdam model, the block:</p> <ul style="list-style-type: none"> • Represents the dynamics as a linear single track (bicycle) vehicle • Minimizes the previewed error signal at a single point T^* seconds ahead in time • Accounts for the driver lag deriving from perceptual and neuromuscular mechanisms

Shift type, `shftType` — Shift type

None (default) | Reverse, Neutral, Drive | Scheduled | External

Shift type.

Setting	Block Implementation
None	<p>No transmission. Block outputs a constant gear of 1.</p> <p>Use this setting to minimize the number of parameters you need to generate acceleration and braking commands to track forward vehicle motion. This setting does not allow reverse vehicle motion.</p>

Setting	Block Implementation
Reverse, Neutral, Drive	<p>Block uses a Stateflow chart to model reverse, neutral, and drive gear shift scheduling.</p> <p>Use this setting to generate acceleration and braking commands to track forward and reverse vehicle motion using simple reverse, neutral, and drive gear shift scheduling. Depending on the vehicle state and vehicle velocity feedback, the block uses the initial gear and time required to shift to shift the vehicle up into drive or down into reverse or neutral.</p> <p>For neutral gears, the block uses braking commands to control the vehicle speed. For reverse gears, the block uses an acceleration command to generate torque and a brake command to reduce vehicle speed.</p>
Scheduled	<p>Block uses a Stateflow chart to model reverse, neutral, park, and N-speed gear shift scheduling.</p> <p>Use this setting to generate acceleration and braking commands to track forward and reverse vehicle motion using reverse, neutral, park, and N-speed gear shift scheduling. Depending on the vehicle state and vehicle velocity feedback, the block uses these parameters to determine the:</p> <ul style="list-style-type: none"> • Initial gear • Upshift and downshift accelerator pedal positions • Upshift and downshift velocity • Timing for shifting and engaging forward and reverse from neutral <p>For neutral gears, the block uses braking commands to control the vehicle speed. For reverse gears, the block uses an acceleration command to generate torque and a brake command to reduce vehicle speed.</p>

Setting	Block Implementation
External	<p>Block uses the input gear, vehicle state, and velocity feedback to generate acceleration and braking commands to track forward and reverse vehicle motion.</p> <p>For neutral gears, the block uses braking commands to control the vehicle speed. For reverse gears, the block uses an acceleration command to generate torque and a brake command to reduce vehicle speed.</p>

Reference and feedback units, velUnits — Velocity units

m/s (default)

Vehicle velocity reference and feedback units.

Dependencies

If you set **Control type, cntrlType** control type to Scheduled or Scheduled PI, the block uses the **Reference and feedback units, velUnits** for the **Nominal speed, vnom** parameter dimension.

If you set **Shift Type, shftType** to Scheduled, the block uses the **Longitudinal velocity units, velUnits** for these parameter dimensions:

- **Upshift velocity data table, upShftTbl**
- **Downshift velocity data table, dwnShftTbl**

Control

Longitudinal Nominal Gains

Proportional gain, Kp — Gain

scalar

Proportional gain, K_p , dimensionless.

Dependencies

To create this parameter, set **Control type** to PI.

Integral gain, Ki — Gain

scalar

Proportional gain, K_i , dimensionless.

Dependencies

To create this parameter, set **Control type** to PI.

Velocity feed-forward, K_{ff} – Gain

scalar

Velocity feed-forward gain, K_{ff} , dimensionless.

Dependencies

To create this parameter, set **Control type** to PI.

Grade feed-forward, K_g – Gain

scalar

Grade feed-forward gain, K_g , in 1/deg.

Dependencies

To create this parameter, set **Control type** to PI.

Velocity gain breakpoints, $VehVelVec$ – Breakpoints

array

Velocity gain breakpoints, $VehVelVec$, dimensionless.

Dependencies

To create this parameter, set **Control type** to Scheduled PI.

Velocity feed-forward gain values, K_{ffVec} – Gain

array

Velocity feed-forward gain values, K_{ffVec} , as a function of vehicle velocity, dimensionless.

Dependencies

To create this parameter, set **Control type** to Scheduled PI.

Proportional gain values, K_pVec – Gain

array

Proportional gain values, K_pVec , as a function of vehicle velocity, dimensionless.

Dependencies

To create this parameter, set **Control type** to Scheduled PI.

Integral gain values, $KiVec$ — Gain

array

Integral gain values, $KiVec$, as a function of vehicle velocity, dimensionless.

Dependencies

To create this parameter, set **Control type** to Scheduled PI.

Grade feed-forward values, $KgVec$ — Grade gain

array

Grade feed-forward values, $KgVec$, as a function of vehicle velocity, in 1/deg.

Dependencies

To create this parameter, set **Control type** to Scheduled PI.

Nominal speed, $vnom$ — Nominal vehicle speed

scalar

Nominal vehicle speed, v_{nom} , in units specified by the **Reference and feedback units, velUnits** parameter. The block uses the nominal speed to normalize the controller gains.

Dependencies

To create this parameter, set **Control type** to PI or Scheduled PI.

Anti-windup, Kaw — Gain

scalar

Anti-windup gain, K_{aw} , dimensionless.

Dependencies

To create this parameter, set **Control type** to PI or Scheduled PI.

Error filter time constant, τ_{err} — Filter

scalar

Error filter time constant, τ_{err} , in s. To disable the filter, enter 0.

Dependencies

To create this parameter, set **Control type** to PI or Scheduled PI.

Predictive**Vehicle mass, m – Mass**

scalar

Vehicle mass, m , in kg.

Dependencies

To create this parameter, set **Longitudinal control type, cntrlType** to Predictive.

Effective vehicle total tractive force, K_p – Tractive force

scalar

Effective vehicle total tractive force, K_p , in N.

Dependencies

To create this parameter, set **Longitudinal control type, cntrlType** to Predictive.

Driver response time, τ – Tau

scalar

Driver response time, τ , in s.

Dependencies

To create this parameter, set **Longitudinal control type, cntrlType** to Predictive.

Preview distance, L – Distance

scalar

Driver preview distance, L , in m.

Dependencies

To create this parameter, set **Longitudinal control type, cntrlType** to Predictive.

Rolling resistance coefficient, aR – Resistance

scalar

Static rolling and driveline resistance coefficient, a_R , in N. Block uses the parameter to estimate the constant acceleration or braking effort.

Dependencies

To create this parameter, set **Longitudinal control type, cntrlType** to Predictive.

Rolling and driveline resistance coefficient, bR — Resistance

scalar

Rolling and driveline resistance coefficient, b_R , in N·s/m. Block uses the parameter to estimate the linear velocity-dependent acceleration or braking effort.

Dependencies

To create this parameter, set **Longitudinal control type, cntrlType** to Predictive.

Aerodynamic drag coefficient, cR — Drag

scalar

Aerodynamic drag coefficient, c_R , in N·s²/m². Block uses the parameter to estimate the quadratic velocity-dependent acceleration or braking effort.

Dependencies

To create this parameter, set **Longitudinal control type, cntrlType** to Predictive.

Gravitational constant, g — Gravitational constant

scalar

Gravitational constant, g , in m/s².

Dependencies

To create this parameter, set **Longitudinal control type, cntrlType** to Predictive.

Shift

Reverse, Neutral, Drive

Initial gear, GearInit — Initial gear

scalar

Integer value of the initial gear. The block uses the initial gear to generate acceleration and braking commands to track forward and reverse vehicle motion.

Gear	Integer
Park	80
Reverse	-1
Neutral	0
Drive	1
Gear	Gear number

Dependencies

To create this parameter, set **Shift type, shftType** to Reverse, Neutral, Drive or Scheduled. If you specify Reverse, Neutral, Drive, the **Initial Gear, GearInit** parameter value can be only -1, 0, or 1.

Time required to shift, tShift – Time

scalar

Time required to shift, *tShift*, in s. The block uses the time required to shift to generate acceleration and braking commands to track forward and reverse vehicle motion using reverse, neutral, and drive gear shift scheduling.

Dependencies

To create this parameter, set **Shift type, shftType** to Reverse, Neutral, Drive.

Scheduled

Initial gear, GearInit – Initial gear

scalar

Integer value of the initial gear. The block uses the initial gear to generate acceleration and braking commands to track forward and reverse vehicle motion.

Gear	Integer
Park	80
Reverse	-1
Neutral	0

Gear	Integer
Drive	1
Gear	Gear number

Dependencies

To create this parameter, set **Shift type, shftType** to Reverse, Neutral, Drive or Scheduled. If you specify Reverse, Neutral, Drive, the **Initial Gear, GearInit** parameter value can be only -1, 0, or 1.

Up and down shift accelerator pedal positions, pdlVec — Pedal position breakpoints

[1-by-m] vector

Pedal position breakpoints for lookup tables when calculating upshift and downshift velocities, dimensionless. Vector dimensions are 1 by the number of pedal position breakpoints, m.

Dependencies

To create this parameter, set **Shift type, shftType** to Scheduled.

Upshift velocity data table, upShftTbl — Table

[m-by-n] array

Upshift velocity data as a function of pedal position and gear, in units specified by the **Reference and feedback units, velUnits** parameter. Upshift velocities indicate the vehicle velocity at which the gear should increase by 1.

The array dimensions are m pedal positions by n gears. The first column of data, when n equals 1, is the upshift velocity for the neutral gear.

Dependencies

To create this parameter, set **Shift type, shftType** to Scheduled.

Downshift velocity data table, dwnShftTbl — Table

[m-by-n] array

Downshift velocity data as a function of pedal position and gear, in units specified by the **Reference and feedback units, velUnits** parameter. Downshift velocities indicate the vehicle velocity at which the gear should decrease by 1.

The array dimensions are m pedal positions by n gears. The first column of data, when n equals 1, is the downshift velocity for the neutral gear.

Dependencies

To create this parameter, set **Shift type**, **shftType** to Scheduled.

Time required to shift, t_{Clutch} – Time scalar

Time required to shift, t_{Clutch} , in s.

Dependencies

To create this parameter, set **Shift type**, **shftType** to Scheduled.

Time required to engage reverse from neutral, t_{Rev} – Time scalar

Time required to engage reverse from neutral, t_{Rev} , in s.

Dependencies

To create this parameter, set **Shift type**, **shftType** to Scheduled.

Time required to engage park from neutral, t_{Park} – Time scalar

Time required to engage park from neutral, t_{Park} , in s.

Dependencies

To create this parameter, set **Shift type**, **shftType** to Scheduled.

References

- [1] MacAdam, C. C. "An Optimal Preview Control for Linear Systems". *Journal of Dynamic Systems, Measurement, and Control*. Vol. 102, Number 3, Sept. 1980.
- [2] MacAdam, C. C. "Application of an Optimal Preview Control for Simulation of Closed-Loop Automobile Driving ". *IEEE Transactions on Systems, Man, and Cybernetics*. Vol. 11, Issue 6, June 1981.

[3] MacAdam, C. C. *Development of Driver/Vehicle Steering Interaction Models for Dynamic Analysis*. Final Technical Report UMTRI-88-53. Ann Arbor, Michigan: The University of Michigan Transportation Research Institute, Dec. 1988.

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using Simulink® Coder™.

See Also

Drive Cycle Source | Vehicle Body Total Road Load


Introduced in R2017a

Transmission Blocks – Alphabetical List

Automated Manual Transmission

Ideal automated manual transmission

Library: Powertrain Blockset / Transmission / Transmission Systems

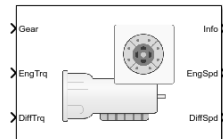

Description

The Automated Manual Transmission block implements an ideal automated transmission (AMT). An AMT is a manual transmission with additional actuators and an electronic control unit (ECU) to regulate clutch and gear selection based on commands from a controller. The number of gears is specified via an integer vector with corresponding gear ratios, inertias, viscous damping, and efficiency factors. The clutch and synchronization engagement rates are linear and adjustable.

Use the block for:

- Power and torque capacity sizing
- Determining gear ratio impact on fuel economy and performance

To determine the rotational drive shaft speed and reaction torque, the Automated Manual Transmission block calculates:

- Clutch lock-up and clutch friction
- Locked rotational dynamics
- Unlocked rotational dynamics

To specify the block efficiency calculation, for **Efficiency factors**, select either of these options.

Setting	Block Implementation
Gear only	Efficiency determined from a 1D lookup table that is a function of the gear.

Setting	Block Implementation
Gear, input torque, input speed, and temperature	Efficiency determined from a 4D lookup table that is a function of: <ul style="list-style-type: none"> • Gear • Input torque • Input speed • Oil temperature

Clutch Control

The AMT delivers drive shaft torque continuously by controlling the pressure signals from the clutch. If you select **Control type** parameter *Ideal integrated controller*, the block generates idealized clutch pressure signals. To use your own clutch control signals, select **Control type** parameter *External control*.

Clutch Lock-Up and Clutch Friction

Based on the clutch lock-up condition, the block implements one of these friction models.

If	Clutch Condition	Friction Model
$\omega_i \neq N\omega_d$ or $T_S < T_f - Nw_i b_i $	Unlocked	$T_f = T_k$ where, $T_k = F_c R_{eff} \mu_k \tanh\left[4\left(\frac{w_i}{N} - w_d\right)\right]$ $T_s = F_c R_{eff} \mu_s$ $R_{eff} = \frac{2(R_o^3 - R_i^3)}{3(R_o^2 - R_i^2)}$
$\omega_i = N\omega_t$ and $T_S \geq T_f - Nb_i \omega_i $	Locked	$T_f = T_s$

The equations use these variables.

ω_t	Output drive shaft speed
ω_i	Input drive shaft speed
ω_d	Drive shaft speed
b_i	Viscous damping
F_c	Applied clutch force
N	Engaged gear
T_f	Frictional torque
T_k	Kinetic frictional torque
T_s	Static frictional torque
R_{eff}	Effective clutch radius
R_o	Annular disk outer radius
R_i	Annular disk inner radius
μ_s	Coefficient of static friction
μ_k	Coefficient of kinetic friction

Locked Rotational Dynamics

To model the rotational dynamics when the clutch is locked, the block implements these equations.

$$\dot{\omega}_d J_N = \eta_N T_d - \frac{\omega_i}{N} b_N + N T_i$$

$$\omega_i = N \omega_d$$

The block determines the input torque, T_i , through differentiation.

The equations use these variables.

ω_i	Input drive shaft speed
ω_d	Drive shaft speed
N	Engaged gear
b_N	Engaged gear viscous damping
J_N	Engaged gear inertia

η_N	Engaged gear efficiency
T_d	Drive shaft torque
T_i	Applied input torque

Unlocked Rotational Dynamics

To model the rotational dynamics when the clutch is unlocked, the block implements this equation.

$$\dot{\omega}_d J_N = N T_f - \omega_d b_N + T_d$$

where:

ω_d	Drive shaft speed
N	Engaged gear
b_N	Engaged gear viscous damping
J_N	Engaged gear inertia
T_d	Drive shaft torque
T_i	Applied input torque

Power Accounting

For the power accounting, the block implements these equations.

Bus Signal			Description	Variable	Equations
PwrInfo	PwrTrnsfrd — Power transferred between blocks	PwrEng	Engine power	P_{eng}	$\omega_i T_i$
	<ul style="list-style-type: none"> Positive signals indicate flow into block Negative signals indicate flow out of block 	PwrDiffrentl	Differential power	P_{diff}	$\omega_d T_d$
	PwrNotTrnsfrd — Power crossing the block boundary, but not transferred	PwrEffLoss	Mechanical power loss	$P_{effloss}$	$\omega_d T_d (\eta_N - 1)$

Bus Signal		Description	Variable	Equations
<ul style="list-style-type: none"> • Positive signals indicate an input • Negative signals indicate a loss 	PwrDampLoss	Mechanical damping loss	$P_{damp\ loss}$	$-b_N\omega_d^2 - b_{in}\omega_i^2$
	PwrClutchLoss	Clutch power loss	P_{mech}	When locked: 0 When unlocked: $-T_k(\omega_i - N\omega_d)$
PwrStored — Stored energy rate of change <ul style="list-style-type: none"> • Positive signals indicate an increase • Negative signals indicate a decrease 	PwrStoredTrans	Rate change in rotational kinetic energy	P_{str}	When locked: $\dot{\omega}_i\omega_i(J_{in} + \frac{J_N}{N^2})$ When unlocked: $J_{in}\dot{\omega}_i\omega_i + J_N\dot{\omega}_d\omega_d$

The equations use these variables.

- b_N Engaged gear viscous damping
- J_N Engaged gear rotational inertia
- J_{in} Flywheel rotational inertia
- η_N Engaged gear efficiency
- N Engaged gear ratio
- T_i Applied input torque, typically from the engine crankshaft or dual mass flywheel damper
- T_d Applied load torque, typically from the differential or drive shaft
- ω_d Initial input drive shaft rotational velocity
- $\omega_i, \dot{\omega}_i$ Applied drive shaft angular speed and acceleration

Ports

Input

Gear — Gear number to engage

scalar

Integer value of gear number to engage.

ClutchCmd — Clutch command

scalar

Clutch pressure command.

Dependencies

To create this port, select **Control type** parameter External control.

EngTrq — Applied input torque

scalar

Applied input torque, T_i , typically from the engine crankshaft or dual mass flywheel damper, in N·m.

DiffTrq — Applied load torque

scalar

Applied load torque, T_d , typically from the differential or driveshaft, in N·m.

Temp — Oil temperature

scalar

Oil temperature, in K. To determine the efficiency, the block uses a 4D lookup table that is a function of:

- Gear
- Input torque
- Input speed
- Oil temperature

Dependencies

To create this port, set **Efficiency factors** to Gear, input torque, input speed, and temperature.

Output

Info — Bus signal

bus

Bus signal contains these block calculations.

Signal		Description	Variable	Units
Eng	EngTrq	Input applied torque	T_i	N·m
	EngSpd	Input drive shaft speed	ω_i	rad/s
Diff	DiffTrq	Output drive shaft torque	T_t	N·m
	DiffSpd	Output drive shaft speed	ω_t	rad/s
Cltch	CltchForce	Applied clutch force	F_c	N
	CltchLocked	Clutch lock status, Boolean: <ul style="list-style-type: none"> Locked — 0 Unlocked — 1 	N/A	N/A
Trans	TransSpdRatio	Speed ratio at time t	$\phi(t)$	N/A
	TransEta	Ratio of output power to input power	η	N/A
	TransGearCmd	Commanded gear	N_{cmd}	N/A
	TransGear	Engaged gear	N	N/A

Signal			Description	Variable	Units
PwrInfo	PwrTrnsfrd	PwrEng	Engine power	P_{eng}	W
		PwrDiffrentl	Differential power	P_{diff}	W
	PwrNotTrnsfrd	PwrEffLoss	Mechanical power loss	$P_{effloss}$	W
		PwrDampLoss	Mechanical damping loss	$P_{damploss}$	W
		PwrClutchLoss	Clutch power loss	P_{mech}	W
PwrStored	PwrStoredTrans	Rate change in rotational kinetic energy	P_{str}	W	

EngSpd — Angular speed

scalar

Applied drive shaft angular speed input, ω_i , in rad/s.

DiffSpd — Angular speed

scalar

Drive shaft angular speed output, ω_d , in rad/s.

Parameters

Control type — Specify control type

Ideal integrated controller (default) | External control

The AMT delivers drive shaft torque continuously by controlling the pressure signals from the clutch. If you select **Control type** parameter `Ideal integrated controller`, the block generates idealized clutch pressure signals. To use your own clutch control signals, select **Control type** parameter `External control`.

Dependencies

This table summarizes the port configurations.

Control Mode	Creates Ports
External control	CltchCmd

Efficiency factors — Specify efficiency calculation

Gear only (default) | Gear, input torque, input speed, and temperature

To specify the block efficiency calculation, for **Efficiency factors**, select either of these options.

Setting	Block Implementation
Gear only	Efficiency determined from a 1D lookup table that is a function of the gear.
Gear, input torque, input speed, and temperature	Efficiency determined from a 4D lookup table that is a function of: <ul style="list-style-type: none"> • Gear • Input torque • Input speed • Oil temperature

Dependencies

Setting Parameter To	Enables
Gear only	Efficiency vector, eta
Gear, input torque, input speed, and temperature	Efficiency torque breakpoints, Trq_bpts Efficiency speed breakpoints, omega_bpts Efficiency temperature breakpoints, Temp_bpts Efficiency lookup table, eta_tbl

Transmission

Input shaft inertia, Jin — Inertia

scalar

Input shaft inertia, in kg·m².

Input shaft damping, bin – Damping

scalar

Input shaft damping, in N·m·s/rad.

Initial input velocity, omegain_o – Angular velocity

scalar

Angular velocity, in rad/s.

Gear number vector, G – Specify number of transmission speeds

vector

Vector of integer gear commands used to specify the number of transmission speeds. Neutral gear is 0. For example, you can set these parameter values.

To Specify	Set Gear number, G To
Four transmission speeds, including neutral	[0, 1, 2, 3, 4]
Three transmission speeds, including neutral and reverse	[-1, 0, 1, 2, 3]
Five transmission speeds, including neutral and reverse	[-1, 0, 1, 2, 3, 4, 5]

Vector dimensions for the **Gear number vector**, **Gear ratio vector**, **Transmission inertia vector**, **Transmission damping vector**, and **Efficiency vector** parameters must be equal.

Efficiency torque breakpoints, Trq_bpts – Breakpoints

vector

Torque breakpoints for efficiency table, in N·m.

Dependencies

To enable this parameter, set **Efficiency factors** to Gear, input torque, input speed, and temperature.

Efficiency speed breakpoints, omega_bpts – Breakpoints

vector

Speed breakpoints for efficiency table, rad/s.

Dependencies

To enable this parameter, set **Efficiency factors** to Gear, input torque, input speed, and temperature.

Efficiency temperature breakpoints, Temp_bpts — Breakpoints

vector

Temperature breakpoints for efficiency table, in K.

Dependencies

To enable this parameter, set **Efficiency factors** to Gear, input torque, input speed, and temperature.

Gear ratio vector, N — Ratio of input speed to output speed

vector

Vector of gear ratios (that is, input speed to output speed) with indices corresponding to the ratios specified in **Gear number, G**. For neutral, set the gear ratio to 1. For example, you can set these parameter values.

To Specify Gear Ratios For	Set Gear number, G To	Set Gear ratio, N To
Four transmission speeds, including neutral	[0, 1, 2, 3, 4]	[1, 4.47, 2.47, 1.47, 1]
Five transmission speeds, including neutral and reverse	[-1, 0, 1, 2, 3, 4, 5]	[-4.47, 1, 4.47, 2.47, 1.47, 1, 0.8]

Vector dimensions for the **Gear number vector, Gear ratio vector, Transmission inertia vector, Transmission damping vector,** and **Efficiency vector** parameters must be equal.

Transmission inertia vector, Jout — Gear rotational inertia

vector

Vector of gear rotational inertias, with indices corresponding to the inertias specified in **Gear number, G**, in kg·m². For example, you can set these parameter values.

To Specify Inertia For	Set Gear number, G To	Set Inertia, J To
Four gears, including neutral	[0, 1, 2, 3, 4]	[0.01, 2.28, 2.04, 0.32, 0.028]
Inertia for five gears, including reverse and neutral	[-1, 0, 1, 2, 3, 4, 5]	[2.28, 0.01, 2.28, 2.04, 0.32, 0.028, 0.01]

Vector dimensions for the **Gear number vector**, **Gear ratio vector**, **Transmission inertia vector**, **Transmission damping vector**, and **Efficiency vector** parameters must be equal.

Transmission damping vector, b_{out} – Gear viscous damping coefficient vector

Vector of gear viscous damping coefficients, with indices corresponding to the coefficients specified in **Gear number, G**, in N·m·s/rad. For example, you can set these parameter values.

To Specify Damping For	Set Gear number, G To	Set Damping, b To
Four gears, including neutral	[0, 1, 2, 3, 4]	[0.001, 0.003, 0.0025, 0.002, 0.001]
Five gears, including reverse and neutral	[-1, 0, 1, 2, 3, 4, 5]	[0.003, 0.001, 0.003, 0.0025, 0.002, 0.001, 0.001]

Vector dimensions for the **Gear number vector**, **Gear ratio vector**, **Transmission inertia vector**, **Transmission damping vector**, and **Efficiency vector** parameters must be equal.

Efficiency vector, eta – Gear efficiency vector

Vector of gear mechanical efficiency, with indices corresponding to the efficiencies specified in **Gear number, G**. For example, you can set these parameter values.

To Specify Efficiency For	Set Gear number, G To	Set Efficiency, eta To
Four gears, including neutral	[0, 1, 2, 3, 4]	[0.9, 0.9, 0.9, 0.9, 0.95]
Five gears, including reverse and neutral	[-1, 0, 1, 2, 3, 4, 5]	[0.9, 0.9, 0.9, 0.9, 0.9, 0.95, 0.95]

Vector dimensions for the **Gear number vector**, **Gear ratio vector**, **Transmission inertia vector**, **Transmission damping vector**, and **Efficiency vector** parameters must be equal.

Dependencies

To enable this parameter, set **Efficiency factors** to Gear only.

Efficiency lookup table, eta_tbl — Gear efficiency
array

Table of gear mechanical efficiency, η_N as a function of gear, input torque, input speed, and temperature.

Dependencies

To enable this parameter, set **Efficiency factors** to Gear, input torque, input speed, and temperature.

Initial output velocity, omega_o — Transmission
scalar

Transmission initial output rotational velocity, ω_{to} , in rad/s. If you select **Clutch initially locked**, the block ignores the **Initial output velocity, omega_o** parameter value.

Initial gear, G_o — Engaged gear
scalar

Initial gear to engage, G_o .

Clutch and Synchronizer

Clutch pressure time constant, tauc — Time
scalar

Pressure input filter time constant, τ_c , in s.

Synchronization time, t_s – Time

scalar

Time required for gear selection and synchronization, t_s , in s.

Clutch time, t_c – Time

scalar

Time required to engage and disengage the clutch during shift events, t_c , in s.

Dependencies

To create this parameter, select **Control type** parameter Ideal integrated controller.

Effective clutch radius, R – Radius

scalar

The effective radius, R_{eff} , used with the applied clutch friction force to determine the friction force, in m. The effective radius is defined as:

$$R_{eff} = \frac{2(R_o^3 - R_i^3)}{3(R_o^2 - R_i^2)}$$

The equation uses these variables.

R_o Annular disk outer radius

R_i Annular disk inner radius

Clutch force gain, K_c – Force

scalar

Open loop lock-up clutch gain, K_c , in N.

Clutch static friction coefficient, μ_s – Coefficient

scalar

Dimensionless clutch disc coefficient of static friction, μ_s .

Clutch kinematic friction coefficient, μ_k – Coefficient

scalar

Dimensionless clutch disc coefficient of kinetic friction, μ_k .

Clutch initially locked — Select to initially lock clutch

off (default)

Select to lock clutch initially.

Dependencies

To create this parameter, select **Control type** parameter Ideal integrated controller.

Synchronizer initially locked — Select to initially lock synchronizer

off (default)

Select to initially lock synchronizer.

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using Simulink® Coder™.

See Also


AMT Controller | Continuously Variable Transmission | Dual Clutch Transmission | Ideal Fixed Gear Transmission

Introduced in R2017a

AMT Controller

Automated manual transmission controller with clutch open, close, and synchronization timing

Library: Powertrain Blockset / Transmission / Transmission Controllers

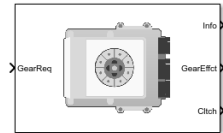

Description

The AMT Controller block implements an automated manual transmission (AMT) controller. You can specify the clutch open, close, and synchronization timing parameters. The block determines the clutch commands using integrator-based timers and latching logic that is based on the specified timing parameters and gear request.

Ports

Inputs

GearReq — Gear number to engage

scalar

Gear number request, G_{req} .

Output

Info — Bus signal

bus

Bus signal containing these block calculations.

Signal	Description	Variable
GearReq	Gear number request	G_{req}
GearEngd	Nominal gear commanded by the controller	G_o
Clutch	Clutch pressure command for gears, between 0 and 1	NA

GearEffct — Effective gear for shifting
 scalar

Effective gear for shifting. The block uses this signal for the smooth application of inertial, efficiency, gear ratio, and damping parameters.

Clutch — Command for clutch pressure
 scalar

Clutch pressure command, between 0 and 1.

Parameters

Initial gear, G_o — Engaged gear
 scalar

Initial gear to engage, G_o .

Clutch actuation time, tc — Time
 scalar

Time required to engage and disengage the clutch during shift events, t_c , in s.

Synchronizer time, ts — Time
 scalar

Time required for gear selection and synchronization, t_s , in s.

Sample period, dt — Time
 scalar

Sample period, dt , in s.

Clutch initially locked – Select to initially lock clutch

off (default)

Selecting this parameter initially locks the clutch.

Synchronizer initially locked – Select to initially lock synchronizer

off (default)

Selecting this parameter initially locks the synchronizer.

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using Simulink® Coder™.

See Also


Automated Manual Transmission

Introduced in R2017a

Continuously Variable Transmission

Push belt continuously variable transmission with independent radii control

Library: Powertrain Blockset / Transmission / Transmission Systems

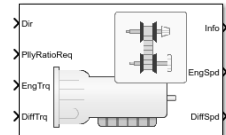

Description

The Continuously Variable Transmission block implements a push belt continuously variable transmission (CVT) with independent radii control. Use the block for control system design, powertrain matching, and fuel economy studies. You can configure the block for internal or external control:


- Internal — Input direction and pulley ratio requests
- External — Input direction and pulley displacement requests

The table summarizes the pulley kinematic, speed reduction, and dynamic calculations made by the Continuously Variable Transmission block.

Calculation	Pulley Kinematics	Reverse and Final Speed Reduction	Dynamics
Final angular speed ratio	✓	✓	✓
Belt torque applied to the secondary and primary pulleys			✓
Torque applied to the secondary and primary pulleys		✓	
Angular velocity of secondary and primary pulleys	✓	✓	✓

Calculation	Pulley Kinematics	Reverse and Final Speed Reduction	Dynamics
Belt and pulley geometry	✓		
Belt linear speed			✓
Wrap angle on secondary and primary pulley	✓		
Primary and secondary pulley radii	✓		


The figure shows the CVT variator with two configurations. In the first configuration, which illustrates speed reduction, the variator is set to decrease the primary pulley radius and increase the secondary pulley radius. In the second configuration, which illustrates overdrive, the variator is set to increase the primary pulley radius and decrease the secondary pulley radius.

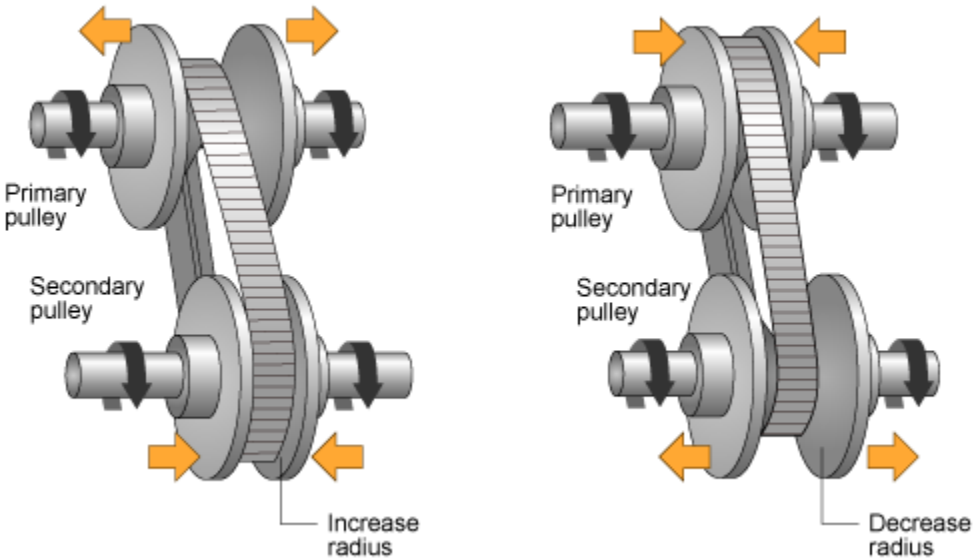

Pulley Kinematics

Using the physical dimensions of the system, the block calculates the primary and secondary variator positions that meet the pulley ratio request.

The figure and equations summarize the geometric dependencies.

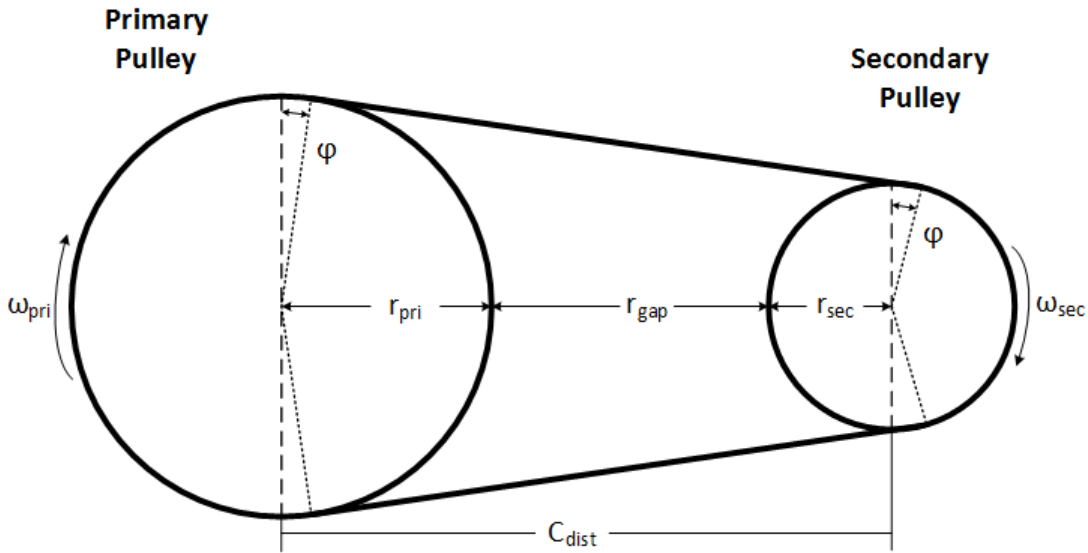

$$C_{dist} = r_{p_{max}} + r_{gap} + r_{sec_{max}}$$

$$L_0 = f(r_{p_{max}}, r_{s_{max}}, r_{p_{min}}, r_{s_{min}}, C_{dist})$$

$$ratio_{command} = f(ratio_{request}, ratio_{max}, ratio_{min})$$

$$r_{pri} = f(r_0, ratio_{command}, C_{dist})$$

$$r_{sec} = f(r_0, ratio_{command}, C_{dist})$$

$$x_{pri} = f(r_0, r_{pri}, \theta_{wedge})$$

$$x_{sec} = f(r_0, r_{sec}, \theta_{wedge})$$

The equations use these variables.

$ratio_{request}$ Pulley gear ratio request

$ratio_{command}$	Pulley gear ratio command, based on request and physical limitations
r_{gap}	Gap distance between variator pulleys
C_{dist}	Distance between variator pulley centers
$r_{p_{max}}$	Maximum variator primary pulley radius
$r_{s_{max}}$	Maximum variator secondary pulley radius
$r_{p_{min}}$	Minimum variator primary pulley radius
$r_{s_{min}}$	Minimum variator secondary pulley radius
r_o	Initial pulley radii with gear ratio of 1
L_o	Initial belt length, resulting from variator specification
x_{pri}	Variator primary pulley displacement, resulting from controller request
x_{sec}	Variator secondary pulley displacement, resulting from controller request
r_{pri}	Variator primary pulley radius, resulting from controller request
r_{sec}	Variator secondary pulley radius, resulting from controller request
Θ_{wedge}	Variator wedge angle
Φ	Angle of belt to pulley contact point
L	Belt length, resulting from variator position

Reverse and Final Speed Reduction

The CVT input shaft connects to a planetary gear set that drives the primary pulley. The shift direction determines the input gear inertia, efficiency, and gear ratio. The shift direction is the filtered commanded direction:

$$\frac{Dir_{shift}}{Dir}(s) = \frac{1}{\tau_s s + 1}$$

For forward motion ($Dir_{shift} = 1$):

$$N_i = 1$$

$$\eta_i = \eta_{fwd}$$

$$J_i = J_{fwd}$$

For reverse motion ($Dir_{shift} = -1$):

$$N_i = -N_{rev}$$

$$\eta_i = \eta_{rev}$$

$$J_i = J_{rev}$$

The gear ratio and efficiency determine the input drive shaft speed and torque applied to the primary pulley:

$$T_{app_pri} = \eta_i N_i T_i$$

The block reduces the secondary pulley speed and applied torque using a fixed gear ratio.

$$T_{app_sec} = \frac{T_o}{\eta_o N_o}$$

$$\omega_o = \frac{\omega_{sec}}{N_o}$$

The final gear ratio, without slip, is given by:

$$N_{final} = \frac{\omega_i}{\omega_o} = N_i N_o \frac{r_{sec}}{r_{pri}}$$

The equations use these variables.

N_i	Input planetary gear ratio
Dir	CVT direction command
Dir_{shift}	Direction used to determine planetary inertia, efficiency, and ratio
τ_s	Direction shift time constant
η_{fwd}, η_{rev}	Forward and reverse gear efficiency, respectively
J_{fwd}, J_{rev}	Forward and reverse gear inertia, respectively
N_{rev}	Reverse gear ratio
T_{app_pri}, T_{app_sec}	Torque applied to primary and secondary pulleys, respectively
T_i	Input drive shaft torque
ω_i, ω_o	Input and output drive shaft speed, respectively
$\omega_{pri}, \omega_{sec}$	Primary and secondary pulley speed, respectively
N_{final}	Total no-slip gear ratio

Dynamics

The maximum torque that the CVT can transmit depends on the friction between the pulleys and belt. According to *Prediction of Friction Drive Limit of Metal V-Belt*, the torque friction is defined as:

$$T_{fric}(r_p, \mu) = \frac{2\mu F_{ax} r_p}{\cos(\theta_{wedge})}$$

Without macro slip, the tangential acceleration of the pulley is assumed to be equal to the belt acceleration. Once the torque reaches the static friction limit, the belt begins to slip, and the pulley and belt acceleration are independent. During slip, the torque transmitted by the belt is a function of the kinetic friction factor. During the transition from slip to non-slip conditions, the belt and tangential pulley velocities are equal.

The block implements these equations for four different slip conditions.

Condition	Equations
Belt slips on both secondary and primary pulleys	$(J_{pri} + J_i)\dot{\omega}_{pri} = T_{app_pri} - T_{BoP_pri} - b_{pri}\omega_{pri}$ $J_{sec}\dot{\omega}_{sec} = T_{app_sec} - T_{BoP_sec} - b_{sec}\omega_{sec}$ $m_b\dot{v}_b = \frac{T_{BoP_pri}}{r_{pri}} + \frac{T_{BoP_sec}}{r_{sec}} - b_b v_b$ $r_{pri}\omega_{pri} \neq v_b$ $r_{sec}\omega_{sec} \neq v_b$
Belt slips on only the primary pulley	$(J_{pri} + J_i)\dot{\omega}_{pri} = T_{app_pri} - T_{BoP_pri} - b_{pri}\omega_{pri}$ $\left(m_b + \frac{J_{sec}}{r_{sec}^2}\right)\dot{v}_b = \frac{T_{BoP_pri}}{r_{pri}} + \frac{T_{BoP_sec}}{r_{sec}} - \left(b_b + \frac{b_{sec}}{r_{sec}^2}\right)v_b$ $\omega_{sec} = \frac{v_b}{r_{sec}}$ $r_{pri}\omega_{pri} \neq v_b$ $T_{BoP_pri} = \text{sgn}(r_{pri}\omega_{pri} - v_b)T_{fric}(r_{pri}, \mu_{kin})$ $ T_{BoP_sec} < T_{fric}(r_{sec}, \mu_{static})$

Condition	Equations
Belt slips on only the secondary pulley	$(m_b + \frac{J_{pri} + J_i}{r_{pri}^2})\dot{v}_b = \frac{T_{app_pri}}{r_{pri}} + \frac{T_{BoP_sec}}{r_{sec}} - \left(b_b + \frac{b_{pri}}{r_{pri}^2}\right)v_b$ $J_{sec}\dot{\omega}_b = T_{app_sec} + T_{BoP_sec} - b_{sec}\omega_{sec}$ $\omega_{pri} = \frac{v_b}{r_{pri}}$ $r_{sec}\omega_{sec} \neq v_b$ $T_{BoP_sec} = \text{sgn}(r_{sec}\omega_{sec} - v_b)T_{fric}(r_{sec}, \mu_{kin})$ $ T_{BoP_pri} < T_{fric}(r_{pri}, \mu_{static})$
Belt does not slip	$\left(m_b + \frac{J_{sec}}{r_{sec}^2} + \frac{J_{pri} + J_i}{r_{pri}^2}\right)\dot{v}_b = \frac{T_{app_pri}}{r_{pri}} + \frac{T_{app_sec}}{r_{sec}} - \left(b_b + \frac{b_{sec}}{r_{sec}^2} + \frac{b_{pri}}{r_{pri}^2}\right)v_b$ $\omega_{pri} = \frac{v_b}{r_{pri}}$ $\omega_{sec} = \frac{v_b}{r_{sec}}$ $ T_{BoP_pri} < T_{fric}(r_{pri}, \mu_{static})$ $ T_{BoP_sec} < T_{fric}(r_{sec}, \mu_{static})$
Slip direction	$PriSlipDir = \begin{cases} 0 & r_{pri}\omega_{pri} = v_b \\ 1 & r_{pri}\omega_{pri} > v_b \\ -1 & r_{pri}\omega_{pri} < v_b \end{cases}$ $SecSlipDir = \begin{cases} 0 & r_{sec}\omega_{sec} = v_b \\ 1 & r_{sec}\omega_{sec} > v_b \\ -1 & r_{sec}\omega_{sec} < v_b \end{cases}$

The equations use these variables.

T_{BoP_pri}, T_{BoP_sec} Belt torque acting on the primary and secondary pulleys, respectively

T_{app_pri}, T_{app_sec} Torque applied to primary and secondary pulleys, respectively

J_{pri}, J_{sec} Primary and secondary pulley rotational inertias, respectively

b_{pri}, b_{sec}	Primary and secondary pulley rotational viscous damping, respectively
F_{ax}	Pulley clamp force
μ	Coefficient of friction
μ_{kin}, μ_{static}	Coefficient of kinetic and static friction
v_b, a_b	Linear speed and acceleration of the belt, respectively
m_b	Total belt mass
r_{pri}, r_{sec}	Radii of the primary and secondary pulleys, respectively
Φ_{wrap}	Wrap angle of belt to pulley contact point
$\Phi_{wrap_pri}, \Phi_{wrap_sec}$	Primary and secondary pulley wrap angles, respectively

Power Accounting

For the power accounting, the block implements these equations.

Bus Signal		Description	Variable	Equations	
PwrInfo	PwrTrnsfrd — Power transferred between blocks	PwrEng	Engine power	P_{eng}	$\omega_i T_i$
	<ul style="list-style-type: none"> Positive signals indicate flow into block Negative signals indicate flow out of block 	PwrDiffrentl	Differential power	P_{diff}	$\omega_o T_o$
	PwrNotTrnsfrd — Power crossing the block boundary, but not transferred	PwrBeltLoss	Belt slip power loss	$P_{beltloss}$	$(J_{in} + J_{pri})\dot{\omega}_{pri}\omega_{pri} +$ $J_{sec}\dot{\omega}_{sec}\omega_{sec} +$ $m_b\dot{v}_b v_b + b_{pri}\omega_{pri}^2 + b_{sec}\omega_{sec}^2 + b_b v_b^2$ $T_{app_pri}\omega_{pri} - T_{app_sec}\omega_{sec}$
	<ul style="list-style-type: none"> Positive signals indicate an input Negative signals indicate a loss 	PwrGearInLoss	Input planetary gear mechanical power loss	$P_{grinloss}$	$-\left \omega_i T_i - T_{app_pri}\omega_{pri}\right $

Bus Signal		Description	Variable	Equations	
		PwrGearOutLoss	Output gear reduction mechanical power loss	$P_{grou\text{t}l\text{o}ss}$	$-\left \omega_o T_o - T_{app_sec}\omega_{sec}\right $
		PwrDampLoss	Mechanical damping loss	$P_{damp\text{lo}ss}$	$-b_{pri}\omega_{pri}^2 - b_{sec}\omega_{sec}^2 - b_b v_b^2$
	PwrStored — Stored energy rate of change <ul style="list-style-type: none"> Positive signals indicate an increase Negative signals indicate a decrease 	PwrStoredTrans	Rate change in rotational kinetic energy	P_{str}	$(J_{in} + J_{pri})\dot{\omega}_{pri}\omega_{pri} + J_{sec}\dot{\omega}_{sec}\omega_{sec} + m_b v_b a_b$

The equations use these variables.

T_{app_pri}, T_{app_sec}	Torque applied to primary and secondary pulleys, respectively
T_i, T_o	Input and output drive shaft torque, respectively
J_{pri}, J_{sec}	Primary and secondary pulley rotational inertias, respectively
b_{pri}, b_{sec}	Primary and secondary pulley rotational viscous damping, respectively
$\omega_{pri}, \omega_{sec}$	Primary and secondary pulley speed, respectively
ω_i, ω_o	Input and output drive shaft speed, respectively
v_b, a_b	Linear speed and acceleration of the belt, respectively
r_{pri}, r_{sec}	Radii of the primary and secondary pulleys, respectively

Ports

Inputs

Dir — Direction request

scalar

Direction request, Dir_{req} , controlling the direction. The block filters the request to determine the direction, forward or reverse. Dir equals 1 for forward motion. Dir equals -1 for reverse.

$$Dir = \begin{cases} 1 & \text{when } Dir_{req} \geq 0 \\ -1 & \text{when } Dir_{req} < 0 \end{cases}$$

PLlyRatioReq — Pulley ratio request

scalar

CVT pulley ratio request, $ratio_{request}$.

Dependencies

To create this port, for the **Control mode** parameter, select `Ideal` integrated controller.

PriDisp — Primary pulley displacement

scalar

Variator primary pulley displacement, x_{pri} , in m.

Dependencies

To create this port, for the **Control mode** parameter, select `External` control.

SecDisp — Secondary pulley displacement

scalar

Variator secondary pulley displacement, x_{sec} , in m.

Dependencies

To create this port, for the **Control mode** parameter, select `External` control.

EngTrq — Input drive shaft torque

scalar

External torque applied to the input drive shaft, T_i , in N·m.

DiffTrq — Output drive shaft torque

scalar

External torque applied to the output drive shaft, T_o , in N·m.

Output

Info — Bus signal

bus

Bus signal containing these block calculations.

Signal	Description	Variable	Units
EngTrq	Input shaft torque	T_i	N·m
DiffTrq	Output shaft torque	T_o	N·m
EngSpd	Input shaft speed	ω_i	rad/s
DiffSpd	Output shaft speed	ω_o	rad/s
PriRadius	Primary pulley radius	r_{pri}	m
PriPhi	Primary pulley wrap angle	Φ_{pri}	rad
SecRadius	Secondary pulley radius	r_{sec}	m
SecPhi	Secondary pulley wrap angle	Φ_{sec}	rad
BltLngthDelta	Change in belt length	ΔL	m
BltLngth	Belt length	L	m
BltLngthInit	Initial belt length	L_o	m
BltOnPriTrq	Belt torque acting on the primary pulley	T_{BoP_pri}	N·m
BltOnSecTrq	Belt torque acting on the secondary pulley	T_{BoP_sec}	N·m
BltVel	Linear speed of the belt	v_b	m/s
PriAngVel	Primary pulley speed	ω_{pri}	rad/s
SecAngVel	Secondary pulley speed	ω_{sec}	rad/s
PriSlipDir	Primary pulley slip direction indicator	$PriSlipDir$	N/A
SecSlipDir	Secondary pulley slip direction indicator	$SecSlipDir$	N/A
TransSpdRatio	Total no-slip gear ratio	N_{final}	N/A

Signal			Description	Variable	Units
PwrInfo	PwrTrnsfrd	PwrEng	Engine power	P_{eng}	W
		PwrDiffrentl	Differential power	P_{diff}	W
	PwrNotTrnsfrd	PwrBltLoss	Belt slip power loss	$P_{bltloss}$	W
		PwrGearInLoss	Input planetary gear mechanical power loss	$P_{grinloss}$	W
		PwrGearOutLoss	Output gear reduction mechanical power loss	$P_{groutloss}$	W
		PwrDampLoss	Mechanical damping loss	$P_{damploss}$	W
	PwrStored	PwrStoredTrans	Rate change in rotational kinetic energy	P_{str}	W

EngSpd — Input drive shaft speed

scalar

Input drive shaft angular speed, ω_i , in rad/sec.**DiffSpd — Output drive shaft speed**

scalar

Output drive shaft angular speed, ω_o , in rad/sec.**Parameters****Control mode — External or internal**

Ideal integrated controller (default) | External control

Specify the control method, either internal or external.

Dependencies

This table summarizes the port and input model configurations.

Control Mode	Creates Ports
Ideal integrated controller	PllyRatioReq
External control	PriDisp SecDisp

Kinematics

Maximum variator primary pulley radius, rp_max — Radius
scalar

Maximum variator primary pulley radius, rp_{max} , in m.

Maximum variator secondary pulley radius, rs_max — Radius
scalar

Maximum variator secondary pulley radius, rs_{max} , in m.

Minimum variator primary pulley radius, rp_min — Radius
scalar


Minimum variator primary pulley radius, rp_{min} , in m.

Minimum variator secondary pulley radius, rs_min — Radius
scalar

Minimum variator secondary pulley radius, rs_{min} , in m.


Gap distance between variator pulleys, $rgap$ — Specify crown wheel connection
scalar

The gap between the secondary and primary pulleys, r_{gap} , in m. The figure shows the pulley geometry.

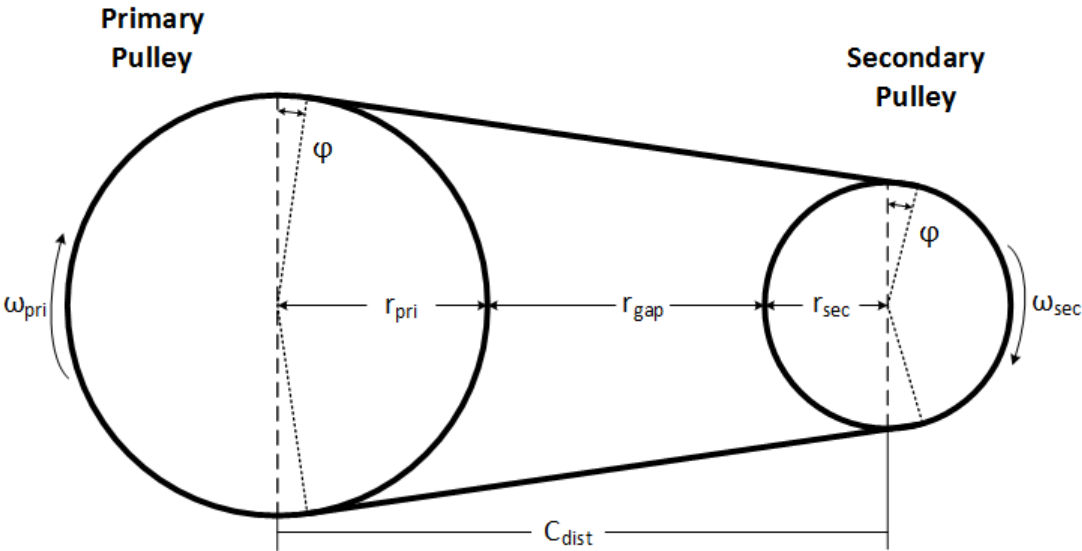

Variator wedge angle, θ_{wedge} – Specify crown wheel connection scalar

Variator wedge angle, θ_{wedge} , in deg.

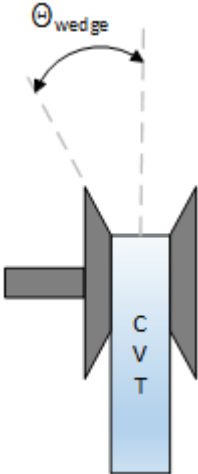

Dynamics

Primary pulley inertia, J_pri — Inertia

scalar

Primary pulley inertia, J_{pri} , in $\text{kg}\cdot\text{m}^2$.

Secondary pulley inertia, J_sec — Inertia

scalar

Secondary pulley inertia, J_{sec} , in $\text{kg}\cdot\text{m}^2$.

Primary pulley damping coefficient, b_pri — Damping

scalar

Primary pulley damping coefficient, b_{pri} , in $\text{N}\cdot\text{m}\cdot\text{s}/\text{rad}$.

Secondary pulley damping coefficient, b_sec — Damping

scalar

Secondary pulley damping coefficient, b_{sec} , in $\text{N}\cdot\text{m}\cdot\text{s}/\text{rad}$.

Belt damping coefficient, b_b — Damping

scalar

Belt damping coefficient, b_b , in kg/s .

Static friction coefficient, mu_static — Friction

scalar

Static friction coefficient between the belt and primary pulley, μ_{static} , dimensionless.

Kinetic friction coefficient, mu_kin — Friction

scalar

Kinetic friction coefficient between the belt and primary pulley, μ_{kin} , dimensionless.

Belt mass, m_b — Mass

scalar

Belt mass, m_b , in kg .

Pulley clamp force, F_ax — Pulley clamp force

scalar

Pulley clamp force, F_{ax} , in N.

Reverse and Output Ratio

Forward inertia, J_fwd – Inertia

scalar

Forward inertia, J_{fwd} , in $\text{kg}\cdot\text{m}^2$.

Reverse inertia, J_rev – Inertia

scalar

Reverse inertia, J_{rev} , in $\text{kg}\cdot\text{m}^2$.

Forward efficiency, eta_fwd – Efficiency

scalar

Forward efficiency, η_{fwd} , dimensionless.

Reverse efficiency, eta_rev – Efficiency

scalar

Reverse efficiency, η_{rev} , dimensionless.

Reverse gear ratio, N_rev – Ratio

scalar

Reverse gear ratio, N_{rev} , dimensionless.

Shift time constant, tau_s – Constant

scalar

Shift time constant, τ_s , in s.

Output gear ratio, N_o – Ratio

scalar

Output gear ratio, N_o , dimensionless.

Output gear efficiency, eta_o – Efficiency

scalar

Output gear efficiency, η_o , dimensionless.

References

- [1] Ambekar, Ashok G. *Mechanism and Machine Theory*. New Delhi: Prentice-Hall of India, 2007.
- [2] Bonsen, B. *Efficiency optimization of the push-belt CVT by variator slip control*. Ph.D. Thesis. Eindhoven University of Technology, 2006.
- [3] *CVT How Does It Work*. CVT New Zealand 2010 Ltd, 10 Feb. 2011. Web. 25 Apr. 2016.
- [4] Klaassen, T. W. G. L. *The Impact CVT: Dynamics and Control of an Electromechanically Actuated CVT*. Ph.D. Thesis. Eindhoven University of Technology, 2007.
- [5] Sakagami, K. *Prediction of Friction Drive Limit of Metal V-Belt*. Warrendale, PA: SAE International Journal of Engines 8(3):1408-1416, 2015.

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using Simulink® Coder™.

See Also


CVT Controller

Introduced in R2017a

CVT Controller

Continuously variable transmission controller

Library: Powertrain Blockset / Transmission / Transmission Controllers

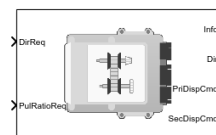


Description

The CVT Controller block implements a push belt continuously variable transmission (CVT) controller. The block uses standard pulley and geometric equations to calculate the kinematic setpoints for the CVT variator. You can use the block to control a CVT.

Pulley Kinematics

Using the physical dimensions of the system, the block calculates the primary and secondary variator positions that meet the pulley ratio request.

The figure and equations summarize the geometric dependencies.

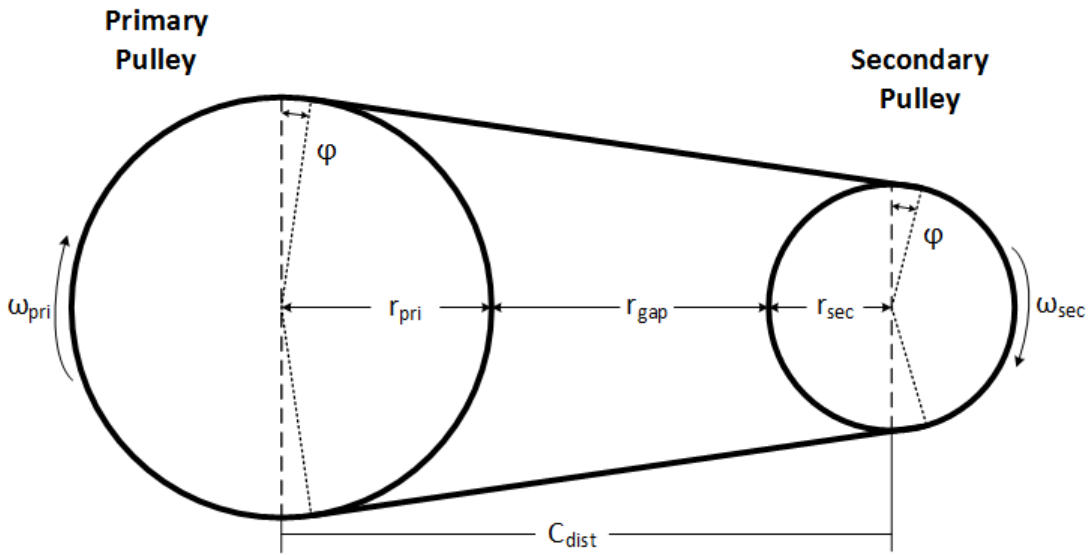

$$C_{dist} = r_{p_{max}} + r_{gap} + r_{sec_{max}}$$

$$L_0 = f(r_{p_{max}}, r_{s_{max}}, r_{p_{min}}, r_{s_{min}}, C_{dist})$$

$$ratio_{command} = f(ratio_{request}, ratio_{max}, ratio_{min})$$

$$r_{pri} = f(r_0, ratio_{command}, C_{dist})$$

$$r_{sec} = f(r_0, ratio_{command}, C_{dist})$$

$$x_{pri} = f(r_0, r_{pri}, \theta_{wedge})$$

$$x_{sec} = f(r_0, r_{sec}, \theta_{wedge})$$

The equations use these variables.

$ratio_{request}$	Pulley gear ratio request
$ratio_{command}$	Pulley gear ratio command, based on request and physical limitations
r_{gap}	Gap distance between variator pulleys
C_{dist}	Distance between variator pulley centers
$r_{p_{max}}$	Maximum variator primary pulley radius
$r_{s_{max}}$	Maximum variator secondary pulley radius

$r_{p_{min}}$	Minimum variator primary pulley radius
$r_{s_{min}}$	Minimum variator secondary pulley radius
r_o	Initial pulley radii with gear ratio of 1
L_o	Initial belt length, resulting from variator specification
x_{pri}	Variator primary pulley displacement, resulting from controller request
x_{sec}	Variator secondary pulley displacement, resulting from controller request
r_{pri}	Variator primary pulley radius, resulting from controller request
r_{sec}	Variator secondary pulley radius, resulting from controller request
Θ_{wedge}	Variator wedge angle
Φ	Angle of belt to pulley contact point
L	Belt length, resulting from variator position

Ports

Inputs

DirReq – Direction request

scalar

Direction request, Dir_{req} , controlling the direction, either forward or reverse. Dir equals 1 for forward motion. Dir equals -1 for reverse.

$$Dir = \begin{cases} 1 & \text{when } Dir_{req} \geq 0 \\ -1 & \text{when } Dir_{req} < 0 \end{cases}$$

PllyRatioReq – Pulley ratio request

scalar

CVT pulley ratio request, $ratio_{request}$.

Output

Info – Bus signal

bus

Bus signal containing these block calculations.

Signal		Description	Variable	Units
Radius	PriRadius	Variator primary pulley radius, resulting from controller request	r_{pri}	m
	SecRadius	Variator secondary pulley radius, resulting from controller request	r_{sec}	m
	InitPlyRadiu s	Initial pulley radii with gear ratio of 1	r_o	m
RatioAdj		Pulley gear ratio command, based on request and physical limitations	$ratio_{command}$	N/A
RatioMax		Maximum pulley ratio	$ratio_{max}$	N/A
RatioMin		Minimum pulley ratio	$ratio_{min}$	N/A
PriDispCmd		Variator primary pulley displacement, resulting from controller request	x_{pri}	m
SecDispCmd		Variator secondary pulley displacement, resulting from controller request	x_{sec}	m

Dir — Direction request

scalar

Direction request, Dir_{req} , controlling the direction, either forward or reverse. Dir equals 1 for forward motion. Dir equals -1 for reverse.

$$Dir = \begin{cases} 1 & \text{when } Dir_{req} \geq 0 \\ -1 & \text{when } Dir_{req} < 0 \end{cases}$$

PriDispCmd — Primary pulley displacement

scalar

Variator primary pulley displacement, x_{pri} , in m.

SecDispCmd – Secondary pulley displacement

scalar

Variator secondary pulley displacement, x_{sec} , in m.

Parameters

Kinematics**Maximum variator primary pulley radius, rp_max – Radius**

scalar

Maximum variator primary pulley radius, rp_{max} , in m.**Maximum variator secondary pulley radius, rs_max – Radius**

scalar

Maximum variator secondary pulley radius, rs_{max} , in m.**Minimum variator primary pulley radius, rp_min – Radius**

scalar


Minimum variator primary pulley radius, rp_{min} , in m.**Minimum variator secondary pulley radius, rs_min – Radius**

scalar

Minimum variator secondary pulley radius, rs_{min} , in m.**Gap distance between variator pulleys, rgap – Specify crown wheel connection**


scalar

The gap between the secondary and primary pulleys, r_{gap} , in m. The figure shows the pulley geometry.

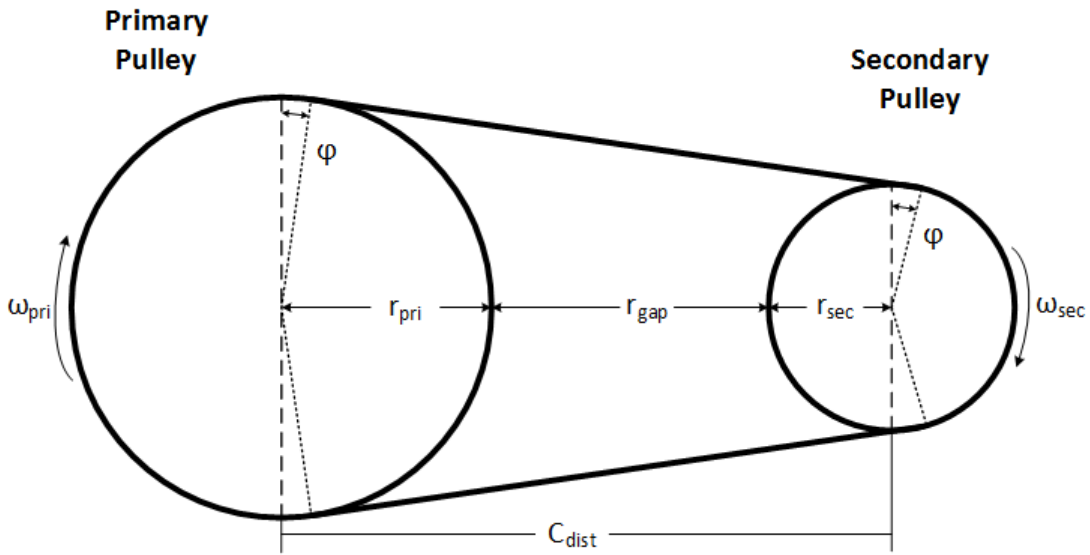

Variator wedge angle, θ_{wedge} — Specify crown wheel connection scalar

Variator wedge angle, θ_{wedge} , in deg.

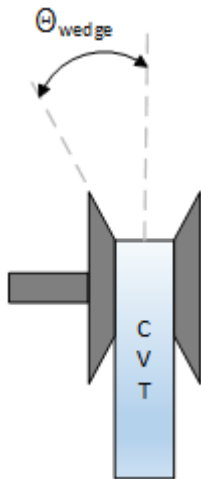

References

- [1] Ambekar, Ashok G. *Mechanism and Machine Theory*. New Delhi: Prentice-Hall of India, 2007.
- [2] Bonsen, B. *Efficiency optimization of the push-belt CVT by variator slip control*. Ph.D. Thesis. Eindhoven University of Technology, 2006.
- [3] *CVT How Does It Work*. CVT New Zealand 2010 Ltd. February 10, 2011. Accessed April 25, 2016.
- [4] Klaassen, T. W. G. L. *The Empact CVT: Dynamics and Control of an Electromechanically Actuated CVT*. Ph.D. Thesis. Eindhoven University of Technology, 2007.

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using Simulink® Coder™.

See Also


Continuously Variable Transmission

Introduced in R2017a

Dual Clutch Transmission

Dual clutch transmission that applies torque to the drive shaft

Library: Powertrain Blockset / Transmission / Transmission Systems

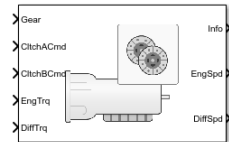

Description

The Dual Clutch Transmission block implements a dual clutch transmission (DCT). In a DCT, two clutches apply mechanical torque to the drive shaft. Odd gears engage one clutch, while even gears engage the secondary clutch. The number of gears is specified via an integer vector with corresponding gear ratios, inertias, viscous damping, and efficiency factors. The clutch and synchronization engagement rates are linear and adjustable. You can provide external clutch signals or configure the block to generate idealized internal clutch signals. The block implements the transmission model with minimal parameterization or computational cost.

Use the block to model a simplified automated manual transmission (AMT) for:

- Power and torque capacity sizing
- Determining gear ratio impact on fuel economy and performance

To determine the rotational drive shaft speed and reaction torque, the Dual Clutch Transmission block calculates:

- Clutch lock-up and clutch friction
- Locked rotational dynamics
- Unlocked rotational dynamics

To specify the block efficiency calculation, for **Efficiency factors**, select either of these options.

Setting	Block Implementation
Gear only	Efficiency determined from a 1D lookup table that is a function of the gear.
Gear, input torque, input speed, and temperature	Efficiency determined from a 4D lookup table that is a function of: <ul style="list-style-type: none"> • Gear • Input torque • Input speed • Oil temperature

Clutch Control

The DCT delivers drive shaft torque continuously by controlling the pressure signals from both clutches. If you select **Control mode** parameter **Ideal integrated controller**, the block generates idealized clutch pressure signals. The block uses the maximum pressure from each clutch to approximate the single-clutch commands that result in equivalent drive shaft torque. To use your own clutch control signals, select **Control mode** parameter **External control**.

Clutch Lock-Up and Clutch Friction

Based on the clutch lock-up condition, the block implements one of these friction models.

If	Clutch Condition	Friction Model
$\omega_i \neq N\omega_d$ or $T_S < T_f - Nw_i b_i $	Unlocked	$T_f = T_k$ where, $T_k = F_c R_{eff} \mu_k \tanh\left[4\left(\frac{w_i}{N} - w_d\right)\right]$ $T_S = F_c R_{eff} \mu_s$ $R_{eff} = \frac{2(R_o^3 - R_i^3)}{3(R_o^2 - R_i^2)}$

If	Clutch Condition	Friction Model
$\omega_i = N\omega_t$ and $T_S \geq T_f - Nb_i\omega_i $	Locked	$T_f = T_s$

The equations use these variables.

- ω_t Output drive shaft speed
- ω_i Input drive shaft speed
- ω_d Drive shaft speed
- b_i Viscous damping
- F_c Applied clutch force
- N Engaged gear
- T_f Frictional torque
- T_k Kinetic frictional torque
- T_s Static frictional torque
- R_{eff} Effective clutch radius
- R_o Annular disk outer radius
- R_i Annular disk inner radius
- μ_s Coefficient of static friction
- μ_k Coefficient of kinetic friction

Locked Rotational Dynamics

To model the rotational dynamics when the clutch is locked, the block implements these equations.

$$\dot{\omega}_d J_N = \eta_N T_d - \frac{\omega_i}{N} b_N + N T_i$$

$$\omega_i = N \omega_d$$

The block determines the input torque, T_i , through differentiation.

The equations use these variables.

ω_i	Input drive shaft speed
ω_d	Drive shaft speed
N	Engaged gear
b_N	Engaged gear viscous damping
J_N	Engaged gear inertia
η_N	Engaged gear efficiency
T_d	Drive shaft torque
T_i	Applied input torque

Unlocked Rotational Dynamics

To model the rotational dynamics when the clutch is unlocked, the block implements this equation.

$$\dot{\omega}_d J_N = N T_f - \omega_d b_N + T_d$$

where:

ω_d	Drive shaft speed
N	Engaged gear
b_N	Engaged gear viscous damping
J_N	Engaged gear inertia
T_d	Drive shaft torque
T_i	Applied input torque

Power Accounting

For the power accounting, the block implements these equations.

Bus Signal			Description	Variable	Equations
PwrInfo	PwrTrnsfrd — Power transferred between blocks	PwrEng	Engine power	P_{eng}	$\omega_i T_i$
	<ul style="list-style-type: none"> Positive signals indicate flow into block Negative signals indicate flow out of block 	PwrDiffrentl	Differential power	P_{diff}	$\omega_d T_d$
	PwrNotTrnsfrd — Power crossing the block boundary, but not transferred	PwrEffLoss	Mechanical power loss	$P_{effloss}$	$\omega_d T_d (\eta_N - 1)$
	<ul style="list-style-type: none"> Positive signals indicate an input Negative signals indicate a loss 	PwrDampingLoss	Mechanical damping loss	$P_{damploss}$	$-b_N \omega_d^2 - b_{in} \omega_i^2$
		PwrClutchLoss	Clutch power loss	P_{mech}	When locked: 0 When unlocked: $-T_k(\omega_i - N\omega_d)$
	PwrStored — Stored energy rate of change	PwrStoredTrans	Rate change in rotational kinetic energy	P_{str}	When locked: $\dot{\omega}_i \omega_i (J_{in} + \frac{J_N}{N^2})$ When unlocked: $J_{in} \dot{\omega}_i \omega_i + J_N \dot{\omega}_d \omega_d$
	<ul style="list-style-type: none"> Positive signals indicate an increase Negative signals indicate a decrease 				

The equations use these variables.

- b_N Engaged gear viscous damping
- J_N Engaged gear rotational inertia
- J_{in} Flywheel rotational inertia
- η_N Engaged gear efficiency
- N Engaged gear ratio
- T_i Applied input torque, typically from the engine crankshaft or dual mass flywheel damper

T_d	Applied load torque, typically from the differential or drive shaft
ω_d	Initial input drive shaft rotational velocity
$\omega_i, \dot{\omega}_i$	Applied drive shaft angular speed and acceleration

Ports

Inputs

Gear — Gear number to engage

scalar

Integer value of gear number to engage.

ClutchACmd — Command for odd-numbered gears

scalar

Clutch pressure command for odd-numbered gears, between 0 and 1.

Dependencies

To create this port, select **Control mode** parameter External control.

ClutchBCmd — Command for even-numbered gears

scalar

Clutch pressure command for even-numbered gears, between 0 and 1.

Dependencies

To create this port, select **Control mode** parameter External control.

EngTrq — Applied torque

scalar

Applied input torque, T_i , typically from the engine crankshaft or dual mass flywheel damper, in N·m.

DiffTrq — Applied torque

scalar

Applied load torque, T_d , typically from the drive shaft, in N·m.

Temp — Oil temperature

scalar

Oil temperature, in K. To determine the efficiency, the block uses a 4D lookup table that is a function of:

- Gear
- Input torque
- Input speed
- Oil temperature

Dependencies

To create this port, set **Efficiency factors** to Gear, input torque, input speed, and temperature.

Output

Info — Bus signal

bus

Bus signal containing these block calculations.

Signal		Description	Variable	Units
Eng	EngTrq	Applied input torque, typically from the engine crankshaft or dual mass flywheel damper	T_i	N·m
	EngSpd	Applied drive shaft angular speed input	ω_i	rad/s
Diff	DiffTrq	Applied load torque, typically from the differential	T_d	N·m
	DiffSpd	Drive shaft angular speed output	ω_d	rad/s
Clutch	ClutchForce	Applied clutch force	F_c	N

Signal		Description	Variable	Units	
	CltchLocked	Clutch state	NA	NA	
Trans	TransSpd Ratio	Input to output speed ratio at time t	$\Phi(t)$	NA	
	TransEta	Ratio of output power to input power	η_N	NA	
	TransGearCmd	Commanded gear	N_{cmd}	NA	
	TransGear	Engaged gear	N	NA	
PwrInfo	PwrTrnsfrd	PwrEng	Engine power	P_{eng}	W
		PwrDiffrentl	Differential power	P_{diff}	W
	PwrNotTrnsfrd	PwrEffLoss	Mechanical power loss	$P_{effloss}$	W
		PwrDampLoss	Mechanical damping loss	$P_{damploss}$	W
		PwrClutchLoss	Clutch power loss	P_{mech}	W
	PwrStored	PwrStoredTrans	Rate change in rotational kinetic energy	P_{str}	W

EngSpd – Angular speed

scalar

Drive shaft angular speed, ω_d , in rad/s.**DiffSpd – Angular speed**

scalar

Drive shaft angular speed, ω_d , in rad/s.

Parameters

Control mode — Specify control mode

External control (default) | Ideal integrated controller

The DCT delivers drive shaft torque continuously by controlling the pressure signals from both clutches. If you select **Control mode** parameter *Ideal integrated controller*, the block generates idealized clutch pressure signals. The block uses the maximum pressure from each clutch to approximate the single-clutch commands that result in equivalent drive shaft torque. To use your own clutch control signals, select **Control mode** parameter *External control*.

Dependencies

This table summarizes the port configurations.

Control Mode	Creates Ports
External control	CltchACmd
	CltchBCmd

Efficiency factors — Specify efficiency calculation

Gear only (default) | Gear, input torque, input speed, and temperature

To specify the block efficiency calculation, for **Efficiency factors**, select either of these options.

Setting	Block Implementation
Gear only	Efficiency determined from a 1D lookup table that is a function of the gear.
Gear, input torque, input speed, and temperature	Efficiency determined from a 4D lookup table that is a function of: <ul style="list-style-type: none"> • Gear • Input torque • Input speed • Oil temperature

Dependencies

Setting Parameter To	Enables
Gear only	Efficiency vector, eta
Gear, input torque, input speed, and temperature	Efficiency torque breakpoints, Trq_bpts Efficiency speed breakpoints, omega_bpts Efficiency temperature breakpoints, Temp_bpts Efficiency lookup table, eta_tbl

Transmission**Input shaft inertia, Jin – Inertia**

scalar

Input shaft inertia, in $\text{kg}\cdot\text{m}^2$.**Input shaft damping, bin – Damping**

scalar

Input shaft damping, in $\text{N}\cdot\text{m}\cdot\text{s}/\text{rad}$.**Initial input velocity, omegain_o – Angular velocity**

scalar

Angular velocity, in rad/s .**Efficiency torque breakpoints, Trq_bpts – Breakpoints**

vector

Torque breakpoints for efficiency table, in $\text{N}\cdot\text{m}$.**Dependencies**

To enable this parameter, set **Efficiency factors** to Gear, input torque, input speed, and temperature.

Efficiency speed breakpoints, omega_bpts – Breakpoints

vector

Speed breakpoints for efficiency table, in rad/s .

Dependencies

To enable this parameter, set **Efficiency factors** to Gear, input torque, input speed, and temperature.

Efficiency temperature breakpoints, Temp_bpts — Breakpoints

vector

Temperature breakpoints for efficiency table, in K.

Dependencies

To enable this parameter, set **Efficiency factors** to Gear, input torque, input speed, and temperature.

Gear number vector, G — Specify number of transmission speeds

vector

Vector of integers used to specify the number of transmission speeds. Neutral gear is 0. For example, you can set these parameter values.

To Specify	Set Gear number, G to
Four transmission speeds, including neutral	[0, 1, 2, 3, 4]
Three transmission speeds, including neutral and reverse	[- 1, 0, 1, 2, 3]
Five transmission speeds, including neutral and reverse	[- 1, 0, 1, 2, 3, 4, 5]

Vector dimensions for the **Gear number vector**, **Gear ratio vector**, **Transmission inertia vector**, **Damping vector**, and **Efficiency vector** parameters must be equal.

Gear ratio vector, N — Ratio of input speed to output speed

vector

Vector of gear ratios (that is, input speed to output speed) with indices corresponding to the ratios specified in **Gear number**, **G**. For neutral, set the gear ratio to 1. For example, you can set these parameter values.

To Specify Gear Ratios for	Set Gear number, G to	Set Gear ratio, N to
Four transmission speeds, including neutral	[0, 1, 2, 3, 4]	[1, 4.47, 2.47, 1.47, 1]
Five transmission speeds, including neutral and reverse	[-1, 0, 1, 2, 3, 4, 5]	[-4.47, 1, 4.47, 2.47, 1.47, 1, 0.8]

Vector dimensions for the **Gear number vector**, **Gear ratio vector**, **Transmission inertia vector**, **Damping vector**, and **Efficiency vector** parameters must be equal.

Transmission inertia vector, Jout – Gear rotational inertia vector

Vector of gear rotational inertias, with indices corresponding to the inertias specified in **Gear number, G**, in $\text{kg}\cdot\text{m}^2$. For example, you can set these parameter values.

To Specify Inertia for	Set Gear number, G to	Set Inertia, J to
Four gears, including neutral	[0, 1, 2, 3, 4]	[0.01, 2.28, 2.04, 0.32, 0.028]
Inertia for five gears, including reverse and neutral	[-1, 0, 1, 2, 3, 4, 5]	[2.28, 0.01, 2.28, 2.04, 0.32, 0.028, 0.01]

Vector dimensions for the **Gear number vector**, **Gear ratio vector**, **Transmission inertia vector**, **Damping vector**, and **Efficiency vector** parameters must be equal.

Damping vector, bout – Gear viscous damping coefficient vector

Vector of gear viscous damping coefficients, with indices corresponding to the coefficients specified in **Gear number, G**, in $\text{N}\cdot\text{m}\cdot\text{s}/\text{rad}$. For example, you can set these parameter values.

To Specify Damping for	Set Gear number, G to	Set Damping, b to
Four gears, including neutral	[0, 1, 2, 3, 4]	[0.001, 0.003, 0.0025, 0.002, 0.001]
Five gears, including reverse and neutral	[-1, 0, 1, 2, 3, 4, 5]	[0.003, 0.001, 0.003, 0.0025, 0.002, 0.001, 0.001]

Vector dimensions for the **Gear number vector**, **Gear ratio vector**, **Transmission inertia vector**, **Damping vector**, and **Efficiency vector** parameters must be equal.

Efficiency vector, eta — Gear efficiency vector

Vector of gear mechanical efficiency, with indices corresponding to the efficiencies specified in **Gear number, G**. For example, you can set these parameter values.

To Specify Efficiency for	Set Gear number, G to	Set Efficiency, eta to
Four gears, including neutral	[0, 1, 2, 3, 4]	[0.9, 0.9, 0.9, 0.9, 0.95]
Five gears, including reverse and neutral	[-1, 0, 1, 2, 3, 4, 5]	[0.9, 0.9, 0.9, 0.9, 0.95, 0.95]

Vector dimensions for the **Gear number vector**, **Gear ratio vector**, **Transmission inertia vector**, **Damping vector**, and **Efficiency vector** parameters must be equal.

Dependencies

To enable this parameter, set **Efficiency factors** to Gear only.

Efficiency lookup table, eta_tbl — Gear efficiency array

Table of gear mechanical efficiency, η_N as a function of gear, input torque, input speed, and temperature.

Dependencies

To enable this parameter, set **Efficiency factors** to Gear, input torque, input speed, and temperature.

Initial output velocity, omegaout_o – Transmission

scalar

Transmission initial output rotational velocity, ω_{to} , in rad/s. If you select **Clutch initially locked**, the block ignores the **Initial output velocity, omega_o** parameter value.

Initial gear, G_o – Engaged gear

scalar

Initial gear to engage, G_o .

Clutch and Synchronizer**Clutch pressure time constant, tauc – Time**

scalar

Time required to engage and disengage the clutch during shift events, t_c , in s.

Synchronization time, ts – Time

scalar

Time required for gear selection and synchronization, t_s , in s.

Clutch time, tc – Time

scalar

Time required to engage clutch, t_c , in s.

Dependencies

To create this parameter, select **Control mode** parameter Ideal integrated controller.

Effective clutch radius, R – Radius

scalar

The effective radius, R_{eff} , used with the applied clutch friction force to determine the friction force, in m. The effective radius is defined as:

$$R_{eff} = \frac{2(R_o^3 - R_i^3)}{3(R_o^2 - R_i^2)}$$

The equation uses these variables.

R_o Annular disk outer radius

R_i Annular disk inner radius

Clutch force gain, K_c — Force
scalar

Open loop lock-up clutch gain, K_c , in N.

Clutch static friction coefficient, mus — Coefficient
scalar

Dimensionless clutch disc coefficient of static friction, μ_s .

Clutch kinematic friction coefficient, muk — Coefficient
scalar

Dimensionless clutch disc coefficient of kinetic friction, μ_k .

Clutch initially locked — Select to initially lock clutch
off (default)

Selecting this parameter initially locks the clutch.

Dependencies

To create this parameter, select **Control mode** parameter Ideal integrated controller.

Synchronizer initially locked — Select to initially lock synchronizer
off (default)

Selecting this parameter initially locks the synchronizer.

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using Simulink® Coder™.

See Also


Automated Manual Transmission | DCT Controller

Introduced in R2017a

DCT Controller

Dual clutch transmission controller

Library: Powertrain Blockset / Transmission / Transmission Controllers

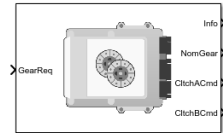

Description

The DCT Controller block implements a dual clutch transmission (DCT) controller. You can specify the clutch open, close, and synchronization timing parameters. The block determines the clutch commands using integrator-based timers and latching logic that is based on the specified timing parameters and gear request.

Ports

Inputs

GearReq — Gear number to engage

scalar

Gear number request, G_{req} .

Output

Info — Bus signal

bus

Bus signal containing these block calculations.

Signal	Description	Variable
GearReq	Gear number request	G_{req}

Signal	Description	Variable
GearEngd	Nominal gear commanded by the controller	G_o
GearEffct	Effective gear	NA
ClutchACmd	Clutch pressure command for odd-numbered gears, between 0 and 1	NA
ClutchBCmd	Clutch pressure command for even-numbered gears, between 0 and 1	NA

NomGear — Nominal gear for shifting

scalar

Nominal gear for shifting. The Dual Clutch Transmission block uses this signal for the smooth application of inertial, efficiency, gear ratio, and damping parameters.

ClutchACmd — Command for odd-numbered gears

scalar

Clutch pressure command for odd-numbered gears, between 0 and 1.

ClutchBCmd — Command for even-numbered gears

scalar

Clutch pressure command for even-numbered gears, between 0 and 1.

Parameters

Initial gear, G_o — Engaged gear

scalar

Initial gear to engage, G_o .

Clutch actuation time, tc — Time

scalar

Time required to engage and disengage the clutch during shift events, t_c , in s.

Synchronizer time, ts — Time

scalar

Time required for gear selection and synchronization, t_s , in s.

Sample period, dt — Time

scalar

Sample period, dt , in s.

Clutch initially locked — Select to initially lock clutch

off (default)

Selecting this parameter initially locks the clutch.

Synchronizer initially locked — Select to initially lock synchronizer

off (default)

Selecting this parameter initially locks the synchronizer.

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using Simulink® Coder™.

See Also


AMT Controller | Dual Clutch Transmission

Introduced in R2017a

Ideal Fixed Gear Transmission

Ideal fixed gear transmission without clutch or synchronization

Library: Powertrain Blockset / Transmission / Transmission Systems
 Vehicle Dynamics Blockset / Powertrain / Transmission

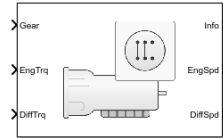

Description

The Ideal Fixed Gear Transmission implements an idealized fixed-gear transmission without a clutch or synchronization. Use the block to model the overall gear ratio and power loss when you do not need a detailed transmission model, for example, in component-sizing, fuel economy, and emission studies. The block implements a transmission model with minimal parameterization or computational cost.

To specify the block efficiency calculation, for **Efficiency factors**, select either of these options.

Setting	Block Implementation
Gear only	Efficiency determined from a 1D lookup table that is a function of the gear.
Gear, input torque, input speed, and temperature	Efficiency determined from a 4D lookup table that is a function of: <ul style="list-style-type: none"> • Gear • Input torque • Input speed • Oil temperature

The block uses this equation to determine the transmission dynamics:

$$\dot{\omega}_i \frac{J_N}{N^2} = \eta_N \left(\frac{T_o}{N} + T_i \right) - \frac{\omega_i}{N^2} b_N$$

$$\omega_i = N\omega_o$$

The block filters the gear command signal:

$$\frac{G}{G_{cmd}}(s) = \frac{1}{\tau_s s + 1}$$

Neutral Gear

When **Initial gear number, G_o** is equal to 0, the initial gear is neutral. The block uses these parameters to decouple the input flywheel from the downstream gearing.

- **Initial input velocity, omega_o**
- **Initial neutral input velocity, omegainN_o**

The block uses these equations for the neutral gear speed and flywheel.

$$\dot{\omega}_{neutral} \frac{J_N}{N^2} = \eta_N \frac{T_o}{N} - \frac{\omega_{neutral}}{N^2} b_N$$

$$\omega_{neutral} = N\omega_o$$

$$\dot{\omega}_1 J_F = \eta_{@N=0} T_i - b_{@N=0} \omega_i$$

$$J_F = J_{@N=1} - J_{@N=0}$$

Power Accounting

For the power accounting, the block implements these equations.

Bus Signal			Description	Variable	Equations
PwrInfo	PwrTrnsfrd — Power transferred between blocks	PwrEng	Engine power	P_{eng}	$\omega_i T_i$
	<ul style="list-style-type: none"> • Positive signals indicate flow into block • Negative signals indicate flow out of block 	PwrDiffntl	Differential power	P_{diff}	$\omega_o T_o$
	PwrNotTrnsfrd — Power crossing the block boundary, but not transferred	PwrEffLoss	Mechanical power loss	P_{efflos_s}	$\omega_o T_o (\eta_N - 1)$

Bus Signal		Description	Variable	Equations
<ul style="list-style-type: none"> Positive signals indicate an input Negative signals indicate a loss 	PwrDampLoss	Mechanical damping loss	$P_{damp\ loss}$	For $G=0$: $-\frac{b_N\omega_i^2}{ N^2 }$ For $G \neq 0$: $-b_N\omega_i^2 - \frac{b_N\omega_{neutral}^2}{ N^2 }$
PwrStored — Stored energy rate of change <ul style="list-style-type: none"> Positive signals indicate an increase Negative signals indicate a decrease 	PwrStoredTrans	Rate change in rotational kinetic energy	P_{str}	For $G=0$: $\frac{J_N}{N^2}\dot{\omega}_i\omega_i$ For $G \neq 0$: $J_F\dot{\omega}_i\omega_i + \frac{J_N}{N^2}\dot{\omega}_{neutral}\omega_{neutral}$

The equations use these variables.

- b_N Engaged gear viscous damping
- J_N Engaged gear rotational inertia
- J_F Flywheel rotational inertia
- η_N Engaged gear efficiency
- G Engaged gear number
- G_{cmd} Gear number to engage
- N Engaged gear ratio
- T_i Applied input torque, typically from the engine crankshaft or dual mass flywheel damper
- T_o Applied load torque, typically from the differential or drive shaft
- ω_o Initial input drive shaft rotational velocity
- $\omega_i, \dot{\omega}_i$ Applied drive shaft angular speed and acceleration
- ω_{No} Initial neutral gear input rotational velocity
- $\omega_{neutral}$ Neutral gear drive shaft rotational velocity
- τ_s Shift time constant

Ports

Inputs

Gear — Gear number to engage

scalar

Integer value of gear number to engage, G_{cmd} .

EngTrq — Applied input torque

scalar

Applied input torque, T_i , typically from the engine crankshaft or dual mass flywheel damper, in N·m.

DiffTrq — Applied load torque

scalar

Applied load torque, T_o , typically from the differential, in N·m.

Temp — Oil temperature

scalar

Oil temperature, in K. To determine the efficiency, the block uses a 4D lookup table that is a function of:

- Gear
- Input torque
- Input speed
- Oil temperature

Dependencies

To create this port, set **Efficiency factors** to Gear, input torque, input speed, and temperature.

Output

Info — Bus signal

bus

Bus signal containing these block calculations.

Signal		Description	Variable	Units	
Eng	EngTrq	Applied input torque, typically from the engine crankshaft or dual mass flywheel damper	T_i	N·m	
	EngSpd	Applied drive shaft angular speed input	ω_i	rad/s	
Diff	DiffTrq	Applied load torque, typically from the differential	T_o	N·m	
	DiffSpd	Drive shaft angular speed output	ω_o	rad/s	
Trans	TransSpdRatio	Input to output speed ratio at time t	$\Phi(t)$	N/A	
	TransEta	Ratio of output power to input power	η_N	N/A	
	TransGearCmd	Commanded gear	N_{cmd}	N/A	
	TransGear	Engaged gear	N	N/A	
PwrInfo	PwrTrnsfrd	PwrEng	Engine power	P_{eng}	W
		PwrDiffrentl	Differential power	P_{diff}	W

Signal		Description	Variable	Units	
	PwrNotTrnsfrd	PwrEffLoss	Mechanical power loss	$P_{effloss}$	W
		PwrDampLoss	Mechanical damping loss	$P_{damploss}$	W
	PwrStored	PwrStoredTrans	Rate change in rotational kinetic energy	P_{str}	W

EngSpd — Angular speed

scalar

Applied drive shaft angular speed input, ω_i , in rad/s.

DiffSpd — Angular speed

scalar

Drive shaft angular speed output, ω_o , in rad/s.

Parameters

Efficiency factors — Specify efficiency calculation

Gear only (default) | Gear, input torque, input speed, and temperature

To specify the block efficiency calculation, for **Efficiency factors**, select either of these options.

Setting	Block Implementation
Gear only	Efficiency determined from a 1D lookup table that is a function of the gear.

Setting	Block Implementation
Gear, input torque, input speed, and temperature	Efficiency determined from a 4D lookup table that is a function of: <ul style="list-style-type: none"> • Gear • Input torque • Input speed • Oil temperature

Dependencies

Setting Parameter To	Enables
Gear only	Efficiency vector, eta
Gear, input torque, input speed, and temperature	Efficiency torque breakpoints, Trq_bpts Efficiency speed breakpoints, omega_bpts Efficiency temperature breakpoints, Temp_bpts Efficiency lookup table, eta_tbl

Gear property interpolation method – Interpolation

Nearest (default) | Linear | Flat | Cubic spline

Method that the block uses to switch the gear ratio during gear shifting.

Transmission

Gear number vector, **G** – Specify number of transmission speeds

vector

Vector of integer gear commands used to specify the number of transmission speeds. Neutral gear is 0. For example, you can set these parameter values.

To Specify	Set Gear number, G To
Four transmission speeds, including neutral	[0, 1, 2, 3, 4]

To Specify	Set Gear number, G To
Three transmission speeds, including neutral and reverse	[- 1, 0, 1, 2, 3]
Five transmission speeds, including neutral and reverse	[- 1, 0, 1, 2, 3, 4, 5]

Vector dimensions for the **Gear number vector**, **Gear ratio vector**, **Inertia vector**, **Damping vector**, and **Efficiency vector** parameters must be equal.

Efficiency torque breakpoints, Trq_bpts — Breakpoints
vector

Torque breakpoints for efficiency table.

Dependencies

To enable this parameter, set **Efficiency factors** to Gear, input torque, input speed, and temperature.

Efficiency speed breakpoints, omega_bpts — Breakpoints
vector

Speed breakpoints for efficiency table.

Dependencies

To enable this parameter, set **Efficiency factors** to Gear, input torque, input speed, and temperature.

Efficiency temperature breakpoints, Temp_bpts — Breakpoints
vector

Temperature breakpoints for efficiency table.

Dependencies

To enable this parameter, set **Efficiency factors** to Gear, input torque, input speed, and temperature.

Gear ratio vector, N — Ratio of input speed to output speed
vector

Vector of gear ratios (that is, input speed to output speed) with indices corresponding to the ratios specified in **Gear number, G**. For neutral, set the gear ratio to 1. For example, you can set these parameter values.

To Specify Gear Ratios For	Set Gear number, G To	Set Gear ratio, N To
Four transmission speeds, including neutral	[0, 1, 2, 3, 4]	[1, 4.47, 2.47, 1.47, 1]
Five transmission speeds, including neutral and reverse	[-1, 0, 1, 2, 3, 4, 5]	[-4.47, 1, 4.47, 2.47, 1.47, 1, 0.8]

Vector dimensions for the **Gear number vector**, **Gear ratio vector**, **Inertia vector**, **Damping vector**, and **Efficiency vector** parameters must be equal.

Inertia vector, Jout – Gear rotational inertia vector

Vector of gear rotational inertias, J_N , with indices corresponding to the inertias specified in **Gear number, G**, in $\text{kg}\cdot\text{m}^2$. For example, you can set these parameter values.

To Specify Inertia For	Set Gear number, G To	Set Inertia, J To
Four gears, including neutral	[0, 1, 2, 3, 4]	[0.01, 2.28, 2.04, 0.32, 0.028]
Inertia for five gears, including reverse and neutral	[-1, 0, 1, 2, 3, 4, 5]	[2.28, 0.01, 2.28, 2.04, 0.32, 0.028, 0.01]

Vector dimensions for the **Gear number vector**, **Gear ratio vector**, **Inertia vector**, **Damping vector**, and **Efficiency vector** parameters must be equal.

Damping vector, bout – Gear viscous damping coefficient vector

Vector of gear viscous damping coefficients, b_N , with indices corresponding to the coefficients specified in **Gear number, G**, in $\text{N}\cdot\text{m}\cdot\text{s}/\text{rad}$. For example, you can set these parameter values.

To Specify Damping For	Set Gear number, G To	Set Damping, b To
Four gears, including neutral	[0, 1, 2, 3, 4]	[0.001, 0.003, 0.0025, 0.002, 0.001]
Five gears, including reverse and neutral	[-1, 0, 1, 2, 3, 4, 5]	[0.003, 0.001, 0.003, 0.0025, 0.002, 0.001, 0.001]

Vector dimensions for the **Gear number vector**, **Gear ratio vector**, **Inertia vector**, **Damping vector**, and **Efficiency vector** parameters must be equal.

Efficiency vector, eta — Gear efficiency vector

Vector of gear mechanical efficiency, η_N , with indices corresponding to the efficiencies specified in **Gear number**, **G**. For example, you can set these parameter values.

To Specify Efficiency For	Set Gear number, G To	Set Efficiency, eta To
Four gears, including neutral	[0, 1, 2, 3, 4]	[0.9, 0.9, 0.9, 0.9, 0.95]
Five gears, including reverse and neutral	[-1, 0, 1, 2, 3, 4, 5]	[0.9, 0.9, 0.9, 0.9, 0.95, 0.95]

Vector dimensions for the **Gear number vector**, **Gear ratio vector**, **Inertia vector**, **Damping vector**, and **Efficiency vector** parameters must be equal.

Dependencies

To enable this parameter, set **Efficiency factors** to Gear only.

Efficiency lookup table, eta_tbl — Gear efficiency array

Table of gear mechanical efficiency, η_N as a function of gear, input torque, input speed, and temperature.

Dependencies

To enable this parameter, set **Efficiency factors** to Gear, input torque, input speed, and temperature.

Initial gear number, G_o – Gear

scalar

Initial gear number, G_o , dimensionless.**Initial input velocity, omega_o – Input speed**

scalar

Transmission initial input rotational velocity, ω_o , in rad/s.**Initial neutral input velocity, omegainN_o – Neutral gear input speed**

scalar

Initial neutral gear input rotational velocity, ω_{No} , in rad/s.**Shift time constant, tau_s – Time**

scalar

Shift time constant, τ_s , in s.

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using Simulink® Coder™.

See Also


Automated Manual Transmission | Continuously Variable Transmission | Dual Clutch Transmission

Introduced in R2017a

Torque Converter

Three-part torque converter consisting of an impeller, turbine, and stator

Library: Powertrain Blockset / Transmission / Torque Converters

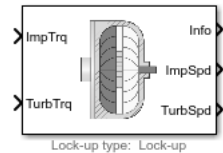

Description


The Torque Converter block implements a three-part torque converter consisting of an impeller, turbine, and stator with an optional clutch lock-up capability. The block can simulate driving (power flowing from impeller to turbine) and coasting (power flowing from turbine to impeller).

You can specify torque converter characteristics:

- Speed ratio — Ratio of turbine angular speed to impeller angular speed
- Torque ratio — Ratio of turbine torque to impeller torque
- Capacity factor parameterization — Function of input speed or input torque

Optional clutch lock-up configurations include:

- No lock-up — Model fluid-coupling only
- Lock-up — Model automatic clutch engagement
- External lock-up — Model clutch pressure as input from an external signal

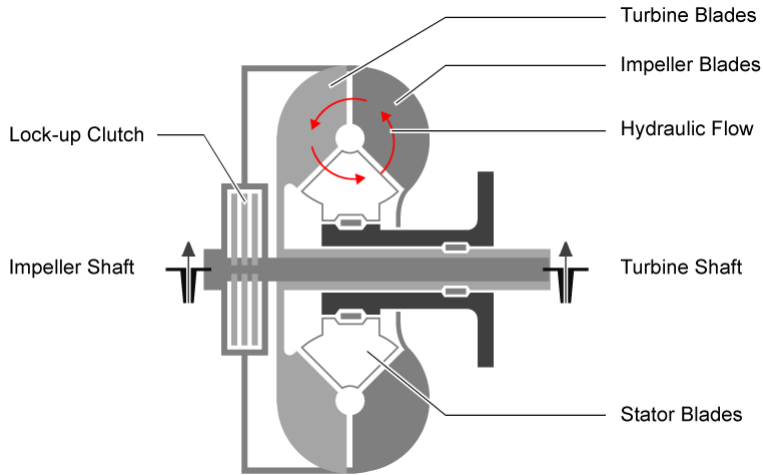

Dynamics

Clutch Lock-Up Condition and Clutch Friction

Based on the clutch lock-up condition, the block implements these friction models.

If	Clutch Condition	Friction Model
$\omega_i \neq \omega_t$ or $T_S < \left \frac{J_t}{(J_i + J_t)} [T_i + T_f - \omega_i(b_t + b_i)] \right $	Unlocked	$T_f = T_k$ where: $T_k = F_c R_{eff} m_k \tanh[4(\omega_i - \omega_t)]$ $T_s = F_c R_{eff} m_s$ $R_{eff} = \frac{2(R_o^3 - R_i^3)}{3(R_o^2 - R_i^2)}$
$\omega_i = \omega_t$ and $T_S \geq \left \frac{J_t}{(J_i + J_t)} [T_i + T_f - \omega_t(b_t + b_i) + \omega_t b_t] \right $	Locked	$T_f = T_s$

Locked Rotational Dynamics

To model the rotational dynamics if the clutch is locked, the block implements equations.

$$\dot{\omega}(J_i + J_t) = T_i - \omega(b_i + b_t) + T_{ext}$$

$$\omega = \omega_i = \omega_t$$

The rotational velocity represents both the impeller and turbine rotational velocities.

Unlocked Rotational Dynamics

To model the rotational dynamics if the clutch is unlocked, the block implements equations.

$$\dot{\omega}_i J_i = T_i - \omega_i b_i - T_f - T_p$$

$$\dot{\omega}_t J_t = T_{ext} - \omega_t b_t + T_f + T_t$$

$$T_p = \omega_i^2 \psi(\phi)$$

$$T_t = T_p \zeta(\phi)$$

To approximate the torque multiplication lag between the impeller and turbine, you can specify the parameter **Fluid torque response time constant (set to 0 to disable), tauc [s]**.

Power Accounting

For the power accounting, the block implements these equations.

Bus Signal		Description	Variable	Equations	
PwrInfo	PwrTrnsfrd — Power transferred between blocks <ul style="list-style-type: none"> Positive signals indicate flow into block Negative signals indicate flow out of block 	PwrImp	Applied impeller power	P_{imp}	$\omega_i T_i$
		PwrTurb	Applied turbine output power	P_{turb}	$\omega_t T_t$

Bus Signal		Description	Variable	Equations
PwrNotTrnsfrd — Power crossing the block boundary, but not transferred <ul style="list-style-type: none"> • Positive signals indicate an input • Negative signals indicate a loss 	PwrDampLoss	Mechanical damping loss	$P_{damploss}$	$-b_t\omega_t^2 - b_i\omega_i^2$
	PwrFluidCplingLoss	Heat loss to transmission fluid	P_{floss}	$-(T_p\omega_i - T_{hyd}\omega_t)$
	PwrClutchLoss	Clutch slip power loss	$P_{cltloss}$	$-T_k(\omega_i - \omega_t)$
PwrStored — Stored energy rate of change <ul style="list-style-type: none"> • Positive signals indicate an increase • Negative signals indicate a decrease 	PwrStoredImp	Rate change in impeller rotational kinetic energy	P_{strimp}	$\dot{\omega}_i\omega_i J_i$
	PwrStoredTurb	Rate change in turbine rotational kinetic energy	$P_{strturb}$	$\dot{\omega}_t\omega_t J_t$

The block implements equations that use these variables.

T_f	Frictional torque
T_k	Kinetic frictional torque
T_s	Static frictional torque
T_i	Applied input torque
T_p	Impeller reaction torque
T_{ext}	Externally applied turbine torque
$\psi(\phi)$	Torque conversion capacity factor
$\zeta(\phi)$	Torque ratio
ω_i	Impeller rotational shaft speed

ω_t	Turbine rotational shaft speed
J_i	Impeller rotational inertia
J_t	Turbine rotational inertia
b_i	Impeller rotational viscous damping
b_t	Turbine rotational viscous damping
R_{eff}	Effective clutch radius
R_o	Annular disk outer radius
R_i	Annular disk inner radius

Ports

Inputs

ImpTrq — Applied impeller torque

scalar

Applied input torque, typically from the engine crankshaft or dual mass flywheel, in N·m.

TurbTrq — Applied turbine torque

scalar

Applied turbine torque, typically from the transmission, in N·m.

Clutch Force — Applied clutch force

scalar

Applied clutch force, typically from a hydraulic actuator, in N.

Dependencies

To create this port, select External `lock-up` input for the **Lock-up clutch configuration** parameter.

Output

Info — Bus signal

bus

Bus signal containing these block calculations.

Signal		Description	Units	
Imp	ImpTrq	Applied input torque	N·m	
	ImpSpd	Impeller rotational shaft speed	rad/s	
Turb	TurbTrq	Applied turbine torque	N·m	
	TurbSpd	Turbine rotational shaft speed	rad/s	
Cltch	CltchForce	Applied clutch force	N	
	CltchLocked	Clutch locked or unlocked state	N/A	
TrqConv	TrqConvSpdRatio	Turbine to impeller speed ratio	N/A	
	TrqConvEta	Torque conversion efficiency	N/A	
PwrInfo	PwrTrnsfrd	PwrImp	Applied impeller power	W
		PwrTurb	Applied turbine output power	W
	PwrNotTrnsfrd	PwrDampLoss	Mechanical damping loss	W
		PwrFluidCplingLoss	Heat loss to transmission fluid	W
		PwrCltchLoss	Clutch slip power loss	W
	PwrStored	PwrStoredImp	Rate change in impeller rotational kinetic energy	W
PwrStoredTurb		Rate change in turbine rotational kinetic energy	W	

ImpSpd — Impeller speed

scalar

Impeller rotational shaft speed, ω_i , in rad/s.

TrbSpd — Turbine speed

scalar

Turbine rotational shaft speed, ω_t , in rad/s.

Parameters

Configuration

Lock-up clutch configuration — Select lock-up clutch configuration

Lock-up (default) | No lock-up | External lock-up input

To Model	Select
Fluid-coupling only	No lock-up
Automatic clutch engagement	Lock-up
Clutch pressure as input from an external signal	External lock-up input

Dependencies

To enable the **Clutch** parameters, select Lock-up or External lock-up input for the **Lock-up clutch configuration** parameter.

Torque Converter

Impeller shaft inertia, J_i — Inertia

scalar

Impeller shaft inertia, in $\text{kg}\cdot\text{m}^2$.

Impeller shaft viscous damping, b_i — Viscous damping coefficient

scalar

Impeller shaft viscous damping, in $\text{N}\cdot\text{m}\cdot\text{s}/\text{rad}$.

Turbine shaft inertia, J_t — Inertia

scalar

Turbine shaft inertia, in $\text{kg}\cdot\text{m}^2$.

Turbine shaft viscous damping, b_i – Viscous damping coefficient
scalar

Turbine shaft viscous damping, in $\text{N}\cdot\text{m}\cdot\text{s}/\text{rad}$.

Initial impeller shaft velocity, ω_{aio} – Angular velocity
scalar

Initial impeller shaft velocity, in rad/s .

Initial turbine shaft velocity, ω_{ato} – Angular velocity
scalar

Initial turbine shaft velocity, in rad/s .

Speed ratio vector, ϕ_i – Ratio
vector

Vector of turbine speed to impeller speed ratios. Breakpoints for the capacity and torque multiplication vectors.

Capacity factor parameterization – Select factor ratio type
Input speed / $\sqrt{\text{input torque}}$ (default) | Absorbed torque / input speed²

To Set Factor Ratio to	Select
Impeller angular velocity to square root impeller torque	Input speed / $\sqrt{\text{input torque}}$
Impeller absorbed torque to square of impeller angular velocity	Absorbed torque / input speed ²

Capacity vector, ψ_i – Vector
vector

Capacity factor parameterization Setting	Capacity Vector Units
Input speed / $\sqrt{\text{input torque}}$	$(\text{rad}/\text{s})/(\text{N}\cdot\text{m})^{0.5}$

Capacity factor parameterization Setting	Capacity Vector Units
Absorbed torque / input speed ²	N·m/(rad/s) ²

Torque ratio vector, zeta — Vector
vector

Vector of turbine torque to impeller speed ratios.

Fluid torque response time constant (set to 0 to disable), tauTC — Time constant
scalar

To account for the delay in torque calculations due to changing input torque, specify the fluid torque transfer time constant, in s.

Interpolation method — Select interpolation method
Linear (default) | Flat | Nearest

Interpolates the torque ratio and capacity factor functions between the discrete relative velocity values.

Clutch

Clutch force equivalent net radius, Reff — Effective radius
scalar

The effective radius, R_{eff} , used with the applied clutch friction force to determine the friction force, in m. The effective radius is defined as:

$$R_{eff} = \frac{2(R_o^3 - R_i^3)}{3(R_o^2 - R_i^2)}$$

The equation uses these variables.

R_o Annular disk outer radius

R_i Annular disk inner radius

Dependencies

To enable the **Clutch** parameters, select Lock-up or External lock-up input for the **Lock-up clutch configuration** parameter.

Static friction coefficient, μ_s – Coefficient

scalar

Dimensionless clutch disc coefficient of static friction.

Dependencies

To enable the **Clutch** parameters, select Lock-up or External lock-up input for the **Lock-up clutch configuration** parameter.

Kinetic friction coefficient, μ_k – Coefficient

scalar

Dimensionless clutch disc coefficient of kinetic friction.

To enable the **Clutch** parameters, select Lock-up or External lock-up input for the **Lock-up clutch configuration** parameter.

Initially lock clutch – Select to initially lock clutch

off (default)

Dependencies

To enable this parameter, select Lock-up or External lock-up input for the **Lock-up clutch configuration** parameter.

Lock-up speed ratio threshold, ϕ_{lu} – Threshold

scalar

Set speed ratio threshold that engages clutch lock-up.

Dependencies

To enable this parameter, select Lock-up for the **Lock-up clutch configuration** parameter.

Minimum lock-up engagement speed, $\omega_{lu\min}$ – Angular velocity

scalar

Set the minimum impeller speed that engages clutch lock-up, in rad/s.

Dependencies

To enable this parameter, select Lock - up for the **Lock-up clutch configuration** parameter.

Lock-up disengagement speed, ω_{lu} — Angular velocity

scalar

Set the minimum impeller speed that disengages clutch lock-up, in rad/s.

Dependencies

To enable this parameter, select Lock - up for the **Lock-up clutch configuration** parameter.

Lock-up clutch force gain, K_{clutch} — Gain

scalar

Open loop clutch lock-up force gain, in N.

Dependencies

To enable this parameter, select Lock - up for the **Lock-up clutch configuration** parameter.

Lock-up clutch time constant, τ_{lu} — Time constant

scalar

Open loop clutch lock-up time constant, in s.

Dependencies

To enable this parameter, select Lock - up for the **Lock-up clutch configuration** parameter.

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using Simulink® Coder™.

See Also

CI Core Engine | SI Core Engine

Introduced in R2017a

Functions

mdf

Access information contained in MDF-file

Syntax

```
mdfObj = mdf(mdfFileName)
```

Description

`mdfObj = mdf(mdfFileName)` identifies a measurement data format (MDF) file and returns an MDF-file object, which you can use to access information and data contained in the file. You can specify a full or partial path to the file.

Note This function is supported only on 64-bit Windows® operating systems.

Examples

Create MDF-File Object for Specified MDF-File

Create an MDF object for a given file, and view the object display.

```
mdfObj = mdf('MDFFile.mf4')
```

MDF with properties:

File Details

```
      Name: 'MDFFile.mf4'  
      Path: 'c:\temp\MDFFile.mf4'  
      Author: 'HOK'  
      Department: 'Research'  
      Project: 'MDF'  
      Subject: 'CAN bus'  
      Comment: 'This file contains CAN messages'  
      Version: '4.10'
```



```

        DataSize: 32100
    InitialTimestamp: 2016-02-27 12:09:02

    Creator Details
        ProgramIdentifier: 'mmddff.04'
        Creator: [1x1 struct]

    File Contents
        Attachment: [1x1 struct]
        ChannelNames: {6x1 cell}
        ChannelGroup: [1x6 struct]

```

Input Arguments

mdfFileName — MDF-file name

char vector | string

MDF-file name, specified as a character vector or string, including the necessary full or relative path.

Example: 'MDFFile.mf4'

Data Types: char | string

Output Arguments

mdfObj — MDF-file

MDF-file object

MDF-file, returned as an MDF-file object. The object provides access to the MDF-file information contained in the following properties.

Property	Description
Name	Name of the MDF-file, including extension
Path	Full path to the MDF-file, including file name
Author	Author who originated the MDF-file
Department	Department that originated the MDF-file
Project	Project that originated the MDF-file

Property	Description
Subject	Subject matter in the MDF-file
Comment	Open comment field from the MDF-file
Version	MDF standard version of the file
DataSize	Total size of the data in the MDF-file, in bytes
InitialTimestamp	Time when file data acquisition began in UTC or local time
ProgramIdentifier	Originating program of the MDF-file
Creator	Structure containing details about creator of the MDF-file, with these fields: VendorName, ToolName, ToolVersion, UserName, and Comment
Attachment	Structure of information about attachments contained within the MDF-file, with these fields: Name, Path, Comment, Type, MIMETYPE, Size, EmbeddedSize, and MD5Checksum
ChannelNames	Cell array of the channel names in each channel group
ChannelGroup	Structure of information about channel groups contained within the MDF-file, with these fields: AcquisitionName, Comment, NumSamples, DataSize, Sorted, and Channel

See Also

Functions

read | saveAttachment

Introduced in R2016b

read

Read channel data from MDF-file

Syntax

```
data = read(mdfObj)
data = read(mdfObj,chanGroupIndex,chanName)
data = read(mdfObj,chanGroupIndex,chanName,startPosition)
data = read(mdfObj,chanGroupIndex,chanName,startPosition,
endPosition)
data = read(mdfObj,chanGroupIndex,chanName,startPosition,
endPosition,'OutputFormat',fmtType)
[data,time] = read(mdfObj,chanGroupIndex,chanName,startPosition,
endPosition,'OutputFormat','Vector')
```

Description

`data = read(mdfObj)` reads all data for all channels from the MDF-file identified by the MDF-file object `mdfObj`, and assigns the output to `data`. If the file data is one channel group, the output is a timetable; multiple channel groups are returned as a cell array of timetables, where the cell array index corresponds to the channel group number.

Note This function is supported only on 64-bit Windows operating systems.

`data = read(mdfObj,chanGroupIndex,chanName)` reads all data for the specified channel from the MDF-file identified by the MDF-file object `mdfObj`.

`data = read(mdfObj,chanGroupIndex,chanName,startPosition)` reads data from the position specified by `startPosition`.

`data = read(mdfObj,chanGroupIndex,chanName,startPosition, endPosition)` reads data for the range specified from `startPosition` to `endPosition`.

`data = read(mdfObj, chanGroupIndex, chanName, startPosition, endPosition, 'OutputFormat', fmtType)` returns data with the specified output format.

`[data, time] = read(mdfObj, chanGroupIndex, chanName, startPosition, endPosition, 'OutputFormat', 'Vector')` returns two vectors of channel data and corresponding timestamps.

Examples

Read All Data from MDF-File

Read all available data from the MDF-file.

```
mdfObj = mdf('MDFFile.mf4');  
data = read(mdfObj);
```

Read All Data from Multiple Channels

Read all available data from the MDF-file for specified channels.

```
mdfObj = mdf('MDFFile.mf4');  
data = read(mdfObj, 1, {'Channel1', 'Channel2'});
```

Read Range of Data from Specified Index Values

Read a range of data from the MDF-file using indexing for `startPosition` and `endPosition` to specify the data range.

```
mdfObj = mdf('MDFFile.mf4');  
data = read(mdfObj, 1, {'Channel1', 'Channel2'}, 1, 10);
```

Read Range of Data from Specified Time Values

Read a range of data from the MDF-file using time values for `startPosition` and `endPosition` to specify the data range.

```
mdfObj = mdf('MDFFile.mf4');
data = read(mdfObj,1,{ 'Channel1' , 'Channel2'},seconds(5.5),seconds(7.3));
```

Read All Data in Vector Format

Read all available data from the MDF-file, returning data and time vectors.

```
mdfObj = mdf('MDFFile.mf4');
[data,time] = read(mdfObj,1,'Channel1','OutputFormat','Vector');
```

Read All Data in Time Series Format

Read all available data from the MDF-file, returning time series data.

```
mdfObj = mdf('MDFFile.mf4');
data = read(mdfObj,1,'Channel1','OutputFormat','TimeSeries');
```

Read Data from Channel List Entry

Read data from a channel identified by the channelList function.

Get list of channels and display their names and group numbers.

```
mdfObj = mdf('File05.mf4');
chlist = channelList(mdfObj);
chlist(:,1:2)
```

4×2 table

ChannelName	ChannelGroupNumber
"Float_32_LE_Offset_64"	2
"Float_64_LE_Master_Offset_0"	2

Read data from the first channel in the list.

```
data = read(mdfObj,chlist{1,2},chlist{1,1});
data(1:5,:)
```

5×1 timetable

Time	Float_32_LE_Offset_64
0 sec	5
0.01 sec	5.1
0.02 sec	5.2
0.03 sec	5.3
0.04 sec	5.4

Input Arguments

mdfObj — MDF-file

MDF-file object

MDF-file, specified as an MDF-file object.

Example: `mdf('MDFFile.mf4')`

chanGroupIndex — Index of the channel group

numeric value

Index of channel group, specified as a numeric value that identifies the channel group from which to read.

Example: 1

Data Types: `single` | `double` | `int8` | `int16` | `int32` | `int64` | `uint8` | `uint16` | `uint32` | `uint64`

chanName — Name of channel

char vector | string

Name of channel, specified as a character vector, string, or array. `chanName` identifies the name of a channel in the channel group. Use a cell array of character vectors or array of string to identify multiple channels.

Example: `'Channel1'`

Data Types: `char` | `string` | `cell`

startPosition — First position of channel data

numeric value | duration

First position of channel data, specified as a numeric value or duration. The `startPosition` option specifies the first position from which to read channel data. Provide a numeric value to specify an index position; use a duration to specify a time position. If only `startPosition` is provided without the `endPosition` option, the data value at that location is returned. When used with `endPosition` to specify a range, the function returns data from the `startPosition` (inclusive) to the `endPosition` (noninclusive).

Example: 1

Data Types: `single` | `double` | `int8` | `int16` | `int32` | `int64` | `uint8` | `uint16` | `uint32` | `uint64` | `duration`

endPosition — Last position of channel data range

numeric value | duration

Last position of channel data range, specified as a numeric value or duration. The `endPosition` option specifies the last position for reading a range of channel data. Provide both the `startPosition` and `endPosition` to specify retrieval of a range of data. The function returns up to but not including `endPosition` when reading a range. Provide a numeric value to specify an index position; use a duration to specify a time position.

Example: 1000

Data Types: `single` | `double` | `int8` | `int16` | `int32` | `int64` | `uint8` | `uint16` | `uint32` | `uint64` | `duration`

fmtType — Format for output data

'Timetable' (default) | 'Vector' | 'TimeSeries'

Format for output data, specified as a character vector or string. This option formats the output according to the following table.

OutputFormat	Description
'Timetable'	Return a timetable from one or more channels into one output variable. This is the only format allowed when reading from multiple channels at the same time. (Default.) Note: The timetable format includes columns for the MDF channels. Because the column titles must be valid MATLAB identifiers, they might not be exactly the same as those values in the MDF object <code>ChannelNames</code> property. The column headers are derived from the property using the function <code>matlab.lang.makeValidName</code> . The original channel names are available in the <code>VariableDescriptions</code> property of the <code>timetable</code> object.
'Vector'	Return a vector of numeric data values, and optionally a vector of time values from one channel. Use one output variable to return only data, or two output variables to return both data and time vectors.
'TimeSeries'	Return a time series of data from one channel.

Example: 'Vector'

Data Types: char | string

Output Arguments

data — Channel data

timetable (default) | double | time series | cell array

Channel data, returned as vector of doubles, a time series, a timetable, or cell array of timetables, according to the 'OutputFormat' option setting and the number of channel groups.

time — Channel data times

double

Channel data times, returned as a vector of double elements. The time vector is returned only when the 'OutputFormat' is set to 'Vector'.

See Also

Functions

mdf | saveAttachment

Topics

"Time Series" (MATLAB)

"Represent Dates and Times in MATLAB" (MATLAB)

"Tables" (MATLAB)

Introduced in R2016b

saveAttachment

Save attachment from MDF-file

Syntax

```
saveAttachment(mdfObj, AttachmentName)  
saveAttachment(mdfObj, AttachmentName, DestFile)
```

Description

`saveAttachment(mdfObj, AttachmentName)` saves the specified attachment from the MDF-file to the current MATLAB working folder. The attachment is saved with its existing name.

Note This function is supported only on 64-bit Windows operating systems.

`saveAttachment(mdfObj, AttachmentName, DestFile)` saves the specified attachment from the MDF-file to the given destination. You can specify relative or absolute paths to place the attachment in a specific folder.

Examples

Save Attachment with Original Name

Save an MDF-file attachment with its original name in the current folder.

```
mdfObj = mdf('MDFFile.mf4');  
saveAttachment(mdfObj, 'AttachmentName.ext')
```

Save Attachment with New Name

Save an MDF-file attachment with a new name in the current folder.

```
mdfObj = mdf('MDFFile.mf4');  
saveAttachment(mdfObj, 'AttachmentName.ext', 'MyFile.ext')
```

Save Attachment in Parent Folder

Save an MDF-file attachment in a folder specified with a relative path name, in this case in the parent of the current folder.

```
mdfObj = mdf('MDFFile.mf4');  
saveAttachment(mdfObj, 'AttachmentName.ext', '..\MyFile.ext')
```

Save Attachment in Specified Folder

This example saves an MDF-file attachment using an absolute path name.

```
mdfObj = mdf('MDFFile.mf4');  
saveAttachment(mdfObj, 'AttachmentName.ext', 'C:\MyDir\MyFile.ext')
```

Input Arguments

mdfObj — MDF-file

MDF-file object

MDF-file, specified as an MDF-file object.

Example: `mdf('MDFFile.mf4')`

AttachmentName — MDF-file attachment name

char vector | string

MDF-file attachment name, specified as a character vector or string. The name of the attachment is available in the Name field of the MDF-file object Attachment property.

Example: `'file1.dbc'`

Data Types: char | string

DestFile – Destination file name for the saved attachment

existing attachment name (default) | char vector | string

Destination file name for the saved attachment, specified as a character vector or string. The specified destination can include an absolute or relative path, otherwise the attachment is saved in the current folder.

Example: 'MyFile.ext'

Data Types: char | string

See Also

Functions

mdf | read

Introduced in R2016b

mdfDatastore

Datastore for collection of MDF-files

Description

Use the MDF datastore object to access data from a collection of MDF-files.

Creation

Syntax

```
mdfds = mdfDatastore(location)
mdfds = mdfDatastore(__, 'Name1', Value1, 'Name2', Value2, ...)
```

Description

`mdfds = mdfDatastore(location)` creates an `MDFDatastore` based on an MDF-file or a collection of files in the folder specified by `location`. All files in the folder with extensions `.mdf`, `.dat`, or `.mf4` are included.

`mdfds = mdfDatastore(__, 'Name1', Value1, 'Name2', Value2, ...)` specifies function options and properties of `mdfds` using optional name-value pairs.

Note This function is supported only on 64-bit Windows operating systems.

Input Arguments

location — Location of MDF datastore files

character vector | cell array | `DsFileSet` object

Location of MDF datastore files, specified as a character vector, cell array of character vectors, or `matlab.io.datastore.DsFileSet` object identifying either files or folders.

The path can be relative or absolute, and can contain the wildcard character *. If location specifies a folder, by default the datastore includes all files in that folder with the extensions .mdf, .dat, or .mf4.

Example: 'CANape.MF4'

Data Types: char | cell | DsFileSet

Name-Value Pair Arguments

Specify optional comma-separated pairs of Name,Value arguments to set file information or object “Properties” on page 8-16. Allowed options are IncludeSubfolders, FileExtensions, and the properties ReadSize, SelectedChannelGroupNumber, and SelectedChannelNames.

Example: 'SelectedChannelNames', 'Counter_B4'

IncludeSubfolders — Include files in subfolders

false (default) | true

Include files in subfolders, specified as a logical. Specify true to include files in each folder and recursively in subfolders.

Example: 'IncludeSubfolders', true

Data Types: logical

FileExtensions — Custom extensions for filenames to include in MDF datastore

{'.mdf', '.dat', '.mf4'} (default) | char | cell

Custom extensions for filenames to include in the MDF datastore, specified as a character vector or cell array of character vectors. By default, the supported extensions include .mdf, .dat, and .mf4. If your files have custom or nonstandard extensions, use this Name-Value setting to include files with those extensions.

Example: 'FileExtensions', {'myformat1', 'myformat2'}

Data Types: char | cell

Properties

ChannelGroups — All channel groups present in first MDF-file (read-only)

table

All channel groups present in first MDF-file, returned as a table.

Data Types: table

Channels — All channels present in first MDF-file (read-only)

table

All channels present in first MDF-file, returned as a table.

Those channels targeted for reading must have the same name and belong to the same channel group in each file of the MDF datastore

Data Types: table

Files — Files included in datastore

char | string | cell

Files included in the datastore, specified as a character vector, string, or cell array.

Example: {'file1.mf4', 'file2.mf4'}

Data Types: char | string | cell

ReadSize — Size of data returned by read

'file' (default) | numeric | duration

Size of data returned by the read function, specified as 'file', a numeric value, or a duration. A character vector value of 'file' causes the entire file to be read; a numeric double value specifies the number of records to read; and a duration value specifies a time range to read.

If you later change the ReadSize property value type, the datastore resets.

Example: 50

Data Types: double | char | duration

SelectedChannelGroupNumber — Channel group to read

numeric scalar

Channel group to read, specified as a numeric scalar value.

Example: 1

Data Types: single | double | int8 | int16 | int32 | int64 | uint8 | uint16 | uint32 | uint64

SelectedChannelNames — Names of channels to read

char | string | cell

Names of channels to read, specified as a character vector, string, or cell array.

Those channels targeted for reading must have the same name and belong to the same channel group in each file of the MDF datastore.

Example: 'Counter_B4'

Data Types: char | string | cell

Object Functions

read	Read data in MDF datastore
readall	Read all data in MDF datastore
preview	Subset of data from MDF datastore
reset	Reset MDF datastore to initial state
hasdata	Determine if data is available to read from MDF datastore
partition	Partition MDF datastore
numpartitions	Number of partitions for MDF datastore
combine (MATLAB)	Combine data from multiple datastores
transform (MATLAB)	Transform datastore

Examples

Create an MDF Datastore

Create an MDF datastore from the sample file `CANape.MF4`, and read it into a timetable.

```
mdfds = mdfDatastore(fullfile(matlabroot, 'examples', 'vnt', 'CANape.MF4'));  
while hasdata(mdfds)  
    m = read(mdfds);  
end
```

See Also

Introduced in R2017b

hasdata (MDFDatastore)

Determine if data is available to read from MDF datastore

Syntax

```
tf = hasdata(mdfds)
```

Description

`tf = hasdata(mdfds)` returns logical 1 (`true`) if there is data available to read from the MDF datastore specified by `mdfds`. Otherwise, it returns logical 0 (`false`).

Examples

Check MDF Datastore for Readable Data

Use `hasdata` in a loop to control read iterations.

```
mdfds = mdfDatastore(fullfile(matlabroot, 'examples', 'vnt', 'CANape.MF4'));  
while hasdata(mdfds)  
    m = read(mdfds);  
end
```

Input Arguments

mdfds — MDF datastore

MDF datastore object

MDF datastore, specified as an MDF datastore object.

Example: `mdfds = mdfDatastore('CANape.MF4')`

Output Arguments

tf — Indicator of data to read

1 | 0

Indicator of data to read, returned as a logical 1 (true) or 0 (false).

See Also

Functions

mdfDatastore | read | readall | reset

Introduced in R2017b

numpartitions (MDFDatastore)

Number of partitions for MDF datastore

Syntax

```
N = numpartitions(mdfds)
N = numpartitions(mdfds,pool)
```

Description

`N = numpartitions(mdfds)` returns the recommended number of partitions for the MDF datastore `mdfds`. Use the result as an input to the `partition` function.

`N = numpartitions(mdfds,pool)` returns a reasonable number of partitions to parallelize `mdfds` over the parallel pool, `pool`, based on the number of files in the datastore and the number of workers in the pool.

Examples

Find Recommended Number of Partitions for MDF Datastore

Determine the number of partitions you should use for your MDF datastore.

```
mdfds = mdfDatastore(fullfile(matlabroot,'examples','vnt','CANape.MF4'));
N = numpartitions(mdfds);
```

Input Arguments

mdfds — MDF datastore

MDF datastore object

MDF datastore, specified as an MDF datastore object.

Example: `mdfds = mdfDatastore('CANape.MF4')`

pool — Parallel pool

parallel pool object

Parallel pool specified as a parallel pool object.

Example: `gcp`

Output Arguments

N — Number of partitions

double

Number of partitions, returned as a double. This number is the calculated recommendation for the number of partitions for your MDF datastore. Use this when partitioning your datastore with the `partition` function.

See Also

Functions

`mdfDatastore` | `partition` | `read` | `reset`

Introduced in R2017b

partition (MDFDatastore)

Partition MDF datastore

Syntax

```
subds = partition(mdfds,N,index)
subds = partition(mdfds,'Files',index)
subds = partition(mdfds,'Files',filename)
```

Description

`subds = partition(mdfds,N,index)` partitions the MDF datastore `mdfds` into the number of parts specified by `N`, and returns the partition corresponding to the index `index`.

`subds = partition(mdfds,'Files',index)` partitions the MDF datastore by files and returns the partition corresponding to the file of index `index` in the `Files` property.

`subds = partition(mdfds,'Files',filename)` partitions the datastore by files and returns the partition corresponding to the specified `filename`.

Examples

Partition an MDF Datastore into Default Parts

Partition an MDF datastore from the sample file `CANape.MF4`, and return the first part.

```
mdfds = mdfDatastore(fullfile(matlabroot,'examples','vnt','CANape.MF4'));
N = numpartitions(mdfds);
subds1 = partition(mdfds,N,1);
```

Partition an MDF Datastore by Its Files

Partition an MDF datastore according to its files, and return partitions by index and file name.

```
cd c:\temp
mdfds = mdfDatastore({'CANape1.MF4', 'CANape2.MF4', 'CANape3.MF4'});
mdfds.Files

ans =
    3x1 cell array
    'c:\temp\CANape1.MF4'
    'c:\temp\CANape2.MF4'
    'c:\temp\CANape3.MF4'

subds2 = partition(mdfds, 'files', 2);
subds3 = partition(mdfds, 'files', 'c:\temp\CANape3.MF4');
```

Input Arguments

mdfds — MDF datastore

MDF datastore object

MDF datastore, specified as an MDF datastore object.

Example: `mdfds = mdfDatastore('CANape.MF4')`

N — Number of partitions

positive integer

Number of partitions, specified as a double of positive integer value. Use the `numpartitions` function for the recommended number or partitions.

Example: `numpartitions(mdfds)`

Data Types: double

index — Index

positive integer

Index, specified as a double of positive integer value. When using the 'files' partition scheme, this value corresponds to the index of the MDF datastore object `Files` property.

Example: 1

Data Types: double

filename — File name

character vector

File name, specified as a character vector. The argument can specify a relative or absolute path.

Example: 'CANape.MF4'

Data Types: char

Output Arguments

subds — MDF datastore partition

MDF datastore object

MDF datastore partition, returned as an MDF datastore object. This output datastore is of the same type as the input datastore `mdfds`.

See Also

Functions

`mdfDatastore` | `numpartitions` | `read` | `reset`

Introduced in R2017b

preview (MDFDatastore)

Subset of data from MDF datastore

Syntax

```
data = preview(mdfds)
```

Description

`data = preview(mdfds)` returns a subset of data from MDF datastore `mdfds` without changing the current position in the datastore.

Examples

Examine Preview of MDF Datastore

```
mdfds = mdfDatastore(fullfile(matlabroot,'examples','vnt','CANape.MF4'));  
data = preview(mdfds)
```

```
data2 =
```

```
10×74 timetable
```

Time	Counter_B4	Counter_B5	Counter_B6	Counter_B7	PWM
0.00082554 sec	0	0	1	0	100
0.010826 sec	0	0	1	0	100
0.020826 sec	0	0	1	0	100
0.030826 sec	0	0	1	0	100
0.040826 sec	0	0	1	0	100
0.050826 sec	0	0	1	0	100


```
0.060826 sec  0      0      1      0      100
0.070826 sec  0      0      1      0      100
```

Input Arguments

mdfds — MDF datastore

MDF datastore object

MDF datastore, specified as an MDF datastore object.

Example: `mdfds = mdfDatastore('CANape.MF4')`

Output Arguments

data — Subset of data

timetable

Subset of data, returned as a timetable of MDF records.

See Also

Functions

`hasdata` | `mdfDatastore` | `read`

Introduced in R2017b

read (MDFDatastore)

Read data in MDF datastore

Syntax

```
data = read(mdfds)
[data,info] = read(mdfds)
```

Description

`data = read(mdfds)` returns data from the MDF datastore `mdfds` into the timetable `data`.

The `read` function returns a subset of data from the datastore. The size of the subset is determined by the `ReadSize` property of the datastore object. On the first call, `read` starts reading from the beginning of the datastore, and subsequent calls continue reading from the endpoint of the previous call. Use `reset` to read from the beginning again.

`[data,info] = read(mdfds)` also returns to the output argument `info` information, including metadata, about the extracted data.

Examples

Read Datastore by Files

Read data from an MDF datastore one file at a time.

```
mdfds = mdfDatastore({'CANape1.MF4','CANape2.MF4','CANape3.MF4'});
mdfds.ReadSize = 'file';
data = read(mdfds);
```

Read the second file and view information about the data.

```
[data2,info2] = read(mdfds);
info2
```

```
struct with fields:
    Filename: 'CANape2.MF4'
    FileSize: 57592
    MDFFileProperties: [1x1 struct]
```

Input Arguments

mdfds — MDF datastore

MDF datastore object

MDF datastore, specified as an MDF datastore object.

Example: `mdfds = mdfDatastore('CANape.MF4')`

Output Arguments

data — Output data

timetable

Output data, returned as a timetable of MDF records.

info — Information about data

structure array

Information about data, returned as a structure array with the following fields:

```
Filename
FileSize
MDFFileProperties
```

See Also

Functions

`hasdata` | `mdfDatastore` | `preview` | `readall` | `reset`

Introduced in R2017b

readall (MDFDatastore)

Read all data in MDF datastore

Syntax

```
data = readall(mdfds)
```

Description

`data = readall(mdfds)` reads all the data in the datastore specified by `mdfds` and returns it to timetable `data`.

After the `readall` function returns all the data, it resets `mdfds` to point to the beginning of the datastore.

If all the data in the datastore does not fit in memory, then `readall` returns an error.

Examples

Read All Data in Datastore

Read all the data from a multiple file MDF datastore into a timetable.

```
mdfds = mdfDatastore({'CANape1.MF4', 'CANape2.MF4', 'CANape3.MF4'});  
data = readall(mdfds);
```

Input Arguments

mdfds — MDF datastore

MDF datastore object

MDF datastore, specified as an MDF datastore object.

Example: `mdfds = mdfDatastore('CANape.MF4')`

Output Arguments

data — Output data

timetable

Output data, returned as a timetable of MDF records.

See Also

Functions

hasdata | mdfDatastore | preview | read | reset

Introduced in R2017b

reset (MDFDatastore)

Reset MDF datastore to initial state

Syntax

```
reset(mdfds)
```

Description

`reset(mdfds)` resets the MDF datastore specified by `mdfds` to its initial read state, where no data has been read from it. Resetting allows you to reread from the same datastore.

Examples

Reset MDF Datastore

Reset an MDF datastore so that you can read from it again.

```
mdfds = mdfDatastore(fullfile(matlabroot,'examples','vnt','CANape.MF4'));  
data = read(mdfds);  
reset(mdfds);  
data = read(mdfds);
```

Input Arguments

mdfds — MDF datastore

MDF datastore object

MDF datastore, specified as an MDF datastore object.

Example: `mdfds = mdfDatastore('CANape.MF4')`

See Also

Functions

hasdata | mdfDatastore | read

Introduced in R2017b

channelList

Information on available MDF groups and channels

Syntax

```
chans = channelList(mdfobj)
channelList(mdfObj,chanName)
channelList(mdfObj,chanName,'ExactMatch',true)
```

Description

`chans = channelList(mdfobj)` returns a table of information about channels and groups in the specified MDF-file.

`channelList(mdfObj,chanName)` searches the MDF-file to generate a list of channels matching the specified channel name. The search by default is case-insensitive and identifies partial matches. A table is returned containing information about the matched channels and the containing channel groups. If no matches are found, an empty table is returned.

`channelList(mdfObj,chanName,'ExactMatch',true)` searches the channels for an exact match, including case sensitivity. This is useful if a channel name is a substring of other channel names.

Note This function is supported only on 64-bit Windows operating systems.

Examples

View Available MDF Channels

View all available MDF channels.


```
mdfObj = mdf('File01.mf4');
chans = channelList(mdfObj)
```

```
chans =
```

```
4×9 table
```

ChannelName	ChannelGroupNumber	ChannelGroupNumSamples
"Float_32_LE_Offset_64"	2	10000
"Float_64_LE_Master_Offset_0"	2	10000
"Sigend_Int16_LE_Offset_32"	1	10000
"Unsigend_UInt32_LE_Master_Offset_0"	1	10000

View Specific MDF Channels

Filter on channel names.

```
chans = channelList(mdfObj, 'Float')
```

```
chans =
```

```
2×9 table
```

ChannelName	ChannelGroupNumber	ChannelGroupNumSamples
"Float_32_LE_Offset_64"	2	10000
"Float_64_LE_Master_Offset_0"	2	10000

```
chans = channelList(mdfObj, 'Float', 'ExactMatch', true)
```

```
chans =
```

```
0×9 empty table
```

Input Arguments

mdfObj — MDF-file

MDF-file object

MDF-file, specified as an MDF-file object.

Example: mdf('File01.mf4')

chanName — Name of channel

char vector | string

Name of channel, specified as a character vector or string. By default, case-insensitive and partial matches are returned.

Example: 'Channell1'

Data Types: char | string

Output Arguments

chans — Information on available MDF channels

table

Information on available MDF channels, returned as a table. To access specific elements, you can index into the table.

See Also

Functions

mdf

Introduced in R2018b

mdfVisualize

View channel data from MDF-file

Syntax

```
mdfVisualize(mdfFileName)
```

Description

`mdfVisualize(mdfFileName)` opens an MDF-file in the Simulation Data Inspector for viewing and interacting with channel data. `mdfFileName` is the name of the MDF-file, specified as a full or partial path.

Note This function is supported only on 64-bit Windows operating systems.

Examples

View MDF Data

View the data from a specified MDF-file in the Simulation Data Inspector.

```
mdfVisualize('File01.mf4')
```

Input Arguments

mdfFileName — MDF-file name

char vector | string

MDF-file name, specified as a character vector or string, including the necessary full or relative path.

Example: 'MDFFile.mf4'

Data Types: char | string

See Also

Functions

mdf | read

Topics

“View and Analyze Simulation Results” (Simulink)

Introduced in R2019a

autoblks.pwr.PlantInfo

Analyze powertrain power and energy

Description

To assess powertrain efficiencies, use the `autoblks.pwr.PlantInfo` object to evaluate and report power and energy for component-level blocks and system-level reference applications.

Creation

Syntax

```
VehPwrAnalysis = autoblks.pwr.PlantInfo(SysName)
```

Description

MATLAB creates an `autoblks.pwr.PlantInfo` object for the system that you specify. `VehPwrAnalysis = autoblks.pwr.PlantInfo(SysName)` where `SysName` is the name of the model or subsystem that you want to analyze.

Input Arguments

SysName — Model name

character vector

Model that you want to analyze.

Example: `'SiCiPtReferenceApplication'`

Data Types: `char`

Properties

AvgEff — Average efficiency

double

This property is read-only.

Average efficiency, dimensionless.

Eff — Time series of efficiency

time series

This property is read-only.

Efficiency, η , dimensionless. To calculate the efficiency, the Eff property implements this equation.

$$\eta = \frac{\sum P_{output} - \sum P_{store}(P_{store} > 0)}{\sum P_{input} - \sum P_{store}(P_{store} < 0)}$$

The equation uses these variables.

P_{store}	Stored power
P_{input}, P_{output}	Input and output power logged by Power Accounting Bus Creator block

EnergyBalanceAbsTol — Energy balance absolute tolerance

0.0100 (default)

Energy balance absolute tolerance, $EnergyBal_{AbsTol}$.

To determine if the system conserves energy, the `isEnergyBalanced` method checks the energy conservation at each time step.

$$E_{Err} = \sum E_{trans} + \sum E_{nottrans} - \sum E_{store}$$

Blocks change the input energy plus released stored energy to output energy plus stored energy. For example, a mapped engine block uses fuel (not transferred energy) to produce

torque (transferred energy) and heat loss (not transferred energy). The total modified energy represents the average between the input fuel energy and the energy exiting the system (torque and heat loss). To calculate the total energy modified by the block, the method uses the integral of the average transferred, not transferred, and stored power.

$$E_{total} = \frac{1}{2} \int_0^{t_{end}} \left(\sum |P_{trans}| + \sum |P_{nottrans}| + \sum |P_{store}| \right) dt \Bigg|_{t=t_{end}}$$

If the energy conservation error is within an error tolerance, the method returns true. Specifically, if either condition is met, the method returns true.

Condition		
$\frac{ E_{Err} }{E_{total}} < EnrgyBal_{RelTol}$	or	$E_{total} < EnrgyBal_{AbsTol}$

The equations use these variables.

E_{Err}	Energy conservation error
E_{total}	Total energy modified by block
$EnrgyBal_{RelTol}, EnrgyBal_{AbsTol}$	Energy balance relative and absolute tolerance, respectively
P_{trans}, E_{trans}	Transferred power and energy, respectively
$P_{nottrans}, E_{nottrans}$	Not transferred power and energy, respectively
P_{store}, E_{store}	Stored power and energy, respectively
P_{input}, P_{output}	Input and output power logged by Power Accounting Bus Creator block

Data Types: double

EnrgyBalanceRelTol – Energy balance relative tolerance

0.0100 (default)

Energy balance relative tolerance, $EnrgyBal_{RelTol}$.

To determine if the system conserves energy, the `isEnrgyBalanced` method checks the energy conservation at each time step.

$$E_{Err} = \sum E_{trans} + \sum E_{nottrans} - \sum E_{store}$$

Blocks change the input energy plus released stored energy to output energy plus stored energy. For example, a mapped engine block uses fuel (not transferred energy) to produce torque (transferred energy) and heat loss (not transferred energy). The total modified energy represents the average between the input fuel energy and the energy exiting the system (torque and heat loss). To calculate the total energy modified by the block, the method uses the integral of the average transferred, not transferred, and stored power.

$$E_{total} = \frac{1}{2} \left(\int_0^{t_{end}} \left(\sum |P_{trans}| + \sum |P_{nottrans}| + \sum |P_{store}| \right) dt \right) \Bigg|_{t = t_{end}}$$

If the energy conservation error is within an error tolerance, the method returns true. Specifically, if either condition is met, the method returns true.

Condition		
$\frac{ E_{Err} }{E_{total}} < EnrgyBal_{RelTol}$	or	$E_{total} < EnrgyBal_{AbsTol}$

The equations use these variables.

E_{Err}	Energy conservation error
E_{total}	Total energy modified by block
$EnrgyBal_{RelTol}, EnrgyBal_{AbsTol}$	Energy balance relative and absolute tolerance, respectively
P_{trans}, E_{trans}	Transferred power and energy, respectively
$P_{nottrans}, E_{nottrans}$	Not transferred power and energy, respectively
P_{store}, E_{store}	Stored power and energy, respectively
P_{input}, P_{output}	Input and output power logged by Power Accounting Bus Creator block

Data Types: double

EnrgyUnits — Energy units

MJ (default) | J

Energy units.

Example: `VehPwrAnalysis.EnrgyUnits = 'MJ';`

Data Types: char

PwrUnits — Power units

kW (default) | W

Power units.

Example: `VehPwrAnalysis.PwrUnits = 'kW';`

Data Types: char

Object Methods

<code>addLoggedData</code>	Add logged data
<code>dispSignalSummary</code>	Display powertrain subsystem energy analysis
<code>dispSysSummary</code>	Display powertrain system efficiency
<code>findChildSys</code>	Powertrain subsystem energy analysis
<code>histogramEff</code>	Display powertrain subsystem efficiency histogram
<code>isEnrgyBalanced</code>	Logical flag for energy conservation
<code>loggingOff</code>	Turn signal logging off
<code>loggingOn</code>	Turn signal logging on
<code>run</code>	Run powertrain energy and power analysis
<code>sdiSummary</code>	Display Simulation Data Inspector plots of powertrain energy and power
<code>xlsSysSummary</code>	Write powertrain energy analysis to spreadsheet

Examples**Create PlantInfo Object for Powertrain Energy Analysis**

Analyze the power and energy in the conventional vehicle reference application. To create a `PlantInfo` object, see “step 2” on page 8-44.

- 1 Open the conventional vehicle reference application. By default, the application has a mapped 1.5 L spark-ignition (SI) engine and a dual clutch transmission. Project files open in a writable location.

```
autoblkConVehStart
```

- 2 Set the system name to `SiCiPtReferenceApplication`.

Create the `autoblks.pwr.PlantInfo` object.

Use the `PwrUnits` and `EngyUnits` properties to specify the units.

```
SysName = 'SiCiPtReferenceApplication';  
VehPwrAnalysis = autoblks.pwr.PlantInfo(SysName);  
VehPwrAnalysis.PwrUnits = 'kW';  
VehPwrAnalysis.EngyUnits = 'MJ';
```

- 3 Use the `run` method to turn on logging, run simulation, and add logged data to the object.

```
run(VehPwrAnalysis);
```

- 4 Use the `dispSysSummary` method to display the results.

```
dispSysSummary(VehPwrAnalysis);
```

- 5 Use the `xlsSysSummary` method to write the results to a spreadsheet.

```
xlsSysSummary(VehPwrAnalysis, 'EnergySummary.xlsx');
```

- 6 Use the `findChildSys` method to retrieve the `autoblks.pwr.PlantInfo` object for the Engine subsystem.

To display the results, use the `dispSignalSummary` method.

Use the `histogramEff` method to display a histogram of the time spent at each engine plant efficiency.

```
EngSysName = 'SiCiPtReferenceApplication/Passenger Car/Engine';  
EngPwrAnalysis = findChildSys(VehPwrAnalysis, EngSysName);  
dispSignalSummary(EngPwrAnalysis);  
histogramEff(EngPwrAnalysis);
```

- 7 Use the `findChildSys` method to retrieve the `autoblks.pwr.PlantInfo` object for the Drivetrain subsystem.

To display the results, use the `dispSignalSummary` method.

```
DrvtrnSysName = 'SiCiPtReferenceApplication/Passenger Car/Drivetrain';  
DrvtrnPwrAnalysis = findChildSys(VehPwrAnalysis, DrvtrnSysName);  
dispSignalSummary(DrvtrnPwrAnalysis);
```

- 8 To plot the results, use the `sdiSummary` method.

```
sdiSummary(VehPwrAnalysis, {EngSysName, DrvtrnSysName})
```

See Also

Power Accounting Bus Creator

Topics

“Conventional Vehicle Powertrain Efficiency”

“Analyze Power and Energy”

Introduced in R2019a

dispSignalSummary

Display powertrain subsystem energy analysis

Syntax

```
dispSignalSummary(SubSystem)
```

Description

The `dispSignalSummary(SubSystem)` method displays the subsystem energy for the `autoblks.pwr.PlantInfo` object. Use the `autoblks.pwr.PlantInfo` object to evaluate and report power and energy for component-level blocks and system-level models.

After you use the `findChildSys` method to retrieve the `autoblks.pwr.PlantInfo` object for the subsystem that you want to analyze, use the `dispSignalSummary(SubSystem)` method to display the results.

Examples

Use `dispSignalSummary` Method to Display Subsystem Results

Analyze the power and energy in the conventional vehicle reference application. To use the `dispSignalSummary` method to display the engine and drivetrain subsystem results, see “step 6” on page 8-47 and “step 7” on page 8-47.

- 1 Open the conventional vehicle reference application. By default, the application has a mapped 1.5 L spark-ignition (SI) engine and a dual clutch transmission. Project files open in a writable location.

```
autoblkConVehStart
```

- 2 Set the system name to `SiCiPtReferenceApplication`.

Create the `autoblks.pwr.PlantInfo` object.

Use the `PwrUnits` and `EnrgyUnits` properties to specify the units.

```
SysName = 'SiCiPtReferenceApplication';
VehPwrAnalysis = autoblks.pwr.PlantInfo(SysName);
VehPwrAnalysis.PwrUnits = 'kW';
VehPwrAnalysis.EnrgyUnits = 'MJ';
```

- 3 Use the `run` method to turn on logging, run simulation, and add logged data to the object.

```
run(VehPwrAnalysis);
```

- 4 Use the `dispSysSummary` method to display the results.

```
dispSysSummary(VehPwrAnalysis);
```

- 5 Use the `xlsSysSummary` method to write the results to a spreadsheet.

```
xlsSysSummary(VehPwrAnalysis, 'EnergySummary.xlsx');
```

- 6 Use the `findChildSys` method to retrieve the `autoblks.pwr.PlantInfo` object for the Engine subsystem.

To display the results, use the `dispSignalSummary` method.

Use the `histogramEff` method to display a histogram of the time spent at each engine plant efficiency.

```
EngSysName = 'SiCiPtReferenceApplication/Passenger Car/Engine';
EngPwrAnalysis = findChildSys(VehPwrAnalysis, EngSysName);
dispSignalSummary(EngPwrAnalysis);
histogramEff(EngPwrAnalysis);
```

- 7 Use the `findChildSys` method to retrieve the `autoblks.pwr.PlantInfo` object for the Drivetrain subsystem.

To display the results, use the `dispSignalSummary` method.

```
DrvtrnSysName = 'SiCiPtReferenceApplication/Passenger Car/Drivetrain';
DrvtrnPwrAnalysis = findChildSys(VehPwrAnalysis, DrvtrnSysName);
dispSignalSummary(DrvtrnPwrAnalysis);
```

- 8 To plot the results, use the `sdiSummary` method.

```
sdiSummary(VehPwrAnalysis, {EngSysName, DrvtrnSysName})
```

Input Arguments

Subsystem — Subsystem name

character vector

Subsystem that you want to analyze.

Example: 'SiCiPtReferenceApplication/Passenger Car/Engine'

Example: 'SiCiPtReferenceApplication/Passenger Car/Drivetrain'

Data Types: char

See Also

autoblks.pwr.PlantInfo

Topics

"Analyze Power and Energy"

Introduced in R2019a

dispSysSummary

Display powertrain system efficiency

Syntax

```
dispSysSummary(PlantInfoObj)
```

Description

After you use the `run` method to analyze the powertrain power and energy, use the `dispSysSummary(PlantInfoObj)` method to display the system efficiency for the `autoblks.pwr.PlantInfo` object.

Use instances of the `autoblks.pwr.PlantInfo` object to evaluate and report power and energy for component-level blocks and system-level models.

Examples

Use dispSysSummary Method to Display Energy Analysis Results

Analyze the power and energy in the conventional vehicle reference application. To use the `dispSysSummary` method to display the results, see “step 4” on page 8-50.

- 1 Open the conventional vehicle reference application. By default, the application has a mapped 1.5 L spark-ignition (SI) engine and a dual clutch transmission. Project files open in a writable location.

```
autoblkConVehStart
```

- 2 Set the system name to `SiCiPtReferenceApplication`.

Create the `autoblks.pwr.PlantInfo` object.

Use the `PwrUnits` and `EngyUnits` properties to specify the units.

```
SysName = 'SiCiPtReferenceApplication';
VehPwrAnalysis = autoblks.pwr.PlantInfo(SysName);
VehPwrAnalysis.PwrUnits = 'kW';
VehPwrAnalysis.EnergyUnits = 'MJ';
```

- 3 Use the `run` method to turn on logging, run simulation, and add logged data to the object.

```
run(VehPwrAnalysis);
```

- 4 Use the `dispSysSummary` method to display the results.

```
dispSysSummary(VehPwrAnalysis);
```

- 5 Use the `xlsSysSummary` method to write the results to a spreadsheet.

```
xlsSysSummary(VehPwrAnalysis, 'EnergySummary.xlsx');
```

- 6 Use the `findChildSys` method to retrieve the `autoblks.pwr.PlantInfo` object for the Engine subsystem.

To display the results, use the `dispSignalSummary` method.

Use the `histogramEff` method to display a histogram of the time spent at each engine plant efficiency.

```
EngSysName = 'SiCiPtReferenceApplication/Passenger Car/Engine';
EngPwrAnalysis = findChildSys(VehPwrAnalysis, EngSysName);
dispSignalSummary(EngPwrAnalysis);
histogramEff(EngPwrAnalysis);
```

- 7 Use the `findChildSys` method to retrieve the `autoblks.pwr.PlantInfo` object for the Drivetrain subsystem.

To display the results, use the `dispSignalSummary` method.

```
DrvtrnSysName = 'SiCiPtReferenceApplication/Passenger Car/Drivetrain';
DrvtrnPwrAnalysis = findChildSys(VehPwrAnalysis, DrvtrnSysName);
dispSignalSummary(DrvtrnPwrAnalysis);
```

- 8 To plot the results, use the `sdiSummary` method.

```
sdiSummary(VehPwrAnalysis, {EngSysName, DrvtrnSysName})
```

Input Arguments

PlantInfoObj — Instance of **PlantInfo** object

`autoblks.pwr.PlantInfo` object

`autoblks.pwr.PlantInfo` object for the system that you want to analyze.

See Also

autoblks.pwr.PlantInfo

Topics

“Analyze Power and Energy”

Introduced in R2019a

findChildSys

Powertrain subsystem energy analysis

Syntax

```
findChildSys(PlantInfoObj,SubSystem)
```

Description

The `findChildSys(PlantInfoObj,SubSystem)` method finds and returns an `autoblks.pwr.PlantInfo` object for the subsystem. Use the `autoblks.pwr.PlantInfo` object to evaluate and report power and energy for component-level blocks and system-level reference applications.

After you use the `run` method to analyze the powertrain power and energy, use the `findChildSys` method to evaluate specific subsystems.

Examples

Use findChildSys Method to Analyze Subsystems

Analyze the power and energy in the conventional vehicle reference application. To use the `findChildSys` method to analyze the engine and drivetrain subsystems, see “step 6” on page 8-53 and “step 7” on page 8-53.

- 1 Open the conventional vehicle reference application. By default, the application has a mapped 1.5 L spark-ignition (SI) engine and a dual clutch transmission. Project files open in a writable location.

```
autoblkConVehStart
```

- 2 Set the system name to `SiCiPtReferenceApplication`.

Create the `autoblks.pwr.PlantInfo` object.

Use the `PwrUnits` and `EnrgyUnits` properties to specify the units.

```
SysName = 'SiCiPtReferenceApplication';
VehPwrAnalysis = autoblks.pwr.PlantInfo(SysName);
VehPwrAnalysis.PwrUnits = 'kW';
VehPwrAnalysis.EnrgyUnits = 'MJ';
```

- 3 Use the `run` method to turn on logging, run simulation, and add logged data to the object.

```
run(VehPwrAnalysis);
```

- 4 Use the `dispSysSummary` method to display the results.

```
dispSysSummary(VehPwrAnalysis);
```

- 5 Use the `xlsSysSummary` method to write the results to a spreadsheet.

```
xlsSysSummary(VehPwrAnalysis, 'EnergySummary.xlsx');
```

- 6 Use the `findChildSys` method to retrieve the `autoblks.pwr.PlantInfo` object for the Engine subsystem.

To display the results, use the `dispSignalSummary` method.

Use the `histogramEff` method to display a histogram of the time spent at each engine plant efficiency.

```
EngSysName = 'SiCiPtReferenceApplication/Passenger Car/Engine';
EngPwrAnalysis = findChildSys(VehPwrAnalysis, EngSysName);
dispSignalSummary(EngPwrAnalysis);
histogramEff(EngPwrAnalysis);
```

- 7 Use the `findChildSys` method to retrieve the `autoblks.pwr.PlantInfo` object for the Drivetrain subsystem.

To display the results, use the `dispSignalSummary` method.

```
DrvtrnSysName = 'SiCiPtReferenceApplication/Passenger Car/Drivetrain';
DrvtrnPwrAnalysis = findChildSys(VehPwrAnalysis, DrvtrnSysName);
dispSignalSummary(DrvtrnPwrAnalysis);
```

- 8 To plot the results, use the `sdiSummary` method.

```
sdiSummary(VehPwrAnalysis, {EngSysName, DrvtrnSysName})
```

Input Arguments

PlantInfoObj — Instance of `PlantInfo` object

`autoblks.pwr.PlantInfo` object

`autoblks.pwr.PlantInfo` object for the system that you want to analyze.

SubSystem — Subsystem name

character vector

Subsystem that you want to analyze.

Example: 'SiCiPtReferenceApplication/Passenger Car/Engine'

Example: 'SiCiPtReferenceApplication/Passenger Car/Drivetrain'

Data Types: char

See Also

autoblks.pwr.PlantInfo

Topics

“Analyze Power and Energy”

Introduced in R2019a

histogramEff

Display powertrain subsystem efficiency histogram

Syntax

```
histogramEff(SubSystem)
```

Description

The `histogramEff(SubSystem)` method displays a histogram of the powertrain subsystem efficiency for the `autoblks.pwr.PlantInfo` object. Use instances of the `autoblks.pwr.PlantInfo` object to evaluate and report power and energy for component-level blocks and system-level models.

After you use the `findChildSys` method to analyze the powertrain subsystem power and energy, use the `histogramEff` method to display a histogram of the efficiency.

Examples

Use histogramEff Method to Display Results

Analyze the power and energy in the conventional vehicle reference application. To use the `histogramEff` method to display a histogram of the time spent at each engine plant efficiency, see “step 6” on page 8-56.

- 1 Open the conventional vehicle reference application. By default, the application has a mapped 1.5 L spark-ignition (SI) engine and a dual clutch transmission. Project files open in a writable location.

```
autoblkConVehStart
```

- 2 Set the system name to `SiCiPtReferenceApplication`.

Create the `autoblks.pwr.PlantInfo` object.

Use the `PwrUnits` and `EnrgyUnits` properties to specify the units.

```
SysName = 'SiCiPtReferenceApplication';  
VehPwrAnalysis = autoblks.pwr.PlantInfo(SysName);  
VehPwrAnalysis.PwrUnits = 'kW';  
VehPwrAnalysis.EnrgyUnits = 'MJ';
```

- 3 Use the `run` method to turn on logging, run simulation, and add logged data to the object.

```
run(VehPwrAnalysis);
```

- 4 Use the `dispSysSummary` method to display the results.

```
dispSysSummary(VehPwrAnalysis);
```

- 5 Use the `xlsSysSummary` method to write the results to a spreadsheet.

```
xlsSysSummary(VehPwrAnalysis, 'EnergySummary.xlsx');
```

- 6 Use the `findChildSys` method to retrieve the `autoblks.pwr.PlantInfo` object for the Engine subsystem.

To display the results, use the `dispSignalSummary` method.

Use the `histogramEff` method to display a histogram of the time spent at each engine plant efficiency.

```
EngSysName = 'SiCiPtReferenceApplication/Passenger Car/Engine';  
EngPwrAnalysis = findChildSys(VehPwrAnalysis, EngSysName);  
dispSignalSummary(EngPwrAnalysis);  
histogramEff(EngPwrAnalysis);
```

- 7 Use the `findChildSys` method to retrieve the `autoblks.pwr.PlantInfo` object for the Drivetrain subsystem.

To display the results, use the `dispSignalSummary` method.

```
DrvtrnSysName = 'SiCiPtReferenceApplication/Passenger Car/Drivetrain';  
DrvtrnPwrAnalysis = findChildSys(VehPwrAnalysis, DrvtrnSysName);  
dispSignalSummary(DrvtrnPwrAnalysis);
```

- 8 To plot the results, use the `sdiSummary` method.

```
sdiSummary(VehPwrAnalysis, {EngSysName, DrvtrnSysName})
```

Input Arguments

SubSystem — Subsystem name

character vector

Subsystem that you want to analyze.

Example: 'SiCiPtReferenceApplication/Passenger Car/Engine'

Example: 'SiCiPtReferenceApplication/Passenger Car/Drivetrain'

Data Types: char

See Also

autoblks.pwr.PlantInfo

Topics

"Analyze Power and Energy"

Introduced in R2019a

run

Run powertrain energy and power analysis

Syntax

```
run(PlantInfoObj)
```

Description

Use the `run(PlantInfoObj)` method to turn signal logging on, run a powertrain energy and power analysis, and add data to the `autoblks.pwr.PlantInfo` object. Use instances of the `autoblks.pwr.PlantInfo` object to evaluate and report power and energy for component-level blocks and system-level models.

Examples

Use run Method for Powertrain Energy Analysis

Analyze the power and energy in the conventional vehicle reference application. To use the `run` method for the analysis, see “step 3” on page 8-59.

- 1 Open the conventional vehicle reference application. By default, the application has a mapped 1.5 L spark-ignition (SI) engine and a dual clutch transmission. Project files open in a writable location.

```
autoblkConVehStart
```

- 2 Set the system name to `SiCiPtReferenceApplication`.

Create the `autoblks.pwr.PlantInfo` object.

Use the `PwrUnits` and `EngryUnits` properties to specify the units.

```
SysName = 'SiCiPtReferenceApplication';  
VehPwrAnalysis = autoblks.pwr.PlantInfo(SysName);
```


- ```
VehPwrAnalysis.PwrUnits = 'kW';
VehPwrAnalysis.EnergyUnits = 'MJ';
```
- 3 Use the `run` method to turn on logging, run simulation, and add logged data to the object.

```
run(VehPwrAnalysis);
```
  - 4 Use the `dispSysSummary` method to display the results.

```
dispSysSummary(VehPwrAnalysis);
```
  - 5 Use the `xlsSysSummary` method to write the results to a spreadsheet.

```
xlsSysSummary(VehPwrAnalysis, 'EnergySummary.xlsx');
```
  - 6 Use the `findChildSys` method to retrieve the `autoblks.pwr.PlantInfo` object for the Engine subsystem.

To display the results, use the `dispSignalSummary` method.

Use the `histogramEff` method to display a histogram of the time spent at each engine plant efficiency.

- ```
EngSysName = 'SiCiPtReferenceApplication/Passenger Car/Engine';
EngPwrAnalysis = findChildSys(VehPwrAnalysis, EngSysName);
dispSignalSummary(EngPwrAnalysis);
histogramEff(EngPwrAnalysis);
```
- 7 Use the `findChildSys` method to retrieve the `autoblks.pwr.PlantInfo` object for the Drivetrain subsystem.

To display the results, use the `dispSignalSummary` method.

- ```
DrvtrnSysName = 'SiCiPtReferenceApplication/Passenger Car/Drivetrain';
DrvtrnPwrAnalysis = findChildSys(VehPwrAnalysis, DrvtrnSysName);
dispSignalSummary(DrvtrnPwrAnalysis);
```
- 8 To plot the results, use the `sdiSummary` method.

```
sdiSummary(VehPwrAnalysis, {EngSysName, DrvtrnSysName})
```

## Input Arguments

### **PlantInfoObj** — Instance of **PlantInfo** object

`autoblks.pwr.PlantInfo` object

`autoblks.pwr.PlantInfo` object for the system that you want to analyze.

## **See Also**

autoblks.pwr.PlantInfo

## **Topics**

“Analyze Power and Energy”

**Introduced in R2019a**

# sdiSummary

Display Simulation Data Inspector plots of powertrain energy and power

## Syntax

```
sdiSummary(PlantInfoObj,blocknames)
```

## Description

The `sdiSummary(PlantInfoObj,blocknames)` method plots the powertrain energy and power analysis results for the `autoblks.pwr.PlantInfo` object.

Use instances of the `autoblks.pwr.PlantInfo` object to evaluate and report power and energy for component-level blocks and system-level models.

## Examples

### Use sdiSummary Method to Plot Results

Analyze the power and energy in the conventional vehicle reference application. To use the `sdiSummary` method to display the Simulation Data Inspector plots of the engine and drivetrain results, see “step 8” on page 8-62.

- 1 Open the conventional vehicle reference application. By default, the application has a mapped 1.5 L spark-ignition (SI) engine and a dual clutch transmission. Project files open in a writable location.

```
autoblkConVehStart
```

- 2 Set the system name to `SiCiPtReferenceApplication`.

Create the `autoblks.pwr.PlantInfo` object.

Use the `PwrUnits` and `EnrgyUnits` properties to specify the units.

```
SysName = 'SiCiPtReferenceApplication';
VehPwrAnalysis = autoblks.pwr.PlantInfo(SysName);
VehPwrAnalysis.PwrUnits = 'kW';
VehPwrAnalysis.EnergyUnits = 'MJ';
```

- 3 Use the run method to turn on logging, run simulation, and add logged data to the object.

```
run(VehPwrAnalysis);
```

- 4 Use the dispSysSummary method to display the results.

```
dispSysSummary(VehPwrAnalysis);
```

- 5 Use the xlsSysSummary method to write the results to a spreadsheet.

```
xlsSysSummary(VehPwrAnalysis, 'EnergySummary.xlsx');
```

- 6 Use the findChildSys method to retrieve the autoblks.pwr.PlantInfo object for the Engine subsystem.

To display the results, use the dispSignalSummary method.

Use the histogramEff method to display a histogram of the time spent at each engine plant efficiency.

```
EngSysName = 'SiCiPtReferenceApplication/Passenger Car/Engine';
EngPwrAnalysis = findChildSys(VehPwrAnalysis, EngSysName);
dispSignalSummary(EngPwrAnalysis);
histogramEff(EngPwrAnalysis);
```

- 7 Use the findChildSys method to retrieve the autoblks.pwr.PlantInfo object for the Drivetrain subsystem.

To display the results, use the dispSignalSummary method.

```
DrvtrnSysName = 'SiCiPtReferenceApplication/Passenger Car/Drivetrain';
DrvtrnPwrAnalysis = findChildSys(VehPwrAnalysis, DrvtrnSysName);
dispSignalSummary(DrvtrnPwrAnalysis);
```

- 8 To plot the results, use the sdiSummary method.

```
sdiSummary(VehPwrAnalysis, {EngSysName, DrvtrnSysName})
```

## Input Arguments

### PlantInfoObj — Instance of PlantInfo object

autoblks.pwr.PlantInfo object

autoblks.pwr.PlantInfo object for the system that you want to analyze.

**blocknames — Block or name**

character vector | string | 'all'

Block or subsystem names, specified as a character vector or a string, separated by a comma.

Example: 'SiCiPtReferenceApplication/Passenger Car/Engine'

Example: 'SiCiPtReferenceApplication/Passenger Car/Engine', 'SiCiPtReferenceApplication/Passenger Car/Drivetrain'

Data Types: char | string

**See Also**

autoblks.pwr.PlantInfo

**Topics**

“Analyze Power and Energy”  
Simulation Data Inspector

**Introduced in R2019a**

## xlsSysSummary

Write powertrain energy analysis to spreadsheet

### Syntax

```
xlsSysSummary(PlantInfoObj, filename, sheet)
```

### Description

The `xlsSysSummary(PlantInfoObj, filename, sheet)` method exports the system energy and efficiency for the `autoblks.pwr.PlantInfo` object. Use the `autoblks.pwr.PlantInfo` object to evaluate and report power and energy for component-level blocks and system-level models.

After you use the `run` method to analyze the powertrain power and energy, use the `xlsSysSummary` method to write the results to a spreadsheet.

### Examples

#### Use xlsSysSummary Method to Write Results to Spreadsheet

Analyze the power and energy in the conventional vehicle reference application. To use the `xlsSysSummary` method to write the results to a spreadsheet, see “step 5” on page 8-65.

- 1 Open the conventional vehicle reference application. By default, the application has a mapped 1.5 L spark-ignition (SI) engine and a dual clutch transmission. Project files open in a writable location.

```
autoblkConVehStart
```

- 2 Set the system name to `SiCiPtReferenceApplication`.

Create the `autoblks.pwr.PlantInfo` object.

Use the `PwrUnits` and `EnrgyUnits` properties to specify the units.

```
SysName = 'SiCiPtReferenceApplication';
VehPwrAnalysis = autoblks.pwr.PlantInfo(SysName);
VehPwrAnalysis.PwrUnits = 'kW';
VehPwrAnalysis.EnrgyUnits = 'MJ';
```

- 3 Use the `run` method to turn on logging, run simulation, and add logged data to the object.

```
run(VehPwrAnalysis);
```

- 4 Use the `dispSysSummary` method to display the results.

```
dispSysSummary(VehPwrAnalysis);
```

- 5 Use the `xlsSysSummary` method to write the results to a spreadsheet.

```
xlsSysSummary(VehPwrAnalysis, 'EnergySummary.xlsx');
```

- 6 Use the `findChildSys` method to retrieve the `autoblks.pwr.PlantInfo` object for the Engine subsystem.

To display the results, use the `dispSignalSummary` method.

Use the `histogramEff` method to display a histogram of the time spent at each engine plant efficiency.

```
EngSysName = 'SiCiPtReferenceApplication/Passenger Car/Engine';
EngPwrAnalysis = findChildSys(VehPwrAnalysis, EngSysName);
dispSignalSummary(EngPwrAnalysis);
histogramEff(EngPwrAnalysis);
```

- 7 Use the `findChildSys` method to retrieve the `autoblks.pwr.PlantInfo` object for the Drivetrain subsystem.

To display the results, use the `dispSignalSummary` method.

```
DrvtrnSysName = 'SiCiPtReferenceApplication/Passenger Car/Drivetrain';
DrvtrnPwrAnalysis = findChildSys(VehPwrAnalysis, DrvtrnSysName);
dispSignalSummary(DrvtrnPwrAnalysis);
```

- 8 To plot the results, use the `sdiSummary` method.

```
sdiSummary(VehPwrAnalysis, {EngSysName, DrvtrnSysName})
```

## Input Arguments

### **PlantInfoObj** — Instance of `PlantInfo` object

`autoblks.pwr.PlantInfo` object

`autoblks.pwr.PlantInfo` object for the system that you want to analyze.

**filename — File name**

character vector | string

File name, specified as a character vector or a string.

If `filename` does not exist, `xlsSysSummary` creates a file, determining the format based on the specified extension. To create a file compatible with Excel® 97-2003 software, specify an extension of `.xls`. To create files in Excel 2007 formats, specify an extension of `.xlsx`, `.xlsb`, or `.xlsm`. If you do not specify an extension, `xlsSysSummary` uses the default, `.xls`.

Example: 'myFile.xlsx' or "myFile.xlsx"

Example: 'C:\myFolder\myFile.xlsx'

Example: 'myFile.csv'

Data Types: char | string

**sheet — Worksheet name**

character vector | string | positive integer

Worksheet name, specified as one of the following:

- Character vector or string that contains the worksheet name. The name cannot contain a colon (:). To determine the names of the sheets in a spreadsheet file, use `xlsinfo`.
- Positive integer that indicates the worksheet index.

If `sheet` does not exist, `xlswrite` adds a sheet at the end of the worksheet collection. If `sheet` is an index larger than the number of worksheets, `xlswrite` appends empty sheets until the number of worksheets in the workbook equals `sheet`. In either case, `xlswrite` generates a warning indicating that it has added a worksheet.

Data Types: char | string | single | double | int8 | int16 | int32 | int64 | uint8 | uint16 | uint32 | uint64

**See Also**`autoblks.pwr.PlantInfo` | `xlswrite`**Topics**

"Analyze Power and Energy"



**Introduced in R2019a**

## addLoggedData

Add logged data

### Syntax

```
addLoggedData(PlantInfoObj, logout)
```

### Description

`addLoggedData(PlantInfoObj, logout)` adds logged signal data to the `autoblks.pwr.PlantInfo` object specified by the `Simulink.SimulationData.Dataset` signal data object.

If the data logged for the system does not conserve energy, the method returns a warning.

If the `Simulink.SimulationData.Dataset` object does not include data for the Power Accounting Bus Creator blocks in the system, the method returns an error.

### Input Arguments

**PlantInfoObj** — Instance of `PlantInfo` object

`autoblks.pwr.PlantInfo` object

`autoblks.pwr.PlantInfo` object for the system that you want to analyze.

**logout** — Dataset object for signals

`Simulink.SimulationData.Dataset` object

`Simulink.SimulationData.Dataset` object for signals that you want to log.

### See Also

Power Accounting Bus Creator | `autoblks.pwr.PlantInfo`

## **Topics**

“Analyze Power and Energy”

**Introduced in R2019a**

## isEnergyBalanced

Logical flag for energy conservation

### Syntax

```
flag=isEnergyBalanced(PlantInfoObj)
```

### Description

`flag=isEnergyBalanced(PlantInfoObj)` returns logical 1 (true) if the system conserves energy. Otherwise, it returns logical 0 (false).

### Input Arguments

**PlantInfoObj** — Instance of PlantInfo object

`autoblks.pwr.PlantInfo` object

`autoblks.pwr.PlantInfo` object for the system that you want to analyze.

### Output Arguments

**flag** — Indicator of energy conservation

1 (true) | 0 (false)

Indicator of energy conservation, returned as a logical 1 (true) or 0 (false).

Data Types: logical

### Algorithms

To determine if the system conserves energy, the `isEnergyBalanced` method checks the energy conservation at each time step.

$$E_{Err} = \sum E_{trans} + \sum E_{nottrans} - \sum E_{store}$$

Blocks change the input energy plus released stored energy to output energy plus stored energy. For example, a mapped engine block uses fuel (not transferred energy) to produce torque (transferred energy) and heat loss (not transferred energy). The total modified energy represents the average between the input fuel energy and the energy exiting the system (torque and heat loss). To calculate the total energy modified by the block, the method uses the integral of the average transferred, not transferred, and stored power.

$$E_{total} = \frac{1}{2} \left( \int_0^{t_{end}} \left( \sum |P_{trans}| + \sum |P_{nottrans}| + \sum |P_{store}| \right) dt \right) \Bigg|_{t=t_{end}}$$

If the energy conservation error is within an error tolerance, the method returns true. Specifically, if either condition is met, the method returns true.

| Condition                                         |    |                                 |
|---------------------------------------------------|----|---------------------------------|
| $\frac{ E_{Err} }{E_{total}} < EnrgyBal_{RelTol}$ | or | $E_{total} < EnrgyBal_{AbsTol}$ |

The equations use these variables.

|                                        |                                                                     |
|----------------------------------------|---------------------------------------------------------------------|
| $E_{Err}$                              | Energy conservation error                                           |
| $E_{total}$                            | Total energy modified by block                                      |
| $EnrgyBal_{RelTol}, EnrgyBal_{AbsTol}$ | Energy balance relative and absolute tolerance, respectively        |
| $P_{trans}, E_{trans}$                 | Transferred power and energy, respectively                          |
| $P_{nottrans}, E_{nottrans}$           | Not transferred power and energy, respectively                      |
| $P_{store}, E_{store}$                 | Stored power and energy, respectively                               |
| $P_{input}, P_{output}$                | Input and output power logged by Power Accounting Bus Creator block |

## **See Also**

Power Accounting Bus Creator | `autoblks.pwr.PlantInfo`

## **Topics**

“Analyze Power and Energy”

**Introduced in R2019a**

# loggingOff

Turn signal logging off

## Syntax

```
loggingOff(PlantInfoObj)
```

## Description

loggingOff(PlantInfoObj) turns signal logging off for all Power Accounting Bus Creator blocks in the `autoblks.pwr.PlantInfo` system object.

## Input Arguments

**PlantInfoObj** — Instance of **PlantInfo** object

`autoblks.pwr.PlantInfo` object

`autoblks.pwr.PlantInfo` object for the system that you want to analyze.

## See Also

Power Accounting Bus Creator | `autoblks.pwr.PlantInfo`

## Topics

“Analyze Power and Energy”

**Introduced in R2019a**

## loggingOn

Turn signal logging on

### Syntax

```
loggingOn(PlantInfoObj)
```

### Description

`loggingOn(PlantInfoObj)` turns signal logging on for all Power Accounting Bus Creator blocks in the `autoblks.pwr.PlantInfo` system object.

### Input Arguments

**PlantInfoObj** — Instance of **PlantInfo** object

`autoblks.pwr.PlantInfo` object

`autoblks.pwr.PlantInfo` object for the system that you want to analyze.

### See Also

Power Accounting Bus Creator | `autoblks.pwr.PlantInfo`

### Topics

“Analyze Power and Energy”

**Introduced in R2019a**