

SCXI-1338 CURRENT INPUT, HIGH-VOLTAGE TERMINAL BLOCK

This guide describes how to install and use the SCXI-1338 terminal block with your SCXI-1120, 1120D, or SCXI-1126 module.

Introduction

The SCXI-1338 current input terminal block is a shielded board with screw terminals that connects to the SCXI-1120, SCXI-1120D, and SCXI-1126 modules. The SCXI-1338 has eight 249 Ω precision resistors to convert current to voltage when measuring 0–20 mA and 4–20 mA process current sources.

The terminal block has 18 screw terminals for easy connection. Eight pairs of screw terminals connect to the eight differential inputs of the SCXI modules. One pair of terminals connects to the module's chassis ground pins.

What You Need to Get Started

To set up and use your SCXI-1338 terminal block, you will need the following items:

- SCXI-1338 current input terminal block
- SCXI-1338 Current Input, High-Voltage Terminal Block Installation Guide*
- SCXI chassis
- SCXI-1120, SCXI-1120D, or SCXI-1126 module
- No. 1 and No. 2 Phillips-head screwdrivers
- 1/8 in. flathead screwdriver

- Long-nose pliers
- Wire cutter
- Wire insulation stripper

Safety Information



Caution

DO NOT OPERATE THE DEVICE IN AN EXPLOSIVE ATMOSPHERE OR WHERE THERE MAY BE FLAMMABLE GASES OR FUMES.

KEEP AWAY FROM LIVE CIRCUITS. Do not remove equipment covers or shields unless you are trained to do so. If signal wires are connected to the device, hazardous voltages may exist even when the equipment is turned off. To avoid a shock hazard, do not perform procedures involving cover or shield removal unless you are qualified to do so and disconnect all field power prior to removing covers or shields.

Equipment described in this document must be used in an Installation Category II environment per IEC 664. This category requires local level supply mains-connected installation.

DO NOT OPERATE DAMAGED EQUIPMENT. The safety protection features built into this device can become impaired if the device becomes damaged in any way. If the device is damaged, turn the device off and do not use until service-trained personnel can check its safety. If necessary, return the device to National Instruments for service and repair to ensure that its safety is not compromised.

Do not operate this equipment in a manner that contradicts the information specified in this document. Misuse of this equipment could result in a shock hazard.

Terminals are for use only with equipment that has no accessible live parts.

DO NOT SUBSTITUTE PARTS OR MODIFY EQUIPMENT. Because of the danger of introducing additional hazards, do not install unauthorized parts or modify the device. Return the device to National Instruments for service and repair to ensure that its safety features are not compromised.

When using the device with high common-mode voltages, you must insulate your signal wires for the highest input voltage. National Instruments is NOT LIABLE FOR ANY DAMAGES OR INJURIES resulting from inadequate signal wire insulation. Use only 26–14 AWG wire with a voltage rating of 300 V and 60° C for measuring 250 Vrms.

When connecting or disconnecting signal lines to the SCXI terminal block screw terminals, make sure the lines are powered off. Potential differences between the lines and the SCXI ground create a shock hazard while you connect the lines.

Connections, including power signals to ground and vice versa, that exceed any of the maximum signal ratings on the SCXI device can create a shock or fire hazard or can damage any or all of the boards connected to the SCXI chassis, the host computer, and the SCXI device. National Instruments is NOT LIABLE FOR ANY DAMAGES OR INJURIES resulting from incorrect signal connections.

If high voltages (≥ 30 Vrms and 42.4 V peak or 60 VDC) are present, YOU MUST CONNECT A SAFETY EARTH GROUND WIRE TO THE TERMINAL BLOCK SAFETY GROUND SOLDER LUG, shown in Figure 1. This complies with safety agency requirements and protects against electric shock when the terminal block is not connected to the chassis. To connect the safety earth ground to the safety ground solder lug, run an earth ground wire in the cable from the signal source to the terminal block. National Instruments is not liable for any damages or injuries resulting from inadequate safety earth ground connections.

Do not loosen or re-orient the safety ground solder lug hardware when connecting the safety ground wire; to do so reduces the safety isolation between the high voltage and safety ground.

Current-Loop Resistors



Note

Refer to the Safety Information and Signal Connection sections before removing equipment covers or connecting or disconnecting any signal wires.

The SCXI-1338 is used with the SCXI-1120, SCXI-1120D, and SCXI-1126 for measuring 0–20 mA and 4–20 mA sources. The SCXI-1338 contains a precision 249 Ω , 0.1%, 10 ppm, 1/4 W resistor across each channel to convert current to voltage. The SCXI module then measures the voltage and the data acquisition board acquires the voltage.

To convert the voltage read by the SCXI module to the actual current being measured, use the following formula:

$$\text{current} = \text{measured voltage} / 249$$

The voltage measured for a 4–20 mA current source will be in the range of 0.996–4.98 VDC.

The SCXI-1338 can measure both current sources and voltage sources. When measuring voltage signals, you must remove the current-loop resistor for that input channel. You can identify the resistor for a particular channel by its reference designator. The reference designator matches the

channel the resistor is across. For example, input channel 0 has resistor R0 across it. Input channel 7 has resistor R7 across it. See Figure 2 for parts location. Figure 1 shows the SCXI-1338 signal connections.

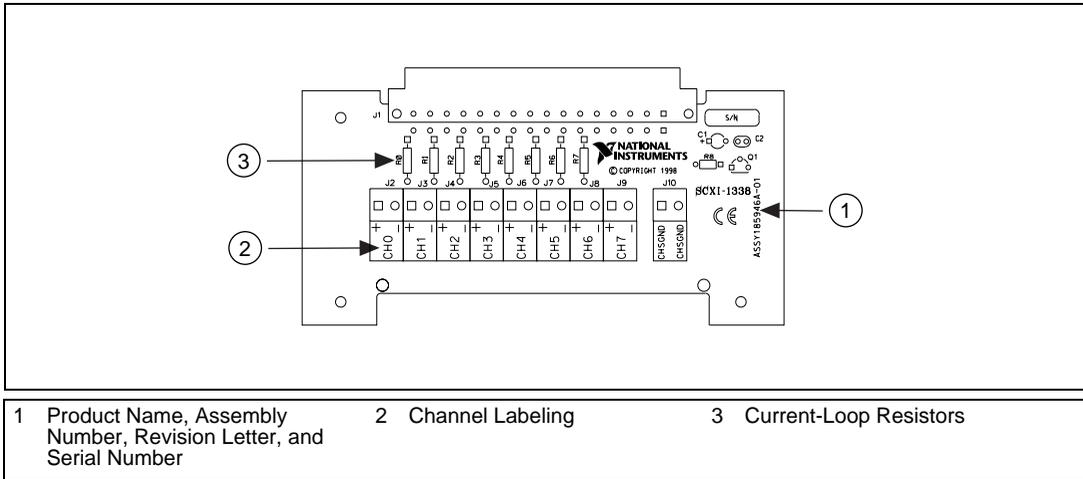


Figure 1. SCXI-1338 Signal Connections

Signal Connection



Note

Refer to the Safety Information section before removing equipment covers or connecting or disconnecting any signal wires.

When connecting your signals to the SCXI-1338, follow the labeling on the SCXI-1338 for the appropriate module, as indicated in Figure 1.

To connect the signal to the terminal block, perform the following steps, referring to Figures 2 and 1 as necessary:

1. Unscrew the top cover screws and remove the cover.
2. Loosen the strain-relief screws and remove the strain-relief bar.
3. Run the signal wires through the strain-relief opening. You can add insulation or padding if necessary.
4. Prepare your signal wire by stripping the insulation no more than 7 mm.
5. Connect the wires to the screw terminals by inserting the stripped end of the wire fully into the terminal. No bare wire should extend past the screw terminal. Exposed wire increases the risk of shorting and causing a failure.
6. Tighten the screws to a torque of 5–7 in.-lb.

7. Connect safety earth ground to the safety ground solder lug. Refer to the *Safety Information* section for connection information.
8. Reinstall the strain-relief bar and tighten the strain-relief screws.
9. Reinstall the top cover and tighten the top cover screws.
10. Connect the terminal block to the module front connector as explained in the *Installation* section later in this guide.

Figure 2 shows the SCXI-1338 terminal block parts locator diagram.

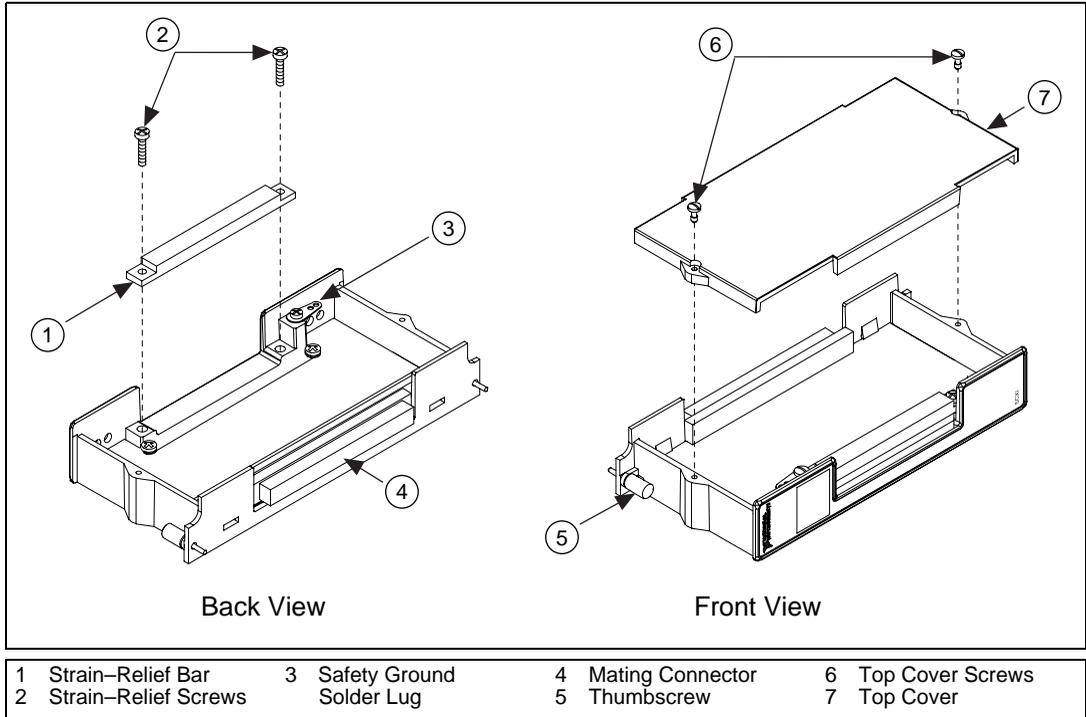


Figure 2. SCXI-1338 Parts Locator Diagram

Installation

To connect the terminal block to the SCXI module front connector, perform the following steps:

1. Connect the module front connector to its mating connector on the terminal block.
2. Tighten the top and bottom thumbscrews on the back of the terminal block to hold it securely in place.

Cleaning the Terminal Block

Clean the terminal block by brushing off light dust with a soft, nonmetallic brush. Remove other contaminants with deionized water and a stiff nonmetallic brush. The unit must be completely dry and free from contaminants before returning to service.

Specifications

All specifications are typical at 25° C unless otherwise specified.

Maximum voltages

Channel to channel	250 Vrms
Channel to earth.....	250 Vrms
Input voltage (+) to (–)	10 VDC or 10 Vrms

Maximum input current20 mA

Current-loop resistor

Resistance	249 Ω
Tolerance	0.1%
Temperature coefficient.....	± 10 ppm
Wattage.....	1/4 W

Environmental

Altitude	<2,000 meters
Pollution degree.....	2
Operating temperature	0° to 50° C
Storage temperature.....	–20° to 70° C
Relative humidity	5% to 90% noncondensing



322204A-01

Nov98